VIN:								Ι.				
MODEL:					OWN							
VARIANT:					NAN	IE & RESS	:					
COLOUR:					1,155							
ENGINE NO.:					CON	ITACT	NO.					
KEY NO.:					E-ma	ail ID:						
INVOICE DATE:					SELLING DEALER NAME & CODE							
ODOMETER READING				KM								
REGISTRATION NO.:												
BATTERY MAKE:						LER WRO	ΟM					
BATTERY NO.:					ADD	RESS	8					
BATTERY BATCH						ITACT MP)	NO.					
TYRE	MAKE	BA	тсн (CODE								
Front Right						ITACT						
Front Left					FOR SERVICE APPOINTMENT & SUPPORT		.					
Rear Right												
Rear Left												
Spare				_								

For any assistance with regard to our product, please contact General Manager/Works Manager at any of our Dealer or Authorised Service Station. For additional enquiry you may contact our Regional Office or Service Department. The addresses and phone numbers are given in Service Network section of this Manual / Service Network booklet.

MAINTENANCE SERVICE RECORDS

DATE OF SERVICE	KIND OF SERVICE	MILEAGE (KM)	DESCRIPTION OF JOB	NAME OF SERVICING DEALER/ MASS	JOB CARD NO.	MECHANICS SIGNATURE

F: FREE SERVICE, P:.... PAID SERVICE, W:.... WARRANTY JOB, A:.... ACCIDENTAL JOB

1ST. FREE INSPECTION COUPON (CUSTOMER'S COPY)

WHICHEVER COMES FIRST (DEALER'S COPY)
te, T: Tighten, JOB MARK: √: Checked OK, A: Adjust, C: Clean, R: Replace or Chance, L: Lubricate, T: Tighten,

O: Rotate, I: Inspect and correct or replace if necessary.							ease see overleat for s	spec	aı ın	stru	ictic	ons
1.	ENGINE	JOB	6.	FRONT AND REAR SUSPENSION	JOB		Model Code*					
	 Engine Coolant (Level, Leakage) Engine oil (Level, Leakage) 			 Struts/shock absorbers (Oil leakage) Rear spring (Damage) 		\vdash	Chassis No. :					
	Cooling System hoses & connections (Leakage, Damage)		7.	STEERING 1. Steering wheel (Play)			Engine No. :					
2.	FUEL			All Rods & Arms (Loose, Damage, Wear) Power Steering System (Operation)			Mileage					
	Fuel filter, Fuel tank cap, Fuel lines and connections (Leakage)		4. Steering gear box (Inspect) 5. Tilt steering (Operation)				Date of Delivery					
	2. Fuel Filter - water Draining (Diesel)			ELECTRICAL		L	Date of Inspection					
3.	CLUTCH AND TRANSMISSION			Battery electrolyte (Level, Leakage)			Registration No.					
	 Clutch pedal / push rod (Play) Clutch slipping (Dragging, Damage) 			 Lighting system/horn (Operation) Wiper (Operation) 	— i		Service Dealer/Mass Code					
	Transaxle Oil (Level, Leakage) Gear Shifter Cable (operation)		9.	BODY	i		Customer Name					
	5. Clutch fluid (Level, Leakage) (Diesel)			All Latches, Hinges & Locks/Central Locking (Operation)								

4. BRAKE

- 1. Brake fluid (Level, Leakage)
- 2. Brake pedal (Pedal to carpet clearance)
- 3. Parking brake lever (Play)
- 4. Brake hoses & pipes (Leakage, Damage)

5. WHEEL

- 1. Tyres (Air pressure, Abnormal wear, damage)
- 2. Wheels (Inspect)

10. HEATING AND AIR CONDITIONING

- Drive belt (Tension)
- 2. Check functioning of Recirculating flap
- 3. Check all Hose Joints
- 4. A/C filter element (Inspect)

11. ROADTEST

- 1. Operation of Brakes, clutch, Gear shifting
- and Speedometer
- 2. Body & Chassis noise

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

* MODEL CODES: ALTO-AOD308/308C/310/310C, CELERIO-AVH310/310C/208D, CIAZ-AVB414/413D, EECO-MGA412/412C, ERTIGA-AVI414/413D, GRAND VITARA XL7-JA627, GYPSY KING-MG413W, NEW DZIRE-AZI412PN/413DN, NEW SWIFT-AZI412/413D, NEW WAGONR-A1J310/310C/310L, OMNI-MT308, RITZ-A5E412/413D

Mechanic's Signature Service Manager's Signature Customer's Signature

Address (Please write complete address)

Telephone No.

(1.000 KM or 1 MONTH) | 1ST. FREE INSPECTION COUPON

(1,000 KM or 1 MONTH)

Stamp of Selling dealer	
(Code & Full Address)	
For Servicing Dealer/Mass	

1.0 : Please fill up Model codes correctly.

2.0 : Please fill up Complete chasis No.

3.0 : Please fill up customer details i.e. Address and Telephone No. legibly and correctly for the latest owner.

For Selling Dealer

1.0 : Please send all Free Service Coupon to us once in a month after settlement of free service charges.

Service Division
Maruti Suzuki India Limited

Model Code*							
Chassis No. :							
Engine No. :							
Mileage							Ī
Date of Delivery							Ī
Date of Inspectio	n						
Registration No.							
Service Dealer/Ma	ass (Code					I
Customer Name							I
Address (Please	write	com	plete	addr	ess)		Ī
							Ī
Telephone No.							
Telephone No.	<u></u>						

Service Manager's Signature

Customer's Signature

2ND. FREE INSPECTION COUPON (CUSTOMER'S COPY) (5,000 KM or 6 MONTHS) 2ND. FREE INSPECTION CO	OPUN
WHICHEVER COMES FIRST \(\partial \text{(DEALER'S COPY)}\) (5,000 KM or 6.	AONTHS)
JOB MARK: √: Checked OK, A: Adjust, C: Clean, R: Replace or Change, L: Lubricate, T: Tighten, O:Rotate, I: Inspect and correct or replace If necessary. Please see overleaf for special instructi	ŕ
1. ENGINE JOB 6. FRONT AND REAR SUSPENSION JOB	
1. Engine Coolant (Level, Leakage) 1. Suspension strut/shock absorber(Oil Leakage) Model Code *	
2. Engine Oil (Level, Leakage) 2. Suspension arms, Knuckle, Rear spring Chassis No.:	
3. Cooling System hoses & connections (Damage, Loose)	$\perp \perp \perp$
(Leakage, Damage) 3. All Nuts & Bolts (Tighten) Engine No. :	
4. Exhaust System (Noise, Leakage) 7. STEERING	+
5. PCV System (Hoses, Connections, Valve)(Petrol) 1. Steering wheel (Play) Mileage	
2. FUEL 2. All Rods & Arms (Loose, Damage, Wear)	$\overline{}$
1 Air clooper (Cloop) (Petrol) 3. Power Steering System (Operation) Date of Delivery	
4. Steering gear box (inspect)	
2. Fuel filter, Fuel tank cap, Fuel lines and 5. Tilt steering (Operation) connections (Leakage) Date of Inspection	\perp
3. Fuel filter water draining (Diesel) 8. ELECTRICAL Registration No.	
Battery electrolyte (Level, Leakage)	$\overline{}$
3. CLUTCH AND TRANSMISSION 2. Lighting system/Horn (Operation) Service Dealer/Mass Code	
1. Clutch pedal (Play) (Petrol) 3. Wiring Harness Connections (Looseness)	
2. Clutch slipping (Dragging, Damage) 3. Transaxle Oil (Level Leakage) 4. Wiper (Operation)	
4. Convenition achieve achieve (Operation)	
9. BODY	
1. All Latories, Tilliges & Locks/Certifal Locking	
(Operation/Lubrication)	
2 All Chassis nuts & bolts (Inspect) 3. Seat belt (Operation)	
4. BRAKE 4. Seat latch, lever & knob (Operation)	
1. Brake fluid (Level, Leakage)	
2 Brake pedal (Pedal to carpet clearance) 10. HEATING AND AIR CONDITIONING	
3. Parking brake lever (Play) 1. Drive belt (Tension, Damage)	
4. Brake Disc & Pads (Inspect) 2. Check functioning of Recirculating flap	
5. Brake hoses & pipes (Leakage, Damage) 3. Check all Hose Joints Mechanic's Signature	
Check Compressor Mounting Bolts Clean Condenser with low pressure water	
Sarvica Managar's Signatura	
6. A/C filter element (Inspect)	
5. WHEEL 11. ROAD TEST 1. Tyres (Air pressure, Abnormal wear, Rotation) 1. Operation of Brakes, clutch Gear Customer's Signature	
2. Wheels (Inspect) shifting and Speedometer "MODEL CODES: ALTO-AOD308/308C/310/310C, CELERIO-AVH	10/2100/2000
3. Front/Rear Wheel Bearings (Loose Damage) 2. Body & Chassis noise 1.1.2.4.WH414413D, EECO-MGA412412C EETO-MGA412412C EETO-MGA412412C EETO-MGA412412C EETO-MGA412412C EETO-MGA412413C EETO-MGA413C EETO-MGAA1A13C EETO-MGAA1A13C EETO-MGAA1A13C EETO-MGAA1A13C EETO-MGAA1A13C EETO-MGAA1A13C EETO-MGAA1A13C	TU/STUC/2U8D,
GRAND VITARA XL7-JA627, GYPSY KING-MG413W, NEW DZIRE-AZI412PN413DN, NEW SWIFT-AZI412/413D,	
COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER	i3D

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

	(
Stamp of Selling dealer (Code & Full Address)	
For Servicing Dealer/Mass	

Model Code *				
Chassis No.:				
Engine No. :				
Mileage				
Date of Delivery				
Date of Inspection				
Registration No.				
Service Dealer/Mas	ss Code			

For Servicing Dealer/Mass

1.0: Please fill up Model codes correctly.

2.0: Please fill up Complete chasis No.

3.0 : Please fill up customer details i.e. Address and Telephone No. legibly and correctly for the latest owner.

For Selling Dealer

1.0: Please send all Free Service Coupon to us once in a month after settlement of free service charges.



Service Division
Maruti Suzuki India Limited

3RD. FREE INSPECTION COU	PON (CUSTOMER'S COPY) (10,000 KM or 12 MG	ONTHS)	3RD. FREE INSPECTION COUPON
	WHICHEVER COM	IES FIRST 🌳	(DEALER'S COPY) (10,000 KM or 12 MONTHS)
JOB MARK: √ : Checked OK, A: Adjust, C: C O:Rotate, I: Ins	Clean, R: Replace or Change, L: Lubricate, T: Tighten, spect and correct or replace If necessary.	个	Please see overleaf for special instructions
1. ENGINE 1. Engine Coolant (Level, Leakage) 2. Cooling System hoses & connections (Leakage, Damage) 3. Engine oil & oil filter (Replace)	JOB 6. FRONT AND REAR SUSPENSION 1. Suspension strut/shock absorber(Oil Leakage) 2. Suspension arms, Knuckle, Rear spring (Damage, Loose) 3. All Nuts & Bolts (Tighten)	JOB	Model Code * Chassis No.:
Engine Mounting and Manifold fixing (Loose, Damage)	7. STEERING 1. Steering wheel (Play) 2. All Rods & Arms (Loose, Damage, Wear)		Mileage
2. FUEL	Power Steering System (Operation)		Date of Delivery
Air cleaner / Cyclon (Clean) (Petrol) Fuel Filter, Fuel tank cap, Fuel lines and	4. Steering gear box (Inspect) 5. Tilt steering (operation) (if equipped)		Date of Inspection
connections (Leakage)	8. ELECTRICAL		Registration No.
3. Fuel filter & water draining (Diesel)	Battery electrolyte (Level, Leakage)		Service Dealer/Mass Code
3. CLUTCH AND TRANSMISSION 1. Clutch pedal (Play) (Petrol) 2. Clutch slipping (Dragging, Damage) 3. Transmission Oil (Level Leakage) 4. Gear Shifter Cables (Operation) 5. Drive shaft boots (Damage) 6. Clutch Fluid (Level, Leakage) (Diesel)	Lighting system/Horn (Operation) Wiring Harness Connections (Looseness) Wiper (Operation) BODY All Latches, Hinges & Locks/Central Locking (Operation/Lubrication) All Chassis nuts & bolts (Tighten) Seat belt (operation)		CONTINUE SCALON/MILLION SCALON
4. BRAKE 1. Brake fluid (Level, Leakage) 2. Brake pedal (Pedal to carpet clearance) 3. Parking brake lever (Play) 4. Brake Disc & Pads (Inspect) 5. Brake hoses & pipes (Leakage, Damage) 6. Brake Drums & Shoes (Inspect)	4. Seat latch, lever & knob (operation) 10. HEATING AND AIR CONDITIONING 1. Drive belt (Tension, Damage) 2. Check functioning of Recirculating flap 3. Check all Hose Joints 4. Check Compressor Mounting Bolts 5. Clean Condenser with low pressure water 6. A/C filter element (Inspect)		Mechanic's Signature Service Manager's Signature
WHEEL Tyres (Air pressure, Abnormal wear, Rotation) Wheels (Inspect)	11. ROAD TEST 1. Operation of Brakes, clutch Gear shifting and Speedometer 2. Body & Chassis noise		Customer's Signature *MODEL CODES: ALTO-AOD308/308C/310/310C, CELERIO-AVH310/310C/208D, CIAZ-AVB414/413D, EECO-MGA412/412C, ERTIGA-AVI414/413D,
Front/Rear Wheel Bearings (Loose, Damage) COST OF MATERIALS ANL	CONSUMABLES TO BE BORNE BY CUSTOMER	X	GRAND VITARA XLT-JA62T, GYPSY KING-MG413W, NEW DZIRE-AZI412PN413DN, NEW SWIFT-AZI412/413D, NEW WAGONR-A1J310/310C/310L, OMNI-MT308, RITZ-A5E412/413D

	*
Stamp of Selling dealer (Code & Full Address)	

Model Code *				
Chassis No.:				
Engine No. :				
Mileage				
Date of Delivery				
Date of Inspection				
Registration No.				
Service Dealer/Mas	ss Code			

For Servicing Dealer/Mass

 
1.0: Please fill up Model codes correctly.

2.0 : Please fill up Complete chasis No.

3.0: Please fill up customer details i.e. Address and Telephone No. legibly and correctly for the latest owner.

For Selling Dealer

1.0: Please send all Free Service Coupon to us once in a month after settlement of free service charges.



Service Division Maruti Suzuki India Limited

FOREWORD

This manual is an essential part of your vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new MARUTI SUZUKI and review the manual from time to time. It contains important information on safety, operation and maintenance. You are invited to avail the three Free Inspection Services as described in the manual. Three free inspection coupons are attached to this manual. Please show this manual to your dealer while you take your MARUTI SUZUKI for any Service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "INSPECTION AND MAINTENANCE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

WARNING/ CAUTION/NOTICE/

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

▲ WARNING

Indicates a potential hazard that could result in death or serious injury.

A CAUTION

Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.



75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

MODIFICATION WARNING

WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your MAR-UTI SUZUKI dealer or qualified service technician for advice.

▲ WARNING

Severe damage may be caused by the use of either poor quality fuel and/or lubricants not recommended by MARUTI SUZUKI.

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by an authorised Maruti Suzuki dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised dealer / service station.

(2) Term:

The term of the warranty shall be twenty-four (24) months or 40,000 kilometers (whichever occurs first) from the date of delivery to the first owner.

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. The owner is responsible for any repair or replacements which are not covered by this warranty.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The replacement of normal wear parts including without limitation, bulbs, tyres and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition or racing.
- (d) Any repairs or replacement required as a result of accidents or collision.
- (e) Any defects caused by misuse, negligence, abnormal use or insufficient care.
- (f) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories.
- (g) Any vehicle on which parts or accessories not approved by Maruti Suzuki have been used.
- (h) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
- Any vehicle which has not received, during the warranty term, the service inspections prescribed in this Owner's Manual and Service Booklet.
- (j) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than an Maruti Suzuki authorised dealer/service station.
- (k) Any vehicle which has been used for purposes other than what it was designed for.
- Any damage or deterioration caused by industrial pollution and bird droppings.

- (m) Insignificant defects which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
- (n) Any natural wear and tear including without limitation, aging etc.
- (o) Installation and usage of domestic LPG gas/LPG Cylinder.
- (p) V-belts, hoses and gas leaks.
- (q) Any vehicle retrofitted with LPG/CNG kits.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty on Maruti Suzuki's behalf.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to any authorised Maruti Suzuki dealer.

(7) Owner's Warranty Responsibilities:

It is responsibility of each owner to:

- Make certain that the PDI card was completed at the time of delivery of the vehicle;
- Have performed, at his own expenses, by an Maruti Suzuki authorised dealer/service station all the service inspections specified in the Maruti Suzuki "Owner's Manual and Service Booklet and maintain adequate proof that such service inspections have been performed.

- Make certain that the Maruti Suzuki authorised dealer/service station performing the service inspection has certified the work on the "Maintenance Service Record" page in the "Owner's Manual and Service Booklet and
- Present the Maruti Suzuki "Owner's Manual and Service Booklet to the authorised Maruti Suzuki dealer whenever requesting service inspections or warranty service.

If the "Owner's Manual and Service Booklet should be lost or destroyed the owner should consult the authorised Maruti Suzuki dealer from whom the vehicle was purchased for instructions concerning replacement of the "Owner's Manual and Service Booklet.

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities (New Delhi, Kolkata, Mumbai and Chennai) with effect from July 1st, 2001.

Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of delivery to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

Conditions:

- Under Emission Warranty, Warranty claims will be admitted for a prima facie examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
- The warranty claims will only be accepted after examination carried out by Maruti Suzuki or it's dealer which leads to firm conclusions that the
 - a) Original settings have not been tempered in any case.
 - b) Part (as given in Annexure A) has a manufacturing defect.
 - c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.

- 3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and it's dealer and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and it's dealer has the right to charge all, or part of the cost of such examination.
- Under Emission Warranty, the parts (as given in Annexure A) will be changed free of cost, but the consumables will be charged as per actual.
- 5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and it's dealer will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
- 6. Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
- 7. Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest Maruti Suzuki dealer workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki dealer.
- Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
- Emission Warranty will not be affected on the change of owner, provided all the documents are available.

- 10.All maintenance actions (as specified in the Owner's Manual and Service Booklet) need to be followed and recorded in the manual for emission warranty.
- 11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The receipts (for the maintenance of the vehicle as per specification in Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

Conditions under which the Emission Warranty is not APPLICABLE

- 1. In the absence of valid PUC certificate.
- Vehicle not serviced from Maruti Suzuki authorised workshop as per the schedule specified in this Owner's Manual and Service Booklet.
- 3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
- 4. Use of non MGP (Maruti Genuine Part).
- 5. Vehicle that has been tempered with.
- 6. Tampering with odometer so that the actual kilometer reading can not be determined.
- 7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).

Annexure - A

List of parts covered under Emission Warranty

- Fuel Injection Assembly, Pressure Regulator, Throttle Body
 Assembly
- 2. Electronic Control Module (ECM).
- 3. Intake Manifold.
- 4. EGR valve.
- 5. Ignition Coil.
- 6. Canister Assembly.
- 7. Vapour Liquid Seperator.
- 8. Fuel Tank and Filler Cap.
- 9. PCV (Positive Crankcase Ventilation) Valve.
- 10. Oil Filler Cap.
- 11. Catalytic Convertor.
- 12. Exhaust Manifold.
- 13. All Fuel Injection System related SENSORS.
- 14. High Pressure Fuel Pump.
- 15. Glow Plug.
- 16. Glow Plug Controller.

TABLE OF CONTENTS

FUEL RECOMMENDATION	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
VEHICLE LOADING AND TOWING	6
INSPECTION AND MAINTENANCE	7
EMERGENCY SERVICE	8
APPEARANCE CARE	9
GENERAL INFORMATION	10
SPECIFICATIONS	11
SERVICE NETWORK	12

Fuel Recommendation

Petrol Engine

You must use unleaded petrol with an octane number (RON) of 91 or higher.

Petrol/Ethanol blends

Blends of unleaded petrol and ethanol (grain alcohol), also known as gasohol, are commercially available in some areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol. Make sure this petrol-ethanol blend has octane ratings no lower than those recommended for petrol.

Petrol/Methanol blends

Blends of unleaded petrol and methanol (wood alcohol) are also commercially available in some areas. DO NOT USE fuels containing more than 5% methanol under any circumstances. Fuel system damage or vehicle performance problems resulting from the use of such fuels are not the responsibility of MARUTI SUZUKI and may not be covered under the New Vehicle Warrantv.

Fuels containing 5% or less methanol may be suitable for use in your vehicle if they contain cosolvents and corrosion inhibitors.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you are using a petrol/alcohol blend, you should switch back to unleaded petrol containing no alcohol.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non-automatic system, initial vent blowback occurs.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

Diesel Engine


The diesel fuel should be with Cetane Number (CN) higher than 51 and sulfur content less than 50 ppm (parts per million). MARUTI SUZUKI recommends to use the diesel fuel conformable to EN590. Do not use marine diesel fuel, heating oils and so forth.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non-automatic system, initial vent blowback occurs.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

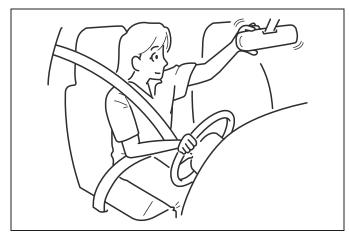


60MHM2T001

BEFORE DRIVING

Keys	2-1
Door Locks	2-2
Keyless Push Start System Remote Controller/	
Keyless Entry System Transmitter (if equipped)	2-5
Windows	
Mirrors	
Front Seats	2-24
Rear Seats	2-26
Seat Belts and Child Restraint Systems	2-30
Supplemental Restraint System (air bags)	2-40
Instrument Cluster	
Warning and Indicator Lights	2-48
Speedometer	
Tachometer (if equipped)	2-54
Fuel Gauge	
Temperature Gauge	2-55
Brightness Control	2-55
Information Display	2-56
Lighting Control Lever	2-62
Front Fog Light Switch (if equipped)	2-63
Headlight Leveling Switch	2-63
Turn Signal Control Lever	2-64
Hazard Warning Switch	2-65
Windshield Wiper and Washer Lever	2-65
Tilt Steering Lock Lever	2-67
Horn	2-67
Heated Rear Window Switch (if equipped)	2-68

Keys

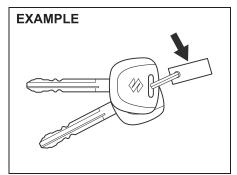

54G489

Your vehicle comes with a pair of keys. The key(s) may or may not be equipped with a transmitter depending on model variant. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key or keyless push start system remote controller which has an electronic identification code programmed into it. The key or remote controller communicates the identification code to the vehicle when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON". If you need to make spare keys or remote controllers, see your MARUTI SUZUKI dealer. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.



30JM122

inspected.

If the immobilizer/keyless push start system warning light blinks when the ignition switch is in the "ON" position or the ignition mode is "ON", the engine will not start.

For vehicles without keyless push start system

If this light blinks, turn the ignition switch to the "LOCK" position, then turn it back to the "ON" position.

If the light still blinks after the ignition switch is turned back to the "ON" position, there may be something wrong with your key or with the immobilizer system. Ask your MARUTI SUZUKI dealer to have the system inspected.

For vehicles with keyless push start system

If this light blinks, change the ignition mode to "LOCK" (OFF), then change back to "ON". Also refer to "If the "PUSH" indicator light blinks and the engine cannot be started" in "Starting the Engine (Vehicle with Keyless Push Start System)" in the "OPERATING YOUR VEHICLE" section. If the light still blinks after the ignition mode is changed back to "ON", there may be something wrong with your key or with the immobilizer system. Ask your MARUTI SUZUKI dealer to have the system

The immobilizer/keyless push start system warning light may also blinks if the remote controller is not in the vehicle when you close the door or attempt to start the engine.

NOTE:

- If you lose your immobilizer ignition key or remote controller, see your MARUTI SUZUKI dealer as soon as possible to have the lost one deactivated, then have the new key or remote controller made by them.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch or the engine switch when using your vehicle, or the engine may not be started because they may interfere with your vehicle's immobilizer system
- If you attach any metal objects to the immobilizer key or remote controller, it may not start the engine.

NOTICE

The immobilizer key and remote controller are sensitive electronic instruments. To avoid damaging them:


- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.

Ignition Key Reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

Door Locks

Side Door Locks

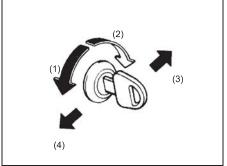


60B008

- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

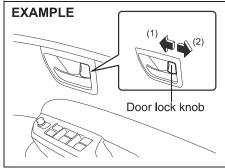

74LHT0201

(1) LOCK (2) UNLOCK


To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.

To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.

Central Door Locking System (if equipped)

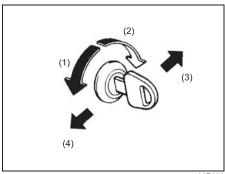


60B008

- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle.

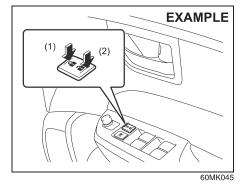

(1) LOCK (2) UNLOCK

You can also lock or unlock all doors by depressing the front or rear of the switch, respectively.

Note:

- Individual doors can also be UNLOCKED anytime by using their respective "Door Lock Knob" inside the vehicle.
- If child proof locks are in locked position, rear doors cannot be opened from inside.

NOTE:


- You can also lock or unlock all doors by operating the transmitter or remote controller. Refer to "Keyless Push Start System Remote Controller/Keyless Entry System Transmitter" in this section.
- If your vehicle is equipped with the keyless push start system, you can also lock or unlock all doors by pushing the request switch. Refer to "Keyless Push Start System Remote Controller/Keyless Entry System Transmitter" in this section.

NOTE:

- All doors are automatically unlocked when you change the ignition mode to "LOCK" (OFF) or turn the ignition switch to the "LOCK" position and pull out the key.
- All doors are automatically closed for safety when the vehicle speed reaches 15 km/h.
- For vehicles with the keyless push start system, you can change the automatic locking or unlocking function mentioned above via the setting mode of the information display.

For details on how to use the information display, refer to "Information Display" in this section.

Child-Proof Locks (rear door)

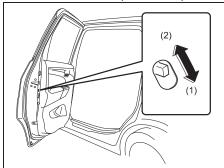

60MH006

(1) LOCK (2) UNLOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in the "LOCK" position (1), the rear door can only be opened from outside. When the lock lever is in the "UNLOCK" position (2), the rear door can be opened from inside or outside.

WARNING


Be sure to place the child-proof lock in the "LOCK" position whenever children are seated in the rear.

Tailgate

WARNING

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

Type 1

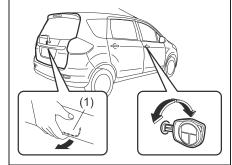

60MK046

(Vehicle with keyless entry system) You can lock and unlock the tailgate by using the key in the driver's door lock.


(Vehicle with keyless push start sys-

You can lock or unlock the tailgate by pushing the request switch, when the keyless push start system remote controller is within the switch's operating range. For details refer to "Keyless Push Start System Remote Controller/Keyless Entry System Transmitter" in this section.

To open the tailgate, pull up and hold the tailgate handle (1) and lift the tailgate.

If you cannot unlatch the tailgate by pulling up the tailgate handle (1) due to a discharged battery or malfunction, follow the procedures below to unlatch the tailgate from inside the vehicle.

1) Fold the 3rd row seat forward for easier access. Refer to "Folding Rear Seats" section for details on how to fold the 3rd row seat forward.

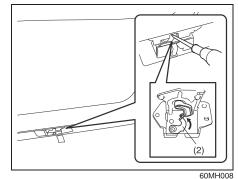


2) Push open the tailgate from inside by pushing up on the emergency lever (2) using a flat blade screwdriver or the jack handle. The tailgate will be latched again by closing the tailgate simply.

If the tailgate cannot be unlatched by pulling up the tailgate handle (1), have the vehicle inspected by your MARUTI SUZUKI dealer.

A CAUTION

- To avoid injury, do not use your finger to push the emergency lever.
- Make sure there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

Type 2

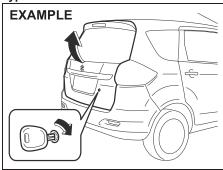


60MK047

To open the tailgate, insert the key and turn it clockwise to unlatch and lift the tailgate.

NOTICE


Do not use the key to lift up the tailgate, or the key may break off in the lock.

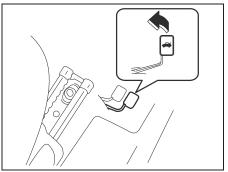

60MH077

You can also unlatch the tailgate by pulling the release lever located on the outboard side of the driver's seat.

Keyless Push Start System Remote Controller/ Keyless Entry System Transmitter (if equipped)

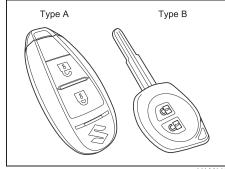

68LM205

Your vehicle is equipped with either a keyless push start system remote controller (Type A) or a keyless entry system transmitter (Type B). The remote controller has a keyless entry system and a keyless push start system. The transmitter has only a keyless entry system. For details, refer to the following explanations.

▲ WARNING


Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers, Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.

- · Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.
- If radio wave interference is a concern, have the function of the antenna(s) disabled by your MAR-UTI SUZUKI dealer.

Keyless Push Start System Remote Controller (Type A)

The remote controller enables the following operations:

- You can lock or unlock the doors by operating the LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch. For details, refer to the explanation in this section.
- You can start the engine without using an ignition key. For details, refer to "Engine Switch" in the "OPERATING YOUR VEHICLE" section.

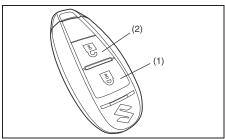

68LM206

- (1) "LOCK" button
- (2) "UNLOCK" button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the remote controller near the vehicle.

Central door locking system

- To lock all doors, push the "LOCK" button (1) once.
- To unlock all doors, push the "UNLOCK" button (2) once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- · The turn signal lights will flash twice and the siren will sound twice.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the "LOCK" button (1).

If no door is opened within about 30 seconds after the "UNLOCK" button (2) is operated, the doors will automatically lock again.

NOTE:

- · If you lock the doors using the remote controller when the engine hood is open, the siren will sound 3 times to remind
- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the remote controller, the siren will sound 4

- times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the "LOCK" button (1) and "UNLOCK" button (2), then you push one of the buttons within 5 seconds, the siren will not sound. However, If you push one of the buttons twice within 5 seconds, or push one of the buttons 5 seconds later, the siren will sound.
- You can set whether the siren sounds when locking or unlocking the doors via the setting mode of the information display. For details on how to use the information display, refer to "Information Display" in this section.

NOTE:

- The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the remote controller if the ignition mode is other than the "LOCK" (OFF).
- When any door is open, if you push the "LOCK" button on the remote controller, the exterior buzzer will sound and doors cannot be locked.

 If you lose one of the remote controllers, ask your MARUTI SUZUKI dealer as soon as possible for a replacement. Be sure to have your dealer program the new remote controller code in your vehicle's memory so that the old code is erased.

Car locator function

This function helps in locating the vehicle. Push both of the "LOCK" button (1) and "UNLOCK" button (2) for more than 3 seconds.


The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time.

To cancel the car locator function, press any button ("LOCK" or "UNLOCK"). You can also press the engine switch to change the ignition mode to "ON" to cancel the car locator function.

NOTE:

The car locator function will not activate when the ignition mode is "ACC" or "ON" or pre warning / full blast warning by shock sensor or alarm is in activated condition.

Keyless unlocking/locking using the request switches

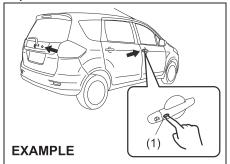

60MH11

When the remote controller is within the operating range described in this section, you can lock or unlock the doors (including the tailgate) by pushing the request switch (1) on the driver's door handle, front passenger's door handle or tailgate.

To lock all doors when all doors are unlocked:

 To lock all doors, push one of the request switches once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

To unlock all doors:

Push one of the request switches once.


When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the request switch to lock the doors.

NOTE:

- The door locks cannot be operated by the request switch under the following conditions:
 - If any door is open or is not completely closed.
- If the ignition mode is other than "LOCK" (OFF).
- If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.

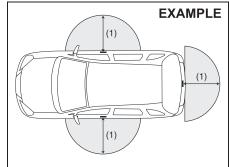

80J056

(1) 80 cm (2 1/2 feet)

When the remote controller is within approximately 80 cm (2 1/2 feet) from a front door handle or the tailgate switch, you can lock or unlock the doors by pushing the request switch.

NOTE:

- If the remote controller is outside the request switch operating range described above, you will not be able to operate the request switch.
- If the battery of the remote controller runs down or there are strong radio waves or noise, the request switch operating range may be reduced or the remote controller may be inoperative.
- If the remote controller is too close to the door glass, the request switches may not operate.
- If a spare remote controller is in the vehicle, the request switches may not operate normally.
- The remote controller will only operate a request switch if it is within the switch's operating range. For example, if the remote controller is within the operating range of the driver's door request switch but not the front passenger's door request switch or the tailgate request switch, the driver's door switch can be operated but the front passenger's door switch or tailgate switch cannot be operated.

NOTICE

The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the remote controller away from magnetic objects such as a television.

NOTE:


The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the following:

- When there are strong signals coming from a television, power station or a cellular phone.
- When the remote controller is in contact with or covered by a metal object.
- When a radio wave type remote keyless entry is used nearby.
- · When the remote controller is placed near an electronic device such as personal computer.

Some additional precautions you should take and information you should be aware of are:


 Make sure the key is stowed in the remote controller. If the remote controller becomes unreliable, you will not be able to lock or unlock the doors.

- Be sure that the driver always carries the remote controller.
- If you lose one of the remote controllers. ask your MARUTI SUZUKI dealer as soon as possible for a replacement. Be sure to have your dealer program the new remote controller code in your vehicle's memory so that the old code is
- You can use up to four remote controllers and the keys for your vehicle. Ask your MARUTI SUZUKI dealer for details.
- The battery life of the remote controller is about two years, but it can vary depending on usage conditions.

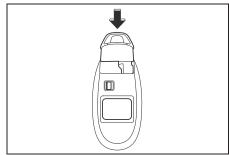

57L21016

To stow the key into the remote controller, push the key in the remote controller until vou hear a click.

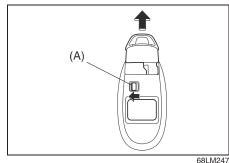

To remove the key from the remote control-Ier, push the button (A) in the direction of the arrow and pull the key out from the remote controller.

Request switch warning buzzer


This exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch is not working:

- The request switch is pressed after all doors are closed with the ignition mode changed to "ACC" or "ON" by pressing the engine switch.
- The request switch is pressed in any of the following conditions after changing the ignition mode to "LOCK" (OFF) by pressing the engine switch.
- The remote controller is left inside the vehicle.
- Any door (including the tailgate) is open.

Press the request switch again after doing the following:

With the ignition mode changed to "LOCK" (OFF) by pressing the engine switch, bring out the remote controller if it is inside the vehicle and check that all doors are completely closed.

Reminder function

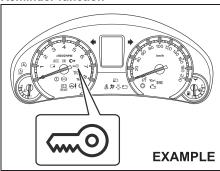

60MH116

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:

When one or more doors are opened and all of the doors are later closed with the ignition mode is other than "LOCK".

The indicator light will turn off within several seconds after the remote controller is returned to interior workable area.

If the remote controller is left in the vehicle and you lock the driver's door or front passenger's door as described below, the door will be automatically unlocked.

- If you open the driver's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the driver's door will be automatically
- If you open the front passenger's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the front passenger's door will be automatically unlocked.


NOTE:

- The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor etc.
- Be sure that the driver always carries the remote controller.
- · Do not leave the remote controller in the vehicle when leaving the vehicle.

Replacement of the battery


If the remote controller becomes unreliable, replace the battery.

To replace the battery of the remote controller:

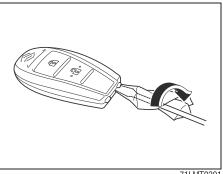

71LMT0201

- 1) Pull the key out from the remote controller.
- 2) Insert a flat blade screwdriver covered with a soft cloth in the slot of the remote controller and pry it open.

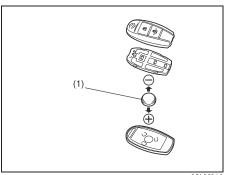

68LM210

- (1) Lithium disc type battery: CR2032 or equivalent
- 3) Replace the battery (1) so its + terminal faces the bottom of the case as shown in the illustration.
- 4) Close the remote controller firmly.
- 5) Make sure the door locks can be operated with the remote controller.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

A WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.

Security System (Vehicle with Keyless push start system)

The security system is armed after you lock all doors (including the engine hood and tailgate) by using the keyless push start system remote controller or request switch.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless push start system remote controller or open the engine hood, will cause the alarm to be triggered.

- * These means include the following:
- The key
- The lock knob on a door
- The central door locking switch
- The tailgate unlatch button (if equipped)

Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the warning will be triggered if any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask your MARUTI SUZUKI dealer or use the setting mode of the information display.

NOTE:

- The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Information Display" in this section.
- Your dealer may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.


NOTE:

- The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into the vehicle.
- Always use the keyless push start system remote controller to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.

- If a person who does not know the security system is going to drive the vehicle, we recommend you explain the system and its operation to the person. Mistakenly triggering the alarm may cause a nuisance to others.
- Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or things of value in the vehicle.

How to arm the security system

Lock all doors (including the engine hood and tailgate) using the keyless push start system remote controller or request switch. When the system is armed, the indicator continues to blink at intervals of approximately 2 seconds.

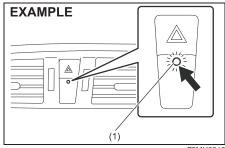

79MH0210

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, luggage compartment, engine hood, or the warning may be triggered if anyone swings the vehicle (if the shock sensor is in the enabled state).
- The security system is not armed when all doors are locked using the key from outside, using the door lock knobs or the central door locking switch from inside.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless push start system remote controller, the doors are automatically locked again. When the doors are locked, the security system will be armed.
- If the security system indicator (1) blinks when the ignition mode is "ON", there may be something wrong with the security system. Ask your MARUTI SUZUKI dealer to inspect the system.

How to disarm the security system

Simply unlock the doors using the keyless push start system remote controller. The security system indicator will go out, indicating that the security system is disarmed.

How to stop the alarm

Should the alarm be triggered accidentally, the alarm will stop by the following operations.

- In case of emergency, press the engine switch to change the ignition mode to "ON".
- Unlock the doors using the keyless push start system remote controller, the request switch.

NOTE:

- Even after the alarm has stopped, if you lock the doors using the keyless push start system remote controller, the security system will be rearmed.
- If you disconnect the battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be re-triggered when the battery is then reconnected.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, luggage compartment or engine hood is opened, or the warning may be triggered if the vehicle feels a shock (if the shock sensor is in the enabled state), without disarming the security system.

Checking whether the alarm has been triggered during parking

If the alarm was triggered and you then turn the ignition mode is "ON", the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check

whether the vehicle has been broken into while you were away from it.


Security system indication

- If any of the doors or tailgate are opened without unlocking by the keyless push start system remote controller, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the shock sensor is in the enabled state and vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, the siren will sound for about 4.5 seconds (full blast warning). The security system indicator continues to blink during this time.

NOTE:

If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.

Keyless Entry System Transmitter (Type B)

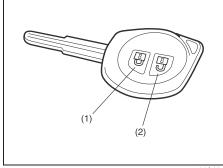

81A184

(1) "LOCK" button (2) "UNLOCK" button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

Central door locking system

- To lock all doors, push the "LOCK" button (1) once.
- To unlock all doors, push the "UNLOCK" button (2) once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

• The turn signal lights will flash twice and the siren will sound twice.

 If the interior light switch is in the "DOOR" position, the interior light will turn on for about 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the "LOCK" button (1).

NOTE:

If no door is opened within about 30 seconds after the "UNLOCK" button (2) is operated, the doors will automatically lock again.

NOTE:

- If you lock the doors using the transmitter when the engine hood is open, the siren will sound 3 times to remind you.
- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the "LOCK" button (1) and "UNLOCK" button (2), then you push one of the buttons within 5 seconds, the siren will not sound. However, If you push one of the buttons twice within 5 seconds, or push one of the buttons 5 seconds later, the siren will sound.

NOTE:


- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door lock's cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can be operated only unlock with the transmitter, and the turn signal light will not flash.
- If you lose one of the transmitters, ask your MARUTI SUZUKI dealer as soon as possible for a replacement. Be sure to have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Security System (Vehicle with Keyless entry system)

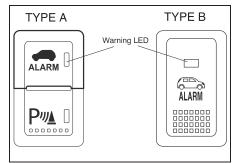


60MH130

Alarm Mode

The Alarm mode is designed to protect your vehicle from unauthorised entry. It operates in three stage:

First: Arm Stage Second: Trigger Stage Third: Disarm Stage

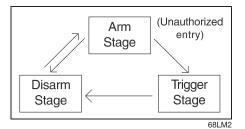

Arm Stage


In Arm Stage, your vehicle is monitored for any unauthorized entry. In order to arm, press the key LOCK button once.

As response to locking/arming:

- Doors will get locked & vehicle will get armed.
- Visible theft warning LED on security switch will flash slowly to indicate arming.

NOTE:

 Three siren chirps and one light flash of all indicator lights will indicate that engine hood is open. However, locking of all doors take place but security system will not be armed.

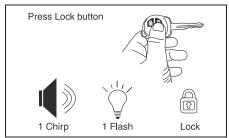


68LN

- Be sure to close all doors (including the engine hood and tailgate) and windows before locking/arming the vehicle.
- 3) System will not Lock/Arm in following conditions
- a) If any of door is open.
- b) If key is in key cylinder.

2-14

Trigger Stage

In the event of any unauthorized entry (without unlocking/disarming) into the vehicle, the alarm triggers and all indicator lights flash. The triggering of the alarm is in two stages. First acting as a warning to the intruder and then alarm drawing the surrounding attention. However, alarm will be activated without any warning if intrusion happens through engine hood.

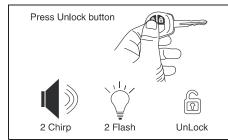

68LM2

Disarm Stage

System should be brought in Disarm Mode while you are entering the vehicle. In order to disarm: Press the key UNLOCK button once.

As response to unlocking/disarming:

- Doors will unlock and vehicle will disarm.
- Visible theft warning LED on security switch will flash faster than in arm stage indicating Auto rearm (described in auto rearm section).

	Trigger Type	Alarm Cycle	
-	Door Trigger (By Driver Door, Passenger Door, Engine Hood & Back Door)	1 Cycle of approxi- mate 27.5 seconds	
	Ignition Trigger	1 Cycle of approximate 27.5 seconds	
	Impact Trigger (Built in sensor Trigger)	1 Cycle of max 4.5 seconds	

GENERAL FEATURES

Illuminated Entry

When vehicle is unlocked, the room lamp will turn ON to facilitate illuminated entry into the vehicle. If no door is opened in about 15 seconds of above operation, room lamp will fade out.

If any door is opened after 15 seconds, the room lamp turns ON again and after 15 seconds of closing all doors room lamp will fade out.

If within 15 seconds after closing all the doors the driver inserts the key into the key cylinder, then the room lamp will fade out.

Illuminated Exit

When key is removed from the key cylinder room lamp will turn ON to facilitate illuminated exit. If no door is opened in about 15 seconds of key removal from key cylinder, the room lamp will fade out.

When door is opened to exit the vehicle, the room lamp will turn ON again (if it has turned OFF after 15 seconds of key removal from key cylinder) and will turn OFF after 15 seconds of closing all the doors.

If within 15 seconds of all doors closure, vehicle is locked by pressing the LOCK button, the room lamp will fade out.

NOTE: Room lamp will fade out gradually approximately in 2 seconds.

Mute Lock/Unlock

To Lock/Unlock the vehicle without siren chirps use this function.

- a) Press and release the Key LOCK & UNLOCK buttons simultaneously.
- b) Press and release Key LOCK or UNLOCK button for desired function.

Example: To Lock the system without the Siren chirp sound, press and release the Key LOCK & UNLOCK button simultaneously, then press and release the Key LOCK button once.


Auto Rearm

In case of accidental Unlock/Disarm of vehicle by Key, vehicle will automatically Lock & Arm within 30 sec. without any indication. Auto rearm cycle gets canceled if user does any of the following operation within 30sec:

- 1. Open any door (including back door).
- 2. Open Engine Hood.
- 3. Key On.

Radio Frequency Lock Out

Key Lock/Unlock/Car locator function will cease to function when Key is inside Key cylinder.

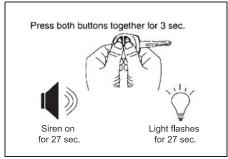

68LM2

Car locator function

This function helps in locating the vehicle.

- a) Press and hold the Key LOCK & UNLOCK button simultaneously for 3 seconds or more.
- b) Car locator function will be activated and siren will sound and indicator lights will flash for 27 seconds.
- Press and release the Key LOCK & UNLOCK button simultaneously to cancel the car locator function.

NOTE:

The car locator function will not activate when the key is in the ignition switch or pre warning / full blast warning by shock sensor or alarm is in activated condition.

Flashing LED Status

The flashing LED always reflects the status of the system as following.

SYSTEM CONDITION	LED STATUS	
Disarmed condition	LED does not glow	
Armed condition	Slow Flashes of LED	

Intrusion Alert

The system gives a report if it has been intruded in your absence. Four chirps are given when UNLOCK button is pressed after an intrusion.

Diagnostic report	Visual-LED	Sound		
Built in Shock Sensor Trigger (full blast warn- ing)	2 Flashes	Four Chirps		
Door/Tailgate/ Engine Hood Intrusion	3 Flashes	Four Chirps		
Ignition	5 Flashes	Four Chirps		

PROGRAMMABLE FEATURES

System has some features which can be programmed by user according to their choice.

Drive Lock Mode

Drive lock mode can be programmed by SPEED LOCK or can be turned OFF. If drive lock mode is programmed to SPEED LOCK, all the vehicle doors will lock when vehicle attains the speed of 15 Km/hr. If Drive Lock is programmed to OFF, no door will lock by speed.

NOTE:

In case of SPEED LOCK Mode, if any door is open while driving, it will get cancelled.

Once vehicle Speed crosses 15 Km/hr, the LED on Security Switch will blink for 5 seconds as indication of door open.

Drive Unlock Mode

Drive unlock can be programmed to KEY or can be turned OFF. When programmed to KEY, turning Ignition ON to OFF then removing the key from the key cylinder will unlock all the doors. If drive unlock is programmed to OFF then no door will unlock by removing key from key cylinder.

Siren Chirp ON/OFF feature

Siren Chirps can be programmed to ON or OFF. When siren chirp feature disabled, siren will not chirp after Arm/Disarm by LOCK/UNLOCK button.

Shock Sensor feature

This is a very important feature of security system. It enables protection of your vehicle against any major impact. If anybody tries to intrude into the vehicle, the warning may trigger. Triggering of the warning is of two types: pre-warning and full blast warning. The sensitivity of shock sensor can be adjusted as desired by the user.

PROCEDURE TO PROGRAM FEATURE

No.	Feature	1 Chirp	2 Chirps	Default
1.	Drive Lock Mode	Speed	OFF	Speed
2.	Drive Unlock Mode	Key	OFF	Key
3.	Siren chirp ON/OFF	ON	OFF	ON
4.	Shock Sen- sor ON/OFF	ON	OFF	ON

Programming Drive Lock Mode

- a) Open the Driver Door of your vehicle.
- b) With your vehicle key in the Key cylinder, turn Ignition ON and then switch it OFF.
- c) Press and release the Security switch One time.
- d) Press and hold the Security switch.
- e) One chirp sound confirms entry into Drive Lock programming mode.
- f) Press the Key "Lock" button (while holding the Security switch), a single chirp sound confirms mode changed to speed lock.
- g) Two-Siren chirp sound confirms Drive lock mode OFF.
- h) Release the Security switch.
- i) Turn the Ignition ON.

Programming Drive Unlock Mode

- a) Open the Driver Door of your vehicle.
- With your vehicle key in the Key cylinder, turn Ignition ON and then switch it OFF.
- c) Press and release the Security switch two times,
- d) Press and hold the Security switch.
- e) Two-chirp sound confirms entry into Drive unlock programming mode.
- f) Press the Key Lock button (while holding the Security switch), a single chirp sound confirms the mode changed to key Unlock.
- g) Two-siren chirp sound confirms the mode changed to Drive Unlock mode OFF.
- h) Release the Security switch.
- i) Turn the Ignition ON.

Programming Siren Chirp ON/OFF

- a) Open the Driver Door of your vehicle.
- With your vehicle key in the Key cylinder, turn Ignition ON and then switch it OFF.
- c) Press and release the Security switch Three times.
- d) Press and hold the Security switch.
- e) Three-chirp sound confirms entry into Siren Chirp ON/OFF programming mode.
- f) Press the Key Lock button (while holding the Security switch), a single chirp

- sound confirms the mode changed to Siren Chirp ON.
- g) Two-Siren chirp sound confirms the mode changed to Siren Chirp OFF.
- h) Release the Security switch.
- i) Turn the Ignition ON.

Programming Shock Sensor ON/OFF

- a) Open the Driver Door of your vehicle.
- With your vehicle key in the Key cylinder, turn Ignition ON and then switch it OFF.
- c) Press and release the Security switch Four times.
- d) Press and hold the Security switch.
- e) Four-chirp sound confirms entry into Shock Sensor ON/OFF programming mode.
- f) Press the Key Lock button (while holding the Security switch), a single chirp sound confirms the mode changed to shock sensor ON.
- g) Two-Siren chirp sound confirms the mode changed to shock sensor OFF.
- h) Release the Security switch.
- i) Turn the Ignition ON.

Shock Sensor Sensitivity Adjustment via Key

Full Blast adjustment

Full Blast can be adjusted in 16 levels as mentioned below.

 a) Press Unlock button on Key to Unlock/ Disarm the System.

- b) Press Lock button (within 2 seconds of key UNLOCK) on Key to Lock/Arm the System.
- Within 2 sec press Lock & Unlock button simultaneously for at least 3 sec. Siren will give Long chirp to confirm entry into sensitivity adjustment mode
 - i) Press Lock button to adjust the sensitivity one step lower. Siren will give one chirp every time lock button is pressed till at level 1 where it will give a long chirp. When adjusted to level 1, Full Blast will turn OFF
 - ii) Press unlock button to adjust the sensitivity one step higher. Siren will give two chirp every time unlock button is pressed till at level 16 where it will give a long chirp.

Pre-warn Adjustment

Pre-warn can be adjusted in 16 levels as mentioned below:

- a) Press Lock button on Key to Lock/Arm the System
- b) Press Unlock button (within 2 seconds of key LOCK) on Key to Unlock/Disarm the System
- c) Within 2 sec press Lock & Unlock button simultaneously for at least 3 sec. Siren will give Long chirp to confirm entry into Sensitivity Adjustment Mode.
 - i) Press Lock button to adjust the sensitivity one step lower. Siren will give one chirp every time lock button is pressed till at level 1 where it will

- give a long chirp. When adjusted to level 1, pre-warn will turn OFF.
- ii) Press Unlock button to adjust the sensitivity one step higher. Siren will give two Chirp every time Unlock button is pressed till at level 16 where it will give a long chirp.

Program Customer Pin-code (Personalized Pin-code)

If transmitter is not working properly, then it is possible to disarm the system by Personalized pin code.

The Personalized 4-digit number can be changed from the factory default to ensure Personalized Security.

Pin code entry

- a) Disarm the system.
- b) Open the Driver Door.
- c) Turn Ignition ON then OFF.
- d) Within 5 seconds press and release Valet switch 5 times. A short chirp followed by long chirps confirms entry into Pin Code programming mode.
- e) Press Lock button on Key, after a single chirp enter the First digit (within 1-9) by pressing Valet switch (for e.g. to enter 2 press and release Valet switch two times).
- f) Press Lock button on Key, after two chirp enter the Second digit (within 1-9) by pressing Valet switch.

- g) Press Lock button on Key, after 3-chirps enter the Third digit (within 1-9) by pressing Valet switch.
- h) Press Lock button on Key, after 4-chirps enter the Fourth digit (within 1-9) by pressing Valet switch.

Emergency Disarm by Personalized pin code


The Personalized 4- Digit Pin Code acts as a secret Key, to Emergency Disarm the vehicle.

- a) Turn the Ignition ON, OFF and then ON.
- b) Enter the First digit (for e. g. to enter 2 press and release Valet switch twice)
- c) Turn the Ignition OFF then ON.
- d) Enter the Second digit.
- e) Turn the Ignition OFF and then ON.
- f) Enter the Third Digit.
- g) Turn the Ignition OFF and then ON
- h) Enter the Last Digit.
- i) Turn the Ignition OFF and then ON.
- j) The vehicle will get disarmed.

NOTE:

The default pin will be provided by the dealer at the time of delivery. It is recommended to personalize the pin for increased security. The pin must be remembered as it is not possible to retrieve a lost pin.


Transmitter battery Replacement of the Battery

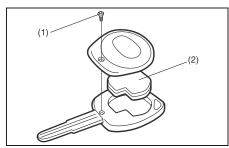

If the transmitter battery gets discharged, replace the battery with a new one.

To replace the battery of the transmitter:

- 1) Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).
- 3) Put the edge of a flat blade screw driver in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) (Lithium disc type CR1620) so that its +ve terminal faces the bottom cover of the transmitter (5).

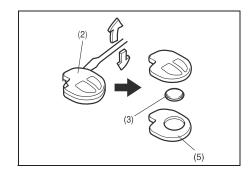

- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- 7) Make sure the door locks can be operated with the transmitter.

NOTE:

Normal battery life is approximately 2 years, but varies depending on usage. It is advisable to get battery replaced from MARUTI SUZUKI Authorized workshop.



A CAUTION

Do not remove the screw from the key Unnecessarily as it damages the screw head. Kindly replace the screw once the transmitter battery is changed.

A CAUTION

Dispose off the used battery properly according to applicable rules or regulations. Do not dispose off lithium batteries with ordinary household trash.

WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.


TROUBLESHOOTING

SYMPTOMS	PROBABLE CAUSES	REMEDIES	
Transmitter function (Unlock/Lock/car locator function) not working	 Battery of the transmitter is weak. Transmitter is exposed to water or it is wet. D/L or Dome fuse for controller is blown in the vehicle. In case if any door is open or door sensor is shorted with the body ground, remote will not activate the central locking/ alarm system. 	 Check the battery. Dry the transmitter and check it. Check and replace the D/L or Dome fuse. Check if all doors are properly closed and door switch functioning is O.K. 	
Operation distance of the transmitter is less than 20m but still transmitter (Unlock/Lock/car locator function) is not working	Battery of the transmitter is weak. Strong RF interference. (e.g. Radio Towers, High Voltage Transmission line near by)	Check the battery. Drive the vehicle away from the particular spot and re-test the control distance.	
It is difficult to activate or deactivate the system in certain area using the transmitter.	The strong interference caused by excessive RF activity in a particular area	The interference is temporary and only while the vehicle is in that area.	
Alarm is not triggered even if any door(s)/ engine hood/tailgate opened in arm stage.	 The contact point of the door(s), front bonnet or rear boot switch is faulty. The connection of the door(s), front bonnet or rear boot switch is loose. 	Replace the defective Switch. Make proper connection.	
Siren does not sound when alarm is triggered.	 The connection of the siren wire is loose. Siren is faulty. 	Make proper connection. Change the siren.	

The driver's door has a switch (1) to oper-

Windows

Manual Window Control (if equipped)

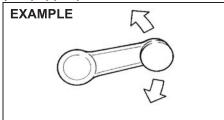


60G010

Raise or lower the door windows by turning the handle located on the door panel.

Electric Window Controls (if equipped)


The electric windows can only be operated when the ignition switch is in the "ON" position or the ignition mode is "ON".

Driver's side

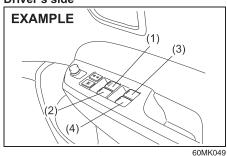


ate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

Passenger's door

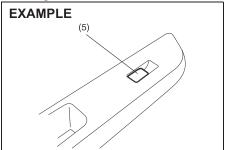

74LHT02

Each passenger's door has a switch (5) to operate the passenger's window.

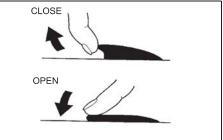


81A009

To open a window, push the top part of the switch and to close the window lift up the top part of the switch.

The driver's window has an "auto-down" feature for added convenience (at toll booths or drive-through restaurants, for example). This means you can open the window without holding the window switch in the "Down" position. Press the driver's window switch completely down and release it. To stop the window before it reaches the bottom, pull the switch up briefly.

Lock switch

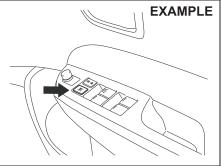

60MK05

The driver's door also has a lock switch for the passenger's windows. When you push in the lock switch, the passenger's windows cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5).

To restore normal operation, release the lock switch by pushing again.

▲ WARNING

- · You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, be sure no part of the occupant's body such as hands or head is in the path of the electric windows when closing them.
- Always remove the ignition key or take the keyless push start system remote controller with you when leaving the vehicle even if only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the electric window switches and get trapped by the window,

NOTE:


If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Mirrors

Inside Rearview Mirror


You can adjust the inside rearview mirror by hand so as to see the rear of your vehicle in the mirror.

 Type 1




74LHT0235

 Type 2



68LMT0205

 

(2) Day driving

(3) Night driving

To adjust the mirror, set the selector tab (1) to the day position, then move the mirror up, down or sideways by hand to obtain the best view

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

▲ WARNING

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.


Outside Rearview Mirrors

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

▲ WARNING

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.


Type 1

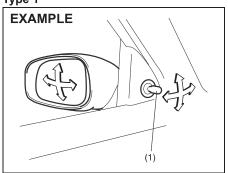

77J009

You can adjust the outside rearview mirrors by hand with the knob (1) located on the driver's or front passenger's door panel.

Type 2

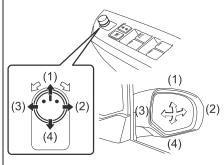


60MK051

The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in the "ACC" or "ON" position, or the ignition mode is "ACC" or "ON". To adjust the mirrors:

- Move the selector switch to the left or right to select the mirror you wish to adjust.
- Press the outer part of the switch that corresponds to the direction in which you wish to move the mirror.
- Return the selector switch to the center position to help prevent unintended adjustment.

Outside Rearview Mirrors Folding Switch (if equipped)

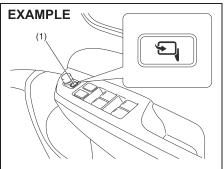

71L ST020

You can fold the mirrors when you park the vehicle in a narrow space. When the igni-

tion switch is in the "ACC" or "ON" position, or the ignition mode is "ACC" or "ON", push the folding switch (1) to fold and unfold the mirrors. Make sure the mirrors are completely unfolded before you start driving.

A CAUTION

Moving mirrors can pinch and injure a hand. Do not allow any one's hand to get near the mirrors when folding and unfolding the mirrors.

Front Seats

Seat Adjustment

WARNING

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.

WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

Adjusting Seat Position



60MH011

The adjustment lever for each front seat is located under the front of the seat. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.




60MH012

If the driver's seat is equipped with a seat height adjuster lever on the outboard side of the seat, raise or lower the seat by pulling up or down the adjuster lever.

Adjusting Seatbacks

WARNING


All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

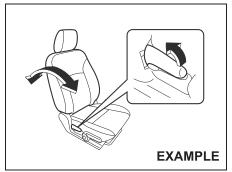

60MH013

To adjust the seatback angle of front seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

Head Restraints

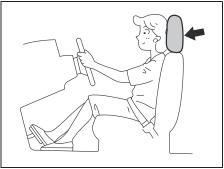

63J246

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

WARNING


- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint

2-25

Front

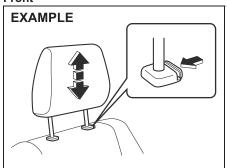

80JS082

To raise the front head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

Rear Seats

Seat Adjustment

▲ WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

Adjusting Seat Position (for 2nd row seats)



60MH014

The adjustment levers for 2nd row seats are located under the front of the seats. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

NOTICE


When the 3rd row seat is folded forward, adjust the 2nd row seat not to reach the 3rd row seat.

Adjusting Seatbacks

WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


For 2nd row seats

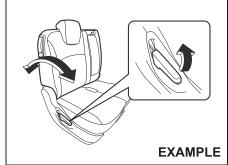

60MH01

To adjust the seatback angle of 2nd row seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.


Walk-in Type Seats (for 2nd row seats)

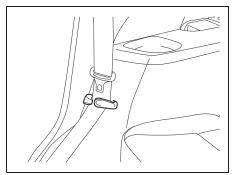

60MH016

NOTE:

To enter to or exit from the 3rd row seat, hook the webbing of the outboard lapshoulder belt of 2nd row seat before moving the 2nd row seat.

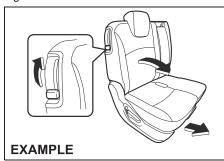

60MH017

The walk-in type seat can be moved to provide easy entry to and exit from the 3rd row seats. You can move a walk-in seat by pulling up the lever on the outboard side of the seatback and pushing the seatback forward.

WARNING

- After using the walk-in function, be sure to return the folded seatback to an upright position.
- Before returning a walk-in seat to its normal seating position, make sure that the feet of the passenger in the 3rd row seat are out of the way.
- · After returning the seat to its normal seating position, make sure it is securely latched.

Head Restraints (if equipped)

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

WARNING


- · Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.


Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

2nd row seats (if equipped)

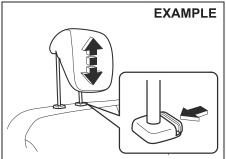

60MH018

3rd row seats (if equipped)

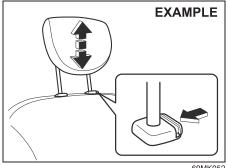

60MK052

To raise the rear head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.


When installing a child restraint system, raise the head restraint to the most upper position.

Folding Rear Seats

The rear seat of your vehicle can be folded forward to provide additional cargo space.

2nd row seats

To fold the 2nd row seat forward:

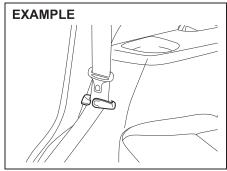


60MH016

1) Hook the webbing of the outboard lapshoulder belts in the belt hangers.

NOTICE

- When you move a seatback, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.
- 2) Lower the head restraint (if equipped) fully.
- 3) Store the seat belt buckles in the seat cushion slit.

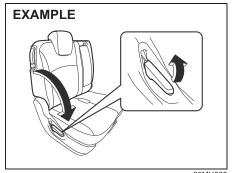

60MH060

4) Pull up the lever on the outboard side of the seat, and fold the seatback forward.


NOTICE

When the 2nd row seat head restraint reaches the front seatback, slide the front seat forward.

▲ WARNING

If you need to carry cargo in the passenger compartment with the 2nd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

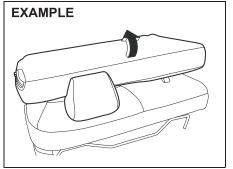

60MH061

Raise the seatback until it locks into place.

NOTE:

When the seatback is locked in the folded position, pull up the lever on the outboard side of the seat to unlatch the seatback.

After returning the seat, try moving the seatback to make sure they are securely latched.

3rd row seats


To fold the 3rd row seat(s) forward:

- Lower the head restraint (if equipped) fully.
- 2) Store the seat belt buckles in the seat cushion slit.

NOTICE


For type B seat, store both of the seat belt buckles in the seat cushion slit before folding seat(s). This helps prevent being dropped under the seat cushion.

Type A

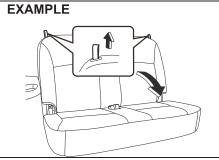

60MK053

Type B

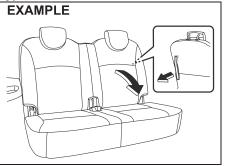

60MK05

 For type A seat, pull up the both release straps on the top of seat, and fold the seatback forward.

For type B seat, pull the release strap

on behind the seatback, and fold the seatback forward.

NOTICE


When the 3rd row seat head restraint reaches the 2nd row seatback, slide the 2nd row seat forward.

▲ WARNING

If you need to carry cargo in the passenger compartment with the 3rd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

Type A

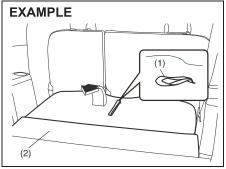


60MK025

Raise the seatback until it locks into place.

When you raise the seat from back of it, pull the strap (1).

Type B

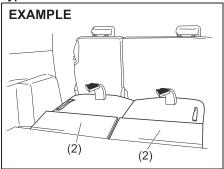

60MK055

Raise the seatback until it locks into place.

NOTICE

Do not pull the luggage flap (2) (if equipped) or place any luggage when the luggage flap is pull toward rear. Otherwise, the luggage flap (2) will be damaged.

After returning the seat, try moving the seatback to make sure they are securely latched.

Seat Belts and Child Restraint Systems



60MHM02002

WARNING

Wear Your Seat Belts at All Times.

WARNING


An air bag supplements, or adds to, the frontal crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.




65D606

WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted as follows:
- the lap portion of the belt should be worn low across the pelvis, not across the waist.
- the shoulder straps should be worn on the outside shoulder only, and never under the arm.
- the shoulder straps should be away from your face and neck, but not falling off your shoulder.
 (Continued)

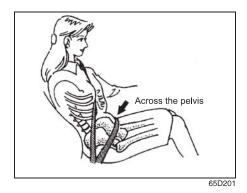

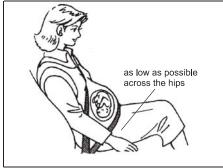

65D199

▲ WARNING

(Continued)

- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed.
 A slack belt will provide less protection than one which is snug.
- Make sure that each seat belt buckle is inserted into the proper buckle catch. It is possible to cross the buckles in the rear seat.

(Continued)

▲ WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the diagram.
- Do not wear your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.

(Continued)

WARNING

(Continued)

- Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children age 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.

(Continued)

WARNING

(Continued)

- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


Lap-Shoulder Belt

Emergency Locking Retractor (ELR)


The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this hap-

pens, let the belt go back to unlock it, then pull the belt across your body more slowly.

Safety reminder

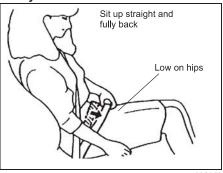


60A038

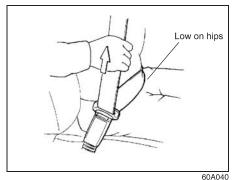

To reduce the risk of sliding under the belt during a collision, position the lap portion

of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.


All Seat Belts Except Center of 2nd Row Seat

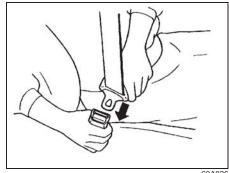

60A036

To fasten the seat belt, sit up straight and well back in the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a "click".

Sit up straight and well back in the seat. To

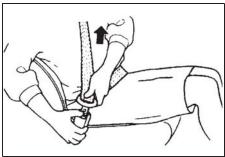

60A039


To unfasten the seat belt, push the button on the buckle and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

Center Seat Belt of 2nd Row Seat Lap belt




fasten the belt, pull the latch plate attached to the seat belt across your hips and press it straight into the buckle until you hear a "click". To reduce the risk of sliding under the belt during a collision, position the belt across your lap as low on your hips as possible and adjust it to a snug fit. To tighten the belt, pull the free end of the

belt across alongside the lap strap.

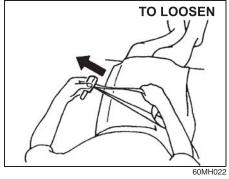

To lengthen, release the latch plate from the buckle, pull the latch plate (adjuster) in the direction of the arrow. The latch plate should then be refitted into the buckle and the belt tightened as previously described.

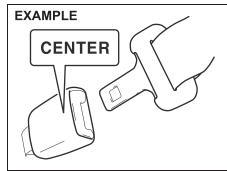


80J2008

NOTE:

The word "CENTER" is marked into the buckle for the rear center belt. The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

Driver's Seat Belt Reminder

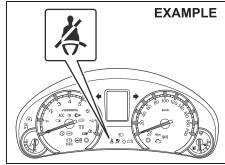

When the driver does not buckle his or her seat belt, the driver's seat belt reminder light in the instrument cluster will come on or blink and a buzzer will sound as a reminder to the driver to buckle his or her seat belt. For more details, refer to the explanation below.

If the driver's seat belt remains unbuckled when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", the reminder works as follows:

- The driver's seat belt reminder light will come on.
- After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- After step 2) has finished, the reminder light will remain on until the driver's seat belt is buckled.


If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from step 1) or step 2) according to the vehicle's speed. When the vehicle's speed is below about 15 km/h, the reminder will start from step 1). When the vehicle's speed is above about 15 km/h, the reminder will start from step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to "LOCK" (OFF).

WARNING

It is absolutely essential that the driver and passengers wear their seat belts at all times. Persons who are not wearing seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before putting the key in the ignition or pressing the engine switch.

Shoulder Anchor Height Adjuster (if equipped)

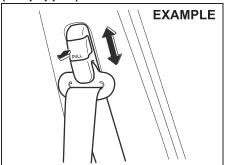


64.119

Adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To move upward, slide the anchor up. To move downward, slide the anchor down while pulling the lock knob out. After adjustment, make sure that the anchor is securely locked.

▲ WARNING

Be sure that the shoulder belt is positioned on the center of the outside shoulder. The belt should be away from your face and neck, but not falling off your shoulder. Misadjustment of the belt could reduce the effectiveness of the safety belt in a crash.

Seat Belt Hanger (for 2nd row seats)

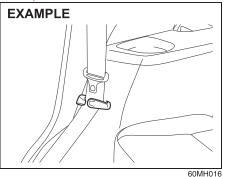


NOTF:

To enter to or exit from the 3rd row seat, hook the webbing of the outboard lapshoulder belt of 2nd row seat before moving the 2nd row seat.

2-34

Seat Belt Inspection

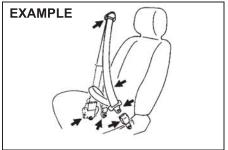

65D209S

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages, and guide loops. Replace any seat belts which do not work properly or are damaged.

▲ WARNING


Be sure to inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly which was not in use during a collision should be replaced if it does not function properly, it is damaged in any way or the seat belt pretensioners (if equipped) were activated (that is, if the front air bags were activated).

Child Restraint Systems




60G332S

Child restraint

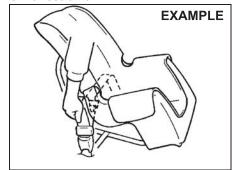


80JC016

Infant restraint - rear seat only

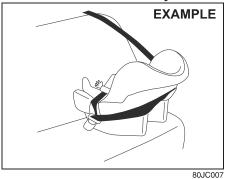

Booster seat

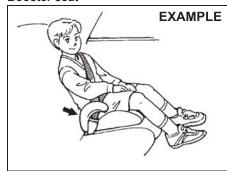

80JC008

Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; make sure that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats by either seat belts (lap belts or the lap portion of lap-shoulder belts). Whenever possible, vehicle recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

If you must use a front-facing child restraint in the front passenger's seat, adjust the passenger's seat as far back as possible.

NOTE:

Observe any statutory regulation about child restraints.



65D607

M WARNING

If your vehicle is equipped with a front passenger air bag, do not install a rear-facing child restraint in the front passenger's seat. If the passenger's air bag inflates, a child in a rearfacing child restraint could be killed or seriously injured. The back of a rear-facing child restraint would be too close to the inflating air bag.

WARNING

If you install a child restraint system in the 2nd row seat, slide the seat with child restraint system as far back as possible so that the child's feet do not contact the front seat-back. These will help avoid injury to the child in the event of an accident.



65D608



65D609

WARNING

Children could be endangered in a crash if their child restraint systems are not properly secured in the vehicle. When installing a child restraint system, be sure to follow the instructions below. Be sure to secure the child in the restraint system according to the manufacturer's instructions.

2-37

WARNING


In an accident or sudden stop, the rear seat armrest (if equipped) could fall forward. If there is a child in a rear-facing child restraint in the center seating position, the falling armrest could injure the child. Make sure the armrest is back in the seat when not in use.

Installation with Lap-Shoulder Seat Belts

NOTICE

Before installing a child restraint system in the rear seat, raise the head restraint (if equipped) to the most upper position.

ELR type belt

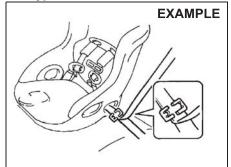


80JC021

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Make sure that the seat belt is securely latched.

Try to move the child restraint system in all directions to make sure it is securely installed.

Installation with a Lap Belt

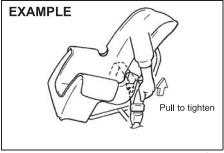

60G132

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

To lengthen or tighten the belt, refer to the "Lap-belt" item in this "Seat Belts and Child Restraint Systems" section. After making sure that the seat belt is securely latched, try moving the child restraint system in all directions, to make sure it is securely installed. If you need to tighten the belt, pull the free end of the webbing.

Child Restraint System for India Child Restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

	Seating position (or other site)				
MASS GROUP	Front Passenger	Rear Outboard	Rear Centre	Intermediate Outboard	Intermediate Centre
Group 0 Up to 10 kg	Х	Х	Х	U	Х
Group 0+ Up to 13 kg	×	Х	Х	U	Х
Group I 9 to 18 kg	×	Х	Х	U	Х
Group II 15 to 25 kg	Х	Х	Х	U	Х
Group III 22 to 36 kg	×	Х	Х	U	Х

Key of letters to be inserted in the above table:

U =Suitable for 'universal' category restraints approved for use in this mass group


X = Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE: 'universal' is the category in the AIS 072.

: 'Outboard' indicates window side seat.

Seat Belt Pretensioner System (if equipped)

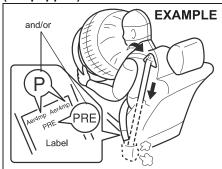

63J269

WARNING

This section of the owner's manual describes your vehicle's SEAT BELT PRETENSIONER SYSTEM. Please read and follow ALL these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, check the label on the front seat belt at the bottom part. If the letters "p" and/or "PRE" appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

Read this section and the "Supplemental Restraint System (air bags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the SUPPLEMENTAL RESTRAINT SYSTEM (Air Bags). The crash sensors and the electronic controller of the air bag system also control the seat belt pretensioners. When the air bags are triggered, the pretensioner are also triggered. For precautions and general information including servicing the pretensioner system, refer to the "Supplemental Restraint System (air bags)" section in addition to this "Seat Belt Pretensioner System" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal crash. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a crash.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the

belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to the "Seat Adjustment" section and the instructions and precautions about the seat belts in this "Seat Belts and Child Restraint Systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the air bags will activate in severe frontal collisions. They are not designed to activate in rear impacts, side impacts, rollovers, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the air bags are activated), have the pretensioner system serviced by an authorized MARUTI SUZUKI dealer as soon as possible.

If the "AIR BAG" light on the instrument cluster does not blink or come on briefly when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", stays on for more than 10 seconds, or comes on while driving, the pretensioner system or the air bag system may not work properly. Have both systems inspected by an authorized MARUTI SUZUKI dealer as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by an authorized MARUTI SUZUKI dealer who is specially trained. Improper service could result in unin-

tended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position or the ignition mode has been "LOCK" (OFF) for at least 90 seconds before performing any electrical service work on your vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your vehicle, ask your MARUTI SUZUKI dealer, body repair shop, or scrap yard for assistance.


Supplemental Restraint System (air bags)

▲ WARNING

This section of the owner's manual describes the protection provided by your vehicle's SUPPLEMENTAL RESTRAINT SYSTEM (air bags). Please read and follow ALL these instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a Supplemental Restraint System consisting of the following components in addition to a lapshoulder belt at each front seating position.

- 1. Driver's front air bag module
- Front passenger's front air bag module (if equipped)
- 3. Seat belt pretensioners (if equipped)
- 4. Air bag controller
- 5. Forward crash sensor

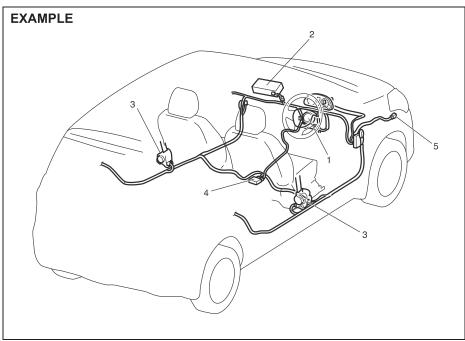


60MH069




If the "AIR BAG" light on the instrument cluster does not blink or come on when the ignition switch is first turned to the "ON" position, or the ignition mode is first changed to "ON", or the "AIR BAG" light stays on, or comes on while driving, the air bag system (or the seat belt pretensioner system) may not work properly. Have the air bag system inspected by an authorized MARUTI SUZUKI dealer as soon as possi-

Front Air Bags

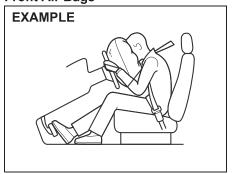


Driver's front air bag

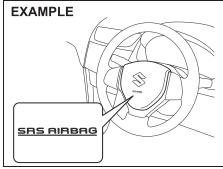

74LHT0217

Front passenger's front air bag (if equipped)

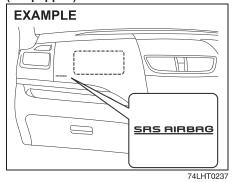


The driver's front air bag is located behind the center pad of the steering wheel and the front passenger's front air bag (if

equipped) is located behind the passenger's side of the dashboard. The words "SRS AIRBAG" are molded into the air bag covers to identify the location of the air

Conditions of front air bags deployment (inflation)



. In frontal collisions with a fixed wall that does not move or deform in more than about 25 km/h (15 mph)

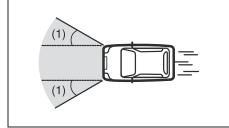

80J098E


• In collisions such as above at an angle of about 30 degrees (1) or less from the front

Conditions of front air bags may inflate Receiving a strong impact to the lower body of your vehicle, the front air bags will inflate in many cases.



80J099

· Hitting a curb or medial strip

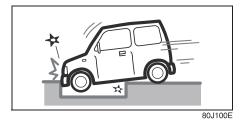

• Falling into a deep hole or ditch



 
80J101

 Landing hard or falling Front air bags may inflate in a strong impact



80J120

· Collision from the rear



· Collision from the side



· Vehicle rollover

 
Front air bags may not inflate

The front air bags may not inflate when the impact is absorbed since the collision object moved, vehicle body deformed, or collision angle was greater than about 30 degrees from the front.



80J102

• Approximately 50 km/h (30 mph) or lower speed frontal collision to a stopped vehicle




 Collision that the front of your vehicle goes under the bed of a truck etc.



80J104

 · Collision with a utility pole or stumpage




80J105E

· Collision with a fixed wall or guardrail at an angle of greater than about 30 degrees (1) from the front



80J106

 . In frontal collisions with a fixed wall that does not move or deform in less than about 25 km/h (15 mph)



80J107

 Collision angle is offset from the vehicle angle (offset collision)

Front air bags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Remember, since an air bag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an air bag is NOT a substitute for seat belts. To maximize your protection, ALWAYS WEAR YOUR SEAT BELTS. Be aware that no system can prevent all possible injuries that may occur in an accident.

WARNING

An air bag supplements, or adds to, the crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.



65D607

WARNING

Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front air bag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating air bag.

Please refer to "Seat Belts and Child Restraint Systems" in this section for details on securing your child.

Air bag symbol (if equipped) meaning



67LH029

You may find this label on the sun visor.

WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

▲ WARNING

If the AIR BAG light in the instrument cluster ever comes on and stays on, it means that something may be wrong with the air bag system. If this ever happens, have the vehicle serviced immediately, because the air bags may not offer the protection for which they were designed.

How the System Works

In a frontal collision, the crash sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal crash, the controller will trigger the inflators. The inflators inflate the appropriate air bags with nitrogen or argon gas. The inflated air bags provide a cushion for your head and upper body. The air bag inflates and deflates so quickly that you may not even realize that it has activated. The air bag will neither hinder your view nor make it harder to exit the vehicle.

Air bags must inflate quickly and forcefully in order to reduce the chance of serious or

fatal injuries. However, an unavoidable consequence of the quick inflation is that the air bag may irritate bare skin, such as the facial area against a front air bag. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some air bag components may be hot for a while after inflation.

A seat belt helps keep you in the proper position for maximum protection when an air bag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Please refer to the "Seat Adjustment" section and the "Seat Belts and Child Restraint Systems" in this section for details on proper seat and seat belt adjustments.



65061

WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard, or otherwise get too close to the dashboard. In these situations, the outof-position occupant would be too close to an inflating air bag, and may suffer severe injury.
- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the air bag and the driver or front passenger. These objects may interfere with air bag operation or may be propelled by the air bag in the event of a crash. Either of these conditions may cause severe injury.

Note that even though your vehicle may be moderately damaged in a collision, the collision may not have been severe enough to trigger the air bags to inflate. If your vehicle sustains ANY front-end or side damage, have the air bag system inspected by an authorized MARUTI SUZUKI dealer to ensure it is in proper working order.

Your vehicle is equipped with a diagnostic module which records information about the air bag system if the air bags deploy in a crash. The module records information

about overall system status, which sensors activated the deployment.

Servicing the air bag system

If the air bags inflate, have the air bags and related components replaced by an authorized MARUTI SUZUKI dealer as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the air bag controller could be damaged. If it does, have the air bag system inspected by the MARUTI SUZUKI dealer as soon as possible.

Special procedures are required for servicing or replacing an air bag. For that reason, only an authorized MARUTI SUZUKI dealer should be allowed to service or replace your air bags. Please remind anyone who services your vehicle that it has air bags.

Service on or around air bag components or wiring must be performed only by an authorized MARUTI SUZUKI dealer. Improper service could result in unintended air bag deployment or could render the air bag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the air bag system, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position or the ignition mode has been "LOCK" (OFF) for at least 90 seconds before performing any electri-

cal service work on your vehicle. Do not touch air bag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated air bag can be hazardous. Ask your dealer, body repair shop or scrap yard for help with disposal.


Instrument Cluster

- Speedometer
 Tachometer (if equipped)
 Fuel gauge

- 4. Temperature gauge5. Information display6. Trip meter selector knob

- 7. Indicator selector knob8. Warning and indicator lights


with tachometer

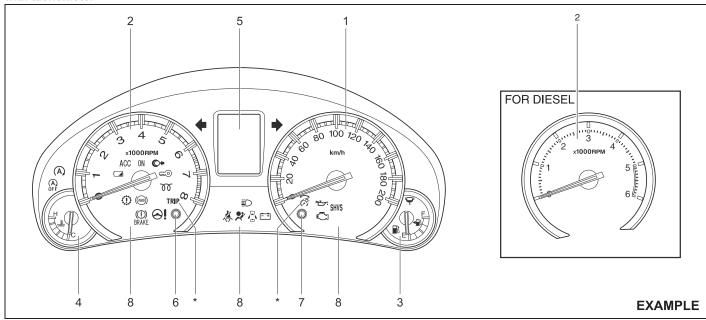

60MH115

^{*} These marks are explanation of the knobs 6 and 7. Refer to "Brightness Control" or "Information Display" in this section for detail of knobs.

without tachometer

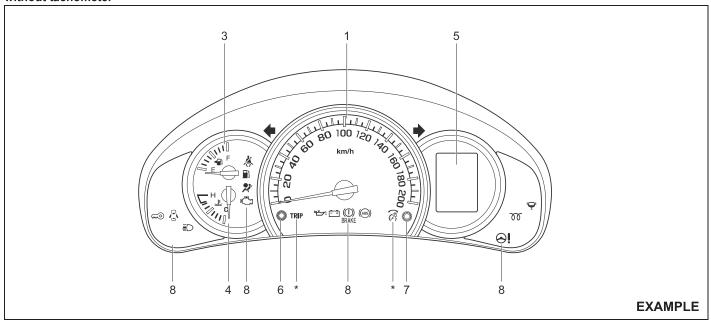

60MH105

^{*} These marks are explanation of the knobs 6 and 7. Refer to "Brightness Control" or "Information Display" in this section for detail of knobs.

Warning and Indicator Lights Brake System Warning Light



65D477

Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".
- The light comes on when the parking brake is engaged with the ignition switch in the "ON" position or the ignition mode "ON".
- The light comes on when under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system. If this happens, you should:

1) Pull off the road and stop carefully.

WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- 2) Test the brakes by carefully starting and stopping on the shoulder of the road.
 - If you determine that it is safe, drive cautiously at low speed to the nearest dealer for repairs, or
 - Have the vehicle towed to the nearest dealer for repairs.

WARNING

If any of the following conditions occur, you should immediately ask your MARUTI SUZUKI dealer to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

(Parking Brake Reminder Buzzer)

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Anti-Lock Brake System (ABS) Warning Light (if equipped)



65D529

When the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", the light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to "LOĆK" or change the ignition mode to "LOCK" (OFF) by pressing the engine switch and then start the engine again.

If the warning light comes on briefly then turns off, the system is normal. If the warning light still stays on, the system will be something wrong.

If the light and the brake system warning light stay on, or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both

the rear brake force control function and anti-lock function of the ABS system.

If one of these happens, have the system inspected by your MARUTI SUZUKI dealer.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Anti-Lock Brake System (ABS) (if equipped)" in the "OPERATING YOUR VEHICLE" section.

Oil Pressure Light



50G051

This light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", and goes out when the engine is started. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

 
Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by your MARUTI

SUZUKI dealer before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result,
- Do not rely on the oil pressure light to indicate the need to add oil. Be sure to periodically check the engine oil level.

Charging Light



50G052

This light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", and goes out when the engine is started. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by your MARUTI SUZUKI dealer.

Driver's Seat Belt Reminder Light



60G049

When the driver doesn't buckle his or her seat belt, this light will come on and/or blink.

For details about the seat belt reminder, refer to "Seat Belts and Child Restraint Systems" in this section.

"AIR BAG" Light



63J030

This light blinks or comes on for several seconds when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" so you can check if the light is working.

The light will come on and stay on if there is a problem in the air bag system or the seat belt pretensioner system (if equipped).

▲ WARNING

If the "AIR BAG" light does not blink or come on briefly when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", stays on for more than 10 seconds, or comes on while driving, the air bag system or the seat belt pretensioner system (if equipped) may not work properly. Have both systems inspected by an authorized MARUTI SUZUKI dealer.

Malfunction Indicator Light



65D53

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument panel to indicate when it is necessary to have the emission control system serviced. The malfunction indicator light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" to let you know the light is working and goes out when the engine is started.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to your MARUTI SUZUKI dealer to have the damage fixed.

Also, if this light comes on when the engine is running, there is the problem with the automatic transaxle system. Ask your MARUTI SUZUKI dealer to have the system inspected.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transaxle Warning Light (if equipped)



81A262

This light comes on briefly when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" so you can check the light is working.

2-50

If this light comes on when the engine is running, there is the problem with the automatic transaxle system. Ask your MARUTI SUZUKI dealer to have the system inspected.

 
Immobilizer/Keyless Push Start System Warning Light



80.IM122

When the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", the light comes on briefly so you can check that the light is working. If this light stays on, there is a problem with the system.

Open Door Warning Light



54G39

 For vehicles without keyless entry system or keyless push start system; This light remains on until all front doors and the tailgate are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

 For vehicles with keyless entry system or keyless push start system;

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low Fuel Warning Light



54G343

If this light comes on, fill the fuel tank immediately.

When this light comes on, a ding sounds once to remind you to fill the fuel.

If you do not fill the fuel, a ding sounds every time when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

Electric Power Steering Light



79.103

This light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", and goes out when the engine is started.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by your MARUTI SUZUKI dealer.

NOTE:

Following operations of the steering wheel while parking or driving at a very low-speed may have steering effort bigger gradually. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent them from overheating.

The steering wheel is operated very often.

• The steering wheel is kept in a fully turned position for a long while.

When the power steering control system cool down, the power steering system back to the original condition.

However, repeating these operations could cause the power steering system damaged.

 
NOTE:

If the power steering system does not work properly, you will feel heavier to steer but you still will be able to steer.

NOTE:

If the steering is operated, you may hear a noise. This is normal and indicates that the power steering system works properly.

Turn Signal Indicators



50G05

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.

Main Beam (high beam) Indicator Light



50G056

This indicator comes on when headlight main beams (high beams) are turned on.

Fuel Filter Warning Light (For Diesel Engine Model)



60A541

This light comes on for several seconds when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" so you can check the light is working.

If the light comes on when driving, there is a possibility to have water in the fuel filter. Drain water as soon as possible. For details of draining water, refer to "Fuel Filter" in the "INSPECTION AND MAINTENANCE" section.

Glow Plug Indicator Light (For Diesel Engine Model)



60A543

If the coolant temperature is cool enough, this light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" and goes out when the glow plug is heated enough for engine starting.

NOTE:

Following the repair on engine control unit (ECU) in the starting system, the glow plug indicator light comes on for approximately 10 seconds before the engine starts. This is not the engine malfunction.

Keyless Push Start System Remote Controller Battery Consumption Warning Light (if equipped)



70K122

If the remote controller becomes unreliable, this light comes on for several seconds when the engine switch is pressed to change the ignition mode to "ON".

"PUSH" Indicator Light (if equipped)



82K174

If this light comes on when depressing the brake pedal for automatic transaxle vehicles, or the clutch pedal for manual transaxle vehicles, you can start the engine.

"ACC" Indicator Light (if equipped)

ACC

82K097

This light comes on when the ignition mode is "ACC".

Ignition "ON" Indicator Light (if equipped)

01

82K098

This light comes on when the ignition mode is "ON" with the engine off.

"SHVS" Indicator Light (if equipped)

SHVS

79MH10205

This light comes on for several seconds when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" so you can check that the light is working.

While you are driving the vehicle, when deceleration energy regenerating function, engine power assist function or starter motor function is activated, this indicator light will come on.

"ENG A-STOP" Indicator Light (if equipped)



72M00032

When the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", this light comes on briefly to let you know the light is working.

When the engine is stopped by the "ENG A-STOP" system, this light comes on.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" in the "OPERATING YOUR VEHICLE" section.

"ENG A-STOP OFF" Light (if equipped)



72M00159

When the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to


"ON", this light comes on briefly to let you know the light is working.

When you push the "ENG A-STOP OFF" switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by an authorized MARUTI SUZUKI dealer.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" and "SHVS (Smart Hybrid Vehicle by Maruti Suzuki)" in the "OPERATING YOUR VEHICLE" section.


Speedometer

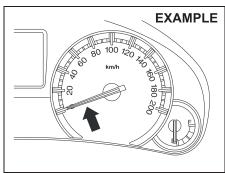

68LM223

The speedometer indicates vehicle speed in km/h.

Tachometer (if equipped)

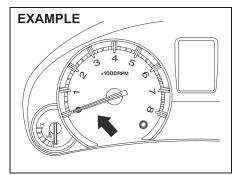

68LM224


The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position.

Refer to "Downshifting maximum allowable speeds" in the "OPERAT-ING YOUR VEHICLE" section.

Fuel Gauge

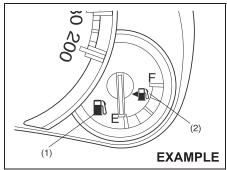

74LHT0220

When the ignition switch is in the "ON" position or the ignition mode is "ON", this gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

If the indicator gets off the graduation of "E" (not character "E"), refill the tank as soon as possible.

NOTE:

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

If the low fuel warning light (1) comes on, fill the fuel tank immediately.

When the low fuel warning light (1) comes on, a ding sounds once to remind you to fill the fuel.


If you do not fill the fuel, a ding sounds every time when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to "ON".

NOTE:

The activation point of the low fuel warning light (1) varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

Temperature Gauge

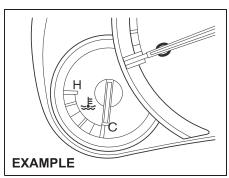


74LHT0221

When the ignition switch is in the "ON" position or the ignition mode is "ON", this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between "H" and "C". If the indicator approaches "H", overheating is indicated. Follow the instructions for engine overheating in the "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Brightness Control

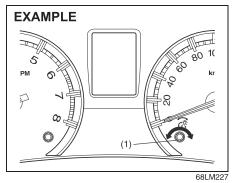

When the ignition switch is turned to the "ON" position or the engine switch is


pressed to change the ignition mode to "ON", the pointer lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

When the position lights and/or headlights are ON, you can control the meter illumination intensity.

To increase the brightness of the instrument panel lights, turn the brightness control knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the brightness control knob (1) counterclockwise.

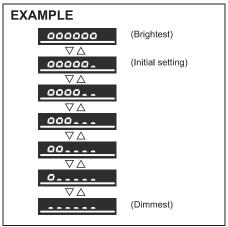

60MH025

60M-74E BEFORE DRIVING

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.


Do not attempt to adjust the display while driving.

NOTE:


- If you do not turn the brightness control knob within about 10 seconds of activating the brightness control display, the brightness control display will be canceled automatically.
- When you reconnect the battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.

Information Display

with tachometer

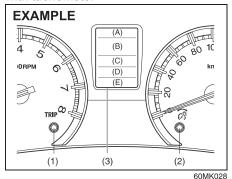

without tachometer

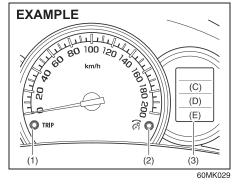

- (1) Trip meter selector knob
- (2) Indicator selector knob
- (3) Information display

When the ignition switch is in the "ON" position or the ignition mode is "ON", the information display shows the following information.

Display (A)

Thermometer (if equipped)

Display (B)

Transaxle selector position indicator (for automatic transaxle vehicle) / Gearshift indicator (if equipped)

Display (C)

Trip meter / Instantaneous fuel consumption / Average fuel consumption / Driving range

 
Display (D) Odometer

Display (E) Clock

Thermometer (if equipped)

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (A) shows the thermometer.

The thermometer indicates the outside temperature.



If the outside temperature nears freezing, the mark (a) will appear on the display.


NOTE:

- The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.
- If there is something wrong with the thermometer, or just after the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", the display may not indicate the outside temperature.

BEFORE DRIVING 60M-74E

When the display (C) shows the driving range, you can change the unit of temperature.

To change the unit of temperature, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).

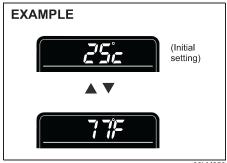


68LM259

NOTE:

When you reconnect the negative (–) terminal to the battery, the unit of temperature will be reinitialized. Change the unit again to your preference.

 Transaxle selector position indicator (for automatic transaxle vehicles) / Gearshift indicator (if equipped)



Transaxle selector position indicator

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (B) indicates the gear position (b). For details on how to use the transaxle, refer to "Using the Transaxle" in the "OPERATING YOUR VEHICLE" section.


Gearshift indicator

Refer to "Gearshift Indicator" in the "OPERATING YOUR VEHICLE" section.

Trip meter / Instantaneous fuel consumption / Average fuel consumption / Driving range

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (C) shows one of the following five indications, trip meter A, trip meter B, Instantaneous fuel consumption, Average fuel consumption or Driving range.

To switch the display indication (C), push the trip meter selector knob (1) or the indicator selector knob (2) quickly.

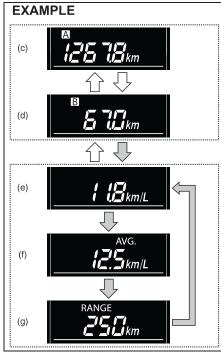

71LMT0204

҈≎	Push the knob (1).	trip meter	selector
⊕⊕	Push the knob (2).	indicator	selector

60M-74E BEFORE DRIVING

- (c) Trip meter A
- (d) Trip meter B
- (e) Instantaneous fuel consumption
- (f) Average fuel consumption
- (g) Driving range

▲ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

NOTE:

- Indications will change when you push and release a knob.
- The display shows estimated values. Indications may not be the same as actual values.

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use the trip meter A or trip meter B independently.

To reset the trip meter to zero, push and hold the trip meter selector knob (1) for a while when the display shows the trip meter.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Instantaneous fuel consumption

The display shows the value of instantaneous fuel consumption only when the vehicle is moving.

NOTE:

- The display does not show the value unless the vehicle is moving.
- The indicated maximum value of instantaneous fuel consumption is 30. No more than 30 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.
- You can change the units that instantaneous fuel consumption is displayed in. Refer to "Average fuel consumption" in this section.

Average fuel consumption


If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON". Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption which includes average fuel consumption during previous driving.

To reset the average fuel consumption to zero, push and hold the indicator selector knob (2) for a while when the display shows the average fuel consumption.

NOTE:

When you reset the indication or reconnect the negative (–) terminal to the battery, the value of average fuel consumption will be shown after driving for a while.

To change the unit of average fuel consumption, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).

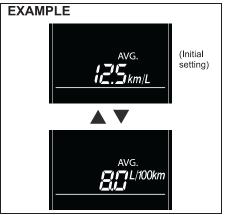

68LM262

NOTE:

 When you change the units that average fuel consumption is displayed in, the

2-58

BEFORE DRIVING 60M-74E

instantaneous fuel consumption units will be changed automatically.

 When you reconnect the negative (-) terminal to the battery, the unit of the average fuel consumption will be reinitialized. Change the unit again to your preference.

Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions.

When the low fuel warning light comes on, the display "---" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

As the driving range after refueling is calculated based on the most recent driving condition, the value is different each time you refuel.

NOTE:

- If you refuel when the ignition switch is in the "ON" position or the ignition mode is "ON", the driving range may not indicate the correct value.
- When you reconnect the negative (–) terminal to the battery, the value of driving range will be shown after driving for a while.

Odometer

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (D) shows the odometer.

The odometer records the total distance the vehicle has been driven.

NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Clock

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (E) shows the time.

To change the time indication:

- Push the trip meter selector knob (1) and the indicator selector knob (2) together.
- 2) To change the hour indication, turn the indicator selector knob (2) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (2). To set the hour indication, push the indicator selector knob (2) and the minute indication will blink.
- 3) To change the minute indication, turn the indicator selector knob (2) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (2). To set the minute indication, push the indicator selector knob (2).

▲ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

NOTE:

When you reconnect the negative (–) terminal to the battery, the clock indication will be reinitialized. Change the indication again to your preference.


BEFORE DRIVING 60M-74E

Setting Mode (if equipped)
In the setting mode, you can set up the following functions.

Indica	ition	Functions
→ door =		Automatic door locking function "ﷺ"
	d3	Automatic door unlocking function "⊿∃"
•	d5	Door locking and unlocking siren " 45"
LI ChE =	<u> </u>	Additional flashes of the turn signal "¿¿"

BEFORE DRIVING 60M-74E

Indic	ation	Functions
1 5ECU-Y =	57	Shock sensor "52"
	53	Pre-warning sensitivity of the shock sensor "53"
A	54	Full blast warning sensitivity of the shock sensor "54"
defall =	dE-an	Initialization setting "dE-an"
→ End		Exit the setting mode "End"

 

NOTE:

Depending on vehicle's specifications, some items may not be displayed.

How to operate the setting mode:

- When the ignition mode is "ON" and the vehicle is stationary, push the trip meter selector knob (1) to switch the information display indication (C) to the trip meter.
- 2) Push and hold the indicator selector knob (2) until the display shows "dagr".
- Turn and/or push the indicator selector knob (2) to select a function that you want to set up according to the above chart.
- Turn and/or push the indicator selector knob (2) to register settings of the following functions.

Automatic door locking function "do"

- d2-5L /: Disable the automatic door locking function
- d2-5L2: Lock all doors when the vehicle speed reaches 15 km/h (default setting)

Automatic door unlocking function "⊿∃"

- d3-5L /: Disable the automatic door unlocking function (default setting)
- d3-5L3: Unlock all doors when the ignition mode is changed to "LOCK" (OFF)

60M-74E BEFORE DRIVING

Door locking and unlocking siren " 45"

- d5-5L/: Siren sounds when the doors (including the tailgate) are locked or unlocked by using the keyless push start system remote controller or request switch (default setting)
- d5-5L2: Siren does not sound when the doors (including the tailgate) are locked or unlocked by using the keyless push start system remote controller or request switch

Additional flashes of the turn signal "¿¿"

- L2-5L /: Turn signal flashes three times after the turn signal lever is returned (default setting)
- ¿2-5¿2: Disable the additional flashes of turn signal

Shock sensor "5₽"

- 52-51 /: Enable the shock sensor
- 52-5L2: Disable the shock sensor (default setting)

Pre-warning sensitivity of the shock sensor "53"

- 53-L@@: Disable the pre-warning
- 53-L0 / to L /5:

Adjust the pre-warning sensitivity of shock sensor (Lowest sensitivity level is L01 and

highest is L15, and default setting is L14)

Full blast warning sensitivity of the shock sensor "54"

- 54-L@@: Disable the full blast warning
- 54-L0 / to L /5:

Adjust the full blast warning sensitivity of shock sensor (Lowest sensitivity level is L01 and highest is L15, and default setting is L09)

Initialization setting "ﷺ"

• dE-an: Initialize all settings

EXAMPLE


AB - 51 - 51 - 5

76MH0017

NOTE:

- As shown in the above illustration,
 AB "indicates on the display of currently setting item.
- To go back to the higher level display during operation, turn the indicator selector knob (2) to display "ԵR[H" or "-ԵR[" and then push the indicator selector knob (2).
- 5) To exit the setting mode, switch the display to show " \mathcal{E}_{rd} " and then push the indicator selector knob (2).

Lighting Control Lever

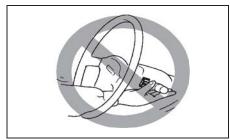


65D611

▲ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Lighting Operation

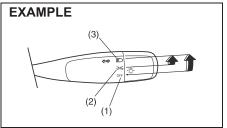

60MK01

To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

2-62

BEFORE DRIVING 60M-74E

OFF (1)


All lights are off.

<u>-00€ (2)</u>

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

≣○ (3)

Front position lights, tail lights, license plate light, instrument lights and headlights are on.

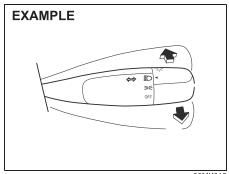

60MK012


With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument panel will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever

slightly toward you and release it when you have completed the signal.

Light Reminder Buzzer

A buzzer sounds to remind you to turn off the lights if they are left on when the ignition key is removed or the engine switch is pressed to change the ignition mode to "LOCK" (OFF), and the driver's door is opened.

Front Fog Light Switch (if equipped)

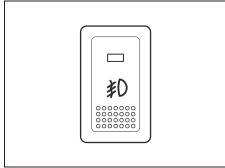


64,1058

The front fog light comes on when the fog light switch is pushed in with the position lights, tail lights and/or the headlights are on. An indicator light above the switch will be lit when the front fog light is on.

NOTE:

In some countries the lighting operation may be different from the above description according to local regulations.

Headlight Leveling Switch

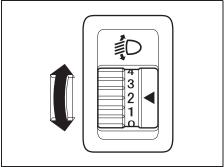


80JM040

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart below shows the appropriate switch position for different vehicle-load conditions.

BEFORE DRIVING 60M-74E

Loading Conditions	Switch Position
Driver (1 Seat)	0
Driver + Co-Driver (2 Seats)	0
Driver + Co-Driver + 2nd row 3 Seats (Total-5 Seats)	1
All Passengers + Cargo (Evenly distrib- uted load in luggage boot)	2
Driver + Cargo (Evenly distributed load in luggage boot)	3

Turn Signal Control Lever

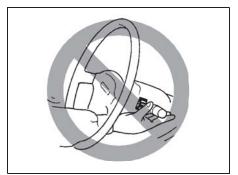


65D611

▲ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.


Turn Signal Operation
With the ignition switch in the "ON" position or the ignition mode "ON", move the lever up or down to activate the right or left turn signals.

Normal turn signal

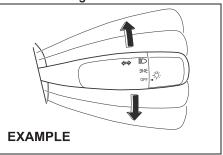

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

Lane change signal

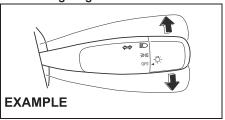

60MK014

BEFORE DRIVING 60M-74E

Sometimes, such as when changing lanes, the steering wheel is not turned far enough to cancel the turn signal. For convenience, you can flash the turn signal by moving the lever part way and holding it there. The lever will return to its normal position when you release it.

NOTE:

The turn signal and its indicator flash three times even if you return the lever immediately after moving it.


NOTE:

For vehicles with the keyless push start system, the turn signal and its indicator can be set whether they flash three times after the turn signal lever is returned via the information display. Refer to "Information Display" in this section.

NOTE:

You can customize the setting for the number of times of flashing of the turn signal and its indicator. Please ask an authorized MARUTI SUZUKI dealer for the customization.

Hazard Warning Switch

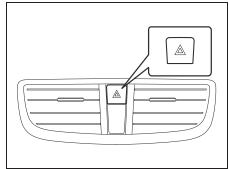


74LHT0229

Push in the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other traffic during emergency parking or when your vehicle could otherwise become a traffic hazard.

Windshield Wiper and Washer Lever

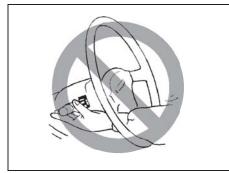

57L21128

M WARNING


To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and Washer Operation

When the ignition switch is in the "ON" position or the ignition mode is "ON", you can use the wiper/washer lever or switch (if equipped).

60M-74E BEFORE DRIVING

Windshield Wipers

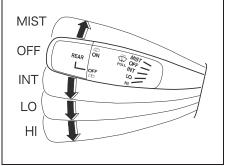


74LHT0230

To turn the windshield wipers on, move the lever down to one of the three operating positions. In the "INT" position, the wipers operate intermittently. The "INT" position is very convenient for driving in mist or light rain. In the "LO" position, the wipers operate at a steady low speed. In the "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to the "OFF" position.

Move the lever up and hold it to the "MIST" position, the windshield wipers will turn on continuously at low speed.

Windshield Washer

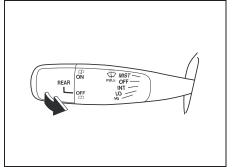

74LHT0231

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and the "INT" position is equipped.

▲ WARNING

- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.


NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.

BEFORE DRIVING 60M-74E

Rear Window Wiper/Washer Switch (if equipped)

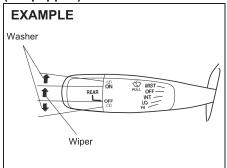

74LHT0232


To turn the rear wiper on, twist the rear wiper switch on the end of the lever forward to the "ON" position. To turn the rear wiper off, twist the switch rearward to the "OFF" position.

To spray window washer fluid, twist the switch rearward from the "OFF" position, or twist the switch forward from the "ON" position. The rear wiper will turn on automatically while spraying the window washer fluid.

NOTICE

Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

Tilt Steering Lock Lever

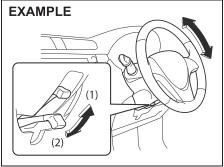

74LHT0333


- (1) LOCK (2) UNLOCK
- The lock lever is located under the steering column. To adjust the steering wheel height:
- 1) Push down the lock lever to unlock the steering column.

- Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- Try moving the steering wheel up and down to make sure it is securely locked in position.

▲ WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.

Horn

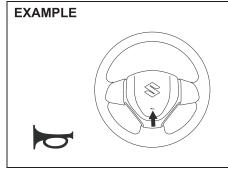


68LM240

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position or any ignition mode.

BEFORE DRIVING 60M-74E

Heated Rear Window Switch (if equipped)

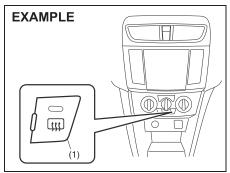

When the rear window is misted, push this switch (1) to clear the window.


An indicator light will be lit when the defog-ger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.

NOTICE

The heated rear window uses a large amount of electricity. Be sure to turn off after the window has become clear.

NOTE:

- The defogger will work only when the engine is running.
 The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the battery.

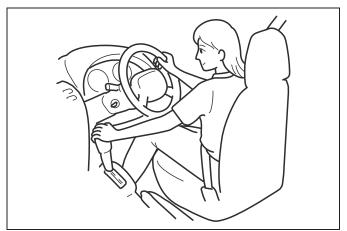


60MHMT3001

OPERATING YOUR VEHICLE

Exhaust Gas Warning3-	-1
Daily Inspection Checklist 3-	-1
Engine Oil Consumption3-	-2
Ignition Switch	
(Vehicle without Keyless Push Start System) 3-	-3
Engine Switch	
(Vehicle with Keyless Push Start System) 3-	-4
Keyless Push Start System (if equipped)3-	-5
Parking Brake Lever3-	-8
Pedal 3-	-9
Starting the Engine	
(Vehicle without Keyless Push Start System) 3-	-10
Starting the Engine	
(Vehicle with Keyless Push Start System)3-	-11
Using the Transaxle3-	-15
Gearshift Indicator (if equipped) 3-	-18
SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped) 3-	-20
ENG A-STOP System	
(Engine Auto Stop Start System) (if equipped)3-	-21
Parking Sensors (if equipped)3-	-23
Rearview Camera (if equipped)3-	-27
Braking3-	-29

Exhaust Gas Warning

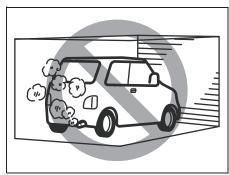

52D334

WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, be sure to take the following precautions to help prevent carbon monoxide from entering your vehicle.

• Do not leave the engine running in garages or other confined areas.

(Continued)

WARNING

(Continued)

- Do not park with the engine running for a long period of time, even in an open area. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to "FRESH AIR" and the blower is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to operate the vehicle with the tailgate or trunk open, make sure the sunroof (if equipped) and all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grille in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leaks.
 Any damage or leaks should be repaired immediately.

Daily Inspection Checklist

Before Driving



60A187S

- Make sure that windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tires for the following points:
- the depth of the tread groove
- abnormal wear, cracks and damage
- loose wheel nuts
- existence of foreign material such as nails, stones, etc.

Refer to "Tires" in "INSPECTION AND MAINTENANCE" section for details.

3) Look for fluid and oil leaks.

NOTE

It is normal for water to drip from the air conditioning system after use.

- 4) Make sure the hood is fully closed and latched.
- Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint (if equipped).
- Check the brake pedal and the parking brake lever.
- 8) Adjust the mirrors.
- Make sure that you and all passengers have properly fastened your seat belts.
- 10)Make sure that all warning lights come on as the key is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".
- 11)Check all gauges.
- 12)Make sure that the BRAKE SYSTEM WARNING light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery solution level
- 5) Windshield washer fluid level
- 6) Hood latch operation

Pull the hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Be sure to close the hood securely after check-

ing for proper latch operation. See the item "All latches, hinges and locks" of "CHASSIS AND BODY" in the "Periodic Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section for lubrication schedule.

WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tire pressure using a tire pressure gauge. Also check the tire pressure of the spare tire.

Engine Oil Consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumed depends on the viscosity of the oil, the quality of the oil and the conditions the vehicle is driven under.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil

consumption only after approximately 5000 km driving.

Oil consumption: Max. 1.0 L per 1000 km

When judging the amount of oil consumption, note that the oil may become diluted and make it difficult to accurately judge the true oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km (600 miles) or more of driving. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.


Ignition Switch (Vehicle without Keyless Push Start System)



65D611

▲ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

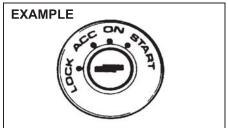


60B041

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

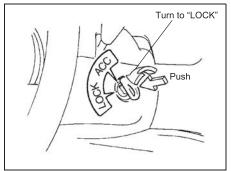

60G033

Manual transaxle vehicles

You must push in the key to turn it to the "LOCK" position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

Automatic transaxle vehicles

The gearshift lever must be in the "P" (Park) position to turn the key to the "LOCK" position. It locks the ignition and prevents normal use of the steering wheel and gearshift lever.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON

This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.



81A297S

WARNING

- Never return the ignition switch to the "LOCK" position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.
- Always return the ignition switch to the "LOCK" position and remove the ignition key when leaving the vehicle even if only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle or could tamper with power windows or power sunroof. They also could suffer from heat stroke in warm or hot weather. These could result in severe injury or even death.


NOTICE

- Do not use the starter motor for more than 12 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult your MARUTI SUZUKI dealer.
- Do not leave the ignition switch in the "ON" position if the engine is not running as the battery will discharge.

NOTICE

If you stop the engine while the vehicle is in motion, the automatic transaxle may be damaged. Avoid stopping the engine while driving.

Engine Switch (Vehicle with Keyless Push Start System)

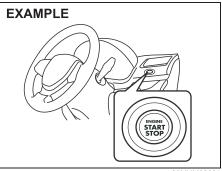

60MHM02001

LOCK (OFF)

This mode is for parking the vehicle. When this mode is selected by pressing the engine switch and then any door (including the tailgate) is opened or closed, the steering will be locked automatically.

ACC

Press the engine switch to select this ignition mode to use such electric equipment

as the audio system, outside rearview mirrors and accessory socket with the engine off. When this position is selected, the "ACC" indicator light in the instrument cluster comes on. Refer to "Warning and Indicator Lights" in the "BEFORE DRIVING" section for details.

ON

· With the engine off

You can use such electric equipment as the power windows and wipers with the engine off. When this ignition mode is selected by pressing the engine switch, the ignition "ON" indicator light in the instrument cluster will come on.

With the engine on

All electric equipment is operational. The vehicle can be driven when you have selected this ignition mode by pressing the engine switch.

START

Automatic transaxle — Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after placing the gearshift lever in the "P" position and depressing the brake pedal. (If you need to re-start the engine while the vehicle is moving, shift into "N".)

Manual transaxle – Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to

select this ignition mode after shifting to "N" (Neutral) and depressing the brake and clutch pedals.

NOTE:

You do not need to keep the engine switch pressed to start the engine.

NOTICE

Do not leave the engine switch in the "ACC" or "ON" mode when the engine is not running. Avoid using the radio or other electric accessories for a long time when the engine switch is in the "ACC" or "ON" mode when the engine is not running, otherwise the battery may discharge.

NOTE:

- The steering lock may not be released if some load is acting on the steering wheel. If this happens, turn the steering wheel to the right or left to relieve it from the load before you press the engine switch again to change to the desired ignition mode.
- In the presence of strong radio signals or noise, you may not be able to change the ignition mode to "ACC" or "ON" or to start the engine using the engine switch.

Keyless Push Start System (if equipped)

Provided the keyless push start system remote controller is within the "interior workable area" (refer to the related explanation in this section), you can use the engine switch for starting the engine and selecting an ignition mode ("ACC" or "ON"). In addition, the following functions can be used:

 
- Keyless entry function. Refer to "Keyless Push Start System Remote Controller" in the "BEFORE DRIVING" section for details.
- Locking and unlocking doors (including the tailgate) using a request switch. Refer to "Keyless Push Start System Remote Controller" in the "BEFORE DRIVING" section for details.
- Immobilizer (anti-theft) function. Refer to "Immobilizer System" in the "BEFORE DRIVING" section for details.

Engine Switch Illumination

The engine switch is illuminated (lit) in the following situations:

- When the engine is off and the driver's door is open, or for 15 seconds after the driver's door is closed. The illumination will fade out after the 15 seconds past.
- When the engine is off and the position lights are on. The illumination will go out when the position lights are turned off.
- When the engine is on and the position lights and/or the headlights are on. The

illumination will go out when the position lights and/or the headlights are turned off.



82K253

NOTE:

To save the battery, the illumination will be automatically turned off when both of the following conditions are simultaneously met:

- The headlights and position lights are turned off.
- A period of 15 minutes has elapsed after opening the driver's door.


Selection of Ignition Modes

Press the engine switch to select the "ACC" or "ON" mode as follows when you use an electric accessory or check the operation of instruments without running the engine.

- Bring the keyless push start system remote controller with you and sit in the driver's seat.
- 2) Manual transaxle Without depressing the clutch pedal, press the engine


switch (1).

Automatic transaxle - Without depressing the brake pedal, press the engine switch (1).

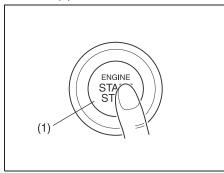


82K254

Every time you press the engine switch, the ignition mode changes as follows.

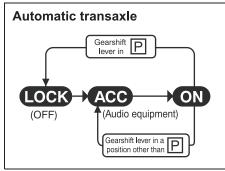

57L31006

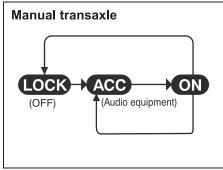


57L31033

NOTE:

Automatic transaxle – If the gearshift lever is in any position other than "P", or if the knob button is pushed when the gearshift lever is in "P" position the ignition mode cannot be returned to "LOCK" (OFF).

If the "PUSH" indicator light blinks and the ignition modes cannot be selected

Your keyless push start system remote controller may not be sensed as being within the "interior workable area" (refer to the related explanation in this section). Try again after making sure you have the remote controller with you. If the ignition modes still cannot be selected, the battery of the remote controller may be discharged. To be able to select an ignition mode, you must then use the following method:

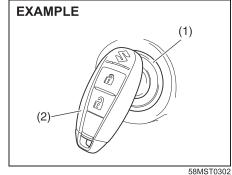

- 1) Without depressing the brake pedal and the clutch pedal, push the engine switch (1).
- 2) Within about 10 seconds during which the "PUSH" indicator light in the instrument cluster is blinking, touch the engine switch with the "LOCK" button end of the remote controller (2) for about 2 seconds.

NOTE:

- · If you still cannot select the ignition modes, there may be some problems with the keyless push start system. Contact an authorized MARUTI SUZUKI dealer for an inspection of the system.
- The immobilizer/kevless push start svstem warning light come on for about 5 seconds while the "PUSH" indicator light is blinking. Refer to "Warning and Indica-


- tor Lights" in the "BEFORE DRIVING" section for details.
- · You may customize the system to cause the interior buzzer to sound once for the "remote controller out of sensing range" warning. To incorporate this customization, please contact an authorized MAR-UTÍ SUZUKI dealer.
- · If the battery of the remote controller is about to become completely discharged, the keyless push start system remote controller battery consumption warning light in the instrument cluster will come on for a few seconds when you press the engine switch to change the ignition mode to "ON". Refer to "Warning and Indicator Lights" in the "BEFORE DRIVING" section for details. For details on replacing the battery, refer to the "Keyless Push Start System Remote Controller" in the "BEFORE DRIVING" section.

"Remote Controller Outside" Warn-

When the conditions described below are met, the system gives a "remote controller outside" warning by sounding the interior and exterior buzzers and blinking the immobilizer/keyless push start system warning light.

· Any door is opened and then closed while the remote controller is not inside the vehicle and the engine is running or the ignition mode has been changed to

- "ACC" or "ON" by pressing the engine
- The remote controller is not inside the vehicle when you attempt to start the engine after changing the ignition mode to "ACC" or "ON" by pressing the engine switch.

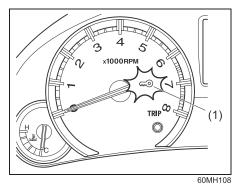


(1) Immobilizer/keyless push start system warning light (blinks)

NOTE:

- If the warning is given, locate the remote controller as soon as possible.
- · Any attempt to start the engine will fail while the warning is active. Blinking of the immobilizer/keyless push start system warning light in the instrument cluster will indicate this condition. Refer to "Warning and Indicator Lights" in the "BEFORE DRIVING" section for details.

- Blinking of the immobilizer/kevless push start system warning light should stop shortly after the remote controller is brought back inside the vehicle. If the immobilizer/kevless push start system warning light does not stop blinking, change the ignition mode to "LOCK" (OFF) by pressing the engine switch and then perform the engine starting opera-
- Always keep the remote controller with you as the driver.

 Interior Workable Area for Engine Starting, Ignition Mode Selection and "Remote Controller Outside" Warning



61MM0B002


(1) Interior workable area

The "interior workable area" for these functions is defined as all the interior spaces except for the space above the instrument panel.

NOTE:

- Even when the remote controller is in the "interior workable area", if it is in any of the following conditions, you may not be able to start the engine or select the ignition modes, and the "remote controller outside" warning may be given.
- The remote controller's battery is low.
- The remote controller is affected by strong radio signals or noise.
- The remote controller is in contact with or covered by a metallic object.
- The remote controller is in stowage like the glove box or a door pocket.
- The remote controller is in the sun visor pocket or on the floor.
- Even when the remote controller is outside the "interior workable area", if it is in any of the following conditions, you may be able to start the engine or select the ignition mode. The "remote controller outside" warning may not be given at that time.
- The remote controller is outside the vehicle but very close to a door.
- The remote controller is on the instrument panel.

Parking Brake Lever

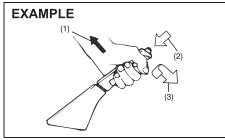

60MHM03001

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the seats. To set the parking brake, hold the brake pedal down and pull the parking brake lever all the way up. To release the parking brake, hold the brake pedal down, pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

For automatic transaxle vehicles, always set the parking brake before moving the gearshift lever to the "P" (PARK) position. If you park on an incline and shift into "P" before setting the parking brake, the weight of the vehicle may make it difficult to shift out of "P" when you are ready to drive the vehicle.

When preparing to drive the vehicle, move the gearshift lever out of the "P" position before releasing the parking brake.

▲ WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by an authorized MARUTI SUZUKI dealer.

WARNING

Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, make sure the gearshift lever for manual transaxle vehicles is in 1st gear or "R" (Reverse) and the gearshift lever for automatic transaxle vehicles is in "P" (Park). Remember, even though the transaxle is in gear, you must set the parking brake fully.

WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:


- 1) Set the parking brake.
- Manual transaxle turn off the engine, then shift into reverse or first gear.
 - Automatic transaxle shift into "P" (Park) and turn off the engine.
- 3) Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake. When you return to your vehicle, you must remember to first set the parking brake, then remove the wheel chocks.

Parking Brake Reminder Buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.


Pedal

Manual transaxle

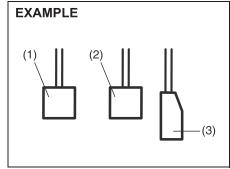

80J2121

Automatic transaxle

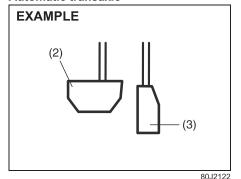

Clutch Pedal (1) (for manual transaxle)

The clutch pedal is used to disengage the drive to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal (2)

Your MARUTI SUZUKI vehicle is equipped with front disc brakes and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as cold, wet, snow, etc.

MARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by your MARUTI SUZUKI dealer.

▲ WARNING


Do not "ride" the brakes by applying them continuously or resting your foot on the pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal (3)

This pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

Starting the Engine (Vehicle without Keyless Push Start System)

Before Starting the Engine

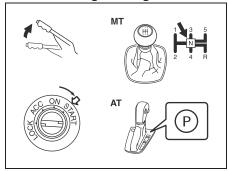

1) Make sure the parking brake is set fully. tral) and depress the clutch pedal all

2) Manual transaxle - Shift into "N" (Neuthe way to the floor. Hold the clutch pedal while starting the engine.

Automatic transaxle – If the gearshift lever is not in "P" (Park) position, shift into "P" (Park). (If you need to re-start the engine while the vehicle is moving, shift into "N".)

NOTE:

Automatic transaxle vehicles have a starter interlock device which is designed to keep the starter from operating if the transaxle is in any of the drive positions.

WARNING

Make sure that the parking brake is set fully and the transaxle is in Neutral (or Park for vehicles with an automatic transaxle) before attempting to start the engine.

Starting a Cold and Warm Engine (For Petrol Engine Model)

With your foot off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key when the engine starts.

NOTICE

- Stop turning the starter immediately after the engine has started or the starter system can be damaged.
- Do not crank the engine for more than 12 seconds at a time. If the engine doesn't start on the first try, wait about 15 seconds before trying again.

If the engine does not start after 12 seconds of cranking, wait about 15 seconds. then press down the accelerator pedal to 1/3 of its travel and try cranking the engine again. Release the key and accelerator pedal when the engine starts.

If the engine still does not start, try holding the accelerator pedal all the way to the floor while cranking. This should clear the engine if it is flooded.

(For Diesel Engine Model)

Cold engine

Turn the ignition switch to the "ON" position and wait until the glow plug indicator goes out if it comes on. Crank the engine by turning the ignition key to "START". Release the key when the engine starts.

NOTICE

- Stop turning the starter immediately after the engine has started or the starter system can be damaged.
- Do not crank the engine for more than 30 seconds at a time. If the engine doesn't start on the first try, wait about 15 seconds before trying again.

Warm engine

Crank the engine by turning the ignition key to "START". Release the key when the engine starts.

Caution when stopping the engine with turbocharger

When stopping the engine after climbing or high speed driving, let the engine idle for about one minute or more (if it is not prohibited) to cool down the turbocharger and engine oil. This is to prevent the engine oil from over-deteriorating. Deteriorated engine oil will damage the bearings of the turbocharger.

Restarting diesel engine after fuelempty stop

If the engine stops and the low fuel warning light and the malfunction indicator light come on, use the following procedure:


- 1) Fill the fuel tank.
- 2) Hold the ignition key in "ON" position for 5-10 seconds to feed fuel.

3) Perform above engine starting procedure to start the engine.

If the malfunction indicator light still comes on after the engine started, there may be some problem with the engine. Ask your MARUTI SUZUKI dealer to have the engine inspected.

Starting the Engine (Vehicle with Keyless Push Start System)

Before Starting the Engine

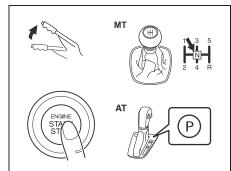


60MH101

- 1) Make sure the parking brake is set fully.
- Manual transaxle Shift to "N" (Neutral) and fully depress the clutch pedal. Hold the clutch and brake pedals fully depressed.

Automatic transaxle – If the gearshift lever is not in the "P" (Park) position,

shift it to "P". Hold the brake pedal fully depressed.

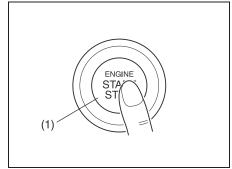

82K254

 The "PUSH" indicator light in the instrument cluster will come on. Push the engine switch (1). When the engine is started, the starter motor will automatically stop.

WARNING

Make sure that the parking brake is set fully and the transaxle is in Neutral (or Park for vehicles with an automatic transaxle) before attempting to start the engine.

NOTICE

- Do not depress the accelerator during the engine starting procedure.
- If the engine does not respond when you try to start it with the engine switch or if the engine switch repeats cycling through the "LOCK"(OFF) - "ACC" - "ON" mode, the vehicle battery may be discharged. Check the voltage of the vehicle battery before trying again.

NOTE:

- You do not need to keep the engine switch pressed to start the engine.
- The engine of a manual transaxle vehicle will not start unless the clutch pedal is depressed.
- Automatic transaxle vehicles have a starter interlock device which is designed to keep the starter from operating if the transaxle is in any of the drive positions.
- You should turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- Even if you fail to start the engine, the starter motor will stop turning automatically after a short time. After the starter motor has stopped or if there is some problem with the system, the starter

motor will rotate only while the engine switch is being pressed.

Stopping the Engine

- Depress the engine switch to stop the engine after the vehicle stopped completely.
- In case of emergency, you can stop the engine by quickly pushing the engine switch more than 3 times, or pushing and holding the engine switch more than 2 seconds while the vehicle in motion.

NOTE:

Except in emergency, do not stop the engine while the vehicle in motion.

The steering and braking operation will require more efforts when the engine stopped.

Refer to "Braking" in this section.

NOTICE

If you stop the engine while the vehicle is in motion, the automatic transaxle may be damaged.

Avoid stopping the engine while driving.

 If the engine has been stopped and stayed as it as for while after the engine was stopped unexpectedly or was raced before stopped, a clicking sound may be heard from around the engine when engine restarted. This is not a malfunction. In this case, always let the engine idle before stop it.

Starting a Cold and Warm Engine (For Petrol Engine Model)

With your foot off the accelerator pedal, crank the engine by pressing the engine switch to change the ignition mode to "START".

NOTICE

Do not crank the engine for more than 12 seconds at a time. If the engine doesn't start on the first try, wait about 15 seconds before trying again.

After pressing the engine switch to change the ignition mode to "START", the starter cranks the engine for about 12 seconds before it can start the engine. If the engine fails to start at the first attempt, wait about 15 seconds, then try again while keeping the engine switch pressed while pressing down the accelerator pedal to 1/3 of its travel. Release the accelerator pedal when the engine starts.

If the engine still does not start, try holding the accelerator pedal all the way to the floor while cranking. This should clear the engine if it is flooded.

If you are unable to start the engine using this procedure, consult your MARUTI SUZUKI dealer.

(For Diesel Engine Model)

Cold engine

Depress the clutch and brake pedals fully and press the engine switch to crank the engine. If the glow plug indicator light comes on, the engine will start automatically after the glow plug indicator light goes off or 10 seconds past.

NOTICE

Do not crank the engine for more than 30 seconds at a time.

If the engine doesn't start on the first try, wait about 15 seconds before trying again.

Warm engine

Crank the engine by pressing the engine switch to change the ignition mode to "START"

Caution when stopping the engine with turbocharger

When stopping the engine after climbing or high speed driving, let the engine idle for about one minute or more (if it is not prohibited) to cool down the turbocharger and engine oil. This is to prevent the engine oil from over-deteriorating Deteriorated engine oil will damage the bearings of the turbocharger.

Restarting diesel engine after fuelempty stop


If the engine stops and the low fuel warning light and the malfunction indicator light come on, use the following procedure:

- 1) Fill the fuel tank.
- 2) Press the engine switch to change the ignition mode to "ON" for 5-10 seconds to feed fuel.
- 3) Perform above engine starting procedure to start the engine.

If the malfunction indicator light still comes on after the engine started, there may be some problem with the engine. Ask your MARUTI SUZUKI dealer to have the engine inspected.

If the "PUSH" indicator light blinks and the engine cannot be started

Your keyless push start system remote controller may not be sensed as being within the "interior workable area". Try again after making sure that you have the remote controller with you. If the engine still cannot be started, the battery of the remote controller may be discharged. You must then use the following method to be able to start the engine.

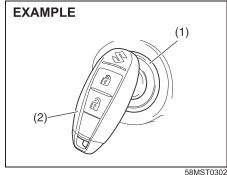

- 1) Make sure the parking brake is set fully.
- 2) Manual Transaxle Shift to "N" (Neutral) and fully depress the clutch pedal. Hold the clutch and brake pedals fully depressed.
 - Automatic transaxle If the gearshift lever is not in the "P" (Park) position, shift it to "P". Hold the brake pedal fully depressed.
- 3) The "PUSH" indicator light in the instrument cluster will come on. Press the engine switch (1).
- 4) Within about 10 seconds of blinking of the "PUSH" indicator light in the instrument cluster, touch the engine switch with the "LOCK" button end of the remote controller (2) for about 2 seconds.

NOTF:

- If you still cannot start the engine after several attempts using the above method, there may be a problem elsewhere, such as a low battery. Contact your MARUTI SUZUKI dealer for inspection.
- The immobilizer/keyless push start system warning light come on for about 5 seconds while the "PUSH" indicator light is blinking.
- You may customize the system to cause the interior buzzer to sound once for the "remote controller out of sensing range" warning. Please contact an authorized MARUTI SUZUKI dealer for the customization.
- If the battery of the remote controller is about to be completely discharged, the keyless push start system remote controller battery consumption warning light in the instrument cluster will come on for a few seconds when the ignition mode is changed to "ON" by pressing the engine switch. For details on replacing the battery, refer to the "Keyless Push Start System Remote Controller" in the "BEFORE DRIVING" section.

Returning the Ignition Mode to "LOCK" (OFF)

Automatic transaxle — To ensure safety, the ignition mode can be returned to "LOCK" (OFF) by pressing the engine switch only when the gearshift lever is

placed in the "P" position without pressing the knob button.

NOTE:

In the case of an automatic transaxle model, the engine cannot be returned to the "LOCK" (OFF) position if the gearshift lever is in any other position than "P".

Certain problems like a fault in engine system may prevent the engine switch from going back to the "LOCK" (OFF) mode. If this happens, have the vehicle inspected by an authorized MARUTI SUZUKI dealer after doing the following:

- Lock the doors using the key to prevent theft. (The request switches and the keyless push start system remote controller cannot be used to lock them.)
- Disconnect the negative cable from the battery to prevent discharge.

"LOCK" (OFF) mode reminder buzzer

If the driver's door is opened without returning the ignition mode to "LOCK" (OFF) by pressing the engine switch, a buzzer sounds to warn you of this state.

- If you open the driver's door after pressing the engine switch to change the ignition mode to "ACC", the interior buzzer beeps intermittently.
- The buzzer will stop sounding if you then push the engine switch twice, thus bringing it back the ignition mode to "LOCK" (OFF).

NOTE:


Whenever you leave the vehicle, make sure you have returned the ignition mode to "LOCK" (OFF) using the engine switch and then lock the doors. Without returning the ignition mode to "LOCK" (OFF), you cannot use a request switch or keyless push start system remote controller to lock the doors.

Steering lock warning buzzer

If the steering lock fails to engage due to a fault in the system when the ignition mode is turned to "LOCK" (OFF) by pressing the engine switch and then any door (including the tailgate) is opened or closed, the interior buzzer will warn you of this condition with repeated short beeps. If this happens, have the vehicle inspected by an authorized MARUTI SUZUKI dealer.

Using the Transaxle

Manual Transaxle

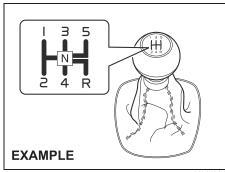

68LM324

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized, which provides for quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed does not rise into the red zone of the tachometer.

Downshifting maximum allowable speeds

For Petrol engine

Downshifting	Km/h
2nd to 1st	10
3rd to 2nd	40
4th to 3rd	58
5th to 4th	Any speed is OK

For Diesel engine

Downshifting	Km/h
2nd to 1st	12
3rd to 2nd	45
4th to 3rd	71
5th to 4th	Any speed is OK

*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

When downshifting to a lower gear, make sure not to downshift at the speed faster than the maximum allowable speeds, or severe engine damage can result.

▲ WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, be sure to slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.


NOTICE

Make sure that the vehicle is completely stationary before you shift into reverse.

NOTICE


- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

4-Speed Automatic Transaxle

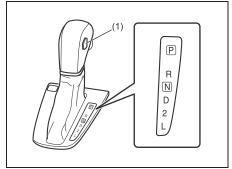

58MS20301

(1) Overdrive off switch

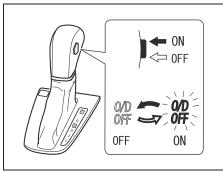

58MS20302

Overdrive off switch

The transaxle is a 4-speed (3-speed plus overdrive) automatic transaxle. By operating the overdrive off switch, the transaxle can be converted to a 3-speed automatic transaxle that will not move to the overdrive mode. To convert the transaxle to the 3-speed mode, push in the overdrive off switch and release it.


To return the transaxle to the 4-speed mode, push in the overdrive off switch again.

When the ignition switch is turned to the "ACC" position, the transaxle in the 3-speed mode is converted to the 4-speed mode automatically.

The 3-speed mode is suitable for the following driving conditions:

- Driving on hilly, winding roads
 - You can drive more smoothly with less frequent gear changing
- Going down a steep hill
- Some engine braking is provided

Gearshift lever

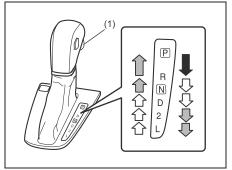

58MS20303

(1) knob button

The gearshift lever is designed so that it cannot be shifted out of the "P" position unless the ignition switch is in the "ON" position and the brake pedal is depressed.

A WARNING

Always depress the brake pedal before shifting from "P" (Park) (or "N" (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.

The gearshift lever has a lock mechanism to help prevent accidental shifting. To shift the gearshift lever:

•	Shift with the knob button (1) pushed in and the brake pedal depressed.
⊕₽	Shift with the knob button (1) pushed in.
҈≎	Shift without the knob button (1) pushed in.

NOTE:

- Always shift the gearshift lever without pushing in the knob button (1) except when you shift from "P" to "R", from "D" to "2", from "2" to "L", from "N" to "R" or from "R" to "P". If you always push in the knob button (1) when shifting the gearshift lever, you could shift into "P", "R", "2". or "L" by mistake.
- If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.

Use the gearshift lever positions as described below:

P (Park)

Use this position to lock the transaxle when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

N (Neutral)

Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

D (Drive)

Use this position for all normal driving.

With the gearshift lever in "D" range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

2 (Low 2)

Use this position to provide extra power when climbing hills, or to provide engine braking when going down hills.

L (Low 1)

Use this position to provide maximum power when climbing steep hills or driving through deep snow or mud, or to provide maximum engine braking when going down steep hills.

NOTE:


If you move the gearshift lever to a lower gear while driving faster than the maximum allowable speed for the lower gear, the transaxle will not actually downshift until your speed drops below the maximum speed for the lower gear.

NOTICE

Be sure to take the following precautions to help avoid damage to the automatic transaxle:

- Make sure that the vehicle is completely stationary before shifting into "P" or "R".
- Do not shift from "P" or "N" to "R", "D", "2", or "L" when the engine is running above idle speed.
- Do not rev the engine with the transaxle in a drive position ("R", "D", "2", or "L") and the front wheels not moving.
- Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.

If You Cannot Shift Automatic Transaxle Gearshift Lever Out of "P" (PARK)

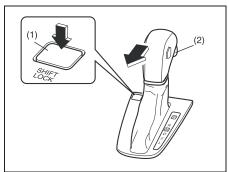

71LS10309


Vehicles with an automatic transaxle have an electrically operated park-lock feature. If the vehicle's battery is discharged, or there is some other electrical failure, the automatic transaxle cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transaxle out of Park.

- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- 3) Make sure the key is in the "ON" or "ACC" position.

4) With the release button (1) pushed, push the knob button (2) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to your dealer for repair.

Gearshift Indicator (if equipped)

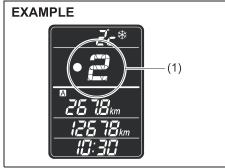

79MH10301

(1) Gearshift indicator

In the following cases, the gearshift indicator is indicated on the information display when the ignition switch is in the "ON" position or the ignition mode is "ON".

• When the gearshift lever is in a position other than "N" (Neutral).

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow and the gear position other than currently selected are indicated on the display while driving, we recommend you to shift up or down the gear to indicated position. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transaxle, refer to "Using the Transaxle" in this section

▲ WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:

 The gearshift indicator is not indicated when the gear position is in "N" (Neutral).

- If you depress the clutch pedal while UP/ DOWN arrow is indicated, the indication will disappear.
- If you release your foot from the accelerator pedal while UP arrow is indicated, the indication will display the currently selected gear position.
 The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine reven
- the same vehicle speed and engine revolution.

Example of the gearshift indicator

Indication	Description
^4	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended. • In this case, shifting up to 4th gear position is recommended.
•3	Current gear position is optimal for the vehicle speed and/or engine revolution. • In this case, 3rd gear position is the best.
-2	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended. • In this case, shifting down to 2nd gear position is recommended.

SHVS (Smart Hybrid Vehicle by Maruti Suzuki) (if equipped)

SHVS has an Integrated Starter Generator (ISG) instead of conventional generator to get a better fuel consumption.

Integrated Starter Generator (ISG) is a generator which incorporated a motor function.

The ISG has the following 3 functions.

- Deceleration energy regenerating function
- Engine power assist function
- Starter motor function

Deceleration Energy Regenerating Function

While decelerating your vehicle, the ISG generates electricity without engine power. This reduces engine loads and improves fuel consumption.

While decelerating your vehicle, deceleration energy regenerating function will be activated when the following conditions are satisfied.

- Gearshift lever is not in "N" (Neutral).
- · Clutch pedal is not depressed.

NOTE:

The deceleration energy regenerating function may not work depending on vehicle conditions.

3-20

Engine Power Assist Function

While the vehicle is running, ISG assists engine power as a motor in the following limited condition. This reduces engine loads and improves fuel consumption.

While the vehicle is running with the engine speed at approximately 2500 rpm or less, engine power assist function will be activated when all of the following conditions are satisfied.

- SHVS system and ENG A-STOP system are working properly. ("ENG A-STOP OFF" indicator light is not blinking.)
- Brake pedal is not depressed.
- · ABS (if equipped) is not activated.
- Accelerator pedal is depressed slightly for acceleration.
- Battery is fully charged and the battery inside temperature is in normal condition.
- Engine coolant temperature is in normal condition.
- · Headlights are off.

NOTE:

- The engine power assist function may not work while the battery capacity is being checked right after the engine start, and so on.
- The subjective feeling of the horn sound and A/C blower speed is likely to be different when the deceleration energy regenerating function and engine power assist function are active.

Starter Motor Function

After the engine auto stop by the ENG A-STOP system, the engine will be restarted using a cranking power of the ISG.

The starting with the ISG is quiet compared with starting by the conventional starter motor.

"SHVS" Indicator Light

SHVS

79MH1020


"SHVS" indicator light will come on during operation of deceleration energy regenerating function, engine power assist function or starter motor function.

Refer to "Warning and Indicator Lights" in the "BEFORE DRIVING" section for details.

ENG A-STOP System (Engine Auto Stop Start System) (if equipped)

The ENG A-STOP system (Engine Auto Stop Start System) automatically stops and restarts the engine without operating the ignition switch or the engine switch when the vehicle is stopped, such as at a traffic signal or in a traffic jam, to reduce exhaust gases and fuel consumption.

 When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, turn the ignition switch to the "LOCK" position or press the engine switch to stop the engine.

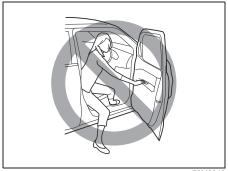

72M2042

▲ WARNING

- Do not go out the vehicle when the engine is stopped by the ENG A-STOP system. If the driver's seat belt is unfastened and the driver's door is opened, the engine will stall.
- When the engine does not restart automatically even if you operate properly, start the engine using the ignition switch or engine switch.
- In such situation, stopping on the road may result in rear collision
- In case the vehicle moves, the steering and braking operation will require more efforts, since the engine is turned off.

NOTICE

Only use the vehicle battery type (Exide Conservo DIN70) that have been approved by MARUTI SUZUKI vehicle manufacture, otherwise you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult your authorized MARUTI SUZUKI dealer.

The ENG A-STOP system is automatically activated when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".


The system activation also requires the following conditions:

- Driver's seat belt is fastened.
- Driver's door is closed.
- Engine hood is closed.

For more details, refer to the explanation below.


Automatically Stopping the Engine

1) With the clutch pedal fully depressed, stop the vehicle.

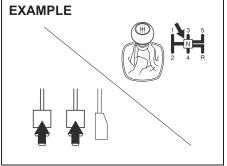

60MH102

2) While depressing the brake and clutch pedal, place the gearshift lever in the "N" (Neutral) position.

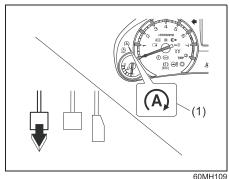

3) Release the clutch pedal. The "ENG A-STOP" indicator light (green) (1) in the instrument cluster will illuminate and the engine will stop automatically.

NOTICE

The brake booster becomes inoperative and the pedal effort will increase when the engine is stopped automatically. If the vehicle is moving, press down the brake pedal harder than usual.

NOTE:

The ENG A-STOP system will not operate and engine does not stop automatically under the following conditions:

• The "ENG A-STOP OFF" switch is pressed to deactivate the ENG A-STOP system.

• The "ENG A-STOP OFF" light blinks.


- Engine coolant temperature is either low or hiah.
- · Vehicle battery performance is low.
- The temperature of the vehicle battery is either low or high.
- Brake booster vacuum pressure is low.
- · Depressing the accelerator pedal.
- During or after the ABS system (if equipped) is activated, and the vehicle is stopped.
- · During the first period use, to initialize the system.
- After the engine restarted automatically, and the vehicle speed had not exceeded approximately 3 km/h.
- When the engine is started with the hood
- The vehicle is being driven at an altitude of approximately 2500m and above.

If the vehicle is unattended for more than two weeks, the engine should run for more than 20 minutes continuously to reactivate the ENG A-Stop system.

Depending on battery condition, the engine may have to run for longer duration also. In case the system still does not respond, you may contact nearest authorised Maruti Suzuki workshop.

If the engine is started with hood open, ignition must be switched "OFF" once after closing the hood to activate ENG A-STOP system.

Automatically Restarting the Engine

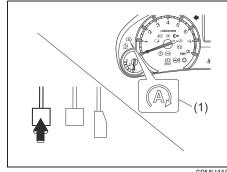

Depress the clutch pedal while the gearshift lever is in the "N" (Neutral) position. "ENG A-STOP" indicator light (green) (1) in the instrument cluster will be turned off and the engine will restart automatically.

To maximize the benefit from ENG A-STOP system, it is advised that you wait to depress the clutch pedal until you are about to move the vehicle.

NOTICE

The ENG A-STOP system will not operate and engine does not restart automatically or the engine stalls with warning buzzer under the following conditions:

- Driver's seat belt is not fastened and driver's door is open.
- Engine hood is open.
- If the gearshift lever is moved to a position other than the "N" (Neutral) position without depressing the clutch pedal.

When the engine stalled, restart the engine by usual operation.

Refer to "Starting the Engine" in this section for details.

NOTE:

If the engine stalls by a rapid clutch operation, the engine will restart with the gear positioned "N" (neutral) and the clutch pedal deeply depressed.

NOTE:

Under the following conditions, the engine will restart automatically even if the engine was stopped by the ENG A-STOP system:

- When the vehicle coasts down a slope.
- An engine stopped, and approximately 3 minutes passed.
- Brake booster vacuum pressure is low.
- Vehicle battery performance is low.


- Electric power consumption is high, such as when the heated rear window switch (if equipped) is "ON" or other electrical components (audio, air conditioning etc.) are operating.
- The "ENG A-STOP OFF" switch is pressed to deactivate the ENG A-STOP system.
- Engine coolant temperature is low.

NOTE:

When the engine restarts, the sound of the audio may be interrupted.

This is normal and not the malfunction of the audio system.

To Deactivate the ENG A-STOP System

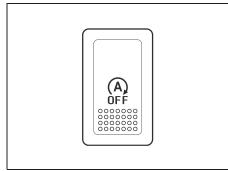

61MM0A10

Push the "ENG A-STOP OFF" switch until the "ENG A-STOP OFF" light comes on.

"ENG A-STOP OFF" Light

If the "ENG A-STOP OFF" light blinks when driving, there may be something wrong with the ENG A-STOP system. You should have the system inspected by an authorized MARUTI SUZUKI dealer. For details, refer to "Warning and Indicator Lights" in the "BEFORE DRIVING" section.


Parking Sensors (if equipped)

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumpers. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obstacle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.
- The parking sensor function can be used when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", the gearshift lever is in the "R" position and the parking sensor switch is in the "ON" position. This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

WARNING

- · The parking sensor warns you of obstacles with buzzers. However, you must still pay full attention yourself while driving.
- The sensors can detect obstacles only within a limited area and only when the vehicle is moving slowly. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor. Parking sensor is only for driver assistance.

Sensor Locations

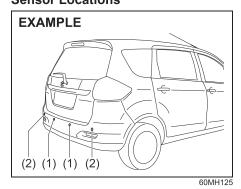

(1) Rear center sensors (2 places)

(2) Rear corner sensors (2 places)

NOTICE


- · Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas, Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by an authorized MARUTI SUZUKI dealer.

Working sensors

The sensors that work depends on the position of the gearshift lever as follows:

	earshift lever		Manual transaxle		uto- natic nsaxle
posi	lion	R	N, 1st – 5th	R	N, D, 2 or L
Rear	Center	On	Off	On	Off
sensors	Corner	On	Off	On	Off

Approximate areas where obstacles can be detected

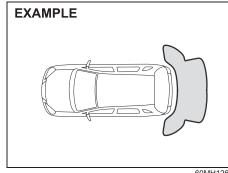

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- · The sensors can detect an obstacle up to about 1.5 m (5 ft) from the rear of vehicle.

WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
- Sensors are covered with mud, ice or other materials (Such materials must be removed for normal operation.)
- Sensors are wet from water splashes or heavy rain.
- Sensors are covered by a hand. sticker, accessory, etc.
- There is an accessory or other object attached within the sensor's sensing area.
- Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
- The height of the bumper is changed due to alteration to the suspension or other causes.
- The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
- The vehicle is on a rough surface, slope, gravel road or grass field.
- The vehicle is at a steep angle.

(Continued)

WARNING

(Continued)


- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- · Sensors may not be able to correctly detect the following types of obstacles:
- Objects made of a thin material like wire netting and ropes
- Square-shaped curbstones or other objects with sharp edges
- Tall objects with a large upper part like a road sign
- Low-profile objects such as curbstones
- Sound-absorbing objects such as cotton and snow

NOTE:

- · Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.
- The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.

How to Use the Parking Sensor

Parking sensor switch

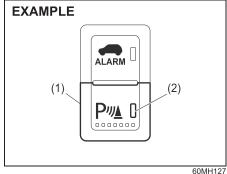

- (1) Parking sensor switch
- (2) Indicator

- When the ignition switch is in the "ON" position or the ignition mode is "ON", and the indicator light in the parking sensor switch is on, indicating that the parking sensor is ready for operation under the following conditions:
- The gearshift lever is in the "R" position.
- To deactivate the parking sensor, push the parking sensor switch and make sure the indicator light goes off.

Switch position	State
EXAMPLE Pul	ON • When the indicator light is on and all necessary condition are met, system becomes ready for operation.
EXAMPLE P.J.	OFF The system does not operate. Push the switch to turn off the indicator if you do not wish to use the parking sensor.

NOTE:

- If you push the parking sensor switch from the OFF to ON position when the ignition switch is in the "ON" position or the ignition mode is "ON", the inside buzzer sounds.
- When the gearshift lever is shifted to the "R" position with the system ON, a buzzer will sound once.

Obstacle Indication by Parking Sensor

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound.

- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.
- Warnings when obstacles are detected by corner sensors

Distance (approx.)	Buzzer
45 – 60 cm (18 – 24 in)	Short beeps at short intervals
35 – 45 cm (14 – 18 in)	Short beeps at very short intervals
Less than 35 cm (14 in)	Continuous beep

• Warnings when obstacles are detected by center sensors

Distance (approx.)	Buzzer
60 – 150 cm (24 – 59 in)	Short beeps at long intervals
45 – 60 cm (18 – 24 in)	Short beeps at short intervals
35 – 45 cm (14 – 18 in)	Short beeps at very short intervals
Less than 35 cm (14 in)	Continuous beep

Warning and Indicator Messages

If there is a problem or warning regarding the parking sensor system, a buzzer and the status of the indicator on the parking sensor inform it. Follow its instruction.

- The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the parking sensor system. Have your vehicle inspected by an authorized MARUTI SUZUKI dealer.
- The indicator does not come on when the parking sensor switch is pressed. The indicator goes off while operating. There may be a problem with the parking sensor system, Have your vehicle inspected by an authorized MARUTI SUZUKI dealer.

Rearview Camera (if equipped)

When the gearshift lever is shifted to the "R" position while the ignition mode is "ON", the rearview camera system automatically shows the view behind the vehicle on the display.

▲ WARNING

The distance viewed in the rearview camera may differ from the actual distance according to the condition of road or the load the vehicle is carrying. Since the camera display area is also limited, backing up by only looking at the display may cause an accident or a collision with an object. The rearview camera cannot replace the driver's attention. The driver alone is responsible for parking and similar driving maneuvers.


- Use the rearview camera only to provide driving assistance.
- Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes and using the rear view mirror.
- Make sure that the tailgate is securely closed when backing up.

NOTICE

If you use the rearview camera for a long time when the ignition mode is "ON", but the engine is not running, the battery may discharge.

Do not leave the ignition mode "ON" for a long time when the engine is not running.

Rearview Camera Location

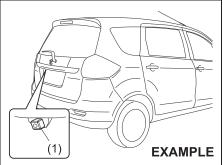

60MH118

(1) Rearview camera

The rearview camera is installed beside the license plate light.

NOTICE

The rearview camera is a precision instrument. If you strike the camera, it may be broken and cause damage resulting in a catching fire or a malfunction.

- Do not strike the camera.
- Do not remove snow or mud on the camera lens with a stick.

NOTICE

If water enters the rearview camera, it may cause a malfunction or catching fire.

Do not use high pressure water around the camera.

NOTICE

This lens is hard coated to prevent damage or discoloration. Damage or discoloration of lens may obscure the image.

- Do not use a brush to clean lens.
- Do not use alcohol, benzene or thinner to clean the lens.
- Do not use wax on the camera lens.

NOTE:

If body wax does get on the camera lens, wipe off the wax with a clean cloth dampened with mild detergent diluted with water, then wipe with a dry cloth.

How to Use Rearview Camera

- 1) Press the engine switch to change the ignition mode to "ON".
- 2) Shift the gearshift lever in the "R" position.
 - The audio display automatically shows the view behind the vehicle.
 - · When the gearshift lever is shifted from "R" to another gearshift lever position, the display returns to the previous display.


NOTE:


The rearview camera display has first priority in any display mode. However, the rearview camera display does not show the rear view while the system is initializing.

Display Range of Rearview Camera

The rearview camera display shows the area behind the rear end of the tailgate. The display cannot show objects which are close to the bumper or under the bumper. The rearview camera display cannot show obstacles which are higher than the camera. Upper parts of tall objects such as road signs cannot be viewed on the display.

Example of display range of rearview camera

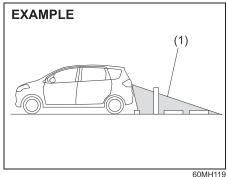

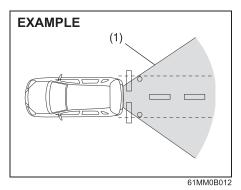

(1) Display range


NOTE:

- · Images shown on the display from the rearview camera are reversed images (mirror images).
- The colors of objects on the rearview camera may differ from the actual object
- · The rearview camera display may be difficult to see under the following conditions, but this is not a system malfunction.
- In dark areas, on a rainy day or at niaht.
- When the temperature around the lens is too high/low, or the camera is wet such as on a rainy day or during periods of high humidity (dew condensation may occur on the camera lens).
- When a foreign object such as mud or a drop of water is stuck around the camera lens.
- When strong light directly enters the camera (vertical lines may be seen on the display).
- Under fluorescent light. (The display mav flicker.)
- When the outside temperature is low (the image on the display may be darkened).

Example of rearview camera screen indication

The distance viewed in the rearview camera may differ from the actual distance according to the condition of the road or the load the vehicle is carrying.

Uphill Incline behind the Vehicle

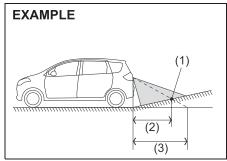


60MH121

- (1) Object
- (2) Actual distance
- (3) Distance on the display

When there is an uphill incline behind the vehicle, the object shown on the display appears farther away than the actual distance.

Downhill Incline behind the vehicle

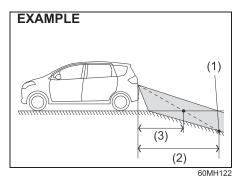

- (1) Object
- (2) Actual distance
- (3) Distance on the display

When there is a downhill incline behind the vehicle, the object shown on the display appears closer than the actual distance.


If the rear view from the rearview camera is not shown or there is a poor image

- If the rear view from the rearview camera is not shown.
- Check to make sure that the ignition mode is "ON".
- Check to make sure that the gearshift lever is shifted to the "R" position.
- If the image from the rearview camera is poor.
- Check to make sure that the camera lens is not dirty.

 Check to make sure that light from the sun or the beam of the headlights from the vehicle behind is not shining directly into the lens.

If the rearview camera system is still not working properly after checking the above, have the system inspected by an authorized MARUTI SUZUKI dealer as soon as possible.

Braking

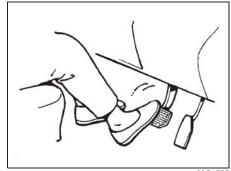

60G165

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to brake the vehicle when there is plenty of distance

between your vehicle and the stopping point, and slow down gradually.

WARNING

If water gets into the brake drums, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-Assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake Assist System (if equipped)

When you slam the brakes on, the brake assist system judges as an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

Anti-Lock Brake System (ABS) (if equipped)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up.

You may feel the brake pedal moves a little while the ABS is operating.

NOTE:

The ABS will not work if vehicle speed is under about 10 km/h (6mph).

▲ WARNING


- On some types of loose surfaces (such as gravel, snow-covered roads, etc.) the stopping distance required for an ABS-equipped vehicle may be slightly greater than for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tires are able to "plow" the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.
- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.

(Continued)

▲ WARNING

(Continued)

 In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive faster than conditions will safely allow.

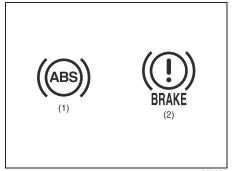

63J081

- (1) ABS warning light
- (2) Brake system warning light

WARNING

- If the ABS warning light (1) on the instrument panel comes on and stays on while driving, there may be a problem with the ABS system. Ask your MARUTI SUZUKI dealer to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the Brake system warning light (2) on the instrument panel simultaneously stays on or comes on when driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed, If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask your MARUTI SUZUKI dealer to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

How the ABS Works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself.

WARNING

The ABS may not work properly if tires or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tires or wheels, use only the size and type specified in this owner's manual.

60M-74E DRIVING TIPS

DRIVING TIPS

4-1
4-1
4-2
4-3
4-3
4-4
4-4
4-4
4-8

DRIVING TIPS 60M-74E



52D078S

WARNING

- Wear Your Seat Belts at All Times. Even though air bags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to the "Seat Belts and Child Restraint Systems" section for instructions on proper use of the seat belts.
- Never drive while under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated, or under stress.

 
Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the initial 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km of driving.
- Do not drive slowly with the transaxle in a high gear.
- Drive the vehicle at moderate engine speeds.
- Do not tow a trailer during the first 960 km of vehicle operation.

Catalytic Converter



80G10

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalyst. This may result in permanent heat damage to the catalyst and other vehicle components.

60M-74E DRIVING TIPS

NOTICE

To minimize the possibility of catalyst or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transaxle is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.



54G584S

WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving Fuel Economy

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you are to wait for more than a minute while you are parked, stop the engine and start it again later. When warming up a cold engine, allow the engine to idle until the temperature gauge pointer comes up to the "C" position (if the idling is not prohibited). In this position, the engine is sufficiently warm for starting off.

Avoid "fast" starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.

Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a slow, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Keep as constant a speed as road and traffic conditions will permit. DRIVING TIPS 60M-74E

Keep the air cleaner clean



60A183S

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

(Diesel Engine)

No cleaning is required. Replace as per periodic maintenance schedule

Keep weight to a minimum

The heavier the load, the more fuel the vehicle consumes. Take out any luggage or cargo when it is not necessary.

Keep tire pressures correct

Underinflation of the tires can waste fuel due to increased running resistance of the tires. Keep your tires inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.


Highway Driving

When driving at highway speeds, pay attention to the following:

 Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping

- point to allow for the extra stopping distance
- On rainy days, "Hydroplaning" can occur. "Hydroplaning" is the loss of direct contact between the road surface and the vehicle's tires due to a water film forming between them. Steering or braking the vehicle while "Hydroplaning" can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

Driving on Hills

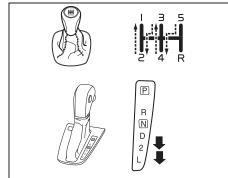

79MM401

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to next lower gear. (Do this with either a automatic transaxle or manual transaxle.)

WARNING

Try not to hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

While moving uphill/gradient from a stand still condition

- Apply the parking brake firmly so that the vehicle does not roll backwards.
- Depress the Clutch pedal and Shift the gearshift lever to 1st Select position.
- Do not slip the clutch.
- When ready to start, press accelerator pedal and slowly release the clutch pedal simultaneously. When the vehicle starts to move, gradually release the parking brake.

60M-74E DRIVING TIPS

NOTICE

When descending a down hill, NEVER turn the ignition key to the "LOCK" position or press the engine switch to change the ignition mode to "LOCK" (OFF). Emission control system and automatic transaxle (if equipped) damage may result.

Driving on Slippery Roads



60G089

Under wet road conditions you should drive at a lower speed than on dry roads due to possible slippage of tires during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Tire Chains

Tire chains should only be used if they are needed to increase traction or are required by law. Make sure that the chains you use are the correct size for your vehicle's tires. Also make sure that there is enough clearance between the fenders and the chains as installed on the tires.

Install the chains on the front tires tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

If Your Vehicle Gets Stuck

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

 Shift the transaxle back and forth between a forward range (or first gear for manual transaxle) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting.

Do not race the engine. Excessive wheel spin will cause the tires to dig deeper, making it more difficult to free the vehicle.

2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult your MARUTI SUZUKI dealer or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by a towing cable or chain secured to the towing hook either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame Hooks" in the "OTHER CON-TROLS AND EQUIPMENT" section.

▲ WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h (25 mph) on the speedometer. Personal injury and/ or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transaxle damage. DRIVING TIPS 60M-74E

Driving On Wet Roads

NOTICE

- When driving on wet roads, avoid driving through large amount of standing water on the road. Large amount of water entering the engine compartment may cause damage to the engine and or electrical components.
- If stuck in deep water, do not start till water level drops.
- Water is incompressible substance, water inside engine is harmful to the engine.



54G638S

▲ WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.

- Make sure your tires are in good condition and always maintain the specified tire pressure. Refer to "Tires" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tires other than those specified by MARUTI SUZUKI. Never use different sizes or types of tires on the front and rear wheels. For information regarding the specified tires, refer to the Tire Information Label located on the driver's door lock pillar.
- Never use oversized tires or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tires may also rub against the fender over bumps, causing vehicle damage or tire failure.

(Continued)

▲ WARNING

(Continued)


 After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Do's and Dont's for Safe Driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

This section contains basic rules for safe driving. Read it carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your Maruti Suzuki vehicle.

DRIVING TIPS 60M-74E

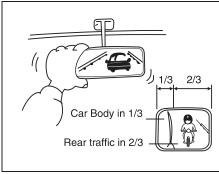

72F-08-002

Starting

- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.
- 3) Before moving off, look forward and back to confirm safety.
- 4) Don't start quickly, since it is dangerous and wastes fuel.


General driving

1) Be sure to stop before the stop light and stop sign. When moving into the intersection without any traffic lights or signs, drive slowly to confirm safety.



72F-08-008

- 2) Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead make a sudden stop.
- 3) Turn ON the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit from behind.
- 4) Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or a cornering skid may occur.
- 5) When overtaking other vehicles, watch out for the oncoming vehicle and carefully confirm the safety.
- 6) Don't attempt zigzag driving which will hinder your control over the vehicle and cause an accident.

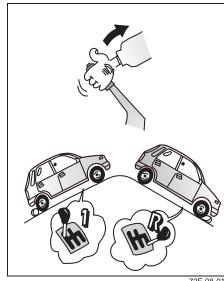

72F-08-011

Braking

- 1) Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
- 2) Don't use handbraking unless unavoidable. It causes the vehicle to skid and a rear-end collision occur. It is especially dangerous when the tyres are worn, for they allow a larger skid.


DRIVING TIPS 60M-74E



72F-08-012

Use foot brake in three stages

- 1. Warn the vehicle behind you
- 2. Gradually apply the brake.
- 3. Bring the vehicle to a halt.
- 3) When driving on a downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in total brake fail-
- 4) Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.

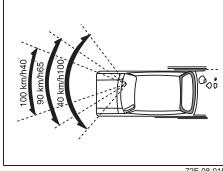

72F-08-015

- 5) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels much fatiqued.
- 6) Never do sharp handling during high speed driving. You will lose your control over your vehicle.
- 7) When overtaking or changing the lane while driving at a high speed, keep an ample vehicle-to-vehicle distance.

Long distance driving

- 1) Be sure to perform safety checks before starting a trip.
- 2) Take rest at certain intervals to prevent an accident which may occur when you are sleepy or tired.




72F-08-020

Night time driving


- 1) Drive more slowly at night than in the daytime, for the visual range is restricted at night.
- 2) Don't overtake other vehicles at night. Darkness bothers your sense of speed and hinders your judgment on the vehicle-to-vehicle distance.
- 3) Don't use the high headlight beam unless its use is inevitable. Its dazzle may blitz the driver of the oncoming vehicle, thus causing an accident.
- 4) Always keep the window glasses clean. Don't operate the windshield wiper

60M-74E DRIVING TIPS

when the windshield glass is dry or the wiper blade and glass may get damaged.

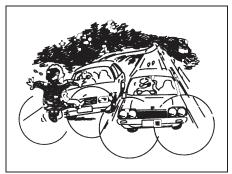

72F-08-021

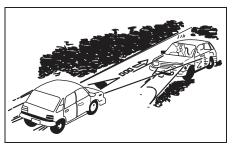

72F-08-022

Margin For Safety


It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- · Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't make quick start, hard steering or sudden stops.
- Allow an ample time in the driving schedule.
- Observe traffic rules and regulations.

Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, prolongs its life, gives more mileage and ensures a comfortable driving experience.

Follow the do's and dont's listed, and driving will never be the same again.

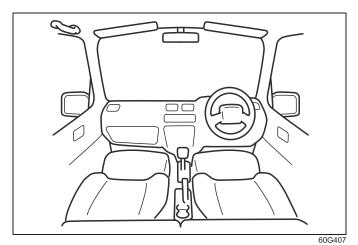


OTHER CONTROLS AND EQUIPMENT

Manual Heating and Air Conditioning System	5-1
Radio Antenna	5-5
Audio System (if equipped)	5-6
Fuel Filler Cap	5-43
Engine Hood	5-44
Sun Visor	5-45
Interior Light Switch	5-46
Accessory Socket	5-47
AUX/USB Socket (if equipped)	5-47
Assist Grips	5-48
Glove Box	
Cup Holder and Storage Area	5-48
Front Seat Back Pocket (if equipped)	
Armrest (if equipped)	
Footrest (if equipped)	
Floor Mats (if equipped)	
Luggage Box (if equipped)	
Frame Hooks	


Manual Heating and Air Conditioning System

Air Outlet

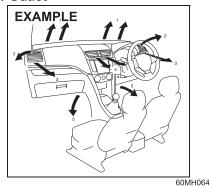

- 1. Windshield defroster outlet
- 2. Side defroster outlet
- 3. Side outlet
- 4. Center outlet
- 5. Floor outlet


Side outlet

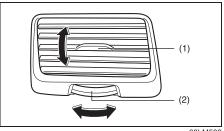

68LM502


Move the knob (1) vertically and the dial (2) horizontally, to adjust the direction of airflow as desired. When "Open", air comes out from the side outlets regardless of the airflow selector position.

 Center outlet



Move the knob (1) vertically or horizontally to adjust the direction of airflow as desired.

Overhead rear air conditioning system (if equipped)

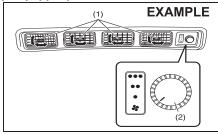


To turn on the overhead rear air conditioning system, set the blower speed selector of the manual heating and air conditioning

system to a position other than "OFF" and set the rear blower switch (2) to a position other than "OFF". Move the knob (1) vertically or horizontally to adjust the direction of airflow as desired.

If you need cold air to come out, turn on the air conditioning switch. Refer to "Air conditioning switch" in this section.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature. Less operation of the compressor results in better fuel economy.

Description of Controls

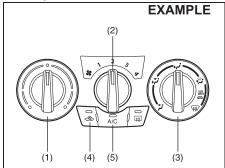

60MH065

Temperature selector (1)


This is used to select the temperature by turning the selector.

5-1

Blower speed selector (2)

This is used to turn on the blower and to select blower speed by turning the selector.


Air flow selector (3)

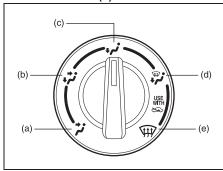

33J048

This is used to select one of the functions described below.

 
Ventilation (a)



74LHT0504

Temperature-controlled air comes out of the center and side air outlets.

 
Bi-level (b)



74LHT0505

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully COLD position or fully HOT position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

 
Heat (c)



74LHT050

Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

 
Heat & defrost (d)



74LHT0507

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

 
Defrost (e)



74LHT05

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

 Air intake selector (4)



68LM511

This selector is used to select the following modes.

Fresh Air (f)

When this mode is selected, the indicator light will go off and outside air is used.

Recirculated Air (g)

When this mode is selected, the indicator light will come on, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down the interior.

"FRESH AIR" and "RECIRCULATED AIR" are switched alternately each time the air intake selector is pushed.

NOTE:

If you select "RECIRCULATED AIR" for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select "FRESH AIR".

Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than "OFF" and push in the "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is on. To turn off the air conditioning system, push the "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System Operating Instructions

Natural ventilation

Select "VENTILATION" and "FRESH AIR", the temperature selector to the desired temperature position, and the blower speed selector to "OFF". Fresh air will flow through the vehicle during driving.

Forced ventilation

The control settings are the same as for natural ventilation except you set the blower speed selector to a position other than "OFF".

Normal heating (using outside air)

Select "HEAT" and "FRESH AIR", the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)

The control settings are the same as for normal heating except you select "RECIR-CULATED AIR". If you use this heating method for an extended period of time, the

air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select "BI-LEVEL" and "FRESH AIR", the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully COLD position or fully HOT position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to "VENTILATION", the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on the "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either "FRESH AIR" or "RECIRCULATED AIR" as you desire. Choosing "RECIRCULATED AIR" increases cooling efficiency.

Quick cooling (using recirculated air)

The control settings are the same as for normal cooling except you select "RECIR-CULATED AIR" and the highest blower speed.

NOTE:


- If you select "RECIRCULATED AIR" for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select "FRESH AIR".
- · If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at "FRESH AIR" and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select "FRESH AIR" and turn on the "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using the "DEFROST" or "HEAT & DEFROST" functions.

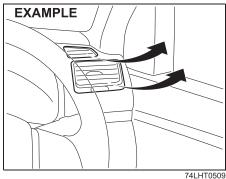

NOTE:

If you need maximum defrosting:

- select "DEFROST" and "FRESH AIR".
- turn on the "A/C" switch,
- set the blower speed selector to HIGH,
- · adjust the temperature selector to the HOT end, and
- · adjust the side outlets so the air blows on the side windows.

Models with ENG A-STOP System (if (baggiupe

• If the air conditioning performance can no longer perform at a sufficient level due to automatically stopping the engine, press the "ENG A-STOP OFF" switch to deactivate the ENG A-STOP system. (The engine will automatically restart and the air conditioning performance will be restored.)

 If the windshield and/or the driver's side/ passenger side door windows are fogged during automatically stopping the engine, stop the ENG A-STOP system and restart the engine. Then, turn the Air flow selector (3) to change the air flow to the "Heat & defrost" or "Defrost" position to defog the windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in the "Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section. Have this job done by your MARUTI SUZUKI dealer as the lower glove box must be lowered for this job.


NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called "R-134a". R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio Antenna

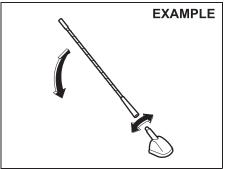

8KH052


The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.

Audio System (if equipped)

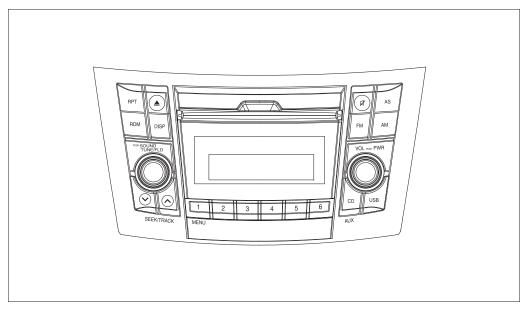

AM/FM CD PLAYER

NOTE: For vehicle equipped with SMARTPLAY INFOTAINMENT SYSTEM, refer to the audio manual available with the vehicle.

Safety Information

WARNING

If you pay extended attention to operating the audio system or viewing the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying extended attention to operating the audio system or viewing the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets,
- Set the sound volume to a level that will allow you to continue to be aware of road and traffic conditions while driving.

Notes on Discs

Precautions


- When the inside of the vehicle is very cold and the player is used soon after switching on the heater, condensation may form on the disc or the optical parts of the player and proper playback may not be possible. If condensation forms on the disc, wipe it off with a soft cloth. If condensation forms on the optical parts of the player, do not use the player for about one hour. This will allow the condensation to disappear normally.
- Driving on extremely bumpy roads which cause severe vibrations may cause sound to skip.
- This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Please bring the unit to an authorized MARUTI SUZUKI dealer.

Cautions on Handling



This unit has been designed specifically for playback of compact discs bearing mark (A) shown above.


No other discs can be played.

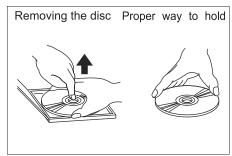


To remove the compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

Always handle the compact disc by the edges.

 
Never touch the surface.



To remove finger marks and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

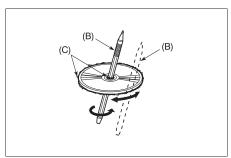

 New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen (B), etc. to remove the roughness (C) from the edges of the disc before inserting it into the unit.




Never stick labels on the surface of the compact disc or write on the surface with a pencil or pen.



Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.



 Do not use compact discs that have large scratches, are misshaped, or cracked, etc. Use of such discs will cause damage or prevent the system from operating properly.



Do not expose compact discs to direct sunlight or any heat source.

NOTE:

- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc.
 - These may get caught in the internal mechanism and damage the disc.
- It may be impossible to play CD-R discs with this unit due to the recording conditions.
- CD-RW discs cannot be played with this unit.

WARNING

This is a class I laser product. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not open covers and do not attempt to repair this unit by yourself. Refer servicing to qualified personnel.

Bluetooth


The Bluetooth[®] word mark and logo are registered trademarks and are owned by the Bluetooth SIG. Ink.

Stop using this unit and a Bluetooth® ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit whenever you are notified that your unit disturbs other wireless communication immediately.

Basic Operations

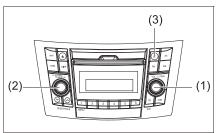

- (1) VOL PUSH POWER knob
- (2) TUNE FOLDER PUSH SOUND knob
- (3) MUTE button

Turning power on/off

Press the VOL PUSH POWER knob (1). The unit starts in the function mode it was in when the power was turned off last.

Adjusting the volume

Turn the VOL PUSH POWER knob (1). Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.


NOTE:

While driving, adjust the volume to an extent that sound and/or noise coming from outside the vehicle can be heard.

Mute

Press the MUTE button (3) to mute the sound. To cancel the mute, press the MUTE button (3) again.


Bluetooth® microphone (4) (if equipped)

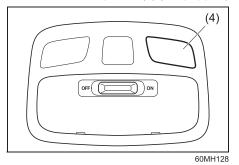

Adjusting bass/treble/balance /fader

1) Press the TUNE FOLDER PUSH SOUND knob (2).

Each time the knob is pressed, sound adjustment will change as follows:

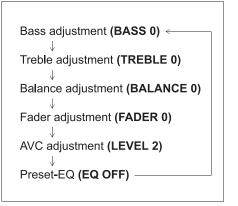

2) Turn the TUNE FOLDER PUSH SOUND knob (2) to adjust the sound.

Adjusting the AVC (Auto volume control)

The Auto Volume Control (AVC) function automatically adjusts (increases/decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with three selectable levels (LEVEL OFF, 1, 2, 3). The range of volume

adjustment increases together with the LEVEL number.


- Press the TUNE FOLDER PUSH SOUND knob (2) until the AVC adjustment mode is selected.
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select the desired AVC adjustment level. (Initial setting: LEVEL 2)

Preset-EQ

Preset-EQ calls up various sound types in accordance with the listening music type.


- Press the TUNE FOLDER PUSH SOUND knob (2) several times until "PRESET-EQ" appears.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2).

Each time the knob is turned, preset EQ mode will change as follows:

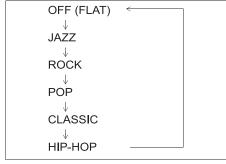


5-10

Listening to the Radio

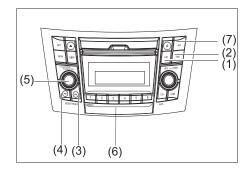

Display

 


- (1) FM button
- (2) AM button
- (3) Up button
- (4) Down button
- (5) TUNE FOLDER PUSH SOUND knob
- (6) Preset buttons ([1] to [6])
- (7) AST button
- (A) Band
- (B) Frequency

Selecting the FM band

Press the FM button (1).

 Each time the button is pressed, the reception band will change as follows:



Selecting the AM band

Press the AM button (2).

Seek tuning

Press the seek Up button (3) or the seek Down button (4).

The unit stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

Turn the TUNE FOLDER PUSH SOUND knob (5).

The frequency being received is displayed.

Preset memory

- 1) Select the desired station.
- 2) Hold down a desired button ([1] to [6]) of the Preset buttons (6) to which you want to store the station for 2 seconds or longer.

Auto store

Hold down the AST button (7) for 2 seconds or longer.

Six stations in good reception will automatically be stored to the Preset buttons (6) in order, starting from a station whose frequency is the lowest.

NOTE:

- Auto store can be released by pressing AST button (7) while auto store is under way.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- When there are fewer than 6 stations that can be stored even if 1 round of auto store operation is performed, no station will be stored at the remaining Preset buttons (6).
- 6 stations can be preset for FM1 and FM2 in common, and 6 stations for AM in auto store mode.

Auto store mode on/off

Press the AST button (7).


Each time the button is pressed, the mode is switched as follows:




Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

Listening to a CD

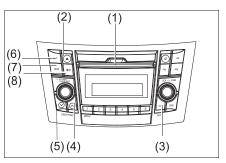

Display

 


- (1) Insertion slot
- (2) Eject button
- (3) CD button
- (4) Up button
- (5) Down button
- (6) RPT button
- (7) RDM button
- (8) DISP button
- (A) Track number
- (B) Play time

NOTE:

This product does not support 8 cm CD (sometimes called as "mini single CD", "3-inch CD", "CD3", etc.).



 - CDs or CD-ROMs carrying no mark (A) cannot be used.
- Some discs recorded in CD-R/CD-RW format may sometimes be impossible to use.



- A CD is to be inserted with its label side up.
- When there is a CD already in the unit, it is impossible to insert another CD without ejecting the CD in the unit. Do not use force to insert a CD into the CD insertion slot.

NOTICE

- Never insert your finger or hand into the CD insertion slot. Never insert foreign objects.
- Never insert a CD with glue coming out from adhesive tape or a rental CD label or with a trace indicating that adhesive tape or a rental CD label has been removed. This may cause the CD not to eject or result in a malfunction.

Loading a CD

Insert a CD in the Insertion slot (1). When a CD is loaded, play starts.

Ejecting a CD

Press the Eject button (2).

When the ignition switch is in the "LOCK" position or the ignition mode is "LOCK" (OFF), the CD remained ejected for around 15 seconds or longer will automatically be drawn inside the unit. (Auto reload function)

The backup eject function:

This function allows you to eject a CD by pressing the Eject button (2) even when the ignition switch is in the "LOCK" position or the ignition mode is "LOCK".

NOTICE

If you forcefully try to push an ejected CD inside the unit before auto reloading, the disc surface might be scratched.

When reloading a CD, remove it from the unit completely before reloading.

Listening to a CD

When a CD is inserted, playback will automatically start.

When a CD is already inside the unit, press the CD button (3) to start playback.

Selecting a track

- Press the Up button (4) to listen to the next track.
- Press the Down button (5) twice to listen to the previous track.
 - When the Down button (5) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (4) to fast forward the track.
- Hold down the Down button (5) to fast rewind the track.

Random playback

Press the RDM button (7).

Each time the button is pressed, the mode will change as follows:



TRACK RANDOM

The random indicator "RDM" will light. The tracks in the loaded disc will be played in random order.

60M-74E

Repeat playback

Press the RPT button (6).

Each time the button is pressed, the mode will change as follows:



TRACK REPEAT
 The repeat indicator "RPT" will light.
 The track currently being played will be played repeatedly.

Display change

Press the DISP button (8).


Each time the button is pressed, display will change as follows:

Play time←	
lay anto c	
_ · ·	
Disc title	
\downarrow	
Track title—	


NOTE:

- "NO TITLE" will be displayed when there is no text information in the disc currently being played.
- If text data contains more than 15 characters, the ">" mark will appear at the right end. Holding down the DISP button (8) for 1 second or longer can display the next page.

Listening to an MP3/WMA/ AAC Disc

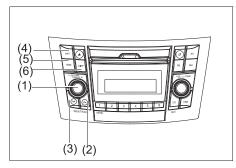

Display

 

- (1) TUNE FOLDER PUSH SOUND knob
- (2) Up button
- (3) Down button
- (4) RPT button
- (5) RDM button
- (6) DISP button
- (A) Folder number
- (B) Track number
- (C) Play time
- (D) DISC type

Selecting a folder

Turn the TUNE FOLDER PUSH SOUND knob (1) to select a folder.

Selecting a track

- Press the Up button (2) to listen to the next track.
- Press the Down button (3) twice to listen to the previous track.
 When the Down button (3) is pressed

When the Down button (3) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (2) to fast forward the track.
- Hold down the Down button (3) to fast rewind the track.

Random playback

Press the RDM button (5).

Each time the button is pressed, the mode will change as follows: 5-13



FOLDER RANDOM

The random indicator "F.RDM" will light.

The tracks in the current folder will be played in random order.

ALL RANDOM

The random indicator "RDM" will light. The tracks in the loaded disc will be played in random order.

Repeat playback

Press the RPT button (4).

Each time the button is pressed, the mode will change as follows:



FILE REPEAT

The repeat indicator "RPT" will light. The track currently being played will be played repeatedly.

FOLDER REPEAT

5-14

The repeat indicator "F.RPT" will light.
All tracks in the currently selected folder will be played repeatedly.

Display change

Press the DISP button (6).

Each time the button is pressed, display will change as follows:



NOTE:

- "NO TITLE" will be displayed when there is no text information in the disc currently being played.
- If text data contains more than 15 characters, the ">" mark will appear at the right end. Holding down the DISP button (6) for 1 second or longer can display the next page.

Notes on MP3/WMA/AAC

What is MP3?

MP3 (MPEG audio layer3) is an audio compression format that has become the standard format among PC users. Its merit is that the original audio data is compressed to approximately 1/10 and high sound quality is maintained. This means that it is possible to store the data of approximately 10 music CDs on a single CD-R/RW disc, which in turn makes it possible to play music for a long time without having to change the disc.

What is WMA?

- An abbreviation of "Windows Media Audio," WMA is an audio compression format developed by Microsoft.
- WMA files for which the DRM (Digital Rights Management) function is ON cannot be played.
- Windows MediaTM and the Windows[®] logo are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

What is AAC?

An abbreviation of "Advanced Audio Coding," AAC is an audio compression format used by MPEG2 and MPEG4.

Points to remember when making MP3/WMA/AAC files

- High bit rate and high sampling frequency are recommended for high quality sounds.
- Selecting VBR (Variable Bit Rate) is not recommended. Selecting VBR may cause display of incorrect playing time and jumpiness of playback.
- Playback sound quality varies depending on the encoding environment. For details, refer to the user manual of the encoding software and the writing software in use.

NOTICE

Never assign the ".mp3", ".wma", or ".m4a" file name extension to a file if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.

Recording MP3/WMA/AAC files on a CD media

- It is recommended not to write both CD-DA files and MP3/WMA/AAC files on a disc.
- If both CD-DA files and MP3/WMA/ AAC files are on the same disc, tracks may not be played in the correct order or some tracks may not be played at

all.

- When storing both MP3 data and WMA data on the same disc, sort and place them in different folders.
- Do not write files other than MP3/WMA/ AAC files and unnecessary folders on a disc.
- MP3/WMA/AAC files should be named to meet the standards and the file system specifications as shown below.
- The file extension ".mp3", ".wma" or ".m4a" should be assigned to files based on their format independently.
- You may encounter a trouble in playing MP3/WMA/AAC files or displaying information of MP3/WMA/AAC files depending on the writing software or CD recorder in use.
- This unit does not have a play list function.
- It is recommended to write discs in Disc-at-Once mode even though Multisession mode is supported.

Compression formats

MP3

Bit rate:
MPEG1 Audio Layer III: 32 k - 320 kbps
MPEG2 Audio Layer III: 8 k - 160 kbps
MPEG2.5 Audio Layer III: 8 k - 160 kbps

Sampling frequency:

MPEG1 Audio Layer III: 32 k/44.1 k/48 kHz MPEG2 Audio Layer III: 16 k/22.05 k/24 kHz MPEG2.5 Audio Layer III: 8 k/11.025 k/12 kHz WMA (Ver. 7, Ver. 8, Ver. 9*)

- Bit rate: CBR 32 k 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz
- * WMA 9 Professional/LossLess/Voice are not supported.

AAC*

- Bit rate: ABR 16k 320 kbbs
- Sampling frequency: 32 k/44.1 k/48 kHz
- * Apple Lossless is not supported.


Supported file systems

ISO 9660 Level 1/Level 2. Joliet. Romeo


Maximum number of files/folders

- Maximum number of files: 512
- Maximum number of files in a folder: 255
- Maximum depth of tree structure: 8
- Maximum number of folders: 255 (Root folder is included.)

Listening to files stored in a USB device

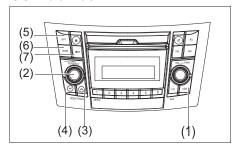

Display

 

- (1) USB button
- (2) TUNE FOLDER PUSH SOUND knob
- (3) Up button
- (4) Down button
- (5) RPT button
- (6) RDM button
- (7) DISP button
- (A) Folder number
- (B) Track number

5-16

(C) Play time

(D) File type

NOTICE

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.

Selecting a USB device mode Press the USB button (1).

Selecting a folder

Turn the TUNE FOLDER PUSH SOUND knob (2) to select the desired folder.

Selecting a track

- Press the Up button (3) to listen to the next track.
- Press the Down button (4) twice to listen to the previous track.

When the Down button (4) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (3) to fast forward the track.
- Hold down the Down button (4) to fast rewind the track,

Random playback

Press the RDM button (6).

Each time the button is pressed, the mode will change as follows:



FOLDER RANDOM

The random indicator "F.RDM" will light.

The tracks in the currently selected folder will be played in random order.

ALL RANDOM
 The random indicator "RDM" will light.
 The tracks in the connected USB device will be played in random order.

Repeat playback

Press the RPT button (5).

Each time the button is pressed, the mode will change as follows:



FILE REPEAT


The repeat indicator "RPT" will light. The track currently being played will be played repeatedly.

FOLDER REPEAT
 The repeat indicator "F.RPT" will light.
 All the tracks in the folder currently selected will be played repeatedly.

Display change

Press the DISP button (7).

Each time the button is pressed, display will change as follows:

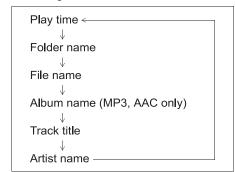

NOTE:

- "NO TITLE" will be displayed when there is no text information in the file currently being played.
- If text data contains more than 15 characters, the ">" mark will appear at the right end. Holding down the DISP button (7) for 1 second or longer can display the

next page.

Notes on USB device

Compatible USB devices

- USB Mass Storage Class
 For details as to whether your USB memory/USB Audio is compatible with USB Mass Storage Class, please contact the USB memory/USB Audio manufacturer.
- USB Standard Compatibility 1.1/2.0 Full Speed
- File System FAT12/16/32, VFAT
- Maximum current less than 1.0 A
- If devices such as USB hub, extension cable are connected to the audio system, it may not be recognized. In such case connect the USB device directly to the audio system.
- Devices such as MP3 player/Mobile phone/digital camera may not be recognized by the audio system for playing music.

USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand. We cannot accept responsibility for any lost data.

 It is recommended not to connect a USB device that contains data files other than MP3/WMA/AAC format.

Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.

Compression formats MP3

· Bit rate:

MPEG1 Audio Layer III: 32 k - 320 kbps MPEG2 Audio Layer III: 8 k - 160 kbps MPEG2.5 Audio Layer III: 8 k - 160 kbps

 Sampling frequency: MPEG1 Audio Layer III: 32 k/44.1 k/48 kHz MPEG2 Audio Layer III: 16 k/22.05 k/24 kHz MPEG2.5 Audio Layer III: 8 k/11.025 k/12 kHz

- WMA (Ver. 7, Ver. 8, Ver. 9*)
 Bit rate: CBR 32 k -320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz
- * WMA 9 Professional/LossLess/Voice are not supported.


AAC*

- Bit rate: ABR 16k 320 kbbs
- Sampling frequency: 32 k/44.1 k/48 kHz
- * Apple Lossless is not supported.


Maximum number of files/folders

- Maximum number of files: 2500
- Maximum number of files in a folder: 255
- Maximum depth of tree structure: 8
- Maximum number of folders: 255 (Root folder is included.)

Listening to an iPod®

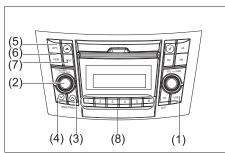

Display

 

- (1) USB button
- (2) TUNE FOLDER PUSH SOUND knob
- (3) Up button
- (4) Down button
- (5) RPT button

5-18

- (6) RDM button
- (7) DISP button
- (8) Preset buttons ([1] to [6])
- (A) Track title
- (B) Track number
- (C) Play time

Selecting an iPod[®] mode

Press the USB button (1).

Selecting a track

- Press the Up button (3) to listen to the next track.
- Press the Down button (4) twice to listen to the previous track.

When the Down button (4) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (3) to fast forward the track.
- Hold down the Down button (4) to fast rewind the track.

Random playback

Press the RDM button (6).

Each time the button is pressed, the mode will change as follows:



SONG RANDOM

The random indicator "RDM" will light. The tracks in the iPod[®] will be played in random order.

ALBUM RANDOM

The random indicator "F.RDM" will light.

The albums in the iPod[®] will be played in random order.

Repeat playback

Press the RPT button (5).

Each time the button is pressed, the mode will change as follows:



SONG REPEAT

The repeat indicator "RPT" will light. The track currently being played will be played repeatedly.

Display change

Press the DISP button (7).

Each time the button is pressed, display will change as follows:



NOTE:

If text data contains more than 15 characters, the ">" mark will appear at the right end. Holding down the DISP button (7) for 1 second or longer can display the next page.

Playing Mode selection

- 1) Press the button numbered [6] of the Preset buttons (8) for 1 second or lon-
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2). Each time the knob is turned, the mode will change as follows:



3) Press the TUNE FOLDER PUSH SOUND knob (2) to select the desired mode.

NOTE:

· When the button numbered [6] of the Preset buttons (8) is pressed, the previous mode will be displayed.

Notes on iPod®

Supported iPod®

- iPod[®] touch (5th generation)
- iPod[®] touch (4th generation)
- iPod[®] touch (3rd generation)
- iPod[®] touch (2nd generation)
- iPod® touch (1st generation)


- iPod® classic
- iPod[®] nano (7th generation)
- iPod[®] nano (6th generation)
- iPod® nano (5th generation)
- iPod® nano (4th generation)
- iPod® nano (3rd generation)
- iPod® nano (2nd generation)
- iPod[®] nano (1st generation)
- iPod[®] (5th generation)
- iPhone® 6 Plus
- iPhone® 6
- iPhone[®] 5S
- iPhone[®] 5 iPhone[®] 4S
- iPhone® 4
- iPhone® 3GS
- iPhone® 3G
- iPhone[®]
- Some functions may not be available depending on the model of iPod[®].
- iPod[®] is a trademark of Apple Inc., registered in the U.S. and other countries.
- st iPhone llow is a trademark of Apple Inc.. registered in the U.S. and other countries.
- * Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod® connection

 Make sure to detach the iPod[®] after turning the ignition switch to the "LOCK" position or pressing the engine switch to change the ignition mode to

- "LOCK" (OFF). The iPod[®] may not be shut down when it is being connected and may result in battery depletion.
- Please do not connect iPod[®] accessories such as an iPod[®] remote control or headphones while connecting the iPod[®] with the unit. The unit may not operate correctly.


AUX Function

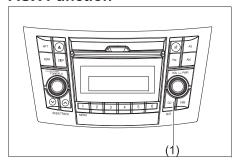

(1) AUX (CD) button **AUX connection**

To listen to auxiliary audio sources (sold separately) through the unit, follow the instruction below.

 - 1) Connect the auxiliary audio source to the AUX/USB socket (separately attached) with an AUX cable.
- Press the AUX (CD) button (1).
 Each time the button is pressed, the mode will change as follows:




A CAUTION

- Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.

NOTE:


- Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.
- The volume and tone controls of the auxiliary audio source can be adjusted on the unit.
- In AUX mode, the volume setting is different from another mode.


Bluetooth[®] Hands-Free (if equipped)

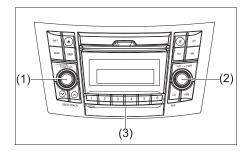

- (1) TUNE FOLDER PUSH SOUND knob
- (2) VOL PUSH POWER knob
- (3) Preset buttons

Steering switch

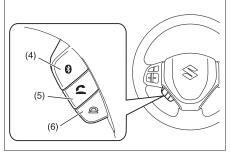

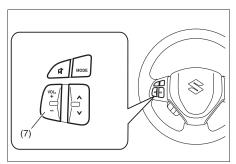

- (4) Bluetooth® setup button
- (5) Off Hook button
- (6) On Hook button
- (7) VOL switch

Phone registration

To use the hands-free function with this unit, it is required to register the phone in advance.

NOTE:

- Up to 5 phones can be registered.
- To set up a new phone, disconnect the audio player from the unit. Connect the audio player again after phone setup is completed if necessary.
- When failed to establish the pairing within 120 seconds, the connecting operation will be canceled. Please try again or refer to the manual of the phone in use for how to establish the pairing with the phone.

- Bluetooth[®]/Telephone setup mode can be entered only during vehicle is stationary speed less than ~ 8 kmph)
- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Pairing", and press the knob (1) to determine the selection.
- 4) Select "CAR AUDIO" from the Bluetooth[®] menu of the phone and establish the pairing.
 - Refer to the manual of the phone in use for further information.
- 5) Enter the Passkey displayed on the unit to the phone.
- 6) Press the On Hook button (6).

NOTF:

- When selecting "Go Back", the previous menu will be displayed.
- When additionally registering a phone, operate the same step from 1).

Receiving a call

Press the Off Hook button (5) to receive a call.

Ending a call

Press the On Hook button (6) to end a call.

Rejecting a call (only for supported models)

Press the On Hook button (6) to reject a incoming call.

Adjusting the listening volume

- Turn the VOL PUSH POWER knob (2) during a call.
- Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press the VOL switch (7) during a call.
 Pressing "+" of the switch increases the volume, pressing "-" of the switch decreases the volume.

Adjusting the ring volume

- Turn the VOL PUSH POWER knob (2) while a call coming in.
- Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press the VOL switch (7) during a call.
 Pressing "+" of the switch increases the volume, pressing "-" of the switch decreases the volume.

Adjusting the call or ringtone volume

Follow the instructions below to adjust the call or ringtone volume.

1) Press the Bluetooth® setup button (4).

- Press the Bluetooth[®] setup button (4).
 The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.

- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Sound Setting", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Call Volume" or "Ringtone Volume", and press the knob (1) to determine the selection. The current call or ringtone volume will be displayed.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select desired call or ringtone volume, and press the knob (1) to determine the selection.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Selecting the Ringtone

Follow the instructions below to select a ringtone.

- Press the Bluetooth[®] setup button (4).
 The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Sound Setting", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Ringtone", and press the knob (1) to determine the

selection.

The current ringtone will be sounded.

5) Turn the TÜNE FOLDER PUSH SOUND knob (1) to select desired ringtone, and press the knob (1) to determine the selection.

NOTF:

When selecting "Go Back", the previous menu will be displayed.

Dialing using Missed/Incoming/ Outgoing Calls

Follow the instructions below to dial to the last dialed number again.

NOTE:

Up to 10 phone numbers of the latest calls can be stored. (10 each for dialed, received and missed call)

- Press the Off Hook button (5).
 The Bluetooth[®] phonebook menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Missed Calls", "Incoming Calls" or "Outgoing Calls", and press the knob (1) to determine the selection.
 - To dial from the dialed history or the received history, select "Missed Calls", "Incoming Calls" or "Outgoing Calls" respectively.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select the desired number, and press the knob (1) to determine the selection.

4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Dial", and press the knob (1) or the Off Hook button (5) to dial to the selected number.

NOTE:

- When selecting "Go Back", the previous menu will be displayed.
- Pressing "Confirm" after selecting "Add Speed Dial" can register the selected number in the speed dial.
- Pressing "Confirm" after selecting "Delete" can delete the selected number from the call history.

Deletion of call history

Follow the instructions below to delete a missed/incoming/outgoing call history.

- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete History", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Missed Calls", "Incoming Calls", or "Outgoing

- Calls", and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a number to be deleted or "ALL", and press the knob (1) to determine the selection.
- 7) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete?" or "Delete All?", and press the knob (1) to determine the selection.
- 8) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Registration in Phonebook

Registration of numbers in the phonebook. Follow the instructions below to register phone numbers in the Phonebook of the unit.

- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Add Con-

- tacts", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Overwrite All" or "Add One Contact", and press the knob (1) to determine the selection. The "Rest of Memory XXXX: Ok?" will be displayed.
- 6) Press or turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to determine the selection.
- 7) Transfer contacts from the phone. When the registration is completed, the "Setup Phonebook" will be displayed.

NOTE:

- When selecting "Go Back" the previous menu will be displayed.
- Up to 1000 numbers can be registered in Phonebook.

Transfer of call history (Call History)

Follow the instructions below to transfer call history of the registered phone.

- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Call History", and press the knob (1) to determine the selection.

- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Call History?", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to transfer the call history from the phone.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Making a call by Phonebook

Follow the instructions below to dial a number registered in Phonebook.

- Press the Off Hook button (5).
 The Bluetooth[®] phonebook menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Phonebook", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select the initial of the name you would like to make a call, and press the knob (1) to determine the selection.
 - The registered numbers will be displayed in sequence. If names have been registered together with numbers, the names will be displayed.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Dial", and press the knob (1) to determine the selection.

Press the Off Hook button (5).
 The displayed number or the number registered with the displayed name will be dialed.

Deletion of registered data (Delete Entry)

Follow the instructions below to delete a number registered in Phonebook.

- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete Contacts", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a number to be deleted, and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete?", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Registration in speed dial

Follow the instructions below to assign a number to one of the Preset buttons to use as the speed dial.

- Press the Bluetooth[®] setup button (4).
 The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Add Speed Dial", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a number to be assigned, and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Choose Preset", and press the knob (1) to determine the selection.
- 7) Press one of the Preset buttons (3) to which the selected number is to be assigned. If a number is already assigned to the selected button, a confirmation message will be displayed.

Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to complete the assignment.

When the assignment is completed, the "Setup Phonebook" will be displayed.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

One-touch call (Speed dial)

Follow the instructions below to dial the number assigned to each of the Preset buttons (3).

- Press the Off Hook button (5).
 The Bluetooth[®] phonebook menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Speed Dials", and press the knob (1) to determine the selection.
- Press one of the Preset buttons (3).
 When no number is assigned, "No Entry" is displayed.
- 4) Press the Off Hook button (5).
 The selected number will be dialed.

Deletion of speed dial (Del Speed Dial) To delete a number assigned for the speed dial, follow the instructions below.

- Press the Off Hook button (5).
 The Bluetooth[®] phonebook menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Speed Dials", and press the knob (1) to determine the selection.
- Press one of the Preset buttons (3) to which the number to be deleted is assigned.

"No Entry" appears if the number is not registered.

- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Del Speed Dial", and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Display of device data (Device Name)

Follow the instructions below to display the BD (Bluetooth® Device) address and device name.

- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Bluetooth Info", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Device Name" or "Device Address", and press the knob (1) to display the device name or the BD (Bluetooth[®] Device) address.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Reset to the factory defaults

Follow the instructions below to reset all the settings to the factory defaults.

- Press the Bluetooth[®] setup button (4).
 The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Initialize", and press the knob (1) to determine the selection.

- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "All Initialize", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to start the reset.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Selection of phone (Select Phone)

Follow the instructions below to select a phone to be paired with from the registered phones.

- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "List Phone", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a phone to be paired with, and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Select", and press the knob (1) to determine the selection.

NOTF:

- When selecting "Go Back", the previous menu will be displayed.
- The Bluetooth[®] ready audio device will be disconnected when the phone is selected.

List of phones (List Phones)

Follow the instructions below to display the names of the registered phones in sequence.

- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "List Phone", and press the knob (1) to determine the selection.

The names of the registered phones are displayed in sequence.

NOTF:

When selecting "Go Back", the previous menu will be displayed.

Passkey setting (Set Passkey)

Follow the instructions below to set the security number (Passkey).

- Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Blue-

tooth", and press the knob (1) to determine the selection.

- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Passkey", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "New Passkey", and press the knob (1) to determine the selection.
- Press or turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm".
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a number for the first digit, and press the knob (1) to determine the selection. Select and determine numbers for the second, third and fourth digits in order in the same manner. When not entering up to the eighth digit, enter blanks for the successive digits.
- 7) Turn the TUNE FOLDER PUSH SOUND knob (1) to determine the passkey setting.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Deletion of phone information (Delete Phone)

Follow the instructions below to delete the registered information of the phone.

Press the Bluetooth[®] setup button (4).
 The Bluetooth[®] setup menu will be displayed.

- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "List Phone", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a phone to be deleted, and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete", and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete?", and press the knob (1) to determine the selection.
- 7) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to determine the selection.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

BT function on/off (BT Power)

Follow the instructions below to turn on/off the Bluetooth® function.


 Press the Bluetooth[®] setup button (4). The Bluetooth[®] setup menu will be displayed.

- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (1) to select "BT Power", and press the knob (1) to determine the selection.
- Press the TUNE FOLDER PUSH SOUND knob (1) to select "BT Power On" or "BT Power Off".


NOTE:

- When the BT function is turned off, the connection between this unit and the registered phone in use will be disconnected.
- When selecting "Go Back", the previous menu will be displayed.


Bluetooth[®] audio (if equipped)

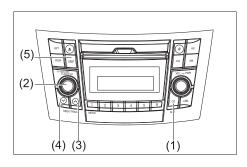

Steering switch

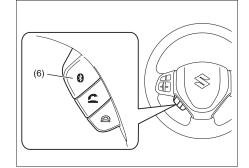

Display

 

- (1) CD button
- (2) TUNE FOLDER PUSH SOUND knob
- (3) Up button
- (4) Down button
- (5) DISP button
- (6) Bluetooth® setup button
- (A) Track number
- (B) Play time

NOTE:

Applicable for Bluetooth[®] audio version 2.1 and above.

Registration of audio devices

To use Bluetooth® ready audio devices with this unit, it is required to register the devices.

NOTE:

- To set up a new audio player, disconnect the phone from the unit. Connect the phone after audio player setup is completed if necessary.
- When failed to establish the connection within 120 seconds, the connecting operation will be canceled. Please try again or refer to the audio player manual for assistance with the pairing process.
- A separate audio mobile device can be selected for Bluetooth[®] audio, even if a phone is already connected to the hands free profile.
- Press the Bluetooth[®] setup button (6). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Pairing", and press the knob (2) to determine the selection.
- Select "CAR AUDIO" from the Bluetooth[®] menu of the audio player and establish the pairing.
 5-27

 
- Refer to the manual of the audio player in use for further information.
- Enter the Passkey displayed on the unit to the audio player. (For phones with Bluetooth[®] version 2.1 or above passkey input is not required)

NOTE:

- When selecting "Go Back", the previous menu will be displayed.
- When additionally registering audio devices, operate the same step from 1).

Selecting the Bluetooth® audio mode Press the CD button (1).

Each time the button is pressed, the mode will change as follows:



Selecting a group (only for supported models)

Turn the TUNE FOLDER PUSH SOUND knob (2) to select a group.

Selecting a track

- Press the Up button (3) to listen to the next track.
- Press the Down button (4) twice to listen to the previous track.

When the Down button (4) is pressed

once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (3) to fast forward the track.
- Hold down the Down button (4) to fast rewind the track,


NOTE:

Some functions may not be available depending on Bluetooth[®] audio.

Display change

Press the DISP button (5).

Each time the button is pressed, display will change as follows:

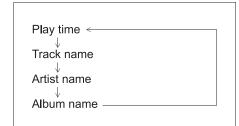

NOTE:

If text data contains more than 15 characters, the ">" mark will appear at the right end. Holding down the DISP button (5) for 1 second or longer can display the next page.

Selection of audio device (Select Audio) Follow the instructions below to select an audio device to be paired with from the registered audio devices.

- Press the Bluetooth[®] setup button (6). The Bluetooth[®] setup menu will be displayed
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select "List Audio", and press the knob (2) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (2) to select an audio device to be used, and press the knob (2) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Select", and press the knob (2) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Confirm", and press the knob (2) to complete the pairing.

NOTE:

- When selecting "Go Back", the previous menu will be displayed.
- The phone will be disconnected when the Bluetooth[®] ready audio device is selected.

List of audio devices (List Audio)

Follow the instructions below to display the names of the registered audio devices in sequence.

- Press the Bluetooth[®] setup button (6). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "List Audio", and press the knob (2) to determine the selection. The names of registered audio devices will be displayed in sequence.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Passkey setting (Set Passkey)

Follow the instructions below to set the security number (Passkey).

- Press the Bluetooth[®] setup button (6). The Bluetooth[®] setup menu will be displayed.
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Passkey", and press the knob (2) to determine the selection.

- 4) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "New Passkey", and press the knob (2) to determine the selection.
- Press or turn the TUNE FOLDER PUSH SOUND knob (2) to select "Confirm".
- 6) Turn the TUNE FOLDER PUSH SOUND knob (2) to select a number for the first digit, and press the knob (2) to determine the selection. Select and determine numbers for the second, third and fourth digits in order in the same manner. When not entering up to the eighth digit, enter blanks for the successive digits.
- 7) Turn the TUNE FOLDER PUSH SOUND knob (2) to determine the passkey setting.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Deletion of audio device information (Delete Audio)

Follow the instructions below to delete the registered information of audio device.

- Press the Bluetooth[®] setup button (6). The Bluetooth[®] setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "List Audio",

- and press the knob (2) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (2) to select an audio device to be deleted, and press the knob (2) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Delete", and press the knob (2) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Delete?", and press the knob (2) to determine the selection.
- Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Confirm", and press the knob (2) to complete the deletion.

NOTE:

When selecting "Go Back", the previous menu will be displayed.


Disclaimer for Bluetooth[®] function

- Depending on the mobile phone models, some phones may not be compatible fully or partially (some function may be restricted).
- Connectivity or voice quality may get affected depending on circumstances.
- After the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", the audio system takes few sec-

- onds to detect and connect to the Bluetooth[®] device (if already paired).
- Make sure that you are aware of all applicable local laws and accordingly use Bluetooth[®] device.

Remote Audio Controls (if equipped)

Controlling of basic functions of the audio system is available using the switches on the steering wheel.

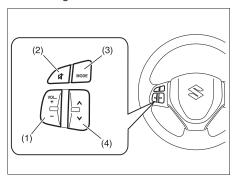

Adjusting the volume

- To increase the volume, hold down "+"
 of the VOL switch (1). The volume will
 keep on being increased until the
 switch is released.
- To decrease the volume, hold down "-"
 of the VOL switch (1). The volume will
 keep on being decreased until the


switch is released.

• To mute the sound, press the switch (2).

Selecting the mode

Press the switch (3).

Each time the button is pressed, the mode will change as follows:

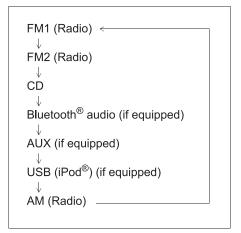

It is possible to turn on the audio system by pressing the switch (3).

Selecting the radio station (FM1, FM2, AM mode)

- To select the next preset station, press
 " Λ" of the switch (4) only for a moment.
- To select the previous preset station, press "v" of the switch (4) only for a moment.
- To scan a higher frequency radio station, press "\u00e1" of the switch (4) for 1 second or longer.
- To scan a lower frequency radio station, press "v" of the switch (4) for 1 second or longer.

Selecting the track (CD, USB (iPod®), Bluetooth® audio mode)


- To skip to the next track, press "\u00e1" of the switch (4) only for a moment.
- To skip to the previous track, press "v" of the switch (4) twice only for a moment.

When the switch (4) is pushed down once only for a moment, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- To fast forward, press "\u03b1" of the switch
 (4) for 1 second or longer.
- To fast rewind, press "v" of the switch
 (4) for 1 second or longer.

Anti-Theft Feature

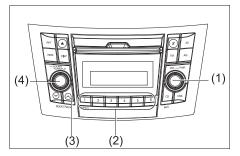

- (1) VOL PUSH POWER knob
- (2) Preset buttons ([1] to [6])
- (3) Up button
- (4) TUNE FOLDER PUSH SOUND knob

The anti-theft function is intended to discourage thefts, such as that the audio system becomes inoperable when it is installed on other vehicles.

This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the battery is disconnected, the unit will become inoperable until the PIN is reentered.

Setting the Anti-Theft Function

- 1) Press the VOL PUSH POWER knob (1) to power off.
- 2) Hold down the buttons numbered [1] and [6] of the Preset buttons (2) and press the VOL PUSH POWER knob (1).
 - "SECURITY" will be displayed.
- 3) Press the Up button (3) and the button numbered [1] of the Preset buttons (2) simultaneously.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1]
 [4] of the Preset buttons (2).
- 5) Hold down the TUNE FOLDER PUSH SOUND knob (4) for 1 second or longer to set the anti-theft function.

NOTE:

Take a note of the registered PIN and keep it for the future use.

Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- 1) Press the VOL PUSH POWER knob (1) to power off.
- Hold down the buttons numbered [1] and [6] of the Preset buttons (2) and press the VOL PUSH POWER knob (1).
 - "PIN ENTRY" will be displayed.

- 3) Press the Up button (3) and the button numbered [1] of the Preset buttons (2) simultaneously.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] [4] of the Preset buttons (2).
- 5) Hold down the TUNE FOLDER PUSH SOUND knob (4) for 1 second or longer to delete the registered PIN. The indication "----" will be displayed and the anti-theft function will be canceled.

NOTE:

To change your PIN, first delete your current PIN, then set a new one.

Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the battery is replaced, etc, it is required to enter the PIN to make the unit operable again.

- Set the ignition switch to the "ACC" position or the ignition mode to "ACC". "SECURITY" will be displayed.
- Press the Up button (3) and the button numbered [1] of the Preset buttons (2) simultaneously.
- 3) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] [4] of the Preset buttons (2).
- 4) Hold down TUNE FOLDER PUSH

SOUND knob (4) for 1 second or longer.

When the PIN same as registered is entered, the power of the audio system will be turned off automatically and it will become operable again.


NOTE:

If an incorrect PIN is entered, "ERROR" and the total number of incorrect entry attempts will be displayed.

If an incorrect PIN is entered 10 times or more, "HELP" will be displayed and the audio system will become inoperable.

Battery Installation

Install a lithium battery (CR2025) with the poles facing the correct direction.

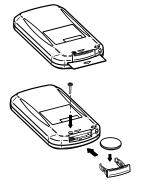

Battery replacement timing

 When battery power is depleted, the button may not be operable. If the remote controller does not operate, replace the battery and check the operation.

Caution on battery

Be sure to follow the instructions to prevent battery leakage, over-heating, ignition or explosion.

WARNING

- Do not expose the battery to flame.
 Do not short circuit, disassemble, or heat the battery.
- Do not charge the battery.
- Use the specified type battery.
- Keep the button-shaped battery away from children to prevent accidental swallowing.
- If the battery is swallowed, contact a doctor immediately.

A CAUTION

- Install the battery with the poles facing the correct direction.
- When not in use for a long period of time, or if the battery is dead, remove the battery from the remote controller.

If battery leakage has occurred, wipe the container first then install a new battery. If

the battery solution contacts the skin, wash off with water completely.


Caution on Remote Controller

- Do not leave the remote controller in an area exposed to direct sunlight, such as on the dashboard or steering wheel. The remote controller may deform because of the heat, (Be especially careful of the dashboard exposed to direct sunlight in the summer, as it will become extremely hot).
- When the vehicle is parked in an area exposed to direct sunlight, Ensure the remote controller is placed in an area not exposed to direct sunlight. For example: Glove box.


Under direct sunlight, signal reception from the remote controller weakens. If this happens, hold the remote controller close to the signal receptor on the front panel.

Remote Controller

Common operations

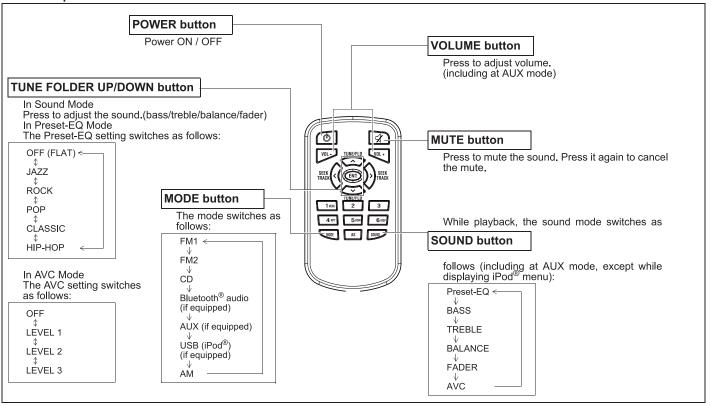



Radio operations

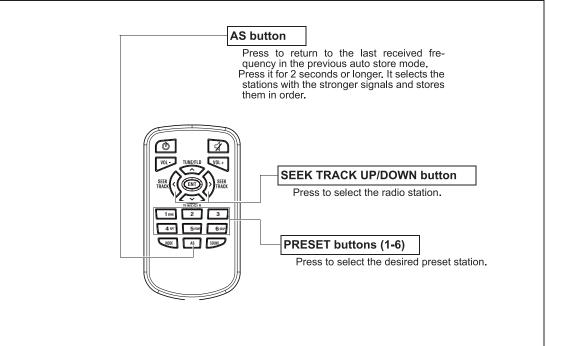



NOTE:

When there are fewer than 6 stations that can be stored even if 1 round of auto store operation is performed, no station will be stored at the remaining preset buttons.

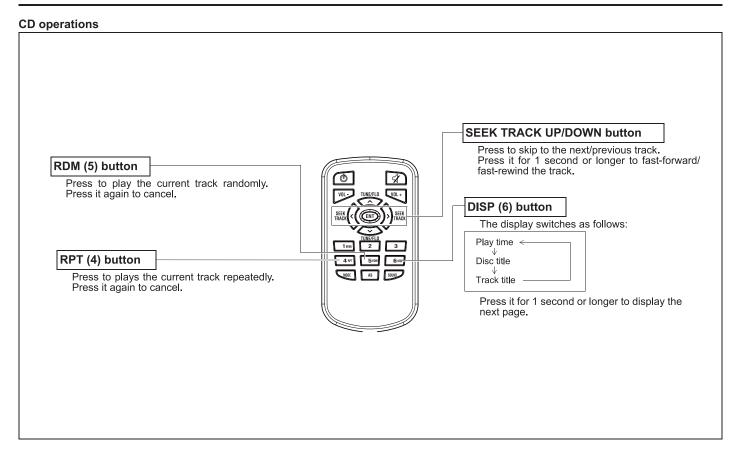

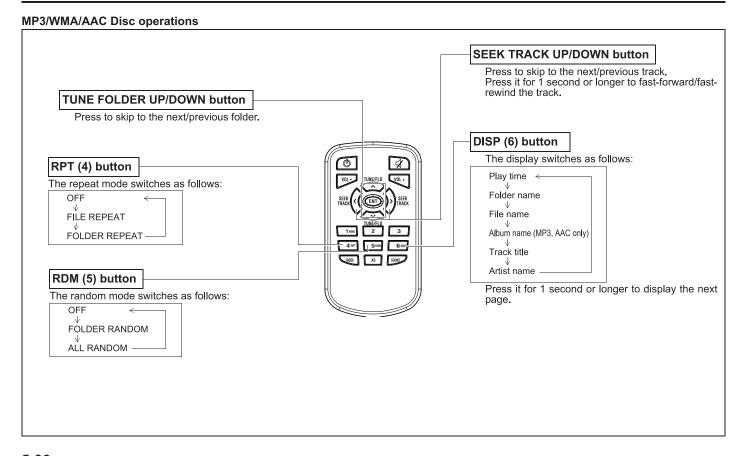

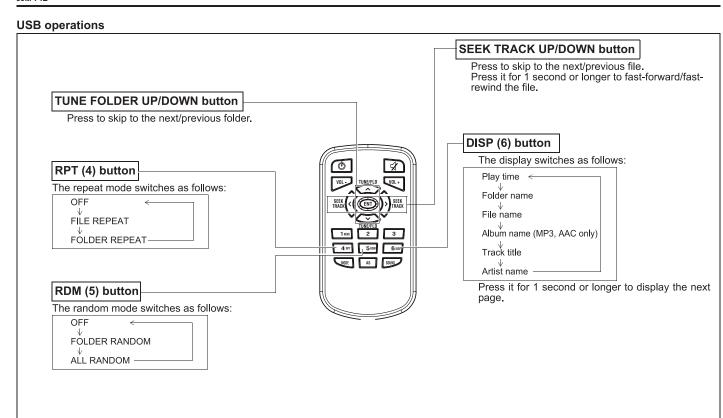

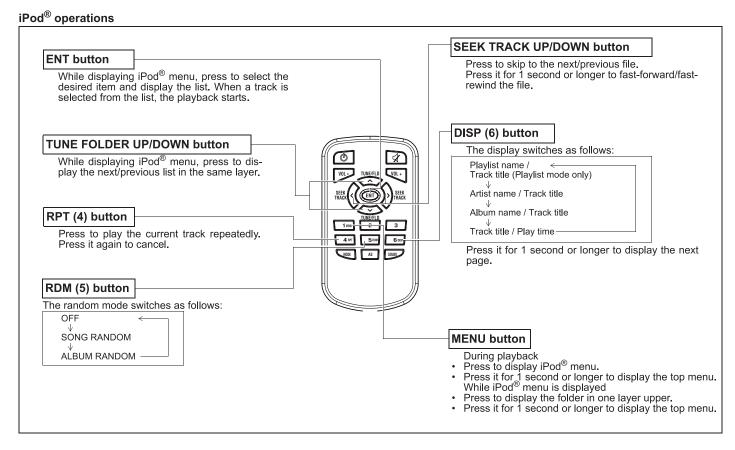

Troubleshooting

When encountered a problem, check and follow the instructions as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your authorized MARUTI SUZUKI dealer.

Problem	Possible cause	Possible solution		
Common				
Unable to operate	The security function is on.	When "SECURITY" is displayed, enter the ID. When "HELP" is displayed, contact your authorized MARUTI SUZUKI dealer.		
Unable to turn on the power (no sound). (No sound is produced)	Fuse is blown.	Contact your authorized MARUTI SUZUKI dealer.		
Radio				
Much noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.		
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.		
CD				
Sound skips or noise produced	The disc is dirty.	Wipe the disc with a soft cloth.		
	The disc has a major scratch or is warped.	Replace the disc with the one with no scratch and also not warped.		


Problem	Possible cause	Possible solution		
MP3/WMA/AAC				
No playback	The disc contains unsupported formatted data. Check the file format.			
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.		
USB				
Playback does not start when the USB device is connected.	There is no supported format file to play on this unit.	Check the file format.		
	The current consumption of the USB device exceeds 1.0 A.	Use an USB device with a current consumption lower than 1.0 A.		
Bluetooth [®]				
Pairing failed	The distance between this unit and the Bluetooth [®] ready device is too far, or a metallic object may be located between the Bluetooth [®] ready device and this unit.	Change the location of the Bluetooth® ready device.		
	The Bluetooth [®] function of the Bluetooth [®] ready device is off.	Refer to the manual of the Bluetooth® ready device. (Some devices have the power saving function that automatically activates after a certain time.)		
Unable to receive a call.	Your current location may be out of service area.	Drive your vehicle to the service area of the phone.		
The voice quality of hands-free is low (Distortion, noise etc.).	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit.		

Error Display Messages


Display	Possible cause	Possible solution
CD		
ERROR 1	The disc cannot be read.	Insert the disc with its label side up. Check the disc if it is not warped or is free of flaws. When ERROR 1 does not disappear even when a normal disc is inserted, contact your dealer.
ERROR 3	The player developed an error of an unidentified cause.	When the CD is in the unit, press the CD eject button to remove the disc. When the disc cannot be ejected, contact your dealer.
USB/iPod [®]		
ERROR 1	The USB device is disconnected.	Check the connection of the USB device.
ERROR 2	Impossible to communicate correctly with the USB device.	Unplug the USB device and plug it again. Check the USB device.
ERROR 3	Inoperable due to an unidentified cause.	Unplug the USB device and plug it again. When ERROR 3 does not disappear, contact your dealer.
ERROR 4	The current consumption of the USB device exceeds 1.0 A.	Check the USB device.

Display	Possible cause	Possible solution
Bluetooth [®]		
ERROR 1	The player developed an error of an unidentified cause.	Disconnect the Bluetooth [®] ready device and connect it again. When ERROR 1 does not disappear, contact your dealer.
Connection Failed	Failed to establish pairing or connection	Try to establish the pairing or connection again.
Memory Full	Phonebook data being transferred has reached the maximum	Delete unnecessary data of the phonebook and try to transfer again.
Not Available	Inoperable during driving	Operate the system after pulling over your vehicle.

Fuel Filler Cap

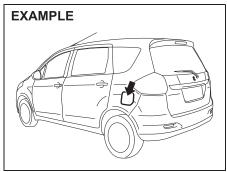


60MK057

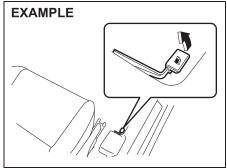

74LHT0511

The fuel filler cap is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard side of the driver's seat and locked by simply closing the door.

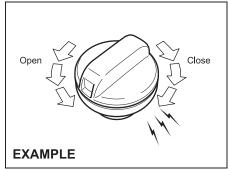


57L51093

To remove the fuel filler cap:

- 1) Open the fuel filler door.
- 2) Remove the cap by turning it counterclockwise.

A CAUTION


Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

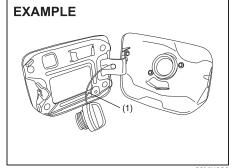

60MH066

NOTE:

If the hook (1) is equipped with the fuel filler door, hold the fuel filler cap when refueling.

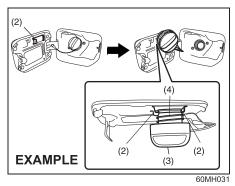

NOTE:

You can also use the cap holder (2) to hold the fuel filler cap (3) by hooking the groove (4) when refueling.

To reinstall the fuel filler cap:

- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.


WARNING

Fuel is extremely flammable. Do not smoke when refueling, and make sure there are no open flames or sparks in the area.

WARNING

If you need to replace the fuel cap, use a Maruti genuine cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage in the event of an accident.


Engine Hood

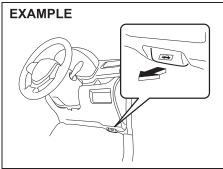


74LHT0533

To open the engine hood:

 Pull the hood release handle located on the outboard side of the driver's side of the instrument panel. This will disengage the engine hood lock halfway.

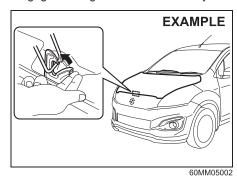

2) Push the under-hood release lever sideways with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

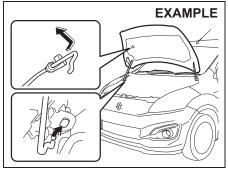


60MM0500

 Continue to lift up the hood until it is high enough to support with the prop rod.

To close the engine hood:

1) Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back to the holding clip.

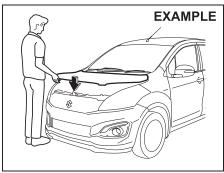


60MM05003

 Lower the hood to about 20 cm above the hood latch, then let it drop down. Make sure the hood is securely latched after closing.

▲ WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Sun Visor

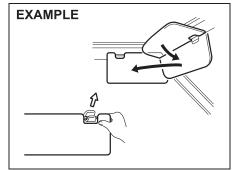


79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, be sure to handle it by the hard plastic parts or the sun visor can be damaged.

Card holder (if equipped)

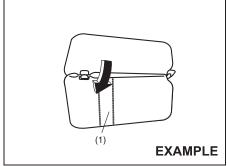

74LHT0516


(1) Card holder

You can put a card in the card holder (1) on the back of the sun visor.

NOTICE

When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

Vanity mirror (if equipped)

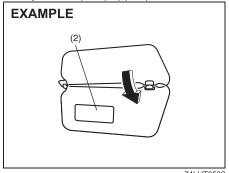

74LHT0532


(2) Vanity mirror

▲ WARNING

When using the vanity mirror, do not move too close to a front air bag location or lean against it. If the front air bag is accidentally inflated, it could hit you hard.


Interior Light Switch

Front, Type A (if equipped)

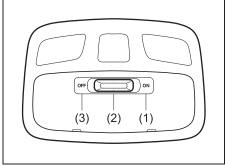


60MH129

Front, Type B (if equipped) Center (if equipped)

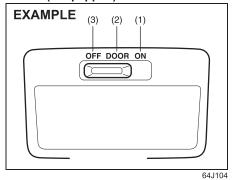

Rear

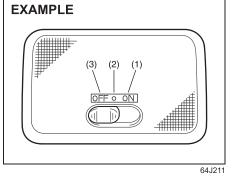

This light switch has three positions which function as described below:

The light comes on and stays on regardless of whether the door is open or closed.


DOOR (2)

· The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you insert the key, or press the engine switch to change the ignition mode to "ACC" or "ON" during this time, the light will start to fade out immediately. After removing the key from the ignition switch, the light will turn on for about 15 seconds and then fade out.

- Regardless of whether the door is open or closed, the light comes on 15 seconds and then fade out when the ignition mode is changed to "LOCK" (OFF) or the ignition switch is turned to the "LOCK" position.
- To save the battery, the light will be automatically turned off when a period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

OFF (3)

The light remains off even when the door is opened.

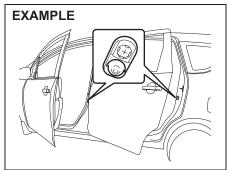


60MH034

NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber projection) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber projection depending on the vehicle specification.


Accessory Socket

Front

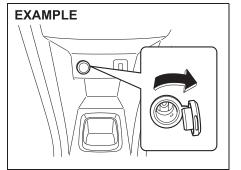

74LHT0517

Rear (if equipped)

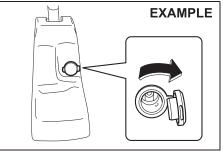


60MK061

The accessory socket will work when the ignition switch is in the "ACC" or "ON" position, or the ignition mode is "ACC" or "ON". Each socket can be used to provide 12 volt/120 watt/10 ampere power for electrical accessories when used alone. Make sure that the cap remains on the socket when the socket is not in use.

NOTICE

- To prevent the fuse from being blown, when using sockets at the same time, do not exceed the total combined power capacity of 12 volt/120 watt/10 ampere.
- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system.
 Make sure that any electrical accessories you use are designed to plug into this type of socket.


AUX/USB Socket (if equipped)

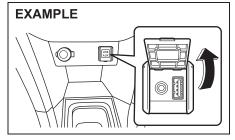

60MH067

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system using it as a source. Refer to "Audio System" in this section.

Assist Grips

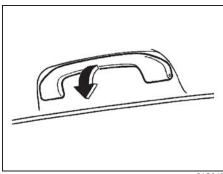


54G249

Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Glove Box

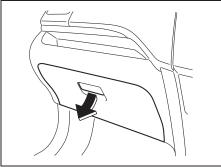

74LHT0519

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

WARNING

Never drive with the glove box lid open. It could cause injury if an accident occurs.


Cup Holder and Storage Area

WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.


- Be careful when you are using the cup holders to hold a cup containing hot liquid. Spilling out hot liquid can cause burn injury.
- Do not use the cup holders to hold sharp-edged, hard, or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.

Front

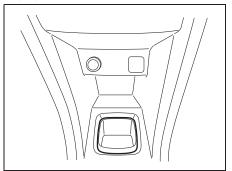


74LHT0520

3rd row seats

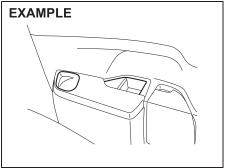

60MH035

2nd row seats

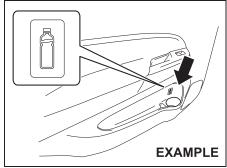


You should hold a bottle with a cap in the

Front Seat Back Pocket

60MK06


Passenger side

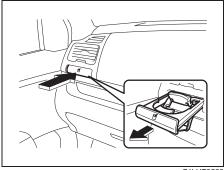


74LHT0529

To use the cup holder, push it. The cup holder slides out automatically. After using the holder, push it back to return it.

Bottle holder

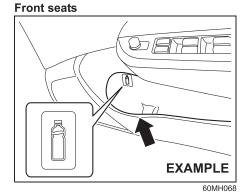

(if equipped)

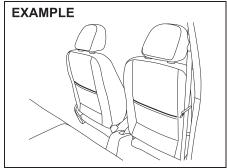

60MH078


This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

A CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.

Armrest (if equipped)

2nd row seat

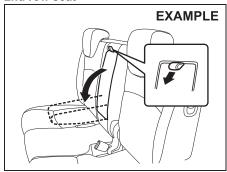

60MH037

To use the armrest, pull the strap and lower the armrest. When not in use, push back in the seat until the armrest is secured.


WARNING

In an accident or sudden stop, the rear armrest (if equipped) could fall forward. If there is a child in a rearfacing child restraint in the center seating position, the falling armrest could injure the child. Make sure the armrest is secured in the stowed position when not in use.

NOTICE


To avoid damage to the armrest, do not lean on it or allow a child to sit on it.

Footrest (if equipped)

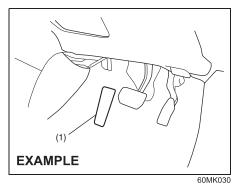

Use the footrest (1) as a support for your left foot.

Floor Mats (if equipped)

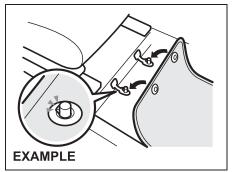

60MK020

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, Maruti genuine part floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, be sure to hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.


When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend using Maruti genuine floor mats for proper fitting.

WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Make sure that the floor mat grommets are hooked to the fasteners.
- Never place additional floor mats on top of the existing floor mat.

Luggage Box (if equipped)

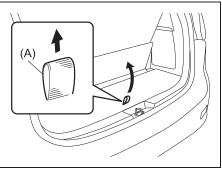


60MK063

Pull up the straps (A) of the luggage box cover to use the box.

NOTICE

Do not allow items in the box to extend above the top of the box. Otherwise, the box or cover may be damaged.

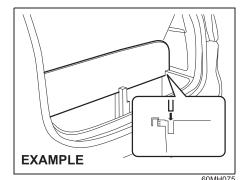

001

NOTE:


The luggage box cover can be held open as shown in the above illustration.

NOTICE

If the luggage box cover is held open while driving, it can be damaged. Do not hold open the luggage box cover while driving.

Frame Hooks

Front

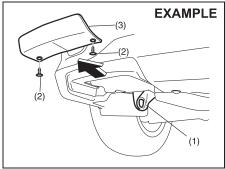

60MM05001


To access the frame hook (1), remove the clips (2) and take out the cover (3). The frame hook (1) is provided on the front of the vehicle for use in emergency situations and sea shipping purposes only.

NOTICE

When you use the frame hook (1), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, or the vehicle body.

Do not sudden accelerate.

Rear

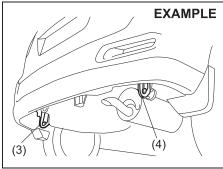

The frame hook (3) is provided on the rear of the vehicle for use in emergency situations and trailer/train/sea shipping purposes only.


NOTICE

When you use the frame hook (3), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, the vehicle body or the drive system.

- · Do not sudden accelerate.
- Do not tow the vehicle heavier than your vehicle.

To tow your vehicle on the road or highway, follow the instruction of "Towing" in "EMERGENCY SERVICE" section.

Other Hooks

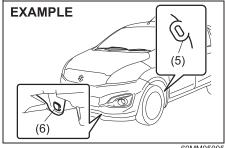

60MM05005

The hook (4) is provided for trailer/train/ sea shipping purposes only.

The hook (5) (or opposite side) is provided for trailer/train shipping purposes only. The hook (6) is provided for sea shipping purpose only.


WARNING

Do not use the frame hooks to tow another vehicle or to have your vehicle towed on the road or highway. The hook (1) is designed for use in emergency situations such as if your vehicle or another vehicle gets stuck in deep mud or snow, and sea shipping only. The hook (3) is designed for use in emergency situations and trailer/train/sea shipping only.

The hooks (4) and (5) are provided for trailer/train shipping purposes only. The hook (6) is provided for sea shipping purpose only.

NOTICE

Never use the hooks (1) for trailer/ train shipping purposes to prevent damage to the vehicle.

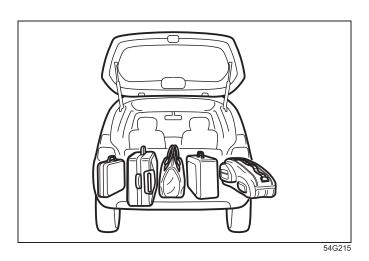

VEHICLE LOADING AND TOWING

venicle Loading	 6-
Trailer Towing	 6-

VEHICLE LOADING AND TOWING

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the "SPECIFICA-TIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

 
WARNING

Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).

WARNING


Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer Towing



60A185

Your MARUTI SUZUKI was originally designed to carry people and a normal amount of cargo, not to tow a trailer. MAR-UTI SUZUKI does not recommend you use your vehicle to tow a trailer. Towing a trailer can adversely affect handling, durability, and fuel economy.

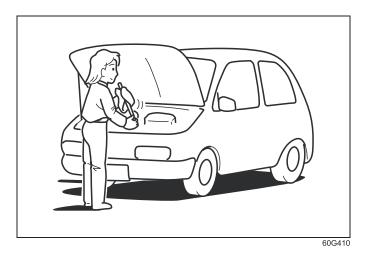

INSPECTION AND MAINTENANCE

Maintenance Schedule	7-2
Periodic Maintenance Schedule	7-2
Drive Belt	7 - 6
Engine Oil and Filter	7-6
Engine Coolant	7-10
Air Cleaner	7-12
Spark Plugs	7-13
Gear Oil	
Clutch Pedal	7-15
Automatic Transaxle (AT) Fluid	7-15
Fuel Filter (Diesel engine)	7-17
Brakes	7-17
Steering	7-19
Tires	7-19
Battery	7-21
Fuses	7-23
Headlight Aiming	7-25
Bulb Replacement	7-25
Wiper Blades	
Windshield Washer Fluid	7-32
Air Conditioning System	7-32



60B128S

▲ WARNING

You should take extreme care when working on your vehicle to prevent accidental injury. Here are a few precautions that you should be especially careful to observe:

 To prevent damage or unintended activation of the air bag system or seat belt pretensioner system, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position or the ignition mode has been "LOCK" (OFF) for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI. Do not touch air bag system components, seat belt pretensioner system components or wires

The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

 Do not leave the engine running in garages or other confined areas.

(Continued)

WARNING

(Continued)

- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to do service work with the engine running, make sure that the parking brake is set fully and the transaxle is in Neutral (for manual transaxle vehicles) or Park (for automatic transaxle vehicles).
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery.
 Flammable fumes are present.
- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.

(Continued)

▲ WARNING

(Continued)

 Keep used oil, coolant, and other fluids away from children and pets.
 Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services. These intervals should be shortened if driving is usually done under severe conditions.

WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by authorized MARUTI SUZUKI workshop/Service station.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use genuine MARUTI SUZUKI replacement parts or their equivalent.

Periodic Maintenance Schedule

"A":Adjust

"C":Clean

"R":Replace or Change

"I":Inspect, clean, adjust, lubricate or replace as necessary

"L":Lubricate

"T":Tighten to Specified Torque

"O":Rotate

NOTE:

This table includes services as scheduled up to 80000 km mileage. Beyond 80000 km, carry out the same services at the same intervals respectively.

Interval: This interval should be judged by odometer reading or months, whichever comes first.		lometer reading		FREE	E INSPEC	CTION		PERI	ODIC MA	IAINTENANCE AT COST			
		km (x1000)	1	5	10	20	30	40	50	60	70	80	
			months	1	6	12	24	36	48	60	72	84	96
Engine)		•	•	•	•	•	•	•	•	•	•	•
1-1.	Water pump drive (Tension, Wear)	Petrol		-	-	1	1	I	I	I	I	I	R
1-1.	water pump drive (Tension, Wear)	Diesel (Vehicle equ	ipped with SHVS)	-	-	ı	ı	I	I	1	R	I	I
1-2	ISG Belt	Diesel (Vehicle equ	ipped with SHVS)	-	-	I	I	R	I	ı	R	I	I
1-3	Engine Coolant (Level, Leakage)			I	1	ı	R	I	R	I	R	I	R
1-4	Engine oil, engine oil filter and drair	n plug gasket		-	-	R	R	R	R	R	R	R	R
1-5	Cooling system hoses and connect	ions (Leakage and D	amage)	I	1	ı	ı	I	I	I	I	I	I
1-6	Engine Mounting & manifold fixing	(loose, damage)		-	-	I	-	I	-	ı	-	I	-
1-7	Valve Clearance		Petrol	-	-	-	-	I	-	-	I	-	-
1-8	Exhaust System (Noise, Leakage e	tc.)	•	-	I	-	I	-	I	-	I	-	I
1-9	Positive Crank Case Ventilation System (Hoses, Connections and Valve)		Petrol	-	1	-	1	-	I	-	I	-	1
1-10	-10 Exhaust Gas Recirculation Valve Diesel		Diesel	-	-	-	-	С	-	-	С	-	-
IGNITI	ON		•	•		•	•	•	•		•	•	•
2-1.	Ignition wire (Damage, Deterioratio	n)	Petrol	-	-	-	I	-	I	-	I	-	
2-2.	Spark Plug		Petrol	-	-	-	-	-	R	-	-	-	R
FUEL			•		•	•	•			•		•	
		Paved-road	Petrol	Clean after every 5,000 KM. Replace after every 40,000 KM.									
		l aveu-loau	Diesel	Replace after every 20,000 KM. Cleaning not required.									
3-1.	Air cleaner filter element	Tetrol Ocali and every 2,000 few of as required. Replace and every 40,000 few.											
	Dusty Condition		Diesel	Replace after every 20,000 KM. Cleaning not required. More frequent replacement if dust condition is severe.									
3-2.	3-2. Fuel tank cap, fuel lines and connections (Leakage and Damage)			-	I	-	-	-	I	-	-	-	I
3-3.	. Fuel Filter (Leakage) Petrol		-	-	-	-	-	R	-	-	-	R	
3-4.	3-4. Fuel Filter and Water Draining Diesel			I	I	I	R	I	R	I	R	I	R
CLUTO	CH AND TRANSMISSION												
4-1.	Clutch fluid (level, leakage)			I	1	I	R	I	R	I	R	I	R
4-2.	Clutch slipping (Dragging or Excess	s Damage)		I	I	I	I	I	I	I	I	I	I

Interval: This interval should be judged by odometer reading			FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
or months, whichever comes first. km (x1000) months		1	5	10	20	30	40	50	60	70	80	
		months	1	6	12	24	36	48	60	72	84	96
4-3.	Manual Transaxle Oil (Level, Leakage)	•	Replace at 1,60,000 km or 10 years whichever comes first									
4-4.	Automatic Transaxle Fluid (Level, Leakage)		Replace at 1,65,000 km or 11 years whichever comes first									
4-5.	Hose, Automatic Transaxle Fluid		J	I	I	I	I	I	I	I	I	I
Drive sh	naft											
5-1.	Drive shaft boot (boot damage)		-	I	I	I	I	I	I	I	I	I
BRAKE				•	•	•	•	•	•		•	
6-1.	Brake Fluid (Level, Leakage)		I	I	I	R	I	R	I	R	I	R
6-2.	Brake pedal (pedal - wall clearance)		I	I	I	I	I	I	I	I	I	I
6-3.	Parking brake lever and cable (Play, damage)		I	I	I	I	I	I	I	I	I	I
6-4.	Brake disc and pad (Wear)		_	I	I	I	I	I	I	I	I	I
6-5.	Brake drum and shoes (Wear)		_	_	I	I	I	I	I	I	I	I
6-6.	Brake hoses and pipes (Fluid leakage, damage)		I	I	I	I	I	I	I	I	I	I
6-7.	Master cylinder, wheel cylinder and caliper piston (Fluid leakage, boot/ seal damage)			I	I	I	I	I	I	I	I	I
WHEEL												
7-1.	Tyres (air pressure, abnormal wear, crack and rotation)	J	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O
7-2.	Wheels (Damage)		I	I	I	I	I	I	I	I	I	I
7-3.	Front/Rear wheel bearing (Loose, damage)		I	I	I	I	I	I	I	I	I	I
FRONT	/ REAR SUSPENSION			•	•	•	•	•	•		•	
8-1.	Suspension strut (Oil leakage, damage)		I	I	I	I	I	I	I	I	I	I
8-2.	Suspension arms / Knuckle support (Loose, damager)		_	I	I	I	I	I	I	I	I	I
8-3.	Rear spring (Damage)			I	I	I	I	I	I	I	I	I
8-4.	Shock absorbers (Oil leakage, damage)			ı	I	I	I	I	I	I	ı	I
8-5.	All bolts and nuts (Loose)			Т	Т	Т	Т	Т	Т	Т	Т	Т
8-6.	8-6. Suspension arms and torsion rods			I	I	I	I	I	I	1	I	I
STEERI	NG		•	•	•	•	•	•	•	•		
9-1.	Steering wheel (Play, loose)			I	I	I	I	I	I	1	I	T
9-2.	All rods and arms (Loose, damage, wear)		ı	I	I	I	I	I	I	- 1	I	I
												7.4

Interval: This interval should be judged by odometer reading or months, whichever comes first.			FREE	EE INSPECTION PERIODIC MAINTENANCE AT COST						COST		
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
ELECT	RICAL	<u> </u>	•	•	•	•			•	•	•	
10-1.	Battery electrolyte (Level, leakage)		1	I	I	I	I	I	I	I	I	I
10-2.	Wiring harness connection (Loose, damage)		-	ı	I	I	I	1	ı	1	1	l l
10-3.	Lighting system (Operation, stains, damage)		1	1	ı	I	ı	1	1	ı	ı	1
10-4.	Horn (Operation)		1	ı	I	I	I	1	1	1	1	I
10-5.	System Voltage			I	I	I	I	I	I	I	I	I
BODY				•	•	•			•	•	•	
11-1.	All chassis bolts and nuts (Tighten)		_	I	Т	Т	Т	Т	Т	Т	Т	Т
11-2.	2. All latches, hinges and locks (Function)			I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAD	TEST		•		•	•	•			•	•	
12-1.	Operation of Brakes, gear shifting and speedometer		I	I	I	1	I	I	I	I	I	I
12-2.	Body and chassis noise		1	I	I	I	I	I	ı	I	I	I
AIR CC	NDITIONER		•	•	•	•			•	•	•	
13-1.	Tighten compressor mounting bolt		_	Т	Т	Т	Т	Т	Т	Т	Т	Т
13-2.	All hose joint (Check, tighten)		I	I	I	I	I	I	I	I	I	I
13-3.	-3. Check functioning of Recirculating flap		1	ı	I	I	I	I	ı	I	I	I
13-4.	Clean condenser with low pressure water		-	С	С	С	С	С	С	С	С	С
13-5.	5. Check belt for frayed edges		I	1	I	I	I	I	1	I	I	
13-6.	-6. Check all mounting bolts		1		I	I	I	ı		ı	ı	
13-7.	Air conditioner filter element						R	ı		R		I

Drive Belt

WARNING


When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

Make sure the drive belt tension is correct. If the belt is too loose, insufficient battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. When you press the belt with your thumb midway between the pulleys, there should be a deflection according to the following chart.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by your MARUTI SUZUKI dealer.

(For Petrol Engine Model)

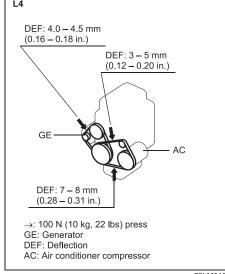

52LM013

(For Diesel Engine Model)

The drive belts tension adjusted automatically.

Engine Oil and Filter Specified Oil

(For Petrol Engine Model)

Be sure that the engine oil you use comes under the quality classification of SG, SH, SJ, SL, SM or SN. Select the appropriate oil viscosity according to the above chart.

SAE 0W-20 (1) is the best choice for good fuel economy, and good starting in cold weather.


(For Diesel Engine Model)

Be sure that the engine oil you use comes under the quality classification of ACEA A5/B5. Select the appropriate oil viscosity according to the above chart.

SAE 5W-30 (1) is the best choice for good fuel economy, and good starting in cold weather


Oil Level Check

(For Petrol Engine Model)

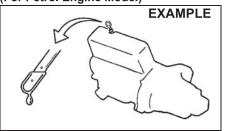

80G064


(For Diesel Engine Model)

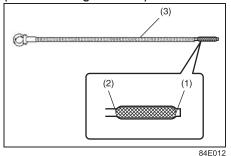

- (1) MIN
- (2) MAX
- (3) Engine oil dipstick

It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

The handle of the engine oil dipstick is colored yellow for easy identification.

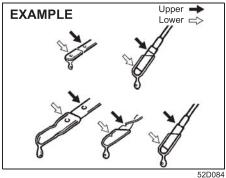

Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE


Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

NOTICE

(For Diesel Engine Model)


Do not top up the oil over the MAX limit. Too much oil causes serious engine trouble.

Refilling (Petrol)

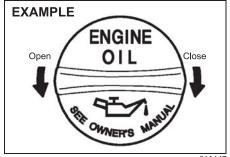

81A147


Refilling (Diesel)

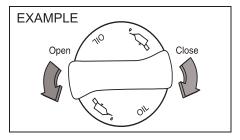

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

Changing Engine Oil and Filter

Drain the engine oil while the engine is still warm.

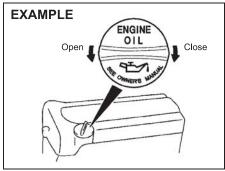


56KN054

- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain out the engine oil.

A CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

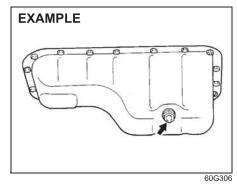

Tightening torque for drain plug Petrol engine: 35 Nm (3.5 kg-m, 25.3 lb-ft) Diesel engine:

20 Nm (2.0 kg-m, 14.5 lb-ft)

A WARNING

New and used oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.

Repeated, prolonged contact with used engine oil may cause skin cancer

Brief contact with used oil may irritate skin.

To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.

Launder any clothing or rags if wet with oil.

Recycle or properly dispose of used oil and filters.


4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

Replace the Oil Filter

(For Petrol Engine Model)


- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.

- 3) Smear a little engine oil around the rubber gasket of the new oil filter.
- Screw on the new filter by hand until the filter gasket contacts the mounting surface.

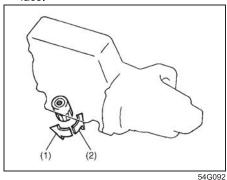

(1) Loosen (2) Tighten

Tightening (viewed from filter top)

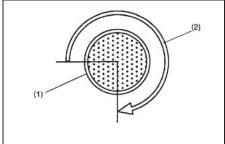

(1) Oil filter

(2) 3/4 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

5) Tighten the filter specified turn from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter 3/4 turn or Petrol engine: 14 Nm (1.4 kg-m, 10.1 lb-ft)


(For Diesel Engine Model)

NOTE:

54G093

Since special procedures and tools are required, it is recommended that you trust this job to your authorized MARUTI SUZUKI dealer.

1) Using a socket or a ring spanner remove oil filter housing cover (3).

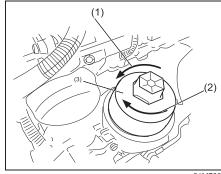

61M7001

(1) Loosen


(2) Tighten

- 2) Remove the old oil filter element and replace it with a new oil filter element.
- 3) Clean the surface of oil filter cap and replace the O-ring.4) Tighten the oil filter housing cover on
- Tighten the oil filter housing cover on the oil filter housing using a socket or ring spanner to the specified torque.

Tightening torque for oil filter Diesel engine: 25 Nm (2.5 kg-m, 18.5 lb-ft)

NOTICE

To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

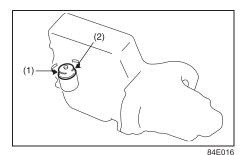

(1) Loosen (2) Tighten

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

 Tighten the filter specified turn from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter Diesel engine: 25 Nm (2.5 kg-m, 18.5 lb-ft)

NOTICE

To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

Refill with Oil and Check for Leaks

- Pour oil through the filler hole and install the filler cap.
 For the approximate capacity of the oil, refer to the "Capacities" item in the "SPECIFICATIONS" section.
- Start the engine and look carefully for leaks at the oil filter and drain plug. Run the engine at various speeds for at least 5 minutes.
- 3) Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leaks again.

NOTICE

- When replacing the oil filter, it is recommended that you use a genuine Maruti replacement filter. If you use an aftermarket filter, make sure it is of equivalent quality and follow the manufacturer's instructions.
- Oil leaks from around the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leaks or are not sure that the filter has been properly tightened, have the vehicle inspected by your MARUTI SUZUKI dealer.

Engine Coolant

Selection of Coolant

To maintain optimum performance and durability of your engine, use Maruti I Genuine Coolant or equivalent.

This type of coolant is best for your cooling system as it:

- Helps maintain proper engine temperature.
- Gives proper protection against freezing and boiling.
- Gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your authorized MARUTI SUZUKI dealer can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Make sure that the proper mix is 50/ 50 coolant to distilled water (Diesel) and 30/70 (Petrol). Concentrations greater than this may cause overheating conditions.
- Do not use straight coolant nor plain water.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/automatic transaxle damage.

Coolant Level Check

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between the "FULL" and "LOW" marks.

Adding Coolant

WARNING


Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.

NOTICE

- The mixture you use should contain 50% concentration of antifreeze.
- If the lowest ambient temperature in your area is expected to be – 35°C (–31°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.

(For Petrol Engine Model)

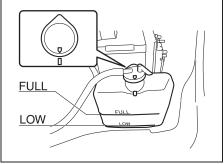


60MH043

If the coolant level is below the "LOW" mark, more coolant should be added. Remove the reservoir tank cap and add coolant until the reservoir tank level reaches the "FULL" mark. Never fill the reservoir tank above the "FULL" mark.

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

(For Diesel Engine Model)

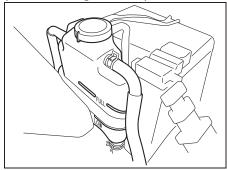

60MH134

A WARNING

It is hazardous to remove the reservoir tank cap (degassing tank cap) for a diesel engine when the water temperature is high, because scalding fluid and steam may be blown out under pressure. Wait until the coolant temperature has lowered before removing the cap.


If the coolant level is below the "LOW" mark, more coolant should be added. When the engine is cool, remove the degassing tank cap by turning it anticlockwise slowly to release any pressure. And add coolant until the degassing tank level reaches the "FULL" mark. Never fill the degassing tank above the "FULL" mark.

Coolant Replacement

Since special procedures are required, we recommend you take your vehicle to your MARUTI SUZUKI dealer for coolant replacement.


Air Cleaner

(For Petrol Engine Model)

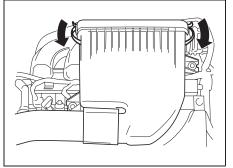

60MH045

(For Diesel Engine Model)

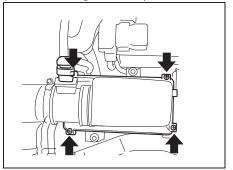

74LHT0702


If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.


Unclamp the side clamps or loosen the screws, and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.

Clamp the side clamps or tighten the screws securely.

Spark Plugs

For nickel spark plugs (traditional type): You should inspect spark plugs periodically for carbon deposits. When carbon accumulates on a spark plug, a strong spark may not be produced. Remove carbon deposits with a wire or pin and adjust the spark plug gap.

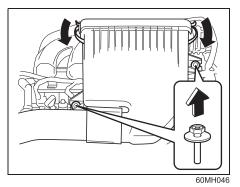

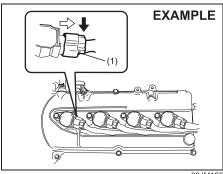


80JM125

To access the spark plug:

- Unclamp the side clamps and loosen the screws, then remove the air cleaner case.
- 2) If necessary, disconnect the coupler (1) while pushing the release lever.
- 3) Remove the ignitor bolts.
- 4) Pull the spark plug boots out.

NOTE:


When installation, make sure the wires, couplers, sealing rubber of air cleaner assy and washers, are correctly returned in place.

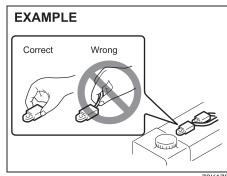

78K179

NOTICE


- When disconnecting the spark plug cables, pull on the boot, not on the cable itself. Pulling on the cable can damage it.
- When servicing the iridium/platinum spark plugs (slender center electrode type plugs), do not touch the center electrode, as it is easy to damage.

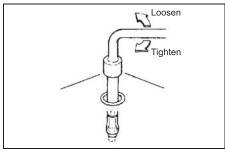

60G160A

NOTICE

- When installing the spark plugs, screw them in with your fingers to avoid stripping the threads. Tighten with a torque wrench to 17.5 Nm (1.8 kg-m, 13.0 lb-ft). Do not allow contaminants to enter the engine through the spark plug holes when the plugs are removed.
- Never use spark plugs with the wrong thread size.

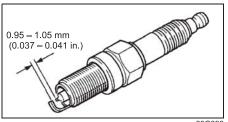

80G093

NOTICE

When replacing spark plugs, you should use the brand and type specified for your vehicle. For the specified plugs, refer to the "SPECIFICATIONS" section at the end of this book. If you wish to use a brand of spark plug other than the specified plugs, consult your MAR-UTI SUZUKI dealer.

 
Gear Oil

Specified Gear Oil

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use: "MARUTI SUZUKI GEAR OIL 75W-80" for manual transaxle gear oil.


Manual transaxle oil



68LM728

Gear Oil Level Check

Manual transaxle

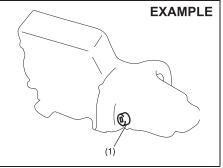

60MH047

(1) Oil filler and level plug

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug (1).

- Check the inside of the hole with your finger. If the oil level comes up to the bottom of the plug hole, the oil level is correct, If so, reinstall the plug.
- If the oil level is low, add gear oil through the oil filler and level plug hole (1) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

Tightening torque for oil filler and level plug (1)

Manual transaxle:

21 Nm (2.1 kg-m, 15.2 lb-ft)

A CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler plug is cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE

When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.


SUZUKI Bond No. "1216E" or "1217G"

Gear Oil Change

Since special procedures, materials and tools are required, it is recommended that you trust this job to your authorized MAR-UTI SUZUKI dealer.

Clutch Pedal

Fluid Control Clutch

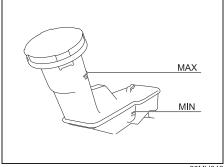

60MH04

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your MARUTI SUZUKI dealer. If the clutch fluid level is near the "MIN" line, fill it up to the "MAX" line with Maruti Genuine Brake Fluid (MGBF) or DOT 3.

We highly recommend to use "Maruti Genuine Brake Fluid" (MGBF).

Automatic Transaxle (AT) Fluid

Specified Fluid

Use an automatic transaxle fluid SUZUKI AT OIL AW-1.

Fluid Level Check

NOTICE

Driving with too much or too little fluid can damage the transaxle.

You must check the fluid level with the automatic transaxle fluid at normal operating temperature.

To check the fluid level:


- To warm up the transaxle fluid, drive the vehicle or idle the engine until the temperature gauge indicates normal operating temperature.
- 2) Then drive for ten more minutes.

NOTICE

Be sure to use the specified automatic transaxle fluid. Using automatic transaxle fluid other than SUZUKI AT OIL AW-1 may damage the automatic transaxle of your vehicle.

NOTE:


Do not check the fluid level if you have just driven the vehicle for a long time at high speed, if you have driven in city traffic in hot weather. Wait until the fluid cools down (about 30 minutes), or the fluid level indication will not be correct.

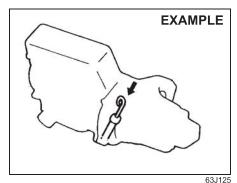

- 3) Park your vehicle on level ground.
- 4) Apply the parking brake and then start the engine in "P" (Park). Let it idle for two minutes and keep it running during the fluid level check.
- 5) With your foot on the brake pedal, move the gearshift lever through each range, pausing for about three seconds in each range. Then move it back to the "P" (Park) position.


A WARNING

Be sure to depress the brake pedal when moving the gearshift lever, or the vehicle can move suddenly.

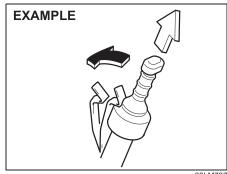

68LM707

- 6) The handle of the A/T fluid dipstick is colored orange for easy identification. Remove the dipstick, clean it and push it back in until the cap seats. Then pull out the dipstick.
- 7) Check both sides of the dipstick, and read the lowest level. The fluid level should be between the two marks in the "HOT" range on the dipstick.

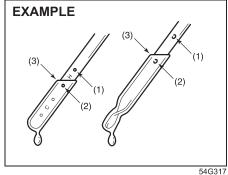

- (1) FULL HOT
- (2) LOW HOT
- (3) The lowest point = Fluid level
- 8) Add just enough specified fluid through the dipstick hole to fill the transaxle oil to the proper level.


NOTICE

After checking or adding oil, be sure to insert the dipstick securely.

Changing Oil

Since special procedures, materials, and tools are required to change the automatic transaxle oil, it is recommended that you trust this job to your authorized MARUTI SUZUKI dealer.

Fuel Filter (Diesel engine)

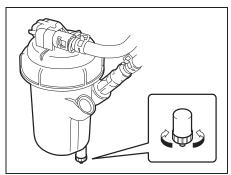

60MH049

The fuel filter works as a water sedimentor as well.


Drain water according to the Periodic Maintenance Schedule. To drain water:

- Remove the battery. (Refer to "Battery' in this section.)
- 2) Place a pan or ample rag under the fuel filter drain nozzle.
- Loosen the drain knob. The water will be drained.
- 4) Tighten the drain knob when the water changes to the diesel fuel.
- 5) Tighten the drain knob.

Tightening torque for drain knob 1.5 Nm (0.15 kg-m, 1.1 lb-ft)

Brakes

Brake Fluid

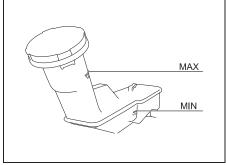

60MH04

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between the "MAX" and "MIN" lines. If the brake fluid level is near the "MIN" line, fill it up to the "MAX" line with Maruti Genuine Brake Fluid (MGBF) or DOT 3.

We highly recommend to use "Maruti Genuine Brake Fluid" (MGBF).

WARNING

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

- If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument panel will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask your MARUTI SUZUKI dealer to inspect the brake system.
- A rapid fluid loss indicates a leak in the brake system which should be inspected by your MARUTI SUZUKI dealer immediately.
- Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or DOT 3. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

A CAUTION

Brake fluid can harm your eyes and damage painted surfaces. Use caution when refilling the reservoir.

WARNING


Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eves. If swallowed. do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.

NOTE:

With disc brakes, the fluid level can be expected to gradually fall as the brake pads wear.

Brake Pedal

Check if the brake pedal stops at the regular height without "spongy" feeling when you depress it. If not, have the brake system inspected by your MARUTI SUZUKI dealer. If you doubt the brake pedal for the regular height, check it as follows:

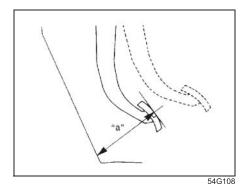


Pedal to floor carpet minimum distance "a": 59 mm (2.3 in.)

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is selfadjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by your MARUTI SUZUKI dealer.

NOTE:

When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.

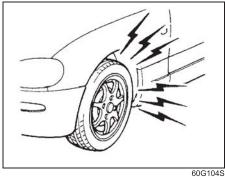


WARNING

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by your MARUTI SUZUKI dealer.

- Poor braking performance
- · Uneven braking (brakes not working uniformly on all wheels.)
- Excessive pedal travel
- Brake dragging
- Excessive noise

Parking Brake

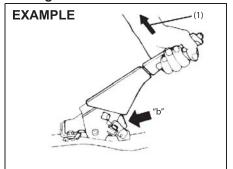


60MHM07001

Ratchet tooth specification "b": 4th – 9th Lever pull force (1): 200 N (20 kg, 44 lbs)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag after the lever has been fully released, have the parking brake inspected and/or adjusted by your MARUTI SUZUKI dealer.

Steering

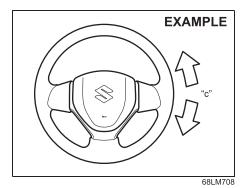


Steering wheel play "c": 0 – 30 mm (0.0 – 1.2 in.)

Check the play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is outside the specification or you find anything else to be wrong, an inspection must be performed by your MARUTI SUZUKI dealer.

Tires

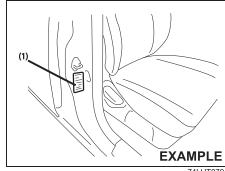

74LHT0704

The front and rear tire pressure specifications for your vehicle are listed on the Tire Information Label(1). Both the front and rear tires should have the specified tire pressure.

Note that the value does not apply to the compact spare tire, if equipped.

Tire Inspection

Inspect your vehicle's tires at least once a month by performing the following checks:


 Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire. too.

WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- Never underinflate or overinflate the tires.

Underinflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim.

Overinflation can cause the tire to burst, resulting in personal injury. Overinflation can also cause unusual handling characteristics which may result in an accident.

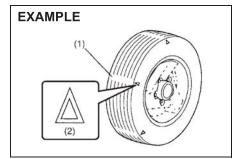

- (1) Tread wear indicator
- (2) Indicator location mark
- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
- Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by your MARUTI SUZUKI dealer.

A CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Be sure to have tires and wheel alignment checked periodically by your MARUTI SUZUKI dealer.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.

WARNING


- Your MARUTI SUZUKI is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle.
- Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.

NOTICE


Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with your MARUTI SUZUKI dealer before purchasing replacement tires that differ in size from the original tires.

54G136

Tire Rotation

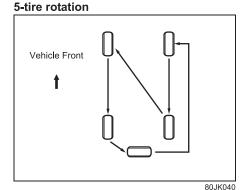

4-tire rotation

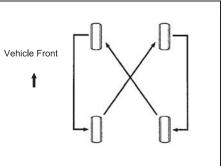

54G114

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated every 10000

km. After rotation, adjust front and rear tire pressures to the specification listed on your vehicle's Tire Information Label.


Battery

A WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working in the vicinity of the battery.
- When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump starting instructions in the "EMERGENCY SERVICE" section of this manual if it is necessary to jump start your vehicle.

NOTICE

If your vehicle is equipped with the ENG A-STOP system, only use the vehicle battery type (Exide Conservo DIN70) that have been approved by MARUTI SUZUKI vehicle manufacture, otherwise you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult your authorized MARUTI SUZUKI dealer.

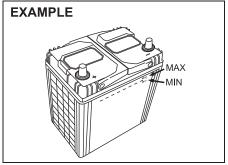


54G11

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery solution must be kept between the "MAX" and the "MIN" level lines at all times. If the level is found to be below the "MIN" level line, add distilled

water to the "MAX" level line. You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.


If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

Replacement of the battery

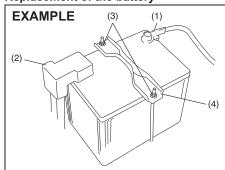

51KM038

(For Diesel EngineModel with SHVS system)

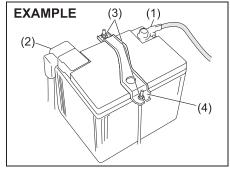

79MH10702

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).
- 4) Remove the battery.

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the retainer nuts and battery cables securely.


NOTE:

When the battery is disconnected, some of the vehicle's function will be initialized and/ or deactivated.

These function are required to reset after the battery is reconnected.

NOTICE

Do not use regular battery in ISG Vehicle. Use only Exide Conservo DIN70 battery, else it may deteriorate SHVS performance.

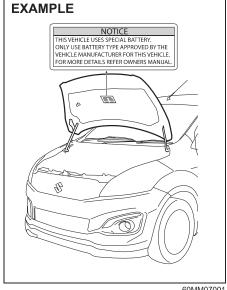

60MM07001

You may find this label on the inside of hood.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the battery.

Primary fuses


These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses


These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller provided in the fuse box cover.

Fuses in the Engine Compartment

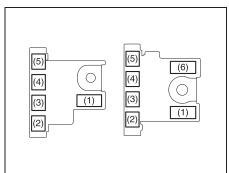

74LHT0715

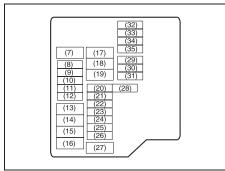


79MH10701

MAIN	MAIN FUSE / PRIMARY FUSE								
	100 A	FL1 (GAS)							
(1)	120 A	FL1 (DIESEL without ISG)							
	450 A	FL1 (DIESEL with ISG)							
(2)	100 A	FL2							
(3)	100 A	FL3							
(4)	50 A	FL4							
(5)	80 A	FL5							
(6)	100 A	FL6 (DIESEL)							
(7)	50 A	Ignition switch -2							
(8)	7.5 A	ECM (DIESEL)							
(9)	15 A	A/T controller							
(10)	20 A	Fuel pump (DIESEL)							
(11)	10 A	Air compressor							

(12)	15 A	FI (GAS)
(13)	30 A	FI (DIESEL)
(14)	60 A	Power steering
(15)	30 A	Radiator fan
(16)	40 A	ABS motor
(17)	40 A	Blower fan
(18)	30 A	Starting motor
(19)	_	Blank
(20)	30 A	Back up
(21)	30 A	DCDC
(22)	15 A	Head light (Left)
(23)	25 A	ABS control module
(24)	15 A	Head light (Right)
(25)	20 A	Front fog light
(26)	7.5 A	(CNG Valve)
(27)	40 A	Ignition switch
(28)	7.5 A	Starting Signal
(29)	20 A	INJ DRV (DIESEL)
(30)	10 A	FI2 (DIESEL)
(31)		Blank
(32)	_	Blank
(33)		Blank
(34)	7.5 A	(CNG)
(35)	7.5 A	Wiper sub (DIESEL with ISG)

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a genuine MARUTI SUZUKI replacement.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

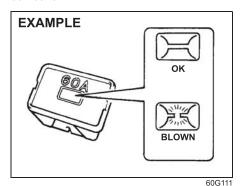


WARNING


If the main fuse or a primary fuse blows, be sure to have your vehicle inspected by an authorized MARUTI SUZUKI dealer. Always use a genuine MARUTI SUZUKI replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.

NOTE:

Make sure that the fuse box always carries spare fuses.

 Fuses under the Dash Board

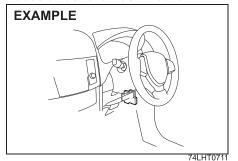




68LM701

PRIM	PRIMARY FUSE						
(1)	-	Blank					
(2)	ı	Blank					
(3)	20 A	Steering lock					
(4)	20 A	Rear defogger					
(5)	_	Blank					
(6)	ı	Blank					
(7)	ı	Blank					
(8)	7.5 A	Starting Signal					
(9)	15 A	ACC-2					
(10)	30 A	Power window					
(11)	10 A	Hazard					
(12)	7.5 A	BCM					
(13)	15 A	Ignition coil					
(14)	10 A	ABS control module					

(15)	15 A	ACC
(16)	10 A	A-STOP controller
(17)	15 A	Horn
(18)	10 A	Stop light
(19)	10 A	Air bag
(20)	10 A	Back-up light
(21)	15 A	Rear wiper / Washer
(22)	25 A	Front wiper
(23)	7.5 A	Dome light
(24)		Blank
(25)		Blank
(26)	_	Blank
(27)	7.5 A	Ignition-1 signal
(28)	15 A	Radio 2
(29)	10 A	ACC-3
(30)	15 A	Radio
(31)	10 A	Tail lamp
(32)	20 A	D/L
(33)		Blank
(34)	10 A	Meter
(35)	7.5 A	Ignition-2 signal
(36)	_	Blank

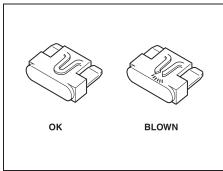

81A283

WARNING

Always be sure to replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by your MAR-UTI SUZUKI dealer.

Headlight Aiming

Since special procedures are required, we recommend you take your vehicle to your MARUTI SUZUKI dealer for headlight alignment.

Bulb Replacement

A CAUTION

- Light bulbs can be hot enough to burn your finger right after being turned off. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.

NOTICE


The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

NOTICE

Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your MARUTI SUZUKI dealer.


Interior Light

Front, Type A

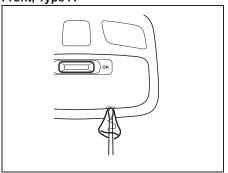


76MH0A139

Front, Type B / Center

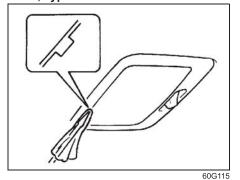


Rear

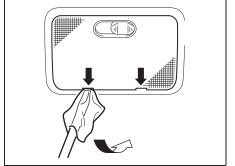

67LH084


Pull down the lens by using a flat blade screwdriver covered with a soft cloth as shown. To install it, simply push it back in. The bulb can be removed by simply pulling it out. When replacing the bulb, make sure that the contact springs are holding the bulb securely.

Headlight

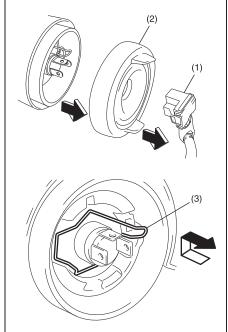


80JM0

Open the engine hood. Disconnect the coupler (1). Remove the sealing rubber (2). Push the retaining spring (3) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

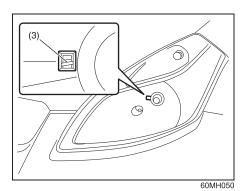


NOTE: You can see the position of retaining spring (3) from the hole of headlight.

Side Turn Signal Light (if equipped)

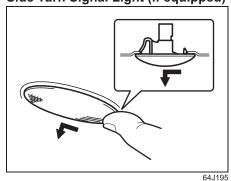


Remove the light housing by sliding to left with your finger.

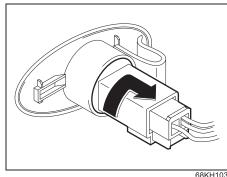

To remove a bulb holder from a light housing, turn the holder clockwise and pull it out. Then remove the bulb. Install a new bulb in the reverse order.

Other General Lights


Bulb holder

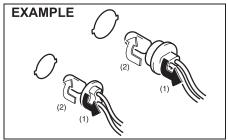

- (1) Removal
- (2) Installation

To remove a bulb holder from a light housing, turn the holder counterclockwise and pull it out. To install the holder, push the holder in and turn it clockwise.

Bulb

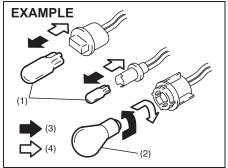

54G124

- (3) Removal
- (4) Installation

There are two types of bulb, "Full glass type" (1) and "Glass/metal type" (2).

To remove and install a full glass type bulb (1), simply pull out or push in the bulb.


To remove a glass metal type bulb (2) from a bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.

7-27

54G123

You can access the individual bulb or bulb holders as follows.


Front turn signal light (1) Front position light (2)

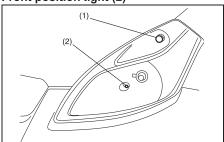


60MH051

Front fog light (if equipped)

 Start the engine. Turn the steering wheel to the opposite side of the replacing fog light to replace the bulb easily. Then turn off the engine.

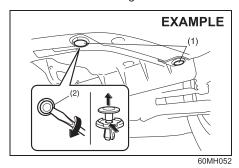


 Insert a flat blade screwdriver into the hole (2) and remove the clips (1) by twist the driver as shown in the illustration.

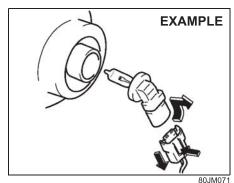

3) Open the fender cover. Disconnect the coupler with pushing the lock release. Turn the bulb holder counterclockwise and remove it.

Rear combination light (tail, stop, turn signal, etc.)

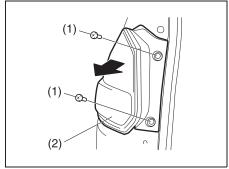


60MH053

Remove the screw (1). Remove the combination light (2) by pulling it outside.

License plate light


Since special procedures are required, we recommend you take your vehicle to your MARUTI SUZUKI dealer for bulb replacement.

High-mount stop light

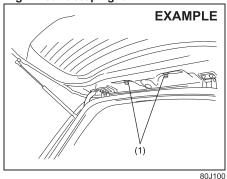


To remove a high-mount stop light housing the following procedure:

1) Open the tailgate, and remove the nuts (1) as shown in the illustration.

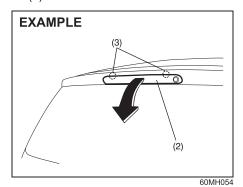

Close the tailgate. Release the claws

 of the light housing by a flat blade screwdriver, etc. The claws are shown in the next illustration. Remove a highmount stop light housing (2) from the tailgate.

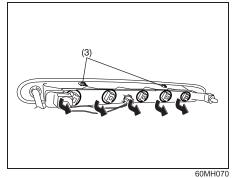

. .

- 3) Remove the each bulb.
- 4) Replace the bulbs.
 To install a high-mounted stop light housing in the reverse order of removal.

Wiper Blades



54G129

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.


NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.


NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult your MARUTI SUZUKI dealer for proper replacement method.


For windshield wipers:

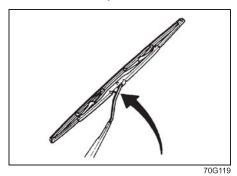


1) Hold the wiper arm away from the window.

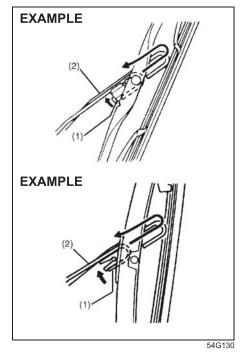


- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

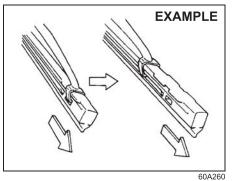


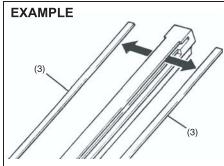

71LMT0708

- (3) Retainer
- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.

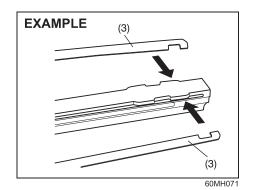


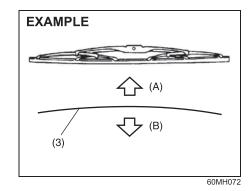

(A) Up (B) Down

NOTE:

When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustrations.

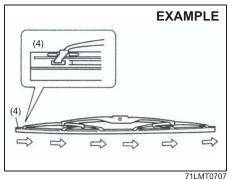


(4) Locked end

- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm.


 Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

For rear wipers:

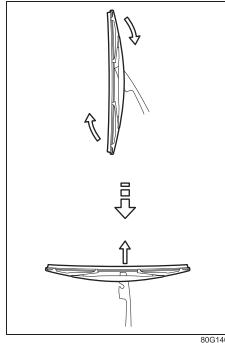


000140

- Hold the wiper arm away from the window.
- 2) Remove the wiper frame from the arm as shown.
- 3) Slide the blade out as shown.

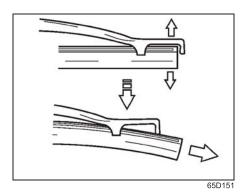

NOTE: Do not flex the wiper blade frame end more than necessary. If you do, it can break off.

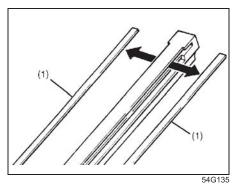


(1) Retainer

4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.

- Install the new blade in the reverse order of removal.
 Make sure the blade is properly retained by all the hooks.
- 6) Reinstall wiper frame to arm in the reverse order of removal.

Windshield Washer Fluid

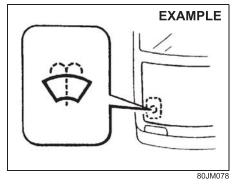

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

WARNING

Do not use "radiator anti-freeze" solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also damage your vehicle's paint.


NOTICE

Damage may result if the washer motor is operated with no fluid in the washer tank.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

60M-74E EMERGENCY SERVICE

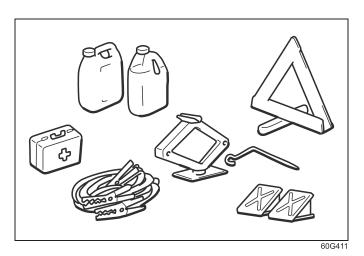


EMERGENCY SERVICE

Tire Changing Tool	8-1
Jacking Instructions	8-2
Jump Starting Instructions	8-5
Towing	8-7
If the Starter Does Not Operate	8-7
If the Engine is Flooded	8-7
If the Engine Overheats	8-8

EMERGENCY SERVICE 60M-74E

Tire Changing Tool

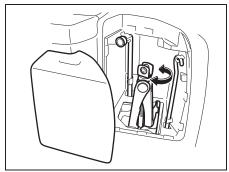

60MH057

The tire changing tools are stowed in the side of the luggage compartment. Remove the cover to access the tools.

To remove the jack, turn its shaft counterclockwise and pull the jack out of the storage bracket.

To stow the jack, place it in the storage bracket and turn the shaft clockwise until the jack is securely held in place.

WARNING


After using the tire changing tools, be sure to stow them securely or they can cause injury if an accident occurs.

A CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

The spare tire is stowed under the rear floor.


To remove the spare tire:

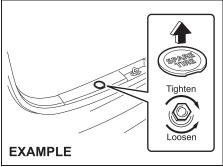

1) Remove the cap and loosen the spare tire holder hook bolt with the lug wrench.

NOTICE

Loose the spare tire holder hook bolt until you can remove the hook by yourself. If the bolt is loosen too much, the hook might off and the spare tire might drop off to the around.

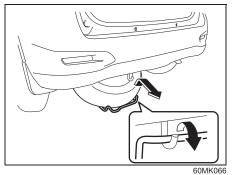

- 2) Unhook the spare tire holder and lower
- it slowly.
- 3) Remove the tire.

To install the spare tire:

- 1) Install the spare tire facing up the outside of the wheel in the reverse order of removal.
- 2) Tighten the spare tire holder hook bolt securely.

60M-74E EMERGENCY SERVICE

WARNING


Do not drive your vehicle with the loose spare tire holder hook bolt, otherwise it may come loose or the spare tire may drop off, which can result in an accident.

NOTICE

Tighten the spare tire holder hook bolt securely. However, do not overtighten the bolt, it may be warped or broken.

Tightening torque for the spare tire holder hook bolt 30 Nm (3.0 kg-m, 21.7 lb-ft)

Jacking Instructions

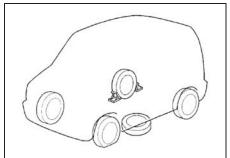


75F062


1) Place the vehicle on level, hard ground.

 Set the parking brake firmly and shift into "P" (Park) if your vehicle has an automatic transaxle, or shift into "R" (Reverse) if your vehicle has a manual transaxle.


WARNING

- Be sure to shift into "P" (Park) for an automatic transaxle vehicle, or into "R" (Reverse) for a manual transaxle vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transaxle in "N" (Neutral). Otherwise, unstable jack may cause an accident.
- 3) Turn on the hazard warning flasher if your vehicle is near traffic.
- Block the front and rear of the wheel diagonally opposite of the wheel being lifted.
- 5) Place the spare wheel near the wheel being lifted as shown in the illustration in case that the jack slips.

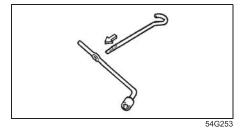

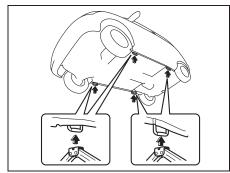

63J100

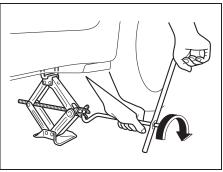

63J10

6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.

8-2

EMERGENCY SERVICE 60M-74E


 Continue to raise the jack slowly and smoothly until the tire clears the ground. Do not raise the vehicle more than necessary.

▲ WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed.
- Especially, do not raise the vehicle with a jack at a part of the torsion beam which is located under the vehicle body, between rear wheels.
- Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the flange. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- No person should place any portion of their body under a vehicle that is supported by a jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

To Raise the Vehicle with a Garage Jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

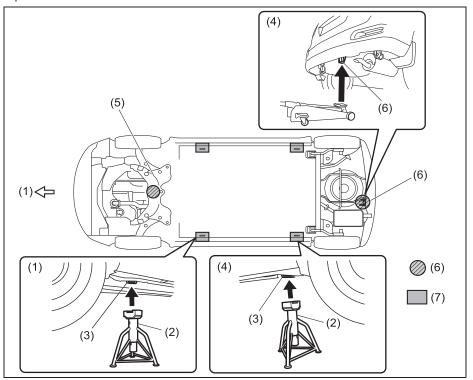

60MH132

EMERGENCY SERVICE 60M-74E

- (1) Front
- (2) Jack stand
- (3) Jacking point for onboard jack
- (4) Rear
- (5) Front suspension frame
- (6) Jacking point for garage jack
- (7) Application point for two-column lift and jack stand

NOTICE

- Never apply a garage jack to the exhaust pipe or engine undercover and rear torsion beam.
- When you apply a garage jack to the rear jacking point, it may interfere with the rear bumper depending on the shape of the garage jack.

NOTE:

For more details, please contact an authorized MARUTI SUZUKI dealer.


Changing Wheels

To change a wheel, use the following procedure:

- 1) Remove the jack, tools and spare wheel from the vehicle.
- 2) Loosen, but do not remove the wheel nuts.
- 3) Jack up the vehicle (follow the jacking instructions in this section).

WARNING

- Be sure to shift into "P" (Park) in automatic transaxle, or shift into "R" (Reverse) in manual transaxle when you jack up the vehicle.
- Never jack up the vehicle with the transaxle in "N" (Neutral). Otherwise, unstable jack may cause an accident.
- 4) Remove the wheel nuts and wheel.
- 5) Before installing the new wheel, clean any mud or dirt off from the surface of the wheel and hub with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel Tighten each nuts snugly by hand until the wheel is securely seated on the hub.

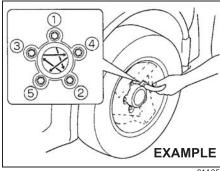

81A057

Tightening torque for wheel nuts 100 Nm (10.0 kg-m, 72.3 lb-ft)

7) Lower the jack and fully tighten the nuts in a crisscross fashion with a wrench as shown in the illustration.

▲ WARNING

Use maruti genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident, If you do not have a torque wrench, have the wheel nuts torque checked by an authorized MARUTI SUZUKI dealer.

 
EMERGENCY SERVICE 60M-74E

Full Wheel Cover (if equipped)



60G309

Insert a piece of cloth between the spokes of the wheel cover and try to pull the cover outward (as shown in figure). Take out the detached wheel cover from the wheel rim. For installation first match the slot at the wheel cover with the air filling nozzle of the wheel. Apply equal pressure at the circumference of the wheel cover to fix it in the wheel rim.



When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

After Changing Wheels

Stow the tire changing tools (jack, jack handle and lug wrench) in place. Also, stow the flat tire in the spare tire stowed position. Refer to "Tire Changing Tool" in this section.

NOTICE

Repair or replace the flat tire immediately. If the flat tire is placed in the spare tire stowed position for long time, it can cause vehicle shakiness, noise, or scratches.

Jump Starting Instructions

▲ WARNING

- Never attempt to jump start your vehicle if the battery appears to be frozen. Batteries in this condition may explode or rupture if jump starting is attempted.
- When making jump lead connections, be certain that your hands and the jump leads remain clear from pulleys, belts, or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working in the vicinity of the battery.
- If the booster battery you use for jump starting is installed in another vehicle, make sure the two vehicles are not touching each other.
- If your battery discharges repeatedly, for no apparent reason, have your vehicle inspected by an authorized MAARUTI SUZUKI dealer,
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump starting instructions below precisely and in order.
 If you are in doubt, call for qualified road service.


60M-74E EMERGENCY SERVICE

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

When Jump Starting Your Vehicle, Use the Following Procedure:

- Use only a 12-volt battery to jump start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, DO NOT LET THE VEHICLES TOUCH. Set the parking brakes fully on both vehicles.
- Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

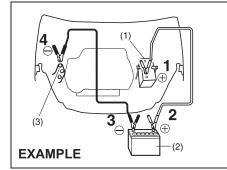

54MN259

- 3) Make jump lead connections as follows:
 - 1. Connect one end of the first jump lead to the positive (+) terminal of the flat battery (1).
 - Connect the other end to the positive (+) terminal of the booster battery (2).
 - 3. Connect one end of the second jump lead to the negative (–) terminal of the booster battery (2).
 - 4. Make the final connection to an unpainted, heavy metal part (i.e. engine mount bracket (3)) of the engine of the vehicle with the flat battery (1).

WARNING

Never connect the jump lead directly to the negative (–) terminal of the discharged battery, or an explosion may occur.

A CAUTION

Connect the jump lead to the engine mount bracket securely. If the jump lead disconnects from the engine mount bracket because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the flat battery.
- Remove the jump leads in the exact reverse order in which you connected them.

EMERGENCY SERVICE 60M-74E

Towing

If you need to have your vehicle towed, contact a professional service. Your dealer can provide you with detailed towing instructions.

NOTICE

To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.

2-Wheel Drive (2WD) Automatic Transaxle

Automatic transaxle vehicles may be towed using either of the following methods.

- From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- From the rear, with the rear wheels lifted and a dolly under the front wheels.

NOTICE

Towing your vehicle with the front wheels on the ground can result in damage to the automatic transaxle.

2-Wheel Drive (2WD) Manual Transaxle

Manual transaxle vehicles may be towed using either of the following methods.

- 1) From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, make sure that transaxle is in neutral, the steering wheel is unlocked (vehicle without keyless push start system the ignition key should be in the "ACC" position) (vehicle with keyless push start system the ignition mode is "ACC"), and the steering wheel is secured with a clamping device designed for towing service.

NOTICE

The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

If the Starter Does Not Operate

- Try turning the ignition switch to the "START" position or try pressing the engine switch to change the ignition mode to "START" with the headlights turned on to determine the battery condition. If the headlights go excessively dim or go off, it usually means that either the battery is flat or the battery terminal contact is poor. Recharge the battery or correct battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by your authorized MAR-UTI SUZUKI dealer.

If the Engine is Flooded

(Vehicle without Keyless Push Start System)

If the engine is flooded with petrol, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine.

 For petrol engine model, do not operate the starter motor for more than 12 seconds.

For diesel engine model, do not operate the starter motor for more than 30 seconds.

60M-74E EMERGENCY SERVICE

(Vehicle with Keyless Push Start System)

If the engine is flooded with Petrol, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine.

- For Petrol engine model, do not operate the starter motor for more than 12 seconds.
- For diesel engine model, do not operate the starter motor for more than 30 seconds.

NOTE:

If the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.

If the Engine Overheats

The engine could overheat temporarily under severe driving conditions. If the engine coolant temperature gauge indicates overheating during driving:

- 1) Turn off the air conditioner, if equipped.
- 2) Take the vehicle to a safe place and park.
- Let the engine run at the normal idle speed for a few minutes until the indicator is within the normal, acceptable temperature range between "H" and "C".

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to let it cool. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.


If the temperature indication does not come down to within the normal, acceptable range:

- Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than the "LOW" line, look for leaks at the radiator, water pump, and radiator and heater hoses. If you locate any leaks that may have caused the overheating, do not run the engine until these problems have been corrected.
- If you do not find a leak, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in the "INSPECTION AND MAINTENANCE" section.)

NOTE:

If your engine overheats and you are unsure what to do, contact your MARUTI SUZUKI dealer.


EMERGENCY SERVICE 60M-74E

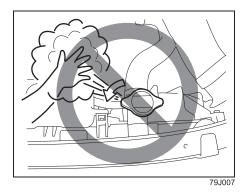

▲ WARNING


- · It is hazardous to remove the radiator cap (or degassing tank cap for a diesel engine) when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan air-conditioner fan Ì equipped). These electric fans can automatically turn on without warning.

 Warning Triangle




MHO-07-001

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

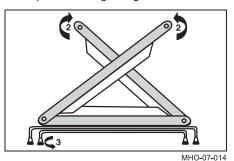

 Remove the warning triangle carefully from the cover as shown by arrow 1.


- Open both the reflector arms as shown by arrow and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

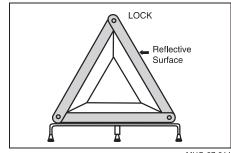

MHO-07-014

8-9

60M-74E APPEARANCE CARE

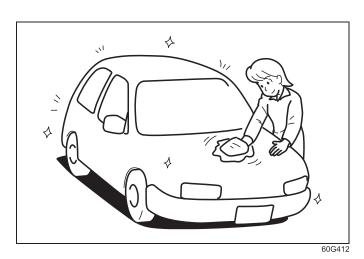

APPEARANCE CARE

Corrosion Prevention	l	9-
Vehicle Cleaning		9-2

APPEARANCE CARE Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information About Corrosion

Common causes of corrosion

- Accumulation of road salt, dirt, moisture, or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.

Environmental conditions which accelerate corrosion

- Road salt, dust control chemicals, sea air or industrial pollution will all accelerate the corrosion of metal.
- High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the

vehicle which are not well ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing.

Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to the "Vehicle Cleaning" section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Be sure that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used off road or in wet weather.

Certain cargoes such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If a spill or leak does occur, clean and dry the area immediately.

60M-74E APPEARANCE CARE

Store your vehicle in a dry, well-ventilated area

Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage or if you frequently drive it in when wet, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

▲ WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter, exhaust pipes, etc. A fire could be started if the undercoating substance becomes overheated.

Vehicle Cleaning



76G044S

▲ WARNING

When cleaning the interior or exterior of the vehicle, NEVER USE flammable solvents such as lacquer thinners, Petrol, benzene or cleaning materials such as bleaches or strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning the Interior

Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

Leather upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- In order to keep leather upholstery looking good, it should be cleaned at least twice a year.
- If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.
- When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink.
- As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.

APPEARANCE CARE 60M-74E

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Instrument panel and console *NOTE:*

 Wipe up spills containing chemicals, alcohol, etc., immediately with a soft, damp cloth. Use a mild soap solution if necessary. Do not use cleaners or polishes containing strong solvents or acidic solutions. These chemicals may stain and discolor the instrument panel and console. Do not use any chemical that contains silicone to clean the air conditioning, audio and other electrical components or switches, as well as the areas surrounding these parts. Adhesion of silicone may cause failure.

Cleaning the Exterior

NOTICE

It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Caring for Aluminum Wheels NOTE:

- Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaner will cause permanent spots, discoloration and cracks on finished surfaces and damage to center caps.
- Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.

Washing



60B212S

▲ WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, you should wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to make sure they have maintained their normal effectiveness.

60M-74E APPEARANCE CARE

A CAUTION

If your vehicle is equipped with an rain-sensing wiper system, place the wiper control lever in the "OFF" position. If the lever is left in the "AUTO" position, the wipers could unexpectedly operate and cause an injury, and could also be damaged.

When washing the vehicle, park it where direct sunlight does not fall on it and follow the instructions below:

 Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.
- 2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Be sure to follow above procedure.

 Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE


When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) After rinsing, wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, "touchup" the damage following the procedure below:
 - 1. Clean all damaged spots and allow them to dry.
 - Stir the paint and "touch-up" the damaged spots lightly using a small brush.
 - 3. Allow the paint to dry completely.

NOTICE

If you use an automatic car wash, make sure that your vehicle's body parts, such as spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.

Waxing

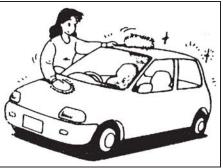


60B211

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

GENERAL INFORMATION 60M-74E

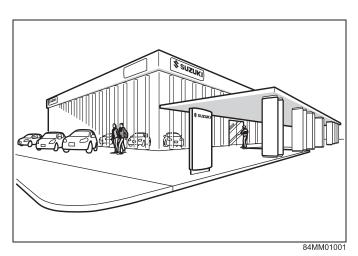


GENERAL INFORMATION


Vehicle identification	 10-1
FASTag (if equipped)	 10-1

GENERAL INFORMATION Vehicle Identification

Chassis Serial Number

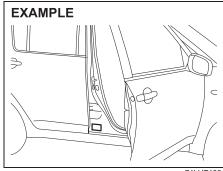


74LHT1001

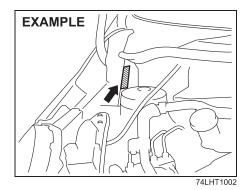

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist your dealer when ordering or referring to special service information. Whenever you have occasion to consult your MARUTI SUZUKI dealer, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

Engine Serial Number

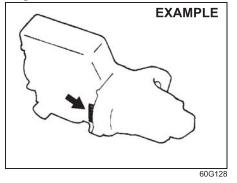


The engine serial number is stamped on the cylinder block as shown in the illustration.

FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.

In case of any damage to FASTag or replacement of front windscreen, please contact your nearest authorised Maruti Suzuki workshop.

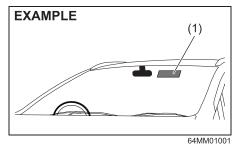

10-1

GENERAL INFORMATION 60M-74E

As seen from inside of the vehicle


EXAMPLE Please do not peel off the tag, as it would permanently damage the tag

64MM01002

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle

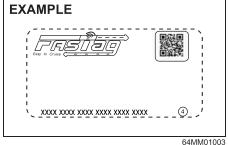

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- · Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.

SPECIFICATIONS 60M-74E

SPECIFICATIONS

NOTE: Specifications are subject to change with-out notice.

Petrol: Petrol engine model Diesel: Diesel engine model M/T: Manual transaxle A/T: Automatic transaxle

ITEM: Dimensions	UNIT: mm (in.)	
Overall length		4265
Overall width		1695
Overall height		1685
Wheelbase		2740
Track	Front	1480
	Rear	1490
Ground clearance		185 (unladen)

ITEM: Mass (weight)	UNIT: kg	PETROL ENGINE MODEL	DIESEL ENGINE MODEL
Curb mass (weight)	M/T	1135 – 1180	1235 – 1265
	A/T	1185	_
Gross vehicle mass (weight) rating	M/T	1760	1855
	A/T	1770	_
Permissible maximum Axle Weight	Front	820	900
	Rear	990	990

SPECIFICATIONS 60M-74E

ITEM: Engine		
Туре	K14B (DOHC)	D13A (DOHC)
Number of cylinders	4	4
Bore	73.0 mm	69.6 mm
Stroke	82.0 mm	82.0 mm
Piston displacement	1373 cm ³	1248 cm ³
Compression ratio	11.0 : 1	17.6 : 1

ITEM: Electrical				
Standard spark plug	Petrol		NGK LKR6F-10	
Battery	Petrol		12V 38B20L	
	Diesel	without ENG A-STOP system	12V DIN 55 [#]	
		with ENG A-STOP system	12V DIN 70*	
Fuses	See "INS	See "INSPECTION AND MAINTENANCE" section.		

[#] Do not use battery other than DIN55 type. Else it may lead to performance deterioration.

* When battery replacement is necessary, use only DIN70 (Exide Conservo) battery. Else it may deteriorate SHVS performance.

60M-74E SPECIFICATIONS

ITEM: Lights		WATTAGE	BULB No.	
Headlight		12V 60/55W	H4	
Turn signal light	Front	12V 21W	PY21W	
	Rear	12V 21W	PY21W	
Side turn signal light (on fend	der)	12V 5W	WY5W	
Side turn signal light (on outside rearview mirror)		LED	-	
Position light		12V 5W	W5W	
Tail/brake light		12V 21/5W	P21/5W	
License plate light		12V 5W	W5W	
Reversing light		12V 16W	W16W	
Interior light		12V 10W	-	
Front fog light		12V 35W	H8	
High mount stop light		12V 5W	W5W	

SPECIFICATIONS 60M-74E

ITEM: Wheels and Tires	
Tire size, front and rear	185/65R15 88S ^{*1} , 185/65R15 88H ^{*1}
Rim size	15X5 1/2J ^{*2}
Tire pressures	Tire pressure may require to be adjusted as per loading condition, for the specified tire pressure see the Tire Information Label located on the driver's door lock pillar.

^{*1:} When tire replacement is necessary and if the specified load index and speed rated tire is not available, then use a tire of higher load index and speed rating.

ITEM: Capacities (approx.)			
Coolant (including reservoir tank)	Petrol	M/T	5.1 L
		A/T	5.0 L
	Diesel		6.2 L
Fuel tank			45 L
Engine oil	Petrol		3.1 L (replacement with oil filter)
	Diesel		3.2 L (replacement with oil filter)
	Petrol	M/T	2.6 L
Transaxle oil	Pelloi	A/T	5.0 L
	Diesel	M/T	2.6 L

^{*2:} The spare wheel provided with alloy wheel variant is steel wheel rim, hence follow 4 tire rotation only. (Refer: under section "Inspection and maintenance")

SERVICE NETWORK (AS ON 01.04.2017)

■ MARUTI SUZUKI AUTHORISED DEALERS (DEALER CODE) : SALES, SERVICE, WARRANTY & SPARE PARTS

■ MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS ■ MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS

■ MARUTI AUTHORISED SERVICE STATIONS : 'A' CATEGORY MASSs (**MARKED)

(MASSs)

Free & paid Service, Major repairs & Accidental repairs

'B' CATEGORY MASSS (* MARKED) Free & paid Service & Major repairs 'C' CATEGORY MASSS (**MARKED) Free & paid Service & Minor repairs 'D' CATEGORY MASSS (*MARKED)

Free Service & Minor repairs

NOTE: MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealers/Maruti Service Master/Maruti Service Zone for Warranty jobs.

REGIONAL OFFICES	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI IMDIA LIMITED PLOT NO. 1, NELSON MANDELA ROAD, VASANT KUNJ, NEW DELHI-110070 PH: (011) 46781000, 46150291	WEST UP, UTTARAKHAND, DELHI, GURGAON, FARIDABAD, NOIDA, GHAZIABAD, REWARI, MAHENDRAGARH, NORTH-UP
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED S.C.O. 39-40, SECTOR 8-C, MADHYA MARG, CHANDIGARH-160008 PH: (0172) 2780057, 2781352, 2540787	PUNJAB, CHANDIGARH, JAMMU & KASHMIR
REGIONAL OFFICE (NORTH-III) MABUTI SUZUKI INDIA LIMITED G.F., B-I BLOCK, PICUP BHAWAN, VIBHUTI KHAND, GOMTI NAGAR, LUCKNOW - 226010 PH : (0522) 2720931-34	PART OF U.P. AND UTTARAKHAND
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA-134109 PH: (0172) 2590056, 2580056	HARYANA, HIMACHAL PRADESH
REGIONAL OFFICE (NORTH-V) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, POOJA TOWER, 3 GOPALPURA BY-PASS, TONK ROAD, JAIPUR -302018 PH: 0141-5157000, 5118006 / 7	RAJASTHAN

REGIONAL OFFICES	AREA COVERED
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED L & T CHAMBERS, 4TH FLOOR, 16 CAMAC STREET, KOLKATA - 700 017 PH: (033) 22835252-54	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 401, 4TH FLOOR, ROHINI APARTMENT, OPPOSITE HOTEL APSARA, 56 CIRCULAR ROAD, NEAR LALPUR CHOWK, RANCHI, JHARKHAND-834001, PH: (0651) 2563931	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, ABOVE CITY MART SHOPPING MALL, 724, PEACE ENCLAVE, ULUBARI, GUWAHATI – 781 007, ASSAM PH.: (0361) 2734308/ 10/ 11/ 12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA
REGIONAL OFFICE (EAST-IV) MARUTI SUZUKI INDIA LIMITED Office No. 605, 606, 6th Floor, Utkal Signature, Pahal, NH-5, Bhubaneshwar - 752101 (Odisha), Ph: 0674-6751581	ODISHA, CHHATISGARH
REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED 602, MADHAVA BLDG., BANDRA KURLA COMPLEX, BANDRA (E), MUMBAI - 400 051 PH : (022) 2659 0165/0286/0290/0291 FAX : 26590285	MUMBAI, NAVI MUMBAI, THANE, RAIGAD, RATNAGIRI, SINDHUDURG & GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, NORTH BLOCK, SACRED WORLD WANOWARIE, PUNE-411040 PH: (020) 64002641 / 2 / 3 /0 4	REST OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211, ISKON MALL, ABOVE STAR INDIA BAZAAR, SATELLITE ROAD, AHMEDABAD-380015 PH: (079) 40036660/40036671	GUJARAT , DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (WEST-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD, INDORE-452001 PH: (0731) 4069481, 4069382 FAX: 4069382	MADHYA PRADESH
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, CAPITAL TOWERS, 180, KODAMBAKKAM HIGH ROAD, NUNGAMBAKKAM, CHENNAI - 600 034 PH: (044) 28233050-53 FAX: (044) 28242059	TAMILNADU, PONDICHERRY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED 204, 2ND FLOOR, "EMBASSY CLASSIC", VITTAL MALLYA ROAD, BENGALURU-560001 PH.: (080) 22127384-85, 5112017-18 FAX: (080) 22484841	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWER, NH-47 BYPASS, PADIVATTOM, COCHIN-682024 PH. : (0484) 4088400	KERALA, LAKSHADWEEP
REGIONAL OFFICE (SOUTH-IV) MARUTI SUZUKI INDIA LIMITED MAHAVIR CHAMBERS, DOOR NO. 3-6-363 & 3-6-1/1, CHAMBER NO. 101 & 102, 1ST FLOOR, LIBERY SQUARE, HIMYATNAGAR, HYDERABAD PH: (040) 66729999	ANDHRA PRADESH, TELANGANA

DETAILS OF AREA OFFICES		
Area Office Location	A.O Address	
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower Sanjay Palace, Agra-282001, Ph.: 0562-4052646, 47	
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor, Corporate Zone, Ashima Mall, Hoshangabod Road, Bhopal-462026, Madhya Pradesh, 0755 - 6051555	
Calicut	Maruti Suzuki India Limited, 1st Floor, Central Arcade, Bye pass Road, Puthyara Calicut - 673 004, Kerala, +91 495 2723151	
Coimbatore	Maruti Suzuki India Limited, A-203, 2nd Floor, Raheja Center, Avinashi Road, Coimbatore – 641018, (0422)-2242109	
Dehradun	Maruti Suzuki India Limited, 70 Rajpur Road, Opp Madhuban Hotel, Dehradun - 248001, Uttarakhand, 0135-2740549	
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, PH: 0836-4259447	
Jammu	Maruti Suzuki India Limited, Area Office - N2, Holl No. 116, Fast Flour, A-2, South Block, Bahu Plaza, Jammu (J & K)	
Ludhiana	Maruti Suzuki India Limited, Sco No.16/17, 4th Floor , Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Punjab, 0161-4649763, 4649765	

DETAILS OF AREA OFFICES		
Area Office Location	A.O Address	
Madurai	Maruti Suzuki India Limited, 3rd Floor, ADR Towers Kalavasal, Theni By-pass Road, Madurai - 625016, Ph.: 0452-4200203	
Nagpur	Maruti Suzuki India Limited, Plot No. 244, 1st Floor, Narayani House, Hill Road, Dhasampeth Ext., Nagpur-440010, Ph.: 0712-2225808	
Nashik	Maruti Suzuki India Limited, 2nd Floor, Rushiraj Towers, Gargapur Road, Nashik, PH: 0253-6698551,52	
Patna	Maruti Suzuki India Limited, 538, AG Plaza, East Boring Canal Road Adj. St Johns School, Patna-800001 (Bihar), PH: 0612-2521145	
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto Mall, Labhandi, Raipur - 492001 (Chhatisgarh), Ph: 0771-4039643	
Surat	Maruti Suzuki India Limited, 304, 3rd Floor, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan, Surat, Gujarat - 395009	
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazuthacaud, Trivandrum - 695010, PH: 0471-2322336	
Visakhapatnam	Maruti Suzuki India Limited, #209, 2nd Floor, Dutt Island, Siripuram Junction, Visakhapatnam - 500003, PH: 0891-3078620	

ANDAMAN & NICOBAR

DIGLIPUR

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (PU01-PU-01), MADHUPUR VILLAGE, TEHSIL DIGLIPUR, NORTH ANDAMAN - 744202 PH : 03192-271056.

PORTBLAIR

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-02), NAYAGEN, PORTBLAIR - 744101 PH: 3192-227104, 211682.
- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-01), GARACHRAMA, PORT BLAIR -744105

PH:3192-251980, 253586, 211590.

RANGAT

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-FJ-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, -744201 PH 3102-01156.

ANDHRA PRADESH

AMALAPURAM

 S.B. MOTOR CORPORATION (BTS1-BTS-01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201 PH :08856-98653173333.

ANAKAPALLE

 JAYABHERI AUTOMOTIVES PVT LTD (0N01-0N-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001 PH:08294-7093575555.

ANANTAPUR

 SRI DURGA AUTOMOBILES (1801-18-01), 17/377-A,GOOTY ROAD,,ANANTAPUR - 515001 PH :08554-277958.

BHIMAYARAM

 NOVELTY REDDY AND REDDY AUTOMOTIVES (7M01-7M-01), NEAR BYEPASS ROAD, UNDI ROAD, BHIMAVARAM - 534202 PH :0881-2765645.

BOBBILI

 VARUN MOTORS PVT. LTD. (CAM1-CAM-01), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE – MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA PRADESH. - 535558 PH: 09844-9865280772, 9885317344.

CHIRALA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-NT-04), 9-1-92, CHURCH ROAD, CHIRALA, -523157

PH:8594-9703703353.

 BHARGAVI AUTOMOBILES PVT LTD (A801-10-03), 22-241/A,KATTAMANCHI TIRUPATI ROAD,CHITTOOR, - 517001 PH:8572-9848144772.

CUDDAPPAH

CHITTOOR

 MSA MOTORS (C201-1D-03), K.T. BYE PASS ROAD, CUDDPPAH, ANDHRA PRADESH, - 516001 PH - 08562-645427

ELURU

 REDDY & REDDY MOTORS (1E01-1E-01), OLD NH-5 ROAD, BESIDES C R REDDY WOMEN'S COLLEFE OLD NH-5, ELURU, - 534001 PH :8812-291896

QUDIVADA

 VARUN MOTORS PVT. LTD. (2603-CL-02), D NO. 1-621,AUTONAGER 1ST LANE,GUDIVADA -521301
 PH:08674-246244, +919885651383.

QUDUR

15. BHARGAVI AUTOMOTIBILES PVT. LTD. (IS01-IS-01), SURVEY NO.1619/3A,GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101 PH :8624-252509.

QUNTUR

 JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-G5-01), D-N-8-24-31,MANGALAGIRI ROAD,GUNTUR - 522001 PH :0863-2241000.

HINDUPUR

 SRI DURGA AUTOMOTIVES (1801-36-02), PLOT NO.83, NEAR RELIANCE PETROL BUNK, BYE PASS ROAD, HINDUPUR - 515201 PH:8554-277958.

HYDERABAD

 ADARSHA AUTOMOTIVES PVT. LTD. (1014-10-02), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218 PH :040-8142346633, 9985326633.

JAGGAIAHPETA

 VARUN MOTORS PVT. LTD. (2603-PC-05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175 PH :8652-281555.

JANGAREDDYGUDEM

 REDDY & REDDY MOTORS (1E01-HQ-02), NEAR R&B GUEST HOUSE,ELURU ROAD,JANGAREDDYGUDEM, - 534447 PH:8821-9948829555.

AKINADA

 S B MOTORS (W701-W7-01), D. NO. 52-10-36/3,NEAR AMAR GHATI CENTER,KARAPA ROAD, KAKINADA - 533001 PH :884-2352785.

KAVALI

 BHARGAVI AUTOMOBILES PVT LTD (A801-PF-05), KAVALI NELLORE, ANDHRA PRADESH - 524201 PH : 8626-9248702567.

KOTHEGUDAM

 VARUN MOTORS PVT. LTD. (2603-HF-04), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLIBHADRACHALAM ROAD, KOTTHAGUDEM - 507101
 PH.0253-2351277/79.

KURNOOL

 MSA MOTORS (C201-C2-01), AUTO NAGAR, INDUSTRIAL ESTATE, NH-7, KURNOOL - 518004 PH: 08518-254040, 251616.

MACHILIPATNAM

 MITHRA AUTO AGENCIES PVT LTD (2604-0K-04), NARASIMHA NAGAR, MACHLIPATNAM, ANDHRA PRADESH - 521001 PH:8672-9849988312.

MADANAPALLI

BHARGAVI AUTOMOBILES PVT LIMITED (AAT1-AAT-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH -8824-252509.

MADHURAWADA

 JAYABHERI AUTOMOTIVES PVT LTD (BQQ1-BQQ-01), PLOT NO. 5, SURVEY NO. 4/P, KOMMADI ROAD, MADHURAWADA, VISHAKAPATNAM, ANDHRA PRADESH - 530048 PH :0891-9849445639.

MARKAPURAM

JAYALAKSHMI AUTOMOTIVES PVT. LTD. (CFF1-CFF-01), D. NO. 4-515/12, SURVEY NO. 1167, OPP. INDUSTRIAL ESTATE, ONGOLE ROAD, MARKAPURAM, DISRT.-PRAKASAM, ANDHRA PRADESH. - 522316 PH: 35506-948131133.

NARASARAOPET

 JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-JT-03), NEAR RELIANCE PETROL PUMP BUNK, VINDIKONDA ROAD, NARASAROAPET, GUNTUR, - 522603 PH. 3647-9866844344.

NARSIPATNAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (WT01-WT-01), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH 958932-225111/226111.

NELLORE

31. BHARGAVI AUTOMOBILES PVT LTD (A801-A8-01), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :0861-326226, 329927.

 BHARGAVI AUTOMOBILES PVT LTD (A801-A8-04), A2, INDUSTRIAL ESTATE,A.K. NAGAR,NELLORE, - 524004 PH :861-6457369.

NUZVID

 VARUN MOTORS PVT. LTD. (2603-CN-03), BESIDE R T C BUS DEPOT., OLD D M OFFICE, VIJAYAWADA ROAD, NIZVID - 521201 PH:0866-2544444, 9885706800.

ONGOLE

34. JAYALAKSHMI AUTOMOTIVES (8Y01-8Y-02), THROVAGUNTA COMPANY CENTRE,NH-5, GUNTUR ROAD,ONGOLE,PRAKASAM DISTRICT. - 523003 PH :8592-247167.

PALASA

35. JAYABHERI AUTOMOTIVES PVT. LTD.
(BWH1-BWH-01), SURVEY N. 63 OF VILLAGE –
PURUSHOTTAPURAM, PALASA MANDAL,
KASIBUGGA MUNICIPALITY, DISTRICT –
SRIKAKULAM, ANDHRA PRADESH. • 532221
PH :08945-9849054445.

PENDURTHI

 VARUN MOTORS PVT. LTD. (BAP1-BAP-01), SURVEY NO. 107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKAPATNAM - 530047 PH :0891-9885006651.

RAJAHMUNDRY

 S.B. MOTOR CORPORATION (C501-C5-01), OPP.FCI GOWDOWN,JAILROAD,LALACHERUVLI,RAJAMU NDRY - 533101 PH .0883-72410. 60249.

RAJAM

DEALER WORKSHOP (AS ON 01.04.2017)

 VARUN MOTORS PVT. LTD. (BLJ1-BLJ-01), PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH :08941-9703101166.

SRIKAKULAM

 VARUN MOTORS PVT. LTD. (4603-W6-09), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH: 08942-220830.

SURYAPET

 PAVAN MOTORS PVT. LTD (BLC1-BLC-01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213 PH.:8684-800889995, 27502750.

TANUKU

 NOVELTY REDDY & REDDY PVT LTD (BAR2-BAR1), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH :08819 -995140444.

TENALI

 JAYALAKSHMI AUTOMOTIVES (PE01-PE-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH :8644-226100,227100.

TIRUPATI

- KOUNDINYA ENTERPRISES (N981-N9-01), 18-3-60,KT BY PASS ROAD,,TIRUPATI PH:0877-2233051, 2231047.
- BHARGAVI AUTOMOBILES PVT LTD (A801-N9-02), 11/66/1, TIRUPATI RENIGUNTA ROAD, TIRUPATI, - 517507 PH:877-64591111.

TUNI

SATTIBABU MOTORS (PVT) LTD. (KY01-KY-01),
 D. NO. 65-31-15/1, OPP. FCI GODOWNS,
 NARAYANAPURAM, TUNI, EAST GODAVARI,
 ANDHRA PRADESH - 533401
 PH :08854-7661893888.

VIJAYAWADA

- MITHRA AUTO AGENCIES PVT LTD (2604-26-01), 40-17-3, PICHAIAH STREET, GANDHI COLONY, VIJAYAWADA -520001 PH .0866-632283. 633068.
- VARUN MOTORS PVT. LTD. (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH: 0866-2545053.

- VARUN MOTORS PVT. LTD. (2603-26-06).
 SURVEY NO.561/1, 562/6 & 561/3, 562/6
 KESARAPALLY,VIJAYAWADA, KRISHNA DISTRICT, A.P. 521102
 PH:866-9865382444.
- SANTOSH AUTOMOTORS PVT. LTD. (2607-26-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. 520010 PH.0866-7799787869, 2552262.

VISAKHAPATNAM

- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-03), SURIVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL VIZAG, ANDHRA PRADESH. - 530046 PH: 0891-2514919, 9849445639.
- VARUN MOTORS PVT. LTD. (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH : 0891-2525865.
- VARUN MOTORS PVT. LTD. (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026 PH :0891-2513157.
- VARUN MOTORS PVT. LTD. (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., - 530007 PH :0891-2705375.
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH - 530018 PH :0891-2506837.
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-02), D.NO:51-17-2, NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH). - 530013 PH:0891- 7799772272.
- VARUN MOTORS PVT. LTD. (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007 PH 10891-9885313744.
- VARUN MOTORS PVT. LTD. (4603-46-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE – DUPPITURU, MANDAL – ACHUTAPURAM, DISTRICT – VISHAKAPATNAM, ANDHRA PRADESH. - 531011 PH :3055550.

VIZAINAGARAM

 VARUN MOTORS PVT. LTD. (4603-N8-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM -535001
 PH.8922-7799666998.

VIZIANAGARAM

JAYABHERI AUTOMOTIVES (N801-N8-01), PLOT NO.B-1,DOOR NO.B-92-1,SURVEY NO.108/12A & 109/2A, INDUSTRIAL ESTATE, VANITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDIRA PRADESH - \$35001 PH 108029_255986.95577 000833232

ARUNACHAL PRADESH

ITANAGAR

- 60. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR.
 DISTT: PAPUMPARE, ITANAGAR
 PH 1380-2212843
- 61. BUISHI YADA MOTORS (7501-75-01), A' SECTOR, NAHARLAGUN, ARUNACHAL PRADESH. - 791110 PH:0360-245113, 245114.
- BUISHI YADA MOTORS (7501-75-02), NH-52A, BANDERDEWA PAPUMPARA (DISTT), ARUNACHAL PRADESH, ITANAGAR - 791123 PH :0360-266382.
- BUISHI YADA MOTORS (7501-75-04), MODEL VILLAGE, BEFORE GOVERNMENT HIGHER SECONDARY SCHOOL, NAHARLAGUN, ITANAGAR - 791110 PH :9436041437.

PASSIGHAT

64. BUISHI YADA MOTORS (7501-8A-03), PASSI GHAT BAZAR, PASSIGHAT, ARUNACHAL PRADESH - 791102 PH :368-9435082651/2224748.

ASSAM

BAIHATA CHARIALI

 PALLAVI MOTORS (P) LTD (BNL1-BNL-01), DAG NO. 1042, PATTA NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381 PH :361-986405248.

BARPETA

- ROY AUTO ENGINEERING WORKS (7281-72-01), POST OFFICE, BARPETA ROAD, MAIN ROAD, WARD NO.-4, ASSAM PH: 03666-260342-362743.
- BHARTI MOTORS (P) LTD (7N01-7Z-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313
 PH :366-6260416.

BIJOYNAGAR

 PODDAR CAR WORLD (IA01-IA-01), AT/PO-BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125 PH :3623-9854120396.

BOKAKHAT

 ANAMIKA MOTORS (BTP1-BTP-01), OPP. JDSG COLLEGE, NH-37, A.T. ROAD, WARD NO.-1, BOKAKHAT DISTT. GOLAGHAT (ASSAM) -786512 PH :03774-9435050938.

BONGAIGAON

 BHARTI MOTORS (P) LTD (7N01-7N-01), CHAPAGURI ROAD, BONGAIGAON - 7833830 PH :3664-099541-56179/231580/9859978958.

DHEKIAJULI

 RAMLAL DURGADUTT MOTORS PVT LTD (BRX1-BRX-01), DAG NO.242, K.P. PATTA NO.88, VILLAGE-BHAKUJAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110
 PH: 0361-9854258025.

DHEMAJI

 SAIKIA AUTO PVT. LTD. (7P01-UD-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057
 PH :3752-9957837538.

DIBRUGARH

 JAY BEE AUTO AGENCIES PVT. LTD. (C101-C1-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH :0373-2321018, 2329314.

DIGBOI

 VISHAL CAR WORLD PVT. LTD. (BYD1-BVD-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA, ASSAM. -786171
 PH :3751-9435860000.

DULIAJAN

- B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. PH:0374-2801255.
- JAY BEE AUTO AGENCIES PVT. LTD. (ADA1-ADA-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH -786602
 PH: 0374-8811098576.

QOALPARA

 BHARATI MOTORS PVT. LTD. (YN01-YN-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301 PH: 8761985554.

GOLAGHAT

 ANAMIKA MOTORS (J302-J3-01), N.H.-39, RANGAJAN, PO: MORANGI, DIST- GOLAGHAT-785621 PH:03772-360901, 360947.

GUWAHATI

- BIMAL AUTO AGENCY (0901-09-01),
 JHALUKBARI, GUWAHATI. 781014
 PH: 0361-670335. 570137.
- BIMAL AUTO AGENCY (0903-09-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021 PH 10361-98645025045/46
- PALLAVI MOTORS (P) LTD (0902-09-01), DAG NO. 182,NEXT TO DEPTT. OF FAMILY WELFARE, SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022 PH :361-2363191/92/93, 2360149, 2368980, 2360233
- PODDAR CAR WORLD PVT LTD (0904-09-01), HENGRABARI ,VIP ROAD,GUWAHATI - 781036
 PH :0361-2334969. 71. 2334975.
- PH:0361-2334969, 71, 2334975.

 83. BIMAL AUTO AGENCY (0901-09-02),
 BEHARBARI,BEHIND DHOOM RESTAURANT,
 NH-37 GI IMAHATI 781028
- PH:0361-8486002903/902.

 84. BIMAL AUTO AGENCY (0903-09-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM 781005
 PH:0361-22073229854057190.
- MITTAL AUTOZONE (0906-09-01), NH-37, LALMATI, NEAR BHARAT PETROLIUM, GUWAHATI, ASSAM. - 781029 PH :0361-2309951.
- MITTAL AUTOZONE (0906-09-02), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028
 PH :0361-9864296666.
- PALLAVI MOTORS (P) LTD (0902-09-02), DAG NO. 2201, PATTA NO. 237, VILLAGE – JYOTIKUCHI, MOUZA – BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. - 781034 PH :9864052488.
- PODDAR CAR WORLD (0905-09-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029 PH: 0361-7101714, 9435555853.
- BIMAL AUTO AGENCY (0901-09-03), AECB ROAD, MAJHAR GALI, ROOP NAGAR, ULUBARI, GUWAHATI, ASSAM - 781007 PH :0361-9864074525.

HOJAI

90. RAMLAL DURGADUTT MOTORS PVT LTD
(ARA1-ARA-01), KHATIYAN NO.: 312/3F, HOJAI
MAIN ROAD, NEAR UCO BANK,
SHANKARDEVNAGAR, HOJAI, DISTRICT—
NAGAON, ASSAM-782435
PH :03674-9707556888.

JAGI ROAD

91. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-RB-02), JAGIROAD,MORIGAON,NALAOW,ASSAM -782410

PH:03678-9435569526.

JORHAT

 ANAMIKA MOTORS (G901-G9-01), GARALI ROAD, RAJABARIE, JORHAT, ASSAM. - 785001 PH:0376-360901, 360947.

KARIMQANJ

 JAIN UDYOG (6901-1S-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710
 PH:3843-262084.

KHATKHATI

 PODDAR CAR WORLD PVT. LTD. (CA21-CA2-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG. -782460 PH:9706010366.

MANGALDOI

 PODDAR CAR WORLD (YW01-YW-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115 PH:0361-9707152711.

MARGHERITA

 VISHAL CAR WORLD PVT. LTD. (YR01-YR-01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181 PH :03751-220011

NAGAON

97. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002 PH:0372-236111.

NALBARI

 BIMAL AUTO AGENCY (9201-92-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335 PH: 0364-220031.

NORTH LAKHIMPUR

 SAIKIA AUTO PVT. LTD. (7P01-7P-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031 PH :3752-232272.232450. SAIKIA AUTO PVT. LTD. (7P01-7P-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001 PH :03752-232272.

RANGIA

 PODDAR CAR WORLD PVT. LTD. (6X01-6X-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354 PH.0361-9707015958.

SIBSAGAR

 ANAMIKA MOTORS (G901-L9-02), CHEREKAPAR, B.G. ROAD, NEAR HOLY NAME SCHOOL, SIBSAGAR. - 785640 PH:03772-272231, 272251.

 JAIN UDYOG (6901-J2-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006 PH: 03842-26061. 62.

SONAPUR

SILCHAR

 BIMAL AUTO AGENCY (AAQ1-AAQ-01), TEPESIA TINIALI, NH-37, SONAPUR, DIST- KAMRUP, ASSAM. PH :9435101175.

TEZPUR

 RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154 PH :0361 - 8724087940.

TINSUKIA

 VISHAL CAR WORLD (J401-J4-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM -786183
 PH - 0374-2312572

BIHAR

ARARIA

 SEEMANCHAL MOTORS PVT. LTD. (0701-07-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318 PH .06455-8737099012/7545830002.

ARRAH

 PEARL CARS (VU01-VU-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH :6182-930468588.

BEGUSARAI

 G S MOTORS (1U01-1U-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - 851101 PH:9204756206.

BETTIAH

 SHREE GOPAL AUTO PVT. LTD. (O401-O4-01), BEETIAH - MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438 PH :6254-223050/9771486183.

BHAGALPUR

 SEEMANCHAL MOTORS PVT. LTD. (G802-G8-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005

PH:0641-8797096012/8797096019. BIHARSHARIF

112. REESHAV AUTOMOBILES (MG01-TG-03), PATNA RANCHI ROAD, NI GAGAN DIWAN SOGARA SCHOOL, THANAL-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR -803101 PH : 7061295297.

BUXAR

CHAPRA

113. PEARL CARS (VV01-VV-01), C/O DEVDHTRHA UPPDHYYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101

PH:6183-8294634605/8294634602.

114. REESHAV AUTOMOBILES (MG01-TH-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301 PH 9263637646.

DANAPUR

115. ALANKAR AUTO SALES & SERVICE (1504-NN-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, -800018 PH 9398698458

DARBHANGA

- KRISHNA MOTORS (1V01-1V-01), KHATA
 NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P.
 13, ROAD, DARBHANGA, BIHAR 846009
 PH :9204552405.
- KRISHNA MOTORS (1V01-1V-03), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - 846003 PH: 9204552405.

QAYA

KARLO AUTOMOBILES PVT LTD (Y601-Y6-01),
 BODH GAYA, GAYA. - 824231
 PH:631-016312200277, 09708231604.

GOPALGANJ

DEALER WORKSHOP (AS ON 01.04.2017)

SHREE GOPAL AUTO PVT. LTD. (0301-03-01),
 NH-28, DANAPUR,
 TEHSIL-MANJAGARH, GOPALGANJ (BIHAR) -

800023 PH:06156-292290/9771486139.

HAJIPUR

 REESHAV AUTOMOBILES (MG01-MG-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI). - 844101 PH 9263632163.

KATIHAR

 SEEMANCHAL MOTORS PVT. LTD. (0601-06-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAR PURNEA ROAD, KATIHAR - 854105 PH :6452-8797096021/8797096019.

KISHANGANJ

122. SEEMANCHAL MOTORS PVT. LTD. (PX01-PX-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA-KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101 PH :06456-233074/8797096043.

MOHANIA

 PEARL CARS (VW01-VW-01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109
 PH:6187-8294634632/8294634649.

MOTIHARI

124. RAJIV AUTOMOBILES PVT LTD (T401-FH-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN, BIHAR - 845401 PH :6252-241405. 9234609669.

MUZAFFARPUR

- RAJIV AUTOMOBILES PVT LTD (T401-T4-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002 PH :0621-2272660/9910347908/9234609671.
- RAJIV AUTOMOBILES PVT LTD (T401-T4-02), RAMDAYALU NAGAR, NEAR BMALANG STHAN, PATANA-MUZAFFERPUR HIGHWAY, - 842002 PH:7677773918/9234456810.

NAUGACHIA

 SEEMANCHAL MOTORS PVT. LTD. (CFS1-CFS-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204 PH: 8797096014, 8797096020.

NAWADA

128. REESHAV AUTOMOBILES (MG01-TJ-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110 PH 9263632156.

PATNA

- 129. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA PH :0612-2265916.9334115999.
- KARLO AUTOMOBILES PVT LTD (1502-15-04).
 NEAR BATA GUNJ, DINGA PATNA, BIHAR. -800013
 - PH:612-'09304212119/9304217120.
- VAU'S AUTOMOBILE (1503-15-01), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA. - 800014
 PH - 9771446012
- 132. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001 PH-612-2528415/ 9934020200.

PURNEA

 SEEMANCHAL MOTORS PVT. LTD. (6V01-6V-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326
 PH : 06454-232229/87979096014.

SAHARSA

 G S MOTORS (AAP1-AAP-02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201 PH :9263638456.

SAMASTIPUR

 KRISHNA MOTORS (1W01-1W-01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101 PH :9204061641.

SASARAM

PEARL CARS (1X01-1X-01), PLOT NO.7, 9 & 11,
 NH-2 MORE SARAI, SASARAM (BIHAR) - 821115
 PH :6184-8294634602/8294634605.

SITAMARHI

 RAJIV AUTOMOBILES PVT. LTD. (E001-E0-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. -843301
 PH:3234609671.

SIWAN

 SHREE GOPAL AUTO PVT LTD (0501-05-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236
 PH :6154-9771486144/9771486132.

CHANDIGARH

CHANDIGARH

 AUTOPACE NETWORK (P) LTD (0705-07-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1. CHANDIGARH - 160002 PH -9878429201.

- MODERN AUTOMOBILES (0702-07-01), 4 M.W. INDL AREA, CHANDIGARH - 160002
 PH:01072-650555, 656333.
- C M AUTOSALES PVT. LTD. (0706-07-01), PLOT NO.130, PHASE-1, INDUSTRIAL AREA, CHANDIGARH - 160029
 PH :0172-5200250.
- 142. STAN AUTOS PVT LTD (L104-07-03), B-42, INDUSTRIAL AREA, PHASE-II, CHANDIGARH 160002

CHANDIGARH (U.T)

CHANDIGARH

PH:0172-5003700.

 TRICITY AUTOS (9M01-07-02), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH -160002
 PH :0172-4222222.

CHHATTISGARH

AMBIKAPUR

144. MAHAMAYA AUTOCARS PVT. LTD. (AE01-AE-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001 PH :7774-231852, 53.

BALODA BAZAAR

145. SKY AUTOMOBILES (5001-GJ-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332 PH:7727-222606.

BEMETARA

146. GANAPATI MOTORS (CBC1-CBC-01), BHILAI ROAD, OPP. OF GOVT COLLEGE BEMETERA (CHHATTISGARH) - 491335 PH 9644294450

BHATAPARA

 SPARSH AUTOMOBILES (BBJ1-BBJ-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118
 PH:3926626662.

BHILAI

148. GANAPATI MOTORS (8303-83-03), R 17, INDUSTRIAL AREA, NANDINI ROAD, CHAVANI ROAD, BHILAI. - 490026 PH:788-4030011, 4075000.

BILASPUR

 SATYA AUTOMOBILES (C301-C3-03), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001 PH:7752-645048, 252024.

DHAMTARI

 SKY AUTOMOBILES (7V01-7V-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH:8889998612.

DURG

 GANAPATI MOTORS (7W02-7W-01), OPP JAINAM PLACE, BEFORE PULGAON CHOWK PULGAON NAKA, DURG, C. GARH - 491001 PH:788-9826643000.

GARIABAND

152. SPARSH AUTOMOBILES (CCH1-CCH-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032 PH :9669638883.

JAGDALPUR

 SKY AUTOMOBILES (EC01-EC-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001 PH :07782-231500/231498

JANJQIR

154. SATYA AUTOMOBILES (C301-9N-02), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668 PH :07817-9991260403.

KANKER

155. SKY AUTOMOBILES (5001-KG-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER, DISTRICT – KANKER, CHHATTISGARH - 494334 PH : 07722-233111.

KAWARDHA

156. GANAPATI MOTORS (DI01-DI-01), NEAR KRISHI UPAJ MANDI, BILASPUR - KAWARDHA ROAD, KAWARDHA (DISTT - KABEERDHAM), CHHATTISGARH - 491995 PH :07741-275591.

KORBA

157. SATYA AUTOMOBILES (U701-U7-03), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681 PH:07759-228167, 228168, 228169.

MAHASAMUND

 SPARSH AUTOMOBILES (5002-9P-02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND. PH :7723-224880.

MANENDRAGARH

159. MAHAMAYA AUTOCARS PVT. LTD. (AE01-BCE-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442 PH.3817282064.

MUNGELI

160. SATYA AUTOMOBILES PVT LTD. (BLE1-BLE-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468 PH :9981266667, 08,09.

PATHALGAON

161. MAHAMAYA AUTOCARS PVT. LTD. (BX01-BX0-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118 PH:8889955558.

PITHORA

 SPARSH AUTOMOBILES (CCG1-CCG-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008 PH :9009645552.

RAIGARH

- 163. SHAKTI AUTOMOBILES (7Y81-7Y-01), ORRISSA ROAD, KABIR CHOWK, BANJHIPALI, RAIGARH, C.GARH
- 164. SATYA AUTOMOBILES (7Y02-7Y-01), JINDAL ROAD, RAIGARH - 496001 PH:07762-228177,215810.

RAIPUR

- SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010
 PH:0771-4214000.
- SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH:0771-4019000.
- SPARSH AUTOMOBILES (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. -492001
- PH:0771-4222222.

 168. SKY AUTOMOBILES (5001-50-07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. 492013 PH:9425204051.
- SKY AUTOMOBILES (5001-50-05), NEAR R.K.
 MALL, KOTA ROAD, RAIPUR 492001
 PH:0771-4032505
- 170. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH:0771-4207000.
- SPARSH AUTOMOBILES (5002-50-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR -492004
 PH :0771-422213.
- 172. SPARSH AUTOMOBILES (5002-50-05), PLOT 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR PH :9926626662.

RAJIM

 SPARSH AUTOMOBILES (5002-MO-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881 PH:7701-234556.

RAJNANDQAON

174. GANAPATI MOTORS (8303-LQ-04), NEAR HANUMAN TEMPLE, GRAM MANKI, NH-6, RAJNANDGAON. - 491441 PH :7744-291721.

SARAIPALI

 SKY AUTOMOBILES PVT. LTD. (BUF1-BUF-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI -493558
 PH.7725-4030011, 4075000.

SARANGARH

SATYA AUTOMOBILES PVT LTD.
 (BUC1-BUC-01), KASRA NO. 71/4, 73/2, 74/2, 75/1
 AND 76/2, SARANGARH BIKAS KHAND,
 SARANGARH, DISTT. RAIGARH. - 733751
 PH :9981266667.08.09.

DADRA & NAGAR HAVELI

SILVASSA 177. KATARIA AUTOMOBILES PVT. LTD

(ED01-ED-01), NEAR ATHAIL CHAR
RASTA,DADAR & NAGAR HAVELI, SILVASSA 396230
PH :0260
-2650057/56

DAMAN & DIU

DAMAR

 KATARIA AUTOMOBILES PVT. LTD (0104-98-08), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN, DAMAN UNION TERRITORY - 396210 PH :0260-8866002499/2244002.

DELHI

- 179. J.J IMPEX (MARUTI SERVICE MASTERS) (0883-08-03), PLOT NO. 9, SSI INDUSTRIAL ESTATE, CIT. KARNAL ROAD, OPP JAHANGIR PURI, NEAR KDR WOOL FACTORY, DELHI -110033
- PH:011-40715500, 40715501.

 180. J.J IMPEX (MARUTI SERVICE MASTERS) (0883-08-01), F-39,0KHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI 110020 PH:011-41612194, 40685500.
- MARUTI SALES & SERVICE(DELHI) (0810-08-01), C-119, INDUSTRIAL AREA PHASE-I, NARAINA, NEW DELHI - 110028 PH :011-45541113.
- 182. A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, ,LAWRANCE ROAD,DELHI PH:011-48280000.
- 183. GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, PH: 011-43276666.

- AAA VEHICLEADES PVT. LTD. (08B4-08-01),
 B-244,OKHLA,PHASE-1,NEW DELHI, 110020
 PH:011-46664888-46664999.
- BAGGA LINK MOTORS PVT LTD. (0811-08-01), 395 PATPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092 PH: 011-46488830, 46488831.
- 186. BAGGA LINK MOTORS PVT LTD. (0811-08-02) LINK ROAD, (NEAR BAGGA PETROL PUMP), KAROL BAGH, NEW DELHI - 110005 PH :011-23524646, 23522626.
- COMPETENT AUTOMOBILES CO LTD (0806-08-01), 895(C-8, NEAR JAIN MANDIR DADA BARI,MEHRAULI,NEW DELHI - 110030 PH -011-47724700, 47724707.
- COMPETENT AUTOMOBILES CO LTD (0806-08-03), PLOT NO.3, GAZIPUR, DELHI, -110096 PH :011-45300000.
- D.D. MOTORS (08B2-08-01), A-1 UDYOG VIHAR, NEW ROHTAK ROAD, PEERAGARHI, DELHI - 110041 PH :011-25963535, 48616500.
- D.D. MOTORS (0813-08-01), A-100
 MAYAPURI,PHASE-II,NEW DELHI 110064
 PH: 011-41845000, 49305232.
- D.D. MOTORS (08A3-08-01), 5, WAZIRPUR, INDUSTRIAL AREA, ADJACENT TO WAZIRPUR DEPOT, RING ROAD, NEW DELHI-110034
- PH:011-27153996-99, 27151466-67.

 192. KRISH AUTOMOTORS PVT. LTD. (08C1-08-01), PLOT NO.9, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. 110063
- 193. MAGIC AUTO PVT. LTD. (0888-08-01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI-110064

PH -011-43288888

- PH:011-41847777.

 94. MAGIC AUTO PVT. LTD. (08B7-08-01), PLOT NO. 68/3.MOTINAGAR.NEW DELHI. 110015
- PH:011-43777777, 43777721.

 95. MAGIC AUTO PVT. LTD. (08B7-08-02), PLOT NO.: B-7, G.T. KARNAL ROAD, DELHI, 110033
- PH:011-45977777.

 196. MARKETING TIMES AUTOMOBILES PVT LTD (0887-08-01), 18, OKHLA INDUSTRIAL ESTATE, PHASE-3, NEW DELHI 110020
- PH:011-40999999, 40999904.

 97. RANA MOTORS PVT LTD (08A1-08-02),
 C-47,0KHLA INDUSTRIAL AREA,PHASE-II,NEW
 DELHI 110020
 PH:011-41707777.
- ROHAN MOTORS LTD. (0886-08-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044 PH .011-40567900, 41679252-259.

- SAYA AUTOMOBILES PVT. LTD. (0808-08-03), A
 21-22, G.T.KARNAL ROAD, NEW DELHI 110033
 PH:011-47088888.
- 200. T.R. SAWHNEY MOTORS PVT LTD (0819-08-01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI -110094
- T.R. SAWHNEY MOTORS PVT LTD (0819-08-02),
 B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR
 18, BADLI, NEW DELHI 110042
 PH :011-71118333.
- 202. T.R. SAWHNEY MOTORS PVT LTD (0819-08-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092 PH :011-9873851333.
- 203. T.R. SAWHNEY MOTORS PVT LTD (08C3-08-01), PLOT NO. -A/191, OKHLA PHASE-1, DELHI -110020

PH:011-71119333.

PH:011-71115333.

- 04. SAYA AUTOMOBILES (0808-08-2B), KHASRA NO.2,G.T. KARNAL ROAD, OPP. GURUDUARA HARGOVIND SINGH, SIRAS PUR BADLI, DELHI-110033
- PH:011-27731325, 27731856.

 205. COMPETENT AUTOMOBILES CO. LTD.

 (0806-08-05), B-83 MAYAPURI PHASE I, NEW

DELHI - 110015

PH:011-47268980.

- 206. BAGGA LINK MOTORS PVT LTD. (0811-08-03), PLOT NO.4,6,8,10 NEAR FORTIS HOSPITAL, OPPOSITE NIRILAS, BABA POTETY COMPOUND, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI - 110070 PH 1011-45588888 45688811
- 207. RANA MOTORS PVT LTD (08A1-08-04), B-6/6,
 OKHLA INDUSTRIAL AREA PHASE-II, NEW
 DELHI 110020
 PH 011_40877777 26389930
- 208. COMPETENT AUTOMOBILES (0806-08-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI
 - PH:011-8377007980/81/02.
- RANA MOTORS PVT LTD (08A1-08-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033 PH: 011-41609999, 42474444.
- MAGIC AUTO PVT. LTD. (08B8-08-01), KHASRA NO. 220 & 248, VILLAGE-DHUL SIRAS, SECTOR-24, DWARKA NEW DELHI. - 110077 PH:9910445501, 9818555669.
- KRISH AUTOMOTORS PVT. LTD. (08A9-08-03), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. -110052 PH:011-42020000, 9910114255.

DEALER WORKSHOP (AS ON 01.04.2017)

- 212. T.R. SAWHNEY MOTORS PVT LTD (08D2-08-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064 PH -011,7111933 9999049337
- D.D. MOTORS (0813-08-05), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015 PH :999903888.
- MAGIC AUTO PVT. LTD. (08D5-08-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092 PH:011-9818741741.
- DD MOTORS (0813-08-06), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. - 110043 PH:011-9999127840/9999127947.
- PREM MOTORS PVT. LTD. (08D4-08-01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI-110037
 PH :011-42390000.
- AAA VEHICLEADES PVT. LTD. (08B9-08-03),
 VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 &
 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR
 NO.616, MUNDKA, NEW DELHI 110041
 PH.011-66118888

GOA

BICHOLIM

 SAI SERVICE PVT. LTD. (BHN1-BHN-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529 PH: 0832-2385500.

CANACONA

219. CHOWGULE INDUSTRIES PVT. LTD. (IT01-IT-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702 PH :0832-2633010.

CUNCOLIM

 SAI SERVICE PVT. LTD. (3402-AAO-06), SURVEY NO. 64/7, SHOP NO.3-A-II, CANCNAMODDI, CUNCOLIM, SOUTH GOA - 403703 PH :0832-2763062, 2763063.

DHARBANDORA

 CHOWGULE INDUSTRIES PVT. LTD. (3408-GO-07), AT. KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401 PH : 0832-2345221.

MAPUSA

 CHOWGULE INDUSTRIES PVT. LTD. (3408-8Z-03), PLOT NO. 19/20, THIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA, GOA - 403507 PH: 0832-2258000/5/6. SAI SERVICE PVT. LTD. (3402-8Z-05),
 D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA,
 GOA, - 403507
 PH -0822-2267000

MARGAO

- CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-01), OPP. DAMODAR
 TEMPLE, FATORDA, MARGOA, GOA - 403602
 PH: 0832-2749102 2749135. 169. 180. 741237. 39
- 225. SAI POINT CARS PVT LTD (3409-1Y-01), H.NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA CAMIJR IN SAI CETE GOA - 403722
- PH:0832-2746700/2858899.
 226. SAI SERVICE PVT. LTD. (3402-1Y-02), SURVEY NO. 212/4,VILLAGE VERNA,TAL: SALCETE .NEXT TO AGNEL POLYTECHNIC. MARGAO -
- PH:0832-2883000, 2791195,791192-96.
 227. CHOWGULE INDUSTRIES PVT. LTD.
 (3408-11-08), PLOT NO. M-58 AND M-59, PHASE
 3B, VERNA INDUSTRIAL ESTATE, MARGAO,
 VERNA, SALCETE SOUTH GOA, GOA 403722
 PH:0832-27892400

DANA.II

403718

- CHOWGULE INDUSTRIES PVT. LTD. (3408-P1-02), D.B BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001 PH :0832-2433000/2.
- SAI SERVICE PVT. LTD. (3402-P1-01), SURVEY
 NO: 36/1, PENHA DE FRANCE, TAL: BARDEZ,
 ALTO PCRVORIM, GOA 403501
 PH-0822-2419200-2414244-412084
- SAI SERVICE PVT. LTD. (3402-P1-07), SHOP NO.
 DUKLE HEAVEN, ST. INEZ, PANAJI, NORTH GOA - 403001 PH (0829.299292)2925222

PONDA

 SAI SERVICE PVT. LTD. (3402-34-03), OFF PANJIM HIGHWAY,PONDA,GOA, - 403401 PH:0832-2324106, 2311499, 2324120.

SANVORDEM

232. CHOWGULE INDUSTRIES PVT. LTD.

(BTM:-BTK-01), SURVEY NO. 4, SUBDIVISION-3,
VILLAGE - CACORA, TALUKA - CURCHOREM,
SANVORDEM, DIST. - SOUTH GOA, GOA. 403706
PH: 3322652300.

SATTARI

233. CHOWGULE INDUSTRIES PVT. LTD.
(3408-B0P-10), SURVEY NO. 60, SUB DIV NO. 05,
VILLAGE ARVALEM, VILLAGE PANCHAYAT
ARVALEM, TALUKA SATTARI, NORTH GOA,
GOA. 403505
PH: 0832-6410187.

TALEIQAON

 CHOWGULE INDUSTRIES PVT. LTD. (3408-NP-06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON, - 403001
 PH. 0832-2431709 2231217

VASCO

- 235. SAI SERVICE PVT. LTD. (3402-CP-04), NEXT TO SHIKALIM CHURCH, SHIKALIM, VASCO, GOA -403802 PH :0832-2542581/2526008/2526000/9850559425, 2414
- 236. CHOWGULE INDUSTRIES PVT. LTD. (3408-CP-09), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO,GOA - 403802

PH:0832-2540121/833540131.

GUJARAT

AHMEDABAD

- KIRAN MOTORS LIMITED (0102-01-04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060 PH .079-65457555.
- 238. KATARIA AUTOMOBILES PVT. LTD (0104-01-01), D/8 BEHIND ESI HOSPITAL, OUTSIDE DARIAPUR DARWAJA, AHMEDABAD - 380016 PH 1079-22174053/FA
- KATARIA AUTOMOBILES PVT. LTD (0104-01-05),
 NEAR KOKHRA BRIDGE, MANINAGAR 380008
 PH 079-22180571/72
- KATARIA AUTOMOBILES PVT. LTD (0110-01-01)
 BEHIND ADANAL PUMP, NEAR MAKARBA
 CROSSING, MAKARBA, SG HIGHWAY 380051
 PH 1079-30112333 (20112312
- 241. KIRAN MOTORS LIMITED (0102-01-01), SARKHEJ - GANDHINAGAR HIGHWAY, OPP. RAJPATH CLUB, AHMEDBAD - 380054 PH 10272-6740055 67
- 242. KIRAN MOTORS LIMITED (0102-01-02), BEHIND L&T GODOWN, SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210 PH :079-26891863, 26891009, 65459555, 65228555, 65229555.
- KIRAN MOTORS LIMITED (0102-01-03), BASEMENT, RIVERA ARCADE,NR. AUDA GARDEN, PRAHLADNAGAR, 100FT RING ROAD,SATELLITE, AHMEDABAD - 390015 PH:079-26924777,26927333.

- POPULAR WHEELERS (INDIA) PVT. LTD. (0105-01-01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443 PH.079-61903232.
- POPULAR WHEELERS (INDIA) PVT. LTD. (0111-01-01), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA,AHMEDABAD - 380054 PH :079-65058111.
- UDAY AUTOLINK (0113-01-01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT - 382430 PH :079-31927070.
- 247. NANDA AUTOMOBILES (0114-01-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405 PH: 079-8866558787 / 8460088883.
- 248. STARLINE CARS (P) LTD (0115-01-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330 PH:079-29701051/53.
- 249. KIRAN MOTORS (0112-01-02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330 PH :079-60020555/60021555.
- 250. POPULAR WHEELERS (INDIA) PVT. LTD. (0109-01-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. - 380007 PH : 079-30491101. 02.
- ATUL MOTORS PVT. LTD. (0116-01-01), PLOT NO. 116, BOPAL – AMBIL ROAD, BOPAL, AHMEDABAD, DISTRICT – AHMEDABAD, GUJARAT. - 380058
 PH -079-61993300
- KIRAN MOTORS LIMITED (0112-01-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005 PH: 079-65054555 / 575.

AMOD

 RAVIRATNA MOTORS (F801-ZE-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110 PH :9687691106.

AMREL

254. ATUL MOTORS (9E01-9E-01), LATHI BY PASS ROAD, AMRELI, GUJARAT. - 365601 PH :02792-8140909098.

ANAND

 AMAR CARS PVT LTD (F702-F7-01), JANTHA CROSSING, SOJITRA ROAD, ANAND - 388121 PH:02692-229980, 229981.

ANKALESHWAR

 RAVIRATNA MOTORS (P901-P9-01), PLOT NO. 624/2/BA, GIDC, VALIA ROAD, ANKLESHWAR -393002
 PH: 02646-225132/28.

RARDOLI

- KATARIA AUTOMOBILES PVT. LTD. (Q106-Q1-22), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310 PH :922803307/9228004697/02622-302222.
- DHRU MOTORS (4002-Q1-02), G.I.D.C,SURAT BARDOLI ROAD,BARDOLI, - 394601 PH:02622-9825413113/9879104454.

BAREJA

259. KATARIA AUTOMOBILES PVT. LTD.
(BAN1-BAN-01), 56/7, ADITYA COMPLEX
NATIONAL HIGHWAY-8, BAREJA, TALUKA –
DASKROI, DISTRICT – AHMEDABAD, GUJARAT 382425
PH :079-7046079997.

BARWALA

 UDAY AUTOLINK PVT. LTD. (I401-I4-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450 PH:756744999.

BAVLA

 KATARIA AUTOMOBILES PVT. LTD (0104-RX-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220 PH 102714-231250

BHACHAU

 K.D. MOTORS (P501-JP-02), SUNRISE MALL,OPP, BUS STAND, BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140 PH :02837-223402.

BHARUCH

 RAVIRATNA MOTORS (F801-F8-01), NH 8, OPP YOGI PETROL PUMP, P. O.
 ZADESHWAR,BHARUCH - 392011 PH :02642-233506, 507, 504.

BHAVNAGAR

264. ETERNAL MOTORS PVT LTD (C901-C9-01), 14/1 & 2 GIDC, BEHIND S.T. WORKSHOP, CHITRA, BHAVNAGAR - 364004 PH:9227893042, 44. ETERNAL MOTORS PVT LTD (C901-C9-02), PLOT NO. 1858/A-2,OPP GOLIBAR HANUMAN MANDIR, BEHIND GAUSHALA, RUPANI CIRCLE, BHAVNAGAR - 364002 PH :0278-2562462, 9228007221.

266. ETERNAL MOTORS PVT. LTD. (C901-C9-04), 6/8 & 11 GIDC, BHAVNAGAR - RAJKOT HIGHWAY, CHITRA, BHAVNAGAR (GUJARAT). - 364004 PH :0278-9228007215, 9227839040.

267. ETERNAL MOTORS PVT LTD (C901-C9-05), PLOT NO 29, SURVEY NO 371 à 3712 NEAR TALAJA OCTROI CIRCLE, BESIDE INDIAN OIL PUMP, TALAJA ROAD, ADHEWADA, BHAVNAGAR, DISTT: BHAVNAGAR, GUJARAT 384002

PH:0278-9099091926, 9227893036.

PH:2832-02832-232534/5.

268. K.D. MOTORS (P501-P5-01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , RHILLIGILIARAT - 370001

BODELI

 KIRAN MOTORS LIMITED (0R01-0R-01), OPP.NARMADA GUEST HOUSE, DABHOI ROAD, BODELI, TALUKA: SANKHEDA, VADODARA -391135

PH:02665-222223 / 222224.

270. AMAR CARS PVT LTD (BJM1-BJM-01), BORSAD - TARAPUR HIGHWAY, BORSAD , DISTRICT – ANAND, GUJARAT - 388540 PH :0265-9586477744.

BOTAD

ETERNAL MOTORS PVT LTD (C901-AP-03),
 OPP.MULTIPLEX CINEMA, YOGI
 NAGAR, PALIYAD ROAD, BOTAD - 400092
 PH :02849-8511118832, 9099095344.

CHOTILA

272. DREAM VEHICLES PVT. LTD. (CFI1-CFI-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO – CHOTILA, DISTRICT – SURENDRAMAGR, GUJARAT. - 363520 PH :8238000979.

DABHOI

 KATARIA AUTOMOBILES (UU01-UU-01), OPP.
 VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110
 PH:02663-255311.

DAHOD

274. R B CARS PVT. LTD. (2C01-PL-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151 PH :02673 244307.

DEESA

 TANU MOTORS PVT. LTD. (Q801-UQ-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535 PH :02744-270499.

DEHGAM

 NANDA AUTOMOBILES (2801-NR-03), NEAR UMIYA MATAJI TEMPLE, COLLEGE ROAD, AHMEDABAD ROAD, DEHGAM - 382305 PH : 02716-234567.

DEVQADH BARIA

 R B CARS PVT. LTD. (2C01-AOA-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380 PH :0265-2771122.

DHARAMPUR

278. KATARIA AUTOMOBILES PVT. LTD.
(BSK1-BSK-01), SURVEY NO.29/3/P1, VILLAGE
ASHURA NR. ASHURA CIRCALE, DHARAMPUR
DISTT. VALSHAD, GUJARAT - 396050
PH.02633-240600.

DHARI

279. ATUL MOTORS PVT. LTD. (GG01-GG-01), PLOT NO. 9, DHARI, KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI, TALLIKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640 PH :0281-2462779, 6699000, 9824200001, 70446233552

DHRANGADHRA

280. DREAM VEHICLES PVT. LTD. (IM01-IM-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH -2754-281234.

GANDHI NAGAR

281. NANDA AUTOMOBILES (2801-28-01), 1003,SECTOR-28,GANDHI NAGAR - 382028 PH:079-23212692 / 93 / 94.

GANDHIDHAM

- B M AUTOLINK (7702-77-01), EAST OF PLOT NO. 30-35, NATIONAL HIGHWAY, GANDHIDHAM -370201 PH :02836-223330.
- 283. B M AUTOLINK (7702-77-03), SURVEY NO.129/26 P, GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110 PH :9727725004.

GODHRA

- R B CARS PVT. LTD. (2C01-2C-01), PLOT NO. 112/11.,12-VAVDI, GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001 PH :02672-265306. 265307. 365308.
- R B CARS PVT. LTD. (2C01-2C-04), GODHRA -LUNAWADA ROAD, GODHRA, DISTRICT: PANCHMAHAL - 389001 PH :02672-262749.

GONDAL

286. ATUL MOTORS (PVT) LTD (5503-AD-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY, GONDAL - 360311 PH .02825-294495.

HALOL

287. R B CARS PVT. LTD. (BKC1-BKC-01), PLOT NO. 104/6 & 104/8, VADODARA — GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT — PANCHMAHAL, GUJARAT - 389350 PH :02678-220201.

HALVAD

288. DREAM VEHICLES PVT. LTD. (GX01-GX-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AMHEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330 PH J02758-291409.

HIMMATNAGAR

289. KIRAN MOTORS LIMITED (P601-P6-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001 PH:02772- 9824576711.

IDER

290. KIRAN MOTORS LIMITED (UX01-UX-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430 PH :8155994111.

JAMNAGAR

- ATUL MOTORS (PVT) LTD (F401-F4-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001 PH: 0288-3041001.
- ATUL MOTORS (PVT) LTD (F401-F4-04), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002 PH :0288-2550251.

JASDAN

 ATUL MOTORS PVT. LTD. (5503-0B-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050 PH :02821-291222 7046299952.

DEALER WORKSHOP (AS ON 01.04.2017)

JETPUF

294. PERFECT AUTO SERVICES (PK01-PK-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370 PH :(02823)-9978998006.

JUNAGADH

 PERFECT AUTO SERVICES (5502-K8-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001

KADI

 STARLINE CARS (P) LTD (D101-UR-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH:02764-241200.

KALOL

 NANDA AUTOMOBILES (2801-FW-02), PLOT NO. - 162-168, GIDC, KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028 PH :02764-220781 / 82 / 83.

KARJAN

298. AMAR CARS PVT LTD (UZ01-UZ-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) -391210

PH:0265-2458282/2458585. **KHAMBHAT**

 AMAR CARS PVT LTD (BNF1-BNF-01), PLOT NO 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LLL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJJARAT - 388620 PH 10265-9909960706.

KIM

 KATARIA AUTOMOBILES (UW01-UW-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110
 PH :02621 -3081240/251;235555.

LIMBDI

 DREAM VEHICLES PYT. LTD. (BSG1-BSG-01), SURVEY NO.2761, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-PAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 383421 PH :02758-261262.

LUNAWADA

302. R B CARS PVT. LTD. (BYN1-BYN-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA, TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230 PH :9879126981, 9825967139 9566746703.

MAHESANA

STARLINE CARS (P) LTD (D101-D1-01),
 NAGALPUR HIGHWAY,MAHESANA, GUJRAT-384002
 PH:02762-255454 & 231707.

MAHUVA

304. ETERNAL MOTORS PVT. LTD. (IV01-IV-01), VIJAY - PARTH COMPLEX, BANDAR ROAD, MAHUVA(GUJARAT) - 364290 PH :02844-22626 / 9227893041.

MANDAL

 KIRAN MOTORS (IW01-IW-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH :02715-9408803925.

MANDY

306. K.D.MOTORS (UY01-UY-01), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465 PH.02834-295100 / 01.

MANSA

 NANDA AUTOMOBILES (2801-01-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845 PH :9727921000.

MEHSANA

308. TANU MOTORS PVT. LTD. (Q801-D1-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH.02782-291102. 291103. 291104.

METODA

309. ATUL MOTORS PVT. LTD. (5503-BLW-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT -RAJKOT, GUJARAT - 360021 PH. 9924688774.

MODASA

 KIRAN MOTORS LIMITED (P601-CR-02), SHAMLAL JI ROAD, SABARKANTHA DIST., MODASA - 383315 PH :2774- 8155995111.

MORBI

 PERFECT AUTO SERVICES (5502-X5-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI, TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. - 363841 PH :9879518052, 9099058044 9925199569.

MOTI KHAVADI

312. ATUL MOTORS (PVT) LTD (AAU1-AAU-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST -JAMNAGAR, GUJARAT. - 361140 PH. 1928.7946118

MUNDRA

313. B M AUTOLINK (7702-AJ-02), PRAGPAR ROAD, MUNDRA, DISTRICT-KUTCH, GUJARAT, -370421

PH:02838-296020.

 AMAR CARS PVT LTD (F702-P7-02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370 PH:0268-2587981, 2587980.

NAVSARI

315. KATARIA AUTOMOBILES PVT. LTD (Q701-Q7-01), PLOT NO-891, OPP PAUVA MILL, NH-8, NEAR GANESH SISODRA CHOKDI, GANESH SISODIA NAVSARI, GUJRAT-396463 PH 102637-304444/304439.

OLPAD

 COMET CAR SALES & SERVICE PVT. LTD. (4006-ZZ-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH :0261 -220066 / 220088.

PADRA

317. AMAR CARS (2205-OC-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. – VADODARA, GUJARAT - 391440 PH :02662-223355/223366.

PALANPUI

 TANU MOTORS (Q801-Q8-01), OPP.DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001
 PH :02742-254477/254499/254000.

319. STARLINE CARS PVT. LTD. (D101-08-08), SURVEY NO.4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH :2742-265665.

PALSANA

320. KATARIA AUTOMOBILES PVT. LTD (4004-ZF-07), BESIDE SAINATH COMPLEX, KADODARA AHMEDABAD ROAD, NH-8, UMBHEL GAM, TALUKA: PALSANA KADODARA, SURAT. -382721

PH:02622-9228004677, 8866001593.

STARLINE CARS (P) LTD (D101-Q9-02),
 CHANASMA HIGHWAY, PATAN - 384265
 PH: 02766-7046046184 & 7046046186.

PORBANDAR

322. ATUL MOTORS (F401-T6-05), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY , PORBANDAR, DIST. PORBANDAR GUJARAT -360577 PH :0286-290002.

PRANTIJ

323. KIRAN MOTORS LIMITED (AAI1-AAI-01), NO.6/P,
OPP. VEGETABLE MARKET, PRANTIJ
HIGHWAY, VILLAGE-KHAMALPUR,
TALUKA-PRANTIJ, DISTT. SABARKANTHA,
GUJARAT - 383205
PH :962401888.

RAJKOT

324. ATUL MOTORS (PVT) LTD (5503-55-01), NEAR BHAKTI NAGAR STATION CIRCLE,TAGORE ROAD, RAJKOT - 360002 PH :0281-2462/781/82.

325. ATUL MOTORS (PVT) LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005 PH :0281-2575513/14.

326. PERFECT AUTO SERVICES (5502-55-01), PERFECT HOUSE, GONDAL ROAD, VANDI, RAJKOT - 360004 PH :0281-360588. 366759.

327. PERFECT AUTO SERVICES (5502-55-04), 150 RING ROAD,OPP, GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005 PH :0281-2576233, 2576234.

328. ATUL MOTORS (PVT) LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003 PH :0281-2704573.

 PERFECT AUTO SERVICES (5502-55-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006 PH :9979861995.

RAJPIPLA

 RAVIRATNA MOTORS PVT. LTD. (9X01-9X-01),
 OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPILE, RAJPIPLA, DIST: NARMADA,
 GUJARAT - 393145
 PH :02640-223508.

RAJULA

 ATUL MOTORS PVT LTD (BAK1-BAK-01), HINDORNA CHOWKDI, JAFRABAD ROAD, RAJULA DISTT. AMRELI (GUJARAT) - 365560 PH :02794-221501.

SANTRAMPUR

332. R B CARS PVT. LTD. (2C01-RY-03), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR, DISTT.-PANCHMAHAL - 389260 PH:02675 -221752.

SAVLI

333. KIRAN MOTORS LTD. (CFD1-CFD-01), SURVEY
NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL
PUMP, BHADRIVA CHOWROJ, SAVLI – TIMBA
ROAD, SAVIL, TALUK – SAVLI, DISTRICT –
VADODARA, GUJARAT. - 391770
PH 19824099195.

SAYAN

334. KIRAN MOTORS LTD. (0001-00-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIA, TALUKA: OLPAD, SAYAN - 394130 PH :9228007037/9712010100.

SURAT

- DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR,NEAR JEEVAN JYOT THEATRE,UDHNA MAIN ROAD,SURAT - 394210 PH :0261-406071/72.
- DHRU MOTORS (4002-40-1B), 207, NEW INDUSTRIAL ESTATE, ROAD NO.-6, UDHNA UDYOG NAGAR, SURAT - 394210 PH :0261-0261-2272118/9978900862.
- KATARIA AUTOMOBILES PVT. LTD (4004-40-04), OPP. VATSALYA BUNGLOWS, NEAR GUJARAT GAS CNG STATION, UDHNA MADGULLA ROAD, VESU, SURAT - 395007 PH :0261-2211005/9228004674.
- KATARIA AUTOMOBILES PVT. LTD (4004-40-05),
 KATARIA ARCADE, OPP. RAJHANS
 CINEMA, DUMAS ROAD, PIPLOD, SURAT
 395007
 PH :0261-3081238, 3081240, 3081251.
- KIRAN MOTORS LIMITED (4001-40-01),
 SURAT-BARDOLI ROAD, DUMBHAL, NEAR PUNA JAKAT NAKA, SURAT - 395010
 PH :0261-9824701590/9712010100.
- KIRAN MOTORS LIMITED (4001-40-02),
 PANDESARA,BAMROLI ROAD,SURAT 395002
 PH:0261-2630361-4.

- COMET CAR SALES & SERVICE PVT. LTD. (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH :0261 -3091234.
- 342. KATARIA AUTOMOBILES LTD. (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT -344310
- PH:0261-2778810/20/30/40.
- COMET CAR SALES & SERVICE PVT. LTD. (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT – SURAT, GUJARAT. - 395004 PH:0261-2480877. 2604877.
- 344. KIRAN MOTORS (P) LTD. (4005-40-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT 395009
- AMAR CARS PVT LTD (4009-40-01), BLOCK NO.116, SURVEY NO.128/1, SURAT-KAMREJ ROAD, VALAK PATIYA, NEAR VALAK NAGAR, TALUKA-KAMREJ, DISTT:SURAT - 395006

PH:0261-8980042799/89800471899.

346. AMAR CARS PVT LTD (4009-40-20), PLOT NO.10&11, SURVEY NO.7. & 9, SONARAS COMPOUN, NEAR DGVCL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH :0267 - 1709026555709026666.

SURENDERNAGAR

 DREAM VEHICLES PVT. LTD. (LC01-LC-01), 261/P, OPP MARKETING YARD,GIDC AREA,WADHWAN CITY, SURENDERNAGAR -363030
 PH:02752-241314 / 651516.

UMRETH

 AMAR CARS PVT. LTD. (CFE1-CFE-01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH, DIST.ANAND, GUJARAT. - 388220 PH : 7567898716.

UN

349. PERFECT AUTO SERVICES (BFD1-BFD-01), SUBVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, YAYAJPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. - 362560
PH :8811147523.

UNJHA

350. TANU MOTORS (Q801-GR-02), OPP. DHANA DAL FACTORY, MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH : 02742-224499.

VADODARA

351. KATARIA AUTOMOBILES PVT. LTD (2204-22-02),
OPPOSITE SHARDA MANDIR HIGH SCHOOL,
VINOBA BHAVE ROAD, SALATWADA,
VADODARA - 390001
PH .08866002482 / 1584.

- 352. AMAR CARS PVT LTD (2203-22-01), GORWA ROAD,VARODARA,GUJARAT, - 390016 PH :0265-2291500, 01, 02.
- KIRAN MOTORS LIMITED (2201-22-01),
 909/4,G.I.D.C.MAKARPURA,VADODARA 390010
 PH:0265-2642212.
- KIRAN MOTORS LIMITED (2201-22-02), PLOT NO.160, SUB-I NUTAN GUJ.INDL.ESTATE, OLD CHHANI ROAD, VADODARA - 390002 PH:0265-2771744. 45.
- 355. AMAR CARS PVT LTD (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH: 0265-2428282.
- KATARIA AUTOMOBILES PVT. LTD (2204-22-01), 984/4,GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH :0265-3091257 / 34.
- AMAR CARS PVT LTD (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH :0265-2488787.
- 358. KIRAN MOTORS LIMITED (2201-22-03), C/O ARBUDA COLD STORAGE, 829 POWER CABLE ROAD, DHARMSININ HOAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH 10265-2771122.

VALSAD

 KATARIA AUTOMOBILES PVT. LTD (0104-2E-06), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020 PH :02632 -233244 / 233245.

VALVADA

360. VITESSE TRADING LIMITED (0503-V1-05), SURVEY NO.137/1 Q 148/V VILLAGE VALVADA,NATIONAL HIGHWAY-9, NEAR KARAMBELI STATION, DISTT.VALSAD(GUJ) -396105 PH 0260-787301.

VANSDA

861. KATARIA AUTOMOBILES PVT. LTD. (Q701-SB-02), JAMNABA PARIK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT — NAVSARI, GUJARAT -396580 PH 10680-223490.

VAPI

362. KATARIA AUTOMOBILES PVT. LTD (0104-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195 PH 1-926.03812401/381260

 KATARIA AUTOMOBILES PVT. LTD (0104-97-09), PLOT NO. 304/2, VILLAGE BAILTHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI, DISTRICT - VALSAD, GUJARAT - 369191 PH - 0260-200820/8866001 591/9827740903.

VERAVAL

364. PERFECT AUTO SERVICES (5502-AH-05), NR. BALIYA HANUMAM, VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265 PH :02876-221122.

VIJAPUR

 STARLINE CARS (P) LTD (D101-V2-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH :02763-220059.

VIRAMGAM

 KIRAN MOTORS LIMITED (AAB1-AAB-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH:8156016222.

VISNAGAR

STARLINE CARS (P) LTD (D101-RW-05),
 VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT. - MEHSANA - 384315
 PH :02765-222977.

VYARA

368. COMET CAR SALES & SERVICE PVT. LTD.
(BIY1-BIY-01), SHOP NO. 11 & 12, BLOCK NO.
175/1/A, RS NO. 113, VYARA-SURAT ROAD,
VYARA, DISTRICT – TAPI, GUJARAT - 394650
PH.02626-221410/11.

WANKANER

369. ATUL MOTORS PVT LIMITED (BAL1-BAL-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621 PH 10288-221556.

HARYANA

AMBALA

EAKANSH WHEELS (1802-18-01), STONE NO.
 126, JAGADARI ROAD, VILLAGE TEPLA,
 AMBALA - 133001
 PH:0171-2822500,600,900.

DEALER WORKSHOP (AS ON 01.04.2017)

- 371. EAKANSH WHEELS (1802-18-03). PLOT NO. 8. BASANT VIHAR, BEHIND SWASTIK MARBLE. NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001 PH:01712542549, 9991802000.
- MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, PH:0171-2521444, 2520155.
- MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA

PH:0171-2520448

ASSANDH

374. KARNAL MOTORS (8906-CS-04), OPP, NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT, KARNAL - 272032 PH:1749-272032.

BAHADURGARH

- 375. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (2G01-2G-01), 1202, M.I.E. PART-B, MAIN ROHTAK ROAD, BAHADURGARH, DIST. JHAJJAR (HARYANA), - 124507 PH:01276268102/01276661111/9812580555.
- 376. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (2G01-2G-02), KHASRA NO. 1681-82, MODERN INDUSTRIAL AREA, PART - B. BAHADURGARH, -124507 PH:9992200429.

BALLABGARH

377. ROYAL MOTORS (9R81-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD PH:0129-4271800.9899242536.2242536

378. EAKANSH WHEELS (NX01-NX-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA -133201

BARWALA

PH:01731-286400

379. MODERN AUTOMOBILES (BSA1-BSA-01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9. 10. OPPOSITE AXIS BANK, VILLAGE BATAPUR. P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118 PH:9416021648.

BERI

380. SIDHI VINAYAK VEHICLES PVT. LTD. (BEV1-BEV-01), PLOT NO. 53/2, NEAR MATA MANDIR, BERI DUJANA ROAD, BERI , DIST. JHAJJAR - 124201 PH:9992200415.

BHIWANI

381. JAGMOHAN MOTORS (X301-X3-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021 PH:01664-9812000364

382. PANDIT AUTOMOBILES PVT. LTD. (BGH1-BGH-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT -YAMUNANAGAR, HARYANA, - 135102 PH:01732-247777, 9812455350, 9812455879.

CHARKHI DADRI

383. JAGMOHAN MOTORS (X301-CT-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI -

PH:9992200363, 9992200362

CHEEKA

384. EAKANSH MOTORS PVT, LTD, (U802-HU-04). MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034 PH:01743222277 / 01743222288.

DADRI-TOE

385. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (BVH1-BVH-01), KHEWAT NO.270, 273 KILA NO.11/2/2 & 14 (8-0), 15/2 (7-16) VILL - DADRI TOE, MAIN BUS STAND JHAJJAR-GURGAON ROAD, TEHSIL - JHAJJAR, DISTT,-JHAJJAR, HARYANA. - 124103 PH:9992200433.

ELLENABAD

386. SHAKTI MOTORS PVT.LTD. (E401-IN-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD

PH:1666-230168, 221953, 9729871902. **FARIDABAD**

- 387. BATRA AUTO COMPANY (5803-58-01), 14/1 MILESTONE, MATHURA ROAD, FARIDABAD, -121003 PH:0124-91-5274591-94.
- 388. BATRA AUTO COMPANY (5803-58-02), PLOT NO. 7. 18/2. MAIN MATHURA ROAD, FARIDABAD -121003 PH:0129-2380907
- TCS AUTOMOBILES (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD, - 121001 PH:0129-4292929
- VIPUL MOTORS LTD. (5801-58-03), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD -121006 PH:0129-4003052, 4286000,24,30.
- VIPUL MOTORS LTD. (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002 PH:0129-4285000,33,66, 286640, 41, 290685.

392. FAIR DEAL CARS PVT. LTD. (5805-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003 PH:9953340624.

FARRUKHNAGAR

393. PLATINUM MOTOCORP LLP (KE01-KE-01). KHEVAT NO. 299. MUSTIL NO.-12. KHASRA NO. -19/3 AND 22/2, VILLAGE - SEHADPUR MOHAMADPUR, TEHSIL - FARRUKHNAGAR, DISTRICT - GURGAON. - 123506 PH:9810181273.9205192661.

FATEHABAD

394. SHAKTI MOTORS PVT.LTD. (2H02-2H-01), NH-10, SIRSA ROAD, FATEHABAD - 125050 PH:01667221799/01667221699/9896032100.

395. JAGMOHAN MOTORS PVT, LTD, (NA03-NA-01). RAILWAY ROAD, GANAUR - 131101 PH:0130-2461500.

GHARAUNDA

396. KARNAL MOTORS (8906-MR-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114 PH:01748-252030.252040.

GOHANA

397. JAGMOHAN MOTORS (CU02-CU-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT -131301

PH:9992200357. GURGAON

- 398 COMPETENT AUTOMOBILES COLLTD. (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004 PH :0124-425200
- 399 PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD. INDUSTRIAL ESTATE, GURGAON - 122006 PH:0124-8912555, 8912000, 8912869, 8912870,
- PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, 122015
- PH:0124-4012555 VIPUL MOTORS LTD. (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001
- PH:0124-4395700/1, 4004019-23, 9811723030. ROHAN MOTORS LTD. (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001 PH:7065574220.
- 403. VIPUL MOTORS LTD. (5801-95-04), PLOT NO.5/22/1, SARHAUL VILLAGE, SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102

- 404. PREM MOTORS PVT. LTD. (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON -
- PH:7065003410, 7065000000. PREM MOTORS PVT. LTD. (9512-95-01), PLOT NO. 3,IDC, OPPOSITE SECTOR-14, GURGAON

PH:7065003377, 7065003388.

- PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA, - 122001 PH:0124-9810047332, 9810052514.
- RANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON - 122001
- RANA MOTORS PVT LTD (9509-95-03), QILA NO. 8/2, MUSTAKIL NO. 25, SECTOR 17-18, DIVIDING ROAD, GURGAON. - 122001 PH:0124-2340140.

HANSI

409. JAGMOHAN MOTORS (GT02-GT-01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI - 124001 PH:9992200383.

410. HISSAR AUTOMOBILES (7601-76-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA -125001

PH:01662-76310.76021

- 411. MODERN AUTOMOBILES (7602-76-01), OPP. VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005 PH:01662-20000.21000.
- 412 MODERN ALITOMORILES (7602-76-02) OPP BBMB, HISSAR DELHI ROAD, HISSAR - 125001 PH :9354511110
- 413. UNIQUE MOTORS PVT LTD (7603-76-01), OPP BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD,HISSAR (HARYANA) - 125006 PH:8818055538.

414. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (0B01-0B-01), NEAR GOVT, POLYTECHNIC. BAHADURGARH ROAD, JHAJJAR - 124507 PH:01251-271115/271119.

415. EAKANSH MOTORS PVT. LTD. (U802-2K-06), PLOT NO. 1890/29, NEAR TRUCK UNION OFFICE, JIND-ROHTAK ROAD, JIND, HARYANA -PH:01681-247666.

JULANA

 EAKANSH MOTORS PVT. LTD. (MA01-MA-01), JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101 PH: 8395906111.

TAITMAL

EAKANSH MOTORS PVT. LTD. (U802-U8-01),
 AMBALA ROAD, NH-65, KAITHAL - 136027
 PH:01746-225959, 229100, 309330.

KALKA

418. MODERN AUTOMOBILES (EG02-EG-01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302 PH:0173-224999/220555.

KARNAL

- KARNAL MOTORS (8906-89-01), 71/3
 MILESTONE , G.T.ROAD, KARNAL 132001
 PH: 0184-255555, 274387.
- 420. KARNAL MOTORS (8906-89-02), OPP. BUS STAND, AMBALA CHANDIGARH HIGHWAY, KARNAL - 132001 PH :0184-2274287.
- MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL -132001

PH:0184-2272503. KHARKHODA

422. JAGMOHAN MOTORS LTD. (BU01-BU-01), NEAR KANYA GURUKUL MAHAVIDYALYA, DELHI ROAD, NEAR UNION BANK, KHARKHODA (HARYANA) - 131402 PH.0130-2584111.

KOSLI

DINCO 4 WHEELS LLP (CAN1-CAN-01),
 OPPOSITE RAJIV GANDHI STADIUM, TEHSIL
 ROAD KOSLI, DISTRICT – REWARI, HARYANA
 123302
 PH.7082100202.

KUNDLI

 JAGMOHAN MOTORS (GU02-GU-01), OPP. TDI OFFICE, DELHI KUNDALI BORDER, GT KARNAL ROAD SONEPAT - 131001 PH :0130-8059900535.

KURUKSHETR

425. KARNAL MOTORS (8906-U6-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA PH:01744-232827.

MADLAUDA

426. HARISONS AUTOMOBILES (CFK1-CFK-01), ASANDH ROAD, VILLAGE - MADLAUDA, TEHSIL -MADLAUDA, DISTRICT – PANIPAT. - 132113 PH :0180-2667788.

MANDI DABWALI

9896023577.

SHAKTI MOTORS PVT.LTD. (E401-KU-02),
 SANGARIA ROAD, DABWALI, DISTT.-SIRSA 125104
 PH: 01668-229988,229966

MANESAR

428. PLATINUM MOTOCORP LLP (2L04-2L-01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052 PH : 0124-2656500.

MEHAN

429. JAGMOHAN MOTORS (A601-NZ-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101 PH :9992100310.

MURTHAL

430. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIIDC, MURTHAL PH:0130-2482230.

NARAINGARH

 EAKANSH WHEELS (1802-CV-02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203 PH :1734-285500.

NARWANA

 EAKANSH MOTORS PVT. LTD. (U802-CW-03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116 PH :01684-9813583100.

PALWAL

 ROHAN MOTORS LTD. (EE01-EE-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101 PH:1275-304100.

PANCHKULA

- CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA PH:0172-2592310, 2594310, 5064336.
- MODERN AUTOMOBILES (0702-K3-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113 PH : 0172-2594200.
- AUTOPACE NETWORK PVT. LTD (0705-K3-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113 PH:9878427062.

PANIPAT

 VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 PH:180-4001490.

- HARISONS AUTOMOBILES (D301-D3-01),
 G.T.ROAD , PANIPATHARYANA 132103
 PH:01742-67292, 67225, 67782.
- 439. HARISONS AUTOMOBILES (D301-D3-03), NEAR JATAL ROAD, OLD CANAL, PANIPAT - 132103 PH:01802688088, 01804091801.
- HARISONS AUTOMOBILES (D301-D3-04), PLOT NO.23, SECTOR-25, PHASE-1, PART-1, PANIPAT (HARYANA). - 132103
 PH.:0180-2667799.2667788.

PATAUDI

441. PLATINUM MOTOCORP LLP (BY03-BY-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503 PH-0124-2872100

PEHOWA

 KARNAL MOTORS (8906-2M-06), NEAR SHARMA SERVICE STATION, KURUKSHETRA ROAD, PEHOWA - 136128 PH :01741220911 9996038881.

PUNDRI

443. EAKANSH MOTORS PVT. LTD. (BFF1-BFF-01), KILA NO. 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026 PH :8395906111.

RADAUR

444. PANDIT AUTOMOBILES PVT.LTD. (D201-EN-02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA -135001 PH-01732-283165 9812455884

REWARI

 DINCO 4 WHEELS LLP (U102-U1-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401 PH :1274-261347.

ROHTAK

- 446. JAGMOHAN MOTORS (A601-A6-01), SONEPAT ROAD, ROHTAK - 124001 PH:01262-55002-5.
- JAGMOHAN MOTORS (A601-A6-03), NEAR SUKHPURA CHOWK, DELHI BYEPASS ROAD, ROHTAK, - 124001 PH:9992200385.

SAFFIDON

448. EAKANSH MOTORS PVT. LTD. (U802-JU-05), NEAR BRSK SCHOOL, OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT-JIND - 126112 PH :9896155345.

SAHA

449. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-

PH:0171-2822669, 9896402469.

SALAHAWAS

450. SIDHI VINAYAK VEHICLES PRIVATE LIMITED
(BEQ1-BEQ-01), KHATA NO. 550, KHASRA NO.
62172(4-4) 18(2(4-9) 19/11(3-1), JHAJJAR-KOSLI
ROAD (VIA MATANHEL), NEAR BDPO OFFICE
VPO & TEHSIL - SALAHWANS, DISTRICT –
JHAJJAR, HARYANA - 124146
PH - 9467165111

SAMALKHA

 HARISONS AUTOMOBILES (D301-LY-02), INDUSTRIAL AREA, GT ROAD, SAMALKHA, DISTT. PANIPAT, HARYANA - 132101 PH -9607000122

SAMPLA

452. JAGMOHAN MOTORS PVT. LTD. (NY01-NY-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501 PH -9812000351

SHAHABAD

453. KARNAL MOTORS PVT. LTD. (CCR1-CCR-01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST.-KURUKSHETRA. - 136135 PH.9996206000.

SIRSA

SHAKTI MOTORS PVT.LTD. (E401-E4-01),
 DABBALI RD., SIRSA, HARYANA - 125055
 PH:01666-30168.

SOHNA

455. PASCO AUTOMOBILES (9506-KZ-03), DAMDAMA MORE, GURGAON -SOHNA ROAD, SOHNA, HARYANA, - 122103 PH :0124-4952001.

SONEPAT

456. JAGMOHAN MOTORS (J501-J5-02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001 PH:9812615000.

SONIPAT 457. JAGM

457. JAGMOHAN MOTORS (J501-J5-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001 PH:01264-230114, 236106-07.

TAURU

458. PASCO AUTOMOBILES (BIV1-BIV-01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA. - 122015 PH :8683000902. 9873001497.

TOHANA

 SHAKTI MOTORS PVT.LTD. (XP01-XP-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120
 PH .01692-220099.220199.

TOSHAM

 JAGMOHAN MOTORS (0Y01-0Y-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040 PH:01253-8059900566.

YAMUNANAGAR

- HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA PH: 1732-261937
- 462. PANDIT AUTOMOBILES PVT.LTD. (D201-D2-01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001
- PH:01732-30099.
 463. PANDIT AUTOMOBILES PVT.LTD. (D201-D2-03),
 PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD,
 YAMUNA NAGAR (HARYANA) 135001
 PH:9996426004

HIMACHAL PRADESH

BAIJNATH

464. KANGRA VEHICLEADES (BBC1-BBC-01), TASHI JONG, PAPROLA-BALINATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BALINATH, DISTT. KANGRA - 176115 PH -01892-251379.

BANIKHET

KANGRA VEHICLEADES PVT. LTD.
 (BWN1-BWN-01), KHASRA NO.709, KHATA
 KHATOONI NO.23, BANIKHET, THE-DALHOUSIE,
 DISTT. CHAMBA - 176303
 PH. 01899-254106, 232036, 9418048803.

BILASPUR

466. COMPETENT AUTOMOBILES CO. LTD. (6Y01-6Y-01), KHEWAT NO. 88 KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. – CHANDPUR, TEHSIL – SADAR, DIST. BILASPUR, HIMACHAL PRADESH. - 174001 PH. 01978-7807800330 / 7807800440.

CHAMBA

- KANGRA VEHICLEADES (D902-JF-03), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310 PH :01899222086 , 9418059252.
 KANGRA VEHICLEADES PVT. LTD. (D902-JF-05),
- KHASRA NO. 88/96,1 & KHASRA NO.628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310 PH :9988717437.

DEHRA

469. KANGRA VEHICLEADES (D902-HT-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101 PH :01970-234477.

QAQQAL

 KANGRA VEHICLEADES (BBV1-BBV-01), NATIONAL HIGHWAY -20, ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA, HIMACHAL PRADESH - 176209 PH :9857645440.

HAMIRPUR

 COMPETENT AUTOMOBILES CO LTD (W901-W9-01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401 PH :01972-256281-84.

JASSUR

472. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH PH :01893-226555.

JOGINDER NAGAR

 COMPETENT AUTOMOBILES CO. LTD. (BB01-BB0-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015 PH :1692-9418263465.

KULLU

474. COMPETENT AUTOMOBILES (2Q01-2Q-01),
OPPOSITE S.S.B. TRAINING CENTRE, SHAMSHI,
KULLU - 175126

PH:1902-260665, 9625797817.

475. GOYAL MOTORS PVT. LTD. (BBX1-BBX-01), KHATA NO. – 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSHIL – ARKI, DISTRICT – SOLAN, HIMACHAL PRADESH - 173207 PH :9818138772.

MANALI

KUNIHAR

476. COMPETENT AUTOMOBILES CO. LTD.
(GKU1-BKU-01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131 PH:1902-9418387465.

MARDI

 COMPETENT AUTOMOBILES CO. LTD. (B301-B3-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI 124501
 PH :01905-23865.

NADAUN

478. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041 PH.01972-232865.

NAGROTA

 KANGRA VEHICLEADES (D902-D9-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047 PH:01892-251379. 251387.

NAGROTA BAGWAN

480. KANGRA VEHICLEADES PVT. LTD. (D902-D9-06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047 PH .01892-251379. 251387.

NALAGARH

 GOYAL MOTORS (IB02-IB-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101 PH :9418069672.

NURPUR

 KANGRA VEHICLEADES (D902-JG-04), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201 PH :01893-226799. 226333.

PALAMPUR

483. KANGRA VEHICLEADES (2T01-2T-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061 PH:1894-236227.

PAONTA SAHIB

484. GOYAL MOTORS PVT. LTD. (A901-8G-02), OPP BIBLIEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR, NH-72, PAONTA SAHIB -173025 PH :9418061728.

RAJQARH

485. GOYAL MOTORS PVT. LTD. (BLX1-BLX-01), KHATA NO. 517/505, 478/3, KHASRA NO. – 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL – RAJGARH, DISTRICT – SIRMAUR, HIMACHAL PRADESH - 173101 PH :9818138772.

RAMPUR BUSHAHR

486. GOYAL MOTORS PVT. LTD. (BYF1-BYF-01).
KHASRA NO. 824/825, MINN NO. 155/396,
163/411, NAGLI, ROHRU ROAD, RAMPUR,
TEHSIL – RAMPUR, DISTRICT – SHIMLA. 172001
PH -94183245752.

ROHRU

487. GOYAL MOTORS (JZ01-JZ-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA -171207 PH :9418018472.

SHIML

488. GOYAL MOTORS PVT. LTD. (A901-A9-01), TARADEVI, SHIMLA, (H.P.) - 171010 PH:0177-231872.

SOLAN

489. GOYAL MOTORS PVT. LTD. (7D01-7D-01), DEON GHAT, SOLAN - 173211 PH:01792-220472.

UNA

490. COMPETENT AUTOMOBILES (QD01-QD-01), VILLAGE RAINSARY,P.O JHALERA,TEHSIL & DISTRICT:UNA - 174303 PH:1972-256281-84.

JAMMU & KASHMIR

ANANTNAG

491. PEAKS AUTO PVT. LTD. (2Y01-2Y-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165 PH : 1932-228165.

BANDIPORA

 JAMKASH VEHICLEADES (KASHMIR) PVT. LTD. (1205-OA-04), AJAR BANDIPORA, J&K - 193502 PH:01957-225185.

BARAMULA

 JAMKASH VEHICLEADS(KASHMIR)PVT. LTD. (8C01-8C-01), VILLAGE SANGRAMA,WAGAROO, BARAMULA - 193101 PH :0194-2138951.

DODA

494. J&K VEHICLEADES (2Z01-2Z-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202 PH :1996233146.

GANDERBAI

 JAMKASH VEHICLEADES (KASHMIR) PVT. LTD (ZA01-ZA-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201 PH :0194-2416156.

JAMMU

- 496. JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015
- PH:0191-466681, 464304, 308.
 497. JAMKASH VEHICLEADES PVT LTD (3306-33-02),
 NEAR GENERAL BUS STAND, OPP. PHE
 OFFICE, B.C. ROAD, JAMMU 180001
 PH:0191-2576235, 2543935, 2520323.

- JAMKASH VEHICLEADES PVT LTD (3306-33-04),
 SUNJWAN, DISTT. JAMMU 180011
 PH:0191-2468504.
- PEAKS AUTO JAMMU PVT. LTD (3310-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010 PH :0191-2494813.
- JAMMU MOTORS PVT. LTD (3308-33-01), 6, AKHNOOR ROAD, JAMMU. - 180001
 PH:0191-2504746, 2552977, 2505183.
- JAMMU MOTORS PVT. LTD (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002 PH -0191-2504746, 2552977, 2505183.

KATHUA

KULGAM

 JAMMU MOTORS PVT. LTD. (3802-38-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101 PH :7837613036.

 PEAKS AUTO PVT. LTD. (OY01-OY-01), NEAR GRID STATION, MAIN ROAD, KULGAM - 191202 PH: 1931-260030.

KUPWARA

 JAMKASH VEHICLEADS(KASHMIR)PVT. LTD. (1205-AX-03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223 PH :01955-253322.

LEH

 DRUK AUTOZONE (9S01-9S-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH -194101

PH:01982-250005 POONCH

506. JAMKASH VEHICLEADES PVT LTD (AAW1-AAW-01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121

PULWAMA

 PEAKS AUTO PVT. LTD. (1204-MU-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301 PH:01933-240226.

RAJOU

 JAMKASH VEHICLEADES PVT LTD (3306-KS-06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI -185131
 PH :01962-264973.

RS PURA

 JAMKASH VEHICLEADES PVT LTD (3306-JN-03), GAGAIN MORTH, R S PURA, JAMMU, - 181102 PH:01923-251951.

SHOPIAN

 PEAKS AUTO PVT. LTD. (AAA1-AAA-01), AGLAR SOFANAMAN, SHOPIAN - 192303 PH:0194-24666067.

SIDHRA

511. JAMKASH VEHICLEADES PVT LTD (CDL1-CDL-01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMJ - 180019

PH:0191-2662024, 2662025, 2576235. SRINAGAR

- 512. RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR PH :0194:2435909
- HIGHLAND AUTOMOBILES PVT.LTD (1202-12-01), SONWAR, SRINAGAR - 190001 PH:0194-452579, 479928.
- JAMKASH VEHICLEADS (KASHMIR) PVT. LTD. (1205-12-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015 PH -01942-2435778
- PEAKS AUTO PVT. LTD. (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101 PH :0194-2130261.
- JAMKASH VEHICLEADS (KASHMIR) PVT. LTD. (1205-12-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017 PH: 9419003372.

SUNDERBANI

517. PEAKS AUTO JAMMU PVT. LTD (AAM2-AAM-01), MOUZA THANDA PANI, TEH. SUNDERBANI -185153 PH. 1960,233119

SURANKOTE

518. PEAKS AUTO JAMMU PVT. LTD (TY02-TY-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101 PH:9018331442.

LIDHAMPUR

 J&K VEHICLEADES PVT. LTD. (D801-D8-01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101 PH :01992-76266.

JAMMU AND KASHMIR

AKHNOOR

 JAMMU MOTORS (2X02-2X-01), MAIN ROAD DASKAL, TEHSIL – AKHNOOR, DISTRICT -JAMMU - 181201 PH:1924-252021, 9419109162.

HANDWARA

 JAMKASH VEHICLEADES (BYA1-BYA-01),
 KHEWAT NO-31, KHATTA NO-298, SURVEY NO-3764/1816, MOZA BRARIPORA, TEH-HANDWARA, DIST- KUPWARA, J&K - 193221 PH -9419074012.

JAMMU

522. PEAKS AUTO JAMMU PVT. LTD. (3310-33-02), KHASRA NO. 425 & 426, KHATA NO. 425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001 PH :0191-2484813, 9596620057.

JHARKHAND

BOKARO

- 523. HINDUSTAN AUTO AGENCY (B501-B5-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004
- PH:06542-233690/9263631315.

 624. HINDUSTAN AUTO AGENCY (B501-B5-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) 827004
 PH:9204796107.

DALTONGANJ

525. PREMSONS MOTORS UDYOG PVT LTD (5103-MP-02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101 PH :06562-9366768344.

DEOGHAR

526. RELIABLE INDUSTRIES (5202-KR-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, - 814112
PH 106432-9431125332

DHANBAD

- RELIABLE INDUSTRIES (5202-52-01), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001 PH: 0326-301507, 301508,9431125332.
- RELIABLE INDUSTRIES (5202-52-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIDHELA, DHANBAD - 828127 PH:326-8986749072.
- RELIABLE INDUSTRIES (5202-52-06), SUGIADIH, HIRAK ROAD, SARAIDHELA, DHANBAD, JHARKHAND. - 828127
 PH:9835830202

DUMKA

 RELIABLE INDUSTRIES (L701-L7-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101 PH: 9708555924.

GHATSHILA

 PEBCO MOTORS LTD. (AIA1-AIA-01), PLOT NO.
 KHASRA NO.128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK,GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303
 PH :06585-9308433388.

airidih

 RELIABLE INDUSTRIES (5202-3D-04), MOHANPUR, PACHAMBA ROAD, GIRIDIH. -815301
 PH :06532-222969/ 9934205123.

GODDA

533. RELIABLE INDUSTRIES (5202-EJ-05), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133 PH '9431121479

QUMLA

534. PREMSONS MOTOR UDYOG PVT. LTD. (5103-20-04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207 PH:06524-221117.

HAZARIBAGH

- 535. HINDUSTAN AUTO AGENCY (Y901-Y9-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. -825301
 - PH:9263631324.

 HINDUSTAN AUTO AGENCY (Y901-Y9-02), PLOT NO. 233 AND 234, MORANGI, THANA -MUFFASSIL NO. 257, HAZARIBAGH, JHARKHAND. - 825301
 PH 9263631327, 9031098015.

JAMSHEDPUR

 MOTOR WORLD (3102-31-01), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR -831012

PH:0657-2360346, 2360347.

- PEBCO MOTORS LTD. (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH :0657-409106, 107.
- PEBCO MOTORS LTD. (3101-31-02), 16
 BALICHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHEDPUR - 831011
 PH :9308433388.

JAMTARA

 RELIABLE INDUSTRIES (BOX1-BOX-01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351 PH :9835814404.

KHELARI

 SUDHA BUSINESSS ENTERPRISES PVT. LTD. (CF01-CF0-01), PLOT 113, MOUZA- BUKBUKA BESIDE PAHADI MANDIR, KHELARI, RANCHI-R99205

PH:0651-6458222, 9534199997.

RAMGARH

542. HINDUSTAN AUTO AGENCY (AV01-AV-01), MARAR, RANCHI ROAD (NH-33), RAMGARH -829122 PH :9263631320.

RANCHI

- PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA, RANCHI.
 PH: 0651-2544661, 2542650.
- 544. PREMSONS MOTORS UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. -834008 PH :0651-2231686, 9304807349.
- 545. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE,BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010 PH :0651-3210400. 3190400/8304807354.
- 546. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003 PH :0651-6560180.
- SUDHA BUSINESS ENTERPRISES PVT. LTD. (5107-51-02), PLOT NO. 74, OPPOSITE OTC GROUND, HEHAL, RATU ROAD, RANCHI, JHARKHAND - 834005 PH :9534199997.
- SUDHA BUSINESS ENTERPRISES PVT. LTD. (5107-51-03), PLOT NO. 39, NEAR BOOTY MORE, RANCHI-RAMGARH ROAD, RANCHI. - 835217 PH -9834199907

KARAIKAL

KARAIKAL

549. SHENBAKA CARS FVT. LTD. (CCF1-CCF-01), R. S. NO. 173(3PT, T. S. NO. 915, WARD. L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAYY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL. - 609602 PH 14368-227600112.

KARNATAKA

ANEKAL

 PRATHAM MOTORS (0205-FA-04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106 PH : 080-9343222764.

ANKOLA

551. BHARATH AUTO CARS PVT LTD (FC02-FC-01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT -581314

ATHANI

PH:08388-231330.

552. SHANTESHA MOTORS (BWA1-BWA-01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304 PH :8289-8884472587. 9538715071.

ATHRADI

553. ABHARAN MOTORS (G601-UK-04), HERABETTU ROAD ATHARDI UDUPI - 576107 PH :0820-6452061/2/3/4.

ATTIBELE

554. SURAKSHAA CAR CARE PVT. LTD.

(BMM1-BMM-01), SURVEY NO. 227/8, SARJAPUR
MAIN ROAD, INDIABELE VILLAGE, OPP. TO

GOLDEN LIBERTY, ATTIBELE P.O.,

BANGALORE. - 562107
PH - 44269656965

BAGALKOT

555. VIJAY MOTOWINGS (ZL01-ZL-01), 180/4-2,BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103 PH : 08354-2001 193/94.

BANGALORE

- BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-01), 60/2, MAHADEVPURA, WHITE FIELD ROAD, BANGALORE - 560048 PH : 080-30583361/2/3.
- BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078 PH : 080-30482295/6/3/1.
- BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-03), NO.71, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERGHATTA RD., BANGALORE -560076

PH:080-30280511/12.

- BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE -560038 PH :080-30584638/41/42, 9845026252.
- BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-01), NO. - 60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064 PH :080-30088801-09.

- GARUDA AUTOCRAFT PVT LTD (0212-02-01), SURVEY NO. 13, 11TH KM., KANAKPURA ROAD, BANGALORE - 560062
 PH 1980-28392500(2)3
- GARUDA AUTOCRAFT PVT LTD (0212-02-02), 119/1, 11TH CROSS,MALLESHWARAM,BANGALORE, -560003
- PH:080-23460136/140/142.
 563. KALYANI MOTORS (P) LTD (0211-02-01),
 MYSORE ROAD,PANTHARAPALYA,KENGRI
 HOBLI,BANGALORE 583201
 PH:080-286068004/05/06/07.
- 564. MANDOVI MOTORS PVT LTD (0201-02-01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027
- PH:080-22233763.
- MANDOVI MOTORS PVT LTD (0201-02-05), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN. VIJAYANAGAR,BANGALORE - 560079 PH :080-23400685.
- 666. MANDOVI MOTORS PVT LTD (0201-02-07), 17/A-283 IND SUBURB.IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022 PH:080-23374130.
- 567. MANDOVI MOTORS PVT LTD (0201-02-08), NO. 70 SARAKKI INDUSTRIAL LAYOUT, J.P. NAGAR, 3RD PHASE, BANGALORE - 560078 PH:080-26589945 (26584363.
- 568. MANDOVI MOTORS PVT LTD (0201-02-0C), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044 PH 1980-23158777723159777
- 569. MANDOVI MOTORS PVT LTD (0201-02-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043 PH :080-25445560/61.
- PRATHAM MOTORS (0205-02-01), 16, BALLANDUR, SARJAPUR RING ROAD, BANGALORE - 560037
 PH :080-41262929.
- 571. PRATHAM MOTORS (0205-02-02), STHANIKAM'S ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE 560010 PH -090-30141800
- PRATHAM MOTORS (0205-02-03), NO. 319 -324
 QUEENS ROAD CROSS, BANGALORE. 560001
 PH:080-30741700.
- 573. RNS MOTORS (7301-02-03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022 PH : 080-23474354-58.

- 574. RNS MOTORS (7301-02-04), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068 PH: 080-24115901
- 575. RNS MOTORS (7301-02-06), TUMKUR ROAD, NH-4, YESHWANTPUR, BANGALORE - 560022 PH :0836-43479803-15 /14.
 576. SAGAR AUTOMOBILES (0203-02-01), 39/2
- BANNERGHATTA ROAD,BYRASANDRA,BANGALORE - 560029 PH :080-30426063/2.
- 577. SAGAR AUTOMOBILES (0203-02-02), 28/1 KANAKPURA ROAD,BASANAVAGUDI,BANGALORE - 560004
- PH:080-41204666.

 578. SURAKSHAA CAR CARE PVT LTD (0280-02-01),
 30/3 K AGRAHARA, HOSUR MAIN ROAD,
 ELECTRONIC CITY. BANGALORE
- PH:080-28522222/3/4.

 579. MANDOVI MOTORS PVT LTD (0201-02-9B), PLOT NO.-257/1-13, BANNERGHATTA ROAD, N.S.
- PALYA, BANGALORE 560076 PH -080-26681223,26589945. 580. KALYANI MOTORS (KR PURAM) (0213-02-02), SY. NO.:58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE - 560049
- PH:080-33235000.

 581. KALYANI MOTORS PVT. LTD. (0213-02-03),
 NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO
 BROOKE FIELD HOSPITAL, BROOKFIELD,
 BENGALURU. 574239
- PH:080-40419000.

 582. SURAKSHAA CAR CARE PVT. LTD. (0280-02-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE 560068
- KALYANI MOTORS PVT LTD (0213-02-04),
 250/1, BILEKAHALLI, BANNERGHATTA ROAD,
 BENGALURUE 560076
 PH 1801873041911

PH -080-25732018

- 584. SURAKSHAA CAR CARE PVT. LTD. (0280-02-03), NO.64, POTHALAPPA GARDEN, LASHKAR BUILDING, HOSUR ROAD, ADUGODI, BANGALORE. - 560030 PH :08153-290299.
- 585. BIMAL AUTO AGENCY (0218-02-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058 PH -945237213
- PRATHAM MOTORS (0205-02-05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034 PH:080-30712020.

- 587. RNS MOTORS LIMITED (7301-02-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158 PH :080-43110200.
- GARUDA AUTOCRAFT PVT LTD (0212-02-03), 10/1, HEBBAL, AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024 PH: 080-23621332.
- BIMAL AUTO AGENCY INDIA PVT. LTD. (0286-02-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE -560066 PH .080-30693069.
- 590. SURAKSHAA CAR CARE PVT. LTD. (0280-02-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034 PH.080-2552909(10)01.
- KALYANI MOTORS PVT LTD. (0287-02-01), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056 PH :080-30036333.
- 592. MANDOVI MOTORS PVT LTD (0201-02-0G), NO. 42/2, CENTRAL STREET, NEXT TO SANGEETH THEATRE, SHIVAJI NAGAR, BANGALORE, KARNATAKA - 560003 PH 9731407344.
- 593. BIMAL AUTO AGENCY INDIA PVT. LTD.
 (0216-02-06), PLOT NO. 82, DODDA BANASWADI
 MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT
 TO AIYAPPA TEMPLE, BANASWADI,
 BANGALORE, KARNATAKA 560033
 PH :080-41143168.
- MANDOVI MOTORS PVT LTD (0201-02-0H), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093
 PH 1980-25241144/77
- 595. KALYANI MOTORS PVT. LTD. (0213-02-05), PLOT NO. 74/5, HORMAYU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. -560043 PH. 1980-9900599946.
- 596. KATARIA AUTOMOBILES PVT. LTD. (0294-02-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST – AADUGODI, BANGALORE. -560030 PH.080-9998086020.
- 597. MANDOVI MOTORS PVT. LTD. (0201-02-01), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SININ/ASPURA, KENGERI HOBLLI, UTTARAHALLI, BANGALORE - 560060 PH: 9945235516.

- 598. MANDOVI MOTORS PVT LTD (0201-02-0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA. - 560102 PH:080-2574776476/62/63/64.
- 599. RNS MOTORS (7301-02-03), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH:080-23534286.
- 600. VARUN MOTORS PVT. LTD. (0292-02-01), HNO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE. 560022 PH :080-23085555, 9985344244.
- 801. VARUN MOTORS PVT. LTD. (0292-02-02), BEARING NO. 271 8 2772, SURVEY NO. 41/3 & 427 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073 DBJ. 17390967200.

BANGARPET

602. SURAKSHA CAR CARE PVT. LTD. (OR04-OR-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH : 082153-290299.

BANTWAL

 MANDOVI MOTORS PVT LTD (TR01-TR-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231 PH :080-2410123.

BELGAUM

- 604. SHANTESHA MOTOR (P) LTD (E801-E8-01), MUJAWAR COMPOUND,NEHRU NAGAR,BELGAUM, - 590010 PH : 0831-2473308/4204523/2476162.
- 605. SHANTESHA MOTOR (P) LTD (E801-E8-03), PLOT NO. 5,AZAMNAGAR,BELGAUM, - 590006 PH -0821-2470871
- 606. SHANTESHA MOTOR (P) LTD (E801-E8-04), PLOT NO. 8, SURVEY NO. 251/51, HAVLOCK ROAD CAMP, BELGAUM - 290010 PH : 0831-2425001/2.

BELLARY

- 607. K P F PVT. LTD (G201-G2-01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101 PH: 08392-237666/685.
- K P F PVT. LTD (G201-G2-03), 1ST CROSS, OPP. WOMAN'S COLLEGE, BESIDE CS MULTI SPECIALITY HOSPITAL, BELLARY. - 583103 PH :08392-258900.

BELTHANGADY

609. BHARATH AUTO CARS PVT LTD (4503-HM-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH:08256-224130.

RHATKAL

610. BHARATH AUTO CARS PVT LTD (CEF1-CEF-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320 PH :8382-9448979530.

BIDAR

 LAHOTI MOTORS PVT. LTD. (EX01-EX-01), SI 50/51, PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402 PH : 08482-232975.

BIJAPUR

612. RNS MOTORS (7301-T7-01), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109 PH :08352-242821.

BYNDOOR

613. ABHARAN MOTORS PVT. LTD. (BUH1-BUH-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214 PH -08254-7899751777.

CHAMRAJ NAGAR

614. MANDOVI MOTORS PVT. LTD. (0E01-0E-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313 PH :08226-222857/858.

CHANNAGIRI

615. SHRUTI MOTORS (BUQ1-BUQ-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213 PH :08189-7899934143.

CHANNAPATNA

616. KALYANI MOTORS PVT LTD (BSX1-BSX-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160 PH -080-28078999.

CHANNARAYAPATNA

617. VENKAT MOTORS (HC01-HC-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116 PH :08172 - 256622, 09844377477.

CHICKBALLAPUR

618. BIMAL AUTO AGENCY INDIA PVT. LTD.
(KJ02-KJ-01), NO. 169/1, AMMANI
KANDAVARAKERE VILLAGE, KASABA HOBLI,
CHIKBALLAPURA DISTRICT - 562101
PH :08156-300500/02/1.

CHIKMANGALORE

619. SHRUTI MOTORS (B701-3F-02), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102 PH :08262-221183:221184.

CHIKODI

620. SHANTESHA MOTORS (E801-ZB-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201 PH :08338-273120,272744.

CHINTAMANI

621. PRATHAM MOTORS PVT. LTD (0205-BQ-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASPURA MAIN ROAD, CHINTAMANI KARNATAKA - 563125 PH 17899761301.

CHITRADURGA

622. SAKETH AUTOMOBILES (AL01-AL-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130 PH: 08132-221414.

DAVANGERE

623. SHRUTI MOTORS (S101-S1-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004 PH :08192-9663377655.

DEVANAHALLI

624. BIMAL AUTO AGENCY (WH01-WH-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110 PH:080-27681778.

DHARWAD

625. REVANKAR MOTORS PVT. LTD. (BIX1-BIX-01), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001 PH. 0836-2444666.

GADAG

626. RNS MOTORS (7301-RK-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG-582103

PH:08372-230072,230076. **GANGAWATHI**

627. MUNEER CARS (N701-KA-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, -583227

PH:08533-270055. **GAURIBIDANUR**

628. MANDOVI MOTORS PVT LTD (BUY1-BUY-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210 PH 9945235531.

GOKAN

 SHANTESHA MOTORS PVT LTD (IR01-IR-01), RS NO. 106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307 PH : 08332-226006.

GONIKOPPAL

MANDOVI MOTORS PVT LTD (2501-U3-07),
 KAIKERY VILLAGE, GONIKOPPAL, - 571213
 PH: 08274-279801.

GULBARG

631. LAHOTI MOTORS (E902-E9-01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104 PH:08472-258142.

HAGARIBOMMANAHALLI

632. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT. LTD.) (BUX1-BUX-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.3, HAGARIBOMANHALLI PANCHAYAT, BELLARY DISTRICT. - 583212 PH :03394-266227.

HASSAN

633. VENKAT MOTORS (C802-C8-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201 PH :08172-243405/404.

HAVER

 REVANKAR MOTORS PVT LTD (BBM1-BBM-01), NEAR TMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110 PH :08375-235900.

HOSKOTE

635. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-SM-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114 PH :080-8111398104.

HOSPET

636. MUNEER CARS (N701-N7-01), BELLARY ROAD, SANKLAPUR, HOSPET, - 583203 PH: 08394-266226.

HUBLI

_

637. RNS MOTORS (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025 PH :0836-2271825/2271239.

638. RNS MOTORS (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030 PH :0836-2236051/52.

639. REVANKAR MOTORS PVT LTD (7303-73-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029

KADARA

640. MANDOVI MOTORS PVT LTD (BYE1-BYE-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA -574221 PH :08251-260351.

KADUR

641. SHRUTI MOTORS (BQS1-BQS-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548

KANAKAPURA

642. KALYANI MOTORS PYT. LTD. (BXY1-BXY-01), SURVEY NO. 447/1B, KASABA HOBIL, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. -562117 PH:9900050130.

KARKALA

643. ABHARAN MOTORS (G601-HY-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104 PH: 08258-233095:233085.

KARWAF

 BHARATH AUTO CARS PVT LTD (8J01-8J-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. -581301 PH :08382-265530.

KENGER

645. KALYANI MOTORS (P) LTD (0211-HP-03), RV COLLEGE,KENGERI,BANGALORE.,,, - 560059 PH:080-28607057.

KOLAR

646. MANDOVI MOTORS PVT LTD (0201-QU-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101 PH.8152-210077.

KOPPAL

647. KPF PVT LTD (ER01-ER-01), SL 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238 PH :08539-225500.

KUMTA

648. BHARATH AUTO CARS PVT LTD (AFA2-AFA-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) -581334 PH :08386-223330.

KUNDAPUR

649. ABHARAN MOTORS (G601-CY-02), NH-17, THAKKATTE, KUNDAPURA - 272877

KUNIGAL

650. SAKETH AUTOMOBILES (VQ01-VQ-01), NEAR KRS AGRAHARA, BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130 PH :08132-221414.

KUSHAL NAGAR

651. MANDOVI MOTORS (VN01-VN-01), SY NO:88,MADAPATANA, KUSHAL NAGAR, SOMVARPUR, NORTH KODAGU, KARNATAKA - 571234 PH:08276-272365.273365.

LINGASUGUR

652. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PYT. LTD.) (BOO1-BOQ-01), PLOT NO. 11, BASAMMA COMPLEX, PAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA -584122 PH :8532-251555.

MADIKERI

653. FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-QX-02), BASAPPA THEATURE BUILDING, DASAWAL ROAD,MADIKERI KODAGU DISTRICT. - 571201 PH :08272-222900. 9741785533.9741785588.

MANDYA

854. MANDOVI MOTORS PVT LTD (2501-BD-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, -571401 PH :08232-230260.

MANGALORE

655. BHARATH AUTO CARS PVT LTD (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004 PH :0824-2223030.

656. MANDOVI MOTORS PVT LTD (4502-45-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001 PH :0824-2410123, 2410128. 657. MANDOVI MOTORS PVT LTD (4502-45-03), NO., HASSAN GROWTH CENTRE, ADYAR, N.H. -48, MANGALORE - 575007 PH : 0824-2275123.

658. MANDOVI MOTORS PVT LTD (4502-45-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008 PH :0824-3194123.

 BHARATH AUTO CARS PVT LTD (4503-45-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002
 BH. 1982-422330

 MANDOVI MOTORS PVT LTD (4502-45-08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575002 PH : 0824-2985123.

MUDBIDRI

661. BHARATH AUTO CARS PVT LTD (4503-HN-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227 PH :08258-238630.

MULKI

662. BHARATH AUTO CARS PVT LTD (4503-QV-05), BHARATH BEEDI COMPOUND, NH-17 MULKI -574154 PH : 0824-2293030.

MURUDESHWAR

663. RNS MOTORS (7301-T8-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350 PH: 08385-260295/96/97.

MYSORE

664. FRIENDLY MOTORS (2502-25-01),
MANATHAVADI ROAD, VIDYARANYA PURAM,
MYSORE - 570008
PH - 0821-4005200

665. MANDOVI MOTORS PVT LTD (2501-25-05), NO. 182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011 PH: 0821-4244417 /4000001.

666. MANDOVI MOTORS PVT LTD (2501-25-08), 217/2., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH :0821-4009900.

667. MANDOVI MOTORS PVT LTD (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH:0821-4240000.

NANJANGUD

668. FRIENDLY MOTORS (BYK1-BYK-01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT – MYSORE, KARNATAKA. - 571301 PH :8221-297444, 7259255558.

NELAMANGALA

669. RNS MOTORS LIMITED (BBH1-BBH-01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123 PH.080-27700245.

PUTTUR

670. BHARATH AUTO CARS PVT LTD (4503-CZ-02), NEAR RAIWAY STATION, HARADY, PUTTUR -517583 PH :08251-230230.

RAICHUR

MUNEER CARS (N701-3K-02),
 #12-10-64,GOUSHAL ROAD,SIYA TALAB
 AREA,RAICHUR - 584101
 PH :08532-9449870774.

RAMANAGARAM

672. KALYANI MOTORS (P) LTD (0211-JB-02), #K1318/2034C, OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511 PH:080-27275991/2/3/4.

SAGAR

673. SHRUTI MOTORS (WF01-WF-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. -577401 PH:08183-222123.

SHIMOGA

- 674. SHRUTI MOTORS (B701-B7-01), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201 PH :08182-277976
- 675. SHRUTI MOTORS (B701-B7-03), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA. - 577204 PH :08182-250177.277976.
- SHRUTI MOTORS (B701-B7-05), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOGA. PH :08182-9845399367.

RIDDADIIE

677. BHARATH AUTO CARS PVT. LTD.
(BPY1-BPV.), SURVEY NO. 211, NEAR IOCL
PETROL BUNK, JOG ROAD, VILLAGE – HOSUR,
TALUK – SIDDAPUR, DISTRICT – UTTARA
KANNADA - 581355
PH :581355, 944897550.

SINDHANUR

678. KPF MOTORS PVT LTD (FX01-FX-01), SURVEY NO. 755/1, DOOR NO. 6-1-216/3 WARD NO. 19, GANGAVATHI ROAD, SINDHANUR, RAICHUR, KARNATAKA - 584128 PH :08535-221299.

einei

679. RNS MOTORS (7301-MQ-0D), K H B COLONY, SIRSI - 581402 PH :08384-234854.

SULLIYA

680. MANDOVI MOTORS PVT LTD (4502-EW-04), ODABAI SULLIA,MANGALORE MYSORE ROAD,KARNATAKA - 574239 PH : 08257-23235;232317.

SURATHKAL

681. MANDOVI MOTORS PVT LTD (4502-7G-02), KANA ROAD, SURATHKAL - 574158 PH -0824-4256987/4258899

THOKOTU

682. BHARATH AUTO CARS PVT LTD (QW01-QW-01), NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA KANNADA DISTT. - 575017 PH :0824-2464630.

TIPTUR

683. SAKETH AUTOMOBILES (H101-HV-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA - 572201 PH : 08134-253663.

TUMKUF

684. SAKETH AUTOMOBILES (H101-H1-01), SIRA ROAD, TUMKUR - 572106 PH :0816.225643366

UDUP

- 685. ABHARAN MOTORS (G601-G6-01), N.H. 17, NITTUR, UDUPI - 576103 PH:0820-6454111/222/333/777.
- 686. ABHARAN MOTORS PVT. LTD. (G601-G6-05), NO. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI . -576101

PH:9845242777.

UJIRE

687. BHARATH AUTO CARS PVT LTD
(BWT1-BWT-01), SURVEY NO.237-281,
MANGALORE-CHARMADY ROAD, NEAR INDIAN
OIL PETROL PUMP, SAMPIGE NAGAR, WJIRE,
BELTHANGADY TALUKA, DISTT. DAKSHINA
KANNADA, KARNATAKA. - 574240
PH :8256-234230, 9986503030.

UPPINANGADI

688. MANDOVI MOTORS PVT LTD (4502-NL-05), NR. PADMA VIDVA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH :08251-252123/128/129.

VITTLA

89. MANDOVI MOTORS PVT. LTD. (CCE1-CCE-01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALLIKA – BANTWAL, DISTRICT – DAKSHIN KANNADA - 574243 PH :8255239123.

KERALA

ADOOR

- 690. INDUS MOTOR CO. PVT. LTD. (2702-CJ-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH -04734-0745908393
- 691. AVG MOTORS LTD. (Y501-CJ-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523 PH :04734-9446355900.

ALAPPUZA

- 692. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (E501-E5-01), CCSB ROAD, CHUNGAM, ALLEPPY, - 688011 PH :477-9847580000.
- 693. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (E501-E5-03), PATHIRAPALLY, NH-47, ALAPPUZA - 688521 PH: 0477-9747022412.

ALATHUR

694. BRD CAR WORLD PYT LTD (BRW1-BRW-01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERFY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682 PH 9745634999.

ALUVA

695. BRD CAR WORLD LTD. (A404-CBQ-09), RE SURVEY NO.330/7, NH-47, KUNNUMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102 PH :0484-8589094913.

ANGAMALY

- INDUS MOTOR CO. PVT. LTD. (2702-JW-0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572 PH: 9745998434.
- 697. POPULAR VEHICLES & SERVICES LTD. (2701-JW-0D), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD,ANGAMALY - 683572 PH :8086898002.

ATTINGAL

698. POPULAR VEHICLES & SERVICES LTD. (1601-SX-07), PALAMKONAM, PERUNKULAM,VIA-ALAMCODE, ATTINGAL-695102 PH:8086078788.

BALARAMAPURAM

699. POPULAR VEHICLES & SERVICES LTD. (1601-AQA-11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501 PH :0471-8943345922

CALICUT

- INDUS MOTOR CO. PVT. LTD. (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011 PH: 0495-9745998019.
- D1. INDUS MOTOR CO. PVT. LTD. (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT - 673005 PH :0495-9745998020.
- 702. INDUS MOTOR CO. PVT. LTD. (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT -673655
- PH :0495-9745998018.

 703. POPULAR VEHICLES & SERVICES LTD.
 (4702-47-02), BEHIND MIMS,
 EASWARAMANGALAM ROAD, GOVINDAPURAM
 P.O., CALICUT 673016
 PH :0498-3086078650.
- POPULAR VEHICLES & SERVICES LTD. (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT -673009
 PH-8008078651

CHALAKUDI

705. BRD CAR WORLD (ZJ02-ZJ-01), MURINGOOR P.O., CHALAKUDY - 680316 PH :0480.0567860239

CHALLAKUDDY

706. POPULAR VEHICLES & SERVICES LTD.
(2701-8U-0C), OPPSITE CCMK HOSPITAL,
VELLIKULAM ROAD, CHALAKUDY, KERALA 680307
PH 9946104653

CHANGARAMKULAM

 A M MOTORS (VH01-VH-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585 PH :9895756008.

CHAVAKAD

708. BRD CAR WORLD LTD. (A404-0J-06), ORUMANAYOOR P.O.CHAVAKKAD. DISTRICT-THRISSUR - 680512 PH:9645963999.

709. SARATHY AUTO CARS (C701-UL-06). PRAVUMKOOD, THIRUVANVANDOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) 689124 PH:9947270665.

CHERPULASSERY

710. KVR AUTO CARS PVT LTD (NB01-NB-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE -CHERUPPALASSERY, TALUK - OTTAPPALAM, DISTRICT - PALAKKAD - 679503 PH:04662-9747020582, 280100.

CHERTHALA

711. INDUS MOTOR CO. PVT. LTD. (VL03-VL-01). OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKKUZHI.CHERTHALA, ALAPPUZHA-DIST. -PH:9745997633.

CHINGAVANAM

712. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (I601-I6-01), SURVEY NO.290/9, 290/9/2. MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM (KERALA) - 686531 PH:9847315969.

CHULLIMANOOR

713. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (BAI1-BAI-01), RE-SURVEY NO. 43/7, VILLAGE - ANAND, TALUKA - NEDUMANGAD, DISTRICT - TRIVANDRUM, KERALA. - 695541

COCHIN

- 714. INDUS MOTOR CO. PVT. LTD. (2702-27-02). BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN. - 682015 PH -484-9745998040
- 715. INDUS MOTOR CO. PVT. LTD. (2702-27-09), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN. - 682030 PH:0484-9745998013.
- 716. POPULAR VEHICLES & SERVICES LTD. (2701-27-01), PERANDOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025 PH:0484-9846017725.
- 717. POPULAR VEHICLES & SERVICES LTD. (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018 PH:9846498616.
- SAI SERVICE PVT. LTD. (2705-27-01), 50/1 15L, ,CHERANALLOOR ROAD,EDAPPALLY,COCHIN -PH:484-9645106195.

KALAMASSERY

PH:9645105053.

VAZHIYAMBALAM PO,

719. SAI SERVICE PVT. LTD. (2705-27-02). NH-47,,PATHADIPALAM,EDAPPALLY,COCHIN -682024 PH:9645105057.

- INDUS MOTOR CO. PVT. LTD. (2702-27-0H), LAKSHMI DIARY CAMPUS, OPP-HOTEL SILVER SAND ISLAND, VYTILA, COCHIN - 682019 PH:9745992070.
- SAI SERVICE PVT. LTD. (2705-27-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA)
- 722. GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-27-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM,

COCHIN. - 683104 PH:0484-7559997864, 4237700.

FDAPPAL

723. POPULAR VEHICLES & SERVICES LTD. (4702-AM-05), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH:9946104680

724. AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN. ERNAKULAM. COCHIN PH:9847521112.

FORT KOCHI

725. SAI SERVICE PVT. LTD. (BRS1-BRS-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005

IRINJALAKUDA

726. BRD CAR WORLD LTD. (A404-KQ-05). KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH:9539006999.

727. INDUS MOTORS CO. PVT. LTD. (RO02-VJ-02), SURVEY NO. 48. BUILDING NO. 214. PERUPARAMBA, IRITTY, KANNUR, KERALA 670703 PH:9747554929.

KAIPAMANGALAM

728. SAI SERVICE PVT. LTD. (2705-RP-07), KAIPAMANGALAM, THRISSURE - 680681

729. INDUS MOTOR CO. PVT. LTD. (2702-Q3-07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106 PH:0484-9745998012.

KALLAMBALAM

730. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-QZ-04), DOOR # MP/2/500, KAVALAYOOR PANCHAYAT, KALLAMBALAM, CHIRAYINKEEZHU TALUKA, TRIVANDRUM -695605 PH:8086079100.

KALPETTA

731. INDUS MOTOR CO. PVT. LTD. (4701-JE-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591

KANHANGAD

- 732. KVR CARS (3L01-K2-02), ARANGADI, P.O. KANHANGAD, DIST, KASARGOD, - 671315 PH:9605040999.
- 733. POPULAR VEHICLES & SERVICES LTD. (4702-K2-06), HIGHWAY JUNCTION, KANHANGAD SOUTH P.O .,KANHANGAD - 689641 PH:468-9846400300.
- 734. INDUS MOTOR CO. PVT. LTD. (4701-K2-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541 PH:9745998024

KANJIRAPALLY

735. INDUS MOTOR CO. PVT. LTD. (7E01-9Y-02). VADAKUMBHAGAM KARAYIL. KUNNAMBHAGAM P.O., KANJIRAPALLY - 686506 PH -9745998009

KANNUR

- 736. HAR CARS (K101-K1-01), HAR AVENUE, KANNOTHUMCHAL, CHOVVA POST, KANNUR PH:0497-9539009392.
- 737. HAR CARS (K101-K1-03), POTTIAN SHEKHARAN ROAD, MAKKANY, SOUTH BAZAR, KANNUR -670002
- PH:9539009405. 738. INDUS MOTORS CO (P) LTD (4701-K1-0E). BALANKINAR JN., KATTAMPALLY, P.O., KANNUR - 690011
- KVR CARS (3L01-K1-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011 PH:0497-7558028889.

PH:0497 -9745998023.

740. POPULAR VEHICLES & SERVICES LTD. (4702-K1-0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOVVA (PO), KANNUR - 670018 PH:0497-9846400300.

KARIKKAD

741. BRD CAR WORLD LTD. (A404-GE-02), BRD INDUSTRIAL ESTATE.KARIKKAD. KUNNAMKULAM - 680519 PH:9995804599.

KARUNAGAPALLY

742. SARATHY AUTO CARS (C701-AQ-05), K.S. PURAM.NEELIKULAM. KARUNAGAPPALLY, KOLLAM, - 690544 PH:9947277765.

KASARGOD

- 743. KVR CARS (3L01-3L-01), ANANGUR. VIDYANAGAR (PO), NH17, KASARGOD - 671123 PH:04994-9747011100.
- 744. POPULAR VEHICLES & SERVICES LTD (4702-3L-0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH:4994-8086078864.
- 745. INDUS MOTORS CO. PVT. LTD. (RO02-3L-03), SURVEY NO.384/3C 10, MUTTATHODY VILLAGE, INDIRA NAGAR, KASARAGOD - 671541 PH:9747550747.

KATTAPANA

746. INDUS MOTOR (ZN01-ZN-01). KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.), - 685508 PH :04868-9746743460

KAYAMKULAM

- 747. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (E501-8L-04), NH-47, KOTTUKULANGARA JUNCTION, KAYAMKULAM, ALLAPPUZHA DIST,KERALA - 690502 PH:0479-9947040824.
- INDUS MOTOR CO. PVT. LTD. (2702-8L-05), KARIYILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. - 690572 PH:0479-9745998005.
- POPULAR VEHICLES & SERVICES LTD. (B802-8L-03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. -690502 PH:0479-9946105601

KILLIPPALAM

750. POPULAR VEHICLES & SERVICES LTD. (1601-16-05), OPP. ST. JUDE CHURCH, CIT ROAD, KILLIPPALAM, TRIVANDRUM - 695002 PH:8589992434.

KODANGALLUR

751. SAI SERVICE PVT. LTD. (2705-8K-03), NH-17,T.K.S.PURAM,,KODUNGALLOOR - 680667 PH:0480-8606980006.

KODUVALLY

 A M MOTORS (BGX1-BGX-01), SURVEY NO:91/9, 91/10, NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572 PH - 9895970723

KOLLAM

- INDUS MOTOR CO. PVT. LTD. (1602-Q4-03), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005
 PH:0474-9745998004.
- 754. POPULAR VEHICLES & SERVICES LTD. (1601-Q4-04), H & C COMPOUND, MUNDDACKAL, KOLLAM - 680006 PH :0474-98464 98656.

KOLLAM (QUILON)

- 755. SARATHY AUTO CARS (C701-C7-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017 PH:0474-9847072065.
- SARATHY AUTO CARS (C701-C7-08), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, UMAYANALLUR SIDCO INDUSTRIAL ESTATE, KOLLAM. - 691589 PH :0474-9847072065, 2537280.

KONDOTTY

757. INDUS MOTORS CO. PVT. LTD. (ID02-ID-01). SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573 PH 3745997875.

KOOTHATTUKULAM

758. SAI SERVICE PVT. LTD. (VM01-VM-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. -686662 PH :0485-9645106258.

KOTHAMANGALAM

- INDUS MOTOR CO. PVT. LTD. (7E01-9V-03), PALAKKADAN
 BUILDING, CHANKLAM, KOTHAMANGALAM -686691
- PH :9745998479.

 760. POPULAR VEHICLES & SERVICES LTD.
 (2701-9V-0B), NEAR BSNL OFFICE,
 THANGALAM, KOTOHAMANGALAM, KERALA
 686691
 PH :9946104661.

KOTTAKKAL

- INDUS MOTOR CO. PVT. LTD. (4701-8M-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST, - 676503 PH: 0493-9745998017.
- 762. POPULAR VEHICLES & SERVICES LTD. (4702-8M-03), NH-17, "CHANDAPARAMBU, "RANBATHANI P.O, MALAPPURAM, KOTTAKAL-676510

PH:0483-9946104631. **KOTTARAKARA**

763. CHITHIRA AUTOMOBILES (C781-S8-01), RAILWAY STATION JUNCTION ,KOTTARAKARA PH :0474-9447711001

KOTTARAKKARA

- POPULAR VEHICLES & SERVICES LTD. (S801-S8-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA -691531
- PH:8086073466. 765. SARATHY AUTO CARS (S802-S8-01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARKARA DISTT.

KOTTAYAM

AVG MOTORS LTD. (B801-B8-01),
 ERAYILKADAVU, KOTTAYAM - 686001
 PH: 0481-9446323999.

KOLLAM (KERALA) - 691531

PH:9947073065.

- 767. INDUS MOTOR CO. PVT. LTD. (2702-B8-04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM, KERALA - 686013 PH: 0481-9745998007.
- INDUS MOTOR CO. PVT. LTD. (2702-B8-0C), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM -686013
 PH :9745998007.
- 769. POPULAR VEHICLES & SERVICES LTD. (B802-B8-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O, KOTTAYAM - 686006 PH: 0481-9539007400.

KOZHENCHERRY

 AVG MOTORS LTD. (W801-AS-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT- PATHANAMTHITTA, - 689641 PH: 9446492988.

KUNNAMKULAM

 POPULAR VEHICLES & SERVICES LTD. (2701-8N-07), CHOONDAL, TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH :0488-9846397066.

LAKKIDI PERUR

 A M MOTORS LTD. (CER1-CER-01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302 PH :8086305555.

MALAPURAM

773. A.M. MOTORS (E601-E6-01), VARANGODE, DOWNHILL, MALAPURAM, - 676519 PH :493-9895705325.

MALLAPALLY

774. INDUS MOTORS (1201-12-01), THOPPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585 PH :9747541400.

MANJERI

- A.M. MOTORS (E601-8V-05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA -676121
 PH :9895756035.
- K V R AUTO CARS PVT. LTD, (8V02-8V-01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123
 PH:9947020741.
- 777. POPULAR VEHICLES & SERVICES LTD. (4702-9V-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERALA) - 676121 PH :0483-8589992405.

MANNARKAD

- A.M. MOTORS (E601-RA-07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582 PH:9895979048.
- 779. INDUS MOTORS (2702-RA-0K), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZHA-PO. MANNARKAD,KERALA - 678583 PH - 9745965046

MAVELIKARA

- 780. POPULAR VEHICLES & SERVICES LTD.
 (B802-99-02), KONNAYIL SUVAKO INDUSTRIAL
 COMPLEX, SHED A-1, KOLLAKADAVU
 INDUSTRIAL ESTATE, KOCHAL MOODU,
 KALLIMEL P.O.,, MAVELIKKARA, KERALA890570
- INDUS MOTORS (1602-S9-07), NEAR PRATHIBA THEATRE, PUTTHIYAKAVU, MAVELIKKARA -690101
 PH :9745998137.
- 782. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (S901-S9-01), SURVEY NO. 227/3, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA, KERALA - 690104 PH -9747022424.

MUVATTUPUZHA

PH:9846298622.

783. INDUS MOTOR CO. PVT. LTD. (7E01-7E-01), NH-49, MUVATUPUZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPUZHA, ERNAKULAM DIST - 686661 PH -0485-9745998011.

784. POPULAR VEHICLES & SERVICES LTD. (2708-7E-02), MUTHUKALLU JUNCTION, PERUMPALLUR P.O., MUVATTUPUZHA, KERALA - 686673 PH :9846374786.

785. INDUS MOTOR CO. PVT. LTD. (7E01-7E-08), BUILDING NO. 11/146(A), KADATHY MARKET, NH-49, MUVATTUPUZHA, DISTRICT -ERNAKULAM. - 686673

NEYYANTTINKARA

786. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-AT-02), NH 47, KOTTAMAN, KOLLAYIL PANCHAYAT, NEYYATTINKARA, TRIVANDRUM, - 695503 PH :9995867628.

NEYYATINKARA

787. INDUS MOTORS (AT01-AT-01), INDUS MOTOR CO, PVT. LTD., OLD M.V THEATRE, NEAR KSRTC BUS STATION, NEVYATINKARA, DIST. TRIVANDRUM - 695121 PH :0471-9747544500.

NILAMBUR

- INDUS MOTOR CO. PVT. LTD. (4701-AF-0A), MINERVA JUNCTION, NILAMBUR, KERALA -679329
 - PH:04931-9745998396.
- INDUS MOTOR CO. PVT. LTD. (4701-AF-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329 PH. 9745998414.

NILAMEL

 HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-DA-03), M. C. ROAD, KANNANCODU, NILAMEL, KOLLAM (DIST.) - 691535 PH :8086079107.

OTTAPALAM

791. INDUS MOTOR CO. PVT. LTD. (PA01-PA-01), BUILDING NO. 23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALM TALUKA, PALAKKAD DISTT., KERALA. - 679/101 PH: 0466-9745999014.

PALA

792. POPULAR VEHICLES & SERVICES LTD. (B802-GN-04), 12TH MILE,PALA-PONKUNNAM ROAD,PALA - 686575 PH :0482-8086073454.

- 793. INDUS MOTOR CO. PVT. LTD. (7E01-GN-05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574 PH :9745998878.
- AVG MOTORS LTD. (GN03-GN-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651 PH :4822-9447137246.
- 795. INDUS MOTORS CO. PVT. LTD. (7E01-GN-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT -686584 PH. 39747516934.

PALAKKAD

- INDUS MOTOR CO. PVT. LTD. (2702-Y2-0G),
 VADAKKUMURI-NH-47, KANNADI,
 KUZHALMAMMAM (P.O.), PALAKKAD. 678701
 PH :9745998590
- POPULAR VEHICLES & SERVICES LTD. (2701-Y2-09), OPP. PALANA HOSPITAL, KODUVAYOOR ROAD, KINASSERY P.O., PALAKKAD - 678707 PH :0491-8846300650.
- INDUS MOTOR CO. PVT. LTD. (Y202-Y2-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA CHANDRANAGAR POST, PALAKKAD - 678007 PH:9747519500.

PARAVOOR

 BRD CAR WORLD LTD. (A404-ZS-08), MAVINCHUVADU, MANNAM P.O., NORTH PARAVUR, PARAVOOR (KERALA) - 683520 PH :9567869239.

PATHANAMTHITTA

- 800. AVG MOTORS LTD. (W801-W8-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671 PH:0468-9744077183.
- 801. AVG MOTORS LTD. (W801-W8-04), SURVEY NO. 53/7A/3, WARD NO. 13, KUMBAZHA, PATHANAMTHITTA.

PATHNAMTHITTA

- 802. AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA PH:0468-9288117477.
- INDUS MOTOR CO. PVT. LTD. (1602-16-04),
 KUMBAZHA, PATHANAMTHITTA 689653
 PH:0468-9745998008.
- 804. POPULAR VEHICLES & SERVICES LTD. (B802-W8-05), T.K. ROAD, NEAR COLLECTORATE, PATHANAMTHITTA - 689645 PH :9946105687.

PATTAMBI

- A.M. MOTORS (E601-8P-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306 PH:0466-9567866059.
- 806. INDUS MOTOR CO. PVT. LTD. (2702-8P-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303 PH: 9745998295.
- 807. A.M. MOTORS (E601-8P-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. 679306

PH:0466-9567866059.

PAYANNUR

808. POPULAR VEHICLES & SERVICES LTD. (4702-92-04), N H 17, EZHILODE P O, "PAYYANUR - 670309 PH 10497-0846038510

PERINTHALMANNA

- 809. A.M. MOTORS (E601-7H-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322
 - PH:04933-8129818235.
- 810. KVR AUTOCARS PVT. LTD. (7H01-7H-01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351 PH: 04933-9747020573.
- KVR AUTOCARS PVT. LTD. (7H01-7H-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322
 PH:04933-9747020837.

PERUMBAYOOR

812. SAI SERVICE PVT. LTD. (2705-8W-04), M.C.ROAD,PERUMBAVOOR,ERNAKULAM DIST,KERALA - 683542

POINACHI

 KVR CARS (3L01-GF-03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH :9526021822.

PUNALUR

 SARATHY AUTO CARS (C701-8Q-03), NH-208, Q.S. ROAD, ELAMPAL POST, PUNALUR, KOLLAM DIST - 691322
 PH:0475-9847073065.

QUILANDY

815. INDUS MOTOR CO. PVT. LTD. (3001-30-01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. -673306 PH:9745997875.

RAMANATTUKARA

816. A.M. MOTORS (E601-KB-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632 PH :9567866144.

RANNI

 INDUS MOTOR CO. PVT. LTD. (7E01-JX-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH :9745998737.

SASTHAMKOTTAH

818. INDUS MOTORS CO. PVT. LTD. (1602-RT-09), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM – , KERALA -690520 PH :9745998849.

SHORNUR

 POPULAR VEHICLES & SERVICES LTD. (2701-11-0E), PALAKKAD PATTAMBI ROAD, KULAPPULY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH :8589992425.

TALIPARAMBA

820. HAR CARS (K101-9W-02), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141 PH: 0460-9539009480.

TELLICHERRY

821. INDUS MOTOR CO. PVT. LTD. (4701-Y3-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY , KERALA - 670102 PH:9747520100.

THALASSERY

822. INDUS MOTOR CO. PVT. LTD. (RO02-RO-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH :490-9745998022.

THIRUVALLA

- 823. AVG MOTORS LTD. (Y501-Y5-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107 PH :0469-8606071155.
- 824. POPULAR VEHICLES & SERVICE (B802-Y5-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH:8086073489.

THIRUVANANTHAPURAM

825. SOUTH PARK MOTORS PVT. LTD. (1604-16-01), SURVEY NO. 985/3-4-5-6, VILLAGE -KADAKAMPALLY, CHACKAI BYPASS, TALUKA -TRIVANDRUM, TRIVANDRUM, KERALA. - 695029 PH. 9526100008.

- 826. SOUTH PARK MOTORS PVT. LTD. (1605-16-01) RE SURVEY NO. 9/3, TO 9/5, 9/8, TO 9/10, 9/15, 9/18, 9/19, 6/12, 9/23, KAZHKOOTAM, VAZHAYILA, VILLAGE – PEROORKADA, TRIVANDRUM. - 695005 PH 471-3050000, 9544040005.
- 327. SARATHY AUTO CARS LTD. (C701-16-09), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT-THIRUVANANTHPURAM. KERALA.

THODUPUZHA

828. INDUS MOTOR CO. PVT. LTD. (7E01-HZ-04), PALA ROAD, THODUPUZHA - 685584 PH :9745998631

THRISSUI

- 829. BRD CAR WORLD LTD. (A404-A4-01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR -680031
 - PH:0487-9995807141.
- INDUS MOTOR CO. PVT. LTD. (2702-A4-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH - 0487-9745998015.
- 831. INDUS MOTOR CO. PVT. LTD. (2702-A4-0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH :0487-9745998014.
- 832. POPULAR VEHICLES & SERVICES LTD. (2701-A4-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH: 0487-8589992404.
- 833. SAI SERVICE PVT. LTD. (2705-A4-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH:9645106089.
- 834. BRD CAR WORLD LTD. (A404-A4-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH :0487-9746476529.

THRITHALLUR

835. BRD CAR WORLD LTD. (A404-SS-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619 PH: 9539197888.

TIRUR

- 836. A.M. MOTORS (E601-Y4-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR 676101 PH :0494-9895940000.
- KVR AUTOCARS PVT. LTD. (7H01-Y4-05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307 PH:9747020673.

838. A.M. MOTORS (E601-Y4-08), THALAKKADATHOOR PO. MALAPPURAM, MALAPPURAM DISTT. - 676103 PH:0494-9895705323.

839. POPULAR VEHICLES & SERVICES LTD. (2701-8R-08), NEAR CENTURY PLAZA, NATTIKA P.O. TRIPRAYAR, TRISSUR DIST - 680566 PH:0487-9846699245.

TRIPUNTARA

840. SAI SERVICE PVT. LTD. (2705-AK-05), HILL PALACE ROAD, KARINGACHIRA, COCHIN -

PH:9645105067. TRIVANDRUM

- 841. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-16-01), VAZHAYILA P.O., TRIVANDRUM - 695564 PH -9995867654
- 842. INDUS MOTOR CO. PVT. LTD. (1602-16-02). NH BYE PASS ROAD, VEMPALAVATTOM. TRIVANDRUM - 695029 PH -0471-9745998003
- 843. INDUS MOTOR CO. PVT. LTD. (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM - 695014 PH:0471-9745998001.
- POPULAR VEHICLES & SERVICES LTD. (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002 PH:0471-9846498633.
- 845. SARATHY AUTO CARS (C701-16-04), KOVALAM BYEPASS, SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009
- 846. INDUS MOTOR CO. PVT. LTD. (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA, TRIVANDRUM - 695028 PH:9747540100.
- INDUS MOTORS CO. PVT. LTD. (1602-16-11), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM -695030 PH:9746743357.
- 848. INDUS MOTOR CO. PVT. LTD. (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM. TRIVANDRUM, MURINJAPALAM, . - 695011 PH:9745998002.

UPPALA

- 849. POPULAR VEHICLES & SERVICES LTD. (4702-4I-0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH:8589051616.
- KVR CARS (4102-41-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH:4994-9747021211.

URAKAM

851. INDUS MOTORS (AAH1-AAH-01). IRINJALAKKUDA ROAD, POOCHUNNIPPADAM, LIBAKAM PO TRICHUR DISTE KERALA . 680562 PH -9745998044

VADAKARA

- 852. INDUS MOTOR CO. PVT. LTD. (4701-8S-07), BYE PASS JN, VATAKARA-673104, CALICUT, - 673104 PH:0496-9745998021.
- POPULAR VEHICLES & SERVICES (8S02-8S-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH:0496-8943345935.

VAIKOM

854. INDUS MOTOR CO. PVT. LTD. (2702-WN-0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH:9746743003.

VETTICHIRA

855. KVR AUTOCARS PVT, LTD, (7H01-MZ-03), AP IV. 75A TO G. NH-17, CHUNKAM, DIST, MAI APPLIRAM VETTICHIRA - 676552 PH -9747020023

WADAKKANCHERY

856. BRD CAR WORLD LTD. (A404-MX-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH:9567869403.

MADHYA PRADESH

ASHOK NAGAR

857. PREM MOTORS PVT. LTD. (DS01-DS-02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH, - 473331 PH:9926809110.

ASHTA

858. JEEWAN MOTORS PVT. LTD. (BSF1-BSF-01), KHASRA NO.111/1 NEAR RELIANCE PETROL PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001 PH:0756-9826429604.

BADNAWAR

859. PATEL MOTORS PVT. LTD. (BPT1-BPT-01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT, - DHAR, MADHYA PRADESH. - 454660 PH:07295-232228.9977703512.

RADWAH

860. NIMAR MOTORS (AU01-UJ-05), NIRMAL COMPLEX, INDORE ROAD, BARWAH - 451001 PH:07280-224567, 7770878726.

KLINAL MOTORS (U501-TP-04) KH NO -1/56 JHULELAL DHARMSHALA ROAD, BALAGHAT, MADHYA PRADESH - 4811001 PH :07632-240088

862. MY CAR (BHOPAL) PVT LTD. (I302-I3-01), KHASRA NO.423/2, NH-12, J.J. ROAD, NEAR SHRIVASTAV MARRIAGE GARDEN, BARELI DISTRICT RAISEN (M.P.) - 464668 PH:07486-230103.

BARNAGAR

863. RUKMANI MOTORS (P) LTD (BBK1-BBK-01), RUNIJA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN - 456771 PH:9755512100.

BARWANI

NIMAR MOTORS (AU01-SA-02), NEAR ICE FACTORY.RAJGHAT ROAD, BARWANI - 451551 PH:07290-224366.

BETMA

865. OCEAN MOTORS (BVR1-BVR-01), OPPOSITE MPEB OFFICE, INDORE-AHEMDABAD ROAD, BETMA, DISTRICT - INDORE, MADHYA PRADESH . - 453001 PH:7389936444.

RETUL

866. KUNAL MOTORS (U501-U5-02), BHOPAL -NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK., BETUL - 460001 PH:07141-239991/239992.

867. JEEWAN MOTORS (0302-03-01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL 462024 PH:0755-4058888.

868. MY CAR (BHOPAL) LTD (0303-03-01). 189.JINSI.NH-12.BHOPAL (MP) - 462008 PH:0755-4022800 / 4222999.

- 869. MY CAR (BHOPAL) LTD (0303-03-03), 196. MANDAKINI HOUSING SOCIETY..KOLAR ROAD..BHOPAL.MADHYA PRADESH - 462042 PH :0755-4082854
- 870. SATYAM MOTORS (0307-03-01), NH-12,SUVEESHA NAGAR,HOSHANGABAD ROAD, MISROAD - 462040 PH:0755-4422000/4422056
- RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (0308-03-01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023 PH:755-4063529.30.31.32.33.34.35.
- JEEWAN MOTORS (0302-03-03), PLOT NO. 157, NEAR PUNJAB & SINDH BANK M.P. NAGAR ZONE-II. BHOPAL - 462023 PH:0755-9826429605, 2558831.
- 873. JEEWAN MOTORS PVT. LTD. (0302-03-04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH, CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036 PH:0755-4057988.

BIAORA

874. PRIME CARS (3Q01-0F-03), NR. INDORE-BHOPAL SQUARE, A B ROAD, BIAORA -465674 PH:7374-230063.

BINA

875. ADINATH MOTORS (BHQ1-BHQ-01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT - SAGAR, MADHYA PRADESH 470113 PH -9009780030

BURHANPUR

876. NIMAR MOTORS PVT. LTD. (BRR1-BRR-01), KHASRA NO. 654/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP. PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH -450331 PH:07325-242211.

CHATTARPUR

877. ADINATH MOTORS (G101-8B-02), MAHOBA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGAR - 471001 PH:07682-241446.

CHHINDWARA

878. KUNAL MOTORS (U501-U5-03), OPP, KUNAL MOTORS SHOWROOM, .LAL BAGH TIRAHA, BEHIND TRUE VALUE OUTLET. NASIRABAD ROAD, CHHINDWARA(MP), - 480001 PH :07162-236436

879. KUNAL MOTORS (U501-U5-06), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002 PH :8349999112.

DAMOR

880. ADINATH MOTORS (G101-RD-03), KILLARI NAKA, SAGAR ROAD, DAMOH - 470661 PH :07812-221740.

DATIA

881. PREM MOTORS PVT. LTD. (3003-WE-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661 PH 17522-23236

DEPALPUR

882. OCEAN MOTORS (WB01-WB-03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,DIST.INDORE-MP - 453115 PH :07322-220505, 222501.

DEWAS

883. PRIME CARS PVT. LTD. (3Q01-3Q-01), RASULPUR BYPASS TIRAHA, AB ROAD, DEWAS - 455001 PH .07272-259301.

DHAR

884. RUKMANI MOTORS (P) LTD (5304-LM-02), 41/2 MAGAJPURA, DHAR,, - 454001 PH:7292-223500.

DINDOR

 STANDARD AUTO AGENCIES (AVA1-AVA-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP,DINDORI - 481661
 PH :07644-280030.7771014728.

GANJBASODA

886. MY CAR (BHOPAL) LTD. (AEA1-AEA-01), NEAR GHUNGRU GARDEN, TYONDA ROAD, GANJBASODA, VIDISHA DISTT., M.P. - 464221 PH:7389928892.

QUNA

887. PREM MOTORS PVT. LTD. (S301-S3-01), OPP R.T.O.,A.B. ROAD,GUNA, - 473001 PH:07542-268015 / 268081.

GWALIO

- 888. PREM MOTORS PVT. LTD. (3003-30-01), M. L. B. ROAD, GWALIOR,, 474002 PH: 0751-4010757.
- 889. PREM MOTORS (3005-30-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH:0751-4055137.

HARDA

890. INFINITY CARS (KM01-VY-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP -461331

PH:8889284444. HOSHANQABAD

891. INFINITY CARS (KM01-KM-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001 PH : 07574-256677.

INDORE

- 892. MY CAR PVT. LTD. (5305-53-01), 78/1/3, HUKMAKHEDI RAU, ADJESCENT IPS ACADEMY, A6 ROAD,INDORE - 452031 PH : 0731-4272727.
- 893. PATEL MOTORS (INDORE) PVT LTD. (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017 PH :0731-4245222.
- 894. PATEL MOTORS (INDORE) PVT LTD. (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010 PH: 0731-4033333.
- 895. RUKMANI MOTORS (P) LTD (5304-53-01), 2-3,,A.B. ROAD,INDORE - 452001 PH:0731-4075401.
- 896. RUKMANI MOTORS (P) LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001 PH:0731-4075408.
- OCEAN MOTORS PVT. LTD. (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CATT SQUARE, RING ROAD, INDORE, MP. - 452001 PH :0731-6827500. 6627505.
- 898. OCEAN MOTORS (5306-53-02), NEAR QUEENS COLLEGE, ASHARAM BAPU ASHRAM, KHANDWA
- PH:0731-6617505,2877505.

 899. MY CAR (INDORE) PVT. LTD. (5305-53-02),
 KHASARA NO.15/1/8 GRAM PIPLIYA KUMAR
 GODOWN NO.1112, DEWAS NAKA, INDORE. 452010

ROAD INDORF - 452017

- PH:0731-4737373.

 900. PATEL MOTORS (5303-53-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.). -452006

PH:9685333331,7389936451

 KATHED MOTOCORP (5307-53-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002 PH: 7471111132.

JABALPUR

- 903. SHUBH MOTORS (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 486001 PH :0761-4099999.
- STANDARD AUTO AGENCY (5402-54-01),
 OPPOSITE ALLAHABAD BANK, DELITE TALKIES
 ROAD, CIVIL LINES, JABALPUR 482001
 PH: 0761-4040405 / 4040406.
- 905. STANDARD AUTO AGENCY (5402-54-03), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002 PH :0761-4038001
- 906. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002 PH :0761-6999952. 9755502292.

JAORA

907. PATEL MOTORS (INDORE) PVT. LTD.
(P801-9EP-04), SURVEY NO.57/11/1, RATLAM
ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO,
INDUSTRIAL AREA, INFRONT OF ST. FAUL
SCHOOL, JAOPA, DIST. RATLAM, MADHYA
PRADESH - 457226
PH 243399, 982693221.

JHABUA

 PATEL MOTORS (AAR1-AAR-01), INDORE AHMEDABAD ROAD, MEGHINAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661 PH :07392-243399. '9826634449.

KATNI

909. SHUBH MOTORS PYT LTD (FK01-FK-01), WARD NO. 41 HEMU COLONY SHANTI NAGAR, BESIDE RELIANCE PETROL PUMP, KATNI, MADHYA PRADESH - 483501 PH 9755595596

CHANDWA

 NIMAR MOTORS (AU01-3R-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001 PH:0733-2244088.

KHARGONE

- 911. NIMAR MOTORS (AU01-AU-01), JETAPUR,SANAWAD ROAD,KHARGAONE, -462026 PH :07282-243285.
- 112. NIMAR MOTORS PVT. LTD. (AU01-AU-06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001 PH :9669569504.

KHATEGAON

913. PRIME CARS PVT. LTD. (BXB1-BXB-01), SURVEY NO. 85/3, NEMAWAR ROAD, KHATEGAON, DISTRICT DEWAS, MADHYA PRADESH -455336

KOTMA

914. SHUBH MOTORS (DO01-DO-01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336 PH : 07658-233777.

PH:7274-8889913306.

KUKSHI

915. OCEAN MOTORS PVT. LTD. (BIO1-BIO-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331 PH 9009780030, 7389945443, 8085999990.

MAIHAR

916. CITY CARS (D702-GI-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH .07674-234575.

MANDLA

917. STANDARD AUTO AGENCIES (5402-WD-04), KATARA ROAD, MANDLA, DIST. MANDLA MP -481661

PH:7642-260600,260622.

MANDSAUR

918. PATEL MOTORS (WC01-WC-01), NEAR SHIVANA BRIDGE,RATLAM MANDSAUR ROAD,MANDSAUR - 458001 PH:07422-400450, 220372.

MHOW

919. OCEAN MOTORS PVT. LTD. (WA01-WA-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441 PH:07324-7389936478. 266211.

MORENA

920. PREM MOTORS PVT. LTD. (RG01-RG-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH :07532-233101.

NARSINGHPUR

921. STANDARD AUTO AGENCIES (BB01-BB-01), KH.
NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42),
OLD 46 (NEW) MOUZA RONSAR AI.IM. 2, TEHSIL
& DISTRICT – NARSINGHPUR, MADHYA
PRADESH. - 487001
PH. 7792-232757.

NEEMUCH

922. AUTO SCAN (3T81-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH, PH:07423-221912. PATEL MOTORS (RATLAM) PVT LTD. (P801-3T-02), MHOW-NEEMUCH ROAD, NEEMUCH(MP),, - 458441 PH:07423-263883-4.

PANNA

924. CITY CARS (EQ01-EQ-01), KHASRA NO. 378, MOHAN RAJ VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH. - 488001 PH.7672-223026. 222593.

PITHAMPUR

 PATEL MOTORS (INDORE) PVT. LTD. (5303-BVD-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH: 722-499099.

RAISEN

926. MY CAR (BHOPAL) PVT. LTD. (RF01-RF-01), NEAR BAGHEL TRACTORS BEFORE SALE TAX TOLL SAGAR ROAD - 464221 PH :9755550061.

RATLAM

- 927. PATEL MOTORS (INDORE) PVT LTD. (P801-P8-01), 76 C,D&E,INDUSTRIAL AREA,RATLAM - 452001 PH:07412-402529-31-32-33-41.
- 928. PATEL MOTORS (INDORE) PVT LTD. (P801-P8-03), 181/17/18, DOSHI GOAN, INDUSTRIAL AREA. JAORA ROAD, RATLAM - 457001 PH: 07412-261463, 261464, '9926932221

REWA

929. CITY CARS (D702-M2-03), NYPASS CHURHATA,DIST. REWA - 482001 PH:07662-222021.

SAGAR

930. ADINATH MOTORS (G101-G1-01), STATION ROAD, TILAK GANJ, SAGAR (M.P). - 470001 PH:07582-403932 / 226560.

GAJADIII

931. PRIME CARS (3Q01-ZC-02), LALGHATI , A B ROAD, SHAJAPUR - 465441 PH :7364-226333.

SANWER

932. MY CAR (INDORE) PVT. LTD. (AAJ1-AAJ-01), S.NO.356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DISTT. INDORE. -453551 PH: 07321-220043,7389920507.

SATNA

933. CITY CARS (D702-D7-01), WARD NO. -27,AMONGHA KALA,PANNA ROAD,SATNA -485001

PH:07672-223026. CITY CARS (D702-D7-05), (A UNIT OF AGRAWAL

WHEELS PVT. LTD.), BESIDE BHASKAR PRESS, BEHIND MARUTI SHOWROOM, WARD NO.27, AMOUDHA KALA, PANNA ROAD, SATNA -485001 PH :9754301199.

SEHORE

935. JEEWAN MOTORS (0302-EH-02), 869/1/2,OFFICERS COLONY,IN FRONT OF CHURCH GROUND,BHOPAL, INDORE ROAD 466001 PH: 0756-2226400

SEONI

KUNAL MOTORS (U501-8X-05), JYARAT NAKA,
 JABALPUR NAGPUR ROAD, SEONI (M.P.) 480661
 PH: 07692-228158,8349999269.

SHADOL

937. SHUBH MOTORS (MF01-MF-01), JAMUA, NEAR GYAN GUPTA,BUDHAR ROAD,SHAHDOL, -484771 PH:07652-231358 / 230110.

SHIVPURI

938. PREM MOTORS PVT. LTD. (3003-3U-04), A B ROAD,SIVPURI., - 473551 PH:07492-221215.

SIDHI

 CITY CARS (BKM1-BKM-01), ADHIYAR KHOH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. - 486661 PH:7672-223026, 222593, 9754301199.

SIMROL

940. PATEL MOTORS PVT. LTD. (6271-8ZV-01), PLOT NO. 13-14, SANJAY GANDHI NAGAR, INDORE KHANDWA RD, GRAM - SIMROU, TEHSIL - MHOW, DISTRICT - INDORE, MADHYA PRADESH - 452020 PH :07295-9977703512, 232228.

SUJALPUR

941. PRIME CARS PVT. LTD. (3001-BJO-04), 363/1 DEHANI JOD, ASHTA ROAD, NEAR SOYA PLANT SHUJALPUR, MADHYA PRADESH - 465333 PH :8889913304 & 08889913341.

TIKAMQARH

942. ADINATH MOTORS (RE01-RE-01), NEAR MAU CHUNGI NAKA, TIKAMGARH (M.P.) - 472001 PH :07683-247469.

UJJAIN

943. RUKMANI MOTORS (P) LTD (3W02-3W-01), SURVEY NO. 59/3, DEWAS ROAD,UJJAIN -456010 PH :0734-4052000.

UMARIA

944. SHUBH MOTORS (5403-BVY-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH : 0781-6009333.

VIDISHA

945. MY CAR PVT. LTD. (AY01-AY-01), SURVEY NO. 102, VILLAGE – RANGI, TEHSIL – VIDISHA, VIDISHA, (M.P.) - 464001 PH:7592-9755550071, 297067.

WAIDHEN

946. CITY CARS (D702-JJ-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI ,MADHYA PRADESH -486886 PH .07662-222021. 8889917774.

MAHARASHTRA

AHMEDNAGAR

- 947. VIJAY AUTOMOBILES (A581-A5-01), OPP. MSEB SUB STATION, NAGAR-PUNE ROAD, KEDGAON, AHMEDNAGAR PH :0241-2550049.
- 948. KANKARIYA AUTOMOBILES PVT LTD (AS01-A5-01), SARDA MILLS,SAVEDI ROAD,AHMEDNAGAR, MAHARASTRA - 414001 PH :0241-9409961540.
- 49. KANKARIYA AUTOMOBILES PVT LTD (A501-A5-05), MIDC, AHMEDNAGAR - 414003

AKLUJ

 CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-RU-04), PLOT NO. 15/3-A, PANCHVATI STOP, MALINAGAR ROAD, AKLUJ - 413101 PH : 02185-223033.

AKOLA

951. KHANDELWAL AUTOWHEELS PVT.LTD (F101-F1-01), TIRUPATI CHAMBERS,CONVENT ROAD,AKOLA - 444005 PH:0724-2429404,2440409,2420061.

ALIBAUG

952. SIMRAN MOTORS (7S01-3X-05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE – VESHVI, ALIBAUG, DISTRICT – RAIGAD, MAHARASHTRA - 402201 PH :02141-226344.

AMBEGAON

953. THE KOTHARI WHEELS (1906-AGA-04), SOHAM NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, A/P MANCHAR, TALUKA: AMBEGAON, DISTT: PUNE, MAHRASHTRA -410503

PH:02132-223083/93. AMRAVATI

- 954. ASPA BANDSONS AUTO (P) LTD (F201-F2-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA, - 444607 PH :0721-2510475/76/77.
- 955. ASPA BANDSONS AUTO (P) LTD (F201-F2-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607 PH :0721-259008

AURANGABAD

- 956. AUTOMOTIVE MANUFACTURERS LTD. (2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH: 0240-6640500/6640555.
- AUTOMOTIVE MANUFACTURERS LTD. (2102-21-03), C-27,MIDC, CHIKALTHANA, N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006 PH :240-2484911.
- 958. PAGARIYA AUTO PVT LTD (2103-21-01), OPP OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD -431005 PH :0240-240665902.
- PAGARIYA AUTO PVT LTD (2103-21-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005 PH 9860999468.
- 960. PAGARIYA AUTO PVT LTD (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001 PH :0240-6504141.

BADLAPUR

961. PRAKASH AUTO PVT. LTD. (9001-90-01), SHOP NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRIISHNA WATER SUPPLY, OPP. INDIAN OIL PETROL PUMP, MIDC ROAD, KATRAP, BADLAPUR (EAST). 421503 PH 10251-3921352333.

BALLARPUR

962. TRISTAR CARS (H302-ZH-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701 PH-9272222412/13.

BARAMATI

 MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-7R-01), BARAMATI. PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102 PH :02112-229005.

RADGUI

 CHAVAN MOTORS (BBA1-BBA-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401 PH :2184-229666.

BHANDARA

965. AUTOMOTIVE MANUFACTURERS LTD. (2001-FG-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904 PH :07184-250642/251542.

BHIVANDI

966. S K WHEELS PVT. LTD. (IX01-IX-02), SURVEY NO. 43/1E, VILLAGE SONALE, NH-8, MUMBAI-NASHIK HIGHWAY, BHIVANDI, THANE -421302

PH:0252-2657484/9930545454/61768000

967. SEHGAL AUTORIDERS PVT. LTD.
(BSV1-BSV-01), GUT NO. 929/1, UTTROLI, BHOR,
TALUKA – BHOR, DISTRICT – PUNE,
MAHARASHTRA. - 412206
PH.8868681348, 8888881399.

BOISAR

968. SPECTRA MOTORS (ES01-ES-01), PLOT NO.J-240, TARAPUR INDUSTRIAL AREA, VILLAGE-SARAVALI, BOISAR, PALGHAR, THANE (MAHARASHTRA) - 401501 PH :02525-645180/661088.

BRAMHAPURI

969. TRISTAR CARS PVT LTD (H302-TW-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206 PH :92722224067/18.

CHALISGAON

970. MANRAJ MOTORS PVT LTD (AAE1-AAE-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA. - 424101 PH :025892289320.

CHANDGAD

 SAI SERVICE PVT. LTD. (BTF1-BTF-01), GAT NO.360, G.P.M NO.157, AP HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA. - 416507 PH :02320-239339

CHANDRAPUR

972. TRISTAR CARS PVT LTD (H302-H3-01), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 442401 PH :07172-9272222401/2.

973. TRISTAR CARS PVT LTD (H302-H3-03), NAGPUR ROAD, CHANDRAPUR - 442401 PH :07172-9272222403/4.

CHIPLUN

974. JAGRUT MOTORS P. LTD. (9A01-9A-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605 PH : 02355-252238.

DAHANU

975. SAI SERVICE PVT. LTD. (V901-TD-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602 PH:8975003138 (02528-225060)70/80/8975003140.

DAPOLI

 JAGRUT MOTORS P. LTD. (G301-VG-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI.DIST RATANAGIRI. - 415712 PH : 02358-267272,252238.

DHULI

977. SEVA AUTOMOTIVE LTD. (P301-P3-01), GATE
NO. 90, AWADHAN, MUMBAI AGRA ROAD, DHULE
- 424001
PH: 02562-281128/29.

PH:02562-281

978. AUTOMOTIVE MANUFACTURERS LTD.
(AAF1-AAF-01), S.NO.753, NEAR PANDAV
PETROL PUMP,NASIK DINDORI ROAD, TAL.
DINDORI, DISTT. NASIK - 422202
PH : 02557.222021

DOMBIVALI

979. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-JS-02). C/O NIRUP TEXTILES, C-3 & 4, MIDC PHASE-1, DHARMA KANTA, NEAR TATA POWER, DOMBIVALI (EAST). - 421201 PH :251-2449789,2445557/8.

DOMBIVIL

980. AUTOMOTIVE MANUFACTURERS LTD. (3901-JS-02), PLOT NO. B-43, PHASE-I, JOMBIYALI INDUSTRIAL AREA, DOMBIVALI, DISTT-THANE, MAHARASHTRA, 421201 PH :0251-2800492/4/5.

QADCHIROLI

981. BARBATE AUTOMOTIVE (INDIA) PVT. LTD. (ARYA CARS) (ZK02-ZIK-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARASTRA - 442702 PH :07132-232220.

GADINGALAJ

982. SAI SERVICE PVT. LTD. (3802-DB-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502 PH :02327-222239.

GANGAPUR

983. PAGARIYA AUTO PVT LTD (2103-MC-03), E-16,WALUJ,AURANGABAD - 431001

GONDIA

984. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2004-4C-02), TII ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601 PH .07182-234567.

QUHAQAR

 JAGRUT MOTORS PVT. LTD. (BJV1-BJV-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGHAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703 PH:9404923981.

HINGANGHAT

986. SEVA AUTOMOTIVE PVT. LTD. (CD21-CD2-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, N+7, AUANTI, HINGANGHAT, TALUK – HINGANGHAT, DISTRICT – WARDHA, MAHARASHTRA. - 442301 PH :9868871099.

ICHALKARANJI

987. SAI SERVICE PVT. LTD. (4D01-4D-01), GATE NO. 107,KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122 PH 1930.2495282

INDAPUR

988. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-NQ-02), STATE HIGHWAY NO. 151, INDAPUR - 412219 PH :02112-2117222500.

ISLAMPUR

989. CHOWGULE INDUSTRIES PVT. LTD.
(P.02-PJ-01), GATE NO.905/A/3, NEAR BOMBAY
RAYAN, PUNE-BANGALOE HIGHWAY (NH-4),
ISLAMPUR TALUKA: WALVA, DIST:SANGLI 415409
PH:225757.

JALGAON

 MANRAJ MOTORS PVT LTD (C401-C4-01), AJINTA ROAD, MIDC INDL AREA, JALGAON -425003
 PH :0257-2212122/23/24.

JALNA

991. AUTOMOTIVE MANUFACTURERS LTD.
(2102-BC-02), PLOT NO. 4 & 5, CTS NO.
11427/4-A, BALAJI COMPLEX,
JALNA-AURANGABAD ROAD, JALNA, - 431203
PH.02482-221143.

JATH

992. CHOWGULE INDUSTRIES PVT. LTD.
(J102-BLX-05), PLOT NO. 12, SAWANT ESTATE,
MORE COLONY, OPP. CATTLE BAZAR, SATARA
ROAD, JATH, DISTRICT SANGLI,
MAHARASHTRA. -416404
PH 19241 -246598

JAYSINGPUR

 SAI SERVICE PVT. LTD. (ASA1-ASA-01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGAON(JAYSINGHPUR), TALUKA: SHIROL, DIST: KOLHAPUR - 416134 PH :02322-225959.

KANKAVALI

994. JAGRUT MOTORS P. LTD. (G301-V7-05), PLOT NO.32-33,SURVEY NO.-1886/1,,MUMBAI-GOA HIGHWAY

(NH-17),JANAVLI,KANKAVLI,MAHARASHTRA -416002

PH:02367-232872/203977, (91)9881467572.

KAPHOL

 S K WHEELS PVT LTD (0515-9C-02), PLOT NO. 42,N-47, KAPHOLI INDUSTRIAL AREA,MUMBAI -PUNE HIGHWAY,MUMBAI - 410203 PH .02192-266243/266470.02192-266243.

KARAD

196. CHOWGULE INDUSTRIES PVT. LTD. (F303-4E-02), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110 PH :02164-660000.

CARJAT

 SIMRAN MOTORS (7S01-TA-03), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201 PH :8108194564.

KAVATE MAHANKAL

998. CHOWGULE INDUSTRIES PVT. LTD. (SC02-SC-01), MAHANKALI BAAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405 PH :02341-222102.

KHAMGAON

999. MANRAJ MOTORS PVT LTD. (BXU1-BXU-01), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON, MAHARASHTRA - 444303 PH:07263-250002/3.

KHARGHAR

1000. EXCELL AUTOVISTA PVT LTD (AAC1-AAC-01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210 PH .022-65999111.

KOLHAPUR

- 1001. SAI SERVICE PVT. LTD. (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR - 416008 PH :0231-2661676.
- 1002. SAI SERVICE PVT. LTD. (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122 PH-1020-248876
- 1003. SAI SERVICE PVT. LTD. (3802-38-06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. -416012

KONGAON

PH:0231-2329495.

1004. PRAKASH AUTO PVT. LTD. (3903-AZ-02), SURVEY NO.126/127,98/38,AT & POST KONGAON, - 421302 PH: 0252-2280264.

KUDAL

1005. JAGRUT MOTORS PVT. LTD. (9801-98-01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA – KUDAL, DISTRICT – SINDUDURG, MAHARASHTRA - 416520 PH :02362-202423.

LATUR

- AUTOMOTIVE MANUFACTURERS LTD. (V801-V8-02), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512 PH :02382-609111/609222.
- 1007. AUTOMOTIVE MANUFACTURERS LTD. (V801-V8-01), CITY SURVEY NO. 2980, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR -413512 PH.02382-861909.

MAHAD

1008. SIMRAN MOTORS (7S01-TX-04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301 PH :02145-223123.

MALEGAON

1009. SHAAN CARS PRIVATE LIMITED (3703-FF-02), PLOT NO. 572/81, CHANDANPURI SHIVAR, OLD MUMBAI, AGRA ROAD, DIST- NASIK, MALEGAON - 423203 PH-02554-237200/237201

MANGAON

1010. SIMRAN MOTORS PVT. LTD. (BAM1-BAM-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBA-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASTHRA. - 402104 PH :02140-261118.

MIRAJ

1011. CHOWGULE INDUSTRIES PVT. LTD. (J102-SD-03), 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410 PH :0233-2643221. 22.

MUMBAI

- 1012. EXCELL AUTOVISTA PVT LTD (0510-05-01), RESHAM SINGH COMPOUND, CST ROAD, KALINA, SANTACRUZ EAST, MUMBAI 400098 PH: 022-67743888.26653242. 43. 46.
- 1013. SAH & SANGHI AUTO AGENCIES PVT.LTD (0505-05-01), PRAKASH MILLS COMPOUND,OFF GLOBE MILLS PASSAGE,WORLI,MUMBAI -400013 PH :022-24925452/53/54, 24965379/80,4925452,
- 1014. SAI SERVICE PVT. LTD. (0504-05-01), 462 SENAPATI BAPAT MARG,WORLI NAKA,LOWER PAREL.MUMBAI - 400013
- PH:022-43030404/43030400.

 1015. SAI SERIVICE PVT. LTD. (0504-05-02), ARVIND CHAMBERS, 194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI 400069 PH:022-43030606 (600,8356242.
- 1016. SAI SERVICE PVT. LTD. (0504-05-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND, DATTA PADA ROAD, BORIVILI (EAST), MUMBAI - 400066 PH :022-4303 0111/103/104/118/120_28707000.
- 1017. SPECTRA MOTORS LIMITED (0508-05-01), PLOT NO.4 & 5, GANESH PLOT OWNER'S ASSN., RAMACHANDRA LANE EXTN. KANCH PADA, MALAD (WEST) MUMBAI - 400064 PH :022-67690063/62/65/90/85/56/68/94,8898999.
- 1018. SPECTRA MOTORS LIMITED (0508-05-02), PLOT NO. 165, CABLE CORPORATION OF INDIA, OFF WESTERN EXPRESS HIGHWAY, BORIVLI (EAST) - 400066 PH :022-66908823/66908826.28542185.
- 1019. SPECTRA MOTORS LIMITED (0508-05-03),
 GANDHI PAREH INIVESTIMENT CORP. LTD, CTF
 NO. 170, MUMBAI AGRA ROAD, NEXT TO
 ASHOK SILK MILL COMPOUND, LBS
 MARG,GHATKOPAR WEST, MUMBAI 400066
 PH:022-664-40000 /664-40111/
 9967017486.864-4000

- 1020. SPECTRA MOTORS LIMITED (0523-05-01), GHATLA VILLAGE, CHEMBUR, MUMBAI - 400071 PH :022 -25200600/25200990/ 25200300 /25208666
- VITESSE TRADING LIMITED (0503-05-01), SHAH INDLESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058 PH :022-26730787/26730280/26730296,6367018.
- 1022. VITESSE TRADING LIMITED (0503-05-02), 77 AF PALKY GULLY, OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025 PH :022-24229747-4223933.
- 1023. AUTOMOTIVE MANUFACTURERS LTD. (3901-05-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAI - 400070 PH:022-61563734 / 61563744 / 61563715.
- 1024. FORT POINT (0521-05-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096 PH :022-41157777, 42432121/2131.
- 1025. SHIVAM AUTOZONE (0531-05-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA - 400067 PH : 022-4109999.
- 1026. VITESSE PVT. LTD. (0503-05-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067 PH .022-28674753/28674754,24229747.
- 1027. SPECTRA MOTORS PVT. LTD. (0508-05-07), C/O DON BOSCO INSTITUTE, VAZIRA NAKA, OFF CHANDARKAR ROAD, BORIVALI WEST, MUMBAI. - 400092 PH .022-28988800.
- 1028. FORTPOINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-03), C/O VARUN STEEL INDUSTRIES, AAM TOOL COMPOUND, BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUHHANA, REAY ROAD, MUMBAI 400010
 PH 1922-64550650
- 1029. K.T.S. AUTOMOTORS PVT. LTD. (0582-05-02), C/O-COZY INDIA, 5, HANSRAJ LANE, BYCULLA, MUMBAI - 400027
- PH :022-23751234,23752301/2/3/5/6.

 1030. PARAMOUNT WHEELS PY. LTD. (3911-05-02).
 CITY SURVEY NO. 639/246, SANTOSH NAGAR,
 FILM CITY ROAD, GOREGAON (E), MUMBAI MAHARASHTRA. 400065
 PH :022-28403742.
- 1031. S K WHEELS PVT. LTD. (0554-05-01), CTS NO.
 151, RAM MANDIR ROAD, SOMANI GRAM, NEXT
 TO CENTRAL WAREHOUSE CORP., OSHIWARA,
 GOREGAON (WEST), MUMBAI 400 104,
 MAHARASHTRA. 400104
 PH :022-9305645454

- 1032. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-02), PLOT NO. 82-ABCD, KANDIVALI INDUSTRIAL ESTATE, OPP. CHARKOP POST OFFICE, CHARKOP, KANDIVALI (WEST), MUMBAI, MAHARASHTR. - 400067 PH :022-9870934444, 41099999.
- 1033. KIRAN MOTORS MAHARASHTRA (05A1-05-01), PLOT NO. B-62/41A, SHREYAS INDUSTRIAL, OFF. NEW LINK ROAD, ANDHERI (WEST), MUMBAI. - 400053 PH:7700934505.

MURBAD

1034. PRAKASH AUTO PVT. LTD. (BYO1-BYO-01), SURVEY NO. 61/2, KALYAN - MURBAD ROAD, VILLAGE – DAHAGAON, TALUKA – MURBAD, DISTRICT – THANE, MAHARASHTRA. - 421605 PH -9028342725

MURGUD

1035. SAI SERVICE PVT. LTD. (AWA1-AWA-01), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219 PH : 02325 - 265553.

NAGPUR

- 1036. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD,NAGPUR - 440035 PH: 0712-6868333.
- 1037. AUTOMOTIVE MANUFACTURERS LTD. (2001-20-02), 575 KAMPTEE ROAD,NAGPUR-26,, - 440026 PH :0712-2630550/6662000/6662001/2652551/2648341
- 1038. SEVA AUTOMOTIVE LTD. (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR -440023
- PH:0712-2500231/6652800.

 1039. SEVA AUTOMOTIVE LTD. (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, 440016 PH:07104-666444.
- 1040. AUTOMOTIVE MANUFACURERS PVT. LTD (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001 PH :0712-6555013/14.
- 1041. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2007-20-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASTRA - 440018 PH :0712-6664777.

1042. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2007-20-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASTRA. - 441202 PH :8888819524.

NANDED

1043. SEVA AUTOMOTIVE LTD. (6801-68-01), NANDED HYDERABAD ROAD, NANDED - 431604 PH:02462-241599.

NANDURBAR

1044. SEVA AUTOMOTIVE LTD. (P301-KW-02), PLOT NO.- 3& 4, BANSITAL NAGAR, NEAR HOTEL KARAN GARDEN HOWFULLY BYE PASS ROAD, NANDURBAR, DIST.- SATARA. - 425412 PH 102564-233000

NARAYANGAON

1045. THE KOTHARI WHEELS (1906-FV-02), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :02132-244002.

NASHIK

- 1046. AUTOMOTIVE MANUFACTURERS LTD. (3702-37-01), P-1-12, ADDITIONAL NASIK INDL. AREA, AMBAD, NASIK - 422010 PH : 0253-6636300/6636329/312/314/317.
- 1047. SEVA AUTOMOTIVE LTD. (3701-37-01), PLOT NO. X - 46,MIDC. AMBAD, NASIK - 422010 PH:0253-2386537.
- 1048. SHAAN CARS PRIVATE LIMITED (3703-37-01), E-3 MIDC AREA, SATPUR, NASIK, MAHARASHTRA - 422007 PH: 0253-2351372.
- 1049. SEVA AUTOMOTIVE PVT LTD (3701-37-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006 PH :0253-6604444.
- 1050. SEVA AUTOMOTIVES PVT LTD (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH :0253-6654444.

NASI

- SHAAN CARS PRIVATE LIMITED (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011 PH :0253-2236080.
- 1052. SEVA AUTOMOTIVE LTD. (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH :0253-6642444.

NAVI MUMBAI

1053. AUTOMOTIVE MANUFACTURERS LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA, SHIRIVANE NERUL, NEW BOMBAY, -400706 PH :022-40183900/40183923/24/28,7614603.

1054. S K WHEELS PVT LTD (0515-9K-01), D-267,TTC INDUSTRIAL AREA,TURBHE,NEW BOMBAY - 400075 PH :022-27625122, 022 - 27625102,27689910, 20,

PH:022-27625122, 022 - 27625102,27689910, 20, 30, 40.

1055. EXCELL AUTOVISTA PVT LTD (AAC1-9K-02), PLOT NO-9,MIDC,NAVADE,TALOJA, TAL-PANVEL,DIST-RAIGAD - 410208

OSMANABAD

1056. CHAVAN AUTOMOBILES (CHAVAN MOTORS DIVISION INDIA P) (B102-LW-03), PLOT NO. 1, TAWADE COMPLEX, PRERANA NAGAR, OSMANABAD, - 413501 PH :02472-228666.

PALQHAR

1057. SAI SERVICE PVT. LTD. (TE01-TE-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404 PH :2525-8308806722

PALUS

1058. CHOWGULE INDUSTRIES PVT. LTD. (J102-0Z-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308 PH:02346-229021.

PANDHARPUR

1059. CHAVAN AUTOMOBILES (CHAVAN MOTORS DIVISION INDIA P) (B102-0H-05), GAT NO.56, ESABAVI, PUNE ROAD, TAL:PANDERPUR, SOLAPUR - 413001 PH :02186-228666.

PANVEL

- 1060. SIMRAN MOTORS (7S01-7S-01), PLOT2-8, SECTOR-15, OPP. HOTEL GARDEN, OLD MUMBAI PUNE HIGHWAY, PANVEL - 410206 PH: 022-2748800, 27462605, 27490365.
- 1061. AUTOMOTIVE MANUFACTURERS LTD. (3901-7S-03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206 PH :09272237071 TO 94.
- 1062. K.T.S. AUTOMOTORS PVT. LTD. (0582-7S-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207 PH 942061135694206611326.

PATAS

1063. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-PR-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH:02111-225009.

PEN

1064. SIMRAN MOTORS (9)01-9I-01), AT POST – VADKHAL NAKA, NH-17, MUMBAI GOA HIGHWAY, TAL – PEN, DISTT. RAIGAD - 402107 PH :02143-269073.

PHALTAN

1065. CHOWGULE INDUSTRIES PVT. LTD. (KH02-KH-01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523 PH :02161-200455.

PIMPLEGAON

1066. AUTOMOTIVE MANUFACURERS PVT LTD
(BAY1-BAY-01), GAT NO.517/P NEAR MARKET
COMMITTEE, MUMBAI AGRA HIGHWAY, NH3
A/P PIMPALGAON BASWANT, TALUKA: NIPHAD,
DIST-NASHIK - 422202
PH : 02550-252808.

PUNE

- 1067. MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, ANDH-CHINCHWAD ROAD. OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHITRA PH 1020-65001981.
- 1068. ACE KUDALE CAR PVT. LTD. (1910-19-01), 36/2C/1, MANRAJ BUDRUK, PUNE-SOLHAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE -412201 PH :020-30456441/447/413.
- 1069. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-02), S.NO. 53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046 PH :020-26959460: 66786200.
- 1070. CHOWGULE INDUSTRIES PVT. LTD. (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE 411046
- PH:020-66803555.

 1071. MY CAR (PUNE) PVT LTD (1907-19-01), SURVEY NO. 131, MUMBA! BANGALORE HIGHWAY, WAKAD, PUNE 411057
 PH:020-3988333,39810920.
- 1072. SAI SERVICE PVT. LTD. (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012 PH:020-46404440/48.
- 1073. SAI SERVICE PVT. LTD. (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004 PH:020-41401141/40.

- 1074. SAI SERVICE PVT. LTD. (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH :020-41402222/240/241/242/243.
- SAI SERVICE PVT. LTD. (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE -411019
 PH :020-46605999/95.
- 1076. THE KOTHARI WHEELS (1906-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039

PH:020-66874100

- 1077. WONDER CARS (P) LTD (1903-19-02), 12, NPS LINES, SOLAPUR ROAD, OLD POOL GATE, CAMP, PUNE - 411001 PH :020 - 26332934/35.
- 1078. SEHGAL AUTORIDERS (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021 PH :020-8308304444/41463625/41463627.
- 1079. SAI SERVICE PVT. LTD. (1901-19-06), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057
- 1080. ACE KUDALE CAR PVT. LTD. (1910-19-02), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMAL, BHOSARI PUNE - 411039 PH .020-2030662009.
- 1081. THE KOTHARI WHEELS (1906-19-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019

PH:020-66352600.

PH:020-204200700.

- 1082. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-03), S9IA, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH :020-30217000, 67270000.
- 1083. SUMANKIRTI CARS PVT. LTD. (1915-19-01), SR. NO.131 OPP. SAI PETROL PUMP, PUNE MUMBAI EXPRESSWAY, TAHWADE, PUNE - 411033 PH :020-66333209.
- 1084. WONDER CARS PVT. LTD. (1903-19-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. -411018

PH:020-27130171/2/3/8.

- 1085. SAI SERVICE PVT. LTD. (1901-19-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. - 411048 PH :020-71727001/2/3/4/5/6/7.
- 1086. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE -411016 PH 1020-67290018/17.

- 1087. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEFIU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033 PH :020-67915700.
- 1088. SAI SERVICE PVT. LTD. (1901-19-08), SURVEY
 NO. 37, HISSA NO. 2. SITUATED AT WADDAGAON
 KHURD, NEAR NANDED CITY, SINHAGAD ROAD,
 TALUKA HAVELI, DISTRICT PUNE,
 MAHARASHTRA.
 PH :020-24391399.
- 1089. THE KOTHARI WHEELS (1906-19-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. -411028 PH :020-26871020, 8411002011.
- 1090. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-06), SR. NO. - 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE: SATARA ROAD, PUNE: - 411009 PH:020-67273200.
- 1091. MOTO DRIVE PVT. LTD. (1916-19-01), 1337/1, REALITY BUILDING, WAGHOLI, PUNE NAGAR ROAD, PUNE. - 412207 PH: 9130049309.
- 1092. MOTO DRIVE PVT. LTD. (1916-19-02), GAT NO.1346/1, UBBALENAGAR, WAGHOLI, PUNE NAGAR ROAD, PUNE. - 412207 PH :9130049309.
- 1093. EXCELL AUTOVISTA PVT. LTD. (1917-19-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST PUNE. - 412308 PH.9320357300.
- 1094. THE KOTHARI WHEELS (1906-19-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181-6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH :020-27030400/444.
- 1095. ACE KUDALE CAR PVT. LTD. (1910-19-03), SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA – HAVELI, DISTRICT – PUNE. - 412105 PH :020-9423123665.

RAHATA (SHIRDI)

1096. KANKARIYA AUTOMOBILES PVT LTD (ZV03-ZV-01), SHIRDI ROAD, SAKORI, RAHATA, -423107 PH :2423-243541.

RAJAPUR

1097. JAGRUT MOTORS P. LTD. (AHA1-AHA-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702 PH :02355-252238.

RATNAGIRI

1098. JAGRUT MOTORS P. LTD. (G301-G3-01), D-25,,MIDC MIRJOLE,MAHARASTRA,RATNAGIRI - 415639

PH:02352-228380, 28380.

1099. SHAAN CARS PRIVATE LIMITED (HE03-HE-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605 PH :888846450.

SANGLI

1100. CHOWGULE INDUSTRIES PVT. LTD. (J102-J1-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH :0233-6631300.

SASWAD

 CHOWGULE INDUSTRIES PVT. LTD. (1908-PH-03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301 PH : 02115-224450: 225210.

BATARA

1102. CHOWGULE INDUSTRIES PVT. LTD. (F303-F3-01), PLOT NO. B-2,OLD MIDC,SATARA -415002 PH :02162-245941/2/3.

SAWANTWADI

1103. JAGRUT MOTORS PVT. LTD. (BBL1-BBL-01), SHIVSHAMBHO AFARTIMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.338, TAL-SAWANTWADI, DISTT. SINDHUDURG. -416510 PH :9765000872, 9823564372.

SHAHAPUR

1104. SHIVAM AUTO ZONE (I) PVT. LTD.
(BZU1-BZU-01), DR. DESHPANDE COMPOUND,
NEAR BHATSA COLONY, VILLAGE —
GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT —
THANE, MAHARASHTRA – 421601
PH :3002111222.

SHIRUF

1105. MAHALAXMI AUTOMOTIVES PYT. LTD. (1912-2D-02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA - 412210 PH :02138-615000.

SHIRWAL

1106. CHOWGULE INDUSTRIES PVT. LTD. (BSD1-BSD-01), GAT NO 175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH :02169-244044.

SHRIRAMPUR

1107. KANKARIYA AUTOMOBILES PVT LTD
(LV03-LV-01), S.NO.139/1/3, NEAR NAKA NO.4,
SANGAMNER ROAD, SHRIRAMPUR DISTT.
AHMEDNAGAR - 413709
PH :02422-210264.

SILLOD

1108. PAGARIYA AUTO PVT. LTD. (2103-ZG-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :9860999468.

SINNAR

1109. SHAAN CARS PRIVATE LIMITED (3703-FU-03), A-24, MIDC AREA MALEGAON, SINNAR TAL-SINNAR, - 422103 PH-02551-230300

SOLAPUR

- 1110. CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-B1-02), 150, AKALKOT ROAD, OPP. SVCS HIGH SCHOOL, SOLAPUR, -413006 PH :217-2606666.
- 1111. CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-B1-01), 18,39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224

PH:0217-2378888, 2373999.

1112. SHIVAM AUTOZONE (BIN1-BIN-01), SURVEY NO. 191/1 PLOT NO. 5, AT-POST – VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606 PH :02521-220777.

THANE

TALASARI

- 1113. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE PH 1022-25872922
- FORT POINT (3906-39-01), KOTHARI
 WAREHOUSE NO. 111, POKHRAN ROAD NO.
 MANPADA, CHATALSAR, THANE 400607
 PH. 022-41157777. 41515300, 25897170.
- 1115. NAVNIT MOTORS LTD (3908-39-02), B R T PLOT ,THANE (W) ,MAHARASHTRA - 400607 PH:022-66066666.
- 1116. SPECTRA MOTORS LIMITED (0508-39-04), B-74,ROAD NO. 33,NEAR ESI HOSPITAL,WAGLE ESTATE, THANE - 400604 PH :8.8796660053E-017.
- 1117. SPECTRA MOTORS LIMITED (0508-39-06), C/O MONARCH PLASTICS, GALA NO.4, MIRA CO-OP. INDUSTRIAL ESTATE, KASHIMIRA, THANE -401104 PH :022-28542185.

PARAMOUNT WHEELS PVT. LTD. (3911-39-01),
 OPP. PREMA LAXMAN SCHOLL. PANKERPADA,
 MIRAROAD(E), DIST: THANE - 401107
 PH :022- 42939344/45/51/52/53.

TITWALA

1119. PRAKASH AUTO PVT. LTD. (BYP1-BYP-01), SHOP NO. 1, SURVEY NO. 22/2, GOVELI – TITWALA ROAD, VILLAGE – GHOTSAI, TITWALA, TALUKA – KALYAN, DISTRICT – THANE, MAHARASHTRA. - 421605 PH 10251-3240040, 9960023999.

ULHASNAGAR

1120. PRAKASH AUTO PVT. LTD. (3903-39-01), U NO-3,SHEET NO. 30,VITHALWADI STATION ROAD, ULHASNAGAR - 421003 PH :0251-3228525/3257934.2561582.

VADILI

 CHOWGULE INDUSTRIES PVT. LTD. (F303-G0-03), KALEVASTI, VADUJ DAHIWADI ROAD, VADUJ - 415506 PH :02161-23223/232030.

VASAI

- 1122. SAI SERVICE PVT. LTD. (0504-V9-03), C/O PRASHANTI INVESTMENT LTD., NEAR GAODEVI TEMPLE, VILLAGE SATIVILI, DISTT. THANE -401208 PH: 0250-9552590086 /87 / 0250-2480583/2481474 912456685, 453583.
- 1123. SAI SERVICE PVT. LTD. (V901-V9-01), ANDRADESH BHAVAN, SURVEY #27 A,NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASTRA - 401202 PH -980460220962 / 0552527214

VIRAR

1124. SAI SERVICE PVT. LTD. (V901-PG-02), VILLAGE-WATAR, VIRAR(W)-TAL- VASAI, DISTRICT-THANE, MAHARASHTRA - 401301 PH:8605000906 / 0250-2584105 / 2584015.

VITA

1125. CHOWGULE INDUSTRIES PVT. LTD. (BSE1-BSE-01), S NO. 900, HISSA NO. 1,2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA – KHANAPUR, DISTRICT – SANGLI, MAHARASHTRA - 415311

WADA

1126. PARAMOUNT WHEELS PVT. LTD. (BXD1-BXD-01), SURVEY NO. 133/71, WADA BHIWANDI ROAD, VILLAGE GANDARE, POST KONE, TALUKA WADA, DISTT. PALGHAR (MAHARASHTRA) - 421303 PH 102526-8411933992.

WAGHOLI

1127. SAI SERVICE PVT. LTD. (1901-AB-04), GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL- HAVELI, DIST- PUNE - 412207 PH: 020-4640333/31/32.

WAI

1128. CHOWGULE INDUSTRIES PVT. LTD.
(BYCT-BYC-01), GAT NO. 407, A/P
SHENDURJANE, MIDC FOAD, NEAR HOTEL
GANDHARVA, OPP. DHOM LEFT CANAL, TAL—
WAI, DISTT. SATARA - 412803
PH 3805095200. 8805 19820. 9922992887.

WANI

1129. HIMALAYA CARS (4M01-0I-02), YASH LAWNS, COLLEGE/NAGPUR ROAD, TALUKA:WANI, DISTRICT-YAVATMAL, MAHARASHTRA - 445304 PH :07239-228888.

WARDHA

1130. SEVA AUTOMOTIVE LTD. (2002-AC-02), GOPURI CHOWK, OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001 PH :07152-253545/253525.

WARU

1131. ASPA BANDSONS AUTO (P) LTD (F201-UG-04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906 PH : 07229-232888.

WASHIN

1132. ASPA BANDSONS AUTO (P) LTD (F201-9D-02), NEAR RAILWAY CROSSING,HIGOLI ROAD,WASHIM, 444505 PH :07252-233999.

YAVATMAL

1133. HIMALAYA CARS (4M01-4M-01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001 PH :07232-249992.

YEOL

1134. SEVA AUTOMOTIVES PVT LTD (BST1-BST-01), GAT NO. 65-A, PLOT NO. 41, AIMED NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA – YEOLA, DISTRICT – NASHIK, MAHARASHTARA. - 423401 PH 10299-268168.

YEWAT

1135. MAHALAXMI AUTOMOTIVES PVT. LTD. (AZA1-AZA-01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). -412202 PH. 9881254892.

THANE

1136. PARAMOUNT WHEELS PVT. LTD. (3911-39-03), B-2, MIDC, MIRA ROAD, OFF NH-8, THANE. -401107 PH: 022-9004999360.

MANIPUR

1137. EASTERN MOTORS (BBE1-BBE-01), HMUIA VENG, TEDDIM ROAD, CHURACHANDPUR, MANIPUR - 795128 PH :03874235969, 9862555472.

IMPHAL

CHURACHANDPUR

- 1138. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR PH:0385-330856, 226816/2056962.
- EASTERN MOTORS (7401-74-02), NH,39, CHINGMEIRONG, WEST, IMPHAL. - 795010 PH: 0385-2422152.

THOUBA

1140. EASTERN MOTORS (BJL1-BJL-01), THOUBAL ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138 PH :3848-9862662225.

MEGHALAYA

JOWAI

1141. RANI MOTORS (3101-31-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150 PH : 03652-204025.

KHLIEHRIAT

1142. BANALARI WORLD CARS (8502-PZ-03), JOWAI-SICHAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150 PH :3655-9856299493.

MAWNGAP

1143. BANALARI WORLD CARS (CBK1-CBK-01), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST.-EAST KHASI HILLS, MEGHALAYA. - 793121 PH:9774537902.9615101743.

NONGPOH

1144. RANI MOTORS (8501-TN-05), NEAR D.T.O.
OFFICE, G.S. ROAD, NONGHPOH, RIBHOI
DISTT. - 793102
PH :03662-977401910/9774012380.

NONGSTOIN

1145. RANI MOTORS (8501-0P-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119 PH :9863022955.

SHILLONG

1146. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017 PH:364-09436111128/2575045.

1147. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014 PH:0364-241581.

1148. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021 PH:364-2535189, 2231287.

NAGALAND

DIMAPUR

1149. PROGRESSIVE MOTORS (3201-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112 PH :03862-30887, 30992.

KOHIMA

1150. PROGRESSIVE MOTORS (3201-4N-02), NH-39, NEAR INDIAN OIL PETROL PUMP, KOHIMA, -797001 PH: 03862-230987.

ORISSA

BERHAMPUR

1151. SKY AUTOMOBILES (E203-E2-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE – KONISI, BERHAMPORE, GANJAM, ODISHA. - 761008 PH:7381266000.

BHUBANESHWAR

1152. JYOTE MOTORS (0402-04-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. 751010

PH:7064499362. CHANDIKHOLE

1153. SKY AUTOMOBILES (BXL1-BXL-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA, - 755044 PH -9583000001.

JALESWAR

1154. JYOTE MOTORS PVT. LTD. (BXP1-BXP-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. -NAYABAZAR, JALESWAR, DIST.- BALASORE, ODISHA. - 756032 PH:8599019867.

NIMAPARA

1155. NARAYANI MOTORS PVT. LTD. (CFL1-CFL-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA. - 752106 PH 9583001877.

SUBARNAPUR

1156. ODYSSEY MOTORS PVT. LTD. (BUK1-BUK-01), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNPUR, ODISHA - 767017 PH -9439314464.

ANGIII

1157. ODYSSEY MOTORS PVT. LTD. (W101-W1-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145 PH :06764-221079, 221669.

BALASORE

1158. JYOTE MOTORS PVT LTD (L501-L5-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST. -BALASORE - 756019

BARGARH

1159. ODYSSEY MOTORS (P) LTD (D401-SJ-04), AT/PO
-BARGARH, NH-6, DISTT.-BARGARH, ORISSA 768028
PH : 06646 -246533.

BARIPADA

1160. JYOTE MOTORS PVT LTD (L501-RQ-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001 PH :6792-211200.

BERHAMPUR

 SKY AUTOMOBILES (E203-E2-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002 PH:7381266000.

BHADRAK

1162. JYOTE MOTORS PVT LTD. (IZ01-IZ-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK, ODISHA -756101 PH 90726815001

BHAVANIPATNA

1163. LEGEND CARS PVT. LTD. (SW01-TB-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001 PH:06670 -233345.

BHUBANESWAR

1164. JYOTE MOTORS PVT LTD (0402-04-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003 PH : 0674-2436829.

1165. NARAYANI MOTORS PVT LTD (0403-04-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR -751006 PH :0674-572872, 873.

- 1166. SKY AUTOMOBILES (0404-04-01), PLOT NO. -435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022 PH :674-2725912/2725992.
- 1167. NARAYANI MOTORS PVT LTD (0403-04-02), PLOT NO 56 AND 57, RASULGARH, BHUBANESHWAR, ODISHA - 751010 PH :0674-2588476.

BOLANGIR

1168. ODYSSEY MOTORS (P) LTD (D401-MW-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001 PH -6652-230031

CUTTACK

1169. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011 PH:0671-2686527.

DHENKENAL

1170. SKY AUTOMOBILES (6701-4P-04), PLOT NO-136/1103, KATHAGARA, NEARASSAM OIL, NH-42, DHENKANAL. - 759001 PH:06762-243048-49.

JAJPUI

 SKY AUTOMOBILES (6701-RZ-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019
 PH :06726-9583 (04012)

JEYPORE

1172. LEGEND CARS PVT. LTD. (SW01-SW-03), SOURAGUDA, JEYPORE, DISTT-KORAPUT, ORISS A, INDIA - 764001 PH : 08854 - 230624.

JHARSUGUDA

1173. ODYSSEY MOTORS PVT LTD (BJU1-BJU-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201 PH :0663-4030011, 4075000.

KEONJHAI

- 1174. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA PH:06766-256466.
- 1175. JYOTE MOTORS PVT. LTD. (7U01-7U-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. 758001 PH: 9776615001.

NAYAGARH

1176. JYOTE MOTORS PVT LTD (0402-DC-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH -752069 PH : 06753-225394.

PARADEEP

1177. NARAYANI MOTORS PVT LTD (0E01-0E-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. -754141 PH:9583022020.

PURI

1178. NARAYANI MOTORS (4Q01-4Q-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002 PH:06752-231323.

ROURKELA

1179. ORBIT MOTORS (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041

SAMBALPUR

1180. ODYSSEY MOTORS (P) LTD (D401-D4-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH:0663-522102 - 03 -04-05.

PONDICHERRY

PONDICHERRY

1181. SHENBAKA CARS PRIVATE LIMITED (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY -605010 PH:0413-2293391/92/93.

PUNJAB

ABOHAR

1182. TARA AUTOMOBILES (H501-H5-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB - 152116 PH :01634-28313-14.

AJNALA

1183. SWANI MOTORS PVT. LTD. (CBP1-CBP-01). KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL -AJNALA, DISTRICT - AMRITSAR, PUNJAB. -143102 PH. 1858-220401.

AMRITSAR

- 1184. JAYCEE MOTORS (1702-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH :0183-581334, 581335.
- 1185. RISHABH FOURWHEELS PVT. LTD. (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH :0183-2263369.
- 1186. SWANI MOTORS LTD. (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001 PH:0183-400404.

ANANADPUR SAHIB

1187. C M AUTOSALES (OF01-OF-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB,TEHSIL ANANDPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123 PH :01887-9592916811.

BALACHAUR

1188. LOVELY AUTOS (XV01-XV-01), NEAR MCDONALD – GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICTS-BS. NAGAR, PUNJAB (NAWANSHAHR) - 144521 PH 9878427910.

RANGA

1189. LOVELY AUTOS (3503-MS-03), NAWASEHAR-JALANDHAR ROAD, BANGA -144505 PH :01823-7355560557.

RANUR

1190. TRICITY AUTOS PVT. LTD. (BRT1-BRT-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB-140601 PH-01762-660880.

BARNALA

1191. MAX AUTOS (4S01-4S-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB -151001 PH :01679-285022, 9216529220.

BATALA

- 1192. CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, PH. :01871-98724024253.
- 1193. PATHANKOT VEHICLEADES PVT. LTD. (A701-V5-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505 PH :01871-246246, 246245.

BHADSON

1194. HIRA AUTOMOBILES (BAG1-BAG-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202 PH :8872034034, 9217048236.

BHATIND

1195. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001 PH :0164-2235349, 50.

BHOGPUR

1196. LOVELY AUTOS PVT. LTD. (BRU1-BRU-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY, OPP-AJIT PALACE, BHOGPUR - 144201 PH :9872030006.

CHUNNI KALAN

1197. HOSHIARPUR AUTOMOBILES (CFG1-CFG-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307 PH :1763-248005. 9815131766.

DASUVA

1198. HOSHIARPUR AUTOMOBILES (H402-8D-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205 PH :01883-238892.

DERABASSI

1199. AUTOPACE NETWORK (P) LTD (0705-AW-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507 PH :01762-9815011669.

EVIGARH

 HIRA AUTOMOBILES (OG01-OG-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111 PH: 0175-2631152.

FARIDKOT

1201. MAPSKO AUTO INDIA PVT. LTD. (4U02-4U-01), FARIDKOT. KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204 PH :01639 - 253001.

FAZILKA

1202. TARA AUTOMOBILES (H501-4V-03), NH-10, NEAR SARVHITKARI BAL VIDYA MANDIR, FAZILKA - 152116 PH :01638-260213.

FEROZEPUR

1203. BABA AUTOS (7C01-7C-01), MOGA ROAD, FEROZEPUR CANTT - 152002 PH:01632-8872013211.

QARHSHANKAR

1204. HOSHIARPUR AUTOMOBILES (H402-V4-02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. PH.:01884-2283151.

GIDDARBAHA

1205. HIRA AUTOMOBILES (AUA1-AUA-01), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBAHA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101 PH :01637-231510.

GORAYA

1206. LOVELY AUTOS (BJR1-BJR-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH:01826-261001.

GURDASPUR

- 1207. PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521 PH :01874-247245, 247246.
- 1208. PATHANKOT VEHICLEADES (A701-4X-06), VPO JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH :01874-247244.

HOSHIARPUR

1209. HOSHIARPUR AUTOMOBILES (H402-H4-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001 PH :01882-251674, 250656, 309212.

JAGRAON

1210. SANDHU AUTOMOBILES (6206-LT-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :01624-258558 ,9876727296.

JAITU

1211. MAPSKO AUTO INDIA PVT. LTD. (YX02-YX-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT – FARIDKOT. - 151202 PH:7347000520.

JALALABAD

1212. TARA AUTOMOBILES (H501-8E-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH:01638-252913.

JALANDHAR

- 1213. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :0181-237001, 02.
- 1214. STAN AUTOS PVT LTD (3504-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR 144010

JANDIALA MANJKI

1215. LOVELY AUTO (BJS1-BJS-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE – JANDIALA MANJKI, TEHSIL – NOORMAHAL, DISTRICT – JALANDHAR, PUNJAB. - 144033 PH.:7087439797.

JANDIALAGURU

1216. BABA AUTOS (7C01-GL-03), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU -143115 PH :0183-8872013029.

KAPURTHALA

1217. STAN AUTOS PVT LTD (3504-42-03), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602 PH :01822-8872000288 8872000618. 9779623949.

KHANNA

1218. SANDHU AUTOMOBILES PVT. LTD. (N301-N3-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST. -LUDHIANA, PUNJAB. - 141401 PH :1858-220401.

CHARAR

 CM AUTOSALES PVT. LTD. (7K01-JH-03), NH-95, MORINDA ROAD, KHANPUR, KHARAR. DIST. MOHALI - 140301
 PH :0160-9915022878.

LUDHIANA

- 1220. GULZAR MOTORS LTD. (6204-62-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003
- PH:0161-534953, 534952, 543704, 5.
- 1221. LIBRA AUTO CAR CO. LTD (6207-62-01), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020 PH:0161-2512701, 03.
- 1222. LIBRA AUTO CAR CO. LTD (6207-62-02), G.T ROAD, NEAR AIRPORT, LUDHIANA. - 141020 PH:0161-2512701 . 03.
- 1223. SANDHU AUTOMOBILES (6206-62-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA 141203 PH : 0161-2534514, 2535107.
- 1224. STAN AUTOS PVT LTD (6203-62-01), G.T.ROAD, NEAR SHERPUR CHOWK, LUDHIANA - 141003 PH:0161-542300. 545800.
- 1225. STAN AUTOS PVT LTD (6203-62-04), HAMBRAN ROAD, LUDHIANA - 141001 PH: 0161-2304487.
- 1226. SWANI MOTORS SERVICES PVT. LTD. (6208-62-01), 523, G.T. ROAD, NEAR DHANDHARI RLY STATION, LUDHIANA - 141010 PH :0161-2510583, 2510883.
- 1227. STAN AUTOS (6203-62-06), OPP. BHAI BALA GURUDWARA SAHIB OPP. PAKHOWAL ROAD, LUDHIANA - 141008 PH :0161-9257243406.
- 1228. SWANI MOTORS SERVICES PVT. LTD. (6208-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA - 141003 PH :0161-5092244.
- 1229. SWANI MOTORS SERVICES PVT. LTD. (6206-62-03), KHASRA NO. 114, 118, 119, 121/1/1, 121/2/1 OF VILLAGE-THREEKE, HADBAST NO. 156, AYALI CHOWK, FEROZEPUR ROAD, LUDHIANA, PUNJAB. - 141003 PH :0161-2802074, 7859825/175.
- 1230. STAN AUTOS PVT. LTD. (6203-62-07), B-32/751 JALANDHAR BYE PASS CHOWK NEAR SABJI MANDI, LUDHIANA. - 141005 PH:8872640004.

1231. STAN AUTOS PVT LTD (6203-62-08), PLOT NO 3, HB NO. 261, GIASPURA, GT ROAD (NEAR DHANDARI RAILWAY STATION), LUDHIANA, PUNJAB - 141014 PH :161-5043044,8872640004.

MACHIWARA

1232. SANDHU AUTOMOBILES (6206-9T-03), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH :01628-250577.

MAHILPUR

1233. HOSHIARPUR AUTOMOBILES (H402-DD-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105 PH :01884-246997, 9915157997.

MALERKOTLA

1234. MAX AUTOS (CCI1-CCI-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023 PH :9814403131 , 9056903131.

MALOUT

1235. HIRA AUTOMOBILES LTD. (6302-LE-05), TINKONI CHOWK, NEAR LIC BUILDING, MALOUT - 152107 PH:01637-299524, 264724.

MANDI GOBINDGARH

1236. HOSHIARPUR AUTOMOBILES (U903-U9-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301 PH:0176-5523628, 9878432739.

MANSA

1237. TARA AUTOMOBILES (7002-TL-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA, PUNJAB - 151505 PH :01652-216042.

ADOI

- 1238. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA PH:1636-226807.
- 1239. REMIRA MOTORS PVT. LTD. (H602-H6-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001 PH :7087025402.

MOHALI

- 1240. STAN AUTOS PVT LTD (L104-L1-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH :0172-5020786, 5044849, 5020739.
- 1241. STAN AUTOS PVT LTD (L104-L1-02), PLOT NO.C-147, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH:0172-5020739.

1242. C M AUTOSALES PVT. LTD. (0706-L1-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI – PUNJAB - 140110 PH :8284800597.

AUKERIAN

1243. HOSHIARPUR AUTOMOBILES (IP01-IP-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN -144211 PH: 01883-217346.

MUKTSAR

1244. HIRA AUTOMOBILES LTD. (6302-J8-03), BHAI COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB - 152026 PH :64642.

MULLANPUR

1245. SANDHU AUTOMOBILES (YY01-YY-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101 PH :8437025969.

NABH

1246. HIRA AUTOMOBILES LTD. (6302-UF-06), RADHA SWAMI ROAD, NABHA - 147201 PH:01765-8437602800.9217048403.

NAKODAR

1247. LOVELY AUTOS (3503-5B-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040 PH :01821-7355554666, 9915028603.

NANGAL

1248. CM AUTOSALES PVT. LTD. (7K01-8F-02), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB -140126 PH - 1884-0915022897

NAWANSHAHR

1249. LOVELY AUTOS (3503-J7-02), NAWANSHAHR CHANDIGARH ROAD, VILL- LANGROHA, DISTT:-NAWANSHAHR, PUNJAB - 144514 PH:01823-7355560006.

PATHANKOT

- 1250. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-01), NEAR MAMOON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001 PH :0186-47273.
- 1251. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-04), NEAR A. B. COLLEGE, PATAHANKOT - 145001 PH :0186-2233701, 9417900828.

PATIALA

1252. HIRA AUTOMOBILES LTD. (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001 PH :0175-2232377.

- 1253. HIRA AUTOMOBILES LTD. (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001 PH:0175-2360131, 2360132, 2360562.
- 1254. HIRA AUTOMOBILES (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001 PH: 0175-2232295, 2232296.
- 1255. ATELIER AUTOMOBILES PVT. LTD. (6303-63-01), VILLAGE MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR CASABA RESORT, PATIALA -147001 PH.7527000106.

PATRAN

1256. HIRA AUTOMOBILES LTD. (6302-V3-02), NARWANA ROAD, PATRAN, PUNJAB, - 147105 PH:01764-244445, 245788.

PHAGWARA

1257. STAN AUTOS PVT LTD (3504-5C-02), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH: 01824-508067.

POHIR

1258. STAN AUTO (6203-XS-05), NEAR AHMEDGARH BYE PASS, POHIR, DISTRICT-LUDHIANA -148101

PH:0161-2885500, 2885100.

PH:01624-8437700026.

1259. SANDHU AUTOMOBILES PVT. LTD. (XT01-XT-01), BARNALA BY PASS ROAD, RAIKOT - 141109

AJPURA

1260. HIRA AUTOMOBILES LTD. (HK01-HK-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA - 140401 PH:01762-244881-84.

RAMPURA PHUL

1261. TARA AUTOMOBILES (XR01-XR-01), RAMPURA
-BARNALA ROAD, RAMPURA PHUL - 151103
PH:01651-266643.

ROPAR

1262. CM AUTOSALES PVT. LTD. (7K01-7K-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH:01881-9915022802.

SANGRUR

1263. MAX AUTOS (G401-G4-01), DHURI ROAD, SANGRUR, - 148024 PH :1672-39627.

SULTANPUR LODHI

1264. STAN AUTO (3504-ZY-04), NEAR TALWADI BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA - 144626 PH -01878-294222

TALWANDI SABOO

1265. TARA AUTOMOBILES (ON01-ON-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWANDI SABO, BHATINDA -1551302 PH :9646691047. 8437008666.

TALWARA

1266. HOSHIARPUR AUTOMOBILES (H402-LR-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216 PH : 01883-238899, 295899, 9501084500.

TANDA

1267. HOSHIARPUR AUTOMOBILES (H402-DE-06), VILL-PULPUKHATA, MIANI ROAD, TANDA -144203 PH :01886-294320.

TARN TARAN

1268. JAYCEE MOTORS (BLP1-BLP-01), VILLAGE – KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401 PH :9780188456.

ZIRA

1269. BABA AUTOS (7C01-GK-02), FEROZEPUR ROAD, ZIRA - 142047 PH :1682-8437700230.

ZIRAKPUR

1270. TRICITY AUTOS (9M01-9M-01), PATIALA HIGHWAY,VILLAGE - NABHA, ZIRAKPIR, PUNJAB - 140603 PH - 9878359054

RAJASTHAN

ABU ROAD

 NAVNEET MOTORS (OQ01-OQ-01), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026 PH :7665000995.

AJMER

- 1272. AJMER AUTO AGENCIES PVT. LTD. (B201-B2-01), SRINAGAR ROAD,AJMER (RAJASTHAN) - 305001 PH:0145-2426468.
- 1273. RELAN MOTORS (B203-B2-01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001 PH:9251057111.

1274. RELAN MOTORS (B203-B2-02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001 PH :9251019000.

ALWAR

1275. M.G. MOTORS (F901-F9-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001 PH :0144-732236.

BAGRU

1276. PREM MOTORS PVT. LTD. (US02-US-01), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPUR - 303007

BALOTRA

1277. L.M.J.SERVICES LTD (6502-9G-05), JODHPUR BALOTRA ROAD,BALOTRA, RAJASTHAN -344022 PH 10288-22068

BANSWARA

1278. NAVNEET MOTORS (X903-X9-01), NEAR J.C. MILL,OPPOSITE AKASHWANI,DAHOD ROAD,BANSWARA - 327001 PH :02962-201123.

BARAN

1279. BHATIA & COMPANY (6101-PM-03), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205 PH:07453-230312.

BARMER

1280. L.M.J.SERVICES LTD (6502-SH-06), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001 PH :2982-224641.

BASSI

1281. PREM MOTORS PVT. LTD. (VF02-VF-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN -303301 PH:8058794085.

BEHROR

1282. M G MOTORS (FQ01-FQ-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701 PH :8003165999.

BHARATPUR

1283. TM MOTORS PVT. LTD. (5J01-5J-01), BRIJ VIHAR COLONY,MADARPUR ROAD,BHARATPUR,RAJASTHAN - 321001 PH :5644-226156.

BHILWARA

1284. CHAMPION CARS (E302-E3-01), CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001 PH:1482-513147. 1285. LOHIA AUTOMOBILES (E301-DELHI-01), AJMER ROAD,NEAR OCTROI POST,BHILWARA - 311001 PH :1482-28061, 36934, 51419.

RHIWADI

1286. FORTUNE CARS (9H01-9H-01), OPP. INDAG RUBBER,MAIN ROAD ,BHIWADI - 301019 PH :1493-645678.

1287. FORTUNE CARS (9H01-9H-02), F-458-C, RIICO, INDUSTRIAL AREA, BHIWADI -301019 PH:1493-645682.

BIJOLIA

1288. LOHIA AUTOMOBILES (E301-UA-02), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTOR-BIJOLIA HIGHWAY, BIJOLIA, DIST. BHILLWARA - 311602 DH 9600515000

BIKANER

1289. AUDI MOTORS LTD (7101-71-01), OPP. URMUL DAIRY PLANT, GANGANAGAR ROAD, BIKANER -334004

PH:0151-522831, 61846.

1290. AUDI MOTORS LTD (7101-71-04), JAIPUR BYE PASS,BIKANER , - 334004

PH:141-2793924-7. 1291. AUDI MOTORS LTD (7101-71-05), OPP.

AVYYAPPA TEMPLE, K. K. COLONY, BIKANER -334003 BH 151 2020284

PH:151-2230384. BUNDI

1292. BHATIA & COMPANY (6101-EF-02), 13-16B,INDUSTRIAL ESTATE,KOTA - 323301 PH -0747-2445457

CHAKSU

1293. K.P. AUTOMOTIVES (P) LTD. (1104-JM-03), TONK ROAD, CHAKSU - 303901 PH :1429-243517.

CHIRAWA

1294. AUDI MOTORS LTD. (SY02-SY-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026 PH :8696543583.

CHITTORGARH

1295. BHATIA & COMPANY (K901-K9-01), PLOT NO. 1001/1-1002/1,NIMBAHERA ROAD,CHITTORGARH - 312001 PH:1472-235299.

CHOMU

1296. SANGA AUTOMOBILES PVT. LTD. (HW01-HW-01), OPPOSITE POWER HOUSE, MORIJA ROAD, CHOMU - 303702 PH :01423-223102.

CHURU

1297. AUDI MOTORS PVT LTD (MD03-MD-01), NEAR DTO OFFICE, JAIPUR ROAD, CHURU - 331001 PH:8875009044.

DAUSA

1298. VIPUL MOTORS LTD. (1102-FM-03), AGRA JAIPUR ROAD, DAUSA - 303303 PH :1427-222158.

DEOLI

1299. K.P. AUTOMOTIVE (Z001-Z0-01), KOTA- JAIPUR HIGHWAY, NH-12, DEOLI - 304804 PH:9549651778.

DIDWANA

1300. SHRI MANGALAM AUTO PVT. LTD. (FT03-FT-01), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA, DISTRICT – NAGAUR. - 341303 PH:7231912912.

DUDU

1301. PREM MOTORS PVT. LTD. (BRY1-BRY-01), KHASRA ND.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008 PH :8058411181.

DUNGURPUR

1302. NAVNEET MOTORS (4902-GP-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001 PH:2964-233788.

FATEHNAGAR

 TECHNOY MOTORS INDIA PVT. LTD. (4903-SV-03), UDAIPUR ROAD, OPP. HERO HONDA SHOWROMM, FATEHNAGAR, UDAIPUR - 313205
 PH. 2955-220304.

HANUMANGARH

1304. AUDI MOTORS LTD (7101-S7-03), JUNCTION TOWN ROAD, HANUMANGARH - 335512 PH:01552-231295.

MINDALIN

1305. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S002-S0-01), KHASRA NO. 73°, VILLAGE - PATTI NAPAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN. - 322230 PH :8875005912.

JAIPUR

1306. KATARIA AUTOMOBILES (1181-11-01), 1-A; NARAYANPURI,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034 PH:141-2471740/2471014/2471406. VIPUL MOTORS LTD. (1102-11-05), 29,
 INDUSTRIAL AREA, JHOTWARA, JAIPUR - 302012
 PH:141-5194200.

1308. K.P. AUTOMOTIVES (P) LTD. (1104-11-01), E-198, SANGANER INDUSTRIAL AREA,MANSAROVAR,JAIPUR - 302020

PH :0141-445534, 35, 36, 442605. 1309. PREM MOTORS PVT. LTD. (1112-11-02), 12 13,SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006

PH :141-0141-2213065/2216229.

1310. SANGA AUTOMOBILES (1110-11-01), SECTOR
35, PRATAP NAGAR,SANGANER, JAIPUR -

PH:141-4110200

1311. SANGA AUTOMOBILES (1110-11-03), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILOCHOYAN MOHALLA, DELHI ROAD, JAIPUR - 302002 PH :141-3050400.

1312. VIPUL MOTORS LTD. (1102-11-01), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017 PH : 0141-523339, 520405.

 K.P. AUTOMOTIVES (P) LTD. (1104-11-06), GROUND FLOOR, ORBIT MALL, AJMER ROAD, JAIPUR, RAJASTHAN - 302006 PH: 141-4079999.

1314. PREM MOTORS PVT. LTD. (1112-11-01), PLOT NO. E101/A, VKI , JAIPUR - 302039 PH :141-3055563.

1315. SATNAM MOTOCORP PVT. LTD. (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR – 302 022, RAJASTHAN. - 302022 PH-0141-2771623

 KTL PVT. LTD. (1114-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR. -302012

PH:0141-2345222. **JAISALMER**

 LMJ SERVICES (5L01-5L-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY, HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) -345001
 PH :9314223963.

JALORE

 SHRI KRISHNA AUTOSALES PVT. LTD. (VD01-VD-01), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001 PH :9001893669.

JHALAWAR

1319. BHATIA & COMPANY (6102-RV-02), OPP. BALAJI KI CHHATRI, KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001 PH:07432-234009.

JHUNJHUNI

1320. AUDI MOTORS (FN03-FN-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001 PH :01 592-2250024.

IOBNER

1321. PREM MOTORS PVT. LTD. (BRD1-BRD-01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL – PHULERA, DISTRICT – JAIPUR, RAJASTHAN - 303328 PH :8058794094.

JODHPUR

1322. L.M.J.SERVICES LTD (6502-65-01), PRATAP NAGAR, JODHPUR - 340002 PH:0291-28158, 33205.

1323. L.M.J.SERVICES LTD (6502-65-04), OPP TO RFC OFFICE, NEW POWER HOUSE ROAD, JODHPUR 342003

PH:0291-2617772.

1324. SRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A,HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005 PH: 0291-2748405.

1325. L.M.J.SERVICES LTD (6502-65-09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008 PH:8094011147.

 L.M.J.SERVICES LTD (6502-65-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002 PH :293-2256177.

KEKRI

 AJMER AUTO AGENCIES PVT. LTD. (B201-GZ-03), KOTA SAWAR ROAD, KEKRI -305404 PH :01467-222398.

KISHANGARH

1328. FORTUNE CARS (9H01-TU-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405 PH : 1460-243323.

KOTA

1329. BHATIA & COMPANY (6101-61-01), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007 PH:0744-451367, 22373, 26469.

1330. BHATIA & COMPANY (6102-61-01), AUTO MOBILE ZONE, G-11/12 INDUSTRIAL AREA, KOTA - 324005 PH: 0744-2439006. 1331. BHATIA & COMPANY (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007 PH:9413350336.

1332. BHATIA & COMPANY (6101-61-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH :0744-6450918.

1333. BHATIA & COMPANY (6101-61-06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. -324005

PH:7446451110.

1334. PREM MOTORS PVT. LTD. (MH09-MH-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108 PH-8058794312

KUCHAMAN

KOTPUTLI

1335. SHRI MANGALAM AUTO PVT. LTD. (VA02-VA-01), SUDARSHAN NAGAR, BURSU ROAD, KHASRA NO.148, KUCHAMAN. - 341508 PH :9649518518.

MAHWA

1336. VIPUL MOTORS PVT. LTD. (BKZ1-BKZ-01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H.-11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608 PH.9887447928.

MAKRANA

1337. SHRI MANGALAM AUTO PVT. LTD. (CFX1-CFX1-01), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRANA, DISTRICT – NAGAUR. - 341505 PH.7231913913.

MALPURA

 K.P. AUTOMOTIVES PVT. LTD. (BLB1-BLB-01), PLOT NO.07, SHRII KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH :9549656456.

NAGAUR

 SHRI MANGLAM AUTO PVT. LTD. (HL03-HL-01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUR. PH :01582-2242828, 242400,9116007210.

NASIRABAD

1340. AJMER AUTO AGENCIES PVT. LTD. (B201-VB-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601 PH :9314391011.

NATHDWARA

1341. LOHIA AUTOMOBILES (X201-TZ-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND -313301

PH:2953-234761.

NEEM KA THANA

1342. JAMU AUTOMOBILES (P) LTD (K701-TV-03). NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713 PH:1574-231575.

NEEMRANA

1343. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-OP-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705 PH:8875004356.

NOHAR

1344. AUDI MOTORS LTD (VE02-VE-01), OPP. RAILWAY STATION, NOHAR. DISTRICT-HANUMANGARH - 335523 PH:1555-220485.

NOKHA

1345. AUDI MOTORS LTD. (I501-I5-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803 PH:8875010555.

PALI

1346. LMJ SERVICES (6502-J9-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH:2932-256277.

PAOTA

1347. K P AUTOMOTIVES PVT, LTD, (BRH1-BRH-01). PATTA SANKHYA 31 MISAI SANKHYA 89 NEAR RAMORIA PETROI PLIMP NH-8 PAOTA BAJASTHAN - 303106 PH -9462686008

PRATAPGARH

1348. BHATIA AND CO (PN01-PN-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605 PH:9414397142.

RAISINGHNAGAR

1349. AUDI MOTORS (BHK1-BHK-01), PLOT NO. H-2. INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT - SRIGANGANAGAR. - 335051 PH:9982638516.

RAJQARH

1350. MG MOTORS (IY01-IY-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT, ALWAR - 301408 PH:9001781777.

RAJSAMAND

1351. LOHIA AUTOMOBILES (X201-X2-01), BHILWARA ROAD, KHANKROLI, RAJSAMAND DISTT. RAJSAMAND - 313301 PH:2952-320460.

RAMGANJMANDI

1352. BHATIA & COMPANY (BAZ1-BAZ-01). KHAIRABAD ROAD, KHASARA NO, 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH:9414085790.

RAWATBHATA

1353. BHATIA AND COMPANY (JQ01-JQ-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA . DIST. CHITTORGARH. RAJASTHAN. - 323307 PH:1475-214999,9462719294

SAGWARA

1354. TECHNOY MOTORS INDIA PVT. LTD. (CK01-CK-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025 PH:9530306910.

SAWAI MADHOPUR

1355. PREM MOTORS PVT. LTD. (FY03-FY-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001 PH:8058791638.

SHAHDURA

1356. K.P. AUTOMOTIVES (P) LTD. (1104-NH-05), VILLAGE RAJPURA, GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103 PH:8696934964.

SIKAR

1357. JAMU AUTOMOBILES (P) LTD (K701-K7-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001 PH -1572-245515

SIROHI

1358. NAVNEET MOTORS (4902-LK-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH:2972-222917.

SOJAT

1359. LMJ SERVICES LTD. (BWI1-BWI-01), KHASRA NO. - 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, RAJASTHAN - 306104 PH:306104.

SRIGANGANAGAR

1360. AUDI MOTORS LTD (U201-U2-01), NEW AUTOMOBILE MARKET.SURATGARH-HANUMANGARH ROAD. SRIGANGANAGAR - 335001 PH :0154-2466225

1361. AUDI MOTORS LTD (U201-U2-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN -335001 PH -9982638516

SUJANGARH

1362. AUDI MOTORS PVT. LTD. (BRB1-BRB-01). KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH, DISTT, CHURU -331507 PH:7665722860.

SUMERPUR

1363. L.M.J. SERVICES LTD. (6502-VC-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHEREA GROUND, SUMERPUR - 306902 PH:02933-274977,274978,9414411609.

SURATGARH

1364. AUDI MOTORS LTD (U201-LG-02), OPP. RELIANCE PETROL PUMP.NH-15, SURATGARH -335804 PH:1509-224227, 224228.

1365. K P AUTOMOTIVES PVT LTD (GM01-GM-01), F-94, RIICO INDUSTRIAL AREA, TONK, RAJASTHAN - 304001 PH:1432-8696925252.

UDAIPUR

1366. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD, UDAIPUR - 313001 PH:0294-415143.

1367. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA, OPP. BSNL OFFICE, UDAIPUR - 313002 PH:0294-2494451-55.

1368. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT. UDAIPUR - 313002 PH:2955-220304

SIKKIM

1369. ENTEL MOTORS (B901-B9-01), 6TH MILE,

P.O.TADONG, GANGTOK, SIKKIM - 737102 PH:3592-649125, 232341, 232059,...

JORTHANG

GANGTOK

1370. ENTEL MOTORS (B901-ND-02), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121 PH:3595-257030, 257020, 257069.

TAMIL NADU

ANNUR

1371. JAI KRISHNA AUTO SALES PVT. LTD (DN01-DN-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR, COIMBATORE (DIST), TAMILNADU -641653 PH:0422-04254-262744/9788850733.

1372. PILLAI & SONS (EB01-EB-01), NO.1/1, NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD. ARIYALUR (TAMIL NADU), - 621704 PH:9442281302/9442418751.

BHAVANI

1373. AMBAL AUTO (H701-IG-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316 PH:0424-2230408

CHENGALPATTU

1374. AIE CARS PVT. LTD. (BBS1-BBS-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU. DISTRICT-KACHEEPURAM, TAMIL NADU. PH:7299057387.

1375. J.J IMPEX (MARUTI SERVICE MASTERS) (1485-14-01), # 9, (SP), THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH:044-43563366, 43563367,

1376. A.B.T LTD (1401-14-01), 102, MOUNT ROAD. GUINDY, CHENNAI - 600032 PH:044-42254544, 42254554,

1377. A.B.T LTD (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA BOAD 22 ARCOT BOAD SALIGRAMMAM CHENNAL - 600093 PH :044-23650488 23650490

1378. A.B.T LTD (1401-14-06), NO. 1 & 2, VASANTHA PRESS, ROAD, OPPOSITE MALAR HOSPITAL. ADYAR, CHENNAI - 600020 PH:044-24465814.24465815.

1379. A.B.T LTD (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106 PH:044-42267603, 42267621

1380. A.B.T LTD (1411-14-01), 29, WALLES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058 PH:044-42281720/708.

1381. C.A.R.S. INDIA PVT LTD. (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI -600058 PH:044-26359600, 42947900.

1382. C.A.R.S. INDIA PVT LTD. (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI -

PH:044-24461584, 24461584.

- 1383. C.A.R.S. INDIA PVT LTD. (1403-14-03), 4/321, OLD MAHABALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040 PH :44-43590914. 4294830.
- 1384. C.A.R.S. INDIA PVT LTD. (1403-FP-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066 PH:044-26323434/3737.
- C.A.R.S. INDIA PVT LTD. (1403-14-05), PLOT NO.-80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112 PH : 044-23821862/23821852.
- 1386. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-03), PLOT NO. SP-35, 1ST MAIN ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI - 600058 PH :044-4344500(45968000.
- 1387. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-02), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107 PH :044-64599892, 64599896..
- 1388. KHIVRAJ MOTORS LTD (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006 PH:044-42269575.
- 1389. POPULAR VEHICLES & SERVICES LTD. (1410-14-01), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093 PH :044-65877973, 974, 975, 65610801, 802, 803, 804, 805, 806, 42136611.
- 1390. POPULAR VEHICLES & SERVICES LTD. (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTAJ, CHENNAI - 600117 PH .044-64525444(4842564444,
- 1391. POPULAR VEHICLES & SERVICES LTD. (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099 PH-1044-84678410[646796411
- 1392. VISHNU CARS (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004 PH 1044-24661973/74/75
- 1393. VISHNU CARS (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043 PH :044-40175555.
- 1394. KHIVRAJ MOTORS LTD (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH: 044-43542303/05/06.
- 1395. ABT LTD (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. - 600041 PH :044-24490585/86, 42281700, 42281749.
- 1396. AIE CARS (A UNIT OF A.I. ENTERPRISES (P) LTD.) (1484-14-01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115 PH -044-30193020/30193019.

- 1397. RAJALAKHSMI CARS (1486-14-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI . -600060
- 1398. KHIVRAJ MOTORS PVT. LTD. (1480-14-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI -
 - PH:44-9043019626/7092033013.

PH:044-33015454/8939995454.

- 1399. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-04), NO.225,JAWAHARALAL NEHRU ROAD, KOYAMBEDU, CHENNAI - 600107 PH :044-42006000-23.
- 1400. ABT LTD (1401-14-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119 PH: 044-24502185-87.
- 1401. VISHNU CARS PVT. LTD. (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089
 - PH:044-8754440002/9677244332.
- 1402. VISHNU CARS PVT. LTD. (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056 PH:26792961/26792962.
- 1403. VISHNU CARS PVT. LTD. (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100 PH :044-9840929994/9840944478.
- 1404. VISHNU CARS PVT. LTD. (1427-14-04), NEW S. NO. 314/181A, PALLAVARAM THORAIPAKKAM RADIAL RODA, DEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. 800117 PH : 1042-04400/S775 F.
- 1405. VISHNU CARS PVT. LTD. (1427-14-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. -600016 PH 044-32531117
- 1406. RAJALAKSHMI CARS PVT. LTD. (1486-14-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095 PH: 044-4387090, 893999541.
- 1407. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-06), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058 PH;7401930335.

COIMBATORE

1408. A.B.T.LTD (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001 PH:0422-4232666. 4232666

- 1409. A.B.T LTD (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037 PH :0422-4232588, 4232550.
- 1410. A.B.T LTD (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043 PH :0422-228155.
- A.B.T LTD (4101-41-0A), NO 49, PANKAJA MILL ROAD, OPP INDIAN EXPRESS OFFICE, RAMANATHAPURAM, COIMBATORE - 641045 PH: 0422-4516000, 4390434.
- 1412. AMBAL AUTO (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE 641005
- PH:0422-3075000, 3075001.
- 1413. AMBAL AUTO (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH:0422-3075211, 3075203...
- 1414. AMBAL AUTO (4103-41-08), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE, - 641013 PH :0422-3075800.
- 1415. AMBAL AUTO (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027 PH :0422-2331646.
- 1416. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-01), 8/60-C&8/62-D, METTUPALAYAM ROAD, G.NMILLS POST, NEARJOHNBOSCO CHURCH, COIMBATORE - 641029 PH :0422-4519140.
- JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004 PH 10429-4383220
- 1418. AMBAL AUTOMOBILES (4103-41-0C), SENGUPTA STREET, RAM NAGAR, COIMBATORE. - 641009 PH :0422-3009800/ 3009802
- 1419. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE -641004 PH -0422-2511773.
- 1420. AADHI CARS PVT. LTD. (4108-41-01), NO.176/2, SATHYAMANGALAM ROAD, SARAVANAPATTI, COIMBATORE - 641035 PH:8754009117/8754045977.
- 1421. ABT LTD (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024 PH:0422-9994408618/9500911243.
- 1422. AADHI CARS PVT. LTD. (4108-41-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004 PH .0422-8754045421 8 754045443.

- 1423. AADHI CARS PVT. LTD. (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041 PH: 0422-3000211/3000204.
- 1424. AADHI CARS PVT. LTD. (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE. - 641005 PH :4000777.
- 1425. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. -641008 PH :9047077775.
- 1426. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-OH-04), NO.12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020 PH :0422-69889.

COONOOR

1427. AMBAL AUTOMOBILES (3G01-3G-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102 PH : 0423-2202254.

CUDDALORE

1428. A.B.T LTD (5Q01-5Q-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003 PH :04142-227699, 227599.

DHARAPURAM

1429. AMBAL AUTO (H701-QN-04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656 PH: 04258-301107/301103.

DHARMAPURI

1430. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-5R-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI, TAMILNADU - 636807 PH :04342-233933.

DINDIQUI

1431. PLA MOTORS (\$401-\$4-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL -624001 PH :0451-3098300.

ERODE

1432. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (H701-H7-01), 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH :0424-3056600/ 3056602.

GOBICHETTIPALAYAM

1433. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (H701-QM-03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH :04285-302001/ 302005.

GUDUVANCHERY

1434. VISHNU CARS (BAD1-BAD-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203 PH :9500121553/9677122225.

GUMMIDIPOONDI

1435. RAJALAKSHMI CARS PVT. LTD. (BIZ1-BIZ-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE — PAPPANAKUPPAM, GUMMIDIPONNDI, THIRUVALLUR - 601201 PH :8839995454 / 8939853972.

HARUR

1436. SRI AMMAN CARS INDIA PVT. LTD.
(AAV1-AAV-01), 429/9, HARUR SALEM MAIN
ROAD, HARUR POST, DHARMAPURI, TAMIL
NADU - 636903
PH -04346-9790004273/ 9790004279.

OSUR

1437. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-7Q-01), P.O.- PERANDAPALLI,NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 PH 4344-260277.

IDAPPADI

1438. THRIVENI CAR COMPANY PVT LTD. (HI01-HI-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM -637101 PH :04283-222300.

KANCHEEPURAM

1439. GANESH CARS PVT.LTD (C601-JA-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH :044-67275222/27277771.

KARAIKUDI

1440. A.B.T LTD (4202-HX-05), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302 PH:04565-232484, 232486...

KARUR

1441. A.B.T LTD (K401-K4-01), SF NO. 529/1, SALEM BY PASS,ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002 PH: 04324-222261/62/63.

KATPADI

1442. GANESH CARS (C601-APA-04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH:0416-9842313139/9842333061.

KINATHUKADAVU

1443. AADHI CARS PVT. LTD. (BBI1-BBI-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109 PH :0422-3000506/ 3000505.

KOTAGIRI

1444. AADHI CARS PVT. LTD. (BAS1-BAS-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217 PH :04266-8754045891/8754045442.

KOVILPATTI

1445. ASIR AUTOMOBILES PVT. LTD. (NO01-NO-01), OLD NO-1, NEW NO-13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501 PH: 04632-232220.

KRISHNAGIRI

1446. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-QL-03), NH-7,NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001 PH-9750699555/ 8220009348.

KUMBAKONAM

1447. PILLAI & SONS MOTORS CO. (E701-N4-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501 PH :0435-2442566,65.

MADURAL

- 1448. A.B.T LTD (4202-42-02), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018 PH: 0452-2547108, 2547125.
- 1449. A.B.T LTD (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH: 0452-4387050/51/52.
- 1450. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH: 0452-268888.
- 1451. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. 625003 PH:0452-26888889.
- 1452. ASIR AUTOMOBILES PVT. LTD. (4206-42-01), D. NO. 28/5B, MELUR MAIN ROAD, UTHANKUDI, MADURAI. - 625107 PH: 0452-438220.

1453. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008 PH :2489074.

MALLUR

1454. THRIVENI CAR COMPANY PVT LTD.
(CDH1-CDH1), SURVEY NO.50(4A, AMANI
AMMAPALAYAM YILLAGE, DISTT:
DADHAGAPATTY SUB REGISTRATION,
MALLUR DISTT: SALEM - 636309
PH :497-2429399, 2440000

MAYILADUTHURAI

1455. PILLAI & SONS MOTORS CO. (E701-AG-04), 46, VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007 PH: 04364-43542303/ 43542306.

METTUPALAYAM

1456. A.B.T LTD (4101-EU-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043 PH :04254-228155.

NAGERCOIL

1457. SRIVATSA INTERNATIONAL PVT. LTD. (S502-S5-01), PLOT NO. 31B1-1, BEACH ROAD JUNCTION, KOTTAR, NAGERCOIL, DISTRICT-KANYAKUMARI, TAMIL NADU. - 629002
PH :04652-232944, 296344/ 8973423332.

NAMAKKAL

1458. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (X401-X4-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL-637001 PH: 04286-307507, 307512.

1459. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (X401-X4-03), 1/412/1 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001

PH:04286-307500-502.

OMALUR

1460. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-UM-04), 123, 38, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012 PH -04277-9790004273/ 9750799555.

1461. THRIVENI CAR COMPANY PVT LTD.
(UMO1-UM-01), PLOT NO. 44 & 45, PALANIYAPPA
NAGAR LAYOUT, NH-7, KAMALAPURAM
VILLAGE, OMALUR, DISTRICT – SALEM, TAMIL
NADU - 636309
PH :04290-222611, 711.

OOTY

1462. AMBAL AUTO (4103-Y1-05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY -643001

PH:0423-3075303, 3075311.

PENNAGARAM

1463. SRI AMMAN CARS INDIA PVT. LTD.

(BXZ1-BXZ-01), SURVEY NO. 419/1, VILLAGE –
PARUVADHANAALLI, PENNAGARAM,
DHARMAPURI. - 636810
PH :9790036371.

PERAMBALUR

1464. PLA MOTORS (2305-DQ-04), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212 PH :0431-403361/3461.

POLACHI

1465. A.B.T LTD (L301-L3-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003 PH :04259-37010.37020.

PUDUKOTTAI

1466. PLA MOTORS (2305-5U-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003 PH: 04322-265566/67.

RAJAPALYAM

1467. A.B.T LTD (4202-5V-03), NO. 10/32, DHARMAPURAM, SRIVILLIPUTHUR MAIN ROAD, RAJAPALYAM - 626125 PH :04563-260298.

RASIPURAM

1468. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (BSJ-1894-01), SURVEY NO.1/11 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401 PH - 104287-231177.

SALEM

1469. A.B.T LTD (4101-A2-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009 PH:0427-4066988, 406999.

 THRIVENI CAR COMPANY PVT LTD. (A203-A2-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005 PH :0427-2440000/2336599.
 S.M.CARS PVT. LTD. (A204-A2-01), SF NO.

64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202 PH:7094448000, 7034449000.

SANKAGIRI

1472. THRIVENI CAR COMPANY PVT LTD. (BTN1-BTN-01), SURVEY NO.171/5B, KCK PLAZA, KACHERIDADU, DEPUTY COLLETCTOR ROAD, SALEM, SANKAGIRI (TAMIL NADU) -637301

PH:4283-242600. SANKARANKOVIL

1473. AADHI CARS PVT. LTD. (BXS1-BXS-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL -627756 PH:04636-223331 875Au3378

SATHYAMANGALAM

1474. SREE SARADHAMBAL AUTOMOBILES PVT. LTD.
(BGU1-BGU-01), SURVEY NO. 51, 54 & RS NO.
37, KOTTUVEERAMPALAYAM WILLAGE,
SATHYAMANGALAM – 638 401, DISTRICT –
ERODE, TAMIL NADU - 638401
PH :222026/222036.

SIVAKASI

1475. MEENAKSHI AUTO ZONE PVT. LTD. (X602-X6-01), 372 D & E, ARUNACHALAM COMPLEX, THRUTHANGAL ROAD, SIVAKASI. 626123 PH :04562-231281.

SRIPERUMBUDUR

1476. RAJALAKSHMI CARS PVT. LTD. (7801-78-01), SURVEY NO. 1501/A, DOOR NO 1C, THERADI STREET. NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105 PH 1044-66680014.

SULUR

1477. JAI KRISHNA AUTO SALES PVT. LTD (4107-TK-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR PH: 0422-3199901.

TANJAVUR

1478. PILLAI & SONS MOTORS CO. (E701-E7-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU -613007 PH: 04362-71723, 71724.

ENKVE

1479. AADHI CARS PVT. LTD. (BXR1-BXR-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE – KUNARAMANALLUR, TENKASI. - 627814 PH : 04636-252050.

THIRUMULLAIVOYAL

1480. KAPICO MOTORS (INDIA) PVT. LTD
(CDW1-CDW-01), NO. 48, BALAJI NAGAR, NEW
SIR IRVANSTADE FORD HOSPITAL,
THIRUMULAIVOYAL DISTT. CHENNAI - 600062
PH :9551070545.

THIRUVALLUR

- 1481. KHIVRAJ MOTORS LTD (1404-HH-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001 PH:044-27662888.
- 1482. KHIVRAJ MOTORS LTD (1404-HH-05), PLOT NOS.218,219,220,225,226,227.228 AND S.NOS. 1815,186, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK THIRUVALLUR - 602001 PH 9791707353

THIRUVARUR

1483. PILLAI & SONS MOTORS CO. (E701-LI-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001 PH :04366-250250.

THUCKALAY

1484. SRIVATSA INTERNATIONAL PVT. LTD.
(BWO1-BWO-01), DN 0.5/58.
THIRUVITHANCODE ROAD, KERALAPURAM,
MUTHALAKURICHI, VILLAGE MUTHALAKURICHI, THUCKALAY, DISCTRICT KANYAKUMARI - 629174
PH :4651-252592, 897321881.

TIRUCHENDUR

1485. ASIR AUTOMOBILES PVT. LTD. (CCJ1-CCJ-01) SURVEY NO. 220/101A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215 PH 1483RQ-246220

TIRUCHENGODE

1486. AMBAL AUTO (X401-QP-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE -637001

PH:04288-282292/306726. TIRUNAMALAI

1487. GANESH CARS PVT.LTD (C601-LX-03), NO.-5, NH-78, KRISHANAGIRI PONDV ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601 PH :04175-249319.

TIRUNELVELLI

1488. AADHI CARS PVT. LTD. (A303-A3-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI , TAMIL NADU - 627357 PH :0462-2300040) 9500991487.

TIRUPUR

1489. A.B.T LTD (4101-Y7-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR -641601

PH :0421-4305686 , 4305640.

1490. SHASHTI CAR PVT LTD (7701-Y7-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604

PH:0421-2430275/2430276.

TRICHY

- 1491. A.B.T LTD (2302-23-02), 4/40, COLLECTOR
 OFFICE ROAD, CANTONMENT, TRICHY 620001
 PH: 0431-4221602 4221603
- 1492. A.B.T LTD (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005 PH:0431-4221555, 4221564.
- 1493. PLA MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009 PH: 0431-2403361, 9843055561.
- 1494. PLA MOTORS (2305-23-03), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001 PH:0431-2411540/530.

TUTICORII

1495. ASIR AUTOMOBILES PVT. LTD. (S603-S6-01), SURVEY NO. 25/1B, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002 PH -2337220/ 7373120220.

UDUMALPET

1496. ABT LTD (QR01-QR-01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126 PH:04252-222572/222573.

UTHANGARAI

1497. SRI AMMAN CARS INDIA PVT. LTD. (CFY1-CFY-01), SURVEY NO. 104/1, 104/1B, VILLAGE – THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304 PH.9790004273.

VALLIYUR

1498. AADHI CARS PYL, LTD. (BXQ1-18XQ-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002 PH: 04857-223000.

VANIYAMBADI

1499. GANESH CARS PVT. LTD. (BJY1-BJY-01), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801 PH :291520.

VELLORE

1500. GANESH CARS PVT.LTD (C601-C6-01), 91 NEW BY-PASS ROAD, VELLORE - 632004 PH:0416-6454221, 2233709.

VILLUPURAM

 A.B.T LTD (5Q01-QQ-02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602 PH:04146-225509.

VIRUDHACHALAM

1502. ABT LTD (BMA1-BMA-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101 PH :04143-262631.32.33.

TELANGANA

ADILABAD

1503. ADARSHA AUTOMOTIVES PVT LTD (BTM1-BTM-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001 PH :08732-7799784538.

ARMUR

1504. VARUN MOTORS PVT. LTD. (BBN1-BBN-01), SURVEY NO. 277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224 PH :08643-8142281424: 26/26/27.

BHUPALPALLY

1505. ADARSHA AUTOMOTIVES PVT. LTD. (DS02-BCF.04), 6-113, JAWAHAR NAGAR, MAIN ROAD, SSH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169 PH 08715-7799790526.

HEVELLA

1506. GEM MOTORS INDIA PVT. LTD. (CBL1-CBL-01), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. -510101 PH.9912899128.

QADWAL

1507. SRI JAYARAMA MOTORS PVT LTD (WP01-BHR-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125 PH :08546-8096890074

GHATKESAR

1508. ACER MOTORS PVT. LTD. (BYL1-BYL-01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY. - 501301 PH -040-9849017827.

HYDERABAD

- 1509. RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD PH :040-9848062263.
- 1510. SAI SERVICE PVT. LTD. (1011-10-02), #2-3-505,ML GARDENS, AMBERPET, HYDERABAD (A.P.) - 500013 PH:040-65646565.
- 1511. GEM MOTORS (INDIA) PVT. LTD. (1009-10-01), RAGHIUVENDRA SOCIETY,KONDAPUR,,HYDERABAD, ANDHRA PRADESH - 500084 PH -040-40506070.
- 1512. GEM MOTORS (INDIA) PVT. LTD. (1009-10-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH :40-40302525.
- 1513. RKS MOTORS PVT. LTD. (1003-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482 PH:040-337/1115, 33.
- 1514. RKS MOTORS PVT. LTD. (1003-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039
- PH :040-7200193, 7204444. 1515. RKS MOTORS PVT. LTD. (1003-10-04), 16-11-19/5/2/C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036 PH :040-23434576, 77.
- 1516. RKS MOTORS PVT. LTD. (1003-10-05), 11-6-191/192,OPP. HOTEL HARSHA,PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD -500001 PH 1040-23432390 391
- 1517. SAI SERVICE PVT. LTD. (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA, C.I.E. GANDHI NAGAR, BALANAGAR, HYDERABAD 500037 PH 1040-44604000
- 1518. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD, AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020 PH :040-7662481, 7618488, 7641786, 7630422.
- 1519. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10, NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081 PH:040-23114567, 3444.
- 1520. THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8, NEAR MARGADARSI CHIT FUND, L.B. NAGAR RING ROAD, RR DIST, HYDERABAD - 500074 PH. 1040-24122222.
- 1521. THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABD - 500076 PH :040-27176999.

- 1522. VARUN MOTORS PVT. LTD. (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, - 500037 PH :040-3778035.3778036.3777979.
- 1523. VARUN MOTORS PVT. LTD. (4603-10-0A), 1-11-200,SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016 PH:040-27766533.
- VARUN MOTORS PVT. LTD. (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036 PH: 040-4553395. 4547676.
- 1525. VARUN MOTORS PVT. LTD. (4603-10-0B), ADITYA NAGAR COLONY, "ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008
- 1526. VARUN MOTORS PVT. LTD. (1010-10-01), PLOT NO. VI- VII A & B,UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH :40-24027677.
- 1527. VARUN MOTORS (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008 PH:040-9985104860, 69997979.
- 1528. RKS MOTORS PVT. LTD. (1003-10-08), D.NO.1-10-1/285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062 PH. 040-49054905.9010822210.
- 1529. SAI SERVICE PVT. LTD. (1011-10-04), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD. - 500059 PH-040. BRB6512209 23808080
- 1530. VARUN MOTORS PVT. LTD. (4603-10-0G), 1-10-28/1 SV. NO.285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH 1040-7799000098
- 1531. VARUN MOTORS PVT. LTD. (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH :040-64551700.
- 1532. VARUN MOTORS PVT. LTD, (4603-10-0J), PLOT NO. 1-45, SY.NO:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE -500019 PH :040-9885206555.
- 1533. KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT NO. A-23 & A31/1, I.D.A. NACHARAM, HYDERABAD. - 500076 PH: 040-66985555, 9100114877.

- 1534. GEM MOTORS (INDIA) PVT. LTD. (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA. - 500089 PH -040-9912899128.
- 1535. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SOUARE, VILLAGE – GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE - 500032 PH 1940-7880046669, 50704385556.
- 1536. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081 PH : 9704835556.
- 1537. KALYANI MOTORS PYT. LTD. (1018-10-02), MS VÜDHATA BINNY MODERN RICE MILL BEARING NO. 8-4-15 IN SURIVEY NO. 293 & 240 OF VILLAGE – KARMANGHAT, MANDAL – SAROORNAGAR, DISTRICT – RANGA REDDY, HYDERABAD. - 500079 PH :349-0914800700.
- 1538. ADARSHA AUTOMOTIVES PVT. LTD.
 (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34,
 SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA
 RAO EXPRESSWAY), RAJENDRANAGAR,
 UPPERPALLY, ATTAPUR, RANGA REEDV,
 HYDERABAD, TELENGANA. 500048
 PH 970152222.
- 1539. SAI SERVICE PVT. LTD. (1011-10-07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD 502032

PH -040-766181100

PH:040-23432311.

- 1540. ADARSHA AUTOMOTIVES PVT. LTD. (1014-10-01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD 500005
- PH:040-8142326633.
 1541. RKS MOTORS PVT. LTD. (1003-10-09), SURVEY NO. 434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY HYDERABAD 500072
- 1542. SAI SERVICE PVT. LTD. (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018 PH: 040-9133346300.

JAGITIAL

1543. ADARSHA AUTOMOTIVES PVT LTD (N601-NU-04), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, - 505327 PH :8724.8886152929

JANGAON

1544. ADARSHA AUTOMOTIVES PVT. LTD. (KI01-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH :8716-9959223393.

KAMAREDDY

1545. VARUN MOTORS PVT. LTD. (KX01-KX-01), H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111 PH :08142-551166/77/88/99.

KARIMNAGAR

- 1546. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-01), H.NO. 8-6-313/1, HYDERABAD ROAD, BY-PASS JUNCTION, KARIMNAGAR -505001 PH:0878-2277200. 300.
- ADARSHA AUTOMOTIVES PVT LTD (N601-N6-05), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. -505001 PH.0878-8886152222.

KHAMMAM

1548. MITHRA AUTO AGENCIES PVT LTD (2604-1G-02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003 PH. 108742-222444.

KODAD

1549. PAVAN MOTORS PVT. LTD (BRP2-BRP-01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD, DISTRICT – NALGONDA, TELANGANA - 508206 PH :8683-8008899995.

MANCHERIAL

1550. ADARSHA AUTOMOTIVES PVT LTD (N601-CM-03), BEHIND MAHINDRA TRACTORS SHOWROOM, BELLAMPALLY ROAD, MANCHIRIAL, DISTT. ADILABAD - 504208 PH :08736:255757.

MEHABOOB NAGAR

1551. SRI JAYARAMA MOTORS PVT. LTD.
(WP01-WP-01), PLOT NO.C1 & C2, INDUSTRIAL
ESTATE, METTUGADA, MEHBOOBNAGAR 504001
PH.08542-256111. 9866545424.

MIRYALQUDA

1552. PAVAN MOTORS PVT. LTD (WR01-WR-01), SURVEY NO-940 843, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANIG BY-PASS ROAD,MRYALAGUDA ,NALGONDA DISTRICT, ANDHRA PRADESH -508207 PH .08689-8790900399.

MOINABAD

1553. GEM MOTORS (INDIA) PVT. LTD.
(CFN1-CFN1), SURVEY NO. 70, PLOT NO. 4,
VILLAGEA ON D GRAM PANCHAYAT – HIMAYATH
NAGAR, MANDAL – MOINABAD, DISTRCT –
RANGA REDDY. - 500075
PH 9013909128

NALGONDA

1554. PAVAN MOTORS PVT. LTD (AN01-AN-01), CHERLAPALLY YILLAGE, NALGONDA ROAD, NALGONDA - 508001 PH: 08682 -247399,8790344499.

NIRMA

1555. ADARSHA AUTOMOTIVES PVT LTD (N601-AA-02), H. NO. 1-1-131, SHASTRINAGAR, MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106 PH :8734-9912752344.

NIZAMABAD

1556. VARUN MOTORS PVT. LTD. (1H02-1H-01), PLOT NO. GP 1-57/41,PANGARA BORGOAN,NIZAMABAD - 503230 PH:08642-234428.

PARGI

1557. VARUN MOTORS (CBO1-CBO-01), HOUSE NO. 2-356 JANGAIAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL – PARGI, DISTRICT – RANGA REDDY. - 510501 PH :08556-988521055, 9885200000.

RAMAGUNDAM

1558. ADRASHA AUTOMOTIVES PVT. LTD.

(BGA1-BGA-01), 5-6-172 SURVEY NO. – 259/B,

MEDIPALLY SHIVAR, RAMAGUNDAM

MUNICIPALITY, DISTRICT – KARIM NAGAR,

ANDHRA PRADESH - 505209

PH :09728-8886144550.

RAMAYAMPET

1559. VARUN MOTORS PVT. LTD. (CDO1-CDO-01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT – MEDAK. - 502101 PH :9885208555.

SANGAREDDY

1560. SAI SERVICE PVT. LTD. (1011-0I-05), H.NO.4-8-92/1/4/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH:08455 -278090,7799360003.

SECUNDERABAD

1561. ACER MOTORS (K601-K6-01), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, -500015

PH:040-7740774, 7747559.

1562. AUTOFIN LIMITED (K606-K6-01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011 PH 1040-67998958

1563. SAI SERVICE PVT. LTD. (1011-K6-06), PLOT NO. 1-8-308/3/1, PATIGADDA, BEGUMPET, SECUNDERABAD, TELANGANA - 500016 PH 1040-27904644.

1564. VARUN MOTORS PVT. LTD. (4603-K6-01), 1-10-176/1, BEHIND VARUN TOWERS-I, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE. - 500016 PH :040-9898552452.

1565. RKS MOTORS PVT. LTD (K605-K6-01), PLOT NO. 207, TADBUND, SECUNDERABAD. - 500009 PH:040-23434520, 9010834567.

1566. PAVAN MOTORS PVT. LTD (K608-K6-01), PREMISES NO.6-1-17/A AND 6-1-18, WALKER TOWN, PADMARAO NAGAR, SECUNDERABAD. -500025 PH: 040-27502750.

1567. AUTOFIN LIMITED (K606-K6-02), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD.

SHAD NAGAR

1568. SRI JAYARAMA MOTORS (P) LTD (WS01-WS-01), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH. - 500216 PH.08548-8006991424.

SHANKARPALLY

1569. SAI SERVICES PVT. LTD. (CEX1-CEX-01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203 PH.8416-9966377888. 9912899128.

SIDDIPET

1570. ADARSHA AUTOMOTIVES PVT. LTD. (CAL1-CAL-01), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA. - 502103 PH -0457-888662222, 7799784525.

TANDUR

1571. VARUN MOTORS PVT. LTD. (CFR1-CFR-01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT. TELANGANA. - 501141

THORRUR

1572. ADARSHA AUTOMOTIVES PVT. LTD. (BYV1-BYV-01), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163 PH :9059438007.

VIKARABAD

1573. GEM MOTORS (INDIA) PVT. LTD.

(BYM1-BYM-01), SHOP NO. 3-2932; VILLAGE –
YENNAPALLY, VIKARABAD MUNCIPALITY,
VIKARABAD, DISTRICT – RANGA REDDY,
TELANGANA. - 501101
PH 3416-9912349840.

WANAPARTHY

1574. SRI JAYARAMA MOTORS (P) LTD (WQ01-WQ-01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103 PH : 08543-9542448662.

WARANGAL

1575. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007 PH:0870-2623359.

1576. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-03), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL-506001 PH :0870-2523349, 9959223393.

ZAHIRABAD

1577. SAI SERVICE PVT. LTD. (BAT1-BAT-01), PLOT NO-5,NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD,MEDAK (DIST),ANDHRA PRADESH - 502220 PH :8451-9966377888.

TRIPURA

AGARTALA

1578. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003 PH:0381-230542.

1579. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA. - 799003 PH:0381-2371402, 9436123592.

1580. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008 PH :0381-9436121559.

AMBASSA

 JAIN UDYOG (CDT1-CDT-01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289 PH: 9436123592.

DHARMANAGAR

1582. JAIN UDYOG (6901-RN-03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - 799250 PH:3822-23047, 9774040553.

UDAIPUR

1583. JAIN UDYOG (YU01-YU-01), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR,TRIPURA (SOUTH) - 799116 PH 3821-22264019774020152

UNION TERRITORY

PANCHKULA

1584. AUTO VOGUE PVT. LTD. (K303-K3-01), PLOT NO- 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113 PH 4372509938

UTTAR PRADESH

AGRA

1585. PRIME MOTORS (6681-66-01), 8B/7D, BYE PASS ROAD, DEV NAGAR, AGRA PH:0562-2531881,2531882.

1586. MADHUSUDAN MOTORS PVT LTD (6603-66-01), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - 282005 PH :0562-531102-05.

1587. MADHUSUDAN MOTORS PVT LTD (6603-66-02), GANESH GANJ, PRATAPPURA, AGRA - 282001

1588. MADHUSUDAN MOTORS PVT LTD (6603-66-03), 6-A, VIBHAV INDUSTRIAL STATE, AGRA -282007 PH: 0562-3299221.

1589. MADHUSUDAN MOTORS PVT LTD (6603-66-04), 26/253, SULTAN GANJ KI PULIA, MAUZA LASKARPUR, AGRA - 283203 PH :9837097894.

1590. PREM MOTORS PVT. LTD. (6605-66-01), KHASRA NO. 382,386,387,388, VILLAGE ARTHONI, DELHI-AGRA HIGHWAY, NH-2, AGRA, UTTAR PRADESH - 282007 PH 9890010795. 3215315/16.

1591. KTL PVT. LTD (6606-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004 PH:8449715033, 8449700000.

1592. PREM MOTORS PVT. LTD. (6607-66-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002 PH:0562-2523022, 9690010795.

- 1593. KTL PVT. LTD (6606-66-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001 PH :05622-410004.
- 1594. KTL PVT. LTD. (6606-66-03), 44/320 B, MAUJA BODLA, BODLA CHOWK, AGRA. - 282007 PH:0562-8449715091,7060404416.

AKBARPUI

- 1595. KTL PVT. LTD. (2801-LH-03), KANPUR ROAD, AKBARPUR - 209206 PH:7408409304.
- 1596. SMARTWHEELS PVT. LTD. (7201-LH-08), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOBPUR, AKBARPUR, DIST-AMBEDKAR NAGAR (U.P.) - 224122 PH -244570

ALIGARH

- 1597. VINEET MOTORS (MSZ) (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH PH :9917473052, 9582123586.
- 1598. DEV MOTORS (P) LTD (B601-B6-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001 PH :0571-521771.

ALLAHABAD

- 1599. AMITDEEP MOTORS (2901-29-01), 26 SULEM SARAI, G.T ROAD, ALLAHABAD - 211001 PH:0532-2636301, 2436360.
- 1600. GREENLAND MOTORS (2903-29-01), 40, INDUSTRIAL ESTATE, TELEARGANJ, ALLAHABAD - 211004 PH:0532-9838107735.
- GREENLAND MOTORS (2903-29-03), 52/36, LUKERGANJ, ALLAHABAD - 211001

AMETHI

1602. KTL PVT LTD (1302-AAY-07), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR - 227409 PH :05368-24445.

ALIBATVA

1603. KULDEEP MOTORS (QJ01-QJ-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241 PH:9235358444.

AZAMGARH

- 1604. DEEP MOTORS (K501-K5-01), HARBANSHPUR NARAULI, AZAMGARH - 276001 PH:05462-325387.
- 1605. DEEP MOTORS (K501-K5-03), VILLAGE BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. • 276138 PH 9838072923.

BAHERI

1606. KAVISHA MOTORS PVT. LTD. (BSB1-BSB-01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201 PH.7895980110.

BAHRAICH

1607. ANAND MOTORS (1301-5Z-05), LUCKNOW ROAD,BEHRAICH,UTTAR PRADESH - 271801 PH :7860786161.

BAKSHI KA TALAB

1608. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-II-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020 PH:9838075960, 9628300000.

BALLIA

1609. DEEP MOTORS (K501-BA-02), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001 PH -9838072917

RALRAMPUR

1610. ANAND MOTOR AGENCIES LTD. (XB01-XB-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201 PH : 05263-232144.

BANDA

1611. MY CAR PVT. LTD. (2803-KV-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001 PH:9839029868.

BADABANKI

1612. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-6A-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001 PH -9838075960

BARAUT

1613. RAJ SNEH AUTO INDIA PVT LTD (4803-LL-04), DELHI SAHARANPUR ROAD, OPP-POLICE CHECK POST, NEAR VERDHMAN -DHARAM KANTA, BARAUT - 250611 PH :9837581179.

BAREILLY

- 1614. CORAL MOTORS (P) LTD. (5602-56-01), STATION ROAD, BAREILLY - 243001 PH:0581-559191
- 1615. CORAL MOTORS (P) LTD. (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH -243002
- PH:0581-0581-2554922.

 1616. KAVISHA MOTORS PVT. LTD. (5601-56-01), 4TH
 KM, RAMPUR ROAD, CLUTTER BUCKGANJ,

BAREILLY - 243502 PH :0581-480404,5,6,7,8.

BASTI

1617. SMARTWHEELS PVT. LTD. (7201-6B-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002 PH :05542-286294.

BHADOHI

1618. VARANASI MOTORS PVT. LTD. (8402-TT-02), VARNASI ROAD, BHADOHI - 221401

BIJNOR

1619. RAJ SNEH AUTO INDIA PVT LTD (4803-6D-03), PLOT NO. CFC INDUSTRIAL AREA, OPPOSITE SUGAR MILL, NAGINA ROAD, BIJNORE - 246701 PH :01342-246701.

BILASPUR

1620. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-BCN-01), NH-87, OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR - 244921 PH. 7895600005, 7247800009.

BUDAUN

1621. CORAL MOTORS (P) LTD. (5602-NF-04), PLOT NO. 72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103 PH :9837891846.

BULANDSEHAR

1622. SK & COMPANY (M581-M5-02), KHASRA NO. 2261, NEAR T POINT, BY PASS SHIKARPUR ROAD, BULANDSHAHR. PH :05732-235400.

BULANDSHAHR

1623. ROHAN MOTORS LTD. (T201-M5-02), PLOT NO-561, M.T. VILLAGE AKBARPUR, OPP. PANDIT PETROL PUMP, BULANDSAHAR, UTTAR PRADESH - 203001 PH: 9758418546.

CHANDAUSI

1624. AKANKSHA AUTOMOBILES PVT. LTD. (XA01-XA-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412 PH :254111.

EORAND

1625. ATELIER AUTOMOBILES (XK01-XK-01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001 PH :7500250042.

DEORIA

1626. SMARTWHEELS PVT. LTD. (M601-M6-01), PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST. -DEORIA, UTTAR PRADESH. - 274001 PH :05568 - 7705800602.

ETAH

1627. MADHUSUDAN VEHICLES PRIVATED LTD. (XG01-XG-01), 472 ASROLI, GT ROAD, ETAH -207125 PH 9837097894.

ETAWAH

1628. KULDEEP MOTORS (6E01-6E-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001 PH :05688-257029.

FAIZABAD

1629. SMARTWHEELS PVT. LTD. (7201-F5-02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001 PH :05278-309333.

FARRUKHABAD

1630. MY CAR PVT. LTD. (2803-TS-04), NEKPUR KALAN, FARRUKHABAD - 209625 PH :9839029868.

FATEHABAD

1631. KTL PVT LTD (BLQ1-BLQ-01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT – AGRA, UTTAR PRADESH - 283111 PH :8449715063.

FATEHPUR

1632. KTL PVT. LTD. (2801-TM-04), NH-2, OPP. RTO
OFFICE, KANPUR ROAD, FATEHPUR - 212601
PH -7408409304

FEROZABAD

1633. MADHUSUDAN VEHICLES PRIVATE LTD (DF01-DF-01), 746, ALI NAGAR KEJRA, NEAR RAJA KA TAL CROSSING, NH 2, FEROZABAD -283203 PH :05612-9690003035.

GAJRAULA

1634. AKANKSHA AUTOMOBILES PVT. LTD. (XD01-XD-01), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA - 244235 PH -9897069329.

HAZIABAD

1635. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD PH :9999107841, 9997093422.

- 1636. KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR, HAPUR ROAD, GHAZIABAD PH. :2714143. 9210026200.
- 1637. REGENT AUTOLINKS (P) LTD (5902-59-01), A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001
- PH :0120-2706034-37, 0120-4641900,911,904.

 1638. ROHAN MOTORS LTD. (5904-59-01), 432

 MUKAND NAGAR, G.T.ROAD, GHAZIABAD -
- PH :0120-4375182,4730717, 4730176, 4734218.
 1639. ROHAN MOTORS (5904-59-02), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD -201102
- PH:0120-9717388333,9971466644.

 1640. T.R. SAWHNEY MOTORS PVT LTD (5905-59-01),
 PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL
 AREA, MOHAN NAGAR, GHAZIABAD, DISTT. GHAZIABAD, U.P. 201007

GHAZIPUR

PH:7503326561.

1641. AGR AUTOMOBILES PVT. LTD. (8403-KT-03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001 PH:0542-2361136.

GONDA

1642. SMARTWHEELS PVT. LTD. (7201-FZ-07), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH ROAD, GONDA, UTTAR PRADESH, - 271001 PH :233598.

GORAKHPUR

- 1643. SMARTWHEELS PVT. LTD. (7201-72-01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012 PH :2200267, 3090906.
- 1644. SMARTWHEELS PVT. LTD. (7201-72-06), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012 PH: 0551-3090906.
- 1645. SMARTWHEELS PVT. LTD. (7202-72-01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. -273209 PH: 9235401004.

GREATER NOIDA

1646. ROHAN MOTORS LTD. (T201-T2-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH - 201306 PH :0120-4513739,40,09,01, 2560564, 2569984-85, 2004073.

HAMIRPUR

1647. KTL LTD. (QH01-QH-01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301 PH :7408409304, 9235443403.

HAPUR

1648. ROHAN MOTORS (6G01-6G-01), DELHI-HAPUR ROAD, OPPOSITE SSV INTERCOLLEGE,HAPUR, DISTRICT- GHAZIABAD - 245101 PH :+11222313203.

HARDOI

- 1649. CONCEPT CARS PVT. LTD. (QE01-QE-01), NANAK GANJ, LUCKNOW ROAD, HARDOI -241001 PH :9792971496.
- 1650. CONCEPT CARS PVT. LTD. (QE01-QE-04), PLOT NO. 1608 & 1606 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001

HATHRAS

 DEV MOTORS (P) LTD (B601-LP-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS 204101
 PH:9917435500.

JAQDISHPUR

1652. BRIGHT 4 WHEELS SALES PVT. LTD. (XC01-XC-01), KATHORA MUSAFIRKHANA LUCKNOW SULTANPUR ROAD, JAGDISPUR-UTTAR PRADESH - 227817 PH :06438-9721526961 : 9628374814.

AUNPUR

1653. KIRTIKUNJ AUTOMOBILES PVT. LTD. (6H01-6H-01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001 PH: 9554951026.

JHANSI

1654. SURI AUTOMOBILES (6001-60-01), 362/1 NEHRU MARG, CIVIL LINES, JHANSI - 284001 PH :330844

KANNALLI

1655. KTL PVT. LTD. (2801-EM-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725 PH:7408409304.

KANPUR

- 1656. KTL PVT. LTD. (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002 PH:0512-290459.
- 1657. KTL PVT. LTD. (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007 PH:0512-401390.
- 1658. MY CAR PVT. LTD. (2803-28-01), 84/54 C, JARIB CHOWKI, G.T. ROAD, KANPUR - 208003 PH:0512-3988833.
- 1659. MY CAR PVT. LTD. (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022 PH:0512-2691756.

- 1660. S B CARS PVT.LTD (2806-28-01), 77B, FAZALGANZ, KANPUR - 208012 PH:0512-2241660.
- 1661. MY CAR PVT. LTD. (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004 PH:0512-3067601.
- 1662. S B CARS PVT.LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017 PH:7408430365.

KAUSHAMBI

1663. GREENLAND MOTORS (AYA1-AYA-01), OPP. NAVEEN SAMITI MANDI STHAL, MANJHANPUR, KAUSAMBHI - 211001 PH :9919202043 . 9838107762.

KIRAOLI

1664. PREM MOTORS PVT. LTD. (BJZ1-BJZ-01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA – JAIPUR HIGHWAY, KIRAWALI, DISTRICT – AGRA, UTTAR PRADESH. - 283122 PH :7055007646.

LAKHIMPUR

1665. SUMITRA DS MOTORS PVT LTD (W201-M3-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001 PH :262583/4/5.

LALITPUR

1666. SURI AUTOMOBILES (6001-6J-03), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH :9451496015.

LUCKNOW

226024

PH:0522-2739501.

- 1667. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW PH: 0522-2473369.
- 1668. ANAND MOTOR AGENCIES LTD. (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105
- PH:0522-315791, 315792, 315000, 7080000469.
 1669. ANAND MOTOR AGENCIES LTD. (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW: 226016
- PH:0522-3098257, 7080000463.

 1670. ANAND MOTOR AGENCIES LTD. (1301-13-04),
 G-3, LDA MARKET, ALIGANJ, LUCKNOW -
- PH:0522 4103406/407/408, 7080000464. 1671. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-01), 11/CP-6, VIKAS NAGAR, RING ROAD. LUCKNOW - 226022
- 1672. KTL LIMITED (1302-13-02), MATIYARI CHAURAHA, CHINNHAT, FAIZABAD ROAD, LUCKNOW - 227105 PH -0522-315301

- 1673. KTL LIMITED (1302-13-03), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016 PH :0522-2340183.86.
- 1674. KTL LIMITED (1302-13-04), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005 PH :9918451222.
- 1675. ONE UP MOTORS INDIA PVT. LTD. (1306-13-01), C-16A, TRANSPORT NAGAR, KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012 PH :9918100801.
- 1676. ONE UP MOTORS INDIA PVT. LTD. (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH :9839015046.
- 1677. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH:9838075960.
- 1678. ONEUP MOTORS INDIA PVT. LTD. (1306-13-04), PLOT NO. 1/5, PATRAKARPURAM ROAD, VINEET KHAND, GOMTI NAGAR, LUCKNOW, UTTAR PRADESH - 226010 PH :0522-0522-4943666, 9918100291.
- 1679. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW. - 226001 PH:7705911825, 9838075929.

MADHOGANJ

1680. CONCEPT CARS PVT. LTD. (BHI1-BHI-01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241001 PH:7607696666.

MAHARAJGANJ

1681. SMARTWHEELS PVT. LTD. (EI01-EI-01), NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303 PH.05523-7705803113.

MAHMUDARAD

1682. CONCEPT CARS PVT. LTD. (AAN1-AAN-01), IN FRONT OF POWER HOUSE, SIDAULI ROAD, MAHMOODABAD (U.P.) - 261203 PH :05864-253893.

MAHOBA

1683. SURI AUTOMOBILES (6001-RM-02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH, - 284001 PH:5281-244344, 9451496015.

MAINPURI

1684. KULDEEP MOTORS (6E01-SG-02), SKP-4A, MAINPURI - 205001 PH 9235258444

MALIHABAD

1685. ONE UP MOTORS INDIA PVT. LTD.

(BOD1-BOD-01), KHASRA NO. 326/1 AND 327,
VILLAGE PARGANA, TEHSIL – MALIHABAD,
DISTRICT – LUCKNOW, UTTAR PRADESH. 227111
PH. 3918100781.

MATHURA

1686. UMA MOTORS PVT. LTD. (H801-H8-01), 68, MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004 PH :0565-2463043/6290700.

MEERUT

- 1687. UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, PH :9588001008
- 1688. RAJ SNEH AUTO INDIA PVT LTD (4803-48-01), 210, DELHI ROAD, NEAR AMAR UJALA, MEERUT - 250001
- PH:0121-2408038
- 1689. RAJ SNEH AUTO INDIA PVT LTD (4803-48-02), GARH ROAD, OPP. PURI PETROL PUMP, MEERUT, UTTARPRADESH - 250003 PH :121-2408031-35.
- 1690. TANYA MOTORS (4802-48-01), 35 CHIPPI TANK, BEGUM BRIDGE ROAD, MEERUT - 250001 PH:0121-4020006, 648829.
- 1691. TANYA MOTORS (4802-48-03), 40, NAUCHANDI GROUND, MEERUT - 250001 PH :0121-4026208, 2658008, 09, 10.
- 1692. RAJSNEH AUTO INDIS PVT. LTD. (4803-48-05) NEAR TAKSHILA COLONY, OPP. MEDICAL COLLEGE, GARH ROAD, MEERUT - 250002 PH:9568007373, 9837581179.
- 1693. RAJ SNEH AUTO INDIA (P) LTD. (4803-48-06), OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, MEERUT (U.P.) -250002
- PH:0121-2575787, 2575797.
- 1694. RADHA GOVIND AUTOMOBILES PVT. LTD. (4807-48-01), VILLAGE – BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002 PH:7456001001.

MIRZAPUR

1695. STAR CARS (6K02-6K-01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001 PH :9450544961.

MODINAGAR

1696. MOTORCRAFT SALES PVT. LTD. (5903-M7-02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204 PH :01232 -2244001,9219444550.

MOHANLAL GANJ

1697. BRIGHT 4 WHEEL SALES PVT. LTD. (BWU1-BWU-01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANI, LUCKNOW DISTT., UTTAR PRADESH - 227305 PH :7571905966.

MORADABAD

- 1698. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001 PH :0591-2485111,2480888, 2487722.
- 1699. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-03), 5TH KM DELHI ROAD, MORADARAD - 244001

PH -9219404041

1700. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-04), KHASRA NO. 569-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001 PH - 72945600005

MUZAFFARNAGAR

1701. RADHA GOVIND (H903-H9-01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001 PH :9412210301.

NAUGARH

1702. SMARTWHEELS PVT. LTD. (QG01-QG-01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHNAGAR - 272205 PH:05544-211078.

NOIDA

- 1703. FAST TRACK AUTO CARE INDIA PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR
 - PH:120-4581111/31.

PH:0120-4747300.301.

- 1704. JKM MOTORS (A184-A1-01), A-25,SECTOR 9,DISTT. GAUTAM BUDH NAGAR,NOIDA PH:0120-4052400.
- 1705. MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA,
- PH:0120-2402671-72.

 1706. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
 & 9.SECTOR-8.NOIDA
- PH:0120-5332222. 1707. FAIR DEAL CARS PVT. LTD. (A103-A1-01), D-39, SEC-10, NOIDA - 201301
- ROHAN MOTORS LTD. (A102-A1-01), C-8/9, SECTOR - I, NOIDA - 201301
 PH : 0120-4071900, 209,31,32,2529407, 2530535, 2539297, 2556663.
- 1709. ROHAN MOTORS LTD. (A102-A1-02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301 PH:0120-4071900, 209,31,32,.

- 1710. MOTORCRAFT SALES PVT. LTD. (5903-A1-03), D-39, SECTOR-10, NOIDA - 201301 PH:9818660777, 9810500000.
- 1711. VIPUL MOTORS LTD. (A101-A1-02), B-124 & B-125, SECTOR – 5, NOIDA, UTTAR PRADESH

PH:8800785532, 9818600000.

1712. VIPUL MOTORS PVT. LTD. (A106-A1-01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301 PH:0120-4758605.

ORAI

1713. S B CARS PVT.LTD (2806-LU-02), KANPUR ROAD, ORAI - 285001 PH:9307219303.

PILIBHIT

1714. CORAL MOTORS (P) LTD. (IL01-IL-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001

PRATAPGARH

1715. GREENLAND MOTORS (2903-NK-02), PITAI KA PURVA, JOGAPUR, ALLAHABAD ROAD, PRATAPGARH - 230001 PH :9838075757.

PURANPUR

1716. CORAL MOTORS (P) LTD. (CAD1-CAD-01).
KHASRA NO. 768 & 2770, VILAGE – KHAMRIYA
PATTI, PURANPUR – PILIBHIT ROAD, TEHSIL
AND PARGANA – PURANPUR, DIST. PILIBHIT. 262124
PH 105880-9837891846. 9927001120.

RAIBAREILLY

1717. KTL LIMITED (1302-HS-05), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303 PH:0532-937177411,415.

RAMNAGAR

1718. NAINITAL MOTORS PVT. LTD. (XM01-XM-01), BASAI, KASIPUR ROAD, RAMNAGER - 244137 PH:05947-282013.

RAMPU

1719. AKANKSHA AUTOMOBILES PVT. LTD. (B401-6L-02), JUDGES ROAD, RAMPUR, UTTAR PRADESH - 244901 PH :0595-9219415225.

RAYA

1720. UMA MOTORS PVT. LTD. (BXK1-BXK-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204 PH :9837204254.

SAHARANPUR

1721. ATELIER AUTOMOBILES PVT. LTD. (S202-S2-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001 PH :0173-2395001.

RAHIRARAD

- 1722. FAST TRACK SERVICES, (M981-M9-01), PLOT NO.40/18/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). PH:9560868111.
- 1723. FAIR DEAL CARS PVT. LTD. (08A5-M9-01), 12/67 SITE 4, INDUSTRIAL AREA,,SAHIBABAD, GHAZIARAD - 110095

PH :0120-4740409/102/436

- 1724. MOTORCRAFT SALES PVT. LTD. (5903-M9-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010 PH:0120-4172222 / 4102222.
- 1725. T.R. SAWHNEY MOTORS PVT LTD (0819-M9-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA,DISTT- GHAZIHABAD, UTTAR PRADESH -201010 PH -204753300. 9811020333.
- 1726. MARKETING TIMES AUTOMOBILES PVT LTD (0887-M9-02), PLOT NO. 509 & 511, WAZIRABAD LONI ROAD, OPP. SHALIMAR GARDEN, SAHIBABAD DISTT GHAZIABAD,U.P. - 201005 PH -9873298702,9818799910.

SAMBHAL

1727. AKANKSHA AUTOMOBILES PVT. LTD. (BBP1-BBP-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302 PH :0592-3232400.

SANDILA

1728. CONCEPT CARS PVT. LTD. (WY01-WY-01), NEAR PUNJAB NATIONAL BANK, LUCKNOW ROAD, SUMBABAGH, SANDILA - 241204 PH: 05854-270001.

SHAHABAD

1729. CONCEPT CARS PVT. LTD. (AAX1-AAX-01), VILLAGE MUJAGADH, SHAHABAD - 241124 PH:9151783146.

SHAHJAHANPUR

1730. SUMITRA DS MOTORS PVT LTD (W201-W2-01), SITAPUR ROAD, NH-24, SHAHJAHANPUR -242001 PH :05842-220333, 233909.

SHAMLI

1731. RADHA GOVIND AUTOMOBILES PVT. LTD. (XJ01-XJ-01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776 PH :1398-244571, 244572-73.

SHIKOHABAD

1732. MADHUSUDAN VEHICLES PRIVATE LTD. (XH01-XH-01), 2508, KATRA MIRA, MAHAMMABAD, OPP PROFESSOR COLONY, NH 2, BYE PASS ROAD, SHIKOHABAD, DISTT: FIROZABAD, UTTAR PRADESH - 283203 PH : 9, 8370978985-1019.

SITAPUR

1733. CONCEPT CARS PVT. LTD. (QE01-6M-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001 PH :9161284000.

SULTANPUR

1734. KIRTIKUNJ AUTOMOBILES PVT. LTD. (N101-N1-01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-66 (FAIZABAD BYPASS) SULTANPUR - 228001 PH: 05362-227760 . 220107.

THAKURDWARA

1735. AKANKSHA AUTOMOBILES PVT. LTD.
(KO01-KO-01), 2 KM. MORADABAD ROAD, NEAR
JEETA KA DHABA, SAHAB GANJ MUNSHI
GANJ), THAKURDWARA, DISTT. MBD. UTTAR
PRADESH - 244601
PH : 789580619.

UNCHAHAR

1736. KTL PVT. LTD. (1302-IH-06), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, SALON, UNCHAHAR, DISTT: RAIBARELI - 229404 PH :9451133838.

UNNAO

- 1737. VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, PH. 0515-2830610 2831248
- 1738. S B CARS (2806-KL-04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.F. - 209801 PH :5153-9839811711,202445.

VARANASI

- 1739. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI PH:0542-25100469, 9415203641.
- AGR AUTOMOBILES PVT. LTD. (8403-84-01),
 B-38/2A, MAHMOORGANJ, GOPAL VIHAR,
 VARANASI 221010
 PH :0542-2360436.
- 1741. VARANASI MOTORS PVT. LTD. (8402-84-01), THE MALL, CANTONMENT, VARANASI - 221001 PH:0542-2509068, 2509069.

1742. VARANASI MOTORS PVT. LTD. (8402-84-03), AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) -221002 PH. 9838360662.

UTTARAKHAND

ALMORA

 NAINITAL MOTORS PVT. LTD. (J603-SQ-04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601 PH: 9639016895.

BAGESHWAR

1744. NAINITAL MOTORS PVT. LTD. (J603-8I-05), KAPKOT ROAD, BAGESHWAR. - 263642 PH -9927708822

BAZPUI

1745. AKANKSHA AUTOMOBILE (RUDRAPUR) PVT. LTD. (CGU1-CGU-01), KHASRA NO. 96/2, VILLAGE – BHONA, ISLAM NAGAR, TEHSIL – BAZPUR, UTTARAKHAND. - 262401 PH :9837278256.

CHAMPAWAT

1746. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (U403-SF-03), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523 PH :05965 - 230033.

DEHRADUN

- 1747. D.D. MOTORS (5704-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN PH:0135-2745330, 31, 32.
- 1748. FUTURE AUTO WHEELS PVT.LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001 PH :0129 -4271800.
- 1749. ROHAN MOTORS LTD. (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001 PH :0135-2530955, 624519, 626097.
- 1750. ROHAN MOTORS LTD. (5702-57-02), 257/2, GMS ROAD,,VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001 PH :0135-2720342/43/44.

OPESHWAR

1751. ROHAN MOTORS LTD. (5702-MV-03), CHOTA, MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028 PH :01372-251572.

HALDWANI

1752. NAINITAL MOTORS PVT. LTD. (J603-J6-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139 PH:9639016895. 1753. NAINITAL MOTORS PVT. LTD. (J603-J6-02), KALA DUNGI, NEAR ABDULLAH PETROL PUMP, HALDWANI - 263139 PH :9639016895.

HARIDWAI

 SHAKUMBARI AUTOMOBILES (P) LTD (6N02-6N-01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407 PH :01334-310676, 321432.

KASHIPUR

1755. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (U403-DG-02), BAZPUR ROAD, KASHIPUR -244713 PH :9219408725.

KHATIMA

1756. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD, (KLO1-XL-01), VILLAGE: HEFETL SANDA
KHAM (SAL BHOJI NO.3, OPP. FOREST
CORPORATION) PILIBHIT ROAD,
KHATIMA, UDHAM SINGH NAGAR,
UTTARAKHAND. - 262308
PH. 8191000813.

KOTDWAR

1757. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-2I-02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001 PH:8755998075-9927708822.

PITHORAGARH

 NAINITAL MOTORS PVT. LTD. (J603-NM-03), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501 PH 9639016895.

RANIKHET

1759. NAINITAL MOTORS PVT. LTD. (AXA1-AXA-01), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTARAKHAND) 263645 PH :05962-230254.

RISHIKESH

1760. FUTURE AUTO WHEELS (AAS1-AAS-01), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201 PH :0135-2432387.

ROORKEE

1761. SHAKUMBARI AUTOMOBILES (P) LTD (H201-H2-01), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARIDWAR - 247667 PH :01332-326160, 72267, 76216.

RUDRAPRAYAG

1762. ROHAN MOTORS (IK01-IK-01), GULABRAI-BADRINATH ROAD, RUDRAPRAYAG - 246171

PH:1364-233118.

1763. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (U403-U4-01), KICHHA BYE PASS ROAD, INDUSTRIAL AREA, RUDRAPUR - 263153 PH: 05944-247203.

SITARGANJ

1764. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (CD01-CD-01), PLOT NO.228/5 AND 228/6 KHATIMA ROAD, SITARGANJ, DISTT -RUDRAPUR, UTTARAKHAND. - 262405 PH-8192000375

SRINAGAR

1765. SHAKUMBARI AUTOMOBILES (ANA1-ANA-01), SRICOT GANAGANALI, NEAR MEDICAL COLLEGE, PO- SRICOT, SRINAGAR - 246174 PH:1346-244571.244572-73.

TEHRI

1766. D.D. MOTORS (5704-SP-02), PLOT NO. 541, SECTOR-8E, DISTT. - NEW TEHRI - 249001 PH:01376-233144.

WEST BENGAL ALIPURDUAR

1767. PODDAR CAR WORLD PVT. LTD.

(BZ01-BZ0-01), BIRPARA MORE, COOCH
BEHAR ROAD, BESIDE GOYENKA PETROL
PUMP, ALIPURDUAR, WEST BENGAL. - 736121
PH. 03564-9800633338.

ASANSOL

1768. BEEKAY AUTO PVT LTD (F601-F6-01), CHANDA MORE, N.H.-2, ASANSOL - 713301 PH :341-2344030/31/2343978, 9932049425.

BAHRAMPU

1769. BEEKAY AUTO PVT LTD (T301-DJ-02), BOKULTALA (PASCHIM GAMINI), NH-34, BAHARAMPUR, DISTT. MURSHIDABAD. - 742101 PH :3482-267340.

BANKURA

1770. BHANDARI AUTOMOBILES LTD. (G701-6Q-02), PLOT NO.-156, KH NO.-173, MITHILA MOUZA, AT/PO-BANKURA (WB) - 722101 PH :34242-256766.

BARASAT

1771. PREMIER CAR WORLD PVT. LTD. (X203-XZ-01), RS DAG NO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, JL NO. 4, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700125 PH :8420122407.

BARSUNDRA

1772. BHANDARI AUTOMOBILES PVT LTD (G701-BJW-05), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE. WEST BENGAL - 721654 PH.9933055539.

BARUIPUR

1773. ONE AUTO PVI LTO (ACA1-ACA01),
MAHENDRA NIKETAN, KHASH MALLICK, P.O.
SOUTH GOBINDAPUR, P.S.-BARUIPUR, DISTT.
SOUTH 24 PARGANAS, WEST KOLKATA (WEST
BENGAL) - 700145
PH :8884018013.

RASIRHAT

1774. BHANDARI AUTOMOBILES LTD. (X701-0D-03), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. -743428 PH :3217-249192, 249194.

BISHNUPUR

1775. BHANDARI AUTOMOBILES PVT. LTD.
(AAG1-AAG-01), STATION ROAD, P.O+P.SBISHNUPUR, DIST: BANKURA, WEST BENGAL722122
PH. 9933055539.

BOLPUR

1776. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-TC-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM PH:3463-252577, 252777.

BONGAON

1777. STARBURST MOTORS PVT LTD (TQ02-TQ-01), 376(D, R O B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235 PH 9874195451.

BUDGE BUDGE

1778. ONE AUTO PVT. LTD. (BAV1-BAV-01), MAHESH TALA, NEAR DAKGHAR RALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141 PH :83850503578442830001.

BURDWAN

1779. BEEKAY AUTO PVT LTD (T301-T3-03), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL -713101 PH:033-9932049454.

C K ROAD

1780. BHANDARI AUTOMOBILES PVT. LTD. (D001-D0-01), P.C:SAT BANKUPA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252 PH :3222-9933055539.

CHAKDAHA

1781. BHANDARI AUTOMOBILES (OM01-OM-01), VILLAGE – PUMLIA, P.O. – CHAKDAHA, DISTRICT – NADIA, WEST BENGAL - 741222 PH:9073940368, 9674735303, 9674169007.

CONTAI

1782. BHANDARI AUTOMOBILES LTD. (G701-GV-03) SERPUR BAMUNBAR,P O- MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL 721401 PH:3220-254572.

COOCH BEHAR

1783. PODDAR CAR WORLD PVT. LTD.
(BWZ1-BWZ-01), CHAKCHAKA, NEELKUTHI
BAZAR, NEAR ADA FACTORY, NH-31, COOCH
BEHAR, WEST BENGAL. - 736101
PH :03582-258567. 7031045594.

DARJEELING

1784. BEEKAY AUTO PVT LTD (4301-6U-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101 PH:354-9233539579.

DURGAPUR

1785. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213 PH :343-2547777, 9233500277.

GHATAI

1786. BHANDARI AUTOMOBILES (AAD1-AAD-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL,WEST MIDNAPORE,WEST BENGAL - 721211 PH:993305559.

GOPIBALLAYPUR

1787. BHANDARI ALTOMOBILES PVT. LTD.
(BPQ1-BPQ-01), JL NO. 1103, KHATIAN NO. 1103, PLOT NO. 498, VILLAGE + P.O. + P.S. GOPIBALLYPUR, MOUZA - GOPIBALLYPUR, WEST MIDNAPUR, WEST BENGAL - 721506
PH:993035539, 8170018577.

HALDIA

1788. BHANDARI AUTOMOBILES LTD. (G701-SE-04) BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657 PH:3224-8016082344, 9233502421.

HOWRAH

1789. BHANDARI AUTOMOBILES LTD. (X701-X7-01), BANKRA THANA,DOMJUR,HOWRAH. - 711403 PH:33-66137528/18/06.

JALPAIGURI

1790. PODDAR CAR WORLD PVT. LTD. (XY01-XY-01), COLLEGE PARA, SIRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101 PH :03561-257155, 257066, 8945534921.

JHARGRAM

1791. BHANDARI AUTOMOBILES PVT. LTD. (BUG1-BUG-01), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507 PH:8016087297. 9933055539.

KALNA

1792. BEEKAY AUTO PVT LTD (WZ01-WZ-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409 PH 9932251483.

KALYANI

1793. STARBURST MOTORS PVT LTD (IJ01-IJ-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S COLLEGE), KALYANI. - 741234 PH.033-25824139J25824140.

KESHPUR

1794. BHANDARI AUTOMOBILES (CCM1-CCM-01), JL NO. 338, KHATIAN NO. 786/2, PLOT NO. 1749, MOUZA – KESHPUR, VILLAGE + P.O. + P.S. – KESHPUR, WEST MIDNAPUR, WEST BENGAL. 721150

KHARAGPUR

PH:721150.8170014289.

1795. BHANDARI AUTOMOBILES LTD. (G701-G7-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301 PH:3222-755537.

KOLKATA

1796. MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA PH:33-24568326, 24486568, 24568325.

1797. AUTO HITECH PRIVATE LIMITED (0604-06-01), 34-A, C.N. ROY ROAD, KOLKATA - 700039 PH :33-40218200,8231/8222/8262.

- 1798. DEWAR'S GARAGE (0605-06-01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069 PH:33-2483397 (NA).
- 1799. MACHINO TECHNO SALES LTD. (0601-06-01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA - 700017 PH :33-30285317/18/16/12/15.08272981466.
- 1800. MACHINO TECHNO SALES LTD. (0601-06-02), 48 A, TARATALA ROAD, KOLKATA - 700066 PH:33-24913755, 24913993.
- 1801. PREMIER CARWORLD PVT. LTD. (0611-06-01), AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058 PH:33-6606555/25235910.
- 1802. BHANDARI AUTOMOBILES PVT. LTD. (0609-06-02), 37, GULAM JILANI KHAN ROAD, KOLKATA. - 700039 PH:033-9903850402/9830044089.
- 1803. SANEI MOTORS PVT LTD (0612-06-01), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION, KOLKATA - 700067 PH: 033-30103043.
- 1804. ONE AUTO PVT LTD (0614-06-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA, WEST BENGAL - 700105 PH : 033-8442830001.
- 1805. ONE AUTO PVT LTD (0614-06-01), JL NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADAHA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099 PH:8442830001.
- 1806. DEWAR'S GARAGE (0605-06-03), P-27/2, TARATALA ROAD, KOLKATA - 700088 PH:033-24010011, 8584015273.
- 1807. SANEI MOTORS PVT LTD (0612-06-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059 PH :8584050184, 958405071.
- 1808. OSL MOTOCORP PVT. LTD. (0616-06-01), 49 DEBENDRA CHANDRA DEV ROAD, LANE BESIDE SILVER SPRING CLUB, E.M. BYE-PASS, KOLKATA - 700015 PH :3369466946, 08697982283.

KRISHNANAQAR

1809. BHANDARI AUTOMOBILES LTD. (X701-GS-02), PLOT NO.-1874, MOUZA-GOBINDSARAK,J.K. NO. 94, PS-KOTWAL,OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011 PH:3472-223587.

MADHYAMGRAM

1810. STARBURST MOTORS PVT LTD (BXJ1-BXJ-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129 PH 9830130265.

MAHESHTAL/

1811. BHANDARI AUTOMOBILES (0609-06-01), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL - 700143 PH :033-64995331/2.

MALDA

1812. J.K. WHEELS PVT LTD (L801-L8-01), GABGACHHI, N.H. 34, MALDA, - 732103 PH :3512-258884, 266379.

NAIHATI

1813. PREMIER CAR WORLD PVT. LTD. (YD01-YD-01), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. -JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) -743123

URULIA

PH:8420122451.

1814. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-84V-02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149 PH :3252-242100.

RANAGHAT

1815. STARBURST MOTORS PVT LTD (BBW1-BBW-01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741238 PH :8584040215, 8336933447.

SEORI

1816. BEEKAY AUTO PVT LTD (F601-KC-02), RAMBADANPUR, NEAR SP MORE, DIST-BIRBHUM, SEORI - 731101 PH :3462-259055 / 9233503153.

SILIGURI

 1817. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA, SILIGURI. - 734428 PH: 353-2002254, 6533554.
 1818. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI, STATE HIGHWAY -12,

DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001 PH :353-2568592, '9932049347.

1819. SEVOKE MOTORS PVT. LTD. (4302-43-01), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001 PH:353-2545309/12/13.

SREERAMPORE (SREERAMPUR)

1820. BHANDARI AUTOMOBILES (BBT1-BBT-01), BANGIHATI (MADPUR) DELHI ROAD, SREERAMPUR, DISTT: HOOGHLY, WB - 712203 PH :33-66137505, 66137585, 9674741544.

TAMLUK

1821. BHANDARI AUTOMOBILES PVT. LTD. (OL01-OL-01), MOUZA PADUMBASAN, WARD NO 10, JL NO:144, DISTT: EAST MIDNAPUR, WEST BENGAL - 721636 PH:9933055539.

TARAKESHWAR

1822. SANEI MOTORS (YH01-YH-01), MOUZA BAIDYAPUR, UNDER BALIGORI(1), GRAM PANCHAYET, TARAKESHWAR, DISTT. HOOGLY, WEST BENGAL PH.9836872710.

ULUBERIA

1823. BHANDARI AUTOMOBILES (2401-24-01), HOLDING 1242A, BANITABLA, P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH, WEST BENGAL - 711316 PH:8336070344.

DELHI

DELHI

- J. J. IMPEX (MARUTI SERVICE MASTERS)
 (0883-08-03), PLOT NO. 9, SSI INDUSTRIAL
 ESTATE, G.T. KARNAL ROAD, OPP JAHANGIR
 PURI, NEAR KDR WOOL FACTORY, DELHI
 110033
- PH:011-40715500, 40715501.
- J.J IMPEX (MARUTI SERVICE MASTERS) (0883-08-01), F-39, OKHLA INDUSTRIAL AREA, PHASE-II, NEW DELHI - 110020 PH:011-41612194, 40685500.
- MARUTI SALES & SERVICE(DELHI) (0810-08-01), C-119, INDUSTRIAL AREA PHASE-I, NARAINA, NEW DELHI - 110028 PH :011-45541113.

TAMIL NADU

CHENNA

 J.J IMPEX (MARUTI SERVICE MASTERS) (1485-14-01), # 9, (SP), THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH :044-43563366, 43563367.

ANDHRA PRADESH

TIRUPATI

KOUNDINYA ENTERPRISES (N981-N9-01), 18-3-60,KT BY PASS ROAD,,TIRUPATI - 517501 PH:0877-2233051.2231047.

ARUNACHAL PRADESH

ITANAGAR

2. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111 PH:0360-2212843.

ASSAM

BARPETA

ROY AUTO ENGINEERING WORKS (7Z81-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD, WARD NO.-4. ASSAM - 781315 PH:03666-260343, 262743.

DULIAJAN

B.S. MOTORS (X881-X8-01), NO. 01. BORPOTHAR TINALI, DULIAJAN, - 786602 PH :0374-2801255

BIHAR

PATNA

CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE. PATLIPUTRA . PATNA - 800013 PH:0612-2265916.9334115900

CHHATTISGARH

RAIGARH

SHAKTI AUTOMOBILES (7Y81-7Y-01), ORRISSA ROAD, KABIR CHOWK, BANJHIPALI, RAIGARH, C.GARH - 496001 PH:9300006496.

DELHI

DELHI

- A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, ,LAWRANCE ROAD,,DELHI - 110035 PH:011-48280000.
- GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, -110018 PH:011-43276666

HARYANA

BALLABGARH

ROYAL MOTORS (9R81-9R-01), 21/5, G.T. ROAD. BALLABHGARD, DISTT-FARIDABAD - 121004 PH:0129-4271800.9899242536.2242536.

MURTHAL

PH :0474-9447711001

10. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIIDC, MURTHAL - 131027 PH :0130-2482230

PANCHKULA

CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA. PHASE-2. PANCHKULA -134113

PH:0172-2592310. 2594310. 5064336. PANIDAT

VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103 PH:180-4001490.

SAHA

13. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT,-AMRAI A - 133104 PH :0171-2822669 9896402469

YAMUNANAGAR

HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001 PH -1732-261937

HIMACHAL PRADESH

JASSUR

15. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201 PH:01893-226555.

JAMMU & KASHMIR

SRINAGAR

16 RAHIM MOTORS (1281-12-01) SIDGO INDUSTRIAL AREA RANGRETH SRINAGAR 2441384 PH :0194-2435909

JHARKHAND

RANCHI

17. PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA. RANCHI. - 834001 PH:0651-2544661.2542650.

KERALA

ERNAKULAM

AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 682024 PH:9847521112.

KOTTARAKARA

19. CHITHIRA AUTOMOBILES (C781-S8-01). RAILWAY STATION JUNCTION .KOTTARAKARA 691506

PATHNAMTHITTA

AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA -689640 PH:0468-9288117477.

MADHYA PRADESH

NEEMUCH

21. AUTO SCAN (3T81-3T-01), MHOW ROAD.NEEMUCH.MADHYAPRADESH, - 454775 PH:07423-221912

MAHARASHTRA

AHMEDNAGAR

22 VLIAY ALITOMORII ES (A581-A5-01) OPP MSER SUB STATION, NAGAR-PUNE ROAD, KEDGAON, AHMEDNAGAR - 414005 PH:0241-2550049.

MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017 PH:020-65001981.

THANE

24. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI, WAGLE ESTATE MAIN ROAD, WAGLE ESTATE, THANE 400007

PH:022-25872222

ORISSA **KEONJHAR**

25. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001 PH:06766-256466.

PUNJAB

BATALA

CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505 PH:01871-98724024253.

MOGA

SM AUTO CARE CENTRE (H681-H6-01), OOP, ITI G.T. ROAD, MOGA - 142001 PH :1636-226807

RAJASTHAN

JAIPUR

KATARIA AUTOMOBILES (1181-11-01), 1-A; NARAYANPURI,KATARIA KRISHI FARM,SIRSI ROAD, JAIPUR - 302034 PH:141-2471740/2471014/2471406.

TELANGANA

HYDERABAD

29. RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D.NEW NAGOLE COLONY.NAGOLE VILLAGE. HYDERABAD.NAGOLE. HYDERABAD - 500068 PH -040-9848062263

UTTAR PRADESH

AGRA

PRIME MOTORS (6681-66-01), 8B/7D, BYE PASS ROAD, DEV NAGAR, AGRA - 282007 PH:0562-2531881, 2531882.

ALIGARH

31. VINEET MOTORS (MSZ) (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMCHAT ROAD, ALIGARH - 202001 PH 9917473052 9582123586

BULANDSEHAR

SK & COMPANY (M581-M5-02), KHASRA NO. 2261, NEAR T POINT, BY PASS SHIKARPUR ROAD, BULANDSHAHR. - 203395 PH:05732-235400.

GHAZIARAD

33. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1. SECTOR-B3. TRONICA CITY, GHAZIABAD -201102

PH:9999107841.9997093422.

KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR, HAPUR ROAD, GHAZIABAD - 201002 PH:2714143, 9210026200.

LUCKNOW

35 K M ALITOCRAFT (1381-13-01) 76/3 BARALIRA HUSSAIN BARI, HARDOI ROAD, LUCKNOW -226003 PH :0522-2473369

UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, -PH:9568001008.

MOIDA

37. FAST TRACK AUTO CARE INDIA PVT. 1 TD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301 PH:120-4581111/31.

JKM MOTORS (A184-A1-01), A-25, SECTOR 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301 PH:0120-4052400.

MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA, - 201301 PH:0120-2402671-72.

MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
 \$ 9,SECTOR-8,NOIDA - 201301
 PH:0120-5332222.

SAHIBABAD

 FAST TRACK SERVICES, (M981-M9-01), PLOT NO.40/18/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010 PH 9560868111.

UNNAO

 VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1184. KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801 PH:0515-2830610, 2831248.

VARANASI

43. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002 PH :0542-25100469, 9415203641.

WEST BENGAL

KOLKATA

 MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027 PH :33-24568326, 24486568, 24568325.

ANDHRA PRADESH

ADILABAD

MAHA LAXMI AUTOMOTIVES (2240), NH# 7
OPP. H.P. PETROL
BUNK,TIRUPALLY,ADILABAD, (A.P.)
PIN-504001
PH -08732-9000345313

AMALAPURAM

2.## MARUTI MOTORS (3825), ONGC BY PASS ROAD,AMALAPURAM,E G DISTRICT (A.P.) PIN-533201 PH-08856-236156/235789

ANANTAPUR

3.** GOWRI AUTO. & ENGG. WORKS (2621), PATEL ROAD,ANANTHAPUR (A.P) PIN-515001 PH:-8554274675.

ARMOOR

4.## HYDERABAD MARUTI MOTORS (4932), PLOT NO. 6,BESIDE THAKUR BEEDI FACTORY,ARMOOR,DISTRICT-NIZAMABAD (ANDHRA PRADESH) PIN-503224 PH::9848205619.

BHADRACHALAM

5.## SRI VENKATARAMANA AUTO CARE (2831), MARUTI SERVICE STATION, OPP. COLLEGE GROUNDS, GOLLAGATTA ROAD, BHADRACHALAM (A.P.) PIN-507111 PH: -9290792269.

CUDDAPPAH

6.## SREE VENKATESWARA AUTO. (1030), SANKARA PURAM,CUDDAPAH (A.P.) PIN-516001

PH:9440708234/9440223461.

SIVAJI MOTORS (3275), BESIDES PADMASHALI KALYANAM MANDAPAM,MADRAS ROAD,KADAPA,ANDHRA PRADESH PIN-516002
PH:06562-9849113189.

GAJWEL

8.# VIJAY MOTORS (4864), HYDERAAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIINNAGAR, PREGHAPUR - GAJWL, ANDHRA PRADESH PIN-502278 PH -9849863665, 08454233028.

QUNTAKAL

9.## S. MAHABOOB AUTOMOBILES (4075), ALUR ROAD,GUNTAKAL PIN-515802 PH:-94402-08312/9963344109/924748109.

QUNTUR

\$ S. S. MOTORS (4946), OPP. JKC COLLEGE, JKC COLLEGE ROAD, GUNTUR, ANDHRA PRADESH PIN-522006 PH: -9848273503/9395553636.

HYDERABAD

1-2-605/A3 & 6,LOWER TANK BUND ROAD,NEAR INDIA PARK NORTH GATE,HYDERABAD PIN-500380 PH:-9849015667, 92462 75661. 12.## PISTONS & SPANHERS (2766), 23-37 MAHARANA PRATAP FUNCTION HALL AMBERPET HYDERABAD PIN-50013

11.## COSMO AUTO CLINIC PVT. LTD. (1045),

PH:040-6585480/9990649504.

ARYAN MOTORS (3264), D.NO.17-1-382/K/5 & 6,CHAMPAPET SAIDABAD,SAGAR

ROAD,HYDERABAD PIN-500011

PH:040-240774599246155464.

PH: :040-2407/459/9246155464.

BHARAT MOTORS (3574), 1-90/7,BEHIND SUPRABHAT HOTEL,HABSIGUDA "X" ROAD,HYDERABAD PIN-500007 PH: :040-9849447759.

.## NEW TECHNOCRATS AUTO SERVICES (4477), 1-2-607/23/1/C,AMBEDKAR NAGAR,INDIRA PARK ROAD,HYDERABAD (ANDHRA PRAESH) PIN-500029 PH :040-9948039515.

6.## SERWELL AUTOMOBILES (5234), PLOT NO 202.203.ADITYA NAGAR OPP, JNTU, KUKA TPALLY HYDERABAD, ANDHRA PRADESH PIN-500072

PH:-9490105147.

PH:-9440727211.

JAGTIAL

7.## PARAMESHWARA MOTORS (3851), OPP P R OFFICE,DHAROOR CAMP,JAGTIAL,DT. KARIMNAGAR (A.P.) PIN-505327 PH:08722-9912664659.

KAKINADA

18.## SATISH AUTO CARE (5038), BEHIND
KALPANA THEATRE,BEACH ROAD
KAKINADA, DISTRICT EAST
GODAVARI,ANDHRA PRADESH PIN-533001
PH: 0884-2376198, 984513599.
19.## SI SHIRDI SAI TECHNOCRAFTS (1459),
COMPUTERISED CAR CARE
CENTRE, NAGAMALLI THATA
COLONY, KAKINADA PIN-533003

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

KARIMNAQAR

20.** PUSHPAK MOTORS (1032), KOTHI RAMPUR,HYDERABAD ROAD,KARIMNAGAR (A.P) PIN-505001

PH:0878-9849163796, 9480035617.
21.## MYTRI MOTORS (5152), 8-6 188.KOTHI RAMPUR, KARIMNAGAR, DISTRICT - KARIMNAGAR, ANDHRA PRADESH PIN-505001

PH:-9441475357.

22.## KAMAL MOTORS (3842), 10-15-43/J3A OPP LIC,TANK RAOD,KAVALI PIN-524201 PH 108626.8801444888

KHAMMAM

23.## EXCEL AUTO CARE (1043), 10-2-57/1,MAYURI CENTRE,KHAMMAM PIN-507001 PH:08742-9848156363.

KODAD

24.# SAI KAKATIYA SERVICE STATION (4664), SURYAPETA ROAD,OPPOSITE LORRY ASSOCIATION BUILDING,KODAD,DISTRICT-NALGONDA (ANDHRA PRADESH) PIN-508206

PH:-9848057813,9912616759.

25.# SRINIWAS AUTO GARAGE (5170), KALLUR ROAD, KURNOOL, DISTRICT -KURNOOL, ANDHRA PRADESH PIN-518003 PH : 944024460, 8186816828.

MACHILIPATNAM

26.## SRI MARUTI MECHANICAL WORKS (4172), OPP BEL COMPANY, DOOR NO. 17/541, MACHILIPATNAM, ANDARA PRADESH PIN-521001 PH:0867-9440538012.

MAHABUB NAGAR

27.## SRI AYYAPPA MARUTI CLINIC (3941), OPP HOSPITAL,HYDERABAD ROAD,YEMUGONDA,MAHABUB NAGAR (ANDHRA PRADESH) PIN-509001 PH: 08542-271827/9440569259.

MANCHERIAL

28.## PARVATI MOTORS (4129), 4-53 BPL ROAD,MANCHERIAL,DISTRICT ADILABAD,ANDHRA PRADESH PIN-504208 PH :08736-988554888.

MANDAPETA

9.# MODERN MARUTI CARE (4866), D.NO.

4-1-59/2, MAIN

ROAD,MANDAPETA,DISTRICT-EAST GODAVARI,ANDHRA PRADESH PIN-533309 PH:08855-231839, 233664, 9849198494.

MATHURAWADA

MIRYALQUDA

0.# ANY TIME SERVICE CENTRE (4860), BESIDE ELECTRICAL SUBSATION,MADHURAWADA,DISTRICT VISAKHAPATNAM,ANDHRA PRADESH PIN-530041

PH:-9440160426.

31.## GANESH MOTORS (4536), D.NO. 6-366, P.V.
COMPLEX,NALGONDA
ROAD,MIRYALGUDA,NALGONDA DISTT
(ANDHRA PRADESH) PIN-508207
PH: -9441090870.

NAGARI

12.# PUJITHA SERVICE CENTER (5872), TIRUPATI ROAD,NAGARI,DISTRICT-CHITTOOR,ANDHR A PRADESH PIN-517583 PH: 9849441079.

NANDYAL

33.## MARUTI MOTORS (2635), 26-130 OPP. GOVT.
DEGREE COLLEGE, KURNOOL
ROAD,NANDYAL PIN-518501
PH :08514-48765/9249299822/9440554167.

NELLORE

34.## MARUTI AUTO SERVICE STN. (2620), 16/796
SANKARA AGRAHARAM,NELLORE (A.P)
PIN-524001
PH :0861-9246599268
MARUTI MOTORS (176), 16/1051
POOATHOTA (NEAR RACHAVA CINE

PH :-9440278243

MITAMADAE

PRIYA SERVICING (1771), C/O TIRUMALA CHITRA MANDIR,HOUSE NO.1-9-833,PHULANG ROAD,NIZAMABAD (A.P.)PIN-503003 PH:08467-9848071208.

COMPLEX).NELLORE.(A.P.) PIN-524001

PATTIKONDA

ROYAL MOTORS (5776), ADONI ARTS & SCIENCE, COLLEGE ROAD ADONI, PATTIKONDA-518302, DISTRICT-KURNOOL, A NDHRA PRADESH PIN-518302 PH : 9866362847.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

PRODDATTUR

38.## SRI RAM MOTORS (3642), 189 INDUSTRIAL AREA, NEAR SRI LAKSMI NAGAR, MYDUKUR ROAD, PRODDATUR (A.P.) PIN-516360 PH: 08564-966890525.

RAJAHMUNDRY

39.## MARUTHI MOTORS (1257), D.NO.6-3-10 CHALLAPALLIVARI STREET,T. NAGAR,RAJAHMUNDRY PIN-533101 PH:-9848253434.

RAMAGUNDAM

40.## ALI AUTOMOBILES (2849), NEAR TV RELAY STATION,NTPC JYOTHINAGAR,RAMAGUNDAM,DISTT. KARIMNAGAR (AP) PIN-505215

SECUNDERABAD

PH:-9848219102.

41.## ANNAPURNA MOTORS (2947), # 6-3-23/5 JAYANAGAR COLONY,NEAR MEKALMANDI,NEW BHOIGUDA,SECUNDERABAD PIN-500080 PH : 040-9849061136.

SIDDIPET

42.* POOJA MOTORS (4076), 19/180 KARIMNAGAR ROAD,G.P. PRASANTH ROAD,SIDDIPET,DISTRICT MEDAK (AP) PIN-502103 PH :08457-9885551518.

SIRSILLA

43.# SATHVIKA MOTORS (5649), KARIMNAGAR ROAD, OPP HP PETROL PUMP, SIRSILLA, DISTRICT - KARIMNAGAR, ANOHRA PRADESH PIN-505301 PH: 3-9440966649/9490284726.

SRIKALAHASTI

44.## SUNDEEP CARS (5972), 16/769,SRI RAM NAGAR COLONY,SRIKALAHASTI,DISTRICT-CHITTOO R,ANDHRA PRADESH PIN-517640 PH: 08572-230714/9848294869.

SURYAPET

45.## SAI GLOBAL AUTO SERVICES (4550), OPP. AYYAPPA SWAMY TEMPLE,BY PASS ROAD, NH-9,SURYAPET,ANDHRA PRADESH PIN-508213 PH-08684-225552, 9848076108.

TENALI

46.## HIMAJA MARUTI SERVICE STATION (2828), LECTURER'S COLONY,GIRIJA HOSPITAL ROAD,GANGANAMMAPET,TENALI, GUNTUR DIST. (A.P.) PIN-522201 PH-08644-9849715727.

47.## RAHUL MOTORS (5157), D.NO.18-3-4BITRA SRI RAMULU STREET,BEHIND TELEPHONE EXCHANGE SALIPET,TENALI,ANDHRA PRADESH PIN-500035

VAIZAG

48.# SRINIVASA AUTO GARAGE (5440), OPP. KANTI ROAD, NEAR RAYS PETROL PUMP VISHAKHAPATNAM, DISTRICT -VISHAKHAPATNAM, ANDHRA PRADESH PIN-500001 PH -9398689853.

PH:-9490187453/9440229595.

VIJAYAWADA

49.## ADITYA CAR CARE (5231), 76-12-1.OPP
PETROL PUMP, BHAVANIPURAM, DISTRICT VIJAYAWADA, ANDHRA PRADESH
PIN-520010
PH: -9703124070.

VISAG AUTO SCANS (461), NO.54-10-18

VISHAKAPATNAM

FLOGRINGS,ISUKATHOTA
JIN, VISHAKHAPATHAM PIN-530022
PH :0891-2556302;9246625885.
SIRI AUTOMOBILES, (2522), PLOT O 94/A IDA
E BLOCKAUTO NAGAR,
GAJUWAKA, VISHAKHAPATNAM, ANDHRA
PRADESH PIN-330026

ISUKATHOTA, BEHIND DECENT

PH:-9963296667.

VIKRAMA AUTOMOBILES (4621), 17-13-4
 TEMPLE STREET, VIZAINAGARAM
 (A.P.), VIZAINAGARAM (A.P.) PIN-531202
 PH: 08922-2253951/9440192224.

WANAPARTHY

53.# SMC MOTORS (5658), K.K.T.
ROAD,BASA/VANNA
GADDA,WANAPARTHY, DISTRICT
-MAHABUBNAGAR,ANDHRA PRADESH
PIN-509103
PH: 3545-9440142927.

WARANGAL

VAISHNAVI AUTOMOBILES (470), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL PIN-506001 PH :-9866561075.

ARUNACHAL PRADESH

ALONG

55.## BANNU MOTORS (1744), SIYOM MARKET,ALONG,WEST SIANG DISTT.,(ARUNACHAL PRADESH) PIN-791001 PH :03783,233407

BOMDILA

56.## GURU MOTORS (3921), BIRPUR, RUPA, ARUNACHAL PRADESH PIN-790003 PH:03712-282727

NIRJULI

57.## SANGO SERVICE STATION (5742), NH-52, NIRJULLIDISTRICT-PAPUMPARE,ARUNACHA L PRADESH PIN-791110 PH: -9436052490.

ROING

PERTIN MARUTI WORKS (5545), DISTRICT-LOWER DIBANG VALLEY, ROING, ARUNACHAL PRADESH PIN-792110 PH:03803-262843.

TAWANG

TAWANG MARUTI SERVICING STATION (4255), OLD BAZAR LINE,P.O. & P.S.,TAWANG,ARUNACHAL PRADESH PIN-790104

PH:03782-222143. YINGKIONG

VIJAY MOTORS (5971), UPPER MARKET, P.O:YINGKIONG, DISTRICT-UPPER SIANG, ARUNACHAL PRADESH PIN-791002 PH:-9436228808.

ZIRO

61.## HILLS AUTO AGENCY (3922), POLICE RESERVE & PETROL PUMP ROAD, HAPOLI BAZAR P.O. ZIRO, DISTT. LOWER SUBANSIRI, ARUNACHAL PRADESH PIN.791120 PH. 30788-224736.

ASSAM

BADARPUR

2.## MARUTI CAR PLAZA (3635), NEAR INDUSTRIAL AREA,S.T. ROAD,BADARPUR,DISTT. KARIMGANJ (ASSAM) PIN-788806 PH 193845-268257

BISHAWANATH CHARIALI

63.## DISHANG DONE (1058), 52
N.H.,BISHWANATH CHARIALI,DISTT.
SONITPUR,ASSAM PIN-784176
PH:-222309.

64.* BINA AUTOMATION (3677), P.O.
BISHAWANATH CHARIALI,DISTT.
SONITPUR,ASSAM PIN-784176
PH:03715-230356.

BOKAJAN

65.## SREE GANESH MOTORS (6040), SUKHANJAN SUPER MARKET, P.O:BOKAJAN(C.F.),DISTRICT KARBI ANGLONG,ASSAM PIN-782480 PH:03675-249977/9435167138.

BOKAKHAT

GOENKA AUTOMOBILES (2878), P.O. BOKAKHAT,DISTT. GOLAGHAT,ASSAM PIN-785612 PH:03776-268366.

DHALIGAON

17.## ADHIKARI MOTOR WORKS (4049), P.O. DHALIGAON, DIST-BONGAIGAON, ASSAM PIN-783385 PH: 03664-241721/9435214176.

DHEMAJI

68.## NARAH AUTOMOBILES (3852), C/O BLUE HILL COUNTER,P.O. DHEMAJI,DISTT. DHEMAJI,(ASSAM) PIN-787057 PH:03753-225146.

DHUBRI

69.## BRAHMAPUTRA MOTOR SERVICING STATION (3127), G.T.B ROAD,DHUBRI (ASSAM) PIN-783301 PH-03682-234021

DIBRUGARH

GEE DEE AUTO SERVICE (953),
JHALUKPARA,DIBRUGARH,ASSAM
PIN-786001
PH. 3073-2329796.
* MEHBOOB AUTOMOBILES & TYRE
SERVICES (1760), CHOWKIDINGHEE,NEAR
STATE TRANSPORT,DIBRUGARH

PH:0373-2318072.

2.** GAURI AUTOMOBILES (3760), MULIABARI,DIGBOI PIN-786171 PH:03751-269029.

PIN-786003

DIPHU

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

73.## WOJARU MOTORS (4377), DPHU MANJA ROAD,DILAJI,NEAR BIRLA FACTORY,DIPHU PIN-782460 PH :03671-271466.

DOOM DOOMA

S K AUTO CARE (3962), UCHAMATI,NATIONAL HIGHWAY,DOOM DUMA,ASSAM PIN-786151 PH:03759-240243/9435135876.

GOALPARA

75.## BHARAT ENGINEERING WORKS (969), PO -BALDMARI,AGIA ROAD,GOALPARA, (ASSAM) PIN-783102 PH : 240321.

GOLAGHAT

76.## KAKOTI MOTOR WORKS (1074), NEW AMOLAPATTY,RANGPUR,P.O. GOLAGHAT,DISTT. GOLAGHAT (ASSAM) PIN-785621 PH -283177

GOSSAIGAON

77.## NARZARY AUTOMOBILES (4544), NH-31C, HABRUBIL,GOSSAIGAON,DIST KOKRAJHAR,ASSAM PIN-783360 PH :9435127166

GUWAHATI

78.** MONO MOTOR WORKS (966), BAMUNI MAIDAN,GUWAHATI PIN-781021 PH :-2550115/2656982/9864060665.

HAILAKANDI

79.## RONOK AUTOMOBILES (5978), LALA ROAD, NEAR CIVIL HOSPITAL,HAILAKANDI,DISTRICT-HAILAKAN DI,ASSAM PIN-788151 PH: :223328)9707428563.

HOZAI

80.## PRAMAN MOTORS (5730), NAGANDRA NAGAR, WARD NO.1-HOJAI,DISTRICT-NAGAON,ASSAM

PH:-9954369700.

1.## BOROOAH MOTORS (4545), NH-52 MURKONG SLEEK,DIST. DHEMAJI,JONAI,ASSAM PIN-787060 PH:03758-222219 (R).

KARIMGANJ

82.## S D AUTOMOBILE (4931), SILCHAR
ROAD,KARIMGANJ,KARIMGANJ PIN-788710
PH :-9435074975.

KOKARAJHAR

83.## NAGA AUTOMOBILES WORKS (3879), JUHWLAO DWIMALOO ROAD,BHOBANIPUR,DISTT KOKRAJHAR,ASSAM PIN-783370 PH: 03661-275545.

LUMDING

84.## BEDI MOTORS (5827), MAIN ROAD, NORTH LUMDING, LUMDING, DISTRICT -NAGAON, (ASSAM) PIN-782447 PH -9435163185

MANGALDAI

85.## PRIYAM AUTOMOBILES (2424), NH 52 COLLEGE ROAD,MANGALDAI,ASSAM PIN-784125

MARGHERITA

86.* VIRDI MOTOR WORKS (955), MISSION ROAD,P.O. MARGHERITA,DIST. TINSUKIA, (ASSAM) PIN-786181 PH:-220406.

PH:03713-230528

MARIANI

87.## VASKAR AUTOMOBILES (5237), NEAR NST TINALI. P.O. :MARIANI, DISTRICT -JORHAT, ASSAM PIN-785634 PH : 33771-293810.

MIRZA

KALITA AUTOMOBILES (4259), N.H. 37,NEAR PETROL PUMP,MIRZA,ASSAM PIN-781125 PH:-9864410013.

MORANHAT

CHINAKI SERVICE STATION (2973), (MARUTI AUTHORISED SERVICE STATION), NATUN NAGAR A.T. ROAD, MORANHAT, (ASSAM) PIN-785670 PH :03754-229522/9401512821.

MORIGAON

PRAGATI MOTORS (5273), MORIGAON TOWN. WARD NO.1 BHATBOR, DOLON PATH.P.O.:MORIGAON, DISTRICT -MORIGAON, ASSAM PIN-782105 PH: 9864189158.

NAGAON

91.## DAS MARUTI MOTOR WORKS (3734), NAGAON,(ASSAM) PIN-782001 PH :03672-225031

NALBARI

** A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

92.## B.R.K. AUTOMOBILES ENGINEERING WORKS (2838), HAJO ROAD,NALBARI,(ASSAM) PIN-781335 PH:03624-9954050050.

NAMBUP

93.## RAJ ENTERPRISES (3849), NAMRUP INDUSTRIAL ENTERPRISES, SONARI TINIALI, PARBATPUR, NAMRUP (ASSAM) PIN-786623 PH :0374-2502856.

NORTH LAKHIMPUR

94.** GREEN LAND MARUTI WORKS (2974), NEAR GURUDWARA, NH 52, NORTH LAKHIMPUR, (ASSAM) PIN-787001 PH: 03752-9435086197/9577646296.

PATHSALA

5.## USHA AUTOMOBILES (4240), N.H 31,
PATHSALA, DISTRICT-BARPETA, ASSAM
PIN-781325
PH:-266012/9401310431.

RANGIA

6.## SWEET MOTOR WORKS (4375), NH-31,N.T. ROAD,WARD NO. 5,RANGIA PIN-781354 PH :03621-240525, 9435141291.

SILAPATHAR

.## J. B. MOTORS (5743), NH-52, JONAI ROAD-SILAPATHAR, DISTRICT - DHEMA JI, ASSAM PIN-787059 PH: 9954635182.

SILCHAR

** CARDROME (1559), 2ND LINK ROAD JUNCTION, SONAI ROAD (M H C ROAD), SILCHAR, (ASSAM) PIN-788006 PH:-225128.

TEZPUR

99.## POOJA MOTOR WORKS (4373), N.T.
ROAD,MURATETLI,TEZPUR,ASSAM
PIN-784001
PH:03712-200127.

TINSUKIA

100.* AUTO MAKERS (934), NEAR SHIVDHAM MANDIR, MAKUM ROAD, TINSUKIA, (ASSAM) PIN-786125 PH: 0374-2352841.

TITABAR

101.## SHANKAR AUTO WORKS (5174), C/O:SHIV SHAKTI AUTO WORKS.BALAJI,MARKET TITABAR CHARIALI TITABAR,DISTRICT -JORHAT,ASSAM PIN-785634

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

UDALGURI

102.## RENU MOTORS (4543), WARD NO. 2, U.T.
ROAD,UDALGURI TOWN,UDALGURI,ASSAM
PIN-784509
PH: 03711-225096, 9435222344.

BIHAR

ARRAH

103.## ANJALI ENTERPRISES (5533), ARRAH SASARAM MAIN ROAD,ZERO MILE,NEAR POWER GRID, ARRAH,DISTRICT-BHOJPUR,(BIHAR) PIN-802301

PH:06182-9386734804. AURANGABAD (BIHAR)

104.## K R N AUTOMOBILE (2242), NEW G.T. ROAD,(NH-2),AURANGABAD,(BIHAR) PIN-824101 PH:06186-9304930657.

BEQUSARAI

BHAGALPUR

105.## K.B. MOTORS (4768), NH-31,SINGHAUL, POKHAR, BEGUSARAI,BIHAR PIN-851134 PH :06243-983521415. 106.* NATIONAL AUTO WORKS (1536), INDUSTRIAL AREA,BARAUNI,BEGUSARAI

PIN-851122

PH:06243-9973381733.

77.** RUPRA AUTOMOBILES (1577), EAST OF AIRPORT, BHAGALPUR, P.O. BAHADURPUR, (BIHAR) PIN-813210 PH :0641-9334385531.

BIHAR SHARIFF

108.## SARVADAY ENGG. & AUTO SER (1549), INDUSTRIAL ESTATE,RAMCHANDRAPUR,BIHARSHARIFF (NALANDA) PIN-803101 PH-06112-9334672919.

CHAPRA

109.## PRASAD AUTOMOBILES (1974), BHAGWAN BAZAR,CHAPRA,(BIHAR) PIN-841301 PH:06152-9431216362

DARBHANGA

10.* SINGH MARUTI CARE (2277), P.O. LALBAGH, DARBHANGA, (BIHAR) PIN-846004 PH:06272-9431293796.

QAYA

AUTO CARE (3027), DURGA BARI, HARIDAS CHATTERJEE LANE, NEAR SAINT PAUL SCHOOL, GAYA (BIHAR) PIN-823001 PH:0631-9939407978.

112.## ALFA AUTO (5454), PASWAN CHOWK, NH13, HAJIPUR, DISTRICT - VAISHALI, BIHAR PIN-844101 PH:06244-9431327965.

HAZIDUR

113.** HI-TECH AUTOMOBILE (3123), GANDHI SETU PATH.N.H.-19.HAJIPUR.VAISHALI (RIHAR) PIN-844101 PH:06224-9835044502

KAHALQAON

114.## MAHA GAURI ENTERPRISES (5822), NTPC ROAD, GANGANAGAR. CHOWRATHIYASTHAN KAHAI GAON DISTRI CT-BHAGAI PUB BIHAR PIN-813203 PH:-9431463558.

KHAGARIA

115.## HIGHWAY SERVICE STATION (2374). NH-31.P.O. KOSHI COLLEGE.KHAGARIA (BIHAR) PIN-851204 PH:06244-9430067775.

MADHEPURA

116.## KRISHNA AUTOMOBILES (2639). PATHRAHA.SINGHSWAR ROAD, MADHEPURA, (BIHAR) PIN-852213 PH:06476-223315.

MADHUBANI

117.## VIDYAPATI AUTOMOBILE (4234), BHAUARA,GANGASAGAR,MADHUBANI,BIHA R PIN-847211 PH:06276-9534298143.

MOTIHARI

PUJA AUTOMOBILES (3174), NEAR LAL PD. PETROL PUMP,NH-28 CHHATAUNI,MOTIHARI,EAST CHAMPARAN (BIHAR) PIN-845401

MUNGER

119.## SUN BEAM ENGG WORKS (1533), 150 BETWAN BAZAR, P.O. & DISTT. MUNGER (BIHAR) PIN-811201 PH:6344-9431418941

PH:06252-9709752799.

MUZAFFARPUR

120.** DYNAMIC MARUTI SERVICE CENTRE (1163). MARG,AMGOLA,MUZAFFARPUR PIN-842002 PH:0621-9386834595.

PERFECT MOTORS (3465), NEAR CHANDNI CHAUK, JHITKAIYA, POST: MIT PS: BRAHAMPURA, MUZAFFARPUR (BIHAR) PIN-842003 PH:0621-9470450260.

PATNA

122.** CAR SCANNER (1552), OPP. BATA,KANKAR BAGH COLONY, PATNA PIN-800020 PH:0612-9431016342.

CITY AUTO SERVICE (1250), NEAR ALPANA MARKET, PATLIPUTRA COLONY, PATNA PIN-800013

PH:0612-9334117070. GOOD WRENCH SERVICES (3364), DAUDBIGHA,NR. NALANDA MEDICAL COLLEGE, KANKAR BAGH, MAIN ROAD, PATNA (BIHAR) PIN-800020 PH:0612-7277772777.

MARUTI MAINTAINER (4842), PLOT NO. 73,NEAR RAJENDAR NAGAR,OVER BRIDGE, KANKARBAGH,PATNA PIN-800020 PH:0612-9304564382

MOHINI AUTOMOBILES (1049), BEHIND BESERVE BANK OF INDIA EXHIBITION BOAD PATNA PIN-800001 PH:0612-9431094340.

BANJAN MOTORS (3665), SUDARSHAN PATH,NEAR PATNA SAHIB STATION,PATNA CITY PIN-800009

PH:0612-9334084343

RELIABLE MOTORS (2972). NEAR WEST OF 128.## COMMUNITY HALL NEAR NISHA DEVI ASHRAN FAST LOHANIPUR KADAMKUAN PATNA (BIHAR) PIN-800003 PH:0612-2686247/2671215.

TIRUPATI AUTO (1956), ASHIANA MORE BAILEY BOAD, OPPOSITE UNION BANK, RAJABAZAR, PATNA PIN-800014 PH:0612-9835050292.

130 ## ALITO INDIA (3026) BIHAR TALKIES ROAD,LINE BAZAR,PURNEA (BIHAR) PIN-854301 PH:0641-9334461651/9470204501.

SAMASTIPUR

131.## MARUTI CARE (1526), TAJPUR ROAD, SAMASTIPUR, (BIHAR) PIN-848101 PH:06274-9835034061

SASARAM

132.## TRIPTY CAR SERVICE CENTRE (5535). NEAR RELIANCE PETROL PUMP, G.T. ROAD.NH-2.SASARAM.DISTRICT-SASARAM. BIHAR PIN-821115

SITAMARHI

PH:-9431485592.

SITAMARHI AUTO CARE (6050), INDUSTRIAL RAJOPATTI,PO.SITAMARHI,DISTRICT-SITAM ARHI,BIHAR PIN-843302 PH:-9430012437.

CHANDIGARH

HAPPY SERVICE STATION (769), SECTOR 134.## 17B.MADHYA MARG,CHANDIGARH PIN-160017 PH:-9216721561

CAR CLINIC (179), 128 INDUSTRIAL AREA PHASE-II CHANDIGARH PIN-160002 PH:-9417216782.

RATTAN MOTORS (1155), SECTOR 23-C,CHANDIGARH PIN-160023 PH:-9814008335.

137.## HI-TEK MOTORZ (4743), PLOT NO. 658, INDUSTRIAL AREA,PHASE-1,CHANDIGARH PIN-160002 PH:0172-9872567868.

CHHATTISGARH

AMBIKAPUR

MARUTI AUTO CARE (4839), KHARSIA NAKA,AMBIKAPUR,DISTRICT-SURGUJA,CHA TTISGARH PIN-497001 PH:0774-9425256087/280294

BILASPUR (CHAT)

139.## RAINEY'S AUTO CARE (4770), RAIPUR ROAD MAHARANA PRATAP CHOWK, NEAR LABOUR COMMISSIONER OFFICE.JARBHATA.BILASPUR (CHATTISGARH) PIN-495001 PH:07752-224224

JAGDALPUR

140.## VISHWAKARMA AUTOMOBILES (4467), RAJMAHAL PARISAR, BAHAMBERS OF COMMERCE ROAD, JAGDALPUR, CHHATTISGARH PH:07782-223196, 228207.

JAMNIPALI

141.## AUTO CARE (3823), 203 J P COMPLEX SADA COLONY, JAMNIPALI, TEH. KATHGHORA,DIST. KORBA (CHATTISGARH)

PIN-495450 PH:07759-233797/233353.

KORBA

142.## AUTO SELF SERVICE (5020), MURARKA MARKET ROAD, (INDUSTRIAL ROAD), KORBA PIN-495677 PH:07759-247250/251.

MANENDRAGARH

143.## SHARMA AUTO CENTRE (5354), MAIN ROAD - MANENDRAGARH.DISTRICT KOREA.CHHATISGARH PIN-497442 PH:07771-241872/215305.

RAIPUR

144.## SHIVAM CAR SERVICES (4774). BILASPUR BOAD KHAMTARAI BAIPUR CHATTISGARH PIN-492006 PH:0771-3090522/2563093/3290522

RAJ NANDQAON (CHH)

145.## SAI MOTORS (3672), OPP DENTAL COLLEGE.SUNDARA.DURG NAGPUR HIGHWAY (NH-8), RAJNANDGAON PIN-491441 PH:07744-228433/9179791051.

DELHI

DELHI

SUBHYATRA AUTOMOBILES (5045), PLOT NO 31,N BLOCK SECTOR - 3,BAWANA INDUSTRIAL AREA BAWANA PIN-110039 PH:011-9810668715/9717421118. NAVEEN AUTOMOBILES (4934), 37, PATPARGANJ INDUSTRIAL AREA, NEW DELHI PIN-110092 PH:011-22163719/65092326. AUTO ENGRS.SERVICE STN. (8023), OPP.MODEL TOWN, DERAWAL NAGAR DELHI PIN-110009

DRIVE WELL SERVICE STN. (866), 1/486, G.C.S. COMPLEX, MAIN G.T. BOAD DILSHAD GARDEN NEW DELHI PIN-110095 PH:011-22575411/22119859.

RAJINDRA SERVICES PVT. LTD. (826), B-55 G.T.KARNAL BOAD INDUSTRIAL AREA DELHI PIN-110033 PH:011-27114915/42384512

PH:011-27231421/27231839.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

151.**	SHALIMAR AUTOMOBILES PVT. LTD (871),	164.##	YASHWANT PLACE SER. STN. (8022),	177.##	SHARMA AUTOMOBILES (193
	C-91/9 WAZIRPUR INDUSTRIAL		AFRICA AVENUE,(OPP.CHANAKYA		VILLAGE MOTI BAGH, NEAR N.
	AREA, ASHOK VIHAR CROSSING, DELHI		CINEMA),NEW DELHI PIN-110021		GURDWARA,RING ROAD,NEW
	PIN-110052		PH:011-24122424/26876388.		PIN-110021
	PH:011-27377718/27373096.	165.**	BRIGHT MOTORS (P) LTD. (885), C-263		PH:011-26875050, 26118764.
152.##	WIG AUTOMOBILES (8012), D-3 S.M.A		PEERAGARHI,OUTER RING ROAD,DELHI	178.##	BATRA CAR CARE CENTRE (1
	CO-OP. INDL. ESTATE, (OPP. JAHANGIR		PIN-110087		HUMAYUN ROAD, NEW DELHI
	PURI CHOWK),G.T. KARNAL ROAD,DELHI		PH:011-25267885/5252226.		PH:011-23389332.
	PIN-110033	166.##	SRI BALAJI AUTOMOBILE (8038), KHASRA	179.##	SHRI BALAJI CAR SCAN (2677
	PH:011-27692649/27696855.		NO.33,13/2-12 MAIN BAWANA		NEW ANAJ MANDI,NAJAFGAR
153.*	AAPKA KARKHANA (MOTORS)PL (869), 62/I		ROAD, SAMEYPUR (NEAR DELHI COLLEGE		PIN-110043
	POSANGIPUR MAIN MARKET,A-3 BLOCK		OF ENGG.),DELHI PIN-110042		PH:011-28012074/65478300.
	JANAKPURI,NEW DELHI,NEW DELHI		PH:011-65151149.	180.*	STAR AUTOMOBILES (2574), N
	PIN-110058	167.##	SRI SAI AUTO ENGINEERS (8074), 487/59		SAFIABAD ROAD,NARELA,DEI
	PH:011-25520157/25620947.		PEERA GARHI,INDUSTRIAL AREA,DELHI		PH:011-27284784.
154.##	ASHA AUTOMOBILES (850), A-2 CHOTTEY		PIN-110087	181.##	IMAGE (2561), IOC PUMP,NEA
	LAL PARK,NAJAFGARH ROAD,OPP.KIRTI		PH:011-25260904/24356581.		APT. OPP. KIRTI APT., MAYUR
	NGR.P.O,NEW DELHI PIN-110015	168.*	CMP AUTOMOBILES (8073), C-18 SHASHI		PHASE-I EXT., DELHI PIN-1100
	PH:011-25418492/25102655.		GARDEN,OPP. MAYUR VIHAR,DELHI		PH:011-22716910/22717590.
155.*	AUTOWISE SERVICE STATION (8001),		PIN-110092	182.##	GLOBE SERVICE STATION (36
	PP-38A GALI NO.10,ANAND PARBAT,KAROL		PH:011-22750083, 22750084.		MATHURA ROAD, BADARPUR,
	BAGH,NEW DELHI PIN-110005	169.**	TONIKA AUTOMOBILES (8079), A-15		PIN-110044
	PH:011-28761021.		WAZIRPUR INDL. AREA,MAIN RING		PH:011-41898333.
156.##	BASANT MOTORS (8003), 78 TOLSTOY		ROAD,DELHI PIN-110052	183.##	EXCEL AUTOMOBILES (3342),
	LANE, BEHIND SCINDIA HOUSE, NEW DELHI		PH:011-41472572.		78,BAGDOLA VILLAGE,SECTO
	PIN-110001	170.##	QUTAB SERVICE STATION (8078),		DWARKA,NEW DELHI PIN-110
	PH:011-23529566/23326860.		MEHRAULI ROAD, NEW DELHI PIN-110017		PH:011-25366202/65469750.
157.##	BHASIN SERVICE STATION (830), DR. K.S.		PH:011-26522726/26561242.	184.**	A-ONE AUTOMOBILES (3362),
	KRISHNAN ROAD, NEAR PUSA GATE, NEW	171.*	SATYA SERVICE STATION PVT. LTD. (3625),		NATIONAL MARKET, PEERAGA
	DELHI PIN-110012		L-BLOCK HARI NAGAR, JAIL ROAD, NEW		PIN-110087
	PH:011-25841794/25842852.		DELHI PIN-110064		PH:011-25278935/25287066.
158.##	ENGINEERS SERVICE STATION (834), SHRI		PH:011-25432926.	185.*	EXCLUSIVE AUTOMOBILES P
	AUROBINDO MARG,(SAFDARJANG	172.**	R S AUTOMOBILES (273), BAWA POTTERIES		(3546), 98 MANGOLPUR KALA
	AIRPORT), NEW DELHI PIN-110003		INDUSTRIAL COMPOUND, ARUNA ASAF ALI		NEAR JAIPUR GOLDEN
	PH:011-27512696.		MARG, VASANT KUNJ, NEW DELHI		HOSPITAL, ROHINI, DELHI PIN-
159.##	GUPTA SERVICE STATION (872), MOTI		PIN-110070		PH:011-7162696/32483339.
	BAGH SOUGH,NEW DELHI PIN-110021		PH:011-41761026, 41761810.	186.##	AUTOTECH ENGINEERS (455)
	PH:011-26170989/26192162.	173.##	NORTHERN SERVICE STATION (337), SARAI		20-24,MATIYALA VILLAGE,SEC
160.##	KITCHNER ROAD SERVICE STATION (864),		BASTI,ROAD NO.40,OPP. SHASTRI		DPS DWARKA, NEW DELHI PIN
	ROAD NO.41,SAHEED LALA JAGAT		NAGAR,DELHI PIN-110035		PH:011-25083711.
	NARAYAN MARG,NEAR T.V. TOWER		PH:011-23653122/65796229.	187.##	ANAND MOTORS (4471), B-27,
	PITAMPURA, DELHI PIN-110034	174.**	P R G MOTORS (365), A-99, 103CH.		ROAD, INDUSTRIAL AREA, NEV
	PH:011-65375676/27315321.		TEKCHAND MARKET, GANESH NAGAR -		PIN-110033
161.**	KUMAR AUTOMOBILES (855), B-281 OKHLA		TILAK NAGAR, DELHI PIN-110018		PH:011-27226256, 27466835.
	INDUSTRIAL AREA, PHASE-I, NEW DELHI		PH:011-42137852/25996299.	188.##	BHAGIRATH MOTORS (4737),
	PIN-110020	175.##	SINTEX SERVICE STATION (777), 883,		153/543,POOTH KHURD,DELH
	PH:011-26812566/26813132.		RITHALA INDUSTRIAL AREA, FIRNI NALA		PH:011-27761321.
162.**	MULTAN AUTOMOBILE ENGRS. (853), B-7/1		ROAD, DELHI PIN-110085	189.##	HUNDRED PERCENT FILLING
	OKHLA INDUSTRIAL AREA, PHASE II, NEW		PH:011-27055055/64694522.		STATION (4939), LSC, SECTOR
	DELHI PIN-110020	176.*	AUTO POINT SERVICE (1267), 70B RATTAN		NHAI,DWARKA,NEW DELHI PI
	PH:011-41610495/41610496.		PARK,OPP. RAMESH NAGAR,NEW DELHI		PH:011-25082966/25082967.
163.**	SEVEN HILLS AUTO.(P) LTD. (848), D-20/1		PIN-110015	190.##	BAJAJ MOTORS (4940),
	OKHLA INDUSTRIAL AREA, PHASE II, NEW		PH:011-25434040/25101270.		T-5/242,MANGOLPURI INDUST
	DELHI PIN-110020				AREA, PHASE-1, NEW DELHI PI
	PH:011-26388766/26388768.				PH:011-65164147.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

5050, 26118764. CARE CENTRE (1936), DAD,NEW DELHI PIN-110003 9332.

CAR SCAN (2677), 43/12 OPP, ANDI,NAJAFGARH,NEW DELHI 2074/65478300.

MOBILES (2574), MAIN DAD,NARELA,DELHI PIN-110040 . IOC PUMP.NEAR SAMACHAR

RTI APT..MAYUR VIHAR T..DELHI PIN-110091 6910/22717590 ICE STATION (3631), 18TH KM

DAD,BADARPUR,NEW DELHI

MOBILES (3342), PLOT NO. VILLAGE.SECTOR 8. W DELHI PIN-110045 3202/65469750.

MOBILES (3362), 487/35 RKET,PEERAGARHI,DELHI

8935/25287066. AUTOMOBILES PVT. LTD. NGOLPUR KALAN, SECTOR-2 R GOLDEN HINI,DELHI PIN-110085

NGINEERS (4551), PLOT NO. LA VILLAGE, SECTOR-3, NEAR A,NEW DELHI PIN-110075

RS (4471), B-27,G.T. KARNAL TRIAL AREA, NEW DELHI

256, 27466835. MOTORS (4737), PLOT NO. TH KHURD, DELHI PIN-110039

RCENT FILLING & SERVICE 39), LSC, SECTOR-9,OPP. NEW DELHI PIN-110075 2966/25082967.

RS (4940), GOLPURI INDUSTRIAL 1,NEW DELHI PIN-110083

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

191.## SHIKHAR AUTOMOBILES (5546), A-2/1CHOTTEY LAL PARK, SHIVAJI MARG, OPP KIRTI NAGAR, METRO PILLAR NO.341,NEW DELHI,DISTRICT - DELHI,DELHI PIN-110015 PH:011-25432956.

NEW DELHI

192.## ROHAN SERVICES (5444), PLOT NO:125, VILLAGE POCHANPUR, SECTOR - 23 DWARKA, DISTRICT - DELHI (WEST), DELHI PIN-110075 PH:011-9911180827.

GOA

BICHOLIM

193.## SHREE GURUKRUPA AUTOWORLD (1249), PLOT NO.76,BICHOLIM INDUSTRIAL ESTATE,BICHOLIM,GOA PIN-403529 PH:0832-2362600/9823831555.

194.## VIPUL AUTOMOBILES (5376), PLOT NO.7.8.9.KAKODA INSUSTRIAL-.STATE. KAKODA CURCHOREM.DISTRICT - SOUTH GOA.GOA PIN-403706 PH:0832-2651888/09422018746.

QOA 195.*

VIKAS ENGINEERING WORKS (4953), BHOMA,KUNDAIM,GOA PIN-403107 PH:0832-2396033/9823780335.

MAPUSA

SARDESAI AUTOMOBILES (2176), NEAR MILAGRES CHURCH, 194 GAUNSAWADA,MAPUSA,GOA PIN-403507 PH:0832-2256350, 2262361.

PONDA

197.* DHAVLIKAR AUTOMOBILES (2041), NO.5 TIP TOP MANSION IV, INDIRA NAGAR, PONDA, GOA PIN-403401 PH:0832-2317769/2315688/9890669879.

VERNA

LUBRICARE SERVICES (261), 7-D GOULLOY,NH.17 NUVEM,SALCETE,GOA PIN-403601 PH:-2790040.

GUJARAT

AHMEDABAD

AUTOWAY (125), MANGALYA COMPLEX,NEAR ANJALI CINEMA CROSS ROAD,BATTHA,AHMEDABAD PIN-380007 PH:079-9898016888.

OMOBILES (1939), 11/78 BAGH,NEAR NANAKPURA RING ROAD, NEW DELHI

200.## DAHISON MOTORS (143), NEAR MANAV MANDIR,DRIVE IN ROAD,AHMEDABAD PIN-380052

PH:079-9898064929 / 9898096242.
201.* RAJAN MOTORS (2873), C/0 M/S. SUPER SERVICE STATION,79/80 JAGABHAI PARK,RAM BAUG MANINAGAR,AHMEDABAD PIN-380008

PH:079-9825972345 / 9879273953.
202.## MEGHDOOT MOTORS (3437), MASONIC LODGE COMPOUND, SHAHIBAUG ROAD,AHMEDABAD PIN-380004 PH:079-9825488228.

203.** SPEED AUTO CARE PVT. LTD (5524),
NH-8, VIRAT NAGAR AHMEDABAD, DISTRICT
- AHMEDABAD, GUJARAT PIN-382350
PH :079-9825210344 / 9925204239.

204.* POKAR AUTO REPAIRERS (2479), NEAR UNION CO. BANK, SAIJPUR BOGHA, NARODA ROAD, AHMEDABAD PIN-382345 PH 1079.9998336510

AMRELI

205.* CAR CARE CENTRE (2734), PATEL
GARAGE, CHAKRAGADH
ROAD, AMRELI, (GUJARAT) PIN-365601
PH:02792-220099/233519/9825422922.

206.* KHODIAR MOTORS (3029), GAVADKA ROAD,AMRELI,(GUJARAT) PIN-365601 PH :02792-224696/9825672657.

ANAND

207.* PATEL TRACTOR COMPANY (2221), (SERVICE DIVISION),BEHIND SUNIL CHAMBERS,STATION ROAD,ANAND PIN-388001 PH :02692-9925534494.

208.## SHAKTI MOTORS (2226), OPP. J.K.
PARK,NATIONAL HIGHWAY NO.8,P.O.
VAGHASHI,TA: ANAND DISTT. KHEDA
PIN-388320
PH: 02692-9825792999.

AN.IAB

209.## CAR AGE (5542), PLOT NO.11, MAHATMA NAGAR-1, ANJAR-, GADHPADAR ROAD, NR. MAHAKALESHWAR, MAHADEV MANDIR, ANJAR, GUJARAT PIN-370201 PH :02836-9427216886/9427211167/241796.

BARDOLI

BHARUCH

210.** POOJA MOTORS (361), NEAR GIDC, SURAT ROAD, BARDOLI, (GUJARAT) PIN-394601 PH: 02622-9825762621. 211.* NEW MARUTI MOTORS (5156), 9/16 AKASH GANGA.B/H CNG PUMP,OLD NH -8.BHOLAV,DISTRICT - BHARUCH,GUJARAT PIN-392002 PH:02642-9879532460.

BHAVNAGAR

212.## VIKRAM MOTOR GARAGE (127), TAKHTESHWAR PLOT,NEAR CHANDRA BHUVAN,BHAVNAGAR PIN-364002 PH :0278-9426463280.

BHUJ

213.* ASHA MOTORS (3629), LAL TEKRI,HOSPITAL ROAD,BHUJ,(GUJARAT) PIN-370001

BILIMORA

214.## PATEL AUTOMOBILES (4030), DANDEKAR
COMPOUND, GANDEVI ROAD, BILIMORA
PIN-396380
PH :02634-9824123875 / 9825471557.

BORSAD

215.## SUMAN MOTORS (3863), NEAR NISHRAYA
CROSSING,BHARAN ROAD,BORSAD,DISTT.
ANAND PIN-388540
PH :02696-221524/9428434436.

CHAND KHEDA

16.* BALVINDER AUTOMOBILES (2528), PLOT NO.202/2,NATIONAL HIGHWAY NO.8,CHAND KHEDA,DISTT. GANDHI NAGAR (GUJARAT) PIN-382424 PH:079-9924016000 / 9924061000.

CHIKHLI (QUJ.)

217.## SHREE AMBICA MOTORS (2663), KUNDI FATAK,NEAR ADARSH NURSERY,N.H.B,CHIKHLI DISTT. VALSAD (GUJARAT) PIN-396001 PH:02632-285477/285029/9825131520.

218.## INAL MOTORS (3929), POST
MAJIGAM, CHIKLI BILIMORA ROAD, DISTT
NAVSARI PIN-396321
PH-02634-9199033773

DAHOD

9.* CAR SEVA (2438), APNA PLASTIC COMPOUND, OPP. ST. STEPHEN SCHOOL, GODHRA ROAD, DAHOD PIN-389151 PH:02673-9426469122.

DAMAN

220.## CAR ZONE (4358), SURVEY NO. 70/3,VARKUND, OPP VEERA DA DHABA,VAPI DAMAN ROAD,DAMAN PIN-396210 PH: 0260-9824184449.

11.## TOP GEAR (5469), DAMAN-KUNTA ROAD.KUNTA DAMAN,DISTRICT - UNION TERRITORY,GUJARAT PIN-396210 PH:9825631264.

DEESA

222.## VAKHARIA MOTORS (3970), G L PADIAR COMPLEX,PALANPUR PATHAN HIGHWAY,OPP. RAJMANDIR TALKIES,DEESA PIN-385001 PH::9377728841.

DHARI

223.## GURUKRUPA MOTORS (5876), NR.
NARMADESHWAR MAHADEV
TEMPLE, DHARI, AMRELI ROAD,
DHARI, DISTRICT-AMRELI, GUJARAT
PIN-365640

PH:-9924728405/9825374658.

224.## UNIVERSE AUTO (5837), SARDAR CHOWK, DHORAJI, DISTRICT-RAJKOT, GUJARAT PIN-360410 PH:9727714643.

DWARKA

DHORAJI

5.# BHADRA SERVICES (5975), OPP,SATHWARA BHUVAN,NR.KANDAS BAPU ASHRAM, DWARKA,DISTRICT-JAMNAGAR,GUJARAT PIN-361315 PH :02892-222207/9879615919.

GANDHI NAGAR

226.## SHITAL MOTORS P.LTD. (134), 304 G.I.D.C.,SECTOR-28,GANDHINAGAR (GUJARAT) PIN-382028 PH-172-9824310888 / 9924127065

227.* RIDDHI MARUTI(A DIVISION OF SHREE ARBODA PVT. LTD (2151), E-19/10 G.I.D.C. SECTOR 26,NEAR K-7,GANDHINAGAR PIN-382044

PH :02712-9825041331

28.* LABH MOTORS (4527), 803/2 KASHI DIAMOND,NR. PARTH GAS AGENCY, GIDC, SECTOR-28, GANDHINAGAR PIN-382028 PH: 079-9825020030 / 9712920030.

HALO

MAA MOTORS (4767), GODHRA ROAD,NEAR
TELEPHONE EXCHANGE,HALOL,GUJARAT
PIN-389350
PH:02676-229375/9898610212

HIMMATNAGAR

30.## MEHTA SERVICE STATION (135), NEAR SHANTI GARDEN, RESTAURANT, DIWALI BAUG MOTIPUPA, N.H.B. HIMMATNAGAR GUJARAT PIN-383001 PH:9825052891 / 9879682582.

IDAR

31.## ADINATH AUTOMOBILE & WORKSHOP (3136), NEAR HOTEL GREEN PARK,AMBAJI HIGHWAY ROAD,IDAR,(GUJARAT) PIN-383430 PH :02778-056787/055411

232.## SUN MOTORS (5175), IDAR-HIMMATNAGAR HIGHWAY POAD,AT KRUSHNAGAR. PO NETRAMLI,TA. IDER DISTRICT SABARKANTA, GUJARAT PIN-383430 PH:02778-9879589145 (9228286768.

JAM KHAMBHALIA

233.## SHRI HARI OM MOTORS (4539), JADESWAR ROAD CHAR RASTA, OPP. KRISHNA WAY BRIDGE, JAM KHAMBHALIA, GUJARAT PIN-361305 PH-02833-9426955344.

JAMNAGAR

234.* LANDMARK AUTOMOBILES (1973), AIRPORT ROAD,KHAMBHALIA HIGHWAY, JAMNAGAR,(GUJARAT) PIN-361006 PH-0288-9227620700.

JETPUR

235.## GIRIRAJ MOTORS (3971), SARDAR CHOWK,JETPUR HIGHWAY,JETPUR PIN-380370 PH-102803-295780/9727154392

JUNAQARH

MARUTI MOTORS (266), G.I.D.C. - I,RAJKOT HIGHWAY,DOLATPARA,JUNAGADH(GUJARA T) PIN-362037 PH-10285-9904717770

KALOL

237.## SUNRISE AUTO CENTRE (146), OPP.
IFFCO,AHMEDABAD-MEHSANA ROAD,SAIJ
KALOL,(NORTH GUJARAT) PIN-382721
PH :02764-309646/8824407885.

KAMREJ

PATEL MOTOR GARAGE (2764), SURAT ROAD, JYOTI PARK, KAMREJ CHAR RASTA, KAMREJ DIST. SURAT PIN-394285 PH:02621-9825127413.

KAPADVANJ

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

239.## DISHA MOTORS (5960),
MAHAMADPURA,KAPADVANJ-NADIAD
ROAD,KAPADVANJ,DISTRICT-KHEDA,GUJAR
AT PIN-387620
PH :02691-9825641244 / 9426361548.

KESHOD

240.## PRASAD MOTORS (3969), VERAVAL HIGHWAY,KESHOD,KESHOD PIN-362220 PH:02871-9426424488 / 93280 01734.

KHEDBRAHMA

241.## MARUTI AUTO CARE (5342), OPP POLICE STATION, AHMEDABAD-AMBAJI STATE HIGHWAY, KHEDBRAHMA, GUJARAT PIN-382255 PH: 02775-9427369512.

LIMDI

242.## PARTH AUTOMOBILES (4171), NEAR LIMDI CHOWK,AHMEDABAD RAJKOT HIGHWAY,LIMDI PIN-363641 PH :02763-9426714510.

LUNAWADA

243.## N.J. MOTORS (4370), MODASSA ROAD,NR. SAIFEE HOSPITAL,LUNAWADA,DIST: PANCHMAHAL (GUJARAT) PIN-389230 PH 1026474-250700/99254252700

MEHSANA

244.** SHUBH AUTO SERVICES (3367), NEAR
AGRO PETROL PUMP,OLD RTO,RAMOSNA
JAKAT NAKA,MEHSANA (GUJARAT)
PIN-384002
PH: 02762-9825120859 / 9825322460.

245.* SANKAR MOTORS (5488), PALAVASANA
-BECHARAJI ROAD,NR.ONGC FIRE STATION
,MEHSANA, DISTRICT-MEHSANA, GUJARAT
PIN-384002
PH-1072RS-982RS0RS150 / 982R604959

MORVI

246.## ARUN MOTORS (2071), SANALA BYE PASS,NEAR G.P. GINING MILLS,MORBI,GUJARAT PIN-363641 PH :02822-9825100253 (9825222825.

NADIAD

247.## SHIVAM MOTORS (4430), OPP RASHAM RESTAURANT,DABHAM CROSSING, N.H 8,NADIAD,GUJARAT PIN-387001 PH :0268-9824343515/258156.

NAKHATRANA

248.# ASHA MOTORS (4340), NANA
ANGLADESH, NAKHATRANA HIGHWAY
ROAD, NAKHATRANA, KUTCH PIN-370001
PH :02835-9427272315.

NAVSARI

249.** JIGAR MOTORS (133), N.H-8.KABILAPORE,NAVSARI,VALSAD DIST. (GUJARAT) PIN-396424 PH: 02637-9879549533.

PALANPUR

250.## PANCHAL AUTO REPAIRING WO (138), HIGHWAY ROAD,NEAR RAILWAY CORSSING,PALANPUR PIN-385001 PH :02742-9426323294.

PETLAD

251.## SIDDHI MOTORS (4166), NADIAD-CAMBAY ROAD,NEAR KAILASH DHAM,PETLAD PIN-387001 PH :02697-9429031303.

PULSANA

252.## ZEBA MOTORS (4535), PLOT NO. 5,ZAIBUNISHA MANZIL, ANUKOOL NAGAR,BEHIND SAFED CHAL,UNN SURAT (GUJARAT) PIN-395006 PH: 0261-9727719082

RAJKOT

253.** KHODIYAR MOTORS (356), DHEBAR ROAD (SOUTH),ATIKA INDUSTRIAL ESTATE,RAJKOT,RAJKOT PIN-360001 PH :0281-9925311011.

54.* UNIVERSE AUTO (5544), C/O DELHI GUJARAT TRANSPORTI, NR. NAVAGAM, OCTROI POINT, AHMEDABAD HIGHWAY, RAJKOT, DISTIRCT -RAJKOT, GUJARAT PIN-380002 PH 10281-2706543/987816643

RAJPIPLA

255.## R. N. MOTORS (5255), 22-GIDC NEAR PETROL PUMP, RAJPIPLA, DISTRICT -NARMADA, GUJARAT PIN-393145 PH :02640-220549/8925325300

SAVARKUNDLA

256.## SHYAM MOTORS (5961), OPP. ESSAR
PETROL PUMP, AMRELI ROAD,
SAVARKUNDLA, DISTRICT-AMRELI, GUJARAT
PIN-364515
PH :02845-9722222923.

SIDDHPUR

257.## GOOD LUCK MOTORS (5341), 2.UMIYA COMPLEX. NEAR GURUKUL,HIGH SCHOOL SIDDHPUR,DISTRICT - PATAN,GUJARAT PIN-384151 PH:02767-9428665131.

SIHOR

.# MOMAI MOTORS (6032), NR. RAJ MOMAI PETROLIUM,BHAVNAGAR-RAJKOT HIGHWAY,SIHOR,DISTRICT-BHAVNAGAR,G UJARAT PIN-364240 PH : 9909521980.

SILVASSA

259.## SHREE KRISHNA MOTORS (5374), PLON NO.43.66 KVA ROAD AMLI,SILVASSA,DISTRICT -(UT),GUJARAT PIN-396230 PH :9904707111 / 9904707123.

SURAT

260.## EMPEROR CAR TECH (1748), F.PLOT NO.124 NEAR RELIANCE COMPLEX, BESIDE SHEETAL MARBLE, SURAT-DUMAS ROAD PIPLOD, SURAT PIN-395007 PH :0261-9825033396.

261.## SEIKON MOTORS (3161), PLOT NO.49,50,51 SAI ASHISH INDL. ESTATE,NEAR BAMROLI BRIDGE,120 FT. BAMROLI ROAD,SURAT (GUJARAT) PIN-359002 PH:0261-9426149996.

262.** PATEL MOTORS (3060), 64 BAJRANG NAGAR,NEAR OCTROI CHECK POST,NANA VARCHA,SURAT PIN-395006 PH: 0261-9909149498.

263.* J.K.MOTORS (5158), LUHAR MOHALLA .POSTT PALGAM,DISTRICT -SURAT,SURAT,GUJARAT PIN-394510 PH :0261-9979665551.

4.* TARUN MOTORS (5254), PLOT NO.A-10/14.ROAD NO.4, MAHATMA GANDHI ROAD.UDYOG NAGAR, UDHNA -SURAT, GUJARAT PI-394210 PH :0261-9712976141.

265.* NILESH MOTORS (5347), PLOT NO.21/23 PARAS INDUSTRIAL ESTATE, NEAR GAJERA CIRCLE, KATARGAM, SURAT, DISTRICT -SURAT, GUJARAT PIN-395004 PH .0261-2481836. 9377162654.

SURENDERANAGAR

266.## ADIT MOTORS (1247), 504/B PHASE-III,G.I.D.C. WADHWAN CITY,SURENDRANAGAR PIN-363035 PH :02752-9825228205.

7.* RUBY MOTORS (5942), SASAN ROAD,OM NAGAR,TALALA,DISTRICT-JUNAGADH,GUJA RAT PIN-362150 PH :02877-9426975022.

UMBERGAON

268.## KARAN AUTOMOBILES (2571), OPP. DAMRU WADI,UMBERGAON SANJAN ROAD,UMBERGAON DIST. VALSAD,GUJARAT PIN-396170 PH-3269-9828336583.

UNJHA

269.## AMBIKA MOTORS (3932), SADGURU
COMPLEX,AHMEDABAD PALAM PUR
HIGHWAY ROAD,UNJHA,MEHSANA
PIN-384170
PH : 9824517382.

VADALI

VRAJ MOTORS (4560), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT) PIN-383235 PH:02778-220109 / 9427364109.

VADQAM

1.# CHAUDHARY & CHAUDHARY MOTORS (5651), OPP. RELIANCE PETROL PUMP, PALAMPUR ROAD -VADGAM, DISTRICT -BANASKANTHA, GUJARAT PIN-385001 PH :02759-9925457783.

VADODARA

272.## MAYUR SERVICE STATION (2224), NEAR POLICE STATION,PRATAPNAGAR ROAD,BARODA PIN-390004 PH :0265-9879453031.

3.** CAR CARE (2229), NEAR GANDHI OIL
MILL,GORWA INDUSTRIAL ESTATE,BARODA
PIN-390016

PH:0265-9227106915.

74.** HONEST AUTO STRUCTURE WORKS (279),
NEAR SURAZ PLAZA.EAST OF JETALPUR

NEAR SURAZ PLAZA, EAST OF JETALF RAILWAY UNDERBIDGE, SAYAJI GUNJ, BARODA PIN-390005 PH-0265-9824014046

75.* GENERAL MOTOR REPAIRING WORKS
(2529), NEAR LOK SATTA
PRESS.NAGARWADA.VADODARA

PIN-390001 PH :0265-9825026106.

6.## DREAM MACHINES (2933), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA PIN-390002 PH: 3265-9913420202 / 7575809939.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

CAR CLINIC (4640), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT) PIN-390004 PH:0265-9925003558.

VALIA

278.## HARI OM AUTO CARE (5750), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJRAT PH:-9427336094

VALSAD

279.* HONEST AUTO GARAGE (2220), SUGHAR FALIA.BEHIND MOTA GHANCHIWAD, VALSAD (GUJARAT) PIN-396001 PH:02632-9925055600/9426110767.

VANTHLI

INFINITY MOTORS (5963), 'RAVI BATAN'VADI A FATAK OPP HP PETROI PUMP ,POST VADLA, TAL VANTHLI,DISTRICT-JUNAGADH,GUJARAT PIN-362205 PH:-9737521899.

VAPI

281.* H.V. MOTORS (5047), NEAR BILL KHADI,NH-8.BALITHA,API,DISTRICT VALSAD PIN-396191 PH:0260-9824145599/9824405599.

VIRAMQAM

282.## KRISHNA MOTOR GARAGE (4038), OUTSIDE BHARWADI GATE NEAR BHARAT PETROL PLIMP VIRAMGAM PIN-382150 PH :02715-9426415274 / 9016726604

VYARA

283.# PARTH MOTORS (5240), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VYARA, DISTRICT-SURAT, GUJARAT PIN-394650 PH:02626-221284/9898292020.

HARYANA

AMBALA

284.** RAVI MOTORS (1957), 125 STAFF ROAD,HOTEL SAVOY,AMBALA CANTT PIN-126102 PH:-9315110209/9416640012.

GURU NANAK MOTORS (2036), POLICE LINES CHOWK, AMBALA CITY PIN-134003 PH:0171-2551645/2517061/9416155906.

286.## HIRA MOTORS (2740), 207 MILE STONE, VASANT VIHAR GT ROAD, N.H. -1.AMBALA CITY PIN-134003 PH:-9255285212.

287.## BASSAN MOTORS (4964), 99 TH MALL, AMBALA CATT, HARYANA PIN-133001 PH:-9466000000.

BADHARA

S.S MOTORS (5735), NEAR REST HOUSE, BADHARA, DISTRICT-BHIWANI, HARY ANA PIN-123308 PH:-9255141288/9812451052.

BAHADURGARH

289.## GL AUTOMOBILES (5263), MAIN ROHTAK ROAD, SANKHOL OPP CH. DEVI LAL PARK, DISTRICT - BAHADURGARH, HARYANA PIN-124507 PH:01276-9416303473.

BARARA

290.## LUXMI AUTOZONE (5334), VPO BARARA, DISTRICT - AMBALA, HARYANA PIN-133203 PH:-09467116785

BARWALA

291.** FAQIR CHAND QUALITY FUELS (5435), KILLA NO 20 L.H.S. NH-65 CHANDIGARH BOAD -BARWAI A DISTRICT - HISAR HARYANA PIN-125001 PH:-9215027000.

BHIWANI

292.## VEER MOTOR WORKSHOP (1850), 24 NEW MOTOR MARKET.BHIWANI.(HARYANA)PIN-127021 PH:-9416057857.

293.* MITTAL AUTOMOBILES (5748), NEAR BUS STAND JAKHAI BOAD BHUNA, DISTRICT-FATEHABAD, HARYANA PIN-125111 PH:-9813207221.

FARIDABAD

INSUH AUTO ENGINEERS P. LTD. (377), 13/3 MAIN MATHURA ROAD, (ADJOINING FRICK INDIA),FARIDABAD PIN-121003 PH:0129-2272587, 2272484, 9810135516. 295.## KHURANA AUTOMOBILES (2863), 3C/60 B.P.

(OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD PIN-121001 PH:0129-4056020, 4056021.

SARASWATI AUTOMOBILES (4465), 44 B.P,NEELAM BATA ROAD,N.I.T,FARIDABAD PIN-121001

PH:0129-4029665, 2429665/9811446686. BALAJI SERVICE STATION (4956), SECTOR 23-24, MAIN ROAD, NEAR BALAJI DHARM KATA, FARIDABAD, HARYANA PIN-121004 PH:0129-9818700422/4100265.

PERFECT AUTOZONE (P). LTD. (5667), VILLAGE ANKHIR, OPP. SEC 21D, MAIN BADHKAL ROAD, DISTRICT -FARIDABAD.HARYANA PIN-121001 PH:0129-2460020/2460030. 299.## AUTO ENGINEERS (5350), 131.DLF

INDUSTRIA AREA PHASE-1.DISTRICT FARIDABAD.HARYANA PIN-121001 PH:0129-9810004318/9312524511/4124511

FARRUKHNAGAR

M R MOTORS (5946), GURGAON-JHAJJAR ROAD, OPP. ANAAZ MANDI, FARRUKHNAGAR, DISTRICT-GURGA ON,HARYANA PIN-123506 PH:-9810831200

FATEHABAD

301.## DHINGRA AUTOMOBILES (1856), G.T. ROAD, FATEHABAD, (HARYANA) PIN-125050 PH:-9416049167. INDORA MARUTI SERVICE STATION (3064).

BHATTU ROAD, FATEHABAD, (HARYANA) PH:01667-9812325457.

GANAUR

303.## SITA AUTOMOBILES (4260), 347, WARD NO. 10,BST ROAD,GANAUR,DISTT- SONEPAT PIN-131101 PH:0130-9416062747.

GANGWA

304.** PANCHMUKHI AUTOMOBILES (5968), HISSAR RAJGARH ROAD, GANGWA, DISTRICT-HISSAR, HARYAN A PIN-125001 PH:-9728100029/9255562564.

GOHANA

305 ## KRISHNA MOTORS (4132) ROHTAK ROAD.GOHANA PIN-131301 PH:01263-9416013596.

GURGAON

GANGA MOTORS (363). 306.## SHIVPUBLGURGAON PIN-122001 PH:0124-2314940/2322084/98104306028. SOMESH AUTOMOBILES (455). SHIVALAYA, A-56 ROAD PHASE-I, DLF QUTAB ENCLAVE, GURGAON PIN-122002

PH:0124-4055275/2352162/9213094482-83. QUTAB AUTOMOBILES (3668), BEHIND SUSHANT LOK-I, POLICE POST NEAR RIDGEWOOD, DLF PHASE-IV, GURGAON PIN-122002

:0124-2385333/92267334/4046658-59/9811687

309.## TOP GEAR AUTOMOTIVE ENGINEERS (4464), MAIN JHARSA

ROAD.GURGAON.(HARYANA) PIN-122003 PH:0124-4039011.9810304011.9891439407.

A & A ENTERPRISES (4639). 396.PHASE-IV.UDYOG VIHAR.GURGAON (HARYANA) PIN-122001

PH :0124-2399862 63 9312063450/9868599812

RAJASTHAN AUTO WORKS (4760), LT, ATUL KARATIA MARG NEAR PETROL PLIMP AKASHI FILLING STATION AMAN

> PURA SECTOR-5 ROAD GURGAON (HARYANA) PIN-122001

PH:0124-2300238/9211819420/9810058722. MANISH AUTOMOBILES (4777), GHATA ROAD, WAZIRABAD, NEAR SECTOR-56.GURGAON.HARYANA

PIN-122001

:0124-9873243858/9899561595/9899475288.

KUMAR AUTOMOBILES (4848) BEHRAAMPUR ROAD.NEAR NH-8,GURGAON,HARYANA PIN-122001

PH:0124-9873431696/2215696/9873448804. S G MOTORS (5756), PLOT NO.494, SECTOR 37,PACE CITY II,VUDYOG VIHAR VI GURGAON, DISTRICT-GURGAON, HARYANA

PIN-122001 PH:0124-9910955113.

SRI PARKASH AUTOMOBILES (5862), BAJGHERA ROAD, NEAR PARKASH PURI ASHRAM, NEW PALAM VIHAR.DISTRICT-GURGAON.HARYANA

PH:-9899157729.

SEVEN HILL SERVICE STATION (6038), VIJAY VIHAR, MAIN SILOKHRA ROAD, SEC-30,GURGAON,HARYANA PIN-122002 PH:-9810602354.

HANSI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

317.** VIKAS AUTOMOBILES (4744), SHANTI NIKETAN,OPP. JIND BYE PASS, G.T. ROAD,HANSI,DISTRICT-HISSAR (HARYANA) PIN-125001 PH:01663-9466248037.

HISSAR

 PALCO MOTOR GARAGE (4739), 96 AUTO MARKET,HISSAR,HARYANA PIN-125001 PH:01662-9896303233.

319.** SALASAR AUTO (4735), OPP. VIDYUT NAGAR GATE NO. 2,DELHI ROAD,HISSAR,HARYANA PIN-125001 PH:01662-9355486716.

320.* SAI AUTOMOBILES (5267), MAIN DELHI ROAD.HISSAR,HARYANA PIN-125001 PH :01662-9812900046.

HODAL

321.## VED MOTORS (2247), HIGHWAY ROAD,NEAR RAILWAY STATION CHOWK,HODAL,(FARIDABAD) PIN-121106 PH :01275-236238/9255456907.

INDR

322.## ASHOKA MOTOR (6041), OPP. PARTAP FILLING STATION, LADWA ROAD, TEHSIL-INDRI, DISTRICT-KARNAL, HAR YANA PIN-132041 PH: :9896234001.

ISMAILABAD

323.* VINAYAK MOTORS (6052), OPP. MAHARAJA PALACE, AMBALA HISSAR ROAD, ISMAILABAD, HARYANA PIN-136129 PH ::9416250081/996045636.

ISRANA

324.## SHIV DARSHAN AUTOMOBILES (6051), ISRANA PANIPAT ROAD,NR. NC COLLEGE, ISRANA, DISTRICT-PANIPAT,HARYANA PIN-132103 PH - 9011366290

JHAJJAR

325.## VASUNDHRA MOTORS (1467), REWARI ROAD,JHAJJAR,(HARYANA) PIN-124103 PH:-9812012180

JIND

326.## MOHIT MOTORS (1574), SAFIDON GATE,JIND PIN-126102 PH:-9355129844.

KAITHAL

327.## HIND AUTOMOBILES (1858), AMBALA ROAD,KAITHAL PIN-136027 PH :-3496,2416 (RES.).

KANINA

328.## SHREE KRISHNA MOTORS (5953), BHOOP SINGH MARKET, NEAR PETROL PUMP, MAHINDERGABH ROAD, KANINA, DISTRICT-MAHINDERGARH, HARYA NA PIN-123027 PH: -9467641678.

KARNAL

329.** RUBY MOTORS (4734), 28/3 HSIDC,NEAR NAMASTEY CHOWK INDUSTRIAL AREA,KARNAL,HARYANA PIN-132001 PH 10184.9898745633

KHARKHODA

330.* PRANAV MOTORS (5771), SAMPLA ROAD, KHARKAUDA,DISTRICT-SONEPAT,HARYANA PIN-131402 PH -:08986145161

KUNDLI

331.## SHIV SHAKTI AUTOMOBILES (4628), JANTI ROAD,NEAR S.P. COLD STORAGE,KUNDLI,HARYANA PIN-131028 PH :-9811047480.

KURUKSHETRA

332.## KARTAR MOTORS (1645), RED ROAD,KURUKSHETRA PIN-132118 PH :01744-9896245900.

333.## SAINI MOTORS (2131), G.T. ROAD,UMRI CHOWK,KURUKSHETRA,(HARYANA) PIN-136118 PH :01744-9896183931.

I34.** KARTAR MOTORS (5349), PLOT O 65-66,SECTOR -2,HUDA INDUSTRIAL,AREA KURUKSHETRA PIN-132118 PH :01744.291343

LOHARU

335.## BHAWNA MOTORS (6028), BHIWANI ROAD,LOHARU,DISTRICT-BHIWANI,HARYAN A PIN-127201 PH :01251-9466117900/217239

MAHENDERGARH

336.## SHREE SHYAM MOTORS (5843), NEAR I.O.C
PETROL
PUMP.MAHENDERGARH, DISTRICT-MAHEND
ERGARH, (HARYANA) PIN-123029
PH :01285-222020/9416065855.

MANDI ADAMPUR

337.## MITTAL AUTO AGENCIES (2966), 113-15 AUTO MARKET,MANDI ADAMPUR,(HARYANA) PIN-125052

MANESAR

338.## MAITRI SERVICE STATION (2378), N.H.8,DELHI-JAIPUR ROAD,MANESAR (GURGAON) PIN-122001 PH :0124-2290349/9212017293/9911104120.

NARNAUL

339.## SHYAM AUTO TRADE (1571), SINGHANA ROAD,NARNAUL,(HARYANA) PIN-123001 PH:01282-251605/251620/9466432785.

NILOKHERI

340.## SURENDERA MOTORS (5049), NEW NEHSIL ROAD. NILOKHERI,DISTRICT KARNAL,NILOKHERI,HARYANA PIN-132117 PH:-9996308730.

PALWAL

 D.K. & R.K. MOTORS (1159), NEAR BUS STAND, BYE-PASS ROAD, PALWAL (HARYANA) PIN-121102 PH :01275-252647/251816.
 SHEELA MOTORS (5141), OPP MUNICIPAL

42.* SHEELA MOTORS (5141), OPP MUNICIPAL COUNCIL OFFICE, G T ROAD, DISTRICT -FARIDABAD, HARYANA PIN-121102 PH: 01275-9416068251401501.

PANCHKULA

343.** PANCHKULA AUTO SERVICES (1949), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA, (HARYANA) PIN-134109 PH: -9915230196.

PANIPAT

44.** PREM MOTORS (2266), PLOT
NO.134,SECTOR 25 INDUSTRIAL
AREA,PANIPAT PIN-132103
PH :01742-9416438046.

PATAUDI

345.## SHUBHAM AUTOMOBILES (4641), REWARI ROAD, PATAUDI, DISTT. GURGAON PIN-122503 PH :0124-2672942, 9812665240.

PEHOWA

* AMAR AUTOMOBILES (2270), OPP. DAV COLLEGE, AMBALA ROAD, PEHOWA DISTT. KURUKSHETRA, (HARYANA) PIN-136128 PH: 9896002974.

RADAUR

SHRI SHIVAM AUTOMOBILES (5852), S.K. ROAD, OPP. ESSAR PETROL PUMP,RADAUR,DISTRICT-YAMUNANAGAR,H ARYANA PIN-135133 PH:135133-9255952717.

RANIA

348.## SINGLA MOTORS (3779), NEAR BUS STAND, RANIA, DISTT. SIRSA (HARYANA) PIN-125076 PH::01698-9416011238.

REWARI

349.## GAUTAM MOTORS (1837), NARNAUL ROAD,REWARI (HARYANA) PIN-123401 PH:01274-22895/222395/325095.

350.* SHIVAM SERVICES (1466), OPP. CENTRAL SCHOOL,GARHI BOLNI ROAD,REWARI PIN.123401

PH:01274-254825/9416288341.

51.## PULYANI MOTORS (4663), BEHIND KAMLA PALACE, CIRCULAR ROAD, REWARI, HARYANA PIN-123401 PH:01274-9416064739/ 252238/

257938/9955963168.

SADHAURA

352.## SHREE GANESH MOTORS (5959), NEAR INDIAN OIL PETROL PUMP,KALA AMB ROAD,SADHAURA,DISTRICT-YAMUNANAGA R,HARYANA PIN-133204 PH :-9813376260.

SHAHABAD

353.** MAHALAXMI MOTORS (354), LADWA ROAD,SHAHABAD MARKANDA,(HARYANA) PIN-136135 PH: -42433,41933.

SIWANI

354.## GANESH AUTOMOBILES (5931), LOHARU MORH,SIWANI,DISTRICT-BHIWANI,HARYAN A PIN-127046 PH :-9812022020.

SOHNA

5.** SHRI SHYAM MOTORS (5951), OPP.RAGHUNANDAN PETROL PUMP,NEAR GD GOENKA INTERNATIONAL SCHOOL,SOHNA,HARYANA PIN-122103 PH:9582350079.

SONIPAT

356.## NEW HIGHWAY MOTORS (5055), MAIN DELHI ROAD, SONEPAT, HARYANA PIN-131001 PH :-09812530120, 2234999.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

357.## R M MOTORS (5842), WADE NO:4 BEHIND WINE SHOP MAIN REWARI SOHNA ROAD,TAURU,DISTRICT-MEWAT,HARYANA PIN-122105 PH: 9812378663.

TOHANA

358.## DHANDA MOTORS (2271), PLOT NO.4,RATIA ROAD,TOHANA,DISTT. FATEHABAD PIN-125120 PH : 20368.

TOSHAM

359.## MOHINI AUTOMOBILES (6026), OPP.NEW ANAJ MANDI,NEAR MINI BANK,TOSHAM,DISTRICT-BHIWANI,HARYAN A PIN-127040

UKLANA

360.* SHREE GANESH MOTORS (5747), PLOT NO#29,UKLANA MANDI,DISTRICT-HISSAR,HARYANA PIN-125113 PH ::98123091531

PH:-9215959995/9992251000.

YAMUNANAQAR

61.** GOPAL AUTOMOBILE SERVICE STATION (1874), NEAR LAL DAWARA,JAGADHRI ROAD,YAMUNANAGAR PIN-135001 PH: 01732-21067.

HIMACHAL PRADESH

ALAMPUR

362.## SUBH AUTOMOBILES (5964), SH-39,ALAMPUR,DISTRICT-KANGRA,HIMAC HAL PRADESH PIN-176110 PH : 9805751228/9418006656.

AMB

363.## SHUBHAM MOTORS (5933), NEAR PINDI ASHRAM,HAMIRPUR ROAD,AMB,DISTRICT-UNA,HIMACHAL PRADESH PIN-177203 PH : 9418114176.

ANNI

364.## SARAJ AUTO WORLD (6044), VERMA
BUILDING,NR. NAGAN
HARIPUR,TEHSIL,ANNI,DISTRICT-KULLU,HI
MACHAL PRADESH PIN-172026
PH:-912906506/j9817120002.

BADDI

365.** LAJ MOTORS (5541), 436.MAUJA SURAJ MAJIRA LABANA,BADDI,DISTRICT SOLAN,HIMACHAL PRADESH PIN-174101 PH:9218644189.

BANGANA

366.## TRISHLA AUTOMOBILES (5869), VILLAGE BPO & TEHSIL BANGANA,BANGANA,DISTRICT-UNA,HIMAC HAL PRADESH PIN-174307 PH:-9817332462.

BANOI

367.## BAWA SERVICE STATION (4634), VILL
BANOI,TEH SHAHPUR P.O.,BANOI,DIST
KANGRA (HIMACHAL PRADESH) PIN-176206
PH -3418051290 9418105642

BARMANA

368.## AVER AUTO (5955), VILLAGE LAGAT,TEHSIL SADAR,PO BARMANA,HIMACHAL PRADESH PIN-174013 PH : 9418064130

BHAMBLA

369.* DHIMAN MOTORS (3837), PLOT NO.
42,INDUSTRIAL AREA,
BHAMBLA,JAHU,DISTT MANDI PIN-175004
PH :01972-263676.256436.

BHUNTAR

370.## HANDA MOTORS (4262), HANDA
COMPLEX,NEAR AIRPORT,BHUNTAR,KULLU
(H.P) PIN-175125
PH :01902-265729, 265124.

BILASPUR (H.P)

371.## BHASKAR AUTO SPARE & SERVICE (1730), 8-B ROURA SECTOR II,(NEAR DURGA MANDIR),BILASPUR (H.P.) PIN-174001 PH:-23335.

CHAMBA

372.## KAILASH SERVICE STATIION (3527), AMRIT NIWAS MOHALLA, BONGUTA, CHAMBA TOWN, DISTT. CHAMBA PIN-176209 PH:01899-24485.

3.* AUTOZONE (5247), PATHANKOT RAOD, PAREL, SULTANPUR - CHAMBA, DISTRICT -CHAMBA, HIMACHAL PRADESH PIN-176314 PH:99418214948.

DARLAGHAT

374.## CHANDEL SERVICE STATION (5233), DARLAGHAT, DISTRICT-SOLAN, HIMACHAL PRADESH PIN-171102 PH: 9816039865.

DEHRA

C-Category Mass : Free & paid Service & Minor repairs

375.* WALIA ENTERPRISES (4252), HANUMAN CHOWK, NEAR DEHRA BRIDGE, DEHRA, DISTT. KANGRA PIN-177101 PH: 01970-233184, 233751.

DHARAMSALA

376.## EAGLE MOTOR SERVICE STN. (6426), SHAM NAGAR, DHARAMSALA (HIMACHAL PRD.) PIN-176215 PH: :22032.

77.## SHIV SHAKTI CAR CARE (1277), NEAR RAINBOW SCHOOL,DARI ROAD,DHARAMSHALA PIN-176057 PH::24056.

HIM AUTO STATION (3773), VPO
DARI, DHARAMSHALA, (H.P.) PIN-176061
PH :01892-23055.

GAGGAL

379.* CHAUDHARY SERVICE STATION (1966), GAGGAL (ICHHI), DISTT. KANGRA (H.P.) PIN-176209 PH:1892-265184.

QHUMARWIN

380.## BHASKAR AUTO SPARES & SERVICES
(5147), VILLAGE
KULARU,GHUMARWIN,DISTRICT BILASPUR,HIMACHAL PRADESH PIN-174101
PH: 9817011700.

QUMMA

381.## CHAUHAN ENTERPRISES (5660), VILLAGE GUMMA,TEHSIL KOTKHAI,GUMMA,DISTRICT - SHIMLA,HIMACHAL PRADESH PIN-171202 PH:-9816125191.

JAWALA JI

382.## SRI PARBHAT MOTORS (5036), VPO &
TEHSIL, JAWALI-(BHANEI), DISTRICT KANGRA, (HIMACHAL PRADESH) PIN-176029
PH -: 00814830281 109418001423

JAWALAMUKHI

383.## LAKSHMI AUTO SPARES & SERVICE
CENTRE (4630), NEAR GANJU BAGH, DEHRA
ROAD, JWALAMUKHI, TEH. DEHRA, DIST.
KANGRA (HIMACHAL PRADESH) PIN-171001
PH :01970-23018, 9418091048

KARSOG

384.## DEEPAK AUTOMOBILES (4057), MR.
DEEPAK SHARMA,C/O SHARMA GENERAL
STORE,KARSOG, MAIN BAZAR,DIST MANDI,
HIMACHAL PRADESH PIN-171304
PH:01907-222242, 9816260061.

KAZA

385.## SPITI MOTORS (6033), VILL. & PO
KAZA, DISTRICT-LAHAUL & SPITI, HIMACHAL
PRADESH PIN-172114
BH 0.019789074

KEYLONG

386.## YOLAX MOTORS (3830), KEYLONG, DISTT.
LAHAUL & SPITI PIN-175132
PH :01900-22448, 22517.

KULU

387.## SURYA MOTORS & SERVICE CENTRE (2943), NH-21, MANALI ROAD, BABELI, DISTT. KULLU (H.P.) PIN-17518 PH. 01902-30456.

388.## DH. 19902-30456.
DEALER DHALPUR KULLUH, PIN-175101

KUMARHATTI

39.* SOLAN AUTOMOBILES PVT. LTD. (6420), DAGHOTA (SOLAN),P.O.KUMAR HATTI (H.P.) PIN-173229 PH -86173.

PH:01902-222415/16.

KUMARSAIN

390.## RED LINE (5965), VILL. KEPU,PO KIRTI SAINZ,TEHSIL,KUMARSAIN,DISTRICT-SHIML A,HIMACHAL PRADESH PIN-172030 PH:-9805996506.

IANDI

391.** BHAGWATI AUTOMOBILES (269), 13
INDUSTRIAL AREA,PHASE-III,SAULI
KHAD,MANDI PIN-175 001
PH :-35289.35189.

MARANDA

392.## MODERN SERVICE CENTRE (1175), PUSHP COMPLEX,MARANDA,(H.P.) PIN-176102 PH :-630983.

MEHATPUR

393.## BUDHA AUTO HOUSE (6422), MAIN BAZAR,UNA,MEHATPUR (H.P) PIN-174315 PH:-64061,61766.

MUBARAKPUR

394.## SHIV SHAKTI AUTOMOBILES (1732), HOSHIARPUR ROAD,MUBARKPUR,DISTT. UNA,(H.P.) PIN-177202 PH:1976-64661.

NADAUN

395.** CAR CARE ENGINEERS (4423),
HOSHIARPUR
ROAD,MANPUL,NADAUN,DISTT HAMIRPUR
(H.P) PIN-177033
PH :01972-232765, 9418096457.

NAHAN

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs
* B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

396.## AGARWAL MOTORS (3334), GUNNU GHAT, NEAR TELECOM COLONY, NAHAN PIN-173001 PH: 01702-25679(O), 23558(R).

NALAGARH

397.## KRISHNA MOTOR (5275), PEERTHAN.PO NALAGARH,DISTRICT - SOLAN,HIMACHAL PRADESH PIN-174101 PH :01795-223561.

PALAMPUR

398.** SANGRAI AUTO SERVICE (6430), OPP. SITLA MATA MANDIR, PALAMPUR, DISTT. KANGRA (H.P.) PIN-178061 PH :01894-32685.

399.## SANTOSHI AUTOMOBILES (4776), VILLAGE

BHAWARNA, TEHSIL, PALAMPUR, DISTRICT-KANGRA (HIMACHAL PRADESH) PIN-176061 PH:01894-9418184367.

PAONTA SAHIB

400.## SUMEET MOTORS (1441), SHAMSHERPUR,PAONTA SAHIB,(H.P.) PIN-173025 PH:-22264.

PAPROLA

401.## ABROL AUTOMOBILES (3470), RAJ KUMAR ABROL VAPO BIR, TEH, BAJJNATH, DISTT. KANGRA (H.P.) PIN-176077 PH :01894-68517.

PARWANGO

402.## DIVYA SALES (6428), DIVYA BHAWAN VILL. KAMLI,SECTOR-1,PARWANOO PIN-173220 PH :32685

PATLI KUHAL

403.* JAMDAGNI MOTORS (760), VILLAGE PATLI KAUHAL,P.O.KATRAIN,DISTT. KULLU (H.P.) PIN-175129 PH -9816040247 01902-40847

RAJQARH

404.## RAJGARD AUTOMOBILES (5458), PO RAJGARH.TEH RAJGARH,DISTRICT -SIRMOUR,HIMACHAL PRADESH PIN-173101

RAMPUR BUSHAHR

405.** HIGHWAY SERVICE STATION (2649), CHUHA BAG, RAMPUR BUSHAHR, DISTT. SHIMLA, (H.P.) PIN-172001 PH :01782-34043. 406.## KRISHNA AUTOMOBILE (4438), VILL CHUHA BAG,RAMPUR BUSHAHR PIN-172001 PH:0177-233046, 233091.

RECONG PEO

407.## KRISH AUTO (4134), V.P.O. DUNI,RECONG PEO,TEHSIL KALPA,DISTT KINNOUR (HP) PIN-172107

PH:01786-226053, 226017.

ROHRU

408.## KAMTA SERVICE STATION (2338), ROHRU,DISTT. SHIMLA,(H.P.) PIN-171207 PH:01781-34430.

CALACH

409.## THAKUR AUTOMOBILES (3838), JALANDHAR
MANALI NATIONAL HIGHWAY (NH70),NEAR
DAV SCHOOL,VILLAGE SALASHI,DISTT
HAMIRPUR PIN-172108
PH :01972-223412,9818090904.

SARKAGHAT

410.## SHAKUNTLA MOTORS (5755), MANDI ROAD-SARKAGHAT,DISTRICT-MANDI,HIMAC HAL PRADESH PIN-175024 PH: -9817818822

RHIMLA

411.** GURRAJ AUTO SERVICE (757), BAMLOE CHOWK, SIMLA PIN-171001 PH:-6558.

412.** MOTO WORLD (6433), NAVBAHAR,SIMLA PIN-171002

BOLAN

413.## SOLAN SERVICE CENTRE (764), BYE PASS,NEAR PWD OFFICE,SOLAN PIN-173212 PH:-3149.

SUBATHU

PH:-72917.

414.## SHYAM AUTOMOBILES (4558), NEAR SHANTI FILLING STATION,V.P.O RADYANA,SUBATHU,DIST SOLAN (HIMACHAL PRADESH) PIN-173206 PH: 0179-2275606.

SUNDERNAGAR

415.** V.M. SERVICE STATION (3777), CHAMUKHA,P O HARABAGH,NH-21,SUNDER NAGAR (H.P.) PIN-174402 PH :01907-282130.

THEOG

416.## JOSHI MOTORS (2778), SHALLI
BAZAR,THEOG,DIST. SHIMLA,(H.P.)
PIN-171201
PH:1783-9816140451, 8679440451.

UNA (HP)

417.## TRINITY AUTO FAST ENGINEERS (1755), RAKKAR COLONY,NANGAL ROAD,UNA (H.P.) PIN-174303 PH :01975-26520.

418.## RUDRA MOTORS (3925), NEAR OLD HOSPITAL CHOWK,NH-22,UNA (H.P.)

PH:01935-25137(SHOP), 25011 (RES.).

JAMMU & KASHMIR

AWANTIPORA

419.## KESAR AUTOMOBILES (5938), KHAR, MORH, NATIONAL HIGHWAY 1A,AWANTIPORA,DISTRICT-PULWAMA,JAM MU & KASHMIR PIN-192122 PH::9419507495.

BARAMULA

420.* MARUTI MASTERS (4369), KANISPORA,BARAMULA,KASHMIR PIN-193101 PH:990659944.

CHADOORA

421.* VEHICLE MASTERS (4661), MAIN ROAD, CHADOORA, DIST. BUDGAM, JAMMU & KASHMIR PIN-190001 PH: 9419475708.

JAMMU

422.** KWIK FIT (2343), AMBPHALLA,B.C. ROAD, JAMMU PIN-180001 PH:-9419182675.

423.** MOBEL GARAGES (441), NARWAL
CHOWK,TRANSPORT NAGAR,JAMMU
PIN-180007

PH:-9796800000.

24.** CHECK N CARE AUTOMOBILE CENTRE (1773), OPP. GURUDWARA SRI SINGH SABHA,NARWAL BYE PASS ROAD,JAMMU PIN-180006

PH:-9419190796

425.* CARE POINT AUTOMOBILES (4652), OPP. BSF CAMPUS ROAD,AKHNOOR ROAD,JAMMU PIN-180002 PH :0191-9419283151.

NATIONAL MOTORS (5074), OPP APNA VIHAR.B.P. PETROL PUMP,NH-1A KUNJWANI JAMMU,DISTRICT -JAMMU,JAMMU & KASHMIR PIN-180010 PH :9419194368.

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

KARGIL

27.* ZOZILA ENGG. WORKS (374), KARGIL,LADAKH PIN-194103 PH:-9419176212.

KATHUA

428.* KATHUA MOTORS (3323), HATLI MORE,KATHUA,(J&K) PIN-184102 PH:9419150136.

KATRA

VIDYA AUTOMOBILES (1165), JAMMUR ROAD,KATRA JAMMU ROAD,KATRA,(J&K) PIN-182301 PH '01991-9419162339

KISHTWAR

430.## MINTOO MOTORS (4133), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K) PIN-180001 PH :01995-9419154100.

MATTAN

431.## DANISH AUTOMOBILES (5478), PAHAL GAM ROAD,STATE HIGHWAY - MATTAN,DISTRICT - ANANTNAG,JAMMU & KASHMIR PIN-192101 PH:01932-9419045672.

PHINTER

432.## BADYAL AUTOMOBILES (4149), C/O BADYAL AUTOMOBILE,PHINTER,TEH BILLAWAR,DISTT KATHUA PHINTER (J & K) PIN-184203 PH.:01921-9419691916.

PULWAMA

433.** KASHMIR AUTOMOBILES (5352), SRINAGAR, SHOPIAN ROAD FRUIT MANDI, PULWAMA, DISTRICT - PULWAMA, JAMMU & KASHMIR PIN-192301 PH :01933-9906799324.

RAJOURI

434.## MILLENNIUM MOTORADES (2937), ALPHA GATE,T.C.P.,RAJOURI,(J&K) PIN-185132 PH :01962-9419329486.

REASI

435.## U LIKE CAR CLINIC (4771), GITA
NAGAR, REASI JYOTIPURAM
ROAD, REASI, DISTRICT-UDHAMPUR (JAMMU
& KASHMIR) PIN-182101
PH.:01991-9906015150.

SAMBHA

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

436.## DHANSAR CAR CLINIC (5146), NATIONAL HIGHWAY, SUPWAL SAMBHA, DISTRICT - JAMMU, J&K PIN-184121 PH:-9419934151.

IOPORE

437.## HASSAN MOTORS (2434), BPC
DEALER,SOPORE,KASHMIR PIN-193201
PH :-9419597727.

SRINAGAR

438.* SRINAGAR AUTOMOBILES (4925), M.A. LINK ROAD, NEAR TRANSPORT YARD BRIDGE, CHINARBAGH, SRINAGAR (JAMMU & KASHMIR) PIN-190017 PH: 0194-9419001793.

439.## NEW NATIONAL AUTOMOBILES (5073), RAM BAGH. AIRPORT ROAD. SRINAGAR,DISTRICT - SRINAGAR,JAMMU & KASHMIR PIN-190009 PH:0194-9419909528.

440.* A.B. MOTORS (5072), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT -SRINAGAR, JAMMU & KASHMIR PIN-190009 PH :0194-9419007966.

441.* HASEEN MOTORS (5249), BY-PASS BRIDGE, BAGH MEHTAB, SRINAGAR, JAMMU & KASHMIR PIN-190019 PH : 0194-9419518416.

442.** ADAM'S AUTOAIDES (5766), SIDCO INDUSTRIAL EXTATE, SHALTENG, SRINAGAR, DISTRICT-SRINAGAR ,JAMMU & KASHMIR PIN-190001 PH :0194-99065800893.

SURNKOTE

443.## A.S. AUTOMOBILES (5976), IQBAL NAGAR, SURANKOTE, DISTRICT-POONCH, JAMMU & KASHMIR PIN-185121 PH ::9469014765.

THANA MANDI

444.## DANISH AUTOMOBILES (6047), R/O W NO.3, HUSPLATE, THANAMANDI, DISTRICT-RAJOU RI, JAMMU & KASHMIR PIN-185212 PH:9858938248.

VIJAYPUR

445.## BANSI LAL MARUTI SERVICE STATION (4749), SWANKHA MORH,NATIONAL HIGHWAY,VIJAYPUR,DISTRICT-SAMBA (JAMMU & KASHMIR) PIN-180001 PH :01923-9419106798.

JHARKHAND

BOKARO

446.## UUEA AUTOMOBILES (4845), S-21 CITY
CENTRE,BOKARO STEEL
CITY,BOKARO,JHARKHAND PIN-827004
PH :06542-9431127441.

EOGHAR

447.* GARGEE AUTOMOBILE (2276), OPP. D.C.
RESIDENCE, CIRCULAR
ROAD, BARMASIA, DEOGHAR (BIHAR)
PIN-814112
PH: 06432-9431132526.

DHANBAD

448.## MAJUMDAR CAR SCAN (5135), BHUFORCE, K G ASHRAM ROAD, SARAIDELA, DISTRICT -DHANBAD, JHARKHAND PIN-828301 PH: 0326-9835361472.

449.## PRIYA AUTO (4868), OPPOSITE MINNING SCHOOL,SINDRI ROAD, BHAGA,DHANBAD,JHARKHAND PIN-828301 PH: :0326-9431124817.

DUMKA

NATIONAL ENGG. WORKS (5220), AUTOMOBILE ENGINEERS,DUMKA (BIHAR),DUMKA (BIHAR) PIN-814101 PH:06434-222325.

QARHWA

451.## VIKAS AUTOMOBILE SERVICES (2647), RAILWAY STATION ROAD,GARHWA,ZARKHAND PIN-822114 PH :06561-9204527287.

HAZARIBAGH

452.## ALOK MOTORS (379), NEAR INDRAPURI CHAWK,HAZARIBAG,(BIHAR) PIN-825301 PH :06546-9431140740.

453.## SRI RAM MARUTI SERVICE STATION (3663), DEVI DAYAL LANE,HAZARIBAG, (JHARKHAND) PIN-825301 PH -06546-9431384877

JAMSHEDPUR

** CAR CURE (1261), C/O MODERN AUTO STORES,KALIMATI ROAD,SAKCHI,JAMSHEDPUR PIN-831001 PH :0657-6452965.
MAHESHWARI BROS (5124) NATIONAL

HIGHWAY 33,BALIGUMA MANGO,P.O.

-M.G.M. MEDICAL COLLEGE,JAMSHEDPUR
PIN-831018
PH :0657-9031144444.

KHUNTI

456.## MOD MOBILES (5579), MAIN ROAD, RANCHI ROAD - KHUNTI,DISTRICT -KHUNTI,JHARKHAND PIN-835210 PH : 9006055883.

MAITHON

457.# MAITHON SERVICING CENTRE (5838),
MAITHON ROAD, NEAR VMC
COLONY, SANJAY CHOWK, PO
CHIRKUNDA-MAITHON, DISTRICT-DHANBAD,
(JHARKHAND) PIN-828207
PH : 7209423707.

PAKUR

458.## SPEED WHEEL SERVICE CENTRE (4976),
MAIN ROAD,PAKUR PIN-816107
PH :-9434101917.

RAMQARH

459.## RAHIL MOTORS (5054), C/O NIYAMAT MISTRI,DUSHAD MOHLA,DISTRICT RAMGARH CANTT PIN-829122 PH :9835294514

60.## SAINI MOTORS (5126), NEAR VISWAKARMA MANDIR,MAIN ROAD,RAMGARH CANTT,DISTT. HAZARIBAG PIN-829122 PH :08553-223699.

RANCHI

461.## BHARAT MOTORS (5970), SHIV JEE CHOWK, HARU ROAD,RANCHI,DISTRICT-RANCHI,JHARKHA ND PIN-834001 PH :9608502258.

52.** MARUTI AUTOMOBILES (5127), HOTEL AKASHWANI MANSION,RATU ROAD,RANCHI PIN-834001 PH:0651-9835156186.

463.## MARUTI CLINIC (2548), LAL KOTHI,OLD HAZARIBAGH ROAD,KANTA TOLI,RANCHI (BIHAR) PIN-834001 PH :0651-9431109214.

64.## MOTOR KRAFT (4769), H.B. ROAD,DIPA TOLI,RANCHI,JHARKHAND PIN-834009 PH:0651-3254965/3203666.

SIDRAUL

465.## KIRTIVASA AUTOMOBILES PVT. LTD. (4424), RANCHI TATA HIGHWAY, SIDRAUL, P.S NAMKOM PIN-834001 PH:0651-9334657490.

KARNATAKA

ATHANI

466.## CHOUGULE MOTORS (3874), HALYAL
ROAD,ATHANI,DISTT BELGAUM PIN-591304
PH :08289-52992.

- * B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs
-

BAGALKOT

467.## NARA AUTOMOBILES (4357), TP NO. 158 A/2,WARD NO. 10,SHABADI COMPOUND EXTN,BAGALKOT PIN-587101 PH :08354-424092/423178/ 9448124093/9800875595.

BAGEPALLI

8.# N.N. GARAGE (4263), T.B. CROSS,NH-7, BAGEPALLI,NEAR RTO OFFICE,KOLAR DISTRICT, KARNATAKA PIN-561207 PH:-9845125260.

BAILHONGAL

469.# MAHANTH MOTORS (5763), RTO ROAD BAILHONGAL ,TALUK,DISTRICT-BELGAUM,KARNATAKA PIN-591102 PH -9900255566

BALEHONNUR

470.## SRI ANNAPOORNA MOTORS (5253), MALLE GOWDA COMPLEX.JAYAPURA.ROAD BALEHONNUR ROAD, DISTRICT -CHIKAMAGALUR, KARNATAKA PIN-577112 PH:577112-949820366.

BANGALORE

471.** ANEKAR MOTORS (227), 230 MAGADI ROAD,BANGALORE,(KARNATAKA) PIN-560023 PH :080-3353766.3354339 FAX:3402104.

472.** MARS ENTERPRISES PVT. LTD. (238), NO.41 SANJAY NAGAR MAIN ROAD,ASWATH NAGAR BANGALORE PIN-560094

PH:080-3418158/9408023513/9448358884.

3.* MAYUR ENTERPRISES (249), NEXT TO PIA
BHAVAN KIADR MAIN ROAD PERNYA 1ST

STAGE,BANGALORE PIN-560058 PH :080-8395263. 74.* GIRIMAJI ENTERPRISES (258), NO.2 27TH

CROSS,K R ROAD,B S K II STAGE,BANGALORE PIN-560070 PH 1080,6549042 6540502

 SATHNUR SERVICE STATION (1153), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE PINJEROREA

5.** PACE AUTOMOBILES (1057), 6TH MAIN HMT LAYOUT,R.T. NAGAR,BANGALORE PIN.560032

PH:080-23432173/23332338.

PH:080-8562995/9845038372.

477.*	SPEED MOTORS (1750), 17/1	488.**	SMART CARS (3571), 3RD CROSS NEAR J.B.
	SUBRAMANYAPURA MAIN	100.	TILES,KAGGADASA PURA MAIN ROAD,C.V.
	ROAD.KADIRENAHALLI.PADMANABHA		RAMAN NAGAR BANGALORE PIN-560093
	NAGAR,BANGALORE PIN-560070		PH:080-5246481/9336624362.
	PH:080-6699716/6698408.	489.##	ADARSHA AUTOMOBILES (4553), # 974
478.*	KESHKAMAL MOTORS (2075), NO.943 21ST	403.##	VARATHUR MAIN ROAD, NEAR
470.	MAIN,BANASHANKARI 2ND STAGE,(NEAR		PURVANKARA APARTMENTS.AFTER
	KIMS MEDICAL COLLEGE), BANGALORE		MARATHAHALLI.RAILWAY BRIDGE.
	PIN-560070		BANGALORE PIN-560037
	PH:080-6710423/9448071067.		PH :080-28524550, 9880195465.
479.**	GREEN CARS PVT. LTD. (2154), NO.12/6 80	490.##	VAHAN UDYOG (4626), # 45/28 GUBBANNA
170.	FEET ROAD,6TH BLOCK	100.1111	INDUSTRIAL ESTATE, DR. RAJ KUMAR
	KORAMANGALA,BANGALORE PIN-560095		ROAD,6TH BLOCK, RAJAJI
	PH:080-5535178,5539635.		NAGAR,BANGALORE PIN-560010
480.##	SOLOTECH MOTORS (2760), SY NO.82/2,		PH:080-23351143.
100.1111	D'SOUZA	491.##	PUSHPAK MOTORS (4642), 105/1 2ND MAIN
	NAGAR,HOSAKEREHALLI-BANGALURU,DIST	101	NANJAPPA LAYOUT, VIDYARANYAPURA
	RICT-BANGALURU,KARNATAKA PIN-566085		MAIN ROAD, (OPP KRUTHIKA
	PH:080-9845072603,6692613.		HOSPITAL),BANGLAORE PIN-560097
481.*	ASHWA CARS PVT. LTD. (2827), NO.196 5TH		PH:080-560097.
	MAIN ROAD, CHAMARAJAPET, BANGALORE	492.**	TRINITY MOTORS (4638), NO. 36,4TH
	PIN-560018		STAGE, W.C.
	PH :080-6679019/9341228231.		ROAD,BASAVESHWARANAGAR,BANGALOR
482.##	RAJ MOTORS (2829), NO.10 MAGADI MAIN		E PIN-560079
	ROAD, OPP. UNANI MEDICINE		PH:080-9845539474.
	INSTITUTE,KOTIGEPALYA,BANGALORE	493.##	CHANDANA MOTORS (4872), NO. 9
	PIN-560091		UNIVERSITY ROAD, GNANABHARTHI
	PH:080-9845293413/3286153.		(POST),MARIYAAPPANA
483.**	NEXUS (2768), PLOT NO. 275/301,80 FEET		PALYA,BANGALORE (KARNATAKA)
	ROAD,R.M.V. 2ND STAGE 2ND		PIN-560056
	BLOCK,BANGALORE PIN-560094		PH:080-9880659864.
	PH:080-9844013436/3412200/34123300.	494.##	SOLOTECH SERVICE CENTRE (5245), 50
484.**	U.M. CARS PVT. LTD. (2847), KARNATAKA		FEET MAIN ROAD
	GOLF ASSOCIATION ROAD, KODIHALLI, OFF.		AVALAHALLI,MUNESHWARA
	AIR PORT ROAD, BANGALORE PIN-560008		BLOCK, DISTRICT -
	PH:080-5211212/5217979.		BANGALORE,KARNATAKA PIN-560085
485.##	BENAKA MOTORS (3237), NO.158/2		PH:080-32419203/9448046289.
	VIBHUTIPURA, VIGNAN NAGAR BEHIND	495.##	TEAM TECH AUTOMOBILES (5662), PLOT
	B.E.M.L., NEAR RENUKA SWIMMING		NO.27/2, DODDAKANAHALLI,SARJAPUR
	POOL,BANGALORE PIN-560017		MAIN ROAD-BANGALORE, DISTRICT -
	PH:080-9845212416/5236201.		BANGALORE,KARNATAKA PIN-560034
486.**	VISWAS CAR SERVICES PVT. LTD. (3238),		PH:080-9986176513.
	NO.121/1 C. SHANKER REDDY	496.**	TRINITY CAR CARE PVT. LTD (5851),
	LAYOUT,(ADJACENT TO VINAYAK		SURVEY NO 52/1, SRI GANDHADAKAVAL
	TEMPLE),KALYAN NAGAR RING		VILLAGE,NAGARBHAVI,
	ROAD, CHELEKERE BANSWADI POST		BANGALORE, DISTRICT-BANGALORE, KARNA
	BANGALORE PIN-560043		TAKA PIN-560091
	PH:080-25445649.		PH:080-23306401.
487.**	LE MANS MOTORS (3460), NEAR AYYAPPA	BELQ	AUM
	TEMPLE,S.M. ROAD,T.	497.*	BHARAT AUTO SCAN (350), 892/1 PB
	DASARAHALLY,BANGALORE PIN-560057	437."	ROAD,BELGAUM,BELGAUM PIN-590016
	PH:080-8371183/8376058.		DUAD, DELGAUM, DELGAUM PIN-090016

498.## BAGALI MOTORS (5159), SHIKARKHANA ROAD, DISTRICT - BIJAPUR, KARNATAKA PIN-586104 PH:08352-9448100444/24323. CHIKBALLAPUR 499.## SUKOVE ENTERPRISES (3426), B.B. ROAD N.H.7, CHIKBALLAPUR, (KARNATAKA), (KARN ATAKA)PIN-562101 PH:08155-85218/9448435735. CHIKMAGALUR 500.## FORMULA MOTORS (338), K.M. ROAD, CHIKMAGALUR PIN-577101 PH:08262-30370,20369. 501.## AAMANTHRANA MOTORS (4346), K.M. ROAD, CHIKMAGALUR PIN-505215 PH:08262-230704. CHIKODI 502.# OM MOTORS (4445), 1751, ANKALI BOAD NEAR B K COLLEGE CHIKODI KARNATAKA PIN-591201 PH:-9448484503 CHINTAMANI 503.# TIPPU AUTO GARAGE (5770), MG

ROAD.NEAR BAGEPALLI CROSS,CHINTAMANI,DISTRICT-KALOR,KAR NATAKA PIN-563125 PH:-9731178590.

CHITRADURQA

504.## PRINCIPAL (255), J.M.I.T.N.H.4.P.B. NO.73.CHITRADURGA PIN-577502 PH:-9844088858.

505.## SAI AUTOMOBILES (2473), OPP. R.T.O. NH-4.IIND CROSS.JCR EXTN.,CHITRADURGA PIN-577501 PH:08194-9448154945.

AUTO SERVICE & AGENCIES (2520), GEN.THIMMAIAH ROAD, MADIKERI, KODAGU. (KARNATAKA) PIN-571201 PH:-6358/6516(R).

DAVANGERE

507.## SREE MALLIKARJUNA MOTOR (229), 269 JAYADEVA CIRCLE ROAD, DAVANGERE (KARNATAKA) PIN-577002 PH:-3779/5115(R). 508.## HEGDE AUTO CENTRE (172), P.B. ROAD, DAVANGERE PIN-577006

PH:-28864/52208.

DEVANAHALLI

509.# SAHARA AUTOMOBILES (4731), OPP. A . RTO OFFICE,NH-7, B.B. ROAD, DEVANAHALLI, KARNATAKA

PH:-9448662364. DHARWAD

510.** MYSORE GARAGE (2468), BELGAUM ROAD, DHARWAD, (KARNATAKA) PIN-580001 PH:080-447377/9844133273.

DODDABALLAPUR

511.# PRESTIGE MOTORS (4875), SITE NO. 51/48/2717,OPPOSITE BPCL PETROL PUMP.5TH WARD. SHENIGARPET, DODDABALLAPUR (KARNATAKA) PIN-561203 PH:-9900274594.

GADAG

512.## MODERN MOTORS (2337), HUBLI ROAD,GADAG,(KARNATAKA) PIN-582103 PH:08372-273344/9448874203.

GULBARGA

513.## DELUX AUTO SERVICE (5840), SURVEY NO 77/8.VILLAGE KUSNOOR.NEAR -.UNIVERSITY, SEDAM ROAD. GULBARGA, DISTRICT-GULBARGA, (KARNAT AKA) PIN-585104

HOSPET

514.## SUPREME AUTO SERVICE (2569), NEAR RTO OFFICE.HARIHAR ROAD, HOSPET, (KARNATAKA) PIN-583203 PH :08394-30513

PH:-9242991292.

515.## SHRI BASAVA MOTORS (4968), OPP DR. TEGGINMANI CLINIC,2ND CROSS HOSUR,HUBLI,KARNATAKA PIN-580021 PH:0836-9980025644/4260694.

KADUR

516.# SRI SAI MARUTHI SERVICE STATION (5725), OPP,KSRTC BUS STAND,UB ROAD, KADUR, DISTRICT-CHIKMAGALUR, KA RNATAKA PIN-577548 PH:-9632221320.

KARKALA

517.## KARKALA MOTORS (3549), TELLAR ROAD,KARKALA,(KARNATAKA) PIN-574104 PH:08258-20364.

KOLAR

BIJAPUR

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

518.## SHIVA SERVICE POINT (2472), M.B.
ROAD,KOLAR,(KARNATAKA) PIN-563101
PH:08152-23890

KOLLEGAL

519.# FIXPLUS WHEEL ALIGNMENT & AUTO CARE CENTRE (4249), C-8, IND.
ESTATE.MAHADESHWARA COLLEGE
ROAD,KOLLEGAL PIN-571440
PH : 0988625283/ 9448595590.

KOPPA

520.## AUTO TECH (3448), MAIN ROAD,UPPERPET,KOPPA,(CHIKMAGALUR DIST.) PIN-577126 PH :08265-21838.

KRISHNA RAJA NAGAR

521.# MOHIT MOTORS (5752), 21/2,CHIRNAHALLI ROAD,VINAYAKA EXTENSION,KRISHNA RAJA NAGAR,DISTRICT-MYSORE,KARNATAKA

PIN-571602 PH :-9880320051.

KUMTA

522.# SOLOTECH (4547), NEAR HAVYAK SABHA MANTAP, MUROOR ROAD, KUMTA, KARNATAKA PIN-581343 PH -9448149607

KUNDAPUR

523.* PRAKASH AUTO SERVICE (4522), NEAR: K.E.B., VODERHOBLI, KUNDAPURA PIN-576201 PH :08254-231327.

MANIPAL

524.# MANIPAL MARUTI AUTO WORKS (4578), MANIPAL ALEVOOR ROAD,NEAR R.C. CHURCH,OPP. SIGMA BAZAR,MANIPAL (UDUPI DIST) PIN-576104 PH -9448108318

MUDHOL

525.## OM MOTORS (5857), OPP TALUKA OFFICE,LOKAPUR ROAD, MUDHOL,DISTRICT-BAGALKOT,KARNATAKA PIN-587313 PH :9448776744.

MUDIGERE

526.## BADRIYA CAR SERVICE POINT (5364), K.M.
ROAD, MUDIGERE, DISTRICTCHIKAMANGALORE, (KARNATAKA)
PIN-577132
PH:08263-9448007094.

MYSORE

527.** CAR CLINIC (346), NO.8 GOKULAM 4TH STAGE,INDUSTRIAL LAYOUT NEAR GOKUL THEATRE,KRS ROAD,MYSORE PIN-570020 PH:0821-516055/517644.

NELAMANGALA

528.## GOUTHAM MOTORS (4332), PATEL CHANNAPPA EXTN,NELAMANGALA,KARNATAKA PIN-562123

PH:080-7722077, 9880251546, 9448668946

RABAKAVI BANAHATTI

529.## SANGAMA MOTORS (5726), BESIDE CMC,RAMPUR MAIN ROAD,RABAKAVI,DISTRICT-BAGALKOT,KAR NATAKA PIN-587314 PH : 94400534916.

RAICHUI

530.## HEERA MOTORS (3730), OPP. MOTI
MASJID, SHIVJI OIL MILL COMPOUND, TIPU
SULTAN ROAD, RAICHUR (KARNATAKA)
PIN-584101
PH:-0853230651(R), 9845156322,50598.

RAMNAGARAM

31.# MENEZES MOTORS (4969),
NO:315/298A.NEAR
KANAKAPURACIRCLE.,B.M. ROAD
ARCHAKARAHALL
BANGAI ORE DISTRICT-BANGAI ORE

BANGALORE, DISTRICT-BANGALO RURAL, KARNATAKA PIN-571511 PH:-9986301054.

RANEBENNUR

32.# KIZEN MOTORS (4568), P.B. ROAD,OPP.
A.P.M.C MARKET,RANEBENNUR PIN-581115
PH 108373-266364 9844401484

SAGAR (KARNATAKA)

533.## MALLIKA AUTO CENTRE (2133), MALLIK COMPLEX,B.H. ROAD,SAGAR PIN-577401 PH :08183-29405. 534.## ADITYA AUTOMOBILES (2077), JOG ROAD,SAGAR,(KARNATAKA) PIN-577401

PH:08183-28236.28636.

SHIMOQA

535.* SHIMOGA AUTO ENGG WORKS (246), GARDEN AREA,SHIMOGA,KARNATAKA PIN-577201

PH:-9819321132.

536.## NEPTUNE AUTO WORKS (5271), PLOT -5 AUTO COMPLEX,SAGAR ROAD -SHIMOGA,DISTRICT -SHIMOGA,KARNATAKA PIN-577204 PH: -9448319758.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

SIDDAPUR

537.## MARUTI AUTO WORKS (5335), SORAB ROAD..SIDDAPUR (U.K),DISTRICT - UTTAR KANAND,KARNATAKA PIN-581355 PH : 9448525801 .

SIRSI

538.* ARUNDHATI MOTORS (1258), HUBLI ROAD,SIRSI,(UTTAR KARNATAKA) PIN-581402

PH:-9845098822. SRINGERI

539.# SHUBHASHREE MOTORS (5434), AGUMBLE ROAD, SRINGERI, DISTRICT -CHIKAMGALUR, SRINGERI, KARNATAKA PIN-577139

PH:08265-9448170400.

540.## SUMUKA AUTOMOBILES (5133), AP
ROAD.CEEBENE
KERI,DISTRICT-SIMGA,SHIMGA,KARNATAKA

PIN-577414 PH:08181-9448159463.

TUMKUR

TIRTHALLI

541.## APOORVA CAR CARE CENTRE (5327), B.N.P.
COMPOUND.BEHIND KRISHNA
THEATRE,M.G. ROAD - TUMKUR,DISTRICT TUMKUR,KARNATAKA PIN-560001
PH : 9448166275.

UDUPI

ST. JUDE AUTOMOBILE ENGG. WORKS (4521), B.D.MARG,AMBALAPADI,UDIPI PIN-576103 PH:0820-23319.

UPPINANGADY

543.## RATNA ENTERPRISES (5447), N.H. 48. OLD GATE, UPPINANGADY, DISTRICT - DASSHI KANNADA, KARNATAKA PIN-574241 PH : 9972995341.

KERALA

ADIMALY

544.## PLATHOTTAM AUTOMOBILES (3864), NH-49,OPPOSITE TO MINI INDUSTRIAL ESTATE,ADIMALI PIN-685561 PH 104864,9447023073

ADOOR

545.## AUTO CLUB (2132), NEAR H.P.
PUMP,VADAKKADATHUKAVU
P.O,ADOOR,PATHNAMTHITTA DISTT
PIN-691523
PH: 0473-9447440184.

ALAPPUZA

546.## ESSAR MOTORS (4959), KALARKODE,NEAR CHIMMAYA SCHOOL, NH-47,ALAPPUZHA, KERALA PIN-688003 PH: 0477-9249938474.

ALUVA

547.## AUTO TEAM (2630), A/189 A,PARUR JUNCTION,ALUVA,(KERALA) PIN-683101 PH:0484-9349252698.

AMBALLUR

548.## LAKSHMI DEVI AUTO GARAGE (4137), AMBALLUR.P.O. PUDUKAD,TRICHUR,KERALA PIN-680301 PH :0480-9847004949.

ANCHAL

549.## NAMI-TAJ (2534), NAMITAJ MARUTI SERVICE CENTRE,(OPP.) PETROL PUMP, R.O. JUNCTION, ANCHAL (KERALA) PIN-691306 PH: 0475-9447453745.

ANJUMOORTHY

550.## SAFA AUTO CARE (3847), N H
ROAD,MANGALAM PALAM,ANJUMOORTHY
POST, VADAKKENCHERY,PALAKKAD DISTT,
KERALA PIN-678633
PH :0492-9447303347.

ATTINGAL

551.## OM SHAKTI AUTOMOBILES (4466), KIZHUVILAM P.O.,MAMOM,ATTINGAL,KERALA PIN-695104 PH: 0470-9744658681.

AYOOR

2.* MAKKATTU AUTO CLINIC (5051), AYOOR-ANCHAL ROAD PANACHAILA, AYOOR, DISTRICT -KOLLAM, KERALA PIN-691306 PH: 0475-9847288624.

CALICUT

553.## MARUTI VEHICLES CENTRE (4727),
SUBHADRA BUILDINGS,POTTAMMAL
P.O.,NELLIKODE,CALICUT PIN-673016
PH :0495-9447275499,
554.## MARUTI SCAN (1675), BYE PASS
JUNCTION,MEENCHANDA,CALICUT
PIN-673018
PH :0495-9447345008.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

555.## MALABAR MOTORS (4655), EAST NADAKKAVU,P.O. ERANIPALAM,CALICUT,KERALA PIN-673006 PH: 0495-9846089190.

CHALLAKUDDY

56.* VIJAY AUTO SERVICE (1626),
POTTA, CHALAKUDY PIN-680307
PH :0480-9995074628.

57.## STAR MARLITI CARAGE (5367), N

557.## STAR MARUTI GARAGE (5367), NH47 BYE
PASS,NEAR CRESCENT PUBLIC
SCHOOL,CHALAKKUDY,DISTRICT THRISSUR PIN-680307
PH: 0480-9946009375.

CHANGANACHERRY

558.## SAAFAA AUTOMOBILES (1148), OPP.
APSARA THEATRE, CHANGANACHERRY
PIN-686101

PH :0481-9447042517.

559.* PALATHRA MOTORS & SERVICE CENTRE (1072), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY PIN-686104 PH :0481-9447195154.

CHAVARA

560.## CHITHIRA AUTOMOBILES (4755), KANKATHU
MUKKU,CHAVARA,KOLLAM PIN-691583
PH :0474-9447711009.

CHENGANNUR

51.* NEW TECH AUTOMOBILES (1978), INDUSTRIAI

ESTATE, MUNDANCAVU, CHENGANNUR, KER ALA PIN-689121 PH:0479-9388915757.

CHERTHALA

562.* POZHICKAL CAR WORLD (3037), NEAR

SCHOOL,CHERTHALA,ALAPPUZHA DIST.,KERALA PIN-688524 PH :0478,9947474752

ERATTUPET/

563.## AUTO COMFORT (3948), PKMS
BUILDING,ERATTUPETTA PIN-686121
PH :04822-9447186876

ETTUMANOOR

564.## ROHIT MOTORS (4636), THELLAKOM P.O., M.C. ROAD,ETTUMANOOR,KERALA PIN-686016 PH:0481-9447079010.

KALANJOOR

565.## AGT MOTORS (5937), KIP
JUNCTION,KALANJOOR, DISTRICT-PATHANA
MTHITTA,KERALA PIN-689694
PH: 04734-9447261424.

KALLAMBALAM

PRAKASH AUTO ENGINEERS (5548), VADASSERIKONAM P.O. KALLAMBALAM, VARKALA, KALLAMBALAM, DI STRICT-TRIVANDRUM, KERALA PIN-695143 PH: 0470-9847159618.

KALLUMUTTY

567.## MARUTI CARE (4179), KALLUMUTTY,IRITTY
P.O.,KANNUR,KERALA PIN-670703
PH:0490-9946703070.

KALPETTA

568.## VARCO MOTORS (4724), CALICUT MYSORE ROAD, KALPETTA, NORTH KERALA PIN-673592 PH: 04936-9961569898.

KANJIRAPALLI

569.## MACK ENTERPRISES (2729), T.B.ROAD,KANJRAPALLLY PIN-686507 PH :04828-9447093739.

KANNUR

570.** PIONEER AUTO & ENGG.WORKS (4722), KANNOTHUMCHAL ROAD,KANNUR,(KERALA)PIN-670006 PH :0497-9447798255.

571.## AREN MOTORS (6139), CHAKKARAKAL.P.O.
MUZHAPPALA,DISTRICT - KANNUR,KERALA
PIN-670611
PH 10479-9446771237

KARIMANOOR

572.## MACS AUTOMOBILES (5745), SILVER SOUARE ,KARIMANNOOR, THODUPUZHA, DISTRICT-ID UKKI, KERALA PIN-681585

KARUVANCHAL

73.## SAFEGUARD MARUTI SERVICE STATION (4351), MARIPURATHU HOUSE, KOKKAMULLU, KAYAMKUMPARA P.O., CHEMPERY - VIA, CANNANORE PIN-670571 PH -0360-9447235468.

PH:0486-9633275410

KASARGOD

574.## CARS CARE (4579), ANANDPUR, VIDYANAGAR P.O., KASARAGOD, KERALA PIN-671123 PH : 04994-9847251115.

KATTAKADA

575.## CITY ENGINEERS (4947), MARUTI SERVICE CENTRE,NEYYATTINKARA ROAD,KATTAKADA,DISTRICT-TRIVANDRUM (KERALA) PIN-695572

PH:0471-9447206257.

MADATHIL MOTORS (5456), MADATHIL
HOUSE,CHOONDUPALAKA,KATTAKADA P.O.
- TRIVANDRUM,DISTRICT -

TRIVANDRUM,(KERALA) PIN-695572 PH:0471-9495192389.

KATTAPPANA

577.## UNITED SERVICE CENTER (4433), EDASSERT JUNCTION,KATTAPPANA,KERALA PIN-685508 PH :04868-9961432941.

KAYAMKULAM

578.## PERFECT MOTORS (4948), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM, DISTRICT-A LAPPUZHA (KERALA) PIN-690507 PH:0479-9447048338.

KOLLAM

579.## QUILON MARUTI SERVICE (2737), CHANDANATHOPE P.O.,KOLLAM,(KERALA) PIN-691014

PH:0474-9387307562.

KONNI

580.## GLOBAL MOTORS (2836), VAKAYAR
P.O.;KONNI,(KERALA) PIN-689698
PH. 1983-9446222944.
581.## MUTTATH AUTOMOBILES (5525),
AROOPPALAM,KONNI,DISTRICTPATHANANTHITTA,KERALA PIN-689691
PH. 1948-94474315,19447161605.

KOOTHATUKULAM

582.## EXTRA CARE SERVICES (3232), DEVA MATHA JUNCTION,M.C. ROAD,KOOTHATTUKULAM,ERNAKULAM DIST. (KERALA) PIN-686662 PH 10485-9848723351

KOTHAMANGALAM

83.## MAJESTIC MOTORS (1253), NEAR THANKALAM BYE-PASS ROAD, KOTHAMANGALAM, KERALA PIN-686691 PH:0485-9388893221. 584.## EXCEL MARUTI SERVICE (4342), BYE-PASS ROAD,KOTHAMANGALAM,ERNAKULAM PIN-686691

PH:0485-9847177202

SPARK SERVICE (5772), ELAMPALLOOR,P.O. KUNDARA,DISTRICT-KOLLAM,(KERALA) PIN-691501 PH:-9387227500.

KUTHUPARAMBA

586.## KRISHNA MOTORS (3435), KUTTIKKUNNU.NEAR 66 KV SUB STATION,KUTHUPARAMBA,KANNUR DIST. (KERALA) PIN-670643 PH :0490-9497296380.

MANANTHAVADY

7.## AUTO CARE (2541), (SHEEJA AUTO ENGG. WORKS), THALASSERY ROAD, MANANTHAVADY, WAYANAD (DIST.) PIN-670645 PH :0493-9447040068.

MANJERI

588.## MARUTI AUTO HOUSE (4726), MARUTI SERVICE CENTRE, MELAKKAM, MANJERY PIN-676123 PH :0483-9447129289.

MANNAR

589.## MOHANS AUTOMOBILES (5457), MOHANS AUTOMOBILES & ENGINEERS, KUTTEMPEROOR P. O. MANNAR, DISTRICT - ALAPPUZHA, (KERALA) PIN-689652

MANNUTHY

PH :-9447877377

0.** TOP CLEAN SERVICES (2834), 13/450 MANNUTHI BYE PASS,P.O. OLLUKKARA, THRISSUR,(KERALA) PIN-680685 PH :0487-9846037818.

MEENANGADI

591.## MOTOR TECH (2440), EAST
MEENANGADI,KRISHNAGIRI
P.O.,WAYANAD,(KERALA) PIN-673591
PH:0493-9447263360.

MOOCHIKKAL

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

592.## CHELADAN'S MARUTI ENGINEERS (4659), ROAD, MOOCHIKKAL, MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA) PIN-676307 PH:0494-9895443563.

MUNNAR

593.## PLATHOTTAM AUTOMOBILES (4447), NH-49,ADIMALY,IDUKKI DIST,KERALA PH:04865-9447023073.

MUVATTUPUZHA

594.** JAWAN AUTOMOBILES (2730), MADAVOOR POST.MUVATTUPUZHA PIN-686669 PH:0485-9447163809.

NEYYANTTINKARA

595.## XANON ENGINEERS (4635), RAVELI TOLL JUNCTION NEVYATTINKARA TRIVANDRUM PIN-695121 PH:0471-9447014813.

NILAMBUR

596.## CONFIDENCE MOTORS (5140). PALUNDA.CHUNGATHARA.NILAMBUR.DISTR ICT - MALLAPURAM.KERALA PIN-679334 PH:-9447681623.

NILAMEL

597.## LIBRA (3431), M.C. ROAD, NILAMEL, KOLLAM DIST..(KERALA) PIN-691535 PH:0474-9447335089.

OCHIRA

MANGALATH AUTOMOBILES (3836), NH 47 VALIYAKULANGARA,OCHIRA P O,KOLLAM DIST,KERALA PIN-690526 PH:0476-9847258696.

OLLUR

599.## TOPCLEAN SERVICES (4468), 10/153,CHRISTOPHER NAGAR,P.O OLLUR, TRICHUR (KERALA) PIN-680306 PH:0487-9846037818.

PALAKKAD

600.## CAR CRAFT (2139), 5/682 (1),MANALI,PALAKAD,(KERALA) PIN-678001 PH:0491-9447137870.

PANDALAM

AISHWARYA AUTOMOBILES (2067), NEAR K.S.R.T.C. BUS STOP, PANDALAM PIN-689501 PH:0473-9847049140. PARIPALLY

602.## ALLIANCE MARUTI SERVICES (3243) NH-47,PARIPPALLY,KOLLAM DIST. (KERALA)

PATHANAPURAM

PH:0474-9349926440.

603.## MANNIL AUTOMOBILES (4150), NEAR PANCHAYAT OFFICE, PATHANAPURAM, KERALA PIN-689695 PH:0475-9447258496.

PATHNAMTHITTA

C.J. MARUTI CARE CENTRE (1255). VARIYAPURAM.ELANTHOOR EAST P.O., PATHANAMTHITTA, (KERALA) PIN-689643 PH:0468-9446913874.

PERAVOOR

605.## CAR CARE AUTOMOBILES (4422), P.K. NIVAS KUNITALA P.O. PERAVOOR KANNUR DIST. PIN-670673 PH:04902-9946444691

PERUMBAYOOR 606.## ACC MARUTI (2835), XIV/III-B.M.C.

ROAD.PERUMBAVOOR.(KERALA) PIN-683542 PH:0484-9846022593 MILLENNIUM MOTORS (4873), OLD VALLAM ROAD, KADUVAL, PERUMBAVOOR, DISTRICT-ERNAKULAM (KERALA) PIN-683542

QUILANDY

608 ## HITECH MARLITI (3025) MAIN ROAD,KOYILANDY,CALICUT DISTT PIN-673305 PH:0496-9497304619.

PH:0484-9447052488.

609.## DEEPA AUTOMOBILES (5177), DEEPA AUTOMOBILES.PAZHAVANGADI,P.O. RANNY, DISTRICT-PATHANAMTHITTA, KERAL A PIN-689673 PH:04735-9447365602

SASTHA MANGALAM

610.## MARSHAL AUTOMOBILES (4035), SWATI NAGAR, TC 10/147, PIPPIN MOODU, SASTHA MANGALAM, PEROORKADA, TRIVANDRUM PIN-695005 PH:0471-9447461101.

SULTAN BATHERY

611.## AUTOMECK (4725), BEENCHI P.O., SULTAN BATTERY PIN-673592 PH:0493-9249999515.

NEW INDIAN MARUTI SERVICE CENTRE (4577), MYSORE ROAD, SULTAN BATHERY, WAYANAD DISTRICT, KERALA PIN-673592

TEE PEE MOTORS (4773), 9/668-B OOTY ROAD, NEAR BLOCK OFFICE, SULTAN BATHERY, WAYANAD (KERALA) PIN-673592 PH:04936-9447934726.

PH:0493-9446810701.

TALIPARAMBA

614.## YESKAY (3368), KAKATHODE, TALIPAPARAMBA, KANNUR DISTT (KERALA) PIN-670141 PH:0460-9744076850.

THALASSERRY

615.## SAFE HANDS (3038), ERANHOLI, CHUNGAM, THALASSERY, (KERAL A) PIN-670107 PH:0490-9744322317.

THALAYOLAPARAMBU

616.* MYALIPARAMPIL MOTORS (3233), SILON JUNCTION, NEAR THALAYOLARAMBU,POOZHIKOL P O PIN-686604 PH:04829-9447562050.

THAMARASSERY

617.## MALABAR MOTORS (4645), WARD NO. 12, BLDG NO. 121, WAYANAD ROAD, KARADY, THAMARASSERY, CALICUT PIN-673573 PH:0495-9387531000.

THIRUVALLA

618 ## MARLITI ALITO SPOT (1628) MUTHOOR M.C. ROAD.THIRUVALLA PIN-689107 PH -0469-9447034608

THIRUVANANTHAPURAM

619.## SREEKARIYAM AUTOMOBILES (353), SREEKARIYAM P.O. THIRUVANANTHAPURAM PIN-695017 PH:0471-9447050313. PROFESSIONAL MOTORS (1256), NEAR

FLECTRICITY BOARD, PEROORKADA, TRIVANDRUM PIN-695005

PH:0471-9447697945

621.## HITECH INDUSTRIES (1951), NEAR ULLOOR BRIDGE,PATTOM

P.O., THIRUVANANTHAPURAM, (KERALA) PIN-

PH:0471-9447732057.

EMINENT MARUTI SERVICE (2360), T.C. 610 M.C. ROAD, MANNANTHALA, TRIVANDRUM PIN-695015

PH:0471-9447713639.

MUKUNDANS (3434), PADMAVILASAM, T.C. 2/1370,PATTOM PALACE P.O., THIRUVANANTHAPURAM PIN-695004

PH:0471-9887834555.

TRIVANDRUM KICHU MOTORS (5453), TC.49/962

,SREEMOOLAM NAGAR CHIRAMUKKU, MANACAUR (PO) TRIVANDRUM, DISTRICT TRIVANDRUM, KERALA PIN-695009 PH:0471-9847023025.

VADAKKANCHERY

625.## TOPCLEAN SERVICES (4354), 275-A,NEAR UTHRALIKKAVU TEMPLE,KUMARANELLUR P.O., VADAKKANCHERY, TRICHUR PIN-680307 PH:04884-9846037818.

VADANAPPALLY

626.## MONARCH MARUTI CARE CENTRE (4079), NEAR NORTH JUMA MASJID, GANESHA MANGALAM,P O VADANAPALLY,TRICHUR DIST (KERALA) PIN-680614 PH:0487-9847792698.

VADAVATHOOR

627.## CCARS (5754), VADAVATHOOR, PO-KOTTAYAM, DISTRICT-K OTTAYAM,KERALA PIN-686503 PH:0481-9447208558.

VARKALA

628.* S.S. MOTORS (2979), NEAR POLICE STATION.VARKALA.TRIVANDRUM DISTT., TRIVANDRUM DISTT, PIN-695141 PH:0472-9446104991

VATAKARA

629.## RANI AUTOMOBILES & ENGINEERING WORKS (1674), NADAPURAM BOAD MADAPALLY COLLEGE (P.O.), VATAKARA PIN-673102 PH:0496-9447517004 **LAKSHADWEEP**

LAKSHADWEEP

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

630.## POPULAR REPAIR & SERVICE CENTRE
(2944), SECRETARIAT
ROAD,KAVARATTI,LAKSHADWEEP

PIN-682555 PH:0489-989543876.

MADHYA PRADESH

BALAGHAT

631.## GULAB AUTOMOBILES (1553), GUJARI CHOWK,BALAGHAT,MADHYA PRADESH PIN.481001

PH :07632-9425402926.

632.## SAURAV MOTORS (4069), DEENHI ROAD,GARRA INDUSTRIAL AREA,BALAGHAT,MADHYA PRADESH

PIN-481001 PH:07632-9826310979.

BARWANI

633.## SPEED AUTOMOBILES (5260), KHANDWA BARODA ROAD,NR. BALAJI TOLL KANTA,BARWANI,DISTRICT-BARWANI,MADH YA PRADESH PIN-451552 PH :451551-9926146073.

BETUL

634.## ADITYA MOTORS (1263), NAGPUR BHOPAL ROAD,SADAR,BETUL,MADHYA PRADESH PIN-461001

PH -07140-9425381581

BHIND

635.## MAA PITAMBRA MOTORS (5241), OPP.
RAJENDERA CONVENT SCHOOL,LAKSHAR
ROAD - BHIND,MADHYA PRADESH
PIN-477001
PH : 9826240582.

BHOPAL

36.** VIDHYA AUTOMOBILES PVT. LTD. (), PLOT NO. 235,ZONE II,M.P. NAGAR,BHOPAL (M.P.) PIN-462011

PH:0755-9826053198.

637.## SHRI KRISHNAN CAR CARE (1679),
POLYTECHNIC ROAD NEAR PETRO

SHRI KRISHNAN CAR CARE (1679), POLYTECHNIC ROAD,NEAR PETROL PUMP,BHOPAL,(M.P.) PIN-462023 PH:0755-9424454030.

638.* TAURUS AUTOMOBILES (3372), ALAKNANDA COMPLEX,OPP.VIJAY STAMBH PRESS COMPLEX,M.P. NAGAR ZONE-I,BHOPAL (M.P.) PIN-462011 PH :0755-9303131403

639.## SHUBHAM AUTOMOBILE (5052), PLOT NO 1 & 2 CHAWANI SHAHPURA, GULMOHAR ROAD, SHAHPURA, DISTRICT BHOPAL PIN-462011

PH:0755-9425009869.

640.** RANJIT AUTOMOBILES (5452), 117.ZONE II . M.P. NAGAR.BHOPAL, DISTRICT -BHOPAL,MADHYA PRADESH PIN-462011 PH :0755-9826250439.

BIAORA

641.## GURUKRUPA MOTORS (5670), OPP
PRABHAT BREAD INDUSTRY,AB ROAD BIOARA,DISTRICT - BIOARA,MADHYA
PRADESH PIN-452001
PH: 07374-9425037506.

842.# NEW INDIA AUTO GARAGE (5337), NEAR VARMA SALES, AB ROAD -BIORA, DISTRICT -RAJGARH, MADHYA PRADESH PIN-465674 PH: -9826555002.

BURHANPUR

43.** SWADESHI MOTORS (4229), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR PIN-450331 PH :07325-9425086920, 07325245150.

CHINDWARA

644.## BINDRA AUTOMOTIVE (5420), SHANICHRA BAZAR,CHHINDWARA,M.P. PIN-480001 PH :-9827292392

DABRA

645.## MODI MOTORS (3857), BHALLA KA
DERA,JHANSI ROAD,DABRA,GWALIOR
PIN-474001
PH:07524-9425119888.

DAMOH

646.## MARUTI PRIME (1156), BUS STAND, STATION ROAD, DAMOH PIN-470661 PH: -9425096209

DATIA

647.## HIND MOTORS (4470), JHANSI ROAD,KALAMPURAM TIRHA,DATIA,MADHYA PRADESH PIN-475661 PH: 07522-9406969206.

DEWAS

648.## AZAD MOTORS (4534), 26 NEW
MARKET, MOTI BANGLA, DEWAS, MADHYA
PRADESH PIN-455001
PH :07272-9827533591.

DHAMNO

649.## REWANCHAL MOTORS (6027), NEW PRAKASH NAGAR,AB ROAD, DHAMMOD,DISTRICT-DHAR,MADHYA PRADESH PIN-454552 PH: -9425334147.

DHAR

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

650.## JIYO MOTORS (5031), OPP DAK BANGLA, INDORE ROAD DHAR, DISTRICT -DHAR, DHAR, MADHYA PRADESH PIN-454001 PH :07292-9893633559,

GWALIOR

651.** MARUTI ENTERPRISES (3021), KHERAPATI ROAD,GWALIOR,(M.P) PIN-474002 PH :0751-9425116466.

52.## CLASSIC MOTOR & SERVICE STATION (5242), CHAUHAN PIAO, M.G. ROAD, THATIPUR MORAR, GWALIOR, MADHYA PRADESH PIN-474011

PH:-9329603001

IARDA

653.## MANOJ UDYOG & SERVICE CENTER (4145), 87-88, INDUSTRIAL AREA,CHHIPANER ROAD,HARDA,M.P PIN-461331 PH:-9826227245.

INDORE

654.** KHALSA AUTO SERVICE (5325), 36 KIBE COMPOUND,INDORE PIN-452001 PH:-9425055788.

BOMBAY MOTORS (1655), 10 Y.N. ROAD,INDORE,(M.P.) PIN-452003 PH:0731-9893887867.

6.## BADSHAH MOTORS (5027), 150/2, NOORANI NAGAR, NEAR JAIMAL SINGH PETROL PUMP, DHAR ROAD, INDORE, DISTRICT-INDORE, MADHYA PRADESH PIN-452008

PH:-9826098427.
JYOTI RAGHUNATH MOTORS (5149), 3/3
RAMBAGH,BEHIND PETROL
PUMP,INDORE,MADHYA PRADESH

PIN-452001 PH:0731-9425965001.

ITARSI

658.** UNITY ENTERPRISES (3270), PLOT NO.97,INDUSTRIAL AREA,KHEDA,ITARSI (M.P.) PIN-461111

PH:07572-9893528689.
PITAMBARA MOTORS (5041), NH-69, BETUL
ROAD, NEAR PLYBOARD, FACTORY
ITARSI, DISTRICT - ITARSI, MADHYA
PRADESH PIN-461111

PH:-9826528912. JABALPUR

660.## YASH VEHICLES CARE (2169), 1663 WRIGHT TOWN, OPP. TELEGRAPH GATE NO.2,JABALPUR, (M.P.) PIN-482002 PH: 0761-9826259859. 661.## SUPER MARUTI SERVICE (4952), 375-A PREM NAGAR,OPP. GURUDWARA,JABALPUR,MADHYA PRADESHPIN-482001 PH:0761-9827094994.

JAORA

662.* RATNARAJ MOTORS (4245), MHOW NEEMUCH ROAD,BHIMAKHERI FATAK,JAORA (M.P) PIN-457226 PH:-9827238700.

-IAWAD

663.## SHARMA MOTORS (5764), IN FRONT OF PAWAN MILL,STATION ROAD, JAWAD,DISTRICT-NEEMUCH,MADHYA PRADESH PIN-458330 PH: :9425441270.

KATNI

14.## KATNI MOTORS (4949), C/O MAHURANIPUR UNION,TRANSPORT CORPORATION,NH-7, PANNA MORH,KATNI (MADHYA PRADESH) PIN-483501 PH :07622-9425162660.

KHANDWA

665.## M.K. AUTOMOBILES (5326), SANTOSH NAGAR,OPP. JHEELODHYAN,INDORE ROAD,KHANDWA PIN-450001 PH :0733-9425085666.

KUKSHI

666.## DILIP MARUTI SERVICE CENTER (4649), OPP. GAYATRI SAROVAR,KUKSHI,DISTT DHAR PIN-454331

PH -07297-9893227070

MANDSAUR

167.* JANGID MOTORS (2735), NAYAPURA ROAD.NEAR R.K. HOSPITAL,MANDSAUR,(M.P.) PIN-458001 PH: 07422-9827266583, 07422241146.

668.## DEV MOTORS (4562), SITAMAU FATAK,MANDSAUR,MADHYA PRADESH PIN-458001

PH:-9826751534.

MHOW

HIGHWAY MOTORS (4144), A.B.
 ROAD,DONGRAGAON,MHOW,INDORE M.P.
 PIN-453441
 PH:07324-7324277181, 9826035653.

MORENA

* B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs 670.## SHYAM MARUTI SERVICE STATION (2964), SHYAM BIHAR COLONY, A.B. ROAD, MORENA, (M.P.) PIN-476001 PH:07532-9425366274.

671.## MARUTI NANDAN (3939), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA, DISTT UJJAIN PIN-456331 PH:0736-9406918392.

SAGAR

672.## SAGAR MOTORS (4955), NEAR GURUDWARA JHANSI BHOPAL BOAD BHAGWANGANJ.SAGAR.MADHYA PRADESH PIN-470002 PH:07582-9826070549.

SARNI

673.## JHANVI SERVICE STATION (3738), MAIN BOAD BAGDONA SARNI DISTT. BETUIL (M.P.) PIN-460449 PH:07146-9425382313.

SATNA

KAPOOR SERVICING CENTRE (1162), 90 674.* PREM NAGAR.SATNA.(M.P.) PIN-485001 PH:-9827095182.

675.## HIGHWAY MOTORS (2262), NEAR MOTEL CENTER POINT.SEONI-JABALPUR HIGHWAY.SEONI.(M.P.) PIN-480661 PH:-9424364655.

SHAHDOL

676.## PACE CRAFTERS AND AUTO SERVICES (2145), NEAR VIRAT TEMPLE,BANGANGA,SHAHDOL,(M.P.) PIN-484001 PH:07652-9424701495.

SHAJAPUR

677.## SHRIYA MOTORS (2568), 174 A.B. ROAD, SHAHJAPUR, (M.P.) PIN-456001 PH:07364-9826783993.

SHEOPUR

678.## GOYAL AUTO (5446), NEAR BABBAN MARKET BARODA BOAD SHEOPUR DISTRICT -SHEOPUR, MADHYA PRADESH PIN-476332 PH:-9826240944.

SHIVPURI

KARUN MOTORS (4273), NEAR ARUN DHARAMKANTA,GUNA NAKA,A.B. BOAD SHIVPUBI PIN-473551 PH:07492-9425137808

SIDMI

MORE,POST - SINGRAULI,DISTT. SIDHI (M.P.) PIN-486889 PH:07805-9919804489. KHARE MOTORS (4068), NH-75, SINGRAULI ROAD, SIDHI, MADHYA PRADESH PIN-486889

680.## MAMTA MOTORS (2447), BHUSA

PH:07805-8120090404.

TIKAMGARH

ASHENDRA AUTOMOBILES (2636), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA.KUNDESHWAR.TIKAMGARH.(M. P.) PIN-472001 PH:07683-245387 ,9425141840,9425141940,9425145687.

UJJAIN

683.## SUGANDHI BROTHERS (324), DEWAS BOAD UJJAIN (M.P) PIN-456010 PH:07341-9425379301. ZALANI AUTO SERVICE (1554), 4/2 684.## NAZARALI MARG, FAZALPURA, UJJAIN PIN-456006

PH:0734-9893446739.

VIDISHA

685.## SAMAY MOTORS (5179), NEAR SC/S SHED.PITALMIR CHOURAHA, SAGAR ROAD NH-86 VIDISHA PIN-464002 PH:07592-9425392521.

686.## ANANT MOTORS (5732), BILAUNJI .WAIDHAN.DISTRICT-SINGRAULI.MADHYA PRADESH PIN-486886 PH:-9753167070

MAHARASHTRA

AKLUJ

687.## SONAJ AUTOMOTIVES PVT. LTD. (2665), SHANKARRAO MOHITE PATIL,CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.O. BOX NO.-11,AKLUJ (MAHARASHTRA) PIN-413101 PH:02185-224376/9422644194.

AKOLA

688.## AUTOLAND (5936), RAM NAGAR, TOSHNIWAL LAYOUT, AKOLA, DISTRICT-AKOLA, MAHARAS HTRA PIN-444005

PH:0724-2453560/09422164050. AKOLE

689.## SAMARTH CAR CARE (5555), MAHALAXMI COLONY K.G. BOAD-AKOLE DISTRICT -AHMEDNAGAR, MAHARASHTRA PIN-422601 PH :-9763896321

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

AMALNER

690.## LUCKY AUTO CARES (5853), R.K. COMPLEX,R.K. NAGAR,DHULE ROAD, AMALNER, DISTRICT-JALGAON, MAHA RASHTRA PIN-425401 PH:-9422789764/9404056044.

AMRERNATH

J.S. AUTOMOBILES (4567), B-31/3, MIDC. KAI YAN AMBERNATH ROAD.AMBERNATH.MAHARASHTRA PIN-421501 PH:0251-2602061/62/9370116436.

AURANGABAD

MARUTI AUTOMOBILES (3441), MAHAVIR COMPLEX AKASHWANI CHOWK JAI NA ROAD,AURANGABAD (MAHARASHTRA) PIN-431008

PH:0240-9822015949/2330992 CAR CARE (5173), #85.SERVICE INDUSTRIAL SECTOR TOWN CENTRE. CIDCO, DISTRICT-AURANGABAD, MAHARASH TBA PIN-431003

PH:0240-240-2488929/2488939. BADLAPUR

694.## OMKAR AUTO SERVICES (3376), OMKAR BUNGLOW, GOLE WADI, KULGAON STN. BADI APUB DIST. THANE PIN-421503 PH:0251-2690371.

695.## AUTO WINGS (2142). PLOT NO. C-22/23.BARAMATI CO-OP INDUSTRIAL ESTATE JAI OCHI DISTRICT PLINE MAHARASHTRA PIN-413102 PH ·02112-243252/ 243077/24379

BARSI

BEED

OM SERVICE CENTRE (5359), KURWEDI ROAD, BARSI, DISTRICT -SOLAPUR, (MAHARASHTRA) PIN-413401 PH:-9850437003.

NEW AGWAN SERVICES (2235), 850 SHYOG NAGAR.JALNA ROAD.BEED.BEED PH:02442-227007

VAQUAR AUTO WORKS (544), AGRA ROAD JUNCTION, VANJARPATI NAKA, BHIWANDI, THANE DISTT. (MHRS) PIN-421302 PH:02522-243975/243966/9822655991.

BHUSAWAL

SAIKRIPA AUTOMOBILES (2129), NATIONAL HIGHWAY NO.6,S.NO.54/5X6 NEAR KHADKA ROAD CROSSING, BHUSAWAL, DISTT. JALGAON (MAHARASHTRA) PIN-425201 PH:024819-9422789764.

700.## SIFAR CAR CARE (4055), PLOT NO. 15 AT-KURGAON.P O KUNDAN.BOISAR TARAPUR ROAD.TAL PALGHAR, DISTT THANE PIN-401501 PH :02525-282384

BULDHANA

JADHAV & SONS (2122), MR SUSHII JADHAV MAIN BOAD NEAR POLICE STATION WARD NO 25 BUI DHANA PIN-443301 PH:07262-242647/9421464285.

CHANDRAPUR

702.## SHEIKH AUTOMOBILES (5379), APPOSITE GOVT. ITI.CIVIL LINES.CHANDRAPUR.DISTRICT -CHANDRAPUR.MAHARASHTRA PIN-442401 PH:07172-253218.

CHIPLUN

703.## MANORKAR AUTOMOBILES (270), NEAR RAILWAY STATION.BOMBAY-GOA HIGHWAY.WALOPE CHIPLUN.DISTT. RATNAGIRI PIN-415605 PH:02355-256299/255299. MAYUR MOTORS (168), SITA APARTMENTS NEAR BAHADLIR SHEIKH NAKA CHIPLLIN DISTT RATNAGIRI MAHARASHTRA PIN-415605 PH :02355-320048/255885

DAPOLI

ROYAL AUTO SERVICE STATION (3444), DAPOLI-MANDANGAD ROAD, MAUJE-DAPOLI, TAL- DAPOLI, DIST. RATNAGIRI (MAHARASHTRA) PIN-415712 PH:02358-282274/9422661033/9226701776.

DEOPUR

706.** AGRO ENGINEERING SERVICES (2244), DIVERSION ROAD, DEOPUR, DHULE, DHULE PIN-424005 PH:02562-26171/270964/9423193884

DOMBIVILI

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

707.## MEGA SERVICES (2573),
A-173,PHASE-1,NEW KALYAN BYPASS
ROAD,OPPOSITE ADARSH
PARK,MIDC,DOMBIVLI PIN-421203
PH

:0251-2448877/2448977/9821012736/99874971

GADACHIROLI

708.## VENUS AUTOMOTIVE (4170), PLOT # 2, NR GOVERNMENT ITI COLLEGE,ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY,GADACHIROLI,MAHARASHTRA PIN-447605

PH:07132-233222/9422151222/9689228222.

HINGANGHAT

709.## S.K MOTORS (5530), JAGANNATH
WARD,NH-7,HINGANGHAT,DISTRICTWARDHA,MAHARASHTRA PIN-442301
PH:9421726700.

ICHALKARANJI

710.## SAI AUTO LEADS (3821), 7/597 SANGLI VES,ICHALKARANJI,DIST. KOLHAPUR PIN-416115 PH :0230-435827/439227.

INDAPUR

711.## AJINKYA MOTORS (3868), S NO.
233(448), PUNE SOLAPUR HIGHWAY, NEAR
HOTEL SAI PALACE A/P INDAPUR DISTT.
PUNE PIN-413106
PH:0211-225471.

ISLAMPUR

712.## VIJAY MOTORS (5134), PETH ISLAMPUR ROAD,NEAR PETH NAKA -ISLAMPUR, DISTRICT -SANGLI,MAHARASHTRA PIN-416112 PH - 39801448084

JALGAON

713.* SHREE MOTORS (3040), 362 SHIVAJI NAGAR,JALGAON PIN-425 001 PH :0257-2221927,9823150704/9404050704.

KALWA

714.** SHREE SIDDHI MOTORS (5668), NEXT TO
LILAVATI CO-OP
SOCIETY DATTAWADA,KALWA KHAREGAON
ROAD-KALWA(W),DISTRICT
THANE,(MAHARASHTRA) PIN-400605
PH:-64837777/2540777879.

KALWAN

715.## KRISHNA AUTOMOTIVE (4037), GANESH NAGAR,AT POST & TALUKA,KALWAN,DIST NASHIK PIN-423501 PH:02592-9420233134/8087988735.

KALYAN

716.## SHIVAM AUTO CARE (571), C/O GRIHALAXMI VATSU NIRMAN,MURBAD ROAD,KALYAN,BOMBAY PIN-421304 PH: 0251-2321518/6518007/9867001771.

KANKAVLI

717.** SAPALE AUTO SERVICE PRIVATE LIMITED (1975), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHUDURG PIN-416602 PH: 02367-233434/231934/9422434701.

KATOL

718.## BALAJI SERVICE STATION (5962), PLOT NO. XI.MIDC, SAWARGAON NO. ROAD, DONGARGAON-KATOL, NAGPUR, DISTRICT-NAGPUR, MAHARASHTRA PIN-441302 PH: 07112-9763867144.

KHAMQAON

719.## JAIDEEP MOTORS (4779), NEAR RELIANCE
PETROL PUMP, NANDURA
ROAD, KHAMGAON, DISTRICT-BULDHANA
(MAHARASHTRA) PIN-444303
PH:07263-9850352826/9922917419.

KHED

720.## BHARAT AGENCIES (4548), AT POST BHARNA NAKA,NH-17,KHED,RATNAGIRI DIST PIN-415621 PH :02356-263309/260309/ 9040024781 90420000

KOLHAPUR

VAKRATUNDA MOTORS (3142), OPP MAHAVIR COLLEGE, NAGALA PARK, KOLHAPUR PIN-416003 PH: 0231-2680742.

KOPARQAON

2.* SAI MOTORS (4449), NAGAR MANMAD HIGHWAY,NEAR HOTEL ASHOKA,KOPARGAON,DIST. AHMEDNAGAR (MAHARASHTRA) PIN-423601 PH :02423-932643900);9850684384.

LONAVALA

723.## APPOLO MOTOR REPAIRING WORKS (2543), MUMBAI-PUNE ROAD,LONAVALA,MAHARASHTRA PIN-410401 PH :02114-280330/9370721905.

MAHAD

724.## SHREE AUTO (2572), NAGALWADI PHATA BOMBAY-GOA HIGHWAY, AT & TALLIKA -MAHAD, DISTT. RAIGAD, MAHARASHTRA PIN-402301 PH :02145-233111/ 223256/9422495797/9422495799.

MALEGAON

725.## MALEGAON AUTO CENTRE (3721), NEAR MOTI BAUG NAKA,MALEGAON PIN-423203 PH :0255-9371376911/02554-255011.

MOAGNAD

726.## KRUPA SERVICES (574), KRUPA
SERVICES,AT: NANORE,POST:
MANGAON,DISTT-RAIGAD PIN-402104
PH: 263363.

MIRAJ

727.## ASHOK AUTOMOBILES (5672), C.S. NO:70-C,CHH - SHIVAJI ROAD,MIRAJ,DISTRICT - SANGLI,MAHARASHTRA PIN-416410 PH:0233-2375961.

MUMBAI

728.## AUTO SERVICES (529), KINO'S CIRCLE,MATUNGA, MUMBAI (MHRS)PIN-400019 PH: 022-24141031/2414187/65804809. 729.## HIND AUTOMOBIES (550), 29 SEWREE WADALA ROAD,KINO'S CIRCLE,MUMBAI (MHRS)PIN-A00019

 PH: 022-24096680/24096544/24037922.
 RAVI AUTOMOBILE SERVICES (553), GHATKOPAR-MAHUL ROAD, TILAK NACAR MI IMBAI PIN-A0708A

:022-25227282/32929767/25221656/65752531/ 25293582.

31.** ZENITA AUTO WORKS (525), BEHIND H.P.PETROL PUMP,NAV PADA MAROL NAKA,ANDHERI (E),MUMBAI (MHRS.)PIN-400059

:022-28322659/28200653/28390850/28218906. 32.* ASHA AUTO SERVICE (570), I.O.C. DEALER.L.B.SHASTRI

> MARG,KURLA,MUMBAI PIN-400070 PH :-26505338, 26506088, 9820727091.

733.## SURAJ SANGHI SERVICE STATION (438), DR. ANNIE BESANT ROAD,WORLI,MUMBAI PIN-400018 PH :-24931704, 24924754.

.** SHAMAL MOTORS (1154), VAITY WADI.BHANDUP-SONAPUR ROAD.B

WADI,BHANDUP-SONAPUR ROAD,BHANDUP (WEST),MUMBAI PIN-400078 PH:022-25665266/64500500/25666465.

PH:022-25665266/64500500/25666465.

5.** CHAMUNDA MOTORS (P) LTD. (520), RAM

BAUG NEAR SUNDAR DHAM, OFF S.V.ROAD, BORIVILI (W), MUMBAI PIN-400092 PH: 022-28635677/28090888/28616701.

.## BANAI AUTO CARE (6053), OPP. MAROL POLICE CAMP, NEXT TO AAREY CHECK POST, MAROL MAROSHI ROAD, MUMBAI

PIN-400059 PH:022-28349816/28349817.

737.## JAGMAN MOTORS PVT. LTD. (1556), NEXT
TO HOTEL ROYAL SALUTE, ANDHERI KURLA
ROAD, SAGBAUG, MUMBAI PIN-400059
PH 1029-298025901/29504983

PH: 022-2850/2950/28504983.

38.** POWAI AUTO WORKS (1660), OPP. PANCH KUTIR BUS STOP,19 ADI SANKARACHARYA MARG.POWAI.MUMBAI PIN-400076

:022-25700358/25700176/25708842/25703826.
99.** ORIX AUTO INFRASTRUCTURE SERVICES
LTD (1971), 94 MAROL INDUSTRIAL

ESTATE, ANDHERI KURLA ROAD, ANDHERI (EAST), MUMBAI PIN-400059

:022-67070100/67070221/67070216/67070222.

LAXMI AUTO WORKS (2542), PLOT NO.1041,SAYANI ROAD.PRABHADEVI.MUMBAI PIN-400025

PH :022-24308566/24378788/24321722/982030364

 SUPER AUTO SERVICE PVT. LTD. (2430), DESAI WADI JAYWANT SAWANT

ROAD,NEAR HAPPY HOME SOCIETY,DAHISAR (W),MUMBAI PIN-400068 PH :022-28930239/28927124.

2.## CHEMBUR MOTORS (2526), 31/A ANAND
NAGAR,OFF SION TROMBAY ROAD,SINDHI
SOCIETY CHEMBUR.MUMBAI PIN-400071

PH:022-25243639.

ALLIED AUTO AGENCIES (2666), 86/20 DR.

AMBEDKAR ROAD,KHAR,MUMBAI

PIN-400052 PH :022-26007066, 26498850, 26042540.

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

744.##	PRINCE SERVICE CENTER (3440), 34 GAMDEVI ROAD,SANGHANI ESTATE,GHATKOPAR (WEST),MUMBAI PIN-400086 PH :022-25001383/25001333.	753.*	AMIT SERVICE STATION (4158), NEAR NAGAPUR HIGHWAY BRIDGE,NAGAR-MANMAD HIGHWAY,NAGAPUR DIST-AHMADNAGAR,MAHARASHTRA
745.**	CARKRAFT AUTOMOBILE SERVICES PVT. LTD. (4654), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR	NAGE	PIN-414111 PH :0241-5601141/ 9822216286/2778336.
	SAI DHAM MANDHIR, MULUND (W),MUMBAI PIN-400080 PH:-25628005/6/7, 9820296924.	754.**	HASAN GARAGE (2021), MOHAN NAGAR,NAGPUR (MHRS) PIN-440001 PH:0712-2580972/533805.
746.**	DEV MOTOR CARE PVT LTD (4878), 24ABCD,GOVT. INDUSTRIAL ESTATE,HINDUSTAN NAKA, CHARKOP,	755.##	SH.0712-2300972/353003. SHREEJEE SERVICES (2027), CHANDAŁ KOTHI,SUBASH ROAD,NAGPUR PIN-440 PH:0712-2726200/72721690.
	KANDIVLI(W),MUMBAI,(MAHARASHTRA) PIN-400067 PH:022-9867444334/28625366/28082661.	756.*	SAGAR AUTOMOBILES (2667), MARUTI AUTHORISED SERVICE STATION, PLOT NEAR PETROL PUMP, WARDHA ROAD
747.**	AUTO CRAFT (4759), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG, VIKHROLI (W), MUMBAI PIN-400083 PH :022-25783586/ 55974075/9323151010.		UJJWAL NAGAR,NAGPUR PIN-440025 PH:0712-2293413/3095521/ 9422145365/9960695823.
748.**	POWAI AUTO WORKS (4966), GALI NO 14/15/16, BUILDING NO1,C WING, KAILASH INDUSTRIAL COMPLX,PARKSITE VIDHROLI	757.*	BALAJI MOTORS (3078), PLOT NO.18/27,NEAR NAKA NO1,KORADI ROAD,NAGPUR PIN-441111 PH:07120-9960634068.
749.*	(W) PIN-400079 PH :022-25173986/25173961/25173126/25173127. ST. FRANCIS AUTOMOBILES (5154), MOUNT	758.##	R. K. MOTORS (3023), 69 A V A LAYOUT,LAKADGANJ,NAGPUR PIN-4400 PH:0712-2730300/9422113088.
743.	POINSUR BORIVALI (WEST),MUMBAI,DISTRICT - MUMBAI,MAHARASHTRA PIN-400103 PH :022-29851206/28934325.	759.**	SAGAR AUTOMOBILES (4971), A-15/28.MIDC,BUTTIBORI,NAGPUR PIN-440025 PH:-9422145365/8552082080.
750.##	PH 1/02-2695 (200/269343/26). CHHAGAN MITHA (6230), CORNER OF WARDEN ROAD & PEDDAR ROAD,POST BOX NO. 6521,MUMBAI,MAHARASHTRA PIN-400026	760.##	M S SERVICES (5339), 14 HILL ROAD,GANDHI NAGAR - NAGPUR,DISTF - NAGPUR,MAHARASHTRA PIN-440010 PH:-9373422822.
	PH :022-66578384/5/6/7.	NANE	ED
751.**	SHAH CAR CARE (5436), SADANWADI.LAKE ROAD.OFF LBS MARG,NEAR KRISHNA	761.##	MARUTI CARES AND COLOURS (5778), LABH NAGAR.BACK SIDE OF SURABH

MURBAD

752.## JAYDEEP AUTOMOBILES (5676), MURBAD KALYAN HIGHWAY(NH-222),NEAR NAVDURGA HOTEL,AT-PO-TAL:MURBAD,DISTRICT-THANE,MAHARASH TRA PIN-421401 PH:02524-682260/9423370219/9226840777.

MUMBAI, (MAHARASHTRA) PIN-400078

PH:022-25961831/32/33/9819159447.

TALKIES, DISTRICT -

NAGAPUR

40018 F NO.3

0008

TRICT

HOTEL.NANDED.DISTRICT-NANDED.MAHAR ASHTRA PIN-431605 PH:-9225751444.

NANDURBAR

MAULEE MOTORS (4736), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD,NANDURBAR,MAHARASHTRA PIN-425412 PH:02362-9822377931/261300.

763.## RACCA SERVICE (3720), (MR. RS RACCA), RACCA COLONY, SHARANPUR ROAD,NASIK PIN-422002 PH:0253-2570837/8796939960/8087924594 764.## SAI AUTOMOBILES (3722), SAPAT COMPLEX,OPP. PRESS HOSPITAL,NASIK ROAD, NASIK ROAD PIN-422101

PH:-9822027931/2462300. HITECH AUTO SERVICES (4451), RAMESHWAR NAGAR, OPP NAVSHYA GANPATI,GANGAPUR ROAD,NASIK PIN-422005 PH:0253-9225142471.

NAVI MUMBAI

BOSS (265), AT/P.O. -TURBHE, SECTOR-22, VASHI, NAVI MUMBAI PIN-400705 PH:022-27831354/27831358.

CHETAN MOTORS (3143), PLOT NO.45/B SECTOR 19/A,OPP. GATE NO.2 DANA BAZAR, BEHIND SHAMIR VITHAL CO-OP BANK VASHI,NAVI MUMBAI PIN-400705 PH :022-27840564/27840565/27841566. 768.## C G MOTORS (4138), PAPR-73, TTC

INDUSTRIAL AREA, RABALE, OPP RABALE RAILWAY STATION, THANE- BELAPUR ROAD, MAHARASHTRA PIN-400701 PH:-9821695355.9820933338.

NIQDI

769.## SHALU AGENCY (2872), 516/27 PRADHIKARAN, NIGADI, PUNE PIN-411044 PH:020-7652631/7652966.

NIPHAD

770.## SHRI SAI SERVICE STATION (4452), NIPHAD AURANGABAD ROAD,NIPHAD,NASIK,MAHARASHTRA PIN-422101 PH:02550-240320/240321.

771.## SHREE SWAMI SAMARTH SERVICES (5874), 311/1,OPP. H.P. PETROL PUMP,NH-9,OMERGA,DISTRICT-OSMANABA D,MAHARASHTRA PIN-413606 PH:02475-252199/9422935656.

PACHORA

772.## POOJA MARUTI SERVICE CENTRE (5564). PLOT NO 75.PREM NAGAR .KRISHNA PURI SHEVAR PACHORA DISTRICT -JALGAON, MAHARASHTRA PIN-424201 PH:02596-9890320803/2596247104.

PALGHAR

SIDDHI MOTORS (5553), THEMBHEDE BOAD GANESH KUND PALGHAR, DISTRICT -THANE MAHABASHTBA PIN-401404 PH:02525-256406/09890609107.

PANVEL

774.** IDEAL AUTOMOBILES (2279), IDEAL HOUSE, PLOT NO-83, PANVEL INDUSTRIAL CO OP ESTATE LTD. PANVE, DISTRICT -RAIGAD,(MAHARASHTRA) PIN-410206 PH:022-27451607/2250/31508709.

GANGAL MOTORS (2934), PLOT NO.:125-127,SECTOR-1S,ROAD NO-5,BEHIND CIDCO GODOWN-NEW PANVEL, DISTRICT -RAIGAD,(MAHARASHTRA) PIN-410206 PH:022-27460525.

PARBHANI

776.## SAI SERVICING CENTRE (5252), P7/5 MIDC, PARBHANI, MAHARASHTRA PIN-431401 PH:02452-249099/9326147460.

MARUTI CAR SANJIVINI (5278), SURVEY NO 5/2.SUTARWADI SUSBOAD PASHAN DISTRICT -PUNE, PUNE, MAHARASHTRA PIN-411021 PH:-9996073360.

PATHARDI

SAGAR MOTORS (5979), OPP, TEHSIL KACHERI.NAGAR ROAD.TALUKA. PATHARDI, DISTRICT-AHMEDNAGAR, MAHAR ASHTRA PIN-414102 PH:0241-2429349/9822197969.

PEN

779.## NAVNATH AUTO (5677), OPPOSITE RAMWADI.S.T. STAND.NATIONAL HIGHWAY-17 TAI PEN,DISTRICT-RAIGAD,MAHARASHTRA PIN-402107

PH:02143-255948.

PHALTAN

780.## VORA AUTOMOTIVE (2436), SHINGNAPUR ROAD, KOLKI, PHALTAN PIN-415523 PH:02166-23562/9422606296.

PIMPALGAON

ASHWAMEDHA AUTO (2435), "ASHWAMEDH",MUMBAI-AGRA HIGHWAY, PIMPLEGAON (B), DISTT. NASHIK PH:02550-9766600064/8275015640.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

782.** SAINATH AUTOMOBILES INDUSTRIES (1569), SURVEY NO.36 PLOT NO.1,VADGAON KHURD SINHAGAD ROAD,NEAR GREEN FIELD HOTEL,PUNE PIN-411041

PH:-9890166886.
SANTOOR CAR CARE (2053), ASHOK PLAZA,32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE PIN-411014

PH:020-6687799.

784.* APPU SERVICE STATION (4927), BG/SEI 11/10.NEAR TELEPHONE EXCHANGE,MIDC, BHOSARI,PUNE (MAHARASHTRA) PIN-411026

PH :020-9422005332/27123838.
785.## APPU AUTOMOBILE (5029), MARUTI

AUTHORISED REPAIR STATION,#81.SR NO 164. TALAWAD ROAD,KANBAY ROAD.TRIVENI NAGAR,AHARASHTRA PIN-412114 PH -:9821017595

786.* ATHARVA CAR SERVICES (5161), GUJRATH COLONY,SARAF LANE,NEAR VANAZ COLONY,KOTHRUD,PUNE,MAHARASHTRA PIN-411038

PH:-9960690751/9960690761.

787.* MANAS AUTOMOTIVE (5443), SURVEY NO 2/4 PARRANKUTI.LANE NO.1.,KARVE NAGAR - PUNE,DISTRICT - PUNE,MAHARASHTRA PIN-411052 PH :020-65002239/9822043007.

788.* MARUTI CARE POINT (3337), S. NO 273/5,BANER ROAD,OPP. VARSHA PARK,BANER,PUNE,MAHARASHTRA PIN-411045

PH:020-5663231.

RAHURI

789.* ANAND MOTORS (4152), IN FRONT OF ASHWINI HOTEL,NAGAR MANMA ROAD,A/P RAHURI DIST-AHMADNAGAR.MAHARASHTRA PIN-413722

PH:02426-235662/9822759180/9822159180.

RAVER

790.## RUCHI MOTORS (2631), MARUTI
AUTHORISED SERVICE
STATION,RAVER, DISTT:
JALGAON,(MAHARASHTRA) PIN-425508
PH 102584-0423188307/9423974064/250300

ROHA

791.* AMIT MOTORS (4972), NANA SHANKAR SHETH ROAD,ROHA,DISTRICT - RAIGAD,MAHARASHTRA PIN-402109 PH :02194-9422096149/233290.

BAKURI

792.## SHREE SAI SERVICE CENTRE (5344),
NAGAR-MANMAD ROAD .GODAVARI,HOTEL
JEWEL .PO:SAKURI ,TAL:RAHATA,DISTRICT
- AHMEDNAGAR,MAHARASHTRA PIN-422608
PH :9970741777.

SANGAMNER

793.* SAI MOTORS (2840), NEAR GULEWADI PHATA, PUNE NASIR ROAD, SANGAMNER DIST. AHMEDNAGAR, (MHRS.) PIN-422608 PH :02424-227513.

SANGLI

794.** ASHOK AUTOMOBILES (3723), 595/B,M.G.ROAD,SANGLI PIN-416416 PH :0233-375961/9823053596.

795.## BALAJI AUTO SERVICE (1564), PLOT NO.43,GOLDEN PARK,BYPASS ROAD,SANGLI, DISTRICT-SANGLI,MAHARASHTRA

DISTRICT-SANGLI,MAHARASHTRA PIN-416416 PH:-9822106126.

796.* AWATI MOTORS (4772), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI, MAHARASTRA PIN-416415 PH: 9422407284.

SATANA

797.## PATHAK MOTORS (5037), YASHWANT NAGAR, TAHARABAD ROAD, SATANA, DISTRICT -NASIK, (MAHARASTRA) PIN-411014

PH:-9890216257.

798.## SIDDHI AUTOMOBILES (5464),
294/A.DEGAON PATA SATARA,RAHAMTPUR ROAD.MIDC
SATARA,DISTRICT SATARA (MAHARASTRA) PIN-415004

PH -- 9860639368

SAWANTWADI

99.* VENKATESHA AUTO CARE (1659), PLOT NO.21 MUMBAI GOA HIGHWAY, KOLGAON-BHOM, SAWANTWADI, MAHARASHTRA PIN-416510 PH 102363-274164/271533/J9423304639

SHAHADA

800.## MATOSHREE AUTOMOBILES (2870), NO.558 SHAHADA DHONDAICHA ROAD,TAL. SHAHADA,NANDURBAR

DISTT.,(MAHARASHTRA) PIN-425409

:02565-226030/227340/9890530937/942172623 0/9403801484

SHIRDI

801.## SHREE GANESH AUTO CARE (4268), POST SAKURI,TALUKA RAHATA,AHMEDNAGAR PIN-423107 PH: :02423-243192/ 243450/9422726052.

SHOLAPUR

802.** BALAJI MOTORS (1930), 8536 B/1 MURARJI PETH,OPP. OLD PUNE NAKA OFFICE,SOLAPUR PIN-413002 PH :-629696/ 629595/98231111110.

SHRIRAMPUR

803.* G.K. MOTORS (2871), K.V. ROAD, SHRIFAMPUR, DISTT. AHMEDNAGAR PIN-413709 PH: :952422-8446222297.

THANE

904.* PATRICIA AUTOMOBILES (529), 34 AMAR GION SER.& OFFICE COMPLEX,AGRA RD.,THANE (MHRS) PIN-400601 PH: 022-25471105/9987175866.

805.** THANAWALA MOTOR AGENCY (3724), DHIRAJ BAUG,L.B.S. MARG,NEAR HARINIWAS CIRCLE,THANE PIN-400602 PH :022-673002222.

06.** STERLING MOTOR GARAGE (555), OPP. RAVI STEEL INDUSTRIES, 2ND POKHRAN ROAD, THANE PIN-400601 PH .022-25890325/ 25890892/25891981/9224019485.

807.* TOP GEAR AUTOMOBILES (4840), SAI NAGAR,GHODBUNDER ROAD,KASARVADAVALI,THANE (W)

ROAD, KASARVADAVALI, THANE (W) PIN-400601 PH:022-64509201/64526472. 808.* SEAN MOTORS (5377), DONTALAV -

VATAR,(W),VIRAR SATPALA
ROAD,TAL-VASAI,
DISTT-THANE,MAHARASHTRA PIN-401301
PH :-9324003123.

ULHASNAGAR

9.* MODERN CAR CARE (3260), 171/2.RRV INDUSTRIAL AREA, BEHIND SAI BABA MANDIR.

SHANTINAGAR,ULHASNAGAR,MAHARASHT RA PIN-421003

PH:0251-2732027/9322542027/9819692027. CHIMAN AUTOMOBILES (3845), NEAR KAJAL PETROL PUMP,BALANI

COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR PIN-421003 PH:0251-2557790/2561627.

URAN

SAI AUTOMOBILES (5665), STATE HIGHWAY NO.56,NEAR JASAI NAKA,JASAI VILLAGE, URAN,DISTRICT - RAIGAD,MAHARASHTRA PIN-410206 PH:-64213533.

VADA

812.## SAI MOTORS & SERVICE CENTRE (5675), AT-GANDRE,PO-TUSE,TAL-VADA-421303,DIS TRICT - THANE,MAHARASHTRA PIN-421303 PH: -9270005533.

VITA

813.## SONA AUTOMOTIVE (5671), YASHWANT NAGAR,NEAR WATER TANK,ROAD NO.10 -VITA,DISTRICT - SANGLI,MAHARASHTRA PIN-415311 PH:-9960708270.

WAI

ADITYA AUTO SERVICE (4271), WAI SATARA ROAD,WAI,SATARA DIST. PIN-412803 PH:02167-9423971005.

/ARDHA

5.## BHARAT MOTOR (1631), NAGPUR ROAD,NALWADI,WARDHA,MAHARASHTRA PIN-442001

PH :07152-9881588388

WARORA

816.## ROHIT AUTOMOTIVE (5873),
NAGPUR, CHANDRAPUR
ROAD VINAYAK, LAYOUT, TILAK WARD,
WARORA, DISTRICT-CHANDRAPUR, MAHARA
SHTRA PIN-442907
PH: 07176-2810999226118165.

YAVATMAL

7.## RAMESH MOTORS (2024), GARDEN ROAD,YAVATMAL,MAHARASHTRA PIN-445001 PH :07232-243330/246660.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

818.## M.S. MOTORS (460), AMRAVATI ROAD HIGHWAY,LOHARA,YAVATMAL PIN-445001 PH :-249207/651565.

YEOLA

819.## BIJASANI AUTOMOTIVE (3041), NAGAR-MANMAD ROAD, YEOLA, DIST. NASIK (MAHARASHTRA) PIN-452005 PH: 02559-09923204225/9423185025.

MANIPUR

IMPHAL

820.## BORDIN MARUTI GARAGE (4879), MOIRANGKHOM,LOKLAOBUNG,IMPHAL,MA NIPUR PIN-795001 PH :0385-9436023659/2455460/2536551.

SENAPATI

821.## KOMUO MARUTI WORKS (4644), NH-39,TAPHOU RIKHUMAI,SENAPATI,MANIPUR PIN-795106 PH -9436072671/9436422938.

MEGHALAYA

TURA

822.## MULTI MOBILE PRECISION (3222),
OPP.MECOFED,CENTRAL GODOWN,NEW
JAIL ROAD ARAI MILE,TURA PIN-794001
PH :03651-8974037020.

MIZORAM

CHAMPAI

823.# IRDIV-TC AUTO WORKS (5744), SVENTH
DAY TLANG, ZOTLANG ROAD, NEW
CHAMPHAI-CHAMPHAI, DISTRICT-CHAMPHAI
,MIZORAM PIN-796001
PH :9862405715.

LUNGLEI

824.## LAWMA ENGINEERING WORKS (3125), A O C SQUARE,LUNGLEI,MIZORAM PIN-796701 PH :0372-2325035.

NAGALAND

DIMAPUR

825.** ERJO MOTORS (4871), 123 BANK COLONY,DIMAPUR,NAGALAND PIN-797112 PH :03862-231888.

ORISSA

ANGUL

826.## ZEET AUTOMOBILES (1573), NALCO NAGAR,KANDASAR,ANGUL,ORISSA PIN-759145 PH:06764-221885/9437065053.

BALANGIR

827.## ASHIRWAD AUTOMOBILE WORKS (3177), DAMJI GARAGE,THIKADARPARA,BALANGIR PIN-767001 PH:06652-233345/231896.

BALESHWAR

828.## AUTO CARE (432), AT -AZIMABAD, BALASORE, BALASORE PIN-757001 PH :06782-645321. 9437051944/9437285606.

 TEKNO INDIA (3666), D-2/9 INDUSTRIAL AREA,O.T. ROAD,BALASORE,(ORISSA) PIN-756003 PH: 06782-266879/9437953595/9861034990.

BARBIL

830.## INDU MOTORS (3241), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL, (ORISSA) PIN-758035 PH 106767-276158/ 276727/9337383947

BARQARH

831.## CARSCAN (1164), PLOT - 1/1 INDUSTRIAL ESTATE, RAILWAY STATION ROAD, BARGARH PIN-768028 PH : 06646-232820.

BHUBANESWAR

INDO JAPAN SERVICE (4936), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE,PO: PATRAPADA,BHUBANESHWAR,ORISSA PIN-752019 PH :0674-2470033. 6545624, 9861124660.

CUTTACK

9861095444

833.* DURGA SERVICE CENTRE (427), NEAR PALAMANDAP, BADAMBADI,PO -ARUNODAY MARKET,DISTT - CUTTACK PIN-753012 PH:0671-2311261/2315762.

I.* AUTO MATES (426), MADHUPATNA, CUTTACK PIN-753010 PH:0671-2311646/2322646 /2322646

DHENKANAL

835.## ANAND AUTOMOBILES (5449), ANAND NAGAR, IN FRONT OF TARINI MANDIR, DISTRICT - DHENKANAL, (ORISSA) PIN-759001 PH:06762-9437414972/243272.

JHARSUGUDA

85/9437065053.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

836.## AUTO MECHANIKA (2638), S.H.-10 BEHERAMAL, JHARSUGUDA, ORISSA PIN-768203

PH:06645-273510/9040280001.

837.## GANAPATI AUTOMOBILES (3178), B.
SITAPUR,PARALAKHEMUNDI,DIST.
GAJAPATI,(ORISSA) PIN-761200
PH:06815-322765/9437140023.

PURI

838.## URMILA MOTORS (5040), HERA GOHIRI SAHI CHOWK, PURI -1,DISTRICT - PURI,(ORISSA) PIN-752001

PH:06752-223820/9776008748/9861110745. **SAMBALPUR**

839.# ANITA AUTO CARE (4834), SALIA BAGICHA,LIONS CLUB ROAD, KUMBHARPARA, SAMBALPUR (ORISSA) PIN-768001 PH: 1663-9437068044/2403044/ 9861248403

SEMILIQUDA

KARAIKAL

840.## ASHUTOSH MOTORS (5035), MAIN ROAD.
NH-43, SEMILIGUDA, DISTRICT-KORAPUT, (O
RISSA) PIN-764036
PH : 919437405417/9939639257.

PONDICHERRY

841.## MARUTI TECH (2669), NO.1,

AKKARAIVATTAM,NAGAORE MAIN ROAD,OPP TO ONGC,KARAIKAL,DISTRICT-KARAIKAL,PON DICHERRY PIN-609604 PH :04368-227101/9842383125.

PONDICHERRY

842.** S D K MOTORS (471), PLOT NO.12,100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY PIN-605004 PH :0413-2358540/9843045689.

43.* A.P.P. MARUTI MOTORS (2670), PLOT NO.6 GUNDU SALAI ROAD,NATESAN NAGAR,NEAR 100 FEET ROAD,PONDICHERRY PIN-605005

PH:0413-2240844/9894059004. 844.## MARUTI MISSION (5067), 60 RAGAVENDIRA NAGAR. KAMARAJ

SALAI,THATTANCHAVADY PONDICHERRY,TINDIVANAM ROAD,PONDICHERRY PIN-605009 PH:0413-2241100/9786589000.

PUNJAB

AHMEDGARH

845.## GAHIR AUTOMOBILES (2877), LUDHIANA MALER KOTLA ROAD,VILL. GOPALPUR CITY,AHMEDGARH,(PUNJAB) PIN-141001 PH :01628-9878854118.

AJNALI

846.# VISHWAKARMA MOTORS (5666), NEAR VIMAL DHARAMKANTA - AJNALI,DISTRICT -FATEHGARH SAHIB,PUNJAB PIN-140406 PH : 9814528084.

AMLOH

847.## BINDRA MOTORS (5844), NEAR DESH BHAGAT COLLEGE SONTI,AMLOH,DISTRICT-FATEH GARH SAHIB,PUNJAB PIN-147301 PH :-9814882000.

AMRITSAR

** KAPOOR'S KAR KARE (737), I/S MAHA LAKSHMI,CALICO PRINTING MILLS,OLD JAIL ROAD,AMRITSAR(PUNJAB) PIN-143001 PH:9814213113.

849.* SAGGU SERVICE STATION (733), HIDE MARKET, AMRITSAR (PUNJAB), AMRITSAR (PUNJAB) PIN-143001

PH :-9888005610.

HANSON AUTOMOBILES (1722), MAQBOOL
PURA,G.T. ROAD,AMRITSAR PIN-143001
PH :-98151676898427010988

851.** JACKSON LUBRICANTS (364), 16 COURT ROAD,NEAR RAVI GAS AGENCY,AMRITSAR PIN-143001

PH:-9814299944.

BANUR

2.## AMRIK SERVICE STATION (2433), PATIALA ROAD,BANUR,DISTT. PATIALA (PUNJAB) PIN-140601 PH -9815591225

BARNALA

3.* PUNJAB MOTOR GARAGE (6222), DHANAULA ROAD,BARNALA (PUNJAB),BARNALA (PUNJAB) PIN-148101 PH :-9876130360. GAURAV MOTORS (4962), DHANAULA ROAD RARNAI A DISTRICT

SANGRUR,PUNJAB PIN-148101 PH:01679-9317512916.

BHADSON

5.## FRIENDS MOTORS (2233), NABHA ROAD,BHADSON,DISTT. PATIALA,(PUNJAB) PIN-147202 PH:9815700778.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

BHATINDA

856.## SUPER AUTOMOBILES (6232), TINKONI,GONIANA ROAD,BHATINDA

PH:0164-9814036163.

MODERN MOTORS (6234), OPP. T.V. TOWER, MANSA ROAD, BHATINDA

PH:-9814177075.

KRISHNA AUTOS (4571), 40 FEET NAMDEV ROAD,NEAR DELHI ESCORTS HEART HOSPITAL, BATHINDA, PUNJAB PIN-151001 PH:0164-9888671810

BUDHLADHA

859.## JINDAL AUTOMOBILES (2147), NEAR P.S.E.B., BHIKHI ROAD, BUDHLADA, DISTT. MANSA PIN-151502 PH:-9815516964.

DERABASSI

860.## BINDAL AUTOMOBILES (1248), CHANDIGARH AMBAI A BOAD PARAS BAM MARKET DERA BASSI PIN-140507 PH:01762-9914449711.

DHURI

861.## SHIV MOTORS (1962), NEAR OCTROI POST, SANGRUR ROAD, DHURI PIN-148024 PH:-9872851068.

DINANAGAR

862.## D.S. MARUTI SERVICE STATION (3333), G.T. ROAD.DINA NAGAR.DIST. GURDASPUR.(PUNJAB) PIN-143531 PH :-9814695433

DIRBA

863.## PENTAGON MECHANICAL WORKS (2564), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB) PIN-148035 PH:01672-242525.

DORAHA

864.* FATEH MOTORS (2048), G.T. ROAD, DORAHA, (LUDHIANA) PIN-141421

FAZILKA

865.## BAHL MOTORS (6229), ABOHAR ROAD, FAZILKA PIN-152123 PH:01638-9888620550.

FEROZEPUR

866.## SUTLEJ AUTOMOBILES (3568), G.T. ROAD, FEROZEPUR CANTT, (PUNJAB)

PH:01632-9815144790.

867.## BOBB MOTORS (4378), NEAR BSF COLONY, MOGA ROAD, FEROZEPUR CANTT

PH:01632-9814090331.

PH:01637-9814730286.

GIDDERBAHA

JIWAN CAR CENTRE (3442), BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA, DIST. MUKETSAR (PUNJAB) PIN-152101

GOINDWAL SAHIB

869.## DAS MOTORS (3537), KAPURTHALA CHOWK, GOINDWAL SAHIB, DISTT. AMRITSAR, (PUNJAB) PIN-143429 PH:01859-9914699121.

GORAYA

870.## GORAYA AUTOMOBILES (4434), G.T. ROAD, GORAYA, DISTT PHAGWARA, PUNJAB PIN-144409 PH:01827-9814002617.

QURDASPUR

VIJAY SERVICE STATION (749), NEAR RAILWAY CROSSING, PATHANKOT ROAD.GURDASPUR.(PUNJAB) PIN-144001 PH:-9814437637.

HOSHIARPUR

872.## JOGINDER MOTORS (2268). BYE PASS TANDA ROAD.HOSHIARPUR PIN-146001 PH:-9216519763.

JAGRAON

JALANDHAR

873.## DHALIWAL AUTOMOBILES (2035), NEAR AJANTA PETROL PUMP,G.T. ROAD, JAGRAON DISTT. LUDHIANA,(PUNJAB) PIN-141003

PH:01624-9814318600.

874.** KAAR KARES (725), G.T.ROAD, JALANDHAR, (PUNJAB) PH:0181-231938.

PUNJAB MOTOR GARAGE (1575), HMV CHOWK, G.T. ROAD, JALANDHAR PIN-144008 PH:-9317512360.

KAPOOR MOTOR GARAGE (1649), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY PIN-144008 PH:-9815543853.

877.## CITY POINT SERVICE STATION (4528). AVTAR NAGAR ROAD, BEHIND T.V. CENTRE.OPP HOTEL REGENT PARK, JALANDAHR PIN-144008 PH:0181-9888382255.

KAPURTHALA

878.## T.S. WALIA MOTORS (267), MANSOORWAL, JALLANDHAR ROAD, KAPURTHALA PIN-144601 PH:-9357211525.

AVTAR AUTO TECH (5329), KANJLI ROAD, NEAR OCTROI, KAPURTHALA, PUNJAB PIN-144601

PH:-9888262026

880.## VISHWAKARMA MOTORS (3335), PRAKASH ICE FACTORY, CHANDIGARH ROAD, KURALI, (PUNJAB) PIN-140103

PH:01888-9814273873.

LALRU

KURALI

881.## VIKAS MOTORS (2777), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB PIN-147001 PH:-9216069888.

LUDHIANA

PUNJAB AUTO CENTRE (6221), OPP TELEPHONE EXCHANGE, BHARAT NAGAR CHOWK, LUDHIANA PIN-141001 PH:-9855117003.

REEHAL AUTOMOBILE SERVICES (1176), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA

PIN-141010

PH:0161-2680309. VISHAL AUTOMOBILES (1262), G.T. ROAD, DHOLEWAL, LUDHIANA PIN-141003 PH:-9815206060.

SATNAM MOTOR WORKSHOP (4533), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA PIN-141001 PH:0161-9855228591.

STAR AUTOS (4650), JALANDHAR BY PASS,G.T. ROAD,LUDHIANA PIN-141003 PH:0161-9216844220.

MALOUT

887.## DELHI MOTORS (6225), TINKONI CHOWK, BHATINDA ROAD, MALOUT PIN-152107 PH:-9814874061

MANDI GOBINDGARH

888.## NATIONAL MOTORS (1070), G.T. ROAD.NEAR P & S BANK,MANDI GOBINDGARH PIN-147301 PH:-9876181801.

889.## RAJ AUTOMOBILES (2162), NEAR N.M. COLLEGE, MANSA, (PUNJAB) PIN-151505 PH:01652-9872679591

MOGA

890.* GURU NANAK MOTOR REP. WORK (732). G.T.ROAD, MOGA, (PUNJAB) PIN-142001 PH:-9914121387.

MOHALI

MOHALLMOTORS (756), C-55 INDUSTRIAL AREA,PHASE-VI,S.A.S. NAGAR,MOHALI PIN-160055

PH:-9501506065 SETHI MOTORS (4742), PLOT NO.

E-159, INDUSTRIAL AREA, PHASE-7,MOHALI,PUNJAB PIN-160055

PH:-9814307002. UNIPOINT (5043), PLOT NO, 593, INDUSTRIAL

AREA PHASE-IX. MOHALI, DISTRICT -MOHALI, (PUNJAB) PIN-160055

PH:-9316108300. BENZ AUTO SCAN (5734), E-153, PHASE

7,INDUSTRIAL AREA -MOHALI, DISTRICT-MOHALI, PUNJAB PIN-160059

PH:0172-9815654303. **MOONAK MANDI**

GOYAL SERVICE STATION (6034), TOHANA-SURJAN, BHAINI ROAD, MOONAK MANDI,DISTRICT-SANGRUR,PUNJAB PIN-148033 PH:-08427346677.

896.## SONY MOTOR PALACE (1077), SIRHIND ROAD.MORINDA PIN-140101 PH :-9818612477

NEW MODERN AUTOMOBILES (4437), G.T. ROAD, MUKERIAN, PUNJAB PIN-144211 PH:01883-9463292013.

MARSHAL SALES CORPORATION (5251), PATHANKOT RAOD. NEAR RADHA SOAMLSATSANG GHAR -MUKERIAN DISTRICT -HOSHIARPUR, PUNJAB PIN-144211 PH:-9872335923.

MUKTSAR

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

899.## MALWA MARUTI CENTRE (4764). KOTKAPURA ROAD, MUKTSAR, PUNJAB PIN-152026 PH:01633-9914133987. NAKODAR

900.## MEHTA MOTORS (3531), KHADDAR BHANDAR ROAD, NAKODAR PIN-141310 PH:-9815600082.

PATIALA

901.## RAJINDRA MOTORS (4935), C-177.INDUSTRIAL FOCAL POINT PATIAL A PLINLIAR PIN-140401 PH:0175-9316200335

902 ** PARAS MOTORS (4778), PLOT NO. 25-A,NEAR HOTEL FLYOVER FACTORY AREA.PATIALA.PUNJAB PIN-147001 PH:-9814089861.

PATTI

903.## ANU AUTOMOBILE (2747), AMRITSAR ROAD NEAR BADHA SWAMI SATSANG PATTI DISTT. AMRITSAR (PUNJAR) PIN-143001 PH:01851-9876342843.

PHAGWARA

904.## SWAMI MOTORS (3774), (PAMMI W/SHOP) OPP, B.N. DUGGAL PETROL PUMP G.T. ROAD PHAGWARA DIST. KAPURTHALA PIN-144401 PH:-9815107989.

905.## VIVA MOTORS (4740), G.T. ROAD, PHAGWARA, DISTRICT-KAPURTHALA, PUNJAB PIN-144463

PH:01824-9814310021.

PHILLAUR 906.## DHANJU MOTORS (1647), NURMEHAL ROAD PHILLAUR DISTT, JALANDHAR PIN-144410

PH:-9814454963.

HI-TECH AUTOMOBILES (4945), VILL NATHPUR BATALA ROAD, QADIAN, DISTRICT-GURDASPUR, PUN JAB PIN-143516 PH:-9464066479.

RAIKOT

NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB) PIN-141109 PH:01624-9814265791.

908.## RANA SUPREME MOTOR GARAGE (3732),

RAJPURA

909.## NOOR MOTORS (3045), PATIALA ROAD,RAJPURA,(PUNJAB) PIN-140401 PH:01762-9855421786. RAMPURAPHUL

910.## VIRDI MOTOR GARAGE (3046), BARNALA

ROAD RAMPLIRAPHUL DISTT BATHINDA.(PUNJAB) PIN-151103 PH:01651-9815472217. 911.## BALAJI AUTOMOBILES (4443), BARNALA

ROAD RAMPLIRA PHUL DISTT RHATINDA PLINJAR PIN-151103 PH:01651-9815443444

SAMANA

912.* CITY MOTORS (1867), P.B.NO.11,MAIN BOAD SAMANA DISTT, PATIALA (PUNJAB) PIN-147101 PH:01764-9814864180.

913.** RAKESH MARUTI SERVICE (6325), JIND -DELHI ROAD.NEAR E.S.I. DISPENSARY.SANGRUR PIN-148001 PH:01672-9814064202.

914.## SANGRUR MARUTI CENTRE (1632), PATIALA ROAD, OPP, MILITARY CAMPUS, SANGRUR, (PUNJAB) PIN-148001

PH:-01672-232340.

SIRHIND 915.## BADRI DHAM CAR SERVICE (1062), G.T. ROAD.SIRHIND PIN-140406

PH:-9417045975. MALHOTRA MOTORS (4657) OPP INCOME TAX OFFICE SIRHIND DISTT FATEHGARH SAHIR PUNJAR PIN-140406

SULTANPUR LODHI

917.## HANDA MOTORS (2776), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHAI A (PUNJAR) PIN-144626 PH:01828-9814213113.

PH:-9815844008/500600

918.## SUNAM AUTOMOBILES (3924), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SANGRUR PIN-148028 PH:-01676-3026118.

TANDA

919.## MALWA AUTO CARE CENTRE (2073), G.T. ROAD BY-PASS,TANDA,DISTT. HOSHIARPUR, (PUNJAB) PIN-146001

TARN TARAN

920.## GURMEET MOTORS (4757), CHABHAL KHURD, TARN TARAN, DISTRICT-AMRITSAR, PUNJAB PIN-143001 PH:-9356115101. ZIRA

921.## NEW AUTOMOBILES (5477), NEW TALWANDI

ROAD, ZIRA, DISTRICT - MOGA, PUNJAB PIN-142047 PH :01682-9463240231

RAJASTHAN

ABU ROAD

922.## UNIQUE MOTORS (4923), MOUNT ROAD, AKRABHATTA, ABU ROAD, (RAJASTHAN) PIN-307026 PH:02974-228414/9929177781.

923.## ASHOK AUTOMOBILES (1121), BYEPASS ROAD, PARVATPURA, IND. AREA, AJMER (RAJASTHAN) PIN-305001

PH:0145-2695233/2695076.

ALWAR 924.## VERTEX AUTOMOBILES PVT. LTD. (1944), CHANDUKA BHAWAN, SWARG ROAD, ALWAR

PH:0144-9414640279/2700921/2371382.

PH:0144-2335733/2342117/9828233299. POOJA MOTORS (5439), POOJA MOTORS, NEAR AMARNATH PETROL, PUMP, DELHI ROAD ,MUNGSKA - ALWAR,DISTRICT - ALWAR,RAJASTHAN PIN-301001

BAGRU

926.## NARAYAN MOTORS (5272), N.H.8. AJMER ROAD- BAGRU.DISTRICT JAIPUR, RAJASTHAN PIN-302001 PH:0141-2864504/5123711.

BARMER

VEW SERVICE (1238), S-181 & 182,RIICO,BARMER,(RAJASTHAN) PIN-344001 PH:02982-223329/227339/9410158584.

BASSI

928 ## VARDHANI MOTORS (5358) NEAR NALAYA BASSI, DISTRICT - JAIPUR, RAJASTHAN PIN-304505 PH:01429-9414312552/222317.

BEHROR

929.## K.L. INTERNATIONAL AUTOMOBILES (1763), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI.P.O. KANKARDOPA.TEHSIL BEHROR DIST. ALWAR (RAJASTHAN) PIN-301701

PH:01492-221396/9414014603. BHARATPUR

930.** CLASSIC MOTORS (2348), DEEG

ROAD, KUMHER GATE, BHARATPUR, (RAJASTHAN) PH:05644-229301/9414026545.

931.* QUICK SERVICES (3473), SABUN

BHILWARA

MARG.PURAN DAS JI KI BAGICHEE.BHILWARA PIN-311001 PH:01482-226536/223456. NATIONAL SERVICE CENTER (4761), SANGANER COLONY,KOTA ROAD, BHILWARA, RAJASTHAN PIN-311001 PH:01482-329586/256146.

BHINIMAL GUBJAR MOTORS (5567), RAMSIN ROAD, OPP PRADEEP PETROL PUMP BHINMAL DISTRICT -

PH:02969-290962. BHIWADI

WHEEL-O-CITY (4246), E-7D (A) PHASE-1 NEAR BIICO CHOWK, BHIWADI, RAJASTHAN PIN-301019 PH:01493-225555/290962.

JALOR, RAJASTHAN PIN-343029

BIKANER

935 ## GENERAL ALITOMORILES (1123) RANI BAZAR BAIWAY CROSSING BIKANER (RAJASTHAN) PIN-334001 PH :0151-2200338/2549072 VISHI MOTORS (5559), PLOT NO 55(A) ,I.A.

BANI BAZAR-RIKANER DISTRICT -BIKANER BAJASTHAN PIN-334001 PH:-9829027128.

SHREE JI MOTORS (2174), OPP. KUMBHA STADIUM KHOJA GATE,BUNDI,(RAJASTHAN)PIN-323001 PH:0747-2443181/5120455

CHITTORGARH

938.## SISODIA MOTORS (5673), 31.OLD INDUSTRIAL AREA, BYE PASS ROAD, CHITTORGARH, DISTRICT -CHITTORGARH, RAJASTHAN PIN-312001 PH:01472-241476.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

CHOM	IU	951.**	SAISHA MOTORS (1764), MAIN SHIPRA	963.##	KATARIA MOTORS (2577), 9-A NEMINAGAR	KUCH	IAMAN
939.##	SHREE LAXMI MOTORS (3072), MORIJA ROAD,CHOMU,JAIPUR,(RAJASTHAN) PIN-303702 PH: :01423-207248/9828160281.	952.*	PATH,OPP. SECTOR 93,AGARWAL FARM,JAIPUR PIN-302020 PH:0141-2399196/9414454820. AMGI AUTOMOBILES (1938), AIRPORT	JAISA	VISTAR,AMRAPALI MARG,VAISHALI NAGAR,JAIPUR PIN-302021 PH :0141-2350904/9414468024/2352136.	973.##	DALUKA AUTO SALES (4565), NEAR MEENU AUTO TYRE,DIDWANA ROAD,KUCHAMAN,RAJASTHAN PIN-341508 PH:01586-220215/9414433240.
CHUR	U		CIRCLE,KOTA ROAD,JAIPUR PIN-302011 PH:-550689.	964.##	R.R. AUTOMOBILES (1473), OPP. GEETA	MAKE	IANA
940.*	ABS MOTORS (2978), JAIPUR ROAD,CHURU,(RAJASTHAN) PIN-331001 PH:01562-252333/257333.	953.##	J.K. AUTOMOBILES (2058), 38 SUSHILPURA,AJMER ROAD,JAIPUR PIN-302007		ASHRAM,JAISALMER,(RAJASTHAN) PIN-345001 PH:02992-9414150203.	974.##	GEHLOT MOTORS (454), OPPOSITE TO G.S.S,MANGLANA ROAD,MAKRANA,RAJASTHAN PIN-341505
DAUS.	A		PH:0141-9928999044/2810500.		JHUNU		PH:01588-243076/243376.
941.##	BALAJI MOTORS (4564), NEW MANDI ROAD,NEAR TRANSFORMER,DAUSA PIN-303303 PH:01427-9414273443/9828169601.	954.* 955.##	SHARP MOTORS (2032), J-3 HIMMAT NAGAR,MAIN TONK ROAD,GOPAL PURA CIRCLE,JAIPUR PIN-302004 PH :0141-2705493/2211386. LAXMI MOTORS (2576), 24 GANGA JAMUNA	965.##	DADHIMATI MOTORS (1648), OPPOSITE RSEB OFFICE,BAGAR ROAD,JHUNJHUNU,(RAJASTHAN) PIN-333023 PH: 01592-233853/9414346562.	MERT 975.##	DELUX CAR SERVICE CENTRE (3856), KUCHERY ROAD,MERTA CITY,DISTT. NAGAUR PIN-341510
DHAU	LPUR	000	CROSSING,OPP. JK PETROL PUMP,NEAR	966.##	VISHWAKARMA AUTOMOBILES (3071), HPC		PH:01590-230559/9460066196.
942.##	NARSING SERVICE CENTRE (3074), NEAR JAGDISH TALKIES,BARI ROAD,DHOLPUR,(RAJASTHAN) PIN-328001		SANGANER ROAD MANSAROVAR, JAIPUR PIN-302019 PH:014-5051892/5145892.		DEALER,RANI SATHI ROAD,JHUNJHUNU,(RAJASTHAN) PIN-333001	NAGA 976.*	LUR CLASSIC AUTOMOBILES (1179), DIDWANA ROAD, (DELHI GATE), NAGAUR. (RAJASTHAN)
943.**	PH :05642-223888/231888. NARAYAN MOTORS (3345), G.T. ROAD,DHOLPUR,(RAJASTHAN) PIN-328001	956.##	ALFA MOTORS (3347), MAHALAXMI NAGAR,OPP. HEERAPURA POWER HOUSE,AJMER ROAD,JAIPUR PIN-302006	JODH	PH:015972-32441.		PIN-341001 PH :01582-242646/243019/9414235552.
	PH :05642-240697/9414027335.		PH:0141-6457989/2297229/9829014959.	967.*	P.D. MOTORS (3340), NATIONAL HIGHWAY	NEW/	u
DIDW	ANA	957.##	TOSHNIWAL AUTOMOBILES (3475), 131 SHRI GOPAL NGAR,GOPALPURA		NO. 65,PALI ROAD,NEAR JHALAMAND CHORAYA,JODHPUR PIN-342005 PH:0291-2724485/2722495.	977.##	HEENA MOTORS (5568), NEWAI BYEPASS ,NEAR JHILAY MOAD,NEWAI,DISTRICT -
944.##	SANTOSH AUTOMOBILES (5450), SANTOSH ATUOMOBILES ,KUCHAMAN ROAD,DIDWANA,DISTRICT -	958.*	BYEPASS, JAIPUR, (RAJASTHAN) PIN-302015 PH:0141-2504296/5063836. M. R. MOTORS (4857), PLOT NO. 120-121 &	968.##	DEORA MOTORS (5353), UPPER UNDER BRIDGE .PAOTA 'C' ROAD.JODHPUR.DISTRICT -	PILAN	TONK,RAJASTHAN PIN-304021 PH:-9413063376,7877663246.
DUDU	NAGAUR,(RAJASTHAN) PIN-341303 PH:01580-9414118142/220909.		125-126,VANE VIHAR, 200FT BYE PASS,JHOTWARA,JAIPUR (RAJASTHAN) PIN-302016		JODHPUR,RAJASTHAN PIN-342006 PH :0291-9829026069/2550707.	978.##	MARUTI CARE CENTRE (3073), RAJGARH ROAD,SHANTI NAGAR,PILANI DISTT. JHUNJHUNU,RAJASTHAN PIN-333031
945.##	NEETA AUTOMOBILE (4855), C/O NEW JAIN		PH:0141-9314881528/2340196.	KALW	/AR		PH:01596-242232/244459.
	GUEST HOUSE,NH-8, JAIPUR AJMER ROAD,DUDU, RAJASTHAN PIN-302006	959.##	A 1 MOTORS (4856), D-28 MALVIYA NAGAR.,INDUSTRIAL AREA JAIPUR,DISTRICT - JAIPUR,RAJASTHAN	969.##	ROHLANIYA MOTORS (5554), KALWAR MAIN TIRHIA ,NEAR KHARBAS,NEAR PETROL PUMP. JHOTWARA ROAD,DISTRICT -	PIND(979.##	WARA RUNEJA MOTORS (5758), NH 14,0PP
JAIPU	PH :01428-513229/9828307560.		PIN-302017 PH:-9414047628.		KALWAR,RAJASTHAN PIN-302017 PH:0141-9829055634.		PATNAIK MIDWAYA,PINDWARA,DISTRICT-SIROHI,RAJ
946.##	SUPREME MOTORS (1130), A-25 ASSAM MANSION,TRANSPORT NAGAR,JAIPUR	960.##	SRINATH ENTERPRISES (4852), GOPALPURA BYEPASS.NEAR -DELHI	KISH	ANGARH		ASTHAN PIN-307022 PH :-9461221104.
	PIN-302003		KISHANGARH,HIGHWAY, JAIPUR,DISTRICT -	970.##	RADHA SWAMI AUTOMOBILES (440),	RAILE	MAGRA
947.*	PH:0141-2617030/4033993. RIGHTWAYS CO. (1131), KISHANPOLE BAZAR,JAIPUR,JAIPUR PIN-302001 PH:0141-2372436/4022436.	961.##	JAIPUR,RAJASTHAN PIN-302018 PH: 0141-9414044655/3234798. KRISHNA AUTOMOBILES (5363), B-27 SUNDAR NAGAR	КОТА	MADANGANJ,KISHANGARH,(RAJASTHAN) PIN-305801 PH:01463-244423/9252059798.	980.##	SAI MOTORS (5779), DARIBA FATEHNAGAR ROAD,BORIWAL,FILLING STATION, RAILMAGRA,DISTRICT -
948.*	SERVICE CENTRE (1139), OPP. TOURIST HOTEL,M.I. ROAD,JAIPUR PIN-302001 PH :0141-2374009/4009469.		MANSAROVAR, JAIPUR, DISTRICT - JAIPUR, RAJASTHAN PIN-302020 PH: 0141-3107748.	971.##	FRIENDS AUTOMOBILES (3679), KOTA BUNDI ROAD,NH 12,OPP. HOTEL MENAL	RAIN	RAJSAMAND,RAJASTHAN PIN-313329 PH:-9460725455.
949.**	CAR CLINIC (1141), PLOT NO.6,GIRDHAR COLONY,SIKAR ROAD,JAIPUR PIN-302013	962.##	EDEN AUTO PARTS & SERVICE CENTER (5473), CC-134 ,135, GOLE MARKET,	V0	RESIDENCY,KOTA PIN-324008 PH:0744-2372360/9828529479.	981.##	MAHALAXMI AUTO CARS (5566), OPP ROHINI NAGAR IST, PHAGU ROAD -
950.**	PH:0141-2232790/3293308. JAI SHRI RAM AUTO SERVICE CENTRE (1140), OPP. SHYAM NAGAR,AJMER		NEAR,MAA KA HOTEL, JAWAHAR NAGAR,JAIPUR,(RAJASTHAN) PIN-302004 PH:0141-2650242/9799296.	KOTP 972.##	VIKAS MARUTI (4970), NH-8,NEAR MNA GAS AGENCY GODOWN,KOTPUTLI,RAJASTHAN		RAINWAL,DISTRICT - JAIPUR,RAJASTHAN PIN-302025 PH :0141-9928089224.
	ROAD, JAIPUR PIN-302026				PIN-303108	RAJS	AMAND

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

PH:1421-9352307313.

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

PH:0141-2221241/9829055605.

982.## VIPUL SHARMA (2170), C/O N.L.
SHRIMALI BEHIND PAWAN HOTEL, EXCISE
OFFICE KI GALI, RAJNAGAR DIST.
RAJSAMAND (RAJ.) PIN-313 326
PH :02952-224108/223508.

RAWATBHATA

983.## APNA MARUTI GARAGE (5940), OPP. RAM TEKRI MANDIR,PRATAP MARKET, MAIN ROAD, RAWATBHATA, DISTRICT-CHITTORGARH,RA JASTHAN PIN-323305 PH -9461221104

SALUMBAR

984.## SWASTIK MOTORS (5974), GANESH GHANTI, BANSWARA ROAD, SALUMBAR, DISTRICT-UDAIPUR, RAJA STHAN PIN-313027 PH:02906-231269/9414759341.

SANCHOR

985.## S.M. RAO AUTOMOBILES PVT. LTD. (5878), 197, KHASARA NO 643/455, NH-15, GARDHALI,SANCHOR,DISTRICT-JALOR,RAJ ASTHAN PIN-343041 PH :2979-223740)9982214381.

SAWAI MADHOPUR

986.## MAHALAXMI AUTOMOBILES (5757), WARD NO 4,BYE PASS ROAD,SHRI MADHOPUR,DISTRICT- TONK,(RAJASTHAN) PIN-392715 PH: -9887498033.

SIKAR

987.** RAJ AUTOMOBILES (5534), SUSHIL TRADING CO. STATION ROAD, SIKAR, DISTRICT - SIKAR, RAJASTHAN PIN-332001 PH-01572-240721/240722

SRIGANGANAGAR

988.## ROHIT UDYOG (1132), 75
K-BLOCK,SRIGANGANAGAR PIN-335001
PH :0154-9414093565/2474823.

89.* NAGPAL MOTORS (3341), NAGPAL COMPLEX, SUKHARIA CIRCLE, SRIGANGANAGAR PIN-335001 PH: 0154-9414090666

SUJANGARH

990.## SHRI CHARBHUJA MARUTI (4924), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJA STHAN PIN-331506 PH :01568-222291/9828118827/9783455755.

SURATGARH

991.## ROHIN SERVICE STATION (2646), N.H.15 BIKANER ROAD,OPP, G.S.S. POWER HOUSE,SURATGARH,(RAJASTHAN) PIN-335804 PH:01509-222514/9413377914.

TIJARA

992.## SANJAY MOTORS (5875), ALWAR ROAD,NEAR BOLLYWOOD FARM,TJARA,DISTRICT-ALWAR,RAJASTHA N PIN-301001 PH::9414215875/9251415875.

TONK

993.## SUMIT MARUTI (4566), KOTA ROAD,TONK,RAJASTHAN PIN-304001 PH:0143-9214659749/2253228.

UDAIPUR

994.** ALOK AUTOMOBILES PVT. LTD. (1977), B.N.
COLLEGE PREMISES,OPP. DALAL PETROL
PUMP,SEVASHRAM ROAD,UDAIPUR
PIN-313001
PH 10294-411463.

995.** SHREE SAI CAR CARE (2376), PUNJAWATI,PULLA,UDAIPUR PIN-313001 PH :0294-3299901/9414166770.

TAMIL NADU

AMBUR

6.## MARUTHI MOTORS (2864), 10-C M.C. ROAD,AMBUR,(TAMIL NADU) PIN-635802 PH:04174-244880/9443637645.

ARAVAKURICHI

97.# GOWRI MARUTI (5570), OPPOSITE IOCL PETROL PUMP,NH-7,ARAVAKURICHI,DISTRICT -KARUR,TAMILNADU PIN-639201 PH :-9994818043.

ARCOT

998.## HARI AGENCIES (468), 12-A ANNA SALAI,ARCOT N.A.A.DT. PIN-632503 PH :04172-234050/9442225070.

ATTUR

999.## GANESAA MOTORS (4538), 1/1-D ARANGA BALA NAGAR, SALEM CUDDLORE MAIN ROAD, NARASINGARAM, ATTUR (TAMIL NADU) PIN-636108 PH: 04282-9443273866/281966.

AVINASHI

1000.## K.P.K AUTOMOTIVE (5547), SF NO.460/2,TIRUPPUR MAIN ROAD,AVINASHILINGAMALAYAM,AVINASHI, DISTRICT-COIMBATORE,TAMILNADU PIN-641654 PH :04296.275784/9994937784.

BHAVANI

1001.## CAR ZONE AUTO SERVICE (5332), METTUR
MAIN ROAD,NATARAJAPURAM
BHAVANI,DISTRICT - ERODE,TAMILNADU
PIN-638301
PH :04256-9842485670.

CHENGLEPUT

1002.## AMMA AUTOMOBILES (2941), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU, (T.N.) PIN-603002 PH :044-27421059/9842375112.

CHENNAL

1003.* EASVARI MOTORS PRIVATE LIMITED (1431), W-110 ANNA NAGAR,CHENNAI PIN-600040 PH :044-9840820212

1004.** SWAMY AUTOMOBILES (456), 23 CASA MAJOR ROAD,EGMORE,CHENNAI PIN-600008

PH :044-28194815/ 28194135/ 9840891916.

105.* WHEELS AUTO (469), 40 KASTURIBA
NAGAR,1ST CROSS ROAD,ADYAR,CHENNAI
PIN-600020

PH:044-24422971/9840138888.

O.M.S. MOTORS (P) LTD. (2140), NO.27

VELACHERRY MAIN ROAD,RAM NAGAR

NORTH,MADIPAKKAM,CHENNAI (TAMIL

NADU) PIN-600091

PH:044-2258181581/9444081390.

1007.## EASVARI MOTORS PRIVATE LIMITED (2236),
AC-123 4TH AVENUE SHANTHY
COLONY;ANNA

NAGAR-CHENNAI,CHENNAI,MAHARASHTRA PIN-600040 PH:044-26612837/9840820212.

008.* P.A. SERVICE STATION (2346), NO. 1
GOVINDARAJ ALUMEL AMMAL
NAGAR,NEAR 100 FEET
ROAD,AGRAHARAM, KORATTUR,CHENNAI
PIN-600076

PH:044-25012075/9840378025.

1009.## KARS KARE SERVICE CENTRE (2579), 648
T.H. ROAD,TONDIARPET,CHENNAI
PIN-600081

PH:044-25917671/9841070589.

1010.** MARUTI NEEDS (2531), NO.2 PARK
ROAD,PADI,CHENNAI PIN-600050
PH:044-25647104/9940099500

1011.## AUTO TECH (3445), NO.6 G.S.T. ROAD,KAMATCHI

> COLONY,SANATORIM,CHENNAI PIN-600040 PH :044-22418315/2238888/22383972/9840375524

1012.* VAISHALI MOTORS (4529), 4/577 RAJIV STREET,OLD MAHABALIPURAM ROAD,KOTTIVAKAM,CHENNAI PIN-600041

PH:044-24542233//9840138888.

1013.* PERFECT MARUTI CARE (4632), NO. 51/26,4TH MAIN ROAD,RAJA ANNAMALLI PURAM.CHENNAI PIN-600028

PURAM,CHENNAI PIN-600028 PH :044-9789974300/24323328. 1014.** NSK MARUTI (4975), 2/247, AST COAST

ROAD, NLANKARAI, CHNNAI, TAMIL NADU PIN-600041 PH 1044-24493839/9841047232/9884323652

1015.## ABIRAMI MOTORS (5131), 6 ANNA
NEDUMATHAI,CHOOLABEDU,CHENNAI,TAMI

PH:044-9840017558/23610806.

CHIDAMBARAM

1016.## HI-TECH MARUTI (3231), NO.45, SITHIVEL NAGAR, SALIYANTHOPPU,BYE PASS ROAD,CHIDAMBARAM,DISTRICT-CUDDALO RE,TAMILNADU PIN-608001

PH:0444-228589/9585538671/9585538672.

COIMBATORE

1017.## TDK AUTOMOBILES PVT. LTD. (160), 9A NEHRU STREET,B.R. PURAM AVINASI ROAD,PEELAMEDU,COIMBATORE PIN-641004

PH :0422-2577898/2572571/9952300666.

1018.## LOTUS AUTOMOBILES (4758), 1647-A
AVINASHI ROAD.HOPE

COLLEGE,PEELÁMEDU,COIMBATORE (TAMILNADU) PIN-641004 PH:0422-7667710009/9842265133.

319.* SOUTH INDIA MOTORS (MARUTI) (4752), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE (TAMIL NADU) PINASA 1014

PH:0422-9843315065, 6560552/2592579.

1020.## GURU AUTO GARAGE (4965), 2/98, IRUGUR
ROAD, NEAR RSNI

OFFICE,CHINNAMPALAYAM,COMBATOR,TA MIL NADU PIN-600014 PH-10422-9843256247/2625295

COONOOR

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1021.## SHANTHI AUTO CARE (6054), FIGURE OF 8 ROAD,COONOOR,NILGRIS,(TAMIL NADU) PIN-643101 PH :0423-2330652/9443089750.

CUDDALORE

1022.## SUNTAR AUTOS (2134), KTR
BUILDINGS, CHIDAMBARAM
ROAD, CUDDALORE PIN-607002
PH :04142-223825/9842345690.

CUMBUM

1023.## SRI BALAJI MOTOR WORKS (3139), 221-A 1/3 THENI ROAD,NEAR REGULATED MARKET,UTHAMAPURAM,CUMBUM PIN-625516 PH: 04554-2742452/9994169309.

DINDIGUL

024.* MAGNUM MOTORS (1241), MEENACHINAICKEN PATTY,NH-7 BYE- PASS ROAD,DINDIGUL,(TAMIL NADU) PIN-624002 PH

:0451-2432751/2424578/9842120340/98422313

ERODE

1025.** SRI KRISHNA AUTOMOBILE ENTERPRISES (2320), 560 CAUVERY ROAD,ERODE PIN-638003

PH:0424-2218010/2218011.

1026.** SRI SAKTHI CARE (1055), NO.21 & 22 (TS-10), POOSARI CHENNIMALAI STREET, (NATIONAL HOSPITAL BACKSIDE), ERODE PIN-638009 PH: 0424-2273438/2273110)9842855157.

GADALUF

1027.## GREENWAY MARUTI SERVICE CENTER (5471), KALAMPUZHA,D.O. NO 12/59-3, GUDALUR, DISTRICT -NILGIRLS, TAMILINADU PIN-643001 PH 104292-261690[04428073815

QOBICHETTYPALAYAM

1028.## HI-TEC AUTO GARAGE (2426), 4/388-A BHARATHI DASAN NAGAR,ERODE MAIN ROAD,KULLAMPALAYAM P.O./IST VAIKKAL,GOBICHETTYPALAYAM PIN-638476 PH: 104295-2468636/8842447775

HOSUR

1029.## AUTO SCAN (2070), 58-B BANGALORE ROAD,HOSUR,(TAMIL NADU) PIN-635109 PH :04344-244371/9363344371. 1030.## SRI VINAYAKA MOTORS (3848), 5/2C/1 (OPP TAMIL NADU HOTEL),BYE PASS ROAD,HOSUR PIN-635109 PH : 04344-245036/9443245096.

31.** BALAJI MOTORS (5136), PLOT NO.11 MARUTHI NAGAR, NEAR T.V.S. AGENCIES (T V S SHOWROOM), KRISHNAGARI MAIN ROAD-HOSUR, TAMILNADU PIN-635109 PH :04344-9842755402/260664.

KALPAKKAM

1032.# MARUTI MOTORS (4253), SURVEY 309/5-A, PUDIPATTINIAN VILLAGE PANCHAYAT, THIRUKALUKUNDRAM TALUKA, KANCHEEPURAM, KALPAKKAM PIN-603102 PH: 9443366535, 9842323702.

KANCHEEPURAM

1033.* SVS MARUTI SERVICE CENTRE (5466), NO 46.C KARUKINIL AMARITHAVAL KOIL STREET, METTU STREET, OPP. GANESH SAWMILL - KANCHEEPURAM, TAMILNADU PIN-631501 PH: 044-9994332290/67277888.

KANQAYAM

1034.## SRI ARUN CAR CARE (3949), COIMBATORE ROAD.NEAR IBP PETROL BUNK,KANGAYAM PIN-638701 PH: 04257-9360008642/9443329526.

KARAIKUDI

1035.## SURABI MOTORS (2340), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI PIN-630001 PH: 04565-286853)9443351484.

KARUMATHAMPATTY

1036.## SIVAN MOTORS (3832), OPP IBP NH47,NEAR KONGU VELLALAR SCHOOL KARUMATHAMATTY PIN-641659 PH :0421-2336290/ 9842231819.

KARUR

1037.** SRI SAKTHI AUTO CARE (2532), 3/291 COVAI ROAD, VADIVEL NAGAR L.N.S. POST, KARUR, (TAMIL NADU) PIN-639002 PH: 04324-227289/9842426585.

KOVILPATTI

1038.## CLASSIC AUTOMOBILES (6037), NO.3/71.NELLAI MAIN ROAD(NH-7),MADURAI,BYE PASS ROAD, INAMANIYACHI,KOVILPATTI,TAMILNADU PIN-628502 PH :04639-9442501479/9442552000.

KRISHNAGIRI

1039.## THIRUTHANIGAI MOTORS (2427), SALEM-CHENNAI BYE PASS ROAD, KRISHNAGIRI, (TAMILNADU) PIN-635001 PH: 04343-231532/9842757017.

KUMBAKONAM

1040.## SRI SAKTHI MOTORS (4330), T.S.N 581, 584,DOOR NO. 30, ULLKAM STREET,NEAR OLD BUS STAND,KUMBAKONAM PIN-612001 PH 10435-2403786/ 2431513 9443131513

MADURAI

1041.## FRIENDLY MOTORS (3141), 32 PALAM STATION ROAD,NEAR LIC BUS STOP,SELLUR,MADURAI PIN-625002 PH :0452-9842414041/265255.

1042.## SHALOM MOTORS (4629), THENI MAIN ROAD,ACHAMPATHU,NEAR BHARAT PETROLEUM,MADURAI PIN-625019 PH :0452-9442058150/ 9865357772.

MADURANTHAKAM

1043.## MARUTHI MOTORS (6036), NO.33,G.S.T.
ROAD,KARUNGUZHI,MADURANTHAKAM,DIS
TRICT-KANCHIPURAM,TAMILNADU
PIN-603303
PH :0427-9443354073.

MAYILADUTHURAI

1044.## R.M.S. MARUTI AUTO (2237), 53/54
MAHADHANA
STREET, MAYILADUTHURAI, (TAMIL NADU)
PIN-609001
PH-10864-2292865/0842922865

NAGAPATTINAM

MARUTI-TECH (1671), RAJATHI COMPLEX, OPP. TNEB BIKARA, TIRUVARUR ROAD, NAGAPATTINAM PIN-611001 PH 104365-9842653718/9942409032

NAGARCOIL

1046.* SRI GANAPATHI MOTORS (1629), NO.12 JAWAHAR STREET,R.V. PURAM,NAGERCOIL,NAGERCOIL PIN-629001 PH :04652-233970/233980/9344695657.

NAMAKKAL

1047.## ARUNA MOTORS (1461), MARUTI SERVICE CENTRE,OPP. N.S.R. BUILDING,SALEM MAIN ROAD,NAMAKKAL PIN-637001 PH :04281-275761,9842775761.

NEYVELI

1048.## SRI MARUTHI MOTOR SERVICE (1458), 8-A
DAILY BAZAR,BLOCK-19,NEYVELI
PIN-607803

PH:04142-324253/9443203191

1049.# CHENDU MOTORS (4333), KALIVELAMPATTI
PIRIVU,TRICHY
ROAD,PALLADAM,COIMBATORE DIST
PIN-641662
PH :04255-255805, 9842225058.

PALLAVARAM

1050.* VBK MOTORS (4463), OLD NO. 99, NEW NO. 91,G.S.T ROAD, ALVITONE ESTATE, (BEHIND LAKSHMI THEATRE), PALLAVARAM, CHENNAI PIN-600043 PH :044-423262(10/20/30, 9841425030.

PARAMAKUDI

1.# SIVA AUTOMOBILES (4542), NEAR SRIKUMARA SUBRAMANIYA SWAMY TEMPLE, OPP FIRE STATION,MADURAI RAMESWARAM ROAD,PARAMAKUDI, RAMNAD DIST PIN-623707 PH: 04564-994425894/231253.

PARAMATHIVELUR

1052.## RADHA CAR CARE (5828), NO 96/1,BYE
PASS ROAD,VETTUKATTU PUDAR,PIRIVUR
ROAD,PARAMATHIVELUR-638182,DISTRICTNAMAKKAL,TAMILNADU PIN-638182
PH :04268-220009/9600499600.

PERUNDURAI

1053.## PRIYAM AUTOMOBILES (3036), 139 KOVAI MAIN ROAD,PERUNDURAI,(TAMIL NADU) PIN-638052 PH 104204.9842744944/9842756006

POLACHI

J D & COMPANY (6055), COIMBATORE ROAD, POLLACHI PIN-642002 PH: 04259-220262/223828/9443172635.

RAJAPALYAM

1055.## RAJA MOTORS (4128), 3 MADURAI,BY-PASS ROAD,NEAR JANAKI RAM TEXTILES,RAJAPALAYAM PIN-626117 PH :04563-9976606021.

RASIPURAM

1056.## ROYAL AUTO CARS (4052), 5/120 NH-7, SALEM MAIN ROAD,NEAR TSTC DEPOT, MUTHIKALIPATTI POST,RASIPURAM TALUK,NAMAKKAL DISTRICT PIN-637408 PH: 04287-9442230339.

RED HILLS

- ** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs
- ## C-Category Mass : Free & paid Service & Minor repairs

- * B-Category Mass : Free & paid Service & Major repairs
- # D-Category Mass : Free Service & Minor repairs

1057.## UNIQUE CAR CARE (5868), NO.54,FIRST STREET,MANIKANDAPURAM,RED HILLS-THIRUVALLUR HIGHWAY,RED HILLS,TAMILNADU PIN-600062 PH:044-26373939)9841059295.

SALEM

1058.## MEENATCHI AUTO (2940), 57
KALARAMPATTY MAIN ROAD, (NEAR DEVI
THEATRE), SALEM, (T.N.) PIN-636015
PH :0427-9443201001/2254426.

1059.** NATSUN MOTORS (6029), NO.220,BANGALORE BYE PASS ROAD (NH-7),KODALAMPATTY, SALEM_DISTRICT-SALEM,TAMILNADU PIN-636010 PH-0427-9842704499/9942104477.

SANKAGIRI

1060.## TECH ZONE AUTO SERVICE (2640), 10/78
BHAVANI MAIN ROAD, (NEAR ERODE
PIRIVU), SANKAGIRI SALEM DISTT.
PIN-637303
PH: 04283-244523/9842709103.

SANKARANKOIL

1061.## RAJA MOTORS (4555), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL PIN-627756 PH: 04633-9994409363.

SATHYAMANGALAM

1062.## CAR ZONE AUTO SERVICE (5762), NEAR RTO OFFICE-COIMBATORE MAIN ROAD-, SATHYAMANGALAM, DISTRICT-EROD E, TAMILNADU PIN-638402 PH: 04295-9842286801.

THANJAYUR

1063.## R K P MOTORS (5238), 121/7.THANJAVUR KUMBAKONAM,HIGHWAY PALLIAGRAHARAM,THANJAVUR,TAMILNAD U PIN-613003 PH: 04362-9976725555.

THENI

1064.## SATHURAGIRI MOTOR WORKS (1650), 3-1-31 TO 36,CUMBUM ROAD,THENI,(TAMIL NADU) PIN-625531 PH: 04546-264663/9047011678/9047033678.

THENKAS

1065.## CARE ZONE (3766), 5/164(1) KUTHUKKAL VALASA,MADURAI ROAD,TENKASI,(TAMIL NADU) PIN-627811 PH :04633-9842133134/280803.

TIRUCHENDUR

1066.* CLASSIS AUTOMOBILES (4355), 269/2,V.K.N NAGAR,PALAYAMKOTTAI ROAD,TIRUCHENDUR PIN-628215 PH :04639-246043/246043/9442246043.

TIRUNELVELI

1067.## FRIENDS INDIA AUTO CLINIC (5030), NO.16 D.BYE PASS ROAD,VANNARAPETAI,TIRUNELVELI,TAMIL NADU PIN-627003 PH:0462-2501238/9843006111.

TIRUPUR

1068.** LAKSHMI MOTORZ (2461), 4/146 PALLADAM ROAD,OPP. LAKSHMI KALYANA MANDAPAM,TIRUPUR,(T.N.) PIN-641604 PH:0421-2215959/2214799/9842233959.

TRICHY

VYTHES MOBILE PARK (443), 8/6 TANJORE ROAD, THIRUCHIRAPALLI PIN-620008 PH:0431-2200716/2200718/9443152529.

UDAMALAPET

1070.* S.R.K. MOTORS (1456), C-109 GANDHI NAGAR, UDAMALAPET, COIMBATORE (DT.), (TAMIL NADU) PIN-642154 PH : 04252-232805/229019/9843011520.

ELLORE

1071.* MARUTI AUTO SERVICE (2844), 106 (OLD NO.: 78),KATPADI ROAD,GANDHI NAGAR,VELLORE (T.N.) PIN-632006 PH

:0416-2243422/2245222/9994832099/98430934

VILLUPURAM

1072.## RAGAVENDRA MOTORS (2361), 2/3 MADRAS TRUNK ROAD, VILLUPURAM, (TAMIL NADU) PIN-605602 PH: -924455560/664/662.

VRIDDHACHALAM

1073.# VISHWA MARUTI CARE CENTER (5463), NO412,PERIYAR NAGAR (NEAR FIRE SERVICE STATION),VRIDDHACHALAM,DISTRICT -CUDDALORE,(TAMILNADU) PIN-606001 PH :04143-984246092/238095

TRIPURA

AMBASSA

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

1074.## CHAKRABORTY MECHANICAL WORKSHOP (5351), NI+44. NEAR ZILLA PARISWAD OFFICE,AMBASSA,DISTRICT -DHALAI,TRIPURA PIN-799289 PH : 9436136054.

BELONIA

1075.## JOY UDYOG (3977), KALINAGAR,BELONIA,SOUTH TRIPURA PIN-799155 PH :03823-9436799415/9774805210.

DHARMANAGAR

1076.## RAJ AUTOMOBILES (2868), STATION ROAD, RAJABARI, DHARMANAGAR, TRIPURA (NORTH) PIN-799253 PH: 03822-234670/9436477578.

UDAIPUR (WEST)

PH:-9436135422

1077.## RAMKRISHNA MARUTI ENGINEERING (4865), RAJARBAGH MOTOR STAND, UDAIPUR WEST, DISTRICT-TRIPURA SOLITH PIN-799120

UDAYPUR

1078.## SUR UDYOG (3963), TOWN FULKUMARI NO. 1,BRAMHABARI, P O UDAIPUR COURT, UDAYPUR, TRIPURA SOUTH PIN-799001 PH:03821-9862276650.

UTTAR PRADESH

AGRA

1079.## GAYATRI MOTORS (4730), 101-102, SHASHI NAGAR, CHANDRAKALA-, COMPLEX SIKANDRA BODLA ROAD, AGRA, (UTTAR PRADESH) PIN-282008 PH:-3319129910.

1080.** RAJPUT MOTORS (5166), 44/320 B.MAUZA BODLA, AGRA,DISTRIICT - AGRA,UTTAR PRADESH PIN-282007 PH :-9319185751/9319108310.

ALIGARH

1081.## KAPIL AUTOMOBILES (1344), OLD KHURJA BUS STAND,G.T. ROAD,ALIGARH(U.P.) PIN-202001 PH :9837007636.

1082.## KAR SCAN CENTRE (449), RAMGHAT ROAD, KWARSI, ALIGARH PIN-202002 PH: 0571-9927001133/3292217.

ALLAHABAD

1083.## ANSHUMAN AUTOMOBILES (4933), 353, NAINI BAZAR NAINI,DISTRICT ALLAHABAD,ALLAHABAD,UTTAR PRADESH PIN-211008

PH:0532-9335138119/2696474.

084.** KAY CEE AUTOMOBILES (2155), 72/60 L.B. SHASTRI MARG,ALLAHABAD PIN-211006 PH:0532-2420225/2420434.

1085.## TRIBENI MOTORS (2539), 23 KANPUR ROAD,ALLAHABAD,(U.P.) PIN-211001

AL MODA

1086.## AROMA AUTOMOBILES (3149), THE
MALL,ALMORA,(UTTARANCHAL) PIN-263001
PH :05962-33081/33432.

AMROHA

1087.## SUNNY MOTORS (2165), BIJNORE ROAD,J.P.
NAGAR,AMROHA,(U.P.) PIN-244221
PH :-51111

AURAIYA

1088.## VINAYAK AUTOMOBILES (2842), OPP. NTPC COLONY IIND GATE,PHAPHUND ROAD,DIBIYAPUR,AURAIYA (U.P.) PIN-206244 PH 19583-283639

1089.** SINGH AUTOMOBILES (5248), KANPUR ROAD, AURAIYA,DISTRICT -AURAIYA,UTTAR PRADSH PIN-206122 PH :05683-9412284024/245428.

AZAMGARH

1090.## BHAGIRATHI MOTORS (4674), SARFUDDINPUR,P.O. SADAR,AZAMGARH,UTTAR PRADESH PIN-276001 PH:05462-9450029647/243702.

BABUQARH

1091.* GURUNANAK AUTOMOBILES (5977), NH-24, NR. TOLL PLAZA, BABUGARH, VILL SIMROLI, GHAZIABAD, DISTRICT-GHAZIABAD, UTTAR PRADESH PIN-245101 PH : 0971790307

BAGHPAT

1092.# KAUSHIK MOTORS (4473), DELHI ROAD,BAGHPAT,UTTAR PRADESH PIN:250609 PH :0121-9412410412, 9837800582, 9411263023.

BALRAMPUR

1093.## D M AUTOMOBILES (3933), NEAR BCM,
POST SIRSIYA,GONDA ROAD,BALRAMPUR
PIN-271201
PH :05263-9415071840/235782.

BANDA

1094.## CHAUDHARY TRACTORS (2249), STATION ROAD,BANDA, (U.P.) PIN-210001 PH :05192-224882/224202.

BARAUT

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1095.## HIGH TECH ENGINEERS (4821), 216/5 SAHARANPUR ROAD.BARAUT PIN-250611 PH:01234-263327/941220547/983716887.

1096.## SIGNET AUTOMOBILES (4441), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT, DISTT BAGHPAT (U.P) PIN-250611

PH:01234-267164/9412831171/98411833140.

BAREILLY

1097.** SAVVY MOTORS (4559), BALWANT MOTORS BUILDING,131 CIVIL LINES,NEAR DAINIK JAGRAN, BAREILLY (UTTAR PRADESH) PIN-243001

PH:0581-2420907/2420143. 1098.## S P MOTORS (5746), 383, SURKHA CHAWNI,

> ROAD, BAREILLY, DISTRICT-BAREILY, UTTAR PRADESH PIN-243001

PH:0581-09412479140/2412829.

RLINOR

1099.## SARDAR MOTORS (4671), DELHI HIGHWAY ROAD,4TH KM MILE STONE,BIJNOR,UTTAR PRADESH PIN-246701 PH:01342-9837265076/262410.

BULANDSHAHR (U.P.)

1100.## DELHI AUTO ENGRS (1351), NEAR PANDIT PETROL PUMP,BHOOR,G.T.ROAD,BULANDSHAHR PIN-203001

PH:05732-234888/9359155333.

CHANDPUR (U.P.)

1101.## BHARTI AUTOMOBILES (1777), DHANORA ROAD,CHANDPUR,DISTT. BIJNOR,(U.P.) PIN-246725

PH:01345-221441/9837380551.

CHITRAKOOT

SHYAM MOTORS (4367), BUS STAND KARWI CHITRAKOOT PIN-210205 PH:05198-236996.235150.9415143900.

DADRI

1103.## NATIONAL MOTOR AGENCY (5143), NOIDA BOAD DADRI DISTRICT - GAUTAMBUDH NAGAR UTTAR PRADESH PIN-203207 PH:0120-9818486888/2667033

DANKAUR

1104.## YASH MOTORS (5934), SIKANDRABAD ROAD, NEAR KISAN INTER COLLEGE, DANKAUR, DISTRICT- GAUTAM BUDH NAGAR,UTTAR PRADESH PIN-203201 PH:-9410491590.

DEOBAND

1105.## PRACHI MOTORS (3361), ADJACENT TO CIVIL COURTS,G.T. ROAD,DEOBAND,DISTT. SAHARANPUR (U.P.) PIN-247554 PH:01336-22900/9359246585.

DEORIA

1106.** CLASSIC MOTORS (2971), D-13/14 INDUSTRIAL ESTATE OPPOSITE BTO OFFICE.GORAKHPUR ROAD.DEORIA (U.P.) PIN-274001 PH :-9415080981

DHAMPUR

1107.## AUTAR AUTOMOBILES (4846), NOORPUR BOAD DHAMPUR DISTRICT-BUNOR UTTAR PRADESH PIN-246761 PH:01344-220440.230074. 9411833140.9897073113.

FAIZABAD

1108.* S K MOTORS (4672), CHANDPUR HARBANS ALLAHABAD ROAD,NH-96,FAIZABAD,UTTAR PRADESH PIN-224001 PH:-9335981364/9335305129.

FARUKHABAD

1109.## SANDEEP MOTORS (4161), THANDI SADAK, OPP. JITENDRA GAS GODOWN.FARUKHABAD.UTTAR PRADESH PIN-209625

PH:05692-228321/228205/9838840322-321 1110.## APOORVA MOTORS (4675), SATAPUR MAINDIR ROAD.FARRUKHABAD.DISTRICT FARRUKHABAD.UTTAR PRADESH PIN-209625 PH:-9451880650/9336051151

FATEHPUR SIKRI

1111.## LAXMI MOTORS (5943), FATEHPUR SIKRI ROAD, KHEDA KORAI, FATEHPUR SIKRI, DISTRICT-AGRA, UTTAR PRADESH PIN-283110 PH:-9837749949.

FIROZABAD

1112.## GOVIND AUTOMOBILES (1739), OPP. IMPERIAL GLASS SHOWROOM,S.N. ROAD, FIROZABAD, (U.P.) PIN-283 203 PH:05612-244650.

AMAN MOTORS (4366), OPP CAR CARE (INDIA), BYE PASS ROAD, FIROZABAD, UTTAR PRADESH PIN-283203 PH:05612-281546/9219400877.

GANGOH

1114.# SHRI KRISHNA MOORS (5939), BYE PASS ROAD RAM GARH. GANGOH.DISTRICT-SAHARANPUR.UTTAR PRADESH PIN-247341 PH:-9719471747.

GHAZIARAD

1115.* D.N. AUTOLAND (272), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD PIN-201001 PH:0120-6521037/2724316/9810140000.

CHAWLA AUTOMOBILES (2643), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA,GHAZIABAD PIN-201003 PH:0120-2797021/9811720929/9810663366

SHIVA MOTORS (3343), 17TH KM STONE,118-119 SHIVPURI,SECTOR-9 VIJAY NAGAR BYEPASS NH-24,GHAZIABAD (U.P.) PIN-201009

PH:-2744400/3232590/9891464349. KRISHNA AUTOMOBILES (5356), 101 LAL KUAN SHIV MANDIR, BULANDSHAHAR ROAD, DISTRICT - GHAZIABAD, UTTAR PRADESH PIN-201001

PH:-9810311475/9999506820. 1119.## S P MOTORS (4973), HAPUR BYPASS BOAD MEHBAULLGHAZIABAD PIN-201001 PH:0120-9350936262/2824443.

PANKAJ AUTOMOBILES (1370), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, GONDA PIN-271001 PH:05262-232812. AMAN MOTORS (3858), PORTER

GANJ, LUCKNOW ROAD, GONDA PIN-271001 PH:05262-231506.

GREATER NOIDA

1122.## JAISWAL MOTORS (5078), PLOT NO. 31.SECTOR MUP-II GREATER NOIDA, DISTRICT - GAUTAM BUDH NAGAR, UTTARPRADESH PIN-201308 PH:-9810062269/6485444/9212142269. 1123.## KUMAR MOTORS (5343), M-8 SITE 5 UP

SIDE, SURAJPUR, INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDH NAGAR,UTTAR PRADESH PIN-201306 PH:0120-9911498777/2341088/9811498333.

HAPUR

1124.* SRASTHI MOTORS (3076), NEAR UNITED BANK OF INDIA, DELHI ROAD, HAPUR, (U.P.) PIN-245101 PH:950122-2305842/9412221608.

HARDOI

TAYAL AUTOMOTIVES (4265), SOHRA KOTHI, BAWAN CHUNGI, HARDOI PIN-241001 PH:05852-234314, 9415149951.

1125.## M. MOTORS & SERVICE CENTRE (3371).

ROAD,HARDOI,(U.P.) PIN-241001

CHAND BEHTA, LUCKNOW

PH:05852-21734.

HATHRAS

1127.## RADHEY RADHEY AUTOMOBILES (4344), NEAR BUS STAND, AGRA ROAD, HATHRAS PH:-9897069159.

JAGDISHPUR (U.P.)

1128.## SUPER AUTOMOBILES (3564), JAFARGANJ P.O., INDUSTRIAL AREA, JAGDISHPUR, DISTT. SULTANPUR (U.P.) PIN-227817 PH:05361-291168/9415177882.

JAUNPUR

1129.## SADGURU MOTORS (5071), FAIZBAGH (NEAR TOM OFFICE) UMARPUR JAUNPUR, JAUNPUR, UTTAR PRADESH PIN-222142 PH:-9839318653.

JHANSI

1130.* A.B. MOTORS (6022), 4

KHATTERYANA, JHANSI PIN-273162 PH:0510-2471865.

1131.## JALIM PAINTER (5661), 1051, NEAR ADINATH HOTEL, STATION ROAD, JHANSI, DISTRICT -JHANSI,UTTAR PRADESH PIN-284001 PH:-9415113566.

KANNAUJ

1132 ## SARALA ALITO CARE (5854) G.T. ROAD KANNALLI DISTRICT-KANNALLI LITTAR PRADESH PIN-209720 PH:-9415167503

KANPUR

1133.## KANPUR AUTO CENTRE (2823), 14/142 CHUNNIGAN J. KANPUR PIN-208012 PH:0512-2533160

AJAY MOTOR WORKS PVT. LTD. (3134), 117/N/81 KAKADEVO KANPUR PIN-208001 PH:0512-2501044

EXCELLENT MOTORS (2968), 123/793 FAZALGANJ KANPUR PIN-208012 PH:0512-2235566

AUTO GARAGE (4266), P-22-A, PRATAP GANJ. FACTORY AREA OPP GANDA NALA.KANPUR PIN-208012 PH:0512-2236763

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

1137.** SUJIPA MOTORS (4337), 127/465,U-BLOCK,NIRALA NAGAR,KANPUR PIN-208014 PH :0512-2643146/2618156. 1138.** CHANDRA MOTORS (4458), 621/3 W-2

38.** CHANDRA MOTORS (4458), 621/3 W-2 JUHI,BEHIND SACHAN GUEST HOUSE,KANPUR PIN-208014 PH :0512-3258159.

KHAIRABAD

1139.* BAIG MOTORS PVT LTD (4165), KHAIRABAD,LUCKNOW ROAD,SITAPUR,UTTAR PRADESH PIN-261001 PH :9307237710.

KHALILABAD

1140.## RATAN MOTORS (5645), RAILWAY STATION ROAD - KHALILABAD, DISTRICT - SANT KABIR NAGAR, UTTAR PRADESH PIN-272175 PH : 9415257705.

KHATAULI

1141.## EAGLE MOTORS (5142), OPPOSITE EW ROADWAYS,G.T. ROAD. NH -58 KHATAULI,DISTRICT -MUZAFFARNAGAR,UTTAR PRADESH

PIN-251201 PH:01396-9997039786/9897223327/273501.

KHEKRA

1142.** KAILASAH MOTORS (5767), OPP TEHSIL ,DELHI BAGHPAT ROAD,KHEKRA,DISTRICT-BAGHPAT,UTTAR PRADESH PIN-201101 PH:0121-2232003.

KOSIKALAN

1143.** ADITYA MOTORS (1940), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.) PIN-281001 PH -05662-232657/0837050778

LAKHIMPUR KHERI

1144.** AJMANI TRACTORS (4143), NIGHASAN ROAD, LAKHIMPUR KHERI, UTTER PRADESH PIN-242001 PH :05872-266340

LALITPUR

1145.## VARDHMAN MOTORS (1073), SAGAR ROAD,LALITPUR,(U.P.) PIN-284403 PH:05176-277996.

LAMBHUA BAZAR

1146.## VIKRAM MOTORS (3729), LAMBHUA BAZAR,SULTANPUR (DIST.),UTTAR PRADESH PIN-222302 PH :05364-257380.

ONI.

1147.## SAMBHAV AUTOMOBILES (5168), 31.RURAL INDUSTRIAL ESTATE, ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH PIN-201102 PH: >9311690878.

LUCKNOW

1148.## BALAJI MOTORS (1336), 1 NEWAL KISHORE ROAD,LUCKNOW (U.P) PIN-226001 PH:0522-3956801.

1149.** KALYAN MOTORS (1161), GOVT.
POLYTECHNIC CROSSING,FAIZABAD
ROAD,GOMTI NAGAR,LUCKNOW PIN-226001
PH: 0522-4049545-47.

1150.** RELIANCE MOTORS CARE (1236), 7-B/1 PRIME PALACE,FAIZABAD ROAD,INDIRA NAGAR,LUCKNOW PIN-226016 PH :0522-2240366.

1151.** GUD'S CAR CARE (2538), MAIN ROAD,NISHATGANJ,LUCKNOW PIN-226 006 PH :0522-2330786/87.

152.** B.K. MOTORS (2537), KALYANPUR,RING ROAD,OPP. CARRIER CONVENT BOARD,LUCKNOW PIN-226015 PH:0522-2760111.

1153.* S.K. MOTORS (2449), 8/881 VIKAS NAGAR, PICNIC SPOT ROAD,KHURAM NAGAR,LUCKNOW PIN-226013 PH:0522-2324809.

154.* V.S. MOTORS (4745), RAMADHIN SINGH INTER COLLEGE CAMPUS,BABU GANJ,LUCKNOW,UTTAR PRADESH PIN-226007

PH:0522-9839522310/2788564. 1155.* KRISHNA MOTORS (5026), BALAGANJ HARDOI ROAD,CHOWK

HARDOI ROAD,CHOWK LUCKNOW,DISTRICT LUCKNOW,UTTAR PRADESH PIN-226003 PH - 9879177777

1156.** KAPOOR MOTORS (5044), 555/GA/50,BARA BIRWA, KANPUR ROAD-,ALAMBAGH LUCKNOW,DISTRICT - LUCKNOW,(UTTAR PRADESH) PIN-226005 PH - -0415/806425

1157.## GALAXY MOTORS (5274), KASHANA SITAPUR ROAD, NEAR SHIA,P G COLLGEG-LUCKNOW,DISTRICT - LUCKNOW,UTTAR PRADESH PIN-226001 PH : 9305567878.

MEERUT

1168.## SARAN AUTOMOBILES LTD. (1078), DELHI ROAD,RITHANI,MEERUT PIN-250103 PH :0121-2441986/3253074/93594506555.

1158.** MVV MOTORS (5531), A1/14, VIJAY KHAND,

PH:0522-3247776.

PH:-9236711634.

PIN-226004

PH:-252704.

MAHOBA

MAINDIER

MARIAHU

MATHURA

GOMTI NAGAR, LUCKNOW, DISTRICT -

THE GARAGE (5479), BEHIND NEW

HANUMAN MANDIR, MADIR

KAPOOR MOTORS (1751), PLOT

NO.380,NEAR GUNGA BAHARA

HAMIRPUR CHUNGHI, KANPUR

ROAD, MAHOBA, (U.P.) PIN-210427

ROAD, MAINPURI, DISTRICT-MAINPURI, UTTA

1161.## ROYAL SERVICE STATION (2238),

PH:05281-256194/252194.

1162.# JATIN MOTORS (5540), GANESH MILL

1163.## BABU MOTORS (5740), MACHALISHAHAR

OFFICE,MARIAHU,DISTRICT -

1164.## GIRIRAJ CAR CARE (5624), BIMAL ENGG

SIYA RAM MOTORS (1666),

JAYSINGHPURA,NEAR BIRLA

PURA VILLAGE, REFINDERY

JAUNPUR,UTTAR PRADESH PIN-222161

COMPLEX,BAD,MATHURA PIN-281006

MANDIR, MATHURA, (U.P.) PIN-281003

NAND SERVICE STATION (3578), GOPAL

TOWNSHIP,NH-2,MATHURA PIN-281006

1167.## SHREE GOPAL AUTOMOBILES (5664), DELHI

RESTAURANT, MATHURA, DISTRICT

MATHURA, UTTAR PRADESH PIN-281001

BYE PASS ROAD, NEAR GOKUL

COLONY. RADHA RAMAN

R PRADESH PIN-205001

PH:-9359843400.

BOAD, NEAR POST

PH:-9919263663.

PH:0565-2430821.

PH:0565-2530210.

PH:0565-5416912.

PH:0562-9760026760.

LUCKNOW,UTTAR PRADESH PIN-226010

PARK, MAHANAGAR - LUCKNOW, DISTRICT -

LUCKNOW, UTTAR PRADESH PIN-226017

SCHOOL TILAK NAGAR UTTAR PRADESH

1169.** EXPERT CAR SCANNER (1174), 83 HILL STREET (KATH-KA-PUL),BEHIND ABU LANE,MEERUT CANTT. (U.P.) PIN-245206 PH :0121-2644860/9412201195.

1170.## KRISHINA AUTOMOBILES (5573), PLOT NO D-10, SHRADHA PURI,KANKARKHERA -MEERUT,DISTRICT - MEERUTI,UTTAR PRADESH PIN-250001 PH:-9927241738.

MIRZAPUR

1171.## PRABHAT MOTORS (4131), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, (U.P.) PIN-231001 PH :15442-245859.

MOHANLAL GANJ

1172.** GURU TEG BAHADUR AUTO ENTERPRISES (4072), 4 SENANI VIHAR,RAI BAREILLY ROAD,MOHANLAL GANJ,LUCKNOW (U.P.) PIN-226001 PH :0522-2442061.

MORADABAD

1173.## ASHISH AUTOMOBILES (1477), KANTH ROAD,MORADABAD,MORADABAD PIN-244001 PH :0591-8533559

MUZAFFARNAQAR

1174.## SIDDIQUI MOTOR WORKS (1339), ANSARI ROAD,MUZAFFARNAGAR (U.P) PIN-251001 PH :031-2442626/9412476786.

NAJIBABAD

1175.## SETHI MOTORS (4557), C/O SETHI BOARD INDUSTRIES LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD, DISTT. BIJNOR (UTTAR PRADESH) PIN-246763

PH :01341-220087 9837349688 9837590800

OIDA

1176.## AUTO POINT (2263), C-107 SECTOR-2,NOIDA,(U.P.) PIN-201301 PH:0120-9810061814/9910397875. 1177.* CITY MOTORS (3876), C-2 SECTOR

1177.* CITY MOTORS (3876), C-2 SECTOR 63,NOIDA PIN-201307 PH :-2401772/9810427752.

1178.** RAHUL MOTORS (4662), A-59
SECTOR-80, PHASE-II, NOIDA, UTTAR
PRADESH PIN-201303
PH :0120-9810572900/9312271259/3963138.

1179.** RAJESH & ANIL MOTOR CO (5330), B-110.
SECTOR 2,NOIDA,DISTRICT - GAUTAM
BUDH NAGAR,UTTAR PRADESH PIN-201304
PH :0120-9818578786(4211266(2539555.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1180.## NANDA MOTORS (5733). B-180,PHASE-2,NOIDA,DISTRICT-NOIDA,UTT AR PRADESH PIN-201305 PH:-9566003839.

1181.## APPRECIATE SERVICES (4678), BY PASS ROAD, ROBERTS GANJ, DISTRICT -SONEBHADRA, UTTAR PRADESH PIN-231216 PH:05445-267266/9415323710.

PHILLPLIR

1182.## BHARAT MOTORS (6039), C/O KALISHI ENDRA PANDEY PLIREMARHARATG PRATAPPLIR ROAD.PHULPUR.DISTRICT-ALLAHABAD.UTT AR PRADESH PIN-244601 PH:-09554495877.

1183.* UNIVERSAL MARUTI SERVICE STATION (4365), BYE PASS BOAD PILIBHIT UTTAR PRADESH PIN-262001 PH:05882-255499/9412313499

PILKHUWA

1184.* SHREE BANKEY BIHARI MOTORS PVT. LTD. (6025), NH-24, DELHI-GARH BOAD PILKHUWA DISTRICT-GHAZIABAD UT TAR PRADESH PIN-245307 PH:-9045548101

PRATAPQARH

1185.** SHREE MOTORS (4146), ALLAHABAD FAIZABAD ROAD.NH-96.CHILBILA RANJEETPUR.PRATAPGARH (UTTAR PRADESH) PIN-2300001 PH :05342-236057/9415229257

RAI-BARELI

1186.** STANDARD GARAGE (4429), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE,RAE BAREILLY PIN-229001 PH:0535-2701320.

RAMNAGAR

1187.## MAHI AUTOMOBILES (5532), SHANKARPUR RAMNAGAR.DISTRICT -NAINITAL.UTTRAKHAND PIN-244715 PH:05947-254740.

RAMPUR (U.P)

1188.## FIZZA MOTORS (2241), NEAR AMBEDKAR PARK,CIVIL LINES,RAMPUR (U.P.) PH:0595-2355009.

1190.## AMBIKA MOTORS (1050), PATEL NAGAR, MURDHAWA, RENUKUT, SONBHADR A (U.P.) PIN-231217

PIN-210431

1189.## MARUTI POINT (4228), ROOP NAGAR,

PH:05280-202427/9415331721.

BUDHOLIYANA, NEAR BUS STAND, ORAI

ROAD, RATH, DIST. HAMIRPUR (U.P)

PH:05446-252238. RIHAND NAGAR

RENUKUT

1191.## OUDH MOTORS (4421), RIHAND NAGAR.SONEBHADHRA.(U.P.) PIN-231223 PH:05446-232321/9415230855.

ROBERTSGANJ

1192.* KAMAKHYA AUTOMOBILES (4163). PIPRI BOAD BOBERTSGAN J SONEBHADRA (U.P.) PIN-231216 PH:05444-223022/9415342706

SADABAD

1193.## ASHU SERVICE CENTRE (5849), AGRA BYE R0AD.SADABAD.DISTRICT-HATHRAS.UTTAR PRADESH PIN-281306 PH:-09759594110

SAHARANPUR

1194.## GANESH CAR SERVICES (1871), OPP. REMOUNT DEPOT GATE DEHRADUN ROAD.SAHARANPUR PIN-247001 PH:0132-26626711/2613997/9358306804.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

1195.** SANSAR MOTORS PVT. LTD. (2061), 11/27 SECTOR-3, RAJINDER NAGAR, SAHIBABAD, DISTT. GHAZIABAD PIN-201005 PH:0120-4109879/4109880. 1196.## POOJA MOTORS (3562), TEELA

MORE, SHAHBAJPUR, LONI, DISTT. GHAZIABAD (U.P.) PIN-201010 PH:0120-9810986463.

1197.## MEHAR AUTOMOBILES (3576), 116/1 NEAR GDA MARKET G.T. ROAD KATORI MILL MOHAN NAGAR GHAZIABAD PIN-201007 PH:-9711201557/9871832662

1198.** MOTOR MAGIC AUTO ZONE (4462), 4/29-A SITE-IV INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD PIN-201007 PH:0120-4163108/4163109.

1199.** PANDIT AUTOMOBILES (4647), 3/1/1 SITE-IV. INDUSTRIAL AREA, SAHIBABAD, OPP KAUSHAMBI, GHAZIABAD, (UTTAR PRADESH) PIN-201005 PH:0120-2776808/4114808.

CAMPII A

1200.## SUBHAM SERVICE CENTRE (4042), NEAR NEHA KOTHI ROAD, SANDILA, HARDOI PIN-241204 PH:05854-270443.

SHAHJAHANPUR

1201.## SUPER AUTO (3135), OLD DIST, HOSPITAL ROAD.SHAHJAHANPUR (U.P.) PIN-242001 PH:05842-223545.

SHAMLI

1202.## ROYAL MOTORS (5277), PANIPAT KARANA BOAD SHAMILSHAMI LUTTAR PRADESH PIN-247776 PH:-9837138064/61

SHIKOHABAD

1203.## KUMAR MOTORS (5575), SUBHASH TIRAHA. AGRA GATE - SIKOHABAD.DISTRICT -FEROZABAD.UTTAR PRADESH PIN-205135 PH:-9411937033.

SIDDHARTH NAGAR

1204.## MARUTI CARE CENTRE (2736), OPP. SIDDHARTH SCHOOL.AZAD NAGAR.SIDDHARTH NAGAR.(U.P.) PIN-272207 PH:05544-22090

SIKANDRABAD

1205.## NALIN AUTOS (1725), G.T. ROAD, SIKANDRABAD, DISTT. BULANDSHAHAR, (U.P.) PIN-203205 PH:05735-222802/9412227155.

SIRSAGANJ

1206.## SATGURU MOTORS (3739), BYE PASS KAURARA ROAD, SIRSAGANJ DISTT. FIROZABAD, ETAWAH-AGRA ROAD, SIRSAGANJ (U.P.) PIN-205130 PH:05676-22563

SONEBHADRA

1207.## OUDH SERVICE STATION (2925), SHAKTI NAGAR, SONEBHADRA PIN-231222 PH:05446-232321.

SULTANPUR

1208.## HINDUSTAN AUTO GARAGE (1360), BARHAIYA BEER RD., (ADJ. BUS STAND),SULTANPUR (U.P) PIN-228001 PH:05362-222838

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

VARAMACI

1209.** MISHRA ENGINEERS (4957), S-4/68,NAI BASTI, PAHARIA, VARANASI, UTTAR PRADESH PIN-221002 PH:0542-9415301483.

UTTARAKHAND

BAZPUR

1210.## TARAI AUTOMOBILE ENGG WORKS (4459), GUBUTEG BAHADUR BOAD U.S. NAGAR, BAZPUR, UTTARANCHAL PIN-262401 PH:05949-281342/9412945672

BHAGESWAR

1211.## SHREE ISHT DEV AUTOMOBILES (4570), GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTARANCHAL PIN-263642 PH:05963-220699/220149/9412094543.

DEHRADUN

1212.## ASHIRWAD MOTORS (5144), CANAL ROAD,NEAR BALLUPUR CHOWK, DEHRADUN, UTTARANCHAL

PH:0133-6454745/9997232599. 1213.## KRIPALESHWARI MOTORS (4475), HARIDWAR ROAD,NEAR LIC BUILDING, DEHRADUN, UTTARANCHAL PIN-248001

PH:0135-2671712/9412963384. SHREE RAM AUTOMOBILES (5066), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN,UTTARANCHAL PIN-248001 PH:01360-9897731200/253601.

1215.## UNIVERSAL AUTOMOBILES (5574), F-107,UPSIDC INDUSTRIAL AREA,SELA QUI, DEHRADUN, DISTRICT -DEHRADUN,UTTRAKHAND PIN-248011 PH:0315-9927334346

1216.## HANS LAKHERA MOTORS (5032), JOGI WALA BING BOAD NATHAPUR APPARTMNT NEAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN

PH:0133-9897456677/2678844/9412933332.

PIN-248001

HARYAL SERVICE STATION (5340), BAREILY ROAD, GUAJALL-TALL HALDWANLDISTRICT -NAINITAL, UTTARAKHAND PIN-263139 PH:-9997200227.

1218.## EXCEL MOTORS & ENGG. WORKS (3827), BAMPUR BOAD NEAR STM FOREST HOSPITAL, HALDWANI, NAINITAL PIN-263136 PH:05946-235384.

RATH

HARIDWAR

1219.## PREET MOTORS (5561), SHRI NATH NAGAR,RAILWAY ROAD, JAWALPUR -HARDWAR, DISTRICT -HARDWAR,UTTARANCHAL PIN-249407 PH:01334-250094;9412022430.

KANKHAL

1220.## HIGHWAY MOTORS (4261), NEAR SINGH DWAR CHOWK,ROORKE-HARDWAR BY PASS ROAD,POST OFFICE, QURIKULL KANGRI,KANKHAL, DISTT HARDWAR PIN-380052 PH :01334-24699, 243125,

KASHIPUR

1221.## KRISHNA AUTOMOBILES (4824), MORADABAD ROAD,KASHIPUR PIN-244713 PH:05947-276079.

9837039946,9412074578,9412072889.

1222.## OM MOTORS (4329), NH-74 KASHIPUR MORADABAD HIGHWAY,(KHASRA NO.1343), KASHIPUR,DIST. UDAM SINGH NAGAR (UTTARAKHAND) PIN-244713 PH :05947-273944/ 9837719072.

KICHHA

1223.## SHREE SHYAM JI AUTO SERVICE CENTRE (5648), BAREILY ROAD, KICHHA,DISTRICT-UDHAM SINGH NAGAR,UTTRAKHAND PIN-263148 PH: 05944-265033/9837033377.

KOTDWARA

1224.## BHATT MOTORS (1775), NAJIBABAD ROAD,KOTDWARA,(GARHWAL),UTTARANCH AL PIN-246149 PH -01382-225553(9412)81333

LAKSAR

1225.# SHIV AUTOMOBILES (5560), 110/1/3 BALAWALI ROAD,LAKSAR,DISTRICT -HARIDWAR,UTTARANCHAL PIN-247663 PH :-9719054422

LOHRIASAL MALLA

1226.## ANJANI SERVICE CENTRE (5552), NEAR BLOCK OFFICE, KALADHUNGI ROAD,LOHRIASALMALLA,DISTRICT -NAINITAL,UTTARAKHAND PIN-263139 PH: -9837098699.

NEW TEHRI

1227.## BHAGWATI SERVICE CENTER (4472), SECTOR-8E/537,NEAR STADIUM, BARURI,NEW TEHRI,GARWAL (UTTRANCHAL) PIN-2249001 PH:01376-232341/9412394776;9759282913.

PAURI

1228.## KRISHNA MOTORS (5957), SHRINAGAR ROAD, NEAR KARGIL SHAHEED PETROL PUMP, PAURI, DISTRICT-PAURI GARHWAL, UTTRANCHAL PIN-246001 PH: 01368-222677.

PITHORAGARH

1229.# MAHAKALI MOTORS (4142), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTARANCHAL PIN-262501 PH: 05964-9412168976/9897922203. CAR CARE CENTER (4371), CANT ROAD, PITHORAGARH, UTTARANCHAL

PH:05964-228388/9412428288.

PIN-262501

1231.## LATIF MOTOR WORKS (3269), SADAR BAZAR,GANDHI CHOWK,RANIKHET,(UTTARANCHAL) PIN-263645 PH: 05966-220225.

RISHIKESH

1232.* RAKESH AUTOMOBILE ENGINEERS (1464), OPP. BHARAT MANDIR INTER COLLEGE,HARDWAR ROAD,RISHIKESH PIN-249201 PH:0135-2430918/2431918/9412051655.

1233.## GARHWAL GASOLINE STATION (3639), H.P.
PETROL PUMP, LAXMAN JHULA
ROAD, RISHIKESH PIN-249 201
PH : 0135-430351, 438626, 432617.

ROORKEE

1234.## DUM DUM ENGG. WORKS (1343), 72 CIVIL LINES,NEW HARDWAR ROAD,ROORKEE (U.P) PIN-247667 PH :01332-272903/9412070962.

1235.## ROORKEE AUTO SCANNERS (2675), 786
WEST AMBER TALAB,RAM NAGAR
CHOWK,ROORKEE PIN-247667
PH :01332-262467/9837032367.

RUDRAPRAYAQ

1236.## RAJESHWARI AUTOMOBILES (5669), BADRINATH ROAD, GHOLTIR, RIUDRAPRAYAG, DISTRICT -RUDRAPRAYAG, UTTARANCHAL PIN-246141 PH:9997771107.

** A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

RUDRAPUR

1237.** CORUS MOTORS (5059), D1 D2.20/1, NANITAL ROAD,DISTRICT - U.S. NAGAR,UTTARAKHAND PIN-263153 PH :05944-9927500007/241310.

1238.** BALAJI SERVICE CENTRE (1335), HALDWANI ROAD, RUDRAPUR (NAINITAL), (U.P) PIN-248197 PH: 05944-243385.

SIMLI

1239.## PINDER AUTOMOBILES (5527), PLOT #
C6-C9,INDUSTRIAL AREA,NEAR
KARNAPRAYAG - SIMLI,UTTARANCHAL
PIN-251001

: 01363 - 9412977249 / 9837424700 / 247412 / 24755

SITARGANJ

1240.## SHRI RAM MOTORS (5833), AGARWAL BHAWAN, BYE PASS ROAD, SITARGANJ, DISTRICT-UDHAM SINGH NAGAR, UTTARANCHAL PIN-242605 PH :05948-254083/9927131111.

VIKASNAGAR

1241.## SOUMYA MOTORS (4272), CHAKRATA
ROAD,BEHIND STATE BANK OF
INDIA,VIKASNAGAR,DISTT. DEHRADUN
(U.A) PIN-248198
PH: 01360-252951/ 9412382490/9319799470.

WEST BENGAL

ALIPUR DUAR

1242.## PRADDYOUT AUTOMOBILE WORK (653), PURAN BAZAR,P.O. ALIPURDUAR,JALPAIGURI,WEST BENGAL PIN-736121 PH:03564-255410/9434192320/9832487473.

ARAMBAGH

1243.## MARUTI ZONE (3748), VILLAGE - GARBARI, P.O. DIHIBAIRA,P.S. ARAMBAGH,DISTT. HOOGHLY,WEST BENGAL PIN-712601 PH :03211-258899, 9749139776.

ASANSOL

1244.** WEST END MOTORS (1665), KALYANPUR
SATELITE TOWNSHIP PROJECT, KANYAPUR
LINK ROAD, PALASHOIAH
MORE,PO-KANYAPUR,ASANSOL,
WESTBENGAL PIN-713341
PH :0341+9233317323.

1245.## AGARWALLA AUTO SERVICE (3122), 181 BURNPUR ROAD,P.O. BURNPUR,DT. BURDWAN,(WEST BENGAL) PIN- 713 325 PH :0341-2255300/9832123211.

BAHRAMPUR

1246.## NARAYAN BUS SERVICE (656), 17 RABINDRA THAKUR ROAD,P.O. BAHARAMPUR (WEST BENGAL) PIN-742101 PH: :03482-224516/9732628065.

1247.* MARUTI CARE (3674), NH-34 UTTARPARA MORE,P.O.
RADHARGHAT,BERHAMPORE,MURSHIDABA D (WEST BENGAL) PIN-742187
PH :03482-226428)9732444000/9434394040.

BALURGHAT

1248.## GHOSH AUTOMOBILES (2644), NARAYANPUR,BALURGHAT,DAKSHIN DINAJPUR PIN-733 101 PH: 03522-255411, 9434963493/9474141384.

BANDEL

1249.## CAR HOSPITAL (3675), 2 NO. NETAJI
PARK,G.T. ROAD,(OPP. MILITARY
COLONY),BANDEL (WEST BENGAL)
PIN-712123
PH:033-26318639/9831264416/9883178879.

BARRACKPORE

1250.## SAMANTA AUTOMOBILES PVT. LTD. (268), CHIRIMORE,BARRACKPORE.NORTH -24 PARGANAS,WEST BENGAL PIN-743101 PH .033-2512082/25420067/5600067/56000820/ 9831823079.

1251.## SPEED AUTOMOBILE (5445), BARRACKPORE-BARASAT ROAD,SEWLI, BARRACKORE,DISTRCIT - 24-PARAGANAS (NORTH),(WEST BENGAL) PIN-700121 PH:033-9836561219.

BIRPARA

1252.## PRATAP ENGINEERING WORKS (5246), NH-31, DEMDIMA,PO-BIRPARA,DISTRICT JALPAIGURI,WEST BENGAL PIN-735204 PH :03563-9434216975/9468023768/266486.

BOLPUR

1253.## BASUNDHARA AUTOMOBILES (4241), GOAL PARA,BOLPUR SURI ROAD,BOLPUR PIN-731204 PH: 03463-254644, 9832132851.

CHINSURAH

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1254.## UNIVERSAL AUTO REMEDY (648), C/O MR. BN CHATTERJEE,BHAGABOTI DANGA KHADINA MORE,PO CHINSURAH,HOOGHLY PIN-712102

PH:033-9748457883/26860303/26860090.

COOCH BEHAR

1255.## PROVA AUTOMOBILES (2846), CHAKCHAKA CHECK POST,NH-31,COOCH BEHAR, (WEST BENGAL) PIN-736101 PH

:03582-258082/236204/9434174309/943417430

DHALKOLA

1256.## ZAINAB MOTORS (5738), NEAR NEW BUS STAND, NH-34, DALKHOLA, NORTH DINAJPUR, WEST BENGAL PIN-733201 PH : 9002524077.

DINHATA

1257.## DINHATA AUTOMOBILES (5739), BALRAMPUR ROAD PO/PS: DINHATA,DISTRICT-COOCHBEHAR,WEST BENGAL PIN-736135

PH:03581-259087/9333937795/9434256518.

DURGAPUR

1258.## THE QUICKEST (2879), BANS KOPA,(NEAR PARADISE INN),G.T. ROAD,DURGAPUR PIN-713212 PH :0343-2520805/9832165126/9749865126.

FARAKKA

1259.** SPEED WHEEL SERVICE CENTRE (1056), TTS HCC COLONY,FARAKKA,P.O. NABARUN,DISTT. MURSHIDABAD (W.B.) PIN-742236 PH

:03485-252691/252269/9434101917/943475226

HABRA

1260.## EVERGREEN AUTOMOBILES & ENGINEERING WORKS (4666), BIRA JOYPUL HABRA,NH-35,WEST BENGAL PIN-743234 PH .03216-269852/9333737566/269852/983048523

2/ 9332906057. HALDIA

1261.** S.D. REPAIRING CENTRE (2168), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY, HALDIA, DISTT. MIDNAPORE (W.B.) PIN-721606 PH: 03224-252152/645146)9434021405.

HOWRAH

1262.## GREWAL AUTO SERVICE (1570), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH PIN-711102 PH : 9831017806/26787250/26787024.

1263.## WHEEL WORKS (5063), GIP COLONY JAGACHA,KONA EXPRESS WAY.HOWRAH,DISTRICT - HOWRAH,WEST BENGAL PIN-711112 PH:033-9830044007/26575467.

JAIGAON

1264.** SHAKTI TRADING CO. (770), M.G. ROAD, JAIGAON PIN-736182 PH: 0356-263241, 9547540605, 9233780027.

JALPAIQURI

1265.## AUTOSTEL (646), SAKOAJHORA,P.O. GAIRKATA,DIST. JALPAIGURI,(W.B.) PIN-735212 PH: 03567-223116/9934111868.

1266.** S.S. AUTOMOBILES (3664), ASSAM MORE, JALPAIGURI, WEST BENGAL PIN-735101 PH :03561-9434340252/256565.

KALYANI

1267.## GOPAL AUTO SERVICE CENTRE (3373), B.K. EXPRESSWAY,BUDHHA PARK,KALYANI,NADIA (WEST BENGAL) PIN-741235

PH :033-28522481/9831010481.
1268.## KIRISHNA ENGINEERING WORKS (5270),
PLOT NO.199, KANTABELE O.N.G. C
ROAD, JRALYANI EXPRESS ROAD, PO:
GHORAGACHHA, PS - KALYANI, WEST
BENGAL PIN-741225
PH :-933964302/9378283965.

KOLKATA

1269.** AUTOKRAFT (620), F 1/G-3,RIC IND. ESTATE UPEN BANERJEE ROAD,PARNASREE,CALCUTTA (W.B)

ROAD,PARNASREE,CALCUTTA (W.B) PIN-700060

:033-24925747/24925299/24078938/983033009 0. 1270.* BHAWANIPUR AUTO CENTRE (628), 49 S.P.

MUKHERJEE ROAD, CALCUTTA, (W.B) PIN-700 026 PH:033-24753130/24766011/9831783130.

1271.## CAMAC (621), 2/E CAMAC STREET,CALCUTTA,(W.B) PIN-700016 PH:033-9831093716/22296781. 1272.** DIAL AUTOMOBILES PVT. LTD. (643), 162 A
PARY MOHAN RAY ROAD, CALCUTTA, (W.B)
PIN-700027

PH:033-24484393/9830552491.

273.** MOTORKRAFT (635), P-149 REMOUNT ROAD, CALCUTTA, (W.B) PIN-700027 PH:033-9830330090/24490737.

1274.## RUSSA ROAD SERVICE STATION (622), 30 SP MUKERJEE ROAD,CALCUTTA, (W.B) PIN-700025 PH : 033-9748757842/24533384/24551146.

1275.## YOUNG AUTOMOBILES (637), 50/2 HAZARA ROAD, CALCUTTA, (W.B) PIN-700019 PH :033-24753944/9433552047/ 9830250904. 1276.* DELUXE SERVICE STATION (672), P-256 257 CIT ROAD. CALCUTTA PIN-700010

:033-23710012/23630151/9830062952/9830062

1277.** NORTH POINT MOTORS PVT. LTD. (344),
DUTTO BAGAN - 3D/1 BUS TERMINUS,64/2B
BELGACHIA ROAD,CALCUTTA PIN-700037
PH 133-0830220069025560501025573826

1278.** ADAMS MOTOR WORKS (465), 61 A
SHAKESPEARE
SARANI,CALCUTTA,CALCUTTA PIN-700017
PH 1033-98311020888(22876402/22807414

79.* MARUTI LINK (1633), CK-12 SECTOR 2,SALT LAKE,CALCUTTA PIN-700091 PH :033-23586921/23590675/9433004520/9831180

421. 1280.** R.S. SERVICE CENTRE (1948), 1/2 MAHENDRE ROY

LANE,CALCUTTA,CALCUTTA PIN-700046 PH :033-9831036017/9903992685/65293726 1281.## AUTO SCAN (2272), 100/1 B.T.

ROAD, CALCUTTA, CALCUTTA PIN-700090 PH: 033-9231622309/25315066. 282.* PRINCE MOTOR WORKSHOP (2845), TM -2/8 TEGHARIA, P.O. HATIARA, CALCUTTA

PIN-700059 PH :033-9836392945/ 9831555451/25703948. 283.## INTERNATIONAL AUTO WORKS (2648), 48-C

SOUTH TANGRA ROAD, KOLKATA PIN-700046 PH :033-9331265805/23282119.

1284.## SONA AUTO UDYOG (3144), 1404 PURBACHAL MAIN ROAD,OPP. KALIKAPUR MARKET,KOLKATA PIN-700099 PH: :033-9331054525/24844373/24840682. 1285.## CLASSIC ENGINEERING WORKS (3171), C/O CLASSIC ENGINEERING WORKS,620 D H ROAD BEHALA INDUSTRIAL ESTATE,PLOT NO.G-1,KOLKATA PIN-700034 PH.033-9831773168/24477502.

1286.## FORTUNE AUTO CARE (3167), 16 G/6 KHANPUR ROAD,KOLKATA,(W.B.) PIN-700047

PH :033-24214439, 9831754527, 9831737980.

1287.## SUNNY AUTOMOBILE (3166), 105/H/18

BIDHAN NAGAR ROAD,KOLKATA PIN-700067

PH :033-9830392097/23562693. 1288.## ULTRA CRAFT (4643), 103/1B,RAJA

DINENDRA STREET,KOLKATA,WEST BENGAL PIN-700006

PH:033-9830741255/23525006/5161.

1289.## ROYAL CALCUTTA AUTOMOBILES (4651), 68 BROAD STREET,KOLKATA PIN-700019 PH :033-9831/99851/ 9883250911/22892829

1290.## TECHNO AUTO WORKS (4669), 619, RAJA
RAM MOHAN ROY ROAD,BIREN ROY ROAD
EAST,BEHALA,KOLKATA PIN-700008
PH 1033,9830111258/24068823/9339

1291.## ZENITH AUTO (5529), BOHLA NATH SARANI,CHINAR PARK,RAJARHAT, KOLKATA-700157,DISTRICT -KOLKATA WEST BENGAL PIN-700059

KOLKATA,WEST BENGAL PIN-700059 PH :033-9830643781/9830474175/9433904110/943

3951707/65689931. 1292.## ZOVAN AUTOMOBILES PVT. LTD (5578),

42/A1B,RAJA SANTOSH ROAD,KOLKATA,DISTRICT - KOLKATA,WEST BENGAL PIN-700027

PH: 033-24792490/24498004/9874795704.

RAJ AUTO SERVICE (5338), 35 CANAL EAST ROAD,KOLKATA,WEST BENGAL PIN-700011
PH: 033-9831103901/23542996.

KRISHNANAGAR

1294.## TARA MA AUTOMOBILES (1947), BATHJANGLA,KRISHNA NAGAR,DISTT. NADIA (W.B.) PIN-741101

PH::03472-2722371/652357/9431054765.
HIGHWAY SERVICE CENTRE (4455), ASHA
DEEP, NH-34,KRISHNANAGAR,NADIA,WEST
BENGAL PIN-741101
PH::03472-9434165494/9831186730.

MADHYAMGRAM

96.* PAUL AUTOMOBILES (671), JESSORE ROAD,MADHYAMGRAM,DOHARIYA PO GANGANAGAR,DISTT 24 PGNS NORTH PIN-700129 PH :033-9830239001/69904062/28261051.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

1297.# J. G BEHAL AUTO (4653),
DOLTALA,GANGANAGAR,MADHYAMGRAM,K
OLKATA (WEST BENGAL) PIN-700129
PH :033-9831094430/25268294/64511516.

IALDA

1298.## ABHISEK AUTO CENTRE (1976),
N.H.34,NEAR ST. XAVIER SCHOOL,P.O.
MOKDUMPUR,DISTT. MALDA (W.B.)
PIN-732101
PH:03512-9434065360/253987.

MIDNAPORE

1299.# CHATTERJEE AUTOMOBILE (4960), INDUSTRIAL GROWTH AREA,KHASJANGAL (NEAR KERANICHOTI),MIDNAPORE,DISTRICT-PAC HIM MIDNAPORE PIN-721101 PH -9434043658

NARENDRAPUR

1300.## A.M. AUTOMOBILES (3175),
KAMALGAZI,NARENDURPUR,KOLKATA,(WE
ST BENGAL) PIN-700103
PH: 033-9836038971/2477 3402.

PURULIA

1301.## BANERJEE AUTO SERVICE (640), S.P.BANERJEE ANALBILA VILLA,RANCHI ROAD,PURULIA,(W.B) PIN-723101 PH :03252-9434656942/223228.

RAGHUNATHGANJ

1302.## AUTO WHEEL (4427), UMARPUR,
NH-34,GHORSHALA, RAGHUNATH
GANJ,MURSHIDABAD (WEST BENGAL)
PIN-742225
PH: 03488-943408366/267281.

RUPNARAYANPUR

1303.## L. K. MOTORS (3477), NH 2 BYPASS,POINT (CHOWRANGI),RUPNARAYANPUR (CHALBALPUR),BURDWAN PIN-713343 PH :0341-2513800)9434107787.

SILIGURI

1304.# BHAWANI MOTOR GARAGE (4944),
BIDYASAGAR PALLY,NEAR RISHI BHAWAN,
BURDWAN ROAD,SILIGURI,WEST BENGAL
PIN-734405
PH. 93659-9434152177/ 9434376860/2500418.
1305.# MUM AUTO WORKS (4835), NEAR DELHI
PUBLIC SCHOOL,PANCHANAI
(DAGAPUR),SILIGURI,WEST BENGAL
PIN-734003
PH. 9832068537.

1306.** CAR CARE (1950), B.T.
ROAD, SODEPUR, P.O.: SUKCHAR, 24
PARGANAS (NORTH) PIN-700115
PH
:033-25830783/25832786/25635800/983004917

SRIRAMPUR

1307.* MARUTI AUTO CENTRE (2167), 85/18 G.T.
ROAD (WEST), PO:
MULLIKPARA, SRIRAMPUR, HOOGLY (W.B.)
PIN-712203

PH:033-9831299543/9331884559/26225634.

SURI

1308.## PANCHANATH AUTOMOBILES (4456), BROJARGRAM BARABAGAN, BAKRESWAR PATHARCHAPURI HIGHWAY MORE,SURI, WEST BENGAL PIN-731101 PH:03462-9831823079/25920182.

ULUBERIA

1309.## APSARA SERVICE STATION (3374), NEAR BANITABLA CHECKPOST, ON NH-6, ULUBERIA, (W.B.) PIN-711316 PH :033-9836084524/26610656.

SODEPUR

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

MEMO		

MEMO		

MEMO		

	SPECIFICATIONS
MEMO	

SPECIFICATIONS				
MEMO				