


For vehicle fitted with CNG fuel system, use Ertiga CNG Supplementary Owner's Manual, available with the vehicle.

Keep the booklet with the vehicle at all times.

Contains Warranty policy and important information on Safety, Operation & Maintenance.

Part No. 99011M72R12-74E October, 2023 (ENG) This Owner's Manual & Service Booklet applies to ERTIGA models. produced by MARUTI SUZUKI INDIA LIMITED.

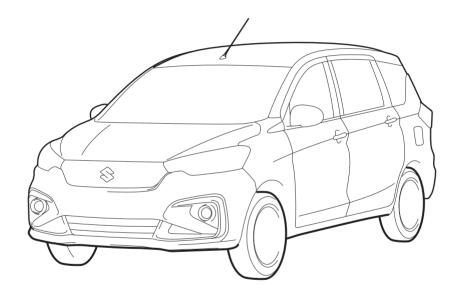

NOTE: The illustrated Model is one of the ERTIGA series Accessories shown in the picture are not part of standard equipment

© Copyright 2023 **Maruti Suzuki India Limited.** All rights reserved. No part of this manual can be reproduced in any manner whatsoever or transmitted in any form or by any means without prior written consent of Maruti Suzuki India Limited.

FOREWORD

This manual is an essential part of your vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new MARUTI SUZUKI and review the manual from time to time. It contains important information on safety, operation and maintenance. You are invited to avail the three Free Inspection Services as described in the manual. Three free inspection coupons are attached to this manual. Please show this manual to your dealer workshop while you take your MARUTI SUZUKI for any Service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

WARNING/ CAUTION/NOTICE/

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

A WARNING

Indicates a potential hazard that could result in death or serious injury.

A CAUTION


Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

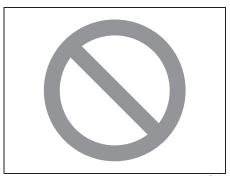

75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

NOTE:

- Words like car, model/variant are invariably used in this manual to denote the "Vehicle".
- Pictorial representations used in this manual are for reference purposes only.

MODIFICATION WARNING

WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorised workshop or qualified service technician for advice on installing such mobile communication equipment.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

"WARNING"



Vehicle may break-down, meet with an accident or catch fire due to

- 1. Installation of
 - High wattage bulbs
 - Non genuine lamps / horns
 - Modified suspension / wheels
 - Non genuine parts/accessories etc.
- 2. Retrofitment of LPG / CNG fuel systems/kits.
- 3. Usage of domestic LPG.
- 4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may breakdown or engine may fail due to

- 1. Water entry into the engine (which may lead to hydrostatic lock).
- 2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.

NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

"CAUTION"

- 1. Retro-fitment of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
- 2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
- 3. Usage of domestic LPG for running vehicles is prohibited as per law.
- 4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
- 5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning.(reduced contact area between tire and road due to presence of water)
- 6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
- 7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
- 8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
- 9. Always wear seat belt at all the times.
- 10. Do not use mobile phone while driving.
- 11. Avoid Smoking in the car, live bud thrown in car may cause fire.
- 12. Do not put any body part under the vehicle when it is supported on a Jack.
- 13. Do not use non-genuine accessories in your vehicle.
- 14. Do not fit accessories from unauthorized workshops/sources.
- 15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
- 16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
- 17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
- 18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
- 19. Do not check the engine room / open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
- 20. Avoid driving when vehicle has met with an accident. Before driving, Please contact with authorized MSIL dealership.

VIN:													
MODEL:							OWNER						
VARIANT:							ME & DRES	3					
COLOUR:						7.5.	51(20						
ENGINE NO.:						COI	NTAC	ΓNO.					
KEY NO.:						E-m	ail ID:						
INVOICE DATE:							LING						
ODOMETER READING					KM		DEALER NAME & CODE						
REGISTRATION NO.:													
BATTERY MAKE:							DEALER SHOWROOM ADDRESS &						
BATTERY NO.:						ADI							
BATTERY BATCH							NTAC ⁻ AMP)	I NO.					
TYRE	N	IAKE	BA	тсн (CODE								
Front Right							NTAC						
Front Left						APF		MENT					
Rear Right						& S	UPPO	RT					
Rear Left													
Spare													

For any assistance with regard to our product, please contact General Manager/Works Manager at any of our Dealer or Authorised workshop. For additional enquiry, you may contact our Regional Office or Service Department. The addresses and phone numbers are given in Service Network section of this Manual.

CUSTOMER SERVICE MAINTENANCE RECORD (to be filled by customer)

INSPECTION SCHEDULE	DATE OF SERVICE	MILEAGE (KM)	NAME OF SERVICING WORKSHOP
1st Free inspection service - 1 Month / 1000 KM*			
2 nd Free inspection service - 6 Months / 5000 KM *			
3 rd Free inspection service - 12 Months / 10000 KM*			
1 st Paid inspection service - 24 Months / 20000 KM*			
2 nd Paid inspection service - 36 Months / 30000 KM*			
3 rd Paid inspection service - 48 Months / 40000 KM*			
4 th Paid inspection service - 60 Months / 50000 KM*			
5 th Paid inspection service - 72 Months / 60000 KM*			
6 th Paid inspection service - 84 Months / 70000 KM*			
7 th Paid inspection service - 96 Months / 80000 KM*			
8 th Paid inspection service - 108 Months / 90000 KM*			
9 th Paid inspection service - 120 Months / 100000 KM*			
10 th Paid inspection service - 132 Months / 110000 KM*			
11 th Paid inspection service - 144 Months / 120000 KM*			
12 th Paid inspection service - 156 Months / 130000 KM*			

^{*} Interval: This interval should be judged by month(s) or odometer reading, whichever comes first.

Maruti Suzuki Network can be viewed by installing below Mobile Apps:



Maruti Suzuki Rewards app ensures a hassle free car ownership experience. Get easy access to all the services and information you need by downloading the app



1ST. FREE INSPECTION COUPON & 1ST. FREE INSPECTION COUPON & 1ST. FREE INSPECTION COUPON

(Customer's copy)

(1 MONTH or 1,000 KM whichever comes first)

Model N	lame									
Model Code*										
VIN :										
Engine No. :										
Mileage										
Invoice Date						D	M	M	Υ	Υ
Date of	Inspe	ction			D	D	M	M	Υ	Υ
Registra	ation N	٧o.								
Custom	er Na	me								
Ph. No.										
Serv	ice v	vork	sho	p / M	ASS	Co	de (f	ill be	low)

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop In charge Signature

For periodic maintenance schedule, refer to "Inspection and Maintenance" section of this manual

(Selling dealer copy)

(1 MONTH or 1,000 KM whichever comes first)

Model Name								
Model Code*								
VIN:								
Engine No. :								
Mileage								
Invoice Date				D	M	M	Υ	Υ
Date of Inspection			D	D	M	M	Υ	Υ
Registration No.								
Customer Name								
Ph. No.								

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop In charge Signature

(Servicing W/S copy)

(1 MONTH or 1,000 KM whichever comes first)

Model Name									
Model Code*									
) //h i									
VIN:									
Engine No.:									
Mileage									
Invoice Date	D	D	M	M	Υ	Υ			
Date of Inspe	Date of Inspection						M	Υ	Υ
Registration N	مار								
Registration	١٥.								
Customer Na	me								
Ph. No.									
Service v	vorks	sho	p / M	ASS	Co	de (f	ill be	low)
		_							

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop In charge Signature

1ST, FREE INSPECTION COUPON

(Servicing W/S copy)

(1 MONTH or 1,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

1ST. FREE INSPECTION COUPON

(Selling dealer copy)

(1 MONTH or 1,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

1ST. FREE INSPECTION COUPON

(Customer's copy)

(1 MONTH or 1,000 KM whichever comes first)

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

- Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

2ND. FREE INSPECTION COUPON & 2ND. FREE INSPECTION COUPON & 2ND. FREE INSPECTION COUPON

(Customer's copy) (6 MONTHS or 5,000 KM whichever comes first)

Model Nar	me								
Model Cod									
VIN :									
Engine No									
Mileage									
Invoice Date						M	M	Υ	Υ
Date of Ins	spection			D	D	M	M	Υ	Υ
Registratio	on No.								
Customer	Name								
Ph. No.									
Servic	e work	sho	p / M	ASS	Co	de (f	ill be	low)

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop In charge Signature

For periodic maintenance schedule, refer to "Inspection and Maintenance" section of this manual

(Selling dealer copy) (6 MONTHS or 5,000 KM whichever comes first)

Model Name						
Model Code*						
VIN:						
Engine No. :						
Mileage						
Invoice Date	D	D	M	M	Υ	Υ
Date of Inspection	D	D	M	M	Υ	Υ
Registration No.						
Customer Name						
Ph. No.						
Service workshop /	MASS	Co.	de (f	ill be	elow	·)

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop In charge Signature

(Servicing W/S copy)

(6 MONTHS or 5,000 KM whichever comes first)

Model Nar	ne								
Model Cod	Model Code*								
VIN:	\vdash								
Engine No	.:								
Mileage									
Invoice Da	D	D	M	M	Υ	Υ			
Date of Ins	spection			D	D	M	M	Υ	Υ
Registratio	n No.								
Customer	Name								
Ph. No.									
Servic	e work	sho	p / M	ASS	Co	de (f	ill be	low)

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop In charge Signature

2ND, FREE INSPECTION COUPON

(Servicing W/S copy)

(6 MONTHS or 5,000 KM whichever comes first)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

2ND. FREE INSPECTION COUPON

(Selling dealer copy)

(6 MONTHS or 5,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

2ND, FREE INSPECTION COUPON

(Customer's copy)

(6 MONTHS or 5,000 KM whichever comes first)

Stamp of Selling dealer
(Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

3RD. FREE INSPECTION COUPON 💚 3RD. FREE INSPECTION COUPON 🤟 3RD. FREE INSPECTION COUPON

(Customer's copy) (12 MONTHS or 10,000 KM whichever comes first)

Model Nar	me								
Model Cod	de*								
VIN :									
Engine No	.:								
Mileage									
Invoice Date				D	M	M	Υ	Υ	
Date of Inspection				D	D	M	M	Υ	Υ
Registratio	on No.								
Customer	Name								
Ph. No.									
Service workshop / MASS Code (fill below)									

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop In charge Signature

For periodic maintenance schedule, refer to "Inspection and Maintenance" section of this manual

(Selling dealer copy) (12 MONTHS or 10,000 KM whichever comes first)

	_								
Model Name									
Model Code*									
VIN:									
Engine No. :									
Mileage									
Invoice Date				D	D	M	M	Υ	Υ
Date of Inspection			D	D	M	M	Υ	Υ	
Registration I	No.								
registration	٧٥.								
Customer Na	me								
Ph. No.									
Service v	Service workshop / MASS Code (fill below)								

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop	In charge
Signature	

(Servicing W/S copy) (12 MONTHS or 10,000 KM whichever comes first)

		_							
Model Name									
Model Code*									
VIN :									
VIIN .									
Engine No.:									
Mileage									
Invoice Date				D	D	M	M	Υ	Υ
Date of Inspection				D	D	M	M	Υ	Υ
Registration N	lo.								
Registration	v O.								
Customer Na	me								
Ph. No.									
Service workshop / MASS Code (fill below)									

COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER**

Workshop	In	charge
Signature		

3RD, FREE INSPECTION COUPON

(Servicing W/S copy) (12 MONTHS or 10,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

3RD. FREE INSPECTION COUPON %

(Selling dealer copy) (12 MONTHS or 10,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

3RD, FREE INSPECTION COUPON

(Customer's copy) (12 MONTHS or 10,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)	

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorised dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised workshop.

(2) Term:

The term of the warranty shall be twenty-four (24) months or 40,000 kilometers (whichever occurs first) from the date of invoice to the first owner.

NOTICE

Maruti Suzuki offers warranty of sixty (60) months or 1,00,000 kilometers (whichever occurs first) for Lithiumion battery & Integrated Starter Generator (ISG) in petrol model from the date of invoice to the first owner.

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, Consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.
- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
- (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
- (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
- (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.

(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer.)

- Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
- Any vehicle which has not received the service inspections prescribed in this Owner's Manual and Service Booklet.
- (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorised workshop.
- Any vehicle which has been used for purposes other than what it was designed for.
- (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
- Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
- (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
- (p) Installation and usage of domestic LPG gas/LPG Cylinder.
- (q) V-belts, hoses and gas leaks.
- (r) Any vehicle retrofitted with LPG/CNG kits.
- (s) Repainting including patchwork, bodywork and mouldings and interior trims
- (t) Corrosion, rusting of body parts and/ or components.
- (u) Any vehicle on which odometer has been changed unauthorisedly or odometer reading has been modified/ tampered with/ or not matching the service records.
- (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
- (w) Any damage(s) caused to vehicle including battery/ tyre due to parking of the vehicle in idle condition for long duration of time periods.

- (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
- (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorised workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Obligations:

NOTICE

The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorised workshop all the service inspections specified in the Maruti Suzuki "Owner's Manual and Service Booklet" and maintain adequate proof that such service inspections have been performed.
- Update and maintain the 'Customer service maintenance records' page in the "Owner's Manual and Service Booklet", whenever service inspection or warranty service is carried out on the vehicle in a Maruti Suzuki authorised workshop.
- Present the Maruti Suzuki "Owner's Manual and Service Booklet" to the Maruti Suzuki authorised workshop whenever requesting service inspections or warranty service.

If the "Owner's Manual and Service Booklet" should be lost or destroyed the owner should consult the Maruti Suzuki authorised dealer from whom the vehicle was purchased for instructions concerning replacement of the "Owner's Manual and Service Booklet".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.

NOTE:

Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.

EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities (**New Delhi, Kolkata, Mumbai and Chennai**) with effect from July 1st, 2001.

Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of invoice to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

Conditions:

- Under Emission Warranty, Warranty claims will be admitted for a prima-facie examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
- The warranty claims will only be accepted after examination carried out by Maruti Suzuki or Maruti Suzuki authorised workshop which leads to firm conclusions that the
 - a) Original settings have not been tampered in any case.
 - b) Part (as given in Annexure A) has a manufacturing defect.
 - c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.

- 3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and Maruti Suzuki authorised workshop and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and Maruti Suzuki authorised workshop has the right to charge all, or part of the cost of such examination.
- Under Emission Warranty, the parts (as given in Annexure A) will be changed free of cost, but the consumables will be charged as per actual.
- 5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and Maruti Suzuki authorised workshop will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
- 6. Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
- 7. Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest Maruti Suzuki authorised workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki authorised workshop.
- Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
- 9. Emission Warranty will not be affected by the change of owner, provided all the documents are available.

- All maintenance actions (as specified in the Owner's Manual and Service Booklet) need to be followed and recorded in the manual for emission warranty.
- 11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The receipts (for the maintenance of the vehicle as per specification in Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

Conditions under which the Emission Warranty is not APPLICABLE

- 1. In the absence of valid PUC certificate.
- Vehicle not serviced from Maruti Suzuki authorised workshop as per the schedule specified in the Owner's Manual.
- 3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
- 4. Use of non MSGP (Maruti Suzuki Genuine Part).
- 5. Vehicle that has been tampered with.
- Tampering with odometer so that the actual kilometer reading cannot be determined.
- 7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).


Annexure - A

List of parts (if applicable) covered under Emission Warranty

- Fuel Injection Assembly, Pressure Regulator, Throttle Body Assembly.
- 2. Electronic Control Module (ECM).
- 3. Intake Manifold.
- 4. EGR valve.
- 5. Ignition Coil.
- 6. Canister Assembly.
- 7. Vapour Liquid Seperator.
- 8. Fuel Tank and Filler Cap.
- 9. PCV (Positive Crankcase Ventilation) Valve.
- 10. Oil Filler Cap.
- 11. Catalytic Convertor.
- 12. Exhaust Manifold.
- 13. All Fuel Injection System related Sensors.
- 14. High Pressure Fuel Pump.
- 15. Glow Plug.
- 16. Glow Plua Controller.

TABLE OF CONTENTS

FOR SAFE DRIVING	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
INSPECTION AND MAINTENANCE	6
EMERGENCY SERVICE	7
APPEARANCE CARE	8
SPECIFICATIONS	9
SERVICE NETWORK	10

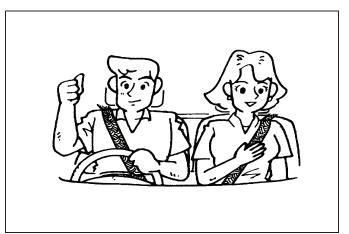


FOR SAFE DRIVING

Floor Mats	1-1
Front Seats	1-1
Rear Seats	1-3
Seat Belts and Child Restraint Systems	1-8
Child restraint system	1-21
Supplemental Restraint System (airbags)	1-27
Exhaust Gas Warning	1-39

65D231S

Floor Mats

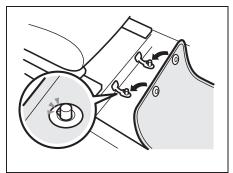

60MK020

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, MARUTI SUZUKI genuine floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, be sure to hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend using MARUTI SUZUKI genuine floor mats for proper fitting.

WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Make sure that the floor mat grommets are hooked to the fasteners.
- Never stack floor mats.
- Never use a floor mat which does not fit the floor as the same may cause hindrance/damage in vehicle and its functioning.
- Never use damaged floor mats.

Front Seats

Seat Adjustment

WARNING

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.

A WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

A WARNING

Do not place any object under the front seat. If an object becomes caught under the front seat, the following may occur.

- The seat will not be latched.
- Also the lithium-ion battery located under the front left side seat, in a model equipped with ENG A-STOP system, will be damaged.

WARNING

Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.

Adjusting Seat Position



73R003

The adjustment lever for each front seat is located under the front of the seat. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

Adjusting Seat height (if equipped)



72R0132

If the driver's seat is equipped with a seat height adjuster lever on the outboard side of the seat, raise or lower the seat by pulling up or down the adjuster lever.

Adjusting Seatbacks

A WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

NOTE:

To operate the seat back smoothly, pull pull the seat back adjustment lever in upward direction. Ensure to move seat

back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.




72R0133

To adjust the seatback angle of front seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

FOR SAFE DRIVING

Head Restraints

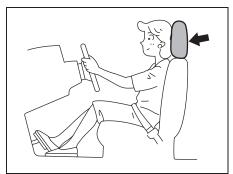

63J246

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

A WARNING

- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint.



73R0035

To raise the front head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

Rear Seats Seat Adjustment

WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

WARNING

Do not place any object under the seat. If an object gets stuck under the front seat, the following may occur.

• The seat shall not be latched.

Adjusting Seat Position (for 2nd row seats)



72R0024

The adjustment levers for 2nd row seats are located under the front of the seats. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

NOTICE

When the 3rd row seat is folded forward, adjust the 2nd row seat not to reach the 3rd row seat.

Adjusting Seatbacks

A WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

NOTE:

To operate the seat back smoothly, pull the seat back adjustment lever in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.


For 2nd row seats



72R0025

To adjust the seatback angle of 2nd row seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

For 3rd row seats

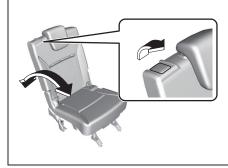

73RS017

To adjust the seatback angle of 3rd row seats, lift up the release lever, move the seatback to the desired position, and return the lever to lock the seatback in place.

A WARNING


Do not pull down the backrest more than required, the seat belt cannot show full effect.

NOTICE

Adjust the 3rd row seat after getting down from the seat. If the release lever is pulled while being seated, the backrest will suddenly collapse to max angle.

Pull the release lever fully. If the seat is made to collapse without the lock being released, movement of lock will become heavy.


Walk-in Type Seats (for 2nd row seats)

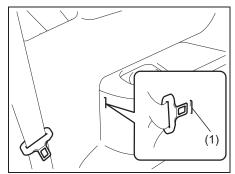

73R0038

NOTE:

To enter to or exit from the 3rd row seat, insert the tongue plate of the buckle into the part (1) before moving the 2nd row seat.

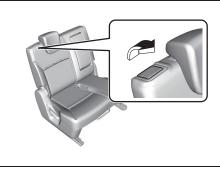

72R0026

The walk-in type seat can be moved to provide easy entry to and exit from the 3rd row seats. You can move a walk-in seat by lifting up the release lever and pushing the seatback forward.

A WARNING

- After using the walk-in function, be sure to return the folded seat back to an upright position.
- Before returning a walk-in seat to its normal seating position, make sure that the feet of the passenger in the 3rd row seat are out of the way.
- After returning the seat to its normal seating position, make sure it is securely latched.

NOTICE

Release lever is meant for easy entry purpose only. Not to be used for adjusting seatback.

Head Restraints

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

A WARNING


- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.


Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

2nd row seats

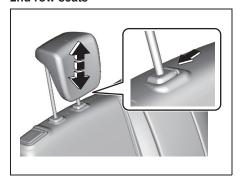

72R0134

3rd row seats

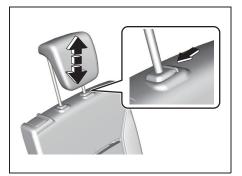

73R0040

To raise the rear head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.


When installing a child restraint system, raise the head restraint to the most upper position.

Folding Rear Seats

The rear seat of your vehicle can be folded forward to provide additional cargo space.

2nd row seats


To fold the 2nd row seat forward:

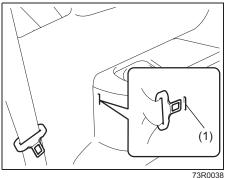

1) Insert the tongue plate of the buckle into the part (1)

NOTICE

- · When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.
- 2) Lower the head restraint fully.
- 3) Store the seat belt buckles in the seat cushion slit.

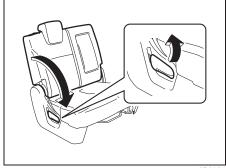

72R0027

4) Pull up the lever on the outboard side of the seat, and fold the seatback forward.

NOTICE

When the 2nd row seat head restraint reaches the front seatback, slide the front seat forward.


A WARNING

If you need to carry cargo in the passenger compartment with the 2nd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

NOTICE

When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

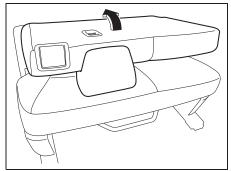

73R0006

Raise the seatback until it locks into place.

NOTE:


When the seatback is locked in the folded position, pull up the lever on the outboard side of the seat to unlatch the seatback.

After returning the seat, try moving the seatback to make sure they are securely latched.

3rd row seats


To fold the 3rd row seat forward:

1) Lower the head restraint fully.

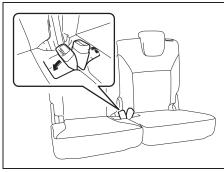

73R0207

 Stow the seat belt buckles of the right and left seating position into the pocket of the seat cushion as shown in the illustration.

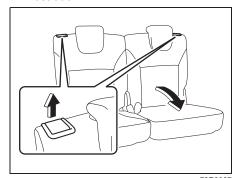

73R0007

3) Lift up the release lever on the top of seat, and fold the seatback forward.

NOTICE

When the 3rd row seat head restraint reaches the 2nd row seatback, slide the 2nd row seat forward.


NOTICE

When you are not using a seat belt, stow the seat belt buckles of the right and left seating position into the pocket first. This helps prevent being caught by the seat and being damaged.

A WARNING

If you need to carry cargo in the passenger compartment with the 3rd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

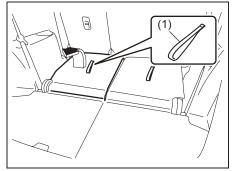

73R0008


Raise the seatback until it locks into place. When you raise the seat from back of it, pull the strap (1).

NOTICE

Do not allow items in the luggage box to extend above the top of the luggage box. Otherwise, the luggage box or cover may be damaged.

After returning the seat, try moving the seatback to make sure they are securely latched.

Seat Belts and Child Restraint Systems

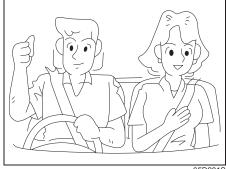


65D231S

A WARNING

Wear Your Seat Belts at All Times.

A WARNING

An airbag supplements, or adds to. the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

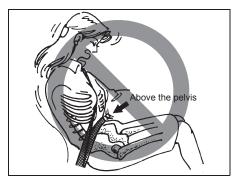

65D606


MARNING

Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision

WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.

(Continued)

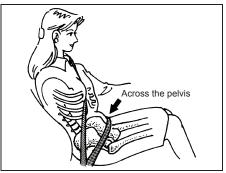


65D201

A WARNING

(Continued)

- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than one which is snug.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats.
 It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

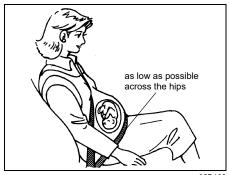

65D199

65D609

WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the diagram.
- Do not wear seat belts over hard, fragile, or sharp items such as pens, keys, eyeglasses, etc in pockets or on clothing. The pressure from seat belt on such items can cause injury in case of an accident.

(Continued)

WARNING

(Continued)

- Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.
- Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.

(Continued)

WARNING

(Continued)

- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children age 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.
- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.

(Continued)

WARNING

(Continued)


- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


Lap-Shoulder Belt

Emergency Locking Retractor (ELR)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder

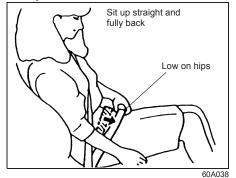


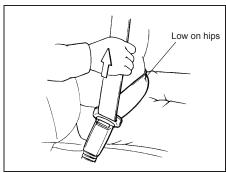

60A040


To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

All Seat Belts Except Center of 2nd Row Seat

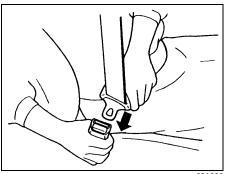

60A036

To fasten the seat belt, sit up straight and well back in the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a "click". After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

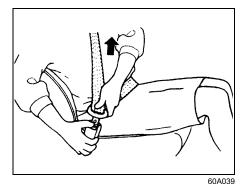


To unfasten the seat belt, push the button on the buckle and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

NOTE:

If the seat belt cannot be pulled from its fully retracted position, firmly pull the belt and release it. Then smoothly pull the belt out of the retractor.

Center Seat Belt of 2nd Row Seat Lap belt (If equipped)

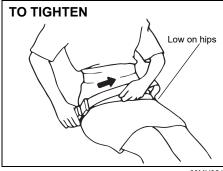


60MH021

Sit up straight and well back in the seat. To fasten the belt, pull the latch plate attached to the seat belt across your hips and press it straight into the buckle until you hear a "click". To reduce the risk of sliding under the belt during a collision, position the belt across your lap as low on your hips as possible and adjust it to a snug fit.


To tighten the belt, pull the free end of the belt across alongside the lap strap.

FOR SAFE DRIVING

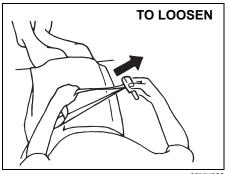

60MH022


To lengthen, release the latch plate from the buckle, pull the latch plate (adjuster) in the direction of the arrow. The latch plate should then be refitted into the buckle and the belt tightened as previously described. To unfasten the belt, press the release button on the buckle latch.

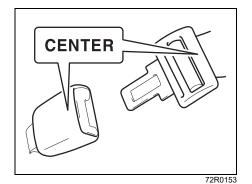

NOTE:

The word "CENTER" is marked into the buckle and tongue for the rear center belt (if equipped). The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

Seat belt reminder

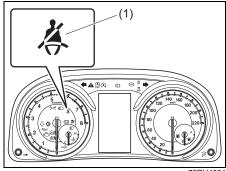

72RH4004

(1) Driver's seat belt reminder light / front passengers' seat belt reminder light / 2nd row passengers' seat belt reminder light* / 3rd row passengers' sear belt reminder light*

When the driver and/or passenger (front passenger and/or 2nd row passenger* and/or 3rd row passenger*) do/does not fasten their seat belts, the seat belt reminder light will come on or blink and a buzzer will sound to remind the driver and/or passenger (front passenger and/or 2nd row passenger* and/or 3rd row passenger*) to fasten their seat belts. For more details, refer to the explanation below.

WARNING

It is absolutely essential that the driver, front passenger, 2nd row passenger* and 3rd row passenger* wear their seat belts at all times. Persons who are not wearing seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

NOTE:

The driver's seat belt reminder light / front passengers' seat belt reminder light / 2nd row passengers' seat belt reminder light* / 3rd row passengers' seat belt reminder light* is for all the driver, front passenger, 2nd row passenger and 3rd row passenger.

*: If equipped

NOTE:

Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.

Driver's seat belt reminder

If the driver's or front passenger's seat belt remains unbuckled when the ignition switch is turned "ON" or pushed to "ON" mode. The reminder works as follows:


- 1) The driver's seat or front passenger's belt reminder light will come on.
- After the vehicle's speed has reached about 15 km/h, the driver's or front passenger's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- After step 2) has finished, the reminder light will remain on until the driver's or front passenger's seat belt is buckled.

If the driver or front passenger has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from step 1) or step 2) according to the vehicle's speed. When the vehicle's speed is below about 15 km/h, the reminder will start from step 1). When the vehicle's speed is above about 15 km/h, the reminder will start from step 2).

The reminder will be automatically canceled when the driver's or front passenger's seat belt is buckled or the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to "LOCK" (OFF).

Front passenger's seat belt reminder

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to "ON", the front passenger's seat belt reminder will activate.

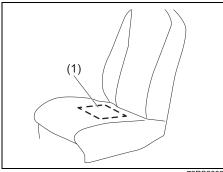

72RS2008

(1) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (1) detects whether a person is sitting in the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

A CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

NOTICE

 The sensor of the front passenger's seat belt reminder is located in the seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.

(Continued)

NOTICE

- Depending on the variety of seat cover, operation of the sensor may be adversely affected. Maruti Suzuki highly recommends that you use Maruti Suzuki genuine seat cover exclusively for this vehicle. If a seat cover is installed, consult with a Maruti Suzuki authorised workshop.
- If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.
- When sitting on the front passenger's seat, it is very important that
 the passenger sits upright, leaning
 against the seat backrest and centered on the seat cushion in order
 for the seatbelt reminder system to
 function effectively. An occupant
 sitting improperly (slouches, turns
 sideways, sits forward or sideways) may hamper the functioning
 of this system as it may not detect
 the occupant.

(Continued)

NOTE:

- If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.
- If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.

2nd row passengers' seat belt reminder (If equipped)

If the engine switch is pressed to change the ignition mode to "ON", the seat belt reminder light comes on unless all 2nd row passengers' seat belts are fastened, irrespective of the presence or absence of passenger. The 2nd row passengers' seat belt reminder works in the same manner as the driver's seat belt reminder.


3rd row passengers' seat belt reminder (If equipped)

If the engine switch is pressed to change the ignition mode to "ON", the seat belt reminder light comes on unless all 3rd row passengers' seat belts are fastened, irrespective of the presence or absence of passenger. The 3rd row passengers' seat belt reminder works in the same manner as the driver's seat belt reminder.

NOTE:

Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory of "Seat cover".

Shoulder anchor height adjuster (if equipped)

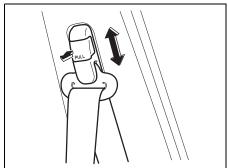


64J198

Adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To move upward, slide the anchor up. To move downward, slide the anchor down while pulling the lock knob out. After adjustment, check that the anchor is securely locked.

WARNING

Check that the shoulder belt is positioned on the center of the outside shoulder. The belt should be away from your face and neck, but not falling off your shoulder. Misadjustment of the belt could reduce the effectiveness of the seat belt in a collision.

Seat Belt Catch Hole (for 2nd row seats)

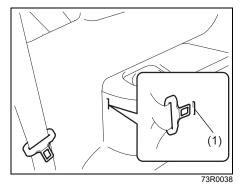

NOTE:

To enter to or exit from the 3rd row seat, insert the tongue plate of the buckle into the part (1) before moving the 2nd row seat.

NOTICE

When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

Seat Belt Inspection




65D209S

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages, and guide loops. Replace any seat belts which do not work properly or are damaged.

WARNING

Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners were activated. The airbags, the pretensioners and the load limiter only function once. In case they did not activate, consult with Maruti Suzuki authorised workshop.

Seat belt pretensioner system

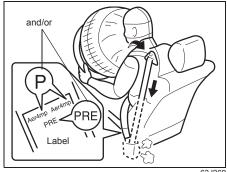

63J269

WARNING

This section describes your Maruti Suzuki vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, check the label on the seat belt at the bottom part. If the letters "p" and/or "PRE" appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

Read this section and "Supplemental restraint system (airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (air bags). The collision sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental restraint system (airbags)" section in addition to this "Seat belt pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released.

These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat adjustment" section and the instructions and precautions about the seat belts in this "Seat belts and child restraint systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by a Maruti Suzuki authorised workshop as soon as possible.

The pretensioner system of the airbag system may not work properly if any of the following conditions occur:

- If the airbag warning light on the instrument cluster does not come on briefly, when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".
- 2) If the airbag light comes on and stays on for more than 10 seconds, when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".
- If the airbag light comes on while driving.

Have both systems inspected by a Maruti Suzuki authorised workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by a Maruti Suzuki authorised workshop who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition switch has been in LOCK position or the ignition mode has been LOCK (OFF) for at least 90 seconds before per-

forming any electrical service work on your Maruti Suzuki vehicle.


Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Maruti Suzuki vehicle, ask a Maruti Suzuki authorised workshop, body repair shop, or scrap yard for assistance.

Seat Belt Force Limiter System (Only for Front Seat)



69RHS167

In the event of a strong impact coming from the front, the seat belt force limiter operates in two stages to reduce a force to the shoulder strap, thus lessening the impact being sustained by the front passengers.

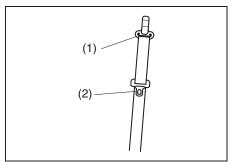

82K179

WARNING

If the seat belt sustains strong impact, the resin of the shoulder anchor part (1) and the tongue plate part (2) could soften due to heavy friction, thus sticking to the seat belt, making the belt slide less easily. In such a case, the seat belt may not provide the best performance, resulting in severe injury in case of emergency. Have the seat belt replaced by a Maruti Suzuki authorised workshop.


Child Restraint Systems



60G332S


The following types of child restraint system are available generally.

Infant restraint - rear seat only

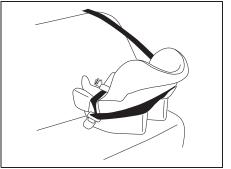


80JC007

Child restraint

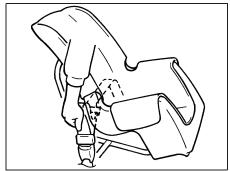

80JC016

Booster seat

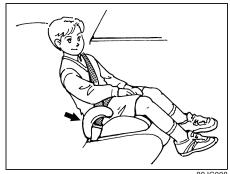

80JC008

Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap belts or the lap portion of lap shoulder belts) or by special rigid lower anchor bars built into the seat

NOTE:

Observe any statutory regulation about child restraints.



61M0241

WARNING

- Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating airbag.
- If you install a child restraint system in the 2nd row seat, slide the seat installed the child restraint system as far back as possible. So that, the child's feet do not contact the front seatback. These will help avoid injury to the child in the event of an accident.
- Children could be endangered in a collision if their child restraint systems are not properly secured in the vehicle. When installing a child restraint system, follow the instructions below. secure the child in the restraint system according to the manufacturer's instructions.



65D608D

Child restraint system for India

Child restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP		Seating position (or other site)				
		Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center
Group 0	Up to 10 kg	X	Х	N.A.	U	х
Group 0+	Up to 13 kg	Х	Х	N.A.	U	Х
Group I	9 to 18 kg	Х	Х	N.A.	U	Х
Group II	15 to 25 kg	X	X	N.A.	U	Х
Group III	22 to 36 kg	X	X	N.A.	U	X

Key of letters to be inserted in the above table:

U =Suitable for 'universal' category restraints approved for use in this mass group

X =Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE:

- 'universal' is the category in the AIS 072.
- · 'Outboard' indicates window side seat.

Installation with lap-shoulder seat belts


CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the seat head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

ELR type belt

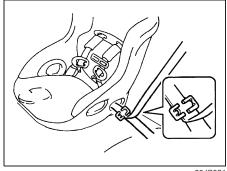


80JC021

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Check that the seat belt is securely latched.

Move the child restraint system in all directions to check that it is securely installed. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

Installation with ISOFIX type anchorages

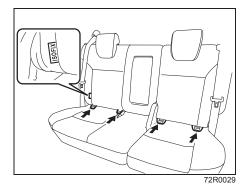


Your vehicle is equipped with the lower anchorages in the 2nd row seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting

type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

MARNING

Install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for the 2nd row seat.

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

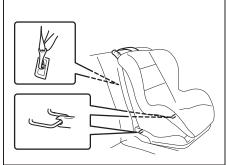

84MM00252

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.

Here is a general instruction:


A CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the 2nd row seat head restraint should not be removed. If the rear should not be removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improp-

If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.


NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

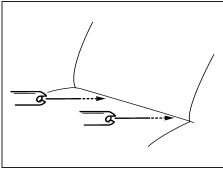



78F114

  Place the child restraint in the 2nd row seat, inserting the connecting bars to the anchorages between the seat cushion and the seatback.

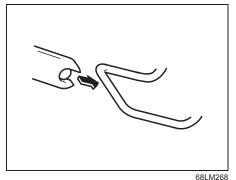






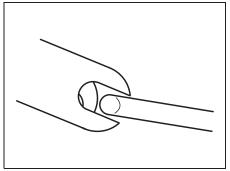

54G184

3) Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

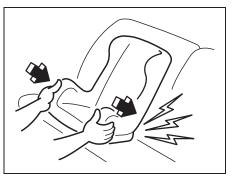

54G185

- 4) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Check that they are securely latched by trying to move the child restraint system in all directions, especially forward.
- 5) Attach the top tether strap referring to "Installation of child restraint with top tether" section.

When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

NOTICE

When installing a child restraint system to the 2nd row seat, slide the seat installed the child restraint system as far back as possible.

Installation of child restraint with top tether


A CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the 2nd row seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.

If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

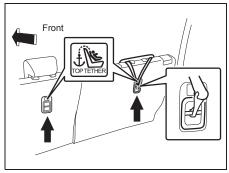


73R0175

Some child restraint systems require the use of a top tether strap. Top tether anchorage brackets are provided in your vehicle at the locations shown in the illustrations.

The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

- Secure the child restraint on the 2nd row seat using the procedure described above for securing a restraint system that does not require a top tether strap.
- 2) Hook the top tether strap to the top tether anchorage bracket and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage bracket located directly behind the child restraint

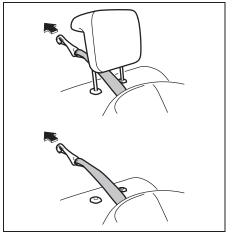

NOTE: Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory of "Child seat, ISOFIX"

73R0176

- 3) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head restraints" section for details on how to adjust the height of head restraint or remove it.)
- 4) Check that cargo does not interfere with routing of the top tether strap.

NOTICE

When installing a child restraint system to the 2nd row seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.


Supplemental Restraint System (airbags)

WARNING

This section of the owner's manual describes the protection provided by your Maruti Suzuki's supplemental restraint system (airbags). Please read and follow all these instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a Supplemental Restraint System consisting of the following components in addition to a lapshoulder belt at each front seating position.

- 1. Driver's front airbag module
- 2. Front passenger's front airbag module
- 3. Seat belt pretensioners
- 4. Airbag controller
- 5. Forward collision sensor
- 6. Side airbag module (if equipped)
- 7. Side crash sensor (if equipped)

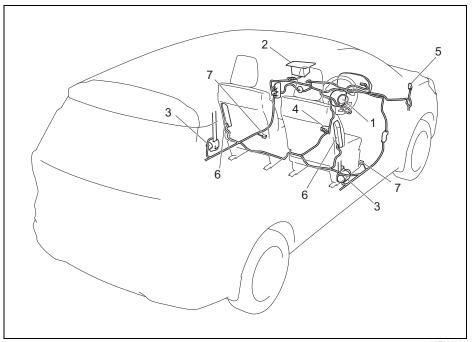

72RH4026

WARNING

An airbag supplements or adds to the collision protection offered by seat belts. The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

AIRBAG warning light



63J030

If the "AIRBAG" warning light on the instrument cluster does not blink or come on when the ignition switch is first turned to the ON position, or the ignition mode is first changed to "ON", or the "AIRBAG" warning light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by a Maruti Suzuki authorised workshop as soon as possible.

Front Airbags



63J113

Front airbag is designed to inflate in severe frontal collisions when the ignition switch is in "ON" position or the ignition mode is "ON".

NOTE:

In a frontal angle collision, the side airbags (if equipped) may inflate.

Front airbag is not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents.Remember, since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware


that no system can prevent all possible injuries that may occur in an accident.

Driver's front airbag



73R0009

Front passenger's front airbag

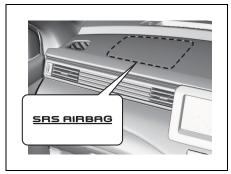

72R0143

The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the dashboard. The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.



61M0241

WARNING

- Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating airbag.
- If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.


Refer to "Seat belts and child restraint systems" section for details on securing your child.

Conditions of front airbags deployment (inflation)



80J097


 Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

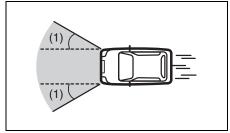

80J098E


Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle

Conditions of front airbags may inflate Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.

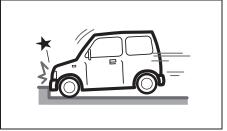


80J099

Hitting a curb or medial strip

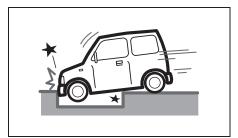

80.1100F

· Falling into a deep hole or ditch

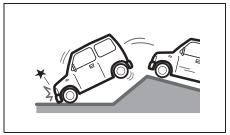


80J101

· Landing hard or falling


Front airbags may not inflate

The front airbags may not inflate when a strong impact has not occurred since the collision object (including living beings like animals) was easy to be deformed or moved, or the collided portion of your vehicle was easy to be deformed.

 Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle. Also, in certain collisions at low speed, the airbags may not inflate.



· Frontal collision to a stopped vehicle at less than about 50 km/h

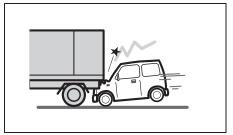


80J103

· Collision that the front of your vehicle goes under the bed of a truck etc.




80J104

· Collision with a utility pole or stumpage

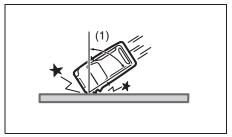

80J105E

· Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

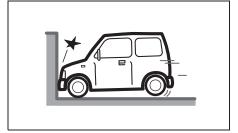

80J106

· Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h


Front airbags do not inflate

Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.




80J120

· Impact from the rear

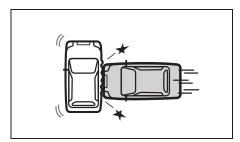

80J119


· Impact from the side

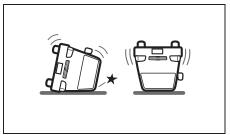

80J110

· Vehicle rollover

Side Airbags (if equipped)

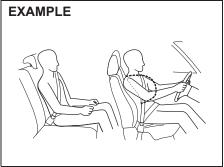

72RH4005

Side airbags are designed to inflate in severe side impact collisions when the ignition mode is ON.

Side airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag on the side of the vehicle that is struck will inflate. However, in a frontal angle collision, the side airbags may inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Side airbags




72RH4039

Side airbags are located in the part of the front seatbacks closest to the doors. The "SRS AIRBAG" labels are attached to the seatbacks to identify the location of the side airbags.

WARNING

If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Conditions of side airbags deployment (inflation)

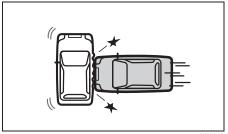


80J119

· Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h or in a greater impact


Side airbags may inflate in a strong impact

 Side airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.




80J102


· Frontal collision

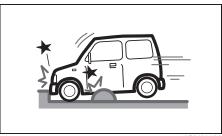

52RM20730

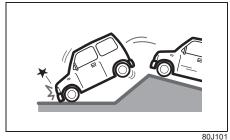

· Hitting a curb or bump

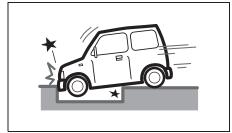


80J100E


· Falling into a deep hole or ditch

· Landing hard or falling

Side airbags may not inflate

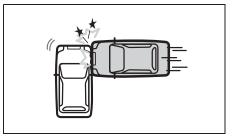

80J121

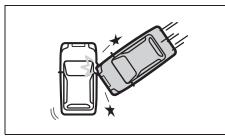

)J123

bicycle



· Impact from the side by a motorcycle or

80J125

· Impact from the side at an oblique angle


80J122

• Impact from the side to the vehicle body other than the passenger compartment



80J124


Impact from the side by a high hood vehicle

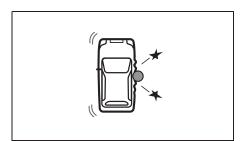

80J126


• Collision with a utility pole or stumpage

Side airbags do not inflate

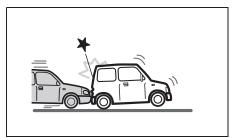

80J120

· Impact from the rear

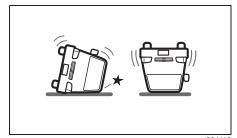

80J110

· Vehicle rollover

Airbag symbol meaning



72M00150

You may find this label on the sun visor.

A WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

WARNING

If the AIRBAG warning light in the instrument cluster ever comes on and stays on, it means that something may be wrong with the airbag system. If this ever happens, have the vehicle serviced immediately, because the airbags may not offer the protection for which they were designed.

Description of warning label

Symbol Symbol meaning Do not install a rear-facing child restraint system to the front passenger's seat equipped with an airbag. If the front passenger's seat airbag were to be deployed. a major impact could be applied to a rearfacing child restraint system and the child. For more details, read this owner's manual.

How the System Works

In a frontal collision, the collision sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. If your vehicle is equipped with side airbags, crash sensors will detect a side collision. and if the controller judges that the side collision is severe enough, it will trigger the side airbag inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation.

A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Please refer to the "Seat Adjustment" section and the "Seat Belts and Child Restraint Systems" in this section for details on proper seat and seat belt adjustments.



65D610



65D608



59RN04670

WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front airbag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side airbags, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.
- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each conditions may cause severe injury.

(Continued)

A WARNING

(Continued)

- For vehicles with side airbags, do not use seat covers on the front seats, because non-genuine seat covers may obstruct the inflation of side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella, as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.
- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the air bags to malfunction.
- Even though your vehicle is moderately damaged by a collision, it may not be severe enough to trigger front or side airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by a Maruti Suzuki authorised workshop to ensure that it works properly. If the original function of airbag system is damaged, airbag may not function effectively and fully in case of an emergency.

WARNING

- Do not modify the system in any way including replacing the steering wheel, placing stickers on the steering wheel pad, painting the steering wheel, or covering the steering wheel with a cover.
- Do not place stickers on or paint the instrument panel. Do not install and set up accessories, air fresheners, ETC readers, or portable navigation systems. Do not stand umbrellas or similar in front of airbags.
- Excluding genuine Maruti Suzuki parts, do not attach accessories to the front windshield or the rearview mirror.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, which sensors activated the deployment, and for a certain vehicle only, whether the driver's seat belt was in use.

Servicing the airbag system

If the airbags inflate, have the airbags and related components replaced by a Maruti Suzuki authorised workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If it does, have the airbag system inspected by the Maruti Suzuki authorised workshop as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only a Maruti Suzuki authorised workshop should be allowed to service or replace your airbags. Please remind anyone who services your Maruti Suzuki vehicle that it has airbags.


Service on or around airbag components or wiring must be performed only by a Maruti Suzuki authorised workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the airbag system, be sure the lead-acid battery is disconnected and the ignition switch has been in the LOCK position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components or wires. The wires are wrapped with vellow tape or vellow tubing.

and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated airbag can be hazardous. Ask your dealer, body repair shop or scrap yard for help with disposal.

Exhaust Gas Warning

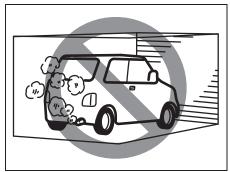

52D334

WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, be sure to take the following precautions to help prevent carbon monoxide from entering your vehicle.

 Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problems and lead to death.

(Continued)

A WARNING


(Continued)

- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to "FRESH AIR" and the blower is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to operate the vehicle with the tailgate or trunk open, make sure all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grille in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.

(Continued)

WARNING

 Have the exhaust system inspected periodically for damage and leaks.
 Any damage or leaks should be repaired immediately.

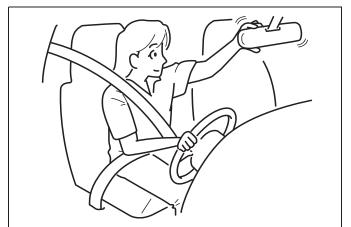


60G404

BEFORE DRIVING

Keys	2-1
Door Locks	2-2
Keyless entry system transmitter /Keyless push start	
system remote controller (if equipped)	2-6
Security System (if equipped)	2-15
Theft deterrent light	
(if equipped)	2-18
Windows	2-18
Mirrors	2-21
Instrument Cluster	
Speedometer	2-26
Tachometer	2-26
Fuel gauge	2-26
Temperature Gauge	2-27
Brightness Control	2-27
Information Display	2-28
Warning and Indicator Lights	
Lighting Control Lever	2-61
Front Fog Light Switch (if equipped)	2-66
Headlight Leveling Switch	2-66
Turn Signal Control Lever	2-67
Hazard Warning Switch	2-68
Windshield Wiper and Washer Lever	2-68
Tilt Steering Lock Lever	2-71
Horn	2-71
Heated Rear Window Switch (if equipped)	2-72
Vehicle Loading	2-72
Trailer Towing your vehicle	2-73

Keys

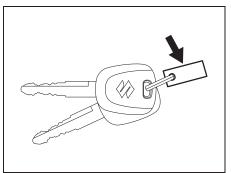

73R0130

Your vehicle comes with a pair of identical keys. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:	

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key or keyless push start system remote controller, which has an electronic identification code programmed in it. The key or remote controller communicates the identification code to the vehicle when the ignition switch is turned "ON" or pushed to "ON" mode. If you need to make spare keys or remote controllers, see a Maruti Suzuki authorised workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.



80.IM122

If the immobilizer/keyless push start system warning light blinks when the ignition switch is in "ON" position or the ignition mode is "ON", the engine will not start.

For vehicles without a keyless push start system

If this light blinks, turn the ignition switch to LOCK position, and then turn it back to ON position.

If the light still blinks after the ignition switch is turned back to ON position, there may be something wrong with your key or with the immobilizer system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

For vehicles with a keyless push start system

If this light blinks, change the ignition mode to "LOCK" (OFF), and then change it back to "ON". Also refer to "Master Warning Indicator Light Blinks and Engine cannot be started" in "Starting / Stopping Engine (Vehicle with Keyless Push Start System)" in "OPERATING YOUR VEHICLE" section.

If the light still blinks after the ignition mode is changed back to "ON", there may be something wrong with your key or with the immobilizer system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

The immobilizer/keyless push start system warning light may also blinks if the remote controller is not in the vehicle when you close the door or attempt to start the engine.

NOTE:

- If you lose your immobilizer ignition key or remote controller, ask a Maruti Suzuki authorised workshop as soon as possible to deactivate the lost one, and to make a new key or remote controller.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch or the engine switch when using your MARUTI SUZUKI vehicle. Otherwise, or the engine may not be started because they may interfere with your MARUTI SUZUKI vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key or remote controller, it may not start the engine.

NOTICE

The immobilizer key and remote controller are sensitive electronic instruments.

To avoid damaging them:

- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.

NOTICE

Do not modify or remove the immobilizer system.

If modified or removed, the system cannot be properly operated.


This immobilizer system is maintenance-free.

Ignition Key Reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

Door Locks

Side Door Locks

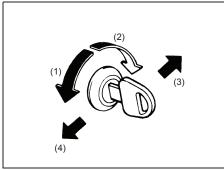

60B008


- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

BEFORE DRIVING

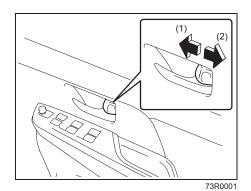

(1) LOCK (2) UNLOCK


To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.

To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.

Central Door Locking System

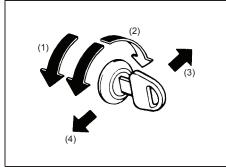

54G294


- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

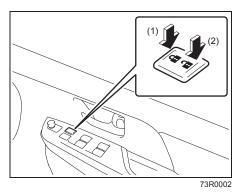

(1) LOCK (2) UNLOCK

You can also lock or unlock all doors by depressing the front or rear of the switch, respectively.

NOTE:

- You can also lock or unlock all doors by operating the transmitter or remote controller. Refer to "Keyless push start system remote controller / Keyless entry system transmitter (if equipped)" in this section.
- If your vehicle is equipped with the keyless push start system, you can also lock or unlock all doors by pushing the request switch. Refer to "Keyless push start system remote controller / Keyless entry system transmitter (if equipped)" in this section.

NOTE:

- All doors are automatically unlocked when you change the ignition mode to LOCK (OFF) or turn the ignition switch to the "LOCK" position and pull out the key.
- All doors are automatically locked for safety when the vehicle speed reaches 15 km/h.
- You can change the automatic locking or unlocking function mentioned above via the setting mode of the information display. For details on how to use the information display, refer to "Information display" in this section.

prevent unwanted opening of the door from inside the vehicle. When the lock lever is in LOCK position (1), the rear door can only be opened from outside. When the lock lever is in UNLOCK position (2), the rear door can be opened from inside or outside.

WARNING


Place the child-proof lock in LOCK position whenever children are seated in the rear.

Tailgate

A WARNING

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

Type 1

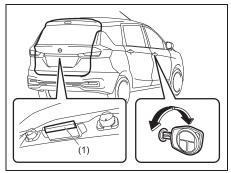


73R0019

(1) Tailgate handle

You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, pull up the tailgate handle (1) and lift the tailgate.

Child-Proof Locks (rear door)

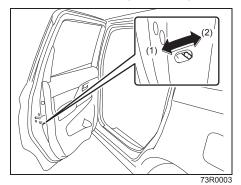


(1) LOCK (2) UNLOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help

BEFORE DRIVING

If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged lead-acid battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

 Fold the rear seat forward for easier access. Refer to "Folding rear seats" section for details on how to fold the rear seat forward.

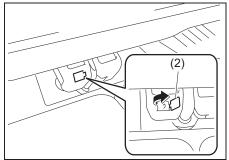


73R0020

2) Open the cover (2) in the lock mechanism of the tailgate.

NOTE:

Be careful not to lose the cover (2) because it is small and detachable.

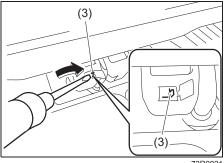

73R0021


- 3) Move the lever (3) in arrow direction by using a flat-bladed screwdriver to unlock the tailgate.
- Push open the tailgate from inside. The tailgate will be latched again by simply closing the tailgate.

If the tailgate cannot be unlatched by pulling up the tailgate handle, have the vehicle inspected by a Maruti Suzuki authorised workshop.

A CAUTION

Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

Type 2

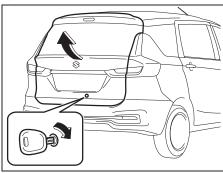


73R0023

To open the tailgate, insert the key and turn it clockwise to unlatch and lift the tailgate.

NOTICE

Do not use the key to lift up the tailgate, or the key may break off in the lock.

Keyless entry system transmitter /Keyless push start system remote controller (if equipped)

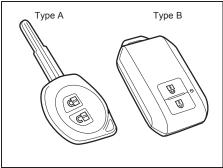

73R0166


Your vehicle is equipped with either a keyless entry system transmitter (Type A) or a keyless push start system remote controller (Type B). The transmitter has only a keyless entry function. The remote controller has a keyless entry function and a keyless push start system. For details, refer to the following explanations.

▲ WARNING

Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.

- Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.
- If radio wave interference is a concern, have the function of the antenna(s) disabled by a Maruti Suzuki authorised workshop.

Keyless Entry System Transmitter (Type A)

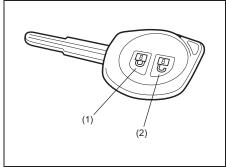

72R0148

- (1) LOCK button
- (2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

NOTE:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice when unlocked.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the LOCK button (1).

NOTE:

If no door is opened within about 30 seconds after the UNLOCK button (2) is oper-

ated, the doors will automatically lock again.

NOTE:

- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound.

NOTE:

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can be operated only unlock with the transmitter.
- If you lose one of the transmitters, ask a Maruti Suzuki workshop as soon as possible for a replacement. Be sure to have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Car locator alarm function

This function is to get the attention of others. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds. The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time. To cancel the car locator alarm, press any button (LOCK or UNLOCK). You can also cancel the car locator alarm by turning the ignition switch to "ON" position.


NOTE:

The car locator alarm function will not activate when the key is in the ignition switch.

Battery replacement


If the transmitter becomes unreliable, replace the battery.

To replace the battery of the transmitter:

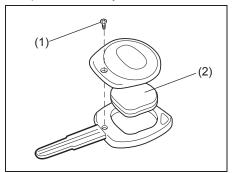

68LM248

- 1) Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).

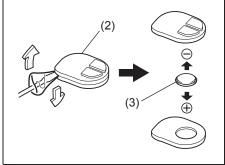

73R0197

- (3) Button type lithium battery: CR1616 or equivalent
- 3) Put the edge of a flat blade screwdriver covered with a soft cloth in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) so its + terminal faces the "+" mark of the transmitter.
- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- 7) Make sure the door locks can be operated with the transmitter.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries as ordinary household trash.

WARNING


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the transmitter controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

NOTE:

Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.

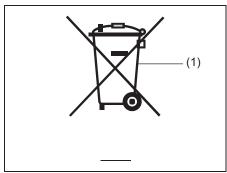

80JM133

(1) Crossed-out wheeled bin symbol


The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a Maruti Suzuki authorised workshop.

Keyless Push Start System Remote Controller (Type B)

The remote controller enables the following operations:

- You can lock or unlock the doors by pushing LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch in the front outside door handles. For details, refer to the explanation in this section.
- You can start the engine without using an ignition key. For details, refer to "Engine Switch (Vehicle with Keyless Push Start System)" in "OPERATING YOUR VEHICLE" section.

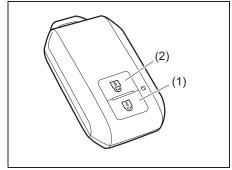

52RM20060

- (1) LOCK button
- (2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the remote controller near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

NOTE:

You can switch the function that unlocks all doors from twice operations to once operation, and vice versa, via the setting mode of the information display. For details on how to use the information display, refer to "Information Display" in this section.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the LOCK button (1).

NOTE:

If no door is opened within about 30 seconds after the UNLOCK button (2) is operated, the doors will automatically lock again.

NOTE:

- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the remote controller, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound.
- You can set whether the siren sounds when locking or unlocking the doors via the setting mode of the information display. For details on how to use the information display, refer to "Information Display" in this section.

NOTE:

 The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.

- The door locks cannot be operated with the remote controller if the ignition mode is other than the "LOCK" (OFF).
- When any door is open, if you push the LOCK button on the remote controller, the siren will sound and doors cannot be locked.
- If you lose one of the remote controllers, ask a Maruti Suzuki authorised workshop as soon as possible for a replacement. Be sure to have your dealer program the new remote controller code in your vehicle's memory so that the old code is erased.

Car locator alarm function


This function is to get the attention of others. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds. The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time. To cancel the car locator alarm, press any button (LOCK or UNLOCK). You can also cancel the car locator alarm in any of the following operations.

- Press the engine switch to change the ignition mode to ON.
- Bring the remote controller with you and press the request switch.

NOTE:

The car locator alarm function will not activate when the ignition mode is ACC or ON.

Keyless unlocking/locking using the request switches

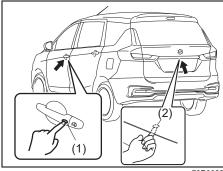

73R0022

When the remote controller is within the operating range described in this section, you can lock or unlock the doors (including the tailgate) by pushing the request switch (1) on the driver's door handle, front passenger's door handle or tailgate (2).

To lock all doors when all doors are unlocked:

• To lock all doors, push one of the request switches once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

To unlock a door or all doors:

- Push one of the request switches once to unlock the respective door or the tailgate.
- Push one of the request switches twice to unlock all doors.

NOTE:

You can switch the function that unlocks all doors from twice operations to once operation, and vice versa, via the setting mode of the information display. For details on how to use the information display, refer to "Information Display" in this section.

When the doors are unlocked:


- The turn signal lights will flash twice and the siren will sound twice.
- If the interior dome light switch is in DOOR position, the interior dome light will turn on for 15 seconds and then fade out. If you press the engine switch during this time period, the light will start to fade out immediately.

Be sure the doors are locked after you operate the request switch to lock the doors.

NOTE:

- The door locks cannot be operated by the request switch under the following conditions:
 - If any door or tailgate is open or is not completely closed.
 - If the ignition mode is other than "LOCK" (OFF).

 If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.

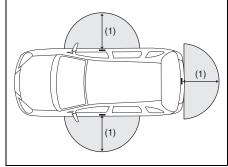

80J056

(1) 80 cm (2 1/2 feet)

When the remote controller is within approximately 80 cm (2 1/2 feet) from a front door handle or the tailgate switch, which is specified as the operating range, you can lock or unlock the doors by pushing the request switch.

NOTE:

 If the remote controller is outside the operating range described above, you will not be able to operate the request switch.

- If the battery of the remote controller runs down or there are strong radio waves or noise, the operating range may be reduced or the remote controller may become inoperative.
- If the remote controller is too close to the door glass, the request switches may not operate.
- If a spare remote controller is in the vehicle, the request switches may not operate normally.
- The remote controller will only activate a request switch if it is within the activate operating range. For example, if the remote controller is within the operating range for the driver's door request switch but not for the front passenger's door request switch not for the tailgate request switch, the driver's door switch can be operated but the front passenger's door switch or tailgate switch cannot be operated.

NOTICE

The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the remote controller away from magnetic objects such as a television.

NOTE:


The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the followings:

- When there are strong electromagnetic wave coming from a television, power station or a cellular phone.
- When the remote controller is in contact with or covered by a metal object.
- When a radio wave type remote keyless entry is used nearby.
- When the remote controller is placed near an electronic device such as personal computer.

Some additional precautions you should take and information you should be aware of are:


- Make sure the key is always stowed in the remote controller. If the remote controller becomes unusable, you will not be able to lock or unlock the doors without the key.
- Make sure that the driver always carries the remote controller.
- If you lose one of the remote controllers, ask a Maruti Suzuki authorised workshop as soon as possible for a replacement. Be sure to have your dealer program the new remote controller code in your vehicle's memory so that the old code is erased.

- You can use up to four remote controllers and the keys for your vehicle. Ask a Maruti Suzuki authorised workshop for details.
- The battery life of the remote controller is about two years, but it can vary depending on usage conditions.

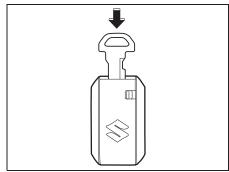

52RM20080

To stow the key into the remote controller, push the key in the remote controller until you hear a click.

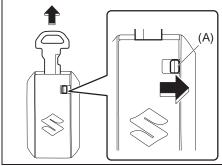

52RM20090

To remove the key from the remote controller, slide the lock knob (A) in the direction of the arrow and pull the key out from the remote controller

Request switch warning buzzer


This exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch is not working:

- The request switch is pressed after all doors and the tailgate are closed with the ignition mode in ACC or ON position by pressing the engine switch when the controller is outside the vehicle.
- The request switch is pressed under any of the following conditions with the ignition mode in "LOCK" (OFF) position.
 - The remote controller is left inside the vehicle.
 - Any door (including the tailgate) is open.

To securely lock the doors and the tailgate using the remote controller:

With the ignition mode changed to "LOCK" (OFF) by pressing the engine switch, bring out the remote controller. Press the request switch again and check that all doors are completely locked.

Reminder function

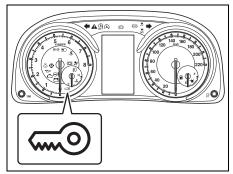

72RH4006

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:

When one or more doors are opened and all of the doors are later closed with the ignition mode is other than "LOCK".

While the warning light is on, the engine can not start.

The indicator light will turn off within several seconds after the remote controller is returned to an area of the vehicle other than the rear luggage area.

If the remote controller is left in the vehicle and you try to lock the driver's door or front passenger's door as described below, the door will be automatically unlocked.

- If you open the driver's door and try to lock the door by turning the lock knob forward or pushing the power door locking switch, the driver's door will be automatically unlocked.
- If you open the front passenger's door and try to lock the door by turning the lock knob forward or pushing the power door locking switch, the front passenger's door will be automatically unlocked.

NOTE:

- The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor etc.
- Be sure that the driver always carries the remote controller.
- Do not leave the remote controller in the vehicle when leaving the vehicle.

Keyless push start system remote controller battery consumption warning light



70K122

If the remote controller becomes unreliable, this light appears on the information display for several seconds when the engine switch is pressed to change the ignition mode to ON.

NOTE:

If this light comes on, replace the battery, and then perform the following operation to reset the light.


 Lock and unlock the doors with the remote controller twice or more.

If the power of your spare remote controller is enough, you can reset the light by operating above procedure with the spare remote controller.


Battery replacement

If the remote controller becomes unreliable, replace the battery.

To replace the battery of the remote controller:

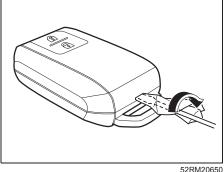

1) Insert a flat blade screwdriver covered with a soft cloth in the slot of the remote controller and pry it open.

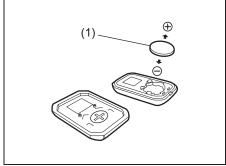

56RH00214

- (1) Button type lithium battery: CR2032 or equivalent
- 2) Replace the battery (1) so its + terminal faces the bottom of the case as shown in the illustration.
- 3) Close the remote controller case firmly.
- 4) Make sure the door locks can be operated with the remote controller.
- 5) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries as ordinary household trash.

▲ WARNING


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the remote controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

NOTE:

Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.

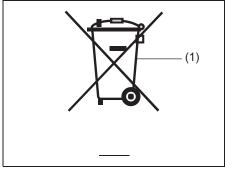

80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a Maruti Suzuki authorised workshop.

Security System (if equipped)

The security system sets after you close the all doors, engine hood.

For the system to armed, you must lock the all doors with the keyless entry system transmitter, keyless push start system remote controller or request switch.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless push start system remote controller, the request switch or the keyless entry system transmitter, or open the engine hood will cause the alarm to be triggered.

- * These means include the following:
 - The key
 - The lock knob on a door
 - The power door locking switch

Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the alarm will be triggered if any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask your Maruti Suzuki authorised workshop or use the setting mode of the information display.

NOTE:

- The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Information display" in this section.
- Your dealer may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.

NOTE:

- The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into your vehicle.
- Always use the keyless push start system remote controller, the request switch or the keyless entry system transmitter to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.
- If a person who does not know the security system is going to drive your vehicle, we recommend you explain the system and its operation to the person, or disable the system beforehand. Mistakenly triggering the alarm may cause a nuisance to others.
- Even if the security system is armed, you should still be careful to guard

against theft. Do not leave money or things of value in your vehicle.

NOTICE

Do not modify or remove the security system.


If modified or removed, the system cannot be properly operated.

The security system is maintenance-free.

How to arm the security system

With the all door (including engine hood and tailgate) closed, use the keyless entry system transmitter, keyless push start system remote controller or request switch to lock all the doors. The security system will be armed.

While the system is being armed, the indicator (1) continues to blink at intervals of approximately 2 seconds.

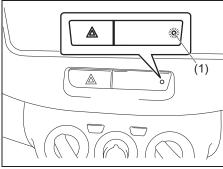

73R0025

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or swings the vehicle (if the shock sensor is in the enabled state).
- The security system is not armed when all doors are locked using the key from outside, or using the door lock levers or the power door locking switch from inside.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, keyless push start system remote controller or request switch, the doors are automatically locked again. When the doors are locked, the security system will be armed if the system is in the enabled state.

How to disarm the security system

Simply unlock the doors using the keyless push start system remote controller, the request switch or the keyless entry system transmitter. The security light will go out, indicating that the security system is disarmed.

How to stop the alarm

Should the alarm be triggered accidentally, unlock the doors using the keyless push start system remote controller, the request switch or the keyless entry system transmitter, or press the engine switch to change the ignition mode to ON or turn the ignition switch to "ON" position. The alarm will then stop.

NOTE:

- Even after the alarm has stopped, if you lock the doors using the keyless push start system remote controller or request switch, the security system will be rearmed.
- If you disconnect the lead-acid battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be triggered or retriggered when the lead-acid battery is then reconnected, although, in the latter case, the alarm remains stopped for the period between disconnection and reconnection of the lead-acid battery.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, or the vehicle feels a shock (if the shock sensor is in the enabled state), without disarming the security system.

Checking whether the alarm has been triggered during parking

If the alarm was triggered due to an unauthorized entry into the vehicle and you then press the engine switch to change the ignition mode to ON or turn the ignition switch to ON position, the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether your vehicle has been broken into while you were away from it.


Security system indication

- · If any of the doors or tailgate are opened without unlocking by the keyless entry system transmitter, keyless push start system remote controller or request switch, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- · If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.
 - (If the shock sensor is in the enabled state.)
- If the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, the siren sounds for about 5 seconds (full blast warning). The security system indicator continues to blink during this time.

NOTE:

If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.

Theft deterrent light (if equipped)

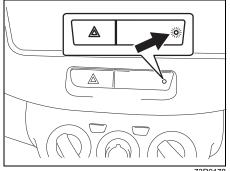

73R0178

This light will blink with the ignition switch in LOCK or ACC position. The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

NOTE:


For the security system, refer to "security system (if equipped)" in this section.

Windows

Power Window Controls

The power windows can only be operated when the ignition switch is in the ON position, or the ignition mode is "ON".


Driver's side

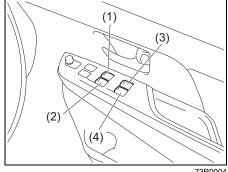

73R0004


The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

passenger's door / rear door

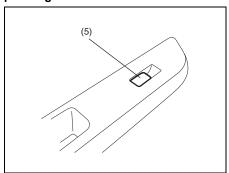

74LHT0205

The passenger's door has a switch (5) to operate the passenger's window.

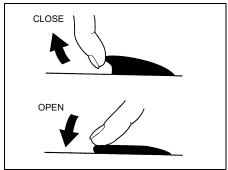


81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

The driver's window has AUTO-DOWN and AUTO-UP (if equipped) features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

Lock switch

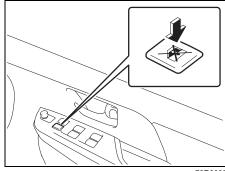

73R0005

The driver's door also has a lock switch for the passenger's windows. When you push in the lock switch, the passenger's windows cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing again.

WARNING

- You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the power windows when closing them.
- Always remove the ignition key or take the keyless push start system remote controller with you when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the power window switches and get trapped by the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Pinching Prevention Function (if equipped)

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

WARNING

To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the electric window when closing it. This function may not detect an object due to the size, hardness, or position of the object being caught in the closing window.

A CAUTION

- The pinching prevention function does not operate while you are holding the window switch in UP position.
- The pinching prevention function may not detect an object caught in the window just before the window is fully closed.

NOTE:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position. If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:

- Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON.
- Open the driver's window fully by holding the window switch in DOWN position.
- Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- Check the driver's window to see if the AUTO-DOWN/UP feature works.

M WARNING

Whenever you disconnect and reconnect the lead-acid battery or replace the fuse, the pinching prevention function needs to be initialized. The pinching prevention function will not be activated until the initialization

is completed.

If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Mirrors

A WARNING

 
Failure to observe following points may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.

- Do not adjust the mirrors while driving.
- Always unfold all the outside rearview mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

Inside Rearview Mirror


You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror.

Type A




74LHT0235

 Type B



68LMT0205

 

68LMT0206

- (2) Day driving
- (3) Night driving

To adjust the mirror, set the selector tab (1) to the day position, and then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

A WARNING

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you.
 Be aware that in this position you may not be able to see some objects that could be seen in the day position.

A CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.


Outside Rearview Mirrors

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

A WARNING

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.


Type 1

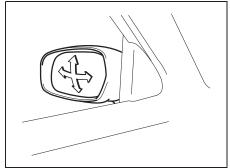

73R0029

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

Type 2

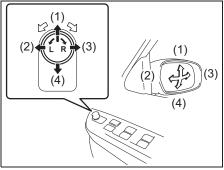

73R0030


The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position, or the ignition mode is "ACC" or "ON". To adjust the mirrors:

- Rotate the selector switch to the left or right to select the mirror you wish to adjust.
- Push the side of the switch to the direction in which you wish to move the mirror.
- Return the selector switch to the center position to prevent unintended mirror movement.

NOTICE

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.
- Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.

Outside Rearview Mirrors Folding Switch (if equipped)

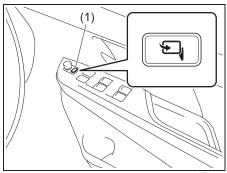

You can fold the mirrors when you park the vehicle in a narrow space. When the ignition switch is in the ACC or ON position, or the ignition mode is "ACC" or "ON", push the folding switch (1) to fold and unfold the mirrors.

Make sure the mirrors are completely unfolded before you start driving.

A CAUTION

Moving mirrors can pinch and injure a hand. Do not allow any one's hand to get near the mirrors when folding and unfolding the mirrors.

NOTE:

· If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the outside rearview mirrors may get stuck during that moment. To open the outside rearview mirrors completely, again press the folding switch after starting the engine.

 Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.

Remote Folding Mirrors (if equipped)

When the outside rearview mirror folding switch is in the unfolded position, the outside rearview mirrors are folded or unfolded in conjunction with the door locking or engine switch operation.

- When you lock the doors (including the tailgate) by using the remote controller or pushing the request switch, the mirrors will be folded automatically.
- · To unfold the mirrors, push the engine switch to change the ignition mode to ACC or ON.
- The factory setting is that the function is enabled. You can switch the function from the enabled state to the disabled state, and vice versa. To switch the function for your preference, refer to "How to switch the remote folding mirror function".

NOTICE

In a cold winter such as the mirrors are frozen, disable the function. If the mirrors are folded and unfolded repeatedly without thawing, the mirrors may be damaged.


NOTE:

- If the doors are locked by using the key. lock knob on a door or power door locking switch, the mirrors will not be folded automatically.
- · If the outside rearview mirror folding switch is in the folded position, the mirrors will not be unfolded automatically. even when the engine switch is pushed to change the ignition mode to ACC or ON.
- If any of the doors is not opened within about 30 seconds after the doors are unlocked by using the keyless push start system remote controller or request switch, the doors will be locked again and the mirrors will be folded automaticallv.

How to switch the remote folding mirror function

When the ignition mode is LOCK (OFF), you can switch the function from the enabled state to the disabled state, and vice versa, using the following method.

- 1) Sit in the driver's seat and make sure that all doors are closed.
 - If any door is open, the open door warning light comes on.

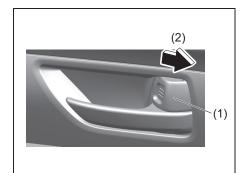


72RH4007

2) Turn the lock knob (1) on the driver's door rearward (2).


NOTE:

All operations included in the following steps 3) and 4) must be completed within 15 seconds.

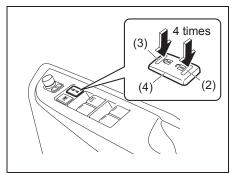

75RM264

3) Push the lock end (3) (forward end) of the power door lock switch (4) to lock the doors, and then the unlock end (2) (backward end) to unlock the doors. Repeat these operations 4 times and finally push the lock end of the switch.

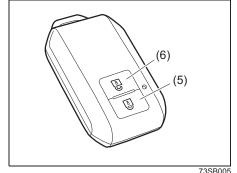

(5) LOCK button

- (6) UNLOCK button
- Push any of the buttons on the keyless push start system remote controller 3 times.
 - Push either LOCK button or UNLOCK button described above you like.
 - During operation, the doors are not locked or unlocked.

Every time you perform the series of the above steps, the state of the remote folding mirror function changes from the currently selected one to the other. You can check whether the system is enabled or disabled by the number of interior buzzer beeps at the end of the procedure as follows.

System state	Number of beeps
Disabled	Once
Enabled	Twice


 If you cannot complete the operations in step 3) and 4) within 15 seconds correctly, the state of the remote folding mirror function will not change and the interior buzzer does not beep. Perform the procedure again from the beginning.

Instrument Cluster

- Speedometer
 Tachometer
- 3. Fuel gauge


- 4. Temperature gauge5. Information display6. Trip meter selector knob

- 7. Indicator selector knob
- 8. Warning and indicator lights

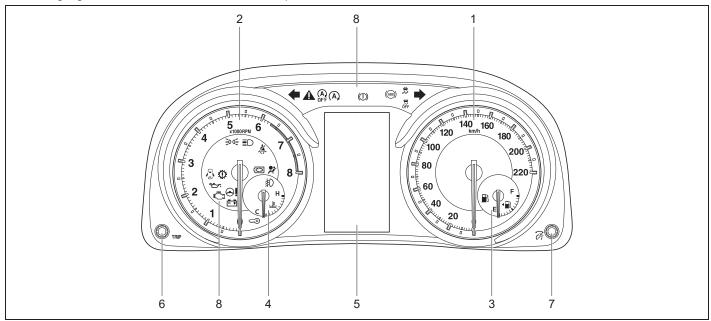

72RH4008

Speedometer

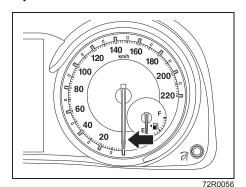


The speedometer indicates vehicle speed in km/h

Speed Alert System

The speed alert system gives audible warning for alert of over-speed to driver. When vehicle speed exceeds about 80 km/ h, primary level warning with two beeps will sound every minute. When the vehicle speed exceeds about 120 km/h, secondary level warning with continuous beeps will sound. If the vehicle speed is slowed down to about 118 km/h. primary warning will resume. If the vehicle is slowed down to about 78 km/h, speed alert warning will stop. This buzzer does not indicate any malfunction in vehicle

Tachometer

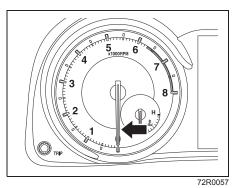


The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position.

Refer to "Downshifting maximum allowable speeds" in the "OPERAT-ING YOUR VEHICLE" section.

Fuel gauge

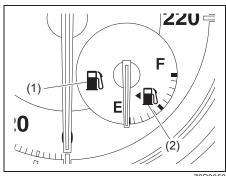

When the ignition switch is in "ON" position or the ignition mode is "ON", this gauge gives a rough indication of the amount of fuel in the fuel tank, "F" stands for full and "E" stands for empty.

If the indicator approaches a low level (near "E") on fuel gauge, refill the tank as soon as possible.

NOTE:

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

If the low fuel warning light (1) comes on, refill the fuel tank as soon as possible.

NOTE:

The activation point of the low fuel warning light (1) varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.


Refer to "Low fuel warning light" in "Warning and indicator lights" in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

Temperature Gauge

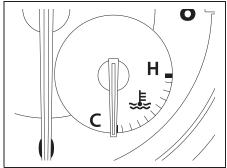


72R0059

When the ignition switch is in "ON" position or the ignition mode is "ON", this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between "H" and "C". If the indicator approaches "H", overheating is indicated. Follow the instructions for engine overheating in "EMERGENCY SERVICE" section.


NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Brightness Control

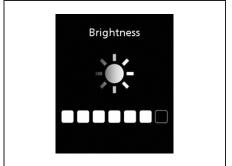

72R0063

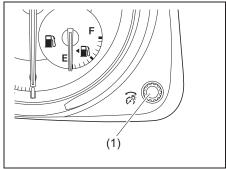

72R0060

When the ignition switch is turned "ON" or pushed to "ON" mode, the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

You can adjust the meter illumination brightness regardless of whether the position lights or headlights are off or on.

To increase the brightness of the instrument panel lights, turn the brightness control knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the brightness control knob (1) counterclockwise.

▲ WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

- If you do not turn the brightness control knob within several seconds of activating, the brightness control display will be canceled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.


NOTE:

If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be cancelled.

- The function which automatically dims the brightness of instrument panel lights.
- The function which operates with the brightness control, except maximum brightness level.


Information Display

The information display is shown when the ignition switch is in "ON" position or the ignition mode is "ON".

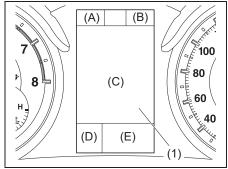

72RH4034

(1) Information display

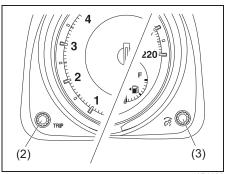

72R0062

- (2) Trip meter selector knob
- (3) Indicator selector knob

The information display shows the following information.

Display (A) Clock

Display (B)

Thermometer (if equipped)

Display (C)

Fuel consumption / Driving range / Average speed / Driving time / Clock and date / Motion / Torque and power / Accelerator and brake / Energy flow / Total idling stop time and Total idling fuel saved / Cruise control (if equipped) / Intersection guidance (if equipped)

Display (D)

Selector position (for automatic transmission vehicles) / Gear position (for automatic transmission vehicles) / Gearshift indicator (for manual transmission vehicles)

Display (E) Odometer and Trip meter



72R0135

When the ignition switch is turned "ON" or pushed to "ON" mode, the message shown in the above illustration will appear on the display for several seconds.

Some warning and indicator messages may appear on the display when the ignition switch is in "ACC" or "LOCK" position, or the ignition mode is "ACC" or "LOCK" (OFF).

Clock

When the ignition switch is in "ON" position or the ignition mode is "ON", the display (A) shows the time.

To set the clock, follow "Setting mode" instructions in this section.

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

Thermometer (if equipped)

When the ignition switch is in "ON" position or the ignition mode is "ON", the display (B) shows the thermometer.

The thermometer indicates the outside temperature.



52RM21050

If the outside temperature nears freezing condition, the message shown in the above illustration will appear on the display.


NOTE:

- The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.
- If there is something wrong with the thermometer, or just after the ignition switch is turned "ON" or pushed to "ON" mode, the display may not indicate the outside temperature.

You can change the unit of temperature. To change the unit of temperature, refer to "Setting mode" in this section.

Fuel Consumption / Driving Range / Average Speed / Driving Time / Total Idling Stop Time and Total Idling Fuel Saved / Clock and Date / Motion / Torque and Power / Accelerator and Brake / Energy flow (if equipped) / Intersection guidance (if equipped)

When there are no warning or indicator messages on the display (C), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time, total idling stop time and total idling fuel saved, clock and date, motion, torque and power, accelerator and brake, energy flow or no indication.

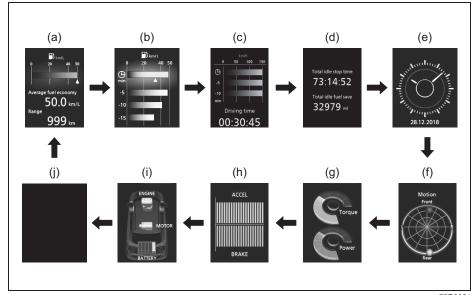

72R0064

- (a) Instantaneous fuel consumption / Average fuel consumption / Driving range
- (b) Instantaneous fuel consumption / Average fuel consumption / 5-minute average fuel consumption
- (c) Average speed / 5-minute average speed / Driving time
- (d) Total idling stop time / Total idling fuel saved
- (e) Clock and date
- (f) Motion
- (g) Torque and power
- (h) Accelerator and brake
- (i) Energy flow
- (j) No indication

To switch the display indication, push the indicator selector knob (3) quickly.


NOTE:

The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed, total idling fuel saved, motion, torque and power, accelerator and brake and energy flow shown on the display are affected by the following conditions:

- road condition
- · surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blink

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

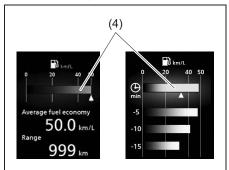

52RM21070

(4) Instantaneous fuel consumption

NOTE:


- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L, MPG (UK).
- The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
 - For L/100km setting: 30
 - For km/L setting: 50

- For MPG (UK) setting: 80
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption

Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

(Average fuel consumption)

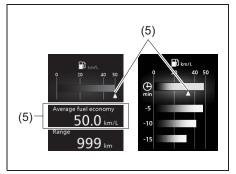

52RM21080

(5) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned "ON" or pushed to "ON" mode. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

NOTE:

When you reconnect the negative (–) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;


- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

NOTE:

If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset


(5-minute average fuel consumption)

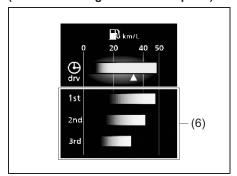

72R0136

(6) 5-minute average fuel consumption

(1-driving cycle average fuel consumption)

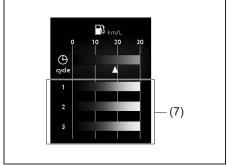


52R30840

(7) 1-driving cycle average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to "Setting mode" in this section.

Driving range

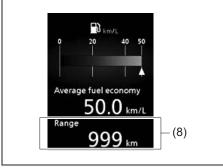

52RM21090

(8) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned "ON" or pushed to "ON" mode.

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display "---" will appear. If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.


NOTE:

- If you refuel when the ignition switch is in "ON" position or the ignition mode is "ON", the driving range may not indicate the correct value.
- When you reconnect the negative (–) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.
- If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly

Average speed / 5-minute average speed

Average speed from previous reset and 5-minute average speed are shown.

(Average speed)

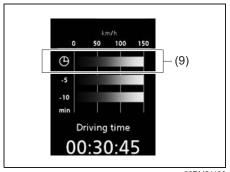

52RM21100

(9) Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is turned "ON" or pushed to "ON" mode. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.


To reset the value of average speed, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates an average speed. The display

shows "---" and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the negative (–) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

(5-minute average speed)

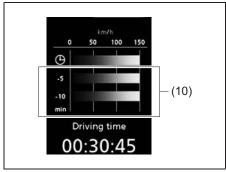


52RM21110

(10) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

Driving time

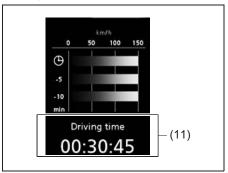

52RM21120


(11) Driving time

Driving time from previous reset is shown. To reset the driving time, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates a driving time. The display shows "---" and then indicates a new driving time after driving for a short time.

NOTE:

- Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.
- The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.

Total idling stop time and total idling fuel saved

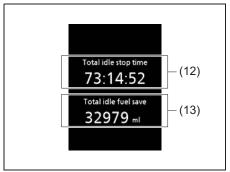

52RM217

- (12) Total idling stop time
- (13) Total idling fuel saved

The display shows the total length (in hours, minutes and seconds) of engine stopping time and the total amount (in milliliters) of fuel conservation by ENG ASTOP system since the indication was reset.

 To reset the total idling stop time and the total idling fuel saved, push and hold the indicator selector knob (3) for a while when the display shows the total idling stop time and the total idling fuel saved.

NOTE:


- The indicated maximum value of the total idling stop time is 99:59:59 and this value is fixed until it is reset.
- When you reconnect the negative (-) terminal to the lead-acid battery, the

value of the total idling stop time and the total idling fuel saved will be reset.

Clock and date

Date and time are shown. For the setting procedure, refer to "Setting mode" in this section.

Motion

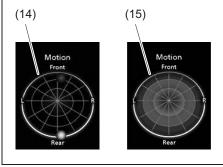

52RM218

The meter indication is different depending on whether the vehicle is stopped or running.

When driving, real time movement of imaginal G position (center of gravity) is displayed on the globe (14), which is resultant with inertia force.

When stopped, historical data of imaginal G positions applied to the vehicle body during the driving is shown as a graph (15).

G position history graph when the vehicle stopped can be changed to indicate or hide. For details, refer to "Setting mode" in this section.

WARNING

Do not look in the display intensively while driving. Doing so may result in an accident.

NOTE:

- If G position history graph at the vehicle stopped has been set in indication mode, the graph (15) is shown for several seconds when you turn the ignition switch to "LOCK" position or change the ignition mode to "LOCK" (OFF) after driving.
- The graph is shown approximately and the actual movement may differ.

Torque and power

Present engine torque and power are shown.

Accelerator and brake

Present accelerator pedal depressing degree and brake line pressure are shown. The display is selectable to indicate or not to indicate. For details, refer to "Setting mode" in this section.


Energy flow (if equipped)

The state of SHVS operation can be checked on the information display. For details, refer to "SHVS (Smart Hybrid Vehicle by Suzuki)" in "OPERATING YOUR VEHICLE" section.

Information display	Description	
PAGINE PA	When the vehicle is running, ISG (Integrated Starter Generator) assists engine power as an electric motor.	
MOTOR ANTERNY 72R0139	When the vehicle is powered by the engine.	
MOTOR AATTIAY 72R0140	When decelerating your vehicle, the ISG generates electricity without engine power.	
PAGINE AND TO A PAGE AND THE PA	When the engine automatically stops by the ENG A-STOP system.	


Information shown after driving

When you turn the ignition switch to LOCK position or press the engine switch to change the ignition mode to "LOCK" (OFF), the following information appears for several seconds on the information display.

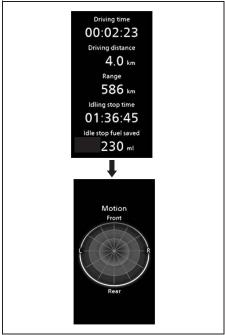

52RM21140

Intersection Guidance (When using Android Auto^{TM*} on infotaiment system) (if equipped)

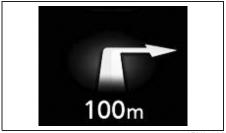

59RN04710

 
The display shows the direction of your driving and the distance, working with the infotainment system.

NOTE:

- A slight time lag may occur between the intersection guidance on the information display and the guidance from the infotainment system.
- Switch the intersection guidance to ON or OFF while the guidance from the infotainment system is displayed.
 - A time lag may occur between ON display and OFF display of the intersection quidance.
 - For the functions and operations of the infotainment system, refer to the supplementary manual, provided along with it.

- You can display or hide the intersection guidance by changing the setting (customization). For details, refer to "Setting Mode" in this section.
- *: Android Auto[™] may not be available in your country or region.
 For details about Android Auto[™], Refer to the Google support site:
 http://support.google.com/androidauto

Selector position (for automatic transmission vehicles) / Gear position (for automatic transmission vehicles) / Gearshift Indicator (for manual transmission vehicles)



72RH4009

Selector position (for automatic transmission vehicles) /

Gear position (for automatic transmission vehicles)

The display shows the transmission selector position (16) or the gear position (17).

- When the manual mode is not in use, the display shows the selector position.
- When using the manual mode, the display shows the current gear position.

For details on how to use the transmission, refer to "Using transmission" in "OPERAT-ING YOUR VEHICLE" section.

Manual mode indicator (for automatic transmission vehicles) When you are using the manual mode, the display shows the manual mode indicator (18).

Gearshift Indicator (for manual transmission vehicles)

Refer to "Gearshift indicator" in "OPERAT-ING YOUR VEHICLE" section.

Odometer / Trip meter

The display (E) shows the odometer and trip meter.

The odometer records the total distance the vehicle has been driven.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To switch the display indication (E), push the trip meter selector knob (2) quickly.

To reset the trip meter, push and hold the trip meter selector knob (2) for about 2 seconds when the display shows the trip meter.


NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Setting Mode

When the ignition switch is in "ON" position or the ignition mode is "ON" and the vehicle is stationary, you can enter into the setting mode of the information display by pushing and holding the indicator selector knob (3) for more than 3 seconds.

- To select the setting item that you want to change, turn the indicator selector knob (3) left or right.
- To change the setting, push the indicator selector knob (3).
- To exit the setting mode, select "Back" and push the indicator selector knob (3).

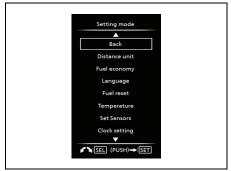

72R0142

NOTE:

The currently selected setting item is surrounded by a frame.

NOTE:

- If you push and hold the indicator selector knob (3) to enter into the setting mode when the display (C) shows average fuel consumption, average speed, driving time, total idling stop time and total idling fuel saved (if equipped), the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.
- If you turn the ignition switch, press the engine switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.

Distance unit

(Odometer / trip meter / driving range / average speed distance unit setting)

You can change the units in which odometer / trip meter / driving range / average speed distance is displayed.

Fuel economy (Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language (if equipped)

You can change the language of the information display.

Fuel reset

(Average fuel consumption reset setting)

You can change when the value of average fuel consumption is reset.

Temperature

(Temperature unit setting) (if equipped) You can change the units that temperature is displayed in.

 To change the temperature unit, select "Temperature" in "Setting mode". Then, select "°C" or "°F".

NOTE:

When you change the units that temperature is displayed in, the automatic heating and air conditioning system (if equipped) temperature display units will be changed automatically.

Clock setting (if equipped) (Adjusting the clock)

- Adjust the clock by selecting "Clock setting" in "Setting mode". Then, select "Adjust clock".
- To change the hour indication, turn the indicator selector knob (3) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (3). To set the hour indication, push the indicator selector knob (3) and the minute indication blinks.
- To change the minute indication, turn the indicator selector knob (3) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (3). To set the minute indication, push the indicator selector knob (3).

(Selecting 12H/24H format)

 Switch the time indication between 12hour and 24-hour format by selecting "Clock setting" in "Setting mode". Then, select "12H" or "24H".

(Adjusting the date)

- Adjust the date by selecting "Clock setting" in "Setting mode". Then select "Adjust date".
- To adjust year, month and day, operate the indicator selector knob (3) in the same way as adjusting the clock.

Set sensors

(Parking sensor setting)

The parking sensor can be switched between the normal mode and trailer mode.

Door lock (Door lock setting) (Door unlock)

- All Doors:
- Unlock all doors by turning the key, or operating the keyless entry system transmitter, keyless push start system remote controller or request switch once
- Driver Door:

Unlock all doors by turning the key, or operating the keyless entry system transmitter, keyless push start system remote controller or request switch twice (default setting)

(Auto lock)

- Manual Lock:
 - Disable the automatic door locking function
- Speed Syncro:
- Lock all doors when the vehicle speed reaches 15 km/h (default setting)
- · Shift Syncro:

(For automatic transmission vehicle)
Lock all doors when the gearshift lever is in other than "P".

(Auto unlock)

- Syncro Off:
 - Disable the automatic door unlocking function (default setting for the vehicle with the keyless push start system)
- · Shift Syncro:

(For automatic transmission vehicle) Unlock all doors when the gearshift lever is moved to the "P" from other position.

· IG-OFF Sync:

Unlock all doors when the key is pulled out from the ignition switch or the engine switch is pressed to change the ignition mode to LOCK (OFF) (default setting for the vehicle without the keyless push start system)

(Alarm)

 You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

Lights

(Lane change setting)

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever immediately after moving it.

Guide me light setting (Light setting) (if equipped)

You can change the lighting time of "To car" function or "To home" function.

Antitheft

(Shock sensor system setting)

You can change the on/off of the shock sensor.

(Shock sensor P setting)

You can adjust the pre-warning sensitivity of shock sensor.

(Shock sensor F setting)

You can adjust the full blast warning sensitivity of shock sensor.

IS A/C (if equipped) (ENG A-STOP system setting)

- When the automatic air conditioning system is turned ON (if equipped), you can select one of the following engine auto stop settings.
 - Standard
 - Economy
 - Comfort
- When "Economy" is selected, compared with "Standard" the engine auto stop condition will occur more frequently, the stop time will be longer, leading to reduction of fuel consumption.

 When "Comfort" is selected, compared with "Standard" the engine auto stop condition will occur less frequently, the stop time will be shorter, leading to more comfortable cabin condition by the air conditioning system.

Display item

("Car color" setting)

You can change the car color of the information display.

("Calendar dis" setting)

You can select whether you show the calender on the information display or not.

("Calendar form" setting)

You can change the calendar form of the information display.

To change the calendar form, select "Calendar form" in "Display item". Then, select the display order of date, month and year. ("Fuel eco hist" setting)

Transitional indication of average fuel consumption can be switched to time indication and driving cycle indication.

("Motion hist" setting)

Indication of G position history graph at the vehicle stopped can be selected to enable or disable.

("Idling disp" setting)

Display of ENG A-STOP operation with the ignition switch in LOCK position or ignition mode "LOCK" (OFF) is selectable to indicate or not to indicate.

("Idling warn" setting)

You can switch whether the information display shows the warning and indicator messages related on the ENG A-STOP system.

("Pedal op disp" setting)

Display of "Accelerator and brake" is selectable to indicate or not to indicate.

("Regen disp" setting)

You can choose that deceleration energy regenerating indicator light comes on or does not come on.

("INTERSECTION" setting) (if equipped)

You can choose that intersection guidance shows or does not show.

Default (initialization setting)

If you select "YES" and push the indicator selector knob (3), all settings will be reinitialized.

Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

A tone may also sound to alert you.

If warning and indicator messages appear on the display, follow the messages.

Master warning indicator light



80P0382

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:

- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.
- When you push and hold the indicator selector knob (2) for about 2 seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after 5 seconds.

Warning and indicator messages

All model

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
72R0069	Blinks (only while vehicle is in motion)	Beep (one time from interior buzzer; only while vehicle is in motion)	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly. (#1)
RELEASE PARKING BRAKE 52RS005	Blinks	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
EO O LIGHTS ON	Blinks	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.
LOW FUEL 52RM21180	Off	Beep (one time from interior buzzer)	Fuel is low. Refill it immediately. (#1)

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
ICE POSSIBLE DRIVE WITH CARE	Off	Off	The road may be icy. Drive very carefully. (#1)

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

Vehicle with keyless push start system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
IGNITION SWITCH POSITION 52RM21210	Off	Off	This message is displayed when "ACC" position is selected as the ignition mode. (#1)
PUSH START SWITCH	Off	Off	The brake pedal (for automatic transmission models) or the clutch pedal (for manual transmission models) is depressed. Press the engine switch to start the engine.

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
SERVICE STEERING LOCK SYSTEM 52RM21230	Blinks	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.
SERVICE START SYSTEM	Blinks	Beep (one time from interior buzzer)	There is a problem with the immobilizer/keyless push start system. Also, the vehicle lead-acid battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle lead-acid battery, have your vehicle inspected by a Maruti Suzuki authorised workshop.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy	
KEY FOB NOT DETECTED 52RM21250 PLACE KEY FOB ON START SWITCH	Blinks	By certain conditions, some kind of sound you will hear from interior and/or exterior of the vehicle.	The remote controller may be outside the vehicle or its battery may have become discharged. Locate the remote controller or touch the engine switch with the remote controller. If the message still appears, replace the remote controller battery.	
52RM21260				

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Off IGNITION SWITCH POSITION 52RM21270		Off	This message is displayed when "ON" position is selected as the ignition mode. (#1)
TRN. STEERING WHEEL TO RELEASE LOCK	Blinks	Beep (one time from interior buzzer)	The steering lock is not disengaged. While lightly turning the steering wheel in both directions, press the engine switch again.

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
KEY FOB LOW BATTERY 52RM21290	Off	Off	The remote controller battery is about to become flat. Replace the battery. (#1)
Manual transmission PRESS BRAKE AND CLUTCH TO START	Off	Off	The engine switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message.

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Automatic transmission PRESS BRAKE SHIFT TO P TO START	Off	Off	The engine switch is pressed with the gear-shift lever in a position other than "P" or "N" and depressing the brake pedal. Try again as instructed by message.
Automatic transmission P GEARSHIFT NOT IN PARK 52RM21320	Off	Off	The engine switch is pressed with the gear-shift lever in a position other than "P". Try again as instructed by the message.

Vehicle with ESP® system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy	
Blinks SERVICE ESP SYSTEM 52RM21340		Beep (one time from interior buzzer)	There may be a problem with ESP [®] system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.	
Hill hold control system ESP HILL HOLD DISABLE	Blinks	Beep (one time from interior buzzer)	There may be a problem with hill hold control system (if equipped). Have your vehicle inspected by a Maruti Suzuki authorised workshop.	
52RM21350				

Warning and Indicator Lights Brake System Warning Light



82K170

Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned "ON" or pushed to "ON" mode.
- The light comes on when the parking brake is engaged with the ignition switch in "ON" position or the ignition mode is "ON".
- The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system.

If this happens:

1) Pull off the road and stop carefully.

WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- Test the brakes by carefully starting and stopping the vehicle on the shoulder of the road.
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorised workshop for repairs or tow the vehicle to the nearest a Maruti Suzuki authorised workshop for repairs.

WARNING

If any of the following conditions occur, you should immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned "ON" or pushed to "ON" mode.
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Anti-Lock Brake System (ABS) Warning Light



65D529

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to LOCK position or change the ignition mode to "LOCK" (OFF) by pressing the engine switch and then start the engine again.

If the warning light comes on briefly and then turns off, the system is normal. If the warning light still stays on, something is wrong with the system. If the light and the brake system warning light stay on or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and then anti-lock function of the ABS system.

If one of the above occurs, have the system inspected by a Maruti Suzuki authorised workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Anti-Lock Brake System (ABS)" in "OPERAT-ING YOUR VEHICLE" section.

Engine Oil Pressure Warning Light



50G051

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorised workshop before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the engine oil pressure warning light to indicate the need to add oil. Periodically check the engine oil level.

BEFORE DRIVING

ESP® Warning Light (if equipped)



52KM133

 $\mathsf{ESP}^{\mathbb{B}}$ is a registered trademark of Daimler AG.

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system

If this light blinks, drive carefully.

When the ignition switch is turned "ON" or pushed to "ON" mode, the light comes on briefly so you can check that the light is working. If the light stays on or comes on when driving, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by a Maruti Suzuki authorised workshop.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®) (if equipped)" in "OPERATING YOUR VEHICLE" section.

▲ WARNING

The ESP® systems cannot prevent accidents. Always drive carefully.

ESP® OFF Indicator Light (if equipped)



 
73R0196

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®) (if equipped)" in "OPERATING YOUR VEHICLE" section.

Charge Warning Light



50G052

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is something wrong with the leadacid battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a Maruti Suzuki authorised workshop.

Seat belt reminder light



60G049

When the driver and/or passenger (front passenger and/or 2nd row passenger* and/or 3rd row passenger*) do(does) not buckle his or her seat belt, this light will come on and/or blink. The reminder would be on unless all rear passengers' seat belts are fastened, irrespective of presence or absence of passenger.

For details of the seat belt reminder, refer to "Seat belts and child restraint systems" section.

*: If equipped

NOTE:

Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.

AIRBAG Warning Light



63J030

 
When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on for several seconds so you can check that the light is working.

The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

WARNING

If the Airbag warning light does not blink or come on briefly when the ignition switch is turned "ON" or pushed to "ON" mode, stays on for more than 10 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a collision. Have both systems inspected by a Maruti Suzuki authorised workshop.

Malfunction Indicator Light



65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on. When the engine is started, the light goes out.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a Maruti Suzuki authorised workshop to have the damage fixed.

A CAUTION

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- Do not drive or stop over such as withered grasses.
- Drive slowly if required to move the vehicle.

Also, if this light comes on when the engine is running, there is a problem with the automatic transmission system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transmission Warning Light (if equipped)



81A262

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on for several seconds so you can check that the light is working.

If this light comes on when the engine is running, there is a problem with the automatic transmission system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

Immobilizer/Keyless Push Start System Warning Light



80JM122

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

If this light blinks or stays on, there is a problem with the system.

If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask a Maruti Suzuki authorised workshop to have the system inspected.

Open Door Warning Light



54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low Fuel Warning Light



54G343

If this light comes on, refuel the fuel tank as soon as possible.

When this light comes on, a ding sounds once to remind you to refuel.

If you do not refuel, a ding sounds every time when the ignition switch is turned "ON" or pushed to "ON" mode.

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.

Electric Power Steering Light



79J039

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on. When the engine is started, the light goes out.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by a Maruti Suzuki authorised workshop.

NOTE:

The following steering wheel operations may gradually take more effort while parking or driving at a very low speed. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent it from overheating.

- The steering wheel is operated very often.
- The steering wheel is kept in a fully turned position for a long while.

When the power steering control system cool down, the power steering system will return to its original condition.

However, repeating these operations could cause damage to the power steering system.

 This light comes on when continuing period of time of limiting the power assist in order to prevent from overheating.

 
NOTE:

If the power steering system does not work properly, it will require greater effort to steer, but you still will be able to steer.

NOTE:

If the steering is operated, you may hear noise caused by electric power steering operation. This is normal and indicates that the power steering system works properly.

Turn Signal Indicators



50G055

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.

NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be malfunction in the turn signal system. Ask your Maruti Suzuki authorized workshop to inspect the system.

 
Main Beam (high beam) Indicator Light



50G056

This indicator comes on when headlight main beams (high beams) are turned on.

Illumination Indicator Light



64J045

This indicator light comes on while the position lights, tail light and/or the head-lights are on.

Front Fog Light Indicator Light (if equipped)



68PM00268

The front fog light indicator light comes on when the front fog light operates.

ENG A-STOP Indicator Light (if equipped)



72M00032

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

When the engine stops automatically, this light comes on.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" in "OPERATING YOUR VEHICLE" section.

ENG A-STOP OFF Light (if equipped)



72M00159

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

When you push the ENG A-STOP OFF switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by a Maruti Suzuki authorised workshop.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" and "SHVS (Smart Hybrid Vehicle by Suzuki)" in "OPERATING YOUR VEHICLE" section.

BEFORE DRIVING

Deceleration Energy Regenerating Indicator Light (if equipped)



72M00168

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to "ON", this light comes on briefly so you can check that the light is working.

When the deceleration energy regenerating function is working, this light comes on.

For details, refer to "SHVS (Smart Hybrid Vehicle by Suzuki)" in "OPERATING YOUR VEHICLE" section.

Master Warning Indicator Light (if equipped)




80P0382

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

When the information display shows warning and indicator messages, this indicator light may also blink.

For details, refer to "Information display" in this section.

Lighting Control Lever

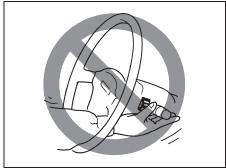


65D611

A WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Lighting Operation

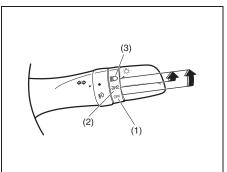

73R0056

To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF (1)


All lights are off.

=00= (2)

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

≣○ (3)


Front position lights, tail lights, license plate light, instrument lights and headlights are on.

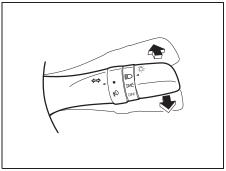


73R0057

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

Automatic Light Operation (if equipped)

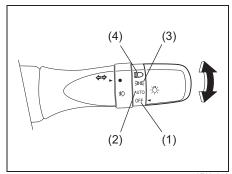

72RH4010

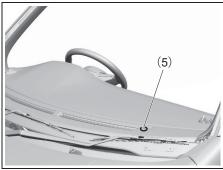

72RH4035

BEFORE DRIVING

Your vehicle's lighting system is controlled by two main systems: the lighting switch and the auto-on headlight system (when the lighting switch is in "AUTO" position). The two systems work together to operate your lights as shown in the following chart:

ON: Lights ON

LIGHT: When it is light around the light sensor (5). DARK: When it is dark around the light sensor (5).

Lighting switch	Main lights to	Ignition mod LOCK (OFF)	le or ACC	Ignition mode ON	
position	be operated	LIGHT	DARK	LIGHT	DARK
(1) OFF	Position lights, Tail lights	-	-	_	-
	Headlights	_	-	_	_
(2) AUTO	Position lights, Tail lights	_	-	-	ON
	Headlights	-	=	-	ON
(3) ₹0 0€	Position lights, Tail lights	ON	ON	ON	ON
	Headlights	_	-	_	_
(4) ≣□	Position lights, Tail lights	ON	ON	ON	ON
	Headlights	ON	ON	ON	ON

To turn the lights on or off, twist the knob on the end of the lever. There are four positions:

OFF (1)

All lights are off.

AUTO (2)

This function works when the engine switch is pressed to change the ignition mode to ON. The headlights and position lights are turned on and off automatically according to the amount of outside light detected by a sensor. They go out automatically when you change the ignition mode to ACC or LOCK (OFF) by pressing the engine switch.

The light sensor (5) for sensing the amount of outside light is installed on the passenger's seat side of instrument panel.

A CAUTION

If the light sensor area of the windshield is covered with mud, ice, or other similar substances, the headlights and position lights may be turned on even when it is still light outside.

NOTE:


- Avoid covering the light sensor area of the windshield with a sticker. The sticker may impair the performance of the sensor and make the system unable to control operation of the lights correctly.
- If you changed the ignition mode to ON by pressing the engine switch and "AUTO" position remains selected, the headlights and position lights come on automatically as it gets dark outside, even with the engine not running. Leaving the lights lit for a long time may lead to a completely discharged battery.

-00-(3)

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

≣○ (4)


Front position lights, tail lights, license plate light, instrument lights and headlights are on.

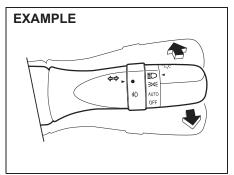

72RH4012

With the headlights on, push the lever forward to switch to the high beams (main beams) and pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

Auto-on headlight system

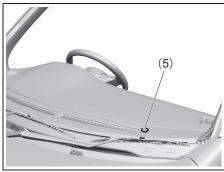

72RH4035

The auto-on headlight system automatically turns on all lights that are operated by the lighting switch, when the following three conditions are all met.

Conditions for auto-on headlight system operation:

- 1) It is dark around the light sensor (5).
- 2) The lighting switch is in "AUTO" position.
- 3) You press the engine switch to change the ignition mode to ON.

This system is activated by a signal from the light sensor (5) on the passenger side of instrument panel. Do not cover the sensor (5). Otherwise, the system will not work correctly.

WARNING

It takes about 5 seconds for the light sensor to react to a change in lighting conditions. To help avoid an accident due to reduced visibility, turn on your headlights before driving into a tunnel, parking structure, etc.

NOTE:

The light sensor reacts even to infrared rays, so it may operate incorrectly when there are strong infrared rays.

Light Reminder Buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:

The headlights and/or position lights are on even after the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to "LOCK" (OFF).

The buzzer stops sounding when you turn off the headlights and position lights.

Guide Me Light (if equipped)

Guide me light has two functions of "To home" and "To car" for improving your visibility in the dark.

"To home" function

Even after you leave the car, the ground will be illuminated for a short while with this function. You can turn on the front position lights and the headlights in the low beam setting for about 10 seconds after the engine switch is pressed to change the ignition mode to LOCK (OFF).

To set the function:

- Turn the lighting switch to "AUTO" position.
- Press the engine switch to change the ignition mode to LOCK (OFF).
- 3) Pull the lighting control lever toward you once and open the driver's side door within 60 seconds. Or pull the lighting control lever toward you once while the driver's side door is open.

To cancel the function:

Perform any of the following operations.

- Pull the lighting control lever toward you once.
- Change the ignition mode to ACC or ON by pressing the engine switch.
- Turn the lighting switch to any other position than "AUTO" position.

NOTE:

- When the "To home" is functioning, the front fog lights (if equipped), rear fog light and the headlights (high beam) are not turned on.
- Lighting time of the "To home" function can be changed on the information dis-

play. Refer to "Information Display" in this section.

"To car" function

Before you get in the vehicle, the ground will be illuminated for a short while to easily lead the driver to the vehicle. If UNLOCK button of the keyless push start system remote controller is pressed while the lighting switch is positioned in "AUTO", the front position lights and the headlights in the low beam are turned on for 10 seconds.

This function will operate only when it is dark outside the vehicle.

To cancel the function:


Perform any of the following operations.

- Lock the doors by using the keyless push start system remote controller, the request switch or the key in the driver's door lock.
- Change the ignition mode to ACC or ON by pressing the engine switch.
- Turn the lighting switch to any other position than "AUTO" position.

NOTE:

- When the "To car" is functioning, the front fog lights (if equipped), rear fog light and the headlights (high beam) are not turned on.
- Lighting time of the "To car" function can be changed on the information display. Refer to "Information Display" in this section


Front Fog Light Switch (if equipped)

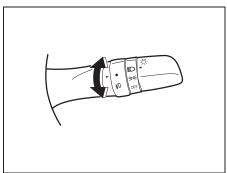

73R0058

To turn the front fog light on, twist the knob as shown in the illustration with the position lights, tail lights and/or the headlights are on. When the front fog light is on, an indicator light on the instrument cluster will come on.

Headlight Leveling Switch

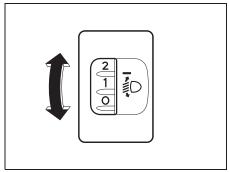

75RM008

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle-load conditions.


(For petrol engine (without CNG) model)

Loading Conditions	Switch Position
Driver (1 Seat)	0
Driver + Co-Driver (2 Seats)	0.5
Driver + Co-Driver + 2nd row 3 Seats (Total-5 Seats)	1.5
All Passengers (7 Seats)	2.5
All Passengers + Cargo (Evenly distributed load in luggage boot)	3
Driver + Cargo (Evenly distributed load in luggage boot)	4.5

(For CNG model)

Loading Conditions	Switch Position
Driver (1 Seat)	0
Driver + Co-Driver (2 Seats)	0.5
Driver + Co-Driver + 2nd row 3 Seats (Total-5 Seats)	1
All Passengers (7 Seats)	2
All Passengers + Cargo (Evenly distributed load in luggage boot)	2.5
Driver + Cargo (Evenly distributed load in luggage boot)	4

Turn Signal Control Lever

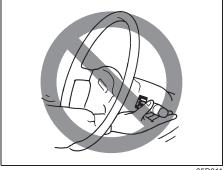

65D611


WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Turn Signal Operation

With the ignition switch in "ON" position or the ignition mode "ON", move the lever upward or downward to activate the right or left turn signals.


Normal turn signal

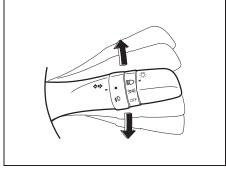

73R0059

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

Lane change signal

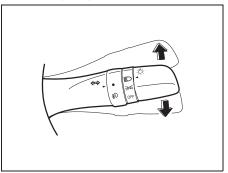

73R0060


Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.

- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.

NOTE:

The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information display" in this section.

Hazard Warning Switch

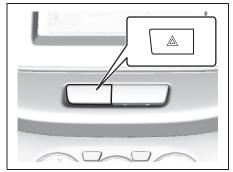


73R001

Push the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

Windshield Wiper and Washer Lever

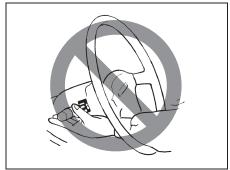

571 21128

WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and Washer Operation

When the ignition switch is in "ON" position or the ignition mode is "ON", you can use the wiper/washer lever or switch.


When the wipers are under heavy load such as covered by snow, the breaker will be activated and the wipers will stop operating to protect the wiper motor from overheating.

If the wiper stops during operation, do the following methods.

- 1) Stop the vehicle in a safe place, and turn the engine off.
- 2) Move the wiper lever and switch to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and the wipers will be able to use.

If you cannot use the wipers after a while, there may be another problem. Ask a Maruti Suzuki authorised workshop to have the wipers inspected.

Windshield Wipers

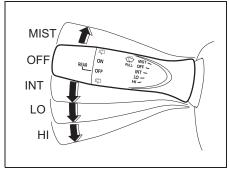


72R0126

To turn the windshield wipers on, move the lever down to one of the three operating positions. In "INT" position, the wipers operate intermittently. "INT" position is very convenient for driving in mist or light rain. In "LO" position, the wipers operate at a steady low speed. In "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to "OFF" position.

Move the lever up and hold it to "MIST" position, the windshield wipers will turn on continuously at low speed.

Windshield Washer

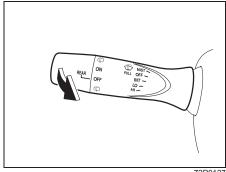

72R0127

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and "INT" position is equipped.

WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- · Do not use radiator antifreeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also damage your vehicle's paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.

Rear Window Wiper/Washer Switch

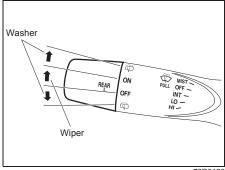

72R0128


To turn the rear wiper on, twist the rear wiper switch on the end of the lever forward to "ON" position. To turn the rear wiper off, twist the switch rearward to "OFF" position.

To spray window washer fluid, twist the switch rearward from "OFF" position, or twist the switch forward from "ON" position. The rear wiper will turn on automatically while spraying the window washer fluid.

NOTICE

Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

Tilt Steering Lock Lever

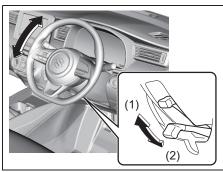

73R001

- (1) LOCK
- (2) UNLOCK

The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- Try moving the steering wheel up and down to make sure it is securely locked in position.

WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.


Horn



73R0062

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position or any ignition mode.

Heated Rear Window Switch (if equipped)

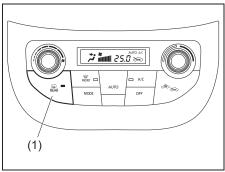

72R0043

When the rear window is misted, push this switch (1) to clear the window.

An indicator light will come on when the defogger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.

NOTICE

The heated rear window use a large amount of electricity. Turn off the switch after the window have become clear.

NOTE:

- The defogger will work only when the engine is running.
- The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the leadacid battery.

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

A WARNING


Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).

MARNING

Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer Towing your vehicle

Your MARUTI SUZUKI was originally designed to carry people and a normal amount of cargo, not to tow a trailer.

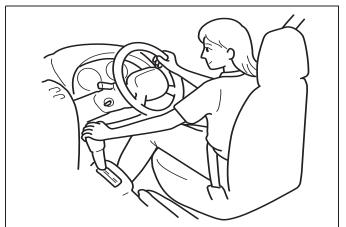

60G408

OPERATING YOUR VEHICLE

Daily Inspection Checklist	3-1
Engine Oil Consumption	
Ignition Switch (Vehicle without	
Keyless Push Start System)	3-2
Engine Switch (Vehicle with	
Keyless Push Start System)	3-4
Keyless Push Start System (if equipped)	
Parking Brake Lever	
Pedal	
Starting / Stopping Engine	0-12
(Vehicle without Keyless Push Start System)	2 11
	3-1
Starting / Stopping Engine	2.44
(Vehicle with Keyless Push Start System)	
Using the Transmission	
Gearshift Indicator (if equipped)	
SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped) .	
ENG A-STOP System (Engine Auto Stop Start System)	
equipped)	3-20
Cruise Control (if equipped)	3-37
Parking Sensors	3-40
Rearview Camera (if equipped)	3-4
Braking	3-48
Electronic stability program (ESP®) (if equipped)	3-5

Daily Inspection Checklist Before Driving



60A187S

- Make sure that windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tyres for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.

Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.

3) Look for fluid and oil leakage.

NOTE:

It is normal for water to drip from the air conditioning system while and after use.

- Make sure the hood is fully closed and latched.
- Check the headlights, turn signal lights, brake lights and horn for proper operation.
- Adjust the seat and head restraint (if equipped).
- Check the brake pedal feeling and the adjustment condition for the parking brake lever or pedal. Refer to "Brakes" in "INSPECTION AND MAINTENANCE" section for details.
- 8) Adjust the mirrors.
- 9) Make sure that you and all passengers have properly fastened the seat belts.
- 10)Make sure that all warning lights come on as the ignition switch is turned to ON position or the ignition switch is turned "ON" or pushed to "ON" mode.
- 11)Check all gauges.
- 12)Make sure that the BRAKE SYSTEM WARNING light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery fluid (acid) level
- 5) Windshield washer fluid level
- 6) Hood latch operation

Pull the hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Be sure to close the hood securely after checking for proper latch operation. See the item "All latches, hinges and locks" of "CHASSIS AND BODY" in "Periodic Maintenance Schedule" in "INSPECTION AND MAINTENANCE" section for lubrication schedule.

WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, or before a long distance driving (like highway driving) check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre.

Engine Oil Consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumption depends on viscosity and quality of the oil and your driving conditions.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km driving.


Oil consumption: Max. 1.0 L per 1000 km

When judging the amount of oil consumption, note that the oil may become diluted and it is difficult to judge the accurate oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed. You should also be aware that the diluting ingredients evaporate out when the vehicle

is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

Ignition Switch (Vehicle without Keyless Push Start System)

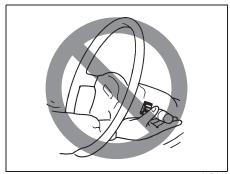


65D611

▲ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

OPERATING YOUR VEHICLE

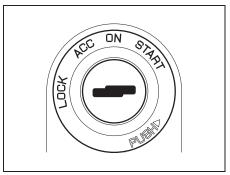


68PH00310

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

Manual transmission

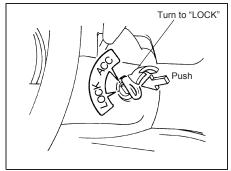

60G033

Manual Transmission vehicles:

You must push in the key to turn it to LOCK position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

· Automatic Transmission vehicles:

The gearshift lever must be in P (Park) position to turn the key to LOCK position. It locks the ignition and prevents normal use of the steering wheel and gearshift lever.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering wheel, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON


This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

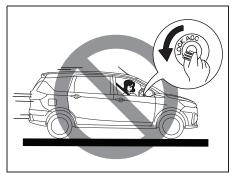

72RM03004

WARNING

- Never return the ignition switch to the LOCK position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.
- Always return the ignition switch to LOCK position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children may be able to start the vehicle or shift the transmission into neutral, which could result in an accident. There is also a danger that children may injure themselves by playing with the power windows or other moving features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

NOTICE

- Do not leave the ignition switch in ON position if the engine is not running as the lead-acid battery will discharge.
- If you stop the engine while the vehicle is in motion, the automatic transmission may be damaged. Avoid stopping the engine while driving.
- Do not use the starter motor for more than 12 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult a Maruti Suzuki authorised workshop.

Engine Switch (Vehicle with Keyless Push Start System)



73R0063

LOCK (OFF)

This mode is for parking the vehicle. When this mode is selected by pressing the engine switch and then any door (including the tailgate) is opened or closed, the steering will be locked automatically.

OPERATING YOUR VEHICLE

ACC

Press the engine switch to select this ignition mode to use such electric equipment as the audio system, outside rearview mirrors and accessory socket with the engine off. When this position is selected, the information display in the instrument cluster shows the following message: "ACC" IGNITION SWITCH POSITION. Refer to "Information Display" in "BEFORE DRIVING" section for details.

ON

· With the engine off:

You can use such electric equipment as the power windows and wipers with the engine off. When this ignition mode is selected by pressing the engine switch, the information display in the instrument cluster shows the following message: "ON" IGNITION SWITCH POSITION. Refer to "Information Display" in "BEFORE DRIVING" section for details.

· With the engine on:

All electric equipment is operational. The vehicle can be driven when you have selected this ignition mode by pressing the engine switch.

START

· Manual transmission vehicles:

Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after shifting to "N" (Neutral) and depressing the brake and clutch pedals.

• Automatic transmission vehicles: Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after placing the gearshift lever in "P" (Park) position and depressing the brake pedal. (If you need to restart the engine while the vehicle is moving, shift into "N".)

NOTICE

Do not leave the engine switch in "ACC" or "ON" mode when the engine is not running. Avoid using the radio or other electric accessories for a long time when the engine switch is in the "ACC" or "ON" mode when the engine is not running, otherwise the lead-acid battery may discharge.

NOTE:

- You do not need to keep the engine switch pressed until the engine starts.
- In the presence of strong radio wave or noise, you may not be able to change the ignition mode to "ACC" or "ON" or to start the engine using the engine switch. In this case, the information display in the instrument cluster will show the following message: KEY FOB NOT DETECTED.

Unreleased Steering Lock Warning

If the steering lock remains engaged when you press the engine switch to change the ignition mode to "ON", the information display in the instrument cluster shows the message: "TRN. STEERING WHEEL TO RELEASE LOCK". Refer to "Information Display" in "BEFORE DRIVING" section for details.

NOTE:

The steering lock may not be released and the immobilizer/keyless push start system warning light turns on if some load is applied on the steering wheel. If this happens, turn the steering wheel system to the right or left to relieve it from the load before you press the engine switch again to change to the desired ignition mode.

Keyless Push Start System (if equipped)

Provided the keyless push start system remote controller is within the interior workable area (refer to the related explanation in this section), you can use the engine switch for starting the engine and selecting an ignition mode ("ACC" or "ON"). In addition, the following functions can be used:


- Keyless entry function. Refer to "Keyless entry system transmitter /Keyless push start system remote controller (if equipped)" in "BEFORE DRIVING" section for details.
- Locking and unlocking doors (including the tailgate) using a request switch. Refer to "Keyless entry system transmitter /Keyless push start system remote controller (if equipped)" in "BEFORE DRIVING" section for details.
- Immobilizer (anti-theft) function. Refer to "Immobilizer System" in "BEFORE DRIVING" section for details.

Engine Switch Illumination

The engine switch is illuminated (lit) in the following situations:

- When the engine is off and the driver's door is open, or for 15 seconds after the driver's door is closed. The illumination will fade out after 15 seconds passed.
- When the engine is off and the position lights are on. The illumination will go out when the position lights are turned off.
- When the engine is on and the position lights and/or the headlights are on. The illumination will go out when the position lights and the headlights are turned off.

OPERATING YOUR VEHICLE

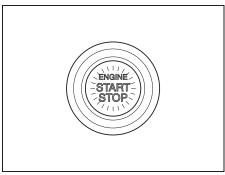

82K253

NOTE:

To save the lead-acid battery, the illumination will be automatically turned off when both of the following conditions are simultaneously met:


- The headlights and position lights are turned off.
- 15 minutes has elapsed since opening the driver's door

Selection of Ignition Modes

Press the engine switch to select "ACC" or "ON" mode as follows when you use an electric accessory or check the operation of instruments without running the engine.


- Bring the keyless push start system remote controller with you and sit in the driver's seat.
- 2) Manual transmission Without depressing the clutch pedal, press the engine switch (1).

Automatic transmission – Without depressing the brake pedal, press the engine switch (1).

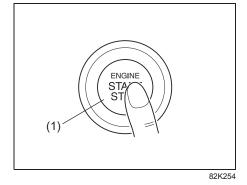


Every time you press the engine switch, the ignition mode changes as follows.

Manual Transmission

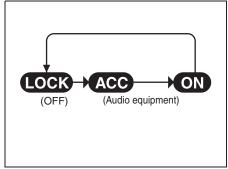

68PH00322

Automatic Transmission

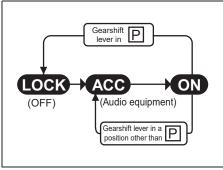


57L31006

NOTE:

 Automatic transmission – If the gearshift lever is in any position other than "P", or if the knob button is pushed when the gearshift lever is in P position, the ignition mode cannot be returned to "LOCK" (OFF).

If the master warning indicator blinks and the ignition modes cannot be selected

Your keyless push start system remote controller may not be sensed as being within the "interior workable area" (refer to the related explanation in this section). Try again after making sure you have the remote controller with you. If the ignition modes still cannot be selected, the battery of the remote controller may be discharged. To be able to select an ignition mode, you must then use the following method:

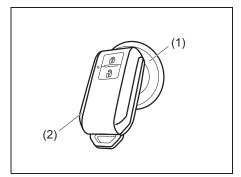

52RM30020

- Without depressing the brake pedal and the clutch pedal, push the engine switch (1).
- 2) The master warning indicator light in the instrument cluster blinks and the message "PLACE KEY FOB ON START SWITCH" appears in the information display within about 10 seconds. Touch the engine switch with the LOCK button end of the remote controller (2) for about 2 seconds.

NOTE:


 If you still cannot select the ignition modes, there may be some problems with the keyless push start system. Contact a Maruti Suzuki authorised workshop for an inspection of the system.

- The immobilizer/keyless push start system warning light come on for about 5 seconds while the master warning indicator light is blinking. In addition, the information display in the instrument cluster will show a message during this time. Refer to "Information Display" in "BEFORE DRIVING" section for details.
- You may customize the system to cause the interior buzzer to sound once for the "remote controller out of sensing range" warning. To incorporate this customization, please contact a Maruti Suzuki authorised workshop.
- · If the battery of the remote controller is about to become completely discharged. the keyless push start system remote controller battery consumption warning light in the instrument cluster will come on for a few seconds when you press the engine switch to change the ignition mode to "ON". Refer to "Keyless Push Start System Remote Controller Battery Consumption Warning Light" in "Keyless Entry System Transmitter/Keyless Push Start System Remote Controller (if equipped)" in "BEFORE DRIVING" section for details. For details on replacing the battery, refer to "Keyless Entry System Transmitter/Keyless Push Start System Remote Controller (if equipped)" in "BEFORE DRIVING" section.

"Remote Controller Outside" Warning

When either of the conditions described below is met, the system causes a "Remote Controller Outside" warning by sounding the interior and exterior buzzers. At the same time, the immobilizer/keyless push start system warning light blinks.

- Any door is opened and then closed while the remote controller is not inside the vehicle and the engine is running or the ignition mode has been changed to "ACC" or "ON" by pressing the engine switch.
- The remote controller is not inside the vehicle when you attempt to start the engine after changing the ignition mode to "ACC" or "ON" by pressing the engine switch.

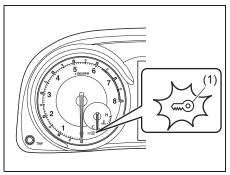

72RH4013


Immobilizer/keyless push start system warning light (blinks)

NOTE:

- If the warning is given, relocate the remote controller as soon as possible.
- Any attempt to start the engine will fail while the warning is active. Blinking of the immobilizer/keyless push start system warning light in the instrument cluster will indicate this condition. Refer to "Warning and Indicator Lights" in "BEFORE DRIVING" section for details.

- Blinking of the immobilizer/keyless push start system warning light should stop shortly after the remote controller is brought back inside the vehicle. If the immobilizer/keyless push start system warning light does not stop blinking, change the ignition mode to "LOCK" (OFF) by pressing the engine switch and then perform the engine starting operation.
- Always keep the remote controller with you as the driver.

Interior Workable Area for Engine Starting, Ignition Mode Selection and "Remote Controller Outside" Warning

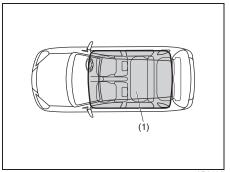

73R0198


(1) Interior workable area

The "interior workable area" for these functions is defined as all the interior spaces except for the space above the instrument panel.

NOTE:

- Even when the remote controller is in the "interior workable area", if it is in any of the following conditions, you may not be able to start the engine or select the ignition modes, and the "remote controller outside" warning may be given.
 - -The remote controller's battery is low.
 - -The remote controller is affected by strong radio signals or noise.
- The remote controller is in contact with or covered by a metallic object.
- -The remote controller is in stowage like the glove box or a door pocket.
- -The remote controller is in the sun visor pocket or on the floor.
- Even when the remote controller is outside the "interior workable area", if it is in any of the following conditions, you may be able to start the engine or select the ignition mode. The "remote controller outside" warning may not be given at that time.
 - -The remote controller is outside the vehicle but very close to a door.
 - -The remote controller is on the instrument panel.

Parking Brake Lever

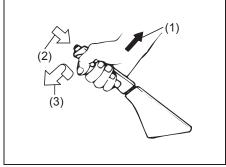

54G039

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

For automatic transmission vehicles, always set the parking brake before moving the gearshift lever to P (PARK) position. If you park on an incline and shift into "P" before setting the parking brake, the weight of the vehicle may make it difficult to shift out of "P" when you are ready to drive the vehicle.

When preparing to drive the vehicle, move the gearshift lever out of P position before releasing the parking brake.

WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.
- When parking on an uphill, turn the steering wheel so that the front wheels point to the center of the road.
- When parking on a downhill, turn the steering wheel so that the front wheels point to the curb.

WARNING

Whenever parking, make sure the gearshift lever for manual transmission vehicles is in 1st gear or "R" (Reverse) and the gearshift lever for automatic transmission vehicles is in "P" (Park). Remember, even though the transmission is in gear or in Park, you must set the parking brake fully.

WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake.
- Manual Transmission turn off the engine, then shift into reverse or first gear.
 - Automatic Transmission shift into "P" (Park) and turn off the engine.
- 3) Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake. When you return to your vehicle, you must remember to first set the parking brake, then remove the wheel chocks.

WARNING

Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:


- Gas may leak from a cigarette lighter or spray can and may lead to a fire.
- The glasses, plastic cards or CD cases, etc. may deform or crack.
- Soft drink cans may fracture.

Parking Brake Reminder Buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.


Pedal

Manual Transmission

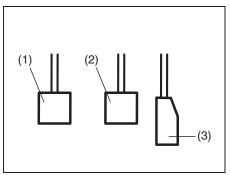

80J2121

Automatic Transmission

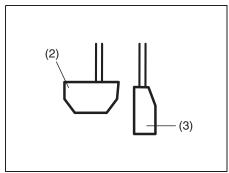

80J2122

Clutch Pedal (1) (for manual transmission)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

A WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal (2)

Your vehicle is equipped with front disc brakes and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust. etc.

Automatic Transmission - You may hear occasional sound when you release brake pedal while vehicle is in "D" (Drive) mode and about to move. This is a normal phenomenon

WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a Maruti Suzuki authorised workshop.

WARNING


Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

Starting / Stopping Engine (Vehicle without Keyless Push Start System)

Starting Engine

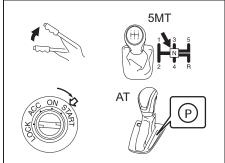

72RH4020

- 1) Check that the parking brake is set fully.
- Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- 3) Manual transmission vehicles: Shift into "N" (Neutral). Hold the clutch pedal and brake pedal fully depressed. Automatic transmission vehicles: If the gearshift lever is not in "P" (Park) position, shift into "P" (Park).
- 4) With your foot taken off accelerator pedal, crank the engine by turning the ignition key to "START". Release the key immediately after the engine has started.

NOTICE

- Automatic transmission vehicles: In case that you need to restart the engine while the vehicle is moving, shift into "N". Otherwise the engine and transmission can be damaged.
- For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine dose not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult a Maruti Suzuki authorised workshop.

NOTE:

 Automatic transmission vehicles: Automatic transmission vehicles have a starter interlock device. The engine starts when the gearshift lever is in either "P" or "N".

Stopping Engine


NOTICE

Automatic transmission:

If you stop the engine while the vehicle is in motion, the automatic transmission may be damaged. Avoid stopping the engine while driving.


Starting / Stopping Engine (Vehicle with Keyless Push Start System)

Starting Engine

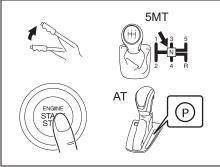

72RH4021

- 1) Check that the parking brake is set fully.
- Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- 3) Manual transmission vehicles:
 Shift into "N" (Neutral). Hold the clutch
 pedal and brake pedal fully depressed.
 Automatic transmission vehicles:
 If the gearshift lever is not in "P" (Park)
 position, shift it to "P" (Park). Hold the
 brake pedal fully depressed.
- 4) The "PUSH START SWITCH" message will appear in the information display in the instrument cluster.

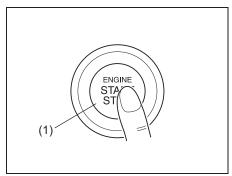

82K254

- 5) With your foot taken off the accelerator pedal, push the engine switch (1). When the engine is started, the starter motor will automatically stop.
- Even if you fail to start the engine, the starter motor will stop turning automatically after approximately 12 seconds. In this case, press the engine switch to select "LOCK" (OFF) mode and restart the engine.

If there is a problem with the system, the engine will not start automatically even if the switch is pressed. In case the starter motor does not turn or stops immediately, start the engine by the following procedure.

- a. Press the engine switch to select the "ON" mode.
- b. Perform the above procedure 1) to 3).

c. Keep the engine switch pressed until the engine starts. Release your finger from the engine switch after the engine has started.

NOTICE

If the engine does not start, press the engine switch to select "LOCK" (OFF) mode and wait for more than 30 seconds before trying again, for protection of a lead-acid battery and a starter motor. If the engine does not start after several attempts, consult a Maruti Suzuki authorised workshop.

NOTE:

- You do not need to keep the engine switch pressed to start the engine.
- Manual transmission vehicles:
 The engine of a manual transmission vehicle will not start unless the clutch pedal is depressed.
- Automatic transmission:
 Automatic transmission vehicles have a starter interlock device. The engine starts when the gearshift lever is in either "P" or "N" position.
- During the engine starting procedure, messages on the information display will help you. Refer to "Information Display" in "BEFORE DRIVING" section for details.

Stopping Engine

- Depress the engine switch to stop the engine after the vehicle stopped completely.
- If the engine remains stopped for a while after it was stopped unexpectedly or was raced before stopping, a clicking sound may be heard from around the engine when it is restarted. This is not a malfunction. Always let the engine idle before stopping it.

NOTICE

Automatic transmission vehicles: If you stop the engine while the vehicle is in motion, the automatic transmission may be damaged. Avoid stopping the engine while driving.

Emergency Stop


In case of emergency, you can stop the engine by quickly pushing the engine switch more than 3 times, or pushing and holding the engine switch for more than 2 seconds while the vehicle is in motion.

NOTE:

Except in cases of emergency, do not stop the engine while the vehicle is in motion. The steering and braking operation will require more effort when the engine is stopped. Refer to "Braking" in this section.

Master Warning Indicator Light Blinks and Engine cannot be started

Your keyless push start system remote controller may not be sensed as being within the interior workable area. Try again after checking that you have the remote controller with you. If the engine still cannot be started, the battery of the remote controller may be discharged. To start the engine, use the following method:

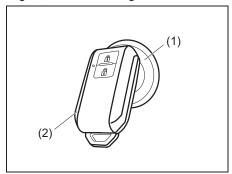

52RM30020

- 1) Check that the parking brake is set fully.
- 2) Manual transmission vehicles: Shift into "N" (Neutral). Hold the clutch and brake pedals fully depressed. Automatic transmission vehicles: If the gearshift lever is not in "P" (Park) position, shift it to "P" (Park). Hold the brake pedal fully depressed.
- 3) The "PUSH START SWITCH" message will appear in the information display in

- the instrument cluster. Press the engine switch (1).
- 4) The master warning indicator light in the instrument cluster blinks within about 10 seconds. Touch the engine switch with LOCK button side of remote controller (2) for about 2 seconds.

NOTE:

- If you still cannot start the engine after several attempts using the above method, there may be a problem elsewhere, such as a low lead-acid battery. Consult a Maruti Suzuki authorised workshop for inspection.
- The immobilizer/keyless push start system warning light will come on for about 5 seconds while the master warning indicator light is blinking. In addition, the information display will show a certain message during this time. Refer to "Information Display" in "BEFORE DRIV-ING" section for details.
- You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. Please consult a Maruti Suzuki authorised workshop for the customization.

• If the battery of the remote controller is about to become completely discharged, the corresponding message will appear in the information display when you press the engine switch to change the ignition mode to "ON". For details on replacing the battery, refer to "Keyless Entry System Transmitter/Keyless Push Start System Remote Controller (if equipped)" in "BEFORE DRIVING" section.

Returning the Ignition Mode to "LOCK" (OFF)

Automatic Transmission – To ensure safety, the ignition mode can be returned to "LOCK" (OFF) by pressing the engine switch only when the gearshift lever is placed in P position without pressing the knob button.

NOTE:

In the case of an automatic transmission model, the ignition mode cannot be returned to "LOCK" (OFF) mode if the gearshift lever is in any other position than "P".

Certain problems like a fault in engine system may prevent the engine switch from going back to "LOCK" (OFF) mode. If this happens, have the vehicle inspected by a Maruti Suzuki authorised workshop after doing the following:

- Lock the doors using the key to prevent theft. (The request switches and the keyless push start system remote controller cannot be used to lock them.)
- Disconnect the negative cable from the lead-acid battery to prevent discharge.

"LOCK" (OFF) mode reminder buzzer If the driver's door is opened without returning the ignition mode to "LOCK"

returning the ignition mode to "LOCK" (OFF) by pressing the engine switch, a buzzer sounds to warn you of this state.

- If you open the driver's door after pressing the engine switch to change the ignition mode to "ACC", the interior buzzer beeps intermittently.
- The buzzer will stop sounding if you then push the engine switch twice, thus bringing it back the ignition mode to "LOCK" (OFF).

NOTE:

Whenever you leave the vehicle, make sure you have returned the ignition mode to "LOCK" (OFF) using the engine switch and then lock the doors. Without returning the ignition mode to "LOCK" (OFF), you cannot use a request switch or keyless push start system remote controller to lock the doors.

Steering lock warning buzzer

If the steering lock fails to engage due to a fault in the system when the ignition mode is turned to "LOCK" (OFF) by pressing the engine switch and any door (including the tailgate) is opened or closed, the interior buzzer will warn you of this condition with repeated short beeps. If this happens, have the vehicle inspected by a Maruti Suzuki authorised workshop.


Using the Transmission

▲ WARNING

Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

Manual Transmission

5MT model

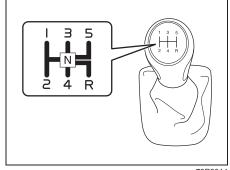

73R0014

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized, which provides for quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Ke ep the engine speed does not rise into the red zone of the tachometer.

Downshifting maximum allowable speeds

5MT model (For K15C model)

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	75
4th to 3rd	110
5th to 4th	150*

*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

▲ WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

NOTICE

Before engaging reverse gear [R], check that the vehicle is completely stationary and gear lever is in neutral [N] position. After depressing clutch pedal fully, shift to [R].

NOTE:

If it is difficult to engage reverse gear [R], follow below procedure.


- 1. Put gear lever in neutral [N].
- 2. Release clutch pedal once.
- 3. Again depress the clutch pedal and shift from [N] to [R].

NOTICE

- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

6-Speed Automatic Transmission

Gearshift lever

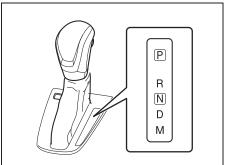

72RH4022

The gearshift lever is designed so that it cannot be shifted out of "P" position unless the ignition switch is in "ON" position or the ignition mode is ON and the brake pedal is depressed.

Use the gearshift lever positions as follows:

P (Park)

Use this position to lock the transmission when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

N (Neutral)

Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

D (Drive)

Use this position for all normal driving.

With the gearshift lever in "D" range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

M (manual mode)


Use this position for driving in the manual mode.

Refer to "Manual mode" later in this section for details on how to use the manual mode.

WARNING

Always depress the brake pedal before shifting from "P" (Park) (or "N" (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.

The gearshift lever has a lock mechanism to help prevent accidental shifting. Shift the gearshift lever as follows:

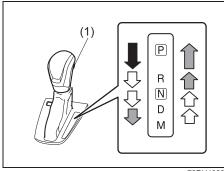

72RH4023

(1) knob button

•	Shift with the knob button (1) pushed in and the brake pedal depressed.
҈₽₽	Shift with the knob button (1) pushed in.
҈≎	Shift without the knob button (1) pushed in.

A CAUTION

For the vehicles with the keyless push start system, if you cannot press the engine switch firmly, the engine may not start.

Even if you shift the gearshift lever into "R" or "D" position without the engine running, the vehicle does not move.

If you try to move your vehicle under the above-mentioned condition, the vehicle may move in unexpected directions on a slope, etc. This may cause an accident. When starting the engine, press the engine switch firmly. Also, make sure that the engine is running by checking engine sound or warning and indicator lights.

NOTICE

- Do not shift the gearshift lever into "R" while moving forward, or the transmission may be damaged. If you shift into "R" when the vehicle speed is over 11 km/h, the transmission will not shift into reverse.
- Be sure to take the following precautions to help avoid damage to the automatic transmission:
 - Make sure that the vehicle is completely stationary before shifting into "P" or "R".
 - Do not shift from "P" or "N" to "R", "D" or "M" when the engine is running above idle speed.
 - Do not rev the engine with the transmission in a drive position ("R", "D" or "M") and the front wheels not moving.
 - Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.


NOTE:

 
- When you shift the gearshift lever into "P" and stop the engine before setting the parking brake lever, if you try to restart the engine and shift the gearshift lever into the position other than "P", it may reduce gearshift lever capability, or unusual sound and shock may occur. However, this is not abnormal.
- Always shift the gearshift lever without pushing in the knob button except when you shift from "P" to "R", from "D" to "M", from "N" to "R" or from "R" to "P". If you always push in the knob button when shifting the gearshift lever, you could shift into "P". "R" or "M" by mistake.
- If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.

Manual mode

The automatic transmission can shift gears automatically. When using the manual mode, you can shift gears in the same manner as conventional manual transmission.

To use the manual mode, shift the gearshift lever from "D" to "M".

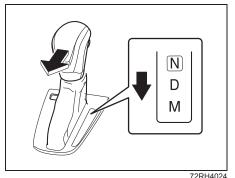



52RM30030

- (1) Manual mode indicator
- (2) Gear position

The information display shows the manual mode indicator and the current gear position.

NOTE:

- · The indicated gear position in the information display when you shift from "D" to "M" is the gear position that was selected automatically when the gearshift lever was in "D".
- · You can change to the manual mode temporarily by pulling the shift paddle on the steering wheel toward you when the gearshift lever is in "D".

Shifting in the manual mode

You can shift gears from 1st to 6th depending on driving speed.


NOTE:

- The gears are not shifted automatically. To shift the transmission, the driver must operate the shift paddle to the "+" or "-" direction.
- · When the driving speed becomes slow. the gear shifts down automatically, and when the vehicle stops, the gear position will be in 1st gear without shifting the gearshift lever.

NOTE:

When you change gear, sometimes the transmission may not shift to the desired gear but a buzzer sounds instead. This is to maintain good drivability and to protect the transmission.

Using the shift paddle

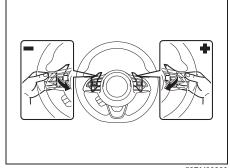

52RM30280

To shift up, pull "+" side shift paddle. located on right side of the steering wheel.

toward you. When you release your finger from the switch, the switch will return to the original position.

To shift down, pull "-" side shift paddle, located on left side of the steering wheel, toward you. When you release your finger from the switch, the switch will return to the original position.

NOTE:

 
- To shift gears continuously, release your finger from the shift paddle, then pull the shift paddle again. You cannot shift gears continuously while holding the shift paddle toward you.
- When you pull the both "+" and "-" shift paddle simultaneously, the gear may not shift.

Canceling the manual mode

To cancel the manual mode, shift the gearshift lever from "M" to "D".

Temporary manual mode

Pull the shift paddle toward you when driving with the gearshift lever in "D". The information display shows the manual mode indicator and the current gear position.




52RM30030

- (1) Manual mode indicator
- (2) Gear position

The temporary manual mode will be canceled automatically in the following situations.

- When you press and hold the accelerator pedal for a certain period of time without shifting gears.
- When driving speed becomes slow.

If You Cannot Shift Automatic Transmission Gearshift Lever Out of "P" (PARK)

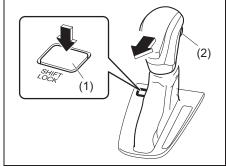

72PH4010

Vehicles with an automatic transmission have an electrically operated park-lock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the automatic transmission cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.

- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- Make sure the key is in ON or ACC position, or the ignition mode is "ON" or "ACC".

4) With the release button (1) pushed, push the knob button (2) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to a Maruti Suzuki authorised workshop for repair.

Gearshift Indicator (if equipped)



72RH4027

In the following cases, the gearshift indicator is indicated on the information display when the ignition switch is in "ON" position or the ignition mode is "ON".

- When the gearshift lever is in a position other than "N" (Neutral).
- For vehicles equipped with the cruise control, when the system is not in use.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated on the display while driving, we recommend you to shift up or down the gear until the arrow disappears. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to "Using the Transmission" in this section.

WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:

- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/ DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.
- If any of the electrical systems such as the ESP[®] is working, the gearshift indicator will disappear temporarily.

Example of the gearshift indicator

Indication	Description
-4	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended. • In this case, shifting up to 4th gear position is recommended.
•3	Current gear position is optimal for the vehicle speed and/or engine revolution. • In this case, 3rd gear position is the best.
-2	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended. • In this case, shifting down to 2nd gear position is recommended.

SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)

SHVS has an Integrated Starter Generator (ISG) instead of conventional generator to get a better fuel consumption.

Integrated Starter Generator (ISG) is a generator which incorporated a motor function.


The ISG has the following 3 functions.

- Deceleration energy regenerating function
- Engine power assist function
- Starter motor function

WARNING

Dripping engine oil, brake fluid and coolant, etc. to the ISG may cause a fire or malfunction. Do not spill them when pouring.

Deceleration Energy Regenerating Function

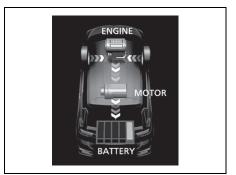

72R0096

While decelerating your vehicle, the ISG generates electricity without engine power. This reduces engine loads and improves fuel consumption.

While decelerating your vehicle, deceleration energy regenerating function will be activated when the following conditions are satisfied.


- Gearshift lever is not in "N" (Neutral).
- Clutch pedal is not depressed.
- Engine speed is more than 950 rpm.
- Inside temperature of lead-acid battery is in normal condition.
- Lithium-ion battery is not fully charged and inside temperature is in normal condition.

etc.

NOTE:

The deceleration energy regenerating function may not work depending on vehicle conditions.

Engine Power Assist Function

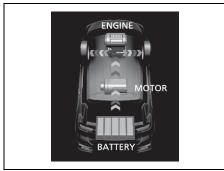

72R0097

While the vehicle is running, ISG assists engine power as a motor in the following limited condition. This reduces engine loads and improves fuel consumption.

While the vehicle is running with the engine speed at approximately 4000 rpm or less, engine power assist function will be activated when all of the following conditions are satisfied.


- SHVS system and ENG A-STOP system are working properly. ("ENG A-STOP OFF" indicator light is not blinking.)
- · Clutch pedal is not depressed.

- ESP[®] (if equipped) is not activated.
- Accelerator pedal is excessively depressed.
- Lead-acid battery and lithium-ion battery are fully charged and each inside temperature is in normal condition.
- Engine coolant temperature is in normal condition.
- ISG inside temperature is in normal condition.

NOTE:

- The engine power assist function may not work depending on vehicle conditions.
- The engine power assist function may not work while the battery capacity is being checked right after the engine start, and so on.
- The subjective feeling of the horn sound, head lamp illumination and A/C blower speed is likely to be different when the deceleration energy regeneration function and engine power assist function are active.

Starter Motor Function

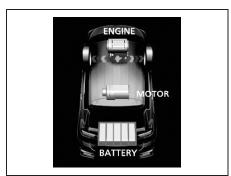

72R0098

After the engine auto stop by the ENG A-STOP system, the engine will be restarted using a cranking power of the ISG.

The starting with the ISG is quiet compared with starting by the conventional starter motor.

NOTE:

When you restart the engine by pushing the engine switch, the conventional starter motor is used and you will hear a gear engagement sound.

Lithium-ion Battery Indication




72R0099

The segments in the lithium-ion battery indicator (1) give an approximate indication of the charge of the lithium-ion battery. The number of segments that appear in the indication increases or decreases with the charge of the lithium-ion battery.

NOTE:

The indicator gives an approximate indication. The indication may be delayed or differ from the actual charge of the lithium-ion battery under certain conditions, for example, when the outside temperature is low. Also, the minimum segment is 1 bar and the bar will never be 0. Even when 1 bar is shown, the battery level may be close to be flat.

Deceleration Energy Regenerating Indicator Light

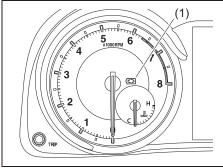

72RH4030

When the deceleration energy regenerating function is working, the deceleration energy regenerating indicator light (1) comes on.

NOTE:

If the gearshift lever is in the "N" (Neutral) position, this light does not come on.

ENG A-STOP OFF Light



52RM30460

If this indicator blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by a Maruti Suzuki authorised workshop.

ENG A-STOP System (Engine Auto Stop Start System) (if equipped)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the ignition switch or the engine switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

NOTE:

If your vehicle is equipped with the auto air conditioning system, you can change the automatic engine stop condition via the information display. Refer to "Information display" in "BEFORE DRIVING" section.

A CAUTION


- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
 - Manual transmission vehicle If the driver's seat belt is unfastened or the driver's door is opened, the engine will restart.
 - Automatic transmission vehicle—
 If the driver's seat belt is unfastened, even if the brake pedal is pressed down, or the driver's door is opened, the engine will be restarted to warn you that the engine was stopped automatically by the ENG A-STOP system.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, turn the ignition switch or push the engine switch to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.

NOTICE

The vehicle equipped with this system uses a dedicated high-perforlead-acid batterv that mance supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the lead-acid battery may die prematurely.

- When replacing the lead-acid battery, use a Maruti Suzuki genuine battery specified in the Specification.
- · Do not draw power from the leadacid battery terminals for electrical products.
- If the vehicle key is in "ACC" position or ignition mode is "ACC" for extended duration, the vehicle may enter a state where the Audio / Navigation equipment may shut off. In any such event, turn the key to OFF position or ignition mode to LOCK (OFF), and after that start the engine and let both the batteries charge for at least 30 Minutes. It is to enable better functioning of both the batteries.

Lithium-ion Battery

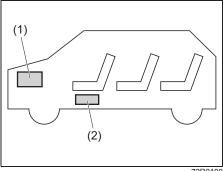

72R0100

- (1) Battery (lead-acid battery)
- (2) Lithium-ion battery

This lithium-ion battery is used exclusively for the vehicle equipped with ENG A-STOP system or SHVS, and located below the front left side seat.

- · Just like a battery (lead-acid battery), the lithium-ion battery also discharges gradually. To prevent the lithium-ion battery from dving, you must charge the lithiumion battery by driving continuously for at least 30 minutes once a month.
- · Vehicle should not be left with ignition in ON or ACC position, or the ignition mode is "ON" or "ACC" for extended periods of time.
- · Do not add any external load to lithiumion battery.

- · The lithium-ion battery is maintenancefree.
- To replace or dispose of the lithium-ion battery, consult a Maruti Suzuki authorised workshop.

▲ WARNING

Wrong handling of the lithium-ion battery may result in fire, electric shock or system malfunction. Accordingly, observe the instructions listed below:

- · Do not dismount or disassemble the lithium-ion battery.
- Do not let the lithium-ion battery come in contact with water or other liquids.
- Do not apply strong impact on the lithium-ion battery.
- Do not step on the lithium-ion battery or put articles on the lithiumion battery.
- Do not disconnect the lithium-ion battery terminals or draw power from the terminals for electrical products.
- If lithium-ion battery gets submerged under water, it can lead to fire.

NOTE:


Lithium-ion battery, if not disposed in an eco-friendly manner and in accordance with the applicable laws, may pose safety and environmental hazard. Maruti Suzuki

ensures proper disposal of this battery through established channels in an ecofriendly manner. Owner shall return this lithium-ion battery to Maruti Suzuki authorized dealerships as soon as it is not fit for use in vehicle. Once the owner returns the lithium-ion battery, Maruti Suzuki will ensure proper disposal in compliance with the laws to avoid legal implications to owners. If batteries are not returned to Maruti Suzuki, it will become owners' responsibility and accountability to ensure proper disposal in accordance with the applicable laws. Maruti Suzuki will not take any responsibility for consequences such as accidents or damages arising due to the abandonment, resale, inappropriate use. modification, dismantling and improper disposal of Lithium-ion battery. Contact your nearby Maruti Suzuki authorized workshop to dispose the used lithium-on battery. 'Battery Recycling Information' and necessary handling instructions are also affixed on the battery pack. For more information, connect Maruti Suzuki customer care.

Automatic Stopping/Restarting of the Engine

Manual transmission vehicle

With the brake pedal depressed, decelerate the vehicle.

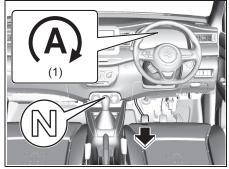

72R0101

- After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to "N", and then release the clutch pedal, the engine will stop automatically.
 - The ENG A-STOP indicator light (green) (1) will come on.

- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to the section, "Conditions to stop the engine automatically".
- During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.
 - For details, refer to the section, "Precautions of when the engine is stopped automatically".


NOTICE

During the automatic engine stop, do not shift the gearshift lever to a position other than "N" without depressing the clutch pedal. If the gear shift lever is in a position other than "N", the engine will not restart automatically even if the clutch pedal is depressed.

NOTE:

The ENG A-STOP system will not operate and engine does not stop automatically under the following conditions:

- Engine auto stop function will be ready once the vehicle runs at a speed exceeding 6km/h after restart of the engine.
- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.
- If the vehicle is equipped with an auto air conditioner, the fan speed will be limited during the automatic engine stop (only in the auto control mode) to keep the cabin air-conditioned for a longer time.

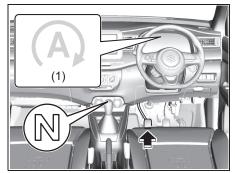

72R0102

 Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) (1) will go off.


While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

 Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.

For details, refer to the section, "Conditions to restart the engine automatically".

Automatic transmission vehicle

 Depress the brake pedal to decelerate while the gearshift lever is in the "D" position will automatically stop the engine before the vehicle is stopped (approximately 9 km/h or less). At the same time, the ENG A-STOP indicator light (green) (1) will remain on.

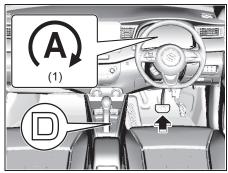

72R0146


The engine is not stopped automatically if all of the conditions to stop the engine automatically are not met, even if the brake pedal is pressed down to decelerate. For details on the conditions for automatically stopping the engine, refer to "Conditions to stop the engine automatically" in this section.

 During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

For details, refer to the section, "Precautions of when the engine is stopped automatically".

NOTE:

- The engine is not stopped automatically when decelerating without depressing the brake pedal, for example, by using engine braking.
- The engine may be stopped automatically when the vehicle is stopped, even if the engine is not stopped automatically before stopping the vehicle (approximately 9 km/h or less).
- Engine auto stop function will be ready once the vehicle runs at a speed exceeding 6km/h after restart of the engine.
- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.
- If the vehicle is equipped with an auto air conditioner, the fan speed will be limited during the automatic engine stop (only in the auto control mode) to keep the cabin air-conditioned for a longer time.

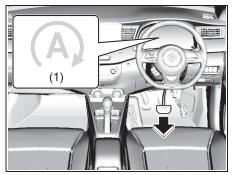

72R0147

 When you remove your foot from the brake pedal, regardless of whether it is before or after stopping the vehicle, the engine is restarted and the ENG ASTOP indicator light (green) (1) goes off.

When restarting the engine, keeping brake force temporarily prevents the vehicle from moving forward by the creeping function. Also, this prevents the vehicle from rolling downward on a hill. For details, refer to the section "Hill hold control system".

NOTE:

When the engine is restarted automatically, the following conditions may be found as the hill hold control system is activated, but this is not a malfunction.

- You may hear a sound from the engine room.
- As brake pedal becomes heavy, it may be difficult for you to depress it.

Precautions of when the engine is stopped automatically

M WARNING

Do not perform any of the following operations while the engine has been stopped automatically. This may result in an accident.

	Operation/Vehicle Condition	Solution	
Common	Engine hood opened The interior buzzer sounds intermittently. After the engine is stopped automatically, it stalls. The ENG A-STOP indicator light (green) goes off.	 To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position (for manual transmission) or "P" position (for automatic transmission). 2) Securely close the engine hood. 3) Turn the ignition switch or push the engine switch to restart the engine. 	
Manual	Driver's seat belt unfastened or driver's door opened The engine is restarted automatically. The ENG A-STOP indicator light (green) blinks 5 times, then goes off.	Fasten the driver's seat belt and/or close the driver's door.	
transmis- sion	Gearshift lever shifted to a position other than "N" without depressing the clutch pedal, driver's seat belt unfastened and driver's door opened The interior buzzer sounds intermittently. After the engine is stopped automatically, it stalls. The ENG A-STOP indicator light (green) goes off.	To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position. 2) Close the door and buckle the seat belt. 3) Turn the ignition switch or push the engine switch to restart the engine.	

	Operation/Vehicle Condition	Solution
Automatic transmis- sion	Driver's seat belt unfastened, or driver's door opened The engine is restarted automatically. The ENG A-STOP indicator light (green) blinks 5 times, then goes off.	Before driving, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "P" position. 2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, press the engine switch to stop the engine.

NOTE:

The following indicator lights in the instrument cluster do not come on when the engine is stopped automatically.

• Malfunction indicator light, electric power steering light, engine oil pressure warning light, charge warning light

Operating conditions of ENG A-STOP system

Standby conditions

If all of the following conditions are met while driving, the automatic engine stop will be permitted.

When the engir	ne is started	The engine is started with the engine hood securely closed.
	Common	 The ENG A-STOP system is not deactivated (OFF). The battery is charged more than a certain amount, and the temperature inside the battery is within the specified range. (#1) The engine coolant temperature is within the specified range. The driver's seat belt is fastened. The driver's door is securely closed. The engine hood is securely closed.
When driving		 Vehicle with automatic heating and air conditioning system> The air from the outlets is sufficiently cooled while cooling or sufficiently warmed while heating. The defroster is turned off.
	Manual transmis- sion	There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system. (#2)
	Automatic transmis-sion	 The gearshift lever is in the "D" or "N" position. (#3) The manual mode is not in use. There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system.

^{#1:} If the battery is discharged, for example, if the vehicle has not been used for a long time or electrical components, such as the navigation system or audio system, have not been used for a long time while the engine was stopped, it may take some time until the system can be in standby.

^{#2:} If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

^{#3:} The system will be in standby even though the gearshift lever is in the "N" position, however, the engine will be stopped automatically when the vehicle is stopped, instead of when it is decelerating (approximately 9 km/h or less) before stopping.

Conditions to stop the engine automatically
If all of the following conditions are met while the standby conditions are met, the engine is stopped automatically when the vehicle is decelerating before stopping or when the vehicle is stopped.

When decelerating before stopping	Automatic transmis- sion	 The ABS or ESP[®] system has not been activated. Brake booster vacuum pressure is normal. The brake pedal is sufficiently depressed. (#) The vehicle is decelerating to a speed of approximately 9 km/h or less. The accelerator pedal is not depressed. The vehicle is not being driven on a steep hill. The brake is not applied abruptly.
	Common	The ABS or ESP® system has not been activated. Brake booster vacuum pressure is normal.
When the vehicle is stopped	Manual transmis- sion	The gearshift lever is in "N" position. The clutch pedal is released.
Сорро	Automatic transmis-sion	 The brake was not applied abruptly before the vehicle was stopped. The brake pedal is sufficiently depressed. (#) The accelerator pedal is not depressed. The vehicle is not stopped on a steep hill.

^{#:} The engine may not be stopped automatically if the brake pedal was depressed lightly or strongly.

Conditions to restart the engine automatically
If any of the following vehicle conditions occur or operations are performed while the engine is stopped automatically, the engine is restarted automatically and the ENG A-STOP indicator light (green) goes off.


		The ENG A-STOP system is deactivated (OFF). The battery continues to be discharged. (#1) Brake booster vacuum pressure is low. (#1) A malfunction was detected in this system. (#2)
Common		 The temperature of the air from the outlets changes greatly, or the cooling and heating performance is insufficient. (#1) The temperature selector was greatly set toward COOL while cooling or greatly set toward HOT while heating. (#1) The defroster is turned on. (#1) The ABS or ESP® system is activated.
Manual transmission		The clutch pedal is depressed.
Automatic transmission		 The foot is removed from the brake pedal. (#3) The accelerator pedal is depressed. The gearshift lever is placed in the "P", "R" or "M" position.
When decelerating (approximately 9 km/h or less for automatic transmission vehicles)	Automatic transmis- sion	 The engine hood was opened. The gearshift lever is placed in the "N" position. The slope of the road suddenly changes. (#1)
When the vehicle is stopped	Common	The driver's seat belt is unfastened. (#1) The driver's door is opened. (#1) The vehicle is moving along a slope. (#1) Some time (about 3 minutes) has passed since the engine was stopped automatically. (#1)
	Automatic transmis- sion	After the gearshift lever is placed in the "N" position, it is returned to the "D" position.

- #1: After the ENG A-STOP indicator light (green) blinks, it goes off. Also, the interior buzzer may sound at the same time.
- #2: Depending on the situations of malfunction, it is a normal restart or the restart as #1.
- #3: The engine may be restarted automatically when the brake pedal is depressed lightly. In this case, when the brake pedal is depressed again, the engine is stopped automatically and the ENG A-STOP indicator light (green) comes on again.

ENG A-STOP OFF Switch

The ENG A-STOP system can be deactivated.

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.
- Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

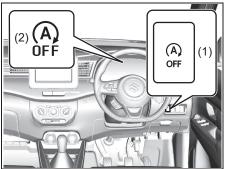

720010

NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.

ENG A-STOP OFF Light



52RM30460

This indicator comes on in the information display.

- This indicator comes on when the ENG A-STOP system is deactivated.
- The indicator blinks when the engine switch is pressed to change the ignition mode to ON, if one of the conditions listed below is met.

The ENG A-STOP system or the SHVS system does not actuate correctly while the indicator is blinking. Have the system inspected by a Maruti Suzuki authorised workshop.

- There may be something wrong with the ENG A-STOP system or the SHVS system.
- An engine component (ISG) or the lead-acid battery is due for replacement.

NOTE:

If the indicator blinks during the automatic engine stop, the engine may shut down.

Cruise Control (if equipped)

The cruise control system allows you to maintain a steady speed without keeping your foot on the accelerator pedal. The controls for operating the cruise control system are on the steering wheel.


You can use the cruise control system under the following conditions:

- For manual transmission vehicle, the gear position is in 3rd, 4th, 5th.
- For automatic transmission vehicle, the select lever is in "D" position, or the gear position is in 3rd, 4th, 5th or 6th in the manual mode.
- The vehicle speed is about 40 km/h or higher.

WARNING


To help avoid loss of vehicle control, do not use the cruise control system when driving in heavy traffic, on slippery or winding roads, or on steep downhills.

Setting cruising speed Cruise control switch

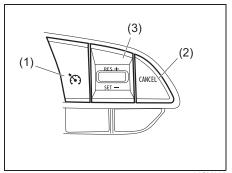

80SM302

- (1) Cruise switch
- (2) "CANCEL" switch
- (3) "RES +/SET -" switch

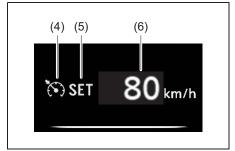

52RM30880

(4) Cruise indicator

- (5) "SET" indicator
- (6) Set speed indication
- Turn on the cruise control system by pushing cruise switch (1). When the cruise indicator (4) appears on the information display, you can set cruising speed.
- Accelerate or decelerate to the desired speed.
- 3) Push down the "RES +/SET -" switch (3), "SET" indicator (5) appears on the information display. At this time, set speed indication (6) also appears on the information display. Take your foot off the accelerator pedal and the set speed will be maintained.

WARNING

If the cruising speed is set by accident, you cannot decelerate or could loose control of the vehicle. This could lead to an accident, resulting in severe injury or death.

Turn off the cruise control system and check that cruise indicator (4) is off when the system is not in use.

NOTE:

Established cruising speed may differ a little from the speed meter indication depending on the road conditions.

Changing speed temporarily

When the cruising speed is maintained, you can temporarily accelerate or decelerate.

To accelerate, depress the accelerator pedal. When you take your foot off the pedal, your vehicle will return to the set speed.

To decelerate, depress the brake pedal. The set speed will be canceled and "SET" indicator (5) will disappear.

To resume the previously set speed, push up the "RES +/SET -" switch (3) and turn on "SET" indicator (5) again when vehicle speed is above 40 km/h. The vehicle will accelerate to the previously set speed and maintain its speed.

NOTE:

For automatic transmission vehicle, when the cruising speed is maintained, you cannot decelerate by using the engine brake even if you downshift from higher gear to 3rd in the manual mode. To decelerate while the cruise control is on, depress the brake pedal or push down the "RES +/ SET -" switch (3).

Changing cruising speed

Using the accelerator pedal

To reset at a faster cruising speed, accelerate to the desired speed using the accelerator pedal and push down the "RES +/SET -" switch (3). The new speed will be maintained.

Using the brake pedal

To reset at a slower cruising speed, decelerate to the desired speed using the brake pedal and push down the "RES +/SET -" switch (3). The new speed will be maintained.

NOTE:

When the brake pedal is depressed, "SET" indicator (5) disappears until you reset the cruising speed.

Using "RES +/SET -" switch

To reset at a faster cruising speed, press repeatedly or hold push up the "RES +/SET -" switch (3). Vehicle speed will steadily increase. When you release the switch, the new speed will be maintained.

To reset at a slower cruising speed, press repeatedly or hold push down the "RES +/SET -" switch (3) until the vehicle has slowed to the desired speed, and then release the switch. The new speed will be maintained.

NOTE:

- You can adjust the set speed by approximately 1 km/h by pushing "RES +/SET – " switch quickly.
- When the current vehicle speed is about 10 km/h or more faster than the previously set speed, the cruising speed cannot be decreased even if the "RES +/ SET —" switch (3) is pushed down.
- When the current vehicle speed is about 10 km/h or more slower than the previously set speed, the cruising speed cannot be increased even if the "RES +/ SET –" switch (3) is pushed up.

Cancelling cruise control

"SET" indicator (5) will disappear and the cruise control will be canceled temporarily with the following conditions:

- Push "CANCEL" switch (2).
- Depress the brake pedal.
- For manual transmission, depress the clutch pedal.
- For automatic transmission vehicle, downshift from 3rd to 2nd in the manual mode.
- The vehicle speed falls more than about 20 percent from the set speed.
- Any time the vehicle speed falls below 40 km/h.
- When the vehicle skids and ESP[®] is activated.

To resume the previously set speed, push up the "RES +/SET -" switch (3) and turn on "SET" indicator (5). The vehicle speed must be above 40 km/h when the vehicle is not under the above conditions.

To turn off the cruise control system, push cruise switch (1) and check that the cruise indicator (4) is off.


Also, if the malfunction indicator light in the instrument cluster comes on or blinks, the cruise control system will be turned off.

NOTE:

If you turn off the cruise control system, the previously set speed in the memory is cleared. Reset your cruising speed again.

Parking Sensors

Information Display Symbol

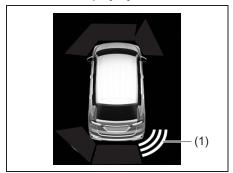

72R0035


- (1) Symbol representing an obstacle detected by parking sensor*
 - * This symbol shows that an obstacle is located on the right rear of vehicle.
- The parking sensor system uses ultrasonic sensors to detect obstacles near
 the rear bumper. If obstacles are sensed
 while you are parking or moving the
 vehicle slowly, the system warns you by
 sounding a buzzer and displaying symbols representing the obstacles on the
 information display in the instrument
 cluster (if equipped).
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obsta-

- cle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.
- The parking sensor function can be used when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to "ON", the gearshift lever is in R position. This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

WARNING

- The parking sensor warns you of obstacles with buzzers and by showing you the location of the obstacles on the information display (if equipped). However, you must still pay full attention yourself while driving.
- The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.

Sensor Locations

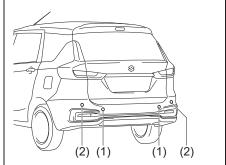

72R0036

- (1) Rear center sensors (2 places)
- (2) Rear corner sensors (2 places)

NOTICE


- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorised workshop.

Working sensors

The sensors that work depends on the position of the gearshift lever as follows:

Gearshift lever position		Manual Transmission		Automatic Transmission	
		R	N, 1st - 5th	R	N, D, 2 or L
Rear sensors	Center	On	Off	On	Off
	Corner	On	Off	On	Off

Approximate areas where obstacles can be detected

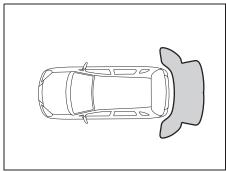

60MH126

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect an obstacle up to about 1.5 m (5 ft) from the rear of vehicle.

WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
 - Sensors are covered with mud, ice or other materials. (Such materials must be removed for normal operation.)
 - Sensors are wet from water splashes or heavy rain.
 - Sensors are covered by a hand, sticker, accessory, etc.
 - There is an accessory or other object attached within the sensor's sensing area.
 - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
 - The height of the bumper is changed due to alteration to the suspension or other causes.
 - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
 - The vehicle is on a rough surface, slope, gravel road or grass field.
 - The vehicle is at a steep angle.

(Continued)

WARNING

(Continued)


- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material like wire netting and ropes
 - Square-shaped curbstones or other objects with sharp edges
 - Tall objects with a large upper part like a road sign
 - Low-profile objects such as curbstones
 - Sound-absorbing objects such as cotton and snow

NOTE:

- Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.
- The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.

sor

Information display symbol (if equipped)

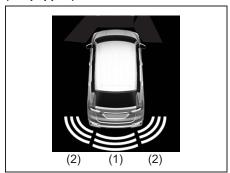

72R0037

- (1) Obstacle detected by rear center sensors
- (2) Obstacle detected by rear corner sensors

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound and a symbol representing the obstacle appears on the information display in the instrument cluster (if equipped).

- · A different symbol is displayed depending on the direction and distance of the obstacle. (if equipped)
- · A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.

Obstacle Indication by Parking Sen
• Warnings when obstacles are detected by corner sensors

Distance (approx.)	Buzzer	Symbol (if equipped)
45 – 60 cm (18 – 24 in)	Short beeps at short intervals	Three lines
35 – 45 cm (14 – 18 in)	Short beeps at very short intervals	Two lines
Less than 35 cm (14 in)	Continuous beep	One line

· Warnings when obstacles are detected by center sensors

Distance (approx.)	Buzzer	Symbol (if equipped)
60 – 150 cm (24 – 59 in)	Short beeps at long intervals	Three lines
45 – 60 cm (18 – 24 in)	Short beeps at short intervals	Trifee liftes
35 – 45 cm (14 – 18 in)	Short beeps at very short intervals	Two lines
Less than 35 cm (14 in)	Continuous beep	One line

NOTE:

- Symbols are displayed with a short delay after the detection of obstacles.
- · If the system detects multiple obstacles simultaneously, the display shows all of their positions using the corresponding symbols. However, the buzzers will sound only for the nearest obstacles

Set sensors

You can select either the normal or trailer mode of the parking sensor via the information display. Refer to "Information display" in "BEFORE DRIVING" section.

Normal mode

All sensors operate. Use this mode under normal conditions.

Trailer mode

The rear corner and rear center sensors are inhibited from operating. Use this mode when towing a trailer.

NOTICE

Check that the normal mode is selected with the parking sensor when steering the vehicle into a garage. If the parking sensor is left in the trailer mode, the rear corner and rear center sensors are not functioning.

Warning and Indicator Messages

Vehicle without the information display symbol

If there is a problem or warning regarding the parking sensor system, a buzzer inform it. Follow its instruction.

The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean
with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the
parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised
workshop.

Vehicle with the information display symbol

If there is a problem or warning regarding the parking sensor system, a message is displayed on the information display in the instrument cluster, and a symbol blinks and the buzzer sounds. If a message is displayed, follow its instruction.

Message	Symbol	Buzzer	Probable cause and remedy
SERVICE PARKING SENSORS 68PH02303	Two blinking lines in a sensor location.	Series of double beeps	There may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.
CLEAN PARKING SENSORS 68PH02304	One blinking line in a sensor location.	Series of single beeps	The indicated sensor is contaminated. Wipe it clean with a soft cloth.

Rearview Camera (if equipped)

When the gearshift lever is shifted to "R" position while the ignition mode is "ON", the rearview camera system automatically shows the view behind the vehicle on the display.

WARNING


The distance viewed in the rearview camera may differ from the actual distance according to the condition of road or the load the vehicle is carrying. Since the camera display area is also limited, backing up by only looking at the display may cause an accident or a collision with an object. The rearview camera cannot replace the driver's attention. The driver alone is responsible for parking and similar driving maneuvers.

- Use the rearview camera only to provide driving assistance.
- Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes and using the rear view mirror.
- Check that the tailgate is securely closed when backing up.

NOTICE

If you use the rearview camera for a long time when the ignition mode is "ON", but the engine is not running, the lead-acid battery may discharge. Do not leave the ignition mode "ON" for a long time when the engine is not running.

Rearview Camera Location

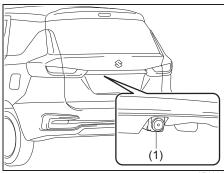

72R0038

(1) Rearview camera

The rearview camera is installed beside the license plate light.

NOTICE

The rearview camera is a precision instrument. If you strike the camera, it may be broken and cause damage resulting in a catch fire or a malfunction.

- · Do not strike the camera.
- Do not remove snow or mud on the camera lens with a stick.

NOTICE

If water enters the rearview camera, it may cause a malfunction or catch fire.

Do not use high pressure water around the camera.

NOTICE

This lens is hard coated to prevent damage or discoloration. Damage or discoloration of lens may obscure the image.

- Do not use a brush to clean lens.
- Do not use alcohol, benzene or thinner to clean the lens.
- Do not use wax on the camera lens.

NOTE:

If body wax gets on the camera lens, wipe off the wax with a clean cloth dampened with mild detergent diluted with water, and then wipe the lens with a dry cloth.

How to Use Rearview Camera

- 1) Press the engine switch to change the ignition mode to "ON".
- 2) Shift the gearshift lever in "R" position.
 - •The display automatically shows the view behind the vehicle.
 - When the gearshift lever is shifted from "R" to another gearshift lever position, the display returns to the previous display.


NOTE:

The rearview camera display has first priority in any display mode. However, the rearview camera display does not show the rear view while the system is initializing.


Display Range of Rearview Camera

The rearview camera display shows the area behind the rear end of the tailgate. The display cannot show objects which are close to the bumper or under the bumper. The rearview camera display cannot show obstacles which are higher than the camera. Upper parts of tall objects such as road signs cannot be viewed on the display.

Display range of rearview camera

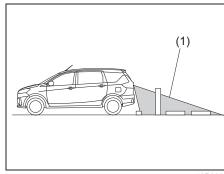

72R0039

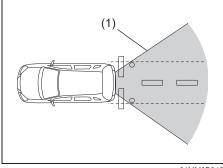

61MM0B012

(1) Display range

OPERATING YOUR VEHICLE


NOTE:

- · Images shown on the display from the rearview camera are reversed images (mirror images).
- The colors of objects on the rearview camera may differ from the actual object colors.
- · The rearview camera display may be difficult to see under the following conditions, but this is not a system malfunction.
 - In dark areas, on a rainy day or at niaht.
 - When the temperature around the lens is too high/low. or the camera is wet such as on a rainy day or during periods of high humidity (dew condensation may occur on the camera lens).
 - When a foreign object such as mud or a drop of water is stuck around the camera lens.
 - When strong light directly enters the camera (vertical lines may be seen on the display).
 - Under fluorescent light. (The display may flicker.)
 - When the outside temperature is low (the image on the display may be darkened).

Rearview camera screen indication

The distance viewed in the rearview camera may differ from the actual distance according to the condition of the road or the load the vehicle is carrying.

Uphill incline behind the vehicle

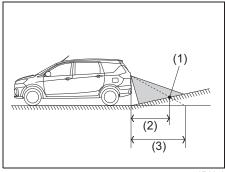


72R0040

- (1) Object
- (2) Actual distance
- (3) Distance on the display

When there is an uphill incline behind the vehicle, the object shown on the display appears farther away than the actual distance.

Downhill incline behind the vehicle

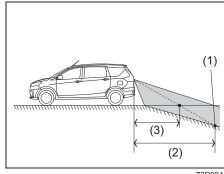

72R0041

- (1) Object
- (2) Actual distance
- (3) Distance on the display


When there is a downhill incline behind the vehicle, the object shown on the display appears closer than the actual distance.

If the rear view from the rearview camera is not shown or there is a poor image

- If the rear view from the rearview camera is not shown.
 - Check that the ignition mode is "ON".
 - Check that the gearshift lever is shifted to "R" position.
- If the image from the rearview camera is poor.
 - Check that the camera lens is not dirty.
 - Check that light from the sun or the beam of the headlights from the vehicle behind is not shining directly into the lens.

If the rearview camera system is still not working properly after checking the above, have the system inspected by a Maruti Suzuki authorised workshop as soon as possible.

Braking

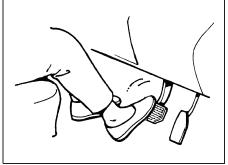

60G165S

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

▲ WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-Assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

▲ WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Anti-Lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.


The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal moves a little while the ABS is operating.

NOTE:

- The ABS will not work if vehicle speed is under about 9 km/h.
- If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

WARNING

- On some types of loose surfaces (such as gravel, snow-covered roads, etc.), the stopping distance required for a vehicle with ABS may be slightly greater than the one required for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tyres are able to plow the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.
- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.
- In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive too fast.

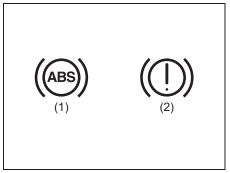

54MN069

- (1) ABS warning light
- (2) Brake system warning light

WARNING

- If the ABS warning light (1) on the instrument panel comes on and stays on while driving, there may be a problem with the ABS system. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the Brake system warning light (2) on the instrument panel simultaneously stays on or comes on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

How the ABS Works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself. This is absolutely normal and indicate that ABS is functioning properly.

▲ WARNING

The ABS may not work properly if tyres or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tyres or wheels, use only the size and type specified in this owner's manual.

Electronic stability program (ESP®) (if equipped)

 $\mathsf{ESP}^{\$}$ is a registered trademark of Daimler AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

WARNING

The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents. The capabilities of an ESP®-equipped vehicle must never be used as a substitute for careful driving.

The ESP® totally manages following four systems, (stability control, traction control, ABS and Brake assist) to help enhance vehicle stability in response to various driving conditions;

Stability control system

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

Traction control system

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

NOTE:

You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

Anti-Lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard. The ABS works automatically, so you do not have to use any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that wheels are locking up. You may feel the brake pedal pulsate while the ABS is operating. (For more information on ABS, see "Braking" in this section.)

NOTE:

- The ABS will not work if vehicle speed is under about 9 km/h.
- If the ABS system is activated, you may hear a clunking noise or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.

Brake assist system

When you step on the brake pedal, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

A WARNING

- The ESP[®] may not work properly if tyres or wheels other than those specified in the owner's manual are used. When replacing tyres or wheels, use only the size and type specified in this owner's manual.
- The ESP[®] may not work properly if tyres are not inflated to the recommended tyre pressure.
- The ESP[®] may not work properly if tyres are fitted with snow chains.
- The ESP[®] may not work properly if the tyres are excessively worn. Replace tyres when the tread wear indicators in the grooves appear on the tread surface.
- The ESP[®] is not a substitute for winter tyres or snow chains on a snow-covered road.

WARNING

- The ESP[®] may not work properly if engine related parts such as the muffler are not equivalent to standard equipment or are extremely deteriorated.
- Do not modify the vehicle's suspension since the ESP[®] may not work properly.

NOTE:

- If the ESP[®] system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

The ESP[®] indicator lights are described below:

ESP[®] warning light



52KM133

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system
 If this light blinks drive agree

If this light blinks, drive carefully.

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

NOTICE

If the ESP® warning light comes on and stays on while driving, there may be a malfunction of the ESP® systems (other than ABS). You should have the systems inspected by a Maruti Suzuki authorised workshop.

OPERATING YOUR VEHICLE

NOTE:

When the ESP® warning light comes on and stays on while driving, indicating a malfunction of the ESP® systems (other than ABS), the brake system will function as an ordinary ABS with no additional ESP® functions.

ESP® OFF indicator light




73R0196

You should turn the ESP[®] on during your ordinary driving, so that you have the benefits of all of the ESP[®] systems.

It may be required to turn the ESP^{\otimes} systems (other than ABS) off if your vehicle is stuck in sand, mud, or snow, where wheel spin is necessary.

ESP® OFF switch

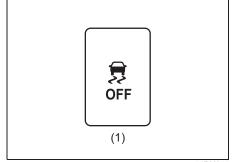

75RM055

(1) ESP® OFF switch

When the ESP® OFF switch located at the instrument panel is pushed and held to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light in the instrument cluster comes on.

When you have turned the ESP[®] systems (other than ABS) off, turn them back on before resuming ordinary driving.

When you push the ÉSP® ÖFF switch again, the ESP® OFF indicator light will go out and all of the ESP® systems will be activated.

ABS warning light / brake system warning light

See "Braking" in this section.

Hill hold control system (if equipped)

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps to prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

WARNING

- Do not rely excessively on the hill hold control system. The hill hold control system may not prevent the vehicle from rolling downward on a hill under all load or road conditions. Always be prepared to depress the brake pedal to prevent the vehicle from rolling downward. Failure to pay attention and depress the brake pedal to hold the vehicle on a hill when necessary, may result in loss of control or an accident.
- The hill hold control system is not designed to stop the vehicle on a hill.
- After you release your foot from the brake pedal, accelerate the vehicle to move up immediately. If you release your foot from the brake pedal over 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of slope. And, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage.

The hill hold control system activates for a maximum of about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.


- The gearshift lever is in a forward gear or reverse gear.
- 2) The parking brake is released.
- 3) The vehicle is on an upward incline.

On models equipped with the ENG ASTOP system, the hill hold control system is activated when the engine is restarted after being stopped automatically, even if the previous conditions are not met.

NOTE:

When the hill hold control system is activated, the following conditions may be found, but this is not a malfunction.

- You may hear a sound from the engine room.
- As brake pedal becomes heavy, it may be difficult for you to depress it.

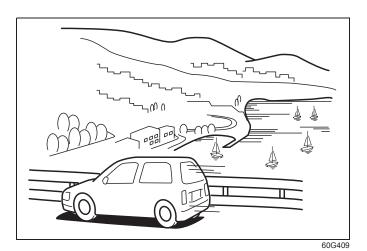

DRIVING TIPS

Running-in4-	1
Catalytic Converter4-	1
mproving Fuel Economy4-	2
lighway Driving4-	3
Oriving on Hills 4-	3
Oriving on Slippery Roads4-	4
Off-road Driving4-	6
When Encountering a Flooded Area4-	
Do's and Dont's for safe driving4-	
Margin for safety4-	9



55RM04002

WARNING

- Fasten Your Seat Belts at All Times. Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times. using the seat belts provided. Refer to "Seat Belts and Child Restraint Systems" section for instructions on proper use of the seat belts.
- Never drive while under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated, or under stress.


Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- · Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km (200 miles) of driving.
- · Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.

Catalytic Converter

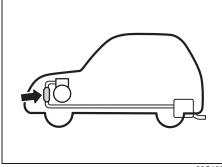

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfiring or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.
- Avoid driving your vehicle at excessively high engine speed in or around the red zone of the tachometer.



54G584S

WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving Fuel Economy

NOTE:

Fuel economy (mileage) of the vehicle may vary due to several factors i.e., driving habits - gear change pattern, usage of A.C, Air pressure in the tyres, wind speed, traffic conditions, fuel quality- non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you park your vehicle for more than one minute, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

Avoid "fast" starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.


Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

Keep the air cleaner clean

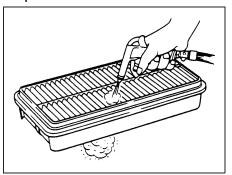

60A183S

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Keep tyre pressures correct

Under-inflation of the tyres can waste fuel due to increased rolling resistance of the tyres. Keep your tyres inflated to the correct pressure shown in the label on driver's door lock pillar.

 
Highway Driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.


Driving on Hills

Manual transmission



72RH4014

 Automatic transmission



72RH4025

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

While moving uphill/ gradient from a standstill condition - For manual transaxle

- Apply the parking brake firmly so that the vehicle does not roll backwards.
- Depress the clutch pedal and shift the gearshift lever to 1st select position.
- Do not slip the clutch.
- When ready to start, press accelerator pedal and slowly release the clutch pedal simultaneously. When the vehicle starts to move, gradually release the parking brake.


WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE

When descending a downhill, Never turn the ignition key to "LOCK" position or press the engine switch to change the ignition mode to "LOCK" (OFF). Emission control system and automatic transmission (if equipped) damage may result.

Driving on Slippery Roads

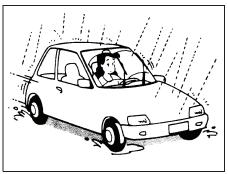

60G089S

On wet roads, you should drive at a lower speed than you do on dry roads due to possible slippage of tyres during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Snow Chains

Snow chains should only be used if they are needed to increase traction or are required by law. Make sure that the chains you use are the correct size for your vehicle's tyres. Also make sure that there is enough clearance between the fenders and the chains as installed on the tyres.

Install the chains on the front tyres tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

Stuck Vehicle

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

 Shift the transmission back and forth between a forward range (or first gear for manual transmission) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting. Do not race the engine. Excessive wheel spin will cause the tyres to dig deeper, making it more difficult to free the vehicle.

NOTE:

If your vehicle is equipped with the ESP®, you may have to turn the ESP® system off in order to allow spinning the wheels.


2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult a Maruti Suzuki authorised workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by other vehicle with a towing cable or chain secured to the towing eye either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame Hooks" in "OTHER CONTROLS AND EQUIPMENT" section.

A WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/ or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transmission damage.

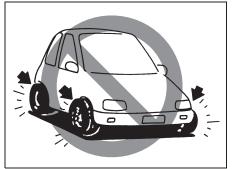

54G638S

WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.

- Make sure your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tyres other than those specified by MARUTI SUZUKI. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.
- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps, causing vehicle damage or tyre failure.

(Continued)

WARNING

(Continued)

 After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Off-road Driving

Do not drive in the field covered with grown grass

If you drive in the field covered with grass, it may cause accident or vehicle damage by getting caught in grown grass.

When Encountering a Flooded Area



80J042

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe and non flooded place while checking the brake effectiveness. Then, ask a Maruti Suzuki authorised workshop to check the following inspection items.

- · Function of brake
- · Function of electrical components
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.

NOTICE

Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine and transmission damages, etc.

If the vehicle get stuck in deep water do not start the engine.


Do's and Dont's for safe driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

Starting

- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.

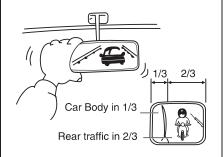

72RM04001

- Before moving, look around your vehicle to confirm safety.
- 4) Don't accelerate suddenly, since it is dangerous and wastes fuel.

General Driving


- Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
- Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.



72RM04002

- Turn on the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit.
- Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.


- When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.
- Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
- Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
- 8) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatigued.

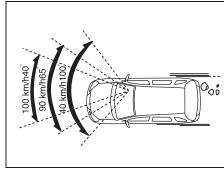

72RM04003


- Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
- 10)When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

Braking

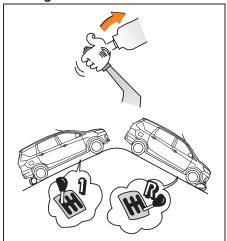

72RM04004

- Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
- 2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tires are worn out as they skid more.

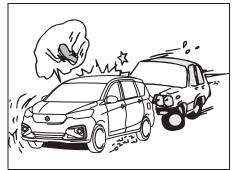

72RM04005


Use foot brake in three stages

- 1. Warn the vehicle behind you.
- 2. Gradually apply the brake.
- 3. Bring the vehicle to a halt.
- When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.

Long Distance Driving


- 1) Be sure to perform safety checks before starting a trip.
- Take rest at regular intervals to prevent accidents which may occur due to feeling sleepy or tired.

Night Time Driving

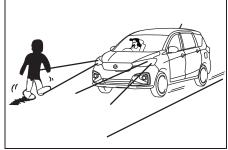

72RM04006

- Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
- Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicleto-vehicle distance.

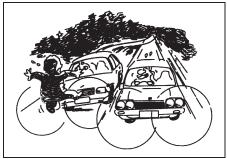

72F-08-021

- Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.
- Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.


Margin for safety

It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- Observe traffic rules and regulations.

Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience. Follow the do's and dont's listed, and driving will never be the same again.

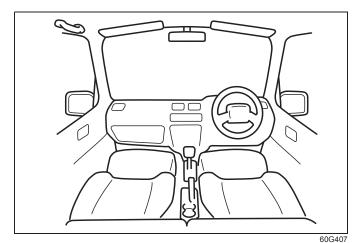

Heating and Air Conditioning System	5-1
Manual Heating and Air Conditioning System	5-4
Automatic Heating and Air Conditioning System	
(climate control)	5-10
Radio Antenna	
Installation of Radio Frequency Transmitters	
Audio System (if equipped)	
Suzuki Connect (if equipped)	
Fuel Filler Cap	
Engine Hood	
Sun Visor	
Interior Light	
Accessory Socket	
Assist Grips	
Glove Box	
AUX/USB Socket (if equipped) /	
USB Socket (if equipped)	5-62
Cup Holder and Storage Area	
Footrest	
Front Seat Back Pocket (if equipped)	
Luggage Box (if equipped)	
Erama Hooks	5-6


Heating and Air Conditioning System

There are two types of heating and air con-

- ditioning systems as follows:

 Manual heating and air conditioning system
- · Automatic heating and air conditioning system (climate control)


Air Outlet

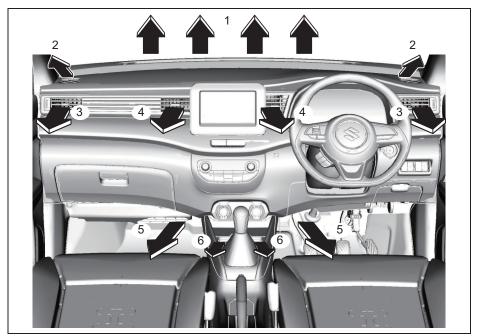

72R0022


- 1. Windshield defroster outlet
- 2. Side defroster outlet
- 3. Side outlet
- 4. Center outlet
- 5. Floor outlet
- 6. Cup holder outlet

Center outlet

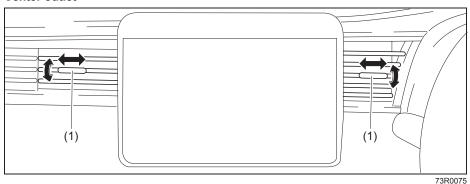

Move the knob (1) vertically or horizontally to adjust the direction of air flow as desired.

Side outlet

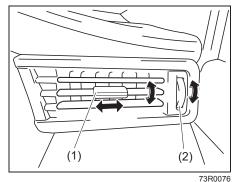

/3R00/6

When open, air comes out regardless of the air flow selector position.


Move the knob (1) vertically or horizontally, to adjust the direction of air flow as desired.

The side outlet opens when you turn the dial (2) upward and closes when you turn it downward.

A CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Overhead rear air conditioning system (if equipped)

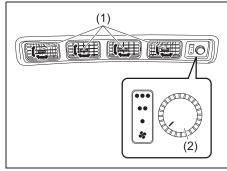

73R0077


To turn on the overhead rear air conditioning system, set the blower speed selector of the manual heating and air conditioning system to a position other than off and push in "A/C" switch. Refer to "Air conditioning switch" in this section. And set the rear blower speed selector (2) to a position other than off.

Move the knob (1) vertically or horizontally to adjust the direction of air flow as desired.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature. Less operation of the compressor results in better fuel economy.

Manual Heating and Air Conditioning System

Description of Controls

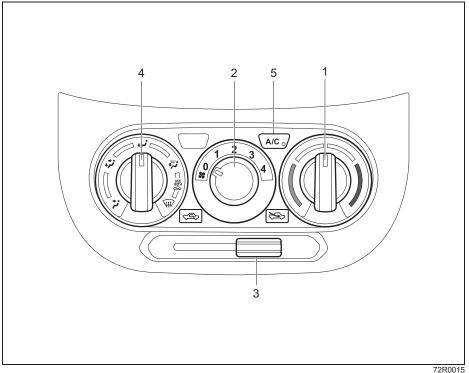

- Temperature selector
 Blower speed selector
 Air intake selector
- 4. Air flow selector
- 5. Air conditioning switch


Temperature selector (1)

This is used to adjust the temperature.

Blower speed selector (2)

This is used to turn on the blower and to select blower speed.

Air intake selector (3)

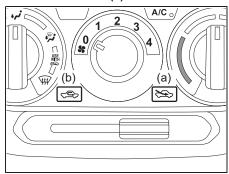

72R0016

This selector is used to select the following modes.

FRESH AIR (a)


When this mode is selected by moving the lever to right, outside air comes in.

RECIRCULATED AIR (b)

When this mode is selected by moving the lever to left, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down / warm up the interior or to reduce unwanted odor from entering the vehicle.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.

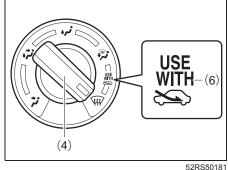


NOTE:

The mark of "USE WITH" (6)

To clear fog on the windshield and/or the side windows quickly, set the air flow selector (4) to "HEAT & DEFROST" or "DEFROST" and air intake selector (3) to "FRESH AIR". These positioning will clear the fogged windshield and/or the side windows faster than the "RECIRCULATED" AIR".


Air flow selector (4)

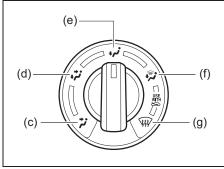

52RM50250

This is used to select one of the following functions.


VENTILATION (c)

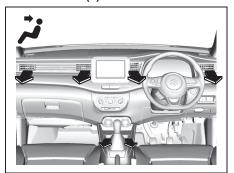

72R0144

Temperature-controlled air comes out of the center, side and cup holder outlets.


BI-LEVEL (d)

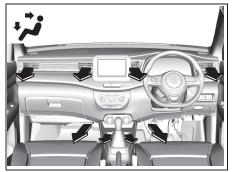

72R0129

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center, side and cup holder outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center, side and cup holder outlets. will be the same temperature.


HEAT (e)

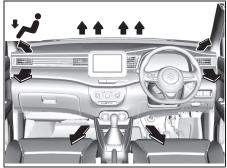

72R0017

Temperature-controlled air comes out of the floor, side and cup holder outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


HEAT & DEFROST (f)

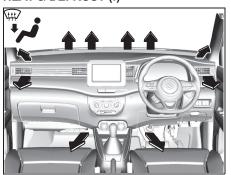

72R0018

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

DEFROST (g)

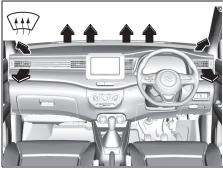

72R0019

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is working. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System Operating Instructions

Natural ventilation

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The base settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency

Quick heating (using recirculated air)

The base settings are the same as for normal heating except you select RECIRCU-LATED AIR. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AÏR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The base settings are the same as for normal cooling except you select RECIRCU-LATED AIR and the highest blower speed.

NOTE:


 If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible. If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

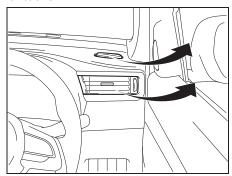

72R0012

NOTE:

If you need maximum defrosting:

- select DEFROST and FRESH AIR.
- set the blower speed selector to high.
- adjust the temperature selector to the hot end.
- turn on "A/C" switch, and
- adjust the side outlets so the air blows on the side windows.

Models with ENG A-STOP System (if equipped)

- If the air conditioning performance can no longer perform at a sufficient level due to automatically stopping the engine, press the "ENG A-STOP OFF" switch to deactivate the ENG A-STOP system. (The engine will automatically restart and the air conditioning performance will be restored.)
- If the windshield and/or the driver's side/ passenger side door windows are fogged during automatically stopping the engine, stop the ENG A-STOP system and restart the engine. Then, turn the air flow selector (4) to change the air flow to the "Heat & defrost" or "Defrost" position to defog the windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section.

NOTE:


Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called "R-134a". R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.


Automatic Heating and Air Conditioning System (climate control)

Description of Controls

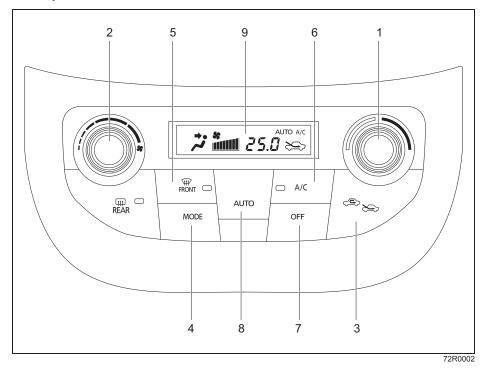

- 1. Temperature selector
- 2. Blower speed selector
- 3. Air intakė selector
- 4. Air flow selector
- 5. Defrost switch
- 6. Air conditioning switch
- 7. "OFF" switch
- 8. "AUTO" switch
- 9. Display

Temperature selector (1)

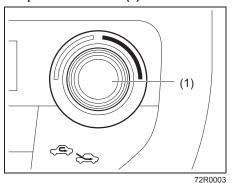

Turn the temperature selector (1) to adjust the temperature.


NOTE:

If you turn the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling. The temperature of the air from the outlets may change suddenly while "LO" or "HI" is displayed, but this is normal.

NOTE:

When you change the unit of temperature in the information display, the unit of temperature in the air conditioning system will be changed. Refer to "Information display" in the "BEFORE DRIVING" section for details.


Blower speed selector (2)

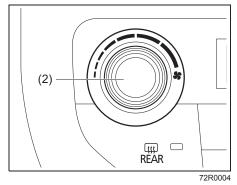

The blower speed selector (2) is used to turn on the blower and to select blower speed.

If "AUTO" switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

Air intake selector (3)

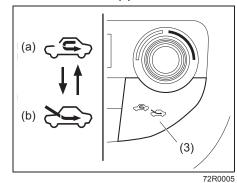

Push the air intake selector (3) to change between the recirculated air and fresh air

If "AUTO" switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

NOTE:

mode.

When the recirculated air mode is selected, the automatic operation system is deactivated even if you push "AUTO" switch (8).

RECIRCULATED AIR (a)

When this mode is selected, outside air is shut off and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as a tunnel, or when attempting to quickly cool down / warm up the interior or to reduce unwanted odor from entering the vehicle.

FRESH AIR (b)


When this mode is selected, outside air is introduced.

FRESH AIR and RECIRCULATED AIR are selected alternately each time the air intake selector is pushed.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.

Air flow selector (4)

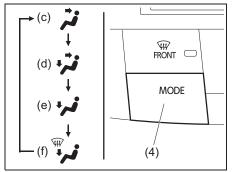


72R0020

Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears in the display.

If "AUTO" switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.


VENTILATION (c)

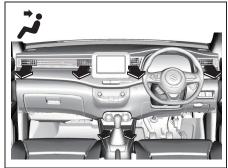

72R0013

Temperature-controlled air comes out of the center, side and cup holder outlets.


BI-LEVEL (d)

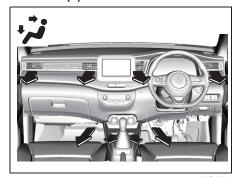

72R0014

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center, side and cup holder outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center, side and cup holder outlets will be the same temperature.


HEAT (e)

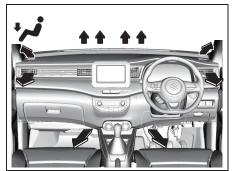

72R000

Temperature-controlled air comes out of the floor outlets and the side outlets, a small amount of air comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


HEAT & DEFROST (f)

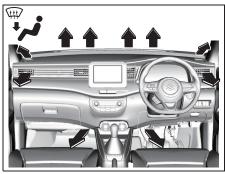

72R000

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.


Defrost switch (5)

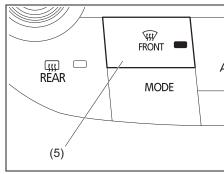

72R0008

Push the defrost switch (5) to turn on the defroster. This is used to clear the windscreen and side windows by pushing the switch when the defroster switch is ON, the indicator light above the defroster switch will come ON and the defroster display is shown.

DEFROST

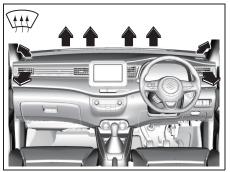


2R0009

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

NOTE:

When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will operate and FRESH AIR mode will be selected automatically. In very cold weather, however, the air conditioning system will not operate.


Air conditioning switch (6)

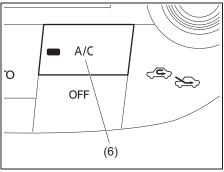

72R0010

The air conditioning switch (6) is used to turn on and off the air conditioning system only when the blower is on. To turn on the air conditioning system, push in the switch and "A/C" will appear in the display. To turn off the air conditioning system, push in the switch again and "A/C" will go off.

System Operating Instructions Automatic operation

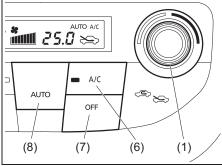

72R0011

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below

- 1) Start the engine.
- 2) Push "AUTO" switch (8).
- 3) Set the desired temperature by turning the temperature selector (1).

The blower speed, air intake and air flow are controlled automatically to maintain the set temperature. However, the air flow is not changed to DEFROST position automatically.

NOTE:

When the recirculated air mode is selected, the automatic operation system is deactivated even if you push "AUTO" switch (8).

You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

To turn the climate control system off, push "OFF" switch (7).

NOTE:


If "AUTO" in the display blinks, there is a problem in the heating system and/or air conditioning system. You should have the system inspected by a Maruti Suzuki authorised workshop.

NOTE:

- To find the temperature at which you are most comfortable, start with the 22°C (72°F) or 25°C (75°F) setting. (the temperature vary depending on vehicle specifications.).
- If you turn the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling and the blower will run at full speed.
- To avoid blowing cold air in cold weather or hot air in hot weather, the system will

delay turning on the blower until warmed or cooled air is available.


- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.
- Even under the automatic operation, you can set individual selectors to the manual mode. The manually selected functions are maintained, and the other functions remain under automatic operation.
- If the windshield and/or the front door windows are fogged, push the defrost switch (5) to turn on the defroster, or push the air flow selector (4) to change the air flow to HEAT & DEFROST position to defog the windows.
- To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push "AUTO" switch (8).

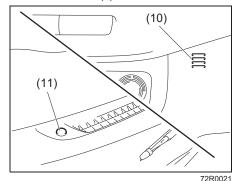

Be careful not to cover the interior temperature sensor (10) located between the steering wheel and the climate control panel, or the solar sensor (11) located at the top of the driver's side dashboard. These sensors are used by the automatic system to regulate temperature.

Manual operation

You can manually control the climate control system. Set the selectors to the desired positions.

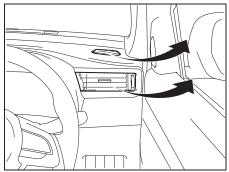

72R0012

NOTE:

If you need maximum defrosting:

- push the defrost switch (5) to turn on the defroster (the air conditioning system will operate and FRESH AIR mode will be selected automatically),
- adjust the temperature selector to "HI" indication on the display, and
- adjust the side outlets so the air blows on the side windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section. Have this job done by a Maruti Suzuki authorised workshop as the lower glove box must be lowered for this job.


NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio Antenna

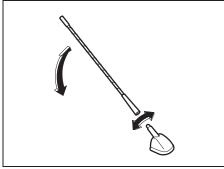

68KH053

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTE:

Adjust the antenna angle to maximum for optimum radio reception.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.

Installation of Radio Frequency Transmitters

We recommend that you always ask a Maruti Suzuki authorised workshop about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system or any other electrical systems resulting in vehicle performance problems. Consult a Maruti Suzuki authorised workshop for advice.

Audio System (if equipped) Safety Information

A WARNING

If you pay too much attention to operating the audio system or watching the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying too much attention to operating the audio system or watching the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.
- Set the sound volume to a level that will allow you to continue to be aware of surrounding road and traffic conditions while driving.

Bluetooth

The Bluetooth[®] word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Ink.

Stop using this unit and a Bluetooth® ready device whenever requested.


This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

NOTE:

For vehicle equipped with SMARTPLAY INFOTAINMENT SYSTEM, refer to the audio manual available with the vehicle. Remote controller is not provided with the vehicles equipped with SMARTPLAY INFOTAINMENT SYSYTEM.

Basic Operations

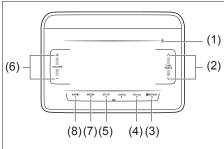

72RM05001

- (1) POWER button
- (2) "TUNE/TRACK" Up/Down button
- (3) "ENTER" button
- (4) BACK button
- (5) "SETUP button
- (6) "VOLUME" button
- (7) "MEDIA" button
- (8) "RADIO" button

Turning power on/off

Touch the POWER button (1).

The audio system starts in the function mode it was in when the power was turned off last.

 Touching the POWER button (1) for 1 second or longer can turn off the audio system.

Slide touch operation

Operate several functions with the slide touch operation. Touch the panel and slide up or down with your finger for increase/decrease or up/down operation.

NOTE:

Pay caution to the following content regarding slide touch operation:

- The touch button may not operate properly when the touch panel or your fingers are wet. Remove any liquid before operating.
- Depending on the operation method it may react without touching.
- · It may not react properly when operated with gloves on.
- When metal objects are placed near the touch panel it may cause a malfunction.
- Do not attach protective film. Otherwise, the touch panel may not operate properly.

Functions available with the slide touch operation

Mode	Function	#	^ V
Common	Volume up/down	0	-
Common	Item selection	_	0
Radio	TUNE up/down	_	0
USB	File up/down	_	0
038	Folder up/down (folder operation mode)	_	0
iPod	TRACK up/down	_	0
IFOU	Category selection (iPod menu)	_	0
Bluetooth [®]	TRACK up/down	_	0
audio	Group up/down (Group operation mode)	_	0
Hands-free	Reception/ringtone/incoming call volume up/down	0	-
nanus-nee	Switching pages of the speed dial selection screen	_	0

Adjusting the volume

Touch or slide the "VOLUME" button (6).

- To increase the volume, touch or slide upwards.
- To decrease the volume, touch a or slide downwards.

NOTE:

While driving, adjust the volume to an extent that sound and/or noise coming from outside can be heard.

Sound settings

- 1) Touch the SETUP button (5).
 - •Touch for 1 second or longer when using radio mode.
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select "Sound", and touch the "ENTER" button (3).
 - •The sound setting screen will be displayed.
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select the desired item, and touch the "ENTER" button (3).
 - •The sound settings will change as follows:
 - $\begin{tabular}{ll} \bullet EQ &\leftrightarrow Bass &\leftrightarrow Treble &\leftrightarrow Balance &\leftrightarrow Fader &\leftrightarrow AVC \end{tabular}$

Preset EQ

The preset EQ can set various types of sounds depending on the type of music.

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "Sound" screen, select "EQ", and touch the "ENTER" button (3).
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select the desired item, and touch the "ENTER" button (3).
- The preset EQ settings will change as follows:

Off (Flat) \leftrightarrow Jazz \leftrightarrow Rock \leftrightarrow Pop \leftrightarrow Classic \leftrightarrow Hip-hop

Adjusting bass/treble/balance /fader

The preset EQ can set various types of sounds depending on the type of music.

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "Sound" screen, select "Bass", "Treble", "Balance", or "Fader" and touch the "ENTER" button (3).
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), adjust to the desired settings and touch the "ENTER" button (3).
- "Bass"/"Treble":
 - Can be adjusted in stages from -6 to 0 to +6.
- · "Balance":
 - Can be adjusted in 9 stages left to right .
- · "Fader":
 - Can be adjusted in 9 stages back to front.

Adjusting the AVC (Auto volume control)

The Auto Volume Control (AVC) function automatically adjusts (increases/ decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with three selectable levels (LEVEL OFF, 1, 2, 3). The range of volume adjustment increases together with the LEVEL number.

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "Sound" screen, select "AVC", and touch the "ENTER" button (3).
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select the desired level, and touch the "ENTER" button (3).
- The AVC will change as follows:
 Off
 ← Level 1
 ← Level 2
 ← Level 3

Switching the mode

Press the "MEDIA" button (7) for 1 second or more in radio mode. You can switch the radio mode to media mode.

Touch the "RADIO" button (8) in media mode. You can switch the media mode to radio mode

System settings

Change the "Beep", "Slide", and "SW Sensitivity" settings.

- 1) Touch the SETUP button (5).
- Touch for 1 second or longer when using radio mode.
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select "System", and touch the "ENTER" button (3).
- The system setting screen will be displayed.
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select the desired item, and touch the "ENTER" button (3).
- The system settings will change as follows:

 $\mathsf{Beep} \leftrightarrow \mathsf{Slide} \leftrightarrow \mathsf{SW} \; \mathsf{Sensitivity}$

BEEP on/off

- Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "System" screen, select "Beep", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select on or off, and touch the "ENTER" button (3).

Slide touch operation settings

Turn the slide operation on/off.

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "System" screen, select "Slide", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select on or off, and touch the "ENTER" button (3).

Touch panel sensitivity settings


Change the touch panel sensitivity.

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "System" screen, select "SW Sensitivity", and touch the "ENTER" button (3).
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select Low or High, and touch the "ENTER" button (3).

NOTE:

If the touch button sensitivity is too high, set to "Low".


Radio

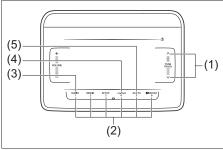

73R0138


- (1) "TUNE/TRACK" Up/Down button
- (2) Preset button
- (3) "RADIO" button*1
- (4) "CH" (channel) button
- (5) "AS" (auto store) button
- *1 Use this button to switch between manual preset and auto preset.

 Display Manual preset



73R0139

 Auto preset



73R0140

- (A) Frequency
- (B) Band
- (C) Auto Store mode display

NOTE:

Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

Selecting the band

- 1) Touch the "RADIO" button (3) for 1 second or longer.
- Each time the button is touched, the mode will change as follows:
- AM \rightarrow FM1 \rightarrow FM2 \rightarrow AM (AS) \rightarrow FM (AS)

Seek tuning

- 1) Touch the "TUNE/TRACK" Up/Down button (1) for 1 second or longer.
- The audio system stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

1) Touch the "TUNE/TRACK" Up/Down button (1) to select the desired station.

Storing the station Manual store

- 1) Select the station and frequency.
- 2) Touch and hold the "CH" button (4) for at least 1 second.
- Hold down a desired button ([1] to [6]) of the Preset buttons (2) to which you want to store the station for 2 seconds or longer.

NOTE:

6 stations can be stored for AM, and 6 stations for each of FM1 and FM2, thus 18 stations can be stored in total.

Auto store

- 1) Touch the "AS" button (5) for 1 second or longer.
- Start searching from a station whose frequency is the lowest. When a broadcast station that can be received with a sufficient strength is discovered, it will be assigned to the AM (AS)/FM (AS) band's preset button (2). Once this process is completed the tuner will return to the first stored broadcast station.

NOTE:

- Auto store can be released by touching the "AS" button (5) while auto store is under way.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- 6 stations can be preset for FM, and 6 stations for AM in auto store mode.

Select from the preset channels Manual preset channel

- 1) Select the radio station and frequency.
- 2) Touch the "CH" button (4) for 1 second or longer.
- 3) Touch a desired button ([1] to [6]) of the Preset buttons (2).


NOTE:

Touch and hold the "CH" button (4) for at least one second to select from the preset channel list

Auto preset channel

- Touch the "RADIO" button (3) for 1 second or longer and select AM (AS) or FM (AS).
- 2) Touch the "CH" button (4) for 1 second or longer.
- · The preset channel list is displayed.
- 3) Touch a desired button ([1] to [6]) of the Preset buttons (2).


USB

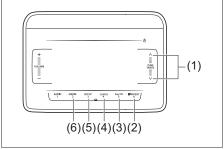

73R0141

- (1) "TUNE/TRACK" Up/Down button
- (2) "DISP/ENTER" button
- (3) BACK button
- (4) "FLD" (folder operation) button
- (5) SETUP (random/repeat) button
- (6) "MEDIA" button

 Display



73R0142

- (A) Play time
- (B) Text information display

▲ WARNING

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.

Selecting a USB device mode

- 1) Touch the "MEDIA" button (6).
- Each time the button is touched, the mode will change as follows: USB (iPod) (if equipped) → Bluetooth[®] audio (if equipped) → AUX (if equipped)...

Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/ Down button (1).
- A: Hold down the Up button for 1 second or longer to fast forward the track.
- Y: Hold down the Down button for 1 second or longer to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to listen to the next track.
- W: When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

Selecting a folder

- 1) Touch the "FLD" (folder operation) button (4).
- 2) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to move to the next folder.
- V: Touch the Down button to move to the previous folder.

Repeat playback

- 1) Touch the SETUP (random/repeat) button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Each time the "DISP/ENTER" button (2) is touched, the mode will change as follows:
 - Off→One song repeat →Folder repeat ...

Random playback

- Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Random", and touch the "DISP/ENTER" button (2). Each time the "DISP/ENTER" button (2) is touched, the mode will change as follows:

 $Off \rightarrow Folder \ random \rightarrow All \ random \ ...$

Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows: MP3/AAC:

Artist name/Track title \rightarrow Album name/Track title \rightarrow Folder name/File name... WMA:

Artist name/Track title \rightarrow Folder name/File name ...

NOTE:

- "NO TITLE" will be displayed when there is no text information in the USB device currently being played.
- "..." is displayed if all text data cannot be displayed. Touch and hold the "DISP/ ENTER" button (2) for at least 1 second to automatically display the rest of the text data.

Notes on USB device Compatible USB devices

- USB Mass Storage Class
 For details as to whether your USB memory/USB Audio is compatible with USB Mass Storage Class, please contact the USB memory/USB Audio manufacturer.
- Audio file MP3 (.mp3)/WMA (.wma)/AAC (.m4a)/ AAC (.aac)
- File System FAT 12/16/32,VFAT (supporting long file name)
- USB Standard Compatibility 1.1/2.0 Full Speed
- If a USB hub or extension cable is connected to the audio system, it may not be recognized. In this case, directly connect the USB device to the audio system.
- Devices such as MP3 players/mobile phones/digital cameras may not be recognized as audio systems for playing music

USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port.
- Depending on the USB flash drive that you are using, (non-brand product, USB flash drive that has been externally damaged) it may disable connection or cause unstable operation.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand.
 We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA format.

Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.
- The DRM (Digital Rights Management) file cannot be played.

Compression formats

MP3

Bit rate

MPEG1 Audio Layer III: 32 up to 320 kbps MPEG2 Audio Layer III: 8 up to 160 kbps MPEG2.5 Audio Layer III: 8 up to 160 kbps

VBR: up to 384 kbps (MAX.)

- Sampling frequency MPEG1 Audio Layer III: 32/44.1/48 kHz MPEG2 Audio Layer III: 16/22.05/24 kHz MPEG2.5 Audio Layer III: 8/11.025/12 kHz
- Channel Stereo/Joint stereo/Dual channel/Monaural
- ID3 tag ID3v1.x/ID3v2.x

WMA

- Windows Media Audio Ver.7/Ver.8/Ver.9 Standard compliant
- Bit rate: 32 up to 320 kbps
- VBR: up to 384 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- WMA tag: Ver.8.0
- Channel: 2 Channels

AAC

- Bit rate: 16 up to 320 kbps
- VBR: up to 320 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- AAC tag: iTunes m4a metadata


Maximum number of files/folders

- Maximum number of files: 2500
- · Maximum number of files in a folder: 255
- Maximum number of folders: 255
 - Root folder and empty folder are included.
- · Maximum depth of tree structure: 8

NOTICE

Never use ".mp3", ".wma" or ".m4a" as a file name extension if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.


iPod

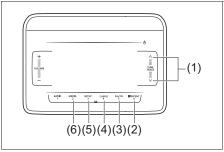

73R0141

- (1) "TUNE/TRACK" Up/Down button
- (2) "DISP/ENTER" button
- (3) BACK button
- (4) "FLD" (iPod menu) button
- (5) SETUP (shuffle/repeat) button
- (6) "MEDIA" button

 Display



73R0143

- (A) Play time
- (B) Text information display

Selecting an iPod mode

- 1) Touch the "MEDIA" button (6).
- Each time the button is touched, the mode will change as follows:
 USB (iPod) (if equipped) → Bluetooth[®] audio (if equipped) → AUX (if equipped)

Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/ Down button (1).
- A: Hold down the Up button for 1 second or longer to fast forward the track.
- Hold down the Down button for 1 second or longer to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to listen to the next track.
- W: When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

Select a category

- 1) Touch the "FLD" (iPod menu) button (4).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired category, and touch the "DISP/ENTER" button (2).
- The Song selection mode for each category will be displayed as follows.
 - Playlists: Playlists → Songs
 - Artists: Artists → Albums → Songs
 - Songs: Songs
 - Genres: Genres → Artists → Albums
 → Songs
 - Radio: Station
 - Audiobooks: Audiobooks
 - Podcasts: Podcasts → Episodes
 - i Tunes U: i Tunes U → Episodes

NOTE:

Categories is not displayed if the no files in the category.

Repeat playback

- 1) Touch the SETUP (shuffle/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Touch the "DISP/ENTER" button (2). Each time the button is touched, display will change as follows:

The repeat mode will vary depending on your device.

Off → 1 song repeat → All repeat ...

Random playback

- 1) Touch the SETUP (shuffle/repeat) button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Shuffle", and touch the "DISP/ENTER" button (2).
- Touch the "DISP/ENTER" button (2). Each time the button is touched, display will change as follows: Off → Shuffle → Album shuffle ...

Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows:
 Artist name/Track title → Album name/ Track title → Playlist name/Track title ...

NOTE:

- "NO TITLE" is displayed if the file currently being played has no text data.
- "..." is displayed if all text data cannot be displayed. Touch and hold the "DISP/ ENTER" button (2) for at least one second to automatically display the rest of the text data.
- "Playlist name/song name" is only displayed by the "FLD" (Menu) button (4) when music is selected from Playlists.

Notes on iPod Made for iPod

- iPod nano:
 - iPod nano (7th generation)
- · iPod touch:
- iPod touch (6th generation)
- i Pod touch (5th generation)
- · iPhone:
 - i Phone 5
 - i Phone 5s
 - i Phone 5c
 - i Phone 6
 - i Phone 6 Plus
 - i Phone 6s
 - i Phone 6s Plus
 - i Phone SE
 - i Phone 7
 - i Phone 7 Plus

NOTE:

Some functions may not be available depending on the model of iPod.


iPod



73R0217

- "Made for iPod" and "Made for iPhone" means that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this unit or its compliance with safety and regulatory standards.
- Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- · Lightning is a trademark of Apple Inc.

AUX

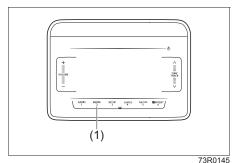

(1) "MEDIA" button

Display



73R0146

NOTICE

- Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.


AUX selection

- 1) Touch the "MEDIA" button (1).
- Each time the button is touched, the mode will change as follows:
 USB (iPod) (if equipped) → Bluetooth[®] audio (if equipped) → AUX (if equipped)


NOTE:

 Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.

Setting of Bluetooth® devices

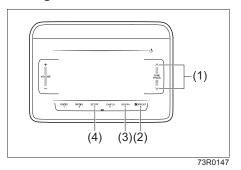

Steering switch (if equipped)

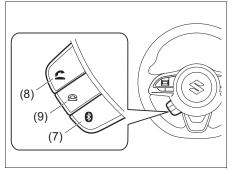

73R0152

- (1) "TUNE/TRACK" Up/Down button
- (2) "ENTER" button
- (3) BACK button
- (4) SETUP button
- (5) Bluetooth® button
- (6) Off-hook button

A CAUTION

Do not register or set the Bluetooth[®] device while driving. Stop your vehicle in a safe area before registering the device.

Registration of Bluetooth® devices
To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system. Up to 5 Bluetooth® devices can be registered.

NOTE:

- Certain functions cannot be used depending on the Bluetooth[®] device.
- Refer to the user manual included with your device regarding the operation method of Bluetooth[®] devices.
- Some Bluetooth[®] enabled phones may not be compatible fully and or partially with the audio unit.
- Bluetooth[®] / Telephone setup mode can be entered only when the vehicle is stationary.
- If the pairing cannot be established, the connection operation is canceled.
 For the Bluetooth[®] device pairing method, refer to the user manual included with your device or try pairing again.
- The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch Press the Bluetooth[®] button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Pairing", and touch the "ENTER" button (2).
- · The passkey will be displayed.

- 4) Operate and register the Bluetooth® device.
 - Secure Simple Pairing (SSP) incompatible Bluetooth® device:

Enter the passkey into the Bluetooth® device.

Secure Simple Pairing (SSP) compatible Bluetooth® device:

Select "Yes" to register the Bluetooth® device.

 It is possible to automatically register devices depending on the type of Bluetooth[®] device.

NOTE:

- If the Bluetooth[®] device contains music player and mobile phone function, both functions will be registered simultaneously. When deleting a Bluetooth[®] device, both functions will be deleted simultaneously.
- If a mobile phone is not registered and the off-hook button (6) is pressed and the telephone mode is selected, it will automatically switch to "Pairing".
- When pairing with a mobile phone is established, it is possible to automatically transfer the phonebook and call history. If you wish to conduct an automatic transfer press "YES" and if not, press "NO".

Set from the list of mobile phones

The list of paired mobile phones is displayed and the various settings can be changed.

- 1) The Bluetooth® setting screen will be displayed.
- From the panel button: Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth[®] button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "List Phone", and touch the "ENTER" button (2).

Connect a registered mobile phone

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Select", and touch the "ENTER" button (2).

Disconnect a connected mobile phone

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Disconnect", and touch the "ENTER" button (2).

3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

Delete a registered mobile phone

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Delete", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

Set from the Bluetooth® audio list

The list of paired Bluetooth® audio is displayed and the various settings can be changed.

- The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth[®] button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).

3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "List Audio", and touch the "ENTER" button (2).

Connect a registered Bluetooth® audio

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Select", and touch the "ENTER" button (2).

Disconnect a registered Bluetooth® audio

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth[®] audio, and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Disconnect", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

Delete a registered Bluetooth® audio

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth[®] audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Delete", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

NOTE:

- In case audio device does not re-connect after following above steps, delete your audio device from registered list of audio by following steps 1) to 3) of "Delete a registered Bluetooth" audio mentioned above. Register the audio device again by referring to "Registration of Bluetooth" devices" and follow steps 1) to 4).
- Some audio device may not re-connect automatically. For such cases, follow steps 1) to 2) of "Connect a registered Bluetooth[®] audio" mentioned in further pages of this section.

Select a connection method

It is possible to switch connection methods when the Bluetooth® audio is registered to the audio system and the audio system and Bluetooth® audio are not connected.

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth[®] audio, and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Connect Method", and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the connection method, and touch the "ENTER" button (2).
- From Vehicle: Operate from the audio system to connect to the Bluetooth[®] device.
- From Audio: Operate from the Bluetooth[®] device to connect to the audio system.

Change of Passkey

- The Bluetooth[®] setting screen will be displayed.
- From the panel button:
 Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch Press the Bluetooth[®] button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Passkey", and touch the "ENTER" button (2).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).
- 5) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select a number between 0 and 9, and touch the "ENTER" button (2). Repeat this operation several times.
- Enter the passkey one digit by one digit.
- The passkey must be between 4 to 8 digits.
- In order to cancel the number that you entered and return to the previous digit, touch the BACK button (3).
- If you do not enter a number that is 4 or more digits and re-touch the "ENTER" button (2), the passkey will be registered.

Automatic connection with the Bluetooth[®] device

If the "Bluetooth Power" is set to ON, turning the ignition switch to ACC will automatically connect the registered Bluetooth® device.

- With the automatic connection, the Bluetooth® device that was connected last will be prioritized.
- The Bluetooth[®] setting screen will be displayed.
- From the panel button:
 Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth Power", and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "On" or "Off", and touch the "ENTER" button (2).

NOTE:

- When "Bluetooth Power" is set to "OFF", the audio system disconnects from the registered Bluetooth[®] device.
- If "Bluetooth Power" is set to "Off", the audio system will not automatically

reconnect the next time the ignition is switched on.

The device status will be displayed

- 1) The Bluetooth® setting screen will be displayed.
- From the panel button: Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth Info", and touch the "ENTER" button (2).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired status, and touch the "ENTER" button (2).
- To display the device name, select "Device Name".
- To display the device address, select "Device Address".

Initialize

It is possible to initialize the audio system's Bluetooth[®] settings or device information.

A CAUTION

- Do not initialize the settings while driving. Stop your vehicle in a safe area before initializing the device.
- Initialize with caution. Initialized settings and history cannot be restored.
- The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Initialize", and touch the "ENTER" button (2).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the item that you want to initialize item, and touch the "ENTER" button (2).
- HF Sound Setting:
 - Reception/ringtone volume
 - Incoming call volume

- Vehicle Device Info: Passkey
- All Initialize:
 - Reception/ringtone volume
 - Incoming call volume
 - Bluetooth audio volume
- Pairing registration
- Phonebook/history
- Speed dial
- Connect Method
- Bluetooth Power
- Auto Transfer
- 5) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

Notes on Bluetooth®



73R0209

 The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Denso Ten Limited is under license. Other trademarks and trade names are those of their respective owners.

This telecommunication equipment conforms to the requirements of the National Telecommunications Commission.

Stop using this unit and a Bluetooth[®] ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

Profile


- SSP (Secure Simple Pairing)
- PBAP (Phone Book Access Profile)
- OPP (Object Push Profile)
- HFP (Hand-Free Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)

Disclaimer for Bluetooth® function

- Depending on the mobile phone models, some phones may not be compatible fully or partially (some function may be restricted).
- Media playback through third-party applications may have limited support.
- Playback, display contents, connectivity or voice quality etc. may get affected depending on circumstances.
- After the ignition switch is turned to the "ON" position, the audio system takes few seconds to detect and connect to the Bluetooth® device (if already paired).
- Make sure that you are aware of all applicable local laws and accordingly use Bluetooth® device.

Bluetooth® hands-free (if equipped)

To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system by "Bluetooth Settings".

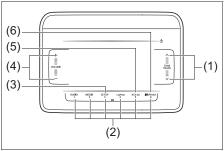


73R0150

Display




73R0151

Steering switch

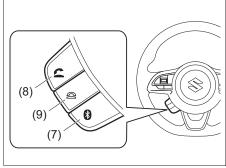

73R0152

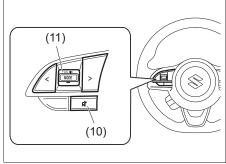

73R0153

- (1) "TUNE/TRACK" Up/Down button
- (2) Speed dial button (1-6)
- (3) SETUP button
- (4) "VOLUME" button

- (5) BACK button
- (6) "ENTER" button
- (7) Bluetooth® setting button
- (8) Off-hook button
- (9) On-hook button
- (10) Mute button
- (11) "VOL" (volume) button

NOTICE

- Do not leave your mobile phone inside your vehicle. If the temperature inside the vehicle increases, it may damage your mobile phone.
- When disposing your vehicle, make sure to delete all personal information saved to the audio system.
- The following hands-free data must be deleted from the audio system.
 - Speed dial
 - Reception history/Incoming call history
 - Bluetooth[®] phonebook data

NOTE:

- Please keep your phone volume low. The person's voice who you are talking to may be heard outside of the vehicle and increase the voice echo. When talking on the phone, speak clearly towards the microphone.
- In the following cases, your voice may not be heard clearly by the person on the other line:
 - When driving on unpaved roads. (If there is loud traffic noise.)

- When driving at high speeds.
- When driving with the window open.
- If the air conditioner is blowing directly towards the microphone.
- When the sound of the air conditioner fan is loud.
- When there is an adverse effect to the sound quality of the phone or network that you are using.
- The audio system may not function under the following conditions.
 - When the phone power is not turned on
 - When the mobile phone is out of service.
 - When the mobile phone is not connected.When the mobile phone battery is low
- The Bluetooth's hands-free operation is dependent upon the mobile phone's compatibility.
- The Bluetooth's hands-free performance is affected by the driving conditions of mobile phone networks, handsets and vehicles.
- The audio system's performance may be restricted due to the model of your mobile phone.

It is possible to register a mobile phone and register the phone number to the audio system as follows:

- Up to 1,000 phone numbers can be saved for every registered mobile phone.
- Up to 30 phone numbers can be saved to the call history menu (missed calls/ incoming/outgoing calls.)
 - When the call history exceeds 30 calls, they are deleted from the oldest one first, and the latest call history information is displayed in descending order.
- Up to 6 phone numbers can be saved to the speed dial list.

Answer the phone

- 1) Press the off-hook button (8).
- When you press the on-hook button (9) during an incoming call, you can block the call. (Only for compatible phone units)

NOTE:

- If you receive a call from a registered phone, the caller's name will appear on the screen.
- If you receive a call from an unregistered phone, only the caller's phone number will appear on the screen.

Hang up the phone

1) When the call is finished, press the on-hook button (9).

Make a call on call waiting

When the screen is displayed during a call, it is possible to hold the call and answer the other incoming call.

- When an incoming call is received during a call, press the off-hook button (8).
- When the call is on hold, it will connect to the other incoming call.
- To end the call waiting, press the offhook button (8).
- When the call waiting is completed, the call on hold will connect.
- When switching the caller, press the offhook button (8) again while using the call waiting.

NOTE:

This function can only be used with phone units that are compatible with call waiting.

Mute the ringtone volume

- 1) Press the mute button (10).
- To deactivate the mute volume, press the mute button (10).

Adjust the volume Adjust the reception volume

- Touch or slide the "VOLUME" button (4) or press the "VOL" button (11) during a call.
- To increase the volume, touch or slide upwards.
- To decrease the volume, touch a or slide downwards.

NOTE:

The volume and microphone sensitivity settings vary depending on the specifications of each mobile phone.

Adjust the ringtone volume

- Touch or slide the "VOLUME" button (4) or press the "VOL" button (11) during an incoming call.
- To increase the volume, touch
 or slide upwards.
- To decrease the volume, touch or slide downwards.

Adjust the volume with the Bluetooth® settings

- 1) Display the Bluetooth® setup menu.
- From the panel button:
 Touch the SETUP button (3).
 Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth[®] button (7).

- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "HF Sound Setting", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the item that you want to adjust, and touch the "ENTER" button (6).
- · Call Volume: Reception/ringtone volume
- Ringtone Volume: Incoming call volume
- 5) Touch or slide the "VOLUME" button (4).
- To increase the volume, touch
 or slide upwards.
- To decrease the volume, touch or slide downwards.

Make a call

Press the off-hook button (8) to enter the telephone mode.

Use the phonebook

- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Phonebook", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired initials, and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the contact number, and touch the "ENTER" button (6).
- If there are multiple phone numbers for a single contact, touch or slide the "TUNE/ TRACK" Up/Down button (1), select the phone number, and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Yes", and touch the "ENTER" button (6) or press the off-hook button (8).

Use the call history

- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "All Calls," "Missed Calls", "Incoming Calls" or "Outgoing Calls" and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the contact number, and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Yes", and touch the "ENTER" button (6) or press the off-hook button (8).

Use the speed dial

- Press the Off-hook button (8) for 1 second or longer.
- 2) Touch the desired speed dial button (2) (1-6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and then touch the "ENTER" button (6) or press the Off-hook button (8).

NOTE:

Speed dial numbers must be registered before this function can be used.

Transfer/delete the phonebook

- 1) Display the Bluetooth® setup menu.
- From the panel button: Touch the SETUP button (3).
 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth[®] button (7).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Phonebook", and touch the "ENTER" button (6).

Transfer all contacts from your mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Phonebook" screen, select "Add Contacts", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Overwrite All", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Transfer 1 contact from your mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Phonebook" screen, select "Add Contacts", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Add One Contact", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Delete the registered phonebook

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Phonebook" screen, select "Delete Contacts", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired initials from the list or "All", and touch the "ENTER" button (6).
- When you select "All", it will transition to step 4.
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired name from the list, and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Transfer/delete the call history

- 1) Display the Bluetooth® setup menu.
- From the panel button: Touch the SETUP button (3).
 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth[®] button (7).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Call History", and touch the "ENTER" button (6).

Transfer the call history

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Call History" screen, select "Overwrite History", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Delete the call history

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Call History" screen, select "Delete History", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "All Calls", "Missed Calls", "Incoming Calls" or "Outgoing Calls" and touch the "ENTER" button (6).
- Touch or slide the TUNE/TRACK Up/ Down button (1), select the desired data from the history or select "All", and then touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Registration / deletion of speed dial

- 1) Display the Bluetooth® setup menu.
- From the panel button: Touch the SETUP button (3).
 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch:
- Press the Bluetooth[®] button (7).
 2) Touch or slide the "TUNE/TRA
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Speed Dials", and touch the "ENTER" button (6).

Registration in speed dial

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Speed Dials" screen, select "Add Speed Dial", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the phonebook or call history, and touch the "ENTER" button (6).
- When you select the call history, it will transition to step 4.
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired initials from the list and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the contact number, and touch the "ENTER" button (6).
- If there are multiple phone numbers for a single contact, touch or slide the "TUNE/ TRACK" Up/Down button (1), select the phone number, and touch the "ENTER" button (6).
- 5) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the speed dial number that you want to register, and touch the "ENTER" button (6).

Deletion of speed dial

 Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Speed Dials" screen, select "Delete Speed Dials", and touch the "ENTER" button (6).

- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the speed dial number that you want to delete, and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).


Automatic transfer of the phonebook/ call history

When registering the mobile phone, you can select to automatically transfer the phonebook and call history from your device. Select according to the following steps.

- 1) Display the Bluetooth® setup menu.
- From the panel button:
 Touch the SETUP button (3).
 Touch or slide the "TUNE/TRACK" Up/
 Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth[®] button (7).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Auto Transfer", and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "On" or "Off", and touch the "ENTER" button (6).

Bluetooth® audio


To use Bluetooth[®] devices (Bluetooth[®] audio or mobile phone) on the audio system, it is required to register the Bluetooth[®] devices to the audio system by "Bluetooth[®] Settings".

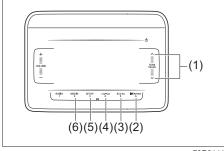

73R0141

- (1) "TUNE/TRACK" Up/Down button
- (2) "DISP/ENTER" button
- (3) BACK button
- (4) "FLD" (group operation) button
- (5) SETUP (random/repeat) button
- (6) "MEDIA" button

 Display



73R0154

- (A) Playback time
- (B) Text information display

NOTE:

Some functions may not be usable on some Bluetooth® devices.

Selecting the Bluetooth® audio

- 1) Touch the "MEDIA" button (6).
- Touch the "MEDIA" button (6). Each time the button is touched, the mode will change as follows:

USB (iPod) (if equipped) \rightarrow Bluetooth[®] audio (if equipped) \rightarrow AUX (if equipped)

Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/ Down button (1).
- A: Hold down the Up button for 1 second or longer to fast forward the track.
- Image: Hold down the Down button for 1 second or longer to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to listen to the next track.
- W: When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

Selecting a group (only for supported models)

- 1) Touch the "FLD" (group operation) button (4).
- 2) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to go to the next group.
- I Touch the Down button to go to the previous group.

Repeat playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Each time the "DISP/ENTER" button (2) is touched, display will change as follows:

Off → One song repeat → Group repeat ...

Random playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Random", and touch the "DISP/ENTER" button (2)
- Each time the "DISP/ENTER" button (2) is touched, display will change as follows:
 Off → Group random → All random

Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows:
 Artist name/Track title → Album name/ Track title

NOTE:


- "NO TITLE" will be displayed when there is no text information in the USB device currently being played.
- "..." is displayed if all text data cannot be displayed. Touch and hold the "DISP/ ENTER" button (2) for at least one second to automatically display the rest of the text data.

Anti-Theft Feature

The anti-theft function is intended to discourage thefts, such as that the audio system becomes inoperable when it is installed on other vehicles.

This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the lead-acid battery is disconnected, the unit will become inoperable until the PIN is reentered.

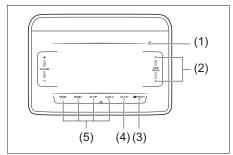

73R0155

- (1) POWER button
- (2) List selection button
- (3) "ENTER" button
- (4) BACK button
- (5) PIN entry button (1-4)

Display



73R0156

Setting the Anti-Theft Function

- Touch the POWER button (1) for 1 second or longer to power off the audio system.
- Hold down the button numbered [1] of the PIN entry button (5) and the "ENTER" button (3) and touch the POWER button (1).
- · "SECURITY" will be displayed.
- "----" will be displayed.
- Enter a 4-digit number to be registered as PIN using the buttons numbered [1] -[4] of the PIN entry button (5).
- 5) Touch the "ENTER" button (3) for 1 second or longer.
- "COMPLETE" will be displayed, and the power will turns off after 3 seconds.

NOTE:

Take a note of the registered PIN and keep it for the future use.

Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- Touch the POWER button (1) for 1 second or longer to power off the audio system.
- Hold down the buttons numbered [1] of the PIN entry button (5) and the "ENTER" button (3) and touch the POWER button (1).
- · "PIN ENTRY" will be displayed.
- "----" will be displayed.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] [4] of the PIN entry button (5).
- 5) Touch the "ENTER" button (3) for 1 second or longer.
- If an incorrect PIN is entered, "ERROR* (ERR Number)" will be displayed for 3 seconds, then the audio system will go back to step 2.
- "----" is displayed on the screen, and the power will turns off after 3 seconds.

NOTE:

- To change your PIN, first delete your current PIN, then set a new one.
- If an incorrect PIN is entered 10 times or more, "HELP" will be displayed and the audio system will become inoperable. In this case, contact a Maruti Suzuki authorised workshop.


Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the lead-acid battery is replaced, etc, it is required to enter the PIN to make the unit operable again.

- Set the ignition switch to the ACC position.
- · "SECURITY" will be displayed.
- "----" will be displayed.
- 3) Enter the registered 4-digit PIN number using the buttons numbered [1] [4] of the PIN entry button (5).
- 4) Touch the "ENTER" button (3) for 1 second or longer.
- If an incorrect PIN is entered, "ERROR* (ERR Number)" will be displayed for 3 seconds, then the audio system will go back to step 2.
- After 3 seconds, the power of the audio system will be turned off automatically and it will become operable again.

Steering Switch (if equipped)

Use the steering wheel button to operate the basic functions of the audio system.

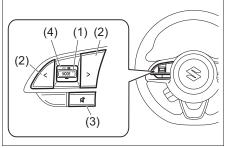

73R0157

- (1) MODE button
- (2) Selection button
 - Selecting the radio station
 - Selecting the track (USB (iPod), Bluetooth[®] audio mode)
- (3) Mute button
- (4) "VOL" (volume) button

MODE button (1)

 Each time the button is pressed, the mode will change as follows:

 $AM \rightarrow FM1 \rightarrow FM2 \rightarrow USB \text{ (iPod) (if equipped)} \rightarrow Bluetooth^{®} audio \text{ (if equipped)} \rightarrow AUX \text{ (if equipped)}$

Selection button (2)

- FM1, FM2, AM mode:
 - Press > to transfer to the next preset channel.
 - Press < to transfer to the previous preset channel.
 - Press > for 1 second or longer, it will search for receivable stations at a high frequency.
 - Press < for 1 second or longer, it will search for receivable stations at a low frequency.
- USB (iPod), Bluetooth® audio mode:
 - Press > to transfer to the next song.
 With the folder operation mode, it will transfer to the next folder.
 - Press < to return to the beginning of the currently playing song. Pressing it twice consecutively will return to the previous song.
 - With the folder operation mode, it will return to the previous folder.
- Press > for 1 second or longer to fastforward the song.
 When the button is released, it will stop fast-forwarding.
- Press < for 1 second or longer to rewind the song.
 - Releasing the button can stop rewinding.

Mute button (3)

- Hands-free mode
 Each time you press the button the mute will switch from ON/OFF.
- USB (iPod), Bluetooth[®] audio mode: Press the button during playback to temporarily stop the playback.

"VOL" button (4)

- · Hands-free mode:
 - Press during an outgoing or ingoing call, the reception/ringtone sound will increase.
 - Press during an outgoing or ingoing call, the reception/ringtone sound will decrease.
 - Press during an outgoing call, the ringtone sound will increase.
 - Press during an outgoing call, the ringtone sound will decrease.
- Radio, USB (iPod), Bluetooth[®] audio, AUX mode:

Press **t** , the volume will increase.

Press , the volume will decrease.

NOTE:

Due to poor quality of FM/AM signal, some disturbance/noise may be heard from speakers. It is recommended to switch off the tuner system to prevent the said disturbance/noise in the speaker.

Remote Controller

A CAUTION

Operational precautions regarding remote controller use:

- Because of its small size and light weight, use the remote controller with care. Dropping the remote controller or hitting it against hard surfaces may degrade the battery and cause malfunction.
- Do not expose the remote controller to humidity, dust, or moisture.
 Do not subject the remote controller to shock.
- Do not place the remote controller on the dashboard or other places that can be exposed to high temperatures, such as near heater vents. Exposing the remote controller to conditions in which it may overheat may cause the case to deform or other issues.
- Do not operate the remote controller while driving. Doing so may result in an accident.
- Direct the remote controller towards the remote controller receiver when using the remote controller.

(Continued)

A CAUTION

(Continued)

- The receiver may not operate correctly when exposed to direct sunlight or other sources of bright light.
- Remove the battery from the remote controller if the remote controller will not be used for extended periods of time.

A CAUTION

Cleaning the remote controller:

- Use a dry cloth to clean the remote controller. If the remote controller becomes excessively soiled, use a cloth dampened lightly with a diluted liquid detergent.
- Never use organic solvents, such as benzene cleanser or thinner. Use of these substances will damage the case and finish.


Before using the remote controller




72R0091

 Pull out the battery insulated sheet tab from the remote controller in the direction indicated by the arrow.

Remote controller operation

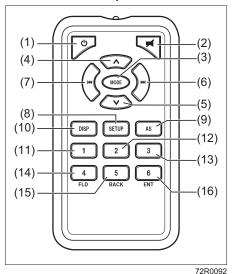

Talk Button (if equipped)

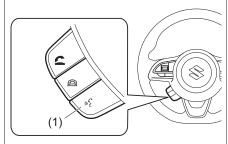

72RH4036

(1) Talk button

It can be used with a device having a voice recognition function. To use the function, it is necessary to perform a corresponding setting on your device. For operation of the audio system or the navigation system, refer to the supplementary manual, provided along with it.

No.	Button	Function
(1)	0	POWER button: Turns the power to the audio system on / off (press and hold)
(2)	T	Mute button: • Sound mute on / off
(3)	MODE	 MODE button: Switches between audio sources The mode changes in the following order each time the button is pressed: AM → FM1 → FM2 → USB (iPod) (if equipped) → Bluetooth[®] audio → AUX (if equipped) NOTE: "No Audio" will be displayed when there is no Bluetooth device connected.
(4)	^	Volume buttons: Volume up / Continuous volume up (press and hold)
(5)	V	Volume buttons: Volume down / Continuous volume down (press and hold)
(6)		TUNE/TRACK up button: RADIO: Tune up / Seek up (press and hold) USB, iPod, and Bluetooth® audio: Normal mode: Track (file) up / Fast up (press and hold) FLD mode (USB and Bluetooth® audio): Folder (Group) up / Fast up (press and hold) FLD mode (iPod): List up / Continuous list up (press and hold) FUNCTION mode (various settings): Configures functions / Change values


No.	Button	Function	
(7)	(in)	TUNE/TRACK down button: RADIO: Tune down / Seek down (press and hold) USB, iPod, and Bluetooth® audio: Normal mode: Track (file) down / Fast down (press and hold) FLD mode (USB and Bluetooth® audio): Folder (Group) down / Fast down (press and hold) FLD mode (iPod): List down / Continuous list down (press and hold) FUNCTION mode (various settings): Configures functions / Change values	
(8)	SETUP	SETUP button: • Switch to the System setting mode	
(9)	AS	Auto Store button: • RADIO: Switches between manual preset and AS mode / Auto Store (press and hold)	
(10)	DISP	DISP button: Changes text displays / Changes automatic text display pages (press and hold)	
(11)	1	Preset [1] button: • RADIO: Calls preset channels / Stores channel as preset (press and hold)	
(12)	2	Preset [2] button: • RADIO: Calls preset channels / Stores channel as preset (press and hold)	
(13)	3	Preset [3] button: • RADIO: Calls preset channels / Stores channel as preset (press and hold)	

No.	Button	Function
(14)	4 FLD	Preset [4] / FLD button: RADIO: Calls preset channels / Stores channel as preset (press and hold) USB, iPod, and Bluetooth audio: Switches between Folder operation / iPod menus / Group operation mode
(15)	5 BACK	Preset [5] / BACK button: • RADIO: Calls preset channels / Stores channel as preset (press and hold) • USB, iPod, Bluetooth® audio, and settings: Switches back to the previous screen
(16)	6 ENT	Preset [6] / ENTER button: RADIO: Calls preset channels / Stores channel as preset (press and hold) USB, iPod, Bluetooth® audio, and settings: Sets the selected item

Battery replacement


A CAUTION

- Store batteries in their original packaging out of reach of children until ready for use. Discard used batteries immediately. Seek medical attention immediately if swallowed.
- Do not place batteries in locations near fire or exposed to direct sunlight. Doing so may result in fire, explosion, or excessive heat.
- Do not place the remote controller on the dashboard or other places that can be exposed to high temperatures.
- Accidentally replacing batteries with lithium-ion batteries may result in explosion. Always replace batteries with the same type.

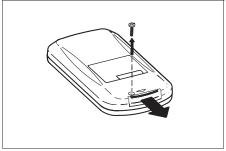


72R0088

 Use a Phillips screwdriver (sold separately) of the proper size to remove the screw and pull out the battery slot cover in the direction indicated by the arrow.

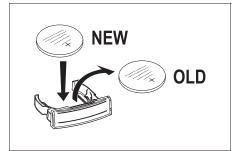

72R0089

 Remove the old battery and place the new battery (CR2025) into the battery slot cover with the + mark facing upwards.

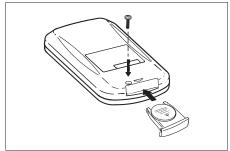

72R0090

 Press the battery slot cover to the direction indicated by the arrow completely and then fully tighten the screw.

Troubleshooting

When encountered a problem, check and follow the instructions as described below. If the described suggestions do not solve the problem, it is recommended to take the unit to a Maruti Suzuki authorised workshop.

1 Toblem 1 Ossible cause 1 Ossible Solution	Problem	Possible cause	Possible solution
---	---------	----------------	-------------------

Common

Unable to operate	The security function is on.	When "SECURITY" is displayed, enter the ID. When "HELP" is displayed, contact a Maruti Suzuki authorised workshop.
Unable to turn on the power (no sound). (No sound is produced)	Fuse is blown.	Contact a Maruti Suzuki authorised workshop.

Radio

Much noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.

USB

Playback does not start when the USB device is	There is no supported format file to play on this unit.	Check the file format.
connected.	The current consumption of the USB device exceeds 1.0 A.	Use an USB device with a current consumption lower than 1.0 A.
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.

Problem	Possible cause	Possible solution
Bluetooth [®]		
Pairing failed	The distance between this unit and the Bluetooth [®] ready device is too far, or a metallic object may be located between the Bluetooth [®] ready device and this unit.	Change the location of the Bluetooth® ready device.
	The Bluetooth [®] function of the Bluetooth [®] ready device is off.	Refer to the manual of the Bluetooth [®] ready device. (Some devices have the power saving function that automatically activates after a certain time.)
		Drive your vehicle to the service area of the phone.
The voice quality of hands-free is low (Distortion, noise etc.)	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit.

Error Display Messages

The following messages (flashing) will be displayed onto the screen depending on the condition of the audio system.

Message	Description						
Reading	When the USB device or iPod's file format is being read, this message will be displayed.						
ERROR 1	When the USB device or iPod's reading error occurs, this message will be displayed. Reconnect the USB device or iPod's connection cable. When the Bluetooth [®] audio playback malfunction occurs, this message will be displayed. Check the Bluetooth [®] audio body.						

Message	Description
ERROR 2	When the USB device or iPod's communication error occurs, this message will be displayed. Reconnect the USB device or iPod's connection cable.
ERROR 3	When the USB device or iPod's issues are detected, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 4	If the USB device or iPod does not operate due to an over current, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 5	When the data playback fails with the USB device or iPod connected, or there are data unable to be transferred, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 6	When the USB HUB is connected, this message will be displayed. Disconnect the USB HUB.
UNSUPPORTED	When an unsupported USB device or iPod is connected, this message will be displayed. Connect the supported USB device or iPod.
No Music	When an empty USB device or a USB device containing files with the extension unable to be played is connected, this message will be displayed. Connect the USB device containing files with the playable extension.
No Songs	When an iPod is connected, this message will be displayed.

Suzuki Connect (if equipped)

Suzuki Connect is an advanced Telematics solution that offers Connected car features related to Vehicle Alerts & Notifications, Safety & Security, Trips & Location & Remote Vehicle Operation.

Refer to MARUTI SUZUKI website for below details:

- 1. Feature & Vehicle applicability
- 2. Terms & Conditions
- 3. FAQs
- 4. Suzuki Connect App Manual
- 5. Help & Contact us
- 6. Suzuki Connect Alexa Skill Manual

Remote AC (if equipped)

Allows you to set cabin temperature remotely to desired level (18 - 32 Celsius degree) for 10 minutes while starting Vehicle Engine. You can remotely stop Remote AC anytime within 10 minutes of Remote AC ON Request success. Additionally, you can set Defroster & Rear Defogger ON/OFF. This remote request shall be authenticated through preset mPIN (Mobile PIN) after consent is given by customer.

Modes of operation

This feature can be operated from three modes:

- · Suzuki Connect Application
- Smart Watch
- · Suzuki Connect skill for Amazon Alexa

Operating conditions

Remote AC ON request shall be processed when all of following operational conditions are met:

- · Ignition is OFF
- Parking brake is engaged
- All doors are locked properly
- · Hood is closed properly
- Brake Pedal is not depressed
- Gearshift lever is in "P" (Park) position
- Key FOB is not detected in the vehicle
- · Steering lock is engaged
- Vehicle is parked in good cellular network area
- It has been less than 9 days since last ignition OFF
- No Malfunction present in vehicle before ignition OFF

Terminating conditions

Remote AC ON request shall be terminated when any of following conditions is met:

- Telematics device is unable to communicate with vehicle (No network location)
- · Battery voltage is low
- Any Doors, hood, or trunk is opened
- Key FOB is detected inside the vehicle
- When the vehicle is in motion or in IG-ON/EG-ON status
- When the brake is applied
- Gearshift is in position other than "P" Park position.
- When there is a problem with the air conditioner (malfunction of AC) or any

- · Pressing the engine switch
- When the engine is stalled

A WARNING

- Accumulation of poisonous exhaust gases in enclosed area may lead to serious health issues and death in worst cases, Kindly ensure that
 - There are no passengers in the vehicle before usage of this feature
 - Park Vehicle in the areas where you can safely use this feature
 - Avoid usage in enclosed places like garage, multi-level car parking, etc.
 - Make sure that the ventilation opening and muffler are not blocked before use
- There is high risk of fire accident due to high temperature exhaust gases when flammable materials are surrounded by car. Kindly ensure that no flammable material (such as oil or dry leaves) are nearby the vehicle and Vehicle is not covered with body cover.

(Continued)

WARNING

(Continued)

- Never use this function when there are passengers in the car. Remote AC ON creates anxiety, panic or discomfort in passengers inside car, due to sudden Engine ON/OFF & change in cabin temperature.
- Never use this feature while the vehicle is under inspection or maintenance at service center or at a gas station. Sudden start of engine during maintenance can be a safety hazard for the technician working on the vehicle or for you

A CAUTION

- Following operations may get activated due to Remote AC ON feature:
 - Wipers get activated if left in ON condition
 - Audio may turn on
- Desired temperature may not be achieved when any of windows is opened.

NOTICE

- Do not use this function on public roads.
- Depending on where you live, idling may be prohibited or restricted by an ordinance, so please check it before use.
- Use the feature only when essential and ready to board on your journey for effective fuel efficiency.

NOTE:


- Application services are subject to change. It is recommended to install the latest updates from Google Play/Apple App store for optimal experience.
- Application functioning is subject to network availability & also depends on Smartphone hardware & OS performance.
- Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

The communication device equipped with your vehicle includes free/open source software.


The license information and/or source code for free/open source software is available at the following URL:

https://www.denso-ten.com/support/source/oem/sg1/

Fuel Filler Cap

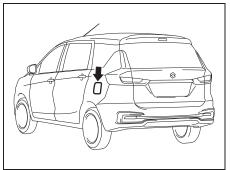


73R0083

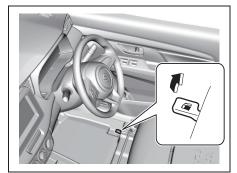

73R0084

The fuel filler cap is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard lower side of the driver's seat and locked by simply closing the door.

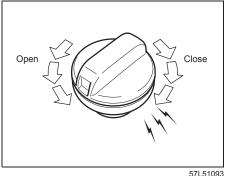


To remove the fuel filler cap:

- 1) Stop the engine and close all the doors and windows while refueling.
- 2) Open the fuel filler door.
- 3) Remove the cap by turning it counterclockwise.

A CAUTION

Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

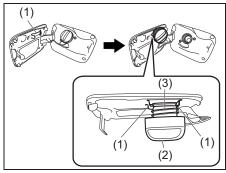

73R0085

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

To reinstall the fuel filler cap:

- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.

WARNING

Fuel is extremely flammable. Do not smoke when refueling, and make sure there are no open flames or sparks in the area.


WARNING

If you need to replace the fuel cap, use a genuine Maruti Suzuki cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage while driving and in the event of an accident.

Engine Hood

A WARNING


- Never allow children to open or close the hood. Children may injure themselves because the hood is heavy. Contact with the engine compartment and related parts may cause burns when this area/these parts are hot.
- Do not allow children to be near the vehicle when opening the hood.
- Do not leave tools, cloths, and other objects, which were used to clean or perform maintenance and inspections, in the engine compartment. Doing so may cause operational failures or even the vehicle to catch fire when the engine compartment becomes hot.

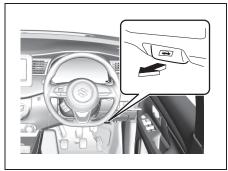

73R0086

To open the engine hood:

 Pull the hood release handle located under the driver's side instrument panel in the outboard position. This will disengage the engine hood lock halfway.

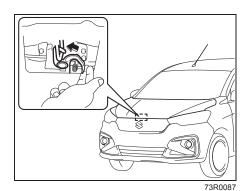


 Push the under-hood release lever leftward with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

A CAUTION

The release lever and its peripheral, or engine hood can be hot enough to burn your finger right after driving. Touch after those becomes cool enough.

NOTICE

Check that the wiper arms are not raised before you lift up the engine hood to avoid damaging the wiper arms and the engine hood.

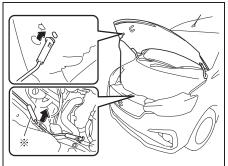

73R0088

 While holding the hood, pull the prop rod out from the holding clip, and then insert the end of the rod into the designated hole.

A CAUTION


- The prop rod can be hot enough to burn your finger right after driving.
 Touch the rod after it becomes cool enough.
- Insert the end of the rod into the hole securely. If the rod slips out, you may get caught in the closing hood.
- The rod may slip out when the hood is blown by wind. Be careful on windy days.

NOTICE

Hold the part maked in * when removing the bracket from the holder.

To close the engine hood:

 Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back to the holding clip.

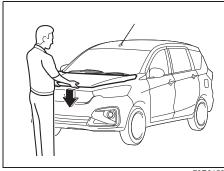

73R0158

 Lower the hood to about 20 cm above the hood latch, and then let it drop down. Make sure the hood is securely latched after closing.

WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.


A CAUTION

To avoid injury, check that no part of the occupant's body such as hands or head is in the path of the hood when closing it.

NOTICE

Pushing on the hood from the top may damage it.

Sun Visor

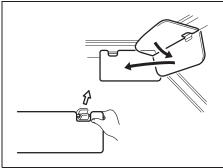


79,1161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, handle it by the hard plastic parts or the sun visor can be damaged.

Card holder

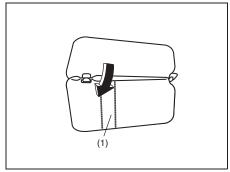

74LHT0516


(1) Card holder

You can put a card in the card holder (1) on the back of the sun visor.

NOTICE

When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

Vanity mirror (if equipped)

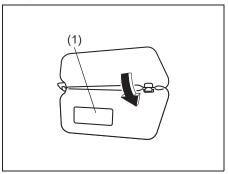

73R0167


(1) Vanity mirror

A WARNING


- Do not use the vanity mirror while driving. Doing so may result in an accident due to failure to pay attention to the road in front of you.
- Do not place any weight on or come to close to the locations where an airbag is stored when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of the airbag.

Interior Light


Front (Type A)

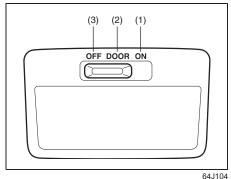

Front (Type B)

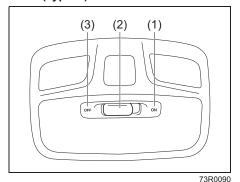

Rear

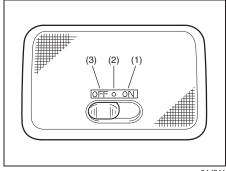

64J211

Interior light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:


- The ignition switch is in "LOCK" position, or the ignition mode is "LOCK" (OFF).
- The hazard warning lights, the position lights and the headlights are off.
- After 15 minutes from the light on.

DOOR (2)

- The light comes on when the door is opened. After closing all doors, the light will remain on for 15 seconds and then fade out. If you insert the key, or press the engine switch to change the ignition mode to "ACC" or "ON" during this time, the light will start to fade out immediately. After removing the key from the ignition switch or press the engine switch to change the ignition mode to "LOCK" (OFF), the light will turn on for 15 seconds and then fade out.
- When the ignition switch is in LOCK position, or the ignition mode is "LOCK" (OFF), to prevent the lead-acid battery from discharging, the light will automatically be turned off when a period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

OFF (3)

The light remains off even when the door is opened.

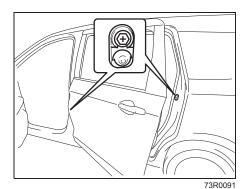


NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber projection) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber projection depending on the vehicle specification.

Accessory Socket


Center console

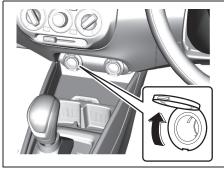

72RH4015

Floor Console (if equipped)

Type A

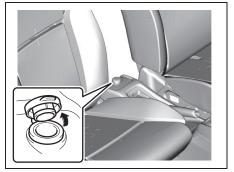


73R0093

The accessory socket will work when the ignition switch is in ACC or ON position, or the ignition mode is "ACC" or "ON".

Each socket can be used to provide 12 volt/120 watt/10 ampere power for electrical accessories when used alone.

Type B

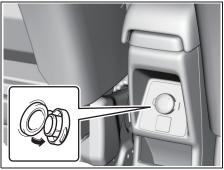

72R0047

3rd Row Seats (if equipped)



72R0048

NOTICE

- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system.
 Check that any electrical accessories you use are designed to plug into this type of socket.
- Check that the cap remains on the socket when the socket is not in use.
- When the ignition switch is in "LOCK" position or the ignition mode is LOCK (OFF) during using the accessory socket, the following accidents may occur;
- the audio or navigation system does not turn off.
- the keyless entry system does not work, etc.

If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.


If the problem persists, ask a Maruti Suzuki authorised workshop to have the system inspected.

WARNING

If you pay too much attention to operating the Accessory socket while driving, an accident can occur.


Assist Grips

Front Passenger's Seat / 2nd Row Seat

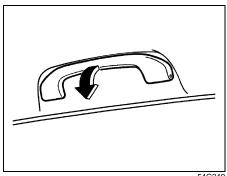

54G249

3rd Row Seat

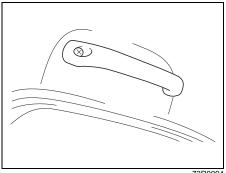

73R0094

Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Glove Box



73R0095

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

WARNING

Never drive with the glove box lid open. It could cause injury if an accident occurs.


WARNING

Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.

A WARNING

Do not drive the vehicle with the lid of glove box open.

AUX/USB Socket (if equipped) / USB Socket (if equipped)

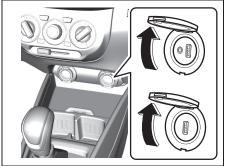

72RH4016

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to "Audio system (if equipped)" in this section.

NOTICE

Always close the cap when not in use, since entry of foreign material, dust, water, conductive liquids may damage the audio system or USB device.

WARNING


If you pay too much attention to operating the AUX/USB socket while driving, an accident may occur.

▲ WARNING

Do not put items in the vehicle that may fall or roll around in the vehicle while driving. Objects getting caught in the brake pedal or accelerator pedal may prevent proper operation of the pedals, which may result in an accident.

Cup Holder and Storage Area

Front

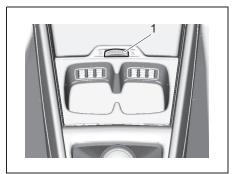

73R0097

Ventilated cup holder

If you turn on the air conditioning system, air flow comes out of the cup holder outlet. Air flow prevent the temperature of the drink from increasing.


Turn the dial wheel (1) clockwise, the cup holder outlet will open.

Turn the dial wheel(1) counterclockwise, the cup holder outlet will close.

NOTE:

- The temperature of air flow in cup holder is about the same with the center outlet.
- There is no effect to cool the drink in the cup holder.

3rd Row Seats

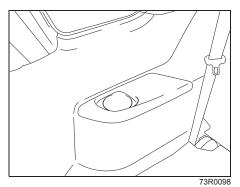


WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful when you are using the cup holders to hold a cup containing liquid. Spilling out hot liquid can cause burn injury. The lithiumion battery is located under the front left side seat. Spilling liquids on the lithium-ion battery in models equipped with ENG A-STOP system or Smart Hybrid may cause a fire or electric shock or damage to the battery.
- Do not use the cup holders to hold sharp-edged, hard, or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.
- If you spill, or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorised workshop.

Bottle Holder

Front seats

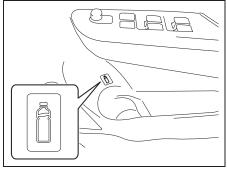


73R0099

NOTE:

Maruti Suzuki recommends to use maximum 1 liter capacity of bottle.

2nd row seats

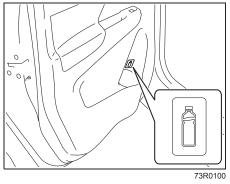


You should hold a bottle with a cap in the holder.

Front Armrest with Console Box (if equipped)

NOTICE


To avoid damage to the armrest, do not lean on it or allow a child to sit on it.

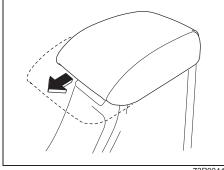

72R0044

The armrest can be slid forward.

Console box

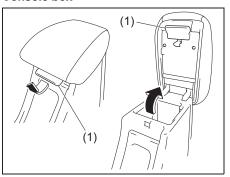


72R0045

Use this stowage for keeping small items. Open the compartment by raising the top lid while keeping the lever (1) up.

NOTE:

Always close the lid after you put something into or take something out of the box.

Rear Armrest (if equipped)

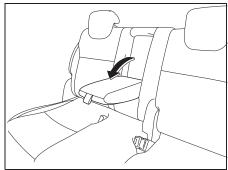


72R0046

The rear armrest is stowed in the center of the seatback. Tilt it down forward to use.

WARNING

If the seat belt is obstructed by any part of the armrest when fastened, it cannot provide the intended protection. After fastening the seat belt, always check that the armrest is not interfering with the belt.

Bill/coin Holder

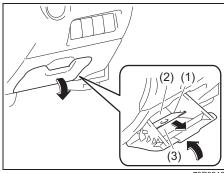

73R0216

Pull the upper of the holder downward to open the cover.


It is recommended to separate coins (2) and bills (3) with partition.

The holder can also be used after sliding out and removing the partition plate (1). Push the upper of the holder to close the cover.

WARNING


Never drive with the bill/coin holder lid open. It could cause injury if an accident occurs.

Footrest

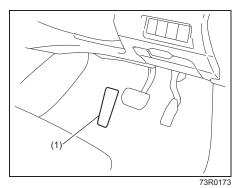

Use the footrest (1) as a support for your left foot only.

Front Seat Back Pocket (if equipped)

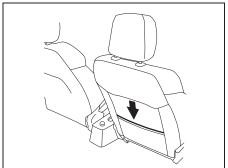


73R0101

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

A CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.

Luggage Box (if equipped)

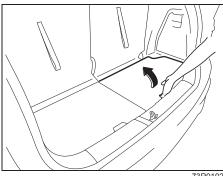

73R0102

Insert your hands into the notches and lift up the luggage box cover to use the box.

NOTICE

Do not allow items in the box to extend above the top of the box. Otherwise, the box or cover may be damaged.

NOTICE

Observe the following instructions, not to break the luggage box cover.

- Do not hold open the cover while drivina.
- Do not apply any load to the cover while holding it open.

Frame Hooks

It is not recommended that you use the frame hooks for towing another vehicle. They were originally designed to tow your vehicle in emergency situation.

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in "EMERGENCY SERVICE" section.


A WARNING

Observe the following instructions when using frame hooks. The towing eye or vehicle body may break and cause serious injury or damage:

- Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the towing eye.

In such case, we recommend that you contact a professional service.

Front

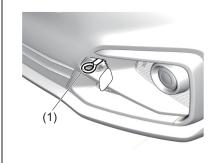


73R0183

The towing eye (1) is provided on the front of the vehicle for use in emergency situations and sea shipping purpose only.

NOTICE


To prevent damage to the vehicle, never use the towing eye (1) for trailer / train shipping.

To install the hook (1), follow the procedure below.

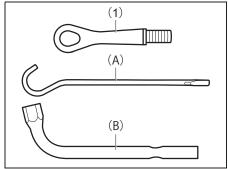

52RM50170

 Pick up the towing eye (1), jack handle (A) and wheel wrench (B) in the luggage compartment.

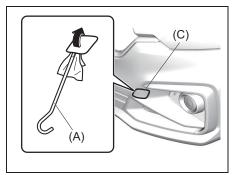


72RS2010

2) Remove the cover (C) by using a jack handle (A) covered with a soft cloth as shown in the illustration.

NOTE:


Do not use excessive force as it may damage the cover strap.

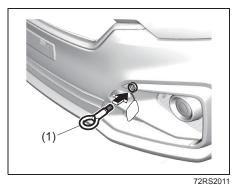

3) Install the towing eye (1) by hand.

NOTE:


It is recommended to secure the cover with tape to prevent damage during towing.

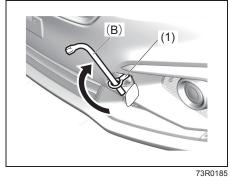

4) To tighten the towing eye (1), turn it clockwise by using a wheel wrench (B) until the towing eye (1) is securely installed.

To remove the towing eye (1), reverse the installation procedure.

Rear

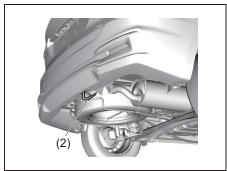


73R0104

The frame hook (2) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only.

NOTICE

To prevent damage to the vehicle, never use the frame hook (2) for trailer / train shipping.

Other Holes

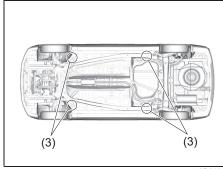


73R0105


The frame holes (3) are provided only for transporting by a car carrier trailer.

NOTICE

Do not use the frame holes (3) for towing purpose. These holes may break and cause serious injury or damage.

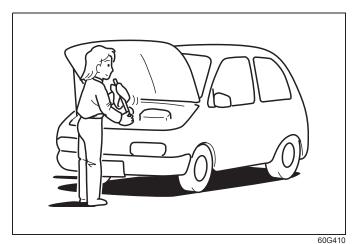

Maintenance Schedule	6-2
Periodic Maintenance Schedule	6-2
Drive Belt	6-6
Engine Oil and Filter	
Engine Coolant	6-10
Air Cleaner	6-12
Spark Plugs	6-12
Gear Oil	
Clutch Pedal	6-13
Brakes	6-14
Steering Wheel	6-17
Tires	6-17
Lead-acid Battery	6-20
Fuses	6-22
Headlight Aiming	6-26
Bulb Replacement	6-26
Wiper Blades	6-33
Windshield Washer Fluid	6-36
Air Conditioning System	6-37

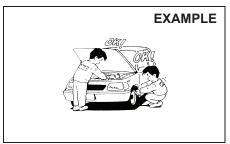

72SM06020

A WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

• To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, be sure that the lead-acid battery is disconnected and the ignition switch has been in LOCK position or the ignition mode has been "LOCK" (OFF) for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires. The wires are wrapped with vellow tape or yellow tubing, and the couplers are yellow for easy identification.

(Continued)

WARNING

(Continued)

- Do not leave the engine running in garages or other confined areas.
- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, make sure that the parking brake is set fully and the transmission is in Neutral (for manual transmission vehicles) or Park (for automatic transmission vehicles).
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the lead-acid battery. Flammable fumes are present.

(Continued)

A WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative lead-acid battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets.
 Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

A WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorised workshop.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI SUZUKI genuine replacement parts or their equivalent.

Periodic Maintenance Schedule

"C": Clean

"R": Replace or Change

"I": Inspect, clean, adjust, lubricate or

replace as necessary

"L": Lubricate

"T": Tighten to Specified Torque

"O": Rotate

NOTE:

This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

			FREE INSPECTION PERIODIC MAINTENANCE AT COST										
Interval: This interval should be judged by odometer reading or months, whichever comes first.		km (v1000)	1	5	10	20	30	40	50	60	70	80	
		, ,											
		months	1	6	12	24	36	48	60	72	84	96	
ENGIN	E		•			•		•			•		
1-1	Generator drive Belt (Wear)	Non-ISG model	_	_	ı	I	I	I	ı	I	I	R	
	Conclutor university	ISG model	_	_	I	I	R	I	ı	R	l	I	
1-2	Water pump drive belt (Wear)		-	_	I	I	- 1	I	I	I	ı	R	
1-3	Engine Coolant (Level, Leakage)		I	I	I	R	I	R	I	R	I	R	
1-4	Engine oil, engine oil filter and drain plug	g gasket (Level, Leakage)	- 1	- 1	R	R	R	R	R	R	R	R	
1-5	Cooling system hoses and connections	(Leakage and Damage)	I	- 1	1	I	- 1	I	ı	- 1	- 1	1	
1-6	Engine Mounting & manifold fixing (Loos	se, Damage)	-	_	1	-	- 1	_	ı	_	1	-	
1-7	-7 Exhaust System (Noise, Leakage etc.)		_	- 1	-	I	-	I	_	- 1	-	1	
1-8	1-8 Positive Crank Case Ventilation System (Hoses, Connections and Valve)		_	_	-	- 1	1	I	_	1	-	1	
IGNITION		-											
2-1	2-1 Ignition wire (Damage, Deterioration)		-	-	-	I	-	I	_	- 1	_	- 1	
2-2	Spark Plug	Petrol	Replace after every 1,00,000 KM or 84 months whichever comes first.										
2-2	Spark Flug	CNG	Replace after every 50,000 KM or 48 months whichever comes first										
FUEL													
3-1	Air cleaner filter element	Paved-road	Clean after every 5,000 KM. Replace after every 40,000 KM.										
3-1	All cleaner liller element	Dusty Condition	Clean after every 2,500 KM or as required. Replace after every 40,000 KM.										
3-2	Fuel tank cap, fuel lines and connections	s (Leakage and Damage)	_	- 1	_	_	_	ı	_	_	-	I	
3-3	Fuel Filter		Replace	e after ev	ery 1,00,	000 KM (or I20 mo	nths whic	chever co	mes first.			
3-4	Fuel Tank		_	-	-	-	-	ı	_	-	-	1	
CLUT	CH AND TRANSMISSION												
1-1	4-1 Clutch fluid (Level, Leakage)		- 1	- 1	- 1	- 1	- 1	- 1	1	- 1	- 1	1	
4-1			Replace	e after ev	ery 40,00	00 KM or	24 month	ns whiche	ever come	es first.			
4-2	4-2 Clutch slipping (Dragging or Excess Damage)		I	1	1	I	I	I	I	- 1	I	1	
4-3	Manual Transaxle Oil (Level, Leakage)		I	I	I	I	I	I	I	I	I	I	
4-4	Automatic Transaxle Fluid (Leakage)		_	-	_	I	_	I	-	I	_	I	
4-5	4-5 Hose, Automatic Transaxle Cooler (Leakage & Damage)		I	1	ı	I	I	ı	1	1	- 1	1	

			FREE	E INSPEC	CTION	PERIODIC MAINTENANCE AT COST								
	al: This interval should be judged by odom- eading or months, whichever comes first.	km (xl000)	1	5	10	20	30	40	50	60	70	80		
010.	eaamg er menane, mmenerer eemee mea	months	1	6	12	24	36	48	60	72	84	96		
4-6	6 Gear shifter (Operation)		I	I	ı	ı	ı	ı	ı	I	I	I		
DRIV	E SHAFT		,			•	•							
5-1	Drive shaft noise				- 1	- 1	I	I	- 1	ı	I	I		
5-2	Drive shaft boot (boot damage)		-	I	I	I	I	ı	I	I	I	I		
BRAI	KE					•	•			L	L			
			I	I	I	I	I	I	I	I	I	I		
6-1	Brake Fluid (Level, Leakage)		Replace after every 40,000 KM or 24 months whichever comes first.											
6-2	Brake pedal (Pedal - wall clearance)		1	I	1	ı	ı	I	1	I	I	I		
6-3	Parking brake lever and cable (Play, Dama	age)	I	ı	I	ı	ı	I	ı	ı	I	I		
6-4	Brake disc and pad (Wear)		-	I	- 1	ı	ı	ı	- 1	I	I	I		
6-5	Brake drum and shoes (Wear)		-	-	I	I	ı	I	ı	ı	I	I		
6-6	Brake hoses and pipes (Fluid leakage, Damage)		ı	ı	ı	1	ı	ı	- 1	1	I	I		
6-7	.7 Master cylinder, wheel cylinder and caliper piston (Fluid leakage, Boot/Seal damage)		1	1	I	I	I	I	I	I	I	I		
WHE	EL					•	•			ı.	L			
7-1	Tires (Air pressure, Abnormal wear, Crack	and Rotation)	I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O		
7-2	Wheels (Damage)		I	ı	I	I	I	I	I	I	I	I		
7-3	Front/Rear wheel bearing (Loose, Damage	e)	I	I	I	I	I	I	I	I	I	I		
FRO	NT / REAR SUSPENSION			•	•	•	•	•	•			•		
8-1	Suspension strut (Oil leakage, Damage)		I	ı	I	I	I	I	I	I	I	I		
8-2	Suspension arms / Knuckle support and To	orsion rods (Loose, Damage)	_	ı	I	I	I	I	I	I	I	I		
8-3	Rear spring (Damage)		I	I	I	I	ı	ı	I	I	I	I		
8-4	Shock absorbers (Oil leakage, Damage)		I	ı	I	I	ı	ı	I	I	I	I		
8-5	5 All bolts and nuts (Loose)		_	Т	Т	Т	Т	Т	Т	Т	Т	Т		
STEE	RING													
9-1	Steering wheel (Play, Loose)		I	I	ı	ı	ı	I	ı	I	I	ı		
9-2	All rods and arms (Loose, Damage, Wear)		I	I	I	I	I	I	I	I	I	I		
9-3	Tilt Steering (Operation)		- 1	I	I	- 1	I	I	1	I	I	I		

		FREE	INSPEC	CTION	PERIODIC MAINTENANCE AT COST							
Interval: This interval should be judged by odometer reading or months, whichever comes first.	km (xl000)	1	5	10	20	30	40	50	60	70	80	
3 • • • • • • • • • • • • • • • • • • •	months	1	6	12	24	36	48	60	72	84	96	
ELECTRICAL		•	•		•		•				•	
10-1 Battery - electrolyte (Level, leakage) and v	oltage	I	I	I	I	I	I	I	I	I	I	
10-2. Wiring harness connection (Loose, Damag	je)	-	ı	I	ı	I	I	ı	ı	I	I	
10-3 Lighting system (Operation, Stains, Damag	je)	I	I	I	I	I	I	I	I	I	I	
10-4 Wiper (Operation, Stains, Damage)		I	ı	I	ı	I	I	ı	ı	I	I	
10-5 Horn (Operation)		I	I	I	- 1	I	I	I	I	I	I	
10-6 AUX, USB and accessory socket (Operation)		-	I	I	I	I	I	I	I	I	I	
BODY												
11-1. All chassis bolts and nuts (Tighten)		-	Т	Т	Т	Т	Т	Т	Т	Т	Т	
11-2 All latches, hinges and locks (Function)		I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	
ROAD TEST												
12-1 Operation of Brakes, gear shifting and spe	edometer	I	ı	I	I	ı	I	ı	ı	I	I	
12-2 Body and chassis noise		I	ı	I	ı	I	I	ı	ı	I	I	
AIR CONDITIONER		•										
13-1 Tighten compressor mounting bolt		-	Т	Т	T	Т	T	Т	Т	Т	T	
13-2 All hose joint (Check, Tighten)		I	I	I	I	I	I	I	I	I	I	
13-3 Check functioning of Recirculating flap		I	I	I	I	I	I	I	I	I	I	
13-4. Clean condenser with low pressure water	13-4. Clean condenser with low pressure water		С	С	С	С	С	С	С	С	С	
13-5. Check all mounting bolts		I	I	I	I	I	I	I	I	I	ı	
13-6 Air conditioner filter element		I	I	I	I	R	I	I	R	I	I	

Drive Belt

A WARNING

When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

 
The drive belts tension is adjusted automatically. If the belt is too loose, insufficient lead-acid battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a Maruti Suzuki authorised workshop.

Engine Oil and Filter


Specified Oil

For India



72RH4037

Except for India

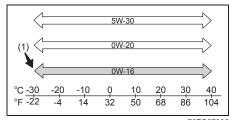

78RB07002

(1) Recommended

For India, be sure that the engine oil you use comes under the quality classification as listed below.

- API SN, SP
- ILSAC GF-6

Except for India, be sure that the engine oil you use comes under the quality classification as listed below.

· API SL, SM, SN, SP

• ILSAC GF-6


Select the appropriate oil viscosity according to the above chart.

SAE 0W-l6 (I) is the best choice for good fuel economy and good startability in cold weather.


NOTE:

- The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.
- We recommend that you use MARUTI SUZUKI genuine oil. To purchase it, see a Maruti Suzuki authorised workshop.

Oil Level Check

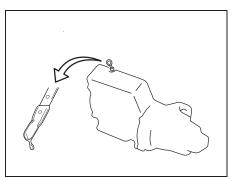

72R0117

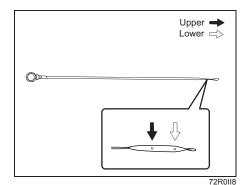


It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

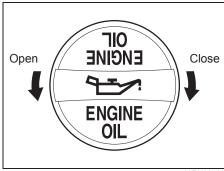


68PH00762

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

Changing Engine Oil and Filter

Drain the engine oil while the engine is still warm.

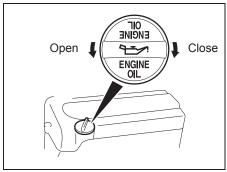


66RH001

- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain the engine oil.

A CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

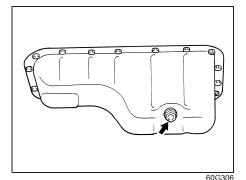

Tightening torque for drain plug 35 Nm (3.6 kg-m, 25.8 lb-ft)

A WARNING

- Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.
- Repeated, prolonged contact with used engine oil may cause skin cancer.
- Brief contact with used oil may irritate skin.

(Continued)

A WARNING


(Continued)

- To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.
- Launder any clothing or rags if it is with oil.
- Recycle or properly dispose of used oil and filters.
- Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

Oil Filter Replacement

- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- Smear a small amount of engine oil around the rubber gasket of the new oil filter.
- Screw the new filter by hand until the filter gasket contacts the mounting surface.


(For K15C engine model)

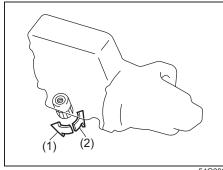

54G092

- (1) Loosen
- (2) Tighten

Tightening (viewed from filter top)

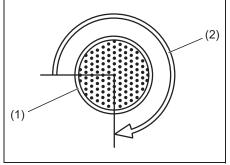

54G093

(1) Oil filter (2) 3/4 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface. 5) Tighten the filter as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter

3/4 turn or I4 Nm (I.4 kg-m, I0.3 lb-ft)

NOTICE

To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

Refill with Oil and Oil Leakage Check

- Pour oil through the filler hole and install the filler cap.
 For the approximate capacity of the oil, refer to "Capacities" in "SPECIFICA-TIONS" section.
- Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE

- When replacing the oil filter, it is recommended that you use a MARUTI SUZUKI genuine replacement filter. If you use an aftermarket filter, make sure it is of equivalent quality and follow the manufacturer's instructions.
- Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine Coolant

Selection of Coolant

To maintain optimum performance and durability of your engine, use MARUTI SUZUKI genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system, Maruti Suzuki authorised workshop can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Check that the proper mix is 30/70 and in no case higher than 70/30.
 Concentrations greater than 70/30 coolant to distilled water will cause overheating conditions.
- Do not use straight coolant nor plain water.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine or automatic transmission damage.

Coolant Level Check

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks.

Adding Coolant


A WARNING

Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.

NOTICE

- The mixture you use should contain 30% concentration of antifreeze.
- If the lowest ambient temperature in your area is expected to be – 35°C (–31°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.

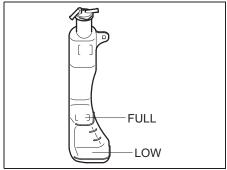

73R0110

If the coolant level is below "LOW" mark, coolant should be added. While the engine is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark. Never fill the reservoir tank above "FULL" mark.

NOTICE


When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Coolant Replacement

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

Air Cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

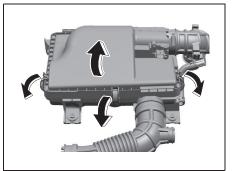

72RH4031

- Unclamp the side and center clamps and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.
- 2) Clamp the side and center clamps securely.

Spark Plugs

Spark plug replacement and inspection

Since special procedures, materials and tools are required, it is recommended that you trust this job to a Maruti Suzuki authorised workshop.

 
Gear Oil (Manual Transmission)

Specified Gear Oil

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use: "MARUTI GENUINE GEAR OIL 75W" for manual transmission gear oil.


Manual Transmission oil



54PI20706

Gear Oil Level Check

Manual Transmission

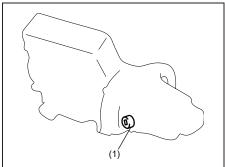

60MH047

(1) Oil filler and level plug

To check the gear oil level, use the following procedure:

- Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug (I).
- 3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.
- If the oil level is low, add gear oil through the oil filler and level plug hole
 (I) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

Tightening torque for oil filler and level plug (1)
Manual Transmission:
21 Nm (2.1 kg-m, 15.5 lb-ft)

A CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug is cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE


When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.

MARUTI SUZUKI Bond No. "1216E" or "1217G"

Gear Oil Change

Since special procedures, materials and tools are required, ask a Maruti Suzuki authorized workshop for this job.

Clutch Pedal

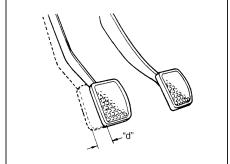


54G274

Clutch pedal play "d": MAX 10 mm (0.4 in.)

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be less than the specified values. If the play is more than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorised workshop.

Clutch Fluid

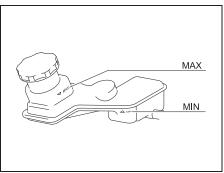

73R0115


Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by vour Maruti Suzuki authorised workshop. If the clutch fluid level is near the "MIN" line, fill it up to the "MAX" line with Maruti Suzuki Genuine Brake Fluid (MGBF) or DOT 3.

We highly recommend to use "Maruti Suzuki Genuine Brake Fluid" (MGBF).

NOTICE

Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch. Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

Brakes Brake Fluid

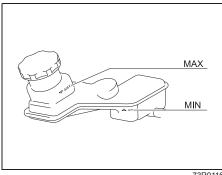

73R0116

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines.

NOTICE

- · If your brake fluid level is near "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case. ask a Maruti Suzuki authorised workshop to inspect the brake system.
- · Brake fluid can damage painted surfaces. Use caution when refilling the reservoir.

A WARNING

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

- If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument panel will come on (the engine must be running with the parking brake fully disengaged).
 Should the light come on, immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.
- A rapid fluid loss indicates a leakage in the brake system which should be inspected by a Maruti Suzuki authorised workshop immediately.
- Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or DOT3 brake fluid. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

(Continued)

WARNING

(Continued)


 Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

NOTE:

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear
- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.
- Replace your brake fluid according to the maintenance schedule in your Owner's Manual

Brake Pedal

Check if the brake pedal stops at the regular height without "spongy" feeling when you depress it. If not, have the brake system inspected by a Maruti Suzuki authorised workshop. If you doubt the brake pedal for the regular height, check it as follows:

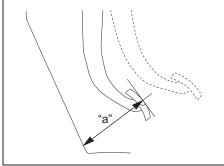

54G108

Pedal to floor carpet minimum distance "a":


51 mm (2.0 in.) (petrol engine model)

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorised workshop.

NOTE:

When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.

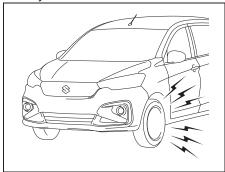

60G104S

A WARNING

If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.


If you hear this noise, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop. Continued driving with this condition can cause an accident.

A CAUTION

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels.)
- Excessive pedal travel
- Brake dragging
- Excessive noise

Parking Brake

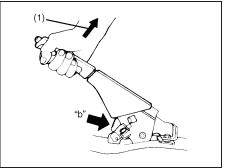


54G109

Ratchet tooth specification "b": 4th – 9th Lever pull force (1): 200 N (20 kg, 45 lbs)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorised workshop.

Steering Wheel

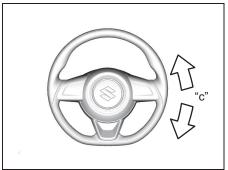


73R0117

Steering wheel play "c": 0 - 30 mm (0.0 - 1.2 in.)

Check the play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is outside the specification or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorised workshop.

Tires

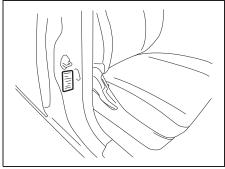

73R0118

The front and rear tire pressure specifications for your vehicle are listed in the tire information label. Both front and rear tires should have the specified tire pressure.

Tire Inspection

Inspect your vehicle's tires at least once a month or before long trip by performing the following checks:


 Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- Never underinflate or over-inflate the tires.

Underinflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim.

Overinflation can cause the tire to burst, resulting in personal injury. Overinflation can also cause unusual handling characteristics which may result in an accident.

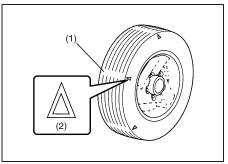

- (1) Tread wear indicator
- (2) Indicator location mark
- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
- Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by a Maruti Suzuki authorised workshop.

A CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Have tires and wheel alignment checked periodically by a Maruti Suzuki authorised workshop.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.

WARNING


- Your MARUTI SUZUKI vehicle is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.
- Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.

NOTICE

Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorised workshop before purchasing replacement tires that differ in size from the original tires.


Tire Rotation

5-tire rotation

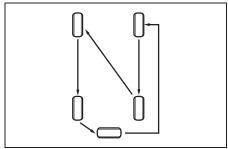

80JK040

4-tire rotation

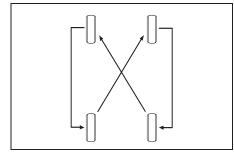

54G114

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated every 10000 km. After rotation, adjust front and rear tire pressures to the specification listed in your vehicle's Tire Information Label.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at Maruti Suzuki authorised workshop.

Wheel Alignment

In case of abnormal tire wear or pulling towards one side, have the wheel aligned at Maruti Suzuki authorised workshop.

Tubeless Tires (If equipped)

The vehicle is equipped with Tubeless Tires. In tubeless tire, a thin layer of butyl rubber is used for lining the inside of the tubeless tire. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tire bead and wheel rim. Tubeless tires are having advantage of slow air loss and preventing sudden deflation while driving.

Care and maintenance tips for tubeless tires

- Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tire damage.
- In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tire has run at low pressure, it must be inspected for any defect.
- Whenever new tire is fitted, replace the valve.

- If continuous high speed driving is required, increase pressure of tires by 5 psi over recommended inflation pressure.
- 6) Never run the tire beyond TWI (Tread wear indicator). The tire is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tire marked by a triangular symbol (TWI).
- 7) Always prefer tubeless tire mounting machine. In case of manual mounting tire/ wheel rim damage may occur.
- 8) In case of any problem, please get in touch with a Maruti Suzuki authorised workshop.


Lead-acid Battery

A WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the lead-acid battery or an explosion may occur. Never smoke when working in the vicinity of the lead-acid battery.
- When checking or servicing the lead-acid battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the leadacid battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or lead-acid battery, follow the jump starting instructions in "EMERGENCY SERVICE" section of this manual if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from lead-acid battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

NOTICE

If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "SPECIFICA-TIONS" section for details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult a Maruti Suzuki authorized workshop.

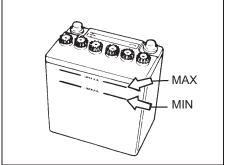

54G118

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery fluid must be kept between the "MAX" and the "MIN" level lines at all times. You should periodi-

cally check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge

WARNING

If the battery is used with battery level being less than the lower level line "MIN", it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN".


NOTICE

If the battery liquid is added more than the upper level line "MAX", liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid overspills, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX".

NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" and lower level "MIN". add distilled water till it reaches the upper level line "MAX".

Replacement of the battery

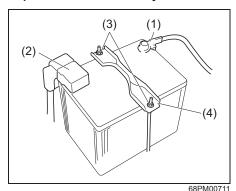

To remove the battery:

- 1) Disconnect the negative cable (I).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).
- 4) Remove the battery.

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:


- · When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated.
 - These functions are required to be reset after the battery is reconnected.
- Do not disconnect the battery terminals for at least one minute after the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to "LOCK" (OFF).

WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injured.

NOTICE

Do not use regular battery in ISG Vehicle. Use only Exide Conservo N55 battery, else it may deteriorate Smart Hybrid performance.

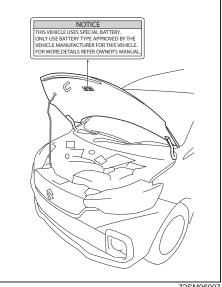


72SM06007

You may find this label on the inside of hood.

NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "OFF" or changing the ignition mode to LOCK (OFF)

(Battery label)

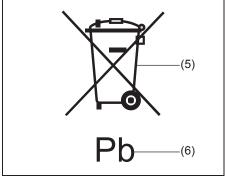

51KM042

(5) Crossed-out wheeled bin symbol(6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the

battery contains more than 0.004% lead. By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult an Maruti Suzuki authorised workshop.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the lead-acid battery.

Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses


These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller (I) provided in the relay box cover.


NOTE:

- "Blank" indicates that fuse is not applicable in the variant, even though name of fuse might be available on cover of fuse box of your vehicle.
- Some fuse may not be applicable to your vehicle according to the variant of vehicle, even though it is not mentioned as blank

Relay box cover

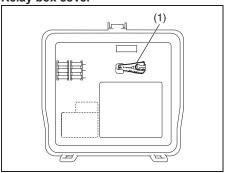


73R0204

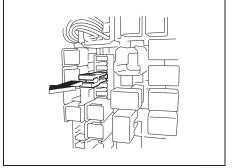


63J095

Fuses in Engine Compartment

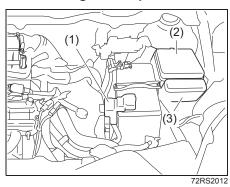


- (1) Main fuse box
- (2) Relay box(3) Sub relay box (if equipped)

Main fuse box

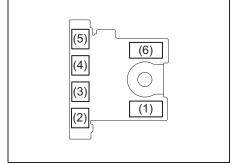


72RH4017

Relay box

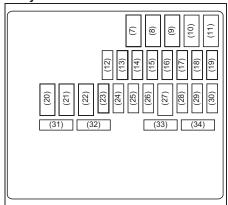

72R0115

 Sub relay box (if equipped)



72RH4018


MAIN FUSE / PRIMARY FUSE			
(I)	120 A	FLI (If equipped)	
(2)	100 A	FL2	
(3)	80 A	FL3	

		I		
(4)	100 A	FL4		
(5)	50 A	FL5		
(6)	200 A	FL6		
(7)	30 A	Starting motor		
(8)	40 A	Blower fan		
(9)	_	Blank		
(10)	40 A	ABS motor		
(11)	40 A	Ignition switch		
(12)	30 A	Back up		
(13)	_	Blank		
(14)	20 A	Front fog light		
(15)	1	Blank		
(16)	25 A	ABS SOL		
(17)	_	Blank		
(18)	_	Blank		
(19)	25A	Headlight HI		
(20)	30 A	Radiator fan		
(21)		Blank		
(22)	_	Blank		
(23)	7.5 A	CNG valve (If equipped)		
(24)	15 A	Headlight (Left)		
(25)	15 A	Headlight (Right)		
(26)		Blank		

	(27)	50 A	Ignition switch -2	
	(28)	15 A	Transmission (GAS)	
	(29)	15 A	FI (GAS)	
	(30)	10 A	Air compressor	
ſ	(31)	15 A	Headlight HI (Left)	
ſ	(32)	15 A	Headlight HI (Right)	
	(33)	5 A	Starting Signal	
ſ	(34)	7	CNG (If equipped)	
L	(0.)	7.5 A	CNG (ii equipped)	
ľ	(35)	7.5 A –	Blank	
-	` ′	7.5 A -		
	(35)	7.5 A - - 15 A	Blank	
	(35)	-	Blank Blank	

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a MARUTI SUZUKI genuine replacement parts or equivalent for individual fuses.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover and in the relay box.

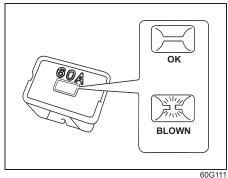

A WARNING

If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorised workshop. Always use a MARUTI SUZUKI genuine replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.


NOTE:

Make sure that the fuse box always carries spare fuses.

Fuses under Dashboard



73R0121

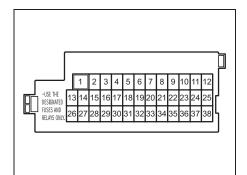


80P0185

PRIMARY FUSE		
(1)	30 A	Power window
(2)	10 A	Meter
(3)	15 A	Ignition coil
(4)	5 A	Ignition-1 signal 2
(5)	20 A	Shift
(6)	20 A	S/R
(7)	_	Blank
(8)	20 A	Door lock
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	5 A	A-STOP

(12)	-	Blank	
(13)	5 A	ABS control module	
(14)	15 A	Rear air conditioner	
(15)	5 A	Ignition-1 signal 3	
(16)	10 A	Dome light-2	
(17)	5 A	Dome light	
(18)	15 A	Radio	
(19)	5 A	CONT	
(20)	5 A	Key2	
(21)	20 A	Power window timer	
(22)	5 A	Key	
(23)	15 A	Horn	
(24)	5 A	Tail light (Left)	
(25)	10 A	Tail light	
(26)	10 A	Airbag	
(27)	10 A	Ignition-1 signal	
(28)	10 A	Back up light	
(29)	-	Blank	
(30)	20 A	Rear defogger	
(31)	10 A	Heated Mirror	
(32)	15 A	ACC2	
(33)	5 A	ACC	

(34)	10 A	Wiper	
(35)	5 A	Ignition-2 signal	
(36)	15 A	Washer	
(37)	25 A	Front wiper	
(38)	10 A	Stop light	

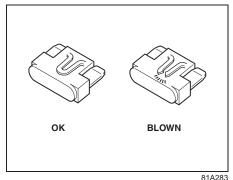

WARNING

Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

NOTE:

According to the vehicle specifications, fuse setting may be different from the specifications which are shown in the above tables.

Headlight Aiming

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

Bulb Replacement

A CAUTION

- · Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

NOTICE

- Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your Maruti Suzuki authorised workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in SPECIFICATIONS.

NOTE:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights. The above-mentioned phenomena are not vehicle malfunction. However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have your vehicle inspected by a Maruti Suzuki authorised workshop.

Non-disassembled type lights


Since the lights shown below are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.

If you need to replace the assembly, ask your Maruti Suzuki authorised workshop.

- Tail/brake light
- Side turn signal light/hazard warning light on outside rearview mirrors
- High mount stop light

Headlight

Low beam

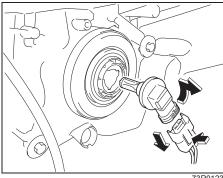


73R0123

Open the engine hood while the engine is stopped.

Disconnect the coupler with pushing the lock release. Turn the bulb holder counterclockwise and remove it.

High beam

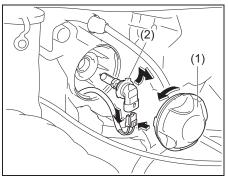


73R0134

Open the engine hood while the engine is stopped.


Turn the cover (1) counterclockwise and remove it.

Turn the bulb (2) holder counterclockwise and remove it. Disconnect the coupler with pushing the lock release.


Front turn signal light Front position light

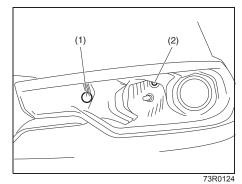

- (1) Front turn signal light
- (2) Front position light

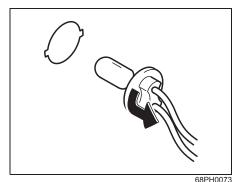

 Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light or the front position light from the light housing, turn the holder counterclockwise and pull it out.

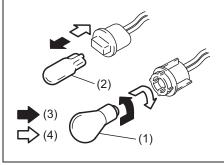

68PM00721

- (3) Removal
- (4) Installation
- To remove the bulb of the front turn signal light (1) from the bulb holder, push in the bulb and turn it counterclockwise.
 To install a new bulb, push it in and turn it clockwise.

To remove and install the bulb of the front position light (2), simply pull out or push in the bulb.

NOTE:

For turn signal / position light, it is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for


bulb replacement since special procedures are required.

Side Turn Signal Light

Outside rearview mirror type


LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

Fender type

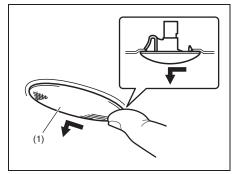

76MH0A006

1) Remove the light housing (1) by sliding to left with your finger.

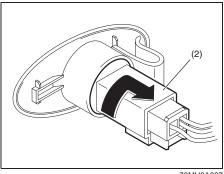


76MH0A007

2) Turn the bulb holder (2) clockwise and pull it out from the light housing.


Front fog light (if equipped)

 Start the engine. Turn the steering wheel to the opposite side of the fog light to be replaced to replace the bulb easily. Then turn off the engine.

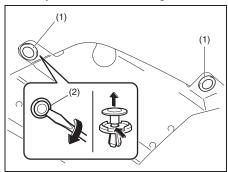

73R0125

 Insert a flat-bladed screwdriver into the hole (2) and remove the clips (1) by twist the driver as shown in the illustration.

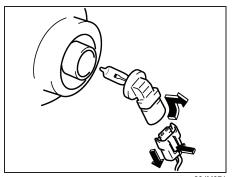


80JM071

 Open the fender cover. Disconnect the coupler with pushing the lock release. Turn the bulb holder counterclockwise and remove it

Rear combination light (tail, stop, turn signal, etc.)

For LED tail / brake light, it is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

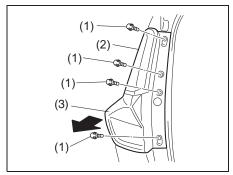


73R0186

With the tailgate opened, remove the bolts (1) and tail light (2), and then pull the rear combination light (3) firmly to the rearward.


NOTE:

When it is difficult to remove the rear combination lamp from the body at a low temperature (10 deg. C or less), pour water between the body and the rear combination lamp to make the removal smooth.

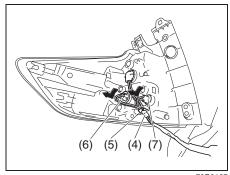


73R0187

- 1) Remove the wire (4) from a clamp (5).
- To remove the bulb holder of the rear turn signal light (6) or the reversing light (7) from the light housing, turn the holder counterclockwise and pull it out.

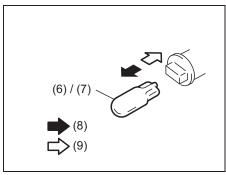


52RS70050

- (8) Removal
- (9) Installation
- 3) To remove and install the bulb of the rear turn signal light (6) or the reversing light (7), simply pull out or push in the bulb.

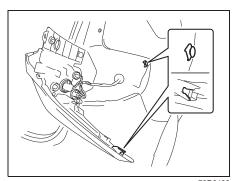


73R0188

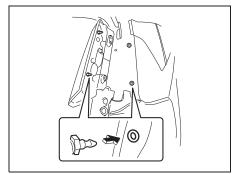

73R0189


NOTE: When reinstalling the light housing, check that the clips are properly attached.

License plate light

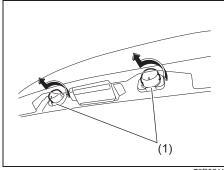

73R0211

1) Remove the cover (1) by turning it counterclockwise.

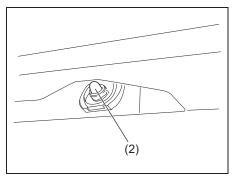


73R0192

2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.


High-mount stop light LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

Interior Light Front (Type A)

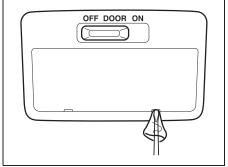


73R0193

Front (Type B)

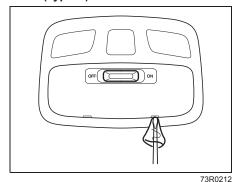


Rear

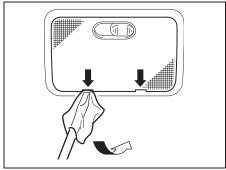

67LH084

Remove the lens by using a flat-bladed screwdriver covered with a soft cloth as shown. To install it, simply push it back in. The bulb can be removed by simply pulling it out. When replacing the bulb, make sure that the contact springs are holding the bulb securely.

Wiper Blades

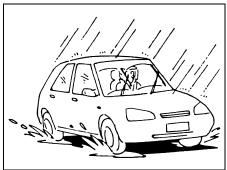

54G129

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.


NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a Maruti Suzuki authorised workshop for proper replacement method.

For windshield wipers:

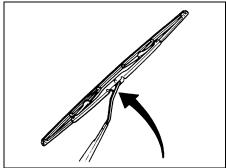


70G119


 Hold the wiper arm away from the window.


NOTE:


When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first. Otherwise, the wiper arms may interfere with each other.

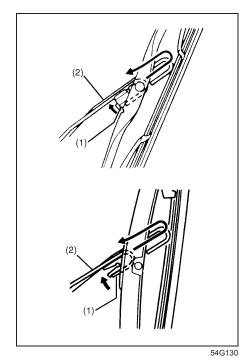



- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

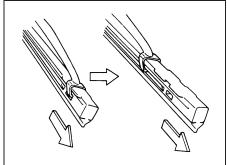

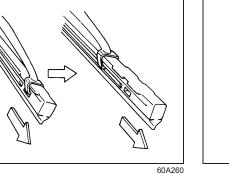

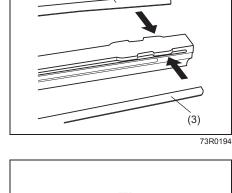

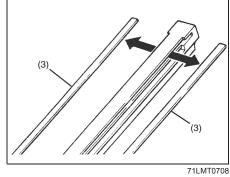


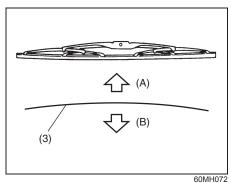

- (3) Retainer
- 4) If the new blade is provided without the two metal retainers (3), move them from the old blade to the new one.
- (A) Up (B) Down

NOTE:

When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustrations.

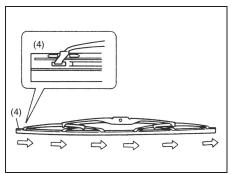


71LMT0707

(4) Locked end


- Install the new blade in the reverse order of removal, with the locked end (4) positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

For rear wipers:

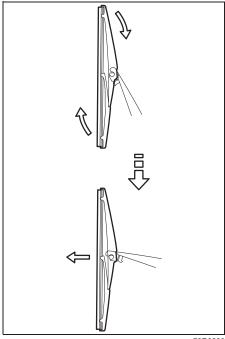

73R0200


- Hold the wiper arm away from the window.
- 2) Remove the wiper frame from the wiper arm as shown.
- 3) Slide the blade out as shown.

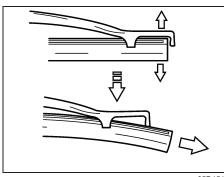

65D151

NOTE:


Do not flex the wiper blade frame end more than necessary. If you do, it can break off.

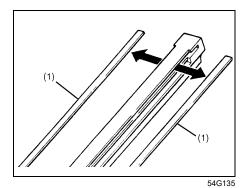

(1) Retainer

- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.
- 5) Install the new blade in the reverse order of removal. Make sure the blade is properly retained by all the hooks.
- 6) Reinstall wiper frame to arm in the reverse order of removal.

Windshield Washer Fluid

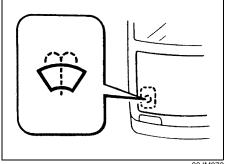

80.IM078

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

WARNING

Do not use radiator antifreeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.

NOTICE


- · Damage may result if the washer motor is operated with no fluid in the washer tank.
- Avoid use of hard water to prevent building of lime scale on the vehicle.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Air conditioner filter replacement


Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

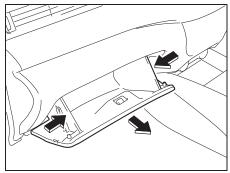

73R0201

1) To approach the air conditioner filter, remove the glove box by pressing both


sides of the glove box inward and pulling it out.

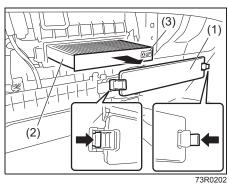

2) Remove the cover (1) and pull out the air conditioner filter (2).

NOTE:

When you install a new filter, check that the UP mark (3) faces upward.

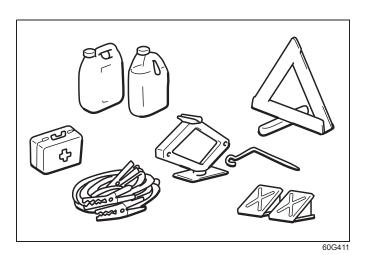


EMERGENCY SERVICE

Tyre Changing Tool	7-1
Jacking Instructions	
Jump-Starting Instructions	
Towing your vehicle	
Engine trouble: Starter does not operate	
Engine trouble: Does not start	7-10
Engine trouble: Overheating	7-10
Warning Triangle	7-11

EMERGENCY SERVICE


Tyre Changing Tool

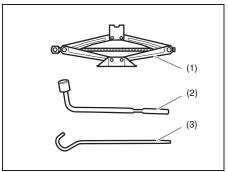


61MM0B100

- (1) Jack
- (2) Wheel wrench
- (3) Jack handle

The tyre changing tools are stowed in the side of the luggage compartment. Remove the cover to access the tools.

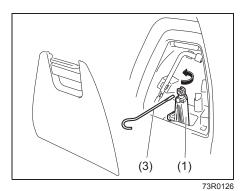


To remove the jack (1), turn its shaft counterclockwise by using jack handle (3) and pull the jack out of the storage bracket.

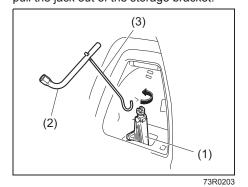


NOTE:

If you are difficult to use the jack handle (3), use jack handle and wheel wrench (2) as shown in the illustration.

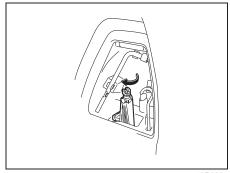

73R0205

To stow the jack, place it in the storage bracket and turn the shaft clockwise with hand.

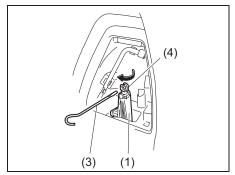

73R0206

After temporarily holding the jack (1) until it contacts the storage bracket, turn the shaft (4) approximately 90° to 180° by using jack handle (3) to securely hold the jack in place.

A WARNING


After using the tyre changing tools, stow them securely or they can cause injury if an accident occurs.

A CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

The spare tyre is stowed under the rear floor.

To remove the spare tyre:

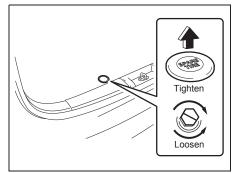


73R0127

 Remove the cap and use a wheel wrench to loosen the hook bolt of the spare tyre holder. Then, rotate using the end of the jack handle.

NOTICE

Loose the spare tyre holder hook bolt until you can remove the hook by yourself. If the bolt is loosen too much, the hook might off and the spare tyre might drop off to the ground.

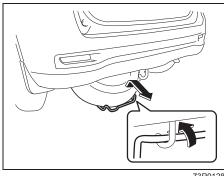

73R0128

- 2) Unhook the spare tyre holder and lower it slowly.
- 3) Remove the tyre.

To install the spare tyre:

- Install the spare tyre facing up the outside of the wheel in the reverse order of removal.
- 2) Tighten the spare tyre holder hook bolt securely.

WARNING

Do not drive your vehicle with the loose spare tyre holder hook bolt, otherwise it may come loose or the spare tyre may drop off, which can result in an accident.

NOTICE


Tighten the spare tyre holder hook bolt securely. However, do not overtighten the bolt, it may be warped or broken.

Tightening torque for the spare tyre holder hook bolt 30 Nm (3.0 kg-m, 22.1 lb-ft)

NOTICE

Make sure that the spare tire is fixed securely. Loosely fixed tire may cause noise during driving. However, do not overtighten the bolt, it may be warped or broken.

Jacking Instructions

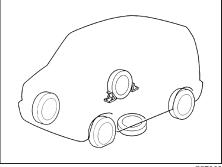


75F062

- 1) Place the vehicle on level, hard ground.
- Set the parking brake firmly and shift into "P" (Park) if your vehicle has an automatic transmission, or shift into "R" (Reverse) if your vehicle has a manual transmission.


WARNING

- Shift into "P" (Park) for an automatic transmission, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.


- 3) Turn on the hazard warning switch if your vehicle is near traffic.
- Block the front and rear of the wheel diagonally opposite of the wheel being lifted
- 5) Place the spare tyre near the wheel being lifted as shown in the illustration in case the jack slips.

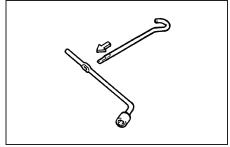

54G253

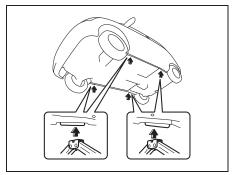

73R0190

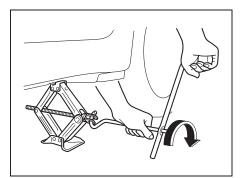

73R0191

6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body. Continue to raise the jack slowly and smoothly until the tyre clears the ground. Do not raise the vehicle more than necessary.

WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed.
 - Especially, do not raise the vehicle with a jack at a part of the torsion beam which is located under the vehicle body, between rear wheels.
- Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the flange. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- Do not use wooden blocks or similar objects as a jack underlay.
- Never get under the vehicle when it is supported by the jack. Never place your hands and feet under the raised vehicle when it is supported by a jack.

(Continued)

WARNING


(Continued)

 Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

Raising vehicle with garage jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

EMERGENCY SERVICE

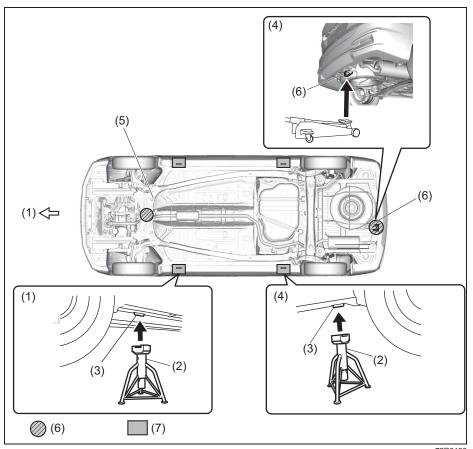

- (1) Front
- (2) Jack stand
- (3) Jacking point for onboard jack
- (4) Rear
- (5) Front suspension frame
- (6) Jacking point for garage jack (7) Application point for two-column lift and jack stand

NOTICE

- Never apply a garage jack to the exhaust pipe or engine undercover and rear torsion beam.
- · When you apply a garage jack to the rear jacking point, it may interfere with the rear bumper depending on the shape of the garage jack.

NOTE:

For more details, please contact a Maruti Suzuki authorised workshop.

72R0130

Changing Wheels

▲ WARNING

 Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorised workshop.

To change a wheel, use the following procedure:

- 1) Remove the jack, tools and spare wheel from the vehicle.
- 2) Loosen, but do not remove the wheel nuts.
- 3) Jack up the vehicle (follow the jacking instructions in this section).


A WARNING

- Shift into "P" (Park) for an automatic transmission, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.


A CAUTION

Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven.

4) Remove the wheel nuts and wheel.

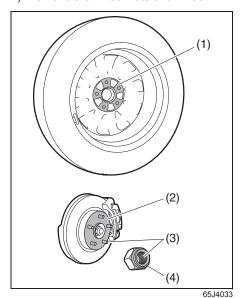

- 5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

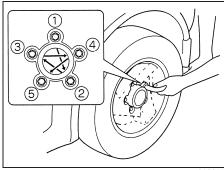

81A057


Tightening torque for wheel nuts 100 Nm (10.2 kg-m, 74.0 lb-ft)

 Lower the jack and fully tighten the nuts with a wheel wrench in numerical order as shown in the illustration.

WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorised workshop.

Full Wheel Cover (if equipped)

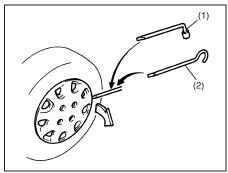


60G309

(1) or (2) Flat end tool

Your vehicle includes two tools, a lug wrench and a jack crank, one of which has a flat end.

 Use the tool with the flat end to remove the full wheel cover, as shown in the illustration.



60MH074

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

After Changing Wheels

Stow the tyre changing tools (jack, jack handle and lug wrench) in place. Also, stow the flat tyre in the spare tyre stowed position. Refer to "Tyre Changing Tool" in this section.

NOTICE

Repair or replace the flat tyre immediately. If the flat tyre is placed in the spare tyre stowed position for long time, it can cause vehicle shakiness, noise, or scratches.

Jump-Starting Instructions

▲ WARNING

- · Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Lead-acid batteries in this condition may explode.
- · When making jump lead connections, be certain that your hands and the jump leads remain clear from pulleys, belts or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the lead-acid battery or an explosion may occur. Never smoke when working near the lead-acid battery.
- · If the booster lead-acid battery you use for jump-starting is installed in another vehicle, make sure the two vehicles are not touching each other.
- If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorised workshop.

(Continued)

WARNING

(Continued)

 To avoid harm to yourself or damage to your vehicle or lead-acid battery, follow the jump-starting instructions below.

If you are in doubt, call for qualified road service.


NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

Jump-Starting

- Use only a 12-volt battery to jump-start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

(For K15C engine model)

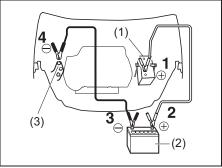

54P000804

- 3) Connect jump leads as follows:
 - Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
 - Connect the other end to the positive

 (+) terminal of the booster battery
 (2).
 - Connect one end of the second jump lead to the negative (–) terminal of the booster battery (2).
 - 4. Make the final connection to an unpainted, heavy metal part (i.e.engine mount bolt (3)) of the engine of the vehicle with the discharged battery (1).

WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged lead-acid battery, or an explosion may occur.

A CAUTION

Connect the jump lead to the engine mount bolt securely. If the jump lead disconnects from the engine mount bolt because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged lead-acid battery.
- Remove the jump leads in the exact reverse order in which you connected them

Towing your vehicle

If you need to have your vehicle towed, contact a professional service. Maruti Suzuki authorised workshop can provide you with detailed towing instructions.

NOTICE

Observe the following instructions when towing your vehicle.

- To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.
- Using the frame hook, tow your vehicle on paved roads for short distances at low speed.

2-Wheel Drive (2WD) Automatic Transmission

Automatic transmission vehicles may be towed using either of the following methods.

- From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and a dolly under the front wheels.

NOTICE

Towing your vehicle with the front wheels on the ground can result in damage to the automatic transmission.

2-Wheel Drive (2WD) Manual Transmission

Manual transmission vehicles may be towed using either of the following methods

- From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, make sure that transmission is in neutral, the steering wheel is unlocked (vehicle without keyless push start system the ignition key should be in "ACC" position) (vehicle with keyless push start system the ignition mode is "ACC"), and the steering wheel is secured with a clamping device designed for towing service.

NOTICE

The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

Engine trouble: Starter does not operate

- Try turning the ignition switch to "START" position or try pressing the engine switch to change the ignition mode to "START" with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the lead-acid battery terminal contact is poor. Recharge the lead-acid battery or correct lead-acid battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine trouble: Does not start

Make sure that your vehicle has enough fuel and lead-acid battery.

If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.

Refer to "Starting / Stopping Engine (Vehicle without Keyless Push Start System)" or "Starting / Stopping Engine (Vehicle with Keyless Push Start System)" in operating your vehicle section.

If the engine still does not start have your vehicle inspected at a Maruti Suzuki authorised workshop.

 For petrol engine model, do not operate the starter motor for more than 12 seconds.

(Vehicle with Keyless Push Start System)

NOTE:

If the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or if there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.

Engine trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the engine coolant temperature gauge indicates overheating during driving:

- 1) Turn off the air conditioner, if equipped.
- 2) Take the vehicle to a safe place and park.
- Run the engine at a normal idle speed for a few minutes until the indicator is within the normal, acceptable temperature range between "H" and "C".


WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

EMERGENCY SERVICE

If the temperature indication does not come down to within the normal, acceptable range:

- Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump and radiator hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
- If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in "INSPECTION AND MAIN-TENANCE" section.)

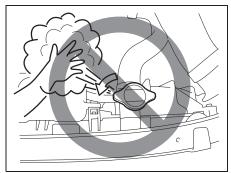


79J007

▲ WARNING


- It is hazardous to remove the radiator cap (or degassing tank cap) when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.

 Warning Triangle




MH007001

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

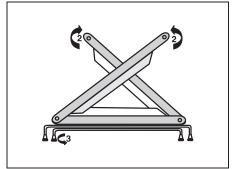


MHO-07-014

- Remove the warning triangle carefully from the cover as shown by arrow 1.
- Open both the reflector arms as shown by arrow and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow
 Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.
- Place the warning triangle below 3rd row seat.

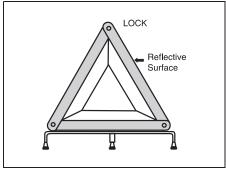

MHO-07-015

APPEARANCE CARE

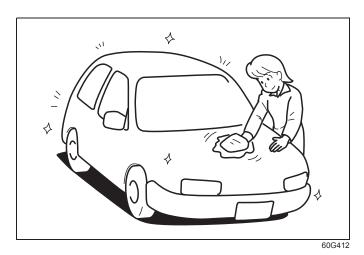

APPEARANCE CARE

Corrosion Prevention	 8-
Vehicle Cleaning	8-2

Я

Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information about Corrosion

Common causes of corrosion

- Accumulation of road salt, dirt, moisture, or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.
- 3) Any or all of the below mentioned points:
- · Continuous exposure to sunlight.
- Hard water & Sea water coming in contact with vehicle.
- Foot rubbing (skirting).

Environmental conditions which accelerate corrosion

- Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
- High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Vehicle Cleaning" section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Be sure that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area

Park your vehicle to save it from continuous exposure to direct sunlight. Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter, exhaust pipes, etc. A fire could be started if the undercoating substance becomes overheated.

Vehicle Cleaning



76G044S

WARNING

When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, gasoline and benzene. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning Interior

Leather upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- In order to keep leather upholstery looking good, it should be cleaned at least twice a year.
- If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.
- When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink
- As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.

Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery (Except front passenger seat)

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

A CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

Fabric upholstery (For front passenger seat)

Do not use liquid for cleaning as it may penetrate the fabric and damage the seat sensor.

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.


Instrument panel and console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

WARNING

Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components.

Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/ or lead to non-functioning of the part or may cause fire.

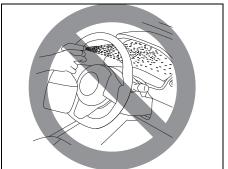

81RM08005

NOTICE

- Liquid such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth.
- Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.

Cleaning Exterior

NOTICE

It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Caring for Aluminum Wheels

NOTE:

 Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaner will cause permanent spots, discoloration and cracks on finished surfaces and damage to center caps. Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.

Washing

WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to make sure they have maintained their normal effectiveness.

APPEARANCE CARE

Washing by hand



60B2129


When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:

 Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.

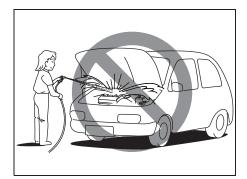

81RM08006

2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.

 Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
 - 1. Clean all damaged spots and allow them to dry.
 - Stir the paint and touch up the damaged spots lightly using a small brush.
 - 3. Allow the paint to dry completely.

Washing by an automatic car wash

NOTICE

If you use an automatic car wash, make sure that your vehicle's body parts, such as spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.

Washing by a high-pressure cleaner

NOTICE

If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.

- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
- Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.

Waxing




60B211S

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

SPECIFICATIONS

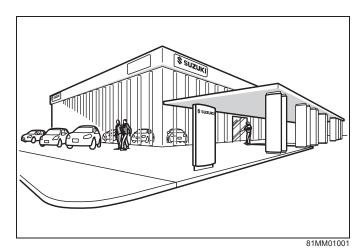


SPECIFICATIONS


Vehicle Identification	9-1
FASTag (if equipped)	9-1
High security Registration Plate (HSRP)	9-2
Fuel Recommendation	9-3
SPECIFICATIONS	9-5

9

Vehicle Identification

Chassis Serial Number

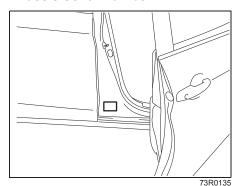


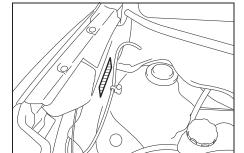

73R0136

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist a Maruti Suzuki authorised workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorised workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.


Engine Serial Number

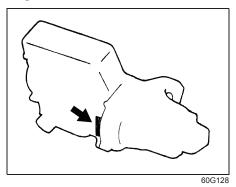

The engine serial number is stamped on the cylinder block as shown in the illustration.

FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India. In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorised workshop.

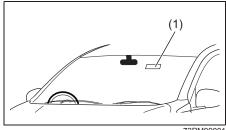

72RM09001

As seen from inside of the vehicle



64MM01002

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle



64MM01003

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- · Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- · Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.


High Security Registration Plate (HSRP)

As per Ministry of Road Transport and Highways, every new vehicle must have HŠRP.

HSRP contains:


- · Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- · Third license plate on front windshield.

Third License Plate

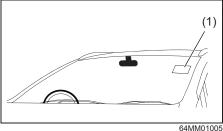

(1) Third license plate

Third license plate - As seen from outside of the vehicle

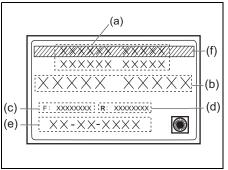

72RM09002

- (a) HSRP issuing authority name
- (a) Vehicle registration number
- (a) Unique laser number Front plate
- (a) Unique laser number Rear plate
- (a) Date of 1st registration (in DD-MM-YYYY format)
- (a) Green strip (BS6 vehicle)

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:

 Any attempt to remove the third license plate from the windscreen will result in permanent damage to the label.

- Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.
- Use of any sharp objects on the label can damage the label.
- In the event of any replacement of the third license plate may please contact the approved authority.

Third license plate - As seen from inside of the vehicle

Notice

It is unlawful for any person to duplicate, alter, change, deface, destroy, multilate, remove, tear down this Third Registration Plate Sticker, except if done by authority of law. Do not wipe with harsh abrasive materials, detergents, etc. as it may deface or damage this Sticker.

64MM01009

NOTE:

The picture shown is for indicative purpose only.

NOTE:

Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.

Fuel Recommendation Petrol Engine

To avoid damaging catalytic converter, you must use unleaded petrol with an octane number (RON) of 91 or higher.

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol, also known as gasohol, are commercially available in the country and can vary with location. Gasoline Ethanol blend up to E20 can be used as fuel for this vehicle.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

A CAUTION

Use of Spurious, low quality, adulterated fuel can cause damage to the engine & engine auxilliaries, affect functioning of engine and degrade engine performance including but not limited to seizure.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

SPECIFICATIONS

SPECIFICATIONS

NOTE:

Specifications are subject to change without notice. M/T: Manual Transmission

M/T: Manual Transmission
A/T: Automatic Transmission

ITEM: Dimensions#	UNIT: mm		
Overall length		4395	
Overall width	verall width 1735		
Overall height	verall height 1690		
Wheelbase		2740	
Track	Front	1510	
	Rear	1520	
Ground clearance		180	

ITEM: Mass (weight)*	UNIT: kg		K15C engine model
Curb mass (weight)	5M/T		1150-1180
	A/T		1195-1205
Gross vehicle mass (weight) rating	5M/T		1760
	A/T		1785
Permissible maximum Axle Weight	5M/T	Front	850
	SIVI/ I	Rear	965
	A/T	Front	850
	A/I	Rear	965

^{# -} Details mentioned are related to all vehicle variants of Petrol and CNG.

^{* -} Details mentioned are related to Petrol engine variants only. For CNG, may please refer to the CNG supplementary manual.

ITEM: Engine	
Туре	K15C
Number of cylinders	4
Bore	74.0 mm
Stroke	85.0 mm
Piston displacement	1462 cm ³ (1462 cc)
Compression ratio	12.0 : 1

ITEM: Electrical			
Standard spark plug NGK ILZKR6Q11		NGK ILZKR6Q11	
Lead-acid battery Petrol		12V ISS N-55 ^{*1}	
CNG		12V 34B19L	
Lithium-ion battery		Maintenance free ^{*2}	
Fuses		See "INSPECTION AND MAINTENANCE" section.	

^{*1} When battery replacement is necessary, use only N55 (Exide Conservo) battery. Else it may deteriorate performance of Smart Hybrid

system.
*2 If the lithium-ion battery is completely discharged, the battery cannot be recharged. When replacing or disposing the lithium-ion battery, consult your Maruti Suzuki authorised workshop.

ITEM: Lights		WATTAGE	BULB No.	
Headlight	High beam	12V 60W/65W	HB3	
	Low beam	12V 55W	H11	
Turn signal light	Front	12V 21W	WY21W	
	Rear	12V 21W	PY21W	
Side turn signal light (on fend	er)	12V 5W	WY5W	
Side turn signal light (on outside rearview mirror)*1		LED		
Position light		12V 5W	W5W	
Tail/brake light*1		LED	_	
License plate light		12V 5W	W5W	
Reversing light		12V 16W	W16W	
Interior light		12V 10W	_	
Front fog light (if equipped)		12V 19W	H16	
High mount stop light*1		LE	D	

ITEM: Wheels and Tyres	
Tyre size- front and rear*3	185/65R15 88H ^{*2}
Rim size	15X5 1/2J
Tyre pressures	For the specified tyre pressure, see the Tyre Information Label located on the driver's door lock pillar.

- If you need to replace the following bulbs indicated in the above table, consult your Maruti Suzuki authorised workshop.
- *1 Śince the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.
- *2 If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed symbol.
- *3 The spare wheel provided with alloy wheel variant is of steel wheel rim, hence follow the 4 tyre rotation only. (Refer: section Inspection and maintenance)
 - The provision of different spare wheel is as per government notification / regulation (MORTH notification vide GSR 625 (E)).

ITEM: Capacities (approx.)				
Coolant	K15C	M/T	See "INSPECTION AND MAINTENANCE" section.	4.5 L
(including reservoir tank)		A/T	See INSPECTION AND MAINTENANCE SECTION.	4.7 L
Fuel tank			See "Fuel" in this section.	45 L [#]
Engine oil	K15C	For India	Classification: API SN or SP ILSAC GF-6 Viscosity: SAE 0W-16	3.3 L
		Except for India	Classification: API SL, SM, SN, SP ILSAC GF-6 Viscosity: SAE 0W-16, 0W-20, 5W-30	(replacement with oil filter)
Transmission oil 5M/T		"MARUTI GENUINE GEAR OIL 75W"	2.6 L	
		A/T	"SUZUKI AT OIL AW-1"	5.8 L
Brake fluid / Clutch fluid		MARUTI GENUINE BRAKE FLUID (MGBF) or DOT 3.	Refill to the proper oil level according to the instructions in "INSPECTION AND MAINTENANCE" section.	

[#] The fuel tank capacity is slightly more than the recommended quantity of fuel that you can fill. The additional voluminous space is provided for safety and scientific reasons.

■ MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS

■ MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS
■ MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS

MARUTI AUTHORISED SERVICE STATIONS (MASSs) : 'A' CATEGORY MASSs (**MARKED)

Free & paid Service, Major repairs & Accidental repairs

'B' CATEGORY MASSS (* MARKED)
Free & paid Service & Major repairs
'C' CATEGORY MASSS (##MARKED)
Free & paid Service & Minor repairs
'D' CATEGORY MASSS (#MARKED)

Free Service & Minor repairs

NOTE:

Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit <u>www.marutisuzuki.com</u> or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH:- 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NO. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOTNO IID/15, ACTION AREA IID, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA

SERVICE NETWORK (AS ON 31.05.2023)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED PIOT NO-GEN 25 + 25 B/2,TTC INDUSTRIAL AREA,PAWANE VILLAGE,THANE BELAPUR ROAD,NAVI MUMBAI- 400705 PH NO-022 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 – 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 10th Floor, Block A, Gobal Infocity Park, No.40, Anna Nedunchalai, Kandanchavadi, Perungudi, Chennai, Tamil Nadu – 600096 PH 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING,VITTAL MALLYA ROAD,BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITD 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg,Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P.) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH

DETAILS OF AREA OFFICES		
Area Office Location	Area Office Address	
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47	
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact: 0755 6051555	
Calicut	Maruti Suzuki India Limited, Ground Floor, Aarpees Arcade, YMCA Cross Road, Opp. Indusind Bank, Kozhikode, Kerala -PIN 673001 Phone:- 0495-2723151	
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph 0422-2221091	
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447	
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343	
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764	
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph 0452-4200203	
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111	

SERVICE NETWORK (AS ON 31.05.2023)

DETAILS OF AREA OFFICES		
Area Office Location	Area Office Address	
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808	
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551	
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145	
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph 0771-4039643	
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal	
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009	
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366	
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001	
Vijayawada	Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2,Opposite Executive Club, Vijayawada, -530002,	
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299	

ANDAMAN AND NICOBAR ISLANDS ARAKU

DIGLIPUR

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (PU01-PU-01) MADHUPUR VILLAGE TEHSIL DIGI IPUR NORTH ANDAMAN - 744202 PH:271056.

PORTBLAIR

2. AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-01), GARACHRAMA, PORT BLAIR -744105

PH:251980.253586.211590.

AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-02), NAYAGEN, PORTBLAIR - 744101 PH:227104. 211682.

RANGAT

AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-FJ-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN. - 744201 PH:211546.

ANDHRA PRADESH

AMALAPURAM

S.B. MOTOR CORPORATION (BTS1-BTS-01). #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP, RR NAGAR, BANDARUI ANKA. AMALAPURAM, EAST GODAVARI (DIST) - 533201 PH:8374303303.

AMARAVATI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD. (CVB1-CVB-01), SURVEY NO. 29, TOWNSHIP-16. SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1. SUB-DIVISION-I 40. MAI KAPURAM LIMITS. MANDAL - THULLURU. AMARAVATI-CITY, DIST.-GUNTUR, ANDHRA PRADESH - 522237 PH:8374847777.

ANAKAPALLE

JAYABHERI AUTOMOTIVES PVT. LTD. (0N01-0N-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001 PH:7093575555

ANANTAPUR

SRI DURGA AUTOMOBILES PVT. LTD. (1B01-1B-01), 17/377-A.GOOTY ROAD, ANANTAPUR - 515001 PH:9100984249.

ANDHRA PRADESH. - 533406

PH:9885511911.

ANNAVARAM

VARUN MOTORS (SJH1-SJH-01), DO-NO: 5/116. SURVEY NO - 59., CHALAMAYYA NAGAR, RAILWAY STATION ROAD, NEAR SMP BAJAJ SHOWROOM ANNAVARAM, EAST GODAVARI DISTRICT,

VARUN MOTORS (SJG1-SJG-01), SURVEY NO 33-9/A. RAVULAGADDA VILLAGE.BESIDE GOVT COLLEGE.ARAKU.VISHAKAPATNAM.ANDHRAPR ADESH - 531151 PH:7799499931.

BHIMAVARAM

11. NOVELTY REDDY & REDDY MOTORS PVT LTD (7M01-7M-01), NEAR BYEPASS ROAD, UNDI ROAD BHIMAVARAM - 534202 PH:7799771177.

BOBBILI

VARUN MOTORS PVT, LTD, (CAM1-CAM-01), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE -MALLAMMAPETA. BESIDE GROWTH CENTRE. BOBBILI, DISTRICT - VIZIANAGARAM, ANDHRA PRADESH. - 535558 PH -9885280772

CHALLAPALLI

13. MITHRA AUTO AGENCIES PVT LTD (CSX1-CSX-01), D.NO.9-30, 9TH BLOCK, LAKSHMIPURAM LIMITS, RAMANAGARAM, CHALLAPALLI MANDALAM, DISTT, KRISHNA -521126 PH:8886063526

CHILKALURIPET

14. JAYALAKSHI (SFT1-SFT-01), M/S JAYALAKSHMI AUTO, SURVEY NO 457/C3, CHILKALURIPET, NADENLA MANDAL, GUNTUR, ANDHRA PRADESH - 522616 PH :9989144344

CHINTALAPUDI

REDDY AND REDDY MOTORS (BYQ1-BYQ-01). RS NO.698/2 MARUTI NAGAR COURT CENTRE. FI URU-CHINTAL APUDI HIGHWAY. CHINTALAPUDI MANDAL, ANDHRA PRADESH -534460 PH:9912341624 9948827555

CHIRALA

JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-NT-04), 9-1-92, CHURCH ROAD, CHIRALA, -523157 PH:7331151661.

CHITTOOR

BHARGAVI AUTO PVT, LTD, (A801-1C-03). 22-241/A,KATTAMANCHI TIRUPATI ROAD.CHITTOOR. - 517001 PH :8463955558

CHODAVARAM

VARUN MOTORS (SHT1-SH-01), SURVEY.NO: 108-2-A, 108-3-A & 108-4, GOVCHODAVARAM, DIST. VISAKHAPATNAM, - 531036 PH:#REF!.

CUDDAPAH

MSA MOTORS (C201-1D-03), K.T. BYE PASS ROAD.CUDDPPAH.ANDHRA PRADESH. - 516001 PH:7396685628.

ELURU

REDDY & REDDY MOTORS (1E01-1E-01), OLD NH-5 ROAD RESIDES C.R. REDDY WOMEN'S COLLEFE OLD NH-5,ELURU, - 534001 PH:9705311566.

GAJAPATINAGARAM

JAYABHERI AUTOMOTIVES (SNN1-SNN-01). SURVEY NO 50-14, D.NO 3-1/C, BONDAPALLI MANADALAM, GAJAPATHINAGARAM, ANDHRA PRADESH. - 535270 PH:9100818111.

GAMBHEERAM

JAYABHERI AUTOMOTIVES PVT. LTD. (BQQ1-GJF-02), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHERAM, ANANDPURAM, VISHAKAPATNAM, - 530052 PH:9642496789.

GUDIVADA

VARUN MOTORS PVT. LTD. (2603-CL-02), D NO. 1-621.AUTONAGER 1ST LANE.GUDIVADA -521301 PH:9885651383.

GUDUR

BHARGAVI AUTO PVT, LTD, (IS01-IS-01). SURVEY NO.1619/3A.GUDUR BYPASS, GUDUR RURAL GUDUR DISTT, NELLORE, A.P. - 524101 PH:9652984999

GUNTAKAL

SRI DURGA AUTOMOBILES PVT. LTD. (BJA1-BJA-01), SURVEY NO. 407, D. NO. 20/342-19, BELLARY ROAD, GUNTAKAL, DIST. -ANANTPUR, ANDHRA PRADESH, - 515801 PH:8142847353

GUNTUR

JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-G5-01), D-N-8-24-31, MANGALAGIRI ROAD GUNTUR - 522001 PH:7893117111/0863-2241000.

JAYALAKSHMI (G502-G5-05), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP -522203 PH:9848131133/9625255555.

JAYALAKSHMI AUTO (G502-G5-06), SURVEY NO 509. D.NO 25-11-50 TOWN, WARD NO 22. OPPOSITE ITC BUILDING, R AGRAHARAM NAGARAPALAM ROAD.GUNTUR. - 522004 PH:8374847777.

HANUMAN JUNCTION

29. SANTOSH MOTORS (SHB1-SHB-1), SY NO. 569/1 BESIDES NH5. VELURU VILLAGE. BAPULAPADU MANDAL, HANUMAN JUNCTION KRISHNA DISTRICT PIN 521105 - 521115 PH:9703633755.

HINDUPUR

SRI DURGA AUTOMOBILES PVT. LTD. (1B01-36-02), PLOT NO.83, NEAR RELIANCE PETROL BUNK, BYE PASS ROAD, HINDUPUR -PH:9849773030.

ICHAPURAM

31. JAYABHERI AUTOMOTIVES PVT. LTD. (GLL1-GLL-01), SURVEY NO. 105/3, 105/4 AND 229/7, ICHAPURAM, BALAKRISHNAPURAM PANCHAYAT.MUNIBHADRA VILLAGE.ANDHRA PRADESH - 532312 PH:9394006666.8142933666.

JAGGAIAHPETA

32. VARUN MOTORS PVT. LTD. (2603-PC-05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT - 521175 PH:9642437099.

JANGAREDDYGUDEM

33. REDDY & REDDY MOTORS (1E01-HQ-02), NEAR R&B GUEST HOUSE.ELURU ROAD, JANGARED DYGUDEM, - 534447 PH:9912563666.

KAIKALURU

34. SANTOSH AUTOMOTORS PVT. LTD. (CLW1-CLW-01), SY. NO. 127/7 &9, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL. DIST. KRISHNA - 521333 PH:7799787969

KAKINADA

35. S B MOTORS (W701-W7-01), D. NO. 52-10-36/3.NEAR AMAR GHATI CENTER.KARAPA ROAD, KAKINADA - 533001 PH:9885119888.

KANCHIKACHERLA

36. VARUN MOTORS PVT, LTD, (GJD1-GJD-01), SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERLA VILLAGE AND MANDAL, KRISHNA DIST., ANDHRA PRADESH, -521180 PH:9703906444.

KANDUKURU

37. JAYALAKSHMI AUTOMOTIVES PVT. LTD (BEY1-BEY-01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD. KANDUKURU MANDAL, DISTRICT -PRAKASHAM, ANDHRA PRADESH. - 523105 PH -9848131133

Dealer Workshop (AS ON 30.05.2023)

KANIGIRI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (SCC1-SCC-01), SURVEY NO 793, PLOT NO 11,12, KANIGIRI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523230 PH-9848131133, 9052457512.

KAVALI

BHARGAVI AUTO PVT. LTD. (A801-PF-05),
 KAVALI NELLORE, ANDHRA PRADESH - 524201
 PH 9248702567

KURNOOL

 MSA MOTORS (C201-C2-01), AUTO NAGAR, INDUSTRIAL ESTATE, NH-7, KURNOOL - 518004 PH: 9959513945.

MACHERLA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CEY1-CEY-01), D.NO. 343/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY. -522426

PH:9848131133.9705261801.

MACHII IPATNAM

 MITHRA AUTO AGENCIES PVT LTD (2604-0K-04), NARASIMHA NAGAR, MACHLIPATNAM, ANDHRA PRADESH - 521001 PH :8886063526

MADANAPALLI

 BHARGAVI AUTO PVT. LTD. (AAT1-AAT-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH :9959893434.

MADHURAWADA

 JAYABHERI AUTOMOTIVES PVT. LTD. (BQ01-BQ0-01), PLOT NO. 5, SUYEY NO. 4/P, KOMMADI ROAD, MADHURAWADA, VISHAKAPATNAM, ANDHRA PRADESH - 530048 PH :888669985.

MALKIPIURAM

 VARUN MOTORS (SEH1-SEH1-01), SURVEY NO 49/6A, MALKIPURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH -533250 PH :9154255226.

MANDAPETA

 S B MOTOR CORPORATION (BJC1-BJC-01), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT - EAST GOADAVARI, ANDHRA PRADESH. - 533308 PH :8886664090.

MARKHAPURAM

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFF1-CFF-01), D. NO. 4-515/12, SURVEY NO. 1167, OPP. INDUSTRIAL ESTATE, ONGOLE ROAD, MARKAPURAM, DISRT.-PRAKASAM, ANDHRA PRADESH - 523316 PH :9848131133, 7331151674.

MYLAVARAM

 VARUN MOTORS PVT. LTD. (GKL1-GKL-01), D NO. 2-176/2, MAIN ROAD, MYLAVARAM, KRISHNA DISTRICT, PIN-521230, ANDHRA PRADESH - 521230 PH 9581337222.

NAKKAPALLI

 VARUN MOTORS (SFR1-SFR-01), SURVEY NO 202/3, 203/4, PEDGUMMULURU GRAM PANCHAYAT, RAYAVARAM MANDAL, NAKKAPALLI, VISHAKAPATNAM, ANDHRA PRADESH - 531081

NANDIGAMA

PH:9885317344

 VARUN MOTORS PVT. LTD. (CUB1-CUB1-01), RE SURVEY NO. 601/1B, NH-9 ROAD, NANDIGAMA, DIST.-KRISHNA, ANDHRA PRADESH. - 521185 PH :9642225287.

NANDYAL

 MSA MOTORS (CKB1-CKB-01), SURVEY NO. 333, VUDUMALPURAM, MANDAL – NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT – KURNOOL. - 518501 PH. 7337292822.

NARASARAOPET

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-JT-03), NEAR RELIANCE PETROL PUMP BUNK, VINUKONDA ROAD, NARASAROAPET, GUNTUR. - \$22803 PH. 7680000502/9100791343.

NARSAPURAM

 NOVELTY REDDY & REDDY (SIU1-SIU-01), SY NO. 98/7, NARSAPURAM- CHINCHINDA BYPASS ROAD NARSAPURAM, PALAKOLLU MANDAL, WEST GODAVARI DISTRIC T.ANDHRA PRADESH - 534206 PH : 9703900011.

NARSIPATNAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (WT01-WT-01), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH:7702333513.

NELLORE

 BHARGAVI AUTO PVT. LTD. (A801-A8-01), D.NO.25/III97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :9248742225.

- BHARGAVI AUTO PVT. LTD. (A801-A8-04), A2, INDUSTRIAL ESTATE, A.K. NAGAR, NELLORE, -524004 PH: 9248727888.
- VISHNU CARS PVT. LTD. (A802-A8-01), FIELD NO. 628 /SURVEY NO. 877, 878/A/A AND 883/A/14, NELLORE BIT-II, BESIDES GSR GARDENS, BALAJI NAGAR, NH-16, NELLORE CITY. - 542002
 PH: 7337340778.

NUZIVIDU

 VARUN MOTORS PVT. LTD. (2603-CN-03), RS NO:880I2,MUNCIPAL,D NO:25-12,WRD NO:25,BLOCK NO:25,BESIDE S SQUIRE CONVENTION HANUMAN JUNCTION ROAD, NIZVID. ANDHRA PRADESH. - 521201 PH :9581337222.

ONGOLE

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (8Y01-8Y-02), THROVAGUNTA COMPANY CENTRE.NH-5, GUNTUR ROAD, ONGOLE, PRAKASAM DISTRICT. - 523003 PH 9701055955.

PALAKONDA

 VARUN MOTORS PVT. LTD. (CK01-CK0-01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440 PH. 9966877033. 9985317344.

PALASA

 JAYABHERI AUTOMOTIVES PVT. LTD. (BWH1-BWH-01), SURVEY NO. 63 OF VILLAGE – PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT – SRIKAKULAM, ANDHRA PRADESH. - 532221 PH :9849054442. 8790946464.

ΡΔΤΗΔΡΔΤΝΔΜ

VARUN MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), DIO 4-245, SURVEY NO 264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA PRADESH - 532213 PH :9885317344.

PENDURTHI

 VARUN MOTORS PVT. LTD. (BAP1-BAP-01), SURVEY NO. 107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKAPATNAM - 530047 PH:9160445699.

 VARUN MOTORS PVT LTD (BAP1-BAP-02), SURVEY NO 240/1,2 & 241, PENDURTHI, VIZAG -531173
 PH:9642403366.

PIDUGURALLA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (BFN1-BFN-01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT – GUNTUR, ANDHRA PRADESH. - 522413 PH :9848131133. 9100787088.

PITHAPURAM

 S B MOTORS (CTS1-CTS-01), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAVRI DIST., ANDHRA PRADESH. - 533 450
 PH :8886677759, 8886677754.

PONNUR

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFC1-CFC-01), PLOT NO. 4, D.NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124 PH 9849445639. 9121141913.

RAJAHMUNDRY

 S.B. MOTOR CORPORATION (C501-C5-01), OPP.FCI GOWDOWN, JAILROAD, LALACHERUVLI, RAJAMU NDRY - 533101 PH .08885885667.

 S B MOTORS (C501-C5-03), D. NO. 3-243, NH-5, ROAD, HUKUMPETA, RAJAHMUNDRY. - 533 107 PH:08885886262.

 VARUN MOTORS PVT. LTD. (C502-C5-01), SURVEY NO. 660, PALACHERLA VILLAGE OF RANJANAGRAM MANDAL, RAJAHMUNDRY, EAST GODAVARI DSIT. - 533102 PH :888616717.

RAJAM

 VARUN MOTORS PVT. LTD. (BLJ1-BLI-01), PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH - 77996R6998

RAMPACHODAVARAM

 VARUN MOTORS (SOK1-SOK-01), SURVEY NO 14/1,IRLAPALLY VILLAGE, RAMPACHODAVARAM,ANDHRA PRADESH -533288 PH 9885511911.

REPALLE

 JAYALAKSHMI (SKA1-SKA-01), D.NO 430, BESIDE ESAR PETROL BUNK, REPALLE, DISTRICT GUNTUR, ANDHRA PRADESH -522265
 PH :8374847777.

S KOTA

 JAYABHERI (SIV1-SIV-01), SURVEY NO 113/3,MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH -9100818111.

SOMPETA

 VARUN MOTORS PVT LTD (GLX1-GLX-01), KHATA NO 406,407,408 DENOTED IN SURVEY NO 241/1,MOGILIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284 PH :8142331166.

SRIKAKULAM

- VARUN MOTORS PVT. LTD. (4603-W6-09), NH-16, BESIDE EENADU UNIT OFFICE, PEDDA PADDU-VILL,ARASAVILLI (P.O.),SRIKAKULAM, -532001 PH :9703119797.
- JAYABHERI AUTOMOTIVE (4606-W6-04).
 SURVEY NO 22/7P,22/8 AND SURVEY NO 29/12,16,17, BALAGA RURAL,SRIKAKULAM CITY, DISTRICT: SRIKAKULAM 532001 PH :9100818111

SULURUPETA

 BHARGAVI AUTO PVT. LTD. (BZA1-BZA-01), KEERTI ENCLAVE, NEAR RTO OFFICE, NH-5, SULLURPETA - 524121 PH :9848602345, 7997998516.

TADA

 VISHNU CARS PVT.LTD. (SFW1-SFW-01), SURVEY NO 58/3,TADA, NELLORE DISTRICT -524401
 PH :7995088868.

TANUKU

 NOVELTY REDDY & REDDY MOTORS PVI LTD (BAR2-BAR-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211
 PH: 9912341624

TENALI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (PE01-PE-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH :226100/9866111788.

THAGARAPUVALASA

 VARUN MOTORS PVT. LTD. (COV1-CQV-01). SURVEY NO.11/2B,11/3.NAGARAMPALEM VILLAGE, NIH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM, -531162 PH :9885317344, 9885280772.

TIRUPATI

83. BHARGAVI AUTO PVT. LTD. (A801-N9-02), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, - 517507 PH :7997969946.

- BHARGAVI AUTO PVT. LTD. (A801-N9-06), SURVEY NO. 2/B3, ADJACENT TO PARK HOTEL, RENIGUNTA ROAD, TIRUPATI. - 517501 PH - 79070R0019
- VISHNU CARS (N902-N9-01), SURVEY NO. 192/32A2, 2000 CHENNAI - TIRUPATI HIGHWAY, KOTRAMANGALAM,RENIGUNTA MANDAL, TIRUPATI - 517520 PH :9154971551.

TIRUVURU

 SANTOSH AUTOMOTORS PVT. LTD. (CIM1-CIM-01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. -521235 PH: 7799787969.

TUNI

 SATTIBABU MOTORS (PVT) LTD. (KY01-KY-01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH. 7661893888.

VENKATAGIRIKOTA

88. BHARGAVI AUTO PVT. LTD. (CDI1-CDI-01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK, GMR FUNTION HALL, DARASALLA, PALLIKUPPAM, KUPPAM ROAD, V KOTA. - 517242 PH: 3948602345. 7799997720.

VENKATAPGIRI

 BHARGAVI AUTOMOBILES (SOL1-SOL-01), SURVEY NO 166,169/1,169/2,RTC COLONY,VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH 9248747777.

VIJAYAWADA

- MITHRA AUTO AGENCIES PVT LTD (2604-26-01), 40-17-3, PICHAIAH STREET, GANDHI COLONY, VIJAYAWADA - 520001 PH: 8886063507.
- VARUN MOTORS PVT. LTD. (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH:9885576602.
- VARUN MOTORS PVT. LTD. (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY, VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH. 9581480099.
- SANTOSH AUTOMOTORS PVT. LTD. (2607-26-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010 PH. 7793787459/739787918.

 VARUN MOTORS PYT. LTD. (2603-26-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH: 8297241177.

95. SANTOSH AUTOMOTORS PVT. LTD (2607-26-02), D NO. 77-42-16A, OPP, NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520 015 PH:7799787932.

VISHAKAPATNAM

PH:9703843737

- 96. VARUN MOTORS PVT. LTD. (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026
- VARUN MOTORS PVT. LTD. (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH.:7799124243.
- 98. VARUN MOTORS PVT. LTD. (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., 530007 PH 95814444477
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH - 530018 PH :8886332209.
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-02), D.NO:51-17-2, NH-5, KRANTHINAGAR, VISAKHAPATNAM, (ANDHRA PRADESH). - 530013 PH :7790772972
- 101. VARUM MOTORS PYT. LTD. (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007 PH:7799124243.
- 102. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046 PH :8897541234.
- 103. VARUM MOTORS PYT. LTD. (4603-46-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE – DUPPITURU, MANDAL – ACHUTAPURAM, DISTRICT – VISHAKAPATNAM, ANDHRA PRADESH. - 531011 PH: 9966877133.
- VARUN MOTORS PVT. LTD. (4603-46-0L), SURVEY NO. 408/10 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ. VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. 530045 PJ. 9885315344.

105. VARUN MOTORS PVT. LTD. (4603-46-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530 017 PH: 07901644535.

VISSANNAPETA

106. VARUN MOTORS (SNO1-SNO-01), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH -521215 PH 9581337222.

VIZAG

 VARUN MOTORS (4603-46-10), SURVEY NO 228/224, WARD NO 19, AGNAMPUDI, VIZAG -533053
 PH :9885438455.

VIZIANAGARAM

- 108. VARUN MOTORS PVT. LTD. (4603-N8-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM -535001 PH :8886721213.
- JAYABHERI AUTOMOTIVES PVT. LTD. (N801-N8-01), PLOT NO.B-1, DOOR NO.8-32-1, SURVEY NO. 108/12A & 109/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH - 535001 PH. 7702333514.

YANAM

110. SB MOTORS (CTR1-CTR-01), SURVEY NO 82-2;TALAREVU MANDAL, YANAM, EAST GODAVARI DISTRICT - 533463 PH :8886677759.

YELAMANCHILI

111. JAYABHERI AUTOMOTIVES PVT. LTD. (GJR1-GJR-01), SURVEY DV. 19-1, 2, 3, 45/1, 45/283, KOKIRAPALLI, YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH. - 53/1055 PH. 398/445639, 9642502345.

YELESWARAM

112. VARUN MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), VARUN MOTORS P.LTD,DO-NO - 24-41,BESIDE GOLLAIJ GARU BUNK, YERRAVARAM ROAD, YELESWARAM – 533429 - 533429 - PH - 9885511911.

ARUNACHAL PRADESH BHALUKPONG

 DY MOTORS (YT01-YT-01), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG, ARUNACHAL PRADESH - 790114 PH:8415075164.

ITANAGAR

- 114. BUISHI YADA MOTORS (7501-75-01), A' SECTOR, NAHARLAGUN, ARUNACHAL PRADESH. - 791110 PH :9436268870.
- 115. BUISHI YADA MOTORS (7501-75-04), MODEL VILLAGE, BEFORE GOVERNMENT HIGHER SECONDARY SCHOOL, NAHARLAGUN, ITANAGAR - 791110 PH :8257075033.
- D Y MOTORS (7502-75-01), LPC NO -DC/ICC/LPC, BORUM VILLAGE, PO/PS-NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100 PH: 8415075164.

PASSIGHAT

 BUISHI YADA MOTORS (7501-8A-03), PASSIGHAT BAZAR, PASSIGHAT, ARUNACHAL PRADESH - 791102 PH '940/878414

RUKSIN

 DY MOTORS (SHZ1-SHZ-01), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH -787060

PH :8415075164. ZIRO

 BUISHI YADA MOTORS (CHM1-CHM-01), HAPOLI, NEAR TELECOMMUNICATION CENTRE, ZIRO, ARUNACHAL PRADESH. - 791120 PH :9732010858.

ASSAM

BAIHATA CHARIALI

 PALLAVI MOTORS PVT LTD (BNL1-BNL-01), DAG NO. 1042, PATTA NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381 PH :9864052488.

BARAMA

121. MITTAL AUTOZONE (SOX1-SOX-01), VILLAGE -BARJAR, PO & PS - BARAMA, ASSAM -781346 -781346 PH : 8638487401

BARPETA

122. BHARATI MOTORS PVT. LTD. (7N01-7Z-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313 PH :7002819523.

BIJOYNAGAR

 PODDAR CAR WORLD (IA01-IA-01), AT/PO-BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST., BIJOYNAGAR - 781125 PH: 9864209733.

BISWANATH CHAIRALI

124. RAMLAL DURGADUTT MOTORS PVT LTD (BXI1-BXI-01), DAG NO- 7,8,9 PERIODIC PATTA NO - 24. REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176 PH :8724087940.

BONGAIGAON

 BHARATI MOTORS PVT. LTD. (7N01-7N-01), CHAPAGURI ROAD, BONGAIGAON - 7833830 PH:7002350887/9864427537.

CHAMATA

126. PALLAVI MOTORS PVT LTD (CEI1-CEI-01), DAG NO.1137, PATTA NO.376, MOUZA – DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306 PH. 9864052488.

DHEKIAJULI

127. RAMLAL DURGADUTT MOTORS PYT LTD (BRX1-BRX-1), DAG NO.242, K.P. PATTA NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110 PH : 9706568722

DHEMAJI

 SAIKIA AUTO PVT. LTD. (7P01-UD-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057 PH:8638725209.

DIBRUGARH

- JAYBEE AUTO AGENCIES PVT. LTD. (C101-C1-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH 9954799273
- 130. BIMAL AUTO AGENCY (C102-C1-01), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA-MANKHATTA KANIKAR, DIST.-DIBRUGARH, ASSAM. - 786004 PH -9864074525, 7003901301.

DIGBOI

131. VISHAL CAR WORLD PVT LTD (BYD1-BYD-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA, ASSAM. -786171 PH :9435860000.

DIPHU

 RAMLAL DURGADUTT MOTORS PVT LTD (1P01-1P-01), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - - 782460 PH :9707558868

DULIAJAN

 JAYBEE AUTO AGENCIES PVT. LTD. (ADAT-ADA-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH -786602 PH :7002722358.

GOALPARA

 BHARATI MOTORS PVT. LTD. (YN01-YN-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301 PH: 9101940372.

GOLAGHAT

135. RAMLAL DURGADUTT MOTORS PVT LTD (J303-J3-01), DAG NO. - 718, 684 & 706, PATTA NO 213, 168 & 192, KURUKA GAON, P.O -MORANGI, P.S -GOLAGHAT, DIST: GOLAGHAT, ASSAM PIN-785702 - 785702 PH :7002099547.

GORAIMARI

136. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.)
(GMB1-GMB-01), DAG NO-3, KP PATTA NO - 11, VILLAGE- CHALABASTI, MOUZA- GORAIMARI - 783390
PH :7002279100.

GUWAHATI

- BIMAL AUTO AGENCY (0901-09-01), JHALUKBARI, GUWAHATI. - 781014 PH: 9864074525.
- PALLAVI MOTORS PVT LTD (0902-09-01), DAG NO. 182, NEXT TO DEPTT. OF FAMILY WELFARE, SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022
- PH :9864210937.

 39. BIMAL AUTO AGENCY (0903-09-01),
 CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW
 GUWAHATI BRANCH, GUWAHATI 781021
 PH :9864489722.
- PODDAR CAR WORLD PVT LTD (0904-09-01), HENGRABARI ,VIP ROAD, GUWAHATI - 781036 PH :9508746340.
- 141. BIMAL AUTO AGENCY (0901-09-02), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37,GUWAHATI - 781028
- PODDAR CAR WORLD (0905-09-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029 PH:7002929414.

PH:9864040406.

- BIMAL AUTO AGENCY (0903-09-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005 PH :7578005159.
- 144. MITTAL AUTOZONE (0908-09-01), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028
- PH :9864296666.

 145. PALLAVI MOTORS PVT LTD (0902-09-02), DAG NO: 2201, PATTA NO: 237, VILLAGE JYOTIKUCHI, MOUZA BELTOLA, AK AZAD ROAD, GUWAHATI, IDSTRICT KAMRUP, ASSAM. 781034.
 PH :9864052498.

HOJAI

146. RAMLAL DURGADUTT MOTORS PVT LTD (ARAT-ARA-01), KHATIYAN NO.: 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT – NAGAON, ASSAM - 782435 PH. 7002680534.

HOWLY

147. PODDAR CARWORLD (GKW1-GKW-01), PATTA NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316 PH :8085957586.

HOWRAGHAT

148. BAJRANG CARWORLD (SGR1-SGR-01), HOWRACHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481 PH 9864191169.

JAGI ROAD

149. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-RB-02), JAGIROAD,MORIGAON,NALAOW,ASSAM -782410 PH :9365884355.

JORHAT

150. RAMLAL DURGADUTT MOTORS PVT LTD (G902-G9-01), DAG NO. 7. 8 8 0 F P.P. NO. 33, DAG O. 9 OF P.P. NO. 61, DAG NO. 382 0 F P.P. NO. 206, VILLAGE - PAKIMURI HABIGAON, MOUZA - SARAIBAHAL, JORHAT. - 785006 PH. 7002099547.

KALGACHIA

151. MITTAL AUTO (SLB1-SLB-01), VILL -KALGACHIA, PO - KALGACHIA , DIST BARPETA -781319 PH :8638487401.

KARIMGANJ

 JAIN UDYOG (6901-1S-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710 PH :9435179025.

KHATKHATI

153. PODDAR CAR WORLD PVT. LTD. (CAZ1-CAZ-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG. - 782460 PH :6000900381.

LANKA

154. RAMLAL DURGADUTT MOTORS PYT LTD (SDD1-SDD-01), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR , MOUZA - LANKA, DIST -HOJAI , ASSAM - 782442 PH :9707556888

MANGALDOI

 PODDAR CAR WORLD (YW01-YW-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115 PH:9706970132.

MARGHERITA

 VISHAL CAR WORLD PVT LTD (YR01-YR-01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181 PH :9435860000.

MORIGAON

157. RAMLAL DURGADUTT MOTORS PVT LTD (RB01-RB-01), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM. -782105 PH : 7002239592.

NAGAON

 RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002 PH :9706007918.

 BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (7/03-7/10-1), DAG NO. 255, 1508(N)/254(O), 1509(N)/257(O) AND 291, PATTA NO. 506(N)/15(O), 507(N)/15(O), 507(N)/97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST.-NAGAON. - 782002 PH: 9435006474/9864191169.

160. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-03), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM - 782003 PH :9706007918.

NAHARKATIYA

161. JAYBEE AUTO AGENCIES PVT. LTD. (C101-CJI-03), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPOER, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM. -786610 PH :7002722358.

NALBARI

162. BIMAL AUTO AGENCY (9201-92-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335 PH:7576842484.

NORTH LAKHIMPUR

163. SAIKIA AUTO PVT. LTD. (7P01-7P-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031 PH :8473946336.

164. SAIKIA AUTO PVT. LTD. (7P01-7P-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001 PH :7002571073.

PATHSALA

 PODDAR CAR WORLD PVT. LTD (CLD1-CLD-01), DAG NO. 451, PATTA NO. 151 KMP, PATHSALA, DIST.-BARPETA, ASSAM. - 781325 PH: 6000900256.

RAJGARH

 JAYBEE AUTO AGENCIES PVT. LTD. (CU1-CLI-01), DAG NO.182, PP NO.140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611
 PH : 9954799273.

RANGIA

167. PODDAR CAR WORLD PVT. LTD. (8X01-6X-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354 PH: 9724877892

SHIBSAGAR

168. RAMLAL DURGADUTT MOTORS PVT LTD (G902-L9-02), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR-785640 PH : 7002099547.

SILCHAR

 JAIN UDYOG (6901-J2-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006 PH:9706002524.

SORBHOG

 MITTAL AUTOZONE (SGS1-SGS-01), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM. -781317 PH :8011042222.

TANGLA

 BIMAL AUTO AGENCY (CHO1-CHO-01), DAG NO.:121, PATTA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521 PH:9954387619.

TEZPUR

172. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154 PH :8724087940

173. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-02), GORAIMARI, VILLAGE - SOLGAON, TEZPUR, ASSAM. - 784001 PH :9836036157.

TINSUKI

174. VISHAL CAR WORLD PVT LTD (J401-J4-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST -TINSUKIA, ASSAM - 786183 PH - 9475R0000

BIHAR

ARARIA

175. SEEMANCHAL MOTORS PVT. LTD. (O701-O7-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318 PH. 8797098013.

ARRAH

176. PEARL CARS (VU01-VU-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.) DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH :8294634604

AURANGABAD

177. KARLO AUTOMOBILES (SING1-SING-01), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANDI, AURANGABAD -824101 PH :7019085212.

BANKA

178. SEEMANCHAL MOTORS PVT. LTD. (CEQ1-CEQ-01), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101 PH: 8797096020.

BEGUSARAI

 GS MOTORS PVT. LTD. (1U01-1U-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR-851101 PH :9204756206.

BETTIAH

 SHREE GOPAL AUTO PVT. LTD. (O401-O4-01), BEETIAH - MOTIHARI HIGHWAY, NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438 PH:9771486183.

BHAGALPUR

181. SEEMANCHAL MOTORS PVT. LTD. (G802-G8-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005 PH :8797096020

BIHARSHARIF

182. REESHAV AUTOMOBILES (MG01-TG-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUIR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR -803101 PH :9263632175.

BUXAR

 PEARL CARS (VV01-VV-01), C/O DEVDHTRHA UPPDHYYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101 PH :8294634605/8294634602.

CHAKIA

184. RAM KRISHNA MOTORS PVT. LTD. (CWA1-CWA-01), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412 PH:9801773716.

CHAPRA

185. REESHAV AUTOMOBILES (MG01-TH-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301 PH:7061295296.

DANAPUR

186. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-NN-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, -800018 PH 9386898458

DANAPUR, PATNA

 ALANKAR AUTO SALES & SERVICE PVT LTD (1504-NN-05), TOUZI NO. 5057, THANA NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA. -801503
 PH. 9334415434.

DARBHANGA

 RAJKRISHNA MOTORS LLP (1V02-1V-01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P.-13, ROAD, DARBHANGA, BIHAR - 846009 PH:7004529271.

 RAJKRISHNA MOTORS LLP (1V02-1V-02), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) -846003
 PH 9693127351.

DEHRI ON SONE

 PEARL CARS (1X01-MK-02), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST.-ROHTAS, BIHAR. - 821307 PH: 8294634602.

GAYA

KARLO AUTOMOBILES PVT LTD (Y601-Y6-01),
 BODH GAYA, GAYA. - 824231
 PH:7004574631/8539063615.

192. DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD (Y602-Y6-01), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD, GAYA, PIN 823004 - 823004 PH -903101180619900024001.

GOPALGANJ

 SHREE GOPAL AUTO PVT. LTD. (O301-O3-01), NH-28, DANAPUR, TEHSIL-MANJAGARH, GOPAL GANJ (BIHAR) -800023 PH:9771486170/9771486139.

HAJIPUR

194. REESHAV AUTOMOBILES (MG01-MG-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI) - 844101 PH 9060945038.

KATIHAR

195. SEEMANCHAL MOTORS PVT. LTD. (0601-06-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAR PURNEA ROAD, KATIHAR - 854105 PH.:7762893700.

KISHANGANJ

196. SEEMANCHAL MOTORS PYT. LTD. (PX01-PX-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA:KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101 PH: 8379096019.

LAKHISARAI

197. GS MOTORS PVT. LTD. (CHU1-CHU-01), TAUZI NO. 39, KHATA NO. 3, KHESRA NO. 496, MOUZA - JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR. - 811311 PH :9204756206.

MADHURANI

198. RAJKRISHNA MOTORS LLP (CAJ2-CAJ-01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211 PH :9304481978 9693127351.

MOHANIA

199. PEARL CARS (VW01-VW-01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109 PH :8294634632/8294634649.

MOTIHARI

200. RAJIV AUTOMOBILES PVT LTD (T401-FH-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401 PH - 9234609669

MUZAFFARPUR

- RAJIV AUTOMOBILES PVT LTD (T401-T4-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002 PH: 9910347908.
- 202. RAM KRISHNA MOTORS PRIVATE LTD. (T402-T4-01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. -842001 PH 9102173333.
- 203. RAJIV AUTOMOBILES PVT LTD (T401-T4-04), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146 PH :9234609671.

NAUGACHIA

204. SEEMANCHAL MOTORS PVT. LTD. (CFS1-CFS-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204 PH. 8797096014. 8797096020.

NAWADA

 REESHAV AUTOMOBILES (MG01-T.I-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110 PH :6206162228.

PATNA

- VAU'S AUTOMOBILE (1503-15-01), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA. - 800014 PH :9771446012.
- 207. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. -800013
 - PH:09304212119/7004573547
- ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001 PH 9934020200.
- REESHAV AUTOMOBILES PVT.LTD. (1506-15-01), PLOT NO.25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004 PH. 7632998356
- KARLO AUTOMOBILES PVT LTD (1502-15-05), JAGDEOPATH, NEAR SAI CORPORATE PARK, PATNA - 801506 PH: 9264190675.
- ALANKAR (1504-15-06), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA – 800006 - 800006 PH :9304403916.

PURNEA

 SEEMANCHAL MOTORS PVT. LTD. (6V01-6V-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326 PH:8797096014.

SAHARS

GS MOTORS PVT. LTD. (AAP1-AAP-02),
 PATUAHA, NH 107 SAHARSA,BIHAR - 852201
 PH:9263638456.

SAMASTIPUR

 RAJKRISHNA MOTORS LLP (1W02-1W-01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101 PH :9204552405.

SASARAM

 PEARL CARS (1X01-1X-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115
 PH:8294634602/8294634649.

SITAMARHI

216. RAJIV AUTOMOBILES PVT. LTD. (E001-E0-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. -843301 PH: 9234609671

SIWAN

7280074124.

 SHREE GOPAL AUTO PVT. LTD. (0501-05-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236 PH :9771488132

CHANDIGARH

CHANDIGARH

- MODERN AUTOMOBILES (0702-07-01), 4 M.W.
 INDL AREA, CHANDIGARH 160002
 PH:9646000190.
- AUTOPACE NETWORK PVT LTD (0705-07-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002 PH:9878422201.
- 220. TRICITY AUTOS (9M01-07-02), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH -160002
- PH -9988882335. 21. NAVDESH AUTO LLP (0708-07-01), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. -160002 PH -7087035482

CHHATTIGARH

PENDRA

 M SQAURE (SC21-SC2-01), – M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA, GOURELA PENDRA MARWAHI-495119 -495119
 PH.:7987590484.

CHHATTISGARH

AMBIKAPUR

 MAHAMAYA AUTOCARS PVT LTD (AE01-AE-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001 PH : 7987741432.

BAGBAHARA

224. HDN MOTORS (SEB1-SEB-01), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449 PH : 7909800004.

BAIKUNTHPUR

 MAHAMAYA AUTOCARS PVT LTD (CQU1-CQU-01), WARD NO.01, KHATA NO.91/6, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335 PH:9179350707.

BALOD

 CHOUHAN (SFE1-SF-01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228 PH :9837325267.

BALODA BAZAR

227. SKY AUTOMOBILES (5001-GJ-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332 PH-9893307279

BEMETRA

228. CHOUHAN AUTOMOBILES LLP (CBC2-CBC-01), KHASRA NO. 88/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVGHAD CHOWK, BEMTARA CHATTISGARH - 491335 PH :6262000222

BHATAPARA

 SPARSH AUTOMOBILES (BBJ1-BBJ-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118 PH :8921326361/ 9285505780.

BHILAI

- 230. CHOUHAN AUTOMOBILES LLP (8305-83-01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. - 490023 PH. 9111100140.
- 231. SPARSH AUTOMOBILES PVT LTD (8304-83-01), R-17, INDUSTRAIL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARI -490026 PH :8779064848.
- 232. CHOUHAN AUTOMOBILES LLP (8305-83-02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001 PH :6262000222.

BHILLAI

SPARSH AUTOMOBILES (8304-83-02), M/S.
 SPARSH AUTO, VEERSAVARKAR MARKET, G.E.
 ROAD, SUPELA, BHILLAI-490023 - 490023
 PH:9926626662.

BILASPUR

- SATYA AUTO PVT LTD (C303-C3-01), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001 PH :9109194833.
- 235. SATYA AUTO PVT LTD (C303-C3-02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. 495006 PH :9977879698

236. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (C302-C3-01), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. - 495223 PH 6262622560.

DALLIRAJHARA

237. CHOUHAN (SMZ1-SMZ-01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD DISTRICT-491228 + 491228 PH : 6262000222.

DEOBHOG

238. SPARSH AUTO (SIQ1-SIQ-01), M/S SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR, NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG – 493890 -493890

PH :9926626662. DHAMTARI

 SKY AUTOMOBILES (7V01-7V-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH :8889998612

DURG

240. SPARSH AUTOMOBILES PVT LTD (7W03-7W-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001 PH: 9840437544.

GARIYABANDH

 SPARSH AUTOMOBILES (CCH1-CCH-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032 PH :9669638883.

JAGDALPUR

242. SKY AUTOMOBILES (EC01-EC-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001 PH:9109996511.

JANJGIR

 SATYA AUTO PVT LTD (9N02-9N-01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668 PH :7747000446.

KANKER

244. SKY AUTOMOBILES (5001-KG-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER, DISTRICT – KANKER, CHHATTISGARH - 494334 PH:8889998625.

KAWARDHA

 CHOUHAN AUTOMOBILES LLP (DI02-DI-01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491 995 PH:6262000222.

KHAIRAGARH

246. SPARSH AUTOMOBILES PVT LTD (GMG1-GMG-01), KHAIRAGARH -JHALBANDHA ROAD,AMLIPARA, OPP - BIJALI OFFICE, KHAIRAGARH -491881 - 491881 PH :9926626662

KHARSIA

247. SATYA AUTO (SET1-SET-01), MS SATYA AUTO, BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 496661 PH :9993092051.

KONDAGAON

248. SKY AUTO (SDF1-SDF-01), – M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGOAN, CHHATTISGARH - 494226 PH: 9425204051.

KORBA

 SATYA AUTO PVT LTD (U702-U7-01), SHED NO.
 I, INDUSTRIAL AREA, KORBA - 495681 PH :8462000861.

MAHASAMUND

250. SPARSH AUTOMOBILES (5002-9P-02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND. -?? PH :9926280700.

MANENDRAGARH

 MAHAMAYA AUTOCARS PVT LTD (AE01-BCE-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442 PH 9584136234

MUNGELI

252. SATYA AUTO PVT LTD (BLE2-BLE-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468 PH:8462000844.

PATHALGAON

53. MAHAMAYA AUTOCARS PVT LTD (BX01-BX0-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118 PH:9752195523.

PITHOR

 SPARSH AUTOMOBILES (CCG1-CCG-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008 PH: 9926280700.

RAIGARH

255. SATYA AUTO PVT LTD (7Y03-7Y-01), JINDAL ROAD, RAIGARH - 496001 PH :7024398350.

RAIPUR

- 256. SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010 PH :9584433102.
- SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH:9584460290.
- 558. SPARSH AUTOMOBILES (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. -492001 PH 9669792000.
- SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH: 9893000161.
- 60. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH:9522314155.
- SPARSH AUTOMOBILES (5002-50-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR -492004

PH:9009666400

- 62. SPARSH AUTOMOBILES (5002-50-05), PLOT 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR - ?? PH :9977220395.
- 263. SKY AUTOMOBILES (5001-50-07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. - 492013 PH 9584460289.
- HDN MOTORS PVT. LTD. (6005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. -492001 PH. 7909800093.
- 265. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-50-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH -492005 PH:6262620057.

RAJIM

266. SPARSH AUTOMOBILES (5002-MO-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881 PH :966963883.

RAJNANDGAON

 SPARSH AUTOMOBILES PVT LTD (LQ02-LQ-01), NEAR HANUMAN TEMPLE, VILL-MANKI, NH-6, RAJNANDGAON, CHHATTISGARH - 491441 PH :7887518100.

SARAIPALLI

268. SKY AUTOMOBILES PVT. LTD. (BUF1-BUF-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI -493558 PH 7700772359

SARANGARH

269. SATYA AUTO PVT LTD (BUC2-BUC-01), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. -733751 PH.8462000841.

TILDA

 SKY AUTOMOBILES (CWR1-CWR-01), KASRA NO. 29/31, TILDA, DIST.-RAIPUR, CHHATTISGARH. - 493 114 PH: 9425204051.

TITLAGARH

 ODYSSEY MOTORS (SQE1-SQE-01), M/S PLOT NO 687/1216, MOUZA PIPAL PADAR. TITLAGARH,BALANGIR, ODISHA - 767033 PH: 9439314464.

DADRA AND NAGAR HAVELI

SILVASSA

272. KATARIA AUTOMOBILES PVT. LTD. (ED01-ED-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA -396230 PH :9723816223.

DAMAN AND DIU

DAMAN

273. KATARIA AUTOMOBILES PVT. LTD. (0104-98-08), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN, DAMAN UNION TERRITORY -396210 PH. 9924130655.

DELHI

DELHI

- SAYA AUTOMOBILES PVT. LTD. (0808-08-03), A
 21-22, G.T.KARNAL ROAD, NEW DELHI 110033
 PH: 47088888
- BAGGA LINK MOTORS PVT LTD. (0811-08-01), 395 PATPAR GANJ INDL.
 AREA,PATPARGANJ,NEW DELHI - 110092 PH :46488830, 46488831.
- BAGGA LINK MOTORS PVT LTD. (0811-08-02), LINK ROAD, (NEAR BAGGA PETROL PUMP), KAROL BAGH, NEW DELHI - 110005 PH: 23524646, 23522626.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-01), A-100 MAYAPURI,PHASE-II,NEW DELHI - 110064 PH :41845000, 49305232.
- COMPETENT AUTOMOBILES CO. LTD. (0806-08-03), PLOT NO.3, GAZIPUR, DELHI, -110096 PH: 45300000.
- T.R. SAWHNEY MOTORS PVT LTD (0819-08-02),
 B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR
 BADLI, NEW DELHI 110042
 PH:71118333.

Dealer Workshop (AS ON 30.05.2023)

- 280. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F2-08-01), 5, WAZIRPUR,INDUSTRIAL AREA,ADJACENT TO WAZIRPUR DEPOT,RING ROAD, NEW DELHI-110034
- PH:27153996-99, 27151466-67.
 281. ROHAN MOTORS LTD. (0886-08-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI 110044 PH:40567900, 41679252-259.
- 282. T.R. SAWHNEY MOTORS PVT LTD (0819-08-01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI-110094 PH.:71115333.
- 283. RANA MOTORS PVT LTD (08A1-08-02), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020 PH :41707777.
- 284. MAGIC AUTO PVT. LTD. (0888-08-01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI -110064 PH :41847777.
- 285. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F3-08-01). A-1 UDYOG VIHAR, NEW ROHTAK ROAD, PEERAGARHI, DELHI - 110041 PH :25963535, 48616500.
- 286. T.R. SAWHNEY MOTORS PVT LTD (0819-08-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092 PH :9873851333.
- MAGIC AUTO PVT. LTD. (08B7-08-01), PLOT NO. 68/3,MOTINAGAR, NEW DELHI, - 110015 PH:43777777, 43777721.
- 288. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F8-08-01), PLOT NO.9, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. 110063 Pt :43288888.
- 289. SAYA AUTOMOBILES (0808-08-2B), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI -110033
- PH :27731325, 27731856. 290. COMPETENT AUTOMOBILES CO. LTD. (0806-08-05), B-83 MAYAPURI PHASE I, NEW DELHI - 110015 PH :47268980.
- 291. BAGGA LINK MOTORS PVT LTD. (0811-08-03), PLOT NO.4,6,8,10 NEAR FORTIS HOSPITAL, OPPOSITE NIRULAS, BABA POTERY COMPOUND, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI - 110070 PH :45688888, 45688811.
- RANA MOTORS PVT LTD (08A1-08-04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020 PH :40877777, 26389930.

- COMPETENT AUTOMOBILES CO. LTD. (0806-08-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI - 110 015 PH :8377007980/81/02.
- 294. PREM MOTORS PVT. LTD. (08D4-08-01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI -110037 PH :42390000.
- 995. AAA VEHICLEADES PVT. LTD. (08B9-08-03), VILLAGE GEVRA, KHASRA NO.8773, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041 PH :66/11888
- 296. RANA MOTORS PYT LTD (08A1-08-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033 PH :41609999, 42474444.
- SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F9-08-01), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. - 110052 PH :42020000. 9910114255.
- 298. T.R. SAWHNEY MOTORS PVT LTD (08D2-08-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064 PH .71119333. 9999049337.
- P9. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-02), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015 PH :999903888
- 300. MAGIC AUTO PVT. LTD. (08D5-08-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092 PH: 9818741741.
- 301. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-03), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. -110043
- PH :9999127840/9999127947.
 302. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F5-08-01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI. 110040 PH :8860637358.
- 303. DD MOTORS (A DIVISION OF D.D. PREM PYTLTD.) (08F1-08-04), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI. - 110059 PH-9873173005
- 304. FAIR DEAL WHEELS PVT. LTD (08E3-08-01), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.4817, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJHAWALA ROAD, DELHI - 110086 PH.9711993801
- 305. COMPETENT AUTOMOBILES CO. LTD. (0806-08-07), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059 PH :9582797774.

- 306. JAGMOHAN AUTOMOTIVES (08F6-08-01), PLOT NO. 69/2, WAZIRPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052 PH -0850790351
- RANA MOTORS (08A1-08-08), B-83, GTK ROAD INDUSTRIAL AREA, DELHI. - 110033 PH :9873400386.
- AAA VEHICLEADES (0889-08-G1), KHASRA NO. 204, MAIN CHHATARPUR ROAD, CHHATARPUR, NEAR SAI BABA MANDIR, DELHI, PIN-110030 -110030 PH :9829342761.
- VIPUL MOTORS (08F7-08-01), B-26, JHILMIL INDUSTRIAL AREA, DELHI -110095 - 110095 PH:9811233385.

OKHLA, DELHI

 AAA VEHICLEADES PVT LTD (08B4-08-01), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020 PH :8448582912.

WAZIRPUR - DELHI

DD MOTORS (08F1-08-05), A-90, WAZIRPUR
 INDUSTRIAL AREA, NEW DELHI-110052 - 110052
 PH:9310367233.

GOA

BICHOLIM

 SAI SERVICE PRIVATE LIMITED (BHN1-BHN-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529 PH :2385500. 9881746566.

CANACONA

 CHOWGULE INDUSTRIES PVT. LTD. (IT01-IT-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702 PH :0832-2633010/8805024916.

CUNCOLIM

 SAI SERVICE PRIVATE LIMITED (3402-AAO-06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNAMODDI, CUNCOLIM, SOUTH GOA -403703
 PH :2763062, 2763063, 9850398057.

DHARBANDORA

 CHOWGULE INDUSTRIES PVT. LTD. (3408-GO-07), AT- KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401 PH:0832-6623477/7888004357.

MAPUSA

- SAI SERVICE PRIVATE LIMITED (3402-8Z-05), D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA, GOA, - 403507 PH :2267000, 8660432266.
- 317. CHOWGULE INDUSTRIES PVT. LTD. (3408-8Z-03), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE,KARASWADA, MAPUSA,GOA - 403507 PH .0832-6631666/6631608/8888817955.

MARGAO

- 318. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602 PH: 0832-6623444/4207796630235.
- 319. SAI POINT CARS PVT LTD (3409-1Y-01), H.NO.17, WARD NO.5, SURVEY NO.343, 344, MARGAON PONDA HIGHWAY, SONFATOR AMBORA, CAMURLIN, SALCETE, GOA - 403722 PH. 99454544826/8380013499.
- SAI SERVICE PRIVATE LIMITED (3402-1Y-02), SURVEY NO. 212/4, VILLAGE - VERNA, TAL: SALCETE, NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718 PH :2883000, 2791195,9834398096.
- 121. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-08), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALCETE SOUTH GOA, GOA - 403722 PH: 0832-0621800/9922950800.

PANAJI

- 322. CHOWGULE INDUSTRIES PVT. LTD. (3408-P1-02), D.B BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001 PH:9922950798/9922925701.
- SAI SERVICE PRIVATE LIMITED (3402-P1-07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002. - 403001 PH :222392212225222.9923865179.

PERNEM

324. CHOWGULE INDUSTRIES PVT. LTD. (CUA1-CUA-01). SURVEY NO. 28/1-8 & 258/1-C, OPPOSITE INDUTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA. - 403512 PH.3830082893.

POLEM

325. CHOWGULE INDUSTRIES (SHO1-SHO-01), DULGAL-SHELIM, VILLAGE POLEM-LOLIEM .SOUTH GOA.403728 - 403728 PH. #REF!.

PONDA

326. SAI SERVICE PRIVATE LIMITED (3402-34-03), OFF PANJIM HIGHWAY,PONDA,GOA, - 403401 PH :2324106, 2311499, 2324120, 9518349559.

PORVORIM

 SAI SERVICE PRIVATE LIMITED (3402-P1-01), SURVEY NO: 36/1,PENHA DE FRANCE,TAL: BARDEZ, ALTO PCRVORIM,GOA - 403501 PH: 2419200, 2414324, 9881746567.

SANVORDEM

328. CHOWGULE INDUSTRIES PVT. LTD.
(BTK1-BTK-01), SURVEY NO. 4, SUBDIVISION-3,
VILLAGE – CACORA, TALUKA – CURCHOREM,
SANVORDEM, DIST. – SOUTH GOA, GOA. 403706
PH: 9850477607.

SATTARI

329. CHOWGULE INDUSTRIES PVT. LTD.
(3408-BOP-10), SURVEY NO. 60, SUB DIV NO. 05,
VILLAGE ARVALEM, VILLAGE PANCHAYAT
ARVALEM, TALUKA SATTARI, NORTH GOA,
GOA - 403505
PH: 3923464422.

TALEIGAON

330. CHOWGULE INDUSTRIES PVT. LTD. (3408-NP-06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON, - 403001 PH -9922950798/922925701.

VASCO

- SAI SERVICE PRIVATE LIMITED (3402-CP-04), NEXT TO SHIKALIM CHURCH, SHIKALIM, VASCO, GOA - 403802
- PH :2542581/2526000/2526000/9550398058.

 32. CHOWGULE INDUSTRIES PVT. LTD.
 (3408-CP-09), OPP BHRAMASTAL TEMPLE,
 PATRONG BAINA, VASCO,GOA 403802
 PH :0832-2500407/427/9921943600/9850986904

GUJARAT

AHMEDABAD

- 333. KIRAN MOTORS LTD (0102-01-01), SARKHEJ -GANDHINAGAR HIGHWAY, OPP. RAJPATH CLUB, AHMEDBAD - 380054 PH : 9624055445.
- KATARIA AUTOMOBILES PVT. LTD. (0104-01-01), D/8 BEHIND ESI HOSPITAL, OUTSIDE DARIAPUR DARWAJA, AHMEDABAD - 380016 PH :982454350.
- 335. POPULAR WHEELERS (INDIA) PVT. LTD. (0105-01-01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443 PH :61903232.
- 336. KIRAN MOTORS LTD (0102-01-02), BEHIND L&T GODOWN, SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210 PH :26891863, 26891009, 26891294.
- 337. KATARIA AUTOMOBILES PVT. LTD. (0104-01-05), NEAR KOKHRA BRIDGE,MANINAGAR - 380008 PH:7567568182.
- KATARIA AUTOMOBILES PVT. LTD. (0110-01-01), BEHIND ADANAL PUMP, NEAR MAKARBA CROSSING, MAKARBA,SG HIGHWAY - 380051 PH: 7069054900.

- POPULAR WHEELERS (INDIA) PVT. LTD. (0111-01-01), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA,AHMEDABAD - 380054 PH :65058111.
- 340. KIRAN MOTORS LTD (0112-01-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005 PH :8347491800/9824023122.
- 341. UDAY AUTOLINK PVT. LTD. (0113-01-01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHIWADA, AHMEDABAD, GUJARAT 382430 PH :7567229999.
- 342. NANDA AUTOMOBILES PVT. LTD. (0114-01-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405 PH:8866558787 / 9460088883.
- STARLINE CARS (AHMEDABAD) PVT LTD (0115-01-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330 PH :9824601729.
- KIRAN MOTORS LTD (0112-01-02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330 PH :7069868374/9173840458/7383651643/9173044104
- 345. KIRAN MOTORS LTD (0102-01-04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060 PH :9327617447, 9327214890.
- 346. POPULAR WHEELERS (INDIA) PVT. LTD. (0109-01-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT 380007 PH :309993830.
- 347. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (0129-01-01), PLOT NO. 116, BOPAL – AMBIL ROAD, BOPAL, AHMEDABAD, DISTRICT – AHMEDABAD, GUJARAT. - 380058 PH:7211140026, 7211130053.
- 348. TANU MOTORS PVT. LTD. (0118-01-01), SURVEY NO. 1155/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) 382110 PH :98-12009110.
- 349. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (0117-01-01), PLOT NO.116 & 118/2, SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD - 382418 PH -7623089000.

- 350. STARLINE CARS PVT. LTD. (D101-01-09), SR NO – TP - 57, PLOT NO. 67, NEAR GOTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S.G. HIGHWAY, GOTA, AHMEDABAD. - 382481 PH :9824601729.
- 351. KATARIA AUTOMOBILES PVT. LTD. (0110-01-02), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3.7.10, B/H SILVER STAR, BESIDE HARI VILLA BUNGLOWS, GOTA ROAD, CHANDLODIYA, AHMEDABAD. - 382481 PH :9824000378.
- 352. DB MOTORS PRIVATE LIMITED (0119-01-01), SURVEY NO. 131A, NH-8, ASLALI, OPP.-OCTROI NAKA, AHMEDABAD. - 382427 PH :9726031111.
- 353. POPULAR WHEELS (0111-01-02), SAVAN SQUARE, SHOP NO. 1, 2, 3, 4, 5, SERVE NO. 39/1, F.P. NO. 92, T.P. NO. 66/A, CHENPUR, NEW RANIP, AHMEDABAD. - 382 427 PH 90925703344
- 354. DB MOTORS PRIVATE LIMITED (0119-01-02), PLOT NO. 718, ASHRAM ROAD, OPPOSITE GANDHI ASHRAM, OLD VADAJ, HRIDAYA KINJ, AHMEDABAD. - 380013 PH. 9909048260.

AMBAJI

355. TANU MOTORS (SKQ1-SKQ-01), OPP KUMBHARIYA JAIN DERASAR, GIDC ROAD, AMBAJI, DIST-BANASKANTHA, GUJARAT 385110 - 385110 PH #RFF!

AMOD

356. RAVIRATNA MOTORS (F801-ZE-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110 PH :9687691106/9687699383.

AMRELI

 ALPHA AUTOLINK LLP (9E02-9E-01), LATHI BY PASS ROAD, AMRELI, GUJARAT. - 365601 PH:9978938858/9978938833.

ANAND

- 358. AMAR CARS PVT. LTD. (F702-F7-01), JANTHA CROSSING, SOJITRA ROAD, ANAND 388121 PH :9909960772.
- 359. KATARIA AUTOMOBILES PVT. LTD. (F703-F7-01), SURVEY NO. 189/1+2/4+3/A/K 190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT. - 388 120 PH 7689554466.

ANKLAV

 KATARIA AUTOMOBILES (SEO1-SEC-01), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASODAR CHOKDI, TAL. ASODAR, CITY ANKLAV, DIST. ANAND, PIN-388510, GUJARAT - 388510 PH :7227917151.

ANKLESHWAR

361. RAVIRATNA MOTORS PVT LTD (P901-P9-01), PLOT NO. 624/2/BA, GIDC, VALIA ROAD, ANKLESHWAR - 393002 PH :9687691063.

BAGODRA

362. NANDA AUTOMOBILES PVT. LTD. (CVQ1-CVQ-01), SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA. - 382240 PH: 9727822000, 9726269111.

BALASINOR

383. AMAR CARS PVT. LTD. (CJET-CJE-01), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJINA MUYADA, VILLAGE – VADALA, TALUKA – BALASINOR, DISTRICT – MAHISAGAR, GUJARAT. - 388255 PH. 7211109980.

BARDOLI

- 364. DHRU MOTORS (4002-Q1-02), G.I.D.C,SURAT BARDOLI ROAD,BARDOLI, - 394601 PH :9825413113/9879104454.
- 365. KATARIA AUTOMOBILES PVT. LTD. (2106-01-02), BLOCK NO 13. NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310 PH :7698022665/992413880.

BAREJA

366. KATARIA AUTOMOBILES PVT. LTD. (BAN1-BAN-01), 5/67. ADITYA COMPLEX NATIONAL HIGHWAY-8, BAREJA, TALUKA – DASKROI, DISTRICT – AHMEDABAD, GUJARAT -382425 PH :7046079997.

BARWALA (AHMEDABAD)

367. UDAY AUTOLINK PVT. LTD. (1401-14-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450 PH :75674499999687677611

BAVLA

368. KATARIA AUTOMOBILES PVT. LTD. (0104-RX-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA -382220 PH 98243444889

BECHRAJI

 STARLINE CARS PVT. LTD. (GJM1-GJM-01), R.S. NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST.-MEHSANA. -384210 PH :9909043244.

BHABHAR

Dealer Workshop (AS ON 30.05.2023)

 STARLINE CARS (CWD1-CWD-01), SHOP NO. 7, 8.9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320 PH.999043244, 9824601729.

BHACHAU

 K.D. MOTORS (P501-JP-02), SUNRISE MALL,OPP. BUS STAND, BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140 PH :9909953036, 9879390919.

BHANVAD

 ATUL MOTORS JAM LLP (BND2-BND-01), R.S. NO. 439, PLOT NO.19, BHANVAD (GUJARAT) -360510
 PH:9574005964 / 9574004714.

BHARUCH

373. RAVIRATNA MOTORS (F801-F8-01), NH 8, OPP YOGI PETROL PUMP, P. O. ZADESHWAR, BHARUCH - 392011 PH :9687691044: 9687632647.

BHAVNAGAR

374. KATARIA AUTOMOBILES (C902-C9-01), SURVEY NO 137/2, PLOT NO 301/2&3 AND 301/4&5, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004 PH :9426168266

375. KATARIA AUTOMOBILES (C902-C9-02), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATNAKA, AT-ADHEWADA, DIST-BHAVNAGAR, GUJARAT – 364002. - 364002 PH -9638884422.

BHUJ

 K.D. MOTORS (P501-P5-01), PLOT NO.
 5/6/14, UMANAGAR, MIRZAPUR HIGHWAY ROAD, BHUJ, GUJARAT - 370001
 PH :02832-232534/5. 9879898799. 8780351870.

 K.D. MOTORS (P501-P5-03), R.S NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001 PH :9909953124.

BODELI

KIRAN MOTORS LTD (0R01-0R-01),
 OPP.NARMADA GUEST HOUSE, DABHOI ROAD,
 BODELI, TALUKA: SANKHEDA, VADODARA 391135
 PH. 9714592999.

BORSAD

379. AMAR CARS PVT. LTD. (BJM1-BJM-01), BORSAD – TARAPUR HIGHWAY, BORSAD , DISTRICT – ANAND, GUJARAT - 388540 PH -958647744

BOTAD

380. KATARIA AUTOMOBILES (AP03-AP-19), PLOT NO.13, SURVEY NO.33,44, AND 35 PAIKKI VILLAGE, HADADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIYAD BOTAD ROAD - 364710 PH :9558060658.

CHANASMA

 STARLINE CARS (CVF1-CVF-01), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220 PH: 9909043244, 9824601729.

CHANDKHEDA - AHMEDABAD

 KATARIA AUTOMOBILES PVT. LTD. (0104-01-10). SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD. - 382470 PH 9723302111

CHANDRALA

383. NANDA AUTOMOBILES PYT. LTD. (GLT1-GLT-01), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST- GANDHINAGAR, GUJARAT - 382320 PH :9725062187, 9727726003.

CHANGODAR

384. PEGASUS (A UNIT OF VISUAL MOTORS PVT. LTD.) (CTD2-CTD-01), SURVEY NO.393, VILLAGE – MORAIYA, CHANGODAR, TALUKA – SANAND, SUN DISTT: AHEMADABAD. - 382210 PH.7211120014.

CHIKHLI

 KATARIA AUTOMOBILES PVT. LTD. (BCB1-BCB-01), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521 PH:7698953899.

CHILODA

386. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (GJ01-GJ0-01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. -382355 PH :7211168938, 7623039000.

CHOTILA

387. DREAM VEHICLES PVT LTD (CFI1-CFI-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO - CHOTILA, DISTRICT -SURENDRANAGAR, GUJARAT. - 363520 PH: 9227775709.

CHUDA

388. DREAM AUTOMOBILES (SOC1-SOC-01), NR. GOVT HOSPITAL, CHATARLIYA ROAD, CHUDA, SURENDRANAGAR. - 363410 PH :9313802500.

DABHOI

 KATARIA AUTOMOBILES PVT. LTD. (UU01-UU-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110 PH:3156000463.

DAHOD

 R B CARS PVT. LTD. (2C01-PL-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151 PH:9099043715, 9727700823.

DEESA

391. TANU MOTORS PVT. LTD. (Q801-UQ-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA. 385535 PH. 9909006099.

DEHGAM

 NANDA AUTOMOBILES PVT. LTD. (2801-NR-03), NEAR UMIYA MATAJI TEMPLE, COLLEGE ROAD, AHMEDABAD ROAD, DEHGAM - 382305 PH: 234567.

DETROJ

393. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (GLC1-GLC-01), PLOT NO-61,MILKAT NO-2534, AT-DETROJ,TALUKA-DETROJ-RAMPURA-382120 - 382120 PH :#REFE!

DEVGADH BARIA

394. R B CARS PVT. LTD. (2C01-AOA-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380 PH:9099049344, 6352384846, 9099043715.

DHANERA

395. TANU MOTORS PYT. LTD. (BZW1-BZW-01), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA - 385310 PH 9909006099 8401784018

DHARAMPUR

396. KATARIA AUTOMOBILES PVT. LTD. (BSK1-BSK-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050 PH :9723455291.

DHARI

397. ALPHA AUTOLINK LLP (GG02-GG-01), PLOT NO. 9, DHARI. - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI, TALUKA - DHARI, DIST. -AMRELI, GUJARAT. - 365640 PH :99045499999978938858.

DHOLKA

398. TANU MOTORS PVT. LTD. (CQ02-CQ-01), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALIKUND HIGHWAY, DHOLKA, GUJARAT - 382 225 PH :9512009104.

DHORAJI

399. PERFECT AUTO SERVICE (5502-DL-09), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - -360410 PH:9099027402, 8200969617.

DHRANGADHRA

400. DREAM VEHICLES PVT LTD (IM01-IM-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH: 9227775725.

DIYODAR

401. TANU MOTORS (SFU1-SFU-01), NR.HP PETROL PUMP, BHESANA CROSS ROAD, BHABHAR HIGWAY, DIYODAR-385330 - 385330 PH :#REFI.

DWARKA

402. ATUL MOTORS JAM LLP (CJG2-CJG-01), SURVEY NO. 41, NEAR, SHI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT – DWARKA – . - 361335 PH : 9712212900 / 9974404714.

GANDHIDHAM

403. B M AUTOLINK (7702-77-01), EAST OF PLOT NO. 30-35,NATIONAL HIGHWAY, GANDHIDHAM -370201 PH: 9727725723.

404. B M AUTOLINK (7702-77-03), SURVEY NO.129/26 P, GALPADAR HIGHWAY, GANDHIDHAM, DISTT.KACHCHH, GUJARAT. - 370110 PH :9727725723, 9727739550.

GANDHINAGAR

 NANDA AUTOMOBILES PVT. LTD. (2B01-2B-01), 1003,SECTOR-28,GANDHI NAGAR - 382028 PH:(079)23212692 / 93 / 94.

 NANDA AUTOMOBILES PVT. LTD. (2B01-2B-05), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028 PH. 079-23212692/93/94 9727726003.

GODHRA

 R B CARS PVT. LTD. (2C01-2C-01), PLOT NO. 112/11.,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001 PH 9099043715 972770823

 R B CARS PVT. LTD. (2C01-2C-04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001 PH:9099043715, 9727700823.

GONDAL

409. ATUL MOTORS PVT LTD (5503-AD-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY,GONDAL - 360311 PH:9904922333.

GOZARIA

 VIMCO MOTORS PVT. LTD. (GJN1-GJN-01), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825 PH :7016623842.

HALOL

411. R B CARS PVT. LTD. (BKC1-BKC-01), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350 PH 9099043715, 9727700823.

ΗΔΙ VΔΓ

412. DREAM VEHICLES PVT LTD (GX01-GX-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT). - 363330 PH :8238000965.

HANSOT

413. RAVIRATNA MOTORS (BGQ1-BGQ-01), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. -393030 PH 9687691063.

HIMMATNAGAR

KIRAN MOTORS LTD (P601-P6-01), NEAR
 G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001
 PH:9824576711.

IDER

415. KIRAN MOTORS LTD (UX01-UX-01), SURVEY NO 69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430 PH :8155994111.

JAMNAGAR

 ATUL MOTORS JAM LLP (F402-F4-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001

PH:9574004710 / 9574004716. 417. STARLINE CARS PVT. LTD. (D101-Q9-02), CHANASMA HIGHWAY. PATAN - 384265

PH :7046046187.

18. ATUL MOTORS JAM LLP (F402-F4-02), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD,

JAMNAGAR - 361002 PH:9574004704 / 9574004717.

JASDAN

419. ATUL MOTORS PYT LTD (5603-0B-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050 PH :9265404142

JHALOD

420. R B CARS PVT. LTD. (CJF1-CJF-01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA-JHALOD, DISTRICT - DAHOD. - 389170 PH :9099684363, 9099043715.

JUNAGADH

 PERFECT AUTO SERVICES (5502-K8-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001 PH:3879518052, 7043999073, 9909022618.

JUNAGARH

422. PERFECT AUTO SERVICES (5502-K8-02), PLOT NO. 81-82,G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY,

JUNAGARH - 362001 PH:9909006980, 7043999073, 9909022618.

KADI

423. STARLINE CARS PVT. LTD. (D101-UR-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH:8160707156.

KAKANPUR

424. RB CARS (SDN1-SDN-01), SURVEY NO, 618/2, PAIKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. - 388713 PH :9099049347.

KALOL

425. NANDA AUTOMOBILES PVT. LTD. (2801-FW-02), PLOT NO. - 162-168, GIDC, KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028 PH :220781 / 82 / 83.

KAPADVANJ

426. AMAR CARS PVT. LTD. (NC01-NC-01), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADWANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620 PH:990990761.

KARJAI

 AMAR CARS PVT. LTD. (UZ01-UZ-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) -391210
 PH.7567299666/99252462929

KATHLAL

 AMAR CARS PVT. LTD. (CXA1-CXA-01), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387 630 PH: 9909960761.

KESHOD

429. PERFECT AUTO SERVICES (82Y1-82Y-01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA – KESHOD, DISTRICT – JUNAGADH, GUJARAT. - 362220 PH. 7043999073.

KHAMBHAT

430. AMAR CARS PVT. LTD. (BNF1-BNF-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LL. DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620 PH :999960772.

KHEDA

 AMAR CARS PVT. LTD. (BNA1-BNA-01), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570 PH:9909960761.

KHERALU

432. STARLINE CARS (SN02-SN-01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA. - 384325 PH:9909043244. 9824601729.

KIM

 KATARIA AUTOMOBILES PVT. LTD. (UW01-UW-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110 PH 9723555185.

KODINAR

434. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (CSO1-CSO-01), R. S. NO. 222, PLOT NO. 2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720
PH -7043992893, 7043340792

KUKARWADA

435. STARLINE CARS PVT. LTD (CSC1-CSC-01), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830 PH :9909043244, 9824601729.

LAVANA

436. RB MOTORS (SLW1-SLW-01), AT PO -LAVANA, NEAR BABILIYA CROSSING, MODASA ROAD, LAVANA-389230 - 389230 PH :9860999470.

LIMBDI

437. DREAM VEHICLES PVT LTD (BSG1-BSG-01), SURVEY NO.2761, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 383421 PH :02753-261269 9227775728.

LUNAWADA

438. R B CARS PVT. LTD. (BYN1-BYN-01), SURVEY NO. 90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA, TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230 PH :9099043715, 9727700823.

MAHUVA (BHAVNAGAR)

 KATARIA AUTOMOBILES (IV03-IV-01), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290 PH:6357327534.

MANAVADAR

440. PERFECT AUTO SERVICE (CUI1-CUI-01), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA -MANAVADAR, DIST.-JUNAGADH. - 362 630 PH:7043999073.

MANDAL

441. KIRAN MOTORS LTD (IWO1-IW-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH :9408803925.

MANDVI

442. K.D. MOTORS (UY01-UY-01), PLOT NO. 25,26 & 27, RAJ COMMERCIAL, SURVEY NO. 246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465 PH. 9909953088, 98225353679.

MANGROL

443. KATARIA AUTOMOBILES PVT. LTD. (CAH1-CAH-01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH: 6357071775.

MANSA

444. NANDA AUTOMOBILES PVT. LTD. (2801-0L-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845 PH: 9727921000.

MEHMDABAD

445. AMAR CARS PVT. LTD. (BRA1-BRA-01), PATEL FALIYA, KHATRAJ, MEHMEDABAD, DIST. -KHEDA, GUJARAT. - 387130 PH:9909960761.

MEHSANA

446. STARLINE CARS PVT. LTD. (D101-D1-01), NAGALPUR HIGHWAY,MAHESANA, GUJRAT -384002 PH:9909043635.

447. TANU MOTORS PVT. LTD. (Q801-D1-04). SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH :9909006076.

Dealer Workshop (AS ON 30.05.2023)

448. VIMCO MOTORS PVT. LTD. (D103-D1-01), SURVEY NO. 104 & 104 PAIKI 1, AT P.O. -PALAVASANA, MEHSANNA, GUJARAT. - 384 002 PH: 890995333.

METODA

449. ATUL MOTORS PVT LTD (5503-BLW-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LOHIKA, DISTRICT -RAJKOT, GUJARAT - 360021 PH: 8140909095, 9924688774.

MODASA

 KIRAN MOTORS LTD (P601-CR-02), SHAMLAL JI ROAD,SABARKANTHA DIST., MODASA - 383315 PH:8155995111.

MORBI

451. PERFECT AUTO SERVICES (5502-X5-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI, TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. - 363641

PH : 9099058044, 9925199569, 9879499088.
452. DREAM VEHICLES (LC01-X5-03), NR. PRIME FILLINGS, PLOT-6, JDHARMASIDDHI VILLAGE:MAHENDRANAGAR, TALUKA: MORBI, DIST:MORBI. - 963642
PH : 7069089532.

MOTI KHAVADI

453. ATUL MOTORS JAM LLP (AAUZ-AAU-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST -JAMNAGAR, GUJARAT. 361140 PH:9574004709 / 9574004743.

MUNDRA

454. B M AUTOLINK (7702-AJ-02), PRAGPAR ROAD, MUNDRA, DISTRICT-KUTCH, GUJARAT, -370421 PH: 9687632631, 9978940978.

NADIAD

455. AMAR CARS PVT. LTD. (F702-P7-02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370 PH :9909960761.

NAKHATARANA

456. KD MOTORS (CMV1-CMV-01), PLOT NO-1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHATRANA, KUTCH - 370615 PH #RFFI

NALIYA

457. KD MOTORS (SLX1-SLX-01), AT PO - SHAKTI SOCIETY, MAHAVIR NAGAR, PLOT(1), OPP. BANK OF BARODA, NALIYA, TAL-ABDASA, KUTCH. - 370655 PH - 9909953119

NANA PONDHA

 AMAR CAR (SEL1-SEL-01), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA- KAPRADA, DIST-VALSAD -396126
 PH:7227971155.

NASWADI

459. RAVIRATNA MOTORS (SCV1-SCV-01), HOUSE NO-301,302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR - 391150 PH :9887691047.

NAVSARI

460. KATARIA AUTOMOBILES PVT. LTD. (Q701-Q7-01), PLOT NO.-891, OPP PAUVA MILL, NH-8, PLAR GANESH SISODRA CHOKDI,GANESH SISODIA NAVSARI, GUJRAT-396463 PH :9723430012.

NETRANG

461. RAVIRATNA MOTORS (CUZ1-CUZ-01), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST.-BHARUCH. - 393130 PH :9687691063.

OI PAD

 COMET CAR SALES & SERVICE PVT LTD (4006-ZZ-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH :9099916099

PADRA

 AMAR CARS PVT. LTD. (2205-OC-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. – VADODARA, GUJARAT - 391440 PH:8980036200. 8980006795.

PALANPUR

464. TANU MOTORS (Q801-Q8-01), OPP.DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001 PH -9099017756

465. STARLINE CARS PVT. LTD. (D101-Q8-08), SURVEY NO. 4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH -9824601703

PALEJ

466. RAVIRATNA MOTORS (BGR1-BGR-01), PLOT NO. 626/6, GIDC AREA, PALEJ, DISTRICT -BHARUCH - 392220 PH 9687691044; 9687632647.

PALITANA

467. KATARIA AUTOMOBILES (CSDZ-CSD-01), PLOT NO 15, YASOVIJAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BHAVNAGAR. - 364270 PH. #REF!.

PALSANA

468. KATARIA AUTOMOBILES PVT. LTD. (4004-ZF-07), BESIDE SAINATH COMPLEX, KADODARA AHMEDABAD ROAD, NH-8, UMBHEL GAM, TALUKA: PALSANA KADODARA, SURAT. - 382721 PH :9924446895.

PATDI

469. DREAM VEHICLES PVT LTD (BFS1-BFS-01), R.S. NO.1614/2, PLOT NO.16, PATDI TALUKA DASADA, DISTT. SURENDRANAGAR, GUJARAT-382765 PH 9227775709.

PAVI JETPUR

470. PERFECT AUTO SERVICES (PK01-PK-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370 PH :9999027402, 8200969617.

PETLAD

 AMAR CARS PVT. LTD. (CMW1-CMW-01), SURVEY NO. 396/2, RANGAIPUR VILLAGE, PETLAD, DIST.-ANAND. - 388450 PH :9099017068

PORBANDAR

472. ATUL MOTORS JAM LLP, (T601-T6-01), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY, PORBANDAR, DIST. PORBANDAR GUJARAT -360577 PH. 9574004746 / 7228819123.

PRANTIJ

473. KIRAN MOTORS LTD (AAI1-AAI-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAIMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205 PH :9624401888.

RADHANPUR

474. STARLINE CARS PVT. LTD. (BNI1-BNI-01), SURVEY NO. 208/A, MOUJA – RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT – PATAN, GUJARAT. - 385340 PH :9909043244, 9824601729.

RAJKOT

475. PERFECT AUTO SERVICES (5502-55-01), PERFECT HOUSE, GONDAL ROAD, VANDI, RAJKOT - 360004 PH:9879499077, 9909006982, 9825304940.

- 476. ATUL MOTORS PVT LTD (5503-55-01), PLOT NO. 49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL ESTATE, RAJKOT. 360002 PH :3140090903
- 477. PERFECT AUTO SERVICES (5502-55-04), 150 RING ROAD,OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005
- PH .9925238691, 9925117104.

 ATUL MOTORS PVI LTD (5503-55-02), BEHIND HP PUMP, UNIVERSITY ROAD , NEAR SNK SCHOOL, RAJKOT 360005 PH :8347005382
- 479. ATUL MOTORS PYT LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003 PH :9924688774.
- PERFECT AUTO SERVICES (5502-55-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006 PH:9979861995, 9925117104.
- KATARIA AUTOMOBILES PVT. LTD. (5504-55-01),
 S. NO. 10/1, TPS NO. 10, KALAVAD ROAD,
 MOTAMAVA, RAJKOT, GUJARAT. 360001
 PH:7573870001.

RAJPARDI

482. RAVIRATNA MOTORS PVT. LTD. (CAI1-CAI-01), R.S.NO.973. CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI, TALUKA-JHAGADIA, DISTT. BHARUCH - 393115 PH :9867691044; 9867632847.

RAJPIPLA

483. RAVIRATNA MOTORS PVT. LTD. (9X01-9X-01), OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145 PH:9687691062/9687645880.

RAPAR

484. B.M. AUTOLINK (SCO1-SCO-01), PARAGPAR CHAAR RASTA RAPAR GHANDHIDHAM KUTCH-370165 PH: 9727725723.

SAMI

485. STARLINE CARS (BNH1-BNH-01), SHOP NO. 55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD. - 384240 PH: 9909043244, 9824601729.

SANTEJ

486. NANDA AUTOMOBILES PVT. LTD. (CXC1-CXC-01), SUB PLOT NO. 05, SHOP NO. 3 & 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060 PH. 9727822000.

SANTRAMPUR

487. R B CARS PVT. LTD. (2C01-RY-03), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR, DISTT.-PANCHMAHAL - 389260 PH :8980585851. 9099043715.

SAVLI

488. KIRAN MOTORS LTD (CFD1-CFD-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRVA CHOWKDI, SAVLI – TIMBA ROAD, SAVIL, TALUK – SAVLI, DISTRICT – VADODARA, GUJARAT. - 391770 PH :7984799054.

SAYAN

489. KIRAN MOTORS LTD (O001-00-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIA, TALUKA: OLPAD, SAYAN - 394130 PH :8155888862/9662330480.

SAYLA

 DREAM VEHICLES (SJM1-SJM-01), LALGURU COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT SURENDRANAGAR, GUJARAT PIN 363430 -363430
 PH 9227775709.

SHANKESHWAR

491. STARLINE CARS (SLY1-SLY-01), MANIBHADRA SHOPPING CENTRE, SHANKHESHWAR HIGHWAY, SHANKHESHWAR (GUJARAT)- DIST: PATAN - 384246 PH :9824601729.

SHAPAR

492. ATUL MOTORS PYT LTD (BQZ1-BQZ-01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT – RAJKOT, GUJARAT -360024 PH :9714008492, 9624711397.

SIDDHPUR

493. STARLINE CARS PVT. LTD. (CMY1-CMY-01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA – VADGAM, DISTRICT – PATAN. - 384151 PH :9909043244 9824601729

SINOR

494. RAVIRATNA MOTORS PVT LTD (GML1-GML-01), NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD, AT AND POST SEGVA, TALUKA SINOR, DIST. VADODARA, PIN-391105, GUJARAT - 391105 PH. 7227055065

SITAPUR

495. STARLINE CARS PVT LTD (SFV1-SFV-01), SHOP NO. 2, RUDRA ARCADE, REVENUE SURVEY NO. 129. VITHLAPUR (SITAPUR) BECHARAJI – VIRAMGAM HIGHWAY, DIST. AHMEDABAD, PIN CODE: 382120 - 382120 PH: 399043244.

SONGADH

496. COMET CAR SALES & SERVICE PVT LTD (CWE1-CWE-01), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA-SONGADH, DIST.-TAPI. - 384220 PH :9099916099.

SUPEDI

497. KATARIA AUTOMOBILES (SEM1-SEM-01), SURVEY NO-482/7, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST -RAJKOT - 360440 PH :9409497902.

SURAT

- 498. KIRAN MOTORS LTD (4001-40-01), SURAT-BARDOLI ROAD, DUMBHAL, NEAR PUNA JAKAT NAKA, SURAT - 395010 PH: 9924448715/9924637898.
- 499. DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR, NEAR JEEVAN JYOT THEATRE, UDHNA MAIN ROAD, SURAT - 394210 PH 9925155911/19925155907
- KIRAN MOTORS LTD (4001-40-02),
 PANDESARA, BAMROLI ROAD, SURAT 395002
 PH 9824603880
- 501. KATARIA AUTOMOBILES PVT. LTD. (4004-40-04), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESU, SURAT. 395007 - 395007 PH :9714612700. 9924401000.
- 502. DHRU MOTORS (4002-40-18), 207, NEW INDUSTRIAL ESTATE, ROAD NO.-6, UDHNA UDYOG NAGAR, SURAT 394210 PH : 0261-2272118/ 9978900882
- KATARIA AUTOMOBILES PVT. LTD. (4004-40-05), KATARIA ARCADE, OPP. RAJHANS CINEMA, DUMAS ROAD, PIPLOD, SURAT -395007 PH. 7698022449/9624477252.
- 504. COMET CAR SALES & SERVICE PVT LTD (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH :909915995.
- 505. KATARIA AUTOMOBILES PVT. LTD. (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT -394310 PH 9024119020
- 506. KIRAN MOTORS LTD (4005-40-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009
- PH. 3924611153/9824701590.

 AMAR CARS PVT. LTD. (4009-40-02), PLOT

 NO.108.11, SURVEY NO. 7.8.9, SONARAS

 COMPOUND, NEAR DGYCL OFFICE, KARMNATH

 MAHADEV TEMPLE LANGE, KAPODARA,

 VARACHHA ROAD, SURAT 395006

 PH. 7080926512.

- 508. COMET CAR SALES & SERVICE PVT LTD (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT – SURAT, GUJARAT. - 395004 PH-9099916099.
- DHRU MOTORS (4002-40-03), PLOT NO.54/A, LAXMINARAYAN LNDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210 PH #REFI.

SURENDERNAGAR

- DREAM VEHICLES PVT LTD (LC01-LC-01), 261/P, OPP MARKETING YARD, GIDC AREA, WADHWAN CITY, SURENDERNAGAR - 363030 PH: 02752-241314 / 02752-651516/ 9227775721.
- DREAM VEHICLES (LC01-LC-02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANAGAR, GUJARAT-363030 - 363030 PH:9227775724.

TALAJA

512. KATARIA (BCI2-BCI-01), SURVEY NO-168, DHANJIBHAI BALADHIYA NI VADI, NEAR MAHUVA PALITANA CROSS ROAD, MAHUVA BHAVNAGAR HIGHWAY, TALAJA-364140. -364140 PH :9316626475.

TANKARA

513. ATUL MOTORS PYT LTD (BQY1-BQY-01), PLOT NO. 8/1, S. NO. 107, VILLAGE – JABALPUR, TALUKA – TANKARA, SUB DISTRICT – MORBI, DISTRICT – RAJKOT. - 363650 PH :9714008449, 9624711397.

TARAPUR

514. AMAR CARS PVT. LTD. (GH01-GH-01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST. -ANAND. - 388180 PH:9909960772.

THARA

515. TANU MOTORS PVT. LTD. (0V01-0V-01), SHOP NO.17 & 18, SIHORI HIGHWAY, R.B. THAKKAR COMPLEX, THARA, KAKREJ TALUKA, BANASKANTHA DISTT. 385555 PH 9909006099, 9913830329.

THARAD

 TANU MOTORS PVT. LTD. (CDM1-CDM-01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA -384220 PH:9909006099, 9724219565.

THASARA

517. KATARIA AUTOMOBILES (SIM1-SIM-01), PLOT NO 1 & 2, GIDC THASRA, BESIDES NARMADA VASAHAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250 PH.7984092780.

UMERGAON

518. KATARIA AUTOMOBILES PVT. LTD. (BNB1-BNB-01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT – VALSAD, GUJARAT. - 396170 PH :9624001794.

UMRETH

 AMAR CARS PVT. LTD. (CFE1-CFE-01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH, DIST.ANAND, GUJARAT. - 388220 PH: 9909960772.

UNA

 PERFECT AUTO SERVICES (BFD1-BFD-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMF, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. - 362560 PH : 7043928983 7043340792.

UNJHA

 TANU MOTORS (Q801-GR-02), OPP. DHANA DAL FACTORY, MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH :9727762079.

UPLETA

522. PERFECT AUTO SERVICE (CH01-CH-01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360 490 PH:9099027402, 8200969617.

VADNAGAR

523. VIMCO MOTORS PVT LTD (GKU1-GKL-01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355 PH :7016623842.

VADODARA

- KIRAN MOTORS LTD (2201-22-01),
 909/4,G.I.D.C.MAKARPURA,VADODARA 390010
 PH:9624472699.
- KIRAN MOTORS LTD (2201-22-02), PLOT NO. 160, SUB-I NUTAN GUJ.INDL.ESTATE, OLD CHHANI ROAD, VADODARA - 390002 PH: 9824207889.
- AMAR CARS PVT. LTD. (2203-22-01), GORWA ROAD, VARODARA, GUJARAT, - 390016 PH:9081311990, 9723742425, 8980036184.
- AMAR CARS PVT. LTD. (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH :7211109952
- 528. KATARIA AUTOMOBILES PVT. LTD. (2204-22-01), 984/4, GIDC, OLD NH-8, MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH :9904033422.

Dealer Workshop (AS ON 30.05.2023)

- AMAR CARS PVT. LTD. (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH: 8980006756.
- 530. KIRAN MOTORS LTD (2201-22-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH :2771122.
- 531. KATARIA AUTOMOBILES PVT. LTD. (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001 PH:8156017770.
- RAVIRATNA MOTORS PVT LTD (2206-22-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA. - 390012 PH:7227055065. 7227055064.

VALOD

533. DHRU MOTORS (CSW1-CSW-01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. -394640 PH :9712984522.

VALSAD

 KATARIA AUTOMOBILES PVT. LTD. (0104-2E-06), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020 PH :9904133306.

VANSDA

535. KATARIA AUTOMOBILES PVT. LTD. (Q701-SE-02), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT – NAVSARI, GUJARAT -396580 PH 772/JAR818R

VAPI

- KATARIA AUTOMOBILES PVT. LTD. (0104-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195 PH. 9924204423.
- 537. KATARIA AUTOMOBILES PVT. LTD. (0104-97-09), PLOT NO. 3042, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI, DISTRICT -VALSAD, GUJARAT - 369191 PH :9723462612.
- AMAR CARS PVT. LTD. (9701-97-01), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145 PH :9327909504.

VERAVAL

 PERFECT AUTO SERVICES (5502-AH-05), NR. BALIYA HANUMAM, VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265 PH:9998994550, 9898121122.

VIJAPUR

 STARLINE CARS PVT. LTD. (D101-V2-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH :9909043635.

VIRAMGAM

541. KIRAN MOTORS LTD (AAB1-AAB-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH:8156016222.

VISNAGAR

 STARLINE CARS PVT. LTD. (D101-RW-05), VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT. - MEHSANA -384315

PH :7046046174. VYARA

PH -9099916099

543. COMET CAR SALES & SERVICE PVT LTD (BIY1-BIY-01), SHOP NO. 11 & 12, BLOCK NO. 175/1/IA, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT – TAPI, GUJARAT - 394650

WAGHODIA

544. KATARIA AUTOMOBILES PVT. LTD.
(BZ1-BZZ-01), OPPOSITE BHARAT
PETROLEUM, WAGHODIA, TALUKA –
WAGHODIA, DISTRICT – VADODARA, GUJARAT.
- 391780
PH :7203013712.

WANKANER

545. ATUL MOTORS PVT LTD (BAL1-BAL-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621 PH -9904922333

HARYANA

ADAMPUR (HARYANA)

546. SARAOGI AUTOMOBILES (P) LTD. (CWW2-CWW-01), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 442/11/2(1-0), MANDI ADAMPUR, TEHSIL - ADAMPUR, DIST.-HISSAR, STATE - HARYANA. - 125052 PH:8607777153.

AMBALA

 MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003
 PH:9215016044.

- 548. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003 PH :9215016044.
- EAKANSH WHEELS (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001
 PH 9991703000
- EAKANSH WHEELS (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001 PH :88813874888.
- TR SAWHNEY (1803-18-01), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003 PH :9990110068.

ASSANDH

 KARNAL MOTORS PVT. LTD. (8906-CS-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032 PH:7082111325.

BABARPUR

553. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CKX1-CKX-01), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103 PH.7003396727.

BAHADURGARH

 COMPETENT AUTOMOBILES CO. LTD. (2G02-2G-01), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124 507 PH: 8929648144.

BAPOLI

555. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CWI1-CWI-01), KHEWAT NO. 136, VILLAGE – JHAMBA, TEHSIL – BAPOLI, DISTRICT – PANIPAT. - 132103 PH :9053400583.

BARARA

 EAKANSH WHEELS (NX01-NX-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA -133201 PH :9991478100.

BARWALA

557. MODERN AUTOMOBILES (BSA2-BSA-01), KHEWATI/KHOTONI NO. 388, KHASARAN NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118 PH :9896217059.

BAWAL

558. DINCO 4 WHEELS LLP (AUTO VIBES)
(BBD2-BD-1), KHATA NO. 326 AND KHATAUNI
NO. 362, OPPOSITE PRATHAM HOUSING, NH-8,
BAWAL, DISTRICT – REWARI, HARYANA. 123801
PH :7082100250.

BHIWANI

 JAGMOHAN MOTORS PVT LTD (X301-X3-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021 PH :8685005592.

BILASPUR

560. PANDIT AUTOMOBILES PVT. LTD. (BGH1-BGH-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT – YAMUNANAGAR, HARYANA. - 135102 PH :9992113854.

BILASPUR (HARYANA)

561. PLATINUM MOTOCORP LLP (2L04-CIA-02), KHASRA NO. 5467, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT – GURUGRAM. - 122413 PH:9953345329/9953345403.

CHARKHI DADRI

562. JAGMOHAN MOTORS PVT LTD (X301-CT-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306 PH : 8059900538

CHEEKA

 EAKANSH MOTORS PVT. LTD. (U802-HU-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034 PH: 8053086000.

CHHACHHARAULI

564. PANDIT AUTOMOBILES PVT. LTD. (CQZ1-CQZ-01), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL - CHHACHHRAULI, DISTRICT - YAMUNA NAGAR. - 135103 PH :9812455895.

DADRI TOE

565. COMPETENT AUTOMOBILES CO. LTD.
(BVH2-BVH-01), KHEWAT NO. – 270 MIN,
KHATONI NO. – 319,
DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN
124103 - 124103
PH :9821308849.

DAHINA

566. DINCO 4 WHEELS LLP (AUTO VIBES) (GLH1-GLH-01), REWARI MAHENDERGARH ROAD, NEAR RAILWAY STATION, DAHINA, REWARI - 123411 PH :7082100201.

DHAND

EAKANSH MOTORS (BEU1-BEU-01),
 PANCHMUKHI CHOWK, KARNAL ROAD, DHAND,
 DISTT. KAITHAL, HARYANA. - 136020
 PH:8395906111.

DHARUHERA

568. DINCO 4 WHEELS ILP (AUTO VIBES) (CRP1-CRP-01), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI. PH. 7082100270.

ELLENABAD

569. SHAKTI MOTORS PVT.LTD. (E401-IN-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD -125055 PH :8222900250.

FARIDABAD

 VIPUL MOTORS PVT. LTD. (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002 PH :2555011 2555013 97114 14556.

 VIPUL MOTORS PVT. LTD. (5801-58-03), UNIT-II, PLOT NO. 1A 1916, MATHURA ROAD, FARIDABAD - 121006 PH :4286000 4286024

9311321419. 2. TCS AUTOMOBILES (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD. - 121001

PH :4292929; 7503036200.

73. FAIR DEAL PREMIUM WHEELS PVT.LTD.
(5807-58-01), PLOT NO.-17A, NIT INDUSTRIAL
AREA, NIT FARIDABAD - 121003
PH :844879688B

574. TCS AUTOWORLD PVT. LTD. (TCS & ASSOCIATES PVT. LTD.) (5804-58-02), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. - 121003 PH :2277225, 7290082911.

575. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-58-01), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003 PH :4180500 7290032501.

576. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-58-02), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. -121006 PH. 74287 48467.

FARRUKHNAGAR

577. PLATINUM MOTOCORP LLP (KE01-KE-01), KHEVAT NO. 299, MUSTIL NO. -12, KHASRA NO. -19/3 AND 22/2, VILLAGE – SEHADPUR MOHAMADPUR, TEHSIL – FARRUKHNAGAR, DISTRICT – GURGAON. - 122506 PH -9599007357/9953345380.

FATEHABAD

578. SHAKTI MOTORS PVT.LTD. (2H02-2H-01), NH-10, SIRSA ROAD, FATEHABAD - 125050 PH:8222900217.

GANAUR

 JAGMOHAN AUTOMOTIVES PVT. LTD. (NA04-NA-01), RAILWAY ROAD, GANAUR -131101
 PH :8199911106.

GHARAUNDA

 KARNAL MOTORS PVT. LTD. (8906-MR-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114 PH:8222022321.

GOHANA

881. JAGMOHAN AUTOMOTIVES PVT. LTD. (CU03-CU-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. -SONEPAT - 131301 PH :8685005521.

GURGAON

582. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006 PH

:09650790323/7290069623/9999239959/4952100. 53. VIPUL MOTORS PVT. LTD. (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001 PH :4395701 4395704

8448487921.

3.

584. COMPETENT AUTOMOBILES CO. LTD. (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004 PH :42500002, 98827977735

585. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, -122015

PH: 07015804442/7982087767/9650701958/ 568. ROHAN MOTORS LTD. (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001 PH :08880076163/8130593202/8130593201/813059320 VIPUL MOTORS PVT. LTD. (5801-95-04), PLOT NO.5/22/1, SARHAUL VILLAGE, SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102 PH: 4395800 4395806

844948936.
88. PREM MOTORS PVT. LTD. (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON - 122017

PH:4337900.7065003445.

 PREM MOTORS PVT. LTD. (9512-95-01), PLOT NO. 3,IDC, OPPOSITE SECTOR-14, GURGAON -122001 PH :7065003373, 7065003377, 0124-4319000.

RANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON - 122001 PH -4867777, 9873400882.

591. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001 PH:9953669444/9953669222.

 PREM MOTORS PVT. LTD. (9512-95-02), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017 PH: 4337933, 7065003442.

593. PLATINUM MOTO CORP (2L04-95-03), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL GURGAON HARYANA -122018 PH 9953345370/9899118867.

 PREM MOTORS (9512-95-G1), QILA NUMBER 8/2, MUSTAKIL NO - 25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015 PH :8800000817.

HANSI

595. JAGMOHAN MOTORS PVT LTD (GT02-GT-01), G T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI - 124001 PH :8059900546.

HISAR

MODERN AUTOMOBILES (7602-76-01), OPP.
 VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005
 PH: 9355473000.
 SARAOGI AUTOMOBILES (P) LTD. (7604-76-01).

597. SARAOGI AUTOMOBILES (P) LTD. (7604-76-01).
5TH KM STONE, SIRSA ROAD, HISSAR,
HARYANA - 125001
PH:8607777043.

598. MODERN AUTOMOBILES (7602-76-02), OPP. BBMB, HISSAR DELHI ROAD, HISSAR - 125001 PH:9355473000.

599. UNIQUE MOTORS PVT. LTD. (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD,HISSAR (HARYANA) - 125006 PH :8818055535.

HODAL

 ROHAN MOTORS (EE01-UE-02), KILA NO. 8/2(7-11), 9(5-06), 12(5-0), 13(8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DIST.-PALWAL. PH. 8930202088: 9413080376.

ISMAILABAD

601. KARNAL MOTORS PVT. LTD. (1901-19-01), KHEWAT NO. 928, KHASRA NO. 2760(5-14), 2761(600), VILLAGE : ISMAILABAD, TEHSIL -PEHOW, DIST.-KURUKSHETRA, HARYANA. - 136 129 PH. 7082007138.

ISRANA

602. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (1802-18-01), MUSHTIL NO. -119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132107 PH -9053400417.

JHAJJAR

603. COMPETENT (0802-08-01), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101 PH: 9999493040.

JIND

604. EAKANSH MOTORS PVT. LTD. (2K01-2K-01), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102 PH:7876008184.

JULANA

605. EAKANSH MOTORS PVT. LTD. (MA01-MA-01), JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101 PH:8816802111.

KAITHAL

606. EAKANSH MOTORS PVT. LTD. (U802-U8-01), AMBALA ROAD, NH-65, KAITHAL - 136027 PH:9671788801.

KALANAUR

607. JAGMOHAN MOTORS (SPQ1-SPQ-01), BHIWANI ROAD, KALANAUR, DISTRICT ROHTAK. - 124113 PH:9812000425.

KALAYAT

608. EAKANSH MOTORS PVT. LTD. (B.P1-BJP-01), NEAR BUS STAND, KAITHAL-KALAYAT ROAD, VILLLAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117 PH :967178801.

KALKA

609. MODERN AUTOMOBILES (EG02-EG-01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302 PH 9896217059.

KARNAL

- KARNAL MOTORS PVT. LTD. (8906-89-01), 71/3
 MILESTONE , G.T.ROAD, KARNAL 132001
 PH :8222022399
- 611. KARNAL MOTORS PVT. LTD. (8906-89-02), KHEWAT NO. 59, JHANJHARI GT ROAD, KARNAL - 132001 PH :8222022430.
- 612. MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL -132001 PH: 7419900042.

KATHURA

613. JAGMOHAN AUTOMOTIVES (SFJ1-SFJ-01), GOHANA MAHAM ROAD, KATHURA, GOHANA. -131301 PH: 8685005400.

KHARKHODA

614. JAGMOHAN AUTOMOTIVES PVT. LTD. (BU02-BU-01), NEAR KANYA GURUKUL MAHAVIDYALYA, DELHI ROAD, NEAR UNION BANK, KHARKHODA (HARYANA) - 131402 PH :8685005593

KOSLI

615. DINCO 4 WHEELS LLP (AUTO VIBES)
(CAN1-CAN-01), OPPOSITE RAJIV GANDHI
STADIUM, TEHSIL ROAD KOSLI, DISTRICT –
REWARI, HARYANA . - 123302
PH :7082100202.

KUND

616. DINCO 4 WHEELS LLP (AUTO VIBES) (CJL1-CJL-01), NEAR KUND BARRIER, OPP. SBI BANK, NARNAUL ROAD, VILLAGE - MANETHI, KUND, DISTRICT - REWARI, HARYANA . - 123102 PH :85699828 - 3082100000.

KUNDLI

 JAGMOHAN AUTOMOTIVES PVT. LTD. (GU03-GU-01), 34 E, SECTOR 57, PHASE 4, KUNDLI INDUSTRIAL AREA, KUNDLI - 131001 PH: 8059900518.

KURUKSHETRA

618. KARNAL MOTORS PVT. LTD. (8906-U6-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA - 136 118 PH :822022371.

LADWA

619. KARNAL MOTORS PVT. LTD. (CRA1-CRA-01), KHEWAT NO. 197, KHATONI NO. 233, KHASRA NO. 27/17/1/27/14, LDAWA-KURUKISHETRA ROAD, VILLAGE - LADWA, TEHSIL THANESAR, DISTT. KURUKSHETRA - 136132 PH. 7082007182.

LOHARU

 JAGMOHAN MOTORS (HB02-HB-01), BHIWANI ROAD, OPP. ITI, CITY: LOHARU - 127201 PH:9812000425.

MADLAUDA

621. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (CFK2-CFK-01), VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD, MADLAUDA, PIN-132113, HARYANA - 132113 PH-9053400524.

MAHENDARGARH

622. PLATINUM MOTO CORP (DP01-DP-01), KHEWAT NO. 187, KILAN NO. 51/8, REVENUE ESTATE OF VILLAGE REWASA, DADRI ROAD, TEHSIL & DISTRICT, MAHINDERGARH, PIN-123029, HARYANA - 123029
PH :9566136120, 9053088490.

MANDI DABWALI

623. SHAKTI MOTORS PVT.LTD. (E401-KU-02), SANGARIA ROAD, DABWALI, DISTT.-SIRSA -125104 PH :8222900209.

MANESAR

624. PLATINUM MOTOCORP LLP (2L04-2L-01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052 PH :09953345326/9953345324/9910100341.

MEHAM

625. JAGMOHAN MOTORS PVT LTD (A601-NZ-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101 PH :8059900592

MOHNA

626. TCS & ASSOCIATES PVT LTD (CRT1-CRT-01), YAMUNA PUL ROAD , NEAR GYATRI PETROL PUMP , VPO-MOHANA, TEHSIL BALLABGARH , DISTT FARIDABAD - 121004 PH :9911573130. 8929579400.

MUSTAFABAD

 PANDIT AUTOMOBILES PVT. LTD. (CDX1-CDX-01), KHATUNI NO. 205/287, KHASRA NO. 39:17/2, VILLAGE - MANSURPUR, THANA -CHAPPER, MUSTAFABAD, DIST.-YAMUNA NAGAR, STATE - HARYANA. - 133 103 PH :9992113854.

NARAINGARH

628. EAKANSH WHEELS (1802-CV-02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203 PH :9991143700.

NARNAUL

629. PLATINUM MOTOCORP LLP (9Q02-9Q-01), KAILASH NAGAR, REWARI ROAD, NARNAUL, HARYANA, - 123001 PH

:09053088460/9582226838/9053088501/905308845

NARNAUND

1/9053088500.

630. JAGMOHAN MOTORS (SDK1-SDK-01), KHASRA NO. 234, HANSI ROAD, NARNAUND, DISTT. HISAR, HARYANA. - 125039 PH :3812000471.

NARWANA

 EAKANSH MOTORS PVT. LTD. (U802-CW-03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116 PH:9813583100.

NUH

632. PASCO AUTOMOBILES (T/102-TL-01), MAIN DELHI - ALWAR ROAD, NEAR SHAHEED PARK, NH -248A, NUH, DISTRICT - MEWAT, HARYANA. - 122107 PH :9810014947.

PALWAL

633. ROHAN MOTORS LTD. (EE01-EE-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101 PH :304100 ; 304107/8930202060.

PANCHKULA

- 634. MODERN AUTOMOBILES (0702-K3-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113 PH - 9646000168
- AUTOPACE NETWORK PVT LTD (0705-K3-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113 PH:7087119847.
- 636. AUTO VOGUE PVT. LTD. (K303-K3-01), PLOT NO- 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113 PH: 8558813181.

PANIPAT

637. AUTO GALLERY/A UNIT OF RKH AUTOMOBILES PLTD) (D302-D3-01), KHASRA NO. 43/6, 44/9 & 10. VILLAGE – JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA. -132103 PH :9053400515.

PATAUDI

638. PLATINUM MOTOCORP LLP (BY03-BY-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503 PH: 9953345381/9953345488/9953345330.

PEHOWA

639. KARNAL MOTORS PVT. LTD. (2M02-2M-01), NEAR SHARMA SERVICE STATION, KURUKSHETRA ROAD, PEHOWA - 136128 PH :8053906011.

PUNDRI

640. EAKANSH MOTORS PVT. LTD. (BFF1-BFF-01), KILA NO- 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026 PH-9671788801.

PUNHANA

641. PASCO AUTOMOBILES (BIU1-01-BIU-01), KILA NO. 4/2, PUNHANA, DIST.-MEWAT, HARYANA -122508 PH:9991300950, 8059730879.

RADAUR

642. PANDIT AUTOMOBILES PVT. LTD. (D201-EN-02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA -135001 PH :9992113854.

RAJOUND

643. EAKANSH MOTORS (SHV1-SHV-01), MITTAL KHAL BHANDAR, RAJOUND, DISTT KAITHAL -136044 PH:9671788801.

REWARI

644. DINCO 4 WHEELS LLP (AUTO VIBES) (U102-U1-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401 PH :7082100200/7082100204/7082100201.

ROHTAK

- 645. JAGMOHAN MOTORS PVT LTD (A601-A6-01), SONEPAT ROAD, ROHTAK - 124001 PH :9467465035.
- 646. JAGMOHAN MOTORS PVT LTD (A601-A6-09), SWAN GARDEN, DELHI ROAD, ROHTAK -124001 PH:9812000357.
- 647. UNIQUE AUTO LEAD LLP (A602-A6-01), KHASRA NO- 3597 JIND ROAD, JIND CHOWK, ROHTAK, HARYANA - 124001 PH:#8FFI

SAFIDON

 EAKANSH MOTORS PVT. LTD. (U802-JU-05), NEAR BRSK SCHOOL, OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT- JIND - 126112 PH :9416616603.

SAMPLA

649. JAGMOHAN MOTORS PVT LTD (NY01-NY-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501 PH :9812000351.

SATNALI

650. PLATINUM (SLH1-SLH-01), KHEVAT NO 605, KHATONI NO-1134 KILA NO 167, VILL: SATNALI, NEAR BHARAT PETROL PUMP MAHENDRAGARH ROAD, HARYANA -123024 (LOCATION: MAHENDRAGARH) - 123024 PH :991100341.

SHAHABAD

651. KARNAL MOTORS PVT. LTD. (CCR2-CCR-01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST.-KURUKSHETRA. - 136135 PH 8222022338.

SIRSA

652. SHAKTI MOTORS PVT.LTD. (E401-E4-01), DABBALI RD., SIRSA, HARYANA - 125055 PH:8222900201.

SIWANI

653. SARAOGI AUTOMOBILES (P) LTD. (HA03-HA-01), OPP.GOVT HOSPITAL ,SIWANI BYPASS CHOWK,HISSAR ROAD ,SIWANI,DIST.BHIWANI -127046 HARYANA - 127046 PH :8607777149

SOHNA

654. PASCO AUTOMOBILES (9506-KZ-03), 56, KILLA NO. 13 (4-10), 18(4-6), 19 (8-0), 22 (8-0), 23 (4-2), VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA , DISTRICT -GURUGRAM. -122103 PH 108683000902/9873711127/8683000919

SONIPAT

655. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001 PH: 9992200372.

656. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001 PH :8685005686

657. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-03), O-11 INDUSTRIAL AREA, SONIPAT, HARYANA. - 131001 PH:9812615000.

TAURU

658. PASCO AUTOMOBILES (BIV1-BIV-01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA. - 122015 PH :8683000902, 9873001497, 8683000954, 9671150250,9034926253.

TIGAON

659. TCS (5804-S.IY-01), TCS AUTOWORLD, ARYAN PLAZA, NEEMKA BHUPGARH, TIGAON-BALLABGARH ROAD, FARIDABAD, PIN-121004, HARYANA - 121004 PH :9971422444

TOHANA

 SHAKTI MOTORS PVT.LTD. (XP01-XP-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120 PH :8572800991

TOSHAM

661. JAGMOHAN MOTORS PVT LTD (0Y01-0Y-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040 PH: 8059900566.

YAMUNANAGAR

662. PANDIT AUTOMOBILES PVT. LTD. (D201-D2-01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001

PH: 3812455986.

3. PANDIT AUTOMOBILES PVT. LTD. (D201-D2-03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001
PH: 3812455898.

HIMACHAL PRADESH

ALAMPUR

664. KANGRA VEHICLEADES (RL01-RL-01), KHASRA NO. 1606/1582, STATE HIGHWAY PALAMPUR-SUJANPUR AT JANGAL, VILLAGE -ALAMPUR, DIST.-KANGRA. - 176082 PH :8988002269

BADDI

665. GOYAL MOTORS PYT LTD (7D01-CIF-04), KHATAKHATAUNI NO. 2626, KHASRA NO. 93/56/32 AND 94/56/32, KITAS 2, REVENUE MAUZA – CHAK JANGI, HADBAST NO. 203, TEHSIL – BADDI, DISTRICT – SOLAN, HIMACHAL PRADESH. - 173205 PH :94/81076972.

BAIJNATH

666. KANGRA VEHICLEADES (BBC1-BBC-01), TASHI JONG, PAPROLA-BAIJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAIJNATH, DISTT. KANGRA - 176115 PH :8628820603.

NIKHE

667. PATHANKOT VEHICLEADES PVT. LTD. (BWN1-BWN-01), KHASRA NO.709, KHATA KHATOONI NO.23, BANIKHET, THE-DALHOUSIE, DISTT. CHAMBA - 176303 PH. 254186, 23206, 9418048803.

BILASPUR

668. COMPETENT AUTOMOBILES CO. LTD. (6Y01-6Y-01), KHEWAT NO. 8/B KHATALINI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. – CHANDPUR, TEHSIL – SADAR, DIST. BILASPUR, HIMACHAL PRADESH. - 174001 PH : 7807 168832 7807800330 / 7807800440.

CHAMBA

 KANGRA VEHICLEADES (D902-JF-03), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310 PH:9418059252. 9418045778.

 KANGRA VEHICLEADES (D902-JF-05), KHASRA NO. 88/96,1 & KHASRA NO. 628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310 PH: 94/18059252, 94/180/1810.

CHOWARI

671. PATHANKOT VEHICLEADES PVT. LTD. (CWV1-CWV-01), KHATA KHATNI NO. 24/32 MIN, KHASRA NO. 90, VILLAGE - LAHRU, P.O. -PARCHHORE, TEHSIL - BHATTIYAT, DIST. -CHAMBA, HAMACHAL PRADESH. - 144416 PH: 8894569632.

DEHRA

672. KANGRA VEHICLEADES (D902-HT-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101 PH :9817013058.

GAGGAL

673. KANGRA VEHICLEADES (BBV1-BBV-01), NATIONAL HIGHWAY-20, ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA, HIMACHAL PRADESH - 176209 PH '9418988832'

HAMIRPUR

674. COMPETENT AUTOMOBILES CO. LTD. (W901-W9-01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401 PH: 9805510276.

INDORA

675. PATHANKOT VEHICLEADES PVT. LTD. (BHE1-BHE-01), VILLAGE CHANDOR, PO & TEHSIL INDORA, DISTT. KANGRA, PIN-176401, HIMACHAL PRADESH - 176401 PH:9418008627.

JAISINGHPUR

676. KANGRA VEHICLEADES (BVA1-BVA-01), HARSI PATTAN ROAD, OPP. SABJI MANDI, TEHSIL – JAISINGHPUR, DIST. – KANGRA, HIMACHAL PRADESH. - 176095 PH :9418477756.

JAWALI

677. PATHANKOT VEHICLEADES PVT. LTD.
(BXE1-BXE-01), VILLAGE - TIUKARI, NEAR
MAHAVIR HOSPITAL LUBH ROAD, TEHSIL JAWALI, DIST.-KANGRA, HAMACHAL PRADESH.
- 176023
PH: 9418195333.

JOGINDER NAGAR

678. COMPETENT AUTOMOBILES CO. LTD. (BB01-BB0-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015 PH: 9805005754.

JWALAMUKHI

679. KANGRA VEHICLEADES (CND1-CND-01), KHASRA 880/613, MAUJA BOHAN, TEHSIL JWALAMUKHI, DISTRICT KANGRA - 176031 PH: 9418488999.

KULLU

680. COMPETENT AUTOMOBILES CO. LTD. (2Q01-2Q-01), PLOT 38.4, INDUSTRIAL AREA, SHAMSHI, KULLU (HP) - 175126 PH:7018035136.

KUNIHAF

681. GOYAL MOTORS PVT LTD (BBX1-BBX-01), KHATA NO. – 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSHIL – ARKI, DISTRICT – SOLAN, HIMACHAL PRADESH - 173207 PH :9418312472.

MANALI

682. COMPETENT AUTOMOBILES CO. LTD. (BKU1-BKU-01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131 PH :9418387465.

MANDI

683. COMPETENT AUTOMOBILES CO. LTD. (B301-B3-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI-124501 PH 9805513208/9816664891

NADAUN

684. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO. 183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041 PH :9805737436.

NAGROTA

 KANGRA VEHICLEADES (D902-D9-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047 PH :7018268819

NAGROTA BAGWAN

686. KANGRA VEHICLEADES (D902-D9-06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047 PH :7018268819.

NAGROTA SURIAN

687. KANGRA VEHICLEADES (BGI1-BGI-01), KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037, MAHAL BASSA, SUB TEHSIL – NAGROTA SURIAN, DISTRICT – KANGRA. - 176027 PH :9814848999.

NALAGARH

688. GOYAL MOTORS PVT LTD (IB02-IB-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) -174101 PH: 9418704572.

NERWA

89. GOYAL MOTORS PVT LTD (CRS1-CRS-01), KHASRA NO. 482, VILLAGE – KEDI, TEHSIL – NERWA, DISTRICT – SHIMLA, HIMACHAL PRADESH. - 171210 PH. 39418663572.

NURPUR

690. KANGRA VEHICLEADES (D902-JG-04), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201 PH :9418195333 , 9418041778.

PALAMPUR

691. KANGRA VEHICLEADES (2T01-2T-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061 PH :9418222622/ 9463265072.

PAONTA SAHIB

692. GOYAL MOTORS PYT LTD (A901-8G-02), OPP BIBIJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR, NH-72, PAONTA SAHIB -173025 PH :9459210872.

RAJGARH

693. GOYAL MOTORS PVT LTD (BJX1-BJX-01), KHATA NO. 517/505, 478/3, KHASRA NO. - 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL - RAJGARH, DISTRICT - SIRMAUR, HIMACHAL PRADESH - 173/101 PH :94/183/12472.

RAMPUR

694. GOYAL MOTORS PYT LTD (CEZ1-CEZ-01). KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL – RAMPUR, DISTRICT – SHIMLA. -172001 PH: 9459296572.

ROHRU

695. GOYAL MOTORS PVT LTD (JZ01-JZ-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207 PH :9418016072.

SALOONI

696. PATHANKOT VEHICLEADES (SES1-SES-01), KHASRA NO. 299/174, VILLAGE. MANJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320 PH :99418059252.

SHAHPUR

697. KANGRA VEHICLEADES (SCR1-SCR-01), VILLAGE MANJHGRAN, P.O. DRAMMAN, TEHSIL SHAHPUR, DISTT. KANGRA, HIMACHAL PRADESH - 176206 PH :9459900241.

SHIMLA

698. GOYAL MOTORS PVT LTD (A901-A9-01), TARADEVI, SHIMLA,(H.P.) - 171010 PH:9418663572.

SOL AN

699. GOYAL MOTORS PVT LTD (7D01-7D-01), DEON GHAT, SOLAN - 173211 PH :9418138772.

UNA

700. COMPETENT AUTOMOBILES CO. LTD. (QD01-QD-01), VILLAGE RAINSARY, P.O. JHALERA, TEHSIL & DISTRICT: UNA - 174303 PH: 9805737436.

JAMMU

MARH

 JAMKASH VEHICLEADES PVT. LTD (BPM1-BPM-01), KHASRA NO. 269, LOWER MUTHI DHARMAL, DIST.-JAMMU, STATE -JAMMU & KASHMIR. - 181205 PH:7006898474.

JAMMU & KASHMIR

CHOWKI CHOURA

702. JAMU MOTORS (SDY1-SDY-01), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154 PH :9590975060.

MAHANPUR

 JAMMU MOTORS (SPK1-SPK-01), MAHANPUR, DISTRICT KATHUA, TEHSIL MAHANPUR -JAMMU & KASHMIR. - 184202 PH :9596975060.

MANJAKOTE

704. JAMKASH VEHICLEADES (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NEAR PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE, DISTRICT RAJOURI, J&K. 188131 PH. 7006014395.

VIJAYPUR

 JAMMU MOTORS (OZ02-01-OZ-01), JAMMU PATHANKOT HIGHWAY, VIJAYPUR (SAMBA), J&K - 184120 PH :9596975060.

JAMMU AND KASHMIR

AKHNOOR

 JAMMU MOTORS PVT. LTD. (2X02-2X-01), MAIN ROAD DASKAL, TEHSIL – AKHNOOR, DISTRICT – JAMMU - 181201 PH :9419118393.

ANANTNAG

 PEAKS AUTO PVT. LTD. (2Y01-2Y-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165 PH: 9519275151.

BANDIPORA

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-OA-04), AJAR BANDIPORA, J&K - 193502 PH:9149726427

BARAMULLA

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (8C01-8C-01), VILLAGE SANGRAMA, WAGAROO, BARAMULA - 193101 PH : 7899612218.

BHADRAWAH

 J& K VEHICLEADES PVT. LTD (AKA1-AKA-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K -182222
 PH -9419796821

BHASOLI

711. JAMKASH VEHICLEADES PVT. LTD. (GLK1-GLK-01), ZERO MORTH, BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201 PH. 9018847230.

BUDGAM

 HIGHLAND AUTOMOBILES PVT.LTD (1202-CUG-04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM. - 191111 PH -9419019080

DAYALACHAK

713. JAMKASH VEHICLEADES PVT. LTD (BFH1-BFH-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK,TEHSIL & DISTT. KATHUA, JAMMU & KASHMIR - 184121 PH: 88492849170.

DODA

 J& K VEHICLEADES PVT. LTD (2Z02-2Z-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202 PH: 9419796821.

GANDERBAL

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (ZA01-ZA-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201
 PH: 9419000828.

HANDWARA

716. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (BYA1-BYA-01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO- 3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST-KUPWARA, J&K - 193221 PH :262322, 9419074012.

JAMMU

 JAMKASH VEHICLEADES PVT. LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015 PH: 6006801639.

 JAMKASH VEHICLEADES PVT. LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001 PH: 9419224014.

 JAMKASH VEHICLEADES PVT. LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011 PH:7006018600.

720. PEAKS AUTO JAMMU PVT. LTD. (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010 PH: 9697001125.

 JAMMU MOTORS PVT. LTD. (3308-33-01), 6, AKHNOOR ROAD, JAMMU. - 180001 PH: 9419118393.

 JAMMU MOTORS PVT. LTD. (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002 PH: 9419118393.

723. PEAKS AUTO JAMMU PVT. LTD. (3312-33-02), KHASRA NO. 425 & 426, KHAITA NO. 425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001 PH:9697001125.

724. JAMKASH VEHICLEADES PVT. LTD (3306-33-07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. -180007 PH 9419191502

KATHUA

 JAMMU MOTORS PVT. LTD. (3802-38-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101 PH: 9419118393.

KULGAM

726. PEAKS AUTO PVT. LTD. (OY01-OY-01), NEAR GRID STATION,MAIN ROAD, KULGAM - 191202 PH:9519275151.

KUPWARA

727. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-AX-03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223 PH :9622499902.

MAGAM

728. JAMKASH VEHICLEADES PVT. LTD (GLS1-GLS-01), KHASRA NO. 34, MOUZA -CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST.-BARAMULLA, JAMMU & KASHMIR. - 193 401 PH: 8825016048.

PHINTER

729. JAMKASH VEHICLEADES PVT. LTD (BHV1-BHV-01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203 PH.9419187583.

POONCH

 JAMKASH VEHICLEADES PVT. LTD (AAW1-AAW-01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121 PH: 7006014395.

PULWAMA

 PEAKS AUTO PVT. LTD. (1204-MU-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301 PH: 9519275151.

RAJOURI

 JAMKASH VEHICLEADES PVT. LTD (3306-KS-06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI - 185131 PH :7006014395.

RS PURA

 JAMKASH VEHICLEADES PVT. LTD (3306-JN-03), GAGAIN MORTH, R S PURA, JAMMU, - 181102 PH:9419190370.

SHOPIAN

 PEAKS AUTO PVT. LTD. (AAA1-AAA-01), AGLAR SOFANAMAN, SHOPIAN - 192303 PH:9519275151.

SIDHRA

735. JAMKASH VEHICLEADES PVT. LTD (ODL1-CDL-01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019 PH. 9491934144.

SRINAGAR

- HIGHLAND AUTOMOBILES PVT.LTD (1202-12-01), SONWAR, SRINAGAR - 190001 PH:9419057564.
- JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-12-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015 PH:7006037255.
- 738. PEAKS AUTO PVT. LTD. (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101 PH - 9519275151
- 739. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-12-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017 PH :9796700750

SUNDERBANI

 PEAKS AUTO JAMMU PVT. LTD. (AAM3-AAM-01), MOUZA THANDA PANI, TEH. SUNDERBANI -185153
 PH:3697001125.

SURANKOTE

741. PEAKS AUTO JAMMU PVT. LTD. (TYG3-TY-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101 PH 9687001125

THANA MANDI

742. JAMKASH VEHICLEADES PVT. LTD. (SO01-SO-01), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI -185212 -185212 PH :9419267607.

UDHAMPUR

 J& K VEHICLEADES PVT. LTD (D801-D8-01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101 PH :7006881028.

URI (CHAAL BONIYAAR)

744. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (CCK1-CCK-01), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123 PH 9419072012

JHARKHAND

BAGODAR

 RELIABLE INDUSTRIES PVT. LTD.
 (BHA1-BHA-01), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRDIH, JHARKHAND. - 825322 PH :9507102036 9835814404.

BAI IAPLIR

 CARONE (SNI1-SNI-01), WARD NO 53, HOLDING NO - SAF3797, KANDRA SINDRI, BALIAPUR. -828123 PH : 7980074787.

BOKARO

- HINDUSTAN AUTO AGENCY (B501-B5-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004 PH :9831550033/7070403002/9431128683.
- HINDUSTAN AUTO AGENCY (B501-B5-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) - 827004 PH: 9431127983/9431126883.

CHAIBASA

749. PEBCO MOTORS (BOY1-BOY-01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT - WEST SINGHDHUM, JHARKHAND. - 833201 PH. 7070449718.

CHANDWA

750. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (SCS1-SCS-01), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA – 829203, DIST – LATEHAR, JHARKHAND - 829203
PH :7061157502.

CHIRKUNDA

 RELIABLE INDUSTRIES (COT1-CQT-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. – CHIRKUNDA, DISTRICT – DHANBAD, JHARKHAND. - 828202 PH :9905937751 9835814404.

DALTONGANJ

752. PREMSONS MOTORS UDYOG PVT LTD (5103-MP-02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101 PH :9835507004.

DEOGHAR

753. RELIABLE INDUSTRIES (5202-KR-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, -814112 PH :6207129088 7001553251.

754. RELIABLE INDUSTRIES (KR02-KR-01), MOUZA -CHAKRIPAHARI, NO. 587, WARD NO. 36, DEOGHAR, JHARKHAND. - 814114 PH :9835811220. 9835814404.

DHANBAD

755. RELIABLE INDUSTRIES (5202-52-01), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001 PH :9835830202 7369945040.

756. RELIABLE INDUSTRIES (5202-52-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIDHELA, DHANBAD - 828127 PH: 8102333474 7369945043.

 RELIABLE INDUSTRIES (5202-52-06), SUGIADIH, HIRAK ROAD, SARAIDHELA, DHANBAD, JHARKHAND. - 828127 PH: 9334094940.

 CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (5205-52-01), NH-2, GT ROAD, SAHARJORI, BARWADA, DHANBAD. - 828 109 PH :9006828000, 9835740433.

759. RELIABLE INDUSTRIES (5202-52-09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 828109 PH 9031096662.

DUMKA

 RELIABLE INDUSTRIES (L701-L7-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101 PH :6205161170.

GARHWA

761. PREMSONS MOTOR UDYOG PVT. LTD. (VX01-VX-01), KHATA NO. 4, KHESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114 PH: 3862828802 9835507004.

GHATSHILA

762. PEBCO MOTORS LTD. (AIA1-AIA-01), PLOT NO. 68, KHASRA NO.128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK, GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303 PH :930843338.

GIRIDIH

763. RELIABLE INDUSTRIES (5202-3D-04), MOHANPUR, PACHAMBA ROAD, GIRIDIH. -815301 PH :8102924860 8102024858

764. RELIABLE INDUSTRIES PVT. LTD (5202-3D-08), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND. - 815301 PH :9835835101.

GODDA

 RELIABLE INDUSTRIES (5202-EJ-05), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133 PH :6207129088.

GUMLA

766. PREMSONS MOTOR UDYOG PVT. LTD. (5103-20-04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207 PH :9835507004.

HAZARIBAGH

 HINDUSTAN AUTO AGENCY (Y901-Y9-01), NEAR.
 SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. -825301
 PH. 9304051949, 9263631327.

768. HINDUSTAN AUTO AGENCY (Y901-Y9-02), MASIPIRHI, BABHANBAY, HAZARIBAGH, JHARKHAND. 825301 PH :9216888118 9263631327.

JAMSHEDPUR

 PEBCO MOTORS LTD. (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH :9308433388.

 PEBCO MOTORS LTD. (3101-31-02), 16
 BALICHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHEDPUR - 831011
 PH: 930843338.

 MOTOR WORLD (3102-31-01), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR -831012

PH:9431347164, 9570168342.

JAMTARA

772. RELIABLE INDUSTRIES (BOX1-BOX-01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351 PH:9835814404.

KATRAS

773. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (GLP1-GLP-01), RAJHANS REFRACTORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-828114 - 828114 PH :8910900556.

KHELARI

774. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVI LTD) (CFO-1CFO-01), PLOT 113, MOUZA- BUKBUKA, BESIDE PAHADI MANDIR, KHELARI, RANCHI - 829205 PH :6458222, 9534199997.

KHUNTI

775. PREMSONS MOTOR UDYOG PVT. LTD (BOL1-BOL-01), PLOT NO. 747, KHATA NO. 2, DAHUGUTU, CHAIBASA ROAD, KHUNTI, JHARKHAND. - 835 210 PH :9835507004.

KODARMA

776. HINDUSTAN AUTO AGENCY (VR01-VR-01), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. – TILAIYA, DISTRICT – KODERMA, JHARKHAND. - 825409 PH :6201998936.

LOHARDAGA

 SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (CX01-CX-01), PLOT NO. 14P, 15, 23, RIADA, LOHARDAGA, JHARKHAND. - 835302 PH: 9534199997.

MURI

778. HILLTOP MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NEAR BANK OF INDIA, SILLI MAIN ROAD, MURI, PIN - 835102 - 835102 PH :7061157502.

RAMGARH

779. HINDUSTAN AUTO AGENCY (AV01-AV-01), MARAR, RANCHI ROAD (NH-33), RAMGARH -829122 PH:9263631345.

RANCHI

780. PREMSONS MOTORS UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. -834008 PH :9304807355.

 PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE, BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010 PH 9262899003

782. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003 PH -9835677016

783. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (5107-51-02), PLOT NO. 74, OPPOSITE OTG GROUND, HEHAL, RATU ROAD, RANCHI, JHARKHAND - 834005 PH :9634199997. 822799660.

784. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (5107-51-03), PLOT NO. 39, NEAR BOOTY MORE, RANCHI-RAMGARH ROAD, RANCHI. - 835217 PH :9534199997.

785. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-06), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001 PH:9835507004.

786. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PYT LTD) (5109-51-01), KHATA NO. 247, MOUZA - PUNDAG, P.S. - PUNDAG, RANCHI, JHARKHAND. - 834004 PH. 7061157502 787. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (5109-51-02), NEAR KATHAL MORE, ARGORA RANCHI RD, NEAR EKLABBA TOWER, DHIPATOLI, ARGORA, RANCHI - 834004 PH :7061157502

KARNATAKA

ANEKAL

 PRATHAM MOTORS PVT. LTD (0205-FA-04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106 PH :9945540131.

ANKOLA

789. BHARATH AUTO CARS PVT. LTD. (FC02-FC-01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT-581314 PH. 7829567400.

ATHANI

 SHANTESHA MOTORS (BWA1-BWA-01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304 PH:8884472587.

ATHRADI

 ABHARAN MOTORS PVT LTD (G601-UK-04), HERABETTU ROAD ATHARDI UDUPI - 576107 PH:9845472500.

ATTIBELE

792. SURAKSHAA CAR CARE PVT. LTD. (BMM1-BMM-01), SURVEY NO.227/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE. - 562107 PH 19449865665

BAGALKOT

793. VIJAY MOTOWINGS (ZL01-ZL-01), 180/4-2, BELGUM RAICHUR ROAD, NEAR APMC MARKET YARD, BAGALKOT - 587103 PH :9481289167.

BAGEPALLI

794. BIIMAL AUTO AGENCY INDIA PVT. LTD. (BTV1-BTV-01), HL. NO. 423 AND 436 SRI SATHYA SAI NAGAR, ON NH-7, THIMAKALAPALLI BLOCKLII, PARAGODU GRAM PANCHAYATH, KASABA HOBLI, BAGEPALLI TALUK, CHIKKABALLAPUR DIST. - 561 207 PH. 9742458888.

BANGALORE

 MANDOVI MOTORS PVT LTD. (0201-02-01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027 PH: 9945235511.

- 796. MANDOVI MOTORS PVT LTD. (0201-02-07), 17/A-2&3 IND. SUBURB. IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022 PH :9945235537.
- 797. MANDOVI MOTORS PVT LTD. (0201-02-05), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN. VIJAYANAGAR,BANGALORE - 560079 PH :9945236529.

798. RNS MOTORS (7301-02-03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022 PH 980893236

 RNS MOTORS (7301-02-04), HOSUR ROAD, BOMMANAHALLI, MADIVALA POST, BANGALORE - 560068 PH: 9148001412.

800. MANDOVI MOTORS PVT LTD. (0201-02-08), NO. 70 SARAKKI INDUSTRIAL LAYOUT, J.P. NAGAR, 3RD PHASE, BANGALORE - 560078 PH :995423552.

801. PRATHAM MOTORS PVT. LTD (0205-02-01), 16, BALLANDUR, SARJAPUR RING ROAD, BANGALORE - 560037 PH - 9945540126

802. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078 PH :9972398139.

803. BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-01), NO.-60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064 PH. 9945541034.

804. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-01), 60/2, MAHADEVPURA, WHITE FIELD ROAD, BANGALORE - 560048 PH :99723 98105.

805. PRATHAM MOTORS PVT. LTD (0205-02-02), STHANIKAM'S ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE -560010

PH:9900061378.

806. KALYANI MOTORS PVT. LTD. (0211-02-01), MYSORE ROAD, PANTHARAPALYA, KENGRI HOBLI, BANGALORE - 583201 PH: 9538887078.

807. BIMAL AUTO AGENCY INDIA PVT, LTD. (0216-02-03), NO.711, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERGHATTA RD., BANGALORE-560076

PH:9845166612.

808. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE -560038

PH:9972398106.

- 809. MANDOVI MOTORS PVT LTD. (0201-02-0C), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044 PH :9945235537.
- 810. KALYANI MOTORS PVT. LTD. (0211-02-04), 119/1, 11TH CROSS, MALLESHWARAM, BANGALORE, -560003 PH :9886026519.
- 811. MANDOVI MOTORS PVT LTD. (0201-02-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043 PH :9845132048.
- 812. MANDOVI MOTORS PVT LTD. (0201-02-0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA. - 560102 PH:9945235518.
- MANDOVI MOTORS PVT LTD. (0201-02-9B), PLOT NO.-257/1-13, BANNERGHATTA ROAD, N.S. PALYA, BANGALORE - 560076 PH:9945238559.
- 814. KALYANI MOTORS PVT. LTD. (0213-02-02), SY. NO.:58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE. - 560049 PH:9900037122.
- 815. SURAKSHAA CAR CARE PVT LTD (0280-02-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100 PH :9449865605.
- 816. KALYANI MOTORS PVT. LTD. (0213-02-03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU. - 574239 PH. 3900038119.
- 817. SURAKSHAA CAR CARE PVT. LTD. (0280-02-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068 PH :0440985655
- 818. KALYANI MOTORS PVT. LTD. (0213-02-04), 250/1,BILEKAHALLI, BANNERGHATTA ROAD, BENGALURUE - 560076 PH 9686445406
- 819. BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE -560058 PH 9945237213.
- 820. RNS MOTORS (7301-02-0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH:6364884787.

- 821. PRATHAM MOTORS PYT. LTD (0205-02-05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034 PH :9900058466
- 822. RNS MOTORS LIMITED (7301-02-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANCALORE - 562158 PH :9838965771.
- KALYANI MOTORS PVT. LTD. (0291-02-02), 10/1, HEBBAL, AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024 PH :9740985324 . 7760983887.
- 124. BIMAL AUTO AGENCY INDIA PVT. LTD. (0286-02-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE -560066 PH :9900245979.
- SURAKSHAA CAR CARE PVT. LTD. (0280-02-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034 PH :8884419010
- 826. KALYANI MOTORS PVT. LTD. (0287-02-01), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056 PH :9900019961.
- 127. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-08), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033 PH 9738501996.
- 828. MANDOVI MOTORS PVT LTD. (0201-02-0H), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093 PH:9945235533.
- 829. VARUN MOTORS PVT. LTD. (0292-02-01), INO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE. - 560022 PH. 7337834582
- KALYANI MOTORS PVT. LTD. (0213-02-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. -560043
 PH :9900037114.
- KATARIA AUTOMOBILES PVT. LTD. (0294-02-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST – AADUGODI, BANGALORE. -560030
- PH: 7349291802.
 332. MANDOVI MOTORS PVT LTD. (0201-02-01),
 KATHA NO.4, SITUATED AT GANAKAL
 DHAKALE, SRINIVASPURA, KENGERI HOBLLI,
 UTTARAHALLI, BANGALORE 560060
 PH: 9945236516.

- 833. VARUN MOTORS PVT. LTD. (0292-02-02), BEARING NO. 27/1 & 2772, SURVEY NO. 4/13 & 427 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073 PH. 738286729.
- 834. MANDOVI MOTORS PVT LTD. (0201-02-0J), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHNAN ROAD, VIDYARANYAPURA, BANGALORE. 560097 PH : 9945235514.
- 835. KATARIA AUTOMOBILES PVT. LTD. (2023-02-01), SURVEY NO. 83. 104. 102, VILLAGE – THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA - 560109 PH 1884434341
- 836. RNS MOTORS LIMITED (7301-02-0J), SY. NO. 11/2 & 12/1, VILLAGE ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE 560 076. 560076 PH 7760982936
- 837. SURAKSHAA CAR CARE PVT. LTD. (0280-02-05), SURVEY NO.2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE. - 560100 PH :884471200.
- 838. KALYANI MOTORS PVT. LTD. (0211-02-05), SY.NO.8/4, G HOSAHALLI MAIN ROAD, GOLLARAHATTI, V N POST, YESHWANTPURA HOBLI, MAGADI MAIN ROAD, BANGALORE -560091 PH :9900080229.
- SURAKSHA CAR CARE (0280-02-06), BEARING NO. 544-320/2, BEGUR HOBLI, BOMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE, KARNATAKA. - 560 068 PH : 9449856665.
- 840. PRATHAM MOTORS PVT. LTD (0205-02-07), SUVEY NO. 43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST -DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA. - 562125 PH :9811834659
- 841. SURAKSHAA CAR CARE PVT. LTD. (0280-02-07), SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN, MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA -560099 PH :94498 65666.
- 842. KALYANI MOTORS (0291-02-03), SURVEY NO. 194/5, HUNSEMARANAHALLI, JALA HOBLI, DEVANAHALLI TALIU, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH PH : 9740985324

843. MANDOVI MOTORS (0201-02-09), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018. - 560018 PH :9945235516.

BANGALORE (HEBBAGODI)

844. RNS MOTORS (0210-02-01), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD, ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560 099 PH :6366938829.

BANGALORE- KP ROAD

845. KALYANI MOTORS (0213-02-06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNN) DODDAKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062 PH :9900039844/9900073254.

BANGARPET

846. SURAKSHA CAR CARE PVT. LTD. (OR04-OR-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH:9449865601.

BANGLORE - BOMMANAHALLI

847. VARUM MOTORS PVT LTD (0292-02-03), SV NO: 136 (OLD NO 548) SANGEGURUVANAHALLI(VP) KAMAKSHIPALAYA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE NORTH THALUK, BANGALORE, KARNATAKA - 560079 PH: 9513683052.

BANTWAL

848. MANDOVI MOTORS PVT LTD. (TR01-TR-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231 PH :9008810123.

BELGAUM

- 849. SHANTESHA MOTOR (P) LTD (E801-E8-01), MUJAWAR COMPOUND, NEHRU NAGAR, BELGAUM, - 590010 PH:9902043711.
- 850. SHANTESHA MOTOR (P) LTD (E801-E8-04), PLOT NO. 8, SURVEY NO. 251/51, HAVLOCK ROAD CAMP, BELGAUM - 290010 PH :9588645387.
- 851. SHANTESHA MOTOR (P) LTD (E801-E8-03), CTS NO. 519, 520, BESIDE PARATA CORNER, CONGRESS ROAD, TILAKWADI, BELGAUM - 590006 PH :8884433911.
- 852. SHANTESHA MOTORS (P) LTD (E801-E8-06), PLOT NO. 2I, RS NO. 29, KIADB INDUSTRIAL AREA, KIADB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010 PH :9731396805.

BELLARY

853. K.P.F. PVT. LTD. (G201-G2-01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101 PH :9449876025.

BELTHANGADY

854. BHARATH AUTO CARS PVT. LTD. (4503-HM-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH - 9886543230

BHADRAWATI

855. SHRUTI MOTORS (FB01-FB-01), SURVEY NO. 18/4, BH ROAD,KADADAKATTE HOBLI, KADADAKATTE, BHADRAVATI, SHIMOGA DIST., KARNATAKA - 577229 PH - 78908RADIA

BHATKAL

856. BHARATH AUTO CARS PVT. LTD. (CEF1-CEF-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL., UTTARKANNADA DISTRICT, KARNATAKA. - 581320 PH :9008693940.

BIDAR

857. LAHOTI MOTORS PVT. LTD (EX01-EX-01), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402 PH :8884412049.

858. LAHOTI MOTORS PVT. LTD (EX01-EX-02), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585 401 PH :9108707709.

BIJAPUR

859. RNS MOTORS (7301-T7-01), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109 PH :8861208998

BUDHIGERE

860. BIMAL (SGM1-SGM-SGM1-01), KHATTA NO:115,SY. NO. 128/33, MANDUR MIAN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOCL PETROL BUNK, BANGALORE EAST TALUK, BANGALORE, - 560049 PH: 974-2756578

BYNDOOR

861. ABHARAN MOTORS PVT LTD (BUH1-BUH-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214 PH. 7899751777.

CHALLAKERE

862. SAKETH AUTOMOBILES (CKN1-CKN-01), SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522 PH :9686550126.

CHAMARAJANAGAR

863. MANDOVI MOTORS PVT LTD. (DE01-0E-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313 PH :9845445586.

CHANNAGIRI

864. SHRUTI MOTORS (BUQ1-BUQ-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213 PH 7899934143

CHANNAPATNA

865. KALYANI MOTORS PVT. LTD. (BSX1-BSX-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160 PH :9845066682.

CHANNARAYAPATNA

866. VENKAT MOTORS (HC01-HC-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116 PH. 8147077144.

CHICKBALLAPUR

867. BIMAL AUTO AGENCY (INDIA PVT. LTD. (KJ02-KJ-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101 PH 9742762499

CHICKMAGALUR

868. SHRUTI MOTORS (B701-3F-02), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102 PH :9980157446

CHIKODI

869. SHANTESHA MOTORS (E801-ZB-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201 PH:7829925790.

CHINTAMANI

870. PRATHAM MOTORS PVT. LTD (0205-BQ-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125 PH. 7899761301.

CHITRADURGA

871. SAKETH AUTOMOBILES (AL01-AL-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130 PH :9686550313.

DAVANGERE

872. SHRUTI MOTORS (S101-S1-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004 PH :9880401284.

DAVENGERE

873. SHRUTI MOTORS (S101-S1-02), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001 PH :9880401284.

DEVANAHALLI

874. BIMAL AUTO AGENCY INDIA PVT. LTD. (WH01-WH-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110 PH :9742262514.

DHARWAD

875. REVANKAR MOTORS PVT. LTD. (BIXT-BIX-01), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001 PH -38841006707

DODDABALLAPUR

876. PRATHAM MOTORS PVT. LTD. (BUA1-BUA01), PLOT NO. 50, GBADENHALLI, INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDADAHALLI, KASABA HOBLI TALIUR - DODDABALLAPUR, DISTRICT - BENGALURU RURAL. - 561203
PH. 3988671687.

GADAG

877. RNS MOTORS (7301-RK-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG -582103 PH :9538925602.

GANGAVATI

878. MUNEER ENTERPRISES PVT. LTD. (N701-KA-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, -583227 PH :9449870754.

GAURIBIDANUR

879. MANDOVI MOTORS PVT LTD. (BUY1-BUY-01), NO. 592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210 PH: 3217453513.

GOKAK

880. SHANTESHA MOTORS PVT. LTD. (IR01-IR-01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307 PH:7829925760.

GONIKOPPAL

 MANDOVI MOTORS PVT LTD. (2501-U3-07), KAIKERY VILLAGE, GONIKOPPAL., - 571213 PH:9900064873.

GUDIBANDHA

882. BIMAL AUTO AGENCY INDIA PVT. LTD.
(SGT1-SGT-1), DOOR NO:160, 1ST WARD, OPP
TO GOVERNMENT BUS STAND, BAGEPALLI
ROAD, GUDIBANDA, CHICKABALLAPURA
DISTRICT KARNATAKA - 561209
PH: 574261903.

GULBARGA

883. LAHOTI MOTORS PVT. LTD (E902-E9-01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104 PH :9480825014.

 LAHOTI MOTORS PVT. LTD (E902-E9-02), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA. - 585104 PH :7619342035.

GUNDLUPET

885. FRIENDLY MOTORS (INDIA) PVT. LTD. (BPU1-BPU-01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/1 N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111 Pt. :9686855799.

HAGARIBOMMANAHALLI

886. MUNEER ENTERPRISES PVT. LTD. (BUX1-BUX-0), SITE NO.112AU& 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212 PH :9481343007.

HALIYAL

 RNS MOTORS (SFM1-SFM-01), SURVEY NO: 347P/27, DOOR NO:B1180163 & B1180163, HANUMAN COMPLEX, HALIYAL CIRCLE, MAIN ROAD, HALIYAL TOWN & TALLIK, UTTARA KANNADA DISTRICT, KARNATAKA - 581329 PH:8284200200.

HARAHOLLI

888. SURAKSHA (SIH1-SIH-SIH1-01), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA, - 562112 PH :9449865608

HASSAN

889. VENKAT MOTORS (C802-C8-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201 PH :9844044038.

HAVERI

890. REVANKAR MOTORS PVT LTD (BBM1-BBM-01), NEAR TMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110 PH : 7022016903.

H-CROSS

891. BIMAL AUTO AGENCY INDIA PVT. LTD. (CRQ1-CRQ-01), PART NO.1, SITE NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122 PH 9738494176

HEBRI

892. ABHARAN MOTORS PVT LTD (BGD1-BGD-01), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI, KARKALA, DIST.-UDUPI, KARNATAKA. - 576112 PH: 9900077605.

HEGGADADEVANA KOTE (H D KOTE)

893. FRIENDLY MOTORS (INDIA) PVT. LTD. (CJC1-CJC-01), SURVEY NO. 5/4, VILLAGE – YARAHALLI, KASABA HOBLI, TALUK – H.D.KOTE, DISTRICT – MYSORE. - 571125 PH :9886855799.

HESSARGHATA

894. BIMAL (SGN1-SGN-01), SY NO 294/3, HESARAGHATTA VILLAGE YELAHANKA TALUK, BENGALURU,KARNATAKA - 560088 PH:9743658662.

HOSDURGA

895. SAKETH AUTOMOBILES (BWO1-BWO-01), ASSESMENT NO. 9310/6, PLOT NO. 6, HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST.-CHITRADURGA, KARNATAKA. - 577 527 PH.7625088946.

HOSKOTE

896. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-SM-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT. BANGALORE - 562114 PH: 9742281726.

HOSPET

897. MUNEER ENTERPRISES PVT. LTD. (N701-N7-01), BELLARY ROAD,SANKLAPUR,HOSPET, - 583203 PH :7619505001.

HUBLI

898. RNS MOTORS (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025 PH :9538965902.

899. RNS MOTORS (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030 PH :8861208532.

 REVANKAR MOTORS PVT. LTD. (7303-73-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029 PH :8792008301.

HUNSUR

901. FRIENDLY MOTORS(INDIA) PVT. LTD. (GLI1-GLI-01), M-18 & M-19, KSSIDC INDUSTRIAL ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE DISTRICT, KARNATAKA - 571105 PH. 7022696999.

JEWARGI

902. LAHOTI (SLI1-SLI-01), S NO: 125, PLOT NO: 7, FILTER BED ROAD, OPP, BUS DEPOT, JEWARGI, KALABURGI DISTRICT (FORMERLY GULABARGA), KARNATAK-585310. - 585310 PH :9480825004.

KADABA

903. MANDOVI MOTORS PVT LTD. (BYE1-BYE-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA -574221 PH: 9740912365.

KADUR

904. SHRUTI MOTORS (BQS1-BQS-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548 PH. 9804823736

KANAKAPURA

905. KALYANI MOTORS PVT. LTD. (BXY1-BXY-01), SURVEY NO. 447/1B, KASABA HOBIL, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. -562117 PH. 9900599933.

KARKALA

906. ABHARAN MOTORS PVT LTD (G601-HY-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104 PH :9880232666.

KARWAR

907. BHARATH AUTO CARS PVT. LTD. (8J01-8J-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALLUKA, UTTARKANNADA DISTRICT, KARNATAKA. -581301 PH :7829567400.

KITTUR, BELGAUM

908. SHANTESHA (SF01-SF0-01), PLOT NO. 219, KITTUR INDUSTRIAL AREA (KIADB), POONA BANGALORE HIGHWAY (NH-4), KITTUR TOWN AND TALUK, BELGAUM DISTRICT, - 591115 PH :9731398608

KOLAR

 MANDOVI MOTORS PVT LTD. (0201-QU-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101 PH : 9740020734.

KOPPAL

 K.P.F. PVT. LTD. (ER01-ER-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238 PH :9449876027.

KRISHNARAJANAGARA (KRNAGARA)

911. FRIENDLY MOTORS(INDIA) PVT. LTD. (SCQ1-SCQ-01), NO:D. DORNAHALLI, DODDEKOPPALU GRAMA PANCHAYAT, KASABA HOBLI, KRISHMARAJANAGARA, MYSORE DISTRICT, KARNATAKA - 571602 PH: 9971159430.

KRISHNARAJAPET

912. MANDOVI MOTORS PVT LTD. (BMP1-BMP-01), KHATA NO.3094, SY. NO.278, MYSORE CHENNERAYAPATHA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423 PH.9845132038.

KUMTA

913. BHARATH AUTO CARS PVT. LTD. (AFA2-AFA-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334 PH :9448979530

KUNDAPUR

914. ABHARAN MOTORS PVT LTD (G601-CY-02), NH-17, THAKKATTE, KUNDAPURA - 272877 PH :9880197524.

KUNIGAL

 SAKETH AUTOMOBILES (VQ01-VQ-01), NEAR KRS AGRAHARA, BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130 PH :9686550127.

KUSHAL NAGAR

916. MANDOVI MOTORS PVT LTD. (VN01-VN-01), SY NO:88, MADAPATANA, KUSHAL NAGAR, SOMVARPUR, NORTH KODAGU, KARNATAKA - 571234 PH -9000080803

LINGASUGUR

917. MUNEER ENTERPRISES PVT. LTD. (BOQ1-BOQ-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122 PH :9480830255.

MADDUR

918. MANDOVI MOTORS PVT LTD. (BMK1-BMK-01), SURVEY NO 802/2A4B, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN,MANDYA DISTRICT, KARNATAKA - 571428 PH 90080 31608.

MADIKERI

919. FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-QX-02), BASAPPA THEATURE BUILDING, DASAWAL ROAD, MADIKERI KODAGU DISTRICT. - 571201 PH. 9606073867.

MAGADI

920. PRATHAM MOTORS PVT. LTD. (BHX1-BHX-01), SY NO:92/2, THIRUMALAI VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARANATAKA - 562120 PH. 9900058483.

MANDYA

 MANDOVI MOTORS PVT LTD. (2501-BD-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, -571401 PH :9611165873.

MANGALORE

922. MANDOVI MOTORS PVT LTD. (4502-45-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001 PH :9845107701.

923. MANDOVI MOTORS PVT LTD. (4502-45-03), NO., HASSAN GROWTH CENTRE, ADYAR, N.H. -48, MANGALORE - 575007 PH: 9845514146.

124. BHARATH AUTO CARS PVT. LTD. (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004 PH: 9886785730.

925. MANDOVI MOTORS PVT LTD. (4502-45-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008 PH:9880079235.

926. BHARATH AUTO CARS PVT. LTD. (4503-45-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002 PH :9868333030.

927. MANDOVI MOTORS PVT LTD. (4502-45-08), DOOR NO. 2-634, SUJITH BAGFI LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575008 PH :9880278077.

928. BHARATH AUTO CARS PVT. LTD. (4503-45-08), S.NO. 1376/1-41, 1375/41-2-A1P1, 2A1P3, 1373/1-40, 1369/1-40-A2, KASABA BAZAR, KANDADAPALLI, KUDROLI, TALLIK -MANGALORE, MANGALORE, KARNATAKA -575003 PH. 9886785730.

MUDBIDRI

929. BHARATH AUTO CARS PVT. LTD. (4503-HN-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227 PH :9886785430.

MUDHOL

930. VIJAY MOTOWINGS (ET01-ET-01), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587 313 PH -9806046173.

MULKI

 BHARATH AUTO CARS PVT. LTD. (4503-QV-05), BHARATH BEEDI COMPOUND, NH-17 MULKI -574154

PH:9986020730.

MURUDESHWAR

932. RNS MOTORS (7301-T8-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350 PH :9538965969

MYSORE

- 933. MANDOVI MOTORS PVT LTD. (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH :9945248860
- MANDOVI MOTORS PVT LTD. (2501-25-05),
 NO. 182/145/C, BANNUR ROAD, SIDHARTHA
 NAGAR, MYSORE, KARNATAKA 570011
 PH. 9845939936.
- FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008 PH : 7259255558.
- MANDOVI MOTORS PVT LTD. (2501-25-08), 217/2., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH: 9845939937.

NAGAMANGALA

937. MANDOVI MOTORS PVT LTD (SFK1-SFK-01), SURVEY NO.3316/2327, VISHALAXAMMA COMPLEX, T B BADAVANE B M ROAD, NAGAMANGALA TOWN, MANDYA DISTRICT, KARNATAKA - 571432 PH :9845132038.

NANJANGUD

938. FRIENDLY MOTORS (INDIA) PVT. LTD.
(BYK1-BYK-01), 4340/4159/4, HULLAHALLI ROAD,
NANJANGUD, DISTRICT – MYSORE,
KARNATAKA. - 571301
PH. 9688655799.

NARASIMHARAJAPURA

939. SHRUTI MOTORS (SPP1-SPP-01), SURVEY NO # SURVEY NO.173,P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALU R DIST.,KARNATAKA - 577134 PH :8310187660.

NELAMANGALA

 RNS MOTORS LIMITED (BBH1-BBH-01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123 PH :7259875385

NELYADI

941. BHARATH AUTO CARS PVT. LTD.
(BPF1-BPF-01), SURVEY NO. 979/11P AND
SURVEY NO. 979; VILAGE - HOSAMAJALU
KAUKRADY, POST - NELYADI, TALUK - PUTTUR,
DIST.-DAKSHIN KANNADA . - 574229
PH :9886072730.

OORGAUMPET

942. BIIMAL AUTO AGENCY (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), SITE NO:10, NEW KATHA NO: 251, ROBERTSONPET, KGF, OORGAUMPET, KOLAR DIST, KARNATAKA-563122 - 563122 PH :9513748707.

PADURIDRI

943. ABHARAN MOTORS PVT LTD (CSI1-CSI-01), PLOT NO. 51/20, VILLAGE – PADUBETTU, PADUBIDRI TOWN, TALUKA & DISTRICT – UDUPI, KARNATAKA. - 574111 PH-9880232999.

PUTTUR

944. BHARATH AUTO CARS PVT. LTD. (4503-CZ-02), NEAR RAWAY STATION, HARADY, PUTTUR -517583 PH:9886072730.

RAICHUR

 MUNEER ENTERPRISES PVT. LTD. (N701-3K-02), #12-10-64,GOUSHAL ROAD,SIYA TALAB AREA,RAICHUR - 584101 PH: 9480830264.

RAMANAGARAM

946. KALYANI MOTORS PVT. LTD. (0211-JB-02), #K1318/2034C,OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511 PH -088689007

RANEBENNUR

947. REVANKAR MOTORS (BXV1-BXV-01), SCHEDULE A-2, OPP. STJIT ENGINEERING COLLEGE, P B ROAD, RANEBENUR, KARNATAKA. - 581115 PH :8830947883.

SAGAR

948. SHRUTI MOTORS (WF01-WF-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. -577401 PH-9740014703.

SAKLESHPUR

949. VENKAT MOTORS (BPW1-BPW-01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT – HASSAN. -573134 PH.7892809634.

SARJAPURA

950. PRATHAM MOTORS PVT. LTD. (BSY1-BSY-01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA – ANEKAL, SARJAPUR HOBLI, DISTRICT – BANGALORE URBAN, KARNATAKA. - 562125 PH. 7760962890.

SHIMOGA

- SHRUTI MOTORS (B701-B7-01), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201 PH:9880401283.
- 952. SHRUTI MOTORS (B701-B7-03), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA. - 577204 PH -9886829239
- 953. SHRUTI MOTORS (B701-B7-05), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOGA. - 577201 PH :9986825115.

SIDDAPUR

954. BHARATH AUTO CARS PVT. LTD.
(BPY1-BPY-01), SURVEY NO. 211, NEAR IOCL
PETROL BUNK, JOG ROAD, VILLAGE – HOSUR,
TALUK – SIDDAPUR, DISTRICT – UTTARA
KANNADA. - 581355
PH :949402730.

SIRISI

955. RNS MOTORS LTD (MQ01-MQ-01), SURVEY NO 43/B, LANDAKANALLI VILLAGE, DODNALLI GRAMA,SIRSI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402 PH :9895979023.

SIRSI

956. RNS MOTORS (7301-MQ-0D), K H B COLONY, SIRSI - 581402 PH :9538925606.

SIRUGUPPA

957. MUNEER ENTERPRISES PVT. LTD.
(CTN1-CTN-01), SITE NO:313C/IB & PLOT NO.1,
BELLARY - SIRUGUPPA MAIN ROAD,
SIRUGUPPA TALUK, BELLARY DISTRICT. 583121
PH. 7619505001.

SOMWARPET

 MANDOVI MOTORS PVT LTD. (CSG1-CSG-01), SURVEY NO.130 SITUATED AT MADIKERI ROAD, NAGROOR VILLAGE, BALAGUNDA POST, SOWMARPET TALUK, NORTH KODAGU DISTT. -571236 PH. :9845115665.

SRINIVASAPURA

959. SURAKSHAA CAR CARE PVT, LTD.
(BUR1-BUR-01), SY NO. 40, VPRD NO. 86,
PROPERTY NO. 84 & 87, CHALDIGANA HALLI
GRAMA PANCHAYATH, PANNASAMAKANA
HALLI VILLAGE, SRINIVASAPURA POST &
TALUK, DIST.-KOLAR, KARNATAKA - 563 135
PH 944965601.

SULLIYA

960. MANDOVI MOTORS PVT LTD. (4502-EW-04), ODABAI SULLIA, MANGALORE MYSORE ROAD, KARNATAKA - 574239 PH :9900002325.

SURATHKAL

MANDOVI MOTORS PVT LTD. (4502-7G-02),
 KANA ROAD, SURATHKAL - 574158
 PH:9845514143.

T. NARASIPURA

962. MANDOVI MOTORS (SFL1-SFL-01), KHATA NO-472/473/474, OPP TO SRI RAGHAVENDRA SWAMY MUTT, CHAMARAJANAGAR ROAD, T. NARASIPURA TOWN, MYSORE DISTRICT, KARNATAKA - 571124 PH: 9845132038.

THIRTHAHALLI

 SHRUTI MOTORS (BQR1-BQR-01), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI . - 577432 PH :7795851011.

THOKOTU

964. BHARATH AUTO CARS PVT. LTD. (QW01-QW-01), NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA KANNADA DISTT. - 575017 PH -9638796330

TIPTUR

 SAKETH AUTOMOBILES (H101-HV-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA - 572201 PH :9945301023.

TUMKUR

966. SAKETH AUTOMOBILES (H101-H1-01), SIRA ROAD, TUMKUR - 572106 PH :9686550323.

UDUPI

- 967. ABHARAN MOTORS PVT LTD (G601-G6-01), N.H. 17, NITTUR, UDUPI - 576103 PH :9880232999.
- ABHARAN MOTORS PVT LTD (G601-G6-05), NO. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI. -576101

PH:9686694341.

UJIRE

69. BHARATH AUTO CARS PVT. LTD. (BWT1-BWT-01), SURVEY NO 237-281. MANGALORE-CHARMADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKA, DISTT. DAKSHINA KANNADA, KARNATAKA. - 574240 PH :9886 176130.

UPPINANGADI

970. MANDOVI MOTORS PVT LTD. (4502-NL-05), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH :9740912365.

VIJAYPURA

971. BIMAL AUTO AGENCY (BTZ1-BTZ-01), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA. - 562135 PH :888433996.

VITTAL

972. MANDOVI MOTORS PVT LTD. (CCE1-CCE-01). DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA – BANTWAL, DISTRICT – DAKSHIN KANNADA - 574243 PH -9008810123

YADGIR

973. LAHOTI MOTORS (SFP1-SFP-01), SURVEY NO. 101/1, GULSARAM VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA PH:9480825031.

YELLAPUR

974. REVANKAR MOTORS PVT. LTD (CUR1-CUR-01), PLOT NO. 4 A1A1A1 GR 5, UDYAM NAGAR, YELLAPUR POST, BALGIMANI, HUBLI-ANKOLA, YELLAPUR TOWN, UTTARA KANNADA DIST., KARNATAKA. - 581359 PH :7090772121.

KERALA

ADOOR

975. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-CJ-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH :9745998303.

976. AVG MOTORS LTD. (Y501-CJ-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523 PH :9446355900.

ALANALLUR

 KVR AUTOCARS PVT LTD (CIWI-CIW-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST – ALANALLUR, TALUKA – MANNARKAD, DISTRICT - PALAKKAD, KERALA - 678601
 PH :9747020582.

ALATHIYOOR

978. A M MOTORS (E601-CVJ-11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE -ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA -TIRUR, DIST.-MALAPPURAM, KERALA. - 676102 PH -989540000. 9072998833.

ALATHUR

979. BRD CAR WORLD LIMITED (BRW1-BRW-01), SURVEY NO. 45618, 45518, 45519, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682 PH :9745634999.

ALLEPPY

980. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-E5-12), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002. - 699002 PH. 9745977744.

ALLEPY

981. POPULAR VEHCILES (E502-E5-01), BUILDING NO. XVIII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZHA, KERALA-688011. - 688011 PH:9778698161.

ALUVA

982. BRD CAR WORLD LIMITED (A404-CBQ-09), RE SURVEY NO.330/7, NH-47, KUNNUMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102 PH: 9745907100.

ANCHAL

983. SARATHY AUTO CARS (BOT1-BOT-01), SURVEY NO. 371/9, VILLAGE – IDAMULAKKAL P.O. – ANCHAL, TALUK – PUNALUR, DISTRICT – KOLLAM. - 691306 PH :9828906665. 984. POPULAR VEHICLE (1601-BOT-14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KAITHADY JUNCTION, ANCHAL, KERALA - 691306 PH :97786898200.

ANGAMAI Y

- 985. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-JW-0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572 PH : 9745998434
- POPULAR VEHICLES & SERVICES LTD. (2701-JW-0D), 182-AIRPORT JUNCTION NAGAR, M. C. ROAD, ANGAMALY - 683572 PH :8086078886.

ATTINGAL

987. POPULAR VEHICLES & SERVICES LTD. (1601-SX-07), PALAMKONAM, PERUNKULAM,VIA-ALAMCODE, ATTINGAL -695102 PH-8086078788

 SARATHY AUTODRIVES PVT LTD (SX05-SX-01), SURVEY NO. 252/17 & 2952/4, KIZHUVILLAM VILLAGE, ATTINGAL, CHARAYINKEEZHU TALUK, TRIVANDRUM DIST., KERALA. - 695 104 PH. 9526052765.

 INDUS MOTOR COMPANY PRIVATE LIMITED (SX01-SX-01), SY, NO. 54/13, 14, 15, (OLD SY, NO. 22, 22/13, 16), IN BLOCK NO. 3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. -695104
 PH. 9747550888.

BALARAMAPURAM

990. POPULAR VEHICLES & SERVICES LTD. (1601-AQA-11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501 PH :8943345922.

CALICUT

- INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011 PH :9745998019.
- 992. POPULAR VEHICLES & SERVICES LTD. (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016 PH :9846298613.
- 993. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT 673005
 PH: 9745998020.

- 994. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655 PH :9745998018.
- POPULAR VEHICLES & SERVICES LTD. (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT -673009 PH: 9288012082.
- 996. CARINO MOTORS (CARINO AUTO INFRA PVT. LTD.) (4704-47-01), RE SURVEY NO. 13, BUILDING NO. 5548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH CHERUYANNUR, P.O. NALLALAM, CALICUT (KOZHIKODE), KERALA. 673027 PH. 752289888. 7594997888.

CHALAKUDY

 BRD CAR WORLD LIMITED (ZJ02-ZJ-01), MURINGOOR P.O., CHALAKUDY - 680316 PH:9645176999.

998. INDUS MOTOR COMPANY PRIVATE LIMITED (ZU32-2-101), SURVEY NO. 631, 532, & 551, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALLUKA CHALAKKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307 PH. 9747557355.

CHALAKUDY/ CHILLAKUDDY/ THRISSUR

999. POPULAR VEHICLES & SERVICES LTD. (2701-8U-0C), OPPSITE CCMK HOSPITAL, VELLIKULAM ROAD, CHALAKUDY, KERALA-680307 PH 9072609600.

CHANGARAMKULAM

1000. A M MOTORS (VH01-VH-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585 PH: 9895756008.

CHAVAKKAD

1001. BRD CAR WORLD LIMITED (A404-0J-06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512 PH :9645963999.

1002. SAI SERVICE PRIVATE LIMITED (0.102-0.1-01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, O'UNGAL, KUNNAMKULAM ROAD, TALLIK – GURUVAYUR, CHAVAKKAD.) - 680506 PH : 3495883852.

CHENGANNUR

1003. SARATHY AUTO CARS (C701-UL-06), PRAVUMKOOD, THIRUVANVANDOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) -689124 PH :9447002647.

1004. SAI SERVICE (UL03-UL-01), SURVEY NO. 276/2,11,13,13-2-2. NEAR BPCL PUMP AND SURVEY NO. 276/12, M C ROAD, NEAR LABHAM MAVELI STORE, CHENGANNUR PO & MUNICIPAL, CHENGANUUR VILL & TALUK, ALAPUZHA DIST., KERALA-689121 - 689121 PH :9288004220.

CHERPULASSERY

1005. KVR AUTOCARS PVT LTD (NB01-NB-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE – CHERUPPALASSERY, TALUK – OTTAPPALAM, DISTRICT – PALAKKAD - 679503 PH :9747020582, 280100.

CHERTHALA

- 1006. INDUS MOTOR COMPANY PRIVATE LIMITED (VL03-VL-01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKKUZHI, CHERTHALA, ALAPPUZHA-DIST. - 688552 PH: 9745997633
- 1007. POPULAR VEHICLES & SERVICES PVT. LTD.
 (VLO2-VL-01), RE-SURVEY NO.150/2-1,147/3,
 BUILDING NO.KP-18/80, N.H. KANJIKUZHI
 VILLAGE, CHERTHALA, ALAPPUZHA DISTT., 688582
 PH :9072530127.

CHINGAVANAM

1008. POPULAR (1602-16-1602-01), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531 PH-9778690817.

CHITTUR

1009. INDUS MOTOR COMPANY PRIVATE LIMITED (BOX1-BOX-01), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLYAVALLAMPPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555 PH. 9745991560.

CHULLIMANOOR

1010. POPULAR VEHICLES (1601-BAI-16), RE-SURVEY NO. 437, VILLAGE-ANAND, CHULIMANOOR TOWN, TALUKA-NEDUMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541 PH-9778690745.

COCHIN

- 1011. POPULAR VEHICLES & SERVICES LTD. (2701-27-01), PERANDOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025 PH:9846017725.
- 1012. SAI SERVICE PRIVATE LIMITED (2705-27-02), NH-47,,PATHADIPALAM,EDAPPALLY,COCHIN -682024
 - PH:9645105057.

- 1013. POPULAR VEHICLES & SERVICES LTD. (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018 PH :9846298618.
- 1014. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015 PH :9745998040.
- 1015. SAI SERVICE PRIVATE LIMITED (2705-27-01), 50/1 15L, CHERANALLOOR ROAD,EDAPPALLY,COCHIN - 682024 PH :9645106339
- 1016. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-09), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN, - 682030 PH :9745998013.
- 1017. SAI SERVICE PRIVATE LIMITED (2705-27-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) -682040
- PH:8129496818.
- 1018. GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-27-01), DOOR NO.5452, 5452A, 5453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104 PH :7559997864, 4237700.
- 1019. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHIVAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301 PH :9745992070.
- 1020. GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-27-02), PLOT NO.2/316, NH-47, MARADU VILLAGE, KANNDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001 PH.:7994763336.

EDAPPAL

1021. POPULAR VEHICLES & SERVICES LTD. (4702-AM-05), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH :9946104880.

EDAVANNAPPARA

1022. POPULAR VEHICLES (GKP1-GKP-01), SURVEY NO. 77/16-18 77/24. BUILDING NO. 18/152-B, CHEEKODE VILLAGE,EDAVANNAPARA KONDOTTY ROAD, CHERUVAYOOR PO, MALLAPPURAM DISTRICT, KERALA-673645 -673645 PH #REFI.

FORT KOCHI

1023. SAI SERVICE PRIVATE LIMITED (BRS1-BRS-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI-682005 PH:9845106330.

GURUVAYUR

1024. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-A4-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH :974598015.

IRINJALAKUDA

1025. BRD CAR WORLD LIMITED (A404-KQ-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH :9539006999.

IRITTY

1026. INDUS MOTOR COMPANY PRIVATE LIMITED (R002-VJ-02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRITTY, KANNUR, KERALA - 670703 PH :9747554929.

IRITY

1027. POPULAR VEHICLE (V.102-VJ-01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRITTY MUNICIPAL, KANNUR DIST. KERALA. - 670703 PH. 7902473741.

KAIPAMANGALAM

1028. SAI SERVICE PRIVATE LIMITED (2705-RP-07), VAZHIYAMBALAM PO, KAIPAMANGALAM,THRISSURE - 680681 PH: 81204098846

KALAMASSERY/ ERNAKULAM

1029. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-Q3-07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106 PH :9745998012.

KALLAMBALAM

1030. POPULAR (0202-02-01), BUILDING NO. 5/472, NH-47, KADUVAPALLY, THOTTAKAD P.O, KALLAMBALAM, TRIVANDRUM DIST., KERALA-695605 PH :8086078788.

KALPETA

- 1031. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-JE-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591 PH :9745998592
- 1032. KVR (JE02-JE-C1), BUILDING NOS. 383, 384, 385, 386, 386,387,388 AND 389 CONSTRUCTED ON THE PLOT COMPRISED IN RESURVEY NOS. 719/6, 722/3, 722/2, 722/6, 722/8, 722/10, 722/21, SITUATED AT MUTTIL NORTH VILLAGE, VYTHIRI TALUK, KALPETTA SUB-DISTRICT, WAYANAD DISTRICT, KERALA. 673 122 PH 974707190?

KANHAGAD

1033. KVR CARS (3L01-K2-02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315 PH:9605040999. 1034. POPULAR VEHICLES & SERVICES LTD. (4702-K2-06), HIGHWAY JUNCTION, KANHANGAD SOUTH P.O., KANHANGAD - 689641 PH. 9946104685.

KANHANGAD

1035. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-K2-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541 PH.9745998024.

KANJIRAPALLY

1036. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-9Y-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O., KANJIRAPALLY -686506 PH: 9745998009.

1037. AVG MOTORS LTD. (9Y03-9Y-01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT.,KERALA - 686512 PH :8606071155.

KANNUR

1038. HAR CARS (K101-K1-01), HAR AVENUE, KANNOTHUMCHAL, CHOVVA POST, KANNUR -670006 PH 9539009480.

1039. HAR CARS (K101-K1-03), POTTIAN SHEKHARAN ROAD, MAKKANY, SOUTH BAZAR, KANNUR -670002

PH:9539009443.

- 1040. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-K1-0E), BALANKINAR JN., KATTAMPALLY.P.O, KANNUR - 690011 PH: 9745998023.
- 1041. KVR CARS (3L01-K1-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011 PH :9656034333.
- 1042. POPULAR VEHICLES & SERVICES LTD. (4702-K1-0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOVVA (PO), KANNUR - 670018 PH :9846062796.

KARIKKAD

1043. BRD CAR WORLD LIMITED (A404-GE-02), BRD INDUSTRIAL ESTATE, KARIKKAD, KUNNAMKULAM - 680519 PH :9995804599.

KARUNAGAPALLY

1044. SARATHY AUTO CARS (C701-AQ-05), K.S. PURAM, NEELIKULAM, KARUNAGAPPALLY, KOLLAM, - 690544 PH: 9526691565.

- 1045. INDUS MOTOR COMPANY PRIVATE LIMITED (AQO3-AQ-01), SY.NO 2431, 24310, 24316, 24316, 24316, 24316, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583 PH: 9745989006.
- 1046. SARATHY (C701-AQ-11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA. - 690 562 PH :9526691565.

KASARGOD

- 1047. KVR CARS (3L01-3L-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123 PH :9747021206.
- 1048. POPULAR VEHICLES & SERVICES LTD. (4702-3L-0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH:9946104621.
- 1049. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-3L-03), 18/304A & 18/304B, SY. NO. 39/3B, RE SY. NO. 57/6,MOGRAL, MANJESHWAR TALUK, KASARAGOD, KERALA - 671541 PH-9747550747.

KATTAPANA

- 1050. INDUS MOTOR COMPANY PRIVATE LIMITED (ZN01-ZN-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.). - 685508 PH.9746743460.
- 1051. POPULAR VEHICLES (ZN02-ZN-01), RE-SURVEY NO. 81/3, VILLAGE & TOWN - KATTAPPANA, TALUK & DIST.-IDUKKI, KERALA. - 685 515 PH :9746818407.

KAYAMKULAM

- 1052. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-8L-05), KARIYILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. -690572 PH :9745998005.
- 1053. POPULAR VEHICLES & SERVICES LTD. (B802-8L-03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. -690502 PH :9946105601.

KODUNGALLUR

1054. SAI SERVICE PRIVATE LIMITED (2705-8K-03), NH-17,T.K.S.PURAM,,KODUNGALLOOR - 680667 PH :9645106571. 1055. INDUS MOTOR COMPANY PRIVATE LIMITED (8K02-8K-01), RE-SURVEY NO. 116/1-6, 116/2-5, BUILDING NO. 560/A, WARD NO. VII, AALA VILLAGE, (OLD VILLAGE-SREENARAYANAPURAM), KODUNGALLUR TALUK, MADHILAKOM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA - 680 (08.

KODUVALLY

PH:9747513444.

1056. A M MOTORS (BGX1-BGX-01), SURVEY NO:91/9, 91/10,NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572 PH :9895979023.

KOLANCHERRY

1057. SAI SERVICE (SJO1-SJO-01), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERY TOWN, NH-85, AIKARANADU NORTH VILL., KUNNATHUNADU TALUK, ERNAKULAM DIST., KERALA-682311 - 682311 PH : 7366069955.

KOLLAM

- 1058. SARATHY AUTO CARS (C701-C7-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017 PH:9744552265.
- 1059. POPULAR VEHICLES & SERVICES LTD. (1601-Q4-04), H & C COMPOUND, MUNDDACKAL, KOLLAM - 680006 PH : 7594977550.
- 1060. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-Q4-03), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005 PH :9745998004
- 1061. SARATHY AUTO CARS (C701-C7-13), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AYATHI, KILLIKLLOOR PO, PUNTHALATHAZHAM-PALATHARA ROAD, KOLLAM, KERALA - 691004 PH :8606430765.

KOLLAM/ QUILON

- 1062. SARATHY AUTO CARS (C701-C7-08), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, UMAYANALLUR SIDCO INDUSTRIAL ESTATE, KOLLAM. - 691589 PH '9047127565
- 1063. SARATHY AUTO CARS (C701-C7-12), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIYAM PO, KOLLAM DIST., KERALA. -691571 PH. 9847936165.

KONDOTTY

1064. INDUS MOTOR COMPANY PRIVATE LIMITEO (ID02-ID-01), SURVEY NO. 16/1, BLOCK NO.3 (OLD SURVEY NO. 100/1), MEDIVIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573 PH. 9746743178.

KOOTHATTUKULAM

PH:9645106258.

1065. SAI SERVICE PRIVATE LIMITED (VM01-VM-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. -688662

КОРРАМ

1066. AM MOTORS (CUU1-CUU-01), SURVEY NOS: 331/3-6, 331/3-10, NEAR SALAFINYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309 PH :9048666635

KOTHAMANGALAM

- 1067. POPULAR VEHICLES & SERVICES LTD. (2701-9V-0B), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA-686691 PH: 9846027990.
- 1068. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-9V-03), PALAKKADAN BUILDING, CHANKLAM, KOTHAMANGALAM -686691

PH:9745998479. KOTTAKARKARA

1069. INDUS MOTOR COMPANY PRIVATE LIMITED (\$804-\$8-02), RE-SURVEY NO.141/3-4,142/1-2,15-16,143/1-2,143/2,143/15-2,1 43/15-2-2, BEARING NOS. 25/36 & 38, KOTTARAKKARA VILLAGE, KOTTARAKKARA TALUK, KOLLAM DISTRICT, KERALA-691506 -691506 PH:9747562299.

KOTTAKKAL

- 1070. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-8M-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST, - 676503 PH :9745998017.
- 1071. POPULAR VEHICLES & SERVICES LTD. (4702-8M-03), NH-17, CHANDAPARAMBU, RANBATHANI P.O, MALAPPURAM, KOTTAKAL -676510 PH :9946104631.

KOTTARAKARA

1072. POPULAR (S801-S8-S801-02), BUILDING NO. MP/20749,20/426, 20748, INCHAKADU, KALAYAPURAM VILLAGE, MYLOM PANCHAYATH, KOTTARAKKARA TALUKA, KOLLAM DISTRICT, KERALA- 691560 - 691560 PH :8086073466.

KOTTARKKARA

- 1073. POPULAR VEHICLES & SERVICES LTD. (S801-S8-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA-691531 PH: 8086073466.
- 1074. SARATHY AUTO CARS (S802-S8-01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARKARA DISTT. KOLLAM (KERALA) - 691531 PH:9947423365.
- 1075. INDUS MOTOR COMPANY PRIVATE LIMITED (S804-S8-01), RE SURVEY NO.2073-2; KIZHAKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., 691531 PH :9747562299.

KOTTAYAM

- 1076. AVG MOTORS LTD. (B801-B8-01), ERAYILKADAVU, KOTTAYAM - 686001 PH:7510982222.
- 1077. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-88-04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM , KERALA 686013 PH : 9745998148.
- POPULAR VEHICLES & SERVICES LTD. (B802-88-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O, KOTTAYAM - 686006 PH :8086073454.
- 1079. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-88-0C), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM - 686013 PH :9745998007.

KOZHENCHERRY

1080. AVG MOTORS LTD. (W801-AS-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT- PATHANAMTHITTA, - 689641 PH: 9446092995.

KUNNAMKULAM

1081. POPULAR VEHICLES & SERVICES LTD. (2701-8N-07), CHOONDAL, TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH :9946105695.

LAKKIDI PERUR

1082. A M MOTORS (CER1-CER-01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302 PH: 8086305555.

MALAPURAM

1083. A M MOTORS (E601-E6-01), VARANGODE, DOWNHILL, MALAPURAM, - 676519 PH :9895705325.

MALLAPALLY

1084. INDUS MOTOR COMPANY PRIVATE LIMITED (1201-12-01), THOPPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585 PH. 9747541400.

MANATHAVADY

1085. INDUS MOTOR COMPANY PRIVATE LIMITED (IEO2-IE-01), SURVEY NO. 1/2A1, A1, B1, RY 1/210, 1/99, MYSORE ROAD, CHETTAPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA. - 670845 PH : 9745997002.

MANJERI

- 1086. A M MOTORS (E601-8V-05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA -676121
 - PH:9895756035.
- 1087. KVR AUTOCARS PVT LTD (8V02-8V-01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123 PH :9747020801.
- 1088. POPULAR VEHICLES & SERVICES LTD. (4702-8V-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERALA) - 676121 PH :8589992406.

MANNARKAD

- 1089. A M MOTORS (E601-RA-07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582 PH:9895979048.
- 1090. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-RA-OK), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZHA-PO. MANNARKAD, KERALA - 678583 PH :9745995946.

MAVELIKARA

- 1091. POPULAR VEHICLES & SERVICES LTD. (B802-S9-02), KONNAYIL SUVAKO INDUSTRIAL COMPLEX, SHED A-1, KOLLAKADAYU INDUSTRIAL ESTATE, KOCHAL MOODU, KALLIMEL P.O., MAVELIKKARA, KERALA-690570 PH 9400052338.
- 1092. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-S9-07), NEAR PRATHIBA THEATRE, PUTTHIYAKAVU, MAVELIKKARA - 690101 PH :9745998137.

MAVELIKARRA

1093. POPULAR VEHICLES (B802-B8-10), BUILDING NO. 10/115-A, WARD NO. 10, CHENNITHALA VILL. AND TOWN, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA TALUK, ALAPPUZHA DIST., KERALA-690104. - 690104 PH: 9778690833.

MORAYUR

1094. A M MOTORS (CUJ1-CUJ-01), SURVEY NO. 328/1, VILLAGE – MORAYUR, VALENCHERY, DISTRICT – MALAPPURAM, KERALA. - 673642 PH :808652666.

MUVATTUPUZHA

- 1095. INDUS MOTOR COMPANY PRIVATE LIMITED (7601-7E-01), NH-49, MUVATUPUZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPUZHA, ERNAKULAM DIST - 686661 PH :97459998011.
- 1096. POPULAR VEHICLES & SERVICES LTD. (2708-7E-02), MUTHUKALLU JUNCTION, PERUMPALLUR P.O., MUVATTUPUZHA, KERALA - 686673 PH : 7356988840.

NEDUMANGAD

1097. POPULAR VEHICLES & SERVICES LTD. (2001-ZO-01), RE-SURVEY NO.-855/29, 855/14/1 (OLD SURVEY NO. 1583/1), KARIPPUR VILLAGE, NEDUMANGAD TALUK, TRIVANDRUM DIST., KERALA-695541. - 695541 PH: 9846/036696.

NEYYANTTINKARA

1098. INDUS MOTOR COMPANY PRIVATE LIMITED (AT01-AT-01), INDUS MOTOR CO. PVT. LTD., OLD M.V THEATRE, NEAR KSRTC BUS STATION, NEYYATINKARA, DIST. TRIVANDRUM - 695121 PH: 9747544500.

NEYYATTINKARA

1099. POPULAR VEHICLES (1601-16-1601-15), BUILDING NO. 11/562, KP-IX-843, NH 47, KOTTAMOM, KOLLAYIL PANCHAYAT, PANVEL-KOCHI - KANYAKUMARI HIGHWAY, KOTTAMOM, NEYYATTINKARA, TRIVANDRUM, KERALA-695122 - 696122 PH :9946104602.

NILAMBUR

- 1100. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-AF-0A), MINERVA JUNCTION, NILAMBUR, KERALA - 679329 PH: 9745998396.
- 1101. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-AF-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329 PH: 9745998396.

1102. POPULAR VEHICLES & SERVICES (AF02-AF-01), RE-SURVEY NO: 6/1 BLOCK NO: 76, CHEMMARAN, NADUVATH PO, WANDOOR ROAD, NILAMBUR, MALAPPURAM DIST., KERALA - 679328 PH: 7736094999.

NILAMEL

- 1103. INDUS MOTOR COMPANY PRIVATE LIMITED (DA02-DA-01), SURVEY- N. 19510, 1953-1-2, 1953-2-1, 1958, 195/14, 195/9-1, 195/10, 195/1-1, BLOCK NO. 32, ATTINGAL MUNCIPALITY, PAZHAYAKUNNAMEL VILLAGE, CHIRYNIKIL TALUK, (BORDER OF NILAMEL TOWN), TRIVANDRUM DIST., KERALA 695601 PH: 9745993331.
- 1104. POPULAR (DA03-DA-01), BUILDING NO. 10/279 TO 288, M. C. ROAD, KANNANCODU, NILAMEL PO, KOLLAM (DIST.), KERALA- 691535 - 691535 PH:8714606483.

OTTAPALAM

1105. INDUS MOTOR COMPANY PRIVATE LIMITED (PA01-PA-01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA - 679101 PH :9747544454

PALA

- 1106. POPULAR VEHICLES & SERVICES LTD. (B802-GN-04), 12TH MILE,PALA-PONKUNNAM ROAD,PALA - 686575 PH:9072609475.
- 1107. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-GN-05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574 PH :9745998878.
- 1108. AVG MOTORS LTD. (GN03-GN-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651 PH :9447137246.
- 1109. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-GN-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT 896584
 PH : 9747516934.

PALAKKAD

- 1110. POPULAR VEHICLES & SERVICES LTD. (2701-Y2-09), OPP. PALANA HOSPITAL, KODUVAYOOR ROAD, KINASSERY P.O., PALAKKAD - 678707 PH :9946105613.
- 1111. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-Y2-0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD. - 678701 PH -0745098501

1112. INDUS MOTOR COMPANY PRIVATE LIMITED (Y202-Y2-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007 PH: 3747519500.

PANDIKKAD

1113. AM MOTORS (CUV1-CUV-01), SURVEY NOS: 33/2-2, 33/3-2, CHOORAKKAVU, PERINTHALMANNA ROAD, NEAR INDIAN OIL PETROL PUMP, PANDIKKAD TOWN & POST, MALAPPURAM DISTRICT, KERALA - 676 521 PH - 963000677)

PARAPPANANGADI

1114. A M MOTORS (CTK1-CTK-01), SURVEY NO.66/6, 66/7, KODAPPADI, POST-CHETTIPPADY, PARPANGADI, MALAPPURAM. - 676319 PH :3895900466.

PARAVUR

1115. POPULAR VEHICLES & SERVICES LTD.
(ZS01-ZS-01), SURVEY NO. 340/1-76,77.78. NEAR
HP PETROL PUMP, PARAVUR-MANJALI MAIN
ROAD, MANNAM PO, NORTH PARAVUR
MUNICIPAL, ERNAKULAM DIST. 683520,
KERALA. - 683520
PH : 9072609638.

PATHANAMTHITTA

- 1116. AVG MOTORS LTD. (W801-W8-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671 PH:9446002987.
- 1117. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-W8-13), KUMBAZHA, PATHANAMTHITTA -689653 PH :9745998008.
- 1118. POPULAR VEHICLES & SERVICES LTD. (B802-W8-05), T.K. ROAD, NEAR COLLECTORATE,PATHANAMTHITTA - 689645 PH: 9539009734.
- 1119. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-WB-12), SURVEY NO. 11-13/12(1), KARIMPANKUZHY ROAD, NEAR SAROJ GAS AGENCY, MAKKANKUNNU, PATHANAMTHITTA, KERALA. - 689645 PH :9745999858.

PATHIRAPALLY

1120. POPULAR VEHICLES & SERVICES LTD (E502-E5-02), BUILDING NO. X/832 TO 834, X/837 TO 836, OPP. JUDAYA STUDIO, PATHIRAPALLY TOWN, AMBALAPUZHA TALUK, NH-47, ALAPPUZHA DIST., KERALA-688521. - 688521 PH: 9775698169.

PATTAMBI

1121. A M MOTORS (E601-8P-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306 PH :9567866059.

- 1122. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-8P-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI 679303 PH 9745098295
- 1123. A M MOTORS (E601-8P-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. -679306 PH :9567866059.

111.3307000

PAYANNUR

- 1124. POPULAR VEHICLES & SERVICES LTD. (4702-92-04), N H 17, EZHILODE P O, "PAYYANUR - 670309 PH :9946104701.
- 1125. POPULAR VEHICLES & SERVICES LTD.
 (9201-92-01), SY. NO. 21811, CHERUTHAZHAM
 VILLAGE, EZHILODE (NEAR COLONY BUS
 STOP), PAYANNUR-KANNUR NH, PAYANNUR
 TALUK, KANNUR DISTRICT, KERALA 670 309.
 PH. 99946104701.

PAYYANUR

1126. INDUS MOTOR COMPANY PVT, LTD.
(9Z02-9Z-01), SURVEY NO.-289/117, 290/105,
KARIVELLUR PERALAM GRAM PANCHAYAT
(NEAR PALATHARA BRIDGE), PAYYANUR
TALUK, KANNUR DISTRICT, KERALAPIN-670521. - 670521
PH: 9745998204

PERINTHALMANNA

- 1127. KVR AUTOCARS PVT LTD (7H01-7H-01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351 PH 97470/20573
- 1128. A M MOTORS (E601-7H-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322 PH: 8129818235.
- 1129. KVR AUTOCARS PVT LTD (7H01-7H-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322 PH - 9747020837

PERUMBAVOOR

- 1130. SAI SERVICE PRIVATE LIMITED (2705-8W-04), M.C.ROAD,PERUMBAVOOR,ERNAKULAM DIST,KERALA - 683542 PH :7034258335.
- 1131. INDUS MOTOR COMPANY PRIVATE LIMITED (8W03-8W-01), SURVEY NO. 72/2-3, 72/3-3, TALUK KUNNATHUNADU, VILLAGE RAYAMANGALAM, SUB DIST.-PERUMBAVOOR, DIST.ERNAKULAM 683 541 PH : 9747591803.

PIROVAM

1132. SAI SERVICE (BOW1-BOW-01), SUVEY NO. 788/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN & MUNICIPALITY, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA. - 686 664 PH :9645106198.

POINACHI

1133. KVR CARS (3L01-GF-03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH :9747021026.

PUNALUR

- 1134. SARATHY AUTO CARS (C701-8Q-03), NH-208, Q.S. ROAD, ELAMPAL POST, PUNALUR, KOLLAM DIST - 691322 PH: 9744400265.
- 1135. INDUS MOTOR COMPANY PRIVATE LIMITED (8002-80-01), SY. NO. 48/1/42, OLD, SY. NO. 231/43324, (OLD RAMRAJ TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD. - 691 305 PH: 9747638885.

QUILANDY

1136. INDUS MOTOR COMPANY PRIVATE LIMITED (3001-30-01), BUILDING NO. 13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306 PH :9745997875.

RAMANATTUKKARA

1137. A M MOTORS (E601-KB-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632 PH :9567866144.

RANNI

1138. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-JX-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH :9745998737

SASTHAMKOTTAH

1139. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-RT-09), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM – , KERAL A. 690520
PH. 3745998849.

SHORNUR

1140. POPULAR VEHICLES & SERVICES LTD. (2701-11-0E), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH :8580902432

SULTHAN BATHERY

1141. POPULAR VEHICLES (VK01-VK-01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA - 673 591 PH :7594977551.

TALIPARAMBA

1142. HAR CARS (K101-9W-02), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141 PH: 9539009473.

THALASSERRY

1143. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-RO-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH :9745998022.

THALASSERY/ TELLICHERRY

1144. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-Y3-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY, KERALA - 670102 PH:9747520100.

THALAYOLAPARAMBU

1145. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-WN-0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH :9746743003.

THAMARASSERY

- 1146. INDUS MOTOR COMPANY PRIVATE LIMITED (PB06-PB-01), RE-SY. NO. 44/5A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMRARSSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. 673573
 PH :9747553362.
- 1147. POPULAR (PB07-PB-10), SURVEY NO.43/4 BLOCK NO:005, RAROTH VILLAGE, THAMARASSERY TALUK, KOZHIKODE DISTRICT, KERALA - 673573 PH :9846397060.

THIRUVALLA

- 1148. AVG MOTORS LTD. (Y501-Y5-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA, PATHANAMTHITTA DISTT - 689107 PH :9446323999.
- 1149. POPULAR VEHICLES & SERVICE (B802-Y5-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH: 8086073489.

THODUPUZHA

1150. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-HZ-04), PALA ROAD, THODUPUZHA -685584 PH :9745998631. 1151. POPULAR VEHICLES & SERVICES LTD. (HZ02-HZ-01), SY.NO.124/7A-1, 124/7A-2, THODUPUZHA EHLOOR MAIN ROAD, VILLAGE & TOWN, THODUPUZHA, DISTT: IDUKI - 685585 PH :9072530120.

THRISSUR

- 1152. POPULAR VEHICLES & SERVICES LTD. (2701-A4-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH :6282306495.
- 1153. SAI SERVICE PRIVATE LIMITED (2705-A4-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH:9645105051.
- 1154. BRD CAR WORLD LIMITED (A404-A4-01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031 PH :9995807141.
- 1155. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-A4-00), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH: 9745998014.
- 1156. BRD CAR WORLD LIMITED (A404-A4-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH :9746476529.

THRITHALLUR

1157. BRD CAR WORLD LIMITED (A404-SS-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619 PH :9539197888.

TIRUR

- 1158. A M MOTORS (E601-Y4-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101 PH :9995879706.
- 1159. KVR AUTOCARS PVT LTD (7H01-Y4-05), T.P. 7/204-B, TANUR ROAD, MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA 676307 PH :9747020673.
- 1160. A M MOTORS (E601-Y4-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103 PH :9895705323.
- 1161. INDUS MOTOR COMPANY PRIVATE LIMITED (Y403-Y4-01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PYT. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA. - 676105 PH-9747518883.

TRIPPUNITHURA

1162. SAI SERVICE PRIVATE LIMITED (2705-AK-05), HILL PALACE ROAD, KARINGACHIRA, COCHIN -682301 PH :9645105067.

TRIPRAYAR

1163. POPULAR VEHICLES & SERVICES LTD.
(2701-18-0-8), SURVEY NO. 296/5.8, 296/9.
296/9-1, NATTIKA VILLAGE, NEAR CIVIL
STATION, POLY JUNCTION, TRIPRAYAR TOWN,
THRISSUR TALUK & DISTRICT, KERALA-680566
- 880566
PH. 9846699245.

TRIVANDRUM

- 1164. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM -695014
- PH:9745998001.
 1165. POPULAR VEHICLES & SERVICES LTD.
 (1601-16-01), C.I.T. ROAD, KILLIPALAM,
 KARAMANA P.O, TRIVANDRUM 695002
 PH:9946104601.
- 1166. SARATHY AUTODRIVES PVT LTD (1607-16-02), KOVALAM BYEPASS, SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009 PH: 9947270665.
- 1167. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-02), NH BYE PASS ROAD, VEMPALAVATTOM, TRIVANDRUM - 695029 PH :9745998003
- 1168. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, - 695011 PH 19745988002.
- 1169. POPULAR VEHICLES & SERVICES LTD. (1601-16-05), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002 PH :9846298610
- 1170. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-11), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANGALAM, VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM 695030 PH : 9747508822.
- 1171. SOUTH PARK MOTORS PVT. LTD. (1604-16-01), SURVEY NO. 985/3-4-5-6, VILLAGE -KADAKAMPALLY, CHACKAI BYPASS, TALUKA -TRIVANDRUM, TRIVANDRUM, KERALA. - 695029 PH -9826100008.
- 1172. SARATHY AUTODRIVES PVT LTD (1607-16-03), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT-THIRUVANANTHPURAM, KERALA. - 695019 PH - 9081865885
- 1173. POPULAR VEHICLES (1601-16-12), RE-SURVEY NO. 26/4-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA. - 695 015 PH :9846498605.

- 1174. POPULAR VEHICLES (1601-16-17), BUILDING NO. 13/632-632-A, 633.633-416-133-A2,634-636, 6TH MILE STONE, VAZHAYILA PO, PEROORKADA, THIRUVANANTHAPURAM, KERALA - 695521 - 695521 PH :9288023313.
- 1175. SARATHY AUTOORIVES PVT LTD (1607-16-01), SURVEY NO. 2448/4, VILL MUTTATHARA, NH BYE PASS ROAD, KALLUMOOD JN., VALLAKADAU PO, ENCHAKKAL, THRUVANANTHAPURAM, KERALA-695008 -695008 PH :9562416665.

TRIVANDRUM-MANANTHALLA

1176. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA, TRIVANDRUM - 695028 PH : 373-7540100.

UPPALA

- 1177. POPULAR VEHICLES & SERVICES LTD. (4702-41-0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH: 8086078864
- 1178. KVR CARS (4102-41-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH :9526021876.

VADAKARA

- 1179. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-85-07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104 PH :9745998021.
- 1180. POPULAR VEHICLES AND SERVICES (8S02-8S-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH:8943345935.

VALENCHARRY

1181. A M MOTORS (CUK1-CUK-01), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. -676552 PH.:9745986666.

VETTICHIRA

1182. KVR AUTOCARS PVT LTD (7H01-MZ-03), AP IV, 75A TO G, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA, - 676552 PH :9747020023.

WADAKKANCHERY

1183. BRD CAR WORLD LIMITED (A404-MX-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH 9567869403.

KERLA

EDAKKARA

1184. KVR (GMM1-GMN-01), SURVEY NO. 1087/1C-91, VAZHIKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679 331 PH :9747020777.

LADAKH

LEH

1185. DRUK AUTOZONE (9S02-9S-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH -194101 PH :8082800205.

MADHYA PRADESH

AGAR

1186. UNITARA MOTORS (BJT2-BJT-01), 27, UJJAIN ROAD,
NEAR MARKETING FUEL STATION.

AGAR, MADHYA PRADESH (465669) - 465669 PH:9770018283.

ALIRAJPUR

1187. RUKMANI MOTORS PVT. LTD. (GLY1-GLY-01), WARD NO 1, JHABUA ROAD, ALIRAJPUR, MADHYA PRADESH, MP - 457887 PH :9755549200 9109978301

ANUPPUI

1188. SHUBH MOTORS PVT. LTD. (BIB1-BIB-01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224 PH :9303884800.

ASHOK NAGAR

1189. PREM MOTORS PVT. LTD. (DS01-DS-02). SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH -9926809866.

ASHTA

1190. JEEWAN MOTORS PVT. LTD. (BSF1-BSF-01).
KHASRA NO.11171 NEAR RELIANCE PETROL
PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE
(M.P.) - 466001
PH :9826429604
6264918307
8718911222.

BADNAWAR

1191. PATEL MOTORS (INDORE) PVT. LTD. (BPT1-BPT-01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH - 454660 PH :9926932221.

BADWAH / BARWAHA (BOTH NAMES ARE OK)

1192. NIMAR MOTORS PVT. LTD. (AU01-UJ-05), NIRMAL COMPLEX, INDORE ROAD, BARWAH-451001 PH:7770878726, 9669569496.

BALAGHAT

1193. KUNAL MOTORS (U501-TP-04), KH NO.-1/56, JHULELAL DHARMSHALA ROAD, BALAGHAT, MADHYA PRADESH - 4811001 PH:8349992181.

BARELI

1194. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (1303-13-01), SURVEY 423/2, VILLAGE KAMTON, NH 12, BARELI, RAISEN, MADHYA PRADESH. - 464668 PH -9828335(1)

BARHI

1195. SHUBH MOTORS PVT. LTD. (GMK1-GMK-01), 1286/2, BARHI, DIST. - KATNI, MADHYA PRADESH - 483770 PH :9755580253.

BARNAGAR

1196. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (BBK2-BBK-01), RUNIJA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN -456771 PH :9755512100/7898900224.

BARWANI

 NIMAR MOTORS PVT. LTD. (AU01-SA-02), ANJAD ROAD, VILLAGE -KARAHI, BARWANI, MADHYA PRADESH - 451551
 PH:7770804492, 9669569496.

BEGAMGANJ

1198. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CIL1-CIL-01), IN FRONT OF DUSHERRA MAIDAN, SAGAR BHOPAL ROAD, BEGAMGANJ, DIST - RAISEN, MADHYA PRADESH - 464881 - 464881 PH:9826333501.

BEOHARI

1199. SHUBH MOTORS PVT. LTD. (BKA1-BKA-01), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST.-SHAHDOL, MADHYA PRADESH. - 484774 PH: 9755580253.

BERASIA

1200. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PYT. LTD.) (CKG1-CKG-01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT – BHOPAL, MADHYA PRADESH. -463106

PH:7909997570.

BETMA

1201. OCEAN MOTORS PVT. LTD. (BVR1-BVR-01), OPPOSITE MPEB OFFICE, INDORE-AHEMDABAD ROAD, BETMA, DISTRICT – INDORE, MADHYA PRADESH. - 453001 PH:7389936477.

BETUL

- 1202. KUNAL MOTORS (U501-U5-02), BHOPAL -NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK,, BETUL - 460001 PH: 8349999177
- 1203. KAMTHI MOTORS (GKF1-HHI-01), KAMTHI MOTORS LLP(SERVICE CENTER) NEAR SUNITA COLONY NEAR FOREST NAKA, SONAGHATI, ITARSI ROAD, BETUL -460001 PH :9329918424.

BHAVRA

1204. RUKMANI MOTORS (SPT1-SPT-01), GRAM PANCHAYAT, KALIYAVAHO, OPP SUNKER MANDIR, BHAVRA TEHSIL, ALIRAJPUR DISTRICT, MADHYA PRADESH - 457882. -457882 PH :9755549200 1100978301

BHOPAL

- 1205. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (0309-03-01), 4/1, DAGA HEIGHTS, NEAR BUDHNA MANDIR, MAIN ROAD KOLAR ROAD, CHUNABHATTI, BHOPAL, MADHYA PRADESH. -462016 PH. :9109900400.
- 1206. JEEWAN MOTORS PVT. LTD. (0302-03-01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024 PH :9826017799 9826296015
- 1207. JEEWAN MOTORS PVT. LTD. (0302-03-04), KHASRA NO. 54-55/11, NEAR RELIANCE FRESH,CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036 PH:8718802178.
- 1208. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (0308-03-01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023 PH :9826333501 982692579

1209. SATYAM MOTORS (0307-03-01), NH-12,SUVEESHA NAGAR,HOSHANGABAD ROAD,MISROAD - 462040 PH :6261900423 6261900636.

BIAORA

 UNITARA (0F02-0F-01), OLD AB ROAD, KACHNARIA, BIAORA (M.P) - 465674 PH:9770018283.

BINA

1211. ADINATH CARS PRIVATE LIMITED (BHQ2-BHQ-01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT – SAGAR, MADHYA PRADESH - 470113 PH :9009780047.

BURHANPUR

1212. NIMAR MOTORS PYT. LTD. (BRR1-BRR-01).
KHASRA NO. 654/15-16, BASEMENT OF HOTEL
AMBIKA RESIDENCY, OPP. PAKIZA
SHOWROOM, SANJAY NAGAR, AMRAVATI
ROAD, BURHANPUR, MADHYA PRADESH450331
PH. 7694011374, 9669569496.

CHAKGHAT

1213. CITY CARS (UNIT OF AGARWAL WHEELS) (GKQ1-GKQ-01), GRAM AND POST - CHANDAI, CHAKGHAT, TEHSIL - TEONTHER, PRAGRAJ ROAD, NH 27, DIST- REWA, MP – 486226.. -486226 PH :9754301199.

CHATTARPUR

1214. ADINATH CARS PRIVATE LIMITED (8B02-8B-01), MAHOBA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGAR - 471001 PH :9009785577.

CHHINDWARA

- 1215. KAMTHI MOTORS LLP (US02-U5-01), KHASRA NO.1/53, BESIDE MVM SCHOOL, NAGPUR ROAD, VILL-SARRA, DISTT. CHHINDWARA, MADHYA PRADESH - 480001 PH -9111488444 9111535777.
- 1216. KUNAL MOTORS (U501-U5-03), OPP. KUNAL MOTORS SHOWROOM, LAL BAGH TIRAHA,BEHIND TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP), -480001 PH:9981852239.
- 1217. KUNAL MOTORS (U501-U5-06), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002 PH -9981852239.

CHITRAKOOT

1218. CITY CARS (UNIT OF AGARWAL WHEELS)
(GKS1-GKS-01), PILIKOTHI CHOURAHA, BESIDE
SINGH AUTOMOBILE: A HERO AGENCY,
CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA
(MADHYA PRADESH)- 485334 - 485334
PH. 9754301199.

DABRA

1219. PREM MOTORS PVT. LTD. (BOR1-BOR-01), PICHHORE TIRAHA, GWALIOR JHANSI ROAD, DABRA, DIST.-GWALIOR. - 475110 PH:9340059606.

DAMOH

1220. ADINATH CARS PRIVATE LIMITED (RD02-RD-01), SAGAR JABALPUR BYPASS ROAD, DAMOH (M.P.). - 470661 PH :9009780035.

DATIA

1221. PREM MOTORS PVT. LTD. (3003-WE-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661 PH :9926809803.

DEORI

1222. ADINATH CARS PRIVATE LIMITED (CUOT-CUO-1), CIO VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE, NEAR GOVT. HIGH SCHOOL, NARSINGHPUR ROAD, VILLAGE KHEER, DEORI DISTT. SAGAR (M.P.) - 470226 PH :9009787562.

DEPALPUR

1223. OCEAN MOTORS PVT. LTD. (WB01-WB-03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,DIST.INDORE-MP - 453115 PH : 7389936488.

DEWAS

1224. UNITARA MOTORS PVT LTD (3Q02-3Q-01), SURVEY NO 255, A.B. ROAD, RASULPUR SQUARE, DEWAS, MADHYA PRADESH PIN 455001 - 455001 PH 9770018283

DHAMNOD

1225. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (UT01-UT-01), KHASRA NO. 484/12, OLD A B ROAD, OPPOSITE HP PETROL PUMP, DHAMNOD, DIST.-DHAR, MADHYA PRADESH. 45452 PH.:9109199032 7471111132.

DHAR

1226. RUKMANI MOTORS (P) LTD (5304-LM-02), 41/2 MAGAJPURA,DHAR,, - 454001 PH :9755549200 910978301

DINDORI

1227. STANDARD AUTO AGENCIES (AVA1-AVA-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP, DINDORI - 481661 PH : 9131343928.

FALI

1228. OCEAN MOTORS (SGH1-SGH-01), NH 47, NEAR GRAM - FALI, TEHSIL KHUDEL, INDORE, MADHYA PRADESH. - 452016 PH: 7389936477.

GADARWARA

1229. STANDARD AUTO AGENCIES (BOI2-BOI-01), KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119, GADARWARA, DISTRICT – NARSINGHPUR. - 487551 PH .7771003374.

GANJ BASODA

1230. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AEA2-AEA-01), LAL BAGH, BARETH ROAD, GANJ BASODA, VIDISHA, 464221. - 464221 PH: 9425148584.

GARRA

1231. KAMTHI MOTORS LLP (GJC1-GJC-01), LALBARRA ROAD, GARRA INDUSTRIAL AREA, GARRA, BALAGHAT, MADHYA PRADESH. -481331 PH.:7723020684.

GAUTAMPURA

1232. OCEAN MOTORS PVT. LTD. (CFW1-CFW-01), RUNJI CHOURAHA, GAUTAMPURA, TEHSIL -DEPALPUR, DISTT.-INDORE, MADHYA PRADESH. - 453220 PH:7389936477.

GOTEGAON

1233. STANDARD AUTO AGENCIES (BLY1-BLY-01), JABALPUR ROAD, OPP. NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR. - 443 001 PH :7771003374.

GUNA

1234. PREM MOTORS PVT. LTD. (\$301-\$3-01), OPP R.T.O.,A.B. ROAD,GUNA, - 473001 PH :268015

GWALIOR

1235. NIKUNJ MOTORS (3006-30-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 - 474005 PH :9109105599.

1236. PREM MOTORS PVT. LTD. (3003-30-01), M. L. B. ROAD, GWALIOR, , - 474002 PH:9926809803.

1237. PREM MOTORS PVT. LTD. (3005-30-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH :9926809803.

HALALPURA - BHOPAL

1238. DAGA MOTORS (0309-03-02), KHASRA NO. 80/1/K, VILLAGE - HALALPURA, TEHSIL - HUZUR, DISTRICT - BHOPAL, MADHYA PRADESH. -462030

PH:9109900365.

HANSA KHEDI

1239. KATHED MOTORCORP (SGI1-SGI-01), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GANJ), TEHSIL -SANWER, DISTRICT -INDORE, MADHYA PRADESH. - 453551
PH : 7471111132

HARDA

1240. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (KM01-VY-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331 PH :8889281113

HATOD

1241. OCEAN MOTORS PVT. LTD. (BVT1-BVT-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE -453111 PH:7389936477.

HATTA

1242. ADHINATH MOTORS (SKK1-SKK-01), NEAR NAVODAYA SCHOOL, DAMOH ROAD, HATTA, DISTT. DAMOH (M.P.) - 470775. - 470775 PH :9009787562.

HOSHANGABAD

1243. INFINITY CARS (A UNIT OF FOUZDAR CARS PYT. LTD) (KM01-KM-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001 PH :8889281113.

ICHHAWAR

1244. RAJRUP MOTOR JUNCTION (A UNIT OF RM) MOTORS PVT. LTD.) (CIK1-CIK-01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHIAWAR, DISTRICT – SEHORE, MADHYA PRADESH. - 466115 PH :982633501.

INDERGARH

1245. PREM MOTORS (SPU1-SPU-01), NEAR KHERAPATI GARDEN, INDERGARH, MP - 475675 . - 475675

PH:9926809818.

INDORE

1246. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVI. LTD.) (5307-53-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH - 452002 PH :7471111132.

- 1247. KTL AUTOMOBILES (5309-53-C1), PLOT NO.5/RC, SCHEME NO 134,MR 10,VILLAGE KHAJRANA, DIST INDORE-452010,MADHYA PRADESH - 452010 PH :8889433301.
- 1248. OCEAN MOTORS PVT. LTD. (5306-53-01), SCHEME NO 97, PLOT NO 49, PART - 4, COMMERCIAL MANDI, RING ROAD, NEAR CAT SQUARE, RAJENDRA NAGAR, INDORE, MADHYA PRADESH 452012 - 452001 PH 7:38936513.
- 1249. OCEAN MOTORS PVT. LTD. (5306-53-02), NEAR QUEENS COLLEGE, ASHARAM BAPU ASHRAM, KHANDWA ROAD, INDORE - 452017 PH: 8085916505.
- 1250. OCEAN MOTORS PVT. LTD. (5306-53-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAUESHWARI EXTENSION, PIPLIYAHANA, INDORE 452001 PH :7380936451
- 1251. OCEAN MOTORS PVT. LTD. (5306-53-04), SCHEME NO 97, PLOT NO 142 & 151, PART - 4, COMMERCIAL MANDI, RING ROAD, NEAR CAT SQUARE, RAJENDRA NAGAR, INDORE, MADHYA PRADESH 452012 - 452012 PH - 9281101697
- 1252. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010 PH :98/6360699
- 1253. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017 PH :9826360699.
- 1254. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) -452006 PH: 9826360699.
- 1255. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-05), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH. -452012
- PH:9826360699. 1256. RANA MOTORS (5308-53-01), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009 PH:9109975566.
- 1257. RUKMANI MOTORS (P) LTD (5304-53-01), 2-3,,A.B. ROAD,INDORE - 452001 PH:9039088702 910978301
- 1258. RUKMANI MOTORS (P) LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001 PH :9109107171 9109978301.

1259. RUKMANI MOTORS (P) LTD (5304-53-04), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 15/1, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. - 452010 PH :9981078226 9100978311

JABALPUR

- 1260. MAA GAYTRI (AGGARWAL) (5404-54-01), MOUZA KARMETA N. 497, P.H. NO 23/26, KHASRA NO. 497 & DIV. KHASRA NO. 484/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. - 482002 PH: 748901021.
- 1261. SHUBH MOTORS (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001 PH :9755581438.
- 1262. SHUBH MOTORS PVT LTD (5403-54-03), 156/51, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002 PH :9755594512.
- 1263. STANDARD AUTO AGENCIES (5405-54-07), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. 482003
 PH -6387088013
- 1264. STANDARD AUTO AGENCIES (5405-54-01), OPPOSITE ALLAHABAD BANK,DELITE TALKIES ROAD,GIVIL LINES, JABALPUR - 482001 PH :7771014822 9074360320.
- 1265. STANDARD AUTO AGENCIES (5405-54-03), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002 PH : 7771006920.
- 1266. STANDARD AUTO AGENCIES (5405-54-06), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001 PH :9302525012.

JAORA

1267. PATEL MOTORS (INDORE) PVT. LTD. (P801-BFR-04), SURVEY NO. 57/11/I, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226 PH : 24339. "708901505. 9926932221.

JHABUA

1268. PATEL MOTORS (INDORE) PVT. LTD. (AAR1-AAR-01), INDORE AHMEDABAD ROAD, MEGHNAGAN NAKA, JHABUA ,MADHYA PRADESH. - 457661 PH .9826634449.

JOBAT

1269. RUKMANI MOTORS (SOA1-SOA-01), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP – 457990. - 457990 PH :9755549200 9109978301.

KARERA

1270. PREM MOTORS (SMO1-SMO-01), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660. - 473660 PH :9926823596.

KATNI

1271. SHUBH MOTORS PVT LTD (FK01-FK-01), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501 PH. 9755518839.

KHANDWA

1272. NIMAR MOTORS PVT. LTD. (AU01-3R-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001 PH :9575105697, 9669569496.

KHARGONE

1273. NIMAR MOTORS PVT. LTD. (AU01-AU-01), JETAPUR,SANAWAD ROAD,KHARGAONE, -451001

PH:9669569504, 9669569496.

1274. NIMAR MOTORS PVT. LTD. (AU01-AU-06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001 PH. 7694011436, 9669569496.

KHATEGAON

1275. UNITARA (BXB2-BXB-01), NEMAWAR-INDORE ROAD, KHATEGAON, M.P - 455336 - 455336 PH :9770018283

KOTMA

1276. SHUBH MOTORS (DO01-DO-01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336 PH :9303884800.

KUKSHI

1277. OCEAN MOTORS PVT. LTD. (BIO1-BIO-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331 PH: 7389936477, 808599990.

LAKHNADON

1278. KAMTHI MOTORS LLP (SCL1-SCL-01), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480886 PH :9285506128.

MAHESHWAR

1279. NIMAR MOTORS (SHH1-SHH-01), OPPOSITE DEVRAJ HOTEL, MAIN MANDLESHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224 PH :9669569504, 9754979019.

MAHIDPUR

1280. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CWN1-CWN-01), 264/3, BHIMAKHEDA, MAHIDPUR, UJJAIN - 456443 PH :9755044300 9755512100.

MAIHAR

1281. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-G1-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH-9754301199.

MAJHAULI

1282. CITY CARS (SPN1-SPN-01), WARD NUMBER 14, NAGAR PARISAD MAJHAULI, DIST. SIDHI (M.P.) -486666. - 486666 PH :9754301199.

MANASA

1283. PATEL MOTORS (INDORE) PVT. LTD. (BZX1-BZX-01), 982/1, RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. - 458110 PH. 9977703139.

MANAWAR

1284. OCEAN MOTORS PVT. LTD. (BVS1-BVS-01), NEAR SHANTIKUNJ COLONY, INDORE-MANAWAR MAIN ROAD, TEHSIL – MANAWAR, DISTRICT – DHAR. - 454335 PH.7389936477.

MANDLA

1285. STANDARD AUTO AGENCIES (5405-WD-04), KATARA ROAD, MANDLA, DIST. MANDLA MP -481661 PH :8959280989.

MANDSAUR

1286. PATEL MOTORS (INDORE) PVT. LTD. (WC01-WC-01), NEAR SHIVANA BRIDGE,RATLAM MANDSAUR ROAD,MANDSAUR - 458001 PH:9977703139.

1287. PATEL MOTORS (INDORE) PVT. LTD. (WC01-WC-02), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001 PH '9977704817

MANPUR

1288. PATEL MOTORS (INDORE) PVT. LTD. (BRL1-BRL-01), KHASRA NO. 302/1/3, AB ROAD, MANPUR, DIST- INDORE - 453661 PH :9826360699.

MAUGANJ

1289. CITY CARS (SEY1-SEY-01), NEAR SENGAR PETROL PUMP, CHACK MODE WARD NUMBER 03,NH 7. MAUGANJ, DISTT – REWA, MADHYA PRADESH – 486331. - 486331 PH-975301199.

MHOW

1290. OCEAN MOTORS PVT. LTD. (WA01-WA-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441 PH :7389936514.

MORENA

1291. PREM MOTORS PVT. LTD. (RG01-RG-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH :9926809803.

NAGDA

1292. YUG CARS (A UNIT OF RUKMARANI CARS NIDORE PVT. LTD) (CHR2-CHR-01), PLOT NO. 17. STATE HIGHWAY NO.17, INDORIYA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456335 PH. 9755044300/9755512100.

NARAYANGARH

1293. PATEL MOTORS (SFN1-SFN-01), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. -488553 PH :9977703139.

NARSINGHPUR

1294. STANDARD AUTO AGENCIES (BB01-BB-01), KH.
NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42),
OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL
& DISTRICT – NARSINGHPUR, MADHYA
PRADESH. - 487001
PH : 9179779400.

NASRULLAGANJ

1295. JEEWAN MOTORS PVT. LTD. (CIN1-CIN-01), KHASRA NO. 458, VILLAGE – RALA, TEHSIL – NASRULLAGANJ, DISTRICT – SEHORE, MADHYA PRADESH. - 466331 PH: 9303884800.

NEEMUCH

1296. PATEL MOTORS (INDORE) PVT. LTD. (P801-3T-02), MHOW-NEEMUCH ROAD,NEEMUCH(MP),, - 458441 PH :9977703907.

NIWARI

1297. ADINATH MOTORS (SFC1-SFC-01), ATKHASRA NO 2017/1, NEAR HDFC BANK MAIN ROAD, NIWARI, MADHYA PRADESH –472442. - 472442 PH :9009787562.

PANDHURNA

1298. KAMTHI MOTORS (SFG1-SFG-01), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334. - 480334 PH :9111535777.

PANNA

1299. CITY CARS (UNIT OF AGARWAL WHEELS)
(EQ01-EQ-01), KHASRA NO. 378, MOHAN RAJ
VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL,
CIVIL LINE NH-75, PANNA, MADHYA PRADESH.
- 488001
PH :9754301199.

PARASIA

1300. KAMTHI MOTORS LLP (GKF1-GKF-01), KHIRSADOHMAL, PARASIA, CHHINDWARA. MP -480441 PH :9285506109.

PATAN

1301. MAA GAYATRI (SHP1-SHP-01), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119 PH:7489901021.

PAWAI

1302. CITY CARS (UNIT OF AGARWAL WHEELS) (SIX1-SIX-01), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. – PANNA, MP-488446 - 488446 PH 9754301199

PETLAWAD

1303. PATEL MOTORS (INDORE) PVT. LTD. (CJD1-CJD-01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773 PH:9926932221.

PIPARIYA

1304. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (CGB1-CGB-01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH - 461775 PH :8889281113.

PITHAMPUR

1305. PATEL MOTORS (INDORE) PVT. LTD. (5303-BVD-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH :9826360699.

RAISEN

1306. JEEWAN MOTORS (RF02-RF-01), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551 PH :9644712135. 1307. RAJRUP MOTORS (RF03-RF-01), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551 PH :9826333501.

RAJGARH

1308. RUKMANI MOTORS (P) LTD (GKE1-GKE-01), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116 PH :9755549200 9109978301.

RATLAM

 PATEL MOTORS (INDORE) PVT. LTD. (P801-P8-01), 76 C, D&E, INDUSTRIAL AREA, RATLAM - 457001 PH: 99269-32221/93404-31858.

1310. PATEL MOTORS (INDORE) PVT. LTD. (P801-P8-03), 181/17/18, DOSHI GOAN, INDUSTRIAL AREA, JAORA ROAD, RATLAM - 457001 PH: 99269-32221/93404-31858.

REWA

1311. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-M2-03), NYPASS CHURHATA, DIST. REWA - 482001 PH: 9754301199.

1312. SHUBH MOTORS (5403-M2-05), VILLAGE – RATHARA, TEHSIL – HUZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003 PH :9755582351.

SADALPUR

1313. OCEAN MOTORS (SPS1-SPS-01), JAIN SHRI SUPER MARKET, SERVICE ROAD, MHOW-NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P) - 454001. - 454001 PH:7389936477.

SAGAR

1314. ADINATH CARS PRIVATE LIMITED (G102-G1-01), STATION ROAD, TILAK GANJ, SAGAR (M.P). -470001 PH:9909780030.

SANWER

1315. RANA MOTORS PYT LTD (CWX1-CWX-01), S NO. 356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST-INDORE, MADHYA PRADESH. -453551 PH. 9109975566.

SATNA

1316. CITY CARS (UNIT OF AGARWAL WHEELS)
(D702-D7-05), (A UNIT OF AGRAWAL WHEELS)
PVT. LTD.), BESIDE BHASKAR PRESS, BEHIND
MARUTI SHOWROOM, WARD NO.27, AMOUDHA
KALA, PANNA ROAD, SATNA - 485001
PH. 9754301199.

SAUSAR

1317. KAMTHI MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P. – 480106. - 480106 PH 9111535777

SEHORE

1318. JEEWAN MOTORS PVT. LTD. (0302-EH-02), 869/1/2,OFFICERS COLONY,IN FRONT OF CHURCH GROUND,BHOPAL, INDORE ROAD -466001 PH: 9617990992.

SENDHWA

1319. NIMAR MOTORS PVT. LTD. (CIH1-CIH-01), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL – SENDHWA, DISTRICT – BARWANI, MADHYA PRADESH. -451666

PH:7694011408, 9669569496

SEONI

1320. KUNAL MOTORS (U501-8X-05), JYARAT NAKA, JABAL PUR NAGPUR ROAD, SEONI (M.P.) -480661 PH :8340909269

SHADOL

1321. SHUBH MOTORS (MF01-MF-01), JAMUA, NEAR GYAN GUPTA, BUDHAR ROAD, SHAHDOL, -484771 PH: 9755595423.

SHAHPURA

1322. STANDARD AUTO AGENCIES (CRD1-CRD-01), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH:7771003374.

SHAJAPUR

1323. UNITARA (RH03-RH-01), LAL GHATI, A B ROAD, SHAJAPUR, MP - 465001 PH :9770018283.

SHAMGARH

1324. PATEL MOTORS (INDORE) PVT. LTD. (BFZ1-BFZ-01), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL – SHAMGARH, DISTRICT – MANDSAUR, MADHYA PRADESH. - 458883 PH :9977703139.

SHIVPURI

1325. PREM MOTORS PVT. LTD. (3003-3U-04), A B ROAD, SIVPURI,, - 473551 PH:9926809976.

SHUJALPUR

1326. UNITARA (BGP2-BGP-01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P - 465333 -465333 PH :9770018283.

SHYAMPUR

1327. DAGA MOTORS (SJX1-SJX-01), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT – SEHORE, MADHYA PRADESH - 466651. - 466651 PH :9752880210.

SIDHI

1328. CITY CARS (UNIT OF AGARWAL WHEELS) (BKM1-BKM-01), ADHIYAR KHOH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. -486661 PH :9754301199.

SIHORA

1329. SHUBH MOTORS PVT. LTD. (CIG1-CIG-01), KHASRA NO. 31/1, P.H. – 11, MOUZA – GHAT SIMARIYA, TEHSIL – SIHORA, DISTRICT – JABALPUR, MADHYA PRADESH,. - 483440 PH. 9755580253.

SIMROL

1330. RUKMANI MOTORS (BZV2-BZV-01), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020 PH :9109978301.

SINGHOLI

1331. PATEL MOTORS (SEQ1-SEQ-01), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP - 458228 - 458228 PH:9977703907.

SIRON.I

1332. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CVM1-CVM-01), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228 PH :9826333501.

SITAMAU

1333. PATEL MOTORS (SLL1-SLL-01), MAUKHEDA, TEHSIL - SITAMAU, DISTRIST - MANDAUR, MADHYA PRADESH - 458990 - 458990 PH -9977703139

TARANA

1334. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHQ2-CHQ-01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH - 456865
PH :3893563031/9755512100.

TENDUKHEDA

1335. STANDARD AUTO AGENCIES (CRC1-CRC-01), KHASARA NO. 49/6, MOUZA – TENDUKHEDA, DISTRICT – NARSINGHPUR . - 470880 PH :7771003374.

THIKRI

1336. NIMAR CAR (SED1-SED-01), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH –451660. 451660 PH.:9109202186.

TIKAMGARH

1337. ADINATH CARS PRIVATE LIMITED (RE02-RE-01), NEAR MAU CHUNGI NAKA, TIKAMGARH (M.P.) -472001 PH :9009987440.

UDAIPURA

1338. JEEWAN (SCI1-SCI-01), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770 PH :8718911777.

UJJAIN

1339. YUG CARS (3W03-3W-02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURAHA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH. - 456001 PH :9755512100, 7024235298.

1340. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (3W03-3W-01), SURVEY NO. 59/3, DEWAS ROAD, UJJAIN - 456010 PH :9755512100, 7869911945.

UMARIA

1341. SHUBH MOTORS (5403-BVY-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH :9755505888.

VIDHISHA

1342. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AY02-AY-01), PLOT NO 59/1, VILLAGE RANGAI, VIDISHA, MADHYA PRADESH - 464001 PH: 9109900374.

VIDISHA

1343. RAJRUP (AY03-AY-01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001 PH :7869755501.

WAIDHEN

1344. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-JJ-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI, MADHYA PRADESH - 486886 PH -9754301199.

MAHARASHTRA

AHMEDNAGAR

1345. KANKARIYA AUTOMOBILES PVT. LTD. (A501-A5-01), SARDA MILLS, SAVEDI ROAD, AHMEDNAGAR, MAHARASTRA - 414001 PH: 7410024227.

1346. KANKARIYA AUTOMOBILES PVT. LTD. (A501-A5-05), MIDC, AHMEDNAGAR - 414003 PH:7447700029.

AJARA

1347. SAI SERVICE PRIVATE LIMITED (CIR1-CIR-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT – KOLHAPUR. - 416505 PH:7776837717, 9673331977.

AKLUJ

1348. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-RU-04), PLOT NO. 15/3-A, PANCHVATI STOP,MALINAGAR ROAD,AKLUJ - 413101 PH : 0217-223033/8805986848.

AKOLA

1349. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-F1-01), TIRUPATI CHAMBERS, CONVENT ROAD, AKOLA - 444005 PH: 9767892552/9112220551.

1350. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-F1-02), PLOT NO E/12-13-MIDC PHASE-2, AKOLA. - 444001 PH :9767892552/9112220551.

ALEPHATA

1351. THE KOTHARI WHEELS (CSZ1-CSZ-01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, AIP – ALEPHATA, TALUKA – JUNNAR, DISTT. PUNE, PIN-412411 -412411 PH :8421753278.

ALIBAUG

1352. SIMRAN MOTORS PVT. LTD. (7501-3X-05). SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE - VESHVI, ALIBAUG, DISTRICT - RAIGAD, MAHARASHTRA - 402201 PH :9223161512, 9270888786.

AMALNER

1353. MANRAJ MOTORS (EL01-EL-01), PRASAD MOTORS, RAVI NAGAR, NEAR NAYARA PETROL PUMP, DHULE ROAD, AMALNER, DIST. JALGAON-425401. -425401 PH #REF!.

AMBERNATH

1354. AHER AUTOPRIME LLP (COP1-COP1-01), PLOT NO-24,26,27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVLI, AMBERNATH - 421501 PH :8422817/20.

AMRAVATI

- 1355. ASPA BANDSONS AUTO PVT. LTD. (F201-F2-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA, - 444607 PH :9423123665.
- 1356. ASPA BANDSONS AUTO PVT. LTD. (F201-F2-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607 PH: 9423339601.

APTA

1357. K.T.S. AUTOMOTORS PVT. LTD. (0582-7S-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207 PH :9420611356/94206611326.

AURANGABAD

- 1358. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH :9158000046.
- 1359. PAGARIYA AUTO PVT. LTD. (2103-21-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD -431005 PH :02406659902.
- 1360. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-21-03), C-27,MIDC, CHIKALTHANA, N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006 PH 9185000059
- 1361. PAGARIYA AUTO PVT. LTD. (2103-21-05). GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005 PH .986099948/9860999468.
- 1362. PAGARIYA AUTO PVT. LTD. (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001 PH :8408886768/7387279311.

BADLAPUR

1363. PRAKASH AUTO PVT. LTD. (9001-90-01), SHOP NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA WATER SUPPLY, OPP. INDIAN OIL PETROL PUMP, MIDC ROAD, KATRAP, BADLAPUR (EAST) - 421503 PH: 8655791288/9670453155.

BALLARPUR

1364. TRISTAR CARS (H302-ZH-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701 PH. 7447473304.

BARAMATI

1365. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-7R-01), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102 PH 9881370310.

BARSHI

1366. CHAVAN MOTORS DIVISION INDIA PVT LTD (BBA1-BBA-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401 PH:8378983726.

BEED

1367. PAGARIYA AUTO PVT. LTD. (V602-V6-01), GUT NO. 61, VILLAGE – GHOSAPURI, TALUKA AND DISTRICT – BEED, MAHARASHTRA . - 431122 PH

:9834161614/02442256058/02442256056/02442256 057/.

BHANDARA

1368. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-FG-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904 PH:7030932330)9673004280.

BHOR

1369. SEHGAL AUTORIDERS PVT. LTD. (BSV1-BSV-01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA – BHOR, DISTRICT – PUNE, MAHARASHTRA. - 412206 PH: 9527771016.

BOISAR

1370. SHIVAM AUTO ZONE (ES02-ES-01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARAHSTRA - 401501 PH: 8082551155.

BRAMHAPURI

1371. TRISTAR CARS PVT LTD (H302-TW-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206 PH :7745833000.

BULDHANA

1372. MANRAJ MOTORS PVT LTD (COU1-COU-01), GAT NO. 94, PLOT NO. 11, SUNDERKHED, BULDHANA, MAHARASHTRA. - 443 001 PH:7875051521.

CHALISGAON

1373. MANRAJ MOTORS PVT LTD (AAE1-AAE-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA. - 424101 PH :8408889861.

CHANDGAD

1374. SAI SERVICE PRIVATE LIMITED (BTF1-BTF-01), GAT NO.360, G.P.M NO.157, AVP HALKARNII TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA. - 416507 PH :9673339103.

CHANDRAPUR

- 1375. TRISTAR CARS PVT LTD (H302-H3-01), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 442401 PH :7722068612
- 1376. TRISTAR CARS PVT LTD (H302-H3-03), NAGPUR ROAD, CHANDRAPUR - 442401 PH :7722068603.

CHIPLUN

1377. JAGRUT MOTORS PVT LTD (9A01-9A-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605 PH:7083687172/8308917693.

DAHANU

1378. SAI SERVICE PRIVATE LIMITED (V901-TD-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602 PH :9730302821/9167980005/9594952211.

DAPOLI

1379. JAGRUT MOTORS PVT LTD (G301-VG-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI.DIST RATANAGIRI. - 415712 PH: 8308816572/7447752372.

DHAMANGAON

1380. ASPA (SFZ1-SFZ-01), RAMDEVBABA NAGAR, ANJANISINGH ROAD, DHAMANGAON RAILWAY, DIST- AMRAVATI - 444709 PH :9850333558.

DHULE

1381. SEVA AUTOMOTIVE LTD. (P301-P3-01), GATE NO. 90, AWADHAN, MUMBAI AGRA ROAD, DHULE - 424001 PH: 02562-281128/29.

DINDORI

1382. AUTOMOTIVE MANUFACTURERS PVT. LTD. (AAF1-AAF-01), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202 PH-9673003132 / 9673006390.

DOMBIVALI

- 1383. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-JS-02), PLOT NO. B-43, PHASE-1,DOMBIVALI INDUSTRIAL AREA, DOMBIVALI,DISTT-THANE, MAHARASHTRA, -421201
- PH: 8879050913976920609539769206101.

 384. FORT POINT AUTOMOTIVE (CARS) PVT. LTD.
 (3906-JS-02), SURVEY NO.13, NEAR
 PIMPLESHWAR TEMPLE, OPP. MAHANAGAR
 CNG PUMP, KALYAN-SHILPHATA ROAD,
 MANGAON, SONARPADA, DOMBIVLI EAST.
 421203
 PH: 8422800740. 8422978490.

GADCHIROLI

1385. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (ZK02-ZK-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI, MAHARASTRA - 442702 PH.8669929188.

GADINGALAJ

1386. SAI SERVICE PRIVATE LIMITED (3802-DB-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ -416502 PH: 02327-222239.

GONDIA

1387. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-4C-02), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601 PH :888837023/88888554347

1388. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-4C-03), ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441 601 PH :888837023/888859487.

GUHAGAR

1389. JAGRUT MOTORS PVT LTD (BJV1-BJV-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGHAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703 PH :72185487987447752072.

HINGANGHAT

1390. SEVA AUTOMOTIVE PVT. LTD. (CDZ1-CDZ-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK – HINGANGHAT, DISTRICT – WARDHA, MAHARASHTRA. - 442301 PH. 7722067843.

HINGOLI

1391. PAGARIYA AUTO PVT. LTD. (IF03-IF-01), PLOT NO.5,7 & 8, SURVEY NO.29/2, AKOLA BY PASS ROAD, HINGOLI. - 431513 PH :8411961177.

HUPARI

1392. SAI SERVICE PRIVATE LIMITED (CIG1-CIC-01), GAT NO 925/8K/2, PLOT NO 7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT – KOLHAPUR. - 416203 PH :9923208454.

ICHALKARANJI

1393. SAI SERVICE PRIVATE LIMITED (4D01-4D-01), GATE NO. 107,KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122 PH 10230-245282

INDAPUR

1394. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-NQ-02), STATE HIGHWAY NO. 151, INDAPUR - 412219 PH :8308807314.

ISLAMPUR

1395. CHOWGULE INDUSTRIES PVT. LTD.
(P.J02-PJ-01), GATE NO.905/A/3, NEAR BOMBAY
RAYAN, PUNE-BANGALOE HIGHWAY (NH-4),
ISLAMPUR TALUKA: WALVA, DIST:SANGLI 415409
PH :02342-225757.

JALGAON

1396. MANRAJ MOTORS PVT LTD (C401-C4-01), AJINTA ROAD, MIDC INDL AREA, JALGAON -425003

PH:9423969538.

JALNA

1397. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-BC-02), PLOT NO. 4 & 5 , CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA, - 431203 PH :9158000063.

JATH

1398. CHOWGULE INDUSTRIES PVT. LTD.
(J102-BLX-05), PLOT NO. 12, SAWANT ESTATE,
MORE COLONY, OPP. CATTLE BAZAR, SATARA
ROAD, JATH, DISTRICT SANGLI,
MAHARASHITRA - 416404
PH. 102344-246598

1399. SIDHI WHEELS (BLX1-BLX-01), GAT NO- 27/1B, POST-RAMPUR, JATH-SANGLI ROAD, TALUKA-JATH, DISTRICT-SANGLI - 416404 PH: 8956454526.

JAYSINGPUR

1400. SAI SERVICE PRIVATE LIMITED (ASA1-ASA-01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, AP UDGAON(JAYSINGHPUR), TALUKA:SHIROL, DIST: KOLHAPUR - 416134 PH: 9673339762.

JEJURI

1401. EXCELL AUTO VISTA (SKY1-SKY-01), GAT NO-224, AT POST-SAKURDE, JEJURI, TALUKA-PURANDHAR, DISTRICT-PUNE, PIN-412303. -412303 PH.9146052651.

KALWAN

1402. SHAAN CARS PRIVATE LIMITED (BNW1-BNW-01), GAT NO. 189, PLOT NO. 7, MALEGAON ROAD, AIP KALWAN, NASHIK. -423501 PH. 9075028780. 9689003988.

KALYAN

1403. AHER AUTOPRIME LLP (CFV1-CFV-01), SURVEY NO.53 & 54, HIND MILL, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI - 421301

PH .9819705444/8657402204/9769927505.

1404. ALER AUTOPRIME LP (CFV-1-CFV-02), SURVEY
NO.31B,MOHANE ROAD ,NEAR SHAHAD
RAILWAY STATION,SHAHAD,KALYAN. - 421103
PH .8422871720/8657402204/9833993076.

KANKAVALI

1405. JAGRUT MOTORS PVT LTD (G301-V7-05), PLOT NO.32-33, SURVEY NO.-1886/1, MUMBAI-GOA HIGHWAY (NH-17). JANAVLI.KANKAVLI.MAHARASHTRA -

416002

PH:7499051071/9021095805.

KARAD

1406. CHOWGULE INDUSTRIES PVT. LTD. (F303-4E-02), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110 PH. 9922569835.

KARJAT

1407. SIMRAN MOTORS PVT. LTD. (7S01-TA-03), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201 PH :8691988895, 8108181978.

1408. KANKARIYA AUTOMOBILES PVT. LTD. (GJV1-GJV-01), KARJAT-NAGAR ROAD, KARJAT, MAHARASHTRA - 414402 PH 9890843771.

(ARMAD

1409. PAGARIYA (CEB1-CEB-01), GAT NO-245, BHAKTI COMPLEX, BEHIND BHARAT PETROL PUMP, AURANGABAD ROAD, KARMAD – 431007. - 431007 PH :7575077181 / 9687668929.

KARMALA

1410. CHAVAN MOTORS DIVISION INDIA PVT LTD (GJQ1-GJQ-01), GAT NO. 105, SURVEY NO. 3961, KARMALA-NAGAR ROAD, A/P- KARMALA, TALUKA - KARMALA, DIST.-SOLAPUR. - 413202 PH:8806665691.

KAVATE MAHANKAL

1411. CHOWGULE INDUSTRIES PVT. LTD. (SC02-SC-01), MAHANKALI BAAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405 PH 102341-222102

KHAMGAON

1412. MANRAJ MOTORS PVT LTD (BXU1-BXU-01), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON, MAHARASHTRA - 444303 PH :07623-2500023.

KHANAPUR (SANGLI)

1413. CHOWGULE INDUSTRIES LTD (SNM1-SNM-01), KHANAPUR VITA ROAD, KHANAPUR, TAL-KHANAPUR, DIST-SANGLI - 415307 PH:75079 66715.

KHARGHAR

1414. EXCELL AUTOVISTA PVT LTD (AAC1-AAC-01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PAVVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210 PH :7666703636 / 9594153308 / 8422991300 / 9320357300.

KHED

1415. JAGRUT MOTORS (COR1-COR-01), GAT NO -43/B, MAUZA-BHARNE NAKA, TALUKA-KHED, DIST-RATNAGIRI. - 415709 PH :9689533472.

KHOPOLI

1416. KIRAN MOTORS (9C02-9C-01), PLOT NO-68, VILLAGE-MULGAON, KHOPOLI INDUSTRIAL ESTATE, KHOPOLI, TALUKA-KHALAPUR DIST-RAIGARH - 410204 PH. 8976791922. 8976791920.

KOLHAPUR

1417. SAI SERVICE PRIVATE LIMITED (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR -416008 PH 10231-2661676

1418. SAI SERVICE PRIVATE LIMITED (3803-38-01).

C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122 PH :0230-2468376.

1419. SAI SERVICE PRIVATE LIMITED (3802-38-06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. - 416012 PH 10231-2329494

1420. KR MOTORS KOLKOHUR PVT LTD (3804-38-01), PLOT NO. 216/2, 216/3, 216/5, MUMBAI BANGALORE HIGHWAY, GOKUL SHIRGAON, KOLHAPUR. - 416234 PH. 73447755586. 74447755504.

KONGAON

1421. PRAKASH AUTO PVT. LTD. (3903-AZ-02), SURVEY NO. 126/127,98/38,AT & POST KONGAON, - 421302 PH:970280968/9870453155.

KOPARGAON

1422. SHAAN CARS PRIVATE LIMITED (COV1-COV-01), SURVEY NO. 15/36 GAWARE PATIL ESTATE, NAGAR MANMAD HIGHWAY, NEAR ASHOKA HOTEL, KOPARGAON. - 423 601 PH :9075028780.

KOREGAON BHIMA

1423. SAI SERVICE (BUO1-BUO-01), GAT NO-373, VILLAGE-KOREGAON BHIMA, TALUKA-SHIRUR, DIST-PUNE. - 415501 PH :7774997005.

KUDAL

1424. JAGRUT MOTORS PVT LTD (9B01-9B-01), SURVEY NO. 50/5, 51/5, AV PINGULI, TEMBDHURI, TALUKA – KUDAL, DISTRICT – SINDUDURG, MAHARASHTRA - 416520 PH:880666457/28208965235.

KURUDWADI

1425. CHAVAN MOTORS DIVISION INDIA PVT LTD (CUF1-CUF-01), GAT NO.:256, BYPASS ROAD, A/P KURDA, TALUKA-MADHA, DISTT. SOLAPUR. -413208 PH :880665691.

KURUNDWAD

1426. SAI SERVICE PVT. LTD. (BHO1-BHO-01), GAT NO. 250, AT POST - KURUNDWAD, TALUKA -SHUROO, DIST.-KOLHAPUR. - 416106 PH 96733339695

LANJA

1427. JAGRUT MOTORS (SER1-SER-01), GAT NO-663, TALUKA-LANJA, DIST - RATNAGIRI, MAHARASHTRA -416701 - 416701 PH :8108718346.

LASALGAON

1428. SHAAN CARS PRIVATE LIMITED (BZM1-BZM-01), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA - NANDGAON, DISTRICT - NASHIK. - 422306 PH :9075028780, 7720094874.

LATUR

1429. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-V8-01), CITY SURVEY NO. 2960, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR -413512

PH:9607999095.

1430. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-V8-02), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512 PH

:9607999091/9607999092/9607999093/9607999094/9607999007.

LONAVALA

1431. SEHGAL AUTORIDERS PVT. LTD. (CGA1-CGA-01), GATE NO. 120/1, VILLAGE – WAKSAI, TALUKA – MAVAL, LUNAVALA, DISTRICT – PUNE, MAHARASHTRA. - 410405 PH: 89753 73431.

MAHAD

1432. SIMRAN MOTORS PVT. LTD. (7S01-TX-04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301 PH:9870404323.

MALEGAON

1433. SHAAN CARS PRIVATE LIMITED (3703-FF-02). PLOT NO. 572/81, CHANDANPURI SHIVAR, OLD MUMBAI, AGRA ROAD, DIST- NASIK, MALEGAON -423203

PH:9922969620/9922969656.

MANCHAR

1434. THE KOTHARI WHEELS (1906-AGA-04), SOHAM NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, A/P MANCHAR, TAI UKA: AMBEGAON, DISTT: PUNE, MAHRASHTRA -410503 PH:8411003608

MANGALVEDHA

1435. CHAVAN MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NEAR SWARAJYA HOTEL, PANDHARPUR ROAD, CHOKAMELANAGAR, MANGALWEDHA, MAHARASHTRA, PIN-413305 -413305 PH :8805778881

MANGAON

1436. SIMRAN MOTORS PVT, LTD, (BAM1-BAM-01). SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASTHRA. - 402104 PH:9223181120

MANMAD

1437. SHAAN CARS PRIVATE LIMITED (BNX1-BNX-01). GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4. NANDGAON ROAD, MANMAD. - 423104 PH:9075028780.8888832369.

MANOR

1438. SAI SERVICE PRIVATE LIMITED (CRE1-CRE-01). GUT NO. 37, NEAR MSEB POWER STATION. PALGHAR MANOR ROAD, AT POST -TAKVAHAL, DISTRICT - PALGHAR, MANOR, -401403 PH:9167980005.

MIRA ROAD, THANE

1439. SUPREME AUTOMOBILES (3915-39-01). BRILLIANT COMPLEX, WESTERN EXPRESS HIGHWAY, MIRA ROAD, THANE- 401107. -401107 PH:8591942704.

MIRAJ

1440 CHOWGULE INDUSTRIES BYT LTD (J102-SD-03), 42C, OPP, WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410 PH:0233-2643221.0233-264322

MORGAON

1441. MAHALAXMI AUTO (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), GAT NO-179, MORGAON, -TALUKA- BARAMATI, DIST-PUNE - 412304 PH:9850994014.

MUMBAI

- 1442. SAI SERVICE PRIVATE LIMITED (0504-05-01), 462 SENAPATI BAPAT MARG.WORLI NAKA LOWER PAREL MUMBAL - 400013 PH:9594952122/9594952088/9167980082.
- 1443. SAI SERVICE PRIVATE LIMITED (0504-05-02). ARVIND CHAMBERS.194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069 PH:43030606/600.95949552341/9594952084/ 9594952250.
- 1444. VITESSE PRIVATE LIMITED (0503-05-01). SHAH INDL.ESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058 PH :02226730787/02226730280/02226730296/0226164
- 2500/02261642500. 1445. VITESSE PRIVATE LIMITED (0503-05-02), 77 AF PALKY GULLY.OFF VEER SAVARKAR MARG. PRABHADEVI. MUMBAI - 400025 PH:24229747/24223933/9821894915
- 1446. SAH & SANGHI AUTO AGENCIES PVT.LTD (0505-05-01), PRAKASH MILLS COMPOUND, OFF, GLOBE MILLS PASSAGE WORLLMUMBAL-400013
- PH:02224925452/02224925453/02224925454. 1447. SAI SERVICE PRIVATE LIMITED (0504-05-04). C/O SHAKTI INDUSTRIAL WIRE COMPOUND.DATTA PADA ROAD.BORIVILI (FAST) MUMBAI - 400066 PH:28707000 / 9594057006 / 9594952344 /
- 1448. EXCELL AUTOVISTA PVT LTD (0510-05-01), RESHAM SINGH COMPOUND.CST ROAD.KALINA. SANTACRUZ EAST.MUMBAI -PH:67743888.26653242.43.46 / 7666703636 / 9594972889 / 7715804477.
- 1449. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-05-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST) . MUMBAI - 400070 PH:61563734 / 61563744 / 61563713 /9167773925.
- 1450. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096 PH:9694973889.8422800747.

1451. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-01). CHARKOP INDUSTRIAL ESTATE. KANDIVLI(WEST), MUMBAI, MAHARASHTRA -400067

:7718893072/9152001329/8082551017/9870938888

- 1452. VITESSE PRIVATE LIMITED (0503-05-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE. CHARKOP, KANDIVALI (W), MUMBAI - 400067 PH:02228674753
- 1453. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-03), C/O VARUN STEEL INDUSTRIES, AAM TOOL COMPOUND, BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI -400010 PH:9594974678.8691045341.
- 1454. SHIVAM AUTO ZONE (I) PVT, LTD, (0531-05-02). PLOT NO. 4&5, RAMCHANDRA LANE EXTN., OFF LINK ROAD, KANCHPADA, MALAD-WEST, MUMBAI, 400064, - 400064
- PH:8082551115/9362721124/9870938888. 1455. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-05-01), PLOT NO.115/116/117 MIVERVA INDUSTRIAL ESTATE, MULUND-WEST, MUMBAI - 400080 PH:8104989839/8104989847.
- 1456. KIRAN MOTORS (05A7-05-01), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, GHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086. - 400086 PH:9152004223/7700988886.
- 1457. MY CAR (PUNE) PVT LTD (05A8-05-01), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072 PH:8104907081.

MURBAD

1458. PRAKASH AUTO PVT. LTD. (BYO1-BYO-01). SURVEY NO. 61/2, KALYAN - MURBAD ROAD. VILLAGE - DAHAGAON, TALUKA - MURBAD, DISTRICT - THANE, MAHARASHTRA, - 421605 PH:7798725726.

MURGUD

1459. SAI SERVICE PRIVATE LIMITED (AWA1-AWA-01), R.S. NO. 188/4, A/P MURGUD. TALUKA: KAGAL, DIST: KOLHAPUR - 416219 PH:02325-265553.

MURTIZAPUR

1460. KHANDELWAL AUTOWHEELS (SHE1-SHE-01). SURVEY NO 38, MAUJA SONORI, NH 06, NEAR HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA -444107 PH:#REF!

NAGPUR

1461. SEVA AUTOMOTIVE LTD. (2002-20-01), 34/3. KACHIMET AREA. NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR -440023

PH:0712-6652863.

1462. AUTOMOTIVE MANUFACTURERS PVT. LTD (2001-20-02), 575 KAMPTEE ROAD, NAGPUR-26...

PH:9673004226/9673004223

- 1463. SEVA AUTOMOTIVE LTD. (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, - 440016 PH:0712-666444.
- 1464. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD, NAGPUR -440035
- PH:8888859506/8888859534. 1465. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001 PH:9168699701/9673004277.
- 1466. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2007-20-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR. MAHARASTRA - 440018 PH:8888859542.
- 1467. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2007-20-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR. MAHARASTRA. - 441202 PH:8888820312.
- 1468. SEVA AUTOMOTIVE PVT. LTD. (2002-20-04), PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED, KH NO.45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027 PH:8390446644.
- 1469. ARUN MOTORS (2008-20-01), PLOT NO-9&10. PATNI PLAZA, KHAMLA RING ROAD. SAWARKAR NAGAR, NAGPUR, MAHARASHTRA - 440025
- PH:7757988800/7028688800. 1470. ARUN MOTORS (2008-20-02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028 PH:7757988800

NALASOPARA

1471. SHIVAM AUTO (CUH1-CUH-01), SURVEY NO. 91.92 . PLOT NO. 7. VILLAGE- DHANIV. NALASOPARA, DIST. PALGHAR, MAHARASHTRA. - 401209 PH:9152001458/7777002930.

NANDED

1472. SEVA AUTOMOTIVE LTD. (6801-68-01), NANDED HYDERABAD ROAD, NANDED - 431604 PH:7447415607.

NANDURBAR

1473. SEVA AUTOMOTIVE LTD. (P301-KW-02), P NO. -324, BASILAL NAGAR SHAHADA BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFULLY NANDURBAR-425412 - 425412 PH:7720017528.

NARAYANGAON

1474. THE KOTHARI WHEELS (1906-FV-02), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :8411003608

NASHIK

- 1475. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3702-37-01), P-1-12, ADDITIONAL NASIK INDL. AREA, AMBAD, NASIK - 422010 PH: 9673000262 / 9673000822 / 9673000842.
- 1476. SEVA AUTOMOTIVE LTD. (3701-37-01), PLOT NO. X - 46,MIDC. AMBAD, NASIK - 422010 PH:0253-6644444
- 1477. SHAAN CARS PRIVATE LIMITED (3703-37-01), E-3 MIDC AREA,SATPUR , NASIK,MAHARASHTRA - 422007 PH :9075028780, 9922969646.
- 1478. SHAAN CARS PRIVATE LIMITED (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011 PH : 0253-2236080.
- 1479. SEVA AUTOMOTIVE LTD. (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH '91480007/09
- 1480. SEVA AUTOMOTIVE PVT LTD (3701-37-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006 PH :0253-6634444.
- 1481. SEVA AUTOMOTIVES PVT LTD (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH :0253-6654444.

NAVI MUMBAI

- 1482. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA, SHIRVANE NERUL, NEW BOMBAY, -400706 PH :66143900/66133923/66143924.
- 1483. SIMRAN MOTORS PVT. LTD. (3913-9K-01), CAMEO FABRIC COMPANY, GEN 16, NEAR SULZER COMPANY, DIGHA, TTC AREA, AIROLI-400701 PH :8788582329, 8369658212.

NEVASA

1484. KANKARIYA AUTOMOBILES PVT. LTD. (BSU1-BSU-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA – NEVASA, DISTRICT – AHMEDNAGAR. - 414603 PH: 9420494601.

NIPHAD

1485. SHAAN CARS PVT. LTD. (COX1-COX-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT – NASHIK, MAHARASHTRA. -422303 PH 9075028780.

OSMANABAD

1486. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-LW-03), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501 PH :8888867861

PABAL

1487. MAHALAXMI (SKB1-SKB-01), 3733, SHINALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403 PH :8956288087.

PAITHAN

1488. PAGARIYA AUTO PVT. LTD. (BNQ1-BNQ-01), GAT NO-277, MAUZA- PAITHAN, TALUKA-PAITHAN, DIST - AURANGABAD 431107. - 431107 PH :9922994237.

PALGHAR

1489. SAI SERVICE PRIVATE LIMITED (TE01-TE-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404 PH :9167980042/9167980005/9594952211.

PALUS

1490. CHOWGULE INDUSTRIES PVT. LTD. (J102-02-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308 PH:888870122.

PANDHARPUR

1491. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-0H-05), GAT NO.56, ESABAVI, PUNE ROAD, TAL:PANDERPUR, SOLAPUR - 413001 PH:7774997005.

PANVE

1492. SIMRAN MOTORS PVT. LTD. (7S01-7S-01), PLOT2-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBAI PUNE HIGHWAY,PANVEL - 410206 PH. 8291957798. 8657443202. 1493. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-75-03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206 PH

:9769202055/9769206045/9769206018/8291467042

PARATWADA

1494. ASPA BANDSONS AUTO PVT. LTD.
(CF21-CF2-01), SURVEY VD. 26/4A, RAMGAON,
AMRAVATI PARATWADA ROAD, NEAR JAWARDI
PHATA, PARATWADA TALUKA – ACHALPUR,
DISTRICT – AMRAVATI. - 444 805
PH: 7720997106.

PARBHANI

1495. PAGARIYA AUTO PVT. LTD. (LN02-LN-01), SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI -431401 PH-9511868433

PATAS

1496. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-PR-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH :8888890957.

PFN

1497. SIMRAN MOTORS (9101-9I-01), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107 PH -9503381198

PHALTAN

1498. CHOWGULE INDUSTRIES PVT. LTD. (KH02-KH-01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA. -415523 PH.3888886301.

PIMPLEGAON

1499. AUTOMOTIVE MANUFACTURERS PVT. LTD. (BAY1-BAY-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202 PH : 9873000844 / 9673001204.

PIRANGUT

1500. MY CAR (SEC1-SEC-01), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108. - 412108 PH: 9325424613.

PUNE

1501. SAI SERVICE PRIVATE LIMITED (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE -411012 PH:020-46404440/020-46404448. 1502. SAI SERVICE PRIVATE LIMITED (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE -411004 PH :9923208347.

1503. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-02), S.NO. 53, PUNE SATARA HIGHWAY, KATRAJ, PUNE - 411046 PH :020-66786200.

1504. SAI SERVICE PRIVATE LIMITED (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH :9923208345.

1505. WONDER CARS PVT LTD (1903-19-02), 12, NPS LINES, SOLAPUR ROAD, OLD POOL GATE, CAMP, PUNE - 411001 PH :020-26332934/35.

1506. THE KOTHARI WHEELS (1906-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH :7498272309.

1507. MY CAR (PUNE) PVT. LTD. (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057 PH :020-67922900.

1508. ACE KUDALE CAR PVT. LTD. (1910-19-01), 36/2C/1, MANJRI BUDRUK, PUNE-SOLHAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE -412201

PH:9552582454.

1509. CHOWGULE INDUSTRIES PVT. LTD. (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE -411046

PH :02066803555/02066803500. 1510. SAI SERVICE PRIVATE LIMITED (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019

PH :020-46605999/020-46605995. 1511. SEHGAL AUTORIDERS PVT. LTD. (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021 PH :8308304444. 020-41463625. 020-41463627.

1512. SAI SERVICE PRIVATE LIMITED (1901-19-06), SURVEY NO. 244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE, MAHARASHTRA - 411057 PH: 9923208302.

1513. ACE KUDALE CAR PVT. LTD. (1910-19-02), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMAL, BHOSARI, PUNE. - 411039 PH :9552193904.

1514. THE KOTHARI WHEELS (1906-19-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019 PH :9168662302.

- 1515. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH :888874980.
- 1516. WONDER CARS PVT LTD (1903-19-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. -411018 PH:020-46608888.
- 1517. SAI SERVICE PRIVATE LIMITED (1901-19-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. -411048 PH :9923208358.
- 1518. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE-411016 PH:888842887.
- 1519. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-05), 2932/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHITRA) - 411033 PH :020-679157007385265700.
- 1520. SAI SERVICE PRIVATE LIMITED (1901-19-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT -PUNE, MAHARASHITRA. - 411 041 PH. 1903/2018312
- 1521. THE KOTHARI WHEELS (1906-19-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. -411028 PH :8411002005, 8087060432.
- 1522. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-06), SR. NO. - 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE- SATARA ROAD, PUNE. - 411009 PH :020-67273200
- 1523. EXCELL AUTOVISTA PVT LTD (1917-19-01), GATE NO 1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST PUNE. - 412308

PH:9594632888/9146052651.

- 1524. THE KOTHARI WHEELS (1906-19-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADCAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH:8411003631.
- 1525. ACE KUDALE CAR PVT. LTD. (1910-19-03), SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA – HAVELI, DISTRICT – PUNE. - 412105 PH.:7767814381.

- 1526. SUMANKIRTI CARS PVT. LTD. (1915-19-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUMM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH:8551990106.
- 1527. MY CAR (PUNE) PVT. LTD. (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE – KURULI, TALUKA – KHED, CHAKAN, DISTRICT – PUNE. -410501 PH. :7755900000.
- 1528. WONDER CARS PVT LTD (1903-19-04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA MULSHI, DANGE CHOWK, PUNE 411 033. 411033 PH :7887883311.

RAHATA

1529. KANKARIYA AUTOMOBILES PVT. LTD. (ZV03-ZV-01), SHIRDI ROAD, SAKORI, RAHATA, -423107 PH:8275033313.

RAHURI

1530. KANKARIYA AUTOMOBILES PVT. LTD. (COZ1-COZ-01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH :9130026767.

RAJAPUR

1531. JAGRUT MOTORS PVT LTD (AHA1-AHA-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702 PH :9527623663/8806665572.

RAJGURUNAGAR

1532. MY CAR (PUNE) PVT. LTD. (CB21-CB2-01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH.911223153.

RATNAGIRI

1533. JAGRUT MOTORS PVT LTD (G301-G3-01), D-25, MIDC MIRJOLE, MAHARASTRA, RATNAGIRI - 415639 PH :2352228380/9130013172.

ROHA

1534. EXCELL AUTOVISTA (COS1-COS-01), SHOP NO. 1 & 2. PANCHARATNA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109 PH :9209200073.

SANGAMNER

1535. SHAAN CARS PRIVATE LIMITED (HE03-HE-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605 PH 102425-25410

SANGLI

- 1536. CHOWGULE INDUSTRIES PVT. LTD. (J102-J1-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH -9880968605
- 1537. SIDDHI WHEELS (J104-J1-01), SR NO. 917//2/B, SANGLI MIRAJ ROAD, MIRAJ, DISTRICT - SAGLI. - 416410

PH:9371727001, 0233-2211610/1620/1630.

SANGOLA

1538. CHAVAN MOTORS DIVISION INDIA PVT LTD (CUE1-CUE-01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA -SANGOLA, DIST.-SOLAPUR. - 413307 PH :8806665691 .

SASWAD

1539. CHOWGULE INDUSTRIES PVT. LTD. (1908-PH-03), PLOT NO 74/2/AP, BEHIND PURANDAR HIGH SCHOOL, BESIDE MAHADA COLONY, SASWAD, TALUKA PURANDAR, PUNE - 412301 PH :02115224450/02115225210.

SATANA

1540. SHAAN CARS (BSW1-BSW-01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 -423301 PH :9922969656.

SATARA

1541. CHOWGULE INDUSTRIES PVT. LTD. (F303-F3-01), PLOT NO. B-2, OLD MIDC, SATARA -415002 PH: 3011015066/9850966823.

SAVNER

1542. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (BTJ1-BTJ-01), PLOT NO -2 MADANE LAYOUT MOUZA GUJARKHEDI NEAR INDIN PETROL PUMP NAGPUR ROAD SAONER-441107

PH :8888859546

SAWANTWADI

1543. JAGRUT MOTORS PYT LTD (BBL1-BBL-01), SHIVSHAMBHO APARTMENT, 1190, Arp KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. 416510 PH 3970654699, 9689533472.

SHAHAPUR

1544. SHIVAM AUTO ZONE (I) PVT. LTD.
(BZU1-BZU-01), DR. DESHPANDE COMPOUND,
NEAR BHATSA COLLONY, VILLAGE –
GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT –
THANE, MAHARASHTRA - 421601
PH: 7718893483.

SHAHUWADI

1545. SAI SERVICE (BFT1-BFT-01), GATE NO. 1213, R/AT DONOLI, TALUKA - SHAHUWADI, DIST. -KOLHAPUR - - 416 213 PH :9923208448.

SHILTPATA

1546. VELOX MOTORS (SQJ-SQJ-01), SURVEY NO-99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTA MANDIR, POST-PADALE, DIST-THANE, PIN-421204. - 421204 PH: 3819984188.

SHIRUR

1547. MAHALAXMI AUTOMOTIVES PVT. LTD. (ZD01-ZD-01), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA. - 412210 PH: 388837082 /9011038682.

SHIRWAL

1548. CHOWGULE INDUSTRIES PVT. LTD. (BSD1-BSD-01), GAT NO.175, AP SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH:9637399003.

SHRIRAMPUR

1549. KANKARIYA AUTOMOBILES PVT. LTD. (LV03-LV-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709 PH:9420494543.

SIKRAPUR

1550. EXCELL AUTOVISTA PVT LTD (GKJ1-GKJ-01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PIN-412208, PUNE - 412208 PH. 9146194973.

SILLOD

1551. PAGARIYA AUTO PVT. LTD. (2103-ZG-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213.

SINNAR

1552. SHAAN CARS PRIVATE LIMITED (3703-FU-03), A-24, MIDC AREA MALEGAON, SINNAR TAL-SINNAR,, - 422103 PH :02551-230305.

SOLAPUR

- 1553. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-02), 150, AKALKOT ROAD, OPP. SVCS HIGH SCHOOL, SOLAPUR, - 413006 PH:0217-2606666/8805986818.
- 1554. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-01), 18,39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224 PH :8805778881.

1555. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-06), PLOT NO.95, IND. ESTATE, HOTAGI ROAD, SOLAPUR. - 413003 PH:8805986826.

TALASARI

1556. SHIVAM AUTO ZONE (I) PVT. LTD. (BIN1-BIN-01), SURVEY NO. 191/1 PLOT NO. 5, AT-POST – VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606 PH :6355248143/777002930.

TALEGAON

1557. MY CAR (PUNE) PVT. LTD. (4K01-4K-01), SR.NO.113, HISSA NO.1/3/2/A, MUMBAI PUNE OLD HIGHWAY, MAVAL, TALEGAON - 410506 PH :9730855855.

TALOJA

1558. EXCELL AUTOVISTA PVT LTD (AAC1-9K-02), PLOT NO-9,MIDC,NAVADE,TALOJA, TAL-PANVEL, DIST-RAIGAD - 410208 PH :9136948195/9320357300.

TASGAON

1559. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT. LTD.) (GKB1-GKB-01), SHETKARI MARKET, NEAR ISHA HOTEL, TASGAON-SANGLI ROAD, TALUKA - TASGAON, DIST-SANGLI. - 416312 PH :8775030748.

THANE

1560. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-39-01), KOTHARI WAREHOUSE NO. 111,POKHRAN ROAD NO. 11,MANPADA, CHATALSAR,THANE - 400607 PH :9594974656, 8691039873.

1561. NAVNEET MOTORS (3908-39-02), B R T PLOT ,THANE (W) ,MAHARASHTRA - 400607 PH :9664496732, 9167215178.

1562. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-39-02), NEW SURVEY NO. 17/1/6, NEAR BLUE ROOF CLUB, VILLAGE - OWALE, GHODBUNDER ROAD, THANE (W). - 400815 PH :8104989847,96536 88455.

IIIWALA

1563. AHER AUTOPRIME (BYP2-BYP-01), SURVEY NO. 23/2, SHOP NO. 3, NEAR GOVELI, TITWALA ROAD, GHOTSAI, TITWALA, PIN-421301, MAHARASHTRA - 421301 PH.18008334369.

TURBHE

1564. SAI SERVICE (0504-9K-06), D 42, TTC INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 -400705 PH :022-268611111/8976999060.

ULHASNAGAR

1565. PRAKASH AUTO PVT. LTD. (3903-39-01), U NO-3,SHEET NO. 30,VITHALWADI STATION ROAD, ULHASNAGAR - 421003 PH :9987992127/9870453155.

URALI KANCHAN

1566. EXCELL AUTOVISTA PVT LTD (GKI1-GKI-01), GAT NO-244, VILLAGE-SORTAPWADI, TALUKA -HAVELI, URULI KANCHAN, DIST-PUNE, PIN-412201 - 412201 PH: 9226089614.

VADUJ

1567. CHOWGULE INDUSTRIES PVT. LTD. (F303-GQ-03), KALEVASTI, VADUJ DAHIWADI ROAD, VADUJ - 415506 PH :8888866659.

VAIJAPUR

1568. PAGARIYA AUTO PVT. LTD. (BNR1-BNR-01), NEAR SUBHASH BUNGLOW, STATION ROAD, VAIJAPUR, AURANGABAD. - 423701 PH:9922994237.

VASAI

1569. SAI SERVICE PRIVATE LIMITED (V901-V9-01), ANDRADESH BHAVAN, SURVEY #27 A.NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASTRA - 401202 PH :91679800809/167980036/9594952211.

1570. SAI SERVICE PRIVATE LIMITED (0504-V9-03), C/O MR. KENNETH NICHOLAS D'SOUZA, SURVEY NO-98, SATIVALI ROAD, VILLAGE-WALIV, VASAI (EAST), DIST-PALGHAR, MAHARASHITRA, PIN-410208 - 401208 PH :9167980004/91590084/9594950000.

VASHI

1571. MY CAR (PUNE) PVT. LTD. (05A4-05-01), A-751/2, MIDC TTC, TURBHE MAHAPE ROAD, PAWANE, NAVI MUMBAI - - 400 071 PH :8104906953. 9372802861. 9326713481.

VFI HE

1572. SUMANKIRTI CARS (SLO1-SLO-01), MAUZA NO-492/2, A/P-VELHA, TAL- VELHA, DIST-PUNE-412212 - 412212 PH :8554981603/8550995444.

VIKRAMGADH

1573. SHIVAM AUTOZONE (SKV1-SKV-01), NEAR GOVERNMNET DISPENSARY HOSPITAL, DAHANU ROAD, TEHSIL-VIKRAMGADH, DIST-PALGHAR-401605 - 401605 PH #BFFI

VIRAR

1574. SAI SERVICE PRIVATE LIMITED (V901-PG-02), SURVEY NO.16, AGASHI ROAD, PADMAN NAGAR, VIRAR-WEST, DISTT. PALGHAR. -401301 PH 9594952343/9167980036/9594952211.

VITA

1575. CHOWGULE INDUSTRIES PVT. LTD. (BSE1-BSE-01), S NO. 900, HISSA NO. 1,2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA – KHANAPUR, DISTRICT – SANGLI, MAHARASHITRA - 415311 PH: 388870120.

WAGHOLI

1576. SAI SERVICE PRIVATE LIMITED (1901-AB-04), GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL-HAVELI, DIST- PUNE - 412207 PH :9923208313/9923208221/9923208133.

WAI

1577. CHOWGULE INDUSTRIES PVT. LTD. (BYC1-BYC-01), GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL – WAI, DISTT. SATARA - 412803 PH: 8380080501.

WALUJ

1578. PAGARIYA AUTO PVT. LTD. (2103-MC-03), E-16,WALUJ,AURANGABAD - 431001 PH :9860999466.

WARANANAGAR

1579. SAI SERVICE PRIVATE LIMITED (CRB1-CRB-01), GAT NO.:1122/A, KODOLI, TALUKA: PANHALA, DIST. KOLHAPUR - 416114 PH: 9923204173.

WARDHA

1580. SEVA AUTOMOTIVE LTD. (2002-AC-02), GOPURI CHOWK, ,OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001 PH :07152-253545/253525.

1581. SEVA AUTOMOTIVE PVT. LTD. (2002-AC-05), PLOT NO. 177, WARDHA-NAGPUR HIGHWAY, AT. PAVNAR, TEHSIL – WARDHA, DIST. -WARDH, PIN-442111, MAHARASHTRA - 442111 PH. 7720093444.

WARUD

1582. ASPA BANDSONS AUTO PVT. LTD. (F201-UG-04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906 PH.7248925687.

WASHIM

1583. ASPA BANDSONS AUTO PVT. LTD. (F201-9D-02), NEAR RAILWAY CROSSING, HIGOLI ROAD, WASHIM, - 444505 PH :9922500981/ 9146191534.

YAVATMAL

1584. HIMALAYA CARS (4M01-4M-01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001 PH:9011014729.

YEOLA

1585. SEVA AUTOMOTIVES PVT LTD (BST1-BST-01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANIMAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA – YEOLA, DISTRICT – NASHIK, MAHARASHTARA. - 423401 PH. 9130033944.

YEWAT

1586. MAHALAXMI AUTOMOTIVES PVT. LTD. (AZA1-AZA-01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). - 412202 PH: 8308R18946

MANIPUR

BISHNUPUR

1587. EASTERN MOTORS (CSA1-CSA-01), BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR DISTT. MANIPUR. - 795126 PH: 8415945626.

CHANDEL

1588. EASTERN MOTORS (CSB1-CSB-01), KAKCHING LAMKHAI, AH1 (INDO BURMA ROAD), CHANDEL (MANIPUR) - 795103 PH :8415945626.

CHURACHANDPUR

1589. EASTERN MOTORS (BBE1-BBE-01), HMUIA VENG, TEDDIM ROAD, CHURACHANDPUR, MANIPUR - 795128 PH: 03874235969, 9862555472.

IMPHAL

1590. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795 001

PH:8415945626.

1591. EASTERN MOTORS (7401-74-02), NH,39, CHINGMEIRONG, WEST, IMPHAL. - 795010 PH:8415945626.

1592. SAMADON ENTERPRISE (7402-74-01), 82 GHARI MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795 140 PH :7005987123.

JIRIBAM

1593. EASTERN MOTORS (SMG1-SMG-01), AT HILGHAT, IMPHAL SILCHAR ROAD, JIRIBAM -788104 PH :8415945626.

SENAPATI

1594. EASTERN MOTORS (CNN1-CNN-01), DIST. -COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI, SENAPATI, MANIPUR. - 795 106 PH: 8415945626.

THOUBAL

1595. EASTERN MOTORS (BJL1-BJL-01), THOUBAL ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138 PH :9862662225.

UKHRUL

1596. SAMADON ENTERPRISE (SCK1-SCK-01), KAMPHASOM, UKHRUL, MANIPUR - 795142 PH:9774216305.

MEGHALAYA

BHOIRYMBONG

1597. RANI MOTORS (CHP1-CHP-01), VILLAGE – UMROI MADAN, DISTRICT – RI BHOI, MEGHALAYA. - 793103 PH :9774478281.

JOWAI

1598. RANI MOTORS (3I01-3I-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150 PH:7085849525.

KHLIEHRIAT

1599. BANALARI WORLD CARS (8502-PZ-03), JOWAI-SICHAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150 PH :7005757760/7005569550.

MAWKYRWAT

1600. RANI MOTORS (CGR1-CGR-01), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGALAYA - 793114 PH :9856005544.

MAWNGAP

1601. BANALARI WORLD CARS (CBK1-CBK-01), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST.-EAST KHASI HILLS, MEGHALAYA. - 793121 PH.700575776077005569550.

MYLLIEN

1602. BANALARI WORLD CARS (CSK1-CSK-01), MADANIING SYIEM, MYLLIEM, SHILLONG CHERRAPUNJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009 PH:700575776007005569550.

NONGPOH

1603. RANI MOTORS (8501-TN-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT. - 793102 PH :9774478281.

NONGSTOIN

1604. RANI MOTORS (8501-0P-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119 PH :9856005544.

PYNURSULA

1805. BANALARI CAR WORLD (CBJ1-CBJ-01), PHLANGSHLAIN MAIN ROAD, SHILONG DAWKI, PYNURSLA, DISTRICT - EAST KHASI HILLS, MEGHALAYA - 793110 - 793110 PH :8415942700.

SHILLONG

- 1606. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014 PH : 9862099400
- 1607. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021 PH :8014734780
- 1608. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017 PH:7005757760/7005569550.

TURA

1609. RANI MOTORS (CLF1-CLF-01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101 PH:7005563791.

UMSAW

1610. BANALARI WORLD CARS (CHZ1-CHZ-01). UMSAWKHWAN RAID MAWBUH, MYLIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. -793123 PH .7005757760/7005569550.

MIZORAM

AIZAWL

1611. G.I.G. MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001 PH:8974559065.

MP

NAINPUR

1612. STANDARD AUTO (SEZ1-SEZ-01), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJAJ SHOW ROOM, NAINPUR, DISST MANDLA, MADHYA PRADESH -481776. -481776 PH :7771003374.

NAGALAND

DIMAPUR

1613. PROGRESSIVE MOTORS (3201-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112 PH :7005254089.

KOHIMA

1614. SEYIE AUTO (4N02-4N-01), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001 PH:7005867051.

MOKOKCHUNG

1615. PROGRESSIVE MOTORS (CGL1-CGL-01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601 PH :87877325534

WOKHA

1616. PROGRESSIVE MOTORS (SFH1-SFH-01), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111 PH:9774070707.

ODISHA

ANANDAPUR

1617. JYOTE MOTORS PVT LTD (CIUZ-CIU-01), KHATA NO. 246/407, PLOT NO. 76, P.S. – GHASIPURA, MOUZA – SUDUSUDIA, DISTRICT – KEONJHAR, ANANDPUR, ODISHA. - 758021 PH. 7381028525.

ANGUL

1618. ODYSSEY MOTORS PVT LTD (W101-W1-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145 PH :9439817308.

BALASORE

1619. JYOTE MOTORS (BALASORE) PVT. LTD (L501-L5-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019 PH.7381072600.

BALUGOAN

1620. JYOTE MOTORS (CWG1-1-CWG-01), .M/S PLOT NO 758/31,KHATA NO 350/30,MOUZA-GOBARDHANPUR,BALUGAON, DISTRICT-KHORDA,ODISHA-752030 - 752030 PH :9776615001.

BAMRA

1621. ODYSSEY MOTORS (SIA1-SIA-01), M/S ODYSSEY MOTORS,NEAR SATSANG KENDRA, DUMERMUNDA COLLEGE ROAD, BAMRA, GOVINDPUR-768221. - 768221 PH:9439314464.

BARGARH

1622. ODYSSEY MOTORS PVT LTD (D401-SJ-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028 PH :8908944206.

BARIPADA

1623. JYOTE MOTORS (BALASORE) PVT. LTD (L501-RQ-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001 PH.7381072624.

BERHAMPUR

1624. SKY AUTOMOBILES (E203-E2-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002 PH : 7381266000. 1625. SKY AUTOMOBILES (E203-E2-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE - KONISI, BERHAMPORE, GANJAM, ODISHA. - 761008 PH :7381266000.

BHADRAK

1626. JYOTE MOTORS (BALASORE) PVT. LTD (IZ01-IZ-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK, ODISHA - 756101 PH :976345311.

BHAWANIPATNA

1627. LEGEND CARS PVT. LTD. (SW01-TB-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001 PH:9937198684.

BHUBANESHWAR (NAYAPALLI)

1628. JYOTE MOTORS PVT LTD (0405-04-01), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-751 003 - 751003 PH :7381028525.

BHUBANESWAR

- 1629. NARAYANI MOTORS PVT. LTD. (0403-04-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006 PH :9583022031.
- 1630. JYOTE MOTORS PVT LTD (0402-04-01), A-62, NAYAPALLINEAR CRPF SQUARE, BHUBANESWAR - 751003 PH: 7064493302.
- 1631. SKY AUTOMOBILES (0404-04-01), PLOT NO. -435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022 PH :8117829611.
- 1632. NARAYANI MOTORS PVT. LTD. (0403-04-02), PLOT NO 56 AND 57, RASULGARH, BHUBANESHWAR, ODISHA - 751010 PH: 9583022046.
- 1633. JYOTE MOTORS PVT LTD (0402-04-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010 PH: 7978910223.
- 1634. SKY AUTOMOBILES (0404-04-02), KHATA NO. 457/675, PLOT NO. 543, 756, 789 AND 546, SRIVIHAR, INFRONT OF IOCL OFFICE, P.S. -CHADRASHEKARPUR, BHUBANESHWAR, ODISHA. - 751 024 PH :7240011604

BOLANGIR

1635. ODYSSEY MOTORS PVT LTD (D401-MW-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001 PH :8895418122.

CHANDIKHOLE

1636. SKY AUTOMOBILES (BXL1-BXL-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA, - 755044 PH.9776645798.

CUTTACK

1637. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011 PH :9776645798

1638. TUSHI MOTORS PVT. LTD. (6702-67-01), PLOT NO. C-14, PLOT NO. C-13, INDUSTRIAL ESTATE IKHAPURIA, TAHASIL - CUTTACK SADAR CUTTACK DISTRICT, BHUBANESWAR - 753001 PH :9692912345

DEOGARH

1639. ORBIT MOTORS PVT. LTD. (CBB1-CBB-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108

PH :9437607865. DHENKENAL

1640. SKY AUTOMOBILES (6701-4P-04), PLOT NO-136/1103, KATHAGARA, NEARASSAM OIL, NH-42, DHENKANAL. - 759001 PH : 7440025919

GANDAI

1641. SPARSH AUTOMOBILES (SHU1-SHU-01), M/S SPARSH AUTOMOBILES, WARD NO -7, NEAR KRISHI UPAJ MANDI, GANDAI RAJNANDGAON ROAD,GANDAI -491888 - 491888 PH :9926626662.

JAGATSINGHPUR

1642. NARAYANI MOTORS PVT. LTD. (CFM1-CFM-01), KHATTA NO. 827/221 & 827/222, PLOT NO. 1197 & 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSINGHPUR, ODISHA -754103 PH 9556511213

JAJPUR

1643. SKY AUTOMOBILES (6701-RZ-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019 PH :9583011010.

JALESWAR

1644. JYOTE MOTORS (BALASORE) PVT. LTD (BXP1-BXP-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.-BALASORE, ODISHA. - 756032 PH. 73811072600

JEYPORE

1645. LEGEND CARS PVT. LTD. (SW01-SW-03), SOURAGUDA, JEYPORE, DISTT-KORAPUT, ORISS A, INDIA - 764001 PH 9437575188

JHARSUGUDA

1646. ODYSSEY MOTORS PVT LTD (BJU1-BJU-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201 PH: 9439548823.

KEONJHAR

1647. JYOTE MOTORS PVT LTD (7U01-7U-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. -758001 PH : 7064499047

NAYAGARH

1648. JYOTE MOTORS PVT LTD (0402-DC-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH -752069 PH: 7064499048.

NIMPARA

1649. NARAYANI MOTORS PVT. LTD. (CFL1-CFL-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA. - 752106 PH : 7381093622

PALLAHARA

1650. ODYSSEY MOTORS PVT LTD (CHV1-CHV-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119 PH: 9439817308.

PARADEEP

1651. NARAYANI MOTORS PVT. LTD. (OE01-OE-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. -754141 PH: 9583022020.

PARLAKHEMUNDI

1652. SKY AUTOMOBILES (CLG1-CLG-01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211 PH 9776999977

PURI

1653. NARAYANI MOTORS PVT. LTD. (4Q01-4Q-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA, PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002 PH.9583022220.

RAIRANGPUR

1654. JYOTE MOTORS (BALASORE) PVT. LTD (CES1-CES-01), PLOT NO.1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046 PH - 7064499936

RAYAGADA

1655. LEGEND CARS (YB01-YB-01), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001 PH.7008771180.

ROURKELA

1656. ORBIT MOTORS PVT. LTD. (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA, ORRISA - 769041 PH: 9437061040.

SAMBALPUR

1657. ODYSSEY MOTORS PVT LTD (D401-D4-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH:7381083571.

SORO

1658. JYOTE MOTORS (SQF1-SQF-01), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE. - 756045 PH 9776615001

SUBARNAPUR

1659. ODYSSEY MOTORS PVT LTD (BUK1-BUK-01), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNPUR, ODISHA - 767017 PH :8896418122.

SUNDERGARH

1660. ORBIT MOTORS PVT. LTD. (BWJ1-BWJ-01), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH :8249354447.

UDALA

1661. JYOTE MOTORS (BALASORE) PVT. LTD (CHW1-CHW-01), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA. - 757041 PH: 8249877935.

ODISHAN

NIRGUNDI

1662. NARAYANI (0403-SIP-4), KHATA NO 251/255, PLOT NO 233, MALGOWDINI-MOUZA BLITERUA, NIRGUNDI,DISTRICT-CUTTACK, ORISSA. -754025 PH :9583001877.

ORISSA

BHUBANESWAR

1663. NARAYANI (0403-04-03), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUABNESHWAR - 751025 PH :9583001877.

KENDRAPARA

1664. JYOTE MOTORS (SFI1-SFI-01), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. - 754208 PH : 9776615001.

KUCHINDA

1665. ODYSSEY MOTORS (SLN1-SLN-01), /S ODYSSEY MOTORS, PLOT NO 146, KHATA NO 769, MOUZA-KUNDAPOSHI, NEAR KUNDESHWAR MANDIR, KUCHINDA, SAMBULPUR. - 768222 PH 9439314464.

PADAMPUR

1666. ODYSSEY MOTORS (SFB1-SFB-01), M/S ODYSSEY MOTORS, CHARPALLIPADAMPUR, NEAR REGENCY HOTEL, DISTRICT: BARGARH, ORISSA - 770039 PH:9439314464.

PUDUCHERRY

KARAIKAL

1667. SHENBAKA CARS PVT. LTD. (CCF+CCF-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL - 609802
PH. 104368-227800/1/2.

MADAGADIPET

1668. SHENBAKA CARS PVT. LTD (CUD1-CUD-01), SURVEY NO. 129/4/A2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605 107 PH:8220046178.

PONDICHERRY

1669. SHENBAKA CARS PRIVATE LIMITED (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY -605010 PH :0413-2293391/92/93

PUNJAB

ABOHAR

1670. TARA AUTOMOBILES (ABOHAR) (H501-H5-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB - 152116 PH :9876047847.

ADAMPUR

1671. LOVELY AUTOS (CHA1-CHA-01), KHASRA NO.10/7/1, JALANDHAR-HOSHIARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR -144102 PH.8288050777.

AJNALA

1672. SWANI MOTORS PVT. LTD. (CBP1-CBP-01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL -AJNALA, DISTRICT - AMRITSAR, PUNJAB. -143102 PH: 8872001731.

AMRITSAR

- 1673. SWANI MOTORS LTD. (1701-17-01), 81, COURT ROAD, AMRITSAR - 143001 PH:9877482175, 8872000000.
- 1674. JAYCEE MOTORS (1704-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH :9780038335.
- 1675. RISHABH FOURWHEELS PVT. LTD. (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH :9914841577.

ANANADPUR SAHIB

1676. CM AUTOSALES PVT. LTD. (OF01-0F-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB, TEHSIL ANANDPUR SAHIB, DISTT. ROPAR.PUNJAB - 140123 PH 9915022897

APRA

1677. LOVELY AUTOS (CVW1-CVW-01), SAMRAI CHOWK PHILLAUR ROAD, VILLAGE - APRA, TEHSIL - PHILLAUR, DIST.-JALANDHAR, STATE -PUNJAB. - 144416 PH :9915020515.

AUR

1678. LOVELY AUTOS (CVY1-CVY-01), KHATUNI NO. 479/588, KHASRA NO. 27/20/04(2-18), 21/2(-1), VILLAGE - AUR, TEHSIL - NAWASHAR, DIST. -SBS NAGAR, STATE - PUNJAB. - 144417 PH :9915020510.

BAGHA PURANA

1679. REMIRA MOTORS PVT. LTD. (BAH2-BAH-01), BUILDING NO.89, OPP. SHINA ENCLAYE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH.7087025009.

BALACHAUR

1680. LOVELY AUTOS (XV01-XV-01), NEAR MCDONALD - GHUGGI JUINCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521 PH : 9878427910.

BALBEHRA

1681. HIRA AUTOWORLD (SOG1-SOG-01), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA -147101 PH :9888341118.

BANGA

1682. LOVELY AUTOS (3503-MS-03), NAWASEHAR-JALANDHAR ROAD, BANGA -144505 PH :9915028625.

BANUR

1683. TRICITY AUTOS PVT. LTD. (BRT1-BRT-01). SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB -140601 PH :9988882330.

BARNALA

1684. MAX AUTOMOBILES (4S02-4S-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001 PH :285022, 9216529220.

BATALA

1685. PATHANKOT VEHICLEADES PVT. LTD. (A701-V5-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505 PH :9417900850 , 9417900918.

BEGOWAL

1686. MARWAHA AUTOS (BHF2-BHF-01), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH : 9779166004.

BHADSON

1687. HIRA AUTOMOBILES LTD (BAG1-BAG-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON -147202 PH 9217048236, 9217048250.

BHAGTA BHAI KA

1688. TARA AUTOMOBILES (BHG1-BHG-01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT – BHATINDA. - 151206 PH: 9437030666

BHATINDA

1689. TARA AUTOMOBILES (BHATINDA) (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001 PH :0164-2235349 50

BHIKHIWIND

1690. RISHABH FOURWHEELS PVT. LTD. (BPK1-BPK-01), KHASRA NO. 67/3/2, 4/1, 7/2, 8/1, 8/2, PIND BHIKHIWIND, TEHSIL – PATTI, DISTRICT – TARN TARAN, PUNJAB. - 143303 PH 39/14708577.

BHOGPUR

1691. LOVELY AUTOS (BRU2-BRU-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY, OPP-AJIT PALACE, BHOGPUR - 144201 PH-987203006.

BHULATH

1692. LOVELY AUTOS (CHB1-CHB-01), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT – KAPURTHALA, PUNJAB. - 144622 PH 9876541065. 8288050777.

BILGA

1693. LOVELY AUTOMOBILES (SPM1-SPM-01), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLAUR, JALANDHAR. - 144036 PH - 0815069814

CHUNNI KALAN

1694. HOSHIARPUR AUTOMOBILES (CFG1-CFG-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307 PH :24905.9 8915131766.

DASUYA

1695. HOSHIARPUR AUTOMOBILES (H402-8D-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205 PH :9815131766. 9872312371.

DERABASSI

1696. AUTOPACE NETWORK PVT LTD (0705-AW-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507 PH :9815011669.

DEVIGARH

1697. HIRA AUTOMOBILES LTD (OG01-OG-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111 PH :8872034118. 9217048250.

DHILWAN

1698. MARWAHA AUTOS (SGU1-SGU-01), MIANI BAKARPUR, AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA-144804 PH - 9779166004

DORAHA

1699. GULZAR MOTORS (QC02-QC-01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHA, DISTT. LUDHIANA, PUNJAB. - 141421 PH :9814191122.

FARIDKOT

1700. MAPSKO AUTO INDIA PVT. LTD. (4U02-4U-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204 PH:01639-264001.7347000520.

FATEHGARH CHURIAN

1701. PATHANKOT VEHICLEADES PVT. LTD. (BAO1-BAO-01), KHASRA NO. 17 R, DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSIL-BATALA, DIST.-GURDASPUR, STATE - PUNJAB. - 143 602 PH : 9417900850 . 9875930180.

FAZILKA

1702. TARA AUTOMOBILES (H501-4V-03), NH-10, NEAR SARVHITKARI BAL VIDYA MANDIR, FAZILKA - 152116 PH :9876047847.

FEROZEPUR

1703. BABA AUTOS (7C01-7C-01), MOGA ROAD, FEROZEPUR CANTT - 152002 PH :8872013211.

GARHSHANKAR

1704. HOSHIARPUR AUTOMOBILES (H402-V4-02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527 PH 9815131766 9781543131

GHANAUR

1705. HIRA AUTOWORLD LLP (CVX2-CVX-01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401 PH :9217048437.

GHAROTA

1706. PATHANKOT VEHICLEADES (SFF1-SFF-01), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT – 143533. - 143533 PH: 8264105000.

GHOMAN

1707. PATHANKOT VEHICLEADES PVT. LTD. (CUL1-CUL-01), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11//25 (7-18), WILLAGE -BALRAMPUR ADDA, KHASBA - GHOMAN. -143514 PH: 8054500130.

GIDDARBAHA

1708. HIRA AUTOMOBILES LTD (AUA1-AUA-1), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBAHA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101 PH :231510, 9217048250.

GORAYA

1709. LOVELY AUTOS (BJR1-BJR-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH:9417804049.

GURDASPUR

1710. PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521 PH:9417900870, 9878050710.

 PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH :9417900870.

HOSHIARPUR

1712. HOSHIARPUR AUTOMOBILES (H402-H4-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001 PH:9815131766. 9878632537.

JAGRAON

1713. SANDHU AUTOMOBILES (6206-LT-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :8437025969.

JAITU

1714. MAPSKO AUTO INDIA PVT. LTD. (YX02-YX-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT – FARIDKOT. - 151202 PH :7347000520

JALALABAD

1715. TARA AUTOMOBILES (H501-8E-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH :9876047847.

JALANDHAR

- 1716. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :9915020515.
- 1717. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (3506-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH :9779166004
- LOVELY AUTOS (3505-35-01), KHASRA NO.
 24/20/4, B D ENCLAVE, VILLAGE JALANDHAR,
 DIST.-JALANDHAR, PUNJAB. 144001
 PH :9876044001. 9915020515.

JANDIALA GURU

1719. BABA AUTOS (7C01-GL-03), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU -143115 PH :8872013029.

JANDIALA MANJKI

1720. LOVELY AUTOS (BJS1-BJS-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE – JANDIALA MANJKI, TEHSIL – NOORMAHAL, DISTRICT – JALANDHAR, PUNJAB. - 144033 PH. 7087439797 .

KAHNUWAN

1721. PATHANKOT VEHICLEADES PVT. LTD. (CGM1-CGM-01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. -143528 PH :8288933301

KALA SANGHIAN

1722. MARWAHA AUTOS (SPL1-SPL-01), MAIN CHOWK, KALA SANGHIAN, DISTRICT KAPURTHALA, PUNJAB - 144623 PH :9779166004.

KAPURTHALA

1723. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (4Z02-4Z-01), SIDHU COMPLEX, CIRCLE ROAD -KAPURTHALA, PUNJAB - 144602 PH: 9779166004.

KATHU NANGAL

1724. JAYCEE MOTORS (CSP2-CSP-01), KHASRA NO.12/2012, 21/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502 PH :9780038335.

KHANNA

1725. HOSHIARPUR AUTOMOBILES (N302-N3-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. -141401 PH 9888716261.

KHARAR

1726. CM AUTOSALES PVT. LTD. (7K01-JH-03), NH-95, MORINDA ROAD,KHANPUR, KHARAR. DIST. MOHALI - 140301 PH: 9915022878.

KILANWALI

1727. HIRA AUTOMOBILES LTD (BFV1-BFV-01), GT ROAD (NH NO. 09), NEAR GURU NANAK COLLEGE, KILANWALI, TEHSIL – MALOUT, DISTRICT – MUKTSAR SAHIB. - 152107 PH :8872034131.

KOTKAPURA

1728. MAPSKO AUTO INDIA PVT. LTD. (BIS2-BIS-01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT – FARIDKOT. 151204 PH. 7247000518

LALRU

1729. AUTOPACE NETWORK PVT LTD (BRJ1-BRJ-01), VILLAGE – LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501 PH: 9815011669.

LUDHIANA

- 1730. GULZAR MOTORS LTD. (6204-62-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003 PH - 9814160099
- 1731. SANDHU AUTOMOBILES (6206-62-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA -141203 PH :9815600095
- 1732. LIBRA AUTO CAR CO. LTD (6207-62-01), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020 PH :0160-2512701. 03.
- 1733. LIBRA AUTO CAR CO. LTD (6207-62-02), G.T ROAD, NEAR AIRPORT, LUDHIANA. - 141020 PH: 0160-25035130

- 1734. LOVELY AUTO (6209-62-01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA – 141001 - 141001 PH :9875928451. 9875928450.
- 1735. LOVELY AUTOS (6209-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB - 141003 PH :9815069814.
- 1736. LOVELY AUTOS (620s-62-03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001 PH :9815069814.
- 1737. LOVELY AUTOS (6209-62-04), EURO MART COMPLEX, HAMBRAN ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008 PH :9815069814.

MACHIWARA

1738. HOSHIARPUR AUTOMOBILES (9T03-9T-01), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH: 9875900147.

MAHILPUR

1739. HOSHIARPUR AUTOMOBILES (H402-DD-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105 PH :9914720424

MAJITHA

1740. RISHABH FOURWHEELS PVT. LTD. (CDR1-CDR-01), PLOT NO. 130, OPP. DANA MANDI, AMRITSAR ROAD, MAJITHA. - 143601 PH: 9914841577.

MALERKOTLA

1741. MAX AUTOMOBILES (CCI2-CCI-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023 PH :9814403131 . 9056903131.

MALOUT

1742. HIRA AUTOMOBILES LTD (6302-LE-05), TINKONI CHOWK, NEAR LIC BUILDING, MALOUT - 152107 PH :299524, 264724,9988417000.

MANDI GOBINDGARH

1743. HOSHIARPUR AUTOMOBILES (U903-U9-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301 PH-9815131766. 9914119292.

MANSA

1744. TARA AUTOMOBILES (7002-TL-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA, PUNJAB - 151505 PH :01652-216042.

MEHTA

1745. RISHAB (CDS1-CDS-01), KHASRA NO. 343, BABA BAKALA ROAD, VILLAGE MEHTA CHOW, TEHSIL: BABA BAKALA, DIST AMRITSAR, PUNJAB - 143114 PH.:7760315710.

MOGA

1746. REMIRA MOTORS PVT. LTD. (H602-H6-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001 PH : 7087025402.

MOHALI

1747. NAVDESH AUTOS LLP (L105-L1-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH :8872016453.

1748. CM AUTOSALES PVT. LTD. (0706-L1-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI – PUNJAB - 140110 PH :8284800597.

MORINDA

1749. CM AUTOSALES PVT. LTD. (BHH1-BHH-01), KHASRA NO. 1092, CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140 101 PH :9915022811.

MUKERIAN

1750. HOSHIARPUR AUTOMOBILES (IP01-IP-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN -144211 PH 9815131766. 8437919900.

MUKTSAR

1751. HIRA AUTOMOBILES LTD (6302-J8-03), BHAI COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB - 152026 PH 9217048250, 9056900042

MULLANPUR

1752. SANDHU AUTOMOBILES (YY01-YY-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101 PH :8437025969.

MULLANPUR GARIBDASS

1753. NAVDESH AUTOS LLP (CVZ2-CVZ-01), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE -PUNJAB. - 140901 PH:8872004676.

NABHA

1754. HIRA AUTOMOBILES LTD (6302-UF-06), RADHA SWAMI ROAD, NABHA - 147201 PH :9317000004 ,9217048250.

NAKODAR

1755. LOVELY AUTOS (3503-5B-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040 PH :9915028603.

NANGAL

1756. CM AUTOSALES PVT. LTD. (7K01-8F-02), PLOT#36 AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB -140126 PH :9592916811.

NAWANSHAHR

1757. LOVELY AUTOS (3503-J7-02), NAWANSHAHR CHANDIGARH ROAD, VILL- LANGROHA, DISTT:-NAWANSHAHR, PUNJAB - 144514 PH :9915028682.

NIHAL SINGH WALA

1758. REMIRA MOTORS PVT LTD (OB02-OB-01), BARNALA ROAD, NEAR DEAR BABA SEWA DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA. - 142 055 PH.7067025009.

PATHANKOT

1759. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-01), NEAR MAMOON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001 PH: 8264105000, 9417900883.

1760. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-04), NEAR A. B. COLLEGE, PATAHANKOT - 145001 PH:9417900828, 9417900842.

PATIALA

1761. HIRA AUTOMOBILES LTD (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001 PH :2360131, 2360562.9217048250.

1762. HIRA AUTOMOBILES LTD (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001 PH :2232377, 9217048234, 9217048250.

1763. HIRA AUTOMOBILES LTD (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001

PH :2232296, 2232296, 9217048250.
1764. ATELIER AUTOMOBILES (6304-63-01), VILLAGE MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR CASABA RESORT, PATIALA - 147001 PH :7527000106, 7527000111.

PATRAN

1765. HIRA AUTOMOBILES LTD (6302-V3-02), NARWANA ROAD, PATRAN, PUNJAB, - 147105 PH :244445, 245788, 9217048250.

PATTI

1766. JAYCEE MOTORS (BOA2-B0A-01), KHASRA NO. 64/19):/1 KA 16/49 & KHASRA NO. 64/20 KA 29/94, NEAR RADHA SWAMI, TARNT TARAN ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN, PUNJAB. - 143416 PH 9780038335

PHAGWARA

1767. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (5C02-5C-01), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH:9779166004.

PHILLAUR

1768. LOVELY AUTO (XU01-XU-01), OLD NAWANSHAHR ROAD CIVIL LINE, PHILLAUR, DISTRICT JALANDHAR - 144410 PH:9815069814.

RAIKOT

1769. GULZAR MOTORS PVT LTD (XT02-XT-01), BARNALA BY PASS ROAD, RAIKOT - 141109 PH :9814160099.

RAJPURA

1770. HIRA AUTOWORLD LLP (HK02-HK-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA -140401 PH : 244881-84. 9217048437.9217048250.

RAMPURA PHUL

1771. TARA AUTOMOBILES (XR01-XR-01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103 PH:01651-266643.

RAYYA

1772. RISHABH FOURWHEELS PVT. LTD. (CAK1-CAK-01), NH-1, GT ROAD RAYYA, TEHSIL - BABA BAKALA, DISTRICT - AMRITSAR. -143112 PH. 9914708577.

ROPAR

1773. CM AUTOSALES PVT. LTD. (7K01-7K-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH :9915022802.

SAMANA

1774. HIRA AUTOMOBILES LTD (BFU1-BFU-01), KEWAT NO. 348/950, KHATUNI NO. 1427, KHASRA NO. 101/27(4-7), PATIALA SAMANA ROAD, SAMANA, DIST.-PATIALA, STATE PUNJAB. - 147/101 PH :92/17/48/236

SANGRUR

1775. MAX AUTOMOBILES (G402-G4-01), DHURI ROAD, SANGRUR, - 148024 PH :01672-239627.

SHAHKOT

1776. LOVELY AUTOS (BHT1-BHT-01), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT – JALANDHAR, PUNJAB. - 144702 PH:8437936811.

SIRHIND

1777. HOSHIARPUR AUTOMOBILES (TF03-TF-01), KHEWAT KHA'ON NO. 802/1049 & 82/1/070 KHEWAT KHA'S NO. 43/1/21 (1-0), BESIDE SBI BANK, BASSI ROAD, SIRHIND, TEHSIL AND DISTRICT – FATEHGARRI SAHIB. - 140406 PH. 9815131766, 7257082471.

SULTANPUR LODHI

1778. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (ZY02-ZY-01), NEAR TALWADI BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA -144626 PH :9779166004.

TALWANDI BHAI

1779. BABA AUTOS (GMF1-GMF-01), FEROZEPUR ROAD, NEAR FUNISLAND, TALWANDI BHAI, DISTT. FEROZEPUR - 142050 PH :8872013002.

TALWANDI SABO

1780. TARA AUTOMOBILES (ON01-0N-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWANDI SABO, BHATINDA -1551302 PH :9946891047, 8437008666.

TALWARA

1781. HOSHIARPUR AUTOMOBILES (H402-LR-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216 PH: 9815131766. 9781842244.

TANDA

1782. HOSHIARPUR AUTOMOBILES (H402-DE-06), VILL.PULPUKHATA, MIANI ROAD, TANDA -144203 PH :9815131766. 8437430400.

TARAGARH

1783. PATHANKOT VEHICLEADES PVT. LTD. (BVC1-BVC-01), VILLAGE - RAHIMPUR, VPO-TARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534 PH :9988639963.

TARN TARAN

1784. JAYCEE MOTORS (BLP2-BLP-01), VILLAGE – KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401 PH : 9780038039.

ZIRA

1785. BABA AUTOS (7C01-GK-02), FEROZEPUR ROAD, ZIRA - 142047 PH :8872013230.

ZIRAKPUR

1786. TRICITY AUTOS (9M01-9M-01), PATIALA HIGHWAY, VILLAGE - NABHA, ZIRAKPIR, PUNJAB - 140603 PH:9988882330.

RAJASHTHAN

JAIPUR

1787. AURIC MOTORS (1116-11-C1). COMMERCIAL PLOT NO. J4, COMMERCIAL BELT B, VT ROAD, NEW SANGANER ROAD, MANSAROVAR SCHEME, JAIPUR, RAJASTHAN 302020 - 302020 PH 9871105681

RAJASTHAN

ABU ROAD

1788. NAVNEET MOTORS (OQ01-OQ-01), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026 PH: 99501 56579.

ACHROL

1789. KTL AUTOMOBILE PVT. LTD. (GKD1-GKD-01), #REF! - 303002 PH:7412077022.

AHORE

1790. AURIC MOTORS (SHN1-SHN-01), MADHOPURA, NEAR KARNAWATI HOSPITAL, AHORE, DISTRICT – JALORE, RAJASTHAN PIN CODE: 307029 - 307029 PH #REF!

AJMER

1791. AJMER AUTO AGENCIES PVT. LTD. (B201-B2-01), SRINAGAR ROAD,AJMER (RAJASTHAN) - 305001 PH :9314955201.

1792. RELAN MOTORS (B203-B2-01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001 PH :95876 87000 84400 41027.

1793. RELAN MOTORS (B203-B2-02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001 PH :95876 87000, 87400 16329.

1794. AJMER AUTO AGENCIES PVT. LTD. (B201-B2-05), KHASRA NO.343/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER. -305001 PH: 3914955201.

AKLERA

1795. BHATIA AND COMPANY (SGK1-SGK-01), NH-52, RAM NAGAR COLONY, AKLERA, JHALAWAR, PIN-326033, RAJASTHAN - 326033 PH:9057047891.

ALWAR

- 1796. MG MOTORS (F901-F9-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001 PH -0001795520
- 1797. MG MOTORS (F901-F9-02), KHASRA NO.803/198, BHUGORE TIRAHA, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001 PH:9001795520.

ANOOPGARH

1798. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BFE1-BFE-01), PLOT NO. AMEDICAR CHARAHARA, RAILWAY STATION ROAD ,ANUPGARH (ANOOPGARH),DISTT SRI GANGANACAR. - 335701 PH :9982638516.

ANTA

1799. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTG2-CTG-01), KOTA-BARAN ROAD, ANTAH, DIST.-BARAN. - 325502
PH :9414032859.

ASIND

1800. CHAMPION CARS (SID1-SID-01), DEV TOWERS, BEAWAR ROAD, ASIND, DISTRICT – BHILWARA, RAJASTHAN - 311301 - 311301 PH:7073461987.

BAGRU

 PREM MOTORS PVT. LTD. (US02-US-01), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPUR - 303007 PH: 01414711118,8058411181.

BALESAR

1802. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CWO1-CWO-01), KHASRA NO. 2187 JODHPUR JAISALMER ROAD, VILL: BALESAR SATTA, TEH:- BALESAR, DIST:- JODHPUR (RAJ) - 342203 PH: 7412087344.

BALOTRA

1803. LMJ SERVICES LTD. (6502-9G-05), JODHPUR BALOTRA ROAD, BALOTRA, RAJASTHAN -344022 PH:8005898360.

BANSUR

1804. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (BQP1-BQP-01), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402 PH :8875005116

BANSWARA

1805. NAVNEET MOTORS (X903-X9-01), NEAR J.C. MILL, OPPOSITE AKASHWANI, DAHOD ROAD, BANSWARA - 327001 PH -86023 83260

BARAN

1806. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-PM-03), BESIDE OJHA METAL, ATRU ROAD, BARAN -325205 PH: 9413379013.

BARMER

- 1807. LMJ SERVICES LTD. (6502-SH-06), G-216, RIICO INDUSTRIAL AREA, BARMER 344001 PH :8005898360
- 1808. LMJ SERVICES LTD. (SH01-SH-01), NH# 68, OPP. SADAR THANA - 344001 PH :8005898360.

BASSI

1809. PREM MOTORS PVT. LTD. (VF02-VF-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN -303301

PH:01414711118,8058794151.

ΔΥΤΙΙ

1810. LMJ SERVICES (SIT1-SIT-01), NH-8 ,NEAR JAGDAMBA PETROL PUMP , BAYTU - 344034 PH :8094011126

BEAWAR

1811. RELAN MOTORS (FL03-FL-01), PLOT NO 1, INDIRA GANDHI UDYOGPURI, AJMER ROAD BEAWAR, RAJASTHAN. - 305202 PH:9587687000.

BEGUN

1812. BHATIA & CO (BTD1-BTD-01), BHATIA & CO. (A UNIT OF BHATIA CORPORATION PVT LTD), IN FRONT OF GURKUL, CHITTOR ROAD, BEGUN, TEHSIL – BEGUN, DISTRICT CHITTORGARH, 312023 - 312023* PH :95097 06827.

BEHROR

1813. MG MOTORS (FQ01-FQ-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701 PH 9001795520

BHADRA

1814. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIF1-BIF-01), CHAK NUMBER-8, BARANI, NEAR HISAR BYEPASS BHADRA - BALSAMAND ROAD, BHADRA - 335501 PH. 9166712222 9413311745.

BHARATPUR

1815. TM MOTORS PVT. LTD. (5J01-5J-01), BRIJ VIHAR COLONY, MADARPUR ROAD, BHARATPUR, RAJASTHAN - 321001 PH 9251423392.

BHAWANI MANDI

1816. SUWALKA MOTORS PVT LTD (SDB1-SDB-01), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI.JHALAWAR- 326502 - 326502

BHILWARA

PH:9116178571.

- 1817. LOHIA AUTOMOBILES (E301-E3-01), AJMER ROAD,NEAR OCTROI POST,BHILWARA - 311001 PH :82094 11856
- 1818. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (€302-€3-01), NEAR GRAM BHARTI, CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001 PH. 7073461987.
- 1819. LOHIA AUTOMOBILES (E301-E3-03), PLOT NO. H-11, EVERGREEN TEXTILE PARK, RIICO INDUSTRIAL AREA, PUR ROAD, BHILWARA. -311001

PH:82094 11856.

1820. TECHNOY MOTORS INDIA PVT. LTD. (CBS1-CBS-01), NEAR RAILWAY STATION, SALUMBAR CHOURAHA, BHINDER -313603 PH :9001234056.

BHINMAL

BHINDER

1821. SHRI KRISHNA AUTOSALES PVT LTD (CQN1-CQN-01), KHASRA NO. 2281, KARADA CROSSING, BHIMMAL, DISTRICT - JALORE, RAJASTHAN. PH.9810242790.

BHIWADI

- 1822. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-01), OPP. INDAG RUBBER,MAIN ROAD, BHIWADI - 301019 PH:3214794326.8875005116.
- 1823. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-02), F-458-C.RIICO,INDUSTRIAL AREA,BHIWADI -301019 PH :9214794326.8875005116.
- 1824. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-04), KHASRA NO. 656/431, ALWAR ROAD, BHIWADI. - 301019 PH :9214794326.8875005116.

BIJAYNAGAR

1825. AJMER AUTO AGENCIES PVT LTD (GLF1-GLF-01), KHASRA NO 39 , AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT - AJMER ,RAJASTHAN - 305624 PH :8890902472.

BIJOLIA

1826. LOHIA AUTOMOBILES (E301-UA-02), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTOR-BJOLIA HIGHWAY, BJJOLIA, DIST. -BHILWARA - 311602 PH: 32094 11856.

BIKANER

- 1827. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-01), OPP. URMUL DAIRY PLANT, GANGANAGAR ROAD, BIKANER - 334004 PH:1512253984,9414138511.
- 1828. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-04), JAIPUR BYE PASS, BIKANER , - 334004

PH:1512230384.8875010507.

- 1829. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-05), OPP. AVYYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003 PH : 7014063193.9413311949.
- 1830. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES) (7102-71-01), KHASRA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. - 334001 PH. 8929834417.

BILARA

1831. LMJ SERVICES LTD. (BZB1-BZB-01), BANGANGA MOD, JODHPUR ROAD, BILARA, RAJASTHAN -342602 PH :8104698935.

BUNDI

1832. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PUT. LTD.) (6101-EF-02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSAITE ICICI ATM, BUNDI - 323001 PH: 9413353099.

CHAKSU

1833. K P AUTOMOTIVES PVT LTD (1104-JM-03), TONK ROAD, CHAKSU - 303901 PH:0141-4071111, 4071101,8696934973.

CHANDAN

1834. LMJ SERVICES LTD. (SHR1-SHR-01), JAISALMER ROAD, CHANDAN, DISTT JAISALMER, RAJASTHAN - 345031 PH:8094011126.

CHIRAWA

1835. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SY02-SY-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA -333026 PH .01596-217163.7230081668.

CHITTORGARH

1836. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (K901-K9-01), PLOT NO. 1001/1-1002/1,NIMBAHERA ROAD,CHITTORGARH - 312001 PH:97854 61267.

СНОМИ

- 1837. KTL AUTOMOBILES (HW02-HW-01), KHARSA NO.695, JAIPUR SIKAR BYPASS ROAD, CHOMU, RAJASTHAN. - 303702 PH : 7412077034.
- 1838. SATNAM MOTORS (HW03-HW-01), NEAR CM CHOPRA HOSPITAL, JAIPUR ROAD, CHOMU, DISTRICT – JAIPUR, RAJASTHAN - 303702 PH:8302090000.

CHURU

1839. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (MD03-MD-01), NEAR DTO OFFICE, JAIPUR ROAD, CHURU - 331001 PH :8696543584.

DATA RAMGARH

1840. JAMU AUTOMOBILES PVT LTD (CTQ1-CTQ-01), KHASRA NO. 1016/256, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR. -332703 PH :9799501048.

DAUSA

1841. VIPUL MOTORS PVT. LTD. (1102-FM-03), AGRA JAIPUR ROAD, DAUSA - 303303 PH:9672211333.

DEGANA

1842. SHRI MANGALAM (SDJ1-SDJ-01), NEAR NAGAUR FATAK, STATION ROAD, DEGANA -341512 PH :7230055955.

DEOLI

1843. K P AUTOMOTIVES PVT LTD (Z001-Z0-01), KOTA- JAIPUR HIGHWAY, NH-12, DEOLI -304804 PH :8696925259.

DEVGARH

1844. LOHIA AUTOMOBILES (CUQ1-CUQ-01), NEAR KRISHI MANDI, KAMLIGHAT ROAD, TEHSIL – DEVGARH, DISTRICT – RAJSAMAND, RAJASTHAN. - 313331 PH :8306009399

DHARIYAWAD

1845. BHATIA & CO. (SMC1-SMC-01), PRATAPGARH ROAD, DHARIYAWAD, DIST. - PRATAPGARH, RAJASTHAN - 313605 - 313605 PH: 38287 46677.

DHOLPUR

1846. TM MOTORS PVT. LTD. (5K01-5K-01), TM MOTORS PVT. LTD., GT ROAD DHOLPUR, RAJASTHAN. - 328001 PH :8094777862.

DIDWANA

1847. SHRI MANGLAM AUTO PVT. LTD. (FT03-FT-01), DIDWANA BYPASS, MAIDASAR CHORAHA, DIDWANA - 341303 PH. 7230055924.

DUDU

1848. PREM MOTORS PVT. LTD. (BRY1-BRY-01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008 PH-8058411181

DUNGURPUR

1849. NAVNEET MOTORS (4902-GP-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001 PH :94141 04833.

FALNA

1850. LMJ SERVICES LTD. (BBR1-BBR-01), OPPOSITE PRAKASH DINING HOTEL ,FALNA - 306116 PH #RFF!

FATEHNAGAR

1851. TECHNOY MOTORS INDIA PVT. LTD. (4903-SV-03), PLOT NO.15, FATENAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHNAGAR-313205 DISTT. UDAIPUR - 313205 PH: 9829793402.

GANGAPUR CITY

1852. PREM MOTORS PVT. LTD. (BUT1-BUT-01), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201 PH: 8058794122

GUDHAGORJI

1853. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGC1-CGC-01), BHORKI ROAD, GUDHAGORJI, DISTRICT – JHUNJHUNUN, RAJASTHAN. - 333022 PH :741205848.

HANUMANGARH

1854. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-87-03), JUNCTION TOWN ROAD,HANUMANGARH - 335512 PH :01552-231295,9166712222, 9413311745.

HINDAUN

1855. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S002-S0-01), KHASRA NO. 737, VILLAGE – PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN. - 322230 PH : 7017024146, 7017024146.

JAIPUR

1856. VIPUL MOTORS PVT. LTD. (1102-11-01), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017 PH: 9269117654.8949686508.

- 1857. K P AUTOMOTIVES PVT LTD (1104-11-01), E-198, SANGANER INDUSTRIAL AREA,MANSAROVAR,JAIPUR - 302020 PH :0141-4071111, 4071101,6377203709, 6377203731.
- 1858. PREM MOTORS PVT. LTD. (1112-11-02), 12 13,SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006
- PH :0141-4711111,8058703388, 8058794122.
 1859. SANGA AUTOMOBILES PVT. LTD. (1110-11-01),
 SECTOR 35, PRATAP NAGAR,SANGANER,
 JAIPUR 302033
 PH :9772210922.
- 1860. VIPUL MOTORS PVT. LTD. (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR -302012
- PH :0141-3524203,9672211333.
 1861. PREM MOTORS PVT. LTD. (1112-11-01), PLOT NO. E101/A, VKI, JAIPUR 302039 PH :01414411123.8929409921.
- 1862. SATNAM MOTOCORP PVT. LTD. (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR – 302 022, RAJASTHAN. - 302022 PH:1412771976,8302390000.
- 1863. KTL AUTOMOBILE PVT. LTD. (1115-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR. - 302012 PH:7412077022.
- 1864. PREM MOTORS PVT. LTD. (1112-11-03), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR. - 302017 PH:9358715550,8929409921.
- 1865. KTL AUTOMOBILES (1115-11-02), KHASRA NO 1210-1216/2959, BHANKROTA, TEH SANGANER , DISTRICT JAIPUR. - 302026 PH:7412077007.
- 1866. KTL AUTOMOBILES (1115-11-03), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD "JAIPUR. - 302006 PH:7412077007.
- 1867. K.P. AUTOMOTIVE (1104-11-G1), B-1, GOVIND MARG, ADARSH NAGAR, JAIPUR – 302004 -302004
- PH :9549656559.

 1868. KTL AUTOMOBILES (1115-11-04), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILOCHOYAN MOHALLA, TRANSPORT NAGAR, DELHI ROAD, JAIPUR - 302002 - 302002 PH :9772210922.

JAISALMER

1869. LMJ SERVICES LTD. (5L01-5L-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY, HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) -345001 PH :8005898360.

JAITARAN

1870. LMJ SERVICES LTD. (BNY1-BNY-01), KHASRA NO. 784, JAIPUR-JODHPUR BYE PASS ROAD, JAITARAN, DIST.-PALI. - 306302 PH :9269971266.

JALORE

1871. SHRI KRISHNA AUTOSALES PVT LTD (VD01-VD-01), KHASRA NO. 6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001 PH: 2973211613,9829203644.

JAMWA RAMGARH

1872. K P AUTOMOTIVES PVT LTD (BZL1-BZL-01), KHASRA NUMBER -228/169,OPP UDAY AUTOMOBILES_JAIPUR ALWAR ROAD -JAMWA RAMGRAH. - 303109 PH :6377203709. 6377203731.

JHADOL

1873. TECHNOY MOTORS (SKO1-SKO-01), KHASRA NO. 186/1, NH # 8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, PIN-306104, RAJASTHAN - 306104 PH:7726809510.

JHALAWAR

1874. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVI. LTD.) (6102-RV-02), OPP. BALAJI KI CHHATRI , KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001 PH -9414034728.

JHUNJHUNU

1875. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (FN03-FN-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. -333001 PH :01592-250045,7412087489.

JOBNER

1876. PREM MOTORS PVT. LTD. (BRD1-BRD-01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL – PHULERA, DISTRICT – JAIPUR, RAJASTHAN - 303328 PH. 3058411181.

JODHPUR

- 1877. LMJ SERVICES LTD. (6502-65-01), PRATAP NAGAR, JODHPUR - 340002 PH :9950496202
- 1878. LMJ SERVICES LTD. (6502-65-04), OPP TO RFC OFFICE,NEW POWER HOUSE ROAD,JODHPUR - 342003
- PH:8094011127.
- 1879. SHRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A, HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005 PH :2912748402.9001894669.

- 1880. LMJ SERVICES LTD. (6502-65-09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008 PH -8094011147
- 1881. LMJ SERVICES LTD. (6502-65-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002 PH :7230057721.
- 1882. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-65-01), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005 PH:7412059839.
- 1883. LMJ SERVICES LTD. (6502-65-0D), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342 001 PH: 8696916455.
- 1884. LMJ SERVICES LTD. (6502-65-10), KHASRA NO. 357/5, BANAR ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342 003 PH.7222002424.

KAPRAIN

1885. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BGG1-BGG-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301 PH:9587894896.

KEKRI

1886. AJMER AUTO AGENCIES PVT. LTD. (B201-GZ-03), KOTA SAWAR ROAD,KEKRI -305404 PH :9314955201

KHAJUWALA

1887. AURIC MOTORS (SJC1-SJC-01), DANTOR ROAD, KHAJUWALA, DIST. - BIKANER, RAJASTHAN. -3340323 PH :9982299866.

KHANDAR

1888. PREM MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), SAWAI MADHOPUR-KHANDAR RD., KHANDAR, RAJASTHAN - 322025. - 322025 PH 1638800960

KHERLI

1889. MG MOTORS (BZE1-BZE-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606 PH:9001795520.

KHERWARA

1890. TECHNOY MOTORS (SEE1-SEE-01), OPP.
ATITHI PALACE, VILLAGE BADLA, NH
8.KHERWARA, TEHSIL – KHERWARA, DISTRICT
– UDAIPUR, RAJASTHAN PIN CODE: 313803 313803
PH: 7726809510.

KISHANGARH

1891. AJMER AUTO AGENCIES PVT LTD (TU01-TU-01), R K LINK ROAD, - 305802 PH :9314391011.

KISHANGARH BAS

1892. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-TU-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405 PH :8875007753 8875007753

KOTA

- 1893. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-01), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007 PH:9414085574.
- 1894. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-61-01), AUTO MOBILE ZONE, G-11/12 INDUSTRIAL AREA, KOTA - 324005 PH :9001027933.
- 1895. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007 PH :9414077682.
- 1896. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH: 9414085574.
- 1897. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. -324005 PH: 9116108613.
- 1898. SUWALKA MOTORS PVT. LTD. (6104-61-01), RIDDHI SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN. - 324008 PH :9116178516.

KOTPUTLI

- 1899. PREM MOTORS PVT. LTD. (MH09-MH-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108 PH :014147111118.8058411181.
- 1900. PREM MOTORS PVT. LTD. (MH09-MH-02), KHASRA NO- 636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108 PH: 01414711118.8058411181.

KUCHAMAN

1901. SHRI MANGLAM AUTO PVT. LTD. (VA02-VA-01), SUDHRSHAN NAGAR, BUDSU ROAD KHASRA NO.148 KUCHAMAN - 341508 PH :7230055928.

LADNU

1902. SHRI MANGLAM AUTO PVT. LTD. (CUP1-CUP-01), KHASRA NO. 1011 SUJANGARH ROAD, LADNUN - 341206 PH :7412044506.

LALSOT

1903. VIPUL MOTORS PVT. LTD. (BZF1-BZF-01), PLOT NO.22,23, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502 PH :9672211333.

LOSAL

1904. JAMU MOTORS (SMD1-SMD-01), LOSAL-SALASAR-DIDWANA ROAD, OPPOSITE SHIV MANDIR, WARD NO. 1, LOSAL, RAJASTHAN - 332025. - 332025 PH: 9571959931.

LUNI

1905. LMJ SERVICES (SFD1-SFD-01), NEAR SBI BANK, SALAWAS ROAD, LUNI, TEHSIL – LUNI, DISTRICT – JODHPUR, RAJASTHAN PIN CODE: 342802 -342802 PH: 8094011126.

MAHWA

1906. VIPUL MOTORS PVT. LTD. (BKZ1-BKZ-01), KHASRA NO. 37/384, BHARATPUR ROAD BYE-PASS, N.H.-11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608 PH-9672211333

MAKRANA

1907. SHRI MANGLAM AUTO PVT. LTD. (CFX1-CFX-01), MANGLANA ROAD, MAKRANA -341512 PH :7230055934.

MALPURA

1908. K P AUTOMOTIVES PVT LTD (BLB1-BLB-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH :8696925262.

MANDALGARH

1909. CHAMPION (SHA1-SHA-01), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT – BHILWARA, PIN-311604, RAJASTHAN - 311604 PH : 7073461987.

MERTA

1910. SHRI MANGLAM MOTORS (NG03-NG-01), KHASRA NO.1679, NH89, MERTA - 341015 PH:9116007201.

NAGAUR

 SHRI MANGLAM AUTO PVT. LTD. (HL03-HL-01), KHASRA NO.1479/982 & 1478/83 BIKANER ROAD, NAGAUR - 341001 PH :9116008624.

NAINWA

1912. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTJ1-CTJ-01), UNIARA ROAD, OPP: PETROL PUMP, NAINWA, DIST. KOTA - 323801 PH: 9413379001.

NASIRABAD

1913. AJMER AUTO AGENCIES PVT. LTD. (B201-VB-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601 PH :9314955201.

NATHDWARA

1914. LOHIA AUTOMOBILES (X201-TZ-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND -313301 PH :8306009399.

NAWALGARH

1915. AURIC MOTORS (SIE1-SIE-01), KHATA NO. 76, PUNIA KI DHANI, SIKAR ROAD, NAWALGARH, DISTRICT – JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042 PH: 9928720360.

NEEM KA THANA

1916. JAMU AUTOMOBILES PVT LTD (K701-TV-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713 PH :9529178046.

NEEMRANA

1917. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OPD-10P-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705 PH :9610715222,9636139386.

NIMBAHERA

1918. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTH1-CTH-01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601 PH. 97854 61267.

NIWAI

1919. K P AUTOMOTIVES PVT LTD (BLA1-BLA-01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT – TONK. - 304021 PH:8696925262.

NOHAR

1920. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (VE02-VE-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523 PH:0155-5221485,7412059821, 8875010541.

NOKHA

1921. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (1501-15-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT-BIKANER (RAJASTHAN) - 334803 PH.741205805.

PADAMPUR

1922. DUDI MOTORS (SGC1-SGC-01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 -335041 PH :8619215475.

PALI

1923. LMJ SERVICES LTD. (6502-J9-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH :9269971266.

PAOTA

1924. K P AUTOMOTIVES PVT LTD (BRH1-BRH-01), PATTA SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106 PH :6377203709, 6377203731.

PARBATSAR

1925. SRI MANGLAM (SKT1-SKT-01), NEAR IFL HOUSING FINANCE CO, KISHAN - 341512 PH :8740909096

PARTAPUR

1926. NAVNEET MOTORS (BKY1-BKY-01), AAASHAPURA CHAURAHA, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024 PH :94140 10306.

PHALODI

1927. SHRI KRISHNA AUTOSALES PVT LTD (BQ11-BQ1-01), OPP. RCP GUEST HOUSE, NAGAUR KHICHAN ROAD, PHALODI, RAJASTHAN - 342301 PH :9116011958.

PHULERA

1928. KTL AUTOMOBILE PVT. LTD. (CUS1-CUS-01), KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338 PH.7412077022.

PINDWARA

1929. NAVNEET MOTORS (CQP1-CQP-01), OPPOSITE WOLKEM FACTORY, SIROHI ROAD, PINDWARA, DIST. - SIROHI. - 307022 PH :86197 44672.

PIPAR

1930. LMJ SERVICES LTD. (BTI1-BTI-01), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601 PH :9462616268.

PISANGAN

1931. AJMER AUTO AGENCIES PVT. LTD. (CTL1-CTL-01), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT – AJMER, RAJASTHAN. - 305204 PH: 9314955201.

POKHRAN

1932. LMJ SERVICES (BOA1-BOA-01), SUNDER NAGAR, TEHSIL POKHRAN, DISTRICT – JAISALMER, RAJASTHAN. - 345021 PH:9610115660.

PRATAPGARH (RAJASTHAN)

1933. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.), (PN01-PN-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605 PH :97723 78682

RAIPUR

1934. LMJ SERVICES LTD. (CRZ1-CRZ-01), NATIONAL HIGHWAY, PALI ROAD, VILLAGE – RAIPUR, DISTRICT – PALI. - 306304 PH :9269971266

RAISINGHNAGAR

1935. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHK1-BHK-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHINAGAR, DISTRICT - SRIGANGANAGAR. - 335051 PH -9982638516.

RAJGARH

1936. MG MOTORS (IY01-IY-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH 9001795520.

1937. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGD1-CGD-01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, -331023 PH 9802261977.

RAJSAMAND

1938. LOHIA AUTOMOBILES (X201-X2-01), BHILWARA ROAD,KHANKROLI,RAJSAMAND DISTT, RAJSAMAND - 313301 PH :8306009399.

RAMGANJMANDI

1939. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BAZ1-BAZ-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH -9414085790.

RANIWARA

1940. SHRI KRISHNA AUTOMOBILES (SGX1-SGX-01), NEAR RAILWAY GATE, BHIMMAL ROAD ,RANIWARA, TEHSIL - RANIWARA, DISTRICT – JALORE, RAJASTHAN,PIN CODE: 343040 -343040 PH: 9928377669.

RATANGARH

1941. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHJ1-BHJ-01), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331 022 PH:7412087301.

RAWATBHATA

1942. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (JQ01-JQ-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA, DIST. CHITTORGARH, RAJASTHAN. - 323307 PH :901027933.

RAWATSAR

1943. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SDA1-SDA-01), CHAK 21-22,DWD,PLOT NUMBER -10 & 11, RAWATSAR (RAJASTHAN). -335524 PH.9166712222, 9413311745.

REENGUS

1944. JAMMU MOTORS (SGL1-SGL-01), REENGUS HIGHWAY , REENGUS DISTT. SIKAR -332404 -332404 PH :9785030973.

RENWAL MANJHI

1945. PREM MOTORS PVT. LTD. (GKZ1-GKZ-01). KHASRA NUMBER 2286/110. OPP ROHINI NAGAR 1. JAIPUR BHILWARA HIGHWAY RENWAL, TEHSIL PHAGI JAIPUR ,RAJASTHAN (303904). - 303904 PH: 10141711118.9928494441.

REVDAR

1946. TECHNOY MOTORS INDIA PVT. LTD. (CRY1-CRY-01), OPP. TIRUPATI PETROL PUMP, KAROTI ROAD, REVDAR, DISTT. SIROHI, RAJASTHAN. - 307514 PH. 9630396882.

SAGWARA

1947. TECHNOY MOTORS INDIA PVT. LTD. (CK01-CK-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025 PH :9894970143.

SALUMBAR

1948. NAVNEET MOTORS (BZH1-BZH-01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT – UDAIPUR. - 313027 PH :76652 01980.

SAMBHAR

1949. KTL AUTOMOBILE PVT. LTD. (CVD1-CVD-01), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE , PHULERA ROAD , SAMBHAR 303604 - 303604 PH .7412077022.

SANCHORE

1950. SHRI KRISHNA AUTOSALES PVT LTD (GY01-GY-01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. -343041 PH 9678724548

SANGARIA

1951. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (GKK1-GKK-01), HANUMANGARH ROAD NEAR KARMA PETROL PUMP - 335035 PH:7412059827.

SANGOD

1952. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (GLG1-GLG-01), KHASRA NO 1637, SANGOD BAPAPAR MAIN ROAD, SANGOD - 325601 PH:9251641358.

SARDARSHAHAR

1953. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BID1-BID-01), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN -331403 PH. 9799833995.

SAWAI MADHOPUR

1954. PREM MOTORS PVT. LTD. (FY03-FY-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001 PH :014147111118 9358725409

SAYALA

1955. AURIC MOTORS (SHM1-SHM-01), NEAR PETROL PUMP, HANUMAN MANDIR SOUTH STYLE, MAIN ROAD SAYALA, SAYALA TEHSIL – SAYALA, DISTRICT – JALORE, RAJASTHAN PIN CODE: 343022 - 343022 - 94960739993.

SHAHPURA

1956. K P AUTOMOTIVES PVT LTD (1104-NH-05), VILLAGE RAJPURA, GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103 PH :0141-4071111, 4071101,8696934964, 9358220012.

1957. LOHIA AUTOMOBILES (CCP1-CCP-01), OPPOSITE LIC OFFICE, BHILWARA ROAD, SHAHPURA DISTT. BHILWARA - 311404 PH :7568378555,9462979238.

SHEO

1958. LMJ SERVICES LTD. (SD01-SD0-01), NEAR RIDDI SIDDHI HOTEL, OPPOSITE HP PETROL PUMP, TEH SHEO, DISTT – BARMER -335521 PH: 8094011144.

SIKAR

1959. JAMU AUTOMOBILES PVT LTD (K701-K7-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001 PH:9057400761.

SIROHI

1960. NAVNEET MOTORS (4902-LK-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH - 9166261788

SIVANA

1961. LMJ SERVICES LTD. (CCO1-CCO-01), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASHTHAN. - 344044 PH :ROIN580R360

SOJAT

1962. LMJ SERVICES LTD. (BWI1-BWI-01), KHASRA NO. – 1861, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, RAJASTHAN - 306104 PH :9269917266

SRI DUNGARGARH

1963. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIG1-BIG-01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT -BIKANER, RAJASTHAN. - 331803 PH.9414138511.

SRI KARANPUR

1964. AURIC MOTORS (SDL1-SDL-01), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR, TEHSIL – SRI KARANPUR, DISTRICT – SRI GANGANAGAR, RAJASTHAN, PIN CODE: 335073 - 322243 PH: 8875088998.

SRI MADHOPUR

1965. JAMU AUTOMOBILES PVT LTD (BZD1-BZD-01), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR. - 332715 PH:9672822166.

SRIGANGANAGAR

1966. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-U2-01). NEW AUTOMOBILE MARKET, SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001 PH. 0154-2465226, 7412059837.

1967. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-U2-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001 PH :8875911503. 1968. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BRB1-BRB-01), KHASRA NO. 459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH, DISTT. CHURU - 331507 PH:8875011561.

SULTANPUR

1969. SUWALKA MOTORS PRIVATE LIMITED (GKY1-GKY-01), KHASRA NUMBER 485, NEAR PETROL PUMP, SULTANPUR ROAD, SULTANPUR, DISTT KOTA - 325204 PH.9116178594.

SUMERPUR

 LMJ SERVICES LTD. (6502-VC-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHEREA GROUND, SUMERPUR - 306902 PH :8094002633.

SURATGARH

1971. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-LG-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804 PH: 8875012667.

TONK

1972. K P AUTOMOTIVES PVT LTD (GM01-GM-01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001 PH :9549651972.

TUNGA

1973. PREM MOTORS (SMB1-SMB-01), VILLAGE GWALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL- BASSI, JAIPUR - 303302 - 303302 PH: 8058998123.

UDAIPUR

1974. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD, UDAIPUR - 313001 PH:90017 58531.

1975. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002 PH 95888 86349

1976. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002 PH :9414165429.

1977. TECHNOY MOTORS INDIA PVT. LTD.
(4903-49-04), KHASRA NO. 546, 547, 554 AND
555, NEAR CHITRAKOOT NAGAR, OPP.
BHIRAVGARH HOTEL, SUKHER, TEHSIL –
BADGAON, UDAIPUR, RAJASTHAN. - 313001
PH :9530396896.

VIRATNAGAR

1978. K.P. AUTOMOTIVES PVT. LTD. (SCB1-SCB-01), KHASRA NUMBER 1156, OPP HOTEL GULMOHAR "JAIPUR ROAD ,VIRATNAGAR, DISTT JAIPUR - 303102 PH :0141-4071111. 4071101.9358220012.

SIKKIM

GANGTOK

1979. ENTEL MOTORS (B901-B9-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102 PH :9933031828 9933032059

JORTHANG

1980. ENTEL MOTORS (B901-B9-02), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121 PH :9733164882 9933009934.

TAMIL NADU

AI ANDURAI

1981. AADHI CARS PVT. LTD. (CTO1-CTO-01), NO.69/1 A, SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) -641101 PH.8754045816.

ALANGULAM

1982. AADHI CARS PVT. LTD. (SJF1-SJF-01), SURVEY NO. 495/T, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT, TN -627851 PH:87540444143

AMBASAMUNDRAM (AMBAI)

1983. AADHI CARS PVT. LTD. (BXT1-BXT-01), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAIKULAM, AMBASAMUNDRAM. - 627 401 PH. 7/30/18858

ANAMALAI

1984. ABT (CHE1-CHE-01), SITE NO. 6/12, NEAR ABT SAMUGA KOODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642 104 PH: 9788174244.

ANNUR

1985. JAIKRISHNAA AUTOSALES PVT. LTD. (DN01-DN-01), SF NO.2661/IB, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR, COIMBATORE (DIST), TAMILNADU -641653 PH. 9788850733.

ANTHIYUR

1986. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUX1-CUX-01), SURVEY NO.495/4, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD, ANTHIYUR. - 638501 PH:8754086777.

ARAKKONAM

1987. GANESH CARS PVT. LTD. (BKQ1-BKQ-01), SURVEY NO. 556A/3, VILLAGE – ICHIPUDHUR, TALUKA – ARAKKONAM, VELLORE. - 631003 PH :9842345399.

ARIYALUR

1988. PILLAI & SONS MOTOR CO. (EB01-EB-01), NO.1/1, NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704 PH .04329-228300. 9442281302.

ARNI

1989. GANESH CARS PVT. LTD. (BKP1-BKP-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI, THIRUVANAMALAI, TAMIL NADU. - 632301 PH :9885553266.

ARUPPUKKOTTAI

1990. ASIR AUTOMOBILES PVT LTD (CWF1-CWF-01), SURVEY NO. 205/1, 5/5C, NEHRU NAGAR, ARUPPUKKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKKOTTAI, DIST.-VIRUDHUNAGAR. - 626 101 PH :9944059911.

ATTUR

 S.M.CAR PVT. LTD. (QT02-QT-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108 PH : 7094440057.

AVADI

1992. VISHNU CARS PVT. LTD. (5P01-5P-01), SURVEY NO. 146, 147/1F & 147/6, NO. 17 VILLAGE – KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT – THIRUVALLUR, CHENNAI, TAMIL NADU - 600054 PH. 733888021, 7358024470.

AVINASHI

1993. SHASHTI CAR PVT LTD (CLK1-CLK-01), SURVEY NO. 373/1E, THEEKU THOTTAM, NALLIGOUNDANPALAYAM, PALANGARAI, KUPOUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILMADU - 641654
PH. 5942903319.

BHAVANI

SUJANGARH

1994. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-IG-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316 PH :9897385777.

CHENGALPETTU

- 1995. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-BBS-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. -603002 PH :7299057387
- 1996. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-BBS-02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU -603202 PH: 7299057387.

CHENGAM

1997. GANESH CARS PVT. LTD. (BUP1-BUP-01), SURVEY NO. 293/3A, 3A1, VILLAGE -THUKAPETTAI, CHENGAM, DIST. -TIRUVANNAMALAI. - 606 701 PH :7397395289

CHENNAI

- 1998. ABT LIMITED (1401-14-01), 102, MOUNT ROAD, GUINDY, CHENNAI - 600032 PH :044-42254544, 42254554.
- 1999. KHIVRAJ MOTORS PVT LTD. (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006 PH:9043014530.
- CARS INDIA PVT. LTD. (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI -600058 PH :9952000089.
- CARS INDIA PVT. LTD. (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI -600020 PH: 044-24462020.
- 2002. POPULAR VEHICLES & SERVICES LTD. (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALI, CHENNAI - 600117 PH : 9176906334. 9176906335. 9176906336.
- PH .917900334, 917900333, 917900330, 307 2003. CARS INDIA PVT. LTD. (1403-14-03), 4/321, OLD MAHABALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040 PH :044-24540182 /43590913.
- 2004. POPULAR VEHICLES & SERVICES LTD. (1410-14-01), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093 PH :9282405819, 9282348331, 8939915206.
- 2005. ABT LIMITED (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106 PH: 044-42267628/604.

- 2006. ABT LIMITED (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD, 22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093 PH :044-23650488, 23650490.
- 2007. ABT LIMITED (1401-14-06), NO. 1 & 2, VASANTHA PRESS, ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020 PH :044-24465814 , 24465815.
- 2008. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (1493-14-01), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107 PH :7305087055
- 2009. ABT LIMITED (1411-14-01), 29, WALLES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058
- PH:044-42281707 / 714 / 719 / 720 / 721 / 737/.
 2010. CARS INDIA PVT. LTD. (1403-FP-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066 PH:9952000078
- 2011. VISHNU CARS PVT. LTD. (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004 PH: 0427-24661973/74/75.
- 2012. VISHNU CARS PVT. LTD. (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043 PH:044-66813729/733888000.
- POPULAR VEHICLES & SERVICES LTD. (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099 PH:7448814726/23/33.
- 2014. CARS INDIA PVT. LTD. (1403-14-05), PLOT NO.-80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112 PH: 9952000079.
- 2015. KHIVRAJ MOTORS PVT LTD. (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH -7290971978
- ABT LIMITED (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. -600041
 PH: 044-24490584 / 585 /586.
- 2017. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-14-01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115 PH:7401211553.
- 2018. RAJALAKSHMI CARS PVT. LTD. (1486-14-01), OLD DOOR NO.69, NEW DOOR NO.20, GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI. - 600060 PH :8939995454/8939995404.
- 2019. KHIVRAJ MOTORS PVT LTD. (1480-14-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI-600096 PH :98414 23569.

- 2020. ABT LIMITED (1401-14-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119 PH : 044-24502185 / 87 / 88 / 89.
- 2021. VISHNU CARS PVT. LTD. (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089 PH :8754440002/ 9677244332.
- 2022. VISHNU CARS PVT. LTD. (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056 PH 9877177243
- 2023. VISHNU CARS PVT. LTD. (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100 PH :9840929994/ 9840944478.
- 2024. VISHNU CARS PVT. LTD. (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM THORAIPAKKAM RADIJAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. 600117 PH 9940057775
- 2025. VISHNU CARS PVT. LTD. (1427-14-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. -600016 PH :044-45590293.
- 2026. RAJALAKSHMI CARS PVT. LTD. (1486-14-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095 PH :9841427572/9500125083.
- 2027. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (1493-14-03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058 PH:7305087033.
- 2028. POPULAR VEHICLES AND SERVICES LTD (1410-14-08), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1C, 88/1B & 88/2B, NOOMBAL MAIN ROAD, VANAKARAM, CHENNAI. - 600 077 PH :044-61334343, 464900069.
- 2029. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-14-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. - 600 049. PH :9841742926.
- 2030. VISHNU CARS PVT. LTD. (1427-14-07), SURVEY NO. 91/1A2, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. 600069 PH. 95000 82346.

- 2031. VISHNU CARS PVT. LTD. (1427-14-08), SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI, TAMIL NADU. - 600 073 PH: 8056260022.
- ABT LIMITED (1401-14-10), S. NO: 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI - 600089, TN.. - 600089 PH: 044-22320161, 8220011558.

CHEYYAR

2033. GANESH CARS PVT. LTD. (BUD1-BUD-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407 PH: 9787669339.

CHIDAMBARAM

2034. VISHNU CARS PVT. LTD. (CPK1-CPK-01). SURVEY NO. 1022.8 102/5. BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU. - 608 602 PH :041-442413477358004555.

COIMBATORE

- 2035. ABT LIMITED (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037 PH :9944400987.
- 2036. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005 PH :8220862666.
- 2037. ABT LIMITED (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043 PH :96009 66056.
- 2038. ABT LIMITED (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001 PH: 044-432566.
- 2039. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH:9047055667.
- 2040. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-01), 8/60-C-88/62-D, METTUPALAYAM ROAD, G. NMILLS POST, NEARJOHNBOSCO CHURCH, COIMBATORE - 641029 PH:044-4519140.
- 2041. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANCANUR, COIMBATORE - 641027 PH :9665219900.
- 2042. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-08), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE, - 641013 PH :9685877775.

- 2043. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL. NADU - 641004 PH :0422-383220.
- 2044. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE -641004 PH :9655345775.
- 2045. AADHI CARS PVT. LTD. (4108-41-01), SURVEY NO. 469/2, DOOR NO: 46-2, SATHY MAIN ROAD, RAMAKRISHINAPURAM, GANAPATHY, COIMBATORE - 641035 PH: 0422-4000600.
- 2046. ABT LIMITED (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024 PH:78457 74069.
- 2047. AADHI CARS PVT. LTD. (4108-41-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004 PH :0422-3007701
- 2048. AADHI CARS PVT. LTD. (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041 PH:0422-3000201.
- 2049. AADHI CARS PVT. LTD. (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE. - 641005 PH 10422-4000777
- 2050. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. -641008 PH :0422-2251225.
- 2051. AADHI CARS PVT. LTD. (4108-41-06), SF NO. 14/78-A, RENUKA SHELTERS, VILANKURICHI MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL NADU-641048. - 641 006 PH: 93764045840
- 2052. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-11), PLOT NO. 1, RAJA STREET, KALLIMADAI, NANJAPPA NAGAR, COIMBATORE, TAMIL NADU - 641005 PH :9344870035.

COONOOR

2053. SREE SARADHAMBAL AUTOMOBILES PVT LTD (3601-36-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102 PH 95852 77775.

CUDDALORE

2054. ABT LIMITED (5Q01-5Q-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003 PH :04142-224567. 2055. VISHNU CARS PVT. LTD. (SQ02-5Q-01), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANANGAKUPPAM, CUDDALORE - 607 001 PH. 7338884131.

CUMBUM

2056. MEENAKSHI AUTO ZONE PVT. LTD. (CJS1-CJS-01), PATTA NO. 4388, SURVEY NO. 1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB DIST.-CUMBUM, TAMIL NADU. - 625516 PH :9940094881.

DEVAKOTTAL

2057. SIVA AUTOMOTIVE TRADING PVT LTD (GKV1-GKV-01), SURVYEY NO. 5/1A, MULL IGUNDU (SOMANENTHAL VILLAGE), DEVAKOTTAI TALUK, SIVAGANGAI DISTRICT, TAMILNADU - 630 303 PH.7094688870.

DHARAPURAM

2058. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-QN-Q4), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656 PH :9897550777.

DHARMAPURI

2059. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-5R-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI, TAMILNADU - 636807 PH: 9750938892/ 9159086222.

DINDIGUL

2060. PLA MOTORS (S401-S4-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL -624001 PH :7010075200

EDAYARPALAYAM, COIMBATORE

2061. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CJK1-CJK-01), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE. - 641025 PH :9047081914.

FRODE

- 2062. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-H7-01), 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH:98779877777
- 2063. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-H7-06), SURVEY NO. 1363/3, 1363/5, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP, OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE. 638 002 PH :6385805777.

- 2064. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (H702-H7-01), OLD G.S. NO. 337 (1 TO 4), RS NO. 259/11A, 10,9.8, SATHY ROAD, PERIYA SEMUR VILLAGE, ERODE, TAMILNADU - 638003 PH :9171791991.
- 2065. SRICITY AUTO (H702-H7-02), R.S. NO:1098/3, VINAYAGAR KOVIL STREET, TELEPHONE NAGAR, POONDURAI MAIN ROAD, JERODE, TAMILNADU - 638002 PH :9826671444.

GOBICHETTIPALAYAM

2066. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-QM-03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH: 9597560777.

GUDIYATHAM

2067. GANESH CARS PVT. LTD. (CQW1-CQW-01), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM. - 653803 PH :04171-290172

GUDUVANCHERY

2068. VISHNU CARS PVT. LTD. (BAD1-BAD-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203 PH. 9500121553/9677122225.

GUMMIDIPOONDI

2069. RAJALAKSHMI CARS PVT. LTD. (BIZ1-BIZ-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE – PAPPANAKUPPAM, GUMMIDIPONNDI, THIRUVALLUR. 601201 PH: 044-27922060.

HARUR

2070. SRI AMMAN CARS INDIA PVT. LTD. (AAV1-AAV-01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903 PH :8220014360/7339071500.

HOSUR

2071. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-7Q-01), P.O.- PERANDAPALLI,NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 PH 9790036377/6883259555.

IDAPPADI

2072. THRIVENI CAR COMPANY PVT LTD. (HI01-HI-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM -637101 PH -9003311488

KALLAKURICHI

2073. ABT LIMITED (CHG1-CHG-01), SURVEY NO. 215/4,NEAR AKT SCHOOL, DURUGAM ROAD, NEAR DOORDARSHAN BLDG, NEELAMANGALAM VILLAGE., KALLAKURICHI TALUK & DIST., TAMILNADU - 606 202 PH : 9047514890.

2074. S M CARS (CHG2-CHG-01), SF: 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213 PH: 7094440010.

KANCHEEPURAM

2075. GANESH CARS PVT. LTD. (C601-JA-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH-984230661.

KANGAYAM

2076. SREE SARADHAMBAL AUTOMOBILES PVT LTD. (GJI1-GJI-01), NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU. - 638701 PH :7708531777.

KARAIKUDI

2077. ABT LIMITED (4202-HX-05), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302 PH:4565-232484, 232486..

KARUMATHAMPATTI

2078. SREE SARADHAMBAL AUTOMOBILES PYT LTD (CJO1-CJ.O-1), SF. NO. 2818). BARR BHARAT PETROL BUNK, VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADAM, DISTT. COIMBATORE. - 641659
PH. :9159210008.

KARUNGAL

2079. ATHEN (SGE1-SGE-01), SURVEY NO. 639/5, KARUNGAL TOWN, VILAVANCODE TALUK, KANYAKUMARI DISTRICT, TAMILNADU - 629157 PH: 7094434179.

KARUNGALPALAYAM, ERODE

2080. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-H7-08), RF. NO. 17/1, 2, CAVERI ROAD, KARUNGALPALAYAM, ERODE, TAMILNADU -638003 PH: 8098825000.

KARUR

2081. ABT LIMITED (K401-K4-01), SF NO. 529/1, SALEM BY PASS, ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002 PH : 04324-222261/62/63.

KATPADI

2082. GANESH CARS PVT. LTD. (C601-APA-04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH :9842313139.

KATTUMANNARKOIL

2083. VISHNU CARS (SKG1-SKG-01), SURVEY NO. 6& 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOIL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301 PH :7389004555.

KELAMBAKKAM

2084. CRESCO (A UNIT OF NEXGEN VENTURE PVT LTD) (SJV1-SJV-01), AGP MAHAAL, SURVEY NO 43, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU - 603 103 PH 1736087002

KINATHUKADAVU

2085. AADHI CARS PVT. LTD. (BBI1-BBI-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109 PH: 0422-3000506; 3000505.

KODUMUDI

2086. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUY1-CUY-01), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI.-638151 PH.8754756777.

KOTAGIRI

2087. AADHI CARS PVT. LTD. (BAS1-BAS-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217 PH :8754045891/8754045442.

KOVILPATTI

2088. ASIR AUTOMOBILES PVT LTD (N001-N0-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501 PH :4832-23220

KRISHNAGIRI

2089. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-QL-03), NH-7,NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001 PH 9500202416/8220004270.

KUMBAKONAM

2090. PILLAI & SONS MOTOR CO. (E701-N4-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM, TANJAVUR - 612501 PH:0435-2442566, 2442565, 9443264696.

MADURAI

2091. ABT LIMITED (4202-42-02), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018 PH :9994400615.

- 2092. ABT LIMITED (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH :9600966164.
- 2093. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH -7407780000
- 2094. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. -625003 PH :7402788840.
- 2095. ASIR AUTOMOBILES PVT LTD (4206-42-01), D. NO. 28/5B, MELUR MAIN ROAD, UTHANKUDI, MADURAI. 625107 PH 190440150911
- 2096. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008 PH -9442799581
- 2097. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-02), SURVEY NO. 238/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652 014 PH. 19940224881.

MADURANTHAKAM

2098. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (CEW1-CEW-01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. -603306 PH :7401212797.

MALLASAMUDRAM

2099. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CWY1-CWY-01), SF NO. 194/3C, MALLASAMUDRAM MAIN ROAD, MALLASAMUDRAM TOWN, TIRUCHENGODE TALUK, NAMAKKAL DIST., TAMIL NADU. - 637503 PH :9894932019.

MALLUR

2100. THRIVENI CAR COMPANY PVT LTD.
(CDH1-CDH-01), SURVEY NO.50/4A, AMANI
AMMAPALAYAM YILLAGE, DISTT:
DADHAGAPATTY SUB REGISTRATION,
MALLUR DISTT: SALEM - 636309
PH 10472-24272309

MANAMADURAI

2101. ABT LIMITED (CHF1-CHF-01), NO. 35, OLD RAMNAD ROAD, MANAMADURAI TOWN, DISTRICT – SIVGANGAI. - 630606 PH:9994450331.

MANAPPARAI

2102. PILLAI AND SONS MOTOR COMPANY (SKW1-SKW-01), PLOT NO.262, TRICHY DINDIGUL BYPASS ROAD, VENGAIKURUCHI VILLAGE,MANAPPARAI, TRICHY,TN - 621307 PH :8489900908.

MANGALAPURAM

2103. SREE SARADHAMBAL AUTOMOBILES PYT LTD (CLX1-CLX-01), DOOR NO. 1/518, SURVEY NO. 75/1, ATTUR MAIN ROAD, MANGALAPURAM (POST), TALUK – RASIPURAM, DISTRICT – NAMAKKAL. - 636202 PH:7094447871.

MANNARGUDI

2104. PILLAI & SONS MOTOR CO. (BKR1-BKR-01), NO. 37, THIRUTHURAIPOONDI ROAD, MANNARGUDI, THIRUVARUR DISTRICT, TAMIL NADU. - 614001 PH.7094411675.

MAYILADUTHURAI

2105. PILLAI & SONS MOTOR CO. (E701-AG-04), 46, VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007 PH: 04364-251767. 251765. 9442141703.

MECHE

2106. SM CARS (CVK1-CVK-01), SURVEY NO. 139A/5, PATTA NO. 653, AMANI M.KALIPATTY VILLAGE, MECHERI TOWN, METTUR TALUK, SALEMN DIST., TAMIL NADU. - 636 453 PH.7094440010.

MELUR

2107. SIVA AUTOMOTIVE TRADING PVT. LTD.
(CHC1-CHC), OLD SN. 138/1, SURVEY WARD
C, BLOCK NO. 1, T.S. NO. 21/7, VILLAGE AND
TOWN – MELUR, MELUR, DIST.-MADURAL 625109
PH :8098120000.

METTUPALAYAM

2108. ABT LIMITED (4101-EU-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043 PH: 95009 45094.

MIN.IUR

2109. RAJALAKSHMI CARS PVT. LTD. (BPE1-BPE-01), PLOT NO. 27, SRI JANAKI RATHINA NAGAR, VILLAGE AND TOWN – MINJUR, PONNERI – 601 203. DISTRICT – THIRUVALUR. – 601203 PH. 1044-27933331

NAGAPATTINAM

2110. PILLAI. & SONS MOTOR CO. (CQQ1-CQQ-01), NO.181, KEELA ANTHANAPETTAI, ANTHANAPETTAI, P.O. - MANJAKOLLAI, PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU -611106 PH :4365220250.

NAGARCOIL

2111. ATHEN (\$503-\$5-01), RESURVEY NO. G.3/9-7, BUILDING NO. 254-A/3 & 4 K.P ROAD PARAVATHIPURAM, NAGERCOIL KANYAKUMARI DISTRICT TAMILNADU - 629003 PH:8012029777.

NAMAKKAL

- 2112. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-X4-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL-637001 PH :937164888.
- 2113. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-X4-03), 1/41/21 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001 PH. 73719288B.

NATRAMPALLI

2114. GANESH CARS PVT. LTD. (SPR1-SPR-01), NO:8/12-1, NEAR ARJUNA SULOCHANA MAHAL, BENGALURU- CHENNAI MAIN ROAD, VELAKALNATHAM, NATRAMPALLI, TIRUPATTUR DIST. TAMIL NADU - 635854. -635854

NEGAMAM

2115. ABT LIMITED (CHD1-CHD-01), 68, 69, ABT BUS STAND, PALLADAM ROAD, PERIA NEGAMAM, POLLACHI, TAMIL NADU - 642120 PH: 99948 76794.

OMALUR

- 2116. SRI AMMAN CARS INDIA PVT. LTD.
 (7Q01-UM-04), 123. 3B, NH-7, BANGALORE BYE
 PASS ROAD, KOTTAMETTUPATTI, OMALUR,
 SALEM (IDIST.), TAMIL NADU 636012
 PH: 822010070/8883529888.
- 2117. THRIVENI CAR COMPANY PVT LTD.
 (UM01-UM-01), PLOT NO. 44 & 45, PALANIYAPPA
 NAGAR LAYOUT, NH-7, KAMALAPURAM
 VILLAGE, OMALUR, DISTRICT SALEM, TAMIL
 NADU 636309
 PH :4290-222711.

OOTY

2118. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-Y1-05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001 PH:97511 09229.

P.N. PALAYAM, COIMBATORE

2119. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-OH-04), NO. 12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020 PH: 0422-698899.

PADAPPAI

2120. VISHNU CARS PVT. LTD. (CRO1-CRO-01), SURVEY NO.368/2A/1, 368/2A/2, VANDALLUR-WALLAJABAD MAIN ROAD, PADAPPAI EAST, CHENNAI. - 601301 PH :8754417168.

ΡΔΙ ΔΝΙ

2121. PLA MOTORS (S401-GLR-02), NO:13-1-11C-1, WEST AYAKUDI, DINDIGUL ROAD, PALANI, DINDIGUL DISTRICT, TAMIL NADU - 624613 PH:04545-290900.

PARAMATHIVELUR

2122. SREE SARADHAMBAL AUTOMOBILES PYT LTD (CC01-CC-01), SUPYEY NO. 171, NEAR KONGU SCHOOL, NAMAKKAL BYPASS ROAD, PADAMUDI PALAYAM, TALUKA – PARAMATHIVELUR, NAMAKKAL, TAMIL NADU. -638182 PH:8870666599.

PATTUKKOTTAI

2123. PILLAI & SONS MOTOR CO. (CJA1-CJA-01), SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11, SRI JANAGALAKSHINI NAGAR, THANJAVUR ROAD, ALADIKUMULAI VILLAGE, TALUK PATTUKOTTAI, THANJAVUR. - 614615 PH. 7094433074.

PAVITHRAM

2124. SREE SARADHAMBAL AUTOMOBILES PVT LTD (TWT1-TWT-01), SURVEY NO. 102/1B, NAMAKKAL MAIN ROAD, PAVITHRAM - 637 021 PH -0900320888

PENNAGARAM

2125. SRI AMMAN CARS INDIA PVT. LTD. (BXZ1-BXZ-01), SURVEY NO. 419/1, VILLAGE – PARUVADHANAALLI, PENNAGARAM, DHARMAPURI. - 636810 PH :9715044700.

PERAMBALUR

 PLA MOTORS (2305-DQ-04), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212 PH :8870004960.

PERNAMBUT

2127. SRI AMMAN CARS INDIA PYT LTD (CODE UNDER CREATIONS-CODE UNDER CREATIONS), SURVEY NO.708, PLOT NO: 87,88 & 89, PERNAMBUT TO GUDIYATTAM ROAD, PERNAMBUT, VELLORE DISTRICT, TAMIL NADU - 635810 635810 PH :7094403100.

PERUNDURAI

2128. SREE SARADHAMBAL AUTOMOBILES PYT LTD (BTX1-BTX-01), SF NO.542/1, KOVAI MAIN ROAD, PERUNDURAI VILLAGE, PERUNDURAI DISTT. ERODE, TAMIL NADU - 638052 PH :9597490777.

POCHAMPALLI

2129. SRI AMMAN CARS PVT. LTD. (CUW1-CUW-01), NEW SURVEY NO. 561/5, VILLAGE – JUMBUKUTTANPATTI, POCHAMPALLI, KRISHNAGIRI. - 635206 PH :9600469988.

POLLACHI

2130. ABT LIMITED (L301-L3-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003 PH:99944 53265.

POLUR

2131. GANESH CARS PVT. LTD. (GLV1-GLV-01), AZHAGO COMPLEX, SURVEY NO:77/1, CUDADALOR TO CHITTOOR ROAD, POLUR, THIRUVANNAMALAI DISTRICT, TAMILNADU -608803 PH :9842245200.

PUDUKOTTAI

 PLA MOTORS (2305-5U-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003 PH: 04322-265566/67.

PUNJAI PULIAMPATTI

2133. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BKO1-BKO-01), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTI - 638459, SATHY THALUK, ERODE. - 638459 PH 6385810777

RAJAPALAYAM

2134. MEENAKSHI (5V02-01), DOOR NO. 98, COTTON MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117 PH :9443785681.

RAMANATHAPURAM

2135. SIVA AUTOMOTIVE TRADING PVT. LTD. (0U02-0U-1), SURVEY NO. 172/IB2C, 172/2C, VILLAGE - ACHUNTHANVAYAL, ACHUNTHANGAL GROUP, TALLIK -RAMANATHAPURAM, RAMANATHAPURAM. -623502 PH. 8098110000.

RAMESHWARAM

2136. SIVA AUTOMOTIVE (SKI1-SKI-01), NO:2307, SURVEY NO:279/3A, RAMNAD ROAD, ARIYANKADU, RAMESHWARAM, RAMANATHAPURAM DISTRICT, TAMILNADU -623529 PH:7402788898.

RANIPET

2137. GANESH CARS PVT. LTD. (CJJ1-CJJ-01), SURVEY NO. 441, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET, TAMIL NADU. - 632403 PH: 3942330388.

RASIPURAM

2138. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BSJ1-BSJ-01), SURVEY VO-41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401 PH 4268-231402/7539972888.

SALEM

2139. ABT LIMITED (4101-A2-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM -636009 PH: 0427-4066988. 406999.

2140. THRIVENI CAR COMPANY PVT. LTD. (A203-A2-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005 PH: 0427-2440000.

2141. S.M.CARS PVT. LTD. (A204-A2-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202 PH.7094448000, 7034449000.

2142. THRIVENI CAR COMPANY PVT. LTD. (A203-A2-03), SURVEY NO. 57, VILLAGE -MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103 PH :0427-2291000.

2143. S M CAR PRIVATE LIMITED (A204-A2-02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007 PH. 7094440053.

SANKAGIRI

2144. THRIVENI CAR COMPANY PVT LTD.
(BTM1-BTN-01), SURVEY NO. 171/5B, KCK
PLAZA, KACHERIDADU, DEPUTY COLLETCTOR
ROAD, SALEM, SANKAGIRI (TAMIL NADU) 837301
PH : +914283242600
+914283242601

SANKARANKOVIL

2145. AADHI CARS PVT. LTD. (BKS1-BXS-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. -627756 PH. 7397728025.

SATHY ROAD, ERODE

2146. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-H7-09), SF:NO:245, KANDHAIYAN THOTTAM, SOOLAI, SATHY ROAD, VEERAPPANCHATTIRAM, ERODE, TAMILNADU-638004 Pt. 9655240486.

SATHYAMANGALAM

2147. SREE SARADHAMBAL AUTOMOBILES PYTL TD (BGU1-BGU-01), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM – 638 401, DISTRICT – ERODE, TAMIL NADU - 638401 PH :9897592777.

SATTUR

2148. MEENAKSHI AUTO ZONE PVT. LTD.
(SDR1-SDR-01), SURVEY NO.
1810, CHATRAPATTI VILLAGE, MADURAI
KANYAKUMARI NATIONAL HIGHWAYS,
SATTUR, VIRUDHUNGAR
DISTRICT, TAMILINADU - 626203
PH. 9940094881.

SEYDUNGANALLUR

2149. ASIR AUTOMOBILES PVT LTD (S603-GJG-02), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK. SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU. 628809 PH: 8344992290

SHOLINGUR

2150. GANESH CARS PVT. LTD. (GLU1-GLU-01), NO-401, ARAKKONAM MAIN ROAD, OPPOSITE TVS FOUNDARY, PANDIYANELLORE, SHOLINGHUR, WALAJA TALUK, RANIPET DISTRICT, TMILANADU -631102 PH : 7397396259.

SIVAKASI

2151. MEENAKSHI AUTO ZONE PVT. LTD. (X602-X6-01), 372 D & E. ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. -626123 PH :4562-231281.

SRIPERUMBUDUR

2152. RAJALAKSHMI CARS PVT. LTD. (7801-78-01), SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105 PH: 98399995469.

SRIVILLIPUTHUR (RAJAPALYAM)

2153. ABT LIMITED (4202-5V-03), NO. 10/32, PADIKKASUVAITHANPATTI, NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125 PH 95009 05020.

SULUR

2154. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-TK-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR -641 402 PH .0422-3199901.

TENKASI

- 2155. AADHI CARS PVT. LTD. (BXR1-BXR-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE – KUNARAMANALLUR, TENKASI. - 627814 PH 9500991475.
- 2156. AADHI CARS PVT. LTD. (BKR1-BKR-02), DOOR NO. 47, MADHALAMPARAI, TENKASHI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU. - 627 814 PH. 9800991475.

THAMMAPATI

2157. SM CARS (SNH1-SNH-01), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI, SALEM DISTRICT, TAMILNADU - 636113. - 636113 PH :7094440010

THANJAVUR

2158. PILLAI & SONS MOTOR CO. (E701-E7-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU -613007

PH:04362-271723, 271724, 9443264164.

THARAMANGALAM

2159. THRIVENI (CSQ1-CSQ-01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST., TAMIL NADU. - 636501 PH-9159355999/9003504760

THENI

2160. MEENAKSHI AUTO ZONE PVT. LTD. (9U02-9U-01), DOOR NO. 871/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT – THENI - 625531 PH -9789703881

THIRUMULLAIVOYAL

2161. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (CDW2-CDW-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULAIVOYAL DISTT. CHENNAI - 600062 PH : 7305087044.

THIRUVALLUR

- 2162. KHIVRAJ MOTORS PVT LTD. (1404-HH-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001 PH:99520 78443.
- 2163. KHIVRAJ MOTORS PVT LTD. (1404-HH-05), PLOT NOS.218,219,220,225,226,227.228 AND S NOS. 1365,136, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001 PH. 97103 94818.

THIRUVANNAMALAI

2164. GANESH CARS PVT. LTD. (C601-LX-03), NO.-5, NH-78, KRISHANAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601 PH :9842305072.

THIRUVARUR

2165. PILLAI & SONS MOTOR CO. (E701-LJ-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001

PH:04366-250250.9442163707.

2166. PILLAI & SONS MOTOR COMPANY (LJ01-LJ-01), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 601/681, SUNDARAVILAGAM, NARSINGHAMPET, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001 PH 9442/163509

THISAYANVILLAI

2167. AADHI CARS PVT. LTD. (CVL1-CVL-01), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI. -627 657 PH. 7339511187.

THUCKALAY

2168. ATHENS (BW02-BW0-01), DOOR NO. 5/76B. (RE SURVEY NO.5307) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE – MUTHALAKURUCHI, KALKULAM-TALLIK, THUCKALAY, DISCTRICT – KANYAKUMARI, TAMILNADU - 629174 PH :8012029888.

THURAIYUR

2169. PLA MOTORS (CSE1-CSE-01), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010 PH :9486763725.

TIRUCHENDUR

2170. ASIR AUTOMOBILES PVT LTD (CCJ1-CCJ-01), SURVEY NO. 220/1D1A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215 PH : 737/3900220.

TIRUCHENGODE

2171. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-QP-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE -637001 PH 4288-282292.

TIRUNELVELI

- 2172. AADHI CARS PVT. LTD. (A303-A3-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI, TAMIL NADU - 627357 PH: 9500991610.
- 2173. AADHI CARS PVT. LTD. (A303-A3-03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU. - 627 011. PH :9500991610.

TIRUNVELI

2174. AADHI CARS PVT. LTD. (A303-A3-04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU -627001

PH :95009 91479. TIRUPATHUR

2175. GANESH CARS PVT. LTD. (BPD1-BPD-01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601 PH :9842308909.

TIRUPATTUR(SIVAGANGAI)

2176. ABT LIMITED (CHH1-CHH-01), DOOR NO. 8/2/29A, KARAIKUDI ROAD, TIRUPATHUR, DISTRICT – SIVAGANGAI. - 630211 PH: 9994450331.

TIRUPUR

- 2177. ABT LIMITED (4101-Y7-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR -641601 PH 95009 98368
- 2178. SHASHTI CAR PVT LTD (Y701-Y7-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604 PH: 044-2430275/ 2430276.

TIRUTHANI

2179. CARS INDIA PVT. LTD. (CICT-CIC-01), NO. 9/13. CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI, TAMILNADU-631209 PH :7358773860.

TIRUVANNAMALAI

2180. SRI AMMAN CARS INDIA PVT LTD. (LX02-LX-01), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601 PH:7094471293.

TONDI

2181. SIVA AUTOMOTIVES (SHW1-SHW-01), SURVEY NO: 85/16, WARD 10/78, SOUTH THOPU STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU - 623409 PH :7402788820.

TRICHY

- 2182. ABT LIMITED (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY 620001 PH :0431-4221620.
- 2183. PLA MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009 PH:9994599777/9600950960.
- 2184. ABT LIMITED (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005 PH :0431-4221555.
- 2185. PLA MOTORS (2305-23-03), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001 PH:0431-2411540/530.
- 2186. PILLAI & SONS MOTOR CO. (2306-23-01), SURVEY NO. 10B, 1A/D, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY. - 620002 PH: 8489900907. 9384826814

TUTICORIN

2187. ASIR AUTOMOBILES PVT LTD (5603-S6-01), SURVEY NO. 25/18, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002 PH :7373501220.

UDUMALPET

2188. ABT LIMITED (QR01-QR-01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126 PH :99944 41645.

LITHANGARAI

2189. SRI AMMAN CARS INDIA PVT. LTD. (CFY1-CFY-01), SURVEY NO. 104/1, 104/1B, VILLAGE – THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304 PH. 9715044600.

UTHUKOTTAI

2190. KHIVRAJ MOTORS PVT LTD. (CUC1-CUC-01), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602 026 PH:7299635536.

VALLIYUR

 AADHI CARS PVT. LTD. (BXQ1-BXQ-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002 PH :7373091462.

VANDAVASI

2192. GANESH CARS PVT. LTD. (CRN1-CRN-01), SURVEY NO.272, KEELSATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408 PH.7395802484.

VANIYAMBADI

2193. GANESH CARS PVT. LTD. (BJY1-BJY-01), NO. 197/181, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI, VELLORE (DIST), TAMIL NADU. - 635801 PH :9842327709.

VELLORE

- 2194. GANESH CARS PVT. LTD. (C601-C6-01), 91 NEW BY-PASS ROAD, VELLORE - 632004 PH: 9842377110.
- 2195. SRI AMMAN CARS INDIA PVT. LTD. (C602-C6-01), DOOR NO. 68, SURVEY NO. 66/7, NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUKA, GANDHINAGAR, VELLORE DIST., TAMIL NADU. - 632006 PH :7094471320, 7094471321.
- 2196. SRI AMMAN CARS INDIA PVT. LTD. (C602-60-2), SURVEY NO. 316:382, 316:8A, 316:8B, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE, VELLORE TALUK & DIST. ON NH48 (CHENNAL BENGSALURU HIGHWAY), VELLORE, TAMILNADUR 632010 PH. 7094471320

VILLUPURAM

2197. ABT LIMITED (5Q01-QQ-02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602

PH:04146-225509/225590. VIRUDHACHALAM

2198. ABT LIMITED (BMA1-BMA-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101 PH: 04143-262631/262632/262633.

VIRUDHUNAGAR

2199. MEENAKSHI AUTO ZONE PYT LTD (SCF1-SCF-0A), DOOR NO:8/504, SURVEY NO. 11/6, PELAMPATTI VILLAGE, VIRUDHUNAGAR MADURAI HIGH WAY, OPPOSITE TO VVV COLLEGE, TALUK & DIET, VIRUDHUNAGAR, TAMILNADU - 626001 PH : 3940094881.

TAMILNADU

CHENNAI

2200. VISHNU CARS (1488-14-01), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTHANGAL, CHENNAI,TN - 600032 PH :7550360444.

CHENNAI- MAMBAKKAM

2201. KHIVRAJ MOTORS (1404-14-G1), SURVEY NO:76/A, NO:27, PLOT NO. D-2, KEELAKOTTAYUR, VANDALUR TO KELAMBAKKAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI,TN - 600127 PH :9841591558.

CHETPET

2202. GANESH CARS (SGY1-SGY-01), DOOR NO: 35/C, CHETPET TOWN, CHETPET TALUKA, TIRUVANNAMALAI DIST.,TAMILNADU, - 606 801 PH: 98423 06337.

CHINNAMANUR

2203. ABT LIMITED (SKX1-SKX-01), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO. 8/15, PERIYAKULAM TO CHINNAMANUR MAIN ROAD, KEELAPOOLANANDHAPURAM, CHINNAMANUR MUNICIPAL TOWN & TALUK, THENI DIST., TN. 625515 - 625515 PH. 9715863213.

DENKANIKOTTAI

2204. AMMAN CARS (SDT1-SDT-01), SURVEY NO:766/ 1811, THABILAGOUNDAN THOTTI, DENKANIKOTTAI, KRISHNAGIRI DISTRICT, TAMILNADU - 635107 PH :9865599935.

GANGAVALI

2205. THRIVENI CARS (SOS1-SOS-01), SURVEY NO # SF NO. 22/3A1A, 106 ATTUR MAIN ROAD,GANGAVALLI,SALEM, TN - 636105 PH :9159722999.

KAWALKINARU

2206. AADHI CARS PVT. LTD. (CSUI-CSU-01), SURVEY NO:1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAVALKINARU JUNCTION, KAVALKINARU (VADAKANKULAM), TIRUNELVELI, - 627/105 PH:7339111259.

KUMBAKONAM

2207. PILLAI AND SONS MOTOR CO. (E701-E7-06), D.
NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO,
THRUBHUVANAM TOWN & POST,
KUMBAKONAM, THANJAVUR DISTRICT,
TAMILNADU - 612103
PH :848900136.

NEYVELI

2208. VISHNU CARS (CPN1-CPN-01), SURVEY NO:545/2A1A, NH-45C, OPP. NATIONAL COLLEGE, KUMBAKONAM - CHENNAI HIGH WAY, NEAR NEVYELI ARCH GATE, NEYVELI T.S, KEELAKOLLAI, MARUNGUR POST, PANRUTI, CUDDALORE DISTRICT, TAMILNADU - 607103 PH :3934059575.

SIVAGANGAI

2209. ASIR AUTOMOBILES (SDC1-SDC-01), S. NO: 144/1, SIVAGANGAI-THONDI ROAD, PAIYAURHILAIVAYAL, SIVAGANGAI,TAMILNADU - 630561 PH-9750372220.

THANJAVUR

2210. PLA MOTORS FIRM (E702-E7-01), SURVEY NO. 173/6B4, TRICHY-THANJAVUR ROAD, NANJIKOTTAI BYPASS, THANJAVUR, TAMILNADU - 613005 PH :9344006433/9344003877.

THOPPUR

2211. SRI AMMAN CARS (SLU1-SLU-01), SITE NO. 422 /2A, BANGALORE TO SALEM HIGH WAY, AMMAN, THOPPUR VILLAGE & TOWN,NALLAMPALLI TK, DHARMAPURI DISTRICT, - 636352 PH :979004273.

TINDIVARAM

2212. VISHNU CARS (SD1-SDI-01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM, TAMILNADU -604102 PH.9500039023.

TIRUPPUVANAM

2213. MEENAKSHI AUTO ZONE PVT LTD (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NO.21 BAKHYA NAGAR, WARD NO.1, MANDAPAM MAIN ROAD, TIRUPPUVANAM, SINAGANGA DISTRICT, TAMIL NADU - 630611 - 630611
PH :9442799581.

UTHIRAMERUR

2214. AIE CARS (SHG1-SHG-01), SURVEY NO:383/3B-B2, UTHIRAMERUR MAIN ROAD, UTHIRAMERUR, KANCHEEPURAM DISTRICT, TAMILINADU - 603406 PH :7299057387.

VELLAKOVIL

2215. SRI CITI AUTO (SGO1-SGO-01), SURVEY NO:502/C &371/D, NO. 196,197,KOVAI KARUR MAIN ROAD, VELLAKOVIL, TIRUPUR DIST., TAMILNADU - 638111 PH:9994606000.

TELANGANA

ADILABAD

2216. ADARSHA AUTOMOTIVES PVT LTD (BTM1-BTM-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001 PH:9133307724.

ARMUR

2217. VARUM MOTORS PVT. LTD. (BBN1-BBN-01), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224 PH: 8142281424 9052901888.

BATCHUPALLY, HYDERABAD

2218. SAI SERVICE PRIVATE LIMITED (1011-10-09), SURVEY NO 499/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090 PH:7330771111.

BHUPALAPALLY

2219. ADARSHA AUTOMOTIVES PVT LTD (D502-BCF-04), 6-113, AWWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169 PH :7799790526.

BODHAN

2220. VARUN MOTORS PVT. LTD. (0801-08-01), PLOT NO. 5/2, ACHANAPALLY CROSS ROAD, OPP: APNA FUNCTION HALL, BODHAN, DIST. -NIZAMABAD, TELANGANA. - 503 185 PH: 958196691 8142077222.

CHEVELLA

2221. GEM MOTORS (INDIA) PVT. LTD. (CBL 1-CBL-01), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. -510101 PH. 9912899128, 9912834567.

ETUNAGARAM

2222. WIN MOTORS (SOJ1-SOJ-01), H.NO 12-412 & 12-413, AKULAVARI GHANPUR, ETURNAGARAM, MULUGU DISTRICT, TELANGANA - 506165 PH :8688828005.

GADWAL

2223. SRI JAYARAMA MOTORS PVT. LTD. (WP01-BHR-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125 PH :809899074, 8098998671.

GAJWEL

2224. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYU1-BYU-01), SURVEY NO. 220, VILLAGE – PRAGNAYPUR, GAJWEL, DISTRICT – MEDAK, TELANGANA. - 502311 PH :885088071

GHATKESAR

2225. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYL-BYL-01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY. - 501301 PH :8885088075.

HUSNABAD

2226. ADARSHA AUTOMOTIVES PVT LTD (GJET-GJE-01), SURVEY NO. 202/E, H. NO. 12-1/4 & 12-1/A, VILLAGE & MANDAL -HUSNABAD, DIST.-SIDDIPET, TELANGANA. -505467 PH :8886092222, 7995835552.

HYDERABAD

- 2227. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD, AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020 PH: 9966838294.
- 2228. RKS MOTORS PVT. LTD. (1003-10-01), SABOO TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD 500482 PH: 040 44454443. 9010811166.
- 2229. RKS MOTORS PVT. LTD. (1003-10-02), B-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039 PH :040 23434504, 9010822210.
- 2230. VARUN MOTORS PVT. LTD. (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, - 500037 PH:9885208555, 9985745222.
- 2231. VARUN MOTORS PVT. LTD. (4603-10-0B), ADITYA NAGAR COLONY, ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008 PH: 64551700 8886114856
- 2232. VARUN MOTORS PVT. LTD. (1010-10-01), PLOT NO. VI- VII A & B,UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH :9885208555.
- 2233. RKS MOTORS PVT. LTD. (1003-10-04), H: NO 16-9409/P,PLOT NO.4/1,4/2,SY.NO. 97,98,OLD MALAKPET OPP GOLNAKA BRIDGE. MOOSARAMBAGH,HYDERABAD - 500036 PH: 9010811192.
- 2234. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10, NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081 PH :04023113399 04023113388 0450912702
- 2235. RKS MOTORS PVT. LTD. (1003-10-05), 11-6-191/192,OPP. HOTEL HARSHA, PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD -500001 PH :9848811158.
- VARUN MOTORS PVT. LTD. (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036 PH :4553395. 4547676. 9885093360.

- 2237. VARUN MOTORS PVT. LTD. (4603-10-0A), 1-11-200, SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016 PH:9885206555.
- 2238. THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8.NEAR MARGADARSI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074 PH :9903551265.
- 2239. GEM MOTORS (INDIA) PVT. LTD. (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR,HYDERABAD, ANDHRA PRADESH - 500084 PH :9912889128.
- 2240. GEM MOTORS (INDIA) PVT. LTD. (1009-10-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH. 9912344538.
- 2241. SAI SERVICE PRIVATE LIMITED (1011-10-01), 6-6-29/5/1/NR, VIMANA PURI, QUTHBULLAPUR, HYDERABAD, TELANGANA 500055 - 500055 PH :9010827755.
- 2242. THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD 500076 PH:04027176999 04027177999 9987851:077
- 2243. VARUN MOTORS PVT. LTD. (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008 PH 9985104860. 69997979.
- 2244. RKS MOTORS PVT. LTD. (1003-10-08). N.O.1-10-1/285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062 PH.7799779810.
- 2245. SAI SERVICE PRIVATE LIMITED (1011-10-04), H. NO. 16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD. - 500059 PH:7799352000.
- 2246. VARUN MOTORS PVT. LTD. (4603-10-0G), 1-10-28/1 SY. NO.285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH:7799600093.
- 2247. VARUN MOTORS PVT. LTD. (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH :8886322776.
- 2248. VARUN MOTORS PVT. LTD. (4603-10-0J), PLOT NO. 1-45, SY'NO:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE -500019 PH:8886067847.

- 2249. SAI SERVICE PRIVATE LIMITED (1011-10-07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH-9703811411.
- ADARSHA AUTOMOTIVES PVT LTD (1014-10-01),
 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA
 "X" ROAD, HYDERBAD 500005
 PH :8142326633.
- 2251. RKS MOTORS PVT. LTD. (1003-10-09), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072 PH.9010811131.
- 2252. SAI SERVICE PRIVATE LIMITED (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018 PH :7799360003.
- 2253. KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT NO. A-23 & A31/1, I.D.A, NACHARAM, HYDERABAD. - 500076 PH :91000 56490.
- 2254. GEM MOTORS (INDIA) PVT. LTD. (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA. - 500089 PH. 9912341524.
- 2255. ADARSHA AUTOMOTIVES PVT LTD (1014-10-02), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218 PH :9603296633.
- 2256. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE OB SQUARE, VILLAGE – GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032 PH : 9100009401.
- 2257. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081 PH : 779916666.
- 2258. KALYANI MOTORS PVT. LTD. (1018-10-02), MIS VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE – KARMANGHAT, MANDAL – SAROORNAGAR, DISTRICT – RANGA REDDY, HYDERABAD. - 500079 PH. 9100222377.
- 2259. ADARSHA AUTOMOTIVES PVT LTD (1019-10-01),
 H. NO. 2-4-3415. SURVEY NO. 34, SOGBOWLI
 (PILLER NO. 185 OF P.V. NARSIMHA RAO
 EXPRESSWAY), RAJENDBANAGAR,
 UPPERPALLY, ATTAPUR, RANGA REDDY,
 HYDERABAD, TELENGANA. 500048
 PH :9705-346633, 8297426633.

- 2260. THE MITHRA AGENCIES (1002-10-06), SURVEY NO.57, D.NO.8-2-108, BIRAMALGUDA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. - 500079 PH :8886621232
- 2261. VARUN MOTORS PVT. LTD. (4603-10-0M), KSN GARDENS, 5-162/6, BORABANDA MAIN ROAD, HYDERABAD. - 500018 PH:9885579623.
- 2262. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-03), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEDIMETLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA). - 500055 PH :7799784567.
- 2263. ADARSHA AUTOMOTIVES PVT LTD (1014-10-03), SURVEY NO. 220/A, AMBEDKAR ROAD, OPP HERITAGE FRESH, NEAR AMBAEDKAR STATUE, NEAR ALWAL, SECUNDERABAD. - 500 010
- PH : 9291859954.
 2264. KALYANI MOTORS PVT. LTD. (1018-10-03),
 SURVEY NO. 305, NIZAMPET, MANDAL QUTBULLAPUR, DIST.-RANGA REDDY,
 HYDERABAD. 500 072
 PH : 72079 33677
- 2265. THE MITHRA AGENCIES (1002-10-07), SURVEY NO, 12, 13, 148. 15, MEDIPALLY, GHATKESAR MANDAL, RANGA REDDY DISTRICT, HYDERABAD, TELANGANA 500098 PH:886687954.

IBRAHIMPATNAM

2266. PAVAN MOTORS PVT. LTD (CSF1-CSF-01), S.NO.123/E, MPP PATELGUDA, IBRAHIMPATNAM, RANGA REDDY - 501506 PH:8790144499.

JAGITIAL

2267. ADARSHA AUTOMOTIVES PVT LTD (N601-NU-04), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JACTIAL, - 505327 PH. 8886152222

JANGAON

2268. ADARSHA AUTOMOTIVES PVT LTD (KI01-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. -506167 PH :7796626633

KAMAREDDY

2269. VARUN MOTORS PVT. LTD. (KX01-KX-01). H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111 PH:9985557570 8142551166.

KARIMNAGAR

- 2270. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-01), H.NO. 8-6-313/1, HYDERABAD ROAD, BY-PASS JUNCTION, KARIMNAGAR -505001
- PH:8886600315.
- 2271. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-05), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. -505001
 - PH:8886152222.
- 2272. VARUN MOTORS PVT, LTD. (NE03-N6-01), BEARING NO. 1-81/3/10/2, SURVVEY NO. 221 & 222, REKURTHY VILLAGE, KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR MANDAL & DIST., TELANGANA. - 505 001 PH: 8886619373.
- 2273. VARUN MOTORS (N603-N6-2), SURVEY NO. 277,278/B, AREPALLY VILLAGE, TEEGALAGUTTAPALLI GRAM PANCHAYAT, KARIMNAGAR - 505001 PH :91549 03258.

KEESARA

 JAYABHERI AUTO (SEI1-SEI-01), H-NO 3-56/9/6A, SURVEY NO 5, KEESARA, MEDCHAL-MALKAJGIRI, TELANGANA - 501301 PH '0676076676

KHAMMAM

2275. MITHRA AUTO AGENCIES PVT LTD (2604-1G-02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003 PH :8886063527

KODAD

2276. PAVAN MOTORS PVT. LTD (BRP2-BRP-01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD, DISTRICT – NALGONDA, TELANGANA - 508206 PH :8790902114.

KOLLAPUR

2277. SRI JAYARAMA (SHC1-SHC-01), SURVEY NO 259/AA2, 259/E2, KOLLAPUR, NAGAR KURNOOL DISTRICT, TELANGANA - 509102 PH :9985880015.

KOTHAGUDEM

2278. VARUN MOTORS PVT. LTD. (2603-HF-04), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM - 507101 PH :9581494499.

MAHABUBABAD

2279. ADARSHA AUTOMOTIVES PVT LTD (CQS1-CQS-01), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD. - 506101 PH:9177746333, 7799700525.

MAHABUBNAGAR

2280. SRI JAYARAMA MOTORS PVT. LTD. (WP01-WP-01), PLOT NO.C1 & C2, INDUSTRIAL ESTATE, METTUGADA, MEHBOOBNAGAR -504001 PH :8096998846.

MAHESHWARAM

2281. ADARSHA AUTOMOTIVES PVT LTD (CQR1-CQR-01), (BEARING #5-187, SURVEY NO.:336/A1, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY -501359 PH :8142/36633, 9703162222

MANCHERIAL

2282. ADARSHA AUTOMOTIVES PVT LTD (N601-CM-03), BEHIND MAHINDRA TRACTORS SHOWROOM, BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208 PH :9886302292

MEDAK

2283. VARUN MOTORS PVT. LTD. (KF01-KF-01), SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK (MDL & TOWN) - 502110 PH:9154953337.

MEDCHAL

2284. AUTOFIN LIMITED (CID1-CID-01), H. NO. 11-27/1, SURVEY NO. 401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401 PH :8885040020

METAPALLY

2285. ADARSHA (BJF1-BJF-01), SURVEY NO. 40/U/2 CHOULAMADHI, METPALLY PIN CODE 505325 -505325 PH:8886092222.

MIRYALGUDA

2286. PAVAN MOTORS PVT. LTD (WR01-WR-01), SURVEY NO-940 8943, (OPPOSITE TO MINA ENGINEERING COLLEGE), NARKETPALLY ADDANKI BY-PASS ROAD, MIRYALAGUDA , NALGONDA DISTRICT, ANDHRA PRADESH -508207 PH 3701001349

MOINABAD

2287. GEM MOTORS (INDIA) PVT. LTD.
(CFM1-CFN-0), SURVEY NO. 70, PLOT NO. 4,
VILLAGE AND GRAM PANCHAYAT – HIMAYATH
NAGAR, MANDAL – MOINABAD, DISTRCT –
RANGA REDDY. - 500075
PH :991289128. 793994845.

NAGARKURNOOL

2288. SRI JAYARAMA MOTORS PVT. LTD. (EV01-EV-01), SURVEY NO.44/A AND 45/A, UYYALWADA VILLAGE, NAGARKURNOOL, TELANGANA - 509209 PH :8096990074.

NALGONDA

2289. PAVAN MOTORS PVT. LTD (AN01-AN-01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001 PH :8790902146.

NARAYANKHED

2290. VARUN MOTORS PVT. LTD. (CGI1-CGI-01), D. NO. 1-6-111/25/8/5/A/1, SY NO. 57/2, BHUMAL COLONY, GRAM PANCHAYAT & MANDAL -NARAYANKHED, DISTRICT – MEDAK, TELANGANA. - 502286 PH :9885/10555

NARAYANPET

2291. SRI JAYARAMA MOTORS PVT. LTD. (BPG1-BPG-01), SURVEY NO. 468/4, MAHABUBNAGAR ROAD, NARAYANPET TOWN, DIST.-MAHABUBNAGAR, STATE - TELANGANA. -509210 PH :8096997701, 7893177448.

NARSAPUR

2292. KALYANI MOTORS PVT. LTD. (SCX1-SCX-01), SURVEY NO 66, BLOCK NO-19,NARSAPUR, DISTRICT: MEDAK, TELANGANA. - 534275 PH: 9573179790.

NIRMAL

2293. ADARSHA AUTOMOTIVES PVT LTD (N601-AA-02), H. NO. 1-1-131, SHASTRINAGAR, MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106 PH :8886342222.

NIZAMABAD

2294. VARUN MOTORS PVT. LTD. (1H02-1H-01), PLOT NO. GP 1-514/1, PANIGARA BORGOAN,NIZAMABAD, TELANGANA - 503230 PH :8297849999, 9052080444.

PALWANCHA

2295. VARUN MOTORS PVT. LTD. (HF01-CSS-01), SURVEY NO.758 & 757, NEHRIU NAGAR, PALWANCHA (NEW POLANCHA) MANDAL & TOWN, BHADRADRI KOTHAGUDEM DISTT., TELANGANA. 507115 PH :9642225288.

PARGI

2296. VARUM MOTORS PVT. LTD. (CB01-CB0-01), HOUSE NO. 2-356 JANGAIAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL – PARGI, DISTRICT – RANGA REDDY. - 510501 PH: 988521055, 9885200000.

PARKAL

2297. ADARSHA (SEK1-SEK-01), SY.NO 946, H.NO 5-27, VIKAS NAGAR, PARKAL, WARANGAL. -506164 PH: 8886742222.

PEDAPALLY

2298. ADARSHA AUTOMOTIVES PVT LTD (GKN1-GKN-01), SURVEY NO 142, H NO 185, RANGAMPALLI VILLAGE, PEDDAPALLI , TELANGANA - 505172 PH:8886618155, 8886672222.

RAMAGUNDAM

2299. ADARSHA AUTOMOTIVES PVT LTD
(BGA1-BGA-01), 5-6-172 SURVEY NO. – 259/B,
MEDIPALLY SHIVAR, RAMAGUNDAM
MUNICIPALITY, DISTRICT – KARIM NAGAR,
ANDHRA PRADESH - 505209
PH: 3886144550.

RAMAYAMPET

2300. VARUN MOTORS PVT. LTD. (CDO1-CDO-01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT – MEDAK. - 502101 PH 9885208555. 9703803399.

SADHASHIVPET

2301. SAI SERVICE (SFG1-SFC-01), PLOT NO. 2, SY NO. 974, GURUNAGAR COLONY, OLD BOMBAY HIGHWAY ROAD, SADASHIVPET, SANGAREDDY DIST. 502291 - 502291 PH. 9966377888.

SANGAREDDY

2302. SAI SERVICE PRIVATE LIMITED (1011-OI-O5), H.NO.4-8-92/1/4/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH.7661811000.

SATUPALLI

2303. MITHRA AUTO AGENCIES PVT LTD (SHD1-SHD-01), SURVEY NO. 75 NEAR VIVEKANANDA STATUE, SATHUPALLI, KHAMMAM. - 507303 PH: 8886063508.

SECUNDERABAD

2304. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (K601-K6-01), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, -500015 PH :8885088080.

- 2305. AUTOFIN LIMITED (K606-K6-01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011 PH :8885040130
- 2306. VARUN MOTORS PVT. LTD. (4603-K6-0), 1-10-176/1, BEHIND VARUN TOWERS-I, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE. - 500016 PH -9885552452.
- 2307. RKS MOTORS PVT. LTD (K605-K6-01), PLOT NO. 207, TADBUND, SECUNDERABAD. 500003 PH -9010801004
- 2308. AUTOFIN LIMITED (K606-K6-02), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD. - 500090 PH :8885040126
- 2309. PAVAN MOTORS PVT. LTD (K608-K6-02), PLOT NO. 1-12, 749, 750, SURVEY NO. 7512, VENKATADRI NAGAR, NEW MIRJALGUDA, MALKAJGIRI, SECUNDERABAD, TELANGANA -500047 PH :9121293690.

SHAD NAGAR

2310. SRI JAYARAMA MOTORS (P) LTD. (WS01-WS-01), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH. - 500216 PH:8096996671.

SHAMIRPET

2311. RKS MOTOR PVT. LTD. (SDE1-SDE-01), SHED NO 2-242, MAJEEDPUR CROSS ROADS, SHAMIRPET, MEDCHAL-MALKAJGIRI, TELANGANA - 500078 PH :9848866618.

SHANKARPALLY

2312. SAI SERVICE PRIVATE LIMITED (CEX1-CEX-01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203 PH :9966377888, 9912899128, 9703811011.

SIDDIPET

2313. ADARSHA AUTOMOTIVES PVT LTD (CAL1-CAL-01), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA. - 502103 PH :09703716633, 9160746633.

SIRCILLA

2314. ADARSHA AUTOMOTIVES PVT LTD (BYW1-BYW-01), H. NO. 10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR ROAD, SIRCILLA, DISTRICT – KARIMNAGAR, TELANGANA -505301 PH :8886618155. 8142244131.

SURYAPET

2315. PAVAN MOTORS PVT. LTD (BLC1-BLC-01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213 PH :8790902545.

TALLADA

2316. MITHRA AUTO (SOU1-SOU-01), SURVEY NO 890/A, D.NO 7-8, NARAYANAPURAM, TALLADA, TELANGANA - 507167 PH :8886063527.

TANDUR

2317. VARUN MOTORS PVT. LTD. (CFR1-CFR-01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA. - 501141
PH 3886619370

THORRUR

2318. ADARSHA AUTOMOTIVES PVT LTD
(BYV1-BYV-01), SURVEY NO.1 TO 5, BEARING
M. NO.4-153/1, VILLAGE & MANDAL THORRUR
DISTT. WARANGAL - 506163
PH-9059438007. 7799790527.

TOOPRAN

2319. ADARSHA (SEJ1-SEJ-1), PLOT NO 7&8, SY NO 185,184,179U, NAGULAPALLY VILLAGE, TOOPRAN MANDAL, TELANGANA STATE: TELANGANA CITY: TOOPRAN PIN: 502334 CITY CATEGO - 502334 PH: 9291859954.

VIKARABAD

2320. GEM MOTORS (INDIA) PVT. LTD. (BYM1-BYM-01), SHOP NO. 3-2-93/2, VILLAGE – YENNAPALLY, VIKARABAD MUNCIPALITY, VIKARABAD, DISTRICT – RANGA REDDY, TELANGANA. - 501101 PH :9912349840.

WANAPARTHY

2321. SRI JAYARAMA MOTORS (P) LTD. (WQ01-WQ-01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103 PH:8096903879.

WARANGAL

- 2322. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007 PH:8886132222.
- 2323. ADARSHA AUTOMOTIVES PYT LTD (D502-D5-03), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL 506001 PH :8886492222.

- 2324. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D593-D5-01), SURVEY NO. 16, 16/1A & 16/1B, OPPOSITE KAKATIYA UNIVERSITY GATE-2, LASHKERSINGARAM REVENUE VILLAGE, HANAMKONDA MANDAL, WARANGAL. 506 001 PH : 8688828010.
- 2325. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D630-36-02), PLOT NUMBER 9.10,11 & 13/A, SURVEY NUMBER 148/A&B OF BHEEMRAM VILLAGE, WARANGAL. - 506015 PH :8688828015.

ZAHIRABAD

2326. SAI SERVICE PRIVATE LIMITED (BAT1-BAT-01), PLOT NO-5,NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD,MEDAK (DIST),ANDHRA PRADESH - 502220 PH -7660005206

TELENGANA

KAGHAZNAGAR

2327. ADARSHA AUTOMOTIVES (SCN1-SCN-01), H.NO :1-61/3,BORIGAON,KAGHAZNAGAR,KOMARAMB HEEM - 504296 PH :8886092222.

PALAKURTHY

2328. WIN MOTORS (SCY1-SCY-01), SURVEY NO 537/B,MAIN RAOD, PALAKURTHY,JANGAON DISTRICTTELANGANA. - 506317 PH :8688838005.

TRIPURA

AGARTALA

- 2329. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003 PH :9862149275.
- 2330. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA. - 799003 PH -70057 71216
- JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008 PH: 97746 16831.

AMARPUR

2332. JAIN UDYOG (CVR1-CVR-01), NEAR MOTOR STAND, AMARPUR, TRIPURA - 799101 PH:97748 45751.

AMBASSA

 JAIN UDYOG (CDT1-CDT-01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289 PH :70052 88437.

DHARMANAGAR

2334. JAIN UDYOG (6901-RN-03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - 799250 PH :97747 93164.

UDAIPUR

2335. JAIN UDYOG (YU01-YU-01), DHWAJANAGAR INDUSTRIAL ESTATE, UDAIPUR, TRIPURA (SOUTH) - 799116 PH: 9774020152.

UP

BULANDSHAHAR

2336. SK UNIVERSE (M502-M5-02), KHASRA NO.2261, NEAR T POINT, BYPASS SIKARPUR ROAD ,BULANDSHAHR - 203001 PH:7055118430.

DIBYAPUR

2337. KULDEEP MOTORS (SLA1-SLA-01), AURAIYYA ROAD, DIBIYAPUR - 206244 PH :9235258425.

MEERUT

2338. TR SAWHNEY (4808-48-01), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002 PH :9999163125.

MOOSANAGAR

2339. MY CAR (SLP1-SLP-01), VILL GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH. - 209208 PH: 97929 70005.

UTTAR PRADESH

AGRA

- 2340. MADHUSUDAN MOTORS PVT LTD (6603-66-02), GANESH GANJ, PRATAPPURA, AGRA - 282001 PH :9837097887.
- 2341. MADHUSUDAN MOTORS PVT LTD (6603-66-01), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - 282005 PH :531102-05.
- 2342. MADHUSUDAN MOTORS PVT LTD (6603-66-03), 6-A , VIBHAV INDUSTRIAL STATE, AGRA -282007 PH :3299221.
- 2343. MADHUSUDAN MOTORS PVT LTD (6603-66-04), 26/253, SULTAN GANJ KI PULIA, MAUZA LASKARPUR, AGRA - 283203 PH: 9837097894.
- 2344. PREM MOTORS PVT. LTD. (6605-66-01).
 KHASRA NO.382,386,387,388, VILLAGE
 ARTHONI, DELHI-AGRA HIGHWAY, NH-2, AGRA,
 UTTAR PRADESH 282007
 PH. 9690010839.
- 2345. KTL PVT. LTD. (6606-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004 PH :8449715033.8449715099.

- 2346. PREM MOTORS PVT. LTD. (6607-66-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002 PH -9600010799
- 2347. KTL PVT. LTD. (6606-66-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001 PH :8449715090
- 2348. MERAK VEHICLES (6609-66-01), KHASRA NO 65 & 74, MAUZA MOHAMMADPUR, AGRA-DELHI ROAD (NH-2), SIKANDRA, AGRA UTTAR PRADESH-282007. - 282007 PH :9690486139.

AKBARPUR

- 2349. KTL PVT. LTD. (2801-LH-03), KANPUR ROAD, AKBARPUR - 209206 PH:7408409348.
- 2350. SMARTWHEELS PVT. LTD. (7201-LH-08), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOBPUR, AKBARPUR, DIST-AMBEDKAR NAGAR (U.P.) - 224122 PH. 7705803248.

ALIGARH

- 2351. DEV MOTORS (P) LTD (B601-B6-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001 PH :521771
- 2352. DEV MOTORS (B601-B6-04), PLOT NO 97, VILLAGE SIKANDERPUR, BHUKRAVALI, GT ROAD BYE PASS, ALIGARH - 202002 PH :7351345577.

ALLAHABAD

2353. AMITDEEP MOTORS (2901-29-01), 26 SULEM SARAI, G. T ROAD, ALLAHABAD - 211001 PH :8948122749, 90261111339, 7738555692, 9839890333, 9936413399.

AMETHI

2354. KTL AUTOMOBILE PVT. LTD. (BBB2-BBB-01), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR -227409 PH. 7379557377.

AMROHA

2355. AKANKSHA AUTOMOBILES PVT. LTD. (AO01-AO-01), AMROHA – JOYA ROAD, NEAR PUNJAB NATIONAL BANK, AMROHA, UTTAR PRADESH, PIN CODE: 244221 - 244221 PH: 7895400003.

ANPARA

2356. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (NJ02-NJ-01), KAHUWA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT – SONEBHADRA. - 232101 PH :7052547903, 9721905002, 9151154306, 9450544961.

AONLA

2357. KAVISHA MOTORS PVT LTD (CVI1-CVI-01), COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR MUNICIPALITY OFFICE, TEHSIL - AONLA. DIST., BAREILLY, STATE- UTTAR PRADESH. - 243301 PH :07895890222. 07895890303.

AURAI

2358. VARANASI MOTORS PVT LTD (CBM-1-CBM-01), KHATA / KHATAUNI NO. 00045, GT ROAD (EHAK BHAURA), OPP. CHINI MILL,VILLAGE & TEHSIL AURAI, DISTT: BHADHOI, UTTARPRADESH, PIN 2221 301 - 2221301

PH:9838360662, 7617002786.

AURAIYA

2359. KULDEEP MOTORS (QJ01-QJ-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241 PH :9235358444.

AZAMGARH

2360. DEEP MOTORS (K501-K5-01), HARBANSHPUR NARAULI, AZAMGARH - 276001 PH :9838072905.

BABRALA

 AKANKSHA AUTOMOBILES PVT. LTD. (SJU1-SJU-01), CHANDAUSI ROAD, BABRALA, DISTRICT SAMBHAL, UTTAR PRADESH. - 243751 PH :9837649177.

BACHRAWAN

2362. KTL AUTOMOBILE PVT. LTD. (CGX2-CGX-01), VISHNUPUR, PHARWAN, RAEBARELI-LUCKNOW ROAD, DIST. -RAEBARELI - 229301 PH. 99184512222.

BAH

2363. KTL PVT. LTD. (CHI1-CHI-01), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH. - 283104 PH:7055707169, 8449715033.

BAHERI

2364. KAVISHA MOTORS PVT LTD (BSB1-BSB-01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMILIA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201 PH: 8756000000. 7607696666.

BAHRAICH

2365. ANAND MOTORS AGENCIES LTD (1301-5Z-05), LUCKNOW ROAD,BEHRAICH,UTTAR PRADESH -271801 PH :9519596080.

BALLI

2366. DEEP MOTORS (K501-BA-03), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001 PH:9838072917.

BALRAMPUR

2367. ANAND MOTORS AGENCIES LTD (XB01-XB-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201 PH: 6307995976.

BANDA

- 2368. MY CAR PVT. LTD. (2803-KV-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001 PH :9792971223.
- 2369. SUMITRA DS MOTORS (SPB1-01-SPB-01), PURANPUR ROAD, BANDA, TEHSIL BANDA, THANA BANDA, DISTT. SHAHJAHANPUR – U.P. -242042 PH. 9334648074.

BANSI

2370. ARBIT AUTOMOBILES PVT LTD (GMD1-GMD-01), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA: KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT: SIDARTHNAGAR - 272153 PH:89534 12821.

BANTHRA

 MEGA MOTORS (SGQ1-SGQ-01), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401 PH: 9919101456.

BARABANKI

2372. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-6A-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001 PH:9838075960.

BARAUT

 TANYA AUTOMOBILES (LL02-LL-01), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611 PH:7055300019.

BAREILLY

- 2374. CORAL MOTORS (P) LTD. (5602-56-01), STATION ROAD, BAREILLY - 243001 PH :559191
- CORAL MOTORS (P) LTD. (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002 PH :0581-2554922.
- 2376. KAVISHA MOTORS PVT LTD (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502 PH: 8756000000, 7607696666.
- 2377. ETERNITY MOTORS LLP (5603-56-01), KHASRA NO. 803/2, PILIBHIT BYPASS ROAD, PEER BAHORA, OPP, FUN CITY, BAREILLY, UTTAR PRADESH. 243001 PH. 9105555746.

BASTI

 SMARTWHEELS PVT. LTD. (7201-6B-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002 PH :286294.

BEHTA

2379. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (GMI1-GMI-01), KHASRA NO. 254, OPPOSITE SANGAM MOTORS, KURSI ROAD, BEHTA - 226026 PH :6389901514.

BHADOHI

2380. VARANASI MOTORS PVT. LTD. (8402-TT-02), VARNASI ROAD, BHADOHI - 221401 PH :9838360662.

BHINGA

2381. ANAND MOTORS (BVG1-BVG-01), PATNAKHARGAURA, BHINGA, SHRAVASTI -271831 PH: 9415013059.

BHOJPUR

2382. MOTORCRAFT SALES INDIA PVT LTD (SDQ1-SDQ-01), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL – MODINAGAR, DISTRICT – GHAZIABAD. - 201204 PH: 9410038456.

BIJNOR

2383. SHAKUMBARI AUTOMOBILES (P) LTD (6001-60-01), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELHI-BUNOR HIGHWAY, BUNOR, DIST. – BUNOR, UTTAR PRADESH. - 246701 PH :8630881409.

BILARI

2384. AKANKSHA AUTOMOBILES PVT. LTD. (SDM1-SDM-01), 2KM-BILARI NH 509, NEAR SBS SCHOOL, BILARI, MORADABAD 244001 - 244001 PH:9927459707.

BILASPUR

2385. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-BCN-01), NH-87, OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR. - 244921 PH: 9917745000.

BISALPUR

2386. CORAL MOTORS PVT LTD (CXB1-CXB-01), KHASRA NO. 668, VILLAGE: BISALPUR, DISTT: PILIBHIT, UTTAR PRADESH - 262201 PH:9837891846.

BISWAN

2387. CONCEPT CARS LIMITED (SEW1-SEW-01), BILJHARIYA, OPPOSITE-555, BRICK FIELD, BISWAN - 261201 - 261201 PH :7607696666.

BUDAUN

2388. CORAL MOTORS (P) LTD. (5602-NF-04), PLOT NO.-72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103 PH-9837801846

BULANDSHAHR

2389. SK UNIVERSE (M502-M5-01), KHASRA NO 561, BHOOR, OPP PANDIT PETROL PUMP, BULANSHAHR - 203001 PH: 9219694600

CHAKIA

2390. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (CJH1-CJH-01), KATHSILA NAHER, NEAR SAINT JOHN'S SCHOOL CHAKIA, DISTRICT – CHANDAULI. - 232101 PH :9450544961.

CHANDAUSI

 AKANKSHA AUTOMOBILES PVT. LTD. (XA01-XA-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412 PH:7247800008.

CHAURI CHAURA

2392. ARBIT AUTOMOBILES (SIR1-SIR-01), ARAZI NO 561 DOMARI KHURD, CHAURI CHAURA, GORAKHPUR - 273201 PH :8953412821.

CHIBRAMAU

2393. KTL PVT. LTD. (BMY1-BMY-01), PLOT GHATA NO. 70, MAUJA - LALAKPUR, VILLAGE -CHHIBRAMAU, DIST.-KANNAUJ, UTTAR PRADES. - 209721 PH -740R409200. 9414113666

CHITRASENPUR

2394. AGR (SMM-SMM-01), KHASRA NO-194, CHITRASENPUR, KACHHUWA ROAD, VARANASI, PIN -221313 - 221313 PH :9889803355.

ΠΑΙ ΜΑΙΙ

2395. KTL AUTOMOBIELS (SGZ1-SGZ-01), DALMAU ROAD, OPPOSITE BHAGIRATHI GUEST HOUSE - 229203

PH :9918451222. DANKAUR

2396. MOTORCRAFT SALES (HG01-HG-01), OPP. SHRI DRONACHARYA DEGREE COLLEGE, DANKAUR, DIST. - GAUTAM BUDH NAGAR, HARYANA. -203201 PH. 9810289355.

DEOBAND

2397. ATELIER AUTOMOBILES (XK02-XK-01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001 PH:7500220011.

DEORIA

2398. SMARTWHEELS PVT. LTD. (M601-M6-01), PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST. -DEORIA, UTTAR PRADESH. - 274001 PH:7705800602.

DHAMPUR

2399. SHAKUMBARI AUTOMOBILES (P) LTD (CPQ1-CPQ-01), KHASRA NO. 205, OPPOSITE, UHSA SMARAK SCHOOL, MORADABAD ROAD, TEHSIL - DHAMPUR, MOJA - ALEHPUR, DIST. -BIJNOR, UTTAR PRADESH. - 246761 PH 18630881458

DOMARIAGANJ

2400. SMARTWHEELS (SMW1-SMW-01), VILL & POST - CHAUKHARA, DOMARIAGANJ, DISTT – SIDDHARTH NAGAR - 272193 PH :7705800602

ETAH

2401. MADHUSUDAN VEHICLES PRIVATE LTD. (XG01-XG-01), 472 ASROLI, GT ROAD, ETAH -207125 PH:9837097894.

ETAWAH

2402. KULDEEP MOTORS (6E01-6E-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001 PH :257029.

FAIZABAD

2403. SMARTWHEELS PVT. LTD. (7201-F5-02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001 PH :7705803245

FARIDPUR

2404. KAVISHA MOTORS PVT LTD (CEM1-CEM-01), GATE NO. 216, KASBA SARAI, TEHSIL – FARIDPUR, DISTRICT – BAREILLY, UTTAR PRADESH. - 243503 PH-07895980222-07895980300

FARRUKHABAD

2405. MY CAR PVT. LTD. (2803-TS-04), NEKPUR KALAN, FARRUKHABAD - 209625 PH :9792970093.

FATEHABAD

2406. KTL PVT. LTD. (BLQ1-BLQ-01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT – AGRA, UTTAR PRADESH - 283111 PH :9754979019.

FATEHPUR

2407. KTL PVT. LTD. (2801-TM-04), NH-2, OPP. RTO OFFICE, KANPUR ROAD, FATEHPUR - 212601 PH :7408409383, 7408400000.

FEROZABAD

2408. MADHUSUDAN VEHICLES PRIVATE LTD. (DF01-DF-01), 746, ALI NAGAR KEJRA, NEAR RAJA KA TAL CROSSING, NH 2, FEROZABAD -283203 PH 9690003077.

GAJRAULA

2409. AKANKSHA AUTOMOBILES PVT. LTD. (XD01-XD-01), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA - 244235 PH :9690518865.

GHAZIABAD

2410. ROHAN MOTORS LTD. (5904-59-01), 432 MUKAND NACAR, G.T.ROAD, GHAZIABAD -201001 PH:9971466644 011-204170810, +911204170816, +911204170826, +911204170819.

2411. REGENT AUTOLINKS (P) LTD (5902-59-01), A-109 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001 PH

PH::0120-4641900,904,911,8744042111,9999740464,9711127008.

2412. ROHAN MOTORS (5904-59-02), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD -201102

PH:09310404354, 9971466644.

2413. T.R. SAWINIEY MOTORS PVT LTD (5905-59-01), PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL AREA, MOHAN NAGAR, GHAZIABAD, DISTT. -GHAZIABAD, U.P. - 201007 PH :9999052148: 9999130612.

2414. SNV AUTO (5906-59-01), PLOT NO. 15, SOUTH SIDE GT ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH - 201001 - 201001 PH :9650324325.

GHAZIPUR

2415. AGR AUTOMOBILES PVT. LTD. (8403-KT-03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001 PH :2361136.

GHIROR

2416. KULDEEP MOTORS (CVA1-CVA-01), KARHAL ROAD, TEHSIL – GHIROR, DISTRICT – MAINPURI, UTTAR PRADESH. - 205121 PH: 9536755555.

GONDA

2417. SMARTWHEELS PVT. LTD. (7201-FZ-07), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH ROAD, GONDA, UTTAR PRADESH, - 271001 PH:7705803261.

GORAKHPUR

2418. SMARTWHEELS PVT. LTD. (7201-72-01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012 PH :7705803152.

2419. SMARTWHEELS PVT. LTD. (7201-72-06), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012 PH: 7705803109.

2420. SMARTWHEELS PVT. LTD. (7202-72-01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. -273209

PH:9235401004.

2421. ARBIT AUTOMOBILES PVT LTD (7203-72-01), ARAZI NO. Ğel'111 Mİ & Ğel'21'MI, ĞE Mİ, MAUIZA -MAHEWA MUSTAKIL, NEAR FALMANDI CHOWK, TRANSPORT NAĞAR, GORAKHPUR, UTTAR PRADESH. - 273016 PH. 3955-3412821.

GOSAIGANJ

2422. BRIGHT 4 WHEEL SALES PVT. LTD. (CWK1-CWK-0'1), KHASRA NO. 24, VILLAGE -SHEKHANPUR, PARGANA MOHANLALGANJ, TEHSIL - MOHANLALGANJ, DIST.-LUCKNOW, UTTAR PRADESH. - 226501 PH: 9838075929.

GREATER NOIDA

2423. ROHAN MOTORS LTD. (T201-T2-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH - 201306 PH :4513739, 4513736, 4513734, 4513700/9958506111.

HAIDERGARH

2424. BRIGHT 4 WHEEL SALES PVT. LTD. (CVU1-CVU-01), PROPERTY SHOP NO. 5, 6 AND 7, VILLAGE - GOTAUNA, PARGANA -HAIDERGARH, TEHSIL - HAIDERGARH, DISTRICT - BARABANKI. - 225124 PH: 9935275786, 9838075929.

HAMIRPUR

2425. KTL PVT. LTD. (QH01-QH-01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301 PH :7704907587.

HAPUR

2426. ROHAN MOTORS (6G01-6G-01), DELHI-HAPUR ROAD, OPPOSITE SSV INTERCOLLEGE,HAPUR, DISTRICT- GHAZIABAD - 245101 PH:8476853930, 9536129292.

HARDOI

2427. CONCEPT CARS PVT. LTD. (QE01-QE-01), NANAK GANJ, LUCKNOW ROAD, HARDOI -241001 PH :8756000000. 7607696666.

2428. CONCEPT CARS PVT. LTD. (OE01-QE-04), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001 PH. 7607696668. 8756000000.

HATHRAS

2429. DEV MOTORS (P) LTD (B601-LP-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS -204101 PH:9917435500.

IGLAS

2430. DEV MOTORS (SOD1-01-SOD-01), MATHURA ROAD, IGLAS, DISTRICT ALIGARH. - 202124 PH: 9837549000.

ITUNJA

2431. BRIGHT 4 WHEEL (SJD1-01-SJD-01), 90M GATA GRAM MANDOLI, ITTAUNJA, LUCKNOW, UTTAR PRADESH-226203. - 226203 PH 7011482503

JAGDISHPUR

2432. BRIGHT 4 WHEEL SALES PVT. LTD. (XC01-XC-01), KATHORA, MUSA-FIRKHANA, LUCKNOW SULTANPUR ROAD, JAGDISPUR-UTTAR PRADESH - 227817 PH :9721526961 , 9628374814.

JAGNER

2433. MERAK VEHICLES (SPJ1-SPJ-01), SHRI RAM GARDEN, AGRA ROAD, NEAR RADHA KRISHNA MANDHIR, JAGNER, UTTAR PRADESH, 283115 -283115 PH - 7896500400

JALALABAD

2434. SUMITRA DS MOTORS PVT. LTD. (GJX1-GJX-01), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSILL: JALALBAD, DIST. SHAHJHANPUR - 242221 PH :9336408074 9897019488.

JAUNPUR

2435. KIRTIKUNJ AUTOMOBILES PVT. LTD. (6H01-6H-01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001 PH: 9554951026.

JHANS

2436. SURI AUTOMOBILES (6001-60-01), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN – 284002. -284002 PH :8881811383

2437. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (6002-60-01), PLOT NO 486, 487, 488, 489 AND 477 (PATTA NUMBERS), MAUZA - KOCCHABHANWAR, BLOCK -BADAGAON, TEHSIL AND DISTT - JHANSI. -284128 PH :9889440999.

KANNAUJ

2438. KTL PVT. LTD. (2801-EM-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725 PH :7408409305.

KANPUR

- 2439. KTL PVT. LTD. (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002 PH '7408409341
- 2440. MY CAR PVT. LTD. (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022 PH :9792970086
- 2441. MY CAR PVT. LTD. (2803-28-01), 84/54 C, JARIB CHOWKI ,G.T. ROAD, KANPUR - 208003 PH :9792970511
- 2442. KTL PVT. LTD. (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007 PH: 7408409253
- 2443. S B CARS PVT.LTD (2806-28-01), 77B , FAZALGANZ, KANPUR - 208012 PH :2241660.
- 2444. MY CAR PVT. LTD. (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004 PH:9792970081.
- 2445. S B CARS PVT.LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017 PH :740852552.
- 2446. KULDEEP MOTORS KANPUR LLP. (2808-28-01), BUKHAND NO. 756, 756A, 757, BLOCK: W, YOJNA: 2, JUHI KALAN, BARRA BYE PASS, KANPUR. - 208017 PH 9076608701
- 2447. KTL PVT. LTD. (2801-28-07), ARAZI NO. 1110, VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA NAGAR, KANPUR, UTTAR PRADESH - 208 026 PH:7408409379.

KARWI

2448. MY CAR PVT. LTD. (CBU1-CBU-01), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 210205 PH :9839029868, 9792970391.

KASGAN

2449. MADHUSUDAN VEHICLES PRIVATE LTD. (BVX1-BVX-01), ARAJI NO. 646, SAURO ROAD, KASGANJ, DISTRICT – KASGANJ, UTTAR PRADESH. - 207123 PH 9837097863 , 9690003034.

KASIA

2450. ARBIT AUTOMOBILES PVT LTD (GMJ1-GMJ-01), MAUJA BHAISAHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206 PH:8953412821.

KATRA

2451. SUMITRA DS (SHY1-SHY-01), GRAM: SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL - TILHAR, SHAHJAHANPUR - 242301 PH: 9336408074.

KAYAMGANJ

2452. MY CAR PVT. LTD. (CBV1-CBV-01), BYE PASS ROAD, NEAR KHAN PETROL PUMP, VILLAGE: KAYAMGANJ, DISTT: FARUKHABAD - 209502 PH: 9839029868, 9792970391.

KHAIR

2453. DEV MOTORS (SHQ1-SHQ-01), PLOT 117, ALIGARH PALWAL ROAD, VILLAGE CHAMAN NAGARIYA, KHAIR - 202138 PH :7351345577

KHANDAULI

2454. MADHUSUDAN MOTORS PVT LTD (BVV1-BVV-01), KHASRA NO. 97, AGRA-SADABAD, HATHRAS ROAD, OPP. HDFC BANK, VILL-KHANDAULI, TEHSIL ETHMADPUR, DIST. AGRA, UTTAR PRADESH. - 283126 PH: 9837097863, 980003034.

KHUTAF

2455. SUMITRA DS MOTORS PVT LTD (CIO1-CIO-01), VILLAGE – NARAINPUR, VIKRAMPUR GOLA ROAD, KHUTAR, DISTRICT – SHAHJAHANPUR, UTTAR PRADESH. - 242405 PH :9336408074.

KIRAOLI

2456. PREM MOTORS PVT. LTD. (BJZ1-BJZ-01). GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA – JAIPUR HIGHWAY, KIRAWALI, DISTRICT – AGRA, UTTAR PRADESH. - 283122 PH :9690010799.

KOSI

2457. UMA MOTORS PVT. LTD. (CPV1-CPV-01), KHASRA NO. 245, CITY - KOSI, DIST.-MATHURA. - 281004 PH :9997683333. 9997511006.

KUBERPUR

2458. KTL PVT. LTD. (6606-CRU-04), KHASRA NO.248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006 PH: 8449715099.

KUNDA

2459. SARASWATI MOTORS (CBF2-CBF-01), ALLAHABAD-LUCKNOW HIGHWAY, KUNDA, DISTRICT PRATAPGARH. - 230204 PH:8090854005.

LAKHIMPUR

2460. SUMITRA DS MOTORS PVT LTD (W201-M3-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001 PH :7522888333, 9415770000. 2461. SUMITRA DS (M301-M3-01), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE -BHARDSARIYA, KHERI, LAKHIMPUR - 262702 PH.:7522888333, 9415770000.

LALGANJ

2462. KTL AUTOMOBILE PVT. LTD. (CSL2-CSL-01), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206 PH: 9918451222.

LALITPUR

2463. SURI AUTOMOBILES (6001-6J-03), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH :9451496015.

LUCKNOW

- 2464. ANAND MOTORS AGENCIES LTD (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105 PH :7080000462.
- 2465. KTL AUTOMOBILE PVT. LTD. (1311-13-01), MATIYARI CHAURAHA, CHINNHAT, FAIZABAD ROAD, LUCKNOW - 227105 PH:7408411453.
- 2466. ANAND MOTORS AGENCIES LTD (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW -226016 PH :3098257. 7080000463.
- 2467. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-01), 11/CP- 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022 PH : 2739501
- 2468. ONE UP MOTORS INDIA PVT. LTD. (1306-13-01), C-16A,TRANSPORT NAGAR,KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012 PH:9918100801.
- 2469. KTL AUTOMOBILE PVT. LTD. (1311-13-02), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTRA PRADESH - 226016 PH:7408411478.
- 2470. KTL AUTOMOBILE PVT. LTD. (1311-13-03). BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005 PH. 9918451222.
- 2471. ANAND MOTORS AGENCIES LTD (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW -226024 PH :4103406/407/408. 7080000464.
- 2472. ONE UP MOTORS INDIA PVT. LTD. (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH :9918500451
- 2473. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH:9838075960.

- 2474. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-II-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020 PH. 7317049000.
- 2475. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW. - 226001 PH:8756000000, 7607696666.
- 2476. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-13-01), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW. -226 010
- PH:9935096417, 7054631666.
- 2477. KTL AUTOMOBILE PVT. LTD. (1311-13-07), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. -226008 PH. 7800007376.
- 2478. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-06), KHASRA NO. 418, MISHRAPUR PARGANA MAHONA, KURSI ROAD, LUCKNOW. -226022 PH. 9935275786.
- 2479. ONE UP MOTORS INDIA PVT. LTD. (1314-13-01), KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJJABCANJ, HARDOI ROAD, LUCKNOW. - 226003 PH :9821026545, 7600005200.
- 2480. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-13-02), KHASRA NO. 614, VILLAGE: BHADRUKH, VIP CANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHBIL: SAROJNI NAGAR, LUCKNOW, USAR PRADESH 226002 - 226002 PH: 6388901514.

MADHOGANJ

2481. CONCEPT CARS PVT. LTD. (BHI1-BHI-01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241001 PH :220016. 220064. 7607699666.

MAHARAJGANJ

- 2482. SMARTWHEELS PVT. LTD. (EI01-EI-01), NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303 PH :7705800602, 7705803109.
- 2483. KTL AUTOMOBILE PVT. LTD. (CSM2-CSM-01), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL – MAHARAJGANG, DISTRICT – RAIBAREILLY, UTTAR PRADESH. - 229306 PH. 99184512222.

MAHMUDABAD

2484. CONCEPT CARS PVT. LTD. (AAN1-AAN-01), IN FRONT OF POWER HOUSE, SIDAULI ROAD, MAHMOODABAD (U.P.) - 261203 PH:760769666, 8756000000.

MAHOBA

- 2485. SURI AUTOMOBILES (6001-RM-02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH, - 284001 PH :244344, 9451496015.
- 2486. VELOCITY MOTORS (RM02-RM-01), BAJRANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA -210427 PH :9560998709.

MAHOLI

2487. CONCEPT CARS PVT. LTD. (CWS1-CWS-01), MUSKAN TRACTORS, NEAR MELA MAIDAN, SHAHJHANPUR ROAD, MAHSUNIYAGANJ, MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. -261141 PH.:7607696666.

MAHRONI

2488. SURI AUTOMOBILES (CGN1-CGN-01), LALITPUR ROAD, MEHRONI, DISTRICT – LALITPUR, UTTAR PRADESH. - 384405 PH:7705000558, 8881811383.

MAINPURI

2489. KULDEEP MOTORS (6E01-SG-02), SKP-4A, MAINPURI - 205001 PH :9235258444.

MALIHABAD

2490. ONE UP MOTORS INDIA PVT. LTD. (BOD1-BOD-01), KHASRA NO. 326/1 AND 327, VILLAGE PARGANA, TEHSIL – MALIHABAD, DISTRICT – LUCKNOW, UTTAR PRADESH. -227111 PH :9918100781.

MANDURI

2491. DEEP MOTORS (K501-K5-04), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. - 276138 PH: 09838072902.

MATHURA

2492. UMA MOTORS PVT. LTD. (H801-H8-01), 68, MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004 PH :2463043/ 6290700.

ΜΔΤΙ

2493. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (SCG1-SCG-01), GATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE- MATI, PARGANA-DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225 003 PH 16388901514.

MAURANIPUR

2494. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (GJJ1-GJJ-01), BASERA CITY, MAURANIPUR- GARUTHA ROAD, MAURANIPUR, DISTT: JHANSI, UTTAR PRADESH - 284204 PH :3299202863.

MAWANA

2495. RADHA GOVIND AUTOMOBILES PVT LTD (CWZ1-CWZ-01), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401 PH :9012575727.

MEERUT

- 2496. TANYA AUTOMOBILES PVT. LTD. (4802-48-01), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001 PH :9837077003
- 2497. TANYA AUTOMOBILES PVT. LTD. (4802-48-03), 90, NAUCHANDI GROUND, GARH ROAD, MEERUT - 250001 PH:9837077004.
- 2498. RADHA GOVIND AUTOMOBILES PVT. LTD. (4807-48-01), VILLAGE – BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002 PH 9821217610
- 2499. TANYA AUTOMOBILES PVT. LTD. (4802-48-04), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 1/17, VILLAGE - ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001 PH. 7900201515.

MIRZAPUR

2500. STAR CARS (6K02-6K-01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001 PH :7052547903, 9721905002, 9151154306, 9450544961.

MISHRIKH

 CONCEPT CAR (SKJ1-SKJ-01), NEAR ARYAVART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P, PINCODE: 261401 - 261401 PH:7607699666.

MODINAGAR

2502. MOTORCRAFT SALES PVT. LTD. (5903-M7-02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204 PH:09557338222 & 07042427140.

MOHANLAL GANJ

2503. BRIGHT 4 WHEEL SALES PVT. LTD. (BWU1-BWU-01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANI, LUCKNOW DISTT., UTTAR PRADESH - 227305 PH : 7571905966.

MORADABAD

- 2504. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001 PH :7247800008
- 2505. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-03), 5TH KM DELHI ROAD, MORADABAD - 244001 PH :7895600007.
- 2506. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-04), KHASRA NO. 569-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001 PH. 7895500007

MUZAFFARNAGAR

2507. RADHA GOVIND (H903-H9-01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001 PH :9760092009.

NAJIBABAD

2508. SHAKUMBARI AUTOMOBILES (P) LTD (CPS1-CPS-01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246 701 PH :9045815209.

NAUGARH

2509. SMARTWHEELS PVT. LTD. (QG01-QG-01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHNAGAR - 272205 PH : 7705803129.

NAUTANWA

2510. SMARTWHEELS PVT LTD (SDW1-SDW-01), OPP. RAJIV GANDHI DEGREE COLLEGE, BYPASS ROAD, NAUTANWA, DISTT – MAHARAJGANJ -273164 PH.:77058 00602.

NAWABGANJ

2511. KANISHA MOTORS PVT LTD (CHT1-CHT-01), VILLAGE – EIDH JAGIR NEAR GURUDWARA AT NH-74, TEHSIL – NAWABGANJ, DISTRICT – BAREILLY - 262406 PH :07895980222; 07895980300.

NIGOHA

2512. BRIGHT 4 WHEELS (SGV1-SGV-01), GATA NO 146, VILL NIGOHA, TEHSIL MOHANLALGANJ, LUCKNOW - 226302 PH :7011482503.

NOIDA

- 2513. ROHAN MOTORS LTD. (A102-A1-01), C-8/9, SECTOR - I, NOIDA - 201301 PH :4071900, 4071903, 4071931, 4071932, 4071209, 4071949/9582210152.
- ROHAN MOTORS LTD. (A102-A1-02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301 PH:4071900, 209.31.32/9582210152.

- 2515. FAIR DEAL PREMIUM WHEELS PVT.LTD. (A108-A1-01), D-39, SEC-10, NOIDA - 201301 PH :08448296694 & 09654326008.
- 2516. VIPUL MOTORS PVT. LTD. (A101-A1-02), B-124 & B-125, SECTOR – 5, NOIDA, UTTAR PRADESH -201301 PH '4603100/28/33/6527835888.
- VIPUL MOTORS PVT. LTD. (A106-A1-01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301
 PH :4758600/01/02/8448589759.
- 2518. MOTORCRAFT SALES PVT. LTD. (5903-A1-04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) -201305 PH: 09818532222 & 09971733233.
- 2519. MOTORCRAFT SALES (5903-A1-05), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST ,GB NAGAR , UP - 201306 PH :8826312222.

ORAI

2520. S B CARS PVT.LTD (2806-LU-02), KANPUR ROAD, ORAI - 285001 PH :9307219303.

PADRONA

2521. SMARTWHEELS PVT. LTD. (BGJJ-BGJ-01), AARJI NO. 37 & 38, MAUJA - BELLWA MIGA TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL - PADRAUNA, DIST.-KUSHINAGAR, UTTAR PRADESH. - 274304 PH :7705803259.

PANWARI

2522. SURI AUTOMOBILES (SLC1-SLC-01), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBA. - 210429 PH :9452287890

PAPHUNDA

2523. TANYA AUTOMOBILES (4802-SIB-05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206 PH:93193 24588.

PEPPEGAN.I

2524. ARBIT AUTOMOBILES PVT LTD (GKG1-GKG-01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165 PH: 98574 17821

PILIBHIT

2525. CORAL MOTORS (P) LTD. (IL01-IL-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001 PH:9837891846.

PRAYAGRAJ

2526. SARASWATI MOTORS (2904-29-01), PLOT NO 24, INDUSTRIAL AREA MNIT COLLEGE, TELIYARGANJ, PRAYAGRAJ, UTTAR PRADESH. - 211004 PH :8090854053. 2527. BRIGHT 4WHEELS (2905-29-01), ARAZI NO 390 AND 389 AT KATKA, ANDAWA SAHSON BYPASS, PRAYAGRAJ - 211002 PH :9415324201.

PURANPUR

2528. CORAL MOTORS (P) LTD. (CAD1-CAD-01), KHASRA NO. 788 & 770, UILLAGE - KHAMRIYA PATTI, PURANPUR - PILIBHIT ROAD, TEHSIL AND PARGANA - PURANPUR, DIST. PILIBHIT. -262124 PH :9837891846. 9927001120.

RAIBAREILLY

2529. KTL AUTOMOBILE PVT. LTD. (HS07-HS-01), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303 PH:7800001601.

RAM SANEHI GHAT

2530. BRIGHT 4WHEELS (SDH-1-SDH-01), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL -RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409 PH 99357378B

RAMNAGAR

2531. BRIGHT 4 WHEEL SALES PVT. LTD. (BRK1-BRK-01), KHASRA NO. 629, VILLAGE -BUDHAWAL, TEHSIL - RAMNAGAR, DIST. -BARABANKI, UTTAR PRADESH. - 225205 PH 9935275786, 9838075929.

RAMPUR

2532. AKANKSHA AUTOMOBILES PVT. LTD. (B401-6L-02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901 PH:7248000002.

RAYA

2533. UMA MOTORS PVT. LTD. (BXK1-BXK-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204 PH :9997683333. 9997511006.

ROBERTSGANJ

2534. STAR CAR (CTY1-CTY-01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231 216 PH.7052547903, 9721905002, 9151154306, 9450544961.

SAHARANPUR

2535. ATELIER AUTOMOBILES (S203-S2-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR -247001 PH:7500250042.

SAHIBABAD

2536. FAIR DEAL WHEELS PVT. LTD (08E1-M9-01), 12/67. SITE 4, INDUSTRIAL AREA, SAHIBABAD, GHAZIABAD - 110095 PH. 4740409/102/436, 8860088659.

2537. MOTORCRAFT SALES PVT. LTD. (5903-M9-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010 PH :4172222 / 4102222, 09958562222 & 09960605122.

2538. T.R. SAWI-INEY MOTORS PVT LTD (0819-M9-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA,DISTT- GHAZIHABAD, UTTAR PRADESH -201010 PH. 9999399152: 9999399143.

SALEMPUR

2539. SMARTWHEELS PVT LTD (GKA1-GKA-01), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509 PH :7705800602 . 7705803321.

SALON

2540. KTL AUTOMOBILES (SCP1-SCP-01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH -229127 PH :9918451222.

SAMBHAL

2541. AKANKSHA AUTOMOBILES PYT. LTD. (BPP1-BBP-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302 PH :9997778876

SANDILA

2542. CONCEPT CARS PVT. LTD. (WY01-WY-01), PLOT NO.371, SARAY MARUFPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. -241204 PH: 8756000000, 7607696666.

SARDHANA

2543. RADHAGOVIND AUTOMOBILES (MM01-MM-01), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342 PH:7456003222.

SHAHABAD

2544. CONCEPT CARS PVT. LTD. (AAX1-AAX-01), VILLAGE MUJAGADH, SHAHABAD - 241124 PH:8756000000, 7607696666.

SHAHJAHANPUR

2545. SUMITRA DS MOTORS PVT LTD (W201-W2-01), SITAPUR ROAD, NH-24, SHAHJAHANPUR -242001 PH:7522888333, 9415770000.

SHAMLI

2546. RADHA GOVIND AUTOMOBILES PVT. LTD. (XJ01-XJ-01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776 PH :8979862084

SHIKOHABAD

2547. MADHUSUDAN VEHICLES PRIVATE LTD. (XH01-XH-01), 2508, KATRA MIRA, MAHAMMABAD, OPP PROFESSOR COLONY, NH 2, BYE PASS ROAD, SHIKOHABAD, DISTT: FIROZABAD, UTTAR PRADESH - 283203 PH :9837097894 9890003001.

SIDHAULI

2548. CONCEPT CARS PVT. LTD. (BF01-BF0-01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHIDI, OPP. BLOCK, SIDHAULI, SITAPUR. -261303 PH.:7607596666.

SIKANDRA

2549. KTL PYT LTD (SJE1-SJE-01), YADAV MARKET, NEAR SURYA DHABA, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. -209715 PH '9414113666

SIKANDRABAD

2550. SK UNIVERSE (CWO1-CWQ-01), NEAR R K SCHOOL, VILLAGE – SANWALI SIKANDRABAD, DIST - BULANDSHAHR UTTAR PRADESH , PIN 203202 - 203202 PH .7310106565.

SITAPUR

2551. CONCEPT CARS PVT. LTD. (QE01-6M-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001 PH:7607696666, 8756000000.

SIYANA

2552. SK UNIVERSE (SIN1-SIN-01), BULANDSHAHR ROAD, SIYANA DIST- BULANDSHAHR, UTTAR PRADESH PIN CODE 203412 - 203412 PH: 9219694600.

SULTANPUR

2553. KIRTIKUNJ AUTOMOBILES PVT. LTD. (N101-N1-01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001 PH:227760, 220107.

SWAR

2554. AKANKSHA AUTOMOBILES PVT. LTD. (CQX1-CQX-01), IN FRONT OF EIDGAH, TEHSIL – SWAR, DISTRICT – RAMPUR, UTTAR PRADESH. - 244924 PH :9528004006

TAMBOUR

2555. CONCEPT CARS (SOB1-SOB-01), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR -261208 PH:7607696666.

THAKURDWARA

2556. AKANKSHA AUTOMOBILES PVT. LTD. (KO01-KO-01), 2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHAB GANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH - 244801 PH : 9917224562.

TILOI

2557. KTL AUTOMOBILE PVT. LTD. (CGY2-CGY-01). VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. -229309 PH 99184512222

UJHANI

2558. ETERNITY MOTORS LLP (GJK1-GJK-01), BADAUN BYE PASS ROAD, UJHANI - 243639 PH:94122 89074

UNCHAHAR

2559. KTL AUTOMOBILE PVT. LTD. (IH02-IH-01), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHAR, DISTT: RAIBARELI - 229404 PH. 99184512222.

UNNAO

2560. S B CARS (2806-KL-04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.P. - 209801 PH 9839806451

VARANASI

- 2561. VARANASI MOTORS PVT. LTD. (8402-84-01), THE MALL, CANTONMENT, VARANASI - 221001 PH :2509068, 2509069.
- 2562. AGR AUTOMOBILES PVT. LTD. (8403-84-01), B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010 PH: 2360436.
- 2563. VARANASI MOTORS PVT. LTD. (8402-84-03), ARRAJI NO.2 AND 48, G.T. RODO, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) -221311 PH :2632786, 9838360662.
- 2564. AGR AUTOMOBILES PVT. LTD. (8403-84-04). ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112 PH - 98888 03356

UTTARAKHAND

ALMORA

2565. NAINITAL MOTORS PVT LTD (J603-SQ-04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601 PH :9997194132.

BAGESHWAR

2566. NAINITAL MOTORS PVT LTD (J603-8I-05), VILL. BILOMA, SERA, BAGESHWAR, UT, BAGESHWAR - 263642 PH :9557200522.

BAZPUR

2567. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CGU2-CGU-01), KHASRA NO. 96/2, VILLAGE – BHONA, ISLAM NAGAR, TEHSIL – BAZPUR, UTTARAKHAND. - 262401 PH :9634151501.

CHAMPAWAT

2568. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SF02-SF-01), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523 PH :8929400545, 8191000832.

CHAUKHUTIYA

2569. NAINITAL MOTORS PVT LTD (CVG1-CVG-01), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST.-ALMORA, UTTARAKHAND - 263656 PH:9997026565.

DEHRADUN

- 2570. ROHAN MOTORS LTD. (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001 PH :9997038800.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (5707-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN - 248001, PH: 9368193007.
- 2572. ROHAN MOTORS LTD. (5702-57-02), 257/2, GMS ROAD, VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001 PH :8630956832 989722727
- 2573. FUTURE AUTO WHEELS PVT LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001 PH :0135-2640263, 7895956011.
- 2574. FUTURE AUTO WHEELS (5706-57-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001 PH: 9760444430.

DIDIHAT

2575. NAINITAL MOTORS (SKN1-SKN-01), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T, DIDIHAT, DISTT PITHORAGARH, PINCODE: 262551. -262551 PH :9634092692

DOIWALA

2576. FUTURE AUTO WHEELS PVT LTD (BRI1-BRI-01), 26, MISSARAWALA, DOIWALA, DISTRICT – DEHRADUN, UTTARAKHAND. - 248140 PH: 7983071196.

GADARPUR

2577. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVS1-CVS-01), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152 PH :9258156028.

GAIRSAIN

2578. ROHAN MOTORS LTD (CRH1-CRH-01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT – CHAMOLI, UTTARA KHAND. - 246428 PH :8758839961.

GANGOLIHAT

2579. NAINITAL MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS, VILL-KHETIGARA, PITHORAGARH-GANGOLIHAT ROAD, GANGOLIHAT, DISTT: PITHORAGARH - 262522 PH :99970303043.

GOPESHWAR

2580. ROHAN MOTORS LTD. (5702-MV-03), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028 PH :9634852898

HALDWANI

- 2581. NAINITAL MOTORS PVT LTD (J603-J6-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139 PH :7060201024.
- 2582. NAINITAL MOTORS PVT LTD (J603-J6-02), KALA DUNGI ROAD, NEAR HARIPRIYA BANQUET HALL, KATHGHARIYA, HALDWANI - 263139 PH :8126359222.

HARIDWAR

2583. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-6N-01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407 PH :9897476897.

JASPUR

2584. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (BKL2-BKL-01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712 PH :9898023788

KARANPRAYAG

2585. ROHAN MOTORS LTD (CRG1-CRG-01), BADRINATH ROAD, KARANPRAYAG, DISTRICT – CHAMOLI, UTTARAKHAND. - 246444 PH: 8755011005.

KASHIPUR

2586. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (DG02-DG-01), BAZPUR ROAD, KASHIPUR -244713 PH : 7307704864.

KHATIMA

2587. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (XL02-XL-01), VILLAGE: CHARUBETA,NEAR RTO CHECK POST,PILIBHIT ROAD KHATIMA, U.S NAGAR,UTTRAKHAND - 262308 PH :8191000132.

KOTDWAR

2588. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-21-02), PLOT NO. 23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001 PH :875598075, 7310106565.

LAKSAR

2589. SHAKUMBARI AUTOMOBILES (CTF1-CTF-01), HARIDWAR ROAD, LAKSAR - 247664 PH :8630087926.

NANAKMATA

2590. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVT1-CVT-01), KHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATTA, U.S. NAGAR, UTTARAKHAND. - 262311 PH. 7830033763.

PITHORAGARH

 NAINITAL MOTORS PVT LTD (J603-NM-03), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501 PH :9634092692.

RAMNAGAR

2592. NAINITAL MOTORS PVT LTD (XM01-XM-01), OPP. GAYATRI VIHAR, VILL. BASAI, 7TH KM. KASHIPUR ROAD, RAMNAGAR - 244137 PH :9639016895.

RANIKHET

2593. NAINITAL MOTORS PVT LTD (AXA1-AXA-01), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTARAKHAND) -263645 PH :9557243222.

RISHIKESH

2594. FUTURE AUTO WHEELS PVT LTD (AAS1-AAS-01), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201 PH. 72409241219

ROORKEE

2595. SHAKUMBARI AUTOMOBILES (P) LTD (H201-H2-01), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARIDWAR - 247667 PH:7055104191.

RUDRAPRAYAG

2596. ROHAN MOTORS (IK01-IK-01), GULABRAI-BADRINATH ROAD, RUDRAPRAYAG - 246171 PH :8650876815.

RUDRAPUR

2597. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U404-U4-01), KICHHA BYE PASS ROAD, INDUSTRIAL AREA, RUDRAPUR - 263153 PH :8850502864

SELAQUI

2598. ROHAN MOTORS LTD (CRF1-CRF-01), KHASRA NO.783, BAHADURPUR ROAD, NH-72, SELAKUI, DISTT.-DEHRADUN, UTTARAKHAND. - 248011 PH :8006000439.

SITARGANJ

2599. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CD02-CD-01), PLOT NO.228/5 AND 228/6 KHATIMA ROAD, SITARGANJ, DISTT -RUDRAPUR, UTTARAKHAND. - 262405 PH :8192000375

SRINAGAR

2600. SHAKUMBARI AUTOMOBILES (ANA1-ANA-01), SRICOT GANAGANALI, NEAR MEDICAL COLLEGE, PO- SRICOT, SRINAGAR - 246174 PH:8077425944

TEHRI

 DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (QA02-QA-01), PLOT NO. 541, SECTOR-8E, DISTT. - NEW TEHRI - 249001 PH: 9690994366.

UTTARKASHI

2602. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (6102-61-01), HOTEL RAMOLA, BARETHI CHUNGI, GANGOTRI NATIONAL HIGHWAY, UTTARKASHI. - 249151 PH : 7248888807

UTTRAKHAND

DEHRADUN

2603. SHAKUMBARI AUTOMOBILES (5708-57-01), KHASRA NO. 15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN, PIN-248001, UTTARAKHAND - 248001 PH. 9639698871.

PATI

2604. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SFX1-SFX-01), LOHAGHAT- HALDWANI MAIN ROAD, NEAR PITHORAGARH CO-OPERATIVE BANK, PATI-262528 - 262528 PH :8191000832.

WEST BENGAL

ALIPURDUAR

2805. PODDAR CAR WORLD PVT. LTD.
(BZ01-BZ0-01), BIRPARA MORE, COOCH
BEHAR ROAD, BESIDE GOVENKA PETROL
PUMP, ALIPURDUAR, WEST BENGAL. - 736121
PH: 3945533002
9735008343
974970707.

AMTALA

2606. BHANDARI AUTOMOBILES PVT LTD
(BQH1-BQH-01), VILLAGE - UDAYRAMPUR, P.O.
- KANYANAGAR, P. S. - BISHNUPUR, AMTALA,
DIST.-24 PARGANAS SOUTH, WEST BENGAL
- 743 398
PH :9903850402.

ARAMBAGH

2607. SANEI MOTORS PVT. LTD. (7T02-7T-01), R.S. DAG NO. 1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO. 1233, MOUZA-PARUL, J.L.NO. 38, R.S.NO. 3111, P.S. ARAMBAGH, DISTT. HOOGHLY, WEST BENGAL - 712601 PH :8584050184.

ASANSOL

2608. BEEKAY AUTO PVT LTD (F601-F6-01), CHANDA MORE, N.H.-2, ASANSOL - 713301 PH :9932049425, 9932049435.

BADURIA

2609. PREMIER CARWORLD (SOE1-SOE-01), VILL-KIRTIPUR, P.O- MANDRA, P.S. - BADURIA, DIST - NORTH 24 PARGANAS, WEST BENGAL. PIN -743438. - 743438 PH :9831414956.

BAGDAH

2810. SANEI MOTORS PVT. LTD. (BON1-BON-01), C/O, DINABANDHU TARAFDAR, S/O LATE NARENDRANATH TARAFDAR, VILLAGE – HALENCHA SOUTH, P.O. – HALENCHA COLONY, P.S. – BAGDAH, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL. - 743270 PH. 3584050184.

BAHRAMPUR

2611. BEEKAY AUTO PVT LTD (DJ02-DJ-01), BOKULTALA (PASCHIM GAMINI), NH-34, BAHARAMPUR, DISTT. MURSHIDABAD. - 742101 PH -367340

2612. BEEKAY AUTO PVT LTD (DJ02-DJ-01), NH-34 MANKARA NEAR NEKRATALA, BAHRAMPUR, MURSHIDABAD - 742165 PH :267340.

BAJKUL

2613. BHANDARI AUTOMOBILES PVT LTD (CAV1-CAV-01), VILLAGE – KAPTYAPA BARI, P.O. – KAJLAGARH, P.S. – BHAGWANPUR, BAJKUL, DISTRICT – PURBA MIDNAPORE. -721626 PH :9933055539.

BALAGARH

2614. SANEI MOTORS PVT. LTD (BMI1-BMI-01), DAG NO. 671, MOUZA - BARUIPARA, J L NO. 100, P.O. - BALAGARH, DIST.-HOOGLY, WEST BENGAL -712 501

PH:8584050184. BALURGHAT

2615. J K WHEELS PVT. LTD. (PT01-PT-01), BARO RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. -BALURGHAT, DIST.-DAKSHIN DINAJPUR. - 733 103 PH 9064301464.

BANKURA

2616. BHANDARI AUTOMOBILES PVT LTD (G701-6Q-02), PLOT NO.-156, KH NO.-173, MITHILA MOUZA, AT/PO-BANKURA (WB) -722101 PH :256766.

BARASAT

2617. PREMIER CARWORLD PVT. LTD. (X203-XZ-01), R.S. DAG NO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, J.L. NO. 4, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700125 PH :9420122407.

BARDHAMAN

2618. BEEKAY AUTO PVT LTD (T301-T3-03), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL-713101 PH:9932049454.

BARJORA

2619. BHANDARI AUTOMOBILES PVT LTD (BED1-BED-01), VILLAGE + P.O. + P.S. – BARJORA, MOUZA – BARJORA, JL NO. 46, KHATIAN NO. 3380, PLOT NO. 2795, BARJORA DISTRICT – BANKURA, WEST BENGAL. - 722202 PH :8016087297.

BARRACKPORE

2620. STARBURST MOTORS PVT LTD (BXJ1-CIY-02), NEAR RAIL GATE, WARD NO. 24, WEST BARASAT ROAD, P.S. - TITAGARH, BARRACKPORE, DISTRICT – NORTH 24 PARGANAS, KOLKATA. - 700120 PH. 8335061333.

BARSUNDRA

2621. BHANDARI AUTOMOBILES PYT LTD (G701-BJW-05), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE. WEST BENGAL - 721654 PH :9933055539.

BASIRHAT

2622. BHANDARI AUTOMOBILES PYT LTD (X701-0D-03), RAGHUNATHPUR, TALKI ROAD, BASIRHAT INR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. - 743428 PH:8017569789.

BELACOBA

2623. PODDAR CARWORLD (SCU1-SCU-01), PRASANNA NAGAR, BELACOBA, BATTALA, JALPAIGURI - 735133 - 735133 PH:8945533002.

BIRPARA

2624. SEVOKE MOTORS (CQL1-CQL-01), BHAGAT PARA, NH - 31, MADARIHAT ROAD, BIRPARA, BESIDE TASHI HOTEL, OPP - HIMLYAN HOTEL, P. S - MADARIHAT, DIST - ALIPURDUAR, PIN -735204 - 735204 PH :9800069144.

BISHNUPUR

2625. BHANDARI AUTOMOBILES PVT LTD (AAG1-AAG-01), STATION ROAD, P.O+P.S-BISHNUPUR, DIST: BANKURA, WEST BENGAL -722122 PH :9930055539.

BOLPUR

2626. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-TC-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM -731204 PH: :9647444888 8927895511.

BONGAON

2627. STARBURST MOTORS PVT LTD (TQ02-TQ-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235 PH : 974828939.

BUDGE BUDGE

2628. ONE AUTO PVT. LTD. (BAV1-BAV-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141 PH :8584878802 7604084782.

C K ROAD

2629. BHANDARI AUTOMOBILES PVT LTD (D001-D0-01), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252 PH :9933055539.

CANNING

2630. ONE AUTO (CEG2-CEG-01), SUSUMAPALLY, CANNING, DIST – SOUTH 24 PARGANAS, WB -743329 PH :8442830001.

CHAKDAHA

2631. BHANDARI AUTOMOBILES PVT LTD (OM01-OM-01), VILLAGE – PUMLIA, P.O. – CHAKDAHA, DISTRICT – NADIA, WEST BENGAL. - 741222

PH:9073940368, 9674735303, 9674169007.

CHANDITALA

2632. BHANDARI AUTOMOBILES PYT LTD (BPC3-BPC-01), RS DAG NO 2986, LR DAG NO. 3150, UNDER LR KHATIAN NO 3859, MOUZA-KRISHNARAMPUR, J.L. 59, POLICE STATION-CHANDITALA, HOOGHLY, WEST BENGAL -712702. PH :6296900498.

CHANDRAKONA

2633. BHANDARI AUTOMOBILES PVT LTD (D011-CIP-02), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, J.L.NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201 PH: 8945268833.

CONTAI

2634. BHANDARI AUTOMOBILES PVT LTD (G701-GV-03), SERPUR BAMUNBAR, P O-MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401 PH :254572

COOCH BEHAR

2635. PODDAR CAR WORLD PVT, LTD.
(BWZ1-BWZ-1), CHAKCHAKA, NEELKUTHI
BAZAR, NEAR ADA FACTORY, NH-31, COOCH
BEHAR, WEST BENGAL. - 736101
PH: 8945533002
9735008343.

DARJEELING

2636. BEEKAY AUTO PVT LTD (4301-6U-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101 PH : 9932049347 9932049382 7478004430

DHUPGURI

2637. BEEKAY AUTO PVT LTO (BWD1-BWD-01), MOUZA – DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT – JALPAIGURI, WEST BENGAL - 735210 PH :7477765203 9932049347 9932049347

7478004430. DIAMOND HARBOUR

2638. ONE AUTO PVT. LTD. (YE01-YE-01), VILLAGE – CHEWRA, OPPOSITE – K.E. CARMEL SCHOOL, P.O. – SARISHA HAT. P.S. – DIAMOND HARBOUR, DISTRICT – 24 PARGANAS (S), WEST BENGAL – 743368 PH :8584862243.

DURGAPUR

2639. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213 PH -9647444888 8927895511.

FALAKATA

2640. PODDAR CAR WORLD PVT. LTD. (CSR1-CSR-01), DAKSHIN PARANGAPAR, KHATIAN NO. 1671/1 JL NO. 60, DAG NO. 652/1159, P.S. – FALAKATA, DISTT ALIPURDWAR - 735211 PH :8945533002.

GAZOLE

2641. JK WHEELS (SKZ1-SKZ-01), MOUZA-BAJEGAIRAL, RANIGANJ, PURBAPARA, KAMALDANGA, P.S. GAZOLE, DIST-MALDA, PIN - 732138 - 732138 PH 9734983360

GHATAL

HALDIA

2642. BHANDARI AUTOMOBILES PVT LTD (AAD1-AAD-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHAITAL, WEST MIDNAPORE, WEST BENGAL - 721211 PH :9933055539.

GOPIBALLAVPUR

2643. BHANDARI AUTOMOBILES PVT LTD
(BPQ1-BPQ-01), JL NO. 1103, KHATIAN NO. 1103,
PLOT NO. 438, VILLAGE + P.O. + P.S. –
GOPIBALLYPUR, MOUZA – GOPIBALLYPUR,
WEST MIDNAPUR, WEST BENGAL. - 721506
PH. 19933055539, 8170018577.

GUMA (ASHOKNAGAR)

2644. STARBURST MOTORS PVT LTD (BXJ1-CLB-03), JESSORE ROAD, MANIKNAGAR, KHOSDELPUR MORE, P.S. – ASHOKNAGAR, NORTH 24 PARGANAS, WEST BENGAL. - 743222 PH :8697731763. 8336933447.

....

2645. BHANDARI AUTOMOBILES PVT LTD (G701-SE-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657 PH:8016082344. 9233502421.

HOWRAH

2646. BHANDARI AUTOMOBILES PVT LTD (X701-X7-01), BANKRA THANA,DOMJUR,HOWRAH. - 711403 PH '9674735304

2647. PREMIER CARWORLD PVT. LTD. (0611-X7-02), MOUZA – PRASASTHA, P.S. – DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYAT, ANKURHATI, HOWRAH, WEST BENGAL. -711302

PH:8420122402

JALPAIGURI

2648. PODDAR CAR WORLD PVT. LTD. (XY01-XY-01), COLLEGE PARA, SIRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101 PH: 8945533002.

JAYGAON

2649. SEVOKE MOTORS PVT. LTD. (CHS1-CHS-01), HOUSE NO.43, WARD NO.11/22, N.S ROAD DARAGAON, P.S - JAYGAON, DISTT. ALIPURDUAR, WEST BENGAL - 736182 PH :9433825851.

JHARGRAM

2650. BHANDARI AUTOMOBILES PVT LTD (BUG1-BUG-01), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507 PH :8016087297 . 9933055539.

KADAMBAGACHI

2651. STARBURST MOTORS PVT LTD (BX,1-CTE-04), MOUZA - PURBA ICHAPUR, JL NO. 111, RESU NO. 131, DAG NO. 385, KHATIAN NO. L R 754, KADAMBAGACHI, P.S. - BARASAT, DIST.-NORTH 24 PARGANAS, WEST BENGAL. - 700125 PH: 3336933410.

KALIMPONG

2652. BEEKAY AUTO (BWF1-BWF-01), 10TH MILE, GUMBA HATTA, PO&PS -KALIMPONG, DIST -KALIMPONG, WB. - 734301 PH: 9932049347.

KALNA

2653. BEEKAY AUTO PYT LTD (WZ01-WZ-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409 PH :9932251483.

KALYANI

2654. STARBURST MOTORS PVT LTD (J.01-IJ-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U1 C UDYOG, NEAR: J1 S COLLEGE), KALYANI. - 741234 PH :8584040215. 8336933447.

KESHPUR

2655. BHANDARI AUTOMOBILES PVT LTD (CCM1-CCM-01), JL NO. 338, KHATIAN NO. 786/2, PLOT NO. 1749, MOUZA – KESHPUR, VILLAGE + P.O. + P.S. – KESHPUR, WEST MIDNAPUR, WEST BENGAL. - 721150 PH:721150, 8170014289.

KHARAGPUR

2656. BHANDARI AUTOMOBILES PYT LTD (G701-G7-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL -721301 PH :755537.

KHATRA

2657. BHANDARI AUTOMOBILES PVT LTD (BGZ1-BGZ-01), VILLAGE - SENAPATI, P.O & P.S - KHATRA, MOUZA-SENAPATI, J. NO.189, KHATIAN NO.659, PLOT NO.33/34, DISTT. BANKURA, WEST BENGAL. - 722140 PH.9933055539.

KOLKATA

2658. MACHINO TECHNO SALES LTD. (0601-06-02), 48 A, TARATALA ROAD, KOLKATA - 700066 PH:9073330177.

2659. DEWAR'S GARAGE (0605-06-01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069 PH: 8584015205

2660. MACHINO TECHNO SALES LTD. (0601-06-01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA - 700017 PH: 9073330178.

2661. PREMIER CARWORLD PVT. LTD. (0611-06-01), AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058 PH:8697730344.

2662. BHANDARI AUTOMOBILES PVT LTD (0609-06-01), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL - 700143 PH :9674476000.

2663. BHANDARI AUTOMOBILES PVT LTD (0609-06-02), 37, GULAM JILANI KHAN ROAD, KOLKATA. - 700039 PH :9903850402.

2664. SANEI MOTORS PVT. LTD. (0612-06-01), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION,KOLKATA - 700067 PH :8584050184.

- 2665. ONE AUTO PVT. LTD. (0614-06-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA, WEST BENGAL - 700105 PH 98584578802
- 2666. ONE AUTO PVT. LTD. (0614-06-01), JL NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADAHA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099 PH :8584870725.
- 2667. DEWAR'S GARAGE (0605-06-03), P-27/2, TARATALA ROAD, KOLKATA - 700088 PH :8584015293
- 2668. SANEI MOTORS PVT LTD (0612-06-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059 PH: 8584050184.
- 2669. OSL MOTOCORP PVT LTD (0616-06-01), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRING CLUB, E.M. BYE-PASS, KOLKATA - 700015 PH: 8336996355 8897982283.
- 2670. JYOTE MOTORS (0624-06-01), NAZIRABAD MAIN ROAD, NAZIRABAD, ANANDAPUR, NEAR BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150, WEST BENGAL - 700150 PH:8334930830.

KOLKATTA

2671. BHANDARI AUTOMOBILES (0619-6-C1), PLOT NO. IID/15, ACTION AREA 2D, NEW TOWN, P.S. RAJARHAT, KOLKATA, WEST BENGAL PIN-700156 - 700156 PH :6291042160

KOTULPUR

2672. BHANDARI AUTOMOBILES PYT LTD (BIP1-BIP-01), KHATIAN NO.644, PLOT NO.373, JL NO. 101, VILLAGE - MULDARA, P.S. + P.S. -KOTULPUR, DISTT.-BANKURA, WEST BENGAL. -722141 PH :9933055539.

KRISHNANAGAR

2673. BHANDARI AUTOMOBILES PVT LTD (X701-GS-02), PLOT NO.-1874, MOUZA-GOBINDSARAK, J.K. NO. 94, PS-KOTWAL, OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011 PH-1961309742

MADHYAMGRAM

2674. STARBURST MOTORS PVT LTD (BXJ1-BXJ-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129 PH :9836075998, 8336933447.

MALBAZAR

2675. BEEKAY AUTO PVT LTD (BWG1-BWG-01), CALTEX MORE, VILLAGE + P.S. – MALBAZAR AND DISTRICT – JALPAIGURI . - 735221 PH :9932049347 9932049382 7478004430

MALDA

2676. J K WHEELS PVT. LTD. (L801-L8-01), GABGACHHI, N.H. 34, MALDA, - 732103 PH:9851520855, 9735003949.

MATHABHANGA

7477785203.

2677. BEEKAY AUTO PVT LTO (BQF1-BQF-01), SITAKULCHI ROAD, WARD NO.9.MATHABHANGA, DISTRICT – COOCHBEHAR. - 736146 PH :7477785202 9932049382 7478004430

MOHANPUR

2678. BHANDARI AUTOMOBILES PVT LTD (CIV1-CIV-01), VILAGE-NAYAGAON, P.O. -PAROI, P.S.-MOHANPUR, MOUZA - NAYAGAON, JL NO.395, KHATIAN NO.1751, PLOT NO.895, DISTT-PASCHIM MIDNAPUR, W.BENGAL. -721436 PH. 19933055539.

NAIHATI

2679. PREMIER CARWORLD PVT. LTD. (YDD1-YD-01), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. -JACATDAL, DIST-24 PGS (N), NAIHATI (WB) -743123 PH:801700824.

NAKASHIPARA

2880. BHANDARI AUTOMOBILES PYT LTD

(BMJ1-BMJ-01), L R DAG NO. 7271, UNDER L R

KHATIAN NO. 6734, MOUZA - DEBAGRAM, J L

NO. 60, POLICE STATION - KALIGANJ, BLOCK KALIGANJ, NAKASHIPARA, DIST.-NADIA, WEST
BENGAL. - 741138
PH. 9163314418.

NAXALBARI

2881. BEEKAY AUTO PVT LTD (CSJI-CSJ-01), MOUZA – GENI, KHATIAN NO 275. PARGANA-HATIGHISHA, P.S. NAXALBARI, DISTT. DARJEELING, WEST BENGAL - 734429 PH :9932049347 9932049382 7478004430 5663370099.

PANCHLA

2682. BHANDARI AUTOMOBILES PVT. LTD. (BPH-BPI-0), LR DAG NO 3274, UNDER L.R KHATIAN NO 3044, MOUZA-MALLICKBAGAN, JL NO-7, POLICE STATION – PANCHLA, DIST-HOWRAH - 711310 PH :9073664926.

PANDUA

2683. BHANDARI AUTOMOBILES PVT LTD (BOS1-BOS-01), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL. - 712149 PH :9073912566.

PANSKURA

2684. BHANDARI AUTOMOBILES PVT LTD (BPS1-BPS-01), MOUZA – PASCHIM NEKRA, JL NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL - 721139 PH :9933055539.

PURULIA

2885. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-6W-02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149 PH -9647444888 8927899511.

RAGHUNATHPUR

2886. BEEKAY AUTO PVT LTD (CKZT-CKZ-01), MOUZA – BUNDLA, J.L. NO. 197, PLOT NO. 2856. KHATIAN NO. LR 207, P.O. – RAGHUNATHPUR, P.S. – RAGHUNATHPUR, DISTRICT – PURULIA. -723133 PH :9932049425, 9932049435.

RAIGANJ

2687. J K WHEELS PVT. LTD. (BND2-BN-01), JL ND.
150, KHATJAN NO. 1893 & 1684, PLOT NO.
4158., P.S. – RAIGANJ, MUNICIPALITY –
RAIGANJ, WARD NO. 11, HOLDING NO. 577/N,
MOUZA – RAIGANJ, DISTRICT – UTTAR
DINAJPUR, 733134
PH. 3735008842.

RAJARHAT - KOLKATA

2688. STARBURST MOTORS PVT LTD (BXJ1-06-05), R. S. & L.R. DAG NO. 3434, MOUZA- GOPALPUR, JL NO. -02, RS NO. -140, LR KHATIAN NO. -5638, NEW TOWN, RAJARHAT - 700136 PH :9681080301.

RANAGHAT

2689. STARBURST MOTORS PVT LTD (BBW1-BBW-01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIIA - 741256 PH:8145821191, 884040215.

RUPNARAYANPUR

2890. BEEKAY AUTO PVT LTD (BWS1-BWS-01), P.S. – SALANOUR, UNDER MOUZA – JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHAITAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335 PH. :9932049425, 9932049435.

SABANG

2691. BHANDARI AUTOMOBILES PYT LTD (CCL1-CCL-01), VILLAGE - PAIKAN DAKSHIBARH, P.O. - DHANSWARPUR & P.S. -PINGLA, DIST.-PASCHIM MIDNAPORE, SABANG - 721 166, WEST BENGAL. - 721166 PH : 9933055539

SEORI

2692. BEEKAY AUTO PVT LTD (F601-KC-02), RAMBADANPUR, NEAR SP MORE, DIST-BIRBHUM, SEORI - 731101 PH:9932049425, 9932049406

SHYAMPUR

2693. SANEI MOTORS PVT LTD (CAW1-CAW-01), VILLAGE + P.O. – GOBINDAPUR, P.S. – SHYAMPUR, DISTRICT – HOWRAH, WEST BENGAL - 711314 PH :8584050184.

SILIGURI

2694. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA, SILIGURI. - 734428 PH :9932049347 9932049382 7478004430.

2695. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001 PH :9932049347 9932049380

2696. SEVOKE MOTORS PVT. LTD. (4302-43-01), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001 PH :9706010366.

2697. PODDAR CAR WORLD PVT LTD (XY01-43-02), VILL. EAST DHANTALLA, FULBARI II G.P., P.O SATELLITE TOWNSHIP, DIST- JALPAIGURI -734015 PH: 8945533002.

SONADA

2698. SEVOK (SDX1-SDX-01), RATO MATEY DARA, NEAR PETROL PUMP.P.O- SONADA, WEST BENGAL PIN - 734209 - 734209 PH:9800069144.

SONAMUKHI

2699. BHANDARI AUTOMOBILES PVT LTD (CAU1-CAU-01), J L NO. 77, KHATIAN NO. 360, PLOT NO. 114/287, SONAMUKHI BISHNUPUR ROAD, VILLAGE - CHURAMANIPUR, P.O. & P.S. - SONAMUKHI, WEST BENGAL. - 722207 PH. 19933055539.

SREERAMPORE (SREERAMPUR)

2700. BHANDARI AUTOMOBILES PVT LTD (BBT1-BBT-01), BANGIHATI (MADPUR) DELHI ROAD, SREERAMPUR, DISTT: HOOGHLY, WB -712203 PH :66137505. 66137585. 9674741544.

TAMLUK

2701. BHANDARI AUTOMOBILES PVT LTD (OL01-OL-01), MOUZA PADUMBASAN, WARD NO 10, JL NO:144, DISTT: EAST MIDNAPUR, WEST BENGAL - 721636 PH :9930305539.

TARAKESHWAR

2702. SANEI MOTORS PVT. LTD. (YH01-YH-01), MOUZA BAIDYAPUR, UNDER BALIGORI(1), GRAM PANCHAYET, TARAKESHWAR, DISTT. HOOGLY, WEST BENGAL. - 712410 PH:8584050184.

UDAYNARAYANPUR

2703. BHANDARI AUTOMOBILES PVT LTD (BOO1-BOO-01), VILLAGE-JANGALPARA BELGRAM, PS- UDAYNARAYANPUR, DIST-HOWRAH, WEST BENGAL. - 711226 PH :9073664902.

ULUBERIA

2704. BHANDARI AUTOMOBILES PVT LTD (2401-24-01), HOLDING 1242A, BANITABLA, P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH, WEST BENGAL - 711316 PH :9052901888.

ANDHRA PRADESH

ANANTHAPUR

 SRI DURGA (1BNA-1B-01), NO.124, SOMALADODDI, ANANTHAPUR, ANDRA PRADESH - 515004 PH :9885183851.

GUNTUR

 JAYLAXMI (G5NA-G5-01), D-NO:199/2, OPP.AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001 PH:9959844644.

KAKINADA

 VARUN MOTORS (W7NA-W7-01), BHASKARA GARDENS JAGANDHAPURAM ,KAKINADA -533016 PH :9885313744.

KURNOOL

 MSA MOTORS (C2NA-C2-01), PLOT NO. 1, 1A, 2, 2A, WARD NO. 96, NH 44, AUTO NAGAR, KURNOOL, ANDHRA PRADESH 518003 - 518003 PH:9912826862.

NELLORE

 BHARGAVI AUTO (ASNA-A8-01), SURVEY NO 245B, CHEMUDUGUNTA VILLAGE, NH-16, ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002 PH :8886682222

ONGOLE

 JAYALAXMI (8YNA-8Y-01), SURVEY NO:194/2, BESIDE NH 5, MUKTHINUTHALAPADU, ONGOLE, ANDHRA PRADESH – 523225 - 523225 PH :3492133433.

RAJAHMUNDRY

 SB MOTORS (C5NA-C5-01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDRY, ANDRAPRADESH-533106. - 533016 PH:9248727888.

SRIKAKULAM

 VARUN MOTORS (W6NA-W6-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIKAKULAM DISTRICT, ANDHRA PRADESH - 532401 PH:9885317344.

VIJAYAWADA

 VARUN MOTORS (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. -521137 PH :6309955655.

 PARAMSHIVA MOTORS (26NB-26-01), NO. 20-1-34, C K REDDY ROAD, AYODHYA NAGAR, VIJAYAWADA, ANDRAPRADESH- 520003. -520003

PH:9866551078.

 VARUN MOTORS (26NA-26-02), DOOR NO1-1-153, REVENUE WARD NO.1, BLOCK NO3, VIDHYADARARPURAM, VIJAYAWADA -520012

PH:9989477120. VISAKHAPATNAM

 VARUN MOTORS (46NA-46-01), DOOR NO 38-22-27, SURVEY NO 39, KAPARADA VILLAGE, INDUSTRIAL ESTATE, VISHAKHAPATNAM-533016 PH 9885317344.

VIZIANAGARAM

 JAYABHERI AUTO (N8NA-N8-01), OPPOSITE RELIANCE MART, BALAJI JUNCTION, 100 FEET RING ROAD, VIZIANAGARAM - 535002 PH :08340833999.

ASSAM

BONGAIGAON

 BHARATI MOTORS (7NNA-7N-01), CHAPAGURI RD, NEAR POST OFFICE, NORTH BONGAIGAON, AMGURI, BONGAIGAON, ASSAM 783380 - 783380 PH 7002350887.

DIBRUGARH

 VISHAL CAR WORLD (C1NA-C1-01), MOHPUALIMORA GOHAIN GAON, A.T ROAD, DIBRUGARH, ASSAM - 786008 PH :8000900008.

GUWAHATI

 PODDAR AUTO (09NA-09-01), AT ROAD ,KAMAKHYA GATE ,GUWHATI ,KAMRUP-781009 -781009 PH :8085957586

 BIMAL AUTO (09NB-'09-01), DREAMLAND APPARTMENT, NAHRANI PATH, DISPUR LAST GATE, GUWAHATI - 781006 (ASSAM) - 781006 PH 9864074525.

JORHAT

 RD MOTOR (G9NB-G9-01), M/S R D MOTORS PVT LTD , DHAPKATA, NEAR TINALI, JORHAT -785006 - 785006 PH :7002099547.

SII CHAR

 JAIN UDHYOG (J2NA-J2-01), R.S. PATTA NO.149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH :9436121557.

TEZPUR

 RD MOTOR (T1NA-T1-01), SOLAGAN VILLAGE, GOROIMARI, SONABEEL, BEFORE MAA KALYANI PETROL PUMP, TEZPUR -784105 -784105
 PH :9836872710.

TINSUKIA

 VISHAL CAR WORLD (JANA-J4-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD),A.T. ROAD, LAIPULI, TINSUKIA ,ASSAM -786183 - 786183 PH :9864211022

BIHAR

GAYA

 KARLO MOTORS (Y6NA-Y6-01), GAYA DOBHI MAIN ROAD, NEAR DOMUHAN, BODHGAYA, PIN -824231, BIHAR. - 824231 PH 9934096400

PATNA

 ALANKAR AUTOMOBILES (15NA-15-01), OPP.RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002 PH 9190427707

 REESHAV AUTOMOBILES (15NB-15-01), MUKDUMPUR,DIGHA,90 NO GATE, PATNA -800012

PH:7369944132.

 SHRI GOPAL (16NC-15-01), BIKHACHAK ANISHABAD NEW BYPASS ROAD, OPPOSITE SITA RAM COMMUNITY HALL, PATNA, BIHAR -80002 - 800002 PH: 9113746967.

PURNEA

 SIMANCHAL (6VNA-6V-01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31,GUALBBAGH,PURNEA,BIHAR - 854326 PH: 9334710055.

CHANDIGARH

CHANDIGARH

 AUTOPACE (FEB) (07NA-07-01), PLOT NO. 37, INDUSTRIAL AREA – PHASE 1, CHANDIGARH -160002 PH -7087119861

 NAVDESH AUTO (07NE-07-01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH -160002

PH:8827057534. CHHATTISGARH

AMBIKAPUR

 MAHAMAYA (AENA-AE-01), AJAB NAGAR, MAHATHMA GANDHI ROAD, AMBIKAPUR - 497001 PH :9516609632.

BILASPUR

 SATYA AUTOMOBILES (C3NB-C3-01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001 PH:6372803057.

KORBA

 SATYA AUTOMOBILES (U7NB-U7-01), SHED NO 10, PART OF KHASRA NO 885, INDUSTRIAL AREA, RAJGAMAR ROAD, KORBA (C.G) - 495677 PH :9993092051.

RAIPUR

 SPARSH (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDIH, TATIBANDH, RAIPUR, CHATTISGARH - 492029 PH 9926626662

 SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI ,G. E. ROAD, RAIPUR -492001

PH:9425204051.

DELHI

DELHI

 RANA MOTORS (08NE-08-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI - 110020 PH :7290030289, 9290030288.

TR SAWHNEY (08NN-08-01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI - 110020 PH :9953350008.

 PLATINUM MOTORS (08NQ-08-01), PLOT NO-H4,BLOCK-B1,MOHAN CO-OPERATIVE INDEX,MATHURA ROAD,PIN-110044 - 110044 PH :9811386000, 8860200000.

 MAGIC AUTO (08NA-08-01), CISF GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH :9873052000.

 AAA VEHICLEADES (08NW-08-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH:8750611111.

 COMPETENT AUTO (08NF-08-01), PLOT NO-34, RAJASTHAN UDYOG NAGAR, GT AKRNAL ROAD, DELHI - 110033 PH -9932049425

 JAGMOHAN MOTORS (08NX-08-01), C133-136(PART, PHASE I, INDUSTRIAL AREA, MANGOLPURI S BLOCK, NEW DELHI, DELHI 110083 - 110083 PH :9812259000.

GOA

MARGAON (GOA)

 CHOWGULE INDUSTRIES (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAIA, SALCETE - (GOA) - 403720. - 403720 PH: 9850966950.

PORVORIM(PANJIM)

- SAI SERVICE (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521 PH: 022-61841111, 8291941070.
 - GUJARAT

AHEMADABAD

- STAR LINE CARS (01NE-01-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330 PH:7436003235.
- 44. PEGASUS (01NG-01-01), PLOT NO 9, OPP RABARI COLONY BRTS STOP, CTM, NAROL-NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. - 380026 PH :9909073000
- POPULAR WHEELERS (01NC-01-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT -380009 PH 99/52/03344

ANAND

 AMAR CARS (F7NA-F7-01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT -388001 PH 9925407666.

BHARUCH

 RAVIRATNA (F8NA-F8-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. -392001 PH:9727700823.

BHAVNAGAR

 KIRAN MOTORS (C9NB-C9-01), RAMDEV SOCIETY, CHITRA GIDC, BHAVNAGAR -GUJARAT - 364001 PH:9924123973.

BHUJ

 KD MOTORS (P5NA-P5-01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPAR HIGHWAY, BHUJ - 370040 PH:9879898799.

GANDHIDHAM

 BM AUTO LINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH, GUJARAT - 370201 PH :7211120014.

GANDHINAGAR

 NANDA AUTOMOBILES (ZBNA-2B-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT - 382421
 PH :9887641974.

GODHRA

 RB CARS (2CNA-2C-01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001 PH :9925051444.

JUNAGARH

 PERFECT AUTO SERVICES (K8NA-K8-01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037 PH :9909022619

MEHASANA

 STAR LINE CARS (D1NA-D1-01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002 PH :7211138986, 7211138987.

MORBI

 PERFECT AUTO SERVICES (X5NA-X5-01), RAJKOT MORBI HIGHWAY, VILLAGE SANALA, MORBI - GUJARAT (363641) - 363641 PH :9909022619.

PATAN

 STARINE CARS (Q9NA-Q9-01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT) - 382465 - 382465 PH :9909043244.

RAJKOT

 PERFECT AUTO SERVICES (55NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT -360004 PH :9512035501.

SURAT

- KIRAN MOTORS (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJRAT -395009 - 395009 PH :7020569426
- 59. AMAR CARS (40ND-40-01), SURVEY NO 139,BLOCK NO-"218"A,OPPOSITE TO AWADH ARENA MALL, V.I.P ROAD ,BHARTHAMA,SURAT,GUJRAT - 395007 PH :9871389795.

SURENDARNAGAR

 DREAM VEHICLES (LCNA-LC-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDERNAGAR, GUJARAT. - 363035 PH :8511104644.

VADODARA

 KATARIA AUTO (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007 PH :9824701590.

VAPI

 KATARIA AUTO (97NA-97-01), NEAR CROMA OUTLET, RATHOD CHAMBERS, DAMAN ROAD, CHALA VAPI - 396191 PH 9714799985

HARYANA

AMBALA

 EAKANSH WHEELS (18NA-18-01), AMBALA-CHANDIGARH HIGHWAY ADJOINING AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA -134003 PH :8395903111.

BHIWANI

 PASCO AUTOMOBILES (X3NA-X3-01), NEAR HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI-HARYANA-127021 - 127021 PH 9289192582.

FARIDABAD

- PASCO AUTOMOBILES (58NB-58-01), 14/4, MATHURA ROAD, FARIDABAD, HARYANA -121003 PH 9999790229
- BVA AUTO (58NC-58-01), 2J/53-54, NH-2, NIT FARIDABAD, HARYANA - 121001 PH :9911259288
- VIPUL MOTORS (58NA-58-01), SUB DIVISION NO-3, INDUSTRIAL PLOT NO. -34, N.I.T, FARIDABAD HARYANA - 121001 PH :8562019252.

GURGAON

- PREM MOTORS (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001 PH:1292565666.
- TR SAWHNEY (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001 PH :1274254441.
- PASCO AUTOMOBILES (95NA-95-01), SEC 17-18 DIVIDING ROAD, GURGAON- HARYANA, 122015 - 122015 PH: 0124-4398400, 9999239959.

JIND

9873873807.

71. EAKANSH MOTORS (2KNA-2K-01), KHEWAT NO. - 155, KHASRA NO. - 142, MURRABA NO. - 210 OPP. HP LPG BOTTLING PLANT, ROHTAK-JIND ROAD, JIND. PIN - 126102. - 126102 PH :8529860482.

KAITHAL

- EAKANSH MOTORS (U8NA-U8-01), NH-65, OPP RKM FARM, AMBALA ROAD, KAITHAL - 136027 PH:7419900804, 7419900808
- EAKANSH MOTORS (UBNA-UB-02), KHEWAT NO 458, KHATONI - 563, KITTAS - 20/87K 01M ADJOINING NEXA SHOWROOM, AMBALA HISAR ROAD, KAITHAL - 136027 PH :8813038777.

KARNAL

 KARNAL MOTORS (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA -132001 PH:8572801011.

PALWAL

 AUTONATION (EENA-EE-01), KILA NO.-15/2 & 16/1, 57 MILESTONE, NEAR ECHS HOSPITAL, MATHURA ROAD, PALWAL - 121102 PH :9811321581.

PANIPAT

 AUTO GALLERY (D3NB-D3-01), NANGAL KHERI, NEAR BBMB POWER HOUSE, OPP. SEC-29, PANIPAT, HARYANA - 132103 PH :9812615000.

REWARI

 DINCO MOTORS (U1NA-U1-01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401 PH :0129-4353555, 9953357777
 8448787882

ROHTAK

8448787883

 JAGMOHAN MOTORS (A6NA-A6-01), NORTHERN BYEPASS, SUKHPURA CHOWK, JIND ROAD, ROHTAK, HARYANA - 124001 PH:8754045446.

SIRSA

 SHAKTI MOTORS (E4NA-E4-01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSA-125055
 PH:88160-72888, 88138-75888.

HIMACHAL PRADESH

NAGROTA

 KANGRA VEHICLEADS (D9NA-D9-01), VILL HATWAS, PATHANKOT - MANDI HIGHWAY, NAGROTA BAGWAN DISTT. KANGRA - 176047 PH :7087916168.

JAMMU AND KASHMIR

JAMMU

 JAMKASH VEHICLES (33NB-33-01), NH-1A BYE PASS OPPOSITE CHANNI HIMMAT, JAMMU (J&K) - 180015 PH:7710400000.

 JAMMU MOTORS (33ND-33-01), KHASRA NO. 421, TOPE SHERKHANIA, AKHNOOR ROAD, OPPOSITE BEST PRICE, JAMMU, JAMMU & KASHMIR - 180016 PH :9419581624.

JHARKHAND

BOKARO

 HINDUSTAN AUTO AGENCY (B5NA-B5-01), KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS, BOKARO. - 827013 PH 9304807318.

DEOGHAR

 PREMSONS (SGWN-SGW-01), PLOT NO 318/319 UNDER THANA NO 583, MAHESHMARA MOUJA DEOGHAR - 814112 PH :9835507004.

DHANBAD

 RELIABLE (52NA-52-01), RELIABLE INDUSTRIES NEXA WORKSHOP AMAGHATA, BY PASS ROAD SUGIADIH, PIN -828109 - 828109 PH : 7992470853.

HAZARIBAGH

 PREMSONS (Y9NA-Y9-01), PREMSON MOTOR UDYOG PVT LTD , NEXA SHOWROOM NEXT TO GST OFFICE, ARYA NAGAR, HURHURU, HAZARIBAGH, JHARKHAND 825301 - 825301
 PH -9835507004.

JAMSHEDPUR

- MOTOR WORLD (31NB-31-01), NS-6, 2ND PHASE, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013 PH :9431128683
- PEBCO MOTORS (31NA-31-01), KANDRA ROAD, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR -831013 PH :9334183260.

RANCHI

- SUDHA MOTORS (51NB-51-01), KATHALMORE, OPP. MANER DHABA, RANCHI - 834005 PH:7001124836, 8837221096
- PREMSONS (51NC-51-01), PLOT NO 2651/2652, KHATA NO 239, MAUJA,
 VILLAGE BARAGAI, BARIATU MAIN ROAD, RANCHI, JHARKHAND - 834009

KARNATAKA

BANGALORE

PH:9334811248.

 MANDOVI MOTORS (02NJ-02-01), SURVEY NO.33/2,ALLALASANDRA, YELAHANKA NORTH, BANGALORE, KARNATAKA - 560064 PH :9513729888.

- KALYANI MOTORS (02NI-02-01), SURVEY NO.1712, KENCHENAHALLI VILLAGE, RAJARAJESHWARI NAGAR, MYSORE ROAD, BANGALORE, KARNATAKA - 560032 PH :9845049626.
- SURAKSHAA CAR CARE (02NF-02-01), 2/6, BERTEN AGRAHARA, OPP TO METRO CASH & CARRY, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE, KARNATAKA - 560100 PH :9845047393.
- PRATHAM MOTORS (02NK-02-01),
 SARJAPUR MAIN ROAD, DODDAKANAHALLI,
 VARTHUR HOBLI, BANGALORE EAST,
 KARNATAKA-560035. 560035
 PH:8884000579.
- VARUN MOTORS (02NG-02-01), NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE, TUMKUR ROAD, YESHWANTPUR, BANGALORE, KARNATAKA-560022. - 560022 PH :8071888885
- 96. VARUN MOTORS (02NM-02-01), 37/56 NAGAVARA VILLAGE,HEBBAL RING ROAD ,BANGALORE - 560024 PH :9513394753
- KALYANI MOTORS (02NN-02-01), 152/7, OUTER RING ROAD, DODDA BANASWADI, HORAMAVU, KR PURAM HOBALI, BANGALORE -560043. -560043
 PH :9900020454.
- BIMAL AUTO (02NL-02-01), NO.1, 3RD BLOCK, 2ND STAGE, NAGARABHAVI, OUTER RING ROAD, BANGALORE – 560072 - 560072 PH :9513843355.

BELGAUM

 SHANTESHA MOTORS (E8NA-E8-01), PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD, KANGRALI B K, BELGAUM, KARNATAKA-590010. - 590010 PH '0538105381

DAVANGREE

 SHRUTI MOTORS (S1NA-S1-01), AVARAGERE ROAD, OLD, PB RD, DAVANAGERE, KARNATAKA 577003 - 577003

HASSAN

 VENKAT MOTOR (C8NA-C8-01), KHATA NO 200-201, DM HALLY, BANGALORE -MANGALORE ROAD, HASSAN, KARNATAKA - 0

HIIRI

 LEKHYA MOTORS (73NA-73-01), OPP TO APMC 2ND GATE, ESHWAR NAGAR, HUBLI-DHARWAD ROAD, HUBLI-580025. - 580025 PH:9513777265.

MANGLORE

 MANDOVI MOTORS (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142 PH 9845133077.

MYSORE

- FRIENDLY MOTORS (25NB-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA-570016. - 570016 PH :9845011686.
- KALYANI MOTORS (25NC-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016

SHIMOGA

106. SHRUTI MOTORS (B7NA-B7-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA, KARNATAKA -577201 PH -988596666

KERALA

KOTTAYAM

 SAI SERVICE (B8NB-B8-01), SY. NO. 341/11, 341/12, PERUR VILLAGE, MC ROAD, THELLAKOM, KOTTAYAM - 686630 PH :92880 24220.

THRISUUR

 POPULAR VEHICLES (A4NB-A4-01), SURVEY NO 62/P, CHUNGAM, OLLARI, KANJANI ROAD, ARANATTUKARA VILLAGE, THRISSUR - 680618 -680618

KERELA

ALLEPEY

 POPULAR VEHICLES (E5NB-E5-01), 12/287A, PARAVOOR, ALLEPPEY - 0 PH:9846161601.

CALICUT

- AM MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EYE HOSPITAL, SRAMBIKKAL PARAMBA, MINI BYPASS JAIL ROAD JUNCTION, PUTHIYARA POST, CALICUT, KERELA-673004, - 673004 PH - 17/1833968
- 111. POPULAR VEHICLES (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017 PH :9946104660.

COCHIN

- 112. INDUS MOTOR (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106 PH :9747508822.
- SAI SERVICE (27NA-27-01), 7237/6,18,0PP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. -682021
 PH: 3945106193.

KASARGOD

114. INDUS MOTOR (3L.NA-3L-01), SURVEY NO.384/3C,10, MUTTATHODY VILLAGE, INDIRA NAGAR, CHENGALA POST, KASARGODE, KERALA- 671541 - 671541 PH.9745998341.

KAYAMKULAM

 SAI SERVICE (8LNA-8L-01), S.NO 111/48, KP ROAD, KAYAMKULAM, KERALA - 690502 PH:9288024222.

KOLLAM

116. SARATHY AUTOCARS (C7NA-C7-01), NH-47 BYE PASS ROAD, AYATHIL.P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021 PH :9848659456.

TRIVANDRUM

117. INDUS MOTOR (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND, ALUMOOD JN, NH 47, KANNIYAPURAM, TRIVANDRUM - 695301. -695301 PH: 9656685678.

MADHYA PRADESH

BHOPAL

- 118. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVL TLD) (03NC-03-07), 42, 6, BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSHANGABAD ROAD, BHOPAL (M.P.) - 462016 PH.790903921.
- OCEAN MOTORS (03ND-03ND-01), PLOT NO-54 & 55, SECTOR-A, GOVINDPURA INDUSTRIAL AREA, JK ROAD, BHOPAL - 462023 PH: 7389936400.

INDORE

- PATEL MOTORS (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJRANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016 PH: 7771002581.
- OCEAN MOTORS (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001 PH : 0731-4826666.
- RANA MOTORS (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 -452010
 PH: 9933055539.
- RUKMANI (53NC-53-01), RUKMANI MOTORS NEXA SERVICE, FOOTHI OTHI SQUARE, OPP. DASTOOR GARDEN, INDORE -452002 PH: 9755512100.

JABALPUR

124. STANDARD MOTORS (54NC-54-01), KHARSA NO-529/1/1, NEAR TRIPURI CHOWK GARHA JABALPUR M. P - 482003 PH: 9773543358.

- 125. SHUBH MOTORS (54NB-54-01), SHUBH MOTORS, 4 MILE, LAL BUNGALOW, TILHARI, JABALPUR MADHYA PRADESH - 482001 PH - 9644454545
- 126. STANDARD MOTORS (54NC-54-01), UKHARI TIRAHA, OPPOSITE TO RAMESHWARAM WATER TANK, MR-4 ROAD, VIJAY NAGAR, JABALPUR (M.P.) - 482001 PH :7800806222.

SAGAR

127. ADINATH CARS (G1NA-G1-01), KHASRA NO 155, P H NO. -77, BAHERIA GADGAD, SAGAR JABAL PUR ROAD, SAGAR - 470004, MADHYA PRADESH, INDIA - 470004 PH. 9752447690.

SATNA

128. CITY CARS (D7NA-D7-01), BEHIND NEXA SHOWROOM, 666/2, AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001 PH 6262230999

SHAHDOL

 STANDARD MOTORS (SFAN-SAF-01), KHASRA NO-459, VILLAGE JAMUI NEAR BAGHEL DHABA, BUDHAR ROAD, SHAHDOL (M.P.) - 484001 PH :9329927451. 9329927458.

UJJAIN

 RUKMARANI (YUG) (3WNA-3W-01), 59/1, DEWAS ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN -456664
 PH :9755512100.

MAHARASHTRA

AHMEDNAGAR

131. KANKARIYA AUTOMOBILES (A5NA-A5-01), SH-60,NEWASA ROAD ,NAGARDEOLE,AHEMDANAGAR,MAHARASTRA -414601 PH :9403961522

AKOLA

132. ASPA BANDSONS (F1NA-F1-01), SHIVANI AIRPORT AREA, AKOLA - MAHARASHTRA (444001) - 444001 PH -942312366

AMARAVATI

 ASPA BANDSONS (F2NA-F2-01), F32/1 MIDC, AURANGABAD NAGPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444607 PH :9130041513

AURANGABAD

134. AUTOMOTIVE MANUFACTURER LTD
(2118-21-01), PLOT NO :- L- 3 / 1, BETWEEN
GARWARE & WOCKHARDT LTD, JALGAON
ROAD, MIDC CHIKALTHANA, AURANGABAD PIN :
- 431006, MAHARASHTRA - 431006
PH :9970499273.

 PAGARIYA AUTO (21NA-21-01), OPP AIRPORT, NEXT TO INDIAN OIL PETROL PUMP, JALNA ROAD, AURANGABAD, MAHARASHTRA - 431006 PH :8888859502.

BARAMATI

 MAHALAXMI AUTO (7RNA-7R-01), BHIGWAN ROAD, SHIV NAGAR, BARAMATI (MAHARASHTRA) - 413102 PH 9850994014.

CHANDRAPUR

137. BARBATE AUTO (H3NA-H3-01), PLOT NO 15-18, OUT OF SURVEY NO 14/4, 15/5, MAUZA BADOLI, NAGPUR CHANDRAPUR HIGHWAY, CHANDRAPUR, MAHARASHTRA - 440025 PH :3380887666.

DHULE

 SEVA AUTOMOBILES (P3NA-P3-01), PLOT NO. F-1, ADDITIONAL DHULE INDUSTRIAL AREA, DHULE, MAHARASHTRA - 424006 PH: 9960090614.

JALGAON

 MANRAJ AUTO (C4NB-C4-01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA – 425003 - 425003 PH :0253-6686666, 9130033951.

KHARGHAR

 SIMRAN MOTORS (AACN-AAC-01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA. - 410209 PH:022-71430900, 9594952348.

KOLHAPUR

 SAI SERVICE (38NA-38-01), 1243/66, E WARD, SHIVAJI UDHYAMNAGAR, KOLHAPUR - 416001 PH:9923208401.

MUMBAI

- 142. SAI SERVICE (05NB-'05-01), JOSEPH CARDIJN TECHNICAL SCHOOL, KHASHABA JADHAV MARG, OFF DR. AMBEDKAR ROAD, DADAR (EAST) MUMBAI, MAHARASHTRA. - 400014 PH :022-48767777
- 143. SHIVAM MOTORS (05ND-'05-01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA. - 400069 PH :02352-220084, 9689533472.
- 144. KTS AUTOMOTORS (0SNH-05-01), UNIT NO A1, PANNALAL COMPOUND, LBS KANTILAL MAGANLAL ESTATE, L.B.S MARG, BHANDUP (W), MUMBAI - 400078 PH :020-30414000, 918865888.

145. SHIVAM AUTOZONE (05NE-05-01), PLOT NO. 1 & 2, RAMCHANDRA LANE EXTN., KANCHPADA, OFF LINK ROAD, MALAD-WEST. - 400064 PH :987093888.

NAGPUR

146. BARBATE AUTO (20NA-20-01), 37/2, MANISH NAGAR, BESA T POINT, BESA ROAD NAGPUR 440025 - 440025 PH :7923600147.

NANDED

9727726004.

147. SEVA AUTOMOBILES (68NA-68-01), AIRPORT ROAD, SANGVI - 431605 PH :7065026520.

NASHIK

 SEVA AUTOMOBILES (37NA-37-01), PLOT B-17, MIDC, AMBAD, NASIK, MAHARASHTRA - 422010 PH:8975762303.

NAVI MUMBAI

- 149. AUTOMOTIVE MANUFACTURER LTD (39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY, NAVI MUMBAI - 400706 PH :9769206120.
- MY CAR (05NK-05-01), PLOT NO- GEN-25 & GEN-25 B/1, TTC INDUSTRIAL AREA, PAWANE, NAVI MUMBAI, MAHARASHTRA (400709) -400709

PUNE

151. KOTHARI WHEELS (19NB-19-01), GATE NO 1605, OLD 1099, KESNAND ROAD, WAGHOLI, TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA - 412207 PH :7721865000.

 EXCEL AUTOVISTA (19NG-19-01), SURVEY NO 98/2AP, NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM, BANER TALUKA, PUNE -411045

PH:0257-2212145.

- 153. SEHGAL AUTO RIDERS (19NE-19-01), SURVEY NO 63/2, SHEWALEWADI, MANJARI BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHITRA - 412307 PH :9184000049.
- WONDER CARS (19ND-19-01), PLOT NO 52/1 BLOCK F2, MIDC PIMPRI, PUNE - 411019 PH :9850094151.
- 155. MAHALAXMI AUTO (19NI-19-01), NEAR SADGURU PETROL PUMP, PUNE NASHIK HIGHWAY, AT KURALI, KHED TALUKA, CHAKAN -410501 PH :9923589214.
- SAI SERVICE (19NC-19-01), SINHAGAD ROAD, NEAR NANDED CITY, VADGAON KHURD, PUNE. (MAHARASHTRA) - 411041 PH :992330833.

RATNAGIRI

157. JAGRUT MOTORS (G3NA-G3-01), 410/6/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612 PH :9820039626.

SHOLAPUR

 CHAVAN MOTORS (B1NA-B1-01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224 PH :8888881314.

THANE

- 159. EXCEL AUTOVISTA (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD, THANE, MAHARASTHRA - 400607 PH :9967331726.
- EXCEL AUTOVISTA (39NA-39-02), NEAR ARIHANT COMPOUND, KALHER, BHIWANDI, THANE - 400607 PH :9967331726.
- 161. MY CAR PUNE- CODO (05NL-05-01), PLOT NO. B-21 & B-24/1, THANE INDUSTRIAL AREA, THANE, MAHARASHTRA - 400604 PH :8104906953.

YAVATMAL

162. HIMALAYA CARS (4MNA-4M-01), PLOT NO. 14, MIDC, YAVATMAL INDUSTRIAL AREA, YAVATMAL - 445001 PH :9011014729

NAGALAND

DIMAPUR

163. PROGRESSIVE MOTORS (32NA-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, - 797115 PH :7669223736.

ODISHA

BERHAMPUR

164. SKY AUTOMOBILES (E2NA-E2-01), PLOT NO 373/2229 & 373/1204, AMABAPUA MOUZA, BRAHMAPUR (ODISHA) - 760007 PH: 7381266000.

BHUBANESWAR

165. NARAYANI MOTORS (04NC-04-01), PLOT NO 140/2004, KHATA NO -1152/364, UNIT-20, JAGAMARA, KHANDGIRI, CHAWAK, BHUBANESHWAR - 751001 PH: 9583001877.

JEYPORE

166. LEGEND CARS (SWNA-SW-01), NH26, OPPOSITE HOTEL HELLO, INDUSTRIAL ESTATE, JEYPORE, ODISHA - 764001 PH:09692883057.

ROURKELA

 ORBIT MOTORS (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041 PH:9165071234.

SAMBHALPUR

 ODYSSEY MOTORS (D4NA-D4-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006 PH :0832-2408800, +91-9881746562.

PUNJAB

AMRITSAR

169. JAYCEE MOTORS (17NC-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501 PH :01815045400, 7539966666.

BHATINDA

 TARA (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB -151001

PH :8437019666.

JALANDHAR

 MARWAHA (35NC-35-01), KHASRA NO - 16450, SITUATED AT RAJA GARDEN, KAPURTHALA ROAD, JALANDHAR CITY. - 144003 PH 9814735707

JALLANDHAR

 LOVELY AUTO (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALANDHAR PUNJAB - 144024 PH:7617571039, 7617571040.

LUDHIANA

- GULZAR (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003
 PH -9814839777
- HOSHIARPUR AUTO (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003
 PH:8872501234
- 175. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (62NH-62-01), OPP. MEDIWAYS HOSPITAL, FEROZPUR ROAD, LUDHIANA - 141015 PH :8872000387
- 176. LOVELY AUTO (62NF-62-01), 287/1, MOTI NAGAR, SHERPUR BYPASS, GT ROAD, LUDHIANA - 141010 PH :9875999161.

MOHALI

 CM AUTO SALES (L1NA-L1-01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI - 160055 PH :9880034555, 9780011459.

PATHANKOT

 PATHANKOT VEHICLEADS (A7NA-A7-01), PLOT NO.-C-30, INDUSTIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023 PH:7527006800.

RAJASTHAN

AJMER

179. NAVNEET MOTORS (B2NA-B2-01), PLOT NO7 -8, RIICO INDUTRAIL ESTATE MAKHAPURA NASIRBAD ROAD, AJMER(RAJASTHAN)-PIN CODE-305002 - 305002 PH:9414149149.

ALWAR

 FORTUNE CAR (F9NA-F9-01), 6TH MILESTONE VILLAGE JATIYANA, OPP. PETROL BEHROR ROAD ALWAR - 301001 PH :9982341741.

BHILWARA

 CHAMPION CARS (E3NA-E3-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001 PH :9001027993.

BIKANER

182. AUDI MOTORS (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD, BICHHWAL INDUSTRIAL AREA, BIKANER 334001 - 334001 PH:9887222786.

CHITTORGARH

 TECHNOY (K9NA-K9-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001 PH:890599239.

JAIPUR

- 184. K P AUTOMOTIVES (11NB-11-01), PLOT NO.3-4,MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION,SIRSI ROAD - 302034 PH:7412059823.
- 185. SATNAM MOTORS (11ND-11-01), D-27, K/L/M, ROAD NO-3, SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA, JAIPUR, RAJASTHAN-302023. - 302023 PH-9649373311.
- 186. PREM (11NC-11-01), PLOT NO- 12,13,14, SUDARSHANPURA INDUSTRIAL AREA, NEAR 22 GODAM, JAIPUR - 302016 PH :8058998123.

JHUNJHUNU

 AUDI MOTORS (FNNA-FN-01), NEAR TVS TWO WHEERLER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001 PH:7970006402.

JODHPUR

- 188. AUDI MOTORS (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001 PH -7300077394
- 189. LMJ AUTO (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1 JODHPUR - 342009
- LMJ SERVICES (65NB-65-02), PLOT NO.-61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001 PH:8094011126.

PH:7412087320.

KOTA

 BHATIA & CO. (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPIA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005 PH :8094011126.

SIKAR

 JAMU (K7NA-K7-01), THAR PETROL PUMP, JAIPUR ROAD, SIKAR - 332001 PH:9414037515.

UDAIPUR

193. TECHNOY (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS , UDAIPUR - 313001 PH :0141 2984568

TAMIL NADU

CHENGALPET

194. AIE CARS (BBSN-BBS-01), NO. 1/7-A, GST ROAD, CHENGALPET – 603001 - 603001 PH:74012 92949.

CHENNAI

- 195. PILLAI & SONS (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117 PH :9994950505.
- POPULAR VEHICLES (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI, TAMILNADU- 600116. - 600116 PH 9842389111
- 197. KHIVRAJ MOTORS (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058. - 600058 PH :9626099999.
- 198. VISHNU CAR (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056 PH :7339359111.
- ABT (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU -600032
 PH 9994444303.

- VISHNU CAR (14NG-14-02), POONAMALLE HIGH ROAD, ARUMBAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056 PH - 7550333622
- KHIVRAJ MOTORS (14NA-14-02), OLD S.NO. 11/1
 2, NEW S.NO.11/2 B, NO.100, NERKUNDRAM VILLAGE, SAIDAPET TALUK, CHENNAI 600107 PH :9962195957.

COIMBATORE

 AADHI CARS (41NB-41-01), OLD KALIAPPA KALYANAMANDAM, PREMISES, KAVUNDAMPALAYAM, COIMBATORE, TAMIL NADU - 627007 PH :9003977577.

 SREE SARADHAMBAL (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. -641004

PH:9790004271.

 JAIKRISHNAA AUTOSALES PVT LTD (41ND-41-01), NO. 656, TRICHY ROAD, NEAR ORTHO ONE HOSPITAL, COIMBATORE, TAMIL NADU- 641012 - 641012 PH 9788850734.

ERODE

 SREE SARADHAMBAL (H7NA-H7-01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011 PH:9786022272.

HOSUR

206. SRI AMMAN CARS (7QNA-7Q-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44,0PP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109 PH :9841033464.

KARAIKUDI

207. MEENAKSHI AUTOZONE (HXNA-HX-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIAPURAM, KARAIKUDI, TAMIL NADU - 630001 PH :9940094881.

MADURAI

 ASIR (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001 PH: 99440 59911.

NAGERCOIL

209. ATHEN CARS (\$5NA-\$5-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU -629003 PH :9751196436.

PONDICHERRY

 SHENBAKA CARS (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMAMBAKKAM, BAHOOR COMMUNE,PONDICHERY - 607402 PH :7338322220.

SALEM

- THRIVENI CARS (A2NA-A2-01), 2/6, KANDHAMPATTY, BYE PASS ROAD, SALEM, TAMILNADU - 636005 PH: 9786022272.
- 212. SM CAR (A2NB-A2-01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM -636010 PH :7094440010.

THANJAVUR

213. PILLAI & SONS (E7NA-E7-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD,

THANJAVUR, TAMIL NADU - 613403 PH :9443264165

TIRUNEVELI

 AADHI CARS (A3NA-A3-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKALPURAM, TRIVANDEUM ROAD, C1 KOKKARAKULAM -627007 PH.7373091461.

TRICHY

 PLA MOTORS (23NA-23-01), TS NO 29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017. -620017
 PH :8110099991.

TRIPUR

 SHASHTI (Y7NA-Y7-01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604 PH :9942903310.

VELLORE

 SRI GANESH CARS (C6NA-C6-01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI, VELLORE, TAMILNADU - 632009 PH:9884722126.

TELANGANA

HYDERABAD

- 218. KALYANI MOTORS (10NE-10-01), SURVEY NO. 184, KARMAGHAT VILLAGE, BESIDE KHARMANGHAT HANUMAN TEMPLE, R.R. DISTRICT, HYDERABAD, TELANGANA - 500079 PH: 9347121212.
- VARUN MOTORS (10NB-10-01), B-54, CO.INDUTRIAL ESTATE, BALANAGAR, HYDERABD, TELENGANA - 500037 PH :8886631496, 8886631499.

- 220. GEM MOTORS (10NH-10-01), D.NO.8-96, SURVEY NO. 128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA. - 500084 PH. 9912345899.
- JAYABHERI AUTO (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032. - 500032 PH:9849103917, 9437061030.
- 222. VARUN MOTORS (10NB-10-02), H.NO. 8-2-120/117/A/2. PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD - TELANGANA - 500033 PH :9885610555.
- 223. SAI SERVICE (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046. -500046 PH:9966377888.
- 224. RKS (10NI-10-01), SY NO:42, PET BASHEERABAD, QUTHBULLAPUR, MEDCHAL MANDAL, HYDERABAD - 500014 PH :9542234567.
- 225. ADARSHA AUTOMOTIVE (10NG-10-01), PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI NAGAR, BALANAGAR, KUKATPALLY, HYDERABAD -500072 PH :9154854949 8897972200.
- ADARSHA AUTOMOTIVE, SHAMSHABAD (10NG-'10-02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA – 501218 - 501218 PH:8297116633.

KARIMNAGAR

 ADARSHA AUTOMOTIVE (N6NA-N6-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001 PH:9847073265.

KHAMMAM

 PARAMSHIVA MOTORS (1GNA-1G-01), SY NO. 507, VELUGUMATLA, VILLAGE, KHAMMAM, TELANGAN - 507318 PH :9848988312.

MAHBUBNAGAR

229. JAYARAMMA AUTO (WPNA-WP-01), CHRISTIANPALLY, BHOOTPOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001 PH :8096990074.

MANCHERIAL

 ADARSHA AUTO (CMNA-CM-01), SURVEY NO-417, BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL, TELANGANA - 504208 PH :9133329709.

NIZAMABAD

 VARUN MOTORS (1HNA-1H-01), 1-51/4/1/D4 MADAHAVA NAGAR, HYDERABAD ROAD, NIZAMABAD, TELANGANA, 503230 - 503230 PH :9542222486.

SECUNDERABAD

- 232. MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDERABAD, ANDRAPRADESH-500020. 500020 PH :98850 01155.
- 233. AUTO FIN (K6NB-K6-01), PLOT NO.6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDERABAD, TELANGANA-500011 PH:8886144551.
- 234. VARUN MOTORS (K6NC-K6-01), VARUN MOTORS, ZND CROSS ROAD, SAINIKPURI, SECUNDERABAD - 500094 PH : 779960094

WARANGAL

 ADARSHA AUTOMOTIVE (D5NA-D5-01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007 PH:8978944414.

UTTAR PRADESH

AGRA

- 236. MADHUSUDAN MOTORS (68NA-66-01), ADJOINING HEMA PETROL PUMP, EIT MANDI, BODLA, AGRA - 282007 PH :6386901181, 6386901188.
- PREM MOTORS (66NB-66-01), KHASRA NO.-655, VILL ARTONI, DELHI-AGRA HIGHWAY, AGRA -282007 PH 3690010839.
- 238. KTL PVT LTD (66NC-66-01), KHASRA NO 246/1, 249/1, 251, KUBERPUR, AGRA. 282006 PH :8449710014.

ALIGARH

- CLML (B6NA-B6-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOL, ALIGARH, UTTAR PRADESH. - 202002 PH:9639775522
- CLML (B6NA-B6-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 -202140 PH: 9358373099.

BARIELY

 CORAL (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BARIELLY, UP - 243001 PH: 9359101010.

BIJNORE

SHAKUMBARI (6DNA-6D-01), 4TH KM.
 MILESTONE, BIJNOR - NAJIBABAD RD, NEAR
 DPS SCHOOL, BIJNOR, UTTAR PRADESH
 246701 - 246701

FIROZABAD

243. DEV MOTOR (DFNA-DF-01), DHOLPURA, NEAR ST. JOHNS CHAURAHA, AGRA ROAD, FIROZABAD - 283203
PH :9045031800.

GHAZIABAD

- 244. ROHAN MOTORS (59NA-59-01), KHASRA NO 46, DELHI MERRUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101 PH :8178839830.
- 245. MSM (JJ IMPEX) (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 - 201003 PH 9990033015.

GORAKHPUR

- 246. SMART WHEELS (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH 273009 PH :8222002147.
- ARBIT AUTO (72NB-72-01), PLOT NO A & B, BUDDH VIHAR YOJNA, PART-B, TARAMANDAL ROAD, GORAKHPUR - 273009 PH:8429526255.

GREATER NOIDA

248. MSM (J.I IMPEX) (T283-T2-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009 PH :9711474930.

HARDOI

 CONCEPT (QENA-QE-01), PLOT NO. 1609 & 1605, GUNGABUX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001 PH :7607696666.

JHANSI

 SURI (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003 PH :7705000558.

KANPUR

251. KTL PVT LTD (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILYWAY COLONY, KANPUR, UTTAR PRADESH. - 208017 PH. 7408409312.

LUCKNOW

- 252. ANAND MOTORS (13NC-13-01), GATA NO. 1062 PARGANA RAJA BIJLI PASI VILLAGE AURANGABAD, SHAHEED PATH (OPPOSITE TO RAMABAI AMBEDKAR MAIDAN), LUCKNOW, UTTAR PRADESH - 226012 PH :7705807552, 9838490490.
- 253. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT NO - 513, VILL HARIHARPUR BIJNAUR, OPP ANSAL API, AMAR SHAHEED PATH, LUCKNOW -227105 PH : 7311190503.
- 254. BRIGHT4WHEELS (13NB-13-01), PLOT NO D10, SAROJINI NAGAR INDUSTRIAL AREA, LUCKNOW. PIN - 226008 - 226008 PH :9151004111.

MATHURA

255. UMA MOTORS (H8NA-H8-01), PLOT NO 222, MAHOLI, NEAR KIRAN HOSPITAL, MATHURA -281004

PH:9997385999.

MEERUT

256. TR SAWHNEY (48NB-48-01), 1183/17 RITHANI, ZONE - A, SECTOR 4 NEAR PETROL PUMP, MEERUT, UTTAR PRADESH - 250103 PH :18002704142

NOIDA

- 257. FAIR DEAL (A1ND-A1-`01), A-107, SECTOR-5. NOIDA - 201301 PH :9810542222.
- MOTOR CRAFT (59NB-59-01), C 42 SECTOR 57, NOIDA, UTTAR PRADESH - 201301 PH :7230029429, 7230000000.

RAIBARIELY

259. KTL AUTOMOBILE PVT LTD (HSNA-HS-01), 1481, NEAR KATHWARA BUS STAND, LUCKNOW RAIBARELI HIGHWAY, HARCHANDPUR, RAIBARELI - 229303 PH.7311190503.

SAHIBABAD

 MSM (J.I IMPEX) (M983-M9-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL AREA, - 201010 PH. 9711474930.

SHAHJHANPUR

 SUMITRA DS (W2NA-W2-01), SH25 , RETI ROAD SHAHJAHANPUR - 242001 PH :9936095228.

VARANASI

 AGR (84NA-84-01), ARAZI NO - 285,286 LUCCHERPUR, PARGANA-ATHGAWA TEHSIL, HARHUA, VARANASI - 221105 PH: 9305646425.

UTTARAKHAND

DEHRADUN

 SHAKUMBARI (57ND-57-01), KHASRA NO. -15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN-248001 - 248001 PH :7895058449.

HALDWANI

264. NAINITAL MOTORS (J6NA-J6-01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR JUALA PRINTING PESS, HALDWANI, UTTARAKHAND - 263139 PH :7467800077, 7467800050

ROORKEE

265. SHAKUMBARI (H2NA-H2-01), 5 KM MILESTONE ,NH-58,ROORKEE-DELHI ROAD ,NEAR HOTEL GODWARI,ROORKEE, UTTARAKHAND - 247667 PH :9634092690, 7500860007.

RUDRAPUR

266. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (U4NB-U4-01), KASHIPUR ROAD, OPPOSITE GREEN PARK COLONY, VILLAGE DIBDIBA, TEHSIL BILASPUR, RAMPUR, UTTRAKHAND -244901 PH:01912465542 9797770257.

WEST BENGAL

ASANSOL

 BEEKAY AUTO (F6NA-F6-01), NH-2, CHANDA MORE, POST KALI PAHARDI, JAMMURIA DISTRICT WEST BARDHAMAN - 713339 PH:9932049425.

COCHBEHAR

 SEVOKE MOTORS PVT. LTD. (BWZN-BWZ-01), NEXA COOCH BEHAR CENTRAL VILL & P.O. -MAHISHBATHAN P.S. - KOTWALI, NH - 31 COOCHBEHAR, W.B. - 734617 - 734617 PH :8016095268.

HOWRAH

 MACHINOTECHNO (X7NA-X7-01), 109, 1, UPPER FORESHORE RD, CHOURA BUSTEE, SHIBPUR, HOWRAH, WEST BENGAL 711102 - 711102 PH :9830081632.

JALPAIGURI

270. PODDAR AUTO (XYNA-XY-01), ASSAM MORE BUS STOP, SH12A, JALPAIGURI, WEST BENGAL 735102 - 735102 PH:8945533002.

KHARAGPUR

 BHANDARI AUTOMOBILES (G7NA-G7-01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301 PH :7603076061.

KOLKATA

- JYOTE MOTORS (06ND-06-01), MIRANIA ROAD, ARUPOTA ON BASANTI HIGHWAY, - 700105 PH:9074158220.
- MACHINOTECHNO (06NG-06-01), 98/A/2 BT ROAD, P.S. - BARANAGAR, P.O. - ISI BT ROAD, KOLKATA, WEST BENGAL – 700090. - 712250 PH :6292283744.

SREERAMPORE

 STARBURST (BBTN-BBT-01), NEAR ALLAHABAD BANK, MOLLARBER, SERAMPORE. - 700090 PH:9830081672.

ANDHRA PRADESH

CUDDAPPAH

1.## SIVAJI MOTORS (3275), BESIDES PADMASHALI KALYANA MANDAPAM, MADRAS ROAD, KADAPA-516002, ANDHRA PRADESH,

PH :516002-9849113189.

SREE VENKATESWARA AUTO. (1030),

SANKARA PURAM, CUDDAPAH (A.P.).,

PH :516002-9704209620.

GUNTAKAL

3.## S. MAHABOOB AUTOMOBILES (4075), ALUR ROAD, GUNTAKAL-515802, , PH :515802-9440208312

GUNTUR

4.## S. S. MOTORS (4946), OPP. JKC COLLEGE, JKC COLLEGE ROAD, GUNTUR-522006, ANDHRA PRADESH, PH :522006-9848936363.

KAKINADA

5.## SATISH AUTO CARE (5038), BEHIND KALPANA THEATRE, BEACH ROAD KAKINADA, DISTRICT EAST GODAVARI, ANDHRA PRADESH, PH: 533005-9848313599.

6.## SRI SHIRDI SAI TECHNOCRAFTS (1459).
FLAT NO 36/2, I.D.A., RAMANAYYAPETA,
BESIDE MAHINDRA SHOW ROOM, OPP:
BHAVANI CASTING ROAD,
KAKINADA-533005,
PH: 533005-9848633336.

KAVALI

7.## KAMAL MOTORS (3842), 10-15-43/J3A OPP LIC, TANK RAOD, KAVALI, PH :524201-9440928888.

KURNOOL

8.## SRINIWAS AUTO GARAGE (5170), KALLUR ROAD, KURNOOL, DISTRICT - KURNOOL, ANDHRA PRADESH, PH :518002-9440244660.

MACHILIPATNAM

9.## SRI MARUTI MECHANICAL WORKS (4172), D.NO 4-121, PLOT NO 26,27,, POTEPALLI INDUSTRIAL PARK, MACHLIPATNAM-521002, PH: 521002-9440538012.

MANDAPETA

10.## MODERN MARUTI CARE (4866), D.NO. 4-1-59/2, MAIN ROAD, MANDAPETA-533309, DISTRICT-EAST GODAVARI, ANDHRA PRADESH, PH 533309-9133198494

MATHURAWADA

11.## ANY TIME SERVICE CENTRE (4860), BESIDE ELECTRICAL SUBSATION, MADHURAWADA - 530041, IDSTRICT VISAKHAPATNAM, ANDHRA PRADESH, PH:530041-8977799888.

NAGARI

12.## PUJITHA SERVICE CENTER (5872), TIRUPATI ROAD, NAGARI-517583, DISTRICT-CHITTOOR, ANDHRA PRADESH, PH: 517583-9966106128.

NANDYAL

MARUTI MOTORS (2635), PLOT NO 428, NH-18, NEAR RAILWAY GATE, NANDYAL-518501, PH: 518501-9440554617.

NELLORE

4.## MARUTI AUTO SERVICE STN. (2620), 16/796
 SANKARA AGRAHARAM, NELLORE-524 001
 (A.P),
 PH :524001-98858 81905.

5.** MARUTI MOTORS (176), 16-3-995, MINI BYPASS ROAD., RAMALINGAPURAM, NELLORE-524 003,(A.P.), PH :524003-9440278243.

PATTIKONDA

16.## ROYAL MOTORS (5776), ADONI ARTS & SCIENCE, COLLEGE ROAD ADONI,PATTIKONDA-518302, DISTRICT-KURNOOL, ANDHRA PRADESH, PH .518302-9866362847.

PRODDATTUR

17.## SRI RAM MOTORS (3642), 189 INDUSTRIAL AREA, NEAR SRI LAKSMI NAGAR, MYDUKUR ROAD, PRODDATUR (A.P.), PH :516360-9666890525.

RAJAHMUNDRY

18.## MARUTHI MOTORS (1257), D.NO 88-30-04, OPP I.T.C. GADALAMMA NAGAR, NH-16, RAJAMAHENDRAVARAM -533107, PH :533107-9848253434

SRIKALAHASTI

19.## SUNDEEP CARS (5972), 16/769,SRI RAM NAGAR COLONY, SRIKALAHASTI-517640, DISTRICT-CHITTOOR, ANDHRA PRADESH, PH: 517640-9848294869.

TENALI

HIMAJA MARUTI SERVICE STATION (2828), LECTURER'S COLONY, GIRIJA HOSPITAL ROAD, GANGANAMMAPET, TENALI-522 201 GUNTUR DIST. (A.P.), PH :522201-9849715727. 21.## RAHUL MOTORS (5157), D.NO. 18-3-4BITRA SRI RAMULU STREET, BEHIND TELEPHONE EXCHANGE SALIPET, TENALI, ANDHRA PRADESH, PH. 522201-9490187453.

VISAKHAPATNAM

22.## SIRI AUTOMOBILES (5232), PLOT O 94/A IDA E BLOCK, AUTO NAGAR GAJUWAKA, VISHAKHAPATNAM, ANDHRA PRADESH, PH :530012-9963296667.

23.## SRINIVASA AUTO GARAGE (5440), OPP.
KANTI ROAD., NEAR RAYS PETROL PUMP VISHAKHAPATNAM, DISTRICT VISHAKHAPATNAM. ANDHRA PRADESH.

PH:530031-9912688943.
VISAG AUTO SCANS (461), 49-52-1/4/2, OPP
HNR VIHAR APPARTMENTS, SANTHIPURAM,
SANKARMATAM ROAD,

VISAKHAPATNAM-530016, PH:530016-9246625885.

VIZIANAGARAM

 VIKRAMA AUTOMOBILES (4621), 17-13-4 TEMPLE STREET, VIZAINAGARAM - 531 202 (A.P.), PH :535003-9440192224.

ARUNACHAL PRADESH

ALONG

.## BANNU MOTORS (1744), SIYOM MARKET, ALONG, WEST SIANG DISTT., (ARUNACHAL PRADESH), PH.791001-9436056096/8258834061.

BOMDILA

77.## GURU MOTORS (3921), BIRPUR, RUPA, ARUNACHAL PRADESH 790003, PH :790003-7640898278.

NIRJULI

28.## SANGO SERVICE CENTRE (5742), NH-52,NIRJULI - 791110, DISTRICT-PAPUMPARE, ARUNACHAL PRADESH, PH: 7911110-9436052480/8974454448.

TAWANG

29.## TAWANG MARUTI SERVICING STATION (4255), OLD BAZAR LINE, P.O. & P.S., TAWANG, ARUNACHAL PRADESH, PH:790104-9402493456.

ZIRO

30.## HILLS AUTO AGENCY (3922), POLICE RESERVE & PETROL PUMP ROAD, HAPOLI BAZAR P.O. ZIRO, DISTT. LOWER SUBANSIRI, ARUNACHAL PRADESH - 791 120, PH : 791120-9436047232.

ASSAM

BADARPUR

31.## MARUTI CAR PLAZA (3635), NEAR INDUSTRIAL AREA, S.T. ROAD, BADARPUR, DISTT. KARIMGANJ (ASSAM) PIN-788 806, PH:788806-9854970591.

BISHAWANATH CHARIALI

BINA AUTOMATION (3677), P.O.
 BISHAWANATH CHARIALI, DISTT.
 SONITPUR, ASSAM-784 176,
 PH. 784176-9957309744.

 DISHANG DONE (1058), 52 N.H.,
 BISHWANATH CHARIALI-784176, DISTT.
 SONITPUR, ASSAM,
 PH. 784176-9854004161.

34.## BINA AUTOMATION ()PH :-. BOKAJAN

35.## SREE GANESH MOTORS (6040), SUKHANJAN SUPER MARKET,P.O:BOKAJAN(C.F.), DISTRICT KARBI ANGLONG , ASSAM ,

PH :782480-9435167138.

BOKAKHAT

36.## GOENKA AUTOMOBILES (2878), P.O.
BOKAKHAT, DISTT. GOLAGHAT, ASSAM-785
612,
PH.785612-9854048910.

DHALIGAON

37.## ADHIKARI MOTOR WORKS (4049), P.O. DHALIGAON, DIST-BONGAIGAON, ASSAM-783385, PH :783385-9435020938.

DHEMAJI

.## NARAH AUTOMOBILES (3852), C/O BLUE HILL COUNTER, P.O. DHEMAJI, DISTT. DHEMAJI, PIN-787 057 (ASSAM), PH:787057-9954390916.

DHUBRI

 BRAHMAPUTRA MOTOR SERVICING STATION (3127), G.T.B ROAD, DHUBRI-783 301, (ASSAM), PH :783324-8876798739/9101176148.

DIBRUGARH

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs
C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023)

40.* GEE DEE AUTO SERVICE (953). JHALUKPARA, DIBRUGARH-786 001, ASSAM, PH:786001-9435131119.

MEHBOOB AUTOMOBILES & TYRE SERVICES (1760), CHOWKIDINGHEE, NEAR STATE TRANSPORT, DIBRUGARH-3. PH:786005-9854432207.

DIGROI

42.** GAURI AUTOMOBILES (3760), MULIABARI, DIGBOI 786 171. . PH:786171-9435137556.

DOOM DOOMA

S K AUTO CARE (3962), UCHAMATI, NATIONAL HIGHWAY, DOOM DUMA, ASSAM 786151

PH:786151-9435135876.

GOALPARA

BHARAT ENGINEERING WORKS (969), PO -BALDMARI, AGIA ROAD, GOALPARA (ASSAM)-783 102 PH:783102-9864767777.

GOLAGHAT

45.## KAKOTI MOTOR WORKS (1074), NEW AMOLAPATTY, RANGPUR, P.O. GOLAGHAT-785 621, DISTT, GOLAGHAT (ASSAM), PH:785621-9435053663.

GOSSAIGAON

NARZARY AUTOMOBILES (4544), NH-31C, HABRUBIL, GOSSAIGAON, DIST KOKRAJHAR, ASSAM-783360. PH:783360-9435109765.

GUWAHATI

MONO MOTOR WORKS (966), BAMUNI MAIDAN, GUWAHATI-781 021, , PH:781021-9864186600.

HAILAKANDI

RONOK AUTOMOBILES (5978), LALA ROAD.NEAR CIVIL HOSPITAL. HAILAKANDI-788151, DISTRICT-HAILAKANDI,

:788151-8723032380/9707428563/9401960215.

HOJAI

PRAMAN MOTORS (5730), WARD NO. 12. HOLDING NO. 14, COLLEGE ROAD, HOJAI, ASSAM-782435, PH:782435-9954369700.

JONAI

50.## BOROOAH MOTORS (4545), NH-515, MURKONG SLEEK, DIST, DHEMAJI. JONAI-787060, ASSAM PH:787060-9864590237

KARIMGAN.I

51.## S D AUTOMOBILE (4931), SILCHAR ROAD, KARIMGANJ - 788710. . PH:788710-8135002919/9435074975.

LUMDING

BEDI MOTORS (5827), MAIN ROAD, NORTH 52 ## LUMDING, LUMDING-782447, DISTRICT -NAGAON, (ASSAM), PH :782447-9957333991

MANGALDAI

PRIYAM AUTOMOBILES (2424), NH 52 COLLEGE ROAD, MANGALDOI, ASSAM. PIN-784 125

PH:784125-9401148730/9854209905.

MARGHERITA

VIRDI MOTOR WORKS (955), MISSION ROAD, P.O. MARGHERITA-786 181, DIST. TINSUKIA. (ASSAM). PH:786181-8011164932

MARIANI

VASKAR AUTOMOBILES (5237), NEAR NST TINALI. P.O. :MARIANI, DISTRICT - JORHAT, ASSAM. PH:785634-9508486813.

MORANHAT

CHINAKI SERVICE STATION (2973), (MARUTI AUTHORISED SERVICE STATION), NATUN NAGAR A.T. ROAD, MORANHAT-785 670, (ASSAM). PH:785670-9401512821.

MORIGAON

PRAGATI MOTORS (5273), MORIGAON TOWN, WARD NO.1, BHATBOR-, DOLON PATH P.O.: MORIGAON DISTRICT -MORIGAON, ASSAM, PH:782105-9435064356

NAGAON

DAS MARUTI MOTOR WORKS (3734). NAGAON -782001, , , (ASSAM), PH:782002-9435360246

NAI BARI

B.R.K. AUTOMOBILES ENGINEERING WORKS (2838), HAJO ROAD, NALBARI-781 335. (ASSAM). PH:781335-9954895264

NAMRUP

60.## RAJ ENTERPRISES (3849), NAMRUP INDUSTRIAL ENTERPRISES SONARI TINIALI, PARBATPUR, NAMRUP-786 623 (ASSAM). PH:786623-9854135646.

NORTH LAKHIMPUR

GREEN LAND MARUTI WORKS (2974), NEAR GURUDWARA, NH 52, NORTH LAKHIMPUR-787 001, (ASSAM), PH:787031-9435085310.

PATHSALA

62.## USHA AUTOMOBILES (4240), N.H 31.PATHSALA-781325, DISTRICT-BARPETA. ASSAM.

SILAPATHAR

BORLUIT MOTOR (5743), KHANAMUKH, P.O/P.S -SILAPATHAR, DIST-DHEMAJI, ASSAM PIN-787059 PH:787059-9954635182.

PH:781325-9401310431.

SILCHAR

CARDROME (1559), 2ND LINK ROAD JUNCTION, SONAI ROAD (M H C ROAD), SILCHAR-788 006, (ASSAM), PH:788006-9435071212.

TEZPUR

POOJA MOTOR WORKS (4373), N.T. ROAD. MURATETLI, TEZPUR-784001, ASSAM, PH:784001-9954707812.

TINSUKIA

AUTO MAKERS (934), MAKUM ROAD, UDYOG NAGAR, TINSUKIA -786 146 (ASSAM). PH:786146-9435035341.

TITABAR

SHANKAR AUTO WORKS (5174), C/O:SHIV SHAKTI AUTO WORKS BALAJI. MARKET TITABAR CHARIALI TITABAR, DISTRICT -JORHAT, ASSAM, PH:785630-9435772479/9435051539

UDALGURI

68.## RENU MOTORS (4543), WARD NO. 2, U.T. ROAD, UDALGURI TOWN, UDALGURI-784509, ASSAM, PH:784509-9854348875.

BIHAR

ARRAH

ANJALI ENTERPRISES (5533), ARRAH -PATNA MAIN BYPASS ROAD, NH-30. AHIRPURWA, OPPOSITE SURYA MANDIR, ARRAH, BIHAR -802232. PH :802232-9304910843

AURANGABAD (BIHAR)

70.## K R N AUTOMOBILE (2242), NEW G.T. ROAD, (NH-2), AURANGABAD-824 101, (BIHAR), PH:824101-9304930657

BEGUSARAI

71.## K.B. MOTORS (4768), NH-31, SINGHAUL. POKHAR, BEGUSARAI-851134, BIHAR, :851134-7870041951/8271507870/9835214115

72.* NATIONAL AUTO WORKS (1536). INDUSTRIAL AREA BARALINI BEGUSARAI-851 122. PH:851122-9973381733.

BHAGAI PUR

RUPRA AUTOMOBILES (1577), EAST OF AIRPORT, BHAGALPUR-813 210, P.O. BAHADURPUR, (BIHAR). PH:813210-9334385521

BIHAR SHARIF

SARVADAY ENGG. & AUTO SER (1549). INDUSTRIAL ESTATE, RAMCHANDRAPUR, BIHARSHARIFF (NALANDA), PH:803101-9334672919.

CHAPRA

PRASAD AUTOMOBILES (1974), BHAGWAN BAZAR, CHAPRA-841 301, (BIHAR), PH:841301-9431216362/8092627210.

DARBHANGA

SINGH MARUTI CARE (2277). RAJKUMARGANJ, P.O. LALBAGH, DARBHANGA-846 004, (BIHAR), PH:846004-9431293796.

GAYA

AUTO CARE (3027), DURGA BARI, HARIDAS CHATTERJEE LANE, NEAR SAINT PAUL SCHOOL GAYA-823 001 (BIHAR). PH:823001-9102060955.

HAJIPUR

78 ## ALFA AUTO (5454), PASWAN CHOWK, NH-13, HAJIPUR, DISTRICT - VAISHALI, BIHAR - 844101, PH:844101-9431327965/8092258357

HI-TECH AUTOMOBILE (3123), GANDHI SETU PATH, N.H.-19, HAJIPUR, VAISHALI (BIHAR) PH:844101-9835044502.

KAHALGAON

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass: Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

80.## MAHA GAURI ENTERPRISES (5822), NTPC ROAD, GANGANAGAR CHOWRATHIYASTHAN, KAHAL GAON-813203, DISTRICT-BHAGAL PUR, BIHAR, PH: 813203-9431463558.

MADHEPURA

81.## KRISHNA AUTOMOBILES (2639), SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR), PH :852213-9430583338.

MADHUBANI

22.## VIDYAPATI AUTOMOBILE (4234), BHAUARA, GANGASAGAR, MADHUBANI, BIHAR -847212,

PH:847212-9471648158/9304399511.

MUNGER

3.## SUN BEAM ENGG WORKS (1533), 150 BETWAN BAZAR, NEAR KHANKAH, P.O.& DISTT. MUNGER, BIHAR - 811201, PH :811201-9931962944.

MUZAFFARPUR

84.** DYNAMIC MARUTI SERVICE CENTRE (1163), HARI SHARAN MARG, AMGOLA, POST OFF RAMNA, MUZAFFARPUR-842 002, PH

:842002-9431013057/9335003526/938634595.
PERFECT MOTORS (3465), NEAR CHANDNI CHAUK, JHITKAIYA, POST: MIT PS: BRAHAMPURA, MUZAFFARPUR-842 003 (BIHAR), PH :842003-9835007407.

PATNA

86.** CAR SCANNER (1552), OPP. BATA, KANKAR BAGH COLONY, PATNA-800 020, PH :800020-9431016342.

87.** GOOD WRENCH SERVICES (3864), NH 30, BETWEEN BHARAT PETROLEUM & HP PETROL PUMPS, 1 KM WEST OF "O" MILE, ASHOCHAK, NANDLAL CHAPRA, PATNA - 800007, PH :800007-7277772777.

88.## MARUTI MAINTAINER (4842), PLOT NO 73, MAIN ROAD, KANKARBAGH. NEAR RAJENDRA NAGAR OVERBRIDGE, PATNA, BIHAR-800020.

PH:800020-7903741541.

MOHINI AUTOMOBILES (1049), BEHIND RESERVE BANK OF INDIA, EXHIBITION ROAD, PATNA-800 001, PH:800001-9431094340/8987379073.

90.** TIRUPATI AUTO (1956), ASHIANA MORE, BAILEY ROAD OPPOSITE UNION BANK, RAJABAZAR, PATNA-14, PH :800014-9835050292/8539077831.

PURNEA

91.## AUTO INDIA (3026), SRI DHAM MANDIR, PURNEA CITY, PURNEA 854302, PH :854301-9470204501.

SASARAM

92.## TRIPTY CAR SERVICE CENTRE (5535), NEAR RELIANCE PETROL PUMP, G.T. ROAD,NH-2,SASARAM-821115, DISTRICT-SASARAM, BIHAR, PH: 821115-9934792421.

SITAMARHI

3.* SITAMARHI AUTO CARE (6050), INDUSTRIAL AREA,RAJOPATTI, PO.SITAMARHI-843302, DISTRICT-SITAMARHI, BIHAR, PH: 843302-9430012437.

CHANDIGARH

CHANDIGARH

94.** CAR CLINIC (179), PLOT NO-81, INDUSTRIAL AREA, PHASE-II, CHANDIGARH, PH:160002-9417216782.

95.## HI-TEK MOTORZ (4743), PLOT NO. 658, INDUSTRIAL AREA, PHASE-1, CHANDIGARH, PH :160002-9872567868.

96.## RATTAN MOTORS (1155), SECTOR 23-C, CHANDIGARH-160 023, , PH :160023-9814008335.

CHHATTISGARH

AMRIKAPUR

97.## MARUTI AUTO CARE (4839), KHARSIA NAKA, AMBIKAPUR -497001, DISTRICT-SURGUJA, CHATTISGARH, PH -497001-9425256087.

JAGDALPUR

98.## VISHWAKARMA AUTOMOBILES (4467), RAJMAHAL PARISAR, BAHAMBERS OF COMMERCE ROAD, JAGDALPUR, CHHATTISGARH, PH:494001-9753300033.

JAMNIPALI

99.## AUTO CARE (3823), 203, J P COMPLEX SADA COLONY, JAMMIPALI-495 450, TEH. KATHGHORA DIST. KORBA (CHATTISGARH), PH :495450-7587399102.

KORBA

100.## AUTO SELF SERVICE (8940), RAILWAY STATION CANAL ROAD, NEAR SUNALIYA RAILWAY CROSSING, MURARKA GALI, KORBA, CHATTISGARH -495678, PH 496578-929495001

MANENDRAGARH

101.## SHARMA AUTO CENTRE (5354), MAIN ROAD - MANENDRAGARH, DISTRICT - KOREA , PIN - 497442, CHHATISGARH, PH .497442-7771011802.

RAIPUR

DELHI

102.## SHIVAM CAR SERVICES (4774), BILASPUR ROAD, KHAMTARAI, RAIPUR-492006, CHATTISGARH, PH :492006-9826192574.

DELHI

103.* AAPKA KARKHANA (MOTORS) PVT. LTD. (869), 62/I POSANGIPUR MAIN MARKET, A-3 BLOCK JANAKPURI, NEW DELHI-58, PH :110058-9811034869.

104.## ANAND MOTORS (4471), B-27, G.T. KARNAL ROAD, INDUSTRIAL AREA, NEW DELHI-110033.

PH :110033-9582379699.

05.** A-ONE AUTOMOBILES (3362), 487/35
NATIONAL MARKET, PEERAGARHI,
DELHI-110 087,

PH :110087-9810257472.

106.## ASHA AUTOMOBILES (850), A-2 CHOTTEY
LAL PARK, NAJAFGARH ROAD, OPP.KIRTI
NGR.P.O, NEW DELHI-15,
PH :110015-981487898.

107.## AUTO ENGRS.SERVICE STN. (8023), OPP.MODEL TOWN, DERAWAL NAGAR, DELHI-9, PH:110009-9811137929.

D8.* AUTO POINT SERVICE (1267), 70B RATTAN PARK, OPP. RAMESH NAGAR, NEW DELHI-110 015,

PH :110015-9958062220.

AUTOTECH ENGINEERS (4551), PLOT NO.
20-24, MATIYALA VILLAGE, SECTOR-3,
NEAR DPS DWARKA, NEW DELHI-110075,
PH :110075-9811608008.

110.## BASANT MOTORS (8003), 78 TOLSTOY LANE, BEHIND SCINDIA HOUSE, NEW DELHI-110 001,

PH :110001-9811522266.

111.## BHAGIRATHI MOTORS (4737), PLOT NO. 153/543, POOTH KHURD, DELHI-110039, PH :110039-9810804556.

112.## BHASIN SERVICE STATION (830), DR.K.S.KRISHNAN ROAD, NEAR PUSA GATE, NEW DELHI-110 012., PH:110012-9971977992.

BRIGHT MOTORS (P) LTD. (885), C-263
PEERAGARHI, OUTER RING ROAD, DELHI110 087,

PH::110087-9810203018.

DRIVE WELL SERVICE STN. (866),
1/486,G.C.S. COMPLEX,MAIN G.T. ROAD
DILSHAD GARDEN,NEW DELHI-110095
DELHI
PH::110095-9811020603.

115.## ENGINEERS SERVICE STATION (834), SHRI AUROBINDO MARG, (SAFDARJANG AIRPORT), NEW DELHI-110 003, PH :110003-9654262692.

116.## EXCEL AUTOMOBILES (3342), PLOT NO. 78, BAGDOLA VILLAGE, SECTOR 8, DWARKA, NEW DELHI-110 077, PH :110077-7011765194

117.* EXCLUSIVE AUTOMOBILES PVT. LTD. (3546), 98 MANGOLPUR KALAN, SECTOR-2 NEAR JAIPUR GOLDEN HOSPITAL, ROHINI, DELHI-110 085, PH :110085-9910782127.

118.## GLOBE SERVICE STATION (3631), 18TH KM MATHURA ROAD, BADARPUR, NEW DELHI-110 044, PH : 110044-9818630354

119.## HUNDRED PERCENT FILLING & SERVICE STATION (4939), LSC, SECTOR-9, OPP. NHAI, DWARKA, NEW DELHI-110075, PH:110075-9910586999.

120.## IMAGE (2561), IOC PUMP, NEAR SAMACHAR APT. OPP. KIRTI APT., MAYUR VIHAR PHASE-I EXT., DELHI-110 091, PH :110091-9312082213.

121.** R S AUTOMOBILES (273), 111/9 KISHANGARH, OPP. CNG PUMP NEAR SPYM INSTITUTE, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI – 110070, PH:110070-9540944009.

22.** KUMAR AUTOMOBILES (855), B-281 OKHLA INDUSTRIAL AREA, PHASE-I, NEW DELHI-110 020, PH :110020-9810001625.

** NAVEEN AUTOMOBILES (4934), 37, PATPARGANJ INDUSTRIAL AREA, NEW DELHI-110092, ,

PH:110092-9911278537.

**NORTHERN SERVICE STATION (337), SARAI

BASTI, ROAD NO.40, OPP. SHASTRI NAGAR, DELHI-35, PH:110035-9213710643.

KUKDA

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023)

125.** P R G MOTORS (365), A-99.103CH.TEKCHAND MARKET, GANESH NAGAR - TILAK NAGAR, DELHI-110 018,

PH:110018-9711196811.

QUTAB SERVICE STATION (8078),

MEHRAULI ROAD. NEW DELHI-110 017.

PH:110017-9811021862.
127.** RAJINDRA SERVICES P.LTD. (826), B-55
G.T.KARNAL ROAD, INDUSTRIAL AREA,
DEI HI-110 033

PH :110033-9899580820.

128.## ROHAN SERVICES (5444), PLOT NO:125 VILLAGE POCHANPUR, SECTOR - 23 DWARKA, DISTRICT - DELHI (WEST), DELHI, PH:110075-9911180827.

129.* SATYA SERVICE STATION PVT. LTD. (3625), L-BLOCK HARI NAGAR, JAIL ROAD, NEW DELHI-64.

PH:110064-9873461414.

130.** SEVEN HILLS AUTO.(P)LTD. (848), D-20/1 OKHLA INDUSTRIAL AREA, PHASE II, NEW DELHI-110 020.,

PH:110020-9811037954. SHALIMAR AUTOMOBILES PVT. LTD (871),

C-919 WAZIRPUR INDUSTRIAL AREA, ASHOK VIHAR CROSSING, DELHI-110052, DELHI,

PH:110052-9811171489.

132.## SHIKHAR AUTOMOBILES (5546),
A-2/1CHOTTEY LAL PARK,SHIVAJI MARG,
OPP KIRTI NAGAR_METRO PILLAR
NO.341,NEW DELHI-110015, DISTRICT DELHI, DELHI,
PH :110015-9810047047.

133.## SINTEX SERVICE STATION (777), 883.RITHALA INDUSTRIAL AREA,, FIRNI NALA ROAD,, DELHI, -85, DELHI, PH: 110085-9868030802.

134.## SRI BALAJI AUTOMOBILE (8038), KHASRA NO.33, 13/2-12 MAIN BAWANA ROAD, SAMEYPUR (NEAR DELHI COLLEGE OF ENGG.), DELHI, PH :110085-9811039601.

135.## SRI SAI AUTO ENGINEERS (8074), 487/59 PEERA GARHI, INDUSTRIAL AREA, DELHI, PH :110087-9650531612

136.## WIG AUTOMOBILES (8012), D-3 S.M.A CO-OP, INDL. ESTATE, (OPP. JAHANGIR PURI CHOWK), G.T. KARNAL ROAD, DELHI-110 033,

137.## YASHWANT PLACE SER.STN. (8022), AFRICA AVENUE, (OPP.CHANAKYA CINEMA), NEW DELHI-21, PH :110021-9868255788.

PH:110033-9811297607.

GOA

BICHOLIM

138.## SHREE GURUKRUPA AUTOWORLD (1249), PLOT NO.76, , BICHOLIM, GOA-403 529, PH :403529-9422057272.

CURCHOREM

139.## VIPUL AUTOMOBILES (5376), PLOT NO.7,8,9,KAKODA INSUSTRIAL ESTATE, KAKODA CURCHOREM, DISTRICT - SOUTH GOA, GOA, PH. 403706-9422018746.

KUNDAIM

40.* VIKAS ENGINEERING WORKS (4953), BHOMA, KUNDAIM, GOA-403107, PH:403107-9823780335.

MAPUSA

141.## SARDESAI AUTOMOBILES (2176), 194, GAUNSAWADA, , NEAR MILAGRES CHURCH, MAPUSA, GOA-403 507, PH :403507-9764448741.

PONDA

 DHAVLIKAR AUTOMOBILES (2041), NO.5 TIP TOP MANSION IV, INDIRA NAGAR, DHAVALI, PONDA, GOA-403 401, PH:403401-9890669879.

VERNA

143.* LUBRICARE SERVICES (261), 7-D GOULLOY, NH.17 NUVEM, SALCETE, GOA-403 601, PH:403601-9822124376.

GUJARAT

AHMEDABAD

144.* AUTOWAY (125), MANGALYA COMPLEX, NEAR ANJALI CINEMA CROSS ROAD, BATTHA, AHMEDABAD, PH :380007-9825016888.

145.## DAHISON MOTORS (143), NEAR MANAV MANDIR, DRIVE IN ROAD, AHMEDABAD-380 052.

PH:380052-9898096242.

146.## MEGHDOOT MOTORS (3437), MASONIC LODGE COMPOUND, SHAHIBAUG ROAD, AHMEDARAD-4

PH :380004-9825972345.

POKAR AUTO REPAIRERS (2479), NEAR UNION CO. BANK, SAIJPUR BOGHA, NARODA ROAD, AHMEDABAD-382 345, PH :382345-9428608515.

148.* RAJAN MOTORS (2873), C/0 M/S. SUPER SERVICE STATION, 79/80 JAGABHAI PARK, RAM BAUG MANINAGAR, AHMEDABAD-380 008, PH:380008-9825972345.

F

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

49.** SPEED AUTO CARE PVT. LTD (5524), NH-8,VIRAT NAGAR AHMEDABAD, DISTRICT - AHMEDABAD, GUJARAT, PH :380023-9979992779.

AMRELI

50.* CAR CARE CENTRE (2734), PATEL GARAGE, CHAKRAGADH ROAD, AMRELI-365 601, (GUJARAT), PH:365601-9825422922.

151.* KHODIAR MOTORS (3029), GAVADKA ROAD, AMRELI-365 601, (GUJARAT), PH :365601-9825672657.

ANAND

 PATEL TRACTOR COMPANY (2221), (SERVICE DIVISION), BEHIND SUNIL CHAMBERS, STATION ROAD, ANAND-388 001, PH :388001-9925534494

153.## SHAKTI MOTORS (2226), OPP. J.K. PARK, NATIONAL HIGHWAY NO.8, P.O. VAGHASHI-388 320, TA: ANAND DISTT. KHEDA.

PH:388320-9825792999.

ANJAR

154.## CAR AGE (5542), PLOT NO.11, MAHATMA NAGAR-1,ANJAR-, GADHPADAR ROAD,NR MAHAKALESHWAR, MAHADEV MANDIR,ANJAR , GUJARAT, PH :370110-9427216886.

BARDOLI 155 ** PC

POOJA MOTORS (361), NEAR GIDC, SURAT ROAD, BARDOLI-394 601, (GUJARAT), PH :394601-9825762621.

BHARUCH

56.* NEW MARUTI MOTORS (5156), 9/16 AKASH GANGA.B/H CNG PUMP, OLD NH -8. BHOLAV , DISTRICT - BHARUCH, GUJARAT, PH :392001-9898611424.

BHAVNAGAR

157.## VIKRAM MOTOR GARAGE (127), TAKHTESHWAR PLOT, NEAR CHANDRA BHUVAN, BHAVNAGAR - 364 002., PH :364002-9427145452.

BHUJ

158.* ASHA MOTORS (3629), LAL TEKRI, HOSPITAL ROAD, BHUJ-370 001, (GUJARAT), PH:370001-9727499383.

BILIMORA

159.## PATEL AUTOMOBILES (4030), DANDEKAR COMPOUND, GANDEVI ROAD, BILIMORA, PH :396321-9824123875.

BORSAD

160.## SUMAN MOTORS (3863), NEAR NISHRAYA CROSSING, BHARAN ROAD, BORSAD, DISTT. ANAND, PH :388540-9825021960.

CHAND KHEDA

81.* BALVINDER AUTOMOBILES (2528), PLOT NO.202/2, NATIONAL HIGHWAY NO.8, CHAND KHEDA, DISTT. GANDHI NAGAR-382 424 (GUJARAT), PH :382424-9924016000.

CHIKHLI (GUJ.)

162.## INAL MOTORS (3929), POST MAJIGAM, CHIKLI BILIMORA ROAD, DISTT NAVSARI, PH :396521-999033773. 163.## SHREE AMBICA MOTORS (2663), KUNDI

FATAK, NEAR ADARSH NURSERY, N.H.8, CHIKHLI DISTT. VALSAD (GUJARAT)-396 001, PH:396001-9825131520.

PH :396001-9825131520

DAHOD

164.* CAR SEVA (2438), SAINT STEPHEN SCHOOL ROAD, GODHRA ROAD, DAHOD. PIN-389151, PH: 389151-9426469122.

DAMAN

165.## CAR ZONE (4358), SURVEY NO. 70/3, VARKUND, OPP VEERA DA DHABA, VAPI DAMAN ROAD, DAMAN-396210, PH :396210-9824184449.

166.## TOP GEAR (5469), DAMAN-KUNTA ROAD.KUNTA DAMAN-396210, DISTRICT -UNION TERRITORY , GUJARAT, PH :396210-9825631264.

DEESA

67.## VAKHARIA MOTORS (3970), G L PADIAR COMPLEX, PALANPUR PATHAN HIGHWAY, OPP. RAJMANDIR TALKIES, DEESA, PH:385535-9377728841.

DHARI

168.## GURUKRUPA MOTORS (5876), NR.
NARMADESHWAR MAHADEV TEMPLE,
DHARI,AMRELI ROAD,DHARI-365640,
DISTRICT-AMRELI, GUJARAT,
PH: 365640-9825374658.

DHORAJI

169.## UNIVERSE AUTO (5837), SARDAR CHOWK, DHORAJI-360410, DISTRICT-RAJKOT, GUJARAT, PH :360410-9727714643.

GANDHI NAGAR

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

170.* LABH MOTORS (4527), PLOT NO - B - 206+207 ,, GIDC, SECTOR -25,, GANDHINAGAR GUJARAT, PH :382024-9825020030.

171.* RIDDHI MARUTI(A DIVISION OF SHREE ARBODA PVT. LTD (2151), E-19/10 G.I.D.C. SECTOR 26, NEAR K-7, GANDHINAGAR-382 044,

PH : 38204-9825041331. 172.## SHITAL MOTORS P.LTD. (134), 304 G.I.D.C., SECTOR-28, GANDHINAGAR - 382 028 (GUJARAT)., PH : 382028-9924127065.

HALOL

173.## MAA MOTORS (4767), GODHRA ROAD, NEAR TELEPHONE EXCHANGE, HALOL, GUJARAT, PH:389350-9898610212.

HIMMATNAGAR

174.## MEHTA SERVICE STATION (135), NEAR SHANTI GARDEN, RESTAURANT, DIWALI BAUG MOTIPURA, N.H.B. HIMMATNAGAR GUJARAT-383 001, PH :383001-9426555664.

IDAR

175.## SUN MOTORS (5175), IDAR-HIMMATNAGAR
HIGHWAY ROAD, AT.KRUSHNAGAR.PO
NETRAMIL., TAI.DER DISTRICT
SABARKANTA, GUJARAT,
PH:383430-9228286768.

JAMKHAMBHALIA

176.## SHRI HARI OM MOTORS (4539), JADESWAR ROAD CHAR RASTA, OPP. KRISHNA WAY BRIDGE, JAM KHAMBHALIA-361305, GUJARAT, PH :361305-9426955344.

JAMNAGAR

 LANDMARK AUTOMOBILES (1973), PLOT NO-4/2, JAMNAGAR- KALVAD ROAD, MAHAPRABHUJI BETHAK ROAD, OPP SUBHASH BRIDGE, JAMNAGAR-361 006, (GUJARAT), PH:361006-7600000733.

JETPUR

178.## GIRIRAJ MOTORS (3971), JUNAGADH HIGHWAY, NEAR JALARAM TEMPLE, JETPUR, PH :360370-0727154392

JUNAGADH

179.## MARUTI MOTORS (266), G.I.D.C. - I, RAJKOT HIGHWAY, DOLATPARA, JUNAGADH(GUJARAT), PH :362001-909984988.

KALOL

180.## SUNRISE AUTO CENTRE (146), OPP. IFFCO, AHMEDABAD-MEHSANA ROAD, SAIJ KALOL, (NORTH GUJARAT)-382 721, PH :382721-9879542207.

KAMREJ

 PATEL MOTOR GARAGE (2764), PLOT NO 1,2,3, NAVAGAM,, NR. MANISHA HOTEL, OPP. DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ,, DIST: SURAT-394185, PH :394185-9825127413.

KAPADVANJ

182.## DISHA MOTORS (5960), MAHAMADPURA,KAPADVANJ-NADIAD ROAD, KAPADVANJ-387620, DISTRICT-KHEDA, GUJARAT, PH:387620-9825641244.

KESHOD

183.## PRASAD MOTORS (3969), VERAVAL HIGHWAY, KESHOD, , PH :362220-9825024488.

LIMDI

184.## PARTH AUTOMOBILES (4171),
OPP.SWAMINARAYAN TEMPLE, NH NO-8A,
LIMBDI DIST, SURENDERNAGAR,
PIN-363421,
PH:363421-9426714510.

LUNAWADA

185.## N.J. MOTORS (4370), MODASSA ROAD, NR. SAIFEE HOSPITAL, LUNAWADA, DIST: PANCHMAHAL (GUJARAT), PH :389230-9924252700.

MEHSANA

186.* SANSKAR MOTORS (5468), PALAVASANA -BECHARAJI ROAD, , NR.ONGC FIRE STATION, MEHSANA-384002 , DISTRICT-MEHSANA, GUJARAT, PH. 384002-9875106359

187.** SHUBH AUTO SERVICES (3367), NEAR AGRO PETROL PUMP, OLD RTO, RAMOSNA JAKAT NAKA, MEHSANA (GUJARAT), PH: 384001-9825322460.

MORBI

188.## ARUN MOTORS (2071), SANALA BYE PASS, NEAR G.P. GINING MILLS, MORBI -363641, GUJARAT, PH :363641-9825222825.

NADIAD

189.## SHIVAM MOTORS (4430), OPP RASHAM RESTAURANT, DABHAM CROSSING, N.H 8, NADIAD, GUJARAT, PH :387320-9825021960. 190.## ASHA MOTORS (4340), NANA ANGLADESH, NAKHATRANA HIGHWAY ROAD, NAKHATRANA, KUTCH, PH :370615-9825225088.

PETLAD

NAKHATRANA

191.## SIDDHI MOTORS (4166), OPP. GEB, NEAR RAILWAY CROSSING, NADIAD-KHAMBHAT HIGHWAY, PETLAD, ANAND, PIN-388450, PH :388450-7359465067.

RAJKOT

192.** KHODIYAR MOTORS (356), DHEBAR ROAD (SOUTH), ATIKA INDUSTRIAL ESTATE, RAJKOT-360 001, PH :360001-9426202885.

193.* UNIVERSE AUTO (5544), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM, OCTROI POINT,AHMEDABAD HIGHWAY, RAJKOT-380002, DISTIRCT - RAJKOT, GUJARAT,

PH:380002-9879616643.

RAJPIPLA

194.## R. N. MOTORS (5255), 22-GIDC NEAR PETROL PUMP, RAJPIPLA, DISTRICT -NARMADA, GUJARAT, PH :393145-9925325300.

SAVARKUNDLA

195.## SHYAM MOTORS (8925), OPP. ESSAR PETROL PUMP, AMRELI ROAD, SAVARKUNDLA-364515, DISTRICT-AMRELI, GUJARAT, PH: 364515-9427742134.

SIDDHPUR

196.## GOOD LUCK MOTORS (5341), 2.UMIYA COMPLEX .NEAR GURUKUL , HIGH SCHOOL SIDDHPUR , DISTRICT - PATAN, GUJARAT, PH :384151-9898428989.

SIHOR

97.## MOMAI MOTORS (6032), NR. RAJ MOMAI PETROLIUM, BHAVNAGAR-RAJKOT HIGHWAY,SIHOR-364240, DISTRICT-BHAVNAGAR, GUJARAT, PH:364240-9510201800.

SURAT

198.## EMPEROR CAR TECH (1748), F.PLOT NO.124 NEAR RELIANCE COMPLEX, BESIDE SHEETAL MARBLE, SURAT-DUMAS ROAD PIPLOD, SURAT-395 007, PH :395007-9825033396. 199.* J.K.MOTORS (5158), LUHAR MOHALLA .POSTT PALGAM, DISTRICT - SURAT, SURAT -394510, GUJARAT, PH :394510-990920902.

00.* NILESH MOTORS (5347), AMBER SHOPPING CENTRE. OPP. SADHNA CHAMBERS, VARACHHA ROAD, DISTRICT - SURAT, GUJARAT.

PH: 395004-9377762660.

11.** PATEL MOTORS (3060), 64 BAJRANG
NAGAR, NEAR OCTROI CHECK POST, NANA
VARCHA, SURAT-395 006,
PH: 395006-990149498.

SURENDERANAGAR

202.## ADIT MOTORS (1247), 504/B PHASE-III, G.I.D.C. WADHWAN CITY, SURENDRANAGAR-363 035, PH :363035-9879114222.

TALALA

 RUBY MOTORS (5942), TALALA ROAD, RAMRECHI(GIR), DIST - GIR, SOMNATH -362150, PH :362150-9824061044.

UMBERGAON

204.## KARAN AUTOMOBILES (2571), OPP, DAMRU WADI, UMBERGAON SANJAN ROAD, UMBERGAON DIST. VALSAD, GUJARAT-396 170, PH :396170-9824336583.

UNJHA

205.## AMBIKA MOTORS (3932), SADGURU COMPLEX, AHMEDABAD PALAM PUR HIGHWAY ROAD, UNJHA, MEHSANA-384170, PH :384170-9824517382.

VADALI

206.## VRAJ MOTORS (4560), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT), PH :383235-9427364109.

VADGAM

207.## CHAUDHARY & CHAUDHARY MOTORS (5651), OPP.RELIANCE PETROL PUMP, PALAMPUR ROAD - VADGAM, DISTRICT -BANASKANTHA, GUJARAT, PH:385410-9664590698.

VADODARA

CAR CARE (2229), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016, PH: 390016-9825044610.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023)

- 209.* CAR CLINIC (4640), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT), PH :390004-9925003558.
- 210.## DREAM MACHINES (2933), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA-390 002, PH :390005-7575809940.
- 211.* GENERAL MOTOR REPAIRING WORKS (2529), NEAR LOK SATTA PRESS, NAGARWADA, VADODARA-390 001, PH :390001-9825026106.
- 212.** HONEST AUTO STRUCTURE WORKS (279), 9, VINODBAUG BEHIND HOTEL SANMAN, JETPUR ROAD, VADODARA, PIN: 390005, PH: 390002-9824014046.
- 213.## MAYUR SERVICE STATION (2224), NEAR POLICE STATION, PRATAPNAGAR ROAD, BARODA-390 004, PH :390001-9879453031.

VALIA

214.## HARI OM AUTO CARE (5750), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJRAT, PH : 303135,0427336004

VALSAD

215.* HONEST AUTO GARAGE (2220), SUGHAR FALIA, BEHIND MOTA GHANCHIWAD, VALSAD-396 001 (GUJARAT), PH: 396001-9426110767.

VANTHLI

216.* INFINITY MOTORS (5963), RAVI RATAN'
VADLA FATAK , OPP-HP PETROL PUMP
,POST VADLA,TAL VANTHLI-362205,
DISTRICT-JUNAGADH, GUJARAT,
PH:362001-9898990120.

VIRAMGAM

217.## KRISHNA MOTOR GARAGE (4038), OUTSIDE BHARWADI GATE, NEAR BHARAT PETROL PUMP, VIRAMGAM, PH :382150-9426415274.

VYARA

218.## PARTH MOTORS (8928), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VYARA, DISTRICT-SURAT, GUJARAT, PH :394650-9898292020.

HARYANA

AMBALA

219.## BASSAN MOTORS (4964), 99 TH MALL, AMBALA CATT - 133001, HARYANA, PH :133001-9466000000.

- 220.** GURU NANAK MOTORS (2036), POLICE LINES CHOWK, AMBALA CITY, , PH :134003-8708357725.
- 221.## HIRA MOTORS (2740), 207 MILE STONE, VASANT VIHAR GT ROAD, N.H.-1, AMBALA CITY, PH :134002-9255285212.
- 222.** RAVI MOTORS (1957), 125 STAFF ROAD, HOTEL SAVOY, AMBALA CANTT-126 102, PH :133001-9315110209.

BADHARA

223.* S.S MOTORS (5735), NEAR REST HOUSE, BADHARA-123308, DISTRICT-BHIWANI, HARYANA.

PH :127308-9255141288. BAHADURGARH

224.## GL AUTOMOBILES (5263), MAIN ROHTAK ROAD, SANKHOL OPP CH. DEVI LAL PARK, DISTRICT - BAHADURGARH, HARYANA, PH.:124507-9416303473.

BARARA

225.## LUXMI AUTOZONE (5334), VPO BARARA , DISTRICT - AMBALA, HARYANA, PH :133201-8222024046.

BARWALA (HARYANA)

FAQIR CHAND QUALITY FUELS (5435), KILLA NO.20L.H.S. NH-65., CHANDIGARH ROAD -BARWALA, DISTRICT - HISAR, HARYANA, PH: 125121-9215027000.

BHIWANI

227.## VEER MOTOR WORKSHOP (1850), 24 NEW MOTOR MARKET, BHIWANI, (HARYANA)., PH:127021-9416057857.

BHUNA

228.* MITTAL AUTOMOBILES (5748), NEAR BUS STAND, JAKHAL ROAD - BHUNA, PIN-125111, DISTRICT-FATEHABAD, HARYANA, PH :125111-9813207221.

FARIDARAD

229.## BALAJI SERVICE STATION (4956), SECTOR
23-24, MAIN ROAD, NEAR BALAJI DHARM
KATA, FARIDABAD-121004, HARYANA,

PH :121001-9818700422/0129-4100265.

INSUH AUTO (377), 13/3 MAIN MATHURA ROAD, (ADJOINING FRICK INDIA), FARIDABAD-121 003,

:121003-0129-2272587/0129-2272484/9810135

231.## KHURANA AUTOMOBILES (2863), 3C/60 B.P. (OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD, PH :121001-9891984841/9810474117.

232.** PERFECT AUTOZONE (P). LTD. (5667), PLOT NO 9, ADJACENT TO UNION BANK OF INDIA, ANKHIR, OPP SEC 21-D, MAIN BADHKAL ROAD, DISTT FARIDABAD, HARYANA - 121001

PH :121001-9953417558/9871466789.

SARASWATI AUTOMOBILES (4465), 44 B.P.,
NEELAM BATA ROAD, N.I.T, FARIDABAD,
PH

:121001-0129-4029665/0129-2429665/9811446

FARRUKHNAGAR

234.** M R MOTORS (5946), GURGAON-JHAJJAR ROAD, OPP. ANAAZ MANDI, FARRUKHNAGAR-123506, DISTRICT-GURGAON, HARYANA, PH :122506-9810831200.

FATEHABAD (HARYANA)

235.## DHINGRA AUTOMOBILES (1856), G.T. ROAD, FATEHABAD, (HARYANA), PH :125050-9896012906

236.## INDORA MARUTI SERVICE STATION (3064), OPPOSITE M M COLLEGE, SIRSA ROAD, FATEHABAD, 125050, PH :125050-9254080200.

GANAUR

237.## SITA AUTOMOBILES (4260), 347, WARD NO. 10, BST ROAD, GANAUR, DISTT- SONEPAT, PH:131101-9992022047.

GANGWA

238.** PANCHMUKHI AUTOMOBILES (5968), HISSAR RAJGARH ROAD,, GANGWA-125001, DISTRICT-HISSAR, HARYANA, PH: 125001-9728100029.

GOHANA

239.## KRISHNA MOTORS (4132), ROHTAK ROAD, GOHANA, , PH :131301-9017062999.

GURGAON

240.## A & A ENTERPRISES (4639), 396, PHASE-IV, UDYOG VIHAR, GURGAON (HARYANA), PH :122015-8851819511.

241.## GANGA MOTORS (363), SHIVPURI, GURGAON-122 001, ,

> 6028. KUMAR AUTOMOBILES (4848), BEHRAAMPUR ROAD, NEAR NH-8, GURGAON -122001, HARYANA,

PH:122002-9873431696/0124-2215696/9873448804

:122001-0124-2314940/0124-2322084/9810430

243.## MANISH AUTOMOBILES (4777), GHATA ROAD, WAZIRABAD, NEAR SECTOR-56, GURGAON-122001, HARYANA,

:12201-9873243859/9899561595/9899475288.

QUTAB AUTOMOBILES (3668), KHEWAT/
KHATA NO 714/909, VILLAGE JHARSA,
UNITECH CYBER PARK ROAD, SECTOR 39,
GURGAON, HARYANA 122001,
BU

:122001-0124-2385333/0124-92267334//981168

RAJASTHAN AUTO WORKS (4760), LT. ATUL KARATIA MARG, NEAR PETROL PUMP, AKASHI FILLING STATION, AMAN PURA, SECTOR-5 ROAD, GURGAON-122001 (HARYANA), PH :12201-8368972946/9910070220.

46.## S G MOTORS (5756), PLOT NO.494,SECTOR 37., PACE CITY II, VUDYOG VIHAR VI -GURGAON, DISTRICT-GURGAON, HARYANA, PH: 122001-9711770092.

247.** SEVEN HILLS AUTOMOBILES PVT LTD (6038), VIJAY VIHAR,MAIN SILOKHRA ROAD,SEC-30, GURGAON- 122002, HARYANA,

PH:122001-9810602354.

248.## SOMESH AUTOMOBILES (455), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002, PH :122002-9717070830.

249.## SRI PARKASH AUTOMOBILES (5862), BAJGHERA ROAD,NEAR PARKASH PURI ASHRAM, NEW PALAM VIHAR,GURGAON-122001, DISTRICT-GURGAON, HARYANA.

PH :12201-9899157729/9810070098.

TOP GEAR AUTOMOTIVE ENGINEERS (4464), MAIN JHARSA ROAD, GURGAON, (HARYANA),

:122001-0124-4039011/9810304011/989143940 7.

HANSI

51.** VIKAS AUTOMOBILES (4744), SHANTI NIKETAN, OPP. JIND BYE PASS, G.T. ROAD, HANSI, DISTRICT-HISSAR (HARYANA), PH: 125033-9466248037.

HISSAR

 PALCO MOTOR GARAGE (4739), 96 AUTO MARKET, HISSAR-125001, HARYANA, PH:125001-9729601111.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

253.* SAI AUTOMOBILES (5267), TOSHAM ROAD, NEAR AAKASH INSTITUTE, SECTOR-13, HISSAR, HARYANA, PH :125001-7988238034.

254.** SALASAR AUTO (4735), OPP. VIDYUT NAGAR GATE NO. 2, DELHI ROAD, HISSAR-125001, HARYANA, PH :125001-9355486716

HODAL

255.## VED MOTORS (2247), HIGHWAY ROAD, NEAR RAILWAY STATION CHOWK, HODAL-121 106, (FARIDABAD), PH :121106-7988978936.

INDRI

256.## ASHOKA MOTOR (6041), OPP. PARTAP FILLING STATION,LADWA ROAD,, TEHSIL-INDRI,DISTRICT-KARNAL, HARYANA, PH: 132041-8813000316.

ISMAILABAD

257.* VINAYAK MOTORS (6052), OPP. MAHARAJA PALACE , AMBALA HISSAR ROAD ISMAILABAD-136129 , HARYANA, PH 136129-9034820190

ISRANA

258.## SHIV DARSHAN AUTOMOBILES (6051), ISRANA PANIPAT ROAD, NR. NC COLLEGE,ISRANA-132103, DISTRICT-PANIPAT , HARYANA, PH:132107-9911366230.

JHAJJAR

259.## VASUNDHRA MOTORS (1467), REWARI ROAD, JHAJJAR-124 103, (HARYANA), PH :124103-9812012180.

JIND

260.## MOHIT MOTORS (1574), SAFIDON GATE, JIND-126 102, , PH :126102-9355129844.

KAITHAL

261.## HIND AUTOMOBILES (1858), AMBALA ROAD, KAITHAL, , PH :136027-7015806781

KANINA

262.## SHREE KRISHNA MOTORS (5953), BHOOP SINGH MARKET, NEAR PETROL PUMP, MAHINDERGARH ROAD, KANINA-123027, DISTRICT-MAHINDERGARH, HARYANA, PH:123027-9467641678.

KARNAL

263.** RUBY MOTORS (4734), 28/3 HSIDC, NEAR NAMASTEY CHOWK INDUSTRIAL AREA, KARNAL-132001, HARYANA, PH :132001-9896345633.

KHARKHODA

PRANAV MOTORS (5771), SAMPLA ROAD,KHARKAUDA-131402, DISTRICT-SONEPAT, HARYANA, PH :131402-9896145161.

KUNDLI

265.## SHIV SHAKTI AUTOMOBILES (4628), SECTOR 53, HSIIDC, JANTI ROAD, NEAR K.H.I COLD STORAGE, KUNDLI, SONEPAT, HARYANA - 131028, PH:131001-9811047480.

KURUKSHETRA

266.## KARTAR MOTORS (1645), RED ROAD, KURUKSHETRA-132 118, , PH :136118-9896245900.

267.** KARTAR MOTORS (5349), PLOT O 65-66, SECTOR -2, HUDA INDUSTRIAL, AREA KURUKSHETRA,

PH :136118-9896245900.
268.## SAINI MOTORS (2131), G.T. ROAD, UMRI CHOWK, KURUKSHETRA, (HARYANA), PH :136118-9896183931.

LOHARU

269.## BHAWNA MOTORS (6028), BHIWANI ROAD, LOHARU-127201, DISTRICT-BHIWANI HARYANA, PH:127201-8901276555.

MAHENDERGARH

270.## SHREE SHYAM MOTORS (5843), NEAR I.O.C PETROL PUMP, MAHENDERGARH-123029, DISTRICT-MAHENDERGARH, (HARYANA), PH :123028-8199982018/9050994709.

MANDI ADAMPUR

271.## MITTAL AUTO AGENCIES (2966), 113-15 AUTO MARKET, MANDI ADAMPUR, (HARYANA), PH :125052-9729173300.

MANESAR

272.## MAITRI SERVICE STATION (2378), N.H.8, DELHI-JAIPUR ROAD, MANESAR (GURGAON), PH :122001-9818001128.

NILOKHERI

273.## SURENDERA MOTORS (5049), NEW NEHSIL ROAD.NILOKHERI, DISTRICT KARNAL , NILOKHERI-132117, HARYANA, PH :132117-9812510190.

PALWAL

274.** D.K. & R.K. MOTORS (1159), NEAR BUS STAND, , NH-2 PALWAL, PALWAL, PH :121102-9416066647/9050460231. 275.* SHEELA MOTORS (5141), OPP MUNICIPAL COUNCIL OFFICE, OLD G T ROAD, DISTRICT - FARIDABAD, HARYANA, PH : 121102-9416066251/01275-401501.

PANCHKIII A

276.** PANCHKULA AUTO SERVICES (1949), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA-134 109, (HARYANA), PH 134109-9316132257

PANIPAT

PREM MOTORS (2266), PLOT NO.134, SECTOR 25 INDUSTRIAL AREA, PANIPAT, PH :132103-9896306380

PATAUDI

278.** SHUBHAM AUTOMOBILES (4641), REWARI ROAD, PATAUDI, DISTT. GURGAON, PH:122413-0124-2672942/9812665240.

PEHOWA

279.* AMAR AUTOMOBILES (2270), OPP. DAV COLLEGE, AMBALA ROAD, PEHOWA DISTT. KURUKSHETRA, (HARYANA), PH.:136128-9896002974.

RADAUR

280.## SHRI SHIVAM AUTOMOBILES (5852), S.K. ROAD,OPP. ESSAR PETROL PUMP, RADAUR-135133, DISTRICT-YAMUNANAGAR, HARYANA, PH :135133-9034384003.

RANIA

281.## SINGLA MOTORS (3779), NEAR BUS STAND, RANIA-125 076, DISTT. SIRSA (HARYANA), PH :125076-9416011238.

REWARI

282.## GAUTAM MOTORS (1837), NARNAUL ROAD, REWARI -123401 (HARYANA)., , PH :123401-9416064894.

283.## PULYANI MOTORS (4663), BEHIND KAMLA PALACE, CIRCULAR ROAD, REWARI-123401, HARYANA, PH

> :123401-9416064738/01274-252238/01274-257 938/9955963168.

84.* SHIVAM SERVICES (1466), OPP. CENTRAL SCHOOL, GARHI BOLNI ROAD, REWARI-123 401, PH :123401-01274-254825/9416288341.

SADHAURA

285.## SHREE GANESH MOTORS (5959), NEAR INDIAN OIL PETROL PUMP, KALA AMB ROAD,SADHAURA-133204, DISTRICT-YAMUNANAGAR, HARYANA, PH:133204-9813376260.

SHAHABAD

286.** MAHALAXMI MOTORS (354), LADWA ROAD, SHAHABAD MARKANDA-136 135, (HARYANA), PH :136135-9812036433.

SIWANI

287.## GANESH AUTOMOBILES (5931), NEAR RELIANCE PETROL PUMP, HISAR ROAD, SIWANI, DISTRICT-BHIWANI, HARYANA - 127046, PH: 127046-8607113000.

SOHNA

88.** SHRI SHYAM MOTORS (8930), OPP.RAGHUNANDAN PETROL PUMP, NEAR GD GOENKA INTERNATIONAL SCHOOL, SOHNA-122103, HARYANA, PH :122103-9582350079.

SONIPAT

289.## NEW HIGHWAY MOTORS (8923), MAIN DELHI ROAD, SONEPAT, HARYANA, PH :131001-9416672009.

TAURU

290.## R M MOTORS (6842), WADE NO-48EHIND WINE SHOP MAIN REWARI SOHNA ROAD, TAURU-122105, DISTRICT-MEWAT, HARYANA, PH : 122105-9812378663.

TOSHAM

291.## MOHINI AUTOMOBILES (6026), OPP.NEW ANAJ MANDI , NEAR MINI BANK, TOSHAM-127040 , DISTRICT-BHIWANI, HARYANA, PH :127040-9215959995/9992251000.

UKLANA

292.* SHREE GANESH MOTORS (5747), PLOT NO#29, UKLANA MANDI, DISTRICT-HISSAR, PIN-125113, HARYANA, PH :125713-98123091531.

HIMACHAL PRADESH

ALAMPUR

293.## SUBH AUTOMOBILES (5964), SH-39,ALAMPUR-176110, DISTRICT-KANGRA, HIMACHAL PRADESH, PH :176082-9816675551.

AMB

94.## SHUBHAM MOTORS (5933), NEAR PINDI ASHRAM,HAMIRPUR ROAD, AMB-177203, DISTRICT-UNA, HIMACHAL PRADESH, PH:177203-9418114176.

ANNI

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023)

295.## SARAJ AUTO WORLD (6044), VERMA BUILDING,NR. NAGAN HARIPUR TEHSIL,ANNI-172026, DISTRICT-KULLU HIMACHAL PRADESH.

PH:172026-9129065065/9817120002.

BADDI

296.** LAJ MOTORS (5541), 436.MAUJA SURAJ MAJRA LABANA, BADDI, DISTRICT -SOLAN, HIMACHAL PRADESH, PH :173205-9816039189

BANGANA

297.## TRISHLA AUTOMOBILES (5869), VILLAGE BPO & TEHSIL BANGANA, BANGANA-174307, DISTRICT-UNA, HIMACHAL PRADESH, PH:174307-9817645350.

BANOI

298.## BABA SERVICE STATION (4634), VILL BANOI, TEH SHAHPUR P.O., BANOI, DIST KANGRA (HIMACHAL PRADESH), PH :176209-9418051290.

BARMANA

299.## AVER AUTO (5955), VILLAGE LAGAT,TEHSIL SADAR, PO BARMANA-174013, HIMACHAL PRADESH, PH.:174013-9418064130.

BHAMBLA

00.* DHIMAN MOTORS (3837), PLOT NO. 42,, INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT MANDI, PH:175004-9816227437.

RHUNTAR

301.## HANDA MOTORS (4262), HANDA COMPLEX, NEAR AIRPORT, BHUNTAR, KULLU (H.P), PH:175125-9816007003.

BILASPUR (H.P)

302.## BHASKAR AUTO SPARE & SERVICE (1730), 8-B ROURA SECTOR II, (NEAR DURGA MANDIR), BILASPUR-174 001 (H.P.), PH :174001-9816436001.

CHAMBA

303.* AUTOZONE (5247), PATHANKOT RAOD .PAREL , SULTANPUR - CHAMBA , DISTRICT - CHAMBA , HIMACHAL PRADESH, PH :176310-9418214848.

304.## KAILASH SERVICE STATIION (3527), AMRIT NIWAS MOHALLA, BONGUTA, CHAMBA TOWN, DISTT.CHAMBA, PH:176310-9896679445.

DARLAGHAT

305.## CHANDEL SERVICE STATION (5233), DARLAGHAT , DISTRICT-SOLAN, HIMACHAL PRADESH, PH :171102-9816039865.

DHARAMSHAI A

306.## EAGLE MOTOR SERVICE STN. (6426), SHAM NAGAR, DHARAMSALA-176215 (HIMACHAL PRD.), ,

PH :176215-8219915841.
307.## HIM AUTO STATION (8932), VPO DARI, DHARAMSHALA, (H.P.), PH :176057-9418029655

308.## SHIV SHAKTI CAR CARE (1277), NEAR RAINBOW SCHOOL, DARI ROAD, DHARAMSHALA-176 057, PH :176057-9318752074.

GHUMARWIN

309.## BHASKAR AUTO SPARES & SERVICES (5147), VILLAGE KULARU, GHUMARWIN, DISTRICT - BILASPUR, HIMACHAL PRADESH, PH: 174021-9816090504.

GUMMA

310.## CHAUHAN ENTERPRISES (5660), VILLAGE GUMMA, TEHSIL KOTKHAI, GUMMA, DISTRICT - SHIMLA, HIMACHAL PRADESH, PH:171202-9218690917.

JAWALA JI

311.## SRI PARBHAT MOTORS (5036), VPO & TEHSIL, JAWALI-(BHANEI), DISTRICT-KANGRA, (HIMACHAL PRADESH), PH:176023-9805511205.

JAWALAMUKHI

312.## LAKSHMI AUTO SPARES & SERVICE
CENTRE (4630), NEAR GANJU BAGH, DEHRA
ROAD, JWALAMUKHI, TEH. DEHRA, DIST.
KANGRA (HIMACHAL PRADESH),
PH: 176031-9418091048.

KARSOG

313.## DEEPAK AUTOMOBILES (4057), MR.
DEEPAK SHARMA, C/O SHARMA GENERAL
STORE, KARSOG, MAIN BAZAR, DIST
MANDI, HIMACHAL PRADESH,
PH :175011-9817063007/9816260061.

KAZA

314.## SPITI MOTORS (6033), VILL. & PO,KAZA-172114, DISTRICT-LAHAUL & SPITI, HIMACHAL PRADESH, PH.:172114-9418758974.

KEYLONG

315.## YOLAX MOTORS (3830), KEYLONG, DISTT. LAHAUL & SPITI, , PH :175133-7651031580.

KULLU

316.## PURI BROTHER'S (4242), I.O.C DEALER, DHALPUR, KULU, H.P. PH :175101-9418395358.

KUMARHATTI

317.* SOLAN AUTOMOBILES PVT. LTD. (6420), DAGHOTA(SOLAN), P.O.KUMAR HATTI-173 229 (H.P)..., PH: 173229-9816030330.

KUMARSAIN

318.## RED LINE (5965), VILL. KEPU,PO KIRTI SAINZ, TEHSIL,KUMARSAIN-172030, DISTRICT-SHIMLA, HIMACHAL PRADESH, PH :172030-9816027007.

MANDI

319.** BHAGWATI AUTOMOBILES (269), PLOT NO. 13 INDUSTRIAL AREA PHASE 3 SAULI KHAD MANDI (H.P.), PH :175001-9418461897.

MARANDA

320.## MODERN SERVICE CENTRE (1175), PUSHP COMPLEX, MARANDA-176 102, (H.P.), PH:176102-7018243011.

MEHATPUR

321.## BUDHA AUTO HOUSE (6422), MAIN BAZAR, UNA, MEHATPUR-174315 (H.P), PH :174315-9815971708.

MUBARAKPUR

322.## SHIV SHAKTI AUTOMOBILES (1732), HOSHIARPUR ROAD, MUBARKPUR, DISTT. UNA, (H.P.), PH :177202-9418328361

NADALIN

123.** CAR CARE ENGINEERS (4423), HOSHIARPUR ROAD, MANPUL, NADAUN DISTT, HAMIRPUR, HP, PH: 177033-9857799080.

NAHAN

324.## AGGARWAL MOTORS (3334), GUNNU GHAT, NEAR TELECOM COLONY, NAHAN-173 001, PH :173001-9418023558.

NALAGARH

325.## KRISHNA MOTOR (5275), PEERTHAN.PO NALAGARH, DISTRICT - SOLAN, HIMACHAL PRADESH, PH :174101-9418094064.

PALAMPUR

326.** SANGRAI AUTO SERVICE (6430), OPP. SITLA MATA MANDIR, PALAMPUR-176 061, DISTT. KANGRA (H.P.), PH :176061-9418085915.

327.## SANTOSHI AUTOMOBILES (4776), VILLAGE & P.O, BHAWARNA, TEHSIL, PALAMPUR, DISTRICT- KANGRA (HIMACHAL PRADESH), PH: 176083-9418184367

PAONTA SAHIB

328.## SUMEET MOTORS (1441), SHAMSHERPUR, PAONTA SAHIB-173 025, (H.P.), PH :173025-9418018329

PAPROLA

329.## ABROL AUTOMOBILES (3470), VPO PAPROLA, TEHSIL BALINATH, DISTT KANGRA, HIMACHAL PRADESH -176115, PH :176115-9418066917.

PARWANOO

330.## DIVYA SALES (6428), DIVYA BHAWAN VILL. KAMLI, SECTOR-1, PARWANOO, PH :173220-9816032002.

PATLI KUHAL

JAMDAGNI MOTORS (760), VILLAGE PATLI KAUHAL, P.O.KATRAIN, DISTT.KULLU (H.P.), PH:175129-9816040247.

RAJGARH (H.P)

332.## RAJGARD AUTOMOBILES (5458), PO RAJGARH.TEH RAJGARH, DISTRICT -SIRMOUR, HIMACHAL PRADESH, PH:173101-9418021344.

RAMPUR BUSHAHR

33.** HIGHWAY SERVICE STATION (2649), CHUHA BAG, RAMPUR BUSHAHR, (H.P.) - 172001, PH:172001-9805831627.

334.## KRISHNA AUTOMOBILE (4438), VILL CHUHA BAG, RAMPUR BUSHAHR-172001, , PH :172001-9418036091.

RECONG PEO

335.## KRISH AUTO (4134), RECONG PEO, TEHSIL KALPA, DISTT KINNAUR, HIMACHAL PRADESH - 172707, PH :172707-9816579999.

ROHRU

336.## KAMTA SERVICE STATION (2338), ROHRU, DISTT. SHIMLA, (H,P.), PH:171207-9418040106.

SALASHI

337.## THAKUR AUTOMOBILES (3838), JALANDHAR MANALI NATIONAL HIGHWAY (NH70), NEAR DAV SCHOOL, VILLAGE SALASHI, DISTT HAMIRPUR, PH :177001-9418490904.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

SARKAGHAT

338.## SHAKUNTLA MOTORS (5755), MANDI ROAD-SARKAGHAT, DISTRICT-MANDI, PIN-175024, HIMACHAL PRADESH, PH: 175024-9817818822.

SHIMLA

339.** GURRAJ AUTO SERVICE (757), NEAR CPRI ROAD, BEMLOI, SHIMLA-171 001, PH :171001-9816233030.

340.** MOTO WORLD (6433), NAVBAHAR, SHIMLA-171 002, , PH :171002-9459050769.

SOLAN

341.## SOLAN SERVICE CENTRE (764), BYE PASS, NEAR PWD OFFICE, SOLAN-173 212, PH:173212-9816222640.

SUBATHU

342.## SHYAM AUTOMOBILES (4558), NEAR SHANTI FILLING STATION, V.P.O RADYANA, SUBATHU, DIST SOLAN (HIMACHAL PRADESH),

PH:173206-9418061757.

SUNDERNAGAR

343.** V.M. SERVICE STATION (3777), CHAMUKHA, P O HARABAGH, NH-21, SUNDER NAGAR-174 402 (H.P.), PH :175019-9418064130.

THEOG

344.## JOSHI MOTORS (2778), SHALLI BAZAR, THEOG, DIST. SHIMLA, (H.P.), PH:171201-9459100051.

UNA (H.P)

345.## RUDRA MOTORS (3925), NEAR OLD HOSPITAL CHOWK, NH-22, UNA - 174303 (H.P.),

PH :174303-9816590199. 6.## TRINITY AUTO FAST EN

346.## TRINITY AUTO FAST ENGINEERS (1755), JALGRAN TABBA, NANGAL ROAD, UNA, HIMACHAL PRADESH - 174303, PH :174303-9816628020

JAMMU AND KASHMIR

AWANTIPORA

347.## KESAR AUTOMOBILES (5938), KHAR ,MORH,NATIONAL HIGHWAY 1A, AWANTIPORA-192122, DISTRICT-PULWAMA, JAMMU & KASHMIR, PH :192122-7780873161.

BARAMULA

348.* MARUTI MASTERS (4369), KANISPORA, BARAMULA, KASHMIR, PH :193101-9906864748.

CHADOORA

349.* VEHICLE MASTERS (4661), MAIN ROAD, CHADOORA-190001, DIST. BUDGAM, JAMMU & KASHMIR, PH :190001-9419441217.

JAMMU

350.* CARE POINT AUTOMOBILES (4652), OPP. BSF CAMPUS ROAD, AKHNOOR ROAD, JAMMU-180002, PH :180002-9419283151.

51.** CHECK N CARE AUTOMOBILE CENTRE (1773), OPP, GURUDWARA SRI SINGH SABHA, NARWAL BYE PASS ROAD, JAMMU, PH:180001-9419190796.

352.** KWIK FIT (2343), AMBPHALLA, B.C. ROAD, JAMMU-180 001, PH :180001-9419104400.

MOBEL GARAGES (441), NARWAL CHOWK, TRANSPORT NAGAR, JAMMU-180 006, PH :180006-9796800000

354.## NATIONAL MOTORS (5074), OPP APNA VIHAR.B.P. PETROL PUMP, NH-1A.KUNJWANI JAMMU, DISTRICT - JAMMU, JAMMU & KASHMIR, PH: 180010-9419322222.

KARGIL

355.* ZOZILA ENGG. WORKS (374), KARGIL, LADAKH-194 105, PH :194015-9419176212.

KATHUA

356.* KATHUA MOTORS (3323), HATLI MORE, KATHUA-184 102, (J&K), PH :184102-9419150694.

KATRA

357.## VIDYA AUTOMOBILES (1165), JAMMUR ROAD, KATRA JAMMU ROAD, KATRA, (J&K), PH :182320-9596676576.

KISHTWAR

358.## MINTOO MOTORS (4133), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K), PH :182204-9622055250.

MATTAN

359.## DANISH AUTOMOBILES (5478), PAHAL GAM ROAD, STATE HIGHWAY - MATTAN, DISTRICT - ANANTNAG, JAMMU & KASHMIR, PH :192125-9419041724.

PHINTER

360.## BADYAL AUTOMOBILES (4149), C/O BADYAL AUTOMOBILE, PHINTER, TEH BILLAWAR, DISTT KATHUA PHINTER (J & K), PH :184203-9419691916.

PULWAMA

161.** KASHMIR AUTOMOBILES (5352), NEAR FRUIT MANDI, PRICHOO PULWAMA, KASHMIR, PH :192301-9622742291.

RAJOURI

362.## MILLENNIUM MOTORADES (2937), ALPHA GATE, T.C.P., RAJOURI-185 132, (J&K), PH :185132-7006122022.

REASI

363.## U LIKE CAR CLINIC (4771), GITA NAGAR, REASI JYOTIPURAM ROAD, REASI, DISTRICT-UDHAMPUR (JAMMU & KASHMIR), PH :182311-7006083550.

SAMBHA

364.## DHANSAR CAR CLINIC (5146), NATIONAL HIGHWAY, SUPWAL SAMBHA, DISTRICT -JAMMU, J&K, PH: 184120-9419393949.

SOPORE

365.## HASSAN MOTORS (2434), BPC DEALER, SOPORE, KASHMIR, PH :193201-9906506786.

SRINAGAR

366.* A.B. MOTORS (5072), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH :190009-9419007966.

367.** ADAM'S AUTOAIDES (6766), SIDCO INDUSTRIAL EXTATE,SHALTENG, SRINAGAR., DISTRICT-SRINAGAR, JAMMU & KASHMIR, PH :191202-9906580089.

168.* HASEEN MOTORS (5249), BY-PASS BRIDGE .BAGH MEHTAB, SRINAGAR, JAMMU & KASHMIR, PH: 190019-9419006847.

369.## NEW NATIONAL AUTOMOBILES (5073), RAM BAGH.AIRPORT ROAD. SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH :190009-9419013778.

170.* SRINAGAR AUTOMOBILES (4925), M.A. LINK ROAD, NEAR TRANSPORT YARD BRIDGE, CHINARBAGH, SRINAGAR-190001 (JAMMU & KASHMIR), PH. 190001-9419001793.

SURNKOTE

371.## A.S. AUTOMOBILES (5976), IQBAL NAGAR, SURANKOTE, DISTRICT-POONCH, JAMMU & KASHMIR , PH :185121-9469014765.

VIJAYPUR

372.## BANSI LAL MARUTI SERVICE STATION (4748), SWANKHA MORH, NATIONAL HIGHWAY, VIJAYPUR-180001, DISTRICT-SAMBA (JAMMU & KASHMIR), PH: 180001-9419106798.

JHARKHAND

BOKARO

373.## UUEA AUTOMOBILES (4845), S-21 CITY CENTRE, BOKARO STEEL CITY, BOKARO-827004, JHARKHAND, PH :827004-9431127441.

DEOGHAR

374.* GARGEE AUTOMOBILE (2276), OPP. D.C. RESIDENCE, CIRCULAR ROAD, BARMASIA, DEOGHAR-814 112 (BIHAR), PH :814112-9940580983.

DHANBAD

375.## MAZUMDAR CAR SCAN (5135), BHUFORCE .K G ASHRAM ROAD , SARAIDELA - 828301, DISTRICT - DHANBAD, JHARKHAND, PH :828301-9835361472.

376.## PRIYA AUTO (4868), OPPOSITE MINNING SCHOOL, SINDRI ROAD, BHAGA, DHANBAD-828301, JHARKHAND, PH :828301-9431124817.

HAZARIBAGH

377.## ALOK MOTORS (379), NEAR INDRAPURI CHAWK, HAZARIBAG-825 301, (BIHAR), PH :825301-9431140740.

378.## SRI RAM MARUTI SERVICE STATION (3663), DEVI DAYAL LANE, HAZARIBAG-825 301, (JHARKHAND), PH :825301-9431384877.

JAMSHEDPUR

379.** CAR CURE (1261), C/O MODERN AUTO STORES, KALIMATI ROAD, SAKCHI, JAMSHEDPUR-1, PH :831001-9234608016.

380.## MAHESHWARI BROS. (5124), NATIONAL HIGHWAY 33, BALIGUMA MANGO, P.O. -M.G.M. MEDICAL COLLEGE, JAMSHEDPUR-831 018, PH: 831018-9031144444.

KHUNTI

381.## MOD MOBILES (5579), MAIN ROAD,RANCHI ROAD - KHUNTI, DISTRICT - KHUNTI, PIN -835210, JHARKHAND, PH :835210-9304468855.

MAITHON

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023)

382.##	MAITHON SERVICING CENTRE (5838),
	MAITHON ROAD, NEAR VMC COLONY,
	SANJAY CHOWK ,PO
	CHIRKUNDA-MAITHON,
	DISTRICT-DHANBAD, (JHARKHAND),
	PH:828203-7209423707.

PAKUR

383.## SPEED WHEEL SERVICE CENTRE (4976), MAIN ROAD, PAKUR - 816107, , PH :816107-9434101917.

RAMGARH

384.## RAHIL MOTORS (5054), C/O NIYAMAT MISTRI, DUSHAD MOHLA, DISTRICT RAMGARH CANTT., PH :829122-9771577422

385.## SAINI MOTORS (5126), NEAR VISWAKARMA MANDIR, MAIN ROAD, RAMGARH CANTT 829 122, DISTT. HAZARIBAG, PH :829122-9835141302.

RANCHI

386.## BHARAT MOTORS (5970), SHIV JEE CHOWK,HARMU ROAD,RANCHI-834001, DISTRICT-RANCHI, JHARKHAND - 834001, PH :834001-9608502258.

887.** MARUTI AUTOMOBILES (5127), HOTEL AKASHWANI MANSION, RATU ROAD, RANCHI-834 001, PH :834001-9835156186.

MARUTI CLINIC (2548), LAL KOTHI, OLD HAZARIBAGH ROAD, KANTA TOLI, RANCHI-1 (BIHAR), PH: 834009-9431109214.

389.## MOTOR KRAFT (4769), H.B. ROAD, DIPA TOLI, RANCHI-834009, JHARKHAND, PH:834009-9431152162.

SIDRAUL

390.## KRITIVASA AUTOMOBILES (4424), RANCHI TATA HIGHWAY, SIDRAUL, P.S NAMKOM, PH :834010-9661144866.

KARNATAKA

ATHANI

391.## CHOUGULE MOTORS (3874), MIRAJ ROAD, ATHANI, , , PH :587314-9448436776.

BAGALKOT

392.## NARA AUTOMOBILES (4357), TP NO. 158 A/2, WARD NO. 10, SHABADI COMPOUND EXTN, BAGALKOT-587101, PH :587101-9880875595

BAILHONGAL

393.## MAHANTH MOTORS (5763), RTO ROAD BAILHONGAL ,TALUK-591102, DISTRICT-BELGAUM, KARNATAKA, PH :591102-9535653166.

BAI FHONNUR

394.## SRI ANNAPOORNA MOTORS (5253), MALLE GOWDA COMPLEX.JAYAPURA, ROAD BALEHONNUR ROAD, DISTRICT -CHIKAMAGALUR, KARNATAKA, PH :577204-9448000131.

BANGALORE

395.## ADARSHA AUTOMOBILES (4553), # 974 VARATHUR MAIN ROAD, NEAR PURVANKARA APARTMENTS, AFTER MARATHAHALLI, RAILWAY BRIDGE, BANGALORE-560037,

PH :560037-9880195465.

96.** ANEKAR MOTORS (227), 230 MAGADI ROAD, BANGALORE-560 023, (KARNATAKA)., PH :560 023-9845889911.

97.* ASHWA CARS (2827), #14, 1ST MAIN, 6TH CROSS, SANJEEVNI NAGAR, MOODAPALYA, BANGALORE 560072,

PH:560072-9341228231.
BENAKA MOTORS (3237), NO.158/2
VIBHUTIPURA, VIGNAN NAGAR BEHIND
B.E.M.L., NEAR RENUKA SWIMMING POOL,
BANGALORE-560 017,
PH:560 017-845212416

399.## CHANDANA MOTORS (4872), NO. 9
UNIVERSITY ROAD, GNANABHARTHI
(POST), MARIYAAPPANA PALYA,
BANGALORE-560056 (KARNATAKA),
PH :560056-9880659864.

400.* GIRIMAJI ENTERPRISES (258), NO.2 27TH CROSS, K R ROAD, B S K II STAGE, BANGALORE-560 070, PH :560 070-9844004403

401.** GREEN CARS PVT. LTD. (2154), NO.12/6 80 FEET ROAD, 6TH BLOCK KORAMANGALA, BANGALORE-560 095, PH :560 095-9845020796

402.* KESHKAMAL MOTORS (2075), NO.943 21ST MAIN, BANASHANKARI 2ND STAGE, (NEAR KIMS MEDICAL COLLEGE), BANGALORE-560 070,

PH: 560 070-9448071067.
403.** LE MANS MOTORS (3460), NEAR AYYAPPA
TEMPLE, S.M. ROAD, T. DASARAHALLY,
BANGALORE-560 057,
PH: 560 057-9845145001

404.* MAYUR ENTERPRISES (249), NEXT TO PIA BHAVAN KIADB MAIN ROAD, PEENYA 1ST STAGE, BANGALORE-58, PH :560058-9845122156. 405.* NEXUS (1153), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE-560 064, PH :560 064-9844013436.

06.** NEXUS (2768), #275/301, 80 FEET ROAD, OPP. M.S. RAMAIAH HOSPITAL (BEL ROAD), RMV 2ND STAGE, BANGALORE-560 094, PH :560 094-9844013436.

7.** PACE AUTOMOBILES (1057), 6TH MAIN HMT LAYOUT, R.T. NAGAR, BANGALORE-560 032, PH -560 032, 9845004710

408.## PUSHPAK MOTORS (4642), 105/1 2ND MAIN NANJAPPA LAYOUT, VIDYARANYAPURA MAIN ROAD, (OPP KRUTHIKA HOSPITAL), BANGLAORE-560097.

409.## RAJ (2829), NO.10 MAGADI MAIN ROAD, OPP. UNANI MEDICINE INSTITUTE, KOTIGEPALYA, BANGALORE-560 091, PH:560 091-9663555677.

PH:560097-9845087842.

110.** SMART CARS (3571), 3RD CROSS NEAR J.B. TILES, KAGGADASA PURA MAIN ROAD, C.V. RAMAN NAGAR, BANGALORE-560 093, PH :560 093-9663324361

411.## SOLOTECH MOTORS (2760), SURVEY NO. 82/2, D'SOUZA NAGAR, HOSAKEREHALLI-BANGALURU, DISTRICT-BANGALURU 560085, KARNATAKA,

PH :560085-9845072603/7259589375.

SOLOTECH SERVICE CENTRE (5245), 50
FEET MAIN ROAD AVALAHALLI,
MUNESHWARA BLOCK , DISTRICT BANGALORE, KARNATAKA,
PH :560010-9845772634.

413.* SPEED MOTORS (1750), 17/1 SUBRAMANYAPURA MAIN ROAD, KADIRENAHALLI, PADMANABHA NAGAR, BANGALORE-560 070, PH :560 070-9845153102.

414.## TEAM TECH AUTOMOBILES (5662), 78/1,SULEKUNDE, NEAR MUTHANALLUR CROSS., SARJAPURA MAIN ROAD, BANGALORE -562125.

PH :562125-9538516111.
415.** TRINITY CAR CARE PVT. LTD (5851),
SURVEY NO 52/1,SRI GANDHADAKAVAL
VILLAGE,
NAGARBHAVI.BANGALORE-560091.

DISTRICT-BANGALORE, KARNATAKA, PH:560091-9880793980.

116.** TRINITY MOTORS (4638), NO. 36, 4TH STAGE, W.C. ROAD, BASAVESHWARANAGAR, BANGALORE-560079, PH: 560079-9845539474. U.M. CARS PVT. LTD. (2847), KARNATAKA GOLF ASSOCIATION ROAD, KODIHALLI, OFF. AIR PORT ROAD, BANGALORE-560 008,

PH :560 008-9845165365.
418.* VISWAS CAR SERVICES PVT. LTD. (3238), NO 2, (OUT NO OF SY.NO 100/2) OFF SERVICE ROAD., KALYAN NAGAR ROAD, CHELEKERE, BANASWADI POST BANGALORE :-560043, PH :560043-9891313379.

BELGAUM

.19.* BHARAT AUTO SCAN (350), 892/1 PB ROAD, BELGAUM-590 016, , PH :590 016-9448120495

BIJAPUR

420.## BAGALI MOTORS (5159), SHIKARKHANA ROAD, BIJAPUR - 586104, DISTRICT -BIJAPUR, KARNATAKA, PH :586104-9448100444.

CHIKBALLAPUR

421.## SUKOVE ENTERPRISES (3426), B.B. ROAD N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA), PH :562 101-9880607034.

CHIKMAGALUR

422.## AAMANTHRANA MOTORS (4346), K.M. ROAD, CHIKMAGALUR, , PH:577101-9945462658.

423.## FORMULA MOTORS (338), K.M. ROAD, CHIKMAGALUR-577 101, , PH:577 101-9448743284.

CHIKODI

424.## OM MOTORS (4445), 1751, ANKALI ROAD, NEAR B K COLLEGE, CHIKODI-591201, KARNATAKA, PH :591201-8861555999.

CHINTAMANI

425.## TIPPU AUTO GARAGE (5770), MG ROAD,NEAR BAGEPALLI CROSS, CHINTAMANI-563125, DISTRICT-KALOR, KARNATAKA, PH: 563125-9036698340.

CHITRADURGA

426.## PRINCIPAL (255), J.M.I.T, N.H.4, P.B. NO.73, CHITRADURGA-577 502, PH:577 502-9731330300.

DAVANGERE

427.## HEGDE AUTO CENTRE (172), NO 2007/37, NEAR BIET, SHAMANUR ROAD, DAVANGERE, KARNATAKA-577004, PH :577004-8494853646.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

428.## SREE MALLIKARJUNA MOTOR (229), NO 68, RMC ROAD, NEAR KSRTC BUS STAND, DAVANGERE, KARNATAKA - 577003, PH :577 003-9880701015.

DEVANAHALLI

429.## SAHARA AUTOMOBILES (4731), OPP. A . RTO OFFICE, NH-7, B.B. ROAD, DEVANAHALLI-562110, KARNATAKA, PH :562110-9448662364

DHARWAD

430.** MYSORE GARAGE (2468), BELGAUM ROAD, DHARWAD-580 001, (KARNATAKA), PH :580 001-9844133273.

DODDABALLAPUR

431.## PRESTIGE MOTORS (4875), NEAR RAILWAY STATION KHASBHAG, DODDABALLAPUR, , PH :560026-9900274594

GADAG

432.## MODERN MOTORS (8939), HUBLI ROAD, GADAG-582 103, (KARNATAKA), PH :582 103-9448746579.

GULBARGA

433.## DELUX AUTO SERVICE (6940), SURVEY NO 77/8,VILLAGE KUSNOOR,NEAR -, UNIVERSITY, SEDAM ROAD, GULBARGA-585104, DISTRICT-GULBARGA, (KARNATAKA), PH. 585104-9242991292.

HOSPET

434.## SUPREME AUTO SERVICE (2569), NEAR RTO OFFICE, HARIHAR ROAD, HOSPET-583 203, (KARNATAKA), PH :583 203-9845307361.

HUBLI

435.## SHRI BASAVA MOTORS (4968), OPP SANA COLLEGE, APMC PB ROAD, BHIRIDEVARKOPPA, HUBLI-580025, , PH :580025-9980025644

KADUR

436.## SRI SAI MARUTHI SERVICE STATION (5725), ULUKINAKALLU, NH 206, KADUR, , PH :583201-9916947196.

KARKALA

437.## KARKALA MOTORS (3549), TELLAR ROAD, KARKALA-574 104, (KARNATAKA), PH :574 104-9845356244.

KOLAR

438.## SHIVA SERVICE POINT (2472), M.B. ROAD, KOLAR-563 101, (KARNATAKA), PH:563 101-9448228604.

KOLLEGAL

439.## FIX PLUS AUTO CARE CENTRE (4249), C-8, IND. ESTATE, MAHADESHWARA COLLEGE ROAD, KOLLEGAL-571440, PH: :571440-9448807237.

KOPPA

440.## AUTO TECH (3448), MAIN ROAD, UPPERPET, KOPPA-577 126, (CHIKMAGALUR DIST.), PH:577 126-9448156950.

KUMTA

441.## SOLOTECH (4547), NEAR MARUTI TEMPLE, HANDIGON, KUMTA- 581343, PH :581343-9448149607.

KUNDAPUR

142.* PRAKASH AUTO SERVICE (4522), NEAR: K.E.B., VODERHOBLI, KUNDAPURA-576 201, PH:576 201-9341035642.

MANIPAL

443.## MANIPAL MARUTI AUTO WORKS (4578),
MANIPAL ALEVOOR ROAD, NEAR R.C.
CHURCH, OPP. SIGMA BAZAR, MANIPAL
(UDUPI DIST),
PH:591102-9448108318.

MUDHOL

444.## OM MOTORS (5857), OPP TALUKA OFFICE, LOKAPUR ROAD, MUDHOL-587313, DISTRICT-BAGALKOT, KARNATAKA, PH:587313-9663830660.

MUDIGERE

H45.## BADRIYA CAR SERVICE POINT (5364), K.M.
ROAD,MUDIGERE, DISTRICTCHIKAMANGALORE, PIN - 577132,
(KARNATAKA),
PH:577132-9448007094.

MYSORE

446.** CAR CLINIC (346), 1959/A, BOGADI RING ROAD, NEAR GLN CONVENTION HALL, BOGADI, MYSORE, PH: 585106-9342184831.

NELAMANGALA

447.## GOUTHAM MOTORS (4332), PATEL CHANNAPPA EXTN, NELAMANGALA-562123, KARNATAKA.

RABAKAVI BANAHATTI

448.## SANGAMA MOTORS (5726), BESIDE CMC,RAMPUR MAIN ROAD, RABAKAVI-587314, DISTRICT-BAGALKOT, KARNATAKA, PH :587314-9480035617.

PH:562123-9880251546.

RAICHUR

449.## HEERA MOTORS (3730), OPP. MOTI MASJID, SHIVJI OIL MILL COMPOUND, TIPU SULTAN ROAD, RAICHUR-584 101 (KARNATAKA), PH :584 101-9845156322.

RANEBENNUR

450.## KIZEN MOTORS (4568), P.B. ROAD, OPP. A.P.M.C MARKET, RANEBENNUR-581115, PH:581115-9900922022.

SAGAR (KARNATAKA)

451.## ADITYA AUTOMOBILES (2077), JOG ROAD, SAGAR-577 401, (KARNATAKA), PH :577 401-9448024395.

452.## MALLIKA AUTO CENTRE (2133), MALLIK COMPLEX, B.H. ROAD, SAGAR-577 401, PH:577 401-9448139605.

SHIMOGA

453.## NEPTUNE AUTO WORKS (5271), PLOT -5 AUTO COMPLEX , SAGAR ROAD - SHIMOGA , DISTRICT - SHIMOGA , KARNATAKA, PH :577204-9448319758

454.* SHIMOGA AUTO ENGG WORKS (246), GARDEN AREA, SHIMOGA-577 201, KARNATAKA, PH :577 201-7899114872.

SIDDAPUR

455.## MARUTI AUTO WORKS (5335), SORAB ROAD.SIDDAPUR (U.K)-581355, DISTRICT -UTTAR KANAND, PIN-581355, KARNATAKA, PH :581355-9448525801.

SIRSI

456.* ARUNDHATI MOTORS (1258), HUBLI ROAD, SIRSI-581 402, (UTTAR KARNATAKA), PH :581 402-9845098822.

SRINGERI

457.## SHUBHASHREE MOTORS (6434), AGUMBLE ROAD, SRINGERI, DISTRICT -CHIKAMAGALUR, SRINGERI - 577139, KARNATAKA, PH : 577139-9448170400.

TIRTHALL

458.## SUMUKA AUTOMOBILES (5133), AP ROAD CEEBENE KERI, DISTRICT-SIMGA, SHIMGA-577414, KARNATAKA, PH -577414-968604040

TUMKUR

459.## APOORVA CAR CARE CENTRE (5327), B.N.P.
COMPOUND BEHIND KRISHNA THEATRE,
M.G. ROAD - TUMKUR, DISTRICT - TUMKUR,
KARNATAKA,
PH :571440-9901515516.

UDUPI

460.* ST. JUDE AUTOMOBILE ENGG. WORKS (4521), B.D.MARG, AMBALAPADI, UDIPI-576 103, PH :576 103-9844991241.

PH .576 103-96449912

UPPINANGADI 461.## RATNA ENTERPRISES (5447), BUILDING NO

5/514 KUKKAJE, SUBRAMNYA ROAD, UPPINANGADI, , PH:587313-9972995341.

KERALA

ADIMALY

462.## PLATHOTTAM AUTOMOBILES (3864), NH-49, OPPOSITE TO MINI INDUSTRIAL ESTATE, ADIMALI-685561, PH:685561-9447023073.

ADOOR

463.## AUTO CLUB (2132), NEAR H.P. PUMP, VADAKKADATHUKAVU P.O, ADOOR, PATHNAMTHITTA DISTT, PH :691523-9447440184.

ALAPPUZA

464.## ESSAR MOTORS (4959), KALARKODE, NEAR CHINMAYA SCHOOL, NH-47, ALAPPUZHA-688003, KERALA, PH :688003-9249938474.

ALUVA

65.## AUTO TEAM (2630), A/189 A, PARUR JUNCTION, ALUVA, (KERALA), PH :683108-9947333760.

AMBALLUR

466.## LAKSHMI DEVI AUTO GARAGE (4137), AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA, PH :680301-9847903949.

ANCHAL

467.## NAMI-TAJ (2534), NEAR ST. GEORGE CENTRAL SCHOOL, R.O. JUNCTION, ANCHAL, KERALA -691 306., PH :691306-9447453745.

ANJUMOORTHY

468.## SAFA AUTO CARE (3847), N H ROAD, MANGALAM PALAM, ANJUMOORTHY POST, VADAKKENCHERY, PALAKKAD DISTT, KERALA, PH:678682-9447303347.

ATTINGAL

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

469.## OM SHAKTI AUTOMOBILES (4466). KIZHUVILAM P.O., MAMOM, ATTINGAL, KERALA-695104, PH:695104-9744658681.

AYOOR

470.* MAKKATTU AUTO CLINIC (5051), AYOOR-ANCHAL ROAD.PANACHAILA, AYOOR -691306, DISTRICT - KOLLAM, KERALA, PH:691306-9847288624

CALICUT

471.## MALABAR MOTORS (4655), EAST NADAKKAVU, P.O. ERANIPALAM, CALICUT-673006, KERALA. PH:673006-9846089190.

472.## MARUTI SCAN (1675), BYE PASS JUNCTION, MFFNCHANDA, CALICUT-673 018. PH:673018-9847130508

CHALAKUDY

473.## STAR MARUTI GARAGE (5367), NH47 BYE PASS, NEAR CRESCENT PUBLIC SCHOOL, .CHALAKKUDY, DISTRICT - THRISSUR, PH:680307-9946009375.

VIJAY AUTO SERVICE (1626), POTTA, CHALAKUDY-680 307, PH:680307-9995074628.

CHANGANACHERRY

475.* PALATHRA MOTORS & SERVICE CENTRE (1072), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY-686 104, PH:686104-9447195154.

476.## SAAFAA AUTOMOBILES (1148), PALATHARA CHIRA, BY PASS ROAD, CHANGANACHERRY, KOTTAYAM-686104, , PH :686104-9447042517

CHENGANNUR

477.* NEW TECH AUTOMOBILES (1978). INDUSTRIAL ESTATE, MUNDANCAVU. CHENGANNUR-689 121, KERALA. PH:689121-9388915757.

CHERTHALA

POZHICKAL CAR WORLD (3037), NEAR BOYS HIGH SCHOOL, CHERTHALA. ALAPPUZHA DIST., KERALA-688 524. PH:688524-9947474752.

ETTUMANOOR

479.## ROHIT MOTORS (4636), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA, PH:686630-9447079010.

KALANJOOR

480.## AGT MOTORS (5937), KIP JUNCTION. KALANJOOR-689694. DISTRICT-PATHANAMTHITTA, KERALA, PH:689698-9744409444.

KALLAMBALAM

481.## PRAKASH AUTO ENGINEERS (5548), VADASSERIKONAM P.O. KALLAMBALAM. VARKALA.KALLAMBALAM-695143. DISTRICT-TRIVANDRUM, KERALA. PH:695143-9847159618.

KALLUMUTTY

482.## MARUTI CARE (4179), KALLUMUTTY, IRITTY P.O. KANNUR KERALA - 670703 PH:670703-9946703070.

KALPETTA

483.## VARCO MOTORS (4724), 18/226-1, NEAR VELLARAMKUNNU, NH 212, KALPETTA -673121,,

PH:673121-9961569898. KANJIRAPPALLY

484.## MACK ENTERPRISES (2729), T.B.ROAD, KANJRAPALLY. PH:686507-9447093739

KANNUR

485.## AREN MOTORS (5139), CHAKKARAKAL.P.O. MUZHAPPALA, DISTRICT - KANNUR, KERALA.

PH:670613-9446771237. PIONEER AUTO & ENGG.WORKS (4722), KANNOTHUMCHAL ROAD, KANNUR - 2. (KERALA).

PH:670005-9447798255

KARIMANOOR

487.## MACS AUTOMOBILES (5745), SILVER SQUARE, KARIMANNOOR, THODUPUZHA, DISTRICT-IDUKKI, KERALA, PH:685581-9633275410.

KASARGOD

488.## CARS CARE (4579), ANANDPUR. VIDYANAGAR P.O., KASARAGOD, KERALA-671123. PH:671123-9847251115

KATTAKADA

489.## CITY ENGINEERS (4947), MARUTI SERVICE CENTRE, NEYYATTINKARA ROAD. KATTAKADA-695572, DISTRICT-TRIVANDRUM (KERALA), PH:695572-9447206257.

490.## MADATHIL MOTORS (5456), MADATHIL HOUSE.CHOONDUPALAKA . KATTAKADA P.O. - TRIVANDRUM , DISTRICT -TRIVANDRUM . (KERALA). PH:695543-9495192389.

KATTAPPANA

491.## UNITED SERVICE CENTER (4433). EDASSERT JUNCTION. KATTAPPANA-685508, KERALA PH:685508-9961432941.

KAYAMKULAM

492.## PERFECT MOTORS (4948), MARUTI SERVICE CENTRE, NH-47, CHEPPAD. KAYANKUI AM-690507. DISTRICT-ALAPPUZHA (KERALA), PH:690507-9447048338.

KONNI

493.## GLOBAL MOTORS (2836), VAKAYAR P.O., KONNI-689 698, (KERALA), PH:689698-9446222944

494.## MUTTATH AUTOMOBILES (5525). AROORPALAM.KONNI-689691. DISTRICT -PATHANANTHITTA, KERALA, PH:689691-9447431751.

KOOTHATTUKULAM

495.## EXTRA CARE SERVICES (3232), DEVA MATHA JUNCTION, M.C. ROAD, KOOTHATTUKULAM-686 662. ERNAKULAM DIST. (KERALA), PH:689121-9544552080.

KOTHAMANGALAM

496.## EXCEL MARUTI SERVICE (4342), BYE-PASS ROAD, KOTHAMANGALAM, ERNAKULAM-686691. PH:686691-8848605865

497.## MAJESTIC MOTORS (1253), NEAR THANKALAM BYE-PASS ROAD. KOTHAMANGAI AM-686 691, KERAI A PH:686691-9946427528.

KUNDARA

498.## SPARK SERVICE (5772), ELAMPALLOOR.P.O. KUNDARA-691501. DISTRICT-KOLLAM. (KERALA). PH:691501-9809608020.

KUTHUPARAMBA

499.## KRISHNA MOTORS (3435), KUTTIKKUNNU, NEAR 66 KV SUB STATION, KUTHUPARAMBA-670 643, KANNUR DIST. (KERALA), PH:670643-9497296380.

MANANTHAVADY

500.## AUTO CARE (2541), (SHEEJA AUTO ENGG, WORKS), THALASSERY ROAD. MANANTHAVADY-670 645 WAYANAD (DIST.). PH:670645-9447040068.

MANJERI

501.## MARUTI AUTO HOUSE (4726), CHERANI. KARUVAMBARAM PO. MANJERI, KERALA, PIN 676123. PH:676123-9447129289.

MANNAR

502.## MOHANS AUTOMOBILES (5457), MOHANS AUTOMOBILES & ENGINEERS KUTTEMPEROOR P.O. MANNAR, DISTRICT -ALAPPUZHA , (KERALA), PH:689622-9447877377.

MANNUTHY

503.** TOP CLEAN SERVICES (2834), 13/450 MANNUTHI BYE PASS, P.O. OLLUKKARA. THRISSUR, (KERALA). PH:680651-8592947776, 9846037818.

MEENANGADI

504.## MOTOR TECH (2440), EAST MEENANGADI, KRISHNAGIRI P.O., WAYANAD-673 591, (KERALA). PH:673591-9539195850.

MOOCHIKKAL

505.## CHELADAN'S MARUTI ENGINEERS (4659). THANUR ROAD, MOOCHIKKAL-676307, MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA). PH:676307-9895443563.

MUNNAR

506.## PLATHOTTAM AUTOMOBILES (4447). COLONY ROAD, IKKA NAGAR, MUNNAR, IDUKKI, KERALA - 685612. PH:685612-9447023073.

MUVATTUPUZHA

JAWAN AUTOMOBILES (2730), MADAVOOR POST, MUVATTUPUZHA-686 669, , PH:686669-8943345500

NEYYANTTINKARA

508.## XANON ENGINEERS (4635), RAVELI TOLL JUNCTION, NEYYATTINKARA, TRIVANDRUM-695121. PH:695121-9447014813.

NILAMBUR

509.## CONFIDENCE MOTORS (5140). PAI UNDA CHUNGATHARA NII AMBUR-679334. DISTRICT -MALLAPURAM, KERALA. PH:679334-8075272281.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass: Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

NILAMEL

510.## LIBRA (3431), M.C. ROAD, NILAMEL-691 535. KOLLAM DIST., (KERALA), PH:691535-9895629768.

OCHIRA

511.* MANGALATH AUTOMOBILES (3836), NH 47 VALIYAKULANGARA, OCHIRA P O. KOLLAM DIST. KERALA-690526, PH:690526-9847258696.

OLLUR

512.## TOPCLEAN SERVICES (4468), 10/153, CHRISTOPHER NAGAR, P.O OLLUR, TRICHUR (KERALA). PH:680306-9846037818.

PALAKKAD

513.## CAR CRAFT (2139), 5/682 (1), MANALI, PALAKAD-678 001, (KERALA), PH:678001-9349607619.

PANDALAM

514.* AISHWARYA AUTOMOBILES (2067), NEAR K.S.R.T.C. BUS STOP, PANDALAM-689 501. . PH:689501-9847049140.

PARIPALLY

515.## ALLIANCE MARUTI SERVICES (3243), NH-47. PARIPPALLY-691 574, KOLLAM DIST. (KERALA), PH:691574-9349926440.

PATHANAPURAM

516 ## MANNII AUTOMOBII FS (4150), NEAR PANCHAYAT OFFICE, PATHANAPURAM, KERALA-689695 PH:689695-9447258496

PATHNAMTHITTA

517.** C.J. MARUTI CARE CENTRE (1255), VARIYAPURAM, ELANTHOOR EAST P.O., PATHANAMTHITTA-689 643, (KERALA), PH:689643-9446913874.

PERAVOOR

518.## CAR CARE AUTOMOBILES (4422). KODENCHAL PERAVOOR NIDUMPOYIL P.O. KANNUR- 670650 PH:670650-9946444691.

PERUMBAVOOR

519.## MILLENNIUM MOTORS (4873), OLD VALLAM ROAD, KADUVAL, PERUMBAVOOR-683542. DISTRICT-ERNAKULAM (KERALA), PH:683542-9446661111.

QUILANDY

520.## HITECH MARUTI (3025), MAIN ROAD. KOYILANDY, PIN-673 305, CALICUT DISTT., PH:673305-9447457996.

RANNY

521.## DEEPA AUTOMOBILES (5177), DEEPA AUTOMOBILES.PAZHAVANGADI, P.O. RANNY .689673. DISTRICT-PATHANAMTHITTA, KERALA. PH:689673-9447216725

SASTHAMANGALAM

522.## MARSHAL AUTOMOBILES (4035), SWATI NAGAR, TC 10/147, PIPPIN MOODU. SASTHA MANGALAM, PEROORKADA, TRIVANDRUM 695005

SUI TAN BATHERY

523.## AUTOMEK (4725), BEENCHI P.O., SULTAN BATTERY-673 592, , PH:673592-9249999515

PH:695005-9447461101.

524.## NEW INDIAN MARUTI SERVICE CENTRE (4577), 14/789A, 14/789A1, KUPPADI, MYSORE ROAD, SULTHAN BATHERY, WAYANAD -673592

PH:673592-8281682822 525.## TEE PEE MOTORS (4773), 9/668-B OOTY ROAD, NEAR BLOCK OFFICE, SULTAN BATHERY, WAYANAD (KERALA), PH:673592-8547201421.

TALIPARAMBA

526.## YESKAY (3368), KAKATHODE, TALIPAPARAMBA - 670141, KANNUR DISTT (KFRALA) PH:670141-9744076850.

THAI ASSERY

527.## SAFE HANDS (3038), ERANHOLI, CHUNGAM. THALASSERY -670 107, (KERALA), PH:670107-9744322317.

THALAYOLAPARAMBU

MYALIPARAMPIL MOTORS (3233), SILON JUNCTION, NEAR THALAYOLARAMBU. POOZHIKOL P O 686604 PH:686604-9447562050.

THAMARASSERY

529 ## MAI ABAR MOTORS (4645), WARD NO. 12. BLDG NO. 121, WAYANAD ROAD, KARADY. THAMARASSERY, CALICUT, PH:673573-9349114119

THIRUVALLA

530.## MARUTI AUTO SPOT (1628). AYROOKUZHIYIL HOLDINGS, OPPOSITE PUSHPAGIRI MEDICITY, PERUMTHURUTHY. THIRUVALLA, KERALA -689107. PH :689107-9447860777

THIRUVANANTHAPURAM

531.## EMINENT MARUTI SERVICE (2360), T.C. 610 M.C. ROAD, MANNANTHALA, TRIVANDRUM-695 015 PH:695015-9447713639.

532.## HITECH INDUSTRIES (1951), NEAR ULLOOR BRIDGE, PATTOM P.O., THIRUVANANTHAPURAM-695 004. (KERALA). PH:695004-9447732057.

533.## MUKUNDANS (3434), POONTHY ROAD, PADMAVILASAM, KUMARAPURAM., THIRUVANANTHAPURAM-695 011. PH:695011-9349882788.

PROFESSIONAL MOTORS (1256), NEAR ELECTRICITY BOARD, PEROORKADA, TRIVANDRUM-695 005, PH:695005-9947175650.

535.## SREEKARIYAM AUTOMOBILES (353). SREEKARIYAM P.O., THIRUVANANTHAPURAM-695 017. . PH:695017-9447050313.

THODUPUZHA

536.## UNIVERSAL MARUTI (2563), VENGALLOOR P.O. THODUPUZHA (KERALA). PH:685585-9447023024

TRIVANDRUM

KICHU MOTORS (5453), TC.49/962 ,SREEMOOLAM NAGAR CHIRAMUKKU MANACAUR (PO) TRIVANDRUM, DISTRICT -TRIVANDRUM, KERALA, PH:695572-9847023025.

VADANAPPALLY

538.## MONARCH MARUTI CARE CENTRE (4079), NEAR NORTH JUMA MASJID, GANESHA MANGALAM, P O VADANAPALLY, TRICHUR DIST (KERALA), PH:680614-9847792698.

VADAVATHOOR

539.## CCARS (5754), VADAVATHOOR PO-KOTTAYAM, DISTRICT-KOTTAYAM, PIN-686503, KERALA. PH:685503-9447208558

VARKALA

S.S. MOTORS (2979), NEAR POLICE STATION, VARKALA-695 141, TRIVANDRUM DISTT PH:695141-9446104991.

VATAKARA

541.## RANI AUTOMOBILES & ENGINEERING WORKS (1674), 10/496, NADAPURAM ROAD, MADAPPALLI COLLEGE POST, VATAKARA, KOZHIKODE - 673102.. PH :673102-9400513139

LAKSHADWEEP

LAKSHADWEEP

542.## POPULAR REPAIR & SERVICE CENTRE (2944), SECRETARIAT ROAD, KAVARATTI, LAKSHADWEEP-682 555 PH:682555-9448463737.

MADHYA PRADESH

BALAGHAT

543.## GULAB AUTOMOBILES (1553), GUJARI CHOWK, BALAGHAT-481 001, MADHYA PRADESH.

PH:481001-9425402926. SAURAV MOTORS (4069), DEENHI ROAD. GARRA INDUSTRIAL AREA, BALAGHAT, MADHYA PRADESH.

PH -481001-9300963731

BARWANI

545.## SPEED AUTOMOBILES (5260), KHANDWA BARODA ROAD, NR. BALAJI TOLL KANTA BARWANI-451552 DISTRICT-BARWANI, MADHYA PRADESH. PH:451552-9926146073.

BETUL

ADITYA MOTORS (1263), NAGPUR BHOPAL ROAD, SADAR, BETUL-461 001, MADHYA PRADESH. PH:460001-9425381581.

BHIND

547 ## MAA PITAMBARA MOTORS (5241), OPP.RAJENDERA CONVENT SCHOOL . LAKSHAR ROAD - BHIND , MADHYA PRADESH. PH:477001-9826240582.

BHOPAL

SHRI KRISHAN CAR CARE (1679), 548.## POLYTECHNIC ROAD, NEAR PETROL PUMP. BHOPAL, (M.P.), PH:462002-9424454030.

549.## SHUBHAM AUTOMOBILES (5052), PLOT NO. 1 & 2, TIRANGA ROAD, SHAHPURA, BHOPAL, MADHYA PRADESH -462039, PH:462039-9425009869.

TAURUS AUTOMOBILES (3372), ALAKNANDA COMPLEX, OPP. VIJAY STAMBH PRESS COMPLEX, M.P. NAGAR ZONE-I, BHOPAL (M.P.),

PH:462011-9303131403.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

551.** VIDHYA AUTOMOBILES (320), PLOT NO. 235, ZONE II, B.

PH :462011-9826053198.

BIAORA

552.## GURUKRUPA MOTORS (5670), OPP PRABHAT BREAD INDUSTRY, AB ROAD -BIOARA, DISTRICT - BIOARA, MADHYA PRADESH, PH :465674-9425038727.

BURHANPUR

553.** SWADESHI MOTORS (4229), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR, MADHYA PRADESH, PH :450331-9826337438.

DARRA

554.## MODI MOTORS (3857), BALLA KA DERA, JHANSI ROAD, DABRA, GWALIOR, PH :475110-8770360194.

DAMOH

555.## MARUTI PRIME (1156), BUS STAND, STATION ROAD, DAMOH-470 661, PH :470 661-8319706998.

DATIA

56.## HIND MOTORS (4470), NH-75, JHANSI BYPASS ROAD, NEAR S.R.I COLLEGE, KALAMPURAM TIRHA, DATIA, MADHYA PRADESH - 475661, PH :475661-9406969206.

DEWAS

557.## AZAD MOTORS (4534), 10, JAWAHAR NAGAR COMPLEX AB ROAD DEWAS(MP)404051, PH :455001-9827533591.

DHAR

558.## JIYO MOTORS (5031), OPP DAK BANGLA.INDORE ROAD DHAR., DISTRICT -DHAR, DHAR - 454001, MADHYA PRADESH, PH: 454001-9893633559.

GWALIOR

559.## CLASSIC MOTORS & SERVICE STATION (5242), CHAUHAN PIAO.M.G. ROAD, THATIPUR. MORAR, GWALIOR, MADHYA PRADESH, PH:474011-9329603001.

560.** MARUTI ENTERPRISES (3021), KHERAPATI ROAD, GWALIOR-474 002, (M.P), PH :474002-9425116466.

HARDA

561.## MANOJ UDYOG & SERVICE CENTER (4145), 87-88, INDUSTRIAL AREA, CHHIPANER ROAD, HARDA, M.P, PH :461331-9826227245.

INDORE

562.## BADSHAH MOTORS (5027), 150/2,NOORANI NAGAR,NEAR JAIMAL SINGH PETROL PUMP, DHAR ROAD,INDORE-452008, DISTRICT-INDORE, MADHYA PRADESH, PH: 452008-9826098427.

563.** BOMBAY MOTORS (1655), 10 Y.N. ROAD, INDORE-452 003, (M.P.), PH :452003-7314222786.

564.## JYOTI RAGHUNATH MOTORS (5149), 3/3 RAMBAGH, BEHIND PETROL PUMP, INDORE -452001, MADHYA PRADESH, PH :452001-942535368.

ITARSI

565.* PITAMBARA MOTORS (5041), NH-69.BETUL ROAD.NEAR PLYBOARD, FACTORY ITARSI, DISTRICT - ITARSI, MADHYA PRADESH, PH :461111-9406525060.

36.** UNITY ENTERPRISES (3270), PLOT NO.97, INDUSTRIAL AREA, KHEDA, ITARSI-461 111 (M.P.),

PH :461 111-8120025666

567.## SUPER MARUTI SERVICE (4952), 375-A PREM NAGAR, OPP. GURUDWARA, JABALPUR-482001, MADHYA PRADESH, PH :482001-7999993375.

568.## YASH VEHICLES CARE (2169), 1664, WRIGHT TOWN .OPP. TELEGRAPH GATE NO. 2 JABALPUR (M.P.), PH :482002-9893237505.

JAWAD

JABALPUR

569.## SHARMA MOTORS (5764), IN FRONT OF PAWAN MILL, STATION ROAD, JAWAD-458330, DISTRICT-NEEMUCH, MADHYA PRADESH, PH:458330-9425441270.

KATNI

570.## KATNI MOTORS (4949), C/O MAHURANIPUR UNION, TRANSPORT CORPORATION, NH-7, PANNA MORH, KATNI-483501 (MADHYA PRADESH), PH. 483501-9425162660.

KHANDWA

571.## M.K.AUTOMOBILES (5326), SANTOSH NAGAR, OPP. JHEELODHYAN, INDORE ROAD, KHANDWA - 450 001, PH :450001-9425085666.

KUKSHI

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs 572.## DILIP MARUTI SERVICE CENTER (4649), OPP. GAYATRI SAROVAR, KUKSHI, DISTT DHAR, PH:454331-9340709923.

MANDSAUR

573.## DEV MOTORS (4562), SITAMAU FATAK, MANDSAUR-458001, MADHYA PRADESH, PH :458001-9826751534.

574.* JANGID MOTORS (2735), NAYAPURA ROAD, NEAR R.K. HOSPITAL, MANDSAUR-458 001, (M.P.),

PH:458001-9827266583.

MHOW

575.* HIGHWAY MOTORS (4144), A.B. ROAD, DONGRAGAON, MHOW-453441, INDORE M.P., PH :453441-9826035653.

MORENA

576.## SHYAM MARUTI SERVICE STATION (8935), SHYAM BIHAR COLONY, A.B. ROAD, MORENA-476 001, MADHYA PRADESH, PH:476 001-7999624671.

NAGDA

577.## MARUTI NANDAN (3939), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA, DISTT UJJAIN, PH:456335-9910074658.

SAGAR (M.P)

578.## SHREE SAGAR MOTORS (4955), NEAR GURUDWARA, JHANSI BHOPAL ROAD, BHAGWANGANJ, SAGAR-470002, MADHYA PRADESH, PH. 470002-9826070549.

SARNI

579.## JHANVI SERVICE STATION (3738), MAIN ROAD, BAGDONA, SARNI-460 449, DISTT. BETUL (M.P.), PH :460449-9425382313.

SATNA

KAPOOR SERVICING CENTRE (1162), 90 PREM NAGAR, SATNA-485 001, (M.P.), PH:470661-9827095182.

SEONI

581.## HIGHWAY MOTORS (2262), NEAR MOTEL CENTER POINT, SEONI-JABALPUR HIGHWAY, SEONI, (M.P.), PH :480882-9424928978.

SHAHDOL

582.## PACE CRAFTERS (2145), NEAR VIRAT TEMPLE, BANGANGA TIRAHA, REWA ROAD, SHAHDOL, (M.P.), PH :484001-9424701495.

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

SHAJAPUR

583.## SHRIYA MOTORS (2568), 174 A.B. ROAD, SHAHJAPUR-456 001, (M.P.), MADHYA PRADESH, PH :456 001-9826783993.

SHEOPUR

584.## GOYAL AUTO (5446), NEAR NABBAN MARKET, BARODA ROAD, SHEOPUR, DISTRICT - SHEOPUR, MADHYA PRADESH, PH :476337-9826240944.

SHIVPURI

585.* KARUN MOTORS (4273), NEAR ARUN DHARAMKANTA, GUNA NAKA, A.B. ROAD, SHIVPURI, PH :473551-9425728285.

SIDHI

586.## KHARE MOTORS (4068), NH-75, SINGRAULI ROAD, SIDHI, MADHYA PRADESH, PH :486661-9425823952.

TIKAMGARH

587.* ASHENDRA AUTOMOBILES (2636), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA, KUNDESHWAR, TIKAMGARH-472 001, MADHYA PRADESH, PH 472001-9009129909.

UJJAIN

SUGANDHI BROTHERS (324), DEWAS ROAD,
 UJJAIN (M.P), MADHYA PRADESH,
 PH :465010-9406822255.
 ZALANI AUTO SERVICE (1554), A 15/9,
 MAHAKAL VANLIYA KENDRA, NANAKHEDA,
 UJJAIN 456010.

PH:456010-9713884177.

VIDISHA

590.## SAMAY MOTORS (5179), NEAR SC/S SHED , PITALMIR CHOURAHA, SAGAR ROAD NH-86, VIDISHA-464002, PH 464002-9425392521

WAIDHAN

591.## ANANT MOTORS (5732), NEAR ESSAR TOWNSHIP, BILAUNJI ,WAIDHAN, DISTRICT-SINGRAULI, PIN-486886, MADHYA PRADESH, PH -486886-9425823952.

MAHARASHTRA

AKLUJ

592.## SONAJ AUTOMOTIVES PVT. LTD. (2665), SHANKARRAO MOHITE PATIL, CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.O. BOX NO.-11, AKLUJ -413 101 (MAHARASHTRA), PH :413101-9657713360.

AKOLA

593.## AUTOLAND (5936), RAM NAGAR, TOSHNIWAL LAYOUT, AKOLA-444005, DISTRICT-AKOLA, MAHARASHTRA, PH: 4444005-9422164050.

AKOLE

594.## SAMARTH CAR CARE (5555), MAHALAXMI COLONY,K.G. ROAD-AKOLE, DISTRICT -AHMEDNAGAR, PIN-422601, MAHARASHTRA, PH. 422601-9881759099.

AMALNER

595.## LUCKY AUTO CARES (5853), R.K. COMPLEX,R.K. NAGAR, DHULE ROAD, AMALNER-425401, DISTRICT-JALGAON, MAHARASHTRA, PH: 425401-9422789764.

AMBERNATH

596.* J.S. AUTOMOBILES (4567), B-31/3, MIDC, KALYAN AMBERNATH ROAD, AMBERNATH-421501, MAHARASHTRA, PH: 421501-9370116436.

AURANGABAD

597.* CAR CARE (5173), #85.SERVICE INDUSTRIAL SECTOR, TOWN CENTRE CIDCO, DISTRICT-AURANGABAD, MAHARASHTRA, PH: 431006-9158000029.

598.* MARUTI AUTOMOBILES (3441), CHETAN TRADE CENTRE, JALNA ROAD,OPP. SFS SCHOOL, AURANGABAD - 431001, PH :431101-9767301999.

BADLAPUR

599.## OMKAR AUTO SERVICES (3376), OMKAR BUNGLOW, GOLE WADI, KULGAON STN., BADLAPUR DIST. THANE, PH :421503-9326080457.

BARSHI

600.## OM SERVICE CENTRE (5359), KURWEDI ROAD - BARSI, DISTRICT - SOLAPUR , PIN -413401, (MAHARASHTRA), PH :413401-9850437003.

BEED

601.## NEW AGWAN SERVICES (2235), 850 SHYOG NAGAR, JALNA ROAD, BEED-431 122, PH :431122-9822217321.

BOISAR

602.## SIFAR CAR CARE (4055), PLOT NO. 15 AT-KURGAON, P O KUNDAN, BOISAR TARAPUR ROAD, TAL PALGHAR, DISTT THANE, PH :401506-9765509990.

CHANDRAPUR (MAHARASHTRA)

603.## SHEIKH AUTOMOBILES (5379), APPOSITE GOVT. ITI.CIVIL LINES , CHANDRAPUR, DISTRICT - CHANDRAPUR, MAHARASHTRA, PH :442401-9422171896.

CHIPLUN

604.## MANORKAR AUTOMOBILES (270), NEAR RAILWAY STATION, BOMBAY-GOA HIGHWAY, WALOPE CHIPLUN-415 605, DISTT. RATNAGIRI, PH:415605-9421239999.

605.## MAYUR MOTORS (168), SITA APARTMENTS, NEAR BAHADUR SHEIKH NAKA, CHIPLUN DISTT. RATNAGIRI, MAHARASHTRA, PH. :415605-9422431112.

DAPOLI

16.* ROYAL AUTO SERVICE STATION (3444), DAPOLI-MANDANGAD ROAD, MAUJE-DAPOLI, TAL- DAPOLI, DIST. RATNAGIRI-415 712 (MAHARASHTRA), PH:415712-8888101776.

DEOPUR

607.** AGRO ENGINEERING SERVICES (2244), DIVERSION ROAD, DEOPUR, DHULE-424 005, PH :424005-9823059471.

DOMBIVLI

608.## MEGA SERVICES (2573), A-173,PHASE-1,, NEW KALYAN BYPASS ROAD , OPPOSITE ADARSH PARK,MIDC, DOMBIVLI (E)-421203, PH :421203-8424070777.

GADACHIROLI

609.## VENUS AUTOMOTIVE (4170), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY, GADACHIROLI, MAHARASHTRA-442605, PH: 442605-968922822.

ICHALKARANJI

610.## SAI AUTO LEADS (3821), 7/597 SANGLI VES, ICHALKARANJI-416 115, DIST. KOLHAPUR, PH :416115-0230-2426089.

ISLAMPUR

611.## VIJAY MOTORS (5134), PETH ISLAMPUR ROAD, NEAR PETH NAKA -ISLAMPUR, DISTRICT - SANGLI, MAHARASHTRA, PH :415409-9860446084.

JALGAON

12.* SHREE MOTORS (3040), 362 SHIVAJI NAGAR, JALGAON-425 001, , PH :425001-9823150704.

KALWA

613.** SHREE SIDDHI MOTORS (5668), NEXT TO LILAWATI CO-OP SOCIETY/DATTAWADA, KALWA KHAREGAON ROAD-KALWA(W) -400605, DISTRICT - THANE, (MAHARASHTRA), PH :400605-9769775444.

KALWAN

614.## KRISHNA AUTOMOTIVE (4037), GANESH NAGAR, AT POST & TALUKA, KALWAN, DIST NASHIK-423501, PH :423501-8087988735.

KANKAVLI

315.** SAPALE AUTO SERVICE PRIVATE LIMITED (1975), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHUDURG-416 602, PH :416602-9422434701.

KATOL

616.## BALAJI SERVICE STATION (5962), PLOT NO. XI,MIDC, SAWARGAON ROAD, DONGARGAON-, KATOL, NAGPUR. 441302, DISTRICT-NAGPUR, MAHARASHTRA, PH. 441302-9763867144.

KHAMGAON

617.## JAIDEEP MOTORS (4779), NEAR RELIANCE PETROL PUMP, NANDURA ROAD, KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA), PH :444303-9850352826.

KHED

618.## BHARAT AGENCIES (4548), NEAR KAMAKSHI PETROL PUMP, AT POST KALBANI, TALUKA KHED, DISTRICT RATNAGIRI, 415621, PH :415621-9049024781.

KOLHAPUR

519.* VAKRATUNDA MOTORS (3142), OPP MAHAVIR COLLEGE, NAGALA PARK, KOLHAPUR, PH :416003-9822611559.

KOPARGAON

0.* SAI MOTORS (4449), NAGAR MANMAD HIGHWAY, NEAR HOTE LASHOKA, KOPARGAON, DIST. AHMEDNAGAR (MAHARASHTRA), PH :423601-9850684384.

LONAVALA

621.## APPOLO MOTOR REPAIRING WORKS (2543), MUMBAI-PUNE ROAD, LONAVALA, MAHARASHTRA-410 401, PH :415409-9370721905.

MAHAD

622.## SHREE AUTO (2572), NAGALWADI PHATA BOMBAY-GOA HIGHWAY, AT & TALUKA -MAHAD, DISTT. RAIGAD, MAHARASHTRA-402 301, PH. 402301-9422495799.

MALEGAON

623.## MALEGAON AUTO CENTRE (3721), NEAR MOTI BAUG NAKA, MALEGAON-423 203, , PH :423203-9371376911.

MANGAON

624.## KRUPA SERVICES (574), KRUPA SERVICES, AT: NANORE, POST: MANGAON, DISTT-RAIGAD-402 104, PH: 402104-9422375444.

MIRAJ

625.## ASHOK AUTOMOBILES (5672), C.S. NO:70-C,CHH - SHIVAJI ROAD, MIRAJ, DISTRICT - SANGLI, MAHARASHTRA, PH :416410-0233-2375961.

MUMBAI

626.* ALLIED AUTO AGENCIES (2666), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052, PH:400052-9768257450.

77.* ASHA AUTO SERVICE (570), I.O.C. DEALER, L.B. SHASTRI MARG, KURLA, MUMBAI-400 070, PH :400070-9833728833.

AUTO CRAFT (4759), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG,

VIKHROLI (W), MUMBAI-400083, PH :400083-9820022227.

629.## AMAR AUTOMOBILES (526), KING'S CIRCLE, MATUNGA, MUMBAI-400 019 (MHRS)., PH :400019-9869473310.

630.## BANAI AUTO CARE (6053), OPP. MAROL POLICE CAMP, NEXT TO AAREY CHECK POST, MAROL MAROSHI ROAD, MUMBAI-400 059, PH -400105-0,9810844333

631.** CARKRAFT AUTOMOBILE SERVICES PVT. LTD. (4654), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR SAI DHAM MANDHIR, MULUND (W), MUMBAI, PH:400080-9820296924.

632.** CHAMUNDA MOTORS (P) LTD. (520), RAM BAUG NEAR SUNDAR DHAM, OFF S.V.ROAD, BORIVILI (W), MUMBAI-400 092, PH. 400092-9820063626.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

633.##	CHEMBUR MOTORS (2526), 31/A ANAND			
	NAGAR, OFF SION TROMBAY ROAD, SINDHI			
	SOCIETY CHEMBUR, MUMBAI-400 071,			
	PH:400071-9820475704.			

634.## CHHAGAN MITHA (5230), CORNER OF WARDEN ROAD & PEDDAR ROAD, POST BOX NO. 6521, MUMBAI -400026, MAHARASHTRA, PH :400026-9820861441.

635.## HIND AUTOMOBILES (550), 29 SEWREE WADALA ROAD, KING'S CIRCLE, MUMBAI - 400 019 (MHRS), PH :400019-9833876440.

636.## LAXMI AUTO WORKS (2542), PLOT NO.1041, SAYANI ROAD, PRABHADEVI, MUMBAI-400 025,

PH :400025-9820303646.

ORIX AUTO INFRASTRUCTURE SERVICES
LTD (1971), 94 MAROL INDUSTRIAL ESTATE,
ANDHERI KURLA ROAD, ANDHERI (EAST),
MUMBAI-400 059,

PH :400059-9820409079.

638.** POWAI AUTO WORKS (1660), OPP. PANCH KUTIR BUS STOP, 19 ADI SANKARACHARYA MARG, POWAI, MUMBAI-400 076, PH :400076-9820635317.

539.** POWAI AUTO WORKS (4966), GALI NO 14/15/16, BUILDING NO1, C WING, KAILASH INDUSTRIAL COMPLX, PARKSITE VIDHROLI (W), PH :400079-9820635317.

640.## PRINCE SERVICE CENTRE LLP (8931), 34
GAMDEVI ROAD, SANGHANI ESTATE,
GHATKOPAR (WEST), MUMBAI-400 086,
PH: 400086-9869034445.

641.** RAVI AUTOMOBILE SERVICES (553), GHATKOPAR-MAHUL ROAD, TILAK NAGAR, CHAMBUR, MUMBAI-400 089, PH:400089-8657442190.

642.** SHAH CAR CARE (5436). SADANWADI LAKE ROAD OFF LBS MARG, NEAR KRISHNA TALKIES, DISTRICT - MUMBAI (MAHARASHTRA), PH :400078-9820068380.

643.** SHAMAL MOTORS (1154), VAITY WADI, BHANDUP-SONAPUR ROAD, BHANDUP (WEST), MUMBAI-400 078, PH :400078-9773911111.

644.* ST.FRANCIS AUTOMOBILES (6154), MOUNT POINSUR BORIVALI (WEST), MUMBAI -400103, DISTRICT - MUMBAI, MAHARASHTRA, PH :400103-9892876396. 645.* SUPER AUTO SERVICE PVT. LTD. (2430), DESAI WADI JAYWANT SAWANT ROAD, NEAR HAPPY HOME SOCIETY, DAHISAR (W), MUMBAI-400 068,

PH:400068-9867253000

646.## SURAJ SANGHI SERVICE STATION (438), DR. ANNIE BESANT ROAD, WORLI, MUMBAI-400 018, PH :400018-9821115492.

MURRAD

647.## JAYDEEP AUTOMOBILES (5676), MURBAD KALYAN HIGHWAY(NH-222), NEAR NAVDURGA HOTEL, AT-PO-TAL:MURBAD-421401, DISTRICT-THANE, MAHARASHTRA, PH 416561-942370219.

NAGPUR

648.* AMIT SERVICE STATION (4158), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMADNAGAR, MAHARASHTRA, PH :414111-0241-2778336.

649.* BALAJI MOTORS (3078), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20, PH:440020-9960634068.

650.** HASAN GARAGE (2021), MOHAN NAGAR, NAGPUR - 440 001 (MHRS)., , PH :440001-0712-2533805

651.## M S SERVICES (5339), 14 HILL ROAD , GANDHI NAGAR - NAGPUR , DISTRICT -NAGPUR , MAHARASHTRA, PH :440010-9373422822.

652.## R. K. MOTORS (3023), 69 A V A LAYOUT, LAKADGANJ, NAGPUR-440 008, PH:440008-9422113088

653.* SAGAR AUTOMOBILES (2667), MARUTI AUTHORISED SERVICE STATION, PLOT NO.3 NEAR PETROL PUMP, WARDHA ROAD UJJWAL NAGAR, NAGPUR-440 025, PH :440025-9960695823.

654.** SAGAR AUTOMOBILES (4971), WARDHA ROAD,, CHINCHBHAWAN, NAGPUR – 441108,

PH :441108-9422145365.

SHREEJEE SERVICES (2027), CHANDAK KOTHI, SUBASH ROAD, NAGPUR-440 018, PH :440018-9766699321.

NANDED

656.## MARUTI CARES AND COLOURS (5778), LABH NAGAR,BACK SIDE OF SURABH HOTEL, NANDED-431605, DISTRICT-NANDED, MAHARASHTRA, PH: 431605-9225751444.

NANDURBAR

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

657.* MAULEE MOTORS (4736), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD, NANDURBAR-425412, MAHARASHTRA,

PH :425412-9822377931

NASHIK

658.## HITECH AUTO SERVICES (4451), SURVEY NO 89/2, PLOT 1 & 2, OPP MOTIWALA MEDICAL COLLEGE, GANGAPUR SHIWAR,, NASHIK,

PH: 422007-9225142471.
659.## RACCA SERVICE (3720), RACCA ESTATE,
OLD GANGAPUR NAKA, HANUMAN WADI
LINK ROAD, PANCHVATI, NASHIK - 422003,
PH: 422003-0986846488

660.## SAI AUTOMOBILES (3722), SAPAT COMPLEX, OPP. PRESS HOSPITAL, NASIK ROAD-422 101, PH :422101-9822027931.

NAVI MUMBAI

661.* BOSS (265), AT/P.O. - TURBHE, SECTOR-22, VASHI, NAVI MUMBAI-400 705, PH :400705-9167766474

662.## C G MOTORS (4138), PAPR-73, TTC
INDUSTRIAL AREA, RABALE, OPP RABALE
RAILWAY STATION, THANE- BELAPUR
ROAD, MAHARASHTRA,
PH :400701-9920205756.

63.** CHETAN MOTORS (3143), PLOT NO.45/B SECTOR 19/A, OPP. GATE NO.2 DANA BAZAR, BEHIND SHAMIR VITHAL CO-OP BANK VASHI, NAVI MUMBAI-400 705, PH :400705-9892067288

NIGDI 664.##

664.## SHALU AGENCY (2872), 516/27 PRADHIKARAN, NIGADI, PUNE-411 044, PH :411014-020-27656354.27652631.

NIPHAD

665.## SHRI SAI SERVICE STATION (4452), NIPHAD AURANGABAD ROAD, NIPHAD, NASIK, MAHARASHTRA, PH :422303-9823679999.

PACHORA

666.## POOJA MARUTI SERVICE CENTRE (5564), PLOT NO 75,PREM NAGAR, KRISHNA PURI SHEVAR, PACHORA, DISTRICT - JALGAON , MAHARASHTRA, PH :424201-9890320803.

PALGHAR

667.## SIDDHI MOTORS (5553), THEMBHEDE ROAD, GANESH KUND, PALGHAR, DISTRICT - THANE, MAHARASHTRA, PH: 401404-9890609107.

PANVEL

668.## GANGAL MOTORS (2934), PLOT NO.:125-127, SECTOR-15, ROAD NO-5, BEHIND CIDCO GODOWN-NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA), PH:410206-9320226072.

669.** IDEAL AUTOMOBILES (2279), IDEAL HOUSE, PLOT NO-83, PANVEL INDUSTRIAL CO OP ESTATE LTD., PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA), PH. 410206-999902650.

PARBHANI

670.## SAI SERVICING CENTRE (5252), P7/5 MIDC, PARBHANI-431 401, MAHARASHTRA, PH :431401-9404504111.

PASHAN

* MARUTI CAR SANJIVANI (5278), SURVEY NO 5/2.SUTARWADI. SUSROAD PASHAN, DISTRICT - PUNE, PUNE - 411021, MAHARASHTRA, PH :411021-9960733360.

PATHARDI

672.## SAGAR MOTORS (5979), OPP. TEHSIL KACHERI,NAGAR ROAD, TALUKA,PATHARDI-414102, DISTRICT-AHMEDNAGAR, MAHARASHTRA, PH :414102-8822197969.

PEN

673.## NAVNATH AUTO (5677), OPPOSITE RAMWADI,S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA, PH :402107-9834279228.

PHALTAN

674.## VORA AUTOMOTIVE (2436), SHINGNAPUR ROAD, KOLKI, PHALTAN-415523, PH :415523-7709436262.

PIMPALGAON

675.## ASHWAMEDHA AUTO (2435),
"ASHWAMEDH", MUMBAI-AGRA HIGHWAY,
PIMPLEGAON (B), DISTT. NASHIK,
PH. :422209-9766600064.

PUNE

676.## APPU AUTOMOBILE (5029), MARUTI
AUTHORISED REPAIR STATION , #81.SR NO
164.TALAWAD ROAD , KANBAY
ROAD.TRIVENI NAGAR , AHARASHTRA,
PH .411082-9371017595.
677.* APPU SERVICE STATION (4927), BG/SEI

677.* APPU SERVICE STATION (4927), BG/SEI 11/10, NEAR TELEPHONE EXCHANGE, MIDC, BHOSARI, PUNE-411026 (MAHARASHTRA), PH:411026-020-27123838.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

- 678.* ATHARVA CAR SERVICES (5161), 5, BHUSARI COLONY, PAUD ROAD, KOTHRUD,PUNE-411038, MAHARASHTRA, PH: 411038-9665024803.
- 679.* MANAS AUTOMOTIVE (5443), SURVEY NO 2/4 PARRANKUTI.LANE NO.1., KARVE NAGAR PUNE, DISTRICT PUNE, MAHARASHTRA, PH:411052-9822043007.
- 680.* MARUTI CARE POINT (3337), S. NO 273/5,BANER ROAD, OPP. VARSHA PARK, BANER,PUNE-411045, MAHARASHTRA, PH :411045-7290016518.
- 681.** SAINATH AUTOMOBILES INDUSTRIES (1569), SURVEY NO.36 PLOT NO.1, VADGAON KHURD SINHAGAD ROAD, NEAR GREEN FIELD HOTEL, PUNE-411 041, PH 411041-982214282
- 682.* SANTOOR CAR CARE (2053), ASHOK PLAZA, 32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE-411 014, PH :411014-020-26632000 .9579415112.

RAHURI

883.* ANAND MOTORS (4152), IN FRONT OF ASHWINI HOTEL, NAGAR MANMA ROAD, A/P RAHURI DIST- AHMADNAGAR, MAHARASHTRA, PH. 413705-7350008501.

RAVER

684.## RUCHI MOTORS (2631), MARUTI AUTHORISED SERVICE STATION, RAVER-425 508, DISTT. JALGAON, (MAHARASHTRA), PH:425508-8805373406.

ROHA

685.* AMIT MOTORS (4972), NANA SHANKAR SHETH ROAD, NEAR GOVT REST HOUSE, DISTRICT - RAIGAD, ROHA - 402109, MAHARASHTRA, PH :402109-9028376141.

SAKURI

686.## SHREE SAI SERVICE CENTRE (5344), NAGAR-MANMAD ROAD .GODAVARI, HOTEL JEWEL .PO:SAKURI ,TAL:RAHATA, DISTRICT - AHMEDNAGAR , MAHARASHTRA, PH :423107-997041777.

SANGAMNER

687.* SAI MOTORS (2840), NEAR GULEWADI PHATA, PUNE NASIIR ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS.), PH :422608-9860027513.

SANGLI

688.** ASHOK AUTOMOBILES (3723), 595/B, M.G.ROAD, SANGLI-416 416, PH :416416-0233-2221001.

589.* AWATI MOTORS (4772), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHARASTRA, PH. 416415-9422407284.

690.## BALAJI AUTO SERVICE (1564), PLOT NO.43,GOLDEN PARK , BYPASS ROAD, SANGLI-416416 , DISTRICT-SANGLI , MAHARASHTRA, PH:416416-9822106126.

SATANA

691.## PATHAK MOTORS (5037), YASHWANT NAGAR, TAHARABAD ROAD, SATANA -411014, DISTRICT - NASIK, (MAHARASTRA), PH :411014-9890216257.

SATARA

692.## SIDDHI AUTOMOBILES (5464), 294/A.DEGAON PATA - SATARA, RAHAMTPUR ROAD.MIDC SATARA, DISTRICT - SATARA , (MAHARASTRA), PH :415002-9422403178.

SAWANTWADI

8.* VENKATESHA AUTO CARE (1659), PLOT NO.21 MUMBAI GOA HIGHWAY, KOLGAON-BHOM, SAWANTWADI-416 510, DIST. SINDHUGARH, MAHARASHTRA, PH.416510-9423304639.

SHAHADA

694.## MATOSHREE AUTOMOBILES (2870), NO.558 SHAHADA DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA), PH :425409-9421726230.

SHIRDI

695.## SHREE GANESH AUTO CARE (4268), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107, PH: 423107-02423-242652.

SHRIRAMPUR

696.* G.K. MOTORS (2871), K.V. ROAD, SHRIRAMPUR, DISTT. AHMEDNAGAR, PIN-413 709., PH :413709-9822094098.

SOLAPUR

 BALAJI MOTORS (1930), 8536 B/1 MURARJI PETH, OPP. OLD PUNE NAKA OFFICE, SOLAPUR-413 002, PH :413008-9765111110.

THANE

988.* PATRICIA AUTOMOBILES (529), ALIGHT
CHAMBER, ADJACENT GOLDEN DYES, OLD
AGRA ROAD, HARDAS NAGAR, GOKUL
NAGAR, THANE, WEST - 400601,
PH :400601-9887/175866.

699.* SEAN MOTORS (5377), SATPALA NAKA, ARNALA-VASAI ROAD, NEXT TO ZEAL RESTAURANT, VIRAR (W) PIN 401301, PH :401301-9324003123.

700.** STERLING MOTOR GARAGE (555), OPP. RAVI STEEL INDUSTRIES, 2ND POKHRAN ROAD, THANE-400 601, PH :400601-9820252926.

701.** THANAWALA MOTOR AGENCY (3724), DHIRAJ BAUG, L.B.S. MARG, NAUPAD, NEAR HARINIWAS CIRCLE, THANE-400 602, PH: 400602-9820106904.

702.* TOP GEAR AUTOMOBILES (4840), SAI NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W), PH :400615-9833795855

ULHASNAGAR

'03.* CHIMAN AUTOMOBILES (3845), NEAR KAJAL PETROL PUMP, BALANI COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR 421003,

PH :421003-9850223422,
704.* MODERN CAR CARE (3260), 171/2.RRV
INDUSTRIAL AREA, BEHIND SAI BABA
MANDIR,SHANTINAGAR, ULHASNAGAR-421
003, MAHARASHTRA,
PH :421003-9819774588.

URAN

705.## SAI AUTOMOBILES (5665), STATE HIGHWAY NO.56, NEAR JASAI NAKA, JASAI VILLAGE, URAN-410206, DISTRICT - RAIGAD, MAHARASHTRA, PH -410206-982/1806806

VADA

706.## SAI MOTORS & SERVICE CENTRE (5675), VARALA, OPP. LAKE CITY, MANOR ROAD, WADA, , PH :421303-9226338578.

VITA

707.## SONA AUTOMOTIVE (5671), MAYANI ROAD, NEAR PRUTHVIRAJ HOTEL, OPP. LAKADE PETROL PUMP, DISTT VITA- 415311, PH: 415311-9890223938.

WAI

708.## ADITYA AUTO SERVICE (4271), WAI SATARA ROAD, WAI-412803, SATARA DIST., PH :412803-9423862119.

WANI

709.## SHEIKH AUTOMOBILES ()PH :-.

WARDHA

710.## BHARAT MOTOR (1631), NAGPUR ROAD, NALWADI, WARDHA, MAHARASHTRA, PH :442001-9881588388.

WARORA

711.## ROHIT AUTOMOTIVE (5873),
NAGPUR,CHANDRAPUR ROAD,VINAYAK-,
LAYOUT,TILAK WARD,WARORA-442907,
DISTRICT-CHANDRAPUR, MAHARASHTRA,
PH. 442907-9172060099.

YAVATMAL

712.## M.S. MOTORS (460), AMRAVATI ROAD HIGHWAY, LOHARA, YAVATMAL-445 001, PH :445001-9822222579.

713.## RAMESH MOTORS (2024), GARDEN ROAD, YAVATMAL, MAHARASHTRA-445 001, PH :445001-9422865222.

YEOLA

714.## BIJASANI AUTOMOTIVE (3041), NAGAR-MANMAD ROAD, YEOLA, DIST. NASIK (MAHARASHTRA), PH :423401-9423185025.

MANIPUR

IMPHAL

715.## BORDIN MARUTI GARAGE (4879), SANGAIPROU AIRPORT ROAD, IMPHAL WEST, MANIPUR - 795001, PH :795001-9436023659/7005264886.

SENAPATI

716.## KOMUO MARUTI WORKS (4644), NH-2, MAO TAPHOU, SENAPATI HQ, SENAPATI DISTRICT, MANIPUR - 795106, PH :795106-8794109474.

MEGHALAYA

TURA

717.## MULTI MOBILE PRECISION (3222), AGLANGGRE, PO ARAIMILE, NEW TURA, MEGHALAYA, 794101, PH :794101-8974057627.

MIZORAM

CHAMPAI

18.## IRDIV- TC AUTO WORKS (5744), SVENTH DAY TLANG, ZOTLANG ROAD, NEW CHAMPHAI-CHAMPHAI, DISTRICT-CHAMPHAI, MIZORAM, PH:796321-9862405715.

LUNGLEI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

719.## LAWMA ENGINEERING WORKS (3125), , A O C SQUARE, LUNGLEI, MIZORAM-796 701, PH :796701-9436147141

NAGALAND

DIMAPUR

20.** ERJO MOTORS (4871), EAST BLOCK, BURMA CAMP, NEAR BIBLE HOUSE, DIMAPUR, NAGALAND - 797112., PH :797112-9436004350.

ODISHA

ANGUL

721.## ZEET AUTOMOBILES (1573), NALCO NAGAR, KANDASAR, ANGUL - 759 145, ORISSA, PH :759145-9437021285.

BALANGIR

722.## ASHIRWAD AUTOMOBILE WORKS (3177), DAMJI GARAGE, THIKADARPARA, , , BALANGIR-767 001, PH 767001-9437223452

BALASORE

723.## AUTO CARE (432), AT-BAMPADA, PO-CHHANPUR, CITY - BALESHWAR (BALASORE), ODISHA - 756056, PH :756056-9437051944.

724.* TEKNO INDIA (3666), D-2/9 INDUSTRIAL AREA, O.T. ROAD, BALASORE-756 003, (ORISSA), PH :756001-9861034990.

BARBIL

725.## INDU MOTORS (3241), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA), PH:758035-9437718008.

BHUBANESWAR

726.## INDO JAPAN SERVICE (4936), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PC: PATRAPADA, BHUBANESHWAR-752019, ORISSA, PH:752019.9861095444.

CUTTACK

727.* AUTO MATES (426), 3B/1325, SECTOR-11, CDA, CUTTACK, PH:753014-9437020646.

8.* DURGA SERVICE CENTRE (427), NEAR PALAMANDAP, BADAMBADI, PO -ARUNODAY MARKET, DISTT - CUTTACK, PIN-753012, PH:753012-9692935762.

DHENKANAL

729.## ANAND AUTOMOBILES (5449), ANAND NAGAR, IN FRONT OF TARINI MANDIR, DISTRICT - DHENKANAL, PIN - 759001, (ORISSA), PH : 759001-9437414972.

JHARSUGUDA

730.## AUTO MECHANIKA (2638), S.H.-10 BEHERAMAL, JHARSUGUDA-768 203, ORISSA, PH :768203-9040380001.

PURI

731.## URMILA MOTORS (5040), HERA GOHIRI SAHI CHOWK, PURI -1, DISTRICT - PURI, (ORISSA), PH :752001-7008651960.

SAMBALPUR

732.## ANITA AUTO CARE (4834), SALIA BAGICHA, LIONS CLUB ROAD, KUMBHARPARA, SAMBALPUR-768001 (ORISSA), PH :768001-9861248403.

SEMILIGUDA

733.## ASHUTOSH MOTORS (5035), MAIN ROAD. NH-43, NALCO CHOWK, SEMILIGUDA, DISTRICT-KORAPUT, (ORISSA), PH:764036-9437405417.

PONDICHERRY

KARAIKAL

734.## MARUTI TECH (2669), NO.1,AKKAPAIVATTAM,NACAORE MAIN ROAD , OPP TO ONGC,KARAIKAL-609604, DISTRICT-KARAIKAL, PONDICHERRY, PH :60064-7373788705.

PUDUCHERRY

735.* A.P.P. MARUTI MOTORS (2670), PLOT NO.6 GUNDU SALAI ROAD, NATESAN NAGAR, NEAR 100 FEET ROAD, PONDICHERRY-605 005,

PH :605009-7094449900.
736.## MARUTI MISSION (5067), 60 RAGAVENDIRA
NAGAR KAMARAJ SALAI,
THATTANCHAVADY PONDICHERRY,
TINDIVANAM ROAD PONDICHERRY-9,
PONDICHERRY.

PH: 605009-9786589000.

737.** S D K MOTORS (471), PLOT NO.12, 100 FEET ROAD, O.ZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004, PH: 605004-984045689.

PUNJAB

AHMEDGARH

738.## GAHIR AUTOMOBILES (2877), LUDHIANA MALER KOTLA ROAD, VILL. GOPALPUR CITY, AHMEDGARH, (PUNJAB), PH:148021-9417553627.

Δ.ΙΝΔΙΙ

739.## VISHWAKARMA MOTORS (5666), NEAR VIMAL DHARAMKANTA - AJNALI, DISTRICT -FATEHGARH SAHIB, PUNJAB, PH :147301-9814528084

AMLOH

740.## BINDRA MOTORS (5844), NEAR DESH BHAGAT COLLEGE SONTI, AMLOH, DISTRICT-FATEH GARH SAHIB, PUNJAB, PH:147203-98148 82000.

AMRITSAR

741.** HANSON AUTOMOBILES (1722), MAQBOOL PURA, G.T. ROAD, AMRITSAR, PH :143001-9815167669.

742.** JACKSON LUBRICANTS (364), 16 COURT ROAD, NEAR RAVI GAS AGENCY, AMRITSAR-143 001, PH :143001-9814299944.

'43.** KAPOOR'S KAR KARE (737), I/S MAHA LAKSHMI, CALICO PRINTING MILLS, OLD JAIL ROAD, AMRITSAR(PUNJAB)., PH: 143001-9814213113.

44.* SAGGU SERVICE STATION (733), HIDE MARKET, AMRITSAR-143 001 (PUNJAB)., , PH:143001-8968497779.

BANUR

745.## AMRIK SERVICE STATION (2433), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), PH :140601-9815591325.

BARNALA

746.## GAURAV MOTORS (4962), DHANAULA ROAD, BARNALA - 148101, DISTRICT SANGRUR, PUNJAB, PH :148101-9317512916.

47.* PUNJAB MOTOR GARAGE (6222), DHANAULA ROAD, BARNALA (PUNJAB), PH:148101-9317512360.

BHADSON

748.## FRIENDS MOTORS (2233), NABHA ROAD, BHADSON-147 202, DISTT. PATIALA, (PUNJAB), PH :147202-9815700778.

BHATINDA

749.## KRISHNA AUTOS (4571), 40FT ROAD NAMDEV MARG NEAR INDRANI HOSPITAL ,BATHINDA (PUNJAB) 151001, PH :151001-9888671810. 750.** MODERN MOTORS (6234), OPP. T.V. TOWER, MANSA ROAD, BHATINDA, PH :151001-9814177075.

751.## SUPER AUTOMOBILES (6232), TINKONI, GONIANA ROAD, BHATINDA, PH:151001-9814036163.

BUDHLADHA

752.## JINDAL AUTOMOBILES (2147), NEAR P.S.E.B., BHIKHI ROAD, BUDHLADA-151 502, DISTT. MANSA, PH :151502-9815516964.

DERABASSI

753.## BINDAL AUTOMOBILES (1248), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, PH :140507-9914449711.

DHURI

54.## SHIV MOTORS (1962), NEAR SDM OFFICE, SANGRUR ROAD, DHURI-148 024, PH :148024-9872851068.

DINANAGAR

755.## D.S. MARUTI SERVICE STATION (3333), G.T. ROAD, DINA NAGAR, DIST. GURDASPUR-143 531, (PUNJAB), PH :143531-9814873101.

DIRBA

756.## PENTAGON MECHANICAL WORKS (2564), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB), PH:148035-9876543400.

DORAHA

757.* FATEH MOTORS (2048), G.T. ROAD, DORAHA, (LUDHIANA), PH :141421-9814031784.

FAZILKA

758.## BAHL MOTORS (6229), ABOHAR ROAD, FAZILKA-152 123, , PH :152123-9815700550.

FIROZPUR

759.## SUTLEJ AUTOMOBILES (3568), G.T. ROAD, FEROZEPUR CANTT., PIN-152 001 (PUNJAB), PH:152001-9417009985.

GIDDARBAHA

 JIWAN CAR CENTRE (3442), BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA-152 101, DIST. MUKETSAR (PUNJAB), PH:152101-9779600086.

GOINDWAL SAHIB

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

761.## DASS MOTORS (8941), KAPURTHALA CHOWK, GOINDWAL SAHIB, DISTT. AMRITSAR-143 429, (PUNJAB), PH :143429-9914699121.

GURDASPUR

762.* VIJAY SERVICE STATION (749), NEAR RAILWAY CROSSING, PATHANKOT ROAD, GURDASPUR, (PUNJAB), PH :143521-9814437637

HOSHIARPUR

763.## JOGINDER MOTORS (2268), BYE PASS TANDA ROAD, HOSHIARPUR-146 001, , PH :146001-9803227000

JAGRAON

764.## DHALIWAL AUTOMOBILES (2035), NEAR AJANTA PETROL PUMP, G.T. ROAD, JAGRAON DISTT. LUDHIANA, (PUNJAB), PH :142026-9814318600.

JALANDHAR

765.## CITY POINT SERVICE STATION (4528), AVTAR NAGAR ROAD, BEHIND T.V. CENTRE, OPP HOTEL REGENT PARK, JALANDAHR, PH: 144003-9779613576.

66.** KAAR KARES (725), G.T.ROAD, JALANDHAR, 144 001 (PUNJAB)., PH :144001-9569295585.

767.* KAPOOR MOTOR GARAGE (1649), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY.

PH :144623-9815040411.

PUNJAB MOTOR GARAGE (1575), HMV
CHOWK, NEW GRAIN MARKET ROAD,
JALANDHAR CITY-144 008,
PH :144008-9814675433

KAPURTHALA

769.## T.S. WALIA MOTORS (267), MANSOORWAL, JALLANDHAR ROAD, KAPURTHALA, PH :144601-9357211525.

KURALI

770.## VISHWAKARMA MOTORS (3335), CHANDIGARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNJAB -140103, PH :140103-9814273873.

LALRU

771.## VIKAS MOTORS (2777), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB, PH :140501-9888191444.

LUDHIANA

772.** PUNJAB AUTO CENTRE (6221), OPP
TELEPHONE EXCHANGE, BHARAT NAGAR
CHOWK, LUDHIANA-141 001,
PH :141001-9855117003.

773.* REEHAL AUTOMOBILE SERVICES (1176), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA-141 010, PH: 141015-3357110000

774.## SATNAM MOTOR WORKSHOP (4533), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA, PH:141003-9855228591.

775.## STAR AUTOS (4650), JALANDHAR BY PASS, G.T. ROAD, LUDHIANA, PH :141012-9216844220.

776.## VISHAL AUTOMOBILES (1262), G.T. ROAD, DHOLEWAL, LUDHIANA-141 003, PH :141003-9815206060.

MANDI GOBINDGARH

777.## NATIONAL MOTORS (1070), G.T. ROAD, NEAR P & S BANK, MANDI GOBINDGARH-147 301, PH :147301-9317862000.

MANSA (PUNJAB)

778.## LOVEKESH ENTERPRISES (2162), NEAR N.M. COLLEGE, MANSA-151 505, (PUNJAB), PH :151505-9216524143

MOGA

779.* GURU NANAK MOTOR REP.WORK (732), G.T.ROAD, MOGA-142 001 (PUNJAB)., , PH :142001-9914121387.

MOHALI

780.** BENZ AUTO SCAN (5734), E-153,PHASE 7, INDUSTRIAL AREA -MOHALI, DISTRICT-MOHALI, PUNJAB,

PH::160055-9876101806.
781.** MOHALI MOTORS (756), C-55 INDUSTRIAL AREA, PHASE-VI, S.A.S. NAGAR, MOHALI-160 055,

PH :160055-9781815959.
782.** SETHI MOTORS (4742), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PUNJAB.

PH :160055-9814307002.

783.## UNIPOINT (5043), PLOT NO,593.,
INDUSTRIAL AREA PHASE-IX.MOHALI.,
DISTRICT - MOHALI, (PUNJAB),
PH :160062-7814402838.

MORINDA

784.## SONY MOTOR PALACE (1077), SIRHIND ROAD, MORINDA-140 101, , PH :140101-9815612477.

MUKERIAN

785.* MARSHAL SALES CORPORATION (5251), NEAR RADHA SOAMI SATSANG, PATHANKOT ROAD, MUKERIAN - 144211, DISTRICT HOSHIARPUR, PUNJAB, PH :142211.828385026

786.## NEW MODERN AUTOMOBILES (4437), G.T. ROAD, MUKERIAN, PUNJAB, PH :144211-9463292013

MUKTSAR

787.## MALWA MARUTI CENTRE (4764), OPP GOVT COLLEGE KOTKAPURA ROAD, MUKTSAR, PUNJAB, PH :152026-9814622081.

NAKODAR

788.## MEHTA MOTORS (3531), KHADDAR BHANDAR ROAD, NAKODAR-144040, PH :144040-9815600082.

PATIALA

789.** PARAS MOTORS (4778), PLOT NO. 25-A, NEAR HOTEL FLYOVER FACTORY AREA, PATIALA-147001, PUNJAB, PH :147001-9814089861.

790.## RAJINDRA MOTORS (8924), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB,

PH:143416-8575210003.

PH:147003-9316200335.

791.## ANU AUTOMOBILE (2747), AMRITSAR ROAD, NEAR RADHA SWAMI SATSANG, PATTI DISTT. AMRITSAR, (PUNJAB),

PHAGWARA

792.## SWAMI MOTORS (3774), (PAMMI W/SHOP), OPP. B.N. DUGGAL PETROL PUMP, G.T. ROAD, PHAGWARA DIST. KAPURTHALA, PH :144401-9815107989.

QADIAN

793.## HI-TECH AUTOMOBILES (4945), VILL NATHPUR BATALA ROAD, QADIAN-143516, DISTRICT-GURDASPUR, PUNJAB, PH:143516-9877510294.

RAIKOT

794.## RANA SUPREME MOTOR GARAGE (3732), NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB), PH: 141109-9814265791.

RAJPURA

795.## NOOR MOTORS (3045), PATIALA ROAD, RAJPURA-140 401, (PUNJAB), PH :140401-9814507867.

RAMPURAPHUL

796.## BALAJI AUTOMOBILES (4443), BARNALA ROAD, RAMPURA PHUL-151103, DISTT BHATINDA, PUNJAB, PH :151103-9417172671.

797.## VIRDI MOTOR GARAGE (3046), BARNALA ROAD, RAMPURAPHUL-151 103, DISTT. BATHINDA, (PUNJAB), PH :151103-9872874175

SAMANA

 CITY MOTORS (1867), P.B.NO.11, MAIN ROAD, SAMANA-147 101, DISTT. PATIALA (PUNJAB), PH:147101-9814221981.

SANGRUR

'99.** RAKESH MARUTI SERVICE (6325), JIND -DELHI ROAD, NEAR E.S.I. DISPENSARY, SANGRUR-148 001, PH 148001-9815103944

SANGRUR MARUTI CENTRE (1632), PATIALA ROAD, OPP. MILITARY CAMPUS, SANGRUR-148 001, (PUNJAB), PH: 148001-9417510111.

SIRHIND

801.## BADRI DHAM CAR SERVICE (1062), G.T. ROAD, SIRHIND-140 406, , PH :140406-81467 11946.

802.## MALHOTRA MOTORS (4657), OPP. INCOME TAX OFFICE, SIRHIND, DISTT FATEHGARH SAHIB, PUNJAB, PH :140406-9815844008.

SULTANPUR LODHI

803.## HANDA MOTORS (2776), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB), PH :144676-9815623392

SUNAM

\$ SUNAM AUTOMOBILES (3924), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SANGRUR, PH :148028-9417076315.

TANDA

805.## MALWA AUTO CARE CENTRE (2073), G.T. ROAD BY-PASS, TANDA, DISTT. HOSHIARPUR, (PUNJAB), PH:144204-9814392103.

ZIRA

806.## NEW AUTOMOBILES (5477), NEAR BYE PASS, FEROZPUR ROAD, ZIRA, TEHSIL ZIRA, DIST. FEROZPUR, PUNJAB - 142047., PH :142047-9463240231.

RAJASTHAN

ABU ROAD

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

807.## UNIQUE MOTORS (4923), MOUNT ROAD, AKRABHATTA, ABU ROAD-307 510, (RAJASTHAN),

PH:307510-9929177781.

A.IMFR

808.## ASHOK AUTOMOBILES (1121), BYEPASS ROAD, PARVATPURA, IND.AREA, AJMER (RAJASTHAN), PH

:305002-0145-2695233/0145-2695076/9829087

ALWAR

809.## POOJA MOTORS (5439), POOJA MOTORS,NEAR AMARNATH PETROL , PUMP,DELHI ROAD ,MUNGSKA - ALWAR , DISTRICT - ALWAR , RAJASTHAN, PH

:301001-9414640279/0144-2700921/0144-2371

810.## VERTEX AUTOMOBILES PVT. LTD. (1944), CHANDUKA BHAWAN, SWARG ROAD, ALWAR-301 001, PH

:301001-0144-2335733/0144-2342117/9828233

BARMER

811.* VEW SERVICE (1238), S-181 & 182, RIICO, BARMER-344 001, (RAJASTHAN), PH:344001-9460158584/02982-223329.

BASSI

812.## VARDHANI MOTORS (5358), NEAR NALAYA BASSI, DISTRICT - JAIPUR , RAJASTHAN, PH :303301-9950107203.

BEHROR

813.## K.L. INTERNATIONAL AUTOMOBILES (1763), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARDOPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN), PH:301701-01492-221389/9414014603.

BHARATPUR

814.** CLASSIC MOTORS (2348), DEEG ROAD, KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN), PH :321001-9414026545.

BHILWARA

815.## NATIONAL SERVICE CENTER (4761), SANGANER COLONY, KOTA ROAD, BHILWARA-311001, RAJASTHAN, PH:311001-9829120285.

816.* QUICK SERVICES (3473), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311 001,

PH:311001-01482-223456/9414144046.

BHINIMAL

817.## GURJAR MOTORS (5567), RAMSIN ROAD,OPP PRADEEP PETROL PUMP, BHINMAL, DISTRICT - JALOR, RAJASTHAN, PH :343029-9414374962.

BHIWADI

818.## WHEEL-O-CITY (4246), E-7D (A) PHASE-1, NEAR RIICO CHOWK, BHIWADI, RAJASTHAN, PH :301019-01493-225555/01493-290962/9887099

RIKANER

819.## GENERAL AUTOMOBILES (1123), RANI BAZAR, RAIWAY CROSSING, BIKANER (RAJASTHAN), PH

> :334001-0151-2200338/0151-2549072/9413389 352

820.## VISHI MOTORS (5559), PLOT NO 55(A) ,I.A. RANI BAZAR-BIKANER, DISTRICT -BIKANER, RAJASTHAN, PH :334001-98290-27128.

BUNDI

821.## SHRI JI MOTORS (2174), OPP. KUMBHA STADIUM, KHOJA GATE, BUNDI, (RAJASTHAN), PH :323001-9990270676.

CHOMU

822.## SHREE LAXMI MOTORS (3072), MORIJA ROAD, CHOMU, JAIPUR-303702, (RAJASTHAN), PH :303702-9828160281.

CHURU

823.* ABS MOTORS (2978), JAIPUR ROAD, CHURU-331 001, (RAJASTHAN),

> :331001-01562-252333/01562-257333/9667672 324

DAUSA

824.## BALAJI MOTORS (4564), NEW MANDI ROAD, NEAR TRANSFORMER, DAUSA-303303, PH:303303-9414273443/9828169601.

DHAULPUR

325.** NARAYAN MOTORS (3345), G.T. ROAD, DHOLPUR, (RAJASTHAN), PH :328001-05642240011/ 9414027335.

826.## NARSING SERVICE CENTRE (3074), NEAR JAGDISH TALINIES, BARI ROAD, DHOLPUR-328 001, (RAJASTHAN), PH :328001-9414026820.

DIDWANA

827.## SANTOSH AUTOMOBILES (5450), SANTOSH ATUOMOBILES, KUCHAMAN ROAD DIDWANA , DISTRICT - NAGAUR , (RAJASTHAN), PH :341303-9828833363.

DUDU

828.## NEETA AUTOMOBILE (4855), C/O NEW JAIN GUEST HOUSE, NH-8, JAIPUR AJMER ROAD, DUDU, RAJASTHAN, PH :303008-9667031098.

JAIPUR

829.## A 1 MOTORS (4856), D-28 MALVIYA NAGAR., INDUSTRIAL AREA JAIPUR., DISTRICT -JAIPUR , RAJASTHAN, PH :302017-9414047628

330.* AMGI AUTOMOBILES (1938), AIRPORT CIRCLE, KOTA ROAD, JAIPUR-302 011, PH :302011-9828012009.

831.## AUTONITY JAIPUR (4852), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, RAJASTHAN, PH:302019-9784377503.

32.** AUTONITY VKIA (8927), PLOT NO.6, GIRDHAR COLONY, SIKAR ROAD, JAIPUR-302 013,

:302013-0141-2232790/0141-3293308/9314505

833.## J.K. AUTOMOBILES (2058), 38 SUSHILPURA, AJMER ROAD, JAIPUR-302 007, PH :302007-7976448538/0141-2810500.

834.** JAI SHRI RAM AUTO SERVICE CENTRE (1140), OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR, RAJASTHAN,

:302019-0141-2221241/9829853330/958746444

835.## KATARIA MOTORS (2577), 9-A NEMINAGAR VISTAR , AMRAPALI MARG, VAISHALI NAGAR, JAIPUR -302021,

:302021-9672444000/9414468024/0141-235213

836.## KRISHNA AUTOMOBILES (5363), B-27 SUNDAR NAGAR .MANSAROVAR , JAIPUR, DISTRICT - JAIPUR, RAJASTHAN, PH :302020-982998075.

837.## LAXMI MOTORS (2576), OPP METRO PILLAR NO 34, GANGA JAMUNA CROSSING, NIRMAN NAGAR, JAIPUR, RAJASTHAN -302019,

PH:302019-9351551181.

838.* M. R. MOTORS (8933), PLOT NO. 120-121 & 125-126, VANE VIHAR, 200FT BYE PASS, JHOTWARA, JAIPUR (RAJASTHAN), PH. 302012-9314881528/0141-2340196.

339.* RIGHTWAYS CO. (1131), KISHANPOLE BAZAR, JAIPUR, , PH

:302002-0141-2372436/0141-4022436/9799220 011.

840.** SAISHA MOTORS (1764), MAIN SHIPRA
 PATH, OPP, SECTOR 93, AGARWAL FARM,
 MANSAROVAR, JAIPUR-302 020,
 PH: 302020-0141-2399196/9414454820.

 841.* SERVICE CENTRE (1139), OPP. TOURIST

HOTEL, M.I. ROAD, JAIPUR-1, PH :302001-9351551181. 42.* SHARP MOTORS (2032), J-3 HIMMAT NAGAR MAIN TONK ROAD, GOPAL F

NAGAR, MAIN TONK ROAD, GOPAL PURA CIRCLE, JAIPUR-302 004, PH

:302004-0141-2705493/0141-2211386/9314877 457.

43.## SUPREME MOTORS (1130), A-25 ASSAM MANSION, TRANSPORT NAGAR, JAIPUR-302 003,

PH:302003-7737279332.

TOSHNIWAL AUTOMOBILES (3475), 131
SHRI GOPAL NGAR, GOPALPURA BYEPASS,
JAIPUR, (RAJASTHAN),
PH:302015-9887553836

JAISALMER

845.## R.R. AUTOMOBILES (1473), OPP. GEETA ASHRAM, JAISALMER-345 001, (RAJASTHAN), PH :345001-8619638276.

JHUNJHUNU

846.## VISHWAKARMA AUTOMOBILES (3071), HPC DEALER, RANI SATHI ROAD, JHUNJHUNU-333 001, (RAJASTHAN), PH :333001-9461058839.

JHUNJHUNUN

847.## DADHIMATI MOTORS (1648), OPPOSITE RSEB OFFICE, BAGAR ROAD, JHUNJHUNU, (RAJASTHAN), PH :333001-9587007122.

JODHPUR

848.## DEORA MOTORS (5353), UPPER UNDER BRIDGE .PAOTA 'C' ROAD, JODHPUR, DISTRICT - JODHPUR, RAJASTHAN, PH :342006-9829026069.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

849.* P.D. MOTORS (3340), NATIONAL HIGHWAY NO. 62, NEW PALI ROAD, NEAR JHALAMAND CIRLCE, JODHPUR, RAJASTHAN - 342005.,

> :342005-0291-2724485/0291-2722495/9928974 601.

KALWAR

850.## ROLANIYA MOTORS (5554), KALWAR MAIN TIRHIA ,NEAR KHARBAS, NEAR PETROL PUMP,JHOTWARA ROAD, DISTRICT-KALWAR, RAJASTHAN, PH :303706-998111634

KISHANGARH

851.## RADHA SWAMI AUTOMOBILES (440), NEAR AJMER ROAD - BUS STAND,

, KISHANGARH., DISTRICT AJMER, RAJASTHAN ,

PH:305801-9252059798.

KOTA

852.## FRIENDS AUTOMOBILES (3679), KOTA BUNDI ROAD, NH 12, OPP. HOTEL MENAL RESIDENCY, KOTA, PH :323021-9829529479.

KOTPUTLI

853.## VIKAS MARUTI SERVICE CENTRE (4970), NH-8, NEAR MEENA GAS AGENCY GODOWN, KOTPUTLI - 303108, RAJASTHAN, PH :303108-9929383045.

KUCHAMAN

854.## DALUKA AUTO SALES (4565), NEARBY SHARDA PALACE HOTEL., KUCHAMAN BYE PASS,, KUCHAMAN CITY, 341508, PH: 341508-9414433240.

MAKRANA

855.## GEHLOT MOTORS (454), OPPOSITE TO G.S.S, MANGLANA ROAD, MAKRANA, RAJASTHAN, PH :341505-9829024687.

MERTA

56.## DELUX CAR SERVICE CENTRE (3856), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUR, PH:341510-9414004543.

NAGAUR

857.* CLASSIC AUTOMOBILES (1179), DIDWANA ROAD, (DELHI GATE), NAGAUR-341 001, (RAJASTHAN), PH :341001-9672501234.

NFWAI

858.## HEENA MOTORS (5568), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT -TONK, RAJASTHAN, PH :304021-9414228066.

PII ANI

859.## MARUTI CARE CENTRE (3073), RAJGARH ROAD, SHANTI NAGAR, PILANI DISTT. JHUNJHUNU, RAJASTHAN-333 031, PH:333031-01596-297021.

PILANI (JHUNJHUNU DIST)

860.## MARUTI CARE CENTRE (3073)PH :-.

PINDWARA

861.## RUNEJA MOTORS (5758), NH 14,0PP PATNAIK MIDWAYA, PINDWARA-307022, DISTRICT-SIROHI, RAJASTHAN, PH :307022-9610451492.

RAJSAMAND

862.## VIPUL AUTOMOBILES (2170), NH -8, BHAGWANDA, , BEHIND GOVT. PRIMARY SCHOOL, , RAJSAMAND, RAJASTHAN, PH :31333-02952-294420, 9929177781.

RAWATBHATA

863.## APNA MARUTI GARAGE (5940), OPP. RAM TEKRI MANDIR, PRATAP MARKET, MAIN ROAD, RAWATBHATA-323305, DISTRICT-CHITTORGARH, RAJASTHAN, PH:323305-9413504447/9413356634.

SIKAR

864.## RAJ AUTOMOBILES (5534), SUSHIL TRADING CO. STATION ROAD, SIKAR, DISTRICT - SIKAR, RAJASTHAN, PH :332001-01572-240721/01572-240722/9414039

783. SRI MADHOPUR

865.## BHARAT MOTORS (5757), WARD NO 4,BYE PASS ROAD, SRI MADHOPUR-332715, DISTRICT-TONK, (RAJASTHAN), PH :332715-9251377020.

SRIGANGANAGAR

866.## ROHIT UDYOG (1132), 75 K-BLOCK, SRIGANGANAGAR, , PH :335001-9414093565/0154-2474823

SUJANGARH

867.## SHRI CHARBHUJA MARUTI (4924), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN, PH :331507-9828118827.

SURATGARH

868.## ROHIN SERVICE STATION (2646), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN).

PH:335804-01509-222514/9413377914.

TIJARA

869.## M D MOTORS (5875), ALWAR ROAD,NEAR BOLLYWOOD FARM, TIJARA-, DISTRICT-ALWAR, RAJASTHAN, PH :301411-9351607080.

TONK

870.## SUMIT MARUTI (4566), G 1 – 103, RIICO INDUSTRIAL AREA, JAIPUR ROAD, TONK-304001, RAJASTHAN, PH :304001-9214494900.

UDAIPUR (RAJASTHAN)

71.** ALOK AUTOMOBILES PVT. LTD. (1977), B.N. COLLEGE PREMISES, OPP. DALAL PETROL PUMP, SEVASHRAM ROAD, UDAIPUR, PH :313001-9414166305.

872.** SHREE SAI CAR CARE (2376), PUNJAWATI, PULLA, UDAIPUR-313 001, PH :313001-0294-3299901/9414166770.

TAMIL NADU

AMBUR

873.## MARUTHI MOTORS (2864), 10-C M.C. ROAD, AMBUR-635 802, (TAMIL NADU), PH :635802-04174-244880/9443637645.

ARAVAKURICHI

874.## GOWRI MARUTI (5570), OPPOSITE IOCL PETROL PUMP,NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU, PH :639201-9994818043.

ARCOT

875.## HARI AGENCIES (468), #27, ANNA SALAI, ARCOT, TAMIL NADU -632503, PH :632503-4172-234050/9442225070.

ATTUR

876.## GANESAA MOTORS (4538), 1/1-D ARANGA BALA NAGAR, SALEM CUDDLORE MAIN ROAD, NARASINGARAM, ATTUR-636108 (TAMIL NADU), PH :636108-9443273866.

AVINASHI

877.## K.P.K.AUTOMOTIVE (5547), SF NO.460/2,TIRUPPUR MAIN ROAD, AVINASHILINGAMALAYAM,AVINASHI-641654, DISTRICT-COIMBATORE, TAMILNADU, PH 1441654-9443301732

BHAVANI

878.## CAR ZONE AUTO SERVICE (5332), METTUR MAIN ROAD , NATARAJAPURAM BHAVANI, DISTRICT - ERODE , TAMILNADU, PH :638301-9842085670.

CHENGI EPUT

879.## AMMA AUTOMOBILES (2941), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU-603 002, (T.N.), PH :603002-44-27421059/8012518012/7373038042

CHENNAI

880.## ABIRAMI MOTORS (5131), 6.ANNA NEDUMATHAI, CHOOLABEDU, CHENNAI-600094, TAMILNADU, PH:600094-9840017558.

881.## AUTO TECH (3445), NO.6 G.S.T. ROAD, KAMATCHI COLONY, SANATORIM, CHENNAI-600 040, PH :600047-9941019455.

882.* EASVARI MOTORS PRIVATE LIMITED (1431), W-110 ANNA NAGAR, CHENNAI-600 040, , PH:600010-9840855655.

883.## KARS KARE SERVICE CENTRE (2579), 648
T.H. ROAD, TONDIARPET, CHENNAI-600 081,
PH:600081-9841097259

384.** MARUTI NEEDS (2531), NO.2 PARK ROAD, PADI, CHENNAI-600 050, PH :600050-9940099500

885.** NSK MARUTI (4975), 2/247, AST COAST ROAD, NLANKARAI, CHNNAI-600041, TAMIL NADIJ

PH:600115-9841047232.

6.* O.M.S. MOTORS (P) LTD. (2140), NO.27 VELACHERRY MAIN ROAD, RAM NAGAR NORTH, MADIPAKKAM, CHENNAI-600 091 (TAMIL NADU), PH :600091-9444081390

887.* P.A. SERVICE STATION (2346), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR, NEAR 100 FEET ROAD, AGRAHARAM, KORATTUR, CHENNAI-600 076, PH :600076-9840378025.

388.** SWAMY AUTOMOBILES (456), 23 CASA MAJOR ROAD, EGMORE, CHENNAI-600 008, PH:600008-9840891916.

889.* VAISHALI MOTORS (4529), 4/577 RAJIV STREET, OLD MAHABALIPURAM ROAD, KOTTIVAKAM, CHENNAI-600041, PH: 600041-9840138888.

890.* WHEELS AUTO (469), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI-600 020, PH :600020-9840138888

CHIDAMBARAM

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

891.## HI-TECH MARUTI (3231), NO.45,SITHIVEL NAGAR,SALIYANTHOPPU, BYE PASS ROAD,CHIDAMBARAM-608001, DISTRICT-CUDDALORE, TAMILNADU, PH -608001-9585538671

COIMBATORE

892.## GURU AUTO GARAGE (4965), 2/98, IRUGUR ROAD, NEAR BSNL OFFICE, CHINNAMPALAYAM, COMBATOR-600014, TAMIL NADU.

PH:641062-9843256247.

893.## LOTUS AUTOMOBILES (4758), 1647-A
AVINASHI ROAD, HOPE COLLEGE,
PEELAMEDU, COIMBATORE-641004
(TAMILNADU),
PH:641004-9842265133.

894.* SOUTH INDIA MOTORS (MARUTI) (4752), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE-641014 (TAMIL NADU), PH: 641014-9843027601.

COONOOR

895.## SHANTHI AUTO CARE (6054), FIGURE OF 8 ROAD, COONOOR-643101, NILGRIS, (TAMIL NADU),

PH:643101-9443273888.

CUDDALORE

896.## SUNTAR AUTOS (2134), KTR BUILDINGS, CHIDAMBARAM ROAD, CUDDALORE-607 002,

PH:607002-9842345690.

CUMBUM

897.## SRI BALAJI MOTOR WORKS (3139), 221-A
1/3 THENI ROAD, NEAR REGULATED
MARKET, UTHAMAPURAM, CUMBUM-625
516,
PH :625516-9994169309.

DINDIGUL

898.* MAGNUM MOTORS (1241), MEENACHINAICKEN PATTY, NH-7 BYE-PASS ROOA, DINDIGUL-624 002, (TAMIL NADU), PH :624002-9842231340.

ERODE

899.** SRI KRISHNA AUTOMOBILE ENTERPRISES (2320), 560 CAUVERY ROAD, ERODE - 638003,

PH :638003-9842721805.

SRI SAKTHI CARE (8937), 13, NGGO COLONY MAIN STREET, ERODE, TAMILNADU, 638009, PH :695011-9597726311.

GADALUR

PH :630106-9443351484. **KARUMATHAMPATTY**910.## SIVAN MOTORS (3832), OPP IBP NH47,

110.## SIVAN MOTORS (3832), OPP IBP NH47 NEAR KONGU VELLALAR SCHOOL, KARUMATHAMATTY, PH:641659-9842231819.

ADALUR

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

901.## GREENWAY MARUTI SERVICE CENTER KARUR (5471), KALAMPUZHA.D.O. NO 12/59-3.

GUDALUR, DISTRICT - NILGIRLS,

902.## HI-TEC AUTO GARAGE (2426), 426.ASIRIYAR

NAGAR, KULLAMPALAYAM POST, ERODE

MAIN ROAD, GOBICHETTYPALAYAM-638

ROAD, HOSUR-635 109, (TAMIL NADU),

V S SHOWROOM), KRISHNAGARI MAIN

TAMIL NADU HOTEL), BYE PASS ROAD.

PUDUPATTINAM VILLAGE PANCHAYAT,

KANCHEEPURAM, KALPAKKAM-603102,

SVS MARUTI SERVICE CENTRE (5466), NO1

BRINDAVANAM NAGAR, KANCHIPURAM,

MILITARY ROAD, SEVILIMEDU, OPP

PH:631501-9994332290/9043032290.

908.## SRI ARUN CAR CARE (3949), COIMBATORE

ROAD, NEAR IBP PETROL BUNK.

909.## SURABI MOTORS (2340), NO.11 TRICHY

MAIN ROAD, (NEAR RAILWAY CROSS),

SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630

MARUTHI NAGAR, NEAR T.V.S. AGENCIES(T

BALAJI MOTORS (5136), PLOT NO.11

PH -643212-9443603815

PH:638476-9842447725.

PH:635109-8122904091

PH:635109-9842755402.

PH:635109-9443245096

PH:603102-9443366535.

TAMILNADU 631501,

KANGAYAM - 638701.

PH:638701-9443329526

903.## AUTO SCAN (2070), 58-B BANGALORE

ROAD- HOSUR, TAMILNADU.

905.## SRI VINAYAKA MOTORS (3848), 5/2C/1 (OPP

906.## MARUTI MOTORS (4253), SURVEY 309/5-A,

THIRUKALUKUNDRAM TALUKA

TAMILNADU.

GOBICHETTIPALAYAM

476

HOSUR.

KALPAKKAM

KANCHEEPURAM

KANGAYAM

KARAIKUDI

HOSUR

911.** SRI SAKTHI AUTO CARE (2532), 3/291 COVAI ROAD, VADIVEL NAGAR L.N.S. POST, KARUR-639 002, (TAMIL NADU), PH :638009-9842426585.

KOVILPATTI

912.## CLASSIC AUTOMOBILES (6037), 3/531 – B, TIRUNELVELI TO MADURAI BYPASS ROAD, NH-7, INAM MANIYACHI, KOVILPATTI, TAMIL NADU = 628502. PH :628502-9442552000.

KRISHNAGIRI

913.## THIRUTHANIGAI MOTORS (2427), SALEM-CHENNAI BYE PASS ROAD, KRISHNAGIRI-635 001, (TAMILNADU), PH :635001-9842129890.

KUMBAKONAM

914.## SRI SAKTHI MOTORS (4330), #7/228, PULIYAMPETTTAI, MAYILADUTHURAI MAIN ROAD, KUMBAKONAM, TAMILNADU -612103, PH :612103-9443131513.

MADURAI

915.## FRIENDLY MOTORS (3141), 32 PALAM STATION ROAD, NEAR LIC BUS STOP, SELLUR, MADURAI-625 002, PH:625002-9842714047.

916.## SHALOM MOTORS (4629), THENI MAIN ROAD, ACHAMPATHU, NEAR BHARAT PETROLEUM, MADURAI-625019, PH :625019-8754033244.

MADURANTHAKAM

917.## MARUTHI MOTORS (6036), NO.33,G.S.T. ROAD,KARUNGUZHI, MADURANTHAKAM-603303, DISTRICT-KANCHIPURAM, TAMILNADU, PH: 603303-9443354073.

MAYILADUTHURAI

918.## R.M.S. MARUTI AUTO (2237), 53/54 MAHADHANA STREET, MAYILADUTHURAI-609 001, (TAMIL NADU), PH :609001-9842922685.

NAGAPATTINAM

9.* MARUTI-TECH (1671), PUTHUR ROUNDANA E C R ROAD, NAGAPATTINAM, , PH:611001-9842653718.

NAGERCOIL

20.* SRI GANAPATHI MOTORS (1629), NO.12 JAWAHAR STREET, R.V. PURAM, NAGERCOIL-629 001,

NAMAKKAL

PH:629001-9345322333.

921.## ARUNA MOTORS (1461), MARUTI SERVICE CENTRE, OPP. N. S. R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001, PH :637001-9842775761.

PALLADAM

922.## CHENDU MOTORS (4333), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST, PH: 641662-984225058.

PALLAVARAM

 VBK MOTORS (4463), OLD NO. 99, NEW NO. 91, G.S.T ROAD, ALVITONE ESTATE, (BEHIND LAKSHMI THEATRE), PALLAVARAM, CHENNAI-600043, PH:600043-9841425030.

PARAMAKUDI

924.## SIVA AUTOMOBILES (442), NEAR SRIKUMARA SUBRAMANIYA SWAMY TEMPLE, OPP FIRE STATION, MADURAI RAMESWARAM ROAD, PARAMAKUDI-623707 RAMNAD DIST, PH :623707-9388405305.

PARAMATHIVELUR

925.## RADHA CAR CARE (5828), NO 96/1,BYE PASS ROAD,VETTUKATTU PUDAR, PIRIVUR ROAD,PARAMATHIVELUR-638182, DISTRICT-NAMAKKAL, TAMILNADU, PH :638182-8608090140.

PERUNDURAI

926.## PRIYAM AUTOMOBILES (3036), 139 KOVAI MAIN ROAD, PERUNDURAI-638 052, (TAMIL NADU), PH :638052-9095099999 - 9842701371.

POLACHI

7.* J D & COMPANY (6055), COIMBATORE ROAD, POLLACHI-642 002, , PH:642002-9443565785.

RAJAPALYAM

928.## RAJA MOTORS (4128), 52/ A, SRI JANAKIRAM MILLS ROAD, SRIVILLIPUTTUR MAIN ROAD, RAJAPALAYAM, VIRUDHUNAGAR- 620117, PH :626117-7094597178.

RASIPURAM

929.## ROYAL AUTO CARS (4052), 5/120 NH-7, SALEM MAIN ROAD, NEAR TSTC DEPOT, MUTHUKALIPATTI POST, RASIPURAM TALUK, NAMAKKAL DISTRICT-637408, PH:637401-9443230339.

RED HILLS

D-Category Mass : Free Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

930.## UNIQUE CAR CARE (5868), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLAIVOYAL, CHENNAI, TAMILNADU - 600062,

PH:600062-9500056658/9841059295.

SALEM

931.## MEENATCHI AUTO (2940), 57 KALARAMPATTY MAIN ROAD, (NEAR DEVI THEATRE), SALEM-636 015, (T.N.), PH: 636015-9443201001/ 9976601001.

932.** NATSUN MOTORS (6029), NO.220,BANGALORE BYE PASS ROAD (NH-7), KODALAMPATTY,SALEM-636010, DISTRICT-SALEM, TAMILNADU, PH :636005-9842704499

SANKAGIRI

933.## TECH ZONE AUTO SERVICE (2640), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303,

PH:637303-9942444753/9842651158.

SANKARANKOII

934.## RAJA MOTORS (4555), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL-627756, PH :627756-9994409363.

TENKASI

935.## CARE ZONE (3766), 5/164(1) KUTHUKKAL VALASAI, MADURAI ROAD, TENKASI-627 811, (TAMIL NADU), PH :627811-9842133134.

THANJAVUR

936.## R K P MOTORS (5238), 121/7.THANJAVUR KUMBAKONAM, HIGHWAY PALLIAGRAHARAM, THANJAVUR, TAMILNADU, PH :613003-9751125555 / 9563525555.

THENI

937.## SATHURAGIRI MOTOR WORKS (1650), 3-1-31 TO 36, CUMBUM ROAD, THENI-625 531, (TAMIL NADU), PH :625531-9047033678.

TIRUNELVELI

938.## FRIENDS INDIA AUTO CLINIC (5030), NO.16 D.BYE PASS ROAD, VANNARAPETAI, TIRUNELVELI 627003, TAMILNADU, PH :627003-9786606111.

TIRUPUR

939.** LAKSHMI MOTORZ (2461), 4/146 PALLADAM ROAD, OPP. LAKSHMI KALYANA MANDAPAM, TIRUPUR-641 604, (T.N.), PH :641605-9842377959.

TRICHY

940.* VYTHES MOBILE PARK (443), 8/6 TANJORE ROAD, THIRUCHIRAPALLI-620 008, , PH :620008-6383353727.

UDAMALAPET

941.* S.R.K. MOTORS (1456), C-109 GANDHI NAGAR, UDAMALAPET-642 154, COIMBATORE (DT.), (TAMIL NADU), PH :642126-9843011520.

VELL ORF

 MARUTI AUTO SERVICE (2844), 106 (OLD NO.: 78), KATPADI ROAD, GANDHI NAGAR, VELLORE-632 006 (T.N.), PH: 632006-9843093422.

VILLUPURAM

943.## RAGAVENDRA MOTORS (2361), 2/3 MADRAS TRUNK ROAD, VILLUPURAM-605 602, (TAMIL NADU), PH :605602-9244555860.

VRIDDHACHALAM

944.## VISHWA MARUTI CARE CENTER (8934), NO412,PERIYAR NAGAR (NEAR FIRE SERVICE S, STATION)VRIDDHACHALAM -606001 , DISTRICT - CUDDALORE , (TAMILNADU), PH :606001-9842246092.

TELANGANA

ADILABAD

945.## MAHA LAXMI AUTOMOTIVES (2240), NH# 7 OPP. H.P. PETROL BUNK, TIRUPALLY, ADILABAD-504 001, (A.P.), PH :504 001-900345313.

BHADRACHALAM

946.## SRI VENKATARAMANA AUTO CARE (2831).
MARUTI SERVICE STATION, OPP. COLLEGE
GROUNDS, GOLLAGATTA ROAD,
BHADRACHALAM-507 111 (A.P.),
PH :507111-920792269.

GAJWEL

947.## VIJAY MOTORS (4864), HYDERAAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIMMAGAR, PREGHAPUR - GAJWL, ANDHRA PRADESH, PH:502278-9849883665.

HYDERABAD

948.## ARYAN MOTORS (3264), D.NO.17-1-382/K/5 & 6, CHAMPAPET SAIDABAD, SAGAR ROAD, HYDERABAD, PH: 500059-9246155464.

949.## COSMO AUTO CLINIC PVT. LTD. (1045), PLOT NO 1, RD NO 5,, CHANDRAPURI COLONY, LB NAGAR, HYDERABAD - 500074, PH: 500074-9246272733/9849015667.

950.## PISTONS & SPANNERS (2766), 2-3-37 MAHARANA PRATAP FUNCTION HALL, AMBERPET, HYDERABAD-500 013, PH :500 013-9990649504.

951.## SERWELL AUTOMOBILES (5234), PLOT NO 202.203.ADITYA NAGAR. OPP, JNTU .KUKA TPALLY.HYDERABAD, ANDHRA PRADESH, PH :500085-9490105147

JAGTIAL

952.## PARAMESHWARA MOTORS (3851), OPP P R
OFFICE, DHAROOR CAMP, JAGTIAL 505327,
DT. KARIMNAGAR (A.P.),
PH :505455-9912664659.

KARIMNAGAR

953.## MYTRI MOTORS (5152), 8-6 188.KOTHI RAMPUR, KARIMNAGAR, DISTRICT -KARIMNAGAR, ANDHRA PRADESH, PH :505001-9441475357.

954.** PUSHPAK MOTORS (1032), KOTHI RAMPUR, HYDERABAD ROAD, KARIMNAGAR - 505 001 (A.P), PH :505001-9849489431.

KHAMMAM

955.## EXCEL AUTO CARE (1043), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM -507001, PH :507001-9848156363.

KODAD

956.## SAI KAKATIYA SERVICE STATION (4664), SURYAPETA ROAD, OPPOSITE LORRY ASSOCIATION BUILDING, KODAD-508206, DISTRICT-NALGONDA (ANDHRA PRADESH), PH :508206-948057813.

MAHABUB NAGAR

957.## SRI AYYAPPA MARUTI CLINIC (3941), OPP HOSPITAL, HYDERABAD ROAD, YEMUGONDA, MAHABUB NAGAR (ANDHRA PRADESH), PH: 509002-9440569259.

MANCHERIAL

958.## PARVATI MOTORS (4129), 4-53 BPL ROAD, MANCHERIAL, DISTRICT ADILABAD, ANDHRA PRADESH, PH -504208-08885554888

MIRYALGUDA

959.## GANESH MOTORS (4536), D.NO. 6-366, P.V. COMPLEX, NALGONDA ROAD, MIRYALGUDA, NALGONDA DISTT (ANDHRA PRADESH), PH -508207.2933000666

NALGONDA

960.## SRIRAM AUTHORISED SERVICE STATION (4627), HYDERABAD ROAD, OPP. SUB STATION, NALGONDA, ANDHRA PRADESH, PH. 508001-9848378133.

NIZAMABAD

961.## PRIYA SERVICING (1771), C/O TIRUMALA CHITRA MANDIR, HOUSE NO.1-9-833, PHULANG ROAD, NIZAMABAD-503 003 (A.P.), PH: 503 003-9948034523.

RAMAGUNDAM

962.## ALI AUTOMOBILES (2849), NEAR TV RELAY STATION, NTPC JYOTHINAGAR, RAMAGUNDAM-505 215, DISTT. KARIMNAGAR (AP), PH: 505208-9848219102.

SECUNDERABAD

963.## ANNAPURNA MOTORS (2947), # 6-3-23/5
JAYANAGAR COLONY, NEAR MEKALMANDI,
NEW BHOIGUDA, SECUNDERABAD-500 080,
PH :500 080-9849061136

SIRSILLA

SATHVIKA MOTORS (5649), KARIMNAGAR ROAD, OPP HP PETROL PUMP, SIRSILLA-505301, DISTRICT - KARIMNAGAR, ANDHRA PRADESH, PH:505301-9490284726.

SURYAPET

965.## SAI GLOBAL AUTO SERVICES (4550), OPP. AYYAPPA SWAMY TEMPLE, BY PASS ROAD, NH-9, SURYAPET-508213, ANDHRA PRADESH, PH:508213-9848076108.

WANAPARTHY

:## SMC MOTORS (5658), K.K.T. ROAD, BASAVANNA GADDA, WANAPARTHY, DISTRICT -MAHABUBNAGAR, ANDHRA PRADESH, PH:509103-9440142927.

WARANGAL

967.## VAISHNAVI AUTOMOBILES (470), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL-506 001, PH:506 001-9849002528.

TRIPURA

AMBASSA

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

¹⁰³

968.## CHAKRABORTY MECHANICAL WORKSHOP (5351), NH-44, NEAR ZILLA PARISWAD OFFICE, AMBASSA, DISTRICT - DHALAI, TRIPURA.

PH -799289-9436136054

DHARMANAGAR

969.## RAJ AUTOMOBILES (2868), STATION ROAD. RAJABARI, DHARMANAGAR, TRIPURA (NORTH)-799 253. PH:799253-9436477578.

UDAIPUR

970.## SUR UDYOG (3963), TOWN FULKUMARI NO. 1. BRAMHABARI, P O UDAIPUR COURT. UDAYPUR, TRIPURA SOUTH, PH:799120-9862276650.

UTTAR PRADESH

AGRA

GAYATRI MOTORS (4730), 101-102.SHASHI 971 ## NAGAR, CHANDRAKALA-, COMPLEX.SIKANDRA BODLA ROAD, AGRA -282008. (UTTAR PRADESH). PH:282007-8077786331.

ALIGARH

972.## KAPIL AUTOMOBILES (1344), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), PH:202002-9837007636.

973.## KAR SCAN CENTRE (449), RAMGHAT ROAD. KWARSI, ALIGARH-202 002, PH:202002-8937000111.

ALLAHABAD

974.## ANSHUMAN AUTOMOBILES (4933), 353, NAINI BAZAR NAINI, DISTRICT ALLAHABAD, ALLAHABAD-211008, UTTAR PRADESH, PH:211008-9335138119.

SHASTRI MARG, ALLAHABAD, , PH:211001-9415317225.

KAY CEE AUTOMOBILES (2155), 72/60 L.B.

976.## TRIBENI MOTORS (2539), 23 KANPUR ROAD, ALLAHABAD-211 001. (U.P.). PH:211001-9415324244.

ALMORA

AROMA AUTOMOBILES (3149), THE MALL. ALMORA, (UTTARANCHAL), PH:263601-9412093410.

AMROHA

978.## SUNNY MOTORS (2165), BIJNORE ROAD, J.P. NAGAR, AMROHA-244 221, (U.P.). PH:244221-9412248884.

AURAIYA

979.** SINGH AUTOMOBILES (5248), KANPUR ROAD.AURAIYA . DISTRICT - AURAIYA . PIN - 206122, UTTAR PRADSH, PH:206122-9808403258.

BARUGARH

GURUNANAK AUTOMOBILES (5977), NH- 9, VILL SIMROLI . BABUGARH CANTT. . DISTRICT- HAPUR, UTTAR PRADESH. PH:245102-8941838183/9411490827.

BAGHPAT

981.## KAUSHIK MOTORS (4473), PLOT NO 525, DELHI SAHARANPUR ROAD, PALI, BAGHPAT, LITTAR PRADESH 250609 PH:250609-9837800582.

BALRAMPUR

982.## D M AUTOMOBILES (3933), NEAR BCM. POST SIRSIYA, GONDA ROAD, BALRAMPUR 271201,

PH:271201-9415071840.

BANDA

983.## CHAUDHARY TRACTORS (2249), STATION ROAD, BANDA-210 001, (U.P.), PH:210001-9415143033.

BARAUT

984.## HIGH TECH ENGINEERS (4821), 216/5 SAHARANPUR ROAD, BARAUT, , PH:250611-9837168887.

985.## SIGNET AUTOMOBILES (4441), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P.). PH:250611-8279527633 9917668255.

BAREILLY

986.## S P MOTORS (5746), 383, SURKHA CHAWNI, NAINITAL ROAD, BAREILLY-243001, DISTRICT-BAREILY, UTTAR PRADESH. PH:243001-9568033111.

BIJNOR

SARDAR MOTORS (4671), DELHI HIGHWAY ROAD, 4TH KM MILE STONE, BIJNOR-246701, UTTAR PRADESH. PH:246701-9837265076.

BULANDSHAHR

988.## DELHI AUTO ENGRS (1351), PLOT NO-106, NEAR TAFE TRACTOR AGENCY, NEAR CHANDPUR VILLAGE, DELHI ALIGARH BYPASS ROAD, BULANDSHAHR (UP) 203001.. PH:203001-8700630277/8700982878.

CHANDPUR

989.## BHARTI AUTOMOBILES (1777), DHANORA ROAD, CHANDPUR, DISTT, BIJNOR, (U.P.). PH:246725-9837380551.

CHITRAKOOT

SHYAM MOTORS (4367), BUS STAND, KARWI, CHITRAKOOT-210205 PH:210205-9415143900.

DADRI

991.## NATIONAL MOTOR AGENCY (5143), NOIDA ROAD . DADRI -203207. DISTRICT -GAUTAMBUDH NAGAR, UTTAR PRADESH, :203207-9818486888/0120-2667033/987394403

3. DANKAUR

992.## YASH MOTORS (5934), SIKANDRABAD ROAD, NEAR KISAN INTER COLLEGE, DANKAUR-203201, DISTRICT- GAUTAM BUDH NAGAR, UTTAR PRADESH. PH:203201-9410491590

DEOBAND

993.## PRACHI MOTORS (3361), ADJACENT TO CIVIL COURTS, G.T. ROAD, DEOBAND, DISTT. SAHARANPUR (U.P.), PH:247554-7017803402.

DEORIA

CLASSIC MOTORS (2971), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.). PH:274001-9415313939.

DHAMPUR

995.## AUTAR AUTOMOBILES (4846), NOORPUR ROAD, DHAMPUR-246761. DISTRICT-BIJNOR, UTTAR PRADESH. PH:246761-7017211986.

FAIZARAD

996 ## S K MOTORS (4672), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96. FAIZABAD-224001, UTTAR PRADESH, PH:224001-9307088750.

FARUKHABAD

997.## APOORVA MOTORS (4675), SATAPUR MAINDIR ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH. PH:209625-9044498958.

998.## SANDEEP MOTORS (4161), THANDI SADAK, OPP. JITENDRA GAS GODOWN. FARUKHABAD, UTTAR PRADESH, PH:209625-9838840322.

FATEHPUR SIKRI

LAXMI MOTORS (5943), FATEHPUR SIKRI ROAD, KHEDA KORAI, FATEHPUR SIKRI-283110. DISTRICT-AGRA. LITTAR PRADESH.

PH:283110-9837749949.

FIROZABAD

1000.** AMAN MOTORS (4366), OPP CAR CARE (INDIA), BYE PASS ROAD, FIROZABAD, UTTAR PRADESH. PH:283203-9837500220.

1001.## GOVIND AUTOMOBILES (1739), NH-2. INFRONT OF SUB POWER STATION, MODHA, ASFABAD CHAURAHA, FIROZABAD, UTTAR PRADESH, 283203. PH:283203-9837169332.

GANGOH

1002 ## SHRI KRISHNA MOORS (5939), BYF PASS ROAD RAM GARH GANGOH-247341. DISTRICT-SAHARANPUR, UTTAR PRADESH. PH:247341-9997102785.

GHAZIABAD

1003.* CHAWLA AUTOMOBILES (2643), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA, GHAZIABAD PH:201001-9811720929.

1004.* D.N. AUTOLAND (272), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD. PH:201003-9810001121/9811001121

KRISHNA AUTOMOBILES (5356), 101.LAL KUAN .SHIV MANDIR . BULANDSHAHAR ROAD, DISTRICT - GHAZIABAD, UTTAR PRADESH. PH:201009-9810311475/9999506820

1006.## S P MOTORS (4973), HAPUR BYPASS ROAD, MEHRAULI, GHAZIABAD, PH

:201001-9350936262/0120-2824443/921026490

SHIVA MOTORS (3343), 17TH KM STONE, 118-119 SHIVPURI, SECTOR-9 VIJAY NAGAR BYEPASS NH-24, GHAZIABAD-201 009 (U.P.), PH

> :201009-2744400/3232590/9891464349/987300 0571.

GONDA

1008.** AMAN MOTORS (3858), USAYANI CHAURAHA, RAJA KA TAAL, BYE PASS ROAD, FEROZABAD, UTTAR PRADESH, PH:271001-9415120101.

PANKAJ AUTOMOBILES (1370), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, CONDA PH:271801-9415664930.

^{*} B-Category Mass: Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

GREATER NOIDA

1010.## JAISWAL MOTORS (5078), PLOT NO. 31, SECTOR MUP-II.GREATER NOIDA , DISTRICT - GAUTAM BUDH NAGAR, UTTARPRADESH,

PH : 201308-9810082269/6485444/9212142269.

1011.## KUMAR MOTORS (8926), M-8, SITE-5,
UPSIDC, KASNA INDUSTRIAL AREA,
GREATER NOIDA, DISTRICT-GOUTAM BUDH
NAGAR, UTTAR PRADESH,
PH

:201312-9911498777/0120-2341088/981149833

HAPUR

1012.* SRASTHI MOTORS (3076), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101, PH:245101-9412221608/9557307976.

HARDOI

1013.## M. MOTORS & SERVICE CENTRE (3371), CHAND BEHTA, LUCKNOW ROAD, HARDOI-241 001, (U.P.), PH :241001-9415175610.

1014.** TAYAL AUTOMOTIVES (4265), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, PH :241001-9415149951.

HATHRAS

1015.## RADHEY RADHEY AUTOMOBILES (4344), NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, PH :204101-9897069159.

JAGDISHPUR

1016.## SUPER AUTOMOBILES (3564), JAFARGANJ P.O., INDUSTRIAL AREA, JAGDISHPUR, DISTT. SULTANPUR-227 817 (U.P.), PH :227817-9415177882

JAUNPUR

1017.## SADGURU MOTORS (5071), FAIZBAGH (NEAR TOM OFFICE), UMARPUR. JAUNPUR, JAUNPUR-222142, UTTAR PRADESH, PH: 222142-8318984440.

JHANSI

1018.## A.B. MOTORS (8938), 4 KHATTERYANA, JHANSI, , PH '284001-9415059820

KANNAUJ

1019.## SARALA AUTO CARE (5854), G.T. ROAD.KANNAUJ, DISTRICT-KANNAUJ, UTTAR PRADESH, PH:209725-9918692324.

KANPUR

1020.* AJAY MOTOR WORKS PVT. LTD. (3134), 117/N/81 KAKADEVO, KANPUR, , PH :208025-9919828000.

1021.** AUTO GARAGE (4266), P-22-A, PRATAP GANJ, FACTORY AREA, OPP GANDA NALA, KANPUR-208012, PH :208012-9415126189.

1022.** CHANDRA MOTORS (4458), 621/3 W-2 JUHI, BEHIND SACHAN GUEST HOUSE, KANPUR, PH :208027-9839928280.

1023.** EXCELLENT MOTORS (2968), 123/793 FAZALGANJ, KANPUR-208 012, , PH:208012-9336119874.

1024.## KANPUR AUTO CENTRE (2823), 14/142, CHUNNIGANJ, KANPUR, PH :208001-9415045438.

1025.** SUJIPA MOTORS (4337), 127/465, U-BLOCK, NIRALA NAGAR, KANPUR, PH :208014-9415050146.

KHALILABAD

1026.## RATAN MOTORS (5645), RAILWAY STATION ROAD - KHALILABAD, DISTRICT- SANT KABIR NAGAR, PIN-272175, UTTAR PRADESH, PH :272175-9621294899.

KHATAULI

1027.## EAGLE MOTORS (5142), OPPOSITE EW ROADWAYS , G.T. ROAD. NH -58.KHATAULI, DISTRICT - MUZAFFARNAGAR, UTTAR PRADESH, PH :251201-9997039786.

KHEKRA

1028.** KAILASAH MOTORS (5767), OPP TEHSIL ,DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH, PH :250101-9760027001.

KOSIKALAN

1029.** ADITYA MOTORS (1940), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.), PH :281403-9837050778.

LAKHIMPUR KHERI

1030.** AJMANI TRACTORS (4143), NIGHASAN ROAD, LAKHIMPUR KHERI, UTTER PRADESH, PH :262701-9918802167.

LAMBHUA BAZAR

1031.## VIKRAM MOTORS (3729), LAMBHUA BAZAR, SULTANPUR (DIST.), UTTAR PRADESH-222 302, PH :222302-9450215996.

LONI

1032.## SAMBHAV AUTOMOBILES (5168), 31.RURAL INDUSTRIAL ESTATE , ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH, PH :201102-9311690878/9212128889.

LUCKNOW

1033.** B.K. MOTORS (2537), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015, PH :226015-9335908130.

1034.## BALAJI MOTORS (1336), 1 NEWAL KISHORE ROAD, LUCKNOW-226 001.(U.P.), , PH :226001-9336253838.

1035.## GALAXY MOTORS (5274), KASHANA SITAPUR ROAD, NEAR SHIA, P G COLLGEG -LUCKNOW, DISTRICT - LUCKNOW, UTTAR PRADESH,

PH :226021-9305567878. 1036.** GUD'S CAR CARE (2538), MAIN ROAD, NISHATGANJ, LUCKNOW-226 006, PH :226006-9415024495.

1037.** KALYAN MOTORS (1161), GOVT. POLYTECHNIC CROSSING, FAIZABAD ROAD, GOMTI NAGAR, LUCKNOW, PH :226010-9936942527.

1038.** KAPOOR MOTORS (1751), PLOT NO.380, NEAR GUNGA BAHARA SCHOOL, TILAK NAGAR , UTTAR PRADESH, PH :206122-9795457050.

1039.** KAPOOR MOTORS (5044), 555/GAJ50,BARA BIRWA, KANPUR ROAD-, ALAMBAGH LUCKNOW., DISTRICT - LUCKNOW, (UTTAR PRADESH), PH :226005-9795457050.

1040.* KRISHNA MOTORS (5026), BALAGANJ HARDOJ ROAD, CHOWK LUCKNOW, DISTRICT LUCKNOW, UTTAR PRADESH, PH :226020-9839177777.

1041.** MVV MOTORS (5531), A1/14,VIJAY KHAND,GOMTI NAGAR, LUCKNOW-226010, DISTRICT - LUCKNOW, UTTAR PRADESH, PH :226010-9792877779.

1042.** RELIANCE MOTORS CARE (1236), 7-B/1 PRIME PALACE, FAIZABAD ROAD, INDIRA NAGAR, LUCKNOW-226 016, PH :226016-9918100051.

1043.* S.K. MOTORS (2449), 8/881 VIKAS NAGAR, PICNIC SPOT ROAD, KHURAM NAGAR, LUCKNOW-226 013,

PH :226013-9415005564.

1044.* THE GARAGE (5479), BEHIND NEW HANUMAN MANDIR, MADIR PARK , MAHANAGAR - LUCKNOW , DISTRICT - LUCKNOW, UTTAR PRADESH, PH :226006-9236711634.

1045.* V.S. MOTORS (4745), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH, PH:226007-9984749000.

MAHORA

1046.## ROYAL SERVICE STATION (2238), HAMIRPUR CHUNGHI, KANPUR ROAD, MAHOBA, (U.P.), PH :210427-9450269053.

MAINPURI

1047.## JATIN MOTORS (5540), GANESH MILL COLONY, RADHA RAMAN ROAD, MAINPURI-205001, DISTRICT-MAINPURI, UTTAR PRADESH, PH:205001-8193825000.

MARIAHU

1048.## BABU MOTORS (5740), MACHALISHAHAR ROAD.NEAR POST OFFICE, MARIAHU-222161, DISTRICT - JAUNPUR, UTTAR PRADESH, PH :222161-9919263663.

MATHURA

1049.## GIRIRAJ CAR CARE (5624), BIMAL ENGG COMPLEX, BAD, MATHURA-281 006, PH :281006-9837071321.

1050.** NAND SERVICE STATION (3578), GOPAL PURA VILLAGE, REFINDERY TOWNSHIP, NH-2, MATHURA, PH :281001-9997982828.

1051.## SHREE GOPAL AUTOMOBILES (5664), DELHI BYE PASS ROAD,NEAR GOKUL RESTAURANT, MATHURA - 281001, DISTRICT - MATHURA, UTTAR PRADESH, PH :281001-9412726760.

52.* SIYA RAM MOTORS (1666), JAYSINGHPURA, NEAR BIRLA MANDIR, MATHURA-281 003, (U.P.),

PH:281003-9897053962.

MEERUT

1053.** EXPERT CAR SCANNER (1174), 83 HILL STREET (KATH-KA-PUL), BEHIND ABU LANE, MEERUT CANTT., (U.P.), PH :250001-8057301301.

1054.## KRISHNA AUTOMOBILES (5573), PLOT NO D-10,SHRADHA PURI, KANKARKHERA - MEERUT, DISTRICT - MEERUTI, UTTAR PRADESH, PH :250001-9927241738.

1055.## SARAN AUTOMOBILES LTD. (1078), DELHI ROAD, RITHANI, MEERUT, PH :250001-6395883392 8977524402.

MIRZAPUR

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1056.## PRABHAT MOTORS (4131), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, U P, PH :231309-9838940382.

MOHANI AL GANJ

1057.** GURU TEG BAHADUR AUTO ENTERPRISES (4072), 4 SENANI VIHAR, RAI BAREILLY ROAD, MOHANLAL GANJ, LUCKNOW U P, PH :226027-9415229172

MORADABAD

1058.## ASHISH AUTOMOBILES (1477), KANTH ROAD, MORADABAD-244 001, , PH :244001-9837055258

NAJIBABAD

1059.## SETHI MOTORS (4557), C/O SETHI BOARD INDUSTRISE LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT. BIJNOR (UTTAR PRADESH), PH: 246732-9837590800.

NOIDA

1060.## AUTOPOINT (2263), G-6,SECTOR 11,NOIDA, PH :201301-8800337770.

1061.## RAHUL MOTORS (4662), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH, PH

:201305-9810572900/9312271259/0120-396313

1062.** RAJESH & ANIL MOTOR CO (5330), B-110.
SECTOR 2. NOIDA, DISTRICT - GAUTAM
BUDH NAGAR , UTTAR PRADESH,
PH

:201301-9818578786/0120-4211266/0120-2539 555. 1063.* SKUNIVERSE AUTOMOBILE PRIVATE

063.* SKUNIVERSE AUTOMOBILE PRIVATE LIMITED (8922), C-2 SECTOR 63, NOIDA -201301, PH:201301-9219694600/9690581570.

OBRA

1064.## APPRECIATE SERVICES (4678), BY PASS ROAD , ROBERTS GANJ , DISTRICT -SONEBHADRA , UTTAR PRADESH, PH :231219-8765833557.

PILIBHIT

1065.* UNIVERSAL MARUTI SERVICE STATION (4365), BYE PASS ROAD, PILIBHIT, UTTAR PRADESH, PH :243006-9412313499.

PILKHUWA

1066.* SHREE BANKEY BIHARI MOTORS (6025), NH-24,DELHI-GARH ROAD,PILKHUWA-245307,

DISTRICT-GHAZIABAD, UTTAR PRADESH, PH:245304-9045548101.

PRATAPGARH (U.P)

1067.** SHREE MOTORS (4146), ALLAHABAD FAIZABAD ROAD, NH-96, CHILBILA RANJEETPUR, PRATAPGARH (UTTAR PRADESH), PH :230001-9415229257.

RAI-BARELI

1068.** STANDARD GARAGE (4429), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE, RAE BAREILLY, PH : 229208.9415190703

RAMNAGAR

1069.## MAHI AUTOMOBILES (5532), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTRAKHAND,

PH:244715-8192000724

RAMPUR

1070.## FIZZA MOTORS (2241), NEAR AMBEDKAR PARK, CIVIL LINES, RAMPUR (U.P.), PIN-244 901, PH :244901-9897879711.

RATH

1071.## MARUTI POINT (4228), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P), PH :210431-9415331735.

RENUKUT

1072:## AMBIKA MOTORS (1050), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.), PH :231217-9415251724.

ROBERTSGANJ

1073.* KAMAKHYA AUTOMOBILES (4163), PIPRI ROAD, ROBERTSGANJ, SONEBHADRA (U.P), PH:231216-9918301052.

SADABA

1074.## ASHU SERVICE CENTRE (5849), AGRA BYE PASS ROAD, SADABAD-281306, DISTRICT-HATHRAS, UTTAR PRADESH, PH :281306-9058832658.

SAHARANPUR

1075.## GANESH CAR SERVICES (1871), OPP. REMOUNT DEPOT GATE, DEHRADUN ROAD, SAHARANPUR-247 001, PH :247001-9358306804.

SAHIBABAD

1076.## MEHAR AUTOMOBILES (3576), 116/1 NEAR GDA MARKET, G.T. ROAD, KATORI MILL MOHAN NAGAR, GHAZIABAD-201 007, PH :201007-9711201557/9871832662.

1077.** MOTOR MAGIC AUTO ZONE (4462), 4/29-A SITE-IV, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD, PH

> :201005-9810936357/9717194917/7838615331/ 9717800022.

1078.## PANDIT AUTOMOBILES (4647), 3/1/1, SITE-IV, INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH, PH

> :201010-0120-2776808/0120-4114808/9810771 045/9810639100.

1079.## POOJA MOTORS (3562), TEELA MORE, SHAHBAJPUR, LONI, DISTT. GHAZIABAD (U.P.), PH :201102-9810986463/9810986463/9891155954

SANDILA

1080.## SUBHAM SERVICE CENTRE (4042), NEAR NEHA KOTHI ROAD, SANDILA, HARDOI, PH:241204-9506181818.

SHAHJAHANPUR

1081.## SUPER AUTO (3135), OLD DIST. HOSPITAL ROAD, SHAHJAHANPUR (U.P.), PIN-242 001, PH :242001-9415035644.

SHAMLI

1082.## ROYAL MOTORS (5277), PANIPAT KARANA ROAD, SHAMLI, SHAMLI-247776, UTTAR PRADESH, PH :247776-9927272766.

SHIKOHABAD

1083.## KUMAR MOTORS (5575), SUBHASH TIRAHA ,AGRA GATE - SIKOHABAD, DISTRICT -FEROZABAD, UTTAR PRADESH, PH :283203-9411937033.

SIDDHARTH NAGAR

1084.## MARUTI CARE CENTRE (2736), OPP.
SIDDHARTH SCHOOL, AZAD NAGAR,
SIDDHARTH NAGAR-272 207, (U.P.),
PH :272207-9935642651.

SIKANDRABAD

8

1085.## NALIN AUTO (8921), G.T. ROAD, SIKANDRABAD, DISTT. BULANDSHAHAR, (U.P.), PH :203205-05735-222802/9412227155/976113393

SIRSAGANJ

1086.## SATGURU MOTORS (3739), BYE PASS KAURARA ROAD, SIRSAGANJ DISTT. FIROZABAD, ETAWAH-AGRA ROAD, SIRSAGANJ (U.P.), PH : 281431-9412316660.

SONEBHADRA

1087.## OUDH SERVICE STATION (2925), SHAKTI NAGAR, SONEBHADRA-231 222, , PH:231222-7408434860

SULTANPUR

1088.## HINDUSTAN AUTO GARAGE (1360), BARHAIYA BEER RD., (ADJ.BUS STAND), SULTANPUR-228 001 (U.P), PH :228001-9984154002.

VARANASI

1089.** MISHRA ENGINEERS (4957), S-4/68, NAI BASTI, PAHARIA, VARANASI-221002, UTTAR PRADESH, PH: 221002-9415301483.

UTTARAKHAND

BAZPUR

1090.## TARAI AUTOMOBILE ENGG WORKS (4459), GURUTEG BAHADUR ROAD, U.S. NAGAR, BAZPUR-262401, UTTARANCHAL, PH :263401-9837506765.

BHAGESWAR

1091.## SHREE ISHT DEV AUTOMOBILES (4570), GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTARANCHAL, PH :262642-9997895347.

DEHRADUN

1092.## ASHIRWAD MOTORS (5144), CANAL ROAD, NEAR BALLUPUR CHOWK, DEHRADUN-248001, UTTARANCHAL, PH :248001-9219594748.

1093.## HANS LAKHERA MOTORS (5032), JOGI WALA RING ROAD, NATHAPUR APPARTMNT, NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN, PH :248001-9897456677.

1094.## KRIPALESHWARI MOTORS (4475), HARIDWAR ROAD, NEAR LIC BUILDING, DEHRADUN-248001, UTTARANCHAL, PH :248001-9412963384.

095.* SHREE RAM AUTOMOBILES (5066), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN, UTTARANCHAL, PH: 248198-9897731200.

HALDWANI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1096.## EXCEL MOTORS & ENGG. WORKS (3827), RAMPUR ROAD, NEAR STM FOREST HOSPITAL, HALDWANI, NAINITAL, PH :263139-9837191688.

1097.* HARYAL SERVICE STATION (5340), BAREILY ROAD, GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND, PH - 263139, 9997200227

HARIDWAR

1098.## PREET MOTORS (5561), SHRI NATH NAGAR, RAILWAY ROAD, JAWALPUR - HARDWAR, DISTRICT - HARDWAR, UTTARANCHAL, PH : 249408-9012010497.

KANKHAL

1099.## HIGHWAY MOTORS (4261), NEAR SINGH DWAR CHOWK, ROORKEE-HARDWAR BY PASS ROAD, POST OFFICE, GURUKUL KANGRI, KANKHAL, DISTT HARDWAR, PH :249408-9412072889.

KASHIPUR

1100.## OM MOTORS (4329), OPPOSITE SWAGAT MANDAP, BAZPUR ROAD, KASHIPUR DIST., U.S. NAGAR (UTTARANCHAL), PH :244713-9927500007.

1101.## KRISHNA AUTOMOBILES (4824), MORADABAD ROAD, KASHIPUR, , PH :244713-9870998368.

KICHHA

1102## SHREE SHYAM JI AUTO SERVICE CENTRE (5648), BAREILY ROAD, KICHHA, PIN-263148, DISTRICT-UDHAM SINGH NAGAR, UTTRAKHAND, PH-263148-9837033377.

KOTDWAR

1103.## BHATT MOTORS (1775), NAJIBABAD ROAD, KOTDWARA, (GARHWAL), UTTARANCHAL, PH :246149-9917005404.

LAKSAR

1104.## SHIV AUTOMOBILES (5560), 110/1/3 BALAWALI ROAD - LAKSAR, DISTRICT -HARIDWAR, PIN - 24763, UTTARANCHAL, PH :24763-9719054422.

LOHRIASAL MALLA

1105.## ANJINI SERVICE CENTRE (5552), NEAR BLOCK OFFICE,KALADHUNGI ROAD, LOHRIASAL MALLA, CITY - HALDWANI, UTTARAKHAND - 263139., PH: 263139-9837098699.

NEW TEHRI

1106.## BHAGWATI SERVICE CENTER (4472), SECTOR-8E/537, NEAR STADIUM, BARURI, NEW TEHRI, GARWAL (UTTRANCHAL), PH :249001-7895219517.

PAURI

1107.## KRISHNA MOTORS (5957), SHRINAGAR ROAD,NEAR KARGIL SHAHEED PETROL, PUMP,PAURI-246001, DISTRICT-PAURI GARHWAL, UTTRANCHAL, PH: 246001-9412030074.

PITHORAGARH

1108.## CAR CARE CENTER (4371), CANT ROAD, PITHORAGARH, UTTARANCHAL, PH:262501-9756204288.

1109.## MAHAKALI MOTORS (4142), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTARANCHAL, PH :262501-9897922203 9634713124.

RANIKHET

1110.## LATIF MOTOR WORKS (3269), SADAR BAZAR, GANDHI CHOWK, RANIKHET, (UTTARANCHAL), PH:263645-9761250801.

RISHIKESH

1111.## GARHWAL GASOLINE STATION (3639), , H.P.
PETROL PUMP, LAXMAN JHULA ROAD,
RISHIKESH-249 201,
PH :249137-9837377767.

1112.* RAKESH AUTOMOBILE ENGINEERS (1464), OPP. BHARAT MANDIR INTER COLLEGE, HARDWAR ROAD, RISHIKESH-249 201, PH :249137-9412051655.

ROORKEE

1113.## DUM DUM ENGG. WORKS (1343), GROUND FLOOR, A TO Z TOWER, NEAR SOLANI BRIDGE, HARIDWAR ROAD, ROORKEE, PH :247664-8449155002.

1114.## ROORKEE AUTO SCANNERS (2675), 786
WEST AMBER TALAB, RAM NAGAR CHOWK,
ROORKEE-247 667,
PH :247664-7017003404.

RUDRAPRAYAG

1115.## RAJESHWARI AUTOMOBILES (5669), BADRINATH ROAD,GHOLTIR, RUDRAPRAYAG, DISTRICT -RUDRAPRAYAG, UTTARANCHAL, PH :246171-9997217788.

RUDRAPUR

1116.** BALAJI SERVICE CENTRE (1335), HALDWANI ROAD, RUDRAPUR(NAINITAL), (U.P)., PH:263153-9837021941. 1117.** CORUS MOTORS (5059), D1
D2.20/1.NANITAL ROAD, DISTRICT - U.S.
NAGAR , UTTARAKHAND,
PH :263153-9927500007.

SIMLI

1118.## PINDER AUTOMOBILES (5527), PLOT #
C6-C9, INDUSTRIAL AREA, NEAR
KARNAPRAYAG - SIMLI, UTTARANCHAL,
PH :246449-9412977249.

SITARGANJ

1119.## SHRI RAM MOTORS (5833), AGARWAL BHAWAN, BYE PASS ROAD, SITARGANJ-242605, DISTRICT-UDHAM SINGH NAGAR, UTTARANCHAL, PH: 262405-8859485786.

VIKASNAGAR

1120.## SOUMYA MOTORS (4272), CHAKRATA ROAD, BEHIND STATE BANK OF INDIA, VIKASNAGAR, DISTT. DEHRADUN (U.A), PH :248198-9412382490.

WEST BENGAL

ALIPURDUAR

1121.## PRADDYOUT AUTOMOBILE WORK (653), PURAN BAZAR, P.O.ALIPURDUAR, JALPAIGURI, WEST BENGAL, PH:736121-9832487473.

ARAMBAGH

1122.## MARUTI ZONE (3748), PARUL, ARAMBAGH, HOOGHLY, WEST BENGAL, PH :712413-9434345047.

ASANSOL

1123.## AGARWALLA AUTO SERVICE (3122), 181 BURNPUR ROAD, P.O. BURNPUR, DT. BURDWAN-713 325, (WEST BENGAL), PH :713325-9832179346.

1124.** WEST END MOTORS (1665), KALYANPUR SATELITE TOWNSHIP PROJECT, KANYAPUR LINK ROAD, PALASHDIAH MORE, PO-KANYAPUR, PIN-713341, ASANSOL, WESTBENGAL, PH :713341-8798107541.

BAHRAMPUR

1125.* MARUTI CARE (3674), NH-34 UTTARPARA MORE, P.O. RADHARGHAT, BERHAMPORE, MURSHIDABAD -742 187 (WEST BENGAL), PH: 742187-9434394040.

1126.## NARAYAN BUS SERVICE (656), 17 RABINDRA THAKUR ROAD, P.O.BAHARAMPUR (WEST BENGAL), , PH :742101-9732628065.

BALURGHAT

1127.## GHOSH AUTOMOBILES (2644), NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, PH :733101-9434963493.

BANDEL

1128.## CAR HOSPITAL (3675), 2 NO. NETAJI PARK, G.T. ROAD, (OPP. MILITARY COLONY), BANDEL (WEST BENGAL), PH:712102-9038021085.

BARRACKPORE

1129.## SAMANTA AUTOMOBILES (268), CHIRIMORE, BARRACKPORE-743 101, NORTH -24 PARGANAS, WEST BENGAL, PH :743101-9831054432.

BIRPARA

1130.## PRATAP ENGINEERING WORKS (8942), NH-31, DEMDIMA, PO-BIRPARA, PIN -735204, DISTRICT JALPAIGURI, WEST BENGAL, PH :735204-9832429319.

BOLPUR

1131.## BASUNDHARA AUTOMOBILES (4241), GOAL PARA, BOLPUR SURI ROAD, BOLPUR, PH:731235-9832132851.

CHINSURAH

1132.## UNIVERSAL AUTO REMEDY (648), C/O MR.BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE, PO CHINSURAH, HOOGHLY-712102, PH:712102-9830056592.

COOCH BEHAR

1133.## PROVA AUTOMOBILES (8936), CHAKCHAKA CHECK POST, NH-31, COOCH BEHAR-736 101, (WEST BENGAL), PH:736101-9434174309.

DINHATA

1134.## DINHATA AUTOMOBILES (5739), BALRAMPUR ROAD PO/PS:DINHATA, DISTRICT-COOCHBEHAR, PIN-736135, WEST BENGAL, PH: 736135-9434256518.

DURGAPUR

1135.## THE QUICKEST (2879), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR-713 212, PH:713212-9832165126.

FARAKKA

1136.** SPEED WHEEL SERVICE CENTRE (1056), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.), PH :742236-9434101917.

HALDIA

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1137.** S.D. REPAIRING CENTRE (2168), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY. HALDIA-721 606, DISTT. MIDNAPORE (W.B.), PH:721606-9434021405.

HOWRAH

1138.## GREWAL AUTO SERVICE (1570), 97/1 FORESHORE ROAD, SHIBPUR. HOWRAH-711 102. PH:711102-9831017806.

JAIGAON

1139.** SHAKTI TRADING CO. (770), M.G. ROAD, JAIGAON-736 182, PH :736182-7760808990

JALPAIGURI

1140.## AUTOSTEL (646), SAKOAJHORA, P.O. GAIRKATA-735 212. DIST.JALPAIGURI. (W.B.).

PH:735212-9934111868.

1141.** S.S. AUTOMOBILES (3664), ASSAM MORE. JALPAIGURI, WEST BENGAL-735 101, PH:735101-9434340252.

KALYANI

1142.## GOPAL AUTO SERVICE CENTRE (3373), B.K. EXPRESSWAY, BUDHHA PARK, KALYANI-741 235, NADIA (WEST BENGAL), PH:741235-9831319161.

1143.## KRISHNA ENGINEERING WORKS (5270), PLOT NO.199.KANTABELE.O.N.G.C ROAD. KALYANI EXPRESS ROAD, PO: GHORAGACHHA, PS - KALYANI, WEST BENGAL. PH:741245-7439007218.

KOLKATA

1144.** ADAMS MOTOR WORKS (465), 61 A SHAKESPEARE SARANI, CALCUTTA-700 017...

PH:700017-9830703287. 1145.## AUTO SCAN (2272), 100/1 B.T. ROAD, CALCUTTA-700 090. . PH:700090-9231622309.

1146.** AUTOKRAFT (620), F 1/G-3, RIC IND.ESTATE UPEN BANERJEE ROAD, PARNASREE, CALCUTTA - 700060 (W.B). PH:700060-9830053331.

1147.* BHAWANIPUR AUTO CENTRE (628), 49 S.P.MUKHERJEE ROAD, CALCUTTA - 700 026 (W.B)

PH:700026-9831783130. 1148.## CAMAC (621), 2/E CAMAC STREET. CALCUTTA-700016(W.B) PH:700016-9831493716

1149.## CLASSIC ENGINEERING WORKS (3171), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO.G-1. KOLKATA-700 034. PH:700034-9903390559.

1150.* DELUXE SERVICE STATION (672), P-256 257 CIT ROAD, CALCUTTA-700 010. . PH:700010-9836490083.

1151.** DIAL AUTOMOBILES PVT.LTD. (643), 162 A PARY MOHAN RAY ROAD. CALCUTTA-700027(W.B). .

PH:700027-9830552191. 1152.## FORTUNE AUTO CARE (3167), 16 G/6 KHANPUR ROAD, KOLKATA-700 047, (W.B.). PH:700047-9831754527.

1153.## INTERNATIONAL AUTO WORKS (2648), 48-C SOUTH TANGRA ROAD, KOLKATA-700 046. . PH:700046-9163703015.

MARUTI LINK (1633), CK-12 SECTOR 2, SALT LAKE, CALCUTTA-700 091. PH:700091-9831180421.

1155.** MOTORKRAFT (635), P-149 REMOUNT ROAD, CALCUTTA-700 027.(W.B), . PH:700027-033-24493849

1156.** NORTH POINT MOTORS PVT. LTD. (344). DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA-700 037, PH:700037-9830220069

PRINCE MOTOR WORKSHOP (2845), TM -2/8 TEGHARIA P.O. HATIARA CALCUTTA-700 059. PH:700059-9875625595

1158.** R.S. SERVICE CENTRE (1948), 1/2 MAHENDRE ROY LANE, CALCUTTA-700 046.

PH:700046-9831170273 RAJ AUTO SERVICE (5338), 35, CANAL EAST ROAD, KOLKATA, PIN - 700011, WEST BENGAL,

PH:700011-9831103901. 1160.## ROYAL CALCUTTA AUTOMOBILES (4651), 68 BROAD STREET, KOLKATA-700019, , PH:700019-8777762005

1161.## RUSSA ROAD SERVICE STATION (622), 30 SP MUKERJEE RROAD, CALCUTTA - 700025

PH:700025-9748757842. 1162.## SONA AUTO UDYOG (3144), 1404 PURBACHAL MAIN ROAD, OPP, KALIKAPUR MARKET, KOLKATA-700 099. PH:700099-9804608684

1163.## TECHNO AUTO WORKS (4669), 619, RAJA RAM MOHAN ROY ROAD, BIREN ROY ROAD EAST, BEHALA, KOLKATA-700008, PH:700008-9830111258

1164.## ULTRA CRAFT (4643), 103/1B, RAJA DINENDRA STREET, KOLKATA-700006. WEST BENGAL.

ROAD, CALCUTTA-700 019.(W.B), , PH:700019-9830778611.

SARANI, CHINAR PARK, RAJARHAT KOLKATA-700157, DISTRICT - KOLKATA, WEST RENGAL PH:700157-9830643781.

1167.## ZOVAN AUTOMOBILES PVT. LTD (5578). 42/A1B.RAJA SANTOSH ROAD, KOLKATA. DISTRICT - KOLKATA, WEST BENGAL,

KRISHNANAGAR

DEEP, N.H-34, KRISHNANAGAR, NADIA-741101, WEST BENGAL.

1169.## TARA MA AUTOMOBILES (1947). AUROBINDRA SARANI (NEAR KRISHNANAGAR WOMEN'S COLLEGE), KRISHNANAGAR.NADIA.. WEST BENGAL 7411011.

GANGANAGAR MADHYAMGRAM. KOLKATA-700129 (WEST BENGAL). PH:700129-9831094430

MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH. PH:700132-9830239001.

MALDA

1172.## ABHISEK AUTO CENTRE (1976), N.H.34, NEAR ST. XAVIER SCHOOL, P.O. MOKDUMPUR, DISTT, MALDA-732 101 (W.B.), PH:732101-9434065360.

MIDNAPORE

1173.## CHATTERJEE AUTOMOBILE (4960), INDUSTRIAL GROWTH AREA, KHASJANGAL (NEAR KERANICHOTI), MIDNAPORE-721101. DISTRICT-PACHIM MIDNAPORE, PH:721101-9434043558.

NARENDRAPUR

1174.## A.M. AUTOMOBILES (3175), KAMALGAZI, NARENDURPUR, KOLKATA-700 103, (WEST BENGAL). PH:700103-8335860051.

PURULIA

* B-Category Mass: Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

1165.## YOUNG AUTOMOBILES (637), 50/2 HAZARA

1166.## ZENITH AUTO (5529), BOHLA NATH

PH:700027-9831082193.

1168.## HIGHWAY SERVICE CENTRE (4455), ASHA PH:741101-9434165494.

PH:741101-8001100930.

MADHYAMGRAM

1170.## BEHAL'S AUTOMOBILE (4653), DOLTALA,

PAUL AUTOMOBILES (671), JESSORE ROAD,

SURI

1182.## PANCHANATH AUTOMOBILES (4456), BROJARGRAM BARABAGAN, BAKRESWAR PATHARCHAPURI HIGHWAY MORE, SURI. WEST BENGAL-731101, PH:731101-9732026250.

1175.## BANERJEE AUTO SERVICE (640).

ROAD, PURULIA (W.B).

PH:723101-9434656942.

BENGAL, PIN 742235.

PH:742235-9434101917.

PH:713343-9091392314.

1178.## BHAWANI MOTOR GARAGE (4844).

PH:734405-9641162127

PH:734003-9832068537.

PH:700115-9674907411.

PH:712203-9830191251.

1179.## MUM AUTO WORKS (4835), NEAR DELHI

SILIGURI, WEST BENGAL-734003,

1180.** CAR CARE (8929), B.T. ROAD, SODEPUR,

1181.* MARUTI AUTO CENTRE (2167), 85/18 G.T.

ROAD (WEST), PO : MULLIKPARA,

SRIRAMPUR, HOOGLY-712 203 (W.B.),

RAGHUNATHGAN.I

RUPNARAYANPUR

BENGAL.

SILIGURI

SODEPUR

SRIRAMPUR

S.P.BANERJEE ANALBILA VILLA. RANCHI

1176.## AUTO WHEEL (4427), NH 34, UMARPUR, PO

1177.## L K MOTORS PVT LTD. (3477), NH 2 BYPASS,

(CHALBALPUR), BURDWAN-713 343.

POINT (CHOWRANGI), RUPNARAYANPUR

BIDYASAGAR PALLY, NEAR RISHI BHAWAN,

BURDWAN ROAD, SILIGURI-734405, WEST

PUBLIC SCHOOL, PANCHANAI (DAGAPUR).

P.O.: SUKCHAR, 24 PARGANAS (NORTH),

GHORSALA, DO MURSHIDABAD, WEST

ULUBERIA

1183 ## APSARA SERVICE STATION (3374), NEAR BANITABLA CHECKPOST, ON NH-6. ULUBERIA-711 316, (W.B.), PH:711316-7797484735

PH:700006-9831313321.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

DELHI

DELHI

- MARUTI SALES & SERVICE(DELHI) (0810-08-01), C-119, INDUSTRIAL AREA PHASE-I, NARAINA, NEW DELHI - 110028 PH :45541113.
- J J IMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (0883-08-01), F-39,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI-110020 PH :41612194, 40685500.

TAMIL NADU

CHENNAI

 J J IMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (1485-14-01), #9, (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI -600032 PH: 044-43563366, 43563367, 9176615000.

ARUNACHAL PRADESH

ITANAGAR

 HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111 PH :7005337938

ASSAM

BARPETA

 ROY AUTO ENGINEERING WORKS (7281-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD, WARD NO.-4, ASSAM - 781315 PH 9954069396.

DULIAJAN

 B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602 PH:9435719753.

BIHAR

PATNA

 CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA, PATNA - 800013 PH:9334117070/8210810240.

DELHI

DELHI

- GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, -110018 PH 43276666
- A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, LAWRANCE ROAD, DELHI - 110035 PH :48280000.

HARYANA

BALLABGARH

 ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004 PH :4271800; 9899232536;9212142536.

MURTHAL

MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44
HSIIDC, MURTHAL - 131027
PH :9215182230.

PANCHKULA

 CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA -134113

PH:9914115427.

PANIPAT

 VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103 PH :9896118618.

SAHA

 PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-AMBALA - 133104 PH 9896666402.

YAMUNANAGAR

 HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001 PH :8950000069

HIMACHAL PRADESH

JASSUR

 CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201 PH 9882217575 , 9459500613.

JAMMU AND KASHMIR

SRINAGAR

 RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR -2441384 PH: 9906631702.

JHARKHAND

RANCHI

 PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA, RANCHI. - 834001 PH: 2544661, 2542650.

KERALA

COCHIN

 AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 682024 PH: 9025730007.

PATHANAMTHITTA

 AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA -689640
 PH 9288117477

MADHYA PRADESH

NEEMUCH

 AUTO SCAN (3T81-3T-01), MHOW ROAD, NEEMUCH, MADHYAPRADESH, - 458441 PH: 9425106588.

MAHARASHTRA

PUNE

 MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 41/1017 PH : 968901459.

THANE

 THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE -400007

PH:9833947772.9833947778.

ODISHA

KEONJHAR

 KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001
 PH 9437075366

PUNJAB

BATALA

 CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505 PH:9876024243, 9876024254.

MOGA

 SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001 PH :06136-226807

RAJASTHAN

JAIPUR

 KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A ; NARAYANPURI, KATARIA KRISHI FARM, SIRSI ROAD, JAIPUR - 302034 PH:7427059388.

TELANGANA

HYDERABAD

 RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068 PH :9848062263.

UTTAR PRADESH

ALIGARH

 VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001
 PH :9917473052 9582123586

GHAZIABAD

- KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR, HAPUR ROAD, GHAZIABAD - 201002 PH:0120-4538200, 9717629599, 9810523345.
- CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD -201102 PH :9582945510, 9999107841.

LUCKNOW

 K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW -226003 PH:2473369.

MEERUT

 UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, -250001 PH:9837072642.

NOIDA

- MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
 9,SECTOR-8,NOIDA 201301
 PH:08826172222 & 09971689689.
- MOTORCRAFT INDIA PVT LTD (A181-A1-02),
 C-125,SECTOR-63,NOIDA, 201301
 PH:09958732222 & 09910282222.
- JKM MOTORS (A184-A1-01), A-25,SECTOR
 9,DISTT. GAUTAM BUDH NAGAR,NOIDA 201301
 PH:0120-4052400, 9899424000.
- FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301
 PH :4581111: 4581131/9650631111.

SAHIBABAD

 FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/18/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010 PH.9560868111.

UNNAO

 VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801 PH :2830610.2831248.

VARANASI

KOLKATA

 PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002
 PH:25100469, 9415203641.

WEST BENGAL

 MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027 PH:24568326. 24486568. 24568325.

MEMO		

MEMO		

BATTERY LABEL SYMBOL MEANINGS

®	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

Prepared by

MARUTI SUZUKI INDIA LIMITED

Service Division October, 2023

Part No. 99011M72R12-74E
Printed in India

For round-the-clock on-road assistance, call Maruti On-road Service at 1800 102 1800^* / 1800 1800 180^*

No STD code to be prefixed.

MARUTI SUZUKI GENUINE PARTS

MARUTI SUZUKI COST PROTECT **MARUTI SUZUKI HELPLINE**

MARUTI SUZUKI ROAD SERVICE

SERVICE DIVISION MARUTI SUZUKI INDIA LIMITED

Palam-Gurgaon Road, Gurgaon – 122 015 (Haryana), India Visit us at: www.marutisuzuki.com

