




OWNER'S MANUAL & SERVICE BOOKLET

For vehicle fitted with CNG fuel system, use S-Presso CNG Supplementary Owner's Manual, available with the vehicle.

Keep the booklet with the vehicle at all times.

Contains Warranty policy and important information on Safety, Operation & Maintenance.

Part No. 99011M62S07-74E May, 2023 (ENG.) This Owner's Manual & Service Booklet applies to S-PRESSO models produced by MARUTI SUZUKI INDIA LIMITED.

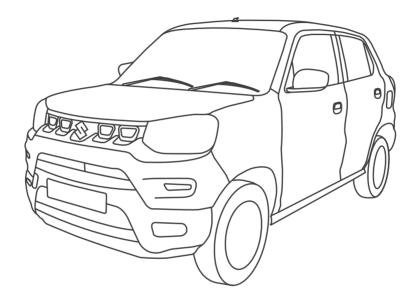

NOTE: The illustrated Model is one of the S-PRESSO series Accessories shown in the picture are not part of standard equipment

© Copyright 2023 **Maruti Suzuki India Limited.** All rights reserved. No part of this manual can be reproduced in any manner whatsoever or transmitted in any form or by any means without prior written consent of Maruti Suzuki India Limited.

FOREWORD

This manual is an essential part of your vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new MARUTI SUZUKI and review the manual from time to time. It contains important information on safety, operation and maintenance. You are invited to avail the three Free Inspection Services as described in the manual. Three free inspection coupons are attached to this manual. Please show this manual to your dealer workshop while you take your MARUTI SUZUKI for any Service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

WARNING/ A CAUTION/NOTICE/

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

A WARNING

Indicates a potential hazard that could result in death or serious injury.

A CAUTION

Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.



75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

NOTE:

- Words like car, model/variant are invariably used in this manual to denote the "Vehicle".
- Pictorial representations used in this manual are for reference purposes only.

MODIFICATION WARNING

WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorised workshop or qualified service technician for advice on installing such mobile communication equipment.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

"WARNING"



Vehicle may break-down, meet with an accident or catch fire due to

- 1. Installation of
 - High wattage bulbs
 - Non genuine lamps / horns
 - Modified suspension / wheels
 - Non genuine parts / accessories etc.
- 2. Retrofitment of LPG / CNG fuel systems/kits.
- 3. Usage of domestic LPG.
- 4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may breakdown or engine may fail due to

- 1. Water entry into the engine (which may lead to hydrostatic lock).
- 2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.

NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT $\;$ TO $\;$ THE $\;$ NEAREST AUTHORIZED WORKSHOP.

"CAUTION"

- 1. Retro-fitment of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
- 2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
- 3. Usage of domestic LPG for running vehicles is prohibited as per law.
- 4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
- 5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning.(reduced contact area between tire and road due to presence of water)
- 6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
- 7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
- 8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
- 9. Always wear seat belt at all the times.
- 10. Do not use mobile phone while driving.
- 11. Avoid Smoking in the car, live bud thrown in car may cause fire.
- 12. Do not put any body part under the vehicle when it is supported on a Jack.
- 13. Do not use non-genuine accessories in your vehicle.
- 14. Do not fit accessories from unauthorized workshops/sources.
- 15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
- 16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
- 17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
- 18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
- 19. Do not check the engine room / open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
- 20. Avoid driving when vehicle has met with an accident. Before driving, Please contact with authorized MSIL dealership.

VIN:									
MODEL:					OWNER				·
VARIANT:					NAME & ADDRESS				
COLOUR:									
ENGINE NO.:					CONTACT NO.				
KEY NO.:					E-mail ID:				
INVOICE DATE:					SELLING				
ODOMETER READING				KM					
REGISTRATION NO.:					& CODE				
BATTERY MAKE:					DEALER				
BATTERY NO.:					SHOWROOM ADDRESS &				
BATTERY BATCH					CONTACT NO. (STAMP)				
TYRE	MAKE	ВА	тсн (CODE					
Front Right									
Front Left					CONTACT NO. FOR SERVICE				
Rear Right					APPOINTMENT & SUPPORT				
Rear Left]				
Spare									

For any assistance with regard to our product, please contact General Manager/Works Manager at any of our Dealer or Authorised workshop. For additional enquiry, you may contact our Regional Office or Service Department. The addresses and phone numbers are given in Service Network section of this Manual.

CUSTOMER SERVICE MAINTENANCE RECORD (to be filled by customer)

INSPECTION SCHEDULE	DATE OF SERVICE	MILEAGE (KM)	NAME OF SERVICING WORKSHOP
1st Free inspection service - 1 Month / 1000 KM*			
2 nd Free inspection service - 6 Months / 5000 KM *			
3 rd Free inspection service - 12 Months / 10000 KM*			
1st Paid inspection service - 24 Months / 20000 KM*			
2 nd Paid inspection service - 36 Months / 30000 KM*			
3 rd Paid inspection service - 48 Months / 40000 KM*			
4 th Paid inspection service - 60 Months / 50000 KM*			
5 th Paid inspection service - 72 Months / 60000 KM*			
6 th Paid inspection service - 84 Months / 70000 KM*			
7 th Paid inspection service - 96 Months / 80000 KM*			
8 th Paid inspection service - 108 Months / 90000 KM*			
9 th Paid inspection service - 120 Months / 100000 KM*			
10 th Paid inspection service - 132 Months / 110000 KM*			
11 th Paid inspection service - 144 Months / 120000 KM*			
12 th Paid inspection service - 156 Months / 130000 KM*			

^{*} Interval: This interval should be judged by month(s) or odometer reading, whichever comes first.

Maruti Suzuki Network can be viewed by installing below Mobile Apps:



Maruti Suzuki Rewards app ensures a hassle free car ownership experience. Get easy access to all the services and information you need by downloading the app



1ST. FREE INSPECTION COUPON w 1ST. FREE INSPECTION COUPON w 1ST. FREE INSPECTION COUPON (1 MONTH or 1,000 KM / (Selling dealer copy) (1 MONTH or 1,000 KM (Servicing W/S copy) (1 MONTH or 1,000 KM (Customer's copy) whichever comes first) whichever comes first) whichever comes first) Model Name Model Name Model Name Model Code* Model Code* Model Code* VIN VIN VIN Engine No. Engine No. Engine No. Mileage Mileage Mileage Invoice Date Invoice Date Invoice Date Date of Inspection Date of Inspection Date of Inspection Registration No. Registration No. Registration No. Customer Name Customer Name **Customer Name** Ph. No. Ph. No. Ph. No. Service workshop / MASS Code (fill below) Service workshop / MASS Code (fill below) Service workshop / MASS Code (fill below) COST OF MATERIALS AND CONSUMABLES TO BE COST OF MATERIALS AND CONSUMABLES TO BE COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER **BORNE BY CUSTOMER BORNE BY CUSTOMER** Workshop In charge Workshop In charge Workshop In charge Signature Signature Signature For periodic maintenance schedule, refer to "Inspection and Maintenance" section of this manual

1ST. FREE INSPECTION COUPON

(Servicing W/S copy)

(1 MONTH or 1,000 KM whichever comes first)

Stamp of Selling deale
(Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

1ST. FREE INSPECTION COUPON

(Selling dealer copy)

(1 MONTH or 1,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

1ST. FREE INSPECTION COUPON

(Customer's copy)

(1 MONTH or 1,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

2ND. FREE INSPECTION COUPON \$\psi_2\$ND. FREE INSPECTION COUPON \$\psi_2\$ND. FREE INSPECTION COUPON (Selling dealer copy) (6 MONTHS or 5,000 KM (Servicing W/S copy (6 MONTHS or 5,000 KM (Customer's copy) (6 MONTHS or 5,000 KM whichever comes first) whichever comes first) whichever comes first) Model Name Model Name Model Name Model Code* Model Code* Model Code³ VIN VIN VIN Engine No. Engine No. Engine No. Mileage Mileage Mileage Invoice Date Invoice Date Invoice Date Date of Inspection Date of Inspection Date of Inspection Registration No. Registration No. Registration No. Customer Name Customer Name Customer Name Ph. No. Ph. No. Ph. No. Service workshop / MASS Code (fill below) Service workshop / MASS Code (fill below) Service workshop / MASS Code (fill below) COST OF MATERIALS AND CONSUMABLES TO BE **COST OF MATERIALS AND CONSUMABLES TO BE** COST OF MATERIALS AND CONSUMABLES TO BE **BORNE BY CUSTOMER BORNE BY CUSTOMER** BORNE BY CUSTOMER Workshop In charge Workshop In charge Workshop In charge Signature Signature Signature For periodic maintenance schedule, refer to "Inspection and Maintenance"

section of this manual

2ND. FREE INSPECTION COUPON

(Servicing W/S copy)

(6 MONTHS or 5,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)	

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

Y2ND. FREE INSPECTION COUPON

(Selling dealer copy)

(6 MONTHS or 5,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

Y2ND. FREE INSPECTION COUPON

(Customer's copy)

(6 MONTHS or 5,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

			'	vnic	heve	er co	omes	firs	t)	i —						whi	chev	er c	omes	s fir	st)	i						١	whic	hev	er co	ome	s fir	·st)
Model Name	Э									¦ L	odel I	Name										i	M	odel Na	ame									
Model Code	*									М	odel (Code*										i	М	odel Co	ode*									
VIN											IN											ļ	VI	N										I
Engine No.		<u> </u>								<u> </u>	ngine	No.	<u> </u>										Er	ngine N	lo.									t
Mileage										М	ileage)											Mi	ileage										T
Invoice Date)			D	D	M	Μ	Υ	Υ	In	voice	Date				D	D	M	M	Υ	Υ	ļ	In	voice D	ate				D	D	M	M	Υ	
Date of Insp	ection	1		D	D	M	M	Υ	Υ	D	ate of	Inspe	ection			D	D	M	M	Υ	Υ	-	Da	ate of I	nspe	ction			D	D	M	M	Υ	
Registration	No.									R	egistr	ation i	No.										Re	egistrat	ion N	۱o.								-
Customer N	ame									c	ustom	ier Na	me										Cı	ustome	r Na	me								T
Ph. No.										l Pi	n. No.												Ph	ı. No.										╁
Service	worl	sho	p/M	ASS	Co	de (f	ill be	elow	$\overline{}$	i H	Serv	rice v	work	shor	o / M	ASS	Co	de (f	ill be	low	r)	i		Servi	ce v	vork	shor) / M.	ASS	Cod	de (f	ill be	elov	v)
		<u> </u>				_				į 🗀				_ _				_			Ĺ	į					i I				_			Ť
OST OF MA DRNE BY (Workshop In Signature	cus ⁻	ГОМ		D C	ONS	UMA	ABLE	ES T	O BE	BOF	RNE	BY C	UST	OME		D C	ONS	UMA	ABLE	ST	о ві		BOF	T OF RNE B orkshotignatur	Y C	UST	OME		D C	ONS	UMA	BLE	ES 1	ſΟ

3RD. FREE INSPECTION COUPON

(Servicing W/S copy)

(12 MONTHS or 10,000 KM whichever comes first)

Stamp of Selling dealer (Code & Full Address)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

X3RD. FREE INSPECTION COUPON

(Selling dealer copy)

(12 MONTHS or 10,000 KM whichever comes first)

Stamp	of Selling	dealer
	& Full Ad	

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- 3. Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

★ 3RD. FREE INSPECTION COUPON

(Customer's copy) (12 MONTHS or 10,000 KM whichever comes first)

Stamp of Selling de	aler
(Code & Full Addre	ss)

For Servicing Workshop

- 1. Please Fill up Model codes correctly.
- 2. Please fill up Complete VIN.
- Please fill up customer name and Phone No. details legibly and correctly for the latest owner.
- Free service coupon of selling dealer not operational at present, should be sent to MSIL on monthly basis.



Service Division Maruti Suzuki India Limited

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorised dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised workshop.

(2) Term:

The term of the warranty shall be twenty-four (24) months or 40,000 kilometers (whichever occurs first) from the date of invoice to the first owner.

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, Consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.
- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
- (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
- (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
- (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.

(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer.)

- Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
- Any vehicle which has not received the service inspections prescribed in this Owner's Manual and Service Booklet.
- (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorised workshop.
- Any vehicle which has been used for purposes other than what it was designed for.
- (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
- Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
- (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
- (p) Installation and usage of domestic LPG gas/LPG Cylinder.
- (g) V-belts, hoses and gas leaks.
- (r) Any vehicle retrofitted with LPG/CNG kits.
- (s) Repainting including patchwork, bodywork and mouldings and interior trims.
- (t) Corrosion, rusting of body parts and/ or components.
- (u) Any vehicle on which odometer has been changed unauthorisedly or odometer reading has been modified/ tampered with/ or not matching the service records.
- (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
- (w) Any damage(s) caused to vehicle including battery/ tyre due to parking of the vehicle in idle condition for long duration of time periods.

- (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
- (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorised workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Obligations:

NOTICE

The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorised workshop all the service inspections specified in the Maruti Suzuki "Owner's Manual and Service Booklet" and maintain adequate proof that such service inspections have been performed.
- Update and maintain the 'Customer service maintenance records' page in the "Owner's Manual and Service Booklet", whenever service inspection or warranty service is carried out on the vehicle in a Maruti Suzuki authorised workshop.
- Present the Maruti Suzuki "Owner's Manual and Service Booklet" to the Maruti Suzuki authorised workshop whenever requesting service inspections or warranty service.

If the "Owner's Manual and Service Booklet" should be lost or destroyed the owner should consult the Maruti Suzuki authorised dealer from whom the vehicle was purchased for instructions concerning replacement of the "Owner's Manual and Service Booklet".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.

NOTE:

Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.

EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities (**New Delhi, Kolkata, Mumbai and Chennai**) with effect from July 1st, 2001.

Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of invoice to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

Conditions:

- Under Emission Warranty, Warranty claims will be admitted for a prima-facie examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
- The warranty claims will only be accepted after examination carried out by Maruti Suzuki or Maruti Suzuki authorised workshop which leads to firm conclusions that the
 - a) Original settings have not been tampered in any case.
 - b) Part (as given in Annexure A) has a manufacturing defect.
 - c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.

- 3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and Maruti Suzuki authorised workshop and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and Maruti Suzuki authorised workshop has the right to charge all, or part of the cost of such examination.
- Under Emission Warranty, the parts (as given in Annexure A) will be changed free of cost, but the consumables will be charged as per actual.
- 5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and Maruti Suzuki authorised workshop will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
- Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
- Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest Maruti Suzuki authorised workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki authorised workshop.
- 8. Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
- Emission Warranty will not be affected by the change of owner, provided all the documents are available.

- All maintenance actions (as specified in the Owner's Manual and Service Booklet) need to be followed and recorded in the manual for emission warranty.
- 11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The receipts (for the maintenance of the vehicle as per specification in Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

Conditions under which the Emission Warranty is not APPLICABLE

- 1. In the absence of valid PUC certificate.
- 2. Vehicle not serviced from Maruti Suzuki authorised workshop as per the schedule specified in the Owner's Manual.
- 3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
- 4. Use of non MSGP (Maruti Suzuki Genuine Part).
- 5. Vehicle that has been tampered with.
- Tampering with odometer so that the actual kilometer reading cannot be determined.
- 7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).


Annexure - A

List of parts (if applicable) covered under Emission Warranty

- Fuel Injection Assembly, Pressure Regulator, Throttle Body Assembly.
- 2. Electronic Control Module (ECM).
- 3. Intake Manifold.
- 4. EGR valve.
- 5. Ignition Coil.
- 6. Canister Assembly.
- 7. Vapour Liquid Seperator.
- 8. Fuel Tank and Filler Cap.
- 9. PCV (Positive Crankcase Ventilation) Valve.
- 10. Oil Filler Cap.
- 11. Catalytic Convertor.
- 12. Exhaust Manifold.
- 13. All Fuel Injection System related Sensors.
- 14. High Pressure Fuel Pump.
- 15. Glow Plug.
- 16. Glow Plug Controller.

TABLE OF CONTENTS

FOR SAFE DRIVING	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
INSPECTION AND MAINTENANCE	6
EMERGENCY SERVICE	7
APPEARANCE CARE	8
SPECIFICATIONS	9
SERVICE NETWORK	10

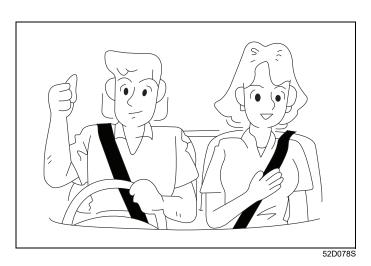


FOR SAFE DRIVING

Floor mats (if equipped)	1-1
Front seats	
Rear seats	1-2
Seat belts and child restraint systems	1-4
Supplemental restraint system (airbags)	1-18
Exhaust gas warning	

69RH0-74E

Floor mats (if equipped)

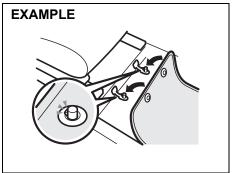

72M10201

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, MARUTI SUZUKI genuine floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend to use MARUTI SUZUKI genuine floor mats for proper fitting.

WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Make sure that the floor mat grommets are hooked to the fasteners.
- Never place additional floor mats on top of the existing floor mat.
- Never use a floor mat which does not fit the floor as the same may cause hindrance/damage in vehicle and its functioning
- · Never use damaged floor mats.

Front seats

Precaution for front passenger seat For seat with seat belt reminder, refer to the NOTICE in the "Front passenger's seat belt reminder" section.

Seat adjustment

WARNING

- Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Check that the driver's seat and seatback are properly adjusted before you start driving.
- To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.
- Do not place any object under the front seat. If an object gets caught under the front seat, the seat shall not be latched.

(Continued)

WARNING

(Continued)

 Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.

EXAMPLE (1)

Seat position adjustment lever (1)Pull the lever up and slide the seat.

Seatback angle adjustment lever (2)Pull the lever up and move the seatback.

After adjustment, move the seat and seatback forward and backward to check that it is securely latched.

NOTE:

To operate the seat back smoothly, pull the seat back adjustment lever (2) in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.

NOTICE


To operate the seat back smoothly, pull the seat back adjustment lever (2) in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and rearward.

Rear seats


Folding rear seats

The rear seat(s) of your vehicle can be folded forward to provide additional cargo space.

To fold the rear seat(s) forward:

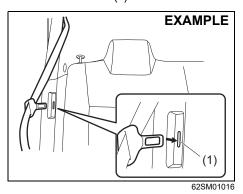

1) Insert the latch plate of the outboard lap-shoulder belts into the slit (1).

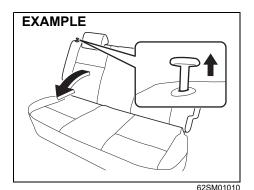

Pull the release knob(s) on the top of the seat(s) and fold the seatback forward.


NOTICE

After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

WARNING

If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.

To return the seat to the normal position, follow the procedure below.

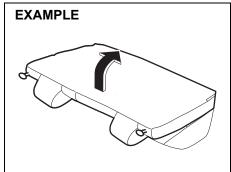

62SM01019

Raise the seatback until it locks into place.

After returning the seat, move the seatback forward and backward to check that it is securely latched.

A CAUTION

When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.

NOTICE

- When returning the rear seatback to the normal position, check that there is nothing around the striker.
 Any foreign materials prevent the seatback from being locked securely.
- When you move the seatback, make sure the belt webbing is inserted in the seat belt slits so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps to prevent damage to the belt system.
- Make sure the belt webbing is not twisted.
- When fold the seat back, make sure all the belt latch plate is out from the belt buckles. It may damage the seat back and seatbelt.


A CAUTION

Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.

NOTICE

- When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.
- When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.
- As the lock is designed exclusively for securing the rear seatback, do not use the lock for any other purpose. Incorrect use of it may cause damage to the lock and prevent the seatback from being locked securely.

Seat belts and child restraint systems

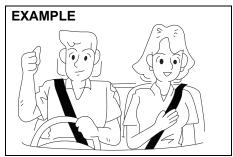

52D078S

WARNING


- Wear your seat belts at all times.
- An air bag supplements, or adds to, the frontal crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times even if driving for a very short distance, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.


(Continued)


▲ WARNING

(Continued)

- Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision.
- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs.

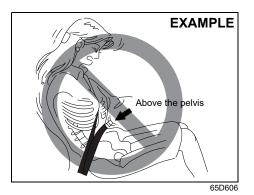

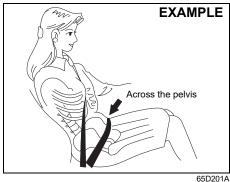

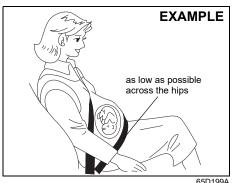

WARNING

- · Seat belts should always be adjusted as follows:
- the lap portion of the belt should be worn low across the pelvis, not across the waist.
- the shoulder straps should be worn on the outside shoulder only, and never under the arm.
- the shoulder straps should be away from your face and neck, but not falling off your shoulder. (Continued)

WARNING

(Continued)

- · Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats. It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

▲ WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.
- · Do not wear seat belts over hard, fragile, or sharp items such as pens, keys, eyeglasses, etc. in pockets or on clothing. The pressure from seat belt on such items can cause injury in case of an accident.

(Continued)

▲ WARNING

(Continued)

- Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if the damage to the assembly is not obvious.
- Children aged 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Check that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.

(Continued)

▲ WARNING

(Continued)


- For child, if the seat belt irritates the neck or face, use a child restraint system appropriately for the child. The seat belts of your vehicle are principally designed for persons of adult size.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins and clips into the seat belt buckles and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position while driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

Lap-shoulder belt

Emergency locking retractor (ELR) (if equipped)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder

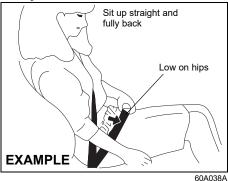


Non-Emergency locking retractor (Non-ELR) (if equipped)

Use the strap adjuster to adjust the length of the seat belt, so that it is secured tightly after wearing. Hold the latch plate and press it straight into buckle until you hear a "click".

NOTICE


In case Non ELR belt, ensure that the belt strap does not get caught between door and seal area while closing the door.

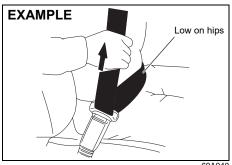

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

All seat belts except rear center


All seat belts except rear center are the lap-shoulder belt.

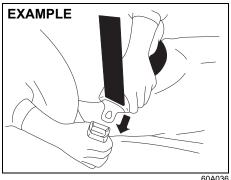

To fasten the seat belt, sit up straight and far back into the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a "click".

NOTE:


If the seat belt cannot be pulled from its fully retracted position, firmly pull the belt and release it. Then smoothly pull the belt out of the retractor.

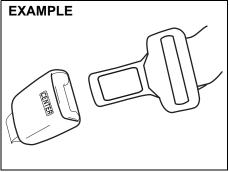

62SM01017

NOTE:

For five-seater vehicle, the word "CEN-TER" is marked on the buckle for the rear center belt (if equipped). The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

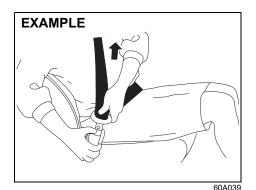

To unfasten the seat belt, push the red "PRESS" button on the buckle and retract the belt slowly while holding the belt or/and the latch plate.


NOTICE

If the seat belt cannot be pulled from its fully retracted position, firmly pull the belt and release it. Then smoothly pull the belt out of the retractor.


Lap belt (if equipped)

Rear center seat belt (if equipped)

Sit up straight and well back in the seat. To fasten the belt, pull the latch plate attached to the seat belt across your hips and press it straight into the buckle until you hear a "click". To reduce the risk of sliding under the belt during a collision, position the belt across your lap as low on your hips as possible and adjust it to a snug fit.

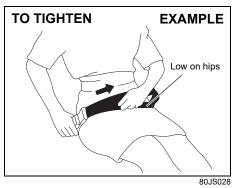


To tighten the belt, pull the free end of the belt across alongside the lap strap.

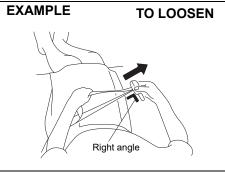

80JS029

To lengthen, release the latch plate from the buckle, pull the latch plate (adjuster) in the direction of the arrow, at right angles to the belt. The latch plate should then be refitted into the buckle and the belt tightened as previously described.

To unfasten the belt, press the release button on the buckle catch.

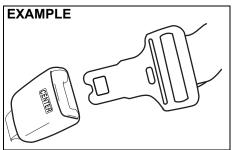


62SM01011

NOTE:

The word "CENTER" is marked on the buckle for the rear center belt (if equipped). The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

Seat belt reminder

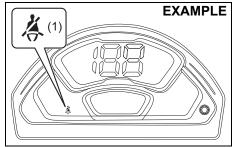

62SM01012

(1) Driver's seat belt reminder light / front passenger's seat belt reminder light / rear passenger's seat belt reminder light*

When the driver and/or passenger (front passenger and/or rear passenger*) do(does) not fasten their seat belts, the seat belt reminder lights will come on or blink and a buzzer will sound to remind the driver and/or passenger (front passenger and/or rear passenger*) to fasten their seat belts. For more details, refer to the explanation below.

WARNING

It is absolutely essential that the driver, front passenger and rear passenger* fasten their seat belts at all times. Persons who are not fastening seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

NOTE:

The driver's seat belt reminder light / front passenger's seat belt reminder light / rear passenger's seat belt reminder light* is for all the driver, front passenger and rear passenger.

*: If equipped

Driver's seat belt reminder

If the driver's seat belt remains unbuckled when the ignition switch is turned to "ON" position, the reminder works as follows:


- The driver's seat belt reminder light will come on.
- After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) The reminder light will remain on until the driver's seat belt is buckled.

If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned off.

Front passenger's seat belt reminder

If there is a person sitting on the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned to "ON" position, the front passenger's seat belt reminder will activate.

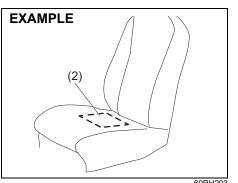

(2) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (2) detects whether a person is sitting on the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

NOTICE

- The sensor of the front passenger's seat belt reminder is located in the seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.
- Depending on the variety of seat cover, operation of the sensor may be adversely affected. MARUTI SUZUKI highly recommends that you use MARUTI SUZUKI genuine seat cover exclusively for this vehicle. If a seat cover is installed, consult with a Maruti Suzuki authorised workshop.
- If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.

(Continued)

NOTICE

(Continued)

When sitting on the front passenger's seat, it is very important that
the passenger sits upright, leaning
against the seat backrest and centered on the seat cushion in order
for the seatbelt reminder system to
function effectively. An occupant
sitting improperly (slouches, turns
sideways, sits forward or sideways) may hamper the functioning
of this system as it may not detect
the occupant.

NOTE:

- If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.
- If a child or a small sized person sits on the front passenger's seat or the cushion is put on the front passenger's seat, the weight may not be sensed by the sensor and the interior buzzer may not beep.


Rear passenger's seat belt reminder (if equipped)

If the engine switch is pressed to change the ignition mode to "ON", the seat belt reminder light comes on unless all rear passenger's seat belts are fastened for irrespective of the presence or absence of passenger. The rear passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

NOTICE

- Do not remove, disassemble and modify the rear seat cushion, it may damage seat belt webbing or harness.
- Do not place heavy or sharp object near to rear cushion. It may damage seatbelt webbing or belt harness.


Seat belt slit

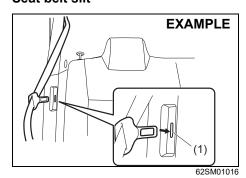

NOTICE

- When you move a seatback, make sure the latch plate is inserted into the slit (1) securely so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.

Seat belt inspection

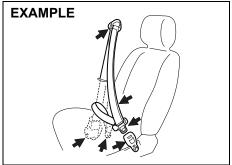


65D209

Periodically inspect the seat belts if they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages and guide loops. Replace any seat belts which do not work properly or are damaged.

WARNING


Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly which was not in use during a collision must be replaced if the airbags and the seat belt pretensioners (if equipped) activated. The airbags, the pretensioners and the load limiter will only function once. In case they did not activate, consult with a Maruti Suzuki authorised workshop.

Child restraint systems

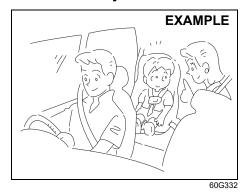


Following types of child restraint systems are generally available:


Infant restraint - rear seat only

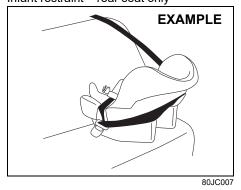

Child restraint

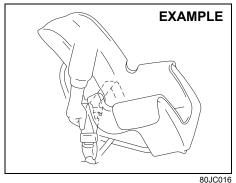

Booster seat

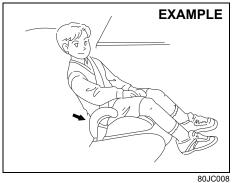

1-12

MARUTI SUZUKI highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.


All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap belts or the lap portion of lapshoulder belts) or by special rigid lower anchor bars built into the seat.

NOTE:

Observe any statutory regulation about child restraints.

NOTE:

Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory child seat.

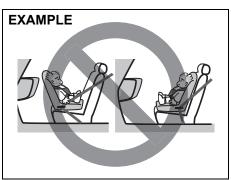




EXAMPLE

65D608

M WARNING

- Do not install a child restraint system on the front passenger's seat since a child restraint system cannot be installed appropriately.
- not be installed appropriately.

 If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not touch the front seatback. This will help avoid injury to the child in the event of an accident.

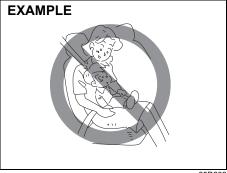

65D609

WARNING


Children could be endangered in a collision if their child restraint systems are not properly secured in the vehicle. When installing a child restraint system, follow the instructions below. Be sure to secure the child in the restraint system according to the manufacturer's instructions.

▲ WARNING

Do not hold a child on a passenger's lap when the vehicle is in motion. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.

Installation with lap-shoulder seat belts

ELR type belt (if equipped)

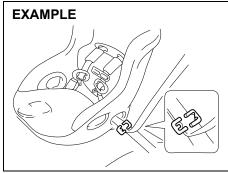

80.10021

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Check that the seat belt is securely latched. Move the child restraint system in all directions to check that it is securely installed. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

Child restraint system

Child restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP		Seating position (or other site)					
		Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center	
Group 0	Up to 10 kg	Х	U	X	N.A	N.A	
Group 0+	Up to 13 kg	Х	U	Х	N.A	N.A	
Group I	9 to 18 kg	Х	U	Х	N.A	N.A	
Group II	15 to 25 kg	Х	U	Х	N.A	N.A	
Group III	22 to 36 kg	Х	U	Х	N.A	N.A	


Key of letters to be inserted in the above table: U =Suitable for 'universal' category restraints approved for use in this mass group X =Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE: 'universal' is the category in the AIS 072.

: 'Outboard' indicates window side seat.

Seat belt pretensioner system (if equipped)

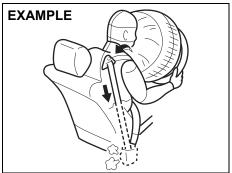

69RH196

WARNING

This section describes your MARUTI SUZUKI vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

You can use the pretensioner seat belts in the same manner as ordinary seat belts. Read this section and "Supplemental restraint system (airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (airbags). The collision sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental restraint system (airbags)" section in addition to this "Seat belt pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat adjustment" section and the instructions and precautions about the seat belts in this "Seat belts and child restraint systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by a Maruti Suzuki authorised workshop as soon as possible.

The pretensioner system or the airbag system may not work properly if any of the following conditions occurs.

- If the air bag light on the instrument cluster does not come on briefly, when the ignition switch is turned to the "ON" position.
- If the air bag light comes on and stays on for more than 10 seconds, when the ignition switch is turned to the "ON" position.
- If the air bag light comes on while driving.

Have both systems inspected by a Maruti Suzuki authorised workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by a Maruti Suzuki authorised workshop who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the battery is disconnected and the ignition switch has been in "LOCK" position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the

couplers are yellow. When scrapping your MARUTI SUZUKI vehicle, ask a Maruti Suzuki authorised workshop, body repair shop, or scrap yard for assistance.

Supplemental restraint system (airbags)


WARNING

This section describes the protection provided by your MARUTI SUZUKI vehicle's supplemental restraint system (airbags). Read and follow all instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a supplemental restraint system consisting of the following components in addition to a lapshoulder belt at each seating position.

- (1) Driver's front airbag module
- (2) Front passenger's front airbag module
 (3) Front seat belt pretensioners
 (4) Airbag controller

- (5) Forward collision sensor

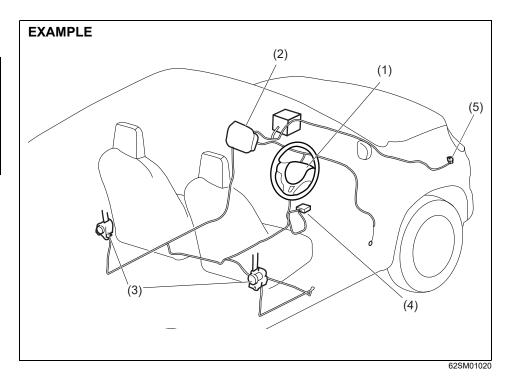

WARNING

SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time.

If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision.

Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.

 If the seat belts are not fastened properly, airbags may not provide the best performance. This may cause severe injury in a sudden braking and a collision.

Make sure that the driver and all the passengers fasten the seat belts properly in a correct posture.

(Continued)

▲ WARNING

(Continued)

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not modify the suspension. If the vehicle height or the stiffness of the suspension were to change, airbag malfunction may result.
 - When installing a grille guard, etc., on the front of the vehicle, consult a authorised Maruti Suzuki Workshop. If you modify the front part of the vehicle, the airbag system may not work properly.
 - When installing radio equipment, etc., consult a authorised Maruti Suzuki Workshop. Radio waves, etc., from a radio may adversely affect the computer module used in the airbag system.

(Continued)

▲ WARNING

(Continued)

 If the airbag-related parts are replaced or repaired, which has an impact on the airbag functions, the airbag may activate unnecessarily or may not activate when necessary.

The following situations may give a negative impact to the airbag system. In these cases, consult a authorised Maruti Suzuki Workshop beforehand.

- Removing the steering wheel, repairing the areas around the steering wheel, etc.
- Center console repair, repairs around the instrument cluster, repairs under the front seat, and repairs of electrical wiring
- Installation of audio equipment, etc.
- Sheet metal painting and repairs around the dashboard

(Continued)

WARNING

(Continued)

• If you place any objects on the instrument panel, these objects may move and interfere with driver's view or safe driving. Also, the front passenger's front airbag may not work properly or these objects may be thrown out when the airbag inflates in an accident. Do not place any objects on the instrument panel.

AIRBAG warning light



63J030

If AIRBAG warning light on the instrument cluster does not blink or come on when the ignition switch is first turned to "ON" position, or comes on while driving, the airbag system (or the seat belt pretensioner system (if equipped)) may not work properly. Have the airbag system inspected by a Maruti Suzuki authorised workshop as soon as possible.

Airbag symbol meaning



72M00150

You may find this label on the sun visor.

WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Make Sure to Fasten Seat Belt




65J106

WARNING

SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time. If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision.

Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.

Front airbags

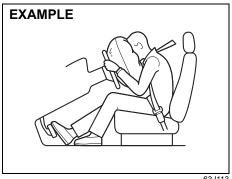

63J113

Front airbags are designed to inflate in severe frontal collisions when the ignition switch is in "ON" position.

Front airbags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.


Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Driver's front airbag



62SM01013

Front passenger's front airbag

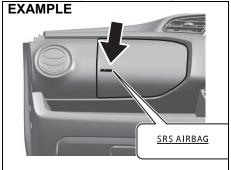

62SM01014


The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the dashboard.

The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

WARNING

- · If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a authorised Maruti Suzuki Workshop.
- · If you smash the airbag stored place or apply a strong impact to it, the airbag may not work properly or may inflate unexpectedly, resulting in serious injury.

Do not smash the airbag stored place or apply a strong impact to it.

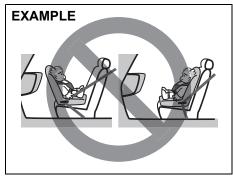


61M0241

WARNING


Do not install a child restraint system on the front passenger's seat since a child restraint system cannot be installed appropriately.

Refer to "Seat belts and child restraint systems" section for details on securing your child.

Conditions of front airbags deployment (inflation)

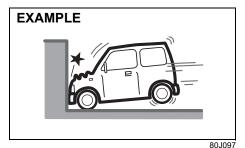

 Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

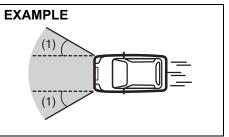


80J098E

 Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle


Conditions when front airbags may inflate

Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.

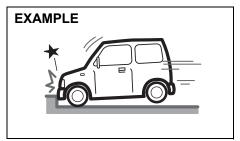


80J099

· Hitting a curb or medial strip

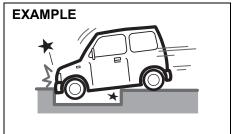

80J100E

Falling into a deep hole or ditch

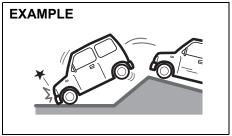

80J101

 
· Landing hard or falling

Front airbags may not inflate


The front airbags may not inflate when a strong impact has not occurred since the collision object (including living being like animals) was easy to be deformed or moved, or the collided portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle.


Also, in certain collisions at low speed, the air bags may not inflate.




 Frontal collision to a stopped vehicle at less than about 50 km/h

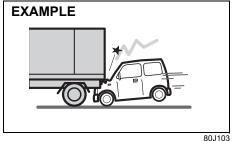


· Collision that the front of your vehicle goes under the bed of a truck etc.

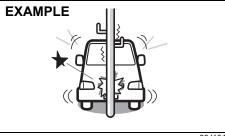

· Collision with a utility pole or stumpage

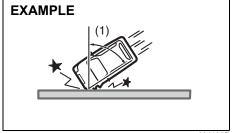

· Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

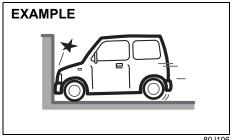


· Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h

Front airbags do not inflate


Front airbags do not inflate in rear impacts, side impacts or rollovers, etc.

However, these might inflate in a strong impact.

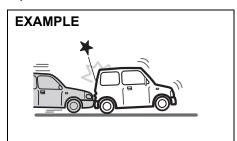


80J120

· Impact from the rear

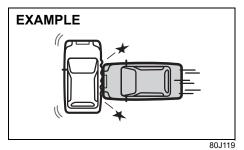

· Impact from the side

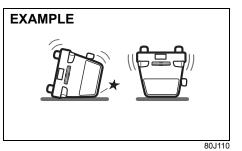

Vehicle rollover

How the system works

In a frontal collision, the collision sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

A CAUTION

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation. This may cause burn injury.

1-24


A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to "Seat adjustment" section and "Seat belts and child restraint systems" section in this section for details on proper seat and seat belt adjustments.



62SM01018

WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard, or otherwise get too close to the dashboard. In these situations, the outof-position occupant would be too close to an inflating airbag, and may suffer severe injury.
- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each conditions may cause severe injury.
- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the airbags to malfunction.
- Do not attach accessories (except for MARUTI SUZUKI genuine products), etc., to the windshield or the inside rearview mirror.

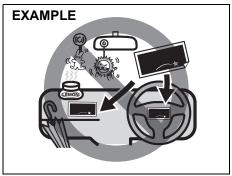

69RHS169

▲ WARNING

- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it.
- Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.

▲ WARNING

Even though your vehicle is moderately damaged by a collision, it may not be severe enough to trigger front airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by a authorised Maruti Suzuki Workshop to ensure that it works properly. If the original function of air bag system is damaged, air bag may not function effectively and fully in case of an emergency.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, and which sensors activated the deployment.

Servicing the airbag system

If the airbags inflate, have the airbags and related components replaced by a Maruti Suzuki authorised workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If this happens, ask a Maruti Suzuki authorised workshop to check the airbag system as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only a Maruti Suzuki authorised workshop should be allowed to service or replace your airbags. Remind anyone who services your MARUTI SUZUKI vehicle that it has airbags.

Service on or around airbag components or wiring must be performed only by a Maruti Suzuki authorised workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.


To prevent damage or unintended inflation of the airbag system, check that the battery is disconnected and the ignition switch has been in "LOCK" position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated airbag can be hazardous. Ask a Maruti Suzuki authorised workshop, body repair shop or scrap yard for help with disposal.

A CAUTION

If you do not handle the airbags properly, they may inflate unexpectedly, resulting in personal injury. When scrapping the airbags or the vehicle that has the airbags, consult a authorised Maruti Suzuki Workshop.

Exhaust gas warning

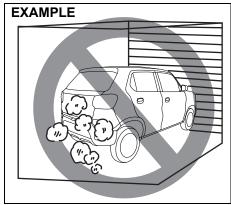

62SM01001

WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, take the following precautions to help prevent carbon monoxide from entering your vehicle.


- Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems and lead to death.
- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to "FRESH AIR" and the blower is at high speed.

(Continued)

▲ WARNING

(Continued)

- Avoid operating the vehicle with the tailgate open. If it is necessary to do so, check that the all windows are closed, and the blower is at high speed with the air intake selector set to FRESH AIR.
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grill in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leakage. Any damage or leakage should be repaired immediately.

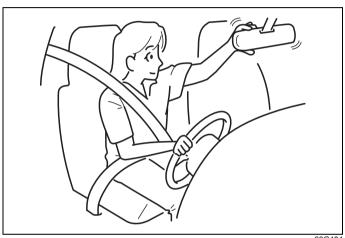


BEFORE DRIVING

Keys	2-1
Door locks	2-2
Keyless entry system transmitter (if equipped)	2-4
Theft deterrent light (if equipped)	2-6
Windows	
Mirrors	2-8
Instrument cluster	2-10
Speedometer	2-10
Fuel gauge	
Brightness control	2-1 1
Information display	2-12
Warning and indicator lights	2-18
Lighting control lever	
Headlight leveling knob	2-26
Turn signal control lever	2-26
Hazard warning switch	2-27
Windshield wiper and washer lever	2-28
Horn	
Vehicle loading	2-30
Trailor towing	2_34

60G404

Keys

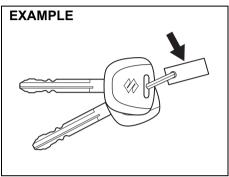

54G489

Your vehicle comes with a pair of keys. The key(s) may or may not be equipped with a transmitter depending on model variant. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer system

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key, which has an electronic identification code programmed into it. The key communicates the identification code to the vehicle when the ignition switch is turned to "ON" position. If you need to make spare keys, see a Maruti Suzuki authorised workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.



65D239

If the immobilizer system warning light blinks when the ignition switch is in "ON" position, the engine will not start.

If this light blinks, turn the ignition switch to "LOCK" position, and then turn it back to "ON" position.

If the light still blinks after the ignition switch is turned back to "ON" position, there may be something wrong with your key or with the immobilizer system. Ask a

Maruti Suzuki authorised workshop to have the system inspected.

NOTE:

- If you lose your immobilizer ignition key, ask a Maruti Suzuki authorised workshop as soon as possible to deactivate the lost one, and to make a new key.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch when using your MARUTI SUZUKI vehicle. Otherwise, the engine may not be started because they may interfere with your MARUTI SUZUKI vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key, it may not start the engine.
- This immobilizer system is maintenancefree.

NOTICE


The immobilizer key is sensitive electronic instrument. To avoid damaging it:

- Do not expose it to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep it away from magnetic objects.

Ignition key reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

Door locks Side door locks

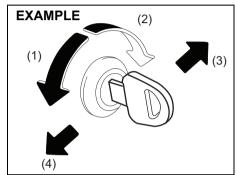


62SM02022

- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock front doors from the outside of the vehicle:

- Insert a key and turn the top of the key toward the front of the vehicle, or
- · Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock front doors from the outside of the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

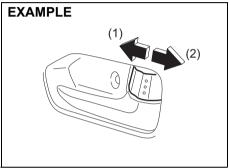

69RH002

(1) LOCK (2) UNLOCK


To lock a door from the inside of the vehicle, turn the lock knob forward. Turn the lock knob backward to unlock the door.

To lock a rear door from the outside of the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Hold the door handle when you close a locked front door, or the door will not remain locked.

Central door locking system

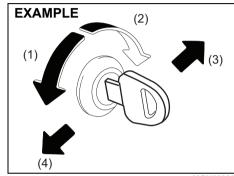

62SM02022

- (1) UNLOCK
- (2) LOCK (3) Front
- (4) Rear

You can lock and unlock all doors (except the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.


NOTE:

If your vehicle is equipped with the keyless entry system, you can also lock or unlock all doors by operating the transmitter. Refer to "Keyless entry system transmitter" in this section.

NOTE:

- All doors are automatically unlocked when you turn the ignition switch to the "LOCK" position and pull out the key.
- If your vehicle is equipped with keyless entry system transmitter, all doors are automatically locked for safety when the vehicle speed reaches 15 km/h.
- You can change the automatic locking or unlocking function mentioned above via the setting mode of the information display. For details on how to use the information display, refer to "Information display" in this section.

Child-proof locks (rear door)

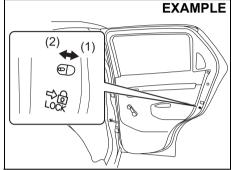

62SM02009

(1) LOCK (2) UNLOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in LOCK position (1), the rear door can only be opened from outside. When the lock lever is in UNLOCK position (2), the rear door can be opened from inside or outside.


WARNING

Place the child-proof lock in LOCK position whenever children are seated in the rear.

Tailgate

WARNING

Always check that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

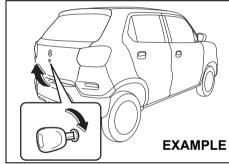


62SM02001

To open the tailgate, insert the key and turn it clockwise to unlatch and lift the tailgate.

NOTICE

Do not use the key to lift up the tailgate, or the key may break off in the lock.

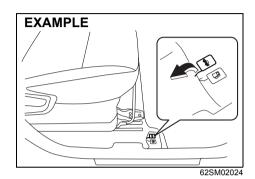


You can also unlatch the tailgate by pulling the release lever located on the outboard side of the driver's seat.

▲ CAUTION

Do not step over the release lever to avoid any damage.

If you cannot unlock the tailgate by using the key or by pulling the release lever due to malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

 Fold the rear seat forward for easier access. Refer to "Folding rear seats" section for details on how to fold the rear seat forward.

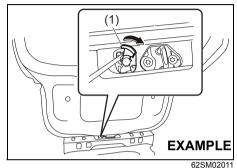


- To unlock the tailgate lock, push the lever (1) to the direction of the arrow with flat blade screw driver as shown in the illustration.
- Push open the tailgate from inside. The tailgate will be latched again by simply closing the tailgate.

If the tailgate cannot be unlocked, have the vehicle inspected by a Maruti Suzuki authorised workshop.

A CAUTION

Make sure there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

Keyless entry system transmitter (if equipped)

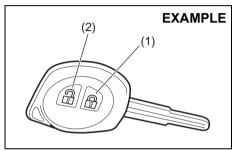

76MS011

- (1) LOCK button
- (2) UNLOCK button

You can lock or unlock all doors (except the tailgate) simultaneously by operating the transmitter near the vehicle.

- To lock all doors, push LOCK button (1) once.
- To unlock all door, push UNLOCK button (2) once.

The turn signal lights will flash once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If

you close the driver and insert the key into the ignition switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

NOTE:

If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.

NOTE:

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door lock's cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can only be unlocked with the transmitter, and the turn signal light will flash.
- If you lose the transmitter, ask a Maruti Suzuki authorised workshop as soon as possible for a replacement. Have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Car locator function

This function is to get the attention of others. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds.

The turn signal lights will blink for about 27.5 seconds.

To cancel the car locator function, press any button (LOCK or UNLOCK). You can also cancel the car locator function by turning the ignition switch to "ON" position.


NOTE:

The car locator function will not activate when the key is in the ignition switch.

Battery replacement


If the transmitter becomes unreliable, replace the battery.

To replace the battery of the transmitter:

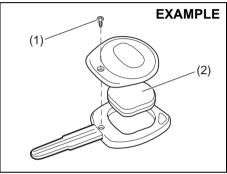

68LM248

- Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).

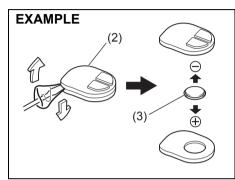

73R0197

- (3) Lithium disc type battery: CR1616 or equivalent
- Put the edge of a flat-bladed screwdriver covered with a soft cloth in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) so its + terminal faces "+" mark of the transmitter.
- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- 7) Check that the door locks can be operated with the transmitter.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.


WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the transmitter could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

Theft deterrent light (if equipped)

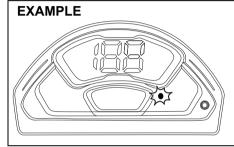


62SM0201

This light will blink with the ignition switch in "LOCK" or "ACC" position. The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

Windows

Manual window control (if equipped)

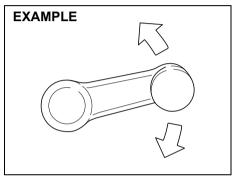


60G010A

Raise or lower the door windows by turning the handle located on the door panel.

Power window controls (if equipped)


The power windows can only be operated when the ignition switch is in "ON" position.

Driver's side

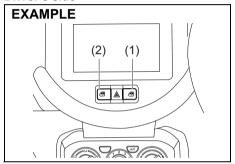

62SM02014

The center console has a switch (1) to operate the driver's window and a switch (2) to operate the front passenger's window.

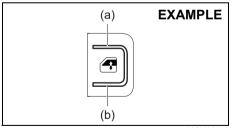

62SM02017

To open a window, push the bottom part (b) of the switch. To close the window, push the top part (a) of the switch.

WARNING

- To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the power windows when closing them.
- Always remove the ignition key with you when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the power window switches and get trapped by the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Mirrors

 
▲ WARNING

Failure to observe following point may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.

- Do not adjust the mirrors while driving.
- Always unfold all the outside rearview mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

Inside rearview mirror

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror.



74LHT0235

A CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.


Outside rearview mirrors

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

WARNING


Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

Type A

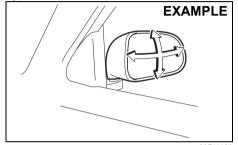

69RH166


Type B

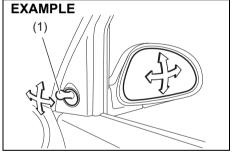

62SM02002

You can adjust the outside rearview mirrors by hand or with the knob (1) located on the driver's or front passenger's door panel.

Type C
Electric Mirrors (if equipped)

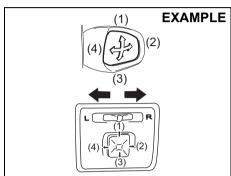

69RM0200

The switch to control the electric mirrors is located on the instrument panel. You can adjust the mirrors when the ignition switch is in the "ACC" or "ON" position, or the ignition mode is "ACC" or "ON". To adjust the mirrors:

- Move the selector switch (L R knob) to the left or right to select the mirror you wish to adjust.
- Press the control knob of the switch in the direction that corresponds to the direction in which you wish to move the mirror.
- Return the selector switch to the center position to help prevent unintended adjustment.

WARNING

If you adjust the outside rearview mirrors while driving, you could lose control of the vehicle, resulting in an accident.


Adjust the outside rearview mirrors before driving.

NOTICE

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation, as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.

Instrument cluster

- 1. Speedometer
- 2. Information display
- 3. Warning and indicator lights

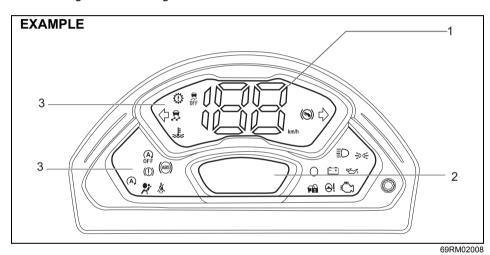

Speedometer


The speedometer indicates vehicle speed.

Speed alert system

The speed alert system gives audible warning for alert of over-speed to driver. When vehicle speed exceeds about 80 km/h, primary level warning with two beeps will sound every minute. When the vehicle speed exceeds about 120 km/h, secondary level warning with continuous beeps will sound.

If the vehicle speed is slowed down to about 118 km/h, primary warning will resume. If the vehicle is slowed down to about 78 km/h, speed alert warning will stop. This buzzer does not indicate any malfunction in vehicle.

Fuel gauge

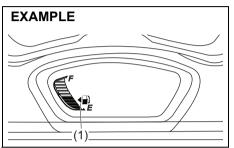

62SM020015

When the ignition switch is in "ON" position, this gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

 If the indicator shows only one segment to "E", refill the tank as soon as possible.
 If the last segment blinks, it means that the fuel is almost empty.

NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

NOTE:

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

The mark (1) indicates that the fuel filler door is located on the left side of the vehicle.


Brightness control

Your vehicle has a system to automatically dim the brightness of the instrument cluster lights when the position lights or headlights are on.

When the position lights and/or headlights are on, you can control the meter illumination intensity.


WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

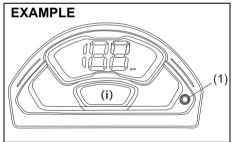

62SM02005

(1) Indicator selector knob

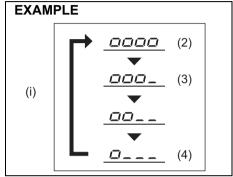

69RH126

- (2) Brightest
- (3) Initial setting
- (4) Dimmest


To switch the display indication to the brightness control (i), select the indication as shown in the illustration by pushing the indicator selector knob (1) when the position lights and/or headlights are on.

To change the brightness of the instrument cluster lights, continue to hold in the indicator selector knob (1). The indication will change as shown in the illustration. The illumination gets dimmer then returns to the brightest condition after it reaches the dimmest.

NOTE:

 If you do not push the indicator selector knob (1) within several seconds of activating the brightness control, the brightness control display will be canceled automatically.

Information display

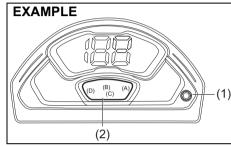

62SM02004

- (1) Indicator selector knob
- (2) Information display

When the ignition switch is in "ON" position, the information display shows the following information.

Display (A)

Gearshift indicator (if equipped)/ Gear position indicator (for Auto Gear Shift models)

Display (B)

Odometer / Trip meter / Fuel consumption (if equipped) / Driving range (if equipped)

Display (C)

 
Clock (if equipped)

Display (D)

Fuel gauge

Gearshift indicator (if equipped)


The display (A) shows the gearshift indicator.



Refer to "Gearshift indicator" in the "OPERATING YOUR VEHICLE" section.

Gear position indicator (for Auto Gear Shift models)

The display (A) shows some of the following indications.

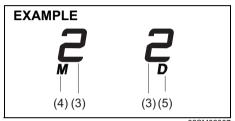

62SM02007

- (3) Gear position
- (4) Manual mode indicator
- (5) Drive mode indicator

NOTE:

For Auto Gear Shift models, when the gearshift lever position and the gear position indication in the information display are unmatched, the indication will blink and the interior buzzer will sound. Refer to "Auto Gear Shift" in the "OPERATING YOUR VEHICLE" section for details.

Manual mode indicator

When you are using the manual mode, the display shows the manual mode indicator (4).

NOTE:

The manual mode indicator will only appear when the gearshift lever is in "M" position.

Drive mode indicator


When the gearshift lever is in "D" position, the display shows the drive mode indicator (5).

For details on how to use the transmission, refer to "Using transmission" in the "OPER-ATING YOUR VEHICLE" section.

Odometer / Trip meter / Fuel consumption (if equipped) / Driving range (if equipped)

The display (B) shows one of the following indications: odometer, trip meter A, trip meter B, instantaneous fuel consumption (if equipped), average fuel consumption (if equipped) or driving range (if equipped).

To switch the display indication (B), push the indicator selector knob (1) quickly.

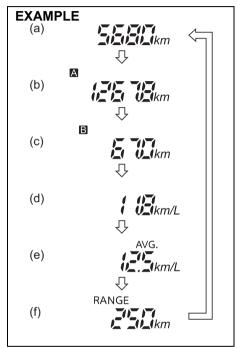

62SM02016

Push the indicator selector knob (1).

- (a) Odometer
- (b) Trip meter A
- (c) Trip meter B
- (d) Instantaneous fuel consumption (if equipped)
- (e) Average fuel consumption (if equipped)
- (f) Driving range (if equipped)

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

NOTE:

- Indications will change when you push and release a knob.
- The display shows estimated values. Indications may not be same as the actual values.

Odometer

The odometer records the total distance the vehicle has been driven.

NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use the trip meter A or trip meter B independently.

To reset the trip meter to zero, push and hold the indicator selector knob (1) for a while when the display shows the trip meter.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Instantaneous fuel consumption (if equipped)

The display shows the value of instantaneous fuel consumption only when the vehicle is moving.

NOTE:

- The display does not show the value unless the vehicle is moving.
- The indicated maximum value of instantaneous fuel consumption is 50 km/l. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

Average fuel consumption (if equipped) If you previously selected average fuel consumption setting, the display shows average fuel consumption from the last reset to the present when the ignition

switch is turned to "ON" position.

To reset the average fuel consumption to zero, push and hold the indicator selector knob (1) for a while when the display shows the average fuel consumption.

NOTE:

When you reset the indication or reconnect the negative (–) terminal to the battery, the value of average fuel consumption will be shown after driving for a while.

Driving range (if equipped)

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and the current fuel level in the fuel tank.

When the last segment of the fuel gauge indicator is ON, the display "---" will appear.

When the fuel indicator shows only one segment, fill the fuel tank immediately regardless of the value of driving range shown in the display.

As the driving range after refueling is calculated based on the most recent driving condition, the value is different each time you refuel.

NOTE:

- If you refuel when the ignition switch is in "ON" position, the driving range may not indicate the correct value.
- When you reconnect the negative (-) terminal to the battery, the value of driving range will be shown after driving for a while.

 If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly.

Clock (if equipped)

The display (C) shows the time.

To set the clock, follow "Setting mode" instructions in this section.

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

NOTE:

When you disconnect either of the terminals to the battery and keep it for a minute, the clock indication will be initialized.

Change the indication again to your preference after the reconnection.

Fuel gauge

The display (D) shows the fuel gauge.

Refer to "Fuel gauge" in this section.

Setting mode In the setting mode, you can set up the following functions.

Indication			Functions
→ door		d2_ 1	Automatic door locking function "do"
L L		d3 -	Automatic door unlocking function "d\(\frac{1}{2} \) "
L/ LhE		L2	Additional flashes of the turn signal "¿¿?"
ELOEH		EL-Rau	Clock setting "፫ኒ -ਸ਼ਰੂਹ"
dEFALIL		dE- on	Initialization setting "dE- an"
L End			Exit the setting mode "End"

•	Push the indicator selector knob (1).	
	Push and hold the indicator selector knob (1).	

NOTE: Depending on vehicle's specifications, some items may not be displayed.

How to operate the setting mode:

- When the ignition switch is in "ON" position and the vehicle is stationary, push the indicator selector knob (1) to switch the information display indication (B) to the odometer.
- Push and hold the indicator selector knob (1) until the setting mode appears on the information display.
- Push and/or hold the indicator selector knob (1) to select a function that you want to set up according to the above chart.
- Push and/or hold the indicator selector knob (1) to register settings of the following functions.

EXAMPLE

62SM02020

NOTE:

- As shown in the above illustration, "
 is indicated on the display of currently selected item.
- To go back to the higher level display during operation, push the indicator selector knob (1) to display "Ե뮤Ըમ" or "-Ե뮤Ը "and then push and hold the indicator selector knob (1).

Automatic door locking function "⊿∂"

- d2-5L /: Disable the automatic door locking function
- d2-5L2: Lock all doors when the vehicle speed reaches 15 km/h (default setting)

Automatic door unlocking function "⊿∃"

- d3-5L /: Disable the automatic door unlocking function
- ∠3-5L2: Unlock all doors when the key is pulled out from the ignition switch (default setting)

Additional flashes of the turn signal "¿¿"

- L2-5L /: Turn signal flashes three times after the turn signal lever is returned (default setting)
- L2-5L2: Disable the additional flashes of turn signal

Clock setting "[- 무리나" (if equipped)

- To change the hour indication, push the indicator selector knob (1) repeatedly when the hour indication blinks.
- To change the hour indication quickly, push and hold the indicator selector knob (1).
- To set the hour indication, wait for a while without pushing the indicator selector knob (1) and the minute indication will blink.
- To change the minute indication, push the indicator selector knob (1) repeatedly when the minute indication blinks.
 To change the minute indication quickly, push and hold the indicator selector knob (1).

To set the minute indication, wait for a while without pushing the indicator selector knob (1).

Initialization setting "dE-____"

- dE dn: Initialize all settings
- 5) To exit the setting mode, switch the display to show "End" and then push and hold the indicator selector knob (1).

Warning and indicator lights Brake system warning light



82K1

Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned to "ON" position.
- The light comes on when the parking brake is engaged with the ignition switch in "ON" position.
- The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system.

If this happens:

1) Pull off the road and stop carefully.

WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- Test the brakes by carefully starting and stopping the vehicle on the shoulder of the road.
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorised workshop for repairs or tow the vehicle to the nearest Maruti Suzuki authorised workshop for repairs.

▲ WARNING

If any of the following conditions occur, you should immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned to "ON" position.
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

Parking brake reminder buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.

Anti-lock brake system (ABS) warning light



65D529

When the ignition switch is turned to "ON" position, this light comes on briefly so you can check that the light is working.

If the light stays on or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to "LOCK" position and then start the engine again.

If the warning light comes on briefly and then turns off, the system is normal. If the warning light still stays on, something is wrong with the system.

If the light and the brake system warning light stay on or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and the anti-lock function of the ABS system.

If one of the above occurs, have the system inspected by a Maruti Suzuki authorised workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Antilock brake system (ABS)" in the "OPERAT-ING YOUR VEHICLE" section.

Oil pressure light



50G051

When the ignition switch is turned to "ON" position, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the engine oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorised workshop before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the oil pressure light to indicate the need to add oil. Periodically check the engine oil level.

Charging light



50G0

When the ignition switch is turned to "ON" position, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a Maruti Suzuki authorised workshop.

Seat belt reminder light



60G049

When the driver and/or passenger (front passenger and/or rear passenger*) do(does) not buckle his or her seat belt, this light will come on and/or blink.

For details of the seat belt reminder, refer to "Seat belts and child restraint systems" section.

*: If equipped

AIRBAG warning light



63J030

 
When the ignition switch is turned to "ON" position, this light comes on for several seconds so you can check that the light is working.

The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system (if equipped).

▲ WARNING

If AIRBAG warning light does not blink or come on briefly when the ignition switch is turned to "ON" position, stays on for more than 10 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system (if equipped) may not work properly, which could result in serious injury in the event of a collision. Have both systems inspected by a Maruti Suzuki authorised workshop.

Malfunction indicator light



65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. When the ignition switch is turned to "ON" position, this light comes on. When the engine is started, the light goes out.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a Maruti Suzuki authorised workshop to have the damage fixed.

Also, if this light comes on when the engine is running, there is a problem with the Auto Gear Shift system (if equipped). Ask a Maruti Suzuki authorised workshop to have the system inspected.

CAUTION

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- Do not drive or stop over such as withered grasses.
- Drive slowly if required to move the vehicle.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transmission warning light (for Auto Gear Shift)



80J219

When the ignition switch is turned to "ON" position, this light comes on for several seconds so you can check that the light is working.

If this light comes on when the engine is running, there is a problem with the Auto Gear Shift system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

NOTE:

If the Auto Gear Shift clutch temperature becomes too high, this light will blink. Stop the vehicle in a safe place and let the system cool down.

Immobilizer system warning light



65D239

When the ignition switch is turned to the "ON" position, this light comes on to let you know the light is working. If this light blinks with the ignition switch turned to "ON", there may be something wrong with the immobilizer system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

Electric power steering light



79J039

When the ignition switch is turned to "ON" position, this light comes on. When the engine is started, the light goes out.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by a Maruti Suzuki authorised workshop.

NOTE:

The following steering wheel operations may gradually take more effort while parking or driving at a very low speed. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent it from overheating.

- The steering wheel is operated very often.
- The steering wheel is kept in a fully turned position for a long while.

When the power steering control system cools down, the power steering system will return to its original condition.

However, repeating these operations could cause damage to the power steering system.

NOTE:

If the power steering system does not work properly, it will require greater effort to steer, but you still will be able to steer.

NOTE:

If the steering is operated, you may hear noise caused by electric power steering operation. This is normal and indicates that the power steering system works properly.

High engine coolant temperature warning light



69RH17

When the ignition switch is turned to "ON" position, this light comes on briefly so you can check that the light is working. If this light blinks while driving, it means the engine is running hot. Avoid driving conditions that may lead to actual overheating. If the light stays on without blinking, then the engine is overheating. Follow the instructions in "Engine trouble: Overheating" in the "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Turn signal indicators



50005

When you turn on the left or right turn signals, the corresponding green arrow on the instrument cluster will flash along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will flash along with all of the turn signal lights.

NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be malfunction in the turn signal system. Ask your Maruti Suzuki authorized workshop to inspect the system.

BEFORE DRIVING

Main beam (high beam) indicator light



50G056

This indicator comes on when headlight main beams (high beams) are turned on.

Theft deterrent light (if equipped)



82K269

For details, refer to "Theft deterrent light" in this section.

Illumination indicator light



64J045

This indicator light comes on while the position lights, tail light and/or the head-lights are on.

Depress brake pedal indicator (for Auto Gear Shift)



76MH0A047

Refer to "Auto Gear Shift" in the "OPERAT-ING YOUR VEHICLE" section for details.

ENG A-STOP Indicator Light



72M00032

When the ignition switch is turned to "ON" position, this light comes on briefly if the system works properly.

When the engine is stopped by the "ENG A-STOP" system, this light comes on. For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" in "OPERATING YOUR VEHICLE" section.

ENG A-STOP OFF Light



56RM02036

When the ignition switch is turned to "ON" position, this light comes on briefly if the system works properly.

When you push the ENG A-STOP OFF switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG ASTOP

system.

You should have the system inspected by a authorised Maruti Suzuki workshop.

ESP[®] Warning Light (if equipped)



56RM0203

ESP[®] is a registered trademark of Daimler AG.

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system

If this light blinks, drive carefully.

When the ignition is pushed to "ON" mode, the light comes on briefly so you can check that the light is working. If the light stays on or comes on when driving, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by a Maruti Suzuki authorised workshop.

For details of the ESP $^{\circledR}$ systems, refer to "Electronic Stability Program (ESP $^{\circledR}$) (if equipped)" in "OPERATING YOUR VEHI-CLE" section.

WARNING

The ESP® systems cannot prevent accidents. Always drive carefully.

ESP[®] OFF Indicator Light (if equipped)




56RM020

When the ignition is pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®) (if equipped)" in "OPERATING YOUR VEHICLE" section.

Lighting control lever

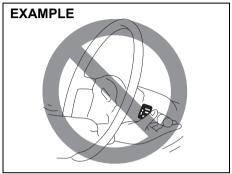


65D611

WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

BEFORE DRIVING

Lighting operation

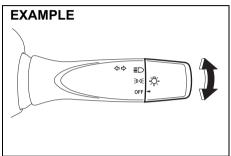

66RH032


To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF

All lights are off.

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

Front position lights, tail lights, license plate light, instrument lights and headlights are on.

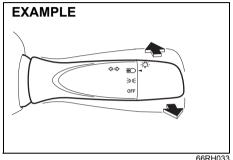

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on, to momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.


Light reminder buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:

The headlights and/or position lights are on even after the ignition switch is turned off.

The buzzer stops sounding when you turn off the headlights and position lights.

Headlight leveling knob

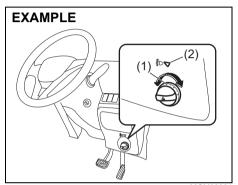

62SM02021

Level the headlight beam according to the load condition of your vehicle by turning this knob. Turn the knob anticlockwise to lower the beam and clockwise to raise the beam.

Align the marking (1) on the knob with the marking (2) provided on the dashboard for setting the required knob position. The chart below shows the appropriate knob position for different vehicle load conditions.


For petrol model

Vehicle Load Condition	Knob Position
Driver only	0
Driver + 1 passenger (in front seat)	0
Driver + 4 passengers, no cargo	2
Driver + 4 passengers, cargo added	2
Driver + full cargo	3

For CNG model

Vehicle Load Condition	Knob Position
Driver only	0
Driver + 1 passenger (in front seat)	0
Driver + 1 passenger (in front seat) + 2 passengers (in rear seat)	1

Turn signal control lever

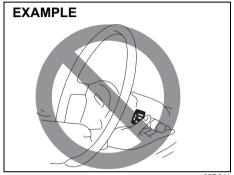

65D611


WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Turn signal operation With the ignition switch in "ON" position, move the lever upward or downward to activate the right or left turn signals.

BEFORE DRIVING


Normal turn signal

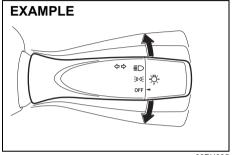

66RH035

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

Lane change signal

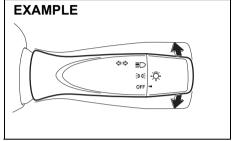

66RH036

Move the lever partway upward or downward to turn right or left and hold the lever in the moved position.

· The turn signal and its; indicator flash while the lever is held at the moved posi-


The turn signal and its indicator flash 3 times even if you return the lever immediately after moving it.


NOTE:

The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information display" in this section.

Hazard warning switch

Type A

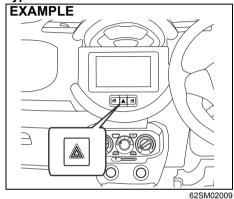

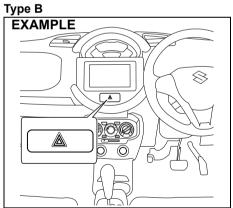


62SM02023

Push in the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

Windshield wiper and washer lever

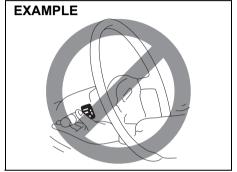

57L21128

▲ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and washer operation

When the ignition switch is in "ON" position, you can use the wiper/washer lever.

When the wipers are under heavy load such as covered by snow, the breaker will be activated and the wipers will stop operating to protect the wiper motor from overheating.


If the wiper stops during operation, do the following methods.

- 1) Stop the vehicle in a safe place, and turn the engine off.
- 2) Move the wiper lever to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and the wipers will be able to use.

If you cannot use the wipers after a while, there may be another problem. Ask a Maruti Suzuki authorised workshop to have the wipers inspected.

BEFORE DRIVING

Windshield wipers

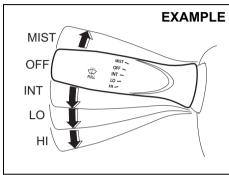


69RM02006

To turn the windshield wipers on, move the lever down to one of the three operating positions. In "INT" position, the wipers operate intermittently. The "INT" position is very convenient for driving in mist or light rain. In "LO" position, the wipers operate at a steady low speed. In "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to "OFF" position.

Move the lever up and hold it to "MIST" position, the windshield wipers will turn on continuously at low speed.

Windshield washer

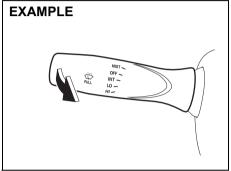

69RM02005

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and your vehicle is equipped with "INT" position.

WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Fill a reservoir 3/4 full with washer fluid to for its expansion, if temperature falls low enough to freeze the fluid.

Horn

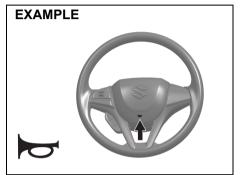

62SM02018

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.

Vehicle loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the "SPECIFICA-TIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW (front and rear) – Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.


▲ WARNING

- Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).
- Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.


BEFORE DRIVING

Trailer towing

Your vehicle was originally designed to carry people and a normal amount of cargo, not to tow a trailer.

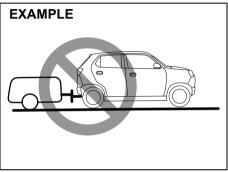


62SM02025

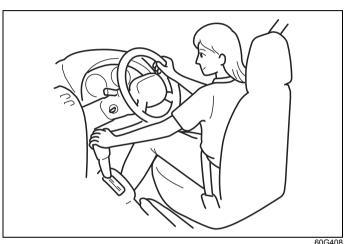

OPERATING YOUR VEHICLE

Doily inequation shooklist	2.4
Daily inspection checklist	3-1
Engine oil consumption	3-2
Ignition switch	3-2
Parking brake lever	3-5
Pedal	3-6
Starting engine	3-7
Using transmission	
Gearshift indicator (if equipped)	3-18
ENG A-STOP System	
(EngineAuto Stop Start System)	3-19
Parking sensors	
Braking	
Electronic Stability Program (ESP®) (if equipped)	

Daily inspection checklist Before driving

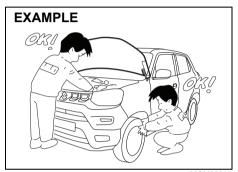

62SM03001

- 1) Check that windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tires for the following points:
- the depth of the tread groove
- abnormal wear, cracks and damage
- loose wheel nuts
- existence of foreign material such as nails, stones, etc.

Refer to "Tires" in the "INSPECTION AND MAINTENANCE" section for details.

3) Look for fluid and oil leakage.

NOTE:

It is normal for water to drip from the air conditioning system after use.

- 4) Check that the hood is fully closed and latched.
- Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat.
- 7) Check the brake pedal and the parking brake lever.
- 8) Adjust the mirrors.
- 9) Check that you and all passengers have properly fastened your seat belts.
- Check that all warning lights come on as the ignition switch is turned to "ON" position.
- 11) Check all gauges.
- Check that the brake system warning light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank or before a long distance driving (like highway driving), perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery fluid (acid) level
- 5) Windshield washer fluid level
- 6) Hood latch operation Pull the hood release handle inside the vehicle. Check that you cannot open the hood all the way without releasing the secondary latch. Close the hood securely after checking for proper latch operation. See the item "All latches, hinges and locks" of "Chassis, body and others" in "Maintenance schedule" in the "INSPECTION AND MAINTE-NANCE" section for lubrication schedule.

WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank or before a long distance driving (like highway driving), check the tire pressure using a tire pressure gauge. Also check the tire pressure of the spare tire.

Engine oil consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumption depends on viscosity and quality of the oil and your driving conditions.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km driving.

Oil consumption: Max. 1.0 L per 1000 km

When judging the amount of oil consumption, note that the oil may become diluted and it is difficult to judge the accurate oil level.


As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil gradually becomes diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

Ignition switch

▲ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

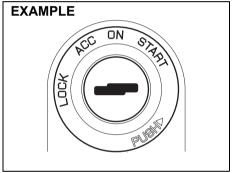


68PH0031

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

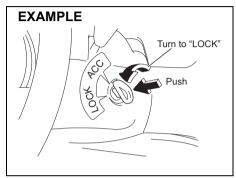

60G033

You must push in the key to turn it to "LOCK" position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON


This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

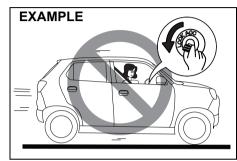

62SM03002

▲ WARNING

 Never return the ignition switch to "LOCK" position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.

(Continued)

WARNING

(Continued)

• Always return the ignition switch to "LOCK" position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children may be able to start the vehicle or shift the transmission into neutral, which could result in an accident. There is also a danger that children may injure themselves by playing with the power windows or other moving features of the vehicle.

In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

NOTICE

 Do not leave the ignition switch in "ON" position if the engine is not running as the battery will discharge.

(Continued)

NOTICE

(Continued)


(For manual transmission models)

- For protection of a lead-acid battery and a starter motor, if you use the starter motor by turning the key to "START" for more than 12 seconds at a time, the starter motor stops automatically. Turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition system or consult a Maruti Suzuki authorised workshop.
- If the engine starts, the starter motor stops automatically.

(For Auto Gear Shift models)

• For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine does not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition system or consult a Maruti Suzuki authorised workshop.

Parking brake lever

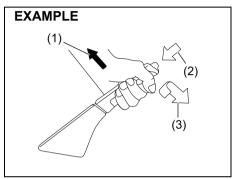

54G039

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the seats. To set the parking brake, hold the brake pedal down and pull the parking brake lever all the way up. To release the parking brake, hold the brake pedal down, pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.
- When parking on an uphill, turn the steering wheel so that the front wheels point to the center of the road.
- When parking on a downhill, turn the steering wheel so that the front wheels point to the curb.

(Continued)

WARNING

(Continued)

- Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, check that the gearshift lever is in one of the following positions;
- 1st gear or "R" (Reverse) for manual transmission vehicles.
- "D", "M" or "R" for Auto Gear Shift vehicles. Also, check the instrument cluster to make sure that the transmission is engaged in "1" or "R" position.

Remember, even though the transmission is in gear, you must set the parking brake fully.

WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake.
- Manual transmission turn off the engine, then shift into reverse or first gear.

Auto Gear Shift – shift into "D", "M" or "R" and check the gear position indicator in the instrument cluster to make sure that the transmission is engaged in "1" or "R" position, then turn off the engine.

- 3) Get out of the vehicle and put chocks under the wheels.
- Release the parking brake.
 When you return to your vehicle, first set the parking brake, and then remove the wheel chocks.

A CAUTION

The hill hold control system (if equipped) will not activate while the parking brake is engaged.

NOTE:

(For Auto Gear Shift models)
For details on how to use the gearshift lever to park the vehicle, refer to "Parking" in "Auto Gear Shift" in this section.

▲ WARNING

Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:


- Gas may leak from a cigarette lighter or spray can and may lead to a fire.
- The glasses, plastic cards or CD cases, etc. may deform or crack.
- · Soft drink cans may fracture.

Parking brake reminder buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.


Pedal

Manual transmission

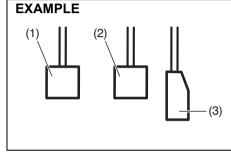

80J2121

Auto Gear Shift

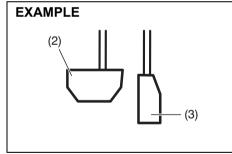

80J2122

Clutch pedal (1)

A clutch pedal is used to disengage the drive to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

▲ WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake pedal (2)

Your MARUTI SUZUKI vehicle is equipped with front disc brakes and rear drum brakes. Depressing a brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc

Auto gear shift - You may hear occasional sound when you release brake pedal while vehicle is in "D" (Drive) mode and about to move. This is a normal phenomenon.

WARNING

 If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by Maruti Suzuki authorised workshop.

(Continued)

WARNING

(Continued)

 Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

NOTE:

Your vehicle is equipped with Brake Override System. If you depress both the accelerator pedal and the brake pedal simultaneously, the engine power output may be suppressed.


Do not Drive with Your Foot on the Brake Pedal

CAUTION

Driving with your foot resting on the brake pedal could cause brake parts to become worn out more quickly than normal or cause brake components to overheat, making them less effective.

Starting engine

Before starting engine

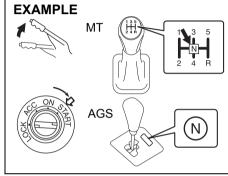

62SM0300

- 1) Check that the parking brake is set fully.
- Manual transmission Shift into "N" (Neutral) and depress the clutch pedal all the way to the floor. Hold the clutch pedal while starting the engine.

Auto Gear Shift – Shift into "N" (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine.

NOTE:

For Auto Gear Shift vehicles, if the engine cannot be started, make sure the gearshift lever is in "N" before restarting the engine.

WARNING

Check that the parking brake is set fully and the transmission is in Neutral before attempting to start the engine.

Starting a cold and warm engine

With your foot taken off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key when the engine starts.

NOTICE

 Stop turning the starter immediately after the engine has started or the starter system can be damaged.

(For manual transmission models)

- For protection of a lead-acid battery and a starter motor, if you use the starter motor by turning the key to "START" for more than 12 seconds at a time, the starter motor stops automatically. Turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition system or consult a Maruti Suzuki authorised workshop.
- If the engine starts, the starter motor stops automatically.

(Continued)

NOTICE

(Continued)

(For Auto Gear Shift models)


• For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine dose not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition system or consult a Maruti Suzuki authorised workshop.

Using transmission

WARNING

Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

Manual transmission

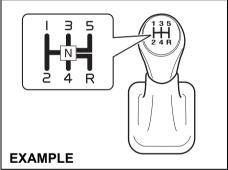

69RH016

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized and provide quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears.

Downshifting maximum allowable speeds

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	75
4th to 3rd	115
5th to 4th	160

*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

▲ WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

NOTICE

Before engaging reverse gear "R", check that the vehicle is completely stationary and gear lever is in neutral "N" position. After depressing clutch pedal fully, shift to "R".

If it is difficult to engage reverse gear "R", follow below procedure:-

- 1) Put gear lever in neutral "N".
- 2) Release the clutch pedal once.
- 3) Again depress the clutch pedal, and shift from "N" to "R".

NOTICE

- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

Auto Gear Shift

Auto Gear Shift is a 5-speed forward/reverse transmission.


Auto Gear Shift has the basic features of conventional manual transmission, but clutch operation and transmission gear shifting are controlled electronically.

NOTICE


Do not depress both the brake pedal and accelerator pedal simultaneously. This can cause damage or overheating to the clutch.

NOTE:

When you open the driver's door, the Auto Gear Shift systems run automatically and you may hear an operating noise. This sound does not indicate malfunction. The features are as follows:

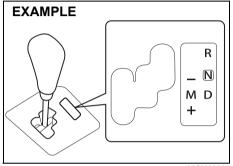

62SM03005

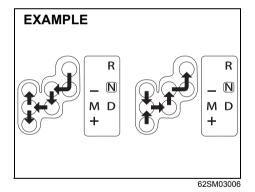

Depress brake pedal indicator



'6MH0A047

This light will come on if you do not depress the brake pedal in the following situations.

- · When starting the engine.
- When the engine is on and the gearshift lever is shifted from "N" position to "D", "M" or "R" position.
- When the ignition switch is in the "ON" position, and the engine is off, the gearshift lever is shifted into any position.

This light will also come on if one of the gears cannot be engaged and the system is unable to re-try shifting when you shift the gearshift lever from "N" position to "D", "M" or "R" position.

Starting the engine

When starting the engine, always place the gearshift lever in the "N" position and depress the brake pedal firmly. The engine cannot be started unless the gearshift lever is in the "N" position and the brake pedal is depressed.

If you parked vehicle with gear engaged on last time (if you can see "1" or "R"), shift into "N" (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine. You can hear buzzer in short time.

NOTE:

NOTE:

- If you start the engine without the gearshift lever in the "N" position, the gear position indicator in the instrument cluster will blink.
- For vehicles with ENG A-STOP system, if the engine restarts automatically, the gear position indicator in instrument cluster may display "N" temporarily. This is a normal phenomenon.

Clutch operation

You can select either the Drive (D) mode or the Manual (M) mode. Since this vehicle controls clutch operation electronically in either mode, you do not need to operate the clutch.

Creeping function

This vehicle has a creeping function that helps the vehicle to start smoothly by engaging the clutch. When the gearshift lever is in any of the positions "D", "M" or "R", and you release your foot from the brake pedal, the vehicle starts slowly without depressing the accelerator pedal. However, creep is not possible in manual (M) mode with 2nd gear engaged. The creeping function is disabled if you depress the brake pedal or pull up the parking brake lever.

NOTE:

If the driver's door is opened and/or the parking brake lever is engaged with the gear in the "M", "D" or "R" position, the creeping function will not operate.

Parking and Stopping the vehicle

Auto Gear Shift does not have a parking position. Park the vehicle with a gear engaged. Make sure that the gearshift lever is "D", "M", or "R".

Also, check the instrument cluster to make sure that the transmission is engaged in "1" or "R" position.

NOTICE

A buzzer will sound continuously if the vehicle is operated with the gearshift lever in-between of each shift positions. The vehicle will become inoperative if you continue to operate the vehicle with the gearshift lever inbetween shift positions.

Drive (D) mode

When the Drive (D) mode is activated, the most appropriate gear position is automatically selected upon operation of the accelerator pedal and variation of vehicle speed.

Normal driving:

- 1) Start the engine as instructed in "Starting the engine" in this section.
- 2) With your foot on the brake pedal, shift the gearshift lever to the "D" position. When the gearshift lever is shifted to the "D" position, the gear will be shifted to 1st.

NOTE:

 If 1st gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "D" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate malfunction.

- The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur:
- If you shift the gearshift lever from the "N" to the "D" position without depressing the brake pedal
- If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "D" again.
- Release the parking brake and brake pedal.
- 4) Depress the accelerator pedal slowly.

▲ WARNING

- While driving the vehicle, do not shift the gearshift lever to the "N" position. The engine brake may not work and you may get involved in an accident. If you return the gearshift lever from "N" to "D" because of unintended shifting, the gear position will be shifted according to the current vehicle speed.
- Always keep your foot on the brake pedal while stopped with the engine running. This operation prevents the vehicle from moving due to unintended activation of the creeping function.

NOTICE

- If the gearshift lever cannot shift into any position, or the gear is changed to "N" position automatically when the vehicle speed becomes less than 10 km/h, there may be a systematic malfunction. In this case, ask a Maruti Suzuki authorised workshop to inspect the Auto Gear Shift system as soon as possible.
- Do not operate the system as described below. The life cycle of the clutch may be reduced.
- Using the accelerator pedal to hold the vehicle on an uphill slope with the gearshift lever in the "D" or "M" position. If you perform this operation for a certain period of time, a warning buzzer will sound.
- Shifting the gearshift lever to the "D", "M" or "R" position while racing the engine.
- Driving at low speed using a high gear.
- Holding the vehicle on an uphill slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.

Starting off on an uphill/downhill:

A CAUTION

The hill hold control system (if equipped) will not activate while the parking brake is engaged.

Uphill

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- Shift the gearshift lever to the "D" position while depressing the brake pedal.
 Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
- 3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Downhill

- 1) Depress the brake pedal and shift the gearshift lever to the "D" position. Make sure that the gear is in 1st by checking the gear position indicator.
- 2) Release the brake pedal and depress the accelerator pedal slowly. Even if the accelerator pedal is not depressed, the clutch will be engaged when the vehicle speed increases.

Using engine braking:

When driving on a downhill slope, downshifting is recommended. So you can use engine braking.


By placing the gearshift lever in the "M" position, the Manual (M) mode is selected. and you can shift to a lower gear manually. For details of downshift operation, refer to "Upshift and downshift" in the "Manual (M) mode".

Manual (M) mode

The gears are not automatically up-shifted. To shift the transmission, the driver must operate the gearshift lever to the "+" or "-" direction. As for conventional manual transmission vehicles, releasing the accelerator pedal a little may help the transmission to shift smoothly.


Upshift and downshift:

Upshifting

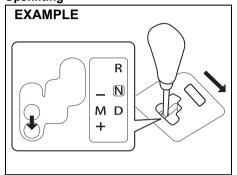


62SM03007

 Pull the gearshift lever to the "+" direction and release it. Every time the lever is operated, the transmission is upshifting 1 step in the order of 1st \rightarrow 2nd \rightarrow 3rd \rightarrow 4th \rightarrow 5th gear.




62SM03010

Downshifting

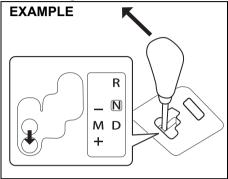

 Push the gearshift lever to the "-" direction and release it. Every time the lever is operated, the transmission is downshifted in the order 5th \rightarrow 4th \rightarrow 3rd \rightarrow 2nd \rightarrow 1st gear.



62SM03011

The gear position is displayed on the gear position indicator. The gear position indicator shows the transmission gear position.

Before starting off, always check the gear position indicator to make sure that the transmission is engaged in 1st or reverse, then depress the accelerator pedal.

It is possible to start vehicle in 2nd gear using manual mode, from stop condition.

NOTE:

- Always use 1st gear while starting off on an uphill slope otherwise you can damage the clutch.
- To downshift smoothly, the engine runs fast in some cases. This is done intentionally by the system and is not malfunction.
- When driving down a hill, downshift and use the engine braking appropriately. If necessary, continuous downshifting is possible. However, if downshifting more than 3 steps, gear shifting will take more time.
- When the gear is shifting, a noise can be heard in some case. This is not malfunction.

WARNING

- Be careful when accelerating, upshifting, downshifting or braking on a slippery surface. Sudden acceleration or engine braking could cause the vehicle to spin or skid. While starting off on a slippery or snowy roads, please use 2nd gear.
- To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and fail.
- While driving the vehicle, do not shift the gearshift lever to "N" position. The engine brake may not work and you may get involved in an accident. If you return the gearshift lever from "N" to "M" because of unintended shifting, the gear position will be shifted according to the current vehicle speed.
- Do not apply the parking brake while driving. Otherwise, it could cause a skid and you may get involved in an accident.

NOTICE

- If the gearshift lever cannot shift into any position, or the gear is changed to "N" position automatically when the vehicle speed becomes less than 10 km/h, there may be a systematic malfunction. In this case, ask a Maruti Suzuki authorised workshop to inspect the Auto Gear Shift system as soon as possible.
- The manual (M) mode does not upshift even if the engine speed reaches the rev-limit.
- The system will not allow shifting up or down to a gear that would cause engine over-revving or under-revving.
- If frequently driving at low speed using a high gear position, the life cycle of the clutch may be reduced.
- Frequent downshifting (more than 3 positions consecutively) causes the reduction of transmission life.

Starting off:

- 1) Start the engine as instructed in "Starting the engine" in this section.
- 2) With your foot on the brake pedal, shift the gearshift lever to the "M" position. When the gearshift lever is shifted to the "M" position, the gear will be shifted to 1st. Before starting off, always make sure that the intended gear is engaged by checking the gear position indicator, then depress the accelerator pedal.

NOTE:

- If 1st gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "M" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate malfunction.
- The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur:
- If you shift the gearshift lever from the "N" to the "M" position without depressing the brake pedal
- If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "M" position again a few seconds later.

 Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.

▲ WARNING

Always keep your foot on the brake pedal while stopped with the engine running. These operations prevent the vehicle from starting due to unintended activation of the creeping function.

NOTICE

Do not operate the system as described below. The life cycle of the clutch may be reduced.

- Using the accelerator pedal to hold the vehicle on an uphill slope operation with the gearshift lever in the "M" or "D" position. If you perform this operation for a certain period of time, a warning buzzer will sound
- Shifting the gearshift lever to the "M", "D" or "R" position while racing the engine.
- Driving at low speed using a high gear.
- Stopping on a slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.

Starting off on an uphill/downhill slope:

Uphill

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- Shift the gearshift lever to the "M" position while depressing the brake pedal.
 Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
- 3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

In case the warning buzzer is on, shifting to 2nd gear will not be possible in manual mode. Always use 1st gear while starting off on a uphill slope. Otherwise you may damage the clutch.

Downhill

- Depress the brake pedal and shift the gearshift lever to the "M" position. Check the gear position indicator to make sure that the gear is in 1st.
- Release the brake pedal and depress the accelerator pedal slowly. Even though the accelerator pedal is not depressed, the clutch will be engaged when the vehicle speed increases.

Backing up

After the vehicle has stopped completely, depress the brake pedal and shift the gear-shift lever to the "R" position. Depress the accelerator pedal slowly as when starting off in 1st gear. Before backing up, make sure that reverse gear is selected by checking the gear position indicator.

NOTE:

- If reverse gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "R" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate malfunction.
- The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;

- If you shift the gearshift lever from the "N" to the "R" position without depressing the brake pedal
- If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "R" position again a few seconds later.
- The system will not allow shifting to the "R" position if the vehicle speed is over about 3 km/h. If the gearshift lever is operated under this condition, the "N" indicator in the instrument cluster will blink. However, when the vehicle speed drops below about 3 km/h, the gear will be shifted to reverse. Make sure that the vehicle has stopped completely before shifting to the "R" position.

NOTICE

On a downhill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Stopping

The vehicle can be stopped by depressing the brake pedal regardless of the gear position. This is because the clutch is automatically disengaged to prevent the engine from stopping.

- If the gearshift lever is in the "D" position, the gear will be downshifted to 1st when the vehicle stops.
- If the gearshift lever is in the "M" position, the gear will be downshifted to 1st when the vehicle stops.

WARNING

- When stopping, for example, at a traffic light, be sure to depress the brake pedal firmly. For your safety, apply the parking brake, too, when stopping on a hill.
- When racing the engine, make sure that the gear is in the "N" position by checking the gear position indicator. If the accelerator is operated with the gear in any other position, the vehicle may move resulting in an accident.
- Do not leave your vehicle unattended while the engine is running. (Continued)

▲ WARNING

(Continued)

• When leaving the vehicle, stop the engine and park the vehicle with a gear engaged. If you need to leave the vehicle with the engine running, apply the parking brakes firmly, and shift the gearshift lever to the "N" position. Otherwise, the vehicle may move unexpectedly and may cause an accident.

NOTICE

- On a slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.
- If the gearshift lever is operated more than necessary, the system may not allow operation of the gearshift for a certain period of time, and the gear may not be shifted appropriately. Therefore, do not operate the gearshift lever if not necessary.

Parking

Unlike an automatic transmission, Auto Gear Shift does not have a parking position. The vehicle can be parked with the gearshift lever at "D" or "R" position. Remember, even though the transmission is in gear, you must set the parking brake firmly. Park the vehicle with a gear engaged.

- 1) Apply the parking brake firmly.
- 2) While depressing the brake pedal, shift the gearshift lever to the "R" position on a downhill slope, and to the 1st position in the drive (D) mode or the "M" position in the manual (M) mode on an uphill slope and confirm the gear position by checking the gear position indicator.
- 3) Stop the engine.
- In the case of uphill/downhill slope, release the parking brake and brake pedal slowly in order to check the gear is engaged.
- 5) After check the vehicle stopped by the gear engaged, Apply the parking brake and the brake pedal firmly again.
- 6) Get out of the vehicle and put chocks under the wheels.

When you return to your vehicle, you must remember to remove the wheel chocks.

NOTE:

 After the engine is stopped, the gear in the transmission does not change even if you shift the gearshift lever in any position. Always shift the gearshift lever before stopping the engine. Check the transmission gear position by looking at the gear position indicator, then turn the ignition switch to "LOCK" position, to stop the engine. Release the brake pedal after a few seconds.

▲ WARNING

- If the gear is not engaged properly and completely before the ignition switch is turned to "LOCK" position, the vehicle may not be parked with the gear engaged. Always confirm the gear position by checking the gear position indicator when parking.
- On a downhill slope, the gear should be put in reverse, and in 1st gear on an uphill slope. In case of uphill/downhill slope, after checking the vehicle stopped by the gear engaged, put the chocks under the wheels. Otherwise, the vehicle may move, and cause an accident. If the gear is left in the "N" position, the vehicle cannot be parked with a gear engaged.

Parking cancel

Depress the brake pedal, turn the ignition switch to "ON" position, and shift the gear-shift lever to the "N" position. The gear will be disengaged.

Warning functions

A warning buzzer will sound or the indicator will blink under the following conditions.

Warning buzzer

- The clutch is heated due to excessive load.
- The creeping function is being activated for a long period of time.

NOTICE

In the above cases, pull over to the side of the road and stop the engine, and then ask a Maruti Suzuki authorised workshop to inspect your vehicle. Otherwise, the clutch disc may be damaged.

- The ignition switch is turned to the "LOCK" position with the gear in 2nd, 3rd, 4th or 5th. In this case, turn the ignition switch to "ON" position, and shift the gearshift lever in the "N" position, shift it to the "D" or "M" or "R" position, then turn the ignition switch to "LOCK" position.
- During a stop, the driver's door is opened with the gearshift lever in the "R", "D" or "M" position while the engine is running.

"N" indicator blinking

When the gear indicator lamp blinks "N", you should depress the brake pedal and shift the gearshift lever to "N" position.

"1" indicator blinking

When the gear indicator lamp blinks "1st", you should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "D" or "M" position again a few seconds later.

"R" indicator blinking

When the gear indicator lamp blinks "R", you should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "R" position again a few seconds later.

Gearshift indicator (if equipped)



69RH050

When the gearshift lever is in a position other than "N" (Neutral), the gearshift indicator is indicated on the information display when the ignition switch is in "ON" position.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated on the display while driving, we recommend you to shift up or down the gear until the arrow disappears. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to "Using transmission" in this section.

WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:

- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/ DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.

Example of the gearshift indicator

Indi- cation	Description
	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is rec- ommended.
	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended.

ENG A-STOP System (Engine Auto Stop Start System)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the engine switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

▲ CAUTION

- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
 - Manual transmission vehicle If the driver's seat belt is unfastened and the driver's door is opened, the engine will stall.
- Auto Gear Shift vehicle If the driver's seat belt is unfastened, even if the brake pedal is pressed down, or the driver's door is opened, the engine will be restarted to warn you that the engine was stopped automatically by the ENG A-STOP system.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, turn the ignition key to "START" to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.

NOTICE


The vehicle equipped with this system uses a dedicated high-performance battery that supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the battery may die prematurely.

- When replacing the battery, use a MARUTI SUZUKI genuine battery specified in the Specification.
- Do not draw power from the battery terminals for electrical products.

Automatic Stopping/Restarting of the Engine

Manual transmission vehicle

With the brake pedal depressed, decelerate the vehicle.

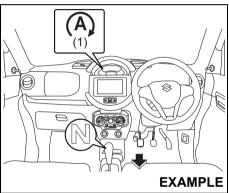

62SM03012

 After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to "N", and then release the clutch pedal, the engine will stop automatically.

The ENG A-STOP indicator light (green) (1) will come on.

 The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to the section, "Automatic engine stop conditions".

· During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

For details, refer to the section, "Points to note during the automatic engine stop".

NOTICE

The engine will not restart if the following operations are performed during the automatic engine stop.

- Do not shift the gearshift lever to a position other than "N" without depressing the clutch pedal. If the gear shift lever is in a position other than "N", the engine will not restart automatically even if the clutch pedal is depressed.
- If the driver unfastens the seat belt, the engine does not restart automatically even if the clutch pedal is depressed. Also a buzzer will sound to alert the driver. In this case, fasten the seat belt.


NOTE:

During the automatic engine stop, electric equipment will be in the following condi-

 The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.

NOTE:

For manual transmission vehicles, if the engine stalled by a rapid clutch operation, the engine will restart with the gear positioned "N" (neutral) and the clutch pedal depressed.

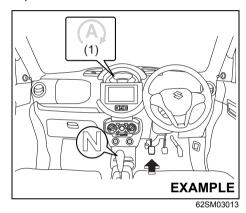

3) Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) (1) will go off.


While the engine is stopped automatically. depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

 Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met

For details, refer to the section, "Automatic engine restart conditions".

Auto Gear Shift vehicle

1) With the brake pedal depressed, stop the vehicle.

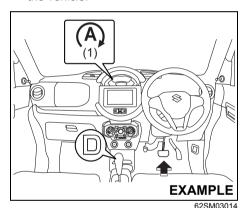

- 2) While depressing the brake pedal, place the gearshift lever in "D" position. "ENG A-STOP" indicator light (green) (1) in the instrument cluster will illuminate and the engine will stop automatically.
- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not

met. For details, refer to the section, "Automatic engine stop conditions".


 During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

For details, refer to the section, "Points to note during the automatic engine stop".

NOTE:

During the automatic engine stop, electric equipment will be in the following condition:

 The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.

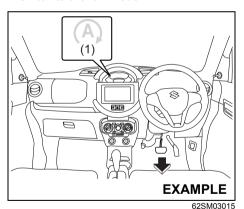

3) Remove your foot from the brake pedal. "ENG A-STOP" indicator light (green) (1) in the instrument cluster will be turned off and the engine will restart automatically.

When restarting the engine, keeping brake force temporarily prevents the vehicle from moving forward by the creeping function. Also, this prevents the vehicle from rolling downward on a hill. For details, refer to the section "Hill hold control system (if equipped)".

NOTE:

When the engine is restarted automatically, the following conditions may be found as the hill hold control system (if equipped) is activated, but this is not a malfunction.

- You may hear a sound from the engine room.
- As brake pedal becomes heavy, it may be difficult for you to depress it.

NOTE:

When the engine does not restart automatically when the brake pedal is released, an interior buzzer will sound and the engine will come out of the automatic engine stop mode and shut down. The ENG A-STOP indicator light (green) will go off.

Points to note during the automatic engine stop

When the following operations are performed during the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

- When the hood is opened, an interior buzzer will sound intermittently and the engine will come out of the automatic engine stop mode and shut down. The ENG A-STOP indicator light (green) will go off.
- For manual transmission vehicle, when the driver releases the seat belt and opens the driver's door, the buzzer sounds for 5 times and the ENG A-STOP indicator light (green) turns off and then the engine will stall.
- For Auto Gear Shift vehicle, if the engine does not start 2 seconds after the brake is released, the buzzer will sound, the ENG A-STOP light will go off, and the engine will stall.

NOTE:

The power steering warning light, oil pressure warning light and charge warning light on the meter panel do not come on during the automatic engine stop, but they will come on once the engine shuts down.

When the engine stalls, restart the engine by usual operation.

Refer to "Starting engine" in this section for details.

NOTICE

The ENG A-STOP system will not operate and engine does not restart automatically or the engine stalls with warning buzzer under the following conditions:

Engine hood is open.

For manual transmission vehicle

- Driver's seat belt is not fastened and driver's door is open.
- The gearshift lever is moved to a position other than "N" (Neutral) position without depressing the clutch pedal.

When the engine stalls, restart the engine by usual operation.

Refer to "Starting the engine" in this section for details.

NOTE:


For manual transmission vehicles, if the engine stalled by a rapid clutch operation, the engine will restart with the gear positioned "N" (neutral) and the clutch pedal depressed.

Actuation conditions for ENG A-STOP system

Standby conditions

When all of the following conditions are met while the vehicle is traveling, ENG A-STOP system will be permitted:

- The engine is started with the hood completely closed.
- The hood is completely closed.
- The ENG A-STOP OFF switch has not been pressed to deactivate the ENG A-STOP system.
- The battery is fully charged and the temperature inside the battery is within the specified range (#1).
- The engine has warmed up and the engine coolant temperature is within the specified range.
- · The driver is wearing seat belts.
- The driver's door is completely closed.
- No electronically controlled system besides the ENG A-STOP system is issuing a signal to inhibit stopping of the engine (#2).
- The negative pressure of the brake booster is normal.

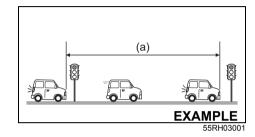

- The ABS system has not been activated during one driving cycle (a) from the engine start to the vehicle start and stop.
- The gearshift lever is in "D" or "N" (for Auto Gear Shift vehicle).
- #1: If the vehicle has not been in use for an extended period of time or the audio or other electrical component was used for an extended period of time while the engine was stopped, the battery may have discharged and it may take some time before the standby mode is achieved.
- #2: If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

Automatic engine stop conditions

When all of the following conditions are met under the standby conditions, the engine will stop automatically after the vehicle has stopped:

- The gearshift lever is in "N" (Neutral) position (for manual transmission vehicle).
- The clutch pedal is released (for manual transmission vehicle).
- · The vehicle has stopped.
- The accelerator pedal is not depressed.
- The vehicle is not stopped on a steep hill (for auto gear shift vehicle).
- The gearshift lever is in "D" or "N" position.(for Auto Gear Shift vehicle)..
- The brake pedal is depressed appropriately. (for Auto Gear Shift vehicle).

NOTICE

For Auto Gear Shift vehicle, the ENG A-STOP system will not operate, if the brake pedal is depressed weakly or very strongly.

Automatic engine restart conditions

If one of the following operations is performed or the vehicle enters one of the following modes during the automatic engine stop, the engine will restart automatically and the ENG A-STOP indicator light (green) will go off:

 The clutch pedal is depressed (for manual transmission vehicle).

- When the brake pedal is released (for Auto Gear Shift vehicle).
- The ENG A-STOP OFF switch is pressed to deactivate the ENG A-STOP system.
- The battery has discharged substantially (#).
- A malfunction of the system is detected (#).
- The negative pressure of the brake booster has dropped (#).

 The second of the brake booster has dropped (#).

 The second of the brake brak
- The accelerator pedal depressed (for Auto Gear Shift vehicle).
- The gearshift lever is put in "R" or in "M" position (for auto gear shift vehicle).
- After the gearshift lever is shifted to "N", it is returned to "D" (for auto gear shift vehicle).
- The driver releases the seat belt (for Auto Gear Shift vehicle) (#).
- The driver's door is opened (for Auto Gear Shift vehicle) (#).
- The vehicle starts to move on a slope, etc. (#).
- Some time (2 minutes or so) has elapsed after the start of the automatic engine stop (#).

The ENG A-STOP indicator light (green) will blink and then go off.

NOTICE


For manual transmission vehicle, if driver's seat belt is not fastened or the gear shift lever is in a position other than "N", the engine will not restarted automatically.

ENG A-STOP OFF Switch

The ENG A-STOP system can be deactivated.

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator

Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

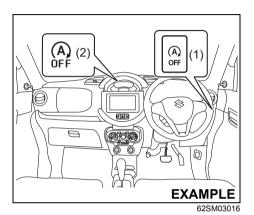

NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.

ENG A-STOP OFF Light



56RM03012

When the ignition switch is turned to "ON" position, this light comes on briefly if the system works properly.

When you push the ENG A-STOP OFF switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG ASTOP system.

You should have the system inspected by a authorised Maruti Suzuki workshop.

Parking sensors

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumper. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obstacle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.
- The parking sensor function can be used when you turn the ignition switch to "ON" position and the gearshift lever is in the "R" position. This function is helpful in the following cases: pulling over to the curb; parallel parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

WARNING

- The parking sensor warns you of obstacles with buzzers. However, you still have to drive with particular care.
- The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.

NOTE:


When the gearshift lever is shifted to the "R" position, a buzzer will sound once.

NOTICE

Parking sensors are only for driver's assistance.

Sensor locations

On rear bumper

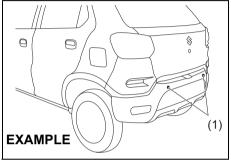

62SM03003

(1) Rear sensors (2 places)


NOTICE

- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorised workshop.

Working sensorsThe sensors work depending on the gearshift lever position as follows:

Gearshift lever position	Manual transmission		Auto Gear Shift	
	R	N, 1st – 5th	R	N, D, M
Rear sensors	On	Off	On	Off

Approximate areas where obstacles can be detected

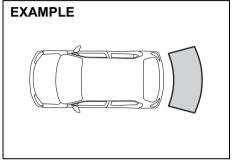

62SM03009

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect obstacles such as a wall up to about 1.5 m (5 ft) from the rear of vehicle.

▲ WARNING

Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.

- Sensors are covered with mud, ice or other materials. (Such materials must be removed for normal operation.)
- Sensors are wet from water splashes or heavy rain.
- Sensors are covered by a hand, sticker, accessory, etc.
- There is an accessory or other object attached within the sensor's sensing area.
- Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
- The height of the bumper is changed due to alteration to the suspension or other causes.
- The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
- The vehicle is on a rough surface, slope, gravel road or grass field.
- The vehicle is at a steep angle.

(Continued)

▲ WARNING

(Continued)

- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- Sensors may not be able to correctly detect the following types of obstacles:
- Objects made of a thin material such as wire netting and ropes
- Square-shaped curbstones or other objects with sharp edges
- Tall objects with a large upper part such as a road sign
- Low-profile objects such as curbstones
- Sound-absorbing objects such as cotton and snow

NOTE:

 Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances. The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.

Obstacle indication by parking sensor Upon detecting an obstacle, the parking

sensor causes an interior buzzer to sound.
A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.

Warnings when obstacles such as wall are detected by sensors


	Distance (approx.)	Buzzer
	100 – 150 cm (39 – 59 in)	Short beeps at short intervals
	60 – 100 cm (24 – 39 in)	Short beeps at very short intervals
	Less than 60 cm (24 in)	Continuous beep

Warning and indicator messages

If there is a problem or warning regarding the parking sensor system, a buzzer informs it. Follow its instruction.

The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Braking

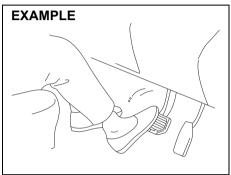

60G165S

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

▲ WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable.

(Continued)

WARNING

(Continued)

After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

NOTE:

While braking you may hear operational noise due to friction between brake disc/drum and brake lining. This is a normal phenomenon and does not indicate any abnormality or affect normal functioning of the vehicle.

Power-assisted brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the brake pedal.

▲ WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake assist system (if equipped)

When you slam the brakes on, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear clicking sound by the brake assist system operation. This is normal and indicates that the brake assist system is activated properly.

Anti-lock brake system (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal move a little while the ABS is operating.

NOTE:

- If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

WARNING

- Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ABS has limits and the system may not function properly depending on the surrounding conditions.
- If tyre grip performance is over the limit or hydroplaning occurs, ABS cannot work properly.



- 54MN069
- (1) ABS warning light
- (2) Brake system warning light

If there is a problem in the ABS system with the ignition switch in "ON" position or the engine switch in ON mode, the ABS system waning light (1) will come on.

▲ WARNING

- If the ABS warning light (1) on the instrument cluster comes on and stays on while driving, there may be a problem with the ABS system. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the brake system warning light (2) on the instrument cluster simultaneously stay on or come on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

Braking Distance

ABS is not designed to shorten the stopping distance.

▲ WARNING

- In the following situations, the braking distance required for a vehicle with ABS may be slightly greater than the one required for a vehicle without ABS, resulting in an accident. Drive the vehicle slowly and maintain ample distance between your vehicle and the vehicle in front of you.
 - When driving on rough roads such as unpaved or stone-paved roads
 - When driving on gravel roads or fresh snow roads
 - When driving over bumps on the roads such as joint seams
 - When passing over metal platessuch as manholes
- When snow chains are installed

NOTE:

- When applying sudden brake or applying brake on slippery roads, the braking distance required for a vehicle with ABS is almost the same as the one required for a vehicle without ABS.
- If you would like to suddenly apply brake, just push the brake pedal down firmly without pumping. Otherwise, the longer braking distance will be required.
- The ABS will not work if vehicle speed is under about 9 km/h. This depends on the road conditions.

Vibration and Sound during ABS Operation

When strongly depressing the brake pedal, you might feel vibration of the brake pedal, the steering wheel, and the vehicle body. This is due to ABS operation, and does not indicate a malfunction; continue strongly depressing the brake pedal at this time.

NOTE:

Immediately after starting the engine and beginning to drive, you might temporarily hear a motor sound. This means that the systems are in self-check mode. This sound does not indicate a malfunction.

Tyres


▲ WARNING

ABS detects each wheel rotation speed via a sensor. If tyres or wheels other than those specified in the owner's manual are used for size, type, tread pattern, or if worn conditions of tyres are different, the correct wheel rotation speed cannot be detected and ABS will not work properly. This may result in an accident. When replacing tyres, use the tyres with the size, type, and tread patterns which are specified in this owner's manual.

Also, do not use the tyres which are excessively worn.


Situations where ABS may Activate by Chance when Applying Brake

· When driving on slippery roads

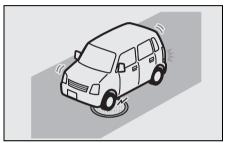


69RHS150

- Manholes

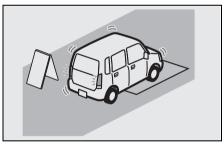


69RHS151

Metal plates in construction zones

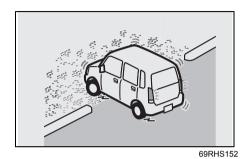

- Gravel roads

When driving over joints in roads and other height differences

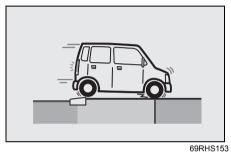


- Joints in roads


When driving on rough roads



- Bumpy roads

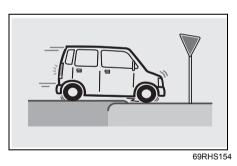

- Height differences in roads

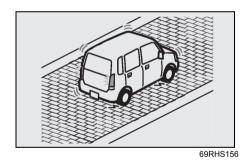

Cobblestone

How ABS works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself. "This is absolutely normal and indicateshat ABS is functioning properly".

WARNING

The ABS may not work properly if tires or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tires or wheels, use only the size and type specified in this owner's manual.

Electronic stability program (ESP®) (if equipped)

ESP[®] is a registered trademark of Daimler AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

WARNING

The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents.

The capabilities of an ESP[®]-equipped vehicle must never be used as a substitute for careful driving.

The ESP[®] has the following systems:

Anti-lock Brake System (ABS)

Refer to "Anti-lock Brake System (ÁBS)" in this section.

Brake Assist System

Refer to "Brake Assist System" in this section.

Traction Control System

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

NOTE:

You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

Stability control system

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

▲ WARNING

Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ESP® has limits and ESP® may not function properly depending on the surrounding conditions.

A CAUTION

- Observe the following points. Otherwise, ESP[®] may not operate properly or it may result in a malfunction.
- Adjust the tyre pressure as specified.
- When replacing tyres, use the same tyres with the size, type, and tread patterns.
- Do not use the tyres which have excessively worn conditions.
- Do not modify the suspension or the brake and do not change vehicle height or suspension hardness.
- Do not drive the vehicle with suspension or brake excessively deteriorated.
- Do not modify the engine or the muffler.

(Continued)

A CAUTION

(Continued)

- Do not install LSD (limited slip differential).
- When you install the snow chains, ESP[®] may not operate properly.

NOTE:

- If you perform the following operations, you may hear an operation sound or a clicking sound. This means that the ESP[®] system is in the self-check mode and this does not indicate a malfunction.
- When ignition switch is turned to the "ON" position or pressing the engine switch to change the ignition mode to "ON"
- When releasing your foot from the brake pedal, after the ignition switch is in "ON" position or the ignition mode is "ON" with the brake pedal depressed
- When starting the engine
- When starting the vehicle after starting the engine
- When engine revolutions is high and ESP[®] operates, you may feel the change of engine revolutions or vibration of vehicle body. However, this is normal.

ESP® warning light (if equipped)



56RM0301

- If there is a problem in the ESP[®] system with the ignition switch in "ON" position or the engine switch in ON mode, this light will come on. While this light comes on, the following situations will occur. In this case, ask a Maruti Suzuki authorised workshop for inspection.
- The following functions will not work:
 - Traction control system
 - Stability control system
 - ENG A-STOP system (if equipped)
- Hill hold control system (if equipped) may not work.
- ABS will work.
- Depending on the malfunction condition, brake assist system may not work.
- If any of the following situations occurs, this light will blink at very short intervals of 0.2 seconds.
- Traction control system is activated when starting or accelerating the vehicle
- Stability control system is activated when making a sharp turn or whirling round.

 If the system is in normal condition, when you turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

A CAUTION

If this light blinks at very short intervals, there is high possibility that the vehicle will be stuck or skid on a slippery road surface. In this case, drive the vehicle very carefully.

NOTF.

While this light comes on, traction control system and stability control system will not be activated. However, you can use ABS.

ESP® OFF indicator light (if equipped)




56RM03010

- If you press and hold the ESP[®] OFF switch with the ignition switch is in "ON" position or the ignition mode is "ON", this light will come on.
- While this light comes on, traction control system and stability control system will not work.

If the system is in normal condition, when you turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

ESP® OFF switch (if equipped)

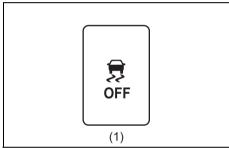

56RM03009

- (1) ESP® OFF switch
- In the following situation, keep pressing the ESP[®] OFF switch until the ESP[®] OFF indicator light in the instrument cluster comes on. Traction control system and stability control system will not work.
- When placing the vehicle on the tester for automobile inspection, traction control system and stability control system needs to be deactivated.
- If your vehicle is stuck and you try to get out of the stuck condition, traction control system may not be suitable.

- If you perform the following operations, the ESP[®] OFF indicator light will come off. Also, traction control system and stability control system will return to be in the activated condition.
- Pressing the ESP® OFF switch again
- Stopping the engine and then restarting the engine
- If you would like to perform normal driving after escaping from the stuck condition, press the ESP® OFF switch again. This will allow the ESP® OFF indicator light to come off and the vehicle will return to the original condition. Traction control system and stability control system will not be activated automatically. (except when stopping the engine and then restarting the engine)

NOTE:

For safety reasons, even if you press the ESP® OFF switch, ABS and brake assist system will not be deactivated.

ABS warning light / brake system warning light

Refer to "Braking" in this section.

Hill Hold Control System (if equipped)

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps to prevent the vehicle from rolling downward (for approximately 2

seconds) while you move your foot from the brake pedal to the accelerator pedal.

 The hill hold control system is not designed to stop the vehicle on a hill.



56RM03009

▲ WARNING

- Always check the surrounding conditions and drive the vehicle in a safe manner by depressing the brake pedal as necessary, as controlling the vehicle by the hill hold control system has limits and the system may not function properly depending on the surrounding conditions.
- If you do not depress the brake pedal firmly enough, the hill hold control system may not work.

(Continued)

WARNING

(Continued)

· If you release your foot from the brake pedal for more than 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of a slope. Also, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage. After you release your foot from the brake pedal, accelerate the vehicle to move up immediately.

NOTE:

- If there is a problem with the hill hold control system, the ESP® warning light in the instrument cluster may come on and the hill hold control system may not work. Also, ENG A-STOP system (if equipped) may not work. In this case, consult a Maruti Suzuki authorised workshop.
- If you move up an excessively sharp slope, a frozen road or a mud track, or depending on laden weight, the vehicle may roll downward when you start the vehicle.
- If you move up an excessively sharp slope, a frozen road or a mud track and

the hill hold control system activates, the tyres may be locked and the vehicle may not be controlled properly.

Activation conditions for the hill hold control system


The hill hold control system activates to prevent the vehicle from rolling downward for about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.

- The gearshift lever is in the forward gear or reverse position.
- · The parking brake is released.
- · The vehicle is on an upward slope.
- The brake pedal is depressed firmly.
 For the vehicles with ENG A-STOP system (if equipped), the hill hold control system is activated when the engine is restarted after being stopped automatically, even if the previous conditions are not met.

NOTE:

When the hill hold control system is activated, you may hear a sound coming from the engine, or you may feel hardness of the brake pedal. These are normal and do not indicate a malfunction.

DRIVING TIPS

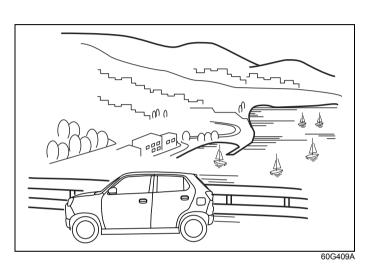

DRIVING TIPS

Running-in	4-1
Catalytic converter	
Improving fuel economy	4-2
Highway driving	4-3
Driving on hills	4-3
Driving on slippery roads	4-4
Off-road driving	4-6
When encountering a flooded area	4-6
Do's and Dont's for safe driving	4-7
Margin for safety	4-9

4

EXAMPLE

55RM04002

▲ WARNING

- Fasten your seat belts at all times. Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to "Seat belts and child restraint systems" section for instructions on proper use of the seat belts.
- Never drive under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated or under stress.


Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km of driving.
- Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.

Catalytic converter

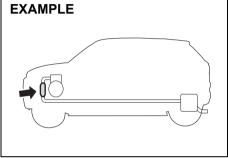

62SM04011


The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.

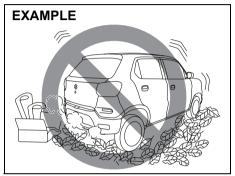

62SM04002

WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving fuel economy

NOTE:

Fuel economy (mileage) of the vehicle may vary due to several factors i.e., driving habits - gear change pattern, usage of A.C, air pressure in the tyres, wind speed, traffic conditions, fuel quality- non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you are to wait for more than a minute while you are parked, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

Avoid sudden acceleration

Sudden acceleration starting from rest or while driving will consume fuel unnecessarily and shorten engine life. Start off slowly.

Avoid unnecessary stops


Avoid unnecessary deceleration and stopping. Try to maintain a slow, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

DRIVING TIPS

Keep the air cleaner clean

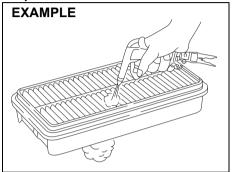

60A183S

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Keep tire pressures correct

Under-inflation of the tires can waste fuel due to increased running resistance of the tires. Keep your tires inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.


Highway driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tires due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.


Driving on hills

Manual transmission

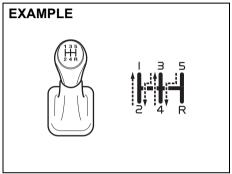

69RH021

Auto Gear Shift

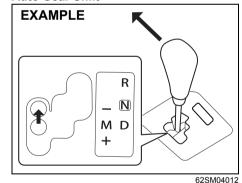

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

While moving uphill/gradient from a stand still condition

(For manual transmission models)

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- 2) Depress the clutch pedal and shift the gearshift lever to 1st select position.
- 3) When ready to start, depress the accelerator pedal while at the same time releasing the clutch pedal slowly. When the vehicle starts to move, gradually release the parking brake.

(For Auto Gear Shift models)
Refer to "Using transmission" in the
"OPERATING YOUR VEHICLE" section.


▲ WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE

When descending a downhill, Never turn the ignition key to "LOCK" position. Emission control system damage may result.

Driving on slippery roads

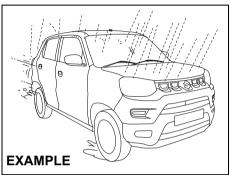

62SM0400

On wet roads, you should drive at a lower speed than you do on dry roads due to possible slippage of tires during braking. When driving on icy, snow-covered or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Snow chains

Snow chains should only be used if they are needed to increase traction or as required by law. Check that the chains you use are of correct size for your vehicle's tires. Also check that there is enough clearance between the fenders and the chains as installed on the tires.

Install the chains on the front tires tightly, according to the chain manufacturer's instructions. Retighten the chains after

DRIVING TIPS

driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

Stuck vehicle

the vehicle.

If your vehicle gets stuck in snow, mud or sand, follow the directions below:

- Shift the transmission back and forth between a forward range (or first gear for manual transmission) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting. Do not race the engine. Excessive wheel spin will cause the tires to dig
- 2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult a Maruti Suzuki authorised workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be

deeper, making it more difficult to free


temporarily towed by a towing cable or chain secured to the towing eye either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame hooks" in the "OTHER CONTROLS AND EQUIPMENT" section.

▲ WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transmission damage.

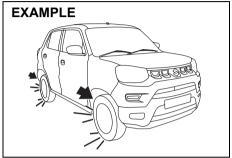

62SM04004

WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.

- Check that your tires are in good condition and always maintain the specified tire pressure. Refer to "Tires" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tires other than those specified by MARUTI SUZUKI. Never use different sizes or types of tires on the front and rear wheels. For information regarding the specified tires, refer to the tire information label located on the driver's door lock pillar.

(Continued)

WARNING

(Continued)


- Never use oversized tires or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tires may also rub against the fender over bumps, causing vehicle damage or tire failure.
- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Off-road driving

Do not drive in the field covered with grown grass

If you drive in the field covered with grass, it may cause accident or vehicle damage by getting caught in grown grass.

When encountering a flooded area

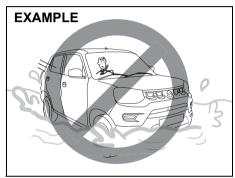

62SM0400

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe and non flooded place while checking the brake effectiveness. Then, ask a Maruti Suzuki authorised workshop to check the following inspection items.

- Function of brake
- Function of electrical components
- Changes in oil level and quality for engine and transmission. In case that the oil is turbid whitish, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.

NOTICE

- Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine and transmission damages, etc.
- If the vehicle gets stuck in deep water do not start the engine.

DRIVING TIPS


Do's and Dont's for safe driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

Starting

- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.

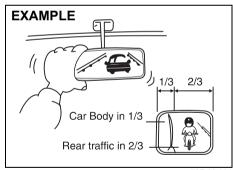


72F-08-001

- 3) Before moving, look around your vehicle to confirm safety.
- 4) Don't accelerate suddenly, since it is dangerous and wastes fuel.


General Driving

- 1) Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
- 2) Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.

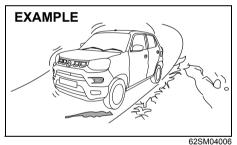

- 3) Turn on the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit.
- 4) Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.
- 5) When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.


- 6) Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
- 7) Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
- 8) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatiqued.

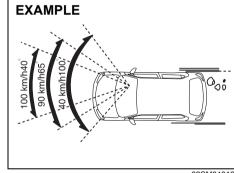

62SM04013

- 9) Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
- 10)When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

Braking

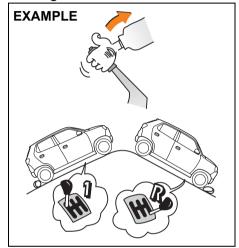


62SM04009

- Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
- 2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tires are worn out as they skid more.

NOTE:

Non-usage of vehicle for long duration may cause gradual rusting on brake disc surface as it is made of cast iron. This may result in noise/vibration. The same has no bearing on functioning of the vehicle. Regular driving of vehicle may prevent/remove rust, thus reducing the noise and vibration.

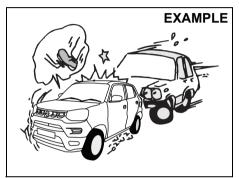

62SM04007


Use foot brake in three stages

- 1. Warn the vehicle behind you.
- 2. Gradually apply the brake.
- 3. Bring the vehicle to a halt.
- When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.

Long Distance Driving

- 1) Be sure to perform safety checks before starting a trip.
- Take rest at regular intervals to prevent accidents which may occur due to feeling sleepy or tired.


Night Time Driving

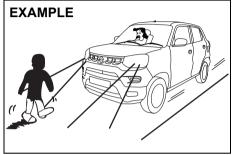

62SM0400

- Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
- Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicleto-vehicle distance.

DRIVING TIPS

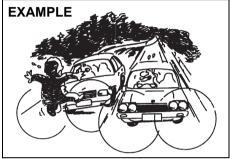

72F-08-021

- 3) Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.
- Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.


Margin for safety

It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- Observe traffic rules and regulations.

Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience. Follow the do's and dont's listed, and driving will never be the same again.

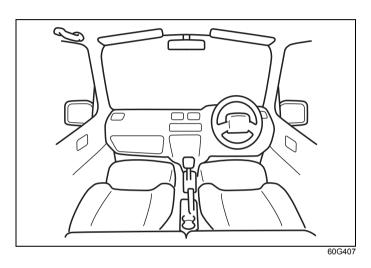


OTHER CONTROLS AND EQUIPMENT


Fuel filler cap	5-1
Engine hood	5-2
Sun visor	5-4
Interior light	5-4
Accessory socket (if equipped)	5-5
AUX/USB socket (if equipped)	
Assist grips	
Glove box	
Cup holder and storage area	5-7
Luggage compartment cover (if equipped)	5-8
Frame hooks	
Heating and air conditioning system (if equipped)	5-12
Manual heating and air conditioning system (if equipped)	
Radio antenna	
Installation of radio frequency transmitters	5-17
Audio system (if equipped)	5-18

5

Fuel filler cap

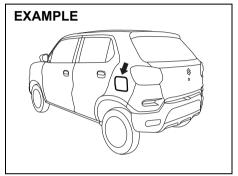


62SM05001

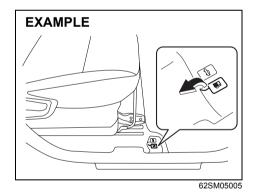

The fuel filler cap is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard side of the driver's seat and locked by simply closing the door.

A CAUTION

Do not step over the release lever to avoid any damage.

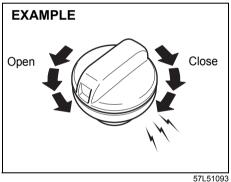


To remove the fuel filler cap:


- Stop the engine and close all the doors and window while refueling.
 Open the fuel filler door.
 Remove the cap by turning it counter-
- clockwise.

A CAUTION

Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

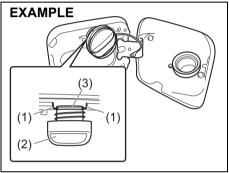

62SM05006

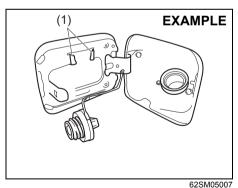

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3), or the hook (4) also holds the fuel filler cap when refueling.


To reinstall the fuel filler cap:

- Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.

▲ WARNING

- Fuel is extremely flammable. Do not smoke when refueling, and check that there are no open flames or sparks in the area.
- If you need to replace the fuel cap, use a MARUTI SUZUKI genuine cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage in the event of an accident.

Engine hood

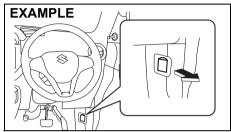

62SM05008

To open the engine hood:

 Pull the hood release handle located on the outboard side of the driver's side. This will disengage the engine hood lock halfway.

WARNING


- Never allow children to open or close the hood. Children may injure themselves because the hood is heavy. Contact with the engine compartment and related parts may cause burns when this area/these parts are hot.
- Do not allow children to be near the vehicle when opening the hood.

(Continued)

▲ WARNING

(Continued)

 Do not leave tools, cloths, and other objects, which were used to clean or perform maintenance and inspections, in the engine compartment. Doing so may cause operational failures or even the vehicle to catch fire when the engine compartment becomes hot.

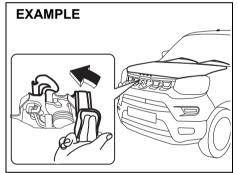

62SM0500


 Push the under-hood release lever sideways with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

▲ CAUTION

The release lever and its peripheral or engine hood can be hot enough to burn your finger right after driving. Touch the lever after it becomes cool enough.

NOTICE

Check that the wiper arms are not raised before you lift up the engine hood to avoid damaging the wiper arms and the engine hood.

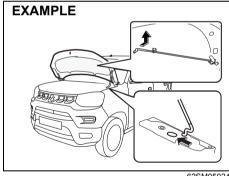


3) While holding the hood, pull the prop rod out from the holding clip, and then insert the end of the rod into the designated hole.

▲ CAUTION

- The prop rod and its peripheral can be hot enough to burn your finger right after driving. Touch the rod after it becomes cool enough.
- Insert the end of the rod into the hole securely. If the rod slips out, you may get caught in the closing hood.
- The rod may slip out when the hood is blown by wind. Be careful on windy days.

To close the engine hood:

1) Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back into the holding clip.

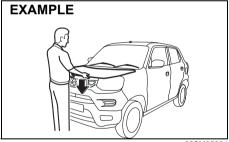

2) Lower the hood to about 20 cm above the hood latch, and then let it drop down. Check that the hood is securely latched after closing.

▲ WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.


A CAUTION

To avoid injury, check that no part of the occupant's body such as hands or head is in the path of the hood when closing it.

NOTICE

Pushing the hood from the top may damage it.

Sun visor

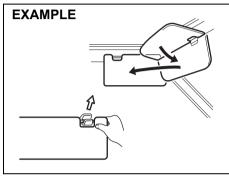


79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, handle it from near the hook as shown in figure or the sun visor can be damaged.

Interior light

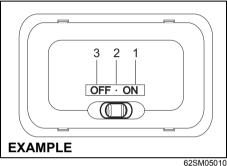

Interior light switch has three positions which function as described below:

ON (1)

- The light comes on and stays on regardless of whether the door is open or closed.
- If your vehicle is equipped with keyless entry system transmitter, the light will be automatically turned off to save the battery when the following conditions are simultaneously met.
- The ignition switch is in "LOCK" posi-
- A period of 15 minutes has elapsed after the light comes on and other operations are not done.
- The hazard warning lights, the position lights and the headlights are off.

DOOR (2)


- · The light comes on while any of the doors (including the tailgate) is opened. For about 15 seconds after all doors are closed, the light will remain on and then fade out.
- · If all doors are closed, the light comes on for about 15 seconds when the ignition key is pulled out from the ignition switch. After 15 seconds, the light will fade out.
- · The light will be automatically turned off to save the battery when the following conditions are simultaneously met.
- The ignition switch is in "LOCK" posi-
- A period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

If you perform any of the following procedures before the light fading out, the light will start to fade out immediately.

- Inserting the ignition key into the ignition
- · Locking all doors by operating the key, keyless entry transmitter or power door locking switch

OFF (3)


The light remains off even when the door is opened.

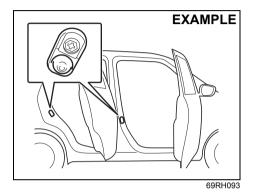

NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber protrusion) at the door opening as shown, the door is involved in the lighting operation.

Accessory socket (if equipped)

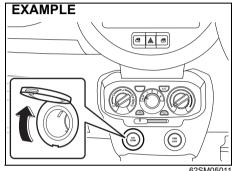

The accessory socket will work when the ignition switch is in "ACC" or "ON" position. This can be used to provide 12 volt/120 watt/10 ampere power for electrical accessories.

NOTICE


- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system.
 Make sure that any electrical accessories you use are designed to plug into this type of socket.
- When the accessory socket is not in use, close the rubber cap. If any foreign material enters the accessory socket, it may cause a malfunction or short circuit.
- When the ignition switch is in "LOCK" position while using the accessory socket, the following may occur;
- the audio or navigation system does not turn off.
- the keyless entry system does not work, etc.

If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.

If the problem persists, ask a Maruti Suzuki authorised workshop to have the system inspected.

AUX/USB socket (if equipped)

Type A

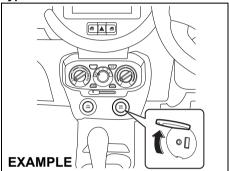


62SM05012

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to "Audio system" in this section.

NOTICE

Always close the cap when not in use, since entry of foreign material, dust, water, conductive liquids may damage the audio system or USB device.

Assist grips

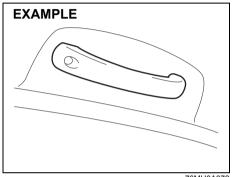


76MH0A07

Assist grips are provided for convenience.

NOTICE


To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Type B

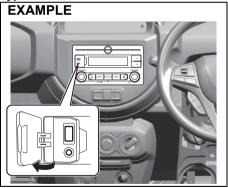

62SM0501

Glove box

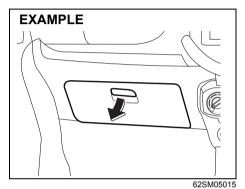


To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

WARNING

- Never drive with the glove box lid open. It could cause injury if an accident occurs.
- Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally causing a fire.

Cup holder and storage area

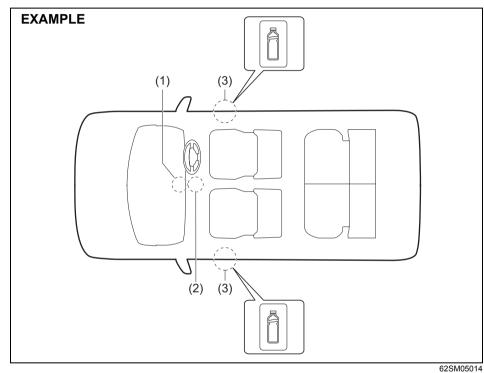

- (1) Center console tray(2) Front cup holder

(3) Front bottle holder

Center console tray (1)

WARNING

Do not place any objects which may fall out from the pocket when the vehicle is moving.

Failure to take the precaution may result in an object interfering with the pedals and causing a loss of vehicle control or an accident.

Front cup holder (2)

Use the front cup holder to put a cup with a lid or a bottle with a cap. Also, you can put small articles in the front cup holder.

▲ WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful and use a lid for a drink not to spill out liquid. Spilling out hot liquid can cause burn injury. In addition, if liquid spills out on the following parts, it may cause a fire or a malfunction and an airbag system may not work properly.
 - Navigation system, audio system or the relevant switches
 - Wiring or electrical components under the floor
- Moving part of the gearshift lever or the seatbelt buckle

(Continued)

▲ WARNING

(Continued)

- Do not use the cup holders to hold sharp-edged, hard or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.
- If you spill, or drop liquid accidentally, have your vehicle inspected by a authorised Maruti Suzuki workshop.
- Do not leave cigarette lighters or spray cans in the front cup holder. Otherwise, gas may leak from them and may cause a fire.


Front bottle holder (3)

You should only place a bottle with a cap in the holder.

NOTE:

Maruti Suzuki recommends to use maximum 1 liter capacity of bottle.

Luggage compartment cover (if equipped)

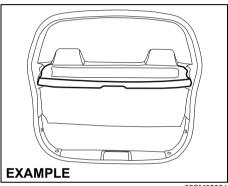


62SM0503


Luggage or other cargo placed in the luggage compartment is hidden from view by a luggage compartment cover.

WARNING

Do not carry items on top of the luggage compartment cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.

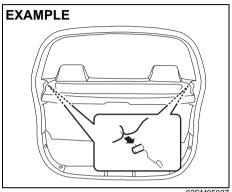

62SM05037

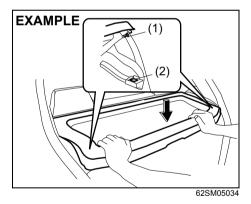

While closing luggage compartment cover, ensure that snap (1) locks in the latch (2) provided on the trim.

For locking the snap (1) in the latch (2), press the luggage compartment cover gently as shown in figure.

WARNING

Do not carry objects that extend higher than top of seatbacks. Objects that extend higher than top of seatbacks will obstruct the driver's rear view and may cause an accident. These objects may also get damaged or may damage the tailgate.

Frame hooks

It is not recommended that you use the frame hooks for towing another vehicle. They are originally designed to tow your vehicle in emergency situation.

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in the "EMERGENCY SERVICE" section.


WARNING

Observe the following instructions when using frame hooks. The towing hook or vehicle body may break and cause serious injury or damage:

- · Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the towing hook.

In such case, we recommend that you contact a professional service.

Front

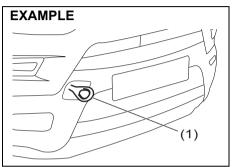


62SM05025

The towing hook (1) is provided on the front of the vehicle for use in emergency situations and sea shipping purpose only.


NOTICE

To prevent damage to the vehicle never use the towing eye (1) for trailer/ train shipping purpose.

To install the towing hook (1), follow the procedure below.

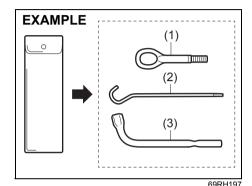


1) Pick up the towing hook (1), jack handle (2) and wheel wrench (3).

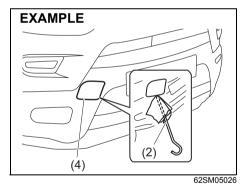

2) Remove the cover (4) by using a jack handle (2) covered with a soft cloth as shown in the illustration.

NOTE:

Do not use excessive force as it may damage the cover strap.

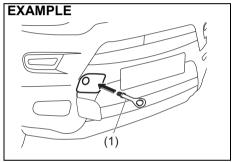


62SM05027

3) Install the towing hook (1) by hand.

NOTE:

We recommend to fasten the cover with tape to prevent damage during towing.

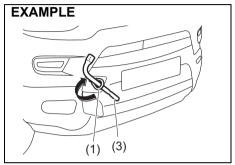

62SM05028


 To tighten the towing hook (1), turn it clockwise by using a wheel wrench (3) until the towing hook (1) is securely installed.

! WARNING

Use extreme caution when you use the towing eye (1). Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which would give excessive stress on the towing eye. The towing eye or vehicle body may break and cause serious injury or damage.

To remove the towing hook (1), reverse the installation procedure.

Rear

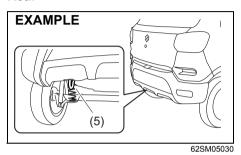

The frame hook (5) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only.

NOTICE

- Your vehicle was originally designed to carry people and a normal amount of cargo, not to tow a trailer.
- The frame hook (5) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only. Do not use the frame hook for towing another vehicle, being towed by another vehicle or transporting your vehicle by a car carrier trailer, etc. Otherwise, the frame hook or the vehicle body may break and cause serious injury or damage.

To tow your vehicle on the road or highway, follow the instruction of "Towing" in "EMERGENCY SERVICE" section.


Heating and air conditioning system (if equipped) Air outlet

EXAMPLE 62SM05016

- Windshield defroster outlet
 Side outlet

Center outlet
 Floor outlet


Side outlet

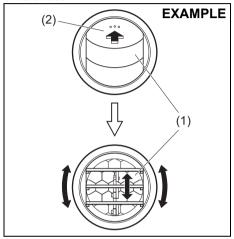

62SM05017

To open the louver (1), push the arrow part (2) as shown in the illustration. To adjust the direction of the air flow, move up or down or turn the opened louver (1).

Center outlet

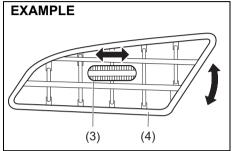

62SM05029


Move the knob (3) horizontally or the case (4) vertically to adjust the direction of airflow as desired.

A CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Manual heating and air conditioning system (if equipped)

Description of controls

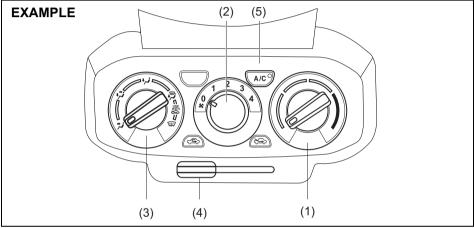


62SM05018

Temperature selector (1)
This is used to adjust the temperature.

Blower speed selector (2)
This is used to turn on the blower and to select blower speed.


Air flow selector (3)

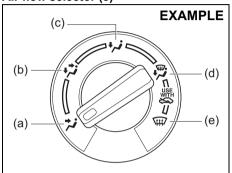

75RM022


This selector is used to select the following mode.

 VENTILATION (a)




Temperature-controlled air comes out of the center and side air outlets.

 BI-LEVEL (b)




Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

HEAT (c)

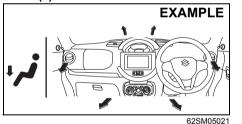


Temperature-controlled air comes out of the floor outlets and the side outlets, small amount of air also comes out of the windshield defroster outlets.

 HEAT & DEFROST (d)




Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets and the side outlets.

DEFROST (e)

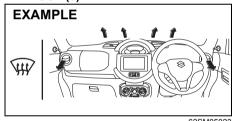

Temperature-controlled air comes out of the windshield defroster outlets and the side outlets.

Air intake selector (4)

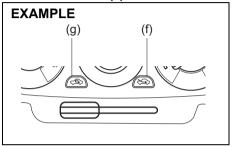

62SM05033

This selector is used to select the following modes.

FRESH AIR (f)


When this mode is selected by moving the lever to right, outside air is used.

RECIRCULATED AIR (g)

When this mode is selected by moving the lever to left, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down or warm up the interior or to reduce unwanted odor from entering the vehicle.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated and the windows tend to get misted. Therefore, you should occasionally select FRESH AIR.

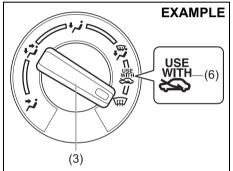

75RM403

NOTE:

The mark of " (6)

To clear fog on the windshield and/or the side windows quickly, set the air flow selector (3) to HEAT & DEFROST or DEFROST and air intake selector (4) to FRESH AIR. These positioning will clear the fogged windshield and/or the side windows faster than the RECIRCULATED AIR.

Air conditioning switch (if equipped) (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is on. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System operating instructions

Natural ventilation

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The control settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)

The control settings are the same as for normal heating except you select RECIR-CULATED AIR. If you use this heating method for an extended period of time, the air in the vehicle may become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch (if equipped).

Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The control settings are the same as for normal cooling except you select RECIR-CULATED AIR and the highest blower speed.

NOTE:


- If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated and the windows tend to get misted. Therefore, you should occasionally select FRESH AIR.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch (if equipped).

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

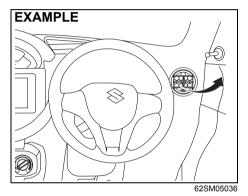

NOTE:

If you need maximum defrosting:

- select DEFROST and FRESH AIR.
- set the blower speed selector to high.
- adjust the temperature selector to the hot end.
- turn on "A/C" switch (if equipped), and
- adjust the side outlets so the air blows on the side windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in the "INSPECTION AND MAINTENANCE" section. Have this job done by a authorised Maruti Suzuki workshop as the lower glove box must be lowered for this job.


NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio antenna

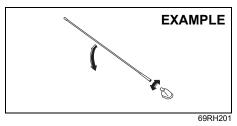

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTE:

Adjust the antenna angle to maximum for optimum radio reception.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.
- If radio antenna angle is kept in lower position. There is possibility of antenna hitting the roof while driving. Adjust the antenna angle to maximum.

NOTE:

Due to poor quality of FM/AM signal, some disturbance/noise may be heard from speakers. It is recommended to switch off the tuner system to prevent the said disturbance/noise in the speaker.


Installation of radio frequency transmitters

We recommend that you always ask a Maruti Suzuki authorised workshop about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your authorised Maruti Suzuki workshop or qualified service technician for advice.

Audio system (if equipped)

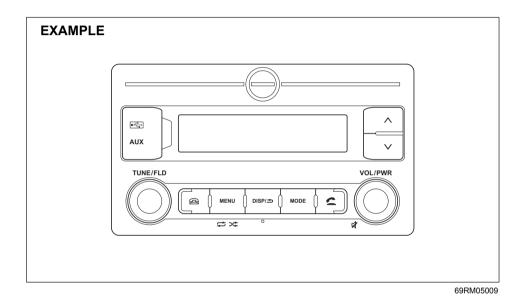

NOTE: For vehicle equipped with SMARTPLAY STUDIO INFOTAINMENT SYSTEM, refer to audio manual available with the vehicle.

Safety information

WARNING

If you pay too much attention to operating the audio system or viewing the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying too much attention to operating the audio system or viewing the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.
- Set the sound volume to a level that will allow you to continue to be aware of road and traffic conditions while driving.

NOTICE

- Avoid spraying or spilling of clearing solutions, perfumes, car fresheners, beverages, chemicals or any liquids on the audio system surface. Also ensure that any liquid does not enter the system, it can damage the screen and the system. The warranty of the system will be void, if liquid ingress marks are observed inside the system.
- Avoid exposure of the audio system to water or excessive moisture as it can cause electric shocks, fire or other damages.

Open source definition

This Product includes following open source software.
mbedtls version 2.5.1

Copyright © 2006–2015, ARM Limited, All Rights Reserved SPDX-License-Identifier; Apache-2.0

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License.

You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software distributed

under the License is on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.

See the License for specific language governing permissions and limitations under the License.

This file is part of mbed TLS (https://tls.mbed.org)

Please be noted that a portion of this software is made by changing or modifying original source files.

Bluetooth


The Bluetooth[®] word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Ink.

Stop using this unit and a Bluetooth® ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit whenever you are notified that your unit disturbs other wireless communication immediately.

Basic operations

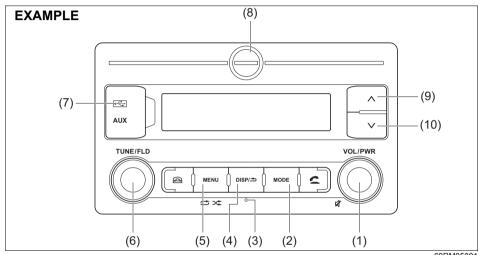

69RM05001

vehicle sirens.

Display & Back setting

Press "DISP/BACK" button (4) to go back to the previous display when a list or menu screen is displayed.

On long pressing "DISP/BACK" button (4), tuner display will be turned OFF. However all operations such as media playing etc will be active. Display will be turned ON by pressing any button on audio unit, steering

- (1) "VOL/PWR" knob
- (2) "MODE" button
- (3) MICROPHONE (for handsfree)
- (4) "DISP/BACK" button
- (5) "MENU" button
- (6) "TUNE/FLD" knob
- (7) USB/AUX
- (8) SMARTPHONE DOCK CAP*
- (9) UP button
- (10) DOWN button
- * To open SMARTPHONE DOCK CAP (8), use the cap opener provided in MGA "SMART-PHONE DOCK". Opening of SMARTPHONE DOCK CAP with any external object may cause damage to CAP.

Turning on/off power

Press "VOL/PWR" knob (1) to turn on the power. The unit starts to operate in the previous mode that the power was turned off.

• To turn off the power, press and hold "VOL/PWR" knob (1) for about 2 seconds.

Adjusting the volume

Turn "VOL/PWR" knob (1).

- · Turning it clockwise increases the vol-
- · Turning it counterclockwise decreases the volume.

Mute

- Press "VOL/PWR" knob(1) to mute the sound.
- To cancel mute, press any button.

NOTE:


For the purpose of safe driving, adjust the audio volume to a level that allows you to hear sounds outside of the vehicle including car horns and particularly emergency

5-20

switches or any other interrupt such as handsfree calling etc.

Sound settings


- 1) Press "MENU" button (5). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (6) to select "Sound Settings", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to select one of the settings as follows, and press the knob (6) to determine the selection.

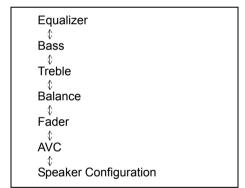

Equalizer

The equalizer can set various types of sounds depending on the type of music.

- 1) Turn "TUNE/FLD" knob (6) to select "Equalizer", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to select one of the settings as follows, and press the knob (6) to determine the selection.

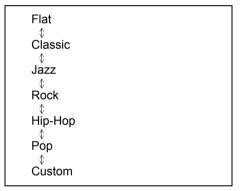

NOTE:

- When you select "Custom", the sound curve can be adjusted as your preference. Turn "TUNE/FLD" knob (6) to adjust values of sound, and press the knob (6) to determine the selection.
- ">> <<" mark appears at both left and right ends of the currently selected equalizer.

Adjusting bass/treble/balance/fader

- Turn "TUNE/FLD" knob (6) to select "Bass", "Treble", "Balance" or "Fader", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to adjust the sound, and press the knob (6) to determine the selection.
- "Bass" / "Treble":
- Can be adjusted in levels -6 to 0 to +6.
- Turn "TUNE/FLD" knob (6) clockwise to increase the frequency & counter clockwise to decrease the frequency.
- "Balance":
- Can be adjusted in 9 level left to right.
- Turn "TUNE/FLD" knob (6) clockwise to emphasize the right speaker, and turn the knob (6) counterclockwise to emphasize the left speaker.
- "Fader":
- Can be adjusted in 9 level back to front.
- Turn "TUNE/FLD" knob (6) clockwise to emphasize the front speaker, and turn the knob (6) counterclockwise to emphasize the rear speaker (if equipped).

NOTE:

When you adjust to emphasize the rear speakers, sound output may fade out completely in case vehicle is not equipped with rear speakers.

Adjusting the AVC (Auto volume control)

The Auto Volume Control (AVC) function automatically adjusts (increases/ decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with four selectable levels (LEVEL OFF, 1, 2, 3). The level of volume adjustment increases together with the LEVEL number.

- Turn "TUNE/FLD" knob (6) to select "AVC", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to adjust the level, and press the knob (6) to determine the selection.

Adjusting the sound parameters as per speaker configuration

- Turn "TUNE/FLD" knob (6) to select "Speaker Configuration", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to select "2SPK" or "4SPK", and press the knob (6) to determine the selection.
- "2SPK":

Sound is generated from the front speakers.


 "4SPK" (if equipped): Sound is generated from the all speakers.

NOTE:

For optimal sound experience, ensure that speaker configuration is selected as per the actual speakers present in the vehicle.

System settings

- 1) Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (6) to select "System Settings", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to select one of the settings as follows, and press the knob (6) to determine the selection.

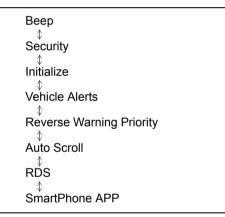

Beep on/off

Beep sound is activated when error message is displayed or during operations of few button.

Beep setting can be turned on or off through the following steps:

- 1) Turn "TUNE/FLD" knob (6) to select "Beep".
- 2) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".

Security setting

Refer to "Anti-theft feature" later in this section.

Initialize setting

You can delete the registered Bluetooth[®] device information.

- Turn "TUNE/FLD" knob (6) to select "Initialize", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to select "Reset BT", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to select "YES", and press the knob (6) to determine the selection for reseting.

Vehicle alerts setting

You can turn on or off the warning indications related to vehicle system using this setting. By default, this setting is ON for all alerts.

- Turn "TUNE/FLD" knob (6) to select "Vehicle Alerts", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to select one of the settings as follows, and press the knob (6) to determine the selection.

Parking Brake Engaged

Seat Belt Open

Door Open

Low Fuel

- 3) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".
- 4) Following are the warning display related to vehicle system:
- "Parking Brake Engaged":
 This message will appear when the vehicle is moved without releasing the parking brake. Check that parking brake is fully released.
- "Seat Belt Open":
 This message will appear when the vehicle is moving and driver has not fastened his seat belt.

· "Door Open":

This message will appear when any door (except tailgate) is open when the vehicle is moving.

"Low Fuel":

This message will appear to remind to fill the fuel. Fill the fuel immediately.

NOTE:

If you push "DISP/BACK" button (4) while the warning and indicator messages is displayed, the indication will disappear.

Reverse warning priority setting

On applying reverse, volume of audio system gets lowered. By default, this setting is ON. This setting can be turned on or off through the following steps:

- Turn "TUNE/FLD" knob (6) to select "Reverse Warning Priority", and press the knob (6) to determine the selection.
- Turn "TUNE/FLD" knob (6) to select "No" or "Yes", and press the knob (6) to determine the selection.

Auto scroll setting

Auto scroll setting is ON by default. When playing the media files, if the files text contains more characters, ">" mark will appear at the right end up the display screen and the display changes to the next set of characters automatically.

- Turn "TUNE/FLD" knob (6) to select "Auto Scroll".
- Press "TUNE/FLD" knob (6) to select "ON" or "OFF".

RDS (Radio Data System) setting

Enabling this setting displays the messages transmitted by FM station. This setting is ON by default. You can choose to turn ON/OFF this setting through the following steps:

- 1) Turn "TUNE/FLD" knob (6) to select "RDS".
- 2) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".

NOTE:

- Messages are displayed only when RDS signal is included in FM radio waves.
- The messages are displayed program service name only.

Smartphone app setting

Refer to section 5-49 for details about smartphone application.

Smartphone app can be used only when app setting is enable as ON.


Refer to "Suzuki Smartplay Dock application" later in this section for details.

- 1) Turn "TUNE/FLD" knob (6) to select "SmartPhone APP".
- 2) Press "TUNE/FLD" knob (6) to select "ON" or "OFF".

NOTE:

An Apple device can be connected in either Bluetooth® or iPod mode. Bluetooth® mode has higher priority over iPod Mode. In case, you want to connect the Apple device on iPod mode instead and change Smartphone app setting to "OFF".

Listening to the radio

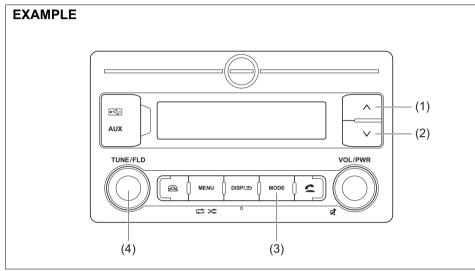

(1) UP button(2) DOWN button(3) "MODE" button

(4) "TUNE/FLD" knob

(A) Frequency

(B) Band

(C) Auto store mode indication (D) RDS data

 
NOTE:

Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station.

Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

Display



69RH145

Selecting the band

- 1) Press and hold "MODE" button (3) to change to the list of available modes.
- Turn "TUNE/FLD" knob (4) to select "FM" or "AM", and press the knob (4) to determine the selection.

NOTE:

You can also switch the display in sequence by short pressing the "MODE" button (3).

Seek tuning

Press and hold UP button (1) or DOWN button (2) to start searching.

The unit stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

Turn "TUNE/FLD" knob (4).

The frequency being received is displayed.

Preset memory

- 1) Tune to the desired station.
- 2) Press "TUNE/FLD" knob (4) to change the display to the preset channel list.
- To store the station, turn "TUNE/FLD" knob (4) to select one of the channels, and press and hold the knob (4) to determine the selection.
- To select station from the preset channel list, press "TUNE/FLD" knob (4) to change the display to the preset channel list.

Turn "TUNE/FLD" knob (4) to select one of the channels, and press the knob (4) to determine the selection.

NOTE:

12 stations can be stored for FM, and 6 stations can be stored for AM.

In case a station is stored over an existing preset station, previous data will be overidden.


Auto store

- Press and hold "TUNE/FLD" knob (4) to start searching when in FM/AM mode. Some stations in good reception will automatically be stored to preset channel list in order, starting from a station whose frequency is the lowest.
- 2) To select station from the preset channel list, press "TUNE/FLD" knob (4) to change the display to the preset channel list while auto store mode indication (C) is displayed.

NOTE:

- Auto Store can be cancelled by pressing the "DISP/BACK" button.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- 6 stations can be preset for FM-AS, and 6 stations can be preset for AM-AS in auto store mode.

Listening to files stored in a USB device

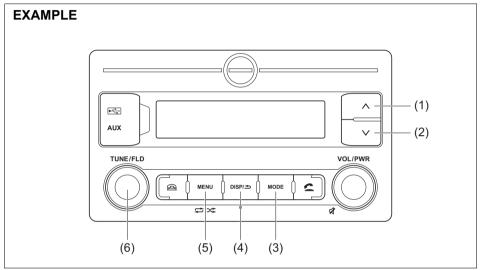


69RH146

- (1) UP button
- (2) DOWN button
- (3) "MODE" button
- (4) "DISP/BACK" button
- (5) "MENU" button (6) "TUNE/FLD" knob
- (A) Track number
- (B) Play time
- (C) Current Active track information (if supported by audio device) (D) Repeat/Random status Indication

NOTICE

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating, smoke and permanent damage to audio system.

 Display



Selecting a USB device mode

- 1) Press and hold "MODE" button (3) to change the display.
- Turn "TUNE/FLD" knob (6) to select "USB", and press the knob (6) to determine the selection.

NOTF.

You can also switch the display in sequence by short pressing the "MODE" button (3).

Selecting a folder

Press twice "TUNE/FLD" (6) knob and then turn "TUNE/FLD" (6) to select the desired folder.

Selecting a track

- Press UP button (1) to listen to the next track.
- Press DOWN button (2) twice to listen to the previous track.

When DOWN button (2) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Press and hold UP button (1) to fast forward the track.
- Press and hold DOWN button (2) to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Repeat playback

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Repeat".
- Press and rotate "TUNE/FLD" knob (6) to select one of the settings as below and then press "TUNE/FLD" knob (6) to determine selection.



FILE

The track currently being played will be played repeatedly.

FOLDER

All the tracks in the folder currently selected will be played repeatedly.

Random playback

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Random".
- Press and rotate "TUNE/FLD" knob (6) to select one of the settings as below and then press "TUNE/FLD" knob (6) to determine selection.



FOLDER

The tracks in the currently selected folder will be played in random order.

ALL

The tracks in the connected USB device will be played in random order.

Display change

Press "DISP/BACK" button (4). Each time the button is pressed, display will change as follows:

Folder name / Track title

File name / Track title

Album name (MP3, AAC only) /

Track title

Artist name / Track title

NOTE:

- "NO TITLE" will be displayed when there is no text information in the file currently being played.
- If text data contains more characters than the display area, ">" mark will appear at the right end.

Notes on USB device

Compatible USB devices

- USB mass storage class
 For details as to whether your USB memory/USB audio is compatible with USB mass storage class, please contact the USB memory/USB audio manufacturer
- Audio file MP3 (.mp3) / WMA (.wma) / AAC (.m4a) / AAC (.aac)
- File system FAT 16/32, VFAT (supporting long file name)
- USB standard compatibility 1.1/2.0 full speed
- · Maximum current less than 2.1 A
- If a USB hub or extension cable is connected to the audio system, it may not be recognized. In this case, directly connect the USB device to the audio system.
- Devices such as MP3 players/mobile phones/digital cameras may not be recognized as audio systems for playing music and 'USB READ ERROR' message may be displayed.

USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port present on audio system
- Depending on the USB flash drive that you are using, (non-brand product, USB flash drive that has been externally damaged) it may disable connection or cause unstable operation.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand.
 We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA format.

Playing MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.
- The DRM (Digital Rights Management) file cannot be played.

Compatible compression formats MP3

Bit rate

MPEG1 Audio Layer III: 32 up to 320 kbps MPEG2 Audio Layer III: 8 up to 160 kbps MPEG2.5 Audio Layer III: 8 up to 160 kbps VBR: up to 384 kbps (MAX.)

- Sampling frequency MPEG1 Audio Layer III: 32/44.1/48 kHz MPEG2 Audio Layer III: 16/22.05/24 kHz MPEG2.5 Audio Layer III: 8/11.025/12 kHz
- Channel Stereo/Joint stereo/Dual channel/ Monaural
- ID3 tag ID3v1.x/ID3v2.x

WMA

- Windows Media Audio Ver.7/Ver.8/Ver.9 Standard compliant
- Bit rate: 32 up to 320 kbps
- VBR: up to 384 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- WMA tag: Ver.8.0
- · Channel: 2 Channels

AAC

- Bit rate: 16 up to 320 kbps
- VBR: up to 320 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- AAC tag: iTunes m4a metadata


Maximum number of files/folders

- Maximum number of files: 2500
- Maximum number of files in a folder: 255
- Maximum number of folders: 255
- Root folder and empty folder are included.
- · Maximum depth of tree structure: 8


NOTICE

Never use ".mp3", ".wma" or ".m4a" as a file name extension if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.

Listening to an iPod

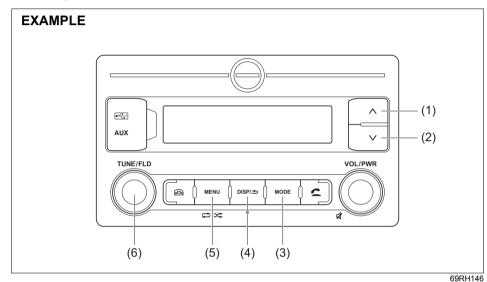

Display

 

(1) UP button

- (2) DOWN button
- (3) "MODE" button
- (4) "DISP/BACK" button
- (5) "MENU" button (6) "TUNE/FLD" knob
- (A) Track number
- (B) Play time
- (C) Current Active track information (if supported by audio device)

Selecting an iPod mode

- 1) Press and hold "MODE" button (3) to
- change the display.

 2) Turn "TUNE/FLD" knob (6) to select "iPod", and press the knob (6) to determine the selection.

NOTE:

You can also switch the display in sequence by short pressing the "MODE" button (3).

Selecting a track

- Press UP button (1) to listen to the next
- Press DOWN button (2) twice to listen to the previous track. When DOWN button (2) is pressed

once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Press and hold UP button (1) to fast forward the track.
- Press and hold DOWN button (2) to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Repeat playback

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Repeat".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.



FOLDER

All the tracks in the folder currently selected will be played repeatedly.

SONG

The track currently being played will be played repeatedly.

NOTE:

Settings may be displayed depending on the model of iPod.

Random playback

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Random".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.



SONG

The tracks in the iPod will be played in random order.

NOTE:

Settings may be displayed depending on the model of iPod.

Display change

Press "DISP/BACK" button (4). Each time the button is pressed, display will change as follows:

Playlist name /Track title
(Playlist mode only)

Artist name / Track title

Album name / Track title

Genre / Track title

NOTE:

- "NO TITLE" will be displayed when there is no text information in the file currently being played.
- If text data contains more characters than the display area, ">" mark will appear at the right end.

Selecting a category

Categories such as Artist, Album, Podcast, Genre, Audiobook, Playlist, Song may be displayed depending on the model of iPod.

- Press and hold "TUNE/FLD" knob (6) to change the display.
- Turn "TUNE/FLD" knob (6) to select one of the categories, and press the knob (6) to determine the selection.

Notes on iPod/iPhone

Made for iPod/iPhone

- iPod touch (6th generation)*
- iPod touch (5th generation)*
- iPod nano (7th generation)*
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- · iPhone SE
- · iPhone 6s Plus iPhone 6s
- · iPhone 6 Plus
- · iPhone 6
- iPhone 5s
- iPhone 5c
- iPhone 5
- * Some functions may not be available depending on the model of iPod.

iPod




69RH2011

- · Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- Please note that the use of this accessory with an Apple product may affect wireless performance.
- · Apple, iPod touch, iPod nano, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

NOTE:


Please do not connect iPod accessory such as iPod remote control or headphones while connecting the iPod with the unit. Unit may not operate correctly.

AUX function

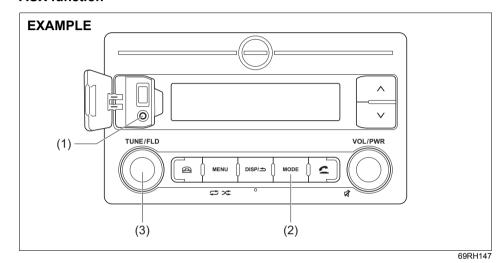

- (1) AUX socket(2) "MODE" button(3) "TUNE/FLD" knob

 Display



69RH160

AUX connection

To listen to auxiliary audio sources (sold separately) through the unit, follow the instruction below.

- Connect the auxiliary audio source to the AUX socket (1) with an AUX cable.
 Press and hold "MODE" button (2) to change the display.
 Turn "TUNE/FLD" knob (3) to select
- "AUX", and press the knob (3) to determine the selection.

NOTE:

You can also switch the display in sequence by short pressing the "MODE" button (2).


A CAUTION

- Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.


NOTE:

- Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.
- The volume and tone controls of the auxiliary audio source can be adjusted on the unit.
- In AUX mode, the volume which is set is different from another mode.

Setting of Bluetooth® devices

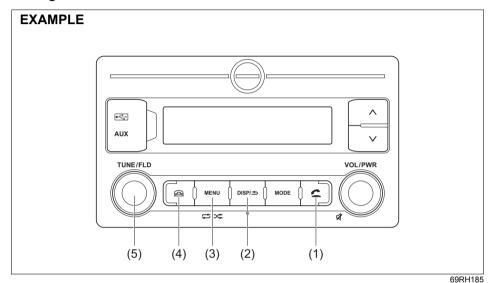

Steering switch (if equipped)

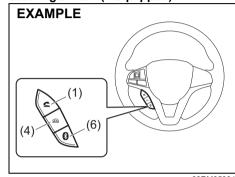

69RM05004

- (1) OFF HOOK button
 (2) "DISP/BACK" button
 (3) "MENU" button
 (4) ON HOOK button
 (5) "TUNE/FLD" knob
 (6) Bluetooth[®] setting button

WARNING

Do not register or set the Bluetooth[®] device while driving. Stop your vehicle in a safe area before registering the device.

Bluetooth[®] related settings can be entered only when the vehicle is in stationary condition.

Registration of Bluetooth® devices

To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system. Up to 5 Bluetooth® devices can be registered.

NOTE:

- Certain functions cannot be used depending on the Bluetooth[®] device.
- Refer to the instruction manual of your Bluetooth[®] device regarding the operation method of Bluetooth[®].
- If the pairing cannot be established, the connection operation is canceled.
 For the Bluetooth[®] device pairing method, refer to the instruction manual of your Bluetooth[®] device or try pairing again.
- 1) Press "MENU" button (3). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- 3) Turn "TUNE/FLD" knob (5) to select "Pairing", and press the knob (5) to determine the selection.
- Turn "TUNE/FLD" knob (5) to select "Name & Passkey", and press the knob (5) to determine the selection.

NOTE:

If you have no Bluetooth® device to be registered, you can also switch the display to "Pairing Name" and "Passkey" at once by pressing the Bluetooth® setting button (6),

OFF HOOK button (1) or ON HOOK button (4).

Operate and register the Bluetooth[®] device.

Secure Simple Pairing (SSP) incompatible Bluetooth® device:

Enter the passkey into the Bluetooth® device.

Secure Simple Pairing (SSP) compatible Bluetooth® device:

Select "Yes" to register the Bluetooth® device.

It is possible to automatically register devices depending on the type of Bluetooth® device.

NOTE:

If the Bluetooth[®] device contains music player and mobile phone function, both functions will be registered simultaneously. When deleting a Bluetooth[®] device, both functions will be deleted simultaneously.

Selection from the Bluetooth® phone list

The list of paired mobile phones is displayed and the various settings can be changed.

- 1) Press "MENU" button (3). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- 3) Turn "TUNE/FLD" knob (5) to select "Pairing", and press the knob (5) to determine the selection.

NOTE:

If you have the mobile phone which currently connected, you can also switch the display to "Pairing" at once by pressing the Bluetooth[®] setting button (6).

- 4) Turn "TUNE/FLD" knob (5) to select "Pairing Phone List", and press the knob (5) to determine the selection.
- Turn "TUNE/FLD" knob (5) to select one of the registered mobile phones, and press the knob (5) to determine the selection.

NOTE:

">>" mark appears at the left end of the currently connected mobile phone.

- Turn "TUNE/FLD" knob (5) to select one of the settings as follows, and press the knob (5) to determine the selection.
- "Connect":

Connect a registered mobile phone.

"Disconnect":

Disconnect a registered mobile phone.

"Delete":

Delete a registered mobile phone.

NOTE:

If a device is deleted from phone list, it will be deleted from audio list as well.

Selection from the Bluetooth® audio list The list of paired Bluetooth® audio is displayed and the various settings can be changed.

- 1) Press "MENU" button (3). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- Turn "TUNE/FLD" knob (5) to select "Pairing", and press the knob (5) to determine the selection.

NOTE:

If you have the Bluetooth® audio which currently connected, you can also switch the display to "Pairing" at once by pressing the Bluetooth® setting button (6).

- 4) Turn "TUNE/FLD" knob (5) to select "Pairing Audio List", and press the knob (5) to determine the selection.
- 5) Turn "TUNE/FLD" knob (5) to select one of the registered Bluetooth® audio devices, and press the knob (5) to determine the selection.

NOTE:

">>" mark appears at the left end of the currently connected Bluetooth[®] audio.

- Turn "TUNE/FLD" knob (5) to select one of the settings as follows, and press the knob (5) to determine the selection.
- "Connect": Connect a registered Bluetooth[®] audio.

- "Disconnect":
 Disconnect a registered Bluetooth[®]
 audio.
- "Delete": Delete a registered Bluetooth[®] audio.

NOTE:

If a device is deleted from audio list, it will be deleted from phone list as well.

Managing paired devices

The devices paired with the audio unit can be managed from the "Bluetooth® settings" screen. You can connect one Bluetooth® device as audio and another Bluetooth® device as phone from registered Bluetooth® devices simultaneously.

Change of passkey

- Press "MENU" button (3). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- 3) Turn "TUNE/FLD" knob (5) to select "Pairing", and press the knob (5) to determine the selection.

NOTE:

If you have the Bluetooth[®] device which currently connected, you can also switch the display to "Pairing" at once by pressing the Bluetooth[®] setting button (6).

4) Turn "TUNE/FLD" knob (5) to select "Edit Passkey", and press the knob (5) to determine the selection.

- 5) Turn "TUNE/FLD" knob (5) to select a number for the first digit, and press the knob (5) to determine the selection. Select and determine numbers for from the second to fourth digits in order in the same manner.
- Press "TUNE/FLD" knob (5) to determine the passkey setting.

Automatic connection with the Bluetooth[®] device

If the "BT Power" is set to "ON", turning the ignition switch to "ON" position will automatically connect the registered Bluetooth® device.

- With the automatic connection, the Bluetooth[®] device that was connected last will be prioritized.
- Press "MENU" button (3). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- 3) Turn "TUNE/FLD" knob (5) to select "Initial Settings", and press the knob (5) to determine the selection.
- 4) Turn "TUNE/FLD" knob (5) to select "BT Power".
- 5) Press "TUNE/FLD" knob (5) to select "ON" or "OFF".

NOTE:

 When "BT Power" is set to "OFF", the audio system disconnects from the registered Bluetooth[®] device.

 If "BT Power" is set to "OFF", the audio system will not automatically reconnect the next time the ignition is switched on.

The device status will be displayed

- 1) Press "MENU" button (3). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- Turn "TUNE/FLD" knob (5) to select "Pairing", and press the knob (5) to determine the selection.

NOTE:

If you have the Bluetooth[®] device which currently connected, you can also switch the display to "Pairing" at once by pressing the Bluetooth[®] setting button (6).

 Turn "TUNE/FLD" knob (5) to select "Device Information", and press the knob (5) to determine the selection. The device name and address will be displayed.

Initialize Bluetooth® settings

It is possible to initialize the Bluetooth[®] settings.

A CAUTION

- Do not initialize the settings while driving. Stop your vehicle in a safe area before initializing the device.
- Initialize with caution. Initialized settings cannot be restored.

- Press "MENU" button (3). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (5) to select "Bluetooth Settings", and press the knob (5) to determine the selection.
- 3) Turn "TUNE/FLD" knob (5) to select "Initial Settings", and press the knob (5) to determine the selection.
- 4) Turn "TUNE/FLD" knob (5) to select "Initialize BT", and press the knob (5) to determine the selection.
- Turn "TUNE/FLD" knob (5) to select "YES", and press the knob (5) to determine the selection.
- · Items to be initialized to default value:
- BT Power
- Talk Volume
- Ring Volume

Notes on Bluetooth®



73R0209

 The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.

This telecommunication equipment con-

forms to the requirements of the National Telecommunications Commission.

Stop using this unit and a Bluetooth[®] ready device whenever requested. This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.


Profile

- · SSP (Secure Simple Pairing)
- PBAP (Phone Book Access Profile)
- OPP (Object Push Profile)
- HFP (Hand-Free Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)
- · SPP (Serial Port Profile)


NOTE:

- After the Audio system is turned ON, it takes a few seconds to detect and set up Bluetooth[®] related settings.
- For Bluetooth related issues, unpair, restart your smartphone and try again.

Bluetooth® hands-free

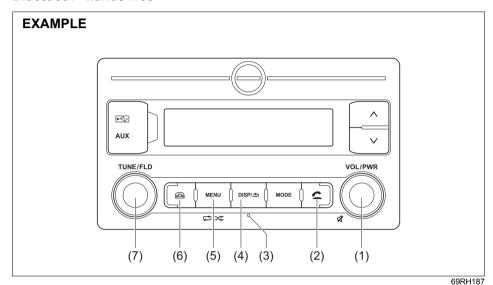

Steering switch (if equipped)

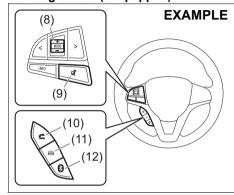

- 69RH188
- (1) "VOL/PWR" knob
 (2) OFF HOOK button (on audio)
 (3) Microphone
 (4) "DISP/BACK" button
 (5) "MENU" button
 (6) ON HOOK button (on audio)
 (7) "TUNE/FLD" knob
 (8) Volume button
 (9) Mute button
 (10) OFF HOOK button (on steering wheel)
 (11) ON HOOK button (on steering wheel)
 (12) Bluetooth® setting button

NOTICE

- Do not leave your mobile phone inside your vehicle. If the temperature inside the vehicle increases, it may damage your mobile phone.
- When disposing your vehicle, make sure to delete all personal information saved to the audio system.
- The following hands-free data must be deleted from the audio system.
- Speed dial
- Reception history/Incoming call history
- Bluetooth[®] phonebook data

NOTE:

- Please keep your phone volume low. The person's voice who you are talking to may be heard outside of the vehicle and increase the voice echo. When talking on the phone, speak clearly towards the microphone.
- In the following cases, your voice may not be heard clearly by the person on the other line:
- When driving on unpaved roads. (If there is loud traffic noise.)
- When driving at high speeds.
- When driving with the window open.
- If the air conditioner is blowing directly towards the microphone.
- When the sound of the air conditioner fan is loud.

- When there is an adverse effect to the sound quality of the phone or network that you are using.
- The audio system may not function under the following conditions.
- When the phone power is not turned on.
- When the mobile phone is out of service.
- When the mobile phone is not connected.
- When the mobile phone battery is low
- The Bluetooth[®]'s hands-free operation is dependent upon the mobile phone's compatibility.
- The Bluetooth[®]'s hands-free performance is affected by the driving conditions of mobile phone networks, handsets and vehicles.
- The audio system's performance may be restricted due to the model of your mobile phone.
- Bluetooth[®], phone battery level and network signal strength status are displayed only when a phone is connected to the system.
- The information depends on status received from the phone.
- The call, contact synchronization action is controlled from the smartphone.

To use the hands-free function with this unit, it is required to register the phone in advance.

It is possible to register a mobile phone and register the phone number to the audio system as follows:

- Up to 1,000 phone numbers can be saved for every registered mobile phone.
- Up to 30 phone numbers of the latest calls can be stored. (30 calls including missed, received and dialed call).
- When the call history exceeds 30 calls, they are deleted from the oldest one first, and the latest call history information is displayed in descending order.
- Up to 6 phone numbers can be saved to the speed dial list.
- When attempts to establish the pairing fail within 60 seconds, the connecting operation will be canceled. Try to establish the pairing again or refer to the manual of the phone in use for how to establish the pairing with the phone.

Answer the phone

Press OFF HOOK button (2) or (10).

 When you press the ON HOOK button (6) or (11) during an incoming call, you can block the call. (Only for compatible phone units)

NOTE:

- If you receive a call from a registered phone, the caller's name will appear on the screen.
- If you receive a call from an unregistered phone, only the caller's phone number will appear on the screen.

Hang up the phone

When the call is finished, press the ON HOOK button (6) or (11).

Call waiting

When a phone call is interrupted by a second call, it is possible to hold the current call and answer the other incoming call. To talk to incoming call:

- Press the OFF HOOK button (10) or (2).
 The current call will be put on hold.
- Every time you press OFF HOOK button (10) or (2), the phone call will be switched to the call which was put on hold.
- When the current call is completed, the call which was put on hold will connect.

To refuse the incoming call:

Press the ON-HOOK button (11) or (6).

NOTE:

This function can only be used with phone units that are compatible with call waiting.

Move call to Private mode

If you wish to move a call to private mode, press the "DISP/BACK" button (4).

To move the call back to Handsfree mode, press the OFF/ON hook button.

Move call to Handsfree mode

If you wish to move the call back to Handsfree Mode, press the "ON/OFF HOOK" button.

Mute the reception volume

Press "VOL/PWR" knob (1) or mute button (9).

 To deactivate the mute volume, press "VOL/PWR" knob (1) or mute button (9) again.

Adjust the reception volume

- Turn "VOL/PWR" knob (1) during a call. Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press volume button (8) during a call.
 Pressing the button up increases the volume; pressing the button down decreases the volume.

NOTE:

The volume and microphone sensitivity settings vary depending on the specifications of each mobile phone.

Adjust the ringtone volume

- Turn "VOL/PWR" knob (1) during an incoming call.
- Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press volume button (8) during an incoming call. Pressing the button up increases the volume; pressing the button down decreases the volume.

Adjust the volume with the Bluetooth® settings

- Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Initial Settings", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Talk volume" or "Ring volume", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to adjust the volume, and press the knob (7) to determine the selection.

Make a call

Press the OFF HOOK button (2) or (10) to enter the telephone mode.

Use the phonebook

- Turn "TUNE/FLD" knob (7) to select "Contacts", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select the desired initials, and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select the desired name, and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select the desired phone number, and press the knob (7) or OFF HOOK button (2) or (10).

Use the call history

- Turn "TUNE/FLD" knob (7) to select "Call Log", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "All", "Missed", "Dialed" or "Received", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select the desired name or phone number, and press the knob (7) or OFF HOOK button (2) or (10).

Use the speed dial

- Turn "TUNE/FLD" knob (7) to select "Speed Dial", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select the desired name or phone number, and press the knob (7) or OFF HOOK button (2) or (10).

NOTE:

Speed dial numbers must be registered before this function can be used.

Transfer all contacts from your mobile phone

- 1) Press "MENU" button (5). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Setup Contacts", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Overwrite", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Delete the registered phonebook

- Press "MENU" button (5). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.

- Turn "TUNE/FLD" knob (7) to select "Setup Contacts", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Delete Contacts", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Delete the call history

- 1) Press "MENU" button (5). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Setup Contacts", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Delete Call Log", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Registration in speed dial

- Press "MENU" button (5). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.

- Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- 4) Turn "TUNE/FLD" knob (7) to select "Add Speed Dial", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Add/Modify", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select the desired speed dial number, and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select the desired initials, and press the knob (7) to determine the selection.
- 8) Turn "TUNE/FLD" knob (7) to select the desired name, and press the knob (7) to determine the selection.
- 9) Turn "TUNE/FLD" knob (7) to select the desired Phone number, and press the knob (7) to determine the selection.
- 10)Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.

Deletion of speed dial

- 1) Press "MENU" button (5). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.

- 4) Turn "TUNE/FLD" knob (7) to select "Add Speed Dial", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Delete", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Delete All" or "Delete Contact", and press the knob (7) to determine the selection.
 - If you select "Delete Contact", select the name for delete.
- Turn "TUNE/FLD" knob (7) to select "YES", and press the knob (7) to determine the selection.


Automatic transfer of the phonebook/ call history

When registering the mobile phone, you can select to automatically transfer the phonebook and call history from your device each time after phone is connected. Select according to the following steps.


- Press "MENU" button (5). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (7) to select "Bluetooth Settings", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Dial", and press the knob (7) to determine the selection.
- Turn "TUNE/FLD" knob (7) to select "Setup Contacts", and press the knob (7) to determine the selection.
- 5) Turn "TUNE/FLD" knob (7) to select "Auto Transfer".

6) Press "TUNE/FLD" knob (7) to select "ON" or "OFF".

Bluetooth® audio

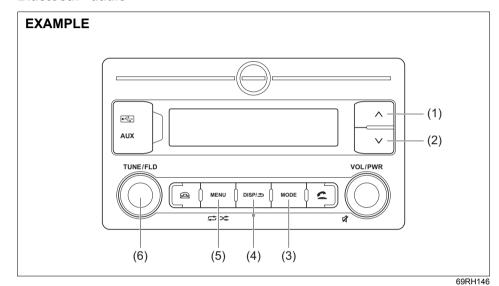

Display

 

(1) UP button

(2) DOWN button

(3) "MODE" button

(4) "DISP/BACK" button

(5) "MENU" button (6) "TUNE/FLD" knob

(A) Track number

(B) Play time

(C) Text information display

NOTE:

Some functions may not be usable on some Bluetooth® devices.

Selecting Bluetooth® audio mode
1) Press and hold "MODE" button (3) to

change the display.

2) Turn "TUNE/FLD" knob (6) to select "Bluetooth", and press the knob (6) to determine the selection.

NOTE:

You can also switch the display in sequence by short pressing the "MODE" button (3).

Selecting a group (only for supported models)

Turn "TUNE/FLD" knob (6) to select a group.

Selecting a track

- Press UP button (1) to listen to the next track
- Press DOWN button (2) twice to listen to the previous track.

When DOWN button (2) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Press and hold UP button (1) to fast forward the track.
- Press and hold DOWN button (2) to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

NOTE:

Fast forwarding and fast rewinding function can be performed only if it is supported by the player in which the track is being played.

Repeat playback (if supported by device)

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Repeat".
- Press and then turn "TUNE/FLD" knob (6) to select one of the settings as below and press "TUNE/FLD" knob (6) again to determine the selection.

→ OFF \$\text{\$\displays{0}}\$ SONG → GROUP

SONG

The track currently being played will be played repeatedly.

• GROUP

All the tracks in the group currently selected will be played repeatedly.

NOTE:

Settings may be displayed depending on the Bluetooth $^{\mbox{\scriptsize B}}$ device.

Random playback (if supported by device)

- 1) Press and hold "MENU" button (5) to change the display.
- 2) Turn "TUNE/FLD" knob (6) to select "Random".
- 3) Press "TUNE/FLD" knob (6) to select one of the settings as follows.



GROUP

The tracks in the currently selected group will be played in random order.

• ĂH

 
The tracks in the connected device will be played in random order.

NOTE:

Settings may be displayed depending on the Bluetooth® device.

Display change

Press "DISP/BACK" button (4). Each time the button is pressed, display will change as follows:



VOTE.


- "NO TITLE" will be displayed when there is no text information in the device currently being played.
- If text data contains more characters than the display area, ">" mark will appear at the right end.

Disclaimer for Bluetooth® function

- Depending on the mobile phone models. some phones may not be compatible fully or partially (some function may be restricted).
- Media playback and handsfree calling through third-party applications is not guaranteed and may have limited support.
- Playback, display contents, connectivity or voice quality etc. may get affected depending on circumstances.
- · After the ignition switch is turned to "ON" position the audio system takes few seconds to detect and connect to the Bluetooth® device (if already paired).
- · Make sure that you are aware of all applicable local laws and accordingly use Bluetooth® device.

Steering switch (if equipped)


Use the steering wheel button to operate the basic functions of the audio system.

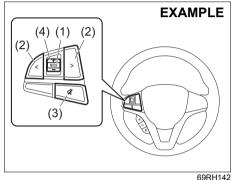

- (1) "MODE" button
- (2) Selection button
 - Selecting the radio station
 - Selecting the track (USB (iPod), Bluetooth[®] audio mode)
- (3) Mute button
- (4) Volume button

"MODE" button (1)

Each time the button is pressed, the mode will change as follows:

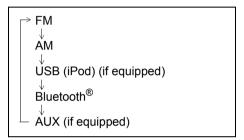

Selection button (2)

- FM. AM mode:
- Press ">" to transfer to the next preset channel.
- Press "<" to transfer to the previous preset channel.
- Press ">" for 1 second or longer, it will search for receivable stations at a high frequency.
- Press "<" for 1 second or longer, it will search for receivable stations at a low frequency.
- USB (iPod), Bluetooth® audio mode:
 - Press ">" to transfer to the next song. With the folder operation mode, it will transfer to the next folder.

- Press "<" to return to the beginning of the currently playing song. Pressing it twice consecutively will return to the previous song.
- With the folder operation mode, it will return to the previous folder.
- Press ">" for 1 second or longer to fast-forward the song. When the button is released, it will stop fast-forwarding.
- Press "<" for 1 second or longer to rewind the song. Releasing the button can stop rewinding.

Mute button (3)


- Hands-free/iPod mode: Each time you press the button the mute will switch from ON/OFF.
- USB mode: Press the button during playback to temporarily stop the playback.

Volume button (4)

- · Hands-free mode:
- Press "+" during an outgoing or ingoing call, the reception/ringtone sound will increase.
- Press "-" during an outgoing or ingoing call, the reception/ringtone sound will decrease.
- Press "+" during an outgoing call, the ringtone sound will increase.

 - Press "-" during an outgoing call, the
- ringtone sound will decrease.
- Radio, USB (iPod), Bluetooth® audio. AUX mode:
- Press "+", the volume will increase.
- Press "-", the volume will decrease.

Anti-theft feature

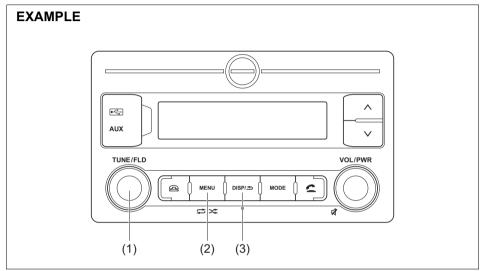

69RH150

 
- (1) "TUNE/FLD" knob
- (2) "MENU" button
- (3) "DISP/BACK" button

The anti-theft function is intended to discourage thefts, such as that the audio system becomes inoperable when it is installed on other vehicles.

This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the battery is disconnected, the unit will become inoperable until the PIN is reentered.

Display



69RH162

Setting the anti-theft function

- 1) Press "MENU" button (2). Setup menu will be displayed.
- 2) Turn "TUNE/FLD" knob (1) to select "System Settings", and press the knob (1) to determine the selection.
- 3) Turn "TUNE/FLD" knob (1) to select "Security", and press the knob (1) to determine the selection.
- 4) Turn "TUNE/FLD" knob (1) to select "ON", and press the knob (1). "----" will be displayed.
- 5) Enter a 4-digit number to be registered as PIN by turning and pressing the "TUNE/FLD" knob (1).
- After entering 4-digit number, press "TUNE/FLD" knob (1) on "Enter" indication. "Do you want to set XXXX as password" will be displayed.
- 7) Turn "TUNE/FLD" knob (1) to select "YES", and press the knob (1). "XXXX is set as password" will be displayed and the anti-theft function will be set.

NOTE:

Take a note of the registered PIN and keep it for the future use.

Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- 1) Press "MENU" button (2). Setup menu will be displayed.
- Turn "TUNE/FLD" knob (1) to select "System Settings", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD" knob (1) to select "Security", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD" knob (1) to select "OFF", and press the knob (1). "----" will be displayed.
- Enter a 4-digit number to be registered as PIN by turning and pressing the "TUNE/FLD" knob (1).
- After entering 4-digit number, press "TUNE/FLD" knob (1) on "Enter" indication. The anti-theft function will be canceled.

NOTE:

To change your PIN, first delete your current PIN, and then set a new one.

Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the battery is replaced, etc, it is required to enter the PIN to make the unit operable again.

- 1) Set the ignition switch to "ACC" position.
 - "SECURITY" will be displayed.
- Press "TUNE/FLD" knob (1). "----" will be displayed.
- 3) Enter a 4-digit number to be registered as PIN by turning and pressing the "TUNE/FLD" knob (1).
- Press and hold "TUNE/FLD" knob (1) for a while.
 - When the same PIN as registered is entered, the power of the audio system will be turned off automatically and it will become operable again.

NOTE:

If an incorrect PIN is entered, "ERROR" and the total number of incorrect entry attempts will be displayed.

If an incorrect PIN is entered 10 times or more, "Contact Dealer" will be displayed and the audio system will become inoperable.

"Suzuki Smartplay Dock" application

"Suzuki Smartplay Dock" is an application that allows:

- To control the audio system
- Access smartphone features such as calling & messaging.
- *Access vehicle information such as Instantaneous & average fuel consumption, history (last 5 driving cycle & last 5 refuel cycle) fuel consumption, driving range & alerts.

NOTE: *Availability of these features is subject to vehicle or fuel type.



69RM05008

This application can be downloaded on smartphone through Google Play store or Apple App Store.

WARNING

While driving, ensure adherence to all traffic regulations. Insufficient attention to the road and traffic may cause an accident. It is recommended to familiarize with the tutorial section of application before actual usage.

In vehicle running condition, the application can be used in landscape mode only.

NOTE:

- For further information on compatible phones and application download process, please refer to MARUTI SUZUKI website.
- Application is compatible with smartphones supporting iOS version 9.0, Android OS 5.0 and above.
- Since this audio allows pairing of 2 devices on Bluetooth® simultaneously, application is supported on the phone which is paired through handsfree profile.
- Application services are subject to change. It is recommended to install the latest updates for optimal experience.
- Application functioning is dependent on mobile data carrier and smartphone hardware, OS performance.
- The smartphone manufacturers are responsible for the content and functions of smartphone applications. The device

merely provides the option to display and operate these applications.

- If many apps are installed, your smartphone might work slowly.
- For information on using smartphone applications, please read your smartphone instruction manual.

TroubleshootingWhen encountering a problem, check and follow the instructions below.
If the described suggestions do not solve the problem, it is recommended to take the unit to a Maruti Suzuki authorised workshop.

Problem	Possible cause	Possible solution
Common		
Unable to operate	The security function is on.	When "SECURITY" is displayed, enter the PIN. When "Contact Dealer" is displayed, contact a Maruti Suzuki authorised workshop.
Unable to turn on the power (No sound is produced)	Fuse is blown.	Contact a Maruti Suzuki authorised workshop.
Radio		
Much noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.
USB		
Playback does not start when	There is no supported format file to play on this unit.	Check the file format.
the USB device is connected	The current consumption of the USB device exceeds 2.1 A.	Use a USB device with a current consumption lower than 2.1 A.
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.


Display	Possible solution	Display
Bluetooth [®]		
Pairing failed	The distance between this unit and the Bluetooth [®] ready device is too far, or a metallic object may be located between the Bluetooth [®] ready device and this unit.	Change the location of the Bluetooth [®] ready device.
	The Bluetooth [®] function of the Bluetooth [®] ready device is off.	Refer to the manual of the Bluetooth [®] ready device. (Some devices have the power saving function that automatically activates after a certain time.)
Unable to receive a call	Your current location may be out of service area.	Drive your vehicle to the service area of the phone.
The voice quality of hands-free is low (Distortion, noise etc.)	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit. Check the microphone opening for obstruction on audio device.

Error display messagesThe following messages (flashing) will be displayed onto the screen depending on the condition of the audio system.

Display	Possible solution
USB READ ERROR	When the USB device or iPod reading error occurs, this message will be displayed. Reconnect the USB device or iPod connection cable. When the Bluetooth [®] audio playback malfunction occurs, this message will be displayed. Check the Bluetooth [®] audio body.
ERROR 1	When the USB device or iPod communication error occurs, this message will be displayed.
iPod ERROR 1	Reconnect the USB device or iPod connection cable.
ERROR 2	When the USB device or iPod mechanical error occurs, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod.
ERROR 3	If the USB device or iPod does not operate due to an over current, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod.
HUB NOT SUPPORTED	When the USB hub is connected, this message will be displayed. Disconnect the USB hub.
UNSUPPORTED	When an unsupported iPod is connected, this message will be displayed. Connect the supported iPod.
MEDIA NOT SUPPORTED	When an unsupported USB device is connected, this message will be displayed. Connect the supported USB device. When the Bluetooth [®] audio playback malfunction occurs, this message will be displayed. Check the Bluetooth [®] audio body.
NO MUSIC	When an empty USB device or iPod is connected, this message will be displayed. Connect the USB device or iPod containing files with the playable extension.


Display	Possible solution
VEHICLE DATA NOT AVAILABLE	Contact your nearest Maruti Suzuki authorised workshop for troubleshooting.
MEMORY FULL	When the maximum limit for number of phonebook data transfer is reached, this message will be displayed. Delete registered data of unnecessary number in phonebook and try to transfer the register phone numbers in the phonebook again.

Talk button (if equipped)

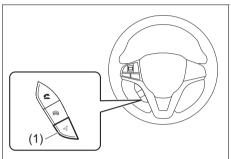

69RH050010

- (1) Talk button
- It can be used with a device having a voice recognition function. To use the function, it is necessary to perform a corresponding setting on your device. For operation of the audio system or the navigation system, refer to the supplementary manual, provided along with it.

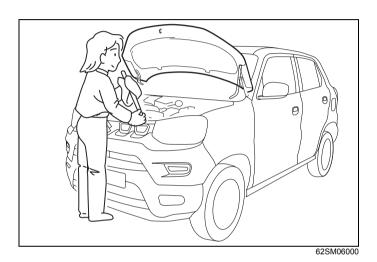

INSPECTION AND MAINTENANCE

Maintenance schedule	6-2
Periodic maintenance schedule	6-2
Drive belt	
Engine oil and filter	6-6
Engine coolant	
Air cleaner	
Spark plugs	
Gear oil	
Clutch pedal (if equipped)	
Fuel filter	
Brakes	
Steering	
Tires	
Battery	
Fuses	
Headlight aiming	
Bulb replacement	
Wiper blades	
Windshield washer fluid	
Air conditioning system (if equipped)	
an conunioning system (ii equippeu)	บ-ว เ

6



62SM03001

WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

 To prevent damage or unintended activation of the airbag system or seat belt pretensioner system (if equipped), check that the battery is disconnected and the ignition switch has been in "LOCK" position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch airbag system components, seat belt pretensioner system (if equipped) components or wires.

(Continued)

WARNING

(Continued)

The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification

- Do not leave the engine running in garages or other confined areas.
- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, check that the parking brake is set fully and the transmission is in Neutral (for manual transmission or Auto Gear Shift vehicles).
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.

(Continued)

▲ WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets.
 Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by Maruti Suzuki authorised workshop.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI SUZUKI genuine replacement parts or their equivalent.

Periodic Maintenance Schedule

"C": Clean

"R": Replace or Change

"I": Inspect, clean, adjust, lubricate or replace as necessary

"L": Lubricate

"T": Tighten to Specified Torque

"O": Rotate

NOTE:

This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

Interv	al: This interval should be judged by odometer r	eading	FREE	INSPEC	CTION		PERI	ODIC MA	AINTENA	NCE AT	COST		
or mo	nths, whichever comes first.	km (x1000)	1	5	10	20	30	40	50	60	70	80	
		months	1	6	12	24	36	48	60	72	84	96	
ENGI	NE	•	l .		L			•		•	L	ı	
1-1.	Water pump drive belt (Wear)		-	-	I	I	I	I	I	I	I	R	
1-2.	Engine coolant (Level, Leakage)		ı	ı	I	R	I	R	I	R	I	R	
1-3.	Engine oil, engine oil filter and drain plug gask	et (Level, Leakage)	!	I	R	R	R	R	R	R	R	R	
1-4.	Cooling system hoses and connections (Leaka	ge and Damage)	I	ı	ı	ı	ı	ı	ı	ı	ı	I	
1-5.	Engine mounting and manifold fixing (Loose Da	amage)	-	-	I	-	I	-	I	-	I	-	
1-6.	Exhaust system (Noise, Leakage etc.)		-	ı	-	ı	-	I	-	I	-	I	
1-7.	Positive crank case ventilation system		_		_	1	_	_	_	_	_		
	(Hoses, Connections and Valve)			·									
IGNIT	TION												
2-1.	Spark plug	For petrol		Replace every 100,000 KM or 84 months whichever comes first									
		For CNG	Replace	Replace every 50,000 KM or 48 months whichever comes first									
FUEL													
3-1.	Air cleaner filter element		Clean every 5,000 KM. Replace after every 40,000 KM.										
	Dusty Cor		Clean e	Clean every 2,500 KM or as required. Replace after every 40,000 KM.									
3-2.	Fuel tank cap, fuel lines and connections (Leal	rage and Damage)	-	I	-	-	-	- 1	-	-	-	1	
3-3.	Fuel filter		-	1	-	-	-	-	-	-	-	R	
	CH AND TRANSMISSION												
4-1.	Clutch pedal (Play)		I	I	I	I	I	I	I	I	I	ı	
4-2.	-2. Clutch slipping (Dragging or Excess Damage)			I		I	I	I	I	I		I	
4-3.	Manual transmission oil / Auto Gear Shift oil (L	evel, Leakage)			I	I	I	I	I			I	
4-4.	Gear shifter (Operation)			ı		I	I	I	I	I		I	
4-5.	AGS Actuator oil (Level, Leakage)	AGS model		I		I	I	I	I	I			

Interv	al: This interval should be judged by odometer reading		FREE	INSPEC	CTION		PERI	ODIC MA	AINTENA	NCE AT	COST		
or mo	nths, whichever comes first.	km (x1000)	1	5	10	20	30	40	50	60	70	80	
		months	1	6	12	24	36	48	60	72	84	96	
DRIV	E SHAFT	l.						II.			I.		
5-1.	Drive shaft noise		ı	I	I	I	I	I	I	I	I	I	
5-2.	Drive shaft boot (Damage)		-	I	- 1	I	I	I	I	I	I	I	
BRA	Œ		•		•	•	•	•	•	•	•		
6.1	Droke fluid (Level Leekers)			ı	I	ı	ı	I	ı	ı	I	I	
6-1.	Brake fluid (Level, Leakage)		Replace every 40,000 KM or 24 months whichever comes first										
6-2.	Brake pedal (Pedal - carpet clearance)		ı		I	ı	I	1	ı	I	ı	I	
6-3.	Parking brake lever and cable (Play, Damage)		I	I	I	I	I	I	I	I	I	I	
6-4.	Brake disc and pad (Wear)		-	ı	ı	I	I	ı	I	I	I	ı	
6-5.	Brake drum and shoes (Wear)		-	-	1	I	I	ı	I	I	ı	1	
6-6.	Master cylinder, wheel cylinder, caliper piston (Fluid leakage, Boot/Seal damage)		ı	I	I	I	I	I	I	I	I	I	
6-7.	Brake hoses and pipes (Fluid leakage, Damage)		I	- 1	- 1	I	I	I	I	I	I	1	
WHE	Ĺ					•	•		•	•			
7-1.	Tyres (Air pressure, Abnormal wear, Crack and Rotati	on)	I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	
7-2.	Wheels (Damage)		ı	I	- 1	I	I	ı	I	I	ı	I	
7-3.	Front/Rear wheel bearing (Loose, Damage)		ı	I	1	I	I	ı	I	I	ı	1	
FRON	IT / REAR SUSPENSION					•	•		•	•			
8-1.	Suspension strut (Oil leakage, Damage)		I	I	1	I	I	I	I	I	ı	1	
8-2.	Suspension arms / Knuckle support and Torsion rods	(Loose, Damage)	-	I	- 1	I	I	ı	I	I	ı	I	
8-3.	Rear spring (Damage)		1	I	I	I	I	ı	I	I	ı	- 1	
8-4.	Shock absorbers (Oil leakage, Damage)		1	I	I	I	I	I	I	I	ı	I	
8-5.	All bolts and nuts (Loose)		-	Т	Т	Т	Т	Т	Т	Т	Т	Т	

Interv	ral: This interval should be judged by odometer reading		FREE	INSPEC	CTION		PERI	ODIC MA	INTENA	NCE AT	COST	
or months, whichever comes first.		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
STEE	RING			•	•			•			•	
9-1.	Steering wheel (Play, Loose)		!	I	1	1	I	I	I	I	1	I
9-2.	All rods and arms (Loose, Damage, Wear)		1	1	1	1	I	I	1	ı	1	ı
ELEC	TRICAL		•			•		•	•			
10-1.	Battery - Electrolyte (Level, Leakage) and voltage		1	I	1	I	I	ı	I	I	1	I
10-2.	Wiring harness connection (Loose, Damage)		-	I	I	ı	I	I	1	ı	I	I
10-3.	Lighting system (Operation, Stains, Damage)		1	1	1	1	I	I	1	ı	1	ı
10-4.	Wiper (Operation)		1	I	I	ı	I	I	1	ı	I	I
10-5.	Horn (Operation)		1	1	1	1	I	I	1	ı	1	ı
10-6.	AUX, USB (if equipped) and accessory socket (Opera	ition)	-	I	I	ı	I	I	1	ı	I	I
BOD,	Ϋ́		· ·				•	•				•
11-1.	All chassis bolts and nuts (Tighten)		-	Т	Т	Т	Т	Т	Т	T	Т	Т
11-2.	All latches, hinges and locks (Function)		1	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAI	TEST			•	•			•			•	
12-1.	Operation of Brakes, gear shifting and speedometer			1	1	1	I	ı	I	I	1	ı
12-2.	Body and chassis noise			I	1	1	I	ı	I	I	1	ı
AIR C	ONDITIONER							•				
13-1.	Check belt tension			I	1	1	I	ı	I	I	1	ı
13-2.	Tighten compressor mounting bolt		-	Т	Т	Т	Т	Т	Т	Т	Т	Т
13-3.	All hose joint (Check, Tighten)		1	I	ı	ı	I	ı	I	I	ı	ı
13-4.	. Check functioning of recirculating flap		!	I	I	ı	I	I	I	ı	I	I
13-5.	Clean condenser with low pressure water		-	С	С	С	С	С	С	С	С	С
13-6.	Check belt for frayed edges		1	1	I	1	I	I	I	I	I	I
13-7.	Check all mounting bolts		1	1	1	1	1	ı	I	1	1	1
13-8.	Air conditioner filter element (if equipped)		1	I	I	1	R	I	1	R	I	I

Drive belt

WARNING

When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

Check that the drive belt tension is correct. If the belt is too loose, insufficient battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. When you press the belt with your thumb midway between the pulleys, there should be a deflection according to the following chart.

The belts should also be examined to ensure that they are not damaged.


If you need to replace or adjust the belt have it done by a authorised Maruti Suzuki workshop.

The drive belts tension is adjusted automatically.

If you need to replace or adjust the belt have it done by your authorised Maruti Suzuki workshop.

Engine oil and filter

Specified oil

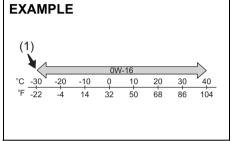

56RM070136

(1) Recommended


Be sure that the engine oil you use comes under the quality classification of SN. Select the appropriate oil viscosity according to the above chart.

SAE 0W-16 (1) is the best choice for good fuel economy, and good starting in cold weather.


NOTE:

We recommend that you use MARUTI SUZUKI genuine oil. To purchase it, visit an Maruti Suzuki authorised workshop.

Oil level check

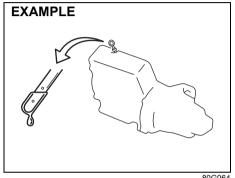

80G064

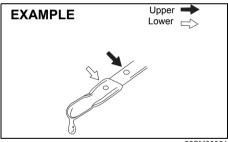

62SM06001


It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the enaine.

Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, and then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

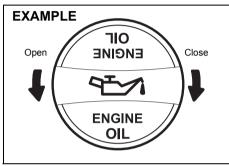


69RM06007

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

Changing engine oil and filter


Drain the engine oil while the engine is still warm.

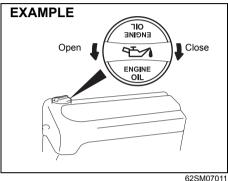

- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain the engine oil.

A CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

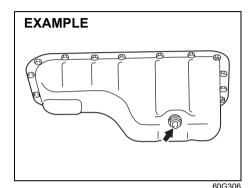

Tightening torque for drain plug: 35 Nm (3.6 kg-m, 25.8 lb-ft)

WARNING

- Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.
- Repeated, prolonged contact with used engine oil may cause skin cancer.
- Brief contact with used oil may irritate skin.

(Continued)


WARNING

(Continued)

- To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.
- Launder any clothing or rags if it is with oil.
- Recycle or properly dispose of used oil and oil filters.
- 4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.


Oil filter replacement

- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- 2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- 3) Smear a small amount of engine oil around the rubber gasket of the new oil
- 4) Screw the new filter by hand until the filter gasket contacts the mounting surface.

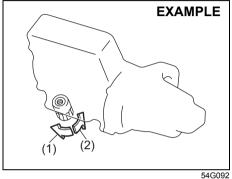

- (1) Loosen
- (2) Tighten

Tightening (viewed from filter top)

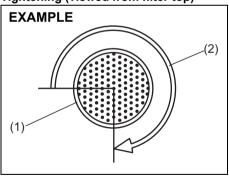

54G093

(1) Oil filter (2) 3/4 turn

6-8

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

5) Tighten the filter as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter 3/4 turn or 14 Nm (1.4 kg-m, 10.3 lb-ft)

NOTICE

To prevent oil leakage, check that the oil filter is tight, but do not overtighten it.

Refill with oil and oil leakage check

- 1) Pour oil through the filler hole and install the filler cap.
 - For the approximate capacity of the oil, refer to "Recommended fuel / lubricants and capacities (approx.)" in the "SPEC-IFICATIONS" section.
- Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE

- When replacing the oil filter, it is recommended that you use a MARUTI SUZUKI genuine replacement filter. If you use an aftermarket filter, check that it is of equivalent quality and follow the manufacturer's instructions.
- Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine coolant

Selection of coolant

To maintain optimum performance and durability of your engine, use MARUTI SUZUKI genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Maruti Suzuki authorised workshop can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Check that the proper mix is 30/70 coolant to distilled water and in no case higher than 70/30. Concentrations greater than 70/30 coolant to distilled water will cause overheating conditions.
- Do not use straight coolant nor plain water.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine damage.

Coolant level check

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks.

Adding coolant


WARNING

Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.

NOTICE

- The mixture you use should contain 50% concentration of antifreeze.
- If the lowest ambient temperature in your area is expected to be -35°C (-31°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.

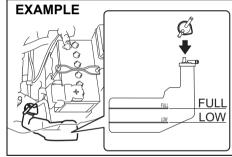

62SM0601

If the coolant level is below "LOW" mark, more coolant should be added. Remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark. Never fill the reservoir tank above "FULL" mark.

NOTICE


When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Coolant replacement

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.


Air cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

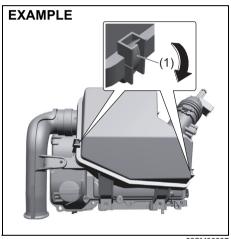

62SM06037

1) Unclamp the side clamps (1).

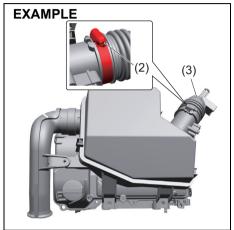

62SM06038

- 2) Loosen the bolt (2) and pull the air cleaner outlet hose (3).
- 3) Remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.
- 4) Reinstall the air cleaner case and clamp the side clamps securely.
- 5) Insert the air cleaner outlet hose (3). Tighten the bolt (2) securely.

Spark plugs

Spark plug replacement and inspection

Since special procedures, materials and tools are required, it is recommended that you trust this job to an authorized a authorised Maruti Suzuki workshop.

NOTICE

When replacing spark plugs, you should use the brand and type specified for your vehicle. For the specified plugs, refer to "SPECIFICATIONS" section in the end of this book. If you wish to use a brand of spark plug other than the specified plugs, consult a Maruti Suzuki authorised workshop.

 
Gear oil

Manual transmission oil / Auto Gear Shift oil


When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use "MARUTI GEAR OIL 75W" for manual transmission or Auto Gear Shift oil.

Manual transmission oil / Auto Gear Shift oil



Gear oil level check

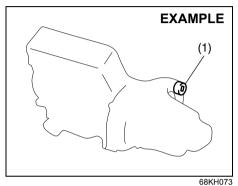

(1) Oil filler and level plug

To check the gear oil level, use the following procedure:

- Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug.
- 3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.
- If the oil level is low, add gear oil through the oil filler and level plug hole (1) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

Tightening torque for oil filler and level plug

Manual transmission (1): 21 Nm (2.1 kg-m, 15.5 lb-ft)

Auto Gear Shift (1): 21 Nm (2.1 kg-m, 15.5 lb-ft)

A CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug are cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE


When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.

MARUTI SUZUKI Bond No. "1217G"

Gear oil change

Since special procedures, materials and tools are required, ask a Maruti Suzuki authorised workshop for this job.

Clutch pedal (if equipped) Cable control clutch

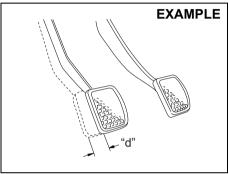

54G274

Clutch pedal play "d": 10 - 15 mm (0.4 - 0.6 in.)


Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be between the specified values. If the play is more or less than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorised workshop.

Fuel filter

Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorised workshop for fuel filter replacement.

Brakes

Brake fluid

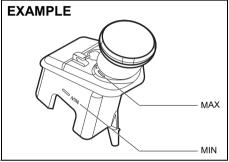

62SM06006

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines with Maruti Genuine Brake Fluid (MGBF) or SAE J1703 or DOT 3. We highly recommend to use "Maruti Genuine Brake Fluid" (MGBF).

NOTICE

If your brake fluid level is near the "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage.

Consult with a Maruti Suzuki authorised workshop regarding this possibility before filling the reservoir.

▲ WARNING

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

- If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument cluster will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.
- A rapid fluid loss indicates leakage in the brake system which should be inspected by a Maruti Suzuki authorised workshop immediately.
- Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or SAE J1703 or DOT 3. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

A CAUTION

Brake fluid can harm your eyes and damage painted surfaces. Be careful when refilling the reservoir.

WARNING

Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

NOTICE

- If your brake fluid level is near the "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage.
- In this case, ask a authorised Maruti Suzuki workshop to inspect the brake system.
- Brake fluid can damage painted surfaces. Be careful when refilling the reservoir.


NOTE:

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.
- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.

Replace your brake fluid in accordance with the maintenance schedule in your Owner's Manual.

Brake pedal

Check if the brake pedal stops at the regular height without "spongy" feeling when you depress it. If not, have the brake system inspected by a Maruti Suzuki authorised workshop. If you doubt the brake pedal is at its normal height, check it as follows:

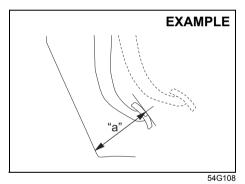

Minimum distance between brake pedal and floor carpet "a": 81 mm (3.19 in.)


With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified.

Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorised workshop.

NOTE:

When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.

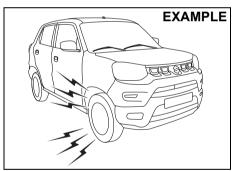


62SM06005

▲ WARNING

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels.)
- Excessive pedal travel
- Brake dragging
- Excessive noise

Parking brake

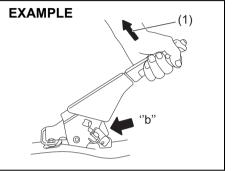


54G109

Ratchet tooth specification "b": 4th – 9th Lever pull force (1): 200 N (20 kg, 45 lbs)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorised workshop.

Steering

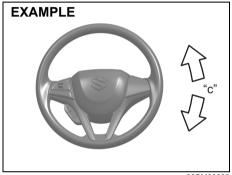


62SM06020

Steering wheel play "c": 0 - 30 mm (0.0 - 1.2 in.)

Check the play of the steering wheel by gently turning it from left to right and right to left, with wheels in straight ahead position and engine in OFF condition. Measure the distance that the steering moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is not as specified or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorised workshop.

Tires

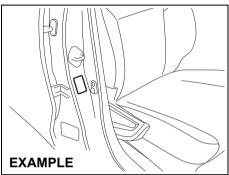

62SM0600

The front and rear tire pressure specifications are listed on the tire information label. Both front and rear tires should have the specified tire pressure.

Tire inspection

Inspect your vehicle's tires at least once a month by performing the following checks:


 Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- Never under-inflate or over-inflate the tires.

Under-inflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim.

Over-inflation can cause the tire to burst, resulting in personal injury. Over-inflation can also cause unusual handling characteristics which may result in an accident.

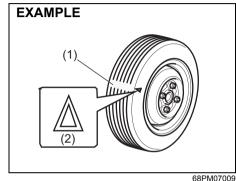

- 68PIVIU/U
- (1) Tread wear indicator (TWI)
- (2) Indicator location mark
- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
- Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by a Maruti Suzuki authorised workshop.

CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Have tires and wheel alignment checked periodically by a Maruti Suzuki authorised workshop.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.

WARNING

 Your MARUTI SUZUKI vehicle is equipped with tires which are all the same type and size (Except spare tire, which may be dependent on vehicle variant). This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.

(Continued)

WARNING

(Continued)


 Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle. Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.

NOTICE

Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorised workshop before purchasing replacement tires that differ in size from the original tires.


Tire rotation

4-tire rotation

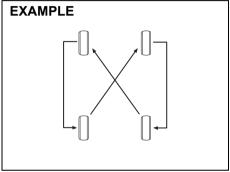

54G114

5-tire rotation

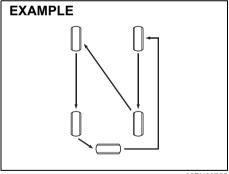

68PH00755

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated as mentioned in periodic maintenance schedule. After rotation, adjust front and rear tire pressures to the specification listed on your vehicle's tire information label.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at Maruti Suzuki authorised workshop.

Wheel Alignment

In case of abnormal tire wear or pulling towards one side, have the wheel aligned at Maruti Suzuki authorised workshop.

Tubeless Tires

The vehicle is equipped with Tubeless Tires. In tubeless tire, a thin layer of butyl rubber is used for lining the inside of the tubeless tire. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tire bead and wheel rim. Tubeless tires are having advantage of slow air loss and preventing sudden deflation while driving.


Care and maintenance tips for tubeless tires

- Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tire damage.
- In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tire has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tire is fitted, replace the valve.
- If continuous high speed driving is required, increase tires pressure by 5 psi over recommended inflation pressure
- 6) Never run the tire beyond TWI (Tread wear indicator). The tire is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tire marked by a triangular symbol (TWI).
- Always prefer tubeless tire mounting machine. In case of manual mounting tire/ wheel rim damage may occur.
- 8) In case of any problem, please get in touch with Maruti Suzuki authorised workshop.

Battery

▲ WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions in the "EMERGENCY SERVICE" section if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

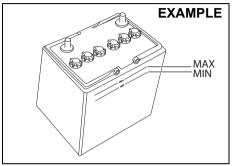

76MM07005

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery fluid (acid) must be kept between the "MAX" and "MIN" at all times. You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

▲ WARNING

If the battery is used with battery level being less than the "MIN", it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the "MIN".


NOTICE

If the battery liquid is added more than the "MAX", liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid overspills, immediately wash away with water. Do not add the battery liquid more than the "MAX".

NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of "MAX" and "MIN", add distilled water till it reaches the "MAX".

Replacement of the battery

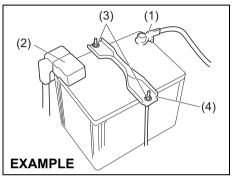

68PM00711

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).
- 4) Remove the battery.

To install the battery:

- Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:

When the battery is disconnected, some of the vehicle's function will be initialized and/ or deactivated.

These function are required to reset after the battery is reconnected.

WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used battery must be disposed or recycled according to the local law and must not be discarded with ordinary household waste. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the battery.

Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.


Individual fuses

These fuses are for individual electrical circuits.

NOTE:


- "Blank" indicates that fuse is not applicable in the variant, even though name of fuse might be available on cover of fuse box of your vehicle.
- Some fuse may not be applicable to your vehicle according to the variant of vehicle, even though it is not mentioned as blank.

To remove a fuse, use the fuse puller provided in the relay box.

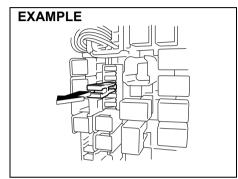


63J095

Fuses in engine compartment

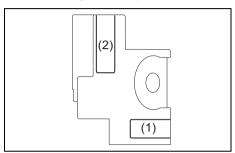

62SM07012

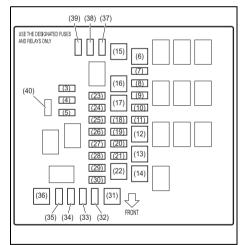


69RH194

MAIN	FUSE /	PRIMARY FUSE
(1)	120 A	FL1
(2)	100 A	FL2
(3)	20 A	Spare fuse
(4)	25 A	Spare fuse
(5)	30 A	Spare fuse
(6)	40 A	P/S (Power steering)
(7)	7.5 A	CNG Valve
(8)	10 A	CPRSR (A/C compressor)
(9)	15 A	FI (Fuel Injection)
(10)	15 A	H/L L (Headlight (Left))
(11)	15 A	H/L R (Headlight (Right))
(12)	30 A	ST (Starting motor)
(13)	30 A	RDTR (Radiator fan)
(14)	1	Blank
(15)	40 A	IGN2 (Ignition switch 2)
(16)	30 A	Lamp
(17)	30 A	T/M Pump (AGS Pump)
(18)	30 A	B/U (battery backup)
(19)	10 A	STOP (Stop Light)
(20)	30 A	DCDC
(21)	15 A	Horn

(22)	30 A	BLW (Blower fan)
(23)	_	Blank
(24)	10 A	ST SIG (Starting signal)
(25)	7.5 A	CNG
(26)	_	Blank
(27)	_	Blank
(28)	_	Blank
(29)	_	Blank
(30)	_	Blank
(31)	40 A	ABS MOT (ABS motor)
(32)	25 A	ABS SOL (ABS solenoid)
(33)	_	Blank
(34)	10 A	T/M (Transmission)
(35)	10 A	T/M2 (Transmission 2)
(36)	40 A	IGN (Ignition switch)
(37)	5 A	Spare fuse
(38)	10 A	Spare fuse
(39)	15 A	Spare fuse
(40)	7.5 A	Spare fuse

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a MARUTI SUZUKI genuine replacement.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

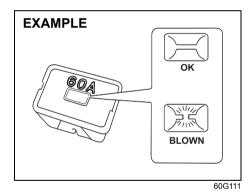


▲ WARNING

If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorised workshop. Always use a MARUTI SUZUKI genuine replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.


NOTE:

Check that the fuse box always carries spare fuses.

Fuses under dashboard

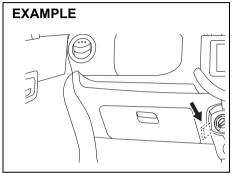


62SM06009

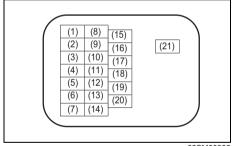

62SM06032

PRIM	PRIMARY FUSE							
(1)	5 A	CNG IG1 (CNG Ignition-1 signal)						
(2)	20 A	WIP WASH (Front wiper & washer)						
(3)	10 A	IG2 SIG (Ignition-2 signal)						
(4)	10 A	Meter						
(5)	15 A	IG COIL (Ignition coil)						
(6)	10 A	BACK (Back-up light)						
(7)	10 A	ST SIG (Starting signal)						
(8)	15 A	ACC2 (Accessory-2)						
(9)	5 A	ACC1 (Accessory-1)						
(10)	10 A	ACC3 (Accessory-3)						
(11)	10 A	A/B (Airbag)						
(12)	10 A	ABS						
(13)	10 A	IG1 SIG (Ignition-1 signal)						
(14)	20 A	DEF (Defogger)						
(15)	20 A	D/L (Door lock)						
(16)	10 A	HAZ (Hazard warning light)						
(17)	10 A	TAIL (Tail light)						

((18)	15 A	Radio
((19)	10 A	DOME (Dome light)
((20)	10 A	DOME2 (Dome light-2)
((21)	30 A	P/W (Power window)

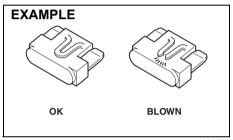

81A283

▲ WARNING

Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

Headlight aiming

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

Bulb replacement

A CAUTION

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The halogen headlight bulbs are filled with pressurized halogen gas.
 They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

NOTICE


- Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your Maruti Suzuki authorised workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in SPECIFICATIONS.

NOTE:

Mist may form on the lenses of exterior lights (Headlight, Rear combination light etc.) during or after driving in the rain or after car washing. This is a natural phenomenon which occurs due to temperature difference between lamp inside and outside. Temporary mist on the lens is not a malfunction and will not cause any discomfort during vehicle driving.


The mist would get cleared when the environmental condition change to sunny or when headlamp is kept on. However if there is water leakage inside the lamp, contact your Maruti Suzuki authorised workshop.

Headlights

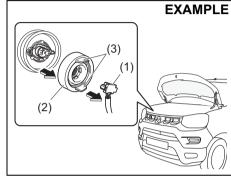


62SM0601

 Open the engine hood while the engine is stopped. Disconnect the coupler (1). Remove the sealing rubber (2) by pulling the grip (3).

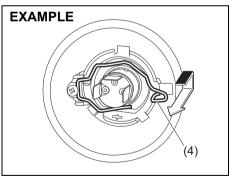

69RH08

2) Push the retaining spring (4) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

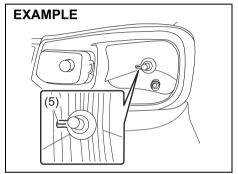


62SM06015

NOTE: You can see the position of retaining spring from the hole (5) of headlight.


Side turn signal light

Fender type

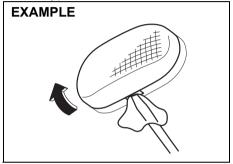

62SM06033


Pull down the lens by using a flat blade screwdriver covered with a soft cloth as shown. The bulb (1) can be removed by simply pulling it out. Then remove the bulb. Install a new bulb in the reverse order.

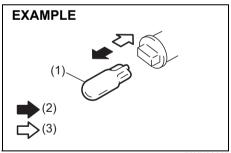

76MH0A008


- (2) Removal (3) Install

Front turn signal light and front position light

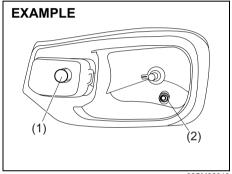


62SM06019

- (1) Front turn signal light
- (2) Front position light

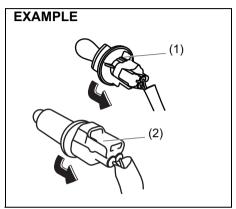

62SM06035


 Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light (1) or the front position light (2) from the light housing, turn the holder counterclockwise and pull it out.

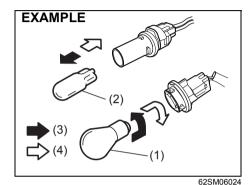

- (3) Removal
- (4) Install
- To remove the bulb of the front turn signal light (1) from the bulb holder, push in the bulb and turn it counterclockwise.
 To install a new bulb, push it in and turn it clockwise.

To remove and install the bulb of the front position light (2), simply pull out or push in the bulb.

Rear combination light

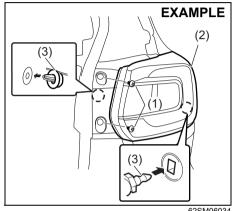


62SM0603


1) Remove the screws (1) and pull the light housing (2) straight.

NOTE:

When reinstalling the light housing, check that the clips (3) are properly attached.

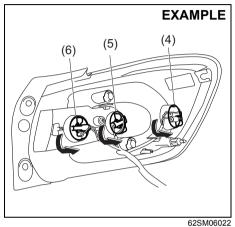


2) To remove the bulb holder of the tail/ brake light (4), the turn signal light (5) or the reversing light (6) from the light housing, turn the holder counterclockwise and pull it out.

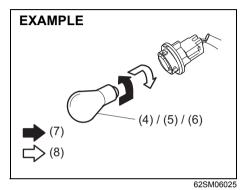


- (7) Removal
- (8) Install
- 3) To remove the bulb of the tail/brake light (4), the turn signal light (5) or the reversing light (6) from bulb holder, push in the bulb and turn it counter-clockwise. To install a new bulb, push it in and turn it clockwise.

License plate light

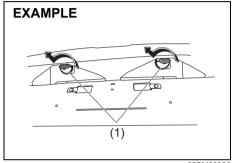


1) Turn the lens (1) counterclockwise to remove it.

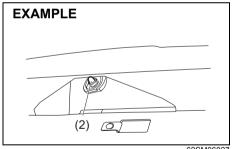

62SM06027


2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.

High-mount stop light

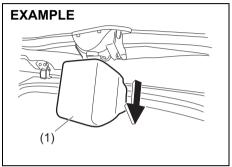


62SM06028

1) Open the tailgate, and pull the cover (1) straight as shown in the illustration.

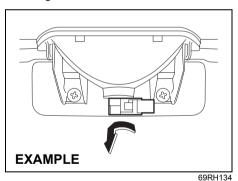

2) Remove the bulb holder as shown in the illustration.

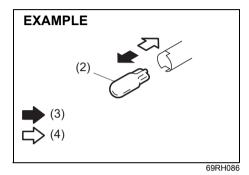


(3) Removal

(4) Install


3) To remove and install the bulb of the high-mount stop light (2), simply pull out or push in the bulb.

Interior light

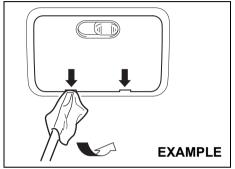

67LH084


 Remove the lens by using a flat blade screwdriver covered with a soft cloth as shown. To install it, simply push it back in.

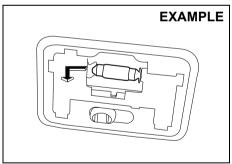

62SM0603

2) To remove the bulb push the bulb to the left side of holder and pull.

Wiper blades

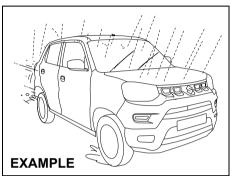

62SM06012

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blade rubber, follow the procedures below.


NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a Maruti Suzuki authorised workshop for proper replacement method.

For windshield wipers:

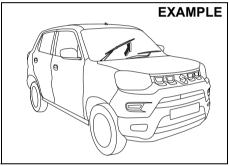

62SM06013


 Hold the wiper arm away from the window.

NOTE:

When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first.


Otherwise, the wiper arms may interfere

Otherwise, the wiper arms may interfere with each other.

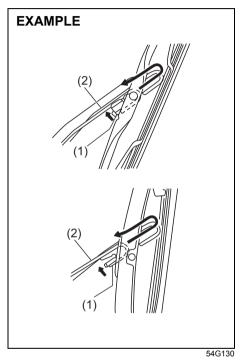

- Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

Removal

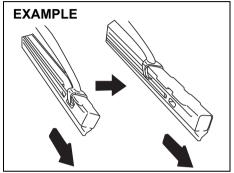


60A260

(4) Retainer

EXAMPLE 66RH108


EXAMPLE 66RH110

Installation

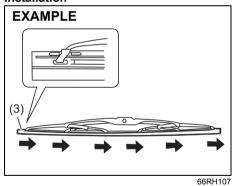

(3) Locked end

4) If the new blade is provided without the two metal retainers (4), move them from the old blade to the new one.

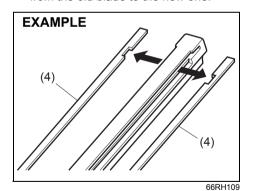


(A) Up (B) Down

NOTE:

When you install the metal retainers (4), check that the direction of metal retainers is as shown in the above illustrations.

- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm.
 Check that the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, checking that the lock lever is snapped securely into the arm.

Windshield washer fluid

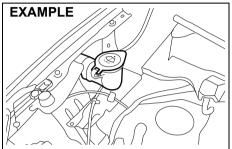

62SM0603

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

WARNING

Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.

NOTICE


- Damage may result if the washer motor is operated with no fluid in the washer tank.
- Avoid use of hard water to prevent building of lime scale on the vehicle.

Air conditioning system (if equipped)


If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Air conditioner filter replacement (if equipped)

Since special procedures are required, ask a authorised Maruti Suzuki workshop for this job.

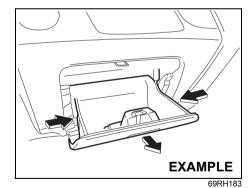


 To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.

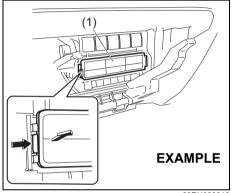


69RH060010

2) Unlock the holder (1) and release it EXAMPLE from the air conditioner unit.

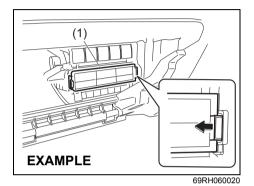


3) Slide the tab of the holder (1) in an arrow direction and remove the holder.

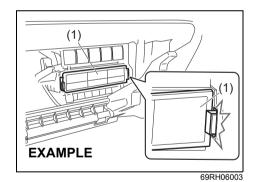

NOTICE


Do not apply excessive force to the tab when removing the holder (1). Otherwise, the tab may be damaged.

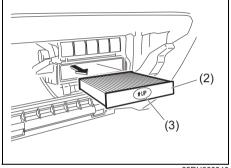

4) Pull out the air conditioner filter (2).

NOTE:

When you install a new air conditioner filter, check that the UP mark (3) faces upward.

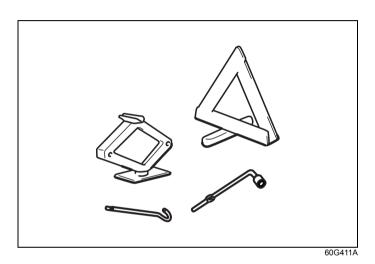


EMERGENCY SERVICE


Tire changing tool	7-1
Jacking instructions	7-3
Jump-starting instructions	7-7
Towing your vehicle	7-8
Engine trouble: Starter does not operate	
Engine trouble: Flooded engine	
Engine trouble: Overheating	7-10
Warning triangle	

7

Tire changing tool

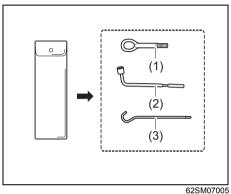

- (1) Towing hook
- (2) Wheel wrench
- (3) Jack handle

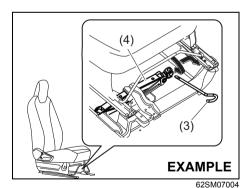

The jack (4) is stowed under the driver's seat.

Slide the driver's seat backward.


To remove the jack (4), turn the jack shaft counterclockwise by hand and pull the jack out of the storage bracket from the front side of the seat.

NOTE:

If it is difficult to turn the shaft by hand, use jack handle (3) as shown in the illustration and move it downwards to turn the jack shaft counterclockwise.

To stow the jack, place it in the storage bracket and turn the jack shaft clockwise with hand.

Check that jack does not get entangled with any harness while removing or placing it back.

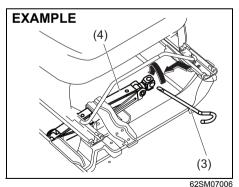

After temporarily holding the jack (4) until it contacts the storage bracket, turn the shaft approximately 60° to 90° by using jack handle (3) to securely hold the jack in place.

▲ WARNING


After using the tire changing tools, stow them securely or they can cause injury if an accident occurs.

A CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

NOTICE


To avoid damaging the storage bracket, do not expand the jack excessively.

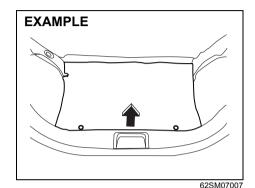


To remove the luggage compartment carpet (if equipped) easily, lift the carpet through the hole provided on the carpet and pull it out.

NOTE:

When installing, install the carpet in the reverse order of removal.

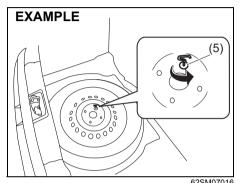



To remove the spare tire, turn its bolt (5) counterclockwise by hand.

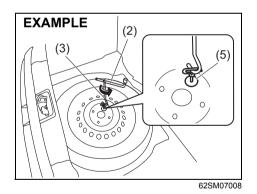

NOTE:
If it is difficult to turn the bolt (5) by hand, use tools has shown in above illustration.

After removing bolt (5), take out the spare tire as shown in below illustrations.

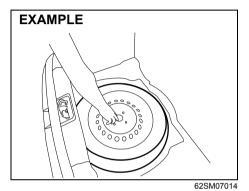

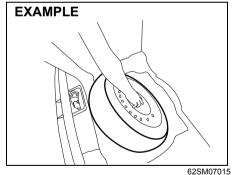


Store the spare tire in the reverse order of removal. Place the tire gently, do not drop from height to avoid any damage. After storing, verify that the spare tire is stored securely.

Make sure that there is no looseness by trying to shake the spare tire.

NOTICE

If there is a looseness, it may cause a rattling and damage the paintwork.

Jacking instructions

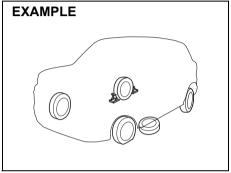


62SM07003

- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "R" (Reverse) if your vehicle has a manual transmission/Auto Gear Shift.


WARNING

- Shift into "R" (Reverse) for a manual transmission/Auto Gear Shift vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

- 3) Turn on the hazard warning flasher if your vehicle is near traffic.
- Block the front and rear of the wheel diagonally opposite of the wheel being lifted.
- 5) Place the spare wheel near the wheel being lifted as shown in the illustration in case the jack slips.

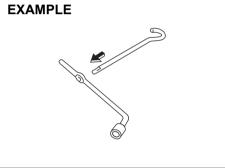

54G25

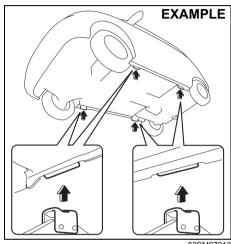

- 62SM07013
- EXAMPLE

 68PM00802


- 6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.
- Continue to raise the jack slowly and smoothly until the tire clears the ground. Do not raise the vehicle more than necessary.

WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed.
- Make sure that the jack is raised at least 50 mm (2 inch) before it contacts the flange. Use of the jack when it is within 50 mm (2 inch) of being fully collapsed may result in failure of the jack.
- Do not use wooden blocks or similar objects as a jack underlay.
- Never get under the vehicle when it is supported by the jack. Never place your hands and feet under the raised vehicle when it is supported by a jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

Raising vehicle with garage jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

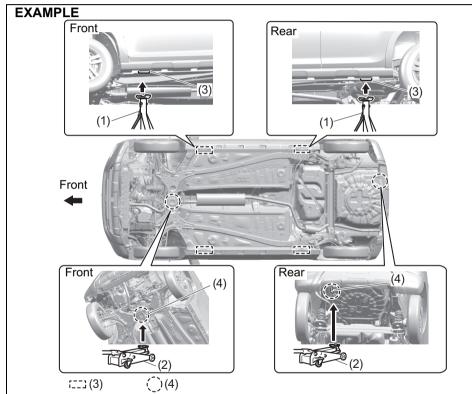

62SM07009

- (1) Jack stand
- (2) Garage jack
- (3) Jacking Point for on-board Jack/Jack stand/ Two-column lift
- (4) Jacking point for garage jack

NOTE:

For more details, contact a Maruti Suzuki authorised workshop.

NOTICE

Never apply a garage jack to the exhaust pipe, side under spoiler (if equipped), engine undercover (if equipped) or rear torsion beam

Changing wheels

WARNING

Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorised workshop.

To change a wheel, use the following procedure:

- 1) Remove the jack, tools and spare wheel from the vehicle.
- 2) Loosen, but do not remove the wheel nuts.

3) Jack up the vehicle (follow the jacking instructions in this section).


WARNING

- Shift into "R" (Reverse) for a manual transmission/Auto Gear Shift vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

A CAUTION


Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven.

4) Remove the wheel nuts and wheel.

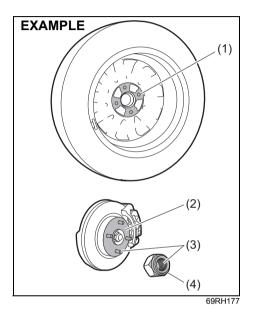

5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.

6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

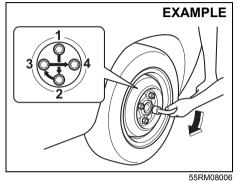


Tightening torque for wheel nut 100 Nm (10.1 kg-m, 73.7 lb-ft)

 Lower the jack and fully tighten the nuts with a wrench in numerical order as shown in the illustration.

WARNING


Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorised workshop.

Full wheel cover (if equipped)

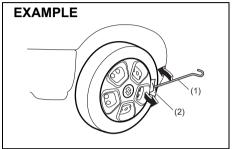

62SM07010

Remove the full wheel cover by using jack handle (1) covered with a soft cloth (2), as shown in the illustration.

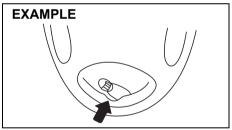

54P000803

Ensure not to cover or foul the air valve while installing the full wheel cover.

Jump-starting instructions

WARNING


- Never attempt to jump-start your vehicle if the battery appears to be frozen. Batteries in this condition may explode.
- When making jump lead connections, check that your hands and the jump leads remain clear from pulleys, belts or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- If the booster battery you use for jump-starting is installed in another vehicle, check that the two vehicles are not touching each other.
- If your battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorised workshop.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions below.

If you are in doubt, call for qualified road service.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or discharged battery.

- Use only a 12-volt battery to jump-start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

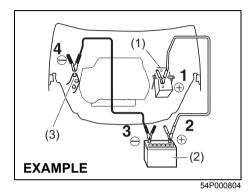

3) Connect jump leads as follows:

- 1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
- Connect the other end to the positive (+) terminal of the booster battery (2).
- 3. Connect one end of the second jump lead to the negative (–) terminal of the booster battery (2).
- 4. Make the final connection to an unpainted, heavy metal part (i.e. engine mount bracket (3)) of the engine of the vehicle with the discharged battery (1).

WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged battery, or an explosion may occur.

A CAUTION

Connect the jump lead to the engine mount bracket securely. If the jump lead disconnects from the engine mount bracket because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged battery.
- Remove the jump leads in the exact reverse order in which you connected them.

Towing your vehicle

If you need to have your vehicle towed, contact a professional service. Maruti Suzuki authorised workshop can provide you with detailed towing instructions.

NOTICE

Observe the following instructions when towing your vehicle.

- To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.
- Using the frame hook, tow your vehicle on paved roads for short distances at low speed.

2-wheel drive (2WD) manual transmission or Auto Gear Shift

Manual transmission vehicles or Auto Gear Shift vehicles may be towed using either of the following methods.

- From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, check that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, check that transmission is in neutral, the steering wheel is unlocked (the ignition key should be in "ACC" position), and the steering wheel is secured with a clamping device designed for towing service.

NOTICE

- The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.
- After shifting the Auto Gear Shift gearshift lever to the "N" position, always check the gear position indicator in the instrument cluster shows the "N" position to make sure that the transmission is disengaged.

gaged.

If the transmission cannot be put in neutral, turn the key from the "LOCK" to the "ON" position, and move the Auto Gear Shift gearshift lever from "N" to "D", "M" or "R", then back to "N" again. Then turn the key from the "ON" to the "LOCK" position. These procedures may help put the transmission in neutral. If the transmission still cannot be put in neutral, you cannot tow the vehicle without using a towing dolly.

Engine trouble: Starter does not operate

- Try turning the ignition switch to "START" position with the headlights turned on to determine the battery condition. If the headlights go excessively dim or go off, it usually means that either the battery is discharged or the battery terminal contact is poor. Recharge the battery or correct battery terminal contact as necessary.
- If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine trouble: Flooded engine

If the engine is flooded with petrol, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine. Do not operate the starter motor for more than 12 seconds.

Engine trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating during driving:

- 1) Turn off the air conditioner, if equipped.
- Take the vehicle to a safe place and park.
- Let the engine run at the normal idle speed for a few minutes until the high engine coolant temperature warning light goes off.

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

If the high engine coolant temperature warning light does not go off:


- Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- Check the coolant level in the reservoir.
 If it is found to be lower than "LOW" line, check radiator, water pump, radiator hoses and heater hoses for leakage.

If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.

 If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine coolant" in the "INSPECTION AND MAINTENANCE" section.)

NOTE:

If engine overheats and you are not sure what to do, contact a Maruti Suzuki authorised workshop.

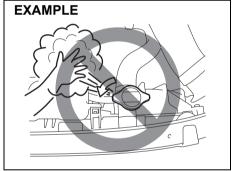


79J00


WARNING

- It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.

 
Warning triangle



In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

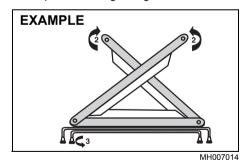


- Remove the warning triangle carefully from the cover as shown by arrow 1.
- Open both the reflector arms as shown by arrow 2 and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counterclockwise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

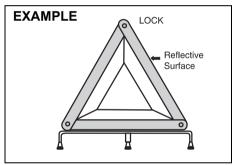

MH007015

APPEARANCE CARE

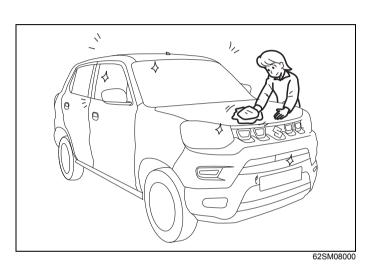

APPEARANCE CARE

Corrosion prevention	8-1
Vehicle cleaning	8-2

8

APPEARANCE CARE

Corrosion prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important information about corrosion

Common causes of corrosion

- Accumulation of road salt, dirt, moisture or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.
- Any or all of the below mentioned points:
- Continuous exposure to sunlight
- Hard water and sea water coming in contact with vehicle.
- Foot rubbing (skirting).

Environmental conditions which accelerate corrosion

- Road salt, dust control chemicals, sea air or industrial pollution will all accelerate the corrosion of metal.
- High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.

- Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
- High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to help prevent corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Vehicle cleaning" section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Check that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area


Park your vehicle to save it from continuous exposure to direct sunlight.

Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage or if you frequently drive it in when wet, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter and exhaust pipes. A fire could be started if the undercoating substance becomes overheated.

Vehicle cleaning

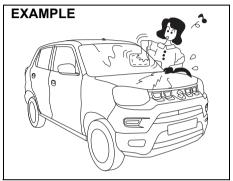

62SM08001

WARNING

When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, petrol and benzene. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning interior

Vinyl upholstery (Except front passenger seat)

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery (Except front passenger seat)

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

Vinyl/ Fabric upholstery (For front passenger seat)

Do not use liquid for cleaning as it may penetrate the fabric and damage the seat sensor.

NOTE:

- In order to keep leather upholstery looking good, it should be cleaned at least twice a year.
- If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.
- When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink.
- As is common with natural materials, leather is inherently irregular in grain and

cowhide has spots in its natural state. These do not affect the performance of the leather in any way.

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

A CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets


Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Instrument panel and console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

WARNING

Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components. Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/or lead to non-functioning of the part or may cause fire.

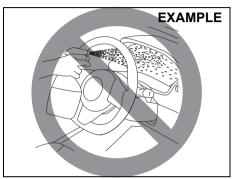

81RM08005

NOTICE

- Liquid such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth.
- Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.

Cleaning exterior

NOTICE

It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Caring for aluminum wheels *NOTE:*


- Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaner will cause permanent spots, discoloration and cracks on finished surfaces and damage to center caps.
- Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.

Washing

WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to check that they have maintained their normal effectiveness.

Washing by hand

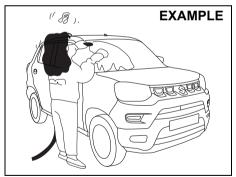

62SM08002

APPEARANCE CARE


When washing the vehicle, park it in the place where direct sunlight does not fall on it and follow the instructions below:

 Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.

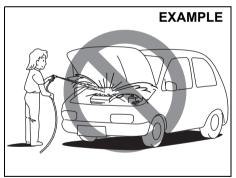

81RM08006

2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.

3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- Once the dirt has been completely removed, rinse off the detergent with running water.
- Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.

- 6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
 - 1. Clean all damaged spots and allow them to dry.
 - Stir the paint and touch up the damaged spots lightly using a small brush.
 - 3. Allow the paint to dry completely.

Washing by an automatic car wash

NOTICE

- If you use an automatic car wash, check that your vehicle's body parts, such as spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.
- Remove the antenna when using an automatic car wash.


Washing by a high-pressure cleaner

NOTICE

If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.

- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
- Pointing the nozzle to the weatherstrip of door glasses and doors can allow water to enter the cabin.


Waxing

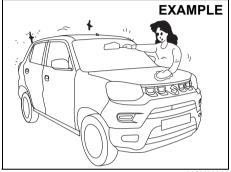

62SM08003

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

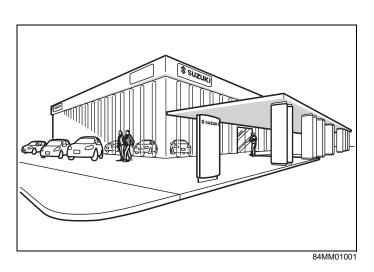


SPECIFICATIONS

Vehicle identification	9-1
FASTag (if equipped)	9-2
High Security Registration Plate (HSRP)	9-3
Fuel Recommendation	9-4
Specifications	9-5

9


Vehicle identification

Chassis serial number

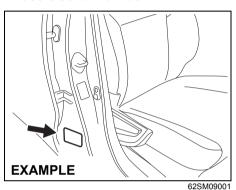


The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist a Maruti Suzuki authorised workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorised workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

Engine serial number

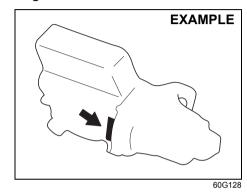


The engine serial number is stamped on the cylinder block as shown in the illustration.

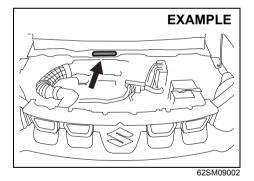


FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.

In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorised workshop.

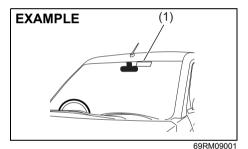


As seen from inside of the vehicle

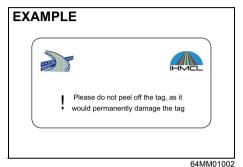

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle

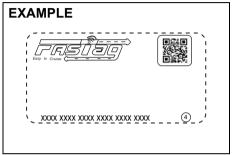

64MM01003

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.

Use of any sharp objects on the tag can damage the tag.


High Security Registration Plate (HSRP)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.

HSRP contains:

- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- · Third license plate on front windshield.


Third License Plate

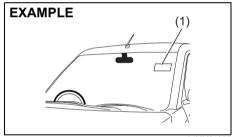

64MM01005

(1) Third license plate

Third license plate - As seen from outside of the vehicle

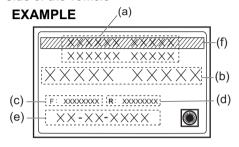

72RM09002

- (a) HSRP issuing authority name
- (b) Vehicle registration number
- (c) Unique laser number Front plate
- (d) Unique laser number Rear plate
- (e) Date of 1st registration (in DD-MM-YYYY format)
- (f) Green strip (BS6 vehicle)

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:

- Any attempt to remove the third license plate from the windscreen will result in permanent damage to the label.
- Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.

- Use of any sharp objects on the label can damage the label.
- In the event of any replacement of the third license plate, may please contact the approved authority.

Third license plate - As seen from inside of the vehicle

EXAMPLE

Notice

It is unlawful for any person to duplicate, alter, change, deface, destroy, multilate, remove, tear down this Third Registration Plate Sticker, except if done by authority of law. Do not wipe with harsh abrasive materials, detergents, etc. as it may deface or damage this Sticker.

64MM01009

NOTE:

The picture shown is for indicative purpose only.

NOTE:

Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.

Fuel Recommendation Petrol Engine

To avoid damaging catalytic converter, you must use unleaded petrol with an octane number (RON) of 91 or higher.

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in certain areas. Blends of this type are recommended for this vehicle if they are no more than 10% ethanol. The vehicle may also be plied with blend of no more than 20% ethanol.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you are using 20% ethanol blend, you should switch back to blend of no more than 10% ethanol.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

A CAUTION

Use of spurious, low quality, adulterated fuel can cause damage to the engine and engine auxilliaries, affect functioning of engine and degrade engine performance including but not limited to engine seizure.

NOTICE

- The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative nonautomatic system.
- Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

Specifications

NOTE: Specifications are subject to change without notice.

M/T: Manual transmission

ITEM: Dimensions	UNIT: mm	
Overall length		3565
Overall width		1520
Overall height	145/80R13 tire	1553
Overall fleight	165/70R14 tire	1567
Wheelbase	·	2380
Track	Front	1316
Hack	Rear	1318

ITEM: Mass (weight)	UNIT: kg	K10C engine model
Curb mass (weight)	M/T	736-767
Curb mass (weight)	Auto Gear Shift	773-775
Gross vehicle mass (weight) rate	ing	1170
Permissible maximum axle	Front	650
weight	Rear	650

ITEM: Engine	
Туре	K10C (DOHC)
Number of cylinders	3
Bore	73.0 mm (2.87 in.)
Stroke	79.5 mm (3.13 in.)
Piston displacement	998 cm ³ (998 cc, 60.9 cu.in)
Compression ratio	11.5 : 1

ITEM: Electrical		
Standard spark plug		NGK ILZKR6F11
Battery	Petrol	ISS M42*1 20HR 38 AH CCA 330 A (JIS)
ballery	CNG	34B19L
Fuses		See "INSPECTION AND MAINTENANCE" section.

^{*1:} Your vehicle is equipped with a lead-acid battery for exclusive use of the ENG A-STOP system.

When replacing the lead-acid battery, make sure to select the specified type for ENG A-STOP system. Consult a Maruti Suzuki authorised workshop for replacing the lead-acid battery.

ITEM: Lights		WATTAGE	BULB No.				
Headlight		12V 60/55W	H4				
Position light		12V 5W	W5W				
Turn signal light	Front	12V 21W	PY21W				
Turn signal light	Rear	12V 21W	PY21W				
Side turn signal light		12V 5W	W5W				
Tail/brake light		12V 21/5W	P21/5W				
High-mount stop ligh	t	12V 16W	W16W				
Reversing light		12V 21W	P21W				
License plate light	License plate light		W5W				
Interior light		12V 10W	C10W				

ITEM: Wheels and tires									
Tire size (front, rear and spare)	145/80R13 75S*,145/80R13 75	145/80R13 75S*,145/80R13 75T*,165/70R14 81S*, 165/70R14 81T*							
Rim size	145/80R13 tire: 13×4B 165/70R14 tire: 14×5J								
**	For vehicle equipped with 145/80R13 tire	145/80R13 (Steel Wheel)							
Tire size, spare**	For vehicle equipped with 165/70R14 tire	165/70R14 (Steel Wheel)							
Tire pressures	For the specified tire pressure, driver's door lock pillar.	see the tire information label located on the							

^{*} If you cannot prepare tires with the specified load index rate and speed symbol, prepare tires with higher load index rate and speed symbol.

** The provision of different spare wheel is as per government notification/regulation (MORTH notification vide GSR 625 (E)).

ITEM: Recommended fuel / lubricants and capacities (approx.)									
Fuel		See "Fuel" in this section.	27 L#						
Engine oil		Classification: API SN, SP ILSAC: GF-6 Viscosity: SAE 0W-16	2.8 L (replacement with oil filter)						
Engine coolant	Petrol	See "INSPECTION AND MAINTE-	3.8 L (including reservoir tank)						
Engine coolant	CNG	NANCE" section.	3.9 L (including reservoir tank)						
Transmission oil	M/T	"MARUTI GEAR OIL 75W"	4.5.1						
Transmission oil	Auto gear shift	MARUTI GEAR OIL 75W	1.5 L						
Brake fluid		MARUTI GENUINE BRAKE FLUID (MGBF) or SAE J1703 or DOT 3	Refill to the proper oil level according to the instructions in "INSPECTION AND MAINTENANCE" section.						
Auto Gear Shift (AGS) a	ctuator oil	-	0.55 L (including reservoir tank)						

[#] The fuel tank capacity is slightly more than the recommended quantity of fuel that you can fill. The additional voluminous space is provided for safety and scientific reasons.

MEMO																
	 	 	 	 	 -	 	 		 	 	 		 -	 -	 -	
				 					 				_			
									 _	_	 		_	_	 _	
	 	 	 	 	 	 	 		 	 	 		 _	 	 -	
	 	 	 	 	 	 	 		 -	 	 		 _	 -	 -	
	 	 	 	 	 	 	 		 	 	 		 _	 	 	
	 	 	 	 	 -	 	 		 	 	 		 -	 	 -	
	 	 	 	 	 	 	 	_	 _	 	 		 _	 	 	
	 	 	 	 	 	 	 		 	 	 		 -	 	 -	
	 	 	 	 	 	 _	 	_	 _	 _	 	_	_	 _	 _	
	 	 	 	 	 	 	 		 	 	 		 _	 	 -	
	 	 	 	 	 -	 	 		 -	 	 		 -	 -	 -	
	 	 	 	 	 	 	 		 	 	 		 _	 	 	
9-9																

SERVICE NETWORK (AS ON 31.03.2022)

■ MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS ■ MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS

■ MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS

■ MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS

■ MARUTI AUTHORISED SÉRVICE STATIONS (MASSs) : 'A' CATEGORY MASSs (**MARKED)

Free & paid Service, Major repairs & Accidental repairs

'B' CATEGORY MASSS (* MARKED)
Free & paid Service & Major repairs
'C' CATEGORY MASSS (##MARKED)
Free & paid Service & Minor repairs
'D' CATEGORY MASSS (#MARKED)

Free Service & Minor repairs

Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone/Warranty Authorized MASSs for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit www.marutisuzuki.com or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH:- 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NÓ. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOTNO IID/15, ACTION AREA IID, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA

SERVICE NETWORK (AS ON 31.03.2022)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED A2, TOWER A, FIRST FLOOR, EMBASSY 247, LBS MARG, VIKHROLI WEST MUMBAI 400083 PH NO – 022 - 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 – 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, CAPITAL TOWERS, # 180, KODAMBAKKAM HIGH ROAD, NUNGAMBAKKAM, CHENNAI – 600034 PH 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING, VITTAL MALLYA ROAD,BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITD 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg,Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH

SERVICE NETWORK (AS ON 31.03.2022)

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact : 0755 6051555
Calicut	Maruti Suzuki India Limited,1st Floor, Central Arcade, Mini-Bypass Road, Puthiyara, Calicut- 673004, Phone: 0495-2723151
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph 0422-2221091
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph 0452-4200203
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111

SERVICE NETWORK (AS ON 31.03.2022)

DETAILS OF AREA OFFICES		
Area Office Location	Area Office Address	
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808	
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551	
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145	
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph 0771-4039643	
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal	
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009	
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366	
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001	
Vijayawada	Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2,Opposite Executive Club, Vijayawada, -530002,	
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299	

ANDAMAN AND NICOBAR ISLANDS 10. DIGLIPUR

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (PU01-PU-01), MADHUPUR VILLAGE, TEHSIL DIGLIPUR, NORTH ANDAMAN - 744202 PH : 271056.

PORTBLAIR

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-01), GARACHRAMA, PORT BLAIR -744105
 PH :251980. 253586. 211590.
- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-02), NAYAGEN, PORTBLAIR - 744101 PH :227104. 211682.

RANGAT

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-FJ-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, - 744201

ANDHRA PRADESH

AMALAPURAM

 S.B. MOTOR CORPORATION (BTS1-BTS-01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201 PH:8374303303.

AMARAVATI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CVB1-CVB-01), SURVEY NO. 29, TOWNSHIP-16, SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1, SUB-DIVISION-L40, MALKAPURAM LIMITS, MANDAL - THULLURU, AMARAVATI-CITY, DIST. -GUNTUR, ANDHRA PRADESH. - 522237 PH: 8374847777.

ANAKAPALLE

 JAYABHERI AUTOMOTIVES PVT. LTD. (N01-0N-01), SURVEY No.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001 PH : 7093675655

ANANTAPUR

8. SRI DURGA AUTOMOBILES PVT. LTD. (1801-18-01), 17/377-A,GOOTY ROAD,,ANANTAPUR - 515001 PH -9100902697

BHIMAVARAM

 NOVELTY REDDY & REDDY MOTORS PVT LTD (7M01-7M-01), NEAR BYEPASS ROAD, UNDI ROAD, BHIMAVARAM - 534202 PH:7799771177.

BOBBILI

VARUN MOTORS PVT. LTD. (CAM1-CAM-01), D.
NO. 4-64, SURVEY NO. 219/8, VILLAGE –
MALLAMMAPETA, BESIDE GROWTH CENTRE,
BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA
PRADESH. - 535558
 PH 988520772 98853173444

CHALLAPALLI

 MITHRA AUTO AGENCIES PVT LTD (CSX1-CSX-01), D.NO.9-30, 9TH BLOCK, LAKSHMIPURAM LIMITS, RAMANAGARAM, CHALLAPALLI MANDALAM, DISTT. KRISHNA -521126 PH :8886063526.

CHINTALAPUDI

 REDDY AND REDDY MOTORS (BYQ1-BYQ-01), RS NO.699/2 MARUTI NAGAR COURT CENTRE, ELURU-CHINTALAPUID HIGHWAY, CHINTALAPUDI MANDAL, ANDHRA PRADESH -534460 PH. 9912341624. 9948827555.

CHIRALA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-NT-04), 9-1-92, CHURCH ROAD, CHIRALA, -523157
 PH. 7331151661

CHITTOOR

BHARGAVI AUTO PVT. LTD. (A801-1C-03), 22-241/A, KATTAMANCHI TIRUPATI ROAD, CHITTOOR, - 517001 PH: 8463955558.

CUDDAPAH

 MSA MOTORS (C201-1D-03), K.T. BYE PASS ROAD, CUDDPPAH, ANDHRA PRADESH, - 516001 PH:7396685628.

ELURU

 REDDY & REDDY MOTORS (1E01-1E-01), OLD NH-5 ROAD, BESIDES C R REDDY WOMEN'S COLLEFE OLD NH-5, ELURU, - 534001 PH: 9705311566.

GAMBHEERAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (BQQ1-GJF-02), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHERAM, ANANDPURAM, VISHAKAPATNAM. - 530052 PH :9642496789.

GUDIVADA

 VARUN MOTORS PVT. LTD. (2603-CL-02), D NO. 1-621,AUTONAGER 1ST LANE,GUDIVADA -521301 PH 9885651383.

GUDUR

 BHARGAVI AUTO PVT. LTD. (IS01-IS-01), SURVEY NO.1619/3A, GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101 PH 965/9844999

GUNTAKAL

 SRI DURGA AUTOMOBILES PVT. LTD. (BJA1-BJA-01), SURVEY NO. 407, D. NO. 20/342-19, BELLARY ROAD, GUNTAKAL, DIST. -ANANTPUR, ANDHRA PRADESH. - 515801 PH :8886603336.

GUNTUR

- JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-G5-01), D-N-8-24-31, MANGALAGIRI ROAD, GUNTUR - 522001 PH:7893117111/0863-2241000.
- JAYALAKSHMI (G502-G5-05), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP - 522203 PH 9848131133/9625255555.
- JAYALAKSHMI AUTO (G502-G5-06), SURVEY NO 509, D.NO 25-11-50 TOWN, WARD NO 22, OPPOSITE ITC BUILDING, R. AGRAHARAM, NAGARAPALAM ROAD, GUNTUR, - 522004 PH: 8374847777.

HINDUPUR

 SRI DURGA AUTOMOBILES PVT. LTD. (1801-36-02), PLOT NO.83, NEAR RELIANCE PETROL BUNK, BYE PASS ROAD, HINDUPUR -515201 PH :9100902697.

ICHAPURAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (GLL1-GLL-01), SURVEY NO. 105/3, 105/4 AND 229/7, ICHAPURAM, BALAKRISHNAPURAM PANCHAYAT, MUNIBHADRA VILLAGE, ANDHRA PRADESH. - 532312
 PH -9340006668, 8142933666

JAGGAIAHPETA

 VARUN MOTORS PVT. LTD. (2603-PC-05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175 PH -984292593796752418111

JANGAREDDYGUDEM

 REDDY & REDDY MOTORS (1E01-HQ-02), NEAR R&B GUEST HOUSE, ELURU ROAD, JANGAREDDYGUDEM, - 534447 PH -991263366

KAIKALURU

 SANTOSH AUTOMOTORS PVT. LTD. (CLW1-CLW-01), SY. NO. 127/7 &9, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL, DIST. KRISHNA - 521333 PH -7799787969

KAKINADA

 S B MOTORS (W701-W7-01), D. NO.
 52-10-36/3, NEAR AMAR GHATI CENTER, KARAPA ROAD, KAKINADA - 533001 PH :9885119888.

KANCHIKACHERI A

 VARUN MOTORS PVT. LTD. (GJD1-GJD-01), SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERA VILLAGE AND MANDAL, KRISHNA DIST., ANDHRA PRADESH. -521180 PH. 9885082822. 9885576602.

KANDUKURU

JAYALAKSHMI AUTOMOTIVES PVT. LTD (BEY1-BEY-01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT – PRAKASHAM, ANDHRA PRADESH. - 523105 PH - 9848131133

KAVALI

 BHARGAVI AUTO PVT. LTD. (A801-PF-05), KAVALI NELLORE, ANDHRA PRADESH - 524201 PH:9248702567.

KURNOOL

 MSA MOTORS (C201-C2-01), AUTO NAGAR, INDUSTRIAL ESTATE, NH-7, KURNOOL -518004 PH: 9912826682.

ACHERLA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CEY1-CEY-01), D.NO. 349/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY. - 522426 PH 9848131133. 9705261801.

MACHILIPATNAM

 MITHRA AUTO AGENCIES PVT LTD (2604-0K-04), NARASIMHA NAGAR, MACHLIPATNAM, ANDHRA PRADESH - 521001 PH 3888063596

MADANAPALLI

 BHARGAVI AUTO PVT. LTD. (AAT1-AAT-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH : 9959893434.

MADHURAWADA

 JAYABHERI AUTOMOTIVES PVT. LTD. (BQQ1-BQQ-01), PLOT NO. 5, SURVEY NO. 4/P, KOMMADI ROAD, MADHURAWADA, VISHAKAPATNAM, ANDHRA PRADESH - 530048 PH: 8886669985.

MALKIPIURAM

 VARUN MOTORS (SEH1-SEH-SEH1-01), SURVEY NO 49/6A, MALKIPURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH -533250
 PH :9865317344.

MANDAPETA

 S B MOTOR CORPORATION (BJC1-BJC-01), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT – EAST GOADAVARI, ANDHRA PRADESH. - 533308 PH. 3886664090.

MARKHAPURAM

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFF1-CFF-01), D. NO. 4-515/12, SURVEY NO. 1167, OPP. INDUSTRIAL ESTATE, ONGOLE ROAD, MARKAPURAM, DISRT.-PRAKASAM, ANDHRA PRADESH. - 523316 PH - 984813133 733115/674

MYLAVARAM

 VARUN MOTORS PVT. LTD. (GKL1-GKL-01), #REF! - 521230
 PH:9885576602, 9581337222.

NANDIGAMA

 VARUN MOTORS PVT. LTD. (CUB1-CUB1-01), RE SURVEY NO. 601/18, NH-9 ROAD, NANDIGAMA, DIST.-KRISHNA, ANDHRA PRADESH. - 521185 PH :9885576602, 770262494.

ΝΑΝΟΥΑΙ

43. MSA MOTORS (CKB1-CKB-01), SURVEY NO. 333, VUDUMALPURAM, MANDAL – NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT – KURNOOL. -518501 PH -4400666616

NARASARAOPET

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-JT-03), NEAR RELIANCE PETROL PUMP BUNK, VINUKONDA ROAD, NARASAROAPET, GUNTUR, - 522603 PH. 76800005029100791343.

NARSIPATNAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (WT01-WT-01), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH : 7702333513.

NELLORE

BHARGAVI AUTO PVT. LTD. (A801-A8-01),
 D.NO.25/III97 INDUSTRIAL ESTATE, A.K. NAGAR,
 P.B.NO.18, NELLORE(A.P.) - 524004
 PH :9248742725

 BHARGAVI AUTO PVT. LTD. (A801-A8-04), A2, INDUSTRIAL ESTATE, A.K. NAGAR, NELLORE, -524004

PH:9248727888

VISHNU CARS PVT. LTD. (A802-A8-01), FIELD NO.
 628 /SURVEY NO. 877, 878/A/4 AND 883/A/1A,
 NELLORE BIT-II, BESIDES GSR GARDENS,
 BALAJI NAGAR, NH-16, NELLORE CITY. - 542002
 PH : 7337340778

NUZIVIDU

 VARUN MOTORS PVT. LTD. (2603-CN-03), BESIDE R T C BUS DEPOT., OLD D M OFFICE, VIJAYAWADA ROAD, NIZVID - 521201 PH 2544444 958133722

ONGOLF

50. JAYALAKSHMI AUTOMOTIVES PVT. LTD (8Y01-8Y-02), THROVAGUNTA COMPANY CENTRE,NH-5, GUNTUR ROAD,ONGOLE, PRAKASAM DISTRICT. - 523003 PH 9371055965

PALAKONDA

 VARUN MOTORS PVT. LTD. (CKO1-CKO-01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440 PH. 19966877033. 9885317344.

PALASA

52. JAYABHERI AUTOMOTIVES PVT. LTD. (BWH1-BWH-01), SURVEY NO. 63 OF VILLAGE – PPUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT – SRIKAKULAM, ANDHRA PRADESH. - 532221 PH 9840954424 8700464644

PENDURTHI

 VARUN MOTORS PVT. LTD. (BAP1-BAP-01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PH -088F438455

 VARUN MOTORS PVT LTD (BAP1-BAP-02), SURVEY NO 240/1,2 & 241, PENDURTHI, VIZAG -531173 PH:9703843737.

PIDUGURALLA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (BFN1-BFN-01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT – GUNTUR, ANDHRA PRADESH. - 522413 PH. 9848131133, 9100787058.

PITHAPURAM

 S B MOTORS (CTS1-CTS-01), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAYRI DIST., ANDHRA PRADESH. - 533 450 PH :8886677759, 8886677754.

PONNUR

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFC1-CFC-01), PLOT NO. 4, D.NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124 PH: 9849445639, 9121141913.

RAJAHMUNDRY

 S.B. MOTOR CORPORATION (C501-C5-01), OPP.FCI GOWDOWN, JAILROAD, LALACHERUVLI, RAJAMU NDRY - 533101 PH - 10885585667

 S B MOTORS (C501-C5-03), D. NO. 3-243, NH-5, ROAD, HUKUMPETA, RAJAHMUNDRY. - 533 107 PH :08885886262.

 VARUN MOTORS PVT. LTD. (C502-C5-01), SURVEY NO. 660, PALACHERLA VILLAGE OF RANJANAGRAM MANDAL, RAJAHMUNDRY, EAST GODAVARI DSIT. - 533102

RAJAM

PH -9642225289

 VARUN MOTORS PVT. LTD. (BLJ1-BLJ-01), PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH:779966998.

SOMPETA

 VARUN MOTORS PVT LTD (GLX1-GLX-01).
 KHATA NO 406,407.408 DENOTED IN SURVEY NO 2411,MOGILIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284 PH -9885217344, 7382112922.

SRIKAKULAM

 VARUN MOTORS PVT. LTD. (4603-W6-09), PEDDA PADDU ROAD, ARASAVILLI (P.O.), SRIKAKULAM, - 532001 PH: 9985477155.

64. JAYABHER! AUTOMOTIVE (4606-W6-04). SURVEY NO 22/7P,22/8 AND SURVEY NO 29/12,16,17, BALAGA RUPAL,SRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH-9109818111

SULURUPETA

 BHARGAVI AUTO PVT. LTD. (BZA1-BZA-01), KEERTI ENCLAVE,NEAR RTO OFFICE,NH-5,SULLURPETA - 524121 PH :9848602345, 7997998516.

TANUKU

 NOVELTY REDDY & REDDY MOTORS PVT LTD (BAR2-BAR-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE 10C PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) -534211 PH 9912341624.

TENALI

67. JAYALAKSHMI AUTOMOTIVES PVT. LTD (PE01-PE-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH -226100/9866111788

THAGARAPUVALASA

 VARUN MOTORS PVT. LTD. (CQV1-CQV-01), SURVEY NO. 11/2B, 11/3, NAGARAMPALEM VILLAGE, NH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM, -531162

PH:9885317344, 9885280772.

TIRUPATI

BHARGAVI AUTO PVT. LTD. (A801-N9-02), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, -517507 PH. 7997969946.

 BHARGAVI AUTO PVT. LTD. (A801-N9-06), SURVEY NO. 2/B3, ADJACENT TO PARK HOTEL, RENIGUNTA ROAD, TIRUPATI. - 517501 PH:7997969919.

TIRUVURU

 SANTOSH AUTOMOTORS PVT. LTD. (CIM1-CIM-01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. -521235 PH:7799787969.

TUNI

SATTIBABU MOTORS (PVT) LTD. (KY01-KY-01),
 D. NO. 65-31-15/1, OPP. FCI GODOWNS,
 NARAYANAPURAM, TUNI, EAST GODAVARI,
 ANDHRA PRADESH - 533401
 PH - 7861803888

VENKATAGIRIKOTA

 BHARGAVI AUTO PVT. LTD. (CDI1-CDI-01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK, GMF FUNTION HALL, DARASALLA, PALLIKUPPAM, KUPPAM ROAD, V KOTA - 517242 PH :984802345, 779997720.

VIJAYAWADA

 MITHRA AUTO AGENCIES PVT LTD (2604-26-01), 40-17-3, PICHAIAH STREET, GANDHI COLONY, VIJAYAWADA - 520001 PH:8886063507.

- VARUN MOTORS PVT. LTD. (2603-26-01),
 48-17-4/1,RING ROAD,VIJAYAWADA 520008 PH 9885576602
- VARUN MOTORS PVT. LTD. (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY,VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH 8207241177
- SANTOSH AUTOMOTORS PVT. LTD. (2607-26-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010 PH. 9209094999/7799787949.
- VARUN MOTORS PVT. LTD. (2603-26-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH :9842255291.
- SANTOSH AUTOMOTORS PVT. LTD (2607-26-02), D NO. 77-42-16A, OPP, NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520 015 PH: 7799787932.

VISHAKAPATNAM

- 80. VARUN MOTORS PVT. LTD. (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR, GAJUWAKA - 530026 PH :9703843737
- VARUN MOTORS PVT. LTD. (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH :08912525885.
- VARUN MOTORS PVT. LTD. (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., - 530007 PH :9885511911.
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH - 530018 PH :888633229.
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-02), D.NO:51-17-2, NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH). - 530013 PH.:7799772272.
- VARUN MOTORS PVT. LTD. (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCI, PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007
 PH: 7799124243.

- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-03), SURVEY ND. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046 PH: 3897541234.
- VARUN MOTORS PVT. LTD. (4603-46-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE - DUPPITURU, MANDAL - ACHUTAPURAM, DISTRICT - VISHAKAPATNAM, ANDHRA PRADESH. - 531011 PH. 1966877133.
- VARUN MOTORS PVT, LTD, (4603-46-0L), SURVEY NO. 408/1 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ, VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. - 530045
 PH :9885315344.
- VARUN MOTORS PVT. LTD. (4603-46-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530 017 PH :07901644535.

VIZIANAGARAM

- VARUN MOTORS PVT. LTD. (4603-N8-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001 PH:8886721213.
- 91. JAYABHERI AUTOMOTIVES PVT. LTD. (N801-N8-01), PLOT NO.B-1,DOOR NO.8-32-1, SURVEY NO. 108/12A & 109/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH -535001 PH. 7702333514.

YANAM

 SB MOTORS (CTR1-CTR-01), SURVEY NO 82-2,TALLAREVU MANDAL,YANAM, EAST GODAVARI DISTRICT - 533463 PH -8886677759

YELAMANCHILI

 JAYABHERI AUTOMOTIVES PVT. LTD. (GJRT-GJR-01), SURVEY NO. 19-1, 2, 3, 45/1, 45/283, KOKIRAPALI, YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH - 531055
 PH :9849445639, 9642502345.

ARUNACHAL PRADESH

ITANAGAR

 BUISHI YADA MOTORS (7501-75-01), A' SECTOR, NAHARLAGUN, ARUNACHAL PRADESH. - 791110 PH:9436268870.

- 95. BUISHI YADA MOTORS (7501-75-04), MODEL VILLAGE, BEFORE GOVERNMENT HIGHER SECONDARY SCHOOL, NAHARLAGUN, ITANAGAR 791110
 PH :8257075033
- D Y MOTORS (7502-75-01), LPC NO -DC/ICC/LPC, BORUM VILLAGE, PO/PS-NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100 PH :8415075164

PASSIGHAT

97. BUISHI YADA MOTORS (7501-8A-03), PASSIGHAT BAZAR, PASSIGHAT, ARUNACHAL PRADESH -791102

PH:9402878414.

 BUISHI YADA MOTORS (CHM1-CHM-01), HAPOLI, NEAR TELECOMMUNICATION CENTRE, ZIRO, ARUNACHAL PRADESH. - 791120 PH:9732010858.

ASSAM

BAIHATA CHARIALI

 PALLAVI MOTORS PVT LTD (BNL1-BNL-01), DAG NO. 1042, PATTA NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381 PH :9864052488.

BARPETA

 BHARATI MOTORS PVT. LTD. (7N01-7Z-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM -781313
 PH 7002819523

BIJOYNAGAR

 PODDAR CAR WORLD (IA01-IA-01), AT/PO-BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125 PH -984200733

BISWANATH CHAIRALI

102. RAMLAL DURGADUTT MOTORS (BX11-BXI-01), DAG NO- 7,8,9 PERIODIC PATTA NO - 24, REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176 PH : 8724087940

BONGAIGAON

BHARATI MOTORS PVT. LTD. (7N01-7N-01),
 CHAPAGURI ROAD, BONGAIGAON - 7833830
 PH -7002350887/9864427537

HAMATA

104. PALLAVI MOTORS PVT LTD (CEI1-CEI-01), DAG NO.1137, PATTA NO.376, MOUZA – DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306 PH 9864052488

DHEKIAJULI

105. RAMLAL DURGADUTT MOTORS PVT LTD (BRX1-BRX-01), DAG NO.242, K.P. PATTA NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110 PH :9706568722

DHEMAJI

 SAIKIA AUTO PVT. LTD. (7P01-UD-02), NALANIPAM KONCH GAON, NH-52, DHEMAJI (ASSAM) - 787057 PH: 3638725209.

DIBRUGARH

- JAYBEE AUTO AGENCIES PVT. LTD. (C101-C1-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH :9954799273.
- BIMAL AUTO AGENCY (C102-C1-01), DAG NO.
 GHARBANDICHUK JARUA GAON, MOUZA-MANKHATTA KANIKAR, DIST.-DIBRUGARH, ASSAM. - 786004
 PH:3864074525. 7003901301.

DIGBOI

109. VISHAL CAR WORLD PVT LTD (BYD1-BYD-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA, ASSAM. - 786171 PH: 9435860000.

DIPHU

 RD MOTORS (1P01-1P-01), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - -782460 PH:9707556868.

DULIAJAN

111. JAYBEE AUTO AGENCIES PVT. LTD. (ADA1-ADA-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH -786602 PH :7002722358

GOALPARA

 BHARATI MOTORS PVT. LTD. (YN01-YN-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301 PH: 9101940372.

GORAIMARI

113. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (CMB1-CMB-01), DAG NO-3, K P PATTA NO - 11, VILLAGE- CHALABASTI, MOUZA- GORAIMARI - 783390
PH. 7002279100

GUWAHATI

- 114. BIMAL AUTO AGENCY (0901-09-01), JHALUKBARI, GUWAHATI. - 781014 PH :9864074525.
- 115. PALLAVI MOTORS PVT LTD (0902-09-01), DAG NO. 182, NEXT TO DEPTT. OF FAMILY WELFARE, SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022 PH -9864210937
- 116. PODDAR CAR WORLD PVT LTD (0904-09-01), HENGRABARI ,VIP ROAD,GUWAHATI - 781036 PH - 9508746340
- 117. BIMAL AUTO AGENCY (0903-09-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021 PH -9864489722
- 118. BIMAL AUTO AGENCY (0901-09-02), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37,GUWAHATI - 781028 PH - 9864040406
- PODDAR CAR WORLD (0905-09-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029 PH -7002920414
- 120. BIMAL AUTO AGENCY (0903-09-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005 PH :7578005159
- 121. MITTAL AUTOZONE (0908-09-01), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI -781028 PH :9864296666.
- PALLAVI MOTORS PVT LTD (0902-09-02), DAG NO. 2201, PATTA NO. 237, VILLAGE – JYOTIKUCHI, MOUZA – BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. - 781034
 PH : 9864052488.

HOJAI

123. RAMLAL DURGADUTT MOTORS PVT LTD (ARA1-ARA-01), KHATTIYAN NO.: 312/3F, HOJA MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT – NAGAON, ASSAM - 782435 PH :7002880534

HOWLY

 PODDAR CARWORLD (GKW1-GKW-01), PATTA NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316 PH : 8085987586

JAGI ROAD

125. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-RB-02), JAGIROAD,MORIGAON,NALAOW,ASSAM -782410 PH 9365884355.

JORHAT

126. RAMLAL DURGADUTT MOTORS PVT LTD (G902-G9-01), DAG NO. 7 & 8 OF P.P. NO. 33, DAG O. 9 OF P.P. NO. 61, DAG NO. 382 OF P.P. NO. 206, VILLAGE - PAKIMURI HABIGAON, MOUZA - SARAIBAHAL, JORHAT. - 785006 PH : 7002099547.

KARIMGANJ

127. JAIN UDYOG (6901-1S-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710 PH: 9435179025

KHATKHATI

128. PODDAR CAR WORLD PVT. LTD. (CAZ1-CAZ-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG. -782460 PH. 6000900381.

LANKA

 RD MOTORS (SDD1-SDD-01), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR , MOUZA -LANKA, DIST - HOJAI , ASSAM. - 782442 PH -9707556868.

MANGAL DO

 PODDAR CAR WORLD (YW01-YW-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115 PH 9706970132

MARGHERITA

 VISHAL CAR WORLD PVT LTD (YR01-YR-01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181 PH :9435860000.

MORIGAON

 RAMLAL DURGADUTT MOTORS PVT LTD (RB01-RB-01), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM. -782105 PH. 7002239592.

NAGAON

 RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002 PH :9706007918

 BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.)
 (703-77-J01), DAG NO. 255, 1508(N)V254(O), 1509(N)V257(O) AND 291, PATTA NO.
 506(N)V15(O), 507(N)V15(O), 507(N)V97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST.-NAGAON. - 782002
 PH: 9435006474/9864 191169.

 RAMLAL DURGADUTT MOTORS (7J01-7J-03), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM - 782003 PH :9706007918.

NAHARKATIYA

 JAYBEE AUTO AGENCIES PVT. LTD. (C101-CJI-03), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM. - 786610 PH 7007727358

NALBARI

 BIMAL AUTO AGENCY (9201-92-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335 PH:7576842484.

NORTH LAKHIMPUR

 SAIKIA AUTO PVT. LTD. (7P01-7P-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM -787031
 PH: 8473946336.

 SAIKIA AUTO PVT. LTD. (7P01-7P-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001 PH:7002571073.

PATHSALA

140. PODDAR CAR WORLD PVT. LTD (CLD1-CLD-01), DAG NO. 451, PATTA NO. 151 KMP, PATHSALA, DIST.-BARPETA, ASSAM. - 781325 PH 6000900256

RAJGARH

141. JAYBEE AUTO AGENCIES PVT. LTD. (CIJ1-CIJ-01), DAG NO.182, PP NO.140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM -786611 PH :9954799273.

RANGIA

142. PODDAR CAR WORLD PVT. LTD. (6X01-6X-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354 PH :8724877892.

SHIBSAGAR

143. RAMLAL DURGADUTT MOTORS (G902-L9-02), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR - 785640 PH:7002099547.

SILCHAR

144. JAIN UDYOG (6901-J2-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006 PH :9706002524

TANGI A

145. BIMAL AUTO AGENCY (CHO1-CHO-01), DAG NO.:121, PATTA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521 PH: 9954387619.

TEZPUR

- 146. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154 PH : 8724087940.
- 47. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-02), GORAIMARI, VILLAGE - SOLGAON, TEZPUR, ASSAM. - 784001 PH - 9380131457

NSUKIA

148. VISHAL CAR WORLD PVT LTD (J401-J4-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - 786183 PH :9435860000.

BIHAR

ARARIA

149. SEEMANCHAL MOTORS PVT. LTD. (0701-07-01), NEAR BUS STAND, JACDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318 PH:8797096013.

ARRAH

150. PEARL CARS (VU01-VL-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.). DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH :8294634604.

BANKA

 SEEMANCHAL MOTORS PVT. LTD. (CEQ1-CEQ-01), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101 PH :8797096020.

BEGUSARAI

 GS MOTORS PVT. LTD. (1U01-1U-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR -851101 PH :9204756206.

BETTIAH

 SHREE GOPAL AUTO PVT. LTD. (O401-O4-01), BEETIAH - MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438 PH :9771486183.

BHAGALPUR

 SEEMANCHAL MOTORS PVT. LTD. (G802-G8-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005 PH:8797096020.

BIHARSHARIF

155. REESHAV AUTOMOBILES (MG01-TG-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR -803101 DH -0963832175

BUXAR

CHAKIA

157. RAM KRISHNA MOTORS PVT. LTD. (CWA1-CWA-01), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412 PH :9801773716.

CHAPRA

158. REESHAV AUTOMOBILES (MG01-TH-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301 PH :7061295296.

DANAPUR

 ALANKAR AUTO SALES & SERVICE PVT LTD (1504-NN-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, -800018 PH. 9386898458.

DANAPUR, PATNA

160. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-NN-05), TOUZI NO. 5057, THANA NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA. 801503 PH 9334415434.

DARBHANGA

 RAJKRISHNA MOTORS LLP (1V02-1V-01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - 846009 PH :7004529271. 162. RAJKRISHNA MOTORS LLP (1V02-1V-02), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) -846003 PH 9693127351

DEHRI ON SONE

163. PEARL CARS (1X01-MK-02), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST.-ROHTAS, BIHAR. - 821307 PH 8294634602.

GAYA

 KARLO AUTOMOBILES PVT LTD (Y601-Y6-01), BODH GAYA, GAYA. - 824231 PH:7004574631/8539063615.

165. DMC CARS (A UNIT OF DHANRAAJ AGENCIES PYT LTD (Y602-Y6-01), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD, GAYA, PIN 823004 - 823004 PH 9031011806/990024001.

GOPALGANJ

 SHREE GOPAL AUTO PVT. LTD. (O301-O3-01), NH-28, DANAPUR, TEHSIL-MANJAGARH, GOPALGANJ (BIHAR) -800023
 PH:9771486170/9771486139.

HAJIPUR

167. REESHAV AUTOMOBILES (MG01-MC-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI). - 844/101 PH :9060945038

KATIHAR

168. SEEMANCHAL MOTORS PVT. LTD. (0601-06-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAR PURNEA ROAD, KATIHAR - 854105 PH :7762893700.

KISHANGANJ

169. SEEMANCHAL MOTORS PVT. LTD. (PX01-PX-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA:KNE, WARD NO.1, KISHANGANJ (BIHAR). 855101 PH : 3727066119

LAKHISARAI

 GS MOTORS PVT. LTD. (CHU1-CHU-01), TAUZI
 NO. 39, KHATA NO. 3, KHESRA NO. 496, MOUZA -JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR. - 811311
 PH. 9204756206.

MADHUBANI

171. RAJKRISHNA MOTORS LLP (CAJ2-CAJ-01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR -847211 PH :3304481978 9893127351

MOHANIA

172. PEARL CARS (VW01-VW-01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109 PH:8294634632/8294634649.

MOTIHARI

173. RAJIV AUTOMOBILES PVT LTD (T401-FH-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401 PH :9234609669

MUZAFFARPUR

174. RAJIV AUTOMOBILES PVT LTD (T401-T4-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002 PH :9910347908

175. RAM KRISHNA MOTORS PRIVATE LTD. (T402-T4-01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. -822001

PH :9102173333

176. RAJIV AUTOMOBILES PVT LTD (T401-T4-04), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146 PH :9234609671.

NAUGACHIA

177. SEEMANCHAL MOTORS PVT. LTD. (CFS1-CFS-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204 PH-8797096014, 8797096020.

NAWADA

178. REESHAV AUTOMOBILES (MG01-TJ-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110 PH :6206162228.

ΡΔΤΝΔ

 VAU'S AUTOMOBILE (1503-15-01), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA. - 800014 PH - 977/1446012

 KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. -800013

PH:09304212119/7004573547.

 ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-03), PLOT NO. 118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001 PH -9934020200 182. REESHAV AUTOMOBILES PVT.LTD. (1506-15-01), PLOT NO.25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004 PH. 7632995358

183. KARLO AUTOMOBILES PVT LTD (1502-15-05), JAGDEOPATH, NEAR SAI CORPORATE PARK, PATNA - 801506

PH :9264190675

184. ALANKAR (1504-15-06), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA – 800006 - 800006 PH :9304403916

PURNEA

185. SEEMANCHAL MOTORS PVT. LTD. (6V01-6V-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326 PH :8797096014

SAHARSA

186. GS MOTORS PVT. LTD. (AAP1-AAP-02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201 PH :9263638456.

SAMASTIPUR

187. RAJKRISHNA MOTORS LLP (1W02-1W-01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101 PH 9204552405

SASARAM

188. PEARL CARS (1X01-1X-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115 PH :8294634602/8294634649.

SITAMARHI

189. RAJIV AUTOMOBILES PVT. LTD. (E001-E0-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. -843301 PH :9234609671 7280074124.

SIWAN

 SHREE GOPAL AUTO PVT. LTD. (O501-05-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236 PH:9771486132.

CHANDIGARH

CHANDIGARH

 MODERN AUTOMOBILES (0702-07-01), 4 M.W. INDL AREA, CHANDIGARH - 160002 PH:9646000190.

 AUTOPACE NETWORK PVT LTD (0705-07-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002 PH :9878422201.

 TRICITY AUTOS (9M01-07-02), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH -160002

PH:9988882335

194. NAVDESH AUTO LLP (0708-07-01), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. -160002 PH 17087035482

7087035482.

CHHATTIGARH

PENDRA

195. M SQAURE (SC21-SC2-01), – M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA, GOURELA PENDRA MARWAHI-495119-495119 PH. 7987590484.

CHHATTISGARH

AMBIKAPUR

196. MAHAMAYA AUTOCARS PVT LTD (AE01-AE-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001 PH: 7987741432.

BAGBAHARA

 HDN MOTORS (SEB1-SEB-01), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449 PH - 7909800004

BAIKUNTHPUR

198. MAHAMAYA AUTOCARS PVT LTD (CQU1-CQU-01), WARD NO.01, KHATA NO.91/6, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335 PH - 91793670707

BALODA BAZAR

 SKY AUTOMOBILES (5001-GJ-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332 PH :9893307429.

BEMETRA

200. CHOUHAN AUTOMOBILES LLP (CBC2-CBC-01), KHASRA NO. 88/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVGHAD CHOWK, BEMTARA CHATTISGARH - 491335 PH +5/25/000222

BHATAPARA

 SPARSH AUTOMOBILES (BBJ1-BBJ-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118 PH: 8921326361/9285505780.

BHILAI

 CHOUHAN AUTOMOBILES LLP (8305-83-01), PLOT NO. 18. 44. SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. - 490023
 PH 9111100140

203. SPARSH AUTOMOBILES PVT LTD (8304-83-01), R-17, INDUSTRAIL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH -490026 PH : 8779064848

 CHOUHAN AUTOMOBILES LLP (8305-83-02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH -491001

PH:6262000222.

BHILLAI

205. SPARSH AUTOMOBILES (8304-83-022), M/S. SPARSH AUTO, VEERSAVARKAR MARKET, G.E ROAD, SUPELA, BHILLAI-490023 - 490023 PH 9926626662

BILASPUR

 SATYA AUTO PVT LTD (C303-C3-01), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001 PH: 9109194833.

 SATYA AUTO PVT LTD (C303-C3-02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. - 495006 PH :9977879698.

 M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (C302-C3-01), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. - 495223
 PH -893627580

DHAMTARI

 SKY AUTOMOBILES (7V01-7V-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH:8889998612.

DURG

210. SPARSH AUTOMOBILES PVT LTD (7W03-7W-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001 PH 9860437544

GARIYABANDH

211. SPARSH AUTOMOBILES (CCH1-CCH-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032 PH:966963883.

JAGDALPUR

212. SKY AUTOMOBILES (EC01-EC-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001 PH:9109996511.

JANJGIR

213. SATYA AUTO PVT LTD (9N02-9N-01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668 PH:7747000446.

KANKER

214. SKY AUTOMOBILES (5001-KG-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER, DISTRICT – KANKER, CHHATTISGARH - 494334 PH-8880008675

KAWARDHA

 CHOUHAN AUTOMOBILES LLP (DI02-DI-01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491 995 PH + 5262000222

KHAIRAGARH

216. SPARSH AUTOMOBILES PVT LTD (GMG1-GMG-01), KHAIRAGARH -JHALBANDHA ROAD, AMLIPARA, OPP - BIJALI OFFICE, KHAIRAGARH A-491881 - 491881 PH :9926626662

KHARSIA

 SATYA AUTO (SET1-SET-01), M/S SATYA AUTO, BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH -496661
 PH -9003020761

KONDAGAON

 SKY AUTO (SDF1-SDF-01), – M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGOAN, CHHATTISGARH - 494226 PH - 9425-204051

KORBA

 SATYA AUTO PVT LTD (U702-U7-01), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681 PH :8462000861.

MAHASAMUND

220. SPARSH AUTOMOBILES (5002-9P-02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND. -?? PH :9926280700.

MANENDRAGARH

221. MAHAMAYA AUTOCARS PVT LTD (AE01-BCE-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442 PH 9584136234.

MUNGELI

222. SATYA AUTO PVT LTD (BLE2-BLE-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468 PH :8462000844

PATHALGAON

223. MAHAMAYA AUTOCARS PVT LTD (BXO1-BXO-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118 PH :9752195523.

PITHORA

224. SPARSH AUTOMOBILES (CCG1-CCG-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008 PH :9926780700

RAIGARH

225. SATYA AUTO PVT LTD (7Y03-7Y-01), JINDAL ROAD, RAIGARH - 496001 PH -7024398350

RAIPUR

- SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010 PH:9584433102.
- SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH:9584460290.
- SPARSH AUTOMOBILES (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001 PH :9669792000.
- 229. SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH :9893000161.
- 230. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH :9522314155.
- SPARSH AUTOMOBILES (5002-50-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR -492004
 PH -9009666400
- 232. SPARSH AUTOMOBILES (5002-50-05), PLOT 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR ??
- PH: 3977220395.
 233. SKY AUTOMOBILES (5001-50-07), ADJOINING
 WALLFORT CITY, BHATGAON, RING ROAD NO. 2,
 RAIPUR, CHHATTISGARH. 492013
 PH: 95844670290
- 234. HDN MOTORS PVT. LTD. (5005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. -492001 PH. 7909800093.

235. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-50-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH - 492005 PH 6262620057

RA.IIM

 SPARSH AUTOMOBILES (5002-MO-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881 PH :966963883.

RAJNANDGAON

 SPARSH AUTOMOBILES PVT LTD (LQ02-LQ-01), NEAR HANUMAN TEMPLE, VILL-MANKI, NH-6, RAJNANDGAON, CHHATTISGARH - 491441 PH:7887518100.

SARAIPALLI

 SKY AUTOMOBILES PVT. LTD. (BUF1-BUF-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI -493558
 PH. 7000723259

SARANGARH

239. SATYA AUTO PVT LTD (BUC2-BUC-01), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. -733751 PH: 2462000841.

TILDA

 SKY AUTOMOBILES (CWR1-CWR-01), KASRA NO. 29/31, TILDA, DIST.-RAIPUR, CHHATTISGARH. - 493 114 PH: 9425204051.

DADRA AND NAGAR HAVELI

241. KATARIA AUTOMOBILES PVT. LTD. (ED01-ED-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230 PH -9723816223.

DAMAN AND DIU

DAMAN

 KATARIA AUTOMOBILES PVT. LTD. (0104-98-08), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN, DAMAN UNION TERRITORY - 396210 PH: 39224130655.

DELHI

DELHI

 SAYA AUTOMOBILES PVT. LTD. (0808-08-03), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033 PH: 47088888.

- 244. BAGGA LINK MOTORS PVT LTD. (0811-08-01), 395 PATPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092 PH :464888310 46488831
- BAGGA LINK MOTORS PVT LTD. (0811-08-02), LINK ROAD. (NEAR BAGGA PETROL PUMP). KAROL BAGH, NEW DELHI - 110005 PH - 2352/868 2352/869
- 246. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-01), A-100 MAYAPURI,PHASE-II,NEW DELHI - 110064 PH :41845000, 49305232.
- 247. COMPETENT AUTOMOBILES CO. LTD. (0806-08-03), PLOT NO.3, GAZIPUR, DELHI, -110096 PH. 45300000
- T.R. SAWHNEY MOTORS PVT LTD (0819-08-01),
 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094
- 249. RANA MOTORS PVT LTD (08A1-08-02), C-47,0KHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020
- 250. T.R. SAWHNEY MOTORS PVT LTD (0819-08-02), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042 PH : 71118333.
- 251. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F2-08-01), 5, WAZIRPUR, INDUSTRIAL AREA, ADJACENT TO WAZIRPUR DEPOT, RING ROAD, NEW DELHI-110034 PH. 27153996-99. 27151466-67.
- ROHAN MOTORS LTD. (0886-08-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044 PH :40567900, 41679252-259.
- MAGIC AUTO PVT. LTD. (0888-08-01),
 A-93,PHASE-2,MAYAPURI INDL AREA,DELHI-110064
 PH. 41847777
- 254. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F3-08-01), A-1 UDYOG VIHAR,NEW ROHTAK ROAD,PEERAGARHI,DELHI - 110041 PH:25963535, 48616500.
- T.R. SAWHNEY MOTORS PVT LTD (0819-08-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092 PH :9873851333.
- 256. MAGIC AUTO PVT. LTD. (08B7-08-01), PLOT NO. 68/3,MOTINAGAR,NEW DELHI, - 110015 PH:43777777, 43777721.
- KRISH AUTOMOTORS PVT. LTD. (08C1-08-01), PLOT NO.9, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. - 110063 PH :43288888.

- SAYA AUTOMOBILES (0808-08-2B), KHASRA NO.2,G.T. KARNAL ROAD, OPP. GURUDUARA HARGOVIND SINGH, SIRAS PUR BADLI, DELHI-110033
- PH :27731325, 27731856.
 259. COMPETENT AUTOMOBILES CO. LTD. (0806-08-05), B-83 MAYAPURI PHASE I, NEW DELHI 110015
 PH :47268980
- 260. BAGGA LINK MOTORS PYT LTD. (0811-08-03), PLOT NO.4,6,8,10 NEAR FORTIS HOSPITAL, OPPOSITE NIRULAS, BABA POTERY COMPOUND, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI - 110070 PH :45688888, 45688811.
- 61. RANA MOTORS PVT LTD (08A1-08-04), B-6/6,
 OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI
 110020
 - PH:40877777, 26389930.
- 262. COMPETENT AUTOMOBILES CO. LTD. (0806-08-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI - 110 015 PH:8377007980/81/02.
- 163. PREM MOTORS PVT. LTD. (08D4-08-01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI-110037 PH: 42390000.
- AAA VEHICLEADES PVT. LTD. (0889-08-03),
 VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 &
 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR
 NO.616, MUNDKA, NEW DELHI 110041
 PH:66118888.
- 265. RANA MOTORS PVT LTD (08A1-08-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033 PH : 41609999, 42474444.
- 266. KRISH AUTOMOTORS PVT. LTD. (08A9-08-03), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. -110052
 - PH:42020000, 9910114255.
- 167. T.R. SAWHNEY MOTORS PVT LTD (08D2-08-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHIL - 110064 PH - 71119333 90900409337
- 268. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-02), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015 PH 999903388
- MAGIC AUTO PVT. LTD. (08D5-08-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092 PH - 9818741741

 DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-03), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. 110043

PH:9999127840/9999127947

- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F5-08-01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI. - 110040 PH: 8860637358
- 272. DD MOTORS (A DIVISION OF D.D. PREM PYT.LTD.) (08F1-08-04), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI. - 110059 PH 9873173005
- 273. FAIR DEAL WHEELS PVT. LTD (08E3-08-01), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJHAWALA ROAD, DELHI - 110086 PH. 9711993801.
- COMPETENT AUTOMOBILES CO. LTD. (0806-08-07), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059 PH 9582797772

OKHI A DELHI

275. AAA VEHICLEADES PVT LTD (08B4-08-01), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020 PH: 8448582912.

WAZIRPUR - DELHI

 DD MOTORS (08F1-08-05), A-90, WAZIRPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052 PH:9310367233.

GOA

BICHOLIM

77. SAI SERVICE PRIVATE LIMITED (BHN1-BHN-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529 PH:2385500, 9881746566.

CANACONA

278. CHOWGULE INDUSTRIES PVT. LTD. (IT01-IT-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702 PH:0832-2633010/8805024916.

CUNCOLIM

 SAI SERVICE PRIVATE LIMITED (3402-AAO-06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNAMODDI, CUNCOLIM, SOUTH GOA -403703
 PH : 2763062, 2763063, 9850398057.

DHARBANDORA

 CHOWGULE INDUSTRIES PVT. LTD. (3408-GO-07), AT. KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401 PH : 0832-6623477/7888004357.

MAPUSA

- SAI SERVICE PRIVATE LIMITED (3402-8Z-05),
 D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA,
 GOA, 403507
 PH :2267000. 8660432266.
- 282. CHOWGULE INDUSTRIES PVT. LTD. (3408-8Z-03), PLOT NO. 19/20, THIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA, GOA - 403507 PH : 0832-6631666/6631608/8888817955.

MARCEL

 SAI POINT CARS PVT. LTD. (3409-CWP-02), SURVEY NO. 62/1, C/O IOC PETROL PUMP, SAI NAGAR, MARCEL, GOA. - 403107 PH: 8380013499.

MARGAO

- 284. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602 PH: 0832-6623444/420/7796630235.
- 285. SAI POINT CARS PVT LTD (3409-1Y-01), H.NO.17, WARD NO.5, SURVEY NO.343, 344, MARGAON PONDA HIGHWAY, SONFATOR AMBORA, CAMURLIN, SALCETE ,GOA - 403722 PH : 9545454826/8380013499.
- 286. SAI SERVICE PRIVATE LIMITED (3402-1Y-02), SURVEY NO. 212/4, VILLAGE - VERNA, TAL: SALCETE, NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718
- PH:2883000, 2791195,9834398096.
 287. CHOWGULE INDUSTRIES PVT. LTD.
 (3498-Y-08), PLOT NO. M-58 AND M-59, PHASE
 3B, VERNA INDUSTRIAL ESTATE, MARGAO,
 VERNA, SALCETE SOUTH GOA, GOA 403722
 PH:0832-6621800/9922950800.

PANAJI

- CHOWGULE INDUSTRIES PVT. LTD. (3408-P1-02), D.B BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001 PH 9922950798/9922925701
- 289. SAI SERVICE PRIVATE LIMITED (3402-P1-07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002. - 403001 PH :22229/22/225222 9923865179.

PERNEM

 CHOWGULE INDUSTRIES PVT. LTD. (CUA1-CUA-01), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA. - 403512 PH :83800R2983

PONDA

 SAI SERVICE PRIVATE LIMITED (3402-34-03), OFF PANJIM HIGHWAY, PONDA, GOA, - 403401
 PH: 2324106, 2311499, 2324120, 9518349559.

PORVORIM

292. SAI SERVICE PRIVATE LIMITED (3402-P1-01), SURVEY NO: 36/1,PENHA DE FRANCE, TAL: BARDEZ, ALTO PCRVORIM,GOA - 403501 PH: 2419200, 2414324, 9881746567.

SANVORDEM

293. CHOWGULE INDUSTRIES PVT. LTD.
(BTK1-BTK-01), SURVEY NO. 4, SUBDIVISION-3,
VILLAGE – CACORA, TALUKA – CURCHOREM,
SANVORDEM, DIST. – SOUTH GOA, GOA. 403706
PH -9850477607

SATTARI

 CHOWGULE INDUSTRIES PVT. LTD. (3408-BOP-10), SURVEY NO. 60, SUB DIV NO. 05, VILLAGE ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA-403505
 PH. 9923464422.

TALEIGAON

295. CHOWGULE INDUSTRIES PVT. LTD. (3408-NP-06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON, - 403001 PH -902/926/708/02/29/25/71

VASCO

- 296. SAI SERVICE PRIVATE LIMITED (3402-CP-04), NEXT TO SHIKALIM CHURCH, SHIKALIM, VASCO, GOA - 403802 PH : 2542581/2526008/2526000/9850398058.
- CHOWGULE INDUSTRIES PVT. LTD. (3408-CP-09), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO, GOA - 403802 PH:0832-2500407/427/9921943608/9850986904

GUJARAT

AHMEDABAD

- KIRAN MOTORS LTD (0102-01-01), SARKHEJ-GANDHINAGAR HIGHWAY, OPP. RAJPATH CLUB, AHMEDBAD - 380054 PH: 9624055445.
- 299. KATARIA AUTOMOBILES PVT. LTD. (0104-01-01), D/8 BEHIND ESI HOSPITAL, OUTSIDE DARIAPUR DARWAJA, AHMEDABAD - 380016 PH 9824543500

- POPULAR WHEELERS (INDIA) PVT. LTD. (0105-01-01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443 PH :61903232.
- KIRAN MOTORS LTD (0102-01-02), BEHIND L&T GODOWN, SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210
- PH:26891863, 26891009, 26891294.

 CLAUSE NATURE OF THE PARTY OF THE PROPERTY O
- 302. KATARIA AUTOMOBILES PVT. LTD. (0104-01-05) NEAR KOKHRA BRIDGE, MANINAGAR - 380008 PH:7567568182.
- KATARIA AUTOMOBILES PVT. LTD. (0110-01-01), BEHIND ADANAL PUMP, NEAR MAKARBA CROSSING, MAKARBA, SG HIGHWAY - 380051 PH - 7069054000
- 304. POPULAR WHEELERS (INDIA) PVT. LTD. (0111-01-01), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA, AHMEDABAD - 380054 PH : 65058111.
- KIRAN MOTORS LTD (0112-01-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005 PH :8347491800/9824023122.
- 06. UDAY AUTOLINK PVT. LTD. (0113-01-01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT - 382430 PH.7567229999.
- NANDA AUTOMOBILES PVT. LTD. (0114-01-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405 PH :8866558787 / 8460088883.
- STARLINE CARS (AHMEDABAD) PVT LTD (0115-01-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330 PH 9823601779
- KIRAN MOTORS LTD (0112-01-02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330 PH
 :7069868374/9173840458/7383651643/91730441
- 310. KIRAN MOTORS LTD (0102-01-04), SURVEY NO. 2493, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060 PH 9327617447 9327914890
- 311. POPULAR WHEELERS (INDIA) PVT. LTD. (0109-01-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAY, AN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. 380007 PH -90090393870

- PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (0129-01-01), PLOT NO. 116, BOPAL – AMBIL ROAD, BOPAL, AHMEDABAD, DISTRICT – AHMEDABAD, GUJARAT. - 380058 PH. 7211140026, 7211130053.
- TANU MOTORS PVT. LTD. (0118-01-01), SURVEY
 NO. 1155/1-2, 1154 & 1156, PLOT NO. 39,
 SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) 382110
 PH :9512009110.
- 314. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (0117-01-01), PLOT NO.116 & 118/2, SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD - 382418 PH.7623089000.
- STARLINE CARS PVT. LTD. (D101-01-09), SR NO - TP - 57, PLOT NO. 67, NEAR GOTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S.G. HIGHWAY, GOTA, AHMEDABAD. - 382481 PH :9824601729.
- 316. KATARIA AUTOMOBILES PVT. LTD. (0110-01-02), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3, 110, BM SILVER STAR, BESIDE HARI VILLA BUNGLOWS, GOTA ROAD, CHANDLODIYA, AHMEDABAD. - 382481 PH-9824000378
- DB MOTORS PRIVATE LIMITED (0119-01-01), SURVEY NO. 131A, NH-8, ASLALI, OPP.-OCTROI NAKA, AHMEDABAD. - 382427 PH :9726031111.
- 318. POPULAR WHEELS (0111-01-02), SAVAN SQUARE, SHOP NO. 1, 2, 3, 4, 5, SERVE NO. 39/1, F.P. NO. 92, T.P. NO. 66/A, CHENPUR, NEW RANIP, AHMEDABAD. - 382 427 PH 9925203344.
- DB MOTORS PRIVATE LIMITED (0119-01-02), PLOT NO. 718, ASHRAM ROAD, OPPOSITE GANDHI ASHRAM, OLD VADAJ, HRIDAYA KINJ, AHMEDABAD. - 380013 PH -00100148260

AMOD

320. RAVIRATNA MOTORS (F801-ZE-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110 PH :9687691106/9687699383.

AMRELI

321. ALPHA AUTOLINK LLP (9E02-9E-01), LATHI BY PASS ROAD, AMRELI, GUJARAT. - 365601 PH -9978938858/9978938833

ANAND

322. AMAR CARS PVT. LTD. (F702-F7-01), JANTHA CROSSING, SOJITRA ROAD, ANAND - 388121 PH:9909960772.

323. KATARIA AUTOMOBILES PVT. LTD. (F703-F7-01), SURVEY NO. 189/1+2/A+3/AK 190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT. -388 120 PH. 7693954466

ANKLAV

324. KATARIA AUTOMOBILES (SEO1-SEO-01), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASODAR CHOKDI, TAL. ASODAR, CITY ANKLAY, DIST. ANAND, PIN-388510, GUJARAT - 388510 PH :727917151

ANKLESHWAR

325. RAVIRATNA MOTORS PVT LTD (P901-P9-01), PLOT NO. 624/2/BA, GIDC, VALIA ROAD, ANKLESHWAR - 393002 PH :9687691063.

BAGODRA

326. NANDA AUTOMOBILES PVT. LTD. (CVQ1-CVQ-01), SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA. - 382240 PH 9727822000 972629111

BALASINOR

327. AMAR CARS PVT. LTD. (CJE1-CJE-01), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJINA MUVADA, VILLAGE – VADALA, TALUKA – BALASINOR, DISTRICT – MAHISAGAR, GUJARAT. - 388255 PH. 7211109960.

BARDOLI

- 328. DHRU MOTORS (4002-Q1-02), G.I.D.C,SURAT BARDOLI ROAD,BARDOLI, - 394601 PH :9825413113/9879104454.
- 329. KATARIA AUTOMOBILES PVT. LTD. (Q106-Q1-02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310 PH.7698022665/9924138860.

BAREJA

330. KATARIA AUTOMOBILES PVT. LTD. (BAN1-BAN-1), 5/6/7, ADITYA COMPLEX NATIONAL HIGHWAYS, BAREJA, TALUKA – DASKROI, DISTRICT – AHMEDABAD, GUJARAT -382425 PH : 7046079997.

BARWALA (AHMEDABAD)

 UDAY AUTOLINK PVT. LTD. (I401-I4-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450 PH:7567449999/9687677611.

BAVLA

332. KATARIA AUTOMOBILES PVT. LTD. (0104-RX-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220 PH 9824344889

CHRAJI

 STARLINE CARS PVT. LTD. (GJM1-GJM-01), R.S. NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST.-MEHSANA. - 384210 PH: 9909043244.

BHABHAR

334. STARLINE CARS (CWD1-CWD-01), SHOP NO. 7, 8.9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320 PH: 9909043244, 9824601729.

BHACHAU

335. K.D. MOTORS (P501-JP-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140 PH - 9909953736 987939919

BHANVAD

336. ATUL MOTORS JAM LLP (BND2-BND-01), R.S. NO.439, PLOT NO.19, BHANVAD (GUJARAT) -360510 PH:9574005964 / 9574004714.

BHARUCH

337. RAVIRATNA MOTORS (F801-F8-01), NH 8, OPP YOGI PETROL PUMP.P.O. ZADESHWAR, BHARUCH - 392011 PH:9687691044; 9687632647.

BHAVNAGAI

I38. KATARIA AUTOMOBILES (C902-C9-01), SURVEY NO 137/2, PLOT NO 301/2&3 AND 301/4&5, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004 PH 94/26/168/286

BHUJ

- K.D. MOTORS (P501-P5-01), PLOT NO. 5/6/14, UMANAGAR, MIRZAPUR HIGHWAY ROAD, BHUJ, GUJARAT - 370001
 PH :02832-232534/5, 9879898799, 8780351870.
- K.D. MOTORS (P501-P5-03), R.S NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001 PH:9909953124.

BODELI

 KIRAN MOTORS LTD (0R01-0R-01),
 OPP-NARMADA GUEST HOUSE, DABHOI ROAD BODELI, TALUKA: SANKHEDA, VADODARA -391135
 PH :9714592999.

BORSAD

342. AMAR CARS PVT. LTD. (BJM1-BJM-01), BORSAD – TARAPUR HIGHWAY, BORSAD, DISTRICT – ANAND, GUJARAT - 388540 PH 9586477744

CHANASMA

343. STARLINE CARS (CVF1-CVF-01), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220 PH:9909043244, 9824601729.

CHANDKHEDA - AHMEDABAD

344. KATARIA AUTOMOBILES PVT. LTD. (0104-01-10), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD. - 382470 PH :9723302111.

CHANDRALA

345. NANDA AUTOMOBILES PVT. LTD. (GLT1-GLT-01), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT. CHANDRALA, DIST-GANDHINAGAR, GUJARAT - 382320 PH 975606128 797776003

CHANGODAR

346. PEGASUS (A UNIT OF VISUAL MOTORS PVT. LTD.) (CTD2-CTD-01), SURVEY NO.393, VILLAGE – MORAIYA, CHANGODAR, TALUKA – SANAND, SUN DISTT - AHEMADABAD. - 382210 PH :7211120014.

CHIKHLI

347. KATARIA AUTOMOBILES PVT. LTD. (BCB1-BCB-01), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521 PH 769895389

CHILODA

348. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (GJO1-GJO-01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. - 382355 PH: 7211168938, 7623039000

CHOTILA

349. DREAM VEHICLES PVT LTD (CFI1-CFI-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO – CHOTILA, DISTRICT – SURENDRANAGAR, GUJARAT. 363520 PH. 927775709.

DABHOI

 KATARIA AUTOMOBILES PVT. LTD. (UU01-UU-01).
 OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110 PH: 8158000463

DAHOD

351. R B CARS PVT. LTD. (2C01-PL-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY, DAHOD - 389151 PH :9099043715, 9727700823.

DEESA

352. TANU MOTORS PVT. LTD. (Q801-UQ-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535

PH:9909006099.

353. NANDA AUTOMOBILES PVT. LTD. (2801-NR-03), NEAR UMIYA MATAJI TEMPLE, COLLEGE ROAD, AHMEDABAD ROAD, DEHGAM - 382305 PH - 234567

DETROJ

354. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (GLC1-GLC-01), PLOT NO-61,MILKAT NO-2534, AT-DETROJ.TALUKA-DETROJ.RAMPURA-382120 - 382120

DEVGADH BARIA

355. R B CARS PVT. LTD. (2C01-AOA-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380 PH :3099049344, 6352384846, 9099043715.

DHANERA

 TANU MOTORS PVT. LTD. (BZW1-BZW-01), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA. - 385310 PH -9000006009 8401784018

DHARAMPUR

357. KATARIA AUTOMOBILES PVT. LTD. (BSK1-BSK-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050 PH -9/23455291.

DHARI

358. ALPHA AUTOLINK LLP (GG02-GG-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640 PH : 39045499999978938585.

HOLKA

359. TANU MOTORS PYT. LTD. (CQ02-CQ-01). SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALIKUND HIGHWAY, DHOLKA, GUJARAT - 382 225 PH :9512009104.

DHORAJI

360. PERFECT AUTO SERVICE (5502-DL-09), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - -360410

PH :9099027402 8200969617

DHRANGADHRA

 DREAM VEHICLES PVT LTD (IM01-IM-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH-9227775725.

DWARKA

362. ATUL MOTORS JAM LLP (CJG2-CJG-01), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT – DWARKA – . 361335 PH : 5712212900 / 9574004714.

GANDHIDHAM

363. B M AUTOLINK (7702-77-01), EAST OF PLOT NO. 30-35,NATIONAL HIGHWAY, GANDHIDHAM -370201

PH -9727725723

364. B M AUTOLINK (7702-77-03), SURVEY NO.129/26 P, GALPADAR HIGHWAY, GANDHIDHAM, DISTT.KACHCHH, GUJARAT. - 370110 PH :9727725723, 9727739550.

GANDHINAGAR

- NANDA AUTOMOBILES PVT. LTD. (2801-28-01),
 1003, SECTOR-28, GANDHI NAGAR 382028
 PH: (079)23212692 / 93 / 94.
- 366. NANDA AUTOMOBILES PVT. LTD. (2801-28-05), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028 PH :079-23212692/93/94 9727726003

GODHRA

- R B CARS PVT. LTD. (2C01-2C-01), PLOT NO. 112/11.,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001 PH:9099043715, 9727700823.
- R B CARS PVT. LTD. (2C01-2C-04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001 PH 9099043715, 9727700823.

GONDAL

369. ATUL MOTORS PVT LTD (5503-AD-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY, GONDAL - 360311 PH 9904922333.

GOZARIA

 VIMCO MOTORS PVT. LTD. (GJN1-GJN-01), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825 PH :7016623842

HALOL

371. R B CARS PVT. LTD. (BKG1-BKC-01), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350 PH :999043715 ;927700823.

HALVAD

372. DREAM VEHICLES PVT LTD (GX01-GX-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP-HONEST RESTAURANT, AHMEDARD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) -363330 PH :8238000965.

HANSOT

373. RAVIRATNA MOTORS (BGQ1-BGQ-01), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. - 393030 PH -9687691063

HIMMATNAGAR

374. KIRAN MOTORS LTD (P601-P6-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001 PH :9824576711

IDER

 KIRAN MOTORS LTD (UX01-UX-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430 PH :8155904111

JAMNAGAR

- ATUL MOTORS JAM LLP (F402-F4-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001
 PH. 9574004710 / 9574004716
- STARLINE CARS PVT. LTD. (D101-Q9-02), CHANASMA HIGHWAY, PATAN - 384265 PH :7046046187.
- ATUL MOTORS JAM LLP (F402-F4-2), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002
 PH:9574004704 / 9574004717.

JASDAN

379. ATUL MOTORS PVT LTD (5503-0B-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST. -RAJKOT, GUJARAT. - 360050 PH 9265404142.

JHALOD

 R B CARS PVT. LTD. (CJF1-CJF-01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA- JHALOD, DISTRICT - DAHOD. - 389170 PH :9099684363, 9099043715.

JUNAGADH

 PERFECT AUTO SERVICES (5502-K8-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001 PH:9879518052, 7043999073, 9909022618.

JUNAGARH

 PERFECT AUTO SERVICES (5502-K8-02), PLOT NO. 81-82,G.I.D.C.
 DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001
 PH :9909006980, 7043999073, 9909022618.

DI

383. STARLINE CARS PVT. LTD. (D101-UR-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH-8160707156

KAKANPUR

384. RB CARS (SDN1-SDN-01), SURVEY NO.618/2, PAIKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. -388713 PH:3099049347.

KALOL

 NANDA AUTOMOBILES PVT. LTD. (2801-FW-02), PLOT NO. - 162-168, GIDC, KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028
 PH: 220781 / 82 / 83.

KAPADVANJ

386. AMAR CARS PVT. LTD. (NC01-NC-01), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADWANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620 PH-9909960761

KARJAN

387. AMAR CARS PVT. LTD. (UZ01-UZ-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) -391210 PH:7567299666/99252462929.

ΚΑΤΗΙ ΔΙ

388. AMAR CARS PVT. LTD. (CXA1-CXA-01), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387 630 PH 9090907751

KESHOD

 PERFECT AUTO SERVICES (BZY1-BZY-01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA – KESHOD, DISTRICT – JUNAGADH, GUJARAT. - 362220 PH: 7043999073.

KHAMBHAT

390. AMAR CARS PVT. LTD. (BNF1-BNF-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620 PH. 3909800772.

KHEDA

191. AMAR CARS PVT. LTD. (BNA1-BNA-01), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570 PH: 9909960761.

KHERALU

392. STARLINE CARS (SN02-SN-01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST.-MEHSANA. - 384325

PH:9909043244, 9824601729.

393. KATARIA AUTOMOBILES PVT. LTD.
(UW01-UW-01), PLOT NO. 116-121, DAL MILL
COMPOUND, OPP. SURAT JILLA SANGH, KIM
CROSS ROAD, NH-8, KIM - 394110
PH -9723555185

KODINAR

 PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (CSO1-CSO-01), R. S.NO 222, PLOT NO.2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT -362720 PH: 7043992893, 7043340792.

KUKARWADA

 STARLINE CARS PVT. LTD (CSC1-CSC-01), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUARAT) - 382830 PH :9990943244, 9824601729.

LIMBD

396. DREAM VEHICLES PVT LTD (BSG1-BSG-01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AIMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421 PH.102753-261262/9227775728.

LUNAWADA

397. R B CARS PVT. LTD. (BYN1-BYN-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA, TALUK-LUNAWADA, DISTT-MAISAGAR, GUJARAT. - 389230 PH 9099043715, 9727700823.

MANAVADAR

398. PERFECT AUTO SERVICE (CUI1-CUI-01), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA - MANAVADAR, DIST.-JUNAGADH. - 362 630 PH:7043999073.

MANDAL

399. KIRAN MOTORS LTD (IW01-IW-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL, DI: AHMEDABAD, GUJARAT. - 382130 PH: 9408803925.

MANDVI

400. K.D. MOTORS (UY01-UY-01), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR 'THE BEACH RESORT', MANDVI NALIYA ROAD MANDVI-KUTCH - 370465 PH :9809953088, 9825353679.

MANGROL

 KATARIA AUTOMOBILES PVT. LTD. (CAH1-CAH-01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH -6357071775

MANSA

402. NANDA AUTOMOBILES PVT. LTD. (2801-0L-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845 PH :9727921000.

MEHMDABAD

403. AMAR CARS PVT. LTD. (BRA1-BRA-01), PATEL FALIYA, KHATRAJ, MEHMEDABAD, DIST.-KHEDA, GUJARAT. - 387130 PH -090990781

MEHSANA

- 404. STARLINE CARS PVT. LTD. (D101-D1-01), NAGALPUR HIGHWAY,MAHESANA, GUJRAT -384002 PH -9999043635
- 405. TANU MOTORS PVT. LTD. (Q801-D1-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA 384002 PH 9990006076
- 406. VIMCO MOTORS PVT. LTD. (D103-D1-01), SURVEY NO. 104 & 104 PAIKI 1, AT P.O. -PALAVASANA, MEHSANNA, GUJARAT. - 384 002 PH : 980095333

METODA

407. ATUL MOTORS PVT LTD (5503-BLW-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021 PH: 8140909095, 9924688774.

MODASA

408. KIRAN MOTORS LTD (P601-CR-02), SHAMLAL JI ROAD,SABARKANTHA DIST., MODASA - 383315 PH:8155995111.

MORBI

409. PERFECT AUTO SERVICES (5502-X5-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI, TEHSIL-MORBI, DISTT.-MORBI, GUJARAT - 363641 PH :909058044 9925199569 9879499088

MOTI KHAVADI

410. ATUL MOTORS JAM LLP (AAU2-AAU-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST -JAMNAGAR, GUJARAT - 361140 PH :9574004709 (9574004743).

MUNDRA

 B M AUTOLINK (7702-AJ-02), PRAGPAR ROAD, MUNDRA, DISTRICT-KUTCH, GUJARAT, -370421 PH: 9687632631. 9978940978.

NADIAD

412. AMAR CARS PVT. LTD. (F702-P7-02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370 PH -900090701

NAKHATARANA

 KD MOTORS (CMV1-CMV-01), PLOT NO-1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHATRANA, KUTCH - 370615

NANA PONDHA

 AMAR CAR (SEL1-SEL-01), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA- KAPRADA, DIST-VALSAD -396126 PH :7227971155.

NASWADI

415. RAVIRATNA MOTORS (SCV1-SCV-01), HOUSE NO-301,302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR-391150
PH-9887691047

NAVSARI

416. KATARIA AUTOMOBILES PVT. LTD. (Q701-Q7-01), PLOT NO.-891, OPP PAUVA MILL, NH-8, NEAR GANESH SISODRA CHOKDI,GANESH SISODIA NAVSARI, GUJRAT - 396463 PH :9723430012.

NETRANG

 RAVIRATNA MOTORS (CUZ1-CUZ-01), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST.-BHARUCH. - 393130 PH:9687691063.

OLPAD

418. COMET CAR SALES & SERVICE PVT LTD (4006-ZZ-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH -909916099

 AMAR CARS PVT. LTD. (2205-OC-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. - VADODARA, GUJARAT - 391440 PH :8980036200. 8980006795.

PAI ANPLIR

- 420. TANU MOTORS (Q801-Q8-01), OPP.DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001 PH :9099017756.
- 421. STARLINE CARS PVT. LTD. (D101-Q8-08), SURVEY NO.4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH :9824601793.

PALEJ

422. RAVIRATNA MOTORS (BGR1-BGR-01), PLOT NO. 626/6, GIDC AREA, PALEJ, DISTRICT - BHARUCH - 392220
PH -0887601044 - 9887632647

PALITANA

 KATARIA AUTOMOBILES (CSD2-CSD-01), PLOT NO 15, YASOVIJAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BHAVNAGAR. - 364270

PALSANA

 KATARIA AUTOMOBILES PVT. LTD. (4004-ZF-07), BESIDE SAINATH COMPLEX, KADODARA AHMEDABAD ROAD, NH-8, UMBHEL GAM, TALUKA: PALSANA KADODARA, SURAT. -382721 PH: 9924446895.

PATDI

 DREAM VEHICLES PVT LTD (BFS1-BFS-01), R.S. NO.1614/2, PLOT NO.16, PATDI TALUKA DASADA, DISTT. SURENDRANAGAR, GUJARAT - 382765 PH - 9227775709

PAVI JETPUR

426. PERFECT AUTO SERVICES (PK01-PK-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370 PH :999027402. 8200969617.

PETLAD

427. AMAR CARS PVT. LTD. (CMW1-CMW-01), SURVEY NO. 396/2, RANGAIPUR VILLAGE, PETLAD, DIST.-ANAND. - 388450 PH:9099017068.

PORBANDAR

428. ATUL MOTORS JAM LLP (T601-T6-01), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY , PORBANDAR, DIST. PORBANDAR GUJARAT -360577 PH :9574004746 / 7228819123.

PRANTI.I

429. KIRAN MOTORS LTD (AAI1-AAI-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205 PH.9624401888.

RADHANPUR

 STARLINE CARS PVT. LTD. (BNI1-BNI-01), SURVEY NO. 208/A, MOUJA – RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT – PATAN, GUJARAT. - 385340 PH -9909043244 9824601729.

RAJKOT

- 431. PERFECT AUTO SERVICES (5502-55-01), PERFECT HOUSE, GONDAL ROAD, VANDI, RAJKOT - 360004
- PH:9879499077, 9909006982, 9825304940.
 432. ATUL MOTORS PVT LTD (5503-55-01), PLOT NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL ESTATE, RAJKOT. 360002 PH:8140909093.
- 433. PERFECT AUTO SERVICES (5502-55-04), 150 RING ROAD OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005 PH :9925238691 . 9925117104.
- 434. ATUL MOTORS PVT LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT 360005 PH :8347005382.
- 435. ATUL MOTORS PVT LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT 360003 PH -902488774
- 436. PERFECT AUTO SERVICES (5502-55-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. 360006 PH :9979861995, 9925117104.
- KATARIA AUTOMOBILES PVT. LTD. (5504-55-01),
 S. NO. 10/1, TPS NO. 10, KALAVAD ROAD,
 MOTAMAVA, RAJKOT, GUJARAT. 360001
 PH. 7573870001

RAJPARDI

438. RAVIRATNA MOTORS PVT. LTD. (CAI1-CAI-01), R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI, TALUKA-JHAGADIA, DISTT. BHARUCH - 393115 PH :9687691044; 9687632647.

RAJPIPLA

439. RAVIRATNA MOTORS PVT. LTD. (9X01-9X-01) OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145 PH. 9687691062/9687645880.

RAPAR

440. B.M. AUTOLINK (SCO1-SCO-01), PARAGPAR CHAAR RASTA RAPAR GHANDHIDHAM KUTCH -370165 PH :9727725723.

SAMI

441. STARLINE CARS (BNH1-BNH-01), SHOP NO. 55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD. - 384240 PH - 9909043244 9824601729

SANTEJ

442. NANDA AUTOMOBILES PVT. LTD. (CXC1-CXC-01), SUB PLOT NO. 05, SHOP NO. 3 & 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060 PH :9727822000.

SANTRAMPUR

443. R B CARS PVT. LTD. (2C01-RY-03), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR, DISTT.-PANCHMAHAL - 389260 PH :8980585851. 9099043715.

SAVLI

444. KIRAN MOTORS LTD (CFD1-CFD-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRIVA CHOWKDI, SAVLI — TIMBA ROAD, SAVIL, TALUK – SAVLI, DISTRICT – VADODARA, GUJARAT. - 391770 PH - 7942/7906/4

SAYAN

445. KIRAN MOTORS LTD (O001-00-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIA, TALUKA: OLPAD, SAYAN - 394130 PH:8155888862/9662330480.

SHAPAR

446. ATUL MOTORS PVT LTD (BQZ1-BQZ-01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT – RAJKOT, GUJARAT -360024

PH:9714008492, 9624711397.

SIDDHPUR

447. STARLINE CARS PVT. LTD. (CMY1-CMY-01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA – VADGAM, DISTRICT – PATAN. - 384151 PH :9909043244, 9824601729.

SINOR

448. RAVIRATNA MOTORS PYT LTD (GML1-GML-01), NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD, AT AND POST SECVA, TALUKA SINOR, DIST. VADODARA, PIN-391105, GUJARAT - 391105 PH :727055065

SONGADH

449. COMET CAR SALES & SERVICE PVT LTD (CWE1-CWE-01), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA - SONGADH, DIST.-TAPI. - 384220 PH :9099916099.

SUPEDI

450. KATARIA AUTOMOBILES (SEM1-SEM-01), SURVEY NO-482/7, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST -RAJKOT - 360440 PH :9409497902.

SURAT

- 451. KIRAN MOTORS LTD (4001-40-01), SURAT-BARDOLI ROAD, DUMBHAL, NEAR PUNA JAKAT NAKA, SURAT - 395010 PH 9024448715/9024637898
- 452. DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR, NEAR JEEVAN JYOT THEATRE, UDHNA MAIN ROAD, SURAT - 394210 PH :9925155911/9925155907.
- 453. KIRAN MOTORS LTD (4001-40-02),
 PANDESARA,BAMROLI ROAD,SURAT 395002
 PH 9824603880
- 454. KATARIA AUTOMOBILES PVT. LTD. (4004-40-04), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESU, SURAT -395007 - 395007 PH:9714612700, 9924401000.
- DHRU MOTORS (4002-40-1B), 207, NEW INDUSTRIAL ESTATE, ROAD NO.-6, UDHNA UDYOG NAGAR, SURAT - 394210 PH:0261-2272118/9978900862.
- IS6. KATARIA AUTOMOBILES PVT. LTD. (4004-40-05), KATARIA ARCADE,OPP. RAJHANS CINEMA,DUMAS ROAD, PIPLOD, SURAT - 395007 PH:7698022449/9624477252.
- COMET CAR SALES & SERVICE PVT LTD (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH -9090415092
- 458. KATARIA AUTOMOBILES PVT. LTD. (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT -394310 PH :9924119020.
- 459. KIRAN MOTORS LTD (4005-40-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT -395009

PH:9824611153/9824701590.

- 460. AMAR CARS PVT. LTD. (4009-40-02), PLOT NO.108.11, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR DOVCL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH 708020512
- 461. COMET CAR SALES & SERVICE PVT LTD (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT – SURAT, GUJARAT. - 395004 PH-9099916099.
- 462. DHRU MOTORS (4002-40-03), PLOT NO.54/A, LAXMINARAYAN LNDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210

SURENDERNAGAR

- 463. DREAM VEHICLES PVT LTD (LC01-LC-01), 261/P, OPP MARKETING YARD, GIDC AREA, WADHWAN CITY, SURENDERNAGAR - 363030 PH 102752-241314 (102752-851516) 9227775721
- DREAM VEHICLES (LC01-LC-02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANGAR, GUJARAT-363030 - 363030 PH 9227775724

TANKARA

465. ATUL MOTORS PVT LTD (BQY1-BQY-01), PLOT NO. 8/1, S. NO. 107, VILLAGE – JABALPUR, TALUKA – TANKARA, SUB DISTRICT – MORBI, DISTRICT – RAJKOT. - 363650 PH:9714008492. 9624711397.

TARAPUR

466. AMAR CARS PVT. LTD. (GH01-GH-01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST. -ANAND. - 388180 PH:990980772.

THARA

467. TANU MOTORS PVT. LTD. (0V01-0V-01), SHOP NO.17 & 18, SIHORI HIGHWAY, R.B. THAKKAR COMPLEX, THARA, KAKREJ TALUKA, BANASKANTHA DISTT. - 385555 PH: 9909006099, 9913830329.

THARAD

 TANU MOTORS PVT. LTD. (CDM1-CDM-01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA - 384220 PH: 9909006099, 9724219565.

UMERGAON

469. KATARIA AUTOMOBILES PVT. LTD. (BNB1-BNB-01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT - VALSAD, GUJARAT. - 396170 PH :9624001794.

UMRETH

 AMAR CARS PVT. LTD. (CFE1-CFE-01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH, DIST.ANAND, GUJARAT. - 388220 PH -9909960772

LINIA

471. PERFECT AUTO SERVICES (BFD1-BFD-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP. BHAVNAGAR HIGHWAY, VAYAUPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. 362560
PH.7043992893, 7043340792.

UNJHA

472. TANU MOTORS (Q801-GR-02), OPP. DHANA DAL FACTORY, MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH :9727762079.

UPLETA

473. PERFECT AUTO SERVICE (CH01-CH-01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360 490

PH:9099027402, 8200969617. VADNAGAR

474. VIMCO MOTORS PVT LTD (GKU1-GKU-01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355 PH :7016823842.

VADODARA

- 475. KIRAN MOTORS LTD (2201-22-01), 909/4,G.I.D.C.MAKARPURA,VADODARA - 390010 PH:9624472699.
- 476. KIRAN MOTORS LTD (2201-22-02), PLOT NO.160, SUB-1 NUTAN GUJ.INDL.ESTATE, OLD CHHANI ROAD, VADODARA - 390002 PH: 9824207889.
- 477. AMAR CARS PVT. LTD. (2203-22-01), GORWA ROAD, VARODARA, GUJARAT, - 390016 PH:9081311990, 9723742425, 8980036184.
- AMAR CARS PVT. LTD. (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH 7211109952
- KATARIA AUTOMOBILES PVT. LTD. (2204-22-01), 984/4,GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH: 9904033422.
- 480. AMAR CARS PVT. LTD. (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH : 3980006756.

- 481. KIRAN MOTORS LTD (2201-22-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA 390002
 PH 2771122
- 482. KATARIA AUTOMOBILES PVT. LTD. (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001 PH :8156017770.
- 483. RAVIRATNA MOTORS PVT LTD (2206-22-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA. - 390012 PH:7227055065, 7227055064.

VALOD

484. DHRU MOTORS (CSW1-CSW-01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. -394640 PH: 3712984522.

VALSAD

 KATARIA AUTOMOBILES PVT. LTD. (0104-2E-06), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020 PH -904133316

VANSDA

486. KATARIA AUTOMOBILES PVT. LTD. (Q701-SB-02), JAMNABA PARK, VANSDA HANDIMAN BARI CHAR RASTA, VANSDA DERARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT – NAVSARI, GUJARAT - 396580 PH. 7624088188.

VAF

- KATARIA AUTOMOBILES PVT. LTD. (0104-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195 PH 9024204423
- 488. KATARIA AUTOMOBILES PVT. LTD. (0104-97-09), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI, DISTRICT-VALSAD, GUJARAT - 369191 PH 9724467812
- 489. AMAR CARS PVT. LTD. (9701-97-01), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145 PH :9327909504.

VERAVAL

490. PERFECT AUTO SERVICES (5502-AH-05), NR. BALIYA HANUMAM, VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265 PH :9998994550. 9898121122.

VIJAPUR

 STARLINE CARS PVT. LTD. (D101-V2-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH 9909043635

VIRAMGAM

492. KIRAN MOTORS LTD (AAB1-AAB-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH:8156016222.

VISNAGAR

493. STARLINE CARS PVT. LTD. (D101-RW-05), VISNAGAR - AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT.- MEHSANA - 384315 PH - 7046046174

VYARA

494. COMET CAR SALES & SERVICE PVT LTD (BIY1-BIY-01), SHOP NO. 11 & 12, BLOCK NO. 1751/IA, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT – TAPI, GUJARAT - 394650 PH 9099916099

WAGHODIA

495. KATARIA AUTOMOBILES PVT. LTD.
(BZZ1-BZZ-01), OPPOSITE BHARAT
PETROLEUM, WAGHODIA, TALUKA –
WAGHODIA, DISTRICT – VADODARA, GUJARAT. 391760
PH. 7203013712.

WANKANER

496. ATUL MOTORS PVT LTD (BAL1-BAL-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621 PH :9904922333.

HARYANA

ADAMPUR (HARYANA)

497. HISSAR AUTOMOBILES (CWW1-CWW-01), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 44/21/1/2(-10), MANDI ADAMPUR, TEHSIL -ADAMPUR, DIST.-HISSAR, STATE - HARYANA. -125052 PH :8607777153.

AMBALA

- 198. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003 PH: 9215016044.
- MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA -134003
 PH :9215016044.

- EAKANSH WHEELS (1802-18-01), STONE NO.
 JAGADARI ROAD, VILLAGE TEPLA, AMBALA
 133001
 1991703000
- 501. EAKANSH WHEELS (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001
- PH:88813874888.
 502. TR SAWHNEY (1803-18-01), JAGGI GARDEN,
 BALDEV NAGAR, OPPOSITE AMBALA PASSPORT

OFFICE, AMBALA - 134003 PH:9990110068.

 KARNAL MOTORS PVT. LTD. (8906-CS-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032 PH-7082111325

BABARPUR

ASSANDH

504. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES PLTD) (CKX1-CKX-01), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103 PH:7009396727.

BAHADURGARH

 COMPETENT AUTOMOBILES CO. LTD. (2G02-2G-01), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124 507 PH :8929648144.

BAPOLI

506. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES PLTD) (CWI1-CWI-01), KHEWAT NO. 136, VILLAGE – JHAMBA, TEHSIL – BAPOLI, DISTRICT – PANIPAT. - 132103 PH -9053400583

BARARA

 EAKANSH WHEELS (NX01-NX-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA -133201
 PH :9991478100.

BARWALA

 MODERN AUTOMOBILES (BSA2-BSA-01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118 PH :9896217059.

BAWAL

509. DINCO 4 WHEELS LLP (AUTO VIBES)
(BBD2-BBD-01), KHATA NO. 326 AND KHATAUNI
NO. 382, OPPOSITE PRATHAM HOUSING, NH-8,
BAWAL, DISTRICT – REWARI, HARYANA. 123501
PH 7082/100250

BHIWANI

 JAGMOHAN MOTORS PVT LTD (X301-X3-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021 PH :8685005592.

BILASPUR

511. PANDIT AUTOMOBILES PVT, LTD. (BGH1-BGH-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT – YAMUNANAGAR, HARYANA. - 135102 PH. 99921 13854.

BILASPUR (HARYANA)

512. PLATINUM MOTOCORP LLP (2L04-CIA-02), KHASRA NO.54/67, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT – GURUGRAM. - 122413 PH - 905334532919053345403

CHARKHI DADRI

 JAGMOHAN MOTORS PVT LTD (X301-CT-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306 PH :8059900538.

CHEEKA

 EAKANSH MOTORS PVT. LTD. (U802-HU-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034 PH:8053086000.

CHHACHHARAULI

515. PANDIT AUTOMOBILES PVT. LTD. (CQZ1-CQZ-01), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL – CHHACHHRAULI, DISTRICT – YAMUNA NAGAR. - 135103 PH -9812455896

DADRI TOE

516. COMPETENT AUTOMOBILES CO. LTD. (BVH2-BVH-01), KHEWAT NO. – 270 MIN, KHATONI NO. – 319, DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN 124103 - 124103 PH -9821308849.

DAHINA

517. DINCO 4 WHEELS LLP (AUTO VIBES)
(GLH1-GLH-01), REWARI MAHENDERGARH
ROAD, NEAR RAILWAY STATION, DAHINA,
REWARI - 123411
PH.7082100201.

DHAND

518. EAKANSH MOTORS (BEU1-BEU-01), PANCHMUKHI CHOWK, KARNAL ROAD, DHAND, DISTT. KAITHAL, HARYANA. - 136020 PH:8395906111.

DHARUHERA

 DINCO 4 WHEELS LLP (AUTO VIBES)
 (CRP1-CRP-01), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI. PH.7082100270.

ELLENABA

 SHAKTI MOTORS PVT.LTD. (E401-IN-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055 PH :8222000250

FARIDARAD

 VIPUL MOTORS PVT. LTD. (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002 PH :2555011 2555013

522. VIPUL MOTORS PVT. LTD. (5801-58-03), UNIT-II,
PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD
- 121006

PH :4286000 4286024 4286024 9311321419.

 TCS AUTOMOBILES (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD, - 121001
 PH:4292929: 7503036200.

524. FAIR DEAL PREMIUM WHEELS PVT.LTD. (5807-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003 PH :8448796684

525. TCS AUTOWORLD PVT. LTD. (TCS & ASSOCIATES PVT. LTD.) (5804-58-02), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. - 121003 PH : 927295. 799082911

526. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-58-01), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003 PH :4180500 7290037501

527. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-58-02), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. - 121006 PH:74287 48467.

FARRUKHNAGAR

528. PLATINUM MOTOCORP LLP (KE01-KE-01), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO. -19/3 AND 22/2, VILAGE – SEHADPUR MOHAMADPUR, TEHSIL – FARRUKHNAGAR, DISTRICT – GURGAON. - 122506 PH 9590007357/9953345380

FATEHABAD

SHAKTI MOTORS PVT.LTD. (2H02-2H-01), NH-10, SIRSA ROAD, FATEHABAD - 125050 PH :8222900217.

GANAUR

530. JAGMOHAN AUTOMOTIVES PVT. LTD. (NA04-NA-01), RAILWAY ROAD, GANAUR -131101

PH:8199911106. GHARAUNDA

PH -8222022321

 KARNAL MOTORS PVT. LTD. (8906-MR-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114

GOHANA

532. JAGMOHAN AUTOMOTIVES PVT. LTD. (CU03-CU-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. -SONEPAT - 131301 PH:8685005521.

GURGAON

533. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006 PH

:09650790323/7290069623/9999239959/4952100. 44. VIPUL MOTORS PVT. LTD. (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001 PH :4395701

4395704 8448487921.

 COMPETENT AUTOMOBILES CO. LTD. (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004 PH :42500002.

536. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, -122015

PH :07015804442/7982087767/9650701958/ 37. ROHAN MOTORS LTD. (9508-95-01), 2482/84, SECTOR-524, WAZIRABAD VILLAGE, OPP. ARDI CITY MALL, GURGAON - 122001 PH :08860076163/8130593202/8130593201/8130593

203.

538. VIPUL MOTORS PVT. LTD. (5801-95-04), PLOT NO.5/22/1, SARHAUL VILLAGE, SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102 PH :4395800 4395806

844848936.

PREM MOTORS PVT. LTD. (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON 122017

PH :4337900, 7065003445. 440. PREM MOTORS PVT. LTD. (9512-95-01), PLOT NO. 3,IDC, OPPOSITE SECTOR-14, GURGAON -122001

PH:7065003373, 7065003377, 0124-4319000.
541. RANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON - 122001 PH:4867777, 9873400882.

542. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001 PH: 9953669444/9953669222.

 PREM MOTORS PVT. LTD. (9512-95-02), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017 PH :4337933, 7065003442.

 PLATINUM MOTO CORP (2L04-95-03), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL GURGAON HARYANA -122018

PH:9953345370/9899118867.

545. PREM MOTORS (9512-95-G1), QILA NUMBER 8/2, MUSTAKIL NO - 25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015 PH :8800000817.

HANSI

546. JAGMOHAN MOTORS PVT LTD (GT02-GT-01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI - 124001 PH :8059900546.

HISAF

547. MODERN AUTOMOBILES (7602-76-01), OPP.
VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005
PH 9355473000

 HISSAR AUTOMOBILES (7601-76-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA -125001

PH:8607777043.

49. MODERN AUTOMOBILES (7602-76-02), OPP.
BBMB, HISSAR DELHI ROAD, HISSAR - 125001
PH:9355473000.

 UNIQUE MOTORS PVT. LTD. (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD,HISSAR (HARYANA) - 125006 PH -8818055535

HODAL

 ROHAN MOTORS (EE01-UE-02), KILA NO. 8/2(7-11), 9(5-06), 12(5-0), 13(8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DIST.-PALWAL. PH:8930202088: 9413080376.

ISMAILABAD

KARNAL MOTORS PVT. LTD. (1901-19-01),
 KHEWAT NO. 928, KHASRA NO. 2760(5-14),
 2761(800), VILLAGE - ISMALLABAD, TEHSIL PEHOW, DIST.-KURUKSHETRA, HARYANA. - 136
 129
 PH.7082007138.

ISRANA

553. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (1802-18-01), MUSTILI NO. -119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132107 PH -905-3400417

JHAJJAR

554. COMPETENT (0B02-0B-01), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101 PH: 9999493040.

JIND

 EAKANSH MOTORS PVT. LTD. (2K01-2K-01), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102 PH:7876008184.

JULANA

 EAKANSH MOTORS PVT. LTD. (MA01-MA-01), JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101 PH:8816802111.

KAITHAL

557. EAKANSH MOTORS PVT. LTD. (U802-U8-01), AMBALA ROAD, NH-65, KAITHAL - 136027 PH:9671788801.

KALAYAT

558. EAKANSH MOTORS PVT. LTD. (BJP1-BJP-01), NEAR BUS STAND, KAITHAL-KALAYAT ROAD, VILLAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117 PH :9671788801.

ΚΔΙΚΔ

 MODERN AUTOMOBILES (EG02-EG-01),
 ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302
 PH :9896217059.

KARNAL

- KARNAL MOTORS PVT. LTD. (8906-89-01), 71/3
 MILESTONE ,G.T.ROAD, KARNAL 132001
 PH :8222022399.
- KARNAL MOTORS PVT. LTD. (8906-89-02), OPP. BUS STAND, AMBALA CHANDIGARH HIGHWAY, KARNAL - 132001 PH: 8222022430
- 562. MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL -132001 PH -7419900042

KHARKHODA

563. JAGMOHAN AUTOMOTIVES PVT. LTD. (BU02-BU-01), NEAR KANYA GURUKUL MAHAVIDYALYA, DELHI ROAD, NEAR UNION BANK, KHARKHODA (HARYANA) - 131402 PH :8685005593.

KOSLI

564. DINCO 4 WHEELS LLP (AUTO VIBES) (CAN1-CAN-01), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT – REWARI, HARYANA . - 123302 PH :7082100202.

KUNE

565. DINCO 4 WHEELS LLP (AUTO VIBES)
(CJL1-CJL-01), NEAR KUND BARRIER, OPP. SBI
BANK, NARNAUL ROAD, VILLAGE - MANETHI,
KUND, DISTRICT - REWARI, HARYANA . - 123102
PH 956998929 97082100000

KUNDLI

566. JAGMOHAN AUTOMOTIVES PVT. LTD. (GUO3-GU-01), OPP. TDI OFFICE, DELHI KUNDALI BORDER, GT KARNAL ROAD SONEPAT - 131001 PH :8059900518.

KURUKSHETRA

567. KARNAL MOTORS PVT. LTD. (8906-U6-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA - 136 118 PH :8222022371.

LADWA

568. KARNAL MOTORS PVT. LTD. (CRA1-CRA-01), KHEWAT NO. 197, KHATONI NO. 233, KHASRA NO. 271/11/271/4, LDWA-KURUKSHETRA ROAD, VILLAGE - LADWA, TEHSIL THANESAR, DISTT. KURUKSHETRA - 136132 PH :7082007182.

MADLAUDA

569. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (CFK2-CFK-01), VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD, MADLAUDA, PIN-132113, HARYANA - 132113 PH 9063400524.

MAHENDARGARH

570. PLATINUM MOTO CORP (DP01-DP-01), KHEWAT NO. 187, KILLA NO. 51/8, REVENUE ESTATE OF VILLAGE REWASA, DADRI ROAD, TEHSIL & DISTRICT, MAHINDERGARH, PIN-123029, HARYANA - 123029
PH :9566136120, 9053088490.

MANDI DABWALI

71. SHAKTI MOTORS PVT.LTD. (E401-KU-02), SANGARIA ROAD, DABWALI, DISTT.-SIRSA -125104 PH 3222900209

MANESAR

572. PLATINUM MOTOCORP LLP (2L04-2L-01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052

PH :09953345326/9953345324/9910100341. **MFHAM**

573. JAGMOHAN MOTORS PVT LTD (A601-NZ-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101 PH -8059000502

MOHNA

574. TCS & ASSOCIATES PVT LTD (CRT1-CRT-01), YAMUNA PUL ROAD, NEAR GYATRI PETROL PUMP, VPO-MOHANA, TEHSIL BALLABGARH, DISTT FARIDABAD - 121004 PH -0941573130, 80296704000

MUSTAFABAD

575. PANDIT AUTOMOBILES PVT. LTD. (CDX1-CDX-01), KHATUNI NO. 205/287, KHASRA NO. 38-172, VILLAGE - MANSURPUR, THANA -CHAPPER, MUSTAFABAD, DIST.-YAMUNA NAGAR, STATE - HARYANA. - 133 103 PH. 1992/113854.

NARAINGARH

 EAKANSH WHEELS (1802-CV-02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203 PH: 9991143700.

NARNAUL

577. PLATINUM MOTOCORP LLP (9Q02-9Q-01), KAILASH NAGAR, REWARI ROAD, NARNAUL, HARYANA, - 123001 PH

:09053088460/9582226838/9053088501/9053088 451/9053088500.

NARNAUND

 JAGMOHAN MOTORS (SDK1-SDK-01), KHASRA NO. 234, HANSI ROAD, NARNAUND, DISTT. HISAR, HARYANA. - 125039 PH :9812000471.

NARWANA

 EAKANSH MOTORS PVT. LTD. (U802-CW-03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116 PH:9813583100.

ΔI WΔI

 ROHAN MOTORS LTD. (EE01-EE-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101 PH :304100 : 304107/8930202060.

PANCHKULA

- 581. MODERN AUTOMOBILES (0702-K3-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA -134113
- PH:9646000165.

 2. AUTOPACE NETWORK PVT LTD (0705-K3-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. 134113
 PH:7087119847.
- 583. AUTO VOGUE PVT. LTD. (K303-K3-01), PLOT NO-388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113 PH-8558813181

PANIPAT

584. AUTO GALLERY/A UNIT OF RKH AUTOMOBILES P LTD) (D302-D3-01), KHASRA NO. 43/6, 44/9 & 10, VILLAGE – JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA. - 132103 PH 9053400515.

PATAUDI

585. PLATINUM MOTOCORP LLP (BY03-BY-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503 PH - 9953345381/995334588/19953345330

PEHOWA

 KARNAL MOTORS PVT. LTD. (2M02-2M-01), NEAR SHARMA SERVICE STATION, KURUKSHETRA ROAD, PEHOWA - 136128 PH:8053906011.

PUNDRI

587. EAKANSH MOTORS PVT. LTD. (BFF1-BFF-01). KILA NO. 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026 PH-9671788801

PUNHANA

588. PASCO AUTOMOBILES (BIU1-01-BIU-01), KILA NO. 4/2, PUNHANA, DIST.-MEWAT, HARYANA -122508 PH :9991300950. 8059730879.

RADAUR

 PANDIT AUTOMOBILES PVT. LTD. (D201-EN-02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA - 135001 PH:9992113854.

RFWAR

 DINCO 4 WHEELS LLP (AUTO VIBES)
 (U102-U1-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401
 PH -7082100200/7082100204/7082100201

ROHTAK

- 91. JAGMOHAN MOTORS PVT LTD (A601-A6-01), SONEPAT ROAD, ROHTAK - 124001 PH :9467465035
- 592. JAGMOHAN MOTORS PVT LTD (A601-A6-09), SWAN GARDEN, DELHI ROAD, ROHTAK - 124001 PH :9812000357
- 593. UNIQUE AUTO LEAD LLP (A602-A6-01), KHASRA NO- 3597 JIND ROAD, JIND CHOWK, ROHTAK, HARYANA - 124001

SAFIDON

594. EAKANSH MOTORS PVT. LTD. (U802-JU-05), NEAR BRSK SCHOOL, OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT- JIND - 126112 PH-9416616603.

SAMPLA

 JAGMOHAN MOTORS PVT LTD (NY01-NY-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501 PH -9812000361

SHAHABAD

596. KARNAL MOTORS PVT. LTD. (CCR2-CCR-01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST. - KURUKSHETRA. - 136135 PH :8222022338.

SIRSA

SHAKTI MOTORS PVT.LTD. (E401-E4-01),
 DABBALI RD., SIRSA, HARYANA - 125055
 PH:8222900201.

SIWANI

 HISSAR AUTOMOBILES (HA02-HA-01), OPP.GOVT HOSPITAL, SIWANI BYPASS CHOWK, HISSAR ROAD, SIWANI,DIST. BHIWANI - 127046 HARYANA - 127046
 PH:8607777149

SOHNA

 PASCO AUTOMOBILES (9506-KZ-03), 56, KILLA NO. 13 (4-10), 18(4-6), 19 (8-0), 22 (8-0), 23 (4-2), VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA , DISTRICT -GURUGRAM. -122103

PH:08683000902/9873711127/8683000919.

SONIPAT

- JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001 PH :9992200372.
- JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001 PH :8685005686.
- 602. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-03), O-11 INDUSTRIAL AREA, SONIPAT, HARYANA. - 131001 PH:9812615000.

TAURU

 PASCO AUTOMOBILES (BIV1-BIV-01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA. - 122015
 PH-8683000902, 9873001497, 8683000954, 9671150250.9034926253.

TOHANA

604. SHAKTI MOTORS PVT.LTD. (XP01-XP-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120 PH:8572800091

TOSHAM

605. JAGMOHAN MOTORS PVT LTD (0Y01-0Y-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. 127040 PH:8059900566.

YAMUNANAGAR

PH -9812455896

- 606. PANDIT AUTOMOBILES PVT. LTD. (D201-D2-01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR -135001
- 607. PANDIT AUTOMOBILES PVT. LTD. (D201-D2-03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001 PH :9812455896.

HIMACHAL PRADESH

AI AMPUR

608. KANGRA VEHICLEADES (RL01-RL-01), KHASRA NO. 1606/1582, STATE HIGHWAY PALAMPUR-SUJANPUR AT JANGAL, VILLAGE -ALAMPUR, DIST.-KANGRA. - 176082 PH :8888002269

BADDI

609. GOYAL MOTORS PVT LTD (7D01-CIF-04), KIHATAKHATAUNI NO. 28/26, KHASRA NO. 93/56/32 AND 94/56/32, KITAS 2, REVENUE MAUZA – CHAK JANGI, HADBAST NO. 203, TEHSIL – BADDI, DISTRICT – SOLAN, HIMACHAL PRADESH. - 173205 PH 94/810/7697?

BALINATH

610. KANGRA VEHICLEADES (BBC1-BBC-01), TASHI JONG, PAPROLA-BAJJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAJJNATH, DISTT. KANGRA - 176115 PH :8628820803.

BANIKHET

611. PATHANKOT VEHICLEADES PVT. LTD.
(BWN1-BWN-01), KHASRA NO.709, KHATA
KHATOONI NO.23, BANIKHET, THE-DALHOUSIE,
DISTT. CHAMBA - 176303
PH : 254186, 232036, 9418048803.

BILASPUR

612. COMPETENT AUTOMOBILES CO. LTD. (6Y01-6Y-0), KHEWAT NO. 8/8 KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. – CHANDPUR, TEHSIL – SADAR, DIST. - BILASPUR, HIMACHAL PRADESH. - 174001

PH:7807166832, 7807800330 / 7807800440.

CHAMBA

- 613. KANGRA VEHICLEADES (D902-JF-03), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310 PH:9418059252, 9418045778.
- 814. KANGRA VEHICLEADES (D902-JF-05), KHASRA NO. 88/96,1 & KHASRA NO. 628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310

PH :9418059252 , 9418013810.

CHOWARI

615. PATHANKOT VEHICLEADES PVT. LTD. (CWV1-CWV-01), KHATA KHATNI NO. 24/32 MIN KHASRA NO. 90, VILLAGE - LAHRU, P.O. -PARCHHORE, TEHSIL - BHATTIYAT, DIST. -CHAMBA, HAMACHAL PRADESH. - 144416 PH 18894569632.

DEHRA

616. KANGRA VEHICLEADES (D902-HT-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA 177101 PH: 9817013058

GAGGAL

617. KANGRA VEHICLEADES (BBV1-BBV-01), NATIONAL HIGHWAY -20 , ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA , HIMACHAL PRADESH - 176209 PH :941898832.

HAMIRPUR

618. COMPETENT AUTOMOBILES CO. LTD. (W901-W9-01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401 PH: 9805510276.

INDORA

519. PATHANKOT VEHICLEADES PVT. LTD. (BHE1-BHE-01), VILLAGE CHANDOR, PO & TEHSIL INDORA, DISTT. KANGRA, PIN-176401, HIMACHAL PRADESH - 176401 PH -0418008677

JAISINGHPUR

620. KANGRA VEHICLEADES (BVA1-BVA-01), HARSI PATTAN ROAD, OPP. SABJI MANDI, TEHSIL – JAISINGHPUR, DIST. – KANGRA, HIMACHAL PRADESH. - 176095 PH: 9418477756.

JAWALI

621. PATHANKOT VEHICLEADES PVT. LTD. (BXE1-BXE-01), VILLAGE - TIUKARI, NEAR MAHAVIR HOSPITAL LUBH ROAD, TEHSIL -JAWALI, DIST.-KANGRA, HAMACHAL PRADESH. -176023 PH: 9418195333.

JOGINDER NAGAR

622. COMPETENT AUTOMOBILES CO. LTD. (BBO1-BBO-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015 PH -9805005754

KULLU

623. COMPETENT AUTOMOBILES CO. LTD. (2Q01-2Q-01), OPPOSITE S.S.B. TRAINING CENTRE, SHAMSHI, KULLU - 175126 PH:7018035136.

KUNIHAR

624. GOYAL MOTORS PVT LTD (BBX1-BBX-01), KHATA NO. – 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSHIL – ARKI, DISTRICT – SOLAN HIMACHAL PRADESH - 173207 PH :9418312472.

MANALI

625. COMPETENT AUTOMOBILES CO. LTD. (BKU1-BKU-01), VILL. CHOURI VIHAR (AALU GROUND), P-O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131 PH 9418387465

MANDI

626. COMPETENT AUTOMOBILES CO. LTD. (B301-B3-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI - 124501 PH: 9805513208/9816664891.

NADAUN

627. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041 PH:9805737436.

NAGROTA

628. KANGRA VEHICLEADES (D902-D9-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047 PH :7018268819

NAGROTA BAGWAN

629. KANGRA VEHICLEADES (D902-D9-06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047 PH:7018268819.

NAGROTA SURIAN

630. KANGRA VEHICLEADES (BGI1-BGI-01), KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037, MAHAL BASSA, SUB TEHSIL - NAGROTA SURIAN, DISTRICT - KANGRA. - 176027 PH. 9414848999.

IALAGARH

631. GOYAL MOTORS PVT LTD (IB02-IB-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101 PH -9418704572

NERWA

632. GOYAL MOTORS PVT LTD (CRS1-CRS-01), KHASRA NO. 482, VILLAGE – KEDI, TEHSIL – NERWA, DISTRICT – SHIMLA, HIMACHAL PRADESH. - 171210 PH -9419863572

NURPUR

633. KANGRA VEHICLEADES (D902-JG-04), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201 PH: 9418195333, 9418041778.

PALAMPUR

 KANGRA VEHICLEADES (2T01-2T-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061 PH :941822262/19463265072

PAONTA SAHIB

635. GOYAL MOTORS PVT LTD (A901-8G-02), OPP BIBIJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR, NH-72, PAONTA SAHIB -173025 PH: 9459210872.

RAJGARH

636. GOYAL MOTORS PVT LTD (BJX1-BJX-01), KHATA NO. 517/505, 478/3, KHASRA NO. – 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL – RAJGARH, DISTRICT – SIRMAUR, HIMACHAL PRADESH - 173/101 PH 34/1831/2472.

RAMPUR

637. GOYAL MOTORS PVT LTD (CEZ1-CEZ-01), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL - RAMPUR, DISTRICT - SHIMLA. - 172001 PH 9467936872

ROHRU

638. GOYAL MOTORS PVT LTD (JZ01-JZ-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207 PH :9418016072.

SALOONI

639. PATHANKOT VEHICLEADES (SES1-SES-01), KHASRA NO. 299/174, VILLAGE. MANJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320 PH 9418050752

SHAHPUR

640. KANGRA VEHICLEADES (SCR1-SCR-01), VILLAGE MANJHGRAN, P.O. DRAMMAN, TEHSIL SHAHPUR, DISTT. KANGRA, HIMACHAL PRADESH - 176206 PH :9459900241

SHIMLA

641. GOYAL MOTORS PVT LTD (A901-A9-01), TARADEVI, SHIMLA,(H.P.) - 171010 PH:9418663572.

SOLAN

642. GOYAL MOTORS PVT LTD (7D01-7D-01), DEON GHAT, SOLAN - 173211 PH :9418138772.

UNA

643. COMPETENT AUTOMOBILES CO. LTD. (QD01-QD-01), VILLAGE RAINSARY, P.O JHALERA, TEHSIL & DISTRICT: UNA - 174303 PH: 9805737436.

JAMMU

MARH

644. JAMKASH VEHICLEADES PVT. LTD
(BPM1-BPM-01), KHASRA NO. 269, LOWER
MUTHI DHARMAL, DIST.-JAMMU, STATE - JAMMU
& KASHMIR. - 181205
PH:7006898474.

JAMMU & KASHMIR

CHOWKI CHOURA

645. JAMU MOTORS (SDY1-SDY-01), KHASRA NO. 37 MIN, ADJACENT TO JÄK BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154 PH. 9596975060.

JAMMU AND KASHMIR

AKHNOOR

646. JAMMU MOTORS PVT. LTD. (2X02-2X-01), MAIN ROAD DASKAL, TEHSIL – AKHNOOR, DISTRICT -JAMMU - 181201 PH - 0410118303

ANANTNAG

 PEAKS AUTO PVT. LTD. (2Y01-2Y-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG -228165 PH 9519275151.

BANDIPORA

648. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-OA-04), AJAR BANDIPORA, J&K - 193502 PH:9149726427.

BARAMULLA

649. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (8C01-8C-01), VILLAGE SANGRAMA, WAGAROO, BARAMULA - 193101 PH:7889612218.

BHADRAWAH

550. J& K VEHICLEADES PVT. LTD (AKA1-AKA-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K -182222 PH :9419796821.

BHASOLI

651. JAMKASH VEHICLEADES PVT. LTD. (GLK1-GLK-01), ZERO MORTH, BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201 PH :9018847230.

BUDGAM

652. HIGHLAND AUTOMOBILES PVT.LTD (1202-CUG-04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM. - 191111 PH: 9419019898.

DAYALACHAK

653. JAMKASH VEHICLEADES PVT. LTD (BFH1-BFH-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK,TEHSIL & DISTT. KATHUA, JAMMU & KASHMIR - 184121 PH: 38492849170.

DODA

654. J& K VEHICLEADES PVT. LTD (2Z02-2Z-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202 PH: 9419796821.

GANDERBAL

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (ZA01-ZA-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201 PH -9419000828

HANDWARA

656. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (BYA1-BYA-01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO. 3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST- KUPWARA, J&K. 193221 PH :263222 9419074012.

JAMMU

657. JAMKASH VEHICLEADES PVT. LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015 PH - R006801639

PH:600680163

658. JAMKASH VEHICLEADES PVT. LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001 PH :9419224014.

 JAMKASH VEHICLEADES PVT. LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011 PH:7006018600.

660. PEAKS AUTO JAMMU PVT. LTD. (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010 PH:9697001125.

JAMMU MOTORS PVT. LTD. (3308-33-01), 6,
 AKHNOOR ROAD, JAMMU. - 180001
 PH:9419118393.

662. JAMMU MOTORS PVT. LTD. (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002 PH: 9419118393. 663. PEAKS AUTO JAMMU PVT. LTD. (3312-33-02), KHASRA NO. 425 & 426, KHATA NO. 425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001 PH -9697001125

664. JAMKASH VEHICLEADES PVT. LTD (3306-33-07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. -180007 PH: 9419191502.

ΚΔΤΗΠΑ

665. JAMMU MOTORS PVT. LTD. (3802-38-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101 PH 9410118303

KULGAM

666. PEAKS AUTO PVT. LTD. (OY01-OY-01), NEAR GRID STATION,MAIN ROAD, KULGAM - 191202 PH:9519275151.

KUPWARA

667. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-AX-03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223 PH -967249990?

MAGAM

668. JAMKASH VEHICLEADES PVT. LTD (GLS1-GLS-01), KHASRA NO. 34, MOUZA -CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST.-BARAMULLA, JAMMU & KASHMIR. - 193 401 PH :8825016046.

PHINTER

 JAMKASH VEHICLEADES PVT. LTD (BHV1-BHV-01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. -184203 PH: 9419187583.

POONCH

670. JAMKASH VEHICLEADES PVT. LTD (AAW1-AAW-01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121 PH:7006014395.

PULWAMA

671. PEAKS AUTO PVT. LTD. (1204-MU-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301 PH:9519275151.

RAJOURI

672. JAMKASH VEHICLEADES PVT. LTD (3306-KS-06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI -185131 PH : 7006014395.

RS PURA

673. JAMKASH VEHICLEADES PVT. LTD (3306-JN-03), GAGAIN MORTH, R S PURA, JAMMU, - 181102 PH:9419190370

SHOPIAN

674. PEAKS AUTO PVT. LTD. (AAA1-AAA-01), AGLAR SOFANAMAN, SHOPIAN - 192303 PH -9519275151

SIDHRA

675. JAMKASH VEHICLEADES PVT. LTD
(CDL1-CDL-01), KHASRA NO.80 & KHATA NO.100,
VILLAGE SIDHRA, NH1A, NEAR BHARAT
PETROLEUM PETROL PUMP, TEH. & DISTT.
JAMMU - 180019
PH - 9419134144

SRINAGAR

- 676. HIGHLAND AUTOMOBILES PVT.LTD (1202-12-01), SONWAR, SRINAGAR - 190001 PH :9419057564.
- 677. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-12-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015 PH - 7006037255
- 678. PEAKS AUTO PVT. LTD. (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101 PH :9519275151.
- 679. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-12-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017 PH :9796700750.

SUNDERBANI

680. PEAKS AUTO JAMMU PVT. LTD. (AAM3-AAM-01), MOUZA THANDA PANI, TEH. SUNDERBANI -185153 PH 9697001125.

SURANKOTE

681. PEAKS AUTO JAMMU PVT. LTD. (TY03-TY-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101 PH - 963701175

THANA MANDI

682. JAMKASH VEHICLEADES PVT. LTD. (S001-S0-01), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI -185212 -185212 PH :9419267607.

UDHAMPUR

683. J& K VEHICLEADES PVT. LTD (D801-D8-01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101 PH:7006881028.

URI (CHAAL BONIYAAR)

684. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (CCK1-CCK-01), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123 PH: 9419074012.

JHARKHAND

885. RELIABLE INDUSTRIES PVT. LTD. (BHA1-BHA-01), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRIDIH, JHARKHAND. - 825322 PH :9507102036

BOKARO

9835814404.

BAGODAR

- 686. HINDUSTAN AUTO AGENCY (B501-B5-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004
- PH:9831550033/7070403002/9431128683.
 687. HINDUSTAN AUTO AGENCY (B501-B5-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) 827004
 PH:9431177983/0431128883

CHAIBASA

888. PEBCO MOTORS (BOY1-BOY-01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT – WEST SINGHDHUM, JHARKHAND. - 833201 PH.7070449718.

CHANDWA

689. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (SCSI-SCS-01), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA – 829203, DIST – LATEHAR, JHARKHAND -829203 PH :7061157502

CHIRKUNDA

 RELIABLE INDUSTRIES (CQT1-CQT-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. – CHIRKUNDA, DISTRICT – DHANBAD, JHARKHAND. - 828202 PH: 9905937751
 9358741404

DALTONGANJ

 PREMSONS MOTORS UDYOG PVT LTD (5103-MP-02), KACEHRI ROAD, DALTONGANJ PALAMU - 822101 PH :9835507004.

DEOGHAR

692. RELIABLE INDUSTRIES (5202-KR-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, -814112

PH :6207129088 7001553251

693. RELIABLE INDUSTRIES (KR02-KR-01), MOUZA - CHAKRIPAHARI, NO. 587, WARD NO. 36, DEOGHAR, JHARKHAND. - 814114 PH - 9838811201 9838814404

DHANBAD

- 694. RELIABLE INDUSTRIES (5202-52-01), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001 PH : 983580202 7369045040
- 95. RELIABLE INDUSTRIES (5202-52-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIDHELA, DHANBAD - 828127 PH:8102333474 7390045043
- 696. RELIABLE INDUSTRIES (5202-52-06), SUGIADIH, HIRAK ROAD, SARAIDHELA, DHANBAD, JHARKHAND. - 828127 PH - 9334094941
- 697. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (5205-52-01), NH-2, GT ROAD, SAHARJORI, BARWADA, DHANBAD. - 828 109 PH 9006828000 9836740433
- 698. RELIABLE INDUSTRIES (5202-52-09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR DHANBAD, JHARKHAND - 828109 PH :9031096662.

DUMKA

699. RELIABLE INDUSTRIES (L701-L7-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101 PH -6205161170

GARHWA

 PREMSONS MOTOR UDYOG PVT. LTD. (VX01-VX-01), KHATA NO. 4, KHESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114 PH :8862828802 9835507004.

GHATSHILA

701. PEBCO MOTORS LTD. (AIA1-AIA-01), PLOT NO. 68, KHASRA NO. 128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK,GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303 PH 9308433388.

GIRIDIH

702. RELIABLE INDUSTRIES (5202-3D-04), MOHANPUR, PACHAMBA ROAD, GIRIDIH. -815301

PH :8102924860 8102924858

 RELIABLE INDUSTRIES PVT. LTD (5202-3D-08), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND. - 815301
 PH-983833101

GODDA

704. RELIABLE INDUSTRIES (5202-EJ-05), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133 PH:6207129088.

GUMLA

705. PREMSONS MOTOR UDYOG PVT. LTD. (5103-20-04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207 PH :9835507004.

HAZARIBAGH

706. HINDUSTAN AUTO AGENCY (Y901-Y9-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. -825301 PH - 0304051040

PH:9304051949, 9263631327

 HINDUSTAN AUTO AGENCY (Y901-Y9-02), MASIPIRHI, BABHANBAY, HAZARIBAGH, JHARKHAND. - 825301
 PH :9216888118 9263631327

JAMSHEDPUR

 PEBCO MOTORS LTD. (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH 9308433388

 PEBCO MOTORS LTD. (3101-31-02), 16
 BALICHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHEDPUR - 831011
 PH -9308433388

710. MOTOR WORLD (3102-31-01), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR -831012 PH -9431347164 9570168342

JAMTARA

 RELIABLE INDUSTRIES (BOX1-BOX-01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351 PH :9835814404.

KATRAS

712. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (GLP1-GLP-01), RAJHANS REFRACTORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-228114 - 828114 PH. 3810900556.

KHELARI

 SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (CF01-CF0-01), PLOT 113, MOUZA- BUKBUKA, BESIDE PAHADI MANDIR, KHELARI, RANCHI - 829205 PH :6458222, 9534199997.

KHUNTI

714. PREMSONS MOTOR UDYOG PVT. LTD
(BOL1-BOL-01), PLOT NO. 747, KHATA NO. 2,
DAHUGUTU, CHAIBASA ROAD, KHUNTI,
JHARKHAND. - 835 210
PH. 9835507004.

KODARMA

 HINDUSTAN AUTO AGENCY (VR01-VR-01), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILLIYA, P.S. – TILAIYA, DISTRICT – KODERMA, JHARKHAND. 825409
 PH 6/201908036

LOHARDAGA

716. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (CX01-CX-01), PLOT NO. 14P, 15, 23, RIADA, LOHARDAGA, JHARKHAND. - 835302 PH 9534199997.

RAMGARH

 HINDUSTAN AUTO AGENCY (AV01-AV-01), MARAR, RANCHI ROAD (NH-33), RAMGARH -829122
 PH:9263631345.

RANCHI

- 718. PREMSONS MOTORS UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. 834008
 - PH :9304807355
- 719. PREMSONS MOTOR UDYOG PVT. LTD.
 (5103-51-03), 10/P, NAMKUM INDUSTRIAL
 ESTATE, BEHIND HIGH TENSION INSULATOR
 FACTORY, LOWER CHUTIA, RANCHI 834010
 PH -9262890003
- 720. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003 PH :9835507004.

 SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (5107-51-02), PLOT NO.
 OPPOSITE OTC GROUND, HEHAL, RATU ROAD, RANCHI, JHARKHAND - 834005 PH. 9534199997, 8227996680.

- 722. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (5107-51-03), PLOT NO. 39, NEAR BOOTY MORE, RANCHI-RAMGARH ROAD, RANCHI. - 835217 PH - 95/24/190907
- 723. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-06), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001 PH - 9835507004
- 724. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PYT LTD) (5109-51-01), KHATA NO. 247, MOUZA -PUNDAG, P.S. - PUNDAG, RANCHI, JHARKHAND -834004 PH.7061157502.
- 725. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PYT LTD) (5109-51-02), NEAR KATHAL MORE, ARGORA RANCHI RD, NEAR EKLABBA TOWER, DHIPATOLI, ARGORA, RANCHI - 834004 PH - 7061157502

KARNATAKA

ANEKAL

(26. PRATHAM MOTORS PVT. LTD (0205-FA-04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106 PH: 9945540131.

ANKOLA

727. BHARATH AUTO CARS PVT. LTD. (FC02-FC-01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT -581314 PH :7829567400.

ATHANI

728. SHANTESHA MOTORS (BWA1-BWA-01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304 PH :8884472687

ATHRADI

729. ABHARAN MOTORS PVT LTD (G601-UK-04), HERABETTU ROAD ATHARDI UDUPI - 576107 PH -9845472500

ATTIREI E

730. SURAKSHAA CAR CARE PVT. LTD. (BMM1-BMM-01), SURVEY NO 227/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE. - 562107 PH :9449865665.

BAGALKOT

 VIJAY MOTOWINGS (ZL01-ZL-01),
 180/4-2,BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103 PH -9481289167

BAGEPALLI

732. BIMAL AUTO AGENCY INDIA PVT. LTD.
(BTV1-BTV-01), H.L. NO. 423 AND 436 SRI
SATHYA SAI NAGAR, ON NIH-7, THIMAKALAPALLI
BLOCK-II, PARAGODU GRAM PANCHAYATH,
KASABA HOBLI, BAGEPALLI TALUK,
CHIKKABALLAPUR DIST. - 561 207
PH : 9742458888.

BANGALORE

- 733. MANDOVI MOTORS PVT LTD. (0201-02-01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE -560027 PH :9945235511.
- 34. MANDOVI MOTORS PVT LTD. (0201-02-07), 17/A-283 IND.SUBURB.IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022 PH: 9945235537.
- MANDOVI MOTORS PVT LTD. (0201-02-05),
 NO.2/106 (NEXT TO KASSIA BLDG.),17TH
 CROSS,MAGADI CHORD ROAD EXTN.
 VIJAYANGAR,BANGALORE 560079
 PH:9945235529.
- (36. RNS MOTORS (7301-02-03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022 PH :9606933236.
- 737. BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-01), NO.- 60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064 PH. 9945541034.
- BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-01), 60/2, MAHADEVPURA, WHITE FIELD ROAD, BANGALORE - 560048 PH :99723 98105
- 739. RNS MOTORS (7301-02-04), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068 PH - 9148001412
- 740. MANDOVI MOTORS PVT LTD. (0201-02-08), NO. 70 SARAKKI INDUSTRIAL LAYOUT, J.P. NAGAR, 3RD PHASE, BANGALORE - 560078 PH-9942235522
- PRATHAM MOTORS PVT. LTD (0205-02-01), 16,
 BALLANDUR, SARJAPUR RING ROAD,
 BANGALORE 560037
 PH 9045540126
- BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078 PH :9972398139.

- 743. PRATHAM MOTORS PVT. LTD (0205-02-02), STHANIKAMIS ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KIMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE -560010 PH. 9900061378
- 744. KALYANI MOTORS PVT. LTD. (0211-02-01), MYSORE ROAD, PANTHARAPALYA, KENGRI HOBLI, BANGALORE - 583201 PH 9638887078
- 745. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-03), NO.7/1, KALANAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERGHATTA RD., BANGALORE -560076
- PH:9845166612.

 46. GARUDA AUTOCRAFT PVT LTD (0212-02-01),
 SURVEY NO. 13, 11TH KM., KANAKPURA ROAD,
 BANGALORE 560062
 PH:9900039844.
- 747. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE -56038 PH -0972398106
- MANDOVI MOTORS PVT LTD. (0201-02-0C), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044 PH - 9945235537.
- KALYANI MOTORS PVT. LTD. (0211-02-04), 119/1, 11TH CROSS,MALLESHWARAM,BANGALORE, -560003
 PH 9886026519
- 750. MANDOVI MOTORS PVT LTD. (0201-02-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043 PH '9845132048
- 751. MANDOVI MOTORS PVT LTD. (0201-02-0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA. - 560102 PH 9945/235518
- 752. MANDOVI MOTORS PVT LTD. (0201-02-9B), PLOT NO.-257/1-13, BANNERGHATTA ROAD, N.S. PALYA, BANGALORE 560076 PH -9045238550
- 53. KALYANI MOTORS PVT. LTD. (0213-02-02), SY. NO.:58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE. - 560049 PH:9900037122.
- SURAKSHAA CAR CARE PVT LTD (0280-02-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100 PH :9449865605.

- 755. KALYANI MOTORS PVT. LTD. (0213-02-03), NO 129/4 KUNDALAHALLI VILLAGE OPP. TO BROOKE FIELD HOSPITAL BROOKFIELD BENGALURU. - 574239 PH:9900038119
- SURAKSHAA CAR CARE PVT. LTD. (0280-02-02) #5//1 ROMMANAHALLI HOSLIR MAIN ROAD BANGALORE - 560068 PH -9449865655
- KALYANI MOTORS PVT. LTD. (0213-02-04). 250/1.BILEKAHALLI, BANNERGHATTA ROAD, BENGALURUE - 560076 PH -9686445406
- BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE -560058 PH:9945237213.
- RNS MOTORS (7301-02-0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH:6364884787.
- PRATHAM MOTORS PVT. LTD (0205-02-05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034 PH:9900058466.
- RNS MOTORS LIMITED (7301-02-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD. BANGALORE - 562158 PH:9538965771.
- 762. KALYANI MOTORS PVT, LTD, (0291-02-02), 10/1, HEBBAL . AMANIKERE KASABA HOBLI. YOGESH NAGAR BANGALORE - 560024 PH 9740985324 7760983887
- RIMAL ALITO AGENCY INDIA PVT. LTD. (0286-02-01) #184/185 OPP FORUM VALUE MALL WHITE FIELD MAIN ROAD BANGALORE . 560066
- PH -9900245979 SURAKSHAA CAR CARE PVT LTD (0280-02-04) PLOT NO. 8 & 9. NEXT TO BDA COMPLEX 4TH BLOCK 100 FT ROAD, KORAMANGALA. BANGALORE KARNATAKA - 560034 PH -8884419010
- KALYANI MOTORS PVT 1 TD (0287-02-01) # 10/5 NAGADEVANHALLI KENGERI MYSORE ROAD, BANGALORE, KARNATAKA - 560056 PH -9900019961
- BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI BANGALORE, KARNATAKA - 560033 PH:9738501996.

- 767. MANDOVI MOTORS PVT LTD. (0201-02-0H), BBMP NO 4C, WARD NO 83, JOLLY ESTATE OLD MADRAS ROAD, NAGAWARAPALYA BANGALORE - 560093 PH:9945235533
- VARUN MOTORS PVT. LTD. (0292-02-01). HNO. 72/10-6 & HNO 67/2 VESHWANTDUR INDUSTRIAL SUBURR WARD NO 10 PA IA II NAGAR, BANGALORE, - 560022 PH ·7337834582
- KALYANI MOTORS PVT. LTD. (0213-02-05), PLOT NO. 74/5. HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. -560043 PH:9900037114.
- KATARIA AUTOMOBILES PVT. LTD. (0294-02-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST - AADUGODI, BANGALORE, -560030 PH:7349291802.
- MANDOVI MOTORS PVT LTD. (0201-02-01). KATHA NO.4. SITUATED AT GANAKAL DHAKALE. SRINIVASPURA, KENGERI HOBLLI, UTTARAHALLI, BANGALORE - 560060 PH -9945235516
- VARUN MOTORS PVT. LTD. (0292-02-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP. NAGASANDRA POST, BANGALORE, - 560073 PH:7338286729.
- MANDOVI MOTORS PVT LTD. (0201-02-0J), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHNAN ROAD, VIDYARANYAPURA, BANGALORE. - 560097 PH ·9945235514
- KATARIA AUTOMOBILES PVT. LTD. (0293-02-01). SURVEY NO. 8/3, 10/4, 10/2, VILLAGE -THAI AGHATTAPLIRA KANAKAPLIRA MAIN ROAD NEAR NANDI TOYOTA LITTARAHALLI HORLI TALLIK - BENGALLIRU SOUTH BANGALORE KARNATAKA - 560109 PH -8884434340
- RNS MOTORS LIMITED (7301-02-0J), SY. NO. 11/2 & 12/1 VILLAGE - ARAKERE BEGLIR HOBI I BANNERGHATTA ROAD, BANGALORE -560 076 - 560076 PH :7760982836
- SURAKSHAA CAR CARE PVT LTD (0280-02-05) SURVEY NO 2/6 BERTENA AGRAHARA OPP METRO CASH & CARRY, HOSUR MAIN ROAD BANGALORE. - 560100 PH -8884471200

- 777. KALYANI MOTORS PVT. LTD. (0211-02-05), SY NO 8/4. G HOSAHAI I I MAIN ROAD. GOLLARAHATTI, V.N.POST, YESHWANTPURA HOBI I MAGADI MAIN ROAD, BANGAI ORE -560091 PH:9900080229
- SURAKSHA CAR CARE (0280-02-06), BEARING NO 54/4-320/2 REGUR HORLL ROMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE KARNATAKA - 560 068 PH:9449865665.
- PRATHAM MOTORS PVT. LTD (0205-02-07), SUVEY NO. 43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST - DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA. - 562125 PH -9611834659
- SURAKSHAA CAR CARE PVT, LTD, (0280-02-07). SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN, MUTHASANDRA HOSUR MAIN ROAD. ANEKAL TQ, BANGALORE, KARNATAKA - 560099 PH:94498 65666
- KALYANI MOTORS (0291-02-03), SURVEY NO. 194/5, HUNSEMARANAHALLI, JALA HOBLI, DEVANAHALLI TALUK, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH PH:9740985324.
- MANDOVI MOTORS (0201-02-09), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR. BANGALORE, KARNATAKA-560018, - 560018 PH:9945235516.

BANGALORE (HEBBAGODI)

RNS MOTORS (0210-02-01), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD, ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA -560 099

PH:6366938829. BANGARPET

SURAKSHA CAR CARE PVT, LTD, (OR04-OR-01).

180/4 OPP APMC YARD KOLAR-BANGARPET ROAD BANGARPET (KARNATAKA) - 563114 PH -9449865601

BANGLORE - BOMMANAHALLI

VARUN MOTORS PVT LTD (0292-02-03), SY NO: 136 (OLD NO 54/8) SANGEGURUVANAHALLI(VP) KAMAKSHIPALAYA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK. BANGALORE.KARNATAKA - 560079 PH:9513683052.

BANTWAI

786. MANDOVI MOTORS PVT LTD. (TR01-TR-01), NH-75 PANEMANGALORE B.C. ROAD BANTWAL KARANATAKA - 574231 PH 9008810123

- 787. SHANTESHA MOTOR (P) LTD (E801-E8-01), MUJAWAR COMPOUND, NEHRU NAGAR,BELGAUM, - 590010 PH:9902043711.
- SHANTESHA MOTOR (P) LTD (E801-E8-04), PLOT NO. 8. SURVEY NO. 251/51, HAVLOCK ROAD CAMP. BELGAUM - 290010 PH -9588645387
- SHANTESHA MOTOR (P) LTD (E801-E8-03), CTS NO. 519. 520. BESIDE PARATA CORNER.CONGRESS ROAD, TILAKWADI. BELGAUM - 590006 PH -8884433911
- SHANTESHA MOTORS (P) LTD (E801-E8-06). PLOT NO. 2/L RS NO. 29 KIADR INDUSTRIAL AREA KIADR BALIXITE ROAD, KANGRALI BK BELGAUM - 590010 PH -9731396805

BELLARY

791. K.P.F. PVT. LTD. (G201-G2-01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY PH:9449876025.

BEI THANGADY

792. BHARATH AUTO CARS PVT. LTD. (4503-HM-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH -9886543230

RHATKAI

BHARATH AUTO CARS PVT, LTD, (CEF1-CEF-01). SURVEY NO. 157/2A SUSGADI VILLAGE NH66 BHATKAL LITTARKANNADA DISTRICT KARNATAKA - 581320 PH -9008693940

- 794. LAHOTI MOTORS PVT. LTD (EX01-EX-01), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402 PH -8884412049
- LAHOTI MOTORS PVT. LTD (EX01-EX-02), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585 401 PH:9108707709.

BLIAPUR

796. RNS MOTORS (7301-T7-0I), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA BIJAPUR DISTT, KARNATAKA - 586109 PH:8861208998.

BYNDOOR

797. ABHARAN MOTORS PVT LTD (BUH1-BUH-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214 PH:7899751777.

CHALLAKERE

 SAKETH AUTOMOBILES (CKN1-CKN-01), SITE NO. 9 & 10, SY. NO. 96/1, OPP.
 SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522
 PH -9886561126

CHAMARAJANAGAR

799. MANDOVI MOTORS PVT LTD. (0E01-0E-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313 PH '9464245758

CHANNAGIRI

800. SHRUTI MOTORS (BUQ1-BUQ-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213 PH: 7899934143.

CHANNAPATNA

801. KALYANI MOTORS PVT. LTD. (BSX1-BSX-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160 PH :9845066682.

CHANNARAYAPATNA

802. VENKAT MOTORS (HC01-HC-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116 PH: 3147077144.

CHICKBALL APUR

803. BIMAL AUTO AGENCY INDIA PVT. LTD. (KJ02-KJ-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101 PH -9742262409

CHICKMAGALUR

804. SHRUTI MOTORS (B701-3F-02), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102 PH :9980157446.

CHIKODI

805. SHANTESHA MOTORS (E801-ZB-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201 PH:7829925790.

CHINTAMANI

806. PRATHAM MOTORS PVT. LTD (0205-BQ-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125 PH :7899761301.

CHITRADURGA

807. SAKETH AUTOMOBILES (AL01-AL-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130 PH :9686550313.

DAVANGERE

808. SHRUTI MOTORS (S101-S1-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004 PH -98R0401798.

DEVANAHALLI

809. BIMAL AUTO AGENCY INDIA PVT. LTD. (WH01-WH-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110 PH -0742767514

DHARWAD

810. REVANKAR MOTORS PVT. LTD. (BIX1-BIX-01), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001 PH.8861006707.

DODDABALLAPUR

 PRATHAM MOTORS PVT. LTD. (BUA1-BUA-01), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDADAHALLI, KASABA HOBLI TALUK – DODDABALLAPUR, DISTRICT – BENGALURU RURAL. - 561203 PH. 3986671687.

GADAG

812. RNS MOTORS (7301-RK-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG-582103 PH -9538025602

GANGAVATI

813. MUNEER ENTERPRISES PVT. LTD. (N701-KA-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, - 583227 PH:9449870754.

GAURIBIDANUR

814. MANDOVI MOTORS PVT LTD. (BUY1-BUY-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210 PH:8217453513.

GOKAK

 SHANTESHA MOTORS PVT. LTD. (IR01-IR-01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307 PH:7829925760.

GONIKOPPAL

816. MANDOVI MOTORS PVT LTD. (2501-U3-07), KAIKERY VILLAGE,GONIKOPPAL,, - 571213 PH :9000064873

GUI BARGA

817. LAHOTI MOTORS PVT. LTD (E902-E9-01), LAHOTI GARDENS, NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104 PH :9480825014.

818. LAHOTI MOTORS PVT. LTD (E902-E9-02), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA. - 588104 PH - 76194297035

GUNDI UPFT

819. FRIENDLY MOTORS (INDIA) PVT. LTD. (BPU1-BPU-01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, NS. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111 PH :9680855799.

HAGARIBOMMANAHALLI

 MUNEER ENTERPRISES PVT. LTD. (BUX1-BUX-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.3; HAGARIBOMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212 PH -9481/343007

HASSAN

821. VENKAT MOTORS (C802-C8-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201 PH - 9844044038

HAVER

822. REVANKAR MOTORS PVT LTD (BBM1-BBM-01), NEAR TMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110 PH -702016903

H-CROSS

823. BIIMAL AUTO AGENCY INDIA PVT. LTD. (CRO1-CRO-1), PART NO.1, SIEB NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122 PH. 9738944126.

HEBRI

824. ABHARAN MOTORS PVT LTD (BGD1-BGD-01), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI, KARKALA, DIST.-UDUPI, KARNATAKA. - 576112 PH 9900077605

HEGGADADEVANA KOTE (H D KOTE)

825. FRIENDLY MOTORS (INDIA) PVT. LTD. (CJC1-CJC-01), SURVEY NO. 54, VILLAGE – YARAHALLI, KASABA HOBLI, TALUK – H.D.KOTE, DISTRICT – MYSORE. - 571125 PH. 9688855799.

HOSDURGA

826. SAKETH AUTOMOBILES (BWO1-BWO-01), ASSESSMENT NO. 9310/6, PLOT NO. 6, HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST.-CHITRADURGA, KARNATAKA. - 577 527 PH :7625088946.

HOSKOTE

827. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-SM-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114 PH-9742281726

HOSPET

828. MUNEER ENTERPRISES PVT. LTD. (N701-N7-01), BELLARY ROAD,SANKLAPUR,HOSPET, - 583203 PH:7619505001.

HUBLI

829. RNS MOTORS (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025 PH :9538965902.

830. RNS MOTORS (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030 PH :8861208532.

 REVANKAR MOTORS PVT. LTD. (7303-73-01), CTS NO. 165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029 PH: 8792008301.

HUNSUR

832. FRIENDLY MOTORS(INDIA) PVT. LTD.
(GLI1-GLI-01), M-18 & M-19, KSSIDC INDUSTRIAL
ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE
DISTRICT, KARNATAKA - 571105
PH -7029669690

KADABA

 MANDOVI MOTORS PVT LTD. (BYE1-BYE-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA -574221 PH. 9740912365.

KADUR

834. SHRUTI MOTORS (BQS1-BQS-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT — CHIKMAGALUR. - 577548 PH :8904823736

KANAKAPURA

835. KALYANI MOTORS PVT. LTD. (BXY1-BXY-01), SURVEY NO. 447/1B, KASABA HOBIL, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. - 562117 PH: 9900599933.

KARKALA

836. ABHARAN MOTORS PVT LTD (G601-HY-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104 PH: 9880232666.

KARWAR

837. BHARATH AUTO CARS PVT. LTD. (8J01-8J-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. -581301

KOLAR

PH :7829567400

838. MANDOVI MOTORS PVT LTD. (0201-QU-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101 PH :9740020734.

KOPPAL

839. K.P.F. PVT. LTD. (ER01-ER-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238 PH: 9449876027.

KRISHNARAJAPET

840. MANDOVI MOTORS PVT LTD. (BMP1-BMP-01), KHATA NO.3094, SY. NO.278, MYSORE CHENDERAYAPATNA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423 PH :9845132038

KUMTA

841. BHARATH AUTO CARS PVT. LTD. (AFA2-AFA-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) -581334 PH: 9448979530.

KUNDAPUR

842. ABHARAN MOTORS PVT LTD (G601-CY-02), NH-17, THAKKATTE, KUNDAPURA - 272877 PH:9880197524.

KUNIGAL

843. SAKETH AUTOMOBILES (VQ01-VQ-01), NEAR KRS AGRAHARA, BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130 PH 9886550177

KUSHAL NAGAR

844. MANDOVI MOTORS PVT LTD. (VN01-VN-01), SY NO:88,MADAPATANA, KUSHAL NAGAR, SOM/ARPUR, NORTH KODAGU, KARNATAKA - 571234 PH :9900080893.

LINGASUGUR

845. MUNEER ENTERPRISES PVT. LTD. (BOQ1-BOQ-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122 PH:9480830255.

MADDUR

846. MANDOVI MOTORS PVT LTD. (BMK1-BMK-01), SURVEY NO 802/2A4B, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN, MANDYA DISTRICT, KARNATAKA - 571428 PH -9080 31808

MADIKERI

847. FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-QX-02), BASAPPA THEATURE BUILDING, DASAWAL ROAD, MADIKERI KODAGU DISTRICT. -571201 PH. 9606073867.

MAGADI

 PRATHAM MOTORS PVT. LTD. (BHX1-BHX-01), SY NO:92/2, THIRUMALAI VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARANATAKA - 562120 PH:9900058483.

MANDYA

849. MANDOVI MOTORS PVT LTD. (2501-BD-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, -571401 PH -9611165873

MANGALORE

- 850. MANDOVI MOTORS PVT LTD. (4502-45-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001 PH:9845107701.
- 851. BHARATH AUTO CARS PVT. LTD. (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004 PH:9886785730.
- MANDOVI MOTORS PVT LTD. (4502-45-03), NO., HASSAN GROWTH CENTRE, ADYAR, N.H. -48, MANGALORE - 575007 PH 9845514146.

- 853. MANDOVI MOTORS PVT LTD. (4502-45-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008 PH :9880079235.
- 854. BHARATH AUTO CARS PVT. LTD. (4503-45-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002 PH -988333030
- 855. MANDOVI MOTORS PVT LTD. (4502-45-08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575008 PH :9880278077.
- BHARATH AUTO CARS PVT. LTD. (4503-45-08), S.
 NO. 1376/1-41, 1375/41-2-A1P1, 2A1P3,
 1373/1-40, 1369/1-40-A2, KASABA BAZAR,
 KANDADAPALLI, KUDROLI, TALUK MANGALORE, MANGALORE, KARNATAKA. 575003
 PH. 9886785730.

MUDBIDRI

BHARATH AUTO CARS PVT. LTD. (4503-HN-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227 PH -9886785430

MUDHOL

858. VIJAY MOTOWINGS (ET01-ET-01), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587 313 PH :9606046173.

MULKI

859. BHARATH AUTO CARS PVT. LTD. (4503-QV-05), BHARATH BEEDI COMPOUND, NH-17 MULKI -574154 PH: 9986020730.

MURUDESHWAR

860. RNS MOTORS (7301-T8-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350 PH -0539965990

MYSORE

- 861. MANDOVI MOTORS PVT LTD. (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH:9945248860.
- 862. MANDOVI MOTORS PVT LTD. (2501-25-05), NO.182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011 PH :9845939936.

- FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008 PH - 7259255558
- 364. MANDOVI MOTORS PVT LTD. (2501-25-08), 217/2., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH -9845939937

NANJANGUD

865. FRIENDLY MOTORS (INDIA) PVT. LTD. (BYK1-BYK-01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT – MYSORE, KARNATAKA. - 571301 PH. 9686855799.

NELAMANGALA

866. RNS MOTORS LIMITED (BBH1-BBH-01). NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123 PH.7258975385.

NELYADI

867. BHARATH AUTO CARS PVT. LTD. (BPF1-BPF-01), SURVEY NO. 97/11P AND SURVEY NO. 97/9, VILLAGE - HOSAMAJAL KAUKRADY, POST -NELYADI, TALUK - PUTTUR, DIST.-DAKSHIN KANNADA - 574/229 PH - 9886/727/30

PADUBIDRI

 ABHARAN MOTORS PVT LTD (CSI1-CSI-01), PLOT NO. 51/20, VILLAGE – PADUBETTU, PADUBIDRI TOWN, TALUKA & DISTRICT – UDUPI, KARNATAKA. - 574111
 PH : 9880/32999.

PUTTUR

869. BHARATH AUTO CARS PVT. LTD. (4503-CZ-02), NEAR RAIWAY STATION, HARADY, PUTTUR -517583 PH 9886072730.

RAICHUR

870. MUNEER ENTERPRISES PVT. LTD. (N701-3K-02), #12-10-64, GOUSHAL ROAD, SIYA TALAB AREA, RAICHUR - 584101 PH : 9480830264.

RAMANAGARAM

871. KALYANI MOTORS PVT. LTD. (0211-JB-02), #K1318/2034C, OPP TO ROTARY HOSPITAL, BM ROAD, RAMNAGARAM - 571511 PH :9686689007.

RANEBENNUR

872. REVANKAR MOTORS (BXV1-BXV-01), SCHEDULE A-2, OPP. STJIT ENGINEERING COLLEGE, P B ROAD, RANEBENUR, KARNATAKA. - 581115 PH: 8830947883.

SAGAR

873. SHRUTI MOTORS (WF01-WF-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. -577401 PH :9740014703.

SAKI FSHPUR

874. VENKAT MOTORS (BPW1-BPW-01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT – HASSAN. - 573134 PH :7892809634.

SARJAPUR/

875. PRATHAM MOTORS PVT. LTD. (BSY1-BSY-01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA – ANEKAL, SARJAPUR HOBLI, DISTRICT – BANGALORE URBAN, KARNATAKA. - 562125 PH: 7760962890.

SHIMOGA

- 876. SHRUTI MOTORS (B701-B7-01), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201 PH :9880401283.
- 877. SHRUTI MOTORS (B701-B7-03), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA. - 577204 PH:9886829239.
- 878. SHRUTI MOTORS (B701-B7-05), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOGA. - 577201 PH :9986825115.

SIDDAPUR

879. BHARATH AUTO CARS PVT. LTD. (BPY1-BPY-01), SURVEY NO. 211, NEAR IOCL PETROL BUNK, JOG ROAD, VILLAGE - HOSUR, TALUK -SIDDAPUR, DISTRICT - UTTARA KANNADA. -581355 PH: 9449402730.

SIRIS

880. RNS MOTORS LTD (MQ01-MQ-01), SURVEY NO 43/B, LANDAKANALLI VILLAGE, DODNALLI GRAMA, SIRSI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402 PH -98950790723

SIRSI

881. RNS MOTORS (7301-MQ-0D), K H B COLONY, SIRSI - 581402 PH :9538925606.

SIRUGUPPA

882. MUNEER ENTERPRISES PVT. LTD.
(CTM1-CTN-01), SITE NO:31C/1B & PLOT NO.1,
BELLARY - SIRUGUPPA MAIN ROAD, SIRUGUPPA
TALUK, BELLARY DISTRICT. - 583121
PH:7619505001.

SOMWARPET

883. MANDOVI MOTORS PVT LTD. (CSG1-CSG-01). SURVEY NO.130 SITUATED AT MADIKERI ROAD, NAGROOR VILLAGE, BALAGUNDA POST, SOWMARPET TALUK, NORTH KODAGU DISTT. -571236

PH:9845115665. SRINIVASAPURA

884. SURAKSHAA CAR CARE PVT. LTD.
(BURT-BUR-01), SY NO. 40, VPRD NO. 86,
PROPERTY NO. 84 & 87, CHALDIGANA HALLI
GRAMA PANCHAYATH, PANNASAMAKANA HALLI
VILLAGE, SRINIVASAPURA POST & TALUK, DIST.
-KOLAR, KARNATAKA - 563 135
PH: 9449865601.

SULLIYA

885. MANDOVI MOTORS PVT LTD. (4502-EW-04), ODABAI SULLIA,MANGALORE MYSORE ROAD,KARNATAKA - 574239 PH 990002325

SURATHKAL

886. MANDOVI MOTORS PVT LTD. (4502-7G-02), KANA ROAD, SURATHKAL - 574158 PH - 9845514143

THIRTHAHALLI

887. SHRUTI MOTORS (BQR1-BQR-01), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI . - 577432 PH : 7795851011.

тнокоти

888. BHARATH AUTO CARS PVT. LTD. (QW01-QW-01), NH-66, KAPIKAD, ULLAL, THOKOTTU, DAKSHINA KANNADA DISTT. - 575017 PH -9532796330

TIPTUR

889. SAKETH AUTOMOBILES (H101-HV-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA - 572201 PH :9945301023.

TUMKUR

 SAKETH AUTOMOBILES (H101-H1-01), SIRA ROAD, TUMKUR - 572106
 PH:9686550323.

UDUPI

- 891. ABHARAN MOTORS PVT LTD (G601-G6-01), N.H. 17, NITTUR, UDUPI 576103 PH :9880232999.
- 892. ABHARAN MOTORS PVT LTD (G601-G6-05), NO. 3051/C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. UDUPI. 576101
 PH -9886604241

UJIRE

893. BHARATH AUTO CARS PVT. LTD.
(BWT1-BWT-01), SURVEY NO 237-281,
MANGALORE-CHARMADY ROAD, NEAR INDIAN
OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE,
BELTHANGADY TALUKA, DISTT. DAKSHINA
KANNADA, KARNATAKA. - 574240
PH. 1986176130.

LIPPINANGADI

894. MANDOVI MOTORS PVT LTD. (4502-NL-05), NR-PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH - 9740912365

VIJAYPURA

95. BIMAL AUTO AGENCY (BTZ1-BTZ-01), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALILK, BANGALORE RURAL DISTRICT KARNATAKA. -562135 PH : 88842433096

VITTAL

896. MANDOVI MOTORS PVT LTD. (CCE1-CCE-01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA – BANTWAL, DISTRICT – DAKSHIN KANNADA - 574243 PH 90008810123.

YADGII

897. LAHOTI MOTORS (SFP1-SFP-01)

YELLAPUR

 REVANKAR MOTORS PVT. LTD (CUR1-CUR-01), PLOT NO. 4 A1A1A1 GR 5, UDYAM NAGAR, YELLAPUR POST, BALGIMAMI, HUBLI-ANKOLA, YELLAPUR TOWN, UTTARA KANNADA DIST., KARNATAKA. - 581359
 PH. 7009772121

KERALA

ADOOR

- 899. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-CJ-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH :9745998303.
- AVG MOTORS LTD. (Y501-CJ-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523 PH:9446355900.

ALANALLUR

901. KVR AUTOCARS PVT LTD (CIW1-CIW-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST – ALANALLUR, TALUKA – MANNARKAD, DISTRICT - PALAKKAD, KERALA. - 678801 PH 9272702682

ALATHIYOOR

902. A M MOTORS (E601-CVJ-11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE-ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA-TIRUR, DIST.-MALAPPURAM, KERALA. - 676102 PH :989594000. 9072998833.

AI ATHUR

903. BRD CAR WORLD LIMITED (BRW1-BRW-01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682 PH 19746844099

ALLEPPY

904. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-E5-12), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002. - 699002 PH-97245977744

ALUVA

905. BRD CAR WORLD LIMITED (A404-CBQ-09), RE SURVEY NO. 330/7, NH-47, KUNNUMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102 PH :9745907100.

ANCHAL

906. SARATHY AUTO CARS (B0T1-B0T-01), SURVEY NO. 371/9, VILLAGE - IDAMULAKKAL, P.O. – ANCHAL, TALUK - PUNALUR, DISTRICT – KOLLAM. - 691306 PH -9526906665.

 POPULAR VEHICLE (1601-BQT-14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KAITHADY JUNCTION, ANCHAL, KERALA - 691306 PH: 9778698200.

ANGAMALY

- 908. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-JW-0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572 PH •9745908424
- 109. POPULAR VEHICLES & SERVICES LTD. (2701-JW-0D), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD,ANGAMALY - 683572 PH :8086078886

ATTINGAL

910. POPULAR VEHICLES & SERVICES LTD. (1601-SX-07), PALAMKONAM, PERUNKULAM,VIA-ALAMCODE, ATTINGAL -695102 PH:8086078788.

- 911. SARATHY AUTOS (SX03-SX-01), SURVEY NO.
 2952/17 & 2952/4, KIZHUVILLAM VILLAGE,
 ATTINGAL, CHARAYINKEEZHU TALUK,
 TRIVANDRUM DIST., KERALA. 695 104
 PH :9526052765.
- 912. INDUS MOTOR COMPANY PRIVATE LIMITED (SX01-SX-01), SY. NO. 54/13, 14, 15, 16, (OLD SY. NO. 22, 22/13, 18), IN BLOCK NO. 3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. 895104
 PH. 9/24750888

BALARAMAPURAM

913. POPULAR VEHICLES & SERVICES LTD. (1601-AQA-11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT -695501 PH:8943346929

CALICUT

- 914. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011 PH : 9745998019
- 915. POPULAR VEHICLES & SERVICES LTD. (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016 PH -9846298613.
- 916. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT-673005 PH -9745908020
- 917. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT 673655 PH -9745998018
- 918. POPULAR VEHICLES & SERVICES LTD. (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT 673009 PH 9038012082
- 919. CARINO MOTORS (CARINO AUTO INFRA PVT. LTD.) (4704-47-01), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING AREEKAD, VILLAGE AND PANCHAYATH CHERUVANNUR, P.O. NALLALAM, CALICUT (KOZHIKODE), KERALA. 673027 PH :759289888. 7594997888.

CHALAKUDY

920. BRD CAR WORLD LIMITED (ZJ02-ZJ-01), MURINGOOR P.O., CHALAKUDY - 680316 PH - 9645176999 921. INDUS MOTOR COMPANY PRIVATE LIMITED (Z103-Z1-101), SURVEY NO. 53/1, 53/2 & 55/1, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALUKA CHALAKKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307 PH - 02/37557365

CHALAKUDY/ CHILLAKUDDY/ THRISSUR

POPULAR VEHICLES & SERVICES LTD. (2701-8U-0C), OPPSITE CCMK HOSPITAL, VELLIKULAM ROAD, CHALAKUDY, KERALA -68037 PH -0072609600

CHANGARAMKULAM

923. A M MOTORS (VH01-VH-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585 PH 3895756008.

CHAVAKKAD

- 924. BRD CAR WORLD LIMITED (A404-0J-06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512 PH - 9645963999
- 925. SAI SERVICE PRIVATE LIMITED (0J02-0J-01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK – GURUVAYUR, CHAVAKKAD.) - 680506 PH -0405883852

CHENGANNUR

926. SARATHY AUTO CARS (C701-UL-06), PRAVUMKOOD, THIRUVANVANDOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) -689124 PH :9447002647.

CHERPULASSERY

927. KVR AUTOCARS PVT LTD (NB01-NB-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE – CHERUPPALASSERY, TALUK – OTTAPPALAM, DISTRICT – PALAKKAD - 679503 PH :9747020582, 280100.

CHERTHAL A

- 928. INDUS MOTOR COMPANY PRIVATE LIMITED (VL03-VL-01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKKUZHI, CHERTHALA, ALAPPUZHA-DIST. 688552 PH 9745907873
- POPULAR VEHICLES & SERVICES PVT. LTD. (VL02-VL-01), RE-SURVEY NO.150/2-1,147/3, BUILDING NO.KP-188/0, N.H. KANJIKUZHI VILLAGE, CHERTHALA, ALAPPUZHA DISTT., -688582 PH: 9072530127.

CHITTUR

930. INDUS MOTOR COMPANY PRIVATE LIMITED (BOX1-BOX-01), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLTAVALLAUMPPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555 PH :9735991560

COCHIN

- 931. POPULAR VEHICLES & SERVICES LTD. (2701-27-01), PERANDOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025 PH :9846017725.
- 932. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015 PH: 9745998040.
- 933. SAI SERVICE PRIVATE LIMITED (2705-27-01), 50/1 15L, CHERANALLOOR ROAD,EDAPPALLY,COCHIN - 682024 PH - 9645106339
- 934. SAI SERVICE PRIVATE LIMITED (2705-27-02), NH-47,,PATHADIPALAM,EDAPPALLY,COCHIN 682024
 - PH:9645105057
- 935. POPULAR VEHICLES & SERVICES LTD. (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018 PH -9846/298618
- INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-09), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN, - 682030 PH - 9745098013
- SAI SERVICE PRIVATE LIMITED (2705-27-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) -682040
- PH:8129496818.
- GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-27-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104 PH : 756997864 4237700.
- 939. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHIVAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301 PH: 9745992070.
- 940. GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-27-02), PLOT NO.2/316, NH-47, MARADU VILLAGE, KANNDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001 PH:7994763336.

EDAPPAL

941. POPULAR VEHICLES & SERVICES LTD. (4702-AM-05), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH :9946104680

EDAVANNAPPARA

942. POPULAR VEHICLES (GKP1-GKP-1), SURVEY NO. 77/16-1 & 77/2-4, BUILDING NO. 18/152-B, CHEEKODE VILLAGE, EDAVANNAPARA KONDOTTY ROAD, CHERUVAYOOR PO, MALLAPURAM DISTRICT, KERALA-673645 - 673/454

FORT KOCHI

943. SAI SERVICE PRIVATE LIMITED (BRS1-BRS-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005 PH :9645106330.

GURUVAYUR

944. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-A4-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH -9745998015

IRINJALAKUDA

945. BRD CAR WORLD LIMITED (A404-KQ-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH :9539006999.

IRITTY

946. INDUS MOTOR COMPANY PRIVATE LIMITED (R002-VJ-02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRITTY, KANNUR, KERALA -670703 PH -97475-54929

RITY

947. POPULAR VEHICLE (VJ02-VJ-01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRITTY MUNICIPAL, KANNUR DIST. KERALA. - 670703 PH:7902473741.

KAIPAMANGALAM

148. SAI SERVICE PRIVATE LIMITED (2705-RP-07), VAZHIYAMBALAM PO, KAIPAMANGALAM,THRISSURE - 680681 PH: 8129496846.

KALAMASSERY/ ERNAKULAM

949. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-Q3-07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106 PH :9745998012.

KALPETA

950. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-JE-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591 PH : 9745998592

KANHAGAD

- KVR CARS (3L01-K2-02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315 PH:9605040999.
- 952. POPULAR VEHICLES & SERVICES LTD. (4702-K2-06), HIGHWAY JUNCTION, KANHANGAD SOUTH P.O., KANHANGAD - 689641 PH - 9946104885

KANHANGAD

953. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-K2-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541 PH. 9745998024.

KANJIRAPALLY

- 954. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-9Y-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O., KANJIRAPALLY 686506 PH 0745998009
- 955. AVG MOTORS LTD. (9Y03-9Y-01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT.,KERALA - 686512 PH :8606071155.

KANNUR

- 956. HAR CARS (K101-K1-01), HAR AVENUE, KANNOTHUMCHAL, CHOVVA POST, KANNUR -670006 PH 9539009480
- 957. HAR CARS (K101-K1-03), POTTIAN SHEKHARAN ROAD, MAKKANY, SOUTH BAZAR, KANNUR -670002 PH 9539009443
- 958. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-K1-0E), BALANKINAR JN., KATTAMPALLY P.O. KANNUR - 690011
- PH. 9745998023.

 959. KVR CARS (3L01-K1-04), CP-3-651-B, OPP.
 DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL
 POST, KANNUR, KERALA 670011
 PH. 9656034333
- 960. POPULAR VEHICLES & SERVICES LTD.
 (4702-K1-0F), PLOT NO.82/6A, NEAR
 CHARAPPURAM SREEMUTHAPPAN KAVU,
 KAPPAD ROAD, THAZHE CHOVVA (PO), KANNUR
 670018
 PH .9846062796.

KARIKKAD

961. BRD CAR WORLD LIMITED (A404-GE-02), BRD INDUSTRIAL ESTATE, KARIKKAD, KUNNAMKULAM - 680519 PH :9995804599

KARUNAGAPALLY

- 962. SARATHY AUTO CARS (C701-AQ-05), K.S. PURAM,NEELIKULAM, KARUNAGAPPALLY,KOLLAM, - 690544 PH :9526691565.
- 963. INDUS MOTOR COMPANY PRIVATE LIMITED (AQ03-AQ-01), SY.NO.2431, 24310, 24316, 24314, 24315, 24316, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583 PH - 97246980916
- 64. SARATHY (C701-AQ-11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA. - 690 562 Ph 9629691565

KASARGOD

- 965. KVR CARS (3L01-3L-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123
- 966. POPULAR VEHICLES & SERVICES LTD. (4702-31-0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH :9946104621.
- 967. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-3L-03), SURVEY NO.384/3C 10, MUTTATHODY VILLAGE, INDIRA NAGAR, KASARAGOD 671541 Pt :9747550747.

KATTAPANA

- 968. INDUS MOTOR COMPANY PRIVATE LIMITED (ZN01-ZN-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.). 685508
- PH:9746743460.

 POPULAR VEHICLES (ZN02-ZN-01), RE-SURVEY
 NO. 81/3, VILLAGE & TOWN KATTAPPANA,
 TALUK & DIST-IDUKKI, KERALA. 685 515

KAYAMKULAM

- 970. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-81-05), KARIVILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. - 690572 PH :9745998005.
- 971. POPULAR VEHICLES & SERVICES LTD. (B802-81-03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. -690502 PH:9946105601.

KODUNGALLUR

- 972. SAI SERVICE PRIVATE LIMITED (2705-8K-03), NH-17,T.K.S.PURAM,,KODUNGALLOOR - 680667 PH :9645106571
- 973. INDUS MOTOR COMPANY PRIVATE LIMITED (8K02-8K-01), RE-SURVEY NO. 116/1-6, 116/2-5, BUILDING NO. 560/JA, WARD NO. VII, AALA VILLAGE, (OLD VILLAGE-SREENARAYANAPURAM), KODUNGALLUR TALUK, MADHILAKOM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA-680 008

KODUVALLY

PH:9747513444.

974. A M MOTORS (BGX1-BGX-01), SURVEY NO:91/9, 91/10,NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572 PH-9898979073

KOLLAM

- 975. SARATHY AUTO CARS (C701-C7-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017 PH:9744552265.
- 976. POPULAR VEHICLES & SERVICES LTD. (1601-Q4-04), H & C COMPOUND, MUNDDACKAL, KOLLAM - 680006 PH : 7504977550
- 977. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-04-03), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005 PH :9745998004.
- 978. SARATHY AUTO CARS (C701-C7-13), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AVATHIL, KILIKLL LOOR PO, PUNTHALATHAZHAM-PALATHAZRA ROAD, KOLLAM, KERALA 691004 PH :86043/1765

KOLLAM/ QUILON

- 979. SARATHY AUTO CARS (C701-C7-08), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, UMAYANALLUR SIDCO INDUSTRIAL ESTATE, KOLLAM. - 691589 PH.9947127565.
- 980. SARATHY AUTO CARS (C701-C7-12), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIYAM PO, KOLLAM DIST., KERALA. - 691571 PH -9847931/65

KONDOTTY

981. INDUS MOTOR COMPANY PRIVATE LIMITED (ID02-ID-01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 10/1), NEDIVIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573 PH. 9746743178.

KONNI

982. INDUS MOTORS (COF1-COF-S1), SABRON TOWER, NEAR REPUBLICAN SCHOOL, MAMOODU, KONNI, PIN-689691, KERALA -689691 PH : 9745999858

KOOTHATTUKULAM

983. SAI SERVICE PRIVATE LIMITED (VM01-VM-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP, MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. - 686662 PH :9645106258.

KOTHAMANGAI AM

- 184. POPULAR VEHICLES & SERVICES LTD. (2701-9V-0B), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA - 686691 PH:9846027990.
- 185. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-9V-03), PALAKKADAN BUILDING, CHANKLAM, KOTHAMANGALAM -686691 PH :9745994479.

KOTTAKKAL

- 986. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-8M-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST, - 676503 PH 9745998017
- 987. POPULAR VEHICLES & SERVICES LTD. (4702-8M-03), NH-17, ,CHANDAPARAMBU, ,RANBATHANI P.O, MALAPPURAM, KOTTAKAL -676510 PH: 9946104631.

KOTTARKKARA

- 988. POPULAR VEHICLES & SERVICES LTD. (S801-S8-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA -691531 PH-8086073466
- 389. SARATHY AUTO CARS (S802-S8-01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARKARA DISTT. KOLLAM (KERALA) - 691531 PH - 0947207368
- INDUS MOTOR COMPANY PRIVATE LIMITED (S804-S8-01), RE SURVEY NO.20773-2;
 KIZHAKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., - 691531
 PH :9747562299.

KOTTAYAM

 AVG MOTORS LTD. (B801-B8-01), ERAYILKADAVU, KOTTAYAM - 686001 PH:7510982222.

- 992. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-88-04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM, KERALA - 686013 PH: 9745998148
- POPULAR VEHICLES & SERVICES LTD. (B802-B8-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O. KOTTAYAM - 686006 PH - 898607346.
- 994. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-88-0C), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM - 686013 PH :9745998007.

KOZHENCHERRY

995. AVG MOTORS LTD. (W801-AS-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT- PATHANAMTHITTA, - 689641 PH :9446092995

KUNNAMKULAM

996. POPULAR VEHICLES & SERVICES LTD. (2701-8N-07), CHOONDAL, TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH :9946105695.

LAKKIDI PERUR

997. A M MOTORS (CER1-CER-01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302 PH -8086305556

MALAPURAM

998. A M MOTORS (E601-E6-01), VARANGODE, DOWNHILL, MALAPURAM, - 676519 PH :9895705325.

MALLAPALLY

999. INDUS MOTOR COMPANY PRIVATE LIMITED (1201-12-01), THOPPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585 PH: 9747541400.

MANATHAVADY

1000. INDUS MOTOR COMPANY PRIVATE LIMITED (IEO2-IE-01), SURWEY NO. 1/2A1, A1, B1, RY 1/210, 1/99, MYSOR ROAD, CHETTAPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA. - 670645 PH 97459907002

MANJERI

- 1001. A M MOTORS (E601-8V-05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA -676121 PH :9895756035.
- 1002. KVR AUTOCARS PVT LTD (8V02-8V-01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA -676123 PH -9747020801

1003. POPULAR VEHICLES & SERVICES LTD. (4702-8V-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERALA) - 676121 PH :8589992406

MANNARKAD

- 1004. A M MOTORS (E601-RA-07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582 PH:9895979048.
- 1005. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-RA-0K), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZHA-PO. MANNARKAD,KERALA -678583 PH : 9745995946.

MAVELIKARA

1006. POPULAR VEHICLES & SERVICES LTD.
(B802-S9-02), KONNAYIL SUVAKO INDUSTRIAL
COMPLEX, SHED A-1, KOLLAKADAVU
INDUSTRIAL ESTATE, KOCHAL MOODU,
KALLIMEL P.O., MAVELIKKARA, KERALA690570
PH :9400052338.

1007. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-S9-07), NEAR PRATHIBA THEATRE, PUTTHIYAKAVU, MAVELIKKARA - 690101 PH :9745998137.

MORAYUR

1008. A M MOTORS (CUJ1-CUJ-01), SURVEY NO. 328/1, VILLAGE – MORAYUR, VALENCHERY, DISTRICT – MALAPPURAM, KERALA. - 673642 PH :808652666.

MUVATTUPUZHA

- 1009. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-7E-01), NH-49, MUVATUPUZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPUZHA, ERNAKULAM DIST - 686661 PH: 97459998011.
- 1010. POPULAR VEHICLES & SERVICES LTD (2708-7E-02), MUTHUKALLU JUNCTION, PERUMPALLUR P.O., MUVATTUPUZHA, KERALA - 686673 PH : 7356088840

NEYYANTTINKARA

1011. INDUS MOTOR COMPANY PRIVATE LIMITED (AT01-AT-01), INDUS MOTOR CO. PVT, LTD., OLD M.V THEATRE, NEAR KSRTC BUS STATION, NEYYATINKARA, DIST. TRIVANDRUM - 695121 PH:9747544500.

NILAMBUR

1012. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-AF-0A), MINERVA JUNCTION, NILAMBUR KERALA - 679329 PH :9745998396. 1013. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-AF-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329 PH -9745988396

NILAMEL

1014. INDUS MOTOR COMPANY PRIVATE LIMITED (DA02-DA-01), SURVEY. NO. 195/10, 195/3-1-2, 195/3-2-1, 195/8, 195/14, 195/9-1

OTTAPALAM

1015. INDUS MOTOR COMPANY PRIVATE LIMITED (PA01-PA-01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA - 6/9101 PH:9747544454.

PALA

- 1016. POPULAR VEHICLES & SERVICES LTD. (B802-GN-04), 12TH MILE,PALA-PONKUNNAM ROAD,PALA - 686575 PH -9072609475
- 1017. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-GN-05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574 PH :9745998878.
- 1018. AVG MOTORS LTD. (GN03-GN-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651 PH -9427137746
- 1019. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-GN-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT - 686584 PH : 9747516934.

PALAKKAD

- 1020. POPULAR VEHICLES & SERVICES LTD. (2701-Y2-09), OPP. PALANA HOSPITAL, KODUVAYOOR ROAD, KINASSERY P.O., PALAKKAD - 678707 PH. 9946105613.
- 1021. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-Y2-0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD. - 678701 PH: 974598550.

1022. INDUS MOTOR COMPANY PRIVATE LIMITED (Y202-Y2-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007 PH 9747519500

PANDIKKAD

1023. AM MOTORS (CUV1-CUV-01), SURVEY NOS: 33/2-2, 333/2-2, CHOORAKAVU, PERINTALLMANNA ROAD, NEAR INDIAN OIL PETROL PUMP, PANDIKKAD TOWN & POST, MALAPPURAM DISTRICT, KERALA - 676 521 PH :93999570.

PARAPPANANGADI

1024. A M MOTORS (CTK1-CTK-01), SURVEY NO.66/6, 66/7, KODAPPADI, POST-CHETTIPPADY, PARPANGADI, MALAPPURAM. - 676319 PH :9895900466.

PARAVUR

1025. POPULAR VEHICLES & SERVICES LTD.
(ZS01-ZS-01), SURVEY NO. 340/1-76,77.78,
NEAR HP PETROL PUMP, PARAVUR-MANJALI
MAIN ROAD, MANNAM PO, NORTH PARAVUR
MUNICIPAL, ERNAKULAM DIST. 683520, KERALA.
- 683520
PH -0172606938

PATHANAMTHITTA

PH -9539009734

- 1026. AVG MOTORS LTD. (W801-W8-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671 PH:9446002987.
- 1027. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-W8-13), KUMBAZHA, PATHANAMTHITTA -689653 PH - 0745998008
- 1028. POPULAR VEHICLES & SERVICES LTD. (B802-W8-05), T.K. ROAD, NEAR COLLECTORATE,PATHANAMTHITTA - 689645
- 1029. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-W8-12), SURVEY NO. 11-13/12(1), KARIMPANKUZHY ROAD, NEAR SAROJ GAS AGENCY, MAKKANKUNNU, PATHANAMTHITTA, KERALA. 689645 PH -072-6909458

PATTAMBI

- 1030. A M MOTORS (E601-8P-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306 PH :9567866059.
- 1031. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-8P-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303 PH:9745998295.

1032. A M MOTORS (E601-8P-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. -679306 PH 9567866059

PAYANNUR

- 1033. POPULAR VEHICLES & SERVICES LTD. (4702-92-04), N H 17., EZHILODE P O, "PAYYANUR - 670309 PH :9946104701.
- 1034. POPULAR VEHICLES & SERVICES LTD. (9201-92-01), SY. NO. 2181, CHERUTHAZHAM VILLAGE, EZHILODE (NEAR COLONY BUS STOP), PAYANNUR-KANNUR NH, PAYANNUR TALUK, KANNUR DISTRICT, KERALA – 670 309. PH 9046104701

PAYYANUR

1035. INDUS MOTOR COMPANY PVT. LTD.
(9202-92-01), SURVEY NO.-289/117, 290/105,
KARIVELLUR PERALAM GRAM PANCHAYAT
(NEAR PALATHARA BRIDGE), PAYYANUR TALUK,
KANNUR DISTRICT, KERALA- PIN-670521.
PH. 9745998204.

PERINTHAI MANNA

- 1036. A M MOTORS (E601-7H-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA -679322 PH 8120818235
- 1037. KVR AUTOCARS PVT LTD (7H01-7H-01), SURVEY NO. 878-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351 PH - 0747020673
- 1038. KVR AUTOCARS PVT LTD (7H01-7H-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322 PH:9747020837.

PERUMBAVOOR

- 1039. SAI SERVICE PRIVATE LIMITED (2705-8W-04), M.C.ROAD,PERUMBAVOOR,ERNAKULAM DIST,KERALA - 683542 PH - 704258335
- 1040. INDUS MOTOR COMPANY PRIVATE LIMITED (8W03-8W-01), SURVEY NO. 722-3, 723-3, TALUK KUNNATHUNADU, VILLAGE RAYAMANGALAM, SUB DIST.-PERUMBAVOOR DIST.-ERNAKULAM. 683 541 PH : 9747591803.

PIROVAM

1041. SAI SERVICE (BOW1-BQW-01), SUVEY NO. 788/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN & MUNICIPALITY, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA. - 686 664 PH : 9645106198

POINACHI

1042. KVR CARS (3L01-GF-03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH :9747021026.

PUNALUR

- 1043. SARATHY AUTO CARS (C701-8Q-03), NH-208, Q.S. ROAD, ELAMPAL POST, PUNALUR, KOLLAM DIST - 691322 PH:9744400265.
- 1044. INDUS MOTOR COMPANY PRIVATE LIMITED (8002-80-01), SY. NO. 48/1/42, OLD, SY. NO. 2314/3324, (OLD RAMRAJ TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD. 691 305 PH : 9747638885.

QUILANDY

1045. INDUS MOTOR COMPANY PRIVATE LIMITED (3001-30-01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306 PH -9745907875

RAMANATTUKKARA

1046. A M MOTORS (E601-KB-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632 PH :9567866144.

RANNI

1047. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-JX-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH: 9745998737.

SASTHAMKOTTAH

1048. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-RT-09), NO. SP IX661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM – KERALA - 690520 PH - 0745098844

SHORNUR

1049. POPULAR VEHICLES & SERVICES LTD. (2701-11-0E), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH :8589992432.

SULTHAN BATHERY

1050. POPULAR VEHICLES (VK01-VK-01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA. - 673 591 PH :7540477551

TALIPARAMBA

1051. HAR CARS (K101-9W-02), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141 PH :9539009473.

THALASSERRY

1052. INDUS MOTOR COMPANY PRIVATE LIMITED (R002-R0-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH: 9745998022.

THALASSERY/ TELLICHERRY

1053. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-Y3-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY, KERALA - 670102 PH :9747520100.

THALAYOLAPARAMBU

1054. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-WN-0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH-9746743003.

THAMARASSERY

1055. INDUS MOTOR COMPANY PRIVATE LIMITED (PB06-PB-01), RE-SY. NO. 44/5A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMRARSSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. - 673573
PH :9747553362.

THIRUVALLA

- 1056. AVG MOTORS LTD. (Y501-Y5-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA, PATHANAMTHITTA DISTT - 689107 PH - 9446323099
- 1057. POPULAR VEHICLES & SERVICE (B802-Y5-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH:8086073489.

THODUPUZHA

- 1058. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-HZ-04), PALA ROAD, THODUPUZHA -685584 PH :9745998631.
- 1059. POPULAR VEHICLES & SERVICES LTD. (HZ02-HZ-01), SY NO.124/TA-1, 124/TA-2, THODUPUZHA EHLOOR MAIN ROAD, VILLAGE & TOWN, THODUPUZHA, DISTT. IDUKI - 685585 PH:9072530120.

THRISSUR

- 1060. POPULAR VEHICLES & SERVICES LTD. (2701-A4-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH : 6282306495.
- 1061. SAI SERVICE PRIVATE LIMITED (2705-A4-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH:9645105051.
- 1062. BRD CAR WORLD LIMITED (A404-A4-01), NH 47,BYE PASS, KONIKARRA POST, THALORE, THRISSUR - 680031 PH :9995807141.
- 1063. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-A4-0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH - 9745998014
- 1064. BRD CAR WORLD LIMITED (A404-A4-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH 9746476529

THRITHALLUR

1065. BRD CAR WORLD LIMITED (A404-SS-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR -680619 PH:9539197888.

TIRUR

- 1066. A M MOTORS (E601-Y4-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR 676101 PH :9995879706
- 1067. KVR AUTOCARS PVT LTD (7H01-Y4-05), T.P. 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA 676307 PH 9747020673
- 1068. A M MOTORS (E601-Y4-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. -676103 PH:9895705323.
- 1069. INDUS MOTOR COMPANY PRIVATE LIMITED (Y403-Y4-01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMAGEUTICALS PVI. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA. - 676105 PH : 974518883.

TRIPPUNITHURA

1070. SAI SERVICE PRIVATE LIMITED (2705-AK-05), HILL PALACE ROAD,KARINGACHIRA,COCHIN -682301 PH :9645105067.

TRIPRAYAR

1071. POPULAR VEHICLES & SERVICES LTD. (2701-8R-08), SURVEY NO. 296/58, 296/9, 296/9-1, NATTIKA VILLAGE, NEAR CIVIL STATION, POLY JUNCTION, TRIPRAYAR TOWN, THRISSUR TALUK & DISTRICT, KERALA-680566 - 680566 PH 3946693245.

TRIVANDRUM

- 1072. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM -695014 PH :9745998001.
- 1073. POPULAR VEHICLES & SERVICES LTD. (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002 PH -9946104601
- 1074. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-02), NH BYE PASS ROAD, VEMPALAVATTOM, TRIVANDRUM - 695029 PH :9745998003
- 1075. SARATHY AUTO CARS (C701-16-04), KOVALAM BYEPASS,SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009 PH -947270665
- 1076. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, , 695011 PH -9745098002
- 1077. POPULAR VEHICLES & SERVICES LTD. (1601-16-05), OPP, ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002 PH :9846298610.
- 1078. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-11), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANOACLAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM 695030 PH :9747508822
- 1079. SOUTH PARK MOTORS PVT. LTD. (1604-16-01), SURVEY NO. 985/3-4-5-6, VILLAGE -KADAKAMPALLY, CHACKAI BYPASS, TALUKA -TRIVANDRUM, TRIVANDRUM, KERALA. - 695029 PH: 9526100008.
- 1080. SARATHY AUTO CARS LTD. (C701-16-09), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT-THIRUVANANTHPURAM, KERALA. - 695019 PH :9961665865.
- 1081. POPULAR VEHICLES (1601-16-12), RE-SURVEY NO. 264-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA. -695 015 PH :9846498605.

TRIVANDRUM-MANANTHALLA

1082. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE. VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA, TRIVANDRUM-695028

UPPALA

PH -07/75/0100

- 1083. POPULAR VEHICLES & SERVICES LTD. (4702-41-0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH: 8086078864.
- 1084. KVR CARS (4I02-4I-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH -9526021876

VADAKARA

- 1085. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-88-07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104 PH :9745998021.
- 1086. POPULAR VEHICLES AND SERVICES (8S02-8S-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH: 8943345935.

VALENCHARRY

1087. A M MOTORS (CUK1-CUK-01), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. 676552 PH.9745986666.

VETTICHIRA

1088. KVR AUTOCARS PVT LTD (7H01-MZ-03), AP IV, 75A TO G, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA, - 676552 PH: 9747020023.

WADAKKANCHERY

1089. BRD CAR WORLD LIMITED (A404-MX-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST -680583 PH -9657869403

KERLA

EDAKKARA

1090. KVR (GMN1-GMN-01), SURVEY NO. 1087/1C-91, VAZHIKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679 331 PH: 3947020777.

LADAKH

LEH

1091. DRUK AUTOZONE (9S02-9S-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH - 194101 PH :8082800205

MADHYA PRADESH

AGAR

1092. UNITARA MOTORS (BJT2-BJT-01), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669 PH :9575650883.

ALIRAJPUR

1093. RUKMANI MOTORS PVT. LTD. (GLY1-GLY-01), WARD NO 1, JHABUA ROAD, ALIRAJPUR, MADHYA PRADESH, MP - 457887 PH :8889676035

ANUPPUR

1094. SHUBH MOTORS PVT. LTD. (BIB1-BIB-01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224 PH:9752546255. 9755505145.

ASHOK NAGAR

1095. PREM MOTORS PVT. LTD. (DS01-DS-02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH -9026809856

ASHTA

1096. JEEWAN MOTORS PVT. LTD. (BSF1-BSF-01), KHASRA NO.111/1 NEAR RELIANCE PETROL PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001 PH:9826429604 6264918307

BADNAWAR

8718911222

1097. PATEL MOTORS (INDORE) PVT. LTD. (BPT1-BPT-01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH. 454660 PH :32228. 9179653543.

BADWAH / BARWAHA (BOTH NAMES ARE OK)

1098. NIMAR MOTORS PVT. LTD. (AU01-UJ-05), NIRMAL

BALAGHAT

1099. KUNAL MOTORS (U501-TP-04), KH NO.-1/56, JHULELAL DHARMSHALA ROAD, BALAGHAT, MADHYA PRADESH - 4811001 PH :8349992181.

PH -7770878726 9669569496

BARELI

1100. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (1303-13-1), SURVEY 423/2, VILLAGE KAMTON, NH 12, BARELI, RAISEN, MADHYA PRADESH. - 464668 PH 73099033972

BARHI

1101. SHUBH MOTORS PVT. LTD. (GMK1-GMK-1), 1286/2, BARHI, DIST. - KATNI, MADHYA PRADESH - 483770 PH: 9752546255.

BARNAGAR

1102. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (BBK2-BBK-01), RUNIJA ROAD, BARNAGAR CITY, DISTRICT UJJAIN -456771
PH.9755512100/7898900224.

BARWAN

1103. NIMAR MOTORS PVT. LTD. (AU01-SA-02), ANJAD ROAD, VILLAGE -KARAHI, BARWANI, MADHYA PRADESH - 451551 PH: 7770804492, 9669569496.

BEGAMGANJ

1104. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (Cit.1-cit.-01), BHOPAL-SAGAR MAIN ROAD, BEGAMGANJ, DISTRICT – RAISEN, MADHYA PRADESH . -464881 PH :7909997536.

BEOHARI

1105. SHUBH MOTORS PVT. LTD. (BKA1-BKA-01), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST.-SHAHDOL, MADHYA PRADESH. - 484774 PH. 9755595423.

BERASIA

1106. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PUT. LTD.) (CKG1-CKG-01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT – BHOPAL, MADHYA PRADESH. -463106 PH :9770593501

BETMA

1107. OCEAN MOTORS PVT. LTD. (BVR1-BVR-01), OPPOSITE MPEB OFFICE, INDORE-AHEMDABAD ROAD, BETMA, DISTRICT – INDORE, MADHYA PRADESH. - 453001 PH:7389936444.

BETUL

1108. KUNAL MOTORS (U501-U5-02), BHOPAL -NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK,, BETUL - 460001 PH:8349999177.

BHOPAL

- 1109. JEEWAN MOTORS PVT. LTD. (0302-03-01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA BHOPAL - 462024 PH :4058888/ 9826017799
- 1110. SATYAM MOTORS (0307-03-01), NH-12, SUVEESHA NAGAR, HOSHANGABAD ROAD, MISROAD - 462040 PH: 6261900423.

9826429605

- 1111. JEEWAN MOTORS PVT. LTD. (0302-03-04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH, CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036 PH :4057988 9131384153
- 1112. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (0308-03-01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH -462023 PH :4063529.30.31.32.33.34.35. 9926516501.
- 1113. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (0309-03-01), 4/1, DAGA HEIGHTS, NEAR BUDHNA MANDIR, MAIN ROAD KOLAR ROAD, CHUNABHATTI, BHOPAL, MADHYA PRADESH. -462016 PH :9109900400.

BIAORA

1114. UNITARA (0F02-0F-01), OLD AB ROAD, KACHNARIA, BIAORA (M.P) - 465674 PH:9575650883.

RINA .

1115. ADINATH CARS PRIVATE LIMITED (BH02-BH0-01), PLOT NO. 2934/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT – SAGAR, MADHYA PRADESH - 470113 PH :9009780047.

BURHANPUR

1116. NIMAR MOTORS PVT. LTD. (BRR1-BRR-01), KHASRA NO. 654/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP. PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH - 450331 PH :7694011374, 966569496.

CHAKGHAT

1117. CITY CARS (UNIT OF ACARWAL WHEELS) (GKQ1-GKQ-01), GRAM AND POST - CHANDAI CHAKGHAT, TEHSIL - TEONTHER, PRAGRAJ ROAD, NH 27, DIST- REWA, MP – 486226... -486226 PH :9754301199, 7354252525.

CHATTARPUR

1118. ADINATH CARS PRIVATE LIMITED (8B02-8B-01), MAHOBA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGAR - 471001 PH :9009785577

CHHINDWARA

- 1119. KUNAL MOTORS (U501-U5-03), OPP, KUNAL MOTORS SHOWROOM, LAL BAGH TIRAHA,BEHIND TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP), - 480001 PH :9981852239.
- 1120. KUNAL MOTORS (U501-U5-06), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002 PH -9081852930
- 1121. KAMTHI MOTORS LLP (US02-US-01), KHASRA NO.1/53, BESIDE MVM SCHOOL, NAGPUR ROAD, VILL.-SARRA, DISTT. CHHINDWARA, MADHYA PRADESH 480001 PH 91114884440 9111535777

CHITRAKOOT

1122. CITY CARS (UNIT OF AGARWAL WHEELS) (GKS1-GKS-01), PILIKOTHI CHOURAHA, BESIDE SINGH AUTOMOBILE- A HERO AGENCY, CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA (MADHYA PRADESH)-485334 - 485334 PH :7089906823, 7354252525.

DABRA

1123. PREM MOTORS PVT. LTD. (BOR1-BOR-01), PICHHORE TIRAHA, GWALIOR JHANSI ROAD, DABRA, DIST.-GWALIOR. - 475110 PH: 9926809110.

HOMAC

1124. ADINATH CARS PRIVATE LIMITED (RD02-RD-01), KILLARI NAKA, SAGAR ROAD, DAMOH - 470661 PH :9009780035.

DATIA

1125. PREM MOTORS PVT. LTD. (3003-WE-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661 PH: 9165012280.

DEORI

1126. ADINATH CARS PRIVATE LIMITED (CUO1-CUO-01), CIO VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE, NEAR GOVT. HIGH SCHOOL, NARSINGHPUR ROAD, VILLAGE KHEER, DEORI DISTT. SAGAR (M.P.) - 470226 PH :7000410522.

DEPALPUR

1127. OCEAN MOTORS PVT. LTD. (WB01-WB-03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,DIST.INDORE-MP - 453115 PH - 220505 - 222501

DEWAS

1128. UNITARA MOTORS PVT LTD (3Q02-3Q-01), SURVEY NO 255, A.B. ROAD, RASULPUR SQUARE, DEWAS, MADHYA PRADESH PIN 455001 - 455001 PH:9575650883.

DHAMNOD

1129. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (UT01-UT-01), KHASRA NO. 484/1/2, OLD A B ROAD, OPPOSITE HP PETROL PUMP, DHAMNOD, DIST.-DHAR, MADHYA PRADESH. -454552 Pt. 19981585165.

DHAR

1130. RUKMANI MOTORS (P) LTD (5304-LM-02), 41/2 MAGAJPURA,DHAR., - 454001 PH:0731-223500, 9755549200

INDOR

1131. STANDARD AUTO AGENCIES (AVA1-AVA-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP,DINDORI - 481661 PH :280030,77771014728 9111248709

GADARWARA

1132. STANDARD AUTO AGENCIES (BOI2-BOI-01), KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119, GADARWARA, DISTRICT – NARSINGHPUR. - 487551 PH:8319784336.

GANJ BASODA

1133. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AEA2-AEA-01), LAL BAGH, BARETH ROAD, GANJ BASODA, VIDISHA, 464221. - 464221 PH -0425148884

GARRA

1134. KAMTHI MOTORS LLP (GJC1-GJC-01), LALBARRA ROAD, GARRA INDUSTRIAL AREA, GARRA, BALAGHAT, MADHYA PRADESH. -481331 PH:7723020684.

GAUTAMPURA

1135. OCEAN MOTORS PVT. LTD. (CFW1-CFW-01), RUNJI CHOURAHA, GAUTAMPURA, TEHSIL-DEPALPUR, DISTT-INDORE, MADHYA PRADESH - 453220 PH 230501. 7389937314.

GOTEGAON

1136. STANDARD AUTO AGENCIES (BLY1-BLY-01), JABALPUR ROAD, OPP. NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR. - 443 001 PH.7771003774.

GUNA

1137. PREM MOTORS PVT. LTD. (S301-S3-01), OPP R.T.O.,A.B. ROAD,GUNA, - 473001 PH :268015.

GWALIOR

- 1138. PREM MOTORS PVT. LTD. (3003-30-01), M. L. B. ROAD,GWALIOR., 474002 PH :9926809803.
- 1139. PREM MOTORS PVT. LTD. (3005-30-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH :9926809803
- 1140. NIKUNJ MOTORS (3006-30-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 - 474005 PH :9407067974.

HALALPURA - BHOPAL

1141. DAGA MOTORS (0309-03-02), KHASRA NO. 80/1/K, VILLAGE - HALALPURA, TEHSIL - HUZUR, DISTRICT - BHOPAL, 462030 PH -9109900365

HARDA

1142. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (KM01-VY-22), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331 PH :8889284444, 8889282222.

IATOD

1143. OCEAN MOTORS PVT. LTD. (BVT1-BVT-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111 PH:7389936477.

HOSHANGABAD

1144. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (KM01-KM-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001 PH :8889282222.

ICHHAWAR

1145. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PUT. LTD.) (CIKT-CIK-01), SEHOCH NADAN ROAD, NEAR SARASWATI SCHOCI, ICHHAWAR, DISTRICT – SEHORE, MADHYA PRADESH. 466115 PH: 3399061454/ 9926516501.

INDORE

- 1146. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010 PH:99777-03609/99777-03512.
- 1147. RUKMANI MOTORS (P) LTD (5304-53-01), 2-3,,A.B. ROAD,INDORE - 452001 PH :99071-57890/90390-88702.

- 1148. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017 PH :99777-03312/99777-03260
- 1149. RUKMANI MOTORS (P) LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE 452001 PH:99071-57890/90390-88702.
- OCEAN MOTORS PVT. LTD. (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. -452001
 PH :6627500. 6627505.
- 1151. OCEAN MOTORS PVT. LTD. (5306-53-02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017 PH:6617505,2877505.
- 1152. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) -452006 PH.7314293919.
- 1153. OCEAN MOTORS PVT. LTD. (5306-53-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAJESHWARI EXTENSION, PIPLIYAHANA, INDORE 452001 PH '988533331,7389936451.
- 1154. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (5307-53-01), PLOT NO. 483/22, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH 452002 PH :7471111132.
- 1155. RANA MOTORS (5308-53-01), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009 PH - 0100975566
- 1156. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-05), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH. -452012 PH. 99777-03512/99777-03260.
- 1157. RIKMANI MOTORS (P) LTD (5304-53-04), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 1517, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. - 452010 PH -99071-5789090390-88702
- 1158. OCEAN MOTORS PVT. LTD. (5306-53-04), PLOT NO. 142 AND 151, SCHEME NO. 97, PART-4, COMMERCIAL MANDI, NEAR CAT SQUARE, INDORE. - 452012 PH.7389936405.

JABALPUR

- 1159. STANDARD AUTO AGENCIES (5402-54-01), OPPOSITE ALLAHABAD BANK, DELITE TALKIES ROAD CIVIL LINES, JABALPUR - 482001 PH :4040405 / 4040406 07771003012 07771003374
- 1160. SHUBH MOTORS (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001 PH 9755545540
- 1161. STANDARD AUTO AGENCIES (5402-54-03), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR -482002 PH :4038001 9301190205
- 7771006920.

 1162. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/364, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH 482002 PH 9755595496.
- 1163. STANDARD AUTO AGENCIES (5402-54-06), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001 PH: 9303568517 9300087/8
- 1164. MAA GAYTRI (AGGARWAL) (5404-54-1), MOUZA KARMETA NB. 497. P.H. NO 23/26, KHASRA NO. 497 & DIV. KHASRA NO. 484/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. 482002 PH: 7489901021.
- 1165. STANDARD AUTO AGENCIES (5402-54-7), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. 482003
 PH :7800806222

9303568517. **JAORA**

1166. PATEL MOTORS (INDORE) PVT. LTD. (P801-BFR-04), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226
PH : 243399, "7089901505, 9926932221.

JHABUA

1167. PATEL MOTORS (INDORE) PVT. LTD. (AAR1-AAR-01), INDORE AHMEDABAD ROAD, MEGHINAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661 PH. 9826634449.

KATNI

1168. SHUBH MOTORS PVT LTD (FK01-FK-01), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501 PH 9755515839

KHANDWA

1169. NIMAR MOTORS PVT. LTD. (AU01-3R-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001 PH :9575105697. 9669569496.

KHARGONE

- 1170. NIMAR MOTORS PVT. LTD. (AU01-AU-01), JETAPUR,SANAWAD ROAD,KHARGAONE, -462026 PH 9669569504 9669569496
- 1171. NIMAR MOTORS PVT. LTD. (AU01-AU-06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001

KHATEGAON

1172. UNITARA (BXB2-BXB-01), NEMAWAR-INDORE ROAD, KHATEGAON, M.P - 455336 - 455336 PH :9993406993

PH:7694011436.9669569496

KOTMA

1173. SHUBH MOTORS (D001-D0-01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336 PH :9755581441.

KUKSHI

1174. OCEAN MOTORS PVT. LTD. (BIO1-BIO-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331 PH:9009780030, 7389945443, 8085999990.

MAI IIDF OI

1175. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CWN1-CWN-01), #REF! - 456443
PH - 9109130402

MAIHAR

1176. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-GI-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH:7354252525.

MANASA

1177. PATEL MOTORS (INDORE) PVT. LTD. (BZX1-BZX-01), 982/1, RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. -458110 PH.9644405368.

MANAWAR

1178. OCEAN MOTORS PVT. LTD. (BVS1-BVS-01), NEAR SHANTIKUNJ COLONY, INDORE-MANAWAR MAIN ROAD, TEHSIL – MANAWAR, DISTRICT – DHAR. - 454335 PH -7389938477

MANDLA

1179. STANDARD AUTO AGENCIES (5402-WD-04), KATARA ROAD, MANDLA, DIST. MANDLA MP -481661 PH :260600,260622 9301090184 88592800880.

MANDSAUR

- 1180. PATEL MOTORS (INDORE) PVT. LTD.
 (WC01-WC-01), NEAR SHIVANA BRIDGE,RATLAM
 MANDSAUR ROAD,MANDSAUR 458001
 PH :07422-400450, 220372.
- 1181. PATEL MOTORS (INDORE) PVT. LTD. (WC01-WC-02), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001 PH-07422-400450, 220372.

MANPUR

1182. PATEL MOTORS (INDORE) PVT. LTD.
(BRL1-BRL-01), KHASRA NO. 302/1/3, AB ROAD,
MANPUR, DIST- INDORE - 453661
PH -9829360690

MAUGANJ

1183. CITY CARS (SEY1-SEY-01), NEAR SENGAR PETROL PUMP, CHACK MODE WARD NUMBER 03.NH 7, MAUGANJ, DISTT – REWA, MADHYA PRADESH – 486331. - 486331 PH :975301199.

MHOW

1184. OCEAN MOTORS PVT. LTD. (WA01-WA-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441 PH : 7389936478, 266211.

MORENA

1185. PREM MOTORS PVT. LTD. (RG01-RG-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH: 9926002791.

NAGDA

1186. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHR2-CHR-01), PLOT NO. 17, STATE HIGHWAY NO.17, INDORINA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456335 PH :9755044300/9755512100.

NARSINGHPUR

1187. STANDARD AUTO AGENCIES (BB01-BB-01), KH. NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT - NARSINGHPUR, MADHYA PRADESH. - 487001 PH. 232757 9203437214

NASRULLAGANJ

1188. JEEWAN MOTORS PVT. LTD. (CIN1-CIN-01), KHASRA NO. 458, VILLAGE - RALA, TEHSIL -NASRULLAGANJ, DISTRICT - SEHORE, MADHYA PRADESH - 466331 PH :9826017799, 8959900110.

NEEMUCH

1189. PATEL MOTORS (INDORE) PVT. LTD. (P801-3T-02), MHOW-NEEMUCH ROAD,NEEMUCH(MP),, - 458441 PH :9977703907.

NIWARI

1190. ADINATH MOTORS (SFC1-SFC-1), ATKHASRA NO 2017/1, NEAR HDFC BANK MAIN ROAD, NIWARI, MADHYA PRADESH -472442. - 472442 PH -9009787562

PANNA

1191. CITY CARS (UNIT OF AGARWAL WHEELS)
(EQ01-EQ-01), KHASRA NO. 378, MOHAN RAJ
VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL,
CIVIL LINE NH-75, PANNA, MADHYA PRADESH. 488001
PH :7354252525.

PARASIA

1192. KAMTHI MOTORS LLP (GKF1-GKF-01), KHIRSADOHMAL, PARASIA, CHHINDWARA. MP -480441 PH: 9285506109.

PETLAWAD

1193. PATEL MOTORS (INDORE) PVT. LTD. (CJD1-CJD-01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773 PH - 0111160868

PIPARIYA

1194. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (CGB1-CGB-01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775 PH:8889285555, 8889282222.

PITHAMPUR

1195. PATEL MOTORS (INDORE) PVT. LTD. (5303-BVD-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH:9826360699.

RAISEN

1196. RAJRUP MOTORS (RF03-RF-01), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551 PH. 7869755501

1197. JEEWAN MOTORS (RF02-RF-01), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551 PH: 9826017799.

RAJGARH

1198. RUKMANI MOTORS (P) LTD (GKE1-GKE-01), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. 454116 PH. 9755549200.

RATLAM

1199. PATEL MOTORS (INDORE) PVT. LTD. (P801-P8-01), 76 C,D&E,INDUSTRIAL AREA,RATLAM - 452001 PH - 99269-32221/93404-31858

1200. PATEL MOTORS (INDORE) PVT. LTD. (P801-P8-03), 181/17/18,DOSHI GOAN,INDUSTRIAL AREA ,JAORA ROAD,RATLAM - 457001 PH: 99269-32221/93404-31858.

REWA

1201. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-M2-03), NYPASS CHURHATA, DIST. REWA -482001 PH: 7354252525.

SAGAR

1202. ADINATH CARS PRIVATE LIMITED (G102-G1-01), STATION ROAD, TILAK GANJ, SAGAR (M.P). -470001 PH: 9009780030.

SANWER

1203. RANA MOTORS PYT LTD (CWX-1-CWX-01), S.NO. 366/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. -453551 PH-91109275568

SATNA

1204. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-D7-05), (A UNIT OF AGRAWAL WHEELS PYT. LTD.), BESIDE BHASKAR PRESS, BEHIND MARUTI SHOWROOM, WARD NO 27, AMOUDHA KALA, PANNA ROAD, SATNA - 485001 PH: 9754301199, 7354252525.

SEHORE

1205. JEEWAN MOTORS PVT. LTD. (0302-EH-02), 889/1/2,OFFICERS COLONY,IN FRONT OF CHURCH GROUND,BHOPAL, INDORE ROAD -466001 PH :2226400 9996009735

SENDHWA

1206. NIMAR MOTORS PVT. LTD. (CIH1-CIH-01), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL. SENDHWA, DISTRICT – BARWANI, MADHYA PRADESH. -451666 PH :7694011408. 9669569496.

SEONI

1207. KUNAL MOTORS (U501-8X-05), JYARAT NAKA, JABALPUR NAGPUR ROAD, SEONI (M.P.) -480661

PH:8349999269.

SHADOL

1208. SHUBH MOTORS (MF01-MF-01), JAMUA, NEAR GYAN GUPTA,BUDHAR ROAD,SHAHDOL, -484771

PH:9755595423. SHAHPURA

1209. STANDARD AUTO AGENCIES (CRD1-CRD-01), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH:7771003392.

SHAJAPUR

1210. UNITARA (RH03-RH-01), LAL GHATI, A B ROAD, SHAJAPUR, MP - 465001 PH:9993406993.

SHAMGARH

1211. PATEL MOTORS (INDORE) PVT. LTD. (BFZ1-BFZ-01), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL – SHAMGARH, DISTRICT – MANDSAUR, MADHYA PRADESH. - 458883 PH : 9753088222.

SHIVPURI

1212. PREM MOTORS PVT. LTD. (3003-3U-04), A B ROAD, SIVPURI,, - 473551 PH -992680976

SHUJALPUR

1213. UNITARA (BGP2-BGP-01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P - 465333 -465333 PH :9575650883.

SIDHI

1214. CITY CARS (UNIT OF AGARWAL WHEELS) (BKM1-BKM-01), ADHIYAR KHOH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. -486661

PH:9754301199, 7354252525. SIHORA

1215. SHUBH MOTORS PVT. LTD. (CIG1-CIG-01), KHASRA NO. 31/1, P.H. – 11, MOUZA – GHAT SIMARIYA, TEHSIL – SIHORA, DISTRICT – JABALPUR, MADHYA PRADESH,.. - 483440 PH. 9755099971. 9752546255.

SINGHOLL

1216. PATEL MOTORS (SEQ1-SEQ-01), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP – 458228 - 458228 PH:9977703907.

SIRON.I

1217. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PUT. LTD.) (CVUH-CVM-01), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228 PH -790902788

TARANA

1218. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHQ2-CHQ-01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH. - 456665 PH :9893563031/9755512100.

TENDUKHEDA

1219. STANDARD AUTO AGENCIES (CRC1-CRC-01), KHASARA NO. 49/6, MOUZA – TENDUKHEDA, DISTRICT – NARSINGHPUR. - 470880 PH:7771014773.

THIKE

1220. NIMAR CAR (SED1-SED-01), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH –451660. -451660 PH -91109702186

TIKAMGARH

1221. ADINATH CARS PRIVATE LIMITED (RE02-RE-01), NEAR MAU CHUNGI NAKA, TIKAMGARH (M.P.) -472001 PH: 920088454.

UDAIPURA

1222. JEEWAN (SCI1-SCI-01), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH -464770 PH:9826017799.

UJJAIN

- 1223. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (3W03-3W-01), SURVEY NO. 59/3, DEWAS ROAD, UJJAIN - 456010 PH -0734-2524002 9755512100
- 1224. YUG CARS (3W03-3W-02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURAHA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH. - 456001 PH -942/5/67/070

UMARIA

1225. SHUBH MOTORS (5403-BVY-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH : 9755502682.

VIDHISHA

1226. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AY02-AY-01), PLOT NO 59/1, VILLAGE RANGAI, VIDISHA, MADHYA PRADESH - 464001 PH :9109900374.

VIDISHA

1227. RAJRUP (AY03-AY-01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001 PH : 7869755501

WAIDHEN

1228. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-JJ-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI, MADHYA PRADESH - 486886 PH:7354252525.

MAHARASHTRA

AHMEDNAGAR

- 1229. KANKARIYA AUTOMOBILES PVT. LTD. (A501-A5-01), SARDA MILLS,SAVEDI ROAD,AHMEDNAGAR, MAHARASTRA - 414001 PH:7410024227.
- 1230. KANKARIYA AUTOMOBILES PVT. LTD. (A501-A5-05), MIDC, AHMEDNAGAR - 414003 PH :7447700029.

AJARA

1231. SAI SERVICE PRIVATE LIMITED (CIR1-CIR-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT – KOLHAPUR. - 416505 PH:7776837717, 9673331977.

AKLUJ

1232. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-RU-04), PLOT NO. 15/3-A, PANCHVATI STOP,MALINAGAR ROAD,AKLUJ - 413101 PH:0217-223033/880598648.

AKOLA

- 1233. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-F1-01), TIRUPATI CHAMBERS, CONVENT ROAD, AKOLA - 444005 PH -976789/55/9/1122/20551
- 1234. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-F1-02), PLOT NO.7, RIDHORA ROAD, NH-6, NIZAMPUR, AKOLA. - 444001 DH -076789265201112206551

ALEPHATA

1235. THE KOTHARI WHEELS (CSZ1-CSZ-01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, A/P – ALEPHATA, TALUKA – JUNNAR, DISTT. PUNE, PIN-412411 - 412411 PH:8421753278.

ALIBAUG

1236. SIMRAN MOTORS PVT. LTD. (7S01-3X-05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE - VESHVI, ALIBAUG, DISTRICT - RAIGAD, MAHARASHTRA - 402201 PH: 9223161512, 9270888786.

AMBERNATH

1237. AHER AUTOPRIME LLP (COP1-COP1-01), PLOT NO-24,26,27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVLI, AMBERNATH - 421501 PH -842971720

AMRAVATI

- 1238. ASPA BANDSONS AUTO PVT. LTD. (F201-F2-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA, - 444607 PH :9423123665.
- 1239. ASPA BANDSONS AUTO PVT. LTD. (F201-F2-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607 PH -0423339601

APTA

1240. K.T.S. AUTOMOTORS PVT. LTD. (0582-7S-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207 PH: 942061135694206611326.

AURANGABAD

- 1241. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH: 9158000046.
- 1242. PAGARIYA AUTO PVT. LTD. (2103-21-01), OPP.
 OLD HIGH COURT, NEAR HOTEL ASHOKA
 EXECUTIVE, JALANA ROAD, AURANGABAD 431005
 PH :02406659902.

- 1243. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-21-03), C-27,MIDC, CHIKALTHANA , N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006 PH -9158000059
- 1244. PAGARIYA AUTO PVT. LTD. (2103-21-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005 PH - 18601900484/198670909468
- 1245. PAGARIYA AUTO PVT. LTD. (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001 PH:8408886768/7387279311.

BADLAPUR

1246. PRAKASH AUTO PVT. LTD. (9001-90-01), SHOP NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA WATER SUPPLY, O'PP. INDIAN OIL PETROL PUMP, MIDC ROAD, KATRAP, BADLAPUR (EAST) -421503 PH 3855701288/9870453155

BALLARPUR

1247. TRISTAR CARS (H302-ZH-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701 PH:7447473304.

BARAMATI

1248. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-7R-01), BARAMATI- PHALTAN RD., KASBA BARAMATI, DIST. PUNE - 413102 PH:9881370310.

BARSHI

1249. CHAVAN MOTORS DIVISION INDIA PVT LTD (BBA1-BBA-01), GAT NO 1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401 PH:0217-229666/8378983726.

BEED

1250. PAGARIYA AUTO PVT. LTD. (V602-V6-01), GUT
NO. 61, VILLAGE – GHOSAPURI, TALUKA AND
DISTRICT – BEED, MAHARASHTRA. - 431122
PH
:9834161614/02442256058/02442256056/024422

56057/. BHANDARA

1251. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-FG-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904 PH.7030932330)6673004280.

BHOR

1252. SEHGAL AUTORIDERS PVT. LTD. (BSV1-BSV-01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA – BHOR, DISTRICT – PUNE, MAHARASHTRA. -412206 PH-9527771016

BOISAR

1253. SHIVAM AUTO ZONE (ES02-ES-01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARAHSTRA - 401501 PH-8082551155.

BRAMHAPURI

1254. TRISTAR CARS PVT LTD (H302-TW-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206 PH:7745833000.

BULDHANA

1255. MANRAJ MOTORS PVT LTD (COU1-COU-01), GAT NO. 94, PLOT NO. 11, SUNDERKHED, BULDHANA, MAHARASHTRA. - 443 001 PH :787501501

CHALISGAON

1256. MANRAJ MOTORS PVT LTD (AAE1-AAE-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA. - 424101 PH: \$408889861.

CHANDGAD

1257. SAI SERVICE PRIVATE LIMITED (BTF1-BTF-01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA. - 416507 PH :9673339103.

CHANDRAPUR

- 1258. TRISTAR CARS PVT LTD (H302-H3-01), NR. HOTEL KUNDAN PLAZA, NAGPUR ROAD, CHANDRAPUR - 442401 PH:7722068612.
- 1259. TRISTAR CARS PVT LTD (H302-H3-03), NAGPUR ROAD, CHANDRAPUR - 442401 PH - 7722068603

CHIPLUN

1260. JAGRUT MOTORS PVT LTD (9A01-9A-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605 PH.7083687172/8308917693.

DAHANU

1261. SAI SERVICE PRIVATE LIMITED (V901-TD-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602 PH :9730302821/9167980005/9594952211.

DAPOLI

1262. JAGRUT MOTORS PVT LTD (G301-VG-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI.DIST RATANAGIRI. - 415712 PH :8308816572/7447752372.

DHULE

1263. SEVA AUTOMOTIVE LTD. (P301-P3-01), GATE NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE -424001

PH:02562-281128/29.

DINDORI

1264. AUTOMOTIVE MANUFACTURERS PVT. LTD. (AAF1-AAF-01), S.NO.753, NEAR PANDAV PETROL PUMP, NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202 PH -9673000829

DOMBIVALI

1265. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-JS-02), PLOT NO. B-43, PHASE-1,DOMBIVALI INDUSTRIAL AREA, DOMBIVALI,DISTT-THANE, MAHARASHTRA, -421201

PH:8879050913/9769206095/9769206101.
1266. FORT POINT AUTOMOTIVE (CARS) PVT. LTD.
(3906-JS-02), SURVEY NO.13, NEAR
PIMPLESHWAR TEMPLE, OPP. MAHANAGAR
CNG PUMP, KALYAN-SHILPHATA ROAD,
MANGAON, SONARPADA, DOMBIVLI EAST. 421203

PH:8422800740, 8422978490.

GADCHIROLI

1267. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I)
P. YT. LTD) (ZK02-ZK-01), PLOT NO. 10, GANESH
NAGAR, MUL ROAD, GADCHIROLI,
MAHARASTRA - 442702
PH. 3669929188.

GADINGALAJ

1268. SAI SERVICE PRIVATE LIMITED (3802-DB-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ-416502

PH :02327-222239. GONDIA

1269. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-4C-02), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601 PH:8888837023/8888859487.

1270. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PYT. LTD) (2004-4C-03). ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441 801 PH .888837023/888859487.

GUHAGAR

1271. JAGRUT MOTORS PVT LTD (BJV1-BJV-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGHAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703 PH : 7218548798/7447752072

HINGANGHAT

1272. SEVA AUTOMOTIVE PVT. LTD. (CDZ1-CDZ-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, ALANTI, HINGANGHAT, TALU, HINGANGHAT, DISTRICT – WARDHA, MAHARASHITRA. - 442301 PH :7722067843.

HINGOLI

1273. PAGARIYA AUTO PVT. LTD. (IF03-IF-01), PLOT NO.5,7 & 8, SURVEY NO.29/2, AKOLA BY PASS ROAD, HINGOLI. - 431513 PH:8411961177.

HUPARI

1274. SAI SERVICE PRIVATE LIMITED (CIQ1-CIQ-01), GAT NO.925/8K/2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT - KOLHAPUR. - 416203 PH 902308454

ICHALKARANJI

1275. SAI SERVICE PRIVATE LIMITED (4D01-4D-01), GATE NO. 107.KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122 PH :0230-2425282.

INDAPUR

1276. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-NQ-02), STATE HIGHWAY NO. 151, INDAPUR - 412219 PH :8308807314.

ISLAMPUR

1277. CHOWGULE INDUSTRIES PVT. LTD.
(PJ02-PJ-01), GATE NO.905/A/3, NEAR BOMBAY
RAYAN, PUNE-BANGALOE HIGHWAY (NH-4),
ISLAMPUR TALUKA: WALVA, DIST:SANGLI 415409
PH :02342-225757.

JALGAON

1278. MANRAJ MOTORS PVT LTD (C401-C4-01), AJINTA ROAD, MIDC INDL AREA, JALGAON - 425003 PH :0257-2212120.

.ΙΔΙ ΝΔ

1279. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-BC-02), PLOT NO. 4 & 5, CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA, - 431203 PH: 9158000063.

JATH

1280. CHOWGULE INDUSTRIES PVT. LTD. (J102-BLX-05), PLOT NO. 12, SAWANT ESTATE, MORE COLONY, OPP. CATTLE BAZAR, SATARA ROAD, JATH, DISTRICT SANGLI, MAHARASHTRA -416404 PH 02344-246598

JAYSINGPUR

1281. SAI SERVICE PRIVATE LIMITED (ASA1-ASA-01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGAON(JAYSINGHPUR), TALUKA:SHIROL, DIST: KOLHAPUR - 416134 PH :9673339762.

KALWAN

1282. SHAAN CARS PRIVATE LIMITED (BNW1-BNW-01), GAT NO. 189, PLOT NO. 7, MALEGAON ROAD, A/P KALWAN, NASHIK. - 423501 PH: 9075028780. 9689003988.

KALYAN

1283. AHER AUTOPRIME LLP (CFV-1-CFV-0.1), SURVEY NO.53 & 54, HIND MILL, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBA - 421301 PH -981970.624/JR657402904/0769027505

1284. AHER AUTOPRIME LLP (CFV1-CFV-02), SURVEY NO.31B, MOHANE ROAD, NEAR SHAHAD. RAILWAY STATION, SHAHAD, KALYAN. - 421103 PH :8422871720/8657402204/983993076.

KANKAVALI

1285. JAGRUT MOTORS PVT LTD (G301-V7-05), PLOT NO.32-33, SURVEY NO.-1886/1,,MUMBAI-GOA HIGHWAY (NH-17),JANAVLI,KANKAVLI,MAHARASHTRA - 418002

PH:7499051071/9021095805.

KARAD

1286. CHOWGULE INDUSTRIES PVT. LTD. (F303-4E-02), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110 PH :9922569835.

KARJAT

1287. SIMRAN MOTORS PVT. LTD. (7S01-TA-03), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD -410201 PH-860198895-8108181978

1288. KANKARIYA AUTOMOBILES PVT. LTD. (GJV1-GJV-01), KARJAT-NAGAR ROAD, KARJAT, MAHARASHTRA - 414402 PH :9890843771.

KARMALA

1289. CHAVAN MOTORS DIVISION INDIA PVT LTD (GJQ1-GJQ-01), GAT NO. 105, SURVEY NO. 3961, KARMALA-NAGAR ROAD, AIP-KARMALA, TALUKA - KARMALA, DIST.-SOLAPUR. - 413202 PH 8806865691

KAVATE MAHANKAL

1290. CHOWGULE INDUSTRIES PVT. LTD. (SC02-SC-01), MAHANKALI BAAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405 PH.02341-222102.

KHAMGAON

1291. MANRAJ MOTORS PYT LTD (BXU1-BXU-01), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON, MAHARASHTRA - 444303 PH. 107623-250002/3.

KHARGHAR

1292. EXCELL AUTOVISTA PVT LTD (AAC1-AAC-01), SURVEY N.O. 742/439, KOPPA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210 PH . 7666703636 / 9594153308 / 8422991300 / 9290357300

KOLHAPUR

1293. SAI SERVICE PRIVATE LIMITED (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR -416008 PH :0231-2661676.

1294. SAI SERVICE PRIVATE LIMITED (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON

PISTONS.NH-4, KOLHAPUR - 416122 PH :0230-2468376. 1295. SAI SERVICE PRIVATE LIMITED (3802-38-06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR,

KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. - 416012 PH :0231-2329494. 1296. KR MOTORS KOLKOHUR PVT LTD (3804-38-01),

196. KR MOTORS KOLKOHUR PVT LTD (3804-38-01), PLOT NO. 216/2, 216/3, 216/5, NH-4, GOKUL SHIRGAON, KOLHAPUR. - 416234 PH :9850500550, 7447755504.

KONGAON

1297. PRAKASH AUTO PVT. LTD. (3903-AZ-02), SURVEY NO. 126/127,98/38,AT & POST KONGAON, - 421302 PH:9702809668/9870453155.

KOPARGAON

1298. SHAAN CARS PRIVATE LIMITED (COV1-COV-01), SURVEY NO. 15/36 GAWARE PATIL ESTATE, NAGAR MANMAD HIGHWAY, NEAR ASHOKA HOTEL, KOPARGAON. - 423 601 PH: 9075028780.

KOREGAON BHIMA

1299. SAI SERVICE (BUO1-BUO-01), GAT NO-373, VILLAGE-KOREGAON BHIMA, TALUKA-SHIRUR, DIST-PUNE. - 415501 PH:7774997005.

KUDAL

1300. JAGRUT MOTORS PVT LTD (9B01-9B-01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA – KUDAL, DISTRICT – SINDUDURG, MAHARASHTRA - 416520 PH :880666457/28/208965235.

KURUDWAD

1301. CHAVAN MOTORS DIVISION INDIA PVT LTD (CUF1-CUF-01), GAT NO.:256, BYPASS ROAD, A/P KURDA, TALUKA-MADHA, DISTT. SOLAPUR. -413208 PH :8806665691

KURUNDWAD

1302. SAI SERVICE PVT. LTD. (BHO1-BHO-01), GAT NO. 250, AT POST - KURUNDWAD, TALUKA - SHUROO, DIST.-KOLHAPUR. - 416106 PH -0673339695

LASALGAON

1303. SHAAN CARS PRIVATE LIMITED (BZM1-BZM-01), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA – NANDGAON, DISTRICT – NASHIK. - 422306 PH : 9075028780, 7720094874.

LATUR

1304. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-V8-01), CITY SURVEY NO. 2960, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR - 413512 PH :9607999095.

1305. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-V8-02), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512 PH

:9607999091/9607999092/9607999093/96079990

LONAVALA

1306. SEHGAL AUTORIDERS PVT. LTD. (CGA1-CGA-01), GATE NO. 1201, VILLAGE – WAKSAI, TALUKA – MAVAL, LUNAVALA, DISTRICT – PUNE, MAHARASHTRA. - 410405 PH: 39753 73431.

MAHAD

 SIMRAN MOTORS PVT. LTD. (7S01-TX-04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301 PH:9870404323.

MALEGAON

1308. SHAAN CARS PRIVATE LIMITED (3703-FF-02), PLOT NO. 572/81,CHANDANPURI SHIVAR,OLD MUMBAI, AGRA ROAD, DIST- NASIK,MALEGAON -423203

PH :9922969620/9922969656

1309. THE KOTHARI WHEELS (1906-AGA-04), SOHAM NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, AP MANCHAR, TALUKA: AMBEGAON, DISTT: PUNE, MAHRASHTRA - 410503 PH: 3411003608.

MANGAON

MANCHAR

1310. SIMRAN MOTORS PVT. LTD. (BAM1-BAM-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASTHRA. - 402104 PH 9223181120

MANMAD

1311. SHAAN CARS PRIVATE LIMITED (BNX1-BNX-01), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104 PH - 9075028701 8888832360

MANOR

1312. SAI SERVICE PRIVATE LIMITED (CRE1-CRE-01), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST – TAKVAHAL, DISTRICT – PALGHAR, MANOR. - 401403 PH: 9167980005.

MIRAJ

1313. CHOWGULE INDUSTRIES PVT. LTD. (J102-SD-03), 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410 PH: 0233-2643221 0233-264322.

MUMBAI

1314. SAI SERVICE PRIVATE LIMITED (0504-05-01), 462 SENAPATI BAPAT MARG, WORLI NAKA, LOWER PAREL, MUMBAI - 400013 PH -9504952122/9594952088/9187980082

1315. SAI SERVICE PRIVATE LIMITED (0504-05-02), ARVIND CHAMBERS, 194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069 PH -43030606 (600, 95949552341 / 9594952084 / 959492720

1316. VITESSE PRIVATE LIMITED (0503-05-01), SHAH INDL.ESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058

> :02226730787/02226730280/02226730296/02261 642500/02261642500.

1317. VITESSE PRIVATE LIMITED (0503-05-02), 77 AF PALKY GULLY, OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025 PH:24229747/24223933/9821894915. 1318. SAH & SANGHI AUTO AGENCIES PVT.LTD (0505-05-01), PRAKASH MILLS COMPOUND,OFF. GLOBE MILLS PASSAGE,WORLI,MUMBAI -400013 PH 102224925452/02224925453/02224925454

1319. SAI SERVICE PRIVATE LIMITED (0504-05-04) C/O SHAKTI INDUSTRIAL WIRE COMPOUND, DATTA PADA ROAD, BORIVILI (EAST), MUMBAI - 400066 PH :28707000 / 9594057006 / 9594952344 / 9594957417

1320. EXCELL AUTOVISTA PVT LTD (0510-05-01), RESHAM SINGH COMPOUND, CST ROAD, KALINA, SANTACRUZ EAST, MUMBA! - 400098 PH: 67743888, 26653242, 43, 46 / 7666703636 / 9594972889 / 7715804477.

1321. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-05-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAI - 400070 PH:61563734 / 61563744 / 61563713 /9167773925.

1322. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096 PH :9694973889, 8422800747.

1323. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA -400067 PH

:7718893072/9152001329/8082551017/98709388 88.

1324. VITESSE PRIVATE LIMITED (0503-05-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP KANDIVALI (W), MUMBAI - 400067 PH 10229874753

1325. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-03), CIO VARUN STEEL INDUSTRIES,AAM TOOL COMPOUND, BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI - 400010 PH :5954974678. 8891405341.

1326. K.T.S. AUTOMOTORS PVT. LTD. (0582-05-02), C/O-COZY INDIA, 5, HANSRAJ LANE, BYCULLA, MUMBAI - 400027 PH - 32751234 23752301/2/3/5/6

 SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-02).
 PLOT NO. 485, RAMCHANDRA LANE EXTN., OFF LINK ROAD, KANCHPADA, MALAD-WEST.
 MUMBAI. 400064. - 400064
 PH :8082551115/9862721124/9870938888. 1328. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-05-01), PLOT NO.115/116/117 MIVERVA INDUSTRIAL ESTATE, MULLUND-WEST, MUMBAI - 400080 PH :8104989839/81149898947

1329. KIRAN MOTORS (05A7-05-01), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, GHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086 - 400086 PH :9152004223/770098886

1330. MY CAR (PUNE) PYT LTD (05A8-05-01), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072 PH :8104907081.

MURBAL

1331. PRAKASH AUTO PVT. LTD. (BYO1-BYO-01), SURVEY NO. 61/2, KALYAN - MURBAD ROAD, VILLAGE – DAHAGAON, TALUKA – MURBAD, DISTRICT – THANE, MAHARASHTRA. - 421605 PH -7798725726

MURGUD

1332. SAI SERVICE PRIVATE LIMITED (AWA1-AWA-01), R.S. NO. 18814, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219 PH 102375-265553

NAGPUR

- 440026

1333. SEVA AUTOMOTIVE LTD. (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR -440023 PH .0712-6652863.

 AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-20-02), 575 KAMPTEE ROAD, NAGPUR-26,

PH:9673004226/9673004223.

1335. SEVA AUTOMOTIVE LTD. (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, - 440016 PH :0712-666444.

1336. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I)
PVT. LTD) (2004-20-01), NEAR PARDY NAKA
(OUTSIDE), NH-6, BHANDARA ROAD,NAGPUR 440035

PH:8888859506/8888859534

1337. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001 PH. 9168699701/9673004277.

1338. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I)
PVT. LTD) (2007-20-01), PLOT NO. 4, NEW
COTTON MARKET, GHAT ROAD, NAGPUR,
MAHARASTRA - 440018
PH:8888859542.

- 1339. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2007-20-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASTRA. - 441202 PH :888820312.
- 1340. SEVA AUTOMOTIVE PVT. LTD. (2002-20-04), PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED, KH NO.45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027 PH 18390446F644
- 1341. ARUN MOTORS (2008-20-01), PLOT NO-9810, PATNI PLAZA, KHAMLA RING ROAD, SAWARKAR NAGAR, NAGPUR, MAHARASHTRA - 440025 PH:7757988800/7028688800.
- 1342. ARUN MOTORS (2008-20-02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028 PH :7757988800.

NALASOPARA

- 1343. SHIVAM AUTO (CUH1-CUH-01), SURVEY NO. 91,92, PLOT NO. 7, VILLAGE- DHANIV, NALASOPARA, DIST. PALGHAR, MAHARASHTRA. - 401209
 - PH:9152001458/7777002930

NANDED

1344. SEVA AUTOMOTIVE LTD. (6801-68-01), NANDED HYDERABAD ROAD, NANDED - 431604 PH :7447415607.

NANDURBAR

1345. SEVA AUTOMOTIVE LTD. (P301-KW-02), PLOT NO.- 3& 4, BANSITAL NAGAR, NEAR HOTEL KARAN GARDEN HOWFULLY BYE PASS ROAD, NANDURBAR, DIST.- SATARA. - 425412 PH:7720017528.

NARAYANGAON

1346. THE KOTHARI WHEELS (1906-FV-02), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH-8411003608

NASHIK

- 1347. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3702-37-01), P-1-12, ADDITIONAL NASIK INDL. AREA, AMBAD, NASIK - 422010 PH : 0253-6636329/ 319/312/313/314/317.
- 1348. SEVA AUTOMOTIVE LTD. (3701-37-01), PLOT NO. X -46,MIDC. AMBAD, NASIK 422010 PH :0253-6644444.
- 1349. SHAAN CARS PRIVATE LIMITED (3703-37-01), E-3 MIDC AREA,SATPUR , NASIK,MAHARASHTRA - 422007 PH :9075028780. 9922969646.
 - 28780, 9922969646.

- 1350. SHAAN CARS PRIVATE LIMITED (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011 PH 10253-2236080
- 1351. SEVA AUTOMOTIVE LTD. (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH - 9146000709
- 1352. SEVA AUTOMOTIVE PVT LTD (3701-37-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006 PH 10253-6634444
- 1353. SEVA AUTOMOTIVES PVT LTD (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH :0253-6654444.

NAVI MUMBAI

- 1354. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA,SHIRVANE NERUL,NEW BOMBAY, - 400706 PH :66143900/66133923/66143924.
- 1355. SIMRAN MOTORS PVT. LTD. (3913-9K-01), CAMEO FABRIC COMPANY, GEN 16, NEAR SULZER COMPANY, DIGHA, TTC AREA, AIROLI -400701 PH: 8788582329. 8369658212.

NEVASA

1356. KANKARIYA AUTOMOBILES PYT. LTD. (BSU1-BSU-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA – NEVASA, DISTRICT – AHMEDNAGAR. - 414603 PH: 9420494601.

NIPHAD

1357. SHAAN CARS PVT. LTD. (COX1-COX-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT – NASHIK, MAHARASHTRA. -422303 PH: 9075028780.

OSMANABAD

PH -8888867861

1358. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-LW-03), PLOT NO. 1, TAWADE COMPLEX, PRERANA NAGAR, OSMANABAD, 413501

PAITHAN

 PAGARIYA AUTO PVT. LTD. (BNQ1-BNQ-01), GAT NO-277, MAUZA- PAITHAN, TALUKA- PAITHAN, DIST - AURANGABAD 431107. - 431107 PH. 9922994237.

PALGHAR

1360. SAI SERVICE PRIVATE LIMITED (TE01-TE-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404 PH -9167980042/9167980005/9594952211

PALUS

1361. CHOWGULE INDUSTRIES PVT. LTD. (J102-0Z-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308 PH:8888870122.

PANDHARPUR

1362. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-0H-05), GAT NO.56, ESABAVI, PUNE ROAD, TAL:PANDERPUR, SOLAPUR - 413001 PH - 7774997005

PANVEL

- 1363. SIMRAN MOTORS PVT. LTD. (7501-75-01), PLOT2-8, SECTOR-15, OPP. HOTEL GARDEN, OLD MUMBAI PUNE HIGHWAY, PANVEL - 410206 PH 9291957798 8857442902
- 1364. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-7S-03), PLOT NO.92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206
 - :9769202055/9769206045/9769206018/82914670

42. PARATWADA

1365. ASPA BANDSONS AUTO PVT. LTD.
(CF21-CF2-01), SURVEY NO. 26/4A, RAMGAON,
AMRAVATI PARATWADA ROAD, NEAR JAWARDI
PHATA, PARATWADA TALUKA – ACHALPUR,
DISTRICT – AMRAVATI. - 444 805
PH: 3888897629

PARBHANI

1366. PAGARIYA AUTO PVT. LTD. (LN02-LN-01), SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI -431401 PH :9511868433.

PATAS

1367. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-PR-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH -888889095

PEN

1368. SIMRAN MOTORS (9101-91-01), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107 PH :9503381198.

PHALTAN

1369. CHOWGULE INDUSTRIES PVT. LTD. (KH02-KH-01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523 PH :8888886301

PIMPLEGAON

1370. AUTOMOTIVE MANUFACTURERS PVT. LTD. (BAY1-BAY-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBA JAGRA HIGHWAY, NH3 AVP PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202 PH :02550-25208.

PUNE

- 1371. SAI SERVICE PRIVATE LIMITED (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE -411012 PH:020-46404440/020-46404448.
- 1372. SAI SERVICE PRIVATE LIMITED (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE -411004
- PH:9923208347. 1373. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-02), S.NO. 53, PUNE SATARA HIGHWAY, KATRAJ, PUNE - 411046
- PH:020-66786200.

 1374. SAI SERVICE PRIVATE LIMITED (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH:9923208345.
- 1375. WONDER CARS PVT LTD (1903-19-02), 12, NPS LINES, SOLAPUR ROAD, OLD POOL GATE, CAMP, PUNE - 411001 PH: 020-26332934/35.
- 1376. THE KOTHARI WHEELS (1906-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH 7498272309
- 1377. MY CAR (PUNE) PVT. LTD. (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057 PH 1320-87923010
- 1378. ACE KUDALE CAR PVT. LTD. (1910-19-01). 36/2C/1, MANRAJ BUDRUK, PUNE-SOLHAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE -412201 PH 955/258/454
- 1379. CHOWGULE INDUSTRIES PVT. LTD. (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE -411046 PH .02066803555/02066803500.
- 1380. SAI SERVICE PRIVATE LIMITED (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019 PH :020-46605999/020-46605995.

- 1381. SEHGAL AUTORIDERS PVT. LTD. (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021 PH :8308304444 020-41463625 020-41463627
- 1382. SAI SERVICE PRIVATE LIMITED (1901-19-06), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057 PH 9923/08302
- 1383. ACE KUDALE CAR PVT. LTD. (1910-19-02), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMAL, BHOSARI, PUNE. - 411039 PH 9552193904
- 1384. THE KOTHARI WHEELS (1906-19-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE -411019 PH:9168662302.
- 1385. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH:888874980.
- 1386. WONDER CARS PVT LTD (1903-19-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. 411018
 - PH:020-46608888.
- 1387. SAI SERVICE PRIVATE LIMITED (1901-19-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. -411048
 - PH:9923208358.
- 1388. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE -411016 PH. 8888842887
- 1389. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033 PH 1920-67915700
- 1390. SAI SERVICE PRIVATE LIMITED (1901-19-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT-PUNE, MAHARASHTRA. - 411 041 PH : 9923208312.
- 1391. THE KOTHARI WHEELS (1906-19-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. -411028 PH:8411002005, 8087060432.

PUNE- SATARA ROAD, PUNE. - 411009 PH :020-67273200. 1393. EXCELL AUTOVISTA PVT LTD (1917-19-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE - WADKI, TAL - HAVELI, DIST

(1908-19-06) SR NO - 43/44/S 7 PARVATI

INDUSTRIAL ESTATE OPP. ADINATH SOCIETY.

PUNE. - 412308 PH :9594632888/9146052651

1392. CHOWGULE INDUSTRIES PVT. LTD.

- 1394. THE KOTHARI WHEELS (1906-19-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH: 8411003631.
- 1395. ACE KUDALE CAR PVT. LTD. (1910-19-03). SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA – HAVELI, DISTRICT – PUNE. - 412105 PH :7767814381.
- 1396. SUMANKIRTI CARS PVT. LTD. (1915-19-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUMM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH 9851900106
- 1397. MY CAR (PUNE) PYT. LTD. (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE – KURULI, TALUKA – KHED, CHAKAN, DISTRICT – PUNE. -410501 PH. :7755900000.
- 1398. WONDER CARS PVT LTD (1903-19-04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA – MULSHI, DANGE CHOWK, PUNE – 411 033. -411033 PH : 7887883311.

RAHATA

1399. KANKARIYA AUTOMOBILES PVT. LTD. (ZV03-ZV-01), SHIRDI ROAD, SAKORI, RAHATA, -423107 PH :8275033313.

RAHURI

1400. KANKARIYA AUTOMOBILES PVT. LTD. (COZ1-COZ-01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH. 9420036767.

RAJAPUR

1401. JAGRUT MOTORS PVT LTD (AHA1-AHA-01), SURVEY NO. 14/8, TARAL WADI, RAJAPUR, DIST: RATNAGIRI - 416702 PH: 9527623663/8806665572.

RAJGURUNAGAR

1402. MY CAR (PUNE) PVT. LTD. (CBZ1-CBZ-01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH: 9112231553.

RATNAGIRI

1403. JAGRUT MOTORS PVT LTD (G301-G3-01), D-25,,MIDC MIRJOLE,MAHARASTRA,RATNAGIRI -415639 PH :2352228380/9130013172.

SANGAMNER

1404. SHAAN CARS PRIVATE LIMITED (HE03-HE-01), GAT NO. 173/4/3/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605 PH :02425-259197.

SANGI

- 1405. CHOWGULE INDUSTRIES PVT. LTD. (J102-J1-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH - 9850968805
- 1406. SIDDHI WHEELS (J104-J1-01), SR NO. 917//2/B, SANGLI MIRAJ ROAD, MIRAJ, DISTRICT - SAGLI. - 416410 PH:9371727001. 0233-2211610/1620/1630.

SANGOLA

1407. CHAVAN MOTORS DIVISION INDIA PVT LTD (CUE1-CUE-01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA -SANGOLA, DIST.-SOLAPUR. - 413307 PH:8806665691.

SASWAD

1408. CHOWGULE INDUSTRIES PVT. LTD. (1908-PH-03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301 PH :02115224450/02115225210.

SATANA

1409. SHAAN CARS (BSW1-BSW-01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 -423301 PH - 9022969656

SATARA

1410. CHOWGULE INDUSTRIES PVT. LTD. (F303-F3-01), PLOT NO. B-2, OLD MIDC, SATARA -415002 PH: 9011015066/9850966823.

SAVNER

1411. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I)
PVT. LTD) (BTJ1-BTJ-01), PLOT NO.2, MADANE
LAYOUT, MOUZA GUJARRHED), NR, INDIAN
PETROL PUMP, NAGPUR ROAD, SAVNER DISTT.
NAGPUR. - 441107
PH 1888859548

SAWANTWADI

1412. JAGRUT MOTORS PVT LTD (BBL1-BBL-01), SHIVSHAMBHO APARTMENT, 1190, A/P KOLGAON, SURVEY NO 187, HISSA NO 338, TAL-SAWANTWADI, DISTT. SINDHUDURG. -416510 PH :9970654699, 9689533472.

SHAHAPUR

1413. SHIVAM AUTO ZONE (I) PVT. LTD.
(BZU1-BZU-01), DR. DESHPANDE COMPOUND,
NEAR BHATSA COLONY, VILLAGE –
GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT –
THANE, MAHARASHTRA - 421601
PH :7718893483.

SHAHUWADI

1414. SAI SERVICE (BFT1-BFT-01), GATE NO. 1213, R/AT DONOLI, TALUKA - SHAHUWADI, DIST. -KOLHAPUR - - 416 213 PH -902308448

SHIRUR

1415. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-ZD-02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA - 412210 PH: 8888837082 /9011038682.

SHIRWAL

1416. CHOWGULE INDUSTRIES PVT. LTD. (BSD1-BSD-01), GAT NO.175, AIP SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH:9637399003.

SHRIRAMPUR

1417. KANKARIYA AUTOMOBILES PVT. LTD. (LV03-LV-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709 PH -942/0494543

SIKRAPUR

1418. EXCELL AUTOVISTA PVT LTD (GKJ1-GKJ-01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PIN-412208, PUNE - 412208 PH. 9146194973.

SILLOD

1419. PAGARIYA AUTO PVT. LTD. (2103-ZG-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213

SINNAR

1420. SHAAN CARS PRIVATE LIMITED (3703-FU-03), A-24, MIDC AREA MALEGAON, SINNAR TAL-SINNAR,, - 422103 PH :02551-230305.

SOLAPUR

- 1421. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-02), 150, AKALKOT ROAD,OPP. SVCS HIGH SCHOOL,SOLAPUR, - 413006 PH:0217-2606666/8805986818.
- 1422. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-01), 18,39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224 PH:8805778881.
- 1423. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-06), PLOT NO.95, IND. ESTATE, HOTAGI ROAD, SOLAPUR. - 413003 PH: 8805986826.

TAI ASARI

1424. SHIVAM AUTO ZONE (I) PVT. LTD. (BINT-BIN-01), SURVEY NO. 191/1 PLOT NO. 5, AT-POST – VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606 PH -635528143/777009390

TALEGAON

1425. MY CAR (PUNE) PVT. LTD. (4K01-4K-01), SR.NO.113, HISSA NO.1/3/2/A, MUMBAI PUNE OLD HIGHWAY, MAVAL, TALEGAON - 410506 PH -9730858855

TALOJA

1426. EXCELL AUTOVISTA PVT LTD (AAC1-9K-02), PLOT NO-9.MIDC,NAVADE,TALOJA, TAL-PANVEL ,DIST-RAIGAD - 410208 PH :9136948195/9320357300.

TASGAON

1427. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT. LTD.) (GKB1-GKB-01), SHETKARI MARKET, NEAR ISHA HOTEL, TASGAON-SANGLI ROAD, TALUKA - TASGAON, DIST.-SANGLI. -416312 PH :8275030748.

THANE

1428. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-39-01), KOTHARI WAREHOUSE NO. 111, POKHRAN ROAD NO. 11, MANPADA, CHATALSAR, THANE - 400607 PH -9594974656. 8691039873.

- 1429. NAVNEET MOTORS (3908-39-02), B R T PLOT ,THANE (W) ,MAHARASHTRA - 400607 PH :9664496732 9167215178
- 1430. PARAMOUNT WHEELS PVT. LTD. (3911-39-01), OPP. PREMA LAXMAN SCHOLL. PANKERPADA, MIRAROAD(E), DIST: THANE - 401107 PH 420330AMAS(54)82/63
- 1431. PARAMOUNT WHEELS PVT. LTD. (3911-39-03), NATIONAL PLASTIC INDUSTRIES LIMITED, WESTERN EXPRESS HIGHWAY NO. 8 KASHIMIRA, NEAR KASHIMIRA POLICE STATION, OPP PETROL PUMP, DISTIT THANE - 401107 PH - 900149939301
- 1432. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-39-02), NEW SURVEY NO. 17/1/18, NEAR BLUE ROOF CLUB, VILLAGE - OWALE, GHODBUNDER ROAD, THANE (W). - 400615 PH :8104989847, 96536 88455.

TITWALA

1433. AHER AUTOPRIME (BYP2-BYP-01), SURVEY NO. 23/2, SHOP NO. 3, NEAR GOVELI, TITWALA ROAD, GHOTSAI, TITWALA, PIN-421301, MAHARASHTRA - 421301 PH 15R08334369

TURBHE

1434. SAI SERVICE (0504-9K-06), D 42, TTC INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 -400705 PH :022-268611111/8976999060.

ULHASNAGAR

1435. PRAKASH AUTO PVT. LTD. (3903-39-01), U NO-3,SHEET NO. 30,VITHALWADI STATION ROAD, ULHASNAGAR - 421003 PH:9987992127/9870453155.

URALI KANCHAN

1436. EXCELL AUTOVISTA PVT LTD (GKI1-GKI-01), GAT NO-244, VILLAGE-SORTAPWADI, TALUKA -HAVELI, URULI KANCHAN, DIST-PUNE, PIN-412201 - 412201 PH -8097459280

VADUJ

1437. CHOWGULE INDUSTRIES PVT. LTD. (F303-GQ-03), KALEVASTI, VADUJ DAHIWADI ROAD, VADUJ - 415506 PH :888886659.

VAIJAPUR

1438. PAGARIYA AUTO PVT. LTD. (BNR1-BNR-01), NEAR SUBHASH BUNGLOW, STATION ROAD, VAIJAPUR, AURANGABAD. - 423701 PH: 9922994237.

VASAI

1439. SAI SERVICE PRIVATE LIMITED (V901-V9-01), ANDRADESH BHAVAN, SURVEY #27 A,NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASTRA - 401202 PH -9167980080/01679800036/9594952211

1440. SAI SERVICE PRIVATE LIMITED (0504-V9-03) C/O PRASHANTI INVESTMENT LTD., NEAR GAODEVI TEMPLE, VILLAGE SATIVILI, DISTT. THANE - 401208 PH -9167980004/9167980084/9594950000.

eni

1441. MY CAR (PUNE) PVT. LTD. (05A4-05-01), A-751/2, MIDC TTC, TURBHE MAHAPE ROAD, PAWANE, NAVI MUMBAI - - 400 071 PH : 8104090693 3972902861 9326713481

VIRAR

1442. SAI SERVICE PRIVATE LIMITED (V901-PG-02), SURVEY NO.16, AGASHI ROAD, PADMAN NAGAR, VIRAR-WEST, DISTT. PALGHAR. - 401301 PH 9594952343/9167980036/9594952211.

VITA

1443. CHOWGULE INDUSTRIES PVT. LTD. (BSE1-BSE-01), S NO. 900, HISSA NO. 1,2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA – KHANAPUR, DISTRICT – SANGLI, MAHARASHTRA - 415311 PH :98888701070

WADA

1444. PARAMOUNT WHEELS PVT. LTD.
(BXD1-BXD-01), SURVEY NO.1337/1, WADA
BHIWANDI ROAD, VILLAGE GANDARE, POST
KONE, TALUKA WADA, DISTT. PALGHAR
(MAHARASHTRA) - 421303
PH: 3411933992.

WAGHOLI

1445. SAI SERVICE PRIVATE LIMITED (1901-AB-04), GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL-HAVELI, DIST- PUNE - 412207 PH :9923208313/992320822/19923208133.

WAI

1446. CHOWGULE INDUSTRIES PVT. LTD.
(BYC1-BYC-01), GAT NO. 407, A/P
SHENDURJANE, MIDC ROAD, NEAR HOTEL
GANDHARVA, OPP. DHOM LEFT CANAL, TAL –
WAI, DISTT. SATARA - 412803
PH. 3830808501

WALUJ

1447. PAGARIYA AUTO PVT. LTD. (2103-MC-03), E-16,WALUJ,AURANGABAD - 431001 PH:9860999466.

WARANANAGAR

1448. SAI SERVICE PRIVATE LIMITED (CRB1-CRB-01), GAT NO.:1122/A, KODOLI, TALUKA: PANHALA, DIST. KOLHAPUR - 416114 PH :9923204173

VARDHA

- 1449. SEVA AUTOMOTIVE LTD. (2002-AC-02), GOPURI CHOWK, OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001 PH: 07152-253545/253525.
- 1450. SEVA AUTOMOTIVE PVT. LTD. (2002-AC-05), PLOT NO. 177, WARDHA-NAGPUR HIGHWAY, AT. PAVNAR, TEHSIL – WARDHA, DIST-WARDH, PIN-442111, MAHARASHTRA - 442111 PH. 7720003444

WARUD

1451. ASPA BANDSONS AUTO PVT. LTD. (F201-UG-04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906 PH. 7248925687.

WASHIN

1452. ASPA BANDSONS AUTO PVT. LTD. (F201-9D-02), NEAR RAILWAY CROSSING,HIGOLI ROAD,WASHIM, - 444505 PH - 9922500881, 0146101534

YAVATMAL

1453. HIMALAYA CARS (4M01-4M-01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001 PH :07232-249991.

YEOLA

1454. SEVA AUTOMOTIVES PVT LTD (BST1-BST-01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANNAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA – YEOLA, DISTRICT – NASHIK, MAHARASHTARA. - 423401 PH. 9130033944.

'EWAT

1455. MAHALAXMI AUTOMOTIVES PVT. LTD.
(AZA1-AZA-01), SOLAPUR PUNE NATIONAL
HIGHWAY, SAHAJAPUR, YEWAT, TALUKA:
DAUND, DISTT: PUNE (MAHARASHTRA). - 412202
PH. 3308818946.

MANIPUR

BISHNUPUR

1456. EASTERN MOTORS (CSA1-CSA-01), BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR DISTT. MANIPUR. - 795126 PH:8415945626.

CHANDEL

1457. EASTERN MOTORS (CSB1-CSB-01), KAKCHING LAMKHAI, AH1 (INDO BURMA ROAD), CHANDEL (MANIPUR) - 795103 PH :8415945626

CHURACHANDPUR

1458. EASTERN MOTORS (BBE1-BBE-01), HMUIA VENG,TEDDIM ROAD, CHURACHANDPUR, MANIPUR - 795128 PH : 03874235969, 9862555472.

IMPHAL

- 1459. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795 001 PH:8415945626.
- 1460. EASTERN MOTORS (7401-74-02), NH,39, CHINGMEIRONG, WEST, IMPHAL. - 795010 PH:8415945626.
- 1461. SAMADON ENTERPRISE (7402-74-01), 82 GHARI MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795 140 PH : 7005987123.

SENAPATI

1462. EASTERN MOTORS (CNN1-CNN-01), DIST. -COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI, SENAPATI, MANIPUR. - 795 106 PH :8415945695

THOUBAL

1463. EASTERN MOTORS (BJL1-BJL-01), THOUBAL ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138 PH :9862662225.

UKHRUL

1464. SAMADON ENTERPRISE (SCK1-SCK-01), KAMPHASOM, UKHRUL, MANIPUR - 795142 PH:9774216305.

MEGHALAYA

BHOIRYMBONG

1465. RANI MOTORS (CHP1-CHP-01), VILLAGE – UMROI MADAN, DISTRICT – RI BHOI, MEGHALAYA. - 793103 PH :9774478281.

JOWAI

1466. RANI MOTORS (3101-31-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALLAYA - 793150 PH - 7085849825

KHLIEHRIAT

1467. BANALARI WORLD CARS (8502-PZ-03), JOWAI-SICHAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150 PH : 7005757760/7005569550.

MAWKYRWAT

1468. RANI MOTORS (CGR1-CGR-01), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGALAYA -793114 PH 9856005544

MAWNGAP

1469. BANALARI WORLD CARS (CBK1-CBK-01), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST.-EAST KHASI HILLS, MEGHALAYA. - 793121 PH.7005757760/7005569550.

MYLLIEM

1470. BANALARI WORLD CARS (CSK1-CSK-01), MADANIING SYIEM, MYLLIEM, SHILLONG CHERRAPUNJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009 PH:7005757760/7005569550.

NONGPOH

1471. RANI MOTORS (8501-TN-05), NEAR D.T.O.
OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT.
- 793102
PH - 9774478281

NONGSTOIN

1472. RANI MOTORS (8501-0P-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119 PH - 9856005544

SHILLONG

- 1473. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014 PH :9862099400.
- 1474. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021 PH :8014734780
- 1475. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017 PH :7005757760/7005569550.

TURA

1476. RANI MOTORS (CLF1-CLF-01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101 PH:7005563791.

UMSAW

1477. BANALARI WORLD CARS (CHZ1-CHZ-01), UMSAWKHWAN RAID MAWBUH, MYLLIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. -793123 PH:7005757760/7005569550.

MIZORAM

AIZAWL

1478. G.I.G. MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001 PH :8974559065.

MΡ

NAINPUR

1479. STANDARD AUTO (SEZ1-SEZ-01), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJJA SHOW ROOM, NAINPUR, DISST MANDLA, MADHYA PRADESH -481776. -481776 PH :7771003374.

NAGALAND

DIMAPUR

1480. PROGRESSIVE MOTORS (3201-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112 PH:7005254089.

КОНІМА

1481. SEYIE AUTO (4N02-4N-01), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001 PH:7005867051.

MOKOKCHUNG

1482. PROGRESSIVE MOTORS (CGL1-CGL-01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601 PH -87877395534

WOKHA

1483. PROGRESSIVE MOTORS (SFH1-SFH-01), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111 PH :9774070707.

ODISHA

ANANDAPUR

1484. JYOTE MOTORS PVT LTD (CIU2-CIU-01), KHATA NO. 246/407, PLOT NO. 76, P.S. – GHASIPURA, MOUZA – SUDUSUDIA, DISTRICT – KEONJHAR, ANANDPUR, ODISHA . - 758021 PH - 738/1028795

ANGUL

1485. ODYSSEY MOTORS PVT LTD (W101-W1-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145 PH :9439817308.

BALASORE

1486. JYOTE MOTORS (BALASORE) PVT. LTD (L501-L5-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019 PH:7381072800.

BARGARH

1487. ODYSSEY MOTORS PVT LTD (D401-SJ-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028 PH :8908944206

BARIPADA

1488. JYOTE MOTORS (BALASORE) PVT. LTD (L501-RQ-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001 PH:7381072624.

BERHAMPUR

- 1489. SKY AUTOMOBILES (E203-E2-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002 PH : 7381266000.
- 1490. SKY AUTOMOBILES (E203-E2-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE— KONISI, BERHAMPORE, GANJAM, ODISHA: -761008 PH:7381266000.

BHADRAK

1491. JYOTE MOTORS (BALASORE) PVT. LTD (IZ01-IZ-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK, ODISHA - 756101 PH -9776345311

BHAWANIPATNA

1492. LEGEND CARS PVT. LTD. (SW01-TB-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001 PH :9937198684.

BHUBANESHWAR (NAYAPALLI)

1493. JYOTE MOTORS PVT LTD (0405-04-01), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-7510 03 - 751003 PH - 7381028525

BHUBANESWAR

1494. NARAYANI MOTORS PVT. LTD. (0403-04-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR -751006 PH 9583022031

PH:9583022031.

1495. JYOTE MOTORS PVT LTD (0402-04-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003
PH :7064493302.
1496. SKY ALITOMORILES (0404-04-01) PLOT NO.

1496. SKY AUTOMOBILES (0404-04-01), PLOT NO. -435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022 PH:8117829611.

1497. NARAYANI MOTORS PVT. LTD. (0403-04-02), PLOT NO 56 AND 57,RASULGARH, BHUBANESHWAR, ODISHA - 751010 PH -958302046

1498. JYOTE MOTORS PVT LTD (0402-04-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010 PH: 7978910223. 1499. SKY AUTOMOBILES (0404-04-02), KHATA NO. 457/675, PLOT NO. 543, 756, 789 AND 546, SRIVIHAR, INFRONT OF IOCL OFFICE, P.S.-CHADRASHEKARPUR, BHUBANESHWAR, ODISHA. - 751 024
PH :7440011604

BOLANGIR

1500. ODYSSEY MOTORS PVT LTD (D401-MW-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001 PH:8895418122.

CHANDIKHOLE

1501. SKY AUTOMOBILES (BXL1-BXL-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA, - 755044 PH:9776645798.

CUTTACK

- 1502. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011 PH 9776645798
- 1503. TUSHI MOTORS PVT. LTD. (6702-67-01), PLOT NO. C-14, PLOT NO.C-13, INDUSTRIAL ESTATE KHAPURIA, TAHASIL - CUTTACK SADAR CUTTACK DISTRICT, BHUBANESWAR - 753001 PH 9602012245

DEOGARH

1504. ORBIT MOTORS PVT. LTD. (CBB1-CBB-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA -768108 PH :9437607865.

DHENKENAL

1505. SKY AUTOMOBILES (6701-4P-04), PLOT NO-136/1103, KATHAGARA, NEARASSAM OIL, NH-42, DHENKANAL. - 759001 PH:7440025919.

JAGATSINGHPUR

1506. NARAYANI MOTORS PVT. LTD. (CFM1-CFM-01), KHATTA NO. 827/221 8 827/222, PLOT NO. 1197 8 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSINGHPUR, ODISHA -754103 PH. 9556511213.

JAJPUR

1507. SKY AUTOMOBILES (6701-RZ-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019 PH :9583011010.

JALESWAR

1508. JYOTE MOTORS (BALASORE) PVT. LTD (BXP1-BXP-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.-BALASORE, ODISHA. - 756032 PH :7381072600

JEYPORE

1509. LEGEND CARS PVT. LTD. (SW01-SW-03), SOURAGUDA, JEYPORE, DISTT-KORAPUT, ORISS A, INDIA - 764001 PH: 9437575188.

JHARSUGUDA

1510. ODYSSEY MOTORS PVT LTD (BJU1-BJU-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201 PH :9439548823.

KEONJHAR

1511. JYOTE MOTORS PVT LTD (7U01-7U-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001 PH - 7064499047

NAYAGARH

1512. JYOTE MOTORS PVT LTD (0402-DC-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH -752069 PH :7064499048.

NIMPARA

1513. NARAYANI MOTORS PVT. LTD. (CFL1-CFL-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA. - 752106 PH : 7381003622

PALLAHARA

1514. ODYSSEY MOTORS PVT LTD (CHV1-CHV-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119 PH - 943981730R

PARADEEP

1515. NARAYANI MOTORS PVT. LTD. (OE01-0E-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. -754141 PH 9583022020.

PARLAKHEMUNDI

1516. SKY AUTOMOBILES (CLG1-CLG-01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211 PH: 9776999977.

PURI

1517. NARAYANI MOTORS PVT. LTD. (4Q01-4Q-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA, PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002 PH.9583022220.

RAIRANGPUR

1518. JYOTE MOTORS (BALASORE) PVT. LTD (CES1-CES-01), PLOT NO. 1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046 PH: 7064499936.

ROURKEI A

1519. ORBIT MOTORS PVT. LTD. (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041 PH:9437061040.

AMBALPUR

1520. ODYSSEY MOTORS PVT LTD (D401-D4-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH - 7381083571

SUBARNAPUR

1521. ODYSSEY MOTORS PVT LTD (BUK1-BUK-01), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNPUR, ODISHA - 767017 PH: 8895418122.

SUNDERGARH

1522. ORBIT MOTORS PVT. LTD. (BWJ1-BWJ-01), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH :8243354447

UDALA

1523. JYOTE MOTORS (BALASORE) PVT. LTD (CHW1-CHW-01), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA. - 757041 PH:8249877935

ORISSA

BHUBANESWAR

1524. NARAYANI (0403-04-03), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUABNESHWAR - 751025 PH :9583001877.

KENDRAPARA

1525. JYOTE MOTORS (SFI1-SFI-01), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. -754208 PH:9776615001.

PADAMPUR

1526. ODYSSEY MOTORS (SFB1-SFB-01), M/S ODYSSEY MOTORS, CHARPALLI,PADAMPUR, NEAR REGENCY HOTEL,DISTRICT:BARGARH, ORISSA - 770039 PH:9439314464.

PUDUCHERRY

KARAIKAL

1527. SHENBAKA CARS PVT. LTD. (CCF1-CCF-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAI. NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAI. MUNICIPALITY, KARAIKAL. - 609602 PH 14388-273/80/112

MADAGADIPET

1528. SHENBAKA CARS PVT. LTD (CUD1-CUD-01), SURVEY NO. 129/4/A/2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605 107 PH -8220046178

PONDICHERRY

1529. SHENBAKA CARS PRIVATE LIMITED (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY -605010 PH :0413-2293391/92/93.

PUNJAB

1530. TARA AUTOMOBILES (H501-H5-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB -152116 PH :9876047847.

ADAMPUR

ABOHAR

1531. LOVELY AUTOS (CHA1-CHA-01), KHASRA NO.10/7/1, JALANDHAR-HOSHIARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102 PH :8288650775

AJNALA

1532. SWANI MOTORS PVT. LTD. (CBP1-CBP-01), KHASRA NO. 71, AJNALA-AMRITSAR RODA, VILLAGE- BHARKA TARA SINGH, TEHSIL -AJNALA, DISTRICT - AMRITSAR, PUNJAB. -143102 PH: 8872001731.

AMRITSAR

- 1533. SWANI MOTORS LTD. (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001 PH :9877482175, 8872000000.
- 1534. JAYCEE MOTORS (1702-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH :9780038335.
- 1535. RISHABH FOURWHEELS PVT. LTD. (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH :9914841577.

ANANADPUR SAHIB

1536. CM AUTOSALES PVT. LTD. (OF01-OF-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB, TEHSIL ANANDPUR SAHIB, DISTT. ROPAR, PUNJAB - 140123 PH: 9915022897.

APRA

1537. LOVELY AUTOS (CVW1-CVW-01), SAMRAI CHOWK PHILLAUR ROAD, VILLAGE - APRA, TEHSIL - PHILLAUR, DIST.-JALANDHAR, STATE -PUNJAB. - 144416 PH :9915020515.

AUR

1538. LOVELY AUTOS (CVY1-CVY-01), KHATUNI NO.
479/588, KHASRA NO. 27/20/04(2-18), 21/2(2-10),
VILLAGE - AUR, TEHSIL - NAWASHAR, DIST.-SBS
NAGAR, STATE - PUNJAB. - 144417
PH :9915020510.

BAGHA PURANA

1539. REMIRA MOTORS PVT. LTD. (BAH2-BAH-01), BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH -7087025000

BALACHAUR

1540. LOVELY AUTOS (XV01-XV-01), NEAR MCDONALD — GHUGGI JINOCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHARI) - 144521 PH :9878427910.

BANGA

1541. LOVELY AUTOS (3503-MS-03), NAWASEHAR-JALANDHAR ROAD, BANGA -144505 PH :9915028625.

BANUR

1542. TRICITY AUTOS PVT. LTD. (BRT1-BRT-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB -140601 PH :998882330.

BARNALA

1543. MAX AUTOMOBILES (4S02-4S-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001 PH :285022, 9216529220.

BATALA

1544. PATHANKOT VEHICLEADES PVT. LTD. (A701-V5-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505 PH :9417900850 ,9417900918.

BEGOWAL

1545. MARWAHA AUTOS (BHF2-BHF-01), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGGWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH. 979166004.

BHADSON

1546. HIRA AUTOMOBILES LTD (BAG1-BAG-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON -147202 PH: 9217048236, 9217048250.

BHAGTA BHAI KA

1547. TARA AUTOMOBILES (BHG1-BHG-01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT - BHATINDA. - 151206 PH :8437030686

BHATINDA

1548. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001 PH:0164-2235349, 50.

BHIKHIWIND

1549. RISHABH FOURWHEELS PVT. LTD. (BPK1-BPK-01), KHASRA NO. 67/3/2, 4/1, 7/2, 8/1, 8/2, PIND BHIKHIWIND, TEHSIL – PATTI, DISTRICT – TARN TARAN, PUNJAB. - 143303 PH :9914708577.

BHOGPUR

1550. LOVELY AUTOS (BRU2-BRU-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201 PH :9872032006

BHULATH

1551. LOVELY AUTOS (CHB1-CHB-01), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT – KAPURTHALA, PUNJAB. - 144622 PH :9876541065, 8288050777.

CHUNNI KALAN

1552. HOSHIARPUR AUTOMOBILES (CFG1-CFG-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307 PH: 248005. 9815131766.

DASUYA

1553. HOSHIARPUR AUTOMOBILES (H402-8D-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA -144205 PH :9815131766. 9872312371.

DERABASSI

1554. AUTOPACE NETWORK PVT LTD (0705-AW-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507 PH :9815011669

DEVIGARH

1555. HIRA AUTOMOBILES LTD (OG01-OG-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111 PH:8872034118. 9217048250.

DORAHA

1556. GULZAR MOTORS (QC02-QC-01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHA, DISTT. LUDHIANA, PUNJAB. - 141421 PH :9814191122

FARIDKOT

1557. MAPSKO AUTO INDIA PVT. LTD. (4U02-4U-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204 PH -01639, 294001 7347000520

FATEHGARH CHURIAN

1558. PATHANKOT VEHICLEADES PVT. LTD. (BAO1-BAO-01), KHASRA NO. 17 R. DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSI.-BATALA, DIST.-GURDASPUR, STATE - PUNJAB. -143 602 PH: 9417900850, 9875930180.

FAZILKA

1559. TARA AUTOMOBILES (H501-4V-03), NH-10, NEAR SARVHITKARI BAL VIDYA MANDIR, FAZILKA -152116 PH :9876047847.

FEROZEPUR

1560. BABA AUTOS (7C01-7C-01), MOGA ROAD, FEROZEPUR CANTT - 152002 PH :8872013211

GARHSHANKAR

1561. HOSHIARPUR AUTOMOBILES (H402-V4-02), OPP COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527 PH :9815131766. 9781543131.

GHANAUR

1562. HIRA AUTOWORLD LLP (CVX2-CVX-01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401
PH :9217048437.

GHOMAN

1563. PATHANKOT VEHICLEADES PVT. LTD.
(CUL1-CUL-01), KHEWAT NO. 36, KHATAUNI NO.
122, KHASRA NO. 11/25 (7-18), VILLAGE BALRAMPUR ADDA, KHASBA - GHOMAN. 143514
PH. 8054500130

GIDDARBAHA

1564. HIRA AUTOMOBILES LTD (AUA1-AUA-01), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBAHA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101 PH :231510. 9217088250.

GORAYA

1565. LOVELY AUTOS (BJR1-BJR-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH :9417804049.

GURDASPUR

1566. PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521 PH:9417900870, 9878050710.

1567. PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH -0417900870

HOSHIARPUR

1568. HOSHIARPUR AUTOMOBILES (H402-H4-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001 PH :9815131766, 9878632537.

JAGRAON

1569. SANDHU AUTOMOBILES (6206-LT-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :8437025969.

JAITU

1570. MAPSKO AUTO INDIA PVT. LTD. (YX02-YX-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT - FARIDKOT. - 151202 PH :7347000520.

JALALABAD

1571. TARA AUTOMOBILES (H501-8E-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH '9876047847

JALANDHAR

1572. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :9915020515.

1573. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (3506-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH:9779166004. 1574. LOVELY AUTOS (3505-35-01), KHASRA NO. 24/20/4, B D ENCLAVE, VILLAGE - JALANDHAR, DIST.-JALANDHAR, PUNJAB. - 144001 PH -9876044001 9915020515

JANDIALA GURU

1575. BABA AUTOS (7C01-GL-03), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU -143115 PH :8872013029.

.IANDIAI A MAN.IKI

1576. LOVELY AUTOS (BJS1-BJS-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE – JANDIALA MANJKI, TEHSIL – NOORMAHAL, DISTRICT – JALANDHAR, PUNJAB. - 144033 PH. 7087439797.

KAHNUWAN

1577. PATHANKOT VEHICLEADES PVT. LTD. (CGM1-CGM-01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. -143528 PH :3288033311

KAPURTHALA

1578. MARWAHA AUTOS (A UNIT OF INDERLIT MARWAHA AUTOS PVT. LTD.) (4202-42-01), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602 PH :9779166004.

KATHU NANGAL

1579. JAYCEE MOTORS (CSP1-CSP-01), KHASRA NO. 12/20/2, 21/1 KHATA NO. 212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502 PH -9780038335.

KHANNA

1580. HOSHIARPUR AUTOMOBILES (N302-N3-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. - 141401
PH 9888716961

KHARAR

1581. CM AUTOSALES PVT. LTD. (7K01-JH-03), NH-95, MORINDA ROAD,KHANPUR, KHARAR. DIST. MOHALI - 140301 PH: 9915022878.

KILANWALI

1582. HIRA AUTOMOBILES LTD (BFV1-BFV-01), GT ROAD (NH NO. 09), NEAR GURU NANAK COLLEGE, KILANWALI, TEHSIL – MALOUT, DISTRICT – MUKTSAR SAHIB. - 152107 PH :8872034131.

KOTKAPURA

1583. MAPSKO AUTO INDIA PVT. LTD. (BIS2-BIS-01). MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT – FARIDKOT - 151204 PH. 7247000518

LALRU

1584. AUTOPACE NETWORK PVT LTD (BRJ1-BRJ-01), VILLAGE – LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501 PH: 9815011669.

LUDHIANA

1585. GULZAR MOTORS LTD. (6204-62-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA -141003

PH:9814160099

1586. SANDHU AUTOMOBILES (6206-62-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA -141203 PH :9815600095.

1587. LIBRA AUTO CAR CO. LTD (6207-62-01), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020 PH :0160-2512701. 03.

1588. LIBRA AUTO CAR CO. LTD (6207-62-02), G.T ROAD, NEAR AIRPORT, LUDHIANA. - 141020 PH :0160-25035130.

1589. LOVELY AUTO (6209-62-01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA – 141001 - 141001 PH :9875928451. 9875928450.

1590. LOVELY AUTOS (6209-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB - 141003 PH :9815069814.

1591. LOVELY AUTOS (6209-62-03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001 PH - 9815069814

MACHIWARA

1592. HOSHIARPUR AUTOMOBILES (9703-97-01), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH :9875900147.

MAHILPUR

1593. HOSHIARPUR AUTOMOBILES (H402-DD-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105 PH -9014720142

MAJITHA

1594. RISHABH FOURWHEELS PVT. LTD. (CDR1-CDR-01), PLOT NO.130, OPP. DANA MANDI, AMRITSAR ROAD, MAJITHA. - 143601 PH :9914841577.

MALERKOTLA

1595. MAX AUTOMOBILES (CCI2-CCI-01), MALERKOTIA-LUDHIANA MAIN ROAD, VILLAGE -BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023 PH-9814403131 9056903131

MALOUT

1596. HIRA AUTOMOBILES LTD (6302-LE-05), TINKONI CHOWK, NEAR LIC BUILDING, MALOUT - 152107 PH :299524. 264724.9988417000.

MANDI GOBINDGARH

1597. HOSHIARPUR AUTOMOBILES (U903-U9-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301 PH :9815131766, 9914119292.

MANSA

1598. TARA AUTOMOBILES (7002-TL-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA, PUNJAB -151505 PH : 01652-216042.

MEHTA

1599. RISHAB (CDS1-CDS-01), KHASRA NO. 343, BABA BAKALA ROAD, VILLAGE MEHTA CHOW, TEHSIL: BABA BAKALA, DIST AMRITSAR, PUNJAB -143114

PH:7760315710.

1600. REMIRA MOTORS PVT. LTD. (H602-H6-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001 PH : 7087025402.

MOHALI

1601. NAVDESH AUTOS LLP (L105-L1-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI -160059

PH :8872016453

1602. CM AUTOSALES PVT. LTD. (0706-L1-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI – PUNJAB - 140110 PH 8284800507

MORINDA

1603. CM AUTOSALES PVT. LTD. (BHH1-BHH-01), KHASRA NO. 1092, CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140 101 PH: 9915022811.

MUKERIAN

1604. HOSHIARPUR AUTOMOBILES (IP01-IP-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN -144211 PH:9815131766, 8437919900.

MUKTSAR

1605. HIRA AUTOMOBILES LTD (6302-J8-03), BHAI COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB -152026

PH :9217048250, 9056900042. MULLANPUR

1606. SANDHU AUTOMOBILES (YY01-YY-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101 PH :8437025969.

MULLANPUR GARIBDASS

1607. NAVDESH AUTOS LLP (CVZ2-CVZ-01), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE - PUNJAB. -140901

PH:8872004676.

1608. HIRA AUTOMOBILES LTD (6302-UF-06), RADHA SWAMI ROAD, NABHA - 147201 PH -9317000004 9217048750

NAKODAR

ΝΔΒΗΔ

1609. LOVELY AUTOS (3503-5B-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040 PH :9915028603.

NANGAL

1610. CM AUTOSALES PVT. LTD. (7K01-8F-02), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB - 140126 PH :9592916811.

NAWANSHAHR

1611. LOVELY AUTOS (3503-J7-02), NAWANSHAHR CHANDIGARH ROAD, VILL- LANGROHA, DISTT:-NAWANSHAHR, PUNJAB - 144514 PH - 991502882

NIHAL SINGH WALA

1612. REMIRA MOTORS PVT LTD (QB02-QB-01). BARNALA ROAD, NEAR DEAR BABA SEWA DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA. - 142 055 PH.7067025009.

PATHANKOT

1613. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-01), NEAR MAMOON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001 PH :8264105000, 9417900883.

1614. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-04), NEAR A. B. COLLEGE, PATAHANKOT - 145001 PH:9417900828, 9417900842.

PATIALA

1615. HIRA AUTOMOBILES LTD (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001 PH :2360131, 2360562 9217048250

- 1616. HIRA AUTOMOBILES LTD (6302-63-04), C-20 & C-45 FOCAL POINT PATIALA PUNJAB - 147001 PH:2232377.9217048234.9217048250.
- 1617. HIRA AUTOMOBII ES LTD (6302-63-07), D-1A. INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). -147001 PH -2232205 2232206 02170/8250
- 1618 ATELIER AUTOMOBILES PVT LTD (6303-63-01) VILLAGE MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR CASABA RESORT, PATIALA -147001
- PH:7527000106, 7527000111.

1619. HIRA ALITOMORII ES LTD (6302-V3-02). NARWANA ROAD PATRAN PLINIAR - 147105 PH -244445 245788 9217048250

PATTI

1620. JAYCEE MOTORS (BQA1-BQA-01), KHASRA NO. 64/19/2/1 KA 16/49 & KHASRA NO. 64/20 KA 29/94. NEAR RADHA SWAMI, TARN TARAN ROAD. VILLAGE - PATTI, DISTT.-TARN TARAN, PUNJAB. -PH -9780038335

PHAGWARA

1621. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT, LTD.) (5C02-5C-01). PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH:9779166004.

1622. LOVELY AUTO (XU01-XU-01), OLD NAWANSHAHR ROAD CIVIL LINE, PHILLAUR, DISTRICT JAI ANDHAR - 144410 PH -9815069814

RAIKOT

1623. GULZAR MOTORS PVT LTD (XT02-XT-01), BARNALA BY PASS ROAD, RAIKOT - 141109

RAJPURA

1624 HIRA ALITOWORLD LLP (HK02-HK-01) VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA -140401

PH:244881-84.9217048437.9217048250. RAMPURA PHUL

1625. TARA AUTOMOBILES (XR01-XR-01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103 PH:01651-266643.

RAYYA

1626. RISHABH FOURWHEELS PVT. LTD. (CAK1-CAK-01), NH-1, GT ROAD RAYYA, TEHSIL - BABA BAKALA, DISTRICT - AMRITSAR. -143112 PH:9914708577.

ROPAR

1627. CM AUTOSALES PVT. LTD. (7K01-7K-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH:9915022802

SAMANA

1628 HIRA ALITOMORII ES LTD (RELI1-RELLO1), KEWAT NO 948/950 KHATLINI NO 1427 KHASRA NO 101/27(4-7), PATIALA SAMANA ROAD, SAMANA DIST.-PATIALA, STATE PUNJAB. - 147101 PH:9217048236.

SANGRUR

1629. MAX AUTOMOBILES (G402-G4-01), DHURI ROAD. SANGRUR - 148024 PH:01672-239627

SHAHKOT

1630. LOVELY AUTOS (BHT1-BHT-01), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT - JALANDHAR, PUNJAB. - 144702 PH:8437936811.

SIRHIND

1631. HOSHIARPUR AUTOMORII ES (TE03-TE-01). KHEWAT KHATONI NO. 802/1049 & 821/1070 KHEWAT KHAS NO. 43/1/2/1 (1-0), BESIDE SBI BANK BASSI ROAD SIRHIND TEHSII AND DISTRICT - FATEHGARH SAHIB - 140406 PH:9815131766.7527082471.

SULTANPUR LODHI

1632. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (ZY02-ZY-01). NEAR TALWADI BRIDGE. TALWANDI ROAD. SULTANPUR LODHI, DISTRICT -KAPURTHALA -144626 PH -9779166004

TALWANDI BHAI

1633. BABA AUTOS (GMF1-GMF-01), FEROZEPUR ROAD, NEAR FUNISLAND, TALWANDI BHAI, DISTT. FEROZEPUR - 142050 PH:8872013002.

TAI WANDI SABO

1634. TARA AUTOMOBILES (ON01-ON-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL. RAMAMANDI, TALWANDI SABO, BHATINDA -1551302

PH:9646691047, 8437008666. TALWARA

1635. HOSHIARPUR AUTOMOBILES (H402-LR-07), DAM ROAD, NEAR KALI MATA MANDIR. VILLAGE-NAGAR, TALWARA, PUNJAB - 144216 PH:9815131766.9781842244.

TANDA

1636. HOSHIARPUR AUTOMOBILES (H402-DE-06), VILL PULPUKHATA, MIANI ROAD, TANDA - 144203 PH 9815131766 8437430400

TARAGARH

1637. PATHANKOT VEHICLEADES PVT. LTD. (BVC1-BVC-01), VILLAGE - RAHIMPUR VPO-TARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534 PH:9988639963.

TARN TARAN

1638. JAYCEE MOTORS (BLP1-BLP-01), VILLAGE -KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401 PH:9780038039.

ZIRA

1639. BABA AUTOS (7C01-GK-02), FEROZEPUR ROAD. 7IRA - 142047 PH:8872013230

7IRAKPUR

1640. TRICITY AUTOS (9M01-9M-01), PATIALA HIGHWAY, VILLAGE - NABHA, ZIRAKPIR, PUNJAB PH -9988882330

RAJASTHAN

ABU ROAD

1641. NAVNEET MOTORS (OQ01-OQ-01), PLOT NO. E-26. RIICO AMBAJI INDUSTRIAL AREA. PALANPUR HIGHWAY, ABU ROAD DISTT, SIROHI - 307026 PH:7665000644

ACHROL

1642. KTL AUTOMOBILE PVT. LTD. (GKD1-GKD-01), #REF! - 303002 PH:7412077022.

- 1643. A.IMFR AUTO AGENCIES PVT, LTD, (B201-B2-01). SRINAGAR ROAD.AJMER (RAJASTHAN) - 305001 PH -9314955201
- 1644. RELAN MOTORS (B203-B2-01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001
- PH -95876 87000 84400 41027 1645. RELAN MOTORS (B203-B2-02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001 PH:95876 87000, 87400 16329.
- 1646. AJMER AUTO AGENCIES PVT. LTD. (B201-B2-05) KHASRA NO.343/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER. - 305001 PH:9314955201.

ALWAR

1647. MG MOTORS (F901-F9-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO. BOARDING, ALWAR - 301001 PH 9001795520

1648 MG MOTORS (F901-F9-02), KHASRA NO 803/198 BHUGORE TIRAHA, NEAR ALWAR PUBLIC SCHOOL JAIPUR ROAD, ALWAR - 301001 PH -0001705520

ANOOPGARH

1649. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BFE1-BFE-01), PLOT NO, AMEDICAR CHARAHARA.RAILWAY STATION ROAD ,ANUPGARH (ANOOPGARH),DISTT SRI GANGANAGAR . - 335701 PH -9982638516

ANTA

1650. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT, LTD.) (CTG2-CTG-01). KOTA-BARAN ROAD, ANTAH, DIST.-BARAN. PH:9413379001.

BAGRU

1651. PREM MOTORS PVT. LTD. (US02-US-01), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPLIR - 303007 PH:01414711118.8058411181.

BALESAR

1652. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CWO1-CWO-01), KHASRA NO. 2167 JODHPUR JAISALMER ROAD, VILL:- BALESAR SATTA, TEH:- BALESAR , DIST:- JODHPUR (RAJ.) - 342203 PH -7412087344

BALOTRA

1653. LMJ SERVICES LTD. (6502-9G-05), JODHPUR BALOTRA ROAD, BALOTRA, RAJASTHAN - 344022 PH:8005898360.

BANSUR

1654. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (BQP1-BQP-01). KOTPUTLI ROAD, NEAR SUBHASH CHOWK BANSUR, RAJASTHAN - 301402 PH :8875005116

BANSWARA

1655. NAVNEET MOTORS (X903-X9-01), NEAR J.C. MILL, OPPOSITE AKASHWANI, DAHOD ROAD,BANSWARA - 327001 PH:02962-254546.257596.7665000879.

BARAN

1656. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-PM-03), BESIDE OJHA METAL, ATRU ROAD, BARAN -325205 PH:8929854244

BARMER

- 1657. LMJ SERVICES LTD. (6502-SH-06), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001 PH:8005898360.
- 1658. LMJ SERVICES LTD. (SH01-SH-01), NH# 68, OPP. SADAR THANA - 344001 PH :8005898360.

BASSI

1659. PREM MOTORS PVT. LTD. (VF02-VF-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301 PH:01414711118,8058794151.

RFAWAR

1660. RELAN MOTORS (FL03-FL-01), PLOT NO 1, INDIRA GANDHI UDYOGPURI , AJMER ROAD BEAWAR, RAJASTHAN . - 305202 PH -985888700

BEGL

1661. BHATIA & CO (BTD1-BTD-01), BHATIA & CO. (A UNIT OF BHATIA CORPORATION PVT LTD),IN FRONT OF GURIKUL, CHITTOR ROAD, BEGUN, TEHSIL – BEGUN, DISTRICT CHITTORGARH, 312023 - 312023' PH 9837325267.

BEHROR

1662. MG MOTORS (FQ01-FQ-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701 PH:9001795520.

RHADRA

1663. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIF1-BIF-01), CHAK NUMBER-8,BARANI, NEAR HISAR BYEPASS BHADRA -BALSAMAND ROAD,BHADRA. - 335501 PH :9166712222. 9413311745.

BHARATPUR

1664. TM MOTORS PVT. LTD. (5J01-5J-01), BRIJ VIHAR COLONY, MADARPUR ROAD, BHARATPUR, RAJASTHAN - 321001 PH: 9251423392.

BHAWANI MANDI

1665. SUWALKA MOTORS PVT LTD (SDB1-SDB-01), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI, JHALAWAR 326502. 326502 PH 9414242256.

BHILWARA

1666. LOHIA AUTOMOBILES (E301-E3-01), AJMER ROAD,NEAR OCTROI POST,BHILWARA - 311001 PH :7568378555,9462979233.

1667. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (E302-E3-01), CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001 PH :01482-267096,9358130064, 9358130066.

1668. LOHIA AUTOMOBILES (E301-E3-03), PLOT NO. H-11, EVERGREEN TEXTILE PARK, RIICO INDUSTRIAL AREA, PUR ROAD, BHILWARA. -311001 PH:9667187847.

BHINDER

1669. TECHNOY MOTORS INDIA PVT. LTD. (CBS1-CBS-01), NEAR RAILWAY STATION, SALUMBAR CHOURAHA, BHINDER -313603 PH 8306111237

BHINMAL

1670. SHRI KRISHNA AUTOSALES PVT LTD (CQN1-CQN-01), KHASRA NO. 2281, KARADA CROSSING, BHINMAL, DISTRICT - JALORE, RAJASTHAN. PH :9610242790.

RHIWADI

- 1671. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-01), OPP. INDAG RUBBER,MAIN ROAD, BHIWADI - 301019 PH 92/14704296 8875005116
- 1672. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-02), F-458-C,RIICO,INDUSTRIAL AREA,BHIWADI -301019
- PH :9214794326,8875005116.

 1673. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-04), KHASRA NO. 656(431, ALWAR ROAD, BHIWADI. 301019 PH :9214794326,8875005116.

BIJAYNAGAR

1674. AJMER AUTO AGENCIES PVT LTD (GLF1-GLF-01), KHASRA NO 39, AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT - AJMER, RAJASTHAN - 305624 PH: 8890902472.

BIJOLIA

1675. LOHIA AUTOMOBILES (E301-UA-02), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTOR-BIJOLIA HIGHWAY, BIJOLIA, DIST. -BHILWARA - 311602 PH:7568378555,7230094157.

BIKANER

1676. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-01), OPP. URMUL DAIRY PLANT,GANGANAGAR ROAD,BIKANER - 334004 PH:1512253984,9414138511.

1677. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-04), JAIPUR BYE PASS, BIKANER - 334004

PH :1512230384,8875010507.

1678. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-05), OPP. AVYYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003 PH:7014063193.9413311949.

1679. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES) (7102-71-01), KHASRA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. - 334001 PH:8929834417.

BILARA

1680. LMJ SERVICES LTD. (BZB1-BZB-01), BANGANGA MOD, JODHPUR ROAD, BILARA , RAJASTHAN -342602

PH:8104698935.

1681. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-EF-02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSAITE ICICI ATM, BUNDI - 323001 PH :8929853245.

CHAKSU

1682. K P AUTOMOTIVES PVT LTD (1104-JM-03), TONK ROAD, CHAKSU - 303901 PH:0141-4071111, 4071101,8696934973.

CHIRAWA

1683. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SY02-SY-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA-333026 PH-01596-217163 7230081668

CHITTORGARH

1684. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (K901-K9-01), PLOT NO. 1001/1-1002/1, NIMBAHERA ROAD, CHITTORGARH - 312001 PH: 01472 240999,9549277861.

HURU

1685. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (MD03-MD-01), NEAR DTO OFFICE, JAIPUR ROAD, CHURU - 331001 PH -8696543884

DANTA RAMGARH

1686. JAMU AUTOMOBILES PVT LTD (CTQ1-CTQ-01), KHASRA NO. 1016/256, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR. -332703 PH 9116816905

DAUSA

1687. VIPUL MOTORS PVT. LTD. (1102-FM-03), AGRA JAIPUR ROAD, DAUSA - 303303 PH:9672211333.

DEGANA

1688. SHRI MANGALAM (SDJ1-SDJ-01), PLOT NUMBER -189, NEAR NAGAUR RAILWAY STATION ROAD, DEGANA - 341503 PH :7230055955.

DEOLI

1689. K P AUTOMOTIVES PVT LTD (2001-20-01), KOTA-JAIPUR HIGHWAY, NH-12, DEOLI - 304804 PH :8696925259.

DEVGARH

1690. LOHIA AUTOMOBILES (CUQ1-CUQ-01), NEAR KRISHI MANDI, KAMLIGHAT ROAD, TEHSIL – DEVGARH, DISTRICT – RAJSAMAND, RAJASTHAN. - 313331 PH -9777676856

DHOLPUR

1691. TM MOTORS PVT. LTD. (5K01-5K-01), TM MOTORS PVT. LTD., GT ROAD DHOLPUR, RAJASTHAN. - 328001 PH:8094777862.

DWANA

1692. SHRI MANGLAM AUTO PVT. LTD. (FT03-FT-01), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA, DISTRICT – NAGAUR. -341303 PH. 7230055024

DUDU

1693. PREM MOTORS PVT. LTD. (BRY1-BRY-01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008 PH: 8058411181.

DUNGURPUR

1694. NAVNEET MOTORS (4902-GP-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001 PH 9414104833 9414104833

FATEHNAGAR

1695. TECHNOY MOTORS INDIA PVT. LTD. (4903-SV-03), PLOT NO.15, FATENAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHNAGAR-313205 DISTT. UDAIPUR - 313205 PH 9772564139, 9772564139.

GANGAPUR CITY

1696. PREM MOTORS PVT. LTD. (BUT1-BUT-01), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201 PH: 8058794122.

GUDHAGOR.II

1697. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGC1-CGC-01), BHORKI ROAD, GUDHAGORJI, DISTRICT – JHUNJHUNUN, RAJASTHAN. - 333022 PH:7412059948.

HANUMANGARH

1698. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-57-03), JUNCTION TOWN ROAD,HANUMANGARH - 335512 PH:01552-231295,9166712222, 9413311745.

HINDAUN

1699. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S002-S0-01), KHASRA NO. 737, VILLAGE – PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN - 322230 PH :7017024146, 7017024146.

JAIPUR

- 1700. VIPUL MOTORS PVT. LTD. (1102-11-01), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017 PH: 9269117654,8849686508.
- 1701. K P AUTOMOTIVES PVT LTD (1104-11-01), E-198, SANGANER INDUSTRIAL AREA, MANSAROVAR, JAIPUR - 302020 PH :0141-4071111, 4071101,6377203709, 6377203731.
- 1702. PREM MOTORS PVT. LTD. (1112-11-02), 12 13,SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006
- PH:0141-4711111,8058703388, 8058794122.

 1703. SANGA AUTOMOBILES PVT. LTD. (1110-11-01),
 SECTOR 35, PRATAP NAGAR,SANGANER,
 JAIPUR 307033
- PH :9772210922. 1704. VIPUL MOTORS PVT. LTD. (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR -302012
- PH:0141-3524203,9672211333. 1705. PREM MOTORS PVT. LTD. (1112-11-01), PLOT NO. E101/A, VKI, JAIPUR - 302039

PH :01414411123 8929409921

- 1706. SATNAM MOTOCORP PVT. LTD. (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR – 302 022, RAJASTHAN. - 302022 PH:1412771976.8302390000.
- 1707. KTL AUTOMOBILE PVT. LTD. (1115-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR. - 302012

PH:7412077022

1708. PREM MOTORS PVT. LTD. (1112-11-03), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR. - 302017 PH: 9358715550 8929409921

- 1709. KTL AUTOMOBILES (1115-11-02), KHASRA NO 1210-1216/2959, BHANKROTA, TEH SANGANER , DISTRICT JAIPUR. - 302026 PH:7412077007.
- 1710. KTL AUTOMOBILES (1115-11-03), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD "JAIPUR. - 302006 PH : 7412077007.

JAISAI MER

1711. LMJ SERVICES LTD. (5L01-5L-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY, HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) -345001

PH:8005898360.

JAITARAN

1712. LMJ SERVICES LTD. (BNY1-BNY-01), KHASRA NO. 784, JAIPUR-JODHPUR BYE PASS ROAD, JAITARAN, DIST.-PALI. - 306302 PH :9269971266.

JALORE

1713. SHRI KRISHNA AUTOSALES PVT LTD (VD01-VD-01), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001 PH.2973211613.3829203644.

JAMWA RAMGARH

1714. K P AUTOMOTIVES PVT LTD (BZL1-BZL-01), KHASRA NUMBER -228/169,OPP UDAY AUTOMOBILES_JAIPUR ALWAR ROAD -JAMWA RAMGRAH. - 303109 PL -6377203709 6377203731

JHALAWAR

1715. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-RV-02), OPP. BALAJI KI CHHATRI , KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001 PH 941350338.

JHUNJHUNU

1716. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (FN03-FN-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001
PH :01592-250045,7412087489.

JOBNER

1717. PREM MOTORS PVT. LTD. (BRD1-BRD-01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL – PHULERA, DISTRICT – JAIPUR, RAJASTHAN - 303328 PH:8058411181.

JODHPUR

- 1718. LMJ SERVICES LTD. (6502-65-01), PRATAP NAGAR, JODHPUR - 340002 PH:9950496202.
- 1719. LMJ SERVICES LTD. (6502-65-04), OPP TO RFC OFFICE, NEW POWER HOUSE ROAD, JODHPUR -342003 PH: 8094011127.
- 1720. SHRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A, HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005 PH :2912748402.9001894669.
- 1721. LMJ SERVICES LTD. (6502-65-09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008 PH -8040111147
- 1722. LMJ SERVICES LTD. (6502-65-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002 PH - 7230057721
- 1723. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-65-01), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005 PH : 741059839
- 1724. LMJ SERVICES LTD. (6502-65-0D), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342 001 PH :8606016455
- 1725. LMJ SERVICES LTD. (6502-65-10), KHASRA NO. 357/5, BANAR ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342 003 PH:7222002424.

(APRAIN

1726. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BGG1-BGG-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301 PH 9413379001

KEKRI

1727. AJMER AUTO AGENCIES PVT. LTD. (B201-GZ-03), KOTA SAWAR ROAD,KEKRI -305404 PH: 9314955201.

KHERLI

1728. MG MOTORS (BZE1-BZE-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606 PH -0011705520

KHERWARA

1729. TECHNOY MOTORS (SEE1-SEE-01), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8,KHERWARA, TEHSIL – KHERWARA, DISTRICT – UDAIPUR, RAJASTHAN PIN CODE: 313803 - 313803 PH 1950398845.

KISHANGARH

1730. AJMER AUTO AGENCIES PVT LTD (TU01-TU-01), R K LINK ROAD, - 305802 PH:9314391011.

KISHANGARH BAS

1731. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-TU-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405 PH:8875007753.8875007753.

KOTA

- 1732. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-01), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007 PH:8929400447.
- 1733. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-61-01), AUTO MOBILE ZONE, G-11/12 INDUSTRIAL AREA, KOTA 324005
 PH. 07242-2349008 2439008 93878904887
- 1734. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN 324007 PH :8929400427
- 1735. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH :8929400447
- 1736. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-06), PLOT NO. E-222, ROAD NUMBER S, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJIASTHAN. - 324005 PH :0744-2439008, 2439006, 958798487.
- 1737. SUWALKA MOTORS PVT. LTD. (6104-61-01), RIDDHI SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN. - 324008 PH:0744-2661226,7742121212.

KOTPUTLI

- 1738. PREM MOTORS PVT. LTD. (MH09-MH-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108 PH. 014/147/11/11/8 R058/41/18/1
- 1739. PREM MOTORS PVT. LTD. (MH09-MH-02), KHASRA NO-636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108 PH :014147111118.8058411181.

KUCHAMAN

1740. SHRI MANGLAM AUTO PVT. LTD. (VA02-VA-01), SUDARSHAN NAGAR, BURSU ROAD, KHASRA NO.148, KUCHAMAN. - 341508 PH:7230055928.

LADNU

1741. SHRI MANGLAM AUTO PVT. LTD. (CUP1-CUP-01), KHASRA NO. 1011, SUJANGARH ROAD, LADNUN - 341306 PH 7412044506

LALSOT

1742. VIPUL MOTORS PVT. LTD. (BZF1-BZF-01), PLOT NO. 22,23, KHASRA NO. 1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502 PH :9672211333.

LUNI

1743. LMJ SERVICES (SFD1-SFD-01), NEAR SBI BANK, SALAWAS ROAD,LUNI, TEHSIL – LUNI,DISTRICT – JODHPUR,RAJASTHAN PIN CODE: 342802 -342802 PH: 8094011126.

MAHWA

1744. VIPUL MOTORS PVT. LTD. (BKZ1-BKZ-01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H.-11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608 PH 9672211333

MAKRANA

1745. SHRI MANGLAM AUTO PVT. LTD. (CFX1-CFX-01), KHASRA NO. 6094, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRANA, DISTRICT – NAGAUR. - 341505 PH: 7230055934.

MALPURA

1746. K P AUTOMOTIVES PVT LTD (BLB1-BLB-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH:8696925262.

MANDALGARH

1747. CHAMPION (SHA1-SHA-01), OPP, MODEL SCHOOL, BIUCLIA ROAD, MANDALGARH, DISTRICT – BHILWARA, PIN-311604, RAJASTHAN - 311604
PH - 9837325/287

MERTA

1748. SHRI MANGLAM MOTORS (NG03-NG-01), KHASRA NUMBER 1679, NH-89,MERTA ,RAJASTHAN. - 341510 PH :9116007201.

NAGAUR

1749. SHRI MANGLAM AUTO PVT. LTD. (HL03-HL-01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUR. - 341 001 PH:9116008624.

NAINWA

1750. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTJ1-CTJ-01), UNIARA ROAD, OPP: PETROL PUMP, NAINWA, DIST. KOTA - 323801 PH :9413379001

NASIRABAD

1751. AJMER AUTO AGENCIES PVT. LTD. (B201-VB-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER -305601 PH:3314955201.

NATHDWARA

1752. LOHIA AUTOMOBILES (X201-TZ-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND -313301 PH:8306009399.

NEEM KA THANA

1753. JAMU AUTOMOBILES PVT LTD (K701-TV-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713 PH -0418818005 0418818005

NEEMRANA

1754. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-OP-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705 PH: 9610715222,9636139386.

NIMBAHERA

1755. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTH1-CTH-01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601 PH: 9772378881,9772378881.

NIWAI

1756. K P AUTOMOTIVES PVT LTD (BLA1-BLA01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT – TONK. - 304021 PH :9808025262

NOHAR

1757. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (VE02-VE-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523 PH:0155-5221485,7412059821, 8875010541.

NOKHA

1758. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (1501-15-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT-BIKANER (RAJASTHAN) - 334803 PH :7412059805.

PADAMPUR

1759. DUDI MOTORS (SGC1-SGC-01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 -335041 PH :8619215475

PALI

1760. LMJ SERVICES LTD. (6502-J9-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH :9269971266.

PAOTA

1761. K P AUTOMOTIVES PVT LTD (BRH1-BRH-01), PATTA SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106 PH:6377203709, 6377203731.

PARTAPUR

1762. NAVNEET MOTORS (BKY1-BKY-01), AAASHAPURA CHAURAHA, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024 PH -9001550644

PHALODI

1763. SHRI KRISHNA AUTOSALES PVT LTD (BOI1-BQI-01), OPP. RCP GUEST HOUSE, NAGAUR KHICHAN ROAD, PHALODI, RAJASTHAN - 342301 PH. 9116011958.

PHUI FRA

1764. KTL AUTOMOBILE PVT. LTD. (CUS1-CUS-01), KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338 PH:7412077022.

PINDWARA

1765. NAVNEET MOTORS (CQP1-CQP-01), OPPOSITE WOLKEM FACTORY, SIROHI ROAD, PINDWARA, DIST. - SIROHI - 307022 PH 7730036816 7730018849

PIPAF

1766. LMJ SERVICES LTD. (BTI1-BTI-01), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601 PH :9462616268

PISANGAN

1767. AJMER AUTO AGENCIES PVT. LTD. (CTL1-CTL-01), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT – AJMER, RAJASTHAN. - 305204 PH :9314955201.

PRATAPGARH (RAJASTHAN)

1768. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (PN01-PN-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312805 PH 49571774999

RAIPUR

1769. LMJ SERVICES LTD. (CRZ1-CRZ-01), NATIONAL HIGHWAY, PALI ROAD, VILLAGE – RAIPUR, DISTRICT – PALI. - 306304 PH :9269971266.

RAISINGHNAGAR

1770. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHK1-9HK-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHINAGAR, DISTRICT – SRIGANGANAGAR. - 335051 PH -989638516

RAJGARH

1771. MG MOTORS (IY01-IY-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH 9001795520

1772. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGD1-CGD-01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, -331023 PH-960261977

RAJSAMAND

1773. LOHIA AUTOMOBILES (X201-X2-01), BHILWARA ROAD, KHANKROLI, RAJSAMAND DISTT, RAJSAMAND - 313301 PH: 8306009399.

RAMGANJMANDI

1774. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BAZ1-BAZ-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH :9414085790.

RATANGARH

1775. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHJ1-BHJ-01), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331 022 PH:7412087301.

RAWATBHATA

1776. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (JQ01-JQ-01), NEAR IIDIIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA, DIST. CHITTORGARH, RAJASTHAN. - 323307 PH - 39587994887.

RENWAL MANJHI

1777. PREM MOTORS PVT. LTD. (GKZ1-GKZ-01), KHASRA NUMBER 2286/110,OPP ROHINI NAGAR 1. JAIPUR BHILWARA HIGHWAY RENWAL, TEHSIL PHAGI JAIPUR, RAJASTHAN (303904) - 303904 PH 01414711118 9928494441

REVDAR

1778. TECHNOY MOTORS INDIA PVT. LTD.
(CRY1-CRY-01), OPP. TIRUPATI PETROL PUMP,
KAROTI ROAD, REVDAR, DISTT. SIROHI,
RAJASTHAN. - 307514
PH. 9116653766.9116653766.

SAGWARA

1779. TECHNOY MOTORS INDIA PVT. LTD. (CK01-CK-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025 PH 1:02966254767. 220088824

SALUMBAR

1780. NAVNEET MOTORS (BZH1-BZH-01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT – UDAIPUR. - 313027 PH -7865887444

SAMBHAR

1781. KTL AUTOMOBILE PVT. LTD. (CVD1-CVD-01), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE, PHULERA ROAD, SAMBHAR 303604 - 303604 PH: 7412077022.

SANCHORE

1782. SHRI KRISHNA AUTOSALES PVT LTD (GY01-GY-01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANIMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. -343041 PH :9636224546.

SANGOD

1783. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (GLG1-GLG-01), KHASRA NO 1637, SANGOD BAPAPAR MAIN ROAD, SANGOD - 325601 PH 9413353909

SARDARSHAHAR

1784. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BID1-BID-01), KHASRA NO.134, MOTOR MARKET, RATANCARRI SARDARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN -331403 PH :9799833995.

SAWAI MADHOPUR

1785. PREM MOTORS PVT. LTD. (FY03-FY-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001 PH. 014147111118 9358725409

SHAHPURA

- 1786. K P AUTOMOTIVES PVT LTD (1104-NH-05), VILLAGE RAJPURA, GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103 PH :0141-4071111, 4071101,8696934964, 9358220012.
- 1787. LOHIA AUTOMOBILES (CCP1-CCP-01), OPPOSITE LIC OFFICE, BHILWARA ROAD, SHAHPURA DISTT. BHILWARA - 311404 PH :7568378555.9462979238.

SIKAR

1788. JAMU AUTOMOBILES PVT LTD (K701-K7-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001 PH:9116816905.9116816905.

SIROHI

1789. NAVNEET MOTORS (4902-LK-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH - 779060089

SIVANA

1790. LMJ SERVICES LTD. (CCO1-CCO-01), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASHTHAN. - 344044 PH:8005898360.

SOJAT

1791. LMJ SERVICES LTD. (BWI1-BWI-01), KHASRA NO. – 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104 PH :9269971266.

SRI DUNGARGARH

1792. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIG1-BIG-01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT -BIKANER, RAJASTHAN. - 331803 PH: 9414138511.

SRI KARANPUR

1793. AURIC MOTORS (SDL1-SDL-01), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR, TEHSIL - SRI KARANPUR, DISTRICT - SRI GANGANAGAR, RAJASTHAN, PIN CODE: 335073 - 335073 PH: 8875088998.

SRI MADHOPUR

1794. JAMU AUTOMOBILES PVT LTD (BZD1-BZD-01), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR. - 332715 PH :9116816905.

SRIGANGANAGAR

- 1795. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-U2-01), NEW AUTOMOBILE MARKET, SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001 PH: 0154-2465226,7412059837.
- 1796. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-U2-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001 PH :8875911503.

SUJANGARH

1797. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BRB1-BRB-01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH, DISTT. CHURU - 331507 PH:8875011561.

SULTANPUR

1798. SUWALKA MOTORS PRIVATE LIMITED (GKY1-GKY-01), KHASRA NUMBER 485, NEAR PETROL PUMP, SULTANPUR ROAD, SULTANPUR, DISTT KOTA - 325204 PH -7742121212

SUMERPUR

1799. LMJ SERVICES LTD. (6502-VC-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHEREA GROUND, SUMERPUR - 306902 PH:8094002633.

SURATGARH

1800. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-LG-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804 PH :8875012667.

TONK

1801. K P AUTOMOTIVES PVT LTD (GM01-GM-01), F-94, RIICO INDUSTRIAL AREA, TONK, RAJASTHAN - 304001 PH -05408F1972

UDAIPUR

- 1802. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD, UDAIPUR - 313001 PH :7230046375.
- 1803. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002
- PH:0294-2494451-54,7665000881.

 1804. TECHNOY MOTORS INDIA PVT. LTD.
 (4903-9402), NH-8, GOVERDHAN VILLAS,
 DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR
 313002
 PH:7073468292.

1805. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL – BADGAON, UDAIPUR, RAJASTHAN. - 313001 PH 729706711 9116101063

SIKKIM

GANGTOK

1806. ENTEL MOTORS (B902-B9-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102 PH :9933031828 9033032059

JORTHANG

1807. ENTEL MOTORS (ND02-ND-01), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121 PH :9733164882 9933009934.

TAMIL NADU

AI ANDURAI

1808. AADHI CARS PVT. LTD. (CTO1-CTO-01), NO.69/1 A., SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) -641101 PH.8754045816.

AMBASAMUNDRAM (AMBAI)

1809. AADHI CARS PVT. LTD. (BXT1-BXT-01), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAIKULAM, AMBASAMUNDRAM. - 627 401 PH:7397188558.

ANAMALAI

1810. ABT (CHE1-CHE-01), SITE NO. 6/12, NEAR ABT SAMUGA KOODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642 104 PH. 9788174244.

ANNUR

1811. JAIKRISHNAA AUTOSALES PVT. LTD.
(DN01-DN-01), SF NO.266/18, OTTRAPALAYAM
VILLAGE, OPP. TO KG SCHOOL,
ANNUR, COIMBATORE (DIST), TAMILNADU 641653
PH. 9788850733.

ANTHIYUR

1812. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUX1-CUX-01), SURVEY NO. 495/4, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD, ANTHIYUR. - 638501 PH: 8754086777.

ARAKKONAM

1813. GANESH CARS PVT. LTD. (BKQ1-BKQ-01), SURVEY NO. 556A/3, VILLAGE – ICHIPUDHUR, TALUKA – ARAKKONAM, VELLORE. - 631003 PH 9842345399

ARIYALUR

1814. PILLAI & SONS MOTOR CO. (EB01-EB-01), NO.1/1, NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). -621704 PH 104329-228300. 9442281302.

ARNI

1815. GANESH CARS PVT. LTD. (BKP1-BKP-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM. RATNAMANGALAM BUS STOP, ARNI , THIRUVANAMALAI, TAMIL NADU. - 632301 PH .988553266.

ARUPPUKKOTTAI

1816. ASIR AUTOMOBILES PVT LTD (CWF1-CWF-01), SURVEY NO. 205/1, 5/5C, NEHRU NAGAR, ARUPPUKKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKKOTTAI, DIST.-VIRUDHUNAGAR. - 626 101 PH - 9044059011

ATTUR

1817. S.M.CAR PVT. LTD. (QT02-QT-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108 PH:7094440057.

AVADI

1818. VISHNU CARS PVT. LTD. (5P01-5P-01), SURVEY NO. 146, 147/1F & 147/G, NO. 17 VILLAGE – KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT – THIRUVALLUR, CHENNAI, TAMIL NADU - 600054 PH :7338888021, 7358024470.

AVINASH

1819. SHASHTI CAR PVT LTD (CLK1-CLK-01), SURVEY NO. 373/16; THEEKU THOTTAM, NALLIGOUNDANPALAYAM, PALANGARAI, KUPOUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654
PH 99429073319

BHAVANI

1820. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-IG-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316 PH 9597385777.

CHENGALPETTU

1821. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD)
(BBS1-BBS-01), PLOT NO. 98/1, PULIPAKKAM
VILLAGE, CHENGALPETTU,
DISTRICT-KACHEEPURAM, TAMIL NADU. 603002
PH 7299057387

1822. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-BBS-02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU -603202 PH: 7299057387.

CHENGAM

1823. GANESH CARS PVT. LTD. (BUP1-BUP-01), SURVEY NO. 293/3A, 3A1,VILLAGE -THUKAPETTAI, CHENGAM, DIST. -TIRUVANNAMALAI. - 606 701 PH : 7307305799

CHENNAI

- 1824. ABT LIMITED (1401-14-01), 102, MOUNT ROAD, GUINDY, CHENNAI - 600032 PH:044-42254544, 42254554.
- 1825. KHIVRAJ MOTORS PVT LTD. (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006
- 1826. CARS INDIA PVT. LTD. (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI -600058 PH - 9952000089
- 1827. CARS INDIA PVT. LTD. (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI -600020 PH: 044-24462020.
- 1828. POPULAR VEHICLES & SERVICES LTD. (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117 PH -0175006334 -0176006335 -0176006336
- 1829. ABT LIMITED (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093 PH 1044-23650488 23650490
- 1830. ABT LIMITED (1401-14-06), NO. 1 & 2, VASANTHA PRESS,ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020 PH :044-24465814 , 24465815.
- 1831. CARS INDIA PVT. LTD. (1403-14-03), 4/321, OLD MAHABALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040 PH: 044-24540182 /43590913.
- 1832. POPULAR VEHICLES & SERVICES LTD. (1410-14-01), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093 PH :9282405819, 9282348331, 8939915206.

- 1833. ABT LIMITED (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106 PH: 044-42267828/604.
- 1834. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (1493-14-01), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107 PH -7306087056
- 1835. ABT LIMITED (1411-14-01), 29, WALLES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058
- PH :044-42281707 / 714 / 719 / 720 / 721 / 737/. 1836. CARS INDIA PVT. LTD. (1403-FP-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066 PH :9952000078.
- 1837. VISHNU CARS PVT. LTD. (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004 PH: 0427-24661973/74/75.
- 1838. VISHNU CARS PVT. LTD. (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043 PH:044-66813729/733888000.
- 1839. POPULAR VEHICLES & SERVICES LTD. (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099 PH:7448814726/23/33.
- 1840. CARS INDIA PVT. LTD. (1403-14-05), PLOT NO.-80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112 PH: 9952000079.
- 1841. KHIVRAJ MOTORS PVT LTD. (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH :7999971978
- 1842. ABT LIMITED (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. -600041 PH 1044-24490584 / 585 /586
- 1843. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-14-01), PLOT NO. 1,2,3 & 4, SURVEY NO.91(2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115 PH -7201211553
- 1844. RAJALAKSHMI CARS PVT. LTD. (1486-14-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI. - 600060 PH -8030005454/R0300054014
- 1845. KHIVRAJ MOTORS PVT LTD. (1480-14-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI -600096 PH: 38414 23569.

- 1846. ABT LIMITED (1401-14-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119 PH :044-2450/185 / 87 / 88 / 89
- 1847. VISHNU CARS PVT. LTD. (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. -600089
- PH :875444002/ 9677244332.

 1848. VISHNU CARS PVT. LTD. (1487-14-01), NO.203
 TO 206 MOUNT POONAMALLE ROAD,
 KATTUPAKKAM, CHENNAI 600056
 PH -6677127432
- 1849. VISHNU CARS PVT. LTD. (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100 PH:9840929994/ 9840944478.
- 1850. VISHNU CARS PVT. LTD. (1427-14-04), NEW S. NO. 314/181A, PALLAVARAM – THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. -600117 PH :9940057775.
- 1851. VISHNU CARS PVT. LTD. (1427-14-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. -600016
 - PH:044-45590293.
- 1852. RAJALAKSHMI CARS PVT. LTD. (1486-14-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095 PH. 9841427572/9500125083.
- 1853. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (1493-14-03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058 PH :7305087033
- 1854. POPULAR VEHICLES AND SERVICES LTD (1410-14-06), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1C, 88/1B & 88/2B, NOOMBAL MAIN ROAD, VANAKARAM, CHENNAI. 600 077 PH 1044-61343434, 46490006/9
- 1855. AIE CARS (A UNIT OF AI ENTERPRISES PYT LTD) (1484-14-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. -600 049. PH -9841742996
- 1856. VISHNU CARS PVT. LTD. (1427-14-07), SURVEY NO. 19/1A2, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. 600069 PH 195001 87346

- 1857. VISHNU CARS PVT. LTD. (1427-14-08), SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI, TAMIL NADU. - 600 073 PH. 3056260022.
- 1858. ABT LIMITED (1401-14-10), S. NO: 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI -600089, TN.. - 600089 PH :044-22320161. 8220011558.

CHEYYAR

1859. GANESH CARS PVT. LTD. (BUD1-BUD-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407 PH - 0787660330

CHIDAMBARAM

1860. VISHNU CARS PVT. LTD. (CPK1-CPK-01), SURVEY NO. 102/2 & 102/5, BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU. - 608 602 PH: 041-44241334/7358004555.

COIMBATORE

- 1861. ABT LIMITED (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037 PH :9944400987.
- 1862. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005 PH:8220862666.
- 1863. ABT LIMITED (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001 PH -044-4232660, 4232666.
- 1864. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH:9047055667.
- 1865. ABT LIMITED (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043 PH :96009 66056.
- 1866. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-01), 8/60-C&8/62-D, METTUPALAYAM ROAD, G.N.MILLS POST, NEARJOHNBOSCO CHURCH, COIMBATORE - 641029 PH :044-4519140.
- 1867. SREE SARADHAMBAL AUTOMOBILES PYT LTD (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027 PH -9655219900.

- 1868. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-08), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE, - 641013 PH -985877775
- 1869. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004 PH -0429-248320
- 1870. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE -641004 PH: 9655345775.
- 1871. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-OH-04), NO. 12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020 PH: 0422-698899.
- 1872. AADHI CARS PVT. LTD. (4108-41-01), NO.176/2, SATHYAMANGALAM ROAD, SARAVANAPATTI, COIMBATORE - 641035 PH:0422-400600.
- 1873. ABT LIMITED (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024 PH :78457 74069.
- 1874. AADHI CARS PVT. LTD. (4108-41-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004 PH :0422-3007701.
- 1875. AADHI CARS PVT. LTD. (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041 PH 10429.3000201
- 1876. AADHI CARS PVT. LTD. (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE-. - 641005 PH: 0422-4000777.
- 1877. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. -641008 PH 1422-2251225
- 1878. AADHI CARS PVT. LTD. (4108-41-06), SF NO. 14/78-A, RENUKA SHELTERS, VILANKURICHI MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL NADU-641048. - 641 006 PH -8750/45940
- 1879. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-11), PLOT NO. 1, RAJA STREET, KALLIMADIA, NANJAPPA NAGAR, COIMBATORE, TAMIL NADU - 641005 PH: 9344870035.

COONOOR

1880. SREE SARADHAMBAL AUTOMOBILES PVT LTD (3G01-3G-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102 PH: 95852 77775.

CUDDALORE

- 1881. ABT LIMITED (5Q01-5Q-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003 PH: 04142-224567.
- 1882. VISHNU CARS PVT. LTD. (5Q02-5Q-01), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANANGAKUPPAM, CUDDALORE - 607 001 PH:7338884131.

CUMBUM

1883. MEENAKSHI AUTO ZONE PVT. LTD.
(CJS1-CJS-01), PATTA NO. 4388, SURVEY NO.
1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB
DIST.-CUMBUM, TAMIL NADU. - 625516
PH. 9940094881

DEVAKOTTAI

1884. SIVA AUTOMOTIVE TRADING PVT LTD (GKV1-GKV-01), SURVEY NO. 5/1A, MULL IGUNDU (SOMANENTHAL VILLAGE), DEVAKOTTAI TALUK, SIVAGANGAI DISTRICT, TAMILNADU - 630 303 PH : 7094688870.

DHARAPURAM

1885. SREE SARADHAMBAL AUTOMOBILES PYT LTD. (H701-QN-04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM. 633656 PH :9597550777.

DHARMAPURI

1886. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-5R-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI , TAMILNADU - 636807 PH:9750938892/ 9159086222.

DINDIGUL

1887. PLA MOTORS (\$401-\$4-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL -624001 PH:7010075200.

FDAYARPAI AYAM

1888. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CJK1-CJK-01), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE. - 641025 PH :9047081914.

ERODE

- 1889. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-H7-01), 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH :96779877777
- 1890. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-H7-06), SURVEY NO. 1363/3, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP, OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE. - 638 002 PH 938805777
- 1891. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (H702-H7-01), OLD GS. NO. 337 (1 TO 4), RS NO. 259111A, 10,9.8, SATHY ROAD, PERIVA SEMUR VILLAGE, ERODE, TAMILNADU - 638003 PH-9171791991.

GOBICHETTIPALAYAM

1892. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-QM-03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH -0507560777

GUDIYATHAM

1893. GANESH CARS PVT. LTD. (CQW1-CQW-01), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM. - 653803 PH :04171-290172

GUDUVANCHERY

1894. VISHNU CARS PVT. LTD. (BAD1-BAD-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203 PH. 9500121553/9677122225.

GUMMIDIPOONDI

1895. RAJALAKSHMI CARS PVT. LTD. (BIZ1-BIZ-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE – PAPPANAKUPPAM, GUMMIDIPONNDI, THIRUVALLUR - 601201 PH: 044-27920/90

HARUR

1896. SRI AMMAN CARS INDIA PYT LTD. (AVY1-AAV-01), 4299, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903 PH :8220014360/7339071500.

HOSUR

1897. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-7Q-01), P.O.- PERANDAPALLI, NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 PH :9790036377/1888225955.

IDAPPADI

1898. THRIVENI CAR COMPANY PVT LTD. (HI01-HI-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101 PH:9003311488.

KALLAKURICHI

- 1899. ABT LIMITED (CHG1-CHG-01), SURVEY NO. 215/4.NEAR AKT SCHOOL, DURUGAM ROAD, NEAR DOORDARSHAN BLDG, NEELAMANGALAM VILLAGE., KALLAKURICHI TALUK & DIST., TAMILIADU-66025
- 1900. S M CARS (CHG2-CHG-01), SF: 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213 PH : 7094440010.

KANCHEEPURAM

1901. GANESH CARS PVT. LTD. (C601-JA-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH-9842306061.

KANGAYAM

1902. SREE SARADHAMBAL AUTOMOBILES PVT LTD (GJI1-GJI-01), NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU. - 638701 PH - 2708531772

KARAIKUDI

1903. ABT LIMITED (4202-HX-05), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302 PH :4565-232484. 232486..

KARUMATHAMPATTI

1904. SREE SARADHAMBAL AUTOMOBILES PYT LTD (CJO1-CJO-C), SF. NO 281/B. NEAR BHARAT PETROL BUNK, VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADAM, DISTT. COIMBATORE. - 641659
PH. 9159210008.

KARUNGALPALAYAM, ERODE

1905. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-H7-08), RF. NO. 17/1, 2, CAVERI ROAD, KARUNGALPALAYAM, ERODE ,TAMILNADU -638003 PH -8/098725000

KARUR

1906. ABT LIMITED (K401-K4-01), SF NO. 529/1, SALEM BY PASS, ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002 PH : 04324-222261/62/63.

KATPADI

1907. GANESH CARS PVT. LTD. (C601-APA-04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH:9842313139

KINATHUKADAVU

1908. AADHI CARS PVT. LTD. (BBI1-BBI-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109 PH :0422-3000506 3000505.

KODUMUDI

1909. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUY1-CUY-01), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI. - 638151 PH: 8754756777.

KOTAGIRI

1910. AADHI CARS PVT. LTD. (BAS1-BAS-01), SURVEY NO. 89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217 PH: 8754045891/875404542

KOVILPATTI

1911. ASIR AUTOMOBILES PVT LTD (NO01-NO-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501 PH :4632-232220.

KRISHNAGIRI

1912. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-QL-03), NH-7,NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001 PH 9500202416 8220004270

KUMBAKONAM

1913. PILLAI & SONS MOTOR CO. (E701-N4-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501 PH :0438-2442566 0443264666

MADURAI

- 1914. ABT LIMITED (4202-42-02), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018 PH :9994400615.
- 1915. ABT LIMITED (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH :9600966164
- 1916. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH.7402780000.
- 1917. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. -625003 PH:7402788840.

1918. ASIR AUTOMOBILES PVT LTD (4206-42-01), D. NO. 28/5B, MELUR MAIN ROAD, UTHANKUDI, MADURAI. - 625107 PH :9944059911

- 1919. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008 PH -04/2709831
- 1920. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-02). SURVEY NO. 238/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652 014 PH-99407248RI

MADURANTHAKAM

 AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (CEW1-CEW-01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. - 603306 PH -7401212797

MALI ASAMUDRAM

1922. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CWY1-CWY-01), SF NO. 194/3C, MALLASAMUDRAM MAIN ROAD, MALLASAMUDRAM TOWN, TIRUCHENGODE TALUK, NAMAKKAL DIST., TAMIL NADU. - 637503 PH 39849320119

MALLUR

1923. THRIVENI CAR COMPANY PVT LTD.
(CDH1-CDH-01), SURVEY NO.50/4A, AMANI
AMMAPALAYAM VILLAGE, DISTT:
DADHAGAPATTY SUB REGISTRATION, MALLUR
DISTT. SALEM - 636309
PH: 0427-2422399.

MANAMADURAI

1924. ABT LIMITED (CHF1-CHF-01), NO. 35, OLD RAMNAD ROAD, MANAMADURAI TOWN, DISTRICT – SIVGANGAI. - 630606 PH :9994450331.

MANGAI APURAM

1925. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CLX1-CLX-01), DOOR NO. 1/518, SURVEY NO. 75/1, ATTUR MAIN ROAD, MANGALAPURAM (POST), TALUK – RASIPURAM, DISTRICT – NAMAKKAL. - 636202 PH :7094447871.

MANNARGUDI

 PILLAI & SONS MOTOR CO. (BKR1-BKR-01), NO. 37, THIRUTHURAIPOONDI ROAD, MANNARGUDI, THIRUVARUR DISTRICT, TAMIL NADU. - 614001 PH:7094411675.

MAYILADUTHURAI

1927. PILLAI & SONS MOTOR CO. (E701-AG-04), 46,VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007 PH :04384-251767 - 251765 9442141703

FCHERI

1928. SM CARS (CVK1-CVK-01), SURVEY NO. 139A/5, PATTA NO. 653, AMANI M.KALIPATTY VILLAGE, MECHERI TOWN, METTUR TALUK, SALEMN DIST., TAMIL NADU. - 636 453 PH :7094440010.

MELUR

1929. SIVA AUTOMOTIVE TRADING PVT. LTD.
(CHC1-CHC-01), OLD SN. 138/1, SURVEY WARD
C, BLOCK NO. 1, T. S. NO. 21/7, VILLAGE AND
TOWN – MELUR, MELUR, DIST.-MADURAL625109
PH :8098120000.

METTUPALAYAM

1930. ABT LIMITED (4101-EU-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043 PH -65009 45004

MINJUR

1931. RAJALAKSHMI CARS PVT. LTD. (BPE1-BPE-01), PLOT NO. 27, SRI JANAKI RATHINN NAGAR, VILLAGE AND TOWN – MINJUR, PONNERI – 601 203, DISTRICT – THIRUVALUR. - 601203 PH: 044-27933331.

NAGAPATTINAM

1932. PILLAI & SONS MOTOR CO. (CQQ1-CQQ-01), NO.181, KEELA ANTHANAPETTAI, ANTHANAPETTAI, P.O. - MANJAKOLLAI, PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU - 611106 PH -4365220250.

NAGARCOIL

1933. ATHEN (S503-S5-01), RESURVEY NO. G.3/9-7, BUILDING NO. 254-A/3 & 4 K. P. ROAD PARAVATHIPURAM, NAGERCOIL, KANYAKUMARI DISTRICT TAMILNADU - 629003 PH :8012029777.

NAMAKKAL

- 1934. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-X4-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL -637001 PH:937164888.
- 1935. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-X4-03), 1/412/1 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001 PH :737192888.

NEGAMAM

1936. ABT LIMITED (CHD1-CHD-01), 68, 69, ABT BUS STAND, PALLADAM ROAD, PERIA NEGAMAM, POLLACHI, TAMIL NADU - 642120 PH -99948 76794

OMALUR

- 1937. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-UM-04), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012 PH :8220010070/883529888.
- 1938. THRIVENI CAR COMPANY PVT LTD.
 (UM01-UM-01), PLOT NO. 44 & 45, PALANIYAPPA
 NAGAR LAYOUT, NH-7, KAMALAPURAM VILLAGE,
 OMALUR, DISTRICT SALEM, TAMIL NADU 636309
 PH :4290-222711.

OOTY

1939. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-Y1-05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001 PH: 97511 09229.

PADAPPAI

1940. VISHNU CARS PVT. LTD. (CRO1-CRO-01), SURVEY NO.368/2A/1, 368/2A/2, VANDALLUR-WALAJABAD MAIN ROAD, PADAPPAI EAST, CHENNAI. - 601301 PH: 8754417168.

ΡΔΙ ΔΝ

1941. PLA MOTORS (S401-GLR-02), NO:13-1-11C-1, WEST AYAKUDI, DINDIGUL ROAD, PALANI, DINDIGUL DISTRICT, TAMIL NADU - 624613 PH:04545-290900.

PARAMATHIVELUR

1942. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CC01-CC-01), SURVEY NO. 171, NEAR KONGU SCHOOL, NAMAKKAL BYPASS ROAD, PADAMUDI PALAYAM, TALUKA – PARAMATHIVELUR, NAMAKKAL, TAMIL NADU. - 638182 PH :8870666599.

PATTUKKOTTAI

1943. PILLAI & SONS MOTOR CO. (CJA1-CJA-01), SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11, SRI JANAGALAKSHMI NAGAR, THANJAVUR ROAD, ALADIKUMULAI VILLAGE, TALUK PATTUKOTTAI, THANJAVUR. - 614615 PH. 7094433074

PAVITHRAN

1944. SREE SARADHAMBAL AUTOMOBILES PVT LTD (TWT1-TWT-01), SURVEY NO. 102/1B, NAMAKKAL MAIN ROAD, PAVITHRAM - 637 021 PH :9600320888.

PENNAGARAM

1945. SRI AMMAN CARS INDIA PVT. LTD. (BXZ1-BXZ-01), SURVEY NO. 419/1, VILLAGE – PARUVADHANAALLI, PENNAGARAM, DHARMAPURI. - 636810 PH: 9715044700.

PERAMBALUR

1946. PLA MOTORS (2305-DQ-04), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212 PH :8870004960.

PERUNDURAI

1947. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BTX1-BTX-01), SF NO.542/1, KOVAI MAIN ROAD, PERUNDURAI VILLAGE, PERUNDURAI DISTT. ERODE, TAMIL NADU - 638052 PH: 9597490777.

POCHAMPALLI

1948. SRI AMMAN CARS PVT. LTD. (CUW1-CUW-01), NEW SURVEY NO. 561/5, VILLAGE – JUMBUKUTTANPATTI, POCHAMPALLI, KRISHNAGIRI. - 635206 PH -980048698R

POLLACHI

1949. ABT LIMITED (L301-L3-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003 PH :99944 53265.

PUDUKOTTAI

1950. PLA MOTORS (2305-5U-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003 PH 104392-265568/87

PUNJAI PULIAMPATTI

1951. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BKO1-BKO-01), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTI - 638459, SATHY THALUK, ERODE. - 638459
PH :6384510777

RAJAPALAYAM

1952. MEENAKSHI (5V02-01), DOOR NO. 96, COTTON MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117 PH: 9443785681.

RAMANATHAPURAM

1953. SIVA AUTOMOTIVE TRADING PVT. LTD. (0102-01-01), SURVEY NO. 172/1B2C, 172/2C, VILLAGE - ACHUNTHANVAYAL, ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM, RAMANATHAPURAM. - 623502 PH : 3088110000.

RANIPET

1954. GANESH CARS PVT. LTD. (CJJ1-CJJ-01), SURVEY NO. 441, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET, TAMILI NADU. - 632403 PH. 9842303988.

RASIPURAM

1955. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BSJ1-BSJ-01), SURVEY NO-41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401
PH :4286-231402/7539972888.

SALEM

- 1956. ABT LIMITED (4101-A2-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009 PH: 0427-4066988, 406999
- 1957. THRIVENI CAR COMPANY PVT. LTD. (A203-A2-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005 PH :0427-2440000
- 1958. S.M.CARS PVT. LTD. (A204-A2-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SELANIKANPATTY, SALEM. - 636/202 PH.709448/R010, 70344490101
- 1959. THRIVENI CAR COMPANY PVT. LTD. (A203-A2-03), SURVEY NO. 57, VILLAGE -MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103 PH :0427-2291000.
- 1960. S M CAR PRIVATE LIMITED (A204-A2-02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007 PH:7094440053.

SANKAGIRI

1961. THRIVENI CAR COMPANY PVT LTD.
(BTM1-BTN-01), SURVEY NO.171/5B, KCK PLAZA,
KACHERIDADU, DEPUTY COLLETOGR ROAD,
SALEM, SANKAGIRI (TAMIL NADU) - 637301
PH :+914283242600
+914283242601

SANKARANKOVIL

1962. AADHI CARS PVT. LTD. (BXS1-BXS-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. -627756 PH:7397728025.

SATHY ROAD, ERODE

1963. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-H7-09), SF-No:245, KANDHAIYAN THOTTAM, SOOLAI, SATHY ROAD, VEERAPPANCHATTIRAM, ERODE, TAMILNADU-638004 PH :9855240486

SATHYAMANGALAM

1964. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BGU1-BGU-01), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM – 638 401, DISTRICT – ERODE, TAMIL NADU - 638401 PH :9597592777.

SATTUR

1965. MEENAKSHI AUTO ZONE PVT. LTD. (SDR1-SDR-01), SURVEY NO. 1810, CHATRAPATTI VILLAGE, MADURAI KANYAKUMARI NATIONAL HIGHWAYS, SATTUR, VIRUDHUNAGAR DISTRICT, TAMILNADU - 626203 PH . 994094881.

SEYDUNGANALLUR

1966. ASIR AUTOMOBILES PVT LTD (S603-GJG-02), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK -SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU. -628809 PH 8744902220

SIVAKASI

1967. MEENAKSHI AUTO ZONE PVT. LTD. (X602-X6-01), 372 D & E, ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. - 626123 PH :4562-231281.

SRIPERUMBUDUR

1968. RAJALAKSHMI CARS PVT. LTD. (7B01-7B-01), SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105 PH :893995469.

SRIVILLIPUTHUR (RAJAPALYAM)

1969. ABT LIMITED (4202-5V-03), NO. 10/32, PADIKKASUVAITHANPATTI, NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125 PH -95009 05020.

SIII IIR

1970. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-TK-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR -641 402 PH :0422-3199901.

TENKASI

- 1971. AADHI CARS PVT. LTD. (BXR1-BXR-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE – KUNARAMANALLUR, TENKASI. - 627814 PH -9500991475
- 1972. AADHI CARS PVT. LTD. (BXR1-BXR-02), DOOR NO. 47, MADHALAMPARAI, TENKASHI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU. - 627 814 PH.9500991475.

THAN, IAVUR

1973. PILLAI & SONS MOTOR CO. (E701-E7-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU -613007

PH:04362-271723, 271724, 9443264164.

THARAMANGALAM

1974. THRIVENI (CSQ1-CSQ-01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST. ,TAMIL NADU. -636501

PH:9159355999/9003504760.

THENI

1975. MEENAKSHI AUTO ZONE PYT. LTD. (9U02-9U-01), DOOR NO. 871/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT – THENI - 625531 PH - 9780770381

THIRUMULLAIVOYAL

1976. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (CDW2-CDW-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULAIVOYAL DISTT. CHENNAI - 600062 PH :7305087044

THIRUVALLUR

- 1977. KHIVRAJ MOTORS PVT LTD. (1404-HH-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001 PH :99520 78443.
- 1978. KHIVRAJ MOTORS PVT LTD. (1404-HH-05), PLOT NOS.2:18,2:19,2:00,2:5,2:6,2:7.2:28 AND S.NOS.1:18/5,1:8/6, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR. 602001 PH. 97(10) 394318

THIRUVANNAMALAI

1979. GANESH CARS PVT. LTD. (C601-LX-03), NO.-5, NH-78, KRISHANAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601 PH :9842305072.

THIRUVARUR

1980. PILLAI & SONS MOTOR CO. (E701-LJ-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE -610001 PH: 04366-250250, 9442163707

1981. PILLAI & SONS MOTOR COMPANY (LJ01-LJ-01), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 601/681, SUNDARAVILAGAM, NARSINGHAMPET, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001 PH - 942/163500

THISAYANVILLAI

1982. AADHI CARS PVT. LTD. (CVL1-CVL-01), SURVEY NO. 240/1, 71/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI - 627 657
PH. 7339511187

THUCKALAY

1983. ATHENS (BW02-BW0-01), DOOR NO. 5/76B, (RE SURVEY NO-530/7) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE – MUTHALAKURUCHI, KALKULAM-TALUK, THUCKALAY, DISCTRICT – KANYAKUMARI, TAMILNADU - 629174 PH 810209888

THURAIYUR

1984. PLA MOTORS (CSE1-CSE-01), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010 PH 9486763725

TIRUCHENDUR

1985. ASIR AUTOMOBILES PVT LTD (CCJ1-CCJ-01), SURVEY NO. 220/101A, 221J3, 221J4, 221J5, 221J5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215 PH. 7373900220.

TIRUCHENGODE

1986. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-QP-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE - 637001
PH 4288-282902

TIRUNELVELI

- 1987. AADHI CARS PVT. LTD. (A303-A3-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI, TAMIL NADU - 627357 PH: 9500991610.
- 1988. AADHI CARS PVT. LTD. (A303-A3-03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU. - 627 011. PH :9500991610.

TIRUNVELI

1989. AADHI CARS PVT. LTD. (A303-A3-04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU -627001 PH 95009 91479

TIRUPATHUR

1990. GANESH CARS PVT. LTD. (BPD1-BPD-01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601 PH: 3942308909.

TIRUPATTUR(SIVAGANGAI)

1991. ABT LIMITED (CHH1-CHH-01), DOOR NO. 8/2/29A, KARAIKUDI ROAD, TIRUPATHUR, DISTRICT – SIVAGANGAI. - 630211 PH :9994450331.

TIRUPUR

1992. ABT LIMITED (4101-Y7-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR -641601

PH:95009 98368.

1993. SHASHTI CAR PVT LTD (Y701-Y7-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604 PH - 1044-2430757, 2430276

TIRUTHAN

1994. CARS INDIA PVT. LTD. (CIC1-CIC-01), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI, TAMILNADU -631209 PH: 7358773860.

TIRLIVANNAMAI AI

1995. SRI AMMAN CARS INDIA PVT LTD. (LX02-LX-01), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601 PH :7094471293.

RICHY

- 1996. ABT LIMITED (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY - 620001 PH:0431-4221620.
- 1997. PLA MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009 PH:9994599777/9600950960.
- 1998. ABT LIMITED (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005 PH:0431-4221555.
- 1999. PLA MOTORS (2305-23-03), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001 PH:0431-2411540/530.

2000. PILLAI & SONS MOTOR CO. (2306-23-01), SURVEY NO. 10B, 1A/D, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY. - 620002 PH:8489900907. 9384826814

TUTICORIN

2001. ASIR AUTOMOBILES PVT LTD (S603-S6-01), SURVEY NO. 25/1B, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU -628002 PH :7373501220.

UDUMALPET

2002. ABT LIMITED (QR01-QR-01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126 PH :99944 41645.

UTHANGARAI

2003. SRI AMMAN CARS INDIA PVT. LTD.
(CFY1-CFY-01), SURVEY NO. 104/1, 104/1B,
VILLAGE – THANDIYAPANNUR, UTHANGARAI,
KRISHNAGIRI. - 635304
PH 9715044600

UTHUKOTTAI

2004. KHIVRAJ MOTORS PVT LTD. (CUC1-CUC-01), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602 026 PH:7299635536.

VALLIYUR

2005. AADHI CARS PVT. LTD. (BXQ1-BXQ-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002 PH. 7373′091462.

VANDAVASI

2006. GANESH CARS PVT. LTD. (CRN1-CRN-01), SURVEY NO.272, KEELSATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408 PH : 7305802484

VANIYAMBADI

2007. GANESH CARS PVT. LTD. (BJY1-BJY-01), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801 PH-9842327709.

VELLORE

2008. GANESH CARS PVT. LTD. (C601-C6-01), 91 NEW BY-PASS ROAD, VELLORE - 632004 PH:9842377110.

- 2009. SRI AMMAN CARS INDIA PVT. LTD. (C602-C6-01). DOOR NO. 88, SURVEY NO. 667, NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUKA, GANDHINAGAR, VELLORE DIST., TAMIL NADU. - 632006 BH. 7004/173927. 7004/173921
- 2010. SRI AMMAN CARS INDIA PVT. LTD. (C602-C6-02), SURVEY NO. 316/382, 316/38, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE, VELLORE TALUK & DIST. ON NH48 (CHENNAI – BENGALURU HIGHWAY), VELLORE, TAMILNADUR - 632010 PH 70942471320

VILLUPURAM

2011. ABT LIMITED (5Q01-QQ-02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602 PH: 04146-225500 / 225590

VIRUDHACHAI AM

2012. ABT LIMITED (BMA1-BMA-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101 PH :04143-262631/262632/262633.

VIRUDHUNAGAR

2013. MEENAKSHI AUTO ZONE PVT LTD (SCF1-SCF-0A), DOOR NO:6/604, SURVEY NO (1/6, PELAMPATTI VILLAGE, VIRUDHUNAGAR MADURAI HIGH WAY, OPPOSITE TO VVV COLLEGE., TALUK & DIST. VIRUDHUNAGAR, TAMILNADU - 626001 PH :9940094881.

TAMILNADU

DENKANIKOTTAI

2014. AMMAN CARS (SDT1-SDT-01), SURVEY NO:766/ 1B11, THABILAGOUNDAN THOTTI, DENKANIKOTTAI, KRISHNAGIRI DISTRICT, TAMILNADU - 635107 PH :988559935.

KUMBAKONAM

2015. PILLAI AND SONS MOTOR CO. (E701-E7-06), D NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO THIRUBHUVANAM TOWN & POST. KUMBAKONAM, THANJAVUR DISTRICT, TAMILMADU - 612103 PH: 3489900136.

SIVAGANGAI

2016. ASIR AUTOMOBILES (SDC1-SDC-01), S. NO: 144/1. SIVAGANGAI-THONDI ROAD, PAIYAURPILLAIVAYAL, SIVAGANGAI,TAMILNADU - 630561 PH :9750372220.

TINDIVARAM

56

2017. VISHNU CARS (SDI1-SDI-01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM, TAMILNADU - 604102 PH 9500039023

TELANGANA

ADILABAD

2018. ADARSHA AUTOMOTIVES PVT LTD (BTM1-BTM-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001 PH :9133307724.

ARMUF

2019. VARUN MOTORS PVT. LTD. (BBN1-BBN-01), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224 PH -905901488

BATCHUPALLY, HYDERABAD

2020. SAI SERVICE PRIVATE LIMITED (1011-10-09), SURVEY NO 499/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090 PH -73307711111

BHUPALAPALLY

2021. ADARSHA AUTOMOTIVES PVT LTD (D502-BCF-04), 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169 PH : 779970576

BODHAN

2022. VARUN MOTORS PVT. LTD. (0801-08-01), PLOT NO. 5/2, ACHANAPALLY CROSS ROAD, BODHAN, DIST.-NIZAMABAD, TELANGANA. - 503 185 PH :9885576602, 9553714189.

CHEVELLA

2023. GEM MOTORS (INDIA) PVT. LTD. (CBL1-CBL-01), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. -510101 PH. 9912899128. 9912834567.

GADWAL

2024. SRI JAYARAMA MOTORS PVT. LTD. (WP01-BHR-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125 PH: 8096990074, 8096996671.

GAJWEL

2025. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYU1-BYU-01), SURVEY NO. 220, VILLAGE – PRAGNAYPUR, GAJWEL, DISTRICT – MEDAK, TELANGANA. - 502311 PH -8885088009, 9849017827.

GHATKESAR

2026. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BY1.1-8YL-01), 3-21, JODIMETIA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY - 501301 PH :8865088075, 9849017827.

HUSNABAD

2027. ADARSHA AUTOMOTIVES PVT LTD (GJE1-GJE-01), SURVEY NO. 202/E, H. NO. 12-1/4 & 12-1/A, VILLAGE & MANDAL -HUSNABAD, DIST.-SIDDIPET, TELANGANA. 505467

PH :8886092222, 7995835552. HYDERABAD

- 2028. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD, AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020 PH 1996838794
- 2029. RKS MOTORS PVT. LTD. (1003-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482 PH 1040 44454443 2011811166
- 2030. RKS MOTORS PVT. LTD. (1003-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039
- PH :040 23434504, 9010822210. 2031. VARUM MOTORS PVT. LTD. (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, - 500037
- PH :9885208555, 9985745222 .

 2032. VARUN MOTORS PVT. LTD. (4603-10-0B), ADITYA NAGAR COLONY, ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD 500008 PH :64551700, 8886114856.
- 2033. VARUN MOTORS PVT. LTD. (1010-10-01), PLOT NO. VI- VII A & B, UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH :9885208555.
- VARUN MOTORS PVT. LTD. (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036 PH:4553395, 4547676, 9885093360.
- 2035. RKS MOTORS PVT. LTD. (1003-10-04), 16-11-19/5/2/C, SALEEM NAGAR COLONY, MALAKPET (NEAR FARHAT HOSPITAL), HYDERABAD - 500036 PH 9010811192.

- 2036. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10.NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD 500081 PH :04023113398 9459912702
- 2037. RKS MOTORS PVT. LTD. (1003-10-05), 11-6-191/192, OPP. HOTEL HARSHA, PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD -500001 PH :9848811158.
- 2038. VARUN MOTORS PVT. LTD. (4603-10-0A), 1-11-200,SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016 PH :9885206555
- 2039. THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8,NEAR MARGADARSI CHIT FUND.L.B. NAGAR RING ROAD, RR DIST,HYDERABAD -500074 PH 9963551265.
- 2040. GEM MOTORS (INDIA) PVT. LTD. (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR,,HYDERABAD, ANDHRA PRADESH - 500084 PH -9012/809128
- 2041. GEM MOTORS (INDIA) PVT. LTD. (1009-10-02). 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH-500072 PH. 9912344538.
- 2042. SAI SERVICE PRIVATE LIMITED (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, BALANAGAR, HYDERABAD - 500037 PH:9010827755.
- 2043. THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD 500076 PH:04027176999 04027177999 9993551:077
- 2044. VARUN MOTORS PVT. LTD. (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD 500008 PH 998510486R) 69997079
- 2045. RKS MOTORS PVT. LTD. (1003-10-08). D.NO.1-10-1/285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062 PH. 7709779810
- 2046. SAI SERVICE PRIVATE LIMITED (1011-10-04), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD. - 500059 PH:7799352000.

- 2047. VARUN MOTORS PVT. LTD. (4603-10-0G), 1-10-28/1 SY. NO. 285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH - 7799600093
- 2048. VARUN MOTORS PVT. LTD. (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBIEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH -8886329776
- 2049. VARUN MOTORS PYT. LTD. (4603-10-0J), PLOT NO. 1-45, SY.NO:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE -500019 PH.:8886067847.
- 2050. SAI SERVICE PRIVATE LIMITED (1011-10-07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH-9703811411.
- 2051. ADARSHA AUTOMOTIVES PVT LTD (1014-10-01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005 PH 342939633
- 2052. RKS MOTORS PVT. LTD. (1003-10-09), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072 PH :9010811131.
- 2053. SAI SERVICE PRIVATE LIMITED (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018 PH :7799360003.
- KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT NO. A-23 & A31/1, LD.A, NACHARAM, HYDERABAD. - 500076 PH - 9100114883
- 2055. GEM MOTORS (INDIA) PVT. LTD. (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA. - 500089 PH -9012/3415/24
- 2056. ADARSHA AUTOMOTIVES PVT LTD (1014-10-02), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218 PH:9603296633.
- 2057. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAYE GB SQUARE, VILLAGE – GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032 PH. 930090401.

- 2058. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-02), SURVEY NO.1136, PLOT NO.32, 39 8.40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081 PH. 7799916868
- 2059. KALYANI MOTORS PVT. LTD. (1018-10-02), M/S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE – KARMANGHAT, MANDAL – SAROORNAGAR, DISTRICT – RANGA REDDY, HYDERABAD. - 500079 PH -9100222377
- 2060. ADARSHA AUTOMOTIVES PVT LTD (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA RAO EXPRESSWAY), RAJENDRANAGAR, UPPERPALLY, ATTAPUR, RANGA REDDY, HYDERABAD, TELENGANA. - 500048 PH 9705436633. 8297426633.
- 2061. THE MITHRA AGENCIES (1002-10-06), SURVEY NO.57, D.NO.8-2-108, BIRAMALGUDA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. - 500079 PH - 8886671232
- 2062. VARUN MOTORS PVT. LTD. (4603-10-0M), KSN GARDENS, 5-162/6, BORABANDA MAIN ROAD, HYDERABAD. - 500018 PH:9885579623.
- 2063. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-03), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEDIMETLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA). - 500055 PH. 7799784567
- 2064. ADARSHA AUTOMOTIVES PVT LTD (1014-10-03), SURVEY NO. 220IA, AMBEDKAR ROAD, OPP HERITAGE FRESH, NEAR AMBAEDKAR STATUE, NEAR ALWAL, SECUNDERABAD. - 500 010 PH 9991859984
- 2065. KALYANI MOTORS PVT. LTD. (1018-10-03), SURVEY NO. 305, NIZAMPET, MANDAL -QUTBULLAPUR, DIST.-RANGA REDDY, HYDERABAD. - 500 072 PH: 040.68158999 9121223221

HYDERABAD - MEDIPALLI

2066. THE MITHRA AGENCIES (1002-10-07), SURVEY NO,12,13,14& 15, MEDIPALLY, GHATKESAR MANDAL, RANGA REDDY DISTRICT, HYDERABAD, TELANGANA - 500098 PH .8886697954.

IBRAHIMPATNAM

2067. PAVAN MOTORS PVT. LTD (CSF1-CSF-01), S.NO.123/E, MPP PATELGUDA, IBRAHIMPATNAM, RANGA REDDY - 501506 PH :8790144499.

JAGITIAL

2068. ADARSHA AUTOMOTIVES PVT LTD (N601-NU-04). HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, -505327 PH.8886152222.

JANGAON

2069. ADARSHA AUTOMOTIVES PVT LTD (KI01-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. -506167 PH:7799626633.

KAMAREDDY

2070. VARUN MOTORS PVT. LTD. (KX01-KX-01), H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111 PH -9085557570

KARIMNAGAR

- 2071. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-01), H.NO. 8-6-313/1,HYDERABAD ROAD,BY-PASS JUNCTION,KARIMNAGAR - 505001 PH :8888600315
- 2072. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-05), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. - 505001 PH :8886152222.
- 2073. VARUN MOTORS PVT. LTD. (N603-N6-01), BEARING NO. 1-81/3/10/2, SURVEY NO. 221 & 222, REKURTHY VILLAGE, KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR MANDAL & DIST., TELANGANA. - 505 001 PH: 09133376762. 886619373.

KEESARA

 JAYABHERI AUTO (SEI1-SEI-01), H-NO 3-56/9/6A, SURVEY NO 5, KEESARA, MEDCHAL-MALKAJGIRI, TELANGANA - 501301 PH:9676076666.

KHAMMAM

2075. MITHRA AUTO AGENCIES PVT LTD (2604-1G-02), SURVY NO. 182, WARANGAL ROAD, OPP. FCI GODOWNS, PEDA THANDA, KHAMMAM - 507003 PH : 888608357.

KODAD

2076. PAVAN MOTORS PVT. LTD (BRP2-BRP-01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD, DISTRICT – NALGONDA, TELANGANA - 508206 PH :8008899995.

KOTHAGUDEM

2077. VARUN MOTORS PVT. LTD. (2603-HF-04), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM -507101

PH:8297168222/9052549111.

MAHABUBABAD

2078. ADARSHA AUTOMOTIVES PVT LTD (CQS1-CQS-01), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD. - 506101 PH.9177746333. 7799700525.

MAHABUBNAGAR

2079. SRI JAYARAMA MOTORS PVT. LTD. (WP01-WP-01), PLOT NO.C1 & C2, INDUSTRIAL ESTATE, METTUGADA, MEHBOOBNAGAR-504001 PH :8096998846.

MAHESHWARAM

2080. ADARSHA AUTOMOTIVES PVT LTD (CQR1-CQR-01), (BEARING #5-187, SURVEY NO.:336/11, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY - 501359 PH :8142326633, 9703152222.

MANCHERIAL

2081. ADARSHA AUTOMOTIVES PYT LTD (N601-CM-03), BEHIND MAHINDRA TRACTORS SHOWROOM,BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208 PH :888502222.

MEDAK

2082. VARUN MOTORS PVT. LTD. (KF01-KF-01), SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK (MDL & TOWN) - 502110 PH -9154053337

MEDCHAL

2083. AUTOFIN LIMITED (CID1-CID-01), H. NO. 11-27/1, SURVEY NO.401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401 PH -8885040702

MIRYALGUDA

2084. PAVAN MOTORS PVT. LTD (WR01-WR-01), SURVEY NO-940 &843, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD,MIRYALAGUDA ,NALGONDA DISTRICT, ANDHRA PRADESH -508207 PH :8790900399.

MOINABAD

2085. GEM MOTORS (INDIA) PVT. LTD. (CFN1-CFN-01), SURVEY NO. 70, PLOT NO. 4, VILLAGE AND GRAM PANCHAYAT - HIMAYATH NAGAR, MANDAL - MOINABAD, DISTRCT - RANGA REDDY. - 500075 PH 9917891728 7997904845

NAGARKURNOOL

2086. SRI JAYARAMA MOTORS PVT. LTD.
(EV01-EV-01), SURVEY NO.44/A AND 45/A,
UYYALWADA VILLAGE, NAGARKURNOOL,
TELANGANA - 509209
PH :8096990074.

NAI GONDA

2087. PAVAN MOTORS PVT. LTD (AN01-AN-01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001 PH : 247399,8790344499.

NARAYANKHED

2088. VARUN MOTORS PVT. LTD. (CGI1-CGI-01), D. NO. 1-6-111/25/B/S/A/1, SV NO. 572/2, BHUMAN COLONY, GRAM PANCHAYAT & MANDAL -NARAYANKHED, DISTRICT – MEDAK, TELANGANA. - 502286 PH - 988210555

NARAYANPET

2089. SRI JAYARAMA MOTORS PVT. LTD. (BPG1-BPG-01), SURVEY NO. 468/4, MAHABUBNAGAR ROAD, NARAYANPET TOWN, DIST.-MAHABUBNAGAR, STATE - TELANGANA. -509210 PH :8096997701 . 7893177448.

NIRMAL

2090. ADARSHA AUTOMOTIVES PVT LTD (N601-AA-02), H. NO. 1-1-131, SHASTRINAGAR, MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106 PH :8886342222.

NIZAMABAD

 VARUN MOTORS PVT. LTD. (1H02-1H-01), PLOT NO. GP 1-57/4/1, PANGARA BORGOAN,NIZAMABAD - 503230 PH :8297848999 .9052080444.

PALWANCHA

2092. VARUN MOTORS PVT. LTD. (HF01-CSS-01), SURVEY NO.758 & 757, NEHRU NAGAR, PALWANCHA (NEW POLANCHA) MANDAL & TOWN, BHADRADRI KOTHAGUDEM DISTT., TELANGANA. -507115 PH :8297163222.

PARGI

2093. VARUN MOTORS PVT. LTD. (CBO1-CBO-01), HOUSE NO. 2-356 JANGAIAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL – PARGI, DISTRICT – RANGA REDDY. -510501

PH :988521055, 9885200000. PEDAPALLY

2094. ADARSHA AUTOMOTIVES PVT LTD (GKN1-GKN-01), SURVEY NO 142, H NO 185, RANGAMPALLI VILLAGE, PEDDAPALLI , TELANGANA - 505172 PH :8886618155 . 8886672222.

RAMAGUNDAM

2095. ADARSHA AUTOMOTIVES PVT LTD (BGA1-BGA-01), 5-6-172 SURVEY NO. – 259/B, MEDIPALLY SHIVAR, RAMAGUNDAM MUNICIPALITY, DISTRICT – KARIM NAGAR, ANDHRA PRADESH - 505209 PH: 3886144550.

RAMAYAMPET

2096. VARUN MOTORS PVT. LTD. (CD01-CD0-01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT – MEDAK. -502101 PH: 3885208555, 9703803399.

SANGAREDDY

2097. SAI SERVICE PRIVATE LIMITED (1011-01-05), H.NO.4-8-92/11/4/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH :7661811000.

SECUNDERABAD

2098. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (K601-K6-01), A1, MOTI VALLEY, TRIMULGHERRY, SECUNDERABAD, -500015

PH:040 44554747, 8885088080.

- 2099. AUTOFIN LIMITED (K606-K6-01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011 PH :885040130.
- 2100. VARUN MOTORS PVT. LTD. (4603-K6-01), 1-10-176/1, BEHIND VARUN TOWERS-1, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE. - 500016 PH: 3985552452.
- 2101. RKS MOTORS PVT. LTD (K605-K6-01), PLOT NO. 207, TADBUND, SECUNDERABAD. 500009 PH :9010801004.

2102. AUTOFIN LIMITED (K606-K6-02), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD. - 500090 PH -8885040126

 PAVAN MOTORS PVT. LTD (K608-K6-02), PLOT NO. 1-12, 749, 750, SURVEY NO. 751/2, VENKATADRI NAGAR, NEW MIRJAL GUDA, MALKAJGIRI, SECUNDERABAD, TELANGANA -500047 PH :9121293690.

SHAD NAGAR

2104. SRI JAYARAMA MOTORS (P) LTD. (WS01-WS-01), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH. - 500216 PH -909090671

SHAMIRPET

2105. RKS MOTOR PVT. LTD. (SDE1-SDE-01), SHED NO 2-242, MAJEEDPUR CROSS ROADS, SHAMIRPET, MEDCHAL-MALKAJGIRI, TELANGANA - 500078 PH - 9A48866618

SHANKARPALLY

2106. SAI SERVICE PRIVATE LIMITED (CEX1-CEX-01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203 PH:9966377888, 9912899128, 9703811011.

SIDDIPET

2107. ADARSHA AUTOMOTIVES PVT LTD (CAL1-CAL-01), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA. - 502103 PH:09703716633, 9160746633.

SIRCILLA

2108. ADARSHA AUTOMOTIVES PVT LTD (GYW1-BYW-01), H. NO. 10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR ROAD, SIRCILLA, DISTRICT – KARIMNAGAR, TELANGANA - 505301 PH :8886618155. 8142244131.

SURYAPET

2109. PAVAN MOTORS PVT. LTD (BLC1-BLC-01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213 PH:8008899995, 27502750.

TANDUR

2110. VARUN MOTORS PVT. LTD. (CFR1-CFR-01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA. - 501141 PH 3886619370

THORRUR

2111. ADARSHA AUTOMOTIVES PVT LTD (BYV1-BYV-01), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163 PH-9059438007. 7799790527.

VIKARABAD

2112. GEM MOTORS (INDIA) PVT. LTD. (BYM1-BYM-01), SHOP NO. 3-2-93/2, VILLAGE – YENNAPALLY, VIKARABAD MUNCIPALITY, VIKARABAD, DISTRICT – RANGA REDDY, TELANGANA. -501101 PH: 9912349840.

WANAPARTHY

2113. SRI JAYARAMA MOTORS (P) LTD. (WQ01-WQ-01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103 PH -809603870

WARANGAL

- 2114. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007 PH:8886132222.
- 2115. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-03), OPPOSITE TO ORUGALU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL - 506001 PH :8886492222
- 2116. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D503-D5-01), SURVEY NO. 16, 16/A & 16/B, OPPOSITE KAKATIYA UNIVERSITY GATE-2, LASHKERSINGARAM REVENUE VILLAGE, HANAMKONDA MANDAL, WARANGAL. 506 001 PH :868829010
- 2117. WIN MOTORS (A UNIT OF BHADRAKALI
 AUTOCARE PVT. LTD) (D503-D5-02), PLOT
 NUMBER 9,10,11 & 13/A, SURVEY NUMBER
 148/A&B OF BHEEMRAM VILLAGE, WARANGAL. 506015
 PH -8888878015

ZAHIRABAD

2118. SAI SERVICE PRIVATE LIMITED (BAT1-BAT-01), PLOT NO-5,NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD,MEDAK (DIST),ANDHRA PRADESH - 502220 PH.7660005206.

TELENGANA

KAGHAZNAGAR

2119. ADARSHA AUTOMOTIVES (SCN1-SCN-01), H.NO :1-61/3,BORIGAON,KAGHAZNAGAR,KOMARAMBH EEM - 504296 PH :8866092222.

TRIPURA

AGARTALA

- 2120. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003 PH:9862149275.
- 2121. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA. - 799003 PH -70057 71216
- 2122. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008 PH. 97746 16831.

AMARPUR

2123. JAIN UDYOG (CVR1-CVR-01), NEAR MOTOR STAND, AMARPUR, TRIPURA - 799101 PH:97748 45751.

AMBASSA

2124. JAIN UDYOG (CDT1-CDT-01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289 PH - 70052 88437

DHARMANAGAR

2125. JAIN UDYOG (6901-RN-03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - 799250 PH:97747 93164.

UDAIPUR

2126. JAIN UDYOG (YU01-YU-01), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR, TRIPURA (SOUTH) - 799116 PH: 9774020152.

UP

MEERUT

2127. TR SAWHNEY (4808-48-01), MUNICIPAL NO 101, KHASRA NO 1920/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002 PH -9090163125

UTTAR PRADESH

AGRA

2128. MADHUSUDAN MOTORS PVT LTD (6603-66-01), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - 282005 PH : 531102-05.

- 2129. MADHUSUDAN MOTORS PVT LTD (6603-66-02), GANESH GANJ, PRATAPPURA, AGRA - 282001 PH :9837097887.
- 2130. MADHUSUDAN MOTORS PVT LTD (6603-66-03), 6-A , VIBHAV INDUSTRIAL STATE, AGRA - 282007 PH :3299/21
- 2131. MADHUSUDAN MOTORS PVT LTD (6603-66-04), 26/253, SULTAN GANJ KI PULIA, MAUZA LASKARPUR, AGRA - 283203 PH -983707894
- 2132. PREM MOTORS PVT. LTD. (6605-66-01), KHASRA NO.382,386,387,388, VILLAGE ARTHONI, DELHI-AGRA HIGHWAY, NH-2, AGRA, UTTAR PRADESH - 282007 PH :9690010839.
- 2133. KTL PVT. LTD. (6606-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004 PH:8449715033.8449715099.
- 2134. PREM MOTORS PVT. LTD. (6607-66-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002 PH :9690010799.
- 2135. KTL PVT. LTD. (6606-66-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001 PH: 8449715099.
- 2136. KTL PVT. LTD. (6606-66-03), 44/320 B, MAUJA BODLA, BODLA CHOWK, AGRA. - 282007 PH :8449715099.
- 2137. MERAK VEHICLES (6609-66-01), KHASRA NO 65 & 74, MAUZA MOHAMMADPUR, AGRA-DELHI ROAD (NH-2), SIKANDRA, AGRA UTTAR PRADESH-282007. - 282007 PH: 9690486139.

AKBARPUR

- 2138. KTL PVT. LTD. (2801-LH-03), KANPUR ROAD, AKBARPUR - 209206 PH :7408409348
- 2139. SMARTWHEELS PVT. LTD. (7201-LH-08), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOBPUR, AKBARPUR, DIST-AMBEDIKAR NAGAR (U.P.) - 224122 PH:7705803248.

ALIGARH

2140. DEV MOTORS (P) LTD (B601-B6-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001 PH :521771

ALLAHABAD

2141. AMITDEEP MOTORS (2901-29-01), 26 SULEM SARAI, G.T. ROAD, ALLAHABAD - 211001 PH :8948122749, 9026111339, 7738555692, 9839890333, 9936413399.

AMETHI

2142. KTL AUTOMOBILE PVT. LTD. (BBB2-BBB-01), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR -227409 PH :7379557377

AMROHA

2143. AKANKSHA AUTOMOBILES PVT. LTD. (A001-AO-01), AMROHA – JOYA ROAD, NEAR PUNJAB NATIONAL BANK, AMROHA, UTTAR PRADESH, PIN CODE: 244221 - 244221 PH:7247800064.

ANPARA

2144. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (NJ02-NJ-01), KAHUWA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT – SONEBHADRA. - 232101

PH:7052547903, 9721905002, 9151154306, 9450544961.

AONLA

2145. KAVISHA MOTORS PVT LTD (CVI1-CVI-01), COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR MUNICIPALITY OFFICE, TEHSIL - AONLA. DIST., BAREILLY, STATE- UTTAR PRADESH. - 243301 PH :07895980222. 07895980300.

AURAI

2146. VARANASI MOTORS PVT LTD (CBM1-CBM-01), KHATA / KHATAJUNI NO. 00045, GT ROAD (EHAK BHAURA), OPP. CHINI MILL, VILLAGE & TEHSIL AURAI, DISTT: BHADHOI, UTTARPRADESH, PIN 221 301 - 2221301 PH :983360662. 7617002786.

URAIYA

2147. KULDEEP MOTORS (QJ01-QJ-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241 PH : 9235358444

AZAMGARH

2148. DEEP MOTORS (K501-K5-01), HARBANSHPUR NARAULI, AZAMGARH - 276001 PH :9838072905

BACHRAWAN

2149. KTL AUTOMOBILE PVT. LTD. (CGX2-CGX-01), VISHNUPUR, PHARWAN, RAEBARELI-LUCKNOW ROAD, DIST.-RAEBARELI. - 229301 PH:99184512222.

BAH

2150. KTL PVT. LTD. (CHI1-CHI-01), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH. -283104 PH:7055707169, 8449715033.

BAHERI

2151. KAVISHA MOTORS PVT LTD (BSB1-BSB-01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMILLIA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201 PH 8756000000 7607696666

BAHRAICH

2152. ANAND MOTORS AGENCIES LTD (1301-5Z-05), LUCKNOW ROAD, BEHRAICH, UTTAR PRADESH -271801 PH: 9519596080.

BALLIA

2153. DEEP MOTORS (K501-BA-03), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001 PH :9838072917

BALRAMPUR

2154. ANAND MOTORS AGENCIES LTD (XB01-XB-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201 PH 6307905736

RANDA

2155. MY CAR PVT. LTD. (2803-KV-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001 PH -9702071223

BANSI

2156. ARBIT AUTOMOBILES PVT LTD (GMD1-GMD-01), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA: KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT: SIDARTHNAGAR - 272153 PH:88543 12821.

BANTHRA

2157. MEGA MOTORS (SGQ1-SGQ-01), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401 PH:9919101456.

BARABANKI

2158. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-6A-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANI, BARABANKI - 225001 PH :9838075960.

BARAUT

2159. TANYA AUTOMOBILES (LL02-LL-01), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611 PH - 7055300019

BAREILLY

- 2160. CORAL MOTORS (P) LTD. (5602-56-01), STATION ROAD, BAREILLY - 243001 PH: 559191.
- 2161. CORAL MOTORS (P) LTD. (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002 PH:0581-2554922.

2162. KAVISHA MOTORS PVT LTD (5601-56-01), 4TH KM. RAMPUR ROAD, CLUTTER BUCKGANJ BARFILLY - 243502 PH :8756000000 7607696666

2163 FTERNITY MOTORS LLP (5603-56-01) KHASRA NO. 803/2. PILIBHIT BYPASS ROAD, PEER RAHORA OPP FUNCTY BARFILLY LITTAR PRADESH - 2/3001 PH:9105555746.

BASTI

2164. SMARTWHEELS PVT, LTD, (7201-6B-05). MANORI CHAURAHA. DUMARIYA GANJ ROAD. BASTI - 270002 PH -286294

RFHTA

2165. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (GMI1-GMI-01), KHASRA NO. 254. OPPOSITE SANGAM MOTORS, KURSI ROAD. BEHTA - 226026 PH:6388901514.

BHADOHI

2166. VARANASI MOTORS PVT, LTD, (8402-TT-02). VARNASI ROAD, BHADOHI - 221401 PH -9838360662

BHOJPUR

2167. MOTORCRAFT SALES INDIA PVT LTD (SDQ1-SDQ-01), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL - MODINAGAR, DISTRICT -GHAZIABAD. - 201204 PH:9410038456.

BLINOR

2168. SHAKUMBARI AUTOMOBILES (P) LTD (6D01-6D-01), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELHI-BIJNOR HIGHWAY, BIJNOR, DIST. - BIJNOR, UTTAR PRADESH. -246701 PH:8630881409.

BILARI

2169. AKANKSHA ALITOMORII ES PVT. LTD. (SDM1-SDM-01) 2KM-RII ARI NH 509 NEAR SRS SCHOOL BILARI MORADARAD 244001 - 244001 PH :7900600008

BILASPUR

2170. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-BCN-01), NH-87 ,OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR. DISTRICT - RAMPUR. - 244921 PH:9105370007.

BISAI PUR

2171. CORAL MOTORS PVT LTD (CXB1-CXB-01), KHASRA NO. 668 VILLAGE : BISALPUR DISTT: PILIBHIT, UTTAR PRADESH - 262201 PH:9837891846

2172. CORAL MOTORS (P) LTD. (5602-NF-04), PLOT NO.- 72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103 PH:9837891846.

BULANDSHAHR

2173. SK UNIVERSE (M502-M5-01), KHASRA NO 561 , BHOOR, OPP PANDIT PETROL PUMP, BULANSHAHR - 203001 PH -9219694600

2174. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (C.IH1-C.IH-01) KATHSII A NAHER NEAR SAINT JOHN'S SCHOOL CHAKIA DISTRICT -CHANDALILL - 232101 PH -9450544961

CHANDAUSI

2175. AKANKSHA AUTOMOBILES PVT. LTD. (XA01-XA-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412 PH -7248000002

CHAURI CHAURA

2176. ARBIT AUTOMOBILES (SIR1-SIR-01), ARAZI NO 561 DOMARI KHURD, CHAURI CHAURA, GORAKHPUR - 273201 PH -8953412821

CHIBRAMAU

2177. KTL PVT, LTD. (BMY1-BMY-01), PLOT GHATA NO. 70 MALLIA - LALAKPLIR VILLAGE -CHHIBRAMAU, DIST.-KANNAUJ, UTTAR PRADES. - 209721 PH 7408409200 9414113666

DALMALI

2178. KTL AUTOMOBIELS (SGZ1-SGZ-01), DALMAU ROAD, OPPOSITE BHAGIRATHI GUEST HOUSE -PH:9918451222.

DEORAND

2179. ATELIER AUTOMOBILES PVT LTD (XK01-XK-01), OPPOSITE CIVIL COLIRT MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001 PH:7500220011

DEORIA

2180. SMARTWHEELS PVT. LTD. (M601-M6-01). PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST. -DEORIA, UTTAR PRADESH, - 274001 PH:7705800602

DHAMPUR

2181. SHAKUMBARI AUTOMOBILES (P) LTD (CPQ1-CPQ-01), KHASRA NO. 205, OPPOSITE, UHSA SMARAK SCHOOL, MORADABAD ROAD, TEHSIL - DHAMPUR, MOJA - ALEHPUR, DIST. -BIJNOR, UTTAR PRADESH. - 246761 PH:9675970960

FΤΔΗ

2182. MADHUSUDAN VEHICLES PRIVATE LTD. (XG01-XG-01), 472 ASROLI, GT ROAD, ETAH -PH:9837097894.

FTAWAH

2183. KULDEEP MOTORS (6E01-6E-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001 PH -257029

FAIZARAD

2184. SMARTWHEELS PVT. LTD. (7201-F5-02). SAHADAT GANJ. LUCKNOW ROAD, FAIZABAD. UTTAR PRADESH. - 224001 PH:7705803245.

FARIDPUR

2185 KAVISHA MOTORS PVT LTD (CEM1-CEM-01) GATE NO. 216 KASBA SARAI TEHSII -FARIDPUR, DISTRICT - BAREILLY, UTTAR PRADESH - 243503 PH:07895980222.07895980300.

FARRUKHABAD

2186. MY CAR PVT, LTD, (2803-TS-04), NEKPUR KALAN, FARRUKHABAD - 209625 PH:9792970093.

FATFHARAD

2187. KTL PVT. LTD. (BLQ1-BLQ-01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT - AGRA, UTTAR PRADESH - 283111 PH:8449710051.

FATEHPUR

2188 KTI PVT LTD (2801-TM-04) NH-2 OPP RTO OFFICE KANPLIR ROAD FATEHPLIR - 212601 PH:7408409383.7408400000

FEROZABAD

2189. MADHUSUDAN VEHICLES PRIVATE LTD. (DF01-DF-01), 746, ALI NAGAR KEJRA, NEAR RAJA KA TAL CROSSING, NH 2, FEROZABAD 283203 PH:9690003077.

GAJRAUI A

2190. AKANKSHA AUTOMOBILES PVT. LTD. (XD01-XD-01) JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD. GAJRAUI A - 244235 PH:7895400003

GHAZIABAD

2191. ROHAN MOTORS LTD. (5904-59-01), 432 MUKAND NAGAR, G.T.ROAD, GHAZIABAD 201001 PH:9971466644

011-204170810. +911204170816. +911204170826, +911204170819,

2192. REGENT AUTOLINKS (P) LTD (5902-59-01). A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001

:0120-4641900.904.911.8744042111.9999740464 9711127008

2193. ROHAN MOTORS (5904-59-02) PLOT NO 46 MEERUT-DELHI ROAD, MORTA, GHAZIABAD -201102

PH :09310404354 9971466644

2194. T.R. SAWHNEY MOTORS PVT LTD (5905-59-01). PLOT NO 96 RAJINDER NAGAR INDUSTRIAL AREA MOHAN NAGAR GHAZIARAD DISTT -GHAZIARAD LLP - 201007 PH:9999052148:9999130612.

GHAZIPUR

2195. AGR AUTOMOBILES PVT, LTD, (8403-KT-03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001 PH:2361136.

GHIROR

2196. KULDEEP MOTORS (CVA1-CVA-01), KARHAL ROAD, TEHSIL - GHIROR, DISTRICT - MAINPURI, UTTAR PRADESH. - 205121 PH:9536755555.

2197. SMARTWHEELS PVT. LTD. (7201-FZ-07). JANKI NAGAR OPPINDIAN OIL DEPOT BAHRAICH ROAD GONDA LITTAR PRADESH - 271001 PH -7705803261

GORAKHPUR

2198. SMARTWHEELS PVT. LTD. (7201-72-01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012 PH:7705803152.

2199. SMARTWHEELS PVT. LTD. (7201-72-06), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD. GORAKHPUR - 273012 PH:7705803109.

- 2200. SMARTWHEELS PVT. LTD. (7202-72-01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. -273209
 - PH:9235401004.
- 2201. ARBIT AUTOMOBILES PVT LTD (7203-72-01), ARAZI NO. 66/1/1 MI. & 66/2/IMI, 66 MI, MAUZA -MAHEWA MUSTAKII, NEAR FALMANDI CHOWK, TRANSPORT NAGAR, GORAKHPUR, UTTAR PRADESH. - 273016 PH :88541/2821.

GOSAIGANJ

2202. BRIGHT 4 WHEEL SALES PVT. LTD.
(CWK1-CWK-01), KHASRA NO. 24, VILLAGE SHEKHANPUR, PARGANA MOHANLALGANJ,
TEHSIL - MOHANLALGANJ, DIST.-LUCKNOW,
UTTAR PRADESH. - 226501
PH 9383075079

GREATER NOIDA

2203. ROHAN MOTORS LTD. (T201-T2-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH - 201306 PH :4513739, 4513736, 4513734, 4513700/9958506111.

HAIDERGARH

2204. BRIGHT 4 WHEEL SALES PVT. LTD.
(CVU1-CVU-01), PROPERTY SHOP NO. 5, 6 AND
7, VILLAGE - GOTAUNA, PARGANA HAIDERGARH, TEHSIL - HAIDERGARH, DISTRICT
- BARABANKI. - 225124
PH :9935275768, 9838075929.

HAMIRPUR

2205. KTL PVT. LTD. (QH01-QH-01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301 PH :7704907587

HAPUR

2206. ROHAN MOTORS (6G01-6G-01), DELHI-HAPUR ROAD, OPPOSITE SSV INTERCOLLEGE, HAPUR, DISTRICT- GHAZIABAD - 245101 PH: 8476853930. 9536129292.

HARDOI

- 2207. CONCEPT CARS PVT. LTD. (QE01-QE-01), NANAK GANJ, LUCKNOW ROAD, HARDOI -241001
- PH: 3756000000, 7607696666.

 2208. CONCEPT CARS PVT. LTD. (QE01-QE-04), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADFSH. 241101

PH:7607696666.8756000000.

HATHRAS

2209. DEV MOTORS (P) LTD (B601-LP-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS -204101 PH :9917435500

JAGDISHPUR

2210. BRIGHT 4 WHEEL SALES PVT. LTD. (XC01-XC-01), KATHORA,MUSAFIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH - 227817 PH-9721526961 . 9628374814.

JAI AI ARAD

2211. SUMITRA DS MOTORS PVT. LTD. (GJX1-GJX-01), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSILL: JALALBAD, DIST. SHAHJHANPUR -242221

PH:9336408074.9897019488.

JAUNPUR

2212. KIRTIKUNJ AUTOMOBILES PVT. LTD. (6H01-6H-01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001 PH -9554951026

JHANSI

- 2213. SURI AUTOMOBILES (6001-60-01), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN – 284002. -284002 PH: 8881811383.
- 2214. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (6002-60-01), PLOT NO 486, 487, 488, 489 AND 477 (PATTA NUMBERS), MAUZA KOCCHABHANWAR, BLOCK BADAGAON, TEHSIL AND DISTT JHANSI. 284128
 PH : 9889440999.

KANNAUJ

2215. KTL PVT. LTD. (2801-EM-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725 PH:7408409305.

KANPUR

- 2216. KTL PVT. LTD. (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002 PH :7408409341.
- 2217. MY CAR PVT. LTD. (2803-28-01), 84/54 C, JARIB CHOWKI ,G.T. ROAD, KANPUR - 208003 PH -9792970511
- 2218. KTL PVT. LTD. (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007 PH :7408409253
- MY CAR PVT. LTD. (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022 PH:9792970086.
- 2220. S B CARS PVT.LTD (2806-28-01), 77B , FAZALGANZ, KANPUR - 208012 PH :2241660.

- 2221. MY CAR PVT. LTD. (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004 PH :9792970081
- 2222. S B CARS PVT.LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017 PH : 740850552
- 2223. KULDEEP MOTORS KANPUR LLP. (2808-28-01). BUKHAND NO. 756, 756A, 757, BLOCK: W, YOJINA: 2, JUHI KALAN, BARRA BYE PASS, KANPUR. - 208017 PH.9076608701.
- 2224. KTL PVT. LTD. (2801-28-07), ARAZI NO. 1110, VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA NAGAR, KANPUR, UTTAR PRADESH - 208 026 PH:7408409379.

KARWI

2225. MY CAR PVT. LTD. (CBU1-CBU-01), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 210205 PH :9839029868. 9792970391.

KASGANJ

2226. MADHUSUDAN VEHICLES PRIVATE LTD.
(BVX1-BVX-01), ARAJI NO. 646, SAURO ROAD,
KASGANJ, DISTRICT – KASGANJ, UTTAR
PRADESH. - 207123
PH. 9837097863, 9690003034.

KASIA

2227. ARBIT AUTOMOBILES PVT LTD (GMJ1-GMJ-01), MAUJA BHAISAHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206 PH:8953412821.

KAYAMGANJ

2228. MY CAR PVT. LTD. (CBV1-CBV-01), BYE PASS ROAD, NEAR KHAN PETROL PUMP, VILLAGE KAYAMGANJ, DISTT: FARUKHABAD - 209502 PH:9839029868. 9792970391.

KHANDAULI

2229. MADHUSUDAN MOTORS PVT LTD (BVV1-BVV-01), KHASRA NO. 97, AGRA-SADABAD, HATHRAS ROAD, OPP, HDFC BANK, VILL.-KHANDAULI, TEHSIL ETHMADPUR, DIST. AGRA, UTTAR PRADESH - 283126 PH :9837097863, 9690003034.

KHUTAR

2230. SUMITRA DS MOTORS PVT LTD (CIO1-CIO-01), VILLAGE – NARAINPUR, VIKRAMPUR GOLA ROAD, KHUTAR, DISTRICT – SHAHJAHANPUR, UTTAR PRADESH. - 242405 PH: 9338408074.

KIRAOLI

2231. PREM MOTORS PVT. LTD. (BJZ1-BJZ-01). GOVIND PALCE, NEAR KIRAWALI TEHSIL, AGRA – JAIPUR HIGHWAY, KIRAWALI, DISTRICT – AGRA, UTTAR PRADESH. - 283122 PH :98900110799

KOSI

2232. UMA MOTORS PVT. LTD. (CPV1-CPV-01), KHASRA NO. 245, CITY - KOSI, DIST.-MATHURA. -281004 PH :9997683333. 9997511006.

KUBERPUR

2233. KTL PVT. LTD. (6606-CRU-04), KHASRA NO.248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006 PH:8449715099.

LAKHIMPUR

- 2234. SUMITRA DS MOTORS PVT LTD (W201-M3-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001 PH :752298833, 9415770000
- 2235. SUMITRA DS (M301-M3-01), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE -BHARDSARIYA, KHERI, LAKHIMPUR - 262702 PH : 752288833. 9415770000.

LALGANJ

2236. KTL AUTOMOBILE PVT. LTD. (CSL2-CSL-01), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206 PH: 9918451222.

LALITPUR

2237. SURI AUTOMOBILES (6001-6J-03), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH :9451496015.

LUCKNOW

- 2238. ANAND MOTORS AGENCIES LTD (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105 PH :7080000462.
- 2239. KTL AUTOMOBILE PVT. LTD. (1311-13-01), MATIYARI CHAURAHA, CHINNHAT, FAIZABAD ROAD, LUCKNOW - 227105 PH :7408411453.
- 2240. ANAND MOTORS AGENCIES LTD (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW -226016

PH:3098257, 7080000463.

2241. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-01), 11/CP-6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022 PH :2739501.

- 2242. ONE UP MOTORS INDIA PVT. LTD. (1306-13-01), C-16A,TRANSPORT NAGAR,KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012 PH 9918100801
- 2243. KTL AUTOMOBILE PVT. LTD. (1311-13-02), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016 PH : 7408411478
- 2244. KTL AUTOMOBILE PVT. LTD. (1311-13-03). BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW-226005 PH. 19918451222.
- 2245. ANAND MOTORS AGENCIES LTD (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW - 226024 PH :4103406/407/408, 7080000464.
- 2246. ONE UP MOTORS INDIA PVT. LTD. (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH :9918500451.
- 2247. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH 9838075960
- 2248. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-II-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020 PH :7317049000.
- 2249. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW. - 226001 PH :8756000000, 760769666.
- 2250. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-13-01), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW. - 226 010 PH -9935096417, 7054631666
- 2251. KTL AUTOMOBILE PVT. LTD. (1311-13-07), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. - 226008 PH - 7800007376
- 2252. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-06), KHASRA NO. 418, MISHRAPUR PARGANA MAHONA, KURSI ROAD, LUCKNOW. -226022 PH -0935075788
- 2253. ONE UP MOTORS INDIA PVT. LTD. (1314-13-01) KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJJABGANJ, HARDOI ROAD, LUCKNOW. - 226003 PH -9821026545, 7800005200.

- 2254. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-13-02), KHASRA NO. 614, VILLAGE: BHADRUKH, VIP CANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHSIL: SAROJNI NAGAR,
 - LUCKNOW, U AR PRADESH 226002 226002 PH 6388901514

MADHOGANJ

2255. CONCEPT CARS PVT. LTD. (BHI1-BHI-01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241001 PH : 220016. 220064. 7607696666.

MAHARAJGANJ

- 2256. SMARTWHEELS PVT. LTD. (EI01-EI-01), NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303 PH:7705800602. 7705803109.
- 2257. KTL AUTOMOBILE PVT. LTD. (CSM2-CSM-01), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL – MAHARAJGANG, DISTRICT – RAIBAREILLY, UTTAR PRADESH. - 229306 PH 90184512222

MAHMUDABAD

2258. CONCEPT CARS PVT. LTD. (AAN1-AAN-01), IN FRONT OF POWER HOUSE, SIDAULI ROAD, MAHMOODABAD (U.P.) - 261203 PH : 7607696666. 8756000000.

MAHOBA

- 2259. SURI AUTOMOBILES (6001-RM-02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH, - 284001 PH :244344, 9451496015.
- 2260. VELOCITY MOTORS (RM02-RM-01), BAJRANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA -210427 PH -0560908709

MAHOLL

2261. CONCEPT CARS PVT. LTD. (CWS1-CWS-01), MUSKAN TRACTORS, NEAR MELA MAIDAN, SHAHJHANPUR ROAD, MAHSUNIYAGANJ, MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. -261141 PH: 7607696666.

MAHRONI

2262. SURI AUTOMOBILES (CGN1-CGN-01), LALITPUR ROAD, MEHRONI, DISTRICT – LALITPUR, UTTAR PRADESH. - 384405 PH:7705000558. 8881811383.

MAINPURI

2263. KULDEEP MOTORS (6E01-SG-02), SKP-4A, MAINPURI - 205001 PH: 9235258444

MALIHABAD

2264. ONE UP MOTORS INDIA PVT. LTD.
(BOD1-BOD-01), KHASRA NO. 326/1 AND 327,
VILLAGE PARGANA, TEHSIL – MALIHABAD,
DISTRICT – LUCKNOW, UTTAR PRADESH. 227111
PH :9918100781.

MANDURI

2265. DEEP MOTORS (K501-K5-04), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. - 276138 PH - 10838072902

MATHURA

2266. UMA MOTORS PVT. LTD. (H801-H8-01), 68, MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004 PH - 24870434 (520)700

ΜΔΤΙ

2267. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (SCG1-SCG-01), GATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE-MATI, PARGANA-DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225 003 PH 45389011514

MAURANIPUR

2268. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (GJJ1-GJJ.-GJ), BASERA CITY, MAURANIPUR. - GARUTHA ROAD, MAURANIPUR, DISTT: JHANSI, UTTAR PRADESH -284204 PH: 8299202863.

MAWANA

2269. RADHA GOVIND AUTOMOBILES PVT LTD (CWZ1-CWZ-01), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401 PH :7456001002.

MEERUT

- 2270. TANYA AUTOMOBILES PVT. LTD. (4802-48-01), 35 CHIPPI TANK, BEGUM BRIDGE ROAD, MERRUT - 250001 PH - 9837077003
- 2271. TANYA AUTOMOBILES PVT. LTD. (4802-48-03), 90, NAUCHANDI GROUND,GARH ROAD, MEERUT - 250001
- PH:9837077004.

 2272. RADHA GOVIND AUTOMOBILES PVT. LTD.
 (4807-48-01). VILLAGE BARAL. KUNDA GATE
- (4807-48-01), VILLAGE BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002 PH:7456001030, 7456003222.

2273. TANYA AUTOMOBILES PVT. LTD. (4802-48-04), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE - ROSHANPUR DORIL, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001 PH 7800201515.

MIRZAPUR

2274. STAR CARS (6K02-6K-01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001 PH :7052547903, 9721905002, 9151154306, 9450544961.

MODINAGAR

2275. MOTORCRAFT SALES PVT. LTD. (5903-M7-02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204 PH: 09557338222 & 07042427140.

MOHANLAL GANJ

2276. BRIGHT 4 WHEEL SALES PVT. LTD.
(BWU1-BWU-01), KHASARA PLOT NO.581,
VILLAGE PURSANI, PARGANA AND TEHSIL
MOHANLALGANI, LUCKNOW DISTT., UTTAR
PRADESH - 227305
PH 1737/005906

MORADABAD

- 2277. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001 PH :7247800008.
- 2278. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-03), 5TH KM DELHI ROAD, MORADABAD - 244001 PH: 9568200001.
- 2279. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-04), KHASRA NO. 599-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001 PH. 7894500007

MUZAFFARNAGAR

2280. RADHA GOVIND (H903-H9-01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001 PH :9760092009 . 7535007026.

NAJIBABAD

2281. SHAKUMBARI AUTOMOBILES (P) LTD (CPS1-CPS-01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246 701 PH -8630881459

NAUGARH

2282. SMARTWHEELS PVT. LTD. (QG01-QG-01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHNAGAR - 272205 PH:7705803129.

NAWABGANJ

2283. KAVISHA MOTORS PVT LTD (CHT1-CHT-01), VILLAGE – EIDH JAGIR NEAR GURUDWARA AT NH-74, TEHSIL – NAWABGANJ, DISTRICT – BAREILLY. - 262406 PH :07895980222, '07895980300.

NOIDA

- 2284. ROHAN MOTORS LTD. (A102-A1-01), C-8/9, SECTOR - I, NOIDA - 201301 PH :4071900, 4071909, 4071931, 4071932, 4071209. 4071949/9582210152.
- 2285. ROHAN MOTORS LTD. (A102-A1-02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301 PH :4071900, 209,31,32/9582210152.
- 2286. FAIR DEAL PREMIUM WHEELS PVT.LTD. (A108-A1-01), D-39, SEC-10, NOIDA - 201301 PH:08448296694 & 09654326008.
- 2287. VIPUL MOTORS PVT. LTD. (A101-A1-02), B-124 & B-125, SECTOR 5, NOIDA, UTTAR PRADESH 201301 PH :4603100/28/33/8527835888.
- 2288. VIPUL MOTORS PVT. LTD. (A106-A1-01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301 PH :4758600/01/02/8448589759.
- 2289. MOTORCRAFT SALES PVT. LTD. (5903-A1-04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) -201305 PH:09818532222 & 09971733233.
- 2290. MOTORCRAFT SALES (5903-A1-5), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST, GB NAGAR. UP - 201306

ORAI

2291. S B CARS PVT.LTD (2806-LU-02), KANPUR ROAD, ORAI - 285001 PH :9307219303.

PADRONA

PH:8826312222.

2292. SMARTWHEELS PVT. LTD. (BGJ1-BGJ-01), AARJI NO. 37 & 38, MAUJA - BELWA MISRA, TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL -PADRAUNA, DIST.-KUSHINAGAR, UTTAR PRADESH. - 274304 PH :7705803259.

PAPHUNDA

2293. TANYA AUTOMOBILES (4802-SIB-05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206 PH :9917547777.

PEPPEGANJ

2294. ARBIT AUTOMOBILES PVT LTD (GKG1-GKG-01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165 PH :86544 12821

PII IRHIT

2295. CORAL MOTORS (P) LTD. (IL01-IL-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001 PH :9837891846

PRAYAGRAJ

- 2296. SARASWATI MOTORS (2904-29-01), PLOT NO 24, INDUSTRIAL AREA MNIT COLLEGE, TELIYARGANJ, PRAYAGRAJ, UTTAR PRADESH. 211004 PH :8090854053.
- 2297. BRIGHT 4WHEELS (2905-29-01), ARAZI NO 390 AND 389 AT KATKA, ANDAWA SAHSON BYPASS, PRAYAGRAJ - 211002 PH -0415324011

PURANPUR

2298. CORAL MOTORS (P) LTD. (CAD1-CAD-01), KHASRA NO. 768 & 770, UILAGE - KHAMRIYA PATTI, PURANPUR - PILIBHIT ROAD, TEHSIL AND PARGANA - PURANPUR, DIST. PILIBHIT. -262124 PH :9837891846. 9927001120.

RAIBAREILLY

2299. KTL AUTOMOBILE PVT. LTD. (HS07-HS-01), PLOT NO. 1550, GUILLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303 PH 7800001601

RAM SANEHI GHAT

2300. BRIGHT 4WHEELS (SDH1-SDH-01), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL - RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409 PH '9935757878

RAMNAGAR

301. BRIGHT 4 WHEEL SALES PVT. LTD. (BRK1-BRK-01), KHASRA NO. 629, VILLAGE -BUDHAWAL, TEHSIL - RAMNAGAR, DIST. -BARABANKI, UTTAR PRADESH. - 225205 PH -0935/7578A 9838075029

RAMPU

2302. AKANKSHA AUTOMOBILES PVT. LTD. (B401-6L-02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901 PH : 7895500007.

RAYA

2303. UMA MOTORS PVT. LTD. (BXK1-BXK-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204 PH. 9997683333, 9997511006.

ROBERTSGANJ

2304. STAR CAR (CTY1-CTY-01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231 216 PH:7052547903, 9721905002, 9151154306,

9450544961. SAHARANPUR

2305. ATELIER AUTOMOBILES PVT LTD (S202-S2-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001 PH:7500250070.

SAHIBABAD

- 2306. FAIR DEAL WHEELS PVT. LTD (08E1-M9-01), 12/67. SITE 4, INDUSTRIAL AREA, SAHIBABAD, GHAZIABAD - 110095 PH :4740409/102/436, 8860088659.
- 2307. MOTORCRAFT SALES PVT. LTD. (5903-M9-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010 PH :4172222 / 4102222, 09958562222 & 09560605122.
- 2308. T.R. SAWHNEY MOTORS PVT LTD (0819-M9-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA, DISTT- GHAZIHABAD, UTTAR PRADESH -201010 PH: 9999399152; 9999399143.

SALEMPUR

2309. SMARTWHEELS PVT LTD (GKA1-GKA-01), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUHHAULI, DISTT: DEORIA - 274509 PH:7705800602, 7705803321.

SALON

2310. KTL AUTOMOBILES (SCP1-SCP-01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH -229127 PH 9018451222

SAMBHAL

2311. AKANKSHA AUTOMOBILES PVT. LTD. (BBP1-BBP-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302 PH :7248000028.

SANDIL

2312. CONCEPT CARS PVT. LTD. (WY01-WY-01), PLOT NO.371, SARAY MARUFPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204 PH:8756000000, 7607696666.

SHAHABAD

2313. CONCEPT CARS PVT. LTD. (AAX1-AAX-01), VILLAGE MUJAGADH, SHAHABAD - 241124 PH:8756000000, 7607696666.

SHAHJAHANPUR

2314. SUMITRA DS MOTORS PVT LTD (W201-W2-01), SITAPUR ROAD, NH-24, SHAHJAHANPUR -242001 PH:7522888333, 9415770000.

SHAMLI

2315. RADHA GOVIND AUTOMOBILES PVT. LTD. (XJ01-XJ-01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776 PH:8979862084, 7535007010.

SHIKOHABAD

2316. MADHUSUDAN VEHICLES PRIVATE LTD.
(XH01-XH-01), 2508, KATRA MIRA,
MAHAMMABAD, OPP PROFESSOR COLONY, NH
2, BYE PASS ROAD, SHIKOHABAD, DISTT:
FIROZABAD, UTTAR PRADESH - 283203
PH :9837097894,9890003001.

SIDHAULI

2317. CONCEPT CARS PVT. LTD. (BFO1-BFO-01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHIDI, OPP. BLOCK, SIDHAULI, SITAPUR. - 261303 PH:760759666.

SITAPUR

2318. CONCEPT CARS PVT. LTD. (QE01-6M-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001 PH .760769666. 875600000.

SUI TANPUR

2319. KIRTIKUNJ AUTOMOBILES PVT. LTD. (N101-N1-01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001 PH:227760, 220107.

SWAR

2320. AKANKSHA AUTOMOBILES PVT. LTD. (CQX1-CQX-01), IN FRONT OF EIDGAH, TEHSIL – SWAR, DISTRICT – RAMPUR, UTTAR PRADESH. -244924 PH.7900600041.

THAKURDWARA

2321. AKANKSHA AUTOMOBILES PVT. LTD. (KO01-KO-01), 2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHAB GANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH-244601 PH:7248000040.

TILOI

2322. KTL AUTOMOBILE PVT. LTD. (CGY2-CGY-01), VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. -229309 PH 99184512222

UJHANI

2323. ETERNITY MOTORS LLP (GJK1-GJK-01), BADAUN BYE PASS ROAD, UJHANI - 243639 PH :94122 89074.

UNCHAHAR

2324. KTL AUTOMOBILE PVT. LTD. (IH02-IH-01). ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHAR, DISTT: RAIBARELI - 229404 PH. 99184512222.

JNNAO

2325. S B CARS (2806-KL-04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.P. - 209801 PH -939806451

VARANASI

- 2326. VARANASI MOTORS PVT. LTD. (8402-84-01), THE MALL, CANTONMENT, VARANASI 221001 PH :2509068, 2509069.
- AGR AUTOMOBILES PVT. LTD. (8403-84-01),
 B-38/2A, MAHMOORGANJ, GOPAL VIHAR,
 VARANASI 221010
 PH :2360436.
- VARANASI MOTORS PVT. LTD. (8402-84-03),
 AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR,
 MOHANSARAI, RAJATALAB, VARANASI (U.P.) 221311
 PH. 2632786, 9838360662.
- 2329. AGR AUTOMOBILES PVT. LTD. (8403-84-04), ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112 PH - 98R9R 01355

UTTARAKHAND

ALMORA

2330. NAINITAL MOTORS PVT LTD (J603-SQ-04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601 PH :9997194132.

BAGESHWAR

2331. NAINITAL MOTORS PVT LTD (J603-8I-05), VILL. BILOMA, SERA, BAGESHWAR, UT, BAGESHWAR - 263642 PH :9557200522.

BAZPUR

2332. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CGU2-CGU-01), KHASRA NO. 99/2, VILLAGE – BHONA, ISLAM NAGAR, TEHSIL – BAZPUR, UTTARAKHAND. - 262401 PH :8924400544 8191000204

CHAMPAWAT

2333. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SF02-SF-01), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523 PH :8929400545, 8191000832

CHAUKHUTIYA

2334. NAINITAL MOTORS PVT LTD (CVG1-CVG-01), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST. -ALMORA, UTTARAKHAND - 263656 PH :9997026565.

DEHRADUN

- 2335. ROHAN MOTORS LTD. (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001
- PH :0135-2530050, 0135-2531097, 7217014647.
 2336. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (5707-57-01), 918/221, PATEL NAGAR INDUSTRIAL AREA, DEHRADUN 248001, PH -9388193007
- ROHAN MOTORS LTD. (5702-57-02), 257/2, GMS ROAD,,WILL NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001 PH :0135-2725376, 0135-2720342, 7217014647.
- 2338. FUTURE AUTO WHEELS PVT LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001 PH :0135-2640263, 7895956011.
- 2339. FUTURE AUTO WHEELS (5706-57-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001 PH: 9760444430.

DOIWALA

2340. FUTURE AUTO WHEELS PVT LTD (BRI1-BRI-01), 26, MISSARAWALA, DOIWALA, DISTRICT – DEHRADUN, UTTARAKHAND. - 248140 PH.7883473506.

GADARPUR

2341. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVS1-CVS-01), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152 PH: 3929400545, 9917467845.

GAIRSAIN

2342. ROHAN MOTORS LTD (CRH1-CRH-01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT – CHAMOLI, UTTARA KHAND. - 246428 PH :8126484626.

GOPESHWAR

2343. ROHAN MOTORS LTD. (5702-MV-03), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028 PH:9634852898.

HALDWANI

- 2344. NAINITAL MOTORS PVT LTD (J603-J6-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139 PH :7060201024.
- 2345. NAINITAL MOTORS PVT LTD (J603-J6-02), KALA DUNGI, NEAR ABDULLAH PETROL PUMP, HALDWANI - 263139 PH: 8126359222

HARIDWAR

2346. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-6N-01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407 PH -9027870025 8869064400

JASPUR

2347. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (BKL2-BKL-01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712 PH: 3192000724.

KARANPRAYAG

2348. ROHAN MOTORS LTD (CRG1-CRG-01), BADRINATH ROAD, KARANPRAYAG, DISTRICT – CHAMOLI, UTTARAKHAND. - 246444 PH :8126129148.

KASHIPUR

2349. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (DG02-DG-01), BAZPUR ROAD, KASHIPUR -244713 PH -8020400544 -8859502626

KHATIMA

2350. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (XLO2-XL-01), VILLAGE: CHARUBETA, NEAR RTO CHECK POST, PILIBHIT ROAD KHATIMA, U.S NAGAR, UTTRAKHAND - 262308 PH :8924400545. 8191000565.

KOTDWAR

2351. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-2I-02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001 PH:8755998075, 7310106565.

NANAKMATA

2352. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVT1-CVT-01), KHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATTA, U.S. NAGAR, UTTARAKHAND. - 262311 PH -9012172084

PITHORAGARH

2353. NAINITAL MOTORS PVT LTD (J603-NM-03), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501 PH: 3634032692.

RAMNAGAR

2354. NAINITAL MOTORS PVT LTD (XM01-XM-01), BASAI, KASIPUR ROAD, RAMNAGER - 244137 PH:9639016895, 9634093404.

ANIKHET

2355. NAINITAL MOTORS PVT LTD (AXA1-AXA-01), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTARAKHAND) - 263645 PH 9577243222

RISHIKESH

2356. FUTURE AUTO WHEELS PVT LTD (AAS1-AAS-01), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201 PH:0135-2432387, 7895614411.

ROORKEE

2357. SHAKUMBARI AUTOMOBILES (P.) LTD (H201-H2-01), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARDWAR: 247667 PH: 7055104191

RUDRAPRAYAG

2358. ROHAN MOTORS (IK01-IK-01), GULABRAI-BADRINATH ROAD, RUDRAPRAYAG -246171 PH -8850876815

RUDRAPUR

2359. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U404-U4-01), KICHHA BYE PASS ROAD, INDUSTRIAL AREA, RUDRAPUR - 263153 PH :8929400545, 8859502864.

SELAQU

2360. ROHAN MOTORS LTD (CRF1-CRF-01), KHASRA NO.783, BAHADURPUR ROAD, NH-72, SELAKUI, DISTT.-DEHRADUN, UTTARAKHAND. - 248011 PH:8006000439.

SITARGANJ

2361. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CD02-CD-01), PLOT NO.228/5 AND 228/6 KHATIMA ROAD, SITARGANJ, DISTT -RUDRAPUR, UTTARAKHAND. - 262405 PH.8829400545. 8859502846.

SRINAGAR

2362. SHAKUMBARI AUTOMOBILES (ANA1-ANA-01), SRICOT GANAGANALI , NEAR MEDICAL COLLEGE, PO- SRICOT, SRINAGAR - 246174 PH :8755903005 9897476897

TFHRI

2363. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (QA02-QA-01), PLOT NO. 541, SECTOR-8E, DISTT. - NEW TEHRI - 249001 PH :8006000914.

UTTARKASHI

2364. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (6102-61-01), HOTEL RAMOLA, BARETHI CHUNGI, GANGOTRI NATIONAL HIGHWAY, UTTARKASHI. - 249151 PH: 8006000922.

WEST BENGAL

ALIPURDUAR

2365. PODDAR CAR WORLD PVT. LTD. (BZO1-BZO-01), BIRPARA MORE, COOCH BEHAR ROAD, BESIDE GOYENKA PETROL PUMP, ALIPURDUAR, WEST BENGAL - 736121 PH: 8845533002 9735008343

AMTALA

2366. BHANDARI AUTOMOBILES PVT LTD (BQH1-BQH-01), VILLAGE - UDAYRAMPUR, P.O. -KANYANAGAR, P.S. - BISHNUPUR, AMTALA, DIST. -24 PARGANAS SOUTH, WEST BENGAL - 743 398 PH. 9903850402.

ARAMBAGH

2367. SANEI MOTORS PVT. LTD. (7702-77-01), R.S. DAG NO. 1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO. 123, MOUZA-PARUL, JL.NO. 38, R.S.NO. 3111, P.S. ARAMBAGH, DISTT. HOOGHLY, WEST BENGAL - 712601 PH .8584050184.

ASANSOL

2368. BEEKAY AUTO PVT LTD (F601-F6-01), CHANDA MORE, N.H.-2, ASANSOL - 713301 PH :9932049425, 9932049425

ASHOKNAGAR

2369. STARBURST MOTORS PVT LTD (BXJ1-CLB-03), JESSORE ROAD, MANIKNAGAR, KHOSDELPUR MORE, P.S. – ASHOKNAGAR, NORTH 24 PARGANAS, WEST BENGAL. - 743222 PH :8697731763. 8336933447.

BAGDAH

2370. SANEI MOTORS PVT. LTD. (BON1-BON-01), C/O, DINABANDHU TARAFDAR, S/O LATE NARENDRANATH TARAFDAR, VILLAGE – HALENCHA SOUTH, P.O. – HALENCHA COLONY, P.S. – BAGDAH, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL. - 743270 PH: 3584050184.

BAHRAMPUR

2371. BEEKAY AUTO PVT LTD (DJ02-DJ-01), BOKULTALA (PASCHIM GAMINI), NH-34, BAHARAMPUR, DISTT. MURSHIDABAD. - 742101 PH:267340.

BAJKUL

2372. BHANDARI AUTOMOBILES PVT LTD (CAV1-CAV-01), VILLAGE – KAPTYAPA BARI, P.O. – KAJLAGARH, P.S. – BHAGWANPUR, BAJKUL, DISTRICT – PURBA MIDNAPORE. - 721626 PH: 993055539.

BALAGARH

2373. SANEI MOTORS PVT. LTD (BMI1-BMI-01), DAG NO. 671, MOUZA - BARUIPARA, J L NO. 100, P.O. - BALAGARH, DIST.-HOOGLY, WEST BENGAL -712 501 PH :8584050184

BALURGHAT

2374. J K WHEELS PVT. LTD. (PT01-PT-01), BARO RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. -BALURGHAT, DIST.-DAKSHIN DINAJPUR. - 733 103 PH 9064301464.

BANKURA

2375. BHANDARI AUTOMOBILES PVT LTD (G701-60-02), PLOT NO.-156, KH NO.-173, MITHILA MOUZA, AT/PO-BANKURA (WB) - 722101 PH :256766.

BARASAT

2376. PREMIER CARWORLD PVT. LTD. (X203-X2-01), R. S DAG NO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, J.L NO. 4, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700125 PH 4820122407

BARDHAMAN

2377. BEEKAY AUTO PVT LTD (T301-T3-03), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL -713101 PH :9932049454.

BARJORA

2378. BHANDARI AUTOMOBILES PVT LTD (BED1-BED-01), VILLAGE + P. O. + P. S. -BARJORA, MOUZA - BARJORA, JI. NO. 46, KHATIAN NO. 3380, PLOT NO. 2795, BARJORA DISTRICT - BANKURA, WEST BENGAL. - 722202 PH: 8016087297.

BARRACKPORE

2379. STARBURST MOTORS PVT LTD (BXJ1-CIY-02), NEAR RAIL GATE, WARD NO. 24, WEST BARASAT ROAD, P.S. – TITAGARH, BARRACKPORE, DISTRICT – NORTH 24 PARGANAS, KOLKATA. - 700120 PH 9338061333

BARSUNDRA

2380. BHANDARI AUTOMOBILES PVT LTD (G701-BJW-05), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE. WEST BENGAL - 721654 PH. 9933055539.

BASIRHAT

2381. BHANDARI AUTOMOBILES PVT LTD (X701-0D-03), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. - 743428 PH-8017560780

BELACOBA

2382. PODDAR CARWORLD (SCU1-SCU-01), PRASANNA NAGAR, BELACOBA, BATTALA, JALPAIGURI - 735133 - 735133 PH :8945533002.

BISHNUPUR

2383. BHANDARI AUTOMOBILES PVT LTD (AAG1-AAG-01), STATION ROAD, P.O+P.S-BISHNUPUR, DIST: BANKURA, WEST BENGAL -722122 PH: 9933055539.

BOLPUR

2384. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-TC-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM-731204 PH:9647444888 8027985511

BONGAON

2385. STARBURST MOTORS PVT LTD (TQ02-TQ-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235 PH : 9748238939.

BUDGE BUDGE

2386. ONE AUTO PVT. LTD. (BAV1-BAV-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141 PH :8584878802

C K ROAD

7604084762

2387. BHANDARI AUTOMOBILES PVT LTD (D001-D0-01), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252 PH :9933055539

CHAKDAHA

2388. BHANDARI AUTOMOBILES PVT LTD (OM01-OM-01), VILLAGE – PUMLIA, P.O. – CHAKDAHA, DISTRICT – NADIA, WEST BENGAL. -741222 PH. 9073940368, 9674735303, 9674169007.

CHANDITALA

2389. BHANDARI AUTOMOBILES PVT LTD (BPC3-BPC-01), RS DAG NO.2986, LR DAG NO. 3150, UNDER L R KHATIAN NO.3859, MOUZA-KRISHNARAMPUR, J.L. 59, POLICE STATION-CHANDITALA, HOOGHLY, WEST BENGAL -712702 PH +87989001498

CHANDRAKONA

2390. BHANDARI AUTOMOBILES PVT LTD (D001-CIP-02), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, JL.NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201 PH -9846569833

CONTAI

2391. BHANDARI AUTOMOBILES PVT LTD (G701-GV-03), SERPUR BAMUNBAR,P O-MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401 PH : 254572.

COOCH BEHAR

2392. PODDAR CAR WORLD PVT. LTD.
(BWZ1-EWZ-01), CHAKCHAKA, NEELKUTHI
BAZAR, NEAR ADA FACTORY, NH-31, COOCH
BEHAR, WEST BENGAL. - 736101
PH :8945533002
9735008343

DARJEELING

2393. BEEKAY AUTO PVT LTD (4301-6U-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101 PH :9932049347 9932049382 7478004430

DHUPGURI

2394. BEEKAY AUTO PVT LTD (BWD1-BWD-01), MOUZA – DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT – JALPAIGURI, WEST BENGAL. - 735210 PH. 7477785203 9932049347 9932049382 7478004310

DIAMOND HARBOUR

2395. ONE AUTO PVT. LTD. (YE01-YE-01), VILLAGE – CHEWRA, OPPOSITE – K.E. CARMEL SCHOOL, P.O. – SARISHA HAT, P.S. – DIAMOND HARBOUR, DISTRICT – 24 PARGANAS (S), WEST BENGAL. - 743368
PH :8584862243.

DURGAPUR

2396. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213 PH :9647444888 8027895511

FALAKATA

2397. PODDAR CAR WORLD PVT. LTD.
(CSR1-CSR-01), DAKSHIN PARANGAPAR,
KHATIAN NO. 1671 JI. NO. 60, DAG NO.
652/1159, P.S. – FALAKATA, DISTT
ALIPURDWAR - 735211
PH :8945533002

GHATAL

2398. BHANDARI AUTOMOBILES PVT LTD (AAD1-AAD-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL WEST MIDNAPORE, WEST BENGAL - 721211 PH :9933055539.

GOPIBALLAVPUR

2399. BHANDARI AUTOMOBILES PVT LTD
(BPQ1-BPQ-01), JL NO. 1103, KHATIAN NO. 1103,
PLOT NO. 438, VILLAGE + P.O. + P.S. –
GOPIBALLVPUR, MOUZA – GOPIBALLVPUR,
WEST MIDNAPUR, WEST BENGAL. - 721506
PH 1933055539 8170018577.

HALDIA

2400. BHANDARI AUTOMOBILES PVT LTD (G701-SE-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657 PH:8016082344, 9233502421.

HOWRAH

2401. BHANDARI AUTOMOBILES PVT LTD (X701-X7-01), BANKRA THANA,DOMJUR,HOWRAH. - 711403 PH:9674735304.

2402. PREMIER CARWORLD PVT. LTD. (0611-X7-02), MOUZA - PRASASTHA, P.S. - DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYAT, ANKURHATI, HOWRAH, WEST BENGAL. - 711302 PH :8420122402.

JALPAIGURI

2403. PODDAR CAR WORLD PVT. LTD. (XY01-XY-01), COLLEGE PARA, SIRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101 PH:8945533002.

JAYGAON

2404. SEVOKE MOTORS PVT. LTD. (CHS1-CHS-01), HOUSE NO.43, WARD NO.11/22, N.S ROAD DARAGAON, P.S - JAYGAON, DISTT. ALIPURDUAR, WEST BENGAL - 736182 PH -9433825851.

JHARGRAM

2405. BHANDARI AUTOMOBILES PVT LTD (BUG1-BUG-01), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507 PH:8016087297. 9933055539.

KADAMBAGACHI

2406. STARBURST MOTORS PVT LTD (BXJ1-CTE-04), MOUZA - PURBA (CHAPUR, J L NO. 111, RESU NO. 131, DAG NO. 385, KHATIAN NO. L R 754, KADAMBAGACHI, P.S. - BARASAT, DIST.-NORTH 24 PARGANAS, WEST BENGAL. - 700125 PH: 8336933410.

KALIMPONG

2407. BEEKAY AUTO (BWF1-BWF-01), 10TH MILE, GUMBA HATTA, PO&PS -KALIMPONG, DIST -KALIMPONG, WB. - 734301 PH -9932049347

KALNA

2408. BEEKAY AUTO PVT LTD (WZ01-WZ-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409 PH: 9932251483.

KALYANI

2409. STARBURST MOTORS PVT LTD (IJ01-IJ-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S COLLEGE), KALYANI. - 741234 PH:8584040215, 8336933447.

KESHPUR

2410. BHANDARI AUTOMOBILES PVT LTD (CCM1+CCM-01), JL NO. 338, KHATIAN NO. 786/2, PLOT NO. 1749, MOUZA – KESHPUR, VILLAGE + P.O. + P.S. – KESHPUR, WEST MIDNAPUR, WEST BENGAL. - 721150 PH 721150, 8170014289

KHARAGPUR

2411. BHANDARI AUTOMOBILES PVT LTD (G701-G7-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL -721301 PH :755537.

KHATRA

2412. BHANDARI AUTOMOBILES PVT LTD
(BG2T-BG2-01), VILLAGE - SENAPATI, P.O & P.S
- KHATRA, MOUZA-SENAPATI, JI, NO. 189,
KHATIAN NO.659, PLOT NO.33/34, DISTT.
BANKURA, WEST BENGAL. - 722140
PH. 1983055539.

KOLKATA

2413. MACHINO TECHNO SALES LTD. (0601-06-02), 48 A, TARATALA ROAD, KOLKATA - 700066 PH:9073330177

2414. DEWAR'S GARAGE (0605-06-01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUITIA - 700069 PH 3584015205

2415. MACHINO TECHNO SALES LTD. (0601-06-01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA -700017

PH:9073330178.

2416. PREMIER CARWORLD PVT. LTD. (0611-06-01), AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058 PH:8697730344.

2417. BHANDARI AUTOMOBILES PVT LTD (0609-06-01), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL - 700143 PH :9674476000.

2418. BHANDARI AUTOMOBILES PVT LTD (0609-06-02), 37, GULAM JILANI KHAN ROAD, KOLKATA. -700039

PH :9903850402. 2419. SANEI MOTORS PVT. LTD. (0612-06-01), 16/2

CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION,KOLKATA - 700067 PH:8584050184.

2420. ONE AUTO PVT. LTD. (0614-06-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA, WEST BENGAL - 700105 PH:8584878802. 2421. ONE AUTO PVT. LTD. (0614-06-01), JL NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADAHA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099 PH:8584870725.

2422. DEWAR'S GARAGE (0605-06-03), P-27/2, TARATALA ROAD, KOLKATA - 700088 PH :858/015293

2423. SANEI MOTORS PVT LTD (0612-06-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059 PH: 8584050184

2424. OSL MOTOCORP PVT LTD (0616-06-01), 49
DEBENDRA CHANDRA DEY ROAD, LANE BESIDE
SILVER SPRING CLUB, E.M. BYE-PASS,
KOLKATA - 700015
PH :8336996335
8697982283.

KOTULPUR

2425. BHANDARI AUTOMOBILES PVT LTD (BIP1-BIP-01), KHATIAN NO.644, PLOT NO.373, JL NO. 101, VILLAGE - MULDARA, P.S. + P.S. -KOTULPUR, DISTT.-BANKURA, WEST BENGAL. -722141

PH:9933055539. KRISHNANAGAR

2426. BHANDARI AUTOMOBILES PVT LTD (X701-GS-02), PLOT NO.-1874, MOUZA-GOBINDSARK, J.K. NO. 94, PS-KOTWAL, OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011 PH :9051999742.

MADHYAMGRAM

2427. STARBURST MOTORS PVT LTD (BXJ1-BXJ-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129 PH :9836075989, 8336933447.

MALBAZAR

2428. BEEKAY AUTO PVT LTD (BWG1-BWG-01), CALTEX MORE, VILLAGE + P.S. – MALBAZAR AND DISTRICT – JALPAIGURI . - 735221 PH :9932049347 9932049382 7478004430 7477785203.

MALDA

2429. J K WHEELS PVT. LTD. (L801-L8-01), GABGACHHI, N.H. 34, MALDA, - 732103 PH:9851520855.9735003949.

MATHABHANGA

2430. BEEKAY AUTO PVT LTD (BQF1-BQF-01), SITAKULCHI ROAD, WARD NO.9,MATHABHANGA, DISTRICT – COOCHBEHAR. - 736146 PH.7477785202 9932049347 9932049382 7478004430.

MOHANPUR

2431. BHANDARI AUTOMOBILES PVT LTD (CIV1-CIV-01), VILLAGE-NAYAGAON, P.O.-PAROI, P.S.-MOHANPUR, MOUZA - NAYAGAON, JL NO.395, KHATIAN NO.175/1, PLOT NO.895, DISTT.-PASCHIM MIDNAPUR,W.BENGAL. -721436 PH.9933055539.

NAIHATI

2432. PREMIER CARWORLD PVT. LTD. (YD01-YD-01), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. -JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) -743123 PH.801700824.

NAKASHIPARA

2433. BHANDARI AUTOMOBILES PVT LTD
(BMJ1-BMJ-01), L R DAG NO. 7271, UNDER L R
KHATIAN NO. 6734, MOUZA - DEBAGRAM, J L NO.
60, POLICE STATION - KALIGANJ, BLOCK KALIGANJ, NAKASHIPARA, DIST.-NADIA, WEST
BENGAL. - 741138
PH. 19163314418.

NAXALBARI

2434. BEEKAY AUTO PVT LTD (CSJ1-CSJ-01), MOUZA - GENI, KHATIAN NO.275. PARGANA-HATIGHISHA, P. S. NAXALBARI, DISTT. DARJEELING, WEST BENGAL - 734429 PH:9932049347 9932049382 7478004430 9683370004

PANCHLA

2435. BHANDARI AUTOMOBILES PVT. LTD.
(BPI1-BPI-01), LR DAG NO 3274, UNDER L.R
KHATIAN NO 3044, MOUZA-MALLICKBAGAN, JL
NO-7, POLICE STATION – PANCHLA, DISTHOWRAH - 711310
PH :9073664926.

PANDUA

2436. BHANDARI AUTOMOBILES PVT LTD
(BOS1-BOS-01), GT ROAD, PANDUA, NEAR
KAKOLI CINEMA HALL, OPP. POWER HOUSE,
HOOGLY, WEST BENGAL. - 712149
PH.9073912566.

PANSKURA

2437. BHANDARI AUTOMOBILES PVT LTD (BPS1-BPS-01), MOUZA – PASCHIM NEKRA, JL NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL - 721139 PH 9933055539

PURULIA

2438. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-6W-02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149 PH :9647444888 8827895511.

RAGHUNATHPUR

2439. BEEKAY AUTO PVT LTD (CKZ1-CKZ-01), MOUZA – BUNDLA, JL. NO. 197, PLOT NO. 2656, KHATIAN NO. LR 207, P.O. – RAGHUNATHPUR, P.S. – RAGHUNATHPUR, DISTRICT – PURULIA. - 723133
PH :9932049425, 9932049435.

RAIGAN.

2440. J K WHEELS PVT. LTD. (BN02-BN-01), JL NO.
150, KHATIAN NO. 168/3 & 168/4, PLOT NO.
4158, P.S. - RAIGANJ, MUNICIPALITY –
RAIGANJ, WARD NO. 11, HOLDING NO. 577/N
MOUZA - RAIGANJ, DISTRICT – UTTAR
DINAJPUR, - 733134
PH : 9735008842

RAJARHAT - KOLKATA

2441. STARBURST MOTORS PVT LTD (BXJ1-06-05), R.S & L.R. DAG NO. 3434, MOUZA- GOPALPUR, JL NO. -02, RS NO. -140, LR KHATIAN NO. -5638, NEW TOWN, RAJARHAT - 700136 PH :9881080301.

RANAGHAT

2442. STARBURST MOTORS PVT LTD (BBW1-BBW-01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741256 PH :8145821191. 8584040215.

RUPNARAYANPUR

2443. BEEKAY AUTO PVT LTD (BWS1-BWS-01), P.S. – SALANOUR, UNDER MOUZA – JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHAITAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335 PH. 9932049425

SABANG

2444. BHANDARI AUTOMOBILES PVT LTD (CCL1-CCL-01), VILLAGE - PAIKAN DAKSHIMBARH, P.O. - DHANSWARPUR & P.S. -PINGLA, DIST.-PASCHIM MIDNAPORE, SABANG-721 166, WEST BENGAL. - 721166 PH :9933055539.

SEORI

2445. BEEKAY AUTO PVT LTD (F601-KC-02), RAMBADANPUR, NEAR SP MORE, DIST-BIRBHUM, SEORI - 731101 PH :9932049425, 9932049406.

SHYAMPUR

2446. SANEI MOTORS PVT LTD (CAW1-CAW-01), VILLAGE + P.O. – GOBINDAPUR, P.S. – SHYAMPUR, DISTRICT – HOWRAH, WEST BENGAL. - 711314 PH:8584050184.

SILIGURI

2447. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA,SILIGURI. - 734428 PH -9932049347 9932049382 7478004430

2448. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001 PH :9932049347 932049380

2449. SEVOKE MOTORS PVT. LTD. (4302-43-01), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001 PH:9706010366.

2450. PODDAR CAR WORLD PVT LTD (XY01-43-02), VILL. EAST DHANTALLA, FULBARI II G.P. P.O SATELLITE TOWNSHIP, DIST- JALPAIGURI -734015 PH:8945533002.

SONADA

2451. SEVOK (SDX1-SDX-01), RATO MATEY DARA, NEAR PETROL PUMP,P.O- SONADA, WEST BENGAL PIN - 734209 - 734209 PH-9800069144.

SONAMUKHI

2452. BHANDARI AUTOMOBILES PVT LTD (CAU1-CAU-01), JL NO. 77, KHATIAN NO. 360, PLOT NO. 114/287, SONAMUKHI BISHNUPUR ROAD, VILLAGE - CHURAMANIPUR, P.O. & P.S. -SONAMUKHI, WEST BENGAL - 722207 PH. 1933055539.

SREERAMPORE (SREERAMPUR)

2453. BHANDARI AUTOMOBILES PVT LTD (BBT1-BBT-01), BANGIHATI (MADPUR) DELHI ROAD, SREERAMPUR, DISTT: HOOGHLY, WB -712203 PH :66137505 :66137585 :9674741544

TAMLUK

2454. BHANDARI AUTOMOBILES PVT LTD (OL01-OL-01), MOUZA PADUMBASAN, WARD NO 10, JL NO:144, DISTT: EAST MIDNAPUR, WEST BENGAL - 721636 PH: 9933055539.

TARAKESHWAR

2455. SANEI MOTORS PVT. LTD. (YH01-YH-01), MOUZA BAIDYAPUR, UNDER BALIGORI(1), GRAM PANCHAYET, TARAKESHWAR, DISTT. HOOGLY, WEST BENGAL. - 712410 PH 3854050184

UDAYNARAYANPUR

2456. BHANDARI AUTOMOBILES PVT LTD
(BOO1-BOO-01), VILLAGE-JANGALPARA
BELGRAM, PS- UDAYNARAYANPUR, DISTHOWRAH, WEST BENGAL - 711226
PH 9073664902

ULUBERIA

2457. BHANDARI AUTOMOBILES PVT LTD (2401-24-01). HOLDING 1242A, BANITABLA, P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH, WEST BENGAL - 711316 PH :8335052335

ANDHRA PRADESH

ANANTHAPUR

SRI DURGA (1BNA-1B-01), NO 124 SOMAL ADODDI. ANANTHAPUR. ANDRA PRADESH - 515004 DH -0885183851

GUNTUR

JAYLAXMI (G5NA-G5-01), D-NO:199/2. OPP.AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001 PH:9959844644.

NELLORE

BHARGAVI AUTO (A8NA-A8-01), SURVEY NO 245B, CHEMUDUGUNTA VILLAGE, NH-16, ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002 PH:8886682222.

ONGOLE

JAYALAXMI (8YNA-8Y-01) SURVEY NO:194/2 BESIDE NH 5 MUKTHINUTHALAPADUL ONGOLE ANDHRA PRADESH - 523225 - 523225 PH -9492133433

RAJAHMUNDRY

SB MOTORS (C5NA-C5-01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDRY, ANDRAPRADESH-533106. - 533016 PH:9248727888.

SRIKAKUI AM

VARUN MOTORS (W6NA-W6-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIKAKULAM DISTRICT, ANDHRA PRADESH - 532401 PH:9885317344.

VIJAYAWADA

- VARUN MOTORS (26NA-26-01), OPP TO PRIYA PICKLES BANDAR ROAD PORANKI VIJAYAWADA, ANDRAPRADESH-521137. -521137 PH :6309955655
- PARAMSHIVA MOTORS (26NB-26-01), NO. 20-1-34 C.K.REDDY ROAD, AYODHYA NAGAR VIJAYAWADA ANDRAPRADESH-520003 -520003 PH -9866551078

ASSAM

BONGAIGAON

BHARATI MOTORS (7NNA-7N-01), CHAPAGURI RD. NEAR POST OFFICE, NORTH BONGAIGAON AMGURI, BONGAIGAON, ASSAM 783380 - 783380 PH:7002350887.

DIBRUGARH

VISHAL CAR WORLD (C1NA-C1-01), MOHPUALIMORA GOHAIN GAON, A T ROAD DIBRUGARH ASSAM - 786008 PH:8000900008

GUWAHATI

PODDAR AUTO (09NA-09-01), AT ROAD .KAMAKHYA GATE ,GUWHATI ,KAMRUP-781009 -781009

PH:8085957586.

BIMAL AUTO (09NB-`09-01), DREAMLAND APPARTMENT.NAHRANI PATH, DISPUR LAST GATE, GUWAHATI - 781006 (ASSAM) - 781006 PH -9864074525

JORHAT

RD MOTOR (G9NB-G9-01), M/S R D MOTORS PVT LTD , DHAPKATA, NEAR TINALI, JORHAT -785006 - 785006 PH:7002099547.

SILCHAR

JAIN UDHYOG (J2NA-J2-01), R.S. PATTA NO.149. DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH -9436121557

TEZPUR

RD MOTOR (T1NA-T1-01), SOLAGAN VILLAGE, GOROIMARI, SONABEEL, BEFORE MAA KALYANI PETROL PUMP, TEZPUR -784105 -784105 PH:9836872710.

TINSUKIA

VISHAL CAR WORLD (J4NA-J4-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD), A.T. ROAD, LAIPULI, TINSUKIA, ASSAM -786183 - 786183 PH:9864211022.

BIHAR

ΡΔΤΝΔ

- ALANKAR AUTOMOBILES (15NA-15-01). OPP.RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002 PH:9199427707.
- REESHAV AUTOMOBILES (15NB-15-01), MUKDUMPUR, DIGHA, 90 NO GATE, PATNA -800012 PH:7369944132.

PURNEA

SIMANCHAL (6VNA-6V-01), DAMKA CHOWK, KISHANGANJ ROAD. NH-31,GUALBBAGH,PURNEA,BIHAR - 854326 PH:9334710055.

CHANDIGARH

CHANDIGARH

20. AUTOPACE (FEB) (07NA-07-01), PLOT NO. 37, INDUSTRIAL AREA - PHASE 1 CHANDIGARH -160002 PH:7087119861

NAVDESH AUTO (07NF-07-01). PLOT NO 182/11. INDUSTRIAL AREA PHASE 1. CHANDIGARH -160002 PH :8827057534

CHATTISGARH

AMRIKAPUR

MAHAMAYA (AENA-AE-01), AJAB NAGAR, MAHATHMA GANDHI ROAD, AMBIKAPUR -497001 PH:9516609632.

BILASPUR

23. SATYA AUTOMOBILES (C3NB-C3-01), PLOT NO 53 SECTOR C. SIRGITTI INDUSTRIAL AREA BILASPUR CHHATTISGARH - 495001 PH:6372803057

RAIPUR

DELHI

- SPARSH (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDIH, TATIBANDH, RAIPUR, CHATTISGARH - 492029 PH -9926626662
- SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI ,G. E. ROAD, RAIPUR -492001 PH:9425204051.

DELHI

26. RANA MOTORS (08NE-08-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI - 110020 PH:7290030289.

9290030288

- TR SAWHNEY (08NN-08-01) C-46 OKHLA INDUSTRIAL AREA PHASE 2 OKHLA NEW DELHI - 110020 PH -9953350008
- PLATINUM MOTORS (08NO-08-01) PLOT NO-H4 BLOCK-B1 MOHAN CO-OPERATIVE INDEX.MATHURA ROAD.PIN-110044 - 110044 PH -9811386000 8860200000
- MAGIC AUTO (08NA-08-01), CISF GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH -9873052000
- AAA VEHICLEADES (08NW-08-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH:8750611111.

- COMPETENT AUTO (08NF-08-01), PLOT NO-34 RAJASTHAN UDYOG NAGAR, GT AKRNAI ROAD DELHI - 110033 PH 9932049425
- JAGMOHAN MOTORS (08NX-08-01) C133-136(PART PHASE LINDUSTRIAL AREA MANGOLPHIRIS BLOCK NEW DELHI DELHI 110083 - 110083 PH:9812259000.

GOA

MARGAON (GOA)

CHOWGULE INDUSTRIES (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAIA, SALCETE - (GOA) - 403720. - 403720 PH:9850966950.

PORVORIM(PANJIM)

SAI SERVICE (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR SURVEY NO. 114/2 SALVADOR DO MUNDO, PORVORIM, BARADEX. GOA - 403521 PH -022-61841111 8291941070

GUJARAT

AHEMADABAD

- 35. STAR LINE CARS (01NE-01-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330 PH:7436003235
- PEGASUS (01NG-01-01), PLOT NO 9, OPP RABARI COLONY BRTS STOP, CTM, NAROL -NARODA HIGHWAY, NH-8, AHMEDABAD, GILIARAT - 380026 PH -9909023000
- POPULAR WHEELERS (01NC-01-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT - 380009 PH:9925203344.

ANAND

AMAR CARS (E7NA-E7-01) SURVEY NO 1583 PLOT NO 144 NEAR GANESH CROSSING ANAND SOJITRA ROAD, ANAND, GUJARAT -388001 PH -9925407666

BHARUCH

RAVIRATNA (F8NA-F8-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. -392001 PH:9727700823.

BHUJ

 KD MOTORS (P5NA-P5-01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPAR HIGHWAY, BHUJ - 370040 PH :9879898799

GANDHIDHAM

41. BM AUTO LINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH , GUJARAT -370201 PH :7211120014.

GANDHINAGAR

42. NANDA AUTOMOBILES (2BNA-2B-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT. - 382421 PH : 9887641974.

GODHRA

 RB CARS (2CNA-2C-01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001 PH -9925051444

JUNAGARH

 PERFECT AUTO SERVICES (K8NA-K8-01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037 PH:9909022619.

MEHASANA

 STAR LINE CARS (D1NA-D1-01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE RAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002 PH.7211138986, 7211138987.

PATAN

 STARINE CARS (Q9NA-Q9-01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT)
 -382465 - 382465
 PH -9000043244

RAJKOT

 PERFECT AUTO SERVICES (55NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT-360004 PH:9512035501.

SURAT

- KIRAN MOTORS (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJRAT -395009 - 395009 PH :7020569426.
- AMAR CARS (40ND-40-01), SURVEY NO 139,BLOCK NO-"218"A, OPPOSITE TO AWADH ARENA MALL, Y.I.P ROAD BHARTHAMA, SURAT, GUJRAT - 395007 PH -9871389795.

SURENDARNAGAR

 DREAM VEHICLES (LCNA-LC-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDERNAGAR, GUJARAT. - 363035 PH:8511104644.

VADODARA

 KATARIA AUTO (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007 PH :9824701590.

VAP

 KATARIA AUTO (97NA-97-01), NEAR CROMA OUTLET, RATHOD CHAMBERS, DAMAN ROAD, CHALL VAPI - 396191 PH -97147909AB

HARYANA

AMBALA

EAKANSH WHEELS (18NA-18-01),
 AMBALA-CHANDIGARH HIGHWAY ADJOINING
 AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA - 134003
 PH :8395903111

BHIWANI

 PASCO AUTOMOBILES (X3NA-X3-01), NEAR HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI-HARYANA-127021 - 127021 PH 9289192582.

FARIDABAD

- PASCO AUTOMOBILES (58NB-58-01), 14/4, MATHURA ROAD, FARIDABAD, HARYANA -121003 PH: 9999790229.
- BVA AUTO (58NC-58-01), 2J/53-54, NH-2, NIT FARIDABAD, HARYANA - 121001 PH :9911259288.
- VIPUL MOTORS (58NA-58-01), SUB DIVISION NO-3, INDUSTRIAL PLOT NO. -34, N.I.T, FARIDABAD HARYANA - 121001 PH :8562019252.

GURGAON

- PREM MOTORS (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001 PH :1292565666.
- TR SAWHNEY (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001 PH:1274254441.

KAITHAL

 EAKANSH MOTORS (U8NA-U8-01), NH-65, OPP RKM FARM, AMBALA ROAD, KAITHAL - 136027 PH :7419900804, 7419900803 61. EAKANSH MOTORS (U8NA-U8-02), KHEWAT NO
458, KHATONI - 563, KITTAS - 20/87K 01M
ADJOINING NEXA SHOWROOM, AMBALA HISAR
ROAD, KAITHAL - 136027
PH :8813038777

KARNAL

 KARNAL MOTORS (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA-132001 PH: 8572801011.

PANIPAT

 AUTO GALLERY (D3NB-D3-01), NANGAL KHERI, NEAR BBMB POWER HOUSE, OPP. SEC-29, PANIPAT, HARYANA - 132103 PH:9812615000.

REWARI

64. DINCO MOTORS (U1NA-U1-01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401 PH :0129-4353535, 9963357777 8448787882 8488787883

ROHTAK

 JAGMOHAN MOTORS (A6NA-A6-01), NORTHERN BYEPASS, SUKHPURA CHOWK, JIND ROAD, ROHTAK, HARYANA - 124001 PH :8754045446.

SIRSA

 SHAKTI MOTORS (EANA-E4-01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSA -125055
 PH :88160-72888, 88138-75888

JAMMU & KASHMIR

JAMMU

- JAMKASH VEHICLES (33NB-33-01), NH-1A BYE PASS OPPOSITE CHANNI HIMMAT, JAMMU (J&K) - 180015 PH:7710400000.
- JAMMU MOTORS (33ND-33-01), KHASRA NO. 421, TOPE SHERKHANIA, AKHNOOR ROAD, OPPOSITE BEST PRICE, JAMMU, JAMMU & KASHMIR - 180016 PH :9419581624.

JHARKHAND

BOKARO

 HINDUSTAN AUTO AGENCY (B5NA-B5-01), KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS, BOKARO. - 827013 PH 9304807318.

DEOGHAR

 PREMSONS (SGWN-SGW-01), PLOT NO 318/319 UNDER THANA NO 583, MAHESHMARA MOUJA ,DEOGHAR - 814112 PH -9835507004

DHANBAD

71. RELIABLE (52NA-52-01), RELIABLE INDUSTRIES NEXA WORKSHOP AMAGHATA ,BY PASS ROAD SUGIADIH,PIN -828109 - 828109 PH :7992470853.

HAZARIBAGH

 PREMSONS (Y9NA-Y9-01), PREMSON MOTOR UDYOG PUT ITD. NEXA SHOWROOM NEXT TO GST OFFICE. ARYA NAGAR, HURHURU, HAZARIBAGH, JHARKHAND 825301 - 825301 PH :9835507004.

JAMSHEDPUR

- MOTOR WORLD (31NB-31-01), NS-6, 2ND PHASE, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013 PH :9431126863.
- PEBCO MOTORS (31NA-31-01), KANDRA ROAD, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR -831013
 PH -9334183260

RANCHI

- SUDHA MOTORS (51NB-51-01), KATHALMORE, OPP. MANER DHABA, RANCHI - 834005 PH:7001124836, 8837221096.
- PREMSONS (51NC-51-01), PLOT NO 2651/2652, KHATA NO 239, MAUJA,
 VILLAGE BARAGAI, BARIATU MAIN ROAD, RANCHI, JHARKHAND - 834009
 PH -9342811/248

KARNATAKA

BANGALORE

- MANDOVI MOTORS (02NJ-02-01), SURVEY NO.33/2,ALLALASANDRA, YELAHANKA NORTH, BANGALORE, KARNATAKA - 560064 PH '0513729888
- KALYANI MOTORS (02NI-02-01), SURVEY NO.17/2, KENCHENAHALLI VILLAGE, RAJARAJESHWARI NAGAR, MYSORE ROAD, BANGALORE, KARNATAKA - 560032 PH -9845049626
- SURAKSHAA CAR CARE (02NF-02-01), 2/6, BERTEN AGRAHARA, OPP TO METRO CASH & CARRY, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE, KARNATAKA - 560100 PH 9845047393.

- 80. PRATHAM MOTORS (02NK-02-01), 120,SARJAPUR MAIN ROAD,DODDAKANAHALLI, VARTHUR HOBLI, BANGALORE EAST, KARNATAKA-560035. - 560035 PH :8884000579.
- 81. VARUN MOTORS (02NG-02-01), NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE, TUMKUR ROAD,YESHWANTPUR, BANGALORE, KARNATAKA-560022. 560022 PH :8971888885
- 82. VARUN MOTORS (02NM-02-01), 37/56 NAGAVARA VILLAGE, HEBBAL RING ROAD, BANGALORE -560024 PH 9513394753
- KALYANI MOTORS (02NN-02-01), 152/7, OUTER RING ROAD, DODDA BANASWADI, HORAMAVU, KR PURAM HOBALI, BANGALORE -560043. -560043

PH :9900020454. BELGAUM

84. SHANTESHA MOTORS (E8NA-E8-01), PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD, KANGRALI B K, BELGAUM, KARNATAKA-590010. - 590010 PH -0538105381

HUBLI

 LEKHYA MOTORS (73NA-73-01), OPP TO APMC 2ND GATE, ESHWAR NAGAR, HUBLI-DHARWAD ROAD, HUBLI-580025. - 580025 PH: 9513777265.

MANGLORE

 MANDOVI MOTORS (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142 PH :9845133077.

MYSORE

 FRIENDLY MOTORS (25NB-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA-570016. - 570016 PH :9845011686.

SHIMOGA

 SHRUTI MOTORS (B7NA-B7-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA, KARNATAKA - 577201 PH :989596666.

KERELA

CALICUT

 AM MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EVE HOSPITAL, SRAMBIKKAL PARAMBA, MINI BYPASS JAIL ROAD JUNCTION, PUTHIYARA POST, CALICUT, KERELA-673004 - 673004 PH. 7708833966. POPULAR VEHICLES (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017 PH 9946104660

COCHIN

- 91. INDUS MOTOR (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106 PH :9747508822.
- SAI SERVICE (27NA-27-01), 723/7,6,18,0PP TO HOTEL ARRYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. - 682021 PH 9645106193

ΚΔΥΔΜΚΙΙΙ ΔΜ

93. SAI SERVICE (8LNA-8L-01), S.NO 111/48, KP ROAD, KAYAMKULAM, KERALA - 690502 PH:9288024222.

KOLLAM

 SARATHY AUTOCARS (C7NA-C7-01), NH-47 BYE PASS ROAD, AYATHIL P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021 PH '0948650456

TRIVANDRUM

 INDUS MOTOR (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND, ALUMOOD JN, NH 47, KANNIYAPURAM, TRIVANDRUM - 695301. -695301 PH -9656685678.

MADHYA PRADESH

BHOPAL

 RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-'03-01), 42, 6_BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSHANGABAD ROAD, BHOPAL (M.P.) - 462016 PH. 7909903921.

INDORE

- PATEL MOTORS (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJRANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016 PH :7771002881
- OCEAN MOTORS (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001 PH: 0731-4826666.
- RANA MOTORS (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 -452010

PH:9933055539.

 RUKMANI (53NC-53-01), RUKMANI MOTORS NEXA SERVICE, FOOTHI OTHI SQUARE, OPP. DASTOOR GARDEN, INDORE 452002
 PH 9755512100

JABALPUR

 STANDARD MOTORS (54NC-54-01), KHARSA NO-529/1/1, NEAR TRIPURI CHOWK GARHA JABALPUR M. P - 482003 PH :9773543358.

SAGAR

102. ADINATH CARS (G1NA-G1-01), KHASRA NO 155, P.H. NO. -77, BAHERIA GADGAD, SAGAR JABALPUR ROAD, SAGAR - 470004, MADHYA PRADESH, INDIA - 470004 PH: 9752447690.

SATNA

 CITY CARS (D7NA-D7-01), BEHIND NEXA SHOWROOM, 666/2, AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001 PH 4362230909

U.I.IAIN

104. RUKMARANI (YUG) (3WNA-3W-01), 59/1, DEWAS ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN -456664 PH: 9755512100.

MAHARASHTRA

AHMEDNAGAR

105. KANKARIYA AUTOMOBILES (A5NA-A5-01), SH-60,NEWASA ROAD ,NAGARDEOLE,AHEMDANAGAR,MAHARASTRA -414601 PH :9403961522.

AMARAVATI

 ASPA BANDSONS (F2NA-F2-01), F32/1 MIDC, AURANGABAD NACPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444607 PH :9130041513.

AURANGABAD

- 107. AUTOMOTIVE MANUFACTURER LTD
 (21NB-21-01), PLOT NO: -L- 3/1, BETWEEN
 GARWARE & WOCKHARDT LTD, JALGAON
 ROAD, MIDC CHIKALTHANA, AURANGABAD PIN:
 431006, MAHARASHTRA 431006
 PH: 9970499273.
- PAGARIYA AUTO (21NA-21-01), OPP AIRPORT, NEXT TO INDIAN OIL PETROL PUMP, JALNA ROAD, AURANGABAD, MAHARASHTRA - 431006 PH :8888859502.

BARAMATI

 MAHALAXMI AUTO (7RNA-7R-01), BHIGWAN ROAD, SHIV NAGAR, BARAMATI (MAHARASHTRA) - 413102
 PH 9850994014

CHANDRAPUR

 BARBATE AUTO (H3NA-H3-01), PLOT NO 15-18, OUT OF SURVEY NO 14/4, 15/5, MAUZA BADOLI, NACPUR CHANDRAPUR HIGHWAY, CHANDRAPUR, MAHARASHTRA - 440025 PH :8380887666.

JALGAON

 MANRAJ AUTO (C4NB-C4-01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA - 425003 - 425003 PH :0253-6686666, 9130033951.

KHARGHAR

112. SIMRAN MOTORS (AACN-AAC-01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA. - 410209 PH:022-71430900, 9540467248

KOLHAPUR

 SAI SERVICE (38NA-38-01), 1243/66, E WARD, SHIVAJI UDHYAMNAGAR, KOLHAPUR - 416001 PH: 9923208401.

MUMBAI

- 114. SAI SERVICE (05NB-'05-01), JOSEPH CARDIJN TECHNICAL SCHOOL, KHASHABA JADHAV MARG, OFF DR. AMBEDIKAR ROAD, DADAR (EAST) MUMBAI, MAHARASHTRA. - 400014 PH:022-48767777.
- 115. SHIVAM MOTORS (05ND-'05-01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA. - 400069 PH: 02352-220084, 9889533472.
- KTS AUTOMOTORS (05NH-05-01), UNIT NO A1, PANNALAL COMPOUND, LBS KANTILAL MAGANLAL ESTATE, L.B.S MARG, BHANDUP (W), MUMBAI - 400078 PH-020-30414000, 918965888
- 117. SHIVAM AUTOZONE (05NE-05-01), PLOT NO. 1 & 2, RAMCHANDRA LANE EXTN., KANCHPADA, OFF LINK ROAD, MALAD-WEST. - 400064 PH :987093888.

NAGPUR

 BARBATE AUTO (20NA-20-01), 37/2, MANISH NAGAR, BESA T POINT, BESA ROAD NAGPUR 440025 - 440025 PH :7923600147, 9727726004

NANDED

 SEVA AUTOMOBILES (68NA-68-01), AIRPORT ROAD,SANGVI - 431605
 PH: 7065026520.

NASHIK

 SEVA AUTOMOBILES (37NA-37-01), PLOT B-17, MIDC, AMBAD, NASIK, MAHARASHTRA - 422010 PH:8975762303.

NAVI MUMBAI

121. AUTOMOTIVE MANUFACTURER LTD (39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY, NAVI MUMBAI - 400706 PH - 9769206120

PLINE

- KOTHARI WHEELS (19NB-19-01), GATE NO 1605, OLD 1099, KESNAND ROAD, WAGHOLI, TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA -412207
 PH : 7721865000
- 123. EXCEL AUTOVISTA (19NG-19-01), SURVEY NO 98/2A/P, NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM, BANER TALUKA, PUNE -411045 PH :0257-2212145.
- 124. SEHGAL AUTO RIDERS (19NE-19-01), SURVEY NO 63/2, SHEWALEWADI, MANJARI BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHTRA - 412307 PH -0158000040
- 125. WONDER CARS (19ND-19-01), PLOT NO 52/1 BLOCK F2, MIDC PIMPRI, PUNE - 411019 PH -9850004151
- 126. MAHALAXMI AUTO (19NI-19-01), NEAR SADGURU PETROL PUMP, PUNE NASHIK HIGHWAY, AT KURALI, KHED TALUKA, CHAKAN - 410501 PH 9923589214
- SAI SERVICE (19NC-19-01), SINHAGAD ROAD, NEAR NANDED CITY, VADGAON KHURD, PUNE. (MAHARASHTRA) - 411041 PH -9023308333

RATNAGIRI

 JAGRUT MOTORS (G3NA-G3-01), 410/6/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612 PH :9820039626.

SHOLAPUR

 CHAVAN MOTORS (B1NA-B1-01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224 PH -8R8R8R1314

THANE

DIMAPUR

- EXCEL AUTOVISTA (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD, THANE, MAHARASTHRA - 400607 PH :9967331726.
- EXCEL AUTOVISTA (39NA-39-02), NEAR ARIHANT COMPOUND, KALHER, BHIWANDI, THANE -400607 PH 9967331726.

NAGALAND

132. PROGRESSIVE MOTORS (32NA-32-01). OPPOSITE AIRPORT, NI-39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, - 797115 PH. 7580223738

ODISHA

BERHAMPUR

 SKY AUTOMOBILES (E2NA-E2-01), PLOT NO 373/2229 & 373/1204, AMABAPUA MOUZA, BRAHMAPUR (ODISHA) - 760007 PH - 7381266000

ROURKELA

 ORBIT MOTORS (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041 PH :9165071234.

SAMBHALPUR

 ODYSSEY MOTORS (D4NA-D4-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006 PH :0832-2408800, +91-9881746562.

PUNJAB

AMRITSAR

136. JAYCEE MOTORS (17NA-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501 PH - 01815045400, 753696666

BHATINDA

 TARA (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB -151001
 PH: 8437019666.

JALLANDHAR

138. LOVELY AUTO (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALANDHAR PUNJAB - 144024 PH :7617571039, 7617571040

LUDHIANA

- GULZAR (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003
 PH:9814839777.
- HOSHIARPUR AUTO (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003
 PH:8877501234

MOHALL

141. CM AUTO SALES (L1NA-L1-01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI - 160055 PH :988034555, 9780011459.

PATHANKOT

 PATHANKOT VEHICLEADS (A7NA-A7-01), PLOT NO.-C-30, INDUSTIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023 PH 75-27006800

RAJASTHAN

AJMER

143. NAVNEET MOTORS (B2NA-B2-01), PLOT NO7 -8, RIICO INDUTRAIL ESTATE MAKHAPURA NASIRBAD ROAD, JUMER(RAJASTHAN)-PIN CODE-305002 - 305002 PH -9414149149

ALWAR

144. FORTUNE CAR (F9NA-F9-01), 6TH MILESTONE VILLAGE JATIYANA, OPP. PETROL BEHROR ROAD ALWAR - 301001 PH -989341741

BHILWARA

 CHAMPION CARS (E3NA-E3-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001 PH :9001027933.

BIKANE

146. AUDI MOTORS (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD , BICHHWAL INDUSTRIAL AREA , BIKANER 334001 - 334001 PH -9887222766.

CHITTORGARH

 TECHNOY (K9NA-K9-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001 PH:8905992939.

JAIPUR

148. K P AUTOMOTIVES (11NB-11-01), PLOT NO.3-4,MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION,SIRSI ROAD - 302034 PH :7412059823

 SATNAM MOTORS (11ND-11-01), D-27, K/L/M, ROAD NO-3,SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA, JAIPUR, RAJASTHAN-302023. - 302023
 PH -9640373311

JHUNJHUNU

150. AUDI MOTORS (FNNA-FN-01), NEAR TVS TWO WHEERLER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001 PH 7970006402

JODHPUR

- AUDI MOTORS (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001 PH:7300077394.
- 152. LMJ AUTO (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1 JODHPUR - 342009 PH:7412087320.
- 153. LMJ SERVICES (65NB-65-02), PLOT NO.-61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001 PH:8094011126.

KOTA

154. BHATIA & CO. (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPIA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005 PH: 8094011126.

SIKAR

155. JAMU (K7NA-K7-01), THAR PETROL PUMP, JAIPUR ROAD, SIKAR - 332001 PH :9414037515

UDAIPUR

 TECHNOY (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS, UDAIPUR - 313001 PH:0141 2984568.

TAMIL NADU

CHENNAI

- PILLAI & SONS (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117 PH :9994950505.
- POPULAR VEHICLES (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI, TAMILNADU- 600116. - 600116 PH :9842389111.

- KHIVRAJ MOTORS (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058. - 600058 PH:9626099999.
- 160. VISHNU CAR (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056 PH :7339359111.
- ABT (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU-600032
 PH 99944444303
- 162. VISHNU CAR (14NG-14-02), POONAMALLE HIGH ROAD, ARUMBAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056 PH :7550333622.

COIMBATORE

- AADHI CARS (41NB-41-01), OLD KALIAPPA KALYANAMANDAM, PREMISES, KAVUNDAMPALAYAM, COIMBATORE, TAMIL NADU - 627007 PH -9003077577
- 164. SREE SARADHAMBAL (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. -641004 PH :9790004271.

ERODE

165. SREE SARADHAMBAL (H7NA-H7-01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011 PH -078602272

HOSUR

166. SRI AMMAN CARS (7QNA-7Q-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44, OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109 PH :984 1033464.

KARAIKUDI

167. MEENAKSHI AUTOZONE (HXNA-HX-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIAPURAM, KARAIKUDI, TAMIL NADU -630001 PH -0940004881

MADURAI

 ASIR (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001 PH :99440 59911.

NAGERCOIL

 ATHEN CARS (S5NA-S5-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU -629003

PONDICHERRY

PH:9751196436

170. SHENBAKA CARS (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMAMBAKKAM, BAHOOR COMMUNE,PONDICHERY - 607402 PH .7338322220.

SALEM

- THRIVENI CARS (A2NA-A2-01), 2/6, KANDHAMPATTY,BYE PASS ROAD, SALEM, TAMILNADU - 636005 PH:9786022272.
- 172. SM CAR (A2NB-A2-01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM - 636010 PH :7094440010.

THANJAVUR

 PILLAI & SONS (E7NA-E7-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403 PH -0442964165

TRICHY

 PLA MOTORS (23NA-23-01), TS NO.29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NACAR, TRICHY, TAMILNADU - 620017. -620017
 PH :811009991.

TRIPUR

175. SHASHTI (Y7NA-Y7-01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604 PH: 9942903310.

VELLORE

 SRI GANESH CARS (C6NA-C6-01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI, VELLORE, TAMILNADU - 632009 PH:9884722126.

TELANGANA

HYDERABAD

- KALYANI MOTORS (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHARMANGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079 PH :9347121212.
- VARUN MOTORS (10NB-10-01), B-54, CO.INDUTRIAL ESTATE, BALANAGAR HYDERABAD, TELENGANA - 500037 PH :8886631496, 8886631499

- GEM MOTORS (10NH-10-01), D.NO.8-96, SURVEY NO.128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA. - 500084 PH :9912345899.
- 180. JAYABHERI AUTO (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032. - 500032

PH:9849103917, 9437061030.

- 81. VARUN MOTORS (10NB-10-02), H.NO. 8-2-120/117/A/2. PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD - TELANGANA - 500033 PH-9885610555.
- 182. SAI SERVICE (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046. - 500046 PH :9966377888.
- 183. RKS (10NI-10-01), SY NO:42, PET BASHEERABAD, QUTHBULLAPUR, MEDCHAL MANDAL, HYDERABAD - 500014 PH 9542234567
- 184. ADARSHA AUTOMOTIVE (10NG-10-01), PLOT NO 6/P, S4, SURVEY NO. 204, PRAGATI NACAR, BALANAGAR, KUKATPALLY, HYDERABAD -500072 PH :9154854949 8897972200.
- 185. ADARSHA AUTOMOTIVE, SHAMSHABAD (10NG-'10-02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA – 501218 - 501218 PH: 8297116633.

KARIMNAGAR

 ADARSHA AUTOMOTIVE (N6NA-N6-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001 PH :9847073265.

MAHBUBNAGAR

 JAYARAMMA AUTO (WPNA-WP-01), CHRISTIANPALLY, BHOOTPOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001 PH -800990074

MANCHERIAL

 ADARSHA AUTO (CMNA-CM-01), SURVEY NO-417, BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL, TELANGANA - 504208 PH : 9133329709.

NIZAMABAD

 VARUN MOTORS (1HNA-1H-01), 1-51/4/1/D4 MADAHAVA NAGAR, HYDERABAD ROAD, NIZAMABAD, TELANGANA, 503230 - 503230 PH: 9542222486.

SECUNDERABAD

- 190. MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDERABAD, ANDRAPRADESH-500020. - 500020 PH :98850 01155.
- 191. AUTO FIN (K6NB-K6-01), PLOT NO.6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDERABAD, TELANGANA -500011 PH :8886144551.
- 192. VARUN MOTORS (K6NC-K6-01), VARUN MOTORS, ZND CROSS ROAD, SAINIKPURI, SECUNDERABAD - 500094 PH - 779960094

WARANGAL

193. ADARSHA AUTOMOTIVE (D5NA-D5-01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007 PH:8978944414.

UTTAR PRADESH

AGRA

194. MADHUSUDAN MOTORS (66NA-66-01), ADJOINING HEMA PETROL PUMP, EIT MANDI, BODLA, AGRA - 282007 PH :6386901181, 6386901188.

ALIGARH

- CLML (B6NA-B6-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOL, ALIGARH, UTTAR PRADESH. - 202002 PH -0630775522
- 96. CLML (B6NA-B6-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 -202140 PH: 9358373099.

BARIELY

197. CORAL (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BARIELLY, UP - 243001 PH - 9359101010

GHAZIABAD

- ROHAN MOTORS (59NA-59-01), KHASRA NO 46, DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101 PH:8178839830.
- 199. J JIMPEX (5982-59-M), PLOT NO C, J JIMPEX (DELH) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 - 201003 PH 9990033015.

GORAKHPUR

 SMART WHEELS (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH - 273009 PH: 8222002147.

GREATER NOIDA

201. MSM (JJ IMPEX) (T283-T2-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009 PH :9711474930.

HARDOI

 CONCEPT (QENA-QE-01), PLOT NO. 1609 & 1605, GUNGABUX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001 PH:7607696666.

JHANSI

 SURI (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003 PH - 770500658

KANPL

 KTL (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILYWAY COLONY, KANPUR, UTTAR PRADESH. - 208017
 PH. 77408409312

LUCKNOW

205. ANAND MOTORS (13NC-13-01), GATA NO. 1062 PARGANA RAJA BIJLI PASI VILLAGE AURANGABAD, SHAHEED PATH (OPPOSITE TO RAMABAI AMBEDKAR MAIDAN), LUCKNOW, UTTAR PRADESH - 226012 PH :7705807552, 983440440.

206. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT NO - 513, VILL HARIHARPUR BIJINAUR, OPP ANSAL API, AMAR SHAHEED PATH, LUCKNOW -227105 PH:7331190503.

MATHURA

 UMA MOTORS (H8NA-H8-01), PLOT NO 222, MAHOLI, NEAR KIRAN HOSPITAL, MATHURA -281004
 PH :9997385999.

MEERUT

TR SAWHNEY (48NB-48-01), 1183/17 RITHANI,
 ZONE - A, SECTOR 4 NEAR PETROL PUMP,
 MEERUT, UTTAR PRADESH - 250103
 PH :18002704142.

NOIDA

209. FAIR DEAL (A1ND-A1-'01), A-107, SECTOR-5. NOIDA - 201301 PH :9810542222

 MOTOR CRAFT (59NB-59-01), C 42 SECTOR 57, NOIDA, UTTAR PRADESH - 201301 PH: 7230029429, 723000000

RAIBARIELY

211. KTL AUTOMOBILE PVT LTD (HSNA-HS-01), 1481, NEAR KATHWARA BUS STAND, LUCKNOW RAIBARELI HIGHWAY, HARCHANDPUR, RAIBARELI - 229303 PH :7311190503.

SAHIBABAD

 MSM (M983-M9-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL AREA, - 201010 PH: 9711474930.

SHAHJHANPUR

213. SUMITRA DS (W2NA-W2-01), SH25 , RETI ROAD SHAHJAHANPUR - 242001 PH :9936095228.

UTTARAKHAND

HALDWANI

214. NAINITAL MOTORS (J6NA-J6-01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR UJALA PRINTING PRESS, HALDWANI, UTTARAKHAND - 263139 PH:7467800077, 7467800050.

ROORKEE

215. SHAKUMBARI (HZNA-H2-01), 5 KM MILESTONE, NH-58,ROORKEE-DELH IROAD, NEAR HOTEL GODWARI,ROORKEE, UTTARAKHAND - 247667 PH : 9634092690, 7500860007

RUDRAPUR

216. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (U4NB-U4-01), KASHIPUR ROAD, OPPOSITE GREEN PARK COLONY, VILLAGE DIBDIBA, TEHSIL BILASPUR, RAMPUR, UTTRAKHAND -244901 PH :01912465542, 9797770257.

WEST BENGAL

ASANSOL

217. BEEKAY AUTO (F6NA-F6-01), NH-2 ,CHANDA MORE ,POST KALI PAHARDI, JAMMURIA DISTRICT WEST BARDHAMAN - 713339 PH :9932049425.

HOWRAH

218. MACHINOTECHNO (X7NA-X7-01), 109, 1, UPPER FORESHORE RD, CHOURA BUSTEE, SHIBPUR, HOWRAH, WEST BENGAL 711102 - 711102 PH 9830081632

JALPAIGURI

 PODDAR AUTO (XYNA-XY-01), ASSAM MORE BUS STOP, SH12A, JALPAIGURI, WEST BENGAL 735102 - 735102 PH:8945533002.

KHARAGPUR

 BHANDARI AUTOMOBILES (G7NA-G7-01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301 PH:7603076061.

KOLKATA

221. JYOTE MOTORS (06ND-06-01), MIRANIA ROAD, ARUPOTA ON BASANTI HIGHWAY, - 700105 PH -9074158220

MARUTI AUTHORISED SERVICE STATION (MASS) (AS ON 31.03.2022)

ANDHRA PRADESH

CUDDAPPAH

SIVAJI MOTORS (3275), BESIDES PADMASHALI KALYANA MANDAPAM MADRAS ROAD, KADAPA-516002, ANDHRA PRADESH PH :516002-9849113189 / 08562-48678

SREE VENKATESWARA AUTO. (1030). SANKARA PURAM CUDDAPAH (A.P.) PH -516002-9704209620 / 9440708234

GUNTAKAL

S. MAHABOOB AUTOMOBILES (4075), ALUR 3 ## ROAD, GUNTAKAI -515802. PH :515802-9440208312 / 9963344109

GUNTUR

S. S. MOTORS (4946), OPP. JKC COLLEGE, JKC COLLEGE ROAD, GUNTUR-522006, ANDHRA PRADESH, PH:522006-9848936363 / 9395553636

KAKINADA

SATISH AUTO CARE (5038), BEHIND KALPANA THEATRE, BEACH ROAD KAKINADA, DISTRICT EAST GODAVARI, ANDHRA PRADESH,

PH:533005-9848313599/9291648822. SRI SHIRDI SAI TECHNOCRAFTS (1459), FLAT NO 36/2, I.D.A, , RAMANAYYAPETA BESIDE MAHINDRA SHOW ROOM, OPP: BHAVANI CASTING ROAD, KAKINADA-533005 PH :533005-9848633336 / 9440727211.

KAVALI

KAMAL MOTORS (3842), 10-15-43/J3A OPP LIC, TANK RAOD, KAVALI, PH:524201-9440928888 / 8801444888.

KURNOOL

SRINIWAS AUTO GARAGE (5170), KALLUR ROAD, KURNOOL, DISTRICT - KURNOOL, ANDHRA PRADESH PH:518002-9440244660/9052571777.

MACHII IPATNAM

SRI MARUTI MECHANICAL WORKS (4172) D.NO 4-121, PLOT NO 26.27. POTEPALLI INDUSTRIAL PARK MACHLIPATNAM- 521002. PH:521002-9440538012 / 6301612465

MANDAPETA

MODERN MARUTI CARE (4866), D.NO. 4-1-59/2 MAIN ROAD MANDAPETA-533309 DISTRICT-FAST GODAVARI ANDHRA PRADESH PH:533309-9133198494

MATHURAWADA

ANY TIME SERVICE CENTRE (4860) RESIDE 11.## FLECTRICAL SUBSATION, MADHURAWADA -530041 DISTRICT VISAKHAPATNAM ANDHRA PRADESH PH:530041-8977799888

NAGARI

PILITHA SERVICE CENTER (5872) TIRLIPATI 12 # ROAD NAGARI-517583 DISTRICT-CHITTOOR ANDHRA PRADESH PH:517583-9966106128

NANDYAL

MARUTI MOTORS (2635), PLOT NO 428, 13.## NH-18 , NEAR RAILWAY GATE , NANDYAL-518501 PH:518501-9440554617

NELLORE

14.## MARUTI AUTO SERVICE STN. (2620), 16/796 SANKARA AGRAHARAM, NELLORE-524 001

PH:524001-98858 81905 / 9848287342. MARUTI MOTORS (176), 16-3-995, MINI BYPASS ROAD., RAMALINGAPURAM. NELLORE-524 003.(A.P.). PH:524003-9440278243.

PATTIKONDA

ROYAL MOTORS (5776), ADONI ARTS & 16.# SCIENCE, COLLEGE ROAD ADONI.PATTIKONDA-518302. DISTRICT-KURNOOL, ANDHRA PRADESH. PH:518302-9866362847/9247130036.

PRODDATTUR

SRI RAM MOTORS (3642), 189 INDUSTRIAL AREA, NEAR SRI LAKSMI NAGAR, MYDUKUR ROAD, PRODDATUR (A.P.), PH:516360-9666890525/9440354050.

RAJAHMUNDRY

MARUTHI MOTORS (1257), D.NO 88-30-04, OPP I.T.C. GADALAMMA NAGAR, NH-16, RAJAMAHENDRAVARAM -533107, PH:533107-9848253434 / 9666965922.

SRIKALAHASTI

19.## SUNDEEP CARS (5972), 16/769, SRI RAM NAGAR COLONY, SRIKALAHASTI-517640. DISTRICT-CHITTOOR, ANDHRA PRADESH. PH:517640-9848294869/8686691817.

TENALI

HIMAJA MARUTI SERVICE STATION (2828). LECTURER'S COLONY, GIRLIA HOSPITAL ROAD GANGANAMMARET TENALL522 201 GUNTUR DIST. (A.P.) PH:522201-9849715727

RAHUL MOTORS (5157), D.NO.18-3-4BITRA SRI RAMULU STREET, BEHIND TELEPHONE EXCHANGE SALIPET, TENALI, ANDHRA PRADESH PH:522201-9490187453/9440229595.

VISAKHAPATNAM

22.## SIRI AUTOMOBILES (5232), PLOT O 94/A IDA E BLOCK, AUTO NAGAR.GAJUWAKA, VISHAKHAPATNAM ANDHRA PRADESH PH:530012-9963296667.

SRINIVASA AUTO GARAGE (5440), OPP. KANTI ROAD,, NEAR RAYS PETROL PUMP -VISHAKHAPATNAM, DISTRICT -VISHAKHAPATNAM, ANDHRA PRADESH,

PH:530031-9912688943 VISAG AUTO SCANS (461), 49-52-1/4/2,OPP HNR VIHAR APPARTMENTS, SANTHIPURAM, SANKARMATAM ROAD

VISAKHAPATNAM-530016, PH:530016-9246625885.

VIZIANAGARAM

VIKRAMA AUTOMOBILES (4621), 17-13-4 TEMPLE STREET, VIZAINAGARAM - 531 202 PH:535003-9440192224. ARUNACHAL PRADESH

ALONG

BANNU MOTORS (1744), SIYOM MARKET. 26 ## ALONG, WEST SIANG DISTT., (ARUNACHAL PRADESH) PH:791001-9436056096/8258834061/ 8415969533.

BOMDILA

GURU MOTORS (3921), BIRPUR, RUPA, 27.## ARUNACHAL PRADESH 790003, PH :790003-7640898278 / 7085688757

NIRJULI

28 ## SANGO SERVICE CENTRE (5742), NH-52,NIRJULI - 791110, DISTRICT-PAPUMPARE, ARUNACHAL PRADESH PH:791110-9436052480/8974454448 / 7002262396.

TAWANG

TAWANG MARUTI SERVICING STATION 29 ## (4255) OLD BAZAR LINE PO & P.S. TAWANG ARINACHAI PRADESH PH:790104-9402493456

ZIRO

30 ## HILLS AUTO AGENCY (3922), POLICE RESERVE & PETROL PUMP ROAD, HAPOLI BAZAR P.O. ZIRO DISTT. LOWER SUBANSIRI, ARUNACHAL PRADESH - 791

PH:791120-9436047232 / 7085355742. ASSAM

BADARPUR

MARUTI CAR PLAZA (3635), NEAR 31.## INDUSTRIAL AREA, S.T. ROAD, BADARPUR, DISTT. KARIMGANJ (ASSAM) PIN-788 806. PH:788806-9854970591/9401863691

BISHAWANATH CHARIALI

BINA AUTOMATION (3677), , P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176. PH:784176-9957309744

DISHANG DONE (1058), 52 N.H., BISHWANATH CHARIALI-784176, DISTT. SONITPUR, ASSAM. PH:784176-9854004161/9435080154.

SREE GANESH MOTORS (6040), SUKHANJAN SUPER MARKET, P.O:BOKAJAN (C.F.), DISTRICT KARBI ANGLONG , ASSAM PH:782480-9435167138.

BOKAKHAT

35.## GOENKA AUTOMOBILES (2878), P.O. BOKAKHAT, DISTT. GOLAGHAT, ASSAM-785 PH:785612-9854048910 / 8254953675.

DHAI IGAON

ADHIKARI MOTOR WORKS (4049), P.O. DHALIGAON, DIST-BONGAIGAON, ASSAM-783385, PH:783385-9435020938

DHFMA.II

NARAH AUTOMOBILES (3852), C/O BLUE HILL COUNTER, P.O. DHEMAJI, DISTT. DHEMAJI, PIN-787 057 (ASSAM) PH:787057-9954390916

DHIIBRI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

38.## BRAHMAPUTRA MOTOR SERVICING STATION (3127), G.T.B ROAD, DHUBRI-783 301, (ASSAM), PH: 783324-8876798739/9101176148 / 8011984265.

DIRRUGARH

.* GEE DEE AUTO SERVICE (953), JHALUKPARA, DIBRUGARH-786 001, ASSAM, PH :786001-9435131119.

40.** MEHBOOB AUTOMOBILES & TYRE SERVICES (1760), CHOWKIDINGHEE, NEAR STATE TRANSPORT, DIBRUGARH-3, PH. :786005-9854432207 / 9435031620.

DIGBOI

41.** GAURI AUTOMOBILES (3760), MULIABARI, DIGBOI 786 171, , PH :786171-9435137556.

DOOM DOOMA

42.* S K AUTO CARE (3962), UCHAMATI, NATIONAL HIGHWAY, DOOM DUMA, ASSAM 786151,

PH:786151-9435135876.

GOALPARA

43.## BHARAT ENGINEERING WORKS (969), PO -BALDMARI, AGIA ROAD, GOALPARA (ASSAM) -783 102, PH :783102-9864767777 / 9435023588.

GOLAGHAT

44.## KAKOTI MOTOR WORKS (1074), NEW AMOLAPATTY, RANGPUR, P.O. GOLAGHAT-785 621, DISTT. GOLAGHAT (ASSAM), PH :785621-9435053663.

GOSSAIGAON

45.## NARZARY AUTOMOBILES (4544), NH-31C, HABRUBIL, GOSSAIGAON, DIST KOKRAJHAR, ASSAM-783360, PH :783360-9435109765.

GUWAHATI

46.** MONO MOTOR WORKS (966), BAMUNI MAIDAN, GUWAHATI-781 021, , PH :781021-9864186600 / 9864060665.

HAILAKANDI

47.## RONOK AUTOMOBILES (5978), LALA ROAD, NEAR CIVIL HOSPITAL, HAILAKANDI-788151, DISTRICT-HAILAKANDI, ASSAM,

PH:788151-8723032380/9707428563/940196021

HOJAI

48.## PRAMAN MOTORS (5730), WARD NO. 12, HOLDING NO. 14, COLLEGE ROAD, HOJAI, ASSAM-782435, PH -782435-9954369700

JONAI

49.## BOROOAH MOTORS (4545), NH-515, MURKONG SLEEK, DIST. DHEMAJI, JONAI-787060, ASSAM, PH:787060-9864590237.

KARIMGANJ

50.## S D AUTOMOBILE (4931), SILCHAR ROAD, KARIMGANJ - 788710, , PH :788710-8135002919/9435074975.

LUMDING

51.## BEDI MOTORS (5827), MAIN ROAD,NORTH LUMDING,LUMDING-782447, DISTRICT -NAGAON, (ASSAM), PH:782447-9957333991.

MANGALDAI

52.## PRIYAM AUTOMOBILES (2424), NH 52 COLLEGE ROAD, MANGALDOI, ASSAM, PIN-784 125, PH :784125-9401148730/9854209905 / 8876111790.

MARGHERITA

 VIRDI MOTOR WORKS (955), MISSION ROAD, P.O. MARGHERITA-786 181, DIST. TINSUKIA, (ASSAM), PH:786181-8011164932 / 8876366421.

MARIANI

WASKAR AUTOMOBILES (5237), NEAR NST TINALI. P.O.: MARIANI, DISTRICT - JORHAT, ASSAM, PH:785634-9508486813.

MORANHAT

CHINAKI SERVICE STATION (2973), (MARUTI AUTHORISED SERVICE STATION), NATUN NAGAR A.T. ROAD, MORANHAT-785 670, (ASSAM), PH.785670-9401512821

MORIGAON

PRAGATI MOTORS (5273), MORIGAON TOWN, WARD NO.1, BHATBOR-, DOLON PATH, P.O.: MORIGAON, DISTRICT -MORIGAON, ASSAM, PH. 782105-9425064256

NAGAON

57.## DAS MARUTI MOTOR WORKS (3734), NAGAON -782001, , , (ASSAM), PH :782002-9435360246 / 9706362791.

NAI BARI

58.## B.R.K. AUTOMOBILES ENGINEERING WORKS (2838), HAJO ROAD, NALBARI-781 335, (ASSAM), PH: 781335-9954895264 / 8638142034

NAMRUP

9.## RAJ ENTERPRISES (3849), NAMRUP INDUSTRIAL ENTERPRISES, SONARI TINIALI, PARBATPUR, NAMRUP-786 623 (ASSAM), PH-786673-98641376AB

NORTH LAKHIMPUR

0.** GREEN LAND MARUTI WORKS (2974), NEAR GURUDWARA, NH 52, NORTH LAKHIMPUR-787 001, (ASSAM), PH :787031-9435085310 / 8638211244.

ΑΤΗ ΚΑΙ Δ

61.## USHA AUTOMOBILES (4240), N.H 31,PATHSALA-781325, DISTRICT-BARPETA, ASSAM, PH :781325-9401310431.

SILAPATHAR

2.## BORLUIT MOTOR (5743), KHANAMUKH, P.O/P.S.-SILAPATHAR, DIST-DHEMAJI, ASSAM PIN-787059, PH.787059-9954635182.

SILCHAR

CARDROME (1559), 2ND LINK ROAD JUNCTION, SONAI ROAD (M H C ROAD), SILCHAR-788 006, (ASSAM), PH :788006-9435071212.

TEZPUR

POOJA MOTOR WORKS (4373), N.T. ROAD, MURATETLI, TEZPUR-784001, ASSAM, PH:784001-9954707812 / 9435082223.

TINSUKIA

65.* AUTO MAKERS (934), MAKUM ROAD, UDYOG NAGAR, TINSUKIA -786 146 (ASSAM), PH:786146-9435035341.

TITABAR

66.## SHANKAR AUTO WORKS (5174), C/O:SHIV SHAKTI AUTO WORKS BALAJI, MARKET TITABAR CHARIALI TITABAR, DISTRICT -JORHAT, ASSAM, PH :786630-9435772479/9435051539 / 9435153400.

UDALGURI

67.## RENU MOTORS (4543), WARD NO. 2, U.T. ROAD, UDALGURI TOWN, UDALGURI-784509, ASSAM,

PH:784509-9854348875 / 9435222344. **BIHAR**

ARRAH

68.## ANJALI ENTERPRISES (5533), ARRAH -PATNA MAIN BYPASS ROAD, NH-30, AHIRPURWA, OPPOSITE SURYA MANDIR, ARRAH, BIHAR -802232, PH-302232-9304910843.

AURANGABAD (BIHAR)

9.## K R N AUTOMOBILE (2242), NEW G.T. ROAD, (NH-2), AURANGABAD-824 101, (BIHAR), PH :824101-9304930657.

BEGUSARAI

* NATIONAL AUTO WORKS (1536), INDUSTRIAL AREA, BARAUNI, BEGUSARAI-851 122, PH:851122-9973381733.

BHAGALPUR

.** RUPRA AUTOMOBILES (1577), EAST OF AIRPORT, BHAGALPUR-813 210, P.O. BAHADURPUR, (BIHAR), PH :813210-9334385521.

BIHAR SHARIF

73.## SARVADAY ENGG. & AUTO SER (1549), INDUSTRIAL ESTATE, RAMCHANDRAPUR, BIHARSHARIFF (NALANDA), PH :803101-9334672919 / 9334473632.

CHAPRA

74.## PRASAD AUTOMOBILES (1974), BHAGWAN BAZAR, CHAPRA-841 301, (BIHAR), PH :841301-9431216362/8092627210 / 8340568556

DARBHANGA

SINGH MARUTI CARE (2277),
 RAJKUMARGANJ, P.O. LALBAGH,
 DARBHANGA-846 004, (BIHAR),
 PH:846004-9431293796 / 9386151528.

GAYA

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

76.* AUTO CARE (3027), DURGA BARI, HARIDAS CHATTERJEE LANE, NEAR SAINT PAUL SCHOOL, GAYA-823 001 (BIHAR), PH :823001-9102060955 / 9939407978.

HAJIPUR

77.## ALFA AUTO (5454), PASWAN CHOWK, NH-13, HAJIPUR, DISTRICT - VAISHALI, BIHAR -844101, PH :844101-9431327965/8092258357 / 7545870345

78.** HI-TECH AUTOMOBILE (3123), GANDHI SETU PATH, N.H.-19, HAJIPUR, VAISHALI (BIHAR), PH :844101-9835044502 / 9608895900

KAHALGAON

79.## MAHA GAURI ENTERPRISES (5822), NTPC ROAD, GANGANAGAR, CHOWRATHIYASTHAN, KAHALGAON-813203, DISTRICT-BHAGALPUR, BIHAR,

PH:813203-9431463558

MADHEPURA

80.## KRISHNA AUTOMOBILES (2639), SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR), PH :852213-9430583338 / 8810506410

MADHUBANI

81.## VIDYAPATI AUTOMOBILE (4234), BHAUARA, GANGASAGAR, MADHUBANI, BIHAR - 847212, PH :847212-9471648158/9304399511 / 6276255014

MUNGER

82.## SUN BEAM ENGG WORKS (1533), 150 BETWAN BAZAR, NEAR KHANKAH, P.O.& DISTT. MUNGER, BIHAR - 811201, PH -811201,031987944

MUZAFFARPUR

83.** DYNAMIC MARUTI SERVICE CENTRE (1163), HARI SHARAN MARG, AMGOLA, POST OFF RAMNA, MUZAFFARPUR-842 002,

> :842002-9431013057/9835003526/938683459 5 / 9835003526

4.## PERFECT MOTORS (3465), NEAR CHANDNI CHAUK, JHITKAIYA, POST: MIT PS: BRAHAMPURA, MUZAFFARPUR-842 003 (BIHAR), PH: 842003-9835007407.

PATNA

85.** CAR SCANNER (1552), OPP. BATA, KANKAR BAGH COLONY, PATNA-800 020, PH :800020-0431016342 86.** GOOD WRENCH SERVICES (3364), NH 30, BETWEEN BHARAT PETROLEUM & HP PETROL PUMPS, 1 KM WEST OF '0' MILE, ASHOCHAK, NANDLAL CHAPRA, PATNA -800007,

PH :800007-7277772777

7.## MARUTI MAINTAINER (4842), PLOT NO 73, MAIN ROAD, KANKARBAGH. NEAR RAJENDRA NAGAR OVERBRIDGE, PATNA, BIHAR-800020

PH:800020-7903741541.

* MOHINI AUTOMOBILES (1049), BEHIND RESERVE BANK OF INDIA. EXHIBITION

ROAD, PATNA-800 001, PH :800001-9431094340/8987379073 / 6204514253.

89.** TIRUPATI AUTO (1956), ASHIANA MORE, BAILEY ROAD OPPOSITE UNION BANK, RAJABAZAR, PATNA-14, PH :800014-9835050292/8539077831 / 9893801907

PURNEA

90.## AUTO INDIA (3026), SRI DHAM MANDIR, PURNEA CITY, PURNEA 854302, PH :854301-9470204501

SASARAM

91.## TRIPTY CAR SERVICE CENTRE (5535), NEAR RELIANCE PETROL PUMP, G.T. ROAD,NH-2,SASARAM-821115, DISTRICT-SASARAM, BIHAR, PH :821115-9934792421 / 6207468438.

SITAMARHI

SITAMARHI AUTO CARE (6050), INDUSTRIAL AREA,RAJOPATTI, PO. SITAMARHI-843302, DISTRICT-SITAMARHI, BIHAR, PH. 843302-9430012437 / 9973024437.

CHANDIGARH

CHANDIGARH

93.** CAR CLINIC (179), PLOT NO-81, INDUSTRIAL AREA, PHASE-2, CHANDIGARH, PH :160002-9417216782 / 6283137303

94.## HI-TEK MOTORZ (4743), PLOT NO. 658, INDUSTRIAL AREA, PHASE-1, CHANDIGARH, PH. 160002-9872567868

95.## RATTAN MOTORS (1155), SECTOR 23-C, CHANDIGARH-160 023, , PH :160023-9814008335.

CHHATTISGARH

AMBIKAPUR

MARUTI AUTO CARE (4839), KHARSIA NAKA, AMBIKAPUR -497001, DISTRICT-SURGUJA, CHATTISGARH, PH -497001-9425256087 / 9826135485

BILASPUR (CHHATTISGARH)

97.## RAINEY'S AUTO CARE (4770), NEAR GREEN PARK COLONY, JARHABHATA, BILASPUR, CHATTISGARH- 495001, PH -495001-929884951 (107752-224224

JAGDAI PUR

98.## VISHWAKARMA AUTOMOBILES (4467), RAJMAHAL PARISAR, BAHAMBERS OF COMMERCE ROAD, JAGDALPUR, CHHATTISGARH, PH-494001-9753300033 / 6266390324

JAMNIPALI

9.## AUTO CARE (3823), 203, J P COMPLEX SADA COLONY, JAMNIPALI-495 450, TEH. KATHGHORA DIST. KORBA (CHATTISGARH), PH 495450-7587399102 / 9827176849

KORBA

100.## AUTO SELF SERVICE (8940), RAILWAY STATION CANAL ROAD, NEAR SUNALIYA RAILWAY CROSSING, MURARKA GALI, KORBA, CHATTISGARH -495678, PH :495678-9229495000 / 6262646363.

MANENDRAGARH

01.## SHARMA AUTO CENTRE (5354), MAIN ROAD -MANENDRAGARH, DISTRICT - KOREA, PIN -497442, CHHATISGARH, PH :497442-7771011802 / 7771011801077771-241872/07771-215305.

RAIPUR

102.## SHIVAM CAR SERVICES (4774), BILASPUR ROAD, KHAMTARAI, RAIPUR-492006, CHATTISGARH, PH: 492006-9039090522 / 9826192574.

RAJNANDGAON

103.## SAI MOTORS (3672), OPP DENTAL COLLEGE, SUNDARA, DURG NAGPUR HIGHWAY (NH-8), RAJNANDGAON - 491 441, PH :491441-3893404117.

DELHI

DELHI

.* AAPKA KARKHANA (MOTORS) PVT. LTD. (869), 62/I POSANGIPUR MAIN MARKET, A-3 BLOCK JANAKPURI, NEW DELHI-58, PH.:110058-9811034869. 105.## ANAND MOTORS (4471), B-27, G.T. KARNAL ROAD, INDUSTRIAL AREA, NEW DELHI-110033,

> A-ONE AUTOMOBILES (3362), 487/35 NATIONAL MARKET, PEERAGARHI, DELHI-110 087.

PH:110033-9582379699

PH:110087-9810257472.

ASHA AUTOMOBILES (850), A-2 CHOTTEY LAL PARK, NAJAFGARH ROAD, OPP.KIRTI NGR.P.O, NEW DELHI-15,

PH:110015-9818467898.

AUTO ENGRS.SERVICE STN. (8023),
OPP.MODEL TOWN, DERAWAL NAGAR

OPP.MODEL TOWN, DERAWAL NAGAR, DELHI-9,

PH:110009-9811137929.

09.* AUTO POINT SERVICE (1267), 70B RATTAN PARK, OPP. RAMESH NAGAR, NEW DELHI-110 015, PH :110015-0958062220

10.## AUTOTECH ENGINEERS (4551), PLOT NO.
20-24, MATIYALA VILLAGE, SECTOR-3, NEAR
DPS DWARKA NEW DEI HI-110075

PH :110075-9811608008.

111.## BAJAJ MOTORS (4940), T-5/242,
MANGOLPURI INDUSTRIAL AREA, PHASE-1,
NEW DEI HL110083

PH :110083-9811418505.

112.## BASANT MOTORS (8003), 78 TOLSTOY LANE,
BEHIND SCINDIA HOUSE, NEW DELHI-110

PH :110001-9811522266/9811309581.

113.## BHAGIRATHI MOTORS (4737), PLOT NO.
153/543, POOTH KHURD, DELHI-110039,

PH :110039-9810804556.

114.## BHASIN SERVICE STATION (830),
DR.K.S.KRISHNAN ROAD, NEAR PUSA GATE,
NEW DELHI-110 012.,
PH :110012-9971977992.

115.** BRIGHT MOTORS (P) LTD. (885), C-263
PEERAGARHI, OUTER RING ROAD, DELHI110.087.

PH:110087-9810203018.

116.* DRIVE WELL SERVICE STN. (866), 1/486,G.C.S. COMPLEX,MAIN G.T. ROAD DILSHAD GARDEN,NEW DELHI-110095 DELHI

PH :110095-9811020603.

117.## ENGINEERS SERVICE STATION (834), SHRI AUROBINDO MARG, (SAFDARJANG AIRPORT), NEW DELHI-110 003, PH :110003-9654262692.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

118.##	EXCEL AUTOMOBILES (3342), PLOT NO. 78, BAGDOLA VILLAGE, SECTOR 8, DWARKA,
	NEW DELHI-110 077,
	PH:110077-7011765194.
119.*	EXCLUSIVE AUTOMOBILES PVT. LTD. (3546),
	98 MANGOLPUR KALAN, SECTOR-2 NEAR
	JAIPUR GOLDEN HOSPITAL, ROHINI,
	DELHI-110 085,
400 ##	PH:110085-9910782127.
120.##	GLOBE SERVICE STATION (3631), 18TH KM MATHURA ROAD, BADARPUR, NEW
	DELHI-110 044,
	PH :110044-9818630354.
121.##	HUNDRED PERCENT FILLING & SERVICE
	STATION (4939), LSC, SECTOR-9, OPP. NHAI,
	DWARKA, NEW DELHI-110075,
	PH:110075-9910586999.
122.##	IMAGE (2561), IOC PUMP, NEAR SAMACHAR
	APT. OPP. KIRTI APT., MAYUR VIHAR
	PHASE-I EXT., DELHI-110 091,
400 **	PH:110091-9312082213.
123.**	R S AUTOMOBILES (273), 111/9 KISHANGARH, OPP. CNG PUMP NEAR SPYM
	INSTITUTE, ARUNA ASAF ALI ROAD, VASANT
	KUNJ. NEW DELHI – 110070.
	PH :110070-9540944009/9540942000.
124.**	KUMAR AUTOMOBILES (855), B-281 OKHLA
	INDUSTRIAL AREA, PHASE-I, NEW DELHI-110
	020,
	PH :110020-9810001625.
125.**	MULTAN AUTOMOBILE ENGRS. (853), B-7/1
	OKHLA INDUSTRIAL AREA, PHASE II, NEW
	DELHI-110 020., PH :110020-9810186699.
126.**	NAVEEN AUTOMOBILES (4934), 37,
120.	PATPARGANJ INDUSTRIAL AREA, NEW
	DELHI-110092, ,
	PH :110092-9911278537.
127.##	NORTHERN SERVICE STATION (337), SARAI
	BASTI, ROAD NO.40, OPP. SHASTRI NAGAR,
	DELHI-35,
	PH :110035-9213710643.
128.**	P R G MOTORS (365),
	A-99.103CH.TEKCHAND MARKET, GANESH NAGAR - TILAK NAGAR, DELHI-110 018,
	DELHI.
	PH :110018-9711196811.
129.##	QUTAB SERVICE STATION (8078), MEHRAULI
,	ROAD, NEW DELHI-110 017, ,
	PH :110017-9811021862.
130.**	RAJINDRA SERVICES P.LTD. (826), B-55
	G.T.KARNAL ROAD, INDUSTRIAL AREA,
	DELHI-110 033.,
	PH :110033-9899580820.

131.## ROHAN SERVICES (5444), PLOT
NO:125.VILLAGE POCHANPUR, SECTOR - 23
DWARKA, DISTRICT - DELHI (WEST), DELHI,
PH :110075-9911180827.

132.* SATYA SERVICE STATION PVT LTD. (3625)

 SATYA SERVICE STATION PVT. LTD. (3625), L-BLOCK HARI NAGAR, JAIL ROAD, NEW DELHI-64, PH:110064-9873461414.

133.** SEVEN HILLS AUTO.(P)LTD. (848), D-20/1
OKHLA INDUSTRIAL AREA, PHASE II, NEW
DELHI-110 020.,

PH::110020-9811037954.

134.** SHALIMAR AUTOMOBILES PVT. LTD (871),
C-91/9 WAZIRPUR INDUSTRIAL AREA,
ASHOK VIHAR CROSSING, DELHI-110052,
DELHI.

PH :110052-9811171489.

315.## SHIKHAR AUTOMOBILES (5546),
A-21/CHOTTEY LAL PARK, SHIVAJI MARG,
OPP KIRTI NAGAR, METRO PILLAR NO. 341,
DISTRICT -WEST DELHI, NEW DELHI-110015,
PH :110015-08100027047

136.## SHRI BALAJI CAR SCAN (2677), 43/12 OPP, NEW ANAJ MANDI, NAJAFGARH, NEW DELHI-110 043, PH :110043-9811891740

137.## SINTEX SERVICE STATION (777), 883.RITHALA INDUSTRIAL AREA,, FIRNI NALA ROAD,, DELHI - 85, DELHI, PH : 110085-9888030802

138.## SRI BALAJI AUTOMOBILE (8038), KHASRA NO.33, 13/2-12 MAIN BAWANA ROAD, SAMEYPUR (NEAR DELHI COLLEGE OF ENGG.), DELHI, PH :110085-9811039601.

139.## SRI SAI AUTO ENGINEERS (8074), 487/59
PEERA GARHI, INDUSTRIAL AREA, DELHI,
PH :110087-9650531612.

140.## WIG AUTOMOBILES (8012), D-3, S.M.A CO-OP. INDL. ESTATE, (OPP. JAHANGIR PURI CHOWK), G.T. KARNAL ROAD, DELHI-110 033,

PH:110033-9811297607.

141.## YASHWANT PLACE SER.STN. (8022), AFRICA AVENUE. (OPP. CHANAKYA CINEMA), NEW DELHI-21,
PH:110021-9868255788.

GOA

BICHOLIM 142.## SHREE GURUKRUPA AUTOWORLD (1249).

PLOT NO.76, , BICHOLIM, GOA-403 529, PH :403529-9422057272 / 9823831555.

143.## VIPUL AUTOMOBILES (5376), PLOT NO.7,8,9,KAKODA INSUSTRIAL ESTATE, KAKODA CURCHOREM, DISTRICT - SOUTH GOA GOA

KUNDAIM

144.* VIKAS ENGINEERING WORKS (4953), BHOMA, KUNDAIM, GOA-403107, PH :403107-9823780335 / 7741096033

PH:403706-9422018746.

MAPUSA

145.## SARDESAI AUTOMOBILES (2176), 194, GAUNSAWADA, , NEAR MILAGRES CHURCH, MAPUSA, GOA-403 507, PH -403507.974448741 / 868797850

PONDA

146.* DHAVLIKAR AUTOMOBILES (2041), NO.5 TIP TOP MANSION IV, INDIRA NAGAR, DHAVALI, PONDA, GOA-403 401, PH -403401-9890669879 (9923879079

VERNA

47.* LUBRICARE SERVICES (261), 7-D GOULLOY, NH.17 NUVEM, SALCETE, GOA-403 601, PH :403601-9822124376.

GUJARAT

AHMEDABAD

 AUTOWAY (125), MANGALYA COMPLEX, NEAR ANJALI CINEMA CROSS ROAD, BATTHA, AHMEDABAD, PH:380007-9825016888.

49.## DAHISON MOTORS (143), NEAR MANAV MANDIR, DRIVE IN ROAD, AHMEDABAD-380

PH:380052-9898096242.

60.## MEGHDOOT MOTORS (3437), MASONIC LODGE COMPOUND, SHAHIBAUG ROAD, AHMEDABAD-4, PH :380004-9825972345.

51.* POKAR AUTO REPAIRERS (2479), NEAR UNION CO. BANK, SAIJPUR BOGHA, NARODA ROAD, AHMEDABAD-382 345,

PH:382345-9428608515 / 8200852562. 2.* RAJAN MOTORS (2873), C/0 M/S. SUPER SERVICE STATION, 79/80 JAGABHAI PARK, RAM BAUG MANINAGAR, AHMEDABAD-380

008, PH:380008-9825972345. 153.** SPEED AUTO CARE PVT. LTD (5524),

NH-9,VIRAT NAGAR AHMEDABAD, DISTRICT -AHMEDABAD, GUJARAT, PH :380023-997992779.

AMRELI

154.* CAR CARE CENTRE (2734), PATEL GARAGE, CHAKRAGADH ROAD, AMRELI-365 601, (GUJARAT), PH :365601-9825422922

155.* KHODIAR MOTORS (3029), GAVADKA ROAD, AMRELI-365 601, (GUJARAT), PH :365601-9825672657

ANAND

6.* PATEL TRACTOR COMPANY (2221), (SERVICE DIVISION), BEHIND SUNIL CHAMBERS, STATION ROAD, ANAND-388 001,

PH:388001-9925534494.

SHAKTI MOTORS (2226), OPP. J.K. PARK,
NATIONAL HIGHWAY NO.8. P.O.

VAGHASHI-388 320, TA: ANAND DISTT

PH:388320-9825792999.

ANJAR

158.# CAR AGE (5542), PLOT NO.11, MAHATMA NAGAR-1,ANJAR , GADHPADAR ROAD,NR.MAHAKALESHWAR, MAHADEV MANDIR,ANJAR , GUJARAT, PH :370110-9427216886 / 9427211167.

BARDOLI

59.** POOJA MOTORS (361), NEAR GIDC, SURAT ROAD, BARDOLI-394 601, (GUJARAT), PH:394601-9825762621.

BHARUCH

160.* NEW MARUTI MOTORS (5156), 9/16 AKASH GANGA.B/H CNG PUMP, OLD NH -8.BHOLAV , DISTRICT - BHARUCH, GUJARAT, PH :392001-9898611424 / 9879532460.

BHAVNAGAR

161.## VIKRAM MOTOR GARAGE (127), TAKHTESHWAR PLOT, NEAR CHANDRA BHUVAN, BHAVNAGAR - 364 002...

PH :364002-9427145452. BHUJ

162.* ASHA MOTORS (3629), LAL TEKRI, HOSPITAL ROAD, BHUJ-370 001, (GUJARAT), PH:370001-9825225088 / 9427272315.

163.## PATEL AUTOMOBILES (4030), DANDEKAR

COMPOUND, GANDEVI ROAD, BILIMORA, PH:396321-9824123875.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

164.## SUMAN MOTORS (3863), NEAR NISHRAYA CROSSING, BHARAN ROAD, BORSAD, DISTT. ANAND, PH :388540-9825021960.

CHAND KHEDA

165.* BALVINDER AUTOMOBILES (2528), ZUNDAL CIRCLE, BEHINDDWARIKESH PARTY PLOT, NEAR SHAGUN 108, CHANDKHERA, VILLAGEZUNDAL, DISTRICTGANDHINAGAR, GUJARAT -382421,

PH:382424-9924016000/9924061000.

CHIKHLI (GUJ.)

166.## INAL MOTORS (3929), POST MAJIGAM, CHIKLI BILIMORA ROAD, DISTT NAVSARI, PH: 306521,0000033773

167.## SHREE AMBICA MOTORS (2663), KUNDI FATAK, NEAR ADARSH NURSERY, N.H.8, CHIKHLI DISTT. VALSAD (GUJARAT)-396 001, PH :396001-9825131520.

DAHOD

68.* CAR SEVA (2438), SAINT STEPHEN SCHOOL ROAD, GODHRA ROAD, DAHOD. PIN-389151, PH :380151.0478469122

DAMAN

169.## CAR ZONE (4358), SURVEY NO. 70/3, VARKUND, OPP VEERA DA DHABA, VAPI DAMAN ROAD, DAMAN-396210, PH:396210-9824184449

170.## TOP GEAR (5469), DAMAN-KUNTA ROAD, KUNTA DAMAN-396210, DISTRICT UNION TERRITORY , GUJARAT, PH :396210,9825631264

DEESA

171.## VAKHARIA MOTORS (3970), G L PADIAR COMPLEX, PALANPUR PATHAN HIGHWAY, OPP. RAJMANDIR TALKIES, DEESA, PH.38553(397729884) (937729816)

DHAR

172.## GURUKRUPA MOTORS (5876), NR.
NARMADESHWAR MAHADEV TEMPLE,
DHARI,AMRELI ROAD,DHARI-365640,
DISTRICT-AMRELI, GUJARAT,
PH: 365640-9825374658.

DHORAJI

GANDHI NAGAR

173.## UNIVERSE AUTO (5837), SARDAR CHOWK,DHORAJI-360410, DISTRICT-RAJKOT, GUJARAT, PH :360410-9727714643.

174.* LABH MOTORS (4527), PLOT NO - B - 206+207 ,, GIDC, SECTOR -25,, GANDHINAGAR GUJARAT,
PH - 3820/24.9825020030

175.* RIDDHI MARUTI(A DIVISION OF SHREE ARBODA PVT. LTD (2151), E-19/10 G.I.D.C. SECTOR 26, NEAR K-7, GANDHINAGAR-382 044.

PH :382044-9825041331.

176.## SHITAL MOTORS P.LTD. (134), 304 G.I.D.C., SECTOR-28, GANDHINAGAR - 382 028 (GUJARAT)., PH :382028-9924127065.

HALOL

177.## MAA MOTORS (4767), GODHRA ROAD, NEAR TELEPHONE EXCHANGE, HALOL, GUJARAT, PH :389350-9898610212.

HIMMATNAGAR

178.## MEHTA SERVICE STATION (135), NEAR SHANTI GARDEN, RESTAURANT, DIWALI BAUG MOTIPURA, N.H.B. HIMMATNAGAR GUJARAT-383 001, PH:383001-9426555664.

IDAR

179.## SUN MOTORS (5175), IDAR-HIMMATNAGAR HIGHWAY ROAD, AT.KRUSHNAGAR.PO NETRAMILI, TA.IDER DISTRICT SABARKANTA, GUJARAT, PH :383430-928286768

JAMKHAMBHALIA

180.## SHRI HARI OM MOTORS (4539), JADESWAR ROAD CHAR RASTA, OPP. KRISHNA WAY BRIDGE, JAM KHAMBHALIA-361305, GUJARAT, PH -361305-0426055344

JAMNAGAR

I.* LANDMARK AUTOMOBILES (1973), PLOT NO-4/2, JAMNAGAR- KALVAD ROAD, MAHAPRABHUJI BETHAK ROAD, OPP SUBHASH BRIDGE, JAMNAGAR-361 006, (GUJARAT), PH :361006-7600000733.

JETPUR

182.## GIRIRAJ MOTORS (3971), JUNAGADH HIGHWAY, NEAR JALARAM TEMPLE, JETPUR, PH :360370-9727154392

JUNAGADH

183.## MARUTI MOTORS (266), G.I.D.C. - I, RAJKOT HIGHWAY, DOLATPARA, JUNAGADH(GUJARAT), PH :362001-909984988

KALOL

184.## SUNRISE AUTO CENTRE (146), OPP. IFFCO, AHMEDABAD-MEHSANA ROAD, SAIJ KALOL, (NORTH GUJARAT)-382 721, PH :38771-987954207

KAMRF.I

185.* PATEL MOTOR GARAGE (2764), PLOT NO 1,2,3, NAVAGAM, IN: MANISHA HOTEL, OPP DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ, DIST: SURAT-394185, PH:394185-0875127413

KAPADVANJ

186.## DISHA MOTORS (5960),
MAHAMADPURA,KAPADVANJ-NADIAD ROAD,
KAPADVANJ-387620, DISTRICT-KHEDA,
GUJARAT,
PH. 387870-9825641244 / 9426361548

KESHOD

187.## PRASAD MOTORS (3969), VERAVAL HIGHWAY, KESHOD, , PH :362220-9825024488.

LIMDI

188.## PARTH AUTOMOBILES (4171),
OPP.SWAMINARAYAN TEMPLE, NH NO-8A,
LIMBDI DIST, SURENDERNAGAR,
PIN-363421,
PH-363421-9426714510.

LUNAWADA

189.## N.J. MOTORS (4370), MODASSA ROAD, NR. SAIFEE HOSPITAL, LUNAWADA, DIST: PANCHMAHAL (GUJARAT), PH:389230-9924252700.

MEHSANA

190.* SANSKAR MOTORS (5468), PALAVASANA -BECHARAJI ROAD, NR.ONGC FIRE STATION, MEHSANA-384002 , DISTRICT-MEHSANA, GUJARAT, PH:384002-9825106359.

191.** SHUBH AUTO SERVICES (3367), NEAR AGRO PETROL PUMP, OLD RTO, RAMOSNA JAKAT NAKA, MEHSANA (GUJARAT), PH :384001-9825322460.

MORRI

192.## ARUN MOTORS (2071), SANALA BYE PASS, NEAR G.P. GINING MILLS, MORBI -363641, GUJARAT, PH :363841-9825222825

ΝΑΠΙΔΠ

193.## SHIVAM MOTORS (4430), OPP RASHAM RESTAURANT, DABHAM CROSSING, N.H 8, NADIAD, GUJARAT, PH :3873/D-98/50/1960

NAKHATRANA

194.# ASHA MOTORS (4340), NANA ANGLADESH, NAKHATRANA HIGHWAY ROAD, NAKHATRANA, KUTCH, PH -370615,0727409383

PETLAD

195.## SIDDHI MOTORS (4166), OPP. GEB, NEAR RAILWAY CROSSING, NADIAD-KHAMBHAT HIGHWAY, PETLAD, ANAND, PIN-388450, PH :388450,7359465067

RAJKOT

196.** KHODIYAR MOTORS (356), DHEBAR ROAD (SOUTH), ATIKA INDUSTRIAL ESTATE, RAJKOT-360 001, PH :360001-9426202885.

 UNIVERSE AUTO (5544), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM, OCTROI POINT,AHMEDABAD HIGHWAY, RAJKOT-380002, DISTIRCT - RAJKOT, GUJARAT

PH -380002-9879616643

RAJPIPLA

198.## R. N. MOTORS (5255), 22-GIDC NEAR PETROL PUMP, RAJPIPLA, DISTRICT -NARMADA, GUJARAT, PH :393145-992525500 / 8530858649

SAVARKUNDLA

199.## SHYAM MOTORS (8925), OPP. ESSAR PETROL PUMP, AMRELI ROAD,SAVARKUNDLA-364515, DISTRICT-AMRELI, GUJARAT, PH :364515-9427742134

SIDDHPUR

200.## GOOD LUCK MOTORS (5341), 2.UMIYA COMPLEX .NEAR GURUKUL , HIGH SCHOOL SIDDHPUR , DISTRICT - PATAN, GUJARAT, PH :384151-9898428989.

SIHOR

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

201.# MOMAI MOTORS (6032), NR. RAJ MOMAI PETROLIUM, BHAVNAGAR-RAJKOT HIGHWAY,SIHOR-364240, DISTRICT-BHAVNAGAR, GUJARAT, PH:364240-9510201800.

SURAT

202.## EMPEROR CAR TECH (1748), F.PLOT NO.124 NEAR RELIANCE COMPLEX, BESIDE SHEETAL MARBLE, SURAT-DUMAS ROAD PIPLOD, SURAT-395 007, PH.395007-9825033396.

203.** J.K.MOTORS (5158), LUHAR MOHALLA
.POSTT PALGAM, DISTRICT - SURAT, SURAT
-394510, GUJARAT,
PH :394510-9909920902.

204.* NILESH MOTORS (5347), AMBER SHOPPING CENTRE OPP.SADHNA CHAMBERS, VARACHHA ROAD, DISTRICT - SURAT, GUJARAT.

PH:395004-9377762660.
205.** PATEL MOTORS (3060), 64 BAJRANG NAGAR, NEAR OCTROI CHECK POST, NANA VARCHA, SURAT-395 006

PH :395006-9909149498.
206.## SEIKON MOTORS (3161), PLOT NO.49,50,51
SAI ASHISH INDL ESTATE, NEAR BAMROLI
BRIDGE, 120 FT. BAMROLI ROAD, SURAT
(GUJARAT),
PH :394210-9426149996.

SURENDERANAGAR

207.## ADIT MOTORS (1247), 504/B PHASE-III, G.I.D.C. WADHWAN CITY, SURENDRANAGAR-363 035, PH :363035-9879114272

TALALA

208.* RUBY MOTORS (5942), TALALA ROAD , RAMRECHI(GIR), DIST - GIR, SOMNATH -362150, ,

PH :362150-9824061044.

209.## KARAN AUTOMOBILES (2571), OPP. DAMRU WADI, UMBERGAON SANJAN ROAD, UMBERGAON DIST. VALSAD, GUJARAT-396 170, PH :396170-9824336583.

UN.IHA

210.## AMBIKA MOTORS (3932), SADGURU COMPLEX, AHMEDABAD PALAM PUR HIGHWAY ROAD, UNJHA, MEHSANA-384170 PH :384170-9824517382.

VADALI

211.# VRAJ MOTORS (4560), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT), PH :383235-24727364109

VADGAM

212.# CHAUDHARY & CHAUDHARY MOTORS (5651), OPP.RELIANCE PETROL PUMP, PALAMPUR ROAD - VADGAM, DISTRICT - BANASKANTHA, GUJARAT, PH :385410-3864590698

VADODARA

213.** CAR CARE (2229), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390

PH:390016-9825044610.

214.* CAR CLINIC (4640), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT), PH :390004-9925003558.

215.## DREAM MACHINES (2933), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA-390 002, PH :390005-7575809940 / 9913420202.

216.* GENERAL MOTOR REPAIRING WORKS (2529), NEAR LOK SATTA PRESS, NAGARWADA, VADODARA-390 001, PH :390001-9825026106.

217.** HONEST AUTO STRUCTURE WORKS (279), 9, VINODBAUG BEHIND HOTEL SANMAN, JETPUR ROAD, VADODARA, PIN: 390005, PH: 390002-9824014046.

18.## MAYUR SERVICE STATION (2224), NEAR POLICE STATION, PRATAPNAGAR ROAD, BARODA-390 004, PH :390001-9879453031.

VALIA

219.## HARI OM AUTO CARE (5750), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJRAT, PH:393135-9427336094 / 7990454853.

VALSAD

220.* HONEST AUTO GARAGE (2220), SUGHAR FALIA, BEHIND MOTA GHANCHIWAD, VALSAD-396 001 (GUJARAT), PH :396001-9426110767.

VANTHLI

221.* INFINITY MOTORS (5963), RAVI RATAN' VADLA FATAK , OPP.HP PETROL PUMP , POST VADLA, TAL VANTHLI-362205, DISTRICT-JUNAGADH, GUJARAT, PH :362001-9898990120.

VIRAMGAM

222.## KRISHNA MOTOR GARAGE (4038), OUTSIDE BHARWADI GATE, NEAR BHARAT PETROL PUMP, VIRAMGAM, PH :382150-9476415574

VYARA

223.# PARTH MOTORS (8928), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VYARA, DISTRICT-SURAT, GUJARAT, PH :394650-9898/29/2020

HARYANA

AMBALA

224.## BASSAN MOTORS (4964), 99 TH MALL, AMBALA CATT - 133001, HARYANA, PH :133001-9466000000

225.** GURU NANAK MOTORS (2036), POLICE LINES CHOWK, AMBALA CITY, , PH:134003-8708357725 / 9416155906.

226.## HIRA MOTORS (2740), 207 MILE STONE, VASANT VIHAR GT ROAD, N.H.-1, AMBALA CITY

PH:134002-9255285212.

227.** RAVI MOTORS (1957), 125 STAFF ROAD, HOTEL SAVOY, AMBALA CANTT-126 102, PH 133001-9315110209 / 0416640012

BADHARA

228.* S.S MOTORS (5735), NEAR REST HOUSE, BADHARA-123308, DISTRICT-BHIWANI, HARYANA,

PH:127308-9255141288/9812451052.

BAHADURGARH

229.## GL AUTOMOBILES (5263), MAIN ROHTAK ROAD, SANKHOL OPP CH. DEVI LAL PARK, DISTRICT - BAHADURGARH, HARYANA, PH.:124507-9416303473.

BARARA

230.## LUXMI AUTOZONE (5334), VPO BARARA , DISTRICT - AMBALA, HARYANA, PH :133201-8222024046.

BARWALA (HARYANA)

231.** FAQIR CHAND QUALITY FUELS (5435), KILLA NO.20L.H.S. NH-65., CHANDIGARH ROAD -BARWALA, DISTRICT - HISAR, HARYANA, PH :125121-9991000764.

BHIWANI

232.## VEER MOTOR WORKSHOP (1850), 24 NEW MOTOR MARKET, BHIWANI, (HARYANA)., PH :127021-9416057857.

BHUNA

233.* MITTAL AUTOMOBILES (5748), NEAR BUS STAND, JAKHAL ROAD - BHUNA, PIN-125111, DISTRICT-FATEHABAD, HARYANA, PH 125111-9813207221

FARIDABAD

234.## BALAJI SERVICE STATION (4956), SECTOR
23-24, MAIN ROAD, NEAR BALAJI DHARM
KATA, FARIDABAD-121004, HARYANA,
PH :121001-981870042/0129-4100265

235.** INSUH AUTO (377), 13/3 MAIN MATHURA ROAD, (ADJOINING FRICK INDIA), FARIDABAD-121 003,

:121003-0129-2272587/0129-2272484/981013

36.## KHURANA AUTOMOBILES (2863), 3C/60 B.P. (OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD

PH:121001-9891984841/9810474117.

PERFECT AUTOZONE (P). LTD. (5667), PLOT NO 9, ADJACENT TO UNION BANK OF INDIA, ANKHIR, OPP SEC 21-D, MAIN BADHKAL ROAD, DISTT FARIDABAD, HARYANA -

PH :121001-9953417558/9871466789.
PH :321001-9953417558/9871466789.
SARASWATI AUTOMOBILES (4465), 44 B.P.,
NEELAM BATA ROAD, N.I.T, FARIDABAD,

:121001-0129-4029665/0129-2429665/981144 6686

FARRUKHNAGAR

239.** M R MOTORS (5946), GURGAON-JHAJJAR ROAD, OPP. ANAAZ MANDI, FARRUKHNAGAR-123506, DISTRICT-GURGAON, HARYANA, PH :122506-9810831200.

FATEHABAD (HARYANA)

240.## DHINGRA AUTOMOBILES (1856), G.T. ROAD, FATEHABAD, (HARYANA), PH :125050-9896012906.

241.## INDORA MARUTI SERVICE STATION (3064), OPPOSITE M M COLLEGE, SIRSA ROAD, FATEHABAD, 125050, PH:125050-9254080/200

GANAUR

242.## SITA AUTOMOBILES (4260), 347, WARD NO. 10, BST ROAD, GANAUR, DISTT- SONEPAT, PH:131101-9992022047.

GANGWA

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

243.** PANCHMUKHI AUTOMOBILES (5968), HISSAR RAJGARH ROAD., GANGWA-125001, DISTRICT-HISSAR, HARYANA, PH :125001-9728100029 / 9255562564.

GOHANA

244.## KRISHNA MOTORS (4132), ROHTAK ROAD, GOHANA, , PH :131301-9017062999

GURGAON

245.## A & A ENTERPRISES (4639), 396, PHASE-IV, UDYOG VIHAR, GURGAON (HARYANA), PH :122015-8851819511.

246.## GANGA MOTORS (363), SHIVPURI, GURGAON-122 001, ,

:122001-0124-2314940/0124-2322084/981043

247.* KUMAR AUTOMOBILES (4848), BEHRAAMPUR ROAD , NEAR NH-8, GURGAON -122001, HARYANA, PH

PH :122002-9873431696/0124-2215696/9873448 804.

248.## MANISH AUTOMOBILES (4777), GHATA ROAD, WAZIRABAD, NEAR SECTOR-56, GURGAON-122001, HARYANA,

> :122001-9873243858/9899561595/989947528 8.

249.** QUTAB AUTOMOBILES (3668), KHEWAT/ KHATA NO 714/909, VILLAGE JHARSA, UNITECH CYBER PARK ROAD, SECTOR 39, GURGAON, HARYANA 122001, PH:122001-9811687333, 9582229333.

250.## RAJASTHAN AUTO WORKS (4760), LT. ATUL KARATIA MARG, NEAR PETROL PUMP, AKASHI FILLING STATION, AMAN PURA, SECTOR-5 ROAD, GURGAON-122001 (HARYANA), PH :122001-8368972946/9910070220.

251.## S G MOTORS (5756), PLOT NO.494, SECTOR 37., PACE CITY II, VUDYOG VIHAR VI -GURGAON, DISTRICT-GURGAON, HARYANA, PH 122001, 2711770092

2.** M R MOTORS (6038), VIJAY VIHAR, MAIN SILOKHRA ROAD, SEC-30, GURGAON-122002 , HARYANA , PH 122001-9992111244

253.** SOMESH AUTOMOBILES (455), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002, PH-122002,9717070830, 0124-2352162

254.## SRI PARKASH AUTOMOBILES (5862), BAJGHERA ROAD,NEAR PARKASH PURI ASHRAM, NEW PALAM VIHAR,GURGAON-122001, DISTRICT-GURGAON, HARYANA,

PH :122001-9899157729/9810070098.

TOP GEAR AUTOMOTIVE ENGINEERS (4464),
MAIN JHARSA ROAD, GURGAON, (HARYANA),
PH

:122001-0124-4039011/9810304011/9891439

HANSI

256.** VIKAS AUTOMOBILES (4744), SHANTI NIKETAN, OPP. JIND BYE PASS, G.T. ROAD, HANSI, DISTRICT-HISSAR (HARYANA), PH :125033-9466248037.

HISSAR

257.* PALCO MOTOR GARAGE (4739), 96 AUTO MARKET, HISSAR-125001, HARYANA, PH :125001-9729601111.

258.* SAI AUTOMOBILES (5267), TOSHAM ROAD, NEAR AAKASH INSTITUTE, SECTOR-13, HISSAR, HARYANA,

PH:125001-7988238034 / 8168092229.
259.** SALASAR AUTO (4735), OPP. VIDYUT NAGAR GATE NO. 2, DELHI ROAD, HISSAR-125001, HARYANA.

PH:125001-9355486716.

HODAL

260.## VED MOTORS (2247), HIGHWAY ROAD, NEAR RAILWAY STATION CHOWK, HODAL-121 106, (FARIDABAD), PH :121106-7988978936.

INDRI

261.## ASHOKA MOTOR (6041), OPP. PARTAP FILLING STATION, LADWA ROAD, TEHSIL-INDRI, DISTRICT-KARNAL, HARYANA, PH - 132041-8813000316

ISMAILABAD

262.* VINAYAK MOTORS (6052), OPP. MAHARAJA PALACE , AMBALA HISSAR ROAD ISMAILABAD-136129 , HARYANA, PH 136129-9034820190 / 9416250081

ICDANA

263.## SHIV DARSHAN AUTOMOBILES (6051), ISRANA PANIPAT ROAD, NR. NC COLLEGE,ISRANA-132103, DISTRICT-PANIPAT , HARYANA, PH: 132107-9911366230

JHAJJAR

264.## VASUNDHRA MOTORS (1467), REWARI ROAD, JHAJJAR-124 103, (HARYANA), PH 124/103-0812012180

JIND.

265.## MOHIT MOTORS (1574), SAFIDON GATE, JIND-126 102, , PH :126102-9355129844 / 9215501565

ΚΔΙΤΗΔΙ

266.# HIND AUTOMOBILES (1858), AMBALA ROAD, KAITHAL. .

PH:136027-7015806781.

KANINA

267.## SHREE KRISHNA MOTORS (5953), BHOOP SINGH MARKET,NEAR PETROL PUMP, MAHINDERGARH ROAD,KANINA-123027, DISTRICT-MAHINDERGARH, HARYANA, PH : 123027-9467641678

KARNAL

268.** RUBY MOTORS (4734), 28/3 HSIDC, NEAR NAMASTEY CHOWK INDUSTRIAL AREA, KARNAL-132001, HARYANA, PH: 132001-9896345633, /9034345633.

KHARKHODA

269.* PRANAV MOTORS (5771), SAMPLA ROAD,KHARKAUDA-131402, DISTRICT-SONEPAT, HARYANA, PH. 131402-9896145161.

KUNDLI

270.## SHIV SHAKTI AUTOMOBILES (4628), SECTOR 53, HSIIDC, JANTI ROAD, NEAR K.H.I COLD STORAGE, KUNDLI, SONEPAT, HARYANA -131028, PH:131001-9811047480.

KURUKSHETRA

271.## KARTAR MOTORS (1645), RED ROAD, KURUKSHETRA-132 118, , PH :136118-9896245900.

272.** KARTAR MOTORS (5349), PLOT O 65-66, SECTOR - 2, HUDA INDUSTRIAL, AREA KURUKSHETRA, PH : 136118-9896245900.

73.## SAINI MOTORS (2131), G.T. ROAD, UMRI CHOWK, KURUKSHETRA, (HARYANA), PH :136118-9896183931.

LOHARU

274.## BHAWNA MOTORS (6028), BHIWANI ROAD, LOHARU-127201, DISTRICT-BHIWANI , HARYANA,

PH:127201-8901276555. MAHENDERGARH

275.## SHREE SHYAM MOTORS (5843), NEAR I.O.C PETROL PUMP, MAHENDERGARH-123029, DISTRICT-MAHENDERGARH, (HARYANA), PH 123028-8199982018/9050994709

MANDI ADAMPUR

276.## MITTAL AUTO AGENCIES (2966), 113-15 AUTO MARKET, MANDI ADAMPUR, (HARYANA), PH :125052-9729173300

MANESAR

277.## MAITRI SERVICE STATION (2378), N.H.8,
DELHI-JAIPUR ROAD, MANESAR (GURGAON),
PH 122001.9818001128

NARNAUL

278.## SHYAM AUTO TRADE (1571), SINGHANA ROAD, NARNAUL-123 001, (HARYANA), PH

:123001-01282-251605/01282-251620/946643 2785/9812075785

NILOKHERI

279.## SURENDERA MOTORS (5049), NEW NEHSIL ROAD.NILOKHERI, DISTRICT KARNAL, NILOKHERI-132117, HARYANA, PH :132117-9812510190.

PALWAL

80.** D.K. & R.K. MOTORS (1159), NEAR BUS STAND, , NH-2 PALWAL, PALWAL, PH :121102-9416066647/9050460231.

I.* SHEELA MOTORS (5141), OPP MUNICIPAL COUNCIL OFFICE, OLD 6 T ROAD, DISTRICT - FARIDABAD, HARYANA, PH :121102-9416066251/01275-401501.

PANCHKULA

** PANCHKULA AUTO SERVICES (1949), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA-134 109, (HARYANA), PH :134109-9872441546 / 8558008290/7508041547.

PANIPAT

283.** PREM MOTORS (2266), PLOT NO.134, SECTOR 25 INDUSTRIAL AREA, PANIPAT, PH:132103-9896306380.

PATAUDI

284.** SHUBHAM AUTOMOBILES (4641), REWARI ROAD, PATAUDI, DISTT. GURGAON, PH:122413-0124-2672942/9812665240.

PEHOWA

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

285.* AMAR AUTOMOBILES (2270), OPP. DAV
COLLEGE, AMBALA ROAD, PEHOWA DISTT.
KURUKSHETRA, (HARYANA),
PH :136128-8896002974

RADAUR

286.## SHRI SHIVAM AUTOMOBILES (5852), S.K.
ROAD, OPP, ESSAR PETROL PUMP,
RADAUR-135133, DISTRICT-YAMUNANAGAR,
HARYANA,
PH: 135133-9034384003.

RANIA

287.## SINGLA MOTORS (3779), NEAR BUS STAND, RANIA-125 076, DISTT. SIRSA (HARYANA), PH :125076-9416011238.

REWARI

288.## GAUTAM MOTORS (1837), NARNAUL ROAD, REWARI -123401 (HARYANA)..., PH :123401-9416064894, 01274-22895/01274-22395/01274-325095

01274-22895/01274-222395/01274-325095. 289.## PULYANI MOTORS (4663), BEHIND KAMLA PALACE, CIRCULAR ROAD, REWARI-123401,

HARYANA, PH

:123401-9416064738/01274-252238/01274-25 7938/9955963168. 290.* SHIVAM SERVICES (1466), OPP. CENTRAL

SCHOOL, GARHI BOLNI ROAD, REWARI-123 401, PH :123401-01274-254825/9416288341

SADHAURA

291.## SHREE GANESH MOTORS (5959), NEAR INDIAN OIL PETROL PUMP, KALA AMB ROAD, SADHAURA-133204, DISTRICT-YAMUNANAGAR, HARYANA, PH: 133204-9813376260

SHAHABAD

292.** MAHALAXMI MOTORS (354), LADWA ROAD, SHAHABAD MARKANDA-136 135, (HARYANA), PH :136135-9812036433.

SIWANI

293.## GANESH AUTOMOBILES (5931), NEAR RELIANCE PETROL PUMP,HISAR ROAD,SIWANI, DISTRICT-BHIWANI, HARYANA - 127046, PH :127046-8607113000

SOHNA

294.** SHRI SHYAM MOTORS (8930),
OPP.RAGHUNANDAN PETROL PUMP, NEAR
GD GOENKA INTERNATIONAL SCHOOL,
SOHNA-122103, HARYANA,
PH :122103-9582350079.

SONIPAT

295.## NEW HIGHWAY MOTORS (8923), MAIN DELHI ROAD, SONEPAT, HARYANA, PH : 131001-9416672009

TAURU

296.## R M MOTORS (5842), WADE NO:4BEHIND WINE SHOP MAIN REWARI SOHNA ROAD TAURU-122105, DISTRICT-MEWAT, HARYANA, PH:122105-9812378663.

TOSHAM

297.## MOHINI AUTOMOBILES (6026), OPP.NEW ANAJ MANDI , NEAR MINI BANK, TOSHAM-127040 , DISTRICT-BHIWANI, HARYANA, PH :127040-921595995/9992251000 / 9416392018

UKLANA

298.* SHREE GANESH MOTORS (5747), PLOT NO#29,UKLANA MANDI, DISTRICT-HISSAR, PIN-125113, HARYANA, PH. :125713-8168399836.

HIMACHAL PRADESH

ALAMPUR

299.## SUBH AUTOMOBILES (5964), SH-39,ALAMPUR-176110, DISTRICT-KANGRA, HIMACHAL PRADESH, PH :176082-9816675551 / 7018857731.

AMB

300.## SHUBHAM MOTORS (5933), NEAR PINDI ASHRAM, HAMIRPUR ROAD, AMB-177203, DISTRICT-UNA, HIMACHAL PRADESH, PH :177203-9418114176.

ANNI

301.## SARAJ AUTO WORLD (6044), VERMA BUILDING,NR. NAGAN HARIPUR, TEHSILANNI-172026 , DISTRICT-KULLU HIMACHAL PRADESH, PH: 172026-912905065/9817120002 / 9805030002

BADDI 302 **

2.** LAJ MOTORS (5541), 436.MAUJA SURAJ.MAJRA LABANA, BADDI, DISTRICT -SOLAN, HIMACHAL PRADESH, PH : 173205-9816039189 / 7018196699

BANGANA

303.## TRISHLA AUTOMOBILES (5869), VILLAGE BPO & TEHSIL BANGANA, BANGANA-174307, DISTRICT-UNA, HIMACHAL PRADESH, PH :174307-9817645350

304 ## BARA SERVICE STATION (4634) VILL BANOL

BANOI

TEH SHAHPUR P.O., BANOI, DIST KANGRA (HIMACHAL PRADESH), PH :176209-9418051290 / 9418105642.

BARMANA

305.## AVER AUTO (5955), VILLAGE LAGAT,TEHSIL SADAR, PO BARMANA-174013, HIMACHAL PRADESH, PH -174013-9418064130

BHAMBLA

306.* DHIMAN MOTORS (3837), PLOT NO. 42,,
INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT
MANDI,
PH :175004-9816227437

BHUNTAR

307.## HANDA MOTORS (4262), HANDA COMPLEX, NEAR AIRPORT, BHUNTAR, KULLU (H.P), PH :175125-9816007003.

BILASPUR (H.P)

308.## BHASKAR AUTO SPARE & SERVICE (1730), 8-B ROURA SECTOR II, (NEAR DURGA MANDIR), BILASPUR-174 001 (H.P.), PH:174001-9816436001.

CHAMBA

9.* AUTOZONE (5247), PATHANKOT RAOD .PAREL, SULTANPUR - CHAMBA, DISTRICT -CHAMBA, HIMACHAL PRADESH, PH:176310-9418214848 / 9816416391/01899224747.

10.## KAILASH SERVICE STATIION (3527), AMRIT NIWAS MOHALLA, BONGUTA, CHAMBA TOWN, DISTT. CHAMBA, PH :176310-9896679445 / 9418064885.

DARLAGHAT

311.## CHANDEL SERVICE STATION (5233),
DARLAGHAT , DISTRICT-SOLAN, HIMACHAL
PRADESH,
PH :171102-9816039865 / 9882357000.

DEHRA

312.* WALIA ENTERPRISES (4252), HANUMAN CHOWK, NEAR DEHRA BRIDGE, DEHRA, DISTT. KANGRA, PH :177101-9418152855.

DHARAMSHALA

313.## EAGLE MOTOR SERVICE STN. (6426), SHAM NAGAR, DHARAMSALA-176215 (HIMACHAL PRD.), .

PH :176215-8219915841.

14.## HIM AUTO STATION (8932), VPO DARI, DHARAMSHALA, (H.P.), PH :176057-9418029655.

315.## SHIV SHAKTI CAR CARE (1277), NEAR RAINBOW SCHOOL, DARI ROAD, DHARAMSHALA-176 057, PH :176057-9318752074.

GHUMARWIN

316.## BHASKAR AUTO SPARES & SERVICES (5147), VILLAGE KULARU, GHUMARWIN, DISTRICT - BILASPUR, HIMACHAL PRADESH, PH :174021-9916090504 / 9736074875.

GUMMA

317.## CHAUHAN ENTERPRISES (5660), VILLAGE GUMMA, TEHSIL KOTKHAI, GUMMA, DISTRICT - SHIMLA, HIMACHAL PRADESH, PH:171202-9218690917 / 9816125191.

JAWALA JI

318.## SRI PARBHAT MOTORS (5036), VPO & TEHSIL, JAWALI-(BHANEI), DISTRICT - KANGRA, (HIMACHAL PRADESH), PH :176023-9805511205.

JAWALAMUKHI

319.## LAKSHMI AUTO SPARES & SERVICE CENTRE (4630), NEAR GANJU BAGH, DEHRA ROAD, JWALAMUKHI, TEH. DEHRA, DIST. KANGRA (HIMACHAL PRADESH), PH:176031-9418091048.

KARSOG

320.## DEEPAK AUTOMOBILES (4057), MR. DEEPAK SHARMA, C/O SHARMA GENERAL STORE, KARSOG, MAIN BAZAR, DIST MANDI, HIMACHAL PRADESH, PH :175011-9817063007/9816260061 / 9816850552

KAZA

321.## SPITI MOTORS (6033), VILL. & PO,KAZA-172114, DISTRICT-LAHAUL & SPITI, HIMACHAL PRADESH, PH :172114-9418758974.

KEYLONG

322.## YOLAX MOTORS (3830), KEYLONG, DISTT. LAHAUL & SPITI, , PH :175133-7651031580.

KULLU

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

323.## PURI BROTHER'S (4242), I.O.C DEALER, DHALPUR, KULU, H.P,

PH : 175101-9418395358 / 9805410083. 324.## SURYA MOTORS & SERVICE CENTRE (2943), NH-21, MANALI ROAD, BABELI, DISTT. KULLU-175 138 (H.P.), PH : 175138-9418059956

KUMARHATTI

325.* SOLAN AUTOMOBILES PVT. LTD. (6420), DAGHOTA(SOLAN), P.O.KUMAR HATTI-173 229 (H.P)...

PH:173229-9816030330 / 8352900072.

KUMARSAIN

326.## RED LINE (5965), VILL. KEPU,PO KIRTI SAINZ, TEHSIL,KUMARSAIN-172030, DISTRICT-SHIMLA, HIMACHAL PRADESH, PH :172030-9816027007.

MANDI

327.** BHAGWATI AUTOMOBILES (269), PLOT NO.
13 INDUSTRIAL AREA PHASE 3 SAULI KHAD
MANDI (H.P.),
PH 175001-0418461897

MARANDA

328.## MODERN SERVICE CENTRE (1175), PUSHP COMPLEX, MARANDA-176 102, (H.P.), PH:176102-7018243011.

MEHATPUR

329.## BUDHA AUTO HOUSE (6422), MAIN BAZAR, UNA, MEHATPUR-174315 (H.P), PH :174315-9815971708.

MUBARAKPUI

330.## SHIV SHAKTI AUTOMOBILES (1732), HOSHIARPUR ROAD, MUBARKPUR, DISTT. UNA, (H.P.), PH :177202-9418328361.

NADAUN

331.** CAR CARE ENGINEERS (4423), HOSHIARPUR ROAD, MANPUL, NADAUN DISTT, HAMIRPUR, HP

PH :177033-9857799080 / 9817341181.

NAHAN

332.## AGGARWAL MOTORS (3334), GUNNU GHAT, NEAR TELECOM COLONY, NAHAN-173 001, PH :173001-9418023558

NALAGARH

333.## KRISHNA MOTOR (5275), PEERTHAN.PO NALAGARH, DISTRICT - SOLAN, HIMACHAL PRADESH, PH -174101-0418094064 / 9816496086 PALAMPUR

334.** SANGRAI AUTO SERVICE (6430), OPP. SITLA MATA MANDIR, PALAMPUR-176 061, DISTT. KANGRA (H.P.),

PH:176061-9418085915.
335.## SANTOSHI AUTOMOBILES (4776), VILLAGE & P.O, BHAWARNA, TEHSIL, PALAMPUR, DISTRICT- KANGRA (HIMACHAL PRADESH), PH:176083-9418149387

PAONTA SAHIR

336.## SUMEET MOTORS (1441), SHAMSHERPUR, PAONTA SAHIB-173 025, (H.P.), PH :173025,9418018329

PAPROLA

337.## ABROL AUTOMOBILES (3470), VPO PAPROLA, TEHSIL BAJNATH, DISTT KANGRA, HIMACHAL PRADESH -176115, PH :176115-9418068917

PARWANOC

338.## DIVYA SALES (6428), DIVYA BHAWAN VILL. KAMLI, SECTOR-1, PARWANOO, PH:173220-9816032002 / 9816592119.

PATLI KUHAL

339.* JAMDAGNI MOTORS (760), VILLAGE PATLI KAUHAL, P.O.KATRAIN, DISTT.KULLU (H.P.), PH :175129-9816040247 / 9736340247.

RAJGARH (H.P)

340.## RAJGARD AUTOMOBILES (5458), PO RAJGARH.TEH RAJGARH, DISTRICT -SIRMOUR, HIMACHAL PRADESH, PH:173101-9418021344.

RAMPUR BUSHAHR

341.** HIGHWAY SERVICE STATION (2649), CHUHA BAG, RAMPUR BUSHAHR, (H.P.) - 172001, PH :172001-9805831627 / 9816341746. 342.## KRISHNA AUTOMOBILE (4438), VILL CHUHA

BAG, RAMPUR BUSHAHR-172001, , PH:172001-9418036091 / 8894251999.

RECONG PEO

343.## KRISH AUTO (4134), RECONG PEO, TEHSIL KALPA, DISTT KINNAUR, HIMACHAL PRADESH - 172707, PH : 172707-9816579999 / 7018577899.

ROHRU

344.## KAMTA SERVICE STATION (2338), ROHRU, DISTT. SHIMLA, (H,P.), PH :171207-9418040106

SALASHI

345.## THAKUR AUTOMOBILES (3838), JALANDHAR MANALI NATIONAL HIGHWAY (NH70), NEAR DAV SCHOOL, VILLAGE SALASHI, DISTT HAMIRPIIR

PH:177001-9418490904.

346.## SHAKUNTLA MOTORS (5755), MANDI ROAD-SARKAGHAT, DISTRICT-MANDI, PIN-175024, HIMACHAL PRADESH, PH:175024-9817818822.

SHIMLA

347.** GURRAJ AUTO SERVICE (757), NEAR CPRI ROAD, BEMLOI, SHIMLA-171 001, PH :171001-9816233030

348.** MOTO WORLD (6433), NAVBAHAR, SHIMLA-171 002, , PH :171002-9459050769 / 9459127858.

SOL AN

349.## SOLAN SERVICE CENTRE (764), BYE PASS, NEAR PWD OFFICE, SOLAN-173 212, PH :173212-981622640.

SUBATHU

350.## SHYAM AUTOMOBILES (4558), NEAR SHANTI FILLING STATION, V.P.O RADYANA, SUBATHU, DIST SOLAN (HIMACHAL PRADESH), PH.173206-9418061757.

SUNDERNAGAR

351.** V.M. SERVICE STATION (3777), CHAMUKHA, P O HARABAGH, NH-21, SUNDER NAGAR-174 402 (H.P.), PH :175019-9418064130 / 8219900181.

HEOG

352.## JOSHI MOTORS (2778), SHALLI BAZAR, THEOG, DIST. SHIMLA, (H.P.), PH:171201-9459100051/9459177200.

UNA (H.P)

353.## RUDRA MOTORS (3925), NEAR OLD HOSPITAL CHOWK, NH-22, UNA - 174303 (H.P.)

PH:174303-8628803717 / 9816590299.
TRINITY AUTO FAST ENGINEERS (1755),
JALGRAN TABBA, NANGAL ROAD, UNA,
HIMACHAL PRADESH - 174303,
PH:174303-9816628020.

JAMMU AND KASHMIR

AWANTIPORA

355.## KESAR AUTOMOBILES (5938), KHAR ,MORH,NATIONAL HIGHWAY 1A, AWANTIPORA-192122, DISTRICT-PULWAMA, JAMMU & KASHMIR, PH:192122-7780873161 / 9419507495.

BARAMIII A

356.* MARUTI MASTERS (4369), KANISPORA, BARAMULA, KASHMIR, PH :193101-9906864748 / 9419084777

CHADOORA

7.* VEHICLE MASTERS (4661), MAIN ROAD, CHADOORA-190001, DIST. BUDGAM, JAMMU & KASHMIR, PH:190001-9419441217 / 7006128344, 01951257270.

JAMMU

358.* CARE POINT AUTOMOBILES (4652), OPP. BSF CAMPUS ROAD, AKHNOOR ROAD, JAMMU-180002,

PH:180002-9419283151

59.** CHECK N CARE AUTOMOBILE CENTRE (1773), OPP. GURUDWARA SRI SINGH SABHA, NARWAL BYE PASS ROAD, JAMMU, PH 1480001-0419100708

860.** KWIK FIT (2343), AMBPHALLA, B.C. ROAD,

PH :180001-9419104400

PH:180001-9419104400. 51.** MOBEL GARAGES (441), NARWAL CHOWK, TRANSPORT NAGAR, JAMMU-180 006,

PH :180006-9796800000.

362.## NATIONAL MOTORS (5074), OPP APNA VIHAR.B.P. PETROL PUMP,
NH-1A.KUNJWANI JAMMU, DISTRICT -

NH-1A.KUNJWANI JAMMU, DISTRICT JAMMU, JAMMU & KASHMIR, PH:180010-9419322222.

KARGIL

363.* ZOZILA ENGG. WORKS (374), KARGIL, LADAKH-194 105, PH :194015-9419176212 / 9797455995/01985232360.

KATHUA

64.* KATHUA MOTORS (3323), HATLI MORE, KATHUA-184 102, (J&K), PH :184102-9419150694 / 7006194522.

KATRA

365.## VIDYA AUTOMOBILES (1165), JAMMUR ROAD, KATRA JAMMU ROAD, KATRA, (J&K), PH :182320-9596676576.

KISHTWAR

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

366.## MINTOO MOTORS (4133), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K), PH :182204-9622055250

MATTAN

367.## DANISH AUTOMOBILES (5478), PAHAL GAM ROAD, STATE HIGHWAY - MATTAN, DISTRICT - ANANTNAG, JAMMU & KASHMIR, PH : 192125-9419041724.

PHINTER

368.## BADYAL AUTOMOBILES (4149), C/O BADYAL AUTOMOBILE, PHINTER, TEH BILLAWAR, DISTT KATHUA PHINTER (J & K), PH -184203-9419691916

PULWAMA

369.** KASHMIR AUTOMOBILES (5352), NEAR FRUIT MANDI, PRICHOO PULWAMA, KASHMIR, PH :19/301-96/27/4/291 / 19/33/40/215

RAJOURI

370.## MILLENNIUM MOTORADES (2937), ALPHA GATE, T.C.P., RAJOURI-185 132, (J&K), PH :185132-7006122022.

REASI

371.## U LIKE CAR CLINIC (4771), GITA NAGAR, REASI JYOTIPURAM ROAD, REASI, DISTRICT-UDHAMPUR (JAMMU & KASHMIR), PH : 182311-7006083550 / 9796817800.

SAMBHA

372.## DHANSAR CAR CLINIC (5146), NATIONAL HIGHWAY , SUPWAL SAMBHA , DISTRICT -JAMMU, J&K, PH :184120-9419393949 / 7889476952.

SOPORE

373.## HASSAN MOTORS (2434), BPC DEALER, SOPORE, KASHMIR, PH :193201-9906506786.

SRINAGAR

374.* A.B. MOTORS (5072), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT-SRINAGAR, JAMMU & KASHMIR, PH:190009-9419007966.

375.** ADAM'S AUTOAIDES (5766), SIDCO INDUSTRIAL EXTATE,SHALTENG, SRINAGAR, DISTRICT-SRINAGAR, JAMMU & KASHMIR, PH :191202-9906580089 / 9906580093

376.* HASEEN MOTORS (5249), BY-PASS BRIDGE BAGH MEHTAB, SRINAGAR, JAMMU & KASHMIR, PH:190019-9419006847. 377.## NEW NATIONAL AUTOMOBILES (5073), RAM BAGH.AIRPORT ROAD SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH :190009-9419013778

378.* SRINAGAR AUTOMOBILES (4925), M.A. LINK ROAD, NEAR TRANSPORT YARD BRIDGE, CHINARBAGH, SRINAGAR-190001 (JAMMU & KASHMIR)

PH:190001-9419001793.

SURNKOTE

379.## A.S. AUTOMOBILES (5976), IQBAL NAGAR, SURANKOTE, DISTRICT-POONCH, JAMMU & KASHMIR PH :185121-9469014765 / 7889941355.

VIJAYPUR

380.## BANSI LAL MARUTI SERVICE STATION (4748), SWANKHA MORH, NATIONAL HIGHWAY, VIJAYPUR-180001, DISTRICT-SAMBA (JAMMU & KASHMIR), PH:180001-9419106798 / 9419133434.

JHARKHAND

BOKARO

381.## UUEA AUTOMOBILES (4845), S-21 CITY CENTRE, BOKARO STEEL CITY, BOKARO-827004, JHARKHAND, PH. :827004-9431127441 / 8789306757.

DEOGHAR

82.* GARGEE AUTOMOBILE (2276), OPP. D.C. RESIDENCE, CIRCULAR ROAD, BARMASIA, DEOGHAR-814 112 (BIHAR), PH :814112-9940580983 / 9709700526.

DHANBAD

383.## MAZUMDAR CAR SCAN (5135), BHUFORCE .K G ASHRAM ROAD , SARAIDELA - 828301, DISTRICT - DHANBAD , JHARHAND, PH :828301-9835361472 / 8271749138.

384.## PRIYA AUTO (4868), OPPOSITE MINNING SCHOOL, SINDRI ROAD, BHAGA, DHANBAD-828301, JHARKHAND, PH :828301-9431124817 / 9835146931.

HAZARIBAGH

385.## ALOK MOTORS (379), NEAR INDRAPURI CHAWK, HAZARIBAG-825 301, (BIHAR), PH :825301-9431140740.

386.## SRI RAM MARUTI SERVICE STATION (3663), DEVI DAYAL LANE, HAZARIBAG-825 301, (JHARKHAND), PH :825301-9431384877.

JAMSHEDPUR

387.** CAR CURE (1261), C/O MODERN AUTO STORES, KALIMATI ROAD, SAKCHI, JAMSHEDPUR-1, PH :831001-9234608016 /

9135010351/9771179872.
888.## MAHESHWARI BROS. (5124), NATIONAL HIGHWAY 33, BALIGUMA MANGO, P.O. -M.G.M. MEDICAL COLLEGE, JAMSHEDPUR-831 018, PH :831018-9031144444.

KHUNTI

389.## MOD MOBILES (5579), MAIN ROAD,RANCHI ROAD - KHUNTI, DISTRICT - KHUNTI, PIN -835210, JHARKHAND,

PH:835210-9304468855 / 9006055883.

390.# MAITHON SERVICING CENTRE (5838), MAITHON ROAD, NEAR VMC COLONY, SANJAY CHOWK, PO CHIRKUNDA-MAITHON DISTRICT-DHANBAD, (JHARKHAND), PH:828203-7209423707.

PAKUR

391.## SPEED WHEEL SERVICE CENTRE (4976), MAIN ROAD, PAKUR - 816107, , PH: 816107-0434101017 / 0771815314

RAMGARH

392.## RAHIL MOTORS (5054), C/O NIYAMAT MISTRI, DUSHAD MOHLA, DISTRICT RAMGARH CANTT..

PH :829122-9771577422.

93.## SAINI MOTORS (5126), NEAR VISWAKARMA
MANDIR, MAIN ROAD, RAMGARH CANTT 829
122, DISTT. HAZARIBAG,
PH :820122-0835141302

RANCHI

394.## BHARAT MOTORS (5970), SHIV JEE CHOWK,HARMU ROAD,RANCHI-834001, DISTRICT-RANCHI, JHARKHAND - 834001 PH -834001.490850258

PH: 834001-9008502258.

MARUTI AUTOMOBILES (5127), HOTEL
AKASHWANI MANSION, RATU ROAD,
RANCHI-834 001,

PH :834001-9835156186.

MARUTI CLINIC (2548), LAL KOTHI, OLD
HAZARIBAGH ROAD, KANTA TOLI, RANCHI-1
(BIHAR)

PH :834009-9431109214 / 7004435556.

397.## MOTOR KRAFT (4769), H.B. ROAD, DIPA TOLI, RANCHI-834009, JHARKHAND, PH :834009-9431152162 / 9334152162.

PH:

398.## KRITIVASA AUTOMOBILES (8944), RANCHI TATA HIGHWAY, SIDRAUL, P.S NAMKOM, PH :834010,9661144866 / 8789600234

KARNATAKA

ATHANI

399.## CHOUGULE MOTORS (3874), MIRAJ ROAD, ATHANI, , ,

PH:587314-9448436776.

BAGALKOT

400.## NARA AUTOMOBILES (4357), TP NO. 158 A/2, WARD NO. 10, SHABADI COMPOUND EXTN, BAGALKOT-587101, PH :587101-9880875595

BAILHONGAL

401.# MAHANTH MOTORS (5763), RTO ROAD BAILHONGAL ,TALUK-591102, DISTRICT-BELGAUM, KARNATAKA, PH -591102-9258653166

BAI FHONNUR

402.## SRI ANNAPOORNA MOTORS (5253), MALLE GOWDA COMPLEX.JAYAPURA, ROAD BALEHONNUR ROAD, DISTRICT - CHIKAMAGALUR, KARNATAKA, PH. 577204-9448000131 / 8553270037.

BANGALORE

403.## ADARSHA AUTOMOBILES (4553), # 974
VARATHUR MAIN ROAD, NEAR PURVANKARA
APARTMENTS, AFTER MARATHAHALLI,
RAILWAY BRIDGE, BANGALORE-560037,
PH:560037-9880195463.
404.** ANEKAR MOTORS (227), 230 MAGADI ROAD,

BANGALORE-560 023, (KARNATAKA)., PH: 560 023-9845889911. 405.* ASHWA CARS (2827), #14, 1ST MAIN, 6TH

CROSS, SANJEEVNI NAGAR, MOODAPALYA, BANGALORE 560072, PH:560072-9341228231.

406## BENAKA MOTORS (3237), NO.158/2
VIBHUTIPURA, VIGNAN NAGAR BEHIND
B.E.M.L., NEAR RENUKA SWIMMING POOL,
BANGALORE-560 017,
PH :560 017-9845212416.

CHANDANA MOTORS (4872), NO. 9 UNIVERSITY ROAD, GNANABHARTHI (POST), MARIYAAPPANA PALYA, BANGALORE-560056 (KARNATAKA),

PH:560056-9680659864.

8.* GIRIMAJI ENTERPRISES (258), NO.2 27TH CROSS, K R ROAD, B S K II STAGE, BANGALORE-560 070, PH:560 070-9844004403.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

409.**	GREEN CARS PVT. LTD. (2154), NO.12/6 80
	FEET ROAD, 6TH BLOCK KORAMANGALA,
	BANGALORE-560 095,
	PH:560 095-9845020796.

- 410.* KESHKAMAL MOTORS (2075), NO.943 21ST MAIN, BANASHANKARI 2ND STAGE, (NEAR KIMS MEDICAL COLLEGE), BANGALORE-560 070.
- PH:560 070-9448071067.

 LE MANS MOTORS (3460), NEAR AYYAPPA TEMPLE, S.M. ROAD, T. DASARAHALLY, BANGALORE-560 057, PH:560 057-9845145001.
- 412.* MAYUR ENTERPRISES (249), NEXT TO PIA BHAVAN KIADB MAIN ROAD, PEENYA 1ST STAGE, BANGALORE-58, PH: 560058-9845122156.
- 413.* NEXUS (1153), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE-560 064,
- PH :560 064-9844013436.

 1414.** NEXUS (2768), #275/301, 80 FEET ROAD,
 OPP. M.S. RAMAIAH HOSPITAL (BEL ROAD),
 RMV 2ND STAGE, BANGALORE-560 094,
- PH:560:094-9844013436.
 415.** PACE AUTOMOBILES (1057), 6TH MAIN HMT LAYOUT, R.T. NAGAR, BANGALORE-560:032, PH:560:032-9845004710
- 416.## PUSHPAK MOTORS (4642), 105/1 2ND MAIN NANJAPPA LAYOUT, 'NDYARANYAPURA MAIN ROAD, (OPP KRUTHIKA HOSPITAL), BANGLAORE-560097, PH :560037,9484087420
- 417.## RAJ (2829), NO.10 MAGADI MAIN ROAD, OPP.
 UNANI MEDICINE INSTITUTE, KOTIGEPALYA,
 BANGALORE-560 091,
- PH: 560 091-9663555677.

 418.** SMART CARS (3571), 3RD CROSS NEAR J.B.
 TILES, KAGGADASA PURA MAIN ROAD, C.V.
 RAMAN NAGAR, BANGALORE-560 093,
 PH: 560 093-0863232461
- 419.## SOLOTECH MOTORS (2760), SURVEY NO.82/2,D'SOUZA NAGAR, HOSAKEREHALIH-BANGALURU, DISTRICT-BANGALURU 560085, KARNATAKA, PH :560085-9845072603/7259589375 / 080-26421424.
- 420.## SOLOTECH SERVICE CENTRE (5245), 50 FEET MAIN ROAD. AVALAHALLI, MUNESHWARA BLOCK, DISTRICT -BANGALORE, KARNATAKA, PH: 560010-9845772634.

- 421.* SPEED MOTORS (1750), 17/1
 SUBRAMANYAPURA MAIN ROAD,
 KADIRENAHALLI, PADMANABHA NAGAR,
 BANGALORE-560 070,
 PH :560 070-9845153102
- 422.## TEAM TECH AUTOMOBILES (5662), 78/1,SULEKUNDE, NEAR MUTHANALLUR CROSS., SARJAPURA MAIN ROAD, BANGALORE -562125,
- PH :562125-9538516111.
 TRINITY CAR CARE PVT. LTD (5851).
 SURVEY NO 521, SRI GANDHADAKAVAL
 VILLAGE, NAGARBHAVI,BANGALORE-560091,
 DISTRICT-BANGALORE , KARNATAKA,
 PH :560091-988073880 / 080 23567797.
- 424.** TRINITY MOTORS (4638), NO. 36, 4TH STAGE, W.C. ROAD, BASAVESHWARANAGAR, BANGALORE-560079, PH -560079,9845530474
- 425.** U.M. CARS PVT. LTD. (2847), KARNATAKA
 GOLF ASSOCIATION ROAD, KODIHALLI, OFF.
 AIR PORT ROAD, BANGALORE-560 008,
 PH -560 008, 9845165365
- 426.* VISWAS CAR SERVICES PVT. LTD. (3238), NO 2. (OUT NO OF SY.NO 100/2) OFF SERVICE ROAD, KALYAN NAGAR ROAD, CHELEKERE. BANASWADI POST BANGALORE.-560043, PH :560043-9591313379.

BELGAUM

27.* BHARAT AUTO SCAN (350), 892/1 PB ROAD, BELGAUM-590 016, , PH:590 016-9448120495

BIJAPUR

428.## BAGALI MOTORS (5159), SHIKARKHANA ROAD, BIJAPUR - 586104, DISTRICT -BIJAPUR, KARNATAKA, PH :586104-9448100444.

CHIKBALLAPUR

429.## SUKOVE ENTERPRISES (3426), B.B. ROAD N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA), PH :562 101-9880607034.

CHIKMAGALUR

430.## AAMANTHRANA MOTORS (4346), K.M. ROAD, CHIKMAGALUR, ,
PH :577101-9945462658.

431.## FORMULA MOTORS (338), K.M. ROAD, CHIKMAGALUR-577 101, , PH :577 101-9448743284.

CHIKODI

432.# OM MOTORS (4445), 1751, ANKALI ROAD, NEAR B K COLLEGE, CHIKODI-591201, KARNATAKA, PH :591201-8861555999

CHINTAMANI

433.# TIPPU AUTO GARAGE (5770), MG ROAD,NEAR BAGEPALLI CROSS, CHINTAMANI-563125, DISTRICT-KALOR, KARNATAKA, PH: 563125-9036698340

CHITRADURGA

434.## PRINCIPAL (255), J.M.I.T, N.H.4, P.B. NO.73, CHITRADURGA-577 502, PH -577 502-9731330300

DAVANGERE

435.## HEGDE AUTO CENTRE (172), NO 2007/37, NEAR BIET, SHAMANUR ROAD, DAVANGERE, KARNATAKA-577004, PH :577004-8494853646

436.## SREE MALLIKARJUNA MOTOR (229), NO 68, RMC ROAD, NEAR KSRTC BUS STAND, DAVANGERE, KARNATAKA - 577003, PH - 572 002 - 588701015

DEVANAHALLI

437.# SAHARA AUTOMOBILES (4731), OPP. A . RTO OFFICE, NH-7, B.B. ROAD, DEVANAHALLI-562110, KARNATAKA, PH .562110-9448662364.

HARWAD

438.** MYSORE GARAGE (2468), BELGAUM ROAD, DHARWAD-580 001, (KARNATAKA), PH:580 001-9844133273.

DODDABALLAPUR

439.# PRESTIGE MOTORS (4875), NEAR RAILWAY STATION KHASBHAG, DODDABALLAPUR, , PH:560026-9900274594.

GADAG

440.## MODERN MOTORS (8939), HUBLI ROAD, GADAG-582 103, (KARNATAKA), PH :582 103-9448746579.

GULBARGA

441.## DELUX AUTO SERVICE (5840), SURVEY NO 77/8, VILLAGE KUSNOOR, NEAR -, UNIVERSITY, SEDAM ROAD, GULBARGA-585104, DISTRICT-GULBARGA, (KARNATAKA), PH. 585104-9242991292.

HOSPET

442.## SUPREME AUTO SERVICE (2569), NEAR RTO OFFICE, HARIHAR ROAD, HOSPET-583 203, (KARNATAKA), PH :583 203-9845307361

HUBLI

443.## SHRI BASAVA MOTORS (4968), OPP SANA COLLEGE, APMC PB ROAD, BHIRIDEVARKOPPA, HUBLI-580025, , PH :580025-9980025644

KADUR

444.# SRI SAI MARUTHI SERVICE STATION (5725), ULUKINAKALLU, NH 206, KADUR, , PH -583201-9916047196

KARKALA

445.## KARKALA MOTORS (3549), TELLAR ROAD, KARKALA-574 104, (KARNATAKA), PH :574 104-9845356/44

OLAR

446.## SHIVA SERVICE POINT (2472), M.B. ROAD, KOLAR-563 101, (KARNATAKA), PH:563 101-9448228604.

KOLLEGAL

447.# FIX PLUS AUTO CARE CENTRE (4249), C-8, IND. ESTATE, MAHADESHWARA COLLEGE ROAD, KOLLEGAL-571440, PH :571440-9448807237.

KOPPA

448.## AUTO TECH (3448), MAIN ROAD, UPPERPET, KOPPA-577 126, (CHIKMAGALUR DIST.), PH:577 126-9448156950.

KUMTA

SOLOTECH (4547), NEAR MARUTI TEMPLE, HANDIGON, KUMTA- 581343, PH :581343-9448149607.

KUNDAPUR

50.* PRAKASH AUTO SERVICE (4522), NEAR: K.E.B., VODERHOBLI, KUNDAPURA-576 201, PH:576 201-9341035642.

MANIPAL

51.# MANIPAL MARUTI AUTO WORKS (4578), MANIPAL ALEVOOR ROAD, NEAR R.C. CHURCH, OPP. SIGMA BAZAR, MANIPAL (UDUPI DIST), PH -501102-0448108318

MUDHOL

452.## OM MOTORS (5857), OPP TALUKA OFFICE, LOKAPUR ROAD,MUDHOL-587313, DISTRICT-BAGALKOT, KARNATAKA, PH -587313-968839666,

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

MUDIGERE

453.## BADRIYA CAR SERVICE POINT (5364), K.M.
ROAD,MUDIGERE, DISTRICTCHIKAMANOALORE, PIN - 577132,
(KARNATAKA),
PH:577132-9448007094.

MYSORE

454.** CAR CLINIC (346), 1959/A, BOGADI RING ROAD, NEAR GLN CONVENTION HALL, BOGADI, MYSORE, PH -585106.9342184831

NELAMANGALA

455.## GOUTHAM MOTORS (4332), PATEL CHANNAPPA EXTN, NELAMANGALA-562123, KARNATAKA,

PH:562123-9880251546.

RABAKAVI BANAHATTI

56.# SANGAMA MOTORS (5726), BESIDE CMC,RAMPUR MAIN ROAD, RABAKAVI-587314, DISTRICT-BAGALKOT, KARNATAKA, PH:587314-9480035617.

RAICHUR

457.## HEERA MOTORS (3730), OPP. MOTI MASJID, SHIVJI OIL MILL COMPOUND, TIPU SULTAN ROAD, RAICHUR-584 101 (KARNATAKA), PH: 584 101-9845156322.

RAMNAGARAM

458.# MENEZES MOTORS (4969), NO:315/298A.NEAR KANAKAPURACIRCLE., B.M. ROAD.ARCHAKARAHALL.BAGALORE., DISTRICT-BANGALORE RURAL, KARNATAKA, PH:584101-9986301054.

RANEBENNUR

459.# KIZEN MOTORS (4568), P.B. ROAD, OPP.
A.P.M.C MARKET, RANEBENNUR-581115,
PH :581115-9900922022.

SAGAR (KARNATAKA)

460.## ADITYA AUTOMOBILES (2077), JOG ROAD, SAGAR-577 401, (KARNATAKA), PH :577 401-94480/24395

461.## MALLIKA AUTO CENTRE (2133), MALLIK COMPLEX, B.H. ROAD, SAGAR-577 401, PH :577 401-9448139605

SHIMOGA

462.## NEPTUNE AUTO WORKS (5271), PLOT -5 AUTO COMPLEX , SAGAR ROAD - SHIMOGA DISTRICT - SHIMOGA , KARNATAKA, PH :577204-9448319758 463.* SHIMOGA AUTO ENGG WORKS (246), GARDEN AREA, SHIMOGA-577 201, KARNATAKA, PH :577 201-7899114872.

SIDDAPUR

464.## MARUTI AUTO WORKS (5335), SORAB
ROAD.SIDDAPUR (U.K)-581355, DISTRICT UTTAR KANAND, PIN-581355, KARNATAKA,
PH -581335-9448525801

SIRSI

465.* ARUNDHATI MOTORS (1258), HUBLI ROAD, SIRSI-581 402, (UTTAR KARNATAKA), PH -581 402,9845098822

SRINGERI

466.# SHUBHASHREE MOTORS (5434), AGUMBLE ROAD ,SRINGERI , DISTRICT -CHIKAMAGALUR , SRINGERI - 577139, KARNATAKA, PH :577139:9448170400

TIRTHALLI

467.## SUMUKA AUTOMOBILES (5133), AP ROAD.CEEBENE KERI, DISTRICT-SIMGA SHIMGA-577414, KARNATAKA, PH :577414-9886944949.

TUMKUR

468.## APOORVA CAR CARE CENTRE (5327), B.N.P.
COMPOUND. BEHIND KRISHNA THEATRE,
M.G. ROAD - TUMKUR, DISTRICT - TUMKUR,
KARNATAKA,
PH : 571440-9901515516.

UDUPI

ST. JUDE AUTOMOBILE ENGG. WORKS (4521), B.D.MARG, AMBALAPADI, UDIPI-576 103, PH :576 103-9844991241.

UPPINANGADI

470.## RATNA ENTERPRISES (5447), BUILDING NO 5/514 KUKKAJE, SUBRAMNYA ROAD, UPPINANGADI, PH: 587313-9972995341.

KERALA

ADIMALY

471.## PLATHOTTAM AUTOMOBILES (3864), NH-49,
OPPOSITE TO MINI INDUSTRIAL ESTATE,
ADIMALI-685561,
PH -685561,9447023073 / 04864-223037

ADOOR

472.## AUTO CLUB (2132), NEAR H.P. PUMP, VADAKKADATHUKAVU P.O, ADOOR, PATHNAMTHITTA DISTT, PH :691523-9447440184 / (0473-4293883

ΔΙ ΔΡΡΙΙΖΔ

473.## ESSAR MOTORS (4959), KALARKODE, NEAR CHINMAYA SCHOOL, NH-47, ALAPPUZHA-688003, KERALA, PH -688003-9249938474 / 0477-2267202

ΔΙ ΙΙVΔ

474.## AUTO TEAM (2630), A/189 A, PARUR JUNCTION, ALUVA, (KERALA), PH:683108-9947333760 / 0484-2605550.

AMBALLUR

475.## LAKSHMI DEVI AUTO GARAGE (4137), AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA, PH :680301-9847903949 / 0480-2753728

ANCHAI

476.## NAMI-TAJ (2534), NEAR ST. GEORGE CENTRAL SCHOOL, R.O. JUNCTION, ANCHAL, KERALA -691 306. PH :691306-9447453745 / 0475-2276881.

ANJUMOORTHY

477.## SAFA AUTO CARE (3847), N H ROAD,
MANGALAM PALAM, ANJUMOORTHY POST,
VADAKKENCHERY, PALAKKAD DISTT,
KERALA,
PH:678682-9447303347 / 0492-258146.

ATTINGAL

478.## OM SHAKTI AUTOMOBILES (4466), KIZHUVILAM P.O., MAMOM, ATTINGAL, KERALA-695104, PH :995104-9744658681

AYOOR

479.* MAKKATTU AUTO CLINIC (5051), AYOOR-ANCHAL ROAD PANACHAILA, AYOOR -691306, DISTRICT - KOLLAM, KERALA, PH : 691306-9847288624 / 0475-3254189.

CALICUT

480.## MALABAR MOTORS (4655), EAST NADAKKAVU, P.O. ERANIPALAM, CALICUT-673006, KERALA, PH:673006-9846089190 / 0495-2768699.

MARUTI SCAN (1675), BYE PASS JUNCTION, MEENCHANDA, CALICUT-673 018, PH:673018-9847130508 / 0495-2420315.

CHALAKUDY

482.## STAR MARUTI GARAGE (5367), NH47 BYE PASS, NEAR CRESCENT PUBLIC SCHOOL, .CHALAKKUDY, DISTRICT - THRISSUR, PH -680307-994609375 / 0480-2703047

483.* VIJAY AUTO SERVICE (1626), POTTA, CHALAKUDY-680 307, . PH :680307-9995074628 / 0480-2701521.

CHANGANACHERRY

184.* PALATHRA MOTORS & SERVICE CENTRE (1072), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY-686 104, PH :686104-9447195154 / 0481-2423071.

485.## SAAFAA AUTOMOBILES (1148), PALATHARA CHIRA, BY PASS ROAD, CHANGANACHERRY, KOTTAYAM-686104, PH :686104-9447042517 / 0481-2409997.

CHENGANNUR

NEW TECH AUTOMOBILES (1978), INDUSTRIAL ESTATE, MUNDANCAVU, CHENGANNUR-689 121, KERALA, PH:689121-9388915757 / 0479-2452983.

CHERTHAL A

487.* POZHICKAL CAR WORLD (3037), NEAR BOYS HIGH SCHOOL, CHERTHALA, ALAPPUZHA DIST., KERALA-688 524, PH -688574-994747475 / 0478-7802051

ETTUMANOOR

488.## ROHIT MOTORS (4636), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA, PH:686630-9447079010 / 0481-2790109.

ALANJOOR

489.## AGT MOTORS (5937), KIP JUNCTION, KALANJOOR-689694, DISTRICT-PATHANAMTHITTA, KERALA, PH -689689-3744419444 (14734-270003

KALLAMBALAM

490.# PRAKASH AUTO ENGINEERS (5548), VADASSERIKONAM P.O. KALLAMBALAM, VARKALA,KALLAMBALAM-695143, DISTRICT-TRIVANDRUM, KERALA, PH:695143-9847159618 / 0470-2602630.

KALLUMUTTY

491.## MARUTI CARE (4179), KALLUMUTTY, IRITTY P.O., KANNUR, KERALA - 670703, PH:670703-9946703070 / 0490-2491918.

KALPETTA

492## VARCO MOTORS (4724), 18/226-1, NEAR VELLARAMKUNNU, NH 212, KALPETTA - 673121, ,
PH :673121-9961569898 / 04936-326720.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

KANJIRAPPALLY

493 ## MACK ENTERPRISES (2729), T.B.ROAD. KANIRAPALIV

PH:686507-9447093739 / 04828-202238

KANNUR

494 ## AREN MOTORS (5139) CHAKKARAKAI P.O. MUZHAPPALA DISTRICT - KANNUR KERALA PH :670613-9446771237 / 9446771237

495 ** PIONEER ALITO & ENGG WORKS (4722) KANNOTHUMCHAL ROAD, KANNUR - 2. (KERALA)

PH :670005-9447798255 / 0497-2701315.

KARIMANOOR

496.## MACS AUTOMOBILES (5745), SILVER SQUARE KARIMANNOOR THODUPUZHA DISTRICT-IDUKKI KERALA PH :685581-9633275410 / 0486-2262739

KASARGOD

497.## CARS CARE (4579), ANANDPUR VIDYANAGAR P.O., KASARAGOD, KERALA-671123. PH:671123-9847251115 / 04994-329515.

KATTAKADA

498.## CITY ENGINEERS (4947), MARUTI SERVICE CENTRE, NEYYATTINKARA ROAD, KATTAKADA-695572. DISTRICT-TRIVANDRUM (KERALA).

PH:695572-9447206257 / 0471-2295127. 499.## MADATHIL MOTORS (5456), MADATHIL HOUSE.CHOONDUPALAKA . KATTAKADA P.O. - TRIVANDRUM . DISTRICT -TRIVANDRUM (KERALA) PH :695543-9495192389 / 0471-2290569

ΚΔΤΤΔΡΡΔΝΔ

500.## UNITED SERVICE CENTER (4433), EDASSERT JUNCTION, KATTAPPANA-685508, PH:685508-9961432941/04868-251974.

KAYAMKULAM

501.## PERFECT MOTORS (4948), MARUTI SERVICE CENTRE, NH-47, CHEPPAD. KAYANKULAM-690507

DISTRICT-ALAPPUZHA (KERALA). PH:690507-9447048338/0479-2473618.

KONNI

86

502.## GLOBAL MOTORS (2836), VAKAYAR P.O., KONNI-689 698, (KERALA). PH:689698-9446222944 / 0463-721621.

503.## MUTTATH AUTOMOBILES (5525). ARCORPALAM KONNIL689691 DISTRICT -PATHANANTHITTA KERALA PH:689691-9447431751/0468-2342605.

KOOTHATTIIKIII AM

504.## EXTRA CARE SERVICES (3232), DEVA MATHA JUNCTION M.C. ROAD KOOTHATTUKULAM-686 662, ERNAKULAM DIST. (KERALA), PH:689121-9544552080 / 0485-2252983.

KOTHAMANGALAM

505 ## EXCEL MARUTI SERVICE (4342), BYE-PASS ROAD, KOTHAMANGALAM, FRNAKI II AM-686691

PH -686691-8848605865 / 0485-2862009 506 ## MAJESTIC MOTORS (1253), NEAR THANKALAM BYE-PASS ROAD. KOTHAMANGALAM-686 691 KERALA PH:686691-9946427528/0485-2825530

KUNDARA

SPARK SERVICE (5772), ELAMPALLOOR, P.O. KUNDARA-691501, DISTRICT-KOLLAM. (KERALA)

PH:691501-9809608020 / 9809227100 KUTHUPARAMBA

508.## KRISHNA MOTORS (3435), KUTTIKKUNNU. NEAR 66 KV SUB STATION KUTHUPARAMBA-670 643, KANNUR DIST. (KERALA)

PH:670643-9497296380 / 0490-2361699.

MANANTHAVADY

509 ## AUTO CARE (2541), (SHEEJA AUTO ENGG. WORKS) THAI ASSERY ROAD MANANTHAVADY-670 645, WAYANAD (DIST.), PH -670645-9447040068 / 0493-5240068

MAN.IFRI

510.## MARUTI AUTO HOUSE (4726), CHERANI, KARUVAMBARAM PO, MANJERI, KERALA. PIN 676123, PH:676123-9447129289 / 0483-2766910.

MANNAR

511.## MOHANS AUTOMOBILES (5457), MOHANS AUTOMOBILES & ENGINEERS KUTTEMPEROOR P.O. MANNAR, DISTRICT -ALAPPUZHA , (KERALA), PH:689622-9447877377 / 9447877377.

MANNUTHY

512.** TOP CLEAN SERVICES (2834). 13/450 MANNUTHI BYE PASS, P.O. OLI UKKARA THRISSUR, (KERALA), PH:680651-8592947776, 9846037818 /

MEENANGADI

0487-2372192.

513.## MOTOR TECH (2440), EAST MEENANGADI, KRISHNAGIRI P.O., WAYANAD-673 591, (KERALA). PH:673591-9539195850 / 0493-6248029.

MOOCHIKKAI

514 ## CHELADAN'S MARUTI ENGINEERS (4659). THANLIR ROAD MOOCHIKKAL-676307 MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA)

PH:676307-9895443563 / 0494-2426435. MUNNAR

515 ## PLATHOTTAM AUTOMOBILES (4447). COLONY ROAD, IKKA NAGAR, MUNNAR IDUKKI KERALA - 685612.

MIIVATTIIPIIZHA

JAWAN AUTOMOBILES (2730), MADAVOOR POST, MUVATTUPUZHA-686 669. PH:686669-8943345500/9673102460.

PH:685612-9447023073 / 04865-4222875

NEYYATTINKARA

517.## XANON ENGINEERS (4635), RAVELI TOLL JUNCTION, NEYYATTINKARA, TRIVANDRUM-695121. PH:695121-9447014813 / 0471-2226677.

518.## CONFIDENCE MOTORS (5140), PALUNDA.CHUNGATHARA, NILAMBUR-679334, DISTRICT -MALLAPURAM, KERALA, PH:679334-8075272281/9447681623.

NILAMEL

519.## LIBRA (3431), M.C. ROAD, NILAMEL-691 535, KOLLAM DIST., (KERALA), PH:691535-9895629768 / 0474-2433468.

OCHIRA

520.* MANGALATH AUTOMOBILES (3836), NH 47 VALIYAKULANGARA, OCHIRA P.O. KOLLAM DIST. KERAI A-690526 PH:690526-9847258696 / 0476-2697314.

OLLUR

521.## TOPCLEAN SERVICES (4468), 10/153. CHRISTOPHER NAGAR, P.O OLLUR. TRICHUR (KERALA) PH:680306-9846037818 / 0487-3256947

PALAKKAD

522.## CAR CRAFT (2139), 5/682 (1), MANALI, PALAKAD-678 001. (KERALA). PH:678001-9349607619 / 0491-2544687

PANDALAM

523 * AISHWARYA AUTOMOBILES (2067), NEAR K S R T C BUS STOP PANDALAM-689 501 PH :689501-9847049140 / 0473-4254858

524.## ALLIANCE MARUTI SERVICES (3243), NH-47, PARIPPALLY-691 574, KOLLAM DIST. (KERALA), PH :691574-9349926440 / 0474-2577640.

PATHANAPURAM

525.## MANNIL AUTOMOBILES (4150), NEAR PANCHAYAT OFFICE, PATHANAPURAM, KERALA-689695 PH:689695-9447258496 / 0475-2352998.

PATHNAMTHITTA

526.** C.J. MARUTI CARE CENTRE (1255), VARIYAPURAM, ELANTHOOR EAST P.O., PATHANAMTHITTA-689 643, (KERALA), PH:689643-9446913874 / 0468-321390.

PERAVOOR

527.## CAR CARE AUTOMOBILES (4422), KODENCHAL, PERAVOOR, NIDUMPOYIL P.O. KANNUR- 670650, PH:670650-9946444691/04902-446201.

PERUMBAYOOR

528.## MILLENNIUM MOTORS (4873), OLD VALLAM ROAD, KADUVAL, PERUMBAVOOR-683542. DISTRICT-ERNAKULAM (KERALA). PH:683542-9446661111 / 0484-2524885.

QUII ANDY

529 ## HITECH MARUTI (3025), MAIN ROAD. KOVILANDY PIN-673 305 CALICUT DISTT PH:673305-9447457996 / 0496-2622027

RANNY

530.## DEEPA AUTOMOBILES (5177), DEEPA AUTOMOBILES.PAZHAVANGADI, P.O. RANNY .689673, DISTRICT-PATHANAMTHITTA. KERALA PH :689673-9447216725 / 7012509563

SASTHA MANGALAM

MARSHAL AUTOMOBILES (4035), SWATI NAGAR TC 10/147 PIPPIN MOODUL SASTHA MANGALAM PEROORKADA TRIVANDRUM 695005 PH :695005-9447461101 / 0471-2435380

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

SULTAN BATHERY

532.## AUTOMEK (4725), BEENCHI P.O., SULTAN BATTERY-673 592. .

PH:673592-9249999515 / 0493-6221052.
533.## NEW INDIAM MARUTI SERVICE CENTRE (4577), MYSORE ROAD, SULTAN BATHERY, WAYANAD DISTRICT, KERALA-673592, PH:673592-821682822 / 0493-6223001.

534.## TEE PEE MOTORS (4773), 9/668-B OOTY ROAD, NEAR BLOCK OFFICE, SULTAN BATHERY, WAYANAD (KERALA), PH :673592-8547201421 / 04936-227331.

TALIPARAMBA

535.## YESKAY (3368), KAKATHODE, TALIPAPARAMBA - 670141, KANNUR DISTT (KERALA), PH :670141-9744076850 / 0460-2200518.

THAI ASSERY

536.## SAFE HANDS (3038), ERANHOLI, CHUNGAM, THALASSERY -670 107, (KERALA), PH :670107-9744322317 / (1490-350332)

THALAYOLAPARAMBU

537.* MYALIPARAMPIL MOTORS (3233), SILON JUNCTION, NEAR THALAYOLARAMBU, POOZHIKOL P O 686604, PH :686604-9447562050 / 04829-239788.

THAMARASSERY

538.## MALABAR MOTORS (4645), WARD NO. 12, BLDG NO. 121, WAYANAD ROAD, KARADY, THAMARASSERY, CALICUT, PH :673573-9349114119 (0495-2222887.

THIRUVALLA

539.## MARUTI AUTO SPOT (1628), MUTHOOR, M C ROAD, THIRUVALLA 689 107, PH :689107-9447860777 / 0469-2604540.

THIRUVANANTHAPURAM

540.## EMINENT MARUTI SERVICE (2360), T.C. 610 M.C. ROAD, MANNANTHALA, TRIVANDRUM-695 015, PH: 695015-9447713639 / 0471-2543639.

541.## HITECH INDUSTRIES (1951), NEAR ULLOOR BRIDGE, PATTOM P.O., THIRUVANANTHAPURAM-695 004, (KERALA), PH :695004-9447732057 / 0471-2557550.

542.## MUKUNDANS (3434), POONTHY ROAD, PADMAVILASAM, KUMARAPURAM,, THIRUVANANTHAPURAM-695 011, PH :695011-9349882788 / 0471-2559495. 543.* PROFESSIONAL MOTORS (1256), NEAR ELECTRICITY BOARD, PEROORKADA, TRIVANDRUM-695 005, PH :695005-9047175650 / 0474-2373560

PH: 695005-9947175650 / 0471-2373560.
544.## SREEKARIYAM AUTOMOBILES (353),
SREEKARIYAM P.O.,
THIRUVANANTHAPURAM-695 017,

THODUPUZHA

545.## UNIVERSAL MARUTI (2563), VENGALLOOR P.O., THODUPUZHA, (KERALA), PH :685585-9447023024 / 0486-223022.

PH:695017-9447050313/0471-2595031.

TRIVANDRUM

546.* KICHU MOTORS (5453), TC.49/962 "SREEMOOLAM NAGAR CHIRAMUKKU , MANACAUR (PO) TRIVANDRUM, DISTRICT -TRIVANDRUM, KERALA, PH.895572-9847023025 / 6282562085.

VADAKKANCHERY

47.## TOPCLEAN SERVICES (4354), 275-A, NEAR UTHRALIKKAVU TEMPLE, KUMARANELLUR P.O., VADAKKANCHERY, TRICHUR, PH:680590-9846037818 / 04884-329447.

VADANAPPALLY

548.## MONARCH MARUTI CARE CENTRE (4079), NEAR NORTH JUMA MASJID, GANESHA MANGALAM, P O VADANAPALLY, TRICHUR DIST (KERALA), PH-880614.0947792608 / 0487.2683137

VADAVATHOOR

549.## CCARS (5754), VADAVATHOOR
PO-KOTTAYAM, DISTRICT-KOTTAYAM,
PIN-686503, KERALA,
PH :685503-9447208558 / 0481-2573883.

VARKALA

 S.S. MOTORS (2979), NEAR POLICE STATION, VARKALA-695 141, TRIVANDRUM DISTT., PH :695141-9446104991 / 0472-2604146.

VATAKARA

551.## RANI AUTOMOBILES & ENGINEERING WORKS (1674), NADAPURAM ROAD, MADAPALLY COLLEGE (P.O.), VATAKARA-673 102, PH: 673102-9400513139 / 0496-2513139.

LAKSHADWEEP

LAKSHADWEEP

552.## POPULAR REPAIR & SERVICE CENTRE (2944), SECRETARIAT ROAD, KAVARATTI, LAKSHADWEEP-682 555, PH :682555-9448463737 / 9447162422

MADHYA PRADESH

BALAGHAT

553.## GULAB AUTOMOBILES (1553), VARDHMAN NAGAR, NEAR SHUBHARAMB LAWN, GONDIYA ROAD, KOSMI, BALAGHAT, MP -481001

PH:481001-9425402926.

4.## SAURAV MOTORS (4069), DEENHI ROAD, GARRA INDUSTRIAL AREA, BALAGHAT, MADHYA PRADESH, PH :481001-9300963731 / 9247711942/9826310979/9340999090.

RARWANI

555.## SPEED AUTOMOBILES (5260), KHANDWA BARODA ROAD, NR. BALAJI TOLL KANTA,BARWANI-451,552, DISTRICT-BARWANI, MADHYA PRADESH, PH: 454552,00264,46073

BETUL

556.## ADITYA MOTORS (1263), NAGPUR BHOPAL ROAD, SADAR, BETUL-461 001, MADHYA PRADESH,

PH :460001-9425381581 / 9425381583.

MAA PITAMBARA MOTORS (5241), OPP.RAJENDERA CONVENT SCHOOL, LAKSHAR ROAD - BHIND, MADHYA PRADESH, PH:477001-9826240582 / 7999763632.

BHOPAL

558.## SHRI KRISHAN CAR CARE (1679), POLYTECHNIC ROAD, NEAR PETROL PUMP, BHOPAL. (M.P.).

PH :462002-9424454030 / 0755- 4223943.
SHUBHAM AUTOMOBILES (5052), PLOT NO. 1
& 2, TIRANGA ROAD, SHAHPURA, BHOPAL,
MADHYA PRADESH -462039.

PH :462039-9425009869 / 7354078276 :FAURUS AUTOMOBILES (3372), ALAKNANDA COMPLEX, OPP.VIJAY STAMBH PRESS COMPLEX, M.P. NAGAR ZONE-I, BHOPAL (M.P.)

PH :462011-9303131403 / 9755557261.

** VIDHYA AUTOMOBILES (320), PLOT NO. 235, ZONE II.

B, PH:462011-9826053198 / 0755-579583/0755-4273198.

BIAORA

562.## GURUKRUPA MOTORS (5670), OPP PRABHAT BREAD INDUSTRY, AB ROAD - BIOARA, DISTRICT - BIOARA, MADHYA PRADESH, PH :465674-9425038727

BURHANPUR

63.** SWADESHI MOTORS (4229), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR, MADHYA PRADESH, PH :450331-07325-245150 / 9826337438, 9877146371

DABRA

564.## MODI MOTORS (3857), BALLA KA DERA, JHANSI ROAD, DABRA, GWALIOR, PH :475110-8770360194 / 9425340194, 07524-406853

DAMOH

565.## MARUTI PRIME (1156), BUS STAND, STATION ROAD, DAMOH-470 661, PH :470 661-8319706998 / 94250-68709/, 07812- 223009/9425096209.

DATIA

566.## HIND MOTORS (4470), NH-75, JHANSI BYPASS ROAD, NEAR S.R.I COLLEGE, KALAMPURAM TIRHA, DATIA, MADHYA PRADESH - 475661, PH -475661 -9405969206 / 9425342620/9406999206.

DEWAS

567.## AZAD MOTORS (4534), 10, JAWAHAR NAGAR COMPLEX AB ROAD DEWAS(MP)404051, PH :455001-9827533591 / 9827786007,07272-404051, 9827533591.

DHAR

568.## JIYO MOTORS (5031), OPP DAK BANGLA.INDORE ROAD DHAR., DISTRICT -DHAR, DHAR - 454001, MADHYA PRADESH, PH :454001-9893633559 / 7000939526.

GWALIOR

569.## CLASSIC MOTORS & SERVICE STATION (5242), CHAUHAN PIAO.M.G. ROAD, THATIPUR. MORAR, GWALIOR, MADHYA PRADESH, PH. 474011-9329603001 / 0751-40627100/751-4082710.

570.** MARUTI ENTERPRISES (3021), KHERAPATI ROAD, GWALIOR-474 002, (M.P), PH. 474002-9425114466 / 0751-4087254, 0751-2334567.

HARDA

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

571.## MANOJ UDYOG & SERVICE CENTER (4145), 87-88 INDUSTRIAL AREA CHHIPANER ROAD HARDA M.P. PH:461331-9826227245

INDORE

572 ## BADSHAH MOTORS (5027), 150/2 NOORANI NAGAR NEAR JAIMAI SINGH PETROL PUMP. DHAR ROAD INDORE-452008 DISTRICT-INDORE, MADHYA PRADESH. PH:452008-9826098427

573.** BOMBAY MOTORS (1655), 10 Y.N. ROAD, INDORE-452 003, (M.P.), PH:452003-7314222786/9827522558, 7314076786/9109199770/7869995423.

574.## JYOTI RAGHUNATH MOTORS (5149), 3/3 RAMBAGH, BEHIND PETROL PUMP, INDORE -452001, MADHYA PRADESH, PH :452001-9425353568 / 8085279000

ITARSI

575.## PITAMBARA MOTORS (5041), NH-69.BETUL ROAD.NEAR PLYBOARD, FACTORY ITARSI, DISTRICT - ITARSI MADHYA PRADESH PH:461111-9406525060 / 9826528912.

576 ** UNITY ENTERPRISES (3270), PLOT NO.97, INDUSTRIAL AREA, KHEDA, ITARSI-461 111 PH :461 111-8120025666 / 7974863820

JARAI PUR

577.## SUPER MARUTI SERVICE (4952), 375-A PREMINAGAR OPP GURUDWARA JABAI PUR-482001, MADHYA PRADESH. PH :482001-7999993375 / 8817102002

578.## YASH VEHICLES CARE (2169), 1664, WRIGHT TOWN ,OPP. TELEGRAPH GATE NO. 2 JABALPUR (M.P), PH:482002-9893237505/0761-4004362, 9826259859.

JAWAD

579.## SHARMA MOTORS (5764), IN FRONT OF PAWAN MILL STATION ROAD, JAWAD-458330, DISTRICT-NEEMUCH, MADHYA PRADESH PH:458330-9425441270.

KATNI

580 ## KATNI MOTORS (4949), C/O MAHURANIPUR LINION TRANSPORT CORPORATION NH-7 PANNA MORH, KATNI-483501 (MADHYA PRADESH) PH:483501-9425162660

KHANDWA

581.## M.K.AUTOMOBILES (5326). SANTOSH NAGAR OPP JHEEL ODHYAN INDORE POAD KHANDWA - 450 001 PH -450001-0425085666 / 0733-2244202/9425928222

KIIKSHI

582.## DILIP MARUTI SERVICE CENTER (4649), OPP. GAYATRI SAROVAR, KUKSHI, DISTT PH:454331-9179649974/9893227070.

MANDSALIR

583.## DEV MOTORS (4562), SITAMAU FATAK, MANDSAUR-458001 MADHYA PRADESH PH:458001-9826751534 / 9826751534 JANGID MOTORS (2735), NAYAPURA ROAD.

NEAR R.K. HOSPITAL, MANDSAUR-458 001. (M.P.). PH :458001-9827266583 / 07422-241146/9827231883

MHOW

HIGHWAY MOTORS (4144), A.B. ROAD. 585.* DONGRAGAON MHOW-453441 INDORE M.P. PH -//53///1_0826035653 / 0803187328

MORENA

586.## SHYAM MARUTI SERVICE STATION (8935). SHYAM BIHAR COLONY, A.B. ROAD. MORENA-476 001, MADHYA PRADESH. PH:476 001-7999624671 / 9425366274. 6261344199 8989479231

NAGDA

587.## MARUTI NANDAN (3939), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA, DISTT LLUAIN PH:456335-9910074658/ 07366-241419/07366-242499

SAGAR (M.P)

588.## SHREE SAGAR MOTORS (4955), NEAR GURUDWARA, JHANSI BHOPAL ROAD, BHAGWANGANJ, SAGAR-470002, MADHYA PRADESH, PH:470002-9826070549.

SARNI

589.## JHANVI SERVICE STATION (3738), MAIN ROAD, BAGDONA, SARNI-460 449, DISTT. BETUL (M.P.), PH:460449-9589650034 / 9589650034/9425382313.

SATNA

KAPOOR SERVICING CENTRE (1162), 90 590.* PREM NAGAR, SATNA-485 001, (M.P.) PH 470661-9827095182 / 9131298770/ 7999121471/7225075182

SEON

591 ## HIGHWAY MOTORS (2262), NEAR MOTEL CENTER POINT, SEONI-JABAI PUR HIGHWAY, SEONI, (M.P.) PH:480882-9424928978 / 7000621923.

SHAHDOL

592.## PACE CRAFTERS (2145), NEAR VIRAT TEMPLE BANGANGA TIRAHA REWAROAD SHAHDOL (M.P.) PH:484001-9424701495 07652-241493/9424701495/9826261493

SHAJAPUR

593 ## SHRIYA MOTORS (2568) 174 A B. ROAD SHAHJAPUR-456 001, (M.P.), MADHYA PRADESH PH:456 001-9826783993

SHEOPUR

594 ## GOYAL AUTO (5446), NEAR NABBAN MARKET, BARODA ROAD, SHEOPUR. DISTRICT - SHEOPUR, MADHYA PRADESH. PH:476337-9826240944 / 9131683608.

SHIVPURI

595.* KARUN MOTORS (4273), NEAR ARUN DHARAMKANTA, GUNA NAKA, A.B. ROAD. SHIVPURI. PH:473551-9425728285 / 9425728285.

SIDHI

KHARE MOTORS (4068), NH-75, SINGRAULI ROAD, SIDHI, MADHYA PRADESH, PH :486661-9425177518 / 9425823952.

TIKAMGARH

ASHENDRA AUTOMOBILES (2636), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA, KUNDESHWAR, TIKAMGARH-472 001, MADHYA PRADESH, PH:472001-9009129909 / 9425141840/9009129909.

U.I.IAIN

598.## SUGANDHI BROTHERS (324), DEWAS ROAD, UJJAIN (M.P), , MADHYA PRADESH, PH :456010-9406822255 / 0734-2514751

ZALANI AUTO SERVICE (1554), A 15/9, MAHAKAL VANIJYA KENDRA,, NANAKHEDA, UJJAIN 456010, PH:456010-9713884177 / 9754649666,0734-2553920

VIDISHA

600 ## SAMAY MOTORS (5179) NEAR SC/S SHED PITALMIR CHOURAHA, SAGAR ROAD NH-86 VIDISHA-464002 PH -464002-9425392521 / 07592-250602

WAIDHAN

601 ## ANANT MOTORS (5732) NEAR ESSAR TOWNSHIP BILALINJI WAIDHAN DISTRICT-SINGRAULI, PIN-486886, MADHYA PRADESH

PH:486886-8319050124 / 9425823952.

MAHARASHTRA

AKLUJ

602.## SONAJ AUTOMOTIVES PVT. LTD. (2665). SHANKARRAO MOHITE PATIL, CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.O. BOX NO.-11, AKLUJ -413 101 (MAHARASHTRA), PH :413101-9657713360

AKOI A

603.## AUTOLAND (5936), RAM NAGAR, TOSHNIWAL LAYOUT, AKOLA-444005, DISTRICT-AKOLA, MAHARASHTRA

PH:444005-9422164050.

AKOLE

604 ## SAMARTH CAR CARE (5555) MAHALAXMI COLONY, K.G. ROAD-AKOLE, DISTRICT -AHMEDNAGAR, PIN-422601, MAHARASHTRA, PH:422601-9881759099.

AMAI NER

605.## LUCKY AUTO CARES (5853), R.K. COMPLEX.R.K. NAGAR.DHULE ROAD. AMALNER-425401, DISTRICT-JALGAON MAHARASHTRA PH:425401-9422789764

AMBERNATH

J.S. AUTOMOBILES (4567), B-31/3, MIDC, KALVANI AMBERNATH ROAD AMBERNATH 121501 MAHARASHTRA PH:421501-9370116436 / 9820881130

AURANGABAD

CAR CARE (5173), #85.SERVICE INDUSTRIAL SECTOR TOWN CENTRE CIDCO DISTRICT-AURANGABAD, MAHARASHTRA. PH :431006-9158000029

MARUTI AUTOMOBILES (3441), CHETAN TRADE CENTRE JAI NA ROAD OPP SES SCHOOL AURANGARAD - 431001 PH -431101-9767301999

BADLAPUR

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATION (MASS) (AS ON 31.03.2022) IAIDEFP MOTORS (4779) NEAR REI IANCE 638 A ASHA AUTO SERVICE (570) LO C. DEAI FR

609.## OMKAR AUTO SERVICES (3376), OMKAR BUNGLOW, GOLE WADI, KULGAON STN., BADLAPUR DIST. THANE, PH :421503-9326080457

BARSHI

610.## OM SERVICE CENTRE (5359), KURWEDI ROAD - BARSI, DISTRICT - SOLAPUR , PIN -413401, (MAHARASHTRA), PH -413401-9850437003

BEED

611.## NEW AGWAN SERVICES (2235), 850 SHYOG NAGAR, JALNA ROAD, BEED-431 122, PH :431122-9822217321

BOISAR

612.## SIFAR CAR CARE (4055), PLOT NO. 15 AT-KURGAON, P O KUNDAN, BOISAR TARAPUR ROAD, TAL PALGHAR, DISTT THANE, PH -401506-9765509990 / 8888058000

CHANDRAPUR (MAHARASHTRA)

613.## SHEIKH AUTOMOBILES (5379), APPOSITE GOVT. ITI.CIVIL LINES , CHANDRAPUR, DISTRICT - CHANDRAPUR, MAHARASHTRA, PH :442401-9422171896.

CHIPLUN

614.## MANORKAR AUTOMOBILES (270), NEAR RAILWAY STATION, BOMBAY-GOA HIGHWAY, WALOPE CHIPLUN-415 605, DISTT. RATNAGIRI,

PH :415605-9421239999.
615.## MAYUR MOTORS (168), SITA APARTMENTS, NEAR BAHADUR SHEIKH NAKA, CHIPLUN DISTT. RATNAGIRI, MAHARASHTRA, PH :415605-9422431112 / 9112136050.

DAPOLI

616.* ROYAL AUTO SERVICE STATION (3444),
DAPOLI-MANDANGAD ROAD, MAUJE-DAPOLI,
TAL- DAPOLI, DIST. RATNAGIRI-415 712
(MAHARASHTRA),
PH :415712-8888101776.

DEOPUR

617.** AGRO ENGINEERING SERVICES (2244), DIVERSION ROAD, DEOPUR, DHULE-424 005, PH :424005-9823059471.

DOMBIVI I

618.## MEGA SERVICES (2573), A-173,PHASE-1,, NEW KALYAN BYPASS ROAD , OPPOSITE ADARSH PARK,MIDC, DOMBIVLI (E)-421203, PH :421203-8424070777.

GADACHIROLI

619.## VENUS AUTOMOTIVE (4170), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY, GADACHIROLI, MAHARASHTRA-442605, PH :442605-989228222

HINGANGHAT

620.## S.K MOTORS (5530), SANT KABIR WARD, NEAR SIVAJI MARKET, NH 07, HINGANGHAT,DISTRICT - WARDHA, PIN-442301, MAHARASHTRA, PH:442301-9421726700.

ICHALKARANJI

621.## SAI AUTO LEADS (3821), 7/597 SANGLI VES, ICHALKARANJI-416 115, DIST. KOLHAPUR, PH :416115-0230-2426089

ISLAMPUR

622.## VIJAY MOTORS (5134), PETH ISLAMPUR ROAD , NEAR PETH NAKA -ISLAMPUR, DISTRICT - SANGLI, MAHARASHTRA, PH :415409-9860446084.

JALGAON

623.* SHREE MOTORS (3040), 362 SHIVAJI NAGAR, JALGAON-425 001, , PH :425001-9823150704.

KALWA

624.** SHREE SIDDHI MOTORS (5668), NEXT TO LILAWATI CO-OP SOCIETY, DATTAWADA, KALWA KHAREGAON ROAD-KALWA(W) -400605, DISTRICT - THANE, (MAHARASHTRA), PH :400605-9769775444.

KALWAN

625.## KRISHNA AUTOMOTIVE (4037), GANESH NAGAR, AT POST & TALUKA, KALWAN, DIST NASHIK-423501, PH :423501-8087988735.

KANKAVLI

626.** SAPALE AUTO SERVICE PRIVATE LIMITED (1975), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHUDURG-416 602, PH.416602-9422434701.

KATOL

627.## BALAJI SERVICE STATION (5962), PLOT NO. XI.MIDC, SAWARGAON NOAD, DONGARGAON-, KATOL, NAGPUR-441302, DISTRICT-NAGPUR, MAHARASHTRA, PH :441302-9763367144.

KHAMGAON

628.## JAIDEEP MOTORS (4779), NEAR RELIANCE PETROL PUMP, NANDURA ROAD, KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA), PH :444303-9850352826.

KHED

629.## BHARAT AGENCIES (4548), NEAR KAMAKSHI PETROL PUMP, AT POST KALBANI, TALUKA KHED, DISTRICT RATNAGIRI, 415621, PH -415621-9049024781

KOLHAPLIR

630.## VAKRATUNDA MOTORS (3142), OPP MAHAVIR COLLEGE, NAGALA PARK, KOLHAPUR, PH 416003-0822611559

KOPARGAON

631.* SAI MOTORS (4449), NAGAR MANMAD HIGHWAY, NEAR HOTEL ASHOKA, KOPARGAON, DIST. AHMEDNAGAR (MAHARASHTRA), PH 423601-9850684384

LONAVALA

632.## APPOLO MOTOR REPAIRING WORKS (2543), MUMBAI-PUNE ROAD, LONAVALA, MAHARASHTRA-410 401, PH:415409-9370721905.

MAHAD

633.## SHREE AUTO (2572), NAGALWADI PHATA BOMBAY-GOA HIGHWAY, AT & TALUKA -MAHAD, DISTT. RAIGAD, MAHARASHTRA-402 301, PH .402301-9422495799 / 9975194779.

MALEGAON

634.## MALEGAON AUTO CENTRE (3721), NEAR MOTI BAUG NAKA, MALEGAON-423 203, , PH :423203-9371376911.

MANGAON

635.# KRUPA SERVICES (574), KRUPA SERVICES, AT : NANORE, POST : MANGAON, DISTT-RAIGAD-402 104, PH :402104-9422375444.

MIRAJ

636.## ASHOK AUTOMOBILES (5672), C.S. NO:70-C.CHH - SHIVAJI ROAD, MIRAJ, DISTRICT - SANGLI, MAHARASHTRA, PH :416410-0233-2375961.

MUMBAI

637.* ALLIED AUTO AGENCIES (2666), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052, PH :400052-9768257450 / 9820800691

- ASHA AUTO SERVICE (570), I.O.C. DEALER, L.B.SHASTRI MARG, KURLA, MUMBAI-400 070.
- PH :400070-9833728833.

 AUTO CRAFT (4759), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG, VIKHROLI (W), MUMBAI-400083, PH :400083-9820022227.
- 40.## AMAR AUTOMOBILES (526), KING'S CIRCLE, MATUNGA, MUMBAI-400 019 (MHRS).,
- PH:400019-9869473310.
 ## BANAI AUTO CARE (6053), OPP. MAROL
 POLICE CAMP, NEXT TO AAREY CHECK
 POST, MAROL MAROSHI ROAD, MUMBAI-400
- PH:400059-9819844333 / 9223368506.

 42.** CARKRAFT AUTOMOBILE SERVICES PVT.

 LTD. (4654), ABC GODOWN, MINERVA

 INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR
 SALDHAM MANDEIR MILLIND (M), MIMBAL
- PH:400080-9820296924 / 9833054455.
 643.** CHAMUNDA MOTORS (P) LTD. (520), RAM
 BAUG NEAR SUNDAR DHAM, OFF S.V.ROAD,
 BORIVII LW MIMBAL400 092
- PH: 400092-9820063626.
 644.## CHEMBUR MOTORS (2526), 31/A ANAND
 NAGAR, OFF SION TROMBAY ROAD, SINDHI
 SOCIETY CHEMBUR, MUMBAI-400 071,
 PH: 400071-9870475704
- 645.## CHHAGAN MITHA (8945), CORNER OF WARDEN ROAD & PEDDAR ROAD, POST BOX NO. 6521, MUMBAI -400026,
- MAHARASHTRA, PH:400026-9820861441. 646.## HIND AUTOMOBILES (550), 29 SEWREE
- WADALA ROAD, KING'S CIRCLE, MUMBAI -400 019 (MHRS)., PH :400019-9833876440 / 9869006367.
- 847.## LAXMI AUTO WORKS (2542), PLOT NO.1041, SAYANI ROAD, PRABHADEVI, MUMBAI-400 025, PH :400025-9820303646.
- 48.** ORIX AUTO INFRASTRUCTURE SERVICES LTD (1971), 94 MAROL INDUSTRIAL ESTATE, ANDHERI KURLA ROAD, ANDHERI (EAST), MUMBAI-400 059.
- PH:400059-9820409079.

 POWAI AUTO WORKS (1660), OPP. PANCH KUTIR BUS STOP, 19 ADI SANKARACHARYA MARG, POWAI, MUMBAI-400 076, PH:400076-9820638317 (19833857002

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

650.**	POWAI AUTO WORKS (4966), GALI NO 14/15/16, BUILDING NO1, C WING, KAILASH INDUSTRIAL COMPLX, PARKSITE VIDHROLI
	(W).
	PH:400079-9820635317 / 9833857002.
651.##	PRINCE SERVICE CENTRE LLP (8931), 34
	GAMDEVI ROAD, SANGHANI ESTATE,
	GHATKOPAR (WEST), MUMBAI-400 086,
	PH:400086-9869034445.
652.**	RAVI AUTOMOBILE SERVICES (553),
	GHATKOPAR-MAHUL ROAD, TILAK NAGAR,
	CHAMBUR, MUMBAI-400 089,
	PH:400089-8657442190.
653.**	SHAH CAR CARE (5436), SADANWADI,LAKE

- 653.** SHAH CAR CARE (5436), SADANWADILAKE ROAD OFF LBS MARG, NEAR KRISHNA TALKIES, DISTRICT - MUMBAI (MAHARASHTRA), PH :400078-98220068380 / 9869588115.
 664.** SHAMAL MOTORS (1154), VAITY WADI.
- BHANDUP-SONAPUR ROAD, BHANDUP (WEST), MUMBAI-400 078, PH :400078-9773911111. 655.* ST.FRANCIS AUTOMOBILES (5154), MOUNT POINSUR RORIVALI (WEST). MUMBAI-
- 655.* ST.FRANCIS AUTOMOBILES (5154), MOUNT POINSUR BORIVALI (WEST), MUMBAI -400103, DISTRICT - MUMBAI, MAHARASHTRA, PH:400103-9892876396.
- 656.* SUPER AUTO SERVICE PVT. LTD. (2430), DESAI WADI JAYWANT SAWANT ROAD, NEAR HAPPY HOME SOCIETY, DAHISAR (W), MUMBAI-400 068, PH -400068-0887253000 / 0619128918
- 657.## SURAJ SANGHI SERVICE STATION (438), DR.
 ANNIE BESANT ROAD, WORLI, MUMBAI-400
 018,
 PH :400018-9821115492.

MURBAD

658.## JAYDEEP AUTOMOBILES (5676), MURBAD KALYAN HIGHWAY(NH-222),NEAR NAVDURGA HOTEL, AT-PO-TAL:MURBAD-421401, DISTRICT-THANE, MAHARASHTRA, PH :415621-9423370219 / 8007557868.

NAGPUR

659.* AMIT SERVICE STATION (4158), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMADNAGAR, MAHARASHTRA, PH.414111-0241-2778336.

660.* BALAJI MOTORS (3078), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20,

PH :440020-9960634068.
661.** HASAN GARAGE (2021), MOHAN NAGAR,
NAGPUR - 440 001 (MHRS).,
PH :440001-0712-2533805

- 662.## M S SERVICES (5339), 14 HILL ROAD , GANDHI NAGAR - NAGPUR , DISTRICT -NAGPUR , MAHARASHTRA, PH - MAIO10-93734/2922
- 663.## R. K. MOTORS (3023), 69 A V A LAYOUT, LAKADGANJ, NAGPUR-440 008, PH :440008-9422113088.
- 64.* SAGAR AUTOMOBILES (2667), MARUTI AUTHORISED SERVICE STATION, PLOT NO.3 NEAR PETROL PUMP, WARDHA ROAD UJJWAL NAGAR, NAGPUR-440 025, PH.440025-996095823.
- 665.** SAGAR AUTOMOBILES (4971), WARDHA ROAD,, CHINCHBHAWAN, NAGPUR – 441108, PH :441108-9422145365.
- 666.## SHREEJEE SERVICES (2027), CHANDAK KOTHI, SUBASH ROAD, NAGPUR-440 018, PH:440018-976699321

NANDED

667.## MARUTI CARES AND COLOURS (5778), LABH NAGAR,BACK SIDE OF SURABH HOTEL, NANDED-431605, DISTRICT-NANDED, MAHARASHTRA, PH :431605-9225751444.

NANDURBAR

68.* MAULEE MOTORS (4736), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD, NANDURBAR-425412, MAHARASHTRA, PH :425412-9822377931.

NASHIK

669.## HITECH AUTO SERVICES (4451), SURVEY NO 89/2, PLOT 1 & 2, OPP MOTIWALA MEDICAL COLLEGE, GANGAPUR SHIWAR,, NASHIK, PH: 422007-9225142471.

670.## RACCA SERVICE (3720), RACCA ESTATE, OLD GANGAPUR NAKA, HANUMAN WADI LINK ROAD, PANCHVATI, NASHIK - 422003, PH: 422003-9096846468.

71.## SAI AUTOMOBILES (3722), SAPAT COMPLEX, OPP. PRESS HOSPITAL, NASIK ROAD-422 101, PH :422101-9822027931.

NAVI MUMBAI

672.* BOSS (265), AT/P.O. - TURBHE, SECTOR-22, VASHI, NAVI MUMBAI-400 705, PH :400705-9167766474.

673.## C G MOTORS (4138), PAPR-73, TTC INDUSTRIAL AREA, RABALE, OPP RABALE RAILWAY STATION, THANE- BELAPUR ROAD, MAHARASHTRA, PH:400701-9920205756 / 9167771826. 674.** CHETAN MOTORS (3143), PLOT NO.45/B SECTOR 19/A, OPP. GATE NO.2 DANA BAZAR, BEHIND SHAMIR VITHAL CO-OP BANK VASHI, NAVI MUMBAI-400 705, PH:400705-9892067288 / 9920782630.

NIGDI

675.## SHALU AGENCY (2872), 516/27 PRADHIKARAN, NIGADI, PUNE-411 044, PH :411014-020-27656354 27652631

NIPHAD

676.## SHRI SAI SERVICE STATION (4452), NIPHAD AURANGABAD ROAD, NIPHAD, NASIK, MAHARASHTRA, PH - 422303,2823873999

PACHORA

677.## POOJA MARUTI SERVICE CENTRE (5564), PLOT NO 75,PREM NAGAR ,KRISHNA PURI SHEVAR, PACHORA, DISTRICT - JALGAON MAHARASHTRA, PH -424201-98900320803

PALGHAR

678.## SIDDHI MOTORS (5553), THEMBHEDE ROAD, GANESH KUND., PALGHAR, DISTRICT -THANE, MAHARASHTRA, PH :401404-9890609107.

PANVEL

9.** GANGAL MOTORS (2934), PLOT NO.:125-127,SECTOR-1S,ROAD NO-5, BEHIND CIDCO GODOWN-NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA), PH 410206-932026072 / 8850690300.

680.** IDEAL AUTOMOBILES (2279), IDEAL HOUSE, PLOT NO-83, PANVEL INDUSTRIAL CO OP ESTATE LTD., PANVEL, DISTRICT -RAIGAD, (MAHARASHTRA), PH -410206.0499602650 / 4820063895

PARBHANI

681.## SAI SERVICING CENTRE (5252), P7/5 MIDC, PARBHANI-431 401, MAHARASHTRA, PH :431401-9404504111.

PASHAN

682.* MARUTI CAR SANJIVANI (5278), SURVEY NO 5/2 SUTARWADI. SUSROAD PASHAN, DISTRICT - PUNE, PUNE - 411021, MAHARASHTRA, PH:411021-9960733360.

PATHARDI

683.## SAGAR MOTORS (5979), OPP. TEHSIL KACHERI,NAGAR ROAD, TALUKA,PATHARDI-414102, DISTRICT-AHMEDNAGAR, MAHARASHTRA, PH :414102-9822197369

PEN

684.## NAVNATH AUTO (5677), OPPOSITE RAMWADI,S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA, PH:402107-9834279228 / 9423093203.

PHALTAN

685.## VORA AUTOMOTIVE (2436), SHINGNAPUR ROAD, KOLKI, PHALTAN-415523, PH :415523-7709436262

PIMPALGAON

686.## ASHWAMEDHA AUTO (2435), "ASHWAMEDH", MUMBALAGRA HIGHWAY, PIMPLEGAON (B), DISTT. NASHIK, PH 422209-9766600064

UNE

687.## APPU AUTOMOBILES (5029), MARUTI AUTHORISED REPAIR STATION , #81.SR NO 164.TALAWAD ROAD , KANBAY ROAD.TRIVENI NAGAR , AHARASHTRA, PH :411062-9371017595.

 APPU SERVICE STATION (4927), BG/SEI 11/10, NEAR TELEPHONE EXCHANGE, MIDC, BHOSARI, PUNE-411026 (MAHARASHTRA), PH :411026.020.27123838

689.* ATHARVA CAR SERVICES (5161), 5, BHUSARI COLONY, PAUD ROAD,
KOTHRIUD PLINE-411038 MAHARASHTRA

PH:411038-9665024803.

MANAS AUTOMOTIVE (5443), SURVEY NO 2/4
PARRANKUTILANE NO.1., KARVE NAGAR PUNE, DISTRICT - PUNE, MAHARASHTRA,
PH:411052-982042007

691.* MARUTI CARE POINT (3337), S. NO 273/5,BANER ROAD,OPP. VARSHA PARK, BANER,PUNE-411045, MAHARASHTRA, PH. 411045,9689001475

692.** SAINATH AUTOMOBILES INDUSTRIES (1569), SURVEY NO.36 PLOT NO.1, VADGAON KHURD SINHAGAD ROAD, NEAR GREEN FIELD HOTEL, PUNE-411 041, PH :411041-982214282.

SANTOOR CAR CARE (2053), ASHOK PLAZA,
 32/2 WADGAON SHERI NEAR WEIKFIELD,
 PUNE NAGAR ROAD, PUNE-411 014,
 PH:411014-020-26632000, 9579415112.

RAHURI

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

694.* ANAND MOTORS (4152), IN FRONT OF ASHWINI HOTEL, NAGAR MANMA ROAD, A/P RAHURI DIST-AHMADNAGAR, MAHARASHTRA, PH.:413705-7350008501.

RAVER

695.## RUCHI MOTORS (2631), MARUTI AUTHORISED SERVICE STATION, RAVER-425 508, DISTT. JALGAON, (MAHARASHTRA), PH: 425508-8805373406.

ROHA

696.* AMIT MOTORS (4972), NANA SHANKAR SHETH ROAD , NEAR GOVT REST HOUSE, DISTRICT - RAIGAD , ROHA - 402109, MAHARASHTRA, PH :402109-9028376141.

SAKURI

697.## SHREE SAI SERVICE CENTRE (5344), NAGAR-MANIMAD ROAD. GODAVARI, HOTEL JEWEL. PO:SAKURI, TAL:RAHATA, DISTRICT - AHMEDNAGAR, MAHARASHTRA, PH: 423107-9970741777.

SANGAMNER

698.* SAI MOTORS (2840), NEAR GULEWADI PHATA, PUNE NASIK ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS.), PH :422608-9860027513.

SANGLI

699.** ASHOK AUTOMOBILES (3723), 595/B, M.G.ROAD, SANGLI-416 416, PH :416416-0233-2221001.

700.* AWATI MOTORS (4772), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHARASTRA, PH -416415-942/207284

701.## BALAJI AUTO SERVICE (1564), PLOT NO.43,GOLDEN PARK , BYPASS ROAD,SANGLI-416416 , DISTRICT-SANGLI , MAHARASHTRA, PH :416416,9822106126

SATANA

702.## PATHAK MOTORS (5037), YASHWANT NAGAR, TAHARABAD ROAD,, SATANA -411014, DISTRICT - NASIK, (MAHARASTRA), PH -411014-9890216257

SATARA

703.## SIDDHI AUTOMOBILES (5464), 294/A.DEGAON PATA - SATARA, RAHAMTPUR ROAD MIDC SATARA, DISTRICT - SATARA , (MAHARASTRA), PH :415002-9422403178.

SAWANTWADI

704.* VENKATESHA AUTO CARE (1659), PLOT NO.21 MUMBAI GOA HIGHWAY, KOLGAON-BHOM, SAWANTWADI-416 510, DIST. SINDHUGARH, MAHARASHTRA, PH. 416510-9423304639

SHAHADA

D5.## MATOSHREE AUTOMOBILES (2870), NO.558 SHAHADA DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA), PH :425409-9421726230.

SHIRDI

706.## SHREE GANESH AUTO CARE (4268), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107, PH -423107-02423-242652

SHRIRAMPUR

707.* G.K. MOTORS (2871), K.V. ROAD, SHRIRAMPUR, DISTT. AHMEDNAGAR, PIN-413 709., PH :413709-9822094098.

SOLAPUR

708.** BALAJI MOTORS (1930), 8536 B/1 MURARJI PETH, OPP. OLD PUNE NAKA OFFICE, SOLAPUR-413 002, PH: 413008-9765111110.

THANE

709.* PATRICIA AUTOMOBILES (529), ALIGHT CHAMBER, ADJACENT GOLDEN DYES, OLD AGRA ROAD, HARDAS NAGAR, GOKUL NAGAR, THANE, WEST - 400601, PH :400601-9987175866 / 8691912303.

710.* SEAN MOTORS (5377), SATPALA NAKA, ARNALA-VASAI ROAD, NEXT TO ZEAL RESTAURANT, VIRAR (W) PIN 401301, PH :401301-9324003123 / 7066830153.

711.** STERLING MOTOR GARAGE (555), OPP. RAVI STEEL INDUSTRIES, 2ND POKHRAN ROAD, THANE-400 601,

PH :400601-9820252926 / 9167391688.
712.** THANAWALA MOTOR AGENCY (3724),
DHIRAJ BAUG, L.B.S. MARG, NAUPAD, NEAR
HARINIWAS CIRCLE, THANE-400 602,
PH :400602-9820106904 / 9820082282.

713.* TOP GEAR AUTOMOBILES (4840), SAI NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W), PH :400615-9833795855 / 9320392299

ULHASNAGAR

714.* CHIMAN AUTOMOBILES (3845), NEAR KAJAL PETROL PUMP, BALANI COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR 421003, PH 421003-9850223422

 MODERN CAR CARE (3260), 171/2.RRV INDUSTRIAL AREA, BEHIND SAI BABA MANDIR,SHANTINAGAR, ULHASNAGAR-421 003, MAHARASHTRA, PH :421003-9819774588.

URAN

716.## SAI AUTOMOBILES (5665), STATE HIGHWAY NO.56, NEAR JASAI NAKA, JASAI VILLAGE, URAN-410206, DISTRICT - RAIGAD, MAHARASHTRA, PH.410206-9821806806 / 9664221550.

VADA

717.## SAI MOTORS & SERVICE CENTRE (5675), VARALA, OPP. LAKE CITY, MANOR ROAD, WADA, ,

PH:421303-9226338578 / 9730455664.

VITA

718.## SONA AUTOMOTIVE (5671), MAYANI ROAD, NEAR PRUTHVIRAJ HOTEL, OPP. LAKADE PETROL PUMP, DISTT VITA- 415311, PH: 415311-9890223938

WAI

719.## ADITYA AUTO SERVICE (4271), WAI SATARA ROAD, WAI-412803, SATARA DIST., PH -412803,9423862119

ARDHA

720.## BHARAT MOTOR (1631), NAGPUR ROAD, NALWADI, WARDHA, MAHARASHTRA, PH :442001-9881588388.

WARORA

ROHIT AUTOMOTIVE (5873), NAGPUR, CHANDRAPUR ROAD, VINAYAK-, LAYOUT, TILAK WARD, WARORA-442907, DISTRICT-CHANDRAPUR, MAHARASHTRA, PH:442907-9172060099.

YAVATMAL

722.## M.S. MOTORS (460), AMRAVATI ROAD HIGHWAY, LOHARA, YAVATMAL-445 001, PH :445001-9822222579.

723.## RAMESH MOTORS (2024), GARDEN ROAD, YAVATMAL, MAHARASHTRA-445 001, PH :445001-9422865222

YEOLA

724.## BIJASANI AUTOMOTIVE (3041), NAGAR-MANMAD ROAD, YEOLA, DIST. NASIK (MAHARASHTRA)

MANIPUR

PH:423401-9423185025

IMPHAL

725.## BORDIN MARUTI GARAGE (4879), SANGAIPROU AIRPORT ROAD,, IMPHAL WEST, MANIPUR - 795001, PH :795001-9436023659/7005264886 / 7005525747

ENADATI

726.## KOMUO MARUTI WORKS (4644), NH-2, MAO TAPHOU, SENAPATI HQ, SENAPATI DISTRICT, MANIPUR - 795106, PH -795106-8794109474

MEGHALAYA

TURA

727.## MULTI MOBILE PRECISION (3222), AGLANGGRE, PO ARAIMILE, NEW TURA, MEGHALAYA, 794101, PH:794101-8974057627.

MIZORAM

CHAMPAI

8.# IRDIV- TC AUTO WORKS (5744), SVENTH DAY TLANG, ZOTLANG ROAD, NEW CHAMPHAI-CHAMPHAI, DISTRICT-CHAMPHAI, MIZORAM, PH : 796821-9962405715

LUNGLEI

DIMAPUR

729.## LAWMA ENGINEERING WORKS (3125), , A O C SQUARE, LUNGLEI, MIZORAM-796 701, PH :796701-9436147141 / 9650082623.

NAGALAND

730.** ERJO MOTORS (4871), EAST BLOCK, BURMA CAMP, NEAR BIBLE HOUSE, DIMAPUR, NAGALAND - 797112., PH :797112-9436004350.

ODISHA

ANGUL

731.## ZEET AUTOMOBILES (1573), NALCO NAGAR, KANDASAR, ANGUL - 759 145, ORISSA, PH :759145-9437021285.

BALANGIR

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

732.## ASHIRWAD AUTOMOBILE WORKS (3177), DAMJI GARAGE, THIKADARPARA, , , BALANGIR-767 001, PH -767001-9437223452 / 7008141729

BALASORE

733.## AUTO CARE (432), AT-BAMPADA, PO-CHHANPUR, CITY - BALESHWAR (BALASORE), ODISHA - 756056, PH :756056-9437051944 (9437285606

734.* TEKNO INDIA (3666), D-2/9 INDUSTRIAL AREA, O.T. ROAD, BALASORE-756 003, (ORISSA), PH:756001-9861034990 / 9437953595.

BARBIL

735.## INDU MOTORS (3241), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA), PH :758035-9437718008 / 9861124660.

BARGARH

736.## CARSCAN (1164), PLOT - 1/1 INDUSTRIAL ESTATE, RAILWAY STATION ROAD, BARGARH-768 028, PH - 788078, 9658010355

BHUBANESWAR

737.## INDO JAPAN SERVICE (4936), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PC: PATRAPADA, BHUBANESHWAR-752019, ORISSA, PH -752019-0861095444

CUTTACK

738.* AUTO MATES (426), BIJU PATNAIK CHHAK, TULASIPUR, CUTTACK, ODISHA-753008, PH :753008-9437020646

739.* DURGA SERVICE CENTRE (427), NEAR
PALAMANDAP, BADAMBADI, PO - ARUNODAY
MARKET, DISTT - CUTTACK, PIN-753012,
PH -753012_9437025762

DHENKANAL

740.## ANAND AUTOMOBILES (5449), ANAND NAGAR, IN FRONT OF TARINI MANDIR, DISTRICT - DHENKANAL, PIN - 759001, (ORISSA), PH:759001-9437414972.

JHARSUGUDA

741.## AUTO MECHANIKA (2638), S.H.-10 BEHERAMAL, JHARSUGUDA-768 203, ORISSA, PH-768203-9040380001

PARALAKHEMUNDI

742.## GANAPATI AUTOMOBILES (3178), B. SITAPUR, PARALAKHEMUNDI, DIST. GAJAPATI-761 200, (DRISSA), PH :761200-9827176849 / 06815-322765/9583940023.

PURI

743.## URMILA MOTORS (5040), HERA GOHIRI SAHI CHOWK, PURI -1, DISTRICT - PURI, (ORISSA), PH :752001-7008651960 / 7684837395.

SAMBAI PUR

744.# ANITA AUTO CARE (4834), SALIA BAGICHA, LIONS CLUB ROAD, KUMBHARPARA, SAMBALPUR-768001 (ORISSA), PH 768001-9861248403 / 0437068044

SEMILIGUDA

745.## ASHUTOSH MOTORS (5035), MAIN ROAD.
NH-43,, SEMILIGUDA, DISTRICT-KORAPUT,
(ORISSA),
PH :764036-9437405417 / 7978377160

PONDICHERRY

KARAIKAL

746.## MARUTI TECH (2669),
NO.1.AKKARAIVATTAM,NAGAORE MAIN ROAD,
OPP TO ONGC,KARAIKAL-609604,
DISTRICT-KARAIKAL, PONDICHERRY,
PH. 609604-7373788705 (984238125.

PUDUCHERRY

747.* A.P.P. MARUTI MOTORS (2670), PLOT NO.6 GUNDU SALAI ROAD, NATESAN NAGAR, NEAR 100 FEET ROAD, PONDICHERRY-605 005

PH:605009-7094449900 / 9894059004
MARUTI MISSION (5067), 60 RAGAVENDIRA
NAGAR KAMARAJ SALAI, THATTANCHAVADY
PONDICHERRY, TINDIVANAM ROAD
PONDICHERRY-9, PONDICHERRY,
PH:605009-976689000.

19.** S D K MOTORS (471), PLOT NO.12, 100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004, PH-605004-943/04589 (413-236840)

PUNJAB

AHMEDGARH

750.## GAHIR AUTOMOBILES (2877), LUDHIANA
MALER KOTLA ROAD, VILL. GOPALPUR CITY,
AHMEDGARH, (PUNJAB),
PH -148021-0417553627

AJNALI

751.# VISHWAKARMA MOTORS (5666), NEAR
VIMAL DHARAMKANTA - AJNALI, DISTRICT FATEHGARH SAHIB, PUNJAB,
PH :147301-9814528084

AMLOH

752.## BINDRA MOTORS (5844), NEAR DESH BHAGAT COLLEGE SONTI, AMLOH, DISTRICT-FATEH GARH SAHIB, PUNJAB, PH :147203-98148 82000

AMRITSAR

753.** HANSON AUTOMOBILES (1722), MAQBOOL PURA, G.T. ROAD, AMRITSAR, PH :143001-9815167669

54.** JACKSON LUBRICANTS (364), 16 COURT ROAD, NEAR RAVI GAS AGENCY, AMRITSAR-143 001,

PH:143001-9814299944.

755.** KAPOOR'S KAR KARE (737), I/S MAHA
LAKSHMI, CALICO PRINTING MILLS, OLD
JAIL ROAD, AMRITSAR(PUNJAB).,
PH:143001-9814213113 / 9814705023.

756.* SAGGU SERVICE STATION (733), HIDE MARKET, AMRITSAR-143 001 (PUNJAB)., , PH :143001-8968497779.

BANUR

757.## AMRIK SERVICE STATION (2433), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), PH:140601-9815591325.

BARNALA

758.## GAURAV MOTORS (4962), DHANAULA ROAD, BARNALA - 148101, DISTRICT SANGRUR, PUNJAB, PH -148101.0317512916 / 9888293969

PH :148101-9317512916 / 9888293969.

59.* PUNJAB MOTOR GARAGE (6222), DHANAULA ROAD, BARNALA (PUNJAB), ,
PH :148101-9317512360

BHADSON

760.## FRIENDS MOTORS (2233), NABHA ROAD, BHADSON-147 202, DISTT. PATIALA, (PUNJAB), PH :147202-9815700778.

BHATINDA

761.## KRISHNA AUTOS (4571), 40FT ROAD NAMDEV MARG NEAR INDRANI HOSPITAL ,BATHINDA (PUNJAB) 151001, PH 151001-9888671810

62.** MODERN MOTORS (6234), OPP. T.V. TOWER, MANSA ROAD, BHATINDA, PH :151001-9814177075

763.## SUPER AUTOMOBILES (6232), TINKONI, GONIANA ROAD, BHATINDA, PH:151001-9814036163.

BUDHLADHA

764.## JINDAL AUTOMOBILES (2147), NEAR
P.S.E.B., BHIKHI ROAD, BUDHLADA-151 502,
DISTT. MANSA,
PH 151502-9815516964

DERABASSI

765.## BINDAL AUTOMOBILES (1248), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, PH -140F507-0914449711

DHURI

766.## SHIV MOTORS (1962), NEAR SDM OFFICE, SANGRUR ROAD, DHURI-148 024, PH :148024-9872851068.

DINANAGAR

767.## D.S. MARUTI SERVICE STATION (3333), G.T. ROAD, DINA NAGAR, DIST. GURDASPUR-143 531, (PUNJAB), PH:143531-9814873101 / 9855111868/01875220686.

DIRBA

768.## PENTAGON MECHANICAL WORKS (2564), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB), PH:148035-9876543400 / 9417520528.

DORAHA

769.* FATEH MOTORS (2048), G.T. ROAD, DORAHA, (LUDHIANA), PH :141421-9814031784 / 9814856789.

FAZILKA

770.## BAHL MOTORS (6229), ABOHAR ROAD, FAZILKA-152 123, , PH :152123-9815700550.

FIROZPUR

771.## SUTLEJ AUTOMOBILES (3568), G.T. ROAD, FEROZEPUR CANTT., PIN-152 001 (PUNJAB), PH :152001-9417009985

GIDDARBAHA

772.* JIWAN CAR CENTRE (3442), BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA-152 101, DIST. MUKETSAR (PUNJAB), PH:152101-9779600086 / 8054300086.

GOINDWAL SAHIB

773.## DASS MOTORS (8941), KAPURTHALA CHOWK, GOINDWAL SAHIB, DISTT. AMRITSAR-143 429, (PUNJAB), PH :143429-9914699121 / 9855687121

URDASPUR

* B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

774.* VIJAY SERVICE STATION (749), NEAR RAILWAY CROSSING, PATHANKOT ROAD, GURDASPUR, (PUNJAB), PH :143521-9814437637

HOSHIARPUR

775.## JOGINDER MOTORS (2268), BYE PASS TANDA ROAD, HOSHIARPUR-146 001, , PH :146001-9803227000 / 9417019763.

JAGRAON

776.## DHALIWAL AUTOMOBILES (2035), NEAR AJANTA PETROL PUMP, G.T. ROAD, JAGRAON DISTT. LUDHIANA, (PUNJAB), PH -142026-9814218800

JALANDHAR

777.## CITY POINT SERVICE STATION (4528), AVTAR NAGAR ROAD, BEHIND T.V. CENTRE, OPP HOTEL REGENT PARK, JALANDAHR, PH :144003-9779613576

778.** KAAR KARES (725), G.T.ROAD, JALANDHAR, 144 001 (PUNJAB)., PH :144001-9569/95585 / 9464717117

779.* KAPOOR MOTOR GARAGE (1649), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY, PH :144623-9815040411

780.* PUNJAB MOTOR GARAGE (1575), HMV CHOWK, NEW GRAIN MARKET ROAD, JALANDHAR CITY-144 008, PH :144008-9814675433 / 9872224533/01812255233

KAPURTHALA

781.## T.S. WALIA MOTORS (267), MANSOORWAL JALLANDHAR ROAD, KAPURTHALA, PH :144601-9357211525

KURALI

782.## V K MOTORS (8943), CHANDIGARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNJAB -140103, PH :140103-9814273873.

LALRU

783.## VIKAS MOTORS (2777), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB, PH: 140501-9888191444.

LUDHIANA

784.** PUNJAB AUTO CENTRE (6221), OPP TELEPHONE EXCHANGE, BHARAT NAGAR CHOWK, LUDHIANA-141 001, PH: 141001-9855117003. 785.* REEHAL AUTOMOBILE SERVICES (1176), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA-141 010, PH: 141015-9357110000

786.## SATNAM MOTOR WORKSHOP (4533), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA, PH :141003-9855228591.

787.## STAR AUTOS (4650), JALANDHAR BY PASS, G.T. ROAD, LUDHIANA, PH :141012-9216844220.

788.## VISHAL AUTOMOBILES (1262), G.T. ROAD, DHOLEWAL, LUDHIANA-141 003, PH :141003-9815206060.

MALOUT

789.## DELHI MOTORS (6225), TINKONI CHOWK, BHATINDA ROAD, MALOUT-152107, PH :152107-9876074061.

MANDI GOBINDGARH

790.## NATIONAL MOTORS (1070), G.T. ROAD, NEAR
P & S BANK, MANDI GOBINDGARH-147 301,
PH :147301-9317862000.

MANSA (PUNJAB)

791.## LOVEKESH ENTERPRISES (2162), NEAR N.M. COLLEGE, MANSA-151 505, (PUNJAB), PH :151505-9216524143

MOGA

792.* GURU NANAK MOTOR REP.WORK (732), G.T.ROAD, MOGA-142 001 (PUNJAB)., , PH :142001-9914121387

MOHALI

793.** BENZ AUTO SCAN (5734), E-153,PHASE 7, INDUSTRIAL AREA - MOHALI, DISTRICT-MOHALI, PUNJAB, PH :160055-9876101806 / 9988823194.

94.** MOHALI MOTORS (756), C-55 INDUSTRIAL AREA, PHASE-VI, S.A.S. NAGAR, MOHALI-160 055, PH. 160055-9781815959

95.** SETHI MOTORS (4742), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PLINLIAR

PH .160055-9814307002.
796.## UNIPOINT (5043), PLOT NO.593., INDUSTRIAL AREA PHASE-IX MOHALI, DISTRICT - MOHALI, (PUNJAB), PH .160062-7814402838 / 7837975575.

MORINDA

SONY MOTOR PALACE (1077), SIRHIND ROAD, MORINDA-140 101, , PH :140101-9815612477 / 0160-2630983 2630034

MUKERIAN

798.* MARSHAL SALES CORPORATION (5251),
NEAR RADHA SOAMI SATSANG, PATHANKOT
ROAD, MUKERIAN - 142411, DISTRICT
HOSHIARPUR, PUNJAB,
DH -144211, 93839300 (4, 29839360) 5

799.## NEW MODERN AUTOMOBILES (4437), G.T. ROAD, MUKERIAN, PUNJAB, PH :144211-9463292013

MUKTSAR

800.## MALWA MARUTI CENTRE (4764), OPP GOVT COLLEGE KOTKAPURA ROAD, MUKTSAR, PUNJAB,

PH -152026-9814622081

NAKODAR

801.## MEHTA MOTORS (3531), KHADDAR BHANDAR ROAD, NAKODAR-144040, PH :144040-9815600082

PATIALA

802.** PARAS MOTORS (4778), PLOT NO. 25-A, NEAR HOTEL FLYOVER FACTORY AREA, PATIALA-147001, PUNJAB, PH :147001-9814089861 / 9914222899.

03.## RAJINDRA MOTORS (8924), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB, PH :147003-9316200335 /

9814653333/01752233951

PATTI

804.## ANU AUTOMOBILE (2747), AMRITSAR ROAD, NEAR RADHA SWAMI SATSANG, PATTI DISTT. AMRITSAR, (PUNJAB), PH -142416.8575/10003 (9814430840)

PHAGWARA

805.## SWAMI MOTORS (3774), (PAMMI W/SHOP), OPP. B.N. DUGGAL PETROL PUMP, G.T. ROAD, PHAGWARA DIST. KAPURTHALA, PH:144401-9815107989.

QADIAN

HI-TECH AUTOMOBILES (4945), VILL NATHPUR BATALA ROAD, QADIAN-143516, DISTRICT-GURDASPUR, PUNJAB, PH:143516-9877510294.

RAIKOT

807.## RANA SUPREME MOTOR GARAGE (3732), NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB), PH:141109-9814265791 / 9878665791.

RAJPURA

808.## NOOR MOTORS (3045), PATIALA ROAD, RAJPURA-140 401, (PUNJAB), PH :140401-9814507867 / 9855421786

RAMPHRAPHIII

809.## BALAJI AUTOMOBILES (4443), BARNALA ROAD, RAMPURA PHUL-151103, DISTT BHATINDA, PUNJAB, PH :151103-9417172671

810.## VIRDI MOTOR GARAGE (3046), BARNALA ROAD, RAMPURAPHUL-151 103, DISTT. BATHINDA, (PUNJAB), PH :151103-9872874175.

SAMANA 811 * CI

CITY MOTORS (1867), P.B.NO.11, MAIN ROAD, SAMANA-147 101, DISTT. PATIALA (PUNJAB), PH:147101-9814221981.

SANGRUR

812.** RAKESH MARUTI SERVICE (6325), JIND DELHI ROAD, NEAR E.S.I. DISPENSARY,
SANGRUR-148 001,
PH :148001-9815-103944 / 9814064202

813.## SANGRUR MARUTI CENTRE (1632), PATIALA ROAD, OPP. MILITARY CAMPUS, SANGRUR-148 001, (PUNJAB), PH :148001-9417510111 / 7696416564

SIRHINE

814.## BADRI DHAM CAR SERVICE (1062), G.T. ROAD, SIRHIND-140 406, , PH :140406.81467 11946

815.## MALHOTRA MOTORS (4657), OPP. INCOME TAX OFFICE, SIRHIND, DISTT FATEHGARH SAHIB, PUNNAB, PH :1401406-9815844008

SULTANPUR LODHI

816.## HANDA MOTORS (2776), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB), PH :144626-9815623392.

SUNAM

817.## SUNAM AUTOMOBILES (3924), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SANGRUR, PH :148028-9417076315 / 9969976756.

ANDA

818.## MALWA AUTO CARE CENTRE (2073), G.T.
ROAD BY-PASS, TANDA, DISTT.
HOSHIARPUR, (PUNJAB),
PH:144204-9814392103.

ZIRA

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

819.## NEW AUTOMOBILES (5477), NEAR BYE PASS, FEROZPUR ROAD, ZIRA, TEHSIL ZIRA, DIST. FEROZPUR, PUNJAB - 142047., PH :142047-9463240231 / 1682500231.

RAJASTHAN

ABU ROAD

820.## UNIQUE MOTORS (4923), MOUNT ROAD, AKRABHATTA, ABU ROAD-307 510, (RAJASTHAN), PH :307510,9929177781 / 9413477781

AJMER

821.## ASHOK AUTOMOBILES (1121), BYEPASS ROAD, PARVATPURA, IND.AREA, AJMER (RAJASTHAN), PH

:305002-0145-2695233/0145-2695076/982908 7166 / 9829087166

ALWAR

822.## POOJA MOTORS (5439), POOJA MOTORS,NEAR AMARNATH PETROL PUMP,DELHI ROAD ,MUNGSKA - ALWAR DISTRICT - ALWAR , RAJASTHAN,

> :301001-9414640279/0144-2700921/0144-237 1382 / 9414507058.

823.## VERTEX AUTOMOBILES PVT. LTD. (1944), CHANDUKA BHAWAN, SWARG ROAD, ALWAR-301 001, PH :301001-0144-2335733/0144-2342117/982823

3299 / 9929641020

BARMER

824.* VEW SERVICE (1238), S-181 & 182, RIICO, BARMER-344 001, (RAJASTHAN), PH :344001-9460158584/02982-223329 / 9410158584

BASSI

825.## VARDHANI MOTORS (5358), NEAR NALAYA BASSI, DISTRICT - JAIPUR , RAJASTHAN, PH :303301-9950107203 / 9414312552.

BEHROR

826.## K.L. INTERNATIONAL AUTOMOBILES (1763), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARDOPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN), PH. 301701-01492-221396/9414014603 / 9414014603

BHARATPUR

827.** CLASSIC MOTORS (2348), DEEG ROAD, KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN), PH :321001-9414026545 / 9413188341

BHII WARA

828.## NATIONAL SERVICE CENTER (4761), SANGANER COLONY, KOTA ROAD, BHILWARA-311001, RAJASTHAN, PH:311001-9829120285

829.* QUICK SERVICES (3473), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311

PH :311001-01482-223456/9414144046

BHINIMAL

830.## GURJAR MOTORS (5567), RAMSIN ROAD,OPP PRADEEP PETROL PUMP, BHINMAL, DISTRICT - JALOR, RAJASTHAN, PH: 343029-9414374962 / 7568912764.

BHIWADI

831.## WHEEL-O-CITY (4246), E-7D (A) PHASE-1, NEAR RIICO CHOWK, BHIWADI, RAJASTHAN, PH :301019-01493-225555/01493-290962/988709

9874.

BIKANER 832.## GENERAL AUTOMOBILES (1123), RANI

BAZAR, RAIWAY CROSSING, BIKANER (RAJASTHAN), PH

:334001-0151-2200338/0151-2549072/941338 9352.

833.## VISHI MOTORS (5559), PLOT NO 55(A), I.A.
RANI BAZAR-BIKANER, DISTRICT - BIKANER,
RAJASTHAN,
PH - 324001-9290-27128 / 9414127918

BUNDI

834.## SHRI JI MOTORS (2174), OPP. KUMBHA STADIUM, KHOJA GATE, BUNDI, (RAJASTHAN), PH :323001.9990770676 / 9414175255

CHOMU

835.## SHREE LAXMI MOTORS (3072), MORIJA ROAD, CHOMU, JAIPUR-303702, (RAJASTHAN), PH :303702-9828160281

CHURU

836.* ABS MOTORS (2978), JAIPUR ROAD, CHURU-331 001, (RAJASTHAN), PH :331001-01562-252333/01562-257333/966767

2324 / 8387915333.

DAUSA

837.## BALAJI MOTORS (4564), NEW MANDI ROAD, NEAR TRANSFORMER, DAUSA-303303, PH :303303-9414273443/9828169601 / 9414273443

DHAULPUR

838.** NARAYAN MOTORS (3345), G.T. ROAD, DHOLPUR, (RAJASTHAN), PH :328001-05642240011/9414027335 / 9772724444

NARSING SERVICE CENTRE (3074), NEAR JAGDISH TALKIES, BARI ROAD, DHOLPUR-328 001, (RAJASTHAN), PH 328001, 944102820 (94610282)

DIDWANA

840.## SANTOSH AUTOMOBILES (5450), SANTOSH ATUOMOBILES ,KUCHAMAN ROAD , DIDWOMAN , DISTRICT - NAGAUR , (RAJASTHAN), PH :341303-9828833363 / 9672989838/ID1560-294295

DUDU

841.## NEETA AUTOMOBILE (4855), C/O NEW JAIN GUEST HOUSE, NH-8, JAIPUR AJMER ROAD, DUDU, RAJASTHAN, PH :303008-9667031098 / 9829131783.

JAIPUR

842.## A 1 MOTORS (4856), D-28 MALVIYA NAGAR., INDUSTRIAL AREA JAIPUR., DISTRICT -JAIPUR , RAJASTHAN, PH :302017-9414047628.

843.* AMGI AUTOMOBILES (1938), AIRPORT CIRCLE, KOTA ROAD, JAIPUR-302 011, PH :302011-9828012009

844.## AUTONITY JAIPUR (4852), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, RAJASTHAN

PH :302019-9784377503.

45.** AUTONITY VKIA (8927), PLOT NO.6, GIRDHAR COLONY, SIKAR ROAD, JAIPUR-302 013, PH

:302013-0141-2232790/0141-3293308/931450 5031.

846.## J.K. AUTOMOBILES (2058), 38 SUSHILPURA, AJMER ROAD, JAIPUR-302 007, PH:302007-7976448538/0141-2810500 / 847.** JAI SHRI RAM AUTO SERVICE CENTRE (1140), OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR, RAJASTHAN

PH

:302019-0141-2221241/9829853330/9587464 441 / 9829101001.

8.## KATARIA MOTORS (2577), 9-A NEMINAGAR VISTAR, AMRAPALI MARG, VAISHALI NAGAR, JAIPUR -302021, BIJ

:302021-9672444000/9414468024/0141-2352 136 / 9414468024.

849.## KRISHNA AUTOMOBILES (5363), B-27 SUNDAR NAGAR. MANSAROVAR., JAIPUR, DISTRICT - JAIPUR, RAJASTHAN, PH: 302020-9829968075.

850.## LAXMI MOTORS (2576), OPP METRO PILLAR NO 34, GANGA JAMUNA CROSSING, NIRMAN NAGAR, JAIPUR, RAJASTHAN - 302019, PH -302019-9351551181 / 78775551181

 M. R. MOTORS (8933), PLOT NO. 120-121 & 125-126, VANE VIHAR, 200FT BYE PASS, JHOTWARA, JAIPUR (RAJASTHAN), PH:302012-9314881528/0141-2340196 /

9799735343. 852.* RIGHTWAYS CO. (1131), KISHANPOLE BAZAR. JAIPUR. .

> PH :302002-0141-2372436/0141-4022436/979922

853.** SAISHA MOTORS (1764), MAIN SHIPRA PATH, OPP. SECTOR 93, AGARWAL FARM, MANSAROVAR, JAIPUR-302 020, PH :302020-0141-2399196/9414454820 /

9928909807.
SERVICE CENTRE (1139), OPP. TOURIST HOTEL, M.I. ROAD. JAIPUR-1.

PH:302001-9351551181 / 9829099469.
5.* SHARP MOTORS (2032), J-3 HIMMAT NAGAR, MAIN TONK ROAD, GOPAL PURA CIRCLE, JAIPUR-302 004,

PH :302004-0141-2705493/0141-2211386/931487

SUPREME MOTORS (1130), A-25 ASSAM MANSION, TRANSPORT NAGAR, JAIPUR-302 003

PH:302003-7737279332 / 8094317954.
TOSHNIWAL AUTOMOBILES (3475), 131 SHRI
GOPAL NGAR, GOPALPURA BYEPASS,
JAIPUR, (RAJASTHAN),

PH:302015-9887553836 / 9694416131.

JAISALMER

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

858.## R.R. AUTOMOBILES (1473), OPP. GEETA ASHRAM, JAISALMER-345 001, (RAJASTHAN), PH :345001-8619638276 / 8619638276.

JHUNJHUNU

859.## VISHWAKARMA AUTOMOBILES (3071), HPC DEALER, RANI SATHI ROAD, JHUNJHUNU-333 001, (RAJASTHAN), PH :333001-9461058839 / 9414081449

JHUNJHUNUN

860.## DADHIMATI MOTORS (1648), OPPOSITE RSEB OFFICE, BAGAR ROAD, JHUNJHUNU, (RAJASTHAN), PH: 333001-9567007122 / 8290897056.

JODHPUR

861.## DEORA MOTORS (5353), UPPER UNDER BRIDGE .PAOTA 'C' ROAD, JODHPUR, DISTRICT - JODHPUR, RAJASTHAN, PH :342006.989(20)6060 (77822922707

862.* P.D. MOTORS (3340), NATIONAL HIGHWAY NO. 62, NEW PALI ROAD, NEAR JHALAMAND CIRLCE, JODHPUR, RAJASTHAN - 342005., PH :342005-0291-2724485/0291-2722495/992897

KALWAR

4601

863.## ROLANIYA MOTORS (5554), KALWAR MAIN TIRHIA, NEAR KHARBAS, NEAR PETROL PUMP, JHOTWARA ROAD, DISTRICT -KALWAR, RAJASTHAN, PH: 303706.0983111634 / 0829055634

KISHANGARH

864.## RADHA SWAMI AUTOMOBILES (440), NEAR

, KISHANGARH., DISTRICT AJMER, RAJASTHAN , PH :305801,9252059798 / 9252059798

KOTA

865.## FRIENDS AUTOMOBILES (3679), KOTA BUNDI ROAD, NH 12, OPP. HOTEL MENAL RESIDENCY, KOTA, PH :323021-9829529479 / 7732991022.

KOTPUTLI

866.## VIKAS MARUTI SERVICE CENTRE (4970), NH-8, NEAR MEENA GAS AGENCY GODOWN, KOTPUTLI - 303108, RAJASTHAN, PH - 303108,029383045

KUCHAMAN

867.## DALUKA AUTO SALES (4565), NEARBY SHARDA PALACE HOTEL,, KUCHAMAN BYE PASS., KUCHAMAN CITY, 341508, PH :341508-9414433240 / 9214514732/01586-220215.

MAKRANA

868.## GEHLOT MOTORS (454), OPPOSITE TO G.S.S, MANGLANA ROAD, MAKRANA, RAJASTHAN, PH :341505-9829024687 / 01588-2430760/1588-243576.

MERTA

869.## DELUX CAR SERVICE CENTRE (3856), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUR, PH :341510-9414004543 / 9460066196.

NAGAU

870.* CLASSIC AUTOMOBILES (1179), DIDWANA ROAD, (DELHI GATE), NAGAUR-341 001, (RAJASTHAN), PH :341001-9672501234 / 8094957777101582-242646.

NEWAI

871.## HEENA MOTORS (5568), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT -TONK, RAJASTHAN, PH :304021-9414228066 / 9887777208.

PILANI

872.## MARUTI CARE CENTRE (3073), RAJGARH ROAD, SHANTI NAGAR, PILANI DISTT. JHUNJHUNU, RAJASTHAN-333 031, PH :333031-01596-297021 / 9414082232.

INDWARA

RUNEJA MOTORS (5758), NH 14,0PP PATNAIK MIDWAYA, PINDWARA-307022, DISTRICT-SIROHI, RAJASTHAN, PH:307022-9610451492 / 9610451491.

RAJSAMAND

874.## VIPUL AUTOMOBILES (2170), NH -8, BHAGWANDA, BEHIND GOVT. PRIMARY SCHOOL, RAJSAMAND, RAJASTHAN, PH :313333-02952-294420, 9929177781 / 9413477781.

RAWATBHATA

875.## APNA MARUTI GARAGE (5940), OPP. RAM TEKRI MANDIR,PRATAP MARKET, MINI ROAD,RAWATBHATA-323305, DISTRICT-CHITTORGARH, RAJASTHAN, PH :323305-9413504447/9413356634 / 9413010400.

SIKAR

876.** RAJ AUTOMOBILES (5534), SUSHIL TRADING
CO. STATION ROAD, SIKAR, DISTRICT SIKAR, RAJASTHAN,
PH
:332001-01572-240721/01572-24072/941403

SRI MADHOPUR

877.## BHARAT MOTORS (5757), WARD NO 4,BYE PASS ROAD, SRI MADHOPUR-332715, DISTRICT- TONK, (RAJASTHAN), PH :332715,9261377020

SRIGANGANAGAR

878.## ROHIT UDYOG (1132), 75 K-BLOCK, SRIGANGANAGAR, , PH :335001-9414093565/0154-2474823 / 7976731470

SUJANGARH

879.## SHRI CHARBHUJA MARUTI (4924), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN, PH:331507-9828118827 / 8005838926.

SURATGARH

30.## ROHIN SERVICE STATION (2646), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN), PH. 335804-01509-222514/9413377914 / 9413377914

TIJARA

881.## M D MOTORS (5875), ALWAR ROAD,NEAR BOLLYWOOD FARM, TIJARA-, DISTRICT-ALWAR, RAJASTHAN, PH :301411-9351607080

TONK

882.## SUMIT MARUTI (4566), G 1 – 103, RIICO INDUSTRIAL AREA, JAIPUR ROAD, TONK-304001, RAJASTHAN, PH :304001-9214494900 / 8769251886.

UDAIPUR (RAJASTHAN)

883.** ALOK AUTOMOBILES PVT. LTD. (1977), B.N.
COLLEGE PREMISES, OPP. DALAL PETROL
PUMP, SEVASHRAM ROAD, UDAIPUR,
PH. 313001-9414168305.

884.** SHREE SAI CAR CARE (2376), PUNJAWATI, PULLA, UDAIPUR-313 001, PH :313001-9414167605 / 9928388452.

TAMIL NADU

AMBUR

885.## MARUTHI MOTORS (2864), 10-C M.C. ROAD, AMBUR-635 802, (TAMIL NADU), PH :635802-04174-244880/9443637645

ARAVAKURICHI

36.# GOWRI MARUTI (5570), OPPOSITE IOCL PETROL PUMP, NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU, PH -630201-0004818043

ARCOT

887.## HARI AGENCIES (468), #27, ANNA SALAI, ARCOT, TAMIL NADU -632503, PH :632503-4172-234050/9442225070

ATTUR

GANESAA MOTORS (4538), 1/1-D ARANGA BALA NAGAR, SALEM CUDDLORE MAIN ROAD, NARASINGARAM, ATTUR-636108 (TAMIL NADU), PH: 636108-9443/73866

AVINASHI

889.## K.P.K AUTOMOTIVE (5547), SF NO.460/2,TIRUPPUR MAIN ROAD, AVINASHILINGAMALAYAM,AVINASHI-641654, DISTRICT-COIMBATORE, TAMILNADU, PH.641654-9443301732 (9003917784.

BHAVANI

890.## CAR ZONE AUTO SERVICE (5332), METTUR
MAIN ROAD, NATARAJAPURAM BHAVANI,
DISTRICT - ERODE, TAMILNADU,
PH :638301-9842085670 / 9443693934.

CHENGLEPUT

1.## AMMA AUTOMOBILES (2941), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU-603 002, (T.N.), PH :603002-44-27421059/8012518012/73730380

CHENNAI

892.## ABIRAMI MOTORS (5131), 6.ANNA NEDUMATHAI , CHOOLABEDU, CHENNAI-600094, TAMILNADU, PH :600094-9840017558.

393.## AUTO TECH (3445), NO.6 G.S.T. ROAD, KAMATCHI COLONY, SANATORIM, CHENNAI-600 040,

PH:600047-9941019455 / 9710011888.

EASVARI MOTORS PRIVATE LIMITED (1431),
W-110 ANNA NAGAR, CHENNAI-600 040,
PH:600010-9840855655 / 9840820212.

895.## KARS KARE SERVICE CENTRE (2579), 648 T.H. ROAD, TONDIARPET, CHENNAI-600 081, PH:600081-9841097259 / 7299912055.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

896.** MARUTI NEEDS (2531), NO.2 PARK ROAD, PADI, CHENNAI-600 050, PH :600050-9940099500

897.** NSK MARUTI (4975), 2/547, EAST COAST ROAD, NEELANKARAI, CHENNAI, TAMIL NADU,

PH :600115-9841047232.
O.M.S. MOTORS (P) LTD. (2140), NO.27
VELACHERRY MAIN ROAD, RAM NAGAR
NORTH, MADIPAKKAM, CHENNAI-600 091
(TAMIL NADU),

PH :600091-9444081390 / 9962735550.
P.A. SERVICE STATION (2346), NO. 1
GOVINDARAJ ALUMEL AMMAL NAGAR, NEAR
100 FEET ROAD, AGRAHARAM, KORATTUR,
CHENNAI-600 076,
PH :600076-9840378025.

900.** SWAMY AUTOMOBILES (456), 23 CASA MAJOR ROAD, EGMORE, CHENNAI-600 008, PH -600008-9840801916

901.* VAISHALI MOTORS (4529), 4/577 RAJIV STREET, OLD MAHABALIPURAM ROAD, KOTTIVAKAM, CHENNAI-600041, PH :600041.9840138888

902.* WHEELS AUTO (469), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI-600 020,

PH:600020-9840138888

CHIDAMBARAM

903.## HI-TECH MARUTI (3231), NO.45,SITHIVEL NAGAR,SALIYANTHOPPU, BYE PASS ROAD,CHIDAMBARAM-608001, DISTRICT-CUDDALORE, TAMILNADU, PH:608001-9585538671/9445298590.

COIMBATORE

904.## GURU AUTO GARAGE (4965), 2/98, IRUGUR ROAD, NEAR BSNL OFFICE, CHINNAMPALAYAM, COIMBATORE, TAMIL NADU.

PH :641062-9843256247 / 9843956247.

905.## LOTUS AUTOMOBILES (4758), 1647-A
AVINASHI ROAD, HOPE COLLEGE,
PEELAMEDU, COIMBATORE-641004
(TAMILNADU).

PH:641004-9842265133.
SOUTH INDIA MOTORS (MARUTI) (4752), 9A/3
AVINASHI ROAD, NEAR KMCH POLICE
CHECK POST, CIVIL AERODROME POST,
SITRA, COIMBATORE-641014 (TAMIL NADU),
PH:641014-9843027601 / 9943315065.

907.## TDK AUTOMOBILES PVT. LTD. (160), 9A NEHRU STREET, B.R. PURAM AVINASI ROAD, PEELAMEDU, COIMBATORE-641 004, PH: 641004-9952300666.

COONOOR

908.## SHANTHI AUTO CARE (6054), FIGURE OF 8 ROAD, COONOOR-643101, NILGRIS, (TAMIL NADU), PH -643101-9443273888

CUDDALORE

909.## SUNTAR AUTOS (2134), KTR BUILDINGS, CHIDAMBARAM ROAD, CUDDALORE-607 002, PH -607002-9842345690

CUMBUM

910.## SRI BALAJI MOTOR WORKS (3139), 221-A 1/3 THENI ROAD, NEAR REGULATED MARKET, UTHAMAPURAM, CUMBUM-625 516, PH :625516-9994169309.

DINDIGUL

911.* MAGNUM MOTORS (1241), MEENACHINAICKEN PATTY, NH-7 BYE- PASS ROAD, DINDIGUL-624 002, (TAMIL NADU), PH :624002-9842231340.

ERODE

912.** SRI KRISHNA AUTOMOBILE ENTERPRISES (2320), 560 CAUVERY ROAD, ERODE - 638003, ,
PH: 638003-9842721805 / 9095222209.

913.** SRI SAKTHI CARE (8937), 13, NGGO COLONY MAIN STREET, ERODE, TAMILNADU, 638009, PH :695011-9597726311.

GADALUR

914.## GREENWAY MARUTI SERVICE CENTER (5471), KALAMPUZHA,D.O. NO 12/59-3, GUDALUR, DISTRICT - NILGIRLS, TAMILNADU, PH: 643212-9443603815 / 9443063240.

GOBICHETTIPALAYAM

915.## HI-TEC AUTO GARAGE (2426), 426,ASIRIYAR NAGAR, KULLAMPALAYAM POST, ERODE MAIN ROAD, GOBICHETTYPALAYAM-638 476, PH :638476-9842447725.

HOSUR

916.## AUTO SCAN (2070), 58-B BANGALORE ROAD, HOSUR-635 109, (TAMIL NADU), PH :635109-8122904091

917.** BALAJI MOTORS (5136), PLOT NO.11
MARUTHI NAGAR, NEAR T.V.S. AGENCIES(T V
S SHOWROOM), KRISHNAGARI MAIN ROADHOSUR, TAMILNADU,
PH :6351199-8842755402

918.## SRI VINAYAKA MOTORS (3848), 5/2C/1 (OPP TAMIL NADU HOTEL), BYE PASS ROAD, HOSUR, PH :635109-9443/45096 / 9442145096

ΚΔΙ ΡΔΚΚΔΜ

919.# MARUTI MOTORS (4253), SURVEY 309/5-A,
PUDUPATTINAM VILLAGE PANCHAYAT,
THIRUKALUKUNDRAM TALUKA,
KANCHEEPURAM, KALPAKKAM-603102,
PH-603102-9443366535

KANCHEEPURAM

920.* SVS MARUTI SERVICE CENTRE (5466), NO1 MILITARY ROAD, SEVILIMEDU, OPP BRINDAVANAM NAGAR, KANCHIPURAM, TAMILNADU 631501, PH-631501-9994332290 / 9043032290.

KANGAYAM

921.## SRI ARUN CAR CARE (3949), COIMBATORE ROAD, NEAR IBP PETROL BUNK, KANGAYAM - 638701,

PH :638701-9443329526. **KARAIKUDI**

922.## SURABI MOTORS (2340), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630 001, PH :630106-9443351484 / 9585541891.

KARUMATHAMPATTY

923.## SIVAN MOTORS (3832), OPP IBP NH47, NEAR KONGU VELLALAR SCHOOL, KARUMATHAMATTY, PH :641659-9842231819 / 9952153665.

KARUR

4.** SRI SAKTHI AUTO CARE (2532), 3/291 COVAI ROAD, VADIVEL NAGAR L.N.S. POST, KARUR-639 002, (TAMIL NADU), PH :638009-9842426585.

KOVILPATTI

925.## CLASSIC AUTOMOBILES (6037), 3/531 – B, TIRUNELVELI TO MADURAI BYPASS ROAD, NH-7, INAM MANIYACHI, KOVILPATTI, TAMIL NADU–628502., PH-628502-9442552000.

KRISHNAGIRI

926.## THIRUTHANIGAI MOTORS (2427), SALEM-CHENNAI BYE PASS ROAD, KRISHNAGIRI-635 001, (TAMILNADU), PH :635001-9842129890.

KUMBAKONAM

927.## SRI SAKTHI MOTORS (4330), #7/228, PULIYAMPETTTAI, MAYILADUTHURAI MAIN ROAD, KUMBAKONAM, TAMILNADU -612103, PH -612103-9443131513

MADURAL

928.## FRIENDLY MOTORS (3141), 32 PALAM STATION ROAD, NEAR LIC BUS STOP, SELLUR, MADURAI-625 002, PH :625002-9842714047

929.## SHALOM MOTORS (4629), THENI MAIN ROAD, ACHAMPATHU, NEAR BHARAT PETROLEUM, MADURAI-625019, PH: 625019-8754033244 / 9442058155.

MADURANTHAKAM

930.## MARUTHI MOTORS (6036), NO.33,G.S.T.
ROAD,KARUNGUZHI,
MADURANTHAKAM-603303,
DISTRICT-KANCHIPURAM, TAMILNADU,
PH :603303-9443354073 (9894995050.

MAYILADUTHURAI

931.## R.M.S. MARUTI AUTO (2237), 53/54 MAHADHANA STREET, MAYILADUTHURAI-609 001, (TAMIL NADU), PH -900001-98/2022885

NAGAPATTINAM

32.* MARUTI-TECH (1671), PUTHUR ROUNDANA E C R ROAD, NAGAPATTINAM, , PH:611001-9842653718.

NAGERCOIL

* SRI GANAPATHI MOTORS (1629), NO.12 JAWAHAR STREET, R.V. PURAM, NAGERCOIL-629 001, PH -620001-934522333

NAMAKKAL

934.## ARUNA MOTORS (1461), MARUTI SERVICE CENTRE, OPP. N.S.R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001, PH: 637001-9842775761.

PALLADAM

935.## CHENDU MOTORS (4333), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST, PH :641662-9842225058 / 9894725058.

PALLAVARAM

36.* VBK MOTORS (4463), OLD NO. 99, NEW NO. 91, G.S.T ROAD, ALVITONE ESTATE, (BEHIND LAKSHMI THEATRE), PALLAVARAM, CHENNAI-600043, PH :600043-9841425030.

PARAMAKUDI

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

937.# SIVA AUTOMOBILES (4542), NEAR SRIKUMARA SUBRAMANIYA SWAMY TEMPLE, OPP FIRE STATION, MADURAI RAMESWARAM ROAD, PARAMAKUDI-623707 RAMNAD DIST, PH :622707-9388405305.

PARAMATHIVELUR

938.## RADHA CAR CARE (5828), NO 96/1,BYE PASS ROAD,VETTUKATTU PUDAR, PIRIVUR ROAD,PARAMATHIVELUR-638182, DISTRICT-NAMAKKAL, TAMILNADU, PH :638182-8608090140.

PERUNDURAL

939.## PRIYAM AUTOMOBILES (3036), 139 KOVAI MAIN ROAD, PERUNDURAI-638 052, (TAMIL NADU), PH :638052-9095099999 - 9842701371.

POLACHI

940.* J D & COMPANY (6055), COIMBATORE ROAD, POLLACHI-642 002, , PH :642002-9443565785 / 9443172635

RAJAPALYAM

941.## RAJA MOTORS (4128), 52/ A, SRI JANAKIRAM MILLS ROAD, SRIVILLIPUTTUR MAIN ROAD, RAJAPALAYAM, VIRUDHUNAGAR- 620117, PH :626117-70945917/8.

RASIPURAM

942.## ROYAL AUTO CARS (4052), 5/120 NH-7,
SALEM MAIN ROAD, NEAR TSTC DEPOT,
MUTHUKALIPATTI POST, RASIPURAM TALUK,
NAMAKKAL DISTRICT-637408,
PH :837401-944230339 (9942552744,

RED HILLS

943.## UNIQUE CAR CARE (5868), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLAI/OYAL, CHENNAI, TAMILNADU - 600062, PH : 600062-9500056658/9841059295.

SALEM

944.## MEENATCHI AUTO (2940), 57
KALARAMPATTY MAIN ROAD, (NEAR DEVI
THEATRE), SALEM-636 015, (T.N.),
PH :636015-9443201001/ 9976601001 /
8667598711.

945.** NATSUN MOTORS (6029), NO 220,BANGALORE BYE PASS ROAD (NH-7), KODALAMPATTY,SALEM-636010, DISTRICT-SALEM, TAMILNADU, PH: 636005-9842704499 / 9788497788.

SANKAGIRI

946.## TECH ZONE AUTO SERVICE (2640), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303, PH: 637303-9942444753/ 9842651158 / 98427011599

SANKARANKOII

947.## RAJA MOTORS (4555), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL-627756, PH :627756-9994409363.

TENKASI

948.## CARE ZONE (3766), 5/164(1) KUTHUKKAL VALASAI, MADURAI ROAD, TENKASI-627 811, (TAMIL NADU), PH :627811-9842133134 / 7373737699.

THANJAVUR

949.## R K P MOTORS (5238), 121/7.THANJAVUR KUMBAKONAM, HIGHWAY PALLIAGRAHARAM, THANJAVUR, TAMILNADU, PH: 613003-9751125555 / 9563525555

THENI

950.## SATHURAGIRI MOTOR WORKS (1650), 3-1-31 TO 36, CUMBUM ROAD, THENI-625 531, (TAMIL NADU), PH :625531-9047033678.

TIRUNELVELI

951.## FRIENDS INDIA AUTO CLINIC (5030), NO.16 D.BYE PASS ROAD, VANNARAPETAI, TIRUNELVELI 627003, TAMILIADU, PH: 627003-9786606111 / 8608862725.

TIRUPUR

952.** LAKSHMI MOTORZ (2461), 4/146 PALLADAM ROAD, OPP. LAKSHMI KALYANA MANDAPAM, TIRUPUR-641 604, (T.N.), PH: 641605-9842377959 / 7598486933.

TRICHY

953.* VYTHES MOBILE PARK (443), 8/6 TANJORE ROAD, THIRUCHIRAPALLI-620 008, , PH :620008-6383353727.

UDAMALAPET

4.* S.R.K. MOTORS (1456), C-109 GANDHI NAGAR, UDAMALAPET-642 154, COIMBATORE (DT.), (TAMIL NADU), PH:642126-9843011520.

VELLORE

955.* MARUTI AUTO SERVICE (2844), 106 (OLD NO.: 78), KATPADI ROAD, GANDHI NAGAR, VELLORE-632 006 (T.N.), PH :632006.08421093422

VILLUPURAM

956.## RAGAVENDRA MOTORS (2361), 2/3 MADRAS TRUNK ROAD, VILLUPURAM-605 602, (TAMIL NADU), PH :605602-9244555860

VRIDDHACHALAM

57.# VISHWA MARUTI CARE CENTER (8934), NO412,PERIYAR NAGAR (NEAR FIRE SERVICE S, STATION)VRIDDHACHALAM-606001 , DISTRICT - CUDDALORE , (TAMILNADU), PH -506001.9842/246/092

TELANGANA

ADILABAD

958.## MAHA LAXMI AUTOMOTIVES (2240), NH# 7
OPP. H.P. PETROL BUNK, TIRUPALLY,
ADILABAD-504 001, (A.P.),
PH: 504 001-9000345313 / 08732-213919.

BHADRACHALAM

959.## SRI VENKATARAMANA AUTO CARE (2831), MARUTI SERVICE STATION, OPP. COLLEGE GROUNDS, GOLLAGATTA ROAD, BHADRACHALAM-507 111 (A.P.), PH:507111-9290792269.

GAJWEL

960.# VIJAY MOTORS (4864), HYDERAAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIMNAGAR, PREGHAPUR - GAJWL, ANDHRA PRADESH, PH:502278-9849883665 / 8454233028.

HYDERABAD

961.## ARYAN MOTORS (3264), D.NO.17-1-382/K/5 & 6, CHAMPAPET SAIDABAD, SAGAR ROAD, HYDERABAD, PH :500059-9246155464 / 040-24077459.

62.## COSMO AUTO CLINIC PVT. LTD. (1045), PLOT NO 1, RD NO 5., CHANDRAPURI COLONY, LB NAGAR, HYDERABAD - 500074, PH :500074-9246272733/9849015667.

963.## PISTONS & SPANNERS (2766), 2-3-37
MAHARANA PRATAP FUNCTION HALL,
AMBERPET, HYDERABAD-500 013,

PH:500 013-9990649504 / 040-6585480.

964.## SERWELL AUTOMOBILES (5234), PLOT NO 202 203 ADITYA NAGAR OPP, JNTU. KUKA TPALLY.HYDERABAD , ANDHRA PRADESH, PH:500085-0400105147

JAGTIAL

965.## PARAMESHWARA MOTORS (3851), OPP P R
OFFICE, DHAROOR CAMP, JAGTIAL 505327,
DT. KARIMNAGAR (A.P.),
PH -505455-9912664658

KARIMNAGAR

966.## MYTRI MOTORS (5152), 8-6 188.KOTHI
RAMPUR, KARIMNAGAR, DISTRICT KARIMNAGAR, ANDHRA PRADESH,
PH :505001-9441475357 / 9395109719.
967.** PUSHPAK MOTORS (1032), KOTHI RAMP

77.** PUSHPAK MOTORS (1032), KOTHI RAMPUR, HYDERABAD ROAD, KARIMNAGAR - 505 001 (A.P).

PH:505001-9849489431/9849163796.

KHAMMAM

968.## EXCEL AUTO CARE (1043), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM - 507001,

PH:507001-9848156363 / 8742224969

KODAD

69.# SAI KAKATIYA SERVICE STATION (4664), SURYAPETA ROAD, OPPOSITE LORRY ASSOCIATION BUILDING, KODAD-508206, DISTRICT-NALGONDA (ANDHRA PRADESH), DH 1-508206, 084067813

MAHABUB NAGAR

970.## SRI AYYAPPA MARUTI CLINIC (3941), OPP HOSPITAL, HYDERABAD ROAD, YEMUGONDA, MAHABUB NAGAR (ANDHRA PRADESH), PH -5700072-9440560250

MANCHERIAL

971.## PARVATI MOTORS (4129), 4-53 BPL ROAD, MANCHERIAL, DISTRICT ADILABAD, ANDHRA PRADESH, PH -504208.0885554888

MIRYAI GUDA

972.## GANESH MOTORS (4536), D.NO. 6-366, P.V. COMPLEX, NALGONDA ROAD, MIRYALGUDA, NALGONDA DISTT (ANDHRA PRADESH), PH :508207-9393900666 / 9441090870.

NALGOND

973.# SRIRAM AUTHORISED SERVICE STATION (4627), HYDERABAD ROAD, OPP. SUB STATION, NALGONDA, ANDHRA PRADESH, PH :508001-9848378133 / 9246266999.

NIZAMABAD

974.## PRIYA SERVICING (1771), C/O TIRUMALA CHITRA MANDIR, HOUSE NO.1-9-833, PHULANG ROAD, NIZAMABAD-503 003 (A.P.), PH :503 003-9948034523 (9440083962.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

RAMAGUNDAM

975.## ALI AUTOMOBILES (2849), NEAR TV RELAY STATION, NTPC JYOTHINAGAR, RAMAGUNDAM-505 215, DISTT. KARIMNAGAR (AP), PH -505-208-08/82/20102 / 08/40108600

SECUNDERABAD

976.## ANNAPURNA MOTORS (2947), # 6-3-23/5 JAYANAGAR COLONY, NEAR MEKALMANDI, NEW BHOIGUDA, SECUNDERABAD-500 080, PH -500 080,9840961136 / 0840961130

SIRSILLA

977.# SATHVIKA MOTORS (5649), KARIMNAGAR ROAD,OPP HP PETROL PUMP, SIRSILLA-505301, DISTRICT - KARIMNAGAR ANDHRA PRADESH, PH -505301-9490784726 / 9440966649

SURYAPET

978.## SAI GLOBAL AUTO SERVICES (4550), OPP.
AYYAPPA SWAMY TEMPLE, BY PASS ROAD,
NH-9, SURYAPET-508213, ANDHRA
PRADESH,
PH :508213-9848076108.

WANAPARTHY

979.# SMC MOTORS (5658), K.K.T.
ROAD,BASAVANNA GADDA, WANAPARTHY,
DISTRICT-MAHABUBNAGAR, ANDHRA
PRADESH,
PH :509103-9440142927 / 8545-233908.

WARANGAL

980.## VAISHNAVI AUTOMOBILES (470), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL-506 001, PH :506 001-9849002528 / 9866561075.

TRIPURA

AMBASSA

981.## CHAKRABORTY MECHANICAL WORKSHOP (5351), NH-44.NEAR ZILLA PARISWAD OFFICE , AMBASSA, DISTRICT - DHALAI, TRIPURA, PH -799289-9436136054

BELONIA

982.## JOY UDYOG (3977), KALINAGAR, BELONIA, SOUTH TRIPURA 799155, PH :799155,9446799415 / 9436483635

DHARMANAGAR

983.## RAJ AUTOMOBILES (2868), STATION ROAD, RAJABARI, DHARMANAGAR, TRIPURA (NORTH)-799 253, PH : 799253-9439477578

LIDAIPLIR

984.## SUR UDYOG (3963), TOWN FULKUMARI NO. 1, BRAMHABARI, P O UDAIPUR COURT, UDAYPUR, TRIPURA SOUTH, PH -799120-9862276650

UTTAR PRADESH

AGRA

985.## GAYATRI MOTORS (4730), 101-102,SHASHI NAGAR,CHANDRAKALA-, COMPLEX. SIKANDRA BODLA ROAD, AGRA -282008, (UTTAR PRADESH), PH -282007-8077788331

ALIGARH

986.## KAPIL AUTOMOBILES (1344), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), PH :202002-9837007636.

987.## KAR SCAN CENTRE (449), RAMGHAT ROAD, KWARSI, ALIGARH-202 002, PH :202002-8937000111.

ALLAHABAD

988.## ANSHUMAN AUTOMOBILES (4933), 353, NAINI BAZAR NAINI, DISTRICT ALLAHABAD, ALLAHABAD-211008, UTTAR PRADESH, PH :211008-9335138119.

989.** KAY CEE AUTOMOBILES (2155), 72/60 L.B. SHASTRI MARG, ALLAHABAD, , PH :211001-9415317225.

990.## TRIBENI MOTORS (2539), 23 KANPUR ROAD, ALLAHABAD-211 001, (U.P.), PH :211001-9415324244.

ALMORA

991.## AROMA AUTOMOBILES (3149), THE MALL, ALMORA, (UTTARANCHAL), PH :263601-9412093410.

AMROHA

992.## SUNNY MOTORS (2165), BIJNORE ROAD, J.P. NAGAR, AMROHA-244 221, (U.P.), PH :244221-9412248884.

AURAIYA

3.** SINGH AUTOMOBILES (5248), KANPUR ROAD AURAIYA, DISTRICT - AURAIYA, PIN -206122, UTTAR PRADSH, PH :206122-9808403258.

BABUGARH

 GURUNANAK AUTOMOBILES (5977), NH- 9, VILL SIMROLI , BABUGARH CANTT. , DISTRICT- HAPUR, UTTAR PRADESH, PH : 245102-8941838183/9411490827

BAGHPAT

995.# KAUSHIK MOTORS (4473), PLOT NO 525, DELHI SAHARANPUR ROAD,PALI, BAGHPAT, UTTAR PRADESI 250609, PH -250609, PH -250609, PH -250609, PH -250609, PM -250609, P

BAI RAMPUR

996.## D M AUTOMOBILES (3933), NEAR BCM, POST SIRSIYA, GONDA ROAD, BALRAMPUR 271201, PH : 271201-9415071840

BANDA

997.## CHAUDHARY TRACTORS (2249), STATION ROAD, BANDA-210 001, (U.P.), PH :210001-9415143033

RARAIIT

998.## HIGH TECH ENGINEERS (4821), 216/5 SAHARANPUR ROAD, BARAUT, , PH :250611-983716887.

999.## SIGNET AUTOMOBILES (4441), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P.), PH :250611-8218779429 / 9837028925.

BAREILLY

1000.# S P MOTORS (5746), 383,SURKHA

CHAWNI,NAINITAL ROAD, BAREILLY-243001,
DISTRICT-BAREILY, UTTAR PRADESH,
PH :243001-9568033111.

BIJNOR

1001.# SARDAR MOTORS (4671), DELHI HIGHWAY # ROAD , 4TH KM MILE STONE , BIJNOR -246701, UTTAR PRADESH, PH :246701-9837265076 / 8859295295.

BULANDSHAHR

1002# DELHI AUTO ENGRS (1351), PLOT NO-106,
NEAR TAFE TRACTOR AGENCY, NEAR
CHANDPUR VILLAGE, DELHI ALIGARH
BYPASS ROAD, BULANDSHAHR (UP) 203001.,
PH :203001-8700630277/8700982878.

CHANDPUR

1003.# BHARTI AUTOMOBILES (1777), DHANORA # ROAD, CHANDPUR, DISTT. BIJNOR, (U.P.), PH: 246725-9837380551

CHITRAKOOT

004.* SHYAM MOTORS (4367), BUS STAND, KARWI, CHITRAKOOT-210205, PH :210205-9415143900

DADRI

1005.# NATIONAL MOTOR AGENCY (5143), NOIDA # ROAD, DADRI-203207, DISTRICT -GAUTAMBUDH NAGAR, UTTAR PRADESH, PH :203207-9818486888/0120-2667033/9873944 33

DANKALIR

1006.# YASH MOTORS (5934), SIKANDRABAD

ROAD,NEAR KISAN INTER COLLEGE,
DANKAUR-203201, DISTRICT- GAUTAM BUDH
NAGAR, UTTAR PRADESH,
PH :203201-9761133938. 9528730484

DEOBAND

1007.# PRACHI MOTORS (3361), ADJACENT TO
CIVIL COURTS, G.T. ROAD, DEOBAND,
DISTT. SAHARANPUR (U.P.),
PH :247554-7017803402 7017803402

DEORIA

1008.** CLASSIC MOTORS (2971), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.), PH :274001-9415313939.

DHAMPUR

1009.# AUTAR AUTOMOBILES (4846), NOORPUR # ROAD, DHAMPUR-246761, DISTRICT-BIJNOR, UTTAR PRADESH, PH :246761-7017211986 / 8923625948.

FAIZABAD

1010.* S K MOTORS (4672), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96, FAIZABAD-224001, UTTAR PRADESH, PH :224001-9307088750

FARUKHABAD

1011.# APOORVA MOTORS (4675), SATANPUR
MAND ROAD, FARRUKHABAD, DISTRICT
FARRUKHABAD, UTTAR PRADESH,
PH :209625-9044499995.

1012.# SANDEEP MOTORS (4161), THANDI SADAK,
OPP. JITENDRA GAS GODOWN,
FARUKHABAD, UTTAR PRADESH.

FATEHPUR SIKRI

1013.# LAXMI MOTORS (5943), FATEHPUR SIKRI # ROAD,KHEDA KORAI , FATEHPUR SIKRI-283110, DISTRICT-AGRA, UTTAR PRADESH, PH :283110-9837749949.

PH:209625-9838840322.

FIROZABAD

* B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

1014.**	AMAN MOTORS (4366), OPP CAR CARE (INDIA), BYE PASS ROAD, FIROZABAD, UTTAR PRADESH, PH :283203-9837500220. GOVIND AUTOMOBILES (1739), NH-2, INFRONT OF SUB POWER STATION, MODHA, ASFABAD CHAURAHA, FIROZABAD, UTTAR PRADESH, 283203, PH :283203, ap837169332
GANG	
1016.#	SHRI KRISHNA MOTORS (5939), BYE PASS ROAD RAM GARH,GANGOH-247341, DISTRICT-SAHARANPUR, UTTAR PRADESH,

PH :247341-9997102785.

1017.* CHAWLA AUTOMOBILES (2643), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA, GHAZIABAD, PH :201001-9811720929.

1018.* D.N. AUTOLAND (272), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD.,

PH:2010/3-9810001121/9811001121.

1019.** KRISHNA AUTOMOBILES (5356), 101.LAL
KUAN. SHIV MANDIR , BULANDSHAHAR ROAD
, DISTRICT - GHAZIABAD, UTTAR PRADESH,
PH:2010/9-9810311475/9999506820.

1020.# S P MOTORS (4973), HAPUR BYPASS ROAD,
MEHRAULI, GHAZIABAD,
PH

:201001-9350936262/0120-2824443/9210264

1.* SHIVA MOTORS (3343), 17TH KM STONE, 118-119 SHIVPURI, SECTOR-9 VIJAY NAGAR BYEPASS NH-24, GHAZIABAD-201 009 (U.P.), PH :201009-2744400/3232590/9891464349/9873

GONDA

1022.** AMAN MOTORS (3858), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH, PH :271001-9415120101.

1023.* PANKAJ AUTOMOBILES (1370), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, GONDA, PH :271801-9415664930.

GREATER NOIDA

000571.

1024.# JAISWAL MOTORS (5078), PLOT NO. 31,

SECTOR MUP-II.GREATER NOIDA , DISTRICT
- GAUTAM BUDH NAGAR, UTTARPRADESH,
PH
:201308-9810062269/6485444/9212142269.

1025.# KUMAR MOTORS (8929), M-8, SITE-5, # UPSIDC, KASNA INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDH NAGAR, UTTAR PRADESH, PH

HAPUR

333.

1026.* SRASTHI MOTORS (3076), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101, PH :245101-9412221608/9557307976

:201312-9911498777/0120-2341088/9811498

HARDOI

1027.# M. MOTORS & SERVICE CENTRE (3371), # CHAND BEHTA, LUCKNOW ROAD, HARDDI-241 001, (U.P.), PH -241001-2415175610

1028.** TAYAL AUTOMOTIVES (4265), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, PH :241001-9415149951.

HATHRAS

1029.# RADHEY RADHEY AUTOMOBILES (4344) # NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, PH :204101-9897069159

JAGDISHPUR

1030.# SUPER AUTOMOBILES (3564), JAFARGANJ
P.O., INDUSTRIAL AREA, JAGDISHPUR,
DISTT. SULTANPUR-227 817 (U.P.),
PH :227817-9415177882

JAUNPUR

1031.# SADGURU MOTORS (5071), FAIZBAGH (NEAR # TOM OFFICE), UMARPUR.JAUNPUR, JAUNPUR-222142, UTTAR PRADESH, PH :222142,818984440

JHANSI

1032.* A.B. MOTORS (8938), 4 KHATTERYANA, JHANSI, , PH :284001-9415059820.

H: 284001-9415059820.

1033.# JAILM PAINTER (5661), 1051.NEAR ADINATH

HOTEL,STATION ROAD, JHANSI - 284001,
DISTRICT - JHANSI, UTTAR PRADESH,
PH: 284001-9415113566.

KANNAU

1034.# SARALA AUTO CARE (5854), G.T.

ROAD.KANNAUJ, DISTRICT-KANNAUJ, UTTAR
PRADESH,
PH :209725-9918692324.

KANPUR

1035.* AJAY SALES (3134), 117/N/81 KAKADEVO, KANPUR, , PH :208025-9919828000

1036.** AUTO GARAGE (4266), P-22-A, PRATAP GANJ, FACTORY AREA, OPP GANDA NALA, KANPUR-208012

PH :208012-9415126189.
1037.** CHANDRA MOTORS (4458), 621/3 W-2 JUHI,
BEHIND SACHAN GUEST HOUSE, KANPUR,
PH :208027-9839928280.

1038.** EXCELLENT MOTORS (2968), 123/793 FAZALGANJ, KANPUR-208 012, , PH:208012-9336119874.

1039.# KANPUR AUTO CENTRE (2823), 14/142, # CHUNNIGANJ, KANPUR, PH :208001-9415045438.

1040.** SUJIPA MOTORS (4337), 127/465, U-BLOCK, NIRALA NAGAR, KANPUR, PH :208014-9415050146.

KHALILABAD

1041.# RATAN MOTORS (5645), RAILWAY STATION
ROAD - KHALILABAD, DISTRICT- SANT KABIR
NAGAR, PIN-272175, UTTAR PRADESH,
PH :272175-9621294899.

KHATAULI

1042.# EAGLE MOTORS (5142), OPPOSITE EW

ROADWAYS , G.T. ROAD. NH -58.KHATAULI,
DISTRICT - MUZAFFARNAGAR, UTTAR
PRADESH,
PH .251201-9997039786.

KHEKRA

1043.** KAILASAH MOTORS (5767), OPP TEHSIL ,DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH, PH:250101-9760027001.

KOSIKALAN

1044.** ADITYA MOTORS (1940), IOC PUMP,
NATIONAL HIGHWAY, KOSIKALAN, (U.P.),
PH :281403-9837050778.

LAKHIMPUR KHERI

1045.** AJMANI TRACTORS (4143), NIGHASAN ROAD, LAKHIMPUR KHERI, UTTER PRADESH, PH:262701-9918802167.

ALITPUR

1046.# VARDHMAN MOTORS (1073), SAGAR ROAD, # LALITPUR-284 403, (U.P.), PH :284403-9453909196

LAMBHUA BAZAR

1047.# VIKRAM MOTORS (3729), LAMBHUA BAZAR, # SULTANPUR (DIST.), UTTAR PRADESH-222 302, PH :222302-9450215996

LONI

1048.# SAMBHAV AUTOMOBILES (5168), 31.RURAL
INDUSTRIAL ESTATE, ARYA NAGAR
INDUSTRIAL AREA, MAIN DELHI
SHAHRANPUR HIGHWAY, UTTAR PRADESH,
PH : 201102-9311690878/92/2128889

LUCKNOW

49.** B.K. MOTORS (2537), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015, PH 226015,0335908130

1050.# BALAJI MOTORS (1336), 1 NEWAL KISHORE # ROAD, LUCKNOW-226 001.(U.P), ,

PH:226001-9336253838.

1051.# GALAXY MOTORS (5274), KASHANA SITAPUR
ROAD, NEAR SHIA, P G COLLGEG LUCKNOW, DISTRICT - LUCKNOW, UTTAR
PRADESH,

PH :226021-9305567878.
GUD'S CAR CARE (2638), MAIN ROAD, NISHATGANJ, LUCKNOW-226 006, PH :226006-9415024495.

1053.** KALYAN MOTORS (1161), GOVT.
POLYTECHNIC CROSSING, FAIZABAD ROAD,
GOMTI NAGAR, LUCKNOW,
PH :226010-9936942527.

054.** KAPOOR MOTORS (1751), PLOT NO.380, NEAR GUNGA BAHARA SCHOOL, TILAK NAGAR, UTTAR PRADESH, PH:206122-9795457050.

55.** KAPOOR MOTORS (5044), 555/GA/50,BARA BIRWA, KANPUR ROAD-, ALAMBAGH LUCKNOW., DISTRICT - LUCKNOW, (UTTAR PRADESH).

PH:226005-9795457050.

KRISHNA MOTORS (5026), BALAGANJ HARDOI ROAD, CHOWK LUCKNOW, DISTRICT LUCKNOW, UTTAR PRADESH, PH:226020-9839177777.

1057.** MVV MOTORS (5531), A1/14,VIJAY KHAND, GOMTI NAGAR, LUCKNOW-226010, DISTRICT - LUCKNOW, UTTAR PRADESH, PH : 226010, 2702877779

758.** RELIANCE MOTORS CARE (1236), 7-B/1 PRIME PALACE, FAIZABAD ROAD, INDIRA NAGAR, LUCKNOW-226 016, PH:226016-9918100051 / 9415013897.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

1059.* S.K. MOTORS (2449), 8/881 VIKAS NAGAR, PICNIC SPOT BOAD KHI IRAM NAGAR LUCKNOW-226 013. PH:226013-9415005564

1060 * THE GARAGE (5479), BEHIND NEW HANUMAN MANDIR, MADIR PARK , MAHANAGAR -LUCKNOW , DISTRICT - LUCKNOW, UTTAR PRADESH

PH:226006-9236711634

1061.* V.S. MOTORS (4745), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH. PH:226007-9984749000.

MAHORA

1062.# ROYAL SERVICE STATION (2238), HAMIRPUR CHUNGHI, KANPUR ROAD, MAHOBA, (U.P.), PH:210427-9450269053.

MAINPIIRI

1063.# JATIN MOTORS (5540), GANESH MILL COLONY.RADHA RAMAN ROAD. MAINPURI-205001, DISTRICT-MAINPURI, UTTAR PRADESH PH:205001-8193825000.

MARIAHU

1064 # BABU MOTORS (5740), MACHAI ISHAHAR ROAD NEAR POST OFFICE MARIAHU-222161, DISTRICT - JAUNPUR LITTAR PRADESH PH :222161-9919263663

MATHURA

1065.# GIRIRAJ CAR CARE (5624), BIMAL ENGG COMPLEX BAD MATHURA-281 006

PH -281006-9837071321 NAND SERVICE STATION (3578), GOPAL 1066 ** PURA VILLAGE REFINDERY TOWNSHIP NH-2 MATHURA

PH:281001-9997982828 1067.# SHREE GOPAL AUTOMOBILES (5664), DELHI

BYE PASS ROAD.NEAR GOKUL RESTAURANT MATHURA - 281001 DISTRICT - MATHURA, UTTAR PRADESH. PH -281001-9412726760

SIYA RAM MOTORS (1666), JAYSINGHPURA, 1068 * NEAR BIRLA MANDIR, MATHURA-281 003, PH:281003-9897053962.

MEERUT

1069.** EXPERT CAR SCANNER (1174), 83 HILL STREET (KATH-KA-PUL), BEHIND ABU LANE MEERUT CANTT.. (U.P.) PH:250001-9412201195/9837678899 8057301301.

1070.# KRISHNA AUTOMOBILES (5573). PLOT NO D-10 SHRADHA PURI. KANKARKHERA -MEERUT, DISTRICT - MEERUTI, UTTAR PRADESH

PH:250001-9927241738. SARAN AUTOMOBILES LTD. (1078), DELHI ROAD, RITHANI, MEERUT, PH:250001-93594506555 / 6395883392.

MIR7APLIR

1072 # PRABHAT MOTORS (4131), NH-7, REWA ROAD, CHANDAIPUR LAKHAMPUR. MIRZAPUR, U P,

PH:231309-9838940382.

MOHANIAI GANI

GURLLITEG BAHADUR AUTO ENTERPRISES (4072) 4 SENANI VIHAR RAI BARFILLY ROAD, MOHANLAL GANJ, LUCKNOW U P. PH:226027-9415229172.

MORADABAD

1074 # ASHISH AUTOMOBILES (1477), KANTH ROAD. MORADABAD-244 001. PH -244001-0837055258

NAJIRARAD

SETHI MOTORS (4557), C/O SETHI BOARD 1075.# INDUSTRIES LIMITED, OPP, HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT, BIJNOR (UTTAR PRADESH). PH :246732-9837590800 / 8534862060

NOIDA

1076.# AUTOPOINT (2263), G-6.SECTOR 11.NOIDA. PH:201301-8800337770. 1077 ** RAHUL MOTORS (4662), A-59 SECTOR-80. PHASE-II. NOIDA-201303, UTTAR PRADESH.

-201305-9810572900/9312271259/0120-3963

RAJESH & ANII MOTOR CO (5330) R-110 1078 ** SECTOR 2 NOIDA DISTRICT - GALITAM BUDH NAGAR LITTAR PRADESH

> -201301-9818578786/0120-4211266/0120-253 9555 SKLINIVERSE ALITOMOBILE PRIVATE

1079 * LIMITED (8922), C-2 SECTOR 63, NOIDA -

PH:201301-9219694600/9690581570. OBRA

1080 # APPRECIATE SERVICES (4678), BILLL

RAII WAY STATION ROAD, OBRA. SONEBHADRA, UTTAR PRADESH - 231219, PH:231219-8765833557 / 8840276760

** A-Category Mass: Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

PILIBHIT

LINIVERSAL MARLITI SERVICE STATION 1081 * (4365) BYE PASS ROAD, PILIBHIT, UTTAR PRADESH PH:243006-9412313499

PII KHIIWA

SHREE BANKEY BIHARI MOTORS (6025). NH-24 DELHI-GARH ROAD PILKHLIWA-245307 DISTRICT-CHAZIARAD LITTAR PRADESH PH -245304-9045548101

PRATAPGARH (U.P)

1083.** SHREE MOTORS (4146), ALLAHABAD FAIZABAD ROAD, NH-96, CHILBILA RANJEETPUR, PRATAPGARH (UTTAR PRADESH) PH:230001-9415229257

RAI-BARELI

1084.** STANDARD GARAGE (4429), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE, RAE BAREILLY. PH:229206-9415190703.

RAMNAGAR

1085.# MAHI AUTOMOBILES (5532), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTRAKHAND. PH:244715-9837920845.

RAMPUR

1086.# FIZZA MOTORS (2241), NEAR AMBEDKAR PARK, CIVIL LINES, RAMPUR (U.P.), PIN-244 PH:244901-9897879711.

RATH

1087.# MARUTI POINT (4228), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P), PH:210431-9415331735.

RENUKUT

1088.# AMBIKA MOTORS (1050), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.). PH:231217-9415251724

ROBERTSGANJ

KAMAKHYA AUTOMOBILES (4163), PIPRI ROAD ROBERTSGAN I SONERHADRA (ILP) PH -231216-9918301052

SADABAD

1090.# ASHU SERVICE CENTRE (5849), AGRA BYE PASS POAD SADARAD-281306 DISTRICT-HATHRAS, LITTAR PRADESH. PH:281306-9058832658

SAHARANPIIR

GANESH CAR SERVICES (1871), OPP. REMOUNT DEPOT GATE, DEHRADUN ROAD. SAHARANDI IR-247 001 PH -247001_0358306804

SAHIRARAD

1092.# MEHAR AUTOMOBILES (3576), 116/1 NEAR GDA MARKET G.T. ROAD KATORIMILI MOHAN NAGAR GHAZIARAD-201 007 PH -201007-9711201557/9871832662

MOTOR MAGIC ALITO ZONE (4462), 4/29-A SITE-IV. INDUSTRIAL AREA, SAHIBABAD. DISTT GHAZIABAD

:201005-9810936357/9717194917/783861533

1/9717800022 PANDIT AUTOMOBILES (4647), 3/1/1, SITE-IV, 1094.# INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH,

> :201010-0120-2776808/0120-4114808/981077 1045/9810639100.

1095.# POOJA MOTORS (3562), TEELA MORE, SHAHBAJPUR, LONI, DISTT, GHAZIABAD

:201102-9810986463/9810986463/989115595

SANSAR MOTORS PVT. LTD. (2061), 11/27 SECTOR-3, RAJINDER NAGAR, SAHIBABAD, DISTT. GHAZIABAD, PH:201005-9811004475.

SANDII A

1097.# SUBHAM SERVICE CENTRE (4042), NEAR NEHA KOTHI ROAD, SANDILA, HARDOI, PH:241204-9506181818.

SHAHJAHANPUR

1098 # SUPER AUTO (3135), OLD DIST, HOSPITAL ROAD, SHAHJAHANPUR (U.P.), PIN-242 001, PH:242001-9415035644.

SHAMII

1099 # ROYAL MOTORS (5277) PANIPAT KARANA ROAD, SHAMLI, SHAMLI-247776, UTTAR DDADEGU PH:247776-9927272766 / 8393992671.

SHIKOHABAD

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

1100.# KUMAR MOTORS (5575), SUBHASH TIRAHA # AGRA GATE - SIKOHABAD, DISTRICT -FEROZABAD, UTTAR PRADESH, PH :283203-9411937033

SIDDHARTH NAGAR

1101.# MARUTI CARE CENTRE (2736), OPP.
SIDDHARTH SCHOOL, AZAD NAGAR,
SIDDHARTH NAGAR-272 207, (U.P.),
PH :272207-9935642651.

SIKANDRABAD

1102.# NALIN AUTO (8921), G.T. ROAD,

SIKANDRABAD, DISTT. BULANDSHAHAR,
(U.P.),
PH

:203205-05735-222802/9412227155/9761133

SIRSAGANJ

1103.# SATGURU MOTORS (3739), BYE PASS
KAURARA ROAD, SIRSAGANJ DISTT.
FIROZABAD, ETAWAH-AGRA ROAD,
SIRSAGANJ (U.P.),
PH - 281431.0412316660

SONEBHADRA

1104.# OUDH SERVICE STATION (2925), SHAKTI # NAGAR, SONEBHADRA-231 222, , PH :231222-7408434860.

SULTANPUR

1105.# HINDUSTAN AUTO GARAGE (1360), # BARHAIYA BEER RD., (ADJ.BUS STAND), SULTANPUR-228 001 (U.P), PH :228001-9984154002.

VARANASI

1106.** MISHRA ENGINEERS (4957), S-4/68, NAI BASTI, PAHARIA, VARANASI-221002, UTTAR PRADESH, PH: 221002-9415301483.

UTTARAKHAND

BAZPUR

1107.# TARAI AUTOMOBILE ENGG WORKS (4459) # GURUTEG BAHADUR ROAD, U.S. NAGAR, BAZPUR-262401, UTTARANCHAL, PH -263401-3837506765

BHAGESWAR

1108.# SHREE ISHT DEV AUTOMOBILES (4570), # GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTARANCHAL, PH - 267042-9007865427

DEHRADUN

1109.# ASHIRWAD MOTORS (5144), CANAL ROAD,
NEAR BALLUPUR CHOWK,
DEHRADUN-248001, UTTARANCHAL,
PH :248001-9219594748

1110.# HANS LAKHERA MOTORS (5032), JOGI WALA # RING ROAD, NATHAPUR APPARTMNT., NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN,

PH :248001-9897456677 / 01352669889.

1111.# KRIPALESHWARI MOTORS (4475),
HARIDWAR ROAD, NEAR LIC BUILDING,
DEHRADUN-248001, UTTARANCHAL,
PH :248001-9412963384.

1112.* SHREE RAM AUTOMOBILES (5066), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN, UTTARANCHAL, PH :248198-9897731200 / 7895022610.

HALDWANI

1113.# EXCEL MOTORS & ENGG. WORKS (3827),
RAMPUR ROAD, NEAR STM FOREST
HOSPITAL, HALDWANI, NAINITAL,
PH :263139-9837191688.

1114.* HARYAL SERVICE STATION (5340), BAREILY ROAD.GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND, PH: :263139-9997200227.

HARIDWAR

1115.# PREET MOTORS (5561), SHRI NATH NAGAR,
RAILWAY ROAD, JAWALPUR - HARDWAR,
DISTRICT - HARDWAR, UTTARANCHAL,
PH : 249408-9012010497 / 9012010497.

KANKHAL

1116.# HIGHWAY MOTORS (4261), NEAR SINGH # DWAR CHOWK, ROORKEE-HARDWAR BY PASS ROAD, POST OFFICE, GURUKUL KANGRI, KANKHAL, DISTT HARDWAR, PH :249408-9412072889.

KASHIPUR

1117.# OM MOTORS (4329), OPPOSITE SWAGAT

MANDAP, BAZPUR ROAD, KASHIPUR DIST.,
U.S. NAGAR (UTTARANCHAL),
PH:244713-9927500007 / 9897740935.

1118.# KRISHNA AUTOMOBILES (4824), # MORADABAD ROAD, KASHIPUR, , PH :244713-9870998368.

KICHHA

1119.# SHREE SHYAM JI AUTO SERVICE CENTRE
(5648), BAREILY ROAD, KICHHA, PIN-263148,
DISTRICT-UDHAM SINGH NAGAR,
UTTRAKHAND,
PH.263148-9837033377.

KOTDWAR

1120.# BHATT MOTORS (1775), NAJIBABAD ROAD, # KOTDWARA, (GARHWAL), UTTARANCHAL, PH :246149-9917005404

LAKSAR

1121.# SHIV AUTOMOBILES (5560), 110/1/3
BALAWALI ROAD - LAKSAR, DISTRICT HARIDWAR, PIN - 247663, UTTARANCHAL
PH -247663-9690111444

LOHRIASAL MALLA

1122.# ANJINI SERVICE CENTRE (5552), NEAR
BLOCK OFFICE,KALADHUNGI ROAD,
LOHRIASAL MALLA, CITY - HALDWANI,
UTTARAKHAND - 263139.,
PH - 263130_A837088600

NEW TEHRI

1123.# BHAGWATI SERVICE CENTER (4472),
SECTOR-8E/537, NEAR STADIUM, BARURI,
NEW TEHRI, GARWAL (UTTRANCHAL),
PH -249001-7895/19517 / 7895/19517

PAURI

1124.# KRISHNA MOTORS (5957), SHRINAGAR
ROAD,NEAR KARGIL SHAHEED PETROL,
PUMP,PAURL:246001, DISTRICT-PAURI
GARHWAL, UTTRANCHAL,
PH:246001-9719723484.

PITHORAGARH

1125.# CAR CARE CENTER (4371), CANT ROAD, # PITHORAGARH, UTTARANCHAL, PH :262501-9756284676.

126.# MAHAKALI MOTORS (4142), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTARANCHAL, PH : 267501.9007181886

RANIKHET

1127.# LATIF MOTOR WORKS (3269), SADAR # BAZAR, GANDHI CHOWK, RANIKHET, (UTTARANCHAL), PH :263645-9761250801.

RISHIKESH

1128.# GARHWAL GASOLINE STATION (3639), , H.P.
PETROL PUMP, LAXMAN JHULA ROAD,
RISHIKESH-249 201,
PH :249137-9837377767.

1129.* RAKESH AUTOMOBILE ENGINEERS (1464), OPP. BHARAT MANDIR INTER COLLEGE, HARDWAR ROAD, RISHIKESH-249 201, PH :240137.9412051655

ROORKEE

1130.# DUM DUM ENGG. WORKS (1343), GROUND
FLOOR, A TO Z TOWER, NEAR SOLANI
BRIDGE, HARIDWAR ROAD, ROORKEE,
PH : 2/1764.84/40155002

1131.# ROORKEE AUTO SCANNERS (2675), 786 # WEST AMBER TALAB, RAM NAGAR CHOWK, ROORKEE-247 667, PH :247664-9837032367.

RUDRAPRAYAG

1132# RAJESHWARI AUTOMOBILES (5669), BADRINATH ROAD, GHOLTIR, RUDRAPRAYAG, DISTRICT - RUDRAPRAYAG, UTTARANCHAL, PH:246171-9997217788.

RUDRAPUR

1133.** BALAJI SERVICE CENTRE (1335), HALDWANI ROAD, RUDRAPUR(NAINITAL), (U.P)., PH :263153-9897057385

134.** CORUS MOTORS (5059), D1 D2.20/1.NANITAL ROAD, DISTRICT - U.S. NAGAR , UTTARAKHAND

PH :263153-9927500007

SIMLI

1135.# PINDER AUTOMOBILES (5527), PLOT #

C6-C9, INDUSTRIAL AREA , NEAR

KARNAPRAYAG - SIMLI, UTTARANCHAL,
PH : 246449-9627687196

SITARGANJ

1136.# SHRI RAM MOTORS (5833), AGARWAL

BHAWAN, BYE PASS ROAD,
SITARGANJ-242605, DISTRICT-UDHAM SINGH
NAGAR, UTTARANCHAL,
PH '26/2015.8856485786 / 0758777957

KASNAGAR

1137.# SOUMYA MOTORS (4272), CHAKRATA ROAD,
BEHIND STATE BANK OF INDIA,
VIKASNAGAR, DISTT. DEHRADUN (U.A),
PH :248198-9412382490.

WEST BENGAL

ALIPURDUAR

1138.# PRADDYOUT AUTOMOBILE WORK (653),
PURAN BAZAR, P.O.ALIPURDUAR,
JALPAIGURI, WEST BENGAL,
PH. :736121-9832487473 / 9434192320.

ARAMBAGH

1139.# MARUTI ZONE (3748), PARUL, ARAMBAGH, # HOOGHLY, WEST BENGAL, PH :712413-9434345047 / 9434149281.

ASANSOL

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1140.#	AGARWALLA AUTO SERVICE (3122), 181
#	BURNPUR ROAD, P.O. BURNPUR, DT.
	BURDWAN-713 325, (WEST BENGAL),
	PH:713325-9832179346 / 8170946141.
1141.**	WEST END MOTORS (1665), KALYANPUR
	SATELITE TOWNSHIP PROJECT, KANYAPUR
	LINK ROAD, PALASHDIAH MORE,
	PO-KANYAPUR, PIN-713341, ASANSOL,
	WESTBENGAL,
	PH:713341-8798107541/9233317323.

BAHRAMPUR

1142.* MARUTI CARE (3674), NH-34 UTTARPARA MORE, P.O. RADHARGHAT, BERHAMPORE MURSHIDABAD -742 187 (WEST BENGAL), PH:742187-9434394040/9732444000. 1143.# NARAYAN BUS SERVICE (656), 17 RABINDRA

THAKUR ROAD, P.O.BAHARAMPUR (WEST

PH :742101-9732628065 / 03482-224516.

BALLIRGHAT

1144.# GHOSH AUTOMOBILES (2644). NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, PH:733101-9434963493/03522-255411.

BANDFI

1145 # CAR HOSPITAL (3675), 2 NO. NETAJI PARK G.T. ROAD. (OPP. MILITARY COLONY). BANDEL (WEST BENGAL). PH :712102-9038021085 / 9038021085

BARRACKPORE

1146.# SAMANTA AUTOMOBILES PVT LTD (268), CHIRIMORE BARRACKPORE-743 101 NORTH -24 PARGANAS WEST BENGAL PH -743101-9831054432 / 9831823079

BIRPARA

1147 # PARTAP ENGINEERING WORKS (8942) NH-31 DEMDIMA PO-BIRPARA PIN -735204 DISTRICT, IAI PAIGLIRI, WEST BENGAL PH -735204-9832429319 / 03563-266494

BOLPUR

1148.# BASUNDHARA AUTOMOBILES (4241), GOAL PARA, BOLPUR SURI ROAD, BOLPUR, PH:731235-9832132851 / 7602117151

CHINSURAH

1149.# UNIVERSAL AUTO REMEDY (648), C/O MR.BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE PO CHINSURAH HOOGHI Y-712102 PH -712102-9830056592 / 9433733293

COOCH BEHAR

1150.# PROVA AUTOMOBILES (8936), CHAKCHAKA CHECK POST, NH-31, COOCH BEHAR-736 101 (WEST BENGAL) PH:736101-9434174309/03582-236204.

ΠΙΝΗΔΤΔ

1151 # DINHATA AUTOMOBILES (5739), BALRAMPUR POAD PO/PS:DINHATA DISTRICT-COOCHBEHAR, PIN-736135, WEST RENGAL PH:736135-9434256518 / 03581-259087.

DURGABUR

THE OLUCKEST (2879) BANS KOPA (NEAR 1152 # # PARADISE INN), G.T. ROAD, DURGAPUR-713 212 PH:713212-9832165126 / 9735149985

FARAKKA

SPEED WHEEL SERVICE CENTRE (1056). 1153.** TTS HCC COLONY, FARAKKA, P.O. NABARUN DISTT MURSHIDABAD (W.B.) PH:742236-9434101917 / 9932481009

HALDIA

1154.** S.D. REPAIRING CENTRE (2168), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY. HALDIA-721 606, DISTT, MIDNAPORE (W.B.). PH:721606-9434021405/03224-252152.

HOWRAH

1155.# GREWAL AUTO SERVICE (1570), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH-711 PH:711102-9831017806 / 9831017806.

JAIGAON

1156.** SHAKTI TRADING CO. (770), M.G. ROAD, JAIGAON-736 182. PH:736182-7760808990 / 9233780027

JALPAIGURI

1157.# AUTOSTEL (646), SAKOAJHORA, P.O. GAIRKATA-735 212, DIST.JALPAIGURI

PH:735212-9934111868/03567-233116. S.S. AUTOMOBILES (3664), ASSAM MORE, JALPAIGURI, WEST BENGAL-735 101. PH:735101-9434340252 / 03561-255220.

ΚΔΙ ΥΔΝΙ

1159.# GOPAL AUTO SERVICE CENTRE (3373), B.K. EXPRESSWAY, BUDHHA PARK, KAI YANI-741 235, NADIA (WEST BENGAL), PH:741235-9831319161 / 7003934349

1160.# KRISHNA ENGINEERING WORKS (5270). PLOT NO 199 KANTABELE O N.G.C. ROAD KAI VANI EYPRESS ROAD PO:GHORAGACHHA PS - KAI YANI WEST BENGAL PH:741245-7439007218 / 9339964302.

ΚΟΙ ΚΔΤΔ

1161.** ADAMS MOTOR WORKS (465), 61 A SHAKESPEARE SARANI, CALCUTTA-700 017, PH:700017-9830703287 / 033-22807414.

1162# AUTO SCAN (2272), 100/1 B.T. ROAD, CALCUTTA-700 090, PH:700090-9231622309/9883101133. AUTOKRAFT (620), F 1/G-3, RIC IND.ESTATE UPEN BANERJEE ROAD, PARNASREE,

CALCUTTA - 700060 (W.B), PH :700060-9830053331 / 9830153099. BHAWANIPUR AUTO CENTRE (628), 49 S.P.MUKHERJEE ROAD, CALCUTTA - 700 026

(W.B). PH :700026-9831783130 / 033-24766011. CAMAC (621), 2/E CAMAC STREET, CALCUTTA-700016(W.B),

PH:700016-9831493716/9831553520. 1166.# CLASSIC ENGINEERING WORKS (3171), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO.G-1, KOLKATA-700 034,

PH:700034-9903390559 / 033-24477502. DELUXE SERVICE STATION (672), P-256 257 CIT ROAD, CAI CUTTA-700 010. PH :700010-9836490083 / 9830582979

DIAL AUTOMOBILES PVT LTD. (643), 162 A PARY MOHAN RAY ROAD CALCUTTA-700027(W.B). PH :700027-9830552191 / 7044546528 033-24484393

FORTUNE AUTO CARE (3167), 16 G/6 KHANPUR ROAD, KOI KATA-700 047, (W.B.). PH -700047-0831754527 / 033-24214430 1170.# INTERNATIONAL AUTO WORKS (2648), 48-C SOUTH TANGRA ROAD, KOLKATA-700 046, PH:700046-9163703015/9331265805. MARUTLLINK (1633), CK-12 SECTOR 2, SALT

LAKE, CALCUTTA-700 091 PH:700091-9831180421 / 7980140734 1172.** MOTORKRAFT (635), P-149 REMOUNT ROAD, CALCUTTA-700 027 (W.B)

PH:700027-033-24493849/9830153099. NORTH POINT MOTORS PVT. LTD. (344). DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA-700 037 PH:700037-9830220069/9836445432.

1174 * PRINCE MOTOR WORKSHOP (2845), TM - 2/8 TEGHARIA P.O. HATIARA CAI CUTTA-700

PH:700059-9875625595 / 7003928834 1175.** R.S. SERVICE CENTRE (1948), 1/2 MAHENDRE ROY LANE, CALCUTTA-700 046, PH:700046-9831170273/9903981537.

RAJ AUTO SERVICE (5338), 35.CANAL EAST ROAD, KOLKATA, PIN - 700011, WEST

PH:700011-9831103901/033-23542996. ROYAL CALCUTTA AUTOMOBILES (4651), 68 BROAD STREET, KOLKATA-700019. . PH:700019-8777762005 / 9883690014. 1178.# RUSSA ROAD SERVICE STATION (622), 30

SP MUKERJEE RROAD, CALCUTTA - 700025 (W.B). . PH:700025-9748757842 / 033-24551146.

1179 # SONA AUTO UDYOG (3144), 1404 PURBACHAL MAIN ROAD, OPP, KALIKAPUR MARKET, KOLKATA-700 099. PH -700099-9804608684 / 7439023140

TECHNO ALITO WORKS (4669) 619 RAJA 1180 # RAM MOHAN ROY ROAD, BIREN ROY ROAD FAST REHALA KOLKATA-700008 PH -700008-9830111258 / 033-24068823

1181# LILTRA CRAFT (4643) 103/1B RAJA DINFNDRA STREET, KOLKATA-700006. WEST BENGAL PH -700006-9831313321 / 9830741255

1182 # YOUNG AUTOMOBILES (637) 50/2 HAZARA ROAD, CALCUTTA-700 019.(W.B). PH -700019-9830778611 / 9830250904

1183.# ZENITH AUTO (5529), BOHLA NATH SARANI CHINAR PARK RAJARHAT KOLKATA-700157, DISTRICT - KOLKATA, WEST BENGAL.

PH:700157-9830643781/9073670565. 1184.# ZOVAN AUTOMOBILES PVT. LTD (5578), 42/A1B,RAJA SANTOSH ROAD, KOLKATA, DISTRICT - KOLKATA, WEST BENGAL, PH:700027-9831082193/9874823274.

KRISHNANAGAR

1185.# HIGHWAY SERVICE CENTRE (4455), ASHA DEEP, N.H-34, KRISHNANAGAR, NADIA-741101, WEST BENGAL PH:741101-9434165494 / 9831186730 TARA MA AUTOMOBILES (1947), 1186# AUROBINDRA SARANI (NEAR KRISHNANAGAR WOMEN'S COLLEGE) KRISHNANAGAR, NADIA, , WEST BENGAL 7411011 PH:741101-8001100930 / 8515804802.

MADHYAMGRAM

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

1187.# J G BEHAL AUTO (4653), DOLTALA, GANGANAGAR, MADHYAMGRAM, KOLKATA-700129 (WEST BENGAL), PH :700129-9831094430 / 9833024389.

1188.* PAUL AUTOMOBILES (671), JESSORE ROAD, MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH, PH :700132-9830239001 / 033-28261051.

MALDA

1189.# ABHISEK AUTO CENTRE (1976), N.H.34,

NEAR ST. XAVIER SCHOOL, P.O.

MOKDUMPUR, DISTT. MALDA-732 101 (W.B.),
PH .732101-9434065360 / 03512-253987.

MIDNAPORE

1190.# CHATTERJEE AUTOMOBILE (4960), INDUSTRIAL GROWTH AREA, KHASJANGAL (NEAR KERANICHOTI), MIDNAPORE-721101, DISTRICT-PACHIM MIDNAPORE, PH:721101-9434043558 / 9609673737.

NARENDRAPUR

1191.# A.M. AUTOMOBILES (3175), KAMALGAZI,
NARENDURPUR, KOLKATA-700 103, (WEST BENGAL),
PH :700103-8335860051 / 8336946581.

PURULIA

1192.# BANERJEE AUTO SERVICE (640),

S.P. BANERJEE ANALBILA VILLA, RANCHI
ROAD, PURULIA.(W.B),
PH :723101-9434656942 / 9933740074.

RAGHUNATHGANJ

1193.# AUTO WHEEL (4427), NH 34, UMARPUR, PO # GHORSALA, DO MURSHIDABAD, WEST BENGAL, PIN 742235, PH: 742235-9434101917 / 9434083866.

RUPNARAYANPUR

1194.# L K MOTORS PVT LTD. (3477), NH 2 BYPASS, # POINT (CHOWRANGI), RUPNARAYANPUR (CHALBALPUR), BURDWAN-713 343, PH :713343-9091392314 / 9434107787.

SILIGURI

1195.# BHAWANI MOTOR GARAGE (4844), BIDYASAGAR PALLY, NEAR RISHI BHAWAN, BURDWAN ROAD, SILIGURI-734405, WEST BENGAL,

PH:734405-9641162127 / 9434376860.

1196.# MUM AUTO WORKS (4835), NEAR DELHI PUBLIC SCHOOL, PANCHANAI (DAGAPUR), SILIGURI, WEST BENGAL-734003, PH:734003-9832068537 / 9932190390.

SODEPUR

1197.** CAR CARE (8929), B.T. ROAD, SODEPUR, P.O.: SUKCHAR, 24 PARGANAS (NORTH), PH :700115-9674907411 / 9735138098

SRIRAMPUR

 MARUTI AUTO CENTRE (2167), 85/18 G.T. ROAD (WEST), PO: MULLIKPARA, SRIRAMPUR, HOOGLY-712 203 (W.B.), PH: 712203-9830191251 / 033-26225634.

SURI

1199.# PANCHANATH AUTOMOBILES (4456),
BROJARGRAM BARABAGAN, BAKRESWAR
PATHARCHAPURI HIGHWAY MORE, SURI,
WEST BENGAL-731101,
PH.731101-9732026250 / 03462-225558.

ULUBERIA

1200.# APSARA SERVICE STATION (3374), NEAR
BANITABLA CHECKPOST, ON NH-6,
ULUBERIA-711 316, (W.B.),
PH :711316-7797484735 / 033-26610656.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

DELHI

DELHI

- DELHI

 1. MARUTI SALES & SERVICE(DELHI) (0810-08-01), C-119, INDUSTRIAL AREA PHASE-I, NARAINA, NEW DELHI 110028 PH -45541113.

 2. JJ JIMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (0883-08-01), F-39, OKHLA INDUSTRIAL AREA, PHASE-II, NEW DELHI 1110000 110020
- THUZU PH: 41612194, 40685500. J J IMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (0883-08-03), C-7 SMA INDUSTRIAL ESTATE, G T KARNAL ROAD, NEW DELHI -110033

PH:40715500, 40715501.

TAMIL NADU

CHENNAI

J J IMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (1485-14-01), # 9, (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI -

PH :044-43563366, 43563367, 9176615000.

ARUNACHAL PRADESH

ITANAGAR

 HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111 PH :7005337938

ASSAM

BARPETA

 ROY AUTO ENGINEERING WORKS (7281-72-01), POST OFFICE, BARPETA ROAD, MAIN ROAD, WARD NO.-4, ASSAM - 781315 PH - 9054069306

DULIAJAN

 B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602 PH -0435719753

BIHAR

PATNA

 CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA, PATNA - 800013 PH -933411707/08210810240

DELHI

DELHI

- GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, 110018
 PH 43276666
- A MAUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91,
 LAWRANCE ROAD, DELHI 110035
 PH 48280000

HARYANA

BALLABGARH

 ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004 PH :4271800; 9899232536;9212142536.

MURTHAL

PANCHKULA

 CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA -134113
 PH :9914115427.

PANIPAT

 VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103 PH:9896118618.

SAHA

 PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-AMBALA - 133104 PH :9896666402

YAMUNANAGAR

 HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001 PH :9850000069

HIMACHAL PRADESH

JASSUR

 CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201 PH:9882217575 . 9459500613.

JAMMU AND KASHMIR

SRINAGAR

 RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR 2441384 PH :9906631702.

JHARKHAND

RANCHI

 PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA, RANCHI. - 834001 PH:2544661, 2542650.

KERALA

COCHIN

 AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 682024 PH -9026730007

PATHANAMTHITTA

 AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA -689640 PH :9288117477.

MADHYA PRADESH

NEEMUCH

 AUTO SCAN (3781-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH, - 454775 PH:9425106588.

MAHARASHTRA

PUNE

 MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP POMC TO PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHITRA - 411017 PH -9689011459

THANE

 THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE -400007

PH:9833947772.9833947778

KEONJHAR

21. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001 PH -0437075386

PUNJAB

ODISHA

BATALA

 CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505 PH 9876024243 9876024254

MOGA

 SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI, G.T. ROAD, MOGA - 142001 PH:06136-226807.

RAJASTHAN

JAIPUR

 KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A; NARAYANPURI, KATARIA KRISHI FARM, SIRSI ROAD, JAIPUR - 302034 PH:7427059388.

TELANGANA

HYDERABAD

 RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY, NAGOLE VILLAGE, HYDERABAD, NAGOLE, HYDERABAD - 500068 PH :9848062263.

UTTAR PRADESH

ALIGARH

 VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001 PH :9917473052, 9582123566.

GHAZIABAD

KAP AUTOMOBILES PVT. LTD. (5981-59-01),
 D-BLOCK SHASHTRI NAGAR, HAPUR
 ROAD, GHAZIABAD - 201002
 PH:0120-4538200, 9717629599, 9810523345.

 CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD -201102
 PH 9582945510, 9999107841

ICKNOW

 K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW -226003
 PH :2473369.

MEERUT

 UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, -250001 PH:9837072642.

NOIDA

- MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
 \$9,SECTOR-8,NOIDA 201301
 PH:08826172222 & 09971689689.
- 32. MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA, - 201301 PH :09458732222 & 09410282222
- JKM MOTORS (A184-A1-01), A-25,SECTOR 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301 PH:0120-4052400, 9899424000
- FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301 PH :4581111: 4581131/9650631111.

SAHIBABAD

 FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/18/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010 PH :9560868111.

UNNAO

 VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801 PH:2830610,2831248.


VARANASI


7. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002 PH:25100469, 9415203641.


WEST BENGAL


KOLKATA


 MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027 PH :24568326. 24486568. 24568325.

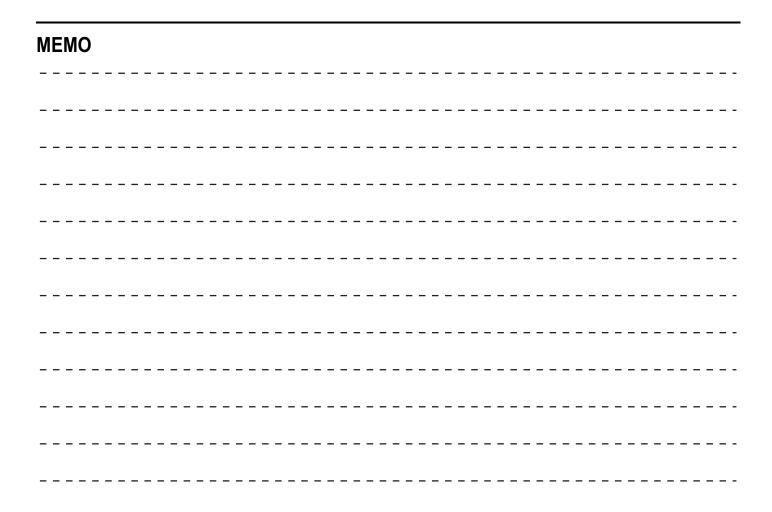


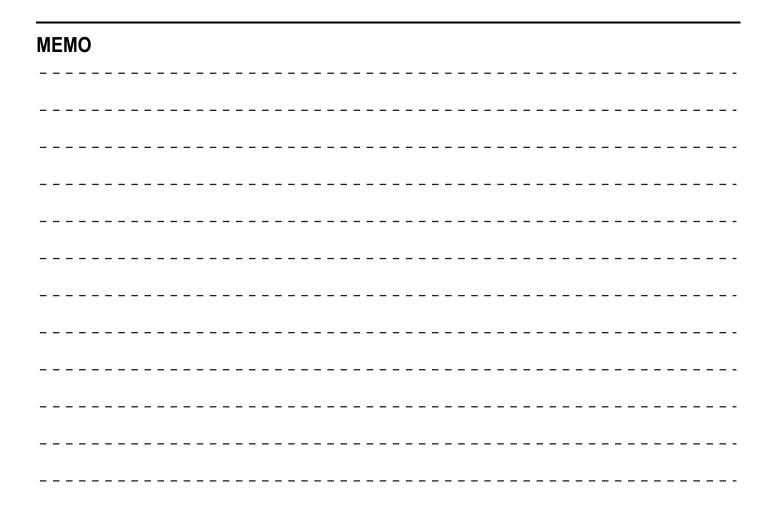


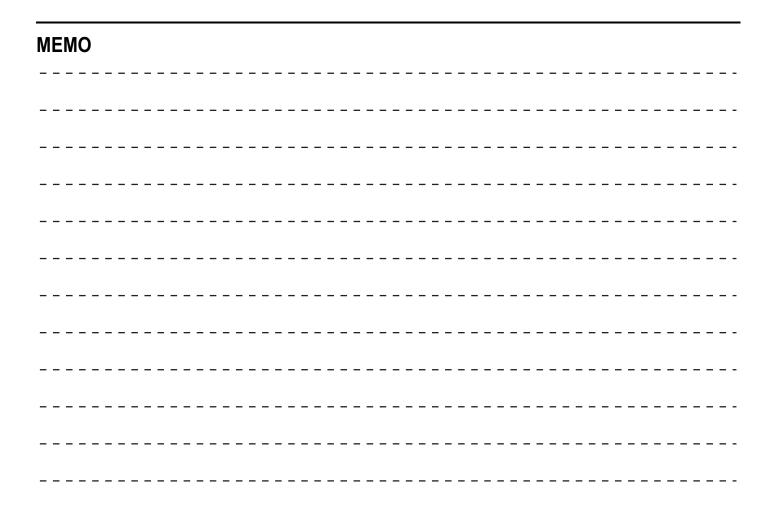


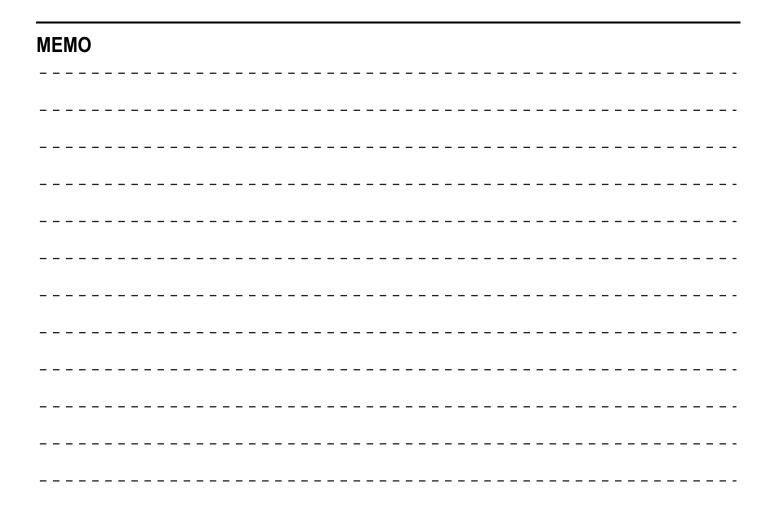


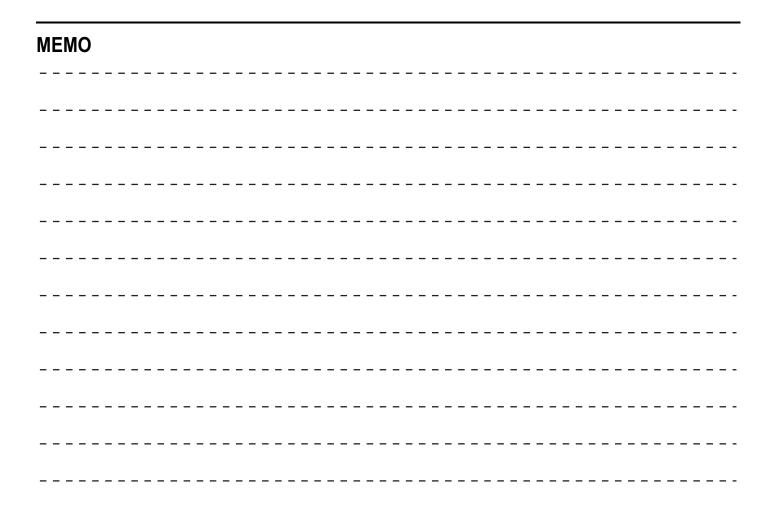


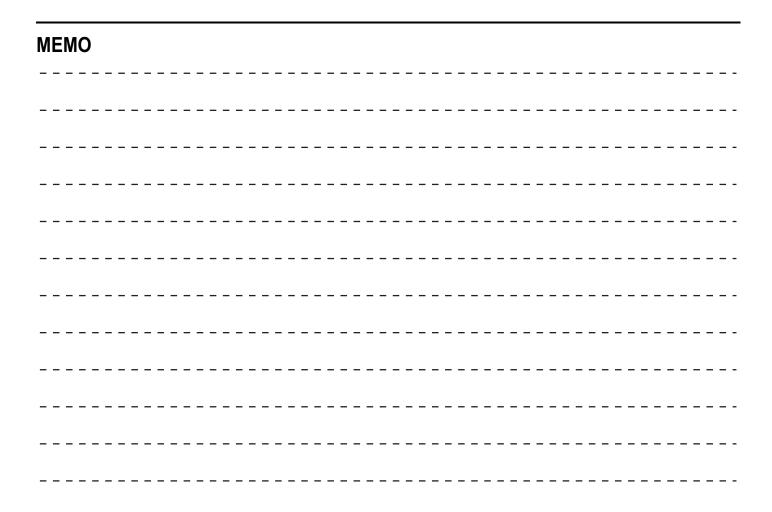


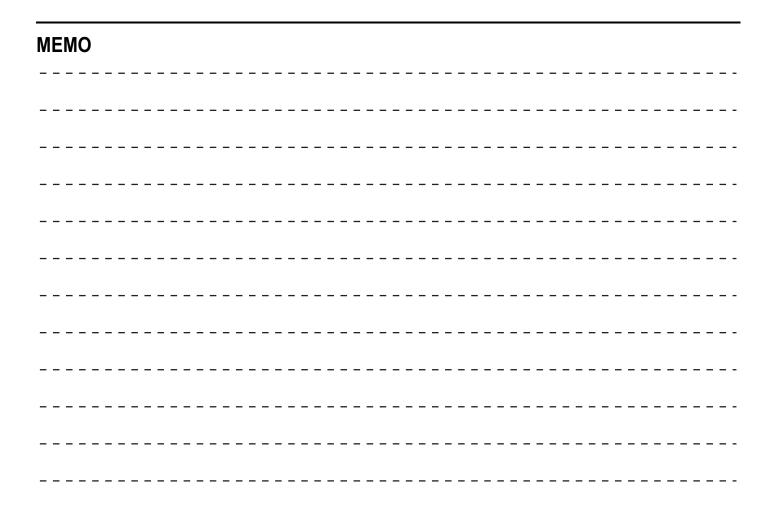


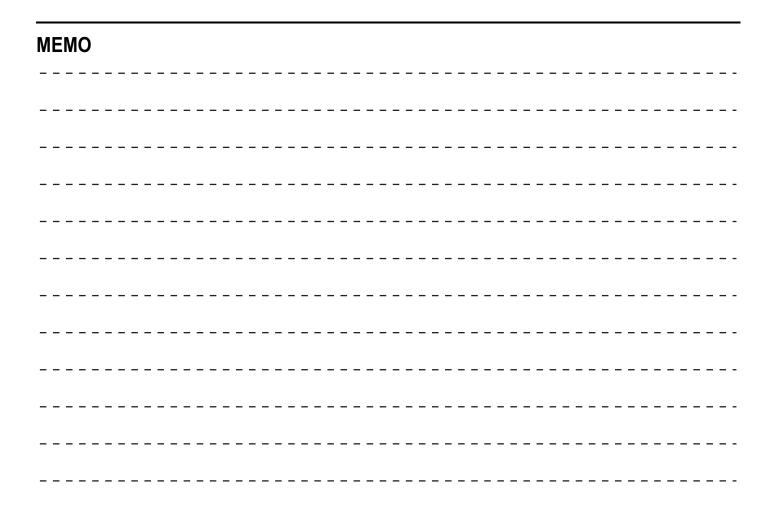


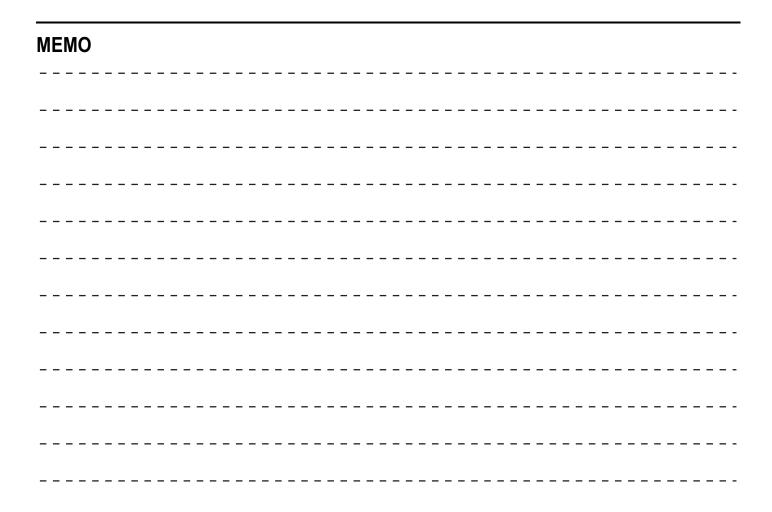


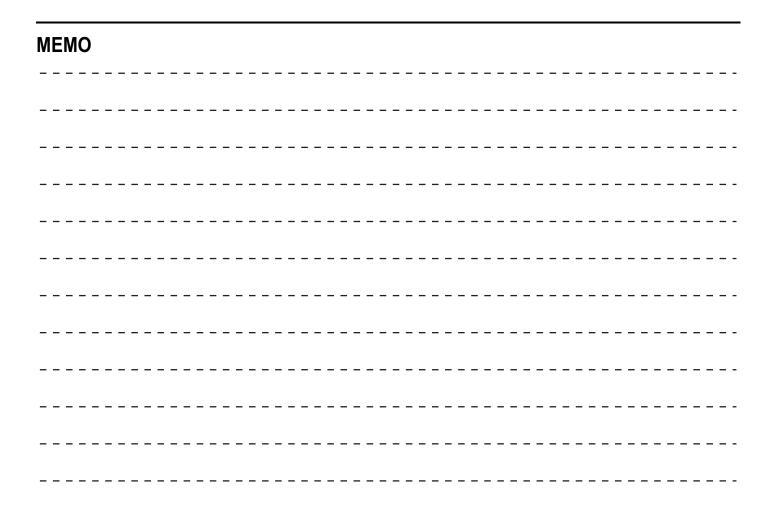

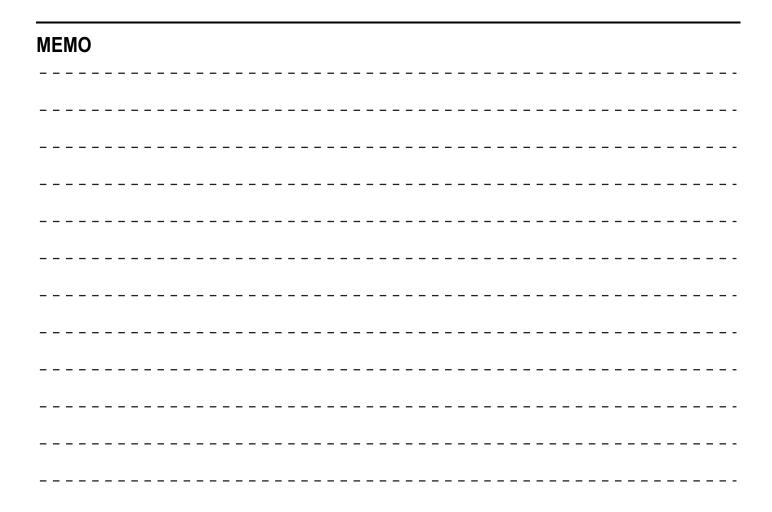

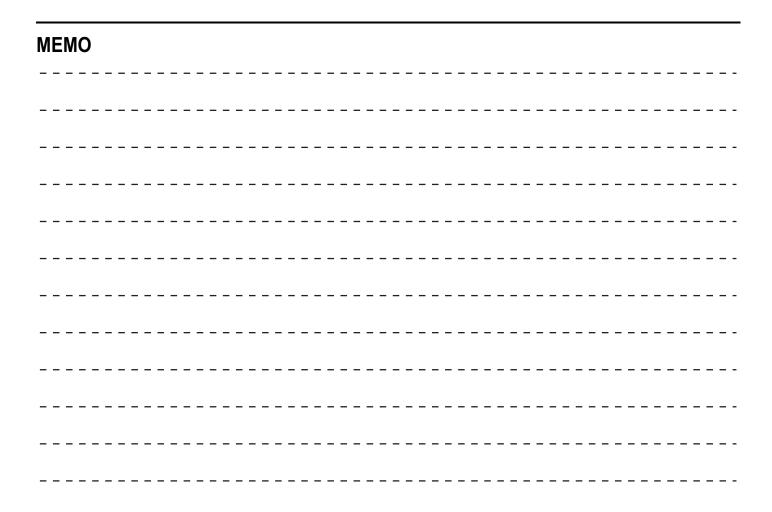

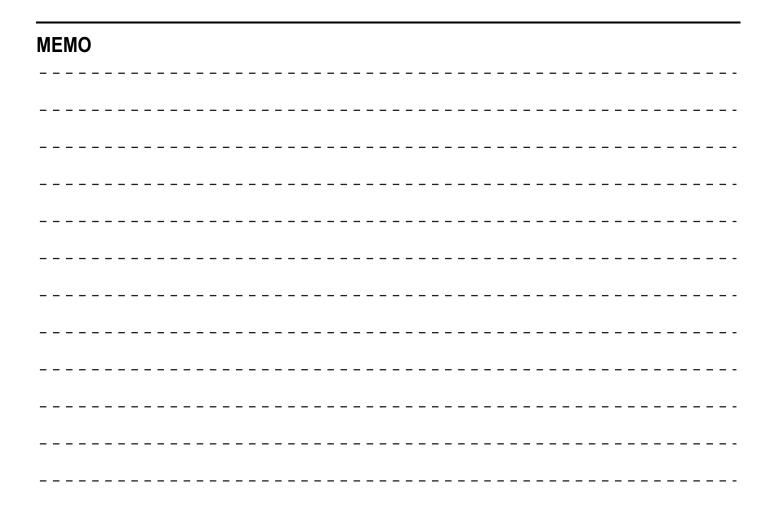

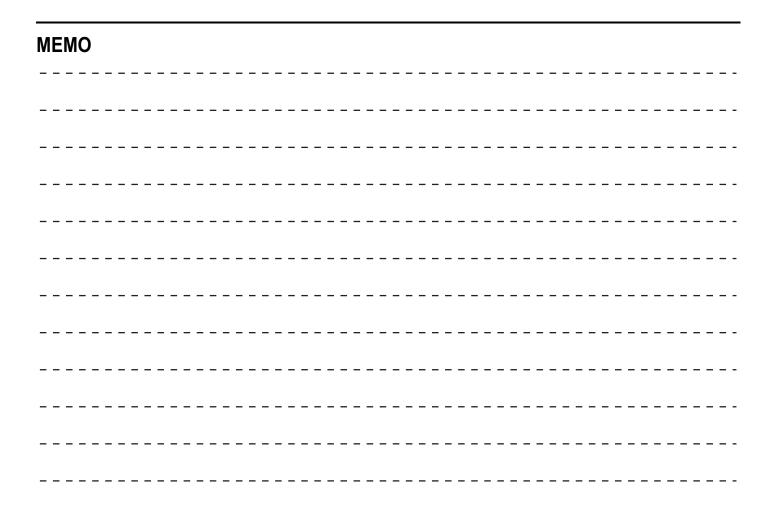

BATTERY LABEL SYMBOL MEANINGS

No smoking, no naked flames, no sparks		Battery acid
Shield eyes		Note operating instructions
Keep away from children		Explosive gas

Prepared by

MARUTI SUZUKI INDIA LIMITED

Service Division May, 2023

Part No. 99011M62S07-74E Printed in India

For round-the-clock on-road assistance, call Maruti On-road Service at 1800 102 1800* / 1800 1800 180*

No STD code to be prefixed.

MARUTI SUZUKIGENUINE PARTS

MARUTI SUZUKI
COST PROTECT

MARUTI SUZUKIHELPLINE

MARUTI SUZUKIROAD SERVICE

SERVICE DIVISION

MARUTI SUZUKI INDIA LIMITED

Palam-Gurgaon Road, Gurgaon – 122 015 (Haryana), India Visit us at: www.marutisuzuki.com



99011M62S07-74E