

VIN:															
MODEL:				OWNER NAME & ADDRESS											
VARIANT:															
COLOUR:															
ENGINE NO.:				CONTACT NO.											
KEY NO.:				E-mail ID:											
INVOICE DATE:				SELLING DEALER NAME & CODE											
ODOMETER READING	KM														
REGISTRATION NO.:															
BATTERY MAKE:				DEALER SHOWROOM ADDRESS & CONTACT NO. (STAMP)											
BATTERY NO.:															
BATTERY BATCH															
TYRE	MAKE	BATCH CODE													
Front Right			CONTACT NO. FOR SERVICE APPOINTMENT & SUPPORT												
Front Left															
Rear Right															
Rear Left															
Spare															
<p>For any assistance with regard to our product, please contact General Manager/Works Manager at any of our Dealer or Authorised Service Station. For additional enquiry you may contact our Regional Office or Service Department. The addresses and phone numbers are given in Service Network section of this Manual / Service Network booklet.</p>															

MAINTENANCE SERVICE RECORDS

F: FREE SERVICE, P:.... PAID SERVICE, W:.... WARRANTY JOB, A:.... ACCIDENTAL JOB

1ST. FREE INSPECTION COUPON (CUSTOMER'S COPY) (1,000 KM or 1 MONTH)

WHICHEVER COMES FIRST

JOB MARK: ✓ : Checked OK, A: Adjust, C: Clean, R: Replace or Change, L: Lubricate, T: Tighten,
O: Rotate, I: Inspect and correct or replace if necessary.

1. ENGINE

1. Engine Coolant (Level, Leakage)
2. Engine oil (Level, Leakage)
3. Cooling System hoses & connections (Leakage, Damage)

JOB

6. FRONT AND REAR SUSPENSION

1. Struts/shock absorbers (Oil leakage)

2. FUEL

1. Fuel filter, Fuel tank cap, Fuel lines and connections (Leakage)
2. Fuel Filter - water Draining (Diesel)

7. STEERING

1. Steering wheel (Play)
2. All Rods & Arms (Loose, Damage, Wear)
3. Power Steering System (Operation)
4. Steering gear box (Inspect)
5. Tilt steering (Operation) (if equipped)

8. ELECTRICAL

1. Battery electrolyte (Level, Leakage)
2. Lighting system/horn (Operation)
3. Wiper (Operation)

9. BODY

1. All Latches, Hinges & Locks/Central Locking (Operation)

10. HEATING AND AIR CONDITIONING

1. Drive belt (Tension)
2. Check functioning of Recirculating flap
3. Check all Hose Joints

11. ROAD TEST

1. Operation of Brakes, clutch, Gear shifting and Speedometer
2. Body & Chassis noise

4. BRAKE

1. Brake fluid (Level, Leakage)
2. Brake pedal (Pedal to carpet clearance)
3. Parking brake lever (Play)
4. Brake hoses & pipes (Leakage, Damage)

5. WHEEL

1. Tyres (Air pressure, Abnormal wear, damage)
2. Wheels (Inspect)

APPLICABLE FOR AUTOMATIC TRANSMISSION ONLY

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

* MODEL CODES : ALTO-AOD308/308C/310C/310C, CELERIO-AVH310/310C/208D, CIAZ-AVB414/413D, EECO-MGA412/412C, ERTIGA-AVI414/413D, GRAND VITARA XL7-JA627, GYPSY KING-MG413W, NEW DZIRE-AZI412PN/413DN, NEW SWIFT-AZI412/413D, NEW WAGONR-A1J310/310C/310L, OMNI-MT308, RITZ-A5E412/413D

1ST. FREE INSPECTION COUPON (DEALER'S COPY) (1,000 KM or 1 MONTH)

Please see overleaf for special instructions

JOB

--

Model Code*

Chassis No. :

Engine No. :

Mileage

Date of Invoice

Date of Inspection

Registration No.

Service Dealer/Mass Code

Customer Name

Address (Please write complete address)

Telephone No.

Mechanic's Signature

Service Manager's Signature

Customer's Signature

Stamp of Selling dealer (Code & Full Address)



Model Code*				
Chassis No. :				
Engine No. :				
Mileage				
Date of Invoice				
Date of Inspection				
Registration No.				
Service Dealer/Mass Code				
Customer Name				
Address (Please write complete address)				
Telephone No.				



<i>Mechanic's Signature</i>
<i>Service Manager's Signature</i>
<i>Customer's Signature</i>

Service Division
Maruti Suzuki India Limited

2ND. FREE INSPECTION COUPON (CUSTOMER'S COPY) (5,000 KM or 6 MONTHS)

WHICHEVER COMES FIRST

JOB MARK: ✓ : Checked OK, A: Adjust, C: Clean, R: Replace or Change, L: Lubricate, T: Tighten,
O: Rotate, I: Inspect and correct or replace If necessary.

1. ENGINE

1. Engine Coolant (Level, Leakage)
2. Engine Oil (Level, Leakage)
3. Cooling System hoses & connections (Leakage, Damage)
4. Exhaust System (Noise, Leakage)
5. PCV System (Hoses, Connections, Valve)(Inspect)

JOB

6. FRONT AND REAR SUSPENSION

1. Suspension strut/shock absorber(Oil Leakage)
2. Suspension arms, Knuckle, Rear spring (Damage, Loose)
3. All Nuts & Bolts (Tighten)

JOB

2. FUEL

1. Air cleaner (Clean) (Petrol)
2. Fuel filter, Fuel tank cap, Fuel lines and connections (Leakage)
3. Fuel filter water draining (Diesel)

3. CLUTCH AND TRANSMISSION

1. Clutch Pedal (Play) (Petrol)
2. Clutch Slipping (Dragging, Damage)
3. Transmission Oil (Level Leakage)
- #4. Automatic transmission Fluid (Level, Leakage)
- #5. Hose A/T fluid (Inspect)
6. Gear shifter cables (Operation)
7. Drive shaft boots (Damage)
8. Clutch Fluid (Level, Leakage)

8. ELECTRICAL

1. Battery electrolyte (Level, Leakage)
2. Lighting system/Horn (Operation)
3. Wiring Harness Connections (Looseness)
4. Wiper (Operation)

4. BRAKE

1. Brake fluid (Level, Leakage)
2. Brake pedal (Pedal to carpet clearance)
3. Parking brake lever (Play)
4. Brake Disc & Pads (Inspect)
5. Brake hoses & pipes (Leakage, Damage)

10. HEATING AND AIR CONDITIONING

1. Drive belt (Tension, Damage)
2. Check functioning of Recirculating flap
3. Check all Hose Joints
4. Tighten Compressor Mounting Bolts
5. Clean Condenser with low pressure water

5. WHEEL

1. Tyres (Air pressure, Abnormal wear, Rotation)
2. Wheels (Inspect)
3. Front/Rear Wheel Bearings (Loose,Damage)

11. ROAD TEST

1. Operation of Brakes, clutch Gear shifting and Speedometer
2. Body & Chassis noise



APPLICABLE FOR AUTOMATIC TRANSMISSION ONLY

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

2ND. FREE INSPECTION COUPON (DEALER'S COPY) (5,000 KM or 6 MONTHS)

Please see overleaf for special instructions

Model Code *				
Chassis No. :				
Engine No. :				
Mileage				
Date of Invoice				
Date of Inspection				
Registration No.				
Service Dealer/Mass Code				

Mechanic's Signature

Service Manager's Signature

Customer's Signature

*MODEL CODES : ALTO-AOD308/308C/310/310C, CELERIO-AVH310/310C/208D, CIAZ-AVB414/413D, EECO-MGA412/412C, ERTIGA-AVJ414/413D, GRAND VITARA XL7-JA627, GYPSY KING-MG413W, NEW DZIRE-AZI412PN/413DN, NEW SWIFT-AZI412/413D, NEW WAGONR-A1J310/310C/310L, OMNI-MT308, RITZ-A5E412/413D

Stamp of Selling dealer (Code & Full Address)



Model Code *					
Chassis No.:					
Engine No.:					
Mileage					
Date of Invoice					
Date of Inspection					
Registration No.					
Service Dealer/Mass Code					

For Servicing Dealer/Mass

- 1.0 : Please fill up Model codes correctly.
- 2.0 : Please fill up Complete chasis No.
- 3.0 : Please fill up customer details i.e. Address and Telephone No. legibly and correctly for the latest owner.

For Selling Dealer

- 1.0 : Please send all Free Service Coupon to us once in a month after settlement of free service charges.

Mechanic's Signature
Service Manager's Signature
Customer's Signature



Service Division
Maruti Suzuki India Limited

3RD. FREE INSPECTION COUPON (CUSTOMER'S COPY) (10,000 KM or 12 MONTHS)

WHICHEVER COMES FIRST

JOB MARK: ✓ : Checked OK, A: Adjust, C: Clean, R: Replace or Change, L: Lubricate, T: Tighten,
O: Rotate, I: Inspect and correct or replace If necessary.

1. ENGINE

1. Engine Coolant (Level, Leakage)
2. Cooling System hoses & connections (Leakage, Damage)
3. Engine oil & oil filter (Replace)
4. Engine Mounting and Manifold fixing (Loose, Damage)

JOB

6. FRONT AND REAR SUSPENSION

1. Suspension strut/shock absorber(Oil Leakage)
2. Suspension arms, Knuckle, Rear spring (Damage, Loose)
3. All Nuts & Bolts (Tighten)

JOB

2. FUEL

1. Air cleaner / Filter element (Clean)
2. Fuel Filter, Fuel tank cap, Fuel lines and connections (Leakage)
3. Fuel filter & water draining (Diesel)

7. STEERING

1. Steering wheel (Play)

2. All Rods & Arms (Loose, Damage, Wear)

3. Power Steering System (Operation)

4. Steering gear box (Inspect)

5. Tilt steering (operation) (if equipped)

8. ELECTRICAL

1. Battery electrolyte (Level, Leakage)

2. Lighting system/Horn (Operation)

3. Wiring Harness Connections (Looseness)

4. Wiper (Operation)

9. BODY

1. All Latches, Hinges & Locks/Central Locking (Operation/Lubrication)

2. All Chassis nuts & bolts (Tighten)

3. Seat belt (operation)

4. Seat latch, lever & knob (operation)

10. HEATING AND AIR CONDITIONING

1. Drive belt (Tension, Damage)

2. Check functioning of Recirculating flap

3. Check all Hose Joints

4. Tighten Compressor Mounting Bolts

5. Clean Condenser with low pressure water

11. ROAD TEST

1. Operation of Brakes, clutch Gear shifting and Speedometer

2. Body & Chassis noise

5. WHEEL

1. Tyres (Air pressure, Abnormal wear, Rotation)
2. Wheels (Inspect)
3. Front/Rear Wheel Bearings (Loose,Damage)

APPLICABLE FOR AUTOMATIC TRANSMISSION ONLY

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

3RD. FREE INSPECTION COUPON

(DEALER'S COPY) (10,000 KM or 12 MONTHS)

Please see overleaf for special instructions

Model Code *					
Chassis No. :					
Engine No. :					
Mileage					
Date of Invoice					
Date of Inspection					
Registration No.					
Service Dealer/Mass Code					

Mechanic's Signature

Service Manager's Signature

Customer's Signature

*MODEL CODES : ALTO-AOD308/308C/310/310C, CELERIO-AVH310/310C/208D, CIAZ-AVB414/413D, EECO-MGA412/412C, ERTIGA-AV414/413D, GRAND VITARA XL7-JA627, GYPSY KING-MG413W, NEW DZIRE-AZ412PN/413DN, NEW SWIFT-AZ412/413D, NEW WAGONR-A1J310/310C/310L, OMNI-MT308, RITZ-A5E412/413D

Stamp of Selling dealer (Code & Full Address)



Model Code *			
Chassis No. :			
Engine No. :			
Mileage			
Date of Invoice			
Date of Inspection			
Registration No.			
Service Dealer/Mass Code			

For Servicing Dealer/Mass

- 1.0 : Please fill up Model codes correctly.
- 2.0 : Please fill up Complete chasis No.
- 3.0 : Please fill up customer details i.e. Address and Telephone No. legibly and correctly for the latest owner.

For Selling Dealer

- 1.0 : Please send all Free Service Coupon to us once in a month after settlement of free service charges.



<i>Mechanic's Signature</i>
<i>Service Manager's Signature</i>
<i>Customer's Signature</i>

Service Division
Maruti Suzuki India Limited

FOREWORD

This manual is an essential part of your vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new MARUTI SUZUKI and review the manual from time to time. It contains important information on safety, operation and maintenance. You are invited to avail the three Free Inspection Services as described in the manual. Three free inspection coupons are attached to this manual. Please show this manual to your dealer while you take your MARUTI SUZUKI for any Service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "INSPECTION AND MAINTENANCE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources. To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

⚠ WARNING/⚠ CAUTION/NOTICE/ NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

⚠ WARNING

Indicates a potential hazard that could result in death or serious injury.

⚠ CAUTION


Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

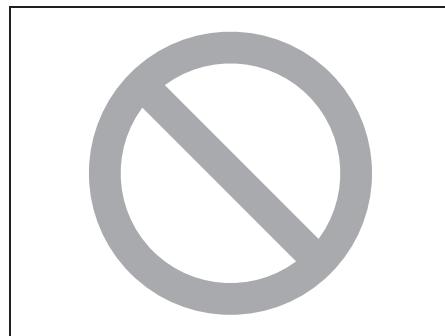

75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

MODIFICATION WARNING

⚠ WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your MARUTI SUZUKI dealer or qualified service technician for advice.

⚠ WARNING

Severe damage may be caused by the use of either poor quality fuel and/or lubricants not recommended by MARUTI SUZUKI.

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by an authorised Maruti Suzuki dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised dealer / service station.

(2) Term:

The term of the warranty shall be twenty-four (24) months or 40,000 kilometers (whichever occurs first) from the date of delivery to the first owner.

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. The owner is responsible for any repair or replacements which are not covered by this warranty.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The replacement of normal wear parts including without limitation, bulbs, tyres and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition or racing.
- (d) Any repairs or replacement required as a result of accidents or collision.
- (e) Any defects caused by misuse, negligence, abnormal use or insufficient care.
- (f) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories.
- (g) Any vehicle on which parts or accessories not approved by Maruti Suzuki have been used.
- (h) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
- (i) Any vehicle which has not received, during the warranty term, the service inspections prescribed in this Owner's Manual and Service Booklet.
- (j) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than an Maruti Suzuki authorised dealer/service station.
- (k) Any vehicle which has been used for purposes other than what it was designed for.
- (l) Any damage or deterioration caused by industrial pollution and bird droppings.

-
- (m) Insignificant defects which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
 - (n) Any natural wear and tear including without limitation, aging etc.
 - (o) Installation and usage of domestic LPG gas/LPG Cylinder.
 - (p) V-belts, hoses and gas leaks.
 - (q) Any vehicle retrofitted with LPG/CNG kits.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty on Maruti Suzuki's behalf.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to any authorised Maruti Suzuki dealer.

(7) Owner's Warranty Responsibilities:

It is responsibility of each owner to:

- Make certain that the PDI card was completed at the time of delivery of the vehicle;
- Have performed, at his own expenses, by an Maruti Suzuki authorised dealer/service station all the service inspections specified in the Maruti Suzuki "Owner's Manual and Service Booklet" and maintain adequate proof that such service inspections have been performed.

- Make certain that the Maruti Suzuki authorised dealer/service station performing the service inspection has certified the work on the "Maintenance Service Record" page in the "Owner's Manual and Service Booklet" and
- Present the Maruti Suzuki "Owner's Manual and Service Booklet" to the authorised Maruti Suzuki dealer whenever requesting service inspections or warranty service.

If the "Owner's Manual and Service Booklet" should be lost or destroyed the owner should consult the authorised Maruti Suzuki dealer from whom the vehicle was purchased for instructions concerning replacement of the "Owner's Manual and Service Booklet".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities (**New Delhi, Kolkata, Mumbai and Chennai**) with effect from July 1st, 2001.

Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of delivery to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

Conditions:

1. Under Emission Warranty, Warranty claims will be admitted for a *prima facie* examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
2. The warranty claims will only be accepted after examination carried out by Maruti Suzuki or it's dealer which leads to firm conclusions that the
 - a) Original settings have not been tampered in any case.
 - b) Part (as given in Annexure - A) has a manufacturing defect.
 - c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.
3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and it's dealer and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and it's dealer has the right to charge all, or part of the cost of such examination.
4. Under Emission Warranty, the parts (as given in Annexure - A) will be changed free of cost, but the consumables will be charged as per actual.
5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and it's dealer will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
6. Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
7. Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest Maruti Suzuki dealer workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki dealer.
8. Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
9. Emission Warranty will not be affected on the change of owner, provided all the documents are available.

-
- 10. All maintenance actions (as specified in the Owner's Manual and Service Booklet) need to be followed and recorded in the manual for emission warranty.
 - 11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The receipts (for the maintenance of the vehicle as per specification in Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

Conditions under which the Emission Warranty is not APPLICABLE

- 1. In the absence of valid PUC certificate.
- 2. Vehicle not serviced from Maruti Suzuki authorised workshop as per the schedule specified in this Owner's Manual and Service Booklet.
- 3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
- 4. Use of non MGP (Maruti Genuine Part).
- 5. Vehicle that has been tempered with.
- 6. Tampering with odometer so that the actual kilometer reading can not be determined.
- 7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).

Annexure - A


List of parts covered under Emission Warranty

- 1. Fuel Injection Assembly, Pressure Regulator, Throttle Body Assembly
- 2. Electronic Control Module (ECM).
- 3. Intake Manifold.
- 4. EGR valve.
- 5. Ignition Coil.
- 6. Canister Assembly.
- 7. Vapour Liquid Seperator.
- 8. Fuel Tank and Filler Cap.
- 9. PCV (Positive Crankcase Ventilation) Valve.
- 10. Oil Filler Cap.
- 11. Catalytic Convertor.
- 12. Exhaust Manifold.
- 13. All Fuel Injection System related SENSORS.
- 14. High Pressure Fuel Pump.
- 15. Glow Plug.
- 16. Glow Plug Controller.

TABLE OF CONTENTS

FUEL RECOMMENDATION	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROL AND EQUIPMENT	5
VEHICLE LOADING AND TOWING	6
INSPECTION AND MAINTENANCE	7
EMERGENCY SERVICE	8
APPEARANCE CARE	9
GENERAL INFORMATION	10
SPECIFICATIONS	11
SERVICE NETWORK	12

FUEL RECOMMENDATION

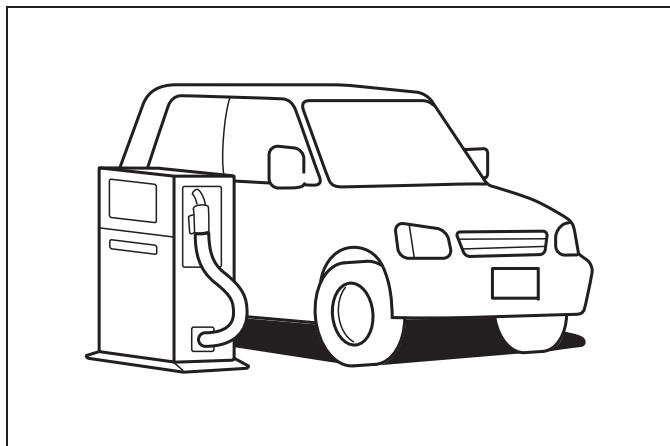

65D394

FUEL RECOMMENDATION

Fuel Recommendation 1-1

FUEL RECOMMENDATION

FUEL RECOMMENDATION

Petrol Engine

You must use unleaded petrol with an octane number (RON) of 91 or higher.

Petrol/Ethanol blends

Blends of unleaded petrol and ethanol (grain alcohol), also known as gasohol, are commercially available in some areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol. Make sure this petrol-ethanol blend has octane ratings no lower than those recommended for petrol.

Petrol/Methanol blends

Blends of unleaded Petrol and methanol (wood alcohol) are also commercially available in some areas. DO NOT USE fuels containing more than 5% methanol under any circumstances. Fuel system damage or vehicle performance problems resulting from the use of such fuels are not the responsibility of MARUTI SUZUKI and may not be covered under the New Vehicle Warranty. Fuels containing 5% or less methanol may be suitable for use in your vehicle if they contain cosolvents and corrosion inhibitors.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you are using a Petrol/alcohol blend, you should switch back to unleaded Petrol containing no alcohol.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fueled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non-automatic system, initial vent blowback occurs.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

Diesel Engine

The diesel fuel should be with Cetane Number (CN) higher than 51 and sulfur content less than 50 ppm (parts per million). MARUTI SUZUKI recommends to use the diesel fuel conformable to EN590. Do not use marine diesel fuel, heating oils and so forth.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non-automatic system, initial vent blowback occurs.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

BEFORE DRIVING


BEFORE DRIVING

Keys	2-1
Door Locks	2-2
Central Door Locking System (if equipped)	2-2
Keyless Push Start System Remote Controller/Keyless Entry System Transmitter.....	2-6
Security System (Vehicle With Keyless Entry System)	2-12
Security System (Vehicle With Keyless Push Start System)	2-20
Windows.....	2-22
Mirrors	2-23
Heated Rear Window Switch (if equipped)	2-24
Front Seats	2-25
Rear Seats	2-26
Folding Rear Seat (if equipped)	2-27
Seat Belts and Child Restraint Systems	2-28
Driver's Seat Belt Reminder (if equipped)	2-32
Supplemental Restraint System (air bags) (if equipped).....	2-38
Instrument Cluster.....	2-44
Warning and Indicator Lights	2-46
Speedometer	2-51
Tachometer (if equipped)	2-51
Fuel Gauge	2-51
Temperature Gauge	2-52
Brightness Control	2-52
Information Display	2-53
Lighting Control Lever	2-60
Headlight Leveling Switch	2-61
Turn Signal Control Lever	2-61
Hazard Warning Switch	2-62
Windshield Wiper and Washer Lever	2-62
Tilt Steering Lock Lever.....	2-64
Horn	2-64

BEFORE DRIVING

Keys

EXAMPLE

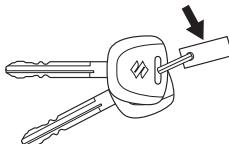

54G489

Your vehicle comes with a pair of keys. The key(s) may or may not be equipped with a transmitter depending on model variant. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key or keyless push start system remote controller which has an electronic identification

code programmed into it. The key or remote controller communicates the identification code to the vehicle when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON". If you need to make spare keys or remote controllers, see your MARUTI SUZUKI dealer. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.



80JM122

If the immobilizer/keyless push start system warning light blinks when the ignition switch is in the "ON" position or the ignition mode is "ON", the engine will not start.

For vehicles without keyless push start system

If this light blinks, turn the ignition switch to the "LOCK" position, then turn it back to the "ON" position.

If the light still blinks after the ignition switch is turned back to the "ON" position, there may be something wrong with your key or with the immobilizer system. Ask your MARUTI SUZUKI dealer to have the system inspected.

For vehicles with keyless push start system

If this light blinks, change the ignition mode to "LOCK" (OFF), then change back to "ON". Also refer to "If the master warning indicator light blinks and the engine cannot be started" in "Starting the Engine (Vehicle with Keyless Push Start System)" in the "OPERATING YOUR VEHICLE" section.

If the light still blinks after the ignition mode is changed back to "ON", there may be something wrong with your key or with the immobilizer system. Ask your MARUTI SUZUKI dealer to have the system inspected.

The immobilizer/keyless push start system warning light may also blink if the remote controller is not in the vehicle when you close the door or attempt to start the engine.

NOTE:

- If you lose your immobilizer ignition key or remote controller, see your MARUTI SUZUKI dealer as soon as possible to have the lost one deactivated, then have the new key or remote controller made by them.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch or the engine switch when using your Vehicle, or the engine may not be started because they may interfere with your Vehicle immobilizer system.
- If you attach any metal objects to the immobilizer key or remote controller, it may not start the engine.

BEFORE DRIVING

NOTICE

The immobilizer key and remote controller are sensitive electronic instruments. To avoid damaging them:


- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.

Ignition Key Reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

Door Locks

Side Door Locks

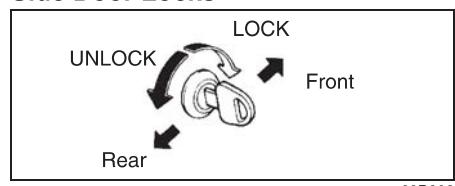


To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key towards the front of the vehicle, or


- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

EXAMPLE

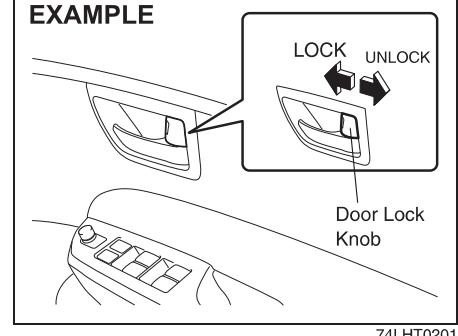

Central Door Locking System (if equipped)

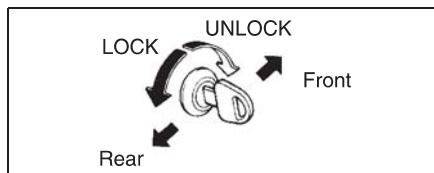


You can lock and unlock all 5 doors (Front, Rear and Back door) or 4 doors (Front and Rear only) (Depending upon the specification of the vehicle) simultaneously by using the key in the driver's door lock.

To lock all (4 or 5) doors simultaneously, insert the key in the driver's door lock and turn the top of the key anticlockwise.

To unlock all (4 or 5) doors simultaneously, insert the key in the driver's door lock and turn the top of the key clockwise.

BEFORE DRIVING

EXAMPLE

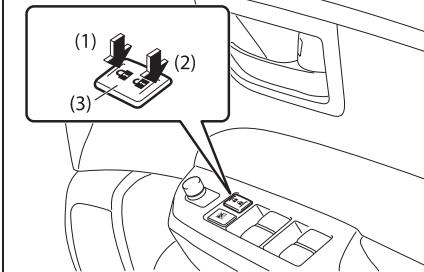

58MS003

- (1) LOCK
(2) UNLOCK

You can also lock or unlock all doors by depressing the front or rear of the switch,(3) respectively.

Note:

- Individual doors can also be UNLOCKED anytime by using their respective "Door Lock Knob" inside the vehicle.
- If child proof locks are in locked position, rear doors cannot be opened from inside.

NOTE:

- You can also lock or unlock all doors by operating the transmitter or remote controller. Refer to "Keyless Push Start System Remote Controller/Keyless Entry System Transmitter" in this section.
- If your vehicle is equipped with the keyless push start system, you can also lock or unlock all doors by pushing the request switch. Refer to "Keyless Push Start System Remote Controller/Keyless Entry System Transmitter" in this section.


NOTE:

- All doors are automatically unlocked when you change the ignition mode to "LOCK" (OFF) or turn the ignition switch to the "LOCK" position and pull out the key.
- All doors are automatically locked for safety when the vehicle speed reaches 15 km/h.

You can change the automatic locking or unlocking function mentioned above via the setting mode of the information display.

For details on how to use the information display, refer to "Information Display" in this section.

Child-Proof Locks (rear door)

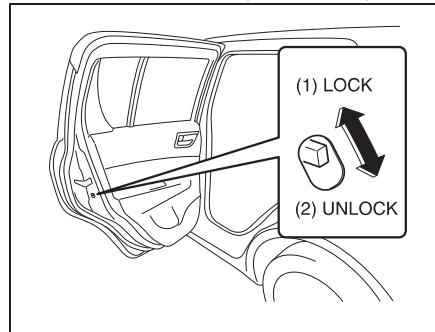

68LM203

As illustrated, a child-proof lock is provided for both rear doors. When the lock lever is in position (1), the child-proof lock is locked, and when in position (2), the child-proof lock is unlocked. When the childproof lock is in the locked position, the rear door cannot be opened from the inside even if the inside door lock is unlocked but can be opened from the outside.


WARNING

Be sure to place the child-proof lock in the locked position whenever children are seated in the rear.

BEFORE DRIVING

Tailgate

Type 1

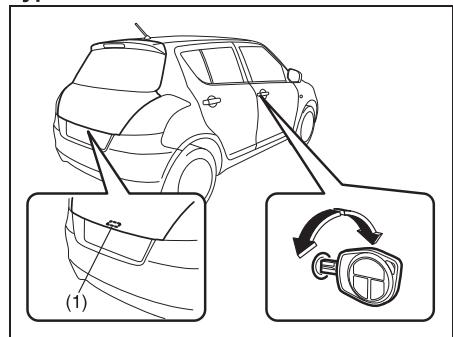

74LHT0203

(1) Tailgate unlatch switch

(Vehicle with keyless entry system)

You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, push and hold the tailgate unlatch switch (1) and lift the tailgate.

(Vehicle with keyless push start system)

You can lock or unlock the tailgate by pushing the request switch, when the keyless push start system remote controller is within the switch's operating range. For details refer to "Keyless Push Start System Remote Controller/Keyless Entry System Transmitter" in this section.

To open the tailgate push the tail gate unlatch switch (1) and lift the tail gate to open the trunk lid.

The tail gate unlatch switch (1) operates only to open the tail gate.


If you close the tail gate with the keyless push start system remote controller left in the trunk with all the doors locked, the tail gate will be automatically unlatched.

NOTE:

When the tailgate is closed incompletely, follow the procedure below:

- 1) Push the tailgate unlatch switch (1) and open the tailgate a little.
- 2) After a few seconds, close the tailgate.
- 3) Make sure that the tailgate is closed completely.

Type 2

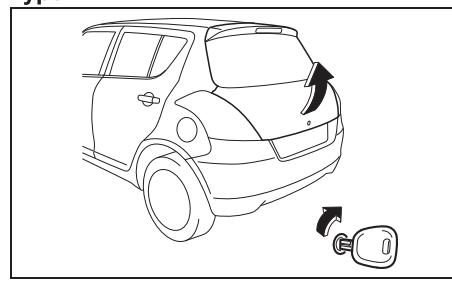

68LM245


To open the tailgate, insert the key and turn it clockwise to unlatch and lift the tailgate.

! WARNING

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

If you cannot unlatch the tailgate by pushing the unlatch switch (1) due to a discharged battery or malfunction, follow the procedures below to unlatch the tailgate from inside the vehicle.

- 1) Fold the rear seat forward for easier access. Refer to "Folding Rear Seat" section for details on how to fold the rear seat forward.

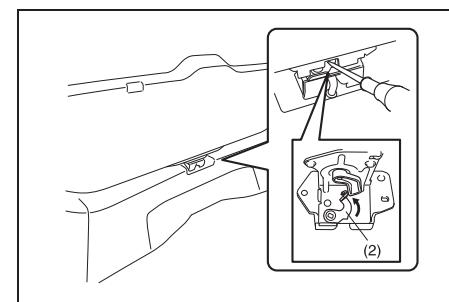

68LM246

BEFORE DRIVING

- 2) Push open the tailgate from inside by pushing up on the emergency lever (2) using a flat blade screwdriver or the jack handle. The tailgate will be latched again by closing the tailgate simply.

If the tailgate cannot be unlatched by pushing the unlatch switch (1), have the vehicle inspected by your MARUTI SUZUKI dealer.


⚠ CAUTION

- To avoid injury, do not use your finger to push the emergency lever.
- Make sure there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

Trunk Lid (if equipped)

Type 1

EXAMPLE

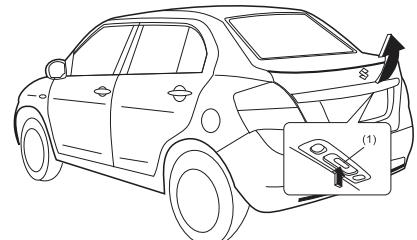

79MH0202


(Vehicle with keyless push start system)

Push the trunk lid unlatch switch (1) and lift the trunk lid to open the trunk lid. The trunk lid unlatch switch (1) operates when the keyless push start system remote controller is within the switch's operating range.

The trunk lid unlatch switch (1) operates only to open the trunk lid.

If you close the trunk lid with the keyless push start system remote controller left in the trunk with all the doors locked, the trunk will be automatically unlatched.

Type 2

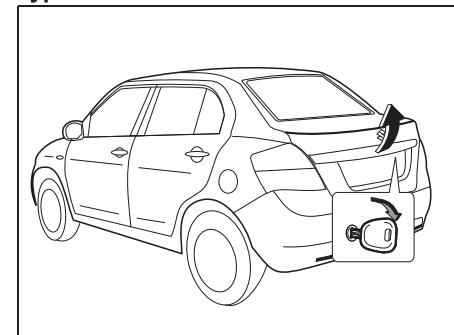


68LM246

If the vehicle is equipped with a trunk lid keylock. You can open the trunk lid by using the key in the trunk lid lock. To open the trunk lid, insert the key and turn it clockwise to unlatch and lift the trunk lid

⚠ WARNING

Always make sure that the trunk lid is fully opened before using the luggage compartment.

EXAMPLE

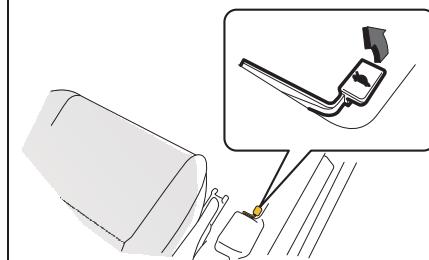

63J054

You can also unlatch the tailgate-trunklid by pulling the release lever (if equipped) located on the outboard side of the driver's seat.


⚠ WARNING

Always make sure that the trunk lid is fully opened before using the luggage compartment.

BEFORE DRIVING

Keyless Push Start System Remote Controller/Keyless Entry System Transmitter

EXAMPLE

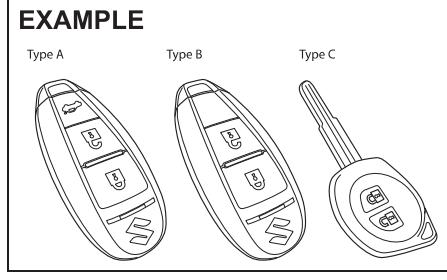

79MH0205

Your vehicle is equipped with either a keyless push start system remote controller (Type A/Type B) or a keyless entry system transmitter (Type C). The remote controller has a keyless entry system and a keyless push start system. The transmitter has only a keyless entry system. For details, refer to the following explanations.

WARNING

Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.

- Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.
- If radio wave interference is a concern, have the function of the antenna(s) disabled by your MARUTI SUZUKI dealer.


Keyless Push Start System Remote Controller (Type A/Type B)

The remote controller enables the following operations:

- You can lock or unlock the doors by operating the LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch. For details, refer to the explanation in this section.
- You can start the engine without using an ignition key. For details, refer to

"Engine Switch" in the "OPERATING YOUR VEHICLE" section.

EXAMPLE

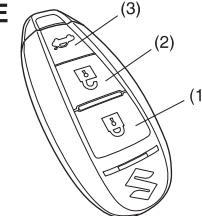

79MH0206

- (1) "LOCK" button
- (2) "UNLOCK" button
- (3) "TRUNK LID/TAILGATE UNLOCK" button (If equipped)

You can lock or unlock all doors simultaneously by operating the remote controller near the vehicle.

Central door locking system

- To lock all doors, push the "LOCK" button (1) once.
- To unlock all door, push the "UNLOCK" button (2).

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for

BEFORE DRIVING

about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately. Be sure the doors are locked after you operate the "LOCK" button (1). If no door is opened within about 30 seconds after the "UNLOCK" button (2) is operated, the doors will automatically lock again.

Car locator function

Car locator function helps in locating the vehicle. Push both of the "LOCK" button (1) and "UNLOCK" button (2) for more than 3 seconds.

The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time.

To cancel the car locator function, press any button (LOCK or UNLOCK). You can also press the engine switch to change the ignition mode to "ON" to cancel the car locator function.

NOTE:

The car locator function will not activate when the ignition mode is "ACC" or "ON" or pre warning / full blast warning by shock sensor or alarm is in activated condition.

- If you lock the doors using the remote controller when the tail gate or engine hood are open, the siren will sound 3 times to remind you.*
- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the*

remote controller, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.

- Once you push both of the "LOCK" button (1) and "UNLOCK" button (2), then you push one of the buttons within 5 seconds, the siren will not sound. However, If you push one of the buttons twice within 5 seconds, or push one of the buttons 5 seconds later, the siren will sound.*
- You can set whether the siren sounds when locking or unlocking the door(s) via the setting mode of the information display. For details on how to use the information display, refer to "Information Display" in this section.*


NOTE:

- The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.*
- The door locks cannot be operated with the remote controller if the ignition mode is other than the "LOCK" (OFF).*
- If any door is open, you cannot lock the door by operating the remote controller, however unlock the door.*
- If you lose one of the remote controllers, ask your MARUTI SUZUKI dealer as soon as possible for a replacement. Be sure to have your dealer program the new remote*

controller code in your vehicle's memory so that the old code is erased.


Keyless unlocking/locking using the request switches

Swift

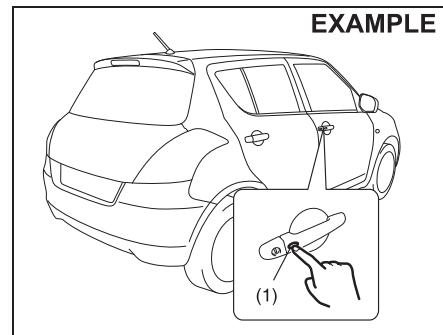

79MH0207

Swift Dzire

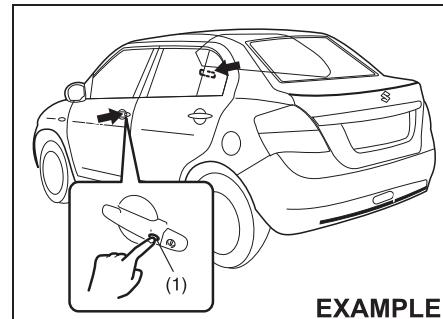

74LHT0999

2-7

BEFORE DRIVING

When the remote controller is within the operating range described in this section, you can lock or unlock the doors by pushing the request switch (1) on the driver's door handle, front passenger's door handle or tailgate.

To lock all doors when all doors are unlocked:

- push one of the request switches once.

The turn signal lights will flash once and the exterior siren will sound once when the doors are locked.

To unlock doors:

- Push one of the request switches to unlock all door.

When the doors are unlocked:


- The turn signal lights will flash twice and the exterior siren will sound twice.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the request switch to lock the doors.

NOTE:

- *The door locks cannot be operated by the request switch under the following conditions:*
 - If any door is open or is not completely closed.
 - If the ignition mode is other than "LOCK" (OFF).
- *If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.*


Swift

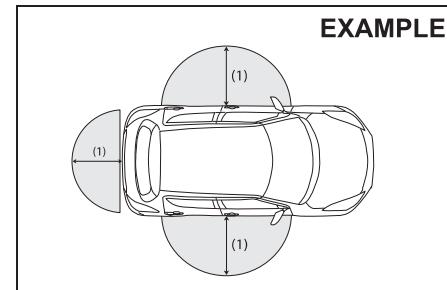

EXAMPLE

79MH0208

Swift Dzire

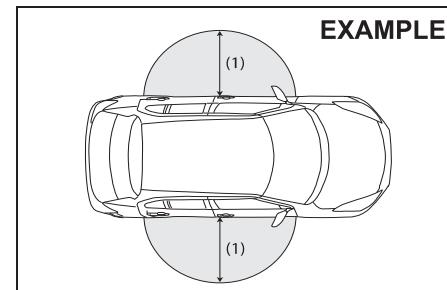

EXAMPLE

74LHT2002

(1) 80 cm (2 1/2 feet)

When the remote controller is within approximately 80 cm (2 1/2 feet) from a front door handle, you can lock or unlock the doors by pushing the request switch.

BEFORE DRIVING

NOTE:

- If the remote controller is outside the request switch operating range described above, you will not be able to operate the request switch.
- If the battery of the remote controller runs down or there are strong radio waves or noise, the request switch operating range may be reduced or the remote controller may be inoperative.
- If the remote controller is too close to the door glass, the request switches may not operate.
- If a spare remote controller is in the vehicle, the request switches may not operate normally.
- The remote controller will only operate a request switch if it is within the switch's operating range. For example, if the remote controller is within the operating range of the driver's door request switch but not the front passenger's door request switch, the driver's door switch can be operated but the front passenger's door switch cannot be operated.
- Avoid operations of switch with sharp objects or long nails.

NOTICE

The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the remote controller away from magnetic objects such as a television.

NOTE:

The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the following:

- When there are strong signals coming from a television, power station or a cellular phone.
- When the remote controller is in contact with or covered by a metal object.
- When a radio wave type remote keyless entry is used nearby.
- When the remote controller is placed near an electronic device such as personal computer.

Some additional precautions you should take and information you should be aware of are:

- Make sure the key is stowed in the remote controller. If the remote controller becomes unreliable, you will not be able to lock or unlock the doors.

- Be sure that the driver always carries the remote controller.
- If you lose one of the remote controllers, ask your MARUTI SUZUKI dealer as soon as possible for a replacement. Be sure to have your dealer program the new remote controller code in your vehicle's memory so that the old code is erased.
- You can use up to four remote controllers and the keys for your vehicle. Ask your MARUTI SUZUKI dealer for details.
- The battery life of the remote controller is about two years, but it can vary depending on usage conditions.

EXAMPLE




57L21016

To stow the key into the remote controller, push the key in the remote controller until you hear a click.

BEFORE DRIVING

EXAMPLE

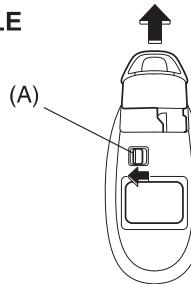

68LM247

To remove the key from the remote controller, push the button (A) in the direction of the arrow and pull the key out from the remote controller.

Request switch warning buzzer


This exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch is not working:

- The request switch is pressed after all doors are closed with the ignition mode changed to "ACC" or "ON" by pressing the engine switch.
- The request switch is pressed in any of the following conditions after changing the ignition mode to "LOCK" (OFF) by pressing the engine switch.
 - The remote controller is left inside the vehicle.
 - Any door is open.

Press the request switch again after doing the following:

With the ignition mode changed to "LOCK" (OFF) by pressing the engine switch, bring out the remote controller if it is inside the vehicle and check that all doors are completely closed.

Reminder function

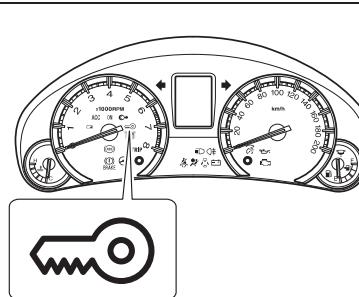

EXAMPLE

79MH0209

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:

When one or more doors are opened and all of the doors are later closed with the ignition mode is other than "LOCK".

The indicator light will turn off within several seconds after the remote controller is returned to an area of the vehicle other than the luggage compartment.

If the remote controller is left in the vehicle and you lock the driver's door or front passenger's door or tailgate as described below, the door will be automatically unlocked.

- If you open the driver's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the driver's door will be automatically unlocked.
- If you open the front passenger's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the front passenger's door will be automatically unlocked.

If you close the trunk lid/tailgate with the remote controller left in the trunk with all the doors locked, the trunk/tailgate will be automatically unlatched.

NOTE:

- The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor etc.
- Be sure that the driver always carries the remote controller.
- Do not leave the remote controller in the vehicle when leaving the vehicle.


BEFORE DRIVING

Replacement of the battery

If the remote controller becomes unreliable, replace the battery.

To replace the battery of the remote controller:


EXAMPLE

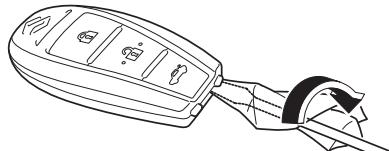

57L20201

- 1) Pull the key out from the remote controller.
- 2) Insert a flat blade screwdriver covered with a soft cloth in the slot of the remote controller and pry it open.

EXAMPLE

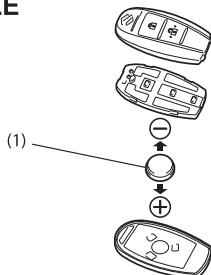

(1) Lithium disc type battery:
CR2032 or equivalent

- 3) Replace the battery (1) so its + terminal faces the bottom of the case as shown in the illustration.
- 4) Close the remote controller firmly.
- 5) Make sure the door locks can be operated with the remote controller.
- 6) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

! WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE


The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.

NOTE:

Used batteries must be disposed properly according to applicable rules or regulations and must not be disposed with ordinary household trash.

Keyless Entry System Transmitter (Type C)

EXAMPLE

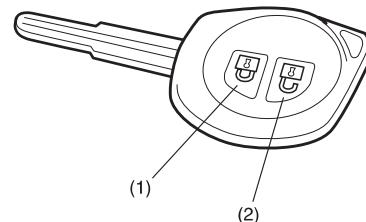

79MH0237

- (1) "LOCK" button
(2) "UNLOCK" button

You can lock or unlock all doors simultaneously by operating the transmitter near the vehicle.

Central door locking system

- To lock all doors, push the "LOCK" button (1) once.
- To unlock all door, push the "UNLOCK" button (2) once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice.

BEFORE DRIVING

- If the interior light switch is in the "DOOR" position, the interior light will turn on for about 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the "LOCK" button (1). If no door is opened within about 30 seconds after the "UNLOCK" button (2) is operated, the doors will automatically lock again.

NOTE:

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- If any door is open, you cannot lock the door by operating the transmitter, however unlock the door.
- If you lose one of the transmitters, ask your MARUTI SUZUKI dealer as soon as possible for a replacement. Be sure to have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Security System (Vehicle with Keyless entry system)


ALARM MODE

The Alarm mode is designed to protect your vehicle from unauthorised entry. It operates in three stage:

First: Arm Stage

Second: Trigger Stage

Third: Disarm Stage

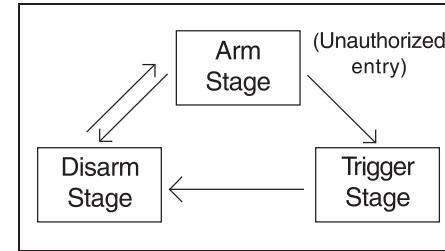

68LM2

Arm Stage

In Arm Stage, your vehicle is monitored for any unauthorized entry. In order to arm, press the key LOCK button once.


As response to locking/arming:

- Doors will get locked & vehicle will get armed.
- Visible theft warning LED on security switch will flash slowly to indicate arming.

BEFORE DRIVING

NOTE:


- 1) Three siren chirps and one light flash of all indicator lights will indicate that engine hood is open. However, locking of all doors take place but security system will not be armed.

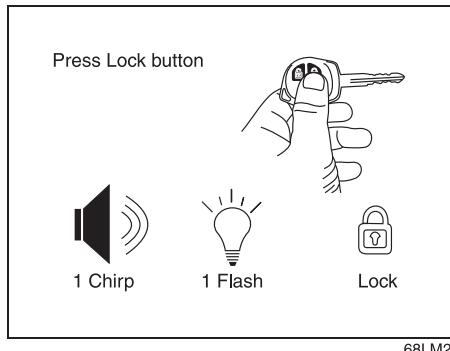

- 2) Be sure to close all doors (including the engine hood and trunk/tailgate) and windows before locking/arming the vehicle.
- 3) System will not Lock/Arm in following conditions.
 - a) If any of door is open.
 - b) If key is in key cylinder.

Trigger Stage

In the event of any unauthorized entry (without unlocking/disarming) into the vehicle, the alarm triggers and all indicator lights flash. The triggering of the alarm is in two stages. First acting as a warning to the intruder and then alarm drawing the surrounding attention. However, alarm will be activated without any warning if intrusion happens through engine hood.

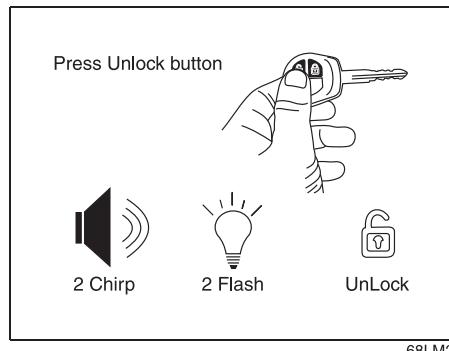

Disarm Stage

System should be brought in Disarm Mode while you are entering the vehicle. In order to disarm: Press the key UNLOCK button once.

As response to unlocking/disarming:

- 1) Doors will unlock and vehicle will disarm.
- 2) Visible theft warning LED on security switch will flash faster than in arm stage indicating Auto rearm (described in auto rearm section).

Trigger Type	Alarm Cycle
Door Trigger (By Driver Door, Passenger Door, Engine Hood & Back Door)	1 Cycle of approxi- mate 27.5 seconds
Ignition Trigger	1 Cycle of approxi- mate 27.5 seconds
Impact Trigger (Built in sensor Trigger)	1 Cycle of max 4.5 seconds

BEFORE DRIVING

GENERAL FEATURES

Illuminated Entry

When vehicle is unlocked, the room lamp will turn ON to facilitate illuminated entry into the vehicle. If no door is opened in about 15 seconds of above operation, room lamp will fade out.

If any door is opened after 15 seconds, the room lamp turns ON again and after 15 seconds of closing all doors room lamp will fade out.

If within 15 seconds after closing all the doors the driver inserts the key into the key cylinder, then the room lamp will fade out.

Illuminated Exit

When key is removed from the key cylinder, the room lamp will turn ON to facilitate illuminated exit. If no door is opened in about 15 seconds of key removal from key cylinder, the room lamp will fade out.

When door is opened to exit the vehicle, the room lamp will turn ON again (if it has turned OFF after 15 seconds of key removal from key cylinder) and will turn OFF after 15 seconds of closing all the doors.

If within 15 seconds of all doors closure, vehicle is locked by pressing the LOCK button, the room lamp will fade out.

NOTE: Room lamp will fade out gradually approximately in 2 seconds.

Mute Lock/Unlock

To Lock/Unlock the vehicle without siren chirps use this function.

- Press and release the Key LOCK & UNLOCK buttons simultaneously.
- Press and release Key LOCK or UNLOCK button for desired function.

Example: To Lock the system without the Siren chirp sound, press and release the Key LOCK & UNLOCK button simultaneously, then press and release the Key LOCK button once.


Auto Rearm

In case of accidental Unlock/Disarm of vehicle by Key, vehicle will automatically Lock & Arm within 30 sec. without any indication. Auto rearm cycle gets canceled if user does any of the following operation within 30sec :

- Open any door (including back door).
- Open Engine Hood.
- Key On.

Radio Frequency Lock Out

Key Lock/Unlock/Car locator function will cease to function when Key is inside Key cylinder.

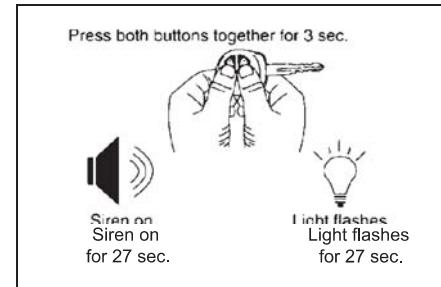

68LM2

Car locator function

Car locator function helps in locating the vehicle.

Push both of the "LOCK" button (1) and "UNLOCK" button (2) for more than 3 seconds.

The turn signal lights will blink for about 27 seconds. Also, the siren will sound for about 27 seconds at the same time. Press and release the Key LOCK & UNLOCK button simultaneously to cancel the car locator function.

NOTE:

The car locator function will not activate when the key is in the ignition switch or pre warning / full blast warning by shock sensor or alarm is in activated condition.

BEFORE DRIVING

Flashing LED Status

The flashing LED always reflects the status of the system as following.

SYSTEM CONDITION	LED STATUS
Disarmed condition	LED does not glow
Armed condition	Slow Flashes of LED

Intrusion Alert

The system gives a report if it has been intruded in your absence. Four chirps are given when UNLOCK button is pressed after an intrusion.

Diagnostic report	Visual-LED	Sound
Built in Shock Sensor Trigger (full blast warning)	2 Flashes	Four Chirps
Door/Trunk/Tailgate/Engine Hood Intrusion	3 Flashes	Four Chirps
Ignition	5 Flashes	Four Chirps

PROGRAMMABLE FEATURES

System has some features which can be programmed by user according to their choice.

Drive Lock Mode

Drive lock mode can be programmed by SPEED LOCK or can be turned OFF. If drive lock mode is programmed to SPEED LOCK, all the vehicle doors will lock when vehicle attains the speed of 15 Km/hr. If Drive Lock is programmed to OFF, no door will lock by speed.

NOTE:

In case of SPEED LOCK Mode, if any door is open while driving, it will get cancelled.

Once vehicle Speed crosses 15 Km/hr, the LED on Security Switch will blink for 5 seconds as indication of door open.

Drive Unlock Mode

Drive unlock can be programmed to KEY or can be turned OFF. When programmed to KEY, turning Ignition ON to OFF then removing the key from the key cylinder will unlock all the doors. If drive unlock is programmed to OFF then no door will unlock by removing key from key cylinder.

Siren Chirp ON/OFF feature

Siren Chirps can be programmed to ON or OFF. When siren chirp feature disabled, siren will not chirp after Arm/Disarm by LOCK/UNLOCK button.

Shock Sensor feature

This is a very important feature of security system. It enables protection of your vehicle against any major impact. If anybody tries to intrude into the vehicle, the warning may trigger. Triggering of the warning is of two types: pre-warning and full blast warning. The sensitivity of shock sensor can be adjusted as desired by the user.

PROCEDURE TO PROGRAM FEATURE

No.	Feature	1 Chirp	2 Chirps	Default
1.	Drive Lock Mode	Speed	OFF	Speed
2.	Drive Unlock Mode	Key	OFF	Key
3.	Siren chirp ON/OFF	ON	OFF	ON
4.	Shock Sensor ON/OFF	ON	OFF	ON

Programming Drive Lock Mode

- Open the Driver Door of your vehicle.
- With your vehicle key in the Key cylinder, turn Ignition ON and then switch it OFF.
- Press and release the Security switch One time.
- Press and hold the Security switch.
- One chirp sound confirms entry into Drive Lock programming mode.
- Press the Key “Lock” button (while holding the Security switch), a single chirp

BEFORE DRIVING

- sound confirms mode changed to speed lock.
- g) Two-Siren chirp sound confirms Drive lock mode OFF.
 - h) Release the Security switch.
 - i) Turn the Ignition ON.
- Programming Drive Unlock Mode**
- a) Open the Driver Door of your vehicle.
 - b) With your vehicle key in the Key cylinder, turn Ignition ON and then switch it OFF.
 - c) Press and release the Security switch two times.
 - d) Press and hold the Security switch.
 - e) Two-chirp sound confirms entry into Drive unlock programming mode.
 - f) Press the Key Lock button (while holding the Security switch), a single chirp sound confirms the mode changed to key Unlock.
 - g) Two-siren chirp sound confirms the mode changed to Drive Unlock mode OFF.
 - h) Release the Security switch.
 - i) Turn the Ignition ON.

- Programming Siren Chirp ON/OFF**
- a) Open the Driver Door of your vehicle.
 - b) With your vehicle key in the Key cylinder, turn Ignition ON and then switch it OFF.
 - c) Press and release the Security switch Three times.
 - d) Press and hold the Security switch.
 - e) Three-chirp sound confirms entry into Siren Chirp ON/OFF programming mode.
 - f) Press the Key Lock button (while holding the Security switch), a single chirp sound confirms the mode changed to Siren Chirp ON.
 - g) Two-Siren chirp sound confirms the mode changed to Siren Chirp OFF.
 - h) Release the Security switch.
 - i) Turn the Ignition ON.
- Programming Shock Sensor ON/OFF**
- a) Open the Driver Door of your vehicle.
 - b) With your vehicle key in the Key cylinder, turn Ignition ON and then switch it OFF.
 - c) Press and release the Security switch Four times.
 - d) Press and hold the Security switch.
 - e) Four-chirp sound confirms entry into Shock Sensor ON/OFF programming mode.
 - f) Press the Key Lock button (while holding the Security switch), a single chirp

- sound confirms the mode changed to shock sensor ON.
- g) Two-Siren chirp sound confirms the mode changed to shock sensor OFF.
 - h) Release the Security switch.
 - i) Turn the Ignition ON.
- Shock Sensor Sensitivity Adjustment via Key**
- Full Blast adjustment**
- Full Blast can be adjusted in 16 levels as mentioned below.
- a) Press Unlock button on Key to Unlock/ Disarm the System.
 - b) Press Lock button (within 2 seconds of key UNLOCK) on Key to Lock/Arm the System.
 - c) Within 2 sec press Lock & Unlock button simultaneously for at least 3 sec. Siren will give Long chirp to confirm entry into sensitivity adjustment mode
 - i) Press Lock button to adjust the sensitivity one step lower. Siren will give one chirp every time lock button is pressed till at level 1 where it will give a long chirp. When adjusted to level 1, Full Blast will turn OFF
 - ii) Press unlock button to adjust the sensitivity one step higher. Siren will give two chirp every time unlock button is pressed till at level 16 where it will give a long chirp.

BEFORE DRIVING

Pre-warn Adjustment

Pre-warn can be adjusted in 16 levels as mentioned below:

- a) Press Lock button on Key to Lock/Arm the System
- b) Press Unlock button (within 2 seconds of key LOCK) on Key to Unlock/Disarm the System
- c) Within 2 sec press Lock & Unlock button simultaneously for at least 3 sec. Siren will give Long chirp to confirm entry into Sensitivity Adjustment Mode.
 - i) Press Lock button to adjust the sensitivity one step lower. Siren will give one chirp every time lock button is pressed till at level 1 where it will give a long chirp. When adjusted to level 1, pre-warn will turn OFF.
 - ii) Press Unlock button to adjust the sensitivity one step higher. Siren will give two Chirp every time Unlock button is pressed till at level 16 where it will give a long chirp.

Program Customer Pin-code (Personalized Pin-code)

If transmitter is not working properly, then it is possible to disarm the system by Personalized pin code.

The Personalized 4-digit number can be changed from the factory default to ensure Personalized Security.

Pin code entry

- a) Disarm the system.
- b) Open the Driver Door.
- c) Turn Ignition ON then OFF.
- d) Within 5 seconds press and release Valet switch 5 times. A short chirp followed by long chirps confirms entry into Pin Code programming mode.
- e) Press Lock button on Key, after a single chirp enter the First digit (within 1-9) by pressing Valet switch (for e.g. to enter 2 press and release Valet switch two times).
- f) Press Lock button on Key, after two chirp enter the Second digit (within 1-9) by pressing Valet switch.
- g) Press Lock button on Key, after 3-chirps enter the Third digit (within 1-9) by pressing Valet switch.
- h) Press Lock button on Key, after 4-chirps enter the Fourth digit (within 1-9) by pressing Valet switch.

Emergency Disarm by Personalized pin code

The Personalized 4- Digit Pin Code acts as a secret Key, to Emergency Disarm the vehicle.

- a) Turn the Ignition ON, OFF and then ON.
- b) Enter the First digit (for e. g. to enter 2 press and release Valet switch twice)
- c) Turn the Ignition OFF then ON.
- d) Enter the Second digit.

- e) Turn the Ignition OFF and then ON.
- f) Enter the Third Digit.
- g) Turn the Ignition OFF and then ON
- h) Enter the Last Digit.
- i) Turn the Ignition OFF and then ON.
- j) The vehicle will get disarmed.


NOTE:

The default pin will be provided by the dealer at the time of delivery. It is recommended to personalize the pin for increased security. The pin must be remembered as it is not possible to retrieve a lost pin.

BEFORE DRIVING

Transmitter battery


Replacement of the Battery

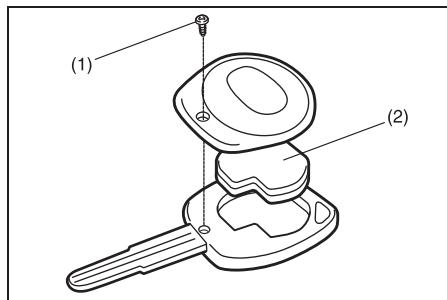

If the transmitter battery gets discharged, replace the battery with a new one.

To replace the battery of the transmitter:

- 1) Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).
- 3) Put the edge of a flat blade screw driver in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) (Lithium disc type CR1620) so that its +ve terminal faces the bottom cover of the transmitter (5).

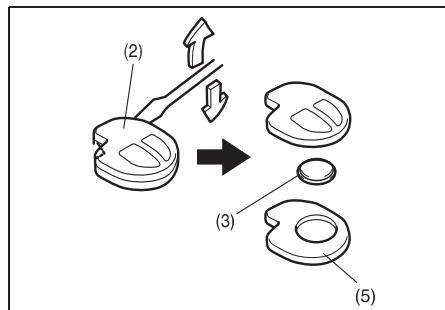

- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- 7) Make sure the door locks can be operated with the transmitter.

NOTE:

Normal battery life is approximately 2 years, but varies depending on usage. It is advisable to get battery replaced from MARUTI SUZUKI Authorized workshop.

⚠ CAUTION


Do not remove the screw from the key Unnecessarily as it damages the screw head. Kindly replace the screw once the transmitter battery is changed.

⚠ CAUTION

Dispose off the used battery properly according to applicable rules or regulations. Do not dispose off lithium batteries with ordinary household trash.

⚠ WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

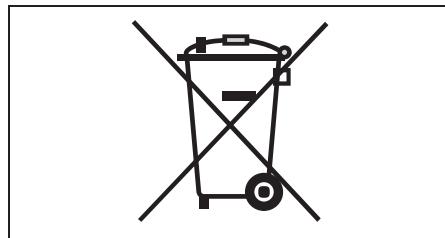

BEFORE DRIVING

TROUBLESHOOTING

SYMPTOMS	PROBABLE CAUSES	REMEDIES
Transmitter function (Unlock/Lock/car locator function) not working	<ol style="list-style-type: none"> 1. Battery of the transmitter is weak. 2. Transmitter is exposed to water or it is wet. 3. D/L or Dome fuse for controller is blown in the vehicle. 4. In case if any door is open or door sensor is shorted with the body ground, remote will not activate the central locking/ alarm system. 	<ol style="list-style-type: none"> 1. Check the battery. 2. Dry the transmitter and check it. 3. Check and replace the D/L or Dome fuse. 4. Check if all doors are properly closed and door switch functioning is O.K.
Operation distance of the transmitter is less than 20m but still transmitter (Unlock/Lock/car locator) is not working	<ol style="list-style-type: none"> 1. Battery of the transmitter is weak. 2. Strong RF interference. (e.g. Radio Towers, High Voltage Transmission line near by) 	<ol style="list-style-type: none"> 1. Check the battery. 2. Drive the vehicle away from the particular spot and re-test the control distance.
It is difficult to activate or deactivate the system in certain area using the transmitter.	<ol style="list-style-type: none"> 1. The strong interference caused by excessive RF activity in a particular area 	<ol style="list-style-type: none"> 1. The interference is temporary and only while the vehicle is in that area.
Alarm is not triggered even if any door(s)/ engine hood/trunk/tailgate opened in arm stage.	<ol style="list-style-type: none"> 1. The contact point of the door(s), front bonnet or rear boot switch is faulty. 2. The connection of the door(s), front bonnet or rear boot switch is loose. 	<ol style="list-style-type: none"> 1. Replace the defective Switch. 2. Make proper connection.
Siren does not sound when alarm is triggered.	<ol style="list-style-type: none"> 1. The connection of the siren wire is loose. 2. Siren is faulty. 	<ol style="list-style-type: none"> 1. Make proper connection. 2. Change the siren.

BEFORE DRIVING

Security System (Vehicle with Keyless push start system)

The security system is armed after you lock all doors (including engine hood and trunk/tailgate) by using the keyless push start system remote controller or request switch.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless push start system remote controller or open the engine hood, will cause the alarm to be triggered.

* These means include the following:

- The key
- The lock knob on a door
- The central door locking switch
- The tailgate unlatch button (if equipped)
- The trunk lid unlatch button (if equipped)

Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the warning will be triggered in case of any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask your MARUTI SUZUKI dealer or use the setting mode of the information display.

NOTE:

- The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Information Display" in this section.
- Your dealer may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.


NOTE:

- The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into the vehicle.
- Always use the keyless push start system remote controller to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.
- If a person who does not know the security system is going to drive the vehicle, we recommend you explain the system and its operation to the person. Mistakenly triggering the alarm may cause a nuisance to others.
- Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or things of value in the vehicle.

How to arm the security system

Lock all doors (including engine hood and trunk/tailgate) using the keyless push start system remote controller or request switch. When the system is armed, the indicator continues to blink at intervals of approximately 2 seconds.

EXAMPLE

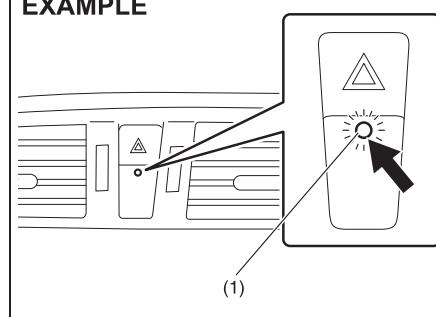

79MH0210

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, trunk/tailgate, engine hood, or the warning may be triggered if anyone swings the vehicle (if the shock sensor is in the enabled state).
- The security system is not armed when all doors are locked using the key from outside, using the door lock knobs or the central door locking switch from inside.

BEFORE DRIVING

- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless push start system remote controller, the doors are automatically locked again. When the doors are locked, the security system will be armed.
- If the security system indicator (1) blinks when the ignition mode is "ON", there may be something wrong with the security system. Ask your MARUTI SUZUKI dealer to inspect the system.

How to disarm the security system

Simply unlock the doors using the keyless push start system remote controller. The security system indicator will go out, indicating that the security system is disarmed.

How to stop the alarm

Should the alarm be triggered accidentally, unlock the doors using the keyless push start system remote controller or request switch, or in case of emergency, press the engine switch to change the ignition mode to "ON".

NOTE:

- Even after the alarm has stopped, if you lock the doors using the keyless push start system remote controller, the security system will be rearmed.
- If you disconnect the battery while the security system is in the armed condition or the alarm is actually in operation, the

alarm will be re-triggered when the battery is then reconnected.

- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, trunk/tailgate or engine hood is opened, or the warning may be triggered if the vehicle feels a shock (if the shock sensor is in the enabled state), without disarming the security system.

- If the shock sensor is in the enabled state and the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, siren will sound for about 4.5 seconds (full blast warning). The security system indicator continues to blink during this time.

NOTE:

If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.

Checking whether the alarm has been triggered during parking

If the alarm was triggered and you then turn the ignition mode is "ON", the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether the vehicle has been broken into while you were away from it.

Security system indication

 
- If any of the doors or trunk/tailgate are opened without unlocking by the keyless push start system remote controller, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.

BEFORE DRIVING

Windows

Manual Window Control (if equipped)

EXAMPLE



60G010


Raise or lower the door windows by turning the handle located on the door panel.

Electric Window Controls (if equipped)

The electric windows can only be operated when the ignition switch is in the "ON" position.

Driver's door

EXAMPLE

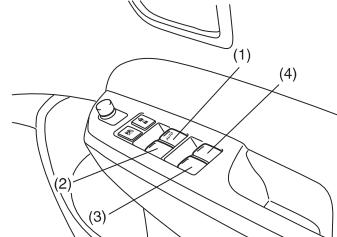


74LHT0204

The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear left and right passenger windows, respectively.

Passenger's door (if equipped)


EXAMPLE

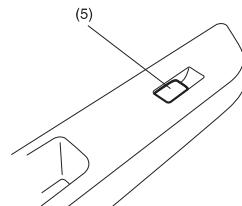

74LHT0205

The passenger's door has a switch (5) to operate the passenger's window.

CLOSE

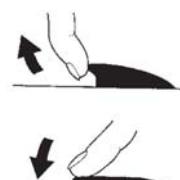

OPEN




81A009

To open a window, push the top part of the switch and to close the window lift up the top part of the switch.

The driver's window has an "auto-down" feature for added convenience (at toll booths or drive-through restaurants, for example). This means you can open the window without holding the window switch in the "Down" position. Press the driver's window switch completely down and release it. To stop the window before it reaches the bottom, pull the switch up briefly.

Lock switch

EXAMPLE

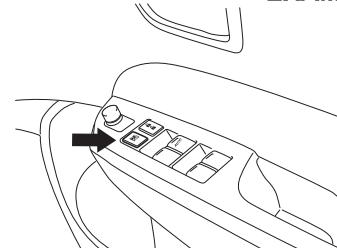

74LHT0206

The driver's door also has a lock switch for the passenger's windows. When you push in the lock switch, the passenger's windows cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing again.

BEFORE DRIVING

⚠ WARNING

- You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, be sure no part of the occupant's body such as hands or head is in the path of the electric windows when closing them.
- Always remove the ignition key when leaving the vehicle even if only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the electric window switches and get trapped by the window.

NOTE:


If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Mirrors

Inside Rearview Mirror


You can adjust the inside rearview mirror by hand so as to see the rear of your vehicle in the mirror. To adjust the mirror, move the mirror up, down or side ways by hand to obtain the best view.

Type1

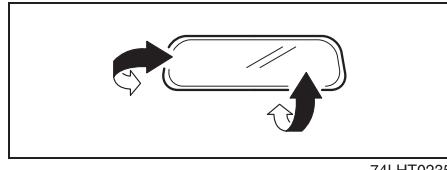


74LHT0235

Type2

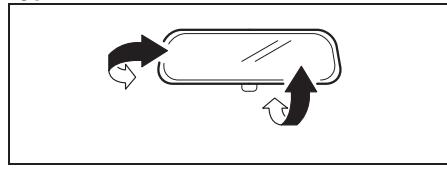

68LMT0205

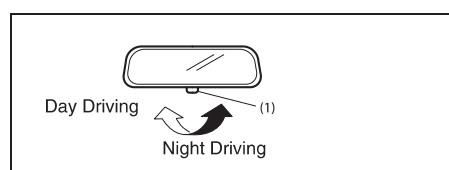

68LMT0206

To adjust the mirror, set the selector tab (1) to the day position, then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

⚠ WARNING

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

Outside Rearview Mirrors


Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

⚠ WARNING

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

BEFORE DRIVING


Type1

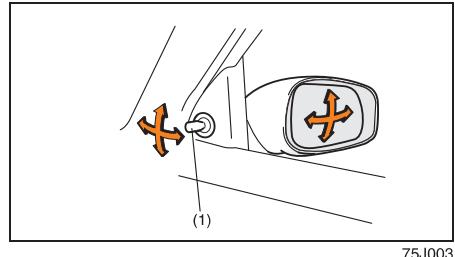

75J003

You can adjust the outside rearview mirrors by hand with the knob (1) located on the driver's or front passenger's door panel.

Type2

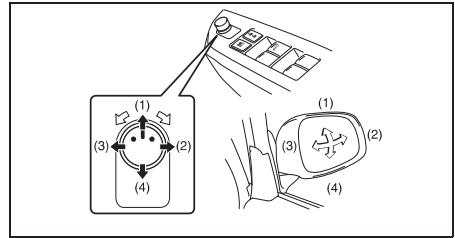


74LHT0207

The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in the "ACC" or "ON" position, or the ignition mode is "ACC" or "ON". To adjust the mirrors:

- 1) Move the selector switch to the left or right to select the mirror you wish to adjust.
- 2) Press the outer part of the switch that corresponds to the direction in which you wish to move the mirror.
- 3) Return the selector switch to the center position to help prevent unintended adjustment.

Outside Rearview Mirrors Folding Switch (if equipped)

EXAMPLE

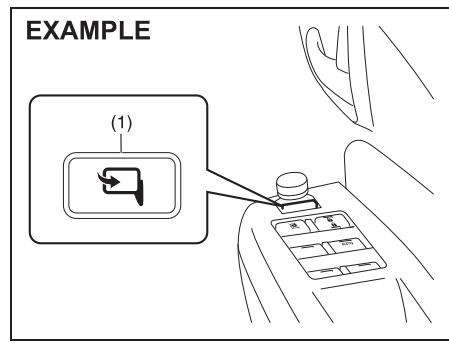

79MH0218


You can fold the mirrors when you park the vehicle in a narrow space. When the ignition switch is in the "ACC" or "ON" position, or the ignition mode is "ACC" or "ON", push the folding switch (1) to fold and unfold the mirrors. Make sure the mirrors are completely unfolded before you start driving.

CAUTION

Moving mirrors can pinch and injure a hand. Do not allow any one's hand to get near the mirrors when folding and unfolding the mirrors.

Heated Rear Window Switch (if equipped)

EXAMPLE

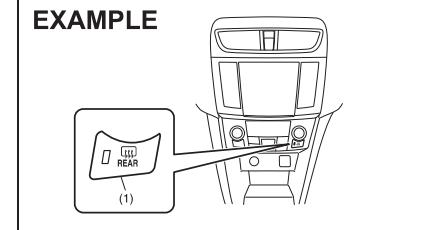

74LHT0234

When the rear window is misted, push this switch (1) to clear the window. An indicator light will be lit when the defogger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.

NOTICE

The heated rear window uses a large amount of electricity. Be sure to turn off after the window has become clear.

BEFORE DRIVING

NOTE:

- The defogger will work only when the engine is running.
- The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the battery.

Front Seats

Seat Adjustment

⚠ WARNING

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.

⚠ WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

NOTICE

Do not rest your feet on the seat adjustment lever or push it down. This may affect the performance of the seat adjusters.

Adjusting Seat Position




EXAMPLE

74LHT0208

The adjustment lever for each front seat is located under the front of the seat. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

Seat Height Adjuster (if equipped)

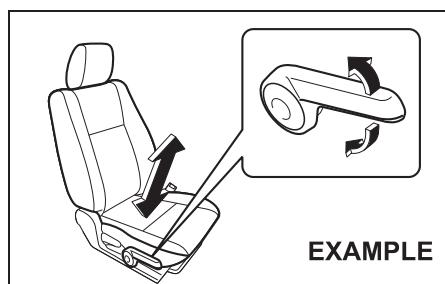

EXAMPLE

74LHT0209


If the driver's seat is equipped with a seat height adjuster lever on the outboard side of the seat, raise or lower the seat by pulling up or down the adjuster lever.

Adjusting Seatbacks

⚠ WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

EXAMPLE

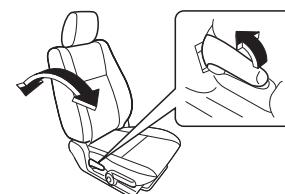


74LHT0210

To adjust the seatback angle of front seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

BEFORE DRIVING

Adjustable Head Restraints

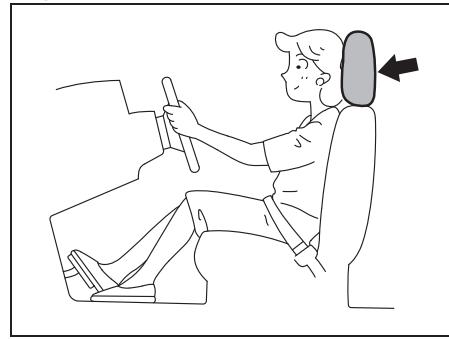

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

⚠ WARNING


- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint.

Front

EXAMPLE

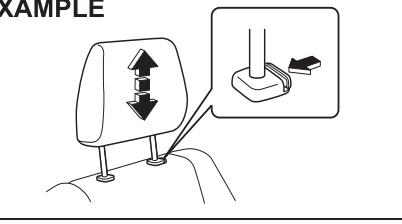

To raise the front head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

Rear Seats

Adjustable Head Restraints (if equipped)

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

⚠ WARNING

- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.


NOTE:

It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.

Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

Rear (If equipped)

EXAMPLE

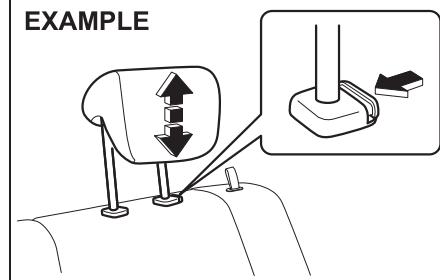

To raise the rear head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

When installing a child restraint system, raise the head restraint to the most upper position.


BEFORE DRIVING

Folding Rear Seat (If equipped)

The rear seat(s) of your vehicle can be folded forward to provide additional cargo space.

To fold the rear seat (s) forward:

EXAMPLE

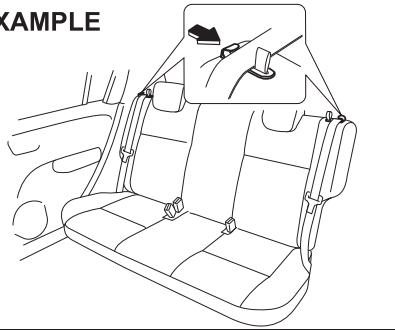

74LHT0212

- 1) Hook the webbing of the outboard lap-shoulder belts in the belt hangers.

NOTICE


- When you move a seatback(s), make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback(s), seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.

- 2) Lower the adjustable head restraint fully.

37

- 3) Store the center buckle in the seat(s) back slit.

EXAMPLE

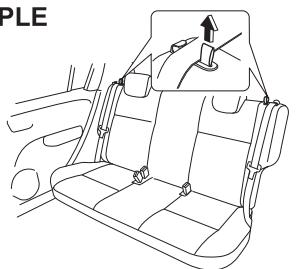

74LHT0239

- 4) Pull up the both release straps on the top of seat(s), and fold the seatback(s) forward.

NOTICE

After folding the rear seatback(s) forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback(s) from being locked securely.

WARNING

If you need to carry cargo in the passenger compartment with the rear seatback(s) folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback(s).

To return the seat to the normal position, follow the procedure below.

CAUTION

- When returning the rear seatback(s) to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback(s) from being locked securely.

NOTICE

- When returning the rear seatback(s) to the normal position, make sure that there is nothing around the striker. Any foreign materials prevent the seatback(s) from being locked securely.
- When you move a seatback(s), make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback(s), seat hinge, or seat latch. This helps prevent damage to the belt system.

BEFORE DRIVING

EXAMPLE



76MH0A030

Raise the seatback(s) until it locks into place.

After returning the seat(s), try moving the seatback(s) to make sure they are securely latched.


▲ CAUTION

Do not put your hand into the rear seatback(s) lock opening, or your finger may get caught and be injured.

NOTICE

- When returning the rear seatback(s) to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback(s) from being locked securely.
- When returning the rear seatback(s) to the normal position, be sure to handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.
- As the lock is designed exclusively for securing the rear seatback(s), do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback(s) from being locked securely.

Seat Belts and Child Restraint Systems

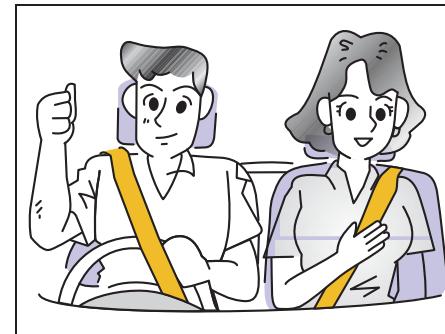

65D231S


! WARNING

Wear Your Seat Belts at All Times.


! WARNING

An air bag supplements, or adds to, the frontal crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.


BEFORE DRIVING

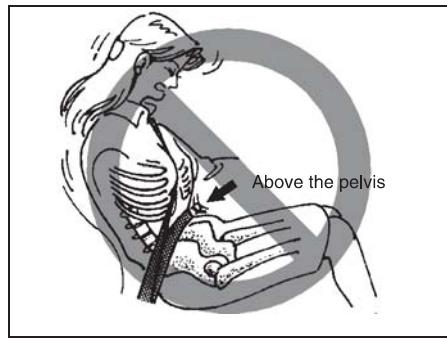

65D606

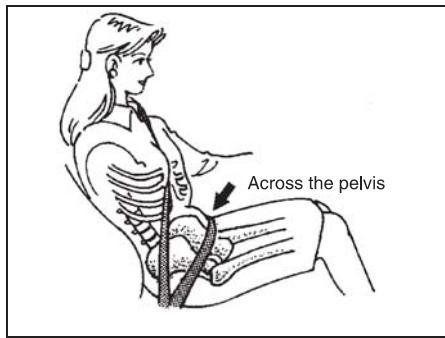

65D201

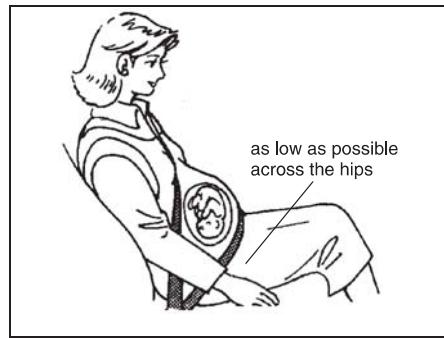

65D199

⚠ WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.

(Continued)

⚠ WARNING

- (Continued)
- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than one which is snug.
 - Make sure that each seat belt buckle is inserted into the proper buckle catch. It is possible to cross the buckles in the rear seat.

(Continued)

⚠ WARNING

- (Continued)
- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the diagram.
 - Do not wear your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.

(Continued)

BEFORE DRIVING

⚠ WARNING

(Continued)

- Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children age 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.

(Continued)

⚠ WARNING

(Continued)

- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


Lap-Shoulder Belt

Emergency Locking Retractor (ELR) (if equipped)


The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this hap-

pens, let the belt go back to unlock it, then pull the belt across your body more slowly.

Safety reminder

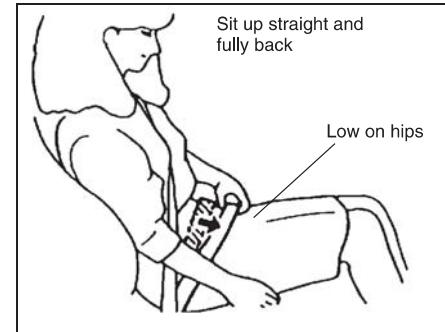

60A038

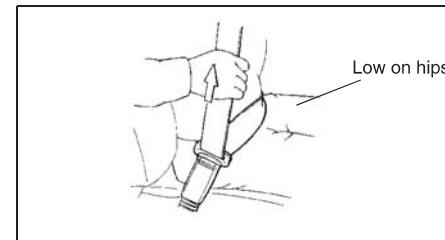


60A040

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length

BEFORE DRIVING


of the diagonal shoulder strap adjusts itself to allow freedom of movement.

All Seat Belts Except Rear Center

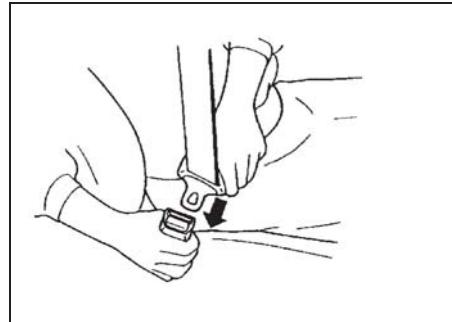

60A036

To fasten the seat belt, sit up straight and well back in the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a "click".

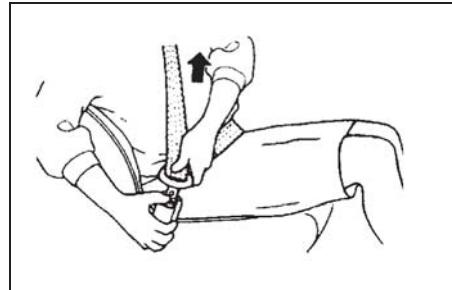


60A039

To unfasten the seat belt, push the red "PRESS" button on the buckle and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

Rear Center Seat Belt


Lap belt

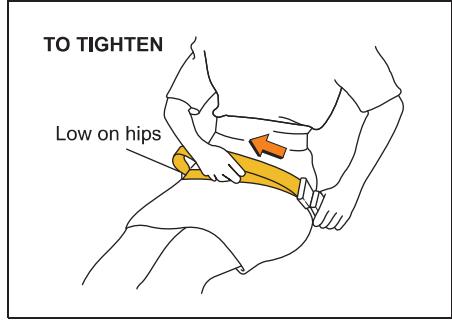

80JS028


Sit up straight and well back in the seat. To fasten the belt, pull the latch plate attached to the seat belt across your hips and press it straight into the buckle until you hear a "click". To reduce the risk of sliding under the belt during a collision, position the belt across your lap as low on your hips as possible and adjust it to a snug fit. To tighten the belt, pull the free end of the belt across alongside the lap strap.

TO LOOSEN

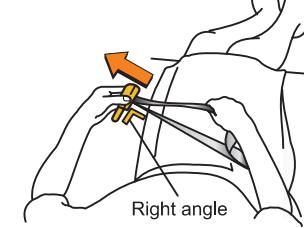

60A046

To lengthen, release the latch plate from the buckle, pull the latch plate (adjuster) in the direction of the arrow, at right angles to the belt. The latch plate should then be refitted into the buckle and the belt tightened as previously described.

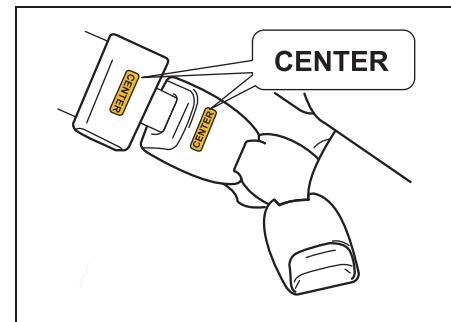


63J017

BEFORE DRIVING

NOTE:

The word "CENTER" is molded on the buckle and latch plate of the center lap belt. The buckles are designed so a latch plate can not be inserted into the wrong buckle.

Driver's Seat Belt Reminder (if equipped)

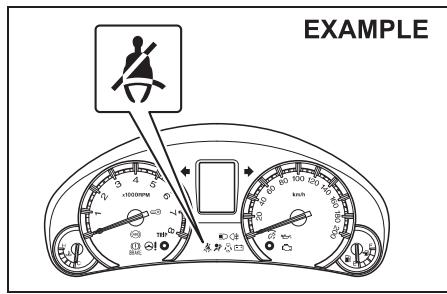

When the driver does not buckle his or her seat belt, the driver's seat belt reminder light in the instrument cluster will come on or blink and a buzzer (if equipped) will sound as a reminder to the driver to buckle his or her seat belt. For more details, refer to the explanation below.

If the driver's seat belt remains unbuckled when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON". The reminder works as follows:

- 1) The driver's seat belt reminder light will come on.
- 2) After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer (if equipped) will sound for about 95 seconds.
- 3) After step 2) has finished, the reminder light will remain on until the driver's seat belt is buckled.


If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from step 1) or step 2) according to the vehicle's speed. When the vehicle's speed is below about 15 km/h, the reminder will start from step 1). When the vehicle's speed is above about 15 km/h, the reminder will start from step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to "LOCK" (OFF).

WARNING

It is absolutely essential that the driver and passengers wear their seat belts at all times. Persons who are not wearing seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before putting the key in the ignition.

Shoulder Anchor Height Adjuster (if equipped)

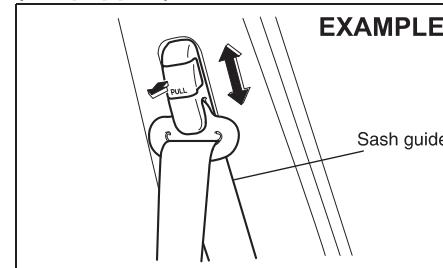

64J198

Adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To upward, slide the anchor up by pushing through the Sash guide. To downward, slide the anchor down while pulling the lock knob out. After adjustment, make sure that the anchor is securely locked.


WARNING

Be sure that the shoulder belt is positioned on the center of the outside shoulder. The belt should be away from your face and neck, but not falling off your shoulder. Misadjustment of the belt could reduce the effectiveness of the safety belt in a crash.

BEFORE DRIVING

Seat Belt Hanger (if equipped)

EXAMPLE

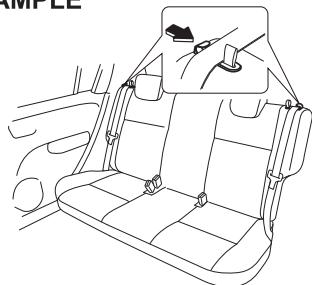


74LHT0212

NOTICE

When you move a seatback, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

Seat Belt Inspection

EXAMPLE

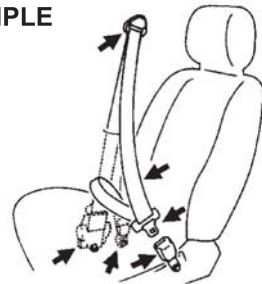

65D209S

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages, and guide loops. Replace any seat belts which do not work properly or are damaged.

WARNING

Be sure to inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly which was not in use during a collision should be replaced if it does not function properly, it is damaged in any way or the seat belt pretensioners were activated (that is, if the front air bags were activated).


Child Restraint Systems



60G332S

Infant restraint - rear seat only

EXAMPLE

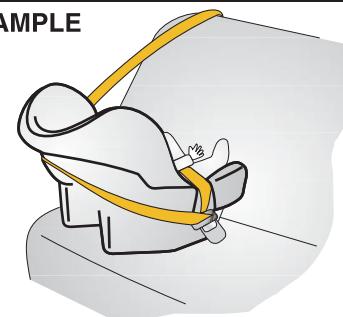


80JC007

BEFORE DRIVING

Child restraint

EXAMPLE

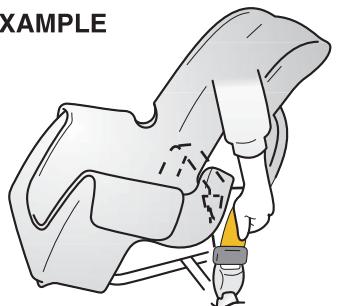

80JC016

MARUTI SUZUKI highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; make sure that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats by either seat belts (lap belts or the lap portion of lap-shoulder belts). Whenever possible, MARUTI SUZUKI recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.


If you must use a front-facing child restraint in the front passenger's seat, adjust the passenger's seat as far back as possible.

NOTE:

Observe any statutory regulation about child restraints.

Booster seat

EXAMPLE

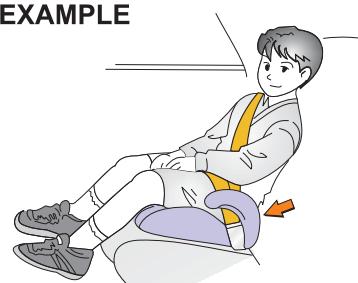

80JC008



65D607

! WARNING

If your vehicle is equipped with a front passenger air bag, do not install a rear-facing child restraint in the front passenger's seat. If the passenger's air bag inflates, a child in a rear-facing child restraint could be killed or seriously injured. The back of a rear-facing child restraint would be too close to the inflating air bag.

! WARNING

If you install a child restraint system in the rear seat, slide the front seat for enough forward so that the child's feet do not contact the front seat-back. This will help avoid injury to the child in the event of an accident.



65D608

44

BEFORE DRIVING



⚠ WARNING

Children could be endangered in a crash if their child restraint systems are not properly secured in the vehicle. Be sure to secure the child in the restraint system according to the manufacturer's instructions.


Installation with Lap-Shoulder Seat Belts

NOTICE

Before installing a child restraint system in the rear seat, raise the head restraint (if equipped) to the most upper position.


ELR type belt

EXAMPLE

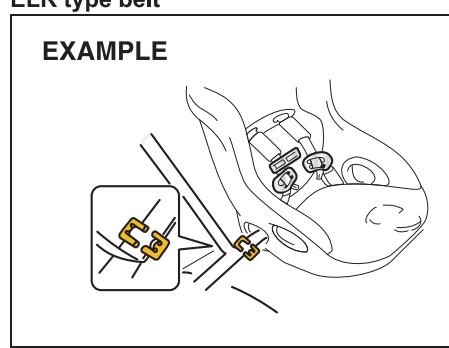

Seat Belt Pretensioner System (if equipped)

EXAMPLE

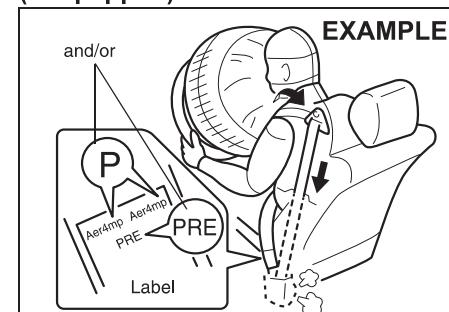

⚠ WARNING

This section of the owner's manual describes your MARUTI SUZUKI's SEAT BELT PRETENSIONER SYSTEM. Please read and follow ALL these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, check the label on the front seat belt at the bottom part. If the letters "p" and/or "PRE" appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

BEFORE DRIVING

Read this section and the "Supplemental Restraint System (air bags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the SUPPLEMENTAL RESTRAINT SYSTEM (Air Bags). The crash sensors and the electronic controller of the air bag system also control the seat belt pretensioners. When the air bags are triggered, the pretensioner are also triggered. For precautions and general information including servicing the pretensioner system, refer to the "Supplemental Restraint System (air bags)" section in addition to this "Seat Belt Pretensioner System" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal crash. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and **all** passengers must be properly restrained by wearing seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a crash.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to the "Seat Adjustment" section and the instructions and precautions about the seat belts in this "Seat Belts and Child Restraint Systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the air bags will activate in severe frontal collisions. They are not designed to activate in rear impacts, side impacts, roll-overs, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the air bags are activated), have the pretensioner system serviced by an authorized MARUTI SUZUKI dealer as soon as possible.

If the "AIR BAG" light on the instrument cluster does not blink or come on briefly when the ignition switch is turned to the "ON" position, or the engine switch is pressed to change the ignition mode to "ON", stays on for more than 10 seconds, or comes on while driving, the pretensioner system or the air bag system may not work properly. Have both systems inspected by an authorized MARUTI SUZUKI dealer as soon as possible.

Service on or around the pretensioner system components or wiring must be per-

formed only by an authorized MARUTI SUZUKI dealer who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position or the ignition mode has been "LOCK" (OFF) for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your MARUTI SUZUKI, ask your MARUTI SUZUKI dealer, body repair shop, or scrap yard for assistance.

BEFORE DRIVING

Child Restraint System for India

Child Restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP	Seating position (or other site)				
	Front Passenger	Rear Outboard	Rear Centre	Intermediate Outboard	Intermediate Centre
Group 0 Up to 10 kg	X	U	X	N.A.	N.A.
Group 0+ Up to 13 kg	X	U	X	N.A.	N.A.
Group I 9 to 18 kg	X	U	X	N.A.	N.A.
Group II 15 to 25 kg	X	U	X	N.A.	N.A.
Group III 22 to 36 kg	X	U	X	N.A.	N.A.

Key of letters to be inserted in the above table:

U =Suitable for 'universal' category restraints approved for use in this mass group

X =Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE: 'universal' is the category in the AIS 072.

BEFORE DRIVING

Supplemental Restraint System (air bags) (if equipped)

⚠ WARNING


This section of the owner's manual describes the protection provided by your MARUTI SUZUKI's SUPPLEMENTAL RESTRAINT SYSTEM (air bags).

Please read and follow ALL these instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a Supplemental Restraint System consisting of the following components in addition to a lap-shoulder belt at each front seating position.

1. Driver's front air bag module
(if equipped)
2. Front passenger's front air bag module
(if equipped)
3. Seat belt pretensioners (if equipped)
4. Air bag controller (if equipped)
5. Forward crash sensor (if equipped)

EXAMPLE

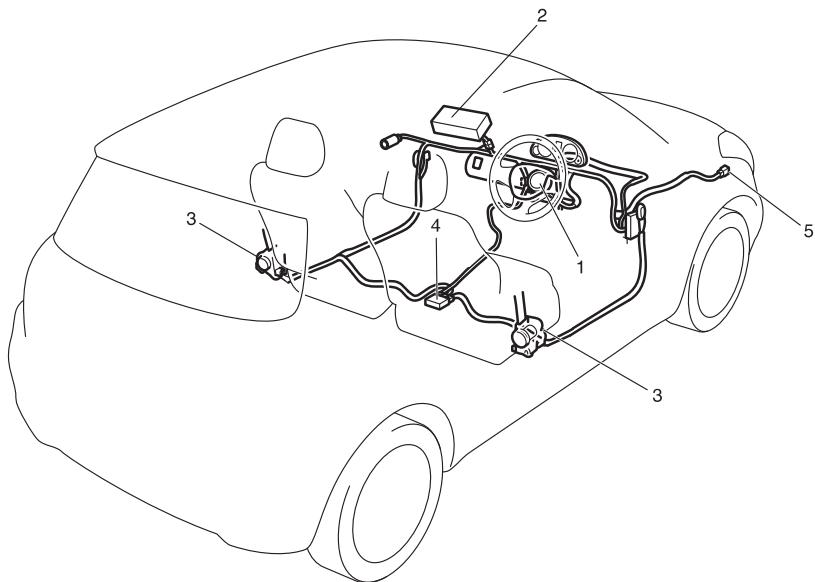

74LHT0215

BEFORE DRIVING

“AIR BAG” light (If equipped)



63J030

If the “AIR BAG” light on the instrument cluster does not blink or come on when the ignition switch is first turned to the “ON” position, or the ignition mode is first changed to “ON” or the “AIR BAG” light stays on, or comes on while driving, the air bag system (or the seat belt pretensioner system) may not work properly. Have the air bag system inspected by an authorized MARUTI SUZUKI dealer as soon as possible.

Front Air Bags

EXAMPLE




63J113

Front air bags are designed to inflate in severe frontal collisions when the ignition switch is in the “ON” position or the ignition mode is “ON”.

Front air bags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Remember, since an air bag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an air bag is NOT a substitute for seat belts. To maximize your protection, **ALWAYS WEAR YOUR SEAT BELTS**. Be aware that no system can prevent all possible injuries that may occur in an accident.

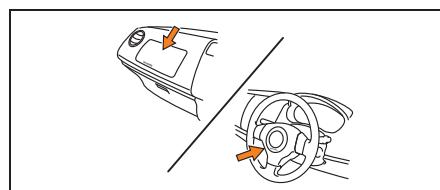

63J114

The driver’s front air bag is located behind the center pad of the steering wheel and the front passenger’s front air bag is located behind the passenger’s side of the dashboard. The words “SRS AIRBAG” are

molded into the air bag covers to identify the location of the air bags.



58MS030


⚠ WARNING

Do not install a rear-facing child restraint in the front passenger’s seat. If the passenger’s front air bag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating air bag.

Please refer to the “Seat Belts and Child Restraint Systems” section in this section for details on securing your child.


BEFORE DRIVING

Conditions of front air bags deployment (inflation)

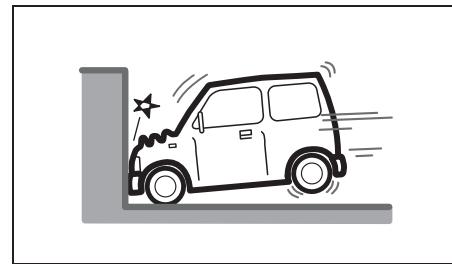

80J097

- In frontal collisions with a fixed wall that does not move or deform in more than about 25 km/h (15 mph)

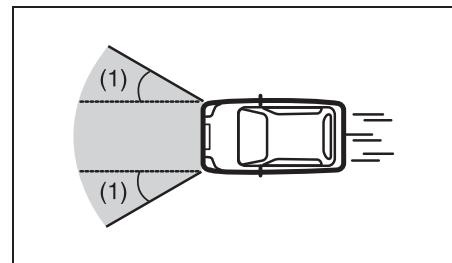


80J098E

- In collisions such as above at an angle of about 30 degrees (1) or less from the front


Conditions of front air bags may inflate

Receiving a strong impact to the lower body of your vehicle, the front air bags will inflate in many cases.

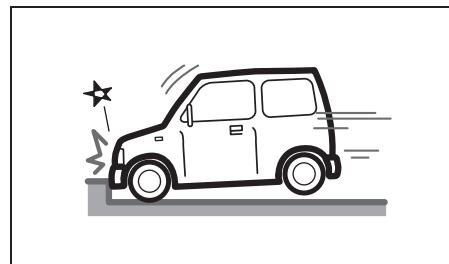


80J099

- Hitting a curb or medial strip

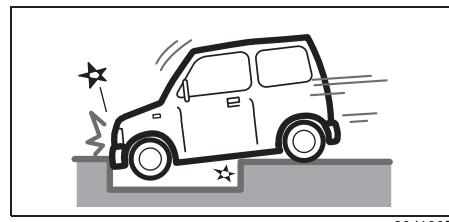

80J100E


- Falling into a deep hole or ditch

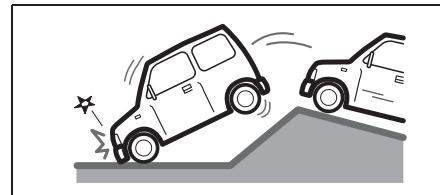

80J101


- Landing hard or falling

Front air bags may inflate in a strong impact

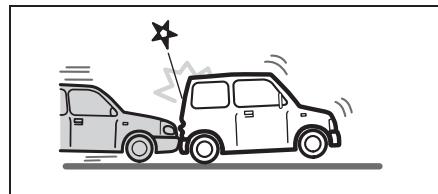

80J120

- Collision from the rear

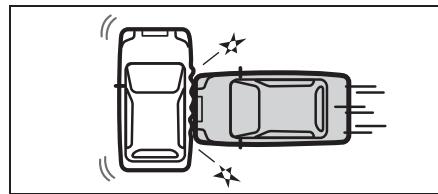


80J119

- Collision from the side


BEFORE DRIVING




- Vehicle rollover

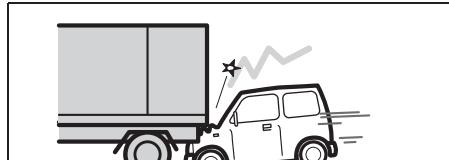


- Collision that the front of your vehicle goes under the bed of a truck etc.

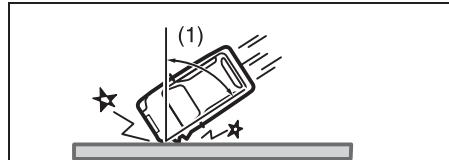


- Collision with a fixed wall or guardrail at an angle of greater than about 30 degrees (1) from the front

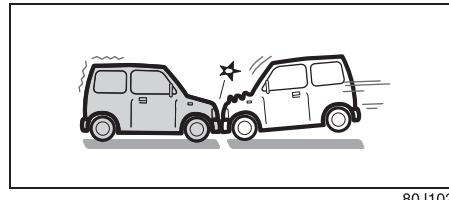


- Approximately 50 km/h (30 mph) or lower speed frontal collision to a stopped vehicle

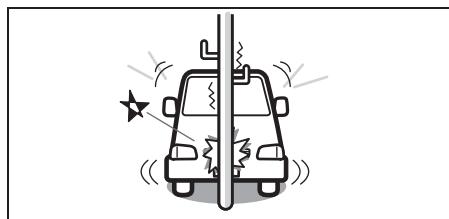

- Collision with a utility pole or stumpage

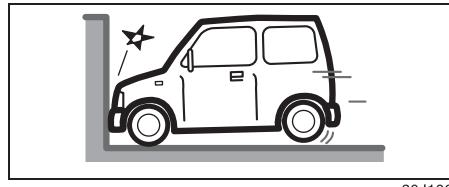

- In frontal collisions with a fixed wall that does not move or deform in less than about 25 km/h (15 mph)

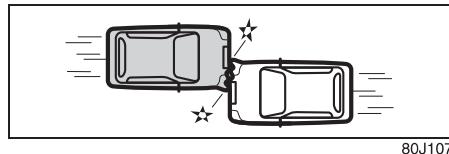


Collision angle is offset from the vehicle angle (offset collision)

BEFORE DRIVING

Air bag symbol (if equipped) meaning

EXAMPLE

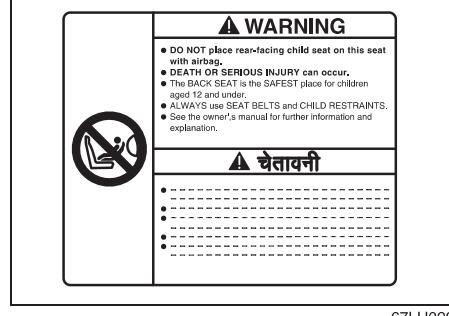

You may find this label on the sun visor.



⚠ WARNING
If the AIR BAG light in the instrument cluster ever comes on and stays on, it means that something may be wrong with the air bag system. If this ever happens, have the vehicle serviced immediately, because the air bags may not offer the protection for which they were designed.

How the System Works

In a frontal collision, the crash sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal crash, the controller will trigger the inflators. The inflators inflate the appropriate air bags with nitrogen or argon gas. The inflated air bags provide a cushion for your head and upper body. The air bag inflates and deflates so quickly that you may not even realize that it has activated. The air bag will neither hinder your view nor make it harder to exit the vehicle.

Air bags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the air bag may irritate bare skin, such as the facial area against a front air bag. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do

not indicate a fire in the vehicle. Be aware, however, that some air bag components may be hot for a while after inflation.

A seat belt helps keep you in the proper position for maximum protection when an air bag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Please refer to the "Seat Adjustment" section and the "Seat Belts and

Child Restraint Systems" in this section for details on proper seat and seat belt adjustments.



BEFORE DRIVING

⚠ WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard, or otherwise get too close to the dashboard. In these situations, the out-of-position occupant would be too close to an inflating air bag, and may suffer severe injury.
- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the air bag and the driver or front passenger. These objects may interfere with air bag operation or may be propelled by the air bag in the event of a crash. Either of these conditions may cause severe injury.

Note that even though your vehicle may be moderately damaged in a collision, the collision may not have been severe enough to trigger the air bags to inflate. If your vehicle sustains ANY front-end or side damage, have the air bag system inspected by an authorized MARUTI SUZUKI dealer to ensure it is in proper working order.

Your vehicle is equipped with a diagnostic module which records information about the air bag system if the air bags deploy in a crash. The module records information about overall system status, which sensors activated the deployment.

Servicing the air bag system

If the air bags inflate, have the air bags and related components replaced by an authorized MARUTI SUZUKI dealer as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the air bag controller could be damaged. If it does, have the air bag system inspected by the MARUTI SUZUKI dealer as soon as possible.

Special procedures are required for servicing or replacing an air bag. For that reason, only an authorized MARUTI SUZUKI dealer should be allowed to service or replace your air bags. Please remind anyone who services your MARUTI SUZUKI that it has air bags.

Service on or around air bag components or wiring must be performed only by an authorized MARUTI SUZUKI dealer. Improper service could result in unintended air bag deployment or could render the air bag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the air bag system, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position or the ignition mode has been "LOCK" (OFF) for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI. Do not touch air bag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

Scraping a vehicle that has an uninflated air bag can be hazardous. Ask your dealer, body repair shop or scrap yard for help with disposal.


According to accident statistics, children are safer when properly restrained on rear seats than front passenger's seat whenever possible, MARUTI SUZUKI recommends that child restraint systems be installed the rear seat.

BEFORE DRIVING

Instrument Cluster (without Tachometer)

1. Speedometer
2. Fuel gauge
3. Temperature gauge
4. Information display
5. Trip meter selector knob
6. Indicator selector knob
7. Warning and indicator lights


EXAMPLE

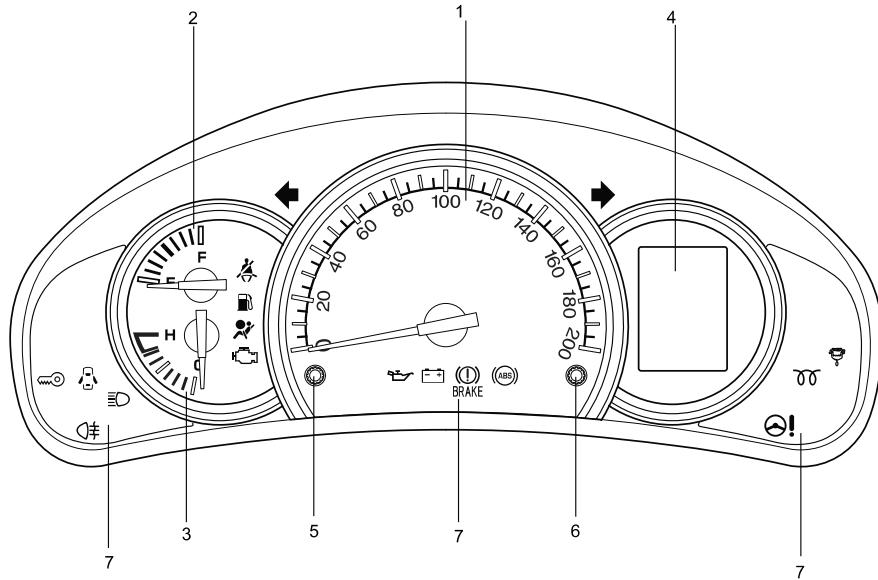

BEFORE DRIVING

Instrument Cluster (with Tachometer)

1. Speedometer
2. Tachometer
3. Fuel gauge
4. Temperature gauge
5. Information display
6. Trip meter selector knob
7. Indicator selector knob
8. Warning and indicator lights

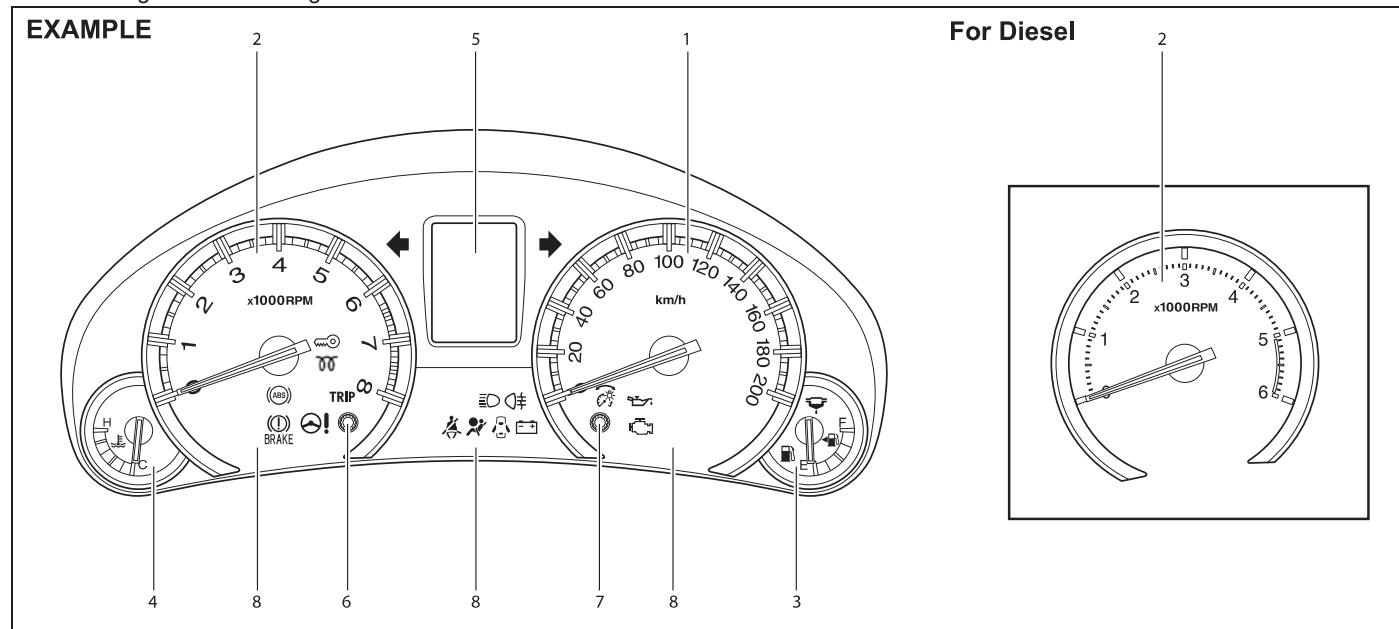

BEFORE DRIVING

Warning and Indicator Lights

Brake System Warning Light



65D477

For working check of this light, there are following three different type of operations depending on the vehicle's specification.

- 1) The light comes on briefly when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".
- 2) The light comes on when the parking brake is engaged with the ignition switch in the "ON" position or the ignition mode "ON".
- 3) The light comes on when under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system. If this happens, you should:

- 1) Pull off the road and stop carefully.

WARNING
Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.
- 2) Test the brakes by carefully starting and stopping on the shoulder of the road.
- 3) If you determine that it is safe, drive cautiously at low speed to the nearest dealer for repairs, or
- 4) Have the vehicle towed to the nearest MARUTI SUZUKI dealer for repairs.

! WARNING

If any of the following conditions occur, you should immediately ask your MARUTI SUZUKI dealer to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

*(Parking Brake Reminder Buzzer)
A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.*

BEFORE DRIVING

Anti-Lock Brake System (ABS) Warning Light (if equipped)



65D529

When the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", the light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to "LOCK" or change the ignition mode to "LOCK" (OFF) by pressing the engine switch and then start the engine again.

If the warning light comes on briefly then turns off, the system is normal. If the warning light still stays on, there is something wrong in the system.

If the light and the brake system warning light stay on, or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and anti-lock function of the ABS system.

If one of these happens, have the system inspected by your MARUTI SUZUKI dealer. If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

Oil Pressure Light



50G051

This light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", and goes out when the engine is started. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by your MARUTI SUZUKI dealer before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the oil pressure light to indicate the need to add oil. Be sure to periodically check the engine oil level.

Charging Light



50G052

This light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", and goes out when the engine is started. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by your MARUTI SUZUKI dealer.

BEFORE DRIVING

Driver's Seat Belt Reminder Light



60G049

When the driver doesn't buckle his or her seat belt, this light will come on and/or blink.

For details about the seat belt reminder, refer to "Seat Belts and Child Restraint Systems" in this section.

"AIR BAG" Light (if equipped)



63J030

This light blinks or comes on for several seconds when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" so you can check if the light is working.

The light will come on and stay on if there is a problem in the air bag system or the seat belt pretensioner system (if equipped).

WARNING

If the "AIR BAG" light does not blink or come on briefly when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", stays on for more than 10 seconds, or comes on while driving, the air bag system or the seat belt pretensioner system (if equipped) may not work properly. Have both systems inspected by an authorized MARUTI SUZUKI dealer.

Malfunction Indicator Light



65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument panel to indicate when it is necessary to have the emission control system serviced. The malfunction indicator light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" to let you know the light is working and goes out when the engine is started.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Take the vehicle to your MARUTI SUZUKI dealer to have the damage fixed.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transaxle Warning Light (if equipped)



80J219

This light comes on for several seconds when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" so you can check the light is working. If this light comes on when the engine is running, there is a problem with the transaxle system. Ask your MARUTI

BEFORE DRIVING

SUZUKI dealer to have the system inspected.

Immobilizer/Keyless Push Start System Warning Light



80JM122

When the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", the light comes on briefly so you can check that the light is working. If this light stays on, there is a problem with the system. Ask your MARUTI SUZUKI dealer to have the system inspected.

Open Door Warning Light



54G391

This light remains on until all doors (including the tail gate for some model) are completely closed.

If any door is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

59

Low Fuel Warning Light



54G343

If this light comes on, fill the fuel tank immediately.

When this light comes on, a ding sounds once to remind you to fill the fuel.

If you do not fill the fuel, a ding sounds every time when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

Electric Power Steering Light



79J039

This light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON", and goes out when the engine is started.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by your MARUTI SUZUKI dealer.

NOTE:

Following operations of the steering wheel while parking or driving at a very low-speed may have steering effort bigger gradually. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent them from overheating.

- The steering wheel is operated very often.
- The steering wheel is kept in a fully turned position for a long while.

When the power steering control system cool down, the power steering system back to the original condition.

However, repeating these operations could cause the power steering system damaged.

NOTE:

If the power steering system does not work properly, you will feel heavier to steer but you still will be able to steer.

NOTE:

If the steering is operated, you may hear a rubbing noise. This is normal and indicates that the power steering system works properly.

BEFORE DRIVING

Turn Signal Indicators



50G055

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will flash along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will flash along with all of the turn signal lights.

Main Beam (high beam) Indicator Light



50G056

This indicator comes on when headlight main beams (high beams) are turned on.

Glow Plug Indicator Light (For Diesel Engine Model)



60A543

If the coolant temperature is cool enough, this light comes on when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" and goes out when the glow plug is heated enough for engine starting.

Fuel Filter Warning Light (For Diesel Engine Model)



60A541

This light comes on for several seconds when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" so you can check that light is working.

If the light comes on when driving, there is a possibility to have water in the fuel filter. Drain water as soon as possible. Have your vehicle inspected by an authorized MARUTI SUZUKI dealer.

Keyless Push Start System Remote Controller Battery Consumption Warning Light (if equipped)



70K122

If the remote controller becomes unreliable, this light comes on for several seconds when the engine switch is pressed to change the ignition mode to "ON".

"PUSH" Indicator Light



82K174

If this light comes on when depressing the clutch pedal for manual transaxle vehicles, you can start the engine.

"ACC" Indicator Light (if equipped)



82K097

This light comes on when the ignition mode is "ACC".


BEFORE DRIVING

Ignition "ON" Indicator Light (if equipped)




This light comes on when the ignition mode is "ON" with the engine off.

Speedometer

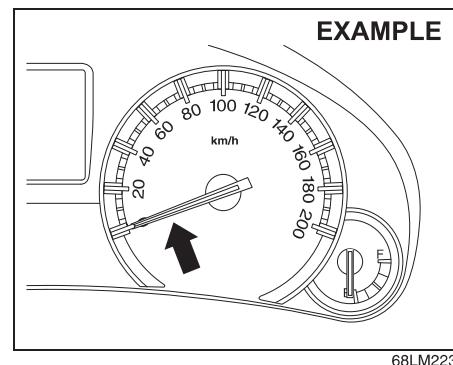

The speedometer indicates vehicle speed in km/h.

Tachometer (if equipped)

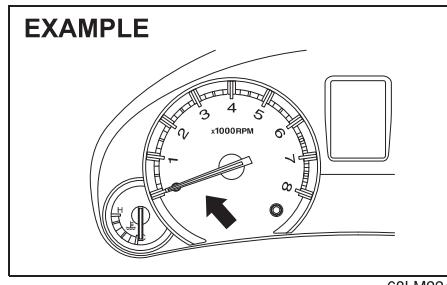

The tachometer indicates engine speed in revolutions per minute.


NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to "Downshifting maximum allowable speeds" in the "OPERATING YOUR VEHICLE" section.

NOTE:

Maximum engine speed is limited at approximately 5000 revolutions per minute by the fuel cut control when you press the accelerator pedal while the gearshift is in "N" (Neutral).

Fuel Gauge

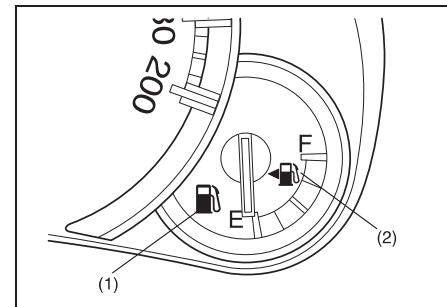

When the ignition switch is in the "ON" position or the ignition mode is "ON", this gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

If the indicator gets off the graduation of "E" (not character "E"), refill the tank as soon as possible.

NOTE:

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

If the low fuel warning light (1) comes on, fill the fuel tank immediately.

BEFORE DRIVING

When the low fuel warning light (1) comes on, a ding sounds once to remind you to fill the fuel.


If you do not fill the fuel, a ding sounds every time when the ignition switch is turned to "ON" position.

NOTE:

The activation point of the low fuel warning light (1) varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

Temperature Gauge

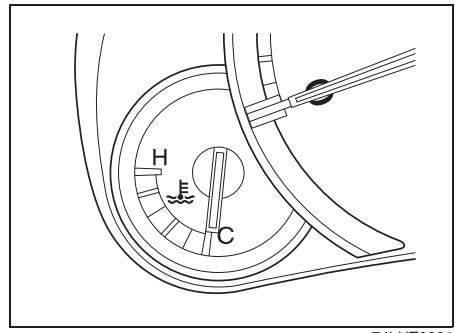


When the ignition switch is in the "ON"

position or the ignition mode is "ON", this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between "H" and "C". If the indicator approaches "H", overheating is indicated. Follow the instructions for engine overheating in the "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Brightness Control

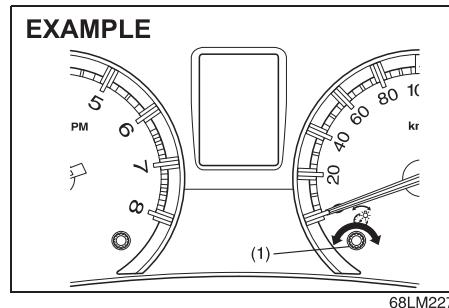

When the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode is "ON", the pointer lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

When the position lights and/or headlights are ON, you can control the meter illumination intensity.

To increase the brightness of the instrument panel lights, turn the brightness control knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the brightness control knob (1) counterclockwise.


NOTE:

- If you do not turn the brightness control knob within about 5 seconds of activating the brightness control display, the brightness control display will be canceled automatically.
- When you reconnect the battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.

BEFORE DRIVING

Information Display

EXAMPLE

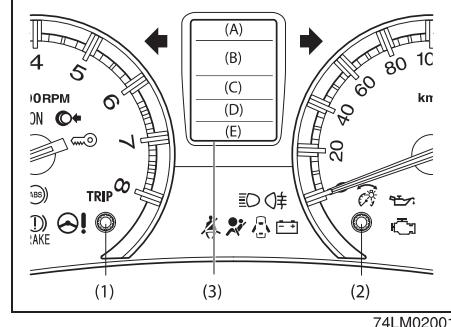

- (1) Trip meter selector knob
- (2) Indicator selector knob
- (3) Information display

When the ignition switch is in the "ON" position or the ignition mode is "ON", the information display shows the following information.

Display (A)

Thermometer

Display (B) (For automatic transmission) / (For automated manual transaxle)

Transmission selector Position Indicator

Display (C)

Trip meter / Instantaneous fuel consumption / Average fuel consumption / Driving range.

63

Display (D) Odometer

Display (E) Clock

Thermometer (if equipped)

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (A) shows the thermometer. The thermometer indicates the outside temperature.

EXAMPLE



68LM258

If the outside temperature nears freezing, the mark (a) will appear on the display.

NOTE:

- The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.
- If there is something wrong with the thermometer, or just after the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode is "ON", the display may not indicate the outside temperature.

When the display (B) shows the driving range, you can change the unit of temperature.

To change the unit of temperature, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).

EXAMPLE



(Initial setting)


68LM259

NOTE:

When you reconnect the negative (-) terminal to the battery, the unit of temperature will be reinitialized. Change the unit again to your preference.

Transmission selector position indicator (for automatic transmission vehicles)

EXAMPLE

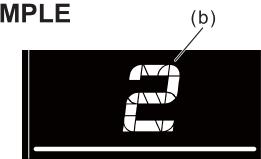

74LM02002

When the ignition switch is in the "ON" position or the ignition mode is "ON" the

BEFORE DRIVING

display (B) indicates the gear position (b). For details on how to use the transmission refer to "Using the transmission in the "OPERATING YOUR VEHICLE" section.

Gear position indicator (for Auto Gear Shift models)

EXAMPLE



76MH0A044

When the ignition switch is in the "ON" position, the display (D) indicates the gear position.


For details on how to use the transaxle, refer to "Using the Transaxle" in the "OPERATING YOUR VEHICLE" section.

Trip meter / Instantaneous fuel consumption / Average fuel consumption / Driving range

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (B) shows one of the following five indications, trip meter A, trip meter B, Instantaneous fuel consumption, Average fuel consumption or Driving range.

To switch the display indication (B), push the trip meter selector knob (1) or the indicator selector knob (2) quickly.

2-54

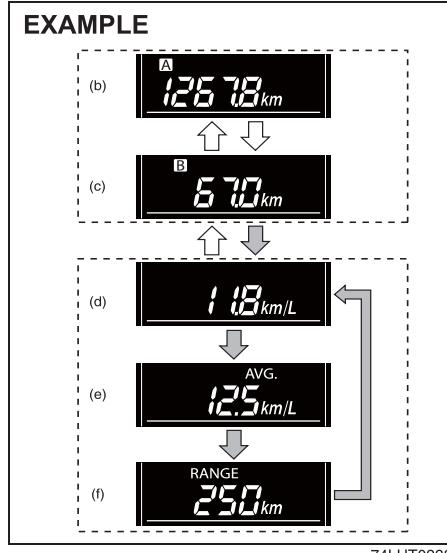

Push the trip meter selector knob (1).

Push the indicator selector knob (2).

- (b) Trip meter A
- (c) Trip meter B
- (d) Instantaneous Fuel Consumption
- (e) Average fuel consumption
- (f) Driving range

! WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

NOTE:

- Indications will change when you push and release a knob.
- The display shows estimated values. Indications may not be the same as actual values.

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use the trip meter A or trip meter B independently.

To reset the trip meter to zero, push and hold the trip meter selector knob (1) for a while when the display shows the trip meter.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Instantaneous Fuel Consumption

If you selected instantaneous fuel consumption the last time you drove the vehicle, the display does not show the last

BEFORE DRIVING

value of instantaneous fuel consumption from previous driving when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode is "ON".

The display shows the value only when the vehicle is moving.

NOTE:

- The display does not show the value unless the vehicle is moving.
- Depending on the vehicle's specification, the initial setting for the fuel consumption unit is indicated as L/100km, km/L or MPG.
- For "L/100km" or "km/L" setting, the indicated maximum value of instantaneous fuel consumption is 30. No more than 30 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- For "MPG" setting, the indicated maximum value of instantaneous fuel consumption is 99.9. No more than 99.9 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.
- For "L/100km" or "km/L" setting, you can change the units that instantaneous fuel consumption is displayed in. Refer to

"Average fuel consumption" in this section.

⚠ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

NOTE:

When you reconnect the negative (-) terminal to the battery, the indication of the instantaneous fuel consumption will be reinitialized. Change the indication again to your preference.

Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode is "ON". Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption which includes average fuel consumption during previous driving.

To reset the average fuel consumption to zero, push and hold the indicator selector knob (2) for a while when the display shows the average fuel consumption.

NOTE:

When you reset the indication or reconnect the negative (-) terminal to the battery, the value of average fuel consumption will be shown after driving for a while.

For "L/100 KM" or "KM/L" setting

To change the unit of average fuel consumption, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).

EXAMPLE



68LM262

NOTE:

Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as km/L or L/100km.

NOTE:

- When you change the units that average fuel consumption is displayed in, the instantaneous fuel consumption units will be changed automatically.

BEFORE DRIVING

- When you reconnect the negative (-) terminal to the battery, the unit of the average fuel consumption will be reinitialized. Change the unit again to your preference.

Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "___" for a few seconds and then indicates the current driving range when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode is "ON".

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions.

When the low fuel warning light comes on, the display "___" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

As the driving range after refueling is calculated based on the most recent driving condition, the value is different each time you refuel.

NOTE:

- If you refuel when the ignition switch is in the "ON" position or the ignition mode is "ON", the driving range may not indicate the correct value.
- When you reconnect the negative (-) terminal to the battery, the value of driv-

ing range will be shown after driving for a while.

Odometer

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (C) shows the odometer.

The odometer records the total distance the vehicle has been driven.

NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Clock

When the ignition switch is in the "ON" position or the ignition mode is "ON", the display (D) shows the time.

To change the time indication:

- 1) Push the trip meter selector knob (1) and the indicator selector knob (2) together.
- 2) To change the hour indication, turn the indicator selector knob (2) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (2). To set the hour indication, push the indicator selector knob (2) and the minute indication will blink.

- 3) To change the minute indication, turn the indicator selector knob (2) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (2). To set the minute indication, push the indicator selector knob (2).

! WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

NOTE:

When you reconnect the negative (-) terminal to the battery, the clock indication will be reinitialized. Change the indication again to your preference.

BEFORE DRIVING

Setting Mode (If equipped)

In the setting mode, you can set up the following functions.

Indication	Functions
  	Automatic door locking function “ <i>d2</i> ”
	Automatic door unlocking function “ <i>d3</i> ”
	Door locking and unlocking siren “ <i>d5</i> ”
   	Additional flashes of the turn signal “ <i>L2</i> ”

BEFORE DRIVING

Indication	Functions
 SECUr-Y   52	Shock sensor "52"
 53	Pre-warning sensitivity of the shock sensor "53"
 54	Full blast warning sensitivity of the shock sensor "54"
 deFAUL   dE-on	Initialization setting "dE-on"
 End	Exit the setting mode "End"

	Turn the indicator selector knob (3).
	Push the indicator selector knob (3).

NOTE:

Depending on vehicle's specifications, some items may not be displayed.

How to operate the setting mode:

- 1) When the ignition switch is in the "ON" position or press the engine switch to change the ignition mode to "ON" and the vehicle is stationary, push the trip meter selector knob (2) to switch the information display indication (D) to the odometer.
- 2) Push and hold the indicator selector knob (3) until the display shows "door".
- 3) Turn and/or push the indicator selector knob (3) to select a function that you want to set up according to the above chart.
- 4) Turn and/or push the indicator selector knob (3) to register settings of the following functions.

BEFORE DRIVING

Automatic door locking function “*d2*”

- *d2-SL1*: Disable the automatic door locking function
- *d2-SL2*: Lock all doors when the vehicle speed reaches 15 km/h (default setting)
- *d2-SL3*: (For automatic transaxle vehicle)
Lock all door when the gearshift lever is in other than “P”

Shock sensor “*s2*”

- *s2-SL1*: Enable the shock sensor
- *s2-SL2*: Disable the shock sensor (default setting)

Pre-warning sensitivity of the shock sensor “*s3*”

- *s3-L00*: Disable the pre-warning
- *s3-L01* to *L15*:
Adjust the pre-warning sensitivity of shock sensor (Lowest sensitivity level is L01 and highest is L15, and default setting is L14)

Automatic door unlocking function “*d3*”

- *d3-SL1*: Disable the automatic door unlocking function (default setting of vehicle with keyless push start system)
- *d3-SL2*: (For automatic transaxle vehicle)
Unlock all doors when the gearshift lever is moved to the “P” from other position
- *d3-SL3*: (Vehicle with keyless entry system)
Unlock all doors when the key is pulled out from the ignition switch (default setting of vehicle with keyless entry)
(Vehicle with keyless push start system)
Unlock all doors when the ignition mode is “LOCK” (OFF)

Full blast warning sensitivity of the shock sensor “*s4*”

- *s4-L00*: Disable the full blast warning
- *s4-L01* to *L15*:
Adjust the full blast warning sensitivity of shock sensor (Lowest sensitivity level is L01 and highest is L15, and default setting is L09)

Door locking and unlocking siren “*d5*”

- *d5-SL1*: Siren sounds when the door(s) is(are) locked or unlocked by using the keyless entry system transmitter, keyless push start system remote controller or request switch (default setting)
- *d5-SL2*: Siren does not sound when the door(s) is(are) locked or unlocked by using the keyless entry system transmitter, keyless push start system remote controller or request switch

Additional flashes of the turn signal “*L2*”

- *L2-SL1*: Turn signal flashes three times after the turn signal lever is returned (default setting)
- *L2-SL2*: Disable the additional flashes of turn signal

Initialization setting “*dE-on*”

- *dE-on*: Initialize all settings

BEFORE DRIVING

EXAMPLE

A B
d2-SL2


76MH0017

NOTE:

- As shown in the above illustration, “**A B**” indicates on the display of currently setting item.
- To go back to the higher level display during operation, turn the indicator selector knob (3) to display “**BREH**” or “**-bREL**” and then push the indicator selector knob (3).

To exit the setting mode, switch the display to show “**End**” and then push the indicator selector knob (3).

Lighting Control Lever

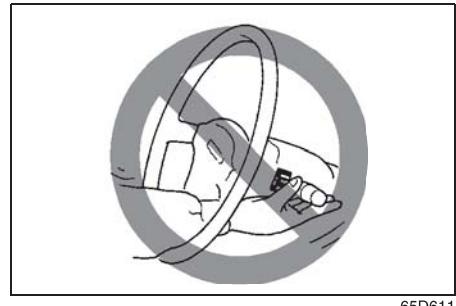


65D611

WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Lighting Operation

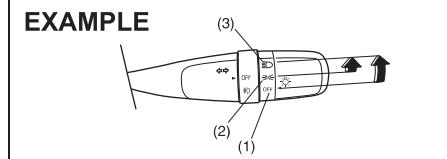

74LHT0224

To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF (1)

All lights are off.


END (2)

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

END (3)

Front position lights, tail lights, license plate light, instrument lights and headlights are on.

EXAMPLE

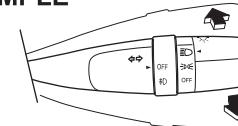

74LHT0225

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument panel will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.


BEFORE DRIVING

Light Reminder Buzzer (if equipped)

A buzzer sounds to remind you to turn off the lights if they are left on when the ignition key is removed and the driver's door is opened.

Rear Fog Light Switch (if equipped)


EXAMPLE

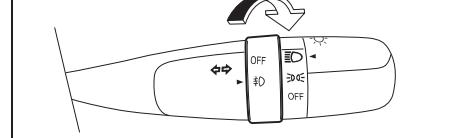

74LHT0226

To turn the rear fog light on, twist the knob as shown in the illustration with the headlights are on. When the rear fog light is on, an indicator light on the instrument cluster will come on.

Front Fog Light Switch (if equipped)

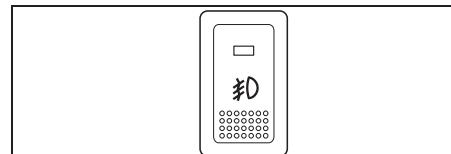


64J058

The front fog light comes on when the fog light switch is pushed in with the position lights, tail lights and/or the headlights are on. An indicator light above the switch will be lit when the front fog light is on.

71

Headlight Leveling Switch

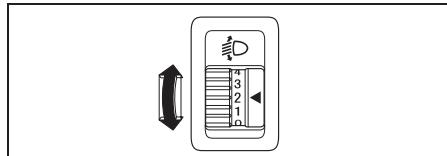


80JM040

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart below shows the appropriate switch position for different vehicle-load conditions.

Vehicle Load Condition	Switch Position
Driver only	0
Driver + 1 passenger (in front seat)	1
Driver + 4 passengers, no cargo	2
Driver + 4 passengers, cargo added	2
Driver + full cargo	4

Turn Signal Control Lever

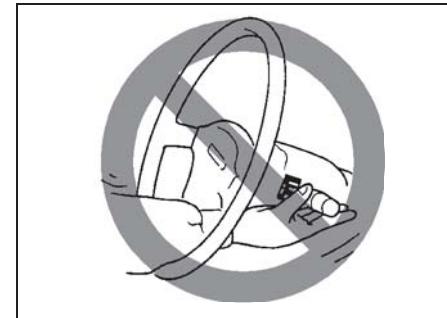

65D611

! WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.


BEFORE DRIVING

Turn Signal Operation

With the ignition switch in the "ON" position or the ignition mode is "ON", move the lever up or down to activate the left or right turn signals.

Normal turn signal

EXAMPLE

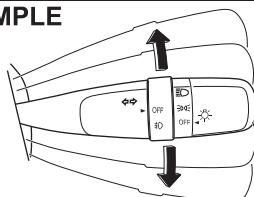


74LHT0227

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

Lane change signal

 EXAMPLE




74LHT0228

Some times, such as when changing lanes, the steering wheel is not turned far enough to cancel the turn signal. For convenience, you can flash the turn signal by moving the lever part way and holding it

there. The lever will return to its normal position when you release it.

Hazard Warning Switch

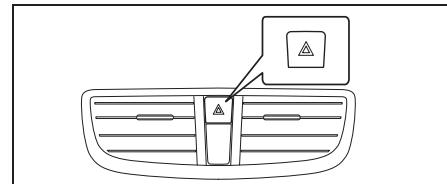

74LHT0229

Push in the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other traffic during emergency parking or when your vehicle could otherwise become a traffic hazard.

Windshield Wiper and Washer Lever




57L21128

! WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Windshield Wipers

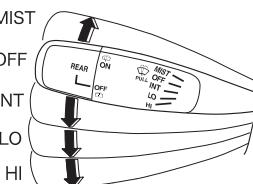

74LHT0230


To turn the windshield wipers on, move the lever down to one of the three operating positions. In the "INT" position, the wipers operate with "LO" speed & with a gap between two wipes/wipe cycle. The "INT" position is very convenient for driving in

BEFORE DRIVING

mist or light rain. In the "LO" position, the wipers operate at a steady low speed. In the "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to the "OFF" position.

Move the lever up and hold it to the "MIST" position, the windshield wipers will turn on continuously at low speed.

Windshield Washer

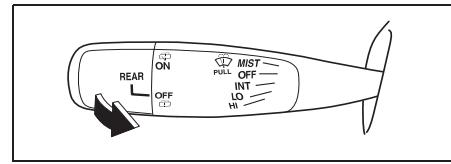

74LHT0231

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and the "INT" position is equipped.

WARNING

- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.


NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.

Rear Window Wiper/Washer Switch (if equipped)

EXAMPLE

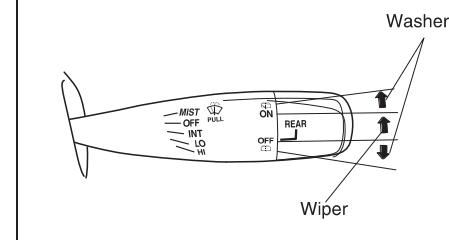

74LHT0232

To turn the rear wiper on, twist the rear wiper switch on the end of the lever forward to the "ON" position. To turn the rear wiper off, twist the switch rearward to the "OFF" position.


To spray window washer fluid, twist the switch rearward from the "OFF" position, or twist the switch forward from the "ON" position. The rear wiper will turn on automatically while spraying the window washer fluid.

NOTICE

Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

BEFORE DRIVING

Tilt Steering Lock Lever

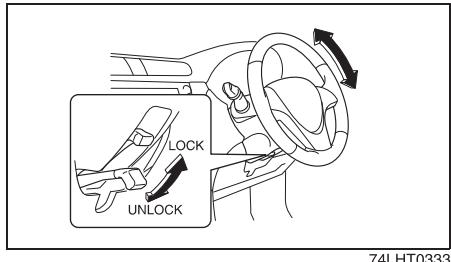


The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- 2) Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- 3) Try moving the steering wheel up and down to make sure it is securely locked in position.

⚠ WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.

Horn

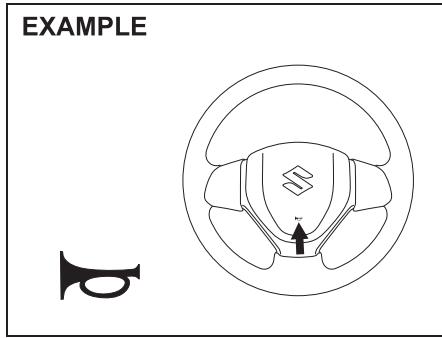

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.


OPERATING YOUR VEHICLE

OPERATING YOUR VEHICLE

Exhaust Gas Warning	3-1
Daily Inspection Checklist	3-1
Engine Oil Consumption	3-2
Ignition Switch	
(Vehicle Without Keyless Push Start System).....	3-3
Engine Switch	
(Vehicle with Keyless Push Start system)	3-4
Parking Brake Lever	3-8
Pedal	3-9
Starting the Engine	
(Vehicle Without Keyless Push Start System)	3-10
Starting the Engine	
(Vehicle With Keyless Push Start System)	3-11
Using the Transmission	3-14
Parking Sensors (If equipped)	3-25
Braking	3-29
Anti-Lock Brake System	3-30

OPERATING YOUR VEHICLE

Exhaust Gas Warning

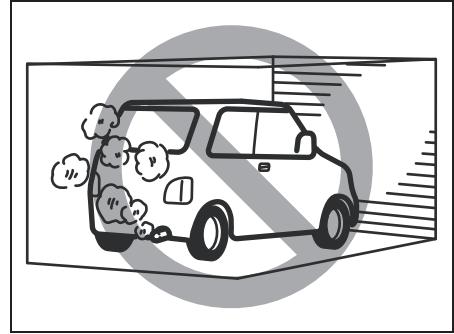

52D334

! WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, be sure to take the following precautions to help prevent carbon monoxide from entering your vehicle.

- Do not leave the engine running in garages or other confined areas.

(Continued)

! WARNING

(Continued)

- Do not park with the engine running for a long period of time, even in an open area. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to "FRESH AIR" and the blower is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to operate the vehicle with the tailgate or trunk open, make sure all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grille in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leaks. Any damage or leaks should be repaired immediately.

Daily Inspection Checklist

Before Driving



60A187S

1) Make sure that windows, mirrors, lights and reflectors are clean and unobstructed.

2) Visually check the tyres for the following points:

- the depth of the tread groove
- abnormal wear, cracks and damage
- loose wheel bolts
- existence of foreign material such as nails, stones, etc.

Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.

3) Look for fluid and oil leaks.

NOTE:

It is normal for water to drip from the air conditioning system after use.

4) Make sure the bonnet is fully closed and latched.

OPERATING YOUR VEHICLE

- 5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and adjustable head restraint (if equipped).
- 7) Check the brake pedal and the parking brake lever.
- 8) Adjust the mirrors.
- 9) Make sure that you and all passengers have properly fastened your seat belts.
- 10) Make sure that all warning lights come on as the key is turned to the "ON" position or the engine is pressed to change the ignition mode to "ON".
- 11) Check all gauges.
- 12) Make sure that the BRAKE SYSTEM WARNING light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery solution level
- 5) Windshield washer fluid level
- 6) Hood latch operation
Pull the bonnet hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Be sure to close the hood securely after checking for proper latch operation. See "All latches, hinges and locks" of

"CHASSIS AND BODY" in the "Periodic Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section for lubrication schedule.

! WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tire pressure using a tire pressure gauge. Also check the tire pressure of the spare tire.

Engine Oil Consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumed depends on the viscosity of the oil, the quality of the oil and the conditions the vehicle is driven under.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil. A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil

consumption only after approximately 5000 km driving.

Oil consumption: Max. 1.0 L per 1000 km


When judging the amount of oil consumption, note that the oil may become diluted and make it difficult to accurately judge the true oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

OPERATING YOUR VEHICLE


Ignition Switch (Vehicle without Keyless Push Start System)

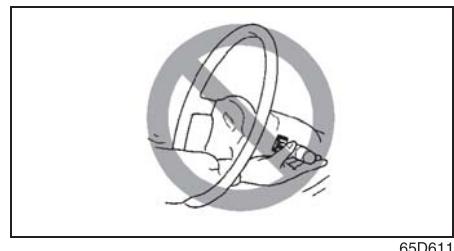

⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

EXAMPLE

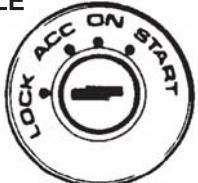


The ignition switch has the following four positions:

3-3

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

Manual transaxle

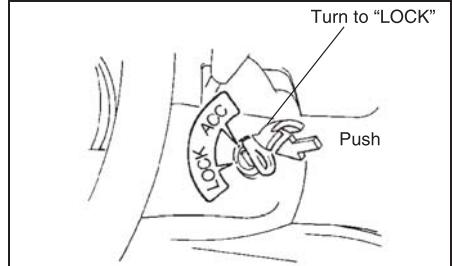

- **Manual transaxle/Auto Gear Shift vehicles**

You must push in the key to turn it to the "LOCK" position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

- **Automatic transaxle vehicles**

The gearshift lever must be in the "P" (Park) position to turn the key to the "LOCK" position. It locks the ignition and prevents normal use of the steering wheel and gearshift lever.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON

This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.



⚠ WARNING

- Never return the ignition switch to the "LOCK" position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.

(Continued)

OPERATING YOUR VEHICLE

⚠ WARNING

(Continued)

- Always return the ignition switch to the “LOCK” position and remove the ignition key when leaving the vehicle even if only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle or could tamper with power windows or power sunroof. They also could suffer from heat stroke in warm or hot weather. These could result in severe injury or even death.

NOTICE


- Do not use the starter motor for more than 12 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult your MARUTI SUZUKI dealer.
- Do not leave the ignition switch in the “ON” position if the engine is not running as the battery will discharge.

NOTICE

If you stop the engine while the vehicle is in motion, the automatic transaxle may be damaged. Avoid stopping the engine while driving.

Engine Switch (Vehicle with Keyless Push Start System)

EXAMPLE

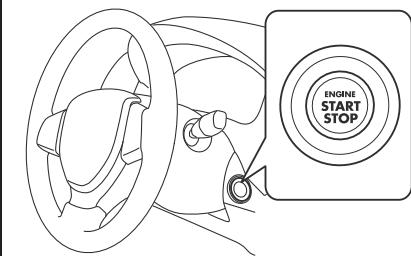

61MM0B001

LOCK (OFF)

This mode is for parking the vehicle. When this mode is selected by pressing the engine switch and then any door is opened or closed, the steering will be locked automatically.

ACC

Press the engine switch to select this ignition mode to use such electric equipment as the audio system, outside rearview mirrors and accessory socket with the engine off. When this position is selected, the information display in the instrument cluster come on. Refer to “Warning and Indicator Lights” in the “BEFORE DRIVING” section for details.

ON

• With the engine off

You can use such electric equipment as the power windows and wipers with the engine off. When this ignition mode is selected by pressing the engine switch, the information display in the instrument cluster will come on.

• With the engine on

All electric equipment is operational. The vehicle can be driven when you have selected this ignition mode by pressing the engine switch.

START

Automatic transaxle – Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after placing the gearshift lever in the “P” position and depressing the brake pedal. (If you need to re-start the engine while the vehicle is moving, shift into “N”.)

OPERATING YOUR VEHICLE

Manual transaxle – Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after shifting to "N" (Neutral) and depressing the brake and clutch pedals.

Auto Gear Shift – Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after placing the gearshift lever in the "N" position and depressing the brake pedal.

NOTE:
You do not need to keep the engine switch pressed to start the engine.

NOTICE

Do not leave the engine switch in the "ACC" or "ON" mode when the engine is not running. Avoid using the radio or other electric accessories for a long time when the engine switch is in the "ACC" or "ON" mode when the engine is not running, otherwise the battery may discharge.

NOTE:

- The steering lock may not be released if some load is acting on the steering wheel. If this happens, turn the steering wheel to the right or left to relieve it from the load before you press the engine

3-5

switch again to change to the desired ignition mode.

- In the presence of strong radio signals or noise, you may not be able to change the ignition mode to "ACC" or "ON" or to start the engine using the engine switch.

Keyless Push Start System (if equipped)


Provided the keyless push start system remote controller is within the "interior workable area" (refer to the related explanation in this section), you can use the engine switch for starting the engine and selecting an ignition mode ("ACC" or "ON"). In addition, the following functions can be used:

- Keyless entry function. Refer to "Keyless Push Start System Remote Controller" in the "BEFORE DRIVING" section for details.
- Locking and unlocking doors using a request switch. Refer to "Keyless Push Start System Remote Controller" in the "BEFORE DRIVING" section for details.
- Immobilizer (anti-theft) function. Refer to "Immobilizer System" in the "BEFORE DRIVING" section for details.

Engine Switch Illumination

The engine switch is illuminated (lit) in the following situations:

- When the engine is off and the driver's door is open, or for 15 seconds after the driver's door is closed. The illumination will fade out after the 15 seconds past.
- When the engine is off and the position lights are on. The illumination will go out when the position lights are turned off.
- When the engine is on and the position lights and/or the headlights are on. The illumination will go out when the headlights are turned off.

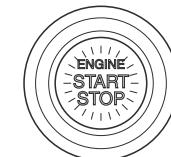

82K253

NOTE:

To save the battery, the illumination will be automatically turned off when both of the following conditions are simultaneously met:


- The headlights and position lights are turned off.
- A period of 15 minutes has elapsed after opening the driver's door.

OPERATING YOUR VEHICLE

Selection of Ignition Modes


Press the engine switch to select the "ACC" or "ON" mode as follows when you use an electric accessory or check the operation of instruments without running the engine.

- 1) Bring the keyless push start system remote controller with you and sit in the driver's seat.
- 2) Without depressing the clutch pedal, press the engine switch (1).

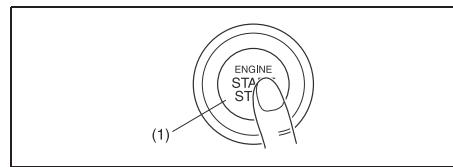

82K254


Every time you press the engine switch, the ignition mode changes as follows.

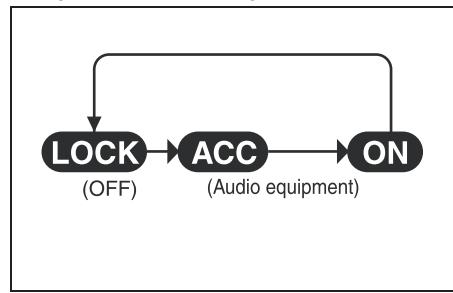

74LHM0301

If the "PUSH" indicator light blinks and the ignition modes cannot be selected

Your keyless push start system remote controller may not be sensed as being within the "interior workable area" (refer to the related explanation in this section). Try again after making sure you have the remote controller with you. If the ignition modes still cannot be selected, the battery of the remote controller may be discharged. To be able to select an ignition mode, you must then use the following method:

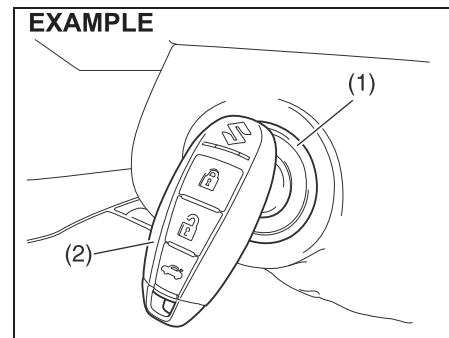

57L21131

- 1) Without depressing the brake pedal and the clutch pedal, push the engine switch (1).
- 2) Within about 10 seconds during which the "PUSH" indicator light in the instrument cluster is blinking, touch the engine switch with the lock switch end of the remote controller (2) for about 2 seconds.

NOTE:


- If you still cannot select the ignition modes, there may be some problem with the keyless push start system. Contact an authorized MARUTI SUZUKI dealer for an inspection of the system.
- The immobilizer/keyless push start system warning light come on for about 5 seconds while the "PUSH" indicator light is blinking. Refer to "Warning and Indicator Lights" in the "BEFORE DRIVING" section for details.
- You may customize the system to cause the interior buzzer to sound once for the "remote controller out of sensing range" warning. To incorporate this customization, please contact an authorized MARUTI SUZUKI dealer.
- If the battery of the remote controller is about to become completely discharged, the keyless push start system remote controller battery consumption warning light in the instrument cluster will come on for a few seconds when you press the engine switch to change the ignition mode to "ON". Refer to "Warning and Indicator Lights" in the "BEFORE DRIVING" section for details. For details on replacing the battery, refer to the "Keyless Push Start System Remote Controller" in the "BEFORE DRIVING" section.

OPERATING YOUR VEHICLE

“Remote Controller Outside” Warning

When the conditions described below are met, the system gives a “remote controller outside” warning by sounding the interior and exterior buzzers and blinking the immobilizer/keyless push start system warning light.

- Any door is opened and then closed while the remote controller is not inside the vehicle and the engine is running or the ignition mode has been changed to “ACC” or “ON” by pressing the engine switch.
- The remote controller is not inside the vehicle when you attempt to start the engine after changing the ignition mode to “ACC” or “ON” by pressing the engine switch.

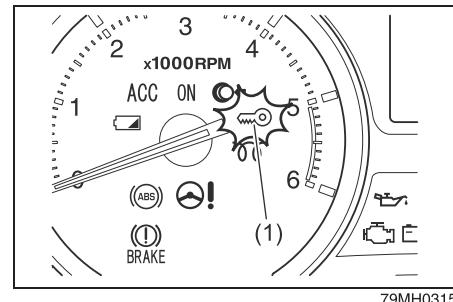


(1) Immobilizer/keyless push start system warning light (blinks)

NOTE:

- If the warning is given, locate the remote controller as soon as possible.
- Any attempt to start the engine will fail while the warning is active. Blinking of the immobilizer/keyless push start system warning light in the instrument cluster will indicate this condition. Refer to “Warning and Indicator Lights” in the “BEFORE DRIVING” section for details.
- Blinking of the immobilizer/keyless push start system warning light should stop shortly after the remote controller is brought back inside the vehicle. If they do not stop blinking, change the ignition mode to “LOCK” (OFF) by pressing the engine switch and then perform the engine starting operation.
- Always keep the remote controller with you as the driver.


Interior Workable Area for Engine Starting, Ignition Mode Selection and “Remote Controller Outside” Warning

Swift

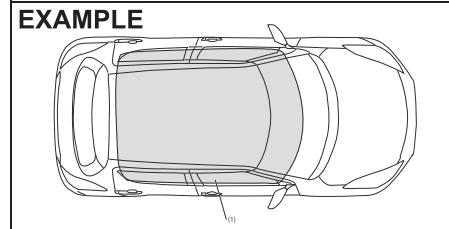

Swift Dzire

EXAMPLE

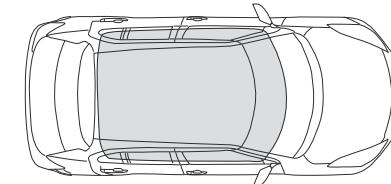

74LHT3001

(1) Interior workable area

The “interior workable area” for these functions is defined as all the interior spaces except for the space above the instrument panel.

NOTE:

- Even when the remote controller is in the “interior workable area”, if it is in any of the following conditions, you may not be able to start the engine or select the ignition modes, and the “remote controller outside” warning may be given.
 - The remote controller’s battery is low.
 - The remote controller is affected by strong radio signals or noise.
 - The remote controller is in contact with or covered by a metallic object.
 - The remote controller is in stowage like the glove box or a door pocket.
 - The remote controller is in the sun visor pocket or on the floor.
- Even when the remote controller is outside the “interior workable area”, if it is in any of the following conditions, you may be able


OPERATING YOUR VEHICLE

to start the engine or select the ignition mode. The "remote controller outside" warning may not be given at that time.

- The remote controller is outside the vehicle but very close to a door.
- The remote controller is on the instrument panel.

Parking Brake Lever

EXAMPLE

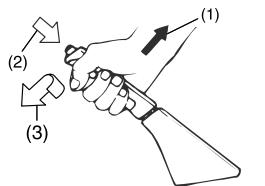

54G039

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the seats. To set the parking brake, hold the brake pedal down and pull the parking brake lever all the way up. To release the parking brake, hold the brake pedal down, pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

For automatic transaxle vehicles, always set the parking brake before moving the gearshift lever to the "P" (PARK) position. If

you park on an incline and shift into "P" before setting the parking brake, the weight of the vehicle may make it difficult to shift out of "P" when you are ready to drive the vehicle.

When preparing to drive the vehicle, move the gearshift lever out of the "P" position before releasing the parking brake.

⚠ WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by an authorized MARUTI SUZUKI dealer.

⚠ WARNING

Always set the parking brake firmly before leaving your vehicle or it may move, causing injury or damage. When parking, make sure the gearshift lever is in reverse or first gear. Remember, even though the transaxle is in gear, you must set the parking brake firmly.

⚠ WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake firmly.
- 2) Manual transaxle - turn off the engine, then shift into reverse or first gear.

Auto Gear Shift - shift into reverse or first gear and check the gear position indicator in the instrument cluster to make sure that the transaxle is engaged in 1st or reverse, then turn off the engine completely.

Automatic transaxle - shift into "P" (Park) and turn off the engine.

- 3) Check the parking brake firmly again. Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake.

When you return to your vehicle, you must remember to first set the parking brake, then remove the wheel chocks.

Parking Brake Reminder Buzzer


A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

OPERATING YOUR VEHICLE

Pedal

Manual transaxle

EXAMPLE

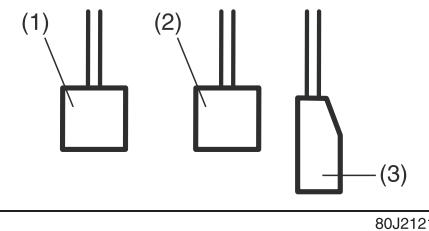

80J2121

⚠ WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

NOTICE

Do not pump the clutch pedal repeatedly. It may result in pressure built up in the clutch circuit and damage to the clutch system.

⚠ WARNING


Do not "ride" the brakes by applying them continuously or resting your foot on the pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal (3)

This pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

Automatic transaxle/Auto gear shift

EXAMPLE

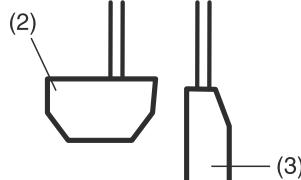

80J2122

Clutch Pedal (1) (For manual transaxle)

The clutch pedal is used to disengage the drive to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

Brake Pedal (2)

Your MARUTI SUZUKI vehicle is equipped with front and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as cold, wet, snow, etc.


⚠ WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by your MARUTI SUZUKI dealer.

OPERATING YOUR VEHICLE

Starting the Engine (Vehicle without Keyless Push Start System)

Before Starting the Engine

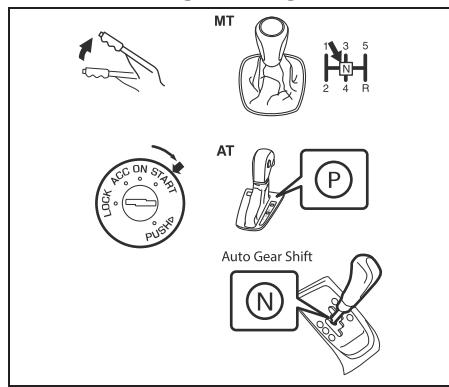

- 1) Make sure the parking brake is set fully.
- 2) Manual transaxle – Shift into “N” (Neutral) and depress the clutch pedal all the way to the floor. Hold the clutch pedal while starting the engine.
Automatic transaxle – If the gearshift lever is not in “P” (Park) position, shift into “P” (Park). (If you need to re-start the engine while the vehicle is moving, shift into “N”.)
- Auto Gear Shift – Shift into “N” (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine.

NOTE:

Automatic transaxle vehicles have a starter interlock device which is designed to keep the starter from operating if the transaxle is in any of the drive positions.

WARNING

Make sure that the parking brake is set fully and the transaxle is in Neutral (For manual transaxle & Auto Gear Shift vehicle or Park for vehicles with an automatic transaxle) before attempting to start the engine.

Starting a Cold and Warm Engine

(For Petrol Engine Model)

With your foot off the accelerator pedal, crank the engine by turning the ignition key to “START”. Release the key when the engine starts.

NOTICE

- Stop turning the starter immediately after the engine has started or the starter system can be damaged.
- Do not crank the engine for more than 12 seconds at a time. If the engine doesn't start on the first try, wait about 15 seconds before trying again.

If the engine does not start after 12 seconds of cranking, wait about 15 seconds, then press down the accelerator pedal to

1/3 of its travel and try cranking the engine again. Release the key and accelerator pedal when the engine starts.

If the engine still does not start, try holding the accelerator pedal all the way to the floor while cranking. This should clear the engine if it is flooded.

(For Diesel Engine Model)

Cold engine

Turn the ignition switch to the “ON” position and wait until the glow plug indicator goes out if it comes on. Crank the engine by turning the ignition key to “START”. Release the key when the engine starts.

NOTICE

- Stop turning the starter immediately after the engine has started or the starter system can be damaged.
- Do not crank the engine for more than 30 seconds at a time. If the engine doesn't start on the first try, wait about 15 seconds before trying again.

OPERATING YOUR VEHICLE

Warm engine

Crank the engine by turning the ignition key to "START". Release the key when the engine starts.

Caution when stopping the engine with turbocharger

When stopping the engine after climbing or high speed driving, let the engine idle for about one minute or more (if it is not prohibited) to cool down the turbocharger and engine oil. This is to prevent the engine oil from over-deteriorating. Deteriorated engine oil will damage the bearings of the turbocharger.

Restarting diesel engine after fuel-empty stop


If the engine stops and the low fuel warning light and the malfunction indicator light come on, use the following procedure:

- 1) Fill the fuel tank.
- 2) Hold the ignition key in "ON" position for 5-10 seconds to feed fuel.
- 3) Perform above engine starting procedure to start the engine.

If the malfunction indicator light still comes on after the engine started, there may be some problem with the engine. Ask your MARUTI SUZUKI dealer to have the engine inspected.


Starting the Engine (Vehicle with Keyless Push Start System)

Before Starting the Engine

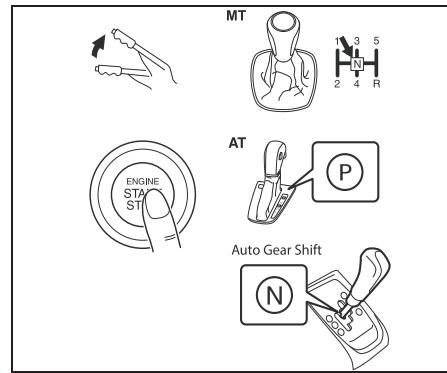

NOTE:

Automatic transaxle vehicles have a starter interlock device which is designed to keep the starter from operating if the transaxle is in any of the drive positions.

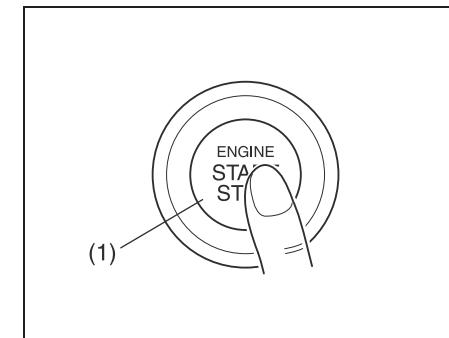

82K254

- 3) The "PUSH" indicator light in the instrument cluster will come on. Push the engine switch (1). When the engine is started, the starter motor will automatically stop.

! WARNING

Make sure that the parking brake is set fully and the transaxle is in Neutral before attempting to start the engine.

OPERATING YOUR VEHICLE

NOTICE

- Do not depress the accelerator during the engine starting procedure.
- If the engine does not respond when you try to start it with the engine switch or if the engine switch repeats cycling through the “LOCK”(OFF) - “ACC” - “ON” mode, the vehicle battery may be discharged. Check the voltage of the vehicle battery before trying again.

NOTE:

- You do not need to keep the engine switch pressed to start the engine.
- The engine of a manual transaxle vehicle will not start unless the clutch pedal is depressed.
- You should turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- Even if you fail to start the engine, the starter motor will stop turning automatically after a short time. After the starter motor has stopped or if there is some problem with the system, the starter motor will rotate only while the engine switch is being pressed.

Stopping the engine

- Depress the engine switch to stop the engine after the vehicle stopped completely.
- In case of emergency, you can stop the engine by quickly pushing the engine switch more than 3 times, or pushing and holding the engine switch more than 2 seconds while the vehicle in motion.

NOTE:

Except in emergency, do not stop the engine while the vehicle in motion. The steering and braking operation will require more efforts when the engine stopped.

Refer to “Braking” in this section.

NOTICE

Avoid stopping the engine while driving.

- If the engine has been stopped and stayed as it is for while after the engine was stopped unexpectedly or was raced before stopped, a clicking sound may be heard from around the engine when engine restarted. This is not a malfunction. In this case, always let the engine idle before stop it.

Starting a Cold and Warm Engine (For Petrol Engine Model)

With your foot off the accelerator pedal, crank the engine by pressing the engine switch to change the ignition mode to “START”.

NOTICE

**Do not crank the engine for more than 12 seconds at a time.
If the engine doesn't start on the first try, wait about 15 seconds before trying again.**

After pressing the engine switch to change the ignition mode to “START”, the starter cranks the engine for about 12 seconds before it can start the engine. If the engine fails to start at the first attempt, wait about 15 seconds, then try again while keeping the engine switch pressed while pressing down the accelerator pedal to 1/3 of its travel. Release the accelerator pedal when the engine starts.

If the engine still does not start, try holding the accelerator pedal all the way to the floor while cranking. This should clear the engine if it is flooded.

If you are unable to start the engine using this procedure, consult your MARUTI SUZUKI dealer.

OPERATING YOUR VEHICLE

(For Diesel Engine Model)

Cold engine

Depress the clutch and brake pedals fully and press the engine switch to crank the engine. If the glow plug indicator light comes on, the engine will start automatically after the glow plug indicator light goes off or 10 seconds past.

NOTICE

**Do not crank the engine for more than 30 seconds at a time.
If the engine doesn't start on the first try, wait about 15 seconds before trying again.**

Warm engine

Crank the engine by pressing the engine switch to change the ignition mode to "START".

Caution when stopping the engine with turbocharger

When stopping the engine after climbing or high speed driving, let the engine idle for about one minute or more (if it is not prohibited) to cool down the turbocharger and engine oil. This is to prevent the engine oil from over-deteriorating. Deteriorated engine oil will damage the bearings of the turbocharger.

Restarting diesel engine after fuel-empty stop


If the engine stops and the low fuel warning light and the malfunction indicator light come on, use the following procedure:

- 1) Fill the fuel tank.
- 2) Press the engine switch to change the ignition mode to "ON" for 5-10 seconds to feed fuel.
- 3) Perform above engine starting procedure to start the engine.

If the malfunction indicator light still comes on after the engine started, there may be some problem with the engine. Ask your MARUTI SUZUKI dealer to have the engine inspected.

If the "PUSH" indicator light blinks and the engine cannot be started

Your keyless push start system remote controller may not be sensed as being within the "interior workable area". Try again after making sure that you have the remote controller with you. If the engine still cannot be started, the battery of the remote controller may be discharged. You must then use the following method to be able to start the engine.

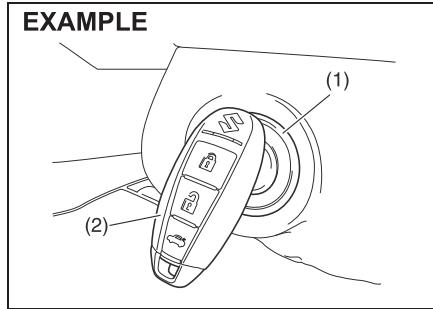

57L21131

- 1) Make sure the parking brake is set fully.
- 2) Shift to "N" (Neutral) and fully depress the clutch pedal/brake pedal. Hold the clutch and brake pedals fully depressed.
- 3) The "PUSH" indicator light in the instrument cluster will come on. Press the engine switch (1).
- 4) Within about 10 seconds of blinking of the "PUSH" indicator light in the instrument cluster, touch the engine switch with the lock switch end of the remote controller (2) for about 2 seconds.

NOTE:

- If you still cannot start the engine after several attempts using the above method, there may be a problem elsewhere, such as a low battery. Contact your MARUTI SUZUKI dealer for inspection.

OPERATING YOUR VEHICLE

- The immobilizer/keyless push start system warning light come on for about 5 seconds while the “PUSH” indicator light is blinking.
- You may customize the system to cause the interior buzzer to sound once for the “remote controller out of sensing range” warning. Please contact an authorized MARUTI SUZUKI dealer for the customization.
- If the battery of the remote controller is about to be completely discharged, the keyless push start system remote controller battery consumption warning light in the instrument cluster will come on for a few seconds when the ignition mode is changed to “ON” by pressing the engine switch. For details on replacing the battery, refer to the “Keyless Push Start System Remote Controller” in the “BEFORE DRIVING” section.

Returning the ignition mode to “LOCK” (OFF)

NOTE:

Certain problems like a fault in engine system may prevent the engine switch from going back to the “LOCK” (OFF) mode. If this happens, have the vehicle inspected by an authorized MARUTI SUZUKI dealer after doing the following:

- Lock the doors using the key to prevent theft. (The request switches and the keyless push start system remote controller cannot be used to lock them.)

- Disconnect the negative cable from the battery to prevent discharge.

“LOCK” (OFF) mode reminder buzzer

If the driver's door is opened without returning the ignition mode to “LOCK” (OFF) by pressing the engine switch, a buzzer sounds to warn you of this state.

- If you open the driver's door after pressing the engine switch to change the ignition mode to “ACC”, the interior buzzer beeps intermittently.
- The buzzer will stop sounding if you then push the engine switch twice, thus bringing it back the ignition mode to “LOCK” (OFF).


NOTE:

Whenever you leave the vehicle, make sure you have returned the ignition mode to “LOCK” (OFF) using the engine switch and then lock the doors. Without returning the ignition mode to “LOCK” (OFF), you cannot use a request switch or keyless push start system remote controller to lock the doors.

Steering lock warning buzzer

If the steering lock fails to engage due to a fault in the system when the ignition mode is turned to “LOCK” (OFF) by pressing the engine switch and then any door is opened or closed, the interior buzzer will warn you of this condition with repeated short beeps. If this happens, have the vehicle inspected by an authorized MARUTI SUZUKI dealer.

Using the Transmission Manual Transmission

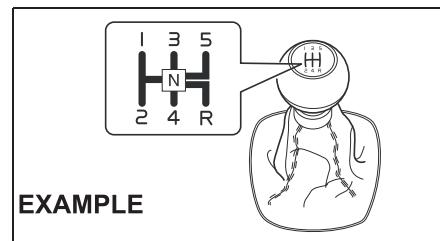

68LM324

Starting off

To start off, push the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Gear changing

All forward gears are synchronized, which provides for quiet, and easy changing. Always depress the clutch pedal all the way to the floor before shifting gears. Maintain the engine speed, so it does not get into the red zone of tachometer.

OPERATING YOUR VEHICLE

Downshifting maximum allowable speeds

For Petrol engine

Downshifting	Km/h
2nd to 1st	20
3rd to 2nd	54
4th to 3rd	80
5th to 4th	112*


For Diesel engine

Downshifting	Km/h
2nd to 1st	24
3rd to 2nd	60
4th to 3rd	92
5th to 4th	125*

***NOTE:**

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

Gearshift lever

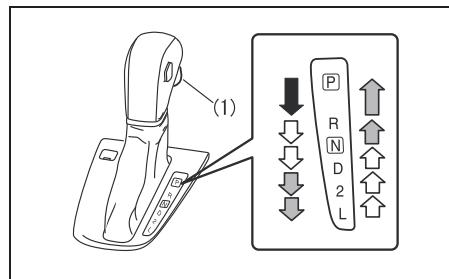

68LM324

(1) Knob button

The gearshift lever is designed so that it cannot be shifted out of the "P" position unless the ignition switch is in the "ON" position or the ignition mode is "ON" and the brake pedal is depressed.

WARNING

Always depress the brake pedal before shifting from "P" (Park) (or "N" (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.

The gearshift lever has a lock mechanism to help prevent accidental shifting. To shift the gearshift lever.

	Shift with the knob button (1) pushed in and the brake pedal depressed.
	Shift with the knob button (1) pushed in.
	Shift without the knob button (1) pushed in.

NOTE:

- Always shift the gearshift lever without pushing in the knob button (1) except when you shift from "P" to "R", from "D" to "2", from "2" to "L", from "N" to "R" or from "R" to "P". If you always push in the knob button (1) when shifting the gearshift lever, you could shift into "P", "R", "2", or "L" by mistake.
- If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.

Use the gearshift lever positions as described below:

P (Park)

Use this position to lock the transmission when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

OPERATING YOUR VEHICLE

R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

N (Neutral)

Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

D (Drive)

Use this position for all normal driving. With the gearshift lever in "D" range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

2 (Low 2)

Use this position to provide extra power when climbing hills, or to provide engine braking when going down hills.

L (Low 1)

Use this position to provide maximum-power when climbing steep hills or driving through deep snow or mud, or to provide maximum engine braking when going down steep hills.

NOTICE

When downshifting to a lower gear, make sure not to downshift at the speed faster than the maximum allowable speeds for the next lower speed, or severe engine damage can result.

WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, be sure to slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.


NOTICE

- Make sure that the vehicle is completely stationary before you shift into reverse.

NOTICE


- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and affect to smooth shifting.

4-Speed Automatic Transmission

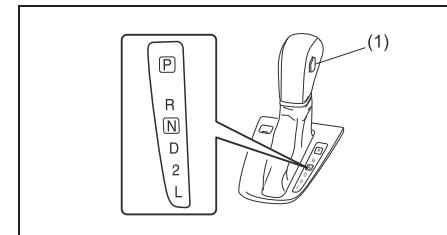

68LM324

(1) Overdrive off switch

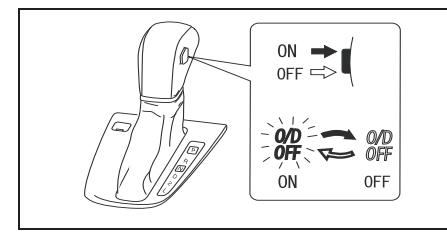

68LM324

OPERATING YOUR VEHICLE

Overdrive off switch

The transmission is a 4-speed (3-speed plus overdrive) automatic transmission. By operating the overdrive off switch, the transmission can be converted to a 3-speed automatic transmission that will not move to the overdrive position. To convert the transmission to the 3-speed mode, push in the overdrive off switch and release it.

To return the transmission to the 4-speed mode, push in the overdrive off switch again.

When the ignition switch is turned to the "ACC" position or the engine switch is pressed to change the ignition mode to "ACC", the transmission in the 3-speed mode is converted to the 4-speed mode automatically.]

The 3-speed mode is suitable for the following driving conditions:

- Driving on hilly, winding roads
 - You can drive more smoothly with less frequent gear changing
- Going down a steep hill
 - Some engine braking is provided

NOTE:

If you move the gearshift lever to a lower gear while driving faster than the maximum allowable speed for the lower gear, the transaxle will not actually downshift until your speed drops below the maximum speed for the lower gear.

3-17

NOTICE

Be sure to take the following precautions to help avoid damage to the automatic transmission :


- Make sure that the vehicle is completely stationary before shifting into "P" or "R".
- Do not shift from "P" or "N" to "R", "D", "2", or "L" when the engine is running above idle speed.
- Do not rev the engine with the transmission in a drive position ("R", "D", "2", or "L") and the front wheels not moving.

NOTICE

- Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.

If You Cannot Shift Automatic transmission Gearshift Lever Out of "P" (PARK)

Automatic transmission

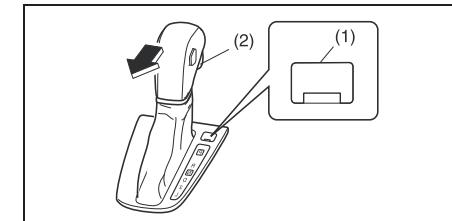

Vehicles with an automatic transmission have an electrically operated parklock feature. If the vehicle's battery is discharged, or there is some other electrical failure, the automatic transmission cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.

- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- 3) Make sure the key is in the "ON" or "ACC" position, or the ignition mode is "ON" or "ACC".
- 4) Remove the cover (1) over the button.
- 5) With the release button (1) pushed by the key or the flat end rod, push the

OPERATING YOUR VEHICLE

knob button (2) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to your dealer for repair.

Auto Gear Shift

Auto Gear Shift is a 5-speed forward/reverse transaxle.

Auto Gear Shift has the basic features of conventional manual transaxle, but clutch operation and transaxle gear shifting are controlled electronically.


NOTICE

Do not depress both the brake pedal and accelerator pedal simultaneously. This can cause damage or overheating to the clutch.


NOTE:

When you open the driver's door, the Auto Gear Shift systems run automatically and you may hear an operating noise. This sound does not indicate a malfunction.

The features are as follows:

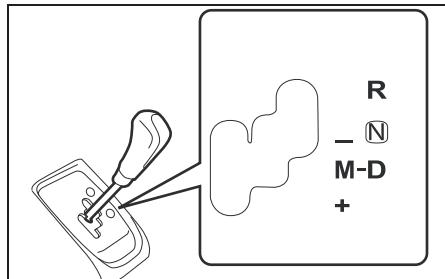

67LM3002

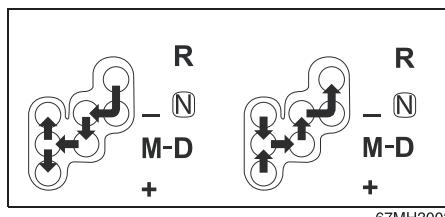

67MH3003

Depress brake pedal indicator



76MH0A047

This light will come on if you do not depress the brake pedal in the following situations.

- When starting the engine.
- When the engine is on and the gearshift lever is shifted from "N" position to "D", "M" or "R" position.
- When the ignition switch is in the "ON" position and the engine is off, the gearshift lever is shifted into any position.

This light will also come on if one of the gears cannot be engaged and the system is unable to re-try shifting when you shift the gearshift lever from "N" position to "D", "M" or "R" position.

Starting the engine

When starting the engine, always place the gearshift lever in the "N" position and depress the brake pedal firmly. The engine cannot be started unless the gearshift lever is in the "N" position and the brake pedal is depressed.



76MH0A056

Clutch operation

You can select either the Drive (D) mode or the Manual (M) mode. Since this vehicle controls clutch operation electronically in either mode, you do not need to operate the clutch.

Creeping function

This vehicle has a creeping function that helps the vehicle to start smoothly by

OPERATING YOUR VEHICLE

engaging the clutch. When the gearshift lever is in any of the positions "D", "M" or "R", and you release your foot from the brake pedal, the vehicle starts slowly without depressing the accelerator pedal. The creeping function is disabled if you depress the brake pedal or pull up the parking brake lever. Creep is not possible in manual mode with 2nd gear engaged.

NOTE:

If the driver's door is opened and/or the parking brake lever is engaged with the gear in the "M", "D" or "R" position, the creeping function will not operate.

Parking and Stopping the vehicle

Auto Gear Shift does not have a parking position. The vehicle can be parked with the gearshift lever at "D" or "R" position. Remember, even though the transaxle is in gear, you must set the parking brake firmly.

NOTICE


A buzzer will sound continuously if the vehicle is operated with the gearshift lever in-between of each shift positions. The vehicle will become inoperative if you continue to operate the vehicle with the gearshift lever in-between shift positions.

Drive (D) mode

When the Drive (D) mode is activated, the most appropriate gear position is automatically selected upon operation of the accelerator pedal and variation of vehicle speed.

Normal driving:

- 1) Start the engine as instructed in "Starting the engine" in this section.
- 2) With your foot on the brake pedal, shift the gearshift lever to the "D" position. When the gearshift lever is shifted to the "D" position, the gear will be shifted to 1st.

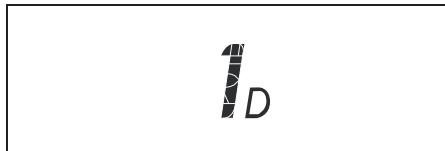

76MH0A057

NOTE:

- If 1st gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "D" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate a malfunction.
- The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;

– If you shift the gearshift lever from the "N" to the "D" position without depressing the brake pedal

– If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "D" again.

- 3) Release the parking brake and brake pedal.
- 4) Depress the accelerator pedal slowly.

⚠ WARNING

- While driving the vehicle, do not shift the gearshift lever to the "N" position. The engine brake may not work and you may get involved in an unexpected accident. If you return the gearshift lever from "N" to "D" because of unintended shifting, the gear position will be shifted according to the current vehicle speed.
- Always keep your foot on the brake pedal while stopped with the engine running. This operation prevents the vehicle from moving due to unintended activation of the creeping function.

OPERATING YOUR VEHICLE

NOTICE

If the gearshift lever cannot shift into any position, or the gear is changed to "N" position automatically when the vehicle speed becomes less than 10 km/h, there may be a systematic malfunction. In this case, ask your MARUTI SUZUKI dealer to inspect the Auto Gear Shift system as soon as possible.

NOTICE

Do not operate the system as described below. The life cycle of the clutch may be reduced.

- Using the accelerator pedal to hold the vehicle on an uphill slope with the gearshift lever in the "D" or "M" position. If you perform this operation for a certain period of time, a warning buzzer will sound.
- Shifting the gearshift lever to the "D", "M" or "R" position while racing the engine.
- Driving at low speed using a high gear.
- Holding the vehicle on an uphill slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.

Starting off on an uphill/downhill:

Uphill

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- 2) Shift the gearshift lever to the "D" position while depressing the brake pedal. Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
- 3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Downhill

- 1) Depress the brake pedal and shift the gearshift lever to the "D" position. Make sure that the gear is in 1st by checking the gear position indicator.
- 2) Release the brake pedal and depress the accelerator pedal slowly. Even if the accelerator pedal is not depressed, the clutch will be engaged when the vehicle speed increases.

Using engine braking:

When driving on a downhill slope, downshifting is recommended. So you can use engine braking.


By placing the gearshift lever in the "M" position, the Manual (M) mode is selected, and you can shift to a lower gear manually. For details of downshift operation, refer to "Upshift and downshift" in the "Manual (M) mode".

Manual (M) mode

The gears are not shifted automatically. To shift the transaxle, the driver must operate the gearshift lever to the "+" or "-" direction. As for conventional manual transaxle vehicles, releasing the accelerator pedal a little may help the transaxle to shift smoothly.

Upshift and downshift:

Upshifting

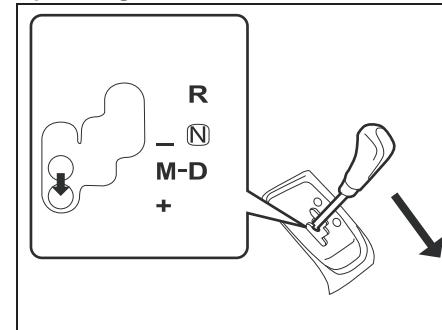


67LM3004

3-20


OPERATING YOUR VEHICLE

Pull the gearshift lever to the "+" direction and release it. Every time the lever is operated, the transaxle is upshifting 1 step in the order of 1st → 2nd → 3rd → 4th → 5th gear.

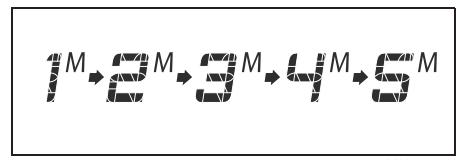


76MH0A059

Downshifting

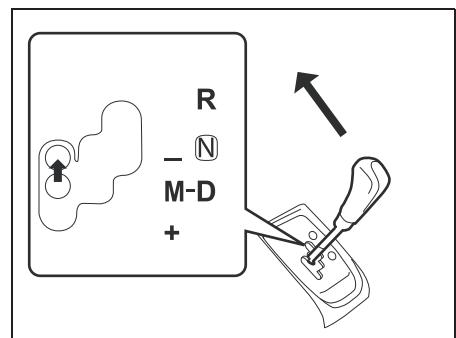

67LM3005

Push the gearshift lever to the "—" direction and release it. Every time the lever is operated, the transaxle is downshifted in the order 5th → 4th → 3rd → 2nd → 1st gear.

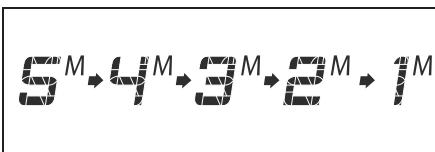

76MH0A061

The gear position is displayed on the gear position indicator. The gear position indicator shows the transaxle gear position. Before starting off, always check the gear position indicator to make sure that the transaxle is engaged in 1st or reverse, then depress the accelerator pedal. It is possible to start vehicle in 2nd gear using manual mode, from stop condition.

NOTE:

- Always use 1st gear while starting off on an uphill slope, otherwise you may damage the clutch.

NOTE:

- To downshift smoothly, the engine runs fast in some cases. This is done intentionally by the system and is not a malfunction.
- When driving down a hill, downshift and use the engine braking appropriately. If necessary, continuous downshifting is possible. However, if downshifting more than 3 steps, gear shifting will take more time.
- When the gear is shifting, a noise can be heard in some case. This is not a malfunction.

! WARNING

- Be careful when accelerating, upshifting, downshifting or braking on a slippery surface. Sudden acceleration or engine braking could cause the vehicle to spin or skid. While starting off on a slippery or snowy roads, please use 2nd gear (if required).
- To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and fail.
- While driving the vehicle, do not shift the gearshift lever to "N" position. The engine brake may not work and you may get involved in an unexpected accident. If you return the gearshift lever from "N" to "M" because of unintended shifting, the gear position will be shifted according to the current vehicle speed.
- Do not apply the parking brake while driving. Otherwise, it could cause a skid and you may get involved in an unexpected accident.

OPERATING YOUR VEHICLE

NOTICE

- If the gearshift lever cannot shift into any position, or the gear is changed to "N" position automatically when the vehicle speed becomes less than 10 km/h, there may be a systematic malfunction. In this case, ask your MARUTI SUZUKI dealer to inspect the Auto Gear Shift system as soon as possible.
- The manual (M) mode does not upshift even if the engine speed reaches the rev-limit.
- The system will not allow shifting up or down to a gear that would cause engine over-revving or under-revving.
- If frequently driving at low speed using a high gear position, the life cycle of the clutch may be reduced.
- Frequent downshifting (more than 3 positions consecutively) causes the reduction of transaxle life.

Starting off:

- 1) Start the engine as instructed in "Starting the engine" in this section.
- 2) With your foot on the brake pedal, shift the gearshift lever to the "M" position. When the gearshift lever is shifted to the "M" position, the gear will be shifted to 1st. Before starting off, always make sure that the intended gear is engaged by checking the gear position indicator, then depress the accelerator pedal.

NOTE:

- If 1st gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "M" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate a malfunction.
 - The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;
 - If you shift the gearshift lever from the "N" to the "M" position without depressing the brake pedal
 - If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "M" position again a few seconds later.
- 3) Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.

⚠ WARNING

Always keep your foot on the brake pedal or pull up the parking lever while stopped with the engine running. These operations prevent the vehicle from starting due to unintended activation of the creeping function.

NOTICE

Do not operate the system as described below. The life cycle of the clutch may be reduced.

- Using the accelerator pedal to hold the vehicle on an uphill slope operation with the gearshift lever in the "M" or "D" position. If you perform this operation for a certain period of time, a warning buzzer will sound.
- Shifting the gearshift lever to the "M", "D" or "R" position while racing the engine.
- Driving at low speed using a high gear.
- Stopping on a slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.

Starting off on an uphill/downhill slope:

Uphill

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- 2) Shift the gearshift lever to the "M" position while depressing the brake pedal. Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
- 3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move,

OPERATING YOUR VEHICLE

release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch. In case the warning buzzer is on, shifting to 2nd gear will not be possible in manual mode. Always use 1st gear while starting off on an uphill slope, otherwise you may damage the clutch.

Downhill

- 1) Depress the brake pedal and shift the gearshift lever to the "M" position. Check the gear position indicator to make sure that the gear is in 1st.
- 2) Release the brake pedal and depress the accelerator pedal slowly. Even though the accelerator pedal is not depressed, the clutch will be engaged when the vehicle speed increases.

Backing up

After the vehicle has stopped completely, depress the brake pedal and shift the gearshift lever to the "R" position. Depress the accelerator pedal slowly as when starting off in 1st gear. Before backing up, make

3-23

sure that reverse gear is selected by checking the gear position indicator.



76MH0A062

NOTE:

- If reverse gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "R" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate a malfunction.
- The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur:
 - If you shift the gearshift lever from the "N" to the "R" position without depressing the brake pedal
 - If the system is unable to re-try shifting You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "R" position again a few seconds later.
- The system will not allow shifting to the "R" position if the vehicle speed is over about 3 km/h (2 mph). If the gearshift lever is operated under this condition,

the "N" indicator in the instrument cluster will blink. However, when the vehicle speed drops below about 3 km/h (2 mph), the gear will be shifted to reverse. Make sure that the vehicle has stopped completely before shifting to the "R" position.

NOTICE

On a downhill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Stopping

The vehicle can be stopped by depressing the brake pedal regardless of the gear position. This is because the clutch is automatically disengaged to prevent the engine from stopping.

- If the gearshift lever is in the "D" position, the gear will be downshifted to 1st when the vehicle stops.
- If the gearshift lever is in the "M" position, the gear will be downshifted to 1st when the vehicle stops.

OPERATING YOUR VEHICLE

⚠ WARNING

- When stopping, for example, at a traffic light, be sure to depress the brake pedal firmly. For your safety, apply the parking brake, too, when stopping on a hill.
- When racing the engine, make sure that the gear is in the “N” position by checking the gear position indicator. If the accelerator is operated with the gear in any other position, the vehicle may move resulting in an unexpected accident.
- Do not leave your vehicle unattended while the engine is running.
- When leaving the vehicle, stop the engine and park the vehicle with a gear engaged. Remember, even though the transaxle is in gear, you must set the parking brake firmly. If you need to leave the vehicle with the engine running, apply the parking brakes firmly, and shift the gearshift lever to the “N” position and confirm the neutral position by checking the gear position indicator. However basically don't leave the vehicle with the engine running. Otherwise, the vehicle may move unexpectedly and may cause an accident.

NOTICE

- On a slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.
- If the gearshift lever is operated more than necessary, the system may not allow operation of the gearshift lever for a certain period of time, and the gear may not be shifted appropriately. Therefore, do not operate the gearshift lever if not necessary.

Parking

Unlike an automatic transaxle, Auto Gear Shift does not have a parking position. The vehicle can be parked with the gearshift lever at “D” or “R” position. Remember, even though the transaxle is in gear, you must set the parking brake firmly.

- 1) Apply the parking brake and the brake pedal firmly.
- 2) While depressing the brake pedal, shift the gearshift lever to the “R” position on a downhill slope, and to the 1st position in the drive (D) mode or the “M(1)” position in the manual (M) mode on an uphill slope and confirm the gear posi-

tion by checking the gear position indicator.

- 3) Stop the engine completely.
- 4) In the case of uphill/downhill slope, release the parking brake and brake pedal slowly in order to check the gear is engaged.
- 5) After check the vehicle stopped by the gear engaged, Apply the parking brake and the brake pedal firmly again.
- 6) Get out of the vehicle and put chocks under the wheels.

When you return to your vehicle, you must remember to remove the wheel chocks.

NOTE:

- After the engine is stopped or ignition switch is OFF, the gear in the transaxle does not change even if you shift the gearshift lever in any position. Always shift the gearshift lever before turn ignition switch OFF.
- Check the transaxle gear position by looking at the gear position indicator, then turn the ignition switch off to stop the engine.

OPERATING YOUR VEHICLE

WARNING

- If the gear is not engaged properly and completely before the ignition switch is turned off, the vehicle may not be parked with the gear engaged. Always confirm the gear position by checking the gear position indicator when parking. Remember, even though the transaxle is in gear, you must set the parking brake firmly.
- On a downhill slope, the gear should be put in reverse, and in 1st gear on an uphill slope. In the case of uphill/downhill slope, after check the vehicle stopped by the gear engaged, put chocks under the wheels. Otherwise, the vehicle may move, and cause an unexpected accident. If the gear is left in the "N" position, the vehicle cannot be parked with a gear engaged.

Parking cancel

Depress the brake pedal, turn the ignition switch to the "ON" position, and shift the gearshift lever to the "N" position. The gear will be disengaged.

Warning functions

A warning buzzer will sound or the indicator will blink under the following conditions.

Warning buzzer

- The clutch is heated due to excessive load.
- The creeping function is being activated for a long period of time.

NOTICE

In the above cases, pull over to the side of the road and stop the engine, and then ask your MARUTI SUZUKI dealer to inspect your vehicle. Otherwise, the clutch disc may be damaged.

- The ignition switch is turned to the "LOCK" position with the gear in 2nd, 3rd, 4th or 5th. In this case, turn the ignition switch to the "ON" position and shift the gearshift lever in the "N" position, shift it to the "D" or "M" or "R" position, then turn the ignition switch to "LOCK".
- During a stop, the driver's door is opened with the gearshift lever in the "R", "D" or "M" position while the engine is running.

"N" indicator blinking

When the gear indicator lamp blinks "N", you should depress the brake pedal and shift the gearshift lever to "N" position.

"1st" indicator blinking

When the gear indicator lamp blinks "1st", you should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "D" or "M" position again a few seconds later.

"R" indicator blinking

When the gear indicator lamp blinks "R", you should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "R" position again a few seconds later.

Parking Sensors (if equipped)

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumpers. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obstacle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.
- The parking sensor function can be used when the ignition switch is turned to the "ON" or the engine switch is pressed to change the ignition mode to "ON", the gearshift lever is in the "R" position and the parking sensor switch is in the "ON" position. This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

OPERATING YOUR VEHICLE

WARNING


- The parking sensor warns you of obstacles with buzzers. However, you must still pay full attention yourself while driving.
- The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.

NOTICE

Parking sensors are only for driver's assistance.

Sensor Locations Swift


EXAMPLE

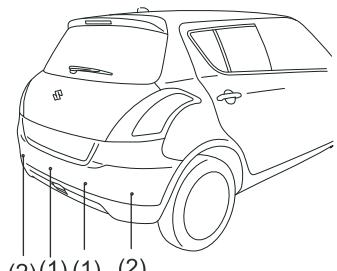

74LHM0304

Swift Dzire

EXAMPLE

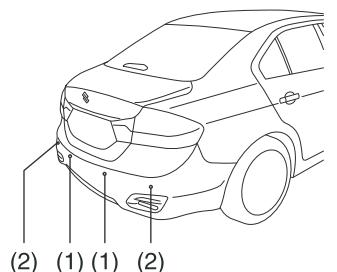

74LHM0305

- (1) Rear center sensors (2 places)
(2) Rear corner sensors (2 places)

Working sensors

The sensors that work depends on the position of the gearshift lever as follows:

Gearshift lever position	Manual transaxle		Automatic transaxle	
	R	N, 1st – 5th	R	N, D, 2 or L
Rear sensors	On	Off	On	Off
Corner	On	Off	On	Off


NOTICE

- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by an authorized MARUTI SUZUKI dealer.


OPERATING YOUR VEHICLE

Approximate areas where obstacles can be detected

Swift

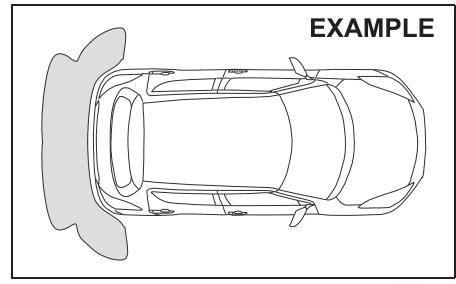

Swift Dzire

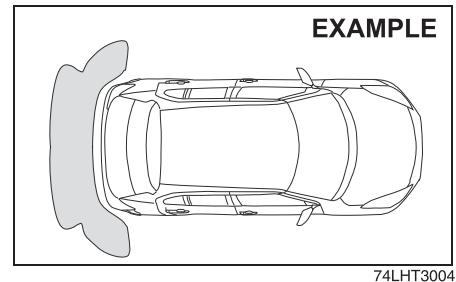

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect an obstacle up to about 1.5 m (5 ft) from the rear of vehicle.

⚠ WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
 - Sensors are covered with mud, ice or other materials. (Such materials must be removed for normal operation.)
 - Sensors are wet from water splashes or heavy rain.
 - Sensors are covered by a hand, sticker, accessory, etc.
 - There is an accessory or other object attached within the sensor's sensing area.
 - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
 - The height of the bumper is changed due to alteration to the suspension or other causes.
 - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
 - The vehicle is on a rough surface, slope, gravel road or grass field.
 - The vehicle is at a steep angle.
 - Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
 - Obstacles are too close to the sensors.

(Continued)

⚠ WARNING

- Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material like wire netting and ropes.
 - Square-shaped curbstones or other objects with sharp edges.
 - Tall objects with a large upper part like a road sign.
 - Low-profile objects such as curbstones.
 - Sound-absorbing objects such as cotton and snow.
 - Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
 - Obstacles are too close to the sensors.
 - Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material like wire netting and ropes.
 - Square-shaped curbstones or other objects with sharp edges.

(Continued)

OPERATING YOUR VEHICLE

WARNING


(Continued)

- Tall objects with a large upper part like a road sign.
- Low-profile objects such as curbstones.
- Sound-absorbing objects such as cotton and snow.

NOTE:

- Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.
- The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.

How to Use the Parking Sensor Parking sensor switch

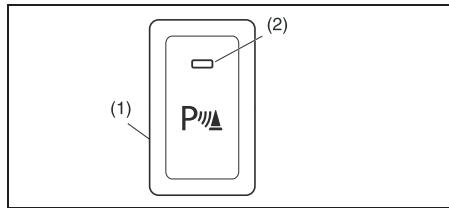

79MH0309

- (1) Parking sensor switch
- (2) Indicator

- Turn the ignition switch to the "ON" position or press the engine switch to change

the ignition mode to "ON" with the parking sensor switch in the "ON" position.

- Push the switch again and it stays in; this is the OFF position. The indicator in the switch goes out and the parking sensor is deactivated.

Switch position	State
EXAMPLE 	ON • When the indicator light is on and all necessary conditions are met, system becomes ready for operation.
EXAMPLE 	OFF • The system does not operate. Push the switch to turn off the indicator if you do not wish to use the parking sensor.

NOTE:

- If you push the parking sensor switch from the "OFF" to "ON" position when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to "ON", the inside buzzer sounds.
- When the gearshift lever is shifted to the "R" (Reverse) position with the system ON, a buzzer will sound once.

Obstacle Indication by Parking Sensor

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound.

- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.
- Warnings when obstacles are detected by corner sensors

Distance (approx.)	Buzzer
45 – 60 cm (18 – 24 in.)	Short beeps at short intervals
35 – 45 cm (14 – 18 in.)	Short beeps at very short intervals
Less than 35 cm (14 in.)	Continuous beep

- Warnings when obstacles are detected by center sensors

Distance (approx.)	Buzzer
60 – 150 cm (24 – 59 in.)	Short beeps at long intervals
45 – 60 cm (18 – 24 in.)	Short beeps at short intervals
35 – 45 cm (14 – 18 in.)	Short beeps at very short intervals
Less than 35 cm (14 in.)	Continuous beep

OPERATING YOUR VEHICLE


Warning and Indicator Messages

If there is a problem or warning regarding the parking sensor system, a buzzer and the status of the indicator on the parking sensor inform it. Follow its instruction.

- The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be a problem with the parking sensor system. Have your vehicle inspected by an authorized MARUTI SUZUKI dealer.

The indicator does not come on when the parking sensor switch is pressed. The indicator goes off while operating. There may be a problem with the parking sensor system. Have your vehicle inspected by an authorized MARUTI SUZUKI dealer.

Braking

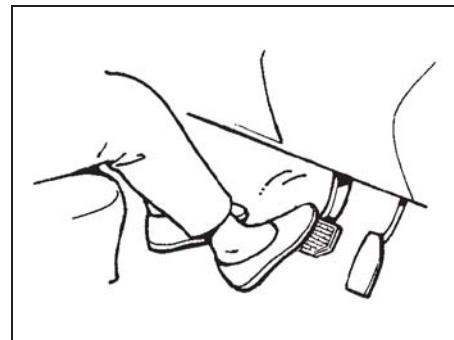

60G165S

3-29

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h (37 mph) will be approximately 4 times greater than the braking distance needed at 30 km/h (19 mph). Start to brake the vehicle when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

⚠ WARNING

If water gets into the brake drums, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-Assisted Brakes (if equipped)

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

⚠ WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake Assist System (if equipped)

When you slam the brakes on, the brake assist system judges as an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

OPERATING YOUR VEHICLE

Anti-Lock Brake System (ABS) (if equipped)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal moves a little while the ABS is operating.

NOTE:

The ABS will not work if vehicle speed is under about 10 km/h (6mph).

⚠ WARNING

- On some types of loose surfaces (such as gravel, snow-covered roads, etc.) the stopping distance required for an ABS-equipped vehicle may be slightly greater than for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tyres are able to "plow" the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.

(Continued)

⚠ WARNING

(Continued)

- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.
- In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive faster than conditions will safely allow.



(1)



(2)

63J081

- (1) ABS warning light
(2) Brake system warning light

⚠ WARNING

- If the ABS warning light (1) on the instrument panel comes on and stays on while driving, there may be a problem with the ABS system. Contact your MARUTI SUZUKI dealer to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the Brake system warning light (2) on the instrument panel simultaneously stays on or comes on when driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Contact your MARUTI SUZUKI dealer to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

OPERATING YOUR VEHICLE

How the ABS Works


A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle after a stop, you may hear a momentary motor or clicking noise as the system resets or checks itself.

⚠ WARNING

The ABS may not work properly if tyres or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tyres or wheels, use only the size and type specified in this owner's manual.

DRIVING TIPS

DRIVING TIPS

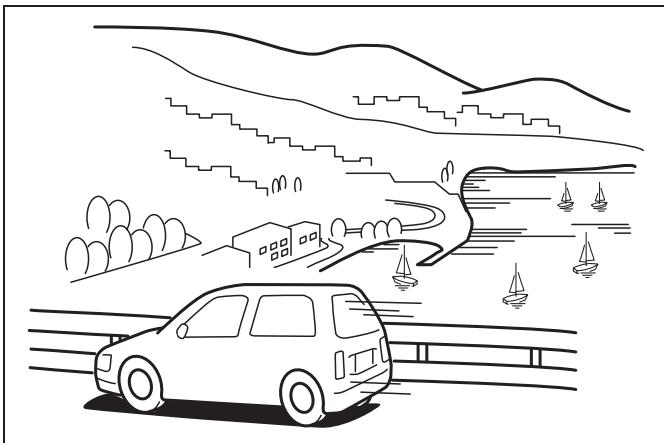

60G409

Running-in	4-1
Catalytic Converter	4-1
Improving Fuel Economy	4-2
Highway Driving	4-3
Driving on Hills	4-3
Driving on Slippery Roads	4-4
Driving on Wet Roads	4-5
Do's & Don'ts for Safe Driving	4-6
Margin for Safety	4-8

DRIVING TIPS

EXAMPLE



74LHM0401

WARNING

- **WEAR YOUR SEAT BELTS AT ALL TIMES.** Even though air bags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to the "Seat Belts and Child Restraint Systems" section for instructions on proper use of the seat belts.
- Never drive while under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated, or under stress.

Running-in


NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the initial 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km of driving.
- Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.
- Do not tow a trailer.

Catalytic Converter

EXAMPLE

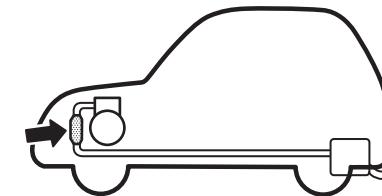


74LHM0402

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalyst. This may result in permanent heat damage to the catalyst and other vehicle components.

DRIVING TIPS

NOTICE
To minimize the possibility of catalyst or other vehicle damage:
<ul style="list-style-type: none">• Maintain the engine in the proper operating condition.• In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.• Do not turn off the engine or interrupt the ignition when the transaxle is in gear and the vehicle is in motion.• Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.• Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.• Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.• Do not allow the fuel tank to get near the empty level.• Avoid driving your vehicle at excessively high engine speeds, in or around the red zone of the tachometer (if equipped).

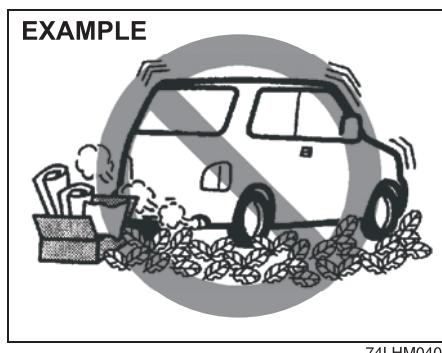

WARNING
Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving Fuel Economy

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you are to wait for more than a minute while you are parked, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

Avoid sudden acceleration

Sudden acceleration starting from rest or while driving will consume fuel unnecessarily and shorten engine life. Start off slowly.

Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a slow, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.


Keep a steady cruising speed

Keep as constant a speed as road and traffic conditions will permit.

DRIVING TIPS

Keep the air cleaner clean

EXAMPLE

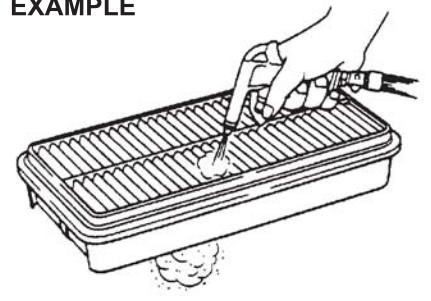

74LHM0404

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum

Heavier the load, more fuel the vehicle consumes. Take out any luggage or cargo when it is not necessary.

Keep tire pressures correct

Underinflation of the tires can waste fuel due to increased running resistance of the tires. Keep your tires inflated to the correct pressure shown on the label on the driver's door lock pillar.


Highway Driving

When driving at high speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tires due to a water film forming between them. Steering or braking the vehicle while hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

Driving on Hills

EXAMPLE

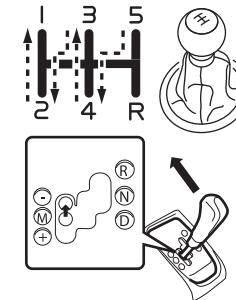

74LHM0405

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to next lower gear.

DRIVING TIPS

▲ WARNING

Try not to hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

While moving uphill/gradient from a stand still condition


- Apply the parking brake firmly so that the vehicle does not roll backwards.
- Depress the Clutch pedal and Shift the gearshift lever to 1st Select position.
- Do not slip the clutch.
- When ready to start, press accelerator pedal and slowly release the clutch pedal simultaneously. When the vehicle starts to move, gradually release the parking brake.

NOTICE

When descending down a hill, NEVER turn the ignition key to the "LOCK" position. Emission control system damage may result.

Driving on Slippery Roads

EXAMPLE

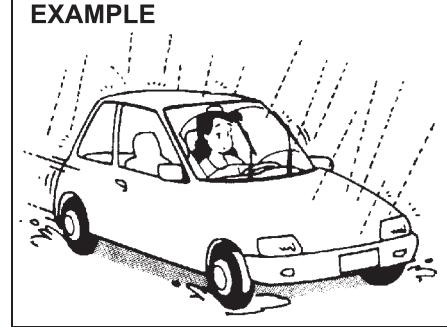

Under wet road conditions you should drive at a lower speed than on dry roads due to possible slippage of tires during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Tire Chains

Tire chains should only be used if they are needed to increase traction or are required by law. Make sure that the chains you use are the correct size for your vehicle's tires. Also make sure that there is enough clearance between the fenders and the chains as installed on the tires.

Install the chains on the front tires tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

DRIVING TIPS

If Your Vehicle Gets Stuck

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

- 1) Shift the transaxle back and forth between a forward range (or first gear for manual transaxle) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting.
Do not race the engine. Excessive wheel spin will cause the tires to dig deeper, making it more difficult to free the vehicle.
- 2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult your authorised Maruti Suzuki workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by a towing cable or chain secured to the towing hook either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame Hooks" in the "OTHER CONTROLS AND EQUIPMENT" section.

WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transaxle damage.

WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.




- Make sure your tires are in good condition and always maintain the specified tire pressure. Refer to "Tires" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tires other than those specified by MARUTI SUZUKI. Never use different sizes or types of tires on the front and rear wheels. For information regarding the specified tires, refer to the Tire Information Label located on the driver's door lock pillar.
- Never use oversized tires or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tires may also rub against the vehicle body over bumps, causing vehicle damage or tire failure.
- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If they are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Driving on Wet Roads

NOTICE

- When driving on wet roads, avoid driving through large amount of standing water on the road. Large amount of water entering the engine compartment may cause damage to the engine and or electrical components.
- If stuck in deep water, do not start the engine.
- Water is incompressible substance, water inside engine is harmful to the engine.

DRIVING TIPS

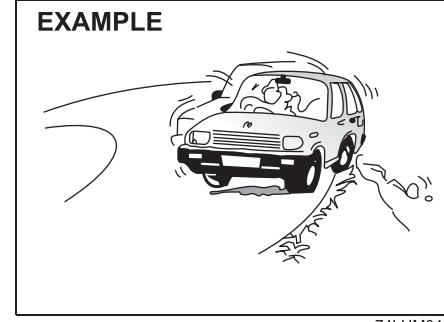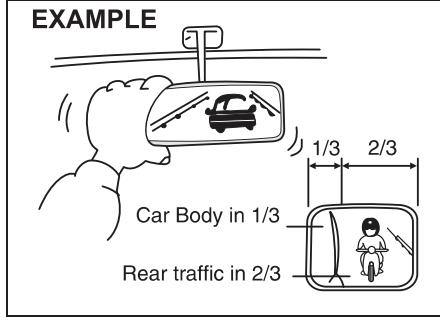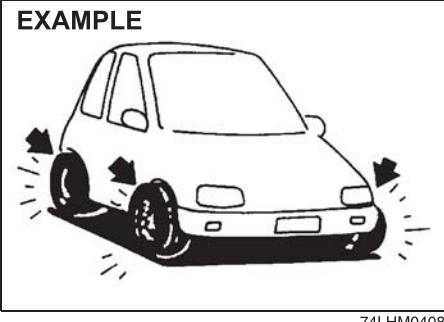

Do's and Dont's for Safe Driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

Starting


- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.

- 3) Before moving, look around your vehicle to confirm safety.
- 4) Don't accelerate suddenly, since it is dangerous and wastes fuel.


General driving

- 1) Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
- 2) Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.
- 3) Turn ON the turn signal at least 30 meters before making a turn or changing the lane so as to not be hit.
- 4) Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.
- 5) When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.
- 6) Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
- 7) Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
- 8) Higher the speed, narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatigued.

DRIVING TIPS

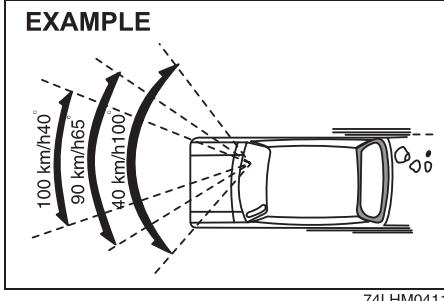


- 9) Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
- 10) When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

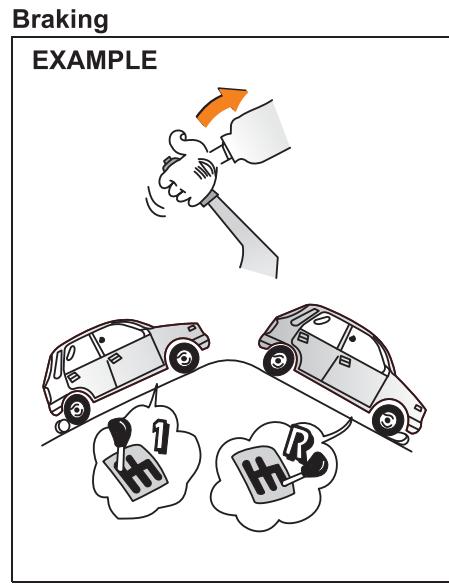

- 1) Use the parking brake firmly when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety and confirm the gear position by checking the gear position indicator before turn ignition switch OFF. Remember, even though the transaxle is in gear, you must see the gear, you must set the parking brake firmly.

- 2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tyres are worn out as they skid more.

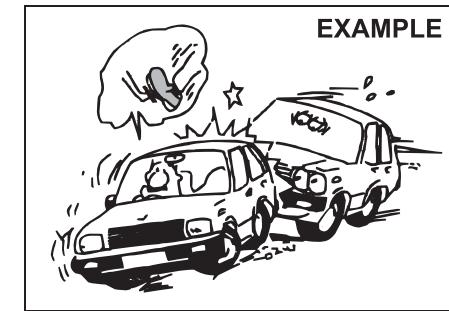

Use foot brake in three stages

1. Warn the vehicle behind you
 2. Gradually apply the brake.
 3. Bring the vehicle to a halt.
- 3) When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.


Long distance driving

- 1) Be sure to perform safety checks before starting a trip.
- 2) Take rest at regular intervals to prevent accidents which may occur due to feeling sleepy or tired.

DRIVING TIPS

Night time driving

EXAMPLE

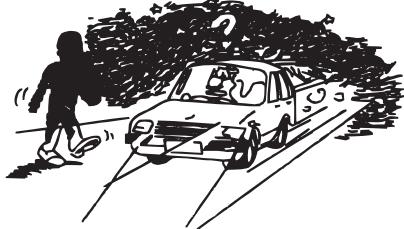

74LHM0414

- 1) Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
- 2) Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicle-to-vehicle distance.

EXAMPLE



74LHM0415

- 3) Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.
- 4) Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.

EXAMPLE



74LHM0416

Margin for Safety

It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- Observe traffic rules and regulations.

Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience.

Follow the do's and don'ts listed, and driving will never be the same again.

OTHER CONTROLS AND EQUIPMENT

OTHER CONTROLS AND EQUIPMENT

Heating and Air Conditioning System (if equipped)	5-1
Manual Heating and Air Conditioning System (if equipped)	5-2
Automatic Heating and Air Conditioning System (Climate Control) (if equipped)	5-5
Radio Antenna	5-9
Installation of Radio Frequency Transmitters	5-9
Audio System (if equipped)	5-10
Fuel Filler Cap	5-47
Engine Bonnet	5-48
Sun Visor	5-48
Interior Light	5-49
Luggage Compartment Light (if equipped)	5-50
Accessory Socket (if equipped)	5-50
Assist Grips	5-51
Glove Box	5-51
Cup Holder and Storage Area	5-51
Front Seat Back Pocket (if equipped)	5-52
Floor Mats (if equipped)	5-52
Shopping Hook (if equipped)	5-53
Luggage Area Cover (if equipped)	5-53
Frame Hooks	5-53
Luggage Carpet Hook (if equipped)	5-55

OTHER CONTROLS AND EQUIPMENT


Heating and Air Conditioning System (if equipped)

There are two types of heating and air conditioning systems as follows:

- Manual Heating and Air Conditioning System (if equipped)
- Automatic Heating and Air Conditioning System (Climate Control) (if equipped)

Air Outlet

EXAMPLE

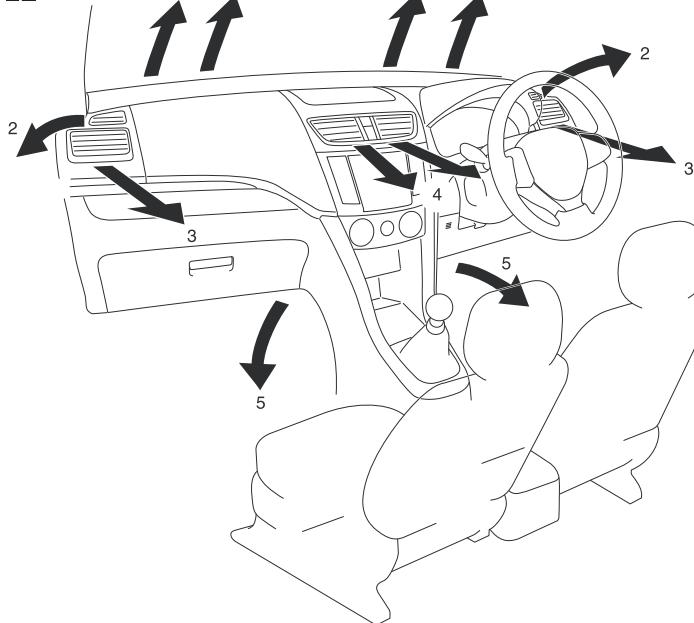


74LHT0501

1. Windshield defroster outlet
2. Side defroster outlet
3. Side outlet
4. Center outlet
5. Floor outlet

OTHER CONTROLS AND EQUIPMENT


Side outlet

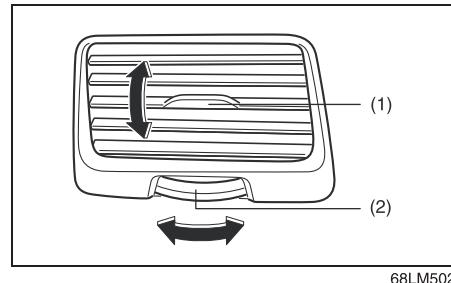

68LM502

Move the knob (1) vertically and the dial (2) horizontally, to adjust the direction of airflow as desired. When "Open", air comes out from the side outlets regardless of the airflow selector position.

Center outlet

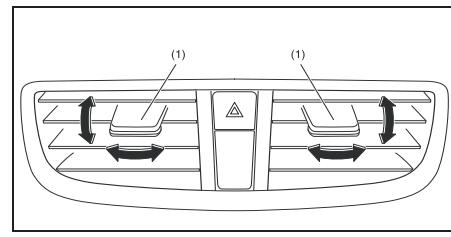


74LHT0502

Move the knob (1) vertically or horizontally to adjust the direction of airflow as desired.

Manual Heating and Air Conditioning System (if equipped)

Description of Controls

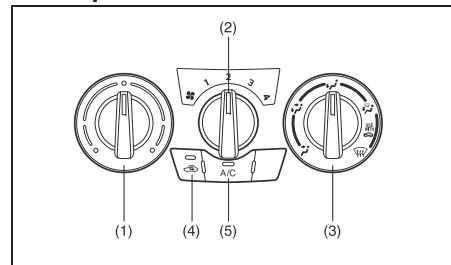

74LHT0503


Temperature selector (1)

This is used to select the temperature by turning the selector.

Blower speed selector (2)

This is used to turn on the blower and to select blower speed by turning the selector.


Air flow selector (3)

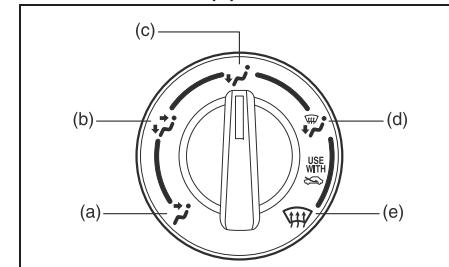

63J048

This is used to select one of the functions described below.


Ventilation (a)

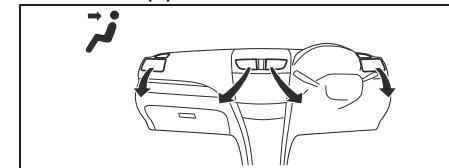

74LHT0504

Temperature-controlled air comes out of the center and side air outlets.

Bi-level (b)

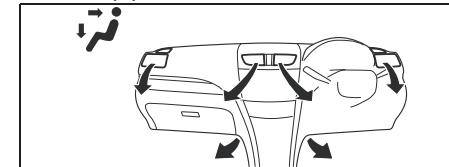


74LHT0505

OTHER CONTROLS AND EQUIPMENT

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully COLD position or fully HOT position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.


Heat (c)

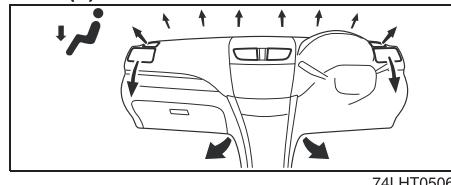

74LHT0506

Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and the side demister outlets slightly.

Heat & defrost (d)

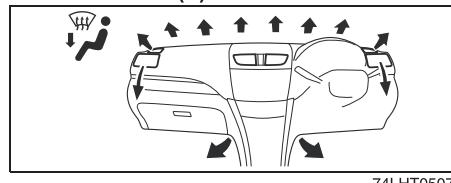


74LHT0507

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side demister outlets and the side outlets.

119


Defrost (e)

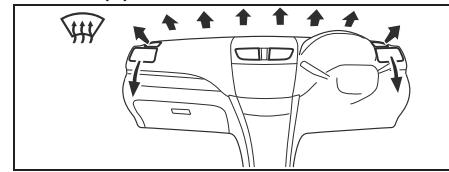

74LHT0508

Temperature-controlled air comes out of the windshield defroster outlets, the side demister outlets and the side outlets.

Air intake selector (4)

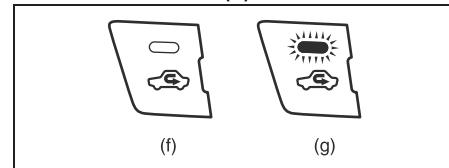

68LM511

This selector is used to select the following modes.

Fresh Air (f)

When this mode is selected, the indicator light will go off and outside air is used.

Recirculated Air (g)

When this mode is selected, the indicator light will come on, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down the interior.

“FRESH AIR” and “RECIRCULATED AIR” are switched alternately each time the air intake selector is pushed.

NOTE:

If you select “RECIRCULATED AIR” for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select “FRESH AIR”.

Air conditioning switch (5)

To turn on the air conditioning system, push in the “A/C” switch and set the blower speed selector to a position other than “OFF”. With this “A/C” switch operation, a indicator light will come on when the air conditioning system is on. To turn off the air conditioning system, push the “A/C” switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System Operating Instructions

Natural ventilation

Select “VENTILATION” and “FRESH AIR”, the temperature selector to the desired temperature position, and the blower

OTHER CONTROLS AND EQUIPMENT

speed selector to "OFF". Fresh air will flow through the vehicle during driving.

Forced ventilation

The control settings are the same as for natural ventilation except you set the blower speed selector to a position other than "OFF".

Normal heating (using outside air)

Select "HEAT" and "FRESH AIR", the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)

The control settings are the same as for normal heating except you select "RECIRCULATED AIR". If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Cool face/warm feet

Select "BI-LEVEL" and "FRESH AIR", the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully COLD position or fully HOT position, the air that comes out of the center

and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Turn on the "A/C" switch, set the air flow selector to "VENTILATION", the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either "FRESH AIR" or "RECIRCULATED AIR" as you desire. Choosing "RECIRCULATED AIR" increases cooling efficiency.

Quick cooling (using recirculated air)

The control settings are the same as for normal cooling except you select "RECIRCULATED AIR" and the highest blower speed.

NOTE:

- If you select "RECIRCULATED AIR" for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select "FRESH AIR".
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at "FRESH AIR" and the blower at high speed.


Dehumidifying

Turn on the "A/C" switch, set the air flow selector to a desired air flow selector position, and select "FRESH AIR", the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using the "DEMIST" or "HEAT & DEMIST" functions.

EXAMPLE

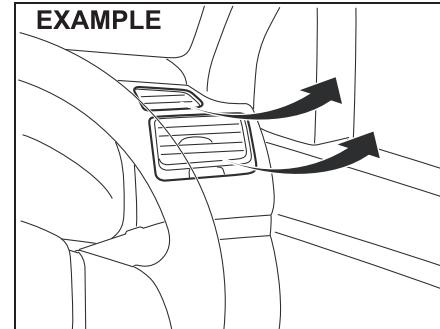

74LHT0509

NOTE:

If you need maximum defrosting:

- select "DEFROST" and "FRESH AIR",
- turn on the "A/C" switch,
- set the blower speed selector to HIGH,

OTHER CONTROLS AND EQUIPMENT

- adjust the temperature selector to the HOT end, and
- adjust the side outlets so the air blows on the side windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

NOTE:


Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called "R-134a". Only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Automatic Heating and Air Conditioning System (Climate Control) (if equipped)


Description of Controls

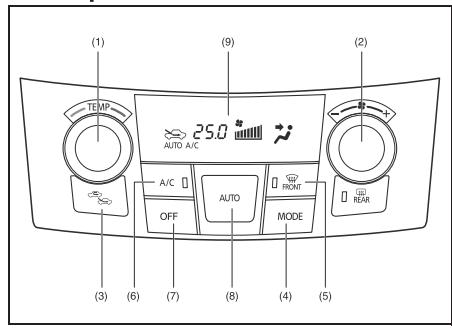

71LST0504

- (1) Temperature selector
- (2) Blower speed selector
- (3) Air intake selector
- (4) Air flow selector
- (5) Defrost switch
- (6) Air conditioning switch
- (7) "OFF" switch
- (8) "AUTO" switch
- (9) Display


Temperature selector (1)

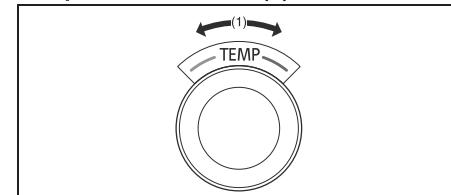

68LM514

Turn the temperature selector (1) to adjust the temperature. You can set the temperature between 18°C and 32°C. The selected temperature is shown in the display.

Blower speed selector (2)

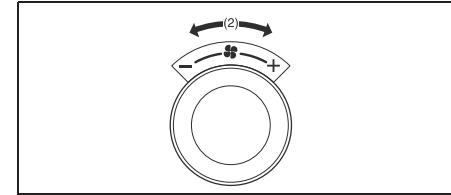


68LM515

The blower speed selector (2) is used to turn on the blower and to select blower speed. The selected blower speed is shown in the display.

If the "AUTO" switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

OTHER CONTROLS AND EQUIPMENT

Air intake selector (3)

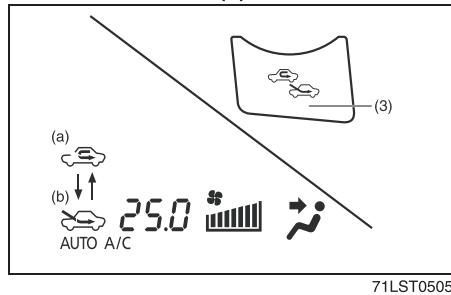

71LST0505

Push the air intake selector (3) to change between the FRESH AIR or RECIRCULATED AIR mode.

If the "AUTO" switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

NOTE:

When you select the recirculated air mode, the automatic operation system is deactivated if you push the "AUTO" switch (8).

RECIRCULATED AIR (a)

When this mode is selected, outside air is shut off and inside air is recirculated. This mode is suitable when driving through an area with polluted air such as a tunnel, or when attempting to quickly cool down the vehicle.

FRESH AIR (b)


When this mode is selected, outside air is introduced.

"FRESH AIR" and "RECIRCULATED AIR" are selected alternately each time the air intake selector is pushed.

NOTE:

If you select "RECIRCULATED AIR" for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select "FRESH AIR".

Air flow selector (4)

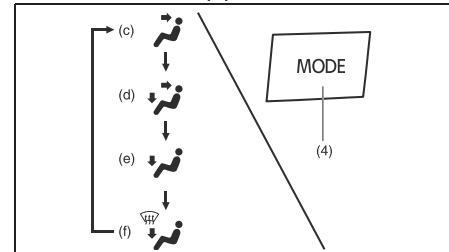


68LM517

Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears on the display.

If the "AUTO" switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.


Ventilation (c)

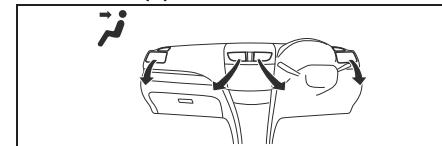

74LHT0504

Temperature-controlled air comes out of the center and side air outlets.


Bi-level (d)

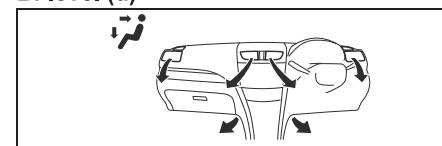

74LHT0505

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully COLD position or fully HOT position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

Heat (e)

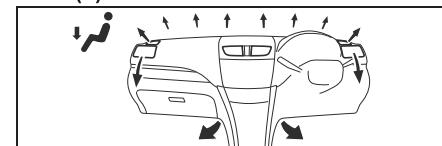


74LHT0506

OTHER CONTROLS AND EQUIPMENT

Temperature-controlled air comes out of the floor outlets and the side outlets, a small amount of air comes out of the windshield defroster outlets and also comes slightly out of the side demister outlets.


Heat & defrost (f)

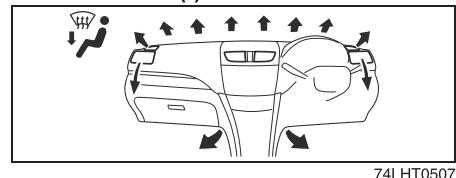

74LHT0507

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side demister outlets and the side outlets.

Defrost switch (5)

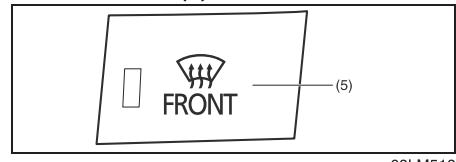


68LM518

Push the defrost switch (5) to turn on the defroster.

This is used to clear the windscreens and side windows by pushing the switch when the defroster switch is ON, the indicator light above the defroster switch will come ON and the defroster display is shown in the display.

123

Defrost

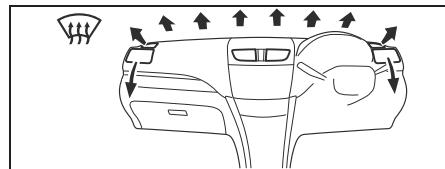


74LHT0508

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

NOTE:

When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will come on and the "FRESH AIR" mode will be selected automatically. In very cold weather, however, the air conditioning system will not turn on.

Air conditioning switch (6)

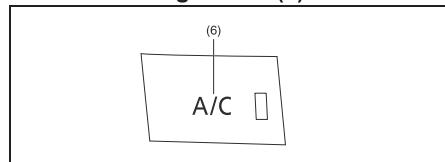


68LM555

The air conditioning switch (6) is used to turn on and off the air conditioning system only when the blower is on. To turn on the air conditioning system, push in the switch and "A/C" will appear on the display. To turn off the air conditioning system, push in the switch again and "A/C" will go off.

System Operating Instructions

Automatic operation

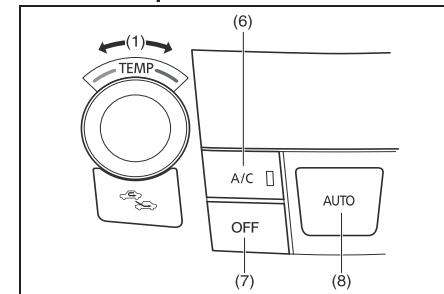

68LM520

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below.

- 1) Start the engine.
- 2) Push the "AUTO" switch (8).
- 3) Set the desired temperature by turning the temperature selector (1).

The blower speed, air intake and air flow are controlled automatically to maintain the set temperature.

NOTE:

When you select the recirculated air mode, the automatic operation system is deactivated if you push the "AUTO" switch (8).

OTHER CONTROLS AND EQUIPMENT

You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

To turn the climate control system off, push the "OFF" switch (7).


NOTE:

If the "AUTO" on the display blinks, there is a problem in the heating system and/or air conditioning system. You should have the system inspected by an authorized MARUTI SUZUKI dealer.

NOTE:

- To find the temperature at which you are most comfortable, start with the 25°C (75°F) setting.
- If you turn the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling and the blower will run at full speed.
- To avoid blowing cold air in cold weather or hot air in hot weather, the system will delay turning on the blower until warmed or chilled air is available.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.

- Even under the automatic operation, you can set individual selectors to the manual mode. The manually selected functions are maintained, and the other functions remain under automatic operation.
- To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push the "AUTO" switch (8).

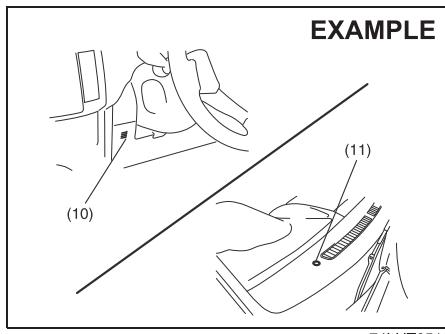


EXAMPLE

74LHT0510

Be careful not to cover the interior temperature sensor (10) located between the steering wheel and the climate control panel, or the solar sensor (11) located at the top of the driver's side dashboard. These sensors are used by the automatic system to regulate temperature. Even if the engine is turned OFF, the temperature Setting remains in the memory.

Manual operation

You can manually control the climate control system. Set the selectors to the desired positions.

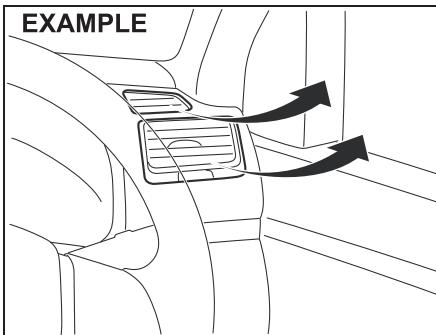

74LHT0509

NOTE:

If you need maximum defrosting:

- push the defrost switch (5) to turn on the defroster (the air conditioning system will come on and the "FRESH AIR" mode will be selected automatically),
- set the blower speed selector to HIGH,
- adjust the temperature selector to the "HI" indication on the display, and
- adjust the side outlets so the air blows on the side windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain opti-

OTHER CONTROLS AND EQUIPMENT

mum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called "R-134a". Only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio Antenna

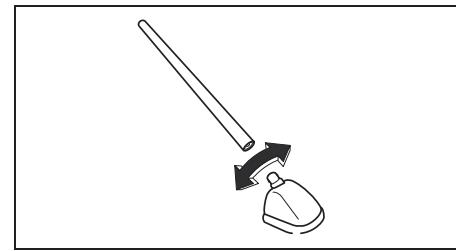

63J055

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.


Installation of Radio Frequency Transmitters

We recommend that you always ask a MARUTI SUZUKI dealer about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.


OTHER CONTROLS AND EQUIPMENT

Audio System (if equipped)

Type 1

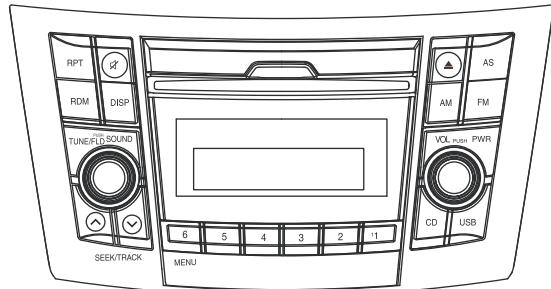

Type 2

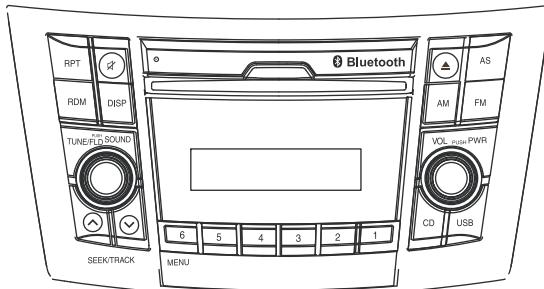

OTHER CONTROLS AND EQUIPMENT

Safety Information

⚠ WARNING

If you pay extended attention to operating the audio system or viewing the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying extended attention to operating the audio system or viewing the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.
- Set the sound volume to a level that will allow you to continue to be aware of road and traffic conditions while driving.

Notes on Discs

Precautions


- When the inside of the vehicle is very cold and the player is used soon after switching on the heater, condensation may form on the disc or the optical parts of the player and proper playback may not be possible. If condensation forms on the disc, wipe it off with a soft cloth. If condensation forms on the optical parts of the player, do not use the player for about one hour. This will allow the condensation to disappear normally.
- Driving on extremely bumpy roads which cause severe vibrations may cause sound to skip.
- This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.
Please bring the unit to an authorized MARUTI SUZUKI dealer.

Cautions on Handling



This unit has been designed specifically for playback of compact discs bearing mark (A) shown above.


No other discs can be played.

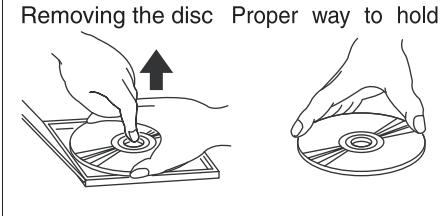


To remove the compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

Always handle the compact disc by the edges. Never touch the surface.


OTHER CONTROLS AND EQUIPMENT

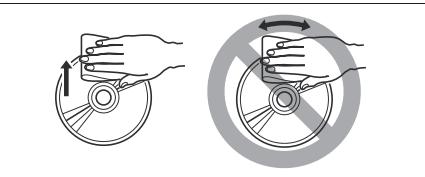


To remove finger-marks and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

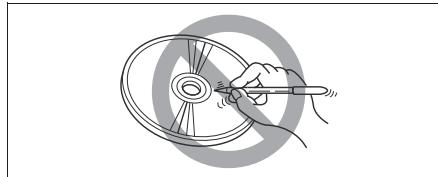


Never stick labels on the surface of the compact disc or write on the surface with a pencil or pen.

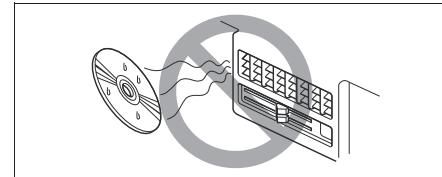


Do not expose compact discs to direct sunlight or any heat source.

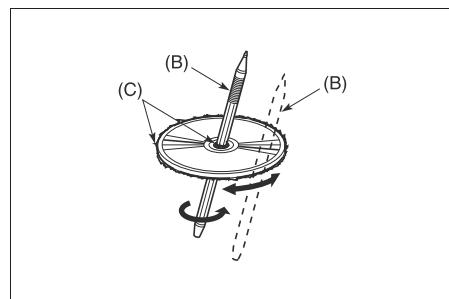

New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen (B), etc. to remove the roughness (C) from the edges of the disc before inserting it into the unit.

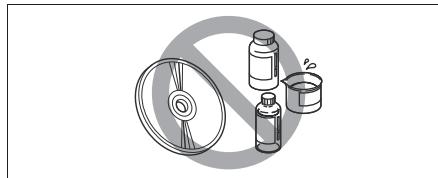

Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.

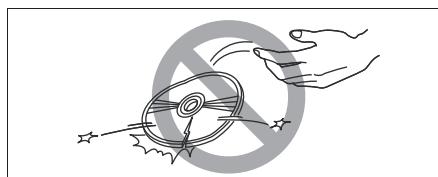

Do not use compact discs that have large scratches, are misshaped, or cracked, etc. Use of such discs will cause damage or prevent the system from operating properly.

WARNING
This is a class I laser product. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
Do not open covers and do not attempt to repair this unit by yourself. Refer servicing to qualified personnel.

OTHER CONTROLS AND EQUIPMENT

Bluetooth® (if equipped)


The ® word mark and logo are registered trademarks and are owned by the SIG, Inc.

Stop using this unit and a ® ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit whenever you are notified that your unit disturbs other wireless communication immediately.

Basic Operations

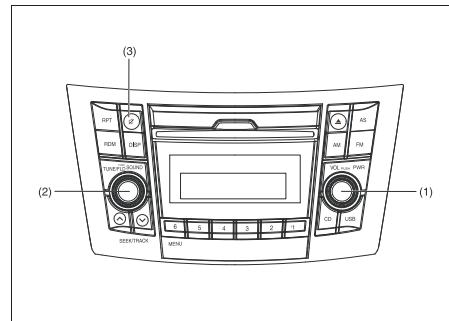

(1) VOL PUSH POWER knob
 (2) TUNE FOLDER PUSH SOUND knob
 (3) MUTE button

Turning power on/off

Press the VOL PUSH POWER knob (1). The unit starts in the function mode it was in when the power was turned off last.

Adjusting the volume

Turn the VOL PUSH POWER knob (1). Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.


NOTE:

While driving, adjust the volume to an extent that sound and/or noise coming from outside the vehicle can be heard.

Mute


Press the MUTE button (3) to mute the sound. To cancel the mute, press the MUTE button (3) again.

® Mic (1) (if equipped)

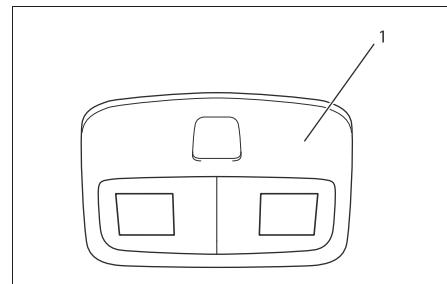

Adjusting bass/treble/balance /fader

- 1) Press the TUNE FOLDER PUSH SOUND knob (2). Each time the knob is pressed, sound adjustment will change as follows:

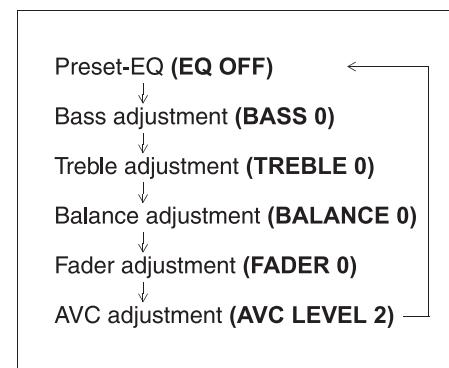

- 2) Turn the TUNE FOLDER PUSH SOUND knob (2) to adjust the sound.

OTHER CONTROLS AND EQUIPMENT

Adjusting the AVC (Auto volume control)


The Auto Volume Control (AVC) function automatically adjusts (increases/decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with three selectable levels (LEVEL OFF, 1, 2, 3). The range of volume adjustment increases together with the LEVEL number.

- 1) Press the TUNE FOLDER PUSH SOUND knob (2) until the AVC adjustment mode is selected.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2) to select the desired AVC adjustment level. (Initial setting: LEVEL 2)


Preset-EQ

Preset-EQ calls up various sound types in accordance with the listening music type.


- 1) Press the TUNE FOLDER PUSH SOUND knob (2) several times until "PRESET-EQ" appears.
 - 2) Turn the TUNE FOLDER PUSH SOUND knob (2).
- Each time the knob is turned, preset EQ mode will change as follows:

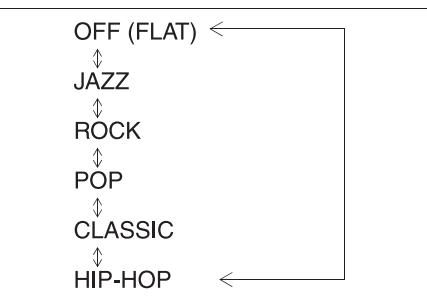

Listening to the Radio

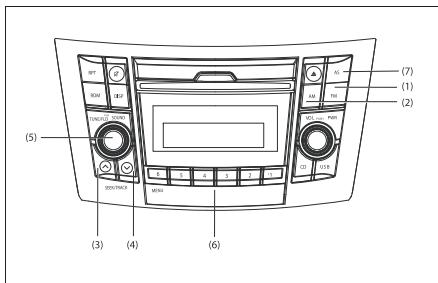

Display

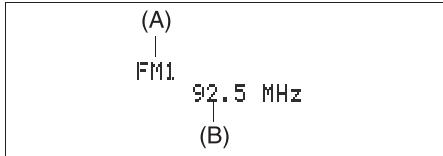


- (1) FM button
- (2) AM button
- (3) Up button
- (4) Down button
- (5) TUNE FOLDER PUSH SOUND knob
- (6) Preset buttons ([1] to [6])
- (7) AST button
- (A) Band
- (B) Frequency

Selecting the FM band

Press the FM button (1).

 Each time the button is pressed, the reception band will change as follows:



Selecting the AM band

Press the AM button (2).

Seek tuning

Press the seek Up button (3) or the seek Down button (4).

The unit stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

Turn the TUNE FOLDER PUSH SOUND knob (5).

The frequency being received is displayed.

Preset memory

- 1) Select the desired station.

OTHER CONTROLS AND EQUIPMENT

- 2) Hold down a desired button ([1] to [6]) of the Preset buttons (6) to which you want to store the station for 2 seconds or longer.

Auto store

Auto Start
Hold down the AST button (7) for 2 seconds or longer.

 
Six stations in good reception will automatically be stored to the Preset buttons (6) in order, starting from a station whose frequency is the lowest.

NOTE:

- Auto store can be released by pressing AST button (7) while auto store is under way.
 - When the auto store is performed, the station previously stored in the memory at the position is overwritten.
 - When there are fewer than 6 stations that can be stored even if 1 round of auto store operation is performed, no station will be stored at the remaining Preset buttons (6).
 - 6 stations can be preset for FM1 and FM2 in common, and 6 stations for AM in auto store mode.

Auto store mode on/off


Press the AST button (7).
Each time the button is pressed, the mode
is switched as follows:



Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

Listening to a CD

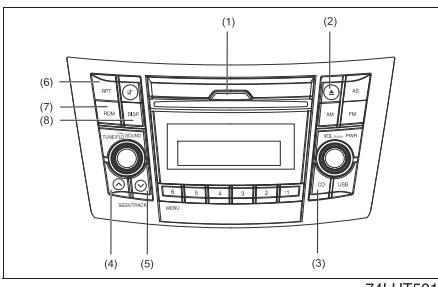


- (1) Insertion slot
 - (2) Eject button
 - (3) CD button
 - (4) Up button
 - (5) Down button
 - (6) RPT button
 - (7) RDM button
 - (8) DISP button

- (A) Track number
- (B) Play time

NOTE:
This product does not support 8 cm CD
(sometimes called as "mini single CD", "3-
inch CD", "CD3", etc.).



- CDs or CD-ROMs carrying no mark (A) cannot be used.
 - Some discs recorded in CD-R/CD-RW format may sometimes be impossible to use.

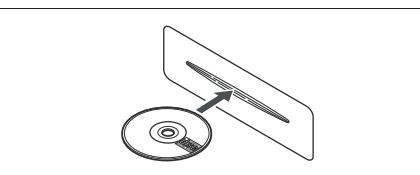

OTHER CONTROLS AND EQUIPMENT

- A CD is to be inserted with its label side up.
- When there is a CD already in the unit, it is impossible to insert another CD without ejecting the CD in the unit. Do not use force to insert a CD into the CD insertion slot.

NOTICE

- Never insert your finger or hand into the CD insertion slot. Never insert foreign objects.
- Never insert a CD with glue coming out from adhesive tape or a rental CD label or with a trace indicating that adhesive tape or a rental CD label has been removed. This may cause the CD not to eject or result in a malfunction.

Loading a CD

Insert a CD in the Insertion slot (1).
When a CD is loaded, play starts.

Ejecting a CD

Press the Eject button (2).
When the ignition mode is "LOCK", the CD remained ejected for around 15 seconds or longer will automatically be drawn inside the unit. (Auto reload function)
The backup eject function:
This function allows you to eject a CD by pressing the Eject button (2) even when the ignition mode is off.

NOTICE

If you forcefully try to push an ejected CD inside the unit before auto reloading, the disc surface might be scratched.
When reloading a CD, remove it from the unit completely before reloading.

Listening to a CD

When a CD is inserted, playback will automatically start.
When a CD is already inside the unit, press the CD button (3) to start playback.

Selecting a track

- Press the Up button (4) to listen to the next track.
- Press the Down button (5) twice to listen to the previous track.

When the Down button (5) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (4) to fast forward the track.
- Hold down the Down button (5) to fast rewind the track.

Random playback

Press the RDM button (7).
Each time the button is pressed, the mode will change as follows:

OFF → TRACK RANDOM

TRACK RANDOM

The random indicator "RDM" will light.
The tracks in the loaded disc will be played in random order.

Repeat playback

Press the RPT button (6).
Each time the button is pressed, the mode will change as follows:

OFF → TRACK REPEAT


TRACK REPEAT

The repeat indicator "RPT" will light.
The track currently being played will be played repeatedly.

OTHER CONTROLS AND EQUIPMENT

Display change


Press the DISP button (8).
Each time the button is pressed, display will change as follows:

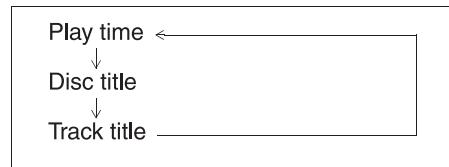

NOTE:


- "NO TITLE" will be displayed when there is no text information in the disc currently being played.
- If text data contains more than 12 characters, the ">" mark will appear at the right end. Holding down the DISP button (8) for 1 second or longer can display the next page.

Listening to an MP3/WMA/AAC Disc

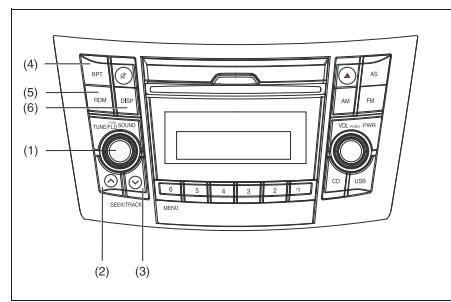

133

Display

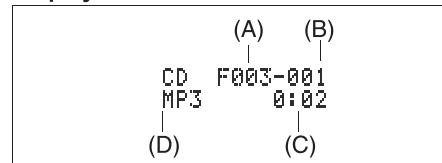

- (1) TUNE FOLDER PUSH SOUND knob
- (2) Up button
- (3) Down button
- (4) RPT button
- (5) RDM button
- (6) DISP button
- (A) Folder number
- (B) Track number
- (C) Play time
- (D) DISC type

Selecting a folder

Turn the TUNE FOLDER PUSH SOUND knob (1) to select a folder.

Selecting a track

- Press the Up button (2) to listen to the next track.
- Press the Down button (3) twice to listen to the previous track.
When the Down button (3) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (2) to fast forward the track.
- Hold down the Down button (3) to fast rewind the track.

Random playback

Press the RDM button (5).
Each time the button is pressed, the mode will change as follows:



• FOLDER RANDOM

The random indicator "F.RDM" will light.
The tracks in the current folder will be played in random order.

• ALL RANDOM

The random indicator "RDM" will light.
The tracks in the loaded disc will be played in random order.

Repeat playback

Press the RPT button (4).
Each time the button is pressed, the mode will change as follows:



• FILE REPEAT

The repeat indicator "RPT" will light.

OTHER CONTROLS AND EQUIPMENT

The track currently being played will be played repeatedly.


- **FOLDER REPEAT**

The repeat indicator "RPT.F" will light. All tracks in the currently selected folder will be played repeatedly.

Display change

Press the DISP button (6).

Each time the button is pressed, display will change as follows:

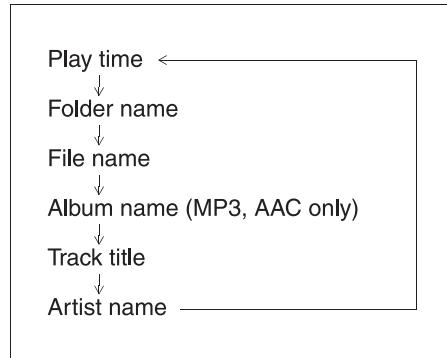

NOTE:

- "NO TITLE" will be displayed when there is no text information in the disc currently being played.
- If text data contains more than 12 characters, the ">" mark will appear at the right end. Holding down the DISP button (6) for 1 second or longer can display the next page.

5-18

Notes on MP3/WMA/AAC

What is MP3?

- MP3 (MPEG audio layer3) is an audio compression format that has become the standard format among PC users. Its merit is that the original audio data is compressed to approximately 1/10 and high sound quality is maintained. This means that it is possible to store the data of approximately 10 music CDs on a single CD-R/RW disc, which in turn makes it possible to play music for a long time without having to change the disc.

What is WMA?

- An abbreviation of "Windows Media Audio," WMA is an audio compression format developed by Microsoft.
- WMA files for which the DRM (Digital Rights Management) function is ON cannot be played.
- Windows Media™ and the Windows® logo are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

What is AAC?

- An abbreviation of "Advanced Audio Coding," AAC is an audio compression format used by MPEG2 and MPEG4.

Points to remember when making MP3/WMA/AAC files Common

- High bit rate and high sampling frequency are recommended for high quality sounds.
- Selecting VBR (Variable Bit Rate) is not recommended. Selecting VBR may cause display of incorrect playing time and jumpiness of playback.
- Playback sound quality varies depending on the encoding environment. For details, refer to the user manual of the encoding software and the writing software in use.

NOTICE

Never assign the ".mp3", ".wma", or ".m4a" file name extension to a file if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.

Recording MP3/WMA/AAC files on a CD media

- It is recommended not to write both CD-DA files and MP3/WMA/AAC files on a disc.
- If both CD-DA files and MP3/WMA/AAC files are on the same disc, tracks may not be played in the correct order or some tracks may not be played at all.
- When storing both MP3 data and WMA data on the same disc, sort and place them in different folders.

OTHER CONTROLS AND EQUIPMENT

- Do not write files other than MP3/WMA/AAC files and unnecessary folders on a disc.
- MP3/WMA/AAC files should be named to meet the standards and the file system specifications as shown below.
- The file extension ".mp3", ".wma" or ".m4a" should be assigned to files based on their format independently.
- You may encounter a trouble in playing MP3/WMA/AAC files or displaying information of MP3/WMA/AAC files depending on the writing software or CD recorder in use.
- This unit does not have a play list function.
- It is recommended to write discs in Disc-at-Once mode even though Multi-session mode is supported.

Compression formats

MP3

- Bit rate:
 - MPEG1 Audio Layer III: 32 k - 320 kbps
 - MPEG2 Audio Layer III: 8 k - 160 kbps
 - MPEG2.5 Audio Layer III: 8 k - 160 kbps
- Sampling frequency:
 - MPEG1 Audio Layer III: 32 k/44.1 k/48 kHz
 - MPEG2 Audio Layer III: 16 k/22.05 k/24 kHz
 - MPEG2.5 Audio Layer III: 8 k/11.025 k/12 kHz

WMA (Ver. 7, Ver. 8, Ver. 9*)
 • Bit rate: CBR 32 k - 320 kbps
 • Sampling frequency: 32 k/44.1 k/48 kHz
 * WMA 9 Professional/LossLess/Voice are not supported.

AAC*
 • Bit rate: ABR 16k - 320 kbbs
 • Sampling frequency: 32 k/44.1 k/48 kHz
 * Apple Lossless is not supported.


Supported file systems

ISO 9660 Level 1/Level 2, Joliet, Romeo

Maximum number of files/folders


- Maximum number of files: 512
- Maximum number of files in a folder: 255
- Maximum depth of tree structure: 8
- Maximum number of folders: 255
 (Root folder is included.)

Listening to files stored in a USB device

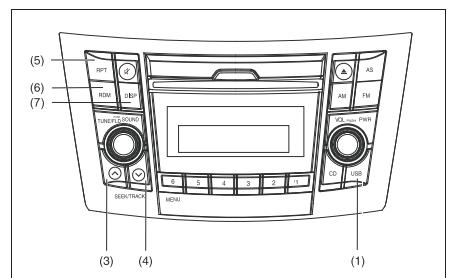

74LHT5006

Display

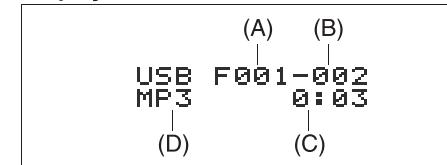

- (1) USB Button
- (2) TUNE FOLDER PUSH SOUND knob
- (3) Up button
- (4) Down button
- (5) RPT button
- (6) RDM button
- (7) DISP button

- (A) Folder number
- (B) Track number
- (C) Play time
- (D) File type

NOTICE

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.

OTHER CONTROLS AND EQUIPMENT

Selecting a USB device mode

Press the USB device mode (1).

Selecting a folder

Turn the TUNE FOLDER PUSH SOUND knob (2) to select the desired folder.

Selecting a track

- Press the Up button (3) to listen to the next track.

- Press the Down button (4) twice to listen to the previous track.

When the Down button (4) is pressed once, the track currently being played will start from the beginning again.


Fast forwarding/Rewinding a track

- Hold down the Up button (3) to fast forward the track.
- Hold down the Down button (4) to fast rewind the track.

Random playback

Press the RDM button (6).

Each time the button is pressed, the mode will change as follows:

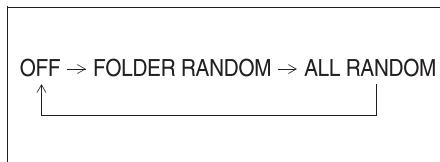

- **FOLDER RANDOM**

The random indicator "F.RDM" will light.
The tracks in the currently selected folder will be played in random order.

- **ALL RANDOM**

The random indicator "RDM" will light.
The tracks in the connected USB device will be played in random order.

Repeat playback

Press the RPT button (5).

Each time the button is pressed, the mode will change as follows:



- **FILE REPEAT**

The repeat indicator "RPT" will light.
The track currently being played will be played repeatedly.

- **FOLDER REPEAT**


The repeat indicator "RPT.F" will light.

All the tracks in the folder currently selected will be played repeatedly.

Display change

Press the DISP button (7).

Each time the button is pressed, display will change as follows:

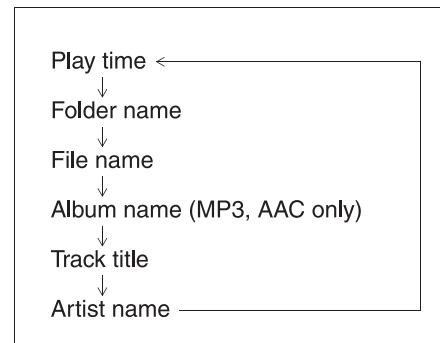

NOTE:

- "NO TITLE" will be displayed when there is no text information in the disc currently being played.

- If text data contains more than 12 characters, the ">" mark will appear at the right end. Holding down the DISP button (7) for 1 second or longer can display the next page.

OTHER CONTROLS AND EQUIPMENT

Notes on USB device Compatible USB devices

- USB Mass Storage Class
For details as to whether your USB memory/USB Audio is compatible with USB Mass Storage Class, please contact the USB memory/USB Audio manufacturer.
- USB Standard Compatibility 1.1/2.0 Full Speed
- File System FAT12/16/32, VFAT
- Maximum current less than 1.0 A
- If devices such as USB hub, extension cable are connected to the audio system, it may not be recognized. In such case connect the USB device directly to the audio system.
- Devices such as MP3 player/Mobile phone/digital camera may not be recognized by the audio system for playing music.

USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand. We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA/AAC format.

137

Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.

Compression formats

MP3

- Bit rate:
MPEG1 Audio Layer III: 32 k - 320 kbps
MPEG2 Audio Layer III: 8 k - 160 kbps
MPEG2.5 Audio Layer III: 8 k - 160 kbps
- Sampling frequency:
MPEG1 Audio Layer III: 32 k/44.1 k/48 kHz
MPEG2 Audio Layer III: 16 k/22.05 k/24 kHz
MPEG2.5 Audio Layer III: 8 k/11.025 k/12 kHz

WMA (Ver. 7, Ver. 8, Ver. 9*)

- Bit rate: CBR 32 k - 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz
- * WMA 9 Professional/LossLess/Voice are not supported.


AAC*

- Bit rate: ABR 16k - 320 kbbs
- Sampling frequency: 32 k/44.1 k/48 kHz
- * Apple Lossless is not supported.

Maximum number of files/folders


- Maximum number of files: 2500
- Maximum number of files in a folder: 255
- Maximum depth of tree structure: 8
- Maximum number of folders: 255
(Root folder is included.)

Listening to an iPod®

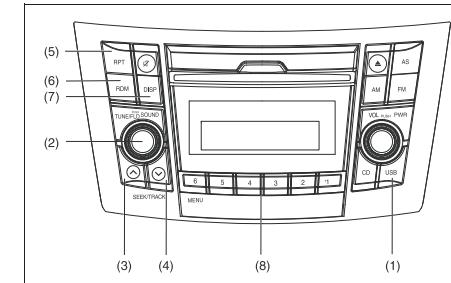

74LHT5007

Display

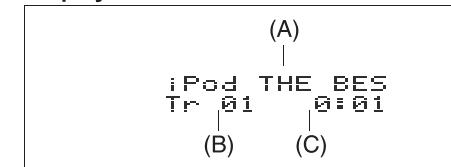

- (1) USB button
- (2) TUNE FOLDER PUSH SOUND knob
- (3) Up button
- (4) Down button
- (5) RPT button
- (6) RDM button
- (7) DISP button
- (8) Preset buttons ([1] to [6])

- (A) Track title
- (B) Track number
- (C) Play time

OTHER CONTROLS AND EQUIPMENT

Selecting an iPod® mode

Press the USB button (1).

Selecting a track

- Press the Up button (3) to listen to the next track.
- Press the Down button (4) twice to listen to the previous track.

When the Down button (4) is pressed once, the track currently being played will start from the beginning again.

 
Fast forwarding/Rewinding a track

- Hold down the Up button (3) to fast forward the track.
- Hold down the Down button (4) to fast rewind the track.

Random playback

Press the RDM button (6).

Each time the button is pressed, the mode will change as follows:



SONG RANDOM

The random indicator "RDM" will light.
The tracks in the iPod® will be played in random order.

ALBUM RANDOM

The random indicator "D.RDM" will light.
The albums in the iPod® will be played in random order.

Repeat playback

Press the RPT button (5).

Each time the button is pressed, the mode will change as follows:




SONG REPEAT

The repeat indicator "RPT" will light.
The track currently being played will be played repeatedly.

Display change

Press the DISP button (7).

Each time the button is pressed, display will change as follows:

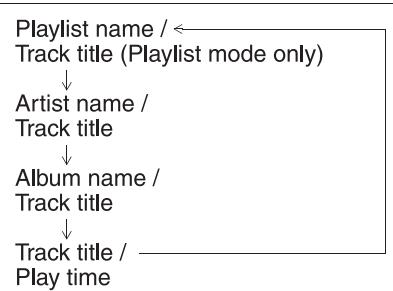

NOTE:

If text data contains more than 12 characters, the ">" mark will appear at the right end.
Holding down the DISP button (7) for 1 second or longer can display the next page.

Playing Mode selection

- 1) Press the button numbered [6] of the Preset buttons (8) for 1 second or longer.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2).
Each time the knob is turned, the mode will change as follows:



- 3) Press the TUNE FOLDER PUSH SOUND knob (2) to select the desired mode.

NOTE:

- When the button numbered [6] of the Preset buttons (8) is pressed, the previous mode will be displayed.

OTHER CONTROLS AND EQUIPMENT

Notes on iPod® Supported iPod®


- iPod® touch (5th generation)
- iPod® touch (4th generation)
- iPod® touch (3rd generation)
- iPod® touch (2nd generation)
- iPod® touch (1st generation)
- iPod® classic
- iPod® nano (7th generation)
- iPod® nano (6th generation)
- iPod® nano (5th generation)
- iPod® nano (4th generation)
- iPod® nano (3rd generation)
- iPod® nano (2nd generation)
- iPod® nano (1st generation)
- iPod® (5th generation)
- iPhone® 6 Plus
- iPhone® 6
- iPhone® 5S
- iPhone® 5
- iPhone® 4S
- iPhone® 4
- iPhone® 3GS
- iPhone® 3G
- iPhone®

- * Some functions may not be available depending on the model of iPod®.
- * iPod® is a trademark of Apple Inc., registered in the U.S. and other countries.
- * iPhone® is a trademark of Apple Inc., registered in the U.S. and other countries.
- * Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod® connection

- Make sure to detach the iPod® after pressing the engine switch to change the ignition mode to LOCK. The iPod® may not be shut down when it is being connected and may result in battery depletion.
- Please do not connect iPod® accessories such as an iPod® remote control or headphones while connecting the iPod® with the unit. The unit may not operate correctly.

AUX Function

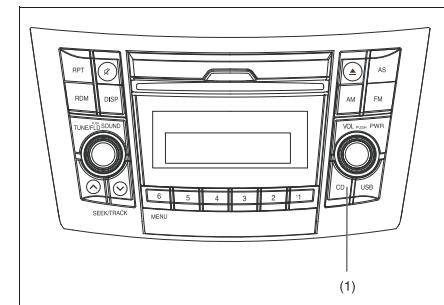


74LHT5011

(1) CD button

AUX connection

To listen to auxiliary audio sources (sold separately) through the unit, follow the instruction below.

- 1) Connect the auxiliary audio source to the AUX/USB socket (separately attached) with an AUX cable.
- 2) Each time the button is pressed, the mode will change as follows:

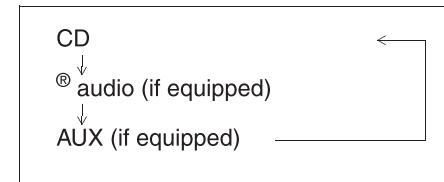

5-23

OTHER CONTROLS AND EQUIPMENT


CAUTION

- Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.


NOTE:

- Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.
- The volume and tone controls of the auxiliary audio source can be adjusted on the unit.
- In AUX mode, the volume setting is different from another mode.

® Hands-Free (if equipped)

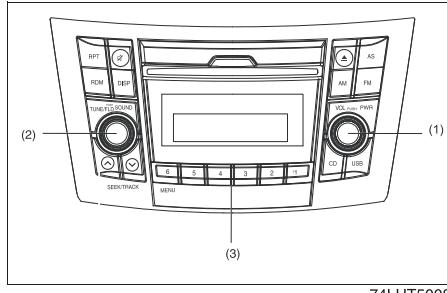

74LHT5008

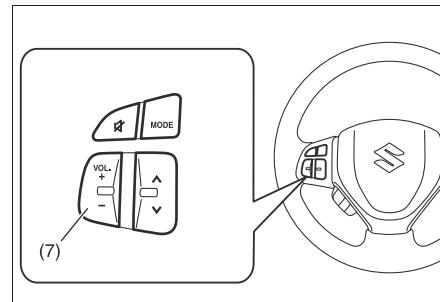


- (4) ® setup button
- (5) Off Hook button
- (6) On Hook button
- (7) VOL switch

Phone registration

To use the hands-free function with this unit, it is required to register the phone in advance.

Steering switch

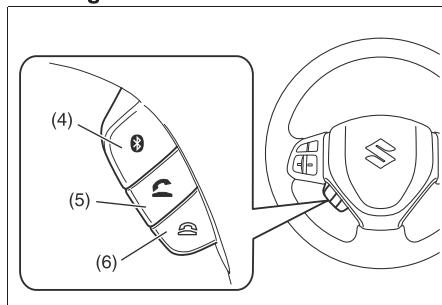

NOTE:

- Up to 5 phones can be registered.
- To set up a new phone, disconnect the audio player from the unit. Connect the audio player again after phone setup is completed if necessary.
- When failed to establish the pairing within 120 seconds, the connecting operation will be canceled. Please try again or refer to the manual of the phone in use for how to establish the pairing with the phone.

OTHER CONTROLS AND EQUIPMENT

- Telephone setup mode can be entered only during vehicle is stationary speed less than ~ 8 kmph)
- 1) Press the ® setup button (4). The ® setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Pairing", and press the knob (1) to determine the selection.
- 4) Select "CAR AUDIO" from the ® menu of the phone and establish the pairing. Refer to the manual of the phone in use for further information.
- 5) Enter the Passkey displayed on the unit to the phone.
- 6) Press the On Hook button (6).

NOTE:

- When selecting "Go Back", the previous menu will be displayed.
- When additionally registering a phone, operate the same step from 1).

Receiving a call

Press the Off Hook button (5) to receive a call.

Ending a call

Press the On Hook button (6) to end a call.

Rejecting a call (only for supported models)

Press the On Hook button (6) to reject a incoming call.

Adjusting the listening volume

- Turn the VOL PUSH POWER knob (2) during a call. Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press the VOL switch (7) during a call. Pressing "+" of the switch increases the volume, pressing "-" of the switch decreases the volume.

Adjusting the ring volume

- Turn the VOL PUSH POWER knob (2) while a call coming in. Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press the VOL switch (7) during a call. Pressing "+" of the switch increases the volume, pressing "-" of the switch decreases the volume.

Adjusting the call or ringtone volume

Follow the instructions below to adjust the call or ringtone volume.

- 1) Press the ® setup button (4). The ® setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Sound Setting", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Ringtone", and press the knob (1) to determine the selection. The current ringtone will be sounded.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select desired ringtone, and

ting", and press the knob (1) to determine the selection.

- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Call Volume" or "Ringtone Volume", and press the knob (1) to determine the selection. The current call or ringtone volume will be displayed.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select desired call or ringtone volume, and press the knob (1) to determine the selection.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Selecting the Ringtone

Follow the instructions below to select a ringtone.

- 1) Press the ® setup button (4). The ® setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Sound Setting", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Ringtone", and press the knob (1) to determine the selection. The current ringtone will be sounded.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select desired ringtone, and

OTHER CONTROLS AND EQUIPMENT

press the knob (1) to determine the selection.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Dialing using Missed/Incoming/Outgoing Calls

Follow the instructions below to dial to the last dialed number again.

NOTE:

Up to 10 phone numbers of the latest calls can be stored. (10 each for dialed, received and missed call)

- 1) Press the Off Hook button (5).
The [®] phonebook menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Missed Calls", "Incoming Calls" or "Outgoing Calls", and press the knob (1) to determine the selection.
To dial from the dialed history or the received history, select "Missed Calls", "Incoming Calls" or "Outgoing Calls" respectively.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select the desired number, and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Dial", and press the knob (1) or the Off Hook button (5) to dial to the selected number.

NOTE:

- When selecting "Go Back", the previous menu will be displayed.
- Pressing "Confirm" after selecting "Add Speed Dial" can register the selected number in the speed dial.
- Pressing "Confirm" after selecting "Delete" can delete the selected number from the call history.

Deletion of call history

Follow the instructions below to delete a missed/incoming/outgoing call history.

- 1) Press the Off Hook button (5).
The [®] phonebook menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete History", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Missed Calls", "Incoming Calls", or "Outgoing Calls", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a number to be deleted or "ALL", and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete?" or

"Delete All?", and press the knob (1) to determine the selection.

- 7) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Registration in Phonebook

Registration of numbers in the phonebook. Follow the instructions below to register phone numbers in the Phonebook of the unit.

- 1) Press the [®] setup button (4).
The [®] setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Add Contacts", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Overwrite All" or "Add One Contact", and press the knob (1) to determine the selection. The "Rest of Memory XXXX: Ok?" will be displayed.

OTHER CONTROLS AND EQUIPMENT

-
- 6) Press or turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to determine the selection.
 - 7) Transfer contacts from the phone. When the registration is completed, the "Setup Phonebook" will be displayed.

NOTE:

- When selecting "Go Back" the previous menu will be displayed.
- Up to 1000 numbers can be registered in Phonebook.

Transfer of call history (Call History)

Follow the instructions below to transfer call history of the registered phone.

- 1) Press the [®] setup button (4).
The [®] setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Call History", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Call History?", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to transfer the call history from the phone.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Making a call by Phonebook

Follow the instructions below to dial a number registered in Phonebook.

- 1) Press the Off Hook button (5).
The [®] phonebook menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Phonebook", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select the initial of the name you would like to make a call, and press the knob (1) to determine the selection.
The registered numbers will be displayed in sequence. If names have been registered together with numbers, the names will be displayed.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Dial", and press the knob (1) to determine the selection.
- 5) Press the Off Hook button (5).
The displayed number or the number registered with the displayed name will be dialed.

Deletion of registered data (Delete Entry)

Follow the instructions below to delete a number registered in Phonebook.

- 1) Press the [®] setup button (4).
The [®] setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete Contacts", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a number to be deleted, and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete?", and press the knob (1) to determine the selection.
- 7) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

OTHER CONTROLS AND EQUIPMENT

Registration in speed dial

Follow the instructions below to assign a number to one of the Preset buttons to use as the speed dial.

- 1) Press the ^(®) setup button (4).
The ^(®) setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Add Speed Dial", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a number to be assigned, and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Choose Preset", and press the knob (1) to determine the selection.
- 7) Press one of the Preset buttons (3) to which the selected number is to be assigned. If a number is already assigned to the selected button, a confirmation message will be displayed. Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to complete the assignment.

When the assignment is completed, the "Setup Phonebook" will be displayed.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

One-touch call (Speed dial)

Follow the instructions below to dial the number assigned to each of the Preset buttons (3).

- 1) Press the Off Hook button (5).
The ^(®) phonebook menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Speed Dials", and press the knob (1) to determine the selection.
- 3) Press one of the Preset buttons (3).
When no number is assigned, "No Entry" is displayed.
- 4) Press the Off Hook button (5).
The selected number will be dialed.

Deletion of speed dial (Del Speed Dial)

To delete a number assigned for the speed dial, follow the instructions below.

- 1) Press the Off Hook button (5).
The ^(®) phonebook menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Speed Dials", and press the knob (1) to determine the selection.
- 3) Press one of the Preset buttons (3) to which the number to be deleted is

assigned.

"No Entry" appears if the number is not registered.

- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Del Speed Dial", and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Display of device data (Device Name)

Follow the instructions below to display the BD ^(®) Device address and device name.

- 1) Press the ^(®) setup button (4).
The ^(®) setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Info", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Device Name" or "Device Address", and press

OTHER CONTROLS AND EQUIPMENT

the knob (1) to display the device name or the BD (® Device) address.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Reset to the factory defaults

Follow the instructions below to reset all the settings to the factory defaults.

- 1) Press the ® setup button (4).
The ® setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Initialize", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "All Initialize", and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to start the reset.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Selection of phone (Select Phone)

Follow the instructions below to select a phone to be paired with from the registered phones.

- 1) Press the ® setup button (4).
The ® setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "List Phone", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a phone to be paired with, and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Select", and press the knob (1) to determine the selection.

NOTE:

- *When selecting "Go Back", the previous menu will be displayed.*
- *The ® ready audio device will be disconnected when the phone is selected.*

List of phones (List Phones)

Follow the instructions below to display the names of the registered phones in sequence.

- 1) Press the ® setup button (4).
The ® setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "List Phone", and press the knob (1) to determine the selection.

The names of the registered phones are displayed in sequence.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Passkey setting (Set Passkey)

Follow the instructions below to set the security number (Passkey).

- 1) Press the ® setup button (4).
The ® setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Passkey", and press the knob (1) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "New Pass-

OTHER CONTROLS AND EQUIPMENT

- key", and press the knob (1) to determine the selection.
- 5) Press or turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm".
 - 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a number for the first digit, and press the knob (1) to determine the selection. Select and determine numbers for the second, third and fourth digits in order in the same manner. When not entering up to the eighth digit, enter blanks for the successive digits.
 - 7) Turn the TUNE FOLDER PUSH SOUND knob (1) to determine the passkey setting.

NOTE:
When selecting "Go Back", the previous menu will be displayed.

Deletion of phone information (Delete Phone)

Follow the instructions below to delete the registered information of the phone.

- 1) Press the [®] setup button (4).
The [®] setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "List Phone", and press the knob (1) to determine the selection.

- 4) Turn the TUNE FOLDER PUSH SOUND knob (1) to select a phone to be deleted, and press the knob (1) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete Phone", and press the knob (1) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Delete?", and press the knob (1) to determine the selection.
- 7) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Confirm", and press the knob (1) to determine the selection.

NOTE:
When selecting "Go Back", the previous menu will be displayed.

BT function on/off (BT Power)

Follow the instructions below to turn on/off the [®] function.


- 1) Press the [®] setup button (4).
The [®] setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "Setup", and press the knob (1) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (1) to select "BT Power", and press the knob (1) to determine the selection.

- 4) Press the TUNE FOLDER PUSH SOUND knob (1) to select "BT Power On" or "BT Power Off".

NOTE:

- When the BT function is turned off, the connection between this unit and the registered phone in use will be disconnected.
- When selecting "Go Back", the previous menu will be displayed.

[®] audio (if equipped)

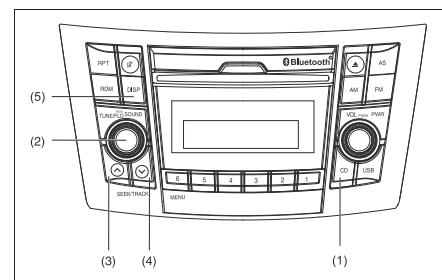


74LHT5009


NOTE:
Applicable for [®] audio version 2.1 and above

OTHER CONTROLS AND EQUIPMENT

Steering switch

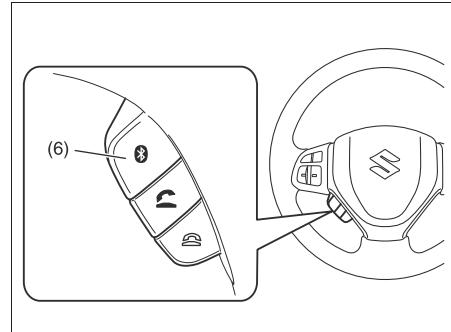

Display

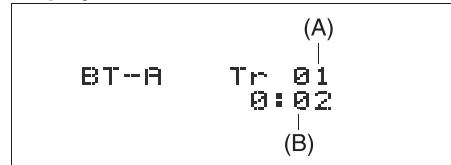

- (1) CD button
- (2) TUNE FOLDER PUSH SOUND knob
- (3) UP button
- (4) Down button
- (5) DISP button
- (6) setup button

(A) Track number
(B) Play time

Registration of audio devices

To use ® ready audio devices with this unit, it is required to register the devices.

NOTE:

- To set up a new audio player, disconnect the phone from the unit. Connect the phone after audio player setup is completed if necessary.
- When failed to establish the connection within 120 seconds, the connecting operation will be canceled. Please try again or refer to the audio player manual for assistance with the pairing process.
- A separate audio mobile device can be selected for audio, even if a phone is already connected to the hands free profile.

- 1) Press the ® setup button (6).
The ® setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup", and press the knob (2) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Pairing", and press the knob (2) to determine the selection.
- 4) Select "CAR AUDIO" from the ® menu of the audio player and establish the pairing.
Refer to the manual of the audio player in use for further information.

- 5) Enter the Passkey displayed on the unit to the audio player. (For phones with version 2.1 or above passkey input is not required)


NOTE:

- When selecting "Go Back", the previous menu will be displayed.
- When additionally registering audio devices, operate the same step from 1).

OTHER CONTROLS AND EQUIPMENT

Selecting the [®] audio mode

Press the CD button (1).
Each time the button is pressed, the mode will change as follows:

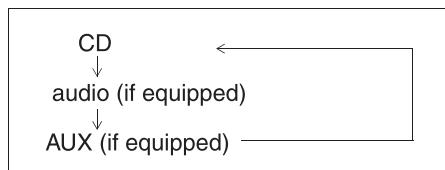

Selecting a group (only for supported models)

Turn the TUNE FOLDER PUSH SOUND knob (2) to select a group.

Selecting a track

- Press the Up button (3) to listen to the next track.
- Press the Down button (4) twice to listen to the previous track.

When the Down button (4) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track


- Hold down the Up button (3) to fast forward the track.
- Hold down the Down button (4) to fast rewind the track.

NOTE:

Some functions may not be available depending on [®] audio.

Display change

Press the DISP button (5).
Each time the button is pressed, display will change as follows:

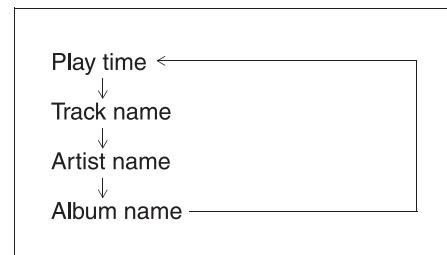

NOTE:

If text data contains more than 12 characters, the ">" mark will appear at the right end. Holding down the DISP button (5) for 1 second or longer can display the next page.

Selection of audio device (Select Audio)

Follow the instructions below to select an audio device to be paired with from the registered audio devices.

- 1) Press the [®] setup button (6).
The [®] setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup", and press the knob (2) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "List Audio", and press the knob (2) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (2) to select an audio device to be used, and press the knob (2) to determine the selection.
- 5) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Select", and press the knob (2) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Confirm", and press the knob (2) to complete the pairing.

NOTE:

- When selecting "Go Back", the previous menu will be displayed.
- The phone will be disconnected when the [®] ready audio device is selected.

OTHER CONTROLS AND EQUIPMENT

List of audio devices (List Audio)

Follow the instructions below to display the names of the registered audio devices in sequence.

- 1) Press the \circledast setup button (6).
The \circledast setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup", and press the knob (2) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "List Audio", and press the knob (2) to determine the selection. The names of registered audio devices will be displayed in sequence.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Passkey setting (Set Passkey)

Follow the instructions below to set the security number (Passkey).

- 1) Press the \circledast setup button (6).
The \circledast setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup", and press the knob (2) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Passkey", and press the knob (2) to determine the selection.
- 4) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "New Pass-

key", and press the knob (2) to determine the selection.

- 5) Press or turn the TUNE FOLDER PUSH SOUND knob (2) to select "Confirm".
- 6) Turn the TUNE FOLDER PUSH SOUND knob (2) to select a number for the first digit, and press the knob (2) to determine the selection. Select and determine numbers for the second, third and fourth digits in order in the same manner. When not entering up to the eighth digit, enter blanks for the successive digits.
- 7) Turn the TUNE FOLDER PUSH SOUND knob (2) to determine the passkey setting.

NOTE:

When selecting "Go Back", the previous menu will be displayed.

Deletion of audio device information (Delete Audio)

Follow the instructions below to delete the registered information of audio device.

- 1) Press the \circledast setup button (6).
The \circledast setup menu will be displayed.
- 2) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Setup", and press the knob (2) to determine the selection.
- 3) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "List Audio", and press the knob (2) to determine the selection.

- 4) Turn the TUNE FOLDER PUSH SOUND knob (2) to select an audio device to be deleted, and press the knob (2) to determine the selection.

- 5) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Delete", and press the knob (2) to determine the selection.
- 6) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Delete?", and press the knob (2) to determine the selection.
- 7) Turn the TUNE FOLDER PUSH SOUND knob (2) to select "Confirm", and press the knob (2) to complete the deletion.

NOTE:

When selecting "Go Back", the previous menu will be displayed.


Disclaimer for \circledast function

- Depending on the mobile phone models, some phones may not be compatible fully or partially (some function may be restricted).
- Connectivity or voice quality may get affected depending on circumstances.
- After the ignition switch is turned to the "ON" position, the audio system takes few seconds to detect and connect to the \circledast device (if already paired).
- Make sure that you are aware of all applicable local laws and accordingly use device.

OTHER CONTROLS AND EQUIPMENT

Remote Audio Controls (if equipped)

Controlling of basic functions of the audio system is available using the switches on the steering wheel.

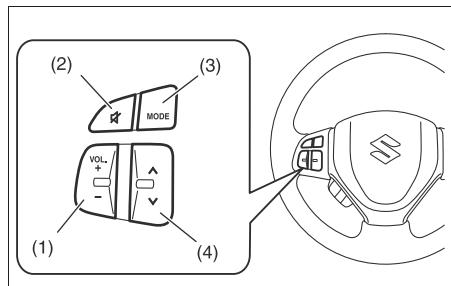


Adjusting the volume

- To increase the volume, hold down "+" of the VOL switch (1). The volume will keep on being increased until the switch is released.
- To decrease the volume, hold down "-" of the VOL switch (1). The volume will keep on being decreased until the switch is released.
- To mute the sound, press the switch (2).

Selecting the mode

Press the switch (3).

Each time the button is pressed, the mode will change as follows:

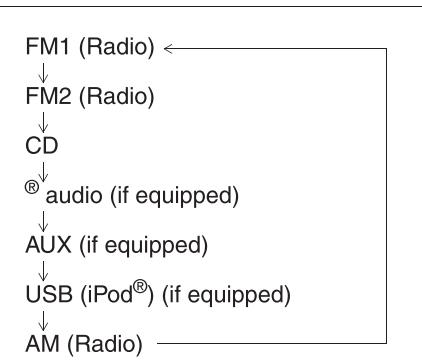

It is possible to turn on the audio system by pressing the switch (3).

Selecting the radio station (FM1, FM2, AM mode)

- To select the next preset station, press "Λ" of the switch (4) only for a moment.
- To select the previous preset station, press "V" of the switch (4) only for a moment.
- To scan a higher frequency radio station, press "Λ" of the switch (4) for 1 second or longer.
- To scan a lower frequency radio station, press "V" of the switch (4) for 1 second or longer.


Selecting the track (CD, USB (iPod®), ® audio mode)

- To skip to the next track, press "Λ" of the switch (4) only for a moment.
- To skip to the previous track, press "V" of the switch (4) twice only for a moment. When the switch (4) is pushed down once only for a moment, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- To fast forward, press "Λ" of the switch (4) for 1 second or longer.
- To fast rewind, press "V" of the switch (4) for 1 second or longer.

Anti-Theft Feature

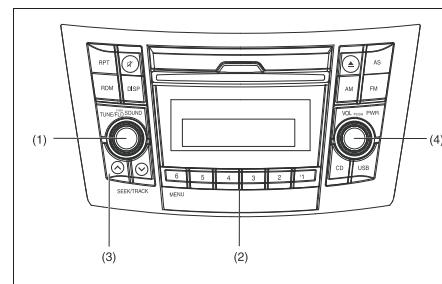

(1) VOL PUSH POWER knob

(2) Preset buttons ([1] to [6])

(3) Up button

(4) TUNE FOLDER PUSH SOUND knob

OTHER CONTROLS AND EQUIPMENT

The anti-theft function is intended to discourage thefts, such as that the audio system becomes inoperable when it is installed on other vehicles.

This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the battery is disconnected, the unit will become inoperable until the PIN is reentered.

Setting the Anti-Theft Function

- 1) Press the VOL PUSH POWER knob (1) to power off.
- 2) Hold down the buttons numbered [1] and [6] of the Preset buttons (2) and press the VOL PUSH POWER knob (1). "SECURITY" will be displayed.
- 3) Press the Up button (3) and the button numbered [1] of the Preset buttons (2) simultaneously.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of the Preset buttons (2).
- 5) Hold down the TUNE FOLDER PUSH SOUND knob (4) for 1 second or longer to set the anti-theft function.

NOTE:

Take a note of the registered PIN and keep it for the future use.

Cancelling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- 1) Press the VOL PUSH POWER knob (1) to power off.
- 2) Hold down the buttons numbered [1] and [6] of the Preset buttons (2) and press the VOL PUSH POWER knob (1). "PIN ENTRY" will be displayed.
- 3) Press the Up button (3) and the button numbered [1] of the Preset buttons (2) simultaneously.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of the Preset buttons (2).
- 5) Hold down the TUNE FOLDER PUSH SOUND knob (4) for 1 second or longer to delete the registered PIN. The indication "----" will be displayed and the anti-theft function will be canceled.

NOTE:

To change your PIN, first delete your current PIN, then set a new one.

Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the battery is replaced, etc, it is required to enter the PIN to make the unit operable again.

- 1) Set the ignition switch to the "ACC" position.
"SECURITY" will be displayed.
- 2) Press the Up button (3) and the button numbered [1] of the Preset buttons (2) simultaneously.
- 3) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of the Preset buttons (2).
- 4) Hold down TUNE FOLDER PUSH SOUND knob (4) for 1 second or longer.

When the PIN same as registered is entered, the power of the audio system will be turned off automatically and it will become operable again.

NOTE:


If an incorrect PIN is entered, "ERROR" and the total number of incorrect entry attempts will be displayed.

If an incorrect PIN is entered 10 times, "HELP" will be displayed and the audio system will become inoperable.

OTHER CONTROLS AND EQUIPMENT

Battery Installation

Install a lithium battery (CR2025) with the poles facing the correct direction.

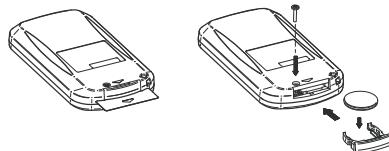

Battery replacement timing

- When battery power is depleted, the button may not be operable. If the remote controller does not operate, replace the battery and check the operation.

Caution on battery

- Be sure to follow the instructions to prevent battery leakage, over-heating, ignition or explosion.

⚠ WARNING

- Do not expose the battery to flame. Do not short circuit, disassemble, or heat the battery.
- Do not charge the battery.
- Use the specified type battery.
- Keep the button-shaped battery away from children to prevent accidental swallowing.

If the battery is swallowed, contact a doctor immediately.

⚠ CAUTION

- Install the battery with the poles facing the correct direction.
- When not in use for a long period of time, or if the battery is dead, remove the battery from the remote controller.


If battery leakage has occurred, wipe the container first then install a new battery. If the battery solution contacts the skin, wash off with water completely.

Caution on Remote Controller

- Do not leave the remote controller in an area exposed to direct sunlight, such as on the dashboard or steering wheel. The remote controller may deform because of the heat, (Be especially careful of the dashboard exposed to direct sunlight in the summer, as it will become extremely hot).
- When the vehicle is parked in an area exposed to direct sunlight, Ensure the remote controller is placed in an area not exposed to direct sunlight. For example: Glove box.
Under direct sunlight, signal reception from the remote controller weakens. If this happens, hold the remote controller close to the signal receptor on the front panel.


OTHER CONTROLS AND EQUIPMENT

Remote Controller Common operations

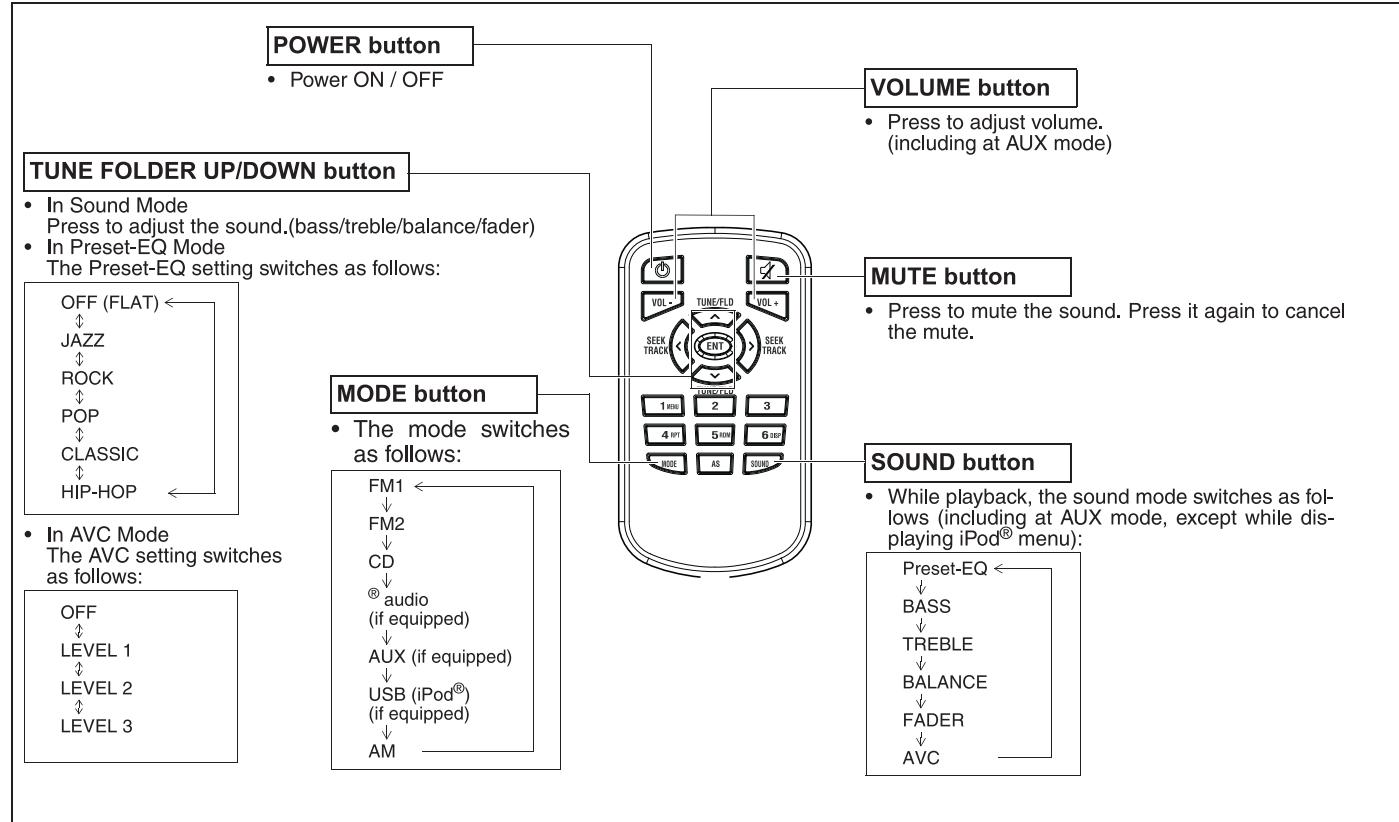

OTHER CONTROLS AND EQUIPMENT

Radio operations

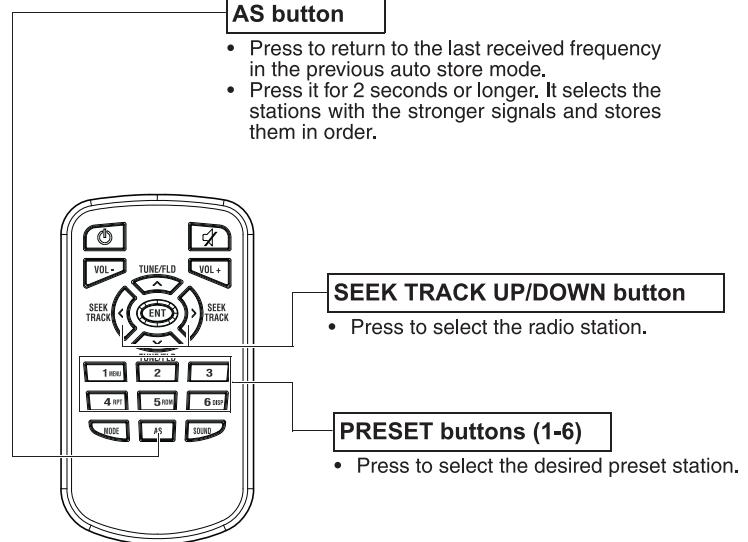


NOTE:

When there are fewer than 6 stations that can be stored even if 1 round of auto store operation is performed, no station will be stored at the remaining preset buttons.


OTHER CONTROLS AND EQUIPMENT

CD operations

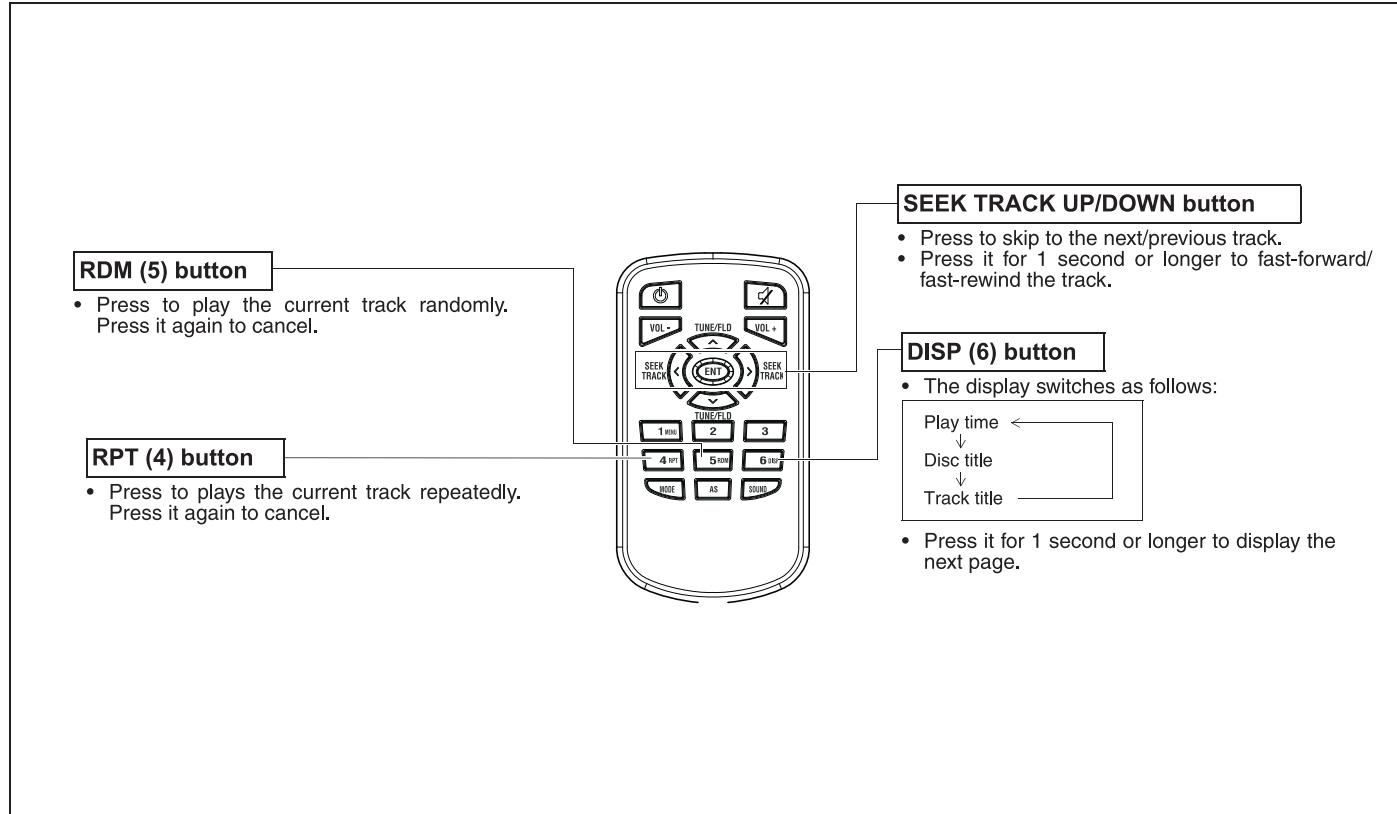

OTHER CONTROLS AND EQUIPMENT

MP3/WMA/AAC Disc operations

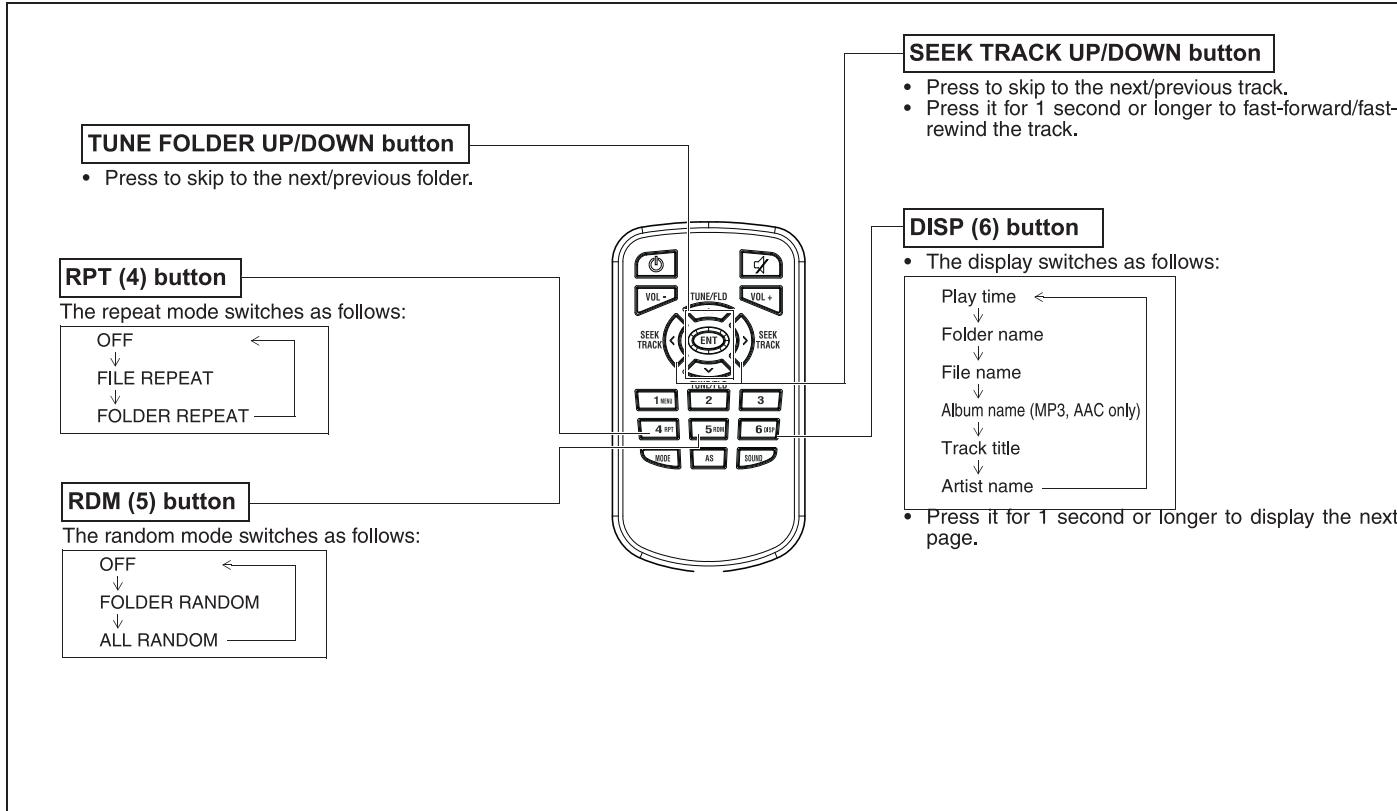

OTHER CONTROLS AND EQUIPMENT

USB operations

The diagram shows a car stereo remote control with the following labels and descriptions:

- TUNE FOLDER UP/DOWN button**
 - Press to skip to the next/previous folder.
- RPT (4) button**

The repeat mode switches as follows:


```
OFF ←  
↓ FILE REPEAT  
↓ FOLDER REPEAT
```
- RDM (5) button**

The random mode switches as follows:

```
OFF ←  
↓ FOLDER RANDOM  
↓ ALL RANDOM -
```
- SEEK TRACK UP/DOWN button**
 - Press to skip to the next/previous file.
 - Press it for 1 second or longer to fast-forward/fast-rewind the file.
- DISP (6) button**
 - The display switches as follows:
 - Play time
 - Folder name
 - File name
 - Album name (MP3, AAC only)
 - Track title
 - Artist name
 - Press it for 1 second or longer to display the next page.

OTHER CONTROLS AND EQUIPMENT

iPod® operations

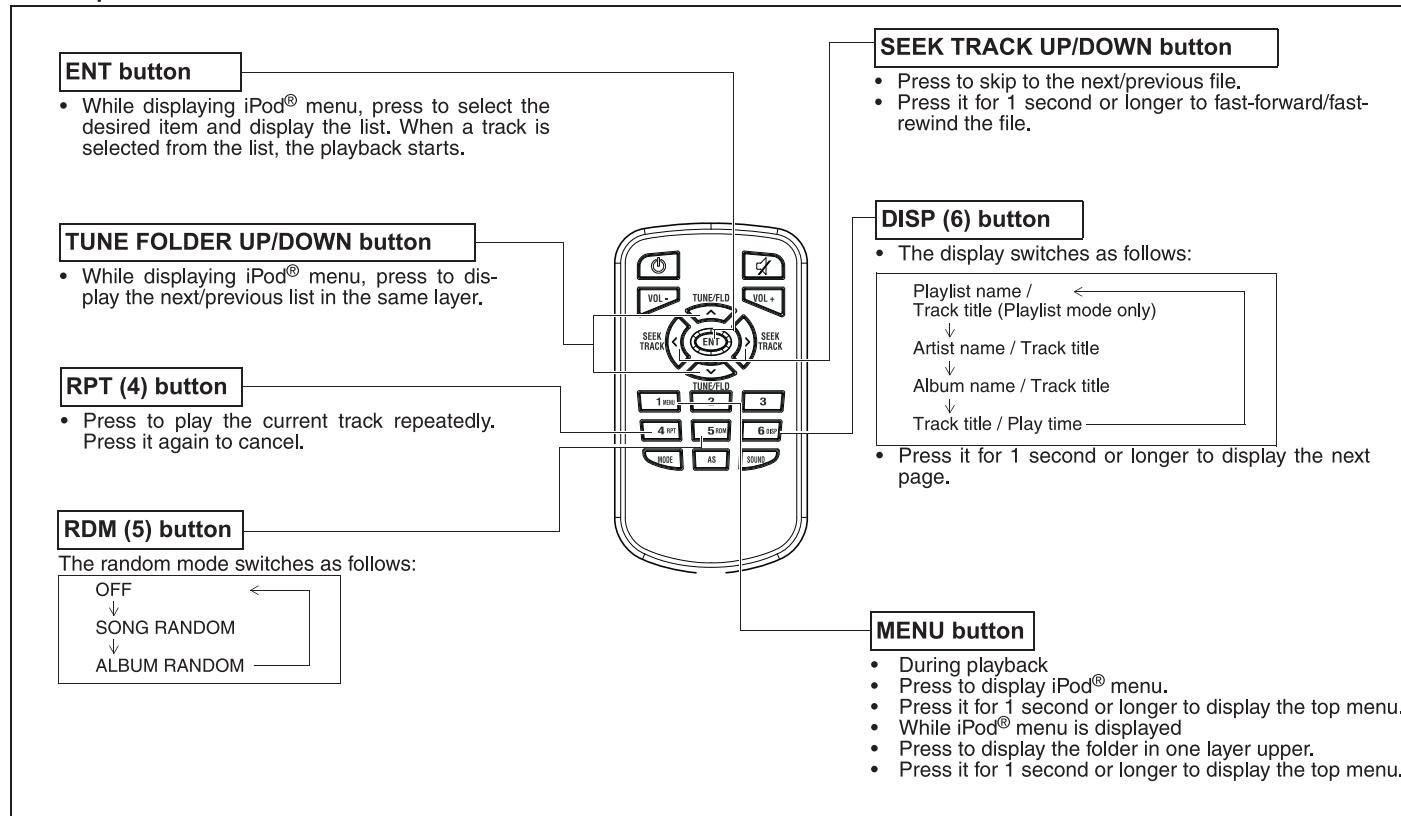

OTHER CONTROLS AND EQUIPMENT

Troubleshooting

When encountered a problem, check and follow the instructions as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your authorized MARUTI SUZUKI dealer.

Problem	Possible cause	Possible solution
---------	----------------	-------------------

Common

Unable to operate	The security function is on.	When "SECURITY" is displayed, enter the ID. When "HELP" is displayed, contact your authorized MARUTI SUZUKI dealer.
Unable to turn on the power (no sound). (No sound is produced)	Fuse is blown.	Contact your authorized MARUTI SUZUKI dealer.

Radio

Much noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.

CD

Sound skips or noise produced	The disc is dirty.	Wipe the disc with a soft cloth.
	The disc has a major scratch or is warped.	Replace the disc with the one with no scratch and also not warped.

OTHER CONTROLS AND EQUIPMENT

Problem	Possible cause	Possible solution
---------	----------------	-------------------

MP3/WMA/AAC

No playback	The disc contains unsupported formatted data.	Check the file format.
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.

USB

Playback does not start when the USB device is connected.	There is no supported format file to play on this unit.	Check the file format.
	The current consumption of the USB device exceeds 1.0 A.	Use an USB device with a current consumption lower than 1.0 A.

®

Pairing failed	The distance between this unit and the ® ready device is too far, or a metallic object may be located between the ® ready device and this unit.	Change the location of the ® ready device.
	The ® function of the ® ready device is off.	Refer to the manual of the ® ready device. (Some devices have the power saving function that automatically activates after a certain time.)
Unable to receive a call.	Your current location may be out of service area.	Drive your vehicle to the service area of the phone.
The voice quality of hands-free is low (Distortion, noise etc.).	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit.

OTHER CONTROLS AND EQUIPMENT

Error Display Messages

Display	Possible cause	Possible solution
---------	----------------	-------------------

CD

ERROR 1	The disc cannot be read.	Insert the disc with its label side up. Check the disc if it is not warped or is free of flaws. When ERROR 1 does not disappear even when a normal disc is inserted, contact your dealer.
ERROR 3	The player developed an error of an unidentified cause.	When the CD is in the unit, press the CD eject button to remove the disc. When the disc cannot be ejected, contact your dealer.

USB/iPod®

ERROR 1	The USB device is disconnected.	Check the connection of the USB device.
ERROR 2	Impossible to communicate correctly with the USB device.	Unplug the USB device and plug it again. Check the USB device.
ERROR 3	Inoperable due to an unidentified cause.	Unplug the USB device and plug it again. When ERROR 3 does not disappear, contact your dealer.
ERROR 4	The current consumption of the USB device exceeds 1.0 A.	Check the USB device.

OTHER CONTROLS AND EQUIPMENT


Display	Possible cause	Possible solution
®		
ERROR 1	The player developed an error of an unidentified cause.	Disconnect the ® ready device and connect it again. When ERROR 1 does not disappear, contact your dealer.
Failed	Failed to establish pairing	Try to establish the pairing again.
Memory Full	Reached the limit for the number of connected device information	Delete information of unnecessary devices and try to establish the pairing again.
Not Avail.	Inoperable during driving	Operate the system after pulling over your vehicle.
Not Linked	Phone is disconnected	Try to establish the pairing again.

OTHER CONTROLS AND EQUIPMENT

Fuel Filler Cap

Swift


EXAMPLE

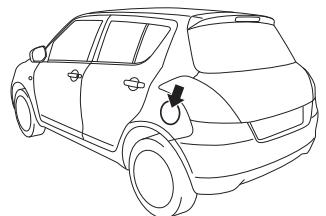


68LM522

Dzire

EXAMPLE

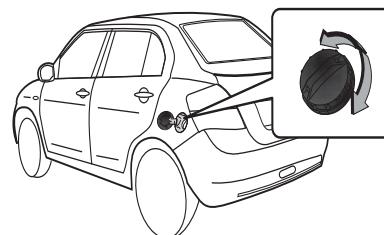


EXAMPLE

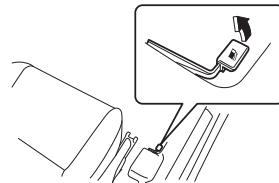

74LHT0511

The fuel filler cap is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard side of the driver's seat and locked by simply closing the door.

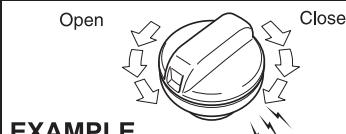

57I51093


To remove the fuel filler cap:

- 1) Open the fuel filler door.
- 2) Remove the cap by turning it counter clockwise.

CAUTION

Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

EXAMPLE

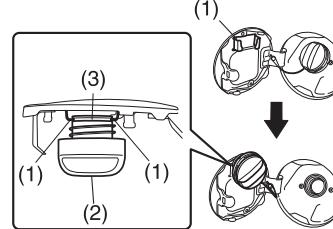

68MLT0503

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

To reinstall the fuel filler cap:

- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.

WARNING

Fuel is extremely flammable. Do not smoke when refueling, and make sure there are no open flames or sparks in the area.


WARNING

If you need to replace the fuel cap, use a genuine MARUTI SUZUKI cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage in the event of an accident.

OTHER CONTROLS AND EQUIPMENT


Engine Bonnet

EXAMPLE

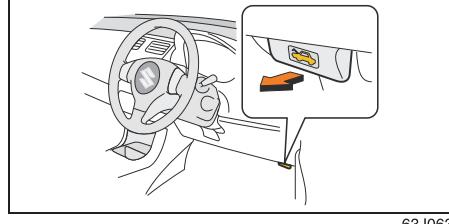


To open the engine hood:

- 1) Pull the hood release handle located on the outboard side of the driver's side of the instrument panel. This will disengage the engine hood lock halfway.

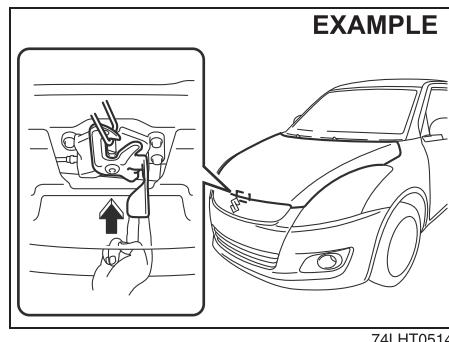

- 2) Push the under-hood release lever up with your finger, as shown in the illustration.

tion. While pushing the lever, lift up the engine hood.

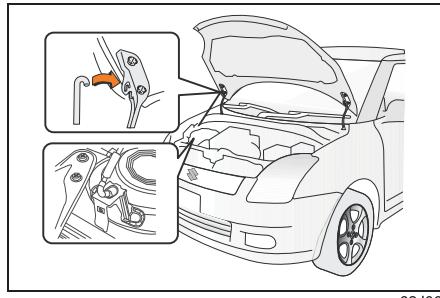

- 3) Continue to lift up the hood until it is high enough to support with the prop rod.

To close the engine hood:


- 1) Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back to the holding clip.
- 2) Lower the hood to about 20 cm above the hood latch, then let it drop down. Make sure the hood is securely latched after closing.

WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Sun Visor

EXAMPLE

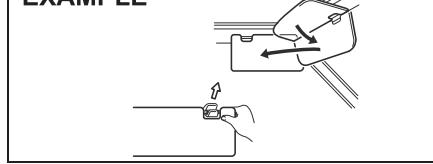


The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, be sure to handle it by the hard plastic parts or the sun visor can be damaged.

Card holder (if equipped)

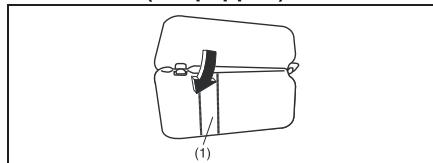

(1) Card holder

You can put a card in the card holder (1) on the back of the sun visor.

OTHER CONTROLS AND EQUIPMENT

NOTICE

When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

Vanity mirror (if equipped)

EXAMPLE



74LHT0532

(2) Vanity mirror


WARNING

- Do not use the mirror while driving your vehicle or could lose control of the vehicle.
- When using the vanity mirror, do not move too close to a front air bag location or lean against it. If the front air bag is accidentally inflated, it could hit you hard.

Interior Light

Front Overhead Light (if equipped)


EXAMPLE

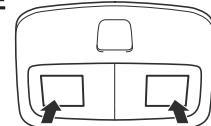

64J104

Push the switch to turn on the light and push it again to turn off the light.

Center Overhead Light (if equipped)

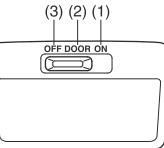

64J104

These light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

DOOR (2)


The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you insert the key into the

ignition switch during this time, the light will start to fade out immediately. After removing the key from the ignition switch, the light will turn on for about 15 seconds and then fade out.

OFF (3)

The light remains off even when the door is opened.

EXAMPLE

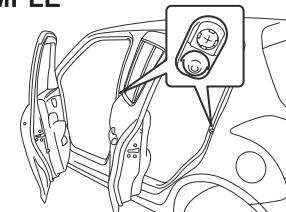


68LM529

NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber projection) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber projection.

OTHER CONTROLS AND EQUIPMENT


Trim Partition (if equipped)

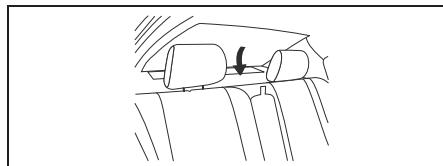

WARNING

Do not carry items on top of the Trim partition cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.

Luggage Compartment Light (if equipped)

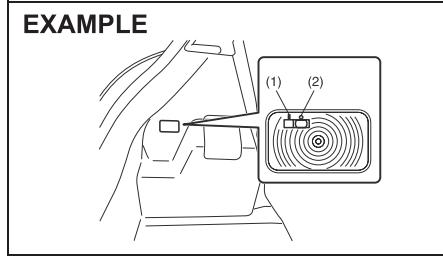

71LMT0505

When you open the tailgate with the luggage compartment light switch in the "ON" position (1), the light comes on and


remains on as long as you keep the tailgate open.

When the luggage compartment light switch is in the "OFF" position (2), the light remains off regardless of whether the tailgate is opened or closed.

CAUTION

Do not leave the tailgate open with the luggage compartment light switch in the "ON" position for a long time, or the battery will discharge.

Trunk Light (if equipped)

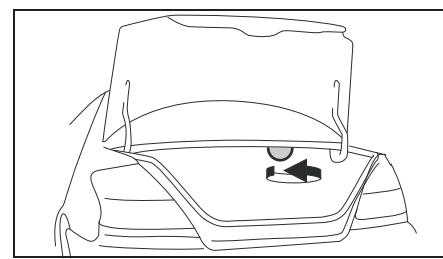

74LHM0501


When you open the trunk lid, the trunk light comes on and remains on as long as you keep the lid open.

NOTICE

Do not leave the trunk lid open for a long time, or the battery will discharge.

Accessory Socket (if equipped)


Front

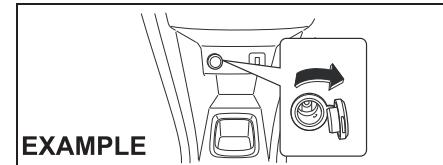

EXAMPLE

74LHT0517

Rear

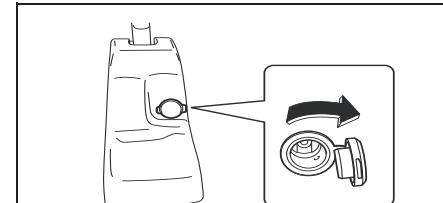

EXAMPLE

60MK061

This socket can be used to provide 12 volt/120 watt power for electrical accessories.

NOTICE

Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Make sure that any electrical accessories you use are designed to plug into this type of socket.

OTHER CONTROLS AND EQUIPMENT

AUX/USB Socket (if equipped)


EXAMPLE



74LHT0518

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system using it as a source. Refer to "Audio System" in the "OTHER CONTROL AND EQUIPMENT" section.

Assist Grips

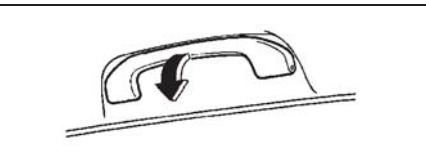

54G249


Assist grips are provided for passenger convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Assist grips is not provided on driver seat.

Glove Box

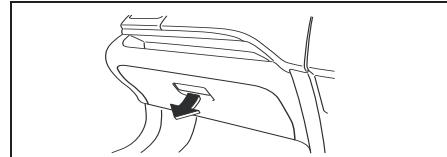


74LHT0519

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

WARNING


Never drive with the glove box lid open. It could cause injury if an accident occurs.

Cup Holder and Storage Area (if equipped) Front

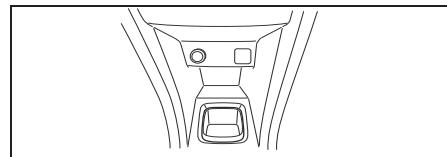

74LHT0520


Passenger side

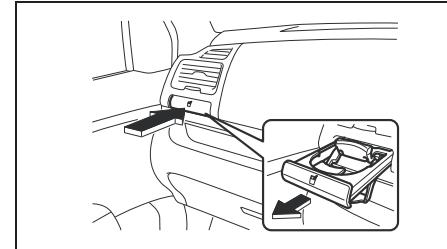

74LHT0529

To use the cup holder, push it. The cup holder slides out automatically. After using the holder, push it back to return it.

Rear

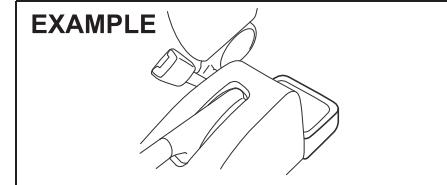

74LHT0527

The storage area is provided in the center console.

OTHER CONTROLS AND EQUIPMENT


▲ CAUTION

Do not use the cup holder to hold cups containing hot liquids, or sharp-edged, hard or breakable objects. Objects in the cup holder may be thrown about during a sudden stop or impact, and could cause personal injury.

Bottle holder

Front


EXAMPLE

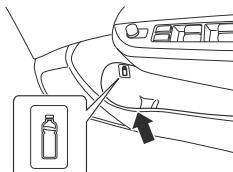

74LHT0522

Rear

EXAMPLE

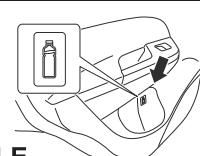


68LM542

You should hold a bottle with a cap in the holder.

Front Seat Back Pocket (if equipped)

EXAMPLE

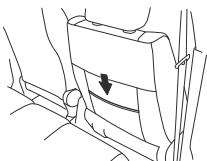


74LHT0535

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

▲ CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.

Floor Mats (if equipped)

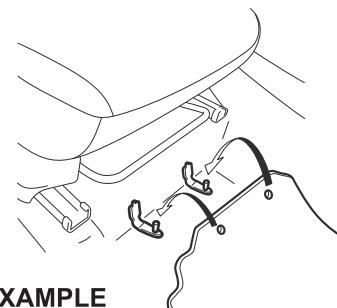

74LHT0534

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, genuine MARUTI SUZUKI floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, be sure to hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend using genuine MARUTI SUZUKI floor mats for proper fitting.

OTHER CONTROLS AND EQUIPMENT

⚠ WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Make sure that the floor mat grommets are hooked to the fasteners.
- Never place additional floor mats on top of the existing floor mats.

Shopping Hook (if equipped)

The shopping hooks are located on the both sides of the luggage compartment. You can hang the shopping bag or other suitable objects on the hook. This hook is not designed for large or heavy items.


NOTICE

To avoid breaking the hook, do not hang items heavier than following weight.

- Shopping hook: 2 kg (4.4 lbs)

Rear


EXAMPLE

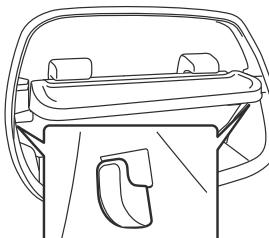

74LHT0524

Luggage Area Cover (if equipped)

EXAMPLE

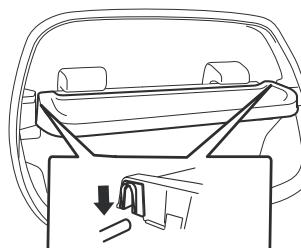

74LHT0525

Luggage or other cargo placed in the luggage area is hidden from view by a luggage area cover.

⚠ WARNING

Do not carry items on top of the luggage area cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.

NOTICE


To avoid damaging the luggage area cover:

- Do not push down on it or lean on it
- Handle it carefully when installing or removing.

Frame Hooks

Front

EXAMPLE

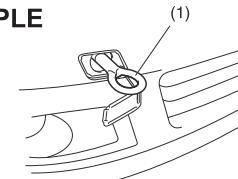

63J117


The towing hook (1) is provided on the front of the vehicle for use in emergency situations only.

To install the hook (1), follow the procedure below.

5-53


OTHER CONTROLS AND EQUIPMENT

(with spare tyre)

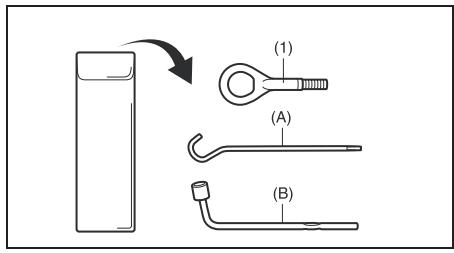

74LHT0528


- Pick up the towing hook (1), jack handle (A) and wheel brace (B) kept in the storage bag under the spare tyre in the luggage compartment

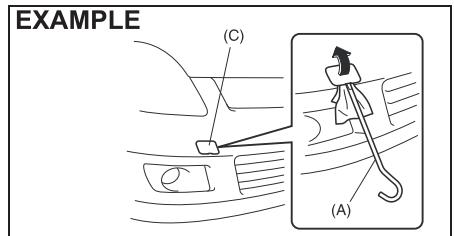

68LM546


- Remove the cover (C) by using a jack handle (A) covered with a soft cloth as shown in the illustration.

EXAMPLE

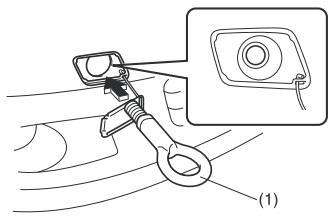

63J120

- Install the towing hook (1) by hand.

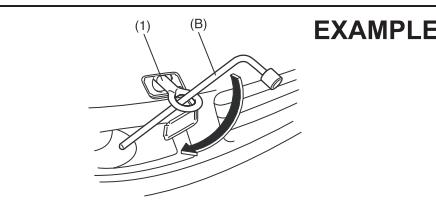

62J161

- To tighten the towing hook (1), turn it clockwise by using a wheel brace (B) until the hook (1) is securely installed.

NOTICE


When you use the towing hook (1), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, the vehicle body or the drive system.

Do not sudden accelerate.

To remove the towing hook (1), reverse the procedure used to install the towing hook.

Rear

EXAMPLE

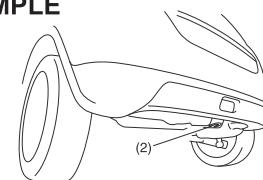

68LM547

The frame hook (2) is provided on the rear of the vehicle for use in emergency situations and trailer/train shipping purposes only.

NOTICE

When you use the frame hook (2), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, the vehicle body or the drive system.


- Do not sudden accelerate.
- Do not tow the vehicle heavier than your vehicle.

To tow your vehicle on the road or highway, follow the instruction of "Towing" in "EMERGENCY SERVICE" section.

OTHER CONTROLS AND EQUIPMENT

Other Hooks

EXAMPLE

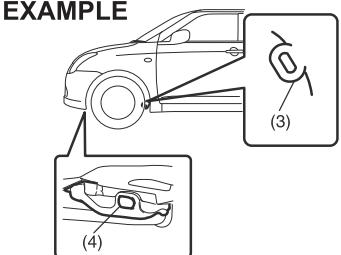

74LHT0536

The hooks (3) (if equipped) is provided for trailer/train shipping purposes only. The hooks (4) are provided for sea shipping purpose only.

! WARNING

Do not use the frame hooks to tow another vehicle or to have your vehicle towed on the road or highway. The hook (1) is designed for use in emergency situations only, such as if your vehicle or another vehicle gets stuck in deep mud or snow. The hook (2) is designed for use in emergency situations and trailer/train shipping only.


The hooks (3) (if equipped) is provided for trailer/train shipping purposes only. The hooks (4) are provided for sea shipping purpose only.

NOTICE

Never use the hooks (1) for trailer/train shipping and sea shipping purposes to prevent damage to the vehicle.

Luggage Carpet Hook (if equipped)

EXAMPLE

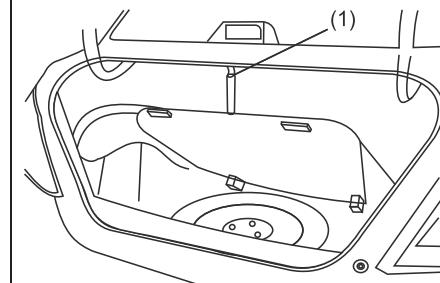

The hook (1) is provided in the luggage compartment area to hang the luggage carpet.

VEHICLE LOADING AND TOWING

VEHICLE LOADING AND TOWING

Vehicle Loading	6-1
Trailer Towing	6-1
Vehicle/Trailer Loading	6-2
Additional Trailer Towing Warnings	6-3
Towing Your Vehicle	6-4
Towing Instruction Table	6-4

VEHICLE LOADING AND TOWING

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Gross Axle Weight Rating (GAWR, front and rear). The GVWR and GAWR (front and rear) are listed in the "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

GAWR – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and GAWR (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

! WARNING

Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Gross Axle Weight Rating (GAWR).

! WARNING

Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer Towing

Your MARUTI SUZUKI was originally designed to carry people and a normal amount of cargo, not to tow a trailer. MARUTI SUZUKI does not recommend you use your vehicle to tow a trailer. Towing a trailer can adversely affect handling, durability,

Some countries have regulations which specifically allow trailer towing up to a specified maximum trailer weight (registered or statutory towing capacity, whichever is smaller); vehicles sold in these countries can be used to tow a light trailer, provided the trailer does not exceed the maximum trailer weight specified in the country's regulations.

If you use your MARUTI SUZUKI to tow a trailer, you should always observe the requirements and recommendations in this section. If you intend to tow a trailer, it is essential to select a trailer and trailer towing equipment which are compatible. A reputable towing specialist can help you and fuel economy.

NOTICE

Trailer towing puts additional stress on the engine, drive train, and brakes of your vehicle. Never tow a trailer during the first 960 km (600 miles) of vehicle operation.

VEHICLE LOADING AND TOWING

Brakes

⚠ WARNING

If trailer brakes are used, you should follow all instructions provided by the manufacturer. Never connect to the brake system of your vehicle and never take an electrical supply directly from the wiring harness.

Tyres

⚠ WARNING

When towing a trailer, it is very important for your vehicle and trailer to have properly inflated tyres. Your vehicle's tyres should be inflated to the pressures listed on your vehicles Tyre Information label. If laden pressures are listed on the label, the tyres should be inflated to the laden pressures. Inflate trailer tyres according to the specifications provided by the trailer manufacturer.

Mirrors

Check to see if your vehicle's mirrors meet local requirements for mirrors used on towing vehicles. If they do not, you must install the required mirrors before you tow.

Vehicle/Trailer Loading

To load your vehicle and trailer properly, you must know how to measure gross trailer weight and trailer nose weight.

Gross Trailer Weight is the weight of the trailer plus all the cargo in it. You can measure gross trailer weight by putting the fully loaded trailer on a vehicle scale.

Nose Weight is the downward force exerted on the tow bar by the trailer coupler, with the trailer fully loaded and the coupler at its normal towing height. This weight can be measured using a bathroom scales.

The weight of your loaded trailer (Gross Trailer Weight) should never exceed the "Towing capacity".

Distribute cargo in your trailer so that nose weight is about 10% of gross trailer weight, but does not exceed "Maximum vertical load on trailer hitch point". You should measure gross trailer weight and nose weight before towing to make sure that your load is properly distributed.

⚠ WARNING

Improper weight distribution of your trailer may result in poor vehicle handling and swaying of the trailer. Always make sure that trailer nose weight is about 10% of gross trailer weight, but does not exceed "Maximum vertical load on trailer hitch point". Also make sure that the cargo is properly secured. Failure to observe this requirement may result in an accident.

⚠ WARNING

Never overload your trailer or your vehicle. Gross trailer weight must never exceed the "Towing capacity". Gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories including tow bars and a trailer hitch, cargo and trailer nose weight) must never exceed the Gross Vehicle Weight Rating (GVWR) listed in the "SPECIFICATIONS" section.

VEHICLE LOADING AND TOWING

Additional Trailer Towing Warnings

⚠ WARNING

Connect trailer lights and hook up safety chains every time you tow.

NOTICE

Because towing a trailer puts additional stress on your vehicle, more frequent maintenance will be required than under normal driving conditions.

⚠ WARNING

Your vehicle will handle differently when towing a trailer. For your safety and the safety of others, you should observe the following precautions:

- Practice turning, stopping, and reversing before you begin towing in traffic. Do not tow in traffic until you are confident that you can handle the vehicle and trailer safely.
- Never exceed towing speed limits or 80 km/h (50 mph), whichever is lower.
- Never drive at a speed that causes shaking or swaying of the trailer. If you notice even the slightest sign of shaking or swaying, slow down.
- When roads are wet, slippery or rough, drive at a slower speed than you would on dry, smooth roads. Failure to slow down when road conditions are bad can result in loss of control.
- Always have someone guide you when reversing.
- Allow adequate stopping distance. Stopping distance is increased when you tow a trailer. For each 16

(Continued)

⚠ WARNING

(Continued) km/h (10 mph) of speed, allow at least one vehicle and trailer length between you and the vehicle ahead. Follow at a greater distance if roads are wet or slippery.


- If the trailer has over-run brakes, apply the brakes gradually to avoid snatching caused by the trailer wheels locking.
- Slow down before corners and maintain a steady speed while cornering. Deceleration or acceleration while cornering can result in loss of control. Remember that a larger than normal turning radius is needed because the trailer wheels will be closer than vehicle wheels to the inside of the turn.
- Avoid sudden acceleration and stopping of the vehicle. Do not make quick maneuvers unless they are necessary.
- Slow down in cross winds and be prepared for gusts of wind from large passing vehicles.

(Continued)

VEHICLE LOADING AND TOWING

⚠ WARNING

- Be careful when overtaking other vehicles. Be sure to allow enough room for your trailer before you change lanes, and signal well in advance.
- Slow down and change into a lower gear before you reach long or steep downhill grades. It is hazardous to attempt changing down while you are descending a hill.
- Avoid "riding" the brakes. This could cause the brakes to overheat resulting in reduced braking efficiency. Use engine braking as much as possible.
- Because of the added trailer weight, your engine may overheat on hot days when going up long or steep hills. Pay attention to your engine temperature gauge. If it indicates overheating, pull off the road and stop in a safe place. Refer to "If the Engine Overheats" in "EMERGENCY SERVICE" section.

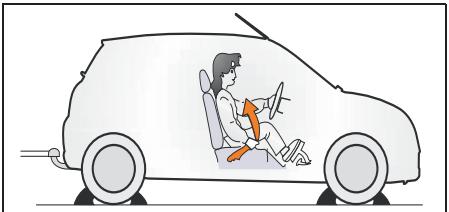

60A186

6-4

⚠ WARNING

When parking your vehicle and connected trailer, always use the following procedure:

- 1) Apply the vehicle's brakes firmly.
- 2) Have another person place wheel chocks under the wheels of the vehicle and the trailer while you are holding the brakes.
- 3) Slowly release the brakes until the wheel chocks absorb the load.
- 4) Fully engage the parking brake.
- 5) Change the manual transmission into reverse or first gear and turn off the engine.

When starting out after parking:

- 1) Depress the clutch and start the engine.
- 2) Change into gear, release the parking brake, and slowly pull away from the chocks.
- 3) Stop, apply the brakes firmly and hold them.
- 4) Have another person remove the chocks.

Towing Your Vehicle

Your vehicle may be towed behind another vehicle (such as a motor-home), provided your vehicle is 2 wheel drive (2WD) and you use the proper towing method specified for your vehicle.

Use the towing instruction table to select the proper towing method for your vehicle,

and carefully follow the corresponding instructions. Be sure to use proper towing equipment designed for recreational towing and make sure that towing speed does not exceed 90 km/h (55 mph)

⚠ WARNING

When you tow your vehicle, follow the instructions below to avoid accidents and damage to your vehicle. In addition, be sure to observe government and local requirements regarding vehicle lighting and trailer hitches or tow bars.

TOWING INSTRUCTION TABLE

DRIVE TRAIN	TRANSMISSION	TOWING METHOD
2WD	M/T (MANUAL)	A/B
2WD	A/T (AUTOMATIC)	A
2WD	AGS (AUTO GEAR SHIFT)	A/B


VEHICLE LOADING AND TOWING

A: 2WD VEHICLES WITH MANUAL TRANSAXLE OR AUTOMATIC TRANSAXLE OR AUTO GEAR SHIFT

- 1) Secure the front wheels on a towing dolly according to the instructions provided by the dolly manufacturer.
- 2) Release the parking brake.

TOWING METHOD A

FROM THE FRONT:
FRONT WHEELS ON A DOLLY
AND REAR WHEELS ON THE GROUND

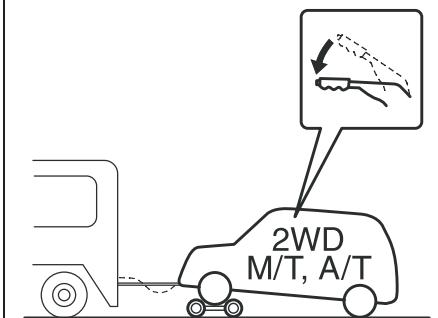

NOTICE



The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

B: 2WD VEHICLES WITH MANUAL TRANSAXLE OR AUTO GEAR SHIFT

- 1) Shift the manual transaxle lever into neutral.
- 2) Turn the ignition key to the "ACC" position or change the ignition mode to the "ACC" to unlock the steering wheel.
- 3) Release the parking brake.

TOWING METHOD B

FROM THE FRONT:
FRONT WHEELS ON THE GROUND

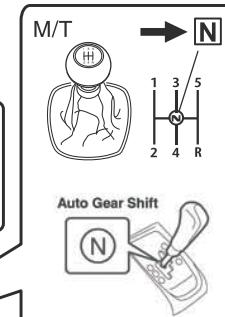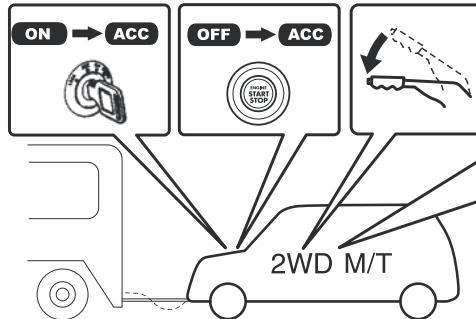

VEHICLE LOADING AND TOWING

NOTICE

After shifting the Auto Gear Shift lever to the "N" position, always check the gear position indicator in the instrument cluster shows the "N" position to make sure that the transaxle is disengaged.

If the transaxle cannot be put in neutral, turn the key from the "LOCK" to the "ON" position, and move the Auto Gear Shift lever from "N" to "D", "M" or "R", then back to "N" again. Then turn the key from the "ON" to the "LOCK" position.

These procedures may help put the transaxle in neutral. If the transaxle still cannot be put in neutral, you cannot tow the vehicle without using a towing dolly.

INSPECTION AND MAINTENANCE

INSPECTION AND MAINTENANCE

Maintenance Schedule	7-2
Periodic Maintenance Schedule	7-2
Drive Belt	7-6
Engine Oil and Filter	7-6
Engine Coolant	7-10
Air Cleaner	7-11
Spark Plugs (Petrol Engine).....	7-11
Gear Oil	7-13
Clutch Pedal	7-14
Fuel Filter (Diesel Engine)	7-15
Brakes	7-16
Steering	7-17
Tires	7-18
Battery	7-20
Fuses	7-22
Bulb Replacement	7-24
Wiper Blades	7-28
Windshield Washer Fluid	7-30
Air Conditioning System	7-30

INSPECTION AND MAINTENANCE



60B128S

⚠ WARNING

You should take extreme care when working on your vehicle to prevent accidental injury. Here are a few precautions that you should be especially careful to observe:

- To prevent damage or unintended activation of the air bag system or seat belt pretensioner system, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position for at least 90 seconds before performing any electrical service work on your vehicle. Do not touch air bag system components, seat belt pretensioner system components or wires.

The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

- Do not leave the engine running in garages or other confined areas.

(Continued)

⚠ WARNING

(Continued)

- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to do service work with the engine running, make sure that the parking brake is set fully and the transmission is in Neutral.
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.
- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.

(Continued)

⚠ WARNING

(Continued)

- Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

INSPECTION AND MAINTENANCE

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in miles, kilometers and months when you should perform inspections, adjustments, lubrication and other services.

⚠ WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by MARUTI SUZUKI authorized workshop/Service station.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI genuine replacement parts or their equivalent.

Periodic Maintenance Schedule

“A”: Adjust
“C”: Clean
“R”: Replace or Change
“I”: Inspect, clean, adjust, lubricate or replace as necessary
“L”: Lubricate
“T”: Tighten to Specified Torque
“O”: Rotate

NOTE:

This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.				FREE INSPECTION			PERIODIC MAINTENANCE AT COST					
		km (x1000)		1	5	10	20	30	40	50	60	70
		months		1	6	12	24	36	48	60	72	84
ENGINE												
1-1.	Water pump drive (Tension, Wear)	Petrol	-	-	-	-	-	I	-	-	-	R
1-2	Engine Coolant (Level, Leakage)		I	I	I	R	I	R	I	R	I	R
1-3	Engine oil and engine oil filter		-	-	R	R	R	R	R	R	R	R
1-4	Cooling system hoses and connections (Leakage and Damage)		I	I	I	I	I	I	I	I	I	I
1-5	Engine Mounting and Manifold Fixing (Loose Damage)		-	-	I	-	I	-	I	-	I	-
1-6	Valve Clearance	Petrol	-	-	-	-	I	-	-	I	-	-
1-7	Exhaust System (Noise, Leakage etc.)		-	I	-	I	-	I	-	I	-	I
1-8	Positive Crank Case Ventilation System (Hoses, Connections and Valve)	Petrol	-	I	-	I	-	I	-	I	-	I
1-9	Exhaust Gas Recirculation Valve	Diesel	-	-	-	-	C	-	-	C	-	-
IGNITION												
2-1.	Ignition wiring (Damage, Deterioration)	Petrol	-	-	-	I	-	I	-	I	-	I
2-2.	Spark Plug (Clean and adjust the gap)	Petrol	-	-	-	-	-	R	-	-	-	R
FUEL												
3-1.	Air cleaner filter element	Paved-road	Petrol	Clean after every 5,000 KM. Replace after every 40,000 KM.								
		Diesel	Replace after every 20,000 KM. Cleaning not required.									
		Dusty Condition	Petrol	Clean after every 2,500 KM or as required. Replace after every 40,000 KM.								
		Diesel	Replace after every 20,000 KM. Cleaning not required. More frequent replacement if dust condition is severe.									
3-2.	Fuel tank cap, fuel lines and connections (Leakage and Damage)		-	I	-	-	-	I	-	-	-	I
3-3.	Fuel Filter (Leakage)	Petrol	I	I	I	I	I	R	I	I	I	R
3-4.	Fuel Filter and Water Draining	Diesel	I	I	I	R	I	R	I	R	I	R
CLUTCH AND TRANSMISSION												
4-1.	Clutch Pedal (Play)	Petrol	I	I	I	I	I	I	I	I	I	I
4-2.	Clutch fluid (level, leakage)	Diesel	I	I	I	R	I	R	I	R	I	R

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.			FREE INSPECTION			PERIODIC MAINTENANCE AT COST					
		km (x1000)	1	5	10	20	30	40	50	60	70
		months	1	6	12	24	36	48	60	72	84
4-3.	Transmission Oil (Manual / Auto Gear Shift)		I	I	I	I	I	I	I	I	I
4-4.	Automatic Transmission Fluid (Level, Leakage)		Replace at 1,60,000 km or 10 years whichever comes first								
4-5.	Hose, Automatic Transmission Fluid		I	I	I	I	I	I	I	I	I
Drive shaft											
5-1.	Drive shaft boot (boot damage)		-	I	I	I	I	I	I	I	I
BRAKE											
6-1.	Brake Fluid (Level, Leakage)		I	I	I	R	I	R	I	R	I
6-2.	Brake pedal (pedal - carpet clearance)		I	I	I	I	I	I	I	I	I
6-3.	Parking brake lever and cable (Play, damage)		I	I	I	I	I	I	I	I	I
6-4.	Brake disc and pad (Wear)		-	I	I	I	I	I	I	I	I
6-5.	Brake drum and shoes (Wear)		-	-	I	I	I	I	I	I	I
6-6.	Master cylinder, wheel cylinder, caliper piston (Fluid leakage, boot/seal damage)		I	I	I	I	I	I	I	I	I
6-7.	Brake hoses and pipes (Fluid leakage, damage)		I	I	I	I	I	I	I	I	I
WHEEL											
7-1.	Tires (air pressure, abnormal wear, crack and rotation)		I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O
7-2.	Wheels (Damage)		I	I	I	I	I	I	I	I	I
7-3.	Front/Rear wheel bearing (Loose, damage)		I	I	I	I	I	I	I	I	I
FRONT / REAR SUSPENSION											
8-1.	Suspension strut (Oil leakage, damage)		I	I	I	I	I	I	I	I	I
8-2.	Suspension arms / Knuckle support (Loose, damage)		-	I	I	I	I	I	I	I	I
8-3.	Rear spring (Damage)		I	I	I	I	I	I	I	I	I
8-4.	Shock absorbers (Oil leakage, damage)		I	I	I	I	I	I	I	I	I
8-5.	All bolts and nuts (Loose)		-	T	T	T	T	T	T	T	T
8-6.	Suspension arms and torsion rods		-	I	I	I	I	I	I	I	I
STEERING											
9-1.	Steering wheel (Play, loose)		I	I	I	I	I	I	I	I	I

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.			FREE INSPECTION			PERIODIC MAINTENANCE AT COST					
			km (x1000)	1	5	10	20	30	40	50	60
		months	1	6	12	24	36	48	60	72	84
9-2.	All rods and arms (Loose, damage, wear)		I	I	I	I	I	I	I	I	I
10-1.	Battery electrolyte (Level, leakage)		I	I	I	I	I	I	I	I	I
ELECTRICAL											
10-2.	Wiring harness connection (Loose, damage)		-	I	I	I	I	I	I	I	I
10-3.	Lightening system (Operation, stains, damage)		I	I	I	I	I	I	I	I	I
10-4.	Horn (Operation)		I	I	I	I	I	I	I	I	I
10-5.	System Voltage		I	I	I	I	I	I	I	I	I
BODY											
11-1.	All chassis bolts and nuts (Tighten)		-	I	T	T	T	T	T	T	T
11-2.	All latches, hinges and locks (Function)		I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAD TEST											
12-1.	Operation of Brakes, gear shifting and speedometer		I	I	I	I	I	I	I	I	I
12-2.	Body and chassis noise		I	I	I	I	I	I	I	I	I
AIR CONDITIONER (If equipped)											
13-1.	Check belt tension		I	I	I	I	I	I	I	I	I
13-2.	Tighten compressor mounting bolt		-	T	T	T	T	T	T	T	T
13-3.	All hose joint (Check, tighten)		I	I	I	I	I	I	I	I	I
13-4.	Check functioning of Recirc flap		I	I	I	I	I	I	I	I	I
13-5.	Clean condenser with low pressure water		-	C	C	C	C	C	C	C	C
13-6.	Check belt for frayed edges		I	I	I	I	I	I	I	I	I
13-7.	Check all mounting bolts		I	I	I	I	I	I	I	I	I
13-8.	Air conditioner filter element (if equipped)		I	I	I	I	R	I	I	R	I

INSPECTION AND MAINTENANCE

Drive Belt

WARNING


When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

(For Petrol Engine Model)

Make sure the drive belt tension is correct. If the belt is too loose, insufficient battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. When you press the belt with your thumb midway between the pulleys, there should be a deflection according to the following chart.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by your MARUTI SUZUKI dealer.

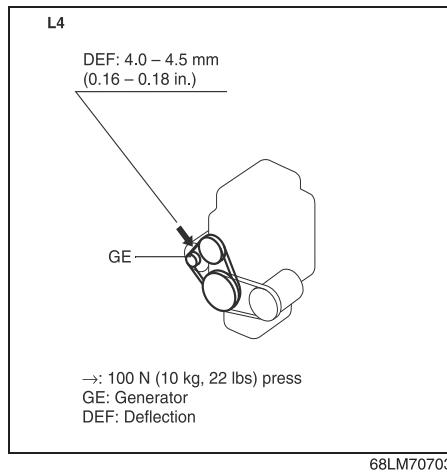

68LM70703


(For Diesel Engine Model)

The drive belts tension adjusted automatically.

Engine Oil and Filter

Specified Oil

(For Petrol Engine Model)

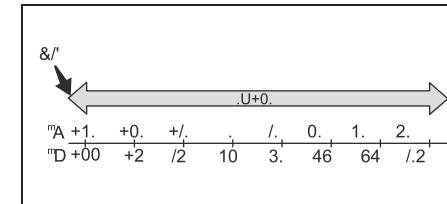


74LHT7001

(1) Preferred

Be sure that the engine oil you use comes under the quality classification of SL. Select the appropriate oil viscosity according to the above chart.

SAE 0W-20 (1) is the best choice for good fuel economy, and good starting in cold weather.

Specified Oil (For Diesel Engine)

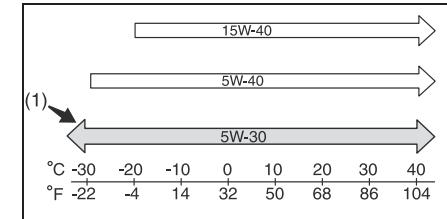

84E010


INSPECTION AND MAINTENANCE

(1) Preferred


Be sure that the engine oil you use comes under the quality classification of ACEA A5/B5. The recommended Engine oil is 5W30 A5/B5.

Oil Level Check


(For Petrol Engine Model)

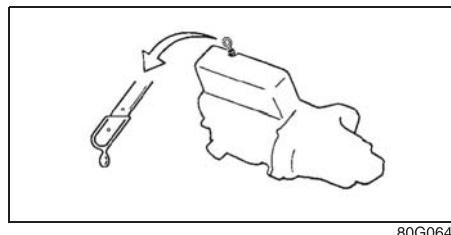

EXAMPLE

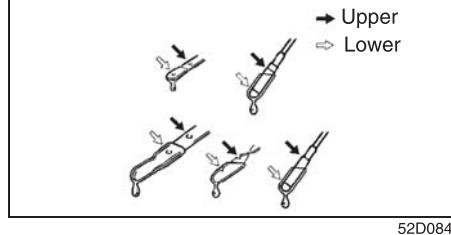

(For Diesel Engine Model)

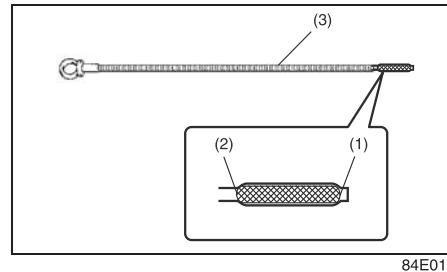

- (1) MIN
- (2) MAX
- (3) Engine oil dipstick

It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE


Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

NOTICE

(For Diesel Engine Model)
Do not top up the oil over the MAX limit. Too much oil causes serious engine trouble.

Refilling

EXAMPLE

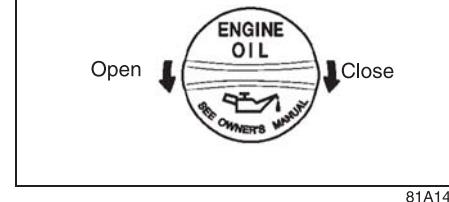


Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

INSPECTION AND MAINTENANCE

Changing Engine Oil and Filter

Drain the engine oil while the engine is still warm.

EXAMPLE

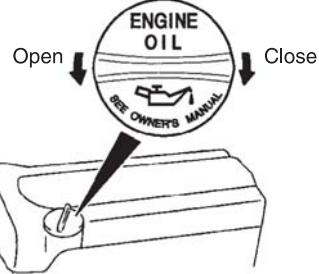


56KN054

- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain out the engine oil.

CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

EXAMPLE

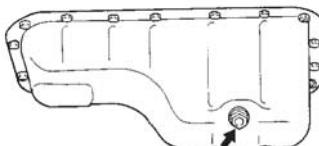


60G306

Tightening torque for drain plug
Petrol engine:
35 Nm (3.5 kg-m, 25.3 lb-ft)

For Diesel Engine

EXAMPLE

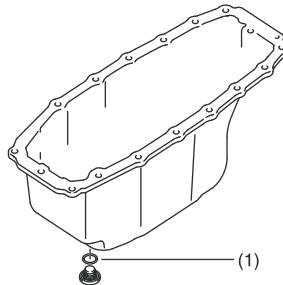

60G306

For Diesel Engine
20 Nm (2.0 kg-m, 14.5 lb-ft)

WARNING

New and used oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.

Continuous contact with used engine oil may cause skin cancer laboratory animals

Brief contact with used oil may irritate skin.

To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.

Launder any clothing or rags if wet with oil.

Recycle or properly dispose of used oil and filters.


- 4) Reinstall the drain plug and new gasket (1). Tighten the plug with a wrench to the specified torque.

INSPECTION AND MAINTENANCE

Replace the Oil Filter

(For Petrol Engine Model)


- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- 2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- 3) Smear a little engine oil around the rubber gasket of the new oil filter.
- 4) Screw on the new filter by hand until the filter gasket contacts the mounting surface.

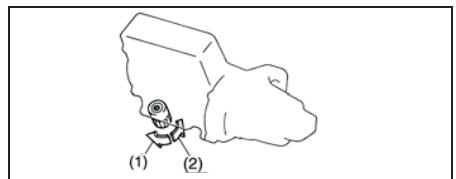

54G092

- (1) Loosen
(2) Tighten

Tightening (viewed from filter top)

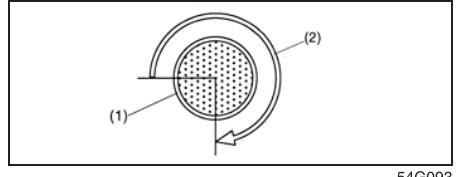

54G093


- (1) Oil filter
(2) 3/4 turn

(For Diesel Engine Model)

NOTE:

Since special procedures and tools are required, it is recommended that you trust this job to your authorized MARUTI SUZUKI dealer.

- 1) Using a socket or a ring spanner remove oil filter housing cover (3).

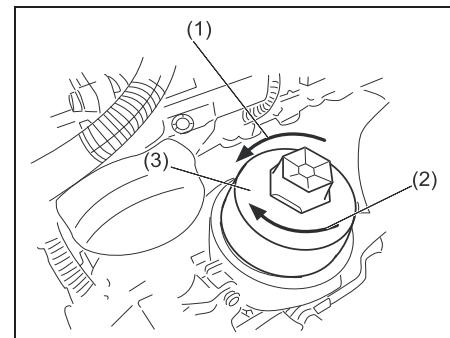

61M7001

- (1) Loosen
(2) Tighten

- 2) Remove the old oil filter element and replace it with a new oil filter element.
- 3) Clean the surface of oil filter cap and replace the O-ring.
- 4) Tighten the oil filter housing cover on the oil filter housing using a socket or ring spanner to the specified torque.

Tightening torque for oil filter

Diesel engine :
25 Nm (2.5 kg-m, 18.5 lb-ft)

NOTICE

To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

Refill with Oil and Check for Leaks

- 1) Pour oil through the filler hole and install the filler cap. For the approximate capacity of the oil, refer to the "Capacities" item in the "SPECIFICATIONS" section.
- 2) Start the engine and look carefully for leaks at the oil filter and drain plug. Run the engine at various speeds for at least 5 minutes.
- 3) Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leaks again.

NOTICE

- When replacing the oil filter, it is recommended that you use a MARUTI genuine replacement filter.
- Oil leaks from around the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leaks or are not sure that the filter has been properly tightened, have the vehicle inspected by your MARUTI SUZUKI dealer.

INSPECTION AND MAINTENANCE

Engine Coolant

Selection of Coolant

To maintain optimum performance and durability of your engine, use MARUTI SUZUKI Genuine Coolant or equivalent.

This type of coolant is best for your cooling system as it:

- Helps maintain proper engine temperature.
- Gives proper protection against freezing and boiling.
- Gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your authorized MARUTI SUZUKI dealer can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Make sure that the proper mix is 50/50 coolant to distilled water (Diesel) and 30/70 (Petrol). Concentrations greater than this may cause overheating conditions.
- Neither use 100% coolant nor 100% Plain water.

NOTICE

- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/automatic transaxle damage.

Coolant Level Check

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between the "FULL" and "LOW" marks.

Adding Coolant

WARNING

Engine coolant is harmful or fatal if swallowed or inhaled. Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. Avoid inhaling mist or hot vapors; if inhaled, remove to fresh air. If coolant gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.

NOTICE

- The mixture you use should contain 50% concentration of antifreeze.
- If the lowest ambient temperature in your area is expected to be -35°C (-31°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.

(For Petrol Engine Model)



74LHT7003

Coolant level is to be maintained between "LOW" and "FULL" mark. When the engine is cool, remove the reservoir tank cap. Add coolant until the reservoir tank level


INSPECTION AND MAINTENANCE

reaches the "FULL" mark. Never fill the reservoir tank above the "FULL" mark.

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

(For Diesel Engine Model)

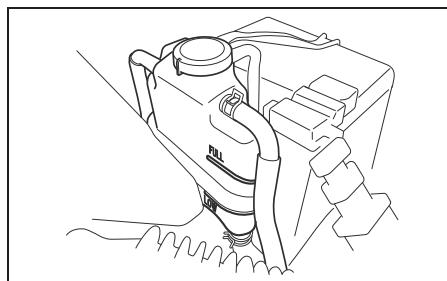

WARNING

It is hazardous to remove the reservoir tank cap (degassing tank cap) for a diesel engine when the water temperature is high, because scalding fluid and steam may be blown out under pressure. Wait until the coolant temperature has lowered before removing the cap.


If the coolant level is below the "LOW" mark, more coolant should be added. When the engine is cool, remove the degassing tank cap by turning it anticlockwise slowly to release any pressure. And add coolant until the degassing tank level reaches the "FULL" mark. Never fill the degassing tank above the "FULL" mark.

Coolant Replacement


Coolant replacement work requires technical skill. Do not replace the coolant by yourself. Trust this job to Maruti Suzuki Authorised Dealer workshop or service station.

Air Cleaner

(For Petrol Engine Model)

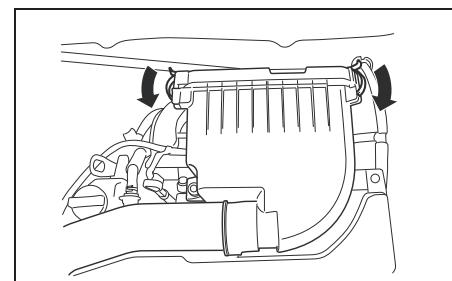


(For Diesel Engine Model)

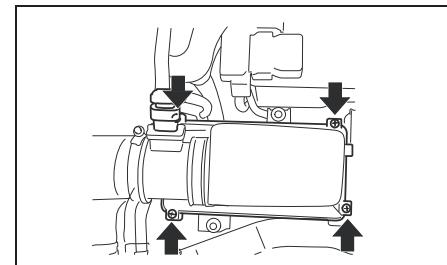


If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Unclamp/unscrew the side clamps/screws, and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.

Spark Plugs (Petrol Engine)

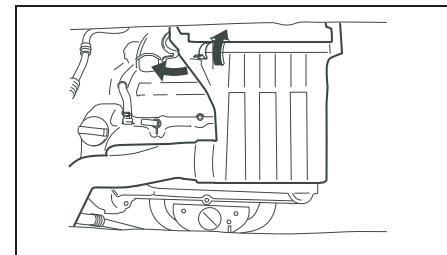

INSPECTION AND MAINTENANCE

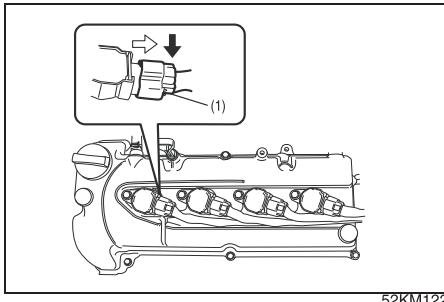

For nickel spark plugs (traditional type):


You should inspect spark plugs periodically for carbon deposits. When carbon accumulates on a spark plug, a strong spark may not be produced. Remove carbon deposits with a wire or pin and adjust the spark plug gap.

To access the spark plugs:


- 1) Unclamp the air cleaner cover.
- 2) Remove the engine top cover.
- 3) If necessary, disconnect the coupler (1) while pushing the release lever.
- 4) Remove the igniter bolts.
- 5) Pull the spark plug boots out.

NOTE:

When installation, make sure the wires, couplers, sealing rubber of top cover and washers, are correctly returned in place.

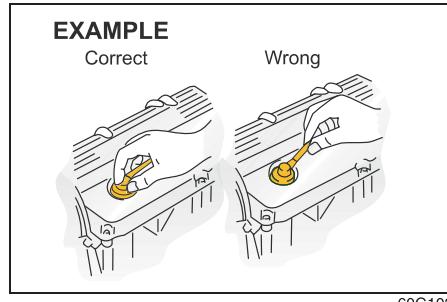


EXAMPLE

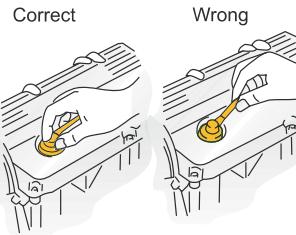


NOTICE

- When installing the spark plugs, screw them in with your fingers to avoid stripping the threads. Tighten with a torque wrench to 17.5 Nm (1.8 kg-m, 12.916 lb-ft). Do not allow contaminants to enter the engine through the spark plug holes when the plugs are removed.
- Never use spark plugs with the wrong thread size.

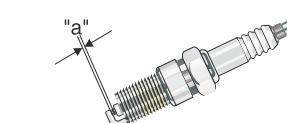


Spark plug gap "a"
1.0 mm +/- 0.05 mm

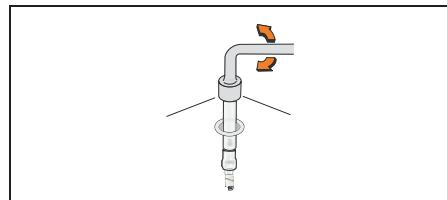

NOTICE

When replacing spark plugs, you should use the brand and type specified for your vehicle. For the specified spark plugs, refer to the "SPECIFICATIONS" section at the end of this book. If you wish to use a brand of spark plug other than the specified plugs, consult your MARUTI SUZUKI dealer.

INSPECTION AND MAINTENANCE

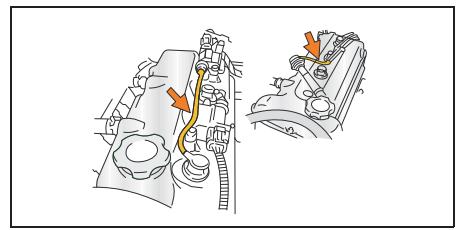

NOTE:

If your engine is equipped with the high tension cord type ignition wiring and you experience some firing problem of spark plugs, such as, hard engine-starting, misfire etc., the cause may be located not only on spark plugs but also on deteriorated ignition wirings (generally, used for more than 80,000 km or five years). If spark plug replacement does not solve the problem, have the ignition wiring and other ignition system inspected by your MARUTI SUZUKI dealer.

Gear Oil

Manual Transaxle Oil / Auto Gear Shift Oil

When adding gear oil, use gear oil with the appropriate viscosity and grade.


We highly recommend you use:

"MARUTI SUZUKI GEAR OIL 75W-80" for manual transaxle gear oil or Auto Gear Shift Oil.

7-13

Gear Oil Level Check

Manual transmission

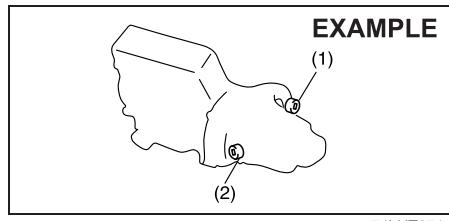

(1) Oil filler and level plug
(for Petrol engine model)

(2) Oil filler and level plug
(for diesel engine model)

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler plug (1) or (2).
- 3) Check the inside of the hole with your finger. If the oil level comes up to the bottom of the plug hole, the oil level is correct. If so, reinstall the plug.
- 4) If the oil level is low, add gear oil through the oil filler plug hole (1) or (2) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

Tightening torque for oil filler plug

(1) or (2)
21 Nm (2.1 kg-m, 15.2 lb-ft)

CAUTION

After driving the vehicle, the transmission oil temperature may be high enough to burn you. Wait until the oil filler plug is cool enough to touch with your bare hands before inspecting transmission oil level.

NOTICE

When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.

SUZUKI Bond No. "1216E" or "1217G"


Gear Oil Change

Since special procedures, materials and tools are required, it is recommended that you trust this job to your MARUTI SUZUKI authorized dealer.

INSPECTION AND MAINTENANCE

Clutch Pedal

Cable Control Clutch (For Petrol Engine Model)

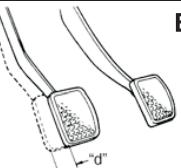


EXAMPLE

54G274

Clutch pedal play "d":
10 - 15 mm (0.4 - 0.6 in.)

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be between the specified values. If the play is more or less than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your MARUTI SUZUKI authorized dealer.

Fluid Control Clutch (For Diesel Engine Model)

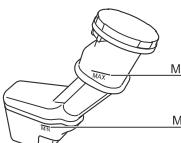

68LM703

193

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your MARUTI SUZUKI dealer. If the clutch fluid level is near the "MIN" line, fill it up to the "MAX" line with Maruti Genuine Brake Fluid (MGBF) or DOT 3. We highly recommend to use "Maruti Genuine Brake Fluid" (MGBF).

Automatic Transaxle (AT) Fluid

Specified Fluid

Use an automatic transaxle fluid SUZUKI ATF 3317 or Mobil ATF 3309.

Fluid Level Check

NOTICE

Driving with too much or too little fluid can damage the transaxle.

You must check the fluid level with the automatic transaxle fluid at normal operating temperature.

To check the fluid level:

- 1) To warm up the transaxle fluid, drive the vehicle or idle the engine until the temperature gauge indicates normal operating temperature.
- 2) Then drive for ten more minutes.


NOTICE

Be sure to use the specified automatic transaxle fluid. Using automatic transaxle fluid other than SUZUKI ATF 3317 or Mobil ATF 3309 may damage the automatic transaxle of your vehicle.

NOTE:

Do not check the fluid level if you have just driven the vehicle for a long time at high speed, if you have driven in city traffic in hot weather, or if the vehicle has been pulling a trailer. Wait until the fluid cools down (about 30 minutes), or the fluid level indication will not be correct.

EXAMPLE

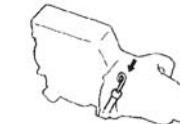

- 3) Park your vehicle on level ground.
- 4) Apply the parking brake and then start the engine in "P" (Park). Let it idle for two minutes and keep it running during the fluid level check.
- 5) With your foot on the brake pedal, move the gearshift lever through each range, pausing for about three seconds in each range. Then move it back to the "P" (Park) position.

INSPECTION AND MAINTENANCE

⚠ WARNING


Be sure to depress the brake pedal when moving the gearshift lever, or the vehicle can move suddenly.

EXAMPLE



- 6) The handle of the A/T fluid dipstick is colored red for easy identification. Remove the dipstick, clean it and push it back in until the cap seats. Then pull out the dipstick.
- 7) Check both sides of the dipstick, and read the lowest level. The fluid level should be between the two marks in the "HOT" range on the dipstick.

EXAMPLE

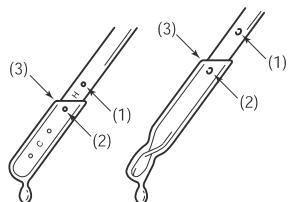

- (1) FULL HOT
- (2) LOW HOT
- (3) The lowest point = Fluid level
- 8) Add just enough specified fluid through the dipstick hole to fill the transaxle oil to the proper level.


NOTICE

After checking or adding oil, be sure to insert the dipstick securely.

Changing Oil

Since special procedures, materials, and tools are required to change the automatic transaxle oil, it is recommended that you trust this job to your authorized MARUTI SUZUKI dealer.

Fuel Filter (Diesel Engine)

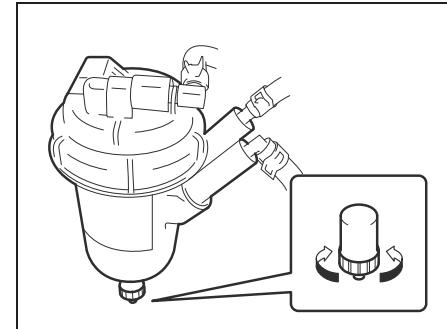

74LHT0703

The fuel filter works as a water sedimentor as well.

Drain water according to the Periodic Maintenance Schedule. To drain water:

- 1) Remove the battery. (Refer to "Battery" in this section.)
- 2) Place a pan or ample rag under the fuel filter drain nozzle.
- 3) Loosen the drain knob. The water will be drained.
- 4) Tighten the drain knob when the water changes to the diesel fuel.
- 5) Tighten the drain knob.

**Tightening torque for drain knob
1.5 Nm (0.15 kg-m, 1.1 lb-ft)**


NOTE:

Trust this job to be carried out at Maruti Suzuki authorized dealer.

INSPECTION AND MAINTENANCE

Brakes

Brake Fluid

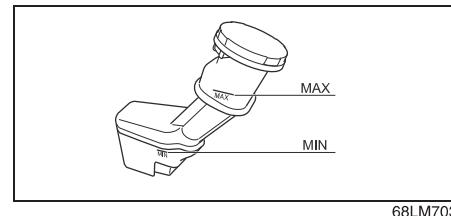

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between the "MAX" and "MIN" lines. If the brake fluid level is near the "MIN" line, fill it up to the "MAX" line with Maruti Genuine Brake Fluid (MGBF) or DOT 3.

We highly recommend to use "Maruti Genuine Brake Fluid" (MGBF).

⚠ WARNING

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

- If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument panel will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask your MARUTI SUZUKI dealer to inspect the brake system.
- A rapid fluid loss indicates a leak in the brake system which should be inspected by your MARUTI SUZUKI dealer immediately.
- Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or DOT 3. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

⚠ WARNING

Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.

NOTE:


With disc brakes, the fluid level can be expected to gradually fall as the brake pads wear.

Brake Pedal

Check if the brake pedal stops at the regular height without "spongy" feeling when you depress it. If not, have the brake system inspected by your MARUTI SUZUKI dealer. If you doubt the brake pedal for the regular height, check it as follows:

⚠ CAUTION

Brake fluid can harm your eyes and damage painted surfaces. Use caution when refilling the reservoir.

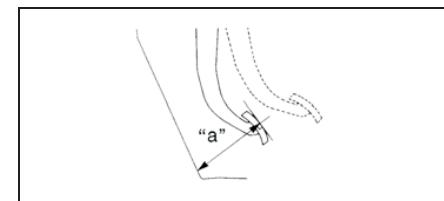

54G108

INSPECTION AND MAINTENANCE


Pedal to floor carpet minimum distance "a": 68 mm (2.7 in.)

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by your MARUTI SUZUKI dealer.

NOTE:

When measuring the distance between the brake pedal and floor carpet, be sure not to include the floor mat or rubber on the floor carpet in your measurement.

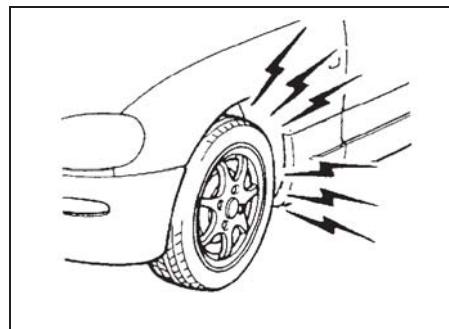

60G104S


7-17

WARNING

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by your MARUTI SUZUKI dealer.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels.)
- Excessive pedal travel
- Brake dragging
- Excessive noise

Parking Brake

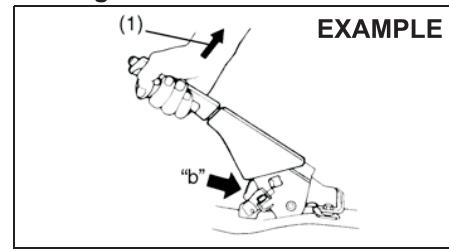

54G109

Ratchet tooth specification "b":
4th – 9th


Lever pull force (1):
200 N (20 kg, 44 lbs)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the

point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag after the lever has been fully released, have the parking brake inspected and/or adjusted by your MARUTI SUZUKI dealer.

Steering

EXAMPLE

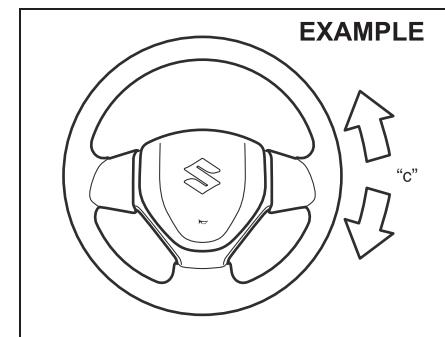

68LM708


Steering wheel play "c":
0 – 30 mm (0.0 – 1.2 in.)

Check the play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

INSPECTION AND MAINTENANCE

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is outside the specification or you find anything else to be wrong, an inspection must be performed by your MARUTI SUZUKI dealer.

Tires

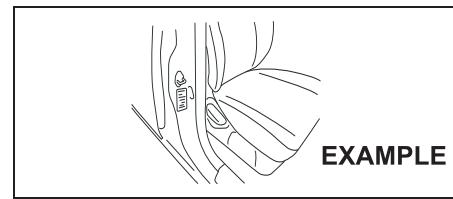

The front and rear tire pressure specifications for your vehicle are listed on the Tire Information Label. Both the front and rear tires should have the specified tire pressure.


Tire Inspection

Inspect your vehicle's tires at least once a month by performing the following checks:

- 1) Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

! WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- Never underinflate or overinflate the tires.
Underinflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim.
Overinflation can cause the tire to burst, resulting in personal injury.
Overinflation can also cause unusual handling characteristics which may result in an accident.

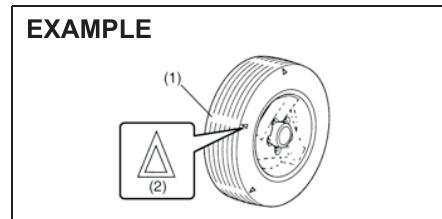

(1) Tread wear indicator
(2) Indicator location mark

- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
- 3) Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by your MARUTI SUZUKI dealer.

! CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Be sure to have tires and wheel alignment checked periodically by your MARUTI SUZUKI dealer.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.

INSPECTION AND MAINTENANCE


⚠ WARNING

- Your MARUTI SUZUKI is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.
- Replacing the wheels and tires equipped on your vehicle with certain combinations of after-market wheels and tires can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.

NOTICE

Replacing the original tires with tires of a different size may result in false speedometer or odometer readings.

Tire Rotation

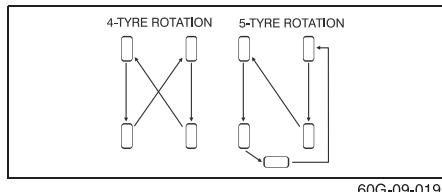

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated as mentioned in periodic maintenance schedule. After rotation, adjust front and rear tire pressures to the specification listed on your vehicle's Tire Inflation Pressure Label.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at Maruti Suzuki Authorized Workshop.

Wheel Alignment

In case of abnormal tire wear or pulling towards one side, have the wheel aligned at Maruti Suzuki Authorized Workshop.

Tubeless Tires (If equipped)

The vehicle is equipped with Tubeless Tires. In tubeless tire, a thin layer of butyl rubber is used for lining the inside of the tubeless tire. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tire bead and wheel rim. Tubeless

tires are having advantage of slow air loss and preventing sudden deflation while driving.

Care and maintenance tips for tubeless tires

- 1) Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tire damage.
- 2) In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tire has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tire is fitted, replace the valve.
- 5) If continuous high speed driving is required, increase tires pressure by 5 psi over recommended inflation pressure.
- 6) Never run the tire beyond TWI (Tread wear indicator). The tire is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tire marked by a triangular symbol (TWI).
- 7) Always prefer tubeless tire mounting machine. In case of manual mounting tire/wheel rim damage may occur.
- 8) In case of any problem, please get in touch with MARUTI SUZUKI Authorized workshop.

INSPECTION AND MAINTENANCE

Temporary Spare Tire (if equipped)

Your vehicle comes equipped with the temporary spare tire. It is only intended for temporary emergency use, until the conventional tire can be repaired or replaced. The inflation pressure of the temporary spare tire should be checked at least monthly. At the same time, check that the tire is stored securely. If it is not, tighten it.

Note that two or more temporary spare tires should not be used on one vehicle simultaneously.

⚠ WARNING

The temporary spare tire and wheel are intended for temporary emergency use only. Continuous use of this spare can result in tire failure and loss of control. Always observe these precautions when using this spare:

- Your vehicle will handle differently with this temporary spare.
- Do not exceed 80 km/h speed (only vehicle with 185/65R15 tire).
- Replace this spare with a standard tire and wheel as soon as possible.
- Use of this spare will reduce ground clearance.
- Set the specified tire pressure indicated on the tire information label located on the driver's door lock pillar.
- Do not use tire chains on the temporary spare. If you must use tire chains, rearrange the wheels so standard tires and wheels are fitted to the front axle.
- The temporary spare tire has a much shorter tread life than the conventional tires on your vehicle. Replace the tire as soon as the tread wear indicator appears.
- When replacing the temporary spare tire, use a replacement tire with the exact same size and construction.


Battery

⚠ WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working in the vicinity of the battery.
- When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump starting instructions in the "EMERGENCY SERVICE" section of this manual if it is necessary to jump start your vehicle.

Petrol


EXAMPLE-1

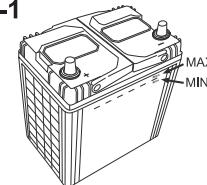

54G118


INSPECTION AND MAINTENANCE

EXAMPLE-2

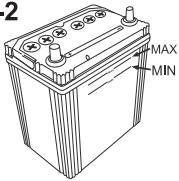

Diesel

EXAMPLE

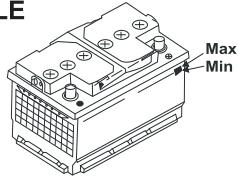


The level of the battery solution must be kept between the "Max" and the "Min" level lines at all times. If the level is found to be below the "Min" level line, add distilled water to bring level between "Max" and "Min". You should, however, periodically check the battery, battery terminals and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge..


Replacement of the battery

TYPE 1

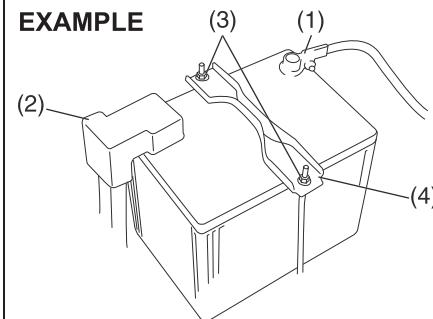

51KM038

TYPE 2

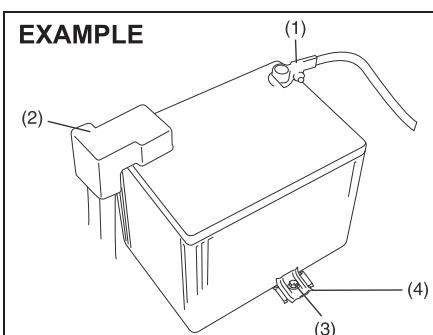

51KM039

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).

For Type 1

- 3) Remove the retainer nuts (3) and remove the retainer (4).

For Type 2

- 3) Remove the bracket bolt (3) and remove the bracket (4).
- 4) Remove the battery.

NOTICE

- Ensure that battery should not be removed without cover assembly.
- When the battery is reassembled into the vehicle, kindly ensure that battery cover is also installed along with battery.

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the retainer nuts and battery cables securely.

NOTE:

When the battery is disconnected, some of the vehicle's function will be initialized and/or deactivated.

These function are required to reset after the battery is reconnected.

INSPECTION AND MAINTENANCE

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the battery.



Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses

These fuses are for individual electrical circuits.

Fuses in the Engine Compartment

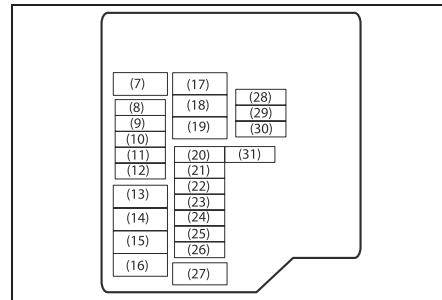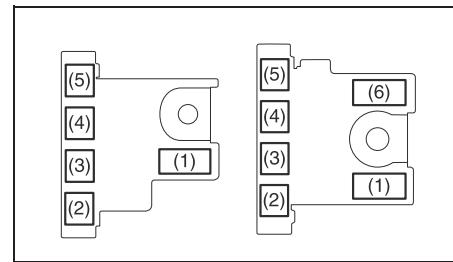


MAIN FUSE / PRIMARY FUSE		
(1)	100 A	FL1 (GAS)
	120 A	FL1 (DIESEL)
(2)	100 A	FL2
(3)	100 A	FL3
(4)	50 A	FL4
(5)	80 A	FL5
(6)	100 A	FL6 (DIESEL)
(7)	50 A	Ignition switch -2
(8)	7.5 A	ECM
(9)	15 A	AT
(10)	20 A	F/P (DIESEL)
(11)	10 A	Air compressor
(12)	15 A	FI (PETROL)
(13)	30 A	FI (DIESEL)
(14)	60 A	Power steering
(15)	30 A	Radiator fan
(16)	40 A	ABS 1
(17)	30 A	Blower fan
(18)	30 A	Starting motor
(19)	30 A	T/M Pump (AGS)
(20)	30 A	Backup
(21)	10 A	T/M (AGS)
(22)	15 A	Head light (Left)
(23)	25 A	ABS control module
(24)	15 A	Head light (Right)
(25)	20 A	Front fog light
(26)	7.5 A	T/M 2 (AGS)
(27)	40 A	Ignition switch
(28)	20 A	INJ DRV (DIESEL)
(29)	10 A	FI 2 (DIESEL)
(30)	—	Blank
(31)	7.5 A	Starting signal 2

INSPECTION AND MAINTENANCE

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a MARUTI genuine replacement. To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

EXAMPLE

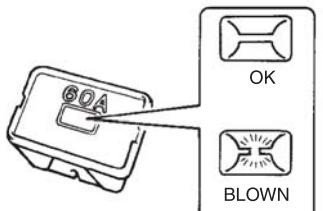

60G111

! WARNING


If the main fuse or a primary fuse blows, be sure to have your vehicle inspected by an authorized MARUTI SUZUKI dealer. Always use a genuine MARUTI replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.

NOTE:


Make sure that the fuse box always carries spare fuses.

Fuses under the Dash Board

EXAMPLE

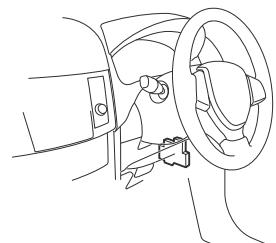

74LHT0711

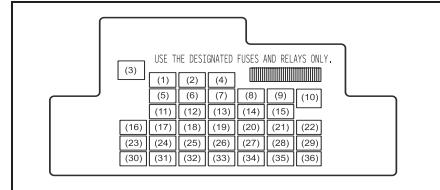


PRIMARY FUSE

(1)	20 A	Power window timer
(2)	20 A	Steering Lock
(3)	—	Blank
(4)	20 A	Rear defogger
(5)	—	Blank
(6)	—	Blank
(7)	—	Blank
(8)	7.5 A	Starting Signal
(9)	15 A	ACC-2
(10)	30 A	Power window
(11)	10 A	Hazard
(12)	7.5 A	BCM
(13)	15 A	Ignition coil
(14)	10 A	ABS control module
(15)	15 A	ACC

INSPECTION AND MAINTENANCE

(16)	-	Blank
(17)	15 A	Horn
(18)	10 A	Stop light
(19)	10 A	Air bag
(20)	10 A	Back-up light
(21)	15 A	Rear wiper / Washer
(22)	25 A	Front wiper
(23)	7.5 A	Dome light
(24)	-	Blank
(25)	7.5 A	RR fog lamp
(26)	-	Blank
(27)	7.5 A	Ignition-1 signal
(28)	15 A	Radio 2
(29)	-	Blank
(30)	15 A	Radio
(31)	10 A	Tail lamp
(32)	20 A	D/L
(33)	-	Blank
(34)	10 A	Meter
(35)	7.5 A	Ignition-2 signal
(36)	-	Blank

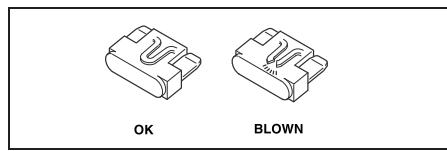

81A283

⚠ WARNING

Always be sure to replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by your MARUTI SUZUKI dealer.

Bulb Replacement

⚠ WARNING

- Light bulbs can be hot enough to burn your finger right after being turned off. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.

NOTICE

The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.


NOTICE

Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your MARUTI SUZUKI dealer.

INSPECTION AND MAINTENANCE


Interior Light

Front

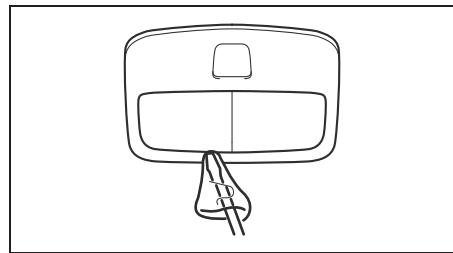

60G114

Center

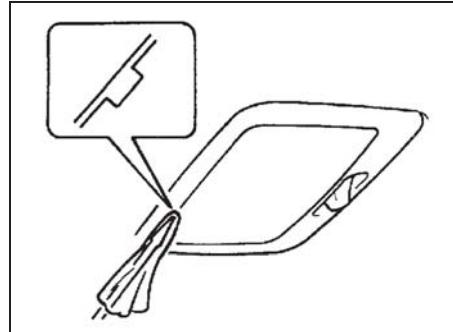


60G115

Pull down the lens by using a Plane screwdriver covered with a soft cloth as shown. To install it, simply push it back in.


The bulb can be removed by simply pulling it out. When replacing the bulb, make sure that the contact springs are holding the bulb securely.

Headlight

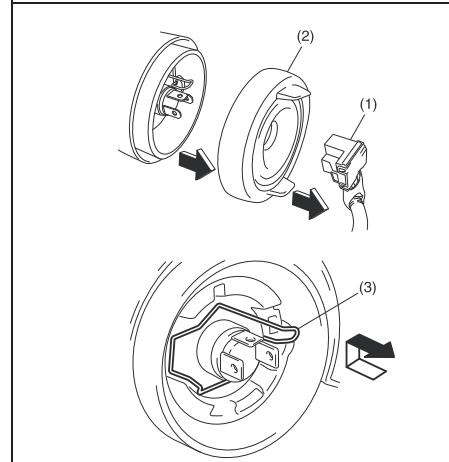

80JM069

Open the engine food. Disconnect the coupler (1). Remove the sealing rubber (2). Push the retaining spring (3) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

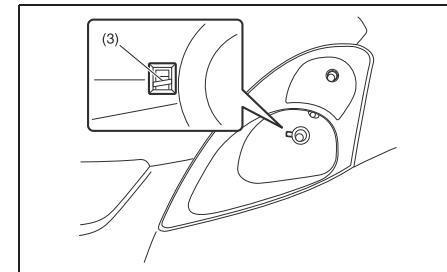


68LM713

NOTE:

You can see the position of retaining spring (3) from the hole of headlight.

Side Turn Signal Light (if equipped)

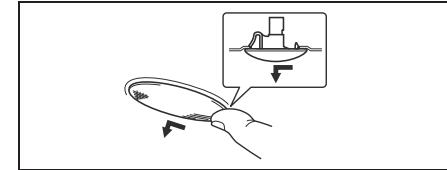

64J195


If the bulb is fused then only bulb can be replaced by taking out the side Turn lamp. Remove the light assembly by sliding the light housing leftward with your finger. For LED type, if LED's are not working then outside Rear view mirror needs to be replaced.

INSPECTION AND MAINTENANCE

Other General Lights

Bulb holder

EXAMPLE

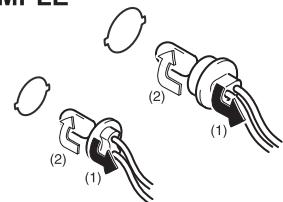


54G123

- (1) Removal
- (2) Installation

To remove a bulb holder from a light housing, turn the holder counterclockwise and pull it out. To install the holder, push the holder in and turn it clockwise.

Bulb

EXAMPLE

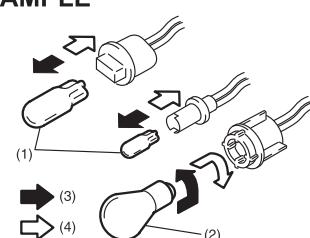

54G124

- (3) Removal
- (4) Installation

There are two types of bulb, "Full glass type" (1) and "Glass/metal type" (2).


To remove and install a full glass type bulb (1), simply pull out or push in the bulb.

To remove a glass metal type bulb (2) from a bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.

You can access the individual bulb or bulb holders as follows.

Front turn signal light (1)


Front position light (2)

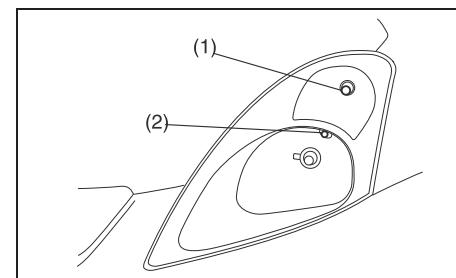

68LM714


Front fog light (if equipped)

- 1) Start the engine. Turn the steering wheel to the opposite side of the replacing fog light to replace the bulb easily. Then turn off the engine.

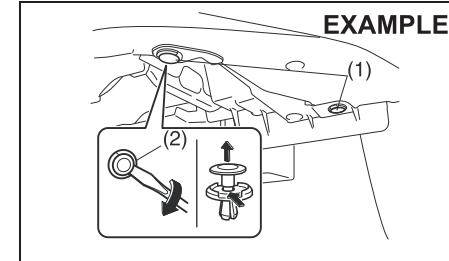

68LM715

- 2) Insert a flat blade screwdriver into the hole (2) and remove the clips (1) by twisting the driver as shown in the illustration.

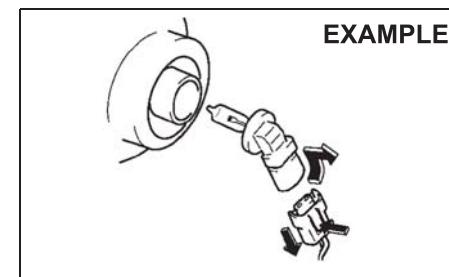


80JM071

- 3) Open the fender cover. Disconnect the coupler with pushing the lock release. Turn the bulb holder counterclockwise and remove it.

INSPECTION AND MAINTENANCE


Rear combination light (tail, stop, turn signal, etc.)

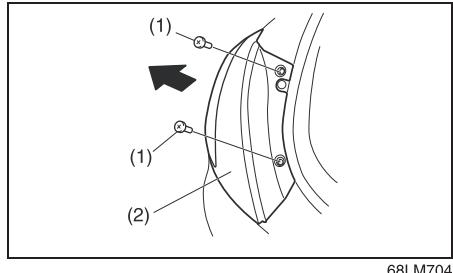


68LM704

Remove the screw (1). Remove the combination light (2) by pulling it outside.

License plate light

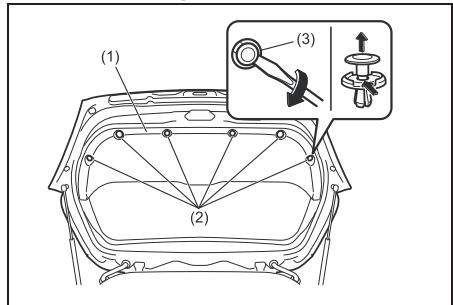


68LM705

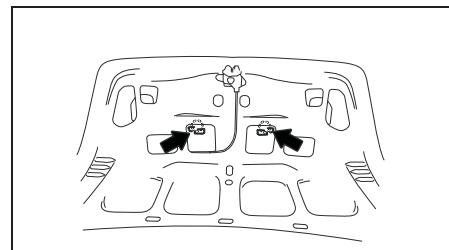


To remove license plate light, cover trim on the license lamp needs to be removed. To open the trim (1), insert a flat blade screw driver into the hole (3) and remove the clips (2) by twisting the driver as shown in the figure. Then after pushing the license lamp it can be taken out.

Luggage compartment light (if equipped)

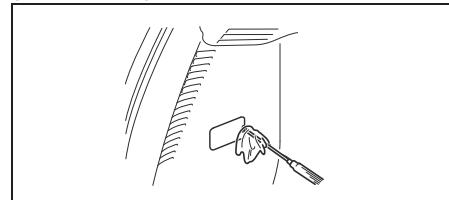


68LM717

Trunk Room Light (if equipped)

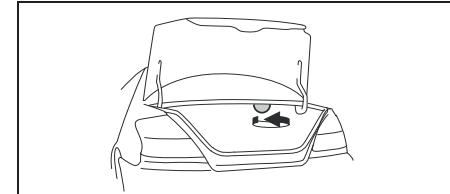

High-mount stop light Swift

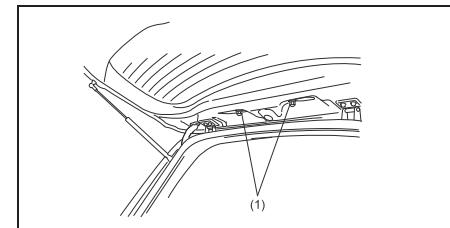


80J100

To remove a high-mount stop light housing the following procedure:


- 1) Open the tailgate, and remove the nuts (1) as shown in the illustration.

INSPECTION AND MAINTENANCE

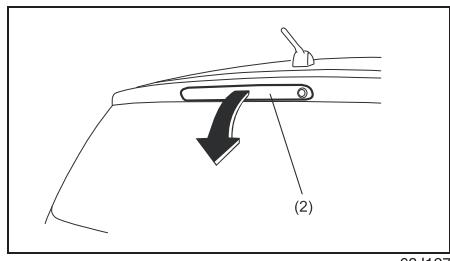

63J127


- 2) Close the tailgate. Remove a high-mounted stop light housing (2) from the tailgate.

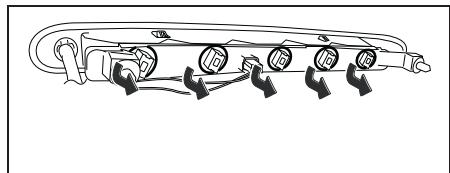

74LHT0712

- 3) Remove the each bulb.
- 4) Replace the bulbs.
To install a high-mounted stop light housing in the reverse order of removal.

Swift Dzire

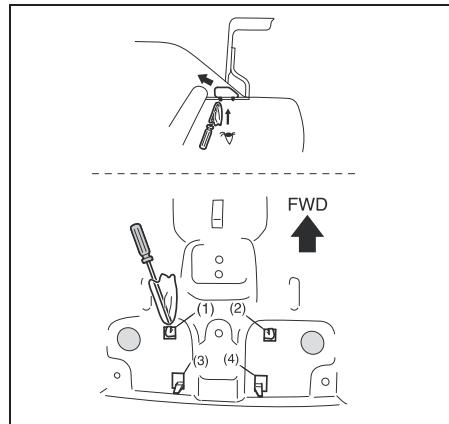

Wiper Blades



54G129

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult your MARUTI SUZUKI dealer for proper replacement method.

For windshield wipers:



70G119


- 1) Hold the wiper arm away from the window.

NOTE:


When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first. Otherwise, the wiper arms may interfere with each other.

INSPECTION AND MAINTENANCE

EXAMPLE

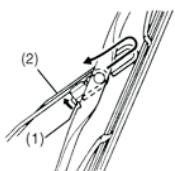


EXAMPLE

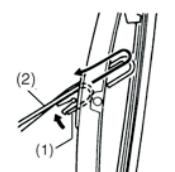


54G130

- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

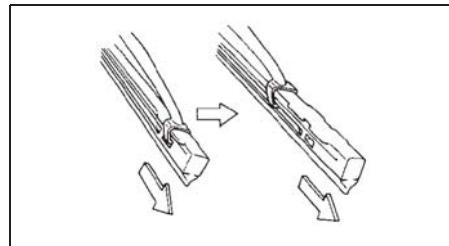


60A260

7-29

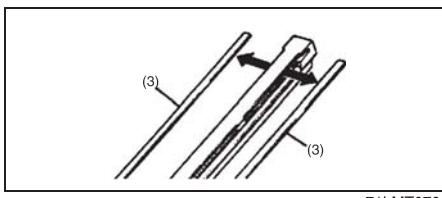

71LMT0708

- (3) Retainer
- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.

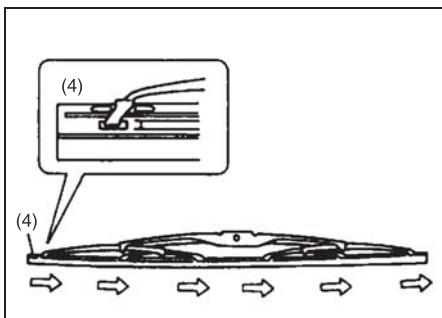


71LMT0707

- (4) Locked end
- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm. Make sure the blade is properly

retained by all the hooks. Lock the blade end into place.


- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

 For rear wipers:



80G146

- 1) Hold the wiper arm away from the window.
- 2) Remove the wiper frame from the arm as shown.
- 3) Slide the blade out as shown.

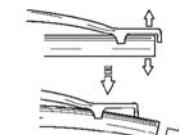


65D151

208

INSPECTION AND MAINTENANCE

NOTE:

Do not flex the wiper blade frame end more than necessary. If you do, it can break off.

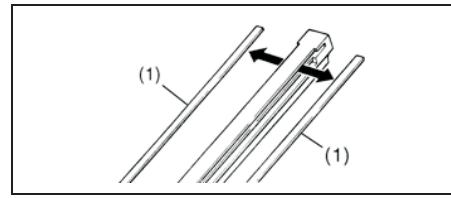


54G135

(1) Retainer

- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.
- 5) Install the new blade in the reverse order of removal.
Make sure the blade is properly retained by all the hooks.
- 6) Reinstall wiper frame to arm in the reverse order of removal.

Windshield Washer Fluid

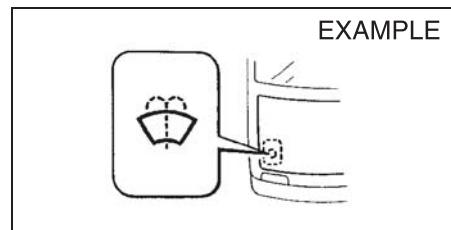

EXAMPLE

80JM078

209

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

! WARNING

Do not use "anti-freeze" solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also damage your vehicle's paint.

NOTICE


Damage may result if the washer motor is operated with no fluid in the washer tank.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Replacement of the Air Conditioner Filter (if equipped)


Since special procedures are required, we recommend you take your vehicle to your MARUTI SUZUKI dealer for the air conditioner filter replacement.

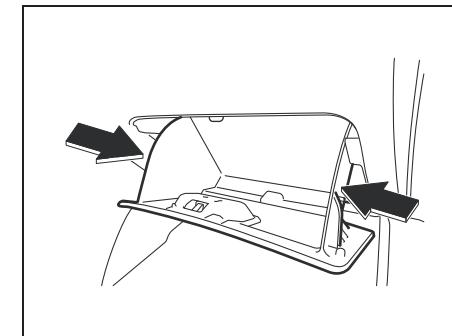

74LHM0701

- 1) To approach the air conditioner filter, press inward on both side of the grove box and remove it.

INSPECTION AND MAINTENANCE

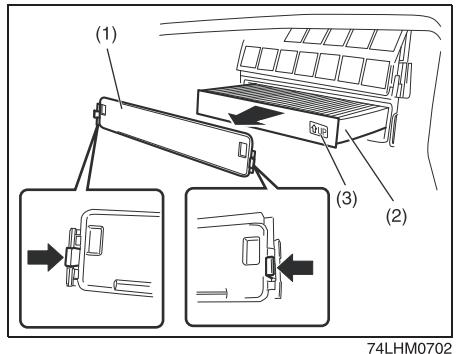

- 2) Remove the cover (1) and pull out the air conditioner filter (2).

NOTE:

When you install a new filter, make sure the UP mark (3) faces upward.

EMERGENCY SERVICE


EMERGENCY SERVICE

Tire Changing Tool	8-1
Jacking Instructions	8-2
Jump Starting Instructions	8-5
If the Starter Does Not Operate	8-6
If the Engine is Flooded	8-6
If the Engine Overheats	8-7
Warning Triangle	8-8


EMERGENCY SERVICE

Tire Changing Tool

Spare tire and tire changing tool

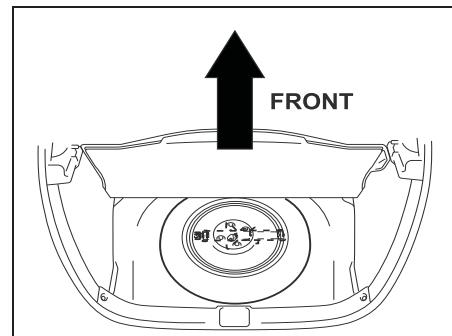


74LHT0806

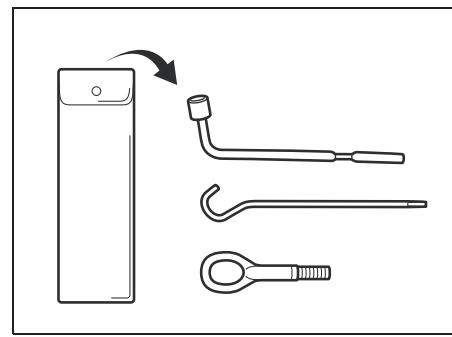


52KM117

The jack, is stowed just under the spare tire in the luggage compartment.

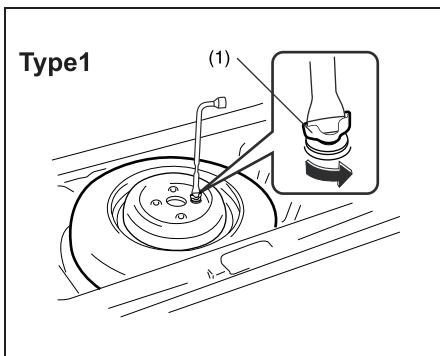

74LHT08031

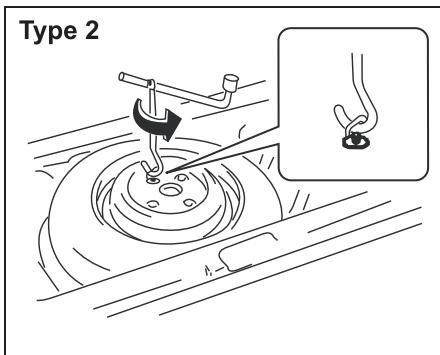


52KM136

To remove the spare tire, turn its bolt (1) counterclockwise by using the tools as shown in the figure and remove it.

NOTICE

When stowing the jack, place the shaft facing to the left as shown in the illustration. Otherwise the jack cannot be held securely in place in the storage bracket.

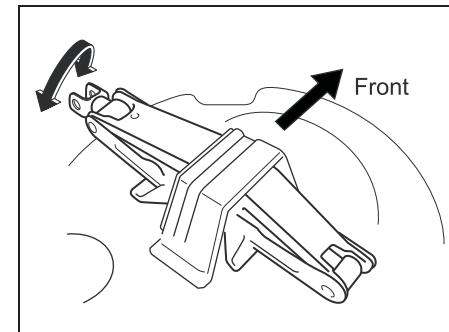

74LHT0802

To remove the jack, turn its shaft counter-clockwise and pull the jack out of the storage bracket.

To stow the jack, place it in the storage bracket and turn the shaft clockwise until the jack is securely held in place.

EMERGENCY SERVICE


⚠ WARNING

After using the tire changing tools, be sure to stow them securely or they can cause injury if an accident occurs.

⚠ CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

Jacking Instructions

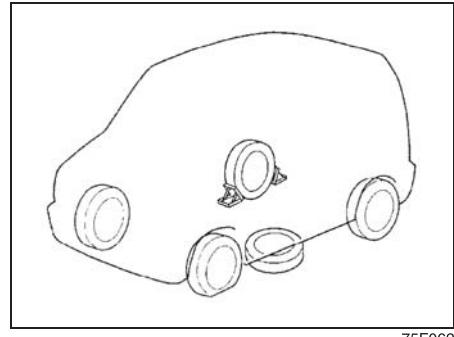


- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "R" (Reverse).


⚠ WARNING

- Be sure to shift into "R" (Reverse) when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.


- 3) Turn on the hazard warning flasher if your vehicle is near traffic.
- 4) Block the front and rear of the wheel diagonally opposite of the wheel being lifted.
- 5) Place the spare wheel near the wheel being lifted as shown in the illustration in case that the jack slips.

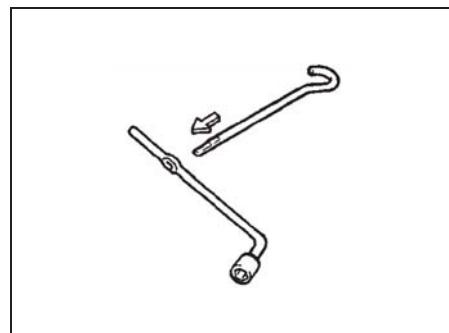

54G253

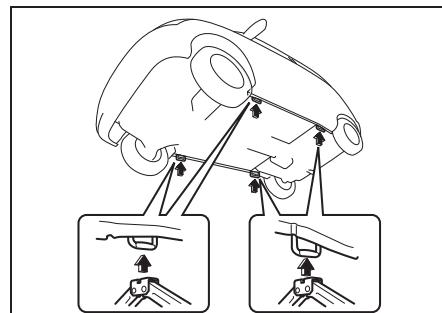

63J100

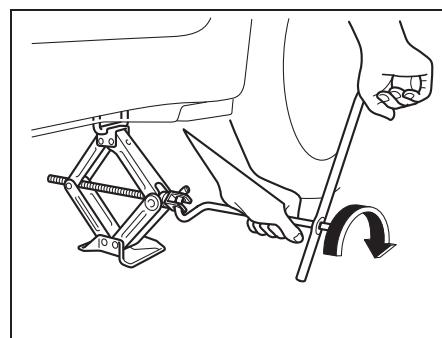

63J101

- 6) Position the jack vertically as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.

EMERGENCY SERVICE

- 7) Continue to raise the jack slowly and smoothly until the tire clears the ground. Do not raise the vehicle more than necessary.

CAUTION

Never jack up the vehicle with passengers inside the vehicle.

To Raise the Vehicle with a Garage Jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.


- 1) Front
- 2) Jack stand
- 3) Jacking point for onboard jack
- 4) Rear
- 5) Front suspension frame
- 6) Frame hook
- 7) Jacking point for garage jack
- 8) Application point for two-column lift and jack stand

NOTICE

Never apply a garage jack to the exhaust pipe or engine undercover and rear torsion beam.

NOTE:

For more details, please contact an authorized MARUTI SUZUKI dealer.

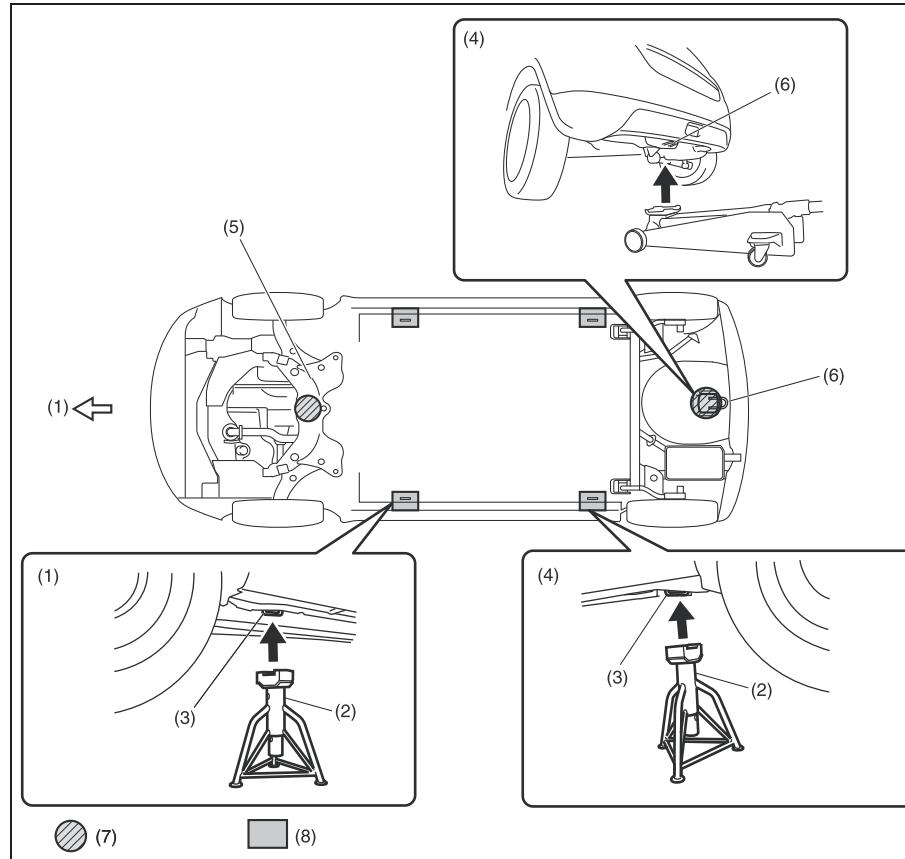

EMERGENCY SERVICE

⚠ WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed.
- Especially, do not raise the vehicle with a jack at a part of the torsion beam which is located under the vehicle body, between rear wheels.
- Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the suspension arm boss. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- Never get under the vehicle when it is supported by the jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

Changing Wheels

To change a wheel, use the following procedure:


- 1) Clear all passengers and luggage from the vehicle.
NOTE:
The Jack and tools are located under the spare wheel.
- 2) Remove the jack, tools and spare wheel from the vehicle.
- 3) Loosen, but do not remove the wheel nuts.
- 4) Jack up the vehicle (follow the jacking instructions in this section).

⚠ WARNING

- Be sure to shift into "R" (Reverse) when you jack up the vehicle.
- Never jack up the vehicle with the Transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

- 5) Remove the wheel nuts and wheel.
- 6) Before installing the new wheel, clean any mud or dirt off from the surface of the wheel and hub with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 7) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

EXAMPLE

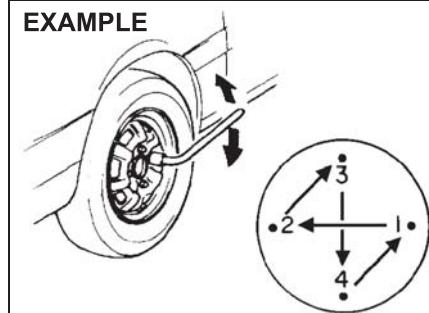

54G116

**Tightening torque for wheel nuts
85 Nm (8.5 kg-m, 61.5 lb-ft)**

- 8) Lower the jack and fully tighten the nuts in a crisscross fashion with a wrench as shown in the illustration.

⚠ WARNING

Use MARUTI genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nuts torque checked by an authorized MARUTI SUZUKI dealer.

EMERGENCY SERVICE

Full Wheel Cover (if equipped)


EXAMPLE



60G309

Insert a piece of cloth between the spokes of the wheel cover and try to pull the cover outward (as shown in figure). Take out the detached wheel cover from the wheel rim. For installation first match the slot at the wheel cover with the air filling nozzle of the wheel. Apply equal pressure at the circumference of the wheel cover to fix it in the wheel rim.

EXAMPLE

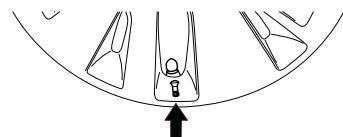

74LHT0860

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

Jump Starting Instructions

WARNING

- Never attempt to jump start your vehicle if the battery appears to be frozen. Batteries in this condition may explode or rupture if jump starting is attempted.
- When making jump lead connections, be certain that your hands and the jump leads remain clear from pulleys, belts, or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working in the vicinity of the battery.
- If the booster battery you use for jump starting is installed in another vehicle, make sure the two vehicles are not touching each other.
- If your battery discharges repeatedly, for no apparent reason, have your vehicle inspected by an authorized MARUTI SUZUKI dealer.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump starting instructions below precisely and in order. If you are in doubt, contact your nearest MARUTI SUZUKI authorized workshop.


NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter and high pressure fuel pump (diesel). Use jump leads to start a vehicle with a weak or flat battery.

When Jump Starting Your Vehicle, Use the Following Procedure:

- Use only a 12-volt battery to jump start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, DO NOT LET THE VEHICLES TOUCH. Set the parking brakes fully on both vehicles.
- Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

EMERGENCY SERVICE

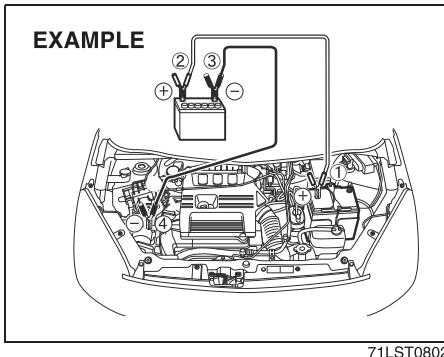

- 3) Make jump lead connections as follows:
 1. Connect one end of the first jump lead to the positive (+) terminal of the flat battery (1).
 2. Connect the other end to the positive (+) terminal of the booster battery (2).
 3. Connect one end of the second jump lead to the negative (-) terminal of the booster battery (3).
 4. Make the final connection to an unpainted, heavy metal part (i.e. engine mounting stud/nut (4)) of the engine of the vehicle with the flat battery (1).

⚠ WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged battery, or an explosion may occur.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the flat battery.
- 6) Remove the jump leads in the exact reverse order in which you connected them.

If the Starter Does Not Operate

- 1) Try turning the ignition switch to the "START" position or try pressing the engine switch to change the ignition mode to "START" with the headlights turned on to determine the battery condition. If the headlights go excessively dim or go off, it usually means that either the battery is flat or the battery terminal contact is poor. Recharge the battery or correct battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by your authorized MARUTI SUZUKI dealer.

If the Engine is Flooded (Vehicle without Keyless Push Start System)

If the engine is flooded with Petrol, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine.

- For Petrol engine model, do not operate the starter motor for more than 12 seconds.
- For diesel engine model, do not operate the starter motor for more than 30 seconds.

EMERGENCY SERVICE

(Vehicle with Keyless Push Start System)

If the engine is flooded with Petrol, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine.

- For Petrol engine model, do not operate the starter motor for more than 12 seconds.
- For diesel engine model, do not operate the starter motor for more than 30 seconds.

NOTE:

If the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.

If the Engine Overheats

The engine could overheat temporarily under severe driving conditions. If the engine coolant temperature gauge indicates overheating during driving:

- 1) Turn off the air conditioner, if equipped.
- 2) Take the vehicle to a safe place and park.
- 3) Let the engine run at the normal idle speed for a few minutes until the indicator is within the normal, acceptable temperature range between "H" and "C".

⚠ WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to let it cool. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

If the temperature indication does not come down to within the normal, acceptable range:

- 1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.

- 2) Check the coolant level in the reservoir. If it is found to be lower than the "LOW" line, look for leaks at the radiator, water pump, and radiator and heater hoses. If you locate any leaks that may have caused the overheating, do not run the engine until these problems have been corrected.
- 3) If you do not find a leak, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in the "INSPECTION AND MAINTENANCE" section.)

NOTE:

If your engine overheats and you are unsure what to do, contact your MARUTI SUZUKI dealer.

For Petrol



65D350

EMERGENCY SERVICE

For Diesel



 
65D350D

⚠ WARNING

- It is hazardous to remove the radiator cap (or degassing tank cap for a diesel engine) when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.


Warning Triangle

EXAMPLE




MHO-07-001

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

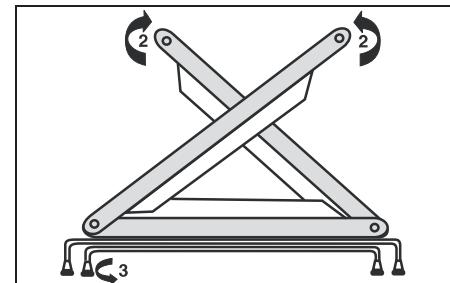

MHO-07-014

- Remove the warning triangle carefully from the cover as shown by arrow 1.
- Open both the reflector arms as shown by arrow and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

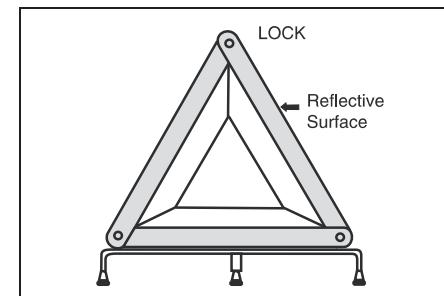

MHO-07-014

APPEARANCE CARE

APPEARANCE CARE

Corrosion Prevention	9-1
Vehicle Cleaning	9-2

APPEARANCE CARE

APPEARANCE CARE

Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information About Corrosion

Common causes of corrosion

- 1) Accumulation of road salt, dirt, moisture, or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- 2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.

Environmental conditions which accelerate corrosion

- 1) Road salt, dust control chemicals, sea air or industrial pollution will all accelerate the corrosion of metal.
- 2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- 3) Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.

- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible.

If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to the "Vehicle Cleaning" section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Be sure that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, contact your Maruti Suzuki Authorized Dealer.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used off road or in wet weather. Certain cargoes such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If a spill or leak does occur, clean and dry the area immediately.

APPEARANCE CARE

Store your vehicle in a dry, well-ventilated area

Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage or if you frequently drive it in when wet, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

⚠ WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter, exhaust pipes, etc. A fire could be started if the undercoating substance becomes overheated.

Vehicle Cleaning



76G044S

⚠ WARNING

When cleaning the interior or exterior of the vehicle, NEVER USE flammable solvents such as lacquer thinners, gasoline, benzene or cleaning materials such as bleaches or strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning the Interior

Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Instrument panel and console

NOTE:

Wipe up spills containing chemicals, alcohol, etc., immediately with a soft, damp cloth. Use a mild soap solution if necessary. Do not use cleaners or polishes containing strong solvents or acidic solutions. These chemicals may stain and discolor the instrument panel and console.

APPEARANCE CARE

Cleaning the Exterior

NOTICE

It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Caring for Aluminum Wheels

NOTE:

- Do not use an acidic or alkaline detergent to wash aluminum wheels. These types of detergent will cause permanent spots, discoloration and cracks on finished surfaces.
- Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.

Washing



223

! WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, you should wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to make sure they have maintained their normal effectiveness.

When washing the vehicle, park it where direct sunlight does not fall on it and follow the instructions below:

- 1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.

- To avoid damaging engine components, do not use pressurized water in the engine compartment.

- 2) Rinse the body to loosen the dirt. Remove dirt and mud from the body

exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Be sure to follow above procedure.

- 3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) After rinsing, wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage,

APPEARANCE CARE

"touch-up" the damage following the procedure below:


1. Clean all damaged spots and allow them to dry.
2. Stir the paint and "touch-up" the damaged spots lightly using a small brush.
3. Allow the paint to dry completely.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

NOTICE

If you use an automatic car wash, make sure that your vehicle's body parts, such as spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.

Waxing

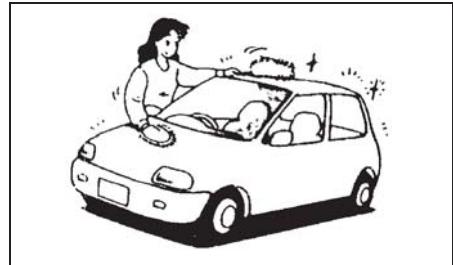

60B211S

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

GENERAL INFORMATION

GENERAL INFORMATION


Vehicle Identification	10-1
FASTag (if equipped)	10-1

GENERAL INFORMATION


Vehicle Identification

Chassis Serial Number

EXAMPLE

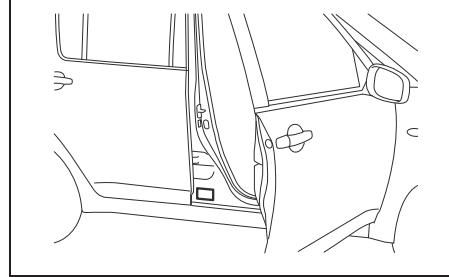


EXAMPLE

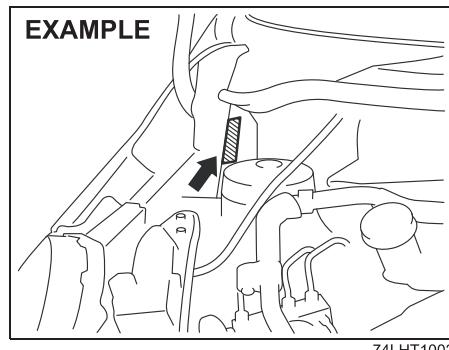

The chassis and/or engine serial numbers are used to register the vehicle. They are

also used to assist your dealer when ordering or referring to special service information. Whenever you have occasion to consult your MARUTI SUZUKI dealer, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

Engine Serial Number

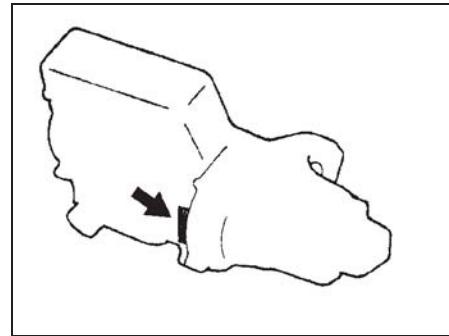


The engine serial number is stamped on the cylinder block as shown in the illustration.

FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.

In case of any damage to FASTag or replacement of front windscreen, please contact your nearest authorised Maruti Suzuki workshop.


EXAMPLE

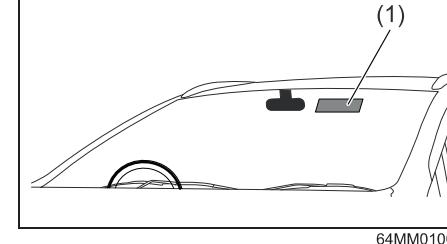

GENERAL INFORMATION

As seen from inside of the vehicle

EXAMPLE

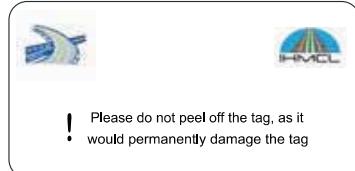


64MM01002

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle

EXAMPLE

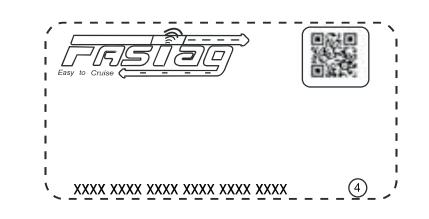

64MM01003

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.

SPECIFICATIONS

SPECIFICATIONS

NOTE: Specifications are subject to change without notice.

Petrol: Petrol engine model
Diesel: Diesel engine model

ITEM: Dimensions			UNIT: mm	
			SWIFT	SWIFT DZIRE
Overall length			3850	3995
Overall width			1695	1695
Overall height			1530	1555
Wheelbase			2430	2430
Track	Front	165 tyre	1485	1485
		185 tyre	1475	1475
	Rear	165 tyre	1495	1495
		185 tyre	1485	1485
Ground clearance			170	170

ITEM: Mass (weight)			UNIT: kg	
			SWIFT	SWIFT DZIRE
Curb mass (weight)	Petrol	935-965	960 - 990	
	Diesel	1035 - 1060	1045 - 1080	
Gross vehicle mass (weight) rating	Petrol	1415	M/T 1415, A/T 1435	
	Diesel	1505	1505	
Gross axle mass (weight) rating	Front	Petrol	800	800
		Diesel	850	850
	Rear	Petrol	800	800
		Diesel	830	830

SPECIFICATIONS

ITEM: Engine		
Type	K12M (DOHC)	D13A (DOHC)
Number of cylinders	4	4
Bore	73.0 mm	69.6 mm
Stroke	71.5 mm	82.0 mm
Piston displacement	1197 cm ³	1248 cm ³
Compression ratio	11.0:1	17.6±0.4:1

ITEM: Electrical		
Standard spark plug	Petrol	NGK LKR6F-10
Battery	Petrol	12V 34B20L
	Diesel	12V DIN50LMF/DIN55LMF
Fuses	See "INSPECTION AND MAINTENANCE" section.	

SPECIFICATIONS

ITEM: Lights		WATTAGE	BULB No.
Headlight		12V 60/55W	H4
Turn signal light	Front	12V 21W	PY21W
	Rear	12V 21W	PY21W
Side turn signal light (on fender)		12V 5W	WY5W/12W5W
Side turn signal light (on outside rearview mirror)		LED	—
Position light		12V 5W	W5W
Tail/brake light		12V 5/21W	P21/5W
License plate light		12V 5W	W5W
Reversing light		12V 16W	W16W
Interior light		12V 10W	—
Luggage compartment light		12V 5W	—
Front fog light		12V 35W	H8
Rear fog light		12V 21W	P21W
High mount stop light		12V 16W	W16W

SPECIFICATIONS

ITEM: Wheel and Suspension		
Tyre size, front and rear		185/65R 15 ^{*1} 165/80R 14 ^{*1}
Tyre size, spare	For vehicle equipped with 165/80R14 tire	165/80R14 (Steel Wheel)
	For vehicle equipped with 185/65R15 tire	165/80R14 (Steel Wheel)
Rim size		185 tyre: 15X5 1/2J ^{*2} 165 tyre: 14X5J
Tyre pressures		For the specified tyre pressure, see the Tyre Information Label located on the driver's door lock pillar.

*1: When tire replacement is necessary and if the specified load index and speed rated tire is not available, then use a tire of higher load index and speed rating.

*2: The spare wheel provided with alloy wheel variant is steel wheel rim, hence follow 4 tire rotation only. (Refer: under section "Inspection and maintenance")

SPECIFICATIONS

ITEM: Steering	
Toe-in	1.0 mm
Camber angle	+0° 13'
Caster angle	5 °

ITEM: Capacities (approx.)			
Coolant (including reservoir tank)	M/T	Petrol	4.1 L
		Diesel	5.9 L
	A/T	Petrol	4.5 L
Fuel tank			42 L
Engine oil	Petrol/Diesel		3.1 L (With filter)
Transmission oil	M/T	Petrol	2.2 L
		Diesel	2.6 L
	A/T	Petrol	3.05 L

SERVICE NETWORK (AS ON 01.04.2017)

- MARUTI SUZUKI AUTHORISED DEALERS (DEALER CODE) : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI AUTHORISED SERVICE STATIONS (MASSes) :
 - : 'A' CATEGORY MASSes (**MARKED)
Free & paid Service, Major repairs & Accidental repairs
 - : 'B' CATEGORY MASSes (* MARKED)
Free & paid Service & Major repairs
 - : 'C' CATEGORY MASSes (#MARKED)
Free & paid Service & Minor repairs
 - : 'D' CATEGORY MASSes (#MARKED)
Free Service & Minor repairs

NOTE : MASSes are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealers/Maruti Service Master/Maruti Service Zone for Warranty jobs.

REGIONAL OFFICES	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED PLOT NO. 1, NELSON MANDELA ROAD, VASANT KUNJ, NEW DELHI-110070 PH : (011) 46781000, 46150291	WEST UP, UTTARAKHAND, DELHI, GURGAON, FARIDABAD, NOIDA, GHAZIABAD, REWARI, MAHENDRAGARH, NORTH-UP
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED S.C.O. 39-40, SECTOR 8-C, MADHYA MARG, CHANDIGARH-160008 PH : (0172) 2780057, 2781352, 2540787	PUNJAB, CHANDIGARH, JAMMU & KASHMIR
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED G.F. B-1 BLOCK, PICUP BHAWAN, VIBHUTI KHAND, GOMTI NAGAR, LUCKNOW - 226010 PH : (0522) 2720931-34	PART OF U.P. AND UTTARAKHAND
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA-134109 PH : (0172) 2590056, 2580056	HARYANA, HIMACHAL PRADESH
REGIONAL OFFICE (NORTH-V) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, POOJA TOWER, 3 GOPALPURA BY-PASS, TONK ROAD, JAIPUR -302018 PH : 0141-5157000, 5118006 / 7	RAJASTHAN

SERVICE NETWORK (AS ON 01.04.2017)

REGIONAL OFFICES	AREA COVERED
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED L & T CHAMBERS, 4TH FLOOR, 16 CAMAC STREET, KOLKATA - 700 017 PH : (033) 22835252-54	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 401, 4TH FLOOR, ROHINI APARTMENT, OPPOSITE HOTEL APSARA, 56 CIRCULAR ROAD, NEAR LALPUR CHOWK, RANCHI, JHARKHAND-834001, PH : (0651) 2563931	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, ABOVE CITY MART SHOPPING MALL, 724, PEACE ENCLAVE, ULUBARI, GUWAHATI – 781 007, ASSAM PH.: (0361) 2734308/ 10/ 11/ 12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA
REGIONAL OFFICE (EAST-IV) MARUTI SUZUKI INDIA LIMITED Office No. 605, 606, 6th Floor, Utkal Signature, Pahal, NH-5, Bhubaneshwar - 752101 (Odisha), Ph: 0674-6751581	ODISHA, CHHATISGARH
REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED 602, MADHAVA BLDG., BANDRA KURLA COMPLEX, BANDRA (E), MUMBAI - 400 051 PH : (022) 2659 0165/0286/0290/0291 FAX : 26590285	MUMBAI, NAVI MUMBAI, THANE, RAIGAD, RATNAGIRI, SINDHUDURG & GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, NORTH BLOCK, SACRED WORLD WANOWARIE, PUNE-411040 PH : (020) 64002641 / 2 / 3 / 0 4	REST OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211, ISKON MALL, ABOVE STAR INDIA BAZAAR, SATELLITE ROAD, AHMEDABAD-380015 PH : (079) 40036660/40036671	GUJARAT , DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (WEST-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD, INDORE-452001 PH : (0731) 4069481, 4069382 FAX : 4069382	MADHYA PRADESH
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, CAPITAL TOWERS, 180, KODAMBAKKAM HIGH ROAD, NUNGAMBakkAM, CHENNAI - 600 034 PH: (044) 28233050-53 FAX: (044) 28242059	TAMILNADU, PONDICHERRY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED 204, 2ND FLOOR, "EMBASSY CLASSIC", VITTAL MALLYA ROAD, BENGALURU-560001 PH. : (080) 22127384-85, 5112017-18 FAX : (080) 22484841	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWER, NH-47 BYPASS, PADIVATTOM, COCHIN-682024 PH. : (0484) 4088400	KERALA, LAKSHADWEEP
REGIONAL OFFICE (SOUTH-IV) MARUTI SUZUKI INDIA LIMITED MAHAVIR CHAMBERS, DOOR NO. 3-6-363 & 3-6-1/1, CHAMBER NO. 101 & 102, 1ST FLOOR, LIBERY SQUARE, HIMMATNAGAR, HYDERABAD PH : (040) 66729999	ANDHRA PRADESH, TELANGANA

SERVICE NETWORK (AS ON 01.04.2017)

DETAILS OF AREA OFFICES	
Area Office Location	A.O Address
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower Sanjay Palace, Agra-282001, Ph. : 0562-4052646, 47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor, Corporate Zone, Ashima Mall, Hoshangabod Road, Bhopal-462026, Madhya Pradesh, 0755 - 6051555
Calicut	Maruti Suzuki India Limited, 1st Floor, Central Arcade, Bye pass Road, Puthyara Calicut - 673 004, Kerala, +91 495 2723151
Coimbatore	Maruti Suzuki India Limited, A-203, 2nd Floor, Raheja Center, Avinashi Road, Coimbatore – 641018, (0422)-2242109
Dehradun	Maruti Suzuki India Limited, 70 Rajpur Road, Opp Madhuban Hotel, Dehradun - 248001, Uttarakhand, 0135-2740549
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, PH : 0836-4259447
Jammu	Maruti Suzuki India Limited, Area Office - N2, Holl No. 116, Fast Flour, A-2, South Block, Bahu Plaza, Jammu (J & K)
Ludhiana	Maruti Suzuki India Limited, Sco No.16/17, 4th Floor , Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Punjab, 0161-4649763, 4649765

SERVICE NETWORK (AS ON 01.04.2017)

DETAILS OF AREA OFFICES	
Area Office Location	A.O Address
Madurai	Maruti Suzuki India Limited, 3rd Floor, ADR Towers Kalavasal, Theni By-pass Road, Madurai - 625016, Ph.: 0452-4200203
Nagpur	Maruti Suzuki India Limited, Plot No. 244, 1st Floor, Narayani House, Hill Road, Dhasampeth Ext., Nagpur-440010, Ph.: 0712-2225808
Nashik	Maruti Suzuki India Limited, 2nd Floor, Rushiraj Towers, Gargapur Road, Nashik, PH : 0253-6698551,52
Patna	Maruti Suzuki India Limited, 538, AG Plaza, East Boring Canal Road Adj. St Johns School, Patna-800001 (Bihar), PH : 0612-2521145
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto Mall, Labhandi, Raipur - 492001 (Chhattisgarh), Ph: 0771-4039643
Surat	Maruti Suzuki India Limited, 304, 3rd Floor, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan, Surat, Gujarat - 395009
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazuthacaud, Trivandrum - 695010, PH: 0471-2322336
Visakhapatnam	Maruti Suzuki India Limited, #209, 2nd Floor, Dutt Island, Siripuram Junction, Visakhapatnam - 500003, PH: 0891-3078620

DEALER WORKSHOP (AS ON 01.04.2017)

ANDAMAN & NICOBAR

DIGLIPUR

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (PU01-PU-01), MADHUPUR VILLAGE,TEHSIL DIGLIPUR,NORTH ANDAMAN - 744202 PH :03192-271056.

PORTBLAIR

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-02), NAYAGEN, PORTBLAIR - 744101 PH :3192-227104, 211682.
- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-01), GARACHRAMA, PORT BLAIR - 744105 PH :3192-251980, 253586, 211590.

RANGAT

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-FJ-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN , - 744201 PH :3192-211546.

ANDHRA PRADESH

AMALAPURAM

- S.B. MOTOR CORPORATION (BTS1-BTS-01), #2412B, BESIDE: BAPIJI PRIMARY SCHOOL, MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201 PH :08556-98853173333.

ANAKAPALLE

- JAYABHERI AUTOMOTIVES PVT LTD (ON01-0N-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM, - 531001 PH :08294-7093575555.

ANANTAPUR

- SRI DURGA AUTOMOBILES (1B01-1B-01), 17/377-A,GOOTY ROAD,,ANANTAPUR - 515001 PH :08554-277958.

BHIMAVARAM

- NOVELTY REDDY AND REDDY AUTOMOTIVES (7M01-7M-01), NEAR BYPASS ROAD,UNDI ROAD,BHIMAVARAM - 534202 PH :0861-2765645.

BOBBILI

- VARUN MOTORS PVT. LTD. (CAM1-CAM-01), D. NO. 4-6, SURVEY NO. 219/B, VILLAGE – MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA PRADESH. - 535558 PH :08944-9885280772, 9885317344.

CHIRALA

- JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-NT-04), 9-1-92, CHURCH ROAD,CHIRALA, - 523157 PH :8594-9703703353.

CHITTOOR

- BHARGAVI AUTOMOBILES PVT LTD (A801-1C-03), 22-24/A,KATTAMANCHI TIRUPATI ROAD,CHITTOOR, - 517001 PH :8572-9848144772.

CUDDAPPAH

- MSA MOTORS (C201-ID-03), K.T. BYE PASS ROAD,CUDDAPAH,ANDHRA PRADESH, - 516001 PH :08562-645427.

ELURU

- REDDY & REDDY MOTORS (1E01-1E-01), OLD NH-5 ROAD,BESIDES C R REDDY WOMEN'S COLLEGE OLD NH-5,ELURU, - 534001 PH :8812-221826.

GUDIVADA

- VARUN MOTORS PVT. LTD. (2603-CL-02), D NO. 1-621,AUTONAGER 1ST LANE,GUDIVADA - 521301 PH :08674-246244, +919885651383.

GUDUR

- BHARGAVI AUTOMOTIBILES PVT. LTD. (IS01-IS-01), SURVEY NO.1619/A,GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101 PH :8624-252509.

GUNTUR

- JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-G5-01), D-N-8-24-31,MANGALAGIRI ROAD,GUNTUR - 522001 PH :0863-2241000.

HINDUPUR

- SRI DURGA AUTOMOTIVES (1B01-36-02), PLOT NO.83, NEAR RELIANCE PETROL BUNK, BYE PASS ROAD,HINDUPUR - 515201 PH :8554-277958.

HYDERABAD

- ADARSHA AUTOMOTIVES PVT. LTD. (1014-10-02), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD, - 501218 PH :040-8142346633, 9985326633.

JAGGAIAHPET

- VARUN MOTORS PVT. LTD. (2603-PC-05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175 PH :8562-281555.

JANGAREDDYGUDEM

- REDDY & REDDY MOTORS (1E01-HQ-02), NEAR R&B GUEST HOUSE,ELURU ROAD,JANGAREDDYGUDEM, - 534447 PH :8821-9948829555.

KAKINADA

- S B MOTORS (W701-W7-01), D. NO. 52-10-36/3,NEAR AMAR GHATI CENTER,KARAPA ROAD, KAKINADA - 533001 PH :884-2352785.

KAVALI

- BHARGAVI AUTOMOBILES PVT LTD (A801-PF-05), KAVALI NELLORE,ANDHRA PRADESH - 524201 PH :8626-9246702567.

KOTHEGUDAM

- VARUN MOTORS PVT. LTD. (2603-HF-04), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM - 507101 PH :0253-2351277/79.

KURNOOL

- MSA MOTORS (C201-C2-01), AUTO NAGAR,INDUSTRIAL ESTATE, NH-7, KURNOOL - 518004 PH :08518-254040, 251616.

MACHILIPATNAM

- MITHRA AUTO AGENCIES PVT LTD (2604-OK-04), NARASIMHA NAGAR, MACHILIPATNAM, ANDHRA PRADESH - 521001 PH :8672-9849868312.

MADANAPALLI

- BHARGAVI AUTOMOBILES PVT LIMITED (AA1-AAT-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANAPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH :8624-252509.

MADHURAWADA

- JAYABHERI AUTOMOTIVES PVT LTD (BQ01-BQ0-01), PLOT NO. 5, SURVEY NO. 4/P, KOMMADI ROAD, MADHURAWADA, VISHAKHAPATNAM, ANDHRA PRADESH - 530048 PH :0891-984945639.

MARKAPURAM

- JAYALAKSHMI AUTOMOTIVES PVT. LTD. (CF1-CFF-01), D. NO. 4-515/12, SURVEY NO. 1167, OPP. INDUSTRIAL ESTATE, ONGOLE ROAD, MARKAPURAM, DISRT.-PRAKASAM, ANDHRA PRADESH - 523316 PH :8596-9848131133.

NARASARAOPET

- JAYALAKSHMI AUTOMOTIVES PVT. LTD. (BAP1-BAP-01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKPATNAM - 530047 PH :0891-9885006651.

PENDURTHI

- VARUN MOTORS PVT. LTD. (BAP1-BAP-01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKPATNAM - 530047 PH :0891-9885006651.

RAJAHMundry

- S.B. MOTOR CORPORATION (C501-C5-01), OPP.FCI GOWDOWN,JAILROAD,LALACHERUVU,RAJAMU NDRY - 533101 PH :0883-72410, 60249.

RAJAM

- JAYALAKSHMI AUTOMOTIVES PVT. LTD. (G502-JT-03), NEAR RELIANCE PETROL PUMP BUNK,VINUKONDA ROAD, NARASARAOPET, GUNTUR, - 522603 PH :8647-9866844344.

NARSIPATNAM

- JAYABHERI AUTOMOTIVES PVT. LTD. (WT01-WT-01), OPP. RDO BUNGLOW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH :958932-225111/226111.

NELLORE

- BHARGAVI AUTOMOBILES PVT LTD (A801-A8-01), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :0861-326226, 329927.
- BHARGAVI AUTOMOBILES PVT LTD (A801-A8-04), A2, INDUSTRIAL ESTATE,A.K. NAGAR,NELLORE, - 524004 PH :861-6457369.

NUZVID

- VARUN MOTORS PVT. LTD. (2603-CN-03), BESIDE R T C BUS DEPOT ,OLD D M OFFICE,VIJAYAWADA ROAD, NIZVID - 521201 PH :0866-254444, 9885706800.

ONGOLE

- JAYALAKSHMI AUTOMOTIVES (BY01-BY-02), THROVAGINTA COMPANY CENTRE,NH-5,GUNTUR ROAD,ONGOLE,PRAKASAM DISTRICT. - 523003 PH :8592-247167.

PALASA

- JAYABHERI AUTOMOTIVES PVT. LTD. (BWH1-BWH-01), SURVEY NO. 63 OF VILLAGE – PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT – SRIKAKULAM, ANDHRA PRADESH. - 532221 PH :08945-9849054442.

PENDURTHI

- VARUN MOTORS PVT. LTD. (BAP1-BAP-01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKPATNAM - 530047 PH :0891-9885006651.

DEALER WORKSHOP (AS ON 01.04.2017)

38. VARUN MOTORS PVT. LTD. (BLJ1-BLJ-01), PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH:08941-9703101166.

SRIKAKULAM

39. VARUN MOTORS PVT. LTD. (4603-W6-09), PEDDA PADDU ROAD, ARASAVILLI (P.O.), SRIKAKULAM, - 532001 PH:08942-220830.

SURYAPET

40. PAVAN MOTORS PVT. LTD (BLC1-BLC-01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213 PH:8684-8008699995, 2750250.

TANUKU

41. NOVELTY REDDY & REDDY PVT LTD (BAR2-BAR-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH:0819-9951440444.

TENALI

42. JAYALAKSHMI AUTOMOTIVES (PE01-PE-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH:8644-226100,227100.

TIRUPATI

43. KOUNDINYA ENTERPRISES (N981-N9-01), 18-3-60, TAK BY PASS ROAD, TIRUPATI PH:0877- 2233051, 2231047. 44. BHARGAVI AUTOMOBILES PVT LTD (A801-N9-02), 11/66/1,TIRUPATI RENIGUNTA ROAD, TIRUPATI, - 517507 PH:877-64591111.

TUNI

45. SATLIBABU MOTORS (PVT) LTD. (KY01-KY-01), D. NO. 65-31/15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH:08554-7661893888.

VIJAYAWADA

46. MITTRA AUTO AGENCIES PVT LTD (2604-26-01), 40-17-3, PICHAIAH STREET, GANDHI COLONY, VIJAYAWADA - 520001 PH:0866-632283, 633068. 47. VARUN MOTORS PVT. LTD. (2603-26-01), 48-17-4/R, RING ROAD, VIJAYAWADA - 520008 PH:0866-2545053.

48. VARUN MOTORS PVT. LTD. (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY, VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH:866-9865382444.

49. SANTOSH AUTOMOTORS PVT. LTD. (2607-26-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010 PH:0866-7799787969, 2552262.

VISAKHAPATNAM

50. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046 PH:0891-2514919, 9849445639. 51. VARUN MOTORS PVT. LTD. (4603-46-08), DOOR NO. 58/2/BLOCK NO. 5, BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH:0891-2525885. 52. VARUN MOTORS PVT. LTD. (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION SRINAGAR,GAJUWAKA - 530026 PH:0891-2513157.

53. VARUN MOTORS PVT. LTD. (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM. - 530007 PH:0891-2705375.

54. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKHAPATNAM, ANDHRA PRADESH - 530018 PH:0891-2506837.

55. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-02), D.NO:51-17-2 , NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH) - 530013 PH:0891-779972272.

56. VARUN MOTORS PVT. LTD. (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOC PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007 PH:0891-9885313744.

57. VARUN MOTORS PVT. LTD. (4603-46-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE - DUPPURITU, MANDAL - ACHUTAPURAM, DISTRICT - VISHAKHAPATNAM, ANDHRA PRADESH. - 531011 PH:3055550.

VIZIANAGARAM

58. VARUN MOTORS PVT. LTD. (4603-N8-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001 PH:8922-7799666998.

VIZIANAGARAM

59. JAYABHERI AUTOMOTIVES (N801-N8-01), PLOT NO.B-1,DOOR NO.8-32-1,SURVEY NO.10/12A & 10/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH - 535001 PH:08922-255366,255377,8008333232.

ARUNACHAL PRADESH

ITANAGAR

60. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPURE, ITANAGAR PH:0360-2212843.

61. BUISHI YADA MOTORS (7501-75-01), A' SECTOR, NAHARLAGUN, ARUNACHAL PRADESH. - 791110 PH:0360-245113, 245114.

62. BUISHI YADA MOTORS (7501-75-02), NH-52A, BANDERDEWA PAPUMPARA (DISTT), ARUNACHAL PRADESH, ITANAGAR - 791123 PH:0360-266382.

63. BUISHI YADA MOTORS (7501-75-04), MODEL VILLAGE, BEFORE GOVERNMENT HIGHER SECONDARY SCHOOL, NAHARLAGUN, ITANAGAR - 791110 PH:9436041437.

PASSIGHAT

64. BUISHI YADA MOTORS (7501-8A-03), PASSI GHAT BAZAR, PASSIGHAT, ARUNACHAL PRADESH - 791102 PH:368-9435082651/222474.

ASSAM

BAIHATA CHARIALI

65. PALLAVI MOTORS (P) LTD (BNL1-BNL-01), DAG NO. 1042, PATTI NO. 17, MOUZA - BORBANKHAR, P.S. - BAIHATA CHARIALI, DISTRICT - KAMRUP, ASSAM - 781381 PH:361-9864052488.

BARPETA

66. ROY AUTO ENGINEERING WORKS (7Z81-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD , WARD NO.4, ASSAM PH:03666-260343,262743.

67. BHARTI MOTORS (P) LTD (7N01-7Z-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313 PH:366-6260416.

BIJOYNAGAR

68. PODDAR CAR WORLD (A01-IA-01), AT/PO - BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DISTT, BIJOYNAGAR - 781125 PH:3623-9854120396.

BOKAKHAT

69. ANAMIKA MOTORS (BTP1-BTP-01), OPP. JDSG COLLEGE, NH-37, A.T. ROAD, WARD NO.-1, BOKAKHAT DISTT. GOLAGHAT (ASSAM) - 786512 PH:03774-9435050938.

BONGAIGAON

70. BHARTI MOTORS (P) LTD (7N01-7N-01), CHAPAGURI ROAD, BONGAIGAON - 7833830 PH:3664-099541-56179/231580/9859978958.

DHEKIJAULI

71. RAMBAL DURGADUTT MOTORS PVT LTD (BRX1-BRX-01), DAG NO.242, K.P. PATTI NO.88, VILLAGE-BHAKUMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIJAULI, DISTT. SONITPUR, ASSAM. - 784110 PH:0361-9854258025.

DHEMAJI

72. SAIKIA AUTO PVT. LTD. (7P01-UD-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057 PH:3752-9057837538.

DIBRUGARH

73. JAY BEE AUTO AGENCIES PVT. LTD. (C101-C1-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH:0373-2321018, 2329314.

DIGBOI

74. VISHAL CAR WORLD PVT. LTD. (BYD1-BYD-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. - DIGBOI, DISTRICT – TINSUKIA , ASSAM. - 786171 PH:3751-9435860000..

DULIJAN

75. B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIJAN. PH:0374-2801255.

76. JAY BEE AUTO AGENCIES PVT. LTD. (ADAI-ADA-01), JAYBEE AUTO AGENCIES, TIPLING TINALI, DULIJAN DIST. DIBRUGARH - 786602 PH:0374-8811098576.

GOALPARA

77. BHARATI MOTORS PVT. LTD. (YN01-YN-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH-37, DISTRICT: GOALPARA, ASSAM - 781301 PH:8761985554.

GOLAGHAT

DEALER WORKSHOP (AS ON 01.04.2017)

78. ANAMIKA MOTORS (J302-J3-01), N.H.-39,
RANGAJAN, PO: MORANGI, DIST- GOLAGHAT -
785621
PH.:03772-360901, 360947.

GUWAHATI

79. BIMAL AUTO AGENCY (0901-09-01),
JHALUKBARI, GUWAHATI - 781014
PH.:0361-670335, 570137.
80. BIMAL AUTO AGENCY (0903-09-01),
CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW
GUWAHATI BRANCH, GUWAHATI - 781021
PH.:0361-98645025045/46.
81. PALLAVI MOTORS (P) LTD (0902-09-01), DAG
NO. 1&2, NEXT TO DEPTT. OF FAMILY
WELFARE, SIX MILE, KHANAPARA G.S. ROAD,
GUWAHATI - 781022
PH.:361-2363191/92/93, 2360149, 2368980,
2360233.
82. PODDAR CAR WORLD PVT LTD (0904-09-01),
HENGRABABRI, VIP ROAD, GUWAHATI - 781036
PH.:0361-2334969, 71, 2334975.
83. BIMAL AUTO AGENCY (0901-09-02),
BEHARBARI, BEHIND DHOMO RESTAURANT,
NH-37, GUWAHATI - 781028
PH.:0361-8486002903/902.
84. BIMAL AUTO AGENCY (0903-09-03), BESIDE N.R.L
PETROL PUMP, RGB ROAD, ZOO ROAD,
GUWAHATI, ASSAM - 781005
PH.:0361-2207322/854057190.
85. MITTAL AUTOZONE (0906-09-01), NH-37,
LALMATI, NEAR BHARAT PETROLIUM,
GUWAHATI, ASSAM - . 781029
PH.:0361-2309951.
86. MITTAL AUTOZONE (0906-09-02), NH-37,
BELTOLA, NEAR HANUMAN KANTA, GUWAHATI
- 781028
PH.:0361-9864296666.
87. PALLAVI MOTORS (P) LTD (0902-09-02), DAG
NO. 2201, PATTI NO. 237, VILLAGE -
JYOTIKUCHI, MOUZA - BELTOLA, AK AZAD
ROAD, GUWAHATI, DISTRICT - KAMRUP,
ASSAM - . 781034
PH.:9864052488.
88. PODDAR CAR WORLD (0905-09-01), NH-37,
NEAR, GORCHUK CHAIRALI, GUWAHATI
(ASSAM) - . 781029
PH.:0361-7101714, 9435555853.
89. BIMAL AUTO AGENCY (0901-09-03), AEBC
ROAD, MAJHAR GALI, ROOP NAGAR, ULUBARI,
GUWAHATI, ASSAM - 781007
PH.:0361-9864074525.

HOJAI

90. RAMLAL DURGADUTT MOTORS PVT LTD
(ARA1-ARA-01), KHATIYAN NO.: 312/3F, HOJAI
MAIN ROAD, NEAR UCO BANK,
SHANKARDEVNAGAR, HOJAI, DISTRICT –
NAGAON , ASSAM - 782435
PH.:03674-9707556868.

JAGI ROAD

91. RAMLAL DURGADUTT MOTORS PVT LTD
(J301-RB-02),
JAGIROAD,MORGAON,NALAO,ASSAM -
782410
PH.:03678-9435569526.

JORHAT

92. ANAMIKA MOTORS (G901-G9-01), GARALI
ROAD, RAJABARIE, JORHAT, ASSAM. - 785001
PH.:0376-360901, 360947.

KARIMGANJ

93. JAIN UDYOG (6901-1S-04), STEAMER GHAT
ROAD, KARIMGANJ, ASSAM - 788710
PH.:3843-262084.

KHATKHATI

94. PODDAR CAR WORLD PVT. LTD. (CAZ1-CAZ-01),
NEAR PHONE EXCHANGE, NH-39,
KHATKHATI, DISTRICT – KARBI ANGLONG . -
782460
PH.:9706010366.

MANGALDOI

95. PODDAR CAR WORLD (YW01-YW-01), PUNIA,
NH-52, MANGALDOI, DISTT. DARRANG - 784115
PH.:0361 - 970152711.

MARGHERITA

96. VISHAL CAR WORLD PVT. LTD. (YR01-YR-01),
MARGHERITA TOWN, BEHIND IOCL PETROL
PUMP, NH-38, MARGHERITA, ASSAM - 786181
PH.:03751-220011.

NAGAON

97. RAMLAL DURGADUTT MOTORS PVT LTD
(J701-7J-01), KHUTIKHATIA, HAIBARGON,
NAGAON - 782002
PH.:0372-236111.

NALBARI

98. BIMAL AUTO AGENCY (9201-92-01),
CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI
DIST. NALBARI - 781335
PH.:0364-220031.

NORTH LAKHIMPUR

99. SAIKIA AUTO PVT. LTD. (7P01-7P-01),
HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR,
ASSAM - 787031
PH.:3752-232272,232450.

100. SAIKIA AUTO PVT. LTD. (7P01-7P-03),
KHELMATI, WARD NO. 14, NH -52, NORTH
LAKHIMPUR, ASSAM - 787001
PH.:03752-232272.

RANGIA

101. PODDAR CAR WORLD PVT. LTD. (6X01-6X-01),
RANGIA TOWN, WARD NO. 5, SHANTIPUR,
BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL,
RANGIA DISTT, KAMRUP (ASSAM) - 781354
PH.:0361-9707015958.

SIBSAGAR

102. ANAMIKA MOTORS (G901-L9-02), CHEREKAPAR,
B.G. ROAD, NEAR HOLY NAME SCHOOL,
SIBSAGAR. - 785640
PH.:03772-272231, 272251.

SILCHAR

103. JAIN UDYOG (6901-J2-02), KAUSHAL COMPLEX,
SONAI ROAD, SILCHAR, ASSAM - 788006
PH.:03842-26061, 62.

SONAPUR

104. BIMAL AUTO AGENCY (AAQ01-AAQ-01), TEPESSA
TINIALI, NH-37, SONAPUR, DIST- KAMRUP,
ASSAM.
PH.:9435101175.

TEZPUR

105. RAMLAL DURGADUTT MOTORS PVT LTD
(T102-T1-01), NEAR DON BASCO SCHOOL, P.O.
NIKAMULSATRA, TEZPUR, ASSAM - 784154
PH.:0361 - 8724087940.

TINSUKIA

106. VISHAL CAR WORLD (J401-J4-01), LAIPULY, A.T.
ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM -
786183
PH.:0374-231257.

BIHAR

ARARIA

107. SEEMANCHAL MOTORS PVT. LTD.
(O701-07-01), NEAR BUS STAND, JAGDISH RICE
MILL COMPOUND, HOSPITAL ROAD,
FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318
PH.:06455-8797096012/7545830002.

ARRAH

108. PEARL CARS (VU01-VU-01), (A UNIT OF
VINDHYAVASINI AUTOMOBILES PVT. LTD.),
DHANUPRA, NEAR GANPAT CHOUDHARY
DWAR, NH-30, ARRAH (BIHAR) - 802301
PH.:6182-9304685888.

BEGUSARAI

109. G S MOTORS (IU01-1U-01), HARHAR MAHADEV
CHOWK, NH-31, BEGUSARAI, BIHAR - 851101
PH.:9204756206.

BETTIAH

110. SHREE GOPAL AUTO PVT. LTD. (0401-04-01),
BEETIAH - MOTHARI HIGHWAY , NH-28 B, NEAR
MACHALLI LOK, BEETIAH (BIHAR) - 845438
PH.:6254-223050/9771486163.

BHAGALPUR

111. SEEMANCHAL MOTORS PVT. LTD.
(G802-G8-01), BAUSI ROAD, ALIGANJ, NEAR
SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR.
- 812005
PH.:0641-8797096012/8797096019.

BIHARSHARIF

112. REESHAV AUTOMOBILES (MG01-TG-03), PATNA
RANCHI ROAD, NR GAGAN DIWAN SOGARA
SCHOOL THANA-LAHERI MURARPUR,
BIHARSHARIF, DIST-NALANDA, BIHAR -
803101
PH.:7061295297.

BUXAR

113. PEARL CARS (VV01-VV-01), C/O DEVDHTRHA
UPDPHYA, SYNDICATE, BYE PASS ROAD,
BUXAR - 802101
PH.:6183-8294634605/8294634602.

CHAPRA

114. REESHAV AUTOMOBILES (MG01-TH-02), 146,
PLOT NO. 381, VILLAGE RAJUA, CHAPRA
PATNA ROAD, NEAR BHIKHARI CHOWK,
CHAPRA, BIHAR - 841301
PH.:9263637646.

DANAPUR

115. ALANKAR AUTO SALES & SERVICE
(1504-NH-02), ADJASCENT ARYA SAMAJ
MANDIR, NEAR SAGUNA MORE, DANAPUR, -
800018
PH.:93868968458.

DARBHANGA

116. KRISHNA MOTORS (1V01-1V-01), KHATA
NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P.
-13, ROAD, DARBHANGA, BIHAR - 846009
PH.:9204552405.
117. KRISHNA MOTORS (1V01-1V-03), VIP ROAD,
ALLALPATTI, DARBHANGA (BIHAR) - 846003
PH.:9204552405.

GAYA

118. KARLO AUTOMOBILES PVT LTD (Y601-Y6-01),
BODH GAYA, GAYA - 824231
PH.:631-016312200277, 09708231604.
PH.:9204756206.

GOPALGANJ

DEALER WORKSHOP (AS ON 01.04.2017)

119. SHREE GOPAL AUTO PVT. LTD. (O301-03-01), NH-28, DANAPUR, TEHSIL-MANJAGARH,GOPALGANJ (BIHAR) - 800023 PH .06156-292290/9771486139.

HAJIPUR

120. REESHAV AUTOMOBILES (MG01-MG-01), KHATA 617 & KHASHTA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI) . - 844101 PH :9263632163.

KATHIAR

121. SEEMANCHAL MOTORS PVT. LTD. (O601-06-01), NEAR SBP VIDHYA VIHAR SCHOOL, SIRSA, KATHIAR PURNEA ROAD, KATHIAR - 854105 PH :6452-8797096021/8797096019.

KISHANGANJ

122. SEEMANCHAL MOTORS PVT. LTD. (PX01-PX-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA-KNE, WARD NO.1, KISHANGANJ (BIHAR) - 855101 PH :06456-233074/8797096043.

MOHANIA

123. PEARL CARS (VW01-VW-01), MOHANIA-BUXAR ROAD, SH-14, MOHANIA - 821109 PH :6187-8294634632/8294634649.

MOTIHARI

124. RAJIV AUTOMOBILES PVT LTD (T401-FH-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401 PH :6252-241405, 9234609669.

MUZAFFARPUR

125. RAJIV AUTOMOBILES PVT LTD (T401-T4-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002 PH :0621-2272660/9910347908/9234609671. 126. RAJIV AUTOMOBILES PVT LTD (T401-T4-02), RAMDAYALU NAGAR, NEAR BMALANG STHAN, PATANA-MUZAFFERPUR HIGHWAY, - 842002 PH :7677773918/9234456810.

NAUGACHIA

127. SEEMANCHAL MOTORS PVT. LTD. (CFS1-CFS-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT - BHAGALPUR, BIHAR. - 853204 PH :8797096014, 8797096020.

NAWADA

128. REESHAV AUTOMOBILES (MG01-TJ-04), 191 & 400, KHARA NO. 3105 & 3102, NEAR DMS OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110 PH :9263632156.

PATNA

129. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA PH :0612-2265916,9334115999. 130. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. - 800013 PH :612-09304212119/9304217120. 131. VAUS' AUTOMOBILE (1503-15-01), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA . - 800014 PH :9771446012. 132. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001 PH :612-2528415/ 9934020200.

PURNEA

133. SEEMANCHAL MOTORS PVT. LTD. (6V01-6V-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326 PH :06454-232229/8797096014.

SAHARSA

134. G S MOTORS (AAP1-AAP-02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201 PH :9263638456.

SAMASTIPUR

135. KRISHNA MOTORS (1W01-1W-01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOT, SAMASTIPUR, BIHAR. - 848101 PH :9204061641.

SASARAM

136. PEARL CARS (1X01-1X-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115 PH :6184-8294634602/8294634605.

SITAMARHI

137. RAJIV AUTOMOBILES PVT. LTD. (E001-E0-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. - 843301 PH :9234609671.

SIWAN

138. SHREE GOPAL AUTO PVT LTD (O501-05-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236 PH :6154-9771486144/9771486132.

CHANDIGARH

CHANDIGARH

139. AUTOPACE NETWORK (P) LTD (0705-07-01), PLOT #12-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002 PH :9878422201.

140. MODERN AUTOMOBILES (0702-07-01), 4 M.W. INDL AREA, CHANDIGARH - 160002 PH :01072-650555, 656333. 141. C M AUTOSALES PVT. LTD. (0706-07-01), PLOT NO.130, PHASE-1, INDUSTRIAL AREA, CHANDIGARH - 160029 PH :0172-5200250.

142. STAN AUTOS PVT LTD (L104-07-03), B-42, INDUSTRIAL AREA, PHASE-II, CHANDIGARH - 160002 PH :0172-5003700.

CHANDIGARH (U.T)

CHANDIGARH

143. TRICITY AUTOS (9M01-07-02), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH - 160002 PH :0172-422222.

CHHATTISGARH

AMBIKAPUR

144. MAHAMAYA AUTOCARS PVT. LTD. (AE01-AE-01), MANEDRAGRAR ROAD, AMBIKAPUR, CHHATTISGARH . - 497001 PH :7774-231852, 53.

BALODA BAZAAR

145. SKY AUTOMOBILES (5001-GJ-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHHATTISGARH . - 493332 PH :727-222606.

BEMETARA

146. GANPATI MOTORS (CBC1-CBC-01), BHILAI ROAD, OPP. OF GOVT COLLEGE BEMETARA (CHHATTISGARH) . - 491335 PH :9644264450.

BHATAPARA

147. SPARSH AUTOMOBILES (BBJ1-BBJ-01), RAIPUR ROAD, BHATAPARA (CHHATTISGARH) . - 493118 PH :9926626662.

BHILAI

148. GANPATI MOTORS (B803-83-03), R 17, INDUSTRIAL AREA, NANDINI ROAD, CHAVANI ROAD, BHILAI . - 490026 PH :788-4030011, 4075000.

BILASPUR

149. SATYA AUTOMOBILES (C301-C3-03), SECTOR C, PLOT NO. 42, SIRGUTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH . - 495001 PH :7752-645048, 252024.

DHAMTARI

150. SKY AUTOMOBILES (7V01-7V-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHHATTISGARH . - 492009 PH :8889998612.

DURG

151. GANPATI MOTORS (7W02-7W-01), OPP JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, C. GARH - 491001 PH :788-9826643000.

GARIABAND

152. SPARSH AUTOMOBILES (CCH1-CCH-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH . - 756032 PH :9669638883.

JAGDALPUR

153. SKY AUTOMOBILES (EC01-EC-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH . - 494001 PH :07782-231500/231498.

JANJGI

154. SATYA AUTOMOBILES (C301-9N-02), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGI - 495668 PH :07817-9981260403.

KANKER

155. SKY AUTOMOBILES (5001-KG-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER . DISTRICT - KANKER, CHHATTISGARH . - 494334 PH :07722-231111.

KAWARDHA

156. GANPATI MOTORS (DI01-DI-01), NEAR KRISHI UPAJ MANDI, BILASPUR - KAWARDHA ROAD, KAWARDHA (DISTT - KABEERDHAM), CHHATTISGARH . - 491995 PH :07741-275591.

KORBA

157. SATYA AUTOMOBILES (U701-U7-03), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681 PH :07759-228167, 228168, 228169.

MAHASAMUND

158. SPARSH AUTOMOBILES (5002-9P-02), BARONDA CHOWNK, BAGBRAH ROAD, MAHASAMUND. PH :773-224880.

MANENDRAGARH

159. MAHAMAYA AUTOCARS PVT. LTD. (AE01-BCE-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGRAR, DISTT. KORIYA . - 497442 PH :8817282064.

MUNGELI

160. SATYA AUTOMOBILES PVT LTD. (BLE1-BLE-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH . - 861468 PH :9981266667, 08.09.

PATHALGAON

DEALER WORKSHOP (AS ON 01.04.2017)

161. MAHAMAYA AUTOCARS PVT. LTD. (BX01-BX0-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118 PH.:8889955558.
- PITHORA**
162. SPARSH AUTOMOBILES (CCG1-CCG-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008 PH.:9009645552.
- RAIGARH**
163. SHAKTI AUTOMOBILES (7Y81-7Y-01), ORRISA ROAD, KABIR CHOWK, BANJHPALI, RAIGARH, C.GARH. PH.:9300006496.
164. SATYA AUTOMOBILES (7Y02-7Y-01), JINDAL ROAD, RAIGARH - 496001 PH.:07762-228177,215810.
- RAIPUR**
165. SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010 PH.:0771-4214000.
166. SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH.:0771-4019000.
167. SPARSH AUTOMOBILES (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001 PH.:0771-422222.
168. SKY AUTOMOBILES (5001-50-07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. - 492013 PH.:9425204051.
169. SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH.:0771-4032505.
170. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH.:0771-4207000.
171. SPARSH AUTOMOBILES (5002-50-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004 PH.:0771-4222213.
172. SPARSH AUTOMOBILES (5002-50-05), PLOT - 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHPNIPURI, RAIPUR PH.:9926626662.
- RAJIM**
173. SPARSH AUTOMOBILES (5002-MO-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881 PH.:7701-234556.
- RAJNANDGAON**
174. GANPATI MOTORS (8303-LQ-04), NEAR HANUMAN TEMPLE, GRAM MANKI, NH-6, RAJNANDGAON. - 491441 PH.:7744-291721.
- SARAIPALI**
175. SKY AUTOMOBILES PVT. LTD. (BUF1-BUF-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI - 493558 PH.:7725-4030011, 4075000.
- SARANGARH**
176. SATYA AUTOMOBILES PVT LTD. (BU1-C-BUC-01), KHASRA NO.71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. - 733751 PH.:9981266667,08.09.
- DADRA & NAGAR HAVELI**
- SILVASSA**
177. KATARIA AUTOMOBILES PVT. LTD (ED01-ED-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230 PH.:0260 -2650057/56.
- DAMAN & DIU**
- DAMAN**
178. KATARIA AUTOMOBILES PVT. LTD (0104-98-08), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY - 396210 PH.:0260-866602499/2244002.
- DELHI**
179. JJ IMPEX (MARUTI SERVICE MASTERS) (0883-08-03), PLOT NO. 9, SSI INDUSTRIAL ESTATE,G.T. KARNAL ROAD, OPP JAHANGIR PURI,NEAR KDR WOOL FACTORY,DELHI - 110033 PH.:011-40715500, 40715501.
180. JJ IMPEX (MARUTI SERVICE MASTERS) (0883-08-01), F-39,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110028 PH.:011-41612194, 40685500.
181. MARUTI SALES & SERVICE(DELHI) (0810-08-01), C-119, INDUSTRIAL AREA PHASE-I, NARAINA, NEW DELHI - 110028 PH.:011-45541113.
182. A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, LAWRENCE ROAD, DELHI PH.:011-48280000.
183. GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA,TILAK NAGAR,NEW DELHI, PH.:011-43276666.
184. AAA VEHICLEADES PVT. LTD. (0884-08-01), B-244,OKHLA PHASE-I,NEW DELHI, - 110020 PH.:011-46664888-46664999.
185. BAGGA LINK MOTORS PVT LTD. (0811-08-01), 395 PATTPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092 PH.:011-46488830, 46488831.
186. BAGGA LINK MOTORS PVT LTD. (0811-08-02), LINK ROAD,(NEAR BAGGA PETROL PUMP),KAROL BAGH,NEW DELHI - 110005 PH.:011-23524646, 23522626.
187. COMPETENT AUTOMOBILES CO LTD (0806-08-01), 895/C-8,NEAR JAIN MANDIR DADA BARI,MEHRULAI,NEW DELHI - 110030 PH.:011-47724700, 47724707.
188. COMPETENT AUTOMOBILES CO LTD (0806-08-03), PLOT NO.3,GAZIPUR,DELHI, - 110096 PH.:011-45300000.
189. D.D. MOTORS (0882-08-01), A-1 UDYOG VIHAR,NEW ROHTAK ROAD,PEERAGARHI,DELHI - 110041 PH.:011-25963535, 48616500.
190. D.D. MOTORS (0813-08-01), A-10 MAYAPURI,PHASE-II,NEW DELHI - 110064 PH.:011-41845000, 49305232.
191. D.D. MOTORS (0843-08-01), 5, WAZIRPUR,INDUSTRIAL AREA,ADJACENT TO WAZIRPUR DEPOT,RING ROAD, NEW DELHI - 110034 PH.:011-27153996-99, 27151466-67.
192. KRISH AUTOMOTORS PVT. LTD. (08C1-08-01), PLOT NO.9,SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. - 110063 PH.:011-43288888.
193. MAGIC AUTO PVT. LTD. (0888-08-01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI - 110064 PH.:011-41847777.
194. MAGIC AUTO PVT. LTD. (08B7-08-01), PLOT NO. 68/3,MOTINAGAR,NEW DELHI, - 110015 PH.:011-43777777, 43777721.
195. MAGIC AUTO PVT. LTD. (08B7-08-02), PLOT NO. : B-7, G.T. KARNAL ROAD, DELHI, - 110033 PH.:011-45977777.
196. MARKETING TIMES AUTOMOBILES PVT LTD (0887-08-01), 18, OKHLA INDUSTRIAL ESTATE, PHASE-3, NEW DELHI - 110020 PH.:011-40999994, 40999904.
197. RANA MOTORS PVT LTD (08A1-08-02), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020 PH.:011-41707777.
198. ROHAN MOTORS LTD. (0886-08-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044 PH.:011-40567900, 41679252-259.
199. SAYA AUTOMOBILES PVT. LTD. (0808-08-03), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033 PH.:011-4708888.
200. T.R. SAWHNEY MOTORS PVT LTD (0819-08-01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094 PH.:011-71115333.
201. T.R. SAWHNEY MOTORS PVT LTD (0819-08-02), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042 PH.:011-71118333.
202. T.R. SAWHNEY MOTORS PVT LTD (0819-08-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092 PH.:011-9873851333.
203. T.R. SAWHNEY MOTORS PVT LTD (08C3-08-01), PLOT NO. A/191, OKHLA PHASE-I, DELHI - 110020 PH.:011-71119333.
204. SAYA AUTOMOBILES (0808-08-28), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI - 110033 PH.:011-27731325, 27731856.
205. COMPETENT AUTOMOBILES CO. LTD. (0806-08-05), B-83 MAYAPURI PHASE I, NEW DELHI - 110015 PH.:011-47268980.
206. BAGGA LINK MOTORS PVT LTD. (0811-08-03), PLOT NO.4,6,8,10 NEAR FORTIS HOSPITAL, OPPOSITE NIRULAS, BABA POTERY COMPOUND, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI - 110070 PH.:011-45888888, 45688811.
207. RANA MOTORS PVT LTD (08A1-08-04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020 PH.:011-40877777, 26389930.
208. COMPETENT AUTOMOBILES (0806-08-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI PH.:011-8377007980/81/02.
209. RANA MOTORS PVT LTD (08A1-08-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033 PH.:011-41609999, 42474444.
210. MAGIC AUTO PVT. LTD. (0889-08-01), KHASRA NO. 220 & 248, VILLAGE-DHUL SIRAS, SECTOR-24, DWARKA NEW DELHI. - 110077 PH.:9910445501, 9818555669.
211. KRISH AUTOMOTORS PVT. LTD. (0849-08-03), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. - 110052 PH.:011-42020000, 9910114255.

DEALER WORKSHOP (AS ON 01.04.2017)

212. T.R. SAWHNEY MOTORS PVT LTD (08D2-08-01),
B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1,
NEW DELHI - 110064
PH.011-71119333, 9999049337.

213. D.D. MOTORS (0813-08-05), 9/55 KIRTI NAGAR,
INDUSTRIAL AREA, NEW DELHI - 110015
PH.999903888.

214. MAGIC AUTO PVT. LTD. (08D5-08-01), PLOT NO.
449 & 450, PATPARGANJ INDUSTRIAL AREA,
NEW DELHI - 110092
PH.011-9818741741.

215. DD MOTORS (0813-08-06), 85B PANAJI
ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH,
NEW DELHI - 110043
PH.011-9999127840/9999127947.

216. PREM MOTORS PVT. LTD. (08D4-08-01), KH.
NO.80/4, MAHIPALPUR MATA CHOWK, DELHI -
110037
PH.011-42390000.

217. AAA VEHICLEADES PVT. LTD. (08B9-08-03),
VILLAGE GEVRA, KHASRA NO.87/3, 87/8 &
87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR
NO.616, MUNDKA, NEW DELHI - 110041
PH.011-66118888.

GOA

BICHOLIM

218. SAI SERVICE PVT. LTD. (BHN1-BHN-01), CITY
SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM,
GOA - 403529
PH.0832-2385500.

CANCONA

219. CHOWGULE INDUSTRIES PVT. LTD.
(IT01-IT-01), PLOT NO.40, CANCONA
INDUSTRIAL ESTATE, SHREESTAL, CANCONA,
SOUTH GOA - 403702
PH.0832-2633010.

CUNCOLIM

220. SAI SERVICE PVT. LTD. (3402-AAO-06), SURVEY
NO.64/7, SHOP NO.3-A-II, CANCNAMODDI,
CUNCOLIM, SOUTH GOA - 403703
PH.0832-2763062, 2763063.

DHARBANDORA

221. CHOWGULE INDUSTRIES PVT. LTD.
(3408-GO-07), AT- KHANDEPAR- USAON,
TAL-DHARBANDORA, SOUTH GOA - 403401
PH.0832-2345221.

MAPUSA

222. CHOWGULE INDUSTRIES PVT. LTD.
(3408-BZ-03), PLOT NO. 19/20,THIVIM
INDUSTRIAL ESTATE,KARASWADA,
MAPUSA,GOA - 403507
PH.0832-2256000/5/6.

223. SAI SERVICE PVT. LTD. (3402-BZ-05),
D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA,
GOA - 403507
PH.0832-2267000.

MARGAO

224. CHOWGULE INDUSTRIES PVT. LTD.
(3408-1Y-01), OPP.DAMODAR
TEMPLE,FATORDA,MARGAO,GOA - 403602
PH.0832-2749100,2749135,169,180,741237, 39.
225. SAI POINT CARS PVT LTD (3409-1Y-01),
H.NO.17,WARD NO.5,SURVEY
NO.34/3,34/4,MARGAO PONDA
HIGHWAY,SONFATOR
AMBORA,CAMURLIN,SALCETE, GOA - 403722
PH.0832-2746700/2858899.
226. SAI SERVICE PVT. LTD. (3402-1Y-02), SURVEY
NO. 212/4,VILLAGE - VERNA,TAL : SALCETE
,NEXT TO AGNEL POLYTECHNIC, MARGAO -
403718
PH.0832-2683000, 2791195,791192-96.
227. CHOWGULE INDUSTRIES PVT. LTD.
(3408-1Y-08), PLOT NO. M-58 AND M-59, PHASE
3B, VERNA INDUSTRIAL ESTATE, MARGAO,
VERNA ,SALCETE SOUTH GOA, GOA - 403722
PH.0832-2782400.

PANAJI

228. CHOWGULE INDUSTRIES PVT. LTD.
(3408-P1-02), D.B BANDODKAR
MARG,CAMPAL,PANAJI,GOA - 403001
PH.0832-2433000/2.
229. SAI SERVICE PVT. LTD. (3402-P1-01), SURVEY
NO: 36/1, PENHA DE FRANCE,TAL : BARDEZ,
ALTO PCRVORIM,GOA - 403501
PH.0832-2419200, 2414324,412084.
230. SAI SERVICE PVT. LTD. (3402-P1-07), SHOP NO.
14, DUKLE HEAVEN, ST. INEZ, PANAJI, NORTH
GOA - 403001
PH.0832-2229222/2225222.

PONDA

231. SAI SERVICE PVT. LTD. (3402-34-03), OFF
PANJIM HIGHWAY, PONDA,GOA. - 403401
PH.0832-2324106, 2311499, 2324120.

SANVORDEM

232. CHOWGULE INDUSTRIES PVT. LTD.
(BTK1-BTK-01), SURVEY NO. 4, SUBDIVISION-3,
VILLAGE – CACORA, TALUKA – CURCHOREM,
SANVORDEM, DIST. – SOUTH GOA, GOA . -
403706
PH.8322652300.

SATTARI

233. CHOWGULE INDUSTRIES PVT. LTD.
(3408-BOP-10), SURVEY NO. 60, SUB DIV NO. 05,
VILLAGE ARVALEM, VILLAGE PANCHAYAT
ARVALEM, TALUKA SATTARI, NORTH GOA,
GOA - 403505
PH.0832-6410187.

TALEIGAO

234. CHOWGULE INDUSTRIES PVT. LTD.
(3408-NP-06), SURVEY NO. 122, MAHBOS, NEAR
SHANKARWADI TEMPLE, SHANKARWADI,
TALEIGAO. - 403001
PH.0832-2431799,2231217.

VASCO

235. SAI SERVICE PVT. LTD. (3402-CP-04), NEXT TO
SHIKALIM CHURCH,SHIKALIM,VASCO,GOA -
403802
PH :0832-2542581/2526008/2526000/985055945,2414
327.
236. CHOWGULE INDUSTRIES PVT. LTD.
(3408-CP-09), OPP BHARAMASTAL TEMPLE,
PATRONG BAINA, VASCO,GOA - 403802
PH.0832-2540121/833540131.

GUJARAT

AHMEDABAD

237. KIRAN MOTORS LIMITED (0103-01-04), SURVEY
NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL
PETROL PUMP, SCIENCE CITY ROAD,

- AHMEDABAD - 380060
PH.079-65457555.

238. KATARIA AUTOMOBILES PVT. LTD (0104-01-01),
D/8 BEHIND ESI HOSPITAL,OUTSIDE DARAPIUR
DARWAJA,AHMEDABAD - 380016
PH.079-22174053/54.

239. KATARIA AUTOMOBILES PVT. LTD (0104-01-05),
NEAR KOHKHA BRIDGE,MANINAGAR - 380008
PH.079-22160571/72.

240. KATARIA AUTOMOBILES PVT. LTD (0110-01-01),
BEHIND ADANAL PUMP ,NEAR MAKARBA
CROSSING, MAKARBA,SG HIGHWAY - 380051
PH.079-30112333 / 30112312.

241. KIRAN MOTORS LIMITED (0102-01-01), SARKHEJ
- GANDHINAGAR HIGHWAY,OPP. RAJPATH
CLUB,AHMEDABAD - 380054
PH.0272-6740955, 67.

242. KIRAN MOTORS LIMITED (0102-01-02), BEHIND
L&T GODOWN,SARKHEJ SANAND HIGHWAY,
AHMEDABAD - 382210
PH.079-26891863, 26891009, 65459555,
65228555, 65229555.

243. KIRAN MOTORS LIMITED (0102-01-03),
BASEMENT, RIVERA ARCADE,NR. AUDA
GARDEN, PRAHLADNAGAR, 100FT RING
ROAD,SATELLITE, AHMEDABAD - 390015
PH.079-26924777,26927333.

244. POPULAR WHEELERS (INDIA) PVT. LTD.
(0105-01-01), PATEL TRUST BUILDING, AVTAR
HALL,NAROL, NARODA HIGHWAY,ISANPURA
ROAD,AHMEDABAD - 382443
PH.079-61903232.

245. POPULAR WHEELERS (INDIA) PVT. LTD.
(0111-01-01), BESIDE SOLA ROAD BRIDGE,S. G.
HIGHWAY SOLA,AHMEDABAD - 380054
PH.079-65058111.

246. UDAY AUTOLINK (0113-01-01), NEAR GALAXY
SPACIA, OPP. DASTAN FARM, S. P. RING ROAD,
KATHWADA, AHMEDABAD, GUJARAT - 382430
PH.079-31927070.

247. NANDA AUTOMOBILES (0114-01-01), SURVEY
NO. 229/3, OPP. GOKULESH PETROL PUMP,
NAROL - ASLALI ROAD, NAROL, AHMEDABAD,
GUJARAT. - 382405
PH.079-8866558787 / 8460088883.

248. STARLINE CARS (P) LTD (0115-01-01), PLOT NO.
103/2, NANDA CHILODA, NEAR RAILWAY
CROSSING, KRISHNANAGAR ROAD, NARODA,
AHMEDABAD - 382330
PH.079-29701051/53.

249. KIRAN MOTORS (0112-01-02), FINAL PLOT
NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP.
SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL
DISTT. AHMEDABAD - 382330
PH.079-60020555/60021555.

250. POPULAR WHEELERS (INDIA) PVT. LTD.
(0109-01-01), BEHIND G. B. SHAH COLLEGE,
NEAR SWAMINARAYAN PARK, VAISHALI
TOWNSHIP ROAD, VASNA, AHMEDABAD,
GUJARAT. - 380007
PH.079-30491101, 02.

251. ATUL MOTORS PVT. LTD. (0116-01-01), PLOT
NO. 116, BOPAL - AMBIL ROAD, BOPAL ,
AHMEDABAD, DISTRICT - AHMEDABAD,
GUJARAT. - 380058
PH.079-61993300.

252. KIRAN MOTORS LIMITED (0112-01-01), SURVEY
NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA
ROAD, CHANDIKHEDA, AHMEDABAD - 380005
PH.079-65054555 / 575.

AMOD

253. RAVIRATNA MOTORS (F801-ZE-03), ROYAL
PARK, JAMBUSAR-BHARUCH ROAD, AMOD,
DISTRICT: BHARUCH, GUJARAT. - 392110
PH.9687691106.

AMRELI

254. ATUL MOTORS (9E01-9E-01), LATHI BY PASS
ROAD, AMRELI, GUJARAT.. - 365601
PH.02792-8140909098.

ANAND

DEALER WORKSHOP (AS ON 01.04.2017)

-
255. AMAR CARS PVT LTD (F702-F7-01), JANTRA CROSSING, SOJITRA ROAD, ANAND - 388121
PH.:02692-229980, 229981.
- ANKLESHWAR**
256. RAVIRATNA MOTORS (P901-P9-01), PLOT NO. 624/2/B/A, GIDC, VALIA ROAD, ANKLESHWAR - 393002
PH.:02646-225132/28.
- BARDOLI**
257. KATARIA AUTOMOBILES PVT. LTD., (Q106-Q1-02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310
PH.:922803307/9228004697/02622-302222.
258. DHRU MOTORS (4002-Q1-02), G.I.D.C, SURAT BARDOLI ROAD,BARDOLI , 394601
PH.:02622-9825413113/9879104454.
- BAREJA**
259. KATARIA AUTOMOBILES PVT. LTD., (BANI-BAN-01), 5/6/7, ADITYA COMPLEX NATIONAL HIGHWAY-8, BAREJA, TALUKA – DASKROI, DISTRICT – AHMEDABAD, GUJARAT - 382425
PH.:079-7046079997.
- BARWALA**
260. UDAY AUTOLINK PVT. LTD. (I401-I4-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450
PH.:7567449999.
- BAVLA**
261. KATARIA AUTOMOBILES PVT. LTD. (0104-RX-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220
PH.:02714-231250.
- BHACHAU**
262. KD. MOTORS (P501-JP-02), SUNRISE MALL,OPP. BUS STAND, BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140
PH.:02837-223402.
- BHARUCH**
263. RAVIRATNA MOTORS (F801-F8-01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011
PH.:02642-233506, 507, 504.
- BHAVNAGAR**
264. ETERNAL MOTORS PVT LTD (C901-C9-01), 14/1 & 2 GIDC, BEHIND S.T.WORKSHOP,CHITRA.BHAVNAGAR - 364004
PH.:9227893042, 44.
265. ETERNAL MOTORS PVT LTD (C901-C9-02), PLOT NO. 1858/A-2,OPP GOLIBAR HANUMAN MANDIR, BEHIND GAUSHALA, RUPANI CIRCLE, BHAVNAGAR - 364002
PH.:0278-2562462, 9228007221.
266. ETERNAL MOTORS PVT. LTD. (C901-C9-04), 6/8 & 11 GIDC, BHAVNAGAR - RAJKOT HIGHWAY, CHITRA, BHAVNAGAR (GUJARAT) - 364004
PH.:0278-9228007215, 9227893040.
267. ETERNAL MOTORS PVT LTD (C901-C9-05), PLOT NO.25 SURVEY NO.37/1 & 37/2 NEAR TALAJA OCTROI CIRCLE, BESIDE INDIAN OIL PUMP, TALAJA ROAD, ADHEWADA, BHAVNAGAR, DISTT: BHAVNAGAR, GUJARAT - 364002
PH.:0278-9099091926, 9227893036.
- BHUJ**
268. K.D. MOTORS (P501-P5-01), PLOT NO. 5/6/14,UMANAGAR,MIRzapur HIGHWAY ROAD , BHUJ, GUJARAT - 370001
PH.:2832-02832-232534/5.
- BODELI**
269. KIRAN MOTORS LIMITED (0R01-0R-01), OPP.NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA: SANKHEDA,VADODARA - 391135
PH.:02665-222223 / 222224.
- BORSAD**
270. AMAR CARS PVT LTD (BJM1-BJM-01), BORSAD – TARAPUR HIGHWAY, BORSAD , DISTRICT – ANAND, GUJARAT - 388540
PH.:0265-9586477744.
- BOTAD**
271. ETERNAL MOTORS PVT LTD (C901-AP-03), OPP.MULTIPLEX CINEMA,YOGI NAGAR,PALIYAD ROAD,BOTAD - 400092
PH.:02849-8511118832, 9099095344.
- CHOTILA**
272. DREAM VEHICLES PVT. LTD. (CF1-CFI-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO - CHOTILA, DISTRICT – SURENDRANAGAR, GUJARAT. - 363520
PH.:8238000979.
- DABHOI**
273. KATARIA AUTOMOBILES (UU01-UU-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110
PH.:02663-255311.
- DAMOD**
274. R B CARS PVT. LTD. (2C01-PL-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151
PH.:02673-244307.
- DEESA**
275. TANU MOTORS PVT. LTD. (Q801-UQ-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535
PH.:02744-270499.
- DEHGAM**
276. NANDA AUTOMOBILES (2B01-NR-03), NEAR UMIYA Mataji TEMPLE, COLLEGE ROAD,AHMEDABAD ROAD, DEHGAM - 382305
PH.:02716-234567.
- DEVGADH BARIA**
277. R B CARS PVT. LTD. (2C01-AOA-05), BESIDE ARIHANT PETROL PUMP, PILOD ROAD, DEVGADH BARIA - 389380
PH.:0265-2771122.
- DHARAMPUR**
278. KATARIA AUTOMOBILES PVT. LTD. (BSK1-BSK-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT : VALSHAD, GUJARAT - 396050
PH.:02633-240600.
- DHARI**
279. ATUL MOTORS PVT. LTD. (GG01-GG-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA : DHARI, DIST. - AMRELI, GUJARAT . - 365640
PH.:0281-2462779, 6699000, 9824200001, 7046233352.
- DHRANGADHRA**
280. DREAM VEHICLES PVT. LTD. (IM01-IM-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310
PH.:2754-281234.
- GANDHI NAGAR**
281. NANDA AUTOMOBILES (2B01-2B-01), 1003,SECTOR-28,GANDHI NAGAR - 382028
PH.:079-23212692 / 93 / 94.
- GANDHIDHAM**
282. B M AUTOLINK (7702-77-01), EAST OF PLOT NO. 30-35,NATIONAL HIGHWAY, GANDHIDHAM - 370201
PH.:02836-223330.
283. B M AUTOLINK (7702-77-03), SURVEY NO.129/26 P. GALPADAR HIGHWAY, GANDHIDHAM , DISTT:KACHCHH, GUJARAT. - 370110
PH.:9272725004.
- GODHRA**
284. R B CARS PVT. LTD. (2C01-2C-01), PLOT NO. 11/11, 12-VAVDI,GODHRA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001
PH.:02672-265306, 265307, 365308.
285. R B CARS PVT. LTD. (2C01-2C-04), GODHRA -LUNAWADA ROAD, GODHRA, DISTRICT: PANCHMAHAL - 389001
PH.:02672-262749.
- GONDAL**
286. ATUL MOTORS (PVT) LTD (5503-AD-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY, GONDAL - 360311
PH.:02825-294495.
- HALOL**
287. R B CARS PVT. LTD. (BKCI-BKC-01), PLOT NO. 104/6 & 104/8, VADODARA - GODHRA HIGHWAY, NEAR NAVIJAN HOTEL, HALOL, DISTRICT - PANCHMAHAL, GUJARAT - 389350
PH.:02678-222021.
- HALVAD**
288. DREAM VEHICLES PVT. LTD. (GX01-GX-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 365330
PH.:02758-291409.
- HIMMATNAGAR**
289. KIRAN MOTORS LIMITED (P601-P6-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001
PH.:02772- 9824576711.
- IDER**
290. KIRAN MOTORS LIMITED (UX01-UX-01), SURVEY NO.69 IDAR-AMBaji ROAD, IDAR DIST: SABARKANTHA - 383430
PH.:8155994111.
- JAMNAGAR**
291. ATUL MOTORS (PVT) LTD (F401-F4-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001
PH.:0286-3041001.
292. ATUL MOTORS (PVT) LTD (F401-F4-04), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002
PH.:0288-2550251.
- JASDAN**
293. ATUL MOTORS PVT. LTD. (5503-OB-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360005
PH.:02821-291222 7046299952.

DEALER WORKSHOP (AS ON 01.04.2017)

JETPUR

294. PERFECT AUTO SERVICES (PK01-PK-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT) - 360370 PH: (02823)-9978998806.

JUNAGADH

295. PERFECT AUTO SERVICES (5502-K8-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001 PH: 9879518052.

KADI

296. STARLINE CARS (P) LTD (D101-UR-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH: 02764-241200.

KALOL

297. NANDA AUTOMOBILES (2B01-FW-02), PLOT NO. - 162-168, GIDC,KALOL, MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028 PH: 02764-220781 / 82 / 83.

KARJAN

298. AMAR CARS PVT LTD (UZ01-UZ-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H.-8, KARJAN, DISTT-VADDODARA (GUJARAT) - 391210 PH: 0265-2458282/2458585.

KHAMBHAT

299. AMAR CARS PVT LTD (BNF1-BNF-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620 PH: 0265-9909960706.

KIM

300. KATARIA AUTOMOBILES (UW01-UW-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110 PH: 02621-3081240/251,235555.

LIMBDI

301. DREAM VEHICLES PVT. LTD. (BSG1-BSG-01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421 PH: 02758-261262.

LUNAWADA

302. R B CARS PVT. LTD. (BYN1-BYN-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA , TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230 PH: 9879126981, 9825967139 9586746703.

MAHESANA

303. STARLINE CARS (P) LTD (D101-D-01), NAGALPUR HIGHWAY,MAHESANA , GUJARAT - 384002 PH :02762-255454 & 231707.

MAHUVA

304. ETERNAL MOTORS PVT. LTD. (IV01-IV-01), VIJAY - PARTH COMPLEX, BANDAR ROAD, MAHUVAA(GUJARAT) - 364290 PH: 02844-226226 / 9227893041.

MANDAL

305. KIRAN MOTORS (IW01-IW-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH: 02715-9408803925.

MANDVI

306. K.D.MOTORS (UY01-UY-01), PLOT NO.25,26 & 27, RAJ COMMERCIAL SURVEY NO.246, NEAR 'THE BEACH RESORT', MANDVI NALIYA ROAD, MANDVI KUTCH - 370465 PH: 02834-295100/ 01.

MANSA

307. NANDA AUTOMOBILES (2B01-0L-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845 PH: 9727921000.

MEHSANA

308. TANU MOTORS PVT. LTD. (Q801-D1-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH: 02762-291102, 291103, 291104.

METODA

309. ATUL MOTORS PVT. LTD. (5503-BLW-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021 PH: 992468774.

MODASA

310. KIRAN MOTORS LIMITED (P601-CR-02), SHAMIL JI ROAD,SABARKANTHA DIST., MODASA - 383315 PH: 2774- 8155995111.

MORBI

311. PERFECT AUTO SERVICES (5502-X5-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI , TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. - 363641 PH: 9879518052, 9099058044 9925199569.

MOTI KHAVADI

312. ATUL MOTORS (PVT) LTD (AAU1-AAU-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVADI, ZANKHAR, TA: LAPUR, DIST - JAMNAGAR, GUJARAT. - 361140 PH: 0288-2846015.

MUNDRA

313. B M AUTOLINK (7702-AJ-02), PRAGPAR ROAD,MUNDRA,DISTRICT-KUTCH, GUJARAT, - 370421 PH: 02838-29020.

NADIAD

314. AMAR CARS PVT LTD (F702-P7-02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370 PH: 0268-2587981, 2587980.

NAVASI

315. KATARIA AUTOMOBILES PVT. LTD (Q701-Q7-01), PLOT NO. 891, OPP PAUVA MILL, NH-8,NEAR GANESH SISODA CHOKDI,GANESH SISODA NAVSARI, GUJARAT - 396463 PH: 02637-304444/304439.

OLPAD

316. COMET CAR SALES & SERVICE PVT. LTD. (4006-ZZ-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH: 0261 -220068 / 220088.

PADRA

317. AMAR CARS (2205-OC-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. - VADODARA, GUJARAT - 391140 PH: 02662-223355/22336.

PALANPUR

318. TANU MOTORS (Q801-Q8-01), OPP.DHARTI RESORT, ABU-AHMEDABAD HIGHWAY, PALANPUR - 385001 PH: 02742-254477/254499/2545000.
319. STARLINE CARS PVT. LTD. (D101-Q8-08), SURVEY NO.4 & 52, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH: 2742-265666.

PALSANA

320. KATARIA AUTOMOBILES PVT. LTD (4004-ZF-07), BESIDE SAINATH COMPLEX, KADDODARA AHMEDABAD ROAD , NH-8, UMBHEL GAM,TALUKA: PALSANA KADODARA, SURAT. - 382721 PH: 02622-9228004677, 8866001593.

PATAN

321. STARLINE CARS (P) LTD (D101-Q9-02), CHANASMA HIGHWAY, PATAN - 384265 PH: 02766-7046046184 & 7046046186.

PORBANDAR

322. ATUL MOTORS (F401-T6-05), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY , PORBANDAR, DIST. PORBANDAR GUJARAT - 360577 PH: 0286-290002.

PRANTIJ

323. KIRAN MOTORS LIMITED (AAI1-AAI-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205 PH: 9624401888.

RAJKOT

324. ATUL MOTORS (PVT) LTD (5503-55-01), NEAR BHAKTI NAGAR STATION CIRCLE, TAGORE ROAD, RAJKOT - 360002 PH: 0281-2462781/82.

325. ATUL MOTORS (PVT) LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005 PH: 0281-2575513/14.

326. PERFECT AUTO SERVICES (5502-55-01), PERFECT HOUSE,GONDAL ROAD,VANDI,RAJKOT - 360004 PH: 0281-360588, 366759.

327. PERFECT AUTO SERVICES (5502-55-02), RING ROAD,OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005 PH: 0281-2576233, 2576234.

328. ATUL MOTORS (PVT) LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NH CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003 PH: 0281-2704573.

329. PERFECT AUTO SERVICES (5502-55-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006 PH: 9979861995.

RAJPIPLA

DEALER WORKSHOP (AS ON 01.04.2017)

330. RAVIRATNA MOTORS PVT. LTD. (9X01-9X-01), OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145 PH:02640-223508.
- RAJULA**
331. ATUL MOTORS PVT LTD (BAK1-BAK-01), HINDORNA CHOWKDI, JAFRABAD ROAD, RAJULA DISTT. AMRELI (GUJARAT) - 365560 PH:02794-221501.
- SANTRAMPUR**
332. R B CARS PVT. LTD. (2C01-RY-03), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR,DISTT.- PANCHMAHAL - 389260 PH:02675 -221752.
- SAVLI**
333. KIRAN MOTORS LTD. (CFD1-CFD-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRVA CHOWKDI, SAVLI - TIMBA ROAD, SAVIL TALUK - SAVLI, DISTRICT - VADODARA, GUJARAT. - 391770 PH:962409195.
- SAYAN**
334. KIRAN MOTORS LTD. (OO01-OO-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIA, TALUKA: OLPAD, SAYAN - 394130 PH:9228007037/9712010100.
- SURAT**
335. DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR,NEAR JEEVAN JYOT THEATRE,UDHNA MAIN ROAD,SURAT - 394210 PH:0261-406071/72.
336. DHRU MOTORS (4002-40-1B), 207, NEW INDUSTRIAL ESTATE,ROAD NO.6,UDHNA UDYOG NAGAR, SURAT - 394210 PH:0261-0261-2272118/ 9978900862.
337. KATARIA AUTOMOBILES PVT. LTD (4004-40-04), OPP. VATSALYA BUNGLOWS,NEAR GUJARAT GAS CNG STATION,UDHNA MADGULLA ROAD, VESU,SURAT - 395007 PH:0261-2211005/9228004674.
338. KATARIA AUTOMOBILES PVT. LTD (4004-40-05), KATARIA ARCADE,OPP. RAJHANS CINEMA,DUMAS ROAD, PIPLOD, SURAT - 395007 PH:0261-3081238, 3081240, 3081251.
339. KIRAN MOTORS LIMITED (4001-40-01), SURAT-BARDOLI ROAD,DUMBHAL,NEAR PUNA JAKAT NAKA,SURAT - 395010 PH:0261-9824701590/9712010100.
340. KIRAN MOTORS LIMITED (4001-40-02), PANDESSARA,BAMROLI ROAD,SURAT - 395002 PH:0261-26303614.
341. COMET CAR SALES & SERVICE PVT. LTD. (4006-40-01), CHIKIWADI COMPLEX, GHB ROAD, PANDESSARA, SURAT. - 394221 PH:0261 -3091234.
342. KATARIA AUTOMOBILES LTD. (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT - 394310 PH:0261-2778810 / 20 / 30 / 40.
343. COMET CAR SALES & SERVICE PVT. LTD. (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARAGAM, SURAT, DISTRICT - SURAT, GUJARAT. - 395004 PH:0261-2480877, 2604977.
344. KIRAN MOTORS (P) LTD. (4005-40-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009 PH:0261-2010100.
345. AMAR CARS PVT LTD (4009-40-01), BLOCK NO.116, SURVEY NO.128/1, SURAT-KAMREJ ROAD, VALAK PATIYA, NEAR VALAK NAGAR, TALUKA-KAMREJ, DISTT:SURAT - 395006 PH:0261-8980042799/89800471899.
346. AMAR CARS PVT LTD (4009-40-02), PLOT NO.10/11, SURVEY NO.7 & 8, SONARAS COMPOUND, NEAR DGVCL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH:0261-706902655/7069026666.
- SURENDERNAGAR**
347. DREAM VEHICLES PVT. LTD. (LC01-LC-01), 261/P, OPP MARKETING YARD,GIDC AREA,WADHWAN CITY, SURENDERNAGAR - 363030 PH:02752-241314 / 651516.
- UMRETH**
348. AMAR CARS PVT. LTD. (CFE1-CFE-01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH , DIST:ANAND, GUJARAT. - 388220 PH:7567898716.
- UNA**
349. PERFECT AUTO SERVICES (BFD1-BFD-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT - GIR SOMNATH, GUJARAT. - 362560 PH:8511147523.
- UNJHA**
350. TANU MOTORS (Q081-GR-02), OPP. DHANA DAL FACTORY,MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH:02742-224499.
- VADODARA**
351. KATARIA AUTOMOBILES PVT. LTD (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINoba BHAVE ROAD, SALATWADA, VADODARA - 390001 PH:08866002482 / 1584.
352. AMAR CARS PVT LTD (2203-22-01), GORWA ROAD,VADODARA, GUJARAT. - 390016 PH:0265-2291500, 01, 02.
353. KIRAN MOTORS LIMITED (2201-22-01), 909/4,G.I.D.C.MAKARPURA,VADODARA - 3900010 PH:0265-2642212.
354. KIRAN MOTORS LIMITED (2201-22-02), PLOT NO.160, SUB-I NUTAN GUJ.INDL.ESTATE,OLD CHHANI ROAD, VADODARA - 390002 PH:0265-2771744, 45.
355. AMAR CARS PVT LTD (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH:0265-2426282.
356. KATARIA AUTOMOBILES PVT. LTD (2204-22-01), 984/GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH:0265-2091257 / 34.
357. AMAR CARS PVT LTD (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH:0265-2488378.
358. KIRAN MOTORS LIMITED (2201-22-03), C/O ARBUKA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH:0265-2771122.
- VALSAD**
359. KATARIA AUTOMOBILES PVT. LTD (0104-2E-06), SURVEY NO. 211 ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020 PH:0262-23244 / 23324.
- VALVADA**
360. VITESSE TRADING LIMITED (0503-V1-05), SURVEY NO.137/I Q 146/I VILLAGE VALVADA,NATIONAL HIGHWAY-8, NEAR KARAMBELI STATION, DISTT.VALSAD(GUJ) - 396105 PH:0260-787301.
- VANSDA**
361. KATARIA AUTOMOBILES PVT. LTD. (Q701-SB-02), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT - NAVSARI, GUJARAT - 396580 PH:02630-223490.
- VAPI**
362. KATARIA AUTOMOBILES PVT. LTD (0104-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8, G. I. D. C., VAPI, TAL. PARDI - 396195 PH:0260-3081240/3081260.
363. KATARIA AUTOMOBILES PVT. LTD (0104-97-09), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI , DISTRICT - VALSAD, GUJARAT - 369191 PH:0260-2408202/8866001591/9327740903.
- VERaval**
364. PERFECT AUTO SERVICES (5502-AH-05), NR. BALIYA HANUMAM,VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265 PH:02876-221122.
- VIJAPUR**
365. STARLINE CARS (P) LTD (D101-V2-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH:02763-220059.
- VIRAMGAM**
366. KIRAN MOTORS LIMITED (AAB1-AAB-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH:8156016222.
- VISNAGAR**
367. STARLINE CARS (P) LTD (D101-RW-05), VISNAGAR -AMBAI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT.- MEHSANA - 384315 PH:02765-222997.
- VYARA**
368. COMET CAR SALES & SERVICE PVT. LTD. (BIY1-BIY-01), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT - TAPI, GUJARAT - 394650 PH:02626-221410/11.
- WANKANER**
369. ATUL MOTORS PVT LIMITED (BALI-BAL-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621 PH:02828-221556.
- HARYANA**
- AMBALA**
370. EAKANSH WHEELS (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001 PH:0171-2822500,600,900.

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | |
|---|
| <p>371. EAKANSH WHEELS (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001
PH.:01712542549, 9991802000.</p> <p>372. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA - 134003
PH.:0171-2521444, 2520155.</p> <p>373. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003
PH.:0171-2520448.</p> <p>ASSANDH</p> <p>374. KARNAL MOTORS (8906-CS-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032
PH.:1749-272032.</p> <p>BAHDURGARH</p> <p>375. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (2601-2G-01), 1202, M.I.E. PART-B, MAIN ROHTAK ROAD, BAHADURGARH, DIST. JHAJJAR (HARYANA) - 124507
PH.:01276268102 / 01276661111 / 9812580555.</p> <p>376. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (2601-2G-02), KHASRA NO. 1681-82, MODERN INDUSTRIAL AREA, PART - B, BAHADURGARH - 124507
PH.:9992200429.</p> <p>BALLABGARH</p> <p>377. ROYAL MOTORS (9R81-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD PH.:0129-4271800, 9899242536, 2242536.</p> <p>BARARA</p> <p>378. EAKANSH WHEELS (NX01-NX-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201
PH.:01731-286400.</p> <p>BARWALA</p> <p>379. MODERN AUTOMOBILES (BSA1-BSA-01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. JHAJJAR - 134118
PH.:9416021648.</p> <p>BERI</p> <p>380. SIDHI VINAYAK VEHICLES PVT. LTD. (BEV1-BEV-01), PLOT NO. 53/2, NEAR MATA MANDIR, BERI DUJANA ROAD, BERI , DIST. JHAJJAR - 124201
PH.:9992200415.</p> <p>BHIWANI</p> <p>381. JAGMOHAN MOTORS (X301-X3-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021
PH.:01664-9812000364.</p> <p>BILASPUR</p> <p>382. PANDIT AUTOMOBILES PVT. LTD. (BGH1-BGH-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT - YAMUNANAGAR, HARYANA - 135102
PH.:01732-247777, 9812455390, 9812455879.</p> <p>CHARKHI DADRI</p> <p>383. JAGMOHAN MOTORS (X301-CT-02), BHIWANI LOHARI ROAD, CHARKHI DADRI, BHIWANI - 127306
PH.:9992200363, 9992200362.</p> <p>CHEEKA</p> <p>384. EAKANSH MOTORS PVT. LTD. (U802-HU-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA - 136034
PH.:01743222277 / 01743222288.</p> <p>DADRI-TOE</p> <p>385. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (BVH1-BVH-01), KHEWAT NO.270, 273 KILA NO.11/2/2 & 14 (6-0), 15/2 (7-16) VILL - DADRI TOE, MAIN BUS STAND JHAJJAR-GURGAON ROAD, TEHSIL - JHAJJAR, DISTT.-JHAJJAR, HARYANA - 124103
PH.:9992200433.</p> <p>ELLENABAD</p> <p>386. SHAKTI MOTORS PVT.LTD. (E401-IN-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRS ROAD, ELLENABAD - 125055
PH.:1666-230168, 221953, 9729871902.</p> <p>FARIDABAD</p> <p>387. BATRA AUTO COMPANY (5803-58-01), 14/1 MILESTONE, MATHURA ROAD, FARIDABAD - 121003
PH.:0124-91-5274591-94.</p> <p>388. BATRA AUTO COMPANY (5803-58-02), PLOT NO. 7, 18/2, MAIN MATHURA ROAD, FARIDABAD - 121003
PH.:0129-2380907.</p> <p>389. TCS AUTOMOBILES (5804-58-01), PLOT NO-1A, SECTOR 6, FARIDABAD, - 121001
PH.:0129-4292929.</p> <p>390. VIPUL MOTORS LTD. (5801-58-03), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006
PH.:0129-4003052, 4286000,24,30.</p> <p>391. VIPUL MOTORS LTD. (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002
PH.:0129-4285000,33,66, 286640, 41, 290685.</p> <p>392. FAIR DEAL CARS PVT. LTD. (5805-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003
PH.:9953340624.</p> <p>FARRUKHNAGAR</p> <p>393. PLATINUM MOTOCORP LLP (KE01-KE-01), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO. -19/3 AND 22/2, VILLAGE - SEHADPUR MOHAMADPUR, TEHSIL - FARRUKHNAGAR, DISTRICT - GURGAON - 123506
PH.:9810181273, 9205192661.</p> <p>FATEHABAD</p> <p>394. SHAKTI MOTORS PVT.LTD. (2H02-2H-01), NH-10, SIRSA ROAD, FATEHABAD - 125050
PH.:01667221799 / 01667221699 / 9896032100.</p> <p>GANAUR</p> <p>395. JAGMOHAN MOTORS PVT. LTD. (NA03-NA-01), RAILWAY ROAD, GANAUR - 131101
PH.:0130-2461500.</p> <p>GHARAUEDA</p> <p>396. KARNAL MOTORS (8906-MR-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUEDA - 132114
PH.:01748-252030,252040.</p> <p>GOKHANA</p> <p>397. JAGMOHAN MOTORS (CU02-CU-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT - 131301
PH.:9992200357.</p> <p>GURGAON</p> <p>398. COMPETENT AUTOMOBILES CO LTD (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004
PH.:0124-425200.</p> <p>399. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006
PH.:0124-8912555, 8912000, 8912869, 8912670.</p> <p>400. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, - 122015
PH.:0124-4012555.</p> <p>401. VIPUL MOTORS LTD. (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001
PH.:0124-43957001, 4004019-23, 9811723030.</p> <p>402. ROHAN MOTORS LTD. (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001
PH.:7065574220.</p> <p>403. VIPUL MOTORS LTD. (5801-95-04), PLOT NO.5/221, SARHAUL VILLAGE,SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102
PH.:0124-4285000.</p> <p>JHAJJAR</p> <p>404. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (0801-08-01), NEAR GOVT. POLYTECHNIC, BAHADURGARH ROAD, JHAJJAR - 124507
PH.:01251-271115 / 271119.</p> <p>JIND</p> <p>415. EAKANSH MOTORS PVT. LTD. (U802-2K-06), PLOT NO. 1890/29, NEAR TRUCK UNION OFFICE, JIND-ROHTAK ROAD, JIND, HARYANA - 126102
PH.:01681-247666.</p> <p>JULANA</p> |
|---|

DEALER WORKSHOP (AS ON 01.04.2017)

416. EAKANSH MOTORS PVT. LTD. (MA01-MA-01), JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101 PH :8395906111.
- KATHAL**
417. EAKANSH MOTORS PVT. LTD. (U802-U8-01), AMBALA ROAD, NH-65, KATHAL - 136027 PH :01746-225959, 229100, 309330.
- KALKA**
418. MODERN AUTOMOBILES (EG02-EG-01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302 PH :0173-224999/220555.
- KARNAL**
419. KARNAL MOTORS (8906-89-01), 71/3 MILESTONE ,G.T.ROAD, KARNAL - 132001 PH :0184-255555, 274387.
420. KARNAL MOTORS (8906-89-02), OPP. BUS STAND, AMBALA CHANDIGARH HIGHWAY, KARNAL - 132001 PH :0184-2274287.
421. MODERN AUTOMOBILES (8907-99-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL - 132001 PH :0184-2272503.
- KHARKHODA**
422. JAGMOHAN MOTORS LTD. (BU01-BU-01), NEAR KANYA GURUKUL MAHABIDYALYA, DELHI ROAD, NEAR UNION BANK, KHARKHODA (HARYANA) - 131402 PH :0130-2584111.
- KOSLI**
423. DINCO 4 WHEELS LLP (CAN1-CAN-01), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT – REWARI, HARYANA - 123302 PH :07082100202.
- KUNDLI**
424. JAGMOHAN MOTORS (GU02-GU-01), OPP. TDI OFFICE, DELHI KUNDLI BORDER, GT KARNAL ROAD SONEPAT - 131001 PH :0130-8059900535.
- KURUKSHETRA**
425. KARNAL MOTORS (8906-U6-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA PH :01744-232827.
- MADLAUDA**
426. HARISONS AUTOMOBILES (CFK1-CFK-01), ASANDH ROAD, VILLAGE - MADLAUDA, TEHSIL - MADLAUDA, DISTRICT – PANIPAT. - 132113 PH :0180-2667788.
- MANDI DABWALI**
427. SHAKTI MOTORS PVT.LTD. (E401-KU-02), SANGARIA ROAD, DABWALI, DISTT.-SIRSA - 125104 PH :01668-229988, 229966 9896023577.
- MANESAR**
428. PLATINUM MOTOCORP LLP (2L04-2L-01), PLOT NO.282, SEC 6, JMT MANESAR DISTT. GURGAON. - 122052 PH :0124-2656500.
- MEHAM**
429. JAGMOHAN MOTORS (A601-NZ-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101 PH :9992100310.
- MURTHAL**
430. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIDC, MURTHAL PH :0130-2482230.
- NARAINGARH**
431. EAKANSH WHEELS (1802-CV-02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203 PH :01734-285500.
- NARWANA**
432. EAKANSH MOTORS PVT. LTD. (U802-CW-03), OPP. HAFED GODDOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116 PH :01684-9813583100.
- PALWAL**
433. ROHAN MOTORS LTD. (EE01-EE-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101 PH :01275-304100.
- PANCHKULA**
434. CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA PH :0172-2592310, 2594310, 5064336.
435. MODERN AUTOMOBILES (0702-K3-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113 PH :0172-2594200.
436. AUTOPACE NETWORK PVT. LTD (0705-K3-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA - 134113 PH :9878427062.
- PANIPAT**
437. VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 PH :180-4001490.
- ROHTAK**
438. HARISONS AUTOMOBILES (D301-D3-01), G.T.ROAD , PANIPATHARYANA - 132103 PH :01742-67292, 67225, 67782.
439. HARISONS AUTOMOBILES (D301-D3-03), NEAR JATAL ROAD, OLD CANAL, PANIPAT - 132103 PH :01802688088, 01804091801.
440. HARISONS AUTOMOBILES (D301-D3-04), PLOT NO.23, SECTOR-25, PHASE-1, PART-1, PANIPAT (HARYANA) - 132103 PH :0180-2667799, 2667788.
- PATAUDI**
441. PLATINUM MOTOCORP LLP (BY03-BY-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503 PH :0124-2672100.
- PEHOWA**
442. KARNAL MOTORS (8906-2M-06), NEAR SHARMA SERVICE STATION, KURUKSHETRA ROAD, PEHOWA - 136128 PH :01741220911 9996038881.
- PUNDRI**
443. EAKANSH MOTORS PVT. LTD. (BFF1-BFF-01), KILA NO. 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026 PH :0174-9906111.
- RADAUR**
444. PANDIT AUTOMOBILES PVT.LTD. (D201-EN-02), OPP. JMT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA - 135001 PH :01732-283165, 9812455884.
- REWARI**
445. DINCO 4 WHEELS LLP (U102-U1-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA) - 123401 PH :01732-261347.
- ROHTAK**
446. JAGMOHAN MOTORS (A601-A6-01), SONEPAT ROAD, ROHTAK - 124001 PH :01262-55002-5.
447. JAGMOHAN MOTORS (A601-A6-03), NEAR SUKHIPURA CHOWK, DELHI BYEPASS ROAD, ROHTAK - 124001 PH :9992200385.
- SAFFIDON**
448. EAKANSH MOTORS PVT. LTD. (U802-JU-05), NEAR BRSK SCHOOL , OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT- JIND - 126112 PH :9896155345.
- SANA**
449. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.- AMBALA PH :0171-2822669, 9886402469.
- SALAHAWAS**
450. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (BEQ1-BEQ-01), KHATA NO. 550, KHASRA NO. 62/17(2/4-1) 18/2(4-9) 19/1/(3-1), JHAJJAR-KOSLI ROAD (VIA MATANHEL), NEAR BDPO OFFICE VPO & TEHSIL – SALAHAWAS, DISTRICT – JHAJJAR, HARYANA, - 124146 PH :9467165111.
- SAMALKHA**
451. HARISONS AUTOMOBILES (D301-LY-02), INDUSTRIAL AREA, GT ROAD, SAMALKHA, DISTT. PANIPAT, HARYANA - 132101 PH :8607000122.
- SAMPLA**
452. JAGMOHAN MOTORS PVT. LTD. (NY01-NY-01), NEAR VASUNDRA CAFE, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501 PH :9812000351.
- SHAHABAD**
453. KARNAL MOTORS PVT. LTD. (CCR1-CCR-01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST. KURUKSHETRA - 136135 PH :9996206000.
- SIRSA**
454. SHAKTI MOTORS PVT.LTD. (E401-E4-01), DABBALI RD., SIRSA, HARYANA - 125055 PH :01666-30168.
- SOHNA**
455. PASCO AUTOMOBILES (9506-KZ-03), DAMDAMA MORE, GURGAON - SOHNA ROAD, SOHNA, HARYANA, - 122103 PH :0124-4952001.
- SONEPAT**
456. JAGMOHAN MOTORS (J501-J5-02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001 PH :9812615000.
- SONIPAT**
457. JAGMOHAN MOTORS (J501-J5-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001 PH :01264-230114, 236106-07.
- TAURU**
458. PASCO AUTOMOBILES (BIV1-BIV-01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA, - 122015 PH :8683000902, 9873001497.

DEALER WORKSHOP (AS ON 01.04.2017)

TOHANA

459. SHAKTI MOTORS PVT LTD. (XP01-XP-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120
PH:01692-220099,220199.

TOSHAM

460. JAGMOHAN MOTORS (Y01-Y-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040
PH:01253-8059900566.

YAMUNANAGAR

461. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA PH:1732-261937.
462. PANDIT AUTOMOBILES PVT LTD. (D201-D2-01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001
PH:01732-30099.
463. PANDIT AUTOMOBILES PVT.LTD. (D201-D2-03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001
PH:9996426004.

HIMACHAL PRADESH

BAJNATH

464. KANGRA VEHICLEADES (BBC1-BBC-01), TASHI JONG, PAPROLA-BAJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAJNATH, DISTT. KANGRA - 176115
PH:01892-251379.

BANKHET

465. KANGRA VEHICLEADES PVT. LTD. (BWN1-BWN-01), KHASRA NO.709, KHATA KHATOONI NO.23, BANKHET, THE-DAHLOUSIE, DISTT. CHAMBA - 176303
PH:01899-254186, 232036, 9418048803.

BILASPUR

466. COMPETENT AUTOMOBILES CO. LTD. (6Y01-6Y-01), KHEWAT NO. 8/8 KHTAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. - CHANDPUR, TEHSIL - SADAR, DIST. - BILASPUR, HIMACHAL PRADESH. - 174001
PH:01978-7807800330 / 7807800440.

CHAMBA

467. KANGRA VEHICLEADES (D902-JF-03), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310
PH:0189222086 , 9418059252.
468. KANGRA VEHICLEADES PVT. LTD. (D902-JF-05), KHASRA NO. 88/96 1 & KHASRA NO.628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310
PH:9988717437.

DEHRA

469. KANGRA VEHICLEADES (D902-HT-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101
PH:01970-234477.

GAGGAL

470. KANGRA VEHICLEADES (BBV1-BBV-01), NATIONAL HIGHWAY-20 , ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA , HIMACHAL PRADESH - 176209
PH:9857645440.

HAMIRPUR

471. COMPETENT AUTOMOBILES CO LTD (W901-W9-01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT. HAMIRPUR - 177401
PH:01972-256281-84.

JASSUR

472. CLASSIC MOTOR GARAGE (BH81-BH-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH
PH:01893-226555.

JOGINDER NAGAR

473. COMPETENT AUTOMOBILES CO. LTD. (BBO1-BBO-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015
PH:1692-9418263465.

KULLU

474. COMPETENT AUTOMOBILES (2001-2Q-01), OPPOSITE S.S.B. TRAINING CENTRE, SHAMSHI, KULLU - 175126
PH:1902-260665, 9625797817.

KUNNIHAR

475. GOYAL MOTORS PVT. LTD. (BBX1-BBX-01), KHATA NO. - 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSIL - ARKI, DISTRICT - SOLAN, HIMACHAL PRADESH - 173207
PH:1902183772.

MANALI

476. COMPETENT AUTOMOBILES CO. LTD. (BKU1-BKU-01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131
PH:1902-9418387465.

MANDI

477. COMPETENT AUTOMOBILES CO. LTD. (B301-B3-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI - 124501
PH:01905-23865.

NADAUN

478. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041
PH:01972-232865.

478. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041
PH:01972-232865.

NAGROTA

479. KANGRA VEHICLEADES (D902-D9-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047
PH:01892-251379, 251387.

NAGROTA BAGWAN

480. KANGRA VEHICLEADES PVT. LTD. (D902-D9-06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047
PH:01892-251379, 251387.

NALAGARH

481. GOYAL MOTORS (IB02-IB-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101
PH:01893-069672.

NURPUR

482. KANGRA VEHICLEADES (D902-JG-04), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201
PH:01893-226789, 226333.

PALAMPUR

483. KANGRA VEHICLEADES (2T01-2T-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH - 176061
PH:1694-236227.

PAONTA SAHIB

484. GOYAL MOTORS PVT. LTD. (A901-8G-02), OPP BIBJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR , NH-72, PAONTA SAHIB - 173025
PH:9418061728.

RAJGARH

485. GOYAL MOTORS PVT. LTD. (BJX1-BJX-01), KHATA NO. 517/505, 478/3, KHASRA NO. - 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL - RAJGARH, DISTRICT - SIRMAUR , HIMACHAL PRADESH - 173101
PH:9618138772.

RAMPUR BUSHAHIR

486. GOYAL MOTORS PVT. LTD. (BYF1-BYF-01), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL - RAMPUR, DISTRICT - SHIMLA - 172001
PH:94183245752.

ROHRU

496. JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015
PH:0191-466681, 464304, 308.

487. GOYAL MOTORS (JZ01-JZ-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT - SHIMLA - 171207
PH:9418018472.

SHIMLA

488. GOYAL MOTORS PVT. LTD. (A901-A9-01), TARADEVI, SHIMLA,(H.P.) - 171010
PH:0177-231872.

SOLAN

489. GOYAL MOTORS PVT. LTD. (7D01-7D-01), DEON GHAT, SOLAN - 173211
PH:01792-220427.

UNA

490. COMPETENT AUTOMOBILES (OD01-OD-01), VILLAGE RAINSARY,P.O JHALERA,TEHSIL & DISTRICT:UNA - 174303
PH:1972-256281-84.

JAMMU & KASHMIR

ANANTNAG

491. PEAKS AUTO PVT. LTD. (2Y01-2Y-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165
PH:1932-228165.

BANDIPORA

492. JAMKASH VEHICLEADES (KASHMIR) PVT. LTD. (1205-OA-04), AJAR BANDIPORA , J&K - 193502
PH:01957-225185.

BARAMULA

493. JAMKASH VEHICLEADES(KASHMIR)PVT. LTD. (8C01-8C-01), VILLAGE SANGRAMA,WAGAROO, BARAMULA - 193101
PH:0194-2138951.

DODA

494. J&K VEHICLEADES (2Z01-2Z-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202
PH:1996233146.

GANDERBAL

495. JAMKASH VEHICLEADES (KASHMIR) PVT. LTD (ZA01-ZA-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201
PH:0194-2416156.

JAMMU

496. JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015
PH:0191-466681, 464304, 308.
497. JAMKASH VEHICLEADES PVT LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001
PH:0191-2576235, 2543935, 2520323.

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | |
|---|---|
| <p>498. JAMKASH VEHICLEADES PVT LTD (3306-33-04),
SUNJWAN, DISTT. JAMMU - 180011
PH.:0191-2468504.</p> <p>499. PEAKS AUTO JAMMU PVT. LTD (3310-33-01),
GANGYA INDUSTRIAL AREA, BEHIND COCA
COLA FACTORY, JAMMU - 180010
PH.:0191-2484813.</p> <p>500. JAMMU MOTORS PVT. LTD (3308-33-01), 6,
AKHNOOR ROAD, JAMMU - 180001
PH.:0191-2504746, 2552977, 2505183.</p> <p>501. JAMMU MOTORS PVT. LTD (3308-33-02), PLOT
NO.2, RAJPURA CHUNG OPP AG OFFICE,
AKHNOOR ROAD, JAMMU - 180002
PH.:0191-2504746, 2552977, 2505183.</p> <p>KATHUA</p> <p>502. JAMMU MOTORS PVT. LTD. (3B02-3B-01), WARD
NO.13, CHAK PARTAP SINGH HATU MORN,
NH1-A, KATHUA TEHSIL KATHUA - 184101
PH.:837613036.</p> <p>KULGAM</p> <p>503. PEAKS AUTO PVT. LTD. (OY01-OY-01), NEAR
GRID STATION, MAIN ROAD, KULGAM - 191202
PH.:1931-260030.</p> <p>KUPWARA</p> <p>504. JAMKASH VEHICLEADES(KASHMIR)PVT. LTD.
(1205-AX-03), JAMKASH VEHICLEADES, NEAR
GM FILLING STATION, DC OFFICE ROAD
KUPWARA - 193223
PH.:01955-253322.</p> <p>LEH</p> <p>505. DRUK AUTOZONE (9S01-9S-01), AIRPORT
ROAD, LEH (LADAKH), DISTT. LADAKH, LEH -
194101
PH.:01982-250005.</p> <p>POONCH</p> <p>506. JAMKASH VEHICLEADES PVT LTD
(AAW1-AAW-01), VILLAGE KUNUYIAN, TEHSIL
HAVELI POONCH, JAMMU & KASHMIR. - 185121
PH.:1965-222972.</p> <p>PULWAMA</p> <p>507. PEAKS AUTO PVT. LTD. (1204-MU-03), MUGHAL
ROAD, GUNGOO, PULWAMA - 192301
PH.:01933-240226.</p> <p>RAJOURI</p> <p>508. JAMKASH VEHICLEADES PVT LTD (3306-KS-06),
KALAKOTE ROAD, VILLAGE BADOL, RAJOURI -
185131
PH.:01962-264973.</p> <p>RS PURA</p> <p>509. JAMKASH VEHICLEADES PVT LTD (3306-JN-03),
GAGIN MORTH, RS PURA, JAMMU. - 181102
PH.:01923-251951.</p> | <p>SHOPIAN</p> <p>510. PEAKS AUTO PVT. LTD. (AAA1-AAA-01), AGLAR
SOFANAMAN, SHOPIAN - 192303
PH.:0194-24666067.</p> <p>SIDHRA</p> <p>511. JAMKASH VEHICLEADES PVT LTD
(CDL1-CDL-01), KHASRA NO.80 & KHATA
NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT
PETROLEUM PETROL PUMP, TEH. & DISTT.
JAMMU - 180011
PH.:0191-2662024, 2662025, 2576235.</p> <p>SRINAGAR</p> <p>512. RAHIM MOTORS (1281-12-01), SIDDO
INDUSTRIAL AREA, RANGRETH, SRINAGAR
PH.:0194-2435909.</p> <p>513. HIGHLAND AUTOMOBILES PVT.LTD
(1202-12-01), SONWAR, SRINAGAR - 190001
PH.:0194-452579, 479928.</p> <p>514. JAMKASH VEHICLEADES(KASHMIR)PVT. LTD.
(1205-12-01), HYDERPURA BY PASS CROSSING,
SRINAGAR - 190015
PH.:0194-2435576.</p> <p>515. PEAKS AUTO PVT. LTD. (1204-12-01), BYE PASS
ROAD, NH - 1A, NEAR HOTEL SILVER STAR,
SRINAGAR - 191101
PH.:0194-2130261.</p> <p>516. JAMKASH VEHICLEADES(KASHMIR)PVT. LTD.
(1205-12-05), NARBAL CROSSING, NH-1A,
SRINAGAR, JAMMU & KASHMIR - 190017
PH.:9419003372.</p> <p>SUNDERBANI</p> <p>517. PEAKS AUTO JAMMU PVT. LTD (AAM2-AAM-01),
MOUZA THANDA PANI, TEH. SUNDERBANI -
185153
PH.:1960-233119.</p> <p>SURANKOTE</p> <p>518. PEAKS AUTO JAMMU PVT. LTD (TY02-TY-01),
NEAR KNIET KING FILLING STATION, BHARAT
PETROLEUM, POONCH MUGHAL ROAD,
SURANKOTE, DISTT: POONCH - 185101
PH.:9018331442.</p> <p>UDHAMPUR</p> <p>519. J&K VEHICLEADES PVT. LTD. (D801-D8-01),
NATIONAL HIGHWAY 1A, NEAR DAK
BANGLOW, UDHAMPUR - 182101
PH.:01992-76266.</p> <p>JAMMU AND KASHMIR</p> <p>AKHNOOR</p> <p>520. JAMMU MOTORS (2X02-2X-01), MAIN ROAD
DASKAL, TEHSIL - AKHNOOR, DISTRICT -
JAMMU - 181201
PH.:1924-252021, 9419109162.</p> <p>HANDWARA</p> <p>521. JAMKASH VEHICLEADES (BYA1-BYA-01),
KHAWAT NO.31, KHATTA NO.298, SURVEY NO.
3764/1816, MOZA BRARIPORA, TEH-
HANDWARA, DIST- KUPWARA, J&K - 193221
PH.:9419074012.</p> <p>JAMMU</p> <p>522. PEAKS AUTO JAMMU PVT. LTD. (3310-33-02),
KHASRA NO.425 & 426, KHATA NO.425 & 426,
TOPE SHRKHANIAN (BACKSIDE OF BEST
PRICE), AKNOOR ROAD, JAMMU. - 180001
PH.:0191-2484813, 9596620057.</p> <p>JHARKHAND</p> <p>BOKARO</p> <p>523. HINDUSTAN AUTO AGENCY (B501-B5-02), R1,
CITY CENTRE, SECTOR-4, BOKARO STEEL
CITY, BOKARO - 827004
PH.:06542-233690/ 9263631315.</p> <p>524. HINDUSTAN AUTO AGENCY (B501-B5-03), M2,
SECTOR-4, CITY CENTRE, BOKARO STEEL
CITY (JHARKHAND) - 827004
PH.:9204796107.</p> <p>DALTONGANJ</p> <p>525. PREMSONS MOTOR UDYOG PVT LTD
(5103-20-04), VANASTHALI COMPLEX
PUGUCHAMPA NAGAR,NH-23,SISAI
ROAD,GUMLA - 835207
PH.:06524-221117.</p> <p>DEOGHAR</p> <p>526. RELIABLE INDUSTRIES (5202-KR-03), SHAHEED
ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, -
814112
PH.:06432-9431125332.</p> <p>DHANBAD</p> <p>527. RELIABLE INDUSTRIES (5202-52-01), KATRAS
ROAD, DHANBAD, JHARKHAND. - 826001
PH.:0326-301507, 901508,9431125332.</p> <p>528. RELIABLE INDUSTRIES (5202-52-02), BEHIND
PRABHAT KHABAR, AT: KOLAKUSMA, P.O.K.G.
ASHRAM, SARAI DHELA , DHANBAD - 828127
PH.:326-8986749072.</p> <p>529. RELIABLE INDUSTRIES (5202-52-06), SUGIADIH,
HIRAK ROAD, SARAI DHELA, DHANBAD,
JHARKHAND. - 828127
PH.:9835830202.</p> <p>DUMKA</p> <p>530. RELIABLE INDUSTRIES (L701-L7-01), OPP
DUDHANI PETROL PUMP, DEOGHAR-PAKUR
ROAD,DUMKA (JHARKHAND) - 814101
PH.:9708555924.</p> <p>GHATSHILA</p> <p>531. PEBCO MOTORS LTD. (AIA1-AIA-01), PLOT NO.
68, KHASRA NO.128, MAUZA PAORA, NH-33,
NEAR FULL-DUNGRI CHOWK, GHATSHILA, EAST
SINGHBHUM (JHARKHAND) - 832303
PH.:06585-9308433388.</p> <p>GIRIDIH</p> <p>532. RELIABLE INDUSTRIES (5202-3D-04),
MOHANPUR, PACHAMBA ROAD, GIRIDIH. -
815301
PH.:06532-222969/ 9934205123.</p> <p>GODDA</p> <p>533. RELIABLE INDUSTRIES (5202-EJ-05), ASANBANI
CHOWK, MAIN ROAD, GODDA. - 814133
PH.:9431121479.</p> <p>GUMLA</p> <p>534. PREMSONS MOTOR UDYOG PVT. LTD.
(5103-20-04), VANASTHALI COMPLEX
PUGUCHAMPA NAGAR,NH-23,SISAI
ROAD,GUMLA - 835207
PH.:06524-221117.</p> <p>HAZARIBAGH</p> <p>535. HINDUSTAN AUTO AGENCY (Y901-Y9-01), NEAR
SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. -
825301
PH.:9263631324.</p> <p>536. HINDUSTAN AUTO AGENCY (Y901-Y9-02), PLOT
NO. 233 AND 234, MORANGI, THANA -
MUFFASSIL NO. 257, HAZARIBAGH,
JHARKHAND. - 825301
PH.:9263631327, 9031098015.</p> <p>JAMSHEDPUR</p> <p>537. MOTOR WORLD (3102-31-01), N.H-33, NEAR
PARDIH CHOWK, MANGO, JAMSHEDPUR -
831012
PH.:0657-2360346, 2360347.</p> <p>538. PEBCO MOTORS LTD. (3101-31-01), MEDIUM
SECTOR, INDUSTRIAL AREA, ADITYAPUR,
JAMSHEDPUR - 831001
PH.:0657-409106, 107.</p> <p>539. PEBCO MOTORS LTD. (3101-31-02), 16
BALICHALA, CONTRACTORS & GODOWN AREA,
SONARI, JAMSHEDPUR - 831011
PH.:9308433388.</p> <p>JAMTARA</p> <p>540. RELIABLE INDUSTRIES (BOX1-BOX-01), PLOT
NO. 483, PARWAT BIHAR, DUMKA ROAD,
JAMTARA, JHARKHAND. - 815351
PH.:9835814404.</p> <p>KHELARI</p> |
|---|---|

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | |
|--|---|
| <p>541. SUDHA BUSINESS ENTERPRISES PVT. LTD. (CFO1-CFO-01), PLOT 113, MOUZA - BUKBUKA, BESIDE PAHADI MANDIR, KHELARI, RANCHI - 829205
PH.:0651-6452222, 9534199997.</p> <p>RANGARH</p> <p>542. HINDUSTAN AUTO AGENCY (AV01-AV-01), MARAR, RANCHI ROAD (NH-33), RAMGARH - 829122
PH.:0263631320.</p> <p>RANCHI</p> <p>543. PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48 , KOKAR INDUSTRIAL AREA, RANCHI.
PH.:0651-2544661, 2542650.</p> <p>544. PREMSONS MOTORS UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI - 834008
PH.:0651-2231686, 9304807349.</p> <p>545. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE, BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010
PH.:0651-3210400, 3190400/9304807354.</p> <p>546. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-05), PLOT NO.31 & 13, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003
PH.:0651-6560180.</p> <p>547. SUDHA BUSINESS ENTERPRISES PVT. LTD. (5107-51-02), PLOT NO. 74, OPPOSITE OTC GROUND, HEHAL, RATU ROAD, RANCHI. JHARKHAND - 834005
PH.:9534199997.</p> <p>548. SUDHA BUSINESS ENTERPRISES PVT. LTD. (5107-51-03), PLOT NO. 39, NEAR BOOTY MORE, RANCHI-RAMGARH ROAD, RANCHI. - 835217
PH.:9534199997.</p> <p>KARAikal</p> <p>549. SHENBAKA CARS PVT. LTD. (CCF1-CCF-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAikal NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAikal MUNICIPALITY, KARAikal - 609602
PH.:4368-227800/1/2.</p> <p>KARNATAKA</p> <p>550. PRATHAM MOTORS (0205-FA-04), #SY#4/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106
PH.:080-9343222764.</p> <p>ANKOLA</p> | <p>551. BHARATH AUTO CARS PVT LTD (FC02-FC-01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT - 581314
PH.:08388-231330.</p> <p>ATHANI</p> <p>552. SHANTESA MOTORS (BWA1-BWA-01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304
PH.:8289-884472587, 9538715071.</p> <p>ATHRADI</p> <p>553. ABHARAN MOTORS (G601-UK-04), HERABETTU ROAD ATHARDI UDUPI - 576107
PH.:0820-6452061/2/3/4.</p> <p>ATTIBELE</p> <p>554. SURAKSHAA CAR CARE PVT. LTD. (BMM1-BMM-01), SURVEY NO.22/7/8, SARJAPUR MAIN ROAD, INDAIBELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE - 562107
PH.:9449865665.</p> <p>BAGALKOT</p> <p>555. VIJAY MOTOWINGS (ZL01-ZL-01), 180/4-2,BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103
PH.:08354-2001193/94.</p> <p>BANGALORE</p> <p>556. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-01), 6/2, MAHADEPURA, WHITE FIELD ROAD, BANGALORE - 560048
PH.:080-3058361/2/3.</p> <p>557. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078
PH.:080-30482295/6/3/1.</p> <p>558. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-03), NO.7/1, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERGHATTA RD., BANGALORE - 560076
PH.:080-30280511/12.</p> <p>559. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE - 560038
PH.:080-30584638/41/42, 9845026252.</p> <p>560. BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-01), NO. - 603, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064
PH.:080-30088801-09.</p> <p>GARUDA AUTOCRAFT PVT LTD (0212-02-01), SURVEY NO. 13, 11TH KM., KANAKPURA ROAD, BANGALORE - 560062
PH.:080-26322500/2/3.</p> <p>562. GARUDA AUTOCRAFT PVT LTD (0212-02-02), 119/1, 11TH CROSS, MALLESHWARAM, BANGALORE - 560003
PH.:080-23460136/140/142.</p> <p>563. KALYANI MOTORS (P) LTD (0211-02-01), MYSORE ROAD,PANTHARAPALYA,KENGRI HOBLI,BANGALORE - 583201
PH.:080-28606004/05/06/07.</p> <p>564. MANDOVI MOTORS PVT LTD (0201-02-01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027
PH.:080-22233763.</p> <p>565. MANDOVI MOTORS PVT LTD (0201-02-05), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN. VIJAYANAGAR,BANGALORE - 560079
PH.:080-23400685.</p> <p>566. MANDOVI MOTORS PVT LTD (0201-02-07), 17/A-283 IND.SUBURB,IND STAGE, GORANGUTEPALYA, TUMKUR ROAD. YESWANTHIPUR, BANGALORE - 560022
PH.:080-23374130.</p> <p>567. MANDOVI MOTORS PVT LTD (0201-02-08), NO. 70 SARAKKI INDUSTRIAL LAYOUT,J.P. NAGAR,3RD PHASE,BANGALORE - 560078
PH.:080-26589945 /26584363.</p> <p>568. MANDOVI MOTORS PVT LTD (0201-02-02), NO 1 TO 5,NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044
PH.:080-23158777/23159777.</p> <p>569. MANDOVI MOTORS PVT LTD (0201-02-03), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043
PH.:080-25445560/61.</p> <p>570. PRATHAM MOTORS (0205-02-01), 16, BALLANDUR, SARJAPUR RING ROAD, BANGALORE - 560037
PH.:080-41262929.</p> <p>571. PRATHAM MOTORS (0205-02-02), STHANIKAM'S ARCADE, OPP. ST. THEREESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE - 560010
PH.:080-30141800.</p> <p>572. PRATHAM MOTORS (0205-02-03), NO. 319 -324 ,QUEENS ROAD CROSS, BANGALORE - 560001
PH.:080-30741700.</p> <p>573. RNS MOTORS (7301-02-03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022
PH.:080-23474354-58.</p> <p>RNS MOTORS (7301-02-04), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068
PH.:080-24115901.</p> <p>575. RNS MOTORS (7301-02-06), TUMKUR ROAD, NH-4, YESHWANTPUR, BANGALORE - 560022
PH.:0836-43479803-15 /14.</p> <p>576. SAGR AUTOMOBILES (0203-02-01), 39/2 BANNERGHATTA ROAD,BYRASANDRA,BANGALORE - 560029
PH.:080-30426063/2.</p> <p>577. SAGR AUTOMOBILES (0203-02-02), 28/1 KANAKPURA ROAD,BASANAVAGUDI,BANGALORE - 560004
PH.:080-41204666.</p> <p>578. SURAKSHAA CAR CARE PVT LTD (0280-02-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE PH.:080-2852222/3/4.</p> <p>579. MANDOVI MOTORS PVT LTD (0201-02-98), PLOT NO. 257/1-13, BANNERGHATTA ROAD, N.S. PALYA, BANGALORE - 560076
PH.:080-26681323,26589945.</p> <p>580. KALYANI MOTORS (KR PURAM) (0213-02-02), SY. NO.581A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE - 560049
PH.:080-33235000.</p> <p>581. KALYANI MOTORS PVT. LTD. (0213-02-03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU - 574239
PH.:080-40419000.</p> <p>582. SURAKSHAA CAR CARE PVT. LTD. (0280-02-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068
PH.:080-25732018.</p> <p>583. KALYANI MOTORS PVT LTD (0213-02-04), 250/1,BILEKAHALLI, BANNERGHATTA ROAD, BENGALURU - 560076
PH.:080-803041911.</p> <p>584. SURAKSHAA CAR CARE PVT. LTD. (0280-02-03), NO.64, POTHALAPPA GARDEN, LASIKAR BUILDING, HOSUR ROAD, ADUGODI, BANGALORE - 560039
PH.:08153-29299.</p> <p>585. BIMAL AUTO AGENCY (0218-02-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058
PH.:9945237213.</p> <p>586. PRATHAM MOTORS (0205-02-05), #58/5 KUDU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034
PH.:080-30712020.</p> |
|--|---|

DEALER WORKSHOP (AS ON 01.04.2017)

587. RNS MOTORS LIMITED (7301-02-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158 PH.:080-43110200.
588. GARUDA AUTOCRAFT PVT LTD (0212-02-03), 10/1, HEBBAL ,AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024 PH.:080-23621332.
589. BIMAL AUTO AGENCY INDIA PVT. LTD. (0286-02-01), #10/1, HEBBAL ,AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024 PH.:080-23621332.
590. SURAKSHAA CAR CARE PVT. LTD. (0280-02-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034 PH.:080-25529009/10.
591. KALYANI MOTORS PVT LTD. (0287-02-01), #10/5, NAGADEVANAHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056 PH.:080-30036333.
592. MANDOVI MOTORS PVT LTD (0201-02-0G), NO. 4/2, CENTRAL STREET, NEXT TO SANGEETH THEATRE, SHIVAJI NAGAR, BANGALORE, KARNATAKA - 560003 PH.:9731407344.
593. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033 PH.:080-41143168.
594. MANDOVI MOTORS PVT LTD (0201-02-0H), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093 PH.:080-25341144/77.
595. KALYANI MOTORS PVT. LTD. (0213-02-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE - 560043 PH.:080-9900599946.
596. KATARIA AUTOMOBILES PVT. LTD. (0294-02-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST -AADUGODI, BANGALORE - 560030 PH.:080-9998066020.
597. MANDOVI MOTORS PVT. LTD. (0201-02-01), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASPURA, KENGERI HOBLLI, UTTARAHALLI, BANGALORE - 560060 PH.:9945235516.
598. MANDOVI MOTORS PVT LTD (0201-02-0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA - 560102 PH.:080-25747764/76/62/63/64.
599. RNS MOTORS (7301-02-0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH.:080-23534286.
600. VARUN MOTORS PVT. LTD. (0292-02-01), HNO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE - 560022 PH.:080-23085555, 9985344244.
601. VARUN MOTORS PVT. LTD. (0292-02-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTAA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073 PH.:733826729.
- BANGARPET**
602. SURAKSHAA CAR CARE PVT. LTD. (0R04-0R-01), 18/0 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH.:082153-290299.
- BANTWAL**
603. MANDOVI MOTORS PVT LTD (TR01-TR-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231 PH.:080-2410123.
- BELGAUM**
604. SHANTESHA MOTOR (P) LTD (E801-E8-01), MUJAWAR COMPOUND,NEHRU NAGAR,BELGAUM, PH.:0831-2473308/4204523/2476162.
605. SHANTESHA MOTOR (P) LTD (E801-E8-03), PLOT NO.5, AZAMNAGAR,BELGAUM, - 590006 PH.:0831-247087.
606. SHANTESHA MOTOR (P) LTD (E801-E8-04), PLOT NO. 8, SURVEY NO. 251/51, HAVLOCK ROAD CAMP, BELGAUM - 290010 PH.:0831-2425001/2.
- BELLARY**
607. K P F PVT. LTD (G201-G2-01), P.B. NO. 58,BELLARY HOSPET ROAD ALLIPURA BELLARY - 583101 PH.:08392-23766/685.
608. K P F PVT. LTD (G201-G2-03), 1ST CROSS, OPP. WOMAN'S COLLEGE, BESIDE CS MULTI SPECIALITY HOSPITAL, BELLARY. - 583103 PH.:08392-258900.
- BELTHANGADY**
609. BHARATH AUTO CARS PVT LTD (4503-HM-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH.:08266-234130.
- BHATKAL**
610. BHARATH AUTO CARS PVT LTD (CEF1-CEF-01), SURVEY NO. 157/2A, SUGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA - 581320 PH.:8382-9448979530.
- BIDAR**
611. LAHOTI MOTORS PVT. LTD. (EX01-EX-01), SI 50/51,PRATAP NAGAR, UDGI ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402 PH.:08482-232975.
- BIJAPUR**
612. RNS MOTORS (7301-T7-0I), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109 PH.:08352-242821.
- BYNDODR**
613. ABHARAN MOTORS PVT. LTD. (BUH1-BUH-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDODR, KUNDAPUR TALUK, UDUPI DISTT. - 576214 PH.:08254-7899751777.
- CHAMRAJ NAGAR**
614. MANDOVI MOTORS PVT. LTD. (0E01-0E-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313 PH.:08226-222857/858.
- CHANNAGIRI**
615. SHRUTI MOTORS (BUQ1-BUQ-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213 PH.:08189-7899934143.
- CHANNAPATNA**
616. KALYANI MOTORS PVT LTD (BSX1-BSX-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUK RAMANAGARA DISTRICT - 562160 PH.:080-2807999.
- CHANNARAYAPATNA**
617. VENKAT MOTORS (HC01-HC-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA - 573116 PH.:08172-256622, 09844377477.
- CHICKBALLAPUR**
618. BIMAL AUTO AGENCY INDIA PVT. LTD. (KJ02-KJ-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101 PH.:08156-300500/021.
- CHIKMANGALORE**
619. SHRUTI MOTORS (B701-3F-02), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102 PH.:08262-221183,221184.
- CHIKODI**
620. SHANTESHA MOTORS (E801-ZB-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKODI, KARNATAKA - 591201 PH.:08338-273120,272744.
- CHINTAMANI**
621. PRATHAM MOTORS PVT. LTD. (0205-BQ-06), SURVEY NO. 33, NEXT TO VIJAYA PU COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125 PH.:7899761301.
- CHITRADURGA**
622. SAKETH AUTOMOBILES (AL01-AL-01), NEAR VEDA COMPLEX, NH.4, M H ROAD, CHITRADURGA - 572130 PH.:08132-221414.
- DAVANGERE**
623. SHRUTI MOTORS (S101-S1-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004 PH.:08192-966337765.
- DEVANAHALLI**
624. BIMAL AUTO AGENCY (WH01-WH-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT. - 562110 PH.:080-27681778.
- DHARWAD**
625. REVANKAR MOTORS PVT. LTD. (BIX1-BIX-01), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001 PH.:0836-2444666.
- GADAG**
626. RNS MOTORS (7301-RK-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG - 582103 PH.:08372-230072,230076.
- GANGAWATHI**

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | |
|---|---|
| <p>627. MUNEER CARS (N701-KA-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, - 583227
PH.:08533-270055.</p> <p>GAURIBIDANUR</p> <p>628. MANDOVI MOTORS PVT LTD (BUY1-BUY-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210
PH.:9945235531.</p> <p>GOKAK</p> <p>629. SHANTESHA MOTORS PVT LTD (IR01-IR-01), RS NO.1063D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307
PH.:08332-226006.</p> <p>GONIKOPPAL</p> <p>630. MANDOVI MOTORS PVT LTD (2501-U3-07), KAIKERY VILLAGE,GONIKOPPAL, - 571213
PH.:08274-279801.</p> <p>GULBARGA</p> <p>631. LAHOTI MOTORS (E902-E9-01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104
PH.:08472-258142.</p> <p>HAGARIBOMMANAHALLI</p> <p>632. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT. LTD.) (BUX1-BUX-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.3, HAGARIBOMMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212
PH.:08394-266227.</p> <p>HASSAN</p> <p>633. VENKAT MOTORS (C802-C8-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201
PH.:08172-243405/404.</p> <p>HAVERI</p> <p>634. REVANKAR MOTORS PVT LTD (BBM1-BBM-01), NEAR TMAE SOCIETY CAMPUS, UARILAKAMAPUR, PB ROAD, HAVERI - 581110
PH.:08375-235900.</p> <p>HOSKOTE</p> <p>635. BIMAL AUTO AGENCY INDIA PVT. LTD., (0216-SM-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114
PH.:080-8111398104.</p> <p>HOSPET</p> <p>636. MUNEER CARS (N701-N7-01), BELLARY ROAD,SANKLAPUR,HOSPET, - 583203
PH.:08394-266226.</p> <p>HUBLI</p> <p>637. RNS MOTORS (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025
PH.:0836-2271825/2271239.</p> <p>638. RNS MOTORS (7301-73-05), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030
PH.:0836-223605/152.</p> <p>639. REVANKAR MOTORS PVT LTD (7303-73-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029
PH.:0836-6613332.</p> <p>KADABA</p> <p>640. MANDOVI MOTORS PVT LTD (BYE1-BYE-01), SURVEY NO.-1120, KALAR, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA - 574221
PH.:08251-260351.</p> <p>KADUR</p> <p>641. SHRUTI MOTORS (BQS1-BQS-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULLIKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT - CHIKMAGALUR. - 577546
PH.:7022007621.</p> <p>KANAKAPURA</p> <p>642. KALYANI MOTORS PVT. LTD. (BXY1-BXY-01), SURVEY NO. 447/1B, KASABA HOBIL, BUDIGUPPE GRAMA, TALUKA - KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA - 562117
PH.:0890050130.</p> <p>KARKALA</p> <p>643. ABHARAN MOTORS (G601-HY-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104
PH.:08258-230555/233085.</p> <p>KARWAR</p> <p>644. BHARATH AUTO CARS PVT LTD (8J01-8J-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. - 581301
PH.:08382-266530.</p> <p>KENGERI</p> <p>645. KALYANI MOTORS (P) LTD (0211-HP-03), RV COLLEGE,KENGERI,BANGALORE,,, - 560059
PH.:080-28607057.</p> <p>KOLAR</p> <p>646. MANDOVI MOTORS PVT LTD (0201-QU-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTI SAGAR, KOLAR. - 563101
PH.:8152-210077.</p> <p>KOPPAL</p> <p>647. KPF PVT LTD (ER01-ER-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238
PH.:0839-225500.</p> <p>KUMTA</p> <p>648. BHARATH AUTO CARS PVT LTD (AFA2-AFA-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334
PH.:0836-223330.</p> <p>KUNDAPUR</p> <p>649. ABHARAN MOTORS (G601-CY-02), NH-17, THAKATTE, KUNDAPURA - 272877
PH.:08254-272877.</p> <p>KUNIGAL</p> <p>650. SAKETH AUTOMOBILES (VQ01-VQ-01), NEAR KRS AGRAHARA,BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130
PH.:08132-221414.</p> <p>KUSHHAL NAGAR</p> <p>651. MANDOVI MOTORS (VN01-VN-01), SY NO:88,MADAPATANA,KUSHHAL NAGAR,SOMVARPUR,NORTH KODAGU, KARNATAKA - 571234
PH.:08276-272365,273365.</p> <p>LINGASUGUR</p> <p>652. MUNEEER CARS (A UNIT OF MUNEER ENTERPRISES PVT. LTD.) (BQ01-BQ0-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122
PH.:8532-251555.</p> <p>MADIKERI</p> <p>653. FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-OX-02), BASAPPA THEATURE BUILDING, DASAWAL ROAD, MADIKERI KODAGU DISTRICT. - 571201
PH.:08272-222900, 9741785533,9741785588.</p> <p>MANDYA</p> <p>654. MANDOVI MOTORS PVT LTD (2501-BD-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, - 571401
PH.:08232-230260.</p> <p>MANGALORE</p> <p>655. BHARATH AUTO CARS PVT LTD (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004
PH.:0824-2223030.</p> <p>656. MANDOVI MOTORS PVT LTD (4502-45-01), ARVIND BUILDING, BALMATTIA ROAD, HAMPANKATTIA, MANGALORE - 575001
PH.:0824-2410123, 2410128.</p> <p>NANJANGUD</p> | <p>657. MANDOVI MOTORS PVT LTD (4502-45-03), NO., HASSAN GROWTH CENTRE,ADYAR,N.H. -48,,MANGALORE - 575007
PH.:0824-2275123.</p> <p>658. MANDOVI MOTORS PVT LTD (4502-45-07), BALLAL INDUSTRIAL ESTATE, YAYADI, MANGALORE,KARNATAKA - 575008
PH.:0824-3194123.</p> <p>659. BHARATH AUTO CARS PVT LTD (4503-45-06), PLOT NO. 290/1, 291/1, KODIALBALI VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002
PH.:0824-222330.</p> <p>660. MANDOVI MOTORS PVT LTD (4502-45-08), DOOR NO. 2-634, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575002
PH.:0824-2985123.</p> <p>MUDDBIDRI</p> <p>661. BHARATH AUTO CARS PVT LTD (4503-HN-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227
PH.:0828-238630.</p> <p>MULKI</p> <p>662. BHARATH AUTO CARS PVT LTD (4503-OV-05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154
PH.:0824-2293030.</p> <p>MURUDESHWAR</p> <p>663. RNS MOTORS (7301-T8-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350
PH.:08385-260295/96/97.</p> <p>mysore</p> <p>664. FRIENDLY MOTORS (2502-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008
PH.:0821-4005200.</p> <p>665. MANDOVI MOTORS PVT LTD (2501-25-05), NO.182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011
PH.:0821-4244117/4000001.</p> <p>666. MANDOVI MOTORS PVT LTD (2501-25-08), 217/2, HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017
PH.:0821-4009900.</p> <p>667. MANDOVI MOTORS PVT LTD (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005
PH.:0821-4240000.</p> |
|---|---|

DEALER WORKSHOP (AS ON 01.04.2017)

-
668. FRIENDLY MOTORS (BYK1-BYK-01),
4340/4159/4, HULLAHALLI ROAD, NANJANGUD,
DISTRICT - MYSORE, KARNATAKA - 571301
PH :8221-297444, 7259255558.
- NELAMANGALA**
669. RNS MOTORS LIMITED (BBH1-BBH-01),
NO.16/2, TUMKUR ROAD, KASABA HOBLI, NH4,
NELAMANGALA, BANGALORE RURAL DT.,
BENGALURU, KARNATAKA - 562123
PH :080-27700245.
- PUTTUR**
670. BHARATH AUTO CARS PVT LTD (4503-CZ-02),
NEAR RAIWAY STATION, HARADY, PUTTUR -
517583
PH :08251-230230.
- RAICHUR**
671. MUNEER CARS (N701-3K-02),
#12-10-64, GOUSHAL ROAD, SIYA TALAB
AREA, RAICHUR - 584101
PH :0832-9449870774.
- RAMANAGARAM**
672. KALYANI MOTORS (P) LTD (0211-JB-02),
#K1318/2034C, OPP TO ROTARY HOSPITAL, BM
ROAD, RAMANAGARAM - 571511
PH :080-27275991/2/3/4.
- SAGR**
673. SHRUTI MOTORS (WF01-WF-01), BESIDE H
GANAPATHYAPPA PETROL BUNK (BP), B H
ROAD, NH-206, SAGAR, SHIMOGA DISTT. -
577401
PH :08183-222123.
- SHIMOGA**
674. SHRUTI MOTORS (B701-B7-01), K.NO 599,
SHANKARMUTT ROAD, SHIMOGA - 577201
PH :08182-277976.
675. SHRUTI MOTORS (B701-B7-03), BLOCK L-1,
INDUSTRIAL ESTATE, BEHIND HP PETROL
BUNK, SAGAR ROAD, SHIMOGA. - 577204
PH :08182-250177, 277976.
676. SHRUTI MOTORS (B701-B7-05), SURVEY NO.
41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR,
SHIMOGA.
PH :08182-9845399367.
- SIDDAPUR**
677. BHARATH AUTO CARS PVT. LTD.
(BPY1-BPY-01), SURVEY NO. 211, NEAR IOC
PETROL BUNK, JOG ROAD, VILLAGE - HOSUR,
TALUK - SIDDAPUR, DISTRICT - UTTARA
KANNADA. - 581355
PH :581355, 9448979530.
- SINDHANUR**
678. KPF MOTORS PVT LTD (FX01-FX-01), SURVEY
NO. 755/1, DOOR NO. 6-1-216/3 WARD NO. 19,
GANGAVATHI ROAD, SINDHANUR, RAICHUR,
KARNATAKA - 584128
PH :08535-221299.
- SIRSI**
679. RNS MOTORS (7301-MQ-0D), K H B COLONY,
SIRSI - 581402
PH :08384-234854.
- SULLIYA**
680. MANDOVI MOTORS PVT LTD (4502-EW-04),
ODABAI SULLIA, MANGALORE MYSORE
ROAD, KARNATAKA - 574239
PH :08257-232325/232317.
- SURATHKAL**
681. MANDOVI MOTORS PVT LTD (4502-7G-02),
KANA ROAD, SURATHKAL - 574158
PH :0824-4256987/4258899.
- THOKOTU**
682. BHARATH AUTO CARS PVT LTD (QW01-QW-01),
NH-66, KAPIKAD, ULLAL, THOKOTTU, DAKSHINA
KANNADA DISTT. - 575017
PH :0824-2464630.
- TIPTUR**
683. SAKETH AUTOMOBILES (H101-HV-03),
BANDIHALLI INDUSTRIAL ESTATE, N.H.:206,
TIPTUR, KARNATAKA - 572201
PH :08134-253663.
- TUMKUR**
684. SAKETH AUTOMOBILES (H101-H1-01), SIRA
ROAD, TUMKUR - 572106
PH :0818-2256433/66.
- UDUPI**
685. ABHARAN MOTORS (G601-G6-01), N.H. 17,
NITTUR, UDUPI - 576103
PH :0820-6454111/222/333/777.
686. ABHARAN MOTORS PVT. LTD. (G601-G6-05), NO.
305/1C, DOOR NO. 5-51A, RAILWAY STATION
ROAD, INDRALI, UDUPI, DISTT. - UDUPI. -
576101
PH :9845242777.
- UJIRE**
687. BHARATH AUTO CARS PVT LTD
(BWT1-BWT-01), SURVEY NO.237-2B1,
MANGALORE-CHARMADY ROAD, NEAR INDIAN
OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE,
BELTHANGADY TALUKA, DISTT. DAKSHINA
KANNADA, KARNATAKA. - 574240
PH :8256-234230, 9986503030.
- UPPINANGADI**
688. MANDOVI MOTORS PVT LTD (4502-NL-05),
NR.PADMA VIDYA IOC PETROL STATION-34,
NEKKILADY, UPPINANGADY - 574241
PH :08251-252123/128/129.
- VITTLA**
689. MANDOVI MOTORS PVT. LTD. (CCE1-CCE-01),
DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTLA
TOWN, TALUKA - BANTWAL, DISTRICT -
DAKSHIN KANNADA - 574243
PH :8255239123.
- KERALA**
- ADODR**
690. INDUS MOTOR CO. PVT. LTD. (2702-CJ-0A), M.
C. ROAD, MITTRAPURAM, ADODR,
PATHANMTHITTA - 689518
PH :04734-974598303.
691. AVG MOTORS LTD. (Y501-CJ-02), KOTTAMUKAL,
K.P. ROAD, ADODR PO, PATHANMTHITTA,
KERALA - 691523
PH :04734-9446355900.
- ALAPPUZA**
692. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (E501-E5-01), CCSB ROAD, CHUNGAM,
ALLEPPY. - 688011
PH :477-9847580000.
693. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (E501-E5-03), PATHIRAPALLY, NH-47,
ALAPPUZA - 688521
PH :0477-974022412.
- ALATHUR**
694. BRD CAR WORLD LTD (BRW1-BRW-01),
SURVEY NO. 455/B, 455/B, 455/9,
ERATTUKKULAM, KATTUSERY VILLAGE,
ALATHUR TALUKA, PALAKKAD DISTRICT,
KERALA - 676882
PH :9745634999.
- ALAVA**
695. BRD CAR WORLD LTD. (A404-CBQ-09), RE
SURVEY NO.330/7, NH-47, KUNNUMPURAM,
PO-DESHAM PANCHAYATH, CHENGAMANAD,
ALUVA. - 683102
PH :0484-8589094913.
- ANGAMALY**
696. INDUS MOTOR CO. PVT. LTD. (2702-JW-0F),
ANGAMALY KALADY ROAD, MC ROAD,
ANGAMALY - 683572
PH :9745998434.
697. POPULAR VEHICLES & SERVICES LTD.
(2701-JW-0D), 182-AIRPORT JUNCTION
NAGAR, M. C. ROAD, ANGAMALY - 683572
PH :8086898002.
- ATTINGAL**
698. POPULAR VEHICLES & SERVICES LTD.
(1601-SX-07), PALAMKONAM,
PERUNKULAM, VIA-ALAMCODE, ATTINGAL -
695102
PH :8086078788.
- BALARAMPURAM**
699. POPULAR VEHICLES & SERVICES LTD.
(1601-AQA-11), POOVAR ROAD, VAZHIMUKKU,
BALARAMPURAM P.O., TRIVANDRUM
DISTRICT - 695501
PH :0471-8943345922.
- CALICUT**
700. INDUS MOTOR CO. PVT. LTD. (4701-47-01),
MARUTI WORKSHOP, PANIKKER ROAD,
CALICUT, NADAKKAVE - 673011
PH :0495-9745998019.
701. INDUS MOTOR CO. PVT. LTD. (4701-47-06),
KOYA ROAD JUNCTION, PUTHIVANCADI, POST
WEST HILL, CALICUT - 673005
PH :0495-9745998020.
702. INDUS MOTOR CO. PVT. LTD. (4701-47-08),
NEAR STEEL COMPLEX, NALLALAM, CALICUT -
673655
PH :0495-9745998018.
703. POPULAR VEHICLES & SERVICES LTD.
(4702-47-02), BEHIND MIMS,
EASWARAMANGALAM ROAD, GOVINDAPURAM
P.O., CALICUT - 673016
PH :0495-8086078650.
704. POPULAR VEHICLES & SERVICES LTD.
(4702-47-07), NH-17 BYE PASS, PACHAKKIL,
MALAPARAMBU P.O., KOZHIKODE, CALICUT -
673009
PH :8086078851.
- CHALAKUDI**
705. BRD CAR WORLD (ZJ02-ZJ-01), MURINGOR
P.O., CHALAKUDY - 680316
PH :0480-9567869239.
- CHALLAKUDY**
706. POPULAR VEHICLES & SERVICES LTD.
(2701-BU-0C), OPPSITE CCMK HOSPITAL,
VELLIKULAM ROAD, CHALAKUDY, KERALA -
680307
PH :9946104653.
- CHANGARAMKULAM**
707. A M MOTORS (VH01-VH-01), MELE
MANTHADAM, ALANKODE, P.O.,
CHANGARAMKULAM, MALAPPURAM DISTT.,
KERALA - 679585
PH :9895756008.
- CHAVAKAD**

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | | |
|---|--|--|
| <p>708. BRD CAR WORLD LTD. (A404-0J-06),
ORUMANAYOOR P.O.CHAVAKKAD,
DISTRICT-THRISUR - 680512
PH:9645963999.</p> <p>CHENGANNUR</p> <p>709. SARATHY AUTO CARS (C701-UL-06),
PRAVUMKOOD, THIRUVANVANDOOR P.O.
CHENGANNUR TALUK, ALAPPUZHA (DIST) -
689124
PH:9947270665.</p> <p>CHEPPALASSERY</p> <p>710. KVR AUTO CARS PVT LTD (NB01-NB-01),
SURVEY NO. 15/44, RS NO. 15/44, VILLAGE –
CHERUPALASSERY, TALUK – OTTAPPALAM,
DISTRICT – PALAKKAD - 679503
PH:04662-9747020582, 280100.</p> <p>CHERTHALA</p> <p>711. INDUS MOTOR CO. PVT. LTD. (VL03-VL-01),
OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O.,
KANJIKKUZHIL,CHERTHALA, ALAPPUZHA-DIST. -
688552
PH:9745997633.</p> <p>CHINNAVANAM</p> <p>712. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (1601-16-01), SURVEY NO.290/9, 290/9/
MAVILANGU KARA, CHINGAVANAM P.O. DISTT.
KOTTAYAM (KERALA) - 686531
PH:9847315969.</p> <p>CHULLIMANOR</p> <p>713. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (BA1-B1-01), RE-SURVEY NO. 43/7,
VILLAGE – ANAND, TALUKA – NEDUMANGAD,
DISTRICT – TRIVANDRUM, KERALA. - 695541</p> <p>COCHIN</p> <p>714. INDUS MOTOR CO. PVT. LTD. (2702-27-02),
BEHIND COMMERCIAL SALES TAX, M.G. ROAD,
COCHIN. - 682015
PH:484-9745980400.</p> <p>715. INDUS MOTOR CO. PVT. LTD. (2702-27-09),
PALARIVATTOM KAKANAD ROAD, KAKANAD,
COCHIN. - 682039
PH:0484-9745998013.</p> <p>716. POPULAR VEHICLES & SERVICES LTD.
(2701-27-01), PERANDOOR ROAD, PUNNAKAL,
ELAMAKKARA, COCHIN - 682025
PH:0484-9846017725.</p> <p>717. POPULAR VEHICLES & SERVICES LTD.
(2701-27-04), NEAR LISI HOSPITAL, OPP. IMA
BLOOD BANK, COCHIN. - 682018
PH:9846498616.</p> <p>718. SAI SERVICE PVT. LTD. (2705-27-01), 50/1 15L,
CHERANALLOOR ROAD,EDAPPALLY,COCHIN -
682024
PH:484-9645106195.</p> | <p>719. SAI SERVICE PVT. LTD. (2705-27-02),
NH-47,,PATHADIPALAM,EDAPPALLY,COCHIN -
682024
PH:9645105057.</p> <p>720. INDUS MOTOR CO. PVT. LTD. (2702-27-0H),
LAKSHMI DIARY CAMPUS, OPP-HOTEL SILVER
SAND ISLAND, VYTILA, COCHIN - 682019
PH:9745992070.</p> <p>721. SAI SERVICE PVT. LTD. (2705-27-08),
KETTEZHUTHUM KADAVU, INTUC JUNCTION,
NETTOOR, ERNAKULAM, COCHIN (KERALA) -
682040
PH:9645106339.</p> <p>722. GEORGE MAJO AUTOMOBILES PVT. LTD.
(2709-27-01), DOOR NO.5/452, 5/452A, 5/453,
OLD ELOOR ROAD, ELOOR JUNCTION, NORTH
KALAMASSERY, DISTRICT - ERNAKULAM,
COCHIN. - 683104
PH:0484-7559997864, 4237700.</p> <p>EDAPPAL</p> <p>723. POPULAR VEHICLES & SERVICES LTD.
(4702-AM-05), KOZHIKODA ROAD, KAVILPADY,
EDAPPAL, MALAPPURAM - 679582
PH:9946104680.</p> <p>ERNAKULAM</p> <p>724. AUTOTEAM SALES & SERVICES PVT.LTD
(2781-27-01), PIPELINE ROAD, PADIVATTOM,
COCHIN, ERNAKULAM, COCHIN
PH:9847521112.</p> <p>FORT KOCHI</p> <p>725. SAI SERVICE PVT. LTD. (BRS1-BRS-01), PLOT
NO.83/1 1/2 OPPOSITE TO KUMAR PETROL
PUMP, STATUE ROAD, CHULLIKAL POST,
FORT KOCHI - 682005
PH:9845106138.</p> <p>IRINJALAKUDA</p> <p>726. BRD CAR WORLD LTD. (A404-KQ-05),
KARUPADANNA P.O., IRINJALAKUDA,
THRISSUR - 680670
PH:9539006999.</p> <p>IRITTY</p> <p>727. INDUS MOTORS CO. PVT. LTD. (R002-VJ-02),
SURVEY NO. 48, BUILDING NO. 214,
PERUPARAMBA, IRITTY, KANNUR, KERALA -
670703
PH:9747554929.</p> <p>KAIAMPANGALAM</p> <p>728. SAI SERVICE PVT. LTD. (2705-RP-07),
VAZHINYAMBALAM PO,
KAIAMPANGALAM,THRISSURE - 680681
PH:9645105053.</p> <p>KALAMASSERY</p> | <p>729. INDUS MOTOR CO. PVT. LTD. (2702-Q3-07),
KALAMASSERY, ALUVA WEST, ERNAKULAM
DIST, KERALA - 683106
PH:0484-9745998012.</p> <p>KALLAMBALAM</p> <p>730. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (1603-Q2-04), DOOR # MP/2500,
KAVALAYOOR PANCHAYAT, KALLAMBALAM,
CHIRAYINKEEZHU TALUK, TRIVANDRUM -
695605
PH: .0806079100.</p> <p>KALPETTA</p> <p>731. INDUS MOTOR CO. PVT. LTD. (4701-JE-0C),
MEENANGADI, KAKKAVAYAL P.O., NORTH
KALPETTA,WAYAND - 673591
PH:9745998592.</p> <p>KANHAGAD</p> <p>732. KVR CARS (3L01-K2-02), ARANGADI, P.O.
KANHAGAD, DIST. KASARGOD, - 671315
PH:9605040999.</p> <p>733. POPULAR VEHICLES & SERVICES LTD.
(4702-K2-06), HIGHWAY JUNCTION,KANHAGAD
SOUTH P.O.,KANHAGAD - 689641
PH:468-9846400300.</p> <p>734. INDUS MOTOR CO. PVT. LTD. (4701-K2-0F),
SURVEY NO.491/3A1 AND 491/3A2, AJANUR
VILLAGE, KANHAGAD, HOSADURGA TALUK,
KASARGOD DISTT, KERALA. - 671541
PH:9745998024.</p> <p>KANJIRAPALLY</p> <p>735. INDUS MOTOR CO. PVT. LTD. (7E01-9Y-02),
VADAKUMBHAGAM KARAYIL, KUNAMBHAGAM
P.O., KANJIRAPALLY - 686506
PH:9745998009.</p> <p>KANNUR</p> <p>736. HAR CARS (K101-K1-01), HAR AVENUE,
KANNOTHUMCHAL CHOVVA POST, KANNUR -
670006
PH:0497-9539009392.</p> <p>737. HAR CARS (K101-K1-03), POTTIAN SHEKHARAN
ROAD, MAKKANY , SOUTH BAZAR, KANNUR -
670002
PH:9539009405.</p> <p>738. INDUS MOTORS CO (P) LTD (4701-K1-0E),
BALANKINAR JN., KATTAMPALLY,P.O, KANNUR
- 690011
PH:0497 - 9745998023.</p> <p>739. KVR CARS (3L01-K1-04), CP-3-651-B, OPP.
DHANRAJ TALKIES, PUTHIYATHERU,
CHIRAKKAL POST, KANNUR, KERALA - 670011
PH:0497-755802889.</p> <p>KILLIPALAM</p> <p>740. POPULAR VEHICLES & SERVICES LTD.
(1601-16-05), OPP. ST. JUDE CHURCH,CIT
ROAD, KILLIPALAM,TRIVANDRUM - 695002
PH: .8589992434.</p> |
|---|--|--|

DEALER WORKSHOP (AS ON 01.04.2017)

KODANGALLUR

751. SAI SERVICE PVT. LTD. (2705-8K-03), NH-17,T.K.S.PURAM,,KODUNGALLOOR - 680667 PH :0480-8606980006.

KODUVALLY

752. A M MOTORS (BGX1-BGX-01), SURVEY NO 91/9, 91/10,NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572 PH :9895979023.

KOLLAM

753. INDUS MOTOR CO. PVT. LTD. (1602-Q4-03), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005 PH :0474-9745998004.
754. POPULAR VEHICLES & SERVICES LTD. (1601-Q4-04), H & C COMPOUND, MUNDACKAL, KOLLAM - 680006 PH :0474-98464 98656.

KOLLAM (QUILON)

755. SARATHY AUTO CARS (C701-C7-01), NH-47 BYE PASS,AYATHILIP.O.,QUILON - 691017 PH :0474-9847072065.
756. SARATHY AUTO CARS (C701-C7-08), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, UMANALLUR SIDCO INDUSTRIAL ESTATE, KOLLAM - 691589 PH :0474-9847072065, 2537280.

KONDOTTY

757. INDUS MOTORS CO. PVT. LTD. (ID02-ID-01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPPURAM DISTRICT, KERALA - 683572 PH :9745997875.

KOOTHATTUKULAM

758. SAI SERVICE PVT. LTD. (VM01-VM-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOOTHATHUKULAM P.O., ERNAKULAM DT - 686662 PH :0485-9645106258.

KOTHAMANGALAM

759. INDUS MOTOR CO. PVT. LTD. (7E01-9V-03), PALAKKADAN BUILDING,CHANKLAM,KOTHAMANGALAM - 686691 PH :9745998479.
760. POPULAR VEHICLES & SERVICES LTD. (2701-9V-08), NEAR BSNL OFFICE, THANGALAM, KOTHAMANGALAM, KERALA - 686691 PH :9946104661.

KOTTAKKAL

761. INDUS MOTOR CO. PVT. LTD. (4701-8M-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST. - 676503 PH :0493-9745998017.

762. POPULAR VEHICLES & SERVICES LTD. (4702-8M-03), NH-17,,CHANDAPARAMBU,,RANBATHANI P.O. MALAPPURAM, KOTTAKAL - 676510 PH :0483-9946104631.

KOTTARAKARA

763. CHITHIRA AUTOMOBILES (C781-S8-01), RAILWAY STATION JUNCTION ,KOTTARAKARA PH :0474-9447711001.

KOTTARAKKARA

764. POPULAR VEHICLES & SERVICES LTD. (S801-S8-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA - 691531 PH :08067034366.
765. SARATHY AUTO CARS (S802-S8-01), WARD NO.40, MELILIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARAKARA DISTT. KOLLAM (KERELA) - 691531 PH :9947073065.

KOTTAYAM

766. AVG MOTORS LTD. (B801-B8-01), ERAYILKADAVU, KOTTAYAM - 686001 PH :0481-9446323999.

767. INDUS MOTOR CO. PVT. LTD. (2702-BB-04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM , KERALA - 686013 PH :0481-9745998007.

768. INDUS MOTOR CO. PVT. LTD. (2702-RA-0C), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM - 686013 PH :9745998007.

769. POPULAR VEHICLES & SERVICES LTD. (B802-BB-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O, KOTTAYAM - 686006 PH :0481-9539007400.

KOZHENCHERRY

770. AVG MOTORS LTD. (W801-AS-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT- PATHANAMTHITTA, - 689641 PH :9446492988.

KUNNAMKULAM

771. POPULAR VEHICLES & SERVICES LTD. (2701-8N-07), CHOONDALTRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH :0488-9846397066.

LAKKIDI PERUR

772. A M MOTORS LTD. (CER1-CER-01), 2177, 2172, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302 PH :0806305555.

MALAPURAM

773. A.M. MOTORS (E601-E6-01), VARANGODE, DOWNHILL, MALAPURAM, - 676519 PH :493-9895705325.

MALLAPPALLY

774. INDUS MOTORS (I201-I2-01), THOPPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERELA) - 689585 PH :9747541400.

MANJERI

775. A.M. MOTORS (E601-8V-05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA - 676121 PH :9695756035.

776. K V R AUTO CARS PVT. LTD. (8V02-8V-01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123 PH :9947020741.

777. POPULAR VEHICLES & SERVICES LTD. (4702-8V-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERELA) - 676121 PH :0483-8589992405.

MANNARKAD

778. A.M. MOTORS (E601-RA-07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582 PH :9895979048.

779. INDUS MOTORS (2702-RA-0K), ANAKATTY ROAD, ANDIPPADAM, NELLIPPUZA-HO. MANNARKAD KERALA - 678583 PH :9745995946.

Mavelikara

780. POPULAR VEHICLES & SERVICES LTD. (B802-S9-02), KONNAYIL SUVAKO INDUSTRIAL COMPLEX,SHED A-1, KOLLAKADAVU INDUSTRIAL ESTATE, KOCHAL MOODU, KALLIMEL P.O., Mavelikara, KERALA - 690570 PH :9846298622.

781. INDUS MOTORS (1602-S9-07), NEAR PRATHIBA THEATRE, PUTTHIYAKAVU, Mavelikara - 690101 PH :9745998137.

782. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (S901-S9-01), SURVEY NO. 227/3, SHANTHIVANAM JUNCTION, CHERKOKE P.O., Mavelikara, KERALA - 690104 PH :9747022424.

MUVATTUPUZHA

783. INDUS MOTOR CO. PVT. LTD. (7E01-7E-01), NH-49, MU VATUPUZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MU VATUPUZHA, ERNAKULAM DIST - 686661 PH :0485-9745998011.

784. POPULAR VEHICLES & SERVICES LTD. (2708-7E-02), MUTHUKALLU JUNCTION,PERUMPALLUR P.O., MU VATUPUZHA, KERALA - 686673 PH :9846374786.

785. INDUS MOTOR CO. PVT. LTD. (7E01-7E-08), BUILDING NO. 11/14(A), KADATHY MARKET, NH-49, MU VATUPUZHA, DISTRICT - ERNAKULAM - 686673

NEYYANTINKARA

786. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-AT-02), NH 47, KOTTAMAN , KOLLA YIL PANCHAYAT, NEYYANTINKARA, TRIVANDRUM, - 695503 PH :9995867628.

NEYYATINKARA

787. INDUS MOTORS (AT01-AT-01), INDUS MOTOR CO. PVT. LTD., OLD M.V. THEATRE, NEAR KSRTC BUS STATION, NEYYATINKARA, DIST. TRIVANDRUM - 695121 PH :0471-9747544500.

NILAMBUR

788. INDUS MOTOR CO. PVT. LTD. (4701-AF-0A), MINERVA JUNCTION, NILAMBUR , KERALA - 679329 PH :04931-9745998396.

789. INDUS MOTOR CO. PVT. LTD. (4701-AF-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329 PH :9745998414.

NILAMEL

790. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-DA-03), M. C. ROAD, KANNANCUDU, NILAMEL, KOLLAM (DIST.) - 691535 PH :0808079107.

OTTAPALAM

791. INDUS MOTOR CO. PVT. LTD. (PA01-PA-01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALAM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA - 679101 PH :0466-9745998014.

PALA

792. POPULAR VEHICLES & SERVICES LTD. (B802-GN-04), 12TH MILE,PALA-PONKUNNAM ROAD, PALA - 686575 PH :0482-8086073454.

DEALER WORKSHOP (AS ON 01.04.2017)

793. INDUS MOTOR CO. PVT. LTD. (7E01-GN-05), OPP. ALPHONSA COLLEGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574 PH:9745998878.
794. AVG MOTORS LTD. (GN03-GN-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651 PH:4822-9447137246.
795. INDUS MOTORS CO. PVT. LTD. (7E01-GN-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT - 686584 PH:974516934.
- PALAKKAD**
796. INDUS MOTOR CO. PVT. LTD. (2702-Y2-0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD. - 678701 PH:9745998590.
797. POPULAR VEHICLES & SERVICES LTD. (2701-Y2-09), OPP. PALANA HOSPITAL,KODUVAYOOR ROAD,KINASSERY P.O.,PALAKKAD - 678707 PH:0491-9846300650.
798. INDUS MOTOR CO. PVT. LTD. (Y202-Y2-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007 PH:9747519500.
- PARAVUR**
799. BRD CAR WORLD LTD. (A404-ZS-08), MAVINCHUVADU, MANNAM P.O., NORTH PARAVUR, PARAVUR (KERALA) - 683520 PH:9567886929.
- PATHANAMTHITTA**
800. AVG MOTORS LTD. (W801-WB-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA. - 689671 PH:0468-9744071183.
801. AVG MOTORS LTD. (W801-WB-04), SURVEY NO. 53/7A/3, WARD NO. 13, KUMBAZHA, PATHANAMTHITTA.
- PATHNAMTHITTA**
802. AGT MOTORS (W881-WB-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA PH:0469-9289117477.
803. INDUS MOTOR CO. PVT. LTD. (1602-16-04), KUMBAZHA, PATHANAMTHITTA - 689653 PH:0468-9745998008.
804. POPULAR VEHICLES & SERVICES LTD. (B802-WB-05), T.R. ROAD, NEAR COLLECTORATE,PATHANAMTHITTA - 689645 PH:9946105687.
- PATTAMBI**
805. A.M. MOTORS (E601-BP-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306 PH:0466-9567866059.
806. INDUS MOTOR CO. PVT. LTD. (2702-BP-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303 PH:9745998295.
807. A.M. MOTORS (E601-BP-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. - 679306 PH:0466-9567866059.
- PAYANMUR**
808. POPULAR VEHICLES & SERVICES LTD. (4702-9Z-04), N H 17, EZHILODE P O, „PAYANUR - 670309 PH:0497-9846036510.
- PERINTHALMANNA**
809. A.M. MOTORS (E601-BH-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322 PH:04933-8129818235.
810. KVR AUTOCARS PVT. LTD. (7H01-7H-01), SURVEY NO. 878/15, CALICUT ROAD, NEAR ITC, THIRUKRAD, PERINTHALMANNA - 679351 PH:04933-9747020573.
811. KVR AUTOCARS PVT. LTD. (7H01-7H-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT), KERALA - 679322 PH:04933-9747020837.
- PERUMBAAVOR**
812. SAI SERVICE PVT. LTD. (2705-8W-04), M.C.ROAD,PERUMBAAVOR,ERNAKULAM DIST,KERALA - 683542 PH:9645106543.
- POINACHI**
813. KVR CARS (3L01-GF-03), CHOWKI, MAILLATY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH:9526021822.
- PUNALUR**
814. SARATHY AUTO CARS (C701-8Q-03), NH-208, Q.S. ROAD,ELAMPAL POST,PUNALUR, KOLLAM DIST - 691322 PH:0475-9847073065.
- QUILANDY**
815. INDUS MOTOR CO. PVT. LTD. (3001-30-01), BUILDING NO.13/3 A, CHENGOTTUKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306 PH:9745997875.
- RAMANATTUKARA**
816. A.M. MOTORS (E601-KB-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA. - 673632 PH:9567866144.
- RANNI**
817. INDUS MOTOR CO. PVT. LTD. (7E01-JX-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH:9745998297.
- SASTHAMKOTTAH**
818. INDUS MOTORS CO. PVT. LTD. (1602-RT-09), NO. SP IX/61, 662, 663, KADAPUZHHA ROAD, PORUVAZHY P.O., BHARANIKVU, SASTHAMKOTTAH, KOLLAM -, KERALA - 690520 PH:9745998849.
- SHORNUR**
819. POPULAR VEHICLES & SERVICES LTD. (2701-11-0B), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH:8589992425.
- TALIPARAMBA**
820. HAR CARS (K101-9W-02), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141 PH:0460-9539009480.
- TELLICHERRY**
821. INDUS MOTOR CO. PVT. LTD. (4701-Y3-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY , KERALA - 670102 PH:974520100.
- THALASSERY**
822. INDUS MOTOR CO. PVT. LTD. (R002-RO-01), NETTR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH:0469-9806071155.
- THIRUVALLA**
823. AVG MOTORS LTD. (Y501-Y-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107 PH:0469-8606071155.
824. POPULAR VEHICLES & SERVICE (B802-Y-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH:8086073489.
- THIRUVANANTHAPURAM**
825. SOUTH PARK MOTORS PVT. LTD. (1604-16-01), SURVEY NO. 985/3-4-5-6, VILLAGE - KADAKAMPALLY, CHACKAI BYPASS, TALUKA - TRIVANDRUM, TRIVANDRUM, KERALA. - 695029 PH:9526100008.
- THIRUTHALLUR**
826. SOUTH PARK MOTORS PVT. LTD. (1605-16-01), RE SURVEY NO. 9/3, TO 9/5, 9/8, TO 9/10, 9/15, 9/18, 9/19, 6/12, 9/23, KAZHKOOTAM, VAZHAYILA, VILLAGE – PERIORKADA, TRIVANDRUM. - 695005 PH:471-3050000, 9544040005.
827. SARATHY AUTO CARS LTD. (C701-16-09), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT- THIRUVANANTHUPURAM, KERALA.
- THODUPUZHA**
828. INDUS MOTOR CO. PVT. LTD. (7E01-HZ-04), PALA ROAD, THODUPUZHA - 685584 PH:9745998631.
- THRISSUR**
829. BRD CAR WORLD LTD. (A404-A4-01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031 PH:0487-9995807141.
830. INDUS MOTOR CO. PVT. LTD. (2702-A4-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH:0487-9745998015.
831. INDUS MOTOR CO. PVT. LTD. (2702-A4-0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH:0487-9745998014.
832. POPULAR VEHICLES & SERVICES LTD. (2701-A4-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH:0487-8589992404.
833. SAI SERVICE PVT. LTD. (2705-A4-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH:9645106089.
834. BRD CAR WORLD LTD. (A404-A4-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH:0487-9746476529.
- TIRUR**
835. A.M. MOTORS (E601-Y4-02), SATELLITE AUTO WORKS, PAYANAGADI POST, TIRUR - 676101 PH:0494-9895940000.
837. KVR AUTOCARS PVT. LTD. (7H01-Y4-05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307 PH:9747020673.

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | |
|---|---|
| <p>838. A.M. MOTORS (E601-Y4-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103 PH:0494-9895705323.</p> <p>TRIPRAYAR</p> <p>839. POPULAR VEHICLES & SERVICES LTD. (2701-8R-08), NEAR CENTURY PLAZA, NATTIKA P.O, TRIPRAYAR, TRISSUR DIST - 680566 PH:0487-9846699245.</p> <p>TRIPUNTHARA</p> <p>840. SAI SERVICE PVT. LTD. (2705-AK-05), HILL PALACE ROAD,KARINGACHIRA,COCHIN - 682301 PH:9645105067.</p> <p>TRIVANDRUM</p> <p>841. HERCULES AUTOMOBILES INTERNATIONAL (P) LTD (1603-16-01), VAZHAYILA P.O., TRIVANDRUM - 695564 PH:9995867654.</p> <p>842. INDUS MOTOR CO. PVT. LTD. (1602-16-02), NH BYE PASS ROAD, VEMPALAVATTOM, TRIVANDRUM - 695029 PH:0471-9745998003.</p> <p>843. INDUS MOTOR CO. PVT. LTD. (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM - 695014 PH:0471-9745998001.</p> <p>844. POPULAR VEHICLES & SERVICES LTD. (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002 PH:0471-9846498633.</p> <p>845. SARATH AUTO CARS (C701-16-04), KOVALAM BYEPASS,SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009 PH:0491-9847401465.</p> <p>846. INDUS MOTOR CO. PVT. LTD. (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMODEE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA,TRIVANDRUM - 695028 PH:9747540100.</p> <p>847. INDUS MOTORS CO. PVT. LTD. (1602-16-11), SURVEY NO.3, TC-7/1069(0), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM - 695030 PH:9746743357.</p> <p>848. INDUS MOTOR CO. PVT. LTD. (1602-16-05), G.G. MEDICAL COLLEGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, , - 695011 PH:9745998002.</p> <p>UPPALA</p> <p>849. POPULAR VEHICLES & SERVICES LTD. (4702-4I-04), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH:8589051616.</p> <p>850. KVR CARS (4102-4I-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH:4994-9747021211.</p> <p>URAKAM</p> <p>851. INDUS MOTORS (AAH1-AAH-01), IRINJALAKKUDA ROAD, POOCHEENNIPADAM, URAKAM PO, TRICHUR DISTT., KERALA - 680566 PH:9745998044.</p> <p>VADAKARA</p> <p>852. INDUS MOTOR CO. PVT. LTD. (4701-8S-07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104 PH:0496-9745998021.</p> <p>853. POPULAR VEHICLES & SERVICES (8502-8S-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH:0496-8943345935.</p> <p>VAIKOM</p> <p>854. INDUS MOTOR CO. PVT. LTD. (2702-WN-0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH:9746743003.</p> <p>VETTICHIRA</p> <p>855. KVR AUTOCARS PVT. LTD. (7H01-MZ-03), AP IV, 75A TO G, NH-17, CHUKKAM, DIST. MALAPPURAM, VETTICHIRA, - 676552 PH:9747020023.</p> <p>WADAKKANCHERRY</p> <p>856. BRD CAR WORLD LTD. (A404-MX-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH:9567869403.</p> <p>MADHYA PRADESH</p> <p>ASHOK NAGAR</p> <p>857. PREM MOTORS PVT. LTD. (DS01-DS-02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH:9926809110.</p> <p>ASHTA</p> <p>858. JEEWAN MOTORS PVT. LTD. (BSF1-BSF-01), KHASRA NO.111/1 NEAR RELIANCE PETROL PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001 PH:0756-9826429604.</p> <p>BADNAWAR</p> <p>859. PATEL MOTORS PVT. LTD. (BPT1-BPT-01), KHASRA NO. 219/41, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAGAR, DISTT. - DHAR, MADHYA PRADESH. - 454660 PH:07295-232228, 9977703512.</p> <p>BADWAH</p> <p>860. NIMAR MOTORS (AU01-UJ-05), NIRMAL COMPLEX, INDORE ROAD , BARWAH - 451001 PH:07280-224567, 7770878726.</p> <p>BALAGHAT</p> <p>861. KUNAL MOTORS (U501-TP-04), KH NO.-1/56, JHULELAL DHARMSHALA ROAD, BALAGHAT, MADHYA PRADESH - 4811001 PH:07632-240088.</p> <p>BARELI</p> <p>862. MY CAR (BHOPAL) PVT LTD. (I302-I3-01), KHASRA NO.423/2, NH-12, J.J. ROAD, NEAR SHRIVASTAV MARRIAGE GARDEN, BARELI DISTRICT RAISEN (M.P.) - 464668 PH:07486-230103.</p> <p>BARNAGAR</p> <p>863. RUKMANI MOTORS (P) LTD (BBK1-BBK-01), RUNJIA ROAD,BARNAGAR CITY, DISTRICT UJJAIN - 456771 PH:9755512100.</p> <p>BARWANI</p> <p>864. NIMAR MOTORS (AU01-SA-02), NEAR ICE FACTORY,RAUGHAT ROAD, BARWANI - 451551 PH:07290-224366.</p> <p>BETMA</p> <p>865. OCEAN MOTORS (BVR1-BVR-01), OPPOSITE MPED OFFICE, INDORE-AHMEDABAD ROAD, BETMA, DISTRICT – INDORE, MADHYA PRADESH . - 453001 PH:7389936444.</p> <p>BETUL</p> <p>866. KUNAL MOTORS (U501-U-02), BHOPAL - NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK, BETUL - 460001 PH:07141-239991 / 239992.</p> <p>BHOPAL</p> <p>867. JEEWAN MOTORS (0302-03-01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024 PH:0755-405888.</p> <p>868. MY CAR (BHOPAL) LTD (0303-03-01), 189,JINSI,NH-12,BHOPAL (MP) - 462008 PH:0755-4022800 / 4222999.</p> <p>CHHINDWARA</p> <p>878. KUNAL MOTORS (U501-U-03), OPP. KUNAL MOTORS SHOWROOM , LAL BAGH TIRAH,AUTHORITY TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP) . - 480001 PH:07162-236436.</p> <p>BINA</p> <p>875. ADINATH MOTORS (BHQ1-BHQ-01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT – SAGAR, MADHYA PRADESH - 470113 PH:9009780030.</p> <p>BURHANPUR</p> <p>876. NIMAR MOTORS PVT. LTD. (BRR1-BRR-01), KHASRA NO. 65/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP. PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH . - 450331 PH:07325-242211.</p> <p>CHATTARPUR</p> <p>877. ADINATH MOTORS (G101-8B-02), MAHOBIA ROAD, NEAR BUS STAND, CHHATTARPUR, DISTT SAGAR . - 471001 PH:07682-241446.</p> <p>CHHINDWARA</p> <p>878. KUNAL MOTORS (U501-U-03), OPP. KUNAL MOTORS SHOWROOM , LAL BAGH TIRAH,AUTHORITY TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP) . - 480001 PH:07162-236436.</p> | <p>869. MY CAR (BHOPAL) LTD (0303-03-03), 196, MANDAKINI HOUSING SOCIETY,,KOLAR ROAD, BHOPAL,MADHYA PRADESH - 462042 PH:0755-4022854.</p> <p>870. SATYAM MOTORS (0307-03-01), NH-12,SUVEESHA NAGAR,HOSHANGABAD ROAD,MISROAD - 462040 PH:0755-4422000 / 4422056.</p> <p>871. RAJURUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (0308-03-01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023 PH:755-4063529 30,31,32,33,34,35.</p> <p>872. JEEWAN MOTORS (0302-03-03), PLOT NO. 157, NEAR PUNJAB & SINDH BANK M.P. NAGAR ZONE-II, BHOPAL - 462023 PH:0755-9262429605, 2558831.</p> <p>873. JEEWAN MOTORS PVT. LTD. (0302-03-04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH,CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036 PH:0755-4057988.</p> <p>874. PRIME CARS (3Q01-0F-03), NR. INDORE-BHOPAL SQUARE, A B ROAD, BIAORA - 465674 PH:7374-230063.</p> <p>BINA</p> <p>875. ADINATH MOTORS (BHQ1-BHQ-01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT – SAGAR, MADHYA PRADESH - 470113 PH:9009780030.</p> <p>BURHANPUR</p> <p>876. NIMAR MOTORS PVT. LTD. (BRR1-BRR-01), KHASRA NO. 65/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP. PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH . - 450331 PH:07325-242211.</p> <p>CHATTARPUR</p> <p>877. ADINATH MOTORS (G101-8B-02), MAHOBIA ROAD, NEAR BUS STAND, CHHATTARPUR, DISTT SAGAR . - 471001 PH:07682-241446.</p> <p>CHHINDWARA</p> <p>878. KUNAL MOTORS (U501-U-03), OPP. KUNAL MOTORS SHOWROOM , LAL BAGH TIRAH,AUTHORITY TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP) . - 480001 PH:07162-236436.</p> |
|---|---|

DEALER WORKSHOP (AS ON 01.04.2017)

879. KUNAL MOTORS (U501-U5-06), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002 PH.:8349999112.

DAMOH

880. ADINATH MOTORS (G101-RD-03), KILLARI NAKA, SAGAR ROAD, DAMOH - 470661 PH.:07812-221740.

DATIA

881. PREM MOTORS PVT. LTD. (3003-WE-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661 PH.:07522-233236.

DEPALPUR

882. OCEAN MOTORS (WB01-WB-03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,DIST.INDORE-MP - 453115 PH.:07322-220505, 222501.

DEWAS

883. PRIME CARS PVT. LTD. (3Q01-3Q-01), RASULPUR BYPASS TIRAH, AB ROAD, DEWAS - 455001 PH.:07272-259301.

DHAR

884. RUKMANI MOTORS (P) LTD (5304-LM-02), 41/2 MAGAJIPURA,DHAR,, - 454001 PH.:7292-223500.

DINDORI

885. STANDARD AUTO AGENCIES (AVA1-AVA-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP,DINDORI - 481661 PH.:07644-280030, 7771014728.

GANJASODA

886. MY CAR (BHOPAL) LTD. (AEA1-AEA-01), NEAR GHUNGURI GARDEN , TYONDA ROAD , GANJASODA, VIDISHA DISTT., M.P. - 464221 PH.:7389928892.

GUNA

887. PREM MOTORS PVT. LTD. (S301-S3-01), OPP R.T.O.A.B. ROAD,GUNA, - 473001 PH.:07542-268015 / 268081.

GWALIOR

888. PREM MOTORS PVT. LTD. (3003-30-01), M. L. B. ROAD,GWALIOR,, - 474002 PH.:0751-4010757.
889. PREM MOTORS (3005-30-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH.:0751-4055137.

HARDA

900. INFINITY CARS (KM01-VY-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331 PH.:8869284444.

HOSHANGABAD

891. INFINITY CARS (KM01-KM-01), 185, RAMJBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001 PH.:07574-256677.

INDORE

892. MY CAR PVT. LTD. (5305-53-01), 78/1, HUMAKHEDI RAU, ADJESCENT IPS ACADEMY, A6 ROAD,INDORE - 452031 PH.:0731-4272727.

893. PATEL MOTORS (INDORE) PVT LTD. (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD INDORE - 452017 PH.:0731-4245222.

894. PATEL MOTORS (INDORE) PVT LTD. (5303-53-01), 428/3,NIRANJANPUR,A B ROAD,INDORE - 452010 PH.:0731-4033333.

895. RUKMANI MOTORS (P) LTD (5304-53-01), 2-3,A.B. ROAD,INDORE - 452001 PH.:0731-4075401.

896. RUKMANI MOTORS (P) LTD (5304-53-03), NO. 4/5,MANORAMA GANJ,INDORE - 452001 PH.:0731-4075408.

897. OCEAN MOTORS PVT. LTD. (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001 PH.:0731-6627500, 6627505.

898. OCEAN MOTORS (5306-53-02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017 PH.:0731-6617505,2877505.

899. MY CAR (INDORE) PVT. LTD. (5305-53-02), KHASARA NO.15/1/8 GRAM PIPLIYA KUMAR GODOWN NO.1112, DEWAS NAKA, INDORE. - 452010 PH.:0731-4737373.

900. PATEL MOTORS (5303-53-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHR ROAD, INDORE (M.P.) - 452006 PH.:0731-2383099,2382099.

901. OCEAN MOTORS PVT. LTD. (5306-53-03), SCHEME NO.94, SECTOR A, PLOT NO. 28FA, RING ROAD, NEAR PIPLIYAHANA CIRCLE, INDORE (M.P.) - 452001 PH.:9685333331, 7389936451.

902. KATHED MOTOCORP (5307-53-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002 PH.:7471111132.

JABALPUR

903. SHUBH MOTORS (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 486001 PH.:0761-4099999.

904. STANDARD AUTO AGENCY (5402-54-01), OPPOSITE ALLAHABAD BANK,DELITE TALKIES ROAD,CIVIL LINES, JABALPUR - 482001 PH.:0761-4040405 / 4040406.

905. STANDARD AUTO AGENCY (5402-54-03), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002 PH.:0761-4038001.

906. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM,ADHARTAL TIRAH, JABALPUR, MADHYA PRADESH - 482002 PH.:0761-6999952, 9755002292.

JAORA

907. PATEL MOTORS (INDORE) PVT. LTD. (P601-BFR-04), SURVEY NO.57/1/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226 PH.:243399, 9826634449, 9926932221.

JHABUA

908. PATEL MOTORS (AAR1-AAR-01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661 PH.:07392-243399, 9826634449.

KATNI

909. SHUBH MOTORS PVT LTD (FK01-FK-01), WARD NO. 41 HEMU COLONY SHANTI NAGAR, BESIDE RELIANCE PETROL PUMP, KATNI, MADHYA PRADESH - 483501 PH.:9685595596.

KHANDWA

910. NIMAR MOTORS (AU01-3R-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001 PH.:0733-2244088.

KHARGONE

911. NIMAR MOTORS (AU01-AU-01), JETAPUR,SANAWAD ROAD,KHARGONE, - 462026 PH.:07282-243265.

912. NIMAR MOTORS PVT. LTD. (AU01-AU-06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001 PH.:9669569504.

KHATEGAON

913. PRIME CARS PVT. LTD. (BXB1-BXB-01), SURVEY NO. 85/3, NEMAWAR ROAD, KHATEGAON, DISTRICT – DEWAS, MADHYA PRADESH - 455336 PH.:7274-8689913306.

KOTMA

914. SHUBH MOTORS (D001-D0-01), WARD NO.7, ANNUPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336 PH.:07658-233777.

KUKSHI

915. OCEAN MOTORS PVT. LTD. (BIO1-BIO-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331 PH.:9009780030, 7389945443, 8085999990.

MAIHAR

916. CITY CARS (D702-GI-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH.:07674-234575.

MANDLA

917. STANDARD AUTO AGENCIES (5402-WD-04), KATAROA ROAD, MANDLA, DIST. MANDLA MP - 481661 PH.:7642-260600,260622.

MANDSAUR

918. PATEL MOTORS (WC01-WC-01), NEAR SHIVANA BRIDGE,RATLAM MANDSAUR ROAD,MANDSAUR - 458001 PH.:07422-400450, 220372.

MHOW

919. OCEAN MOTORS PVT. LTD. (WA01-WA-01), A.B. ROAD, NEAR KISANGANJI POLICE STATION, MHOW - 453441 PH.:07324-7389936478, 266211.

MORENA

920. PREM MOTORS PVT. LTD. (RG01-RG-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH.:07532-233101.

NARSINGHPUR

921. STANDARD AUTO AGENCIES (BB01-BB-01), KH. NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSPA R.I.M. 2, TEHSIL & DISTRICT – NARSINGHPUR, MADHYA PRADESH. - 487001 PH.:792-232757.

NEEMUCH

922. AUTO SCAN (3T81-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH, PH.:07423-221912.

DEALER WORKSHOP (AS ON 01.04.2017)

923. PATEL MOTORS (RATLAM) PVT LTD.
(P601-3T-02), MHOW-NEEMUCH
ROAD,NEEMUCH(M.P.), - 458441
PH.:07423-263883-4.
- PANNA**
924. CITY CARS (EQ01-EQ-01), KHASRA NO. 378,
MOHAN RAJ VILAS CHOURAHA, BESIDE
MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA,
MADHYA PRADESH . - 488001
PH.:7672-223026, 222593.
- PITHAMPUR**
925. PATEL MOTORS (INDORE) PVT. LTD.
(5303-BVD-04), 254-A, SECTOR-1, INDUSTRIAL
AREA, PITHAMPUR, DISTT. DHAR - 454775
PH.:722-49909599.
- RAISEN**
926. MY CAR (BHOPAL) PVT. LTD. (RF01-RF-01),
NEAR BAGHEL TRACTORS BEFORE SALE TAX
TOLL SAGAR ROAD - 464221
PH.:9755550061.
- RATLAM**
927. PATEL MOTORS (INDORE) PVT LTD.
(P601-P8-01), 76 C,D&E,INDUSTRIAL
AREA,RATLAM - 452001
PH.:07412-402529-31-32-33-41.
928. PATEL MOTORS (INDORE) PVT LTD.
(P601-P8-03), 18/1/7/18,DOSHI
GOAN,INDUSTRIAL AREA,JAORA
ROAD,RATLAM - 457001
PH.:07412-261463, 261464 ,9926932221.
- REWA**
929. CITY CARS (D702-M2-03), NYPASS
CHURHATA,DIST. REWA - 482001
PH.:07662-222021.
- SAGAR**
930. ADINATH MOTORS (G101-G1-01), STATION
ROAD, TILAK GANJ, SAGAR (M.P.) - 470001
PH.:07582-403932 / 226560.
- SAJAPUR**
931. PRIME CARS (3Q01-ZC-02), LALGHATI , A B
ROAD, SHAJAPUR - 465441
PH.:7364-226333.
- SANWER**
932. MY CAR (INDORE) PVT. LTD. (AAJ1-AAJ-01),
S.NO.356/3/1, OLD UJJAIN BYPASS
ROAD,TALUKA SANWER, DISTT. INDORE . -
453551
PH.:07321-22043,7389920507.
- SATNA**
933. CITY CARS (D702-D7-01), WARD NO . -
27,AMONGHA KALA,PANNA ROAD,SATNA -
485000
PH.:07672-223026.
934. CITY CARS (D702-D7-05), (A UNIT OF AGRAWAL
WHEELS PVT. LTD.), BESIDE BHASKAR PRESS,
BEHIND MARUTI SHOWROOM, WARD NO.27,
AMOUDHA KALA, PANNA ROAD, SATNA -
485001
PH.:9754301199.
- SEHORE**
935. JEEWAN MOTORS (0302-EH-02),
869/1/2,OFFICERS COLONY,IN FRONT OF
CHURCH GROUND,BHOPAL, INDORE ROAD -
466001
PH.:0756 -2226400.
- SEONI**
936. KUNAL MOTORS (U501-8X-05), JYATAR NAKA,
JABALPUR NAGPUR ROAD, SEONI (M.P.) -
480661
PH.:07692-228158,8349999269.
- SHADOL**
937. SHUBH MOTORS (MF01-MF-01), JAMUA, NEAR
GYAN GUPTA,BUDHAR ROAD,SHADOL, -
484771
PH.:07652-231358 / 230110.
- SHIVPURI**
938. PREM MOTORS PVT. LTD. (3003-3U-04), A B
ROAD,SIVPURI., - 473551
PH.:07492-221215.
- SIDHI**
939. CITY CARS (BKM1-BKM-01), ADHIYAR KHOKH,
NEAR GYAN DHARAMKATA, SIDHI, MADHYA
PRADESH . - 486661
PH.:6762-223026, 222593, 9754301199.
- SIMROL**
940. PATEL MOTORS PVT. LTD. (BZV1-BZV-01),
PLOT NO. 13-14, SANJAY GANDHI NAGAR,
INDORE KHANDWA RD, GRAM - SIMROL,
TEHSIL - MHOW, DISTRICT - INDORE, MADHYA
PRADESH . - 452020
PH.:07295-9977703512, 232228.
- SUJALPUR**
941. PRIME CARS PVT. LTD. (3Q01-BJO-04), 363/1
DEHANI JOD, ASHTA ROAD, NEAR SOYA PLANT
SHUJALPUR, MADHYA PRADESH - 465333
PH.:8889913304 & 08889913341.
- TIKAMGARH**
942. ADINATH MOTORS (RE01-RE-01), NEAR MAU
CHUNGU NAKA, TIKAMGARH (M.P.) - 472001
PH.:07683-247469.
- UJJAIN**
943. RUKMANI MOTORS (P) LTD (3W02-3W-01),
SURVEY NO. 59/3, DEWAS ROAD,UJJAIN -
456010
PH.:0734-4052000.
- UMARIA**
944. SHUBH MOTORS (5403-BVY-04), 8/2 GRAM
BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT
UMARIA (MADHYA PRADESH) - 484661
PH.:0761-6009333.
- VIDISHA**
945. MY CAR PVT. LTD. (AY01-AY-01), SURVEY NO.
102, VILLAGE – RANGI, TEHSIL – VIDISHA,
VIDISHA, (M.P.) . - 464001
PH.:7592-9755550071, 297067.
- WAIDHEN**
946. CITY CARS (D702-UJ-02), NEAR VIJAY BANDHU
PETROL PUMP, KACHANI, THE. WAIDHEN,
DISTRICT, SINGRAULI,MADHYA PRADESH -
486888
PH.:07662-222021, 8889917774.
- MAHARASHTRA**
- AHMEDNAGAR**
947. VIJAY AUTOMOBILES (A581-A5-01), OPP. MSEB
SUB STATION, NAGAR-PUNE ROAD, KEDGAON,
AHMEDNAGAR
PH.:0241-2550049.
948. KANKARIYA AUTOMOBILES PVT LTD
(A501-A5-01), SARDHA MILLS,SAVEDI
ROAD,AHMEDNAGAR, MAHARASTRA - 414001
PH.:0241-9403961540.
949. KANKARIYA AUTOMOBILES PVT LTD
(A501-A5-05), MIDC, AHMEDNAGAR - 414003
PH.:0241-2777131.
- AKLJI**
950. CHAVAN AUTOMOBILES(CHAVAN MOTORS
DIVISION INDIA P) (B102-RU-04), PLOT NO.
15/A-3, PANCHVATI STOP,MALINAGAR
ROAD,AKLJI - 413101
PH.:02185-220303.
- AKOLA**
951. KHANDELWAL AUTOWHEELS PVT LTD
(F101-F1-01), TIRUPATI CHAMBERS,CONVENT
ROAD,AKOLA - 444005
PH.:0724-2429404,2440409,2420061.
- ALIBAUG**
952. SIMRAN MOTORS (7501-3X-05), SURVEY NO.
30/1, OPP. RCF COLONY, VILLAGE – VESHVI,
ALIBAUG, DISTRICT – RAIGAD, MAHARASHTRA
- 402201
PH.:02141-226344.
- AMBEGAON**
953. THE KOTHARI WHEELS (1906-AGA-04), SOHAM
NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK
HIGHWAY, A/P MANCHAR, TALUKA:
AMBEGAON, DISTT: PUNE, MAHRASHTRA -
410503
PH.:02132-223083/93.
- AMRAVATI**
954. ASPA BANDSONS AUTO (P) LTD (F201-F2-01),
SATURNA BADNERA
ROAD,AMRAVATI,MAHARASTRA, - 444607
PH.:0721-2510475/76/77.
955. ASPA BANDSONS AUTO (P) LTD (F201-F2-05),
A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI,
DIST: AMRAVATI, MAHARASTRA. - 444607
PH.:0721-2520085.
- AURANGABAD**
956. AUTOMOTIVE MANUFACTURERS LTD.
(2102-21-01), PLOT NO. 1,P.B.NO.
716,CHIKALTHANA,AURANGABAD - 431210
PH.:0240-6640500/6640555.
957. AUTOMOTIVE MANUFACTURERS LTD.
(2102-21-03), C-27,MIDC, CHIKALTHANA , N/R
LUPIN LABORATORIES, AURANGABAD,
MAHARASHTRA - 431006
PH.:240-2484911.
958. PAGARIYA AUTO PVT LTD (2103-21-01), OPP.
OLD HIGH COURT, NEAR HOTEL ASHOKA
EXECUTIVE, JALANA ROAD, AURANGABAD -
431005
PH.:0240-24065902.
959. PAGARIYA AUTO PVT LTD (2103-21-05), GAT
NO. 46, PLOT NO. 50, NEAR MASTER COOK
RESTAURANT (KAILASH HOTEL) BEED BYPASS
ROAD, AURANGABAD, MAHARASHTRA - 431005
PH.:9860999468.
960. PAGARIYA AUTO PVT LTD (2103-21-06), PLOT
NO.A-35 MIDC, NEAR MAIN RAILWAY STATION,
AURANGABAD - 431001
PH.:0240-6504141.
- BADLAPUR**
961. PRAKASH AUTO PVT. LTD. (9001-90-01), SHOP
NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA
WATER SUPPLY, OPP. INDIAN OIL PETROL
PUMP, MIDC ROAD, KATRAP, BADLAPUR
(EAST) - 421503
PH.:0251-9321352333.
- BALLARPUR**
962. TRISTAR CARS (H302-ZH-04), PLOT NO.11,
BEHIND ZAWERI PETROL PUMP, NEAR GURU
NANAK COLLEGE, ALLAPALLI ROAD, BAMNI,
TAH. BALLARPUR - DIST. - 442701
PH.:9272222412/13.
- BARAMATI**

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | |
|--|--|
| <p>963. MAHALAXMI AUTOMOTIVES PVT. LTD.
(7R01-7R-01), BARAMATI - PHALTAN RD., KASBA,
BARAMATI, DIST. PUNE - 413102
PH :02112-229005.</p> <p>BARSHI</p> <p>964. CHAVAN MOTORS (BBA1-BBA-01), GAT
NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL
PUMP, BARSHI . - 413401
PH :2184-229666.</p> <p>BHANDARA</p> <p>965. AUTOMOTIVE MANUFACTURERS LTD.
(2001-FG-03), JINDAL'S BLDG, NEAR NAVKAR
PETROL PUMP, SAINATH NAGAR, NH-6,
BHANDARA - 441904
PH :07184-250542/251542.</p> <p>BHIVANDI</p> <p>966. S K WHEELS PVT. LTD. (IX01-IX-02), SURVEY
NO. 43/IE, VILLAGE SONALE, NH-8,
MUMBAI-NASHIK HIGHWAY, BHIVANDI, THANE -
421302
PH :0252-2657484/9930545454/6176800.</p> <p>BHOR</p> <p>967. SEHGAL AUTORIDERS PVT. LTD.
(BSV1-BSV-01), GUT NO. 929/1, UTTROLI, BHOR,
TALUKA - BHOR, DISTRICT - PUNE,
MAHARASHTRA - 412206
PH :8888881348, 8888881399.</p> <p>BOISAR</p> <p>968. SPECTRA MOTORS (ES01-ES-01), PLOT
NO.J-240, TARAPUR INDUSTRIAL AREA,
VILLAGE-SARAVALI, BOISAR, PALGHAR, THANE
(MAHARASHTRA) - 401501
PH :02562-645180/661088.</p> <p>BRAMHAPURI</p> <p>969. TRISTRAR CARS PVT LTD (H302-TW-02), 165,
NAVEGAON, NEAR VIDYANIKETAN SCHOOL,
WADSA ROAD, BRAHMPURI, DIST:
CHANDARPUR, MAHARASHTRA - 441206
PH :9272224067/6.</p> <p>CHALIGAON</p> <p>970. MANRAJ MOTORS PVT LTD (AAE1-AAE-01), SL.
NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK,
DHULE ROAD, CHALIGAON, DIST: JALGAON,
MAHARASHTRA - 424101
PH :02589229320.</p> <p>CHANDGAD</p> <p>971. SAI SERVICE PVT. LTD. (BTF1-BTF-01), GAT
NO.360, G.P.M NO.157, A/P HALKARNI TALUKA
CHANDGAD, DISTT. KOLHAPUR,
MAHARASHTRA - 416507
PH :02320-239339.</p> <p>CHANDRAPUR</p> | <p>972. TRISTRAR CARS PVT LTD (H302-H3-01), NR.
HOTEL KUNDAN PLAZA,NAGPUR
ROAD,CHANDRAPUR - 442401
PH :07172-9272222401/2.</p> <p>973. TRISTRAR CARS PVT LTD (H302-H3-03), NAGPUR
ROAD, CHANDRAPUR - 442401
PH :07172-927222403/4.</p> <p>CHIPLUN</p> <p>974. JAGRUT MOTORS P. LTD. (9A01-9A-01),
SURVEY NO-543, NH-17, MUMBAI-GOA
HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN,
DIST-RATNAGIRI,MAHARASHTRA - 415605
PH :02355-252238.</p> <p>DAHANU</p> <p>975. SAI SERVICE PVT. LTD. (V901-TD-03),
DAHANU-JAWAHAR ROAD, DAHANU(E),
TAL-DAHANU, DIST. TAHE - 401602
PH :8975003138/02528-22506070/80/8975003140.</p> <p>DAPOLI</p> <p>976. JAGRUT MOTORS P. LTD. (G301-VG-06),
AT/POST-DAPOLI, DAPOLI-KHED
ROAD,DAPOLI DIST RATANAGIRI. - 415712
PH :02358-267272/252238.</p> <p>DHULE</p> <p>977. SEVA AUTOMOTIVE LTD. (P301-P3-01), GATE
NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE
- 424001
PH :02562-281128/29.</p> <p>DINDORI</p> <p>978. AUTOMOTIVE MANUFACTURERS LTD.
(AAF1-AAF-01), S.NO.753, NEAR PANDAV
PETROL PUMP,NASIK DINDORI ROAD, TAL
DINDORI, DISTT. NASIK - 422202
PH :02557-222021.</p> <p>DOMBIVALI</p> <p>979. FORT POINT AUTOMOTIVE (CARS) PVT. LTD.
(3906-JS-02), C/O NIRUP TEXTILES, C-3 & 4,
MIDC PHASE-1, DHARMA KANTA, NEAR TATA
POWER, DOMBIVALI (EAST) - 421201
PH :251-2449789,2445557/8.</p> <p>DOMBIVILI</p> <p>980. AUTOMOTIVE MANUFACTURERS LTD.
(3901-JS-02), PLOT NO. B-43,
PHASE-1,DOMBIVALI INDUSTRIAL AREA,
DOMBIVALI,DISTT-THANE, MAHARASHTRA, -
421201
PH :0251-2800492/45.</p> <p>GADCHIROLI</p> <p>981. BARBATE AUTOMOTIVE (INDIA) PVT. LTD.
(ARYA CARS) (ZK02-ZK-01), PLOT NO. 10,
GANESH NAGAR, MUL ROAD, GADCHIROLI ,
MAHARASTRA - 442702
PH :07132-232220.</p> <p>GADINGLAJ</p> <p>982. SAI SERVICE PVT. LTD. (3802-DB-04), 581/7B,
PLON NO-12, SANKESHWAR ROAD, OPP.
HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502
PH :02327-222239.</p> <p>GANGAPUR</p> <p>983. PAGARIYA AUTO PVT LTD (2103-MC-03),
E-16,WALUJ,AURANGABAD - 431001
PH :0240-2406617790.</p> <p>GONDIA</p> <p>984. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE
INDIA PVT. LTD.) (2004-4C-02), ITI ROAD,NR.
FULCHUR NAKA,OPP LAXMI FLOUR
MILL,GONDIA - 441601
PH :07182-234567.</p> <p>GUHAGAR</p> <p>985. JAGRUT MOTORS PVT. LTD. (BJV1-BJV-01),
SURVEY NO. 23A, SHRUNGATALI
GUHAGHAR-CHIPLUN ROAD, GUHAGAR,
RATNAGIRI, MAHARASHTRA - 415703
PH :9404923981.</p> <p>HINGANGHAT</p> <p>986. SEVA AUTOMOTIVE PVT. LTD. (CDZ1-CDZ-01),
PLOT NO. P-1, HINGANGHAT INDUSTRIAL
AREA, NH-7, AJANTI, HINGANGHAT, TALUK –
HINGANGHAT, DISTRICT – WARDHA,
MAHARASHTRA - . 442301
PH :9689871099.</p> <p>ICHALKARANJI</p> <p>987. SAI SERVICE PVT. LTD. (4D01-4D-01), GATE NO.
107,KOLHAPUR
ROAD,KABNOOR,ICHALKARANJI - 416122
PH :0230-2425282.</p> <p>INDAPUR</p> <p>988. MAHALAXMI AUTOMOTIVES PVT. LTD.
(7R01-NQ-02), STATE HIGHWAY NO. 151,
INDAPUR - 412219
PH :02112-2117222500.</p> <p>ISLAMPUR</p> <p>989. CHOWGULE INDUSTRIES PVT. LTD.
(PJ02-PJ-01), GATE NO.905/A/3, NEAR BOMBAY
RAYAN, PUNE-BANGALORE HIGHWAY (NH-4),
ISLAMPUR TALUKA : WALVA, DIST: SANGLI -
415409
PH :225757.</p> <p>JALGAON</p> <p>990. MANRAJ MOTORS PVT LTD (C401-C4-01),
AJINTA ROAD, MIDC INDL AREA, JALGAON -
425003
PH :0257-2212122/23/24.</p> <p>JALNA</p> <p>991. AUTOMOTIVE MANUFACTURERS LTD.
(2102-BC-02), PLOT NO. 4 & 5 , CTS NO.
11427/4-A, BALAJI COMPLEX,
JALNA-AURANGABAD ROAD, JALNA, - 431203
PH :02482-221143.</p> <p>JATH</p> <p>992. CHOWGULE INDUSTRIES PVT. LTD.
(J102-BLX-05), PLOT NO. 12, SAWANT ESTATE,
MORE COLONY, OPP. CATTLE BAZAR, SATARA
ROAD, JATH, DISTRICT SANGLI,
MAHARASHTRA - 416404
PH :02341 - 246598.</p> <p>JAYSINGHPUR</p> <p>993. SAI SERVICE PVT. LTD. (ASA1-ASA-01), GATE
NO. 1239, NEAR ACHRYA TULSI BLOOD BANK,
A/P UDGAON(JAYSINGHPUR), TALUKA:SHIROL,
DIST: KOLHAPUR - 416134
PH :02322-225959.</p> <p>KANKAVLI</p> <p>994. JAGRUT MOTORS P. LTD. (G301-V7-05), PLOT
NO.32-33,SURVEY NO.-1886/1,MUMBIAI-GOA
HIGHWAY
(NH-17),JANAVLI,KANKAVLI,MAHARASHTRA -
416002
PH :02367-232872/203977 , (91)9881467572.</p> <p>KAPHOLI</p> <p>995. S K WHEELS PVT LTD (0515-9C-02), PLOT NO.
42,N-47 , KAPHOLI INDUSTRIAL AREA,MUMBIAI
-PUNE HIGHWAY,MUMBIAI - 410203
PH :02192-266243/266470,02192-266243.</p> <p>KARAD</p> <p>996. CHOWGULE INDUSTRIES PVT. LTD.
(F303-4E-02), 112/3, PUNE-BANGALORE ROAD,
NEAR RELIANCE GAS PUMP, A/P MALKAPUR,
TAL. KARAD, DISTT. SATARA - 415110
PH :02164-660000.</p> <p>KARJAT</p> <p>997. SIMPAN MOTORS (7S01-TA-03),
PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD
- 410201
PH :8108194564.</p> <p>KAVATE MAHANKAL</p> <p>998. CHOWGULE INDUSTRIES PVT. LTD.
(SC02-SC-01), MAHANKALI BAZAAR, KAVATE
MAHANKAL-JAT ROAD, KAVATE MAHANKAL,
SANGLI, MAHARASHTRA - 416405
PH :02341-222102.</p> <p>KHAMGAON</p> <p>999. MANRAJ MOTORS PVT LTD. (BXU1-BXU-01),
GAT NO 41, OLD SURVEY NO. 12/1A, NEAR
AMRUT PETROL PUMP, AKOLA ROAD,
KHAMGAON , MAHARASHTRA - 444303
PH :07263-250002/3.</p> |
|--|--|

DEALER WORKSHOP (AS ON 01.04.2017)

KHARGHAR

1000. EXCELL AUTOVISTA PVT LTD (AAC1-AAC-01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR 10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210 PH.:022-65999111.

KOLHAPUR

1001. SAI SERVICE PVT. LTD. (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR - 416008 PH.:0231-2661676.
1002. SAI SERVICE PVT. LTD. (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122 PH.:0230-2468376.
1003. SAI SERVICE PVT. LTD. (3802-38-06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA - 416012 PH.:0231-2329495.

KONGAON

1004. PRAKASH AUTO PVT. LTD. (3903-AZ-02), SURVEY NO.126/127,98,38,AT & POST KONGAON, - 421302 PH.:0252-2280264.

KUDAL

1005. JAGRUT MOTORS PVT. LTD. (9B01-9B-01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA - KUDAL, DISTRICT - SINDUDURG, MAHARASHTRA - 416520 PH.:02362-202423.

LATUR

1006. AUTOMOTIVE MANUFACTURERS LTD. (V801-V8-02), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512 PH.:02362-609111/609222.
1007. AUTOMOTIVE MANUFACTURERS LTD. (V801-V8-01), CITY SURVEY NO. 2960, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR - 413512 PH.:02362-661909.

MAHAD

1008. SIMRAN MOTORS (7S01-TX-04), NEAR RELIANCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301 PH.:02145-223123.

MALEGAON

1009. SHAAN CARS PRIVATE LIMITED (3703-FF-02), PLOT NO. 572/81,CHANDANPUR SHIVAR,OLD MUMBAI, AGRA ROAD, DIST- NASIK,MALEGAON - 423203 PH.:02554-237200/237201.

MANGAON

1010. SIMRAN MOTORS PVT. LTD. (BAM1-BAM-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAl-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASHTRA - 402104 PH.:02140-261118.

MIRAJ

1011. CHOWGULE INDUSTRIES PVT. LTD. (J102-SD-03), 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410 PH.:0233-2643221, 22.

MUMBAl

1012. EXCELL AUTOVISTA PVT LTD (0510-05-01), RESHAM SINGH COMPOUND,CST ROAD,KALINA, SANTACRUZ EAST,MUMBAl - 400098 PH.:022-67743888,26653242, 43, 46.
1013. SAH & SANGLHI AUTO AGENCIES PVT LTD (0505-05-01), PRAKASH MILLS COMPOUND,OFF. GLOBE MILLS PASSAGE,WORLI,MUMBAl - 400013 PH.:022-24925452/53/54, 24965379/80,4925452, 53.

1014. SAI SERVICE PVT. LTD. (0504-05-01), 462 SENAPATI BAPAT MARG,WORLI NAKA,LOWER PAREL,MUMBAl - 400013 PH.:022-43030404/43030400.

1015. SAI SERVICE PVT. LTD. (0504-05-02), ARVIND CHAMBERS,194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAl - 400069 PH.:022-43030606 /600,8356242.,

1016. SAI SERVICE PVT. LTD. (0504-05-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND,DATA PADA ROAD,BORIVILI (EAST),MUMBAl - 400066 PH.:022-4303 011/103/104/118/120,28707000.

1017. SPECTRA MOTORS LIMITED (0508-05-01), PLOT NO.4 & 5,GANESH PLOT OWNER'S ASN., RAMACHANDRA LANE EXTN. KANCH PADA, MALAD(WEST) MUMBAl - 400064 PH.:022-67690603/62/65/80/85/58/68/94,889899.

1018. SPECTRA MOTORS LIMITED (0508-05-02), PLOT NO. 165, CABLE CORPORATION OF INDIA, OFF WESTERN EXPRESS HIGHWAY, BORIVILI (EAST) - 400066 PH.:022-66908823/66908826,28542185.

1019. SPECTRA MOTORS LIMITED (0508-05-03), GANDHI PAREKH INVESTMENT CORP. LTD, CTF NO. 170, MUMBAl AGRA ROAD, NEXT TO ASHOK SILK MILL COMPOUND, LBS MARG, GHATKOPAR WEST, MUMBAl - 400086 PH.:022-66440000 66440111/ 9967017486,66440000.

1020. SPECTRA MOTORS LIMITED (0523-05-01), GHATLA VILLAGE, CHEMBUR, MUMBAl - 400071 PH.:022-25200600/25200990/ 25200300 /25206666.

1021. VITESSE TRADING LIMITED (0503-05-01), SHAH INDLESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAl - 400058 PH.:022-26730787/26730280/26730296,6367018.

1022. VITESSE TRADING LIMITED (0503-05-02), 77 AF PALKY GULLY,OFF VEER SAVARKAR MARG, PRABHADAEVI, MUMBAl - 400025 PH.:022-24229747,4223933.

1023. AUTOMOTIVE MANUFACTURERS LTD. (3901-05-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAl - 400070 PH.:022-61563734 / 61563744 / 61563715.

1024. FORT POINT (0521-05-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAl - 400098 PH.:022-41157777,24321212/131.

1025. SHIVAM AUTOZONE (0531-05-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAl, MAHARASHTRA - 400067 PH.:022-41099999.

1026. VITESSE PVT. LTD. (0503-05-07), PLOT NO.A59, KANDIVLI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVLI (W), MUMBAl - 400067 PH.:022-28674753/28674754,24229747.

1027. SPECTRA MOTORS PVT. LTD. (0508-05-07), C/O DON BOSCO INSTITUTE, VAZIRA NAKA, OFF CHANDARKAR ROAD, BORIVALI WEST, MUMBAl - 400092 PH.:022-28988800.

1028. FORTPOINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-03), C/O VARUN STEEL INDUSTRIES,AAM TOOL COMPOUND,BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAl - 400010 PH.:022-64550650.

1029. K.T.S. AUTOMOTORS PVT. LTD. (0582-05-02), C/O-COZY INDIA, 5, HANSRAJ LANE, BYCULLA, MUMBAl - 400027 PH.:022-23751234,23752301/2/3/5/6.

1030. PARAMOUNT WHEELS PVT. LTD. (3911-05-02), CITY SURVEY NO. 639/246, SANTOSH NAGAR, FILM CITY ROAD, GOREGAON (E), MUMBAl - MAHARASHTRA - 400065 PH.:022-28403742.

1031. S K WHEELS PVT. LTD. (0544-05-01), CTS NO. 151, RAM MANDIR ROAD, SOMANI GRAM, NEXT TO CENTRAL WAREHOUSE CORP., OSHIWARA, GOREGAON (WEST), MUMBAl - 400 104, MAHARASHTRA - 400104 PH.:022-9930545454.

1032. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-02), PLOT NO. 62-ABCD, KANDIVLI INDUSTRIAL ESTATE, OPP. CHARKOP POST OFFICE, CHARKOP, KANDIVLI (WEST), MUMBAl, MAHARASHTRA - 400067 PH.:022-9870934444, 41099999.

1033. KIRAN MOTORS MAHARASHTRA (0541-05-01), PLOT NO. B-62/41A, SHREYAS INDUSTRIAL, OFF. NEW LINK ROAD, ANDHERI (WEST), MUMBAl - 400053 PH.:7700934505.

MURBAD

1034. PRAKASH AUTO PVT. LTD. (BY01-BYO-01), SURVEY NO. 61/2, KALYAN - MURBAD ROAD, VILLAGE - DAHAGAON, TALUKA - MURBAD, DISTRICT - THANE, MAHARASHTRA - 421605 PH.:9028342275.

MURGD

1035. SAI SERVICE PVT. LTD. (AWA1-AWA-01), R.S. NO. 188/4, A/P MURGD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219 PH.:02325-265553.

NAGPUR

1036. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD,NAGPUR - 440035 PH.:0712-2668333.

1037. AUTOMOTIVE MANUFACTURERS LTD. (2001-20-02), 575 KAMPTEE ROAD,NAGPUR-26,, - 440026 PH.:0712-2630550/6662000/6662001/2652551/2648341 .

1038. SEVA AUTOMOTIVE LTD. (2002-20-01), 34,3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR - 440023 PH.:0712-2500231/6652800.

1039. SEVA AUTOMOTIVE LTD. (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA - 440016 PH.:07104-666444.

1040. AUTOMOTIVE MANUFACURERS PVT. LTD (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001 PH.:0712-6555013/14.

1041. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2007-20-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASHTRA - 440018 PH.:0712-6664777.

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | | | |
|--|---|--|---|
| <p>1042. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2007-20-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASTRA - 441202 PH :8888819524.</p> <p>NANDED</p> <p>1043. SEVA AUTOMOTIVE LTD. (6801-68-01), NANDED HYDERABAD ROAD, NANDED - 431604 PH :02462-241599.</p> | <p>1053. AUTOMOTIVE MANUFACTURERS LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA,SHIRVANE NERUL,NEW BOMBAY, - 400706 PH :022-40183900/40183923/24/28,6114603.</p> <p>1054. S K WHEELS PVT LTD (0515-9K-01), D-267,TTG INDUSTRIAL AREA,TURBHE,NEW BOMBAY - 400075 PH :022-27625122, 022 - 27625102,27688910, 20, 30, 40,</p> <p>1055. EXCELL AUTOVIA PVT LTD (AAC1-9K-02), PLOT NO.9,MIDC,NAVADE,TALOJA, TAL-PANVEL, DIST-RAIGAD - 410208 PH :022-27405555.</p> | <p>1063. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-PR-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH :02111-225009.</p> <p>PEN</p> <p>1064. SIMRAN MOTORS (9101-9I-01), AT POST – VADIKHAL NAKA, NH-17, MUMBAI GOA HIGHWAY, TAL – PEN, DISTT. RAIGAD - 402107 PH :02143-269073.</p> | <p>1074. SAI SERVICE PVT. LTD. (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRU, HAVELI, PUNE - 411046 PH :020-41140222/240/241/242/243.</p> <p>1075. SAI SERVICE PVT. LTD. (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019 PH :020-46605999/95.</p> |
| <p>NANDURBAR</p> <p>1044. SEVA AUTOMOTIVE LTD. (P301-KW-02), PLOT NO. 38 4, BANSIL NAGAR, NEAR HOTEL KARAN GARDEN HOWFULLY BYE PASS ROAD, NANDURBAR,DIST- SATARA. - 425412 PH :02564-233400.</p> | <p>1056. CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-LW-03), PLOT NO. 1, TAWADE COMPLEX,PRERANA NAGAR,OSMANABAD. - 413501 PH :02472-228666.</p> | <p>1065. CHOWGULE INDUSTRIES PVT. LTD. (KH02-KH-01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRNANWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA - 415523 PH :02161-200455.</p> | <p>1076. THE KOTHARI WHEELS (1906-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH :020-66874100.</p> <p>1077. WONDER CARS (P) LTD (1903-19-02), 12, NPS LINES,SOLAPUR ROAD,OLD POOL GATE,CAMP, PUNE - 411001 PH :020- 26332934/35.</p> |
| <p>NARAYANGAON</p> <p>1045. THE KOTHARI WHEELS (1906-FV-02), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :0232-244002.</p> | <p>1057. SAI SERVICE PVT. LTD. (TE01-TE-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404 PH :2525-8308806722.</p> | <p>1066. AUTOMOTIVE MANUFACURERS PVT LTD (BAY1-BAY-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBIA AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAJ, DIST-NASHIK - 422202 PH :02550-252808.</p> | <p>1078. SEHGAL AUTORIDERS (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021 PH :020-830830444/41463625/41463627.</p> |
| <p>NASHIK</p> <p>1046. AUTOMOTIVE MANUFACTURERS LTD. (3702-37-01), P-1-12,ADDITIONAL NASIK INDL. AREA,AMBAD,NASIK - 422010 PH :0253-6636300/6636329/312/314/317.</p> <p>1047. SEVA AUTOMOTIVE LTD. (3701-37-01), PLOT NO. X - 46,MIDC. AMBAD, NASIK - 422010 PH :0253-2386537.</p> <p>1048. SHAAN CARS PRIVATE LIMITED (3703-37-01), E-3 MIDC AREA,SATPUR , NASIK,MAHARASHTRA - 422007 PH :0253-2351372.</p> <p>1049. SEVA AUTOMOTIVE PVT LTD (3701-37-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006 PH :0253-6604444.</p> <p>1050. SEVA AUTOMOTIVES PVT LTD (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B/1, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH :0253-6654444.</p> | <p>1058. CHOWGULE INDUSTRIES PVT. LTD. (J102-02-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 413038 PH :02346-229021.</p> | <p>1067. MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD, OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA PH :020-65001981.</p> | <p>1079. SAI SERVICE PVT. LTD. (1901-19-06), SURVEY NO.24/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057 PH :020-204200700.</p> |
| <p>1051. SHAAN CARS PRIVATE LIMITED (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011 PH :0253-2236080.</p> <p>1052. SEVA AUTOMOTIVE LTD. (3701-37-06), SEVA FARMS, GATE NO. 8/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH :0253-6642444.</p> | <p>1059. CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-0H-05), GAT NO.56, ESABAVI, PUNE ROAD, TAL-PANDERPUR, SOLAPUR - 413001 PH :02186-228666.</p> | <p>1068. ACE KUDALE CAR PVT. LTD. (1910-19-01), 36/2/C/1, MANRAJ BUDRK, PUNE-SOLAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE - 412201 PH :020-30456441/447/413.</p> | <p>1080. THE KOTHARI WHEELS (1906-19-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019 PH :020-66352600.</p> |
| <p>NAVI MUMBAI</p> <p>1053. SAI SERVICE PVT. LTD. (7S01-7S-01), PLOT-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBAI PUNE HIGHWAY,PANVEL - 410206 PH :022-27488000/27462605, 27490365.</p> <p>1061. AUTOMOTIVE MANUFACTURERS LTD. (3901-7S-03), PLOT NO.9/21, VILLAGE KOLAKHA, MUMBIA-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206 PH :09272237071 TO 94..</p> <p>1062. K.T.S. AUTOMOTORS PVT. LTD. (0582-7S-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207 PH :9420611356/94206611326.</p> | <p>1060. SIMRAN MOTORS (7S01-7S-01), PLOT-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBAI PUNE HIGHWAY,PANVEL - 410206 PH :020-66803555.</p> | <p>1069. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-02), S.NO.53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411048 PH :020-26959460; 66786200.</p> | <p>1081. SUMANKIRITI CARS PVT. LTD. (1915-19-01), SR. NO.131 OPP. SAI PETROL PUMP, PUNE MUMBAI EXPRESSWAY, TAWADE, PUNE - 411033 PH :020-66333209.</p> |
| <p>1054. SAI SERVICE PVT. LTD. (1901-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057 PH :020-398833/39810920.</p> | <p>1070. CHOWGULE INDUSTRIES PVT. LTD. (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046 PH :020-66803555.</p> | <p>1071. MY CAR (PUNE) PVT LTD (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057 PH :020-46404440/48.</p> | <p>1082. SAI SERVICE PVT. LTD. (1901-19-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA - 411048 PH :020-71727001/2/3/4/5/6/7.</p> |
| <p>1055. SEVA AUTOMOTIVE LTD. (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH :0253-6654444.</p> | <p>1063. AUTOMOTIVE MANUFACTURERS LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA,SHIRVANE NERUL,NEW BOMBAY, - 400706 PH :022-40183900/40183923/24/28,6114603.</p> | <p>1072. SAI SERVICE PVT. LTD. (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012 PH :020-46404440/48.</p> | <p>1083. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016 PH :020-67290018/17.</p> |
| <p>PATAS</p> | <p>1064. SIMRAN MOTORS (7S01-7S-01), PLOT-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBAI PUNE HIGHWAY,PANVEL - 410206 PH :020-66803555.</p> | <p>1073. SAI SERVICE PVT. LTD. (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004 PH :020-41401141/40.</p> | |

DEALER WORKSHOP (AS ON 01.04.2017)

-
1087. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033 PH:020-67915700.
1088. SAI SERVICE PVT. LTD. (1901-19-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NAMDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT - PUNE, MAHARASHTRA. PH:020-24391399.
1089. THE KOTHARI WHEELS (1906-19-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028 PH:020-26871020, 8411002011.
1090. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-06), SR.NO. 43/4/A/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE- SATARA ROAD, PUNE. - 411009 PH:020-67273200.
1091. MOTO DRIVE PVT. LTD. (1916-19-01), 1337/1, REALITY BUILDING, WAGHOLI, PUNE NAGAR ROAD, PUNE. - 412207 PH:9130049309.
1092. MOTO DRIVE PVT. LTD. (1916-19-02), GAT NO.1346/1, UBBALENAGAR, WAGHOLI, PUNE NAGAR ROAD, PUNE. - 412207 PH:9130049309.
1093. EXCELL AUTOVISTA PVT. LTD. (1917-19-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST PUNE. - 412306 PH:9320357300.
1094. THE KOTHARI WHEELS (1906-19-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH:020-27030400/444.
1095. ACE KUDALE CAR PVT. LTD. (1910-19-03), SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA – HAVELI, DISTRICT – PUNE. - 412105 PH:020-9423123665.
- RAHATA (SHIRDI)**
1096. KANKARIYA AUTOMOBILES PVT LTD (ZV03-ZV-01), SHIRDI ROAD, SAKORI, RAHATA, - 423107 PH:2423-243541.
- RAJAPUR**
1097. JAGRUT MOTORS P. LTD. (AHA1-AHA-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST- RATNAGIRI - 416702 PH:02355-252238.
- RATNAGIRI**
1098. JAGRUT MOTORS P. LTD. (G301-G3-01), D-25, MIDC MIRJOLE, MAHARASTRA, RATNAGIRI - 415639 PH:02352-228380, 28380.
- SANGAMNER**
1099. SHAAN CARS PRIVATE LIMITED (HE03-HE-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER , DIST AHMEDNAGAR, MAHARASHTRA - 422605 PH :8888846450.
- SANGLI**
1100. CHOWGULE INDUSTRIES PVT. LTD. (U102-J1-01), GAT NO.243 SANGLI KOLHUPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH:0233-6631300.
- SASWAD**
1101. CHOWGULE INDUSTRIES PVT. LTD. (1908-PH-03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301 PH:02115-224450; 225210.
- SATARA**
1102. CHOWGULE INDUSTRIES PVT. LTD. (F303-F3-01), PLOT NO. B-2,OLD MIDC,SATARA - 415002 PH:02162-245941/2/3.
- SAWANTWADI**
1103. JAGRUT MOTORS PVT. LTD. (BBL1-BBL-01), SHIVSHAMBHO APARTMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. - 416510 PH:9765000872, 9823564372.
- SHAHAPUR**
1104. SHIVAM AUTO ZONE (I) PVT. LTD. (BZU1-BZU-01), DR. DESHPANDE COMPOUND, NEAR BHATSAA COLONY, VILLAGE – GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT – THANE, MAHARASHTRA - 421601 PH:8082111222.
- SHIRUR**
1105. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-ZD-02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJURUR, DIST: PUNE, MAHARASHTRA - 412210 PH:02138-615000.
- SHIRWAL**
1106. CHOWGULE INDUSTRIES PVT. LTD. (BSD1-BSD-01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH:02169-244044.
- SHIRAMPUR**
1107. KANKARIYA AUTOMOBILES PVT LTD (LV03-LV-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHIRAMPUR DISTT. AHMEDNAGAR - 413709 PH:02422-210264.
- SILLOD**
1108. PAGARIYA AUTO PVT. LTD. (2103-ZG-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH:9860999468.
- SINNAR**
1109. SHAAN CARS PRIVATE LIMITED (3703-FU-03), A-24, MIDC AREA MALEGAON, SNNAR TAL-SINNAR, - 422103 PH:02551-230300.
- SOLAPUR**
1110. CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-B1-02), 150, AKALKOT ROAD,OPP. SVCS HIGH SCHOOL,SOLAPUR, - 413006 PH:217-2606666.
1111. CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-B1-01), 18,39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224 PH:0217-2378888, 2373999.
- TALASARI**
1112. SHIVAM AUTOZONE (BIN1-BIN-01), SURVEY NO. 19/1 PLOT NO. 5, AT-POST – VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606 PH:02521-220777.
- THANE**
1113. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE PH:022-25872222.
1114. FORT POINT (3906-39-01), KOTHARI WAREHOUSE NO. 111,POKHRAJ ROAD NO. 11,MANPADA, CHATLALSAR,THANE - 400607 PH:022-41157777, 41515300,25897170.
1115. NAVNIT MOTORS LTD (3908-39-02), B R T PLOT ,THANE (W), MAHARASHTRA - 400607 PH:022-66066666.
1116. SPECTRA MOTORS LIMITED (0508-39-04), B-74,ROAD NO. 33,NEAR ESI HOSPITAL,WAGLE ESTATE, THANE - 400604 PH:8.879660053E-017.
1117. SPECTRA MOTORS LIMITED (0508-39-06), C/O MONARCH PLASTICS, GALA NO.4, MIRA CO-OP. INDUSTRIAL ESTATE, KASHIMIRA, THANE - 401104 PH:022-28542185.
- TITIWALA**
1118. PARAMOUNT WHEELS PVT. LTD. (3911-39-01), OPP. PREMA LAXMAN SCHOLL, PANKERPADA, MIRAROAD(E), DIST: THANE - 401107 PH:022- 42933944/45/51/52/53.
- ULHASNAAGAR**
1119. PRAKASH AUTO PVT. LTD. (BYP1-BYP-01), SHOP NO. 1, SURVEY NO. 23/2, GOVELI – TITIWALA ROAD, VILLAGE – GHOTSAL, TITIWALA, TALUKA – KALYAN, DISTRICT – THANE, MAHARASHTRA . - 421605 PH :0251-3240040, 9960023999.
- VADUJ**
1120. PRAKASH AUTO PVT. LTD. (3903-39-01), U NO-3, SHEET NO. 30,VITHALWADI STATION ROAD, ULHASNAGAR - 421003 PH:0251-3228525/3257934,2561582.
- VASAI**
1121. CHOWGULE INDUSTRIES PVT. LTD. (F303-GQ-03), KALEVASTI, VADUJ DAHIWADI ROAD , VADUJ - 415506 PH:02161-232323/232030.
- VASAI**
1122. SAI SERVICE PVT. LTD. (0504-V9-03), C/O PRASHANTI INVESTMENT LTD.,NEAR GAODEVI TEMPLE, VILLAGE SATIVILI,DISTT. THANE - 401308 PH:0250-9552590086 /87 /0250-2480583/2481474,912455685, 453583.
1123. SAI SERVICE PVT. LTD. (V901-V9-01), ANDRADESH BHAVAN, SURVEY #27 A.NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASHTRA - 401202 PH:88050229862 / 9552527214.
- VIRAR**
1124. SAI SERVICE PVT. LTD. (V901-PG-02), VILLAGE-VATAR, VIRAR(W)-TAL- VASAI, DISTRICT-THANE, MAHARASHTRA - 401301 PH:8605000906 / 0250-2584105 / 2584015.
- WADA**
1125. CHOWGULE INDUSTRIES PVT. LTD. (BSE1-BSE-01), S NO. 900, HISSA NO. 1,2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA – KHANAPUR, DISTRICT – SANGLI, MAHARASHTRA - 415311
- WADA**
1126. PARAMOUNT WHEELS PVT. LTD. (BXD1-BXD-01), SURVEY NO.133/7/1, WADA BHIWANDI ROAD, VILLAGE GANDARE, POST KONE, TALUKA WADA, DISTT. PALGHAR (MAHARASHTRA) - 421303 PH:02526- 8411933992.
- WAGHOLI**

DEALER WORKSHOP (AS ON 01.04.2017)

1127. SAI SERVICE PVT. LTD. (1901-AB-04), GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL- HAVELI, DIST- PUNE - 412207
PH.:020-46403333/31/32.

WAI

1128. CHOWGULE INDUSTRIES PVT. LTD. (BYC1-BYC-01), GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL - WAI, DISTT. SATARA - 412803 PH.:8805095200, 880519620, 9922992887.

WANI

1129. HIMALAYA CARS (4M01-01-02), YASH LAWNS, COLLEGE/NAGPUR ROAD, TALUKA/WANI, DISTRICT-YAVATMAL, MAHARASHTRA - 445304 PH.:07239-226888.

WARDHA

1130. SEVA AUTOMOTIVE LTD. (2002-AC-02), GOPURI CHOWK, OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001 PH.:07152-253545/25325.

WARUD

1131. ASPA BANDSONS AUTO (P) LTD (F201-UG-04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA- WARUD, DIST. AMRAWATI - 444906 PH.:07229-232888.

WASHIM

1132. ASPA BANDSONS AUTO (P) LTD (F201-9D-02), NEAR RAILWAY CROSSING,HIGOLI ROAD,WASHIM, - 444505 PH.:07252-233999.

YAVATMAL

1133. HIMALAYA CARS (4M01-4M-01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001 PH.:07232-249992.

YEOLA

1134. SEVA AUTOMOTIVES PVT LTD (B5T1-BST-01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANNAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA - YEOLA, DISTRICT - NASHIK, MAHARASHTRA. - 423401 PH.:0259-266166.

YEWAT

1135. MAHALAXMI AUTOMOTIVES PVT. LTD. (AZA1-AZA-01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). - 412202 PH.:9881254892.

THANE

1136. PARAMOUNT WHEELS PVT. LTD. (3911-39-03), B-2, MIDC, MIRA ROAD, OFF NH-8, THANE. - 401107 PH.:022-9004999360.

MANIPUR

1137. EASTERN MOTORS (BBE1-BBE-01), HMUIA VENG,TEDDIM ROAD, CHURACHANDPUR, MANIPUR - 795128 PH.:03874235969, 9862555472.

IMPHAL

1138. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR PH.:0385-330856, 226816/205962.

1139. EASTERN MOTORS (7401-74-02), NH.39, CHINGMEIRONG, WEST, IMPHAL - 795010 PH.:0385-2422152.

THOUBLA

1140. EASTERN MOTORS (BJL1-BJL-01), THOUBLA ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBLA, MANIPUR - 795138 PH.:3848-9662662225.

MEGHALAYA

1141. RANI MOTORS (310/31-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JANTIA HILLS, MEGHALAYA - 793150 PH.:03652-204025.

KHliehriat

1142. BANALARI WORLD CARS (8502-PZ-03), JOWAI-SICHAR ROAD, MEGHALAYA, KHliehriat - 793150 PH.:3655-9856299493.

MAWGAP

1143. BANALARI WORLD CARS (CBK1-CBK-01), LAITPYNTER, SHILLONG NONGTON ROAD, MAWGAP, DIST- EAST KHASI HILLS, MEGHALAYA - 793121 PH.:9774537902, 9615101743.

NONGPON

1144. RANI MOTORS (8501-TN-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGPHOH, RIBHOI DISTT. - 793102 PH.:03662-977401910/9774012380.

NONGSTON

1145. RANI MOTORS (8501-OP-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119 PH.:9863029955.

SHILLONG

1146. RANI MOTORS (8501-OP-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014 PH.:0364-241581.

1148. RANI MOTORS (8501-OP-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021 PH.:364-2535189, 2231287.

1146. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017 PH.:364-0943611128/2575045.

1147. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014 PH.:0364-241581.

1148. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021 PH.:364-2535189, 2231287.

NAGALAND

Dimapur

1149. PROGRESSIVE MOTORS (3201-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112 PH.:03862-30987, 30992.

Kohima

1150. PROGRESSIVE MOTORS (3201-4N-02), NH-39, NEAR INDIAN OIL PETROL PUMP, KOHIMA, - 797001 PH.:03862-230987.

ORISSA

BERHAMPUR

1151. SKY AUTOMOBILES (E203-E2-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE - KONISI, BERHAMPORE, GANJAM, ODISHA. - 761008 PH.:7381266000.

Bhubaneshwar

1152. JYOTE MOTORS (0402-04-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010 PH.:3655-9856299462.

Chandikhol

1153. SKY AUTOMOBILES (BXL1-BXL-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA. - 755044 PH.:9583000001.

Jaleswar

1154. JYOTE MOTORS PVT. LTD. (BXP1-BXP-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST- BALASORE, ODISHA. - 756032 PH.:859019867.

Nimapara

1155. NARAYANI MOTORS PVT. LTD. (CFL1-CFL-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT - PURI, ODISHA. - 752106 PH.:9583001877.

Subarnapur

1156. ODYSSEY MOTORS PVT. LTD. (BUK1-BUK-01), KHATA NO. 32, MOUZA - SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT - SUBARNAPUR, ODISHA - 767017 PH.:9439314464.

ANGUL

1157. ODYSSEY MOTORS PVT. LTD. (W101-W1-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DIST: ANGUL) - 759145 PH.:06764-221079, 221669.

BALASORE

1158. JYOTE MOTORS PVT LTD (L501-L5-01), PLOT NO. 276, GAÑEÑHWAÑPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST. -BALASORE - 756019 PH.:6782-2302200.

BARGARH

1159. ODYSSEY MOTORS (P) LTD (D401-SJ-04), AT/PO -BARGARH, NH-6, DISTT -BARGARH, ORISSA - 768028 PH.:06646 -246533.

Baripada

1160. JYOTE MOTORS PVT LTD (L501-RQ-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001 PH.:6792-211200.

Berhampur

1161. SKY AUTOMOBILES (E203-E2-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002 PH.:7381266000.

Bhadrak

1162. JYOTE MOTORS PVT LTD. (I201-I2-01), PLOT NO. 14/483, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK ,ODISHA - 756101 PH.:9776615001.

Bhawanipatna

1163. LEGEND CARS PVT. LTD. (SW1-TB-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001 PH.:06670 - 233345.

Bhubaneswar

1164. JYOTE MOTORS PVT LTD (0402-04-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003 PH.:0674-2436829.

1165. NARAYANI MOTORS PVT LTD (0403-04-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006 PH.:0674-572872, 873.

DEALER WORKSHOP (AS ON 01.04.2017)

1166. SKY AUTOMOBILES (0404-04-01), PLOT NO. -435/1866, NEAR KIT SQUARE PATIA, BHUBNESHWAR. - 751022 PH: 674-2725912/2725992.
1167. NARAYANI MOTORS PVT LTD (0403-04-02), PLOT NO 56 AND 57, RASULGARH, BHUBANESHWAR, ODISHA - 751010 PH: 0674-2588476.
- BOLANGIR**
1168. ODYSSEY MOTORS (P) LTD (D401-MW-03), NH-201, MADHIPALI, SAMBALPUR ROAD, BOLANGIR, ORISSA - 757001 PH: .6652-230031.
- CUTTACK**
1169. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011 PH: 0671-2686527.
- DHENKENAL**
1170. SKY AUTOMOBILES (6701-4P-04), PLOT NO-136/1103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKENAL - 759001 PH: 06762-243048-49.
- JAJPUR**
1171. SKY AUTOMOBILES (6701-RZ-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISA - 753019 PH: 06726-9583104012.
- JEYPORE**
1172. LEGEND CARS PVT. LTD. (SW01-SW-03), SOURAGUDA,JEYPORE, DIST-KORAPUT,ORISSA A,INDIA - 764001 PH: 06854 -230624.
- JHARSUGUDA**
1173. ODYSSEY MOTORS PVT LTD (BJU1-BJU-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201 PH: 0663-4030011, 4075000.
- KEONJHAR**
1174. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA PH: 06766-256466.
1175. JYOTE MOTORS PVT. LTD. (7U01-7U-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001 PH: 9776615001.
- NAYAGARH**
1176. JYOTE MOTORS PVT LTD (0402-DC-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069 PH: 06753-225394.
- PARADEEP**
1177. NARAYANI MOTORS PVT LTD (0E01-OE-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. - 754141 PH: 9583022020.
- PURI**
1178. NARAYANI MOTORS (4001-40-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT, BATAMANGLA PO HAREKRISHNAPUR, BATAGAON, PURI, ODISHA - 752002 PH: 06752-231323.
- ROURKELA**
1179. ORBIT MOTORS (8701-87-01), VEDVYAS, NEAR PAHAADI BAR, ROURKELA,ORRISA - 769041 PH: 0661-2660777.
- SAMBALPUR**
1180. ODYSSEY MOTORS (P) LTD (D401-D4-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH: 0663-522102 - 03 - 04 - 05.
- PONDICHERRY**
1181. SHENBAKA CARS PRIVATE LIMITED (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010 PH: 0413-229391/9293.
- PUNJAB**
- ABO哈尔**
1182. TARA AUTOMOBILES (H501-H5-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABO哈尔, PUNJAB - 152116 PH: 01634-28313-14.
- AJNALA**
1183. SWANI MOTORS PVT. LTD. (CBP1-CBP-01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102 PH: 1658-220401.
- AMRITSAR**
1184. JAYCEE MOTORS (1702-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH: 0183-581334, 581335.
1185. RISHABH FOURWHEELS PVT. LTD. (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH: 0183-2263369.
1186. SWANI MOTORS LTD. (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001 PH: 0183-400404..
- ANANADPUR SAHIB**
1187. C M AUTO SALES (OF01-OF-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB,TEHSIL ANANDPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123 PH: 01887-9592916811.
- BALACHAUR**
1188. LOVELY AUTOS (XV01-XV-01), NEAR MCDONALD – GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHARH CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHARH) - 144521 PH: 9678427910.
- BANGA**
1189. LOVELY AUTOS (3503-MS-03), NAVASEHAR-JALANDHAR ROAD, BANGA - 144505 PH: 01823-735560557.
- BANUR**
1190. TRICITY AUTOS PVT. LTD. (BRT1-BRT-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601 PH: 01762-660880.
- BARNALA**
1191. MAX AUTOS (4S01-4S-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001 PH: 01679-285022, 9216529220.
- BATALA**
1192. CITI AUTOMOBILES (V581-V5-01), NEAR GARUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, PH: 01871-98724024253.
1193. PATHANKOT VEHICLELEADS PVT. LTD. (A701-V5-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505 PH: 01871-246246, 246245.
- BHADSON**
1194. HIRA AUTOMOBILES (BAG1-BAG-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202 PH: 8872034034, 9217048236.
- BHATINDA**
1195. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001 PH: 0164-2235349, 50.
- BHOJPUR**
1196. LOVELY AUTOS PVT. LTD. (BRU1-BRU-01), KHASRA NO. 31/14, 17/2 18/23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOJPUR - 144201 PH: 9872030006.
- GIDDARBANA**
1205. HIRA AUTOMOBILES (AUA1-AUA-01), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBANA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101 PH: 01884-283151.
- GORAYA**
1206. LOVELY AUTOS (BJR1-BJR-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH: 01826-261001.
- GURDASPUR**

DEALER WORKSHOP (AS ON 01.04.2017)

-
1207. PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521 PH.:01874-247245, 247246.
1208. PATHANKOT VEHICLEADES (A701-4X-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH.:01874-247244.
- HOSHIARPUR**
1209. HOSHIARPUR AUTOMOBILES (H402-H4-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR - 146001 PH.:01882-251674, 250656, 309212.
- JAGRAON**
1210. SANDHU AUTOMOBILES (6206-LT-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH.:01624-258558, 9876727296.
- JAITU**
1211. MAPSKO AUTO INDIA PVT. LTD. (YX02-YX-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT - FARIDKOT - 151202 PH.:7347000520.
- JALALABAD**
1212. TARA AUTOMOBILES (H501-8E-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH.:01638-252913.
- JALANDHAR**
1213. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH.:0181-237001, 02.
1214. STAN AUTOS PVT LTD (3504-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH.:0181-395252.
- JANDIAL MANJKI**
1215. LOVELY AUTO (BJS1-BJS-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE - JANDIALA MANJKI, TEHSIL - NOORMAHAL, DISTRICT - JALANDHAR, PUNJAB. - 144033 PH.:7087439797.
- JANDIALA GURU**
1216. BABA AUTOS (7C01-GL-03), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115 PH.:0183-8872013029.
- KAPURTHALA**
1217. STAN AUTOS PVT LTD (3504-4Z-03), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602 PH.:01822- 8872000288 8872006618, 9779623949.
- KHANNA**
1218. SANDHU AUTOMOBILES PVT. LTD. (N301-N3-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST. -LUDHIANA, PUNJAB. - 141401 PH.:1858-220401.
- KHARAR**
1219. CM AUTOSALES PVT. LTD. (7K01-JH-03), NH-95, MORINDA ROAD,KHANPUR, Kharar, DIST. MOHALI - 140301 PH.:0160-9915022878.
- LUDHIANA**
1220. GULZAR MOTORS LTD. (6204-62-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003 PH.:0161-534953, 534952, 543704, 5.
1221. LIBRA AUTO CAR CO. LTD (6207-62-01), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020 PH.:0161-2512701, 03.
1222. LIBRA AUTO CAR CO. LTD (6207-62-02), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020 PH.:0161-2512701, 03.
1223. SANDHU AUTOMOBILES (6206-62-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141200 PH.:0161-2534514, 2535107.
1224. STAN AUTOS PVT LTD (6203-62-01), G.T.ROAD, NEAR SHERPUR CHOWK, LUDHIANA - 141003 PH.:0161-542300, 545800.
1225. STAN AUTOS PVT LTD (6203-62-04), HAMBIRAN ROAD, LUDHIANA - 141001 PH.:0161-2304487.
1226. SWANI MOTORS SERVICES PVT. LTD. (6208-62-01), 523, G.T.ROAD, NEAR DHANDHARI RLY STATION, LUDHIANA - 141010 PH.:0161-2510583, 2510883.
1227. STAN AUTOS (6203-62-06), OPP. BHAI BALA GURUDWARA SAHIB OPP. PAKHOWAL ROAD, LUDHIANA - 141008 PH.:0161-9257243406.
1228. SWANI MOTORS SERVICES PVT. LTD. (6208-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA - 141003 PH.:0161-5092244.
1229. SWANI MOTORS SERVICES PVT. LTD. (6208-62-03), KHASRA NO. 114, 118, 119, 121/1/1, 121/2/1 OF VILLAGE-THREKEE, HADBAST NO. 156, AYALI CHOWK, FEROZEPUR ROAD, LUDHIANA, PUNJAB. - 141003 PH.:0161-2802074, 7355825175.
1230. STAN AUTOS PVT. LTD. (6203-62-07), B-32/751 JALANDHAR BYE PASS CHOWK NEAR SABJI MANDI, LUDHIANA. - 141005 PH.:8872640004.
1231. STAN AUTOS PVT LTD (6203-62-08), PLOT NO. 3, HB NO. 261, GIASPURA, GT ROAD (NEAR DHANDARI RAILWAY STATION), LUDHIANA, PUNJAB - 141014 PH.:161-5043044, 8872640004..
- MACHIWARA**
1232. SANDHU AUTOMOBILES (6206-9T-03), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH.:01628-250577.
- MAHILPUR**
1233. HOSHIARPUR AUTOMOBILES (H402-DD-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105 PH.:01884-246997, 9915157997.
- MALERKOTLA**
1234. MAX AUTOS (CCI1-CCI-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023 PH.:9814403131, 9056903131.
- MALOUT**
1235. HIRA AUTOMOBILES LTD. (6302-LE-05), TINKONI CHOWK, NEAR LIC BUILDING, MALOUT - 152107 PH.:01637-299524, 264724.
- MANDI GOBINDGARH**
1236. HOSHIARPUR AUTOMOBILES (U903-U9-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301 PH.:0176- 5523628, 9878432739.
- MANSA**
1237. TARA AUTOMOBILES (7002-TL-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA , PUNJAB - 151505 PH.:01652-216042.
- Moga**
1238. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA PH.:1636-226807.
1239. REMIRA MOTORS PVT. LTD. (H602-H6-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001 PH.:0172-5020786, 5044849, 5020739.
1240. STAN AUTOS PVT LTD (L104-L1-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH.:0172-5020786, 5044849, 5020739.
1241. STAN AUTOS PVT LTD (L104-L1-02), PLOT NO.C-147, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH.:0172-5020739.
- MOHALI**
1242. C M AUTOSALES PVT. LTD. (0706-L1-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI - PUNJAB - 140110 PH.:828480597.
- MUKERIAN**
1243. HOSHIARPUR AUTOMOBILES (IP01-IP-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN - 144211 PH.:01883-217346.
- MUKTSAR**
1244. HIRA AUTOMOBILES LTD. (6302-JB-03), BHAI COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB - 152026 PH.:64642.
- MULLANPUR**
1245. SANDHU AUTOMOBILES (YY01-YY-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101 PH.:8437025969.
- NABHA**
1246. HIRA AUTOMOBILES LTD. (6302-UF-06), RADHA SWAMI ROAD, NABHA - 147201 PH.:01765-8437602800, 9217048403.
- NAKODAR**
1247. LOVELY AUTOS (3503-5B-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040 PH.:01821- 735554666, 9915028603.
- NANGAL**
1248. CM AUTOSALES PVT. LTD. (7K01-8F-02), PLOT#36 AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB - 140126 PH.:1884-9915022897.
- NAWANSIHLA**
1249. LOVELY AUTOS (3503-J7-02), NAWANSIHLA CHANDIGARH ROAD, VILL- LANGROHA, DISTT:-NAWANSIHLA, PUNJAB - 144514 PH.:01823-7355560006.
- PATHANKOT**
1250. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-01), NEAR MAMON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001 PH.:0188-47273.
1251. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-04), NEAR A. B. COLLEGE, PATHANKOT - 145001 PH.:0186-2233701, 9417900828.
- PATIALA**
1252. HIRA AUTOMOBILES LTD. (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001 PH.:0175-2232377.

DEALER WORKSHOP (AS ON 01.04.2017)

1253. HIRA AUTOMOBILES LTD. (6302-63-01), 13-B,
FACTORY AREA, PATTIALA - 147001
PH.:0175-2360131, 2360132, 2360562.
1254. HIRA AUTOMOBILES (6302-63-07), D-1A,
INDUSTRIAL FOCAL POINT, PATTIALA (PUNJAB).
- 147001
PH.:0175-2232295, 2232296.
1255. ATELIER AUTOMOBILES PVT. LTD. (6303-63-01),
VILLAGE MITHUMAJRA, RAJPURA-PATTIALA
ROAD, NEAR CASABA RESORT, PATTIALA -
147001
PH.:7527000106.
- PATRAN**
1256. HIRA AUTOMOBILES LTD. (6302-V3-02),
NARWANA ROAD, PATRAN, PUNJAB. - 147105
PH.:01764-244445, 245788.
- PHAGWARA**
1257. STAN AUTOS PVT LTD (3504-5C-02), PLOT
NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE
LUDHIANA - 141001
PH.:01824-508067.
- POHIR**
1258. STAN AUTO (6203-XS-05), NEAR AHMEDGARH
BYE PASS, POHIR, DISTRICT-LUDHIANA -
148101
PH.:0161-2885500, 2885100.
- RAIKOT**
1259. SANDHU AUTOMOBILES PVT. LTD.
(XT01-XT-01), BARNALA BY PASS ROAD,
RAIKOT - 141109
PH.:01624-8437700026.
- RAJPURA**
1260. HIRA AUTOMOBILES LTD. (HK01-HK-01),
VILLAGE BADHAK, RAJPUR PATIALA ROAD,
RAJPURA - 140401
PH.:01762-244881-84.
- RAMPURA PHUL**
1261. TARA AUTOMOBILES (XR01-XR-01), RAMPURA
-BARNALA ROAD, RAMPURA PHUL - 151103
PH.:01651-266643.
- ROPAR**
1262. CM AUTOSALES PVT. LTD. (7K01-7K-01),
CHANDIGARH ROPAR ROAD, ROPAR - 140001
PH.:01881-9915022802.
- SANGRUR**
1263. MAX AUTOS (G401-G4-01), DHURI ROAD,
SANGRUR, - 148024
PH.:1672-39627.
- SULTANPUR LODHI**
1264. STAN AUTO (3504-ZY-04), NEAR TALWADI
BRIDGE, TALWANDI ROAD, SULTANPUR LODHI,
DISTRICT-KAPURTHALA - 144626
PH.:01828-224222.
- TALWANDI SABOO**
1265. TARA AUTOMOBILES (ON01-ON-01), TALWANDI
RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL,
RAMAMANDI,TALWANDI SABO, BHATINDA -
1551302
PH.:9646691047, 8437008666.
- TALWARA**
1266. HOSHIARPUR AUTOMOBILES (H402-LR-07),
DAM ROAD, NEAR KALI MATA MANDIR,
VILLAGE-NAGAR, TALWARA, PUNJAB. - 144216
PH.:01883-238899, 295899, 9501084500.
- TANDA**
1267. HOSHIARPUR AUTOMOBILES (H402-DE-06),
VILL.PULPUKHATA, MIANI ROAD, TANDA -
144203
PH.:01886-294320.
- TARN TARAN**
1268. JAYCEE MOTORS (BLP1-BLP-01), VILLAGE -
KAKKA, KANDIALA, NEAR SANDHU PETROL
PUMP, AMRITSAR ROAD, TARAN TARAN,
PUNJAB - 143401
PH.:9780188456.
- ZIRA**
1269. BABA AUTOS (7C01-GK-02), FEROZEPUR ROAD,
ZIRA - 142047
PH.:1682-8437700230.
- ZIRAKPUR**
1270. TRICITY AUTOS (9M01-9M-01), PATIALA
HIGHWAY,VILLAGE - NABHA, ZIRAKPUR,
PUNJAB - 140603
PH.:9878359054.
- RAJASTHAN**
- ABU ROAD**
1271. NAVNEET MOTORS (QQ01-QQ-01), PLOT NO.
E-26, RIICO AMBAJI INDUSTRIAL AREA,
PALANPUR HIGHWAY, ABU ROAD DISTT.
SIROHI - 307026
PH.:7665000995.
- AJMER**
1272. AJMER AUTO AGENCIES PVT. LTD.
(B201-B2-01), SRINAGAR ROAD,AJMER
(RAJASTHAN) - 305001
PH.:0145-2426468.
1273. RELAN MOTORS (B203-B2-01), NEAR BIRLA
WATER TANK, PARABATPURA BYEPASS,
AJMER - 305001
PH.:9251057111.
- ALWAR**
1274. RELAN MOTORS (B203-B2-02), F-243 RIICO
INDUSTRIAL AREA, PALRA, AJMER - 305001
PH.:9251019000.
- BAGRU**
1275. M.G. MOTORS (F901-F9-01), MUKESH GENERAL
FINANCE COMPANY, ROAD NO. 2, NEAR MEO
BOARDING, ALWAR - 301001
PH.:0144-732236.
- BALOTRA**
1276. PREM MOTORS PVT. LTD. (US02-US-01),
JAIPUR-AJMER HIGHWAY, BAGRU,
DISTRICT-JAIPUR - 303007
PH.:141-2865921.
- BALOTRA**
1277. L.M.J SERVICES LTD (6502-9G-05), JODHPUR
BALOTRA ROAD,BALOTRA, RAJASTHAN -
344022
PH.:02988-220958.
- BANSWARA**
1278. NAVNEET MOTORS (X903-X9-01), NEAR J.C.
MILL,OPPOSITE AKASHWANI,DAHOD
ROAD,BANSWARA - 327001
PH.:02962-201123.
- BARAN**
1279. BHATIA & COMPANY (6101-PM-03), BESIDE
OJHA METAL, ATRU ROAD, BARAN - 325205
PH.:07453-230312.
- BARMER**
1280. L.M.J SERVICES LTD (6502-SH-06), G-216, RIICO
INDUSTRIAL AREA, BARMER - 344001
PH.:2982-224641.
- BASSI**
1281. PREM MOTORS PVT. LTD. (VF02-VF-01),
MOHAN PURA BASSI, JAIPUR, RAJASTHAN -
303301
PH.:8058794085.
- BEHROR**
1282. M G MOTORS (FQ01-FQ-01), B-168, RIICO
INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE,
BEHROR, DISTT: ALWAR. - 301701
PH.:8003165999.
- BHARATPUR**
1283. TM MOTORS PVT. LTD. (SJ01-SJ-01), BRIJ VIHAR
COLONY,MADARPUR
ROAD,BHARATPUR,RAJASTHAN - 321001
PH.:5644-226156.
- BHILWARA**
1284. CHAMPION CARS (E302-E3-01), CHITTORGARH
ROAD, BHILWARA, RAJASTHAN. - 311001
PH.:1482-513147.
- BHILWARA**
1285. LOHIA AUTOMOBILES (E301-DELHI-01), AJMER
ROAD,NEAR OCTROI POST,BHILWARA - 311001
PH.:1482-28061, 36934, 51419.
- BHIWADI**
1286. FORTUNE CARS (9H01-9H-01), OPP. INDAG
RUBBER,MAIN ROAD,BHIWADI - 301019
PH.:1493-645678.
1287. FORTUNE CARS (9H01-9H-02),
F-458-C,RIICO,INDUSTRIAL AREA,BHIWADI -
301019
PH.:1493-645682.
- BIJOLIA**
1288. LOHIA AUTOMOBILES (E301-UH-02), R/O
GOLDEN CORRIDOR, OPP. ASHOK LEYLAND
W/S, CHITTOR-BIJOLIA HIGHWAY, BIJOLIA,
DIST. -BHILWARA - 311602
PH.:9602515000.
- BIKANER**
1289. AUDI MOTORS LTD (7101-71-01), OPP. URMUL
DAIRY PLANT,GANGANAGAR ROAD,BIKANER -
334004
PH.:0151-522831, 61846.
1290. AUDI MOTORS LTD (7101-71-04), JAIPUR BYE
PASS,BIKANER
. - 334004
PH.:141-2793924-7.
1291. AUDI MOTORS LTD (7101-71-05), OPP.
AVYAPPAA TEMPLE, K. K. COLONY, BIKANER -
334003
PH.:151-2230384.
- BUNDI**
1292. BHATIA & COMPANY (6101-EF-02),
13-16B,INDUSTRIAL ESTATE,KOTA - 323301
PH.:0747-2445457.
- CHAKSU**
1293. K.P. AUTOMOTIVES (P) LTD. (1104-JM-03), TONK
ROAD, CHAKSU - 303901
PH.:1429-243517.
- CHIRAWA**
1294. AUDI MOTORS LTD. (SY02-SY-01), NEAR PILANI
CIRCLE, LOHARU ROAD, STATE HIGHWAY-8,
CHIRAWA - 333026
PH.:8696543583.
- CHITTORGARH**
1295. BHATIA & COMPANY (K901-K9-01), PLOT NO.
1001/1-1002/1,NIMBAHERA
ROAD,CHITTORGARH - 312001
PH.:1472-235299.
- CHOMU**
1296. SANGA AUTOMOBILES PVT. LTD.
(HW01-HW-01), OPPOSITE POWER HOUSE,
MORIJA ROAD, CHOMU - 303702
PH.:01423-223102.

DEALER WORKSHOP (AS ON 01.04.2017)

CHURU

1297. AUDI MOTORS PVT LTD (MD03-MD-01), NEAR DTO OFFICE, JAIPUR ROAD, CHURU - 331001 PH :8875009044.

DAUSA

1298. VIPUL MOTORS LTD. (1102-FM-03), AGRA JAIPUR ROAD, DAUSA - 303303 PH.:1427-222158.

DEOLI

1299. K.P. AUTOMOTIVE (Z001-Z0-01), KOTA- JAIPUR HIGHWAY, NH-12, DEOLI - 304804 PH.:9549651778.

DIDWANA

1300. SHRI MANGALAM AUTO PVT. LTD. (FT03-FT-01), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA , DISTRICT - NAGAUR. - 341303 PH.:7231912912.

DUDU

1301. PREM MOTORS PVT. LTD. (BRY1-BRY-01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU . - 303008 PH.:8058411161.

DUNGARPUR

1302. NAVNEET MOTORS (4902-GP-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001 PH.:2964-233788.

FATEHNAGAR

1303. TECHNOY MOTORS INDIA PVT. LTD. (4903-SV-03), UDAIPUR ROAD, OPP. HERO HONDA SHOWROOM, FATEHNAGAR, UDAIPUR - 313205 PH.:2955-223034.

HANUMANGARH

1304. AUDI MOTORS LTD (7101-S7-03), JUNCTION TOWN ROAD,HANUMANGARH - 335512 PH.:01552-231295.

HINDAUN

1305. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S002-S0-01), KHASRA NO. 737, VILLAGE - PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN . - 322230 PH.:8875005912.

JAIPUR

1306. KATARIA AUTOMOBILES (1181-11-01), 1-A ; NARAYANPUR,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034 PH.:141-2471740/2471014 /2471406.

1307. VIPUL MOTORS LTD. (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR - 302012 PH.:141-5194200.

1308. K.P. AUTOMOTIVES (P) LTD. (1104-11-01), E-198, SANGAR INDUSTRIAL AREA,MANSAROVAR,JAIPUR - 302020 PH.:0141-445534, 35, 36, 442605.

1309. PREM MOTORS PVT. LTD. (1112-11-02), 12 13,SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006 PH.:141-0141-2213065/2216229.

1310. SANGA AUTOMOBILES (1110-11-01), SECTOR 35, PRATAP NAGAR,SANGANER, JAIPUR - 302033 PH.:141-4110200.

1311. SANGA AUTOMOBILES (1110-11-03), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILOCHHOYAN MOHALLA, DELHI ROAD, JAIPUR - 302002 PH.:141-3050400.

1312. VIPUL MOTORS LTD. (1102-11-01), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017 PH.:0141-523339, 524045.

1313. K.P. AUTOMOTIVES (P) LTD. (1104-11-06), GROUND FLOOR, ORBIT MALL, AJMER ROAD, JAIPUR, RAJASTHAN - 302006 PH.:141-4079999.

1314. PREM MOTORS PVT. LTD. (1112-11-01), PLOT NO. E101/A, VKI , JAIPUR - 302039 PH.:141-305563.

1315. SATNAM MOTOCORP PVT. LTD. (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR - 302 022, RAJASTHAN . - 302022 PH.:0141-2771623.

1316. KTL PVT. LTD. (1114-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR . - 302012 PH.:0141-2345222.

JAISALMER

1317. LMJ SERVICES (SL01-5L-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY,HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) - 345001 PH.:9314223963.

JALORE

1318. SHRI KRISHNA AUTOSALES PVT. LTD. (VD01-VD-01), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE . - 343001 PH.:9001893669.

JHALAWAR

1319. BHATIA & COMPANY (6102-RV-02), OPP. BALAJI KI CHHATRI , KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001 PH.:07432-234009.

JHUNJHUNU

1320. AUDI MOTORS (FN03-FN-02), E-12, AUTOMOBILES SERVICE SECTOR, RICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU . - 333001 PH.:01592-2250024.

JOBNER

1321. PREM MOTORS PVT. LTD. (BRD1-BRD-01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL - PHULERIA, DISTRICT - JAIPUR, RAJASTHAN . - 303328 PH.:8058794094.

JODHPUR

1322. L.M.J.SERVICES LTD (6502-65-01), PRATAP NAGAR,JODHPUR - 340002 PH.:0291-28158, 33205.

1323. L.M.J.SERVICES LTD (6502-65-04), OPP TO RFC OFFICE,NEW POWER HOUSE ROAD,JODHPUR - 342003 PH.:0291-2617772.

1324. SRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A,HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005 PH.:0291-2748405.

1325. L.M.J.SERVICES LTD (6502-65-09), B-8.9.10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008 PH.:0291-4011147.

1326. L.M.J.SERVICES LTD (6502-65-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002 PH.:293-2256177.

KEKRI

1327. AJMER AUTO AGENCIES PVT. LTD. (B201-GZ-03), KOTA SAWAR ROAD,KEKRI - 305404 PH.:01467-222398.

KISHANGARH

1328. FORTUNE CARS (9H01-TU-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR . - 301405 PH.:1460-243323.

KOTA

1329. BHATIA & COMPANY (6101-61-01), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007 PH.:0744-451367, 22373, 26469.

1330. BHATIA & COMPANY (6102-61-01), AUTO MOBILE ZONE,G-11/12 INDUSTRIAL AREA, KOTA - 324005 PH.:0744-2439006.

1331. BHATIA & COMPANY (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007 PH.:9413550336.

1332. BHATIA & COMPANY (6101-61-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH.:0744-6450918.

1333. BHATIA & COMPANY (6101-61-06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324005 PH.:7446451110.

KOTPUTLI

1334. PREM MOTORS PVT. LTD. (MH09-MH-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108 PH.:8058794312.

KUCHAMAN

1335. SHRI MANGALAM AUTO PVT. LTD. (VA02-VA-01), SUDARSHAN NAGAR, BURSU ROAD, KHASRA NO.148, KUCHAMAN. - 341508 PH.:9649518518.

MAHWA

1336. VIPUL MOTORS PVT. LTD. (BKZ1-BKZ-01), KHASRA NO.37384, BHARATPUR ROAD BYE-PASS, N.H.-11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608 PH.:9887447928.

MAKRANA

1337. SHRI MANGALAM AUTO PVT. LTD. (CFX1-CFX-01), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRANA, DISTRICT - NAGAUR. - 341505 PH.:7231913913.

MALPURA

1338. K.P. AUTOMOTIVES PVT. LTD. (BLB1-BLB-01), PLOT NO.01, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH.:9549656456.

NAGAUR

1339. SHRI MANGALAM AUTO PVT. LTD. (HL03-HL-01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUR. PH.:01582-2242828, 242400,9116007210.

NASIRABAD

1340. AJMER AUTO AGENCIES PVT. LTD. (B201-VB-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601 PH.:9314391011.

NATHDWARA

DEALER WORKSHOP (AS ON 01.04.2017)

1341. LOHIA AUTOMOBILES (X201-TZ-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND - 313301 PH:2953-234761.
- NEEM KA THANA**
1342. JAMU AUTOMOBILES (P) LTD (K701-TV-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713 PH:1574-231575.
- NEEMRANA**
1343. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-OP-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT: ALWAR - 301705 PH:8875004356.
- NOKAR**
1344. AUDI MOTORS LTD (VE02-VE-01), OPP. RAILWAY STATION, NOHAR, DISTRICT:HANUMANGARH - 335523 PH:1555-220485.
- NOKHA**
1345. AUDI MOTORS LTD. (IS01-IS-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT - BIKANER (RAJASTHAN) - 334803 PH:8875010555.
- PALI**
1346. LMJ SERVICES (6502-J9-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH:2932-256277.
- PAOTA**
1347. K.P AUTOMOTIVES PVT. LTD. (BRH1-BRH-01), PATTI SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN - 303106 PH:9462686008.
- PRATAPGARH**
1348. BHATIA AND CO (PN01-PN-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605 PH:9414397142.
- RAISINGHNAGAR**
1349. AUDI MOTORS (BHK1-BHK-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT - SRIGANGANAGAR - 335051 PH:9982638516.
- RAJGARH**
1350. MG MOTORS (Y01-YI-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH:9001781777.
- RAJSAMAND**
1351. LOHIA AUTOMOBILES (X201-X2-01), BHILWARA ROAD,KHANKROLI,RAJSAMAND DISTT, RAJSAMAND - 313301 PH:2952-320460.
- RAMGANJMANDI**
1352. BHATIA & COMPANY (BAZ1-BAZ-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH:9414085790.
- RAWATBHATA**
1353. BHATIA AND COMPANY (JQ01-JQ-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA, DIST. CHITTORGARH, RAJASTHAN - 323307 PH:1475-214999,9462719294.
- SAGWARA**
1354. TECHNO MOTORS INDIA PVT. LTD. (CK01-CK-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025 PH:9530306910.
- SAWAI MADHOPUR**
1355. PREM MOTORS PVT. LTD. (FY03-FY-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001 PH:8658791638.
- SHAHPUR**
1356. K.P. AUTOMOTIVES (P) LTD. (1104-NH-05), VILLAGE RAJPURA,GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103 PH:8696934964.
- SIKAR**
1357. JAMU AUTOMOBILES (P) LTD (K701-K7-01), F-54,JAIPUR ROAD (NH-11),SIKAR - 332001 PH:1572-245515.
- SIRONI**
1358. NAVNEET MOTORS (4902-LK-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH:2972-222917.
- SOJAT**
1359. LMJ SERVICES LTD. (BW1-BWI-01), KHASRA NO. - 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104 PH:306104.
- SRI GANGANAGAR**
1360. AUDI MOTORS LTD (U201-U2-01), NEW AUTOMOBILE MARKET,SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001 PH:0154-2466225.
1361. AUDI MOTORS LTD (U201-U2-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001 PH:9982638516.
- SUJANGARH**
1362. AUDI MOTORS PVT. LTD. (BRB1-BRB-01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507 PH:7665722860.
- SUMERPUR**
1363. LM.J. SERVICES LTD. (6502-VC-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHREEA GROUND, SUMERPUR - 306902 PH:02933-274977,274978,9414411609.
- SURATGARH**
1364. AUDI MOTORS LTD (U201-LG-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804 PH:1509-224227, 224228.
- TONK**
1365. K P AUTOMOTIVES PVT LTD (GM01-GM-01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001 PH:1432-8696925252.
- UDAIPUR**
1366. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD,UDAIPUR - 313001 PH:0294-415143.
1367. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002 PH:0294-2494451-55.
1368. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002 PH:2955-220304.
- SIKKIM**
1369. ENTEL MOTORS (B901-B9-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102 PH:3592-649125, 232341, 232059.
- GANGTOK**
1370. ENTEL MOTORS (B901-ND-02), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121 PH:3595-257030, 257020, 257069.
- JORTHANG**
1370. ENTEL MOTORS (B901-ND-02), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121 PH:3595-257030, 257020, 257069.
- TAMIL NADU**
- ANNUR**
1371. JAI KRISHNA AUTO SALES PVT. LTD (DN01-DN-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653 PH:0422-0254-262744/ 9788850733.
- ARIYALUR**
1372. PILAI & SONS (EB01-EB-01), NO.1/1 , NEAR ULAVAR SANTHAI JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU) - 621704 PH:9442281302,9442418751.
- BHAVANI**
1373. AMBAL AUTO (H701-IG-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316 PH:0424-2230408.
- CHENGALPATTU**
1374. AIE CARS PVT. LTD. (BBS1-BBS-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. - 603002 PH:7299057387.
- CHENNAI**
1375. J.J IMPEX (MARUTI SERVICE MASTERS) (1485-14-01), # 9 (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH:044-43633366, 43633367.
1376. A.B.T LTD (1401-14-01), 102, MOUNT ROAD, GUINDY, CHENNAI - 600032 PH:044-42254544, 42254554.
1377. A.B.T LTD (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCTC ROAD, SALIGRAMMAM, CHENNAI - 600093 PH:044-23650490, 23650490.
1378. A.B.T LTD (1401-14-06), NO. 1 & 2, VASANTHA PRESS,ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020 PH:044-24465814, 24465815.
1379. A.B.T LTD (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106 PH:044-42267603, 42267621.
1380. A.B.T LTD (1411-14-01), 29, WALLEES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058 PH:044-42281720/708.
1381. C.A.R.S. INDIA PVT LTD. (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058 PH:044-26359600, 42947900.
1382. C.A.R.S. INDIA PVT LTD. (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020 PH:044-24461584, 24461584..

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | | |
|--|---|--|
| <p>1383. C.A.R.S. INDIA PVT LTD. (1403-14-03), 4/321,
OLD MAHABALIKPURAM RD., KOTTIVAKKAM,
CHENNAI - 600040
PH:44-43590914, 4294830.</p> <p>1384. C.A.R.S. INDIA PVT LTD. (1403-FP-04), NO.503,
G.N.T. ROAD, REDHILLS, CHENNAI - 600066
PH:044-26323434/4737.</p> <p>1385. C.A.R.S. INDIA PVT LTD. (1403-14-05), PLOT NO.-
80, BABU JAGAGEVAN RAM STREET,
GERUGAMBakkAM, CHENNAI - 600112
PH:044-23821862/ 23821852.</p> <p>1386. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-03),
PLOT NO. SP-35, 1ST MAIN ROAD, AMBATTUR
INDUSTRIAL ESTATE, CHENNAI - 600058
PH:044-3445000/45968000.</p> <p>1387. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-02),
5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI
- 600017
PH:044-64599892, 64599896..</p> <p>1388. KHIVRAJ MOTORS LTD (1404-14-01), 623
MOUNT ROAD, CHENNAI - 600006
PH:044-42269575.</p> <p>1389. POPULAR VEHICLES & SERVICES LTD.
(1410-14-01), NO.11, ARUNACHALAM ROAD,
SALIGRAMAM, CHENNAI - 600093
PH:044-65877973, 974, 975, 65610801, 802, 803,
804, 805, 806, 42136611.</p> <p>1390. POPULAR VEHICLES & SERVICES LTD.
(1410-14-02), OLD NO.155, NEW NO.123,
PONRANJITHAM COMPLEX, MEDAVAKKAM
MAIN ROAD, NEAR BUS TERMINUS,
KEEKATTALAI, CHENNAI - 600117
PH:044-6452544/64526444.</p> <p>1391. POPULAR VEHICLES & SERVICES LTD.
(1410-14-03), NO. 3, 200 RING ROAD, RETTERI
JUNCTION, RETTERI, CHENNAI - 600099
PH:044-64626410/ 64626411.</p> <p>1392. VISHNU CARS (1427-14-02), 1/61, LUZ CHURCH
ROAD, NEAR KAMADHENU THEATRE
MYLAPORE, CHENNAI - 600004
PH:044-24661973/74/75.</p> <p>1393. VISHNU CARS (1427-14-01), NO. 91, GST ROAD,
ALWITONE ESTATE, BEHIND LAXMI THEATRE,
PALLAVARAM, CHENNAI - 600043
PH:044-40175555.</p> <p>1394. KHIVRAJ MOTORS LTD (1404-14-03), SURVEY
NO. A1& A2, SIDCO INDUSTRIAL ESTATE,
GUINDY, CHENNAI - 600032
PH:044-24490230/05/06.</p> <p>1395. ABT LTD (1401-14-00), NO.2/170, ECR ROAD,
INJAMBAKKAM, CHENNAI TAMIL NADU - 600041
PH:044-2449056/6, 42281700, 42281749.</p> <p>1396. AIE CARS (A UNIT OF A.I. ENTERPRISES (P)
LTD.) (1484-14-01), PLOT NO.1,2,3 & 4, SURVEY
NO.91/2, B1, A2 & B, NEELANKARAI, EAST
COAST ROAD, CHENNAI - 600115
PH:044-30193020/30193019.</p> | <p>1397. RAJALAKSHMI CARS (1486-14-01), OLD DOOR
NO.69, NEW DOOR NO.20,GRAND NEILLORE
TRUNK ROAD, MADHAVARAM, CHENNAI - 600066
PH:044-33015454/ 893999545.</p> <p>1398. KHIVRAJ MOTORS PVT. LTD. (1480-14-02), PLOT
NO.119 & 120, ELECTRICAL & ELECTRONICS
INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI -
600096
PH:44-9043019626/ 7092033013.</p> <p>1399. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-04),
NO.225,JAWAHARALAL NEHRU ROAD,
KOYAMBEDU, CHENNAI - 600107
PH:044-42066000-23.</p> <p>1400. ABT LTD (1401-14-04), NO. 1/132, RAJEEV
GANDHI SALAI, SHOLINGANALLUR, DISTRICT –
CHENNAI, TAMIL NADU - 600119
PH:044-24502185-87.</p> <p>1401. VISHNU CARS PVT. LTD. (1427-14-03), 4/13
LOYAL GARDEN, KALAHATHAMMAN KOVIL
STREET, RAMAPURAM, CHENNAI, TAMIL NADU -
600089
PH:044-875440002/ 9677244332.</p> <p>1402. VISHNU CARS PVT. LTD. (1487-14-01), NO.203
TO 206 MOUNT POONAMALLE ROAD,
KATTUPAKKAM, CHENNAI - 600056
PH:26792961/26792962.</p> <p>1403. VISHNU CARS PVT. LTD. (1487-14-02), NO.120,
MAMBakkAM MAIN ROAD, MEDAVAKKAM,
CHENNAI - 600100
PH:044-984092994/ 984094478.</p> <p>1404. VISHNU CARS PVT. LTD. (1427-14-04), NEW S.
NO. 314/1B1A, PALLAVARAM - THORAIPAKKAM
RADIAL ROAD, NEAR OLD CHETTINADU
CEMENT GOWDOWN, KEELAKATTALAI,
CHENNAI - 600117
PH:044-994005775.</p> <p>1405. VISHNU CARS PVT. LTD. (1427-14-06), PLOT NO.
4, MORISON 4 STREET, ALANDUR, CHENNAI -
600016
PH:044-32531117.</p> <p>1406. RAJALAKSHMI CARS PVT. LTD. (1486-14-02),
OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN
ROAD, MADURAVOYAL, CHENNAI - 600095
PH:044-43870090, 893999541.</p> <p>1407. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-06),
PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET
AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY
TO TELEPHONE EXCHANGE, CHENNAI - 600058
PH:740193035.</p> <p>COIMBATORE</p> <p>1408. A.B.T LTD (4101-41-05), LAKSHMI THEATRE
BUILDING, T.S. NO. 1199/2, TS WARD NO. 3,
KEMPATTY COLONY, SOUTH UKKADAM,
COIMBATORE - 641001
PH:0422-4232660, 4232666.</p> <p>1409. A.B.T LTD (4101-41-06), 744, PULIYAKULAM
ROAD, P.N. PALAYAM, COIMBATORE - 641037
PH:0422-4232588, 4232550.</p> <p>1410. A.B.T LTD (4101-41-08), 15/55-C, ALAGESAN
ROAD (EAST), METTUPALAYAM ROAD,
COIMBATORE - 641043
PH:0422-228155.</p> <p>1411. A.B.T LTD (4101-41-04), NO 49, PANKAJA MILL
ROAD, OPP INDIAN EXPRESS OFFICE,
RAMANATHAPURAM, COIMBATORE - 641045
PH:0422-4516000, 4390434.</p> <p>1412. AMBAL AUTO (4103-41-01), IYER HOSPITAL
PREMISES, TRICHY ROAD, COIMBATORE -
641005
PH:0422-3075000, 3075001.</p> <p>1413. AMBAL AUTO (4103-41-03), 555, NSR ROAD,
SAIBABA COLONY, COIMBATORE - 641011
PH:0422-2450211, 3075203..</p> <p>1414. AMBAL AUTO (4103-41-08), SF-94, SATHY MAIN
ROAD, VISWASAPURAM, SARAVANNAMPATTI,
COIMBATORE - 641013
PH:0422-3075800.</p> <p>1415. AMBAL AUTO (4103-41-07), NO 44, KANNUSAMY
GOUNDER STREET, OORGOUNDER THOTTAM,
SANGANUR, COIMBATORE - 641027
PH:0422-2331646.</p> <p>1416. JAIKRISHNAA AUTOSALES PVT. LTD.
(4107-41-01), 8/60,C8/62-D, METTUPALAYAM
ROAD, G.N.MILLS POST, NEARJOHNBOSCO
CHURCH,COIMBATORE - 641029
PH:0422-4519140.</p> <p>1417. JAIKRISHNAA AUTOSALES PVT. LTD.
(4107-41-02), DOOR NO. 48, KAMARAJAR ROAD,
LAKSHMI PURAM, PELAMEEDU, COIMBATORE,
TAMIL NADU - 641004
PH:0422-4383220.</p> <p>1418. AMBAL AUTOMOBILES (4103-41-0C), SENGUPTA
STREET, RAM NAGAR, COIMBATORE - 641009
PH:0422-3009600/ 3009602.</p> <p>1419. SREE SARADHAMBAL AUTOMOBILES PVT. LTD.
(4103-41-0D), 98/1 VILANKURUCHI MAIN ROAD,
THANEER PANDAL ROAD, COIMBATORE -
641009
PH:0422-2511773.</p> <p>1420. AADHI CARS PVT. LTD. (4108-41-01), NO.176/2,
SATHYAMANGALAM ROAD, SARAVANAPATTI,
COIMBATORE - 641035
PH:8754099117/ 875405977.</p> <p>1421. ABT LTD (4101-41-03), 36-A GANDHI NAGAR,
SUNDARAPURAM, COIMBATORE (DIST)
COIMBATORE - 641024
PH:0422-9994408618/ 9500911243.</p> <p>1422. AADHI CARS PVT. LTD. (4108-41-02), NEAR
KOVAL MEDICAL CENTRE & HOSPITAL,
AVINASHI ROAD, CIVIL AERODROME POST,
CHINNIYAMPALAYAM, COIMBATORE - 641004
PH:0422-8754045421/ 8754045443.</p> | <p>1423. AADHI CARS PVT. LTD. (4108-41-03), NO.71, OLD
SRIRAM THEATRE COMPLEX, MARUDHA MALAI
MAIN ROAD, VADAVALLI, COIMBATORE - 641041
PH:0422-300221/ 300204.</p> <p>1424. AADHI CARS PVT. LTD. (4108-41-04), PLOT
NO.295, RADHA RANI THEATER COMPLEX,
NEAR JAYASHANTHI THEATER, TRICHY ROAD,
ONDIPUDUR, COIMBATORE - 641005
PH:4000777.</p> <p>1425. SREE SARADHAMBAL AUTOMOBILES PVT. LTD.
(4103-41-0E), PLOT NO. 210, PALAKAD ROAD,
BK PUDUR, COIMBATORE, TAMIL NADU -
641008
PH:9047077775.</p> <p>1426. JAIKRISHNAA AUTOSALES PVT. LTD.
(4107-OH-04), NO.12/190 SRKV PORT, MTR
ROAD, P.N. PALAYAM, COIMBATORE - 641020
PH:0422-698899.</p> <p>COONOOR</p> <p>1427. AMBAL AUTOMOBILES (3G01-3G-01), 78 E,
BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS
DIST- TN - 643102
PH:0423-2202254.</p> <p>CUDDALORE</p> <p>1428. A.B.T LTD (5Q01-5Q-01), K. V. SUBRAMANIAM
NAGAR, CHIDAMBARAM MAIN ROAD,
CUDDALORE O. T - 607003
PH:04142-227699, 227599..</p> <p>DHARAPURAM</p> <p>1429. AMBAL AUTO (H701-QN-04), OPP. TO
ANJANEYAR TEMPLE, NEAR FIVE CORNER,
MADURAI ROAD, DHARAPURAM - 638656
PH:04258-301107/ 301103.</p> <p>DHARMAPURI</p> <p>1430. SRI AMMAN CARS INDIA PVT. LTD.
(7001-5R-02), NEAR COLLECTOR BUNGALOW,
OLD HOSUR ROAD, JETTIHALLI (PO),
DHARMAPURI , TAMILNADU - 636807
PH:0342-233933.</p> <p>DINDIGUL</p> <p>1431. PLA MOTORS (S401-S4-01), NO. 5, TRICHY
MADURAI BY PASS ROAD, NH-45, DINDIGUL -
624001
PH:0451-3098300.</p> <p>ERODE</p> <p>1432. SREE SARADHAMBAL AUTOMOBILES PVT. LTD.
(H701-H7-01), 23/1, PERUND, URAI ROAD,
ERODE, - 638011
PH:0422-3056600/ 3056602.</p> <p>GOBICCHETTIPALAYAM</p> |
|--|---|--|

DEALER WORKSHOP (AS ON 01.04.2017)

1433. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (H701-QM-03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH:04285-302001/ 302005.
- QUDUVANCHERRY**
1434. VISHNU CARS (BAD1-BAD-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203 PH:9500121553/ 9677122225.
- GUMMIDIPOONDI**
1435. RAJALAKSHMI CARS PVT. LTD. (BIZ1-BIZ-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPOT INDUSTRIAL COMPLEX, VILLAGE – PAPPANAKUPPAM, GUMMIDIPOONDI, THIRUVALLUR - 601201 PH:8939995454 / 8939853972.
- HARUR**
1436. SRI AMMAN CARS INDIA PVT. LTD. (AAV1-AAV-01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903 PH:04346-9790004273/ 9790004279.
- HOSUR**
1437. SRI AMMAN CARS INDIA PVT. LTD. (TQ01-TQ-01), P.O. PERANDAPALI,NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 PH:4344-260277.
- IDAPPADI**
1438. THRIVENI CAR COMPANY PVT LTD. (HI01-HI-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101 PH:04283-222300.
- KANCHEEPURAM**
1439. GANESH CARS PVT LTD (C601-JA-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH:044-6727522/27277771.
- KARAIKUDI**
1440. A.B.T LTD (4202-HX-05), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302 PH:04565-232484, 232486..
- KARUR**
1441. A.B.T LTD (K401-K4-01), SF NO. 529/1, SALEM BY PASS,ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002 PH:04324-222261/62/63.
- KATPADI**
1442. GANESH CARS (C601-APA-04), 170/2B, THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH:0416-9842313139/ 9842333061.
- KINATHUKADAVU**
1443. AAHDH CARS PVT. LTD. (BB1-BBI-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109 PH:0422-3000506/ 3000505.
- KOTAGIRI**
1444. AAHDH CARS PVT. LTD. (BAS1-BAS-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU - 643217 PH:04266-8754045891/ 8754045442.
- KOVILPATTI**
1445. ASIR AUTOMOBILES PVT. LTD. (NO01-NO-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501 PH:04632-232220.
- KRISHNAGIRI**
1446. SRI AMMAN CARS INDIA PVT. LTD. (7001-QL-03), NH-7,NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001 PH:975089555/ 8220003948.
- KUMBAKONAM**
1447. PILLAI & SONS MOTORS CO. (E701-N4-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501 PH:0435-2442566,65.
- MADURAI**
1448. A.B.T LTD (4202-42-02), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018 PH:0452-2547108, 2547125..
1449. A.B.T LTD (4202-42-04), 09, 109A, GST ROAD, TIRUPARKUNDIRAM, MADURAI - 625005 PH:0452-4387050/152.
1450. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH:0452-2688888.
1451. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. - 625000 PH:0452-2688889.
1452. ASIR AUTOMOBILES PVT. LTD. (4206-42-01), D. NO. 28/5B, MELUR MAIN ROAD, UTHANKUDI, MADURAI . - 625107 PH:0452-4382220.
- METTUPALAYAM**
1456. A.B.T LTD (4101-EU-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043 PH:04254-228155.
- NAGERCOIL**
1457. SRIVATS INTERNATIONAL PVT. LTD. (S902-S5-01), PLOT NO. 31B1-1, BEACH ROAD JUNCTION, KOTTAR, NAGERCOIL, DISTRICT-KANYAKUMARI, TAMIL NADU. - 629002 PH:04652-232344, 23344/ 8973423332.
- NAMAKKAL**
1458. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (X401-X4-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL - 637001 PH:04286-307507, 307512.
1459. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (X401-X4-03), 1/12/1 NEAR PON NAGAR, MUDALAI PATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001 PH:04286-307500-502.
- OMALUR**
1460. SRI AMMAN CARS INDIA PVT. LTD. (7001-UM-04), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPTATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012 PH:04277-9730004273/ 9750799555.
1461. THRIVENI CAR COMPANY PVT LTD. (UM01-UM-01), PLOT NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT, NH-7, KAMALAPURAM VILLAGE, OMALUR, DISTRICT – SALEM, TAMIL NADU - 636309 PH:04290-222611, 711.
- OTY**
1453. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU . - 625008 PH:2489074.
- MALLUR**
1454. THRIVENI CAR COMPANY PVT LTD. (CDH1-CDH-01), SURVEY NO.50/4A, AMANI AMMAPALAYAM VILLAGE, DISTT.: DADHAGAPATTY SUB REGISTRATION , MALLUR DISTT. SALEM - 636309 PH:427-2422399, 2440000.
- MAYILADUTHURAI**
1455. PILLAI & SONS MOTORS CO. (E701-AG-04), 46,VELLAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007 PH:04364-43542303/ 43542306.
- PETTUPALAYAM**
1456. A.B.T LTD (4101-EU-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043 PH:04254-228155.
- PERAMBALUR**
1464. PLA MOTORS (2305-DQ-04), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212 PH:0431-403361/3461.
- POLACHI**
1465. A.B.T LTD (L301-L3-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003 PH:04295-37010,37020.
- PUDUKOTTAI**
1466. PLA MOTORS (2305-5U-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI . - 622003 PH:04322-265566/67.
- RAJAPALAYAM**
1467. A.B.T LTD (4202-5V-03), NO. 10/32, DHARMAPURAM, SRIVILLIPUTHUR MAIN ROAD, RAJAPALAYAM - 626125 PH:04563-260298.
- RASIPURAM**
1468. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (BSJ1-BSJ-01), SURVEY NO.41/1 B1A, MOOLAKADU VILLAGE, MASAKALPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401 PH:04287-231177.
- SALEM**
1469. A.B.T LTD (4101-A2-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009 PH:0427-4066988, 406999.
1470. THRIVENI CAR COMPANY PVT LTD. (A203-A2-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005 PH:0427-2440000/ 2336599.
1471. S.M.CARS PVT. LTD. (A204-A2-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202 PH:7094448000, 7034449000.
- SANKAGIRI**

DEALER WORKSHOP (AS ON 01.04.2017)

1472. THRIVENI CAR COMPANY PVT LTD.
(BTN1-BTN-01), SURVEY NO.171/5B, KCK
PLAZA, KACHERIDADU, DEPUTY COLLECTOR
ROAD, SALEM, SANKAGIRI (TAMIL NADU) -
637301
PH:4283-242600.

SANKARANKOVIL

1473. AADHI CARS PVT. LTD. (BXS1-BXS-01), PLOT
NO. 132/H, OPPOSITE TO NEW TALUK OFFICE,
TIRUVENGADAM ROAD, SANKARANKOVIL -
627756
PH:04636-223331
8754043378.

SATHYAMANGALAM

1474. SREE SARADHAMBAL AUTOMOBILES PVT. LTD.
(BGU1-BGU-01), SURVEY NO. 51, 54 & RS NO.
37, KOTTUVEERAMPALAYAM VILLAGE,
SATHYAMANGALAM - 638 401, DISTRICT –
ERODE, TAMIL NADU - 638401
PH :222026/ 222036.

SIVAKASI

1475. MEENAKSHI AUTO ZONE PVT. LTD.
(X602-X6-01), 372 D & E, ARUNACHALAM
COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. -
626123
PH:04562-231281.

SRIPERUMBUDUR

1476. RAJALAKSHMI CARS PVT. LTD. (7B01-7B-01),
SURVEY NO. 150/1A, DOOR NO 1C, THERADI
STREET, NEW VILLAGE NO 42,
SRIPERUMBUDUR, KANCHEEPURAM DISTRICT,
TAMIL NADU . - 602105
PH:044-65683041.

SULUR

1477. JAI KRISHNA AUTO SALES PVT. LTD
(4107-TK-05), DOOR NO. 37 F,
RANGANATHAPURAM, TRICHY ROAD, SULUR
PH:0422-3199901.

TANJAVUR

1478. PILLAI & SONS MOTORS CO. (E701-E7-01), 12A,
SELVAM NAGAR, TANJAVUR, TAMILNADU -
613007
PH:04362-71723, 71724.

TENKASI

1479. AADHI CARS PVT. LTD. (BXR1-BXR-01), DOOR
NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI
MAIN ROAD, VILLAGE – KUNARAMANALLUR,
TENKASI . - 627814
PH:04636-252050.

THIRUMULLAIVoyal

1480. KAPICO MOTORS (INDIA) PVT. LTD
(CDW1-CDW-01), NO. 48, BALAJI NAGAR, NEW
SIR IRVANSTADE FORD HOSPITAL,
THIRUMULLAIVoyal DISTT: CHENNAI - 600062
PH:9551070545.

THIRUVALLUR

1481. KHIVRAJ MOTORS LTD (1404-HH-04), 2151,
KAKKULLUR ROAD, THIRUVALLUR - 602001
PH:044-27662888.
1482. KHIVRAJ MOTORS LTD (1404-HH-05), PLOT
NOS.218,219,220,225,226,227,228 AND
S.NOS.18/5,18/6, EMPIRE CITY PART-3,
KAKKULLUR VILLAGE, THIRUVALLUR THALUK,
THIRUVALLUR - 602001
PH:9791070359.

THIRUVARUR

1483. PILLAI & SONS MOTORS CO. (E701-LJ-03),
THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE
- 610001
PH:04366-250250.

THUCKALAY

1484. SRIVATS INTERNATIONAL PVT. LTD.
(BWQ1-BWQ-01), D NO. 5/78B,
THIRUVITHANCODE ROAD, KERALAPURAM,
MUTHALAKURCHI, VILLAGE –
MUTHALAKURCHI, THUCKALAY, DISTRICT –
KANYAKUMARI - 629174
PH:4651-252592, 8973218881.

TRUCHENDUR

1485. ASIR AUTOMOBILES PVT. LTD. (CCJ1-CCJ-01),
SURVEY NO. 220/D1A, 221/3, 221/4, 221/5,
221/5A, 221/5B, PODHIGAI NAGAR,
VILLAGE-VEERAPANDIYAPATINAM,
THRUCHENDUR, TUTUCORIN. - 628215
PH:04639-246220.

TRUCHENGODE

1486. AMBAL AUTO (X401-QP-02), PLOT NO-10, OPP
TO PONNUSWAMY KALYANA MANDAPAM,
KOOTAPALLI COLONY, TIRUCHENGODE -
637001
PH:04288-282292/ 306726.

TRUNAMALAI

1487. GANESH CARS PVT.LTD (C601-LX-03), NO.-5,
NH-78, KRISHNAGIRI PONDY ROAD, CHINA
KANKEYANUR, OPP SKP ENGG. COLLEGE,
THIRUVANNAMALAI - 606601
PH:04175-249319.

TRUNELVELI

1488. AADHI CARS PVT. LTD. (A303-A3-01), PLOT NO.
261, MADURAI MAIN ROAD, KARAIERUPPU,
TIRUNELVELI, TAMIL NADU - 627357
PH:0462-2300040/ 9500991487.

TIRUPUR

1489. A.B.T LTD (4101-Y7-09), NO. 4, SABHAPATHI
PURAM, NEAR TMF HOSPITAL, TIRUPUR -
641601
PH:0421-4305686 , 4305640.

1490. SHASHI CAR PVT LTD (Y701-Y7-01), SRI
PADMINI GARDENS, KANGEYAM ROAD, OPP.
ST JOSEPH SCHOOL, TIRUPUR - 641604
PH:0421-2430275/ 2430276.

TRICHY

1491. A.B.T LTD (2302-23-02), 4/40, COLLECTOR
OFFICE ROAD, CANTONMENT, TRICHY - 620001
PH:0431-4221602 , 4221603..

1492. A.B.T LTD (2302-23-03), MADRAS TRUNK ROAD,
MAMBALASALAI, TRICHY - 620005
PH:0431-4221555, 4221564.

1493. PLA MOTORS (2305-23-01), NO. 18/2, NA-45,
DHEERAN NAGAR, TRICHY-DINDUGAL MAIN
ROAD, TRICHY - 620009
PH:0431-240361, 9843055561.

1494. PLA MOTORS (2305-23-03), 10A & B, ALEXANDRIA
ROAD, CANTONMENT, TRICHY - 620001
PH:0431-2411540/530.

TUTICORIN

1495. ASIR AUTOMOBILES PVT. LTD. (S603-S6-01),
SURVEY NO. 25/1B, MAPILLAIURIN VILLAGE,
ETTAYAPURAM ROAD, TUTICORIN, TAMIL
NADU - 628002
PH:2337220/ 7373120220.

UDUMALPET

1496. ABT LTD (OR01-QR-01), 2/3, PERIYAKOTTAI
PIRIVI, S.V. MILL POST, UDUMALPET - 642126
PH:04252-222572/ 222573.

UTHANGARAI

1497. SRI AMMAN CARS INDIA PVT. LTD.
(CFY1-CFY-01), SURVEY NO. 104/1, 104/1B,
VILLAGE – THANDIYAPANNUR, UTHANGARAI,
KRISHNAGIRI - 635304
PH:9790004273.

VALLYUR

1498. AADHI CARS PVT. LTD. (BXQ1-BXQ-01), DOOR
NO. 314A/11-14, WITHIN VADAKU VALLYOOR,
REVENUE VILLAGE, VADAKU VALLYOOR
PANCHAYAT, RADHAPURAM TALUK, VALLYOOR.
- 627002
PH:04857-223000.

VANIYAMBADI

1499. GANESH CARS PVT. LTD. (BJY1-BJY-01), NO.
197/1B1, NH-46 (AH-7), PETHAKALLUPALLI
VILLAGE, NEAR TOLL GATE, VANIYAMBADI ,
VELLORE (DIST), TAMIL NADU - 635801
PH:291520.

VELLORE

1500. GANESH CARS PVT.LTD (C601-C6-01), 91 NEW
BY-PASS ROAD, VELLORE - 632004
PH:0416-6454221, 2233709.

VILLUPURAM

1501. A.B.T LTD (S001-QQ-02), 264/1, GINGEE MAIN
ROAD, AYINAMPALAYAM, VILLUPURAM - 605602
PH:04146-225509.

VIRUDHACHALAM

1502. ABT LTD (BMA1-BMA-01), PLOT NO. 56,
JUNCTION ROAD, NEAR SHANMUGA LODGE,
VIRUDHACHALAM, DISTRICT – CUDDalore,
TAMIL NADU . - 606101
PH:04143-262631,32,33.

TELANGANA

ADILABAD

1503. ADARSHA AUTOMOTIVES PVT LTD
(BTM1-BTM-01), SURVEY NO:131/6 & 131/7,
NH-44, ADILABAD TOWN ROAD, MAVALA,
ADILABAD, TELANGANA . - 504001
PH:08732-779978453.

ARMUR

1504. VARUN MOTORS PVT. LTD. (BBN1-BBN-01),
SURVEY NO.277, ARGUL VILLAGE,
JAKARANPALLY (MANDAL), ARMUR,
NIZAMABAD DISTT. (A.P.) - 503224
PH:08643-812281424; 26/26/27.

BHUPALPALLY

1505. ADARSHA AUTOMOTIVES PVT. LTD.
(DS02-BCF-04), 6-113, JAWAHAR NAGAR, MAIN
ROAD, SBH MAIN BRANCH ROAD,
BHUPALPALLY, DISTRICT - WARANGAL,
ANDHRA PRADESH - 506169
PH:08715-7799790526.

CHEVELLA

1506. GEM MOTORS INDIA PVT. LTD. (CBL1-CBL-01),
SURVEY NO. 17/A, MANDAL - CHEVELLA,
DISTRICT – RANGA REDDY, TELANGANA . -
510101
PH:9912899128.

GADWAL

1507. SRI JAYARAMA MOTORS PVT LTD
(WP01-BHR-02), PLOT NO. 5 & 6, BESIDE RURAL
POLICE STATION, KURNool ROAD, MAHABUB
NAGAR DISTRICT, ANDHRA PRADESH - 500125
PH:08546-8096990074.

GHATKESAR

1508. ACER MOTORS PVT. LTD. (BYL1-BYL-01), 3-21,
JODIMETLA, CHOURA RIGID VILLAGE
GHATKESAR MANDAL, DISTRICT – RANGA
REDDY . - 501301
PH:040-9849017827.

HYDERABAD

DEALER WORKSHOP (AS ON 01.04.2017)

1509.	RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD PH :040-9848062263.	1522.	VARUN MOTORS PVT. LTD. (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD - 500037 PH :040-3778035,3778036, 3777979.	1534.	GEM MOTORS (INDIA) PVT. LTD. (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA - 500089 PH :040-9912899128.	1544.	JANGAON
1510.	SAI SERVICE PVT. LTD. (1011-10-02), #2-3-505,ML GARDENS, AMBERPET, HYDERABAD (A.P.) - 500013 PH :040-65646565.	1523.	VARUN MOTORS PVT. LTD. (4603-10-0A), 1-11-200,SHAMMALA BUILDING BEGUMPET, HYDERABAD - 500016 PH :040-27766533.	1535.	JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SQUARE, VILLAGE - GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032 PH :040-768004666, 970483556.	1545.	ADARSHA AUTOMOTIVES PVT. LTD. (K101-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH :8716-9959223393.
1511.	GEM MOTORS (INDIA) PVT. LTD. (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR,,HYDERABAD , ANDHRA PRADESH - 500084 PH :040-40506070.	1524.	VARUN MOTORS PVT. LTD. (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F,31, MALAKPET, HYDERABAD - 500036 PH :040-4553395, 4547676.	1536.	JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-02), SURVEY NO.1136, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081 PH :970483556.	1546.	KAMAREDDY
1512.	GEM MOTORS (INDIA) PVT. LTD. (1009-10-02), 2-11, SURVEY NO. 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH :40-40302525.	1525.	VARUN MOTORS PVT. LTD. (4603-10-0B), ADITYA NAGAR COLONY, ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE), HYDERABAD, HYDERABAD - 500008 PH :40-64551700.	1537.	KALYANI MOTORS PVT. LTD. (1018-10-02), M/S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE - KARMAHGATH, MANDAL - SAROORNAGAR, DISTRICT - RANGA REDDY, HYDERABAD. - 500079 PH :970483556.	1547.	VARUN MOTORS PVT. LTD. (1011-10-01), PLOT NO. VI- VII & B UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH :40-24027677.
1513.	RKS MOTORS PVT. LTD. (1003-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482 PH :040-3371115, 33.	1526.	VARUN MOTORS PVT. LTD. (1010-10-01), PLOT NO. VI- VII & B UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH :40-24027677.	1538.	ADARSHA AUTOMOTIVES PVT. LTD. (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA RAO EXPRESSWAY), RAJENDRANAGAR, UPPERPALLY, ATTAPUR, RANGA REDDY, HYDERABAD, TELANGANA - 500048 PH :9703152222.	1548.	KARIMNAGAR
1514.	RKS MOTORS PVT. LTD. (1003-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039 PH :040-7200193, 7204444.	1527.	VARUN MOTORS (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.15, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008 PH :040-901460070.	1539.	SAI SERVICE PVT. LTD. (1011-10-07), PLOT NO.B-21 & B-34, BHEL ANCIILARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH :040-766181100.	1549.	MITHRA AUTO AGENCIES PVT LTD (2604-16-02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003 PH :08742-222444.
1515.	RKS MOTORS PVT. LTD. (1003-10-04), 16-11-19/5/2C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036 PH :040-23434576, 77.	1528.	RKS MOTORS PVT. LTD. (1003-10-08), D.NO.1-10-1/2651, OPP. VEGETABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062 PH :040-49054905,9010822210.	1540.	ADARSHA AUTOMOTIVES PVT. LTD. (1014-10-01), 18-245 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERABAD - 500005 PH :040-8142326633.	1550.	KHAMMAM
1516.	RKS MOTORS PVT. LTD. (1003-10-05), 11-6-191/192,OPP. HOTEL HARSHA,PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD - 500001 PH :040-23432390, 391.	1529.	SAI SERVICE PVT. LTD. (1011-10-04), H.NO.16-2-839/410, SAIDABAD, L.B.NAGAR, HYDERABAD - 500059 PH :040-888612309,23808080.	1541.	RKS MOTORS PVT. LTD. (1003-10-09), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072 PH :040-23432311.	1551.	MUTHRA AUTO AGENCIES PVT LTD (2604-16-02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003 PH :08742-222444.
1517.	SAI SERVICE PVT. LTD. (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, BALANAGAR, HYDERABAD - 500037 PH :040-44604000.	1530.	VARUN MOTORS PVT. LTD. (4603-10-0G), 1-10-28/1 SY. NO. 285, KUSHAGUDA, NEAR ECIL ROADS, HYDERABAD - 500062 PH :040-779900098.	1542.	SAI SERVICE PVT. LTD. (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD - 500018 PH :040-913346300.	1552.	ADARSHA AUTOMOTIVES PVT LTD (K101-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH :8716-9959223393.
1518.	THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD AZAMABAD INDUSTRIAL AREA, HYDERABAD. - 500020 PH :040-7662481, 7618488, 761786,7630422.	1531.	VARUN MOTORS PVT. LTD. (4603-10-0H), PLOT NO. 135/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBILEE HILLS, HYDERABAD, ANDhra PRADESH - 500033 PH :040-64551700.	1543.	KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT NO. A-23 & A31/1, L.D.A, NACHARAM, HYDERABAD - 500076 PH :040-66985555, 9100114877.	1553.	ADARSHA AUTOMOTIVES PVT LTD (K101-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH :8716-9959223393.
1519.	THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10,NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081 PH :040-23114567, 3444.	1532.	VARUN MOTORS PVT. LTD. (4603-10-0J), PLOT NO. 1-45, SY.NO.1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE - 500019 PH :040-9885206555.	1544.	SAI SERVICE PVT. LTD. (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD - 500018 PH :040-913346300.	1554.	ADARSHA AUTOMOTIVES PVT LTD (K101-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH :8716-9959223393.
1520.	THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8,NEAR MARGADARI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074 PH :040-24122222.	1533.	KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT NO. A-23 & A31/1, L.D.A, NACHARAM, HYDERABAD - 500076 PH :040-66985555, 9100114877.	1545.	ADARSHA AUTOMOTIVES PVT LTD (K101-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH :8716-9959223393.		
1521.	THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD - 500076 PH :040-27176999.						

DEALER WORKSHOP (AS ON 01.04.2017)

-
1552. PAVAN MOTORS PVT. LTD (WR01-WR-01), SURVEY NO-940 &943, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD,MIRYALAGUDA ,NALGONDA DISTRICT,ANDHRA PRADESH - 508207 PH :06689-879000399.
- MOINABAD**
1553. GEM MOTORS (INDIA) PVT. LTD. (CFN1-CFN-01), SURVEY NO. 70, PLOT NO. 4, VILLAGE AND GRAM PANCHAYAT – HIMAYATH NAGAR, MANDAL – MOINABAD, DISTRICT – RANGA REDDY . 500075 PH :9912899128.
- NALGONDA**
1554. PAVAN MOTORS PVT. LTD (AN01-AN-01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001 PH :06622-247399,8790344499.
- NIRMAL**
1555. ADARSHA AUTOMOTIVES PVT LTD (N601-AA-02), H. NO. 1-1-131, SHASTRINAGAR, ,MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106 PH :8734-9912752344.
- NIZAMABAD**
1556. VARUN MOTORS PVT. LTD. (1H02-1H-01), PLOT NO. GP / 1-7/4/1,PANGARA BORGOA,NIZAMABAD - 503230 PH :06642-234248.
- PARSI**
1557. VARUN MOTORS (CBO1-CBO-01), HOUSE NO. 2-356 JAYAHAJI COMPLEX, SURVEY NO. 217/E4, JAYANTHI NAGAR COLONY, MANDAL – PARGI, DISTRICT – RANGA REDDY . 510501 PH :06556-988521055, 9885200000.
- RAMAGUNDAM**
1558. ADARSHA AUTOMOTIVES PVT. LTD. (BG1-BG4-01), 5-6-172 SURVEY NO. - 259/B, MEDIPALLY SHIVAR, RAMAGUNDAM MUNICIPALITY, DISTRICT – KARIM NAGAR, ANDHRA PRADESH - 505209 PH :06728-886144550.
- RAMAYAMPET**
1559. VARUN MOTORS PVT. LTD. (CDO1-CDO-01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT – MEDAK . - 502101 PH :9685206555.
- SANGAREDDY**
1560. SAI SERVICE PVT. LTD. (1011-OI-05), H.NO.4-8/2/1/4/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH :08455 -278090,7799360003.
- SECUNDERABAD**
1561. ACER MOTORS (K601-K6-01), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, - 500015 PH :040-7740774, 7747559.
1562. AUTOFIN LIMITED (K606-K6-01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011 PH :040-67295858.
1563. SAI SERVICE PVT. LTD. (1011-K6-06), PLOT NO. 1-8-308/3/1, PATIGADDA, BEGUMPET, SECUNDERABAD, TELANGANA - 500016 PH :040-27904644.
1564. VARUN MOTORS PVT. LTD. (4603-K6-01), 1-10-176/1, BEHIND VARUN TOWERS-I, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE - 500016 PH :040-9985552452.
1565. RKS MOTORS PVT. LTD (K605-K6-01), PLOT NO. 207, TADBUND, SECUNDERABAD . - 500009 PH :040-23434520, 9010834567.
1566. PAVAN MOTORS PVT. LTD (K608-K6-01), PREMISES NO.6-1-17/A AND 6-1-18, WALKER TOWN, PADMARAO NAGAR, SECUNDERABAD . - 500025 PH :040-27502750.
1567. AUTOFIN LIMITED (K606-K6-02), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD.
- SHAD NAGAR**
1568. SRI JAYARAMA MOTORS (P) LTD (WS01-WS-01), SURVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH . - 500216 PH :08548-8096991424.
- SHANKARPALLY**
1569. SAI SERVICES PVT. LTD. (CEX1-CEX-01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT . - 501203 PH :8416-9966377888, 9912899128.
- SIDDIPET**
1570. ADARSHA AUTOMOTIVES PVT. LTD. (CAL1-CAL-01), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA . - 502103 PH :0457-888862222, 7799784525.
- TANDUR**
1571. VARUN MOTORS PVT. LTD. (CFR1-CFR-01), H. NO. 2-1-203, 2-1-203/A & 2-1-209, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA . - 501141
- THORRUR**
1572. ADARSHA AUTOMOTIVES PVT. LTD. (BV1-BVY-01), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL . - 506163 PH :9059438007.
- VIKARABAD**
1573. GEM MOTORS (INDIA) PVT. LTD. (BYM1-BYM-01), SHOP NO. 3-2-9/2, VILLAGE – YENNAPALLY, VIKARABAD MUNICIPALITY, VIKARABAD, DISTRICT – RANGA REDDY, TELANGANA . - 501101 PH :8416-9912349840.
- WANAPARTHY**
1574. SRI JAYARAMA MOTORS (P) LTD (WQ01-WQ-01), SURVEY NO.1149, KURNool ROAD, WANAPARTHY (A.P.) . - 509103 PH :08543-954248662.
- WARANGAL**
1575. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL . - 506007 PH :0870-2623359.
1576. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-03), OPPOSITE TO ORUGALLU FILLING STATION, HUNAMKONDA, WARANGAL . - 506001 PH :0870-2523349, 9959223393.
- ZAHIRABAD**
1577. SAI SERVICE PVT. LTD. (BAT1-BAT-01), PLOT NO-5-NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD, MEDAK (DIST),ANDHRA PRADESH - 502220 PH :8451-9966377888.
- TRIPURA**
1578. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA . - 799003 PH :0381-230542.
1579. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA . - 799003 PH :0381-2371402, 9436123592.
1580. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJA & TEHSIL .- KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA . - 799008 PH :0381-9436121559.
- AMBASSA**
1581. JAIN UDYOG (CDT1-CDT-01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA . - 799289 PH :9436123592.
- DHARMANAGAR**
1582. JAIN UDYOG (6901-RN-03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH) . - 799250 PH :3822-23047, 9774040553.
- UDAIPUR**
1583. JAIN UDYOG (YU01-YU-01), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR,TRIPURA (SOUTH) . - 799116 PH :3821-222640/9774020152.
- UNION TERRITORY**
- PANCHKULA**
1584. AUTO VOGUE PVT. LTD. (K303-K3-01), PLOT NO. 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA . - 134113 PH :8725099358.
- UTTAR PRADESH**
- Agra**
1585. PRIME MOTORS (6681-66-01), 8B/7D, BYE PASS ROAD, DEV NAGAR, AGRA PH :0562-2531881,2531882.
1586. MADHUSUDAN MOTORS PVT LTD (6603-66-01), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - 282005 PH :0562-531102-05.
1587. MADHUSUDAN MOTORS PVT LTD (6603-66-02), GANESH GAJN, PRATAPPURA, AGRA - 282001 PH :0562-3297501.
1588. MADHUSUDAN MOTORS PVT LTD (6603-66-03), 6-A , VIBHAV INDUSTRIAL STATE, AGRA - 282007 PH :0562-3299221.
1589. MADHUSUDAN MOTORS PVT LTD (6603-66-04), 26/253, SULTAN GANJ KI PULJA, MAUZA LASKARPUR, AGRA - 283203 PH :9837097894.
1590. PREM MOTORS PVT. LTD. (6605-66-01), KHASRA NO.382,386,387,388, VILLAGE ARTHONI, DELHI-AGRA HIGHWAY, NH-2, AGRA, UTTAR PRADESH - 282007 PH :9690010795, 3215315/16.
1591. KTL PVT. LTD (6605-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004 PH :8449715033, 8449700000.
1592. PREM MOTORS PVT. LTD. (6607-66-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002 PH :0562-2523022, 9690010795.

DEALER WORKSHOP (AS ON 01.04.2017)

1593. KTL PVT. LTD (6606-66-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001 PH :05622-4100001
1594. KTL PVT. LTD. (6606-66-03), 44/320 B, MAUJA BODLA, BODLA CHOWK, AGRA - 282007 PH :0562-8449715091, 7060404416.
- AKBARPUR**
1595. KTL PVT. LTD. (2801-LH-03), KANPUR ROAD, AKBARPUR - 292026 PH :7408409304.
1596. SMARTWHEELS PVT. LTD. (7201-LH-08), TANDA ROAD, VILL.BEHRAICHUP, PO-KATRIYA YAKOOPUR, AKBARPUR , DIST-AMBEDKAR NAGAR (U.P.) - 224122 PH :244570.
- ALIGARH**
1597. VINEET MOTORS (MSZ) (B681-B6-02), PLOT NO.D-138 & 139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH PH :9917473052, 9582123586.
1598. DEV MOTORS (P) LTD (B601-B6-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001 PH :0571-521771.
- ALLAHABAD**
1599. AMITDEEP MOTORS (2901-29-01), 26 SULEM SARAI, G.T ROAD, ALLAHABAD - 211001 PH :0532-2636301, 2436360.
1600. GREENLAND MOTORS (2903-29-01), 40, INDUSTRIAL ESTATE, TELEGANJ, ALLAHABAD - 211004 PH :0532-9838107735.
1601. GREENLAND MOTORS (2903-29-03), 52/36, LUKERGANJ, ALLAHABAD - 211001
- AMETHI**
1602. KTL PVT LTD (1302-AAY-07), PLOT NO – E 32, INDUSTRIAL AREA TEKARI, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR - 227409 PH :05368-24445.
- AURAIYA**
1603. KULDEEP MOTORS (QJ01-QJ-01), NEAR INDIAN OIL TIRHA, KANPUR ROAD, AURAIYA - 206241 PH :9235358444.
- AZAMGARH**
1604. DEEP MOTORS (K501-K5-01), HARBANSHPUR NARAUJI, AZAMGARH - 276001 PH :05462-325387.
1605. DEEP MOTORS (K501-K5-03), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH - 276138 PH :9638072923.
- BAHERI**
1606. KAVISHA MOTORS PVT. LTD. (BSB1-BSB-01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201 PH :7895980110.
- BHARIAKH**
1607. ANAND MOTORS (1301-SZ-05), LUCKNOW ROAD,BEHRAICH,UTTAR PRADESH - 271801 PH :7860786161.
- BAKSHI KA TALAB**
1608. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-II-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020 PH :9638075960, 9628300000.
- BALLIA**
1609. DEEP MOTORS (K501-BA-02), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001 PH :9638072917.
- BALRAMPUR**
1610. ANAND MOTOR AGENCIES LTD. (XB01-XB-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201 PH :05263-232144.
- BANDA**
1611. MY CAR PVT. LTD. (2803-KV-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001 PH :9839029868.
- BARABANKI**
1612. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-6A-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001 PH :9638075960.
- BARAUT**
1613. RAJ SNEH AUTO INDIA PVT LTD (4803-LL-04), DELHI SAHARANPUR ROAD, OPP.POLICE CHECK POST, NEAR VERDHMAN- DHARAM KANTA, BARAUT - 250611 PH :9837581179.
- BAREILLY**
1614. CORAL MOTORS (P) LTD. (5602-56-01), STATION ROAD, BAREILLY - 243001 PH :0581-559191.
1615. CORAL MOTORS (P) LTD. (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243000 PH :0581-0581-255492.
1616. KAVISHA MOTORS PVT. LTD. (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502 PH :0581-480404,5,6,7,8.
- BASTI**
1617. SMARTWHEELS PVT. LTD. (7201-6B-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002 PH :05542-286294.
- BHADOHI**
1618. VARANASI MOTORS PVT. LTD. (8402-TT-02), VARNASI ROAD, BHADOHI - 221401 PH :9638360662.
- BIJNOR**
1619. RAJ SNEH AUTO INDIA PVT LTD (4803-6D-03), PLOT NO. CFC INDUSTRIAL AREA, OPPOSITE SUGAR MILL, NAGINA ROAD, BIJNORE - 246701 PH :01342-246701.
- BILASPUR**
1620. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-BCN-01), NH-87, OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR - 244921 PH :0595600005, 7247800009.
- BUDAUN**
1621. CORAL MOTORS (P) LTD. (5602-NF-04), PLOT NO. 72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103 PH :9837891846.
- BULANDSEHAR**
1622. SK & COMPANY (M581-M5-02), KHASRA NO. 2261, NEAR T POINT , BY PASS SHIKARPUR ROAD , BULANDSHAHAR. PH :05732-235400.
- BULANDSHAHAR**
1623. ROHAN MOTORS LTD. (T201-M5-02), PLOT NO-561, M.T. VILLAGE AKBARPUR, OPP. PANDIT PETROL PUMP, BULANDSHAHAR, UTTAR PRADESH - 203001 PH :9758418546.
- CHANDAUSI**
1624. AKANKSHA AUTOMOBILES PVT. LTD. (XA01-XA-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412 PH :254111.
- DEOBAND**
1625. ATELIER AUTOMOBILES (XK01-XK-01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001 PH :7500250042.
- DEORIA**
1626. SMARTWHEELS PVT. LTD. (M601-M6-01), PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST. -DEORIA, UTTAR PRADESH - 274001 PH :05568- 7705800602.
- ETAH**
1627. MADHUSUDAN VEHICLES PRIVATE LTD. (XG01-XG-01), 472 ASROLI, GT ROAD, ETAH - 207125 PH :9637097894.
- ETAWAH**
1628. KULDEEP MOTORS (6E01-6E-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001 PH :05688-257029.
- FAIZABAD**
1629. SMARTWHEELS PVT. LTD. (7201-F5-02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH - 224001 PH :05278-309333.
- FARRUKHABAD**
1630. MY CAR PVT. LTD. (2803-TS-04), NEKPUR KALAN, FARRUKHABAD - 209625 PH :9639029868.
- FATEHABAD**
1631. KTL PVT LTD (BLQ1-BLQ-01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKPARA MODE, FATEHABAD, DISTRICT – AGRA, UTTAR PRADESH - 283111 PH :8449715063.
- FATEHPUR**
1632. KTL PVT. LTD. (2801-TM-04), NH-2, OPP. RTO OFFICE, KANPUR ROAD, FATEHPUR - 212601 PH :7408409304.
- FEROZABAD**
1633. MADHUSUDAN VEHICLES PRIVATE LTD (DF01-DF-01), 746, ALI NAGAR KEJRA , NEAR RAJA KA TAL CROSSING, NH2, FEROZABAD - 283203 PH :05612-9690003035.
- GAJRAULA**
1634. AKANKSHA AUTOMOBILES PVT. LTD. (XD01-XD-01), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA - 244235 PH :9697069329.
- GHAZIABAD**
1635. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD PH :9999107841, 9997093422.

DEALER WORKSHOP (AS ON 01.04.2017)

-
- | | | | |
|--|--|---|--|
| <p>1636. KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR,HAPUR ROAD,GHAZIABAD PH:2714140, 9210026200.</p> <p>1637. REGEANT AUTOLINKS (P) LTD (5902-59-01), A-109 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001 PH:0120-2706034-37, 0120-4641900,911,904.</p> <p>1638. ROHAN MOTORS LTD. (5904-59-01), 432 MUKAND NAGAR, G.T.ROAD, GHAZIABAD - 201001 PH:0120-4375182,7307176, 4730176, 4734218.</p> <p>1639. ROHAN MOTORS LTD. (5904-59-02), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD - 201102 PH:0120-971738833,9971466644.</p> <p>1640. T.R. SAWHNEY MOTORS PVT LTD (5905-59-01), PLOT NO. 98, RAJINDER NAGAR INDUSTRIAL AREA, MOHAN NAGAR, GHAZIABAD, DISTT. - GHAZIABAD, U.P. - 201007 PH:750326561.</p> | <p>HAPUR</p> <p>1648. ROHAN MOTORS (6G01-6G-01), DELHI-HAPUR ROAD, OPPOSITE SSV INTERCOLLEGE,HAPUR, DISTRICT- GHAZIABAD - 245101 PH:+11222313203.</p> | <p>1660. S B CARS PVT LTD (2806-28-01), 77B , FAZALGANJ, KANPUR - 208012 PH:0512-2241660.</p> <p>1661. MY CAR PVT. LTD. (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004 PH:0512-3067601.</p> <p>1662. S B CARS PVT LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017 PH:7408430365.</p> | <p>1673. KTL LIMITED (1302-13-03), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016 PH:0522-2340183,86.</p> <p>1674. KTL LIMITED (1302-13-04), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005 PH:9918451222.</p> |
| <p>1641. AGR AUTOMOBILES PVT. LTD. (8403-KT-03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001 PH:0542-2361136.</p> | <p>HARDOI</p> <p>1649. CONCEPT CARS PVT. LTD. (QE01-QE-01), NANAK GANJ, LUCKNOW ROAD, HARDOI - 241001 PH:.9792971496.</p> <p>1650. CONCEPT CARS PVT. LTD. (QE01-QE-04), PLOT NO. 1609 & 1605 GANGA BUX PURWA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001 PH:0607005857.</p> | <p>1663. GREENLAND MOTORS (AYA1-AYA-01), OPP. NAVEEN SAMITI MANDI STHAL, MANJHANPUR, KAUSAMBHI - 211001 PH:9919202043, 9838107762.</p> | <p>1675. ONE UP MOTORS INDIA PVT. LTD. (1306-13-01), C-16A,TRANSPORT NAGAR,KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012 PH:9918100801.</p> <p>1676. ONE UP MOTORS INDIA PVT. LTD. (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH:9839015046.</p> |
| <p>1642. SMARTWHEELS PVT. LTD. (7201-FZ-07), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH ROAD, GONDA, UTTAR PRADESH, - 271001 PH:233598.</p> | <p>HATHRAS</p> <p>1651. DEV MOTORS (P) LTD (B601-LP-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS - 204101 PH:9917435500.</p> | <p>1664. PREM MOTORS PVT. LTD. (BJZ1-BJZ-01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA - JAIPUR HIGHWAY, KIRAWALI, DISTRICT - AGRA, UTTAR PRADESH. - 283122 PH:7055007646.</p> | <p>1677. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH:9838075960.</p> |
| <p>1643. SMARTWHEELS PVT. LTD. (7201-72-01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012 PH:220267, 3090906.</p> | <p>JAGDISHPUR</p> <p>1652. BRIGHT 4 WHEELS SALES PVT. LTD. (XG01-XC-01), KATHORA,MUSAFAIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH - 227817 PH:06438-9712526961 , 9628374814.</p> | <p>1665. SUMITRA DS MOTORS PVT LTD (W201-M3-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001 PH:262583/4/5.</p> | <p>1678. ONEUP MOTORS INDIA PVT. LTD. (1306-13-04), PLOT NO. 1/5, PATRAKARPURAM ROAD, VINEET KHAND, GOMTI NAGAR , LUCKNOW, UTTAR PRADESH - 226010 PH:0522-0522-4943666 , 9918102991.</p> |
| <p>1644. SMARTWHEELS PVT. LTD. (7201-72-06), NEAR B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012 PH:0551-3090906.</p> | <p>KATHUA</p> <p>1653. KIRTIKUNJ AUTOMOBILES PVT. LTD. (H601-6H-01), KHANPUR AKBAR, KUTTUPUR TIRAH - 222001 PH:9554951026.</p> | <p>1666. SURI AUTOMOBILES (6001-6J-03), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH:9451496015.</p> | <p>1679. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW . - 226001 PH:7705911825, 9838075929.</p> |
| <p>1645. SMARTWHEELS PVT. LTD. (7202-72-01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. - 273209 PH:9235401004.</p> | <p>KATHUA</p> <p>1655. KTL PVT. LTD. (2801-EM-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725 PH:7408409304.</p> | <p>1667. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW PH:0522-2473369.</p> | <p>MADHOGANJ</p> <p>1680. CONCEPT CARS PVT. LTD. (BH11-BH-01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241001 PH:7607696666.</p> |
| <p>1646. ROHAN MOTORS LTD. (T201-T2-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH - 201306 PH:0120-451739,40,09,01, 2560564, 2569984-85, 3092597.</p> | <p>KANNAUJ</p> <p>1656. KTL PVT. LTD. (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002 PH:0512-290459.</p> | <p>1668. ANAND MOTOR AGENCIES LTD. (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105 PH:0522-315791, 315792, 315000, 7080000469.</p> | <p>MAHARAJGANJ</p> <p>1681. SMARTWHEELS PVT. LTD. (E101-EI-01), NEAR PHARENDI TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303 PH:0523-7705803113.</p> |
| <p>1647. KTL LTD. (QH01-QH-01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301 PH:7408409304, 9235443403.</p> | <p>KANPUR</p> <p>1657. KTL PVT. LTD. (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007 PH:0512-401390.</p> | <p>1669. ANAND MOTOR AGENCIES LTD. (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW - 226016 PH:0522-3098257, 7080000463.</p> | <p>MAHMUDABAD</p> <p>1682. CONCEPT CARS PVT. LTD. (AAN1-AAN-01), IN FRONT OF POWER HOUSE, SIDAULI ROAD, MAHMOODABAD (U.P.) - 261203 PH:05864-253893.</p> |
| | <p>1658. MY CAR PVT. LTD. (2803-28-01), 84/54 C, JARIB CHOWKI,G.T. ROAD, KANPUR - 208003 PH:0512-3988833.</p> | <p>1670. ANAND MOTOR AGENCIES LTD. (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW - 226024 PH:0522- 4103406/407/408, 7080000464.</p> | <p>MAHOBIA</p> <p>1683. SURI AUTOMOBILES (6001-RM-02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBIA, UTTAR PRADESH. - 284001 PH:5281-244344, 9451496015.</p> |
| | <p>1659. MY CAR PVT. LTD. (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022 PH:0512-2691756.</p> | <p>1671. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-01), 11/CP - 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022 PH:0522-2739501.</p> | <p>MAINPURI</p> <p>1684. KULDEEP MOTORS (6E01-SG-02), SKP-4A, MAINPURI - 205001 PH:9235258444.</p> |

DEALER WORKSHOP (AS ON 01.04.2017)

MALIHABAD

1685. ONE UP MOTORS INDIA PVT. LTD.
(BODI-BOD-01), KHASRA NO. 326/1 AND 327,
VILLAGE PARGANA, TEHSIL - MALIHABAD,
DISTRICT - LUCKNOW, UTTAR PRADESH. -
227111
PH:9918100781.

MATHURA

1686. UMA MOTORS PVT. LTD. (H801-H8-01), 68,
MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM
STONE 146, MATHURA - 281004
PH:0565-2463043/ 6290700.

MERUT

1687. UNIQUE CAR SCANNERS (4881-48-01), PLOT
NO:51/4, SURAJ KUND ROAD, MEERUT,
PH:9568001008.
1688. RAJ SNEH AUTO INDIA PVT LTD (4803-48-01),
210, DELHI ROAD, NEAR AMAR UJALA, MEERUT
- 250001
PH:0121-2408038.

1689. RAJ SNEH AUTO INDIA PVT LTD (4803-48-02),
GARH ROAD, OPP. PURI PETROL PUMP,
MEERUT, UTTAR PRADESH - 250003
PH:121-2408031-35.

1690. TANYA MOTORS (4802-48-01), 35 CHIPPY TANK,
BEGUM BRIDGE ROAD, MEERUT - 250001
PH:0121-4020006, 64829.

1691. TANYA MOTORS (4802-48-03), 40, NAUCHANDI
GROUND, MEERUT - 250001
PH:0121-4026208, 2658008, 09, 10.

1692. RAJSNEH AUTO INDIS PVT. LTD. (4803-48-05),
NEAR TAKSHILA COLONY, OPP. MEDICAL
COLLEGE, GARH ROAD, MEERUT - 250002
PH:9568007373, 9837581179.

1693. RAJ SNEH AUTO INDIA (P) LTD. (4803-48-06),
OPP. KONARK COLONY, NEAR RAJMANDIR
MANDAP, RORKEE ROAD, MEERUT (U.P.) -
250000
PH:0121-2575787, 2575797.

1694. RADHA GOVIND AUTOMOBILES PVT. LTD.,
(4807-48-01), VILLAGE - BARAL, KUNDA GATE
NEAR YOGI FARM HOUSE, PARTAPUR, DELHI
ROAD, MEERUT. - 250002
PH:7456001001.

MIRZAPUR

1695. STAR CARS (K602-K6-01), PILI KOTHI, STATION
ROAD, MIRZAPUR, UTTAR PRADESH - 231001
PH:9450544961.

MODINAGAR

1696. MOTORCRAFT SALES PVT. LTD. (5903-M7-02),
OPPOSITE SONIA ENCLAVE, ADJACENT
SUMAN CINEMA, NH-58, MODINAGAR - 201204
PH:01232-244001, 9219444550.

MOHANLAL GANJ

1697. BRIGHT 4 WHEEL SALES PVT. LTD.
(BWU1-BWU-01), KHASRA PLOT NO.581,
VILLAGE PURSANI, PARGANA AND TEHSIL
MOHANALGANJ, LUCKNOW DISTT., UTTAR
PRADESH - 227305
PH:7571905966.

MORADABAD

1698. AKANKSHA AUTOMOBILES PVT. LTD.
(B401-B4-01), DELHI ROAD, 5TH.KM,
MORADABAD (U.P.) - 244001
PH:0591-2485111, 2480888, 2487722.
1699. AKANKSHA AUTOMOBILES PVT. LTD.
(B401-B4-03), 5TH KM DELHI ROAD,
MORADABAD - 244001
PH:9219404041.

1700. AKANKSHA AUTOMOBILES PVT. LTD.
(B401-B4-04), KHASRA NO. 569-570, VILLAGE -
KAJIPURA, KANT ROAD, MORADABAD, UTTAR
PRADESH. - 244001
PH:7895600005.

MUZZAFARNAGAR

1701. RADHA GOVIND (H903-H9-01), NH -58 ,121 KM
STONE, BY-PASS ROAD, NEAR TRANSPORT
NAGAR, MUZZAFARNAGAR - 251001
PH:9412210301.

NAUGARH

1702. SMARTWHEELS PVT. LTD. (QG01-QG-01), NEAR
PAKARI CHAURAHIA, NAUGARH ROAD,
SIDDHARTHNAGAR - 272205
PH:05544-211078.

NOIDA

1703. FAST TRACK AUTO CARE INDIA PVT. LTD.
(A185-A1-01), A-13, SECTOR 63, NOIDA, G.B.
NAGAR
PH:120-4581111/31.

1704. JKM MOTORS (A184-A1-01), A-25,SECTOR
9,DISTT. GAUTAM BUDH NAGAR,NOIDA
PH:0120-4052400.

1705. MOTORCRAFT INDIA PVT LTD (A181-A1-02),
C-125,SECTOR-63,NOIDA,
PH:0120-2402671-72.

1706. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
& 9,SECTOR-8,NOIDA
PH:0120-532222.

1707. FAIR DEAL CARS PVT. LTD. (A103-A1-01), D-39,
SEC-10, NOIDA - 201301
PH:0120-4747300, 301.

1708. ROHAN MOTORS LTD. (A102-A1-01), C-8/9,
SECTOR - I, NOIDA - 201301
PH:0120-4071900, 209,31,32,2529407, 2530535,
253929, 2556663.

1709. ROHAN MOTORS LTD. (A102-A1-02), C-11,
SECTOR-1, NOIDA, UTTAR PRADESH - 201301
PH:0120- 4071900, 209,31,32..

1710. MOTORCRAFT SALES PVT. LTD. (5903-A1-03),
D-39, SECTOR-10, NOIDA - 201301
PH:9818660077, 9810500000.

1711. VIPUL MOTORS LTD. (A101-A1-02), B-124 &
B-125, SECTOR - 5, NOIDA, UTTAR PRADESH -
201301
PH:8800785532, 9818600000.

1712. VIPUL MOTORS PVT. LTD. (A106-A1-01), J-14,
SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH
NAGAR (U.P.) - 201301
PH:0120-4758605.

ORAI

1713. S B CARS PVT.LTD (2806-LU-02), KANPUR
ROAD, ORAI - 285001
PH:9307219303.

PILIBHIT

1714. CORAL MOTORS (P) LTD. (IL01-IL-01), BISALPUR
ROAD, PILIBHIT, U.P. - 262001
PH:9837891846.

PRATAPGARH

1715. GREENLAND MOTORS (2903-NK-02), PITAI KA
PURVA, JOGAPUR, ALLAHABAD ROAD,
PRATAPGARH - 230001
PH:9638075757.

PURANPUR

1716. CORAL MOTORS (P) LTD. (CAD1-CAD-01),
KHASRA NO. 768 & 770, VILLAGE - KHAMRIYA
PATTI, PURANPUR - PILIBHIT ROAD, TEHSIL
AND PARGANA - PURANPUR, DIST. PILIBHIT. -
262124
PH:05880-9837891846, 9927001120.

RAIBAREILLY

1717. KTL LIMITED (1302-HS-05), PLOT NO. 1550,
GULLUPUR, P O KATWARA,
HUARCHANDRAPUR, RAIBAREILLY - 229303
PH:0532-937177411,415.

RAMNAGAR

1718. NAINITAL MOTORS PVT. LTD. (XM01-XM-01),
BASAI, KASIPUR ROAD, RAMNAGER - 244137
PH:05947-282013.

RAMPUR

1719. AKANKSHA AUTOMOBILES PVT. LTD.
(B401-GL-02), JUDGES ROAD, RAMPUR, UTTAR
PRADESH - 244901
PH:0595-9219415225.

RAYA

1720. UMA MOTORS PVT. LTD. (BXK1-BXK-01),
CHAUDHARY PADAM SINGH MARKET, NEAR
INDIA INTER COLLEGE, RAYA - MAANT ROAD,
RAYA, DISTT. MATHURA (U.P.) - 281204
PH:9837204254.

SAHARANPUR

1721. ATELIER AUTOMOBILES PVT. LTD.
(S202-S2-01), NEAR BARI NAHAR, AMBALA
ROAD, SAHARANPUR - 247001
PH:0173-2395001.

SAHIBABAD

1722. FAST TRACK SERVICES, (M981-M9-01), PLOT
NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA,
SAHIBABAD, DISTT. GHAZIABAD (U.P.).
PH:9560868111.
1723. FAIR DEAL CARS PVT. LTD. (0845-M9-01), 12/67
SITE 4, INDUSTRIAL AREA, SAHIBABAD,
GHAZIABAD - 110095
PH:0120-4740409/102/436.

1724. MOTORCRAFT SALES PVT. LTD. (5903-M9-01),
S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA,
NEAR DABUR CHOWK, SAHIBABAD - 201010
PH:0120-4172222 / 410222.

1725. T.R. SAWHNEY MOTORS PVT LTD (0819-M9-03),
28/1/I, SITE-IV, SAHIBABAD INDUSTRIAL
AREA,DISTT- GHAZIABAD, UTTAR PRADESH -
201010
PH:024753300, 9811020333.
1726. MARKETING TIMES AUTOMOBILES PVT LTD
(0887-M9-02), PLOT NO. 509 & 511, WAZIRABAD
LONI ROAD, OPP. SHALIMAR GARDEN,
SAHIBABAD DISTT GHAZIABAD,U.P. - 201005
PH:0673298702, 9818799910.

SAMBHAL

1727. AKANKSHA AUTOMOBILES PVT. LTD.
(BBP1-BBP-01), PLOT NO. 303, NEAR TAJ MILK
FACTORY, MORADABAD SAMBHAL ROAD,
SAMBHAL, UTTAR PRADESH - 244302
PH:0592-3232400.

SANDILA

1728. CONCEPT CARS PVT. LTD. (WY01-WY-01),
NEAR PUNJAB NATIONAL BANK, LUCKNOW
ROAD, SUMBABAGH, SANDILA - 241204
PH:06854-270001.

SHAHABAD

1729. CONCEPT CARS PVT. LTD. (AAX1-AAX-01),
VILLAGE MUJAGADH, SHAHABAD - 241124
PH:9151783146.

SHAHJAHANPUR

1730. SUMITRA DS MOTORS PVT LTD (W201-W2-01),
SITAPUR ROAD, NH-24, SHAHJAHANPUR -
242001
PH:05842-220333, 233909.

SHAMLI

1731. RADHA GOVIND AUTOMOBILES PVT. LTD.
(XJ01-XJ-01), KHERI KARMU, OPPOSITE
POWER HOUSE, PANIPAT-KAIRANA ROAD,
SHAMLI UTTAR PRADESH - 247776
PH:1398-244571, 244572-73.

DEALER WORKSHOP (AS ON 01.04.2017)

SHIKOHABAD

1732. MADHUSUDAN VEHICLES PRIVATE LTD.,
(XH01-XH-01), 2508, KATRA MIRA,
MAHAMMABAD, OPP PROFESSOR COLONY, NH
2, BYE PASS ROAD, SHIKOHABAD, DISTT:
FIROZABAD UTTAR PRADESH - 283203
PH: 9837097895E-019.

SITAPUR

1733. CONCEPT CARS PVT. LTD. (QE01-6M-02),
LUCKNOW-DELHI ROAD, NH-24, VILLAGE
JAMMAYAPUR, SITAPUR - 261001
PH: 9161284000.

SULTANPUR

1734. KIRTIKUNJ AUTOMOBILES PVT. LTD.,
(N101-N1-01), SHAURYAMAU, MIRANPUR,
VARANSI-LUCKNOW HIGHWAY, NH-56
(FAIZABAD BYPASS) SULTANPUR - 228001
PH: 05362-227760, 220107.

THAKURDWARA

1735. AKANKSHA AUTOMOBILES PVT. LTD.,
(K001-KO-01), 2 KM. MORADABAD ROAD, NEAR
JEETA KA DHABA, SAHAB GANJ (MUNSHI
GANJ), THAKURDWARA, DISTT. MBD. UTTAR
PRADESH - 244601
PH: 7895980519.

UNCHAHAR

1736. KTL PVT. LTD. (1302-IH-06), ALLAHABAD
LUCKNOW ROAD, NEAR PURANA PETROL
PUMP, WARD NO. 5, SALON, UNCHAHAR,
DISTT: RAIBARELI - 229404
PH: 9451133888.

UNNAO

1737. VISHAL WHEELERS PVT. LTD. (1382-KL-01),
PLOT NO. 116A, KANPUR-LUCKNOW BYE PASS,
UNNAO, UTTAR PRADESH,
PH: 0515-2830610, 2831248.
1738. S B CARS (2906-KL-04), HUSSAIN NAGAR
BYPASS, KANPUR-LUCKNOW HIGHWAY ROAD,
UNNAO, U.P. - 209001
PH: 5153-9839811711, 202445.

VARANASI

1739. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2,
CLUB ROAD, VARANASI
PH: 0542-25100469, 9415203641.
1740. AGR AUTOMOBILES PVT. LTD. (8403-84-01),
B-38/2, MAHMORGANJ, GOPAL VIHAR,
VARANASI - 221010
PH: 0542-2360436.
1741. VARANASI MOTORS PVT. LTD. (8402-84-01),
THE MALL, CANTONMENT, VARANASI - 221001
PH: 0542-2509068, 2509069.

1742. VARANASI MOTORS PVT. LTD. (8402-84-03),
AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR,
MOHANSARAI, RAJATALAB, VARANASI (U.P.) -
221002
PH: 9838360662.

UTTARAKHAND

ALMORA

1743. NAINITAL MOTORS PVT. LTD. (J603-SQ-04),
PAWAR BHAWAN, JOSHI KHOLA RAJPURA,
PITHRAGARH ROAD, ALMORA - 263601
PH: 9639016895.

BAGESHWAR

1744. NAINITAL MOTORS PVT. LTD. (J603-BI-05),
KAPKOT ROAD, BAGESHWAR. - 263642
PH: 9927708822.

BAZPUR

1745. AKANKSHA AUTOMOBILE (RUDRAPUR) PVT.
LTD. (CGU1-CGU1), KHASRA NO. 96/2,
VILLAGE - BHONA, ISLAM NAGAR, TEHSIL -
BAZPUR, UTTARAKHAND - 262401
PH: 9837278256.

CHAMPAWAT

1746. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (U403-SF-03), TANAKPUR LOHAGHAT
ROAD, CHAMPAWAT, UTTARAKHAND - 262523
PH: 05965 - 230033.

DEHRADUN

1747. D.D. MOTORS (5704-57-01), 918/221, PATEL
NAGAR, INDUSTRIAL AREA, DEHRADUN
PH: 0135-2745330, 31, 32.

1748. FUTURE AUTO WHEELS PVT.LTD (5706-57-01),
KHASRA NO. 8/KHA, MOHABEWALA
INDUSTRIAL AREA, DEHRADUN. - 248001
PH: 0129 - 4217800.

1749. ROHAN MOTORS LTD. (5702-57-01), 130/1
CHAKRATA ROAD, YAMUNA COLONY,
DEHRADUN - 248001
PH: 0135-2530955, 624519, 626097.

1750. ROHAN MOTORS LTD. (5702-57-02), 257/2, GMS
ROAD, VILL. NIRANJANPUR, ADJ TO KAMLA
PALACE, DEHRADUN - 248001
PH: 0135-2720342/43/44.

GOPESHWAR

1751. ROHAN MOTORS LTD. (5702-MV-03), CHOTA,
MANDAL ROAD, NEAR FOREST GATE,
GOPESHWAR - 131028
PH: 01372-251572.

HALDWANI

1752. NAINITAL MOTORS PVT. LTD. (J603-J6-01),
VILLAGE JEETPUR NEGY, 5TH KM RAMPUR
ROAD, HALDWANI - 263139
PH: 9639016895.

1753. NAINITAL MOTORS PVT. LTD. (J603-J6-02),
KALA DUNGJ, NEAR ABDULLAH PETROL PUMP,
HALDWANI - 263139
PH: 9639016895.

HARIDWAR

1754. SHAKUMBARI AUTOMOBILES (P) LTD
(6N02-6N-01), E-5/6, INDUSTRIAL AREA,
HARDWAR - 249407
PH: 01334-310676, 321432.

KASHIPUR

1755. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (U403-DG-02), BAZPUR ROAD, KASHIPUR -
244713
PH: 9219408725.

KHATIMA

1756. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (XL01-XL-01), VILLAGE: KHETAL SANDA
KHAM (SAL BIHOJI NO.3, OPP. FOREST
CORPORATION) PILIBHIT ROAD,
KHATIMA, UDHAM SINGH NAGAR,
UTTARAKHAND - 262308
PH: 0191000813.

KOTDWARA

1757. SHAKUMBARI AUTOMOBILES (P) LTD
(6N02-21-02), PLOT NO.23 & 30 INDUSTRIAL
ESTATE, SITABPUR, KOTDWAR, DIS. PAURI
(GARHWAL), UTTARAKHAND - 249001
PH: 0755998075, 9927708822.

PITHORAGARH

1758. NAINITAL MOTORS PVT. LTD. (J603-NM-03),
VILLAGE PANDA, ODSAINI, DHARCHULA ROAD,
PITHORAGARH - 262501
PH: 9639016895.

RANIKHET

1759. NAINITAL MOTORS PVT. LTD. (AXA1-AXA-01),
GANYADYOLI, NEAR DRUG FACTORY,
RANIKHET DISTT. ALMORA (UTTARAKHAND) -
263645
PH: 05962-230254.

RISHIKESH

1760. FUTURE AUTO WHEELS (AAS1-AAS-01), 640,
LAXMAN JHULA ROAD, RISHIKESH, DISTT.
DEHRADUN, UTTARAKHAND - 249201
PH: 0135-2432387.

ROORKEE

1761. SHAKUMBARI AUTOMOBILES (P) LTD
(H201-H2-01), 3RD KM STONE, DELHI-ROORKEE
HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE
DISTT HARIDWAR - 247667
PH: 01332-326160, 72267, 76216.

RUDRAPRAYAG

1762. ROHAN MOTORS (IK01-IK-01),
GULABRAI-BADRINATH ROAD, RUDRAPRAYAG
- 246171
PH: 01364-233118.

RUDRAPUR

1763. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (U403-U4-01), KICCHA BYE PASS ROAD,
INDUSTRIAL AREA, RUDRAPUR - 263153
PH: 05944-247203.

SITARGANJ

1764. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (CD01-CD-01), PLOT NO.228/5 AND 228/6
KHATIMA ROAD, SITARGANJ, DISTT -
RUDRAPUR, UTTARAKHAND - 262405
PH: 0192000375.

SRINAGAR

1765. SHAKUMBARI AUTOMOBILES (ANA1-ANA-01),
SRICOT GANAGANALI , NEAR MEDICAL
COLLEGE, PO- SRICOT, SRINAGAR - 246174
PH: 01346-244571, 244572-73.

TEHRI

1766. D.D. MOTORS (5704-SP-02), PLOT NO. 541,
SECTOR-8E, DISTT. - NEW TEHRI - 249001
PH: 01376-233144.

WEST BENGAL

ALIPURDUAR

1767. PODDAR CAR WORLD PVT. LTD.
(BZ01-BZ-01), BIRPARA MORE, COOCH
BEHAR ROAD, BESISE GOYENKA PETROL
PUMP, ALIPURDUAR, WEST BENGAL. - 736121
PH: 03564-9800633338.

ASANSOL

1768. BEEKAY AUTO PVT LTD (F601-F6-01), CHANDA
MORE, NH-2, ASANSOL - 713301
PH: 0341-2344030/31/2343978, 9932049425.

BAHARAMPUR

1769. BEEKAY AUTO PVT LTD (T301-DJ-02),
BOKULTALA (PASCHIM GAMINI), NH-34,
BAHARAMPUR, DISTT. MURSHIDABAD. - 742101
PH: 03482-267340.

BANKURA

1770. BHANDARI AUTOMOBILES LTD. (G701-6Q-02),
PLOT NO.-156, KH NO.-173, MITHILA MOUZA,
AT/PO-BANKURA (WB) - 722101
PH: 03424-256766.

BARASAT

DEALER WORKSHOP (AS ON 01.04.2017)

1771. PREMIER CAR WORLD PVT. LTD. (XZ03-XZ-01), R.S DAG NO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O.BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, JL NO. 4, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL - 700128
PH.:8420122407.
- BARSUNDRA**
1772. BHANDARI AUTOMOBILES PVT LTD (G701-BJW-05), PLOT NO. 610, BARSUNDARA, ISHWARDHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE, WEST BENGAL - 721654
PH.:9933055539.
- BARUIPUR**
1773. ONE AUTO PVT LTD (ACA1-ACA-01), MAHENDRA NIKETAN, KHASH MALLICK, P.O. SOUTH GOBINDAPUR, P.S.- BARUIPUR, DISTT. SOUTH 24 PARGANAS, WEST KOLKATA (WEST BENGAL) - 700145
PH.:8584018013.
- BASIRHAT**
1774. BHANDARI AUTOMOBILES LTD. (X701-00-03), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. - 743428
PH.:3217-249192, 249194.
- BISHNUPUR**
1775. BHANDARI AUTOMOBILES PVT. LTD. (AA1-AAG-01), STATION ROAD, P.O+P.S- BISHNUPUR, DIST: BANKURA, WEST BENGAL - 722122
PH.:9933055539.
- BOLPUR**
1776. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-TC-03), KABI JOYDEB ROAD, NEAR BOLPUR, PASS, BOLPUR, DIST: BIRBHUM PH.:3463-252577, 252777.
- BONGAON**
1777. STARBURST MOTORS PVT LTD (T002-TQ-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235
PH.:9874195451.
- BUDGE BUDGE**
1778. ONE AUTO PVT. LTD. (BAV1-BAV-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141
PH.:8335050357/8442830001.
- BURDWAN**
1779. BEEKAY AUTO PVT LTD (T301-T3-03), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL - 713101
PH.:033-9932049454.
- C K ROAD**
1780. BHANDARI AUTOMOBILES PVT. LTD. (D001-D0-01), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252
PH.:3222-9933055539.
- CHAKDAHA**
1781. BHANDARI AUTOMOBILES (OM01-OM-01), VILLAGE – PUMILA, P.O. – CHAKDAHA, DISTRICT – NADIA, WEST BENGAL - 741222
PH.:9079403668, 9674733503, 9674169007.
- CONTAI**
1782. BHANDARI AUTOMOBILES LTD. (G701-GV-03), SERPUR BAMUNBAR,P.O- MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401
PH.:3220-254572.
- COOCH BEHAR**
1783. PODDAR CAR WORLD PVT. LTD. (BW21-BWZ-01), CHAKCHA, NEELKUTHI BAZAR, NEAR ADA FACTORY, NH-31, COOCH BEHAR, WEST BENGAL - 736101
PH.:03582-258567, 7031045594.
- DARJEELING**
1784. BEEKAY AUTO PVT LTD (4301-6U-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 731401
PH.:354-9233539579.
- DURGAPUR**
1785. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213
PH.:343-2547777, 9233500277.
- GHATAL**
1786. BHANDARI AUTOMOBILES (AAD1-AAD-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL,WEST MIDNAPORE, WEST BENGAL - 721211
PH.:9933055539.
- GOPIBALLAVPUR**
1787. BHANDARI AUTOMOBILES PVT. LTD. (BPQ1-BPQ-01), JL NO. 1103, KHATIAN NO. 1103, PLOT NO. 438, VILLAGE + P.O. + P.S. – GOPIBALLVPUR, MOUZA – GOPIBALLVPUR, WEST MIDNAPUR, WEST BENGAL - 721506
PH.:9933055539, 8170018577.
- HALDIA**
1788. BHANDARI AUTOMOBILES LTD. (G701-SE-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657
PH.:3224-8016082344, 9233502421.
- HOWRAH**
1789. BHANDARI AUTOMOBILES LTD. (X701-X7-01), BANKRA THANA,DOMJUR,HOWRAH. - 711403
PH.:33-66137528/18/06.
- JALPAIGURI**
1790. PODDAR CAR WORLD PVT. LTD. (KY01-KY-01), COLLEGE PARA, SRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL . - 735101
PH.:03561-257155, 257066, 8945534921.
- JHARGRAM**
1791. BHANDARI AUTOMOBILES PVT. LTD. (BUG1-BUG-01), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507
PH.:8016087297, 9933055539.
- KALNA**
1792. BEEKAY AUTO PVT LTD (WZ01-WZ-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 731409
PH.:9932251483.
- KALYANI**
1793. STARBURST MOTORS PVT LTD (J01-IJ-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S COLLEGE), KALYANI. - 741234
PH.:354-2524139/25824140.
- KESHUPUR**
1794. BHANDARI AUTOMOBILES (CCM1-CCM-01), JL NO. 338, KHATIAN NO. 786/2, PLOT NO. 1749, MOUZA – KESHUPUR, VILLAGE + P.O. + P.S. – KESHUPUR, WEST MIDNAPUR, WEST BENGAL - 721150
PH.:721150, 8170014289.
- KHARAGPUR**
1795. BHANDARI AUTOMOBILES LTD. (G701-G7-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301
PH.:3222-755537.
- KOLKATA**
1796. MANCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA
PH.:33-24568326, 24466568, 24568325.
1797. AUTO HITECH PRIVATE LIMITED (0604-06-01), 34-A, C.N. ROY ROAD, KOLKATA - 700039
PH.:33-40218200,8231/8222/8262.
- KRISHNANAGAR**
1809. BHANDARI AUTOMOBILES LTD. (X701-GS-02), PLOT NO.-1874, MOUZA-GOBINDSARAK,J.K. NO. 94, PS-KOTWAL,OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011
PH.:3472-223587.
- MADHYAMGRAM**
1810. STARBURST MOTORS PVT LTD (BXJ1-BXJ-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129
PH.:9830130265.

DEALER WORKSHOP (AS ON 01.04.2017)

MAHESHTALA

1811. BHANDARI AUTOMOBILES (0609-06-01), BUDGE
BUDGE TRUNK ROAD, NEW GOPALPUR,
SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24
PARGANAS, WEST BENGAL - 700143
PH:033-64995331.

MALDA

1812. J.K. WHEELS PVT LTD (L801-L8-01),
GABGACHHI, N.H. 34, MALDA, - 732103
PH:3512-258884, 266379.

NAIHATI

1813. PREMIER CAR WORLD PVT. LTD. (YD01-YD-01),
P.O. BHATPARA, GRAM-MUKTARPUR, P.S. -
JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) -
743123
PH:8420122451.

PURULIA

1814. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT.
LTD) (4402-6W-02), PO. LAKDA, VILLAGE-DADKA
, ON RANCHI ROAD, PURULIA - 723149
PH:3252-242100.

RANAGHAT

1815. STARBURST MOTORS PVT LTD
(BBW1-BBW-01), THANA: GANGNAPUR, ADSR
OFFICE, 151 NO.MOUSA PATULI, PLOT NO.309,
RANAGHAT, DISTT: NADIA - 741238
PH:8584040215, 8336933447.

SEORI

1816. BEEKAY AUTO PVT LTD (F601-KC-02),
RAMBADANPUR, NEAR SP MORE,
DIST-BIRBHUM, SEORI - 731101
PH:3462-259055 / 9233503153.

SILIGURI

1817. BEEKAY AUTO PVT LTD (4301-43-01), NH-31,
P.O. MATIGARA,SILIGURI. - 734428
PH:353-2002254, 6533554.
1818. BEEKAY AUTO PVT LTD (4301-43-04), AMAI
DIGI, PHOOL BARI,STATE HIGHWAY -12,
SILIGURI - 734001
PH:353-2568592, 9932049347.
1819. SEVOKE MOTORS PVT. LTD. (4302-43-01), 233,
SEVOKE ROAD,2ND MILE, SILIGURI - 734001
PH:353-2545309/12/13.

SREERAMPORE (SREERAMPUR)

1820. BHANDARI AUTOMOBILES (B8T1-BBT-01),
BANGIATHI (MADPUR) DELHI ROAD,
SREERAMPUR, DISTT: HOOGHLY, WB - 712203
PH:33-66137505, 66137585, 9674741544.

TAMILUK

1821. BHANDARI AUTOMOBILES PVT. LTD.
(OL01-OL-01), MOUZA PADUMBASAN, WARD NO
10, JL NO:144, DISTT: EAST MIDNAPUR, WEST
BENGAL - 721636
PH:9933055539.

TARAKESHWAR

1822. SANEI MOTORS (YH01-YH-01), MOUZA
BAIDYAPUR, UNDER BALIGORI(1), GRAM
PANCHAYET, TARAKESHWAR, DISTT. HOOGHLY,
WEST BENGAL,
PH:9836872710.

ULUBERIA

1823. BHANDARI AUTOMOBILES (2401-24-01),
HOLDING 1242A, BANITALA, P.O+P.S.
ULUBERIA, NH-6, DISTT: HOWRAH, WEST
BENGAL - 711316
PH:8336070344.

LIST OF MSM's (AS ON 01.04.2017)

DELHI

DELHI

1. JJ IMPEX (MARUTI SERVICE MASTERS) (0883-08-03), PLOT NO. 9, SSI INDUSTRIAL ESTATE,G.T. KARNAI ROAD, OPP JAHANGIR PURI,NEAR KDR WOOL FACTORY,DELHI - 110033 PH:011-40715500, 40715501.
2. JJ IMPEX (MARUTI SERVICE MASTERS) (0883-08-01), F-39,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020 PH:011-41612194, 40685500.
3. MARUTI SALES & SERVICE(DELHI) (0810-08-01), C-119, INDUSTRIAL AREA PHASE-I, NARAINA, NEW DELHI - 110028 PH:011-45541113.

TAMIL NADU

CHENNAI

4. JJ IMPEX (MARUTI SERVICE MASTERS) (1485-14-01), # 9, (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH:044-43563366, 43563367.

LIST OF MSZ's (AS ON 01.04.2017)

ANDHRA PRADESH

TIRUPATI

- KOUNDINYA ENTERPRISES (N981-N9-01), 18-3-60,KT BY PASS ROAD,TIRUPATI - 517501 PH:0877- 2233051, 2231047.

ARUNACHAL PRADESH

ITANAGAR

- HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111 PH:0360-2212843.

ASSAM

BARPETA

- ROY AUTO ENGINEERING WORKS (7281-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD, WARD NO.-4, ASSAM - 781315 PH:03666-260343, 262743.

DULIAJAN

- B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602 PH:0374-2801255.

BIHAR

PATNA

- CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013 PH:0612-2265916, 9334115900.

CHHATTISGARH

RAIGARH

- SHAKTI AUTOMOBILES (7Y81-7Y-01), ORRISA ROAD, KABIR CHOWK, BANJHPALI, RAIGARH, C.GARH - 496001 PH:9300006496.

DELHI

DELHI

- A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, LAWRENCE ROAD.,DELHI - 110035 PH:011-48280000.
- GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, - 110018 PH:011-4327666.

HARYANA

BALLABGARH

- ROYAL MOTORS (9R81-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004 PH:0129-4271800, 9899242536, 2242536.

MURTHAL

- MURTHAL AUTO PVT. LTD. (B881-BV-01), 44 HSIIDC, MURTHAL - 131027 PH:0130-2482230.

PANCHKULA

- CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113 PH:0172-2592310, 2594310, 5064336.

PANIPAT

- VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103 PH:180-4001490.

SAHA

- PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.- AMBALA - 133104 PH:0171-2822669, 9896402469.

YAMUNANAGAR

- HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001 PH:1732-261937.

HIMACHAL PRADESH

JASSUR

- CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201 PH:01893-226555.

JAMMU & KASHMIR

SRINAGAR

- RAHIM MOTORS (1281-12-01), SIDCO INDUSTRIAL AREA, RANGRETH, SRINAGAR - 2441384 PH:0194-2435909.

JHARKHAND

RANCHI

- PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48 , KOKAR INDUSTRIAL AREA, RANCHI. - 834001 PH:0651-2544661, 2542650.

KERALA

ERNAKULAM

- AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 682024 PH:9847521112.

KOTTAKARA

- CHITHRA AUTOMOBILES (C781-S8-01), RAILWAY STATION JUNCTION ,KOTTAKARA - 691506 PH:0474-9447711001.

PATHANAMTHITTA

- AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA - 689640 PH:0468-9288117477.

MADHYA PRADESH

NEEMUCH

- AUTO SCAN (3T81-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH, - 454775 PH:07423-221912.

MAHARASHTRA

AHMEDNAGAR

- VILAY AUTOMOBILES (A581-A5-01), OPP. MSEB SUB STATION, NAGAR-PUNE ROAD, KEDGAON, AHMEDNAGAR - 414005 PH:0241-2550049.

PUNE

- MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD, OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHAKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017 PH:020-65001981.

THANE

- THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITL,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE - 400007 PH:022-25872222.

ORISSA

KEONJHAR

- KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001 PH:06766-256466.

PUNJAB

BATALA

- CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505 PH:01871-9872402423.

MOGA

- SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001 PH:1636-226807.

RAJASTHAN

JAIPUR

- KATARIA AUTOMOBILES (1181-11-01), 1-A : NARAYANPUR,KATARIA KRISHI FARM,SIRS ROAD,JAIPUR - 302034 PH:0141-2471740/2471014/2471406.

TELANGANA

HYDERABAD

- RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D-NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068 PH:040-9848062263.

UTTAR PRADESH

Agra

- PRIME MOTORS (6681-66-01), 8B/7D, BYE PASS ROAD, DEV NAGAR, AGRA - 282007 PH:0562-2531881, 2531882.

ALIGARH

- VINEET MOTORS (MSZ) (B681-B6-02), PLOT NO.D-138 A/139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001 PH:9917473052, 9982123586.

BULDANDSEHAR

- SK & COMPANY (M581-M5-02), KHASRA NO. 2261, NEAR T POINT , BY PASS SHIKARPUR ROAD , BULDANDSHAHR. - 203395 PH:05732-235400.

GAZIABAD

- CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD - 201102 PH:9999107841, 9997093422.
- KAP AUTOMOBILES PVT. LTD, (5981-59-01), D-BLOCK SHASHTRI NAGAR,HAPUR ROAD,GHAZIABAD - 201002 PH:2714143, 9210026200.

LUCKNOW

- K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW - 226003 PH:0522-2473369.

MEERUT

- UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, - 250001 PH:0568001008.

NOIDA

- FAST TRACK AUTO CARE INDIA PVT. LTD, (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301 PH:120-4581111/31.
- JKM MOTORS (A184-A1-01), A-25,SECTOR 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301 PH:0120-4052400.
- MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125 SECTOR-63,NOIDA, - 201301 PH:0120-2402671-72.

LIST OF MSZ's (AS ON 01.04.2017)

-
40. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
& 9,SECTOR-8,NOIDA - 201301
PH:0120-5332222.

SAHIBABAD

41. FAST TRACK SERVICES, (M981-M9-01), PLOT
NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA,
SAHIBABAD, DISTT. GHAZIABAD (U.P.) - 201010
PH :9606868111.

UNNAO

42. VISHAL WHEELERS PVT. LTD. (1382-KL-01),
PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS,
UNNAO, UTTAR PRADESH. - 209801
PH :0515-2830610, 2831248.

VARANASI

43. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2,
CLUB ROAD, VARANASI - 221002
PH :0542-25100469, 9415203641.

WEST BENGAL

KOLKATA

44. MANOCO SALES (P) LTD. (0681-06-01), 25/1,
CHETLA CENTRAL ROAD, OPPOSITE CHETLA
PARK, KOLKATA - 700027
PH :33-24568326, 24486568, 24568325.

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

<p>ANDHRA PRADESH</p> <p>ADILABAD</p> <p>1.## MAHA LAXMI AUTOMOTIVES (2240), NH# 7 OPP. H.P. PETROL BUNK,TIRUPALLY,ADILABAD,(A.P.) PIN-504001 PH :98732-9000345313.</p> <p>AMALAPURAM</p> <p>2.## MARUTI MOTORS (3825), ONGC BY PASS ROAD,AMALAPURAM,E G DISTRICT (A.P.) PIN-533201 PH :08856-236156/235789.</p> <p>ANANTAPUR</p> <p>3.## GOWRI AUTO. & ENGG. WORKS (2621), PATEL ROAD,ANANTHAPUR (A.P) PIN-515001 PH :8554274675.</p> <p>ARMOOR</p> <p>4.## HYDERABAD MARUTI MOTORS (4932), PLOT NO. 6,BESIDE THAKUR BEEDI FACTORY,ARMOOR,DISTRICT-NIZAMABAD (ANDHRA PRADESH) PIN-503224 PH :9848205619.</p> <p>BHADRACHALAM</p> <p>5.## SRI VENKATARAMANA AUTO CARE (2631), MARUTI SERVICE STATION,OPP. COLLEGE GROUNDS,GOLLAGATTA ROAD,BHADRACHALAM (A.P.) PIN-507111 PH :9290792269.</p> <p>CUDAPPAH</p> <p>6.## SREE VENKATESWARA AUTO. (1030), SANKARA PURAM,CUDAPPAH (A.P.) PIN-516001 PH :9440708234/9440223461.</p> <p>7.## SIVAJI MOTORS (3275), BESIDES PADMASHALI KALYANA MANDAPAM,MADRAS ROAD,KADAPA,ANDHRA PRADESH PIN-516002 PH :08562-9849113189.</p> <p>GAJWEL</p> <p>8.# VIJAY MOTORS (4864), HYDERAA ROAD,STATE HIGH WAY FROM HYDERABAD TO KARIMNAGAR, PREGHAPUR - GAJWL,ANDHRA PRADESH PIN-502278 PH :9849683665, 08454233028.</p> <p>KUNTAKAL</p> <p>9.## S. MAHABOOB AUTOMOBILES (4075), ALUR ROAD,GUNTAKAL PIN-515802 PH :94402-08312/996344109/924748109.</p>	<p>QUNTUR</p> <p>10.## S. S. MOTORS (4946), OPP. JK COLLEGE,JJK COLLEGE ROAD,GUNTUR,ANDHRA PRADESH PIN-522006 PH :9848273503/939553636.</p> <p>HYDERABAD</p> <p>11.## COSMO AUTO CLINIC PVT. LTD. (1045), 1-2-605/A3 & LOWER TANK BUND ROAD,NEAH INDIA PARK NORTH GATE,HYDERABAD PIN-500080 PH :9849015667, 92462 75661.</p> <p>12.## PISTONS & SPANNERS (2766), 2-3-37 MAHARANA PRATAP FUNCTION HALL,AMBERPET,HYDERABAD PIN-500013 PH :040-6585480/9990649504.</p> <p>13.## ARYAN MOTORS (3264), D.NO.17-1-382/K/5 & 6,CHAMPAPET SAIDABAD,SAGRAR ROAD,HYDERABAD PIN-500011 PH :040-24077459/9246155464.</p> <p>14.* BHARAT MOTORS (3574), 1-907, BEHIND SUPRABHAT HOTEL,HABSIGUDA "X" ROAD,HYDERABAD PIN-500007 PH :040-9849447759.</p> <p>15.## NEW TECHNOCRATS AUTO SERVICES (4477), 1-2-607/23/1/C,AMBEDKAR NAGAR,INDRA PARK ROAD,HYDERABAD (ANDHRA PRAESH) PIN-500029 PH :040-9948039515.</p> <p>16.## SERWELL AUTOMOBILES (5234), PLOT NO 202,203,ADITYA NAGAR, OPP,INTU, KUKA TPALLY HYDERABAD,ANDHRA PRADESH PIN-500072 PH :9490105147.</p> <p>JAGTIAL</p> <p>17.## PARAMESHWARA MOTORS (3851), OPP P R OFFICE,DHAROOR CAMP,JAGTIAL,DT. KARIMNAGAR (A.P.) PIN-505327 PH :08722-9912664659.</p> <p>KAKINADA</p> <p>18.## SATISH AUTO CARE (5038), BEHIND KALPANA THEATRE,BEACH ROAD KAKINADA,DISTRICT EAST GODAVARI,ANDHRA PRADESH PIN-533001 PH :0884-2378198, 9848313599.</p> <p>19.## SRI SHIRDI SAI TECHNORAFTS (1459), COMPUTERISED CAR CARE CENTRE,NAGAMALLI THATA COLONY,KAKINADA PIN-533003 PH :9440727211.</p>	<p>KARIMNAGAR</p> <p>20.## PUSHPAK MOTORS (1032), KOTHI RAMPUR,HYDERABAD ROAD,KARIMNAGAR (A.P) PIN-505001 PH :0878-9849163796, 9480035617.</p> <p>21.## MYTRI MOTORS (5152), 8-6 188,KOTHI RAMPUR,KARIMNAGAR,DISTRICT - KARIMNAGAR,ANDHRA PRADESH PIN-505001 PH :9441475357.</p> <p>KAVALI</p> <p>22.## KAMAL MOTORS (3842), 10-15-43/U3A OPP LIC,TANK RAOD,KAVALI PIN-524201 PH :08626-8801444888.</p> <p>KHAMMAM</p> <p>23.## EXCEL AUTO CARE (1043), 10-2-57/1,MAYURI CENTRE,KHAMMAM PIN-507001 PH :08742-9848156363.</p> <p>KODAD</p> <p>24.## SAI KAKATIYA SERVICE STATION (4664), SURYAPETA ROAD,OPPOSITE LORRY ASSOCIATION BUILDING,KODAD,DISTRICT-NALGONDA (ANDHRA PRADESH) PIN-508206 PH :9848057813, 9912616759.</p> <p>KURNool</p> <p>25.## SRINIWA'S AUTO GARAGE (5170), KULLUR ROAD,KURNool,DISTRICT - KURNool,ANDHRA PRADESH PIN-518003 PH :9440244660, 8186816828.</p> <p>MACHILIPATNAM</p> <p>26.## SRI MARUTI MECHANICAL WORKS (4172), OPP BEL COMPANY,DOOR NO. 17/541,MACHILIPATNAM,ANDARA PRADESH PIN-521001 PH :0867-9440538012.</p> <p>MAHABUB NAGAR</p> <p>27.## SRI AYYAPPA MARUTI CLINIC (3941), OPP HOSPITAL,HYDERABAD ROAD,YEMUGONDA,MAHABUB NAGAR (ANDHRA PRADESH) PIN-509001 PH :08542-271827/9440569259.</p> <p>MANCHERIAL</p> <p>28.## PARVATI MOTORS (4129), 4-53 BPL ROAD,MANCHERIAL,DISTRICT ADILABAD,ANDHRA PRADESH PIN-504208 PH :08736-9885554888.</p> <p>MANDAPETA</p>	<p>29.## MODERN MARUTI CARE (4866), D.NO. 4-1-59/2, MAIN ROAD,MANDAPETA,DISTRICT-EAST GODAVARI,ANDHRA PRADESH PIN-533309 PH :08855-231839, 233664, 9849198494.</p> <p>MATHURAWADA</p> <p>30.## ANY TIME SERVICE CENTRE (4860), BESIDE ELECTRICAL SUBSTATION,MADHURAWADA,DISTRICT VISAKHAPATNAM,ANDHRA PRADESH PIN-530041 PH :9440160426.</p> <p>MIRYALGUDA</p> <p>31.## GANESH MOTORS (4536), D.NO. 6-366, P.V. COMPLEX,NALGONDA ROAD,MIRYALGUDA,NALGONDA DISTT (ANDHRA PRADESH) PIN-508207 PH :9441090870.</p> <p>NAGARI</p> <p>32.## PUJITHA SERVICE CENTER (5872), TIRUPATI ROAD,NAGARI,DISTRICT-CHITTOOR,ANDHR A PRADESH PIN-517583 PH :9849441079.</p> <p>NANDYAL</p> <p>33.## MARUTI MOTORS (2635), 26-130 OPP. GOVT. DEGREE COLLEGE,KURNool ROAD,NANDYAL PIN-518501 PH :08514-48765/9249299822/9440554167.</p> <p>NELLORE</p> <p>34.## MARUTI AUTO SERVICE STN. (2620), 16/796 SANKARA AGRAHARAM,NELLORE (A.P) PIN-524001 PH :0861-9246599268.</p> <p>35.## MARUTI MOTORS (176), 16/1051 POGATHOTA,(NEAR RAGHAVA CINE COMPLEX),NELLORE,(A.P.) PIN-524001 PH :9440278243.</p> <p>NIZAMABAD</p> <p>36.## PRIYA SERVICING (1771), C/O TIRUMALA CHITRA MANDIR,HOUSE NO.1-9-833,PHULANG ROAD,NIZAMABAD (A.P.)PIN-503003 PH :08462-9848071208.</p> <p>PATTIKONDA</p> <p>37.## ROYAL MOTORS (5776), ADONI ARTS & SCIENCE,COLLEGE ROAD ADONI, PATTIKONDA-518302,DISTRICT-KURNool, NDHRA PRADESH PIN-518302 PH :9866362847.</p>
--	--	--	--

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

PRODDATPUR

38.## SRI RAM MOTORS (3642), 189 INDUSTRIAL AREA,NEAR SRI LAKSHMI NAGAR,MYDUKUR ROAD,PRODDATPUR (A.P.) PIN-516360 PH :08564-9666890525.

RAJAHMUNDRY

39.## MARUTHI MOTORS (1257), D.NO.6-3-10 CHALLAPALLIVARI STREET., NAGAR,RAJAHMUNDRY PIN-533101 PH :9848253434.

RAMAGUNDAM

40.## ALI AUTOMOBILES (2849), NEAR TV RELAY STATION,NTPC JYOTINAGAR,RAMAGUNDAM,DISTT. KARIMNAGAR (AP) PIN-50215 PH :9848219102.

SECUNDERABAD

41.## ANNAPURNA MOTORS (2947), # 6-3-23/5 JAYANAGAR COLONY,NEAR MEKALMANDI,NEW BHOIGUDA,SECUNDERABAD PIN-500080 PH :040-9849061136.

SIDDIPET

42.* POOJA MOTORS (4076), 19/180 KARIMNAGAR ROAD,G.P. PRASANTH ROAD,SIDDIPET,DISTRICT MEDAK (AP) PIN-502103 PH :08457-9885551518.

SIRSILLA

43.# SATHVIKA MOTORS (5649), KARIMNAGAR ROAD,OPP HP PETROL PUMP,SIRSILLA,DISTRICT - KARIMNAGAR,ANDHRA PRADESH PIN-503501 PH :940966649/9490284726.

SRIKALAHASTI

44.## SUNDEEP CARS (5972), 16/769,SRI RAM NAGAR, COLONY,SRIKALAHASTI,DISTRICT-CHITTOO R,ANDHRA PRADESH PIN-517640 PH :08572-230714/9848294869.

SURYAPET

45.## SAI GLOBAL AUTO SERVICES (4550), OPP. AYYAPPA SWAMY TEMPLE,BY PASS ROAD, NH-9,SURYAPET,ANDHRA PRADESH PIN-508213 PH :08684-225552, 9848076108.

TENALI

46.## HIMAJA MARUTI SERVICE STATION (2828), LECTURER'S COLONY,GIRIJA HOSPITAL ROAD,GANGANAMMAPET,TENALI , GUNTUR DIST. (A.P.) PIN-522201 PH :08644-9849715727.

47.## RAHUL MOTORS (5157), D.NO.18-3-4BITRA SRI RAMULU STREET,BEHIND TELEPHONE EXCHANGE SALIPET,TENALI,ANDHRA PRADESH PIN-500035 PH :9490187453/9440229595.

VAIZAG

48.# SRINIVASA AUTO GARAGE (5440), OPP. KANTI ROAD,NEAR RAYS PETROL PUMP - VISHAKHAPATNAM,DISTRICT - VISHAKHAPATNAM,ANDHRA PRADESH PIN-500001 PH :9396839853.

VIJAYAWADA

49.## ADITYA CAR CARE (5231), 76-12-1,OPP PETROL PUMP,BHAVANIPURAM,DISTRICT - VIJAYAWADA,ANDHRA PRADESH PIN-520010 PH :9703124070.

VISHAKHAPATNAM

50.** VISAG AUTO SCANS (461), NO.54-10-18 ISUKATHOTA,BEHIND DECENT FLOORINGS,ISUKATHOTA JN.,VISHAKHAPATNAM PIN-530022 PH :0891-2556302/9246625865.

51.## SIRI AUTOMOBILES (5232), PLOT 0 9/A IDA E BLOCK,AUTO NAGAR, GAJUWAKA,VISHAKHAPATNAM,ANDHRA PRADESH PIN-530026 PH :9963298667.

VIZAINAGARAM

52.* VIKRAMA AUTOMOBILES (4621), 17-13-4 TEMPLE STREET,VIZAINAGARAM (A.P.) PIN-531202 PH :08922-2253951/9440192224.

WANAPARTHY

53.# SMC MOTORS (5658), K.K.T. ROAD,BASAVANNA GADDA,WANAPARTHY,DISTRICT -MAHABUBNAGAR,ANDHRA PRADESH PIN-509103 PH :8545-9440142927.

WARANGAL

54.## VAISHNAVI AUTOMOBILES (470), OPP. NEW SCIENCE DEGREE COLLEGE,HUNTER ROAD,HANAMKONDA,WARANGAL PIN-506001 PH :9866561075.

ARUNACHAL PRADESH

ALONG

55.## BANNU MOTORS (1744), SIYOM MARKET,ALONG,WEST SIANG DIST.,(ARUNACHAL PRADESH) PIN-791001 PH :03783-233407.

BOMDILA

56.## GURU MOTORS (3921), BIRPUR,RUPA,ARUNACHAL PRADESH PIN-790003 PH :03712-232727.

NIRJULI

57.## SANGO SERVICE STATION (5742), NH-52, NIRJULI,DISTRICT-PAPUMPURE,ARUNACHA L PRADESH PIN-791110 PH :9436052480.

ROING

58.## PERTIN MARUTI WORKS (5545), DISTRICT- LOWER DIBANG VALLEY,ROING,ARUNACHAL PRADESH PIN-792110 PH :03803-262843.

TAWANG

59.## TAWANG MARUTI SERVICING STATION (425), OLD BAZAR LINE,P.O. & P.S.TAWANG,ARUNACHAL PRADESH PIN-790104 PH :03782-222143.

YINGKONG

60.# VIJAY MOTORS (5971), UPPER MARKET, P.O.YINGKONG,DISTRICT-UPPER SIANG,ARUNACHAL PRADESH PIN-791002 PH :9436228808.

ZIRO

61.## HILLS AUTO AGENCY (3922), POLICE RESERVE & PETROL PUMP ROAD,HAPOLI BAZAR P.O. ZIRO,DISTT. LOWER SUBANSIRI,ARUNACHAL PRADESH PIN-791120 PH :03788-224736.

ASSAM

BADARPUR

62.## MARUTI CAR PLAZA (3635), NEAR INDUSTRIAL AREA,S.T. ROAD,BADARPUR,DISTT. KARIMGANJ (ASSAM) PIN-788806 PH :03845-268257.

BISHAWANATH CHARIALI

63.## DISHANG DONE (1058), 52 N.H.BISHAWANATH CHARIALI,DISTT. SONITPUR,ASSAM PIN-784176 PH :222309.

64.* BINA AUTOMATION (3677), P.O. BISHAWANATH CHARIALI,DISTT. SONITPUR,ASSAM PIN-784176 PH :03715-230356.

BOKAJAN

65.## SREE GANESH MOTORS (6040), SUKHANJAN SUPER MARKET, P.O.BOKAJAN,(C.F.),DISTRICT KARBI ANGLONG,ASSAM PIN-782480 PH :03675-246977/9435167138.

BOKAKHAT

66.## GOENKA AUTOMOBILES (2878), P.O. BOKAKHAT,DISTT. GOLAGHAT,ASSAM PIN-785612 PH :03776-268366.

DHALIGAON

67.## ADHIKARI MOTOR WORKS (4049), P.O. DHALIGAON,DIST-BONGAIGAON,ASSAM PIN-783385 PH :03664-241721/9435214176.

DHEMAJI

68.## NARAH AUTOMOBILES (3852), C/O BLUE HILL COUNTER,P.O. DHEMAJI,DISTT. DHEMAJI, (ASSAM) PIN-787057 PH :03753-225146.

DHUBRI

69.## BRAHMAPUTRA MOTOR SERVICING STATION (3127), G.T.B ROAD,DHUBRI,(ASSAM) PIN-783301 PH :03662-234021.

DIBRUGARH

70.* GEE DEE AUTO SERVICE (953), JHALUKPARA,DIBRUGARH,ASSAM PIN-786001 PH :0373-2329796.

71.** MEHBOOB AUTOMOBILES & TYRE SERVICES (1760), CHOWKIDINGHEE,NEAR STATE TRANSPORT,DIBRUGARH PIN-786003 PH :0373-2318072.

DIGBOI

72.** GAURI AUTOMOBILES (3760), MULIABARI,DIGBOI PIN-786171 PH :03751-269029.

DIPHU

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

73.##	WOJARU MOTORS (4377), DPHU MANJA ROAD,DILAJI,NEAR BIRLA FACTORY,DIPHU PIN-782460 PH :03671-271466.	KOKRAJHAR 83.## NAGA AUTOMOBILES WORKS (3879), JUHWLAO DWIMALOO ROAD,BHOBANIPUR,DISTT KOKRAJHAR,ASSAM PIN-783370 PH :03661-275545.	92.## B.R.K. AUTOMOBILES ENGINEERING WORKS (2838), HAJO ROAD,NALBARI,(ASSAM) PIN-781335 PH :03624-9954050050.	UDALGURI 102.## RENU MOTORS (4543), WARD NO. 2, U.T. ROAD,UDALGURI TOWN,UDALGURI,ASSAM PIN-784509 PH :03711-225096, 9435222344.
74.*	S K AUTO CARE (3962), UCHAMATI,NATIONAL HIGHWAY,DOOM DUMA,ASSAM PIN-786151 PH :03759-240243/9435135876.	LUMDING 84.## BEDI MOTORS (5827), MAIN ROAD,NORTH LUMDING,LUMDING,DISTRICT - NAGAON,(ASSAM) PIN-782447 PH :9435163185.	NAMRUP 93.## RAJ ENTERPRISES (3849), NAMRUP INDUSTRIAL ENTERPRISES,SONARI TINALIPARBATPUR,NAMRUP (ASSAM) PIN-786623 PH :0374-2502856.	BIHAR ARRAH 103.## ANJALI ENTERPRISES (5533), ARRHA SASARAM MAIN ROAD,ZERO MILE,NEAR POWER GRID, ARRHA,DISTRICT-BHOJPUR,(BIHAR) PIN-802301 PH :06182-9386734804.
75.##	BHARAT ENGINEERING WORKS (969), PO - BALDMARI,AGIA ROAD,GOALPARA,(ASSAM) PIN-783102 PH :240321.	MANGALDAI 85.## PRIYAM AUTOMOBILES (2424), NH 52 COLLEGE ROAD,MANGALDAI,ASSAM PIN-784125 PH :03713-230528.	NORTH LAKHIMPUR 94.** GREEN LAND MARUTI WORKS (2974), NEAR GURUDWARA,NH 52,NORTH LAKHIMPUR,(ASSAM) PIN-787001 PH :03752-9435086197/9577646296.	AURANGABAD (BIHAR) 104.## K R N AUTOMOBILE (2242), NEW G.T. ROAD,(NH-2),AURANGABAD,(BIHAR) PIN-824101 PH :06186-9304930657.
76.##	KAKOTI MOTOR WORKS (1074), NEW AMOLAPATTY,RANGPUR,P.O. GOLAGHAT,DISTT. GOLAGHAT (ASSAM) PIN-785621 PH :283177.	MARGHERITA 86.* VIRDHI MOTOR WORKS (955), MISSION ROAD,P.O. MARGHERITA,DIST. TINSUKIA,(ASSAM) PIN-786181 PH :220406.	PATHSALA 95.## USHA AUTOMOBILES (4240), N.H 31, PATHSALA,DISTRICT-BARPETA,ASSAM PIN-781325 PH :266012/9401310431.	BEGUSARAI 105.## K.B. MOTORS (4768), NH-31,SINGHAUL, POKHAR,BEGUSARAI,BIHAR PIN-851134 PH :06243-9635214115.
77.##	NARZARY AUTOMOBILES (4544), NH-31C, HABRUBIL,GOSSAIGAON,DIST KOKRAJHAR,ASSAM PIN-783360 PH :9435127161.	MARIANI 87.## VASKAR AUTOMOBILES (5237), NEAR NST TINALI P.O.:MARIANI,DISTRICT - JORHAT,ASSAM PIN-785634 PH :03771-293810.	RANGIA 96.## SWEET MOTOR WORKS (4371), NH-31,N.T. ROAD,WARD NO. 5,RANGIA PIN-781354 PH :03621-240525, 9435141291.	106.* NATIONAL AUTO WORKS (1536), INDUSTRIAL AREA,BARAUNI,BEGUSARAI PIN-851122 PH :06243-9973381733.
78.**	MONO MOTOR WORKS (966), BAMUNI MADAAN,GUWAHATI PIN-781021 PH :250115/2656982/9864060665.	MIRZA 88.## KALITA AUTOMOBILES (4259), N.H. 37,NEAR PETROL PUMP,MIRZA,ASSAM PIN-781125 PH :9864410013.	SILAPATHAR 97.## J. B. MOTORS (5743), NH-52, JONAI ROAD-SILAPATHAR,DISTRICT - DHEMA JI,ASSAM PIN-787059 PH :9954635182.	BHAGALPUR 107.** RUPRA AUTOMOBILES (1577), EAST OF AIRPORT,BHAGALPUR,P.O. BAHDURPUR,(BIHAR) PIN-813210 PH :0641-9334285531.
79.##	RONOK AUTOMOBILES (5978), LALA ROAD, NEAR CIVIL HOSPITAL,HAILAKANDI,DISTRICT-HAILAKANDI DI,ASSAM PIN-788151 PH :-23328/9707426563.	MORANHAT 89.* CHINAKI SERVICE STATION (2973), (MARUTI AUTHORISED SERVICE STATION),NATUN NAGAR A.T. ROAD,MORANHAT,(ASSAM) PIN-785670 PH :03754-229522/9401512821.	SILCHAR 98.** CARDROME (1559), 2ND LINK ROAD JUNCTION,SONAI ROAD (M H C ROAD),SILCHAR,(ASSAM) PIN-788006 PH :225128.	BIHAR SHARIF 108.## SARVADAY ENGG. & AUTO SER (1549), INDUSTRIAL ESTATE, RAMCHANDRAPUR,BIHARSHARIFF (NALANDA) PIN-803101 PH :06112-934672919.
80.##	PRAMAN MOTORS (5730), NAGANDRA NAGAR, WARD NO.1,HOJAI,DISTRICT-NAGAON,ASSAM PIN-782435 PH :9954369700.	MORIGAON 90.## PRAGATI MOTORS (5273), MORIGAON TOWN. WARD NO.1 BHATBOR,DOLON PATH.P.O.:MORIGAON,DISTRICT - MORIGAON,ASSAM PIN-782105 PH :9864189158.	TINSAKIA 100.* AUTO MAKERS (934), NEAR SHIVDHAM MANDIR,MAKUM ROAD,TINSUKIA,(ASSAM) PIN-786125 PH :0374-2352841.	CHAPRA 109.## PRASAD AUTOMOBILES (1974), BHAGWAN BAZAR,CHAPRA,(BIHAR) PIN-841301 PH :06152-9431216362.
81.##	BOROOAH MOTORS (4545), NH-52 MURKONG SLEEK DIST. DHEMAJI,JONAI,ASSAM PIN-787060 PH :03758-222219 (R).	NAGAON 91.## DAS MARUTI MOTOR WORKS (3734), NAGAON,(ASSAM) PIN-782001 PH :03672-225031.	TITABAR 101.## SHANKAR AUTO WORKS (5174), C/O:SHIV SHAKTI AUTO WORKS BALAJI,MARKET TITABAR CHARIALI,TITABAR,DISTRICT - JORHAT,ASSAM PIN-785634 PH :249096.	DARBHANGA 110.* SINGH MARUTI CARE (2277), P.O. LALBAGH,DARBHANGA,(BIHAR) PIN-846004 PH :06272-9431293796.
82.##	S D AUTOMOBILE (4931), SILCHAR ROAD,KARIMGANJ,KARIMGANJ PIN-788710 PH :9435074975.	NALBARI		GAYA

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

111.*	AUTO CARE (3027), DURGA BARI,HARIDAS CHATTERJEE LANE,NEAR SAINT PAUL SCHOOL,GAYA (BIHAR) PIN-823001 PH :0631-9939407978.	120.**	DYNAMIC MARUTI SERVICE CENTRE (1163), HARI SHARAN MARG,AMGOLA,MUZAFFARPUR PIN-842002 PH :0621-936834599.	132.##	TRIPY CAR SERVICE CENTRE (5535), NEAR RELIANCE PETROL PUMP,G.T. ROAD,NH-2,SASARAM,DISTRICT-SASARAM, BIHAR PIN-821115 PH :9431485592.	141.##	AUTO CARE (3823), 203 J P COMPLEX SADA COLONY,JAMNIPALI,TEH. KATHGORAD,DIST. KORBA (CHATTISGARH) PIN-495450 PH :07759-233797/233353.		
HAJIPUR		121.##	PERFECT MOTORS (3465), NEAR CHANDNI CHAUK,JHITKIYA,POST: MIT PS: BRAHAMPURA,MUZAFFARPUR (BIHAR) PIN-842003 PH :0621-9470450260.	SITAMARHI	133.*	SITAMARHI AUTO CARE (6050), INDUSTRIAL AREA, RAJOPATTI,PO.SITAMARHI,DISTRICT-SITAM ARHI,BIHAR PIN-843302 PH :9430012437.	KORBA		
112.##	ALFA AUTO (5454), PASWAN CHOWK, NH13, HAJIPUR,DISTRICT - VAISHALI,BIHAR PIN-84101 PH :06244-9431327965.	PATNA	122.**	CAR SCANNER (1552), OPP. BATA,KANKAR BAGH COLONY,PATNA PIN-800020 PH :0612-9431016342.	CHANDIGARH	134.##	HAPPY SERVICE STATION (769), SECTOR 17B,MADHYA MARG,CHANDIGARH PIN-160017 PH :9216721561.	MANENDRAGARH	
113.**	HI-TECH AUTOMOBILE (3123), GANDHI SETU PATH,N.H.-19,HAJIPUR,VAISHALI (BIHAR) PIN-844101 PH :06224-983504502.	123.**	CITY AUTO SERVICE (1250), NEAR ALPANA MARKET,PATLIPUTRA COLONY,PATNA PIN-800013 PH :0612-9334117070.	135.**	CAR CLINIC (179), 128 INDUSTRIAL AREA,PHASE-II,CHANDIGARH PIN-160002 PH :9417216782.	142.##	AUTO SELF SERVICE (5020), MURARKA MARKET ROAD,(INDUSTRIAL ROAD),KORBA PIN-495677 PH :07759-247250/251.		
KAHALGAON		124.**	GOOD WRENCH SERVICES (3364), DAUDBIGHA,NR. NALANDA MEDICAL COLLEGE,KANKAR BAGH, MAIN ROAD,PATNA (BIHAR) PIN-800020 PH :0612-727772777.	136.##	RATTAN MOTORS (1155), SECTOR 23-C,CHANDIGARH PIN-160023 PH :9814008353.	143.##	SHARMA AUTO CENTRE (5354), MAIN ROAD - MANENDRAGARH,DISTRICT - KOREA,CHHATISGARH PIN-497442 PH :07771-241872/215305.		
114.##	MAHA GAURI ENTERPRISES (5822), NTPC ROAD,GANGANAGAR , CHOWRATHIYASTHAN,KAHALGAON,DISTRI CT-BHAGALPUR,BIHAR PIN-813203 PH :9431463558.	125.##	MARUTI MAINTAINER (4842), PLOT NO. 73,NEAR RAJENDER NAGAR,OVER BRIDGE, KANKARBAGH,PATNA PIN-800020 PH :0612-9304564382.	137.##	HI-TEK MOTORZ (4743), PLOT NO. 658,INDUSTRIAL AREA,PHASE-I,CHANDIGARH PIN-160002 PH :0172-9872567866.	RAJ NANDGAON (CHH)	144.##	SHIVAM CAR SERVICES (4774), BILASPUR ROAD,KHAMTARA,RAIPUR,CHATTISGARH PIN-492006 PH :0771-3090522/2563093/3290522.	
KHAGARIA		126.*	MOHINI AUTOMOBILES (1049), BEHIND RESERVE BANK OF INDIA,EXHIBITION ROAD,PATNA PIN-800001 PH :0612-9431094340.	CHHATTISGARH	138.#	MARUTI AUTO CARE (4839), KHARSIA NAKA,AMBIKAPUR,DISTRICT-SURJUWA,CHA TTISGARH PIN-497001 PH :0774-942526087/280294.	DELHI	145.##	SAI MOTORS (3672), OPP DENTAL COLLEGE,SUNDARA,DURG NAGPUR HIGHWAY (NH-8),RAJNANDGAON PIN-491141 PH :07744-228433/9179791051.
115.##	HIGHWAY SERVICE STATION (2374), NH-31,P.O. KOSHI COLLEGE,KHAGARIA (BIHAR) PIN-851204 PH :06244-9430067775.	127.**	RANJAN MOTORS (3665), SUDARSHAN PATH,NEAR PATNA SAHIB STATION,PATNA CITY PIN-800009 PH :0612-9334084343.	AMBIKAPUR	139.##	RAINEY'S AUTO CARE (4770), RAIPUR ROAD MAHARANA PRATAP CHOWK,NEAR LABOUR COMMISSIONER OFFICE,JARBHATA,BILASPUR (CHATTISGARH) PIN-495001 PH :0612-2668247/2671215.	146.**	SUBHYATRA AUTOMOBILES (5045), PLOT NO 31,N BLOCK SECTOR - 3,BAWANA INDUSTRIAL AREA,BAWANA PIN-110039 PH :011-981068715/9717421118.	
MADHEPURA		128.##	RELIABLE MOTORS (2972), NEAR WEST OF COMMUNITY HALL,NEAR NISHA DEVI ASHRAM,EAST LOHANIPUR KADMUKUAN,PATNA (BIHAR) PIN-800003 PH :0612-2668247/2671215.	147.**	NAVEEN AUTOMOBILES (4934), 37, PATPARGANJ INDUSTRIAL AREA,NEW DELHI PIN-110092 PH :011-22163719/65092326.				
116.##	KRISHNA AUTOMOBILES (2639), PATHRAHA,SINGHSWAR ROAD,MADHEPURA,(BIHAR) PIN-852213 PH :06476-223315.	129.**	TIRUPATI AUTO (1956), ASHIANA MORE,BAILEY ROAD OPPOSITE UNION BANK,RAJABAZAR,PATNA PIN-800014 PH :0612-9835050292.	148.##	AUTO ENGRS,SERVICE STN. (8023), OPP,MODEL TOWN,DERAWAL NAGAR,DELHI PIN-110009 PH :011-27231421/27231839.				
117.##	VIDYAPATI AUTOMOBILE (4234), BHUAURA,GANGASAGAR,MADHUBANI,BIHA R PIN-847211 PH :06276-9534298143.	130.##	PURNEA	149.*	DRIVE WELL SERVICE STN. (868), 1/486, G.C.S. COMPLEX, MAIN G.T. ROAD,DILSHAD GARDEN,NEW DELHI,PIN-110095 PH :011-22575411/22119859.				
MOTIHARI		131.##	MARUTI CARE (1526), TAJPUR ROAD,SAMASTIPUR,(BIHAR) PIN-848101 PH :06274-9835034061.	150.**	RAJINDRA SERVICES PVT. LTD. (826), B-55 G.T.KARNAL ROAD,INDUSTRIAL AREA,DELHI PIN-110033 PH :011-27114915/42384512.				
MUNGER		132.##	AUTO INDIA (3026), BIHAR TALKIES ROAD,LINE BAZAR,PURNEA (BIHAR) PIN-854301 PH :0641-9334461651/9470204501.	JAGDALPUR	140.##	VISHWAKARMA AUTOMOBILES (4467), RAJMAHAL PARISAR,BAHAMBERS OF COMMERCE ROAD,JAGDALPUR,CHHATTISGARH PIN-494001 PH :07782-223196, 228207.	151.##		
119.##	SUN BEAM ENGG WORKS (1533), 150 BETWAN BAZAR,P.O & DISTT. MUNGER (BIHAR) PIN-811201 PH :6344-9431418941.	133.##	SAMASTIPUR	141.##		152.##			
MUZAFFARPUR		134.##	MARUTI CARE (1526), TAJPUR ROAD,SAMASTIPUR,(BIHAR) PIN-848101 PH :06274-9835034061.	SASARAM	142.##		153.##		

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

151.**	SHALIMAR AUTOMOBILES PVT. LTD (871), C-91/9 WAZIRPUR INDUSTRIAL AREA,ASHOK VIHAR CROSSING,DELHI PIN-110052 PH:011-27377718/27373096.	164.##	YASHWANT PLACE SER. STN. (8022), AFRICA AVENUE,(OPP.CHANAKYA CINEMA),NEW DELHI PIN-110021 PH:011-24122424/26876388.	177.##	SHARMA AUTOMOBILES (1939), 11/78 VILLAGE MOTI BAGH,NEAR NANAKPURA GURDWARA,RING ROAD,NEW DELHI PIN-110021 PH:011-26875050, 26118764.	191.##	SHIKHAR AUTOMOBILES (5546), A-2/1CHOTTEY LAL PARK, SHIVAJI MARG,OPP KIRTI NAGAR,METRO PILLAR NO.341, NEW DELHI,DISTRICT - DELHI,DELHI PIN-110015 PH:011-25432956.
152.##	WIG AUTOMOBILES (8012), D-3 S.M.A CO-OP. INDL. ESTATE,(OPP. JAHANGIR PURI CHOWK),G.T. KARNAL ROAD,DELHI PIN-110033 PH:011-27692649/27696855.	165.**	BRIGHT MOTORS (P) LTD. (885), C-263 PEERAGARHI,OUTER RING ROAD,DELHI PIN-110087 PH:011-25267885/5252226.	178.##	BATRA CAR CARE CENTRE (1936), HUMAYUN ROAD,NEW DELHI PIN-110003 PH:011-23389332.	192.##	ROHAN SERVICES (5444), PLOT NO-125, VILLAGE POCHANPUR,SECTOR - 23 DWARKA,DISTRICT - DELHI (WEST),DELHI PIN-110075 PH:011-9911180827.
153.*	AAPKA KIRKHANA (MOTORS)PL (869), 62/I POSANGIPUR MAIN MARKET,A-3 BLOCK JANAKPURI,NEW DELHI,NEW DELHI PIN-110058 PH:011-25520157/25620947.	166.##	SRI BALAJI AUTOMOBILE (8038), KHASRA NO.33,13/2-12 MAIN BAWANA ROAD,SAMEYPUR (NEAR DELHI COLLEGE OF ENGG.),DELHI PIN-110042 PH:011-65151149.	179.##	SRI BALAJI CAR SCAN (2677), 43/12 OPP., NEW ANAJ MANDI,NAJAFGARH,NEW DELHI PIN-110043 PH:011-28012074/65478300.	NEW DELHI	
154.##	ASHA AUTOMOBILES (850), A-2 CHOTTEY LAL PARK,NAJAFGARH ROAD,OPP.KIRTI NGR,P.O,NEW DELHI PIN-110015 PH:011-25418492/25102655.	167.##	SRI SAI AUTO ENGINEERS (8074), 487/59 PEERA GARHI,INDUSTRIAL AREA,DELHI PIN-110087 PH:011-2724784.	180.*	STAR AUTOMOBILES (2574), MAIN SAFIABAD ROAD,NARELA,DELHI PIN-110040 PH:011-22750083, 22750084.	GOA	
155.*	AUTOWISE SERVICE STATION (8001), PP-38A GALI NO.10,ANAND PARBAT,KAROL BAGH,NEW DELHI PIN-110005 PH:011-28761021.	168.*	TONIKA AUTOMOBILES (8079), A-15 WAZIRPUR INDL. AREA,MAIN RING ROAD,DELHI PIN-110052 PH:011-41472572.	181.##	IMAGE (2661), IOC PUMP,NEAR SAMACHAR APT. ,OPP. KIRTI APT.,MAYUR VIHAR PHASE-I,EXT.,DELHI PIN-110091 PH:011-22716910/22717590.	BICHOLIM	
156.##	BASANT MOTORS (8003), 78 TOLSTOY LANE,BEHIND SCINDIA HOUSE,NEW DELHI PIN-110001 PH:011-23529566/23326860.	169.##	QUTAB SERVICE STATION (8078), MEHRULI ROAD,NEW DELHI PIN-110017 PH:011-26522726/26561242.	182.##	GLOBE SERVICE STATION (3631), 18TH KM MATHURA ROAD,BADARPUR,NEW DELHI PIN-110044 PH:011-14189333.	CURCHOREM	
157.##	BHASIN SERVICE STATION (830), DR. K.S. KRISHNAN ROAD,NEAR PUSA GATE,NEW DELHI PIN-110012 PH:011-25841794/25842852.	170.##	SATYA SERVICE STATION PVT. LTD. (3625), L-BLOCK, HARI NAGAR,JAIL ROAD,NEW DELHI PIN-110064 PH:011-25432926.	183.##	EXCEL AUTOMOBILES (3342), PLOT NO. 78,BAGDOLI VILLAGE,SECTOR 8, DWARKA,NEW DELHI PIN-110045 PH:011-25366202/65469750.	GOA	
158.##	ENGINEERS SERVICE STATION (834), SHRI AUROBINDO MARG,(SAFDARJANG AIRPORT),NEW DELHI PIN-110003 PH:011-27512696.	171.*	R S AUTOMOBILES (273), BAWA POTTERIES INDUSTRIAL COMPOUND,ARUNA ASAFA ALI MARG,VASANT KUNJ,NEW DELHI PIN-110070 PH:011-41761026, 41761810.	184.**	A-ONE AUTOMOBILES (3362), 487/35 NATIONAL MARKET,PEERAGARHI,DELHI PIN-110087 PH:011-25278935/25287066.	MAPUSA	
159.##	GUPTA SERVICE STATION (872), MOTI BAGH SOUGH,NEW DELHI PIN-110021 PH:011-26170989/26192162.	172.**	NORTHERN SERVICE STATION (337), SARAI BASTI,ROAD NO.40,OPP. SHASTRI NAGAR,DELHI PIN-110035 PH:011-23653122/65796229.	185.*	EXCLUSIVE AUTOMOBILES PVT. LTD. (3546), 98 MANGOLPUR KALAN,SECTOR-2 NEAR JAIPUR GOLDEN HOSPITAL,ROHINI,DELHI PIN-110085 PH:011-162696/32483330.	PONDA	
160.##	KITCHNER ROAD SERVICE STATION (864), ROAD NO.41,SAHEED LALA JAGAT NARAYAN MARG,NEAR T.V. TOWER PITAMPURA,DELHI PIN-110034 PH:011-65375676/27315321.	173.##	P R G MOTORS (365), A-99, 103CH. TEKHAND MARKET,GANESH NAGAR - TILAK NAGAR,DELHI PIN-110018 PH:011-42137852/25996299.	186.##	AUTOTECH ENGINEERS (451), PLOT NO. 20-24,MATIVALA VILLAGE,SECTOR-3, NEAR DPS DWARKA,NEW DELHI PIN-110075 PH:011-25083711.	VERNA	
161.**	KUMAR AUTOMOBILES (865), B-281 OKHLA INDUSTRIAL AREA,PHASE-I,NEW DELHI PIN-110020 PH:011-26812566/26813132.	174.**	SINTEX SERVICE STATION (777), 883, RITHALA INDUSTRIAL AREA,FIRNI NALA ROAD,DELHI PIN-110085 PH:011-27055055/64694522.	187.##	ANAND MOTORS (4471), B-27,G.T. KARNAL ROAD,INDUSTRIAL AREA,NEW DELHI PIN-110003 PH:011-7226256, 27466835.	GUJARAT	
162.**	MULTAN AUTOMOBILE ENGRS. (853), B-7/1 OKHLA INDUSTRIAL AREA,PHASE II,NEW DELHI PIN-110020 PH:011-41610495/41610496.	175.##	AUTO POINT SERVICE (1267), 70B RATTAN PARK,OPP. RAMESH NAGAR,NEW DELHI PIN-110015 PH:011-25430404/25101270.	188.##	BHAGIRATH MOTORS (4737), PLOT NO. 153/543,POOTH KHURD,DELHI PIN-110039 PH:011-27761321.	AHMEDABAD	
163.**	SEVEN HILLS AUTO. (P) LTD. (848), D-20/1 OKHLA INDUSTRIAL AREA,PHASE II,NEW DELHI PIN-110020 PH:011-26388766/26388768.	176.*	BAJAJ MOTORS (4940), T-5/242,MANGOLPURI INDUSTRIAL AREA,PHASE-1,NEW DELHI PIN-110083 PH:011-65164147.	189.##	HUNDRED PERCENT FILLING & SERVICE STATION (4939), LSC, SECTOR-9,OPP. NHAI,DWARKA,NEW DELHI PIN-110075 PH:011-25082966/25082967.	AHMEDABAD	
				190.##	BAJAJ MOTORS (4940), T-5/242,MANGOLPURI INDUSTRIAL AREA,PHASE-1,NEW DELHI PIN-110083 PH:011-65164147.	GUJARAT	
					199.*	AUTOWAY (125), MANGALYA COMPLEX,NEAR ANJALI CINEMA CROSS ROAD,BATTHA,AHMEDABAD PIN-380007 PH:079-9898016888.	

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

200.## DAHISON MOTORS (143), NEAR MANAV MANDIR,DRIVE IN ROAD,AHMEDABAD PIN-380052 PH :079-9989064929 / 989809642.	211.* NEW MARUTI MOTORS (5156), 9/16 AKASH GANGA,B/H CNG PUMP,O.D NH -8.BHOLAV,DISTRICT - BHARUCH,GUJARAT PIN-392002 PH :02642-9879532460.	220.## CAR ZONE (4358), SURVEY NO. 703,VARKUND, OPP VEERA DA DHABA,VAPI DAMAN ROAD,DAMAN PIN-396210 PH :0260-9824184449.	230.## MEHTA SERVICE STATION (135), NEAR SHANTI GARDEN,RESTAURANT,DIWALI BAUG MOTIPURA,N.H.B. HIMMATNAGAR GUJARAT PIN-383001 PH :9825052891 / 9879682582.
201.* RAJAN MOTORS (2873), C/O M/S. SUPER SERVICE STATION,79/80 JAGABHAI PARK,RAM BAUG MANINAGAR,AHMEDABAD PIN-380008 PH :079-9825972345 / 9879273953.	212.## VIKRAM MOTOR GARAGE (127), TAKHTESHWAR PLOT,NEAR CHANDRA BHUVAN,BHAVNAGAR PIN-364002 PH :0278-9426463280.	221.## TOP GEAR (5469), DAMAN-KUNTA ROAD,KUNTA DAMAN,DISTRICT - UNION TERRITORY,GUJARAT PIN-396210 PH :9825631264.	IDAR
202.## MEGHDOOT MOTORS (3437), MASONIC LODGE COMPOUND,SHAHIBAUG ROAD,AHMEDABAD PIN-380004 PH :079-9825488228	213.* ASHA MOTORS (3629), LAL TEKRI,HOSPITAL ROAD,BHUJ,(GUJAHAT) PIN-370001 PH :02632-9825235088.	222.## VAKHRIA MOTORS (3970), G L PADIAR COMPLEX,PALANPUR PATHAN HIGHWAY,OPP. RAJMANDIR TALKIES,DEESA PIN-385001 PH :9377728841.	231.## ADINATH AUTOMOBILE & WORKSHOP (3136), NEAR HOTEL GREEN PARK,AMBaji HIGHWAY ROAD,IDA-R,HIMMATNAGAR PIN-383430 PH :02778-255787/255411.
203.** SPEED AUTO CARE PVT. LTD (5524), NH-8,VIRAT NAGAR AHMEDABAD,DISTRICT - AHMEDABAD,GUJARAT PIN-382350 PH :079-9825210344 / 9925204239.	214.## PATEL AUTOMOBILES (4030), DANDEKAR COMPOUND,GANDEVI ROAD,BILIMORA PIN-396380 PH :02634-9824123875 / 9825471557.	223.## GURUKRUPA MOTORS (5876), NR. NARMADESHWAR MAHADEV TEMPLE,DHARI, AMRELI ROAD, DHARI,DISTRICT-AMRELI,GUJARAT PIN-365640 PH :9924728405/9825374658.	232.## SUN MOTORS (5175), IDAR-HIMMATNAGAR HIGHWAY ROAD,AT KRUSHNAGAR, PO NETRAMLIT,A.IDER DISTRICT SABARKANTA,GUJARAT PIN-383430 PH :02778-9879589145 / 922826768.
204.* POKAR AUTO REPAIRERS (2479), NEAR UNION CO. BANK,SAIJUPUR BOGHA,NARODA ROAD,AHMEDABAD PIN-382345 PH :079-9989336510.	215.## SUMAN MOTORS (3863), NEAR NISHRAYA CROSSING,BHARAN ROAD,BORSAD,DISRTT. ANAND PIN-388540 PH :02696-221524/942844346.	224.## UNIVERSE AUTO (5837), SARDAR CHOWK,DHORAJI,DISTRICT- RAJODI,GUJARAT PIN-360410 PH :9727714643.	JAM KHAMBHALIA
205.* CAR CARE CENTRE (2734), PATEL GARAGE,CHAKRAGADH ROAD,AMRELI,(GUJARAT) PIN-365601 PH :02792-220099/23519/9825422922.	216.* BALVINDER AUTOMOBILES (2528), PLOT NO.202/NATIONAL HIGHWAY NO.8,CHAND KHEDA,DISSTT. GANDHI NAGAR (GUJARAT) PIN-382424 PH :079-9924016000 / 9924061000.	225.# BHADRA SERVICES (5975), OPP,SATHWARA BHUVAN,NR.KANDAS BAPU ASHRAM, DWARKA,DISTRICT-JAMNAGAR,GUJARAT PIN-361315 PH :02692-222207/9879615919.	233.## SHRI HARI OM MOTORS (4539), JADESWAR ROAD CHAR RASTA,OPP. KRISHNA WAY BRIDGE,JAM KHAMBHALIA,GUJARAT PIN-361105 PH :02833-9426955344.
206.* KHODIAR MOTORS (3029), GAVADKA ROAD,AMRELI,(GUJARAT) PIN-365601 PH :02792-224698/9825672657.	217.## SHREE AMBICA MOTORS (2663), KUNDI FATAK,NEAR ADARSH NURSERY,N.H.8 CHIKHLI DISTT., VALSAD (GUJARAT) PIN-396001 PH :02632-285477/285029/9825131520.	226.## SHITAL MOTORS P.LTD. (134), 304 G.I.D.C.,SECTOR-28,GANDHINagar (GUJARAT) PIN-382028 PH :079-9824310888 / 9924127065.	JAMNAGAR
207.* PATEL TRACTOR COMPANY (2221), (SERVICE DIVISION),BEHIND SUNIL CHAMBERS,STATION ROAD,ANAND PIN-388001 PH :02692-9925534494.	218.## INAL MOTORS (3929), POST MAJIGAM,CHIKHLI BILIMORA ROAD,DISSTT NAVSARI PIN-396321 PH :02634-9099033773.	227.* RIDHI MARUTI(A DIVISION OF SHREE ARBODA PVT. LTD (215), E-19/10 G.I.D.C. SECTOR 26,NEAR K-7,GANDHINAGAR PIN-382044 PH :02712-9825041331.	234.* LANDMARK AUTOMOBILES (1973), AIRPORT ROAD,KHAMBHALIA HIGHWAY,JAMNAGAR,(GUJARAT) PIN-361006 PH :0288-9227620700.
208.## SHAKTI MOTORS (2226), OPP. J.K. PARK,NATIONAL HIGHWAY NO.8,P.O. VAGHASHI,TA: ANAND DISTT. KHEDE PIN-388320 PH :02692-9825792999.	219.* CAR SEVA (2438), APNA PLASTIC COMPOUND,OPP. ST. STEPHEN SCHOOL,GODHRA ROAD,DAHOD PIN-389151 PH :02673-9426469122.	228.* LABH MOTORS (4527), 803/2 KASHI DIAMOND,NR. PARTH GAS AGENCY,GIDC, SECTOR-28,GANDHINAGAR PIN-382028 PH :079-9825020030 / 9712920030.	JETPUR
209.## CAR AGE (5542), PLOT NO.11, MAHATMA NAGAR-1,ANJAR,-GADHPADAR ROAD, NR. MAHAKALESHWAR,MAHDEV MANDIR,ANJAR,GUJARAT PIN-370201 PH :02836-9427216886/9427211167/241796.	220.## DAMAN	229.## MAA MOTORS (4767), GODHRA ROAD,NEAR TELEPHONE EXCHANGE,HALOL,GUJARAT PIN-389350 PH :02676-222375/9899610212.	235.## GIRIRAJ MOTORS (3971), SARDAR CHOWK,JETPUR HIGHWAY,JETPUR PIN-360370 PH :02823-225780/9727154392.
210.** POOJA MOTORS (361), NEAR GIDC,SURAT ROAD,BARDOLI,(GUJARAT) PIN-394601 PH :02622-9825762621.			JUNAGARH
211.## BHARUCH			236.## MARUTI MOTORS (266), G.I.D.C. - I,RAJKOT HIGHWAY,DOLATPARA,JUNAGADH(GUJARA T) PIN-362037 PH :0285-9904717770.
			KALOL
			237.## SUNRISE AUTO CENTRE (146), OPP. IFFCO,AHMEDABAD-MEHSANA ROAD,SAIJ KALOL,(NORTH GUJARAT) PIN-382721 PH :02764-309646/9824407885.
			KAMREJ
			238.* PATEL MOTOR GARAGE (2764), SURAT ROAD,JYOTI PARK,KAMREJ CHAR RASTA,KAMREJ DIST. SURAT PIN-394285 PH :02621-9825127413.
			KAPADVANJ

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

239.## DISHA MOTORS (5960), MAHAMADPURA,KAPADVANJ-NADIAD ROAD,KAPADVANJ,DISTRICT-KHEDA,GUJARAT PIN-387620 PH :02691-9825641244 / 9426361548.	248.## ASHA MOTORS (4340), NANA ANGLADESH,NAKHATRANA HIGHWAY ROAD,NAKHATRANA,KUTCH PIN-370001 PH :02835-9427272315.	257.## GOOD LUCK MOTORS (5341), 2.UMIYA COMPLEX.NEAR GURUKUL,HIGH SCHOOL SIDDHPUR,DISTRICT - PATAN, GUJARAT PIN-384151 PH :02767-9426665131.	267.* RUBY MOTORS (5942), SASAN ROAD,OM NAGAR,TALALA,DISTRICT-JUNAGADH,GUJA RAT PIN-362150 PH :02877-9426975022.
KESHOD			
240.## PRASAD MOTORS (3969), VERAVAL HIGHWAY,KESHOD,KESHOD PIN-362220 PH :02871-942642488 / 93280 01734.	249.** JIGAR MOTORS (133), N.H-8,KABILAPORE,NAVSARI,VALSAD DIST. (GUJARAT) PIN-396424 PH :02637-9879549533.	258.# MOMAI MOTORS (6032), NR. RAJ MOMAI PETROLIUM,BHAVNAGAR-RAJKOT HIGHWAY,SIHOR,DISTRICT-BHAVNAGAR,G UJARAT PIN-364240 PH :9909521980.	268.## KARAN AUTOMOBILES (2571), OPP. DAMRU WADI,UMBERAON SANJAN ROAD,UMBERAON DIST. VALSAD,GUJARAT PIN-396170 PH :0260-9826336583.
KHEDBRAHMA			
241.## MARUTI AUTO CARE (5342), OPP POLICE STATION,AHMEDABAD-AMBaji STATE HIGHWAY,KHEDBRAHMA,GUJARAT PIN-382255 PH :02775-9427369512.	250.## PANCHAL,AUTO REPAIRING WO (138), HIGHWAY ROAD,NEAR RAILWAY CORSSING,PALANPUR PIN-385001 PH :02742-9426323294.	259.## SHREE KRISHNA MOTORS (5374), PLON NO.43.66 KVA ROAD AMLI,SILVASSA,DISTRICT -(UT),GUJARAT PIN-396230 PH :9904707111 / 9904707123.	269.## AMBIKA MOTORS (3932), SADGURU COMPLEX,AHMEDABAD PALAM PUR HIGHWAY ROAD,UNJHA,MEHSANA PIN-384170 PH :9824517382.
LIMDI			
242.## PARTH AUTOMOBILES (4171), NEAR LIMDI CHOWKAHMEDABAD RAJKOT HIGHWAY,LIMDI PIN-363641 PH :02763-9426714510.	251.## SIDDIHI MOTORS (4166), NADIAD-CAMBAY ROAD,NEAR KAILASH DHAM,PETLAD PIN-387001 PH :02697-9429031303.	260.## EMPEROR CAR TECH (1748), F.PLOT NO.124 NEAR RELIANCE COMPLEX,BESIDE SHEETAL MARBLE,SURAT-DUMAS ROAD PIPLOD,SURAT PIN-395007 PH :0261-9825033396.	270.## VRAJ MOTORS (4560), UMIYA PARK, HIGHWAY ROAD,VADALI TA,VADALI,SABARKANTA (GUJARAT) PIN-383235 PH :02778-220109 / 9427364109.
LUNAWADA			
243.## N.J. MOTORS (4370), MODASSA ROAD,NR. SAIFEE HOTEL,LUNAWADA,DIST. PANCHMAHAL (GUJARAT) PIN-389230 PH :026474-25070/99254252700.	252.## ZEBA MOTORS (4535), PLOT NO. 5.ZABUNISHA MANZIL, ANUKOOL NAGAR,BEHIND SAFED CHAL,UNN SURAT (GUJARAT) PIN-395006 PH :0261-9727719082.	261.## SEIKON MOTORS (3161), PLOT NO.49,50,51 SAI ASHISH INDL. ESTATE,NEAR BAMROLI BRIDGE,120 FT. BAMROLI ROAD,SURAT (GUJARAT) PIN-359002 PH :0261-9426149966.	271.## CHAUDHARY & CHAUDHARY MOTORS (6561), OPP.RELIANCE PETROL PUMP,PALAMPUR ROAD - VADGAM,DISTRICT - BANASKANTHA,GUJARAT PIN-385001 PH :02793-9925457783.
MEHSANA			
244.## SHUBH AUTO SERVICES (3367), NEAR AGRO PETROL PUMP,OLD RTO,RAMOSNA JAKAT NAKA,MEHSANA (GUJARAT) PIN-384002 PH :02762-9825120859 / 9825322460.	253.## KHODIYAR MOTORS (356), DHEBAR ROAD (SOUTH),ATKIA INDUSTRIAL ESTATE,RAJKOT,RAJKOT PIN-360001 PH :0281-9925311011.	262.## PATEL MOTORS (3060), 64 BAJRANG NAGAR,NEAR OCTROI CHECK POST,NANA VARCHA,SURAT PIN-395006 PH :0261-9909149498.	272.## MAYUR SERVICE STATION (2224), NEAR POLICE STATION,PRATAPNAGAR ROAD,BARODA PIN-390004 PH :0265-9879453031.
245.* SANSKAR MOTORS (5468), PALAVASANA -BECHARAJI ROAD,NR.ONC FIRE STATION ,MEHSANA,DISTRICT-MEHSANA,GUJARAT PIN-384002 PH :02762-9825206359 / 9825604959.	254.* UNIVERSE AUTO (5544), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM,OCTROI POINT, AHMEDABAD HIGHWAY,RAJKOT, DISTIRCT - RAJKOT,GUJARAT PIN-380002 PH :0281-2705643/9879616643.	263.* JK MOTORS (5158), LUJAH MOHALLA ,POSTT PALGAM,DISTRICT - SURAT,SURAT,GUJARAT PIN-394510 PH :0261-9979865551.	273.** CAR CARE (2229), NEAR GANDHI OIL MILL,GORWA INDUSTRIAL ESTATE,BARODA PIN-390016 PH :0265-9227106915.
MORVI			
246.## ARUN MOTORS (2071), SANALA BYE PASS,NEAR G. P. GINING MILLS,MORBI,GUJARAT PIN-363641 PH :02822-9825100253 / 9825222825.	255.## R. N. MOTORS (5255), 22-GIDC NEAR PETROL PUMP,RAJPIPLA,DISTRICT - NARMADA,GUJARAT PIN-393145 PH :02640-220549/9925325300.	264.* TARUN MOTORS (5254), PLOT NO.A/10/4,ROAD NO.4,MAHATMA GANDHI ROAD,UDYOG NAGAR,UJDHNA - SURAT,GUJARAT PIN-394210 PH :0261-9712976141.	274.** HONEST AUTO STRUCTURE WORKS (279), NEAR SURAZ PLAZA,EAST OF JETALPUR RAILWAY UNDERBRIDGE,SAYAJI GUNJ,BARODA PIN-390004 PH :0265-9824014046.
NADIAD			
247.## SHIVAM MOTORS (4430), OPP RASHAM RESTAURANT,DABHAM CROSSING, N.H 8,NADIAD,GUJARAT PIN-387001 PH :0268-9824343515/258156.	256.## SHYAM MOTORS (5961), OPP. ESSAR PETROL PUMP,AMRELI ROAD, SAVARKUNDLA,DISTRICT-AMRELI,GUJARAT PIN-364515 PH :02845-972222923.	265.* NILESH MOTORS (5347), PLOT NO.21/23 PARAS INDUSTRIAL ESTATE,NEAR GAJERA CIRCLE, KATARAGM, SURAT,DISTRICT - SURAT,GUJARAT PIN-395000 PH :0261-2481836, 9377162654.	275.* GENERAL MOTOR REPAIRING WORKS (2529), NEAR LOK SATTA PRESS,NAGARWADA,VADODARA PIN-390001 PH :0265-9825026106.
NAKHATRANA			
SIDDHPUR			
SAVARKUNDLA			
SURENDERANAGAR			
TALALA			

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

277.* CAR CLINIC (4640), PLOT NO. B-7 (PART),ANUR ESTATE,NEAR DABHOI ROAD, JAKATNAKA,VADODARA (GUJARAT) PIN-390004 PH :0265-9925003558.	286.## HIRA MOTORS (2740), 207 MILE STONE,VASANT VIHAR GT ROAD,N.H. -1,AMBALA CITY PIN-134003 PH : 9255285212.	296.## SARASWATI AUTOMOBILES (4465), 44 B.P.NEELAM BATA ROAD,N.I.T,FARIDABAD PIN-121001 PH :0129-4029665, 2429665/9811446686.	307.** SOMESH AUTOMOBILES (455), SHIVALAYA,A-2 ROAD PHASE-I,DLF QUTAB ENCLAVE,GURGAON PIN-122002 PH :0124-4055275/2352162/9213094482-83.
VALIA 278.## HARI OM AUTO CARE (5750), NEAR MAZDA HOTEL - VALIA,ANKALESHWAR ROAD-VIALA,DISTRICT-BHARUCH,GUJRAT PIN-393135 PH :9427336094.	287.## BASSAN MOTORS (4964), 99 TH MALL,AMBALA CATT,HARYANA PIN-133001 PH : 9466000000.	297.## BALAJI SERVICE STATION (4956), SECTOR 23-24, MAIN ROAD NEAR BALAJI DHARM KATA,FARIDABAD,HARYANA PIN-121004 PH :0129-9818700422/100265.	308.** QUTAB AUTOMOBILES (3668), BEHIND SUSHANT LOK,I,POLICE POST NEAR RIDGEWOOD,DLF PHASE-IV,GURGAON PIN-122002
VALSAD 279.* HONEST AUTO GARAGE (2220), SUGHAR FALIA,BEHIND MOTA GHANCHIWAD,VALSAD (GUJARAT) PIN-396001 PH :02632-9925055600 / 9426110767.	288.* S.S MOTORS (5735), NEAR REST HOUSE,BADHARA,DISTRICT-BHIVANI,HARY ANA PIN-123308 PH : 9255141288/9812451052.	298.** PERFECT AUTOZONE (P), LTD. (5667), VILLAGE ANKHIR, OPP. SEC 21D,MAIN BADHKAL ROAD,DISTRICT - FARIDABAD,HARYANA PIN-121001 PH :0129-2460020/2460030.	309.## TOP GEAR AUTOMOTIVE ENGINEERS (4464), MAIN JHARSA ROAD,GURGAON,(HARYANA) PIN-122003 PH :0124-4039011, 9810304011, 9891439407.
VANTHLI 280.* INFINITY MOTORS (5963), RAVI RATANVADLA FATAK,OPP.HP PETROL PUMP ,POST VADLA, TAL VANTHLI,DISTRICT-JUNAGADH,GUJARAT PIN-362205 PH :9737521899.	289.## GL AUTOMOBILES (5263), MAIN ROHTAK ROAD,SANKHOL OPP CH. DEVI LAL PARK,DISTRICT - BHADURGARH,HARYANA PIN-124507 PH :01276-9416303473.	299.## AUTO ENGINEERS (5350), 131.DLF INDUSTRIA AREA PHASE-1,DISTRICT - FARIDABAD,HARYANA PIN-121001 PH :0129-9810004318/9312524511/4124511.	310.## A & A ENTERPRISES (4639), 396,PHASE-IV,UDYOG VIHAR,GURGAON (HARYANA) PIN-122001 PH :0124-2399862, 63, 9312063450/9868599812.
VAPI 281.* H.V. MOTORS (5047), NEAR BILL KHADI,NH-8,BALITHA,API,DISTRICT - VALSAD PIN-396191 PH :0260-9824145599 / 9824405599.	290.## LUXMI AUTOZONE (5634), VPO BARARA,DISTRICT - AMBALA,HARYANA PIN-133203 PH :09467116785.	300.** M R MOTORS (5946), GURGAON-JHAJJAR ROAD, OPP. ANAAZ MANDI,FARRUKHNAGAR,DISTRICT-GURGA ON,HARYANA PIN-123506 PH : 9810831200.	311.## RAJASTHAN AUTO WORKS (4760), LT. ATUL KARATIA MARG, NEAR PETROL PUMP,AKASHI FILLING STATION,AMAN PURA, SECTOR-5 ROAD,GURGAON (HARYANA) PIN-122001 PH :0124-2300238/9211819420/9810058722.
VIRAMGAM 282.## KRISHNA MOTOR GARAGE (4038), OUTSIDE BHARWADI GATE,NEAR BHARAT PETROL PUMP,VIRAMGAM PIN-382150 PH :02715-9426415274 / 9016726604.	291.** FAQIR CHAND QUALITY FUELS (5435), KILLA NO.20 L.H.S. NH-65,CHANDIGARH ROAD - BARWALA,DISTRICT - HISAR,HARYANA PIN-125001 PH : 9215027000.	301.## DHINGRA AUTOMOBILES (1856), G.T. ROAD,FATEHABAD,(HARYANA) PIN-125050 PH : 9416049167.	312.## MANISH AUTOMOBILES (4777), GHATA ROAD,WAZIRABAD, NEAR SECTOR-56,GURGAON,HARYANA PIN-122001 PH :0124-9873243858/9899561595/9899475288.
VYARA 283.# PARTH MOTORS (5240), D-1,CITY LIGHT TOWER,KAKRAPAR,BYPASS ROAD,VYARA,DISTRICT-SURAT,GUJARAT PIN-394650 PH :02626-221284/9898292020.	292.## VEER MOTOR WORKSHOP (1850), 24 NEW MOTOR MARKET,BHIWANI,(HARYANA)PIN-127021 PH : 9416057857.	303.## SITA AUTOMOBILES (4260), 347, WARD NO. 10,BST ROAD,GANAUR,DISTT- SONEPAT PIN-131101 PH :01310-9416062747.	313.* KUMAR AUTOMOBILES (4848), BEHRAMPUR ROAD,NEAR NH-8,GURGAON,HARYANA PIN-122001 PH :0124-9873431696/2215696/9873448804.
HARYANA	BHUNA	GANAUR	GANOWA
AMBALA 284.** RAVI MOTORS (1957), 125 STAFF ROAD,HOTEL SAVOY,AMBALA CANTT PIN-126102 PH : 9315110209/9416640012.	293.* MITTAL AUTOMOBILES (5748), NEAR BUS STAND ,JAKHAL ROAD - BHUNA,DISTRICT-FATEHABAD,HARYANA PIN-125111 PH : 9813207221.	304.** PANCHMUKHI AUTOMOBILES (5968), HISSAR RAJGARH A PIN-125001 PH : 9728100029/9255562564.	314.## S G MOTORS (5756), PLOT NO.494, SECTOR 37,PACE CITY II,UDYOG VIHAR VI - GURGAON,DISTRICT-GURGAON,HARYANA PIN-122001 PH :0124-9910655113.
285.** GURU NANAK MOTORS (2036), POLICE LINES CHOWK,AMBALA CITY PIN-134003 PH :0171-2551645/2517061/9416155906.	294.## INSUH AUTO ENGINES P. LTD. (377), 13/3 MAIN MATHURA ROAD,(ADJOINING FRICK INDIA),FARIDABAD PIN-121003 PH :0129-2272587, 2272484, 9810135516. 295.## KHURANA AUTOMOBILES (2863), 3C/60 B.P. (OPPOSITE ESI HOSPITAL),N.I.T.,FARIDABAD PIN-121001 PH :0129-4056020, 4056021.	305.## KRISHNA MOTORS (4132), ROHTAK ROAD,GOHANA PIN-131301 PH :01263-9416013596.	315.## SRI PARKASH AUTOMOBILES (5862), BAJGHERA ROAD, NEAR PARKASH PURI ASHRAM,NEW PALAM VIHAR,DISTRICT-GURGAON,HARYANA PIN-122001 PH : 9899157729.
		306.## GANGA MOTORS (363), SHIVPURI,GURGAON PIN-122001 PH :0124-2314940/2322084/98104306028.	316.## SEVEN HILL SERVICE STATION (6038), VIJAY VIHAR, MAIN SILOKHA ROAD, SEC-30,GURGAON,HARYANA PIN-122002 PH : 9810602354.
			HANSI

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

317.**	VIKAS AUTOMOBILES (4744), SHANTI NIKETAN,OPP. JIND BYE PASS, G.T. ROAD,HANSI,DISTRICT-HISSAR (HARYANA) PIN-125001 PH :01663-9466248037.	KANINA 328.## SHREE KRISHNA MOTORS (5953), BHOOP SINGH MARKET, NEAR PETROL PUMP,MAHENDERGARH ROAD, KANINA,DISTRICT-MAHENDERGARH,HARYANA PIN-123027 PH :9467641678.	MANESAR 338.## MAITRI SERVICE STATION (2378), N.H.8,DELHI-JAIPUR ROAD,MANESAR (GURGAON) PIN-122001 PH :0124-2290349/9912017293/9911104120.	RANIA 348.## SINGLA MOTORS (3779), NEAR BUS STAND,RANIA,DISTT. SIRSA (HARYANA) PIN-125076 PH :01698-9416011238.
HISSAR				
318.*	PALCO MOTOR GARAGE (4739), 96 AUTO MARKET,HISSAR,HARYANA PIN-125001 PH :01662-9896303233.	329.** RUBY MOTORS (4734), 28/3 HSIDC,NEAR NAMASTEY CHOWK INDUSTRIAL AREA,KARNAL,HARYANA PIN-132001 PH :0184-9896345633.	NARNAUL 339.## SHYAM AUTO TRADE (1571), SINGHANA ROAD,NARNAUL,(HARYANA) PIN-123001 PH :01282-251605/251620/9466432785.	REWARI 349.## GAUTAM MOTORS (1837), NARNAUL ROAD,REWARI (HARYANA) PIN-123401 PH :01274-22895/22395/325095.
319.**	SALASAR AUTO (4735), OPP. VIDYUT NAGAR GATE NO. 2,DELHI ROAD,HISSAR,HARYANA PIN-125001 PH :01662-9355486716.	340.## SURENDERA MOTORS (5049), NEW NEHSIL ROAD,NILOKHERI,DISTRICT KARNAL,NILOKHERI,HARYANA PIN-132117 PH :9996308730.	350.* SHIVAM SERVICES (1466), OPP. CENTRAL SCHOOL,GARHI BOLNI ROAD,REWARI PIN-123401 PH :01274-254825/9416288341.	
320.*	SAI AUTOMOBILES (5267), MAIN DELHI ROAD,HISSAR,HARYANA PIN-125001 PH :01662-9812900046.	341.** D.K. & R.K. MOTORS (1159), NEAR BUS STAND,BYE-PASS ROAD,PALWAL,(HARYANA) PIN-121102 PH :01275-252647/251816.	351.## PULYANA MOTORS (4663), BEHIND KAMLA PALACE,CIRCULAR ROAD,REWARI,HARYANA PIN-123401 PH :01274-9416064738/ 252238/ 257938/9955983168.	
HODAL		342.* SHEELA MOTORS (5141), OPP MUNICIPAL COUNCIL OFFICE,G T ROAD,DISTRICT - FARIDABAD,HARYANA PIN-121102 PH :01275-9416066251/401501.	SADHAURA 352.## SHREE GANESH MOTORS (6959), NEAR INDIAN OIL PETROL PUMP,KALA AMB ROAD,SADHAURA,DISTRICT-YAMUNANAGA R,HARYANA PIN-132024 PH :9813376260.	
321.##	VED MOTORS (2247), HIGHWAY ROAD,NEAR RAILWAY STATION CHOWK,HODAL,(FARIDABAD) PIN-121106 PH :01275-236238/9255456907.	343.## PANCHKULA AUTO SERVICES (1949), PLOT NO.300,PHASE-II INDUSTRIAL AREA,PANCHKULA,(HARYANA) PIN-134109 PH :9915230196.	SHAHABAD 353.## MAHALAXMI MOTORS (354), LADWA ROAD,SHAHABAD MARKANDA,(HARYANA) PIN-136135 PH :42433,41933.	
INDRI		344.** PREM MOTORS (2266), PLOT NO.134,SECTOR 25 INDUSTRIAL AREA,PANIPAT PIN-132103 PH :01742-9416438046.	SIWANI 354.## GANESH AUTOMOBILES (5931), LOHARU MORH,SIWANI,DISTRICT-BHIIWANI,HARYAN A PIN-127046 PH :9812022020.	
322.##	ASHOKA MOTOR (6041), OPP. PARTAP FILLING STATION,LADWA ROAD,TEHSIL-INDRI,DISTRICT-KARNAL,HAR YANA PIN-132041 PH :8996234001.	345.## SHUBHAM AUTOMOBILES (4641), REWARI ROAD,LOHARU,DISTTT. GURGAON PIN-122500 PH :0124-2672942, 9812665240.	SOHNA 355.** SHRI SHYAM MOTORS (5951), OPP.RAGHUNANDAN PETROL PUMP,NEAR GD GOENKA INTERNATIONAL SCHOOL,SOHNA,HARYANA PIN-122103 PH :9582350079.	
ISMAILABAD		346.* AMAR AUTOMOBILES (2270), OPP. DAV COLLEGE,AMBALA ROAD,PEHOWA DISTT. KURUKSHETRA,(HARYANA) PIN-136128 PH :9896002974.	SONIPAT 356.## NEW HIGHWAY MOTORS (5055), MAIN DELHI ROAD,SONEPAT,HARYANA PIN-131001 PH :09812530120, 2234999.	
323.*	VINAYAK MOTORS (6052), OPP. MAHARAJA PALACE,AMBALA HISSAR ROAD,ISMAILABAD,HARYANA PIN-136129 PH :9416250081/9996045636.	347.* SHRI SHIVAM AUTOMOBILES (5852), S.K. ROAD,OPP. ESSAR PETROL PUMP,RADAUR,DISTRICT-YAMUNANAGAR,HARYANA PIN-135133 PH :135133-9255952717.	TAURU	
ISRANA				
324.##	SHIV DARSHAN AUTOMOBILES (6051), ISRANA PANIPAT ROAD,NR. NC COLLEGE, ISRANA,DISTRICT-PANIPAT,HARYANA PIN-132103 PH :9911366230.			
JHAJJAR				
325.##	VASUNDHRA MOTORS (1467), REWARI ROAD,JHAJJAR,(HARYANA) PIN-124103 PH :9812012180.			
JIND				
326.##	MOHIT MOTORS (1574), SAFIDON GATE,JIND PIN-126102 PH :9355129844.			
KAITHAL				
327.##	HIND AUTOMOBILES (1858), AMBALA ROAD,KAITHAL PIN-136027 PH :3496,2416 (RES.).			

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

357.## R M MOTORS (5842), WADE NO:4 BEHIND WINE SHOP MAIN REWARI SOHNA ROAD,TAURU,DISTRICT-MEWAT,HARYANA PIN-122105 PH :9812378663.	BANGANA 366.## TRISHLA AUTOMOBILES (5869), VILLAGE BPO & TEHSIL BANGANA,BANGANA,DISTRICT-UNA.HIMACHAL PRADESH PIN-174307 PH :9817332462.	DHARAMSALA 376.## EAGLE MOTOR SERVICE STN. (6426), SHAM NAGAR,DHARAMSALA (HIMACHAL PRD.) PIN-176215 PH :22032. 377.## SHIV SHAKTI CAR CARE (1277), NEAR RAINBOW SCHOOL,DARI ROAD,DHARAMSHALA PIN-176057 PH :24056.	KEYLONG 386.## YOLAX MOTORS (3830), KEYLONG,DISTT. LAHAUL & SPITI PIN-175132 PH :01900-22448, 22517.
TOHANA 358.## DHANDA MOTORS (2271), PLOT NO.4,RATIA ROAD,TOHANA,DISTT. FATEHABAD PIN-125120 PH :20368.	BANOI 367.## BAWA SERVICE STATION (4634), VILL BANOI,TEH SHAHPUR P.O.,BANOI,DIST KANGRA (HIMACHAL PRADESH) PIN-176206 PH :9418051290, 9418105642.	378.## HIM AUTO STATION (3773), VPO DARI,DHARAMSHALA,(H.P.) PIN-176061 PH :01892-23055.	KULU 387.## SURYA MOTORS & SERVICE CENTRE (2943), NH-21,MANALI ROAD,BABELI,DISTT. KULLU (H.P.) PIN-175138 PH :01902-30456.
TOSHAM 359.## MOHINI AUTOMOBILES (6026), OPP.NEW ANAU MANDI,NEAR MINI BANK,TOSHAM,DISTRICT-BHIWANI,HARYAN A PIN-127040 PH :921595995/9992251000.	BARMANA 368.## AVER AUTO (5955), VILLAGE LAGAT,TEHSIL SADAR,PO BARMANA,HIMACHAL PRADESH PIN-174013 PH :9418064130.	GAGGAL 379.* CHAUDHARY SERVICE STATION (1966), GAGGAL (ICHHI),DISTT. KANGRA (H.P.) PIN-176209 PH :1892-265184.	388.## PURI BROTHER'S (4242), I.O.C DEALER,DHALPUR,KULU,H.P PIN-175101 PH :01902-22415.
UKLANA 360.* SHREE GANESH MOTORS (5747), PLOT NO/29,UKLANA MANDI,DISTRICT-HISSAR,HARYANA PIN-125113 PH :98123091531.	BHAMBLA 369.* DHIMAN MOTORS (3837), PLOT NO. 42,INDUSTRIAL AREA, BHAMBLA,JAHU,DISTT MANDI PIN-175004 PH :01972-263676,256436.	GHUMARWIN 380.## BHASKAR AUTO SPARES & SERVICES (5147), VILLAGE KULARU,GHUMARWIN,DISTRICT - BILASPUR,HIMACHAL PRADESH PIN-174101 PH :9817011700.	KUMARHATTI 389.* SOLAN AUTOMOBILES PVT. LTD. (6420), DAGHOTA (SOLAN),P.O.KUMAR HATTI (H.P.) PIN-173229 PH :66173.
YAMUNANAGAR 361.** GOPAL AUTOMOBILE SERVICE STATION (1874), NEAR LAL DAWARA,JAGADHRI ROAD,YAMUNANAGAR PIN-135001 PH :01732-21067.	BHUNTAR 370.## HANDA MOTORS (4262), HANNA COMPLEX,NEAR AIRPORT,BHUNTAR,KULLU (H.P) PIN-175125 PH :01902-265729, 265124.	QUIMMA 381.## CHAUHAN ENTERPRISES (5660), VILLAGE GUMMA,TEHSIL KOTKHAL,GUMMA,DISTRICT - SHIMLA,HIMACHAL PRADESH PIN-171202 PH :9816125191.	KUMARSAIN 390.## RED LINE (5965), VILL. KEPU,PO KIRTI SAINZ,TEHSIL,KUMARSAIN,DISTRICT-SHIMLA,HIMACHAL PRADESH PIN-172030 PH :9805996506.
HIMACHAL PRADESH	BILASPUR (H.P) 371.## BHASKAR AUTO SPARE & SERVICE (1730), 8-B ROURA SECTOR II,(NEAR DURGA MANDIR),BILASPUR (H.P) PIN-174001 PH :23335.	JAWALA JI 382.## SRI PARBHAT MOTORS (5036), VPO & TEHSIL, JAWALA-(BHANEI),DISTRICT - KANGRA,(HIMACHAL PRADESH) PIN-176029 PH :09816302881,09418004143.	MANDI 391.** BHAGWATI AUTOMOBILES (269), 13 INDUSTRIAL AREA,PHASE-III,SAULI KHAD,MANDI PIN-175 001 PH :35289,35189.
ALAMPUR 362.## SUBH AUTOMOBILES (5964), SH-39,ALAMPUR,DISTRICT-KANGRA,HIMACHAL HAL PRADESH PIN-176110 PH :980571228/941806656.	CHAMBA 372.## KAILASH SERVICE STATION (3527), AMRIT NIWAS MOHALLA,BONGUTA,CHAMBA TOWN,DISTT.CHAMBA PIN-176209 PH :01899-24485.	JAWALAMUKHI 383.## LAKSHMI AUTO SPARES & SERVICE CENTRE (4630), NEAR GANJU BAGH, DEHRA ROAD,JWALAMUKH,TEH. DEHRA DIST. KANGRA,(HIMACHAL PRADESH) PIN-171001 PH :01970-223018, 9418091048.	MARANDA 392.## MODERN SERVICE CENTRE (1175), PUSHP COMPLEX,MARANDA,(H.P) PIN-176102 PH :630983.
AMB 363.## SHUBHAM MOTORS (5933), NEAR PINDI ASHRAM,HAMIRPUR ROAD,AMB,DISTRICT-UNA,HIMACHAL PRADESH PIN-177203 PH :9418114176.	DARLAGHAT 374.## CHANDEL SERVICE STATION (5233), DARLAGHAT,DISTRICT-SOLAN,HIMACHAL PRADESH PIN-171102 PH :9816039865.	KARSOG 384.## DEEPAK AUTOMOBILES (4057), MR. DEEPAK SHARMA C/O SHARMA GENERAL STORE,KARSOG, MAIN BAZAR,DIST MANDI, HIMACHAL PRADESH PIN-171304 PH :01907-222242, 9816260061.	MEHATPUR 393.## BUDHA AUTO HOUSE (6422), MAIN BAZAR,UNA,MEHATPUR (H.P) PIN-174315 PH :64061,61766.
ANNI 364.## SARAJ AUTO WORLD (6044), VERMA BUILDING,NR. NAGAN HARIPUR,TEHSIL ANN, DISTRICT-KULLU,HI MACHAL PRADESH PIN-172026 PH :9129065065/981720002.	DEHRA 375.* WALIA ENTERPRISES (4252), HANUMAN CHOWK,NEAR DEHRA BRIDGE,DEHRA,DISTT. KANGRA PIN-177101 PH :01970-233184, 233751.	KAZA 385.## SPITI MOTORS (6033), VILL. & PO KAZA,DISTRICT-LAHIAUL & SPITI,HIMACHAL PRADESH PIN-172114 PH :9418758974.	MUBARAKPUR 394.## SHIV SHAKTI AUTOMOBILES (1732), HOSHARPUR ROAD,MUBARKPUR,DISTT. UNA,(H.P) PIN-177202 PH :1976-64661.
BADDI 365.** LAJ MOTORS (5541), 436.MAUJA SURAJ,MAJRA LABANA,BADDI,DISTRICT - SOLAN,HIMACHAL PRADESH PIN-174101 PH :9218644189.			NADAUN 395.** CAR CARE ENGINEERS (4423), HOSHARPUR ROAD,MANPUL,NADAUN,DISTT HAMIRPUR (H.P) PIN-177033 PH :01972-232765, 9418096457.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

396.## AGARWAL MOTORS (3334), GUNNU GHAT,NEAR TELECOM COLONY,NAHAN PIN-173001 PH :01702-25679(O),23558(R).	406.## KRISHNA AUTOMOBILE (4438), VILL CHUHA BAG,RAMPUR BUSHAHR PIN-172001 PH :0177-233046, 233091.	416.## JOSHI MOTORS (2778), SHALLI BAZAR,THEOG,DIST. SHIMLA,(H.P.) PIN-171201 PH :1783-9816140451, 8679440451.	KARGIL 427.* ZOZILA ENGG. WORKS (374), KARGIL,LADAKH PIN-194103 PH :9419176212.	
NALAGARH 397.## KRISHNA MOTOR (5275), PEERTHAN.PO NALAGARH,DISTRICT - SOLAN,HIMACHAL PRADESH PIN-174101 PH :01795-223561.	RECONG PEO 407.## KRISH AUTO (4134), V.P.O. DUNI,RECONG PEO,TEHSIL KALPA,DISTT KINNOUR (HP) PIN-172107 PH :01786-226053, 226017.	UNA (HP) 417.## TRINITY AUTO FAST ENGINEERS (1755), RAKKAR COLONY,NANGAL ROAD,UNA (H.P.) PIN-174303 PH :0178-26520.	KATHUA 428.* KATHUA MOTORS (3323), HATLI MORE,KATHUA,(J&K) PIN-184102 PH :9419150136.	
PALAMPUR 398.## SANGRAI AUTO SERVICE (6430), OPP. SITLA MATA MANDIR,PALAMPUR,DISTT: KANGRA (H.P.) PIN-176061 PH :01894-32685.	ROHRU 408.## KAMTA SERVICE STATION (238), ROHRU,DISTT. SHIMLA,(H.P.) PIN-171207 PH :01781-34430.	418.## RUDRA MOTORS (3925), NEAR OLD HOSPITAL CHOWK,NH-22,UNA (H.P.) PIN-174303 PH :01935-25137(SHOP), 25011 (RES.).	KATRA 429.## VIDYA AUTOMOBILES (1165), JAMMUR ROAD,KATRA JAMMU ROAD,KATRA,(J&K) PIN-182301 PH :01991-9419162339.	
399.## SANTOSHI AUTOMOBILES (4776), VILLAGE & P.O., BHAWARNA,TEHSIL,PALAMPUR,DISTRICT- KANGRA (HIMACHAL PRADESH) PIN-176061 PH :01894-94184367.	SALASHI 409.## THAKUR AUTOMOBILES (3838), JALANDHAR MANALI NATIONAL HIGHWAY (NH-70),NEAR DAV SCHOOL,VILLAGE SALASHI,DISTT HAMIRPUR PIN-172108 PH :01972-23412,9818090904.	AWANTIPORA 419.## KESAR AUTOMOBILES (5938), KHAR, MORN, NATIONAL HIGHWAY 1A,AWANTIPORA,DISTRICT-PULWAMA,JAM MU & KASHMIR PIN-192122 PH :9419507495.	KISHTWAR 430.## MINTOO MOTORS (4133), NEAR H.H.P.C SCHOOL,KISHTWAR,DISTT DODA (J & K) PIN-180001 PH :01995-9419154100.	
PAONTA SAHIB 400.## SUMEET MOTORS (1441), SHAMSHERPUR,PAONTA SAHIB,(H.P.) PIN-173025 PH :-22264.	SARKAGHAT 410.## SHAKUNTALA MOTORS (5755), MANDI ROAD-SARKAGHAT,DISTRICT-MANDI,HIMAC HAL PRADESH PIN-175024 PH :9817818822.	BARAMULA 420.* MARUTI MASTERS (4369), KANISPORA,BARAMULA,KASHMIR PIN-193101 PH :990659944.	MATTAN 431.## DANISH AUTOMOBILES (5478), PAHAL GAM ROAD,STATE HIGHWAY - MATTAN,DISTRICT - ANANTNAG,JAMMU & KASHMIR PIN-192101 PH :01932-9419045672.	
PAPROLA 401.## ABROL AUTOMOBILES (3470), RAJ KUMAR ABROL,V.P.O BIR,TEH. BAJNATH,DISTT. KANGRA (H.P.) PIN-176077 PH :01894-68517.	SHIMLA 411.** GURRAJ AUTO SERVICE (757), BAMLOE CHOWK,SIMLA PIN-171001 PH :6558.	CHADOORA 421.* VEHICLE MASTERS (4661), MAIN ROAD,CHADOORA,DIST. BUDGAM,JAMMU & KASHMIR PIN-190001 PH :9419475708.	PHINTER 432.## BADYL AUTOMOBILES (4149), C/O BADYL AUTOMOBILE,PHINTER,TEH BILLAWAR,DISTT KATHUA PHINTER (J & K) PIN-184203 PH :01921-9419691916.	
402.## DIVYA SALES (6428), DIVYA BHAWAN VILL. KAMIL,SECTOR-1,PARWANOO PIN-173220 PH :32685.	SOLAN 413.## SOLAN SERVICE CENTRE (764), BYE PASS,NEAR PWD OFFICE,SOLAN PIN-173212 PH :3149.	JAMMU 422.** KWIK FIT (2343), AMBPHALLA,B.C. ROAD,JAMMU PIN-180001 PH :9419182675.	PULWAMA 433.** KASHMIR AUTOMOBILES (5352), SRINagar, SHOPIAN ROAD FRUIT MANDI,PULWAMA,DISTRICT - PULWAMA,JAMMU & KASHMIR PIN-192301 PH :01933-9906799324.	
PATLI KUHAL 403.* JAMDAGNI MOTORS (760), VILLAGE PATLI KAHAL,P.O.KATRAIN,DISTT. KULLU (H.P.) PIN-175129 PH :9816040247,01902-40847.	SUBATHU 414.## SHYAM AUTOMOBILES (4558), NEAR SHANTI FILLING STATION,V.P.O RADYANA,SUBATHU,DIST SOLAN (HIMACHAL PRADESH) PIN-173206 PH :0179-2275606.	423.** MOBEL GARAGES (441), NARWAL CHOWK,TRANSPORT NAGAR,JAMMU PIN-180007 PH :9796800000.	RAJOURI 434.## MILLENNIUM MOTORADES (2937), ALPHA GATE,T.C.P.,RAJOURI,(J&K) PIN-185132 PH :01962-9419329486.	
RAJGARH 404.## RAJGARD AUTOMOBILES (5458), PO RAJGARH,TEH RAJGARH,DISTRICT - SIRMOUR,HIMACHAL PRADESH PIN-173101 PH :01799-221055.	SUNDERNAQAR 415.## V.M. SERVICE STATION (3777), CHAMUKHAP O HARABAGH,NH-21,SUNDER NAGAR (H.P.) PIN-174402 PH :01907-262130.	424.** CHECK N CARE AUTOMOBILE CENTRE (1773), OPP. GURUDWARA SRI SINGH SABHA,NARWAL BYE PASS ROAD,JAMMU PIN-180006 PH :9419190796.	REASI 435.## U LIKE CAR CLINIC (4771), GITA NAGAR,REASI JYOTIPURAM ROAD,REASI,DISTRICT-UDHAMPUR (JAMMU & KASHMIR) PIN-182101 PH :01991-9906015150.	
RAMPUR BUSHAHR 405.## HIGHWAY SERVICE STATION (2649), CHUHA BAG,RAMPUR BUSHAHR,DISTT. SHIMLA,(H.P.) PIN-172001 PH :01782-34043.	THEOG	425.* CARE POINT AUTOMOBILES (4652), OPP. BSF CAMPUS ROAD,AKHNOOR ROAD,JAMMU PIN-180002 PH :0191-9419283151.	SAMBHA	
** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs		426.## NATIONAL MOTORS (5074), OPP APNA VIHAR,B.P. PETROL PUMP,NH-1A KUNJWANI JAMMU,DISTRICT - JAMMU,JAMMU & KASHMIR PIN-180010 PH :9419194368.	* B-Category Mass : Free & paid Service & Major repairs ## C-Category Mass : Free & paid Service & Minor repairs	

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

436.## DHANSAR CAR CLINIC (5146), NATIONAL HIGHWAY,SUPWAL SAMBHA,DISTRICT - JAMMU,J&K PIN-184121 PH :9419934151.	446.## UUE AUTOMOBILES (4845), S-21 CITY CENTRE,BOKARO STEEL CITY,BOKARO,JHARKHAND PIN-827004 PH :06542-9431127441.	456.## MOD MOBILES (5579), MAIN ROAD, RANCHI ROAD - KHUNTI,DISTRICT - KHUNTI,JHARKHAND PIN-835210 PH :9006055883.	BAGALKOT 467.## NARA AUTOMOBILES (4357), TP NO. 158 A/2,WARD NO. 10,SHABADI COMPOUND EXTN,BAGALKOT PIN-587101 PH :08354-424092/ 423178/ 9448124093/9880875595.
SOPORE 437.## HASSAN MOTORS (2434), BPC DEALER,SOPORE,KASHMIR PIN-193201 PH :9419597727.	DEOGHAR 447.* GARGE AUTOMOBILE (2276), OPP. D.C. RESIDENCE,CIRCULAR ROAD,BARMASIA,DEOGHAR(BIHAR) PIN-814112 PH :06432-9431132526.	MAITHON 457.# MAITHON SERVICING CENTRE (5838), MAITHON ROAD, NEAR VMC COLONY,SANJAY CHOWK, PO CHIRKUNDA-MAITHON,DISTRICT-DHANBAD, (JHARKHAND) PIN-828207 PH :7290423707.	BAGEPALLI 468.# N.N. GARAGE (4263), T.B. CROSS,NH-7, BAGEPALLI,NEAR RTO OFFICE,KOLAR DISTRICT, KARNATAKA PIN-561207 PH :9845125260.
SRINAGAR 438.* SRINAGAR AUTOMOBILES (4925), M.A. LINK ROAD NEAR TRANSPORT YARD BRIDGE,CHINARBAGH,SRINAGAR (JAMMU & KASHMIR) PIN-190001 PH :0194-9419001793.	DHANBAD 448.## MAJUNDAR CAR SCAN (5135), BHUFORCE, K G ASHRAM ROAD,SARAI DELA,DISTRICT - DHANBAD,JHARKHAND PIN-828301 PH :0326-9835361472.	PAKUR 458.## SPEED WHEEL SERVICE CENTRE (4976), MAIN ROAD,PAKUR PIN-816107 PH :9434101917.	BAILHONGAL 469.# MAHANTH MOTORS (5763), RTO ROAD BAILHONGAL ,TALUK,DISTRICT-BELGAUM,KARNATAKA PIN-591102 PH :9900255566.
439.## NEW NATIONAL AUTOMOBILES (5073), RAM BAGH, AIRPORT ROAD, SRINAGAR,DISTRICT - SRINAGAR,JAMMU & KASHMIR PIN-190009 PH :0194-941909528.	449.## PRIYA AUTO (4868), OPPOSITE MINNING SCHOOL,SINDRI ROAD, BHAGA,DHANBAD,JHARKHAND PIN-828301 PH :0326-9431124817.	RAMGARH 459.## RAHIL MOTORS (5054), C/O NIYAMAT MISTR,DUSHAD MOHLA,DISTRICT RAMGARH CANTT PIN-829122 PH :9835324514.	BALEHONNUR 470.## SRI ANNAPORNA MOTORS (5253), GOWDA COMPLEX,JAYAPURA,ROAD BALEHONNUR ROAD,DISTRICT - CHIKAMAGALUR,KARNATAKA PIN-577112 PH :577112-9449620366.
440.* A.B. MOTORS (5072), BEHIND NEW SECRETARIAT ROAD,SRINAGAR,DISTRICT - SRINAGAR,JAMMU & KASHMIR PIN-190009 PH :0194-9419007966.	DUMKA 450.* NATIONAL ENGG. WORKS (5220), AUTOMOBILE ENGINEERS,DUMKA (BIHAR),DUMKA (BIHAR) PIN-814101 PH :06434-222325.	QARHWA 451.## VIKAS AUTOMOBILE SERVICES (2647), RAILWAY STATION ROAD,GARHWA,ZARHKHAND PIN-822114 PH :06561-9204527287.	BANGALORE 471.** ANEKAR MOTORS (227), 230 MAGADI ROAD,BANGALORE,(KARNATAKA) PIN-560023 PH :080-3353766,3354339 FAX:3402104.
441.* HASEEN MOTORS (5249), BY-PASS BRIDGE, BAGH MEHTAB,SRINAGAR,JAMMU & KASHMIR PIN-190019 PH :0194-94195800893.	HAZARIBAGH 452.## ALOK MOTORS (379), NEAR INDRAPURI CHAWK,HAZARIBAG,(BIHAR) PIN-825301 PH :06546-9431104704.	460.## SAINI MOTORS (5126), NEAR VISWAKARMA MANDIR,MAIN ROAD,RAMGARH CANTT,DISTT. HAZARIBAG PIN-829122 PH :06553-223699.	472.** MARS ENTERPRISES PVT. LTD. (238), NO.41 SANJAY NAGAR MAIN ROAD ASWATH NAGAR,BANGALORE PIN-560094 PH :080-3418158/9408023513/9446358884.
SURNKOTE 443.## A.S. AUTOMOBILES (5976), IOBAL NAGAR, SURNKOTE,DISTRICT-POONCH,JAMMU & KASHMIR PIN-185121 PH :9469014765.	453.## SRI RAM MARUTI SERVICE STATION (3663), DEVI DAYAL LANE,HAZARIBAG,(JHARKHAND) PIN-825301 PH :06546-9431384877.	RANCHI 461.## BHARAT MOTORS (5970), SHIV JEE CHOWK, HARU ROAD,RANCHI,DISTRICT-RANCHI,JHARKHA ND PIN-834001 PH :9006502258.	473.* MAYUR ENTERPRISES (249), NEXT TO PIA BHAVAN, KIADB MAIN ROAD,PEENYA 1ST STAGE,BANGALORE PIN-560058 PH :080-8395263.
THANA MANDI 444.## DANISH AUTOMOBILES (6047), R/O W NO.3, HUSPLATE,THANAMANDI,DISTRICT-RAJOU RI,JAMMU & KASHMIR PIN-185212 PH :9858938248.	JAMSHPEDPUR 454.## CAR CARE (1261), C/O MODERN AUTO STORES,KALIMATI ROAD,SAKHO,JAMSHEDPUR PIN-831001 PH :0657-6452965.	462.## MARUTI AUTOMOBILES (5127), HOTEL AKASHWANI MANSION,RATU ROAD,RANCHI PIN-834001 PH :0651-9835156186.	474.* GIRIMAJI ENTERPRISES (258), NO.2 27TH CROSS S R ROAD,B S K II STAGE,BANGALORE PIN-560070 PH :080-6549042,6540502.
VIJAYPUR 445.## BANSI LAL MARUTI SERVICE STATION (4748), SWANKHA MORN,NATIONAL HIGHWAY,VIJAYPUR,DISTRICT-SAMBA (JAMMU & KASHMIR) PIN-180001 PH :01923-9419106798.	455.## MAHESHWARI BROS. (5124), NATIONAL HIGHWAY 33,BALIGUMA,MANGO,P.O. -M.G.M. MEDICAL COLLEGE,JAMSHEDPUR PIN-831018 PH :0657-903114444.	463.## MARUTI CLINIC (2548), LAL KOTHI,OLD HAZARIBAGH ROAD,KANTA TOLI,RANCHI (BIHAR) PIN-834001 PH :0651-9431109214.	475.* SATHNUR SERVICE STATION (1153), 2ND MAIN KHB COLONY,GANDHI NAGAR,YELAHANKA,BANGALORE PIN-560064 PH :080-8562995/9845038372.
BOKARO 466.## CHOUGULE MOTORS (3874), HALYAL ROAD,ATHANI,DISTT BELGAUM PIN-591304 PH :08289-52992.	KHUNTI	464.## MOTOR KRAFT (4769), H.B. ROAD,DIPA TOLL,RANCHI,JHARKHAND PIN-834009 PH :0651-325465/3203666.	476.## PACE AUTOMOBILES (1057), 6TH MAIN HMT LAYOUT,R.T. NAGAR,BANGALORE PIN-560032 PH :080-23432173/2333238.
** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs			

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

477.* SPEED MOTORS (1750), NO.943 21ST MAIN,BANASHANKARI 2ND STAGE,(NEAR KIMS MEDICAL COLLEGE),BANGALORE PIN-560070 PH :080-6699716/6698406.	478.* KESHKAMAL MOTORS (2075), NO.943 21ST MAIN,BANASHANKARI 2ND STAGE,(NEAR KIMS MEDICAL COLLEGE),BANGALORE PIN-560070 PH :080-6710423/9448071067.	479.** GREEN CARS PVT. LTD. (2154), NO.12/6 80 FEET ROAD,6TH BLOCK KORAMANGALA,BANGALORE PIN-560095 PH :080-5351785/539635.	480.## SOLOTECH MOTORS (2760), SY NO.82/2, D'SOUZA NAGAR,HOSAKEREHALLI-BANGALURU,DIST RICT-BANGALURU,KARNATAKA PIN-560085 PH :080-9845072603/6692613.	481.* ASHWA CARS PVT. LTD. (2827), NO.196 5TH MAIN ROAD,CHAMPAJAPET,BANGALORE PIN-560018 PH :080-6679019/9341228231.	482.## RAJ MOTORS (2829), NO.10 MAGADI MAIN ROAD,OPP. UNANI MEDICINE INSTITUTE,KOTIGEPALYA,BANGALORE PIN-560091 PH :080-9645293413/3286153.	483.** NEXUS (2768), PLOT NO.275/301,80 FEET ROAD,R.M.V. 2ND STAGE 2ND BLOCK,BANGALORE PIN-560094 PH :080-9844013436/3412200/34123300.	484.** U.M. CARS PVT. LTD. (2847), KARNATAKA GOLF ASSOCIATION ROAD,KODIHALLI OFF. AIR PORT ROAD,BANGALORE PIN-560008 PH :080-5211212/5217979.	485.## BENAKA MOTORS (3237), NO.158/2 VIBHUTIPURA,VIGNAN NAGAR BEHIND B.E.M.L. NEAR RENUKA SWIMMING POOL,BANGALORE PIN-560017 PH :080-98452 12416/5236201.	486.## VISWAS CAR SERVICES PVT. LTD. (3238), NO.121/1 C. SHANKER REDDY LAYOUT,(ADJACENT TO VINAYAK TEMPLE),KALYAN NAGAR RING ROAD,CHELEKERE BANSWADI POST BANGALORE PIN-560043 PH :080-25445649.	487.** LE MANS MOTORS (3460), NEAR AYYAPPA TEMPLE,S.M. ROAD,T. DASARAHALLY,BANGALORE PIN-560057 PH :080-8371183/8376058.	488.** SMART CARS (3571), 3RD CROSS NEAR J.B. TILES,KAGGADASA PURA MAIN ROAD,C.V. RAMAN NAGAR,BANGALORE PIN-560093 PH :080-5246481/9336624362.	489.## ADARSH AUTOMOBILES (4553), # 974 VARATHUR MAIN ROAD,NEAR PURVANKARA APARTMENTS,AFTER MARATHAHALLI,RAILWAY BRIDGE, BANGALORE PIN-560037 PH :080-28524550, 9880195465.	490.## VAHAN UDYOG (4626), # 45/28 GUBBANNA INDUSTRIAL ESTATE,DR. RAJ KUMAR ROAD,6TH BLOCK, RAJAJI NAGAR,BANGALORE PIN-560010 PH :080-23351143.	491.## PUSHPAK MOTORS (4642), 105/1 2ND MAIN NANJAPPA LAYOUT,VIDYARANYAPURA MAIN ROAD,(OPP KRUTHIKA HOSPITAL),BANGALORE PIN-560097 PH :080-560097.	492.** TRINITY MOTORS (4638), NO. 36,4TH STAGE, W.C. ROAD,BASAVESHWARANAGAR,BANGALOR E PIN-560079 PH :080-9845539474.	493.## CHANDANA MOTORS (4872), NO. 9 UNIVERSITY ROAD,GNANABARTHI (POST),MAHYAAPPANA PALYA,BANGALORE (KARNATAKA) PIN-560056 PH :080-9880659964.	494.## SOLOTECH SERVICE CENTRE (5245), 50 FEET MAIN ROAD AVALAHALLI,MUNESHWARA BLOCK,DISTRICT - BANGALORE,KARNATAKA PIN-560085 PH :080-32419203/9448046289.	495.## TEAM TECH AUTOMOBILES (5662), PLOT NO.2/2, DODDAKANHALLI,SARJAPUR MAIN ROAD,BANGALORE DISTRICT - BANGALORE,KAR NATAKA PIN-560034 PH :080-9986176513.	496.** TRINITY CARE PVT. LTD (5851), SURVEY NO 52/1, SRI GANDHADAKAVAL VILLAGE,NAGARBHAVI, BANGALORE,DISTRICT-BANGALORE,KARNA TAKA PIN-560091 PH :080-23306401.	497.* BHARAT AUTO SCAN (350), 892/1 PB ROAD,BELGAUM,BELGAUM PIN-590016 PH :433895.	498.## BAGALI MOTORS (5159), SHIKARKHANA ROAD,DISTRICT - BIJAPUR,KARNATAKA PIN-561014 PH :08352-944810044/24323.	499.## SUKOKE ENTERPRISES (3426), B.B. ROAD N.H.7,CHIKBALLAPUR,(KARNATAKA),(KARN ATA)PIN-562101 PH :08155-85218/9448435735.	500.## FORMULA MOTORS (338), K.M. ROAD,CHIKMAGALUR PIN-577101 PH :08262-30370,20369.	501.## AAMANTHRA MOTOR (4346), K.M. ROAD,CHIKMAGALUR PIN-505215 PH :08262-230704.	502.# OM MOTORS (4445), 1751, ANKALI ROAD,NEAR B.K. COLLEGE,CHIKODI,KARNATAKA PIN-591201 PH :9448484503.	503.# TIPPUR AUTO GARAGE (5770), MG ROAD,NEAR BAGEPALLI CROSS,CHINTAMANI,DISTRICT-KALOR,KAR NATAKA PIN-563125 PH :9731178590.	504.## PRINCIPAL (255), J.M.I.T,N.H.4,P.B. NO.73,CHITRADURGA PIN-577502 PH :9844088858.	505.## SAI AUTOMOBILES (2473), OPP. R.T.O. NH-4,JIND CROSS,JCR EXTN.,CHITRADURGA PIN-577501 PH :08194-9448154945.	506.* AUTO SERVICE & AGENCIES (2520), GEN,THIMMIAH ROAD,MADEKERI,KODAGU. (KARNATAKA) PIN-571201 PH :6358-6516(R).	507.## SREE MALLIKARJUNA MOTOR (229), 269 JAYADEVA CIRCLE ROAD,DAVANGERE (KARNATAKA) PIN-577002 PH :3779/5115(R).	508.## HEGDE AUTO CENTRE (172), P.B. ROAD,DAVANGERE PIN-577006 PH :28864/52206.	509.# SAHARA AUTOMOBILES (4731), OPP. A . RTO OFFICE,NH-7, B.B. ROAD,DEVANAHALLI,KARNATAKA PIN-562110 PH :9448662364.	510.** MYSORE GARAGE (2468), BELGAUM ROAD, DHARWAD,(KARNATAKA) PIN-580001 PH :080-447377/9844133273.	511.# PRESTIGE MOTORS (4875), SITE NO. 51/48/2717,OPPOSITE BPCL PETROL PUMP,51H WARD, SHENIGARPET,DODDABALLAPUR (KARNATAKA) PIN-561203 PH :08372-273344/9448874203.	512.## MODERN MOTORS (2337), HUBLI ROAD,GADAG,(KARNATAKA) PIN-582103 PH :08372-273344/9448874203.	513.## DELUX AUTO SERVICE (5840), SURVEY NO 77/8,VILLAGE KUSNOOR,NEAR -UNIVERSITY, SEDAM ROAD, GULBARGA,DISTRICT-GULBARGA,(KARNAT AKA) PIN-585104 PH :9242991292.	514.## SUPREME AUTO SERVICE (2569), NEAR RTO OFFICE,HARIHAR ROAD,HOSPET,(KARNATAKA) PIN-583203 PH :08394-30513.	515.## SHRI BASAVA MOTORS (4968), OPP DR. TEGGINMANI CLINIC,2ND CROSS HOSUR,HUBLI,KARNATAKA PIN-580021 PH :0836-998002564/ 4260694.	516.# SRI SAI MARUTHI SERVICE STATION (5725), OPP,KSRTC BUS STAND,UB ROAD,KADUR,DISTRICT-CHIKMAGALUR,KA RNATAKA PIN-577548 PH :9632221320.	517.## KARKALA MOTORS (3549), TELLAR ROAD,KARKALA,(KARNATAKA) PIN-574104 PH :08258-20364.	518.## KOLAR
** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs																																									
## C-Category Mass : Free & paid Service & Minor repairs																																									
* B-Category Mass : Free & paid Service & Major repairs																																									
## D-Category Mass : Free Service & Minor repairs																																									

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

518.## SHIVA SERVICE POINT (2472), M.B. ROAD,KOLAR,(KARNATAKA) PIN-563101 PH :08152-23890.	527.## CAR CLINIC (346), NO.8 GOKULAM 4TH STAGE,INDUSTRIAL LAYOUT NEAR GOKUL THEATRE,KRS ROAD,MYSORE PIN-570020 PH :0821-516055/517644.	SIDDAPUR	545.## AUTO CLUB (2132), NEAR H.P. PUMP,VADAKKADATHUKAVU P.O,ADDOOR,PATHNAMTHITTA DISTT PIN-691523 PH :0473-9447440184.
KOLLEGAL		SIRSI	ALAPPUZA
519.# FIXPLUS WHEEL ALIGNMENT & AUTO CARE CENTRE (4249), C-8, IND. ESTATE,MAHADESHWARA COLLEGE ROAD,KOLLEGAL PIN-571440 PH :09886252833/9448659590.	528.## GOUTHAM MOTORS (4332), PATEL CHANNAPPA EXTN.NELAMANGALA,KARNATAKA PIN-562123 PH :080-7722077, 9880251546, 9448668946.	538.* ARUNDHATI MOTORS (1258), HUBLI ROAD,SIRSI,(UTTAR KARNATAKA) PIN-581402 PH :9845098822.	546.## ESSAR MOTORS (4959), KALARKODE,NEAR CHINMAYA SCHOOL, NH-47,ALAPPUZHA,KERALA PIN-688003 PH :0477-9249938474.
KOPPA		SRINGERI	ALUVA
520.## AUTO TECH (3448), MAIN ROAD,UPPERPET,KOPPA,(CHIKMAGALUR DIST.) PIN-577126 PH :08265-21838.	529.## SANGAMA MOTORS (5726), BESIDE CMC,RAMPUR MAIN ROAD,RABAKAVI,DISTRICT-BAGALKOT,KAR NATAKA PIN-587314 PH :9480534916.	539.# SHUBHASHREE MOTORS (5434), AGUMBEL ROAD ,SRINGERI,DISTRICT - CHIKMAGALUR,SRINGERI,KARNATAKA PIN-577139 PH :08265-9448170400.	547.## AUTO TEAM (2630), A/189 A,PARUR JUNCTION,ALUVA,(KERALA) PIN-683101 PH :0484-9349252698.
KRISHNA RAJA NAGAR		TIRTHALLI	AMBALLUR
521.# MOHIT MOTORS (5752), 21/2,CHIRNAHALI ROAD,VINAYAKA EXTENSION,KRISHNA RAJA NAGAR,DISTRICT-MYSORE,KARNATAKA PIN-571602 PH :9880320051.	530.## HEERA MOTORS (3730), OPP. MOTI MASJID,SHIVJI OIL MILL COMPOUND,TIPU SULTAN ROAD,RAICHUR (KARNATAKA) PIN-584101 PH :0853230651(R), 9845156322,50598.	540.# SUMUKA AUTOMOBILES (5133), AP ROAD,CEEENE KERI,DISTRICT-SIMGA,SHIMGA,KARNATAKA PIN-577414 PH :08181-9448159463.	548.## LAKSHMI DEVI AUTO GARAGE (4137), AMBALLUR,P.O. PUDUKAD,TRICHUR,KERALA PIN-683031 PH :0480-9847004949.
KUMTA		TUMKUR	ANCHAL
522.# SOLOTECH (4547), NEAR HAVYAK SABHA MANTAP,MUROOR ROAD,KUMTA,KARNATAKA PIN-581343 PH :9448149607.	531.# MENEZES MOTORS (4969), NO:315/298A,NEAR KANAKAPURA,CIRCLE,B.M. ROAD ARCHAKARA,HALL BANGALORE DISTRICT-BANGALORE RURAL,KARNATAKA PIN-571511 PH :9986301054.	541.# APOORVA CAR CARE CENTRE (5327), B.N.P. COMPOUND ,BEHIND KRISHNA THEATRE,M.G. ROAD - TUMKUR,DISTRICT - TUMKUR,KARNATAKA PIN-560001 PH :9448166275.	549.## NAMI-TAJ (2534), NAMITAJ MARUTI SERVICE CENTRE,(OPP.) PETROL PUMP,P.O. JUNCTION,ANCHAL (KERALA) PIN-691306 PH :0475-9447453745.
KUNDAPUR		UDUPI	ANJUMOORTHY
523.* PRAKASH AUTO SERVICE (4522), NEAR: K.E.B.,VODERHOBLI,KUNDAPURA PIN-576201 PH :08254-231327.	532.# KIZEN MOTORS (4568), P.B. ROAD,OPP. A.P.M.C MARKET,RANE BENNUR PIN-581115 PH :08373-266364, 9844401484.	542.* ST. JUDE AUTOMOBILE ENGG. WORKS (4521), B.D.MARG,AMBALAPADI,UDUPI PIN-576103 PH :0820-23319.	550.## SAFA AUTO CARE (3847), N.H ROAD,MANGALAM PALAM,ANJUMOORTHY POST, VADAKKENCHERY,PALAKKAD DISTT, KERALA PIN-678683 PH :0492-944730347.
MANIPAL		SAGR (KARNATAKA)	ATTINGAL
524.# MANIPAL MARUTI AUTO WORKS (4578), MANIPAL ALEVOOR ROAD,NEAR R.C. CHURCH,OPP. SIGMA BAZAR,MANIPAL (UDUPI) DIST PIN-576104 PH :9448108318.	533.## MALLIKA AUTO CENTRE (2133), MALLIK COMPLEX,B.H. ROAD,SAGR PIN-577401 PH :08183-29405.	543.## RATNA ENTERPRISES (5447), N.H. 48, OLD GATE,UPPINANGADY,DISTRICT - DASSHI KANNADA,KARNATAKA PIN-574241 PH :9972995341.	551.## OM SHAKTI AUTOMOBILES (4466), KIZHVILAM P.O.,MAMON,ATTINGAL,KERALA PIN-695104 PH :0470-9744658681.
MUDHOL		SHIMOGA	AYOOR
525.## OM MOTORS (5857), OPP TALUKA OFFICE,LOKAPUR ROAD, MUDHOL,DISTRICT-BAGALKOT,KARNATAKA PIN-587313 PH :9448776744.	534.## ADITYA AUTOMOBILES (2077), JOG ROAD,SAGR,(KARNATAKA) PIN-577401 PH :08183-28236,28636.	544.## PLATHOTTAM AUTOMOBILES (3864), NH-49,OPPOSITE TO MINI INDUSTRIAL ESTATE,ADIMALI PIN-685561 PH :0484-944720373.	552.* MAKKATTU AUTO CLINIC (5051), AYOOR- ANCHAL ROAD,PANACHAILA,AYOOR,DISTRICT - KOLLAM,KERALA PIN-691306 PH :0475-9847288624.
MUDIGERE		ADODR	CALICUT
526.## BADRIYA CAR SERVICE POINT (5364), K.M. ROAD,MUDIGERE,DISTRICT- CHIKAMANGALORE,(KARNATAKA) PIN-577132 PH :08263-9448007094.	535.* SHIMOGA AUTO ENGG WORKS (246), GARDEN AREA,SHIMOGA,KARNATAKA PIN-577201 PH :9619321132.	553.## MARUTI VEHICLES CENTRE (4727), SUBADRA BUILDINGS,POTTAMMAL P.O,NELLIKODE,CALICUT PIN-673016 PH :0495-9447275499.	553.## MARUTI SCAN (1675), BYE PASS JUNCTION,MEENCHANDA,CALICUT PIN-673018 PH :0495-9447345008.
mysore			
	** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs		* B-Category Mass : Free & paid Service & Major repairs
	## C-Category Mass : Free & paid Service & Minor repairs		# D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

555.##	MALABAR MOTORS (4655), EAST NADAKAVU,P.O. ERANIPALAM,CALICUT,KERALA PIN-673006 PH :0495-9846089190.	565.##	AGT MOTORS (5937), KIP JUNCTION,KALANJOOR,DISTRICT-PATHANA MTHITTA,KERALA PIN-689694 PH :04734-9447261424.	KATTAKADA	575.##	CITY ENGINEERS (4947), MARUTI SERVICE CENTRE,NEYYATTINKARA ROAD,KATTAKADA,DISTRICT-TRIVANDRUM (KERALA) PIN-695572 PH :0471-9447206257.	584.##	EXCEL MARUTI SERVICE (4342), BYE-PASS ROAD,KOTHAMANGALAM,ERNAKULAM PIN-686691 PH :0485-9847177202.			
CHALLAKUDY		KALLAMBALAM		KUTHUPARAMBA		KUNDARA		MANANTHAVADY			
556.*	VIJAY AUTO SERVICE (1626), POTTA,CHALAKUDY PIN-680307 PH :0480-9995074628.	566.#	PRAKASH AUTO ENGINEERS (5548), VADASSERIKONAM P.O. KALLAMBALAM,VARKALA,KALLAMBALAM,DISTRICT-TRIVANDRUM,KERALA PIN-695143 PH :0470-9847159618.	576.##	MADATHIL MOTORS (5456), MADATHIL HOUSE CHOONDUPALAKA,KATTAKADA P.O. - TRIVANDRUM,DISTRICT - TRIVANDRUM,KERALA PIN-695572 PH :0471-9495192389.	585.#	SPARK SERVICE (5772), ELAMPALLLOOR,P.O. KUNDARA,DISTRICT-KOLLAM,(KERALA) PIN-691501 PH :9387227500.	586.##	KRISHNA MOTORS (3435), KUTTIKKUNNU,NEAR 66 KV SUB STATION,KUTHUPARAMBA,KANNUR DIST. (KERALA) PIN-670643 PH :0490-9497296380.		
557.##	STAR MARUTI GARAGE (5367), NH47 BYE PASS,NEAR CRESCENT PUBLIC SCHOOL,CHALAKUDY,DISTRICT - THRISSUR PIN-680307 PH :0480-994609375.	KALLUMUTTY	567.##	MARUTI CARE (4179), KALLUMUTTY,IRITTY P.O.,KANNUR,KERALA PIN-670703 PH :0490-9946703070.	577.##	UNITED SERVICE CENTER (4433), EDASSERT JUNCTION,KATTAPPANA,KERALA PIN-685508 PH :04668-9961432941.	MANJERI		587.##	AUTO CARE (2541), (SHEEJA AUTO ENGG. WORKS),THALASSERY ROAD,MANANTHAVADY,WAYANAD (DIST.) PIN-670645 PH :0493-9447040068.	
CHANGANACHEERRY		KALPETTA	568.##	VARCO MOTORS (4724), CALICUT MYSORE ROAD,KALPETTA,NORTH KERALA PIN-673592 PH :04936-9961569898.	KAYAMKULAM	578.##	PERFECT MOTORS (4948), MARUTI SERVICE CENTRE, NH-47,CHEPPAD,KAYANKULAM,DISTRICT-A LAPPUZHA (KERALA) PIN-690507 PH :0479-9447048338.	MANNAR		588.##	MARUTI AUTO HOUSE (4726), MARUTI SERVICE CENTRE,MELAKKAM,MANJERY PIN-676123 PH :0483-9447129289.
558.##	SAAFAA AUTOMOBILES (1148), OPP. APSARA THEATRE,CHANGANACHEERRY PIN-686100 PH :0481-9447042517.	569.##	MACK ENTERPRISES (2729), T.B ROAD,KANJRAPALLY PIN-686507 PH :04828-9447093739.	KOLLAM	579.##	QUILON MARUTI SERVICE (2737), CHANDANATHOPE P.O.,KOLLAM,(KERALA) PIN-691014 PH :0474-9387307562.	MANNUTHY		589.##	MOHANS AUTOMOBILES (5457), MOHANS AUTOMOBILES & ENGINEERS,KUTTEMPEROOR P.O. MANNAR,DISTRICT - ALAPPUZHA,(KERALA) PIN-689622 PH :9447877377.	
559.*	PALATHRA MOTORS & SERVICE CENTRE (1072), VADAKKEKARA,VEROOR P.O.,CHANGANACHEERRY PIN-686104 PH :0481-9447195154.	KANJRAPALLY	580.##	PIONEER AUTO & ENGG.WORKS (4722), KANNOTHUMCHAL ROAD,KANNUR,(KERALA)PIN-670006 PH :0497-9447798255.	KONNI	580.##	GLOBAL MOTORS (2836), VAKAYAR P.O.,KONNI,(KERALA) PIN-689698 PH :0463-9446222944.	MEENANGADI		590.##	TOP CLEAN SERVICES (2834), 13/450 MANNUTHI BYE PASS,P.O. OLLUKKARA,THRISSUR,(KERALA) PIN-680065 PH :0487-9846037818.
CHAVARA		KANNUR	581.##	AREN MOTORS (5139), CHAKKARAKAL,P.O. MUZHAPPALLA,DISTRICT - KANNUR,KERALA PIN-670611 PH :0479-9446771237.	KOOTHATUKULAM	582.##	EXTRA CARE SERVICES (3232), DEVA MATHA JUNCTION,M.C. ROAD,KOOTHATUKULAM,ERNAKULAM DIST. (KERALA) PIN-686662 PH :0485-9846723351.	MOOCHIKKAL		591.##	MOTOR TECH (2440), EAST MEENANGADI,KRISHNAGIRI P.O.,WAYANAD,(KERALA) PIN-673591 PH :0493-9447263360.
560.##	CHITHIRA AUTOMOBILES (4755), KANKATHU MUKKU,CHAVARA,KOLLAM PIN-691583 PH :0474-9447711009.	KARIMANNOOR	583.##	SAFEGUARD MARUTI SERVICE STATION (4351), MARIPURATHU HOUSE,KOKKAMULLU, KAYAMKUMPURA P.O.,CHEMPERY - VIA,CANNANOORE PIN-670571 PH :0460-9447235468.	KOTHAMANGALAM	583.##	MAJESTIC MOTORS (1253), NEAR THANKALAM BYE-PASS ROAD,KOTHAMANGALAM,KERALA PIN-686691 PH :0485-9388883221.				
CHENOANNUR		KARUVANCHAL	584.##	CARS CARE (4579), ANANDPUR,VIDYANAGAR P.O.,KASARAGOD,KERALA PIN-671123 PH :04994-9847251115.							
561.*	NEW TECH AUTOMOBILES (1978), INDUSTRIAL ESTATE,MUNDANCAVU,CHENGANNUR,KERALA PIN-689121 PH :0479-9388915757.	KASARGOD									
CHERTHALA		KARUVANCHAL									
562.*	POZHICKAL CAR WORLD (3037), NEAR BOYS HIGH SCHOOL,CHERTHALA,ALAPPUZHA DIST.,KERALA PIN-688524 PH :0478-9947474752.	KARUVANCHAL									
ERATTUPETA		KARUVANCHAL									
563.##	AUTO COMFORT (3948), PKMS BUILDING,ERATTUPETTA PIN-686121 PH :04822-9447186876.	KARUVANCHAL									
ETTUMANOOR		KARUVANCHAL									
564.##	ROHIT MOTORS (4636), THELLAKOM P.O.,M.C. ROAD,ETTUMANOOR,KERALA PIN-686016 PH :0481-9447079010.	KASARGOD									
KALANJOOR		KASARGOD									
66	** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs										

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

592.##	CHELADAN'S MARUTI ENGINEERS (4659), THANUR ROAD,MOOCHIKKAL,MEENADATHUR, TIRUR,MALAPURAM DIST (KERALA) PIN-676307 PH :0494-9895443563.	602.##	ALLIANCE MARUTI SERVICES (3243), NH-47,PARIPPALLY,KOLLAM DIST. (KERALA) PIN-691574 PH :0474-9349926440.	611.##	AUTOMECK (4725), BEENCHI P.O.,SULTAN BATTERY PIN-673592 PH :0493-924999515.	621.##	HITECH INDUSTRIES (1951), NEAR ULLOOR BRIDGE,PATTOM P.O.,THIRUVANANTHAPURAM,(KERALA)PIN-695004 PH :0471-9447732057.	
MUNNAR								
593.##	PLATHOTTAM AUTOMOBILES (4447), NH-49,ADIMALY,IDUKKI DIST,KERALA PIN-685612 PH :0465-9447023073.	603.##	MANNL AUTOMOBILES (4150), NEAR PANCHAYAT OFFICE,PATHANAPURAM,KERALA PIN-689695 PH :0475-947258496.	612.##	NEW INDIAN MARUTI SERVICE CENTRE (4577), MYSORE ROAD,SULTAN BATHERY,WAYANAD DISTRICT,KERALA PIN-673592 PH :0493-9446810701.	622.##	EMINENT MARUTI SERVICE (2360), T.C. 610 M.C. ROAD,MANNANTHALA,TRIVANDRUM PIN-695015 PH :0471-9447713639.	
MUVATTUPUZHA								
594.##	JAWAN AUTOMOBILES (2730), MADAVOOR POST,MUVATTUPUZHA PIN-686669 PH :0465-9447163809.	604.##	C.J. MARUTI CARE CENTRE (1255), VARIYAPURAM,ELANTHOOR EAST P.O.,PATHANAMTHITTA,(KERALA) PIN-689643 PH :0468-9446913874.	613.##	TEE PEE MOTORS (4773), 9/668-B OOTY ROAD,NEAR BLOCK OFFICE,SULTAN BATHERY,WAYANAD (KERALA) PIN-673592 PH :04936-9447934726.	623.##	MUKUNDANS (3434), PADMAVILASAM,T.C. 2/1370,PATTOM PALACE P.O.,THIRUVANANTHAPURAM PIN-695004 PH :0471-9887834555.	
NEYYANTINKARA								
595.##	XANON ENGINEERS (4635), RAVELI TOLL JUNCTION,NEYYANTINKARA,TRIVANDRUM PIN-695121 PH :0471-9447014813.	605.##	CAR CARE AUTOMOBILES (4422), P.K. NIVAS,KUNTALI P.O.,PERAVOOR,KANNUR DIST. PIN-670673 PH :04902-994644691.	614.##	YESKAY (3368), KAKATHODE,TALIPARAMBA,KANNUR DISTT (KERALA) PIN-670141 PH :0460-9744076850.	624.*	KICHI MOTORS (5453), TC.49/962 ,SREEMOLAM NAGAR CHIRAMUKKU,MANACAUR (PO) TRIVANDRUM,DISTRICT - TRIVANDRUM,KERALA PIN-695009 PH :0471-9847023025.	
NILAMBUR								
596.##	CONFIDENCE MOTORS (5140), PALUNDA,CHUNGATHARA,NILAMBUR,DISTR ICT - MALLAPURAM,KERALA PIN-679334 PH :9447681623.	606.##	ACC MARUTI (2835), XIV/III-B,M.C. ROAD,PERUMBAAVOOR,(KERALA) PIN-683542 PH :0484-9846022593.	615.##	SAFE HANDS (3038), ERANHOLI,CHUNGAM,THALASSERY,(KERAL A) PIN-670107 PH :0490-9744223217.	625.##	TOPCLEAN SERVICES (4354), 275-A,NEAR UTHRALIKKAVU TEMPLE,KUMARANELUR P.O.,VADAKKANCHERY, TRICHUR PIN-680307 PH :0484-9846037818.	
NILAMEL								
597.##	LIBRA (3431), M.C. ROAD,NILAMEL,KOLLAM DIST.,(KERALA) PIN-691535 PH :0474-9447335089.	607.##	MILLENNIUM MOTORS (4873), OLD VALLAM ROAD,KADUVAL PERUMBAAVOOR,DISTRICT-ERNAKULAM (KERALA) PIN-683542 PH :0484-9447052486.	616.*	MYALAPARAMPIL MOTORS (3233), SILON JUNCTION,NEAR THALAYOLARAMBU,POOZHIKOL P O PIN-686604 PH :04829-9447562050.	626.##	MONARCH MARUTI CARE CENTRE (4079), NEAR NORTH JUMA MASJID,GANESHA MANGALAM,P O VADANAPPALLY,TRICHUR DIST (KERALA) PIN-680614 PH :0487-9847792698.	
OCHIRA								
598.*	MANGALATH AUTOMOBILES (3836), NH 47 VALIYAKULANGARA,OCHIRA P O,KOLLAM DIST,KERALA PIN-690526 PH :0476-9847258696.	608.##	HITECH MARUTI (3025), MAIN ROAD,KOYILANDY,CALICUT DISTT. PIN-673305 PH :0496-9447304619.	617.##	MALABAR MOTORS (4645), WARD NO. 12, BLDG NO. 121,WAYANAD ROAD, KARADY,THAMARASSERY,CALICUT PIN-673573 PH :0495-9387531000.	627.##	CCARS (5754), VADAVATHOOR,PO-KOTTAYAM,DISTRICT-K OTTAYAM,KERALA PIN-686503 PH :0481-9447208558.	
OLLUR								
599.##	TOPCLEAN SERVICES (4468), 10/153,CHRISTOPHER NAGAR,P.O OLLUR,TRICHUR,(KERALA) PIN-680306 PH :0487-9846037818.	609.##	DEEPA AUTOMOBILES (5177), DEEPA AUTOMOBILES,PAZHAVANGADI,P.O. RANNY,DISTRICT-PATHANAMTHITTA,KERALA A PIN-689673 PH :0473-9447365602.	618.##	MARUTI AUTO SPOT (1628), MUTHOOR,M C ROAD,THIRUVALLA PIN-689107 PH :0469-9447034608.	628.*	S.S. MOTORS (2979), NEAR POLICE STATION,VARKALA,TRIVANDRUM DISTT.,TRIVANDRUM DISTT. PIN-695141 PH :0472-9446104991.	
PALAKKAD								
600.##	CAR CRAFT (2139), 5/682 (1),MANALI,PALAKAD,(KERALA) PIN-678001 PH :0491-9447137870.	610.##	MARSHAL AUTOMOBILES (4035), SWATI NAGAR, TC 10/147,PIPPIN MOODU, SASTHA MANGALAM,PEROORKADA,TRIVANDRUM PIN-695005 PH :0471-9447461101.	619.##	SREEKARIYAM AUTOMOBILES (353), SREEKARIYAM P.O.,THIRUVANANTHAPURAM PIN-695017 PH :0471-9447050313.	629.##	RANI AUTOMOBILES & ENGINEERING WORKS (1674), NADAPURAM ROAD,MADAPALLY COLLEGE (P.O.),VATAKARA PIN-673102 PH :0496-9447517004.	
PANDALAM								
601.*	AISHWARYA AUTOMOBILES (2067), NEAR K.S.R.T.C. BUS STOP,PANDALAM PIN-689501 PH :0473-9847049140.	620.*	PROFESSIONAL MOTORS (1256), NEAR ELECTRICITY BOARD,PEROORKADA,TRIVANDRUM PIN-695005 PH :0471-9447697945.	LAKSHADWEEP				
PARIPALLY								
PATHANAPURAM								
PATHANAMTHITTA								
PERAVOOR								
PERUMBAAVOOR								
QUILANDY								
RANNY								
SASTHA MANGALAM								
SULTAN BATHERY								
THALASSERY								
THALAYOLAPARAMBU								
THAMARASSERY								
THIRUVALLA								
THIRUVANANTHAPURAM								
VARKALA								
VADAKKANCHERY								
VADAVAPPALLY								
VADAVATHOOR								
VARKALA								
LAKSHADWEEP								
LAKSHADWEEP								

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs
 ## C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs
 # D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

630.## POPULAR REPAIR & SERVICE CENTRE (2944), SECRETARIAT ROAD,KAVARATTI,LAKSHADWEEP PIN-682555 PH :0489-989543876.	640.** RANJIT AUTOMOBILES (5452), 117.ZONE II . M.P. NAGAR,BHOPAL,DISTRICT - BHOPAL,MADHYA PRADESH PIN-462011 PH :0755-9826250439.	650.## JIYO MOTORS (5031), OPP DAK BANGLA, INDORE ROAD DHAR,DISTRICT - DHAR,DHAR,MADHYA PRADESH PIN-454001 PH :07292-9893633559.	661.## SUPER MARUTI SERVICE (4952), 375-A PREM NAGAR,OPP. GURUDWARA,JABALPUR,MADHYA PRADESH PIN-482001 PH :0761-9827094994.
MADHYA PRADESH			
631.## GULAB AUTOMOBILES (1553), GUJARI CHOWK,BALAGHAT,MADHYA PRADESH PIN-481001 PH :07632-9425402926.	641.## GURUKRUPA MOTORS (5670), OPP PRABHAT BREAD INDUSTRY,AB ROAD - BIOARA,DISTRICT - BIOARA,MADHYA PRADESH PIN-452001 PH :07374-9425037506.	651.## MARUTI ENTERPRISES (3021), KHERAPATI ROAD,GWALIOR,(M.P) PIN-474002 PH :0751-9425116466.	662.* RATNARAJ MOTORS (4245), MHOW NEEMUCH ROAD,BHIMAKHERI FATAK,JAORA (M.P) PIN-457226 PH :9827238700.
BALAGHAT			
632.## SAURAV MOTORS (4069), DEENHI ROAD,GARRA INDUSTRIAL AREA,BALAGHAT,MADHYA PRADESH PIN-481001 PH :07632-9826310979.	642.# NEW INDIA AUTO GARAGE (5337), NEAR VARMA SALES,AB ROAD - BIORA,DISTRICT - RAJGARH,MADHYA PRADESH PIN-465674 PH :9826555002.	652.## CLASSIC MOTOR & SERVICE STATION (5242), CHAUHAN PIAO, M.G. ROAD,THATIPUR MORAR,GWALIOR,MADHYA PRADESH PIN-474011 PH :9329603001.	663.## SHARMA MOTORS (5764), IN FRONT OF PAWAN MILL,STATION ROAD, JAWAD,DISTRICT-NEEMUCH,MADHYA PRADESH PIN-458330 PH :9425441270.
BARWANI			
633.## SPEED AUTOMOBILES (5260), KHANDWA BARODA ROAD,NR. BALAJI TOLL KANTA,BARWANI,DISTRICT-BARWANI,MADH YA PRADESH PIN-451552 PH :451551-9926146073.	643.** SWADESHI MOTORS (4229), NEAR GANPATI MANDIR,GANPATI NAKA,BURHANPUR PIN-450331 PH :07325-9425086920, 07325245150.	653.## MANOJ UDYOG & SERVICE CENTER (4145), 87-88, INDUSTRIAL AREA,CHHIPANER ROAD,HARDA,M.P PIN-461331 PH :9826227245.	664.## KATNI MOTORS (4949), C/O MAHURANIPUR UNION TRANSPORT CORPORATION,NH-7, PANNA MORH,KATNI (MADHYA PRADESH) PIN-483501 PH :07622-9425162660.
BETUL			
634.## ADITYA MOTORS (1263), NAGPUR BHOPAL ROAD,SADAR,BETUL,MADHYA PRADESH PIN-461001 PH :07140-9425381581.	644.## BINDRA AUTOMOTIVE (5420), SHANICHRA BAZAR,CHHINDWARA,M.P. PIN-480001 PH :9827292392.	654.## KHALSA AUTO SERVICE (5325), 36 KIBE COMPOUND,INDORE PIN-452001 PH :9425055788.	665.## M.K. AUTOMOBILES (5326), SANTOSH NAGAR,OPP. JHEELODHYAN,INDORE ROAD,KHANDWA PIN-450001 PH :0733-9425085666.
BHIND			
635.## MAA PITAMBRA MOTORS (5241), OPP. RAJENDER CONVENT SCHOOL,LAKSHAR ROAD - BHIND,MADHYA PRADESH PIN-477001 PH :982640582.	645.## MODI MOTORS (3857), BHALLA KA DERA,JHANSI ROAD,DABRA,GWALIOR PIN-474001 PH :07524-9425119888.	655.## BOMBAY MOTORS (1655), 10 Y.N. ROAD,INDORE,(M.P.) PIN-452003 PH :0731-9893887867.	666.## DILIP MARUTI SERVICE CENTER (4649), OPP. GAYATRI SAROVAR,KUKSHI,DISTT DHAR PIN-454331 PH :07297-9893227070.
BHOPAL			
636.## VIDHYA AUTOMOBILES PVT. LTD., (0), PLOT NO. 235,ZONE II,M.P. NAGAR,BHOPAL (M.P.) PIN-462011 PH :0755-982605198.	646.## MARUTI PRIME (1156), BUS STAND,STATION ROAD,DAMOH PIN-470661 PH :9425096209.	656.## BADSHAH MOTORS (5027), 150/2, NOORANI NAGAR, NEAR JAIMAL SINGH PETROL PUMP,DHAR ROAD, INDORE,DISTRICT-INDORE,MADHYA PRADESH PIN-452008 PH :98265908427.	667.## JYOTI RAGHUNATH MOTORS (5149), 3/3 RAMBAGH,BEHIND PETROL PUMP,INDORE,MADHYA PRADESH PIN-452001 PH :0731-942565001.
DAMOH			
637.## SHRI KRISHNAN CAR CARE (1679), POLYTECHNIC ROAD,NEAR PETROL PUMP,BHOPAL,(M.P.) PIN-462023 PH :0755-9424454030.	647.## HIND MOTORS (4470), JHANSI ROAD,KALAMPURAM TIRHA,DATIA,MADHYA PRADESH PIN-475661 PH :07272-9406969206.	657.## ITARSI 658.## UNITY ENTERPRISES (3270), PLOT NO.97,INDUSTRIAL AREA,KHEDA,ITARSI (M.P.) PIN-461111 PH :07572-9893528689.	668.## DEV MOTORS (4562), SITAMAU FATAK,MANDSAUR,MADHYA PRADESH PIN-458001 PH :9826751534.
DEWAS			
638.* TAURUS AUTOMOBILES (3372), ALAKNANDA COMPLEX,OPP.VIJAY STAMBH PRESS COMPLEX,M.P. NAGAR ZONE-I,BHOPAL (M.P.) PIN-462011 PH :0755-9303131403.	648.## AZAD MOTORS (4534), 26 NEW MARKET,MOTI BANGLA,DEWAS,MADHYA PRADESH PIN-455001 PH :07272-9827533591.	659.## PITAMBARA MOTORS (5041), NH-69, BETUL ROAD, NEAR PLYBOARD,FACTORY ITARSI,DISTRICT - ITARSI,MADHYA PRADESH PIN-461111 PH :9826528912.	669.* HIGHWAY MOTORS (4144), A.B. ROAD,DONGRAGAON,MHOW,INDORE M.P PIN-453441 PH :07324-7324277181, 9826035653.
DHAMNOD			
639.## SHUBHAM AUTOMOBILE (5052), PLOT NO 1 & 2 CHAWANI SHAHPURA,GULMOHAR ROAD, SHAHPURA,DISTRICT BHOPAL PIN-462011 PH :0755-9425009869.	649.## REWANCHAL MOTORS (6027), NEW PRAKASH NAGAR,AB ROAD, DHAMNOD,DISTRICT-DHAR,MADHYA PRADESH PIN-454552 PH :9425334147.	660.## YASH VEHICLES CARE (2169), 1663 WRIGHT TOWN,OPP. TELEGRAPH GATE NO.2,JABALPUR,(M.P) PIN-482002 PH :0761-9826259859.	670.## MORENA
DHAR			
GWALIOR			
JABALPUR			
JAORA			
KATNI			
KHANDWA			
JAWAD			
KUKSHI			
MANDSAUR			
MHOW			
MORENA			

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

SHYAM MARUTI SERVICE STATION (2964), SHYAM BIHAR COLONY,A.B. ROAD,MORENA,(M.P.) PIN-476001 PH .07532-9425366274.	SIDHI 680.## MAMTA MOTORS (2447), BHUSA MORE,POST - SINGRAULI,DISTT. SIDHI (M.P.) PIN-486899 PH :07805-9919804489.	AMALNER 690.## LUCKY AUTO CARES (6853), R.K. COMPLEX,R.K. NAGAR,DHULE ROAD,AMALNER,DISTRICT-JALGAON,MAHA RASHTRA PIN-425401 PH :9422789764/9404056044.	BHUSAWAL 699.* SAIKRIPA AUTOMOBILES (2129), NATIONAL HIGHWAY NO.6,S.NO.54/5X6 NEAR KHADKA ROAD CROSSING,BHUSAWAL,DISTT. JALGAON (MAHARASHTRA) PIN-425201 PH :024819-9422789764.
NAGDA 671.## MARUTI NANDAN (3939), 15 VERDHAMAN NAGAR,MEHTAWASA,BIRLAGRAM,NAGDA, DISTT LIJAJIN PIN-456331 PH :0736-9406918392.	TIKAMGARH 682.* ASHENDRA AUTOMOBILES (2636), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA,KUNDESHWAR,TIKAMGARH,(M.P.) PIN-472001 PH :07683-245387 ,9425141840,9425141940,9425145687.	AMBERNATH 691.* J.S. AUTOMOBILES (4567), B-31/3,MIDC, KALYAN AMBERNATH ROAD,AMBERNATH,MAHARASHTRA PIN-421501 PH :0251-2602061/62/9370116436.	BOISAR 700.## SIFAR CAR CARE (4055), PLOT NO. 15 AT-KURGAON,P O KUNDAN,BOISAR TARAPUR ROAD,TAL PALGHAR, DISTT THANE PIN-401501 PH :02525-282384.
SAGAR 672.## SAGAR MOTORS (4955), NEAR GURUDWARA,JHANSI BHOPAL ROAD, BHAGWANGANJ,SAGAR, MADHYA PRADESH PIN-470002 PH :07582-9826070549.	UJJAIN 683.## SUGANDHI BROTHERS (324), DEWAS ROAD,PITALMIR CHOURAH,SAGAR ROAD (M.P.) PIN-460449 PH :07341-9425379301.	AURANGABAD 692.* MARUTI AUTOMOBILES (3441), MAHAVIR COMPLEX,AKASHWANI CHOWK,JALNA ROAD,AURANGABAD (MAHARASHTRA) PIN-431008 PH :0240-9822015949/2330992.	BULDHANA 701.## JADHAV & SONS (2122), MR.SUSHIL JADHAV,MAIN ROAD,NEAR POLICE STATION,WARD NO.25 BULDHANA PIN-443301 PH :07262-242647/9421464285.
SARNI 673.## JHANVI SERVICE STATION (3738), MAIN ROAD,BAGDONA,SARNI,DISTT. BETUL (M.P.) PIN-460449 PH :07146-9425382313.	VIDISHA 684.## ZALANI AUTO SERVICE (1554), 4/2 NAZARALI MARG,FAZALPURA,UJJAIN PIN-456006 PH :0734-9893446739.	CAR CARE (5173), #85, SERVICE INDUSTRIAL SECTOR, TOWN CENTRE, CIDCO,DISTRICT-AURANGABAD,MAHARASHTRA PIN 431003 PH :0240-240-2488929/2488939.	CHANDRAPUR 702.## SHEIKH AUTOMOBILES (6379), APPPOSITE GOVT. ITI,CIVIL LINES,CHANDRAPUR,DISTRICT - CHANDRAPUR,MAHARASHTRA PIN-442401 PH :07172-253218.
SATNA 674.* KAPOOR SERVICING CENTRE (1162), 90 PREM NAGAR,SATNA,(M.P.) PIN-485001 PH :9827095182.	WAIDHAN 685.## SAMAY MOTORS (5179), NEAR SC/S SHED,PITALMIR CHOURAH,SAGAR ROAD NH-86,VIDISHA PIN-464002 PH :07592-9425392521.	BADLAPUR 694.## OMKAR AUTO SERVICES (3376), OMKAR BUNGLOW,GOLE WADI,KULGAON STN.,BADLAPUR DIST. THANE PIN-421503 PH :0251-2690371.	CHIPLUN 703.## MANOKAR AUTOMOBILES (270), NEAR RAILWAY STATION,BOMBAY-GOA HIGHWAY,WALOPE CHIPLUN,DISETT. RATNAGIRI PIN-415603 PH :02355-256299/255299.
SEONI 675.## HIGHWAY MOTORS (2262), NEAR MOTEL CENTER,SEONI-JABALPUR HIGHWAY,SEONI,(M.P.) PIN-480661 PH :9424364655.	WAHDHAN 686.## ANANT MOTORS (5732), BILAUNJI ,WAIDHAN,DISTRICT-SINGRAULI,MADHYA PRADESH PIN-486886 PH :9753167070.	BARAMATI 695.## AUTO WINGS (2142), PLOT NO. C-22/23,BARAMATI CO-OP INDUSTRIAL ESTATE,JALOCHI DISTRICT PUNE,MAHARASHTRA PIN-413102 PH :02112-243252/ 243077/24379.	DAPOLI 704.## MAYUR MOTORS (168), SITA APARTMENTS,NEAR BAHADUR SHEIKH NAKA,CHIPLUN DISTT. RATNAGIRI,MAHARASHTRA PIN-415605 PH :02355-320048/255885.
SHAHDOL 676.## PACE CRAFTERS AND AUTO SERVICES (2145), NEAR VIRAT TEMPLE,BANGANGA,SHAHDOL,(M.P.) PIN-484001 PH :07652-9424701495.	AKLUJ 687.## SONAJ AUTOMOTIVES PVT. LTD. (2665), SHANKRRAO MOHITE PATIL,CO-OP INDUSTRIAL ESTATE,PLOT NO.36 P.O. BOX NO.:11,AKLUJ (MAHARASHTRA) PIN-413101 PH :02185-224376 /9422644194.	OM SERVICE CENTRE (5359), KURWEDI ROAD,BARSI,DISTRICT - SOLAPUR,(MAHARASHTRA) PIN-413401 PH :9850437003.	DEOPUR 705.* ROYAL AUTO SERVICE STATION (3444), DAPOLI-MANDANGAD ROAD,MAUJE-DAPOLI,TAL- DAPOLI,DIST. RATNAGIRI (MAHARASHTRA) PIN-415712 PH :02358-282274/9422661033/9226701776.
SHAJAPUR 677.## SHRIYA MOTORS (2568), 174 A.B. ROAD,SHAJAPUR,(M.P.) PIN-456001 PH :07364-9826783993.	AKOLA 688.## AUTOLAND (5936), RAM NAGAR,TOSHNIWAL LAYOUT,AKOLA,DISTRICT-AKOLA,MAHARASHTRA PIN-444005 PH :0724-2453560/09422164050.	NEW AGWAN SERVICES (2235), 850 SHYOG NAGAR,JALNA ROAD,BEED,BEED PIN-431122 PH :02442-227007.	DOMBIVILI 706.** AGRO ENGINEERING SERVICES (2244), DIVERSION ROAD,DEOPUR,DHULE,DHULE PIN-424005 PH :02562-26171/270964/9423193884.
SHEOPUR 678.## GOYAL AUTO (5446), NEAR BABBAN MARKET,BARODA ROAD,SHEOPUR,DISTRICT - SHEOPUR,MADHYA PRADESH PIN-476332 PH :9826240944.	AKOLE 689.## SAMARTH CAR CARE (5555), MAHALAXMI COLONY,K.G. ROAD-AKOLE,DISTRICT - AHMEDNAGAR,MAHARASHTRA PIN-422601 PH :9763896321.	VAQUAR AUTO WORKS (544), AGRA ROAD JUNCTION,VANJARPATI NAKA,BHIWANDI,THANE DISTT.(MHRS) PIN-421302 PH :02522-243975/243966/9822655991.	
SHIVPURI 679.* KARUN MOTORS (4273), NEAR ARUN DHARAMKANTA,GUNA NAKA,A.B. ROAD,SHIVPURI PIN-473551 PH :07492-9425137808.			

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

707.## MEGA SERVICES (2573), A-173,PHASE-1,NEW KALYAN BYPASS ROAD,OPPOSITE ADARSH PARK,MIDC,DOMBIVLI PIN-421203 PH :0251-2448877/2448977/9821012736/99874971 97.	715.## KRISHNA AUTOMOTIVE (4037), GANESH NAGAR,AT POST & TALUKA,KALWAN,DIST NASHIK PIN-423501 PH :02592-942023134/8067986735.	723.## APPLO MOTOR REPAIRING WORKS (2543), MUMBAI-PUNE ROAD,LONAVALA,MAHARASHTRA PIN-410401 PH :02114-280330/9370721905.	733.## SURAJ SANGHI SERVICE STATION (438), DR.ANNIE BESANT ROAD,WORLI,MUMBAI PIN-400018 PH :24931704, 24924754.
GADACHIROLI	KALYAN	MAHAD	734.** SHAMAL MOTORS (1154), VAITY WADI,BHANDUP-SONAPUR ROAD,BHANDUP (WEST),MUMBAI PIN-400078 PH :022-25665266/64500500/25666465.
708.## VENUS AUTOMOTIVE (4170), PLOT # 2, NR GOVERNMENT ITI COLLEGE,ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY,GADACHIROLI,MAHARASHTRA PIN-442605 PH :07132-233222/9422151222/968928222.	716.## SHIVAM AUTO CARE (571), C/O GRITALAXMI VATSU NIRMAN,MURBAD ROAD,KALYAN,BOMBAY PIN-421304 PH :0251-2321518/6518007/9867001771.	724.## SHREE AUTO (2572), NAGALWADI PHATA BOMBAY-GOA HIGHWAY,AT & TALUKA - MAHAD DISTT. RAIGAD,MAHARASHTRA PIN-402301 PH :02145-233111/ 223256/9422495797/9422495799.	735.** CHAMUNDA MOTORS (P) LTD. (520), RAM BAUG NEAR SUNDAR DHAM,OFF S.V.ROAD,BORIVILI (W),MUMBAI PIN-400092 PH :022-28635677/28090888/28616701.
HINGANGHAT	KANKAVLI	MALEGAON	736.## BANAI AUTO CARE (6053), OPP. MAROL POLICE CAMP,NEXT TO AAREY CHECK POST,MAROL MAROSHI ROAD,MUMBAI PIN-400059 PH :022-28349816/28349817.
709.## S.K MOTORS (5530), JAGANNATH WARD,NH-7,HINGANGHAT,DISTRICT - WARDHA,MAHARASHTRA PIN-442301 PH :9421726700.	717.## SAPALE AUTO SERVICE PRIVATE LIMITED (1975), MUMBAI GOA ROAD,N.H.17,KALMATH,KANKAVLI DISTT. SINDHUDURG PIN-416602 PH :02367-233434/231934/9422434701.	725.## MALEGAON AUTO CENTRE (3721), NEAR MOTI BAUG NAKA,MALEGAON PIN-423203 PH :0265-9371376911/02554-255011.	737.## JAGMAN MOTORS PVT. LTD. (1556), NEXT TO HOTEL ROYAL SALUTE,ANDHERI KURLA ROAD,SAGBAUG,MUMBAI PIN-400059 PH :022-28502590/28504983.
ICHALKARANJI	KATOL	MANGAON	726.## KRUPA SERVICES (574), KRUPA SERVICES AT : NANORE,POST : MANGAON,DISTT-RAIGAD PIN-402104 PH :263363.
710.## SAI AUTO LEADS (3821), 7/597 SANGLI VES,ICHALKARANJI,DIST. KOLHAPUR PIN-416115 PH :0230-435827/439227.	718.## BALAJI SERVICE STATION (5962), PLOT NO. XI,MIDC,SAWARGAON ROAD,DONGARGAO-KATOL,NAGPUR, DISTRICT-NAGPUR,MAHARASHTRA PIN-441302 PH :07112-9763867144.	727.## JAIDEEP MOTORS (4779), NEAR RELIANCE PETROL PUMP,NANDURA ROAD,KHAMGAON,DISTRICT-BULDHANA (MAHARASHTRA) PIN-444303 PH :07263-9850352826/9922917419.	738.## POWAI AUTO WORKS (1660), OPP. PANCH KUTIR BUS STOP,19 ADI SANKARACHARYA MARG,POWAI,MUMBAI PIN-400076 PH :
INDAPUR	KHED	MIRAJ	728.## ASHOK AUTOMOBILES (5672), C.S. NO:70-C,CHH - SHIVAJI ROAD,MIRAJ,DISTRICT - SANGLI,MAHARASHTRA PIN-416410 PH :0233-2375961.
711.## AJINKYA MOTORS (3868), S.NO. 233(449),PUNE SOLAPUR HIGHWAY,NEAR HOTEL SAI PALACE,A/P INDAPUR DISTT. PUNE PIN-413106 PH :0211-225471.	719.## BHARAT AGENCIES (4548), AT POST BHARNA KA.NH-17,KHED,RATNAGIRI DIST PIN-415621 PH :02356-263309/260309/ 9049024781/9430910709.	729.## HIND AUTOMOBILES (550), 29 SEWREE WADALA ROAD,KING'S CIRCLE,MUMBAI (MHRS)PIN-400019 PH :022-24096680/24096544/24037922.	739.## LAXMI AUTO WORKS (2542), PLOT NO.1041,SAYANI ROAD,PRABHADEVI,MUMBAI PIN-400025 PH :022-24308566/2437878/2432172/982030364 6.
ISLAMPUR	KOLHAPUR	MUMBIAI	740.## SUPER AUTO SERVICE PVT. LTD. (2430), DESAI WADI JAYWANT SAWANT ROAD,NEAR HAPPY HOME SOCIETY,DAHSAR (W),MUMBAI PIN-400068 PH :022-28930239/28927124.
712.## VIJAY MOTORS (5134), PETH ISLAMPUR ROAD,NEAR PETH NAKA -ISLAMPUR,DISTRICT - SANGLI,MAHARASHTRA PIN-416112 PH :9860446084.	721.* VAKRATUNDA MOTORS (3142), OPP MAHAVIR COLLEGE,NAGALA PARK,KOLHAPUR PIN-416003 PH :0231-2680742.	730.## RAVI AUTOMOBILE SERVICES (553), GHATKOPAR-MAHAL ROAD,TILAK NAGAR,MUMBAI PIN-400089 PH :022-25227282/32929767/25221656/65752531/ 25293582.	741.* CHEMBUR MOTORS (2526), 31/A ANAND NAGAR,OFF SION TROMBAY ROAD,SINDHI SOCIETY, CHEMBUR,MUMBAI PIN-400071 PH :022-25243639.
JALGAON	KOPARGAOON	731.** ZENITA AUTO WORKS (525), BEHIND H.P.PETROL PUMP NAV PADA, MAROL NAKA,ANDHERI (E),MUMBAI (MHRS)PIN-400059 PH :	742.## ALLIED AUTO AGENCIES (2666), 86/20 DR. AMBEDKAR ROAD,KHAR,MUMBAI PIN-400052 PH :022-26007066, 26498850, 26042540.
713.* SHREE MOTORS (3040), 362 SHIVAJI NAGAR,JALGAON PIN-425 001 PH :0257-2221927,9823150704/9404050704.	722.* SAI MOTORS (4449), NAGAR MANMAD HIGHWAY,NEAR HOTEL ASHOKA,KOPARGAO,DIST. AHMEDNAGAR (MAHARASHTRA) PIN-423601 PH :0243-9326439000/9850684384.	732.* ASHA AUTO SERVICE (570), I.O.C. DEALER,L.B.SHASTRI MARG,KURLA,MUMBAI PIN-400070 PH :26505338, 26506088, 9820727091.	743.*
KALWA	LONAVALA		
714.** SHREE SIDDI MOTORS (5668), NEXT TO LILAVATI CO-OP SOCIETY,DATTAWADA,KALWA KHAREGAON ROAD-KALWA(W),DISTRICT - THANE,(MAHARASHTRA) PIN-400605 PH :64537777/25407778.			
KALWAN			

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

744.## PRINCE SERVICE CENTER (3440), 34 GAMDEVI ROAD,SANGHANI ESTATE,GHATKOPAR (WEST),MUMBAI PIN-400086 PH :022-25001383/25001333.	753.* AMIT SERVICE STATION (4158), NEAR NAGAPUR HIGHWAY BRIDGE,NAGAR-MANMAD HIGHWAY,NAGAPUR DIST-AHMADNAGAR,MAHARASHTRA PIN-414111 PH :0241-5601141/ 9822216286/277836.	764.## SAI AUTOMOBILES (3722), SAPAT COMPLEX,OPP. PRESS HOSPITAL,NASIK ROAD,NASIK ROAD PIN-422101 PH :9822027931/2462300.	PANVEL
745.## CARKRAFT AUTOMOBILE SERVICES PVT. LTD. (4654), ABC GODOWN, MINERVA INDUSTRIAL ESTATE,OFF P.K. ROAD,NEAR SAI DHAM MANDHIR, MULUND (W),MUMBAI PIN-400088 PH :25628005/6/7, 9820296924.	754.## HASAN GARAGE (2021), MOHAN NAGAR,NAGPUR (MHRS) PIN-440001 PH :0712-2580972/533805.	765.## HITECH AUTO SERVICES (4451), RAMESHWAR NAGAR,OPP NAVSHYA GANPATI,GANGAPUR ROAD,NASIK PIN-422005 PH :0253-9225142471.	774.## IDEAL AUTOMOBILES (2279), IDEAL HOUSE,PLOT NO-83,PANVEL INDUSTRIAL CO OP ESTATE LTD. PANVE,DISTRICT - RAIGAD,(MAHARASHTRA) PIN-410206 PH :022-27451607/2250/31508709.
746.## DEV MOTOR CARE PVT LTD (4878), 24ABCD,GOVT. INDUSTRIAL ESTATE,HINDUSTAN NAKA, CHAKOP, KANDIVLI(W),MUMBAI,(MAHARASHTRA) PIN-400067 PH :022-9867444334/2862536/28082661.	755.## SHREEJEE SERVICES (2027), CHANDAK KOTHI,SUBASH ROAD,NAGPUR PIN-440018 PH :0712-2726200/7721690.	766.* BOSS (265), AT/P.O. - TURBIE,SECTOR-22,VASHI,NAVI MUMBAI PIN-400705 PH :022-27831354/27831358.	775.## GANGAL MOTORS (2934), PLOT NO.125-127,SECTOR-1S,ROAD NO-5 BEHIND CIDCO GODOWN-NEW PANVEL,DISTRICT - RAIGAD,(MAHARASHTRA) PIN-410206 PH :022-27460525.
747.## AUTO CRAFT (4759), PLOT NO. 1-B,NEXT TO DAMJI SHAMJI IND ESTATE,LBS MARG, VIKHROLI (W),MUMBAI PIN-400083 PH :022-25783586/ 55974075/9323151010.	756.* SAGAR AUTOMOBILES (2667), MARUTI AUTHORISED SERVICE STATION,PLOT NO.3 NEAR PETROL PUMP,WARDHA ROAD UJJWAL NAGAR,NAGPUR PIN-440025 PH :0712-2293413/093521/ 9422145365/9960695823.	767.## CHETAN MOTORS (3143), PLOT NO.45/B SECTOR 19/A,OPP. GATE NO.2 DANA BAZAR,BEHIND SHAMIR VITHAL CO-OP BANK VASHI,NAVI MUMBAI PIN-400705 PH :022-27840564/27840565/27841566.	PARBHANI
748.## POWAI AUTO WORKS (4966), GALI NO 14/15/16,NO.1,C WING, KAILASH INDUSTRIAL COMPLX,PARKSITE VIDHROLI (W) PIN-400079 PH :022-25173986/25173961/2517326/2517327.	757.* BALAJI MOTORS (3078), PLOT NO.18/27,NEAR NAKA NO.-1,KORADI ROAD,NAGPUR PIN-441111 PH :07120-9960634068.	768.## C G MOTORS (413B), PAPER-73, TTC INDUSTRIAL AREA,RABALE, OPP RABALE RAILWAY STATION,THANE- BELAPUR ROAD,MAHARASHTRA PIN-400701 PH :9821695355, 9820933338.	776.## SAI SERVICING CENTRE (5252), PLOT NO.125-127,SECTOR-1S,ROAD NO-5 BEHIND CIDCO GODOWN-NEW PANVEL,DISTRICT - RAIGAD,(MAHARASHTRA) PIN-413101 PH :02452-249099/9326147460.
749.* ST. FRANCIS AUTOMOBILES (6154), MOUNT POINSUR BORIVALI (WEST),MUMBAI,DISTRICT - MUMBAI,MAHARASHTRA PIN-400103 PH :022-28951206/28934325.	758.## R. K. MOTORS (3023), 69 A V A LAYOUT,LAKADGON,NAGPUR PIN-440008 PH :0712-2730300/9422113088.	769.## SHALU AGENCY (2872), 516/27 PRADHIKARAN,NIGDI,PUNE PIN-411044 PH :020-7652631/925296.	PASHAN
750.## CHHAGAN MITHA (5230), CORNER OF WARDEN ROAD & PEDDAR ROAD,POST BOX NO. 6521,MUMBAI,MAHARASHTRA PIN-400028 PH :022-66578384/5/6/7.	759.## SAGAR AUTOMOBILES (4971), A-15/28,MIDC,BUTTIBORI,NAGPUR PIN-440025 PH :9422145365/8552082080.	770.## SHRI SAI SERVICE STATION (4452), NIPHAD AURANGABAD ROAD,NIPHAD,NASIK,MAHARASHTRA PIN-422101 PH :02550-240320/240321.	777.* MARUTI CAR SANJIVINI (5278), SURVEY NO 5/2,SUTARWADI ,SUSROAD,PASHAN,DISTRICT - PUNE,PUNE,MAHARASHTRA PIN-411021 PH :9996073360.
751.## SHAH CAR CARE (5436), SADANWADI,LAKE ROAD,OFF LBS MARG,NEAR KRISHNA TALKIES,DISTRICT - MUMBAI,(MAHARASHTRA) PIN-400078 PH :022-25961831/32/33/9819159447.	760.## M S SERVICES (5339), 14 HILL ROAD,GANDHI NAGAR - NAGPUR,DISTRICT - NAGPUR,MAHARASHTRA PIN-440010 PH :9373422822.	NIPAHAD	PATHARDI
MURBAD	NANDED	771.## SHREE SWAMI SAMARTH SERVICES (5874), 311/I,OPP. H.P. PETROL PUMP,NH-9,OMERGA,DISTRICT-OSMANABA D,MAHARASHTRA PIN-413606 PH :02475-252199/9422935656.	778.## SAGAR MOTORS (5979), OPP. TEHSIL KACHERI,NAGAR ROAD,TALUKA, PATHARDI,DISTRICT-AHMEDNAGAR,MAHARASHTRA PIN-414102 PH :0241-2429349/9822197969.
752.## JAYDEEP AUTOMOBILES (5676), MURBAD KALYAN HIGHWAY(NH-22),NEAR NAVDURGA HOTEL,AT-PO-TAL-MURBAD,DISTRICT-THANE,MAHARASHTRA PIN-421401 PH :02524-682260/9423370219/9226840777.	762.* MAULEE MOTORS (4736), SURVEY NO. 130/2, PLOT NO. 43,ADARSHA NAGAR, NIZAR ROAD,NANDURBAR,MAHARASHTRA PIN-425412 PH :02362-9822377931/261300.	772.## POOJA MARUTI SERVICE CENTRE (5564), PLOT NO 75,PREM NAGAR, KRISHNA PURI SHEVAR,PACHORA,DISTRICT - JALGAON,MAHARASHTRA PIN-424201 PH :02596-9690320803/2596247104.	779.## NAVNATH AUTO (5677), OPPOSITE RAMWADI,S.T. STAND,NATIONAL HIGHWAY-17, TAL PEN,DISTRICT-RAIGAD,MAHARASHTRA PIN-402107 PH :02143-255948.
NAGPUR	NANDURBAR	773.## SIDDIH MOTORS (5553), THMBHEDE ROAD,GANESH KUND,PALGHAR, DISTRICT - THANE,MAHARASHTRA PIN-401404 PH :02525-256406/ 09890609107.	PHALTAN
	763.## RACCA SERVICE (3720), (MR. RS RACCA),RACCA COLONY,SHARANPUR ROAD,NASIK PIN-422002 PH :0253-2570837/8796939960/8087924594.		780.## VORA AUTOMOTIVE (2436), SHINGNAPUR ROAD,KOLKI,PHALTAN PIN-415523 PH :02166-23562/9422606296.
			781.## ASHWAMEDHA AUTO (2435), "ASHWAMEDH",MUMBAI-AGRA HIGHWAY,PIMPLEGAON (B),DISTT. NASHIK PIN-422209 PH :02550-9766600064/8275015640.
			PUNE
			** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs * B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

782.**	SAINATH AUTOMOBILES INDUSTRIES (1569), SURVEY NO.36 PLOT NO.1,VADGAON KHURD SINHAGAD ROAD,NEAR GREEN FIELD HOTEL,PUNE PIN-411041 PH :9890166886.	791.*	AMIT MOTORS (4972), NANA SHANKAR SHETH ROAD,ROHA,DISTRICT - RAIGAD,MAHARASHTRA PIN-402109 PH :02194-9422096149/233290. SAKURI	792.##	SHREE SAI SERVICE CENTRE (5344), NAGAR-MANMAD ROAD, GODAVARI, HOTEL JEWEL, PO:SAKURI, TAL.RAHATLA,DISTRICT - AHMEDNAGAR,MAHARASHTRA PIN-422608 PH :9970741777.	800.##	MATOSHREE AUTOMOBILES (2870), NO.558 SHAHADA,HDONCHIADA ROAD,TAL: SHAHADA,NANDURBAR DISTT.,(MAHARASHTRA) PIN-425409 PH :02655-226030/227340/9890530937/942172623 09403801484.	809.*	MODERN CAR CARE (3260), 171/2,RRV INDUSTRIAL AREA,BEHIND SAI BABA MANDIR, SHANTINAGAR,ULHASNAGAR,MAHARASHTRA PIN-421003 PH :0251-273207932254027/9819692027.
783.*	SANTOOR CAR CARE (2053), ASHOK PLAZA,32/2 WADGAON SHERI NEAR WEIKFIELD,PUNE NAGAR ROAD,PUNE PIN-411014 PH :020-6687799.	793.*	SAI MOTORS (2840), NEAR GULEWADI PHATA,PUNE NASIK ROAD,SANGAMNER DIST. AHMEDNAGAR,(MHRS.) PIN-422608 PH :02424-227513.	801.##	SHREE GANESH AUTO CARE (4268), POST SAKURI,TALUKA RAHATA,AHMEDNAGAR PIN-423107 PH :02423-243192/243450/9422726052.	810.*	CHIMAN AUTOMOBILES (3845), NEAR KAJAL PETROL PUMP,BALANI COMPOUND,VITHALWADI STATION ROAD,ULHASNAGAR PIN-421003 PH :0251-2557790/2561627.		
784.*	APPU SERVICE STATION (4927), BG/SEI 11/10,NEAR TELEPHONE EXCHANGE,MIDC, BHOSARI,PUNE (MAHARASHTRA) PIN-411026 PH :020-9422005332/27123838.	794.**	ASHOK AUTOMOBILES (3723), 595/B,M.G.ROAD,SANGLI PIN-416416 PH :0233-375961/9820353596.	802.**	BALAJI MOTORS (1930), 8536 B/1 MURARJI PETH,OPP. OLD PUNE NAKA OFFICE,SOLAPUR PIN-413002 PH :629696/629595/9823111110.	811.##	SAI AUTOMOBILES (5665), STATE HIGHWAY NO.56,NEAR JASAI NAKA,JASAI VILLAGE, URAN,DISTRICT - RAIGAD,MAHARASHTRA PIN-410206 PH :64213533.		
785.##	APPU AUTOMOBILES (5029), MARUTI AUTORISED REPAIR STATION,#81.SR NO 164, TALAWAD ROAD,KANBAY ROAD,TRIVENI NAGAR,AHARASHTRA PIN-412114 PH :9371071595.	795.##	BALAJI AUTO SERVICE (1564), PLOT NO.43,GOLDEN PARK,BYPASS ROAD,SANGLI, DISTRICT-SANGLI,MAHARASHTRA PIN-416416 PH :9822106126.	803.*	G.K. MOTORS (2871), K.V. ROAD,SHIRIMPUR,DISTT. AHMEDNAGAR PIN-413709 PH :952422-8446222297.	812.##	SAI MOTORS & SERVICE CENTRE (5675), AT-GANDRE,PO-TUSE,TAL-VADA-421303,DIS TRICT - THANE,MAHARASHTRA PIN-421303 PH :9270005533.		
786.*	ATHARVA CAR SERVICES (5161), GUJRATH COLONY,SARAF LANE,NEAR VANAZ COLONY,KOTHRUD,PUNE,MAHARASHTRA PIN-411038 PH :9966097051/9966097061.	796.*	AWATI MOTORS (4772), PADMAVATI COLONY,NEMINATH NAGAR VISHRAMBHAMG,SANGLI,MAHARASTRA PIN-416415 PH :9422407284.	804.*	PATRICIA AUTOMOBILES (529), 34 AMAR GION SER.& OFFICE COMPLEX,AGRA RD.,THANE (MHRS) PIN-400601 PH :022-25471105/9987175866.	813.##	SONA AUTOMOTIVE (5671), YASHWANT NAGAR,NEAR WATER TANK,ROAD NO.10 - VITA,DISTRICT - SANGLI,MAHARASHTRA PIN-415311 PH :9960708270.		
787.*	MANAS AUTOMOTIVE (4543), SURVEY NO 2/4 PARARKUTI,LANE NO.1,KARVE NAGAR - PUNE,DISTRICT - PUNE,MAHARASHTRA PIN-411052 PH :020-65022398/9822043007.	797.##	PATHAK MOTORS (5037), YASHWANT NAGAR,TAHARABAD ROAD,SATANA,DISTRICT - NASIK,(MAHARASTRA) PIN-411014 PH :9890216257.	805.**	THANAWALA MOTOR AGENCY (3724), DHIRAJ BAUG,L.B.S. MARG,NEAR HARINIWAS CIRCLE,THANE PIN-400602 PH :022-67302222.	814.##	ADITYA AUTO SERVICE (4271), WAI SATARA ROAD,WALSATARA DIST. PIN-412803 PH :02167-9423971005.		
788.*	MARUTI CARE POINT (3337), S. NO 273/S,BANER ROAD,OPP. VARSHA PARK,BANER,PUNE,MAHARASHTRA PIN-411045 PH :020-5663231.	798.##	SIDDHI AUTOMOBILES (5464), 294/A,DEGAON PATA - SATARA,RAHAMPTUR ROAD,MIDC SATARA,DISTRICT - SATARA,(MAHARASTRA) PIN-415004 PH :9890639368.	806.**	STERLING MOTOR GARAGE (555), OPP. RAVI STEEL INDUSTRIES,2ND POKHRAN ROAD,THANE PIN-400601 PH :022-25890325/ 25890892/25891981/9224019485.	815.##	BHARAT MOTOR (1631), NAGPUR ROAD,NALWADI,WARDHA,MAHARASHTRA PIN-442001 PH :07152-9881588388.		
RAHURI	ANAND MOTORS (4152), IN FRONT OF ASHWINI HOTEL,NAGAR MANMA ROAD,A/P RAHURI DIST. AHMADNAGAR,MAHARASHTRA PIN-413722 PH :02426-235662/982275180/9822159180.	799.*	VENKATESHA AUTO CARE (1659), PLOT NO.21 MUMBAI GOA HIGHWAY,KOLGAON-BHOM,SAWANTWADI, MAHARASHTRA PIN-416510 PH :02363-27416/27153/9423304639.	807.*	TOP GEAR AUTOMOBILES (4840), SAI NAGAR,GHOBUDNER ROAD,KASARVARADAVALI,THANE (W) PIN-400601 PH :022-64509201/64526472.	816.##	ROHIT AUTOMOTIVE (5873), NAGPUR,CHANDRAPUR ROAD,VINYAK,LAYOUT, TILAK WARD, WARORA,DISTRICT-CHANDRAPUR,MAHARA SHTRA PIN-442907 PH :07176-281099/9226118165.		
RAVER	RUCHI MOTORS (2631), MARUTI AUTORISED SERVICE STATION,RAVER,DISTT. JALGAON,(MAHARASHTRA) PIN-425508 PH :02584-9423188307/942374064/253003.	SAWANTWADI	SAWANTWADI	808.*	SEAN MOTORS (5377), DONTALAV - VATAR,(W),VIRAR SATPALA ROAD,TAL-VASAI, DISTT-THANE,MAHARASHTRA PIN-401301 PH :9324003123.	YAVATMAL	817.##	RAMESH MOTORS (2024), GARDEN ROAD,YAVATMAL,MAHARASHTRA PIN-445001 PH :0732-243330/246660.	
ROHA		SHAHADA							

**** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs**

C:Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

YEOLA	818.## M.S. MOTORS (460), AMRAVATI ROAD HIGHWAY,LOHARA,YAVATMAL PIN-445001 PH :249207651565.	BALANGIR	827.## ASHIRWAD AUTOMOBILE WORKS (3177), DAMJI GARAGE,THIKADARPARA,BALANGIR PIN-767001 PH :06652-233345/231896.	PARALAKHEMUNDI	836.## AUTO MECHANIK (2638), S.H.-10 BEHERAMAL,JHARSUGUDA,ORISSA PIN-768203 PH :06645-273510/9040280001.	AHMEDQARH	845.## GAHIR AUTOMOBILES (2877), LUDHIANA MALER KOTLA ROAD,VILL. GOPALPUR CITY,AHMEDGARH,(PUNJAB) PIN-141001 PH :01628-9878854118.	
MANIPUR	819.## BIJASANI AUTOMOTIVE (3041), NAGAR-MANMAD ROAD,YEOLA,DIST. NASIK (MAHARASHTRA) PIN-520005 PH :02559-09923204225/9423185025.	BALESHWAR	828.## AUTO CARE (432), AT - AZIMABA'D,BALASORE,BALASORE PIN-757001 PH :06782-645321, 9437051944/9437285606. 829.* TEKNO INDIA (3666), D-2/9 INDUSTRIAL AREA,O.T. ROAD,BALASORE,(ORISSA) PIN-756003 PH :06782-266879/9437953595/9861034990.	PURI	837.## GANPATI AUTOMOBILES (3178), B. SITAPUR,PARALAKHEMUNDI,DIST. GAJAPATI,(ORISSA) PIN-761200 PH :06815-322765/9437140023.	AJNALI	846.## VISHWAKARMA MOTORS (5666), NEAR VIMAL DHARAMKANTA - AJNALI,DISTRICT - FATEHGARH SAHIB,PUNJAB PIN-140406 PH :9814528084.	
IMPHAL	820.## BORDIN MARUTI GARAGE (4879), MOIRANGKHOM,LOKLAOBUNG,IMPHAL,MA NIUP PIN-795001 PH :0385-9436023659/2455460/2536551.	BARBIL	830.## INDU MOTORS (3241), IN FRONT OF UTKAL AUTOMOBILES,JODA-BARBIL HIGHWAY,BARBIL,(ORISSA) PIN-758035 PH :06767-276158/276727/9337383947.	PURI	838.## URMILA MOTORS (5040), HERA GOHIRI SAHI CHOWK, PURI -1,DISTRICT - PURI,(ORISSA) PIN-752001 PH :06752-223820/9776008748/986110745.	AMLOH	847.## BINDRA MOTORS (5844), NEAR DESH BHAGAT COLLEGE SONTI AMLOH,DISTRICT-FATEH GARH SAHIB,PUNJAB PIN-147301 PH :9814682000.	
SENAPATI	821.## KOMUO MARUTI WORKS (4644), NH-39,TAPHOU RIKHUMAI,SENAPATI,MANIPUR PIN-795106 PH :9436072671/9436422938.	BARGARH	831.## CARSCAN (1164), PLOT - 1/1 INDUSTRIAL ESTATE,RAILWAY STATION ROAD,BARGARH PIN-768028 PH :06646-232820.	SAMBALPUR	839.# ANITA AUTO CARE (4834), SALIA BAGICHA,LIONS CLUB ROAD,KUMBHARPARA,SAMBALPUR (ORISSA) PIN-768001 PH :0663-9437068044/2403044/ 9861248403.	AMRITSAR	848.** KAPOOR'S KAR KARE (737), I/S MAHA LAKSHMI,CALICO PRINTING MILLS,OLD JAIL ROAD,AMRITSAR(PUNJAB) PIN-143001 PH :9814213113.	
MEGHALAYA	TURA	822.## MULTI MOBILE PRECISION (3222), OPP.MECOFED,CENTRAL GODOWN,NEW JAIL ROAD ARAI MILE,TURA PIN-794001 PH :03651-8974037020.	BHUBANESWAR	840.## ASHUTOSH MOTORS (5035), MAIN ROAD, NH-43,SEMILIGUDA,DISTRICT-KORAPUT,(O RISSA) PIN-764036 PH :919437405417/9939639257.	SEMLIGUDA	849.* SAGGU SERVICE STATION (733), HIDE MARKET,AMRITSAR (PUNJAB),AMRITSAR (PUNJAB) PIN-143001 PH :9888005610.	PONDICHERRY	849.** HANSON AUTOMOBILES (1722), MAQBOOL PURA,G.T. ROAD,AMRITSAR PIN-143001 PH :9815167669/8427010988.
CHAMPALI	823.# IRDIV- TC AUTO WORKS (5744), SVENTH DAY TLANG, ZOTLANG ROAD,NEW CHAMPHAI-CHAMPHAI,DISTRICT-CHAMPHAI ,MIZORAM PIN-796001 PH :9862405715.	CUTTACK	832.## INDO JAPAN SERVICE (4936), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE,PO: PATRAPADA,BHUBANESWAR,ORISSA PIN-752019 PH :0674-2470033, 6545624, 9861124660, 9861095444.	KARAikal	841.## MARUTI TECH (2669), NO.1, AKKARAIVATTAM,NAGORE MAIN ROAD,OPP TO ONGC,KARAikal,DISTRICT-KARAikal,PON DICHERY PIN-609604 PH :04368-227101/9842383125.	BANUR	850.** AMRIK SERVICE STATION (2433), PATIALA ROAD,BANUR,DISTT. PATIALA (PUNJAB) PIN-140601 PH :9815591325.	
LUNGLEI	824.## LAWMA ENGINEERING WORKS (3125), A O C SQUARE,LUNGLEI,MIZORAM PIN-796701 PH :0372-2325035.	NAGALAND	833.* DURGA SERVICE CENTRE (427), NEAR PALAMANDA,BADAMBA'D,PO - ARUNDAY MARKET,DISTT - CUTTACK PIN-753012 PH :0671-2311261/2315762.	PONDICHERRY	842.** S D K MOTORS (471), PLOT NO.12,100 FEET ROAD,OZHANDAI KEERAPALAYAM MUDALIARPET,PONDICHERRY PIN-605004 PH :0413-2358540/9843045689.	BARNALA	853.* PUNJAB MOTOR GARAGE (6222), DHANAUJA ROAD,BARNALA (PUNJAB),BARNALA (PUNJAB) PIN-148101 PH :9876130360.	
DIMPUR	825.** ERJO MOTORS (4871), 123 BANK COLONY,DIMPUR,NAGALAND PIN-797112 PH :03862-231888.	ORISSA	834.* ANAND AUTOMOBILES (5449), ANAND NAGAR, IN FRONT OF TARINI MANDIR,DISTRICT - DHENKANAL,(ORISSA) PIN-759001 PH :06762-9437414972/243272.	DHENKANAL	843.* A.P.P. MARUTI MOTOR (2670), PLOT NO.6 GUNDU SALAI ROAD,NATESAN NAGAR,NEAR 100 FEET ROAD,PONDICHERRY PIN-605005 PH :0413-224084/9894059004.	BHADSON	854.## GAURAV MOTORS (4962), DHANAUJA ROAD,BARNALA,DISTRICT SANGRUR,PUNJAB PIN-148101 PH :01679-9317512916.	
ANGUL	826.## ZEET AUTOMOBILES (1573), NALCO NAGAR,KANDASAR,ANGUL,ORISSA PIN-759145 PH :06764-221885/9437065053.	JHARSUGUDA	PARALAKHEMUNDI	844.## MARUTI MISSION (5067), 60 RAGAVENDRA NAGAR, KAMARAJ SALAI,THATTANCHAVADY PONDICHERRY,TINDIVANAM ROAD,PONDICHERRY PIN-605009 PH :0413-2241100/9786589000.	PUNJAB	855.## FRIENDS MOTORS (2233), NABHA ROAD,BHADSON,DISTT. PATIALA,(PUNJAB) PIN-147202 PH :9815700778.		

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

BHATINDA

856.## SUPER AUTOMOBILES (6232),
TINKONI,GONIANA ROAD,BHATINDA
PIN-151001
PH :0164-9814036163.
857.## MODERN MOTORS (6234), OPP. T.V.
TOWER,MANSA ROAD,BHATINDA
PIN-151001
PH :9814177075.
858.## KRISHNA AUTOS (4571), 40 FEET NAMDEV
ROAD,NEAR DELHI ESCORTS HEART
HOSPITAL,BATHINDA,PUNJAB PIN-151001
PH :0164-9888671810.

BUDHLADHA

859.## JINDAL AUTOMOBILES (2147), NEAR
P.S.E.B.,BHIKH ROAD,BUDHLADA,DISTT.
MANSA PIN-151502
PH :9815516964.

DERABASSI

860.## BINDAL AUTOMOBILES (1248),
CHANDIGARH AMBALA ROAD,PARAS RAM
MARKET,DERA BASSI PIN-140507
PH :01762-9914449711.

DHURI

861.## SHIV MOTORS (1962), NEAR OCTROI
POST,SANGRUR ROAD,DHURI PIN-148024
PH :9872851068.

DINANAGAR

862.## D.S. MARUTI SERVICE STATION (3333), G.T.
ROAD,DINA NAGAR,DIST.
GURDASPUR,(PUNJAB) PIN-143531
PH :9814695433.

DIRBA

863.## PENTAGON MECHANICAL WORKS (2564),
JIND-SANGRUR ROAD,DIRBA,DISTT.
SANGRUR,(PUNJAB) PIN-148035
PH :01672-242525.

DORAH

864.* FATEH MOTORS (2048), G.T.
ROAD,DORAH,(LUDHIANA) PIN-141421
PH :01628-9814031784.

FAZILKA

865.## BAHL MOTORS (6229), ABOHAR
ROAD,FAZILKA PIN-152123
PH :01638-9888620550.

FEROZEPUR

866.## SUTLEJ AUTOMOBILES (3568), G.T.
ROAD,FEROZEPUR CANTT,(PUNJAB)
PIN-152001
PH :01632-9815144790.

867.## BOBB MOTORS (4378), NEAR BSF
COLONY,MOGA ROAD,FEROZEPUR CANTT
PIN-152001
PH :01632-9814090331.

GIDDERBAHA

868.* JIWAN CAR CENTRE (3442), BHATINDA
ABOHAR,NATIONAL
HIGHWAY,GIDDERBAHA,DIST. MUKETSAR
(PUNJAB) PIN-152101
PH :01637-9814730286.

GOINDWAL SAHIB

869.## DAS MOTORS (3537), KAPURTHALA
CHOWK,GOINDWAL SAHIB,DISTT.
AMRITSAR,(PUNJAB) PIN-143429
PH :01859-9914699121.

GORAYA

870.## GORAYA AUTOMOBILES (4434), G.T.
ROAD,GORAYA,DISTT PHAGWARA,PUNJAB
PIN-144409
PH :01827-9814002617.

GURDASPUR

871.* VIJAY SERVICE STATION (749), NEAR
RAILWAY CROSSING-PATHANKOT
ROAD,GURDASPUR,(PUNJAB) PIN-144001
PH :9814377637.

HOSHIARPUR

872.## JOGINDER MOTORS (2268), BYE PASS
TANDA ROAD,HOSHIARPUR PIN-146001
PH :9216519763.

JAGRAON

873.## DHALIWAL AUTOMOBILES (2035), NEAR
AJANTA PETROL PUMP,G.T.
ROAD,JAGRAON DISTT.
LUDHIANA,(PUNJAB) PIN-141003
PH :01624-9814316600.

JALANDHAR

874.** KAAR KARES (725),
G.T.ROAD,JALANDHAR,(PUNJAB)
PIN-144001
PH :0161-231938.
875.* PUNJAB MOTOR GARAGE (1575), HMV
CHOWK,G.T. ROAD,JALANDHAR PIN-144008
PH :9317512360.

876.* KAPOOR MOTOR GARAGE (1649), OPP.
SPORTS COLLEGE,KAPURTHALA
ROAD,JALANDHAR CITY PIN-144008
PH :9815543853.

877.## CITY POINT SERVICE STATION (4528),
AVATAR NAGAR ROAD,BEHIND T.V.
CENTRE,OPP HOTEL REGENT
PARK,JALANDHAR PIN-144008
PH :0181-9888382255.

KAPURTHALA

878.## T.S. WALIA MOTORS (267),
MANSOORWAL,JALANDHAR
ROAD,KAPURTHALA PIN-144601
PH :9357211525.
879.## AVTAR AUTO TECH (5329), KANJU ROAD,
NEAR OCTROI,KAPURTHALA,PUNJAB
PIN-144601
PH :9888262026.

KURALI

880.## VISHWAKARMA MOTORS (3335), PRAKASH
ICE FACTORY,CHANDIGARH
ROAD,KURALI,(PUNJAB) PIN-141013
PH :01886-9814273873.

LALRU

881.## VIKAS MOTORS (2777), IOC PETROL
PUMP,AMBALA CHANDIGARH ROAD,LALRU
DISTT. PATIALA,PUNJAB PIN-147001
PH :9216069888.

LUDHIANA

882.** PUNJAB AUTO CENTRE (6221), OPP
TELEPHONE EXCHANGE,BHARAT NAGAR
CHOWK,LUDHIANA PIN-141001
PH :9855117003.
883.* REEHAL AUTOMOBILE SERVICES (1176),
OPP. JAMALPUR POWER
HOUSE,CHANDIGARH ROAD,LUDHIANA
PIN-141010
PH :0161-2680309.

884.## VISHAL AUTOMOBILES (1262), G.T.
ROAD,DOLEWALL,LUDHIANA PIN-141003
PH :9815206060.

885.## SATNAM MOTOR WORKSHOP (4533), OPP
MILK PLANT,FIROZPUR ROAD,LUDHIANA
PIN-141001
PH :0161-9855228591.
886.## STAR AUTOS (4650), JALANDHAR BY
PASS,G.T. ROAD,LUDHIANA PIN-141003
PH :0161-9216844220.

MALOUT

887.## DELHI MOTORS (6225), TINKONI
CHOWK,BHATINDA ROAD,MALOUT
PIN-152107
PH :9814874061.

MANDI GOBINDGARH

888.## NATIONAL MOTORS (1070), G.T.
ROAD,NEAR P & S BANK,MANDI
GOBINDGARH PIN-147301
PH :9876181801.

MANSA

889.## RAJ AUTOMOBILES (2162), NEAR N.M.
COLLEGE,MANSA,(PUNJAB) PIN-151505
PH :01652-9872679591.

MOGA

890.* GURU NANAK MOTOR REP. WORK (732),
G.T.ROAD,MOGA,(PUNJAB) PIN-142001
PH :9914121387.

MOHALI

891.** MOHALI MOTORS (756), C-55 INDUSTRIAL
AREA,PHASE-VI,S.A.S. NAGAR,MOHALI
PIN-160055
PH :9501506065.

892.** SETHI MOTORS (4742), PLOT NO.
E-159,INDUSTRIAL AREA,
PHASE-7,MOHALI,PUNJAB PIN-160055
PH :9814307002.

893.## UNIPONT (5043), PLOT NO. 593,INDUSTRIAL
AREA PHASE-IX, MOHALI,DISTRICT -
MOHALI,(PUNJAB) PIN-160055
PH :9316108300.

894.** BENZ AUTO SCAN (5734), E-153, PHASE
7,INDUSTRIAL AREA
-MOHALI,DISTRICT-MOHALI,PUNJAB
PIN-160059
PH :0172-9815654303.

MOONAK MANDI

895.## GOYAL SERVICE STATION (6034),
TOHANA-SURJAN, BHAINI ROAD,MOONAK
MANDI,DISTRICT-SANGRUR,PUNJAB
PIN-148033
PH :08427346677.

MORINDA

896.## SONY MOTOR PALACE (1077), SIRHIND
ROAD,MORINDA PIN-140101
PH :9818612477.

MUKERIAN

897.## NEW MODERN AUTOMOBILES (4437), G.T.
ROAD,MUKERIAN,PUNJAB PIN-144211
PH :01883-9463292013.

898.* MARSHAL SALES CORPORATION (5251),
PATHANKOT ROAD, NEAR RADHA
SOAMI,SATSANG GHAR -
MUKERIAN,DISTRICT -
HOSHARPUR,PUNJAB PIN-144211
PH :9872335923.

MUKTSAR

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

999.##	MALWA MARUTI CENTRE (4764), KOTKAPURA ROAD,MUKTSAR,PUNJAB PIN-152026 PH :91633-9914133987.	RAJPURA 909.## NOOR MOTORS (3045), PATIALA ROAD,RAJPURA,(PUNJAB) PIN-140401 PH :01762-9855421766.	TARN TARAN 920.## GURMEET MOTORS (4757), CHABHAL KHURD,TARN TARAN,DISTRICT- AMRITSAR,PUNJAB PIN-143001 PH :9356115101.	929.## K.L. INTERNATIONAL AUTOMOBILES (1763), DELHI JAIPUR HIGHWAY,VILLAGE DHAMPI.O. KANKARDOPA,TEHSIL BEHOR DIST. ALWAR (RAJASTHAN) PIN-301701 PH :01492-221396/9414014603.
900.##	MEHTA MOTORS (3531), KHADDAR BHANDAR ROAD,NAKODAR PIN-141310 PH :9815600082.	RAMPURAPHUL 910.## VIRDI MOTOR GARAGE (3046), BARNALA ROAD,RAMPURAPHUL,DISTT. BATHINDA,(PUNJAB) PIN-151103 PH :01651-9815472217.	ZIRA 921.## NEW AUTOMOBILES (5477), NEW TALWANDI ROAD, ZIRA,DISTRICT - MOGA,PUNJAB PIN-142047 PH :01682-9463240231.	BHARATPUR 930.** CLASSIC MOTORS (2348), DEEG ROAD,KUMHER GATE,BHARATPUR,(RAJASTHAN) PIN-321001 PH :0564-229301/9414026545.
901.##	RAJINDRA MOTORS (4935), C-177,INDUSTRIAL FOCAL POINT,PATIALA,PUNJAB PIN-140401 PH :0175-9316200335.	911.## BALAJI AUTOMOBILES (4443), BARNALA ROAD,RAMPURA PHULDISTT BHATINDA,PUNJAB PIN-151103 PH :01651-9815443444.	RAJASTHAN ABU ROAD 922.## UNIQUE MOTORS (4923), MOUNT ROAD,AKRABHATTA,ABU ROAD,(RAJASTHAN) PIN-307026 PH :02974-228414/9929177781.	BHILWARA 931.* QUICK SERVICES (3473), SABUN MARG,PURAN DAS JI KI BAGICHEE,BHILWARA PIN-311001 PH :01482-226536/223456.
902.**	PARAS MOTORS (4778), PLOT NO. 25-A,NEAR HOTEL FLYOVER FACTORY AREA,PATIALA,PUNJAB PIN-147001 PH :9814089861.	912.* CITY MOTORS (1867), P.B.NO.11,MAIN ROAD,SAMANA,DISTT. PATIALA (PUNJAB) PIN-147101 PH :01764-9814864180.	923.## ASHOK AUTOMOBILES (1121), BYEPASS ROAD,PARVATPURA,IND.AREA,AJMER (RAJASTHAN) PIN-305001 PH :0145-2695233/2695076.	932.## NATIONAL SERVICE CENTER (4761), SANGANER COLONY,KOTA ROAD,BHILWARA,RAJASTHAN PIN-311001 PH :01482-329586/256146.
903.##	ANU AUTOMOBILE (2747), AMRITSAR ROAD,NEAR RADHA SWAMI SATSANG,PATTI DISTT. AMRITSAR,(PUNJAB) PIN-143001 PH :98151-987342843.	SANGRUR 913.## RAKESH MARUTI SERVICE (6325), JIND - DELHI ROAD,NEAR E.S.I. DISPENSARY,SANGRUR PIN-148001 PH :01672-9814064202.	ALWAR 924.## VERTEX AUTOMOBILES PVT. LTD. (1944), CHANDUKA BHAWAN,SWARG ROAD,ALWAR PIN-301001 PH :0144-2335733/2342117/9828233299.	BHINNIMAL 933.## GURJAR MOTORS (5567), RAMSIN ROAD,OPP PRADEEP PETROL PUMP,BHINNIMAL,DISTRICT - JALOR,RAJASTHAN PIN-343029 PH :02969-290962.
904.##	SWAMI MOTORS (3774), (PAMMI W/SHOP),OPP. B.N. DUGGAL PETROL PUMP,G.T. ROAD,PHAGWARA,DISTT.KAPURTHALA. KAPURTHALA PIN-144401 PH :9815107989.	914.## SANGRUR MARUTI CENTRE (1632), PATIALA ROAD,OPP. MILITARY CAMPUS,SANGRUR,(PUNJAB) PIN-148001 PH :01672-232340.	925.## POOJA MOTORS (5439), POOJA MOTORS,NEAR AMARNATH PETROL,PUMP, DELHI ROAD ,MUNGSKA - ALWAR,DISTRICT - ALWAR,RAJASTHAN PIN-301001 PH :0144-9414640279/270921/2371382.	BHIWADI 934.** WHEEL-O-CITY (4246), E-7D (A) PHASE-1,NEAR RIICO CHOWK,BHIWADI,RAJASTHAN PIN-301019 PH :01493-225555/290962.
905.##	VIVA MOTORS (4740), G.T. ROAD,PHAGWARA,DISTT-KAPURTHALA, PUNJAB PIN-144463 PH :01824-9814310021.	915.## BADRI DHAM CAR SERVICE (1062), G.T. ROAD,SIRHIND PIN-140406 PH :9417045975.	BAGRU 926.## NARAYAN MOTORS (5272), N.H.8. AJMER ROAD -BAGRU,DISTRICT - JAIPUR,RAJASTHAN PIN-302001 PH :0141-2864504/5123711.	BIKANER 935.## GENERAL AUTOMOBILES (1123), RANI BAZAR,RAIWAY CROSSING,BIKANER (RAJASTHAN) PIN-334001 PH :0151-2200338/2549072.
906.##	DHANJU MOTORS (1647), NURMEHAL ROAD,PHILLAUR,DISTT. JALANDHAR PIN-144410 PH :9814454963.	916.## MALHOTRA MOTORS (4657), OPP. INCOME TAX OFFICE,SIRHIND,DISTT FATEHgarh SAHIB,PUNJAB PIN-140406 PH :9815844008/500600.	927.* VEW SERVICE (1238), S-181 & 182,RIICO,BARMER,(RAJASTHAN) PIN-344001 PH :02982-22329/227339/9410158584.	936.## VISHI MOTORS (5559), PLOT NO 55(A) ,I.A. RANI BAZAR-BIKANER,DISTRICT - BIKANER,RAJASTHAN PIN-334001 PH :9829027128.
907.#	HI-TECH AUTOMOBILES (4945), VILL. NATHPUR BATALA ROAD,QADIAN,DISTRICT-GURDASPUR,PUNJAB PIN-143516 PH :9464066479.	SUNAM 918.## SUNAM AUTOMOBILES (3924), PATIALA ROAD,NEAR OCTROI POST,SUNAM,DISTT. SANGRUR PIN-148028 PH :01676-3026118.	BARMER 928.## VARDHANI MOTORS (5358), NEAR NALAYA BASSI,DISTRICT - JAIPUR,RAJASTHAN PIN-304505 PH :01429-941431255/222317.	937.## SHREE JI MOTORS (2174), OPP. KUMBHA STADIUM,KHOJA GATE,BUNDI,(RAJASTHAN)PIN-323001 PH :0747-2443181/5120455.
908.##	RANA SUPREME MOTOR GARAGE (3732), NEAR GURUDWARA TAHLIANA SAHIB,BARNALA BYE PASS ROAD,RAIKOT,DISTT. LUDHIANA (PUNJAB) PIN-141109 PH :01624-9814265791.	TANDA 919.## MALWA AUTO CARE CENTRE (2073), G.T. ROAD - BY-PASS,TANDA,DISTT. HOSHRIPUR,(PUNJAB) PIN-146001 PH :9814392103.	BEHROR	CHITTORGARH 938.## SISODIA MOTORS (5673), 31,OLD INDUSTRIAL AREA,BYE PASS ROAD,CHITTORGARH,DISTRICT - CHITTORGARH,RAJASTHAN PIN-312001 PH :01472-241476.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

CHOMU

939## SHREE LAXMI MOTORS (3072), MORIJA ROAD,CHOMU,JAIPUR,(RAJASTHAN) PIN-303702 PH :01423-207248/9828160281.

CHURU

940.* ABS MOTORS (2978), JAIPUR ROAD,CHURU,(RAJASTHAN) PIN-331001 PH :01562-252333/257333.

DAUSA

941## BALAJI MOTORS (4564), NEW MANDI ROAD,NEAR TRANSFORMER,DAUSA PIN-303303 PH :01427-9414273443/9828169601.

DHAULPUR

942## NARSING SERVICE CENTRE (3074), NEAR JAGDISH TALKIES,BARI ROAD,DHOLPUR,(RAJASTHAN) PIN-328001 PH :05642-223688/231888. 943## NARAYAN MOTORS (3345), G.T. ROAD,DHOLPUR,(RAJASTHAN) PIN-328001 PH :05642-240697/9414027335.

DIDWANA

944## SANTOSH AUTOMOBILES (5450), SANTOSH ATUOMOBILES, KUCHAMAN ROAD,DIDWANA,DISTRICT - NAGAUR,(RAJASTHAN) PIN-341303 PH :01580-941118142/220909.

DUDU

945## NEETA AUTOMOBILE (4855), C/O NEW JAIN GUEST HOUSE,NH-8, JAIPUR AJMER ROAD,DUDU, RAJASTHAN PIN-302006 PH :01428-513229/9828307560.

JAIPUR

946## SUPREME MOTORS (1130), A-25 ASSAM MANSION,TRANSPORT NAGAR,JAIPUR PIN-302003 PH :0141-2617030/4033993. 947.* RIGHTWAYS CO. (1131), KISHANPOLE BAZAR,JAIPUR,JAIPUR PIN-302001 PH :0141-2372436/4022436.

948.* SERVICE CENTRE (1139, OPP. TOURIST HOTEL,M.I. ROAD,JAIPUR PIN-302001 PH :0141-2374009/4009469.

949## CAR CLINIC (1141), PLOT NO.6,GIRDHAR COLONY,SIKAR ROAD,JAIPUR PIN-302013 PH :0141-2232790/3293308. 950## JAI SHRI RAM AUTO SERVICE CENTRE (1140), OPP. SHYAM NAGAR,AJMER ROAD,JAIPUR PIN-302026 PH :0141-2221241/982905605.

951.** SAISHA MOTORS (1764), MAIN SHIPRA PATH,OPP. SECTOR 93,AGARWAL FARM,JAIPUR PIN-302020 PH :0141-2399196/9414454820.

952.* AMGI AUTOMOBILES (1938), AIRPORT CIRCLE,KOTA ROAD,JAIPUR PIN-302011 PH :01562-992899904/2310500.

953## J.K. AUTOMOBILES (2058), 38 SUSHILPURA,AJMER ROAD,JAIPUR PIN-302007 PH :0141-2705493/2211386.

954.* SHARP MOTORS (2032), J-3 HIMMAT NAGAR,MAIN TONK ROAD,GOPAL PURA CIRCLE,JAIPUR PIN-302004 PH :0141-2705493/2211386.

955## LAXMI MOTORS (2576), 24 GANGA JAMUNA CROSSING,OPP. JK PETROL PUMP,NEAR SANGANER ROAD,MANSAROVAR,JAIPUR PIN-302019 PH :0141-5051892/5145892.

956## ALFA MOTORS (3347), MAHALAXMI NAGAR,OPP. HEERAPURA POWER HOUSE,AJMER ROAD,JAIPUR PIN-302006 PH :0141-6457899/2297229/9829014959.

957## TOSHIWAL AUTOMOBILES (3475), 131 SHRI GOPAL NGR, GOPALPURA BYEPASS,JAIPUR,(RAJASTHAN) PIN-302015 PH :0141-2504296/5063836.

958.* M. R. MOTORS (4857), PLOT NO. 120-121 & 125-126,VANE VIHAR, 200FT BYE PASS,JHOTWARA,JAIPUR,(RAJASTHAN) PIN-302016 PH :0141-9314881528/340196.

959## A 1 MOTORS (4856), D-28 MALVIYA NAGAR,,INDUSTRIAL AREA JAIPUR,DISTRICT - JAIPUR,RAJASTHAN PIN-302017 PH :0141-941047628.

960## SRINATH ENTERPRISES (4852), GOPALPURA BYEPASS,NEAR -DELHI KISHANGARH,HIGHWAY, JAIPUR,DISTRICT - JAIPUR,RAJASTHAN PIN-302018 PH :0141-9414044655/3234798.

961## KRISHNA AUTOMOBILES (5363), B-27 SUNDAR NAGAR MANSAROVAR,JAIPUR,DISTRICT - JAIPUR,RAJASTHAN PIN-302020 PH :0141-310748.

962## EDEN AUTO PARTS & SERVICE CENTER (5473), CC-134,.135, GOLE MARKET, NEAR,MAA KA HOTEL, JAWAHAR NAGAR,JAIPUR,(RAJASTHAN) PIN-302004 PH :0141-2650242/9799296.

963## KATARIA MOTORS (2577), 9-A NEMINAGAR VISTAR,AMRAPALI MARG,VAISHALI NAGAR,JAIPUR PIN-302021 PH :0141-2350904/9414468024/2352136.

JAISALMER

964## R.R. AUTOMOBILES (1473), OPP. GEETA ASHRAM,JAISALMER,(RAJASTHAN) PIN-345001 PH :02992-9414150203.

JHUNJHUNU

965## DADHIMATI MOTORS (1648), OPPOSITE RSEB OFFICE,BAGAR ROAD,JHUNJHUNU,(RAJASTHAN) PIN-333023 PH :01592-233853/941436562.

966## VISHWAKARMA AUTOMOBILES (3071), HPC DEALER,RANI SATHI ROAD,JHUNJHUNU,(RAJASTHAN) PIN-333001 PH :015972-32441.

JODHPUR

967.* P.D. MOTORS (3340), NATIONAL HIGHWAY NO. 65,ROAD,NEAR JHALAMAND CHORAYA,JODHPUR PIN-342005 PH :0291-2724485/2722495.

968## DEORA MOTORS (5353), UPPER UNDER BRIDGE,PAOTA 'C' ROAD,JODHPUR,DISTRICT - JODHPUR,RAJASTHAN PIN-342006 PH :0291-9829026069/2550707.

KALWAR

969## ROHLANIYA MOTORS (5554), KALWAR MAIN TIRHIA ,NEAR KHARBAS,NEAR PETROL PUMP, JHOTWARA ROAD,DISTRICT - KALWAR,RAJASTHAN PIN-302017 PH :0141-9829055634.

KISHANGARH

970## RADHA SWAMI AUTOMOBILES (440), MADANGANJ,KISHANGARH,(RAJASTHAN) PIN-305801 PH :01463-244423/9252059798.

KOTA

971## FRIENDS AUTOMOBILES (3679), KOTA BUNDI ROAD,NH.12,OPP. HOTEL MENAL RESIDENCY,KOTA PIN-324008 PH :0744-2372360/9828529479.

KOTPUTLI

972## VIKAS MARUTI (4970), NH-8,NEAR MNA GAS AGENCY GODOWN,KOTPUTLI,RAJASTHAN PIN-303108 PH :01421-9352307313.

KUCHAMAN

973## DALUKA AUTO SALES (4565), NEAR MEENU AUTO TYRE,DIDWANA ROAD,KUCHAMAN,RAJASTHAN PIN-341508 PH :01586-220215/ 9414433240.

MAKRANA

974## GEHLOT MOTORS (454), OPPOSITE TO G.S.S,MANGLANA ROAD,MAKRANA,RAJASTHAN PIN-341505 PH :01588-243076/243376.

MERTA

975## DELUX CAR SERVICE CENTRE (3856), KUCHERY ROAD,MERTA CITY,DISTT. NAGAUR PIN-341510 PH :01590-230559/9460066196.

NAGAUR

976.* CLASSIC AUTOMOBILES (1179), DIDWANA ROAD,(DELHI GATE),NAGAUR,(RAJASTHAN) PIN-341001 PH :01582-242646/243019/9414235552.

NEWAI

977## HEENA MOTORS (5568), NEWAI BYEPASS ,NEAR JHILAY MOAD,NEWAI,DISTRICT - TONK,RAJASTHAN PIN-304021 PH :9413063376,7877663246.

PILANI

978## MARUTI CARE CENTRE (3073), RAJGARH ROAD,SHANTI NAGAR,PILANI DISTT. JHUNJHUNU,RAJASTHAN PIN-333031 PH :01596-242232/244459.

PINDWARA

979## RUNEA MOTORS (5758), NH 14,OPP. PATNAIK MIDWAYA,PINDWARA,DISTRICT-SIROHI,RAJASTHAN PIN-307022 PH :9461221104.

RAILMAGRA

980## SAI MOTORS (5779), DARIBA FATEHNAGAR ROAD,BORIWAL,FILLING STATION, RAILMAGRA,DISTRICT - RAJSAMAND,RAJASTHAN PIN-313329 PH :9460725455.

RAINWAL

981## MAHALAXMI AUTO CARS (5566), OPP. ROHINI NAGAR IST,PHAGU ROAD - RAINVAL,DISTRICT - JAIPUR,RAJASTHAN PIN-302025 PH :0141-9928089224.

RAJSAMAND

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

982.##	VIPUL SHARMA (2170), C/O N.L. SHRIMALI,BEHIND PAVAN HOTEL,EXCISE OFFICE KI GALI,RAJNAGAR DIST. RAJSAMAND (RAJ.) PIN-313 326 PH :02952-224108/223506.	991.##	ROHIN SERVICE STATION (2646), N.H.15 BIKANER ROAD,OPP. G.S. POWER HOUSE,SURATGARH,(RAJASTHAN) PIN-335804 PH :01509-222514/941377914.	1000.##	K.P.K AUTOMOTIVE (5547), SF NO.460/2,TIRUPPUR MAIN ROAD,AVINASHILINGAMALAYAM,AVINASHI, DISTRICT-COIMBATORE,TAMILNADU PIN-641654 PH :04296-275784/9994937784.	1011.##	AUTO TECH (3445), NO.6 G.S.T. ROAD,KAMATCHI COLONY,SANATORIUM,CHENNAI PIN-600040 PH :044-22418315/2238888/22383972/9840375524	
RAWATBHATA		TIJARA		BHAVANI		VAISHALI MOTORS	(4529), 4/577 RAJIV STREET,OLD MAHALIPURAM ROAD,KOTTIVAKAM,CHENNAI PIN-600041	
983.##	APNA MARUTI GARAGE (5940), OPP. RAM TEKRI MANDIR,PRATAP MARKET,MAIN ROAD, RAWATBHATA,DISTRICT-CHITTORGARH,RA JASTHAN PIN-323305 PH :9461221104.	992.##	SANJAY MOTORS (5875), ALWAR ROAD,NEAR BOLLYWOOD FARM,TIJARA,DISTRICT-ALWAR,RAJASTHA N PIN-301001 PH :9414215875/9251415875.	1001.##	CAR ZONE AUTO SERVICE (5332), METTUR MAIN ROAD,NATARAJAPURAM BHAVANI,DISTRICT - ERODE,TAMILNADU PIN-638301 PH :044-984245670.	1012.*	PERFECT MARUTI CARE (4632), NO. 51/26,4TH MAIN ROAD,RAJA ANNAMALLI PURAM,CHENNAI PIN-600028 PH :044-9789974300/24323328.	
SALUMBAR		TONK		CHENGELEPUT		NSK MARUTI	(4975), 2/247, AST COAST ROAD,NLANKARAII,CHNNAI,TAMIL NADU PIN-600041 PH :044-24493839/9841047232/984323652.	
984.##	SWASTIK MOTORS (5974), GANESH GHANTI,BANSWARA ROAD,SALUMBAR,DISTRICT-UDAIPUR,RAJA STHAN PIN-313027 PH :02906-231269/9417459341.	993.##	SUMIT MARUTI (4566), KOTA ROAD,TONK,RAJASTHAN PIN-304001 PH :0143-9214659749/2253228.	1002.##	AMMA AUTOMOBILES (2941), 57-A/1 THIRUKAZHUKUNDRAM ROAD,CHENGALPATTU,(T.N.) PIN-603002 PH :044-27421059/9842375112.	1013.*	ABIRAMI MOTORS (5131), 6 ANNA NEDUMATHAI,CHOOLABEDU,CHENNAI,TAMI LNADU PIN-600094 PH :044-9840017558/23610806.	
SANCHOR		UDAIPUR		CHENNAI		CHIDAMBARAM		
985.##	S.M. RAO AUTOMOBILES PVT. LTD. (5878), 197, KHASAR, NO 643/455, NH-15, GARDHALI,SANCHOR,DISTRICT-JALOR,RAJ ASTHAN PIN-343041 PH :2979-223740/9982214381.	994.**	ALOK AUTOMOBILES PVT. LTD. (1977), B.N. COLLEGE PREMISES,OPP. DALAL PETROL PUMP,SEVASHRAM ROAD,UDAIPUR PIN-313001 PH :0294-411463.	1003.*	EASVARI MOTORS PRIVATE LIMITED (1431), W-110 ANNA NAGAR,CHENNAI PIN-600040 PH :044-9840820212.	1014.**	HI-TECH MARUTI (3231), NO.45, SITHIVEL NAGAR, SALIYANTHOPPU,BYE PASS ROAD,CHIDAMBARAM,DISTRICT-CUDDALO RE,TAMILNADU PIN-608001 PH :0444-228589/9585538671/9585538672.	
SAWAI MADHOPUR		TAMIL NADU		AMBUR		COIMBATORE		
986.##	MAHALAXMI AUTOMOBILES (5757), WARD NO 4,BYE PASS ROAD,SHRI MADHOPUR,DISTRICT-TONK,(RAJASTHAN) PIN-332715 PH :9887498033.	995.**	SRI SAI CAR CARE (2376), PUNJAWATI,PULLA,UDAIPUR PIN-313001 PH :0294-3299901/9414166770.	1004.**	SWAMY AUTOMOBILES (456), 23 CASA MAJOR ROAD,EGMORE,CHENNAI PIN-600008 PH :044-28194815/ 28194135/ 9840891916.	1015.##	TDK AUTOMOBILES PVT. LTD. (160), 9A NEHRU STREET,B.R. PURAM AVINASI ROAD,PEELAMEDU,COIMBATORE PIN-641004 PH :0422-2577898/2572571/952300666.	
SIKAR		ARAVAKURICHI		ARCOT		LOTUS AUTOMOBILES	(4758), 1647-A AVINASHI ROAD,HOPE COLLEGE,PEELAMEDU,COIMBATORE (TAMILNADU) PIN-641004 PH :0422-7667710009/9842265133.	
987.##	RAJ AUTOMOBILES (5534), SUSHIL TRADING CO. STATION ROAD,SIKAR,DISTRICT - SIKAR,RAJASTHAN PIN-332001 PH :01572-240721/240722.	997.#	GOWRI MARUTI (5570), OPPOSITE IOCL PETROL PUMP,NH-7,ARAVAKURICHI,DISTRICT - KARUR,TAMILNADU PIN-639201 PH :9994818043.	1005.*	WHEELS AUTO (469), 40 KASTURIBA NAGAR,1ST CROSS ROAD,ADYAR,CHENNAI PIN-600020 PH :044-24422971/9840138888.	1016.##	SOUTH INDIA MOTORS (MARUTI) (4752), 9A/3 AVINASHI ROAD,NEAR KMCH POLICE CHECK POST,CIVIL AERODROME POST, SITRA,COIMBATORE (TAMIL NADU) PIN-641014 PH :0422-9843315065, 6560552/2592579.	
SRIGANGANAGAR		ATTRU		AVINASHI		GURU AUTO GARAGE	(4965), 2/96, IRUGUR ROAD, NEAR BSNL OFFICE,CHINNAMPALAYAM,COIMBATORE,TA MIL NADU PIN-600014 PH :0422-9843256247/2625295.	
988.##	ROHIT UDYOG (1132), 75 K-BLOCK,SRIGANGANAGAR PIN-335001 PH :0154-9414093565/2474823.	999.##	GANESAA MOTORS (4538), 1/1-D ARANGA BALA NAGAR,SALEM CUDDLORE MAIN ROAD,NARASINGARAM,ATTRU (TAMIL NADU) PIN-636108 PH :04282-9443273866/281966.	1006.**	O.M.S. MOTORS (P) LTD. (2140), NO.27 VELACHERY MAIN ROAD,RAM NAGAR NORTH,MADIPAKKAM,CHENNAI (TAMIL NADU) PIN-600091 PH :044-225811851/9440081390.	1017.##	KARS KARE SERVICE CENTRE (2579), 648 T.H. ROAD,TONDIARPET,CHENNAI PIN-600076 PH :044-25012075/9840378025.	COONOOR
989.*	NAGPAL MOTORS (3341), NAGPAL COMPLEX,SUKHARIA CIRCLE,SRIGANGANAGAR PIN-335001 PH :0154-9414090666.	1007.##	EASVARI MOTORS PRIVATE LIMITED (2236), AC-123 4TH AVENUE SHANTHY COLONY,ANNA NAGAR-CHENNAI,CHENNAI,MAHARASHTRA PIN-600040 PH :044-26612837/9840082012.	1008.*	P.A. SERVICE STATION (2346), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR,NEAR 100 FEET ROAD,AGRAHARAM, KORATTUR,CHENNAI PIN-600076 PH :044-25012075/9840378025.	1018.##	MARUTI NEEDS (2531), NO.2 PARK ROAD,PADI,CHENNAI PIN-600050 PH :044-26547104/9940099500.	
SUJANGARH		AVINASHI		AVINASHI		KARU		
990.##	SHRI CHARBUJHA MARUTI (4924), LANDU ROAD,SUJANGARH,DISTRICT-CHURU,RAJA STHAN PIN-331506 PH :01568-222291/9828118827/9783455755.	1009.##	KARS KARE SERVICE CENTRE (2579), 648 T.H. ROAD,TONDIARPET,CHENNAI PIN-600081 PH :044-25917671/9841070589.	1010.**	MARUTI NEEDS (2531), NO.2 PARK ROAD,PADI,CHENNAI PIN-600050 PH :044-26547104/9940099500.			
SURATGARH								

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1021.## SHANTHI AUTO CARE (6054), FIGURE OF 8 ROAD,COONOR,NILGRIS,(TAMIL NADU) PIN-643101 PH :0423-230652/9443089750.	1030.## SRI VINAYAKA MOTORS (3848), 5/2C/1 (OPP TAMIL NADU HOTEL),BYE PASS ROAD,HOSUR PIN-635109 PH :04344-245036/9443245096.	KRISHNAGIRI 1039.## THIRUTHANIGAI MOTORS (2427), SALEM-CHENNAI BYE PASS ROAD,KRISHNAGIRI,(TAMILNADU) PIN-635001 PH :04349-231532/9842757017.	1048.## SRI MARUTHI MOTOR SERVICE (1458), 8-A DAILY BAZAR,BLOCK-19,NEYVELI PIN-607803 PH :04142-324253/9443203191.
CUDDALORE 1022.## SUNART AUTOS (2134), KTR BUILDINGS,CHIDAMBARAM ROAD CUDDALORE PIN-607002 PH :04142-223825/9842345690.	1031.## BALAJI MOTORS (5136), PLOT NO.11 MARUTHI NAGAR,NEAR T.V.S. AGENCIES (T V S SHOWROOM),KRISHNAGIRI MAIN ROAD-HOSUR,TAMILNADU PIN-635109 PH :04344-9842755402/260664.	KALPAKKAM 1032.## MARUTI MOTORS (4253), SURVEY 309/5,A,PUDUPATTINAM VILLAGE PANCHAYAT,THIRUKALUKUNDRAM TALUKA, KANCHEEPURAM,KALPAKKAM PIN-603102 PH :9443366535, 9842323702.	KUMBAKONAM 1040.## SRI SAKTHI MOTORS (4330), T.S.N 581, 584,DOOR NO. 30, ULLAKAM STREET,NEAR OLD BUS STAND,KUMBAKONAM PIN-612001 PH :0435-2403786/ 2431513, 9443131513.
CUMBUM 1023.## SRI BALAJI MOTOR WORKS (3139), 221-A 1/3 THENI ROAD,NEAR REGULATED MARKET,UTHAMPURAM,CUMBUM PIN-625516 PH :04554-2742452/9994169309.	KANCHCHEEPURAM 1033.* SVS MARUTI SERVICE CENTRE (5466), NO 46.C KARUKINIL AMARNATHAL KOIL STREET,METTU STREET,OPP. GANESH SAWMILL - KANCHEEPURAM,TAMILNADU PIN-631501 PH :044-999432290/67277888.	MADURAI 1041.## FRIENDLY MOTORS (3141), 32 PALAM STATION ROAD,NEAR LIC BUS STOP,SELLUR,MADURAI PIN-625002 PH :0452-9842414041/265255.	PALLADAM 1049.# CHENDU MOTORS (4333), KALIVELAMPATTI PIRUVU,TRICHY ROAD,PALLADAM,COIMBATORE DIST PIN-641162 PH :04255-255805, 9842225058.
DINDIGUL 1024.* MAGNUM MOTORS (1241), MEENACHINAICKEN PATTY,NH-7 BYE-PASS ROAD,DINDIGUL,(TAMIL NADU) PIN-624002 PH :0451-2432751/2424578/984212034/98422313 40.	KANGAYAM 1034.## SRI ARUN CAR CARE (3949), COIMBATORE ROAD,NEAR IBP PETROL BUNK,KANGAYAM PIN-638701 PH :04257-9360008642/9443329562.	MADURANTHAKAM 1042.## SHALOM MOTORS (4629), THENI MAIN ROAD,ACHAMPATHU,NEAR BHARAT PETROLEUM,MADURAI PIN-625019 PH :0452-944205810/ 9863557772.	PALLAVARAM 1050.* VBK MOTORS (4463), OLD NO. 99, NEW NO. 91,G,S,T ROAD, ALVITONE ESTATE,(BEHIND LAKSHMI THEATRE),PALAVARAM, CHENNAI PIN-600043 PH :044-42326210/20/30, 9841425030.
ERODE 1025.## SRI KRISHNA AUTOMOBILE ENTERPRISES (2320), 560 CAUVERY ROAD,ERODE PIN-638003 PH :0424-2218010/2218011.	KARAIKUDI 1035.## SURABI MOTORS (2340), NO.11 TRICHY MAIN ROAD,(NEAR RAILWAY CROSS),SRIRAM NAGAR, KOTAIYUR,KARAIKUDI PIN-630001 PH :0465-286853/9443351484.	MADURANTHAKAM 1043.## MARUTHI MOTORS (6036), NO.33,G.S.T. ROAD,KARUNGUZHI,MADURANTHAKAM,DIS TRICT-KANCHIPURAM,TAMILNADU PIN-603303 PH :0427-944335073.	PARAMAKUDI 1051.# SIVA AUTOMOBILES (4542), NEAR SRIKUMARA SUBRAMANIYA SWAMY TEMPLE,OPP FIRE STATION,MADURAI RAMESWARAM ROAD,PARAMAKUDI, RAMNAK DIST PIN-623707 PH :04664-9944258794/231253.
1026.## SRI SAKTHI CARE (105), NO.21 & 22 (TS-10),POOSARI CHENNIMALAI STREET,(NATIONAL HOSPITAL BACKSIDE),ERODE PIN-638009 PH :0424-2273438/2273110/9842855157.	KARUMATHAMPATTY 1036.## SIVAN MOTORS (3832), OPP IBP NH47,NEAR KONGU VELLALAR SCHOOL,KARUMATHAMPATTY PIN-641659 PH :0421-230290/9842231819.	MAYILADUTHURAI 1044.## R.M.S. MARUTI AUTO (2237), 53/54 MAHADHANA STREET,MAYILADUTHURAI,(TAMIL NADU) PIN-609001 PH :0364-222685/9842922665.	PARAMATHIVELUR 1052.## RADHA CAR CARE (5828), NO 96/1,BYE PASS ROAD,VETTUKATTU PUDAR,PIRVUR ROAD,PARAMATHIVELUR-638182,DISTRICT-NAMAKKAL,TAMILNADU PIN-638182 PH :04268-220009/9600499600.
GADALUR 1027.## GREENWAY MARUTI SERVICE CENTER (5471), KALAMPUZHAD.O, NO 12/9-3,GUDALUR,DISTRICT - NILGIRIS,TAMILNADU PIN-643001 PH :04262-261699/9443603815.	KARUR 1037.## SRI SAKTHI AUTO CARE (2532), 3/291 COVAI ROAD,VADIVEL NAGAR L.N.S. POST,KARUR,(TAMIL NADU) PIN-639002 PH :04324-227289/984246585.	NAGAPATTINAM 1045.* MARUTI-TECH (1671), RAJATHI COMPLEX,OPP. TNB BIKARA,TIRUVARUR ROAD,NAGAPATTINAM PIN-611001 PH :04365-9842653718/9942409032.	PERUNDURA 1053.## PRIYAM AUTOMOBILES (3036), 139 KOVAI MAIN ROAD,PERUNDURA,(TAMIL NADU) PIN-638052 PH :04294-9842744944/9842756006.
GOBICHETTYPALAYAM 1028.## HI-TEC AUTO GARAGE (2426), 4/388-A BHARATHI DASAN NAGAR,ERODE MAIN ROAD,KULLAMPALAYAM P.O./ST VAIKKAL,GOBICHETTYPALAYAM PIN-638476 PH :04285-246636/9842447725.	KOVILPATTI 1038.## CLASSIC AUTOMOBILES (6037), NO.3/71,NELLAI MAIN ROAD,NH-71,MADURAI,BYE PASS ROAD, INAMANIYACHI,KOVILPATTI,TAMILNADU PIN-628502 PH :04639-9442501479/9442552000.	NAGARCOIL 1046.* SRI GANAPATHI MOTORS (1629), NO.12 JAWAHAR STREET,R.V. PURAM,NAGERCOIL,NAGERCOIL PIN-629001 PH :04652-233970/233980/9344695657.	RAJAPALAYAM 1055.## RAJA MOTORS (4128), 3 MADURAI,BYE-PASS ROAD,NEAR JANAKI RAM TEXTILES,RAJAPALAYAM PIN-626117 PH :04563-9976606021.
HOSUR 1029.## AUTO SCAN (2070), 58-B BANGALORE ROAD,HOSUR,(TAMIL NADU) PIN-635109 PH :0434-244371/9363344371.	NEYVELI 1047.## ARUNA MOTORS (1461), MARUTI SERVICE CENTRE,OPP. N.S.R. BUILDING,SALEM MAIN ROAD,NAMAKKAL PIN-637001 PH :04281-275761/9842775761.	RASIPURAM 1056.## ROYAL AUTO CARS (4052), 5/120 NH-7, SALEM MAIN ROAD,NEAR TSTC DEPOT, MUTHUKALIPATTI POST,RASIPURAM TALUK,NAMAKKAL DISTRICT PIN-637408 PH :04287-944323039.	RED HILLS

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1057.## UNIQUE CAR CARE (5868), NO.54,FIRST STREET,MANIKANDAPURAM,RED HILLS-THIRUVALLUR HIGHWAY,RED HILLS,TAMILNADU PIN-600062 PH :044-26373939/9841059295.	1066.* CLASSIS AUTOMOBILES (4355), 269/2,V.K.N NAGAR,PALAYAMKOTTAI ROAD,TIRUCHENDUR PIN-628215 PH :04639-246043/246043/9442246043.	BELONIA 1075.## JOY UDYOG (3977), KALINAGAR,BELONIA,SOUTH TRIPURA PIN-799155 PH :03823-9436799415/9774805210.	1085.## TRIBENI MOTORS (2539), 23 KANPUR ROAD,ALLAHABAD,(U.P.) PIN-211001 PH :0532-2624699.
SALEM 1058.## MEENATCHI AUTO (2940), 57 KALARAMPATTY MAIN ROAD,(NEAR DEVI THEATRE),SALEM,(T.N.) PIN-636015 PH :0427-9443201001/2254426.	TIRUNELVELI 1067.## FRIENDS INDIA AUTO CLINIC (5030), NO.16 D.BYE PASS ROAD,VANNARAPETAI,TIRUNELVELI,TAMIL NADU PIN-627003 PH :0462-2501238/9843006111.	DHARMANAGAR 1076.## RAJ AUTOMOBILES (2868), STATION ROAD,RAJABARI,DHARMANAGAR,TRIPURA (NORTH) PIN-799253 PH :03822-234670/9436477578.	ALMORA 1086.## AROMA AUTOMOBILES (3149), THE MALL,ALMORA,(UTTARANCHAL) PIN-263001 PH :05962-33081/33432.
1059.## NATSUN MOTORS (6029), NO.220,BANGALORE BYE PASS ROAD (NH-7),KODALAMPATTY, SALEM,DISTRICT-SALEM,TAMILNADU PIN-636010 PH :0427-9842704499/9942104477.	TIRUPUR 1068.## LAKSHMI MOTORZ (2461), 4/146 PALLADAM ROAD,OPP. LAKSHMI KALYANA MANDAPAM,TIRUPUR,(T.N.) PIN-641604 PH :0421-221595/2214799/9842233959.	UDAIPUR (WEST) 1077.## RAMKRISHNA MARUTI ENGINEERING (4865), RAJABAGH MOTOR STAND,UDAIPUR WEST,DISTRICT-TRIPURA SOUTH PIN-799120 PH :9436135422.	AMROHA 1087.## SUNNY MOTORS (2165), BUNORE ROAD,J.P. NAGAR,AMROHA,(U.P.) PIN-244221 PH :51111.
SANKAGIRI 1060.## TECH ZONE AUTO SERVICE (2640), 10/78 BHAVANI MAIN ROAD,(NEAR ERODE PIRIVU),SANKAGIRI SALEM DISTT. PIN-637303 PH :04283-244523/9842709103.	TRICHY 1069.* VYTHES MOBILE PARK (443), 8/6 TANJORE ROAD,THIRUCHIRAPALLI PIN-620008 PH :0431-2200716/2200718/9443152529.	UDAYPUR 1078.## SUR UDYOG (3963), TOWN FULKUMARI NO.1,BRAMHABARI, P O UDAIPUR COURT,UDAYPUR,TRIPURA SOUTH PIN-799001 PH :03821-9862276650.	AURAIYA 1088.## VINAYAK AUTOMOBILES (2842), OPP. NTPC COLONY IIND GATE,PHAPHUND ROAD,DIBIYAPUR,AURAIYA (U.P.) PIN-206244 PH :05683-283639.
SANKARANKOIL 1061.## RAJA MOTORS (4555), RALAPALAYAM ROAD,OPPOSITE TO LIC BUILDING SANKARANKOIL PIN-627756 PH :04633-9994409363.	UDAMALAPET 1070.* S.R.K. MOTORS (1456), C-109 GANDHI NAGAR,UDAMALAPET,COIMBATORE (DT.),TAMIL NADU PIN-642154 PH :04252-232805/229019/9843011520.	UTTAR PRADESH AGRA 1079.## GAYATRI MOTORS (4730), 101-102, SHASHI NAGAR,CHANDRAKALA-COMPLEX SIKANDRA BODLA ROAD,AGRA,(UTTAR PRADESH) PIN-262008 PH :9319129910.	AZAMGARH 1090.## BHAGIRATHI MOTORS (4674), SARFUDDINPUR,P.O. SADARA,ZAMGARH,UTTAR PRADESH PIN-276001 PH :05462-9450029647/243702.
SATHYAMANGALAM 1062.## CAR ZONE AUTO SERVICE (5762), NEAR RTO OFFICE-COIMBATORE MAIN ROAD,SATHYAMANGALAM,DISTRICT-EROD E,TAMILNADU PIN-638402 PH :04295-9842286801.	VELLORE 1071.* MARUTI AUTO SERVICE (2844), 106 (OLD NO.: 78),KATPADI ROAD,GANDHI NAGAR,VELLORE (T.N.) PIN-632006 PH :0416-2243422/2245222/9994832099/98430934 22.	1080.## RAJPUT MOTORS (5166), 44/320 B.MAUZA BODLA,AGRA,DISTRICT - AGRA,UTTAR PRADESH PIN-262207 PH :9319185751/9319108310.	BABUGARH 1091.* GURUNANAK AUTOMOBILES (5977), NH-24, NR. TOLL PLAZA, BABUGARH,VILL SIMROLI, GHAZIABAD,DISTRICT-GHAZIABAD,UTTAR PRADESH PIN-245101 PH :9971792397.
THANJAVUR 1063.## R K P MOTORS (5238), 121/7,THANJAVUR KUMBAKONAM,HIGHWAY PALLIAGRAHARAM,THANJAVUR,TAMILNADU PIN-613003 PH :04362-9976725555.	VILLUPURAM 1072.## RAGAVENDRA MOTORS (2361), 2/3 MADRAS TRUNK ROAD,VILLUPURAM,(TAMIL NADU) PIN-605602 PH :9244555860/864/862.	ALIGARH 1081.## KAPIL AUTOMOBILES (1344), OLD KHURJA BUS STAND,G.T. ROAD,ALIGARH(U.P.) PIN-202001 PH :9837007636.	BAGHPAT 1092.## KAUSHIK MOTORS (4473), DELHI ROAD,BAGHPAT,UTTAR PRADESH PIN-250609 PH :0121-9412410412, 9837800582, 9411263023.
THENI 1064.## SATHURAGIRI MOTOR WORKS (1650), 3-1-31 TO 36,CUMBUM ROAD,THENI,(TAMIL NADU) PIN-625531 PH :04546-264663/9047011678/9047033678.	VRIDDHACHALAM 1073.# VISHWA MARUTI CARE CENTER (5465), NO412,PERIYAR NAGAR (NEAR FIRE SERVICE STATION),VRIDDHACHALAM,DISTRICT - CUDDALORE,(TAMILNADU) PIN-606001 PH :04143-9842246092/238095.	1082.## KAR SCAN CENTRE (449), RAMGHAT ROAD,KVARSI,ALIGARH PIN-202002 PH :0571-992700113/3292217.	BALRAMPUR 1093.## D M AUTOMOBILES (3933), NEAR BCM, POST-SIRSIYA,GONDA ROAD,BALRAMPUR PIN-271201 PH :05263-9415071840/235762.
THENKASI 1065.## CARE ZONE (3766), 5/164(1) KUTHUKKAL VALASAI,MADURAI ROAD,TENKASI,(TAMIL NADU) PIN-627811 PH :04633-9842133134/280803.	TRIPURA AMBASSA 1074.## CHAKRABORTY MECHANICAL WORKSHOP (5351), NH-44, NEAR ZILLA PARISWAD OFFICE,AMBASSA,DISTRICT - DHALAI,TRIPURA PIN-799289 PH :9436136054.	1083.## ANSHUMAN AUTOMOBILES (4933), 353, NAINI BAZAR NAINI,DISTRICT ALLAHABAD,ALLAHABAD,UTTAR PRADESH PIN-211008 PH :0532-9335138119/2696474.	BANDA 1094.## CHAUDHARY TRACTORS (2249), STATION ROAD,BANDA,(U.P.) PIN-210001 PH :05192-224882/224202.
TIRUCHENDUR		1084.## KAY CEE AUTOMOBILES (2155), 72/60 L.B. SHASTRI MARG,ALLAHABAD PIN-211006 PH :0532-2420225/2420434.	BARAUT

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1095.## HIGH TECH ENGINEERS (4821), 216/5 SAHARANPUR ROAD,BARAUT PIN-250611 PH :01234-263327/94120547/983716887.	DEOBAND 1105.## PRACHI MOTORS (3361), ADJACENT TO CIVIL COURTS,G.T. ROAD,DEOBAND,DISTT. SAHARANPUR (U.P.) PIN-24754 PH :01336-22900/9359246585.	1114.# SHRI KRISHNA MOORS (5939), BYE PASS ROAD RAM GARH, GANGOH,DISTRICT-SAHARANPUR,UTTAR PRADESH PIN-247341 PH :9719471747.	1125.## M. MOTORS & SERVICE CENTRE (3371), CHAND BEHTALUCKNOW ROAD,HARDOI,(U.P.) PIN-241001 PH :05852-21734.
1096.## SIGNET AUTOMOBILES (4441), NEAR INDUSTRIAL POLICE CHOWKI,DELHI ROAD,BARAUT,DISTT BAGHPAT (U.P) PIN-250611 PH :01234-267164/9412831171/98411833140.	DEORIA 1106.## CLASSIC MOTORS (2971), D-13/14 INDUSTRIAL ESTATE,OPPOSITE RTO OFFICE,GORAKHPUR ROAD,DEORIA (U.P.) PIN-274001 PH :9415080981.	GHAZIABAD 1115.* D.N. AUTOLAND (272), E-4 MEERUT ROAD,INDUSTRIAL AREA,(NEAR OLD MEERUT CHUNGI),GHAZIABAD PIN-201001 PH :0120-6521037/2724316/9810140000.	1126.## TAYAL AUTOMOTIVES (4265), SOHRA KOTHI BAWAN CHUNGI,HARDOI PIN-241001 PH :05852-234314, 9415149951.
BAREILLY 1097.## SAVY MOTORS (4559), BALWANT MOTORS BUILDING,131 CIVIL LINES,NEAR DAINIK JAGRAN,BAREILLY (UTTAR PRADESH) PIN-243001 PH :0581-2420907/2420143.	DHAMPUR 1107.## AUTAR AUTOMOBILES (4846), NOORPUR ROAD,DHAMPUR,DISTRICT-BIJNOR,UTTAR PRADESH PIN-246761 PH :01344-220440, 230074, 941833140, 9897073113.	1116.* CHAWLA AUTOMOBILES (2643), 67 AMBEDKAR ROAD,OPP. NEHRU YUVA KENDRA,GHAZIABAD PIN-201003 PH :0120-2797021/9811720929/9810663366.	HATHRAS 1127.## RADHEY RADHEY AUTOMOBILES (4344), NEAR BUS STAND,AGRA ROAD,HATHRAS PIN-204101 PH :9897069159.
1098.## S P MOTORS (5746), 383, SURKHA CHAWNI, NAINITAL ROAD,BAREILLY,DISTRICT-BAREILLY,UTTAR PRADESH PIN-243001 PH :0581-0941274910/2412829.	FAIZABAD 1108.* S K MOTORS (4672), CHANDPUR HARBANS ALLAHABAD ROAD,NH-96,FAIZABAD,UTTAR PRADESH PIN-224001 PH :935981364/9335305129.	1117.* SHIVA MOTORS (3343), 17TH KM STONE,118-119 SHIVPURI,SECTOR-9 VIJAY NAGAR BYEPASS NH-24,GHAZIABAD (U.P.) PIN-201009 PH :2744400/3232590/9891464349.	JAGDISHPUR (U.P.) 1128.## SUPER AUTOMOBILES (3564), JAFARGANJ P.O.,INDUSTRIAL AREA,JAGDISHPUR,DISTT. SULTANPUR (U.P.) PIN-227817 PH :05361-291168/9415177882.
BIJNOR 1099.## SARDAR MOTORS (4671), DELHI HIGHWAY ROAD,4TH KM MILE STONE,BIJNOR,UTTAR PRADESH PIN-246701 PH :01342-9837265076/262410.	FARUKHABAD 1109.## SANDEEP MOTORS (4161), THANDI SADAK,OPP. JINTENDRA GAS GODOWN,FARUKHABAD,UTTAR PRADESH PIN-209625 PH :05692-228321/228205/9838840322-321.	1118.** KRISHNA AUTOMOBILES (5356), 101 LAL KUAN SHIV MANDIR,BULANDSHAHAR ROAD,DISTRICT - GHAZIABAD,UTTAR PRADESH PIN-201001 PH :9810311475/9999506820.	JAUNPUR 1129.## SADGURU MOTORS (5071), FAIBAGH (NEAR TOM OFFICE),UMARPUR JAUNPUR,JAUNPUR,UTTAR PRADESH PIN-222142 PH :9839318653.
BULANDSHAHR (U.P.) 1100.## DELHI AUTO ENGRS (1351), NEAR PANDIT PETROL PUMP,BHOOR,G.T.ROAD,BULANDSHAHR PIN-203001 PH :05732-234888/9359155333.	CHANDPUR (U.P.) 1110.## BHARTI AUTOMOBILES (1777), DHANORA ROAD,CHANDPUR,DISTT. BIJNOR,(U.P.) PIN-246725 PH :01345-221441/9837380551.	1119.## S P MOTORS (4973), HAPUR BYPASS ROAD,MEHRAULI,GHAZIABAD PIN-201001 PH :0120-9350936262/2824443.	JHANSI 1130.* A.B. MOTORS (6022), 4 KHATTERYANA,JHANSI PIN-273162 PH :0510-2471865.
CHITRAKOOT 1102.* SHYAM MOTORS (4367), BUS STAND,KARWI,CHITRAKOOT PIN-210205 PH :05198-236996, 235150, 9415143900.	FATEHPUR SIKRI 1111.## LAXMI MOTORS (5943), FATEHPUR SIKRI ROAD, KHEDA KORAI,FATEHPUR SIKRI,DISTRICT-AGRA,UTTAR PRADESH PIN-283110 PH :9837749949.	1120.* PANKAJ AUTOMOBILES (1370), C/O NEW DELHI MOTOR WORKS,BARAICH ROAD,GONDA PIN-271001 PH :05262-232812.	1131.## JALIM PAINTER (5661), 1051, NEAR ADINATH HOTEL, STATION ROAD,JHANSI,DISTRICT - JHANSI,UTTAR PRADESH PIN-284001 PH :9415113566.
DADRI 1103.## NATIONAL MOTOR AGENCY (5143), NOIDA ROAD,DADRI,DISTRICT - GAUTAMBUDH NAGAR,UTTAR PRADESH PIN-203207 PH :0120-9818486888/2667033.	FIROZABAD 1112.## GOVIND AUTOMOBILES (1739), OPP. IMPERIAL GLASS SHOWROOM,S.N. ROAD,FIROZABAD,(U.P.) PIN-283 203 PH :05612-244650.	1121.** AMAN MOTORS (3858), PORTER GANJ,LUCKNOW ROAD,GONDA PIN-271001 PH :05262-231506.	KANNAUJ 1132.## SARALA AUTO CARE (5854), G.T. ROAD, KANNAUJ,DISTRICT-KANNAUJ,UTTAR PRADESH PIN-209720 PH :9415167503.
DANKAUR 1104.## YASH MOTORS (5934), SIKANDRABAD ROAD, NEAR KISAN INTER COLLEGE,DANKAUR,DISTRICT - GAUTAM BUDH NAGAR,UTTAR PRADESH PIN-203201 PH :9410491590.	1113.** AMAN MOTORS (4366), OPP CAR CARE (INDIA),BYE PASS ROAD,FIROZABAD,UTTAR PRADESH PIN-283203 PH :05612-281546/9219400877.	HAPUR 1124.* SRASTHI MOTORS (3076), NEAR UNITED BANK OF INDIA,DELHI ROAD,HAPUR,(U.P.) PIN-245101 PH :950122-2305842/ 9412221608.	KANPUR 1133.## KANPUR AUTO CENTRE (2823), 14/142,CHUNNIGANJ,KANPUR PIN-206012 PH :0512-2533160.
** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs		* B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs	

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1137.** SUJIPA MOTORS (4337), 127/465,U-BLOCK,NIRALA NAGAR,KANPUR PIN-208014 PH :0512-2643146/ 2618156.	1146.## VIKRAM MOTORS (3729), LAMBHUA BAZAR,SULTANPUR (DIST.),UTTAR PRADESH PIN-222302 PH :05364-257380.	1158.** MVV MOTORS (5531), A/1/14, VIJAY KHAND, GOMTI NAGAR,LUCKNOW,DISTRICT - LUCKNOW,UTTAR PRADESH PIN-226010 PH :0522-3247776.	1169.** EXPERT CAR SCANNER (1174), 83 HILL STREET (KATH-KA-PUL),BEHIND ABU LANE,MEERUT CANTT.,(U.P.) PIN-245206 PH :0121-2644660/9412201195.
1138.** CHANDRA MOTORS (4458), 621/3 W-2 JUHI,BEHIND SACHAN GUEST HOUSE,KANPUR PIN-208014 PH :0512-3258159.	1147.## LONI SAMBHAV AUTOMOBILES (5168), 31,RURAL INDUSTRIAL ESTATE,ARYA NAGAR INDUSTRIAL AREA,MAIN DELHI SHAHANPUR HIGHWAY,UTTAR PRADESH PIN-201102 PH :9311690878.	1159.* THE GARAGE (5479), BEHIND NEW HANUMAN MANDIR, MADIR PARK,MAHANAGAR - LUCKNOW,DISTRICT - LUCKNOW,UTTAR PRADESH PIN-226017 PH :9236711634.	1170.## KRISHNA AUTOMOBILES (5573), PLOT NO D-10, SHRADHA PURI,KANKAR KHERA - MEERUT,DISTRICT - MEERUT,UTTAR PRADESH PIN-250001 PH :9927241738.
KHAIRABAD 1139.* BAIG MOTORS PVT LTD (4165), KHAIRABAD,LUCKNOW ROAD,SITAPUR,UTTAR PRADESH PIN-261001 PH :9307237710.	1148.## LUCKNOW BALAJI MOTORS (1336), 1 NEWAL KISHORE ROAD,LUCKNOW (U.P.) PIN-226001 PH :0522-3956801.	1160.** KAPOOR MOTORS (1751), PLOT NO.380,NEAR GUNGA BHARA SCHOOL,TILAK NAGAR,UTTAR PRADESH PIN-226004 PH :252704.	MIRzapur 1171.## PRABHAT MOTORS (4131), NH-7 REWA ROAD,CHANDAI PUR LAHKAMPUR,MIRzapur,(U.P.) PIN-231001 PH :05442-245859.
KHALILABAD 1140.## RATAN MOTORS (5645), RAILWAY STATION ROAD - KHALILABAD,DISTRICT - SANT KABIR NAGAR,UTTAR PRADESH PIN-272175 PH :9415257705.	1149.** KALYAN MOTORS (1161), GOVT. POLYTECHNIC CROSSING,FAIZABAD ROAD,GOMTI NAGAR,LUCKNOW PIN-226001 PH :0522-4049545-47.	1161.## ROYAL SERVICE STATION (2238), HAMIRPUR CHUNGHI,KANPUR ROAD,MAHOBIA,(U.P.) PIN-210427 PH :05281-256194/252194.	MOHANLAL QANJ 1172.** GURU TEG BAHADUR AUTO ENTERPRISES (4072), 4 SENANI VIHAR,RAI BAREILLY ROAD,MOHANLAL GANJ,LUCKNOW (U.P.) PIN-226001 PH :0522-2442061.
KHATAULI 1141.## EAGLE MOTORS (5142), OPPOSITE EW ROADWAYS,G.T. ROAD, NH-58 KHATAULI,DISTRICT - MUZAFFARNAGAR,UTTAR PRADESH PIN-251201 PH :01366-9997039786/9997223327/273501.	1150.** RELIANCE MOTORS CARE (1236), 7-B/1 PRIME PALACE,FAIZABAD ROAD,INDIRA NAGAR,LUCKNOW PIN-226016 PH :0522-2340366.	1162.# JATIN MOTORS (5540), GANESH MILL COLONY, RADHA RAMAN ROAD,MAINPURI,DISTRICT-MAINPURI,UTTA R PRADESH PIN-205001 PH :9359843400.	MORADABAD 1173.## ASHISH AUTOMOBILES (1477), KANTH ROAD,MORADABAD,MORADABAD PIN-244001 PH :0591-6533559.
KHEKRA 1142.** KAILASAH MOTORS (5767), OPP TEHSIL DELHI BAGHPAT ROAD,KHEKRA,DISTRICT-BAGHPAT,UTTAR PRADESH PIN-201101 PH :0121-2232903.	1151.** GUD'S CAR CARE (2538), MAIN ROAD,NISHATGANJ,LUCKNOW PIN-226 006 PH :0522-2330786/87.	1163.## BABU MOTORS (5740), MACHALISHAHAR ROAD,NEAR POST OFFICE,MARIAHU,DISTRICT - JAUNPUR,UTTAR PRADESH PIN-222161 PH :9919263663.	MUZAFFARNAGAR 1174.## SIDDIQUI MOTOR WORKS (1339), ANSARI ROAD,MUZAFFARNAGAR,(U.P.) PIN-251001 PH :031-2442626/9412476786.
KOSIKALAN 1143.** ADITYA MOTORS (1940), IOC PUMP,NATIONAL HIGHWAY,KOSIKALAN,(U.P.) PIN-281001 PH :05662-232657/9837050778.	1152.** B.K. MOTORS (2537), KALYANPUR,RING ROAD,OPP. CARRIER CONVENT BOARD,LUCKNOW PIN-226015 PH :0522-2760111.	1164.## GIRIRAJ CAR CARE (5624), BIMAL ENGG COMPLEX,BAD,MATHURA PIN-281006 PH :065-2430821.	NAJIBABAD 1175.## SETHI MOTORS (4557), C/O SETHI BOARD INDUSTRIES LIMITED,OPP. HINDUSTAN COCO-COLA BOTTLING PLANT,NAGINA ROAD, NAJIBABAD,DISTT. Bijnor (UTTAR PRADESH) PIN-246763 PH :01341-220087, 9837349688, 9837590800.
LAKHIMPUR KHERI 1144.** AJMANI TRACTORS (4143), NIGHASAN ROAD,LAKHIMPUR KHERI,UTTER PRADESH PIN-242001 PH :05872-266340.	1153.* S.K. MOTORS (2449), 8/881 VIKAS NAGAR,PICNIC SPOT ROAD,KHURAM NAGAR,LUCKNOW PIN-226013 PH :0522-2324809.	1165.* SIYARAM MOTORS (1666), JAYSINGHPURA,NEAR BIRLA MANDIR,MATHURA,(U.P.) PIN-281003 PH :0565-2530210.	Noida 1176.## AUTO POINT (2263), C-107 SECTOR-2,NOIDA,(U.P.) PIN-201301 PH :0120-9810061814/9910397875.
LALITPUR 1145.## VARDHMAN MOTORS (1073), SAGAR ROAD,LALITPUR,(U.P.) PIN-284403 PH :05176-277996.	1154.* V.S. MOTORS (4745), RAMADHIN SINGH INTER COLLEGE CAMPUS,BABU GANJ,LUCKNOW,UTTAR PRADESH PIN-226007 PH :0522-9839522310/2788564.	1166.** NAND SERVICE STATION (3578), GOPAL PURA VILLAGE,REFINDERY TOWNSHIP,NH-2,MATHURA PIN-281006 PH :065-5416912.	1177.* CITY MOTORS (3876), C-2 SECTOR 63,NOIDA PIN-201307 PH :2401772/9810427752.
LAMBHUA BAZAR 1146.## SARAN AUTOMOBILES LTD. (1078), DELHI ROAD,RITHANI,MEERUT PIN-250103 PH :0121-2441986/3253074/93594506555.	1155.* KRISHNA MOTORS (5026), BALAGANJ HARDOI ROAD,CHOWK LUCKNOW,DISTRICT LUCKNOW,UTTAR PRADESH PIN-226003 PH :9839177777.	1167.## SHREE GOPAL AUTOMOBILES (5664), DELHI BYE PASS ROAD, NEAR GOKUL RESTAURANT,MATHURA,DISTRICT - MATHURA,UTTAR PRADESH PIN-281001 PH :0562-9760026760.	1178.** RAHUL MOTORS (4662), A-59 SECTOR-80,PHASE-II,NOIDA,UTTAR PRADESH PIN-201303 PH :0120-9810572900/9312271259/3963138.
	1156.** KAPOOR MOTORS (5044), 555/GA/50,BARA BIRWA, KANPUR ROAD,-ALAMBAGH LUCKNOW,DISTRICT - LUCKNOW,UTTAR PRADESH PIN-226005 PH :9415080492.	1168.## GALAXY MOTORS (5274), KASHANA SITAPUR ROAD, NEAR SHIAP G COLLEG - LUCKNOW,DISTRICT - LUCKNOW,UTTAR PRADESH PIN-226001 PH :9305567878.	1179.** RAJESH & ANIL MOTOR CO (5330), B-110. SECTOR 2,NOIDA,DISTRICT - GAUTAM BUDH NAGAR,UTTAR PRADESH PIN-201304 PH :0120-9818578786/4211266/2539555.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1180.## NANDA MOTORS (5733),
B-180,PHASE-2,NOIDA,DISTRICT-NOIDA,UTT
AR PRADESH PIN-201305
PH :9566003839.

ODRA

1181.## APPRECIATE SERVICES (4678), BY PASS
ROAD,ROBERTS GANJ,DISTRICT -
SONEBHADRA UTTAR PRADESH PIN-231216
PH :05445-267266/9415323710.

PHULPUR

1182.## BHARAT MOTORS (6039), C/O
KAUSHLENDRA PANDEY,
PUREMABHATI,G.PHAIPUR
ROAD,PHULPUR,DISTRICT-ALLAHABAD,UTT
AR PRADESH PIN-244601
PH :09554495877.

PILIBHIT

1183.* UNIVERSAL MARUTI SERVICE STATION
(4365),BYE PASS ROAD,PILIBHIT,UTTAR
PRADESH PIN-262001
PH :05882-255499/ 9412313499.

PILKHUWA

1184.* SHREE BANKAY BIHARI MOTORS PVT. LTD.
(6025), NH-24, DELHI-GARH
ROAD,PILKHUWA,DISTRICT-GHAZIABAD,UT
TAR PRADESH PIN-245307
PH :9045548101.

PRATAPGARH

1185.** SHREE MOTORS (4146), ALLAHABAD
FAIZABAD ROAD,NH-96,CHILBLA
RANJEETPUR,PRATAPGARH (UTTAR
PRADESH) PIN-230001
PH :05342-236057/ 9415229575.

RAI-BARELI

1186.** STANDARD GARAGE (4429), MANIKA
CENEMA ROAD,NEAR INSPECTION
HOUSE,RAI BARELLI PIN-229001
PH :0535-2701320.

RAMNAGAR

1187.## MAHI AUTOMOBILES (5532), SHANKARPUR
RAMNAGAR,DISTRICT -
NAINTAL,UTTRAKHAND PIN-244715
PH :05947-254740.

RAMPUR (U.P.)

1188.## FIZZA MOTORS (2241), NEAR AMBEDKAR
PARK,CIVIL LINES,RAMPUR (U.P.)
PIN-249401
PH :0595-2355009.

RATH

1189.## MARUTI POINT (4228), ROOP NAGAR,
BUDHOLIYANA,NEAR BUS STAND, ORAI
ROAD,RATH,DIST. HAMIRPUR (U.P.)
PIN-210431
PH :05280-202427/9415331721.

RENUKUT

1190.## AMBIKA MOTORS (1050), PATEL
NAGAR,MURDHAWA,RENUKUT,SONBHADR
A (U.P.) PIN-231217
PH :05446-252238.

RIHAND NAGAR

1191.## OUDH MOTORS (4421), RIHAND
NAGAR,SONEBHADRA,(U.P.) PIN-231223
PH :05446-232321/ 9415230865.

ROBERTSGANJ

1192.* KAMAKHYA AUTOMOBILES (4163), PIPRI
ROAD,ROBERTSGANJ,SONEBHADRA (U.P.)
PIN-231216
PH :05444-233022/9415342706.

SADABAD

1193.## ASHU SERVICE CENTRE (5849), AGRA BYE
PASS
ROAD,SADABAD,DISTRICT-HATHRAS,UTTAR
PRADESH PIN-281306
PH :09759594110.

SAHARANPUR

1194.## GANESH CAR SERVICES (1871), OPP.
REMOUNT DEPOT GATE,DEHRADUN
ROAD,SAHARANPUR PIN-247001
PH :0132-26626711/2613997/9358306804.

SAHIBABAD

1195.## SANSA MOTORS PVT. LTD. (2061), 11/27
SECTOR-3,RAJINDER
NAGAR,SAHIBABAD,DISTT. GHAZIABAD
PIN-201005
PH :0120-4109879/4109880.

1196.## POOJA MOTORS (3562), TEELA
MORE,SHAHIBAJPUR,LONI,DISTT.
GHAZIABAD (U.P.) PIN-201010
PH :0120-9810986463.

1197.## MEHAR AUTOMOBILES (3576), 116/1 NEAR
GDA MARKET,G.T. ROAD,KATORI MILL
MOHAN NAGAR,GHAZIABAD PIN-201007
PH :9711201557/9871832662

1198.## MOTOR MAGIC AUTO ZONE (4462), 4/29-A
SITE-IV,INDUSTRIAL
AREA,SAHIBABAD,DISTT. GHAZIABAD
PIN-201007
PH :0120-4163108/4163109.

1199.** PANDIT AUTOMOBILES (4647), 3/1/1 SITE-IV,
INDUSTRIAL AREA,SAHIBABAD,OPP.
KAUSHambi, GHAZIABAD,(UTTAR
PRADESH) PIN-201005
PH :0120-2776808/ 4114808.

SANDILA

1200.## SUBHAM SERVICE CENTRE (4042), NEAR
NEHA KOTHI ROAD,SANDILA,HARDOI
PIN-241204
PH :05854-270443.

SHAHJAHANPUR

1201.## SUPER AUTO (3135), OLD DIST. HOSPITAL
ROAD,SHAHJAHANPUR (U.P.) PIN-242001
PH :05842-223545.

SHAMILI

1202.## ROYAL MOTORS (5277), PANIPAT KARANA
ROAD,SHAMILI,SHAMILI,UTTAR PRADESH
PIN-247776
PH :9837138064/61.

SHIKOHABAD

1203.## KUMAR MOTORS (5575), SUBHASH TIRAH,A
GRA GATE - SIKHOHABAD,DISTRICT -
FEROZABAD UTTAR PRADESH PIN-205135
PH :9411937033.

SIDDHARTH NAGAR

1204.## MARUTI CARE CENTRE (2736), OPP.
SIDDHARTH SCHOOL,AZAD
NAGAR,SIDDHARTH NAGAR,(U.P.)
PIN-272207
PH :05544-22090.

SIKANDRABAD

1205.## NALIN AUTOS (1725), G.T.
ROAD,SIKANDRABAD,DISTT.
BULANDSHAHAR,(U.P.) PIN-203205
PH :01735-222802/9412227155.

SIRSAGANJ

1206.## SATGURU MOTORS (3739), BYE PASS
KAURIA ROAD,SIRSAGANJ DISTT.
FIROZABAD,ETAWAH-AGRA
ROAD,SIRSAGANJ (U.P.) PIN-205130
PH :05676-22563.

SONEBHADRA

1207.## OUDH SERVICE STATION (2925), SHAKTI
NAGAR,SONEBHADRA PIN-231222
PH :05446-232321.

SULTANPUR

1208.## HINDUSTAN AUTO GARAGE (1360),
BARHAYA BEER RD.,(ADJ.BUS
STAND),SULTANPUR (U.P.) PIN-228001
PH :05362-222838.

VARANASI

1209.** MISHRA ENGINEERS (4957), S-4/68,NAI
BASTI,PAHARIA,VARANASI,UTTAR
PRADESH PIN-221002
PH :0542-9415301483.

UTTARAKHAND

BAZPUR

1210.## TARAI AUTOMOBILE ENGG WORKS (4459),
GURUTEG BAHDUR ROAD,U.S.
NAGAR,BAZPUR,UTTARANCHAL PIN-262401
PH :05949-281342/ 9412945672.

BHAGESHWAR

1211.## SHREE ISHT DEV AUTOMOBILES (4570),
GARUR ROAD,MOTA SIMAL,DIST.
BAGESHWAR,UTTARANCHAL PIN-263642
PH :05963-220699/ 220149/ 9412094543.

DEHRADUN

1212.## ASHIRWAD MOTORS (5144), CANAL
ROAD,NEAR BALLUPUR
CHOWK,DEHRADUN,UTTARANCHAL
PIN-248001
PH :0133-6454745/ 9997232599.

1213.## KRIPALESHWARI MOTORS (4475),
HARIDWAR ROAD,NEAR LIC
BUILDING,DEHRADUN,UTTARANCHAL
PIN-248001
PH :0135-2671712/ 9412963384.

1214.* SHREE RAM AUTOMOBILES (5066), NEAR
TEHSIL,CHAKROTA ROAD,VIKAS NAGAR-
DEHRADUN,UTTARANCHAL PIN-248001
PH :01360-9897731200/253601.

1215.## UNIVERSAL AUTOMOBILES (5574),
F-107,UPSIDC INDUSTRIAL AREA,SELA
QUI,DEHRADUN,DISTRICT -
DEHRADUN,UTTARAKHAND PIN-248011
PH :0315-992733434.

1216.## HANS LAKHRA MOTORS (5032), JOGI
WALA RING ROAD,NATHAPUR
APPARTMT,NEAR NEHRU GRAM POST
OFFC,MASSOORI BYEPASS,DEHRADUN
PIN-248001
PH :0133-9897456677/678844/9412933332.

HALDWANI

1217.* HARYAL SERVICE STATION (5340), BAREILY
ROAD, GUJALI -
TALLI HALDWANI,DISTRICT -
NAINITAL,UTTARAKHAND PIN-263139
PH :9997200227.

1218.## EXCEL MOTORS & ENGG. WORKS (3827),
RAMPUR ROAD,NEAR STM FOREST
HOSPITAL,HALDWANI,NAINITAL PIN-263136
PH :05946-235384.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

HARIDWAR	1219.## PREET MOTORS (5561), SHRI NATH NAGAR,RAILWAY ROAD, JAWALPUR - HARDWAR,DISTRICT - HARDWAR,UTTARANCHAL PIN-249407 PH :01334-250094/9412022430.	1227.## BHAGWATI SERVICE CENTER (4472), SECTOR-8E/537,NEAR STADIUM, BARURI,NEW TEHRI,GARWAL (UTTRANCHAL) PIN-224901 PH :01376-232341/9412394776/9759282913.	RUDRAPUR	1237.** CORUS MOTORS (5059), D1 D2:20/1, NANITAL ROAD,DISTRICT - U.S. NAGAR,UTTARAKHAND PIN-263153 PH :05944-9927500007/241310.	1245.## AGARWALLA AUTO SERVICE (3122), 181 BURNPUR ROAD,P.O. BURNPUR,DT. BURDWAN,(WEST BENGAL) PIN- 713 325 PH :0341-2255300/9832123211.
KANKHAL	1220.## HIGHWAY MOTORS (4261), NEAR SINGH DWAR CHOWK,ROORKEE-HARDWAR BY PASS ROAD,POST OFFICE, GURUKUL KANGRI,KANKHAL, DISTT HARDWAR PIN-380052 PH :01334-246599, 243125, 9837039946,9412072889.	1228.## KRISHNA MOTORS (5957), SHRINAGAR ROAD, NEAR KARGIL SHAHEED PETROL,PUMP, PAURI,DISTRICT-PAURI GARHWAL,UTTRANCHAL PIN-246001 PH :01368-222677.	PITHORAGARH	1238.** BALAJI SERVICE CENTRE (1335), HALDWANI ROAD,RUDRAPUR (NAINITAL),(U.P) PIN-248197 PH :05944-243385.	BAHRAMPUR
KASHIPUR	1221.## KRISHNA AUTOMOBILES (4824), MORADABAD ROAD,KASHIPUR PIN-244713 PH :05947-276079.	1229.## MAHAKALI MOTORS (4142), DHARCHULA ROAD,RAI BRIDGE,PITHORAGARH,UTTRANCHAL PIN-262501 PH :05964-9412168976/9897922203.	1239.## PINDER AUTOMOBILES (5527), PLOT # C6-C9,INDUSTRIAL AREA,NEAR KAHNAPRAYAG - SIMLU,UTTRANCHAL PIN-251001 PH :01363-9412977249/9837424700/247412/24755 4.	1246.## NARAYAN BUS SERVICE (656), 17 RABINDRA THAKUR ROAD,P.O. BAHRAMPUR (WEST BENGAL) PIN-742101 PH :03482-224516/9732628065.	
KICHHA	1222.## OM MOTORS (4329), NH-74 KASHIPUR MORADABAD HIGHWAY,(KHASRA NO 1343),KASHIPUR,DIST. UDAM SINGH NAGAR (UTTRAKHAND) PIN-244713 PH :05947-273944/ 9837719072.	1230.## CAR CARE CENTER (4371), CANT ROAD,PITHORAGARH,UTTRANCHAL PIN-262501 PH :05964-228388/941248288.	SIMLI	1247.* MARUTI CARE (3674), NH-34 UTTARPARA MORE,P.O. RADHARGHAT,BERHAMPORE,MURSHIDABA D (WEST BENGAL) PIN-742187 PH :03482-226426/9732444000/9434394040.	
KOTDWARA	1223.## SHREE SHYAM JI AUTO SERVICE CENTRE (5648), BAREILY ROAD, KICHHA,DISTRICT-UDHAM SINGH NAGAR,UTTRAKHAND PIN-263148 PH :05944-265033/9837033377.	1231.## LATIF MOTOR WORKS (3269), SADAR BAZAR,GANDHI CHOWK,RANIKHET,(UTTRANCHAL) PIN-263645 PH :05966-220225.	RANIKHET	1248.## GHOSH AUTOMOBILES (2644), NARAYANPUR,BALURGHAT,DAKSHIN DINAJPUR PIN-733 101 PH :03522-255411, 9434963493/9474141384.	
LAKSAR	1224.## BHATT MOTORS (1775), NAJIBABAD ROAD,KOTDWARA,(GARHWAL),UTTRANCHAL AL PIN-246149 PH :01382-225553/9412081333.	1232.* RAKESH AUTOMOBILE ENGINEERS (1464), OPP. BHARAT MANDIR INTER COLLEGE,HARDWAR ROAD,RISHIKESH PIN-249201 PH :0135-2430918/2431918/9412051655.	RISHIKESH	1249.## SOUMYA MOTORS (4272), CHAKRATA ROAD,BEHIND STATE BANK OF INDIA,VIKASNAGAR,DISTT. DEHRADUN (U.A) PIN-248198 PH :01360-252951/9412382490/9319799470.	
LOHRIASAL MALLA	1225.# SHIV AUTOMOBILES (5560), 110/1/3 BALAWALI ROAD,LAKSAR,DISTRICT - HARIDWAR,UTTARANCHAL PIN-247663 PH :9719054422.	1233.## GARHWAL GASOLINE STATION (3639), H.P. PETROL PUMP LAXMAN JHULA ROAD,RISHIKESH PIN-249 201 PH :0135-430351,436626,432617.	ROORKEE	1250.## SAMANTA AUTOMOBILES PVT. LTD. (268), CHIRIMORE,BARRACKPORE,NORTH -24 PARGANAS,WEST BENGAL PIN-743101 PH :033-25120820/25420067/5600067/5600820/ 9831823079.	
NEW TEHRI	1226.## ANJANI SERVICE CENTRE (5552), NEAR BLOCK OFFICE, KALADHUNGJI ROAD,LOHRIASALMALLA DISTRICT - NAINITAL,UTTRAKHAND PIN-263139 PH :9837098699.	1234.## DUM DUM ENGG. WORKS (134), 72 CIVIL LINES,NEW HARDWAR ROAD,ROORKEE (U.P) PIN-247667 PH :01332-272903/9412070962.	ROORKEE	1251.## SPEED AUTOMOBILE (5445), BARRACKPORE-BARASAT ROAD,SEWLI, BARRACKORE,DISTRICT - 24-PARGANAS (NORTH),(WEST BENGAL) PIN-700121 PH :033-9836561219.	
		1235.## ROORKEE AUTO SCANNERS (2675), 786 WEST AMBER TALAB,RAM NAGAR CHOWK,ROORKEE PIN-247667 PH :01332-262467/9837032367.	RUDRAPRAYAG	1252.## PRATAP ENGINEERING WORKS (5246), NH-31, DEMIDHA,PO-BIRPARA,DISTRICT JALPAIGURI,WEST BENGAL PIN-735204 PH :03563-9434216975/9468023768/266486.	
		1236.## RAJESHWARI AUTOMOBILES (5669), BADRINATH ROAD, GHOLTI,RUDRAPRAYAG,DISTRICT - RUDRAPRAYAG,UTTRANCHAL PIN-246141 PH :9997771107.	RUDRAPRAYAG	1253.## BASUNDHARA AUTOMOBILES (4241), GOAL PARA,BOLPUR SURI ROAD,BOLPUR PIN-731204 PH :03463-254644, 9832132851.	
				CHINSURAH	

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1254.## UNIVERSAL AUTO REMEDY (648), C/O MR. BN CHATTERJEE,BHAGABOTI DANGA KHADINA MORE,PO CHINSURAH,HOOGHLY PIN-712102 PH : 033-9748457883/26860303/26860090.	1262.## GREWAL AUTO SERVICE (1570), 97/1 FORESHORE ROAD,SHIBPUR,HOWRAH PIN-711102 PH : 9831017806/26787250/26787024.	1272.## DIAL AUTOMOBILES PVT. LTD. (643), 162 A PARY MOHAN RAY ROAD,CALCUTTA,(W.B) PIN-700027 PH : 033-24484393/9830552491.	1285.## CLASSIC ENGINEERING WORKS (3171), C/O CLASSIC ENGINEERING WORKS,620 D H ROAD BEHALA INDUSTRIAL ESTATE,PLOT NO.G-1,KOLKATA PIN-700034 PH : 033-9831773168/24477502
COOCH BEHAR 1255.## PROVA AUTOMOBILES (2846), CHAKCHAKA CHECK POST,NH-31,COOCH BEHAR,(WEST BENGAL) PIN-736101 PH : 03582-258082/236204/9434174309/9434174309. 9. 9.	1263.## WHEEL WORKS (5063), GIP COLONY JAGACHA,KONA EXPRESS WAY,HOWRAH,DISTRICT - HOWRAH,WEST BENGAL PIN-711112 PH : 033-9830044007/26575467.	1273.## MOTORIKRAFT (635), 502 REMOUNT ROAD,CALCUTTA,(W.B) PIN-700027 PH : 033-9830330090/2490737.	1286.## FORTUNE AUTO CARE (3167), 16 G/6 KHANPUR ROAD,KOLKATA,(W.B) PIN-700047 PH : 033-24214439, 9831754527, 9831737980.
DHALKOLA 1256.## ZAINAB MOTORS (5738), NEAR NEW BUS STAND, NH-34,DALKHOLA,NORTH DINAJPUR,WEST BENGAL PIN-73201 PH : 900254077.	1264.## SHAKTI TRADING CO. (770), M.G. ROAD,JAGAON PIN-736162 PH : 0356-263241, 954754065, 9233780027.	1274.## RUSSA ROAD SERVICE STATION (622), 30 SP MUKERJEE ROAD,CALCUTTA,(W.B) PIN-700025 PH : 033-9748757842/24533384/24551146.	1287.## SUNNY AUTOMOBILE (3166), 105H/18 BIDHAN NAGAR ROAD,KOLKATA PIN-700067 PH : 033-9830392097/23562693.
DINHATA 1257.## DINHATA AUTOMOBILES (5739), BALRAMPUR ROAD PO/P: DINHATA,DISTRICT-COOCHBEHAR,WEST BENGAL PIN-736135 PH : 03581-259087/ 9333937795 / 9434256518.	1265.## AUTOSTEL (646), SAKAOJHORA,P.O. GAIRKATA,DIST. JALPAIGURI,(W.B) PIN-735212 PH : 033-23116/9934111868.	1275.## YOUNG AUTOMOBILES (637), 502 HAZARA ROAD,CALCUTTA,(W.B) PIN-700019 PH : 033-24753944/9433552047/9830250904.	1288.## ULTRA CRAFT (4643), 103/B,RAJA DINENDRA STREET,KOLKATA,WEST BENGAL PIN-700006 PH : 033-9830741255/23525006/5161.
DURGAPUR 1258.## THE QUICKEST (2879), BANS KOPA,(NEAR PARADISE INN),G.T. ROAD,DURGAPUR PIN-713212 PH : 0343-252005/9832165126/9749865126.	1266.## S.S. AUTOMOBILES (3664), ASSAM MORE,JALPAIGURI,WEST BENGAL PIN-735101 PH : 03361-943430252/256565.	1276.* DELUXE SERVICE STATION (672), P-256 257 CIT ROAD,CALCUTTA PIN-700010 PH : 033-23710012/23630151/9830062952/9830062 979.	1289.## ROYAL CALCUTTA AUTOMOBILES (4651), 68 BROAD STREET,KOLKATA PIN-700019 PH : 033-9831299851/ 983250911/22892829.
FARAKKA 1259.## SPEED WHEEL SERVICE CENTRE (1056), TTS HCC CONCERN,FARAKKA,P.O. NABARUN,DISTT. MURSHIDABAD (W.B) PIN-742236 PH : 03485-252691/252269/9434101917/943475226 9. 9.	1267.## GOPAL AUTO SERVICE CENTRE (3373), B.K. EXPRESSWAY,BUDHHA PARK,KALYANI,NADIA (WEST BENGAL) PIN-741235 PH : 033-25822481/9831010481.	1277.** NORTH POINT MOTORS PVT. LTD. (344), DUTTO BAGAN - 3D/1 BUS TERMINUS,64/2B BELGACHIA ROAD,CALCUTTA PIN-700037 PH : 033-983022069/25560501/25573826.	1290.## TECHNO AUTO WORKS (4669), 619, RAJA RAM MOHAN ROY ROAD,BIREN ROY ROAD EAST,BEHALA,KOLKATA PIN-700008 PH : 033-9830111258/24068823/9939.
HABRA 1260.## EVERGREEN AUTOMOBILES & ENGINEERING WORKS (4666), BIRAJA JOYPUL,HABRA,NH-35,WEST BENGAL PIN-743234 PH : 03216-269852/9333737566/269852/983048523 2/ 9332906057. PH : 03224-252152/645146/9434021405.	1268.## KRISHNA ENGINEERING WORKS (5270), PLOT NO.199, KANTABELE,O.N.G.C ROAD,KALYANI EXPRESS ROAD, PO: GHORAGACHIA,PS - KALYANI,WEST BENGAL PIN-741235 PH : 9339964302/937823965.	1278.## ADAMS MOTOR WORKS (465), 61 A SHAKESPEARE SARANI,CALCUTTA,CALCUTTA PIN-700017 PH : 033-9831020988/22876402/22807414.	1291.## ZENITH (5529), BOHLA NATH SARANI,CHINAR PARK,RAJARHAT, KOLKATA-700157,DISTRICT - KOLKATA,WEST BENGAL PIN-700059 PH : 033-983047175/9433904110/943 3951707/56689931.
HALDIA 1261.## S.D. REPAIRING CENTRE (2168), I.O.C. GATE NO.1,P.O. HALDIA OIL REFINERY,HALDIA,DISTT. MIDNAPORE (W.B) PIN-721606 PH : 03224-252152/645146/9434021405.	1269.## AUTO KRAFT (620), F 1/G-3,RIC IND. ESTATE UPEN BANERJEE ROAD,PARNASREE,CALCUTTA (W.B) PIN-700060 PH : 033-24925747/2492599/24078939/98303309 0.	1279.* MARUTI LINK (1633), CK-12 SECTOR 2,SALT LAKE,CALCUTTA PIN-700091 PH : 033-2356921/23590675/9433004520/9831180 421.	1292.## ZOVAN AUTOMOBILES PVT. LTD (5578), 42/A/B,RAJA SANTOSH ROAD,KOLKATA,DISTRICT - KOLKATA,WEST BENGAL PIN-700027 PH : 033-24792490/24498004/9874795704.
KOLKATA 1270.* BHAWANIPUR AUTO CENTRE (628), 49 S.P. MUKHERJEE ROAD,CALCUTTA,(W.B) PIN-700 026 PH : 033-24753130/24766011/9831783130.	1271.## CAMAC (621), 2/E CAMAC STREET,CALCUTTA,(W.B) PIN-700016 PH : 033-9831093716/22296781.	1280.** R.S. SERVICE CENTRE (1948), 1/2 MAHENDRE ROY LANE,CALCUTTA,CALCUTTA PIN-700046 PH : 033-9831036017/9930992685/65293726.	1293.* RAJ AUTO SERVICE (5338), 35,CANAL EAST ROAD,KOLKATA,WEST BENGAL PIN-700011 PH : 033-9831103901/23542996.
MADHYAMGRAM 1294.## TARA MA AUTOMOBILES (1947), BATHANGLA,KRISHNA NAGAR,DISTT. NADIA (W.B) PIN-741101 PH : 03472-2722371/652357/9431054765.	1295.## HIGHWAY SERVICE CENTRE (445), ASHA DEEP, NH-34,KRISHNANAGAR,NADIA,WEST BENGAL PIN-741101 PH : 03472-9434165494/9831186730.		
1296.* PAUL AUTOMOBILES (671), JESSORE ROAD,MADHYAMGRAM,DOHARIYA PO GANGANAGAR,DISTT 24 PGS NORTH PIN-700129 PH : 033-9830239001/69904062/28261051.			

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1297.#	J. G BEHAL AUTO (4653), DOLTALA,GANGANAGAR,MADHYAMGRAM,K OLKATA (WEST BENGAL) PIN-700129 PH :033-9831094430/25268294/64511516.	1306.**	CAR CARE (1950), B.T. ROAD,SODEPUR,P.O.: SUKCHAR,24 PARGANAS (NORTH) PIN-700115 PH :033-25830783/25832786/25635800/983004917 7.
MALDA			
1298.##	ABHISEK AUTO CENTRE (1976), N.H.34,NEAR ST. XAVIER SCHOOL,P.O.: MOKDUMPUR,DISTT. MALDA (W.B.) PIN-723101 PH :03512-9434065360/253987.	1307.*	MARUTI AUTO CENTRE (2167), 85/18 G.T. ROAD (WEST),PO: MULLIKPARA,SRIRAMPUR,HOOGLY (W.B.) PIN-712203 PH :033-983129543/ 9331884559/26225634.
MIDNAPORE			
1299.#	CHATTERJEE AUTOMOBILE (4960), INDUSTRIAL GROWTH AREA,KHASJANGAL (NEAR KERANCHOTI),MIDNAPORE,DISTRICT-PAC HIM MIDNAPORE PIN-721101 PH :9434043558.	1308.##	PANCHANATH AUTOMOBILES (4456), BROJARGRAM BARABAGAN,BAKRESWAR PATHARCHAPURI HIGHWAY MORE,SURI,WEST BENGAL PIN-731101 PH :03462-9831823079/25920182.
Narendrapur			
1300.##	A.M. AUTOMOBILES (3175), KAMALGAZI,NARENDPUR,KOLKATA,(WE ST BENGAL) PIN-700103 PH :033-9836038971/2477 3402.	1309.##	APSARA SERVICE STATION (3374), NEAR BANITALA CHECKPOST,ON NH-6,ULUBERIA,(W.B.) PIN-711316 PH :033-9836084524/26610656.
PURulia			
1301.##	BANERJEE AUTO SERVICE (640), S.P.BANERJEE ANALBILA VILLA,RANCHI ROAD,PURULIA,(W.B) PIN-723101 PH :03252-9434656942/223228.	1302.##	AUTO WHEEL (4427), UMARPUR, NH-34,GHORSHALA,RAGHUNATH GANJ,MURSHIDABAD (WEST BENGAL) PIN-742225 PH :03486-9434083866/267281.
Raghunathganj			
1303.##	L. K. MOTORS (3477), NH 2 BYPASS,POINT (CHOWRANGI),RUPNARAYANPUR (CHALBALPUR),BURDWAN PIN-713343 PH :0341-2513800/9434107787.	1304.#	BHAWANI MOTOR GARAGE (4844), VIDYASAGAR PALLY,NEAR RISHI BHAWAN, BURDWAN ROAD,SILIGURI,WEST BENGAL PIN-734405 PH :0358-9434152177/ 9434376860/2500418.
1305.#	MUM AUTO WORKS (4835), NEAR DELHI PUBLIC SCHOOL, PANCHANA (DAGAPUR),SILIGURI,WEST BENGAL PIN-734003 PH :9832068537.	1305.##	MUM AUTO WORKS (4835), NEAR DELHI PUBLIC SCHOOL, PANCHANA (DAGAPUR),SILIGURI,WEST BENGAL PIN-734003 PH :9832068537.
Sodepur			

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs
 ## C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs
 # D-Category Mass : Free Service & Minor repairs

MEMO

68PH0-74E

MEMO

68PH0-74E

MEMO

68PH0-74E