


For vehicle fitted with CNG fuel system, use Tour M CNG Supplementary Owner's Manual

Refer for vehicle usage at all times.

Contains Warranty policy and important information on Safety, Operation & Maintenance.

Part No. 99011M75UE0-74W July, 2025 (ENG.) This Owner's Manual applies to TOUR M models. produced by MARUTI SUZUKI INDIA LIMITED.

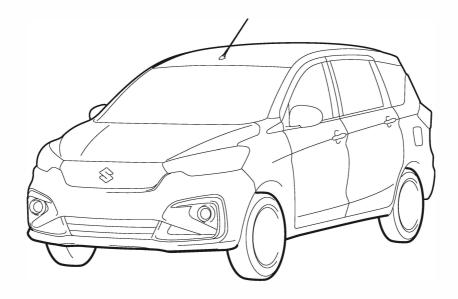

Note: The illustrated Model is one of the TOUR M series Accessories shown in the picture are not part of standard equipment

© Copyright 2025 **Maruti Suzuki India Limited.** All rights reserved. No part of this manual can be reproduced in any manner whatsoever or transmitted in any form or by any means without prior written consent of Maruti Suzuki India Limited.

FOREWORD

The digital Owner's Manual is an essential part of your vehicle a rich document which familiarizes you with the vehicle by providing information such as features, warnings, operations and equipment description etc. Please read this manual carefully before operating your new MARUTI SUZUKI vehicle and review the manual from time to time.It is recommended to download this manual (from "Maruti Suzuki Rewards" mobile application with your registered mobile number) and save a soft copy of the same for easy access all times. Please visit MARUTI SUZUKI authorised workshop for availing any service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

WARNING/ CAUTION/NOTICE/

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

WARNING

Indicates a potential hazard that could result in death or serious injury.

A CAUTION

Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.



75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

NOTE:

- Words like car, model/variant are invariably used in this manual to denote the "Vehicle".
- Pictorial representations used in this manual are for reference purposes only.

MODIFICATION WARNING

▲ WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorised workshop or qualified service technician for advice on installing such mobile communication equipment.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

"WARNING"



Vehicle may break-down, meet with an accident or catch fire due to

- 1. Installation of
 - High wattage bulbs
 - Non genuine lamps / horns
 - Modified suspension / wheels
 - Non genuine parts/accessories etc.
- 2. Retrofitment of LPG / CNG fuel systems/kits.
- 3. Usage of domestic LPG.
- 4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may breakdown or engine may fail due to

- 1. Water entry into the engine (which may lead to hydrostatic lock).
- 2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.

NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

"CAUTION"

- 1. Retro-fitment of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
- 2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
- 3. Usage of domestic LPG for running vehicles is prohibited as per law.
- 4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
- 5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning.(reduced contact area between tire and road due to presence of water)
- 6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
- 7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
- 8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
- 9. Always wear seat belt at all the times.
- 10. Do not use mobile phone while driving.
- 11. Avoid Smoking in the car, live bud thrown in car may cause fire.
- 12. Do not put any body part under the vehicle when it is supported on a Jack.
- 13. Do not use non-genuine accessories in your vehicle.
- 14. Do not fit accessories from unauthorized workshops/sources.
- 15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
- 16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
- 17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
- 18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
- 19. Do not check the engine room / open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
- 20. Avoid driving when vehicle has met with an accident. Before driving, Please contact with authorized MSIL dealership.

To experience and use the Digital Owner's Manual, download Maruti Suzuki app



Maruti Suzuki Rewards app ensures a hassle free car ownership experience. Get easy access to all the services and information you need by downloading the app



How to download Owners manual from Maruti Suzuki application

- Step 1: Download "Maruti Suzuki Rewards" application from apple app store / google play store on your mobile phone
- Step 2: Input registered mobile number and the OTP received from SMS
- Step 3: Select "S-Assist BOT" icon and click "View Owner's Manual" to access digital Owner's Manual
- Step 4: Click "Down Arrow" download and save Owner's Manual on your mobile phone

Now, the Owner's Manual is available on your mobile phone for reference at all times.

(For assistance, contact Maruti Suzuki authorised workshop)

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorized dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorized dealer and set-up, and serviced by a Maruti Suzuki authorized workshop.

(2) Term:

The term of the warranty shall be Thirty-Six (36) months or 1,00,000 kilometers (whichever occurs first) from the date of invoice to the first owner.

NOTE:

Maruti Suzuki offers warranty for the below parts in vehicle, if equipped, as follows:

- Lithium-ion battery, Integrated Starter Generator (ISG), Hybrid ECU, Inverter / Converter Unit, Power Management ECU - Sixty (60) months or 1,00,000 kilometers (whichever occurs first).
- Hybrid Electric Vehicle (HEV) Battery- Ninety six (96) months or 1,60,000 kilometers (whichever occurs first).

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

- a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, Consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.

(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer.)

- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
- (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual
- (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
- (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.
- Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
- Any vehicle which has not received the service inspections prescribed in this Owner's Manual and Service Booklet.
- (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorized workshop.
- (I) Any vehicle which has been used for purposes other than what it was designed for.
- (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
- Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.

- (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
- p) Installation and usage of domestic LPG gas/LPG Cylinder.
- (q) V-belts, hoses and gas leaks.
- (r) Any vehicle retrofitted with LPG/CNG kits.
- (s) Repainting including patchwork, bodywork and mouldings and interior trims.
- t) Corrosion, rusting of body parts and/ or components.
- (u) Any vehicle on which odometer has been changed unauthorizedly or odometer reading has been modified/ tampered with/ or not matching the service records.
- (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
- (w) Any damage(s) caused to vehicle including battery/ tyre due to parking of the vehicle in idle condition for long duration of time periods.
- (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
- (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorized to extend or enlarge this warranty and no dealer or its or his agent or employee is authorized to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorized workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Obligations:

NOTICE

The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorised workshop all the service inspections specified in the Owner's Manual described in "INSPECTION AND MAIN-TENANCE" section".
- Should you resell the vehicle, please guide the new users/ owners to download this manual (from "Maruti Suzuki Rewards" mobile application with your registered mobile number). Also the soft copy of the manual must be passed on to new users/ owners when resold or otherwise transferred.

If the Owner's Manual is lost due to any reason, the owner or user may download a soft copy of the same (from "Maruti Suzuki Rewards" mobile application with the mobile number) and save it for easy access at any point of time".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.


This Warranty is applicable only in India and not transferable to any other country.

NOTE:

Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.

TABLE OF CONTENTS


FOR SAFE DRIVING	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
INSPECTION AND MAINTENANCE	6
EMERGENCY SERVICE	7
APPEARANCE CARE	8
SPECIFICATIONS	9
SERVICE NETWORK	10

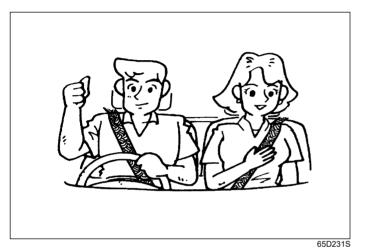

FOR SAFE DRIVING

Floor Mats	1-1
Front Seats	1-1
Rear Seats	1-3
Seat Belts and Child Restraint Systems	1-8
Child restraint system	1-20
Supplemental Restraint System (airbags)	1-27
Exhaust Gas Warning	1-40

Floor Mats

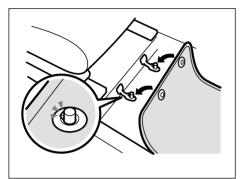

60MK020

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, MARUTI SUZUKI genuine floor mats are recommended

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, be sure to hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend using MARUTI SUZUKI genuine floor mats for proper fitting.

WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

Description of warning label



 Check that the floor mat grommets are hooked to the fasteners.



 Never stack floor mats because it may prevent from securing to the fasteners and cause sliding forward.



- For more details, read this owner's manual.
- Never use a floor mat which does not fit the floor contours.

Front Seats

Seat Adjustment

WARNING

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.

A WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

A WARNING

Do not place any object under the front seat. If an object becomes caught under the front seat, the following may occur.

- · The seat will not be latched.
- Also the lithium-ion battery located under the front left side seat, in a model equipped with ENG A-STOP system, will be damaged.

A WARNING

Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.

Adjusting Seat Position



73R003

The adjustment lever for each front seat is located under the front of the seat. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

Adjusting Seatbacks

WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

NOTE:


To operate the seat back smoothly, pull pull the seat back adjustment lever in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.



72R0133

To adjust the seatback angle of front seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

Head Restraints

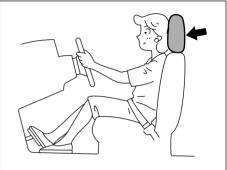

63.1246


Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

WARNING

- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint.

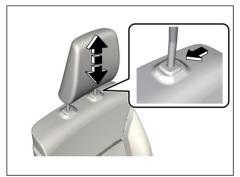

73R0035

To raise the front head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

Rear Seats Seat Adjustment

WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

Adjusting Seat Position (for 2nd row seats)



75U74EN010004

The adjustment levers for 2nd row seats are located under the front of the seats. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

NOTICE

When the 3rd row seat is folded forward, adjust the 2nd row seat not to reach the 3rd row seat.

Adjusting Seatbacks

WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

NOTE:

To operate the seat back smoothly, pull the seat back adjustment lever in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.


For 2nd row seats



75U74EN010005

To adjust the seatback angle of 2nd row seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

For 3rd row seats

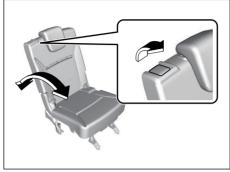

73RS017

To adjust the seatback angle of 3rd row seats, lift up the release lever, move the seatback to the desired position, and return the lever to lock the seatback in place.

WARNING


Do not pull down the backrest more than required, the seat belt cannot show full effect.

NOTICE

Adjust the 3rd row seat after getting down from the seat. If the release lever is pulled while being seated, the backrest will suddenly collapse to max angle.

Pull the release lever fully. If the seat is made to collapse without the lock being released, movement of lock will become heavy.

Walk-in Type Seats (for 2nd row seats)

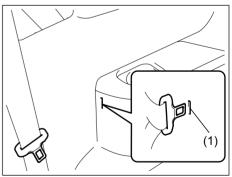

73R0038

NOTE:

To enter to or exit from the 3rd row seat, insert the tongue plate of the buckle into the part (1) before moving the 2nd row seat.

FOR SAFE DRIVING



75U74EN010006

The walk-in type seat can be moved to provide easy entry to and exit from the 3rd row seats. When the release lever is pulled up, the seat back falls down to the specified angle and the walk-in seat can be moved.

At this time, do not apply excessive force to the seat back. The seat back may be damaged.

A WARNING

- After using the walk-in function, be sure to return the folded seat back to an upright position.
- Before returning a walk-in seat to its normal seating position, make sure that the feet of the passenger in the 3rd row seat are out of the way.
- After returning the seat to its normal seating position, make sure it is securely latched.

NOTICE

Release lever is meant for easy entry purpose only. Not to be used for adjusting seatback.

Head Restraints

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

A WARNING


- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.


Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

2nd row seats (outer position)

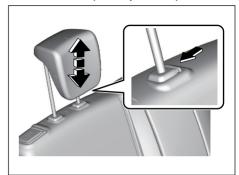

72R0134

2nd row seats (center position)

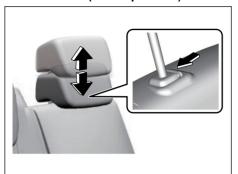


75U74EN010007

When using the rear center head restraint, pull it up and lock it securely before driving.

WARNING

Do not allow anyone to sit in the rear center seat with the rear center head restraint removed or in stowed position.

3rd row seats

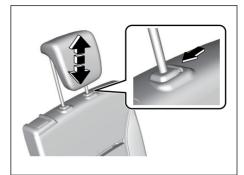

73R0040

To raise the rear head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.


When installing a child restraint system, raise the head restraint to the most upper position.

Folding Rear Seats

The rear seat of your vehicle can be folded forward to provide additional cargo space.

2nd row seats

To fold the 2nd row seat forward:

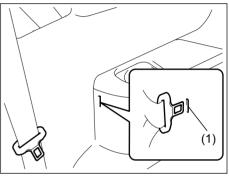

73R0038

1) Insert the tongue plate of the buckle unto the part (1)

NOTICE

- When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.
- 2) Lower the head restraint fully.
- 3) Store the seat belt buckles in the seat cushion slit.



75U74EN010003

4) Pull up the lever on the outboard side of the seat, and fold the seatback forward.

NOTICE

When the 2nd row seat head restraint reaches the front seatback, slide the front seat forward.


WARNING

If you need to carry cargo in the passenger compartment with the 2nd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

NOTICE

When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

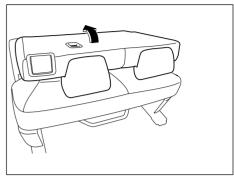

75U74EN010008

Raise the seatback until it locks into place.

NOTE:


When the seatback is locked in the folded position, pull up the lever on the outboard side of the seat to unlatch the seatback.

After returning the seat, try moving the seatback to make sure they are securely latched.

3rd row seats


To fold the 3rd row seat forward:

1) Lower the head restraint fully.

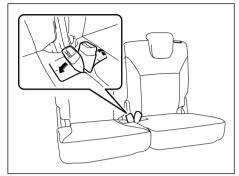

73R0207

 Stow the seat belt buckles of the right and left seating position into the pocket of the seat cushion as shown in the illustration.

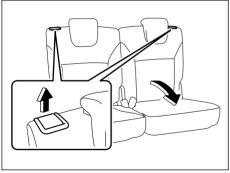

73R0007

3) Lift up the release lever on the top of seat, and fold the seatback forward.

NOTICE

When the 3rd row seat head restraint reaches the 2nd row seatback, slide the 2nd row seat forward.


NOTICE

When you are not using a seat belt, stow the seat belt buckles of the right and left seating position into the pocket first. This helps prevent being caught by the seat and being damaged.

A WARNING

If you need to carry cargo in the passenger compartment with the 3rd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

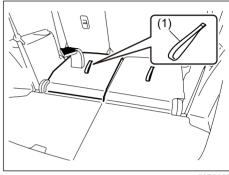

73R0008

Raise the seatback until it locks into place.


When you raise the seat from back of it, pull the strap (1).

NOTICE

Do not allow items in the luggage box to extend above the top of the luggage box. Otherwise, the luggage box or cover may be damaged.

After returning the seat, try moving the seatback to make sure they are securely latched.

Seat Belts and Child Restraint Systems

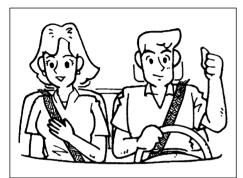


65D231

WARNING

Wear Your Seat Belts at All Times.

A WARNING

An airbag supplements, or adds to, the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

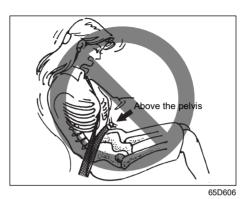


WARNING


Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision

WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.

(Continued)

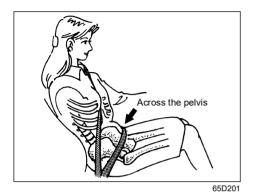

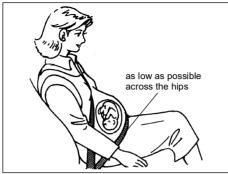



65D609

WARNING

(Continued)

- Seat beits should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than one which is snug.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats.
 It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the diagram.
- Do not wear your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.

(Continued)

65D199

A WARNING

(Continued)

- Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.
- Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.

(Continued)

WARNING

(Continued)

- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children age 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.
- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.

(Continued)

WARNING

(Continued)

- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

Lap-Shoulder Belt

Emergency Locking Retractor (ELR)


The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder



60A038


FOR SAFE DRIVING

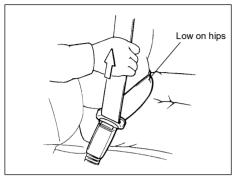

60A040


To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

All Seat Belts

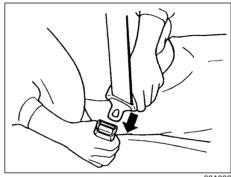

60A036

To fasten the seat belt, sit up straight and well back in the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a "click". After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

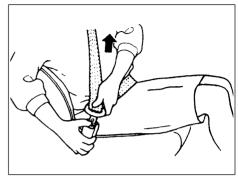


60A039

To unfasten the seat belt, push the button on the buckle and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

FOR SAFE DRIVING

Seat belt reminder

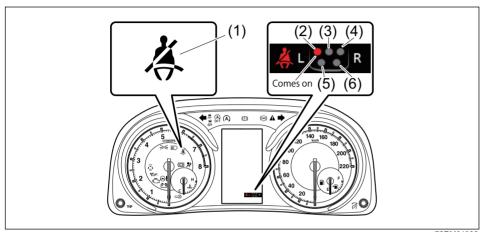

72RM01002

- (1) Driver's seat belt reminder light / front passenger's seat belt reminder light
- (2) 2nd row passenger's seat belt reminder light (2nd row left)
- (3) 2nd row passenger's seat belt reminder light (2nd row center)
- (4) 2nd row passenger's seat belt reminder light (2nd row right)
- (5) 3rd row passenger's seat belt reminder light (3rd row left)
- (6) 3rd row passenger's seat belt reminder light (3rd row right)

For more details, refer to the explanation as follows..

WARNING

It is absolutely essential that the driver, front passenger, 2nd row passenger* and 3rd row passenger* wear their seat belts at all times. Persons who are not wearing seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

NOTE:

- Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.
- The driver's seat belt reminder light / front passenger's seat belt reminder light is for both the driver and front passenger.

Driver's seat belt reminder

If the driver's seat belt remains unbuckled when the ignition switch is turned to "ON" position, the reminder works as follows:


- The driver's seat belt reminder light will come on. The front passenger's seat belt reminder light will also come on if a front passenger does not fasten his/her seat belt.
- After the vehicle's speed has reached about 15 km/h, the driver's or front passenger's seat belt reminder light will blink and a buzzer will sound for about 95 seconds
- The reminder light will remain on until the driver's or front passenger's seat belt is buckled.

If the driver or front passenger has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from step 1) or step 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned to "LOCK" position.

Front passenger's seat belt reminder

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned to "ON" position, the front passenger's seat belt reminder will activate.

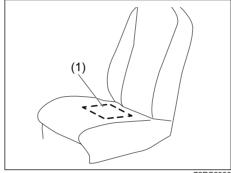

72RS2008

(1) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (1) detects whether a person is sitting in the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

A CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

NOTICE

- The sensor of the front passenger's seat belt reminder is located in the seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.
- Depending on the variety of seat cover, operation of the sensor may be adversely affected. Maruti Suzuki highly recommends that you use Maruti Suzuki genuine seat cover exclusively for this vehicle. If a seat cover is installed, consult with a Maruti Suzuki authorised workshop.
- If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.

(Continued)

NOTICE

(Continued)

• When sitting on the front passenger's seat, it is very important that the passenger sits upright, leaning against the seat backrest and centered on the seat cushion in order for the seatbelt reminder system to function effectively. An occupant sitting improperly (slouches, turns sideways, sits forward or sideways) may hamper the functioning of this system as it may not detect the occupant.

NOTE:

- If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.
- If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.

Rear passenger's seat belt reminder

The rear passenger's seat belt reminder lights in the information display remind the rear passengers to fasten their seat belts.


Whether or not a passenger is seated, the rear seat belt reminder system works as follows, when the ignition switch is turned to "ON" position:

- Reminder light will turn ON for the non buckled seats and continue for vehicle speed below 15 km/h.
- When vehicle speed is above 15 km/h, reminder light will remain ON for the non-buckled seats for about 65 seconds and then turn OFF.
- 3) Further, when a buckled seat belt is unbuckled, the corresponding reminder light will turn ON. Above 15 km/h, the reminder light will blink (about 65 seconds) along with a buzzer sound (about 35 seconds). The reminder light will remain ON until the seat belt is buckled.

If rear door is opened in vehicle stationary condition, then reminder system will start from step 1.

The reminder will be automatically canceled when all the rear seat belts are buckled or the ignition switch is turned to "LOCK" position.

Shoulder anchor height adjuster (only for front seats)

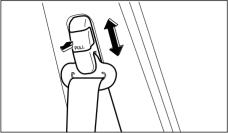


64J198

Adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To move upward, slide the anchor up. To move downward, slide the anchor down while pulling the lock knob out. After adjustment, check that the anchor is securely locked.

WARNING

Check that the shoulder belt is positioned on the center of the outside shoulder. The belt should be away from your face and neck, but not falling off your shoulder. Misadjustment of the belt could reduce the effectiveness of the seat belt in a collision.

Seat Belt Holder (for 2nd row seats)

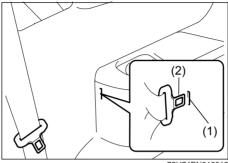

75U74EN010012

Rear outside seat belt holder (1) is provided on the lateral face beside the rear seat as shown in the illustration.

When the rear seat belt is not fastened, insert the tongue plate (2) of the outboard lap-shoulder belts into the holder(1) beside the seat.

When the rear seat belt is fastened, remove the tongue plate (2) of the outboard lap-shoulder belts from the holder(1) beside the seat.

NOTE:

To enter to or exit from the 3rd row seat, insert the tongue plate of the buckle into the part (1) before moving the 2nd row seat.

NOTICE

When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

Seat Belt Inspection




65D209S

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages, and guide loops. Replace any seat belts which do not work properly or are damaged.

A WARNING

Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners were activated. The pretensioners and the load limiter only function once. In case they did not activate, consult with a Maruti Suzuki authorised workshop

Seat belt pretensioner system (only for front seats)

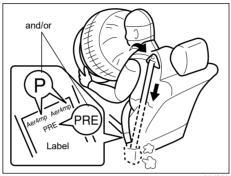

63J269

WARNING

This section describes your Maruti Suzuki vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, check the label on the seat belt at the bottom part. If the letters "p" and/or "PRE" appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

Read this section and "Supplemental restraint system (airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (air bags). The collision sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental restraint system (airbags)" section in addition to this "Seat belt pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released.

These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision

Sit fully back in the seat: sit up straight: do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat adjustment" section and the instructions and precautions about the seat belts in this "Seat belts and child restraint systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by a Maruti Suzuki authorised workshop as soon as possible.

The pretensioner system of the airbag system may not work properly if any of the following conditions occur:

1) If the airbag warning light on the instrument cluster does not come on briefly. when the ignition switch is turned to the "ON" position.

- 2) If the airbag light comes on and stays on for more than 10 seconds, when the ignition switch is turned to the "ON" position.
- 3) If the airbag light comes on while drivina.


Have both systems inspected by a Maruti Suzuki authorised workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by a Maruti Suzuki authorised workshop who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition switch has been in LOCK position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle.


Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Maruti Suzuki vehicle, ask a Maruti Suzuki authorised workshop, body repair shop, or scrap yard for assistance.

Seat Belt Force Limiter System (Only for Front Seat)

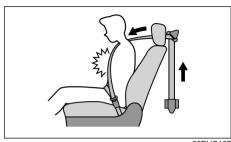

69RHS167

In the event of a strong impact coming from the front, the seat belt force limiter operates in two stages to reduce a force to the shoulder strap, thus lessening the impact being sustained by the front passengers.

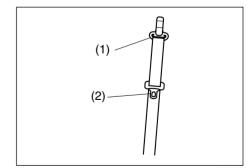

82K179

WARNING

If the seat belt sustains strong impact, the resin of the shoulder anchor part (1) and the tongue plate part (2) could soften due to heavy friction, thus sticking to the seat belt, making the belt slide less easily. In such a case, the seat belt may not provide the best performance, resulting in severe injury in case of emergency. Have the seat belt replaced by a Maruti Suzuki authorised workshop.

Child Restraint Systems




60G332S

The following types of child restraint system are available generally.

Infant restraint - rear seat only



Child restraint

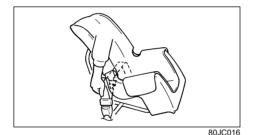

Booster seat



Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (the lap portion of lap shoulder belts) or by special rigid lower anchor bars built into the seat. Whenever possible, Maruti Suzuki recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

(For Countries applied for UN Regulation No.16)

When purchasing a child restraint and install it to your Maruti SUZUKI vehicle, refer to the information about suitability for child restraints shown in "Child Restraint System for Countries applied for UN Regulation No.16" in this section.

NOTE:

Observe any statutory regulation about child restraints.

A WARNING

 Do not install a rearward facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rearward facing child restraint could be killed or severely injured. The back of a rearward facing child restraint would be too close to the inflating airbag.



61M0241

WARNING

When installing a child restraint system to the rear seat, touching the child's foot or the child restraint system to the seatback of the front seat can cause serious injury to the child in the event of an accident. Adjust the front seat so that it does not touch the child or the child restraint system.

WARNING

- If you install a child restraint system in the 2nd row seat, slide the seat installed the child restraint system as far back as possible. So that, the child's feet do not contact the front seatback. These will help avoid injury to the child in the event of an accident.
- If child restraint systems are not installed properly, children or other occupants could be seriously injured in the event of an accident. Secure the child restraint system firmly according to both this manual and the instruction provided bychild restraint system's manufacturer.
- If the child is not secured properly in the child restraint system, it could cause serious injury to the child in the event of an accident. Use the child restraint system correctly following the instruction provided by child restraint system's manufacturer.



Child restraint system

A CAUTION

Adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the seat head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision. (Refer to "Installation with lapshoulder seat belts" section, "Installation with ISO-FIX type anchorages" section and "Installation of child restraint with top tether" section in this section for details.)

FOR SAFE DRIVING

Child restraint system for India

Child restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

		Seating position (or other site)					
MASS GROUP		Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center	
Group 0	Up to 10 kg	X	X	N.A.	U	U	
Group 0+	Up to 13 kg	Х	X	N.A.	U	U	
Group I	9 to 18 kg	Х	X	N.A.	U	U	
Group II	15 to 25 kg	Х	X	N.A.	U	U	
Group III	22 to 36 kg	Х	X	N.A.	U	U	

Key of letters to be inserted in the above table:

U =Suitable for 'universal' category restraints approved for use in this mass group

X =Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE:

- 'universal' is the category in the AIS 072.
- · 'Outboard' indicates window side seat.

Installation with lap-shoulder seat belts


A CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the seat head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTF.

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

ELR type belt

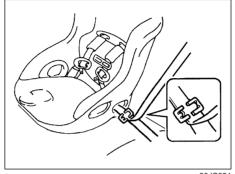


80.IC021

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Check that the seat belt is securely latched.

Move the child restraint system in all directions to check that it is securely installed. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of vour child's body.

Installation with ISOFIX type anchorages

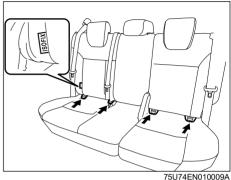


Your vehicle is equipped with the lower anchorages in the 2nd row seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

WARNING

Install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for the 2nd row seat.

FOR SAFE DRIVING

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

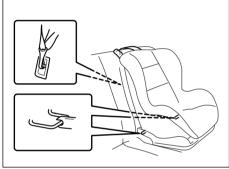

84MM00252

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.

Here is a general instruction:


A CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the 2nd row seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improp-

If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.


NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

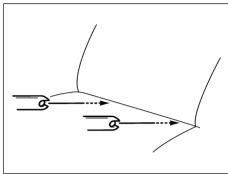


78F114

 Place the child restraint in the 2nd row seat, inserting the connecting bars to the anchorages between the seat cushion and the seatback.

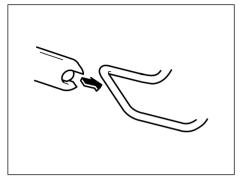




 Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.

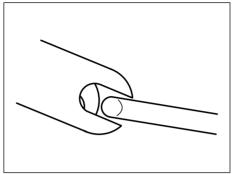

54G184

Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

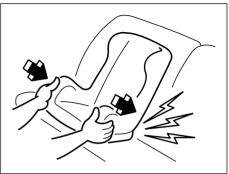

54G185

- 4) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Check that they are securely latched by trying to move the child restraint system in all directions, especially forward.
- 5) Attach the top tether strap referring to "Installation of child restraint with top tether" section. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

NOTICE

When installing a child restraint system to the 2nd row seat, slide the seat installed the child restraint system as far back as possible.

Installation of child restraint with top tether


A CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the 2nd row seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.

If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:


Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

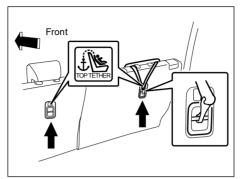

73R0175

Some child restraint systems require the use of a top tether strap. Top tether anchorage brackets are provided in your vehicle at the locations shown in the illustrations. The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

- Secure the child restraint on the 2nd row seat using the procedure described above for securing a restraint system that does not require a top tether strap.
- 2) Hook the top tether strap to the top tether anchorage bracket and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage bracket located directly behind the child restraint

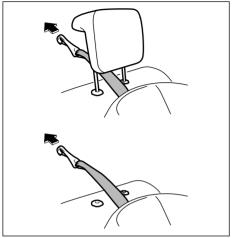

NOTE: Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory of "Child seat, ISOFIX"

73R0176

- 3) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head restraints" section for details on how to adjust the height of head restraint or remove it.)
- 4) Check that cargo does not interfere with routing of the top tether strap.

NOTICE

When installing a child restraint system to the 2nd row seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.


Supplemental Restraint System (airbags)

A WARNING

This section of the owner's manual describes the protection provided by your Maruti Suzuki's supplemental restraint system (airbags). Please read and follow all these instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a Supplemental Restraint System consisting of the following components in addition to a lapshoulder belt at each front seating position.

- 1. Driver's front airbag module
- 2. Front passenger's front airbag module
- 3. Front seat belt pretensioners
- 4. Airbag controller
- 5. Forward collision sensor
- 6. Side airbag module
- 7. Side crash sensor
- 8. Side curtain airbag module

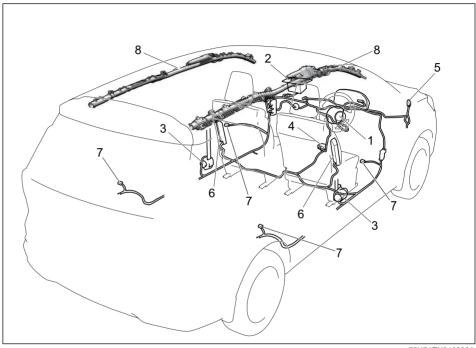

75U74EN010002A

A WARNING

An airbag supplements or adds to the collision protection offered by seat belts. The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

AIRBAG warning light



63J030

If the "AIRBAG" light on the instrument cluster does not blink or come on when the ignition switch is first turned to the ON position, or the ignition mode is first changed to "ON", or the "AIRBAG" light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by Maruti Suzuki authorised workshop as soon as possible.

Airbag symbol meaning



72M00150

You may find this label on the sun visor.

WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

WARNING

If the AIRBAG light in the instrument cluster ever comes on and stays on, it means that something may be wrong with the airbag system. If this ever happens, have the vehicle serviced immediately, because the airbags may not offer the protection for which they were designed.

Description of warning label

Symbol	Symbol meaning
	Do not install a rearward facing child restraint system to the front passenger's seat equipped with an airbag.
	If the front passenger's seat airbag were to be deployed, a major impact could be applied to a rearfacing child restraint system and the child.
	For more details, read this owner's manual.

A WARNING

• If the airbag-related parts are replaced or repaired, which has an impact on the airbag functions, the airbag may activate unnecessarily or may not activate when necessarv.

The following situations may give a negative impact to the airbag system.

In these cases, consult Maruti Suzuki workshop authorised beforehand.

- Removing the steering wheel, repairing the areas around the steering wheel, etc.
- Center console repair, repairs around the instrument cluster. repairs under the front seat, and repairs of electrical wiring
- Installation of audio equipment. etc.
- Sheet metal painting and repairs around the dashboard
- Replacement of the front seat and repairs around the seat
- Repairs around the front pillar. the back pillar or the roof side
- Repairs around the center pillar

Front Airbags



63J113

Front airbag is designed to inflate in severe frontal collisions when the ignition switch is in "ON" position or the ignition mode is "ON".


NOTE:

In a frontal angle collision, the side airbags (if equipped) may inflate.

Front airbag is not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents.Remember, since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.


Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Driver's front airbag

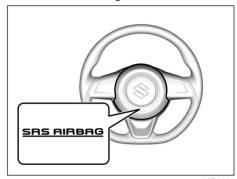

73R0009

Front passenger's front airbag

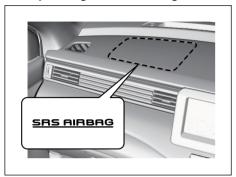

72R0143

The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the dashboard. The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

WARNING

- Do not install a rearward facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rearward facing child restraint could be killed or severely injured. The back of a rearward facing child restraint would be too close to the inflating airbag.
- If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.


Refer to "Seat belts and child restraint systems" section for details on securing your child.

Conditions of front airbags deployment (inflation)



80J097

 Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

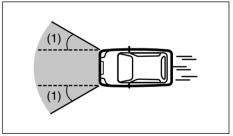


80J098E

 Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle


Conditions of front airbags may inflate

Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.

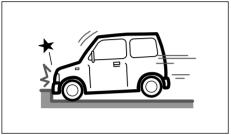


80J099

· Hitting a curb or medial strip

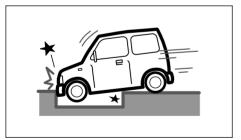

80J100E

Falling into a deep hole or ditch

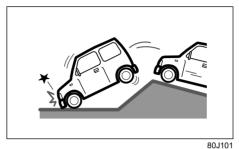


· Landing hard or falling

Front airbags may not inflate


The front airbags may not inflate when a strong impact has not occurred since the collision object was easy to be deformed or moved, or the collided portion of your vehicle was easy to be deformed.

 Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle. Also, in certain collisions at low speed, the airbags may not inflate.



80J102

· Frontal collision to a stopped vehicle at less than about 50 km/h

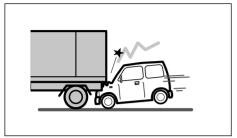


80J103

 Collision that the front of your vehicle goes under the bed of a truck etc.




80J104

· Collision with a utility pole or stumpage

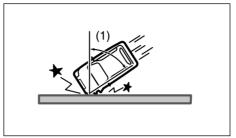

80J105E

 Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

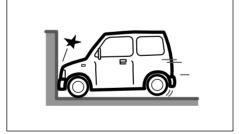


80J106

 Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h


Front airbags do not inflate

Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.

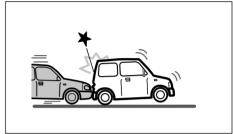


80J120

· Impact from the rear

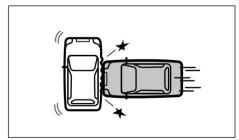


80J119

· Impact from the side

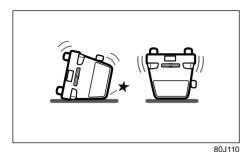

· Vehicle rollover

Side Airbags and Side Curtain Airbags

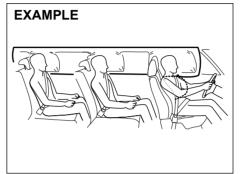

75U74EN010010

Side airbags are designed to inflate in severe side impact collisions when the ignition switch is in "ON" position or the ignition mode is "ON".

Side airbags and side curtain airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag and side curtain airbag on the side of the vehicle that is struck will inflate. However, in a frontal angle collision, the side airbags and side curtain airbags may inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Side airbags



72RH4039

Side airbags are located in the part of the front seatbacks closest to the doors. The "SRS AIRBAG" labels are attached to the seatbacks to identify the location of the side airbags.

WARNING

If the area where the airbag is stored is damaged or cracked, the airbag system may not function properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Side curtain airbags




76TS20370

Side curtain airbags are located in the roof lining. The words "SRS AIRBAG" are molded into the pillar to identify the location of the side curtain airbags.

▲ WARNING

If the area where the airbag is stored is damaged or cracked, the airbag system may not function properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Conditions of side airbags and side curtain airbags deployment (inflation)

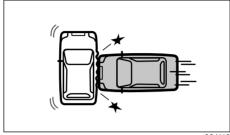


80J119

 Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h or in a greater impact


Side airbags and side curtain airbags may inflate in a strong impact

 Side airbags and side curtain airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.



80,1102

· Frontal collision

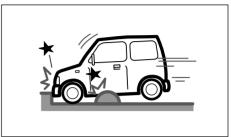


52RM20730

· Hitting a curb or bump




80J100E


· Falling into a deep hole or ditch

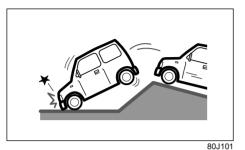


· Landing hard or falling

Side airbags and side curtain airbags may not inflate

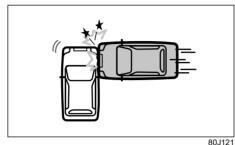

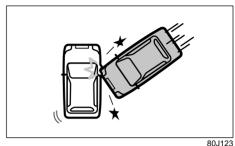

• Impact from the side at an oblique angle

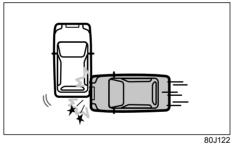

• Impact from the side to the vehicle body other than the passenger compartment



80J124

• Impact from the side by a high hood vehicle



80J125


Impact from the side by a motorcycle or bicycle



80J126


· Collision with a utility pole or stumpage

Side airbags and side curtain airbags do not inflate

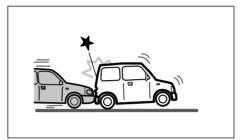

80J120

· Impact from the rear

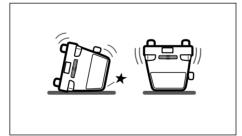

80J110

Vehicle rollover

How the System Works

In a frontal collision, the crash sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. If your vehicle is equipped with side airbags and side curtain airbags, crash sensors will detect a side collision, and if the controller judges that the side collision is severe enough, it will trigger the side airbag and side curtain airbag inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head (front airbags and side curtain airbags only) and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation.

A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to "Seat adjustment" section and "Seat belts and child restraint systems" section in this section for details on proper seat and seat belt adjustments.



65D610



65D608



59RN02190

WARNING

· The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front airbag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side airbags and side curtain airbag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.

(Continued)

WARNING

(Continued)

- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each conditions may cause severe injury.
- For vehicles with side airbags, do not use non-genuine seat covers on the front seats, because nongenuine seat covers may obstruct the inflation of side airbags. Maruti Suzuki highly recommends Maruti Suzuki-genuine seat covers to be used when covering the front seats of such vehicles with side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella, as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.


(Continued)

WARNING

(Continued)

- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the air bags to malfunction.
- Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by Maruti Suzuki authorised workshop to ensure that it works properly.
- If the original function of air bag system is damaged, air bag may not function effectively and fully in case of an emergency.

(Continued)

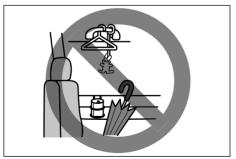

74TBX02089

WARNING

(Continued)

- Do not modify the system in any way including replacing the steering wheel, placing stickers on the steering wheel pad, painting the steering wheel, or covering the steering wheel with a cover.
- Do not place stickers on or paint the instrument panel. Do not install and set up accessories, air fresheners, ETC readers, or portable navigation systems. Do not stand umbrellas or similar in front of airbags.
- Excluding genuine Maruti Suzuki parts, do not attach accessories to the front windshield or the rearview mirror.
- Immediately after an airbag is activated, the airbag components may become hot and this may cause burn injury.
- Do not touch the airbag components immediately after an airbag is activated.

A CAUTION

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however. that some airbag components may be hot for a while after inflation. This may cause burn injury.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, which sensors activated the deployment, and for a certain vehicle only, whether the driver's seat belt was in use.

Servicing the airbag system

If the airbags inflate, have the airbags and related components replaced by a Maruti Suzuki authorised workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If it does, have the airbag system inspected by the Maruti Suzuki authorised workshop as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only a Maruti Suzuki authorised workshop should be allowed to service or replace your airbags. Please remind anyone who services your Maruti Suzuki vehicle that it has airbags.

Service on or around airbag components or wiring must be performed only by a Maruti Suzuki authorised workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the airbag system, be sure the lead-acid battery is disconnected and the ignition switch has been in the LOCK position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing,


and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated airbag can be hazardous. Ask your dealer, body repair shop or scrap yard for help with disposal.

A CAUTION

If you do not handle the airbags properly, they may inflate unexpectedly, resulting in personal injury. When scrapping the airbags or the vehicle that has the airbags, consult a Maruti Suzuki authorised workshop.

Exhaust Gas Warning

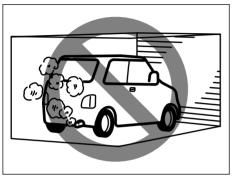

52D334

WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, be sure to take the following precautions to help prevent carbon monoxide from entering your vehicle.

 Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problems and lead to death.

(Continued)

WARNING

(Continued)


- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to "FRESH AIR" and the blower is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to operate the vehicle with the tailgate or trunk open, make sure all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR"
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grille in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.

(Continued)

WARNING

(Continued)


 Have the exhaust system inspected periodically for damage and leaks.
 Any damage or leaks should be repaired immediately.

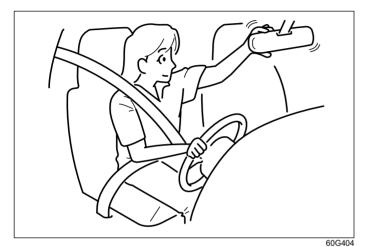

BEFORE DRIVING

Keys	2-1
Door Locks	2-2
Keyless entry system transmitter	2-5
Theft Deterrent Alarm System (if equipped)	2-8
Theft deterrent light (if equipped)	2-10
Windows	
Mirrors	2-1
Instrument Cluster	2-10
Speedometer	2-1
Tachometer	2-1
Fuel gauge	2-1
Temperature Gauge (if equipped)	2-1
Brightness Control	2-1
Information Display	2-19
Warning and Indicator Lights	
Lighting Control Lever	2-4
Headlight Leveling Switch	2-4
Turn Signal Control Lever	2-4
Hazard Warning Switch	2-4
Windshield Wiper and Washer Lever	
Tilt Steering Lock Lever	2-4
Horn	
Vehicle Loading	2-49
Trailer Towing your vehicle	2-4

Keys

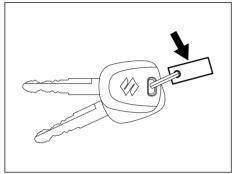

73R0130

Your vehicle comes with a pair of identical keys. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key, which has an electronic identification code programmed in it. The key communicates the identification code to the vehicle when the ignition switch is turned "ON". If you need to make spare keys, see a Maruti Suzuki authorised workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.



80JM122

If the immobilizer warning light blinks when the ignition switch is in "ON" position, the engine will not start.

If this light blinks, turn the ignition switch to LOCK position, and then turn it back to ON position.

If the light still blinks after the ignition switch is turned back to ON position, there may be something wrong with your key or with the immobilizer system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

NOTE:

- If you lose your immobilizer ignition key, ask a Maruti Suzuki authorised workshop as soon as possible to deactivate the lost one, and to make a new key.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch when using your MARUTI SUZUKI vehicle. Otherwise, or the engine may not be started because they may interfere with your MARUTI SUZUKI vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key, it may not start the engine.

NOTICE

The immobilizer key are sensitive electronic instruments.

To avoid damaging them:

- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.

NOTICE

Do not modify or remove the immobilizer system.

If modified or removed, the system cannot be properly operated.


This immobilizer system is maintenance-free.

Ignition Key Reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

Door Locks

Side Door Locks

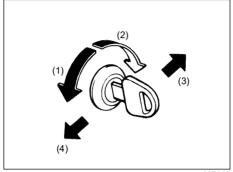


60B008

- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

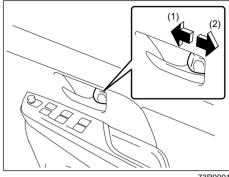

73R0001

(1) LOCK (2) UNLOCK


To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.

To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.

Central Door Locking System

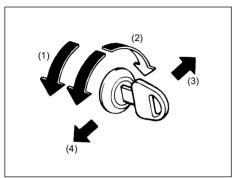

54G294


- (1) UNLOCK
- (2) LOCK (3) Front
- (4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

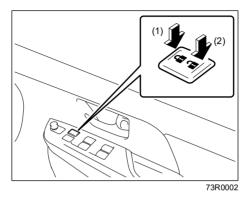

(1) LOCK (2) UNLOCK

You can also lock or unlock all doors by depressing the front or rear of the switch, respectively.

NOTE:

 You can also lock or unlock all doors by operating the transmitter. Refer to Keyless entry system transmitter in this section.

NOTE:


- All doors are automatically unlocked when you turn the ignition switch to the "LOCK" position and pull out the key.
- All doors are automatically locked for safety when the vehicle speed reaches 15 km/h.
- You can change the automatic locking or unlocking function mentioned above via

the setting mode of the information display. For details on how to use the information display, refer to "Information display" in this section.

Tailgate

WARNING

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

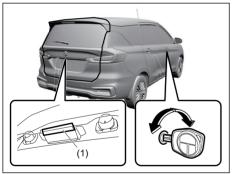

75U74EN020010

(1) Tailgate handle


You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, pull up the tailgate handle (1) and lift the tailgate.

If you cannot unlock the tailgate by using

the key in the driver's door lock due to a discharged lead-acid battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

1) Fold the rear seat forward for easier access. Refer to "Folding rear seats" section for details on how to fold the rear seat forward.

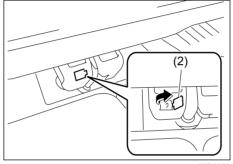


73R0020

2) Open the cover (2) in the lock mechanism of the tailgate.

NOTE:

Be careful not to lose the cover (2) because it is small and detachable.

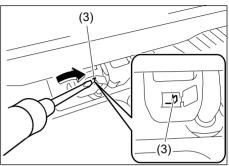

73R0021


- 3) Move the lever (3) in arrow direction by using a flat-bladed screwdriver to unlock the tailgate.
- 4) Push open the tailgate from inside. The tailgate will be latched again by simply closing the tailgate.

If the tailgate cannot be unlatched by pulling up the tailgate handle, have the vehicle inspected by a Maruti Suzuki authorised workshop.

A CAUTION

Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.


Keyless entry system transmitter

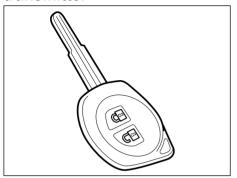

73RM02001

Your vehicle is equipped with a keyless entry system transmitter. The transmitter has only a keyless entry function. For details, refer to the following explanations.

Keyless Entry System Transmitter

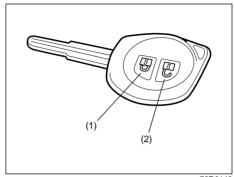

72R0148

- (1) LOCK button (2) UNLOCK button
- You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

NOTE:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice when unlocked.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the LOCK button (1).

NOTE:

If no door is opened within about 30 seconds after the UNLOCK button (2) is oper-

ated, the doors will automatically lock again.

NOTE:

- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds. the siren will not sound.

NOTE:

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can be operated only unlock with the transmitter.
- If you lose one of the transmitters, ask a Maruti Suzuki workshop as soon as possible for a replacement. Be sure to have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Car locator alarm function

This function is to get the attention of others. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds. The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time. To cancel the car locator alarm, press any button (LOCK or UNLOCK). You can also cancel the car locator alarm by turning the ignition switch to "ON" position.

NOTE:

The car locator alarm function will not activate when the key is in the ignition switch.


Battery replacement

If the transmitter becomes unreliable, replace the battery.

NOTE:

You may damage the transmitter when replacing its battery. Asking Maruti Suzuki authorised workshop is recommended.


To replace the battery of the transmitter:

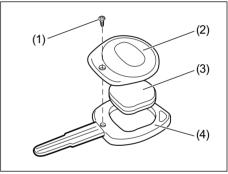

74TBX03055

- 1) Remove the screw (1), and open the transmitter cover (2).
- 2) Remove the transmitter (3) from the transmitter holder (4).

BEFORE DRIVING

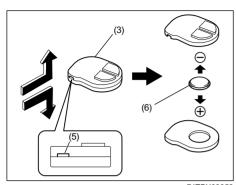

74TBX03056

(6) Lithium disc type battery: CR1616

- 3) Separate the case up and down while applying force to the slot (5) on the side of the transmitter (3).
- 4) Replace the battery (6) so its + terminal faces the "+" mark of the transmitter.
- 5) Close the case and install it into the transmitter holder (4).
- 6) Close the transmitter cover (2), install and tighten the screw (1).
- 7) Make sure the door locks can be operated with the transmitter.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

WARNING


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the transmitter controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

NOTE:

Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.

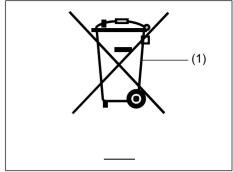

80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a Maruti Suzuki authorised workshop.

Theft Deterrent Alarm System (if equipped)

The security system sets after you close the all doors, engine hood.

For the system to armed, you must lock the all doors with the keyless entry system transmitter.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless entry system transmitter, or open the engine hood will cause the alarm to be triggered.

- * These means include the following:
 - The key
 - The lock knob on a door
 - The power door locking switch

Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the alarm will be triggered if any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask your Maruti Suzuki authorised workshop or use the setting mode of the information display.

NOTE:

- The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Information display" in this section.
- Your dealer may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.

NOTE:

- The theft deterrent alarm system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into your vehicle.
- Always use the keyless entry system transmitter to unlock the doors when the theft deterrent alarm system has been armed. Using a key instead will trigger the alarm.
- If a person who does not know the theft deterrent alarm system is going to drive your vehicle, we recommend you explain the system and its operation to the person, or disable the system beforehand. Mistakenly triggering the alarm may cause a nuisance to others.
- Even if the theft deterrent alarm system is armed, you should still be careful to guard against theft. Do not leave money or things of value in your vehicle.

NOTICE

Do not modify or remove the theft detereent alarm system. If modified or removed, the system cannot be properly operated.


The theft deterrent alarm system is maintenance-free.

BEFORE DRIVING

How to arm the theft deterrent alarm system

With the all door (including engine hood and tailgate) closed, use the keyless entry system transmitter, to lock all the doors. The theft deterrent alarm system will be armed.

While the system is being armed, the indicator (1) continues to blink at intervals of approximately 2 seconds.

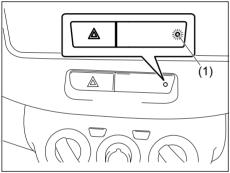

73R0025

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or swings the vehicle (if the shock sensor is in the enabled state).
- The theft deterrent alarm system is not armed when all doors are locked using the key from outside, or using the door lock levers or the power door locking switch from inside.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, the doors are automatically locked again. When the doors are locked, the security system will be armed if the system is in the enabled state.

How to disarm the theft deterrent alarm system

Simply unlock the doors using the keyless push start system remote controller, the request switch or the keyless entry system transmitter. The theft deterrent light will go out, indicating that the theft deterrent alarm system is disarmed.

How to stop the alarm

Should the alarm be triggered accidentally, unlock the doors using the keyless entry system transmitter, or turn the ignition switch to "ON" position. The alarm will then stop.

NOTE:

- Even after the alarm has stopped, if you lock the doors using keyless entry system transmitter, the theft deterrent alarm system will be rearmed.
- If you disconnect the lead-acid battery while the theft deterrent alarm system is in the armed condition or the alarm is actually in operation, the alarm will be triggered or retriggered when the leadacid battery is then reconnected, although, in the latter case, the alarm remains stopped for the period between disconnection and reconnection of the lead-acid battery.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, or the vehicle feels a shock (if the shock sensor is in the enabled state), without disarming the theft deterrent alarm system.

Checking whether the alarm has been triggered during parking

If the alarm was triggered due to an unauthorized entry into the vehicle and you turn the ignition switch to ON position, the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether your vehicle has been broken into while you were away from it.


Security system indication

- If any of the doors or tailgate are opened without unlocking by the keyless entry system transmitter, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time. (If the shock sensor is in the enabled state.)
- If the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, the siren sounds for about 5 seconds (full blast warning). The security system indicator continues to blink during this time.

NOTE:

If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.

Theft deterrent light (if equipped)

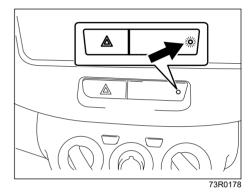

This light will blink with the ignition switch in LOCK or ACC position. The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

NOTE:

For the theft deterrent alarm system, refer to "Theft deterrent alarm system (if equipped)" in this section.


BEFORE DRIVING

Windows

Power Window Controls

The power windows can only be operated when the ignition switch is in the ON position.


Driver's side

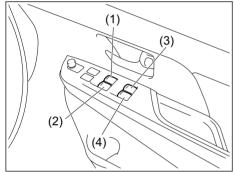

73R0004


The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

Passenger's door / rear door

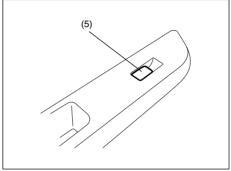

74I HT0205


The passenger's door has a switch (5) to operate the passenger's window.

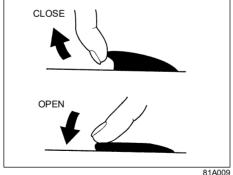

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

The driver's window has AUTO-DOWN and AUTO-UP features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

Lock switch

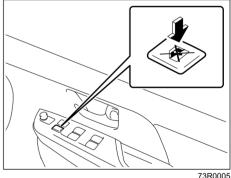

The driver's door also has a lock switch for the passenger's windows. When you push in the lock switch, the passenger's windows cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing again.

A WARNING

- When opening or closing a window, a part of body such as hands, legs and neck may be caught by the window and an accident may occur.
- When you operate the electric window controls from the outside of the window, your hands or neck may be caught by the window and an accident may occur. Do not operate the electric window controls from the outside of the window.
- You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the power windows when closing them.
- Always remove the ignition key or take the keyless push start system remote controller with you when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the power window switches and get trapped by the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Pinching Prevention Function (if equipped)

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

▲ WARNING

To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the electric window when closing it.

This function may not detect an object due to the size, hardness, or position of the object being caught in the closing window.

A CAUTION

- The pinching prevention function does not operate while you are holding the window switch in UP position.
- The pinching prevention function may not detect an object caught in the window just before the window is fully closed.

NOTE:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position. If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:

1) Turn the ignition switch to "ON" position.

BEFORE DRIVING

- Open the driver's window fully by holding the window switch in DOWN position.
- Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- Check the driver's window to see if the AUTO-DOWN/UP feature works.

WARNING

Whenever you disconnect and reconnect the lead-acid battery or replace the fuse, the pinching prevention function needs to be initialized. The pinching prevention function will not be activated until the initialization is completed.

If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Mirrors

 
A WARNING

Failure to observe following points may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.


- Do not adjust the mirrors while driving.
- Always unfold all the outside rearview mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

Inside Rearview Mirror

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror.



68LMT0205

 

68LMT0206

- (2) Day driving
- (3) Night driving

To adjust the mirror, set the selector tab (1) to the day position, and then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

WARNING

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you.
 Be aware that in this position you may not be able to see some objects that could be seen in the day position.


A CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.

Outside Rearview Mirrors

A WARNING

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

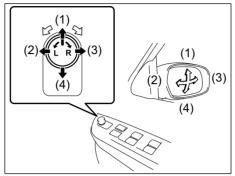

73R0030


The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position. To adjust the mirrors:

- Rotate the selector switch to the left or right to select the mirror you wish to adjust.
- Push the side of the switch to the direction in which you wish to move the mirror.
- Return the selector switch to the center position to prevent unintended mirror movement

NOTICE

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.
- Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.

Outside Rearview Mirrors Folding Switch

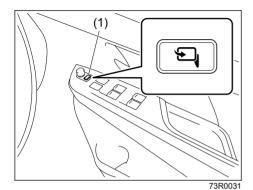

You can fold the mirrors when you park the vehicle in a narrow space. When the ignition switch is in the ACC or ON position, push the folding switch (1) to fold and unfold the mirrors.

Make sure the mirrors are completely unfolded before you start driving.

A CAUTION

Moving mirrors can pinch and injure a hand. Do not allow any one's hand to get near the mirrors when folding and unfolding the mirrors.

NOTE:

 If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the out-


- side rearview mirrors may get stuck during that moment. To open the outside rearview mirrors completely, again press the folding switch after starting the engine.
- Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.

Instrument Cluster

- 1. Speedometer
- 2. Tachometer
- 3. Fuel gauge


- 4. Temperature gauge (if equipped)5. Information display6. Trip meter selector knob

- 7. Indicator selector knob
- 8. Warning and indicator lights

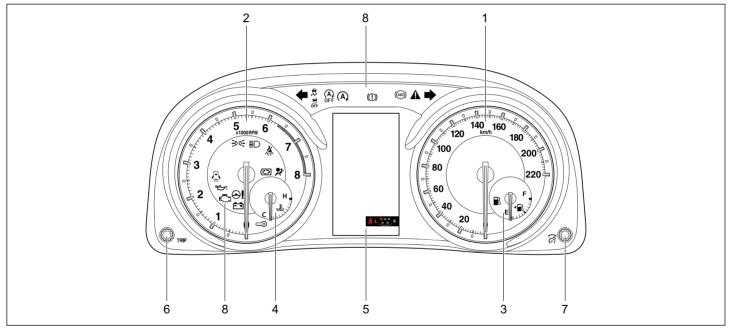

72RM02024

Speedometer

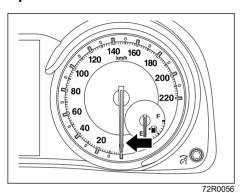


The speedometer indicates vehicle speed in km/h.

NOTE:

Maximum speed of the vehicle is 80 km/hr as per government regulation.

Tachometer

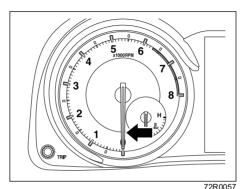


The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower position. gear Refer to "Downshifting maximum allowable speeds" in the "OPERAT-ING YOUR VEHICLE" section.

Fuel gauge

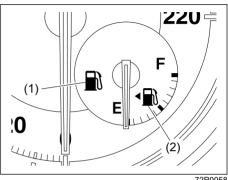

72R0058

When the ignition switch is in "ON" position, this gauge gives a rough indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

If the indicator approaches a low level (near "E") on fuel gauge, refill the tank as soon as possible.

NOTE:

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

If the low fuel warning light (1) comes on, refill the fuel tank as soon as possible.

NOTE:

The activation point of the low fuel warning light (1) varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.


Refer to "Low fuel warning light" in "Warning and indicator lights" in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

Temperature Gauge (if equipped)

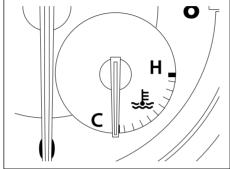


72R0059

When the ignition switch is in "ON" position, this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between "H" and "C". If the indicator approaches "H", overheating is indicated. Follow the instructions for engine overheating in "EMERGENCY SERVICE" section.


NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Brightness Control

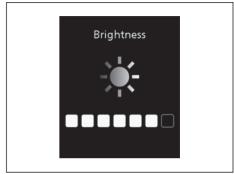

72R0063

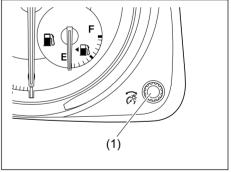

72R0060

BEFORE DRIVING

When the ignition switch is turned "ON", the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

You can adjust the meter illumination brightness regardless of whether the position lights or headlights are off or on.

To increase the brightness of the instrument panel lights, turn the brightness control knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the brightness control knob (1) counterclockwise.

WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

- If you do not turn the brightness control knob within several seconds of activating, the brightness control display will be canceled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.


NOTE:

If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be cancelled.

- The function which automatically dims the brightness of instrument panel lights.
- The function which operates with the brightness control, except maximum brightness level.


Information Display

The information display is shown when the ignition switch is in "ON" position.

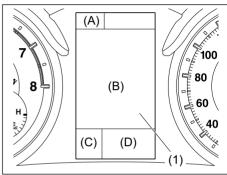

72RM02023

(1) Information display

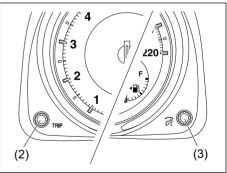

72R0062

(2) Trip meter selector knob

(3) Indicator selector knob

The information display shows the following information.


Display (A)

Display (B)

Fuel consumption / Driving range / Average speed / Driving time / Clock and date / Motion / Torque and power / Accelerator and brake / Energy flow / Total idling stop time and Total idling fuel saved

Display (C)Gearshift indicator

Display (D)Odometer and Trip meter

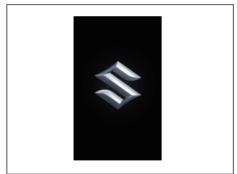

72R0135

When the ignition switch is turned "ON", the message shown in the above illustration will appear on the display for several seconds.

Some warning and indicator messages may appear on the display when the ignition switch is in "ACC" or "LOCK" position.

Clock

When the ignition switch is in "ON" position, the display (A) shows the time.

To set the clock, follow "Setting mode" instructions in this section.


WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

Fuel Consumption / Driving Range / Average Speed / Driving Time / Total Idling Stop Time and Total Idling Fuel Saved / Clock and Date / Motion / Torque and Power / Accelerator and Brake / Energy flow (if equipped)

When there are no warning or indicator messages on the display (B), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time, total idling stop time and total idling fuel saved, clock and date, motion, torque and power, accelerator and brake, energy flow or no indication.

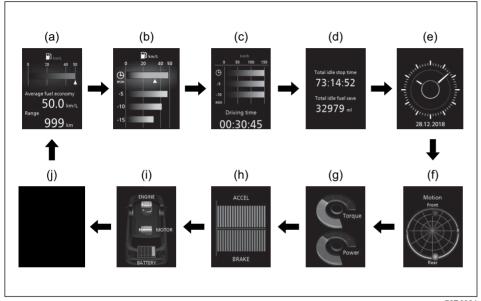

72R0064

- (a) Instantaneous fuel consumption / Average fuel consumption / Driving range
- (b) Instantaneous fuel consumption / Average fuel consumption / 5-minute average fuel consumption
- (c) Average speed / 5-minute average speed / Driving time
- (d) Total idling stop time / Total idling fuel saved
- (e) Clock and date
- (f) Motion
- (g) Torque and power
- (h) Accelerator and brake
- (i) Energy flow
- (i) No indication

To switch the display indication, push the indicator selector knob (3) quickly.


NOTF:

The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed, total idling fuel saved, motion, torque and power, accelerator and brake and energy flow shown on the display are affected by the following conditions:

- road condition
- · surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blink

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

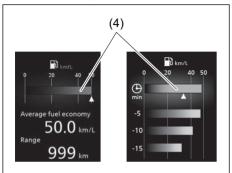

52RM21070

(4) Instantaneous fuel consumption

NOTE:


- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L, MPG (UK).
- The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
 - For L/100km setting: 30
 - For km/L setting: 50

- For MPG (UK) setting: 80
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption

Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

(Average fuel consumption)

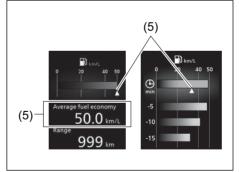

52RM21080

(5) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned "ON". Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

NOTE:

When you reconnect the negative (-) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods:


- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

NOTE:

If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset.


(5-minute average fuel consumption)

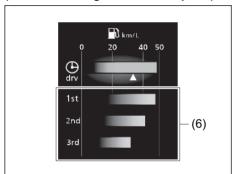

72R0136

(6) 5-minute average fuel consumption

(1-driving cycle average fuel consumption)

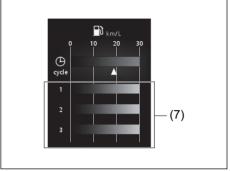


52R30840

(7) 1-driving cycle average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to "Setting mode" in this section.

Driving range

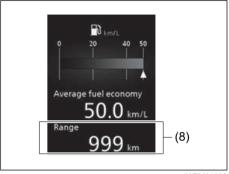

52RM21090

(8) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned "ON".

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display "---" will appear. If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.


NOTE:

- If you refuel when the ignition switch is in "ON" position, the driving range may not indicate the correct value.
- When you reconnect the negative (–) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.
- If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly

Average speed / 5-minute average speed

Average speed from previous reset and 5-minute average speed are shown.

(Average speed)

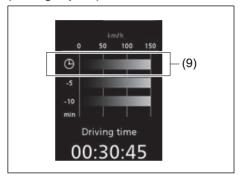

52RM21100

(9) Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is turned "ON". Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.


To reset the value of average speed, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates an average speed. The display

shows "---" and then indicates a new average speed after driving for a short time.

NOTF:

When you reconnect the negative (-) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

(5-minute average speed)

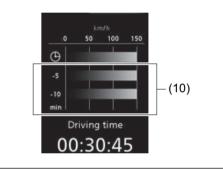


52RM21110

(10) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

Driving time

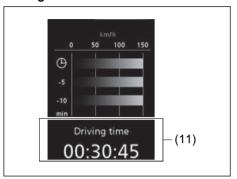

52RM21120


(11) Driving time

Driving time from previous reset is shown. To reset the driving time, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates a driving time. The display shows "---" and then indicates a new driving time after driving for a short time.

NOTE:

- Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.
- The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.

Total idling stop time and total idling fuel saved

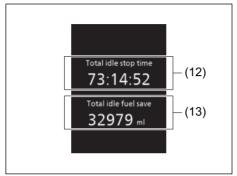

52RM217

- (12) Total idling stop time
- (13) Total idling fuel saved

The display shows the total length (in hours, minutes and seconds) of engine stopping time and the total amount (in milliliters) of fuel conservation by ENG ASTOP system since the indication was reset.

 To reset the total idling stop time and the total idling fuel saved, push and hold the indicator selector knob (3) for a while when the display shows the total idling stop time and the total idling fuel saved.

NOTE:


- The indicated maximum value of the total idling stop time is 99:59:59 and this value is fixed until it is reset.
- When you reconnect the negative (–) terminal to the lead-acid battery, the

value of the total idling stop time and the total idling fuel saved will be reset.

Clock and date

Date and time are shown. For the setting procedure, refer to "Setting mode" in this section.

Motion

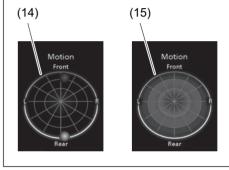

52RM218

The meter indication is different depending on whether the vehicle is stopped or running.

When driving, real time movement of imaginal G position (center of gravity) is displayed on the globe (14), which is resultant with inertia force.

When stopped, historical data of imaginal G positions applied to the vehicle body during the driving is shown as a graph (15).

G position history graph when the vehicle stopped can be changed to indicate or hide. For details, refer to "Setting mode" in this section.

▲ WARNING

Do not look in the display intensively while driving. Doing so may result in an accident.

NOTE:

- If G position history graph at the vehicle stopped has been set in indication mode, the graph (15) is shown for several seconds when you turn the ignition switch to "LOCK" position after driving.
- The graph is shown approximately and the actual movement may differ.

Torque and power

Present engine torque and power are shown

Accelerator and brake

Present accelerator pedal depressing degree and brake line pressure are shown. The display is selectable to indicate or not to indicate. For details, refer to "Setting mode" in this section.


Energy flow (if equipped)

The state of SHVS operation can be checked on the information display. For details, refer to "SHVS (Smart Hybrid Vehicle by Suzuki)" in "OPERATING YOUR VEHICLE" section.

Information display	Description
illioittiatiott uispiay	Description
endine (c (C = 2) 2) MOTOR SATTERY	When the vehicle is running, ISG (Integrated Starter Generator) assists engine power as an electric motor.
	When the vehicle is newered by the engine
MOTOR BATTERY	When the vehicle is powered by the engine.
72R0139	
MOTOR PATTERY 72R0140	When decelerating your vehicle, the ISG generates electricity without engine power.
7210140	
ENGINE MOTOR SATIENT	When the engine automatically stops by the ENG A-STOP system.
72R0141	


Information shown after driving

When you turn the ignition switch to LOCK position, the following information appears for several seconds on the information display.

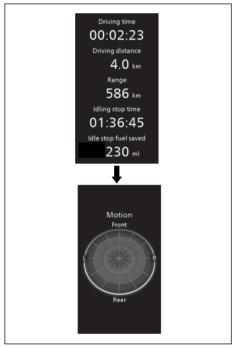

52RM21140

 Gearshift Indicator



72R0074

Gearshift Indicator

Refer to "Gearshift indicator" in "OPERAT-ING YOUR VEHICLE" section.

Odometer / Trip meter

The display (D) shows the odometer and trip meter.

The odometer records the total distance the vehicle has been driven.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To switch the display indication (D), push the trip meter selector knob (2) quickly.

To reset the trip meter, push and hold the trip meter selector knob (2) for about 2 seconds when the display shows the trip meter.


NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Setting Mode

When the ignition switch is in "ON" position and the vehicle is stationary, you can enter into the setting mode of the information display by pushing and holding the indicator selector knob (3) for more than 3 seconds.

- To select the setting item that you want to change, turn the indicator selector knob (3) left or right.
- To change the setting, push the indicator selector knob (3).
- To exit the setting mode, select "Back" and push the indicator selector knob (3).

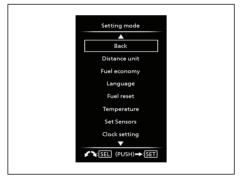

72R0142

NOTE:

The currently selected setting item is surrounded by a frame.

NOTE:

- If you push and hold the indicator selector knob (3) to enter into the setting mode when the display (B) shows average fuel consumption, average speed, driving time, total idling stop time and total idling fuel saved (if equipped), the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.
- If you turn the ignition switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.

Distance unit

(Odometer / trip meter / driving range / average speed distance unit setting)
You can change the units in which odometer / trip meter / driving range / average speed distance is displayed.

Fuel economy (Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language (if equipped)

You can change the language of the information display.

Fuel reset

(Average fuel consumption reset setting)

You can change when the value of average fuel consumption is reset.

Temperature

(Temperature unit setting) (if equipped) You can change the units that temperature is displayed in.

 To change the temperature unit, select "Temperature" in "Setting mode". Then, select "°C" or "°F".

Clock setting (if equipped) (Adjusting the clock)

- Adjust the clock by selecting "Clock setting" in "Setting mode". Then, select "Adjust clock".
- To change the hour indication, turn the indicator selector knob (3) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (3). To set the hour indication, push the indicator selector knob (3) and the minute indication blinks.
- To change the minute indication, turn the indicator selector knob (3) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (3). To set the minute indication, push the indicator selector knob (3).

(Selecting 12H/24H format)

 Switch the time indication between 12hour and 24-hour format by selecting "Clock setting" in "Setting mode". Then, select "12H" or "24H".

(Adjusting the date)

- Adjust the date by selecting "Clock setting" in "Setting mode". Then select "Adjust date".
- To adjust year, month and day, operate the indicator selector knob (3) in the same way as adjusting the clock.

Set sensors

(Parking sensor setting)

The parking sensor can be switched between the normal mode and trailer mode.

Door lock (Door lock setting) (Door unlock)

- All Doors:
 Unlock all doors by turning the key, or operating the keyless entry system transmitter once
- Driver Door: Unlock all doors by turning the key, or operating the keyless entry system transmitter, twice (default setting)

(Auto lock)

- Manual Lock: Disable the automatic door locking function
- Speed Syncro: Lock all doors when the vehicle speed reaches 15 km/h (default setting)

(Auto unlock)

- Syncro Off: Disable the automatic door unlocking function.
- IG-OFF Sync: Unlock all doors when the key is pulled out from the ignition switch.

(Alarm)

 You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

Lights

(Lane change setting)

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever immediately after moving it.

Antitheft

(Shock sensor system setting)

You can change the on/off of the shock sensor.

(Shock sensor P setting)

You can adjust the pre-warning sensitivity of shock sensor.

(Shock sensor F setting)

You can adjust the full blast warning sensitivity of shock sensor.

Display item (if equipped) ("Car color" setting)

You can change the car color of the information display.

("Calendar dis" setting)

You can select whether you show the calender on the information display or not.

("Calendar form" setting)

You can change the calendar form of the information display.

To change the calendar form, select "Calendar form" in "Display item". Then, select the display order of date, month and year.

("Fuel eco hist" setting)

Transitional indication of average fuel consumption can be switched to time indication and driving cycle indication.

("Motion hist" setting)

Indication of G position history graph at the vehicle stopped can be selected to enable or disable.

("Idling disp" setting)

Display of ENG A-STOP operation with the ignition switch in LOCK position is selectable to indicate or not to indicate.

("Idling warn" setting)

You can switch whether the information display shows the warning and indicator messages related on the ENG A-STOP system.

("Pedal op disp" setting)

Display of "Accelerator and brake" is selectable to indicate or not to indicate.

("Regen disp" setting)

You can choose that deceleration energy regenerating indicator light comes on or does not come on.

Default

(initialization setting)

If you select "YES" and push the indicator selector knob (3), all settings will be reinitialized.

Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

A tone may also sound to alert you.

If warning and indicator messages appear on the display, follow the messages.

Master warning indicator light



80P0382

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:

- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.
- When you push and hold the indicator selector knob (2) for about 2 seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is no corrected, the message will appear again after 5 seconds.

Warning and indicator messages

All model

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
72R0069	Blinks (only while vehicle is in motion)	Beep (one time from interior buzzer; only while vehicle is in motion)	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly. (#1)
RELEASE PARKING BRAKE	Blinks	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.

^(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
LIGHTS ON 52RM21170	Blinks	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.
LOW FUEL 52RM21180	Off	Beep (one time from interior buzzer)	Fuel is low. Refill it immediately. (#1)

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

SERVICE START SYSTEM	Blinks	Beep (one time from interior buzzer)	There is a problem with the immobilizer. Also, the vehicle lead-acid battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle lead-acid battery, have your vehicle inspected by a Maruti Suzuki authorised workshop.
SERVICE STEERING LOCK SYSTEM	Blinks	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Vehicle with ESP® system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
ESP SERVICE ESP SYSTEM 52RM21340	Blinks	Beep (one time from interior buzzer)	There may be a problem with ESP [®] system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.
Hill hold control system ESP HILL HOLD DISABLE	Blinks	Beep (one time from interior buzzer)	There may be a problem with hill hold control system (if equipped). Have your vehicle inspected by a Maruti Suzuki authorised workshop.
52RM21350			

ESP[®] is a registered trademark of Mercedes-Benz Group AG.

Warning and Indicator Lights Brake System Warning Light



82K170

Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned "ON".
- The light comes on when the parking brake is engaged with the ignition switch in "ON" position.
- The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system.

If this happens:

1) Pull off the road and stop carefully.

WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- Test the brakes by carefully starting and stopping the vehicle on the shoulder of the road
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorised workshop for repairs or tow the vehicle to the nearest a Maruti Suzuki authorised workshop for repairs.

WARNING

If any of the following conditions occur, you should immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned "ON".
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Anti-Lock Brake System (ABS) Warning Light



65D529

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ARS

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to LOCK position and then start the engine again.

If the warning light comes on briefly and then turns off, the system is normal. If the warning light still stays on, something is wrong with the system. If the light and the brake system warning light stay on or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and then anti-lock function of the ABS system.

If one of the above occurs, have the system inspected by a Maruti Suzuki authorised workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Anti-Lock Brake System (ABS)" in "OPERAT-ING YOUR VEHICLE" section.

Engine Oil Pressure Warning Light



50G051

When the ignition switch is turned "ON" or, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorised workshop before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the engine oil pressure warning light to indicate the need to add oil. Periodically check the engine oil level.

ESP® Warning Light (if equipped)



52KM133

 $\mathsf{ESP}^{\mathbb{B}}$ is a registered trademark of Daimler AG.

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- · Traction control system

If this light blinks, drive carefully.

When the ignition switch is turned "ON", the light comes on briefly so you can check that the light is working. If the light stays on or comes on when driving, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by a Maruti Suzuki authorised workshop.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®) (if equipped)" in "OPERATING YOUR VEHICLE" section.

WARNING

The ESP[®] systems cannot prevent accidents. Always drive carefully.

ESP® OFF Indicator Light (if equipped)



73R0196

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the ESP $^{\circledR}$ OFF switch is pushed to turn off the ESP $^{\circledR}$ systems (other than ABS), the ESP $^{\circledR}$ OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®) (if equipped)" in "OPERATING YOUR VEHI-CLE" section.

Engine coolant temperature warning light (if equipped)



69RH179

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

This indicator has the following two following functions.

Low engine coolant temperature light (blue color)

This light stays on while the engine is still cold and goes off when the engine has warmed up.

If this light blinks, there is a problem with the system. Have your vehicle inspected by an authorized Maruti Suzuki workshop.

High engine coolant temperature warning light (red color)

If this light blinks while driving, it means the engine is running hot. Avoid driving conditions that may lead to actual overheating. If the light stays on without blinking, then the engine is overheating. Follow the instructions in "Engine trouble: Overheating" of "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Charge Warning Light



50G052

When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is something wrong with the lead-acid battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a Maruti Suzuki authorised workshop.

Driver's Seat Belt Reminder Light / Front Passenger's Seat Belt Reminder Light



60G049

When the driver or front passenger does not buckle his or her seat belt, this light will come on and/or blink.

For details of the seat belt reminder, refer to "Seat Belts and Child Restraint Systems" in "FOR SAFE DRIVING" section.

Rear Passenger's Seat Belt Reminder Light

Instrument Cluster



72RM02003

The reminder lights remind the rear passengers to fasten their seat belts. For details of the seat belt reminder, refer to "Seat Belt Reminder" in "FOR SAFE DRIVING" section.

AIRBAG Warning Light



63J030

When the ignition switch is turned "ON", this light comes on for several seconds so you can check that the light is working.

The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

WARNING

If the Airbag warning light does not blink or come on briefly when the ignition switch is turned "ON", stays on for more than 10 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a collision. Have both systems inspected by a Maruti Suzuki authorised workshop.

Malfunction Indicator Light



65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a Maruti Suzuki authorised workshop to have the damage fixed.

A CAUTION

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- Do not drive or stop over such as withered grasses.
- Drive slowly if required to move the vehicle.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Immobilizer Warning Light



80JM122

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If this light blinks or stays on, there is a problem with the system.

If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask a Maruti Suzuki authorised workshop to have the system inspected.

Open Door Warning Light



54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low Fuel Warning Light



54G343

If this light comes on, refuel the fuel tank as soon as possible.

When this light comes on, a ding sounds once to remind you to refuel.

If you do not refuel, a ding sounds every time when the ignition switch is turned "ON".

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.

Electric Power Steering Light



79J039

When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by a Maruti Suzuki authorised workshop.

NOTE:

The following steering wheel operations may gradually take more effort while parking or driving at a very low speed. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent it from overheating.

- The steering wheel is operated very often.
- The steering wheel is kept in a fully turned position for a long while.

When the power steering control system cool down, the power steering system will return to its original condition.

However, repeating these operations could cause damage to the power steering system.

 This light comes on when continuing period of time of limiting the power assist in order to prevent from overheating.

 
NOTE:

If the power steering system does not work properly, it will require greater effort to steer, but you still will be able to steer.

NOTE:

If the steering is operated, you may hear noise caused by electric power steering operation. This is normal and indicates that the power steering system works properly.

Turn Signal Indicators



50G05

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.

NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be malfunction in the turn signal system.

Ask your Maruti Suzuki authorized workshop to inspect the system.

Main Beam (high beam) Indicator Light



This indicator comes on when headlight main beams (high beams) are turned on.

Illumination Indicator Light



64J045

This indicator light comes on while the position lights, tail light and/or the head-lights are on.

ENG A-STOP Indicator Light (if equipped)



72M00032

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the engine stops automatically, this light comes on.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" in "OPERATING YOUR VEHICLE" section...

ENG A-STOP OFF Light (if equipped)



72M00159

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

When you push the ENG A-STOP OFF switch, this light comes on.

The ENG A-STOP OFF indicator light blinks under the following conditions:

- If there is something wrong with the ENG A-STOP system
- If there is something wrong with the lithium- ion battery
- When the lead-acid battery is due for replacement

If the ENG A-STOP OFF indicator light blinks, have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

For details, refer to "ENG A-STOP OFF light" in the "OPERATING YOUR VEHI-CLE" section.

Deceleration Energy Regenerating Indicator Light (if equipped)



72M00168

When the ignition switch is turned to "ON" position, this light comes on briefly so you can check that the light is working.

When the deceleration energy regenerating function is working, this light comes on.

For details, refer to "SHVS (Smart Hybrid

Vehicle by Suzuki)" in "OPERATING YOUR VEHICLE" section.

Master Warning Indicator Light (if equipped)




80P0382

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the information display shows warning and indicator messages, this indicator light may also blink.

For details, refer to "Information display" in this section.

Lighting Control Lever

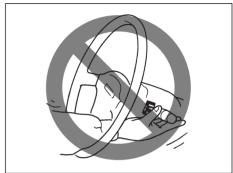


65D611

A WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Lighting Operation

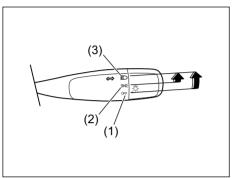

60MK011

To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF (1)


All lights are off.

30 € (2)

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

≣○ (3)

Front position lights, tail lights, license plate light, instrument lights and headlights are on.

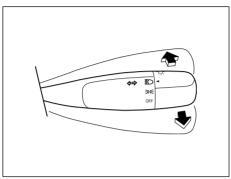

60MK012

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.


Light Reminder Buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:

The headlights and/or position lights are on even after the ignition switch is turned to "LOCK" position.

The buzzer stops sounding when you turn off the headlights and position lights.

Headlight Leveling Switch

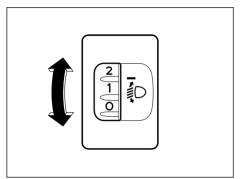


75RM008

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle-load conditions.

	Switch Position		
Loading Conditions	Except CNG model	CNG model	
Driver (1 Seat)	0	0	
Driver + Co-Driver (2 Seats)	0.5	0.5	
Driver + Co-Driver + 3rd row 2 Seats (Total-4 Seats)	2	1.5	
All Passengers (7 Seats)	2.5	2	
All Passengers + Cargo (Evenly distributed load in luggage boot)	3	2	
Driver + Cargo (Evenly distributed load in luggage boot)	4.5	4	

Turn Signal Control Lever

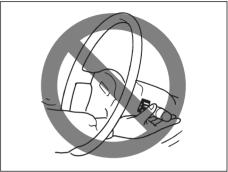

65D611


A WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Turn Signal Operation

With the ignition switch in "ON" position, move the lever upward or downward to activate the right or left turn signals.

Normal turn signal

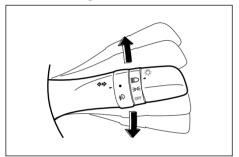

73R0059


- Move the turn signal control lever (1) as follows:
 - Turning left: Move the lever upward.
 - Turning right: Move the lever downward
- When you move the lever, the turn signal lights and the turn signal light indicators on the instrument cluster will flash simultaneously.
- When the turn is completed, the signal will cancel and the lever will return to its normal position.
- When you move the lever to its original position, the turn signal lights as well as the turn signal light indicators on the instrument cluster will be turned off.

The turn signal control lever in the Ilustration is a typical example; the actual equipment depends on the vehicle type.

NOTE:

If the angle by which you turn the steering wheel is small, the lever will not return automatically to its original position. In this case, return the lever to its original position manually.

Lane change signal

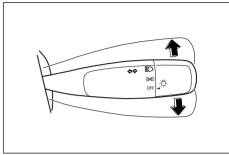

60MK014

Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.


- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.

NOTE:

 The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information display" in this section.

You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times). Please ask a Maruti Suzuki authorised workshop for the customization.

Hazard Warning Switch

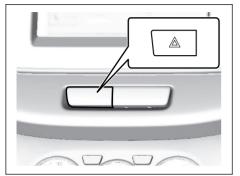

73R0011

Push the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

NOTICE

If you keep the hazard warning lights turned on for long period of time without the engine running, the leadacid battery may run out.

Do not keep the hazard warning lights on for long hours without the engine running.

Windshield Wiper and Washer Lever



57L21128

▲ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and Washer Operation

When the ignition switch is in "ON" position, you can use the wiper/washer lever or switch.


When the wipers are under heavy load such as covered by snow, the breaker will be activated and the wipers will stop operating to protect the wiper motor from overheating.

If the wiper stops during operation, do the following methods.

- 1) Stop the vehicle in a safe place, and turn the engine off.
- 2) Move the wiper lever and switch to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and the wipers will be able to use.

If you cannot use the wipers after a while, there may be another problem. Ask a Maruti Suzuki authorised workshop to have the wipers inspected.

Windshield Wipers

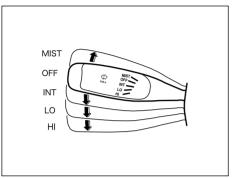


74LM02008

To turn the windshield wipers on, move the lever down to one of the three operating positions. In "INT" position, the wipers operate intermittently. "INT" position is very convenient for driving in mist or light rain. In "LO" position, the wipers operate at a steady low speed. In "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to "OFF" position.

Move the lever up and hold it to "MIST" position, the windshield wipers will turn on continuously at low speed.

Windshield Washer

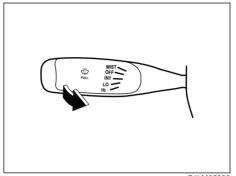

74LM02009

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and "INT" position is equipped.

WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also damage your vehicle's paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.

Tilt Steering Lock Lever

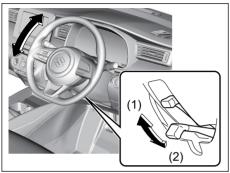

75U74EN020011

(1) LOCK (2) UNLOCK


The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- 2) Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- 3) Try moving the steering wheel up and down to make sure it is securely locked in position.

WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.

Horn

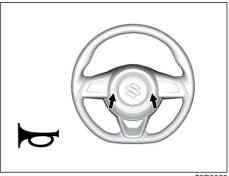

73R0062

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in "SPECIFICATIONS" section

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

WARNING


Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).

WARNING

Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer Towing your vehicle

Your MARUTI SUZUKI was originally designed to carry people and a normal amount of cargo, not to tow a trailer.

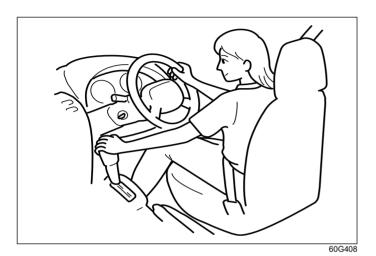

OPERATING YOUR VEHICLE

Daily Inspection Checklist	3-1
Engine Oil Consumption	
Ignition Switch	
Parking Brake Lever	
Pedal	
Starting / Stopping Engine	3-6
Using the Transmission	
Gearshift Indicator	
SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)	3-9
ENG A-STOP System (Engine Auto Stop Start System)	
(if equipped)	3-12
Parking Sensors	
Braking	
Electronic stability program (ESP [®]) (if equipped)	

Daily Inspection Checklist Before Driving



60A187S

- Make sure that windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tyres for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.

Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.

3) Look for fluid and oil leakage.

NOTE:

It is normal for water to drip from the air conditioning system while and after use.

- 4) Make sure the hood is fully closed and latched.
- Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint (if equipped).
- Check the brake pedal feeling and the adjustment condition for the parking brake lever or pedal. Refer to "Brakes" in "INSPECTION AND MAINTENANCE" section for details.
- 8) Adjust the mirrors.
- 9) Make sure that you and all passengers have properly fastened the seat belts.
- 10)Make sure that all warning lights come on as the ignition switch is turned to ON position or the ignition switch is turned "ON"
- 11) Check all gauges.
- 12)Make sure that the BRAKE SYSTEM WARNING light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery fluid (acid) level
- 5) Windshield washer fluid level
- 6) Hood latch operation

Pull the hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Be sure to close the hood securely after checking for proper latch operation. See the item "All latches, hinges and locks" of "CHASSIS AND BODY" in "Periodic Maintenance Schedule" in "INSPECTION AND MAINTENANCE" section for lubrication schedule.

WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre.

Engine Oil Consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumption depends on viscosity and quality of the oil and your driving conditions.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km driving.


Oil consumption: Max. 1.0 L per 1000 km

When judging the amount of oil consumption, note that the oil may become diluted and it is difficult to judge the accurate oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

Ignition Switch

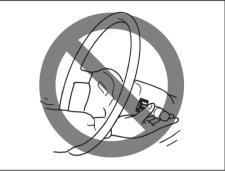


65D611

WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

OPERATING YOUR VEHICLE

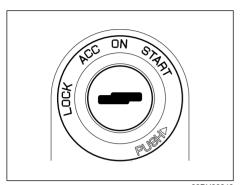


68PH00310

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

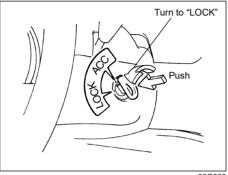

60G033

 You must push in the key to turn it to LOCK position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering wheel, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON

This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.



72RM03004

▲ WARNING

 Never return the ignition switch to the LOCK position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.

(Continued)


WARNING

 Always return the ignition switch to LOCK position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children may be able to start the vehicle or shift the transmission into neutral, which could result in an accident. There is also a danger that children may injure themselves by playing with the power windows or other moving features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

NOTICE

- Do not leave the ignition switch in ON position if the engine is not running as the lead-acid battery will discharge.
- Do not crank the engine for more than 12 seconds at a time. If the engine does not start on the first try, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult a Maruti Suzuki authorised workshop.

Parking Brake Lever

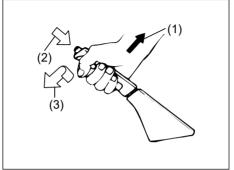

54G039

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.
- When parking on an uphill, turn the steering wheel so that the front wheels point to the center of the road.
- When parking on a downhill, turn the steering wheel so that the front wheels point to the curb.

WARNING

Whenever parking, make sure the gearshift lever is in 1st gear or "R" (Reverse). Remember, even though the transmission is in gear, you must set the parking brake fully.

WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake.
- 2) Turn off the engine, then shift into reverse or first gear.
- 3) Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake. When you return to your vehicle, you must remember to first set the parking brake, then remove the wheel chocks.

WARNING

Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:

- Gas may leak from a cigarette lighter or spray can and may lead to a fire.
- The glasses, plastic cards or CD cases, etc. may deform or crack.
- · Soft drink cans may fracture.




69RHS175

Parking Brake Reminder Buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Pedal

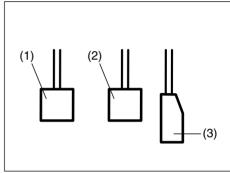

80.12121

Clutch Pedal (1)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gear-shift lever. Depressing the pedal disengages the clutch.

WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal (2)

Your vehicle is equipped with front disc brakes and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc.

WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a Maruti Suzuki authorised workshop.

WARNING


Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

Starting / Stopping Engine

Starting Engine

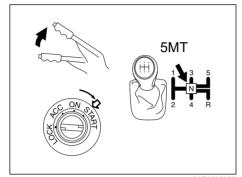

72RM03005

- 1) Check that the parking brake is set fully.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- 3) Shift into "N" (Neutral). Hold the clutch pedal and brake pedal fully depressed.
- 4) With your foot taken off accelerator pedal, crank the engine by turning the ignition key to "START". Release the key immediately after the engine has started

WARNING

Make sure that the parking brake is set fully and the transmission is in Neutral before attempting to start the engine.

NOTICE

For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine does not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult a Maruti Suzuki authorised workshop.

Starting a Cold and Warm Engine

With your foot taken off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key when the engine starts.


NOTICE

- Stop turning the starter immediately after the engine has started or the starter system can be damaged.
- Do not use the starter motor for more than 12 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult a Maruti Suzuki authorised workshop.

Using the Transmission

WARNING

Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

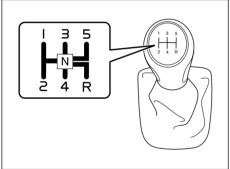

73R0014

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized, which provides for quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Ke ep the engine speed does not rise into the red zone of the tachometer.

Downshifting maximum allowable speeds

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	75
4th to 3rd	110
5th to 4th	150*

*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

NOTICE

Make sure that the vehicle is completely stationary before you shift into reverse.

NOTE:

If it is difficult to engage reverse gear [R], follow below procedure.

- 1. Put gear lever in neutral [N].
- 2. Release clutch pedal once.
- 3. Again depress the clutch pedal and shift from [N] to [R].

NOTICE

- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

NOTICE

If frequently driving at low speed using a high gear position, the life cycle of the clutch may be reduced.

Gearshift Indicator



72RH4027

In the following cases, the gearshift indicator is indicated on the information display when the ignition switch is in "ON" position.

 When the gearshift lever is in a position other than "N" (Neutral).

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated on the display while driving, we recommend you to shift up or down the gear until the arrow disappears. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to "Using the Transmission" in this section.

WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:

- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/ DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.
- If any of the electrical systems such as the ESP[®] is working, the gearshift indicator will disappear temporarily.

Example of the gearshift indicator

Indication	Description		
~4	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended. • In this case, shifting up to 4th gear position is recommended.		
•3	Current gear position is optimal for the vehicle speed and/or engine revolution. • In this case, 3rd gear position is the best.		
-2	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended. • In this case, shifting down to 2nd gear position is recommended.		

SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)

SHVS has an Integrated Starter Generator (ISG) instead of conventional generator to get a better fuel consumption.

Integrated Starter Generator (ISG) is a generator which incorporated a motor function.


The ISG has the following 3 functions.

- Deceleration energy regenerating function
- Engine power assist function
- Starter motor function

WARNING

Dripping engine oil, brake fluid and coolant, etc. to the ISG may cause a fire or malfunction. Do not spill them when pouring.

Deceleration Energy Regenerating Function

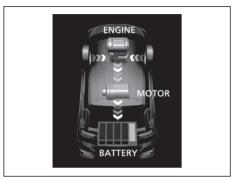

72R0096

While decelerating your vehicle, the ISG generates electricity without engine power. This reduces engine loads and improves fuel consumption.

While decelerating your vehicle, deceleration energy regenerating function will be activated when the following conditions are satisfied.


- Gearshift lever is not in "N" (Neutral).
- · Clutch pedal is not depressed.
- Engine speed is more than 950 rpm.
- Inside temperature of lead-acid battery is in normal condition.
- Lithium-ion battery is not fully charged and inside temperature is in normal condition.

etc.

NOTE:

The deceleration energy regenerating function may not work depending on vehicle conditions.

Engine Power Assist Function

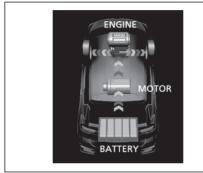

72R0097

While the vehicle is running, ISG assists engine power as a motor in the following limited condition. This reduces engine loads and improves fuel consumption.


While the vehicle is running with the engine speed at approximately 4000 rpm or less, engine power assist function will be activated when all of the following conditions are satisfied.

- SHVS system and ENG A-STOP system are working properly. ("ENG A-STOP OFF" indicator light is not blinking.)
- · Clutch pedal is not depressed.
- ESP[®] (if equipped) is not activated.
- Accelerator pedal is excessively depressed.
- Lead-acid battery and lithium-ion battery are fully charged and each inside temperature is in normal condition.
- Engine coolant temperature is in normal condition.
- ISG inside temperature is in normal condition.

NOTE:

 The engine power assist function may not work depending on vehicle conditions.

Starter Motor Function

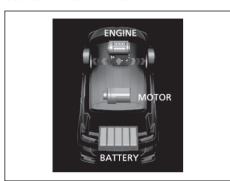

72R0098

After the engine auto stop by the ENG A-STOP system, the engine will be restarted using a cranking power of the ISG.

The starting with the ISG is quiet compared with starting by the conventional starter motor.

Lithium-ion Battery Indication




72R0099

The segments in the lithium-ion battery indicator (1) give an approximate indication of the charge of the lithium-ion battery. The number of segments that appear in the indication increases or decreases with the charge of the lithium-ion battery.

NOTE:

The indicator gives an approximate indication. The indication may be delayed or differ from the actual charge of the lithium-ion battery under certain conditions, for example, when the outside temperature is low. Also, the minimum segment is 1 bar and the bar will never be 0. Even when 1 bar is shown, the battery level may be close to be flat.

Deceleration Energy Regenerating Indicator Light

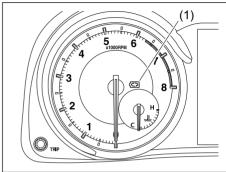

72RH4030

When the deceleration energy regenerating function is working, the deceleration energy regenerating indicator light (1) comes on.

NOTE:

If the gearshift lever is in the "N" (Neutral) position, this light does not come on.

ENG A-STOP OFF Light (if equipped)



56RM03012

If this indicator blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by a Maruti Suzuki authorised workshop.

ENG A-STOP System (Engine Auto Stop Start System) (if equipped)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the ignition switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

A CAUTION


- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
 - If the driver's seat belt is unfastened or the driver's door is opened, the engine will restart.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, turn the ignition switch to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.

NOTICE

The vehicle equipped with this system uses a dedicated high-performance lead-acid battery supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the lead-acid battery may die prematurely.

- · When replacing the lead-acid battery, use a Maruti Suzuki genuine battery specified in the Specification.
- · Do not draw power from the leadacid battery terminals for electrical products.
- If the vehicle key is in "ACC" position for extended duration, the vehicle may enter a state where the Audio / Navigation equipment may shut off. In any such event, turn the key to OFF position, and after that start the engine and let both the batteries charge for at least 30 Minutes. It is to enable better functioning of both the batteries.

Lithium-ion Battery

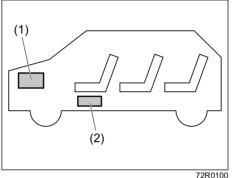

- (1) Battery (lead-acid battery)
- (2) Lithium-ion battery

This lithium-ion battery is used exclusively for the vehicle equipped with ENG A-STOP system or SHVS, and located below the front left side seat.

- · Just like a battery (lead-acid battery), the lithium-ion battery also discharges gradually. To prevent the lithium-ion battery from dying, you must charge the lithiumion battery by driving continuously for at least 30 minutes once a month.
- Vehicle should not be left with ignition in ON or ACC position, for extended periods of time.
- · Do not add any external load to lithiumion battery.
- · The lithium-ion battery is maintenancefree

• To replace or dispose of the lithium-ion battery, consult a Maruti Suzuki authorised workshop.

▲ WARNING

Wrong handling of the lithium-ion battery may result in fire, electric shock or system malfunction. Accordingly, observe the instructions listed below:

- · Do not dismount or disassemble the lithium-ion battery.
- Do not let the lithium-ion battery come in contact with water or other liauids.
- Do not apply strong impact on the lithium-ion battery.
- · Do not step on the lithium-ion battery or put articles on the lithiumion battery.
- Do not disconnect the lithium-ion battery terminals or draw power from the terminals for electrical products.
- · If lithium-ion battery gets submerged under water, it can lead to fire.


NOTE:

Lithium-ion battery, if not disposed in an eco-friendly manner and in accordance with the applicable laws, may pose safety and environmental hazard. Maruti Suzuki ensures proper disposal of this battery through established channels in an eco-

friendly manner. Owner shall return this lithium-ion battery to Maruti Suzuki authorized dealerships as soon as it is not fit for use in vehicle. Once the owner returns the lithium-ion batterv. Maruti Suzuki will ensure proper disposal in compliance with the laws to avoid legal implications to owners. If batteries are not returned to Maruti Suzuki, it will become owners' responsibility and accountability to ensure proper disposal in accordance with the applicable laws. Maruti Suzuki will not take any responsibility for consequences such as accidents or damages arising due to the abandonment, resale, inappropriate use. modification, dismantling and improper disposal of Lithium-ion battery. Contact your nearby Maruti Suzuki authorized workshop to dispose the used lithium-on battery. 'Battery Recycling Information' and necessary handling instructions are also affixed on the battery pack. For more information, connect Maruti Suzuki customer care.

Automatic Stopping/Restarting of the Engine

1) With the brake pedal depressed, decelerate the vehicle.

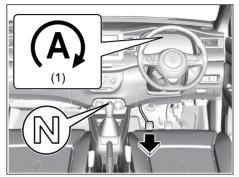

72R0101

2) After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to "N", and then release the clutch pedal, the engine will stop automatically. The ENG A-STOP indicator light (green) (1) will come on.

- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to the section, "Conditions to stop the engine automatically".
- During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.
 For details, refer to the section, "Precautions of when the engine is stopped automatically".


NOTICE

During the automatic engine stop, do not shift the gearshift lever to a position other than "N" without depressing the clutch pedal. If the gear shift lever is in a position other than "N", the engine will not restart automatically even if the clutch pedal is depressed.

NOTE:

The ENG A-STOP system will not operate and engine does not stop automatically under the following conditions:

- Engine auto stop function will be ready once the vehicle runs at a speed exceeding 6km/h after restart of the engine
- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.

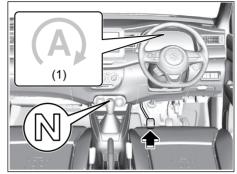

72R0102

 Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) (1) will go off.

While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

 Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.

For details, refer to the section, "Conditions to restart the engine automatically".

Precautions of when the engine is stopped automatically

WARNING

Do not perform any of the following operations while the engine has been stopped automatically. This may result in an accident.

Operation/Vehicle Condition	Solution	
 Engine hood opened The interior buzzer sounds intermittently. After the engine is stopped automatically, it stalls. The ENG A-STOP indicator light (green) goes off. 	 To restart the engine, follow the procedure below. Set the parking brake firmly, and then place the gearshift lever in the "N" position. Securely close the engine hood. Turn the ignition switch to restart the engine. 	
Driver's seat belt unfastened or driver's door opened The engine is restarted automatically. The ENG A-STOP indicator light (green) blinks 5 times, then goes off.	Fasten the driver's seat belt and/or close the driver's door.	
Gearshift lever shifted to a position other than "N" without depressing the clutch pedal, driver's seat belt unfastened and driver's door opened The interior buzzer sounds intermittently. After the engine is stopped automatically, it stalls. The ENG A-STOP indicator light (green) goes off.	To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position. 2) Close the door and buckle the seat belt. 3) Turn the ignition switch to restart the engine.	

NOTE:

The following indicator lights in the instrument cluster do not come on when the engine is stopped automatically.

• Malfunction indicator light, electric power steering light, engine oil pressure warning light, charge warning light

Operating conditions of ENG A-STOP system

Standby conditions

If all of the following conditions are met while driving, the automatic engine stop will be permitted.

When the engine is started	The engine is started with the engine hood securely closed.
When driving	 The ENG A-STOP system is not deactivated (OFF). The battery is charged more than a certain amount, and the temperature inside the battery is within the specified range. (#1) The engine coolant temperature is within the specified range. The driver's seat belt is fastened. The driver's door is securely closed. The engine hood is securely closed. There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system. (#2)

^{#1:} If the battery is discharged, for example, if the vehicle has not been used for a long time or electrical components, such as the navigation system or audio system, have not been used for a long time while the engine was stopped, it may take some time until the system can be in standby.

#2: If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

Conditions to stop the engine automatically
If all of the following conditions are met while the standby conditions are met, the engine is stopped automatically when the vehicle is decelerating before stopping or when the vehicle is stopped.

When the vehicle is stopped	The ABS or ESP® system has not been activated. Brake booster vacuum pressure is normal. The gearshift lever is in "N" position. The clutch pedal is released.
-----------------------------	---

Conditions to restart the engine automatically
If any of the following vehicle conditions occur or operations are performed while the engine is stopped automatically, the engine is restarted automatically and the ENG A-STOP indicator light (green) goes off.

	 The ENG A-STOP system is deactivated (OFF). The battery continues to be discharged. (#1) Brake booster vacuum pressure is low. (#1)
Common	 A malfunction was detected in this system. (#2) The temperature of the air from the outlets changes greatly, or the cooling and heating performance is insufficient. (#1) The temperature selector was greatly set toward COOL while cooling or greatly set
	toward HOT while heating. (#1) • The defroster is turned on. (#1) • The ABS or ESP [®] system is activated. • The clutch pedal is depressed.
When the vehicle is stopped	 The driver's seat belt is unfastened. (#1) The driver's door is opened. (#1) The vehicle is moving along a slope. (#1) Some time (about 3 minutes) has passed since the engine was stopped automatically. (#1)


#1:After the ENG A-STOP indicator light (green) blinks, it goes off. Also, the interior buzzer may sound at the same time.

#2: Depending on the situations of malfunction, it is a normal restart or the restart as #1.

ENG A-STOP OFF Switch (if equipped)

The ENG A-STOP system can be deactivated.

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.
- Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

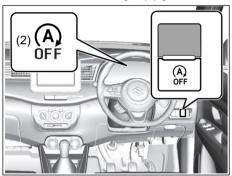

72RM03006

NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.

ENG A-STOP OFF Light (if equipped)



56RM03012

This indicator comes on in the information display.

- This indicator comes on when the ENG A-STOP system is deactivated.
- The indicator blinks when the ignition switch is turned to "ON" position, if one of the conditions listed below is met. (The ENG A-STOP system or the SHVS system does not actuate correctly while the indicator is blinking.) Have the system inspected immediately by Maruti Suzuki authorised workshop. If there is something wrong with the ENG A-STOP system, SHVS system or the lithium-ion battery.
 - An engine component (ISG) or the lead-acid battery is due for replacement.

NOTE:

If the indicator blinks during the automatic engine stop, the engine may shut down.

Parking Sensors

Information Display Symbol



72R0035


- (1) Symbol representing an obstacle detected by parking sensor*
 - * This symbol shows that an obstacle is located on the right rear of vehicle.
- The parking sensor system uses ultrasonic sensors to detect obstacles near
 the rear bumper. If obstacles are sensed
 while you are parking or moving the
 vehicle slowly, the system warns you by
 sounding a buzzer and displaying symbols representing the obstacles on the
 information display in the instrument
 cluster.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obsta-

- cle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.
- The parking sensor function can be used when the ignition switch is turned "ON", the gearshift lever is in R position. This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

WARNING

- The parking sensor warns you of obstacles with buzzers and by showing you the location of the obstacles on the information display (if equipped). However, you must still pay full attention yourself while driving.
- The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.

Sensor Locations

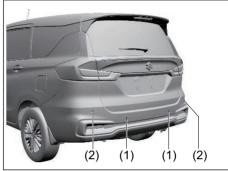

75U74EN030001

- (1) Rear center sensors (2 places)
- (2) Rear corner sensors (2 places)

NOTICE


- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorised workshop.

Working sensors

The sensors that work depends on the position of the gearshift lever as follows:

Gearshift lever	position	R	N, 1st - 5th
Rear sensors	Center	On	Off
Real Sellsols	Corner	On	Off

Approximate areas where obstacles can be detected

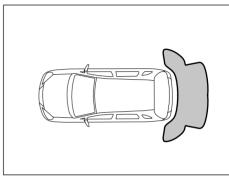

60MH126

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect an obstacle up to about 1.5 m (5 ft) from the rear of vehicle.

WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
 - Sensors are covered with mud, ice or other materials. (Such materials must be removed for normal operation.)
 - Sensors are wet from water splashes or heavy rain.
 - Sensors are covered by a hand, sticker, accessory, etc.
 - There is an accessory or other object attached within the sensor's sensing area.
 - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
 - The height of the bumper is changed due to alteration to the suspension or other causes.
 - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
 - The vehicle is on a rough surface, slope, gravel road or grass field.
 - The vehicle is at a steep angle. (Continued)

WARNING

(Continued)

- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material like wire netting and ropes
 - Square-shaped curbstones or other objects with sharp edges
 - Tall objects with a large upper part like a road sign
 - Low-profile objects such as curbstones
 - Sound-absorbing objects such as cotton and snow

NOTE:

- Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.
- The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.

Obstacle Indication by Parking Sensor

Information display symbol (if equipped)



72R0037

- (1) Obstacle detected by rear center sensors
- (2) Obstacle detected by rear corner sensors

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound and a symbol representing the obstacle appears on the information display in the instrument cluster (if equipped).

- A different symbol is displayed depending on the direction and distance of the obstacle. (if equipped)
- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.

• Warnings when obstacles are detected by corner sensors

Distance (approx.)	Buzzer	Symbol (if equipped)
45 – 60 cm	Short beeps at short intervals	Three lines
35 – 45 cm	Short beeps at very short intervals	Two lines
Less than 35 cm	Continuous beep	One line

· Warnings when obstacles are detected by center sensors

Distance (approx.)	Buzzer	Symbol (if equipped)
60 – 150 cm	Short beeps at long intervals	Three lines
45 – 60 cm	Short beeps at short intervals	111166 111163
35 – 45 cm	Short beeps at very short intervals	Two lines
Less than 35 cm	Continuous beep	One line

NOTE:

- Symbols are displayed with a short delay after the detection of obstacles.
- If the system detects multiple obstacles simultaneously, the display shows all of their positions using the corresponding symbols. However, the buzzers will sound only for the nearest obstacles.

Set sensors

You can select either the normal or trailer mode of the parking sensor via the information display. Refer to "Information display" in "BEFORE DRIVING" section.

Normal mode

All sensors operate. Use this mode under normal conditions.

Trailer mode

The rear corner and rear center sensors are inhibited from operating. Use this mode when towing a trailer.

....

NOTICE
Check that the normal mode is selected with the parking sensor when steering the vehicle into a garage. If the parking sensor is left in the trailer mode, the rear corner and rear center sensors are not functioning.

Warning and Indicator Messages

Vehicle without the information display symbol

If there is a problem or warning regarding the parking sensor system, a buzzer inform it. Follow its instruction.


• The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.

Vehicle with the information display symbol

If there is a problem or warning regarding the parking sensor system, a message is displayed on the information display in the instrument cluster, and a symbol blinks and the buzzer sounds. If a message is displayed, follow its instruction.

Message	Symbol	Buzzer	Probable cause and remedy
SERVICE PARKING SENSORS 68PH02303	Two blinking lines in a sensor location.	Series of double beeps	There may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.
CLEAN PARKING SENSORS 68PH02304	One blinking line in a sensor location.	Series of single beeps	The indicated sensor is contaminated. Wipe it clean with a soft cloth.

Braking

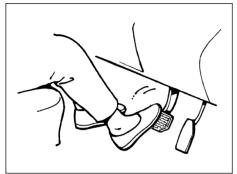

60G165S

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-Assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake assist system

When you step on the brake pedal, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

Anti-Lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.


The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal moves a little while the ABS is operating.

NOTE:

- The ABS will not work if vehicle speed is under about 9 km/h.
- If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when vou start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

WARNING

- On some types of loose surfaces (such as gravel, snow-covered roads, etc.), the stopping distance required for a vehicle with ABS may be slightly greater than the one required for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tyres are able to plow the gravel or snow laver. shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.
- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.
- In both of the above conditions. ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive too fast.

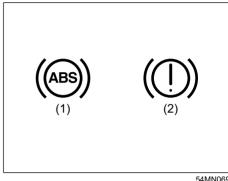

54MN069

- (1) ABS warning light
- (2) Brake system warning light

WARNING

- If the ABS warning light (1) on the instrument panel comes on and stays on while driving, there may be a problem with the ABS system. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the Brake system warning light (2) on the instrument panel simultaneously stays on or comes on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

How the ABS Works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself. This is absolutely normal and indicate that ABS is functioning properly.

WARNING

The ABS may not work properly if tyres or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tyres or wheels, use only the size and type specified in this owner's manual.

Electronic stability program (ESP®) (if equipped)

ESP[®] is a registered trademark of Mercedes-Benz Group AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

WARNING

The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents. The capabilities of an ESP®-equipped vehicle must never be used as a substitute for careful driving.

The ESP® totally manages following four systems, (stability control, traction control, ABS and Brake assist) to help enhance vehicle stability in response to various driving conditions;

Stability control system

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

Traction control system

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

NOTE:

You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

Anti-Lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard. The ABS works automatically, so you do not have to use any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that wheels are locking up. You may feel the brake pedal pulsate while the ABS is operating. (For more information on ABS, see "Braking" in this section.)

NOTE:

 The ABS will not work if vehicle speed is under about 9 km/h.

If the ABS system is activated, you may hear a clunking noise or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly

Brake assist system

When you step on the brake pedal, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

WARNING

- The ESP® may not work properly if tyres or wheels other than those specified in the owner's manual are used. When replacing tyres or wheels, use only the size and type specified in this owner's manual.
- The ESP[®] may not work properly if tyres are not inflated to the recommended tyre pressure.
- The ESP[®] may not work properly if tyres are fitted with snow chains.
- The ESP[®] may not work properly if the tyres are excessively worn. Replace tyres when the tread wear indicators in the grooves appear on the tread surface.
- The ESP[®] is not a substitute for winter tyres or snow chains on a snow-covered road.

WARNING

- The ESP® may not work properly if engine related parts such as the muffler are not equivalent to standard equipment or are extremely deteriorated
- · Do not modify the vehicle's suspension since the ESP® may not work properly.

NOTF:

- If the ESP[®] system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

The ESP® indicator lights are described below:

ESP[®] warning light



52KM133

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system

If this light blinks, drive carefully,

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

NOTICE

If the ESP® warning light comes on and stavs on while driving, there may be a malfunction of the ESP® systems (other than ABS). You should have the systems inspected by a Maruti Suzuki authorised workshop.

NOTF:

When the ESP® warning light comes on and stays on while driving, indicating a malfunction of the ESP® systems (other than ABS), the brake system will function as an ordinary ABS with no additional FSP® functions

ESP® OFF indicator light




73R0196

You should turn the ESP® on during your ordinary driving, so that you have the benefits of all of the ESP® systems.

It may be required to turn the ESP® svstems (other than ABS) off if your vehicle is stuck in sand, mud, or snow, where wheel spin is necessary.

ESP® OFF switch

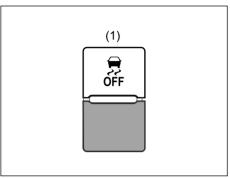

75U74EN050025

(1) ESP® OFF switch

When the ESP® OFF switch located at the instrument panel is pushed and held to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light in the instrument cluster comes on.

When you have turned the ESP[®] systems (other than ABS) off, turn them back on before resuming ordinary driving.

When you push the ESP® OFF switch again, the ESP® OFF indicator light will go out and all of the ESP® systems will be activated.

ABS warning light / brake system warning light

See "Braking" in this section.

Hill hold control system (if equipped)

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps to prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

▲ WARNING

- Do not rely excessively on the hill hold control system. The hill hold control system may not prevent the vehicle from rolling downward on a hill under all load or road conditions. Always be prepared to depress the brake pedal to prevent the vehicle from rolling downward. Failure to pay attention and depress the brake pedal to hold the vehicle on a hill when necessary, may result in loss of control or an accident.
- The hill hold control system is not designed to stop the vehicle on a hill.
- After you release your foot from the brake pedal, accelerate the vehicle to move up immediately. If you release your foot from the brake pedal over 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of slope. And, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage.

The hill hold control system activates for a maximum of about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.


- 1) The gearshift lever is in a forward gear or reverse gear.
- 2) The parking brake is released.
- 3) The vehicle is on an upward incline.

On models equipped with the ENG ASTOP system, the hill hold control system is activated when the engine is restarted after being stopped automatically, even if the previous conditions are not met.

NOTE:

When the hill hold control system is activated, the following conditions may be found, but this is not a malfunction.

- You may hear a sound from the engine room.
- As brake pedal becomes heavy, it may be difficult for you to depress it.

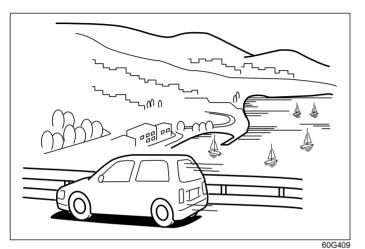

DRIVING TIPS

Running-in	4-1
Catalytic Converter	4-1
Improving Fuel Economy	4-2
Highway Driving	4-3
Driving on Hills	4-3
Driving on Slippery Roads	4-4
Off-road Driving	4-6
When Encountering a Flooded Area	4-6
Do's and Dont's for safe driving	4-7
Margin for safety	4-9



55RM04002

WARNING

- Fasten Your Seat Belts at All Times. Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times. using the seat belts provided. Refer to "Seat Belts and Child Restraint Systems" section for instructions on proper use of the seat belts.
- · Never drive while under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to vourself and others. You should also avoid driving when you are tired, sick, irritated, or under stress.


Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- · After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km (200 miles) of driving.
- · Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.

Catalytic Converter

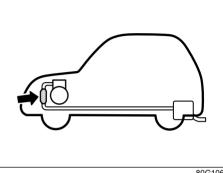

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However. it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfiring or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.
- Avoid driving your vehicle at excessively high engine speed in or around the red zone of the tachometer.



54G584S

WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving Fuel Economy

NOTE:

Fuel economy (mileage) of the vehicle may vary due to several factors i.e., driving habits - gear change pattern, usage of A.C, Air pressure in the tyres, wind speed, traffic conditions, fuel quality- non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you park your vehicle for more than one minute, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

Avoid "fast" starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.


Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

Keep the air cleaner clean

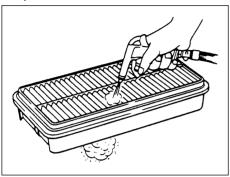

60A183S

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Keep tyre pressures correct

Under-inflation of the tyres can waste fuel due to increased rolling resistance of the tyres. Keep your tyres inflated to the correct pressure shown in the label on driver's door lock pillar.

Highway Driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

Driving on Hills



72RH4014

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

While moving uphill/ gradient from a standstill condition

- Apply the parking brake firmly so that the vehicle does not roll backwards.
- Depress the clutch pedal and shift the gearshift lever to 1st select position.
- Do not slip the clutch.
- When ready to start, press accelerator pedal and slowly release the clutch pedal simultaneously. When the vehicle starts to move, gradually release the parking brake.


A WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE

When descending a downhill, Never turn the ignition key to "LOCK" position. Emission control system damage may result.

Driving on Slippery Roads

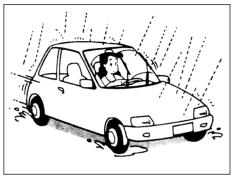

60G089S

On wet roads, you should drive at a lower speed than you do on dry roads due to possible slippage of tyres during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Snow Chains

Snow chains should only be used if they are needed to increase traction or are required by law. Make sure that the chains you use are the correct size for your vehicle's tyres. Also make sure that there is enough clearance between the fenders and the chains as installed on the tyres.

Install the chains on the front tyres tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

Stuck Vehicle

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

 Shift the transmission back and forth between first gear and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting. Do not race the engine. Excessive wheel spin will cause the tyres to dig deeper, making it more difficult to free the vehicle.

NOTE:

If your vehicle is equipped with the ESP®, you may have to turn the ESP® system off in order to allow spinning the wheels.

2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult a Maruti Suzuki authorised workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by other vehicle with a towing cable or chain secured to the towing eye either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame Hooks" in "OTHER CONTROLS AND EQUIPMENT" section.

WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/ or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transmission damage.



54G638S

WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.

- Make sure your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tyres other than those specified by MARUTI SUZUKI. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.
- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps, causing vehicle damage or tyre failure.

(Continued)

A WARNING

(Continued)

• After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Off-road Driving

Do not drive in the field covered with grown grass

If you drive in the field covered with grass, it may cause accident or vehicle damage by getting caught in grown grass.

NOTICE

If the following cases, the bumper or the lower part of the vehicle could get damaged. Ensure proper care.

- Entering the areas where there is uneven road surface, such as road shoulder
- Driving on roads with grooves, bumps or potholes

When Encountering a Flooded Area



80J042

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe place while checking the brake effectiveness. Then, ask a Maruti Suzuki authorised workshop to check the following inspection items.

- Function of brake
- · Function of electrical components
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.

NOTICE

Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine and transmission damages, etc.

If the vehicle get stuck in deep water do not start the engine.


Do's and Dont's for safe driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

Starting

- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.

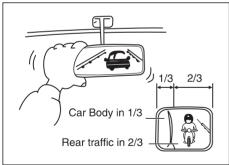

72RM04001

- Before moving, look around your vehicle to confirm safety.
- 4) Don't accelerate suddenly, since it is dangerous and wastes fuel.

General Driving


- Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
- Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.



72RM04002

- Turn on the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit.
- Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.


- 5) When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.
- Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
- Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
- 8) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatigued.

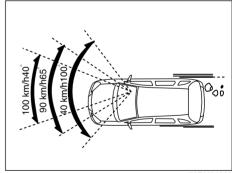

72RM04003

- Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
- 10)When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

Braking

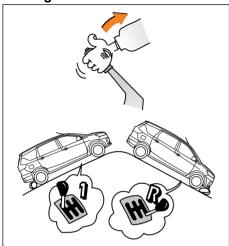

72RM04004

- Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
- 2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tires are worn out as they skid more.



72RM04005


Use foot brake in three stages

- 1. Warn the vehicle behind you.
- 2. Gradually apply the brake.
- 3. Bring the vehicle to a halt.
- When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.

Long Distance Driving

- 1) Be sure to perform safety checks before starting a trip.
- Take rest at regular intervals to prevent accidents which may occur due to feeling sleepy or tired.

Night Time Driving

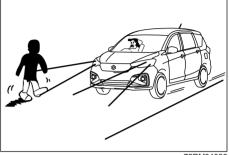

72RM04006

- Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
- Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicleto-vehicle distance.



72F-08-021

- 3) Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.
- Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.


Margin for safety

It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- · Observe traffic rules and regulations.


Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience. Follow the do's and dont's listed, and driving will never be the same again.

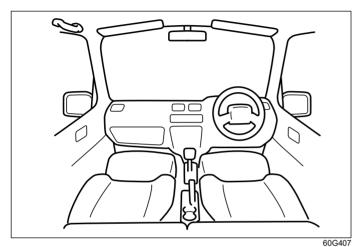

Heating and Air Conditioning System	5-1
Manual Heating and Air Conditioning System	5-4
Radio Antenna	
Installation of Radio Frequency Transmitters	5-10
Audio System	
Fuel Filler Opening	
Engine Hood	
Sun Visor	5-5 [,]
Interior Light	
Accessory Socket	5-54
Assist Grips	5-5
Glove Box	5-5
AUX/USB Socket (if equipped)/	
USB Socket (if equipped)	5-50
USB Charging Socket (if equipped)	5-5
Cup Holder and Storage Area	5-5
Footrest	5-6
Front Seat Back Pocket (if equipped)	5-60
Luggage Box (if equipped)	5-60
Frame Hooks	

Heating and Air Conditioning System Air Outlet

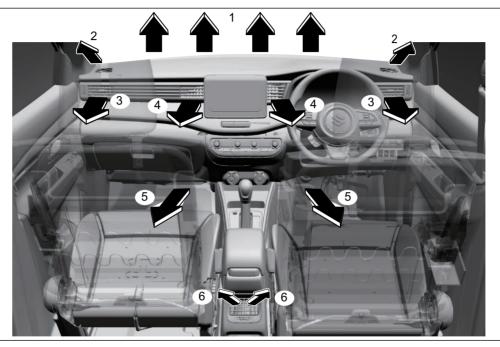


75U74EN050021

- 1. Windshield defroster outlet
- 2. Side defroster outlet
- 3. Side outlet

- 4. Center outlet
- 5. Floor outlet
- 6. Rear outlet

Center outlet

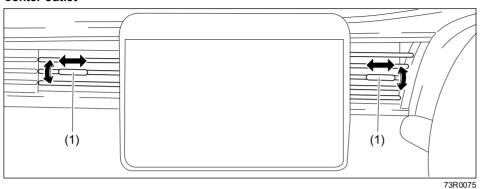


Move the knob (1) vertically or horizontally to adjust the direction of air flow as desired.

A CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Side outlet and rear outlet (if equipped)

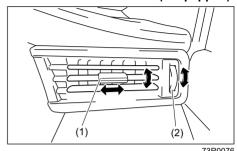

73R0076



75U01ER050004

When open, air comes out regardless of the air flow selector position.

Move the knob (1) vertically or horizontally, to adjust the direction of air flow as desired.


The side outlet opens when you turn the dial (2) upward and closes when you turn it downward.

The rear outlet (if equipped) opens when you turn the dial (2) to the right and closes when you turn it to the most left.

A CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Rear air conditioning system (if equipped)

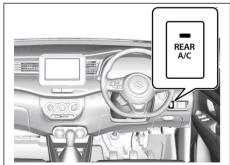

75U74EN050022

To turn on the rear air conditioning system, push in "REAR A/C" switch located on the

instrument panel and the indicator in the switch turns on.




And set the rear blower speed selector (1) to a position other than off.

Side outlet for 3rd row seat



75U74EN050002

The side outlet is located only on the right side panel near the 3rd row seat.

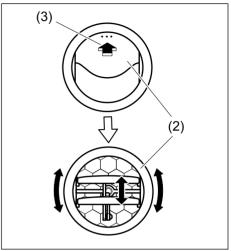


75U74FN050011

To open the louver (2), push the arrow part (3) as shown in the illustration. To adjust the direction of the air flow, move up or down or turn the opened louver (2).

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature. Less operation of the compressor results in better fuel economy.

Manual Heating and Air Conditioning System

Description of Controls

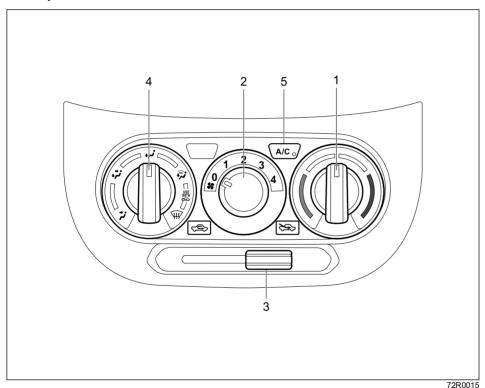

- Temperature selector
 Blower speed selector
 Air intake selector
- 4. Air flow selector
- 5. Air conditioning switch


Temperature selector (1)

This is used to adjust the temperature.

Blower speed selector (2)

This is used to turn on the blower and to select blower speed.

Air intake selector (3)

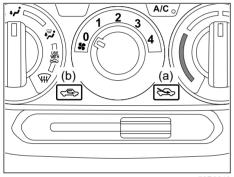

72R0016

This selector is used to select the following modes.

FRESH AIR (a)


When this mode is selected by moving the lever to right, outside air comes in.

RECIRCULATED AIR (b)

When this mode is selected by moving the lever to left, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down / warm up the interior or to reduce unwanted odor from entering the vehicle.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.

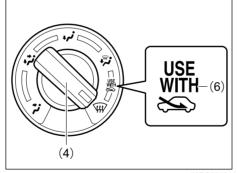


52RS50181

NOTE:

The mark of "USE WITH" (6)

To clear fog on the windshield and/or the side windows quickly, set the air flow selector (4) to "HEAT & DEFROST" or "DEFROST" and air intake selector (3) to "FRESH AIR". These positioning will clear the fogged windshield and/or the side windows faster than the "RECIRCULATED AIR".


Air flow selector (4)

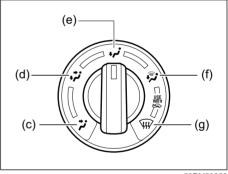

52RM50250

This is used to select one of the following functions.


VENTILATION (c)

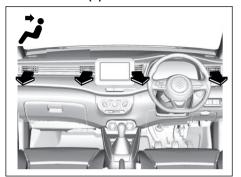

75U74EN050012

Temperature-controlled air comes out of the center and side outlets.


BI-LEVEL (d)

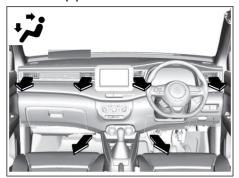

75U74EN050013

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.


HEAT (e)

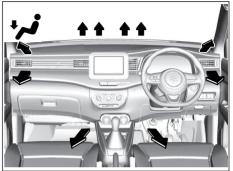

72R0017

Temperature-controlled air comes out of the floor and side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


HEAT & DEFROST (f)

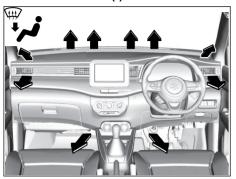

72R0018

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets

DEFROST (g)

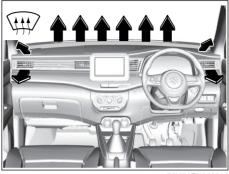

75U74EN050014

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is working. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System Operating Instructions

Natural ventilation

Select VENTILATION and FRESHAIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The base settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency

Quick heating (using recirculated air)

The base settings are the same as for normal heating except you select RECIRCU-LATED AIR. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AIR. the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION. the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCU-LATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The base settings are the same as for normal cooling except you select RECIRCU-LATED AIR and the highest blower speed.

NOTE:

 If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.


· If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

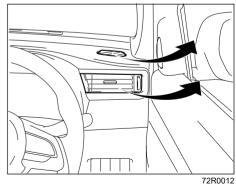

NOTE:

If you need maximum defrosting:

- select DEFROST and FRESH AIR,
- · set the blower speed selector to high,
- adjust the temperature selector to the hot end.
- turn on "A/C" switch, and
- adjust the side outlets so the air blows on the side windows.

Models with ENG A-STOP System (if equipped)

- If the air conditioning performance can no longer perform at a sufficient level due to automatically stopping the engine, press the "ENG A-STOP OFF" switch to deactivate the ENG A-STOP system. (The engine will automatically restart and the air conditioning performance will be restored.)
- If the windshield and/or the driver's side/ passenger side door windows are fogged during automatically stopping the engine, stop the ENG A-STOP system and restart the engine. Then, turn the air flow selector (4) to change the air flow to the "Heat & defrost" or "Defrost" position to defog the windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section.

In dusty conditions, if temperature selector, air flow selector and air intake selector knobs are not operated, knob operation may become hard. Operate knobs end to end, at least 2-3 times once a month, for smooth operation of the knobs. More frequent operation is recommended if dust condition is severe.


NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called "R-134a". R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio Antenna

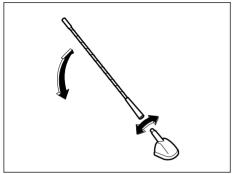

68KH052

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTE:

Adjust the antenna angle to maximum for optimum radio reception.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.

Installation of Radio Frequency Transmitters

We recommend that you always ask a Maruti Suzuki authorised workshop about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system or any other electrical systems resulting in vehicle performance problems. Consult a Maruti Suzuki authorised workshop for advice.

Audio System Safety Information

A WARNING

If you pay too much attention to operating the audio system or watching the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying too much attention to operating the audio system or watching the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.
- Set the sound volume to a level that will allow you to continue to be aware of surrounding road and traffic conditions while driving.

NOTICE

While the engine is stopped, using the navigation or audio equipment for a long period of time may cause the lead-acid battery to run out. Do not use the navigation or audio equipment for a long period of time while the engine is stopped.

Bluetooth


The Bluetooth[®] word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Ink.

Stop using this unit and a Bluetooth® ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

Basic Operations

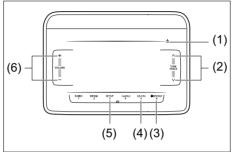

73R0137

- (1) POWER button
- (2) "TUNE/TRACK" Up/Down button
- (3) "ENTER" button
- (4) BACK button
- (5) "SETUP button
- (6) "VOLUME" button

Turning power on/off

Touch the POWER button (1).

The audio system starts in the function mode it was in when the power was turned off last.

 Touching the POWER button (1) for 1 second or longer can turn off the audio system.

Slide touch operation

Operate several functions with the slide touch operation. Touch the panel and slide up or down with your finger for increase/ decrease or up/down operation.

NOTE:

Pay caution to the following content regarding slide touch operation:

- The touch button may not operate properly when the touch panel or your fingers are wet. Remove any liquid before operating.
- Depending on the operation method it may react without touching.
- It may not react properly when operated with gloves on.
- When metal objects are placed near the touch panel it may cause a malfunction.
- Do not attach protective film. Otherwise, the touch panel may not operate properly.

Functions available with the slide touch operation

Mode	Function	#	^ V
Common	Volume up/down	0	-
	Item selection	_	0
Radio	TUNE up/down	_	0
USB	File up/down	_	0
	Folder up/down (folder operation mode)	_	0
iPod	TRACK up/down	_	0
	Category selection (iPod menu)	_	0
Bluetooth [®] audio	TRACK up/down	_	0
	Group up/down (Group operation mode)	_	0
Hands-free	Reception/ringtone/incoming call volume up/down	0	-
	Switching pages of the speed dial selection screen	_	0

Adjusting the volume

Touch or slide the "VOLUME" button (6).

- To increase the volume, touch if or slide upwards.
- To decrease the volume, touch or slide downwards.

NOTE:

While driving, adjust the volume to an extent that sound and/or noise coming from outside can be heard.

Sound settings

- 1) Touch the SETUP button (5).
 - •Touch for 1 second or longer when using radio mode.
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select "Sound", and touch the "ENTER" button (3).
 - •The sound setting screen will be displayed.
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select the desired item, and touch the "ENTER" button (3).
 - •The sound settings will change as follows:
 - $\begin{tabular}{ll} \bullet EQ \leftrightarrow Bass \leftrightarrow Treble \leftrightarrow Balance \leftrightarrow Fader \leftrightarrow AVC \end{tabular}$

Preset EQ

The preset EQ can set various types of sounds depending on the type of music.

- Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "Sound" screen, select "EQ", and touch the "ENTER" button (3).
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select the desired item, and touch the "ENTER" button (3).
- The preset EQ settings will change as follows:

Off (Flat) \leftrightarrow Jazz \leftrightarrow Rock \leftrightarrow Pop \leftrightarrow Classic \leftrightarrow Hip-hop

Adjusting bass/treble/balance /fader

The preset EQ can set various types of sounds depending on the type of music.

- Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "Sound" screen, select "Bass", "Treble", "Balance", or "Fader" and touch the "ENTER" button (3).
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), adjust to the desired settings and touch the "ENTER" button (3).
- "Bass"/"Treble":
 - Can be adjusted in stages from -6 to 0 to +6.
- "Balance":
 - Can be adjusted in 9 stages left to right .
- "Fader":
 - Can be adjusted in 9 stages back to front.

Adjusting the AVC (Auto volume control)

The Auto Volume Control (AVC) function automatically adjusts (increases/ decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with three selectable levels (LEVEL OFF, 1, 2, 3). The range of volume adjustment increases together with the LEVEL number.

- Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "Sound" screen, select "AVC", and touch the "ENTER" button (3).
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select the desired level, and touch the "ENTER" button (3).
- The AVC will change as follows:
 Off

 Level 1

 Level 2

 Level 3

Switching the mode

Press the "MEDIA" button (7) for 1 second or more in radio mode. You can switch the radio mode to media mode.

Touch the "RADIO" button (8) in media mode. You can switch the media mode to radio mode

System settings

Change the "Beep", "Slide", and "SW Sensitivity" settings.

- 1) Touch the SETUP button (5).
- Touch for 1 second or longer when using radio mode.
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select "System", and touch the "ENTER" button (3).
- The system setting screen will be displayed.
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select the desired item, and touch the "ENTER" button (3).
- The system settings will change as follows:

Beep ↔ Slide ↔ SW Sensitivity

BEEP on/off

- Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "System" screen, select "Beep", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select on or off, and touch the "ENTER" button (3).

Slide touch operation settings

Turn the slide operation on/off.

- Touch or slide the "TUNE/TRACK" Up/ Down button (2) from the "System" screen, select "Slide", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (2), select on or off, and touch the "ENTER" button (3).

Touch panel sensitivity settings


Change the touch panel sensitivity.

- Touch or slide the "TUNE/TRÁCK" Up/ Down button (2) from the "System" screen, select "SW Sensitivity", and touch the "ENTER" button (3).
- Touch or slide the "TUNE/TRACK" Up/ Down button (2), select Low or High, and touch the "ENTER" button (3).

NOTE:

If the touch button sensitivity is too high, set to "Low".


Radio

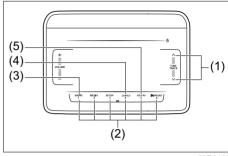

73R0138


- (1) "TUNE/TRACK" Up/Down button
- (2) Preset button
- (3) "RADIO" button*1
- (4) "CH" (channel) button
- (5) "AS" (auto store) button
- *1 Use this button to switch between manual preset and auto preset.

 DisplayManual preset



73R0139

 Auto preset



73R0140

- (A) Frequency
- (B) Band
- (C) Auto Store mode display

NOTE:

Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

Selecting the band

- 1) Touch the "RADIO" button (3) for 1 second or longer.
- Each time the button is touched, the mode will change as follows:
- AM \rightarrow FM1 \rightarrow FM2 \rightarrow AM (AS) \rightarrow FM (AS)

Seek tuning

- 1) Touch the "TUNE/TRACK" Up/Down button (1) for 1 second or longer.
- The audio system stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

1) Touch the "TUNE/TRACK" Up/Down button (1) to select the desired station.

Storing the station Manual store

- 1) Select the station and frequency.
- 2) Touch and hold the "CH" button (4) for at least 1 second.
- Hold down a desired button ([1] to [6]) of the Preset buttons (2) to which you want to store the station for 2 seconds or longer.

NOTE:

6 stations can be stored for AM, and 6 stations for each of FM1 and FM2, thus 18 stations can be stored in total.

Auto store

- 1) Touch the "AS" button (5) for 1 second or longer.
- Start searching from a station whose frequency is the lowest. When a broadcast station that can be received with a sufficient strength is discovered, it will be assigned to the AM (AS)/FM (AS) band's preset button (2). Once this process is completed the tuner will return to the first stored broadcast station.

NOTE:

- Auto store can be released by touching the "AS" button (5) while auto store is under way.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- 6 stations can be preset for FM, and 6 stations for AM in auto store mode.

Select from the preset channels Manual preset channel

- 1) Select the radio station and frequency.
- 2) Touch the "CH" button (4) for 1 second or longer.
- 3) Touch a desired button ([1] to [6]) of the Preset buttons (2).


NOTE:

Touch and hold the "CH" button (4) for at least one second to select from the preset channel list.

Auto preset channel

- Touch the "RADIO" button (3) for 1 second or longer and select AM (AS) or FM (AS).
- 2) Touch the "CH" button (4) for 1 second or longer.
- · The preset channel list is displayed.
- 3) Touch a desired button ([1] to [6]) of the Preset buttons (2).


USB

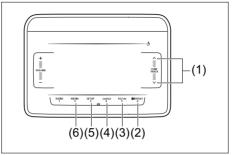

73R0141

- (1) "TUNE/TRACK" Up/Down button
- (2) "DISP/ENTER" button
- (3) BACK button
- (4) "FLD" (folder operation) button
- (5) SETUP (random/repeat) button
- (6) "MEDIA" button

 Display



73R0142

- (A) Play time
- (B) Text information display

WARNING

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.

Selecting a USB device mode

- 1) Touch the "MEDIA" button (6).
- Each time the button is touched, the mode will change as follows: USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)...

Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/ Down button (1).
- A: Hold down the Up button for 1 second or longer to fast forward the track.
- W: Hold down the Down button for 1 second or longer to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to listen to the next track.
- W: When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

Selecting a folder

- 1) Touch the "FLD" (folder operation) button (4).
- 2) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to move to the next folder.
- ■: Touch the Down button to move to the previous folder.

Repeat playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Each time the "DISP/ENTER" button (2) is touched, the mode will change as follows:
 - Off \rightarrow One song repeat \rightarrow Folder repeat ...

Random playback

- 1) Touch the SETUP (random/repeat) button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Random", and touch the "DISP/ENTER" button (2). Each time the "DISP/ENTER" button (2) is touched, the mode will change as follows:

Off \rightarrow Folder random \rightarrow All random ...

Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows: MP3/AAC:

Artist name/Track title \rightarrow Album name/Track title \rightarrow Folder name/File name... WMA:

Artist name/Track title \rightarrow Folder name/ File name ...

NOTE:

- "NO TITLE" will be displayed when there is no text information in the USB device currently being played.
- "..." is displayed if all text data cannot be displayed. Touch and hold the "DISP/ENTER" button (2) for at least 1 second to automatically display the rest of the text data.

Notes on USB device Compatible USB devices

- USB Mass Storage Class For details as to whether your USB memory/USB Audio is compatible with USB Mass Storage Class, please contact the USB memory/USB Audio manufacturer.
- Audio file MP3 (.mp3)/WMA (.wma)/AAC (.m4a)/ AAC (.aac)
- File System FAT 12/16/32,VFAT (supporting long file name)
- USB Standard Compatibility 1.1/2.0 Full Speed
- If a USB hub or extension cable is connected to the audio system, it may not be recognized. In this case, directly connect the USB device to the audio system.
- Devices such as MP3 players/mobile phones/digital cameras may not be recognized as audio systems for playing music.

USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port.
- Depending on the USB flash drive that you are using, (non-brand product, USB flash drive that has been externally damaged) it may disable connection or cause unstable operation.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand.
 We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA format.

Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.
- The DRM (Digital Rights Management) file cannot be played.

Compression formats

MP3

- Bit rate MPEG1 Audio Layer III: 32 up to 320 kbps MPEG2 Audio Layer III: 8 up to 160 kbps MPEG2.5 Audio Layer III: 8 up to 160 kbps
- VBR: up to 384 kbps (MAX.)
- Sampling frequency MPEG1 Audio Layer III: 32/44.1/48 kHz MPEG2 Audio Layer III: 16/22.05/24 kHz MPEG2.5 Audio Layer III: 8/11.025/12 kHz
- Channel Stereo/Joint stereo/Dual channel/Monaural
- ID3 tag ID3v1.x/ID3v2.x

WMA

- Windows Media Audio Ver.7/Ver.8/Ver.9 Standard compliant
- · Bit rate: 32 up to 320 kbps
- VBR: up to 384 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- WMA tag: Ver.8.0
- Channel: 2 Channels

AAC

- Bit rate: 16 up to 320 kbps
- VBR: up to 320 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- AAC tag: iTunes m4a metadata


Maximum number of files/folders

- Maximum number of files: 2500
- · Maximum number of files in a folder: 255
- · Maximum number of folders: 255
 - Root folder and empty folder are included
- · Maximum depth of tree structure: 8

NOTICE


Never use ".mp3", ".wma" or ".m4a" as a file name extension if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.

iPod

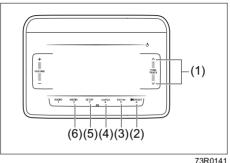

- (1) "TUNE/TRACK" Up/Down button
- (2) "DISP/ENTER" button
- (3) BACK button
- (4) "FLD" (iPod menu) button
- (5) SETUP (shuffle/repeat) button
- (6) "MEDIA" button

 Display



73R0143

- (A) Play time
- (B) Text information display

Selecting an iPod mode

- 1) Touch the "MEDIA" button (6).
- · Each time the button is touched, the mode will change as follows: USB (iPod) (if equipped) → Bluetooth® audio (if equipped) \rightarrow AUX (if equipped)

Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/ Down button (1).
- A: Hold down the Up button for 1 second or longer to fast forward the track.
- V: Hold down the Down button for 1 second or longer to fast rewind the track.
- · Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to listen to the next track.
- When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

Select a category

- 1) Touch the "FLD" (iPod menu) button (4).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired category, and touch the "DISP/ENTER" button (2).
- The Song selection mode for each category will be displayed as follows.
 - Playlists: Playlists → Songs
 - Artists: Artists → Albums → Songs
 - Songs: Songs
 - Genres: Genres → Artists → Albums
 → Songs
 - Radio: Station
 - Audiobooks: Audiobooks
 - Podcasts: Podcasts → Episodes
 - i Tunes U: i Tunes U → Episodes

NOTE:

Categories is not displayed if the no files in the category.

Repeat playback

- 1) Touch the SETUP (shuffle/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Touch the "DISP/ENTER" button (2).
 Each time the button is touched, display will change as follows:
 The repeat mode will vary depending on your device.
 Off → 1 song repeat → All repeat ...

Random playback

- 1) Touch the SETUP (shuffle/repeat) button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Shuffle", and touch the "DISP/ENTER" button (2).
- Touch the "DISP/ENTER" button (2). Each time the button is touched, display will change as follows: Off → Shuffle → Album shuffle ...

Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows: Artist name/Track title → Album name/ Track title → Playlist name/Track title ...

NOTE:

- "NO TITLE" is displayed if the file currently being played has no text data.
- "..." is displayed if all text data cannot be displayed. Touch and hold the "DISP/ ENTER" button (2) for at least one second to automatically display the rest of the text data.
- "Playlist name/song name" is only displayed by the "FLD" (Menu) button (4) when music is selected from Playlists.

Notes on iPod Made for iPod

- · iPod touch:
 - iPod touch (6th generation)
- iPhone:
 - i Phone 5s
 - i Phone 6
 - i Phone 6 Plus
 - i Phone 6s
 - i Phone 6s Plus
 - i Phone SE
 - i Phone 7
 - i Phone 7 Plus

NOTE:

Some functions may not be available depending on the model of iPod.


iPod



73R0217

- "Made for iPod" and "Made for iPhone" means that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this unit or its compliance with safety and regulatory standards.
- Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- · Lightning is a trademark of Apple Inc.

AUX

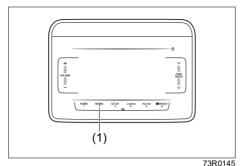

/

(1) "MEDIA" button

Display



73R0146

NOTICE

- Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.


AUX selection

- 1) Touch the "MEDIA" button (1).
- Each time the button is touched, the mode will change as follows: USB (iPod) (if equipped) → Bluetooth[®] audio (if equipped) → AUX (if equipped)


NOTE:

 Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.

Setting of Bluetooth® devices

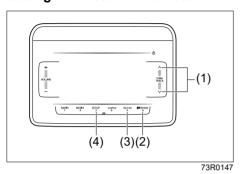

Steering switch (if equipped)

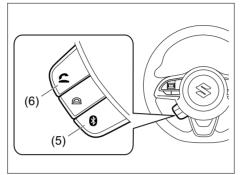

73R0148

- (1) "TUNE/TRACK" Up/Down button
- (2) "ENTER" button
- (3) BACK button
- (4) SETUP button
- (5) Bluetooth® button
- (6) Off-hook button

A CAUTION

Do not register or set the Bluetooth[®] device while driving. Stop your vehicle in a safe area before registering the device.

Registration of Bluetooth® devices
To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system. Up to 5 Bluetooth® devices can be registered.

NOTE:

- Certain functions cannot be used depending on the Bluetooth[®] device.
- Refer to the user manual included with your device regarding the operation method of Bluetooth[®] devices.
- Some Bluetooth[®] enabled phones may not be compatible fully and or partially with the audio unit.
- Bluetooth[®] / Telephone setup mode can be entered only when the vehicle is stationary.
- If the pairing cannot be established, the connection operation is canceled. For the Bluetooth[®] device pairing method, refer to the user manual included with your device or try pairing again.
- 1) The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch Press the Bluetooth® button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Pairing", and touch the "ENTER" button (2).
- The passkey will be displayed.

- Operate and register the Bluetooth[®] device.
 - Secure Simple Pairing (SSP) incompatible Bluetooth® device: Enter the passkey into the Bluetooth® device.
 - Secure Simple Pairing (SSP) compatible Bluetooth device: Select "Yes" to register the Bluetooth device.
- It is possible to automatically register devices depending on the type of Bluetooth[®] device.

NOTE:

- If the Bluetooth[®] device contains music player and mobile phone function, both functions will be registered simultaneously. When deleting a Bluetooth[®] device, both functions will be deleted simultaneously.
- If a mobile phone is not registered and the off-hook button (6) is pressed and the telephone mode is selected, it will automatically switch to "Pairing".
- When pairing with a mobile phone is established, it is possible to automatically transfer the phonebook and call history. If you wish to conduct an automatic transfer press "YES" and if not, press "NO".

Set from the list of mobile phones

The list of paired mobile phones is displayed and the various settings can be changed.

- The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4). Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth® button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "List Phone", and touch the "ENTER" button (2).

Connect a registered mobile phone

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Select", and touch the "ENTER" button (2).

Disconnect a connected mobile phone

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Disconnect", and touch the "ENTER" button (2).

3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

Delete a registered mobile phone

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Phone" screen, select the name of the desired mobile phone, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Delete", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

Set from the Bluetooth® audio list

The list of paired Bluetooth[®] audio is displayed and the various settings can be changed.

- 1) The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4). Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth® button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).

 Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "List Audio", and touch the "ENTER" button (2).

Connect a registered Bluetooth® audio

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth[®] audio, and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Select", and touch the "ENTER" button (2).

Disconnect a registered Bluetooth® audio

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Disconnect", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

Delete a registered Bluetooth® audio

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Delete", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

NOTE:

- In case audio device does not re-connect after following above steps, delete your audio device from registered list of audio by following steps 1) to 3) of "Delete a registered Bluetooth® audio" mentioned above. Register the audio device again by referring to "Registration of Bluetooth® devices" and follow steps 1) to 4).
- Some audio device may not re-connect automatically. For such cases, follow steps 1) to 2) of "Connect a registered Bluetooth® audio" mentioned in further pages of this section.

Select a connection method

It is possible to switch connection methods when the Bluetooth[®] audio is registered to the audio system and the audio system and Bluetooth[®] audio are not connected.

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth[®] audio, and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Connect Method", and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the connection method, and touch the "ENTER" button (2).
- From Vehicle: Operate from the audio system to connect to the Bluetooth[®] device.
- From Audio: Operate from the Bluetooth[®] device to connect to the audio system.

Change of Passkey

- The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch Press the Bluetooth® button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Passkey", and touch the "ENTER" button (2).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).
- 5) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select a number between 0 and 9, and touch the "ENTER" button (2). Repeat this operation several times.
- Enter the passkey one digit by one digit.
- The passkey must be between 4 to 8 digits.
- In order to cancel the number that you entered and return to the previous digit, touch the BACK button (3).
- If you do not enter a number that is 4 or more digits and re-touch the "ENTER" button (2), the passkey will be registered.

Automatic connection with the Bluetooth® device

If the "Bluetooth Power" is set to ON, turning the ignition switch to ACC will automatically connect the registered Bluetooth $^{\circledR}$ device.

- With the automatic connection, the Bluetooth[®] device that was connected last will be prioritized.
- 1) The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4). Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth Power", and touch the "ENTER" button (2).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "On" or "Off", and touch the "ENTER" button (2).

NOTE:

- When "Bluetooth Power" is set to "OFF", the audio system disconnects from the registered Bluetooth[®] device.
- If "Bluetooth Power" is set to "Off", the audio system will not automatically

reconnect the next time the ignition is switched on.

The device status will be displayed

- 1) The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4). Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Bluetooth Info", and touch the "ENTER" button (2).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired status, and touch the "ENTER" button (2).
- To display the device name, select "Device Name".
- To display the device address, select "Device Address".

Initialize

It is possible to initialize the audio system's Bluetooth[®] settings or device information.

A CAUTION

- Do not initialize the settings while driving. Stop your vehicle in a safe area before initializing the device.
- Initialize with caution. Initialized settings and history cannot be restored.
- The Bluetooth[®] setting screen will be displayed.
- From the panel button: Touch the SETUP button (4).
 Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
- From the steering switch: Press the Bluetooth button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Initialize", and touch the "ENTER" button (2).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the item that you want to initialize item, and touch the "ENTER" button (2).
- · HF Sound Setting:
 - Reception/ringtone volume
 - Incoming call volume

- Vehicle Passkey
- All Initialize:
 - Reception/ringtone volume
 - Incoming call volume
 - Bluetooth audio volume
 - Pairing registration
 - Phonebook/history
 - Speed dial
 - Connect Method
 - Bluetooth Power
 - Auto Transfer
- 5) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (2).

Device

Info: Notes on Bluetooth®



73R0209

 The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Denso Ten Limited is under license. Other trademarks and trade names are those of their respective owners.

This telecommunication equipment conforms to the requirements of the National Telecommunications Commission.

Stop using this unit and a Bluetooth[®] ready device whenever requested. This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

Profile


- · SSP (Secure Simple Pairing)
- PBAP (Phone Book Access Profile)
- OPP (Object Push Profile)
- HFP (Hand-Free Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)

Disclaimer for Bluetooth® function

- Depending on the mobile phone models, some phones may not be compatible fully or partially (some function may be restricted).
- Media playback through third-party applications may have limited support.
- Playback, display contents, connectivity or voice quality etc. may get affected depending on circumstances.
- After the ignition switch is turned to the "ON" position, the audio system takes few seconds to detect and connect to the Bluetooth® device (if already paired).
- Make sure that you are aware of all applicable local laws and accordingly use Bluetooth® device.

Bluetooth® hands-free (if equipped)

To use Bluetooth[®] devices (Bluetooth[®] audio or mobile phone) on the audio system, it is required to register the Bluetooth[®] devices to the audio system by "Bluetooth Settings".

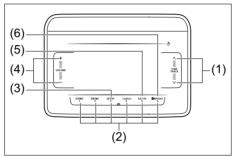


73R0150

Display




73R0151

Steering switch

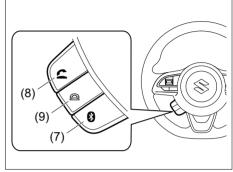

73R0152

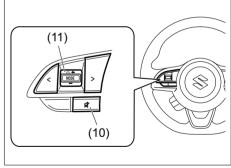

73R0153

- (1) "TUNE/TRACK" Up/Down button
- (2) Speed dial button (1-6)
- (3) SETUP button
- (4) "VOLUME" button

- (5) BACK button
- (6) "ENTER" button
- (7) Bluetooth® setting button
- (8) Off-hook button
- (9) On-hook button
- (10) Mute button
- (11) "VOL" (volume) button

NOTICE

- Do not leave your mobile phone inside your vehicle. If the temperature inside the vehicle increases, it may damage your mobile phone.
- When disposing your vehicle, make sure to delete all personal information saved to the audio system.
- The following hands-free data must be deleted from the audio system.
 - Speed dial
 - Reception history/Incoming call history
 - Bluetooth® phonebook data

NOTE:

- Please keep your phone volume low. The person's voice who you are talking to may be heard outside of the vehicle and increase the voice echo. When talking on the phone, speak clearly towards the microphone.
- In the following cases, your voice may not be heard clearly by the person on the other line:
 - When driving on unpaved roads. (If there is loud traffic noise.)

- When driving at high speeds.
- When driving with the window open.If the air conditioner is blowing directly
- towards the microphone.

 When the sound of the air conditioner
- When the sound of the air conditioner fan is loud.
- When there is an adverse effect to the sound quality of the phone or network that you are using.
- The audio system may not function under the following conditions.
 - When the phone power is not turned on.
 - When the mobile phone is out of service.
 - When the mobile phone is not connected.
- When the mobile phone battery is low
- The Bluetooth's hands-free operation is dependent upon the mobile phone's compatibility.
- The Bluetooth's hands-free performance is affected by the driving conditions of mobile phone networks, handsets and vehicles.
- The audio system's performance may be restricted due to the model of your mobile phone.

It is possible to register a mobile phone and register the phone number to the audio system as follows:

- Up to 1,000 phone numbers can be saved for every registered mobile phone.
- Up to 30 phone numbers can be saved to the call history menu (missed calls/ incoming/outgoing calls.)
 - When the call history exceeds 30 calls, they are deleted from the oldest one first, and the latest call history information is displayed in descending order.
- Up to 6 phone numbers can be saved to the speed dial list.

Answer the phone

- 1) Press the off-hook button (8).
- When you press the on-hook button (9) during an incoming call, you can block the call. (Only for compatible phone units)

NOTE:

- If you receive a call from a registered phone, the caller's name will appear on the screen.
- If you receive a call from an unregistered phone, only the caller's phone number will appear on the screen.

Hang up the phone

1) When the call is finished, press the on-hook button (9).

Make a call on call waiting

When the screen is displayed during a call, it is possible to hold the call and answer the other incoming call.

- When an incoming call is received during a call, press the off-hook button (8).
- When the call is on hold, it will connect to the other incoming call.
- To end the call waiting, press the off-hook button (8).
- When the call waiting is completed, the call on hold will connect.
- When switching the caller, press the offhook button (8) again while using the call waiting.

NOTE:

This function can only be used with phone units that are compatible with call waiting.

Mute the ringtone volume

- 1) Press the mute button (10).
- To deactivate the mute volume, press the mute button (10).

Adjust the volume Adjust the reception volume

- Touch or slide the "VOLUME" button (4) or press the "VOL" button (11) during a call.
- To increase the volume, touch slide upwards.
- To decrease the volume, touch or slide downwards.

NOTE:

The volume and microphone sensitivity settings vary depending on the specifications of each mobile phone.

Adjust the ringtone volume

- Touch or slide the "VOLUME" button (4) or press the "VOL" button (11) during an incoming call.
- To increase the volume, touch slide upwards.
- To decrease the volume, touch or slide downwards.

Adjust the volume with the Bluetooth[®] settings

- 1) Display the Bluetooth® setup menu.
- From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth® button (7).

- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "HF Sound Setting", and touch the "ENTER" button (6)
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the item that you want to adjust, and touch the "ENTER" button (6).
- Call Volume: Reception/ringtone volume
- Ringtone Volume: İncoming call volume
- 5) Touch or slide the "VOLUME" button (4).
- To increase the volume, touch slide upwards.
- To decrease the volume, touch or slide downwards.

Make a call

Press the off-hook button (8) to enter the telephone mode.

Use the phonebook

- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Phonebook", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired initials, and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the contact number, and touch the "ENTER" button (6).
- If there are multiple phone numbers for a single contact, touch or slide the "TUNE/ TRACK" Up/Down button (1), select the phone number, and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Yes", and touch the "ENTER" button (6) or press the off-hook button (8).

Use the call history

- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "All Calls," "Missed Calls", "Incoming Calls" or "Outgoing Calls" and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the contact number, and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Yes", and touch the "ENTER" button (6) or press the off-hook button (8).

Use the speed dial

- 1) Press the Off-hook button (8) for 1 second or longer.
- 2) Touch the desired speed dial button (2) (1-6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and then touch the "ENTER" button (6) or press the Off-hook button (8).

NOTE:

Speed dial numbers must be registered before this function can be used.

Transfer/delete the phonebook

- 1) Display the Bluetooth® setup menu.
- From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth® button (7).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Phonebook", and touch the "ENTER" button (6).

Transfer all contacts from your mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Phonebook" screen, select "Add Contacts", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Overwrite All", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Transfer 1 contact from your mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Phonebook" screen, select "Add Contacts", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Add One Contact", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Delete the registered phonebook

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Phonebook" screen, select "Delete Contacts", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired initials from the list or "All", and touch the "ENTER" button (6).
- When you select "All", it will transition to step 4.
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired name from the list, and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Transfer/delete the call history

- 1) Display the Bluetooth® setup menu.
- From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth® button (7).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Call History", and touch the "ENTER" button (6).

Transfer the call history

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Call History" screen, select "Overwrite History", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Delete the call history

- 1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Call History" screen, select "Delete History", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "All Calls", "Missed Calls", "Incoming Calls" or "Outgoing Calls" and touch the "ENTER" button (6).
- 3) Touch or slide the TUNE/TRACK Up/ Down button (1), select the desired data from the history or select "All", and then touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).

Registration / deletion of speed dial

- 1) Display the Bluetooth® setup menu.
- From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth® button (7).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Speed Dials", and touch the "ENTER" button (6).

Registration in speed dial

- Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Speed Dials" screen, select "Add Speed Dial", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the phonebook or call history, and touch the "ENTER" button (6).
- When you select the call history, it will transition to step 4.
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the desired initials from the list and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the contact number, and touch the "ENTER" button (6).
- If there are multiple phone numbers for a single contact, touch or slide the "TUNE/ TRACK" Up/Down button (1), select the phone number, and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the speed dial number that you want to register, and touch the "ENTER" button (6).

Deletion of speed dial

1) Touch or slide the "TUNE/TRACK" Up/ Down button (1) from the "Setup Speed Dials" screen, select "Delete Speed Dials", and touch the "ENTER" button (6).

- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select the speed dial number that you want to delete, and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "YES", and touch the "ENTER" button (6).


Automatic transfer of the phonebook/ call history

When registering the mobile phone, you can select to automatically transfer the phonebook and call history from your device. Select according to the following steps.

- 1) Display the Bluetooth® setup menu.
- From the panel button: Touch the SETUP button (3). Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch: Press the Bluetooth® button (7).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Auto Transfer", and touch the "ENTER" button (6).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "On" or "Off", and touch the "ENTER" button (6).

Bluetooth® audio


To use Bluetooth[®] devices (Bluetooth[®] audio or mobile phone) on the audio system, it is required to register the Bluetooth[®] devices to the audio system by "Bluetooth[®] Settings".

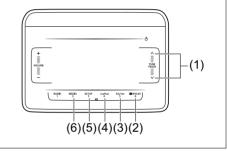

73R0141

- (1) "TUNE/TRACK" Up/Down button
- (2) "DISP/ENTER" button
- (3) BACK button
- (4) "FLD" (group operation) button
- (5) SETUP (random/repeat) button
- (6) "MEDIA" button

 Display



73R0154

- (A) Playback time
- (B) Text information display

NOTE:

Some functions may not be usable on some Bluetooth® devices

Selecting the Bluetooth® audio

- 1) Touch the "MEDIA" button (6).
- Touch the "MEDIA" button (ô). Each time the button is touched, the mode will change as follows: USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/ Down button (1).
- A: Hold down the Up button for 1 second or longer to fast forward the track.
- M: Hold down the Down button for 1 second or longer to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- Touch the Up button to listen to the next track.
- W: When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

Selecting a group (only for supported models)

- Touch the "FLD" (group operation) button (4).
- 2) Touch the "TUNE/TRACK" Up/Down button (1).
- A: Touch the Up button to go to the next group.
- ■: Touch the Down button to go to the previous group.

Repeat playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Each time the "DISP/ENTER" button (2) is touched, display will change as follows:

Off \rightarrow One song repeat – Group repeat ...

Random playback

- 1) Touch the SETUP (random/repeat) button (5).
- Touch or slide the "TUNE/TRACK" Up/ Down button (1), select "Random", and touch the "DISP/ENTER" button (2)
- Each time the "DISP/ENTER" button (2) is touched, display will change as follows:

Off \rightarrow Group random \rightarrow All random...

Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows: Artist name/Track title → Album name/ Track title ...

NOTE:


- "NO TITLE" will be displayed when there is no text information in the USB device currently being played.
- "..." is displayed if all text data cannot be displayed. Touch and hold the "DISP/ ENTER" button (2) for at least one second to automatically display the rest of the text data.

Anti-Theft Feature

The anti-theft function is intended to discourage thefts, such as that the audio system becomes inoperable when it is installed on other vehicles.

This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the lead-acid battery is disconnected, the unit will become inoperable until the PIN is reentered.

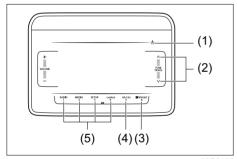

73R0155

- (1) POWER button
- (2) List selection button
- (3) "ENTER" button
- (4) BACK button
- (5) PIN entry button (1-4)

Display



73R0156

Setting the Anti-Theft Function

- Touch the POWER button (1) for 1 second or longer to power off the audio system.
- Hold down the button numbered [1] of the PIN entry button (5) and the "ENTER" button (3) and touch the POWER button (1).
- "SECURITY" will be displayed.
- "----" will be displayed.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] [4] of the PIN entry button (5).
- 5) Touch the "ENTER" button (3) for 1 second or longer.
- "COMPLETE" will be displayed, and the power will turns off after 3 seconds.

NOTE:

Take a note of the registered PIN and keep it for the future use.

Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- Touch the POWER button (1) for 1 second or longer to power off the audio system.
- Hold down the buttons numbered [1] of the PIN entry button (5) and the "ENTER" button (3) and touch the POWER button (1).
- · "PIN ENTRY" will be displayed.
- "---" will be displayed.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] [4] of the PIN entry button (5).
- 5) Touch the "ENTER" button (3) for 1 second or longer.
- If an incorrect PIN is entered, "ERROR* (ERR Number)" will be displayed for 3 seconds, then the audio system will go back to step 2.
- "---" is displayed on the screen, and the power will turns off after 3 seconds.

NOTE:

- To change your PIN, first delete your current PIN, then set a new one.
- If an incorrect PIN is entered 10 times or more, "HELP" will be displayed and the audio system will become inoperable. In this case, contact a Maruti Suzuki authorised workshop.


Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the lead-acid battery is replaced, etc, it is required to enter the PIN to make the unit operable again.

- 1) Set the ignition switch to the ACC position.
- "SECURITY" will be displayed.
- "----" will be displayed.
- 3) Enter the registered 4-digit PIN number using the buttons numbered [1] [4] of the PIN entry button (5).
- 4) Touch the "ENTER" button (3) for 1 second or longer.
- If an incorrect PIN is entered, "ERROR* (ERR Number)" will be displayed for 3 seconds, then the audio system will go back to step 2.
- After 3 seconds, the power of the audio system will be turned off automatically and it will become operable again.

Steering Switch (if equipped)

Use the steering wheel button to operate the basic functions of the audio system.

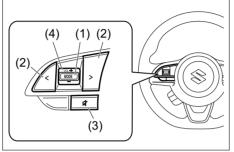

73R0157

- (1) MODE button
- (2) Selection button
 - Selecting the radio station
 - Selecting the track (USB (iPod), Bluetooth[®] audio mode)
- (3) Mute button
- (4) "VOL" (volume) button

MODE button (1)

 Each time the button is pressed, the mode will change as follows: AM → FM1 → FM2 → USB (iPod) (if equipped) → Bluetooth[®] audio (if equipped) → AUX (if equipped) Selection button (2)

- FM1, FM2, AM mode:
 - Press > to transfer to the next preset channel.
 - Press < to transfer to the previous preset channel.
 - Press > for 1 second or longer, it will search for receivable stations at a high frequency.
 - Press < for 1 second or longer, it will search for receivable stations at a low frequency.
- USB (iPod), Bluetooth[®] audio mode:
 - Press > to transfer to the next song.
 With the folder operation mode, it will transfer to the next folder.
 - Press < to return to the beginning of the currently playing song. Pressing it twice consecutively will return to the previous song.
 With the folder operation mode, it will return to the previous folder.
 - Press > for 1 second or longer to fastforward the song.
 When the button is released, it will stop fast-forwarding.
 - Press < for 1 second or longer to rewind the song.
 Releasing the button can stop rewinding.

Mute button (3)

- Hands-free mode
 Each time you press the button the mute
 will switch from ON/OFF.
- USB (iPod), Bluetooth[®] audio mode: Press the button during playback to temporarily stop the playback.

"VOL" button (4)

- Hands-free mode:
 - Press during an outgoing or ingoing call, the reception/ringtone sound will increase.
 - Press during an outgoing or ingoing call, the reception/ringtone sound will decrease.
 - Press during an outgoing call, the ringtone sound will increase.
 - Press during an outgoing call, the ringtone sound will decrease.
- Radio, USB (iPod), Bluetooth[®] audio, AUX mode:
 Press ☐, the volume will increase.
 Press ☐, the volume will decrease.

NOTE:

Due to poor quality of FM/AM signal, some disturbance/noise may be heard from speakers. It is recommended to switch off the tuner system to prevent the said disturbance/noise in the speaker.

Remote Controller (if equipped)

A CAUTION

Operational precautions regarding remote controller use:

- Because of its small size and light weight, use the remote controller with care. Dropping the remote controller or hitting it against hard surfaces may degrade the battery and cause malfunction.
- Do not expose the remote controller to humidity, dust, or moisture.
 Do not subject the remote controller to shock.
- Do not place the remote controller on the dashboard or other places that can be exposed to high temperatures, such as near heater vents. Exposing the remote controller to conditions in which it may overheat may cause the case to deform or other issues.
- Do not operate the remote controller while driving. Doing so may result in an accident.
- Direct the remote controller towards the remote controller receiver when using the remote controller.

(Continued)

A CAUTION

(Continued)


- The receiver may not operate correctly when exposed to direct sunlight or other sources of bright light.
- Remove the battery from the remote controller if the remote controller will not be used for extended periods of time.

A CAUTION

Cleaning the remote controller:

- Use a dry cloth to clean the remote controller. If the remote controller becomes excessively soiled, use a cloth dampened lightly with a diluted liquid detergent.
- Never use organic solvents, such as benzene cleanser or thinner. Use of these substances will damage the case and finish.


Before using the remote controller

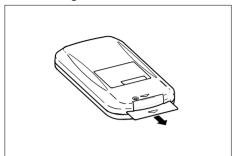

72R0091

1) Pull out the battery insulated sheet tab from the remote controller in the direction indicated by the arrow.

Remote controller operation

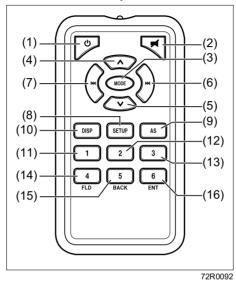

No.	Button	Function
(1)	O	POWER button: Turns the power to the audio system on / off (press and hold)
(2)	T)	Mute button: • Sound mute on / off
(3)	MODE	 MODE button: Switches between audio sources The mode changes in the following order each time the button is pressed: AM → FM1 → FM2 → USB (iPod) (if equipped) → Bluetooth® audio → AUX (if equipped) NOTE: "No Audio" will be displayed when there is no Bluetooth device connected.
(4)		Volume buttons: Volume up / Continuous volume up (press and hold)
(5)	V	Volume buttons: Volume down / Continuous volume down (press and hold)

No.	Button	Function
(6)		TUNE/TRACK up button: RADIO: Tune up / Seek up (press and hold) USB, iPod, and Bluetooth [®] audio: Normal mode: Track (file) up / Fast up (press and hold) FLD mode (USB and Bluetooth [®] audio): Folder (Group) up / Fast up (press and hold) FLD mode (iPod): List up / Continuous list up (press and hold) FUNCTION mode (various settings): Configures functions / Change values
(7)	•	TUNE/TRACK down button: RADIO: Tune down / Seek down (press and hold) USB, iPod, and Bluetooth® audio: Normal mode: Track (file) down / Fast down (press and hold) FLD mode (USB and Bluetooth® audio): Folder (Group) down / Fast down (press and hold) FLD mode (iPod): List down / Continuous list down (press and hold) FUNCTION mode (various settings): Configures functions / Change values
(8)	SETUP	SETUP button: • Switch to the System setting mode
(9)	AS	Auto Store button: RADIO: Switches between manual preset and AS mode / Auto Store (press and hold)
(10)	DISP	DISP button: • Changes text displays / Changes automatic text display pages (press and hold)
(11)	1	Preset [1] button: • RADIO: Calls preset channels / Stores channel as preset (press and hold)

No.	Button	Function
(12)	2	Preset [2] button: • RADIO: Calls preset channels / Stores channel as preset (press and hold)
(13)	3	Preset [3] button: • RADIO: Calls preset channels / Stores channel as preset (press and hold)
(14)	4 FLD	Preset [4] / FLD button: • RADIO: Calls preset channels / Stores channel as preset (press and hold) • USB, iPod, and Bluetooth audio: Switches between Folder operation / iPod menus / Group operation mode
(15)	5 BACK	Preset [5] / BACK button: • RADIO: Calls preset channels / Stores channel as preset (press and hold) • USB, iPod, Bluetooth® audio, and settings: Switches back to the previous screen
(16)	6 ENT	Preset [6] / ENTER button: • RADIO: Calls preset channels / Stores channel as preset (press and hold) • USB, iPod, Bluetooth® audio, and settings: Sets the selected item

Battery replacement


A CAUTION

- Store batteries in their original packaging out of reach of children until ready for use. Discard used batteries immediately. Seek medical attention immediately if swallowed.
- Do not place batteries in locations near fire or exposed to direct sunlight. Doing so may result in fire, explosion, or excessive heat.
- Do not place the remote controller on the dashboard or other places that can be exposed to high temperatures.
- Accidentally replacing batteries with lithium-ion batteries may result in explosion. Always replace batteries with the same type.



72R0088

 Use a Phillips screwdriver (sold separately) of the proper size to remove the screw and pull out the battery slot cover in the direction indicated by the arrow.

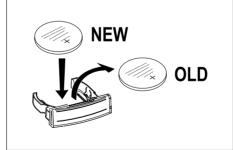

72R0089

 Remove the old battery and place the new battery (CR2025) into the battery slot cover with the + mark facing upwards.



72R0090

3) Press the battery slot cover to the direction indicated by the arrow completely and then fully tighten the screw.

Troubleshooting

When encountered a problem, check and follow the instructions as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to a Maruti Suzuki authorised workshop.

Problem Possible cause Possible solution			Problem	Possible cause	Possible solution
--	--	--	---------	----------------	-------------------

Common

Unable to operate	The security function is on.	When "SECURITY" is displayed, enter the ID. When "HELP" is displayed, contact a Maruti Suzuki authorised workshop.				
Unable to turn on the power (no sound). (No sound is produced)	Fuse is blown.	Contact a Maruti Suzuki authorised workshop.				

Radio

Much noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.

USB

Playback does not start when the USB device is	There is no supported format file to play on this unit.	Check the file format.				
connected.	The current consumption of the USB device exceeds 1.0 A.	Use an USB device with a current consumption lower than 1.0 A.				
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.				

Problem	Possible cause	Possible solution					
Bluetooth [®]							
Pairing failed	The distance between this unit and the Bluetooth [®] ready device is too far, or a metallic object may be located between the Bluetooth [®] ready device and this unit.	device.					
	The Bluetooth [®] function of the Bluetooth [®] ready device is off.	Refer to the manual of the Bluetooth [®] ready device. (Some devices have the power saving function that automatically activates after a certain time.)					
Unable to receive a call	Your current location may be out of service area.	Drive your vehicle to the service area of the phone.					
The voice quality of hands-free is low (Distortion, noise etc.)	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit.					

Error Display Messages

The following messages (flashing) will be displayed onto the screen depending on the condition of the audio system.

Message	Description
Reading	When the USB device or iPod's file format is being read, this message will be displayed.
ERROR 1	When the USB device or iPod's reading error occurs, this message will be displayed. Reconnect the USB device or iPod's connection cable. When the Bluetooth [®] audio playback malfunction occurs, this message will be displayed. Check the Bluetooth [®] audio body.

Message	Description
ERROR 2	When the USB device or iPod's communication error occurs, this message will be displayed. Reconnect the USB device or iPod's connection cable.
ERROR 3	When the USB device or iPod's issues are detected, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 4	If the USB device or iPod does not operate due to an over current, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 5	When the data playback fails with the USB device or iPod connected, or there are data unable to be transferred, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 6	When the USB HUB is connected, this message will be displayed. Disconnect the USB HUB.
UNSUPPORTED	When an unsupported USB device or iPod is connected, this message will be displayed. Connect the supported USB device or iPod.
No Music	When an empty USB device or a USB device containing files with the extension unable to be played is connected, this message will be displayed. Connect the USB device containing files with the playable extension.
No Songs	When an iPod is connected, this message will be displayed.

Fuel Filler Opening

Make sure to read "Refueling" in this section.

A WARNING

Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.


- · Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

Fuel Filler Door



75U74EN050003


The fuel filler cap is located on the left rear side of the vehicle.

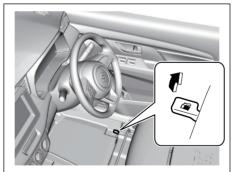

73R0084

Fuel Filler Cap


The fuel filler door can be unlocked by pulling up the opener lever located on the outboard lower side of the driver's seat and locked by simply closing the door.

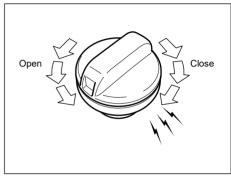

57L51093

To remove the fuel filler cap:

- 1) Stop the engine and close all the doors and windows while refueling.
- 2) Open the fuel filler door.
- Remove the cap by turning it counterclockwise.

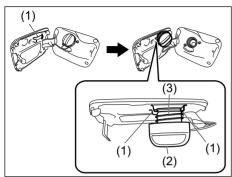

73R0085

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

To reinstall the fuel filler cap:

- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.

WARNING

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If tuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, close the fuel filler cap until you hear more than 2 clicks.
- If you use the fuel cap other than a genuine Maruti Suzuki cap, it may cause fuel leakage. Do not use the fuel cap other than a genuine Maruti Suzuki cap.

Refueling Watch Out for Fire



69RHS186

▲ WARNING

Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.

- Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

When Refueling at a Self-service Gas Station

▲ WARNING

When refueling at a self-service gas station, be sure to observe the following points.

- If substantial static electricity is accumulated within your body, a spark could ignite fuel vapors and possibly cause burns. Before opening the fuel filler cap, discharge any static electricity* that might have accumulated in your body, by touching a metal part of the vehicle body or the gas pump machine. In addition, do not re-enter the vehicle while refueling, as static electricity could be charged to your body again.
- Do not allow others who have not discharged their static electricity to come close to the fuel filler opening.
 - *Take special care when air is dry, as this can cause your body to become charged with static electricity more easily. In addition, wearing layers of clothing can generate static electricity due to the friction of the fibers.

(Continued)

WARNING

(Continued)

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If you do not insert the fuel filler nozzle securely into the fuel filler opening, fuel may spill out. Insert the fuel filler nozzle securely into the fuel filler opening until it stops.
- Pull the gas pump filler nozzle lever until it stops.

(Continued)

WARNING

(Continued)



69RHS070

- If you continue to refuel after the automatic stop to top up the tank, fuel could overflow. When the automatic stop function of gas pump filler nozzle is activated, stop refueling.
 - *Depending on the type of gas pump machine being used, the automatic stop function could activate early and refueling might not be possible. Please follow the instructions of the employees at the gas station.

(Continued)

WARNING

(Continued)

- If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, return the fuel filler nozzle to its original position and close the fuel filler cap until you hear more than 2 clicks.
- Fuel contains substances harmful to the human body. Do not breathe in vaporized fuel.
- In addition, be sure to observe all the warnings posted at the gas station.

Use Unleaded Gasoline Only

NOTICE


Using leaded gasoline, low-quality gasoline or other types of fuel (such as alcohol and diesel oil) can cause harmful effects to the engine and fuel delivery system.

Do not use fuel other than unleaded gasoline.

Engine Hood


WARNING

- Never allow children to open or close the hood. Children may injure themselves because the hood is heavy. Contact with the engine compartment and related parts may cause burns when this area/these parts are hot.
- Do not allow children to be near the vehicle when opening the hood.
- Do not leave tools, cloths, and other objects, which were used to clean or perform maintenance and inspections, in the engine compartment. Doing so may cause operational failures or even the vehicle to catch fire when the engine compartment becomes hot.

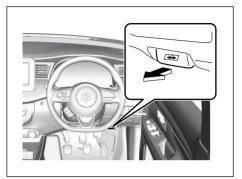

73R0086

- To open the engine hood:
- Pull the hood release handle located under the driver's side instrument panel in the outboard position. This will disengage the engine hood lock halfway.

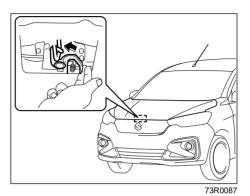


 Push the under-hood release lever upward with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

A CAUTION

The release lever and its peripheral, or engine hood can be hot enough to burn your finger right after driving. Touch after those becomes cool enough.

NOTICE

Check that the wiper arms are not raised before you lift up the engine hood to avoid damaging the wiper arms and the engine hood.

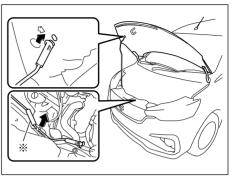

73R0088

 While holding the hood, pull the prop rod out from the holding clip, and then insert the end of the rod into the designated hole.

A CAUTION


- The prop rod can be hot enough to burn your finger right after driving.
 Touch the rod after it becomes cool enough.
- Insert the end of the rod into the hole securely. If the rod slips out, you may get caught in the closing hood.
- The rod may slip out when the hood is blown by wind. Be careful on windy days.

NOTICE

Hold the part maked in * when removing the bracket from the holder.

To close the engine hood:

 Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back to the holding clip.

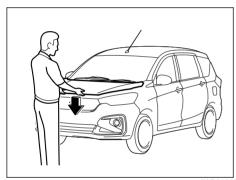

73R0158

 Lower the hood to about 20 cm above the hood latch, and then let it drop down. Make sure the hood is securely latched after closing.

WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.


A CAUTION

To avoid injury, check that no part of the occupant's body such as hands or head is in the path of the hood when closing it.

NOTICE

Pushing on the hood from the top may damage it.

Sun Visor

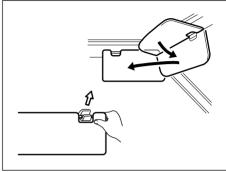


79.1161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, handle it by the hard plastic parts or the sun visor can be damaged.

Card holder

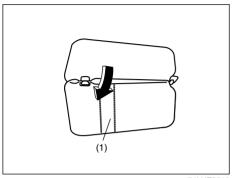

74LHT0516


(1) Card holder

You can put a card in the card holder (1) on the back of the sun visor.

NOTICE

When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

Vanity mirror (if equipped)

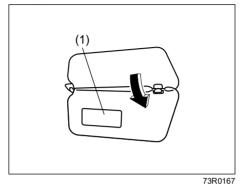


(1) Vanity mirror

WARNING

- Do not use the vanity mirror while driving. Doing so may result in an accident due to failure to pay attention to the road in front of you.
- Do not place any weight on or come to close to the locations where an airbag is stored when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of the airbag.


Interior Light

Front

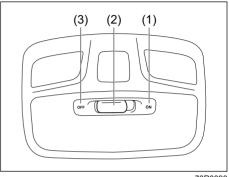

73R0090

Rear

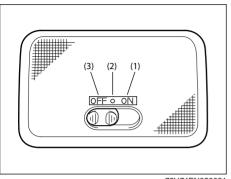

75U74EN050024

Interior light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:


- The ignition switch is in "LOCK" position.
- The hazard warning lights, the position lights and the headlights are off.
- After 15 minutes from the light on.

DOOR (2)

- The light comes on when the door is opened. After closing all doors, the light will remain on for 15 seconds and then fade out. If you insert the key, the light will start to fade out immediately. After removing the key from the ignition switch, the light will turn on for 15 seconds and then fade out.
- When the ignition switch is in LOCK position, to prevent the lead-acid battery from discharging, the light will automatically be turned off when a period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

OFF (3)

The light remains off even when the door is opened.

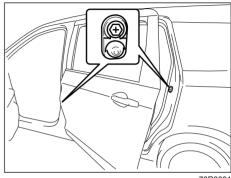


73R0091

NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber projection) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber projection depending on the vehicle specification.

Accessory Socket

Center console

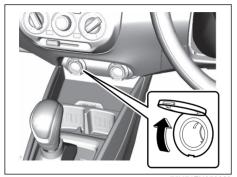

75U74FN050020

The accessory socket will work when the ignition switch is in ACC or ON position, or the ignition mode is "ACC" or "ON". Each socket can be used to provide 12 volt

/ 120 watt / 10 ampere power for electrical

accessories when used alone.

NOTICE


- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Check that any electrical accessories you use are designed to plug into this type of socket.
- · Check that the cap remains on the socket when the socket is not in use.
- · When the ignition switch is in "LOCK" position during using the accessory socket, the following accidents may occur;
 - the audio or navigation system does not turn off.
 - the keyless entry system does not work, etc.

If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.

If the problem persists, ask a Maruti Suzuki authorised workshop to have the system inspected.

Assist Grips


Front Passenger's Seat / 2nd Row Seat

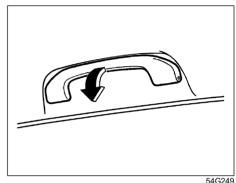

WARNING

If you pay too much attention to operating the Accessory socket while driving, an accident can occur.

3rd Row Seat

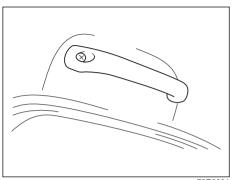

73R0094

Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Glove Box



73R0095

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

WARNING

Never drive with the glove box lid open. It could cause injury if an accident occurs.


WARNING

Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.

WARNING

Do not drive the vehicle with the lid of glove box open.

AUX/USB Socket (if equipped) / USB Socket (if equipped)

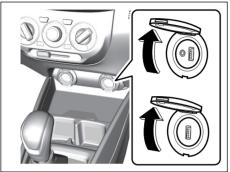

75U74EN050027

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to "Audio system" in this section.

WARNING

If foreign material enters the USB socket, a malfunction or a short circuit may occur.

Always close the cover when the USB socket is not in use.

WARNING

If you pay too much attention to operating the AUX/USB socket while driving, an accident may occur.

WARNING

Do not put items in the vehicle that may fall or roll around in the vehicle while driving. Objects getting caught in the brake pedal or accelerator pedal may prevent proper operation of the pedals, which may result in an accident.

USB Charging Sockets (if equipped)

When the ignition mode is ACC or ON, you can charge your mobile device such as your smart phone by using the connecting cable (commercial item) connected to the two USB Charging Socket Type-C.

The total maximum output capacity of two sockets is 60 W.

The capacity of the first connected socket: 15 V / 3.0 A (45 W)*

The capacity of the subsequently connected socket depends on the capacity of the first connected socket.

* The maximum output capacity of the first connected socket is 45W, and the output capacity is automatically adjusted depening on the connected device.

WARNING

If any foreign material enters the USB charging socket, it may cause a malfunction or short circuit.

Floor Console



75U74EN050005

NOTICE

Do not charge your mobile device for a long period of time, while the engine is stopped. Otherwise, the lead-acid battery may run out.

NOTE:

- · The priority of the socket's output capacity varies depending on the supported voltage of the connected device and the vehicle conditions.
- · The USB charging socket should be used only for charging.
- For some models, charging may pause. However, this is not a malfunction.
- · Depending on the vehicle conditions such as the following examples, charging may temporarily pause.
 - When the inside temperature of the vehicle is high after parking the vehicle under the blazing sun
 - When the engine is started


Cup Holder and Storage Area

Front



73R0097A

3rd Row Seats

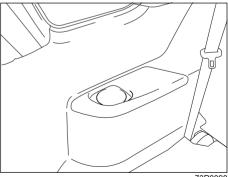

73R0098


A WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful when you are using the cup holders to hold a cup containing liquid. Spilling out hot liquid can cause burn injury. The lithiumion battery is located under the front left side seat. Spilling liquids on the lithium-ion battery in models equipped with ENG A-STOP system or Smart Hybrid may cause a fire or electric shock or damage to the batterv.
- Do not use the cup holders to hold sharp-edged, hard, or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever. or any electrical components. Liguid or foreign materials may damage these parts.
- · If you spill, or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorised workshop.

Bottle Holder


Front seats

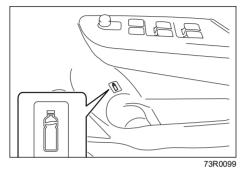

NOTE:

Maruti Suzuki recommends to use maximum 1 liter capacity of bottle.

2nd row seats

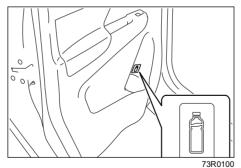


You should hold a bottle with a cap in the holder.

Front Armrest with Console Box (if equipped)


NOTICE

To avoid damage to the armrest, do not lean on it or allow a child to sit on

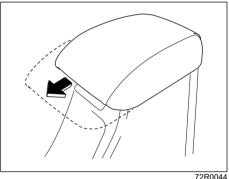

The armrest can be slid forward

Console box

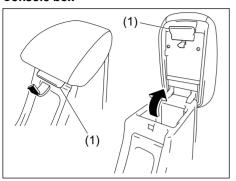


72R0045

Use this stowage for keeping small items. Open the compartment by raising the top lid while keeping the lever (1) up.

NOTE:

Always close the lid after you put something into or take something out of the box.

Bill/coin Holder

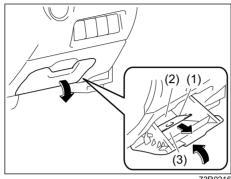

73R0216

Pull the upper of the holder downward to open the cover.


It is recommended to separate coins (2) and bills (3) with partition.

The holder can also be used after sliding out and removing the partition plate (1). Push the upper of the holder to close the cover.

WARNING

Never drive with the bill/coin holder lid open. It could cause injury if an accident occurs.


Footrest

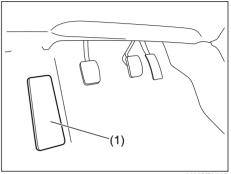

58MST0509

Use the footrest (1) as a support for your left foot only.

Front Seat Back Pocket (if equipped)

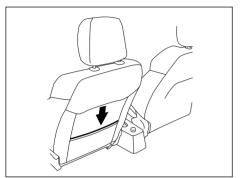


72RM05006

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

A CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.

Luggage Box (if equipped)

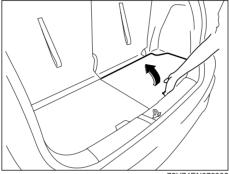

75U74EN070005

Insert your hands into the notches and lift up the luggage box cover to use the box.

WARNING

The luggage areas do not feature a structure that can accommodate people.

Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.

NOTICE

Do not allow items in the box to extend above the top of the box. Otherwise, the box or cover may be damaged.

NOTICE

Observe the following instructions, not to break the luggage box cover.

- Do not hold open the cover while driving.
- Do not apply any load to the cover while holding it open.

Frame Hooks

It is not recommended that you use the frame hooks for towing another vehicle. They were originally designed to tow your vehicle in emergency situation.

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in "EMERGENCY SERVICE" section.


A WARNING

Observe the following instructions when using frame hooks. The towing eye or vehicle body may break and cause serious injury or damage:

- Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the towing eye.

In such case, we recommend that you contact a professional service.

Front

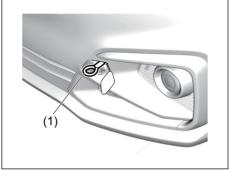


73R0183

The towing eye (1) is provided on the front of the vehicle for use in emergency situations and sea shipping purpose only.

NOTICE


To prevent damage to the vehicle, never use the towing eye (1) for trailer / train shipping.

To install the hook (1), follow the procedure below.

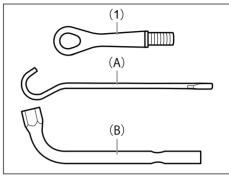

52RM50170

 Pick up the towing eye (1), jack handle (A) and wheel wrench (B) stowed in the tool bag under the driver's seat.

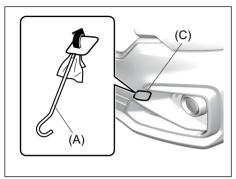


72RS2010

 Remove the cover (C) by using a jack handle (A) covered with a soft cloth as shown in the illustration.

NOTE:

Do not use excessive force as it may damage the cover strap.

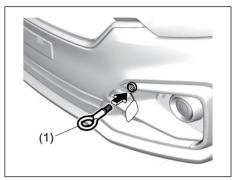


72RS2011

3) Install the towing eye (1) by hand.

NOTE:

It is recommended to secure the cover with tape to prevent damage during towing.

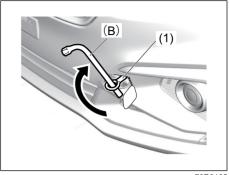


73R0185

 To tighten the towing eye (1), turn it clockwise by using a wheel wrench (B) until the towing eye (1) is securely installed.

To remove the towing eye (1), reverse the installation procedure.

Rear

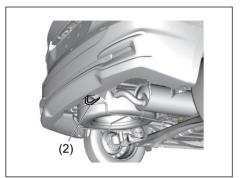


73R0104

The frame hook (2) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only.

NOTICE

To prevent damage to the vehicle, never use the frame hook (2) for trailer / train shipping.

Other Holes

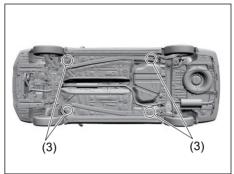


75U74EN050007

The frame holes (3) are provided only for transporting by a car carrier trailer.

NOTICE

Do not use the frame holes (3) for towing purpose. These holes may break and cause serious injury or damage.

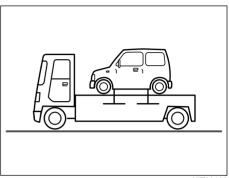


67T00163


When using ropes to secure the vehicle, refer to the above figure.

A CAUTION

Do not tighten the rope excessively. The vehicle may be damaged.

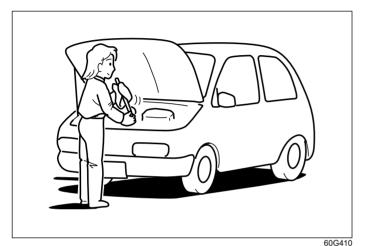

Maintenance Schedule	6-2
Periodic Maintenance Schedule	6-2
Drive Belt	6-6
Engine Oil and Filter	6-6
Engine Coolant	6-10
Air Cleaner	
Spark Plugs	6-12
Gear Oil	
Clutch	6-13
Brakes	6-14
Steering Wheel	6-17
Tires	6-17
Lead-acid Battery	6-20
Fuses	
Headlight Aiming	6-27
Bulb Replacement	
Wiper Blades	
Windshield Washer Fluid	
Air Conditioning System	6-35

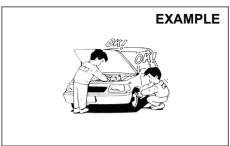

72SM06020

WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

• To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, be sure that the lead-acid battery is disconnected and the ignition switch has been in LOCK position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

(Continued)

WARNING

(Continued)

- Do not leave the engine running in garages or other confined areas.
- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, make sure that the parking brake is set fully and the transmission is in Neutral.
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the lead-acid battery. Flammable fumes are present.

(Continued)

WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative lead-acid battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets.
 Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

A WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorised workshop.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI SUZUKI genuine replacement parts or their equivalent.

Periodic Maintenance Schedule

"C": Clean

"R": Replace or Change

"I": Inspect, clean, adjust, lubricate or

replace as necessary

"L": Lubricate

"T": Tighten to Specified Torque

"O": Rotate

NOTE:

This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

For free inspection the cost of materials and consumables to be borne by customer.

			FREE	INSPEC	CTION		PERI	ODIC MA	INTENA	NCE AT	COST	
Interval: This interval should be judged by odometer reading or months, whichever comes first.		km (x1000)	1	5	10	20	30	40	50	60	70	80
5	months			6	12	24	36	48	60	72	84	96
ENGI	NE				<u>'</u>		<u>'</u>	'	'	'		
1-1	Generator drive Belt (Wear)	Non-ISG model	_	-	ı	ı	I	ı	ı	ı	I	R
1-1	Generator universet (wear)	ISG model	_	_	- 1	- 1	R	I	I	R	ı	ı
1-2	Water pump drive belt (Wear)		_	_	- 1	- 1	- 1	ı	I	- 1	- 1	R
	Engine Coolant SUZUKI LLC: Super (Blue) (#1,2)	First time only:	Replac	e at 1000	000 km c	r 60 mor	ths whic	hever co	nes first			
1-3	Engine Coolant SUZUKI LLC: Super (Blue) (#1,2)	Second time and after:	Replac	e every 4	40000 kn	or 24 m	onths wh	ichever	comes fir	st		
	Engine Coolant SUZUKI LLC: Standard (Yellow) (#	1,3)	- 1	- 1	- 1	R	1	R	1	R	I	R
1-4	Engine oil, engine oil filter and drain plug gasket (Level, Leakage)		- 1	- 1	R	R	R	R	R	R	R	R
1-5	Cooling system hoses and connections (Leakage and Damage)			- 1	- 1	- 1	I	I	I	- 1	ı	ı
1-6	Engine Mounting & manifold fixing (Loose, Damage)			_	- 1	_	- 1	_	- 1	_	- 1	_
1-7	Exhaust System (Noise, Leakage etc.)			- 1	_	- 1	_	ı	_	- 1	_	1
1-8	Positive Crank Case Ventilation System (Hoses, Connections and Valve)		_	1	_	1	_	ı	_	I	-	- 1
IGNIT	ION				•	•	•					
2-1	Ignition wire (Damage, Deterioration)		_	_	_	- 1	_	I	_	I	-	l l
2-2	Spark Plug	Petrol	Replace after every 100000 km or 84 months whichever comes first									
2-2	Spark Flug	CNG	Replac	e after e	very 500	00 km or	48 mont	hs which	ever com	es first		
FUEL												
0.4	A:	Paved-road	Clean after every 5000 km Replace after every 40000 km									
3-1	Air cleaner filter element	Dusty Condition	Clean a	Clean after every 2500 km or as required. Replace after every 40000 km								
3-2	Fuel tank cap, fuel lines and connections (Leakage	and Damage)	_	1	_	_	_	I	_	_	_	I
3-3	3 Fuel Filter Replace after every 100000 km or 120 months whichever comes first				<u> </u>							

^{#1:} Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section.

The same type of coolant that is filled at the time of a brand new car should be used when you add or replace the coolant. Refer to "Engine coolant" in this section.

^{#2:} Do not add SUZUKI LLC: Standard (Yellow) Coolant or distilled water or others when your vehicle is originally filled with SUZUKI LLC: Super (Blue) Coolant.

^{#3:} When your vehicle is originally filled with SUZUKI LLC: Standard (Yellow) Coolant, follow the maintenance schedule of SUZUKI LLC: Standard (Yellow) Coolant.

			FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
Interval: This interval should be judged by odometer reading or months, whichever comes first. km (x1000) months		1	5	10	20	30	40	50	60	70	80		
		1	6	12	24	36	48	60	72	84	96		
3-4	3-4 Fuel Tank		_	_	-	-	-	I	-	-	-	I	
CLUT	CH AND TRANSMISSION		•	•	•	•	•		•	•			
4-1 Clutch fluid (Level, Leakage)			I	I	I	I	1	I	I	I	I	I	
4-1	Outon haid (Ecvol, Leanage)		Replace after every 40000 km or 24 months whichever comes first										
4-2	Clutch slipping (Dragging or Excess Damage)		I	I	I	ı	ı	I	I	ı	I	I	
4-3	Manual Transaxle Oil (Level, Leakage)		I	I	- 1	- 1	1	- 1	- 1	1	I	- 1	
4-4	Gear shifter (Operation)		I	I	ı	ı	ı	I	I	I	I	I	
DRIV	E SHAFT		•	•			•	•	•		•	•	
5-1	Drive shaft noise			I	- 1	- 1	1	- 1	I	1	I	I	
5-2	Drive shaft boot (boot damage)		_	I	ı	I	I	I	I	I	I	I	
BRA	KE .												
6.1	Brake Fluid (Level, Leakage)		I	I	I	I	I	I	I	I	I	I	
6-1			Replace after every 40000 km or 24 months whichever comes first										
6-2	Brake pedal (Pedal - wall clearance)		I	I	I	ı	ı	I	I	- 1	I	I	
6-3	Parking brake lever and cable (Play, Damage)			ı	I	I	I	I	I	I	I	I	
6-4	Brake disc and pad (Wear)			ı	ı	ı	ı	ı	ı	ı	ı	ı	
6-5	Brake drum and shoes (Wear)			_	I	I	ı	I	I	I	I	I	
6-6	Brake hoses and pipes (Fluid leakage, Damage)		I	ı	ı	ı	ı	ı	ı	ı	ı	ı	
6-7	Master cylinder, wheel cylinder and caliper piston (Fluid leakage, Boot/Seal damage)		I	I	I	I	I	I	I	I	I	I	
WHE	EL												
7-1	Tires (Air pressure, Abnormal wear, Crack and Rotation)		I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	
7-2	Wheels (Damage)		I	ı	I	I	I	I	I	- 1	I	I	
7-3	Front/Rear wheel bearing (Loose, Damage)			I	- 1	- 1	I	I	I	I	I	I	
FROM	NT / REAR SUSPENSION												
8-1	Suspension strut (Oil leakage, Damage)		I	I	I	I	I	I	I	I	I	I	
8-2	Suspension arms / Knuckle support and Torsion rods (Loose, Damage)			ı	- 1	- 1	1	- 1	1	- 1	I	1	
8-3	Rear spring (Damage)			I	I	I	I	I	I	I	I	I	

			FREE	E INSPEC	CTION	PERIODIC MAINTENANCE AT COST							
Interval: This interval should be judged by odometer reading or months, whichever comes first. km (x1000) months		km (x1000)	1	5	10	20	30	40	50	60	70	80	
		months	1	6	12	24	36	48	60	72	84	96	
8-4	Shock absorbers (Oil leakage, Damage)		1	- 1	I	I	I	- 1	- 1	ı	- 1	I	
8-5	All bolts and nuts (Loose)		-	Т	Т	Т	Т	Т	Т	Т	Т	Т	
STEE	RING		_	'		'	•	'		'			
9-1	Steering wheel (Play, Loose)			I	I	I	I	I	I	I	I	I	
9-2	All rods and arms (Loose, Damage, Wear)			I	I	I	I	1	I	I	I	I	
9-3	Tilt Steering (Operation)			ı	I	I	I	ı	I	I	I	I	
ELECTRICAL													
10-1	Battery - electrolyte (Level, leakage) and voltage			- 1	I	I	- 1	- 1	I	I	I	- 1	
10-2	Wiring harness connection (Loose, Damage)			- 1	I	I	I	- 1	1	I	I	_	
10-3	Lighting system (Operation, Stains, Damage)			I	I	I	I	I	I	I	I	I	
10-4	Wiper (Operation, Stains, Damage)			- 1	I	I	I	- 1	- 1	I	- 1	I	
10-5	Horn (Operation)			I	I	I	I	I	I	I	I	I	
10-6	AUX, USB and accessory socket (Operation)			I	ı	I	I	ı	I	I	I	I	
BOD.	Ŷ		•			•				•			
11-1	All chassis bolts and nuts (Tighten)			Т	Т	Т	Т	Т	Т	Т	Т	Т	
11-2	All latches, hinges and locks (Function)			I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	
ROAI	D TEST												
12-1	Operation of Brakes, gear shifting and speedometer			I	I	I	I	I	I	I	I	I	
12-2	Body and chassis noise			I	I	I	I	I	I	I	I	I	
AIR C	CONDITIONER												
13-1	Tighten compressor mounting bolt			Т	Т	Т	Т	Т	Т	Т	Т	Т	
13-2	All hose joint (Check, Tighten)		I	I	I	I	I	I	I	I	I	I	
13-3	Check functioning of Recirculating flap			I	I	I	I	I	I	I	I	I	
13-4	Clean condenser with low pressure water			С	С	С	С	С	С	С	С	С	
13-5	Check all mounting bolts			ı	ı	ı	I	I	ı	I	I	I	
13-6	Air conditioner filter element			I	I	I	R	I	I	R	I	I	

Drive Belt

WARNING

When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

 
The drive belts tension is adjusted automatically. If the belt is too loose, insufficient battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a Maruti Suzuki authorised workshop.

Engine Oil and Filter

Specified Oil



72RH4037

(1) Recommended

Be sure that the engine oil you use comes under the quality classification as listed below.

- · API SN. SP
- ILSAC GF-6


Select the appropriate oil viscosity according to the above chart.

SAE 0W-I6 (I) is the best choice for good fuel economy and good startability in cold weather.


NOTE:

- · The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.
- We recommend that you use MARUTI SUZUKI genuine oil. To purchase it, see a Maruti Suzuki authorised workshop.

Oil Level Check

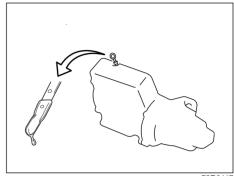

72R0117

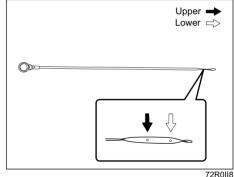


It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

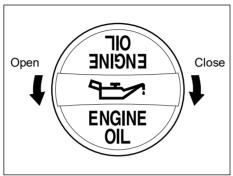


68PH00762

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

Changing Engine Oil and Filter

Drain the engine oil while the engine is still warm.

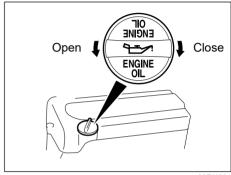


66RH001

- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain the engine oil.

A CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

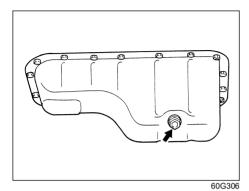

Tightening torque for drain plug 35 Nm (3.6 kg-m, 25.8 lb-ft)

A WARNING

- Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.
- Repeated, prolonged contact with used engine oil may cause skin cancer.
- Brief contact with used oil may irritate skin.

(Continued)


WARNING

(Continued)

- To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.
- Launder any clothing or rags if it is with oil.
- Recycle or properly dispose of used oil and filters.
- Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

Oil Filter Replacement


- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- Smear a small amount of engine oil around the rubber gasket of the new oil filter
- Screw the new filter by hand until the filter gasket contacts the mounting surface.

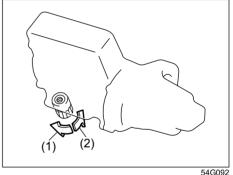

34009

- (1) Loosen
- (2) Tighten

Tightening (viewed from filter top)

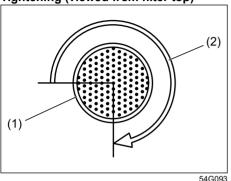

(1) Oil filter (2) 3/4 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

5) Tighten the filter as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter

3/4 turn or I4 Nm (I.4 kg-m, I0.3 lb-ft)

NOTICE

To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

Refill with Oil and Oil Leakage Check


- Pour oil through the filler hole and install the filler cap. For the approximate capacity of the oil, refer to "Capacities" in "SPECIFICATIONS" section.
- Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE

- When replacing the oil filter, it is recommended that you use a MARUTI SUZUKI genuine replacement filter. If you use an aftermarket filter, make sure it is of equivalent quality and follow the manufacturer's instructions.
- Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine Coolant

Coolant Level Check

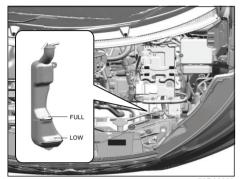

72R06002

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks. If the coolant level is below "LOW" mark, coolant should be added

Coolant addition and replacement

When you add the coolant, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark while the engine is cool. Never fill the reservoir tank above "FULL" mark.

Since special procedures are required for coolant replacement, ask a Maruti Suzuki authorised workshop for this job.

WARNING

Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Selection of coolant

To maintain optimum performance and durability of your engine, use MARUTI SUZUKI genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. A Maruti Suzuki authorised workshop can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/transmission damage. In case of coolant mix-up

(Continued)

NOTICE


(Continued)

have your vehicle inspected by a Maruti Suzuki authorised workshop.

NOTE:

Maruti Suzuki highly recommends the use of Maruti Suzuki genuine coolant. Maruti Suzuki genuine coolant has been specially formulated for your Maruti Suzuki product and contributes to the desired vehicle performance and ideal driving experience.

Depending on the production period of your vehicle, the coolant type filled at the time of a brand new car differs. There are two coolant types, SUZUKI LLC: Super (Blue) Coolant and SUZUKI LLC: Standard (Yellow) Coolant. You can check the original coolant type in your vehicle by the color of the coolant in the reservoir tank (Refer below figure).

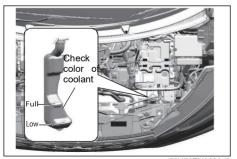

Coolant Color	Coolant Type
Blue	Suzuki LLC : Super
Yellow	Suzuki LLC : Standard

NOTE:

The same type of coolant that is filled at the time of a brand new car should be used when you add or replace the coolant.

SUZUKI LLC: Super (Blue) Coolant:

NOTICE

- This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.
- Do not add SUZUKI LLC: Standard (Yellow) Coolant or distilled water or others when your vehicle is originally filled with SUZUKI LLC: Super (Blue) Coolant. If such a case occurs, then get the vehicle inspected by a Maruti Suzuki authorised workshop.


SUZUKI LLC:Standard (Yellow) Coolant:

NOTICE

- The concentration of the mixture to be used shall be 30% antifreeze and 70% distilled water. Do not use straight coolant nor plain water.
- If the lowest ambient temperature in your area is expected to be -15°C (5°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container. Concentrations greater than 60% will cause overheating conditions.
- When your vehicle is originally filled with SUZUKI LLC: Standard (Yellow) Coolant, follow the maintenance schedule of SUZUKI LLC: Standard (Yellow) Coolant in this section. In case you replace with Suzuki LLC: Super (Blue) Coolant, then get the vehicle inspected by a Maruti Suzuki authorised workshop.

Air Cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

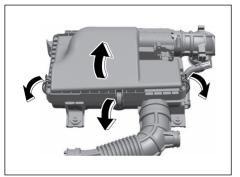

72RH4031

- Unclamp the side and center clamps and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.
- 2) Clamp the side and center clamps securely.

Spark Plugs

Spark plug replacement and inspection

Since special procedures, materials and tools are required, it is recommended that you trust this job to a Maruti Suzuki authorised workshop.

 
Gear Oil

Specified Gear Oil

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.


We highly recommend you use:

"MARŬTİ GENUINE GÉAR OIL 75W" gear oil.



54PI20706

Gear Oil Level Check

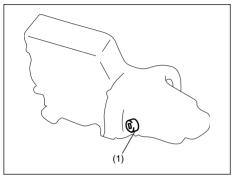

60MH047

(1) Oil filler and level plug

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug (I).
- 3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.
- If the oil level is low, add gear oil through the oil filler and level plug hole
 (I) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

Tightening torque for oil filler and level plug (1)

21 Nm (2.1 kg-m, 15.5 lb-ft)

A CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug is cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE

When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.


MARUTI SUZUKI Bond No. "1216E" or "1217G"

Gear Oil Change

Since special procedures, materials and tools are required, ask a Maruti Suzuki authorized workshop for this job.

Clutch

Clutch Pedal

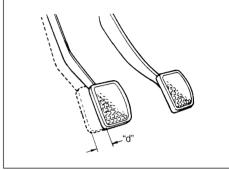


54G274

Clutch pedal play "d": MAX 10 mm

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be less than the specified values. If the play is more than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorised workshop.

Clutch Fluid

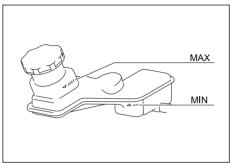

73R0115


Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by vour Maruti Suzuki authorised workshop. If the clutch fluid level is near the "MIN" line. fill it up to the "MAX" line with Maruti Suzuki Genuine Brake Fluid (MGBF) or DOT 3.

We highly recommend to use "Maruti Suzuki Genuine Brake Fluid" (MGBF).

NOTICE

Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch. Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

Brakes Brake fluid

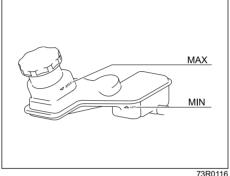

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines

A WARNING

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

· If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument panel will come on (the engine must be running with the parking brake fully disengaged). Should the light come on.

(Continued)

WARNING

(Continued)

immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.

- A rapid fluid loss indicates a leakage in the brake system which should be inspected by a Maruti Suzuki authorised workshop immediately.
- Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or DOT3 brake fluid. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.
- Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eves. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eves, flush eves with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

NOTICE


- If your brake fluid level is near "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case, ask a Maruti Suzuki authorised workshop to inspect the brake system.
- Brake fluid can damage painted surfaces. Use caution when refilling the reservoir.

NOTE:

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.
- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.
- Replace your brake fluid according to the maintenance schedule in your Owner's Manual.

Brake Pedal

Check if the brake pedal stops at the regular height without "spongy" feeling when you depress it. If not, have the brake system inspected by a Maruti Suzuki authorised workshop. If you doubt the brake pedal for the regular height, check it as follows:

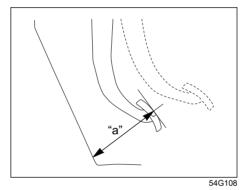


Pedal to floor carpet minimum distance "a": 51 mm

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorised workshop.

NOTE:

When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.

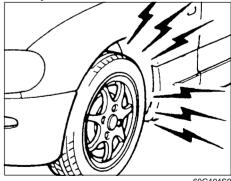

60G104S0

WARNING

If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.


If you hear this noise, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop. Continued driving with this condition can cause an accident.

A CAUTION

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels.)
- Excessive pedal travel
- · Brake dragging

Parking Brake

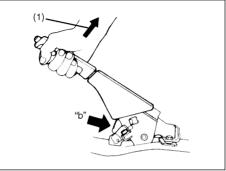

54G109

Ratchet tooth specification "b": 4th – 9th Lever pull force (I): 200 N (20 kg)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorised workshop.

Brake discs and brake drums

Brake disc


Brake location	Minimum thickness
Front wheels	20.0 mm

Brake drum

Brake location	Maximum inner diameter	
Rear wheels	222 mm	

If the measured thickness or inner diameter of the most worn part falls below or exceeds the value indicated above, the parts should be replaced with a new one. The measurement involves disassembling each brake and requires the use of a micrometer or caliper, which must be done according to the instructions described in the relevant service manual or available from the relevant repair information site.

Steering Wheel

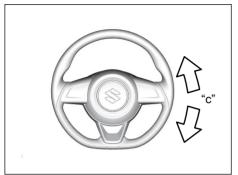


73R0117

Steering wheel play "c": 0 – 30 mm

Check the play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is outside the specification or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorised workshop.

Tires

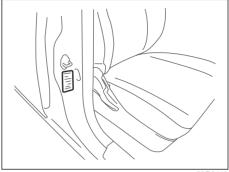

73R0118

The front and rear tire pressure specifications for your vehicle are listed in the tire information label. Both front and rear tires should have the specified tire pressure.


Tire Inspection

Inspect your vehicle's tires at least once a month or before long trip by performing the following checks:

 Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

A WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- Never underinflate or over-inflate the tires.
 Underinflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim.
 Overinflation can cause the tire to burst, resulting in personal injury.
 Overinflation can also cause unusual handling characteristics which may result in an accident.

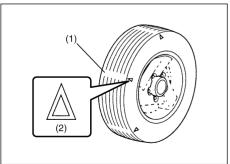

54G136

- (1) Tread wear indicator
- (2) Indicator location mark
- 2) Check that the depth of the tread groove is more than I.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is I.6 mm (0.06 in.) or less and the tire should be replaced.
- Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by a Maruti Suzuki authorised workshop.

A CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Have tires and wheel alignment checked periodically by a Maruti Suzuki authorised workshop.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.

A WARNING


- Your MARUTI SUZUKI vehicle is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.
- Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.

NOTICE


Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorised workshop before purchasing replacement tires that differ in size from the original tires.

Tire Rotation

5-tire rotation

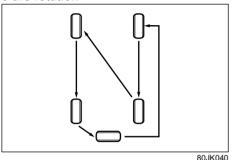

4-tire rotation

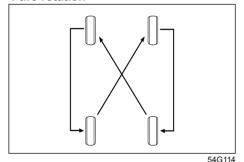

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated every 10000 km. After rotation, adjust front and rear tire pressures to the specification listed in your vehicle's Tire Information Label.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at Maruti Suzuki authorised workshop.

Wheel Alignment

In case of abnormal tire wear or pulling towards one side, have the wheel aligned at Maruti Suzuki authorised workshop.

Tubeless Tires (If equipped)

The vehicle is equipped with Tubeless Tires. In tubeless tire, a thin layer of butyl rubber is used for lining the inside of the tubeless tire. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tire bead and wheel rim. Tubeless tires are having advantage of slow air loss and preventing sudden deflation while driving.

Care and maintenance tips for tubeless tires

- Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tire damage.
- 2) In case any leakage is found, check for any nail penetration/valve core damage

- or rim bent. Damaged wheel must not be used.
- 3) In case tire has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tire is fitted, replace the valve.
- If continuous high speed driving is required, increase pressure of tires by 5 psi over recommended inflation pressure
- 6) Never run the tire beyond TWI (Tread wear indicator). The tire is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tire marked by a triangular symbol (TWI).
- Always prefer tubeless tire mounting machine. In case of manual mounting tire/ wheel rim damage may occur.
- In case of any problem, please get in touch with a Maruti Suzuki authorised workshop.

Lead-acid Battery

A WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the lead-acid battery or an explosion may occur. Never smoke when working in the vicinity of the lead-acid battery.
- When checking or servicing the lead-acid battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the leadacid battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or lead-acid battery, follow the jump starting instructions in "EMERGENCY SERVICE" section of this manual if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from lead-acid battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

(Continued)


A WARNING

(Continued)

- A lack of the electrolyte fluid could cause the danger of battery explosion due to overheating. Do not use the battery or do not charge the battery, with the fluid level below the lower limit.
- Loose connection of the battery terminals could cause fire or malfunction. When detaching the battery terminals and connecting them again, ensure a tight connection.

NOTICE

If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "SPECIFICA-TIONS" section for details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult a Maruti Suzuki authorized workshop.

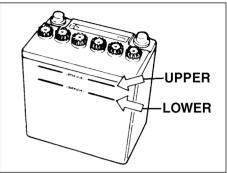

54G118

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery fluid must be kept between the "UPPER" and the "LOWER" level lines at all times. If the level is found to be below the "LOWER" level line, add distilled water to the "UPPER" level line. You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

A WARNING

If the battery is used with battery level being less than the lower level line "MIN", it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN".


NOTICE

If the battery liquid is added more than the upper level line "MAX", liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid overspills, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX".

NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" and lower level "MIN", add distilled water till it reaches the upper level line "MAX".


Replacement of the battery

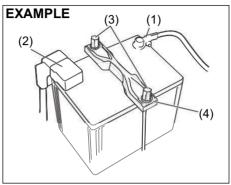

75U74EN060011

To remove the battery:

- 1) Disconnect the negative cable (I).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).
- 4) Remove the battery.

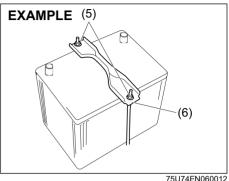

75074EN060012

5) Remove the retainer nuts (5) and remove the retainer (6).

To install the battery:

- Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:


- When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated.
 - These functions must be required to reset after the battery is reconnected.
- Do not disconnect the battery terminals for at least one minute after the ignition switch is turned to "LOCK" position.

A WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and vou might get injured.

NOTICE

Do not use regular battery in ISG Vehicle. Use only Exide Conservo N55 battery, else it may deteriorate Smart Hybrid performance.

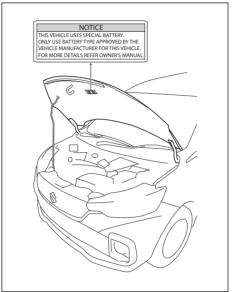


72SM06007

You may find this label on the inside of hood.

NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "LOCK" position.

(Battery label)

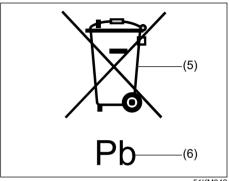

51KM042

- (5) Crossed-out wheeled bin symbol
- (6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected sep rately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead. By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult an Maruti Suzuki authorised workshop.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the lead-acid battery.

Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses


These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller (1) provided in the relay box cover.


NOTE:

- "Blank" indicates that fuse is not applicable in the variant, even though name of fuse might be available on cover of fuse box of your vehicle.
- Some fuse may not be applicable to your vehicle according to the variant of vehicle, even though it is not mentioned as blank


Relay box cover

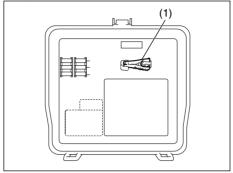

73R0204

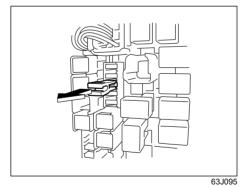


Fuses in Engine Compartment

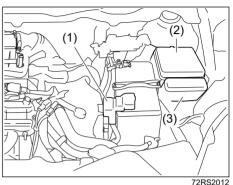


- (1) Main fuse box (FLB)
- (2) Relay box
- (3) Sub relay box (if equipped)

Main fuse box

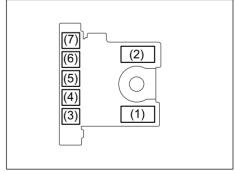


72RM06011

Relay box

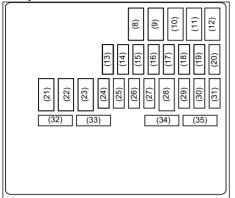

72RM06012

Sub relay box (if equipped)

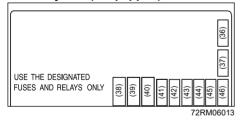

 MAIN FUSE / PRIMARY FUSE

 (1)
 175 A
 FL1

 (2)
 120 A
 FL2


 (3)
 100 A
 FL3

(4))	80 A	FL4
(5))	100 A	FL5
(6))	60 A	FL6
(7))	100 A	FL7
(8))	30 A	Starting motor
(9))	_	Blank
(10)	_	Blank
(11)	40 A	ABS motor
(12	2)	40 A	Ignition switch
(13	3)	30 A	Back up
(14	-)	_	Blank
(15	5)	20A	Front fog light
(16	5)	_	Blank
(17	')	25 A	ABS SOL
(18	3)	15A	S/V
(19))	_	Blank
(20))	25A	Headlight HI
(21)	30 A	Radiator fan
(22	2)	_	Blank
(23	3)	_	Blank
(24)	7.5 A	CNG valve (if equipped)
(25	5)	15 A	Headlight (Left)

(26)	15 A	Headlight (Right)
(27)	_	Blank
(28)	50 A	Ignition switch -2
(29)	15A	Transmission
(30)	15 A	FI
(31)	10 A	Air compressor
(32)	-	Blank
(33)	5A	CNG Ignition 1 (if equipped)
(34)	5 A	Starting Signal
(35)	7.5 A	CNG (if equipped)
(36)	15 A	Headlight HI (Right)
(37)	15 A	Headlight HI (Left)
(38)	40 A	Blower fan
(39)	30 A	Rear air conditioner
(40)	10 A	Airbag-2
(41)	15 A	CHG-2
(42)	-	Blank
(43)	_	Blank
(44)		Blank
(45)		Blank
(46)	_	Blank

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a MARUTI SUZUKI genuine replacement parts or equivalent for individual fuses

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover and in the relay box.

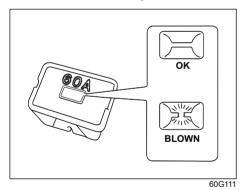

WARNING

If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorised workshop. Always use a MARUTI SUZUKI genuine replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.

NOTE:

Make sure that the fuse box always carries spare fuses.

-USE THE 13 14 15 16 17 18 19 20 21 22 23 24 25 DESIGNATED PRESS AND RELAYS ONLY. 26 27 28 29 30 31 32 33 34 35 36 37 38


Fuses under Dashboard



73R0121

PRIMARY FUSE		
(1)	30 A	Power window
(2)	10 A	Meter
(3)	15 A	Ignition coil
(4)	5 A	Ignition-1 signal 2
(5)	20 A	Shift
(6)	10A	CHG
(7)	10A	Steering lock 2
(8)	20 A	Door lock
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	5 A	A-STOP
(12)	10A	Rear Fog
(13)	5 A	ABS control module
(14)	15 A	S/H
(15)	5 A	Ignition-1 signal 3
(16)	10 A	Dome light-2
(17)	5 A	Dome light
(18)	15 A	Radio
(19)	5 A	CONT
(20)	5 A	Key2

(21)	20 A	Power window timer
(22)	5 A	Key
(23)	15 A	Horn
(24)	5 A	Tail light (Left)
(25)	10 A	Tail light
(26)	10 A	Airbag
(27)	10 A	Ignition-1 signal
(28)	10 A	Back up light
(29)	5A	ACC3
(30)	20 A	Rear Defogger
(31)	10 A	Heated Mirror
(32)	15 A	ACC2
(33)	5 A	ACC
(34)	10 A	Wiper
(35)	5 A	Ignition-2 signal
(36)	15 A	Washer
(37)	25 A	Front wiper
(38)	10 A	Stop light
(32) (33) (34) (35) (36) (37)	15 A 5 A 10 A 5 A 15 A 25 A	ACC2 ACC Wiper Ignition-2 signal Washer Front wiper

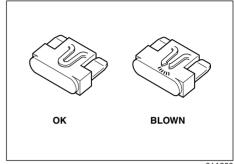

81A283

WARNING

- Always replace a blown fuse with a fuse of the same amperage and the same size which is equipped with your vehicle. Never use other objects than specified above to replace a blown fuse. Otherwise, wiring may burn out and it may cause a fire.
- If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by Maruti Suzuki authorised workshop

NOTE:

According to the vehicle specifications, fuse setting may be different from the specifications which are shown in the above tables.

Headlight Aiming

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

Bulb Replacement

A CAUTION

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

NOTICE

- Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your Maruti Suzuki authorised workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in SPECIFICATIONS.

NOTF:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights. The above-mentioned phenomena are not vehicle malfunction. However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have your vehicle inspected by a Maruti Suzuki authorised workshop.


Non-disassembled type lights

Since the lights shown below are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.

If you need to replace the assembly, ask your Maruti Suzuki authorised workshop.

- Tail/brake light
- Side turn signal light/hazard warning light on outside rearview mirrors
- High mount stop light

Headlight I ow beam

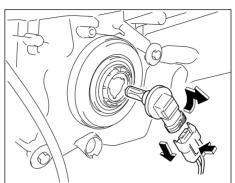


73R0123

Open the engine hood while the engine is stopped.

Disconnect the coupler with pushing the lock release. Turn the bulb holder counterclockwise and remove it.

High beam

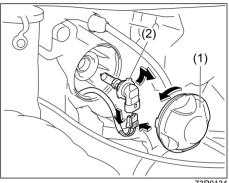


73R0134

Open the engine hood while the engine is stopped.


Turn the cover (1) counterclockwise and remove it.

Turn the bulb (2) holder counterclockwise and remove it. Disconnect the coupler with pushing the lock release.

Front turn signal light Front position light

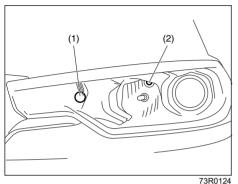


- 73
- (1) Front turn signal light(2) Front position light

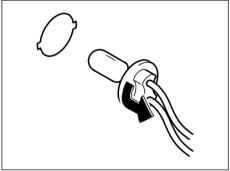

68PH0073

 Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light or the front position light from the light housing, turn the holder counterclockwise and pull it out.

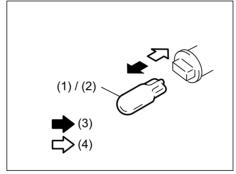

75U74EN060003

- (3) Removal
- (4) Installation
- To remove and install the bulb of the front turn signal light (1) or the front position light (2), simply pull out or push in the bulb.


Side Turn Signal Light

Outside rearview mirror type

LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

Rear combination light (tail, stop, turn signal, etc.)

For LED tail / brake light, it is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

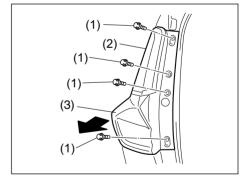


73R0186

With the tailgate opened, remove the bolts (1) and tail light (2), and then pull the rear combination light (3) firmly to the rearward.


NOTE:

When it is difficult to remove the rear combination lamp from the body at a low temperature (10 deg. C or less), pour water between the body and the rear combination lamp to make the removal smooth.

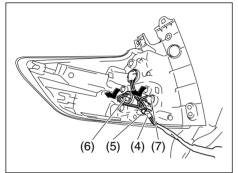

73R0187

- 1) Remove the wire (4) from a clamp (5).
- 2) To remove the bulb holder of the rear turn signal light (6) or the reversing light (7) from the light housing, turn the holder counterclockwise and pull it out.

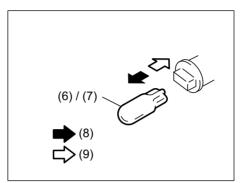


75U74EN060004

- (8) Removal
- (9) Installation

To remove the bulb of the rear turn signal light (6) from the bulb holder, push in the bulb and turn it counterclockwise.

To install a new bulb, push it in and turn it clockwise.

3) To remove and install the reversing light (7), simply pull out or push in the bulb.

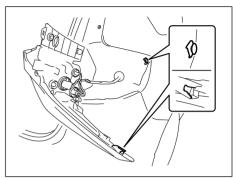

73R0188




73R0189


NOTE:

When reinstalling the light housing, check that the clips are properly attached.

License plate light

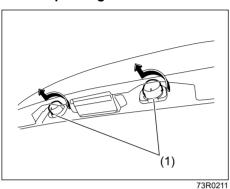


1) Remove the cover (1) by turning it counterclockwise.

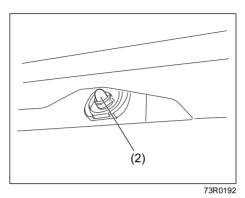

2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.

Interior Light


Front

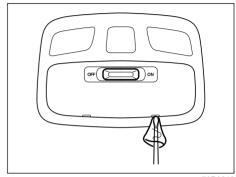

73R0212

High-mount stop light LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

Rear

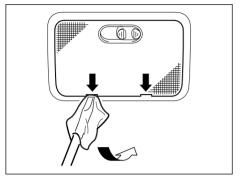

75U74EN060001

Remove the lens by using a flat-bladed screwdriver covered with a soft cloth as shown. To install it, simply push it back in. The bulb can be removed by simply pulling it out. When replacing the bulb, make sure that the contact springs are holding the bulb securely.

Wiper Blades



54G129

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.


NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a Maruti Suzuki authorised workshop for proper replacement method.

For windshield wipers:

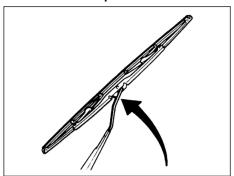


70G119


1) Hold the wiper arm away from the window.

NOTE:


When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first. Otherwise, the wiper arms may interfere with each other.

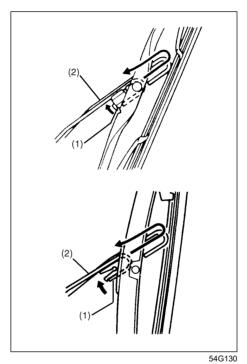

- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

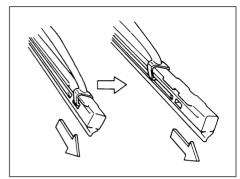


60A260

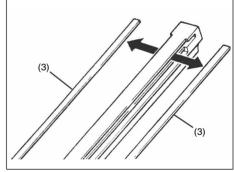


71LMT0708

- (3) Retainer
- 4) If the new blade is provided without the two metal retainers (3), move them from the old blade to the new one.

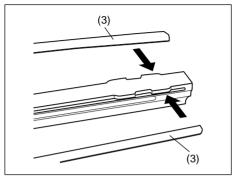

73R0194

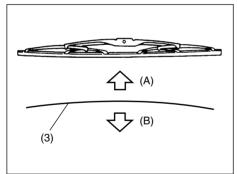


60MH072

(A) Up (B) Down

NOTE:


When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustrations.

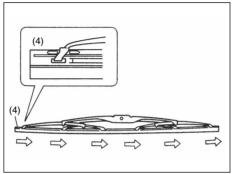

71LMT0707

- (4) Locked end
- 5) Install the new blade in the reverse order of removal, with the locked end (4) positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

Windshield Washer Fluid

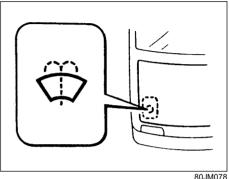

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

WARNING

Do not use radiator antifreeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.

NOTICE


 Damage may result if the washer motor is operated with no fluid in the washer tank.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


Air conditioner filter replacement

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

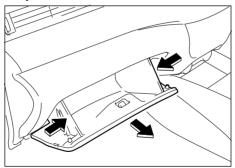

73R0201


 To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.

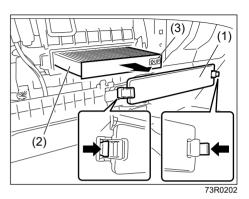

2) Remove the cover (1) and pull out the air conditioner filter (2).

NOTF:


When you install a new filter, check that the UP mark (3) faces upward.

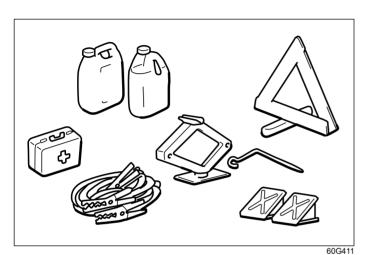

EMERGENCY SERVICE


Tyre Changing Tool	7-1
Jacking Instructions	
Jump-Starting Instructions	
Towing your vehicle	7-10
Engine trouble: Starter does not operate	7-11
Engine trouble: Does not start	7-11
Engine trouble: Overheating	7-11
Warning Triangle	7-12

Tyre Changing Tool

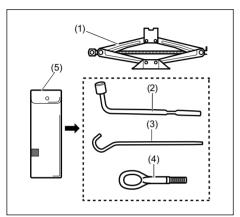

75U74EN070007


- (1) Jack
- (2) Wheel wrench
- (3) Jack handle
- (4) Towing Eye
- (5) Tool bag

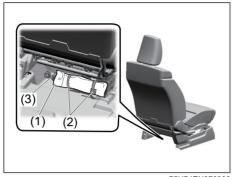

75U74EN070008

The tyre changing tools stowed in the tool bag (1) under the driver's seat.

Slide the driver's seat forward. Remove the fixing bands (2) from the tool bag (1) fixed to the jack(3) and take out the tool bag (1).

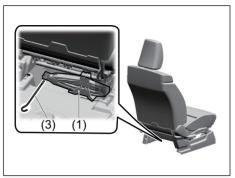


75U01ER070001

To remove the jack (1), turn the jack shaft (at the left side of the seat) counterclockwise by hand and pull the jack out of the storage bracket from the front side of the seat.

NOTE:

If it is difficult to turn the shaft by hand, use jack handle (3) as shown in the illustration.


EMERGENCY SERVICE

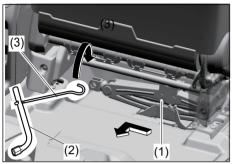

75U01ER070002


NOTE:

If you are difficult to use the jack handle (3), use jack handle and wheel wrench (2) as shown in the illustration.

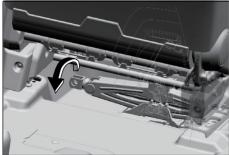


75U01ER070003

To stow the jack, place it in the storage bracket and turn the shaft clockwise with hand.

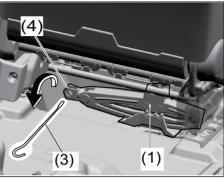


75U01ER070004A

After temporarily holding the jack (1) until it contacts the storage bracket, turn the shaft (4) approximately 90° to 180° by using jack handle (3) to securely hold the jack in place.

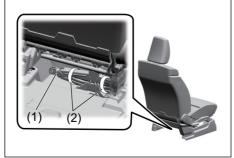

75U74EN070010

Set the fixing bands (2) to the jack (1) first on the positions as showing in the illustration.

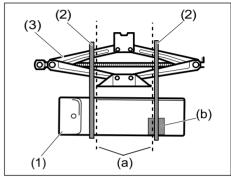

75U74FN070009

- (a) Guidelines of the fixing positions of the fixing bands
- (b) Marking of the tool bag for fixing

After using the tyre changing tools, put them back into the tool bag (1) and fix the tool bag (1) by using the fixing bands (2) that have already set to the jack (3) on the position (a) as showing in the illustration.

NOTE:

The fixing band should be align with the marking (b) of the tool bag.

EMERGENCY SERVICE

Stow the tool bag (1) at the original position under the driver's seat.



75U74EN070011

WARNING


After using the tyre changing tools, stow them securely or they can cause injury if an accident occurs.

A CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

The spare tyre is stowed under the rear floor.

To remove the spare tyre:

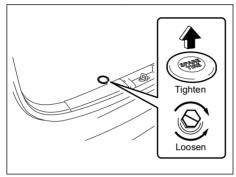


73R0127

 Remove the cap and use a wheel wrench to loosen the hook bolt of the spare tyre holder. Then, rotate using the end of the jack handle.

NOTICE

Loose the spare tyre holder hook bolt until you can remove the hook by yourself. If the bolt is loosen too much, the hook might off and the spare tyre might drop off to the ground.

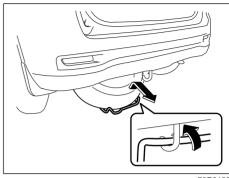

73R0128

- 2) Unhook the spare tyre holder and lower it slowly.
- 3) Remove the tyre.

To install the spare tyre:

- Install the spare tyre facing up the outside of the wheel in the reverse order of removal.
- 2) Tighten the spare tyre holder hook bolt securely.

WARNING

Do not drive your vehicle with the loose spare tyre holder hook bolt, otherwise it may come loose or the spare tyre may drop off, which can result in an accident.

NOTICE


Tighten the spare tyre holder hook bolt securely. However, do not overtighten the bolt, it may be warped or broken.

Tightening torque for the spare tyre holder hook bolt 30 Nm (3.0 kg-m)

NOTICE

Make sure that the spare tire is fixed securely. Loosely fixed tire may cause noise during driving. However, do not overtighten the bolt, it may be warped or broken.

Jacking Instructions

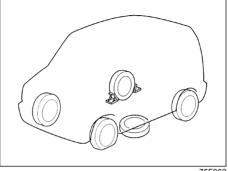


75F062

- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "R" (Reverse).

WARNING


- · Shift into "R" (Reverse) when you jack up the vehicle.
- · Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.
- 3) Turn on the hazard warning switch if your vehicle is near traffic.
- 4) Block the front and rear of the wheel diagonally opposite of the wheel being lifted.

5) Place the spare tyre near the wheel being lifted as shown in the illustration in case the jack slips.

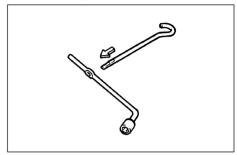


54G253

EMERGENCY SERVICE

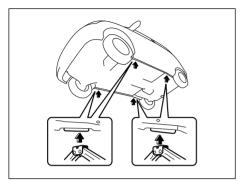

73R0190

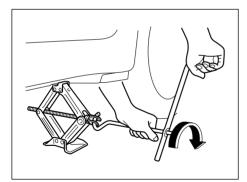

73R0191


6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body. Continue to raise the jack slowly and smoothly until the tyre clears the ground. Do not raise the vehicle more than necessary.

WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed.
 Especially, do not raise the vehicle with a jack at a part of the torsion beam which is located under the vehicle body, between rear wheels.
- Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the flange. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- Never get under the vehicle when it is supported by the jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

Raising vehicle with garage jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

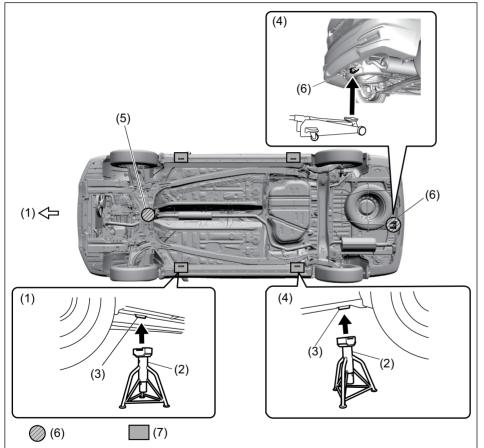

75U74E05000x

- (1) Front
- (2) Jack stand
- (3) Jacking point for onboard jack
- (4) Rear
- (5) Front suspension frame
- (6) Jacking point for garage jack
- (7) Application point for two-column lift and jack stand

WARNING


As the vehicle may get damaged or an accident may occur, observe the following points.

- Observe the designated points shown in the illustrations.
- When holding the lifted vehicle, use the rigid rack.
- When jacking up the front side or the rear side only, place a chock (commercially-available product) on front and back of the grounded tyre.

NOTICE

- Never apply a garage jack to the exhaust pipe or engine undercover and rear torsion beam.
- When you apply a garage jack to the rear jacking point, it may interfere with the rear bumper depending on the shape of the garage jack.

EMERGENCY SERVICE

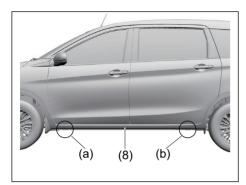

75U74EN070006

- (a) Specified position of jack stand for the front side
- (b) Specified position of jack stand for the rear side

NOTICE

If you use the jack stand (2) in the condition that it touches the side skirt (8), the side skirt may be broken or damaged.

When using the jack stand, make sure that it does not touch the side skirt.

NOTE:

For more details, please contact a Maruti Suzuki authorised workshop.

Changing Wheels

▲ WARNING

 Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorised workshop.

To change a wheel, use the following procedure:

- 1) Remove the jack, tools and spare wheel from the vehicle.
- 2) Loosen, but do not remove the wheel nuts.
- 3) Jack up the vehicle (follow the jacking instructions in this section).


WARNING

- Shift into "R" (Reverse) when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

A CAUTION


Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven.

4) Remove the wheel nuts and wheel.

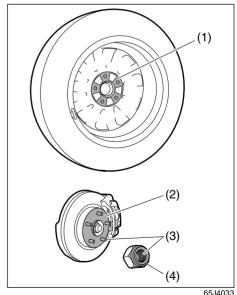

65J4U3

- 5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

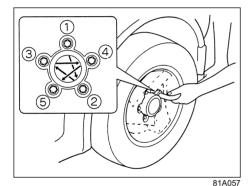


Tightening torque for wheel nuts 100 Nm (10.2 kg-m)

 Lower the jack and fully tighten the nuts with a wheel wrench in numerical order as shown in the illustration.

WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorised workshop.


Full Wheel Cover

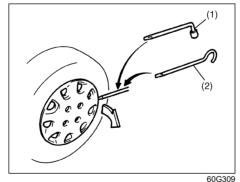

(1) or (2) Flat end tool

Your vehicle includes two tools, a lug wrench and a jack crank, one of which has a flat end.

 Use the tool with the flat end to remove the full wheel cover, as shown in the illustration.



60MH074

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

After Changing Wheels

Stow the tyre changing tools (jack, jack handle and lug wrench) in place. Also, stow the flat tyre in the spare tyre stowed position. Refer to "Tyre Changing Tool" in this section.

NOTICE

Repair or replace the flat tyre immediately. If the flat tyre is placed in the spare tyre stowed position for long time, it can cause vehicle shakiness, noise, or scratches.

Jump-Starting Instructions

WARNING

- Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Lead-acid batteries in this condition may explode.
- When making jump lead connections, be certain that your hands and the jump leads remain clear from pulleys, belts or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the lead-acid battery or an explosion may occur. Never smoke when working near the lead-acid battery.
- If the booster lead-acid battery you use for jump-starting is installed in another vehicle, make sure the two vehicles are not touching each other.
- If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorised workshop.

(Continued)

WARNING

(Continued)


To avoid harm to yourself or damage to your vehicle or lead-acid battery, follow the jump-starting instructions below.
 If you are in doubt, call for qualified road service.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

Jump-Starting

- Use only a 12-volt battery to jump-start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

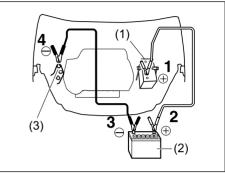

54P000804

- 3) Connect jump leads as follows:
 - 1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
 - Connect the other end to the positive (+) terminal of the booster battery (2).
 - 3. Connect one end of the second jump lead to the negative (–) terminal of the booster battery (2).
 - Make the final connection to an unpainted, heavy metal part (i.e.engine mount bolt (3)) of the engine of the vehicle with the discharged battery (1).

WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged lead-acid battery, or an explosion may occur.

A CAUTION

Connect the jump lead to the engine mount bolt securely. If the jump lead disconnects from the engine mount bolt because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged lead-acid battery.
- Remove the jump leads in the exact reverse order in which you connected them.

Towing your vehicle

If you need to have your vehicle towed, contact a professional service. Maruti Suzuki authorised workshop can provide you with detailed towing instructions.

NOTICE


Observe the following instructions when towing your vehicle.

- To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.
- Using the frame hook, tow your vehicle on paved roads for short distances at low speed.

2-Wheel Drive (2WD)

The vehicle may be towed using either of the following methods.

- 1) From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, make sure that transmission is in neutral, the steering wheel is unlocked the ignition key should be in "ACC" position, and the steering wheel is secured with a clamping device designed for towing service.

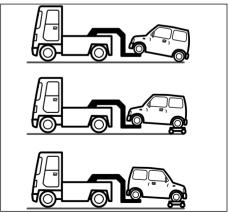

NOTICE

The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

Engine trouble: Starter does not operate

- Try turning the ignition switch to "START" position with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the lead-acid battery terminal contact is poor. Recharge the lead-acid battery or correct lead-acid battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorised workshop.

Engine trouble: Does not start

Make sure that your vehicle has enough fuel and lead-acid battery.

If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.

Refer to "Starting / Stopping Engine in operating your vehicle section.

If the engine still does not start have your vehicle inspected at a Maruti Suzuki authorised workshop.

 Do not operate the starter motor for more than 12 seconds.

Engine trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the engine coolant temperature gauge indicates overheating during driving:


- 1) Turn off the air conditioner, if equipped.
- 2) Take the vehicle to a safe place and park.
- Run the engine at a normal idle speed for a few minutes until the indicator is within the normal, acceptable temperature range between "H" and "C".

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

If the temperature indication does not come down to within the normal, acceptable range:

- Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump and radiator hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
- If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in "INSPECTION AND MAIN-TENANCE" section.)

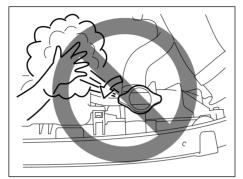


79J007

WARNING


- It is hazardous to remove the radiator cap (or degassing tank cap) when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.

 Warning Triangle



MH007001


In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

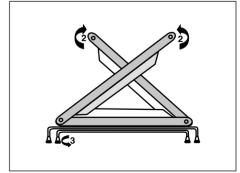

MHO-07-014


EMERGENCY SERVICE

- Remove the warning triangle carefully from the cover as shown by arrow 1.
 Open both the reflector arms as shown
- Open both the reflector arms as shown by arrow and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.
- Place the warning triangle below 3rd row seat.

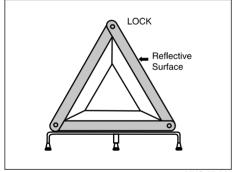

MHO-07-015

APPEARANCE CARE

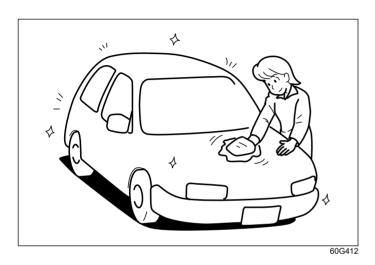

APPEARANCE CARE

Corrosion Prevention	 8-
Vehicle Cleaning	8-2

9

Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information about Corrosion

Common causes of corrosion

- Accumulation of road salt, dirt, moisture, or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.

Environmental conditions which accelerate corrosion

- Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
- High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Vehicle Cleaning" section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Be sure that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area

Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter, exhaust pipes, etc. A fire could be started if the undercoating substance becomes overheated.

Vehicle Cleaning



76G044S

WARNING

When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, gasoline and benzene. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning Interior

Leather upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- In order to keep leather upholstery looking good, it should be cleaned at least twice a year.
- If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.
- When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink.
- As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.

Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

A CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

Fabric upholstery (For front passenger seat)

Do not use liquid for cleaning as it may penetrate the fabric and damage the seat sensor.

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.


Instrument panel and console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

WARNING

Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components.

Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/ or lead to non-functioning of the part or may cause fire.

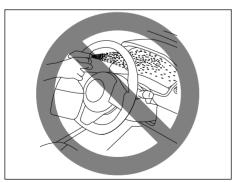

81RM08005

WARNING

 Do not spray the interior with water or other liquids. If the navigation equipment, audio components, switches, wiring under the floor, or other electrical parts become wet, there is a risk of fire or malfunction, and the SRS airbag system could fail to function normally.

If you pour water or spill a drink in the vehicle, consult a Maruti Suzuki authorised workshop as soon as possible for inspection.

NOTICE

- Liquid such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth.
- Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.

Cleaning Exterior

NOTICE

- When repairing scratches on painted surfaces, consult a Maruti Suzuki authorised workshop. Using an inappropriate material for repair could cause damage to the paint.
- It is important that your vehicle be kept clean and free from dirt. Fai ure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Washing

WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to make sure they have maintained their normal effectiveness.

APPEARANCE CARE

Washing by hand



60B212S

When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:

 Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE


When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.

2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.

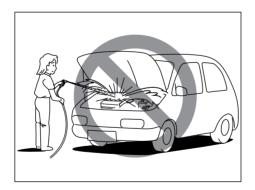

81RM08006

3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
 - 1. Clean all damaged spots and allow them to dry.
 - Stir the paint and touch up the damaged spots lightly using a small brush.
 - 3. Allow the paint to dry completely.

Washing by an automatic car wash

NOTICE

- If you use an automatic car wash, check that your vehicle's body parts, such as antenna and spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.
- Do not wash a car with a roof end spoiler in an automatic car wash. It may get caught in the car wash and damage the spoiler.


Washing by a high-pressure cleaner

NOTICE

If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.

- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
- Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.

Waxing

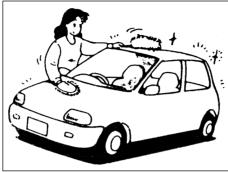

60B211S

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

NOTE:

Do not use wax on plastic parts that are not coated. Waxing these surfaces could result in a whitened or uneven appearance.

NOTICE

 If water contacts the engine compartment, it may cause the engine malfunction or the electrical components to fail.

Do not apply water to the engine compartment when washing the vehicle.

(Continued)




84S09240

NOTICE

(Continued)

 When washing or waxing the vehicle, do not lean on the vehicle body or do not push it hard. This might cause it to deform.

SPECIFICATIONS

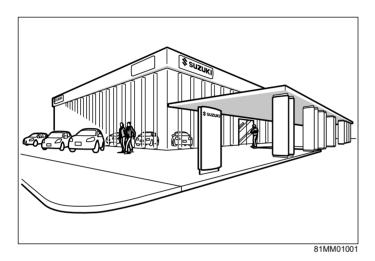

SPECIFICATIONS


Vehicle Identification	9 -1
FASTag (if equipped)	9-1
High security Registration Plate (HSRP)	
Provision for AIS140: Intelligent Transportation	
System (ITS)	9-3
Fuel Recommendation	
SPECIFICATIONS	9-5


9

SPECIFICATIONS

Vehicle Identification

Chassis Serial Number

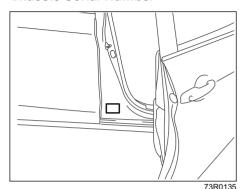

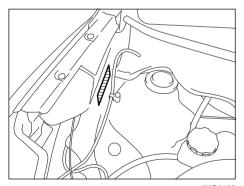


73R0136

The chassis and/or engine serial numbers are used to register the vehicle. They are

also used to assist a Maruti Suzuki authorised workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorised workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.


Engine Serial Number

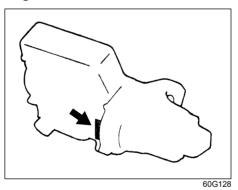

The engine serial number is stamped on the cylinder block as shown in the illustration.

FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India. In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorised workshop.

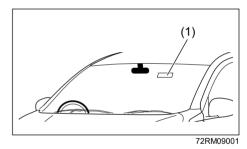

As seen from inside of the vehicle



64MM01002

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle



64MM01003

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different. NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.


High Security Registration Plate (HSRP)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.

HSRP contains:

- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- · Third license plate on front windshield.

Third License Plate

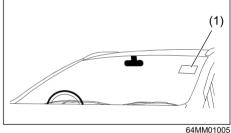


O-HVIIVIO I

(1) Third license plate

SPECIFICATIONS

Third license plate - As seen from outside of the vehicle

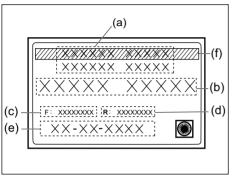

72RM09002

- (a) HSRP issuing authority name(a) Vehicle registration number
- (a) Unique laser number Front plate
- (a) Unique laser number Rear plate
- (a) Date of 1st registration (in DD-MM-YYYY format)
- (a) Green strip (BS6 vehicle)

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:

 Any attempt to remove the third license plate from the windscreen will result in permanent damage to the label.

- Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.
- Use of any sharp objects on the label can damage the label.
- In the event of any replacement of the third license plate may please contact the approved authority.

Third license plate - As seen from inside of the vehicle

Notice

It is unlawful for any person to duplicate, alter, change, deface, destroy, multilate, remove, tear down this Third Registration Plate Sticker, except if done by authority of law. Do not wipe with harsh abrasive materials, detergents, etc. as it may deface or damage this Sticker.

64MM01009

NOTE:

The picture shown is for indicative purpose only.


NOTE:

Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.

Provision for AIS140: Intelligent Transportation System (ITS)

This vehicle has provision of Power Connector for fitment of AIS140 ITS device.

Power connector is located under the dashboard as shown in below illustration.

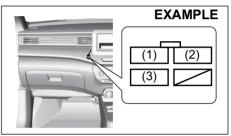

72RM10001

Power connector description		
(1)	Battery	
(2)	Ground	
(3)	Ignition signal	

Fuel Recommendation Petrol Engine

To avoid damaging catalytic converter, you must use unleaded gasoline with an octane number (RON) of 91 or higher.

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol, also known as gasohol, are commercially available in the country and can vary with location. Gasoline Ethanol blend up to E20 can be used as fuel for this vehicle.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

A CAUTION

Use of Spurious, low quality, adulterated fuel can cause damage to the engine & engine auxilliaries, affect functioning of engine and degrade engine performance including but not limited to seizure.

NOTICE

- The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative nonautomatic system.
- Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

SPECIFICATIONS

SPECIFICATIONS

NOTE:

Specifications are subject to change without notice.

ITEM: Dimensions#	UNIT: mm	
Overall length		4435
Overall width		1735
Overall height		1690
Wheelbase		2740
Track	Front	1510
	Rear	1520

ITEM: Mass (weight)*	UNIT: Kg	K15C ISG 5MT
Curb mass (weight)		1190
Gross vehicle mass (weight) rating		1760
Permissible maximum Axle Weight	Front	850
	Rear	965

^{# -} Details mentioned are related to all vehicle variants of Petrol and CNG.

^{* -} Details mentioned are related to Petrol engine variants only. For CNG, may please refer to the CNG supplementary manual.

ITEM: Engine	
Туре	K15C
Number of cylinders	4
Bore	74.0 mm
Stroke	85.0 mm
Piston displacement	1462 cm ³ (1462 cc)
Compression ratio	12.0 : 1

ITEM: Electrical			
Standard spark plug		NGK ILZKR6Q11	
Load said batton	Petrol	12V ISS N-55*1	
Lead-acid battery	CNG	12V 34B19L	
Lithium-ion battery		Maintenance free*2	
Fuses		See "INSPECTION AND MAINTENANCE" section.	

^{*1} When battery replacement is necessary, use only N55 (Exide Conservo) battery. Else it may deteriorate performance of Smart Hybrid system.

^{*2} If the lithium-ion battery is completely discharged, the battery cannot be recharged. When replacing or disposing the lithium-ion battery, consult your Maruti Suzuki authorised workshop.

SPECIFICATIONS

ITEM: Lights		WATTAGE	BULB No.
Headlight	High beam	12V 60W/65W	HB3
	Low beam	12V 55W	H11
Turn signal light	Front	12V 21W	WY21W
	Rear	12V 21W	PY21W
Side turn signal light (on outside rearview mirror)*1		LED	
Position light		12V 5W	W5W
Tail/brake light ^{*1}		LED	
License plate light		12V 5W	W5W
Reversing light		12V 16W	W16W
Interior light		12V 10W	_
High mount stop light ^{*1}		LEC)

ITEM: Wheels and Tyres	
Tyre size, front, rear and spare	185/65R15 88H ^{*2}
Rim size	15X5 1/2J
Tyre pressures For the specified tyre pressure, see the Tyre Information located on the driver's door lock pillar.	

<sup>If you need to replace the following bulbs indicated in the above table, consult your Maruti Suzuki authorised workshop.
*1 Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.
*2 If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed</sup> symbol.

ITEM: Capacities (approx.)		
Coolant (including reservoir tank)	"SUZUKI LLC: Super (Blue) Coolant" *1 "SUZUKI LLC: Standard (Yellow) Coolant" *1	4.5 L
Fuel tank	See "Fuel" in this section.	45 L#
Engine oil	Classification: API SN or SP ILSAC GF-6 Viscosity: SAE 0W-16	3.3 L (replacement with oil filter)
Transmission oil	"MARUTI GENUINE GEAR OIL 75W"	2.6 L
Brake fluid / Clutch fluid	MARUTI GENUINE BRAKE FLUID (MGBF) or DOT 3.	Refill to the proper oil level according to the instructions in "INSPECTION AND MAINTENANCE" section.

^{*1:} The recommended coolant varies depending on your vehicle. Refer to "INSPECTION AND MAINTENANCE" section.
#: The fuel tank capacity is slightly more than the recommended quantity of fuel that you can fill. The additional voluminous space is provided for safety and scientific reasons.

■ MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
■ MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS

■ MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS ■ MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS

■ MARUTI AUTHORISED SERVICE STATIONS (MASSs) : 'A' CATEGORY MASSs (**MARKED)

Free & paid Service, Major repairs & Accidental repairs

'B' CATEGORY MASSS (* MARKED)
Free & paid Service & Major repairs
'C' CATEGORY MASSS (##MARKED)
Free & paid Service & Minor repairs
'D' CATEGORY MASSS (#MARKED)

Free Service & Minor repairs

NOTE:

Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit <u>www.marutisuzuki.com</u> or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH:- 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NO. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOT NO IID/15, ACTIONAREA IID, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA

SERVICE NETWORK (AS ON 31.10.2023)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED Plot No-GEN 25 + 25 B/2,TTC INDUSTRIAL AREA,PAWANE VILLAGE,THANE BELAPUR ROAD,NAVI MUMBAI- 400705 PH NO-022 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 – 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 10th Floor, Block A, Global Infocity Park, No.40, Anna Nedunchalai, Kandanchavadi, Perungudi, Chennai, Tamil Nadu – 600096 PH 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING, VITTAL MALLYA ROAD, BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITD 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg, Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P.) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH

DETAILS OF AREA OFFICES		
Area Office Location	Area Office Address	
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47	
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact: 0755 6051555	
Calicut	Maruti Suzuki India Limited, Ground Floor, Aarpees Arcade, YMCA Cross Road, Opp. Indusind Bank, Kozhikode, Kerala -PIN 673001 Phone:- 0495-2723151	
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph 0422-2221091	
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447	
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343	
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764	
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph 0452-4200203	
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111	

SERVICE NETWORK (AS ON 31.10.2023)

DETAILS OF AREA OFFICES		
Area Office Location	Area Office Address	
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808	
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551	
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145	
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph 0771-4039643	
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal	
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009	
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366	
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001	
Vijayawada	Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2,Opposite Executive Club, Vijayawada, -530002,	
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299	

ANDAMAN AND NICOBAR ISLANDS 10.

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (PU01-01-), MADHUPUR VILLAGE, TEHSIL DIGLIPUR, NORTH ANDAMAN - 744202 PH : 271056.

PORTBLAIR

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-01-), GARACHRAMA, PORT BLAIR - 744105 PH:251980. 253586. 211590.
- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-02-), NAYAGEN, PORTBLAIR - 744101 PH:227104. 211682.

RANGAT

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-03-), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, - 744201 PH : 211546

ANDHRA PRADESH

AMALAPURAM

 S.B. MOTOR CORPORATION (BTS1-01-).
 #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201 PH:8374303303.

AMARAVATI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CVB1-01-), SURVEY NO. 29, TOWNSHIP-16, SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1, SUB-DIVISION-L40, MALKAPURAM LIMITS, MANDAL - THILLURU, AMARAVATI-CITY, DIST.-GUNTUR, ANDHRA PRADESH. - 522237 PH: 8374847777.

ANAKAPALLE

 JAYABHERI AUTOMOTIVES PVT. LTD. (0N01-01-), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. -531001 PH.:7093575555.

ANANTAPUR

- SRI DURGA AUTOMOBILES PVT. LTD. (1801-01-), 17/377-A,GOOTY ROAD,,ANANTAPUR - 515001 PH :9100902697.
- JAYALAKSHMI (1802-01-), SURVEY NO 146-3,SRI NAGAR COLONY, ANANTAPUR, ANDHRA PRADESH - 510052 PH 9177723377

ANNAVARAM

 VARUN MOTORS (SJH1-01-), DO-NO: 5/116, SURVEY NO – 59, CHALAMAYYA NAGAR, RAILWAY STATION ROAD, NEAR SMP BAJAJ SHOWROOM, ANNAVARAM, EAST GODAVARI DISTRICT, ANDHRA PRADESH. - 533406 PH -9885288339.

ARAKU

VARUN MOTORS (SJG1-01-), SURVEY NO
 33-9/A, RAVULAGADDA VILLAGE,BESIDE GOVT
 DEGGRE
 COLLEGE ARAKU VISHAKAPATNAM ANDHRAPR

ADESH - 531151 PH :9885317344.

 ADARSHA (BSI1-01-), SURVEY NO 448A/1, BASAR ROAD, BHAINSA,NIRMAL DISTRICT,TELANGANA - 504103

BHIMAVARAM

PH -8886092222

BHIANSA

 NOVELTY REDDY & REDDY MOTORS PVT LTD (7M01-01-), NEAR BYEPASS ROAD, UNDI ROAD, BHIMAVARAM - 534202 PH :7799771177

BOBBILI

 VARUN MOTORS PVT. LTD. (CAM1-01-), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE – MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA PRADESH. - 535558
 PH. 9885207772 9885317344

CHALLAPALLI

 MITHRA AUTO AGENCIES PVT LTD (CSX1-01-), D.NO.9-30, 9TH BLOCK, LAKSHMIPURAM LIMITS, RAMANAGARAM, CHALLAPALLI MANDALAM, DISTT. KRISHNA - 521126 PH :888603526

CHEPURAPALLI

 JAYABHERI AUTOMOBILES (SNS1-01-), 4-284, CHEEPURPALLI, VIZIANAGARAM, ANDHRA PRADESH - 535128 PH -6304902456

CHILKALURIPET

 JAYALAKSHI (SFT1-01-), M/S JAYALAKSHMI AUTO, SURVEY NO 457/C3, CHILKALURIPET, NADENIA MANDAL, GUNTUR, ANDHRA PRADESH - 522616 PH .9989144344.

CHINTALAPUDI

 REDDY AND REDDY MOTORS (BY01-01-), RS NO.698/2 MARUTI NAGAR COURT CENTRE, ELURU-CHINTALAPUDI HIGHWAY, CHINTALAPUDI MANDAL, ANDHRA PRADESH -534460 PH : 9912341624 . 9948827555.

CHIRALA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-04-), 9-1-92, CHURCH ROAD, CHIRALA, -523157 PH:7331151661.

CHITTOOR

 BHARGAVI AUTO PVT. LTD. (A801-03-), 22-241/A,KATTAMANCHI TIRUPATI ROAD,CHITTOOR, - 517001 PH:8463955558.

CHODAVARAM

 VARUN MOTORS (SHT1-01-), SURVEY.NO: 108-2-A, 108-3-A & 108-4, GOVCHODAVARAM, DIST. VISAKHAPATNAM, - 531036 PH :9885317344

CUDDAPAH

 MSA MOTORS (C201-03-), K.T. BYE PASS ROAD, CUDDPPAH, ANDHRA PRADESH, - 516001 PH : 7396685628

ELURU

 REDDY & REDDY MOTORS (1E01-01-), OLD NH-5 ROAD, BESIDES C R REDDY WOMEN'S COLLEFE OLD NH-5, ELURU, - 534001 PH 9705311566

ENKIPADU, VIJAWADA

 VARUN MOTORS (2603-08-), SURVEY NO 207/7, 207/8B2, 207/15B, D-NO 8-103, NEAR SHIVALAYAM TEMPLE, ENIKEPADU, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH - 521100 PH :9895576602.

GAJAPATINAGARAM

 JAYABHERI AUTOMOTIVES (SNN1-01-), SURVEY NO 50-14, D.NO 3-1/C, BONDAPALLI MANADALAM, GAJAPATHINAGARAM, ANDHRA PRADESH. - 535270 PH -9100818111

GAMBHEERAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (BQQ1-02-), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHERAM, ANANDPURAM, VISHAKAPATNAM. - 530052 PH :9642496789.

GUDIVADA

 VARUN MOTORS PVT. LTD. (2603-02-), D NO. 1-621,AUTONAGER 1ST LANE,GUDIVADA -521301
 PH 9885651383

GUDUR

 BHARGAVI AUTO PVT. LTD. (IS01-01-), SURVEY NO.1619/3A, GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101 PH:9652984999.

GUNTAKAL

 SRI DURGA AUTOMOBILES PVT. LTD. (BJA1-01-), SURVEY NO. 407, D. NO. 20/342-19, BELLARY ROAD, GUNTAKAL, DIST.-ANANTPUR, ANDHRA PRADESH. - 515801 PH :8886603336.

GUNTUR

- JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-01-), D-N-8-24-31,MANGALAGIRI ROAD,GUNTUR - 522001 PH :7893117111/0863-2241000.
- JAYALAKSHMI (G502-05-), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP -52203 PH 9848131133/962525555.
- JAYALAKSHMI AUTO (G502-06-), SURVEY NO 509, D.NO 25-11-50 TOWN, WARD NO 22, OPPOSITE ITC BUILDING, R AGRAHARAM, NAGARAPALAM ROAD, GUNTUR, - 522004 PH: 8374847777.

HANUMAN JUNCTION

 SANTOSH MOTORS (SHB1-01-), SY NO. 569/1 BESIDES NH5, VELURU VILLAGE, BAPULAPADU MANDAL, HANUMAN JUNCTION KRISHNA DISTRICT PIN 521105 - 521115 PH -9703633755.

HINDUPUR

 SRI DURGA AUTOMOBILES PVT. LTD. (1801-02-), PLOT NO. 83, NEAR RELIANCE PETROL BUNK, BYE PASS ROAD, HINDUPUR -515201 PH. 9100902697.

ICHAPURAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (GLL1-01-), SURVEY NO. 105/3, 105/4 AND 229/7, ICHAPURAM, BALAKRISHNAPURAM PANCHAYAT, MUNIBHADRA VILLAGE, ANDHRA PRADESH. - 532312 PH. 9394006666, 8142933666.

JAGGAIAHPETA

 VARUN MOTORS PVT. LTD. (2603-05-), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175 PH :9642225297/9052418111.

JAGGAMPET

 SB MOTORS (CDG1-01-), M/S D.NO 10-37, JAGGAMPETA, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533435 PH :8886677759.

JANGAREDDYGUDEM

Dealer Network (AS ON 31.10.2023)

 REDDY & REDDY MOTORS (1E01-02-), NEAR R&B GUEST HOUSE, ELURU ROAD, JANGAREDDYGUDEM, - 534447 PH :9912563666.

KAIKALURU

 SANTOSH AUTOMOTORS PVT. LTD. (CLW1-01-), SY. NO. 127/7 &9, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL, DIST. KRISHNA - 521333 PH. 7799787969.

KAKINADA

 S B MOTORS (W701-01-), D. NO.
 52-10-36/3, NEAR AMAR GHATI CENTER, KARAPA ROAD, KAKINADA - 533001 PH :9885119888.

KANCHIKACHERLA

 VARUN MOTORS PVT. LTD. (GJD1-01.), SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERLA VILLAGE AND MANDAL, KRISHNA DIST., ANDHRA PRADESH. - 521180 PH -9885092829 29885576602

KANDUKURU

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (BEY1-01-), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT – PRAKASHAM, ANDHRA PRADESH. - 523105 PH 9848131133

KANIGIRI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (SCC1-01-), SURVEY NO 793, PLOT NO 11,12, KANIGIRI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523230 PH-9848131133, 9052457512.

KAVALI

 BHARGAVI AUTO PVT. LTD. (A801-05-), KAVALI NELLORE, ANDHRA PRADESH - 524201 PH:9248702567.

KURNOOL

 MSA MOTORS (C201-01-), AUTO NAGAR, INDUSTRIAL ESTATE, NH-7, KURNOOL - 518004 PH: 9912826682.

 ADARSHA (C202-01-), SURVEY NO 105, DINNEDEVARAPADU VILLAGE, KURNOOL, ANDHRA PRADESG - 518001 PH :9160182222.

MACHERLA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CEY1-01-), D.NO. 343/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY. -522426 PH:9848131133, 9705261801.

MACHILIPATNAM

 MITHRA AUTO AGENCIES PVT LTD (2604-04-), NARASIMHA NACAR, MACHLIPATNAM, ANDHRA PRADESH - 521001 PH :8886063526.

MADANAPALLI

 BHARGAVI AUTO PVT. LTD. (AAT1-01-), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH 9959893434

MADHURAWADA

 JAYABHERI AUTOMOTIVES PVT. LTD. (BQQ1-01-), PLOT NO. 5, SURVEY NO. 4/P, KOMMADI ROAD, MADHURAWADA, VISHAKAPATNAM, ANDHRA PRADESH - 530048 PH :888669985.

MAI KIPILIRAM

 VARUN MOTORS (SEH1-01-), SURVEY NO 49/6A, MALKIPURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH -533250
 PH -9885317344

MANDAPETA

 S B MOTOR CORPORATION (BLC1-01-), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT – EAST GOADAVARI, ANDHRA PRADESH . -533308 PH :888664090.

MARKHAPURAM

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFF1-01-), D. NO. 4-515/12, SURVEY NO. 1167, OPP. INDUSTRIAL ESTATE, ONGOLE ROAD, MARKAPURAM, DISRT.-PRAKASAM, ANDHRA PRADESH. - 523316
 PH -9848131133, 7331151674.

MYLAVARAM

 VARUN MOTORS PVT. LTD. (GKL1-01-), D NO. 2-176/2, MAIN ROAD, MYLAVARAM, KRISHNA DISTRICT, PIN-521230, ANDHRA PRADESH -521230 PH 9885576602 9581337222

NAIDUPET

 BHARGAVI (BJD1-01-), M/S SURVEY NO 11-2, JUVALAPALEM VILLAGE, NAIDUPETA, ANDHRA PRADESH STATE: - 524126 PH: 9248747777.

NAKKAPALLI

 VARUN MOTORS (SFR1-01-), SURVEY NO 202/3, 203/4, PEDGUMMULURU GRAM PANCHAYAT, RAYAVARAM MANDAL, NAKKAPALLI, VISHAKAPATNAM, ANDHRA PRADESH - 531081

NANDIGAMA

PH:9885317344.

 VARUN MOTORS PVT. LTD. (CUB1-01-), RE SURVEY NO. 601/18, NH-9 ROAD, NANDIGAMA, DIST.-KRISHNA, ANDHRA PRADESH. - 521185 PH: 9885576602. 7702624494.

NANDYAL

 MSA MOTORS (CKB1-01-), SURVEY NO. 333, VUDUMALPURAM, MANDAL – NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT – KURNOOL. - 518501 PH: 9490666616

NARASARAOPET

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-03-), NEAR RELIANCE PETROL PUMP BUNK, VINUKONDA ROAD, NARASAROAPET, GUNTUR, - 522603 PH: 7680000502/9100791343.

NARSAPURAM

 NOVELTY REDDY & REDDY (SIU1-01-), SY NO. 98/7, NARSAPURAM - CHINCHINDA BYPASS ROAD,NARSAPURAM, PALAKOLLU MANDAL, WEST GODAVARI DISTRIC T,ANDHRA PRADESH - 534206 PH : 9703900011.

NARSIPATNAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (WT01-01-), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH : 7702333513

NELLORE

- BHARGAVI AUTO PVT. LTD. (A801-01-), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :9248742225.
- BHARGAVI AUTO PVT. LTD. (A801-04-), A2, INDUSTRIAL ESTATE, A.K. NAGAR, NELLORE, -524004 PH 9248727888
- VISHNU CARS PVT. LTD. (A802-01-), FIELD NO. 628 /SURVEY NO. 877, 878/A/4 AND 883/A/1A, NELLORE BIT-II, BESIDES GSR GARDENS, BALAJI NAGAR, NH-16, NELLORE CITY. - 542002 PH. 7337340778.

NUZIVIDU

 VARUN MOTORS PVT. LTD. (2603-03-), BESIDE R T C BUS DEPOT., OLD D M OFFICE, VIJAYAWADA ROAD, NIZVID - 521201 PH :2544444, 958133722.

ONGOLE

66. JAYALAKSHMI AUTOMOTIVES PVT. LTD (8Y01-02-), THROVAGUNTA COMPANY CENTRE.NH-5, GUNTUR ROAD, ONGOLE, PRAKASAM DISTRICT. - 523003 PH 9701055955

PALAKONDA

 VARUN MOTORS PVT. LTD. (CKO1-01-), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440
 PH. 9966877033. 9885317344.

PALASA

 JAYABHERI AUTOMOTIVES PVT. LTD. (BWH1-01-), SURVEY NO. 63 OF VILLAGE – PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT – SRIKAKULAM, ANDHRA PRADESH. - 532221 PH. 9849054442, 8790946464.

PARVATHIPURAM

JAYABHERI AUTOMOTIVES (BYS1-01-), SY.NO. 195-1A, NEAR TBR THEATRE, NARSIPURAM, PARVATHIPURAM MANDAL, DISTRICT – VIZIANAGARAM, ANDHRAPRADESH, PINCODE – 535522 - 535522 PH: 9100818111.

PATHAPATNAM

 VARUN MOTORS (SSJ1-01-), D.NO 4-245, SURVEY NO 264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA PRADESH - 532213 PH:9885317344.

PENDURTHI

 VARUN MOTORS PVT. LTD. (BAP1-01-). SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKAPATNAM - 530047 PH: 9885438455.

 VARUN MOTORS PVT LTD (BAP1-02-), SURVEY NO 240/1,2 & 241, PENDURTHI, VIZAG - 531173 PH:9703843737.

PIDUGURALLA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (BFN1-01-), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT – GUNTUR, ANDHRA PRADESH. -522413
 PH:9848131133, 9100787058.

PITHAPURAM

 S B MOTORS (CTS1-01-), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAVRI DIST., ANDHRA PRADESH. - 533 450 PH :8886677759, 8886677754.

PONNUR

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFC1-01-), PLOT NO. 4, D.NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124 PH. 3849445639, 9121141913.

RAJAHMUNDRY

- S. B. MOTOR CORPORATION (C501-01-), OPP-FCI GOWDOWN, JAILROAD, LALACHERUVLI, RAJAMU NDRY - 533101 PH :08885585667.
- S B MOTORS (C501-03-), D. NO. 3-243, NH-5, ROAD, HUKUMPETA, RAJAHMUNDRY. - 533 107 PH:08885886262.
- VARUN MOTORS PVT. LTD. (C502-01-), SURVEY NO. 660, PALACHERLA VILLAGE OF RANJANAGRAM MANDAL, RAJAHMUNDRY, EAST GODAVARI DSIT. - 533102 PH :9642225289.

RAJAM

 VARUN MOTORS PVT. LTD. (BLJ1-01-), PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH :779966998

RAMPACHODAVARAM

 VARUN MOTORS (SOK1-01-), SURVEY NO 14/1,IRLAPALLY VILLAGE, RAMPACHODAVARAM,ANDHRA PRADESH -533288 PH :9885288339.

REPALLE

 JAYALAKSHMI (SKA1-01-), D.NO 430, BESIDE ESAR PETROL BUNK, REPALLE, DISTRICT: GUNTUR, ANDHRA PRADESH - 522265 PH:8374847777.

S KOTA

 JAYABHERI (SIV1-01-), SURVEY NO 113/3, MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH : 9100818111.

SOMPETA

 VARUN MOTORS PVT LTD (GLX1-01-), KHATA NO 406,407,408 DENOTED IN SURVEY NO 241/1,MOGILIKOTUR VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284 PH:9885217344, 7382112922.

SRIKAKULAM

- VARUN MOTORS PVT. LTD. (4603-09-), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH :9985477155.
- 85. JAYABHERI AUTOMOTIVE (4606-04-), SURVEY NO 22/TP,22/8 AND SURVEY NO 29/12,16,17, BALAGA RURAL, SRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH-9100818111.

SULURUPETA

 BHARGAVI AUTO PVT. LTD. (BZA1-01-), KEERTI ENCLAVE, NEAR RTO OFFICE, NH-5, SULLURPETA - 524121 PH: 9848602345. 7997998516.

TADA

 VISHNU CARS PVT.LTD. (SFW1-01-), SURVEY NO 58/3,TADA, NELLORE DISTRICT - 524401 PH :9840434242.

TANUKU

 NOVELTY REDDY & REDDY MOTORS PVT LTD (BAR2-01-), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH -9912341624

TENALI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (PE01-01-), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH :226100/9866111788.

THAGARAPUVALASA

 VARUN MOTORS PVT. LTD. (COV1-01-). SURVEY NO.11/2B,11/3, NAGARAMPALEM VILLAGE, NH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM. - 531162 PH -98R5317344 98R5907772

TIRUPATI

- 91. BHARGAVI AUTO PVT. LTD. (A801-02-), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, - 517507
- PH: 7997969946.

 12. BHARGAVI AUTO PVT. LTD. (A801-06-), SURVEY
 NO. 2/B3, ADJACENT TO PARK HOTEL.,
 RENIGUNTA ROAD, TIRUPATI. 517501
 PH: 7997969919.
- VISHNU CARS (N902-01-), SURVEY NO. 192/3A2A, 200° CHENNAI – TIRUPATI HIGHWAY, KOTRAMANGALAM, RENIGUNTA MANDAL, TIRUPATI - 517520 PH. 9154971551.

TIRUVURU

 SANTOSH AUTOMOTORS PVT. LTD. (CIM1-01-), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. - 521235 PH:7799787969.

TUNI

 SATTIBABU MOTORS (PVT) LTD. (KY01-01-), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH :7661893888

VENKATAGIRIKOTA

 BHARGAVI AUTO PVT. LTD. (CDI1-01-), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK, GMR FUNTION HALL, DARASALLA, PALLIKUPPAM, KUPPAM ROAD, V KOTA - 517242 PH 9848602345, 7799907720

VENKATAPGIRI

 BHARGAVI AUTOMOBILES (SOL1-01-), SURVEY NO 166, 169/1, 169/2, RTC COLONY, VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH: 9248747777.

VIJAYAWADA

- MITHRA AUTO AGENCIES PVT LTD (2604-01-), 40-17-3, PICHAIAH STREET, GANDHI COLONY, VIJAYAWADA - 520001 PH: 8886063507.
- 99. VARUN MOTORS PVT. LTD. (2603-01-), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH:9885576602.
- VARUN MOTORS PVT. LTD. (2603-06-), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY, VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH. 897241177
- 101. SANTOSH AUTOMOTORS PVT. LTD. (2607-01-), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010 PH :92090943999/7799787949
- 102. VARUN MOTORS PVT. LTD. (2603-07-), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MINICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH 9442795791
- 103. SANTOSH AUTOMOTORS PVT. LTD (2607-02-), D NO. 77-42-16A, OPP, NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520 015 PH:7799787932.

VINUKONDA

 JAYALAXMI AUTOMOTIVES (SSO1-01-), SURVEY NO 239/3A,237/3, VINUKONDA, PALNADU DISTRICT, ANDHRA PRADESH - 522647 PH:8374847777.

VISHAKAPATNAM

- VARUN MOTORS PVT. LTD. (4603-0E-), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026 PH:9703843737.
- VARUN MOTORS PVT. LTD. (4603-08-), DOOR NO. 58/2, BLOCK NO. 5, BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH: 08912525885.

- VARUN MOTORS PVT. LTD. (4603-0F-), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., - 530007 PH -9885511911.
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-01-), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH -530018 PH :8886332209.
- 109. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-02-), D.NO:51-17-2, NH-5, KRANTHINAGAR, VISAKHAPATNAM, (ANDHRA PRADESH). - 530013 PH :7799772072
- 110. VARUN MOTORS PVT. LTD. (4607-01-), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007 PH : 77991424/43
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-03-), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046 PH. 8897541234.
- 112. VARUN MOTORS PVT. LTD. (4603-0K-), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE DUPPITURU, MANDAL ACHUTAPURAM, DISTRICT VISHAKAPATNAM, ANDHRA PRADESH. 531011 PH 1966877133.
- VARUM MOTORS PVT. LTD. (4603-0L-), SURVEY NO. 408/1 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ, VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. 530045 PH. 3985315344.
- VARUN MOTORS PVT. LTD. (4603-1B-), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530 017 PH :07901644535.

VISSANNAPETA

 VARUN MOTORS (SNO1-01-), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH - 521215 PH :9885576602.

VIZAG. VISHAKAPATNAM

 VARUN MOTORS (4603-10-), SURVEY NO 228/224, WARD NO 19, AGNAMPUDI, VIZAG -533053 PH :9885317344.

VIZIANAGARAM

117. VARUN MOTORS PVT. LTD. (4603-0C-), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM -535001 PH :8886721213.

Dealer Network (AS ON 31.10.2023)

 JAYABHERI AUTOMOTIVES PVT. LTD. (N801-01-), PLOT NO.B-1,DOOR NO.B-32-1,SURVEY NO.108/12A & 109/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH - 535001 PH: 7702333514.

YANAM

119. SB MOTORS (CTR1-01-), SURVEY NO 82-2, TALLAREVU MANDAL, YANAM, EAST GODAVARI DISTRICT - 533463 PH:8886677759.

YELAMANCHILI

 JAYABHERI AUTOMOTIVES PVT. LTD. (GJR1-01-), SURVEY NO. 19-1, 2, 3, 45/1, 45/28.3, KOKIRAPALLI, YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH. - 531055 PH. 984945639.3 9642502345.

YELESWARAM

121. VARUN MOTORS (SOP1-01-), VARUN MOTORS P.LTD,DO-NO - 2-4-41,BESIDE GOLLAJI GARU BUNK,YERRAVARAM ROAD,YELESWARAM -533429 - 533429 PH -9885511911

ARUNACHAL PRADESH

BHALUKPONG

122. DY MOTORS (YT01-01-), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG, ARUNACHAL PRADESH - 790114 PH :8415075164

ITANAGAR

 D Y MOTORS (7502-01-), LPC NO - DC/ICC/LPC, BORUM VILLAGE, PO/PS- NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH -791100
 PH :8415075164

RUKSIN

124. DY MOTORS (SHZ1-01-), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH -787060 PH :8415075164

ASSAM

BAIHATA CHARIALI

125. PALLAVI MOTORS PVT LTD (BNL1-01-), DAG NO. 1042, PATTA NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381 PH -9864052488

BARAMA

126. MITTAL AUTOZONE (SOX1-01-), VILLAGE -BARJAR, PO & PS - BARAMA, ASSAM -781346 -781346 PH :8638487401

BARPETA

 BHARATI MOTORS PVT. LTD. (7N01-02-), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313 PH:7002819523.

BIJOYNAGAR

 PODDAR CAR WORLD (IA01-01-), AT/PO-BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125 PH:9864209733.

BISWANATH CHAIRALI

129. RAMLAL DURGADUTT MOTORS PVT LTD (BX11-01-), DAG NO- 7,8,9 PERIODIC PATTA NO-24, REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176 PH :8724087940.

BONGAIGAON

BHARATI MOTORS PVT. LTD. (7N01-01-),
 CHAPAGURI ROAD, BONGAIGAON - 7833830
 PH:7002350887/9864427537.

CHAMATA

 PALLAVI MOTORS PVT LTD (CEI1-01-), DAG NO.1137, PATTA NO.376, MOUZA – DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306 PH -9864052488

DHEKIAJULI

132. RAMLAL DURGADUTT MOTORS PVT LTD (BRX1-01-), DAG NO.242, K.P. PATTA NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110 PH : 9706568722.

DHEMAJI

 SAIKIA AUTO PVT. LTD. (7P01-02-), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) -787057
 PH: 8638725209.

DIBRUGARH

- JAYBEE AUTO AGENCIES PVT. LTD. (C101-01-), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH: 9954789273.
- 135. BIMAL AUTO AGENCY (C102-01-), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA -MANKHATTA KANIKAR, DIST-DIBRUGARH, ASSAM. - 786004 PH :9864074525, 7003901301.

111.3004074323,70033

DIGBOI

 VISHAL CAR WORLD PVT LTD (BYD1-01-), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA, ASSAM. -786171 PH: 9435860000.

DIPHU

 RAMLAL DURGADUTT MOTORS PVT LTD (1P01-01-), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - - 782460 PH :9707556868.

DULIAJAN

 JAYBEE AUTO AGENCIES PVT. LTD. (ADA1-01-), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602 PH : 7002722358.

GOALPARA

 BHARATI MOTORS PVT. LTD. (YN01-01-), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301 PH: 9101940/372

GOLAGHAT

140. RAMLAL DURGADUTT MOTORS PVT LTD (J303-01-), DAG NO. - 718, 684 & 706, PATTA NO 213, 188 & 192, KURUKA GAON, P O- MORANGI, P.S -GOLAGHAT, DIST: GOLAGHAT, ASSAM PIN-785702 - 785702 PH : 7002099547.

GORAIMARI

141. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (GMB1-01-), DAG NO. 3, RP PATTA NO - 11, VILLAGE- CHALABASTI, MOUZA- GORAIMARI - 783390 PH. 7002279100.

GUWAHATI

- 142. BIMAL AUTO AGENCY (901-01-), JHALUKBARI, GUWAHATI. - 781014 PH: 9864074525
- 143. PALLAVI MOTORS PVT LTD (902-01-), DAG NO. 182,NEXT TO DEPTT. OF FAMILY WELFARE,SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI -781022 PH -9864210937.
- PODDAR CAR WORLD PVT LTD (904-01-), HENGRABARI , VIP ROAD, GUWAHATI - 781036 PH:9508746340.
- BIMAL AUTO AGENCY (903-01-), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021 PH: 9864489722
- 146. BIMAL AUTO AGENCY (901-02-), BEHARBARI, BEHIND DHOOM RESTAURANT, NH-37, GUWAHATI - 781028 PH 9864041406.
- PODDAR CAR WORLD (905-01-), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). -781029
 PH:7002929414.

- 148. BIMAL AUTO AGENCY (903-03-), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005 PH:7578005159.
- MITTAL AUTOZONE (908-01-), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028 PH :9864296666.
- 150. PALLAVI MOTORS PVT LTD (902-02-), DAG NO. 2201, PATTA NO. 237, VILLAGE – JYOTIKUCHI, MOUZA – BELTOLA, AK ZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. -781034 PH. 9984052488.

HOJAI

151. RAMLAL DURGADUTT MOTORS PVT LTD (ARA1-01-), KHATIYAN NO.: 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT – NAGAON, ASSAM - 782435 PH:7002880534.

HOWLY

 PODDAR CARWORLD (GKW1-01-), PATTA NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316 PH: 8085957586

HOWRAGHAT

153. BAJRANG CARWORLD (SGR1-01-), HOWRAGHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481 PH :9864191169.

JAGI ROAD

154. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-02-), JACIROAD,MORIGAON,NALAOW,ASSAM -782410 PH 9365884355.

JORHAT

- RAMILAL DURGADUTT MOTORS PVT LTD (G902-01-), DAG NO. 7 & 8 OF P.P NO. 33, DAG O. 9 OF P.P NO. 61, DAG NO. 382 OF P.P NO. 206, VILLAGE - PAKIMURI HABIGAON, MOUZA -SARAIBAHAL, JORHAT. - 785006 PH :7002099547.
- JAINCO AUTOTECH (G904-01-), AT ROAD, SEUNI ALI, JORHAT, ASSAM 785001 - 785001 PH:9287957451.

KALGACHIA

157. MITTAL AUTO (SLB1-01-), VILL - KALGACHIA, PO - KALGACHIA , DIST BARPETA - 781319 PH :8638487401.

KARIMGANJ

 JAIN UDYOG (6901-04-), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710
 PH:9435179025

KAYAKUCHI

MITTAL AUTO ZONE (--), B.B ROAD,
 KAYAKUCHI, BARPETA, ASSAM - 781352
 PH. 8638487401

KHARUPATIA

 BIMAL (BWR1-01-), VILL -BOLOGARAH, P.O -KHARUPETIA, P.S DHULA, DIST - DARRANG, ASSAM. - 784115 PH :9864074525.

KHATKHATI

161. PODDAR CAR WORLD PVT. LTD. (CAZ1-01-), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG. -782460 PH 6000900381

LANKA

162. RAMLAL DURGADUTT MOTORS PVT LTD (SDD1-01-), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR, MOUZA - LANKA, DIST -HOJAI, ASSAM. - 782442 PH 9707556868

MANGALDOI

 PODDAR CAR WORLD (YW01-01-), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115 PH:9706970132

MARGHERITA

 VISHAL CAR WORLD PVT LTD (YR01-01-), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181 PH :9435860000

MORIGAON

165. RAMLAL DURGADUTT MOTORS PVT LTD (RB01-01-), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM. -782105 PH.7002239592.

NAGAON

166. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-01-), KHUTIKHATIA, HAIBARGON, NAGAON - 782002 PH 9706007918

 BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (7/03-01-), DAG NO. 255, 1508(N)/254(O), 1509(N)/257(O) AND 291, PATTA NO. 506(N)/15(O), 507(N)/15(O), 507(N)/97(O) AND 88, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST-NAGAON. - 782002 PH: 9435060474/9864191169.

168. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-03-), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM - 782003 PH :9706007918

NAHARKATIYA

169. JAYBEE AUTO AGENCIES PVT. LTD. (C101-03-), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM. - 786610 PH. 7002722388.

NALBARI

170. BIMAL AUTO AGENCY (9201-01-), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335 PH :757684284

NORTH LAKHIMPUR

 SAIKIA AUTO PVT. LTD. (7P01-01-), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM -787031
 PH: 8473946336.

 SAIKIA AUTO PVT. LTD. (7P01-03-), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001 PH :7002571073.

PATHSALA

 PODDAR CAR WORLD PVT. LTD (CLD1-01-).
 DAG NO. 451, PATTA NO. 151 KMP, PATHSALA, DIST.-BARPETA, ASSAM. - 781325
 PH :6000900256

RAJGARH

174. JAYBEE AUTO AGENCIES PVT. LTD. (CIJ1-01-), DAG NO.182, PP NO.140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611 PH 1984789973.

RANGIA

175. PODDAR CAR WORLD PVT. LTD. (6X01-01-), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354 PH:8724877892.

SILCHAR

 JAIN UDYOG (6901-02-), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006 PH:9706002524.

SIVASAGAR

177. RAMLAL DURGADUTT MOTORS PVT LTD (G902-02-), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR -785640 PH -7002099547

SORBHOG

178. MITTAL AUTOZONE (SGS1-01-), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM. -781317 PH :8011042222.

TANGLA

179. BIMAL AUTO AGENCY (CHO1-01-), DAG NO.:121, PATTA NO. 101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521 PH :9954387619.

TF7PUR

 RAMLAL DURGADUTT MOTORS PVT LTD (T102-01-), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154 PH -8724087040

181. RAMLAL DURGADUTT MOTORS PVT LTD (T102-02-), GORAIMARI, VILLAGE - SOLGAON, TEZPUR, ASSAM. - 784001 PH :9836036157

TINSUKIA

 VISHAL CAR WORLD PVT LTD (J401-01-), LAIPULY, A.T. ROAD, TINSUKIA, DIST -TINSUKIA, ASSAM - 786183 PH :9435860000.

BIHAR

ARARIA

 SEEMANCHAL MOTORS PVT. LTD. (0701-01-), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318 PH :8797096013

ARRAH

184. PEARL CARS (VU01-01-), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH :8294634604.

AURANGABAD

 KARLO AUTOMOBILES (SNG1-01-), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANDI, AURANGABAD -824101
 PH 7019085212

BANKA

 SEEMANCHAL MOTORS PVT. LTD. (CEQ1-01-), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101 PH: 3797096020.

BEGUSARAI

 GS MOTORS PVT. LTD. (1001-01-), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR -851101 PH: 9204756206.

BETTIAH

 SHREE GOPAL AUTO PVT. LTD. (0401-01-), BEETIAH - MOTIHARI HIGHWAY, NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438 PH. 9771486183.

BHAGALPUR

 SEEMANCHAL MOTORS PVT. LTD. (G802-01-), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005 PH: 8797096020.

BHITA

 REESHAV (CBY2-01-), PLOT NO 1674 & 1676, KHATA NO - 19 & 67 AT MOUZA - MAHADEOPUR PHULARI, P.O - BIHTA, P.S- BIHTA, DISTRICT -PATNA - 801103 PH : 77639545R5

BIHARSHARIF

191. REESHAV AUTOMOBILES (MG01-03-), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR -803101 PH 9983832175

BUXAR

192. PEARL CARS (VV01-01-), C/O DEVDHTRHA UPPDHYYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101 PH :8294634605/8294634602

CHAKIA

 RAM KRISHNA MOTORS PVT. LTD. (CWA1-01-), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412 PH :9801773716.

CHAPRA

194. REESHAV AUTOMOBILES (MG01-02-), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301 PH 7061295296

DANAPUR

 ALANKAR AUTO SALES & SERVICE PVT LTD (1504-02-), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, - 800018 PH :9386898458.

DANAPUR, PATNA

196. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-05-), TOUZI NO. 5057, THANN NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA. -801503 PH 9334415434

DARBHANGA

 RAJKRISHNA MOTORS LLP (1V02-01-), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - 846009 PH :7004529271.

 RAJKRISHNA MOTORS LLP (1V02-02-), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) -846003 PH: 9693127351.

DEHRI ON SONE

Dealer Network (AS ON 31.10.2023)

 PEARL CARS (1X01-02-), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST.-ROHTAS, BIHAR. - 821307 PH :8204674600?

GAYA

KARLO AUTOMOBILES PVT LTD (Y601-01-),
 BODH GAYA, GAYA. - 824231
 PH -7004574631/8539063615

 DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD (Y602-01-), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD,GAYA, PIN 823004 - 823004 PH 1903 1011806/9900024001.

GOPALGANJ

202. SHREE GOPAL AUTO PVT. LTD. (O301-01-), NH-28, DANAPUR, TEHSIL-MANJAGARH,GOPALGANJ (BIHAR) -

800023 PH:9771486170/9771486139.

HAJIPUR

203. REESHAV AUTOMOBILES (MG01-01-), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI). - 844101 PH -9060945038

JEHANABAD

 DMC CARS (SNV1-01-), KHATA NO - 80, PLOT NO -1490, MOUZA - MUTHER, PS- JEHANBAD, DIST - JEHANABAD. - 804408 PH -9031011806/9900024001

KATIHAR

 SEEMANCHAL MOTORS PVT. LTD. (0601-01-), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAR PURNEA ROAD, KATIHAR - 854105 PH:7762893700.

KISHANGANJ

206. SEEMANCHAL MOTORS PVT. LTD. (PX01-01-), PASCHIM PALI ROAD, COLLEGE ROAD, THANA:KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101 PH: 8797096019.

LAKHISARAI

 GS MOTORS PVT. LTD. (CHU1-01-), TAUZI NO.
 KHATA NO. 3, KHESRA NO. 496, MOUZA -JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR. - 811311 PH-9204756206.

MADHUBANI

 RAJKRISHNA MOTORS LLP (CAJ2-01-), BHOWRA TOLA, BARDIBAN, MADHUBANI, BHAR - 847211 PH :9304481978 9693127351.

MOHANIA

209. PEARL CARS (VW01-01-), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109 PH :8/94634632/8294634649

MOTIHARI

 RAJIV AUTOMOBILES PVT LTD (T401-03-), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN, BIHAR - 845401 PH :9234609669.

MUZAFFARPUR

211. RAJIV AUTOMOBILES PVT LTD (T401-01-), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002 PH - 9940347908

212. RAM KRISHNA MOTORS PRIVATE LTD. (T402-01-), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. -842001 PH 91102173333

 RAJIV AUTOMOBILES PVT LTD (T401-04-), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146 PH :9234609671.

NAUGACHIA

 SEEMANCHAL MOTORS PVT. LTD. (CFS1-01-), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204 PH.8797098014, 8797098020.

NAWADA

 REESHAV AUTOMOBILES (MG01-04-), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR -805110

PH :6206162228. PATNA

 VAU'S AUTOMOBILE (1503-01-), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA. - 800014 PH :9771446012

 KARLO AUTOMOBILES PVT LTD (1502-04-), NEAR BATA GUNJ, DINGA PATNA, BIHAR. -800013
 PH :09304212119/7004573547.

218. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-03-), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001 PH:9934020200.

 REESHAV AUTOMOBILES PVT.LTD. (1506-01-), PLOT NO.25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004 PH.7632999356. KARLO AUTOMOBILES PVT LTD (1502-05-), JAGDEOPATH , NEAR SAI CORPORATE PARK, PATNA - 801506 PH 3264190675.

 ALANKAR (1504-06-), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA – 800006 - 800006 PH: 9304403916.

PURNEA

 SEEMANCHAL MOTORS PVT. LTD. (6V01-01-), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326 PH :8797096014

SAHARSA

 GS MOTORS PVT. LTD. (AAP1-02-), PATUAHA, NH 107 SAHARSA,BIHAR - 852201
 PH:9263638456

SAMASTIPUR

224. RAJKRISHNA MOTORS LLP (1W02-01-), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101 PH 9204552405

SASARAM

 PEARL CARS (1X01-01-), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115
 PH :8294634602/8294634649

SITAMARHI

226. RAJIV AUTOMOBILES PVT. LTD. (E001-01-), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. -843301 PH: 9234609671

SIWAN

 SHREE GOPAL AUTO PVT. LTD. (O501-01-), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236
 PH :9771486132

CHANDIGARH

CHANDIGARH

7280074124

228. MODERN AUTOMOBILES (702-01-), 4 M.W. INDL AREA, CHANDIGARH - 160002 PH 9646000190

 AUTOPACE NETWORK PVT LTD (705-01-), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002 PH: 9878422201.

 TRICITY AUTOS (9M01-02-), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH -160002

PH:9988882335.

 NAVDESH AUTO LLP (708-01-), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. -160002 PH.:7087035482.

CHATTISGARH

CHARODA

 SPARSH AUTO (SIZ1-01-), NH-6, OPP. RAIL NAGAR, CHARODA, BHILAI - 490025 PH: 8770554701

GHARGHODA

 M SQAURE (SML1-01-), M/S M SQAURE, VILLAGE BHENGARI, NAVAPARA-TENDA, GHARGHODA, DISTRICT – RAIGARH CHHATTISGARH. PIN CODE: 496111 -496111
 PH 7987690484

KURUD

 HDN MOTORS (SKS1-01-), KHASRA NO 601/9 & 601/10, DHAMTARI-RAIPUR ROAD, KURUD, CHHATTISGARH - 493663 PH:7909800004.

PHULBANI

 SKY AUTO (CEP1-01-), PLOT NO. 54/533, GUDRISAHI, KHAJURIAPADA, DISTRICT – KANDHAMAL ODISHA: PIN CODE: 762001 -762001 PH:9776900333.

CHHATTIGARH

PENDRA

236. M SQAURE (SC21-01-), – M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA, GOURELA PENDRA MARWAHI-495119 -495119 PH. 7987590484.

CHHATTISGARH

AKALTARA

 M SQAURE (SKE1-01-), SHOP NO 4,5,67 & 8, SHRI NARAYAN COMPLEX & GODOWN, NEAR INDRA UDYAN, SHEORINARAYAN ROAD, AKALTARA-495552, CHHATTISGARH -495552 PH : 7987590484.

AMBIKAPUR

238. MAHAMAYA AUTOCARS PVT LTD (AE01-01-), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001 PH :7987741432

BAGBAHARA

239. HDN MOTORS (SEB1-01-), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449 PH. 7909800004.

BAIKUNTHPUR

240. MAHAMAYA AUTOCARS PVT LTD (CQU1-01-), WARD NO.01, KHATA NO.91/6, TEHSIL -BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335 PH :9179380707.

BALOD

 CHOUHAN (SFE1-01-), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228
 PH -9837325267

BALODA BAZAR

242. SKY AUTOMOBILES (5001-04-), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332 PH :9893307429.

BASNA

 VISHWABHARTI (VT01-01-), M/S VISHWABHARTHI AUTO, PADAMPUR ROAD, BASNOUL, BASNA, CHHATTISGARH - 493554 PH :6262620060.

BEMETRA

244. CHOUHAN AUTOMOBILES LLP (CBC2-01-), KHASRA NO. 88/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVCHAD CHOWK, BEMTARA CHATTISGARH - 491335 PH :6362000229

BHATAPARA

245. SPARSH AUTOMOBILES (BBJ1-01-), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118 PH :8921326361/ 9285505780

BHILAI

- 246. CHOUHAN AUTOMOBILES LLP (8305-01-), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. -490023 PH 9111100140
- 247. SPARSH AUTOMOBILES PVT LTD (8304-01-), R-17. INDUSTRAIL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH-490026 PH:8779064848.
- 248. CHOUHAN AUTOMOBILES LLP (8305-02-), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001 PH :6262000222.

BHILLAI

249. SPARSH AUTOMOBILES (8304-02-), M/S. SPARSH AUTO, VEERSAVARKAR MARKET, G.E ROAD, SUPELA, BHILLAI-490023 - 490023 PH :9926626662

BILASPUR

 SATYA AUTO PVT LTD (C303-01-), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001 PH: 9109194833.

- SATYA AUTO PVT LTD (C303-02-), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. - 495006 PH: 9977879698.
- 252. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (C302-01-), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. 495223 PH 6967622560

DALLIRAJHARA

 CHOUHAN (SMZ1-01-), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD DISTRICT-491228 - 491228 PH 626200022

DEOBHOG

254. SPARSH AUTO (SIQ1-01-), IWS SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR, NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG – 493890 -493890 PH :9926626662

DHAMTARI

255. SKY AUTOMOBILES (7V01-01-), KASRA NO 238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH :8889998612.

DURG

256. SPARSH AUTOMOBILES PVT LTD (7W03-01-), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001 PH :9840437544

GARIYABANDH

 SPARSH AUTOMOBILES (CCH1-01-), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032 PH :969633883.

JAGDALPUR

 SKY AUTOMOBILES (EC01-01-), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001 PH:9109996511.

JANJGIR

259. SATYA AUTO PVT LTD (9N02-01-), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668 PH : 7747000446

KANKER

260. SKY AUTOMOBILES (5001-06-), RAZA NAGAR, SINGARBHAT, NH-30, KANKER, DISTRICT – KANKER, CHHATTISGARH - 494334 PH :8889998625.

KAWARDHA

 CHOUHAN AUTOMOBILES LLP (DI02-01-), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491 995 PH 6262000222

KHAIRAGARH

262. SPARSH AUTOMOBILES PVT LTD (GMG1-01-), KHAIRAGARH -JHALBANDHA ROAD,AMLIPARA, OPP - BIJALI OFFICE, KHAIRAGARH -491881 -491881 PH :9926626662.

KHARSIA

263. SATYA AUTO (SET1-01-), M/S SATYA AUTO , BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 496661 PH :9993092051

KONDAGAON

264. SKY AUTO (SDF1-01-), – M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGOAN, CHHATTISGARH - 494226 PH :9425204051

KORBA

265. SATYA AUTO PVT LTD (U702-01-), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681 PH :8462000861

MAHASAMUND

266. SPARSH AUTOMOBILES (5002-02-), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND. -?? PH -9926280700

MANENDRAGARH

267. MAHAMAYA AUTOCARS PVT LTD (AE01-02-), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442 PH -9584136234.

MUNGELI

268. SATYA AUTO PVT LTD (BLE2-01-), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468 PH :8462000844.

PATHALGAON

269. MAHAMAYA AUTOCARS PVT LTD (BX01-01-), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118 PH :9752195523.

PITHORA

 SPARSH AUTOMOBILES (CCG1-01-), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008 PH: 9926280700.

RAIGARH

 SATYA AUTO PVT LTD (7Y03-01-), JINDAL ROAD, RAIGARH - 496001 PH:7024398350.

RAIPUR

- SKY AUTOMOBILES (5001-01-), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010 PH: 9584433102.
- SKY AUTOMOBILES (5001-02-), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH: 9584460290.
- SPARSH AUTOMOBILES (5002-01-), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001 PH:9669792000.
- SKY AUTOMOBILES (5001-05-), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH:9893000161.
- SKY AUTOMOBILES (5003-01-), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH :9522314155.
- SPARSH AUTOMOBILES (5002-04-), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004 PH:9009666400.
- 278. SPARSH AUTOMOBILES (5002-05-), PLOT 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR - ?? PH :9977220395.
- 279. SKY AUTOMOBILES (5001-07-), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. - 492013 PH:9584460289.
- 280. HDN MOTORS PVT. LTD. (5005-01-), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. -492001 PH. 7909800093.
- VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-01-), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH -492005 PH :6262620057.

RA.IIM

 SPARSH AUTOMOBILES (5002-03-), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881 PH :96696383.

RAJNANDGAON

 SPARSH AUTOMOBILES PVT LTD (LQ02-01-), NEAR HANUMAN TEMPLE, VILL-MANKI, NH-6, RAJNANDGAON, CHHATTISGARH - 491441 PH:7887518100.

SARAIPALLI

Dealer Network (AS ON 31.10.2023)

284. SKY AUTOMOBILES PVT. LTD. (BUF1-01-), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI -493558

PH:7000723259. SARANGARH

733751

285. SATYA AUTO PVT LTD (BUC2-01-), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND. SARANGARH. DISTT. RAIGARH. -

PH:8462000841.

SIMGA

 HDN MOTOR (SSZ1-01-), PLOT NO 2, WARD NUMBER 05, SHANKAR NAGAR, SIMGA, BALODA BAZAR, CHHATTISGARH - 493101 PH :9826886000.

TILDA

 SKY AUTOMOBILES (CWR1-01-), KASRA NO. 29/31, TILDA, DIST.-RAIPUR, CHHATTISGARH. -493 114 PH :9425/04051

TITLAGARH

288. ODYSSEY MOTORS (SQE1-01-), M/S PLOT NO 687/1216, MOUZA PIPALPADAR. TITLAGARH,BALANGIR, ODISHA - 767033 PH :9439314464

CHHATTISGARJH

SHIVIRNARAYAN

289. SATYA AUTO (SMQ1-01-), M/S SATYA AUTO, DEORI, SHIVRINARAYA, JANJGIR – CHAMPA, CHATTISGARH - PIN 495556 - 495556 PH :9993092051.

DADRA AND NAGAR HAVELI

SII VASSA

 KATARIA AUTOMOBILES PVT. LTD. (ED01-01-), NEAR ATHAL CHAR RASTA DADAR & NAGAR HAVELI, SILVASSA - 396230 PH:9723816223.

DAMAN AND DIU

DAMAN

 KATARIA AUTOMOBILES PVT. LTD. (104-08-), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY -396210 PH: 9924130655.

DELHI

DELHI

SAYA AUTOMOBILES PVT. LTD. (808-03-), A
 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033
 PH:47088888.

- 293. BAGGA LINK MOTORS PVT LTD. (811-01-), 395 PATPAR GANJ INDL. AREA, PATPARGANJ, NEW DELHI - 110092 PH :4648830. 46488831.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-01-), A-100
 MAYAPURI, PHASE-II, NEW DELHI - 110064
 PH :41845000, 49305232.
- COMPETENT AUTOMOBILES CO. LTD. (806-03-), PLOT NO.3,GAZIPUR,DELHI, - 110096 PH:45300000.
- 296. T.R. SAWHNEY MOTORS PVT LTD (819-01-), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094 PH :9999399104, 9999399110.
- 297. RANA MOTORS PVT LTD (08A1-02-), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020 PH :41707777.
- 298. T.R. SAWHNEY MOTORS PVT LTD (819-02-), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042 PH :71118333.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F2-01-), 5, WAZIRPUR, INDUSTRIAL AREA, ADJACENT TO WAZIRPUR DEPOT, RING ROAD, NEW DELHI - 110035 PH :999900388, 8860637394, 8860637306, 8448594691.
- ROHAN MOTORS LTD. (886-01-), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044 PH :40567900. 41679252-259
- MAGIC AUTO PVT. LTD. (888-01-),
 A-93,PHASE-2,MAYAPURI INDL AREA,DELHI 110064
 PH -41847777.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F3-01-), KHASRA NO. 544/1, MUNDKA, NEW DELHI - 110041 PH : 25963535, 48616500.
- T.R. SAWHNEY MOTORS PVT LTD (819-04-), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092 PH :9999044326, 9999525756.
- MAGIC AUTO PVT. LTD. (08B7-01-), PLOT NO. 68/3,MOTINAGAR,NEW DELHI, - 110015 PH 43777777 43777721
- 305. SAYA AUTOMOBILES (808-28-), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI-110033 PH :27731325, 27731856.
- 806. RANA MOTORS PVT LTD (08A1-04-), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020 PH :40877777, 26389930.

- COMPETENT AUTOMOBILES CO. LTD. (806-06-), 650/1A, 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI - 110015 PH: 8377007988.
- PREM MOTORS PVT. LTD. (08D4-01-), KH.
 NO.804/2,MAHIPALPUR MATA CHOWK, DELHI -110037

PH:011 42390000.

- AAA VEHICLEADES PVT. LTD. (08B9-03-),
 VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 &
 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR
 NO.616, MUNDKA, NEW DELHI 110041
 PH :9717092903.
- RANA MOTORS PVT LTD (08A1-05-), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033 PH :41809999 42474444
- 311. T.R. SAWHNEY MOTORS PVT LTD (08D2-01-), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064 PH :71119333 9999049337
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-02-), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015 PH :999903888.
- MAGIC AUTO PVT. LTD. (08D5-01-), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092
 PH :9818741741
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-03-), PLOT NO. 87/1, RANAJI ENCLAVE, NAGLI SAKRAWATI,BEHIND NAGLI METRO STATION, NAJAFGARH, NEW DELHI. -110043
- PH :8448487126, 8448095528.
 315. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD, (08F5-01-), 36/22, NEAR RAMDEV CHOWK, NARELA, DELHI 110040 PH :9999127953 : 9873578740
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-04-), 32/19, OPP SHANTI GARDEN, DWARKA SECTOR-3, MATIALA DELHI -110059

PH:9873173005.

- 317. FAIR DEAL WHEELS PVT. LTD (08E3-01-), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJHAWALA ROAD, DELHI 110086 PH 9448690737
- COMPETENT AUTOMOBILES CO. LTD. (806-07-), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059 PH:9582797774.
- JAGMOHAN AUTOMOTIVES (08F6-01-), PLOT NO. 69/2, WAZIRPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052 PH :9650790351.

- RANA MOTORS (08A1-08-), B-83, GT KARNAL ROAD, INDUSTRIAL AREA, OPP. GUJRANWALA TOWN, NEAR BIKANER WALA, DELHI - 110033 PH :9289496300.
- 321. AAA VEHICLEADES (08B9-G1-), KHASRA NO. 204, MAIN CHHATARPUR ROAD, CHHATARPUR, NEAR SAI BABA MANDIR, DELHI, PIN-110030 -110030

PH:9829342761

- 322. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F8-01-), PLOT NO.9, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. 110063
 PH 43298888
- 123. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F8-02-), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. - 110052 PH -42020000 9910114255
- 324. VIPUL MOTORS (08F7-01-), B-26, JHILMIL INDUSTRIAL AREA, DELHI -110095 110095 PH :9811233385.

OKHLA, DELHI

 AAA VEHICLEADES PVT LTD (08B4-01-), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020 PH:8448582912.

WAZIRPUR - DELHI

326. DD MOTORS (08F1-05-), A-90, WAZIRPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052 PH :9310367233

GOA

BICHOLIM

327. SAI SERVICE PRIVATE LIMITED (BHN1-01-), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529 PH :2385500, 9881746566.

CANACONA

328. CHOWGULE INDUSTRIES PVT. LTD. (IT01-01-), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702 PH :0832-2633010/8805024916.

CUNCOLIM

 SAI SERVICE PRIVATE LIMITED (3402-06-), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNAMODDI, CUNCOLIM, SOUTH GOA -403703
 PH :2763062, 2763063, 9850398057.

DHARBANDORA

 CHOWGULE INDUSTRIES PVT. LTD. (3408-07-), AT- KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401 PH:0832-6623477/7888004357.

MAPUSA

- SAI SERVICE PRIVATE LIMITED (3402-05-),
 D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA,
 GOA, -403507
 PH:2267000.8660432266.
- 332. CHOWGULE INDUSTRIES PVT. LTD. (3408-03-), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE,KARASWADA, MAPUSA,GOA - 403507 PH:0832-6631666/6631608/8888817955.

MARGAO

- CHOWGULE INDUSTRIES PVT. LTD. (3408-01-), OPP.DAMODAR
 TEMPLE,FATORDA,MARGOA,GOA - 403602
 PH :0832-6623444/420/7796630235
- 334. SAI POINT CARS PVT LTD (3409-01-), H.NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN,SALCETE ,GOA - 403722 PH :9545454820/8380013499.
- 335. SAI SERVICE PRIVATE LIMITED (3402-02-), SURVEY NO. 212/4,VILLAGE - VERNA,TAL: SALCETE, INEXT TO AGNEL POLYTECHNIC, MARGAO - 403718 PH: 2883000. 2791195.9834398096.
- 336. CHOWGULE INDUSTRIES PVT. LTD. (3408-08-), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALCETE SOUTH GOA, GOA - 403722 PH:0832-6621800/9922950800.

PANAJI

- CHOWGULE INDUSTRIES PVT. LTD. (3408-02-),
 D.B BANDODKAR MARG, CAMPAL, PANAJI, GOA 403001
 PH: 9922950798/9922925701.
- SAI SERVICE PRIVATE LIMITED (3402-07-), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002. - 403001 PH :2222922/225222.9923865179.

PERNEM

339. CHOWGULE INDUSTRIES PVT. LTD. (CUA1-01-), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUTRIAL TRAINING INSTITUTE, TALUKA -PERNEM, DIST.-NORTH GOA. - 403512 PH. 8380082893.

POLEM

 CHOWGULE INDUSTRIES (SH01-01-), DULGAL-SHELIM, VILLAGE POLEM-LOLIEM .SOUTH GOA.403728 - 403728 PH :9049555395.

PONDA

 SAI SERVICE PRIVATE LIMITED (3402-03-), OFF PANJIM HIGHWAY, PONDA, GOA, - 403401 PH:2324106, 2311499, 2324120, 9518349559.

PORVORIM

342. SAI SERVICE PRIVATE LIMITED (3402-01-), SURVEY NO: 36/1, PENHA DE FRANCE, TAL: BARDEZ, ALTO PCRVORIM, GOA - 403501 PH: 2419200. 2414324, 9881746567.

SANVORDEM

343. CHOWGULE INDUSTRIES PVT. LTD. (BTK1-01-), SURVEY NO. 4, SUBDIVISION-3, VILLAGE – CACORA, TALUKA – CURCHOREM, SANVORDEM, DIST. – SOUTH GOA, GOA. - 403706
PH. 9850477607.

SATTARI

344. CHOWGULE INDUSTRIES PVT. LTD. (3408-10-), SURVEY NO. 60, SUB DIV NO. 05. VILLAGE ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA - 403505 PH :9923464429

TALEIGAON

345. CHOWGULE INDUSTRIES PVT. LTD. (3408-06-), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON, - 403001 PH :9922950789922925701.

VASCO

- 346. SAI SERVICE PRIVATE LIMITED (3402-04-), NEXT TO SHIKALIM CHURCH, SHIKALIM, VASCO, GOA - 403802 PH -2542581/2526008/2526000/9850398058
- 347. CHOWGULE INDUSTRIES PVT. LTD. (3408-09-), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO,GOA - 403802 PH :0832-2500407/427/9921943608/9850986904.

GUJARAT

AHMEDABAD

- 348. KIRAN MOTORS LTD (102-01-), SARKHEJ -GANDHINAGAR HIGHWAY, OPP. RAJPATH CLUB, AHMEDBAD - 380054 PH :9624055445.
- 349. KATARIA AUTOMOBILES PVT. LTD. (104-01-), D/8 BEHIND ESI HOSPITAL, OUTSIDE DARIAPUR DARWAJA, AHMEDABAD - 380016 PH: 9824543500.
- 350. POPULAR WHEELERS (INDIA) PVT. LTD. (105-01-), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443 PH: 61903232.
- KIRAN MOTORS LTD (102-02-), BEHIND L&T GODOWN, SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210 PH :26891863, 26891009, 26891294.
- KATARIA AUTOMOBILES PVT. LTD. (104-05-), NEAR KOKHRA BRIDGE, MANINAGAR - 380008 PH:7567568182.

- KATARIA AUTOMOBILES PVT. LTD. (110-01-), BEHIND ADANAL PUMP, NEAR MAKARBA CROSSING, MAKARBA, SG HIGHWAY - 380051 PH :7069054900.
- POPULAR WHEELERS (INDIA) PVT. LTD. (111-01-), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA,AHMEDABAD - 380054 PH:65058111.
- 355. KIRAN MOTORS LTD (112-01-), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005 PH 8347491800/9824023122
- 356. UDAY AUTOLINK PVT. LTD. (113-01-), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT - 382430 PH.7567229999.
- 357. NANDA AUTOMOBILES PVT. LTD. (114-01-), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405 PH:8866558787 / 8460088883.
- 358. STARLINE CARS (AHMEDABAD) PVT LTD (115-01-), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330 PH :9824601729.
- KIRAN MOTORS LTD (112-02-), FINAL PLOT NO.331/11, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330 PH 7069868374/9173840458/7383651643/9173044104
- 360. KIRAN MOTORS LTD (102-04-), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060 PH :9327617447, 9327214890.
- POPULAR WHEELERS (INDIA) PVT. LTD. (109-01-), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. -380007
- PH. :909993330.

 See PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (129-01-), PLOT NO. 116; BOPAL AMBIL ROAD, BOPAL, AHMEDABAD, DISTRICT AHMEDABAD, GUJARAT. 380058 PH. :7211140026, 7211130053.
- 363. TANU MOTORS PVT. LTD. (118-01-), SURVEY NO. 1155/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) - 382110 PH: 9512009110.

- 364. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (117-01-), PLOT NO.116 & 118/2, SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD -382418 PH : 7623089000.
- 365. STARLINE CARS PVT. LTD. (D101-09-), SR NO TP - 57, PLOT NO. 67, NEAR GOTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S.G. HIGHWAY, GOTA, AHMEDABAD. - 382481 PH :9824601729.
- 366. KATARIA AUTOMOBILES PVT. LTD. (110-02-), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3.7.10, EHI SILVER STAR, BESIDE HARI VILLA BUNGLOWS, GOTA ROAD, CHANDLODIYA, AHMEDABAD. - 382481 PH :9824000378.
- DB MOTORS PRIVATE LIMITED (119-01-), SURVEY NO. 131A, NH-8, ASLALI, OPP.-OCTROI NAKA, AHMEDABAD. - 382427 PH: 9726031111.
- 368. POPULAR WHEELS (111-02-), SAVAN SQUARE, SHOP NO. 1, 2, 3, 4, 5, SERVE NO. 39/1, F.P. NO. 92, T.P. NO. 66/A, CHENPUR, NEW RANIP, AHMEDABAD. - 382 427 PH :9975703344
- 369. DB MOTORS PRIVATE LIMITED (119-02-), PLOT NO. 718, ASHRAM ROAD, OPPOSITE GANDHI ASHRAM, OLD VADAJ, HRIDAYA KINJ, AHMEDABAD. - 380013 PH -9909049260

AMBAJI

 TANU MOTORS (SKQ1-01-), OPP KUMBHARIYA JAIN DERASAR, GIDC ROAD, AMBAJI, DIST-BANASKANTHA, GUJARAT 385110 - 385110 PH:9727709227.

AMOD

 RAVIRATNA MOTORS (F801-03-), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110 PH :9687691106/9687699383.

AMRELI

 ALPHA AUTOLINK LLP (9E02-01-), LATHI BY PASS ROAD, AMRELI, GUJARAT. - 365601 PH:9978938858/9978938833.

ANAND

- AMAR CARS PVT. LTD. (F702-01-), JANTHA CROSSING, SOJITRA ROAD, ANAND - 388121 PH:9909960772.
- 374. KATARIA AUTOMOBILES PVT. LTD. (F703-01-), SURVEY NO. 189/1+2/IA-3/A/K 190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT. -388 120 PH :7698954466.

ANKLAV

375. KATARIA AUTOMOBILES (SEO1-01-), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASODAR CHOKDI, TAL. ASODAR, CITY ANKLAV, DIST. ANAND, PIN-388510, GUJARAT-388510 PH 7227917151

ANKI FSHWAR

 RAVIRATNA MOTORS PVT LTD (P901-01-), PLOT NO. 624/2/BA, GIDC, VALIA ROAD, ANKLESHWAR - 393002 PH 9687691063.

BAGODRA

 NANDA AUTOMOBILES PVT. LTD. (CVQ1-01-).
 SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA. - 382240
 PH. 9727822000. 9726269111

PH:9727822000, 97262691

BALASINOR

378. AMAR CARS PVT. LTD. (CJE1-01-), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJINA MUYADA, VILLAGE – VADALA, TALUKA – BALASINOR, DISTRICT – MAHISAGAR, GUJARAT. - 388255 PH :7211119980

BARDOLI

- 379. DHRU MOTORS (4002-02-), G.I.D.C,SURAT BARDOLI ROAD,BARDOLI, - 394601 PH :9825413113/9879104454.
- 380. KATARIA AUTOMOBILES PVT. LTD. (Q106-02-), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310 PH.7698022665/9924138860.

BAREJA

381. KATARIA AUTOMOBILES PVT. LTD. (BAN1-01-), 5/6/7, ADITYA COMPLEX NATIONAL HIGHWAY-8, BAREJA, TALLIKA – DASKROI, DISTRICT – AHMEDABAD, GUJARAT - 382425 PH. 7046079997

BARWALA (AHMEDABAD)

 UDAY AUTOLINK PVT. LTD. (I401-01-), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450 PH:7567449999/9687677611.

RAVI A

883. KATARIA AUTOMOBILES PVT. LTD. (104-07-), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220 PH 9824344889.

BECHRAJI

384. STARLINE CARS PVT. LTD. (GJM1-01-), R.S. NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST.-MEHSANA. -384210 PH. 9909043244.

BHABHAR

385. STARLINE CARS (CWD1-01-), SHOP NO. 7, 8, 9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320 PH. 9909043244, 9824601729.

BHACHAU

386. K.D. MOTORS (P501-02-), SUNRISE MALL, OPP. BUS STAND, BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140 PH 9909953036 9879390919

BHANVAD

 ATUL MOTORS JAM LLP (BND2-01-), R.S.
 NO.439, PLOT NO.19, BHANVAD (GUJARAT) -360510
 PH:9574005964 / 9574004714.

BHARUCH

 RAVIRATNA MOTORS (F801-01-), NH 8, OPP YOGI PETROL PUMP.P.O.
 ZADESHWAR,BHARUCH - 392011 PH :9687691044: 9687632647.

BHAVNAGAR

- 389. KATARIA AUTOMOBILES (C902-01-), SURVEY NO 137/2, PLOT NO 301/283 AND 301/485, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004 PH :9426168286
- KATARIA AUTOMOBILES (C902-02-), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATNAKA, AT-ADHEWADA, DIST-BHAVMAGAR, GUJARAT – 364002. - 364002 PH 9638884422.

BHUJ

- K.D. MOTORS (P501-01-), PLOT NO. 5/6/14,UMANAGAR, MIRZAPUR HIGHWAY ROAD, BHUJ,GUJARAT - 370001 PH 102832-232534/5 9879898799 8780351870
- K.D. MOTORS (P501-03-), R.S NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001 PH :9909953124.

BODELI

 KIRAN MOTORS LTD (0R01-01-), OPP.NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA: SANKHEDA, VADODARA - 391135 PH:9714592999.

BORSAD

394. AMAR CARS PVT. LTD. (BJM1-01-), BORSAD – TARAPUR HIGHWAY, BORSAD, DISTRICT – ANAND, GUJARAT - 388540 PH:9586477744.

BOTAD

395. KATARIA AUTOMOBILES (AP03-19-), PLOT NO.13, SURVEY NO 33,34, AND 35 PAIKKI VILLAGE, HADADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIYAD BOTAD ROAD - 364710 PH 9558061658

CHANASMA

396. STARLINE CARS (CVF1-01-), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220 PH 9909043244 9824601729

CHANDIYAL

397. DB MOTORS (SJT1-01-), SHOP NO-1,2.3 SWAPNIL ARCADE, GRAM-CHANDIYAL, TAL-DASKROI, DIST-AHEMDABAD, GUJARAT. -382433 PH :9909048301.

CHANDKHEDA - AHMEDABAD

398. KATARIA AUTOMOBILES PVT. LTD. (104-10-), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD. - 382470 PH : 972302111.

CHANDRALA

399. NANDA AUTOMOBILES PVT. LTD. (GLT1-01-), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST-GANDHINAGAR, GUJARAT - 382320 PH :9725062187, 9727726003.

CHANGODAR

400. PEGASUS (A UNIT OF VISUAL MOTORS PVT. LTD.) (CTD2-01-), SURVEY NO.393, VILLAGE – MORAIYA, CHANGODAR, TALUKA – SANAND, SUN DISTT - AHEMADABAD. - 382210 PH. 7211120014.

CHIKHLI

401. KATARIA AUTOMOBILES PVT. LTD. (BCB1-01-), SURVEY NO. 461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT -396521 PH. 7698953899.

CHILODA

402. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (GJ01-01-), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. - 382355 PH :7211168938. 7623039000.

CHOTILA

 DREAM VEHICLES PVT LTD (CFII-01-), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO – CHOTILA, DISTRICT – SURENDRANAGAR, GUJART. 383520 PH :9227775709.

CHUDA

404. DREAM AUTOMOBILES (SOC1-01-), NR. GOVT HOSPITAL, CHATARLIYA ROAD, CHUDA, SURENDRANAGAR. - 363410 PH: 9313802500.

DABHOI

405. KATARIA AUTOMOBILES PVT. LTD. (UU01-01-), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110 PH:8156000463

DAHOD

 R B CARS PVT. LTD. (2C01-02-), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY, DAHOD - 389151 PH:9099043715. 9727700823.

DANTIWADA

407. TANU MOTORS (SSX1-01-), VISHWAS COMPLEX, OPP HINGLAI DETROL PUMP, NR. JAIN DERASAR, DANTIWADA HIGHWAY, AT-PO PANTHWADA, TALUKA-DANTIWADA, DIST-BANASKANTHA - 385545 PH 909940424

DEESA

408. TANU MOTORS PVT. LTD. (Q801-03-), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535 PH.9909006099.

DEHGAM

 NANDA AUTOMOBILES PVT. LTD. (2801-03-), NEAR UMIYA MATAJI TEMPLE, COLLEGE ROAD, AHMEDABAD ROAD, DEHGAM - 382305 PH: 234567.

DETROJ

410. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (GLC1-01-), PLOT NO-61.MILKAT NO-2534, AT-DETROJ,TALUKA-DETROJ-RAMPURA-382120 - 382120 PH. 7971846442.

DEVGADH BARIA

 R B CARS PVT. LTD. (2C01-05-), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380
 PH:9099049344, 6352384846, 9099043715.

DHANERA

412. TANU MOTORS PVT. LTD. (BZW1-01-), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA. - 385310 PH :9909006099, 8401784018.

DHARAMPUR

413. KATARIA AUTOMOBILES PVT. LTD. (BSK1-01-), SURVEY NO. 29/3/PI, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050 PH :9723455291.

DHARI

414. ALPHA AUTOLINK LLP (GG02-01-), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI, TALLIKA - DHARI, DIST. -AMRELI, GUJARAT. - 385640 PH :9904549999/978938858.

DHOLKA

415. TANU MOTORS PVT. LTD. (CQQ2-01-), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALIKUND HIGHWAY, DHOLKA, GUJARAT - 382 225 PH :9512009104.

DHORAJI

416. PERFECT AUTO SERVICE (5502-09-), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - 360410 PH :9099027402, 8200969617.

DHRANGADHRA

417. DREAM VEHICLES PVT LTD (IM01-01-), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH 9227775725

DIYODAR

418. TANU MOTORS (SFU1-01-), NR.HP PETROL PUMP, BHESANA CROSS ROAD, BHABHAR HIGWAY, DIYODAR-385330 - 385330 PH:9099017756.

DWARKA

419. ATUL MOTORS JAM LLP (CJG2-01-), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT – DWARKA – . - 361335 PH .9712212900 / 9574004714.

GANDHIDHAM

420. B M AUTOLINK (7702-01-), EAST OF PLOT NO. 30-35, NATIONAL HIGHWAY, GANDHIDHAM -370201 PH: 9727725723.

 B M AUTOLINK (7702-03-), SURVEY NO.129/26 P, GALPADAR HIGHWAY, GANDHIDHAM, DISTT.KACHCHH, GUJARAT. 370110 PH:9727725723, 9727739550.

GANDHINAGAR

422. NANDA AUTOMOBILES PVT. LTD. (2B01-01-), 1003,SECTOR-28,GANDHI NAGAR - 382028 PH:(079)23212692 / 93 / 94. 423. NANDA AUTOMOBILES PVT. LTD. (2801-05-), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028 PH:079-23212692/93/94 9727726003

GODHRA

424. R B CARS PVT. LTD. (2C01-01-), PLOT NO. 112/11.,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001 PH 9099043715, 972770823

 R B CARS PVT. LTD. (2C01-04-), SURVEY NO. 107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001 PH:9099043715. 9727700823.

GONDAL

426. ATUL MOTORS PYT LTD (5503-05-), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY, GONDAL - 360311 PH 9904992333

GOZARIA

VIMCO MOTORS PVT. LTD. (GJN1-01-), 1597/339
 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825
 PH 7016623842

HALOL

428. R B CARS PVT. LTD. (BKC1-01-), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350 PH -9099043715 9277700823

HALVAD

429. DREAM VEHICLES PVT LTD (GX01-01-), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330 PH : 8238000965.

HANSOT

430. RAVIRATNA MOTORS (BGQ1-01-), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. - 393030 PH: 9687691063.

HIMMATNAGAR

KIRAN MOTORS LTD (P601-01-), NEAR
 G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001
 PH:9824576711.

IDER

432. KIRAN MOTORS LTD (UX01-01-), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430 PH:8155994111.

JAMBUSAR

 RAVIRATNA (SKR1-01-), SURVEY NO-2939-2954, PLOT NO-2, VILLAGE-JAMBUSAR, TALUKA-JAMBUSAR, DIST-BHARUCH. - 392150 PH :9687667595.

JAMJODHPUR

434. ATUL MOTORS (JAM LLP) (CSN3-01-), NEAR HDFC BANK, GAYATRI MANDIR ROAD, JAMJHODPUR, DIST-JAMNAGAR (GUJARAT) - 360530. 360530. PH 9537889898

JAMNAGAR

 ATUL MOTORS JAM LLP (F402-01-), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001 PH: 9574004710 / 9574004716.

436. STARLINE CARS PVT. LTD. (D101-02-), CHANASMA HIGHWAY, PATAN - 384265 PH:7046046187.

 ATUL MOTORS JAM LLP (F402-02-), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002
 PH:9574004704 / 9574004717.

38. ATUL MOTORS (JAM LLP) (F402-03-), OPP MADHAV BAUG1, NEAR RAILWAY OVER BRIDGE, JAMNAGAR, GUJARAT-361006. -361006 PH: 9574004709

JASDAN

I39. ATUL MOTORS PVT LTD (5503-09-), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050 PH :9265404142.

JHALOD

440. R B CARS PVT. LTD. (CJF1-01-), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA- JHALOD, DISTRICT - DAHOD. - 389170 PH :9099684363, 9099043715.

JUNAGADH

 PERFECT AUTO SERVICES (5502-06-), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001 PH :9879518052, 7043999073, 9909022618.

JUNAGARH

442. PERFECT AUTO SERVICES (5502-02-), PLOT NO. 81-82,G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001 PH :9909006980, 7043999073, 9909022618.

KADI

443. STARLINE CARS PVT. LTD. (D101-07-), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH:8160707156

KAKANPUR

444. RB CARS (SDN1-01-), SURVEY NO.618/2, PAIKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. -388713

PH :9099049347. KALAVAD

445. ATUL MOTORS JAM LLP (BNC2-01-), SANIDHYA ARCADE, NEAR SANIDHYA PARTY PLOT, KALAVAD – DHORAJI ROAD, KALAVAD. - 361160 PH 9574222111

KALOL

446. NANDA AUTOMOBILES PVT. LTD. (2801-02-), PLOT NO.- 162-168, GIDC, KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028 PH. 220781 / 82 / 83.

ΚΑΡΑΠΥΑΝ.Ι

 AMAR CARS PVT. LTD. (NC01-01-), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADWANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620 PH:9909960761.

KARJAN

448. AMAR CARS PVT. LTD. (UZ01-01-), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) -391210 PH.7567299666/99252462929.

KATHLAL

 AMAR CARS PVT. LTD. (CXA1-01-), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387 630 PH:9909960761.

KESHOD

450. PERFECT AUTO SERVICES (BZY1-01-), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA – KESHOD, DISTRICT – JUNAGADH, GUJARAT. -362220 PH. 7043999073.

KHAMBHAT

 AMAR CARS PVT. LTD. (BNF1-01+), PLOT NO. 7/8/9, RAJMAHAI PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 386620 PH. 9909960772.

KHEDA

452. AMAR CARS PVT. LTD. (BNA1-01-), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570 PH:9909960761.

KHEDBRAHMA

453. KIRAN MOTORS (CMU1-01-), AMBAJI ROAD, KHEDBRAHMA, DIST. – SABARKANTHA, PIN – 383255 - 383255 PH:9824010721.

KHERALU

454. STARLINE CARS (SN02-01-), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA. - 384325 PH :9909043244 . 9824601729.

KIM

455. KATARIA AUTOMOBILES PVT. LTD. (UW01-01-). PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110 PH. 9723355185.

KODINAR

456. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (CSO1-01-), R. S.NO. 222, PLOT NO. 2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720
PH :7043992893, 7043340792.

KUKARWADA

457. STARLINE CARS PVT. LTD (CSC1-01-), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830 PH 9909043244, 9824601729.

LAVANA

458. RB MOTORS (SLW1-01-), AT PO -LAVANA, NEAR BABILIYA CROSSING, MODASA ROAD, LAVANA-389230 - 389230 PH 9860999470

LIMBDI

459. DREAM VEHICLES PVT LTD (BSG1-01-), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421 PH :0275-261269/9227775728.

LUNAWADA

460. R B CARS PVT. LTD. (BYN1-01-), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA, TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230 PH:9099043715, 9727700823.

MAHUVA (BHAVNAGAR)

PH:6357327534.

 KATARIA AUTOMOBILES (IV03-01-), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290

MAHUVA (SURAT)

462. KATARIA (BRM1-01-), BLOCK NO. 14/2, VILLAGE BUDHALESHWAR, SURAT SAPUTARA STATE HIGHWAY,TAL. MAHUVA, DIST. SURAT - 394250 - 394250

PH:9824051060/9824094498.

MANAVADAR

 PERFECT AUTO SERVICE (CUI1-01-), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA -MANAVADAR, DIST.-JUNAGADH. - 362 630 PH :7043999073

MANDAL

464. KIRAN MOTORS LTD (IW01-01-), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL, DI: AHMEDABAD, GUJARAT. - 382130 PH :9408803925.

MANDVI

465. K.D. MOTORS (UY01-01-), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465 PH :9909953088, 9825353679.

MANGROL

466. KATARIA AUTOMOBILES PVT. LTD. (CAH1-01-), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH: 6357071775.

MANSA

 NANDA AUTOMOBILES PVT. LTD. (2801-04-), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845 PH :9727921000

MEHMDABAD

468. AMAR CARS PVT. LTD. (BRA1-01-), PATEL FALIYA, KHATRAJ, MEHMEDABAD, DIST. -KHEDA, GUJARAT. - 387130 PH :9909960761.

MEHSANA

469. STARLINE CARS PVT. LTD. (D101-01-), NAGALPUR HIGHWAY,MAHESANA, GUJRAT -384002 PH 9909043635.

470. TANU MOTORS PVT. LTD. (Q801-04-), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH :9909006076

 VIMCO MOTORS PVT. LTD. (D103-01-), SURVEY NO. 104 & 104 PAIKI 1, AT P.O. - PALAVASANA, MEHSANNA, GUJARAT. - 384 002 PH :8909953333. 472. VIMCO MOTORS (D103-02-), SHOP #7&8, TIRUPATI SAHIBAGH MARKET, MEHSANA – RADHANPUR ROAD, NEAR SAHAJ VILLA, MEHSANA - 380002. - 380002 PH :80190543333

METODA

473. ATUL MOTORS PVT LTD (5503-08-), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021 PH :8140909095. 9924688774.

MODASA

474. KIRAN MOTORS LTD (P601-02-), SHAMLAL JI ROAD, SABARKANTHA DIST., MODASA - 383315 PH:8155995111.

MORRI

 PERFECT AUTO SERVICES (5502-07-), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI, TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. -363641
 PH :3099058044, 9925199569, 9879499088.

476. DREAM VEHICLES (LC01-03-), NR. PRIME FILLINGS, PLOT-6, DHARMASIDHI VILLAGE:MAHENDRANAGAR, TALUKA: MORBI, DIST:MORBI. - 363642 PH :7069089852

MOTI KHAVADI

477. ATUL MOTORS JAM LLP (AAU2-01-), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST -JAMNAGAR, GUJARAT. - 361140 PH :9574004799 /9574004743.

MUNDRA

478. B M AUTOLINK (7702-02-), PRAGPAR ROAD,MUNDRA,DISTRICT-KUTCH, GUJARAT, -370421 PH 9687632631, 9978940978.

NADIAD

 AMAR CARS PVT. LTD. (F702-02-), NEAR RAJHANS MULTIPLEX, NADIAD-UTTARSANDA ROAD - 387370 PH: 9909960761.

NAKHATARANA

180. KD MOTORS (CMV1-01-), PLOT NO-1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHATRANA, KUTCH - 370615 PH: 9909953119.

NALIYA

481. KD MOTORS (SLX1-01-), AT PO - SHAKTI SOCIETY, MAHAVIR NAGAR, PLOT(1), OPP. BANK OF BARODA, NALIYA, TAL-ABDASA, KUTCH. - 370655 PH. 9909953119.

NANA PONDHA

482. AMAR CAR (SEL1-01-), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA- KAPRADA, DIST-VALSAD - 396126 PH : 7227971155.

NASWADI

483. RAVIRATNA MOTORS (SCV1-01-), HOUSE NO-301,302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR -391150 PH-9687691047

NAVSARI

484. KATARIA AUTOMOBILES PVT. LTD. (Q701-01-), PLOT NO.-891, OPP PAUVA MILL, NH-8, NEAR GANESH SISODRA CHOKDI, GANESH SISODIA NAVSARI, GUJRAT - 396463 PH: 9723430012.

NETRANG

485. RAVIRATNA MOTORS (CUZ1-01-), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST.-BHARUCH. - 393130 PH: 9687691063.

OLPAD

486. COMET CAR SALES & SERVICE PVT LTD (4006-02-), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH: 9099916099.

PADRA

 AMAR CARS PVT. LTD. (2205-02-), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. – VADDDARA, GUJARAT - 391440 PH:8980036200, 8980006795.

PALANPUR

488. TANU MOTORS (Q801-01-), OPP.DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001 PH :9099017756.

489. STARLINE CARS PVT. LTD. (D101-08-), SURVEY NO.4 & 5/2, OPPOSITE I. PETROL PUMP, PALANPUR-DEESA HICHWAY, PALANPUR-355001, DISTT BANASKANTHA, GUJARAT - 385001 PH :982401793.

PALEJ

490. RAVIRATNA MOTORS (BGR1-01-), PLOT NO. 626/6, GIDC AREA, PALEJ, DISTRICT - BHARUCH - 392220 PH :9687691044; 9687632647.

PALITANA

191. KATARIA AUTOMOBILES (CSD2-01-), PLOT NO 15, YASOVIJAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BHAVNAGAR. - 364270 PH:6357314891.

PALSANA

492. KATARIA AUTOMOBILES PVT. LTD. (4004-07-), BESIDE SAINATH COMPLEX, KADODARA AHMEDABAD ROAD, NH-8, UMBHEL GAM, TALUKA: PALSANA KADODARA, SURAT. -382721 PH 9924446895

PARDI

493. AMAR CARS (SLJ1-01-), OPPOSITE MORARJI DESAI MEMORIAL HALL, SERVICE ROAD N.H-48, KILLA-PARDI, DIST-VALSAD - 396125 PH:7226800777.

PATDI

494. DREAM VEHICLES PVT LTD (BFS1-01-), R.S. NO.16142, PLOT NO.16, PATDI TALUKA DASADA, DISTT. SURENDRANAGAR, GUJARAT-382765 PH.9227775709.

PAVI JETPUR

495. PERFECT AUTO SERVICES (PK01-01-), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370 PH :999027402. 8200969617.

PETLAD

496. AMAR CARS PVT. LTD. (CMW1-01-), SURVEY NO. 396/2, RANGAIPUR VILLAGE, PETLAD, DIST. -ANAND. - 388450 PH 9099017068

PORBANDAR

 ATUL MOTORS JAM LLP (T601-01-), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY, PORBANDAR, DIST. PORBANDAR GUJARAT -360577 PH 9574004746 / 7228819123.

PRANTIJ

498. KIRAN MOTORS LTD (AAI1-01-), NO.6/P, OPP.
VEGETABLE MARKET, PRANTIJ HIGHWAY,
VILLAGE-KHAMALPUR, TALUKA-PRANTIJ,
DISTT. SABARKANTHA, GUJARAT - 383205
PH:9624401888.

RADHANPUR

499. STARLINE CARS PVT. LTD. (BNI1-01-), SURVEY NO. 208/A, MOUJA – RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT – PATAN, GUJARAT. -385340 PH :9909043244, 9824601729.

RAJKOT

500. PERFECT AUTO SERVICES (5502-01-), PERFECT HOUSE, GONDAL ROAD, VANDI, RAJKOT - 360004 PH: 9879499077, 9909006982, 9825304940.

- ATUL MOTORS PVT LTD (5503-01-), PLOT NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL ESTATE, RAJKOT. - 360002 PH :8140909093.
- 502. PERFECT AUTO SERVICES (5502-04-), 150 RING ROAD, OPP. GANDHIGRAM POLICE CHOWKI, RAJKOT - 360005 PH :9925238691 . 9925117104.
- 503. ATUL MOTORS PVT LTD (5503-02-), BEHIND HP PUMP, UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005 PH :8347005382.
- 504. ATUL MOTORS PVT LTD (5503-06-), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003 PH -9924688774.
- 505. PERFECT AUTO SERVICES (5502-08-), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. 360006 PH :9979861995 99/25117104
- KATARIA AUTOMOBILES PVT. LTD. (5504-01-),
 S. NO. 10/1, TPS NO. 10, KALAVAD ROAD,
 MOTAMAVA, RAJKOT, GUJARAT. 360001
 PH :7573870001

RAJPARDI

507. RAVIRATNA MOTORS PVT. LTD. (CAI1-01-). R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI. TALUKA-JHAGADIA, DISTT. BHARUCH - 393115 PH. 9687691044; 9887692647.

RAJPIPLA

508. RAVIRATNA MOTORS PVT. LTD. (9X01-01-), OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145 PH :9687691062/9687645880.

RAJULA

 ALPHA AUTOLINK (BAK2-01-), R.S NO 96/3, PLOT NO-6 & 7, HINDORNA ROAD, RAJULA CITY, TALUKA-RAJULA. - 365560 PH 9033409043

RAPAR

 B.M. AUTOLINK (SCO1-01-), PARAGPAR CHAAR RASTA RAPAR GHANDHIDHAM KUTCH - 370165 PH:9727725723.

SAMI

 STARLINE CARS (BNH1-01-), SHOP NO. 55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD. -384240

PH: 9909043244, 9824601729.
512. VIMCO MOTORS (BNH2-01-), SURVEY
NO 917, VIRA SHOPPING CENTER, AT-SAMI,
TALUKA-HARIJ, DIST-PATAN, GUJARAT. 384245
PH: 8909953333.

SANTEJ

 NANDA AUTOMOBILES PVT. LTD. (CXC1-01-), SUB PLOT NO. 05, SHOP NO. 3 & 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060 PH: 9727822000.

SANTRAMPUR

 R B CARS PVT. LTD. (2C01-03-), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR, DISTT.-PANCHMAHAL - 389260 PH: 8980585851. 9099043715.

SAVII

515. KIRAN MOTORS LTD (CFD1-01-), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRIVA CHOWKDI, SAVLI — TIMBA ROAD, SAVIL, TALUK — SAVLI, DISTRICT — VADODARA, GUJARAT. - 391770 PH. 7984799054.

SAYAN

516. KIRAN MOTORS LTD (0001-01-), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIA, TALUKA: OLPAD, SAYAN - 394130 PH :8155888862/9662330480.

SAYLA

 DREAM VEHICLES (SJM1-01-), LALGURU COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT SURENDRANAGAR, GUJARAT PIN 363430 -363430 PH :9227775709.

SHANKESHWAR

518. STARLINE CARS (SLY1-01-), MANIBHADRA SHOPPING CENTRE, SHANKHESHWAR HIGHWAY, SHANKHESHWAR (GUJARAT)- DIST: PATAN - 384246 PH :9824601729.

SHAPAR

519. ATUL MOTORS PYT LTD (BOZ1-01-), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT - RAJKOT, GUJARAT -360024 PH :9714008492, 9624711397.

SIDDHPUR

 STARLINE CARS PVT. LTD. (CMY1-01-), PLOT NO. 140-1285/7, SIDHPUR, TALUKA – VADGAM, DISTRICT – PATAN. - 384151 PH: 9909043244, 9824601729.

SINOR

521. RAVIRATNA MOTORS PVT LTD (GML-101-). NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD, AT AND POST SEGVA, TALUKA SINOR, DIST. VADODARA, PIN-391105, GUJARAT - 391105 PH :7227055065.

SITAPUR

522. STARLINE CARS PVT LTD (SFV1-01-), SHOP NO. 2, RUDRA ARCADE, REVENUE SURVEY NO. 129, VITHLAPUR (SITAPUR) BECHARAJ – VIRAMGAM HIGHWAY, DIST. AHMEDABAD, PIN CODE: 382120 - 382120 PH 9990403244

SONGADH

523. COMET CAR SALES & SERVICE PVT LTD (CWE1-01-), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA -SONGADH, DIST. TAPI. - 384220 PH:9099916099.

SUPEDI

 KATARIA AUTOMOBILES (SEM1-01-), SURVEY NO-482/T, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST - RAJKOT - 360440 PH: 9409497902.

SURAT

525. KIRAN MOTORS LTD (4001-01-), SURAT-BARDOLI ROAD, DUMBHAL, NEAR PUNA JAKAT NAKA, SURAT - 395010 PH: 9924448715/9924637898.

526. DHRU MOTORS (4002-01-), JEEVAN GANGA NAGAR,NEAR JEEVAN JYOT THEATRE,UDHNA MAIN ROAD,SURAT - 394210 PH :9925155911/9925155907.

KIRAN MOTORS LTD (4001-02-),
 PANDESARA, BAMROLI ROAD, SURAT - 395002
 PH: 9824603880.

528. KATARIA AUTOMOBILES PVT. LTD. (4004-04-), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESU, SURAT. -395007 - 395007 PH. 9714612700, 9924401000.

529. DHRU MOTORS (4002-18-), 207, NEW INDUSTRIAL ESTATE, ROAD NO.-6, UDHNA UDYOG NAGAR, SURAT - 394210 PH :0261-2272118/ 9978900862.

 KATARIA AUTOMOBILES PVT. LTD. (4004-05-), KATARIA ARCADE, OPP. RAJHANS CINEMA, DUMAS ROAD, PIPLOD, SURAT -395007 PH. 7668(022449)9624477252

531. COMET CAR SALES & SERVICE PVT LTD (4006-01-), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH :9099915995.

532. KATARIA AUTOMOBILES PVT. LTD. (4004-08-), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT -394310

PH :9924119020. 33. KIRAN MOTORS LTD (4005-01-), PLOT NO. 443,

FP NO. 26 MOJE PALGAM, ADAJAN, SURAT -395009 PH :9824611153/9824701590.

- 534. AMAR CARS PVT. LTD. (4009-02-), PLOT NO.10&11, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR GOVCL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH 7080205612
- 535. COMET CAR SALES & SERVICE PVT LTD (4006-03-), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT – SURAT, GUJARAT. - 395004 PH :9099916099.
- DHRU MOTORS (4002-03-), PLOT NO.54/A, LAXMINARAYAN LNDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210 PH :9978900862

SURENDERNAGAR

- DREAM VEHICLES PVT LTD (LC01-01-), 261/P,
 OPP MARKETING YARD, GIDC AREA, WADHWAN
 CITY, SURENDERNAGAR 363030
- PH -02752-241314 / 02752-851516/ 9227775721.

 SREAM VEHICLES (LC01-02-), PLOT NO-504/B,
 GIDC PHASE-3, WADHWAN, SURENDRANAGAR,
 GUJARAT-363030 363030
 PH 9227775724.

TALAJA

539. KATARIA (BCI2-01-), SURVEY NO-168, DHANJIBHAI BALADHIYA NI VADI, NEAR MAHUVA PALITANA CROSS ROAD, MAHUVA BHAVNAGAR HIGHWAY, TALAJA-364140. -364140 PH :9316626475.

TALALA

 PERFECT (JV01-01-), SURVEY NO-559/1, PLOT NO-10, TALALA-VERAWAL HIGHWAY, AT-TALALA, DIST-GIR SOMNATH, 362150 -362150
 PH :8511147524.

TANKARA

541. ATUL MOTORS PYT LTD (BOY1-01-), PLOT NO. 8/1, S. NO. 107, VILLAGE – JABALPUR, TALLIKA – TANKARA, SUB DISTRICT – MORBI, DISTRICT – RAJKOT. - 363650 PH 97/14008492 96/247/1397

TARAPUR

 AMAR CARS PVT. LTD. (GH01-01-), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST. -ANAND. - 388180 PH :9909960772

THARA

543. TANU MOTORS PVT. LTD. (0V01-01-), SHOP NO.17 & 18, SIHORI HIGHWAY, R.B. THAKKAR COMPLEX, THARA, KAKREJ TALUKA, BANASKANTHA DISTT. - 385555 PH.9909006099, 9913830329.

THARAD

 TANU MOTORS PVT. LTD. (CDM1-01-), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA - 384220 PH :9909006099. 9724219565.

THASARA

545. KATARIA AUTOMOBILES (SIM1-01-), PLOT NO 1 8.2, GIDC THASRA, BESIDES NARMADA VASAHAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250 PH -7984092780

TILAKVADA

546. RAVIRATNA (--), SURVEY NO-157, VILLAGE-MOTI KAMSOLI, TALUKA-TILAKVADA, DIST-NARMADA, PIN-391120. - 391120 PH:9687691044.

UMERGAON

547. KATARIA AUTOMOBILES PVT. LTD. (BNB1-01-), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT – VALSAD, GUJARAT. 396170 PH 9624001794

UMRETH

 AMAR CARS PVT. LTD. (CFE1-01-), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH, DIST.ANAND, GUJARAT. - 388220 PH :9909960772

UNA

549. PERFECT AUTO SERVICES (BFD1-01-), SURVEY NO. 113, PLOT NO. 6, OPP, SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. - 362560 PH. 7043922893, 7043340792.

UNJHA

550. TANU MOTORS (Q801-02-), OPP. DHANA DAL FACTORY, MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH:9727762079.

UPLETA

 PERFECT AUTO SERVICE (CH01-01-), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360 490
 PH 9099027402 8200969617

VADGAM

552. VIMCO MOTORS (CMX1-01-), SURVEY NO-177, BESIDE ESSAR PETROL PUMP, VADGAM – PALANPUR ROAD, VADGAM, DIST – BANASKANTHA, GUJARAT – 385410. - 385410 PH :8909953333.

VADNAGAR

553. VIMCO MOTORS PVT LTD (GKU1-01-). SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355 PH 7016823842

VADODARA

- KIRAN MOTORS LTD (2201-01-),
 909/4,G.I.D.C.MAKARPURA,VADODARA 390010
 PH:9624472699.
- KIRAN MOTORS LTD (2201-02-), PLOT NO. 160, SUB-I NUTAN GUJ.INDL.ESTATE, OLD CHHANI ROAD, VADODARA - 390002 PH: 9824207889.
- AMAR CARS PVT. LTD. (2203-01-), GORWA ROAD, VARODARA, GUJARAT, - 390016
 PH:9081311990, 9723742425, 8980036184.
- AMAR CARS PVT. LTD. (2203-02-), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH :7211109952.
- 558. KATARIA AUTOMOBILES PVT. LTD. (2204-01-), 984/4,GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH 9904033422
- 559. AMAR CARS PVT. LTD. (2205-01-), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH :8980006756
- 560. KIRAN MOTORS LTD (2201-03-), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH :2771122
- 561. KATARIA AUTOMOBILES PVT. LTD. (2204-02-), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001 PH :8156017770
- 662. RAVIRATNA MOTORS PVT LTD (2206-01-), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA. - 390012 PH :7227055065, 7227055064.

VALOD

563. DHRU MOTORS (CSW1-01-), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. -394640 PH :9712984522.

VALSAD

 KATARIA AUTOMOBILES PVT. LTD. (104-06-), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020 PH: 9904133306.

VANSDA

565. KATARIA AUTOMOBILES PVT. LTD. (Q701-02-), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT – NAVSARI, GUJARAT - 396580 PH :7624088188

VAPI

- 66. KATARIA AUTOMOBILES PVT. LTD. (104-03-), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195 PH :9924204423.
- 567. KATARIA AUTOMOBILES PVT. LTD. (104-09-). PLOT NO. 3042, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, INFAR SWAMINARAYAN SCHOOL, SALAV, VAPI, DISTRICT -VALSAD, GUJARAT - 369191 PH-9723462612.
- AMAR CARS PVT. LTD. (9701-01-), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145 PH :9327909504.

VERAVAL

569. PERFECT AUTO SERVICES (5502-05-), NR. BALIYA HANUMAM, VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265 PH: 9998994550, 9898121122.

VIJAPUR

 STARLINE CARS PVT. LTD. (D101-04-), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH :9909043635.

VIRAMGAM

 KIRAN MOTORS LTD (AAB1-01-), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH:8156016222.

VISNAGAR

 STARLINE CARS PVT. LTD. (D101-05-), VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT.- MEHSANA -384315 PH:7046046174.

VYARA

573. COMET CAR SALES & SERVICE PVT LTD (BIY1-01-), SHOP NO. 11 & 12, BLOCK NO. 175/1/IA, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT – TAPI, GUJARAT - 394650 PH :9099916099.

WAGHODIA

 KATARIA AUTOMOBILES PVT. LTD. (BZZ1-01-), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA – WAGHODIA, DISTRICT – VADODARA, GUJARAT. - 391760 PH :7203013712.

WANKANER

575. ATUL MOTORS PVT LTD (BAL1-01-), RAJKOT-WINKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621 PH - 99049272333

GUJRAT

KHERGAM

576. KATARIA AUTOMOBILES (STR1-01-), SANVIRA HAT BAZAAR, KHERGAM-DHARAMPUR HIGHWAY ROAD, SH-67, KHERGAM, PIN-396040. - 396040 PH-9624007774.

SOJITRA

 AMAR CARS (SMT1-01-), RAMDEV ARCADE, OPP. BUS STATION, AT – SOJITRA, DIST. -ANAND GUJARAT PIN 387240. - 387240 PH 9662357557

HARAYANA

GURGAON

578. PASCO AUTO (9506-04-), KHASRA NO. 191/2 & 190/2, MAIN DAULTABAD ROAD, OPP. OLD BHALLA CHEMICALS FACTORY, DAULATABAD INDUSTRIAL AREA, GURGAON, HARYANA - 122006 - 122006 PH :8851227233.

KARNAL

 MODERN AUTOMOBILES (8907-03-), 117-118 KM MILE STONE NH1, NEAR VILLAGE KAMBOPURA, GT ROAD, KARNAL - 132001 PH:7419900042.

SAMALKHA

 RKH AUTOGALLERY (LY02-01-), GT ROAD, SAMALKHA, PANIPAT, HARYANA PIN- 132101 -132101
 PH: 9053700003.

HARYANA

ADAMPUR (HARYANA)

581. SARAOGI AUTOMOBILES (P) LTD. (CWW2-01-), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 44/2/11/2(-0), MANDI ADAMPUR, TEHSIL -ADAMPUR, DIST.-HISSAR, STATE - HARYANA. -125052 PH:8807777153.

AMBALA

582. MODERN AUTOMOBILES (1801-01-), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003 PH :9215016044.

 MODERN AUTOMOBILES (1801-02-), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003 PH 9215016044 EAKANSH WHEELS (1802-01-), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA -133001
 PH: 9991703000.

685. EAKANSH WHEELS (1802-03-), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001 PH :88813874888

86. TR SAWHNEY (1803-01-), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003 PH -9990110068

ASSANDH

 KARNAL MOTORS PVT. LTD. (8906-04-), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032 PH:7082111325.

BARARPUR

588. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CKX1-01-), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103 PH -7003398727

BAHADURGARH

 COMPETENT AUTOMOBILES CO. LTD. (2G02-01-), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124 507 PH: 8929648144.

BAPOLI

590. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CWI1-01-), KHEWAT NO. 136, VILLAGE – JHAMBA, TEHSIL – BAPOLI, DISTRICT – PANIPAT. - 132103 PH -9053400583.

BARARA

591. EAKANSH WHEELS (NX01-01-), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201 PH :9991478100.

BARWALA

592. MODERN AUTOMOBILES (BSA2-01-). KHEWATIKHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118 PH :9896217059.

BAWAL

593. DINCO 4 WHEELS LLP (AUTO VIBES) (BBD2-01-), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, BAWAL, DISTRICT – REWARI, HARYANA. -123501 PH :7082100250.

BHIWANI

 JAGMOHAN MOTORS PVT LTD (X301-01-), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021 PH :8685005592.

BILASPUR

 PANDIT AUTOMOBILES PVT. LTD. (BGH1-01-), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT – YAMUNANAGAR, HARYANA. - 135102
 PH :9992113854

BILASPUR (HARYANA)

596. PLATINUM MOTOCORP LLP (2L04-02-), KHASRA NO.54/67, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT – GURUGRAM. - 122413 PH -99533452/9953345403.

CHARKHI DADRI

597. JAGMOHAN MOTORS PVT LTD (X301-02-), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306 PH: 8059900538

CHEEKA

598. EAKANSH MOTORS PVT. LTD. (U802-04-), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034 PH :8053086000

CHHACHHARAULI

599. PANDIT AUTOMOBILES PVT. LTD. (CO21-01-), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL – CHHACHHRAUIL, DISTRICT – YAMUNA NAGAR. - 135103 PH. 9812455895.

DADRI TOE

600. COMPETENT AUTOMOBILES CO. LTD. (BVH2-01-), KHEWAT NO. – 270 MIN, KHATONI NO. – 319, DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN 124103 - 124103 PH :9821308849.

DAHINA

601. DINCO 4 WHEELS LLP (AUTO VIBES) (GLH1-01-), REWARI MAHENDERGARH ROAD, NEAR RAILWAY STATION, DAHINA, REWARI -123411 PH :7082100201.

DHAND

602. EAKANSH MOTORS (BEU1-01-), PANCHMUKHI CHOWK, KARNAL ROAD, DHAND, DISTT. KAITHAL, HARYANA. - 136020 PH: 8395906111.

DHARUHERA

603. DINCO 4 WHEELS LLP (AUTO VIBES) (CRP1-01-), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI. PH. 7082100270

ELLENABAD

9311321419

604. SHAKTI MOTORS PVT.LTD. (E401-03-), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055 PH 8222900250

FARIDABAD

605. VIPUL MOTORS PVT. LTD. (5801-01-), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002 PH :2555011 2555013 97114 14556.

606. VIPUL MOTORS PVT. LTD. (5801-03-), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006 PH :4286000 4286024 4298024

607. TCS AUTOMOBILES (5804-01-), PLOT NO-1A, SECTOR-6, FARIDABAD, - 121001 PH:4292929; 7503036200.

608. FAIR DEAL PREMIUM WHEELS PVT.LTD. (5807-01-), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003 PH :8448/296666

609. TCS AUTOWORLD PVT. LTD. (TCS & ASSOCIATES PVT. LTD.) (5804-02-), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. - 121003 PH: 2277225, 7290082911.

610. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-01-), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003 PH -4180500 7290032561

611. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-02-), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. -121006 PH :74287 48467.

FARRUKHNAGAR

612. PLATINUM MOTOCORP LLP (KE01-01-), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO.-19/3 AND 22/2, VILLAGE – SEHADPUR MOHAMADPUR, TEHSIL – FARRUKHNAGAR, DISTRICT – GURGAON. - 122506 PH :9599007357/9953345380

FATEHABAD

 SHAKTI MOTORS PVT.LTD. (2H02-01-), NH-10, SIRSA ROAD, FATEHABAD - 125050 PH:8222900217.

GANAUR

614. JAGMOHAN AUTOMOTIVES PVT. LTD. (NA04-01-), RAILWAY ROAD, GANAUR - 131101 PH:81999111106

GHARAUNDA

 KARNAL MOTORS PVT. LTD. (8906-05-), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114 PH:8222022321.

GOHANA

616. JAGMOHAN AUTOMOTIVES PVT. LTD. (CU03-01-), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. -SONEPAT - 131301 PH :8685005521

GURGAON

- 617. PASCO AUTOMOBILES (9506-01-), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006 PH
- :09650790323/7290069623/9999239959/4952100. 618. VIPUL MOTORS PVT. LTD. (5801-02-), 504, UDVOG VIHAR, PHASE-III, GURGAON - 122001 PH :4395701 4395704 8449487921
- 619. COMPETENT AUTOMOBILES CO. LTD. (9505-01-), A-25, INFOCITY, SECTOR-33, GURGAON - 122004 PH :42500002, 9582797735
- 620. PASCO AUTOMOBILES (9506-02-), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, -122015 PH 07015804442/7982087767/9650701958/
- 621. ROHAN MOTORS LTD. (9508-01-), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001 PH
 - :08860076163/8130593202/8130593201/813059320 3.
- 622. VIPUL MOTORS PVT. LTD. (5801-04-), PLOT NO.5122/1, SARHAUL VILLAGE,SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102 PH :4395800 4395806 844484936
- 623. PREM MOTORS PVT. LTD. (9511-01-), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON -122017
 - PH:4337900, 7065003445.

- 624. PREM MOTORS PVT. LTD. (9512-01-), PLOT NO. 3,IDC, OPPOSITE SECTOR-14, GURGAON -122001
- PH :7065003373, 7065003377, 0124-4319000. RANA MOTORS PVT LTD (9509-02-), PLOT NO.60, IDC, GURGAON - 122001 PH :4867777,
- 9873400882.
 626. PASCO AUTOMOBILES (9510-01-), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. 122001 PH : 9933669444/995.669222.
- 627. PREM MOTORS PVT. LTD. (9512-02-), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017 PH :4337933. 7065003442.
- 628. PLATINUM MOTO CORP (2L04-03-), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL GURGAON HARYANA - 122018 PH 9953345370/9899118867
- 629. PREM MOTORS (9512-G1-), QILA NUMBER 8/2, MUSTAKIL NO - 25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015 PH :8800000817.
- 630. PLATINUM MOTOCORP (2L04-04-), KILA NO. 15, SECTOR 83, NEAR HAYATPUR POLICE CHOWKI, HAYATPUR, GURGAON, PIN-122050, HARYANA - 122050 PH -9899118850

HANSI

631. JAGMOHAN MOTORS PVT LTD (GT02-01-), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI - 124001 PH :8059900546.

HISAR

- 632. MODERN AUTOMOBILES (7602-01-), OPP.
 VIDYUT NAGAR, DELHI ROAD, HISAR, 125005
 PH: 9355473000.
- 633. SARAOGI AUTOMOBILES (P) LTD. (7604-01-), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA - 125001 PH:8607777043.
- 634. MODERN AUTOMOBILES (7602-02-), OPP. BBMB, HISSAR DELHI ROAD, HISSAR - 125001 PH :9355473000
- UNIQUE MOTORS PVT. LTD. (7603-01-), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD,HISSAR (HARYANA) - 125006 PH :8818055535.

HODAL

 ROHAN MOTORS (EE01-02-), KILA NO. 8/2(7-11), 9(5-06), 12(5-0), 13(8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DIST.-PALWAL. PH. 8930202088 ; 9413080376.

ISMAILABAD

KARNAL MOTORS PVT. LTD. (1901-01-),
 KHEWAT NO. 928, KHASRA NO. 2760(5-14),
 2761(800), VILLAGE - ISMAILABAD, TEHSIL PEHOW, DIST.-KURUKSHETRA, HARYANA. - 136
 129
 PH. 7082007138

ISRANA

 AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (1802-01-), MUSHTIL NO.-119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132107 PH :9053400417.

JHAJJAR

 COMPETENT (0B02-01-), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101
 PH 99994933040

JIND

640. EAKANSH MOTORS PVT. LTD. (2K01-01-), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102 PH. 7876008184.

JULANA

641. EAKANSH MOTORS PVT. LTD. (MA01-01-), JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101 PH :8816802111

KAITHAL

642. EAKANSH MOTORS PVT. LTD. (U802-01-), AMBALA ROAD, NH-65, KAITHAL - 136027 PH 9671788801

KALANAUR

- 343. JAGMOHAN MOTORS (SPQ1-01-), BHIWANI ROAD, KALANAUR, DISTRICT ROHTAK. - 124113 PH:9812000425.
- 644. PANDIT AUTOMOBILES (SSN1-01-), VPO. KALANAUR, DISTRICT- YAMUNANAGAR, HARYANA - 124113 PH: 9053055550.

KALAYAT

645. EAKANSH MOTORS PVT. LTD. (BJP1-01-), NEAR BUS STAND, KAITHAL-KALAYAT ROAD, VILLIAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117 PH-9671788801.

KALKA

646. MODERN AUTOMOBILES (EG02-01-), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302 PH: 9896217059.

KARNAL

- 647. KARNAL MOTORS PVT. LTD. (8906-01-), 71/3 MILESTONE ,G.T.ROAD, KARNAL - 132001 PH :8222022399
- 548. KARNAL MOTORS PVT. LTD. (8906-02-), KHEWAT NO. 59, JHANJHARI GT ROAD, KARNAL - 132001 PH :8222022430.
- 649. MODERN AUTOMOBILES (8907-01-), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL -132001 PH:7419900042.

KATHURA

 JAGMOHAN AUTOMOTIVES (SFJ1-01-), GOHANA MAHAM ROAD, KATHURA, GOHANA. -131301 PH:8885005400

KHARKHODA

651. JAGMOHAN AUTOMOTIVES PVT. LTD. (BU02-01-), NEAR KANYA GURUKUL MAHAVIDYALYA, DELHI ROAD, NEAR UNION BANK, KHARKHODA (HARYANA) - 131402 PH :8885005593.

KOSLI

652. DINCO 4 WHEELS LLP (AUTO VIBES) (CAN1-01-), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT – REWARI, HARYANA - 123302 PH. 7082100202.

KUND

 DINCO 4 WHEELS LLP (AUTO VIBES) (CJL1-01-), NEAR KUND BARRIER, OPP. SBI BANK, NARNAUL ROAD, VILLAGE - MANETHI, KUND, DISTRICT - REWARI, HARYANA . - 123102 PH:856998928 , 97082100000.

KUNDLI

554. JAGMOHAN AUTOMOTIVES PVT. LTD. (GU03-01-), 34 E, SECTOR 57, PHASE 4, KUNDLI INDUSTRIAL AREA, KUNDLI - 131001 PH:8059900518.

KURUKSHETRA

 KARNAL MOTORS PVT. LTD. (8906-03-), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA - 136 118 PH: 8222022371.

LADWA

656. KARNAI MOTORS PVT. LTD. (CRA1-01-), KHEWAT NO.197, KHATONI NO.233, KHASRA NO.27/17/14, ZADWA-KURBUKSHETRA ROAD, VILLAGE - LADWA, TEHSIL THANESAR, DISTT. KURUKSHETRA - 136132 PH.7082007182.

LOHARU

557. JAGMOHAN MOTORS (HB02-01-), BHIWANI ROAD , OPP. ITI, CITY: LOHARU - 127201 PH :9812000425.

MADLAUDA

658. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (CFK2-01-), VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD, MADLAUDA, PIN-132113, HARYANA - 132113 PH 9053400524.

MAHENDARGARH

659. PLATINUM MOTO CORP (DP01-01-), KHEWAT NO. 187, KILLA NO. 51/8, REVENUE ESTATE OF VILLAGE REWASA, DADRI ROAD, TEHSIL & DISTRICT, MAHINDERGARH, PIN-123029, HARYANA - 123029 PH :9566136120. 9053088490.

MANDI DARWALI

660. SHAKTI MOTORS PVT.LTD. (E401-02-), SANGARIA ROAD, DABWALI, DISTT.-SIRSA -125104

PH:8222900209.

661. PLATINUM MOTOCORP LLP (2L04-01-), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052 PH .09953345326/9953345324/9910100341.

MEHAM

MANESAR

662. JAGMOHAN MOTORS PVT LTD (A601-08-), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101 PH:8059900592

MOHNA

663. TCS & ASSOCIATES PVT LTD (CRT1-01-), YAMUNA PUL ROAD, NEAR GYATRI PETROL PUMP, VPO-MOHANA, TEHSIL BALLABGARH, DISTT FARIDABAD - 121004 PH:9911573130. 8929579400.

MUSTAFABAD

664. PANDIT AUTOMOBILES PVT. LTD. (CDX1-01-), KHATUNI NO. 205/287, KHASRA NO. 39:17/2, VILLAGE - MANSURPUR, THANA - CHAPPER, MUSTAFABAD, DIST.-YAMUNA NAGAR, STATE-HARYANA. - 133 103 PH :9992113854.

NARAINGARH

665. EAKANSH WHEELS (1802-02-), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203 PH:9991143700.

NARNAUL

666. PLATINUM MOTOCORP LLP (9Q02-01-), KAILASH NAGAR, REWARI ROAD, NARNAUL, HARYANA, - 123001 PH :09053088460/9582226838/9053088501/905308845 1/9053088500.

NARNAUND

667. JAGMOHAN MOTORS (SDK1-01-), KHASRA NO. 234, HANSI ROAD, NARNAUND, DISTT. HISAR, HARYANA. - 125039 PH:9812000471.

NARWANA

668. EAKANSH MOTORS PVT. LTD. (U802-03-), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116 PH :9813583100.

NUH

669. PASCO AUTOMOBILES (7L02-01-), MAIN DELHI -ALWAR ROAD, NEAR SHAHEED PARK, NH -248A, NUH, DISTRICT - MEWAT, HARYANA. -122107 PH :9810014947.

PALWAL

670. ROHAN MOTORS LTD. (EE01-01-), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101 PH :304100 : 304107/8930202060.

PANCHKULA

671. MODERN AUTOMOBILES (702-03-), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113

PH:9646000165.

672. AUTOPACE NETWORK PVT LTD (705-03-), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113 PH : 7087119847

673. AUTO VOGUE PVT. LTD. (K303-01-), PLOT NO-388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113 PH :8558813181.

PANIPAT

674. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (D302-01-), KHASRA NO. 43/6, 44/9 & 10, VILLAGE – JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA. - 132103 PH 9053400515

PATAUDI

 PLATINUM MOTOCORP LLP (BY03-01-), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503 PH:9953345381/9953345488/9953345330.

PEHOWA

 KARNAL MOTORS PVT. LTD. (2M02-01-), NEAR DAV COLLEGE, AMBALA ROAD, PEHOWA. 136128 - 136128 PH :8222022464.

PUNDRI

677. EAKANSH MOTORS PVT. LTD. (BFF1-01-), KILA NO- 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026 PH-9671738801

PUNHANA

 PASCO AUTOMOBILES (BIU1-01-), KILA NO. 4/2, PUNHANA, DIST.-MEWAT, HARYANA - 122508
 PH: 9991300950, 8059730879

RADAUR

679. PANDIT AUTOMOBILES PVT. LTD. (D201-02-). OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA -135001 PH 9992113854.

RAJOUND

680. EAKANSH MOTORS (SHV1-01-), MITTAL KHAL BHANDAR, RAJOUND, DISTT KAITHAL - 136044 PH :9671788801

REWARI

 DINCO 4 WHEELS LLP (AUTO VIBES) (U102-01-), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401 PH : 7082100200/7082100204/7082100201.

ROHTAK

682. JAGMOHAN MOTORS PVT LTD (A601-01-), SONEPAT ROAD, ROHTAK - 124001 PH :9467465035

JAGMOHAN MOTORS PVT LTD (A601-09-),
 SWAN GARDEN, DELHI ROAD, ROHTAK 124001

PH:9812000357.

 UNIQUE AUTO LEAD LLP (A602-01-), KHASRA NO- 3597 JIND ROAD, JIND CHOWK, ROHTAK, HARYANA - 124001 PH :9812259000.

SAFIDON

685. EAKANSH MOTORS PVT. LTD. (U802-05-), NEAR BRSK SCHOOL, OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT-JIND - 126112 PH :9416616603.

SAMPLA

686. JAGMOHAN MOTORS PVT LTD (NY01-01-), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501 PH 981/2000351

SATNALI

687. PLATINUM (SLH1-01-), KHEVAT NO.605, KHATONI NO-1134 KILLA NO.167, VILL: SATNALI, NEAR BHARAT PETROL PUMP MAHENDRAGARH ROAD, HARYANA -123024 (LOCATION: MAHENDRAGARH) - 123024 PH :9910100341.

SHAHABAD

688. KARNAL MOTORS PVT. LTD. (CCR2-01-), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST.-KURUKSHETRA. - 136135 PH.8222022338.

SIRSA

689. SHAKTI MOTORS PVT.LTD. (E401-01-), DABBALI RD., SIRSA, HARYANA - 125055 PH:8222900201.

SIWANI

690. SARAOGI AUTOMOBILES (P) LTD. (HA03-01-), OPP.GOVT HOSPITAL, SIWANI BYPASS CHOWK.HISSAR ROAD, SIWANI,DIST.BHIWANI -127046 HARYANA - 127046 PH :8607777149.

SOHNA

 PASCO AUTOMOBILES (9506-03-), 56, KILLA NO. 13 (4-10), 18 (4-6), 19 (8-0), 22 (8-0), 23 (4-2),
 VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA, DISTRICT -GURUGRAM. -122103
 PH -08683000902/9873711127/8683000919

SONIPAT

692. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-01-), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001 PH: 9992200372.

693. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-02-), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001 PH : 8685005686

694. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-03-), O-11 INDUSTRIAL AREA, SONIPAT, HARYANA. - 131001 PH :9812615000.

TAURU

995. PASCO AUTOMOBILES (BIV1-01-), IKIA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA. - 122015 PH :8683000902, 9873001497, 8683000954, 9871150250 9034976253

TIGAON

 TCS (5804-03-), TCS AUTOWORLD, ARYAN PLAZA, NEEMIKA BHUPGARH, TIGAON-BALLABGARH ROAD, FARIDABAD, PIN-121004, HARYANA - 121004 PH 9971422444.

TOHANA

697. SHAKTI MOTORS PVT.LTD. (XP01-01-), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120 PH:8572800991.

TOSHAM

698. JAGMOHAN MOTORS PVT LTD (0Y01-01-), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040 PH: 8059900566.

YAMUNANAGAR

699. PANDIT AUTOMOBILES PVT. LTD. (D201-01-), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001 PH - 9812455896

700. PANDIT AUTOMOBILES PVT. LTD. (D201-03-), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001 PH -9812455896

HIMACHAL PRADESH

ALAMPUR

701. KANGRA VEHICLEADES (RL01-01-), KHASRA NO. 1606/1582, STATE HIGHWAY PALAMPUR-SUJANPUR AT JANGAL, VILLAGE -ALAMPUR, DIST.-KANGRA. - 176082 PH: 3988002269.

BADDI

702. GOYAL MOTORS PVT LTD (*7001-04-),
KHATAKHATAUNI NO. 26/26, KHASRA NO.
93/56/32 AND 94/56/32, KITAS 2, REVENUE
MAUZA – CHAK JANGI, HADBAST NO. 203,
TEHSIL – BADDI, DISTRICT – SOLAN, HIMACHAL
PRADESH. - 173/205
PH - 94/1807/69/72

BAIJNATH

 KANGRA VEHICLEADES (BBC1-01-), TASHI JONG, PAPROLA-BAIJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAIJNATH, DISTT. KANGRA - 176115 PH :8628820603.

BANIKHET

704. PATHANKOT VEHICLEADES PVT. LTD. (BWN1-01-), KHASRA NO.709, KHATA KHATOONI NO.23, BANIKHET, THE-DALHOUSIE, DISTT. CHAMBA - 176303 PH :254186 232036 9418048803

BILASPUR

705. COMPETENT AUTOMOBILES CO. LTD. (6Y01-01), KHEWAT NO. 8/8 KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. – CHANDPUR, TEHSIL – SADAR, DIST.- BILASPUR, HIMACHAL PRADESH. - 174001 PH :7807168832. 7807800330 / 7807800440.

111.7007100002, 700700000077007000440

CHAMBA

 KANGRA VEHICLEADES (D902-03-), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310 PH:9418059252. 9418045778. KANGRA VEHICLEADES (D902-05-), KHASRA NO. 88/96,1 & KHASRA NO.628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310
 PH. 994/18059252 - 9418013810.

CHOWARI

708. PATHANKOT VEHICLEADES PVT. LTD. (CWV1-01-), KHATA KHATNI NO. 24/32 MIN, KHASRA NO. 90, VILLAGE - LAHRU, P.O. -PARCHHORE, TEHSIL - BHATTIYAT, DIST. -CHAMBA, HAMACHAL PRADESH. - 144416 PH :8894569832.

DFHRA

 KANGRA VEHICLEADES (D902-02-), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA -177101
 PH:9817013058

GAGGAL

 KANGRA VEHICLEADES (BBV1-01-), NATIONAL HIGHWAY-20, ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA, HIMACHAL PRADESH - 176209 PH 9418988832.

HAMIRPUR

 COMPETENT AUTOMOBILES CO. LTD. (W901-01-), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401 PH :9805510276

INDORA

712. PATHANKOT VEHICLEADES PVT. LTD. (BHE1-01-). VILLAGE CHANDOR, PO & TEHSIL INDORA, DISTT. KANGRA, PIN-176401, HIMACHAL PRADESH - 176401 PH :9418008627.

JAISINGHPUR

 KANGRA VEHICLEADES (BVA1-01-), HARSI PATTAN ROAD, OPP. SABJI MANDI, TEHSIL – JAISINGHPUR, DIST. – KANGRA, HIMACHAL PRADESH. - 176095 PH 9418477756

JAWALI

714. PATHANKOT VEHICLEADES PVT. LTD. (BXE1-01-), VILLAGE - TIUKARI, NEAR MAHAVIR HOSPITAL LUBH ROAD, TEHSIL - JAWALI, DIST. -KANGRA, HAMACHAL PRADESH. - 176023 PH. 99418195333.

JOGINDER NAGAR

 COMPETENT AUTOMOBILES CO. LTD. (BBO1-01-), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015 PH 9805005754

JWALAMUKHI

716. KANGRA VEHICLEADES (CND1-01-), KHASRA 880/613, MAUJA BOHAN, TEHSIL JWALAMUKHI, DISTRICT KANGRA - 176031 PH: 9418488999.

KULLU

 COMPETENT AUTOMOBILES CO. LTD. (2Q01-01-), PLOT 384, INDUSTRIAL AREA, SHAMSHI, KULLU (HP) - 175126 PH :7018035136.

KUNIHAR

718. GOYAL MOTORS PVT LTD (BBX1-01-), KHATA NO. – 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSHIL – ARKI, DISTRICT – SOLAN, HIMACHAL PRADESH - 173207 PH :9418312472

ΜΔΝΔΙΙ

 COMPETENT AUTOMOBILES CO. LTD. (BKU1-01-), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131 PH: 9418387465.

MANDI

 COMPETENT AUTOMOBILES CO. LTD. (B301-01-), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI - 124501 PH :9805513208/9816664891.

NADAUN

721. COMPETENT AUTOMOBILES CO. LTD. (BXA1-01-), VILLAGE JALAN, KHASRA NO. 183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041 PH: 9805737436.

NAGROTA

 KANGRA VEHICLEADES (D902-01-), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047 PH -7018268819

NAGROTA BAGWAN

723. KANGRA VEHICLEADES (D902-06-), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047 PH :7018268819.

NAGROTA SURIAN

724. KANGRA VEHICLEADES (BGI1-01-), KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037, MAHAL BASSA, SUB TEHSIL - NAGROTA SURIAN, DISTRICT - KANGRA. - 176027 PH :9414848999.

NALAGARH

 GOYAL MOTORS PVT LTD (IB02-01-), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) -174101
 PH: 9418704572.

NERWA

726. GOYAL MOTORS PVT LTD (CR\$1-01-), KHASRA NO. 482, VILLAGE – KEDI, TEHSIL – NERWA, DISTRICT – SHIMLA, HIMACHAL PRADESH. -171210 PH :9418663572.

NURPUR

727. KANGRA VEHICLEADES (D902-04-), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201

PH:9418195333, 9418041778. PALAMPUR

 KANGRA VEHICLEADES (2T01-01-), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061 PH: 941822262/ 9463265072.

PAONTA SAHIB

729. GOYAL MOTORS PVT LTD (A901-02-), OPP BIBIJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR, NH-72, PAONTA SAHIB -173025 PH :9459210872.

RAJGARH

730. GOYAL MOTORS PVT LTD (BJX1-01-), KHATA NO. 517/505, 478/3, KHASRA NO. – 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL – RAJGARH, DISTRICT – SIRMAUR, HIMACHAL PRADESH - 173101 PH :94/813/12472.

RAMPUR

 GOYAL MOTORS PVT LTD (CEZ1-01-), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL – RAMPUR, DISTRICT – SHIMLA. - 172001 PH:9459296572.

ROHRU

732. GOYAL MOTORS PVT LTD (JZ01-01-), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207 PH: 9418016072.

SALOONI

733. PATHANKOT VEHICLEADES (SES1-01-), KHASRA NO. 299/174, VILLAGE. MANJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320 PH:9418059252.

SHAHPUR

 KANGRA VEHICLEADES (SCR1-01-), VILLAGE MANJHGRAN, P.O. DRAMMAN, TEHSIL SHAHPUR, DISTT. KANGRA, HIMACHAL PRADESH - 176206 PH:9459900241.

SHIMLA

GOYAL MOTORS PVT LTD (A901-01-),
 TARADEVI, SHIMLA,(H.P.) - 171010
 PH :9418663572

SOLAN

736. GOYAL MOTORS PVT LTD (7D01-01-), DEON GHAT, SOLAN - 173211 PH :9418138772

UNA

 COMPETENT AUTOMOBILES CO. LTD. (QD01-01-), VILLAGE RAINSARY, P.O. JHALERA, TEHSIL & DISTRICT: UNA - 174303 PH: 9805737436.

JAMMU

MARH

738. JAMKASH VEHICLEADES PVT. LTD (BPM1-01-), KHASRA NO. 269, LOWER MUTHI DHARMAL, DIST.-JAMMU, STATE - JAMMU & KASHMIR. -181205 PH. 7006898474

JAMMU & KASHMIR

CHOWKI CHOURA

739. JAMU MOTORS (SDY1-01-), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154 PH. 9596975080.

MAHANPUR

 JAMMU MOTORS (SPK1-01-), MAHANPUR, DISTRICT KATHUA, TEHSIL MAHANPUR -JAMMU & KASHMIR. - 184202 PH: 9596975060.

MANJAKOTE

741. JAMKASH VEHICLEADES (SQV1-01-), NEAR PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE, DISTRICT RAJOURI, J&K - 185131 PH:7006014395.

VIJAYPUR

 JAMMU MOTORS (OZ02-01-), JAMMU PATHANKOT HIGHWAY, VIJAYPUR (SAMBA), J&K - 184120 PH :9596975060.

JAMMU AND KASHMIR

AKHNOOR

 JAMMU MOTORS PVT. LTD. (2X02-01-), MAIN ROAD DASKAL, TEHSIL – AKHNOOR, DISTRICT -JAMMU - 181201 PH :9419118393

ANANTNAG

744. PEAKS AUTO PVT. LTD. (2Y01-01-), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165 PH: 9519275151.

ASHMUQAM

745. PEAKS AUTOS (BOH1-01-), KP ROAD, HUTMARAH, NEAR ASHMUQAM, ANANTNAG, JAMMU AND KASHMIR - 192125 PH:9519275151.

BANDIPORA

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-04-), AJAR BANDIPORA, J&K - 193502 PH:9149726427.

BARAMULLA

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (8C01-01-), VILLAGE SANGRAMA, WAGAROO, BARAMULA - 193101 PH: 7889612218.

BHADRAWAH

 J& K VEHICLEADES PYT. LTD (AKA1-01-), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K-182222
 PH '9419796821

BHASOLI

749. JAMKASH VEHICLEADES PVT. LTD. (GLK1-01-), ZERO MORTH, BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR -184201 PH :9018847230.

BUDGAM

750. HIGHLAND AUTOMOBILES PVT.LTD (1202-04-), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM. - 191111 PH :9419019898.

DAYALACHAK

751. JAMKASH VEHICLEADES PVT. LTD (BFH1-01-), KHASRA NO. 183, KHEWAT NO. 14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK, TEHSIL & DISTT. KATHUA, JAMMU & KASHMIR - 184121 PH: 8892849170.

DODA

 J& K VEHICLEADES PVT. LTD (2Z02-01-), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202 PH :941979687

GANDERBAL

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (ZA01-01-), MALSHAIE BAGH, GANDERBAL (J&K) - 191201
 PH :9419000828

HANDWARA

754. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (BYA1-01-), KHEWAT NO-31, KHATTA NO-298, SURVEY NO- 3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST- KUPWARA, J&K -193221 PH -262322 9419074012

JAMMU

755. JAMKASH VEHICLEADES PVT. LTD (3306-01-), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015 PH :6006801639.

756. JAMKASH VEHICLEADES PVT. LTD (3306-02-), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001 PH :9419224014

 JAMKASH VEHICLEADES PVT. LTD (3306-04-), SUNJWAN, DISTT. JAMMU - 180011
 PH -7006018600

 PEAKS AUTO JAMMU PVT. LTD. (3312-01-), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010 PH :9897001125

 JAMMU MOTORS PVT. LTD. (3308-01-), 6, AKHNOOR ROAD, JAMMU. - 180001 PH :9419118393.

 JAMMU MOTORS PVT. LTD. (3308-02-), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002 PH :9419118393.

761. PEAKS AUTO JAMMU PVT. LTD. (3312-02-), KHASRA NO. 425 & 426, KHATA NO. 425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001 PH -9697001125

762. JAMKASH VEHICLEADES PVT. LTD (3306-07-). KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. -180007 PH :9419191502.

KATHUA

 JAMMU MOTORS PVT. LTD. (3B02-01-), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101 PH: 9419118393

KULGAM

 PEAKS AUTO PVT. LTD. (OY01-01-), NEAR GRID STATION, MAIN ROAD, KULGAM - 191202 PH:9519275151.

KUPWARA

765. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-03-), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223 PH :9622499902.

MAGAM

766. JAMKASH VEHICLEADES PVT. LTD (GLS1-01-), KHASRA NO. 34, MOUZA - CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL -KWARHAMA, DIST.-BARAMULLA, JAMMU & KASHMIR. - 193 401 PH :8825016046.

PHINTER

767. JAMKASH VEHICLEADES PVT. LTD (BHV1-01-), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203 PH. 949187583.

POONCH

 JAMKASH VEHICLEADES PVT. LTD (AAW1-01-), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121 PH:7006014395.

PULWAMA

769. PEAKS AUTO PVT. LTD. (1204-03-), MUGHAL ROAD, GUNGOO, PULWAMA - 192301 PH:9519275151.

RAJOURI

 JAMKASH VEHICLEADES PVT. LTD (3306-06-), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI -185131
 PH :7006014395

RS PURA

 JAMKASH VEHICLEADES PVT. LTD (3306-03-), GAGAIN MORTH, R S PURA, JAMMU, - 181102 PH:9419190370.

SHOPIAN

772. PEAKS AUTO PVT. LTD. (AAA1-01-), AGLAR SOFANAMAN, SHOPIAN - 192303 PH:9519275151.

SIDHRA

773. JAMKASH VEHICLEADES PVT. LTD (CDL1-01-), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019 PH :9419134144

SRINAGAR

 HIGHLAND AUTOMOBILES PVT.LTD (1202-01-), SONWAR, SRINAGAR - 190001 PH :9419057564.

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-01-), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015 PH:7006037255.

 PEAKS AUTO PVT. LTD. (1204-01-), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101 PH :9519275151.

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-05-), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017 PH:9796700750.

SUNDERBANI

 PEAKS AUTO JAMMU PVT. LTD. (AAM3-01-), MOUZA THANDA PANI, TEH. SUNDERBANI -185153 PH -9607001125

SURANKOTE

779. PEAKS AUTO JAMMU PVT. LTD. (TY03-01-), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101 PH :9697001125.

THANA MANDI

 JAMKASH VEHICLEADES PVT. LTD. (S001-01-), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI -185212 - 185212 PH: 9419267607.

UDHAMPUR

 J& K VEHICLEADES PVT. LTD (D801-01-), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101 PH 7006881028

URI (CHAAL BONIYAAR)

782. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (CCK1-01-), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123 PH :9419074012.

JHARKHAND

BAGODAR

783. RELIABLE INDUSTRIES PVT. LTD. (BHA1-01-), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRIDIH, JHARKHAND. - 825322 PH :9507102036 9835814404

BALIAPUR

784. CARONE (SNI1-01-), WARD NO 53, HOLDING NO - SAF3797, KANDRA SINDRI, BALIAPUR. - 828123 PH:7980074787.

BOKARO

785. HINDUSTAN AUTO AGENCY (B501-02-), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004 PH :9831550033/7070403002/9431128683.

 HINDUSTAN AUTO AGENCY (B501-03-), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) - 827004 PH:9431127983/9431128683.

CHAIBASA

787. PEBCO MOTORS (BOY1-01-), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT – WEST SINGHOHUM, JHARKHAND. - 833201 PH -707/0404718

CHANDWA

788. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (SCS1-01-), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA – 829203, DIST – LATEHAR, JHARKHAND - 829203 PH :7061147502.

CHIRKUNDA

789. RELIABLE INDUSTRIES (CQT1-01-), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. - CHIRKUNDA, DISTRICT – DHANBAD, JHARKHAND. - 828202 PH :9905937751 9358744204

DALTONGANJ

 PREMSONS MOTORS UDYOG PVT LTD (5103-02-), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101 PH -9835507004

DEOGHAR

791. RELIABLE INDUSTRIES (5202-03-), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, -814112 PH :6207129088 7001553251.

792. RELIABLE INDUSTRIES (KR02-01-), MOUZA -CHAKRIPAHARI, NO. 587, WARD NO. 36, DEOGHAR, JHARKHAND. - 814114 PH :9835811220, 9835814404.

DHANBAD

 RELIABLE INDUSTRIES (5202-01-), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001 PH :9835830202 7369945040

794. RELIABLE INDUSTRIES (5202-02-), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIDHELA, DHANBAD - 828127 PH: 8102333474 7369945043

795. RELIABLE INDUSTRIES (5202-06-), SUGIADIH, HIRAK ROAD, SARAIDHELA, DHANBAD, JHARKHAND. - 828127 PH 9334094940

 CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (5205-01-), NH-2, GT ROAD, SAHARJORI, BARWADA, DHANBAD. - 828 109 PH :9008828000, 9835740433.

97. RELIABLE INDUSTRIES (5202-09-), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 828109 PH: 9031096662.

DUMKA

 RELIABLE INDUSTRIES (L701-01-), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101 PH:6205161170.

GARHWA

 PREMSONS MOTOR UDYOG PVT. LTD. (VX01-01-), kHATA NO. 4, KHESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114 PH: 8862828802 9835507004.

GHATSHILA

800. PEBCO MOTORS LTD. (AIA1-01-), PLOT NO. 68, KHASRA NO.128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK, GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303 PH-9308433388

GIRIDIH

 RELIABLE INDUSTRIES (5202-04-), MOHANPUR, PACHAMBA ROAD, GIRIDIH. - 815301 PH :8102924860 8102924858

802. RELIABLE INDUSTRIES PVT. LTD (5202-08-), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND. - 815301 PH 9835835101

GODDA

303. RELIABLE INDUSTRIES (5202-05-), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133 PH :6207129088.

GUMLA

804. PREMSONS MOTOR UDYOG PVT. LTD. (5103-04-), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207 PH: 9835507004.

HAZARIBAGH

9263631327

805. HINDUSTAN AUTO AGENCY (Y901-01-), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. -825301 PH 9304051949.

806. HINDUSTAN AUTO AGENCY (Y901-02-), MASIPIRHI, BABHANBAY, HAZARIBAGH, JHARKHAND. - 825301 PH :9216888118 9263631327.

JAMSHEDPUR

807. PEBCO MOTORS LTD. (3101-01-), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH :9308433388.

808. PEBCO MOTORS LTD. (3101-02-), 16
BALICHALA, CONTRACTORS & GODOWN AREA,
SONARI, JAMSHEDPUR - 831011
PH: 9308433388.

 MOTOR WORLD (3102-01-), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR -831012

PH:9431347164, 9570168342.

JAMTARA.

810. RELIABLE INDUSTRIES (BOX1-01-), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351 PH :9835814404

KATRAS

811. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (GLP1-01-), RAJHANS REFRACTORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-228114 - 828114 PH :8810900556

KHELARI

812. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (CFO1-01-), PLOT 113, MOUZA- BUKBUKA, BESIDE PAHADI MANDIR, KHELARI, RANCHI - 829205 PH :6458222, 9534199997.

KHUNTI

813. PREMSONS MOTOR UDYOG PVT. LTD (BOL1-01-), PLOT NO. 747, KHATA NO. 2, DAHUGUTU, CHAIBASA ROAD, KHUNTI, JHARKHAND. - 835 210 PH 9835507004

KODARMA

814. HINDUSTAN AUTO AGENCY (VR01-01-), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. – TILAIYA, DISTRICT – KODERMA, JHARKHAND. - 825409 PH :6201998936.

LOHARDAGA

815. SUDHA MOTORS/A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (CX01-01-), PLOT NO. 14P, 15, 23, RIADA, LOHARDAGA, JHARKHAND. -835302 PH. 9634199997.

MURI

 HILLTOP MOTORS (BVE2-01-), NEAR BANK OF INDIA, SILLI MAIN ROAD, MURI, PIN - 835102 -835102 PH:7061157502.

PAKUR

817. RELIABLE (CLO1-01-), CIO KHOKHAN RAY,HIRANPUR,,PAKUR, MAIN ROAD,VILL.SAHERKOL,PS PAKUR REGISTRY OFFICE - 816107 PH :9031096662.

RAMGARH

 HINDUSTAN AUTO AGENCY (AV01-01-), MARAR, RANCHI ROAD (NH-33), RAMGARH - 829122
 PH 9263631345

RANCHI

- PREMSONS MOTORS UDYOG PVT LTD (5103-01-), 502, KANKE ROAD, RANCHI. - 834008 PH: 9304807355.
- 820. PREMSONS MOTOR UDYOG PVT. LTD. (5103-03-), 10/P, NAMKUM INDUSTRIAL ESTATE, BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010 PH 9262899003.
- 821. PREMSONS MOTOR UDVOG PVT. LTD. (5103-05-), PLOT NO. 31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003 PH -9835507004
- 822. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (5107-02-), PLOT NO. 74, OPPOSITE OTC GROUND, HEHAL, RATU ROAD, RANCHI, JHARKHAND - 834005 PH :9534199997. 8227996680.
- 823. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (5107-03-), PLOT NO. 39, NEAR BOOTY MORE, RANCHI-RAMGARH ROAD, RANCHI. - 835217 PH :9634199997
- 824. PREMSONS MOTOR UDYOG PVT. LTD. (5103-06-), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001 PH 9835507004
- 825. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (5109-01-), KHATA NO. 247, MOUZA - PUNDAG, P.S. - PUNDAG, RANCHI, JHARKHAND. - 834004 PH -7061157502
- 826. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (5109-02-), NEAR KATHAL MORE, ARGORA RANCHI RD, NEAR EKLABBA TOWER, DHIPATOLI, ARGORA, RANCHI - 834004 PH. 70611157502.

SIMDEGA

827. PREMSON (BJ01-01-), R.S PLOT NO 4674 UNDER KHATA NO 157, SITUATED AT VILLAGE – GOTRA, NEAR GOUSHALA, MAIN ROAD, SIMDEGA, JHARKHAND. - 835223 PH :9835507004.

KARNATAKA

ANEKAL

828. PRATHAM MOTORS PVT. LTD (205-04-), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106 PH :9945540131.

ANKOLA

829. BHARATH AUTO CARS PVT. LTD. (FC02-01-), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT -581314

ATHANI

PH:7829567400

830. SHANTESHA MOTORS (BWA1-01-), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304 PH: 8884472567.

ATHRANI

831. ABHARAN MOTORS PVT LTD (G601-04-), HERABETTU ROAD ATHARDI UDUPI - 576107 PH: 9845472500.

ATTIBELE

832. SURAKSHAA CAR CARE PVT. LTD. (BMM1-01-), SURVEY NO.22/7/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE. - 562107 PH :9449865665

BAGALKOT

833. VIJAY MOTOWINGS (ZL01-01-), 180/4-2,BELGUM RAICHUR ROAD, NEAR APMC MARKET YARD, BAGALKOT - 587103 PH :9481289167

BAGEPALLI

834. BIMAL AUTO AGENCY INDIA PVT. LTD.

(BTV1-01-), H.L. NO. 423 AND 436 SRI SATHYA
SAI NAGAR, ON NH-T, THIMAYALAPALLI
BLOCK-II, PARAGODU GRAM PANCHAYATH,
KASABA HOBLI, BAGEPALLI TALUK,
CHIKKABALLAPUR DIST. - 561 207
PH : 9742458888.

BANDAHALLI

835. BIMAL AUTO AGENCY INDIA PVT. LTD. (STB-10-1), SURVEY NO: 44/11, TAVARAKERE VILLAGE, NANDAGUDI HOBLI, BANDHALLI, HOSKOTE TALUK, BANGALORE RURAL DIST, KARNATAKA- 852/122 - 552/122 PH : 951/37 48707.

BANGALORE

- 836. MANDOVI MOTORS PVT LTD. (201-01-), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027 PH:9945235511.
- 837. MANDOVI MOTORS PVT LTD. (201-07-), 17/A-2&3 IND.SUBURB.IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022 PH :9945235537.

- 838. MANDOVI MOTORS PVT LTD. (201-05-), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN. VIJAYANGAR,BANGALORE - 560079 PH. 9945235529.
- 839. RNS MOTORS (7301-03-), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022 PH 9606933236
- 840. BIMAL AUTO AGENCY INDIA PVT. LTD. (218-01-), NO.-60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064 PH :9945541034.
- 841. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-01-), 60/2, MAHADEVPURA, WHITE FIELD ROAD, BANGALORE - 560048 PH :99723 98105.
- 842. RNS MOTORS (7301-04-), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068 PH :9148001412
- 843. MANDOVI MOTORS PVT LTD. (201-08-), NO. 70 SARAKKI INDUSTRIAL LAYOUT, J.P. NAGAR, 3RD PHASE, BANGALORE - 560078 PH :995423552.
- 844. PRATHAM MOTORS PVT. LTD (205-01-), 16, BALLANDUR, SARJAPUR RING ROAD, BANGALORE - 560037 PH :9945540126.
- BIMAL AUTO AGENCY INDIA PVT. LTD. (216-02-), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078 PH :9972388139
- 346. PRATHAM MOTORS PVT. LTD (205-02-), STHANIKAM'S ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ, KUMAR ROAD, A BLOCK, RAJAJINAGAR 2 STAGE, BANGALORE -560010 PH 9900061378.
- 847. KALYANI MOTORS PVT. LTD. (211-01-), MYSORE ROAD,PANTHARAPALYA,KENGRI HOBLI,BANGALORE - 583201 PH 9538887078
- 848. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-03-), NO.7/1, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUTS COMPOUND, IIMB POST, BANNERGHATTA RD., BANGALORE - 560076 PH 9845166612
- 849. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-04-), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE - 560038 PH :9972398106.
- 850. MANDOVI MOTORS PVT LTD. (201-0C-), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR 560044 PH: 9945235537.

- KALYANI MOTORS PVT. LTD. (211-04-), 119/1, 11TH CROSS, MALLESHWARAM, BANGALORE, -560003
 PH: 9886026519.
- 852. MANDOVI MOTORS PVT LTD. (201-0D-), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043 PH :9845132048.
- B53. MANDOVI MOTORS PVT LTD. (201-0E-), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA. - 560102 PH :9945/335518
- MANDOVI MOTORS PVT LTD. (201-9B-), PLOT NO.-257/1-13, BANNERGHATTA ROAD, N.S. PALYA, BANGALORE - 560076 PH :9945238559.
- 855. KALYANI MOTORS PVT. LTD. (213-02-), SY. NO.:58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE. - 560049 PH 9900037192
- S56. SURAKSHAA CAR CARE PVT LTD (280-01-), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100 PH :9449865605.
- 857. KALYANI MOTORS PVT. LTD. (213-03-). NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU. - 574239 PH. 9900038119.
- 858. SURAKSHAA CAR CARE PVT. LTD. (280-02-), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068 PH :9449865655
- 859. KALYANI MOTORS PVT. LTD. (213-04-), 250/1,BILEKAHALLI, BANNERGHATTA ROAD, BENGALURUE - 560076 PH 9686445406
- 860. BIMAL AUTO AGENCY INDIA PVT. LTD. (218-04-), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058 PH :9945237213.
- 861. RNS MOTORS (7301-0G-), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH 6364884787
- 862. PRATHAM MOTORS PVT. LTD (205-05-), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034 PH :9900058466
- 863. RNS MOTORS LIMITED (7301-0H-), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158 PH :9538965771.

- 864. KALYANI MOTORS PVT. LTD. (291-02-), 10/1, HEBBAL , AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024 PH :9740985324 . 7760983387.
- 865. BIMAL AUTO AGENCY INDIA PVT. LTD. (286-01-), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066 PH :9900245979.
- 866. SURAKSHAA CAR CARE PVT. LTD. (280-04-), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034 PH :38844190110
- 867. KALYANI MOTORS PVT. LTD. (287-01-), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056 PH :9900019961.
- 868. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-06-), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033 PH :9738501996.
- 869. MANDOVI MOTORS PVT LTD. (201-0H-), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093 PH :9845235533
- 870. VARUN MOTORS PVT. LTD. (292-01-), HNO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE. 560022 PH :7337834582
- 871. KALYANI MOTORS PVT. LTD. (213-05-), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. -560043
- PH:9900037114.

 872. KATARIA AUTOMOBILES PVT. LTD. (294-01-),
 NO. 5, 15TH CROSS, KOLANDAPPA GARDEN,
 ANEPALYA, POST AADUGODI, BANGALORE: 560030
- PH. 7349291802.

 873. MANDOVI MOTORS PVT LTD. (201-0I-), KATHA
 NO.4, SITUATED AT GANAKAL DHAKALE,
 SRINIVASPURA, KENGERI HOBLLI,
 UTTARAHALLI, BANGALORE 560060
 PH. 9945235516
- 874. VARUN MOTORS PVT. LTD. (292-02-), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. 560073 PH:7338286729.
- 875. MANDOVI MOTORS PVT LTD. (201-0J-), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHNAN ROAD, VIDYARANYAPURA, BANGALORE. - 560097 PH :9945235514.

- 876. KATARIA AUTOMOBILES PYT. LTD. (293-01-), SURVEY NO. 8/3, 10/4, 10/2, VILLAGE THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA. - 560109 PH: 884434340.
- RNS MOTORS LIMITED (7301-0.-), SY. NO. 11/2
 12/1, VILLAGE ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE – 560 076.
 560076
 PH 7760982836
- 878. SURAKSHAA CAR CARE PVT. LTD. (280-05-), SURVEY NO.2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE. - 560100 PH :8884471200.
- 179. KALYANI MOTORS PVT. LTD. (211-05-), SY.NO.8/4, G HOSAHALLI MAIN ROAD, GOLLARAHATTI, V N POST, YESHWANTPURA HOBLI, MAGADI MAIN ROAD, BANGALORE -560091
- PH:990080229. 80. SURAKSHA CAR CARE (280-06-), BEARING NO. 54/4-320/2, BEGUR HOBLI, BOMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE, KARNATAKA. - 560 068
- PH:9449865665.

 PRATHAM MOTORS PVT. LTD (205-07-), SUVEY NO. 43/1, ON SH-35, VILLAGE YAMARE, SARJAPUR MAIN ROAD, POST DOMMASANDRA. TALUKA ANEKAL.
- BENGALURU RURAL, KARNATAKA. 562125 PH. 9611834659. 882. SURAKSHAA CAR CARE PVT. LTD. (280-07-), SURVEY NO 10612A, CHANDAPURA MUNICIPAL TOWN, MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA -560099
- BH: 94498 65666.

 KALYANI MOTORS (291-03-), SURVEY NO. 194/5,
 HUNSEMARANAHALLI, JALA HOBLI,
 DEVANAHALLI TALLIK, (YELAHANKA NEW
 TALUK), NEW KEMPEGOWDA INTERNATIONAL
 AIRPORT ROAD, NORTH
 PH: 9749085324.
- 884. MANDOVI MOTORS (201-09-), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018. - 560018 PH: 9945235516.

BANGALORE (HEBBAGODI)

885. RNS MOTORS (210-01-), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD, ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560 099 PH: 6366938829.

BANGALORE- KP ROAD

886. KALYANI MOTORS (213-06-), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDAKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062 PH :9900039844/9900073254.

BANGARPET

887. SURAKSHA CAR CARE PVT. LTD. (OR04-01-), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH: 9449865601.

BANGLORE - BOMMANAHALLI

888. VARUN MOTORS PVT LTD (292-03-), SY NO: 136 (OLD NO 548) SANGEGURIVANAHALLI(VP) KAMAKSHIPALAYA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE KARNATAKA - 560079 PH 9513863062

BANTWAL

889. MANDOVI MOTORS PVT LTD. (TR01-01-), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231 PH 9008810123

BELGAUM

- 890. SHANTESHA MOTOR (P) LTD (E801-01-), MUJAWAR COMPOUND, NEHRU NAGAR, BELGAUM, - 590010 PH: 9902043711.
- SHANTESHA MOTOR (P) LTD (E801-04-), PLOT NO. 8, SURVEY NO. 251/51, HAVLOCK ROAD CAMP, BELGAUM - 290010 PH 9588645387
- 392. SHANTESHA MOTOR (P) LTD (E801-03-), PLOT NO. 39, RS NO. 670, CTS NO. 1612/3, KHANAPUR ROAD, UDAYMBA, BELGAUM (SCREE SHOT ATTACHED) - 590006 PH: 3884433911.
- SHANTESHA MOTORS (P) LTD (E801-06-), PLOT NO. 21, RS NO. 29, KIADB INDUSTRIAL AREA, KIADB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010 PH. 9731396805.

BELLARY

894. K.P.F. PVT. LTD. (G201-01-), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101 PH: 9449876025.

BELTHANGADY

895. BHARATH AUTO CARS PVT. LTD. (4503-04-), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH: 9886543230.

BHADRAWATI

896. SHRUTI MOTORS (FB01-01+), SURVEY NO. 18/4, BH ROAD, KADADAKATTE HOBLI, KADADAKATTE, BHADRAVATI, SHIMOGA DIST., KARNATAKA - 577229 PH - 7809885414

BHATKAL

897. BHARATH AUTO CARS PVT. LTD. (CEF1-01-), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320 PH :9008693940.

BIDAR

- 898. LAHOTI MOTORS PVT. LTD (EX01-01-), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402 PH :8884412049.
- 899. LAHOTI MOTORS PVT. LTD (EX01-02-), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585 401 PH 9108707709

BIJAPUR

900. RNS MOTORS (7301-0I-), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109 PH :8861208998

BUDHIGERE

901. BIMAL (SGM1-01-), KHATTA NO:115,SY. NO. 128/33, MANDUR MAIN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOCL PETROL BUNK, BANGALORE EAST TALUK, BANGALORE, - 560049 PH : 97427565/28

BYNDOOR

902. ABHARAN MOTORS PVT LTD (BUH1-01-), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214 PH:7899751777.

CHALLAKERE

 SAKETH AUTOMOBILES (CKN1-01-). SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. -577522 PH. 9886550126.

CHAMARAJANAGAR

 MANDOVI MOTORS PVT LTD. (0E01-01-), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313
 PH. 9845445586.

CHANNAGIRI

905. SHRUTI MOTORS (BUQ1-01-), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213 PH. 7899334143.

CHANNAPATNA

906. KALYANI MOTORS PVT. LTD. (BSX1-01-). PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160 PH :9845066682.

CHANNARAYAPATNA

907. VENKAT MOTORS (HC01-01-), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116 PH:8147077144

CHICKBALLAPUR

 BIMAL AUTO AGENCY INDIA PVT. LTD. (KJ02-01-), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101 PH-9742262499.

CHICKMAGALUR

 SHRUTI MOTORS (B701-02-), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102 PH:9980157446.

CHIKODI

910. SHANTESHA MOTORS (E801-05-), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201 PH - 7829925790

CHINTAMANI

911. PRATHAM MOTORS PVT. LTD (205-06-), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125 PH : 7899761301.

CHITRADURGA

912. SAKETH AUTOMOBILES (AL01-01-), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA -572130 PH 9686550313

DAVANGERE

913. SHRUTI MOTORS (S101-01-), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004 PH: 9880401284.

DAVENGERE

914. SHRUTI MOTORS (\$101-02-), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001 PH -98R041/924

DEVANAHALLI

915. BIMAL AUTO AGENCY INDIA PVT. LTD. (WH01-01-), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: -562110 PH :9742262514.

DHARWAD

916. REVANKAR MOTORS PVT. LTD. (BIX1-01-), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001 PH -8861006707

DODDABALLAPUR

917. PRATHAM MOTORS PVT. LTD. (BUA1-01-), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDADAHALLI, KASABA HOBLI TALUK - DODDABALLAPUR, DISTRICT - BENGALURU RURAL. - 561203 PH 1986671687

GADAG

918. RNS MOTORS (7301-0E-), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG -582103 PH 9538925602

GANGAVATI

 MUNEER ENTERPRISES PVT. LTD. (N701-03-), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, - 583227 PH: 9449870754.

GAURIBIDANUR

920. MANDOVI MOTORS PVT LTD. (BUY1-01-), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210 PH :8217453513.

GOKAK

SHANTESHA MOTORS PVT. LTD. (IR01-01-), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307 PH :7829925760

GONIKOPPAL

922. MANDOVI MOTORS PVT LTD. (2501-07-), KAIKERY VILLAGE,GONIKOPPAL,, - 571213 PH :9900064873

GUDIBANDHA

923. BIMAL AUTO AGENCY INDIA PVT. LTD. (SGT1-01-), DOOR NO:160, 1ST WARD, OPP TO GOVERNMENT BUS STAND, BAGEPALLI ROAD, GUDIBANDA, CHICKABALLAPURA DISTRICT KARNATAKA - 561209 PH : 9742261903.

GUI BARGA

924. LAHOTI MOTORS PVT. LTD (E902-01-), LAHOTI GARDENS, NEAR KMF, HUMNABAD ROAD, GULBARGA - 585104 PH :9480825014.

 LAHOTI MOTORS PVT. LTD (E902-02-), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA. - 585104 PH :7619342035

GUNDLUPET

926. KALYANI MOTORS PVT. LTD (BPU2-01-), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111 PH -9686855799.

HAGARIBOMMANAHALLI

927. MUNEER ENTERPRISES PVT. LTD. (BUX1-01-), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212 PH :9481343007

HALIYAL

928. RNS MOTORS (SFM1-01-), SURVEY NO: 347P/27, DOOR NO:B1180/15 & B1180/16, HANUMAN COMPLEX, HALIYAL CIRCILE, MAIN ROAD, HALIYAL TOWN & TALUK, UTTARA KANNADA DISTRICT, KARNATAKA - 581329 PH: 32842/00200.

HARAHOLLI

929. SURAKSHA (SIH1-01-), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA, - 562112 PH :9449865608.

HASSAN

 VENKAT MOTORS (C802-01-), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN -573201 PH :9844044038.

HAVERI

 REVANKAR MOTORS PVT LTD (BBM1-01-), NEAR TMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110 PH : 7022016903.

H-CROSS

932. BIMAL AUTO AGENCY INDIA PVT. LTD. (CRQ1-01-). PART NO.1. SITE NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122 PH 9738948126.

HEBRI

933. ABHARAN MOTORS PVT LTD (BGD1-01-), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI, KARKALA, DIST.-UDUPI, KARNATAKA. - 576112 PH -9900077605

HEGGADADEVANA KOTE (H D KOTE)

934. KALYANI MOTORS PVT. LTD (CJC2-01-), SURVEY NO. 5/4, VILLAGE – YARAHALLI, KASABA HOBLI, TALUK – H.D.KOTE, DISTRICT – MYSORE. 571125 PH. 9886855799.

HESSARGHATA

935. BIMAL (SGN1-01-), SY NO 294/3, HESARAGHATTA VILLAGE YELAHANKA TALUK, BENGALURU,KARNATAKA - 560088 PH -9743658662

HOSDURGA

936. SAKETH AUTOMOBILES (BW01-01-), ASSESSMENT NO. 9310/6, PLOT NO. 6, HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST.-CHITRADURGA, KARNATAKA, - 577 527 PH. 7625088946.

HOSKOTE

37. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-05-), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.-BANGALORE - 562114 PH. 9742281726.

HOSPET

938. MUNEER ENTERPRISES PVT. LTD. (N701-01-), BELLARY ROAD, SANKLAPUR, HOSPET, - 583203 PH:7619505001.

HUBLI

 RNS MOTORS (7301-01-), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025 PH:9538965902.

 RNS MOTORS (7301-0F-), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030 PH :8861208532.

 REVANKAR MOTORS PVT. LTD. (7303-01-), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029 PH :8792008301

HUNSUR

942. KALYANI MOTORS PVT. LTD (GLI2-01-), M-18 & M-19, KSSIDC INDUSTRIAL ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE DISTRICT, KARNATAKA - 571105 PH - 7202669690

JEWARGI

943. LAHOTI (SLI1-01-), S NO: 125, PLOT NO:7, FILTER BED ROAD, OPP. BUS DEPOT, JEWARGI, KALABURGI DISTRICT (FORMERLY GULABARGA), KARNATAK-585310. - 585310 PH:9480825004.

KADABA

944. MANDOVI MOTORS PVT LTD. (BYE1-01-), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA -574221 PH 9740912365

KADUR

945. SHRUTI MOTORS (BOS1-01-), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548 PH:8904823736

KANAKAPURA

946. KALYANI MOTORS PVT. LTD. (BXY1-01-), SURVEY NO. 447/18, KASABA HOBIL, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. -562117 PH: 9900599933.

KARKALA

947. ABHARAN MOTORS PVT LTD (G601-03-), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104 PH :9880232666

KARWAR

948. BHARATH AUTO CARS PVT. LTD. (8J01-01-), SURVEY NO. 459/29, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. -581301 PH 78/29567400

KITTUR, BELGAUM

949. SHANTESHA (SF01-01-), PLOT NO. 219, KITTUR INDUSTRIAL AREA (KIADB), POONA BANGALORE HIGHWAY (NH-4),KITTUR TOWN AND TALUK, BELGAUM DISTRICT, - 591115 PH:9731396808.

KOLAR

950. MANDOVI MOTORS PVT LTD. (201-0F-), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101 PH:9740020734.

KOPPAL

 K.P.F. PVT. LTD. (ER01-01-), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238 PH :9449876027.

KRISHNARAJANAGARA (KRNAGARA)

952. KALYANI MOTORS PVT. LTD (SCQ2-01-), NO:D, DORNAHALLI,DODDEKOPPALU GRAMA PANCHAYAT,KASABA HOBLI, KRISHNARAJANAGARA, MYSORE DISTRICT,KARNATAKA - 571602 PH :8971159430.

KRISHNARAJAPET

953. MANDOVI MOTORS PVT LTD. (BMP1-01-), KHATA NO.3094, SY. NO.278, MYSORE CHENNERAYAPATHA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423 PH-9845130038

KUMTA

954. BHARATH AUTO CARS PVT. LTD. (AFA2-01-), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) -581334 PH -9448879530

KUNDAPUR

955. ABHARAN MOTORS PVT LTD (G601-02-), NH-17, THAKKATTE, KUNDAPURA - 272877 PH 9880197524

KUNIGAL

956. SAKETH AUTOMOBILES (VQ01-01-), NEAR KRS AGRAHARA,BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130 PH:9686550127.

KUSHAL NAGAR

 MANDOVI MOTORS PVT LTD. (VN01-01-), SY NO:88,MADAPATANA,KUSHAL NAGAR,SOMVARPUR,NORTH KODAGU, KARNATAKA - 571234 PH 9900080893

LINGASUGUR

958. MUNEER ENTERPRISES PVT. LTD. (BOQ1-01-), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA -584122 PH. 9480830255.

MADDUR

MANDOVI MOTORS PVT LTD. (BMK1-01-), SURVEY NO 802/2A4B, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN, MANDYA DISTRICT, KARNATAKA - 571428 PH :90080 31608.

MADIKERI

 KALYANI MOTORS PVT. LTD (QX02-01-), BASAPPA THEATURE BUILDING, DASAWAL ROAD,MADIKERI KODAGU DISTRICT. - 571201 PH: 9606073867.

MAGADI

961. PRATHAM MOTORS PVT. LTD. (BHX1-01-), SY NO:92/2, THIRUMALAI VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARANATAKA - 562120 PH :9900658483.

MANCHENAHALLI

962. VARUN MOTORS (SRU1-01-), NO:1219,GOLAPPA COMPUND, MAHESHWARI CIRCLE, MANCHENAHALLI, GOWIRBIDANUR TALUK, CHIKKABALLAPUR DIST, KARNATAKA- 561211 - 561211 PH :9513979162

MANDYA

963. MANDOVI MOTORS PVT LTD. (2501-06-), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, - 571401 PH :9611165873

MANGALORE

964. MANDOVI MOTORS PVT LTD. (4502-01-), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001 PH :9845107701

365. BHARATH AUTO CARS PVT. LTD. (4503-01-), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004 PH :9886785730.

66. MANDOVI MOTORS PVT LTD. (4502-03-), NO., HASSAN GROWTH CENTRE, ADYAR, N.H. -48, MANGALORE - 575007 PH 9845514146

967. MANDOVI MOTORS PVT LTD. (4502-07-), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008 PH 9880079235

968. BHARATH AUTO CARS PVT. LTD. (4503-06-), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD. BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002 PH :9886333030

969. MANDOVI MOTORS PVT LTD. (4502-08-), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575008 PH :9880278077.

 BHARATH AUTO CARS PVT. LTD. (4503-08-), S. NO. 1376/1-41, 1375/41-2-A1P1, 2A1P3, 1373/1-40, 1380/1-40-A2, KASABA BAZAR, KANDADAPALLI, KUDROLI, TALUK - MANGALORE, MANGALORE, KARNATAKA. - 575003 PH :9886785730.

MUDBIDRI

971. BHARATH AUTO CARS PVT. LTD. (4503-03-), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227 PH: 9886785430.

MUDHOL

972. VIJAY MOTOWINGS (ET01-01-), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587 313 PH -9806048173

MULKI

973. BHARATH AUTO CARS PVT. LTD. (4503-05-), BHARATH BEEDI COMPOUND, NH-17 MULKI -574154 PH: 9986020730.

MURUDESHWAR

974. RNS MOTORS (7301-02-), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350 PH 9538965969.

MYSORE

975. MANDOVI MOTORS PVT LTD. (2501-01-), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH:9945248860.

MANDOVI MOTORS PVT LTD. (2501-05-),
 NO.182/145/C, BANNUR ROAD, SIDHARTHA
 NAGAR, MYSORE, KARNATAKA - 570011
 PH :9845939936.

977. KALYANI MOTORS PVT. LTD (2503-01-), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008 PH:7259255558.

 MANDOVI MOTORS PVT LTD. (2501-08-), 217/2., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH :9845939937.

NAGAMANGALA

 MANDOVI MOTORS PYT LTD (SFK1-01-), SURVEY NO:3316/2327,VISHALAXAMMA COMPLEX, T B BADAVANE B M ROAD, NAGAMANGALA TOWN, MANDYA DISTRICT, KARNATAKA - 571432 PH : 9845132038.

NANJANGUD

 KALYANI MOTORS PVT. LTD (BYK2-01-), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT – MYSORE, KARNATAKA. - 571301 PH:9686855799.

NARASIMHARAJAPURA

 SHRUTI MOTORS (SPP1-01-), SURVEY NO # SURVEY NO.173/P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALU R DIST, KARNATAKA - 577134 PH : 3310187660.

NARAVI

982. MANDOVI MOTORS (SRS1-01-), SURVEY NO:122/181,DOOR NO:4/59,SHRI CHAITHANYA, ARASKATTE, NARAVI, BELTHANGADY TALUK, DAKSHINA KANNADA DIST, KARNATAKA-574109. - 574109 PH 9740392005

NELAMANGALA

983. RNS MOTORS LIMITED (BBH1-01-), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123 PH.7259875385.

NEI YADI

984. BHARATH AUTO CARS PVT. LTD. (BPF1-01-), SURVEY NO. 97/1P AND SURVEY NO. 97/ VILLAGE - HOSAMAJALU KAUKRADY, POST -NELYADI, TALUK - PUTTUR, DIST.-DAKSHIN KANNADA - 574229 PH 988670730.

CORGALIMPET

985. BIMAL AUTO AGENCY (SRJ1-01-), SITE NO:10, NEW KATHA NO: 251, ROBERTSONPET, KGF, OORGAUMPET, KOLAR DIST, KARNATAKA-563122 - 563122 PH 9513748707

PADUBIDRI

986. ABHARAN MOTORS PVT LTD (CSI1-01-), PLOT NO. 51/20, VILLAGE – PADUBETTU, PADUBIDRI TOWN, TALUKA & DISTRICT – UDUPI, KARNATAKA. - 574111 PH -9880232999.

PERESANDRA

987. BIIMAL AUTO AGENCY INDIA PVT. LTD (SMIJ-01-), SURVEY NO # NO.3 MO.313, SAMRUDDHI NILAYA GROUND FLOOR, NH7, ARURU VILLAGE, PERESANDRA, CHIKKABALLAPUR DISTRICT, KARNATAKA-562104 - 562104 PH 3860798820

PUTTUR

988. BHARATH AUTO CARS PVT. LTD. (4503-02-), NEAR RAIWAY STATION, HARADY, PUTTUR -517583 PH :9886072730.

RAICHUR

989. MUNEER ENTERPRISES PVT. LTD. (N701-02-), #12-10-64, GOUSHAL ROAD, SIYA TALAB AREA, RAICHUR - 584101 PH: 9480830264.

RAJANUKUNTE

990. VARUN MOTORS (SLE1-01-), SURVEY NO. 3/1, SITE NO. 6, SINGANAYAKANAHALLI, RAJANKUNTE, BANGALORE NORTH TALUK, BANGALORE URBAN, KARNATAKA - 560064 PH 9513879165

RAMANAGARAM

991. KALYANI MOTORS PVT. LTD. (211-02-), #K1318/2034C, OPP TO ROTARY HOSPITAL, BM ROAD, RAMNAGARAM - 571511 PH:9686689007

RANEBENNUR

992. REVANKAR MOTORS (BXV1-01-), SCHEDULE A-2, OPP. STJIT ENGINEERING COLLEGE, P B ROAD, RANEBENUR, KARNATAKA. - 581115 PH: 3830947883.

SAGAR

993. SHRUTI MOTORS (WF01-01-), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. -577401 PH -9740014703

SAKLESHPUR

994. VENKAT MOTORS (BPW1-01-), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT – HASSAN. - 573134 PH :7892809634

SARJAPURA

995. PRATHAM MOTORS PVT. LTD. (BSY1-01-). SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA – ANEKAL, SARJAPUR HOBLI, DISTRICT – BANGALORE URBAN, KARNATAKA. - 562125 PH - 77610862890

SHIMOGA

996. SHRUTI MOTORS (B701-01-), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201 PH :9880401283.

 SHRUTI MOTORS (B701-03-), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA. - 577204 PH 9886829239

998. SHRUTI MOTORS (B701-05-), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOGA. - 577201 PH :9986825115.

SIDDAPUR

BHARATH AUTO CARS PVT. LTD. (BPY1-01-), SURVEY NO. 211, NEAR IOCL PETROL BUNK, JOG ROAD, VILLAGE - HOSUR, TALIUK – SIDDAPUR, DISTRICT – UTTARA KANNADA. -581355 PH. 9449402730.

SIRISI

1000. RNS MOTORS LTD (MQ01-01-), SURVEY NO 43/B, LANDAKANALLI VILLAGE, DODNALLI GRAMA, SIRSI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402 PH :9895979023.

SIRSI

1001. RNS MOTORS (7301-0D-), K H B COLONY, SIRSI - 581402 PH 9538925606

SIRUGUPPA

1002. MUNEER ENTERPRISES PVT. LTD. (CTN1-01-), SITE NO:31C/18 & PLOT NO.1, BELLARY -SIRUGUPPA MAIN ROAD, SIRUGUPPA TALUK, BELLARY DISTRICT. - 583121 PH.7619505001.

SOMWARPET

1003. MANDOVI MOTORS PVT LTD, (CSG1-01-), SURVEY NO.130 SITUATED AT MADIKER! ROAD, NAGROOR VILLAGE, BALAGUNDA POST, SOWMARPET TALUK, NORTH KODAGU DISTT. -571236 PH :9845115665

SRINIVASAPURA

1004. SURAKSHAA CAR CARE PYT. LTD. (BUR1-01-), SY NO. 40, VPRD NO. 86, PROPERTY NO. 84 & 87, CHALDIGANA HALLI (GRAMA PANCHAYATH, PANNASAMAKANA HALLI (VILLAGE, SRINIVASAPURA POST & TALUK, DIST.-KOLAR, KARNATAKA - 563 135 PH :949865601.

SULLIYA

1005. MANDOVI MOTORS PVT LTD. (4502-04-), ODABAI SULLIA,MANGALORE MYSORE ROAD,KARNATAKA - 574239 PH :9900002325

SURATHKAL

1006. MANDOVI MOTORS PVT LTD. (4502-02-), KANA ROAD, SURATHKAL - 574158 PH :9845514143.

T. NARASIPURA

1007. MANDOVI MOTORS (SFL1-01-), KHATA NO.472/473/474, OPP TO SRI RAGHAVENDRA SWAMY MUTT, CHAMRALAJANGAR ROAD, T. NARASIPURA TOWN, MYSORE DISTRICT, KARNATAKA - 571124 PH : 9845132038.

TEKAL

1008. PRATHAM MOTORS PVT. LTD. (SUE1-01-). SURVEY NO: 12, NEAR NANJUNDESHWARA PETROL BUNK, MALUR ROAD, K G HALLI, TEKAL HOBLI, KOLAR DIST., KARNATAKA-653137 - 563137 PH: 9900058466.

THIRTHAHALLI

1009. SHRUTI MOTORS (BQR1-01-), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI . - 577432 PH : 7795851011.

THOKOTU

1010. BHARATH AUTO CARS PVT. LTD. (QW01-01-), NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA KANNADA DISTT. - 575017 PH -9538796330

TIPTUR

1011. SAKETH AUTOMOBILES (H101-03-), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA - 572201 PH 9945301023

TUMKUR

1012. SAKETH AUTOMOBILES (H101-01-), SIRA ROAD, TUMKUR - 572106 PH 9686550323

UDUPI

1013. ABHARAN MOTORS PVT LTD (G601-01-), N.H. 17, NITTUR, UDUPI - 576103 PH:9880232999.

1014. ABHARAN MOTORS PVT LTD (G601-05-), NO. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI. -576101 PH: 9886694341.

UJIRE

1015. BHARATH AUTO CARS PVT. LTD. (BWT1-01-). SURVEY NO.237-2B1, MANGALORE-CHARMADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKA, DISTT. DAKSHINA KANNADA, KARNATAKA. - 574240 PH 1986176130

UPPINANGADI

1016. MANDOVI MOTORS PVT LTD. (4502-05-), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH:9740912365.

VIJAYPURA

1017. BIMAL AUTO AGENCY (BTZ1-01-), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA. - 562135 PH :8884433996.

VITTAL

1018. MANDOVI MOTORS PVT LTD. (CCE1-01-), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA – BANTWAL, DISTRICT – DAKSHIN KANNADA - 574243 PH :9008810123.

YADGIR

1019. LAHOTI MOTORS (SFP1-01-), SURVEY NO. 101/1, GULSARAM VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA PH: 9480825031.

YELLAPUR

1020. REVANKAR MOTORS PVT. LTD (CUR1-01-), PLOT NO. 4 A1A1A1 GR 5, UDYAM NAGAR, YELLAPUR POST, BALGIMANI, HUBILANKOLA, YELLAPUR TOWN, UTTARA KANNADA DIST., KARNATAKA. - 581359 PH :7090772121.

KERALA

ADOOR

- 1021. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0A-), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH :9745998303.
- 1022. AVG MOTORS LTD. (Y501-02-), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523 PH :9446355900.

ALANALLUR

1023. KVR AUTOCARS PVT LTD (CIWI-01-), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST – ALANALLUR, TALUKA – MANNARKAD, DISTRICT - PALAKKAD, KERALA. -678601 PH 9747020582

ALATHIYOOR

1024. A M MOTORS (E601-11-), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE -ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA -TIRUR, DIST.-MALAPPURAM, KERALA. - 676102 PH:9895940000, 9072998833.

ALATHUR

1025. BRD CAR WORLD LIMITED (BRW1-01-), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682 PH 9745634999

ALLEPPY

1026. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-12-), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002. -699002 PH: 9745977744.

ALLEPY

1027. POPULAR VEHCILES (ES02-01-), BUILDING NO. XVIII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZHA, KERALA-688011. - 688011 PH-9778699161. 1028. BRD CAR WORLD LIMITED (A404-09-), RE SURVEY NO.330/7, NH-47, KUNNUMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102 PH -9745907100

ANCHAL

- 1029. SARATHY AUTO CARS (BQT1-01-), SURVEY NO. 371/9, VILLAGE – IDAMULAKKAL, P.O. – ANCHAL, TALUK – PUNALUR, DISTRICT – KOLLAM. 691306 PH :9826906665.
- 1030. POPULAR VEHICLE (1601-14-), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KAITHADY JUNCTION, ANCHAL, KERALA - 691306 PH 9778688200

ANGAMALY

- 1031. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0F-), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572 PH : 9745998434
- 1032. POPULAR VEHICLES & SERVICES LTD. (2701-0D-), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD, ANGAMALY - 683572 PH: 8086078886.

ATTINGAL

- 1033. POPULAR VEHICLES & SERVICES LTD. (1601-07-), PALAMKONAM, PERUNKULAM,VIA-ALAMCODE, ATTINGAL-695102 PH-8086078788
- 1034. SARATHY AUTODRIVES PVT LTD (SX05-01-). SURVEY NO. 2952/17 & 2952/4, KIZHUVILLAM VILLAGE, ATTINGAL, CHARAVINKEEZHU TALUK, TRIVANDRUM DIST., KERALA. - 695 104 PH :9326052765.
- 1035. INDUS MOTOR COMPANY PRIVATE LIMITED (SX01-01-), SY. NO. 54/13, 14, 15, 16, (OLD SY. NO. 22, 22/13, 16), IN BLOCK NO. 3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. 695104
 PH 9747550888

BALARAMAPURAM

1036. POPULAR VEHICLES & SERVICES LTD. (1601-11-), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501 PH :8943345922.

BHARANIKAVU

1037. SARATHY AUTO CARS (BQU1-01-), URVEY NO. 116/2 OF 4, SASTHAMKOTTA VILLAGE, BHARANIKAVU TOWN, KUNNATHOOR TALUK, KOLLAM DISTRICT. KERALA, PIN-690520 -690520 PH 79948/25665

CALICUT

- 1038. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-01-), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011 PH :9745998019.
- 1039. POPULAR VEHICLES & SERVICES LTD. (4702-02-), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016 PH -9846398613.
- 1040. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-06-), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT-673005 PH: 9745998020.
- 1041. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-08-), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655 PH : 9745998018
- 1042. POPULAR VEHICLES & SERVICES LTD. (4702-07-), NH-17 BYE PASS, PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT -673009 PH 9288012082.
- 1043. BIMAL AUTO AGENCY INDIA PVT LTD (4706-01-), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH – CHERUVANNUR, P.O. – NALLAM, CALICUT (KOZHIKODE), KERALA. -673027 PH 750298888 7594997888

CHALAKUDY

- 1044. BRD CAR WORLD LIMITED (ZJ02-01-), MURINGOOR P.O., CHALAKUDY - 680316 PH:9645176999.
- 1045. INDUS MOTOR COMPANY PRIVATE LIMITED (Z030-1-), SURVEY NO. 531, 532 & 551, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALLIKA CHALAKKUDY, DISTT. THRISSUR, PIN-680307, KERALA 680307 PH : 9747557355.

CHALAKUDY/ CHILLAKUDDY/ THRISSUR

1046. POPULAR VEHICLES & SERVICES LTD. (2701-0C-), OPPSITE CCMK HOSPITAL, VELLIKULAM ROAD, CHALAKUDY, KERALA-680307 PH :9072609600.

CHANGANASSERY

1047. INDUS MOTORS (CNZ1-01-), BUILDING NO. 4/11, BLOCK NO. 4, RE-SURVEY NO. 224/1, VAZHAPPALLI WEST VILLAGE, CHANGANASSERY TOWN & TALUK, KOTTAYAM DIST., KERALA - 686103 PH 977R899357

CHANGARAMKULAM

1048. A M MOTORS (VH01-01-), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585 PH :9895756008.

CHAVAKKAD

- 1049. BRD CAR WORLD LIMITED (A404-06-), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512 PH :9645963999.
- 1050. SAI SERVICE PRIVATE LIMITED (0J02-01-), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK – GURUVAYUR, CHAVAKKAD.) - 680506 PH: 9495883852.

CHENGANNUR

- 1051. SARATHY AUTO CARS (C701-06-), PRAVUMKOOD, THIRUVANVANDOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST)-689124 PH :9447002647
- 1052. SAI SERVICE (UL03-01-), SURVEY NO. 276/2,11,13,13-2-2, NEAR BPCL PUMP AND SURVEY NO. 276/12, M C ROAD, NEAR LABHAM MAVELI STORE, CHENGANNUR PO & MUNICIPAL, CHENGANUUR VILL & TALUK, ALAPUZHA DIST., KERALA-689121 - 689121 PH 9288074270

CHERPULASSERY

1053. KVR AUTOCARS PVT LTD (NB01-01-), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE – CHERUPPALASSERY, TALUK – OTTAPPALAM, DISTRICT – PALAKKAD - 679503 PH :9747020582, 280100.

CHERTHALA

- 1054. INDUS MOTOR COMPANY PRIVATE LIMITED (VL03-01-), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKKUZHI, CHERTHALA, ALAPPUZHA-DIST. - 688552 PH:9745997633.
- 1055. POPULAR VEHICLES & SERVICES PVT. LTD. (VLO-01-), RE-SURVEY NO.150/2-1,147/3, BUILDING NO.KP-18/80, N.H. KANJIKUZHI VILLAGE, CHERTHALA, ALAPPUZHA DISTT., -685582 PH :9072530127.

CHINGAVANAM

1056. POPULAR (1602-01-), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531 PH-9778690817.

CHITTUR

1057. INDUS MOTOR COMPANY PRIVATE LIMITED (BOX1-01-), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLIYAVALLAMPPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555 PH :9745991560.

CHULLIMANOOR

1058. POPULAR VEHICLES (1601-16-), RE-SURVEY NO. 43/7, VILLAGE-ANAND, CHULLIMANOOR TOWN, TALUKA-NEDUMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541 PH: 9778690745.

COCHIN

- 1059. POPULAR VEHICLES & SERVICES LTD. (2701-01-), PERANDOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025 PH :9846017725.
- 1060. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-02-), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015 PH: 9745988040.
- 1061. SAI SERVICE PRIVATE LIMITED (2705-01-), 50/1 15L., CHERANALLOOR ROAD, EDAPPALLY, COCHIN - 682024 PH 9645106339
- 1062. SAI SERVICE PRIVATE LIMITED (2705-02-), NH-47, PATHADIPALAM, EDAPPALLY, COCHIN -682024 PH 3645105057.
- 1063. POPULAR VEHICLES & SERVICES LTD. (2701-04-), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018 PH -9846298618
- 1064. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-09-), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN, - 682030 PH - 9745998013
- 1065. SAI SERVICE PRIVATE LIMITED (2705-08-), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) -682040 PH: 8129496818.
- 1066. GEORGE MAJJO AUTOMOBILES PVT. LTD. (2709-01-), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104 PH :755997864 4237700

- 1067. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0L-), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHIYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301 PH. 9745992070.
- 1068. GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-02-), PLOT NO.2/316, NH-47, MARADU VILLAGE, KANNDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001 PH.7994763336.

EDAPPAL

1069. POPULAR VEHICLES & SERVICES LTD. (4702-05-), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH :9946104880.

EDAVANNAPPARA

1070. POPULAR VEHICLES (GKP1-01-), SURVEY NO. 77/16-1 & 77/2-4, BUILDING NO. 18/152-B, CHEEKODE VILLAGE, EDAVANNAPARA KONDOTTY ROAD, CHERUVAYOOR PO, MALLAPPURAM DISTRICT, KERALA-673645 - 673645 PH :9639007323.

FORT KOCHI

1071. SAI SERVICE PRIVATE LIMITED (BRS1-01-), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005 PH :9645106330.

GURUVAYUR

1072. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-08-), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH :9745998015.

IRINJALAKUDA

1073. BRD CAR WORLD LIMITED (A404-05-), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH :9539006999.

IRITTY

1074. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-02-), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRITTY, KANNUR, KERALA -670703 PH: 9747554929.

IRITY

1075. POPULAR VEHICLE (VJ02-01-), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRITTY MUNICIPAL, KANNUR DIST. KERALA. - 670703 PH. 790743741

KAIPAMANGALAM

1076. SAI SERVICE PRIVATE LIMITED (2705-07-), VAZHIYAMBALAM PO, KAIPAMANGALAM,THRISSURE - 680681 PH :8129496846.

KALAMASSERY/ ERNAKULAM/ COCHIN

1077. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-07-), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106 PH - 9745098012

KALLAMBALAM

1078. POPULAR (02/02-01-), BUILDING NO. 5/472, NH-47, KADUVAPALLY, THOTTAKAD P.O, KALLAMBALAM, TRIVANDRUM DIST., KERALA-695605 PH. 8086078788.

KALPETA

- 1079. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0C-), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591 PH :9745998592.
- 1080. KVR (LE02-C1-), BUILDING NOS. 363, 364, 365, 366, 367, 368 AND 369 CONSTRUCTED ON THE PLOT COMPRISED IN RESURVEY NOS. 7196, 722/3, 722/27, 722/6, 722/6, 722/10, 722/21, SITUATED AT MUTTIL NORTH VILLAGE. VYTHIRI TALUK, KALPETTA SUB-DISTRICT, WAYANAD DISTRICT, KERALA. 673 122 PH. 9747021902.

KANHAGAD

- 1081. KVR CARS (3L01-02-), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315 PH :9605040999
- 1082. POPULAR VEHICLES & SERVICES LTD. (4702-06-), HIGHWAY JUNCTION,KANHANGAD SOUTH P.O.,KANHANGAD - 689641 PH: 9946104685.

KANHANGAD

1083. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0F-), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541 PH. 9745998024.

KANJIRAPALLY

- 1084. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-02-), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O., KANJIRAPALLY -686506 PH :9745998009.
- 1085. AVG MOTORS LTD. (9Y03-01-), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT.,KERALA - 686512 PH :8606071155.

KANNUR

- 1086. HAR CARS (K101-01-), HAR AVENUE, KANNOTHUMCHAL, CHOVVA POST, KANNUR -670006 PH :9539009480.
- 1087. HAR CARS (K101-03-), POTTIAN SHEKHARAN ROAD, MAKKANY , SOUTH BAZAR, KANNUR -670002
- PH:9539009443.

 1088. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0E). BALANKINAR JN., KATTAMPALLY.P.O, KANNUR 690011 PH:9745998023.
- 1089. KVR CARS (3L01-04-), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIVATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011 PH :9656034333.
- 1090. POPULAR VEHICLES & SERVICES LTD. (4702-0F.), PLOT NO. 82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOVVA (PO), KANNUR - 670018 PH :9846062796.

KARIKKAD

1091. BRD CAR WORLD LIMITED (A404-02-), BRD INDUSTRIAL ESTATE, KARIKKAD, KUNNAMKULAM - 680519 PH: 9995804599.

KARUNAGAPALLY

- 1092. SARATHY AUTO CARS (C701-05-), K.S. PURAM, NEELIKULAM, KARUNAGAPPALLY, KOLLAM, - 690544 PH: 9526691565.
- 1093. INDUS MOTOR COMPANY PRIVATE LIMITED (A003-01-), SY NO.243/1, 243/10, 243/16, 243/14, 243/15, 223/16, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583 PH: 9745989006.
- 1094. SARATHY (C701-11-), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA. 690 562 PH .9526691565.

KASARGOD

- 1095. KVR CARS (3L01-01-), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123 PH:9747021206.
- 1096. POPULAR VEHICLES & SERVICES LTD. (4702-0D-), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH :9946104621.
- 1097. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-03-), 18/304A & 18/304B, SY, NO. 39/3B, RE SY, NO. 57/6,MOGRAL, MANJESHWAR TALUK, KASARAGOD, KERALA - 671541 PH: 9747550747.

KATTAPANA

- 1098. INDUS MOTOR COMPANY PRIVATE LIMITED (ZNO1-O1-) KATTAPPANA-IDLIKKI KAVALA BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.) -685508 PH -9746743460
- 1099. POPULAR VEHICLES (ZN02-01-). RE-SURVEY NO. 81/3, VILLAGE & TOWN - KATTAPPANA. TALUK & DIST.-IDUKKI, KERALA, - 685 515 PH:9746818407

KAYAMKULAM

- 1100. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-05-), KARIYILAKULANGARA, KAYANKUI AM P.O. AI APPUZHA DISTT. -690572 PH -9745998005
- 1101 POPULAR VEHICLES & SERVICES LTD. (B802-03-), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. -PH:9946105601

KODUNGALLUR

- 1102. SAI SERVICE PRIVATE LIMITED (2705-03-). NH-17 T K S PURAM KODUNGALI OOR - 680667 PH:9645106571
- 1103. INDUS MOTOR COMPANY PRIVATE LIMITED (8K02-01-), RE-SURVEY NO. 116/1-6, 116/2-5, BUILDING NO. 560/A WARD NO. VII. AAI A VILLAGE. (OLD VILLAGE-SREENARAYANAPURAM) KODUNGALLUR TALUK, MADHILAKOM SRO. SANTHIPURAM PO. THRISSUR DIST., KERALA -680 008 PH:9747513444.

KODUVALLY

1104. A M MOTORS (BGX1-01-), SURVEY NO:91/9. 91/10 NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572 PH:9895979023.

KOLANCHERRY

1105. SAI SERVICE (SJO1-01-), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERY TOWN, NH-85, AIKARANADU NORTH VILL. KUNNATHUNADU TALUK, FRNAKULAM DIST. KERALA-682311 - 682311 PH:7356605955.

- 1106. SARATHY AUTO CARS (C701-01-), NH-47 BYE PASS, AYATHIL (P.O.), QUILON - 691017 PH:9744552265
- 1107. POPULAR VEHICLES & SERVICES LTD. (1601-04-). H & C COMPOUND, MUNDDACKAL. KOLLAM - 680006 PH:7594977550
- 1108. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-03-), OLD SARATHY THEATRE. PUNALOOR ROAD, KOLLAM - 691005 PH:9745998004.

1109. SARATHY AUTO CARS (C701-13-), SURVEY NO. 431/13-42 NEAR SN PUBLIC SCHOOL VADAKKEVII A. AYATHII.. KILLIKLI OOR PO. PUNTHALATHAZHAM-PALATHARA ROAD. KOLLAM, KERALA - 691004 PH:8606430765

KOLLAM/ OLIII ON

- 1110. SARATHY AUTO CARS (C701-08-), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, UMAYANALLUR SIDCO INDUSTRIAL ESTATE, KOLLAM - 691589 PH:9947127565.
- 1111. SARATHY AUTO CARS (C701-12-), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE. KOTTIYAM PO. KOLLAM DIST., KERALA, -691571 PH:9847936165.

KONDOTTY

1112. INDUS MOTOR COMPANY PRIVATE LIMITED (ID02-01-), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA. MAI APURAM DISTRICT, KERALA - 683573 PH:9746743178

KOOTHATTUKULAM

1113 SALSERVICE PRIVATE LIMITED (VM01-01-) EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL KOOTHATHUKULAM P.O., ERNAKULAM DT. -686662 PH:9645106258

KOPPAM

1114. AM MOTORS (CUU1-01-), SURVEY NOS: 331/3-6. 331/3-10, NEAR SALAFIYYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309 PH:9048666635

KOTHAMANGALAM

- 1115. POPULAR VEHICLES & SERVICES LTD. (2701-0B-), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA - 686691 PH:9846027990.
- 1116. INDUS MOTOR COMPANY PRIVATE LIMITED (7F01-03-). PALAKKADAN BUILDING.CHANKLAM.KOTHAMANGALAM -

KOTTAKKAL

PH:9745998479

1117. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-09-), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST. - 676503. PH:9745998017.

1118. POPULAR VEHICLES & SERVICES LTD. (4702-03-) NH-17 CHANDAPARAMRU RANBATHANI P.O. MAI APPURAM KOTTAKAI -676510 PH -9946104631

KOTTARAKARA

1119 POPULAR (\$801-02-), BUILDING NO. MP/20/749,20/426, 20/748, INCHAKADU, KALAYAPURAM VILLAGE, MYLOM PANCHAYATH, KOTTARAKKARA TAI UKA KOLLAM DISTRICT, KERALA- 691560 - 691560 PH:8086073466.

KOTTARKKARA

- 1120. POPULAR VEHICLES & SERVICES LTD. (\$801-01-), MYLOM, MC ROAD. KOTTARAKKARA, DISTT-KOLLAM, KERELA -691531 PH:8086073466.
- 1121. SARATHY AUTO CARS (S802-01-), WARD NO.40. MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM KOTTARKARA DISTT. KOLLAM (KERALA) - 691531 PH:9847423365
- 1122. INDUS MOTOR COMPANY PRIVATE LIMITED (S804-01-), RE SURVEY NO.207/3-2. KIZHAKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., - 691531 PH:9747562299
- 1123. INDUS MOTOR COMPANY PRIVATE LIMITED (S804-02-), RE-SURVEY NO.141/3-4,142/1-2,15-16,143/1-2,143/2,143/15-2,1 43/15-2-2, BEARING NOS. 25/36 & 38. KOTTARAKKARA VILLAGE, KOTTARAKKARA TALUK, KOLLAM DISTRICT, KERALA- 691506 -691506 PH -9747562299

KOTTAYAM

- 1124. AVG MOTORS LTD. (B801-01-). FRAYII KADAVU. KOTTAYAM - 686001 PH :7510982222
- 1125 INDUS MOTOR COMPANY PRIVATE LIMITED (2702-04-) MUI ANKUZHA JN. NATTAKOM P.O. KOTTAYAM . KERALA - 686013 PH:9745998148.
- 1126. POPULAR VEHICLES & SERVICES LTD. (B802-01-), NEAR ST, THOMAS CHURCH, S.H. MOUNT, P.O, KOTTAYAM - 686006 PH:8086073454
- 1127. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0C-), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM - 686013 PH:9745998007.

KOZHENCHERRY

1128. AVG MOTORS LTD. (W801-03-). KOZHENCHERRY COLLEGE JUNCTION DISTRICT- PATHANAMTHITTA - 689641 PH:9446092995.

KUNNAMKULAM

1129. POPULAR VEHICLES & SERVICES LTD. (2701-07-), CHOONDAL TRISSUR ROAD. KUNNAMKULAM, TRISSUR DIST - 680502 PH -9946105695

LAKKIDI PERUR

1130. A M MOTORS (CFR1-01-), 217/7, 217/2, 278/2. 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT, PALAKKAD, - 679302 PH:8086305555

MALAPURAM

1131. A M MOTORS (E601-01-), VARANGODE. DOWNHILL, MALAPURAM, - 676519 PH 9895705325

MALLAPALLY

1132. INDUS MOTOR COMPANY PRIVATE LIMITED (I201-01-), THOPPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585 PH:9747541400.

MANATHAVADY

1133. INDUS MOTOR COMPANY PRIVATE LIMITED (IE02-01-). SURVEY NO. 1/2A1. A1. B1. RY 1/210. 1/99. MYSORE ROAD, CHETTAPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA - 670645 PH:9745997002.

MANJERI

- 1134. A M MOTORS (E601-05-), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA -676121 PH:9895756035
- 1135. KVR AUTOCARS PVT LTD (8V02-01-). CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123 PH:9747020801
- 1136. POPULAR VEHICLES & SERVICES LTD. (4702-0E-), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERALA) -676121 PH:8589992406.

MANNARKAD

- 1137. A M MOTORS (E601-07-), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582 PH:9895979048
- 1138. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0K-), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZHA-PO, MANNARKAD KERALA -678583 PH -9745995946

MAVELIKARA

- 1139. POPULAR VEHICLES & SERVICES LTD.
 (B802-92-), KONNAYIL SUVAKO INDUSTRIAL
 COMPLEX, SHED A-1., KOLLAKADAVU
 INDUSTRIAL ESTATE, KOCHAL MOODU,
 KALLIMEL P-O., MAVELIKKARA, KERALA690570
 PH :9400052338.
- 1140. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-07-), NEAR PRATHIBA THEATRE, PUTTHIYAKAVU, MAVELIKKARA - 690101 PH:9745998137.

MAVELIKARRA

1141. POPULAR VEHICLES (B802-10-), BUILDING NO. 10/115-A, WARD NO. 10, CHENNITHALA VILL. AND TOWN, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA TALUK, ALAPPUZHA DIST., KERALA-690104. - 690104 PH 9778690833

MORAYUR

1142. A M MOTORS (CUJ1-01-), SURVEY NO. 328/1, VILLAGE – MORAYUR, VALENCHERY, DISTRICT – MALAPPURAM, KERALA. - 673642 PH: 8086526666

MUVATTUPUZHA

- 1143. INDUS MOTOR COMPANY PRIVATE LIMITED (7601-01-), NH-49, MUVATUPUZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPUZHA, ERNAKULAM DIST - 686661 PH: 97459998011.
- 1144. POPULAR VEHICLES & SERVICES LTD. (2708-02-), MUTHUKALLU JUNCTION, PERUMPALLUR P.O., MUVATTUPUZHA, KERALA - 686673 PH : 7356988840

NEDUMANGAD

1145. POPULAR VEHICLES & SERVICES LTD. (2001-01-), RE-SURVEY NO.- 855/29, 855/14/1 (OLD SURVEY NO. 1583/1), KARIPPUR VILLAGE, NEDUMANGAD TALUK, TRIVANDRUM DIST., KERALA-695541. - 695541 PH: 9846036696.

NEYYANTTINKARA

1146. INDUS MOTOR COMPANY PRIVATE LIMITED (AT01-01-), INDUS MOTOR CO. PVT. LTD., OLD M. V THEATRE, NEAR KSRTC BUS STATION, NEYYATINKARA, DIST. TRIVANDRUM - 695121 PH: 9747544500.

NEYYATTINKARA

1147. POPULAR VEHICLES (1861-15-), BUILDING NO. 11/562, KPALS-48, NH 47, KOTTAMOM, KOLLAYIL PANCHAYAT, PANVEL - KOCHI-KANYAKUMARI HIGHWAY, KOTTAMOM, NEYYATTINKARA, TRIVANDRUM, KERALA-695122 - 695122 PH 9946104602

NILAMBUR

- 1148. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0A-), MINERVA JUNCTION, NILAMBUR, KERALA - 679329 PH:9745998396.
- 1149. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0D-), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329 PH -9745988396
- 1150. POPULAR VEHICLES & SERVICES (AF02-01-), RE-SURVEY NO: 6/1 BLOCK NO. 76, CHEMMARAN, NADUVATH PO, WANDOOR ROAD, NILAMBUR, MALAPPURAM DIST., KERALA - 679328 PH: 7736049999

NILAMEL

- 1151. INDUS MOTOR COMPANY PRIVATE LIMITED (DA02-01-), SURVEY. NO. 195/10, 195/3-1-2, 195/3-2-1, 195/8, 195/14, 195/9-1, 195/11-1, BLOCK NO. 32, ATTINGAL MUNCIPALITY, PAZHAYAKUNNAMEL VILLAGE, CHIRAYINKIL TALIK, (BORDER OF NILAMEL TOWN), TRIVANDRUM DIST., KERALA 695601 PH : 9745993331.
- 1152. POPULAR (DA03-01-), BUILDING NO. 10/279 TO 288, M. C. ROAD, KANNANCODU, NILAMEL PO, KOLLAM (DIST.), KERALA- 691535 691535 PH : 8714606483

OTTAPALAM

1153. INDUS MOTOR COMPANY PRIVATE LIMITED (PA01-01-), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA - 679101 PH 9747544454

PALA

PALAKKAD

- 1154. POPULAR VEHICLES & SERVICES LTD. (B802-04-), 12TH MILE,PALA-PONKUNNAM ROAD,PALA - 686575 PH :9072609475
- 1155. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-05-), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574 PH : 9745998878.
- 1156. AVG MOTORS LTD. (GNO3-01-), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651 PH '9447137246
- 1157. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-07-), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT 666564 PH :9747516934.

1158. POPULAR VEHICLES & SERVICES LTD. (2701-09-), OPP. PALANA HOSPITAL,KODUVAYOOR ROAD,KINASSERY P.O. PALAKKAD - 678707

- PH:9946105613.

 1159. INDUS MOTOR COMPANY PRIVATE LIMITED
 (2702-0G-), VADAKKUMURI-NH-47, KANNADI,
 KUZHAL MAMMAM (P.O.), PALAKKAD. 678701
- PH: 9745998590.

 1160. INDUS MOTOR COMPANY PRIVATE LIMITED
 (Y202-01-), DOOR NO: 5/366 & 367, NH 47,
 KOOTUPATHA, CHANDRANAGAR POST,
 PALAKKAD 678007
 PH: 9747519500.

PANDIKKAD

1161. AM MOTORS (CUV1-01-), SURVEY NOS: 333/2-2, 333/3-2, CHOORAKKAVU, PERINTHALMANNA ROAD, NEAR INDIAN OIL PETROL PUMP, PANDIKKAD TOWN & POST, MALAPPURAM DISTRICT, KERALA - 676 521 PH: 953999570.

PARAPPANANGADI

1162. A M MOTORS (CTK1-01-), SURVEY NO.66/6, 66/7, KODAPPADI, POST-CHETTIPPADY, PARPANGADI, MALAPPURAM. - 676319 PH :9895900466.

PARAVUR

1163. POPULAR VEHICLES & SERVICES LTD.
(ZS01-01-), SURVEY NO. 340/1-76,7778, NEAR
HP PETROL PUMP, PARAVUR-MANJALI MAIN
ROAD, MANNAM PO, NORTH PARAVUR
MUNICIPAL, ERNAKULAM DIST. 683520,
KERALA. - 683520
PH : 9072609638

PATHANAMTHITTA

- 1164. AVG MOTORS LTD. (W801-02-), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671 PH 9446002987
- 1165. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-13-), KUMBAZHA, PATHANAMTHITTA -689653 PH :9745998008.
- 1166. POPULAR VEHICLES & SERVICES LTD. (B802-05-), T.K. ROAD, NEAR COLLECTORATE,PATHANAMTHITTA - 689645 PH 9539009734
- 1167. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-12-), SURVEY NO. 11-131/2(1), KARIMPANKUZHY ROAD, NEAR SAROJ GAS AGENCY, MAKKANKUNNU, PATHANAMTHITTA, KERALA 689645 PH :9745999858.

PATHIRAPALLY

1168. POPULAR VEHICLES & SERVICES LTD (E502-02-). BUILDING NO. X/832 TO 834, X/837 TO 838, OPP. UDAYA STUDIO, PATHIRAPALLY TOWN, AMBALAPUZHA TALUK, NH-47, ALAPPUZHA DIST., KERALA-688521. - 688521 PH 9778693160

PATTAMBI

- 1169. A M MOTORS (E601-04-), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306 PH:9567866059.
- 1170. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0B-), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303 PH : 9745998295.
- 1171. A M MOTORS (E601-09-), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA -679306 PH 9567866059

PAYANNUR

1172. POPULAR VEHICLES & SERVICES LTD. (4702-04-), N H 17,,EZHILODE P O, ,,PAYYANUR - 670309

PH:9946104701.

1173. POPULAR VEHICLES & SERVICES LTD.
(9201-01-), SY. NO. 218/1, CHERUTHAZHAM
VILLAGE, EZHILODE (NEAR COLONY BUS
STOP), PAYANNUR-KANNUR NH, PAYANNUR
TALUK, KANNUR DISTRICT, KERALA – 670 309.
PH. 19946104701.

PAYYANUR

1174. INDUS MOTOR COMPANY PVT. LTD. (9202-01-), SURVEY NO.-299/117, 290/105, KARIVELLUR PERALAM GRAM PANCHAYAT (NEAR PALATHARA BRIDGE), PAYYANUR TALUK, KANNUR DISTRICT, KERALA- PIN-670521. -670521 PH: 9745998204.

PERINTHALMANNA

- 1175. A M MOTORS (E601-03-), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322 PH:8129818235.
- 1176. KVR AUTOCARS PVT LTD (7H01-01-), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351 PH :97470/20573.
- 1177. KVR AUTOCARS PVT LTD (7H01-06-), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322 PH:9747020837.

PERUMBAVOOR

1178. SAI SERVICE PRIVATE LIMITED (2705-04-), M.C. ROAD, PERUMBAVOOR, ERNAKULAM DIST, KERALA - 683542 PH: 7034258335.

1179. INDUS MOTOR COMPANY PRIVATE LIMITED (8W03-01-), SURVEY NO. 122-3, 723-3, TALIK - KUNNATHUNADU, VILLAGE - RAYMANGALAM, SUB DIST.-PERUMBAVOOR, DIST.ERNAKULAM. - 683 541
PH 9747591803

PIROVAM

1180. SAI SERVICE (BQW1-01-), SUVEY NO. 788/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN 8 MUNICIPALITY, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA. - 686 664 PH : 9645106198

POINACHI

1181. KVR CARS (3L01-03-), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH :9747021026.

PUNALUR

- 1182. SARATHY AUTO CARS (C701-03-), NH-208, Q.S. ROAD, ELAMPAL POST, PUNALUR, KOLLAM DIST - 691322 PH :9744400265.
- 1183. INDUS MOTOR COMPANY PRIVATE LIMITED (8002-01), SV. NO. 48/1/42, OLD, SY. NO. 231/4/324 (OLD RAMRA J TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD. 691 305 PH : 9747838885.

QUILANDY

1184. INDUS MOTOR COMPANY PRIVATE LIMITED (3001-01-), BUILDING NO.13/53 A, CHENGOTHUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306 PH :9745997875.

RAMANATTUKKARA

1185. A M MOTORS (E601-06-), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632 PH :9567866144.

RANNI

1186. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-06-), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH: 9745998737.

SASTHAMKOTTAH

1187. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-09-), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM – , KERALA -690520 PH 9745998849

SHORNUR

1188. POPULAR VEHICLES & SERVICES LTD. (2701-0E-), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH :9889009243?

SULTHAN BATHERY

1189. POPULAR VEHICLES (VK01-01-), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA - 673 591 PH :7594977551.

TAI IPARAMBA

1190. HAR CARS (K101-02-), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141 PH :9539009473

THALASSERRY

1191. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-01-), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH :9745998022.

THALASSERY/ TELLICHERRY

1192. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-04-), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY, KERALA - 670102 PH:9747520100.

THALAYOLAPARAMBU

1193. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0J-), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH -9746743003

THAMARASSERY

- 1194. INDUS MOTOR COMPANY PRIVATE LIMITED (PB06-01-), RE-SY, NO. 445A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMARASSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. 673573
 PH :9747553362
- 1195. POPULAR (PB07-10-), SURVEY NO.43/4 BLOCK NO:005, RAROTH VILLAGE, THAMARASSERY TALUK, KOZHIKODE DISTRICT, KERALA -673573

THIRUVALLA

PH:9846397060.

- 1196. AVG MOTORS LTD. (Y501-01-), M.C ROAD, PERUMTHURUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107 PH :9446323999.
- 1197. POPULAR VEHICLES & SERVICE (B802-06-), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH -8086073489

THODUPUZHA

- 1198. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-04-), PALA ROAD, THODUPUZHA - 685584 PH:9745998631.
- 1199. POPULAR VEHICLES & SERVICES LTD. (HZ02-01-), SY.NO. 124/7A-1, 124/7A-2, THODUPUZHA EHLOOR MAIN ROAD, VILLAGE & TOWN, THODUPUZHA, DISTT: IDUKI - 685585 PH :9072530120.

THRISSUR

- 1200. POPULAR VEHICLES & SERVICES LTD. (2701-05-), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH: 6282306495
- 1201. SAI SERVICE PRIVATE LIMITED (2705-06-), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH 9645105051
- 1202. BRD CAR WORLD LIMITED (A404-01-), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031 PH -9995807141
- 1203. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0D-), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH: 9745998014.
- 1204. BRD CAR WORLD LIMITED (A404-07-), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH : 9746476529.

THRITHALLUR

1205. BRD CAR WORLD LIMITED (A404-04-), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619 PH :9539197888.

TIRUR

- 1206. A M MOTORS (E601-02-), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101 PH:9995879706.
- 1207. KVR AUTOCARS PVT LTD (7H01-05-), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307 PH -9747/20673
- 1208. A M MOTORS (E601-08-), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. -676103 PH 9895705323
- 1209. INDUS MOTOR COMPANY PRIVATE LIMITED (Y403-01-), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PVI. LTD., THRIKANDINYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA. 676105 PH :9747518883.

TRIPPUNITHURA, COCHIN

1210. SAI SERVICE PRIVATE LIMITED (2705-05-), HILL PALACE ROAD, KARINGACHIRA, COCHIN -682301 PH :9645105067.

TRIPRAYAR

1211. POPULAR VEHICLES & SERVICES LTD. (2701-08-), SURVEY NO. 296/5.8, 296/9, 296/9-1, NATTIKA VILLAGE, NEAR CIVIL STATION, POLY JUNCTION, TRIPRAYAR TOWN, THRISSUR TALUK & DISTRICT, KERALA-680566 - 680566 PH: 9846699245.

TRIVANDRUM

- 1212. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-01-), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM-695014 PH: 9745998001.
- 1213. POPULAR VEHICLES & SERVICES LTD. (1601-01-), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002 PH:9946104601.
- 1214. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-02-), NH BYE PASS ROAD, VEMPALAVATTOM, TRIVANDRUM - 695029 PH : 9745998003.
- 1215. SARATHY AUTODRIVES PVT LTD (1607-02-), KOVALAM BYEPASS, SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009 PH :9947270665.
- 1216. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-05-), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, , 695011 PH 9745998002
- 1217. POPULAR VEHICLES & SERVICES LTD. (1601-05-), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002 PH :9846298610.
- 1218. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-11-), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM 695030 PH: 9747508822.
- 1219. SOUTH PARK MOTORS PVT. LTD. (1604-01-), SURVEY NO. 986/3-4-5-6, VILLAGE -KADAKAMPALLY, CHACKAI BYPASS, TALUKA -TRIVANDRUM, TRIVANDRUM, KERALA. - 695029 PH -9526100008.
- 1220. SARATHY AUTODRIVES PVT LTD (1607-03-), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT-THIRUVANANTHPURAM, KERALA. - 695019 PH:9961665865.
- 1221. POPULAR VEHICLES (1601-12-), RE-SURVEY NO. 26/4-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA. - 695 015 PH: 9364498605.

- 1222. POPULAR VEHICLES (1601-17-), BUILDING NO. 13/632,632-A, 633,633-A1,633-A2,634-636, 6TH MILE STONE, VAZHAYILA PO, PEROORKADA, THIRUVANANTHAPURAM, KERALA - 695521 -695521
- PH: 9288023313.
 1223. SARATHY AUTODRIVES PVT LTD (1607-01-), SURVEY NO. 2448/4, VILL. MUTTATHARA, NH BYE PASS ROAD, KALLUMOOD JN., VALLAKADAU PO, ENCHAKKAL, THIRUVANANTHAPURAM, KERALA-695008 896008.

PH:9562416665. TRIVANDRUM-MANANTHALLA

1224. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-08-), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD,

VATTAPPARA PO, MANNANTHALA,TRIVANDRUM - 695028 PH:9747540100.

UPPALA

- 1225. POPULAR VEHICLES & SERVICES LTD. (4702-0A-), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH-8086078864
- 1226. KVR CARS (4l02-01-), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT., KERALA - 671324 PH :9526021876

VADAKARA

- 1227. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-07-), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104 PH -9745098021
- 1228. POPULAR VEHICLES AND SERVICES (8S02-01-), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA). 673102 PH:8943345935.

VALENCHARRY

 A M MOTORS (CUK1-01-), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. - 676552 PH: 974598666.

VETTICHIRA

1230. KVR AUTOCARS PVT LTD (7H01-03-), AP IV, 75A TO G, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA, - 676552 PH-9747020023.

WADAKKANCHERY

1231. BRD CAR WORLD LIMITED (A404-03-), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH 9567869403.

KERLA

EDAKKARA

1232. KVR (GMM1-01-), SURVEY NO. 1087/1C-91, VAZHIKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679 331 PH :9747020777.

LADAKH

LEH

1233. DRUK AUTOZONE (9S02-01-), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH - 194101 PH :8082800205

MADHYA PRADESH

AGAR

1234. UNITARA MOTORS (BJT2-01-), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669 PH -9575650883

ALIRAJPUR

1235. RUKMANI MOTORS PVT. LTD. (GLY1-01-), WARD NO 1, JHABUA ROAD, ALIRAJPUR, MADHYA PRADESH, MP - 457887 PH :8889676035

ANUPPUR

1236. SHUBH MOTORS PVT. LTD. (BIB1-01-), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224 PH :9752546255, 9755505145.

ASHOK NAGAR

1237. PREM MOTORS PVT. LTD. (DS01-02-), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH -99/28609858

ASHTA

1238. JEEWAN MOTORS PVT. LTD. (BSF1-01-).
KHASRA NO. 111/1 NEAR RELIANCE PETROL
PUMP. BHOPAL ROAD, ASHTA, DISTT. SEHORE
(M.P.) - 466001
PH. 3926429604
6264918307
8718911222.

BADNAWAR

1239. PATEL MOTORS (INDORE) PVT. LTD. (BPT1-01-), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNI. TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH. - 454660 PH : 32228. 9179653543.

BADWAH / BARWAHA (BOTH NAMES ARE OK)

1240. NIMAR MOTORS PVT. LTD. (AU01-05-), NIRMAL COMPLEX , INDORE ROAD , BARWAH - 451001 PH :7770878726, 9669569496.

BALAGHAT

1241. KUNAL MOTORS (U501-04-), KH NO.-1/56, JHULELAL DHARMSHALA ROAD, BALAGHAT, MADHYA PRADESH - 4811001 PH:8349992181.

BARELI

1242. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (1303-01-), SURVEY 423/2, VILLAGE KAMTON, NH 12, BARELI, RAISEN, MADHYA PRADESH. - 464668 PH 7909903929

RARHI

1243. SHUBH MOTORS PVT. LTD. (GMK1-01-), 1286/2, BARHI, DIST. - KATNI, MADHYA PRADESH -483770 PH :9752546255.

BARNAGAR

1244. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (BBK2-01-), RUNIJA ROAD BARNAGAR CITY, DISTRICT UJJAIN - 456771 PH :9755512100/7898900224.

BARWANI

1245. NIMAR MOTORS PVT. LTD. (AU01-02-), ANJAD ROAD, VILLAGE -KARAHI, BARWANI, MADHYA PRADESH - 451551 PH:7770804492, 9669569496.

BEGAMGANJ

1246. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CIL1-01-), IN FRONT OF DUSHERRA MAIDAN, SAGAR BHOPAL ROAD, BEGAMGANJ, DIST – RAISEN, MADHYA PRADESH – 464881 - 464881 PH. 7909997536.

BEOHARI

1247. SHUBH MOTORS PVT. LTD. (BKA1-01-), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST. -SHAHDOL, MADHYA PRADESH. - 484774 PH :9755595423.

BERASIA

1248. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CKG1-01-), BHOPAL ROAD, OPP. BERASIA HOSPITAL BERASIA, DISTRICT – BHOPAL, MADHYA PRADESH. -463106 PH: 8770593501.

BETMA

1249. OCEAN MOTORS PVT. LTD. (BVR1-01-), OPPOSITE MPEB OFFICE, INDORE-AHEMDABAD ROAD, BETMA, DISTRICT – INDORE, MADHYA PRADESH. - 453001 PH:7389936444.

BETUL

1250. KUNAL MOTORS (U501-02-), BHOPAL - NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK,, BETUL - 460001 PH:8349999177.

1251. KAMTHI MOTORS (KK02-01-), NEAR SUNITA COLONY, ITARSI ROAD, BETUL, MADHYA PRADESH - 4600013 - 4600013 PH :9111535777.

BHAVRA

1252. RUKMANI MOTORS (SPT1-01-), GRAM PANCHAYAT, KALIYAVAHO, OPP SUNKER MANDIR, BHAVRA TEHSIL, ALIRAJPUR DISTRICT, MADHYA PRADESH - 457882. -457882 PH : 9755549200.

BHITARWAR

1253. NIKUNJ MOTORS (SRB1-01-), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWAR ROAD, DABRA-BHITARWAR ROAD, BHITARWAR, MP - 474009 -474009 PH - 4100105590

BHOPAL

1254. JEEWAN MOTORS PVT. LTD. (302-01-), 9E SECTOR AINDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024 PH :4058888/ 9826017799 9826429605.

1255. SATYAM MOTORS (307-01-), NH-12, SUVEESHA NAGAR, HOSHANGABAD ROAD, MISROAD -462040

PH:6261900423.

1256. JEEWAN MOTORS PVT. LTD. (302-04-), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH, CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036 PH :4057988 9131364153.

1257. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (308-01-), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023 PH: 4063529.30.31.32.33.34.35. 9926516501.

1258. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (309-01-), 4/1, DAGA HEIGHTS, NEAR BUDHNA MANDIR, MAIN ROAD KOLAR ROAD, CHUNABHATTI, BHOPAL, MADHYA PRADESH. -462016 PH. :9109900400.

BIAORA

1259. UNITARA (0F02-01-), OLD AB ROAD, KACHNARIA, BIAORA (M.P) - 465674 PH :9575650883.

BIJURI

1260. SHUBH MOTORS (SMJ1-01-), GRAM - NEAR GENTRI GATE, NAGAR PALIKA PARISHAD BIJURI, DISTRICT - ANUPPUR, MADHYA PRADESH - 484116 PH -9755580253.

BINA

1261. ADINATH CARS PRIVATE LIMITED (BH02-01-), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT – SAGAR, MADHYA PRADESH - 470113 PH 3909780047.

BURHANPUR

1262. NIMAR MOTORS PVT. LTD. (BRR1-01-), KHASRA NO. 654/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP. PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH - 450331 PH : 7694011374, 9669569496.

CHAKGHAT

1263. CITY CARS (UNIT OF AGARWAL WHEELS) (GK01-01-), GRAM AND POST - CHANDAI, CHAKCHAT, TEHSIL - TEONTHER, PRAGRAJ ROAD, NH 27, DIST- REWA, MP – 486226... 486226 PH :9754301199, 7354252525.

CHATTARPUR

1264. ADINATH CARS PRIVATE LIMITED (8802-01-), MAHOBA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGAR - 471001 PH :900978577

CHHANERA

1265. NIMAR MOTORS (SMX1-01-), NEAR ST. STEPHEN SCHOOL, HARDA ROAD, CHHANERA (HARSUD), PIN-450001, MADHYA PRADESH -450001 PH :9669569504.

CHHINDWARA

- 1266. KUNAL MOTORS (U501-03-), OPP. KUNAL MOTORS SHOWROOM, LAL BAGH TIRAHA, BEHIND TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP), -480001 PH -998185/239
- 1267. KUNAL MOTORS (U501-06-), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002 PH. 9981852239.
- 1268. KAMTHI MOTORS LLP (U502-01-), KHASRA NO.1/53, BESIDE MVM SCHOOL, NAGPUR ROAD, VILL.-SARRA, DISTT. CHHINDWARA, MADHYA PRADESH - 480001 PH:9111488444/9111535777.

CHITRAKOOT

1269. CITY CARS (UNIT OF AGARWAL WHEELS) (GKS1-01-), PLIKOTHI CHOURAHA, BESIDE SINGH AUTOMOBILE- A HERO AGENCY, CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA (MADHYA PRADESH)- 485334 - 485334 PH :7089908823, 7544252525.

DABRA

1270. PREM MOTORS PVT. LTD. (BOR1-01-), PICHHORE TIRAHA, GWALIOR JHANSI ROAD, DABRA, DIST.-GWALIOR. - 475110 PH :9926809110.

DAMOH

1271. ADINATH CARS PRIVATE LIMITED (RD02-01-), SAGAR JABALPUR BYPASS ROAD, DAMOH (M.P.). - 470661 PH :9009780035.

ΠΑΤΙΑ

1272. PREM MOTORS PVT. LTD. (3003-05-), NR. BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661 PH :9165012280

DEORI

1273. ADINATH CARS PRIVATE LIMITED (CUO1-01-), C/O VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE, NEAR GOVT. HIGH SCHOOL, NARSINGHPUR ROAD, VILLAGE KHEER, DEORI DISTT. SAGAR (M.P.) - 470226 PH 7000410529

DEPALPUR

1274. OCEAN MOTORS PVT. LTD. (WB01-03-), NEAR LEELA RESIDENCY, INDORE ROAD, DEPALPUR, DIST. INDORE-MP - 453115 PH : 220505 222501

DEWAS

1275. UNITARA MOTORS PVT LTD (3Q02-01-), SURVEY NO 255, A.B. ROAD, RASULPUR SQUARE, DEWAS, MADHYA PRADESH PIN 455001 - 455001 PH: 9575650883.

DHAMNOD

1276. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PUT. LTD.) (UT01-01-), KHASRA NO. 484/1/2, OLD A B ROAD, OPPOSITE HP PETROL PUMP, DHAMNOD, DIST.-DHAR, MADHYA PRADESH. 454552 PH. 9981585165.

DHAR

1277. RUKMANI MOTORS (P) LTD (5304-02-), 41/2 MAGAJPURA,DHAR., - 454001 PH:0731-223500, 9755549200.

DINDORI

1278. STANDARD MOTOCORP PVT LTD (AVA2-01-), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP, DINDORI - 481661 PH :280030,77771014728 9111248709.

FΔII

1279. OCEAN MOTORS (SGH1-01-), NH 47, NEAR GRAM - FALI, TEHSIL KHUDEL, INDORE, MADHYA PRADESH. - 452016 PH - 7389936477

GADARWARA

1280. STANDARD MOTOCORP PVT LTD (B013-01-), KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119, GADARWARA, DISTRICT – NARSINGHPUR . - 487551 PH :8319784336.

GANDHWANI

1281. RANA MOTORS (SIO1-01-), MUKATI COMPLEX, BAGH AWALDA MAAN ROAD, TEHSIL-GANDHWANI, DIST – DHAR, MADHYA PRADESH - 454446 - 454446 PH :9109375568

GANJ BASODA

1282. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AEA2-01-), LAL BAGH, BARETH ROAD, GANJ BASODA, VIDISHA, 464221. - 464221 PH: 9425148584.

GARRA

1283. KAMTHI MOTORS LLP (GJC1-01-), LALBARRA ROAD, GARRA INDUSTRIAL AREA, GARRA, BALAGHAT, MADHYA PRADESH. - 481331 PH : 7723020684

GAUTAMPURA

1284. OCEAN MOTORS PVT. LTD. (CFW1-01-), RUNJI CHOURAHA, GAUTAMPURA, TEHSIL -DEPALPUR, DISTT.-INDORE, MADHYA PRADESH - 453220 PH :230501 , 7389937314.

GHATIYA

1285. YUG CARS (SJW1-01-), NEAR JAGOTI SQUARE, UJJAIN – AGAR ROAD, GHATIYA, MP - 456550 -456550 PH :9425067979.

GOTEGAON

1286. STANDARD MOTOCORP PVT LTD (BLY2-01-), JABALPUR ROAD, OPP. NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR. - 443 001 PH:7771003774.

GUNA

1287. PREM MOTORS PVT. LTD. (\$301-01-), OPP R.T.O.,A.B. ROAD,GUNA, - 473001 PH :268015.

GWALIOR

1288. PREM MOTORS PVT. LTD. (3003-01-), M. L. B. ROAD, GWALIOR,, - 474002 PH: 9926809803.

1289. PREM MOTORS PVT. LTD. (3005-01-), SHIVPURI LINK ROAD, GWALIOR - 474002 PH :9926809803

 NIKUNJ MOTORS (3006-01-), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 - 474005 PH :9407067974.

HALALPURA - BHOPAL

1291. DAGA MOTORS (309-02-), KHASRA NO. 80/1/K, VILLAGE - HALALPURA, TEHSIL - HUZUR, DISTRICT - BHOPAL, MADHYA PRADESH. -462030 PH 9109900365

HANSA KHEDI

1292. KATHED MOTORCORP (SGI1-01-), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GAND), TEHSIL -SANWER, DISTRICT -INDORE, MADHYA PRADESH. - 453551
PH :9479952490

HARDA

1293. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (KM01-02-), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331 PH :8889284444, 888928222.

HATOD

1294. OCEAN MOTORS PVT. LTD. (BVT1-01-), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111 PH:7389936477.

HATTA

1295. ADHINATH MOTORS (SKK1-01-), NEAR NAVODAYA SCHOOL, DAMOH ROAD, HATTA, DISTT. DAMOH (M.P.) - 470775. - 470775 PH :9009787562.

HOSHANGABAD

1296. INFINITY CARS (A UNIT OF FOUZDAR CARS PYT. LTD) (KM01-01-), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH -461001 PH :8889282222

ICHHAWAR

1297. RAJRUP MOTOR JUNCTION (A UNIT OF RM) MOTORS PVT. LTD.) (CIK1-01-), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT – SEHORE, MADHYA PRADESH. - 466115 PH. 9399061645/ 9926516501.

INDERGARH

1298. PREM MOTORS (SPU1-01-), NEAR KHERAPATI GARDEN, INDERGARH, MP - 475675 . - 475675 PH :9926809818.

INDORE

- 1299. PATEL MOTORS (INDORE) PVT. LTD. (5303-01-), 428/3/3,NIRANJANPUR,A B ROAD,INDORE -452010 PH:99777-03609/99777-03512.
- 1300. RUKMANI MOTORS (P) LTD (5304-01-), 2-3,,A.B. ROAD,INDORE - 452001 PH :99071-57890/90390-88702.
- PATEL MOTORS (INDORE) PVT. LTD. (5303-02-),
 176/1,PIPLYA RAU,A.B. ROAD, INDORE 452017
 PH:99777-03512/99777-03260.
- PH:997/7-03512/997/7-03200.

 1302. RUKMANI MOTORS (P) LTD (5304-03-), NO. -4/5, MANORAMA GANJ, INDORE 452001 PH:99071-57890/90390-88702.
- OCEAN MOTORS PVT. LTD. (5306-01-), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001 PH:6627500 6627505
- 1304. OCEAN MOTORS PVT. LTD. (5306-02-), NEAR QUEENS COLLEGE, ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017 PH -6617505 2877505
- PATEL MOTORS (INDORE) PVT. LTD. (5303-03-), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006 PH. 7314293919.
- 1306. OCEAN MOTORS PVT. LTD. (5306-03-), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAJESHWARI EXTENSION, PIPLIYAHANA, INDORE - 452001 PH '968533331' 17389936451
- 1307. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (5307-01-), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH 452002 PH : 7471111132
- 1308. RANA MOTORS (5308-01-), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009 PH :9109975566.
- PATEL MOTORS (INDORE) PVT. LTD. (5303-05-), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH. - 452012 PH:99777-03512/99777-03260.
- 1310. RUKMANI MOTORS (P) LTD (5304-04-), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 15/1, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. -452010 PH :99071-57890/90390-88702.
- 1311. OCEAN MOTORS PVT. LTD. (5306-04-), PLOT NO. 142 AND 151, SCHEME NO. 97, PART-4, COMMERCIAL MANDI, NEAR CAT SQUARE, INDORE. - 452012 PH :7389936405.

- 1312. KTL AUTOMOBILES (5309-C1-), PLOT NO.5/RC, SCHEME NO 134,MR 10,VILLAGE KHAJRANA, DIST INDORE-452010,MADHYA PRADESH -452010
- PH :6263455899.

 1313. RUKMANI MOTORS (P) LTD-C4 (5304-05-), 109, BHAWRASLA NEAR PRATAP AUTO, FRONT OF VINAYAK TOL KANTE, SANWER ROAD, INDORE, PIN-453111, MADHYA PRADESH 453111 PH :9109978301.

JABALPUR

- 1314. STANDARD MOTOCORP PVT LTD (5405-01-), OPPOSITE ALLAHABAD BANK, DELITE TALKIES ROAD, CIVIL LINES, JABAL PUR - 482001 PH: 4040405 / 4040406 07771003012 27271003372
- 1315. SHUBH MOTORS (5403-01-), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001 PH: 9755545540.
- 1316. STANDARD MOTOCORP PVT LTD (5405-02-), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR -482002 PH :4038001 9301190205 7771006920.
- 1317. SHUBH MOTORS PVT LTD (5403-03-), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH 482002 PH 9755595496
- 1318. STANDARD MOTOCORP PVT LTD (5405-03-), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001 PH :9303568517
- 9300008708.

 319. MAA GAYTRI (AGGARWAL) (5404-01-), MOUZA KARMETA N.B. 497, P.H. NO 23/26, KHASRA NO. 497 & DIV. KHASRA NO. 4946, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. + 482002
 PH: '7489901021.
- 1320. STANDARD MOTOCORP PVT LTD (5405-04-), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. -482003 PH :7800806222 9303568517.

JAORA

JHABUA

1321. PATEL MOTORS (INDORE) PVT. LTD. (P801-04-), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226 PH: 243399, 7089901505, 9926932221. 1322. PATEL MOTORS (INDORE) PVT. LTD. (AAR1-01-), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661 PH :9826634449.

JOBAT

1323. RUKMANI MOTORS (SOA1-01-), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP – 457990. - 457990 PH 6262505181

KARERA

1324. PREM MOTORS (SMO1-01-), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660. - 473660 PH :9926823596.

KATNI

1325. SHUBH MOTORS PVT LTD (FK01-01-), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501 PH 9755515839

KHANDWA

1326. NIMAR MOTORS PVT. LTD. (AU01-03-), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001

PH:9575105697, 9669569496.

PH:7694011436, 9669569496.

KHARGONE

- 1327. NIMAR MOTORS PVT. LTD. (AU01-01-), JETAPUR,SANAWAD ROAD,KHARGAONE, -462026
- PH -9669569504, 9669569496. 1328. NIMAR MOTORS PVT. LTD. (AU01-06-), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. -451001

KHATEGAON

1329. UNITARA (BXB2-01-), NEMAWAR-INDORE ROAD, KHATEGAON, M.P - 455336 - 455336 PH :9993406993.

KOTMA

1330. SHUBH MOTORS (D001-01-), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336 PH : 9755581441.

KUKSHI

 OCEAN MOTORS PVT. LTD. (BIO1-01-), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331 PH :9009780030, 7389945443, 8085999990.

LAKHNADON

1332. KAMTHI MOTORS LLP (SCL1-01-), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480886 PH -9285506128

MAHESHWAR

 NIMAR MOTORS (SHH1-01-), OPPOSITE DEVRAJ HOTEL, MAIN MANDLESHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224 PH :9669569504.

MAHIDPUR

1334. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CWN1-01-), 264/3, BHIMAKHEDA, MAHIDPUR, UJJAIN - 456443 PH :9109130402.

MAIHAR

1335. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-04-), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH:7354252525.

MAJHAULI

1336. CITY CARS (SPN1-01-), WARD NUMBER 14, NAGAR PARISAD MAJHAULI, DIST. SIDHI (M.P) -486666. - 486666 PH :7970003171.

MAJHOLI

1337. SHUBH MOTORS (STJ1-01-), INDRANA ROAD, SUHAJNI TIRAHA, MAJHOLI, MADHYA PRADESH - 483336 PH :911155580.

MANASA

1338. PATEL MOTORS (INDORE) PVT. LTD. (BZX1-01-), 982/1, RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. - 458110 PH:9644405368.

MANAWAR

1339. OCEAN MOTORS PVT. LTD. (BVS1-01-), NEAR SHANTIKUNJ COLONY, INDORE-MANAWAR MAIN ROAD, TEHSIL – MANAWAR, DISTRICT – DHAR. - 454335 PH.:7389936477.

MANDLA

1340. STANDARD MOTOCORP PVT LTD (WD02-01-), KATARA ROAD, MANDLA, DIST. MANDLA MP-481661 PH :260600,260622 9301090184 88959280989.

MANDSAUR

- 1341. PATEL MOTORS (INDORE) PVT. LTD. (WC01-01-), NEAR SHIVANA BRIDGE.RATLAM MANDSAUR ROAD,MANDSAUR - 458001 PH: 07422-400450, 220372.
- 1342. PATEL MOTORS (INDORE) PVT. LTD. (WC01-02-), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001 PH :07422-400450, 220372.

MANPUR

1343. PATEL MOTORS (INDORE) PVT. LTD. (BRL1-01-), KHASRA NO. 302/1/3, AB ROAD, MANPUR, DIST-INDORE - 453661 PH :9826360699.

MAUGANJ

1344. CITY CARS (SEY1-01-), NEAR SENGAR PETROL PUMP, CHACK MODE WARD NUMBER 03,NH 7 ,MAUGANJ, DISTT - REWA, MADHYA PRADESH - 486331. - 486331 PH 975301199

MHOW

1345. OCEAN MOTORS PVT. LTD. (WA01-01-), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441 PH :7389936478 266211.

MORENA

1346. PREM MOTORS PVT. LTD. (RG01-01-), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH:9926002791.

NAGDA

1347. YUG CARS (A UNIT OF RUIKMARANI CARS INDORE PVT. LTD) (CHR2-01-), PLOT NO. 17, STATE HIGHWAY NO. 17, INDORIYA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456335 PH : 97550443009755512100.

NARAYANGARH

1348. PATEL MOTORS (SFN1-01-), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. -458553 PH.9977703907.

NARSINGHPUR

1349. STANDARD MOTOCORP PVT LTD (B802-01-), KH. NO. 8244 & 8344, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT – NARSINGHPUR, MADHYA PRADESH. - 487001 PH. 232757 9303513711.

NASRULLAGANJ

1350. JEEWAN MOTORS PVT. LTD. (CIN1-01-), KHASRA NO. 458, VILLAGE – RALA, TEHSIL – NASRULLAGANJ, DISTRICT – SEHORE, MADHYA PRADESH. - 466331 PH: 9826017799. 9859900110.

NEEMUCH

1351. PATEL MOTORS (INDORE) PVT. LTD. (P801-02-), MHOW-NEEMUCH ROAD, NEEMUCH(MP),, -458441 PH: 9977703907

NIWARI

1352. ADINATH MOTORS (SFC1-01-), ATKHASRA NO 2017/1, NEAR HDFC BANK MAIN ROAD, NIWARI, MADHYA PRADESH –472442. - 472442 PH :909787562.

PANDHURNA

1353. KAMTHI MOTORS (SFG1-01-), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334. - 480334 PH - 9111536777

PANNA

1354. CITY CARS (UNIT OF AGARWAL WHEELS) (EQ01-01-), KHASRA NO. 378, MOHAN RAJ VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH. - 488001 PH: 7354252525.

PARASIA

1355. KAMTHI MOTORS LLP (GKF1-01-), KHIRSADOHMAL, PARASIA, CHHINDWARA. MP -480441 PH :9285506109.

PATAN

1356. MAA GAYATRI (SHP1-01-), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119 PH : 9770415141

PAWAI

1357. CITY CARS (UNIT OF AGARWAL WHEELS) (SIX1-01-), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. – PANNA, MP- 488446 -488446 PH-9754301199.

PETLAWAD

1358. PATEL MOTORS (INDORE) PVT. LTD. (CJD1-01-), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773 PH.9111160888.

PIPARIYA

1359. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (CGB1-01-), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775

PH:8889285555, 8889282222

1360. PATEL MOTORS (INDORE) PVT. LTD. (5303-04-), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH 9826360699

RAISEN

PITHAMPUR

- 1361. RAJRUP MOTORS (RF03-01-), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551 PH:7869755501.
- 1362. JEEWAN MOTORS (RF02-01-), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551 PH:9826017799.

RAJGARH

1363. RUKMANI MOTORS (P) LTD (GKE1-01-), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116

PH:9755549200.

RATLAM

- 1364. PATEL MOTORS (INDORE) PVT. LTD. (P801-01-), 76 C,D&E,INDUSTRIAL AREA,RATLAM - 452001 PH:99269-32221/93404-31858.
- 1365. PATEL MOTORS (INDORE) PVT. LTD. (P801-03-), 181/17/18,DOSHI GOAN,INDUSTRIAL AREA ,JAORA ROAD,RATLAM - 457001 PH :99269-32221/93404-31858.

REWA

- 1366. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-03-), NYPASS CHURHATA, DIST. REWA -482001 PH: 7354252525.
- 1367. SHUBH MOTORS (5403-05-), VILLAGE RATHARA, TEHSIL – HUZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003 PH :9755582351.

SADALPUR

1368. OCEAN MOTORS (SPS1-01-), JAIN SHRII SUPER MARKET, SERVICE ROAD, MHOW- NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P) -454001. - 454001 PH. 7389936423.

SAGAR

1369. ADINATH CARS PRIVATE LIMITED (G102-01-), STATION ROAD, TILAK GANJ, SAGAR (M.P). -470001 PH:9009780030.

SANWER

1370. RANA MOTORS PYT LTD (CWX1-01-), S.NO. 356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. -453551 PH. 9109975566.

SATNA

1371. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-05-), DESIGE BHASKAR PRESS, BEHIND MARUTI SHOWROOM, WARD NO.27, AMOUDHA KALA, PANNA ROAD, SATNA - 485001 PH :9754031199. 7384252525.

SAUSAR

1372. KAMTHI MOTORS (SRX1-01-), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P – 480106. - 480106 PH :9111535777.

SEHORE

1373. JEEWAN MOTORS PVT. LTD. (302-02-), 869/1/2.OFFICERS COLONY,IN FRONT OF CHURCH GROUND,BHOPAL, INDORE ROAD -466001 PH :2226400 9926009735.

SENDHWA

1374. NIMAR MOTORS PVT. LTD. (CIH1-01-), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL - SENDHWA, DISTRICT - BARWANI, MADHYA PRADESH. -451666 PH :7694011408, 9669569496.

SEONI

1375. KUNAL MOTORS (U501-05-), JYARAT NAKA, JABALPUR NAGPUR ROAD, SEONI (M.P.) -480661 PH :8349999269.

SEONI MALWA

1376. INFINITY (SRW1-01-), NEAR AXIS BANK, SEONI MALWA, MP - 461223 - 461223 PH :8889281113.

SHADOL

1377. SHUBH MOTORS (MF01-01-), JAMUA, NEAR GYAN GUPTA, BUDHAR ROAD, SHAHDOL, -484771 PH: 9755595423.

SHAHPURA

1378. STANDARD MOTOCORP PVT LTD (CRD2-01-), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH:7771000392.

SHAJAPUR

1379. UNITARA (RH03-01-), LAL GHATI, A B ROAD, SHAJAPUR, MP - 465001 PH :9993406993

SHAMGARH

1380. PATEL MOTORS (INDORE) PVT. LTD. (BF21-01-), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL – SHAMGARH, DISTRICT – MANDSAUR, MADHYA PRADESH. - 458883 PH. 9753088222.

SHIVPURI

1381. PREM MOTORS PVT. LTD. (3003-04-), A B ROAD, SIVPURI, - 473551 PH:9926809976.

SHUJALPUR

1382. UNITARA (BGP2-01-), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P - 465333 -465333

PH:9575650883. SHYAMPUR

1383. DAGA MOTORS (SJX1-01-), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT – SEHORE, MADHYA PRADESH - 466651. - 466651 PH : 7909997570

SIDHI

1384. CITY CARS (UNIT OF AGARWAL WHEELS) (BKM1-01-), ADHIYAR KHOH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. -486661

PH:9754301199, 7354252525.

SIHORA

1385. SHUBH MOTORS PVT. LTD. (CIG1-01-), KHASRA NO. 31/1, P.H. – 11, MOUZA – GHAT SIMARIYA, TEHSIL – SIHORA, DISTRICT – JABALPUR, MADHYA PRADESH, - 483440 PH :9755099971, 9752546255.

SILWANI

1386. RAJRUP (SRP1-01-), MAHAVIR COLONY, SAI KHEDA ROAD, SILVANI, DIST. RAISEN, MP -464886. - 464886 PH : 9174000501

SIMROL

 RUKMANI MOTORS (BZV2-01-), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020 PH :9109978301.

SINGHOLI

1388. PATEL MOTORS (SEQ1-01-), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP – 458228 - 458228 PH:9977703907.

SIRONJ

1389. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CVM1-01-), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228 PH. 7909037588

SITAMAU

1390. PATEL MOTORS (SLL1-01-), MAUKHEDA, TEHSIL - SITAMAU, DISTRIST - MANDAUR, MADHYA PRADESH - 458990 - 458990 PH - 9826360699

TARANA

1391. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHQ2-01-), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH. - 456665 PH :9893650319755512100.

TENDUKHEDA

1392. STANDARD MOTOCORP PVT LTD (CRC2-01-), KHASARA NO. 49/6, MOUZA – TENDUKHEDA, DISTRICT – NARSINGHPUR . - 470880 PH -7771014773

THIKRI

1393. NIMAR CAR (SED1-01-), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH -451660. -451660 PH :9109202186.

TIKAMGARH

1394. ADINATH CARS PRIVATE LIMITED (RE02-01-), NEAR NEW BUS STATI ON, OPPOSITE OF BANKE BIHARI COLONY, MAURANIPUR ROAD,TIKAMGARH, MADHYA PRADESH -472001 PH :920088454.

UDAIPURA

1395. JEEWAN (SCI1-01-), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770 PH: 9826017799.

UJJAIN

1396. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (3W03-01-), SURVEY NO. 59/3, DEWAS ROAD,UJJAIN - 456010 PH :0734-2524002 9755512100

1397. YUG CARS (3W03-02-), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURAHA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH. - 456001 PH :9425067979.

UMARIA

1398. SHUBH MOTORS (5403-04-), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH :9755502682.

VIDHISHA

1399. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AY02-01-), PLOT NO 59/1, VILLAGE RANGAI, VIDISHA, MADHYA PRADESH - 464001 PH: 9109900374.

VIDISHA

1400. RAJRUP (AY03-01-), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001 PH :7869755501.

WAIDHEN

1401. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-02-), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI, MADHYA PRADESH - 486886 PH :7354252525.

MAHARASHTRA

AHMEDNAGAR

1402. KANKARIYA AUTOMOBILES PVT. LTD. (A501-01-), SARDA MILLS,SAVEDI ROAD,AHMEDNAGAR, MAHARASTRA - 414001 PH: 7410024227.

1403. KANKARIYA AUTOMOBILES PVT. LTD. (A501-05-), MIDC, AHMEDNAGAR - 414003 PH :7447700029.

AJARA

1404. SAI SERVICE PRIVATE LIMITED (CIR1-01-), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT – KOLHAPUR. - 416505 PH :7776837717, 9673331977.

AKLUJ

1405. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-04-), PLOT NO. 15/3-A, PANCHVATI STOP,MALINAGAR ROAD,AKLUJ - 413101 PH : 0217-223033/8805986848.

AKOLA

1406. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-01-), TIRUPATI CHAMBERS,CONVENT ROAD,AKOLA - 444005 PH :9767892552/9112220551.

1407. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-02-), PLOT NO E/12-13-MIDC PHASE-2, AKOLA. - 444001 PH :9767892552/9112220551.

AKOT

1408. KHANDELWAL AUTO (SMN1-01-), PLOT NO 18 & 19, SURVEY NO 600/3, AKOT – AKOLA ROAD, AKOT. AKOLA (MAHARASHTRA) - 444101 - 444101 PH .9112220551, 9767892552.

ALEPHATA

1409. KOTHARI AUTO WHEELS PVT LTD (CSZ2-01-), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, AIP – ALEPHATA, TALUKA – JUNNAR, DISTT. PUNE, PIN-412411 - 412411 PH: 3421753278.

ALIBAUG

1410. SIMRAN MOTORS PVT. LTD. (7S01-05-), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE - VESHVI, ALIBAUG, DISTRICT - RAIGAD, MAHARASHTRA - 402201 PH :9223161512, 9270888786.

AMALNER

1411. MANRAJ MOTORS (EL01-01-), PRASAD MOTORS, RAVI NAGAR, NEAR NAYARA PETROL PUMP, DHULE ROAD, AMALNER, DIST.JALGAON-425401. -425401 PH :#M/A

AMBERNATH

1412. AHER AUTOPRIME LLP (COP1-01-), PLOT NO-24,26,27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVLI, AMBERNATH - 421501 PH :8422871720.

AMRAVATI

1413. ASPA BANDSONS AUTO PVT. LTD. (F201-01-), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA, - 444607 PH: 9423123665.

1414. ASPA BANDSONS AUTO PVT. LTD. (F201-05-), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607 PH: 9423339601.

APTA

1415. K.T.S. AUTOMOTORS PVT. LTD. (682-01-).
VILLAGE: APTA, OPP. APTA RAILWAY STATION,
LADIWALI, DIST: RAIGAD, PANVEL
(MAHARASHTRA) - 410207
PH :9420611356/94206611326.

ARVI

1416. SEVA AUTOMOBILES (SMF1-01-), PLOT NO-7, SURVEY NO-32/7, MAUZA -AHMADNAGAR, WARDHA ROAD, NAGAR PARISHAD-ARVI, TEHSIL-ARVI, DIST-WARDHA - 442201 PH: 8484988769.

AURANGABAD

1417. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-01-), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH:9158000046.

- 1418. PAGARIYA AUTO PVT. LTD. (2103-01-), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD -431005
- PH .02406659902.

 1419. AUTOMOTIVE MANUFACTURERS PVT. LTD.
 (2102-03-), C-27, MIDC, CHIKALTHANA, NR
 LUPIN LABORATORIES, AURANGABAD,
 MAHARASHITRA 431006
 PH :9158000059.
- 1420. PAGARIYA AUTO PVT. LTD. (2103-05-), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005 PH -986099948/19609948R
- 1421. PAGARIYA AUTO PVT. LTD. (2103-06-), PLOT NO A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001 PH :840886768/7387279311.

BADLAPUR

1422. PRAKASH AUTO PVT. LTD. (9001-01-), SHOP NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA WATER SUPPLY, OPP. INDIAN OIL PETROL PUMP, MIDC ROAD, KATRAP, BADLAPUR (EAST) - 421503 PH:8655791288/9870453155.

BALLARPUR

1423. TRISTAR CARS (H302-04-), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701 PH :744747304.

BARAMATI

1424. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-01-), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102 PH: 9881370310.

BARSHI

1425. CHAVAN MOTORS DIVISION INDIA PVT LTD (BBA1-01-), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401 PH :0217-229666/8378983726.

BEED

1426. PAGARIYA AUTO PVT. LTD. (V602-01-), GUT NO. 61, VILLAGE – GHOSAPURI, TALUKA AND DISTRICT – BEED, MAHARASHTRA. - 431122 PH :9834161614/02442256058/02442256056/02442256

BHANDARA

1427. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-03-), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904 PH -7030932330/9673004280

BHIGWAN

1428. MAHALAXMI AUTO (SMP1-01-), GAT NUMBER-342, NEXT TO HOTEL SAGAR, PUNE-SOLAPUR HIGHWAY, BHIGWAN – 413130. - 413130 PH :9922979653.

BHOR

1429. SEHGAL AUTORIDERS PVT. LTD. (BSV1-01-), GUT NO. 929/1, UTTROLI, BHOR, TALUKA – BHOR, DISTRICT – PUNE, MAHARASHTRA. -412206 PH.9527771016.

BHUSAWAL

1430. MANRAJ AUTO (C401-02-), NATIONAL HIGHWAY 6, NEAR KHADKA ROAD CROSSING, BHUSAWAL 425201. - 425201 PH :9422867242.

BOISAR

1431. SHIVAM AUTO ZONE (ES02-01-), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARAHSTRA - 401501 PH :8082551155

BRAMHAPURI

1432. TRISTAR CARS PVT LTD (H302-02-), 165. NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206 PH -7745883000

BULDHANA

1433. MANRAJ MOTORS PVT LTD (COU1-01-), GAT NO. 94, PLOT NO. 11, SUNDERKHED, BULDHANA, MAHARASHTRA. - 443 001 PH:7875051521.

CHALISGAON

1434. MANRAJ MOTORS PVT LTD (AAE1-01-), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA. - 424101 PH : 9408889861

CHANDGAD

1435. SAI SERVICE PRIVATE LIMITED (BTF1-01-), GAT NO.360, G.P.IN NO.157, API HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA. - 416507 PH.9673339103.

CHANDRAPUR

1436. TRISTAR CARS PVT LTD (H302-01-), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 442401 PH:7722068612.

1437. TRISTAR CARS PVT LTD (H302-03-), NAGPUR ROAD, CHANDRAPUR - 442401 PH :7722068603.

CHIPLUN

1438. JACRUT MOTORS PVT LTD (9A01-01-), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605 PH :708368171293.

CHOUK

1439. SIMRAN MOTORS (SNK1-01-), SIMRAN MOTORS PVT LTD STOCKYARD, AT WAVANDAL , SURVEY NO- 62/2A POST- CHOWK, NEAR ARUN HOTEL, MUMBAI-PUNE HIGHWAY, TALUKA- KHALAPUR, DISTRICT - RAIGAD -410206 PH :869188895

DAHANU

1440. SAI SERVICE PRIVATE LIMITED (V901-03-), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602 PH: 9730302821/9167980005/9594952211

DAPOLI

1441. JAGRUT MOTORS PVT LTD (G301-06-), AT/POST-DAPOLI, DAPOLI-KHED ROAD, DAPOLI.DIST RATANAGIRI. - 415712 PH :8308816572/7447752372.

DHAMANGAON

1442. ASPA (SFZ1-01-), RAMDEVBABA NAGAR, ANJANISINGH ROAD, DHAMANGAON RAILWAY, DIST-AMRAVATI - 444709 PH 9850333558

DHULE

1443. SEVA AUTOMOTIVE LTD. (P301-01-), GATE NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE -424001 PH :02562-281128/29.

DINDORI

1444. AUTOMOTIVE MANUFACTURERS PVT. LTD. (AAF1-01-), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202 PH 9673000829

DOMBIVALI

1445. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-02-), PLOT NO. B-43, PHASE-1,DOMBIVALI INDUSTRIAL AREA, DOMBIVALI,DISTT-THANE, MAHARASHTRA, - 421201 PH:8879059013/969206095/769206101.

1446. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-02-), SURVEY NO. 13, NEAR PIMPLESHWAR TEMPLE, OPP. MAHANAGAR ONG PUMP, KALYAN-SHILPHATA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. -421203 PH. 8422800740, 8422978490.

GADCHIROLI

1447. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE () PVT. LTD) (ZK02-01-), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARASTRA - 442702 PH :8R60920188

GADINGALAJ

1448. SAI SERVICE PRIVATE LIMITED (3802-04-), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ -416502 PH :03327-222239.

GONDIA

1449. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-02-), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601 PH :8888837023/8888859487.

1450. ARYA CARS, (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-03-), ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441 601 PH -888837023/8888859487

GUHAGAR

1451. JAGRUT MOTORS PVT LTD (BJV1-01-), SURVEY NO. 23A, SHRUNGALTALI, GUHAGHAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA -415703 PH. 7218548798/7447752072

HINGANGHAT

1452. SEVA AUTOMOTIVE PVT. LTD. (CDZ1-01-), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK – HINGANGHAT, DISTRICT – WARDHA, MAHARASHTRA. - 442301 PH:7722067843.

HINGOLI

1453. PAGARIYA AUTO PVT. LTD. (IF03-01-), PLOT NO.5,7 & 8, SURVEY NO.29/2, AKOLA BY PASS ROAD, HINGOLI. - 431513 PH:8411961177.

HUPARI

1454. SAI SERVICE PRIVATE LIMITED (CIQ1-01-), GAT NO.925/8K/2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT – KOLHAPUR. - 416203 PH:9923208454.

ICHALKARANJI

1455. SAI SERVICE PRIVATE LIMITED (4D01-01-), GATE NO. 107,KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122 PH: 0230-2425282.

INDAPUR

1456. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-02-), STATE HIGHWAY NO. 151, INDAPUR - 412219 PH :8308807314.

ISLAMPUR

1457. CHOWGULE INDUSTRIES PVT. LTD. (PJ02-01-). GATE NO.905/A/3, NEAR BOMBAY RAYAN, PUNE-BANGALOE HIGHWAY (NH-4), ISLAMPUR TALUKA: WALVA, DIST:SANGLI - 415409 PH.02342-225757.

JALGAON

1458. MANRAJ MOTORS PVT LTD (C401-01-), AJINTA ROAD, MIDC INDL AREA, JALGAON - 425003 PH: 0257-2212120.

JALNA

1459. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-02-), PLOT NO. 4 & 5, CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA, - 431203 PH-9158000063.

JATH

1460. CHOWGULE INDUSTRIES PVT. LTD. (J102-05-), PLOT NO. 12, SAWANT ESTATE, MORE COLONY, OPP. CATTLE BAZAR, SATARA ROAD, JATH, DISTRICT SANGLI, MAHARASHTRA -416404 PH 102344-248598

1461. SIDHI WHEELS (BLX1-01-), GAT NO- 27/1B, POST-RAMPUR, JATH-SANGLI ROAD, TALUKA-JATH, DISTRICT-SANGLI - 416404 PH: 8956454526.

JAYSINGPUR

1462. SAI SERVICE PRIVATE LIMITED (ASA1-01-), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGAON(JAYSINGHPUR), TALUKA:SHIROL, DIST: KOLHAPUR - 416134 PH:9673339762.

JEJURI

1463. EXCELL AUTO VISTA (SKY1-01-), GAT NO - 224, AT POST-SAKURDE, JEJURI, TALUKA-PURANDHAR, DISTRICT-PUNE, PIN-412303. - 412303 PH-9146052651.

KALWAN

1464. SHAAN CARS PRIVATE LIMITED (BNW1-01-), GAT NO. 189, PLOT NO. 7, MALEGAON ROAD, A/P KALWAN, NASHIK. - 423501 PH:9075028780, 9689003988.

KALYAN

1465. AHER AUTOPRIME LLP (CFV1-01-), SURVEY NO.53 & 54, HIND MILL, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI - 421301

PH :9819705444/8657402204/9769927505.

1466. AHER AUTOPRIME LLP (CFV1-02-), SURVEY NO.31B,MOHANE ROAD, NEAR SHAHAD RAILWAY STATION,SHAHAD,KALYAN. - 421103 PH :84228717208657402204/9833993076.

KAMSHET

1467. SEHGAL AUTO (CEA1-01-), AT NAYGAON, POST KAMSHET, TALUKA MAVAL, DISTRICT PUNE, MAHARASHTRA (410405). - 410405 PH: 8888881358.

KANKAVALI

1468. JAGRUT MOTORS PVT LTD (G301-05-), PLOT NO.32-33, SURVEY NO.-1886/1,,MUMBAI-GOA HIGHWAY (NH-17) JANAVLI.KANKAVLI.MAHARASHTRA -

416002 PH :7499051071/9021095805.

KARAD

1469. CHOWGULE INDUSTRIES PVT. LTD. (F303-02-), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, AP MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110 PH :9927569835

KARJAT

1470. SIMRAN MOTORS PVT. LTD. (7S01-03-), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201

PH:8691988895.8108181978.

PH:7575077181/9687668929

1471. KANKARIYA AUTOMOBILES PVT. LTD. (GJV1-01-), KARJAT-NAGAR ROAD, KARJAT, MAHARASHTRA - 414402 PH:9890843771.

KARMAD

1472. PAGARIYA (CEB1-01-), GAT NO-245, BHAKTI COMPLEX, BEHIND BHARAT PETROL PUMP, AURANGABAD ROAD, KARMAD – 431007. -431007

KARMALA

1473. CHAVAN MOTORS DIVISION INDIA PVT LTD (GJQ1-01-), GAT NO. 105, SURVEY NO. 3961, KARMALA-NAGAR ROAD, A/P- KARMALA, TALUKA - KARMALA, DIST.-SOLAPUR. - 413202 PH:8806665691.

KAVATE MAHANKAL

1474. CHOWGULE INDUSTRIES PVT. LTD. (SC02-01-), MAHANKALI BAAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405 PH :02341-222100

KHAMGAON

1475. MANRAJ MOTORS PVT LTD (BXU1-01-), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON, MAHARASHTRA - 444303.

KHANAPUR (SANGLI)

1476. CHOWGULE INDUSTRIES LTD (SNM1-01-), KHANAPUR VITA ROAD, KHANAPUR, TAL-KHANAPUR, DIST-SANGLI - 415307 PH :9767899653.

KHARGHAR

1477. EXCELL AUTOVISTA PVT LTD (AAC1-01-), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210 PH :7666703636 / 9594153308 / 8422991300 / 9320357300.

KHED

1478. JAGRUT MOTORS (COR1-01-), GAT NO - 43/B, MAUZA-BHARNE NAKA, TALUKA-KHED, DIST-RATNAGIRI. - 415709 PH :9689533472.

KHOPOLI

1479. KIRAN MOTORS (9C02-01-), PLOT NO-68, VILLAGE-MULGAON, KHOPOLI INDUSTRIAL ESTATE, KHOPOLI, TALUKA-KHALAPUR DIST-RAIGARH - 410204 PH:8976791922, 8976791920.

KOLHAPUR

1480. SAI SERVICE PRIVATE LIMITED (3802-01-), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR -416008 PH 10231-2661676

1481. SAI SERVICE PRIVATE LIMITED (3803-01-), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS NH-4 KOI HAPUR - 416122

PH:0230-2468376.

1482. SAI SERVICE PRIVATE LIMITED (3802-06-), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA - 416012 PH 10231-2329494.

1483. KR MOTORS KOLKOHUR PVT LTD (3804-01-), PLOT NO. 216/2, 216/3, 216/5, NH-4, GOKUL SHIRGAON, KOLHAPUR. - 416234 PH: 9850500550, 7447755504.

KONGAON

1484. PRAKASH AUTO PVT. LTD. (3903-02-), SURVEY NO.126/127,98/38,AT & POST KONGAON, -421302 PH :9702809668/9870453155.

KOPARGAON

1485. SHAAN CARS PRIVATE LIMITED (COV1-01-), SURVEY NO. 15/36 GAWARE PATIL ESTATE, NAGAR MANMAD HIGHWAY, NEAR ASHOKA HOTEL, KOPARGAON. - 423 601 PH :9075028780.

KOREGAON BHIMA

1486. SAI SERVICE (BUO1-01-), GAT NO-373, VILLAGE-KOREGAON BHIMA, TALUKA-SHIRUR, DIST-PUNE. - 415501 PH :7774997005.

KUDAL

1487. JACRUT MOTORS PVT LTD (9801-01-), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA – KUDAL, DISTRICT – SINDUDURG, MAHARASHTRA - 416520 PH -88066457/28/08965235

KUDITRE

1488. SAI SERVICE (SRV1-01-), KUDITRE FACTORY PHATA, A/P - KOPARDE, TALLIKA-KARVEER, DIST-KOLHAPUR-416205. - 416205 PH:9923208460.

KURUDWADI

1489. CHAVAN MOTORS DIVISION INDIA PVT LTD (CUF1-01-), GAT NO.:256, BYPASS ROAD, A/P KURDA, TALLIKA-MADHA, DISTT. SOLAPUR. -413208 PH: 8806665691.

KURUNDWAD

1490. SAI SERVICE PVT. LTD. (BHO1-01-), GAT NO. 250, AT POST - KURUNDWAD, TALUKA -SHUROO, DIST.-KOLHAPUR. - 416106 PH:9673339695.

LANJA

1491. JAGRUT MOTORS (SER1-01-), GAT NO-663, TALUKA-LANJA, DIST - RATNAGIRI, MAHARASHTRA -416701 - 416701 PH :8108718346.

LASALGAON

1492. SHAAN CARS PRIVATE LIMITED (BZM1-01-), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA – NANDGAON, DISTRICT – NASHIK. - 422306 PH :9075028780. 7720094874.

LATUR

1493. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-01-), CITY SURVEY NO. 2960, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR -413512 PH 9807999095

1494. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-02-), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512 PH :9607999091/9607999092/9607999093/9607999094

LONAVALA

1495. SEHGAL AUTORIDERS PVT. LTD. (CGA1-01-). GATE NO. 120/1, VILLAGE – WAKSAI, TALUKA – MAVAL, LUNAVALA, DISTRICT – PUNE, MAHARASHTRA. - 410405 PH. 89753 73431.

MAHAD

1496. SIMRAN MOTORS PVT. LTD. (7S01-04-), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301 PH 9870404373

MALEGAON

1497. SHAAN CARS PRIVATE LIMITED (3703-02-), PLOT NO. 572/81, CHANDANPURI SHIVAR, OLD MUMBAI, AGRA ROAD, DIST- NASIK, MALEGAON - 423203

PH:9922969620/9922969656.

MANCHAR

1498. KOTHARI AUTO WHEELS PVT LTD (CSH2-01-), SOHAM NAGARI, A-WING, SHOP NO. 8 & 16, PUNE NASIK HIGHWAY, AP MANCHAR, TALUKA: AMBEGAON, DISTT: PUNE, MAHRASHTRA - 410503 PH :8411003608.

MANGALVEDHA

1499. CHAVAN MOTORS (SQR1-01-), NEAR SWARAJYA HOTEL, PANDHARPUR ROAD, CHOKAMELANAGAR, MANGALWEDHA, MAHARASHTRA, PIN-413305 - 413305 PH :8805778881.

MANGAON

1500. SIMRAN MOTORS PVT. LTD. (BAM1-01-), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASTHRA. - 402104 PH-9223181120

MANMAD

1501. SHAAN CARS PRIVATE LIMITED (BNX1-01-), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104 PH 9075028780. 8888832369

MANOR

1502. SAI SERVICE PRIVATE LIMITED (CRE1-01-), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST – TAKVAHAL, DISTRICT – PALGHAR, MANOR. -401403 PH. 9167980005.

MAYANI

1503. CHOWGULE INDUSTRIES (STQ1-01-), GAT NO -2101/1, 560/1, MAYANI VADUJ ROAD, A/P- MAYANI, TAL-KHATAV, DIST-SATARA-415102. - 415102 PH :888886669.

MIRA ROAD, THANE

1504. SUPREME AUTOMOBILES (3915-01-), BRILLIANT COMPLEX, WESTERN EXPRESS HIGHWAY, MIRA ROAD, THANE-401107. - 401107 PH: 8591942704.

MIRAJ

1505. CHOWGULE INDUSTRIES PVT. LTD. (J102-03-). 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA -416410 PH 10233-2643221 0233-264322

MORGAON

1506. MAHALAXMI AUTO (SRN1-01-), GAT NO-179, MORGAON, - TALUKA- BARAMATI, DIST-PUNE -412304 PH :3850994014.

MIIMRAI

- 1507. SAI SERVICE PRIVATE LIMITED (504-01-), 462 SENAPATI BAPAT MARG,WORLI NAKA,LOWER PAREL,MUMBAI - 400013 PH :9594952122/9594952088/9167980082.
- 1508. SAI SERVICE PRIVATE LIMITED (504-02-), ARVIND CHAMBERS, 194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069 PH -43030606 /600, 95949552341 / 9594952084 / 9594952250
- 1509. VITESSE PRIVATE LIMITED (503-01-), SHAH INDL.ESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058 PH
 - :02226730787/02226730280/02226730296/0226164 2500/02261642500
- 1510. VITESSE PRIVATE LIMITED (503-02-), 77 AF PALKY GULLY, OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025 PH :24229747/24223933/9821894915.
- 1511. SAH & SANGHI AUTO AGENCIES PVT.LTD (505-01-), PRAKASH MILLS COMPOUND, OFF. GLOBE MILLS PASSAGE, WORLI, MUMBAI -400013
 - PH:02224925452/02224925453/02224925454.
- 1512. SAI SERVICE PRIVATE LIMITED (504-04-), C/O SHAKTI INDUSTRIAL WIRE COMPOUND, DATTA PADA ROAD, BORIVILI (EAST), MUMBAI - 400066 PH. :28707000 / 9594057006 / 9594952344 / 9594957417
- 1513. EXCELL AUTOVISTA PVT LTD (510-01-), RESHAM SINGH COMPOUND, CST ROAD, KALINA, SANTACRUZ EAST, MUMBAI -400098
- PH :67743888,26653242, 43, 46 / 7666703636 / 9594972889 / 7715804477.

 1514. AUTOMOTIVE MANUFACTURERS PVT. LTD.
- (3901-04-), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAI - 400070 PH:61563734 / 61563744 / 61563713 /9167773925.

- 1515. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (521-02-), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096 PH -9694973889, 8422800747.
- 1516. SHIVAM AUTO ZONE (I) PVT. LTD. (531-01-). CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA -400067 PH

:7718893072/9152001329/8082551017/9870938888

- 1517. VITESSE PRIVATE LIMITED (503-07-), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067 PH :02228674753.
- 1518. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (521-03-), COV ARRUN STEEL INDUSTRIES, AAM TOOL COMPOUND, BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI 400010 PH :5954974678. 8691045341.
- 1519. SHIVAM AUTO ZONE (I) PVT. LTD. (531-02-), PLOT NO. 485, RAMCHANDRA LANE EXTN., OFF LINK ROAD, KANCHPADA, MALAD-WEST. MUMBAI. 400064. - 400064 PH-80R2551115/8637271124/9870938R88
- 1520. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-01-), PLOT NO.115/116/117 MIVERVA INDUSTRIAL ESTATE, MULUND-WEST, MUMBAI - 400080 PH: 810498983981049899847.
- 1521. KIRAN MOTORS (05A7-01-), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, GHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086. - 400086 PH. 9152004223/770988886.
- 1522. MY CAR (PUNE) PVT LTD (05A8-01-), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072 PH:8104907081.

MURBAD

1523. PRAKASH AUTO PVT. LTD. (BY01-01-), SURVEY NO. 61/2, KALYAN - MURBAD ROAD, VILLAGE – DAHAGAON, TALUKA – MURBAD, DISTRICT – THANE, MAHARASHTRA. - 421605 PH. 7798725726.

MURGUD

1524. SAI SERVICE PRIVATE LIMITED (AWA1-01-), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219 PH: 02325-265553.

MURTIZAPUR

1525. KHANDELWAL AUTOWHEELS (SHE1-01-), SURVEY NO 38, MAUJA SONORI, NH 06, NEAR HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA -444107

PH :8484063274. NAGPUR

1526. SEVA AUTOMOTIVE LTD. (2002-01-), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR -

440023 PH :0712-6652863.

1527. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-02-), 575 KAMPTEE ROAD,NAGPUR-26,, - 440026

PH:9673004226/9673004223.

- 1528. SEVA AUTOMOTIVE LTD. (2002-03-), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, - 440016 PH: 0712-666444.
- 1529. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-01-), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD, NAGPUR -440035
- PH :888859506/8888859534 1330. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-05-), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001 PH :9168699701/9673004277.
- 1531. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE () PVI. LTD (2007-01-), PLOT NO. 4, NEW COTTON MARKET, CHAT ROAD, NAGPUR, MAHARASTRA - 440018 PH :888859542
- 1532. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2007-02-), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASTRA. - 441202 PH :888820312.
- 1533. SEVA AUTOMOTIVE PVT. LTD. (2002-04-), PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED, KH NO. 45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027 PH :390446644.
- 1534. ARUN MOTORS (2008-01-), PLOT NO-9810, PATNI PLAZA, KHAMLA RING ROAD, SAWARKAR NAGAR, NAGPUR, MAHARASHTRA -440025 PH :7757988800/7028688800
- 1535. ARUN MOTORS (2008-02-), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028 PH :7757988800.

NALASOPARA

1536. SHIVAM AUTO (CUH1-01-), SURVEY NO. 91,92, PLOT NO. 7, VILLAGE- DHANIV, NALASOPARA, DIST. PALGHAR, MAHARASHTRA. - 401209 PH :9152001458/7777002930.

NANDED

1537. SEVA AUTOMOTIVE LTD. (6801-01-), NANDED HYDERABAD ROAD, NANDED - 431604 PH:7447415607.

NANDURBAR

1538. SEVA AUTOMOTIVE LTD. (P301-02-), P NO.-324, BASILAI NAGAR SHAHADA BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFULLY NANDURBAR-425412 - 425412 PH -7720017528

NARAYANGAON

1539. KOTHARI AUTO WHEELS PVT LTD (FV03-01-), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH: 8411003608

NASHIK

- 1540. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3702-01-), P-1-12, ADDITIONAL NASIK INDL. AREA, AMBAD, NASIK - 422010
- PH :0253-6636329/ 319/312/313/314/317. 1541. SEVA AUTOMOTIVE LTD. (3701-01-), PLOT NO. X -46,MIDC. AMBAD, NASIK - 422010 PH :0253-6644444.
- 1542. SHAAN CARS PRIVATE LIMITED (3703-01-), E-3 MIDC AREA, SATPUR, NASIK, MAHARASHTRA -422007 PH: 9075028780, 9922969646
- 1543. SHAAN CARS PRIVATE LIMITED (3703-04-), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011 PH :0253-2236080.
- 1544. SEVA AUTOMOTIVE LTD. (3701-06-), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH 9146000709
- 1545. SEVA AUTOMOTIVE PVT LTD (3701-07-), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006 PH 1055-8634M44
- 1546. SEVA AUTOMOTIVES PVT LTD (3701-08-), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH :0253-665444.

NAVI MUMBAI

1547. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-01-), D-234 MIDC TTC INDL AREA, SHIRVANE NERUL, NEW BOMBAY, -400706

PH:66143900/66133923/66143924.

1548. SIMRAN MOTORS PVT. LTD. (3913-01-), CAMEO FABRIC COMPANY, GEN 16, NEAR SULZER COMPANY, DIGHA, TTC AREA, AIROLI - 400701 PH :8788582329, 8369658212.

NEVASA

1549. KANKARIYA AUTOMOBILES PVT. LTD. (BSU1-01-), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA – NEVASA, DISTRICT – AHMEDNAGAR. - 414603 PH :9420494601.

NIPHAD

1550. SHAAN CARS PVT. LTD. (COX1-01-), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT – NASHIK, MAHARASHTRA. -422303 PH 9075028780

OSMANABAD

1551. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-03-), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501 PH:8888867861

OTUR

1552. KOTHARI AUTO WHEELS PVT LTD (SLG2-01-), GAT NO-184/3/B, ALEPHATA-KALYAN ROAD, OPP HP PETROL PUMP, VILLAGE-OTUR, TALUKA- JUNNAR, DIST-PUNE - 412409 PH :8411003608

PABAL

1553. MAHALAXMI (SKB1-01-), 3733, SHINALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403 PH :8956288087.

PAITHAN

1554. PAGARIYA AUTO PVT. LTD. (BNQ1-01-), GAT NO-277, MAUZA- PAITHAN, TALUKA- PAITHAN, DIST - AURANGABAD 431107. - 431107 PH: 9922994237.

PALGHAR

1555. SAI SERVICE PRIVATE LIMITED (TE01-01-), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404 PH -9167980042/9167980005/9594952211

PALUS

1556. CHOWGULE INDUSTRIES PVT. LTD. (J102-04-), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308 PH: 8888870122.

PANDHARPUR

1557. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-05-), GAT NO.56, ESABAVI, PUNE ROAD, TAL:PANDERPUR, SOLAPUR - 413001 PH:7774997005.

PANVEL

- 1558. SIMRAN MOTORS PVT. LTD. (7S01-01-), PLOT2-8, SECTOR-15, OPP. HOTEL GARDEN, OLD MUMBAI PUNE HIGHWAY, PANVEL - 410206 PH: 8291957798. 8657443202.
- 1559. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-03-), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206 PH

:9769202055/9769206045/9769206018/8291467042

PARATWADA

1560. ASPA BANDSONS AUTO PVT. LTD. (CFZ1-01-), SURVEY NO. 26/4A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA – ACHALPUR, DISTRICT – AMRAVATI. - 444 805 PH: 9888897629

PARBHANI

1561. PAGARIYA AUTO PVT. LTD. (LN02-01-), SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI - 431401 PH 9511868433

PATAS

1562. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-03-), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH :8888890957.

PEN

1563. SIMRAN MOTORS (9101-01-), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107 PH 9503381198

PHALTAN

1564. CHOWGULE INDUSTRIES PVT. LTD. (KH02-01-), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523 PH. 3888886301.

PIMPLEGAON

1565. AUTOMOTIVE MANUFACTURERS PVT. LTD. (BAY1-01-), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202 PH: 02550-25208.

PIRANGUT

1566. MY CAR (SEC1-01-), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108. - 412108 PH: 9325424613.

PUNE

1567. SAI SERVICE PRIVATE LIMITED (1901-01-), BOMBAY PUNE ROAD, FUGEWADI, PUNE -411012

PH :020-46404440/020-46404448. 1568. SAI SERVICE PRIVATE LIMITED (1901-02-), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE -411004

PH:9923208347.

1569. CHOWGULE INDUSTRIES PVT. LTD. (1908-02-), S.NO. 53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046 PH :020-66786200.

- 1570. SAI SERVICE PRIVATE LIMITED (1901-03-), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH :9923208345.
- 1571. WONDER CARS PVT LTD (1903-02-), 12, NPS LINES, SOLAPUR ROAD, OLD POOL GATE, CAMP, PUNE - 411001 PH 1020-26339934/35
- 1572. KOTHARI AUTO WHEELS PVT LTD (1984-01-), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH:7498272309.
- 1573. MY CAR (PUNE) PVT. LTD. (1907-01-), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057 PH :020-67922900.
- 1574. ACE KUDALE CAR PVT. LTD. (1910-01-), 36/2C/1, MANRAJ BUDRUK, PUNE-SOLHAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE - 412201 PH: 9552582454.
- 1575. CHOWGULE INDUSTRIES PVT. LTD. (1911-01-), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046 PH :0206803555/0206803550.
- PH: 02066803555/02066803500. 1576. SAI SERVICE PRIVATE LIMITED (1901-05-), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PLINE - 411019.
- PH:020-46605999/020-46605995. 1577. SEHGAL AUTORIDERS PVT. LTD. (1913-01-), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021 PH:8308304444, 020-41463625, 020-41463627.
- 1578. SAI SERVICE PRIVATE LIMITED (1901-06-), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE, MAHARASHTRA - 411057 PH: 9923208302.
- 1579. ACE KUDALE CAR PVT. LTD. (1910-02-), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMAL, BHOSARI, PUNE. -411039 PH. 9552193904.
- 1580. KOTHARI AUTO WHEELS PVT LTD (1984-03-), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019 PH :9168662302.

- 1581. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-03-), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH - 3888874980
- 1582. WONDER CARS PVT LTD (1903-03-), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. 411018
 - PH:020-46608888.
- 1583. SAI SERVICE PRIVATE LIMITED (1901-07-), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. -411048 PH. 9923208358.
- 1584. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-04-), NO.485/1. CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016 PH :888842887.
- 1585. CHOWGULE INDUSTRIES PVT. LTD. (1908-05-), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) -411033 PH :020-67915700
- 1586. SAI SERVICE PRIVATE LIMITED (1901-08-), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT-PUNE, MAHARASHITRA. - 411 041 PH :992308312
- 1587. KOTHARI AUTO WHEELS PVT LTD (1984-05-), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028 PH: 8411002005. 8087060432.
- 1588. CHOWGULE INDUSTRIES PVT. LTD. (1908-06-), SR. NO. - 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE-SATARA ROAD, PUNE. - 411009 PH 1020-67273200
- 1589. EXCELL AUTOVISTA PVT LTD (1917-01-), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST PUNE. -412308 PH. 9594632888/9146052651.
- 1590. KOTHARI AUTO WHEELS PVT LTD (1984-06-), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181-6180), WADGOON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH: 841103631.
- 1591. ACE KUDALE CAR PVT. LTD. (1910-03-), SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA – HAVELI, DISTRICT – PUNE. - 412105 PH.:7767814381.

- 1592. SUMANKIRTI CARS PVT. LTD. (1915-02-), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUMM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH: 3651990106.
- 1593. MY CAR (PUNE) PVT. LTD. (1918-01-), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE – KURULI, TALUKA – KHED, CHAKAN, DISTRICT – PUNE. -410501
- PH: 7755900000.

 1994. WONDER CARS PVT LTD (1903-04-), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA MULSHI, DANGE CHOWK, PUNE 411 033. 411033
 PH: 7887883311.

PUNE (LOHEGAON)

1595. MAHALAXMI AUTO (1912-05-), LANE NO 9, SANT NAGAR, BEHIND IOCL PETROL PUMP, LOHEGAON, PUNE, MAHARASHTRA-411047 - 411047 PH :8956045076

RAHATA

1596. KANKARIYA AUTOMOBILES PVT. LTD. (ZV03-01-), SHIRDI ROAD, SAKORI, RAHATA, -423107 PH :8275033313

RAHURI

1597. KANKARIYA AUTOMOBILES PVT. LTD. (COZ1-01-), TRIMURTI CRANE SERVICE, NAGAR-MANIMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH:9420036767.

RAJAPUR

1598. JAGRUT MOTORS PVT LTD (AHA1-01-), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702 PH :9527623663/8806665572

RAJGURUNAGAR

1599. MY CAR (PUNE) PVT. LTD. (CBZ1-01-), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH. 9112231553.

RAMTER

1600. SEVA AUTO (BTU1-01-), MOUZA NO 275, P H NO 24, GRAM PANCHAYAT - MANSAR, TEHSIL -RAMTEK, DISTRICT - NAGPUR, MAHARASHTRA. - 441401 PH. 7758028060.

RATNAGIRI

1601. JAGRUT MOTORS PVT LTD (G301-01-), D-25, MIDC MIRJOLE, MAHARASTRA, RATNAGIRI - 415639 PH : 2352228380/9130013172

ROHA

1602. EXCELL AUTOVISTA (COS1-01-), SHOP NO. 1 & 2, PANCHARATNA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109 PH :9209200073.

SANGAMNER

1603. SHAAN CARS PRIVATE LIMITED (HE03-01-), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMMER, DIST AHMEDNAGAR, MAHARASHTRA - 422605 PH 102425-259191

SANGLI

- 1604. CHOWGULE INDUSTRIES PVT. LTD. (J102-01-), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH. 9863096805.
- 1605. SIDDHI WHEELS (J104-01-), SR NO. 917//2/B, SANGLI MIRAJ ROAD, MIRAJ, DISTRICT - SAGLI. - 416410 PH 9371727001 0233-2211610/1620/1630

SANGOLA

1606. CHAVAN MOTORS DIVISION INDIA PVT LTD (CUE1-01-), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA -SANGOLA, DIST.-SOLAPUR. - 413307 PH.880665691.

SASWAD

1607. CHOWGULE INDUSTRIES PVT. LTD. (1908-03-), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE -412301 PH :02115224450/02115225210.

SATANA

1608. SHAAN CARS (BSW1-01-), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 - 423301 PH :9922969656.

SATARA

1609. CHOWGULE INDUSTRIES PVT. LTD. (F303-01-), PLOT NO. B-2,OLD MIDC,SATARA - 415002 PH:9011015066/9850966823

SAVNER

1610. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE () PVT. LTD) (BTJ1-01-), PLOT NO.2, MADANE LAYOUT, MOUZA GUJARKHEDI, NR. NIDIAN PETROL PUMP, NAGPUR ROAD, SAVNER DISTT. NAGPUR, -441107 PH :888889546.

SAWANTWADI

1611. JAGRUT MOTORS PVT LTD (BBL1-01-), SHIVSHAMBHO APARTMENT, 1190, AP KOLGAON, SURVEY NO.187, HISSA NO.338, TAL-SAWANTWADI, DISTT. SINDHUDURG. -416510 PH 9970654699 9689533472

SHAHAPUR

1612. SHIVAM AUTO ZONE (I) PVT. LTD. (BZU1-01-), DR. DESHPANDE COMPOUND, NEAR BHATSA COLONY, VILLAGE – GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT – THANE, MAHARASHTRA - 421601 PH 7718893483

SHAHUWADI

1613. SAI SERVICE (BFT1-01-), GATE NO. 1213, R/AT DONOLI, TALUKA - SHAHUWADI, DIST. -KOLHAPUR - - 416 213 PH :9923208448.

SHILTPATA

1614. VELOX MOTORS (SGJ1-01-), SURVEY NO- 99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTA MANDIR, POST-PADALE, DIST-THAME, PIN-421204. - 421204 PH :8419984188.

SHIRUR

1615. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-02-), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA - 412210 PH. 3888837082 (9011038682.

SHIRWAL

1616. CHOWGULE INDUSTRIES PVT. LTD. (BSD1-01-), GAT NO.175, AP SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH:9637399003.

SHRIRAMPUR

1617. KANKARIYA AUTOMOBILES PVT. LTD. (LV03-01-), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709 PH :9420494543.

SIKRAPUR

1618. EXCELL AUTOVISTA PVT LTD (GKJ1-01-), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PIN-412208, PUNE - 412208 PH. 9146194973.

SILLOD

1619. PAGARIYA AUTO PVT. LTD. (2103-04-), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213.

SINNAR

1620. SHAAN CARS PRIVATE LIMITED (3703-03-), A-24, MIDC AREA MALEGAON, SINNAR TAL- SINNAR, - 422103 PH :02551-230305.

SOLAPUR

- 1621. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-02-), 150, AKALKOT ROAD, OPP. SVCS HIGH SCHOOL, SOLAPUR, - 413006 PH: 0217-2606666/8805986818.
- 1622. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-01-). 18,39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224 PH :8805778881
- 1623. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-06-), PLOT NO.95, IND. ESTATE, HOTAGI ROAD, SOLAPUR. - 413003 PH :8805986826.

TALASARI

1624. SHIWAM AUTO ZONE (I) PVT. LTD. (BIN1-01-), SURVEY NO. 191/1 PLOT NO. 5, AT-POST – VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606 PH 6355/2814/3/777007930

TALEGAON

1625. MY CAR (PUNE) PVT. LTD. (4K01-01-), SR.NO.113, HISSA NO.1/3/2/A, MUMBAI PUNE OLD HIGHWAY, MAVAL, TALEGAON - 410506 PH :9730855855

TALOJA

1626. EXCELL AUTOVISTA PVT LTD (AAC1-02-), PLOT NO-9,MIDC,NAVADE,TALOJA, TAL-PANVEL ,DIST-RAIGAD - 410208 PH :9136948195/9320357300.

TASGAON

1627. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVT. LTD.) (GKB1-01-), SHETKARI MARKET, NEAR ISHA HOTEL, TASGAON-SANGLI ROAD, TALUKA - TASGAON, DIST.-SANGLI. - 416312 PH :8275030748.

THANE

- 1628. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-01-), KOTHARI WAREHOUSE NO. 111,POKHRAN ROAD NO. 11,MANPADA, CHATALSAR,THANE - 400607 PH 9504974658 R891039873
- 1629. NAVNEET MOTORS (3908-02-), B R T PLOT ,THANE (W) ,MAHARASHTRA - 400607 PH :9664496732, 9167215178.

1630. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-02-), NEW SURVEY NO. 171/18, NEAR BLUE ROOF CLUB, VILLAGE - OWALE, GHODBUNDER ROAD, THANE (W). - 400615 PH : 8104989847 96536 88455.

TITWALA

 AHER AUTOPRIME (BYP2-01-), SURVEY NO. 23/2, SHOP NO. 3, NEAR GOVELI, TITWALA ROAD, CHOTSAI, TITWALA, PIN-421301, MAHARASHTRA - 421301 PH :18008334369.

TUMSAR

1632. AML (SLV1-01-), GAT NOS. 1350/149 & 1350/150, VILLAGE TUMSAR, TQ TUMSAR, DIST.-BHANDARA, STATE-MAHARASHTRA - 441912 PH :739/075992

TURBHE

1633. SAI SERVICE (504-06-), D 42, TTC INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 - 400705 PH: 022-268611111/ 8976999060

ULHASNAGAR

1634. PRAKASH AUTO PVT. LTD. (3903-01-), U NO-3, SHEET NO. 30, VITHALWADI STATION ROAD, ULHASNAGAR - 421003 PH 9987992127/9870453155

URALI KANCHAN

1635. EXCELL AUTOVISTA PVT LTD (CKI1-01-), GAT NO-244, VILLAGE-SORTAPWADI, TALUKA -HAVELI, URULI KANCHAN, DIST-PUNE, PIN-412201 - 412201 PH :8097452280

VADUJ

1636. CHOWGULE INDUSTRIES PVT. LTD. (F303-03-), KALEVASTI, VADUJ DAHIWADI ROAD, VADUJ -415506 PH: 8888866659

VAIJAPUR

1637. PAGARIYA AUTO PVT. LTD. (BNR1-01-), NEAR SUBHASH BUNGLOW, STATION ROAD, VAIJAPUR, AURANGABAD. - 423701 PH :9922994237.

VASAI

1638. SAI SERVICE PRIVATE LIMITED (V901-01-), ANDRADESH BHAVAN, SURVEY #27 A.NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASTRA - 401202

PH -9167980080/9167980038/9594952211.

1639. AJ SERVICE PRIVATE LIMITED (60-40-3), C/O MR. KENNETH NICHOLAS D'SOUZA, SURVEY NO-99, SATVALI ROAD, VILLAGE-WALIV, VASAI (EAST), DIST-PALGHAR, MAHARASHTRA, PIN-410208 - 401208 PH -9167980004/9167980084/9594950000.

VASHI

1640. MY CAR (PUNE) PVT. LTD. (05A4-01-), A-751/2, MIDC TTC. TURBHE MAHAPE ROAD, PAWANE, NAVI MUMBAI - - 400 071 PH :8104906953, 9372802861, 9326713481.

VELHE

1641. SUMANKIRTI CARS (SLO1-01-), MAUZA NO-492/2, A/P-VELHA, TAL- VELHA, DIST-PUNE-412212 - 412212 PH :8554981603/8550995444.

VIKRAMGADH

1642. SHIVAM AUTOZONE (SKV1-01-), NEAR GOVERNMNET DISPENSARY HOSPITAL, DAHANU ROAD, TEHSIL-VIKRAMGADH, DIST-PALGHAR-401605 - 401605 PH :8082551080.

VIRAR

1643. SAI SERVICE PRIVATE LIMITED (V901-02-), SURVEY NO.16, AGASHI ROAD, PADMAN NAGAR, VIRAR-WEST, DISTT. PALGHAR. -401301 PH. 9594952343/9167980036/9594952211.

VITA

1644. CHOWGULE INDUSTRIES PVT. LTD. (BSE1-01-), S NO. 900, HISSA NO. 1,2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA – KHANAPUR, DISTRICT – SANGLI, MAHARASHTRA - 415311 PH:8888870120.

WAGHOLI

1645. SAI SERVICE PRIVATE LIMITED (1901-04-), GAT NO 2406/1440, VILLAGE- WAGHOLI, TAL- HAVELI, DIST- PUNE - 412207 PH :9923208313/9923208221/9923208133.

WAI

1646. CHOWGULE INDUSTRIES PVT. LTD. (BYC1-01-). GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL – WAI, DISTT. SATARA - 412803 PH :8380080501.

WALUJ

1647. PAGARIYA AUTO PVT. LTD. (2103-03-), E-16,WALUJ,AURANGABAD - 431001 PH :9860999466.

WARANANAGAR

1648. SAI SERVICE PRIVATE LIMITED (CRB1-01-), GAT NO.:1122IA, KODOLI, TALUKA: PANHALA, DIST. KOLHAPUR - 416114 PH :9923204173.

WARDHA

1649. SEVA AUTOMOTIVE LTD. (2002-02-), GOPURI CHOWK, OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001 PH: 07152-25345/253525. 1650. SEVA AUTOMOTIVE PVT. LTD. (2002-05-), PLOT NO. 177, WARDHA-NAGPUR HIGHWAY, AT. PAVNAR, TEHSIL - WARDHA, DIST.-WARDH, PIN-442111, MAHARASHTRA - 442111 PH. 7720000444

WARUD

1651. ASPA BANDSONS AUTO PVT. LTD. (F201-04-), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906 PH : 7248925687

WASHIM

1652. ASPA BANDSONS AUTO PVT. LTD. (F201-02-), NEAR RAILWAY CROSSING,HIGOLI ROAD,WASHIM, - 444505 PH: 9922500981/9146191534.

YAVATMAL

1653. HIMALAYA CARS (4M01-01-), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001 PH: 07232-249991.

YEOLA

1654. SEVA AUTOMOTIVES PVT LTD (BST1-01-), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANIMAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALLIKA – YEOLA, DISTRICT – NASHIK, MAHARASHTARA. - 423401 PH: 9130033944.

YEWAT

1655. MAHALAXMI AUTOMOTIVES PVT. LTD. (AZA1-01-), SOLAPUR PUIEN NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). -412202 PH: 3308818946.

MANIPUR

BISHNUPUR

1656. EASTERN MOTORS (CSA1-01-), BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR DISTT. MANIPUR. - 795126 PH: 8415945626.

CHANDEL

1657. EASTERN MOTORS (CSB1-01-), KAKCHING LAMKHAI, AH1 (INDO BURMA ROAD), CHANDEL (MANIPUR) - 795103 PH :8415945626.

CHURACHANDPUR

1658. EASTERN MOTORS (BBE1-01-), HMUIA VENG, TEDDIM ROAD, CHURACHANDPUR, MANIPUR - 795128 PH :03874235969, 9862555472.

IMPHAL

1659. EASTERN MOTORS (7401-01-), CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795 001 PH:8415945626.

1660. EASTERN MOTORS (7401-02-), NH,39, CHINGMEIRONG, WEST, IMPHAL. - 795010 PH:8415945626

1661. SAMADON ENTERPRISE (7402-01-), 82 GHARI MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795 140 PH:7005987123.

JIRIBAM

1662. EASTERN MOTORS (SMG1-01-), AT HILGHAT, IMPHAL SILCHAR ROAD, JIRIBAM - 788104 PH:8415945626.

SENAPATI

1663. EASTERN MOTORS (CNN1-01-), DIST.-COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI, SENAPATI, MANIPUR. - 795 106 PH:8415945626.

THOUBAL

1664. EASTERN MOTORS (BJL1-01-), THOUBAL ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138 PH :986266225

UKHRUL

1665. SAMADON ENTERPRISE (SCK1-01-), KAMPHASOM, UKHRUL, MANIPUR - 795142 PH:9774216305

MEGHALAYA

BHAITBARI

1666. RANI MOTORS (--), NEW BHAITBARI, WEST GARO HILLS, MEGHALAYA, (PATTA NO - 89 SONO - NEKEKONA, MOZUZA NO - VI- 3 LOT) -794104 PH. 8638220312.

BHOIRYMBONG

1667. RANI MOTORS (CHP1-01-), VILLAGE – UMROI MADAN, DISTRICT – RI BHOI, MEGHALAYA. -793103 PH : 9774478281

JOWAI

1668. RANI MOTORS (3101-01-), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150 PH:7085849525.

KHLIEHRIAT

1669. BANALARI WORLD CARS (8502-03-), JOWAI-SICHAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150 PH :7005757760/7005569550.

MAWKYRWAT

1670. RANI MOTORS (CGR1-01-), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGALAYA - 793114 PH :9856005544.

MAWNGAP

AIZAWL

1671. BANALARI WORLD CARS (CBK1-01-), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST.-EAST KHASI HILLS, MEGHALAYA. - 793121 PH.7005757760/7005569550.

MOIRANG

1672. SAMADON (SLD1-01-), MOIRANG LAISHANGBAM LEIKAI, PO AND PS: MOIRANG, DIST-BISHNUPUR, MANIPUR - 795133 PH : 7005987122

MYLLIEM

1673. BANALARI WORLD CARS (CSK1-01-), MADANIING SYIEM, MYLLIEM, SHILLONG CHERRAPUNJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009 PH :7005757760/7005569550.

NONGPOH

1674. RANI MOTORS (8501-05-), NEAR D.T.O. OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT. -793102 PH 9774478281

NONGSTOIN

1675. RANI MOTORS (8501-04-), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119 PH :9856005544

PYNURSULA

1676. BANALARI CAR WORLD (CBJ1-01-), PHLANGSHLAIN MAIN ROAD, SHILONG DAWKI, PYNURSLA, DISTRICT - EAST KHASI HILLS, MEGHALAYA - 793110 - 793110 PH :8415942700

SHILLONG

1677. RANI MOTORS (8501-01-), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014 PH :9862099400.

1678. RANI MOTORS (8501-02-), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021 PH:8014734780.

1679. BANALARI WORLD CARS (8502-01-), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017 PH :7005757760/7005569550

TURA

1680. RANI MOTORS (CLF1-01-), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101 PH:7005563791.

UMSAW

1681. BANALARI WORLD CARS (CHZ1-01-). UMSAWKHWAN RAID MAWBUH, MYLLIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. -793123 PH. 7005757760/7005599550.

MIZORAM

1682. G.I.G. MOTORS (9103-01-), EDENTHAR, AIZAWL, MIZORAM. - 796001 PH :8974559065

LUNGLEI

1683. GIG (YS01-01-), RAMTHAR VILLAGE, LUNGLEI, DISTRICT-LUNGLEI, MIZORAM - 796701 PH :8974559065

MP

BHANPURA

1684. PATEL MOTORS (--), GAROTH RD., BHANPURA, MADHYA PRADESH - 458775 - 458775 PH :9826360699

BHOPAL

1885. SRISATYA SAI AUTOMOBILES PVT. LTD.
(310-1). PALENDRA PRASAD BHAWAN
PARISHAR, INFRONT OF OLD VIDHAN SABHA
BUILDING, PO – JAHANGIRABAD, MALVIYA
NAGAR, BHOPAL, IDSTRICT – BHOPAL,
MADHYA PRADESH – 462008. - 462008
PH. 7415862390.

BICHHIYA

1686. MAA GAYATRI AUTOMOBILES (SMK1-01-), SALPURA ROAD, ATRU, NEAR DEPUTY OFFICE, PIN-325218, RAJASTHAN - 481995 PH. 9303143327.

NAINPUR

1687. STANDARD MOTOCORP PVT LTD (SEZ2-01-), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJAJ SHOW ROOM, NAINPUR, DISST MANDLA, MADHYA PRADESH -481776. 481776 PH :7771003374.

NIWAS

1688. STANDARD MOTOCORP (-), OPP. INDIAL OIL PETROL PUMP, NIWAS, DISTRICT MANDLA, MADHYA PRADESH – 483001. - 483001 PH:7800806222.

NAGALAND

DIMAPUR

1689. PROGRESSIVE MOTORS (3201-01-), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112 PH : 7005254089.

KOHIMA

1690. SEYIE AUTO (4N02-01-), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001 PH:7005867051.

MOKOKCHUNG

1691. PROGRESSIVE MOTORS (CGL1-01-), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601 PH :87877325534.

WOKHA

1692. PROGRESSIVE MOTORS (SFH1-01-), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111 PH 9774070707

NEW DELHI

DELHI (GTK)

1693. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F2-02-), GROUND FLOOR, PLOT NO. C-7, SMA CO-OPERATIVE INDUSTRIAL AREA, GTK ROAD, AZADPUR, PIN-110033, DELHI - 110033 PH - 9873187388

NEW DELHI

1694. COMPETENT AUTO (806-08-), 43/12, NAJAFGARH BAHDURGARH ROAD, NEW ANAJ MANDI, NEAR JAAT BHAWAN, NAJAFGARH, PIN-110043, DELHI - 110043 PH:8750700420.

ODHISA

ATTAGARH

1695. TUSHI (SLZ1-01-), KHATA NO 212/420,MOUZA :BIRAKISHOREPUR ATHAGARH, DISTRICT: CUTTACK - 754029 PH :7504890838.

ODISHA

ANANDAPUR

1696. JYOTE MOTORS PVT LTD (CIUZ-01-), KHATA NO. 246/407, PLOT NO. 76, P.S. – GHASIPURA, MOUZA – SUDUSUDIA, DISTRICT – KEONJHAR, ANANDPUR, ODISHA. - 758021 PH :7381028525.

ANGUL

1697. ODYSSEY MOTORS PVT LTD (W101-01-), AT/PO-KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). -759145 PH -9439817308

BALASORE

1698. JYOTE MOTORS (BALASORE) PVT. LTD (L501-01-), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019 PH:7381072600.

BALUGOAN

1699. JYOTE MOTORS (CWG1-01-), M/S PLOT NO 758/31,KHATA NO 350/30,MOUZA-GOBARDHANPUR,BALUGAON, DISTRICT-KHORDA,ODISHA-752030 - 752030 PH :9776615001.

BAMRA

1700. ODYSSEY MOTORS (SIA1-01-), M/S ODYSSEY MOTORS, NEAR SATSANG KENDRA, DUMERMUNDA COLLEGE ROAD, BAMRA, GOVINDPUR-768221. - 768221 PH -043931444

BARGARH

1701. ODYSSEY MOTORS PVT LTD (D401-04-), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA -768028 PH: 8908944206

BARIPADA

1702. JYOTE MOTORS (BALASORE) PVT. LTD (L501-02-), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001 PH :7381072624.

BERHAMPUR

- 1703. SKY AUTOMOBILES (E203-01-), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002 PH :7381266000.
- 1704. SKY AUTOMOBILES (E203-02-), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE – KONISI, BERHAMPORE, GANJAM, ODISHA. -761008 PH.7381266000.

BHADRAK

1705. JYOTE MOTORS (BALASORE) PVT. LTD (IZ01-01-), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK, ODISHA - 756101 PH -9776345311

BHAWANIPATNA

1706. LEGEND CARS PVT. LTD. (SW01-02-), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001 PH :9937198684

BHUBANESHWAR (NAYAPALLI)

1707. JYOTE MOTORS PVT LTD (405-01-), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-751 003 - 751003 PH :7381028525

BHUBANESWAR

- 1708. NARAYANI MOTORS PVT. LTD. (403-01-), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR -751006 PH 9583022031.
- 1709. JYOTE MOTORS PVT LTD (402-01-), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003 PH:7064493302.
- 1710. SKY AUTOMOBILES (404-01-), PLOT NO. -435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022 PH:8117829611.

- 1711. NARAYANI MOTORS PVT. LTD. (403-02-), PLOT NO 56 AND 57, RASULGARH, BHUBANESHWAR, ODISHA - 751010 PH 9583022046.
- 1712. JYOTE MOTORS PVT LTD (402-04-), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010 PH - 7978910223
- 1713. SKY AUTOMOBILES (404-02-), KHATA NO.
 457/675, PLOT NO. 543, 756, 789 AND 546,
 SRIVIHAR, INFRONT OF IOCL OFFICE, P.S.
 -CHADRASHEKARPUR, BHUBANESHWAR,
 ODISHA. 751 024
 PH 7440011604

BOLANGIR

1714. ODYSSEY MOTORS PVT LTD (D401-03-), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001 PH :8895418122

CHANDIKHOLE

1715. SKY AUTOMOBILES (BXL1-01-), PLOT NO.285/3, SHANTI MANDAP MOUZA - SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. - JAJPUR, ODISHA, - 755044 PH - 9776645798.

CUTTACK

- 1716. SKY AUTOMOBILES (6701-02-), BHANPUR, NH-5, CUTTACK 753011 PH :9776645798.
- 1717. TUSHI MOTORS PVT. LTD. (6702-01-), PLOT NO. C-14, PLOT NO. C-13, INDUSTRIAL ESTATE ,KHAPURIA,TAHASIL CUTTACK SADAR ,CUTTACK DISTRICT,BHUBANESWAR 753001 PH :9692912345.

DEOGARH

1718. ORBIT MOTORS PVT. LTD. (CBB1-01-), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA -768108 PH: 9437607865.

DHENKENAL

1719. SKY AUTOMOBILES (6701-04-), PLOT NO-136/1103, KATHAGARA, NEARASSAM OIL, NH-42, DHENKANAL. - 759001 PH:7440025919.

GANDAI

1720. SPARSH AUTOMOBILES (SHU1-01-), M/S SPARSH AUTOMOBILES, (WARD NO – 7, NEAR KRISHI UPAJ MANDI, GANDAI RAJNANDGAON ROAD,GANDAI – 491888 - 491888 PH :9926626662

JAGATSINGHPUR

1721. NARAYANI MOTORS PVT. LTD. (CFM1-01-), KHATTA NO. 827/221 & 827/222, PLOT NO. 1197 & 11993/065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSINGHPUR, ODISHA -754103 PH 9556511213

JAJPUR

1722. SKY AUTOMOBILES (6701-05-), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA -7553019 PH :9583011010.

JALESWAR

1723. JYOTE MOTORS (BALASORE) PVT. LTD (BXP1-01-), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.-BALASORE, ODISHA. - 756032 PH. 7381072600

JEYPORE

1724. LEGEND CARS PVT. LTD. (SW01-03-), SOURAGUDA, JEYPORE, DISTT-KORAPUT, ORISS A, INDIA - 764001 PH :9437575188

JHARSUGUDA

1725. ODYSSEY MOTORS PVT LTD (BJU1-01-), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201 PH -9439548873

KEONJHAR

1726. JYOTE MOTORS PVT LTD (7U01-01-), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001 PH : 7064499047

NAYAGARH

1727. JYOTE MOTORS PVT LTD (402-02-), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069 PH:7064499048.

NIMPARA

1728. NARAYANI MOTORS PVT. LTD. (CFL1-01-), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA. - 752106 PH. 7381093622.

PALLAHARA

1729. ODYSSEY MOTORS PVT LTD (CHV1-01-), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119 PH :9439817308.

PARADEEP

1730. NARAYANI MOTORS PVT. LTD. (OE01-01-), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. -754141 PH :9583022020.

PARLAKHEMUNDI

1731. SKY AUTOMOBILES (CLG1-01-), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211 PH: 9776999977.

PURI

1732. NARAYANI MOTORS PVT. LTD. (4001-01-), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002 PH-9883027270

RAIRANGPUR

1733. JYOTE MOTORS (BALASORE) PVT. LTD (CES1-01-), PLOT NO.1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA -757046 PH.7064499936.

RAYAGADA

1734. LEGEND CARS (YB01-01-), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001 PH :7008771180

ROURKELA

1735. ORBIT MOTORS PVT. LTD. (8701-01-), VEDVYAS, NEAR PAAHADI BAR, ROURKELA, ORRISA - 769041 PH :9437061040

SAMBALPUR

- 1736. ODYSSEY MOTORS PVT LTD (D401-01-), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH :7381083571.
- 1737. APARNAA MOTORS (A UNIT OF APARNAA VAHAN) (D402-01-), PLOT NO 969/4497, PANCHGACHIA SAMBALPUR - 768019 PH :8260966698.
- 1738. ODYSSEY (D401-05-), ODYSSEY MOTORS, AINTHAPALI, SAMBHALPUR - 768004 PH:9692200963.

SORO

1739. JYOTE MOTORS (SQF1-01-), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE. - 756045 PH :9776615001.

SUBARNAPUR

1740. ODYSSEY MOTORS PVT LTD (BUK1-01-), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNPUR, ODISHA - 767017 PH :8895418122.

SUNDERGARH

1741. ORBIT MOTORS PVT. LTD. (BWJ1-01-), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH:8249354447.

TANGI

1742. SKY AUTO (SKM1-01-), KHATA NO 731/18, PLOT NO,107,CHAMPAGARH NH 5,TANGI, DISTRICT – KHORDHA, - 752023 PH:9776900333.

UDALA

1743. JYOTE MOTORS (BALASORE) PVT. LTD (CHW1-01-), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA. - 757041 PH :8249877935

ODISHAN

NIRGUNDI

1744. NARAYANI (403-04-), KHATA NO 251/255, PLOT NO 233, MALGOWDINI-MOUZA BLITERUA, NIRGUNDI, DISTRICT-CUTTACK, ORISSA. -754025 PH :9583001877.

ORISSA

IIIDANECWAD

BHUBANESWAR

1745. NARAYANI (403-03-), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUABNESHWAR - 751025 PH 9583001877.

KENDRAPARA

1746. JYOTE MOTORS (SFI1-01-), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. -754/208 PH-9776615001.

KUCHINDA

1747. ODYSSEY MOTORS (SLN1-01-), /S ODYSSEY MOTORS, PLDT NO 146, KHATA NO 769, MOUZA-KUNDAPOSHI, NEAR KUNDESHWAR MANDIR, KUCHINDA, SAMBULPUR. - 768222 PH : 9439314464.

PADAMPUR

1748. ODYSSEY MOTORS (SFB1-01-), M/S ODYSSEY MOTORS, CHARPALLI, PADAMPUR, NEAR REGENCY HOTEL, DISTRICT: BARGARH, ORISSA - 770039 PH :9439314464.

PUDUCHERRY

KARAIKAL

1749. SHENBAKA CARS PVT. LTD. (CCF1-01-), R. S. NO. 173/3PT, T. S. NO. 93; WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE— ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL. - 609602 PH: 04368-227800/12.

MADAGADIPET

1750. SHENBAKA CARS PVT. LTD (CUD1-01-), SURVEY NO. 129/4/A/2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605 107 PH :8220046178.

PONDICHERRY

1751. SHENBAKA CARS PRIVATE LIMITED (9601-01-), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010 PH :0413-2293391/92/93

PUNJAB

ABOHAR

1752. TARA AUTOMOBILES (ABOHAR) (H501-01-), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB - 152116 PH-9876047847.

ADAMPUR

1753. LOVELY AUTOS (CHA1-01-), KHASRA NO.10/7/1, JALANDHAR-HOSHIARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102 PH :8288050777

AJNALA

1754. SWANI MOTORS PVT. LTD. (CBP1-01-), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE -BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102 PH:8872001731.

AMRITSAR

1755. SWANI MOTORS LTD. (1701-01-), 81,COURT ROAD, AMRITSAR - 143001 PH:9877482175. 8872000000.

1756. JAYCEE MOTORS (1704-01-), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH:9780038335.

1757. RISHABH FOURWHEELS PVT. LTD. (1703-01-), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH: 9914841577.

ANANADPUR SAHIB

1758. CM AUTOSALES PVT. LTD. (OF01-01-), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB, TEHSIL ANANDPUR SAHIB, DISTT. ROPAR, PUNJAB - 140123 PH :9915022897.

APRA

1759. LOVELY AUTOS (CVW1-01-), SAMRAI CHOWK PHILLAUR ROAD, VILLAGE - APRA, TEHSIL -PHILLAUR, DIST.-JALANDHAR, STATE - PUNJAB. - 144418 PH :9915020515.

AUR

1760. LOVELY AUTOS (CVY1-01-), KHATUNI NO. 479/588, KHASRA NO. 27/20/04(2-18), 21/2(2-10), VILLAGE - AUR, TEHSIL - NAWASHAR, DIST. -SBS NAGAR, STATE - PUNJAB. - 144417 PH :9915020510.

BAGHA PURANA

1761. REMIRA MOTORS PVT. LTD. (BAH2-01-). BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH.7087025009.

BALACHAUR

1762. LOVELY AUTOS (XV01-01-), NEAR MCDONALD – GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521 PH: 9878427910.

BALBEHRA

1763. HIRA AUTOWORLD (SOG1-01-), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA -147101 PH 9888341118

BANGA

1764. LOVELY AUTOS (3503-03-), NAWASEHAR-JALANDHAR ROAD, BANGA -144505 PH :9915028625.

BANUR

1765. TRICITY AUTOS PVT. LTD. (BRT1-01-), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601 PH :998882330.

BARNALA

1766. MAX AUTOMOBILES (4S02-01-), NR. HANDIYAN CHOWK, MANSA BYE PASS, BARNALA, PUNJAB -151001 PH : 285022, 9216529220.

BATALA

1767. PATHANKOT VEHICLEADES PVT. LTD. (A701-05-), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505 PH:9417900850, 9417900918.

BEGOWAL

1768. MARWAHA AUTOS (BHF2-01-), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH :9779166004.

BHADSON

1769. HIRA AUTOMOBILES LTD (BAG1-01-), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202 PH :9217048236, 9217048250.

BHAGTA BHAI KA

1770. TARA AUTOMOBILES (BHG1-01-), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT – BHATINDA. - 151206 PH :8437030666.

BHATINDA

1771. TARA AUTOMOBILES (BHATINDA) (7002-01-), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001 PH:0164-2235349, 50.

BHIKHIWIND

1772. RISHABH FOURWHEELS PVT. LTD. (BPK1-01-), KHASRA NO. 67/3/2, 4/1, 7/2, 8/1, 8/2, PIND BHIKHIWIND, TEHSIL – PATTI, DISTRICT – TARN TARAN, PUNJAB. - 143303 PH-9914708577

BHOGPUR

1773. LOVELY AUTOS (BRU2-01-), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201 PH:9872030006.

BHULATH

1774. LOVELY AUTOS (CHB1-01-), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT – KAPURTHALA, PUNJAB. - 144622 PH:9876541065, 8288050777.

BILGA

1775. LOVELY AUTOMOBILES (SPM1-01-), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLAUR, JALANDHAR. - 144036 PH :9815069814.

CHUNNI KALAN

1776. HOSHIARPUR AUTOMOBILES (CFG1-01-), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307 PH :248005, 9815131766.

DASUYA

1777. HOSHIARPUR AUTOMOBILES (H402-04-), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA -144205

PH:9815131766, 9872312371.

DERABASSI

1778. AUTOPACE NETWORK PVT LTD (705-02-), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507 PH :9815011669.

DEVIGARH

1779. HIRA AUTOMOBILES LTD (OG01-01-), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111 PH:8872034118, 9217048250.

DHILWAN

1780. MARWAHA AUTOS (SGU1-01-), MIANI BAKARPUR,AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA -144804

PH:9779166004.

DORAHA

1781. GULZAR MOTORS (QC02-01-), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHA, DISTT. LUDHIANA, PUNJAB. - 141421 PH :9814191122

FARIDKOT

1782. MAPSKO AUTO INDIA PVT. LTD. (4U02-01-), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204 PH:01639-264001,7347000520.

FATEHGARH CHURIAN

1783. PATHANKOT VEHICLEADES PVT. LTD. (BAO1-01-), KHASRA NO. 17 R, DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSIL -BATALA, DIST.-GURDASPUR, STATE - PUNJAB. - 143 602

PH:9417900850, 9875930180.

FAZILKA

1784. TARA AUTOMOBILES (H501-03-), NH-10, NEAR SARVHITKARI BAL VIDYA MANDIR, FAZILKA -152116 PH:9876047847.

FFR07FPUR

1785. BABA AUTOS (7C01-01-), MOGA ROAD, FEROZEPUR CANTT - 152002 PH :8872013211.

GARHSHANKAR

1786. HOSHIARPUR AUTOMOBILES (H402-02-), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527 PH: 9815131766, 9781543131.

GHANAUR

1787. HIRA AUTOWORLD LLP (CVX2-01-), WARD NO. 1, OPPOSITE CLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE -PUNJAB - 140401 PH :9217048437.

GHAROTA

1788. PATHANKOT VEHICLEADES (SFF1-01-), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT – 143533. - 143533 PH:8264105000.

GHOMAN

1789. PATHANKOT VEHICLEADES PVT. LTD. (CUL1-01-), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11/25 (7-18), VILLAGE -BALRAMPUR ADDA, KHASBA - GHOMAN. -143514 PH :8054500130

GIDDARBAHA

1790. HIRA AUTOMOBILES LTD (AUA1-01-), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBAHA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101 PH .231510. 9217048250.

GORAYA

1791. LOVELY AUTOS (BJR1-01-), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH:9417804049.

GURDASPUR

1792. PATHANKOT VEHICLEADES PVT. LTD. (A701-03-), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521 PH 9417900870 9878050710

1793. PATHANKOT VEHICLEADES PVT. LTD. (A701-06-), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH :9417900870

HOSHIARPUR

1794. HOSHIARPUR AUTOMOBILES (H402-01-), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001 PH :9815131766. 9978632537.

JAGRAON

1795. SANDHU AUTOMOBILES (6206-05-), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :8437025969.

JAITU

1796. MAPSKO AUTO INDIA PVT. LTD. (YX02-01-), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT – FARIDKOT. - 151202 PH:7347000520.

JALALABAD

1797. TARA AUTOMOBILES (H501-02-), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH:9876047847.

JALANDHAR

1798. LOVELY AUTOS (3503-01-), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :9915020515.

1799. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (3506-01-), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH :9779166004

1800. LOVELY AUTOS (3505-01-), KHASRA NO. 24/20/4, B D ENCLAVE, VILLAGE - JALANDHAR, DIST. -JALANDHAR, PUNJAB. - 144001 PH :9876044001. 9915020515.

JANDIALA GURU

1801. BABA AUTOS (7C01-03-), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115 PH :8872013029

JANDIALA MANJKI

1802. LOVELY AUTOS (BJS1-01-), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE – JANDIALA MANJKI, TEHSIL – NOORMAHAL, DISTRICT – JALANDHAR, PUNJAB. - 144033 PH 7087439797.

KAHNUWAN

1803. PATHANKOT VEHICLEADES PVT. LTD. (CGM1-01-), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. - 143528 PH. 8288993301.

KALA SANGHIAN

1804. MARWAHA AUTOS (SPL1-01-), MAIN CHOWK, KALA SANGHIAN, DISTRICT KAPURTHALA, PUNJAB - 144623 PH :9779166004.

KALANAUR

1805. PATHANKOT VEHICLEADES (SJI1-01-), KALANAUR-GURDASPUR ROAD, VILLAGE KALANAUR, TEHSIL AND DISTRICT GURDASPUR, PUNJAB - 143512 PH :9417900879.

KAPURTHALA

1806. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (4202-01-), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602 PH :9779166004.

KATHU NANGAL

1807. JAYCEE MOTORS (CSP2-01-), KHASRA NO.12/20/2, 21/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502 PH : 978038335.

KHANNA

1808. HOSHIARPUR AUTOMOBILES (N302-01-), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. -141401 PH: 3988716261.

KHARAR

1809. CM AUTOSALES PVT. LTD. (7K01-03-), NH-95, MORINDA ROAD,KHANPUR, KHARAR. DIST. MOHALI - 140301 PH: 9915022878.

KILANWALI

1810. HIRA AUTOMOBILES LTD (BFV1-01-), GT ROAD (NH NO. 09), NEAR GURU NANAK COLLEGE, KILANWALI, TEHSIL – MALOUT, DISTRICT – MUKTSAR SAHIB. - 152107 PH:8872034131.

KOTKAPURA

1811. MAPSKO AUTO INDIA PVT. LTD. (BIS2-01-), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT – FARIDKOT. 151204 PH. 7347000518.

LALRU

1812. AUTOPACE NETWORK PVT LTD (BRJ1-01-), VILLAGE – LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501 PH :9815011669.

Ι ΙΙΠΗΙΔΝΑ

1813. GULZAR MOTORS LTD. (6204-01-), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003

PH:9814160099.

1814. SANDHU AUTOMOBILES (6206-01-), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141203 PH :9815600095.

1815. LIBRA AUTO CAR CO. LTD (6207-01-), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020 PH:0160-2512701, 03.

1816. LIBRA AUTO CAR CO. LTD (6207-02-), G.T ROAD, NEAR AIRPORT, LUDHIANA. - 141020 PH: 0160-25035130

1817. LOVELY AUTO (6209-01-), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA – 141001 - 141001 PH:9875928451, 9875928450.

1818. LOVELY AUTOS (6209-02-), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB - 141003 PH :9815069814

1819. LOVELY AUTOS (6209-03-), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001 PH 9815069814

820. LOVELY AUTOS (6209-04-), EURO MART COMPLEX, HAMBRAN ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008 PH :9815069814

1821. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-01-), GT ROAD, OPPOSITE GOYAL HYUNDAI, VILLAGE DHANDHARI KHURD, LUDHIANA, DISTRICT – LUDHIANA, PUNJAB -141010 PH :8054399990.

MACHIWARA

1822. HOSHIARPUR AUTOMOBILES (9703-01-), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH :9875900147.

MAHII PUR

1823. HOSHIARPUR AUTOMOBILES (H402-05-), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105 PH 9914770424

MAJITHA

1824. RISHABH FOURWHEELS PVT. LTD. (CDR1-01-), PLOT NO.130, OPP. DANA MANDI, AMRITSAR ROAD, MAJITHA. - 143601 PH :9914841577.

MALERKOTLA

1825. MAX AUTOMOBILES (CCI2-01-). MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023 PH :9814403131 . 9056903131.

MALOUT

1826. HIRA AUTOMOBILES LTD (6302-05-), TINKONI CHOWK, NEAR LIC BUILDING, MALOUT - 152107 PH :299524, 264724,9988417000.

MANDI GORINDGARH

1827. HOSHIARPUR AUTOMOBILES (U903-01-), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301 PH:9815131766, 9914119292.

MANSA

1828. TARA AUTOMOBILES (7002-02-), BALATA ROAD, NEAR ARVIND NAGAR, MANSA, PUNJAB -151505 PH : 01652-216042.

MEHTA

1829. RISHAB (CDS1-01-), KHASRA NO. 343, BABA BAKALA ROAD, VILLAGE MEHTA CHOW, TEHSIL: BABA BAKALA, DIST AMRITSAR, PUNJAB - 143114 PH:7760315710.

MOGA

1830. REMIRA MOTORS PVT. LTD. (H602-01-), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001 PH:7087025402.

MOHALI

1831. NAVDESH AUTOS LLP (L105-01-), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH: 8872016453. 1832. CM AUTOSALES PVT. LTD. (706-03-), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI – PUNJAB - 140110 PH :8284800597.

MORINDA

1833. CM AUTOSALES PVT. LTD. (BHH1-01-), KHASRA NO. 1092, CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140 101 PH -9915022811

MUKERIAN

1834. HOSHIARPUR AUTOMOBILES (IP01-01-), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN -144211 PH 9815131766 8437919900

MUKTSAR

1835. HIRA AUTOMOBILES LTD (6302-03-), BHAI COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB - 152026 PH 9217048250, 9056900042

MULLANPUR

1836. SANDHU AUTOMOBILES (YY01-01-), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101 PH :8437025969.

MULL ANPLIR GARIBDASS

1837. NAVDESH AUTOS LLP (CVZ2-01-), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE -PUNJAB. - 140901 PH :8872004676

NABHA

1838. HIRA AUTOMOBILES LTD (6302-06-), RADHA SWAMI ROAD, NABHA - 147201 PH :9317000004 ,9217048250.

NAKODAR

1839. LOVELY AUTOS (3503-04-), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040 PH :9915028603

NANGAL

1840. CM AUTOSALES PVT. LTD. (7K01-02-), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB -140126 PH 9592916811

NAWANSHAHR

1841. LOVELY AUTOS (3503-02-), NAWANSHAHR CHANDIGARH ROAD, VILL- LANGROHA, DISTT:-NAWANSHAHR, PUNJAB - 144514 PH :9915028682

NIHAL SINGH WALA

1842. REMIRA MOTORS PVT LTD (OB02-01-). BARNALA ROAD, NEAR DEAR BABA SEWA DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA. - 142 055 PH -706712/5009

PATHANKOT

1843. PATHANKOT VEHICLEADES PVT. LTD. (A701-01-), NEAR MAMOON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001 PH 8264105000 9417900883

1844. PATHANKOT VEHICLEADES PVT. LTD. (A701-04-), NEAR A. B. COLLEGE, PATAHANKOT - 145001 PH :9417900828 . 9417900842.

PATIALA

1845. HIRA AUTOMOBILES LTD (6302-01-), 13-B, FACTORY AREA, PATIALA - 147001 PH :2360131, 2360562.9217048250.

1846. HIRA AUTOMOBILES LTD (6302-04-), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001 PH :2232377, 9217048234, 9217048250.

1847. HIRA AUTOMOBILES LTD (6302-07-), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001 PH :2232295, 2232296, 9217048250.

1848. ATELIER AUTOMOBILES (6304-01-), VILLAGE MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR CASABA RESORT, PATIALA - 147001 PH :75270001106, 7527000111.

PATRAN

1849. HIRA AUTOMOBILES LTD (6302-02-), NARWANA ROAD, PATRAN, PUNJAB, - 147105 PH:244445, 245788, 9217048250.

PATTI

1850. JAYCEE MOTORS (BQA2-01-), KHASRA NO. 64/19/21 KA 16/49 & KHASRA NO. 64/20 KA 29/94, NEAR RADHA SWAMI, TARN TARAN ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN, PUNJAB. - 143416 PH :9780038335.

PHAGWARA

1851. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (5C02-01-), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH 9779196004

PHILLAUF

1852. LOVELY AUTO (XU01-01-), OLD NAWANSHAHR ROAD CIVIL LINE, PHILLAUR, DISTRICT JALANDHAR - 144410 PH :9815069814.

POHIR

1853. LOVELY AUTOS (XS02-01-), LUDHIANA-MALERKOTLA ROAD, NEAR SODHI MARRIAGE PALACE, POHIR, DISTRICT LUDHIANA, PUNJAB. - 141204 PH. 9915020513.

RAIKOT

1854. GULZAR MOTORS PVT LTD (XT02-01-), BARNALA BY PASS ROAD, RAIKOT - 141109 PH :9814160099

RAJPURA

1855. HIRA AUTOWORLD LLP (HK02-01-), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA -140401 PH : 244881-84 9217048437 9217048250

RAMPURA PHUL

1856. TARA AUTOMOBILES (XR01-01-), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103 PH:01651-266643.

RAYYA

1857. RISHABH FOURWHEELS PVT. LTD. (CAK1-01-), NH-1, GT ROAD RAYYA, TEHSIL – BABA BAKALA, DISTRICT – AMRITSAR. - 143112 PH :9914708577.

ROPAR

1858. CM AUTOSALES PVT. LTD. (7K01-01-), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH :9915022802

SAMANA

1859. HIRA AUTOMOBILES LTD (BFU1-01-), KEWAT NO. 948/950, KHATUNI NO. 1427, KHASRA NO. 101/27(4-7), PATIALA SAMANA ROAD, SAMANA, DIST.-PATIALA, STATE PUNJAB. - 147101 PH:9217048236.

SANGRUR

1860. MAX AUTOMOBILES (G402-01-), DHURI ROAD, SANGRUR, - 148024 PH:01672-239627.

SHAHKOT

1861. LOVELY AUTOS (BHT1-01-), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT – JALANDHAR, PUNJAB. - 144702 PH:8437936811.

SIRHIND

1862. HOSHIARPUR AUTOMOBILES (TF03-01-), KHEWAT KHATONI NO. 80:21/049 & 82:1/1070 KHEWAT KHAS NO. 43/1/21/1(1-0), BESIDE SBI BANK, BASSI ROAD, SIRHIND, TEHSIL AND DISTRICT – FATEHGARH SAHIB - 140406 PH-9815131766, 75:27082471.

SULTANPUR LODHI

1863. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (ZY02-01-), NEAR TALWAD BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA -144626 PH 9779166004

TAI WANDI BHAI

1864. BABA AUTOS (GMF1-01-), FEROZEPUR ROAD, NEAR FUNISLAND, TALWANDI BHAI, DISTT. FEROZEPUR - 142050 PH: 8872013002.

TALWANDI SABO

1865. TARA AUTOMOBILES (ON01-01-), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWANDI SABO, BHATINDA -1551302 PH:9646691047, 8437008666.

TALWARA

1866. HOSHIARPUR AUTOMOBILES (H402-07-), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216 PH 9815131766 9781842944

TANDA

1867. HOSHIARPUR AUTOMOBILES (H402-06-), VILL.PULPUKHATA, MIANI ROAD, TANDA -144203 PH :9815131766, 8437430400.

TARAGARH

1868. PATHANKOT VEHICLEADES PVT. LTD. (BVC1-01-), VILLAGE - RAHIMPUR, VPO-TARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534 PH :9988639963.

TARN TARAN

1869. JAYCEE MOTORS (BLP2-01-), VILLAGE – KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401 PH :9780038039.

ZIRA

1870. BABA AUTOS (7C01-02-), FEROZEPUR ROAD, ZIRA - 142047 PH:8872013230.

ZIRAKPUR

 TRICITY AUTOS (9M01-01-), PATIALA HIGHWAY, VILLAGE - NABHA, ZIRAKPIR, PUNJAB - 140603 PH: 9988882330.

RAJASHTHAN

JAIPUR

1872. AURIC MOTORS (1116-C1-), COMMERCIAL PLOT NO. J4, COMMERCIAL BELT B, VT ROAD, NEW SANGANER ROAD, MANSAROVAR SCHEME, JAIPUR, RAJASTHAN 302020 - 302020 PH-9571105851

RAJASTHAN

AANDHI

1873. KP AUTO (SJK1-01-), KHASRA NUMBER 11 25 , VILL AANDHI , DISTT JAIPUR, RAJASTHAN-303001 - 303001 PH :9549656559

ARU ROAD

1874. NAVNEET MOTORS (OQ01-01-), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026 PH: 7665000644.

ACHROL

1875. KTL AUTOMOBILE PVT. LTD. (GKD1-01-), KHASRA NO. 37/1522, GRAM ANI, ACHROL, DELHI ROAD, TEHSIL – ACHROL, DISTRICT – JAIPUR, 303002 - 303002 PH.7412077022.

AHORE

1876. AURIC MOTORS (SHN1-01-), MADHOPURA, NEAR KARNAWATI HOSPITAL, AHORE, DISTRICT – JALORE, RAJASTHAN PIN CODE: 307029 - 307029 PH :8875088998.

AJMER

- 1877. AJMER AUTO AGENCIES PVT. LTD. (B201-01-), SRINAGAR ROAD,AJMER (RAJASTHAN) - 305001 PH:9314955201.
- 1878. RELAN MOTORS (B203-01-), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001
- PH :95876 87000, 84400 41027. 1879. RELAN MOTORS (B203-02-), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001 PH :95876 87000, 87400 16329.
- 1880. AJMER AUTO AGENCIES PVT. LTD. (B201-05-), KHASRA NO.343/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER. - 305001 PH:9314955201.

AKLERA

1881. BHATIA AND COMPANY (SGK1-01-), NH-52, RAM NAGAR COLONY, AKLERA, JHALAWAR, PIN-326033, RAJASTHAN - 326033 PH :9799299971.

ALWAR

1882. MG MOTORS (F901-01-), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001 PH:9001795520. 1883. MG MOTORS (F901-02-), KHASRA NO.803/198, BHUGORE TIRAHA, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001 PH :9001795520.

ANOOPGARH

1884. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BFE1-01-), PLOT NO. AMEDIKAR CHARAHARA, RAILWAY STATION ROAD ,ANUPGARH (ANOOPGARH),DISTT SRI GANGANACAR. - 335701 PH :9982638516.

ANTA

1885. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTG2-01-), KOTA-BARAN ROAD, ANTAH, DIST.-BARAN. -325502 PH. 9413379001

ASIND

1886. CHAMPION CARS (SID1-01-), DEV TOWERS, BEAWAR ROAD, ASIND, DISTRICT – BHILWARA, RAJASTHAN - 311302 - 311302 PH 9887063862

ATRU

1887. SUWALKA MOTORS (SNU1-01-), JAISALMER ROAD, CHANDAN, DISTT JAISALMER ,RAJASTHAN - 325218 PH:8306333731.

BAGRU

1888. PREM MOTORS PVT. LTD. (US02-01-), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPUR - 303007 PH:01414711118,8058411181.

BALESAR

1889. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CWO1-01-), KHASRA NO. 2:167 JODHPUR JAISALMER ROAD, VILL: BALESAR SATTA, TEH:- BALESAR, DIST:- JODHPUR (RAJ.) -342203 PH: 7412087344.

BALOTRA

1890. LMJ SERVICES LTD. (6502-05-), JODHPUR BALOTRA ROAD,BALOTRA, RAJASTHAN -344022 PH: 8005898360

BANSUR

1891. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (BOP1-01-), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402 PH:8875005116.

BANSWARA

1892. NAVNEET MOTORS (X903-01-), NEAR J.C. MILL,OPPOSITE AKASHWANI,DAHOD ROAD,BANSWARA - 327001 PH :02962-254546, 257596,7665000879.

BARAN

1893. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-03-), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205 PH:8829854244

BARMER

1894. LMJ SERVICES LTD. (6502-06-), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001 PH:8005898360.

1895. LMJ SERVICES LTD. (SH01-01-), NH# 68, OPP. SADAR THANA - 344001 PH :8005898360.

BASSI

1896. PREM MOTORS PVT. LTD. (VF02-01-), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301 PH:01414711118,8058794151.

BAYTU

1897. LMJ SERVICES (SIT1-01-), NH-8, NEAR JAGDAMBA PETROL PUMP, BAYTU - 344034 PH:8094011126.

BEAWAR

1898. RELAN MOTORS (FL03-01-), PLOT NO 1, INDIRA GANDHI UDYOGPURI , AJMER ROAD ,BEAWAR, RAJASTHAN. - 305202 PH 9587687000

BEGUN

1899. BHATIA & CO (BTD1-01-), BHATIA & CO. (A UNIT OF BHATIA CORPORATION PVT LTD), IN FRONT OF GURUKUL, CHITTOR ROAD, BEGUN, TEHSIL – BEGUN, DISTRICT CHITTORGARH, 312023 -312023 PH :9837325267.

BEHROR

1900. MG MOTORS (FQ01-01-), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701 PH :9001795520.

BHADRA

1901. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIF1-01-), CHAK NUMBER-8, BARANI, NEAR HISAR BYEPASS BHADRA - BALSAMAND ROAD, BHADRA - 335501 PH-9166712222, 9413311745.

BHARATPUR

1902. TM MOTORS PVT. LTD. (5J01-01-), BRIJ VIHAR COLONY, MADARPUR ROAD, BHARATPUR, RAJASTHAN - 321001 PH: 9251423392.

BHAWANI MANDI

1903. SUWALKA MOTORS PVT LTD (SDB1-01-), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI,JHALAWAR- 326502. - 326502

BHAWANIMANDI, JHALAWAR - 326502. - 326502 PH:9414242256.

BHILWARA

1904. LOHIA AUTOMOBILES (E301-01-), AJMER ROAD,NEAR OCTROI POST,BHILWARA - 311001 PH : 7568378555 9462979233

1905. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (E302-01-), CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001 PH :01482-267096,9358130064, 9358130066.

1906. LOHIA AUTOMOBILES (E301-03-), PLOT NO. H-11, EVERGREEN TEXTILE PARK, RIICO INDUSTRIAL AREA, PUR ROAD, BHILWARA. -311001 PH:9667187847.

BHINDER

1907. TECHNOY MOTORS INDIA PVT. LTD. (CBS1-01-), NEAR RAILWAY STATION, SALUMBAR CHOURAHA, BHINDER - 313603 PH:8306111337.

BHINMAL

1908. SHRI KRISHNA AUTOSALES PVT LTD (CQN1-01-), KHASRA NO. 2281, KARADA CROSSING, BHINMAL, DISTRICT - JALORE, RAJASTHAN. PH.9610242790.

BHIWADI

1909. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-01-), OPP. INDAG RUBBER,MAIN ROAD, BHIWADI - 301019 PH:9214794326,8875005116.

1910. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-02-), F-458-C, RICO, INDUSTRIAL AREA, BHIWADI -301019 PH: 9214794326.8875005116.

1911. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-04-), KHASRA NO. 656/431, ALWAR ROAD, BHIWADI. - 301019 PH 92/14794396 8875005116

BIJAYNAGAR

1912. AJMER AUTO AGENCIES PVT LTD (GLF1-01-), KHASRA NO 39, AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT - AJMER ,RAJASTHAN - 305624 PH :8890902472.

BLIOI IA

1913. LOHIA AUTOMOBILES (E301-02-), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTOR-BIJOLIA HIGHWAY, BIJOLIA, DIST. -BHILWARA - 311602 PH. 7568378555 7230094157

BIKANER

1914. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-01-), OPP. URMUL DAIRY PLANT, GANGANAGAR ROAD, BIKANER - 334004 PH: 1512253984,9414138511.

1915. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-04-), JAIPUR BYE PASS,BIKANER , - 334004

PH:1512230384,8875010507.

1916. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-05-), OPP. AVYYAPPA TEMPLE, K. K.

COLONY, BIKANER - 334003 PH :7014063193,9413311949. 1917. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES) (7102-01-). KHASRA NO. 376/33.

JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. -334001

PH:8929834417.

RII ARA

1918. LMJ SERVICES LTD. (BZB1-01-), BANGANGA MOD, JODHPUR ROAD, BILARA, RAJASTHAN -342602 PH: 8104698935

BORUNDA

1919. AURIC MOTORS (SNT1-01-), NEAR KESARGARH PALACE, HANUMANGARH ROAD, TIBBI, DIST. HANUMNAGARH, PIN-335526, RAJASTHAN -342604

PH:9413311745

BUNDI

1920. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-02-), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSAITE ICICI ATM, BUNDI - 323001 PH: 3929853245.

CHAKSU

1921. K P AUTOMOTIVES PVT LTD (1104-03-), TONK ROAD, CHAKSU - 303901 PH :0141-4071111, 4071101,8696934973.

CHANDAN

1922. LMJ SERVICES LTD. (SHR1-01-), JAISALMER ROAD, CHANDAN, DISTT JAISALMER ,RAJASTHAN - 345031 PH :8094011126.

CHIRAWA

1923. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SY02-01-), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026 PH :01596-217163,7230081668.

CHITTORGARH

1924. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) ((R901-01-), PLOT NO. 1001/1-1002/1, NIMBAHERA ROAD, CHITTORGARH - 312001 PH:01472 240999,9549277861.

СНОМИ

1925. KTL AUTOMOBILES (HW02-01-), KHARSA NO.695, JAIPUR SIKAR BYPASS ROAD, CHOMU, RAJASTHAN. - 303702 PH:7412077034.

1926. SATNAM MOTORS (HW03-01-), NEAR CM CHOPRA HOSPITAL, JAIPUR ROAD, CHOMU, DISTRICT – JAIPUR, RAJASTHAN - 303702 PH 8302090000

CHURU

1927. TR SAWHNEY (MD04-01-), KHASRA NO. 913/54, JAIPUR ROAD, VILLAGE RAMSARA, CHURU, PIN-331001, RAJASTHAN - 331001 PH :9782078531.

DANTA RAMGARH

1928. JAMU AUTOMOBILES PVT LTD (CTQ1-01-), KHASRA NO. 1016/256, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR. -332703 PH 9116816905

DAUSA

1929. VIPUL MOTORS PVT. LTD. (1102-03-), AGRA JAIPUR ROAD, DAUSA - 303303 PH:9672211333.

DEGANA

1930. SHRI MANGALAM (SDJ1-01-), PLOT NUMBER -189, NEAR NAGAUR RAILWAY STATION ROAD, DEGANA - 341503 PH : 7230055955

DEOLI

1931. K P AUTOMOTIVES PVT LTD (Z001-01-), KOTA-JAIPUR HIGHWAY, NH-12, DEOLI - 304804 PH :8696925259.

DEVGARH

1932. LOHIA AUTOMOBILES (CUQ1-01-), NEAR KRISHI MANDI, KAMLIGHAT ROAD, TEHSIL – DEVGARH, DISTRICT – RAJSAMAND, RAJASTHAN. - 313331 PH 9779278686

DHARIYAWAD

1933. BHATIA & CO. (SMC1-01-), PRATAPGARH ROAD, DHARIYAWAD, DIST. - PRATAPGARH, RAJASTHAN - 313605 - 313605 PH: 9829736081.

DHOLPUR

1934. TM MOTORS PVT. LTD. (5K01-01-), TM MOTORS PVT. LTD., GT ROAD DHOLPUR, RAJASTHAN. -328001 PH: 8094777862.

DIDWANA

1935. SHRI MANGLAM AUTO PVT. LTD. (FT03-01-), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA, DISTRICT – NAGAUR. - 341303 PH :7230055924.

DUDU

1936. PREM MOTORS PVT. LTD. (BRY1-01-), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008 PH :8058411181

DUNGURPUR

1937. NAVNEET MOTORS (4902-02-), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001 PH :9414104833,9414104833.

FALNA

1938. LMJ SERVICES LTD. (BBR1-01-), OPPOSITE PRAKASH DINING HOTEL ,FALNA - 306116 PH :8094011126

FATEHNAGAR

1939. TECHNOY MOTORS INDIA PVT. LTD. (4903-03-), PLOT NO. 15, FATENAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHINAGAR-313205 DISTT. UDAIPUR - 313205 PH-9772564139,9772564139.

GANGAPUR CITY

1940. PREM MOTORS PVT. LTD. (BUT1-01-), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201 PH: 8058794122.

GUDAMALINI

1941. LMJ SERVICES (SJB1-01-), KHARSA NO. 1360/5, RATHORO KI DHANI, JODHPUR ROAD, GUDAMALANI, DISTRICT – BARMER, RAJASTHAN – 344031. - 344031 PH:8094011126.

GUDHAGORJI

1942. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGC1-01-), BHORKI ROAD, GUDHAGORJI, DISTRICT – JHUNJHUNUN, RAJASTHAN. -333022 PH :7412059848.

HANUMANGARH

1943. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-03-), JUNCTION TOWN ROAD, HANUMANGARH - 335512 PH :01552-231295,9166712222, 9413311745.

1944. AURIC MOTORS (7101-06-), PLOT NUMBER 134, INDUSTRIAL AREA, HANUMANGARH, RAJASTHAN. - 335512 PH:9413311745.

HINDAUN

1945. FORTUNE CARS (A UNIT OF JYOTI
AUTOMOBILES PYT LTD) (S002-01-), KHASRA
NO. 737, VILLAGE - PATTI NARAINPUR, NEAR
HANUMAN MANDIR, HINDAUN-MAHWA ROAD,
HINDAUN - 322230
PH :7017024146 7017024146

JAIPUR

- 1946. VIPUL MOTORS PVT. LTD. (1102-01-), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017 PH: 9269117654.8949686508.
- 1947. K P AUTOMOTIVES PVT LTD (1104-01-), E-198, SANGANER INDUSTRIAL AREA, MANSAROVAR, JAIPUR - 302020 PH:0141-4071111, 4071101,6377203709, 6377203731
- 1948. PREM MOTORS PVT. LTD. (1112-02-), 12 13,SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006
- PH:0141-4711111,8058703388, 8058794122. 1949. SANGA AUTOMOBILES PVT. LTD. (1110-01-), SECTOR 35, PRATAP NAGAR,SANGANER, JAIPUR - 302033 PH:9772210922.
- 1950. VIPUL MOTORS PVT. LTD. (1102-05-), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR -302012 PH:0141-3524203,9672211333.
- 1951. PREM MOTORS PVT. LTD. (1112-01-), PLOT NO. E101/A, VKI, JAIPUR 302039 PH:01414411123 8929409921
- 1952. SATNAM MOTOCORP PVT. LTD. (1113-01-), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR – 302 022, RAJASTHAN. - 302022 PH:1412771976,8302390000.
- 1953. KTL AUTOMOBILE PVT. LTD. (1115-01-), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR. - 302012 PH: 7412077022.
- 1954. PREM MOTORS PVT. LTD. (1112-03-), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR. - 302017 PH:9358715550.8929409921.
- 1955. KTL AUTOMOBILES (1115-02-), KHASRA NO 1210-1216/2959, BHANKROTA, TEH SANGANER , DISTRICT JAIPUR. - 302026 PH:7412077007.
- 1956. KTL AUTOMOBILES (1115-03-), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD "JAIPUR. - 302006 PH -7412077007
- 1957. K.P. AUTOMOTIVE (1104-G1-), B-1, GOVIND MARG, ADARSH NAGAR, JAIPUR – 302004 -302004 PH: 9549656559.
- 1958. KTL AUTOMOBILES (1115-04-), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILOCHOYAN MOHALLA, TRANSPORT NAGAR, DELHI ROAD, JAIPUR - 302002 - 302002 PH: 9772210922.

- 1959. KP AUTO (1104-G2-), PLOT NO. 4, RAJIV COLONY, RPA ROAD, OPP. RADHA SWAMI SATSANG BHAWAN, SHASTRI NAGAR, JAIPUR 302016. - 302016 PH :9549656559.
- 1960. SANGA AUTONATION (1117-01-), SECTOR 35, PRATAP NAGAR, SANGANER, JAIPUR, PIN-302023, RAJASTHAN 302023 PH 9020368847.

JAISALMER

1961. LMJ SERVICES LTD. (5L01-01-), PLOT NO. 36, 37, MAHESH REFUGEE COLONY, HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) - 345001 PH :8005898360.

JAITARAN

1962. LMJ SERVICES LTD. (BNY1-01-), KHASRA NO. 784, JAIPUR-JODHPUR BYE PASS ROAD, JAITARAN, DIST.-PALI. - 306302 PH 9269971266

JALORE

1963. SHRI KRISHNA AUTOSALES PVT LTD (VD01-01-), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001 PH : 2973211613.3829203644.

JAMWA RAMGARH

1964. K P AUTOMOTIVES PVT LTD (BZL1-01-), KHASRA NUMBER -228/169,OPP UDAY AUTOMOBILES_JAIPUR ALWAR ROAD -JAMWA RAMGRAH. - 303109 PH -6377203709 6377203731

JHADOL

1965. TECHNOY MOTORS (SKO1-01-), KHASRA NO. 186/1, NH # 8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, PIN-306104, RAJASTHAN - 306104 PH :8890673099.

JHALAWAR

1966. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-02-). OPP. BALAJI KI CHHATTRI , KHEL CIRCULLAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001 PH :9413350336.

JHUNJHUNU

1967. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (FN03-02-), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001 PH :01592-250045,7412087489.

JOBNER

1968. PREM MOTORS PVT. LTD. (BRD1-01-), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL – PHULERA, DISTRICT – JAIPUR, RAJASTHAN - 303328 PH-9358411181

JODHPUR

- 1969. LMJ SERVICES LTD. (6502-01-), PRATAP NAGAR, JODHPUR - 340002 PH :9950496202
- 1970. LMJ SERVICES LTD. (6502-04-), OPP TO RFC OFFICE,NEW POWER HOUSE ROAD,JODHPUR - 342003 PH :8094011127
- 1971. SHRI KRISHNA AUTOSALES PVT LTD (6503-01-), 32-A,HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005 PH -2017248402 9001804669
- 1972. LMJ SERVICES LTD. (6502-09-), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008 PH :8094011147.
- 1973. LMJ SERVICES LTD. (6502-0C-), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002 PH :7230057721
- 1974. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-01-), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005 PH 7412059839
- 1975. LMJ SERVICES LTD. (6502-0D-), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342 001 PH:8696916455.
- 1976. LMJ SERVICES LTD. (5502-10-), KHASRA NO. 357/5, BANAR ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342 003 PH -7222002424

KAPRAIN

1977. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BGG1-01-), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301 PH: 9413379001.

KFKRI

1978. AJMER AUTO AGENCIES PVT. LTD. (B201-03-), KOTA SAWAR ROAD,KEKRI - 305404 PH:9314955201.

KHAJUWALA

1979. AURIC MOTORS (SJC1-01-), DANTOR ROAD, KHAJUWALA, DIST. - BIKANER, RAJASTHAN. -3340323 PH: 9982299866.

KHANDAR

1980. PREM MOTORS (SQM1-01-), SAWAI MADHOPUR-KHANDAR RD., KHANDAR, RAJASTHAN - 322025. - 322025 PH:8058899960.

KHANPUR

1981. SUWALKHA MOTORS (SMA1-01-), BYPASS CHORAYA, MEGA HIGHWAY BARAN-JHALAWAR, KHANPUR, TEHSIL – KHANPUR, DISTRICT – JHALAWAR, RAJASTHAN PIN CODE: 326038 - 326038 PH :8306333731

KHERLI

1982. MG MOTORS (BZE1-01-), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606 PH :9001795520.

KHERWARA

1983. TECHNOY MOTORS (SEE1-01-), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8, KHERWARA, TEHSIL – KHERWARA, DISTRICT – UDAIPUR, RAJASTHAN PIN CODE: 313803 - 313803 PH 9530336645

KISHANGARH

1984. AJMER AUTO AGENCIES PVT LTD (TU01-01-), R K LINK ROAD, - 305802 PH :9314391011.

KISHANGARH BAS

1985. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-03-), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405 PH :8875007753.8875007753.

KOTA

- 1986. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-01-), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007 PH:8929400447.
- 1987. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-01-), AUTO MOBILE ZONE, G-11/12 INDUSTRIAL AREA, KOTA - 324005 PH :0744-2439008.2439006.9587894887.
- 1988. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-04-), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN 324007 PH:8929400447.
- 1989. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6/101-05-), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH :8929400447.
- 1990. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-06-), PLOT NO. E-222, ROAD NUMBER 5. INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. -324005 PH: 0744-2439008.2439006.9587894887.

1991. SUWALKA MOTORS PVT. LTD. (6104-01-), RIDDHI SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN. - 324008 PH : 0744-2661226 7742121212.

KOTPUTLI

1992. PREM MOTORS PVT. LTD. (MH09-01-), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108 PH:01414711118.8058411181.

1993. PREM MOTORS PVT. LTD. (MH09-02-), KHASRA NO- 636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108

PH:01414711118.8058411181.

KUCHAMAN

1994. SHRI MANGLAM AUTO PVT. LTD. (VA02-01-), SUDARSHAN NAGAR, BURSU ROAD, KHASRA NO.148, KUCHAMAN. - 341508 PH:7230055928.

LADNU

1995. SHRI MANGLAM AUTO PVT. LTD. (CUP1-01-), KHASRA NO. 1011, SUJANGARH ROAD, LADNUN - 341306 PH : 7412044506.

LALSOT

1996. VIPUL MOTORS PVT. LTD. (BZF1-01-), PLOT NO.22,23, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502 PH -9672211333

LOSAL

1997. JAMU MOTORS (SMD1-01-), LOSAL-SALASAR-DIDWANA ROAD, OPPOSITE SHIV MANDIR, WARD NO, I, LOSAL, RAJASTHAN - 332025. - 332025 PH: 9957400761.

LUNI

1998. LMJ SERVICES (SF01-01-), NEAR SBI BANK, SALAWAS ROAD, LUNI, TEHSIL – LUNI, DISTRICT – JODHPUR, RAJASTHAN PIN CODE: 342802 -342802 PH:8094011126.

MAHWA

1999. VIPUL MOTORS PVT. LTD. (BKZ1-01-), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H. -11, MAHWA, DISTT. DAUSA (RAJASTHAN) -321608 PH.9672211333.

MAKRANA

2000. SHRI MANGLAM AUTO PVT. LTD. (CFX1-01-), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRANA, DISTRICT – NAGAUR. - 341505 PH.7230055934.

MALPURA

2001. K P AUTOMOTIVES PVT LTD (BLB1-01-), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH:8696925262.

MANDALGARH

2002. CHAMPION (SHA1-01-), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT – BHILWARA, PIN-311604, RAJASTHAN - 311604 PH -9837325267

MERTA

2003. SHRI MANGLAM MOTORS (NG03-01-), KHASRA NUMBER 1679, NH-89, MERTA , RAJASTHAN. -341510 PH : 9116007201

NAGAUR

 SHRI MANGLAM AUTO PVT. LTD. (HL03-01-), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUR. - 341 001 PH :9116008624

NAINWA

2005. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTJ1-01), UNIARA ROAD, OPP. PETROL PUMP, NAINWA, DIST. KOTA - 322881 PH 9413379001

NARAYANPUR

2006. FORTUNE CARS (SDV1-01-), KHASRA NO. 2848, JAIPUR ROAD, NEAR NARAYANPUR BYPASS VILLAGE, NARAYANPUR TEHSIL – NARAYANPUR, DISTRICT – ALWAR,RAJASTHAN PIN CODE: 301024 - 301024 PH: 8875004375.

NASIRABAD

2007. AJMER AUTO AGENCIES PVT. LTD. (B201-04-), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601 PH :9314955201.

NATHDWARA

2008. LOHIA AUTOMOBILES (X201-02-), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND -313301

NAWALGARH

PH:8306009399.

2009. AURIC MOTORS (SIE1-01-), KHATA NO. 76, PUNIA KI DHANI, SIKAR ROAD, NAWALGARH, DISTRICT – JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042 PH :9928720360.

NEEM KA THANA

 JAMU AUTOMOBILES PVT LTD (K701-03-), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713 PH :9116816905.9116816905.

NEEMRANA

2011. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-01-), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705 PH :9810715222 9836139386.

NIMBAHERA

2012. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD. (CTH1-01-), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601 PH.9772378681.9772378681.

NIWAI

2013. K P AUTOMOTIVES PVT LTD (BLA1-01-), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT – TONK. - 304021 PH:8696925262.

NOHAR

2014. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (VE02-01-), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523 PH : 0155-5221485 7412059821 8875010541

NOKHA

2015. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (1501-01-), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803 PH :741205805.

PADAMPUR

2016. DUDI MOTORS (SGC1-01-), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 -335041 PH :8619215475.

PALI

2017. LMJ SERVICES LTD. (6502-03-), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH - 9269971266

PAOTA

2018. K P AUTOMOTIVES PVT LTD (BRRH-0-1-), PATTA SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106 PH :6377203709, 6377203731.

PARBATSAR

2019. SRI MANGLAM (SKT1-01-), NEAR IFL HOUSING FINANCE CO., KISHANGARGH ROAD, PARBATSAR, DISTRICT - NAGAUR, RAJASTHAN - 341512. - 341512 PH: 8740909096.

PARTAPUR

2020. NAVNEET MOTORS (BKYI-01-), AAASHAPURA CHAURAHA, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024 PH :9001550644.

PHALODI

2021. SHRI KRISHNA AUTOSALES PVT LTD (BQI1-01-), OPP. RCP GUEST HOUSE, NAGAUR KHICHAN ROAD, PHALODI, RAJASTHAN - 342301 PH :9116011958

PHULERA

2022. KTL AUTOMOBILE PVT. LTD. (CUS1-01-). KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338 PH. 73412077022.

PINDWARA

2023. NAVNEET MOTORS (CQP1-01-), OPPOSITE WOLKEM FACTORY, SIROHI ROAD, PINDWARA, DIST. - SIROHI. - 307022 PH :7230036616,7230019849.

PIPAR

2024. LMJ SERVICES LTD. (BTI1-01-), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601 PH:9462616268

PISANGAN

2025. AJMER AUTO AGENCIES PVT. LTD. (CTL1-01-), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT – AJMER, RAJASTHAN. - 305204 PH :9314955201.

POKHRAN

2026. LMJ SERVICES (BOA1-01-), SUNDER NAGAR, TEHSIL POKHRAN, DISTRICT – JAISALMER, RAJASTHAN. - 345021 PH:9610115660.

PRATAPGARH (RAJASTHAN)

2027. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVI. LTD.) (PN01-01-1), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBGTARA, PRATAPGARH (RAJASTHAN) - 312605 PH :9571274999.

RAIPUR

2028. LMJ SERVICES LTD. (CRZ1-01-), NATIONAL HIGHWAY, PALI ROAD, VILLAGE – RAIPUR, DISTRICT – PALI. - 306304 PH :9269971266.

RAISINGHNAGAR

2029. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHK1-01-), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHINAGAR, DISTRICT – SRICANCANAGAR. - 335051 PH:9982638516.

RAJGARH

- 2030. MG MOTORS (IY01-01-), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH -9001795520
- 2031. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGD1-01-), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, - 331023 PH:9602261977.

RAJSAMAND

2032. LOHIA AUTOMOBILES (X201-01-), BHILWARA ROAD,KHANKROLI,RAJSAMAND DISTT, RAJSAMAND - 313301 PH:8306009399.

RAMGANJMANDI

2033. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BAZ1-01-), KHAIRABA ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH.9414085790.

RANIWARA

2034. SHRI KRISHNA AUTOSALES PVT LTD (SGX1-01-), INEAR RAILWAY GATE, BHINIMAL ROAD, RANIWARA, TEHSIL - RANIWARA, DISTRICT - JALORE, RAJASTHAN, PIN CODE: 343040 - 343040 PH : 9928377669.

RATANGARH

2035. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHJ1-01-), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331 022 PH : 7412087301

RAWATBHATA

2036. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (J001-01-), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA, DIST. CHITTORGARH, RAJASTHAN. - 323307 PH : -987894887.

RAWATSAR

2037. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SDA1-01-). CHAK 21-22.DWD,PLOT NUMBER -10 & 11, RAWATSAR (RAJASTHAN). -335524 PH 9166712222 9413311745.

REENGUS

2038. JAMMU MOTORS (SGL1-01-), REENGUS HIGHWAY, REENGUS DISTT. SIKAR -332404 PH:332404.

RENWAL MANJHI

2039. PREM MOTORS PVT. LTD. (GKZ1-01-), KHASRA NUMBER 2286/110, DPP ROHINI NAGAR 1 JAIPUR BHILWARA HIGHWAY ,RENWAL, TEHSIL PHAGI JAIPUR ,RAJASTHAN (303904) - 303904 PH. 101414711118.9928494441.

REVDAR

 TECHNOY MOTORS INDIA PVT. LTD. (CRY1-01-), OPP. TIRUPATI PETROL PUMP, KAROTI ROAD, REVDAR, DISTT. SIROHI, RAJASTHAN. - 307514 PH:9116653766.9116653766.

SAGWARA

2041. TECHNOY MOTORS INDIA PVT. LTD. (CK01-01-), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025 PH 102966924767 7230088824

SALUMBAR

2042. NAVNEET MOTORS (BZH1-01-), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT – UDAIPUR. - 313027 PH :7665887444

SAMBHAR

2043. KTL AUTOMOBILE PVT. LTD. (CVD1-01-), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE, PHULERA ROAD, SAMBHAR 303604 - 303604 PH: 7412077022.

SANCHORE

2044. SHRI KRISHNA AUTOSALES PVT LTD (GY01-01-), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. -343041 PH :9636224546.

SANGARIA

2045. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (GKK1-01-), HANUMANGARH ROAD NEAR KARMA PETROL PUMP - 335035 PH :7412059827.

SANGOD

2046. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (GLG1-01-), KHASRA NO 1637, SANGOD BAPAPAR MAIN ROAD ,SANGOD - 325601 PH :9413353999.

SARDARSHAHAR

2047. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BID1-01-), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN-331403 PH :9799833995.

SARWAR

2048. RELAN MOTORS (SJR1-01-), CHAMAN CHOURAHA, AJMER ROAD, SARWAR, DISTRICT – AJMER, RAJASTHAN 305403 - 305403 PH: 9587687000.

SAWAI MADHOPUR

2049. PREM MOTORS PVT. LTD. (FY03-01-), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001 PH: 01414711118 9358725409

SAYALA

2050. AURIC MOTORS (SHM1-01-), NEAR PETROL PUMP, HANUMAN MANDIR SOUTH STYLE, MAIN ROAD SAYALA, SAYALA TEHSIL - SAYALA, DISTRICT - JALORE, RAJASTHAN PIN CODE: 343022 - 343022 PH 9460739993

SHAHPURA

- 2051. K P AUTOMOTIVES PVT LTD (1104-05-), VILLAGE RAJPURA,GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103 PH :0141-4071111, 4071101,8696934964, 9358220012.
- 2052. LOHIA AUTOMOBILES (CCP1-01-), OPPOSITE LIC OFFICE, BHILWARA ROAD, SHAHPURA DISTT. BHILWARA - 311404 PH:7568378555 9462979238

SHEO

2053. LMJ SERVICES LTD. (SD01-01-), NEAR RIDDI SIDDHI HOTEL, OPPOSITE HP PETROL PUMP, TEH SHEO, DISTT – BARMER -335521 PH :8094011144.

SHEOGANJ

2054. NAVNEET MOTORS (SMI1-01-), F 132 ,OPP. 33/11 KV STATION, RICO INDUSTRIAL AREA, SHEOGANJ, DISTRICT – SIROHI, RAJASTHAN -307027 - 307027 PH: 9414159146.

SIKAR

2055. JAMU AUTOMOBILES PVT LTD (K701-01-), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001 PH:9116816905,9116816905.

SIMALWARA

2056. NAVNEET MOTORS (SLF101--), RAJPUR PEETH ROAD, SIMALWARA, DISTRICT - DUNGARPUR, RAJASTHAN - 314403 - 314403 PH :9001550644.

SIROHI

 NAVNEET MOTORS (4902-03-), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH:779960989.

SIVANA

2058. LMJ SERVICES LTD. (CCO1-01-), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASHTHAN. - 344044 PH:8005898360.

SOJAT

2059. LMJ SERVICES LTD. (BWI-01-), KHASRA NO. – 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, RAJASTHAN - 306104 PH 926991268

SRI DUNGARGARH

2060. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIG1-01-), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT - BIKANER, RAJASTHAN. - 331803 PH :9414138511.

SRI KARANPUR

2061. AURIC MOTORS (SDL1-01-), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR, TEHSIL – SRI KARANPUR, DISTRICT – SRI GANGANAGAR, RAJASTHAN, PIN CODE: 335073 - 335073 PH: 8875088998.

SRI MADHOPUR

2062. JAMU AUTOMOBILES PVT LTD (BZD1-01-), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR. - 332715 PH -9116816905

SRIGANGANAGAR

- 2063. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-01-), NEW AUTOMOBILE MARKET, SURAT GARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001 PH :0154-246526 7412059837.
- 2084. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-03-), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001 PH:8875911503.

SUJANGARH

2065. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BRB1-01-), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH, DISTT. CHURU - 331507 PH:8875011561.

SULTANPUR

2066. SUWALKA MOTORS PRIVATE LIMITED (GKY1-01-), KHASRA NUMBER 485, NEAR PETROL PUMP, SULTANPUR ROAD, SULTANPUR, DISTT KOTA - 325204 PH:7742121212.

SUMERPUR

LMJ SERVICES LTD. (6502-08-), G-14
 JAKHAMATA INDUSTRIAL AREA, OPP.
 DASHEREA GROUND, SUMERPUR - 306902
 PH :8094002633.

SURATGARH

2068. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-02-), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804 PH:8875012667.

THANAGAZI

2069. MG MOTORS (CFJ1-01-), NEAR INDIA PETOL PUMP, THANAGAZI, ALWAR ROAD, DIST. ALWAR, PIN-301022, RAJASTHAN - 301022 PH:9799398200.

TIBBI

2070. AURIC MOTORS (SNJ1-01-), KHASRA NO.2261, NEAR T POINT, BYPASS SIKARPUR ROAD BULANDSHAHR - 335526 PH :9413311745

TINWARI

2071. LMJ (STK1-01-), OPPOSITE NEW TEHSIL OFFI CE, TIWARI, MATHANIA ROAD, TIWARI -342306 -342306 PH: 809011126

TONK

2072. K P AUTOMOTIVES PVT LTD (GM01-01-), F-94, RIICO INDUSTRIAL AREA, TONK, RAJASTHAN -304001 PH: 9549651972.

TUNGA

2073. PREM MOTORS (SMB1-01-), VILLAGE GWALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL- BASSI, JAIPUR - 303302 - 303302 PH: 8058998123

UDAIPUR

2074. NAVNEET MOTORS (4901-01-), 7 CITY STATION ROAD, UDAIPUR - 313001 PH :7230046375

2075. NAVNEET MOTORS (4902-01-), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002 PH :0294-2494451-54,7665000881.

2076. TECHNOY MOTORS INDIA PVT. LTD. (4903-02-), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002 PH:7073468292.

2077. TECHNOY MOTORS INDIA PVT. LTD. (4903-04-), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL – BADGAON, UDAIPUR, RAJASTHAN. - 313001 PH :7297062111,9116101063.

VIRATNAGAR

2078. K.P. AUTOMOTIVES PVT. LTD. (SCB1-01-), KHASRA NUMBER 1156, OPP HOTEL GULMOHAR "JAIPUR ROAD ,VIRATNAGAR,DISTT JAIPUR - 303102 PH:0141-4071111, 4071101,9358220012.

SIKKIM

GANGTOK

2079. ENTEL MOTORS (B902-01-), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102 PH :9933031828 9933032059

JORTHANG

2080. ENTEL MOTORS (ND02-01-), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121 PH :9733164882 933309934

TAMIL NADU

ALANDURAI

 AADHI CARS PVT. LTD. (CTO1-01-), NO.69/1 A, SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) -641101

ALANGULAM

2082. AADHI CARS PVT. LTD. (SJF1-01-), SURVEY NO. 495/7, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT, TN -627851

PH:8754044143. AMBASAMUNDRAM (AMBAI)

PH:8754045816.

2083. AADHI CARS PVT. LTD. (BXT1-01-), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAIKULAM, AMBASAMUNDRAM. -627 401 PH :7397188858

ANAMALAI

2084. ABT (CHE1-01-), SITE NO. 6/12, NEAR ABT SAMUGA KOODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642 104 PH :9788174244.

ANDIPATTI

 ASIR (S1S1-01-), SURVEY NO. 459/1A1, THENI MAIN ROAD, ANDIPATTI, THENI DISTRICT, TAMILNADU - 625512 PH :9750372220.

ANNUR

2086. JAIKRISHNAA AUTOSALES PVT. LTD. (DN01-01-), SF NO.266/18, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR, COIMBATORE (DIST), TAMILNADU-641653 PH :9788850733.

ANTHIYUR

2087. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUX1-01-), SURVEY NO.495/4, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD, ANTHIYUR. - 638501 PH :8754086777.

ARAKKONAM

2088. GANESH CARS PVT. LTD. (BKQ1-01-), SURVEY NO. 556A/3, VILLAGE – ICHIPUDHUR, TALUKA – ARAKKONAM, VELLORE. - 631003 PH :9842/345399

ARIYALUR

2089. PILLAI & SONS MOTOR CO. (EB01-01-), NO.1/1, NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704 PH: 04329-228300. 9442281302.

ARNI

2090. GANESH CARS PVT. LTD. (BKP1-01-), DOOR NO. 1151/3. VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI, THIRUVANAMALAI, TAMIL NADU. - 632301 PH :9865553266.

ARUPPUKKOTTAI

2091. ASIR AUTOMOBILES PVT LTD (CWF1-01-), SURVEY NO. 205/1, 5/5C, NEHRU NAGAR, ARUPPUKKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKKOTTAI, DIST.-VIRUDHUNAGAR. - 626 101 PH: 9944059911.

ATTUR

2092. S.M.CAR PVT. LTD. (QT02-01-), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108 PH:7094440057.

AVADI

2093. VISHNU CARS PVT. LTD. (SPD1-01-), SURVEY NO. 146, 147/1F & 147/1G, NO. 17 VILLAGE – KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT – THIRUVALLUR, CHENNAI, TAMIL NADU - 600054 PH. 7338888021, 7358024470

AVINASHI

2094. SHASHTI CAR PVT LTD (CLKI-01-), SURVEY NO. 373/1E, THEEKU THOTTAM.
NALIGOUNDANPALAYAM, PALANGARAI, KUPOUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654
PH :9942903319.

BHAVANI

2095. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-05-), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316 PH :9897385777.

CHENGALPETTU

2096. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-01-), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. -603002

PH:7299057387.

2097. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-02-), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU -603202 PH.7299057387.

CHENGAM

2098. GANESH CARS PVT. LTD. (BUP1-01-), SURVEY NO. 293/3A, 3A1, VILLAGE - THUKAPETTAI, CHENGAM, DIST.-TIRUVANNAMALAI. - 606 701 PH:7397395289.

CHENNAI

2099. ABT LIMITED (1401-01-), # 355-A, GST ROAD, ALANDUR, CHENNAI, TAMILNADU - 600032 PH:044-42254544, 42254554.

2100. KHIVRAJ MOTORS PVT LTD. (1404-01-), 623 MOUNT ROAD, CHENNAI - 600006 PH :9043014530.

CARS INDIA PVT. LTD. (1403-01-), 16 & 17
 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058
 PH:9952000089.

2102. CARS INDIA PVT. LTD. (1403-02-), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI -600020

PH:044-24462020.

2103. POPULAR VEHICLES & SERVICES LTD. (1410-02-), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117 PH .9176906334. 9176906335. 9176906336.

2104. ABT LIMITED (1401-05-), AIA2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093 PH :044-23650498, 23650490.

2105. ABT LIMITED (1401-06-), NO. 1 & 2, VASANTHA PRESS,ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020 PH: 044-24465814, 24465815.

2106. CARS INDIA PVT. LTD. (1403-03-), 4/321, OLD MAHABALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040 PH: 044-24540182 (43590913.

- 2107. POPULAR VEHICLES & SERVICES LTD. (1410-01-), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093 PH :9282405819, 9282348331, 8939915206.
- 2108. ABT LIMITED (1401-07-), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106 PH :044-42267628/604.
- 2109. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (1493-01-), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107 PH: 7305087055
- 2110. ABT LIMITED (1411-01-), 29, WALLES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058 PH: 044-42281707 / 714 / 719 / 720 / 721 / 737/.
- 2111. VISHNU CARS PVT. LTD. (1427-02-), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004 PH: 0427-24661973/74/75.
- 2112. VISHNU CARS PVT. LTD. (1427-01-), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043 PH:044-66813729/7338888000.
- 2113. POPULAR VEHICLES & SERVICES LTD. (1410-03-), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099 PH - 7448814776/23/33
- 2114. CARS INDIA PVT. LTD. (1403-05-), PLOT NO.- 80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112 PH:9952000079.
- 2115. KHIVRAJ MOTORS PVT LTD. (1404-03-), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH - 7299971978
- 2116. ABT LIMITED (1401-0D-), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. - 600041 PH:044-24490584 / 585 /586.
- AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-01-), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115 PH.7401211553.
- 2118. RAJALAKSHMI CARS PVT. LTD. (1486-01-), OLD DOOR NO.69, NEW DOOR NO.20, GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI. - 600060 PH :8939995454/8939995404
- KHIVRAJ MOTORS PVT LTD. (1480-02-), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI -600096 PH 98414 23569.
- 2120. ABT LIMITED (1401-0E-), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119 PH: 044-24502185 / 87 / 88 / 89.

- 2121. VISHNU CARS PVT. LTD. (1427-03-), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089 PH :8754440002/ 9677244332.
- 2122. VISHNU CARS PVT. LTD. (1487-01-), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056 PH :9677127432
- 2123. VISHNU CARS PVT. LTD. (1487-02-), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100 PH :9840929994/ 9840944478
- 2124. VISHNU CARS PVT. LTD. (1427-04-), NEW S. NO. 314/1614, PALLAVARAM THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. 600117 PH 9040057775
- 2125. VISHNU CARS PVT. LTD. (1427-06-), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAL. -600016 PH :044-45590293
- RAJALAKSHMI CARS PVT. LTD. (1486-02-), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095 PH :9841427572/9500125083.
- 2127. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (1493-03-), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR NDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058 PH : 7305087033.
- 2128. POPULAR VEHICLES AND SERVICES LTD (1410-06-), PLOT NO. 10, NEW SURVEY NO. 88/141, 88/12, 88/128, NOOMBAL MAIN ROAD, VANAKARAM, CHENNAI. - 600 077 PH: 044-61343434, 46490006/9.
- 2129. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-02-), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. - 600 049. PH :9841742926.
- 2130. VISHNU CARS PVT. LTD. (1427-07-), SURVEY NO. 19/142, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. 600069 PH 95000 87248
- 2131. VISHNU CARS PVT. LTD. (1427-08-), SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIVUR, KANCHIPURAM DIST., CHENNAI, TAMIL NADU. - 600 073 PH: 8056260022.
- ABT LIMITED (1401-10-), S. NO: 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI - 600089, TN.. - 600089 PH :044-22320161. 8220011558.

2133. POPULAR VEHICLES AND SERVICES LTD (1410-G1-), SURVEY NO: 18/182A1A, NAZARATHPET VILLAGE, POONAMALLE, CHENNAI, TAMIL NADU- 600123 - 600123 PH 7904449644

CHENNAI (GUINDY)

2134. ABT (1401-11-), OLD SURVEY NO: 84/1A & 85/1A, NEW TOWN SURVEY NO:1, RACE COURSE ROAD, GUINDY, CHENNAI, TAMILNADU - 600032 PH 9994437421

CHEYYAR

2135. GANESH CARS PVT. LTD. (BUD1-01-), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407 PH :9787669339.

CHIDAMBARAM

2136. VISHNU CARS PVT. LTD. (CPK1-01-), SURVEY NO. 102/2 & 102/5, BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU. - 608 602 PH 1041-442/41334/73580(455)

COIMBATORE

- 2137. ABT LIMITED (4101-06-), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037 PH :9944400987.
- 2138. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-01-), IVER HOSPITAL PREMISES, TRICHY ROAD, COMBATORE - 641005 PH :8/2086/666
- 2139. ABT LIMITED (4101-05-), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001 PH :044-4232660, 4232666.
- 2140. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-03-), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH :9047055667
- 2141. ABT LIMITED (4101-08-), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043 PH :96009 66056.
- 2142. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-01-), 8/60-C88/62-D, METTUPALAYAM ROAD, G.N.MILLS POST, NEARJOHNBOSCO CHURCH,COMMBATORE - 641029 PH:044-4519140
- 2143. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-07-), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANCANUR, COIMBATORE - 641027 PH :9655219900.
- 2144. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-08-), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE, - 641013 PH :9858877775.

- 2145. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-02-), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004 PH :0422-383220.
- 2146. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-0D-), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE -641004 PH 9655345775.
- 2147. AADHI CARS PVT. LTD. (4108-01-), SURVEY NO.469/2,DOOR NO: 46-2,SATHY MAIN ROAD, RAMAKRISHNAPURAM, GANAPATHY, COIMBATORE - 641035 PH: 0422-400060
- 2148. ABT LIMITED (4101-0D-), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024 PH:78457 74069.
- 2149. AADHI CARS PVT. LTD. (4108-02-), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004 PH :0422-3007701.
- 2150. AADHI CARS PVT. LTD. (4108-03-), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041 PH 10422-3000201
- 2151. AADHI CARS PVT. LTD. (4108-04-), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE. - 641005 PH :0422-4000777.
- 2152. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-0E-), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. - 641008 PH: 0422-2251225.
- 2153. AADHI CARS PVT. LTD. (4108-06-), SF NO. 14/78-A, RENUKA SHELTERS, VILANKURICHI MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL NADU-641048. - 641 006 PH:8754045840
- 2154. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-11-), PLOT NO. 1, RAJA STREET, KALLIMADAI, NANJAPPA NAGAR, COIMBATORE, TAMIL NADU - 641005 PH :9344870035.

COONOOR

2155. SREE SARADHAMBAL AUTOMOBILES PVT LTD (3G01-01-), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102 PH: 95852 77775.

CUDDALORE

2156. ABT LIMITED (5Q01-01-), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003 PH:04142-224567.

2157. VISHNU CARS PVT. LTD. (5Q02-01-), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANANGAKUPPAM, CUDDALORE - 607 001 PH.7338884131.

CUMBUM

2158. MEENAKSHI AUTO ZONE PVT. LTD. (CJS1-01-), PATTA NO. 4388, SURVEY NO. 1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB DIST. -CUMBUM, TAMIL NADU. - 625516 PH 9940094881.

DEVAKOTTAL

2159. SIVA AUTOMOTIVE TRADING PVT LTD (GKV1-01-), SURVEY NO. 5/1A, MULL IGUNDU (SOMANENTHAL VILLAGE), DEVAKOTTAI TALUK, SIVAGANGAI DISTRICT, TAMILNADU -630 303 PH.7094688870.

DHARAPURAM

2160. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-04-), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656 PH 9587550777

DHARMAPURI

2161. SRI AMMAN CARS INDIA PVT. LTD. (7001-02-), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI, TAMILNADU - 636807 PH :9750938892 9159086222.

DINDIGUL

2162. PLA MOTORS (S401-01-), NO. 5, TRICHY
MADURAI BY PASS ROAD, NH-45, DINDIGUL 624001
PH -7010075200

EDAYARPALAYAM, COIMBATORE

2163. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CJK1-01-), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE. - 641025 PH :9047081914.

FRODE

2164. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-01-), 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH:9677987777.

2165. SREE SARADHAMBAL AUTOMOBILES PYT LTD (H701-06-), SURVEY NO. 1363/3, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE. - 638 002 PH :6385095777. 2166. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (H702-01-). OLD G.S. NO. 337 (1 TO 4), RS NO. 259/11A, 10,9,8, SATHY ROAD, PERIYA SEMUR VILLAGE, ERODE, TAMILNADU - 638003 PH. 93/17/91991.

2167. SRICITY AUTO (H702-02-), R.S. NO:1098/3, VINAYAGAR KOVIL STREET, TELEPHONE NAGAR, POONDURAI MAIN ROAD, "ERODE, TAMILNADU - 638002 PH :9626671444.

GOBICHETTIPALAYAM

2168. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-03-), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH :9597560777.

GUDIYATHAM

2169. GANESH CARS PVT. LTD. (CQW1-01-), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM. - 653803 PH :04171-290172

GUDUVANCHERY

2170. VISHNU CARS PVT. LTD. (BAD1-01-), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203 PH:9500121553/9677122225.

GUMMIDIPOONDI

2171. RAJALAKSHMI CARS PVT. LTD. (BIZ1-01-), PLOT NO. F-13, SURVEY NO. 2622, SIPCOT INDUSTRIAL COMPLEX, VILLAGE – PAPPANAKUPPAM, GUMMIDIPONNDI, THIRUVALLUR - 601201 PH : 044-27922080.

HARUR

2172. SRI AMMAN CARS INDIA PVT. LTD. (AAV1-01-), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903 PH :8220014360/7339071500.

IOSUR

2173. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-01-), P.O.- PERANDAPALLI,NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 PH: 9790036377/8883259555.

IDAPPADI

2174. THRIVENI CAR COMPANY PVT LTD. (HI01-01-), SURVEY NO.330/381B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM-637101 PH :9003311488.

KALLAKURICHI

2175. ABT LIMITED (CHG1-01-), SURVEY NO. 215/4,NEAR AKT SCHOOL, DURUGAM ROAD, NEAR DOORDARSHAN BLDG, NEELAMANGALAM VILLAGE., KALLAKURICHI TALUK & DIST., TAMILNADU - 606 202 PH :9047514890

2176. S M CARS (CHG2-01-), SF: 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213 PH: 7094440010.

KANCHEEPURAM

2177. GANESH CARS PVT. LTD. (C601-02-), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH 9842306061

KANGAYAM

2178. SREE SARADHAMBAL AUTOMOBILES PVT LTD (GJI1-01-), NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU. - 638701 PH :7708531777.

KARAIKUDI

2179. ABT LIMITED (4202-05-), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302 PH: 4565-232484 232486

2180. SIVA AUTOMOTIVE TRADING PVT LTD (HX02-01-), NO. 73, SUBRAMANIYAPURAM 9TH STREET, COLLEGE ROAD, KARAIKUDI, SIVAGANGA DIST, TAMILNADU-630002 - 630002 PH .7407210000

KARUMATHAMPATTI

2181. SREE SARADHAMBAL AUTOMOBILES PYT LTD (CJO1-01-1), SF: NO 281/B, NEAR BHARAT PETROL BUNK, VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALIK-PALLADAM, DISTT. COIMBATORE. -641659 PH. 9159210008.

KARUNGAL

2182. ATHEN (SGE1-01-), SURVEY NO. 639/5, KARUNGAL TOWN, VILAVANCODE TALUK, KANYAKUMARI DISTRICT, TAMILNADU - 629157 PH :7094434179

KARUNGALPALAYAM, ERODE

2183. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-08-), RF. NO. 17/1, 2, CAVERI ROAD, KARUNGALPALAYAM, ERODE ,TAMILNADU -638003 PH :8098825000.

KARUR

2184. ABT LIMITED (K401-01-), SF NO. 529/1, SALEM BY PASS, ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002 PH: 04324-222261/62/63.

KATPADI

2185. GANESH CARS PVT. LTD. (C601-04-), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH:9842313139.

KATTUMANNARKOIL

2186. VISHNU CARS (SKG1-01-), SURVEY NO. 68. 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOIL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301 PH: 7358004555.

KELAMBAKKAM

2187. CRESCO (A UNIT OF NEXGEN VENTURE PVT LTD) (SJV1-01-), AGP MAHAAL, SURVEY NO.43, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU - 603 103 PH :7305087002.

KINATHUKADAVU

2188. AADHI CARS PVT. LTD. (BBI1-01-), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109 PH :0422-3000509 3000505

KODUMUDI

2189. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUY1-01-), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI. - 638151 PH:8754756777.

KOTAGIRI

2190. AADHI CARS PVT. LTD. (BAS1-01-), SURVEY NO.8979, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217 PH:8754045891/8754045442.

KOVILPATTI

2191. ASIR AUTOMOBILES PVT LTD (NO01-01-), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501 PH :4632-232220.

KRISHNAGIRI

2192. SRI AMMAN CARS INDIA PVT. LTD. (7001-03-), NH-7.NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU -635001 PH 9500202416/ 8220004270.

KUMBAKONAM

2193. PILLAI & SONS MOTOR CO. (E701-02-), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501 PH : 0435-2442566, 2442565, 9443264696.

MADURAI

- 2194. ABT LIMITED (4202-02-), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018 PH :9994400615.
- 2195. ABT LIMITED (4202-04-), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH:9600966164.
- 2196. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-01-), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH:7402780000.
- SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-02-), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. - 625003 PH 7402788840
- 2198. ASIR AUTOMOBILES PVT LTD (4206-01-), 9, CHAMBAKULAM, MELUR MAIN ROAD, MATTUTHAVANI, MADURAI, TAMIL NADU -625007 PH -9044059911
- 2199. MEENAKSHI AUTO ZONE PVT. LTD. (4207-01-), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008 PH :9442799581
- 2200. MEENAKSHI AUTO ZONE PVT. LTD. (4207-02-), SURVEY NO. 238/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652 014 PH :9940224881.

MADURANTHAKAM

2201. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (CEW1-01-), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. - 603306 PH 7401212797

MALLASAMUDRAM

2202. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CWY1-01-), SF NO. 194/3C, MALLASAMUDRAM MAIN ROAD, MALLASAMUDRAM TOWN, TIRUCHENGODE TALUK, NAMAKKAL DIST., TAMIL NADU. - 637503 PH :9894932019.

MALLUR

2203. THRIVENI CAR COMPANY PVT LTD. (CDH1-01-), SURVEY NO.50/4A, AMANI AMMAPALAYAM VILLAGE, DISTT: DADHAGAPATTY SUB REGISTRATION, MALLUR DISTT. SALEM -636309 PH: 0427-2422399.

MANAMADURAI

2204. ABT LIMITED (CHF1-01-), NO. 35, OLD RAMNAD ROAD, MANAMADURAI TOWN, DISTRICT – SIVGANGAI. - 630606 PH: 9994450331.

MANAPPARAI

2205. PILLAI AND SONS MOTOR COMPANY (SKW1-01-), PLOT NO 262, TRICHY DINDIGUL BYPASS ROAD, VENGAIKURUCHI VILLAGE,MANAPPARAI, TRICHY,TN - 621307 PH: 3489900908.

MANGALAPURAM

2206. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CLX1-01-), DOOR NO. 1/518, SURVEY NO. 75/1, ATTUR MAIN ROAD, MANGALAPURAM (POST), TALUK – RASIPURAM, DISTRICT – NAMAKKAL -638202

PH:7094447871. MANNARGUDI

2207. PILLAI & SONS MOTOR CO. (BKR1-01-), NO. 37, THIRUTHURAIPOONDI ROAD, MANNARGUDI, THIRUVARUR DISTRICT, TAMIL NADU. - 614001 PH : 7094411675.

MAYILADUTHURAI

2208. PILLAI & SONS MOTOR CO. (E701-04-), 46, VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007 PH :04364-251767 251765 9442141703

MECHERI

2209. SM CARS (CVK1-01-), SURVEY NO. 139A/5, PATTA NO. 653, AMANI M.KALIPATTY VILLAGE, MECHERI TOWN, METTUR TALUK, SALEMN DIST., TAMIL NADU. - 636 453 PH. 7094440011

MELUR

2210. SIVA AUTOMOTIVE TRADING PVT. LTD.
(CHC1-01-), OLD SN. 138/1, SURVEY WARD C,
BLOCK NO. 1, T.S. NO. 21/7, VILLAGE AND
TOWN – MELUR, MELUR, DIST.-MADURAL.625109
PH :8098120000

METTUPALAYAM

2211. ABT LIMITED (4101-0C-), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043 PH 95009 45094

METTUR

2212. THRIVENI CARS (BUI1-01-), S.F. NO. 73/7A3C, METTUR TO BHAVANI ROAD, NEAR NATAMANGALAM BUS STOP, MADHAIYANKUTTAI (PO), METTUR TALUK, SALEM, TAMILNADU - 636452 PH : 915966999.

MINJUR

2213. RAJALAKSHMI CARS PVT. LTD. (BPE1-01-). PLOT NO. 27, SRI JANAKI RATHINA NAGAR, VILLAGE AND TOWN – MINJUR, PONNERI – 601 203. DISTRICT – THIRUVALUR. - 601203 PH :044-27933331.

NAGAPATTINAM

2214. PILLAI & SONS MOTOR CO. (CQQ1-01-), NO.181, KEELA ANTHANAPETTAI, ANTHANAPETTAI, P.O. MANJAKOLLAI, PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU-611106 PH 436520250

NAGARCOII

2215. ATHEN (\$503-01-), RESURVEY NO. G. 3/9-7, BUILDING NO. 254-A/3 & 4 K.P ROAD PARAVATHIPURAM, NAGERCOIL KANYAKUMARI DISTRICT TAMILNADU - 629003 PH :8012029777.

NAMAKKAL

- 2216. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-01-), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL -637001 PH :937164888.
- 2217. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-03-), 1/412/1 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001 PH - 737192888

NATRAMPALLI

2218. GANESH CARS PVT. LTD. (SPR1-01-), NO:8/12-1, NEAR ARJUNA SULOCHANA MAHAL, BENGALURU- CHENNAI MAIN ROAD, VELAKALNATHAM, NATRAMPALLI, TIRUPATTUR DIST. TAMIL NADU - 635854. - 635854.

NEGAMAM

PH:73977 53146

2219. ABT LIMITED (CHD1-01-), 68, 69, ABT BUS STAND, PALLADAM ROAD, PERIA NEGAMAM, POLLACHI, TAMIL NADU - 642120 PH :99948 76794.

OMALUR

- 2220. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-04-), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012 PH: 8220010070/8883529888.
- 2221. THRIVENI CAR COMPANY PVT LTD. (UM01-01-), PLOT NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT, NH-T, KAMALAPURAN VILLAGE, OMALUR, DISTRICT – SALEM, TAMIL NADU -638309.

OOTY

2222. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-05-), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001 PH: 97511 09229.

P.N. PALAYAM, COIMBATORE

PH:4290-222711.

2223. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-04-), NO.12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020 PH:0422-698899.

PADAPPAI

2224. VISHNU CARS PVT. LTD. (CRO1-01-), SURVEY NO.368/2A/1, 368/2A/2, VANDALLUR-WALAJABAD MAIN ROAD, PADAPPAI EAST, CHENNAI. - 601301 PH : 8754417168

PALANI

2225. PLA MOTORS (S401-02-), NO:13-1-11C-1, WEST AYAKUDI, DINDIGUL ROAD, PALANI, DINDIGUL DISTRICT, TAMIL NADU - 624613 PH:04545-290900.

PARAMATHIVELUR

2226. SREE SARADHAMBAL AUTOMOBILES PYT LTD (COL1-01-1), SURVEY NO. 11, NEAR KONGU SCHOOL, NAMAKKAL BYPASS ROAD, PADAMUDI PALAYAM, TALUKA – PARAMATHIVELUR, NAMAKKAL, TAMIL NADU. - 638182
PH :8870666599.

PATTUKKOTTAI

2227. PILLAI & SONS MOTOR CO. (CJA1-01-), SURVEY NO. 85/6, 85/4, 84/6, DOOR NO. 314/11, SRI JANAGAL AKSHINI NAGAR, THANJAVUR ROAD, ALADIKUMULAI VILLAGE, TALUK PATTUKOTTAI, THANJAVUR. - 614615 PH. 7094433074.

PAVITHRAM

2228. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CWT1-01-), SURVEY NO. 102/1B, NAMAKKAL MAIN ROAD, PAVITHRAM - 637 021 PH:9600320888.

PENNAGARAM

2229. SRI AMMAN CARS INDIA PVT. LTD. (BXZ1-01-), SURVEY NO. 419/1, VILLAGE – PARUVADHANAALLI, PENNAGARAM, DHARMAPURI. - 636810 PH-9715044700.

PERAMBAI UR

 PLA MOTORS (2305-04-), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212 PH :8870004960.

PERNAMBUT

2231. SRI AMMAN CARS INDIA PVT LTD (SRA1-01-), SURVEY NO:708,PLOT NO: 87,88 & 89, PERNAMBUT TO GUDIYATTAM ROAD, PERNAMBUT,VELLORE DISTRICT, TAMIL NADU -635810 -635810 PH:7094403100.

PERUNDURAI

2232. SREE SARADHAMBAL AUTOMOBILES PYT LTD (BTX1-01-), SF NO.542/1, KOVAI MAIN ROAD, PERUNDURAI VILLAGE, PERUNDURAI DISTT. ERODE, TAMIL NADU - 638052 PH -967440/177.

POCHAMPALLI

2233. SRI AMMAN CARS PVT. LTD. (CUW1-01-), NEW SURVEY NO. 561/5, VILLAGE – JUMBUKUTTANPATTI, POCHAMPALLI, KRISHNAGIRI. - 635206 PH :9600469988

POLLACHI

2234. ABT LIMITED (L301-01-), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003 PH:99944 53265.

POLUR

2235. GANESH CARS PVT. LTD. (GLV1-01-). AZHAGO COMPLEX, SURVEY NO:77/1, CUDADALOR TO CHITTOOR ROAD, POLUR. THIRUVANNAMALAI DISTRICT.TAMILNADU - 606803 PH -9842/345/300

PUDUKOTTAI

2236. PLA MOTORS (2305-02-), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003 PH: 04322-265566/67.

PUNJAI PULIAMPATTI

2237. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BKO1-01-), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTI - 638459, SATHY THALUK, ERODE. - 638459 PH -6385810777.

RAJAPALAYAM

2238. MEENAKSHI (5V02-01-), DOOR NO. 98, COTTON MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117 PH -9443785681

RAMANATHAPURAM

2239. SIVA AUTOMOTIVE TRADING PVT. LTD. (0U02-01-), SURVEY NO. 172/182C, 172/2C, VILLAGE - ACHUNTHANVAYAL. ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM. - 623502
PH. 8098110000.

RAMESHWARAM

2240. SIVA AUTOMOTIVE (SKI1-01-), NO:2307, SURVEY NO:279/3A, RAMNAD ROAD, ARIYANKADU, RAMESHWARAM, RAMANATHAPURAM DISTRICT, TAMILNADU -623529 PH:7402788998.

RANIPET

2241. GANESH CARS PVT. LTD. (CJJ1-01-), SURVEY NO. 44/1, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET, TAMIL NADU. - 632403 PH 9842330388

RASIPURAM

2242. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BSJ1-01-), SURVEY NO:41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401 PH :4286-2314027539972888.

REDHILLS

2243. CARS INDIA PVT. LTD. (1403-04-), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066 PH :9952000078.

SALEM

- 2244. ABT LIMITED (4101-03-), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009 PH:0427-4066988, 406999.
- 2245. THRIVENI CAR COMPANY PVT. LTD. (A203-01-), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005 PH: 0427-2440000
- 2246. S.M.CARS PVT. LTD. (A204-01-), SF NO. 64/2C3. ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. -636202 PH.7094448000. 7034449000.
- 2247. THRIVENI CAR COMPANY PVT. LTD. (A203-03-), SURVEY NO. 57, VILLAGE -MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103
- 2248. S M CAR PRIVATE LIMITED (A204-02-), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007 PH. 7094440053.

PH:0427-2291000.

SANKAGIRI

2249. THRIVENI CAR COMPANY PVT LTD. (BTN1-01-), SURVEY NO.171/5B, KCK PLAZA, KACHERIDADU, DEPUTY COLLETCTOR ROAD, SALEM, SANKAGIRI (TAMIL NADU) - 637301 PH :+914283242600 +914283242600

SANKARANKOVIL

2250. AADHI CARS PVT. LTD. (BXS1-01-), PLOT NO. 132H., OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL -627756 PH :7397728025.

SATHY ROAD, ERODE

2251. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-09-), SF:N0:245, KANDHAIYAN THOTTAM, SOOLAI, SATHY ROAD, VEERAPPANCHATTIRAM, ERODE, TAMILNADU -638004 PH: 9655240486.

SATHYAMANGALAM

2252. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BGU1-01-), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM – 638 401, DISTRICT – ERODE, TAMIL NADU - 638401 PH :9897592777

SATTUR

2253. MEENAKSHI AUTO ZONE PVT. LTD. (SDR1-01-), SURVEY NO. 18/10,CHATRAPATTI VILLAGE, MADURAI KANYAKUMARI NATIONAL HIGHWAYS, SATTUR, VIRUDHUNAGAR DISTRICT,TAMILNADU - 626203 PH 1994004881

SEYDUNGANALLUR

2254. ASIR AUTOMOBILES PVT LTD (S603-02-), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK -SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU. - 628809 PH :8344992/20

SHOLINGUR

2255. GANESH CARS PVT. LTD. (GLUI-01-), NO.401, ABAKKONAM MAIN ROAD, OPPOSITE TVS FOUNDARY, PANDIYANELLORE, SHOLINGHUR, WALAJA TALUK, RANIPET DISTRICT, TMILANADU -631102 PH. 7397395259.

SIVAKASI

2256. MEENAKSHI AUTO ZONE PVT. LTD. (X602-01-), 372 D & E. ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. - 626123 PH :4562-231281

SRIPERUMBUDUR

2257. RAJALAKSHMI CARS PVT. LTD. (7B01-01-). SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET. NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105 PH :893995469.

SRIVILLIPUTHUR (RAJAPALYAM)

2258. ABT LIMITED (4202-03-), NO. 10/32, PADIKKASUVAITHANPATTI, NEAR RTO OFFICE, SIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125 PH :95009 05020.

SULUR

2259. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-05-), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR - 641 402 PH: 0422-3199901.

TENKASI

2260. AADHI CARS PYT. LTD. (BXR1-01-), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE – KUNARAMANALLUR, TENKASI. - 627814 PH 9500991475

2261. AADHI CARS PVT. LTD. (BXR1-02-), DOOR NO. 47, MADHALAMPARAI, TENKASHI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU. - 627 814 PH :9500991475.

THAMMAPATI

2262. SM CARS (SNH1-01-), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI, SALEM DISTRICT, TAMILNADU - 636113. - 636113 PH: 7094440010.

THANJAVUR

2263. PILLAI & SONS MOTOR CO. (E701-01-), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU -613007 PH :04362-271723, 271724, 9443264164.

THARAMANGALAM

2264. THRIVENI (CSQ1-01-), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST., TAMIL NADU. - 636501 PH :9159355999/9003504760.

THENI

2265. MEENAKSHI AUTO ZONE PVT. LTD. (9U02-01-), DOOR NO. 871/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT – THENI - 625531 PH:9789703881.

THIRUMULLAIVOYAL

2266. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (CDW2-01-), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULAIVOYAL DISTT. CHENNAI - 600062 PH:7305087044.

THIRUVALLUR

2267. KHIVRAJ MOTORS PVT LTD. (1404-04-), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001 PH :99520 78443.

2268. KHIVRAJ MOTORS PVT LTD. (1404-95-), PLOT NOS.218,219,220,225,226,227.228 AND S.NOS.18/5.18/6. EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001 PH. 97103 94818.

THIRUVANNAMALAI

2269. GANESH CARS PVT. LTD. (C601-03-), NO.-5, NH-78, KRISHANAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601 PH :9842305072.

THIRUVARUR

2270. PILLAI & SONS MOTOR CO. (E701-03-), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001

PH:04366-250250, 9442163707.

2271. PILLAI & SONS MOTOR COMPANY (LJ01-01-), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 601/BF1, SUNDARAVILAGAM, NARSINGHAMPET, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001 PH :942/1835/09

THISAYANVILLAI

2272. AADHI CARS PVT. LTD. (CVL1-01-), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI. -627 657
PH. 7339511187.

THUCKALAY

2273. ATHENS (BW02-01-), DOOR NO. 5/78B, (RE SURVEY NO-530/7) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE — MUTHALAKURUCHI, KALKULAM-TALUK, THUCKALAY, DISCTRICT — KANYAKUMARI, TAMILNADU - 629174 PH :8012029888.

THURAIYUR

2274. PLA MOTORS (CSE1-01-), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010 PH: 9486763725.

TIRUCHENDUR

2275. ASIR AUTOMOBILES PVT LTD (CCJ1-01-), SURVEY NO. 2201/D1A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215 PH:7373900220.

TIRUCHENGODE

2276. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE -637001 PH :4288-282292.

TIRUNELVELI

2277. AADHI CARS PVT. LTD. (A303-01-), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI, TAMIL NADU - 627357 PH -9500991610

 AADHI CARS PVT. LTD. (A303-03-), DOOR NO.
 RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU. - 627 011.
 PH :9500991610.

TIRUNVELL

2279. AADHI CARS PVT. LTD. (A303-04-), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU - 627001 PH -95009 91479.

TIRUPATHUR

2280. GANESH CARS PVT. LTD. (BPD1-01-), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601 PH: 9842308909.

TIRUPATTUR(SIVAGANGAI)

2281. ABT LIMITED (CHH1-01-), DOOR NO. 8/2/29A, KARAIKUDI ROAD, TIRUPATHUR, DISTRICT – SIVAGANGAI. - 630211 PH :9994450331

TIRUPUR

2282. ABT LIMITED (4101-09-), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR -641601

PH:95009 98368.

2283. SHASHTI CAR PVT LTD (Y701-01-), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604 PH: 044-2430275/ 2430276.

TIRUTHANI

2284. CARS INDIA PVT. LTD. (CIC1-01-), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI, TAMILNADU-631209 PH. 7258773860

TIRUVANNAMALAI

2285. SRI AMMAN CARS INDIA PVT LTD. (LX02-01-), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601 PH. 7094471293.

TONDI

2286. SIVA AUTOMOTIVES (SHW1-01-), SURVEY NO: 85/16, WARD 1078, SOUTH 110-PU STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU - 623409 PH :7402788820.

TRICHY

2287. ABT LIMITED (2302-02-), 4/40, COLLECTOR
OFFICE ROAD, CANTONMENT, TRICHY - 620001
PH :0431-4221620.

- 2288. PLA MOTORS (2305-01-), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009 PH:9994599777/9600950960.
- 2289. ABT LIMITED (2302-03-), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005 PH :0431-4221555.
- 2290. PLA MOTORS (2305-03-), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001 PH: 0431-2411540/530
- 2291. PILLAI & SONS MOTOR CO. (2306-01-), SURVEY NO. 10B, 1A/D, CHENNAI TRICHY BY-PASS ROAD, VILLAGE THIRUNALLUR, TRICHY. 620002 PH :8489900902 9384826814

TUTICORIN

2292. ASIR AUTOMOBILES PVT LTD (8603-01-), SURVEY NO. 25/18, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002 PH. 7373501220.

UDUMALPET

2293. ABT LIMITED (QR01-01-), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126 PH:99944 41645.

USII AMPATTI

2294. SIVA AUTOMOTIVE TRADING PVT LTD (SNC1-01-), NO. 33/1824, SILAMPATTI -MADURAI HIGHWAY, POTTULUPATTI PANCHAYATH, USILAMPATTI, MADURAI DISTRICT, TAMILNADU-625532 - 625532 PH.7868088840.

UTHANGARAI

2295. SRI AMMAN CARS INDIA PVT. LTD. (CFY1-01-), SURVEY NO. 104/1, 104/1B, VILLAGE – THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304 PH :9715044600

UTHUKOTTAI

2296. KHIVRAJ MOTORS PVT LTD. (CUC1-01-), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602 026 PH:7299635536.

VALLIYUR

2297. AADHI CARS PVT. LTD. (BXQ1-01-), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVERNUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002 PH: 7373091462.

VANDAVASI

2298. GANESH CARS PVT. LTD. (CRN1-01-), SURVEY NO.272, KEELSATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408 PH . 7305807484

VANIYAMBADI

2299. GANESH CARS PVT. LTD. (BJY1-01-), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI, VELLORE (DIST), TAMIL NADU. - 635801 PH.9842327709.

VELLORE

- 2300. GANESH CARS PVT. LTD. (C601-01-), 91 NEW BY-PASS ROAD, VELLORE 632004 PH :9842377110.
- 2301. SRI AMMAN CARS INDIA PVT. LTD. (C802-01-), DOOR NO. 68. SURVEY NO. 667. NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUKA, GANDHINAGAR, VELLORE DIST., TAMIL NADU. - 632006 PH. 7094471320, 7094471321.
- 2302. SRI AMMAN CARS INDIA PVT. LTD. (C602-02-). SURVEY NO. 316/382, 316/80. 316/88, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE. VELLORE TALLUK & DIST. ON NH48 (CHENNAI – BENGALURU HIGHWAY), VELLORE, TAMILNADUR - 632010 PH 7/094471320

VILLUPURAM

2303. ABT LIMITED (5Q01-02-), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602 PH :04146-225509 / 225590.

VIRUDHACHALAM

2304. ABT LIMITED (BMA1-01-), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101 PH :04143-262631/262632/262633.

VIRUDHUNAGAR

2305. MEENAKSHI AUTO ZONE PVT LTD (SCF1-0A-), DOOR NO:8504, SURVEY NO. 1116. PELAMPATTI VILLAGE,VIRUDHUNAGAR MADURAI HIGH WAY, OPPOSITE TO VV COLLEGE., TALUK & DIST. VIRUDHUNAGAR, TAMILMADU - 628001 PH :9940094881.

TAMILNADU

ALANGUDI

2306. PLA MOTORS (SLR1-01-), S. NO. 400/6-A-2, NO. 1/85, MANGALAPURAM, PUDDUKOTTAI TO ALANGUDI ROAD, NEAR KNP KALYANA MANDAPAM, ALANGUDI TOWN & TALUK, PUDUKKOTTAI DIST., TN - 622301 - 622301 PH :88704T54054466.

CHENNAI

2307. VISHNU CARS (1488-01-), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTHANGAL, CHENNAI, TN - 600032 PH:7550360444.

CHENNAI- MAMBAKKAM

2308. KHIVRAJ MOTORS (1404-G1-), SURVEY NO:76/A, NO:27, PLOT NO. D-2, KEELAKOTTAYUR, VANDALUR TO KELAMBAKKAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI,TN -600127 PH:9841591558.

CHETPET

2309. GANESH CARS (SGY1-01-), DOOR NO: 35/C, CHETPET TOWN, CHETPET TALUKA, TIRUVANNAMALAI DIST.,TAMILNADU, - 606 801 PH: 98423 06337.

CHINNAMANUR

2310. ABT LIMITED (SKX1-01-), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO. 8/15, PERIYAKULAM TO CHINNAMANUR MAIN ROAD, KEELAPOOLANANDHAPURAM, CHINNAMANUR MUNCIPAL TOWN & TALUK, THENI DIST, TN- 625515 - 625515 PH. 97156863213.

DENKANIKOTTAI

2311. AMMAN CARS (SDT1-01-), SURVEY NO:766/ 1B11, THABILAGOUNDAN THOTTI, DENKANIKOTTAI , KRISHNAGIRI DISTRICT, TAMILNADU - 635107 PH :9585599935.

DHARAPURAM

2312. SREE SARADHAMBAL AUTOMOBILES PVT LTD (ON01-01-), SF 134/43-3, DINDIGUL BYPASS ROAD, NEAR INDIAN OIL PETROL PUMP, DHARAPURAM TOWN AND TALUKA, TIRUPPUR DIST., TAMILNADU-638656 - 638656 PH :9787853000.

GANGAVALI

2313. THRIVENI CARS (SOS1-01-), SURVEY NO # SF NO. 22/3A1A,106 ATTUR MAIN ROAD,GANGAVALLI,SALEM, TN - 636105 PH :9159722999.

KAWALKINARU

2314. AADHI CARS PVT. LTD. (CSUI-01-), SURVEY NO:1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAVALKINARU JUNCTION, KAVALKINARU (VADAKANKULAM), TIRUNELVELI, - 627105 PH:7339111259.

KULASEKHARAM

2315. ATHEN CARS (SIL1-01-), ITE NO: 409/17A – ARANIVILAI, NEAR RANGE OFFICE, CONVENT ROAD – KULASEKARAM, KALKULAM –TALUK,KANIYAKUMARI DIST. TN - 629 161 PH -70044715R9

KUMBAKONAM

2316. PILLAI AND SONS MOTOR CO. (E701-06-), D. NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO, THIRUPHUVANAM TOWN & POST. KUMBAKONAM, THANJAVUR DISTRICT, TAMILNADU - 612103
PH :848990138.

MADURAI

2317. SIVA AUTOMOTIVE TRADING PVT LTD (4205-03-), PATA NO. 615, SURVEY NO. 32/2, 32/4, THENI MAIN ROAD, ACHAMPATHU, MADURAI, TN - 625019 PH .7402738888.

NEYVELI

2318. VISHNU CARS (CPN1-01-), SURVEY
NO:545/2A1A, NH-45C, OPP. NATIONAL
COLLEGE, KUMBAKONAM - CHENNAI HIGH
WAY, NEAR NEVYELI ARCH GATE, NEYVELI
T.S, KEELAKOLLAI, MARUNGUR
POST, PANRUTI, CUIDDALORE DISTRICT,
TAMILNADU - 807103
PH 3934059575

PERUMBAKKAM

2319. KHIVRAJ MOTORS PVT LTD (SSL1-01-), NO:1,VARALAKSHMI NAGAR, THIRUVALLUR ROAD, PERAMBAKKAM, KANCHIPURAM DIST, TAMILNADU- 631402 - 631402 PH:7338786693.

SIVAGANGAI

2320. ASIR AUTOMOBILES (SDC1-01-), S. NO: 144/1, SIVAGANGAI-THONDI ROAD, PAIYAURPILLAIVAYAL, SIVAGANGAI,TAMILNADU - 630561 PH: 9750372220.

THANJAVUR

 PLA MOTORS FIRM (E702-01-), SURVEY NO. 173/684, TRICHY-THANJAVUR ROAD, NANJIKOTTAI BYPASS, THANJAVUR, TAMILNADU - 613005 PH :9344006433/9344003877.

THIRUMAZHISAI

2322. CARS INDIAPVT.LTD (SMH1-01-), DP 30, SIDCO INDUSTRIAL ESTATE, THIRUMAZHISAI, - 600124 PH :9500064259.

THOPPUR

2323. SRI AMMAN CARS (SLU1-01-), SITE NO. 422 (2A, BANGALORE TO SALEM HIGH WAY, AMMANI, THOPPUR VILLAGE & TOWN,NALLAMPALLI TK, DHARMAPURI DISTRICT, - 636352 PH -9790004273.

TINDIVARAM

2324. VISHNU CARS (SDI1-01-), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM, TAMILNADU -604102

PH:9500039023. TIRUPPUVANAM

2325. MEENAKSHI AUTO ZONE PVT LTD (SQZ1-01-), NO:21,BAKHYA NAGAR, WARD NO:1, MANDAPAM MAIN ROAD, TIRUPPUVANAM, SIVAGANGA DISTRICT, TAMIL NADU - 630611 -630611

PH :9442799581.

2326. AIE CARS (SHG1-01-), SURVEY NO:383/3B-B2, UTHIRAMERUR MAIN ROAD, UTHIRAMERUR, KANCHEEPURAM DISTRICT, TAMILNADU -603406 PH :7299057387

VELLAKOVIL

2327. SRI CITI AUTO (SGO1-01-), SURVEY NO-502/C 8371/D, NO. 196,197,KOVAI KARUR MAIN ROAD, VELLAKOVIL, TIRUPUR DIST., TAMILNADU -638111 PH :9994606000.

VENGAL

2328. VISHNU CARS PVT LTD (STC1-01-), NEW SURVEY NO:67/18, 67/20, CHINMAYA NAGAR, THAMARAIPAKKAM VILLAGE, VENGAL, THIRUVALLUR DIST., TAMILNADU-601103 - 601103 PH :9500121559

TELANGANA

ADILABAD

2329. ADARSHA AUTOMOTIVES PVT LTD (BTM1-01-), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001 PH :9133307724

ARMUR

2330. VARUN MOTORS PVT. LTD. (BBN1-01-), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) -503224 PH :9052901888.

BASARA

2331. ADARSHA (SSY1-01-), URVEY NO 59/E, RAVINDRAPUR , BASARA, NIRMAL DISTRICT, TELANGANA - 504101 PH :8886092222.

BATCHUPALLY, HYDERABAD

2332. SAI SERVICE PRIVATE LIMITED (1011-09-), SURVEY NO 499/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090 PH:7330771111.

RELIAMPALLY

2333. ADARSHA AUTOMOTIVES (SJZ1-01-), SURVEY NO 5/31, PEDANAPALLI, BELLAMPALLY, MANCHERIAL DISTRICT, TELANGANA - 504251 PH 3886092722

BHADRACHALAM

2334. VARUN MOTORS (CLZ1-01-), H-NO 1-138/1B-OLD SARPAKA ROAD, BHADRACHALAM, BHADRADI-KOTHAGUDEM, TELANAGANA - 507111 PH :9885576602.

BHUPALAPALLY

2335. ADARSHA AUTOMOTIVES PYT LTD (D502-04-), 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH -506169 PH -7799790526

BODHAN

 VARUN MOTORS PVT. LTD. (0801-01-), PLOT
 NO. 5/2, ACHANAPALLY CROSS ROAD, BODHAN, DIST.-NIZAMABAD, TELANGANA. - 503 185
 PH 9885576602 9553714189

CHEVELLA

2337. GEM MOTORS (INDIA) PVT. LTD. (CBL1-01-), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. -510101 PH. 9912899128. 9912834567.

DUBBAK

2338. AADARSHA (--), ADARSHA AUTOMOTIVE PVT LTD, OPP. BUS DEPOT, BYPASS ROAD, SIDDIPET, TELANGANA - 502108 PH :9160746633.

ETUNAGARAM

2339. WIN MOTORS (SOJ1-01-), H.NO 12-412 & 12-413, AKULAVARI GHANPUR, ETURNAGARAM, MULUGU DISTRICT, TELANGANA - 506165 PH :8688828005.

GADWAL

2340. SRI JAYARAMA MOTORS PVT. LTD. (WP01-02-), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125 PH :8096990074, 8096996671.

GAJWEL

2341. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYU1-01-), SURVEY NO. 220, VILLAGE - PRAGNAYPUR, GAJWEL, DISTRICT - MEDAK, TELANGANA. - 502311 PH :8885088080, 9849017827.

GHATKESAR

2342. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYL1-01-), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY. - 501301 PH: 3885088075, 9849017827.

HUSNABAD

2343. ADARSHA AUTOMOTIVES PVT LTD (GJE1-01-), SURVEY NO. 202/E. H. NO. 12-1/4 & 12-1/4, VILLAGE & MANDAL - HUSNABAD, DIST. -SIDDIPET, TELANGANA. - 505467 PH :8886092222, 7995835552

HYDERABAD

- 2344. THE MITHRA AGENCIES (1002-01-), 1-8-670, NEAR RTC CROSS ROAD, AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020 PH:9966838294.
- 2345. RKS MOTORS PVT. LTD. (1003-01-), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482 PH: 040 44454443, 9010811166.
- 2346. RKS MOTORS PVT. LTD. (1003-02-), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039 PH:040 23434504 9010822210
- 2347. VARUN MOTORS PVT. LTD. (4603-04-), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, - 500037 PH :9885208555. 9985745222.
- 2348. VARUN MOTORS PVT. LTD. (4803-08-), ADITYA NAGAR COLONY, ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008 PH:64551700, 886114856.
- 2349. VARUN MOTORS PVT. LTD. (1010-01-), PLOT NO. VI- VII A & B.UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT. 500070 PH :9885208555.
- VARUN MOTORS PVT. LTD. (4603-06-), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036 PH:4553395, 4547676, 9885093360.
- 2351. RKS MOTORS PVT. LTD. (1003-04-), 16-11-19/5/2/C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036 PH :9010811192

- 2352. THE MITHRA AGENCIES (1002-03-), PLOT NO. 3-4-10,NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081 PH :04023113399 04023113388 9859917702
- RKS MOTORS PVT. LTD. (1003-05-),
 11-6-191/192,OPP. HOTEL HARSHA, PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD -500001
 PH. 9848811158.
- 2354. VARUN MOTORS PVT. LTD. (4603-0A-), 1-11-200.SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016 PH :9885206555
- 2355. THE MITHRA AGENCIES (1002-04-), 8-18-138, PLOT NO. 8,NEAR MARGADARSI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074 PH -9963551265
- 2356. GEM MOTORS (INDIA) PVT. LTD. (1009-01-), RAGHUVENDRA SOCIETY,KONDAPUR,,HYDERABAD, ANDHRA PRADESH - 500084 PH :9912899128
- 2357. GEM MOTORS (INDIA) PVT. LTD. (1009-02-), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH. 9912944538
- 2358. SAI SERVICE PRIVATE LIMITED (1011-01-), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, BALANAGAR, HYDERABAD - 500037 PH 9010827755.
- 2359. THE MITHRA AGENCIES (1002-05-), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD 500076 PH .040271776999 040271777999 9983551167
- 2360. VARUN MOTORS PVT. LTD. (1012-01-), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008 PH. 19985104806, 69997979.
- 2361. RKS MOTORS PVT. LTD. (1003-08-). D.NO.1-10-1/285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062 PH.779979810.
- 2362. SAI SERVICE PRIVATE LIMITED (1011-04-), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD. - 500059 PH:7799352000.
- 2363. VARUN MOTORS PVT. LTD. (4603-0G-), 1-10-28/1 SY. NO.285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH:7799600093.

- 2364. VARUN MOTORS PVT. LTD. (4603-0H-), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH :8886322776.
- 2365. VARUN MOTORS PVT. LTD. (4603-0J-), PLOT NO. 1-45, SY.NO:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE 500019
 PH:8886067847.
- 2366. SAI SERVICE PRIVATE LIMITED (1011-07-), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH :9703811411.
- 2367. ADARSHA AUTOMOTIVES PVT LTD (1014-01-), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005 PH :8142326633
- 2368. RKS MOTORS PVT. LTD. (1003-09-), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD 500072 PH 9010811131
- 2369. SAI SERVICE PRIVATE LIMITED (1011-08-), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018 PH :7799360003.
- KALYANI MOTORS PVT. LTD. (1018-01-), PLOT NO. A-23 & A31/1, I.D.A, NACHARAM, HYDERABAD. - 500076 PH: 9100114863
- 2371. GEM MOTORS (INDIA) PVT. LTD. (1009-03-), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA. - 500089 PH. 9912341524.
- 2372. ADARSHA AUTOMOTIVES PVT LTD (1014-02-), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218 PH:9603296633.
- 2373. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-01-), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAYE CB SQUARE, VILLAGE – GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032 PH -9100909401
- 2374. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-02-), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081 PH :779916666.

- 2375. KALYANI MOTORS PVT. LTD. (1018-02-), M/S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE – KARMANGHAT, MANDAL – SAROORNAGAR, DISTRICT – RANGA REDDY, HYDERABAD. - 500079 PH. 9100222377.
- 2376. ADARSHA AUTOMOTIVES PVT LTD (1019-01-),
 H. NO. 2-4-34715, SURVEY NO. 34, SOGBOWLI
 (PILLER NO. 185 OF P.V. NARSIMHA RAO
 EXPRESSWAY), RAJENDRANAGAR,
 UPPERPALLY, ATTAPUR, RANGA REDDY,
 HYDERABAD, TELENGANA. 500048
 PH. 9705-36633, 2827426633.
- 2377. THE MITHRA AGENCIES (1002-06-), SURVEY NO.57, D.NO.8-2-108, BIRAMALGUDA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. - 500079 PH.8886621232.
- 2378. VARUN MOTORS PVT. LTD. (4603-0M-), KSN GARDENS, 5-162/6, BORABANDA MAIN ROAD, HYDERABAD. - 500018 PH :9885579623.
- 2379. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-03-), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEDIMETLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA). - 500055 PH :7799784567.
- 2380. ADARSHA AUTOMOTIVES PVT LTD (1014-03-), SURVEY NO. 220/A, AMBEDKAR ROAD, OPP HERITAGE FRESH, NEAR AMBAEDKAR STATUE, NEAR ALWAL, SECUNDERABAD. - 500 010 PH :9291859954.
- 2381. KALYANI MOTORS PVT. LTD. (1018-03-), SURVEY NO. 305, NIZAMPET, MANDAL -QUTBULLAPUR, DIST.-RANGA REDDY, HYDERABAD. - 500 072 PH: 040 68158999, 9121223221.
- 2382. THE MITHRA AGENCIES (1002-07-), SURVEY NO,12,13,148. 15, MEDIPALLY, GHATKESAR MANDAL, RANGA REDDY DISTRICT, HYDERABAD, TELANGANA - 500098 PH:8886697954.
- 2383. JAYABHERI (1085-01-), SURVEY NO 686, UPPAL, MEDCHAL-MALKAJGIRI DISTRICT, HYDERABAD, TELANGANA - 500013 PH :8142506666

IBRAHIMPATNAM

2384. PAVAN MOTORS PVT. LTD (CSF1-01-), S.NO. 123/E, MPP PATELGUDA, IBRAHIMPATNAM, RANGA REDDY - 501506 PH :8790144499.

JAGITIAL

2385. ADARSHA AUTOMOTIVES PVT LTD (N601-04-), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, -505327

PH:8886152222.

PH:7799626633

JANGAON

2386. ADARSHA AUTOMOTIVES PVT LTD (KI01-01-), H.NO.339, HYDERABAD ROAD, JANGAON. -506167

KAMAREDDY

2387. VARUN MOTORS PVT. LTD. (KX01-01-).
H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111
PH -9985557570.

KARIMNAGAR

2388. ADARSHA AUTOMOTIVES PVT LTD (N601-01-), H.NO. 8-6-313/1,HYDERABAD ROAD,BY-PASS JUNCTION,KARIMNAGAR - 505001 PH :8886600315

2389. ADARSHA AUTOMOTIVES PVT LTD (N601-05-), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. - 505001 PH:8886152222.

2390. VARUM MOTORS PVT. LTD. (N603-01-), BEARING NO. 1-81/3/10/2, SURIVEY NO. 221 & 222, REKURTHY VILLAGE, KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR MANDAL & DIST., TELANGANA. - 505 001 PH 1913/337678 / 886619373.

2391. VARUN MOTORS (N603-02-), SURVEY NO. 277,278/B, AREPALLY VILLAGE, TEEGALAGUTTAPALLI GRAM PANCHAYAT, KARIMNAGAR - 505001 PH 9885210555

KEESARA

2392. JAYABHERI AUTO (SEI1-01-), H-NO 3-56/9/6A, SURVEY NO 5,KEESARA, MEDCHAL-MALKAJGIRI, TELANGANA - 501301 PH :9676076666

KHAMMAM

2393. MITHRA AUTO AGENCIES PVT LTD (2604-02-), SURVY NO. 182.WARANGAL ROAD, OPP. FCI GODOWNS, PEDA THANDA, KHAMMAM - 507003 PH:8886063527.

KHANAPUR

2394. VARUN MOTORS (SND1-01-), NC-14-10A, NEAR SAI BABA TEMPLE, OPP. GIRLS HIGH SCHOOL, VILL & MANDAL: KHANAPOOR, DIST- NIRMAL -504203 PH :8886619373

KODAD

2395. PAVAN MOTORS PVT. LTD (BRP2-01-), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD, DISTRICT – NALGONDA, TELANGANA -508206 PH : 8008899995

KOLI APUR

2396. SRI JAYARAMA (SHC1-01-), SURVEY NO 259/AA2, 259/E2,KOLLAPUR, NAGAR KURNOOL DISTRICT, TELANGANA - 509102 PH - 9085880015

KOSGI

2397. JAYARAMA (--), SY. NO. 1798/B, KOSGI TOWN, SITUATED TANDOR ROAD KOSGI(G.P & MANDAL), NARAYANPET DIST, TELANGANA -509339 PH : 8096990069.

KOTHAGUDEM

2398. VARUN MOTORS PVT. LTD. (2603-04-), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM - 507101 PH:8297168222/9052549111.

LUXITTIPET

2399. VARUN MOTORS (SFS1-01-), SURVEY NO 289/E, NEAR BY SSR GARDENS, LUXETTIPET, MANCHERIAL DISTRICT, TELANGANA - 504215 PH :8297848999.

MAHABUBABAD

2400. ADARSHA AUTOMOTIVES PVT LTD (CQS1-01-), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD. - 506101 PH 9177746333 7799700525

MAHABUBNAGAR

2401. SRI JAYARAMA MOTORS PVT. LTD. (WP01-01-), PLOT NO.C1 & C2, INDUSTRIAL ESTATE, METTUGADA, MEHBOOBNAGAR - 504001 PH:8096998846.

MAHESHWARAM

2402. ADARSHA AUTOMOTIVES PVT LTD (CORT-01-). (BEARING #5-187, SURVEY NO.:336/A1, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY - 501359 PH:8142326633, 9703152222.

MANCHERIAL

2403. ADARSHA AUTOMOTIVES PVT LTD (N601-03-), BEHIND MAHINDRA TRACTORS SHOWROOM,BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208 PH :8886302222.

MANTHANI

2404. VARUN MOTORS (SHS1-01-), SURVEY NO 1018, H NO 16-4/D2, PLOT NO 5, LAINGADDA STREET, MANTHANI, - 505184 PH :8886619373.

MEDAK

2405. VARUN MOTORS PVT. LTD. (KF01-01-), SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK (MDL & TOWN) - 502110 PH:9154953337.

MEDCHAL

2406. AUTOFIN LIMITED (CID1-01-), H. NO. 11-27/1, SURVEY NO. 401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401 PH: 8885040020.

METAPALLY

2407. ADARSHA (BJF1-01-), SURVEY NO. 40/U/2 CHOULAMADHI, METPALLY PIN CODE 505325 -505325 PH: 8888092222

MIRYALGUDA

2408. PAVAM MOTORS PVT. LTD (WR01-01-), SURVEY NO-940 &943, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD MIRYALAGUDA ,NALGONDA DISTRICT, ANDHRA PRADESH - 508207
PH 8790900399

MOINABAD

2409. GEM MOTORS (INDIA) PVT. LTD. (CFN1-01-), SURVEY NO. 70, PLOTI NO. 4, VILLAGE AND GRAM PANCHAYAT - HIMAYATH NAGAR, MANDAL - MOINABAD, DISTRCT - RANGA REDDY. - 500075 PH : 591289128, 7997994845.

NAGARKURNOOL

2410. SRI JAYARAMA MOTORS PVT. LTD. (EV01-01-), SURVEY NO.44/A AND 45/A, UYYALWADA VILLAGE, NAGARKURNOOL, TELANGANA -509209 PH :8096990074

NALGONDA

2411. PAVAN MOTORS PVT. LTD (AN01-01-), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001 PH :247399.8790344499.

NARAYANKHED

2412. VARUN MOTORS PVT. LTD. (CG11-01-), D. NO. 15-111/25/B/5/A/1, SY NO. 57/2, BHUMAN COLONY, GRAM PANCHAYAT 8 MANDAL -NARAYANKHED, DISTRICT – MEDAK, TELANGANA. - 502286 PH. 9885210555.

NARAYANPET

2413. SRI JAYARAMA MOTORS PVT. LTD. (BPG1-01-), SURVEY NO. 468/4, MAHABUBNAGAR ROAD, NARAYANPET TOWN, DIST.-MAHABUBNAGAR, STATE - TELANGANA. - 509210 PH:8096997701, 7893177448.

NARSAPUR

2414. KALYANI MOTORS PVT. LTD. (SCX1-01-), SURVEY NO 66, BLOCK NO-19,NARSAPUR,DISTRICT:MEDAK, TELANGANA. - 534275 PH: 9100067766.

NIRMAL

2415. ADARSHA AUTOMOTIVES PVT LTD (N601-02-), H. NO. 1-1-131, SHASTRINAGAR, MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106 PH :888634222

NIZAMABAD

2416. VARUN MOTORS PVT. LTD. (1H02-01-), PLOT NO. GP 1-57/4/1,PANGARA BORGOAN,NIZAMABAD - 503230 PH :8297848999. 9052080444.

PALWANCHA

2417. VARUN MOTORS PVT. LTD. (HF01-01-), SURVEY NO.758 & 757. NEHRU NAGAR, PALWANCHA (NEW POLANCHA) MANDAL & TOWN, BHADRADRI KOTHAGUDEM DISTT., TELANGANA. - 507115 PH :8397163329

PARGI

2418. VARUN MOTORS PVT. LTD. (CBO1-01-), HOUSE NO. 2-356 JANGAIAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL – PARGI, DISTRICT – RANGA REDDY. - 510501 PH :988521055, 985200000.

PARKAL

2419. ADARSHA (SEK1-01-), SY.NO 946, H.NO 5-27, VIKAS NAGAR, PARKAL, WARANGAL. - 506164 PH:8886742222.

PEDAPALLY

2420. ADARSHA AUTOMOTIVES PVT LTD (GKN1-01-), SURVEY NO 142, H NO 185, RANGAMPALLI VILLAGE, PEDDAPALLI, TELANGANA - 505172 PH:8886618155, 8886672222.

RAMAGUNDAM

2421. ADARSHA AUTOMOTIVES PVT LTD (BGA1-01-), 5-6-172 SURVEY NO. - 259/B, MEDIPALLY SHIVAR, RAMAGUNDAM MUNICIPALITY, DISTRICT - KARIM NAGAR, ANDHRA PRADESH - 505209 PH :8886144550.

RAMAYAMPET

2422. VARUN MOTORS PVT. LTD. (CDO1-01-), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT – MEDAK. - 502101 PH :9885208555, 9703803399.

SADHASHIVPET

2423. SAI SERVICE (SFG1-01-), PLOT NO. 2, SY NO. 974, GURUNAGAR COLONY, OLD BOMBAY HIGHWAY ROAD, SADASHIVPET, SANGAREDDY DIST. 502291 PH -9067377888

SANGAREDDY

2424. SAI SERVICE PRIVATE LIMITED (1011-05-), H.NO.4-8-92/1/4/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH.7661811000.

SATUPALLI

2425. MITHRA AUTO AGENCIES PVT LTD (SHD1-01-), SURVEY NO. 75 NEAR VIVEKANANDA STATUE,SATHUPALLI, KHAMMAM. - 507303 PH:9848988312.

SECUNDERABAD

- 2426. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (K601-01-), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, -500015
- PH:040 44554747, 8885088080.
 2427. AUTOFIN LIMITED (K606-01-), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD 500011
- PH :8885040130.
 2428. VARUN MOTORS PVT. LTD. (4603-0I-),
 1-10-176/I, BEHIND VARUN TOWERS-I, OPP.
 HYDERABAD PUBLIC SCHOOL, BEGUMPET,
 SECUNDERABAD, HYDERABAD, TELANGANA
 STATE. 500016
- PH:9985552452.
 2429. RKS MOTORS PVT. LTD (K605-01-), PLOT NO.
 207, TADBUND, SECUNDERABAD. 500009
 PH:9010801004
- 2430. AUTOFIN LIMITED (K606-02-), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD. - 500090 PH :8885040126
- 2431. PAVAN MOTORS PVT. LTD (K608-02-), PLOT NO. 1-12, 749, 750, SURVEY NO. 751/2, VENKATADRI NAGAR, NEW MIRJALGUDA, MALKAJGIRI, SECUNDERABAD, TELANGANA - 500047 PH :9121293690.

SHAD NAGAR

2432. SRI JAYARAMA MOTORS (P) LTD. (WS01-01-), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH. - 500216 PH:8096996671.

SHAMIRPET

2433. RKS MOTOR PVT. LTD. (SDE1-01-), SHED NO 2-242, MAJEEDPUR CROSS ROADS, SHAMIRPET, MEDCHAL-MALKAJGIRI, TELANGANA - 500078 PH :9848866618.

SHANKARPALLY

2434. SAI SERVICE PRIVATE LIMITED (CEXT-01-). SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203 PH :9966377888 9912899128. 9703811011.

SIDDIPET

2435. ADARSHA AUTOMOTIVES PVT LTD (CAL1-01-), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA. - 502103 PH :09703716633 9160746633

SIRCILLA

2436. ADARSHA AUTOMOTIVES PVT LTD (BYW1-01-), H. NO. 10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMMAGAR ROAD, SIRCILLA, DISTRICT – KARIMMAGAR, TELANGANA - 505301 PH :8886618155. 8142244131.

SURYAPET

2437. PAVAN MOTORS PVT. LTD (BLC1-01-), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. -508213 PH :8008899995 : 27502750

TALLADA

2438. MITHRA AUTO (SOU1-01-), SURVEY NO 890/A, D.NO 7-8, NARAYANAPURAM, TALLADA, TELANGANA - 507167 PH :9848988312.

TANDUR

2439. VARUN MOTORS PYT. LTD. (CFR:-01-), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47. SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA. -501141 PH :888619370

THORRUR

2440. ADARSHA AUTOMOTIVES PVT LTD (BYV1-01-), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163 PH: 9059438007, 7799790527.

TOOPRAN

2441. ADARSHA (SEJI-01-), PLOT NO 788, SY NO 185, 184,179U, NAGULAPALLY VILLAGE,TOOPRAN MANDAL,TELANGANA STATE: TELANGANA CITY: TOOPRAN PIN: 502334 CITY CATEGO - 502334 PH: 3291859954.

UTNOOR

2442. ADARSHA AUTOMOBILES (SEG1-01-), OPP., KB COMPLEX, UTNOOR, DIST- ADILABAD - 504311 PH:7075792221.

VIKARABAD

2443. GEM MOTORS (INDIA) PVT. LTD. (BYM1-01-), SHOP NO. 3-2-93/2, VILLAGE – YENNAPALLY, VIKARABAD MUNCIPALITY, VIKARABAD, DISTRICT – RANGA REDDY, TELANGANA . -501101 PH 9912349840

WANAPARTHY

2444. SRI JAYARAMA MOTORS (P) LTD. (WQ01-01-), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103 PH:8096903879.

WARANGAL

- 2445. ADARSHA AUTOMOTIVES PVT LTD (D502-02-), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007 PH: 8886132222.
- 2446. ADARSHA AUTOMOTIVES PVT LTD (D502-03-), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL - 506001 PH :8886492729
- 2447. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D503-01-), SURVEY NO. 16, 161A & 161B. OPPOSITE KAKATIYA UNIVERSITY GATE-2, LASHKERSINGARAM REVENUE VILLAGE, HANAMKONDA MANDAL, WARANGAL. 506 001
 PH :868882010.
- 2448. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (3050-302-), PLOT NUMBER 9,10,11 & 130, SURVEY NUMBER 148/A&B OF BHEEMRAM VILLAGE, WARANGAL - 506015 PH :888828015.

ZAHIRABAD

2449. SAI SERVICE PRIVATE LIMITED (BAT1-01-), PLOT NO-5, NEAR IBP PETROL BUNK, NH-9, ALIPUR, ZAHIRABAD, MEDAK (DIST), ANDHRA PRADESH - 502220 PH : 7660005206.

TELENGANA

KAGHAZNAGAR

2450. ADARSHA AUTOMOTIVES (SCN1-01-), H.NO :1-61/3,BORIGAON,KAGHAZNAGAR,KOMARAMB HEEM - 504296 PH :888609222

PALAKURTHY

2451. WIN MOTORS (SCY1-01-), SURVEY NO 537/B, MAIN RAOD, PALAKURTHY, JANGAON DISTRICTTELANGANA. - 506317 PH:8688838005.

TRIPURA

AGARTALA

2452. JAIN UDYOG (6901-01-), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003 PH :9862149275

2453. JAIN UDYOG (6901-05-), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA. - 799003 PH :70057 71216

2454. JAIN UDYOG (6901-06-), KHATIAN NO. 1843, MOUJA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008 PH 97746 18831

2455. PALLAVI MOTORS (6902-01-), 44 NH ROAD, DAG NO. 495, DAG NO. 1748, DAG NO. 867, POST OFFICE KHERPUR, AGARTALA (TRIPURA) -799008 PH 9884052488

AMARPUR

2456. JAIN UDYOG (CVR1-01-), NEAR MOTOR STAND, AMARPUR,TRIPURA - 799101 PH:97748 45751

AMBASSA

2457. JAIN UDYOG (CDT1-01-), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289 PH : 70052 88437

DHARMANAGAR

GREATER NOIDA

2458. JAIN UDYOG (6901-03-), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - 799250 PH :97747 93164.

UDAIPUR

2459. JAIN UDYOG (YU01-01-), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR,TRIPURA (SOUTH) - 799116 PH :9774020152.

UP

2460. VIPUL MOTORS (T202-01-), PLOT NO. 64, ECOTECH 12, GREATER NOIDA (WEST), UP. -201009 PH :9811233385

UTTAR PRADESH

AGRA

2461. MADHUSUDAN MOTORS PVT LTD (6603-01-), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - 282005 PH :531102-05.

2462. MADHUSUDAN MOTORS PVT LTD (6603-02-), GANESH GANJ, PRATAPPURA, AGRA - 282001 PH:9837097887.

2463. MADHUSUDAN MOTORS PVT LTD (6603-03-), 6-A , VIBHAV INDUSTRIAL STATE, AGRA -282007 PH :3299221.

- 2464. MADHUSUDAN MOTORS PVT LTD (6603-04-), 26/253, SULTAN GANJ KI PULIA, MAUZA LASKARPUR, AGRA - 283203 PH :9837097894.
- 2465. KTL PVT. LTD. (6606-01-), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004 PH :8449715033.8449715099.
- 2466. PREM MOTORS PVT. LTD. (6607-01-), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002 PH :9690010799.
- 2467. KTL PVT. LTD. (6606-02-), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001 PH :8449715099
- 2468. MERAK VEHICLES (6609-01-), KHASRA NO 65 & 74, MAUZA MOHAMMADPUR, AGRA-DELHI ROAD (NH-2), SIKANDRA, AGRA UTTAR PRADESH-282007. - 282007 PH :9690486139.

AKBARPUR

- 2469. KTL PVT. LTD. (2801-03-), KANPUR ROAD, AKBARPUR - 209206 PH :7408409348.
- 2470. SMARTWHEELS PVT. LTD. (7201-08-), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOBPUR, AKBARPUR, DIST-AMBEDKAR NAGAR (U.P.) - 224122 PH:7705803248.

ALIGARH

- 2471. DEV MOTORS (P) LTD (B601-01-), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001 PH :521771
- 2472. DEV MOTORS (B601-04-), PLOT NO 97, VILLAGE SIKANDERPUR, BHUKRAVALI, GT ROAD BYE PASS, ALIGARH - 202002 PH : 735134557

ALLAHABAD

2473. AMITDEEP MOTORS (2901-01-), 26 SULEM SARAI, G.T ROAD, ALLAHABAD - 211001 PH :8948122749, 9026111339, 7738555692, 9839890333, 9936413399

AMETHI

2474. KTL AUTOMOBILE PVT. LTD. (BBB2-01-), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR -227409 PH:7379557377.

AMROHA

2475. AKANKSHA AUTOMOBILES PVT. LTD. (AO01-01-), AMROHA – JOYA ROAD, NEAR PUNJAB NATIONAL BANK, AMROHA, UTTAR PRADESH, PIN CODE: 244221 - 244221 PH:7247800064.

ANPARA

2476. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (NJ02-01-). KAHUWA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT – SONEBHADRA. - 232101 PH: 7052547903, 9721905002, 9151154306, 9450544961

ANLIPSHAHR

PH:7055118430.

2477. SK UNIVERSE (SI01-01-), KHASRA NO. 341, BULANDSHAHR ROAD, ANOOPSHAHR, DIST. BULANSHAHR, PIN-203390, UTTAR PRADESH -203390

AONLA

2478. KAVISHA MOTORS PVT LTD (CVI1-01-). COMMERCIAL PLOT. RAN NAGAR ROAD, NEAR MUNICIPALITY OFFICE, TEHSIL - AONLA. DIST., BAREILLY, STATE- UTTAR PRADESH. - 243301 PH. 07895890222. 07895898030.

AURAI

2479. VARANASI MOTORS PVT LTD (CBM1-01-), KHATA / KHATAUNI NO. 00045, GT ROAD (EHAK BHAURA), OPP. CHINI MILL VILLAGE & TEHSIL AURAI, DISTT: BHADHOI, UTTARPRADESH, PIN 2221 301 - 2221301 PH. 9938360662, 7617002786.

AURAIYA

2480. KULDEEP MOTORS (QJ01-01-), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241 PH -9235358444

AYODHYA (FAIZABAD)

2481. SMART WHEELS (7201-03-), GHATAMPUR MAGALSI, OPP TRIMURTI HOTEL, TEHSIL SOHAWAL, FAIZABAD, UTTAR PRADESH -224001 PH : 7705800602

AZAMGARH

2482. DEEP MOTORS (K501-01-), HARBANSHPUR NARAULI, AZAMGARH - 276001 PH :9838072905.

BABRALA

2483. AKANKSHA AUTOMOBILES PVT. LTD. (SJU1-01-), CHANDAUSI ROAD, BABRALA, DISTRICT SAMBHAL, UTTAR PRADESH. - 243751 PH : 7895600005

BACHRAWAN

2484. KTL AUTOMOBILE PVT. LTD. (CGX2-01-), VISHNUPUR, PHARWAN, RAEBARELI-LUCKNOW ROAD, DIST. -RAEBARELI. - 229301 PH: 99184512222.

BAH

2485. KTL PVT. LTD. (CHI1-01-), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH - 283104 PH:7055707169. 8449715033.

BAHERI

2486. KAVISHA MOTORS PVT LTD (BSB1-01-), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMILLA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201 PH:8756000007. F067696668

BAHRAICH

2487. ANAND MOTORS AGENCIES LTD (1301-05-), LUCKNOW ROAD,BEHRAICH,UTTAR PRADESH -271801 PH :9519596080.

RALLIA

2488. DEEP MOTORS (K501-03-), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001 PH :9838072917

BALRAMPUR

2489. ANAND MOTORS AGENCIES LTD (XB01-01-), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201 PH:6307995976.

RANDA

- 2490. MY CAR PVT. LTD. (2803-03-), KALUKUAN, TINDWARI ROAD, BANDA - 210001 PH:9792971223.
- 2491. SUMITRA DS MOTORS (SPB1-01-), PURANPUR ROAD, BANDA, TEHSIL BANDA, THANA BANDA, DISTT. SHAHJAHANPUR – U.P. - 242042 PH: 9336408074.

BANSI

2492. ARBIT AUTOMOBILES PVT LTD (GMD1-01-), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA: KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT: SIDARTHNAGAR - 272153 PH: 89534 12821.

BANTHRA

2493. MEGA MOTORS (SGQ1-01-), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401 PH :9919101456.

BARABANKI

2494. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-03-), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001 PH: 9838075960.

BARAUT

2495. TANYA AUTOMOBILES (LL02-01-), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611 PH: 7055300019.

BAREILLY

2496. CORAL MOTORS (P) LTD. (5602-01-), STATION ROAD, BAREILLY - 243001 PH: 559191

- 2497. CORAL MOTORS (P) LTD. (5602-03-), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002 PH:0581-2554922.
- 2498. KAVISHA MOTORS PVT LTD (5601-01-), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502
- PH: 8756000000, 7607696666.
 2499. ETERNITY MOTORS LLP (5603-01-), KHASRA
 NO. 803/2, PILIBHIT BYPASS ROAD, PEER
 BAHORA, OPP, FUN CITY, BAREILLY, UTTAR
 PRADESH: 243001
 PH: 9105555746.

BASTI

- 2500. SMARTWHEELS PVT. LTD. (7201-05-), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI -270002 PH :286294.
- 2501. ARBIT AUTOMOBILES (7203-03-), SANSARPUR FUTAHIA POST GANDHI NAGAR DISTRCIT BASTI UTTAR PRADESH - 272182 PH :8853417871

BEHTA

2502. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (GMI1-01-), KHASRA NO. 254, OPPOSITE SANGAM MOTORS, KURSI ROAD, BEHTA -226026 PH. 6388901514.

BHADOHI

2503. VARANASI MOTORS PVT. LTD. (8402-02-), VARNASI ROAD, BHADOHI - 221401 PH :9838360662.

BHINGA

2504. ANAND MOTORS (BVG1-01-), PATNAKHARGAURA, BHINGA, SHRAVASTI -271831 PH :9415013059.

BHOJPUR

2505. MOTORCRAFT SALES INDIA PVT LTD (SQC1-01-), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL – MODINAGAR, DISTRICT – GHAZIABAD. - 201204 PH: 9410038456.

BIJNOR

2506. SHAKUMBARI AUTOMOBILES (P) LTD (B01-01-), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELH-BIJNOR HIGHWAY, BIJNOR, DIST. – BIJNOR, UTTAR PRADESH. - 246701 PH: 8630881409.

BILARI

2507. AKANKSHA AUTOMOBILES PVT. LTD. (SDM1-01-), 2KM-BILARI NH 509, NEAR SBS SCHOOL, BILARI, MORADABAD 244001 - 244001 PH:7900600008.

BILASPUR

2508. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-01-), NH-87, OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR - 244921 PH : 9105370007.

BISALPUR

2509. CORAL MOTORS PVT LTD (CXB1-01-), KHASRA NO. 668, VILLAGE: BISALPUR, DISTT: PILIBHIT, UTTAR PRADESH - 262201 PH:9837891846.

RISWAN

2510. CONCEPT CARS LIMITED (SEW1-01-), BILJHARIYA, OPPOSITE-555, BRICK FIELD, BISWAN - 261201 - 261201 PH -760769666

BUDAUN

2511. CORAL MOTORS (P) LTD. (5602-04-), PLOT NO.-72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103 PH -9837891846

BULANDSHAHAR

2512. SK UNIVERSE (M502-02-), KHASRA NO.2261, NEAR T POINT , BYPASS SIKARPUR ROAD ,BULANDSHAHR - 203001 PH :7055118430.

BULANDSHAHR

2513. SK UNIVERSE (M502-01-), KHASRA NO 561, BHOOR, OPP PANDIT PETROL PUMP, BULANSHAHR - 203001 PH :9219694600

CHAKIA

2514. STAR CARS (A UNIT OF SARASWATI VEHICLES LIP) (CJH1-01-), KATHSILA NAHER, NEAR SAINT JOHN'S SCHOOL CHAKIA, DISTRICT – CHANDAULI. - 232101 PH :9450544961.

CHANDAUSI

2515. AKANKSHA AUTOMOBILES PVT. LTD. (XA01-01-), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412 PH:7248000002.

CHAURI CHAURA

2516. ARBIT AUTOMOBILES (SIR1-01-), ARAZI NO 561 DOMARI KHURD, CHAURI CHAURA, GORAKHPUR - 273201 PH:8953412821.

CHIBRAMAU

2517. KTL PVT. LTD. (BMY1-01-), PLOT GHATA NO. 70, MAUJA - LALAKPUR, VILLAGE - CHHIBRAMAU, DIST.-KANNAUJ, UTTAR PRADES. - 209721 PH. 7408409200, 9414113666.

CHITRASENPUR

2518. AGR (SMM1-01-), KHASRA NO-194, CHITRASENPUR, KACHHUWA ROAD, VARANASI, PIN -221313 - 221313 PH - 9889803355

DALMAU

2519. KTL AUTOMOBIELS (SGZ1-01-), DALMAU ROAD, OPPOSITE BHAGIRATHI GUEST HOUSE -229203 PH 9918451222

DANKAUR

2520. MOTORCRAFT SALES (HG01-01-), OPP. SHRI DRONACHARYA DEGREE COLLEGE, DANKAUR, DIST. - GAUTAM BUDH NAGAR, HARYANA. -203201 PH :9810289355.

DEOBAND

2521. ATELIER AUTOMOBILES (XK02-01-), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001 PH :7500220011.

DEORIA

2522. SMARTWHEELS PVT. LTD. (M601-01-), PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST. -DEORIA, UTTAR PRADESH. - 274001 PH -7765800602

2523. ARBIT AUTOMOBILES (M602-01-), ARAZI NO 467 MI & 607 MAUJA SONUGHAT PARGANA SALEMPUR MAJHAULI, DEORIA, UTTAR PRADESH - 274001 PH :8953412821.

DHAMPUR

2524. SHAKUMBARI AUTOMOBILES (P) LTD (CPC1-01-), KHASRA NO. 205, OPPOSITE, UHSA SMARAK SCHOOL, MORADABAD ROAD, TEHSIL - DHAMPUR, MOJA - ALEHPUR, DIST.-BIJNOR, UTTAR PRAGESH. - 246761 PH :9675970960.

DIBYAPUR

2525. KULDEEP MOTORS (SLA1-01-), AURAIYYA ROAD, DIBIYAPUR - 206244 PH :9235258425.

DOMARIAGANJ

2526. SMARTWHEELS (SMW1-01-), VILL & POST – CHAUKHARA, DOMARIAGANJ, DISTT – SIDDHARTH NAGAR - 272193 PH : 7705800602.

ETAH

2527. MADHUSUDAN VEHICLES PRIVATE LTD. (XG01-01-), 472 ASROLI, GT ROAD, ETAH -207125 PH: 9837097894.

2528. DEV MOTORS (XG02-01-), GATA NO 685/4 VILL GIRORA, ETAH-KASGANJ ROAD, ETAH, UP -207001 PH : 7351345577.

FTAWAH

2529. KULDEEP MOTORS (6E01-01-), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001 PH :257029.

FAIZARAD

2530. SMARTWHEELS PVT. LTD. (7201-02-), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001 PH - 7705803245

FAKHARPUR

2531. ONE UP (SRT1-01-), GHASIPUR, FAKHARPUR, BAHRAICH (UP) - 271902 PH: 9935275786

FARIDPUR

2532. KAVISHA MOTORS PVT LTD (CEM1-01-), GATE NO. 216, KASBA SARAI, TEHSIL – FARIDPUR, DISTRICT – BAREILLY, UTTAR PRADESH. -243503 PH :07895980222. 07895980300.

FARRUKHABAD

2533. MY CAR PVT. LTD. (2803-04-), NEKPUR KALAN, FARRUKHABAD - 209625 PH:9792970093.

FATEHABAD

2534. KTL PVT. LTD. (BL01-01-), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT – AGRA, UTTAR PRADESH - 283111 PH :8449710051

FATEHPUR

2535. KTL PVT. LTD. (2801-04-), NH-2, OPP. RTO OFFICE, KANPUR ROAD, FATEHPUR - 212601 PH:7408409383, 7408400000.

FEROZABAD

2536. MADHUSUDAN VEHICLES PRIVATE LTD. (DF01-01-), 746, ALI NAGAR KEJRA, NEAR RAJA KA TAL CROSSING, NH 2, FEROZABAD - 283203 PH 9690003077.

GAJRAULA

2537. AKANKSHA AUTOMOBILES PVT. LTD. (XD01-01-), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA -244235 PH. 7895400003.

GHAZIABAD

2538. ROHAN MOTORS LTD. (5904-01-), 432 MUKAND NAGAR, G.T.ROAD, GHAZIABAD - 201001 PH :9971466644, 011-204170810, +911204170816, +911204170826, +911204170819.

2539. REGENT AUTOLINKS (P) LTD (5902-01-), A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001 PH

:0120-4641900,904,911,8744042111,9999740464,9711127008.

2540. ROHAN MOTORS (5904-02-), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD -201102

PH :09310404354 , 9971466644 . 2541. T.R. SAWINEY MOTORS PUT ID (5905-01-), PLOT NO. 96, RAJINDER NACAR INDUSTRIAL AREA, MOHAN NAGAR, GHAZIABAD, DISTT. -GHAZIABAD, U.P. - 201007 PH :9999052148 : 999130012.

2542. SNV AUTO (5906-01-), PLOT NO. 15, SOUTH SIDE GT ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH - 201001 - 201001 PH :9650324325.

2543. GLOBUS AUTO (5907-01-), 139, PANDAV NAGAR, GHAZIABAD, PIN-201001, UTTAR PRADESH -201001 PH :8588872804

GHAZIPUR

2544. AGR AUTOMOBILES PVT. LTD. (8403-03-), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR -2333001 PH : 2361136

GHIROR

2545. KULDEEP MOTORS (CVA1-01-), KARHAL ROAD, TEHSIL – GHIROR, DISTRICT – MAINPURI, UTTAR PRADESH. - 205121 PH :9536755555.

GOLA

2546. SMARTWHEELS PVT LTD (SMS1-01-), NEAR KANYA INTER COLLEGE, BHARASADA, GOLA, DISTT – GORAKHPUR, UTTAR PRADESH -273408 PH : 7705800602.

GONDA

2547. SMARTWHEELS PVT. LTD. (7201-07-), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH ROAD, GONDA, UTTAR PRADESH, - 271001 PH:7705803261.

GORAKHPUR

2548. SMARTWHEELS PVT. LTD. (7201-01-), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012 PH :7705803152.

2549. SMARTWHEELS PVT. LTD. (7201-06-), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012 PH:7705803109.

- 2550. SMARTWHEELS PVT. LTD. (7202-01-), PLOT NO AL-4, SECTOR-9, GIDA, GORAKHPUR. -273209 PH :9235401004.
- 2551. ARBIT AUTOMOBILES PVT LTD (7203-01-), ARAZI NO. 66/1/1 MI & 66/2/1MI, 66 MI, MAUZA -MAHEWA MUSTAKIL, NEAR FALMADID CHOWK, TRANSPORT NAGAR, GORAKHPUR, UTTAR PRADESH. - 273016 PH 9652417821
- 2552. ARBIT AUTOMOBILES (7203-1B-), MEDICAL COLLEGE ROAD, NEAR SPORTS COLLEGE, GORAKHPUR, UTTAR PRADESH - 273016 PH :8953412821.

GOSAIGAN.I

2553. BRIGHT 4 WHEEL SALES PVT. LTD. (CWK1-01-), KHASRA NO. 24, VILLAGE - SHEKHANPUR, PARGANA MOHANLAL GANJ, TEHSIL -MOHANLAL GANJ, DIST.-LUCKNOW, UTTAR PRADESH. - 226501 PH :9838075929.

GREATER NOIDA

2554. ROHAN MOTORS LTD. (T201-01-), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH -201306 PH :4513739, 4513736, 4513734, 4513700/9958506111

HAIDERGARH

2555. BRIGHT 4 WHEEL SALES PVT. LTD. (CVU1-01-), PROPERTY SHOP NO. 5, 6 AND 7, VILLAGE -GOTAUNA, PARGANA - HAIDERGARH, TEHSIL -HAIDERGARH, DISTRICT - BARABANKI. - 225124 PH :9935275786, 938075929.

HAMIRPUR

2556. KTL PVT. LTD. (QH01-01-), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301 PH:7704907587.

HAPUR

2557. ROHAN MOTORS (6G01-01-), DELHI-HAPUR ROAD, OPPOSITE SSV INTERCOLLEGE, HAPUR, DISTRICT- GHAZIABAD - 245101 PH: 8476853930, 9536129292.

HARDOI

- 2558. CONCEPT CARS PVT. LTD. (QE01-01-), NANAK GANJ, LUCKNOW ROAD, HARDOI - 241001 PH:8756000000, 7607696666.
- 2559. CONCEPT CARS PVT. LTD. (OE01-04-), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001 PH.7607696666, 8756000000.

HATHRAS

 DEV MOTORS (P) LTD (B601-03-), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS - 204101 PH: 9917435500

IGLAS

2561. DEV MOTORS (SOD1-01-), MATHURA ROAD, IGLAS, DISTRICT ALIGARH. - 202124 PH :9837549000

ITUNJA

2562. BRIGHT 4 WHEEL (SJD1-01-), 90M GATA GRAM MANDOLI, ITTAUNJA, LUCKNOW, UTTAR PRADESH-226203. - 226203 PH:7011482503.

JAGDISHPUR

2563. BRIGHT 4 WHEEL SALES PVT. LTD. (XC01-01-), KATHORA,MUSAFIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH - 227817 PH: 9721526961, 9628374814.

JAGNER

2564. MERAK VEHICLES (SPJ1-01-), SHRI RAM GARDEN, AGRA ROAD, NEAR RADHA KRISHNA MANDHIR, JACNER, UTTAR PRADESH, 283115 -283115 PH. 7896500400.

JALALABAD

2565. SUMITRA DS MOTORS PVT. LTD. (GJX1-01-), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSILL: JALALBAD, DIST. SHAHJHANPUR -242221 PH 9336408074 9897019488

JAUNPUR

2566. KIRTIKUNJ AUTOMOBILES PVT. LTD. (6H01-01-), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001 PH:9554951026.

JHANSI

- 2567. SURI AUTOMOBILES (6001-01-), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN – 284002. -284002 PH :8881811383.
- 2568. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (6002-01-), PLOT NO 486, 487, 488, 489 AND 477 (PATTA NUMBERS), MAUZA - KOCCHABHANWAR, BLOCK -BADAGAON, TEHSIL AND DISTT - JHANSI. -284128 PH :3889440999.

KANNAUJ

2569. KTL PVT. LTD. (2801-05-), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725 PH:7408409305.

KANPUR

- 2570. KTL PVT. LTD. (2801-01-), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002 PH :7408409341.
- 2571. MY CAR PVT. LTD. (2803-01-), 84/54 C, JARIB CHOWKI ,G.T. ROAD, KANPUR - 208003 PH :9792970511.

- 2572. KTL PVT. LTD. (2801-02-), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007 PH :7408409253
- 2573. MY CAR PVT. LTD. (2803-02-), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022 PH :9792970086
- 2574. S B CARS PVT.LTD (2806-01-), 77B , FAZALGANZ, KANPUR - 208012 PH :2241660
- 2575. MY CAR PVT. LTD. (2803-05-), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004 PH 9792970081
- 2576. S B CARS PVT.LTD (2806-05-), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR -208017 PH :7408525252.
- 2577. KULDEEP MOTORS KANPUR LLP. (2808-01-), BUKHAND NO. 756, 756A, 757, BLOCK: W, YOJNA: 2, JUHI KALAN, BARRA BYE PASS, KANPUR. - 208017 PH 9076608701
- 2578. KTL PVT. LTD. (2801-07-), ARAZI NO. 1110, VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA NAGAR, KANPUR, UTTAR PRADESH - 208 026 PH 7408408379.

KARWI

2579. MY CAR PVT. LTD. (CBU1-01-), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 210205 PH :983902986. 9792970391.

KASGANJ

2580. MADHUSUDAN VEHICLES PRIVATE LTD. (BVX1-01-), ARAJI NO. 646, SAURO ROAD, KASGANJ, DISTRICT – KASGANJ, UTTAR PRADESH. - 207123 PH :9837097863, 9690003034.

KASIA

2581. ARBIT AUTOMOBILES PVT LTD (GMJ1-01-), MAUJA BHAISAHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206 PH :8953412871

KATRA

2582. SUMITRA DS (SHY1-01-), GRAM: SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL - TILHAR, SHAHJAHANPUR - 242301 PH :9336408074

KAUSHAMBI

2583. SARASWATI MOTORS (SLQ1-01-), ARAZI NO 1228, KORRO MANJHANPUR, KAUSHAMBI, UTTAR PRADESH. PINCODE - 212207. - 212207 PH :8090854005

KAYAMGANJ

2584. MY CAR PVT. LTD. (CBV1-01-), BYE PASS ROAD , NEAR KHAN PETROL PUMP, VILLAGE: KAYAMGANJ, DISTT: FARUKHABAD - 209502 PH:9839029868, 9792970391.

KHAIR

2585. DEV MOTORS (SHQ1-01-), PLOT 117, ALIGARH PALWAL ROAD, VILLAGE CHAMAN NAGARIYA, KHAIR - 202138 PH:7351345577.

KHANDAULI

2586. MADHUSUDAN MOTORS PVT LTD (BVV1-01-), KHASRA NO. 97, AGRA-SADABAD, HATHRAS ROAD, OPP. HDFC BANK, VILL.-«HANDAULI, TEHSIL ETHMADPUR, DIST. AGRA, UTTAR PRADESH. - 283126 PH. 9837097863, 9890003034.

KHURJA

2587. SK UNIVERSE (SKP1-01-), OLD GT ROAD, KHURJA, DISTRICT- BULANDSHAHAR, UTTAR PRADESH - 203131. - 203131 PH:7055118430.

KHUTAR

2588. SUMITRA DS MOTORS PVT LTD (CIO1-01-), VILLAGE – NARAINPUR, VIKRAMPUR GOLA ROAD, KHUTAR, DISTRICT – SHAHJAHANPUR, UTTAR PRADESH. - 242405 PH: 9338408074.

KIRAOLI

2589. PREM MOTORS PVT. LTD. (BJZ1-01-), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA – JAIPUR HIGHWAY, KIRAWALI, DISTRICT – AGRA, UTTAR PRADESH. - 283122 PH :9690010799.

KONCH

2590. KULDEEP MOTORS (SNZ1-01-), NEW PATEL NAGAR, CITY KONCH, DISTRICT - JALAUN, UTTAR PRADESH - 285205 PH :9839015046.

KOSI

2591. UMA MOTORS PVT. LTD. (CPV1-01-), KHASRA NO. 245, CITY - KOSI, DIST.-MATHURA. - 281004 PH:9997683333, 9997511006.

KUBERPUR

2592. KTL PVT. LTD. (6606-04-), KHASRA NO. 248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006 PH: 8449715099.

KUNDA

2593. SARASWATI MOTORS (CBF2-01-), ALLAHABAD-LUCKNOW HIGHWAY, KUNDA, DISTRICT PRATAPGARH. - 230204 PH:8090854005.

LAKHIMPUR

2594. SUMITRA DS MOTORS PVT LTD (W201-02-), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001 PH : 7522888333, 9415770000. 2595. SUMITRA DS (M301-01-), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE -BHARDSARIYA, KHERI, LAKHIMPUR - 262702 PH:7522888333, 9415770000.

LALGANJ

2596. KTL AUTOMOBILE PVT. LTD. (CSL2-01-), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206 PH:9918451222.

LALITPUR

- 2597. SURI AUTOMOBILES (6001-03-), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH :9451496015.
- 2598. VELOCITY CARS (6,02-01-), LALITPUR BYPASS ROAD, NH26 (LALITPUR-MEHRAUNI HIGHWAY), IN FRONT OF RMV COLLEGE ROAD, MAIN HIGHWAY, LALITPUR, UTTAR PRADESH -284403 PH :9560998709.

LUCKNOW

- 2599. ANAND MOTORS AGENCIES LTD (1301-01-), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105 PH -7080000462
- 2600. KTL AUTOMOBILE PVT. LTD. (1311-01-), MATIYARI CHAURAHA, CHINNHAT, FAIZABAD ROAD, LUCKNOW - 227105 PH -7408411453
- 2601. ANAND MOTORS AGENCIES LTD (1301-02-), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW -226016
 - PH:3098257.7080000463.
- 2602. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-01-), 11/CP- 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022 PH - 2739501
- 2603. ONE UP MOTORS INDIA PVT. LTD. (1306-01-), C-16A, TRANSPORT NAGAR, KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012 PH 9918100801
- 2604. KTL AUTOMOBILE PVT. LTD. (1311-02-), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016 PH:7408411478.
- 2605. KTL AUTOMOBILE PVT. LTD. (1311-03-), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW -226005 PH 9918451222
- 2606. ANAND MOTORS AGENCIES LTD (1301-04-), G-3, LDA MARKET, ALIGANJ, LUCKNOW -226024 PH :4103406/407/408. 7080000464.
- 2607. ONE UP MOTORS INDIA PVT. LTD. (1306-03-), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH :9918500451.

- 2608. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-02-), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH :9838075960.
- 2609. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-04-), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020 PH. 72317049000
- 2610. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-05-), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW. - 226001 PH : 8756000000, 7607696666.
- 2611. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-01-), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW. -226 010 PH 9935096417 7054631666
- 2612. KTL AUTOMOBILE PVT. LTD. (1311-07-), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. - 226008 PH :7800007376
- 2613. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-06-), KHASRA NO. 418, MISHRAPUR PARGANA MAHONA, KURSI ROAD, LUCKNOW. - 226022 PH: 9935275786.
- 2614. ONE UP MOTORS INDIA PVT. LTD. (1314-01-), KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJJABGANJ, HARDOI ROAD, LUCKNOW. - 226003 PH '9821026545, 7800005200
- 2815. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (131-02.); KHASRA NO. 614, VILLAGE: BHADRUKH, VIP CANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHSIL: SAROUNI NAGAR, LUCKNOW, USAR PRADESH 226002 - 226002 PH :6388901514.

MADHOGANJ

2616. CONCEPT CARS PVT. LTD. (BHI1-01-), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241001 PH :220016, 220064, 7607696666.

MAHARAJGANJ

- 2617. SMARTWHEELS PVT. LTD. (EI01-01-), NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303 PH.:7705800602. 7705803109.
- 2618. KTL AUTOMOBILE PVT. LTD. (CSM2-01-), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TERSIL – MAHARAJGANG, DISTRICT – RAIBAREILLY, UTTAR PRADESH. - 229306 PH : 99184512222.

MAHMUDABAD

2619. CONCEPT CARS PVT. LTD. (AAN1-01-), IN FRONT OF POWER HOUSE, SIDAULI ROAD, MAHMOODABAD (U.P.) - 261203 PH :7607696666. 8756000000.

MAHOBA

- 2620. SURI AUTOMOBILES (6001-02-), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH, - 284001 PH: 244344 9451496015
- 2621. VELOCITY MOTORS (RM02-01-), BAJRANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA -210427 PH 9560998709

MAHOLI

2622. CONCEPT CARS PVT. LTD. (CWS1-01-), MUSKAN TRACTORS, NEAR MELA MAIDAN, SHAHJHANPUR RODO, MAHSUNIYAGANJ, MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. -261141 PH 7607696966

MAINPURI

2623. KULDEEP MOTORS (6E01-02-), SKP-4A, MAINPURI - 205001 PH :9235258444

MALIHABAD

2624. ONE UP MOTORS INDIA PVT. LTD. (BOD1-01-), KHASRA NO. 326/1 AND 327, VILLAGE PARGANA, TEHSIL – MALIHABAD, DISTRICT – LUCKNOW, UTTAR PRADESH. - 227111 PH. 9918100781.

MANDURI

2625. DEEP MOTORS (K501-04-), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. - 276138 PH :09838072902

MATHURA

2626. UMA MOTORS PVT. LTD. (H801-01-), 68, MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004 PH '2463043/ 6290700

MATI

2627. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (SCG1-01-), CATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE- MATI, PARGANA-DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225 003 PH: 6388901514.

MAU

2628. DEEP MOTORS (BWK1-01-), DARI CHATTI , KHUKHUNDVA, MAU, UTTAR PRADESH. -275305 PH :7704000552.

MAURANIPUR

2629. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (GJJ1-01-), BASERA CITY, MAURANIPUR - GARUTHA ROAD, MAURANIPUR, DISTT: JHANSI, UTTAR PRADESH - 2424204 PH :8299202863.

MAWANA

2630. RADHA GOVIND AUTOMOBILES PVT LTD (CWZ1-01-), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401 PH .7456001002.

MEERUT

- 2631. TANYA AUTOMOBILES PVT. LTD. (4802-01-), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001 PH:9837077003.
- 2632. TANYA AUTOMOBILES PVT. LTD. (4802-03-), 90, NAUCHANDI GROUND, GARH ROAD, MEERUT -250001 PH:9837077004
- 2633. RADHA GOVIND AUTOMOBILES PVT. LTD. (4807-01-), VILLAGE – BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002 PH:7456001030, 7456003222.
- 2834. TANYA AUTOMOBILES PVT. LTD. (4802-04-), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE - ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001 PH :7900201515.
- 2635. TR SAWHNEY (4808-01-), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002 PH - 9090163126

MIRZAPUR

2636. STAR CARS (6K02-01-), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001 PH:7052547903, 9721905002, 9151154306, 9450544961

MISHRIKH

2637. CONCEPT CAR (SKJ1-01-), NEAR ARYAVART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P., PINCODE: 261401 - 261401 PH:7607696666.

MODINAGAR

2638. MOTORCRAFT SALES PVT. LTD. (5903-02-), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204 PH:09557338222 & 07042427140.

MOHANLAL GANJ

2639. BRIGHT 4 WHEEL SALES PVT. LTD. (BWU1-01-), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305 PH :7571905968

MOOSANAGAR

2640. MY CAR (SLP1-01-), VILL GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH. - 209208 PH 97929 70005

MORADABAD

- 2641. AKANKSHA AUTOMOBILES PVT. LTD. (B401-01-), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001 PH:7247800008.
- 2642. AKANKSHA AUTOMOBILES PVT. LTD. (B401-03-), 5TH KM DELHI ROAD, MORADABAD -244001 PH :9568200001.
- 2643. AKANKSHA AUTOMOBILES PVT. LTD. (B401-04-), KHASRA NO. 569-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001 PH :7895600007

MUZAFFARNAGAR

2644. RADHA GOVIND (H903-01-), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001 PH :9760092009 - 7535007026.

NAJIBABAD

2645. SHAKUMBARI AUTOMOBILES (P) LTD (CPS1-01-), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246 701 PH:8630881459.

NARWAL

2646. MY CAR (SSB1-01-), GATA NO. 821, KARIBGWANA ROAD, NARWAL, KANPUR, UTTAR PRADESH. - 209401 PH:9792970005.

NAUGARH

2647. SMARTWHEELS PVT. LTD. (QG01-01-), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHNAGAR - 272205 PH:7705803129.

NAUTANWA

2648. SMARTWHEELS PVT LTD (SDW1-01-), OPP. RAJIV GANDHI DEGREE COLLEGE, BYPASS ROAD, NAUTANWA, DISTT – MAHARAJGANJ -273164 PH: 77058 00602.

NAWABGANJ

2649. KAVISHA MOTORS PVT LTD (CHT1-01-).
VILLAGE – EIDH JAGIR NEAR GURUDWARA AT
NH-74, TEHSIL – NAWABGANJ, DISTRICT –
BAREILLY. - 262406
PH :07895980222: '07895980300.

NIGOHA

2650. BRIGHT 4 WHEELS (SGV1-01-), GATA NO 146, VILL NIGOHA, TEHSIL MOHANLALGANJ, LUCKNOW - 226302 PH -701148/503

NOIDA

- 2651. ROHAN MOTORS LTD. (A102-01-), C-8/9, SECTOR - I, NOIDA - 201301 PH:4071900, 4071909, 4071931, 4071932, 4071209, 4071949/9582210152.
- 2652. ROHAN MOTORS LTD. (A102-02-), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301 PH :4071900, 209.31.32/9582210152.
- 2653. FAIR DEAL PREMIUM WHEELS PVT.LTD. (A108-01-), D-39, SEC-10, NOIDA 201301 PH :08448296694 & 09654326008.
- 2654. VIPUL MOTORS PVT. LTD. (A101-02-), B-124 & B-125, SECTOR 5, NOIDA, UTTAR PRADESH 201301
- PH :4603100/28/33/8527835888.
 2655. VIPUL MOTORS PVT. LTD. (A106-01-), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) 201301
 PH :47586000/10/28/447589759
- 2656. MOTORCRAFT SALES PVT. LTD. (5903-04-), PLOT NO.15, SECTOR-140, NOIDA (U.P.) -201305
- PH :09818532222 & 09971732233. 267. MOTORCRAFT SALES (5903-05-), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST, GB NAGAR, UP - 201306 PH :8826312222.

ORAI

2658. S B CARS PVT.LTD (2806-02-), KANPUR ROAD, ORAI - 285001 PH :9307219303

PADRONA

2659. SMARTWHEELS PVT. LTD. (BGJ1-01-), AARJI NO. 37 & 38, MAUJA - BELWA MISRA, TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL -PADRAUNA, DIST.-KUSHINAGAR, UTTAR PRADESH - 274304 PH :7705803259.

PANWARI

2660. SURI AUTOMOBILES (SLC1-01-), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBA. - 210429 PH :9452287690.

PAPHUNDA

2661. TANYA AUTOMOBILES (4802-05-), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206 PH :9917547777

PEPPEGANJ

2662. ARBIT AUTOMOBILES PVT LTD (GKG1-01-), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165 PH :89534 12821

PII IRHIT

2663. CORAL MOTORS (P) LTD. (IL01-01-), BISALPUR ROAD, PILIBHIT, U.P. - 262001 PH :9837891846.

POOTH KHAS

2664. TR SAWHNEY (SSM1-01-), POOTH KHAS, ROHTA ROAD, MEERUT, UTTAR PRADESH. -250502 PH 9999790229

PRAYAGRAJ

- 2665. SARASWATI MOTORS (2904-01-), PLOT NO 24, INDUSTRIAL AREA MNIT COLLEGE, TELIYARGANJ, PRAYAGRAJ, UTTAR PRADESH. - 211004
- PH :8090854053. 2666. BRIGHT 4WHEELS (2905-01-), ARAZI NO 390 AND 389 AT KATKA, ANDAWA SAHSON BYPASS. PRAYAGRAJ - 211002

PURANPUR

PH:9415324201

2667. CORAL MOTORS (P) LTD. (CAD1-01-), KHASRA NO. 768 & 770, VILLAGE – KHAMRIYA PATTI, PURANPUR – PILIBHIT ROAD, TEHSIL AND PARGANA – PURANPUR, DIST. PILIBHIT. -262124 PH -9837891846 9927001120

RAIBAREILLY

2668. KTL AUTOMOBILE PVT. LTD. (HS07-01-), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303 PH :7800001601

RAM SANEHI GHAT

2669. BRIGHT 4WHEELS (SDH1-01-), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL -RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409 PH :9935275786.

RAMNAGAR

2870. BRIGHT 4 WHEEL SALES PVT. LTD. (BRK1-01-), KHASRA NO. 629, VILLAGE - BUDHAWAL, TEHSIL - RAMNAGAR, DIST.-BARABANKI, UTTAR PRADESH. - 225205 PH. 9935275786, 9838075929.

RAMPUR

2671. AKANKSHA AUTOMOBILES PVT. LTD. (B401-02-), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901 PH :7895500007.

RAYA

2672. UMA MOTORS PVT. LTD. (BXK1-01-), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204 PH :9997683333. 9997511006.

ROBERTSGANJ

2673. STAR CAR (CTY1-01-), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231 216 PH.:7052547903, 9721905002, 9151154306, 9450544961

RUNKATA

2674. PREM MOTORS (SLS1-01-), ROYAL BANDHAN RESORT, KHASRA NO 108, NH-2, RUNKATA, AGRA. - 282101 PH :7060111245

SAHARANPUR

- 2675. ATELIER AUTOMOBILES (S203-01-), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001 PH :7500250070
- 2676. TANYA AUTOMOBILES PVT. LTD. (S204-01-), AAWAS VIKAS YOJNA, DELHI ROAD, SAHARANPUR, UTTAR PRADESH - 247001 PH :9837077004.

SAHASWAN

2677. CORAL MOTORS, (SGA1-01-), OPP BHARAT PETROL PUMP, BADAUN ROAD, SAHASWAN, DISTT. BADAUN. - 243638 PH:9837891846.

SAHIBABAD

- 2678. FAIR DEAL WHEELS PVT. LTD (80-01-), 12/67 SITE 4, INDUSTRIAL AREA, SAHIBABAD, GHAZIABAD - 110095 PH - 4740409/102/436, 8860088659.
- 2679. MOTORCRAFT SALES PVT. LTD. (5903-01-), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010 PH: 4172222 / 4102222, 09958562222 & 09560605122.
- 2680. T.R. SAWHNEY MOTORS PVT LTD (819-03-), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA,DISTT- GHAZIHABAD, UTTAR PRADESH -201010 PH :9999399152; 9999399143.

SALEMPUR

2681. SMARTWHEELS PVT LTD (GKA1-01-), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509

PH:7705800602.7705803321.

SALON

2682. KTL AUTOMOBILES (SCP1-01-), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH-229127 PH:9918451222.

SAMBHAL

2683. AKANKSHA AUTOMOBILES PVT. LTD. (BBP1-01-), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302 PH.7248000028.

SANDILA

2684. CONCEPT CARS PVT. LTD. (WY01-01-), PLOT NO.371, SARAY MARUFPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204 PH 8756000000, 7607696666

SARDHANA

2685. RADHAGOVIND AUTOMOBILES (MM01-01-), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342 PH :7456001030.

SHAHABAD

2686. CONCEPT CARS PVT. LTD. (AAX1-01-), VILLAGE MUJAGADH, SHAHABAD - 241124 PH:8756000000. 7607696666.

SHAHJAHANPUR

2687. SUMITRA DS MOTORS PVT LTD (W201-01-), SITAPUR ROAD, NH-24, SHAHJAHANPUR -242001

PH:7522888333, 9415770000.

SHAMLI

2688. RADHA GOVIND AUTOMOBILES PVT. LTD. (XJ01-01-), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776 PH: 8979862084, 753007010.

SHIKOHABAD

2689. MADHUSUDAN VEHICLES PRIVATE LTD. (XH01-01-), 2508, KATRA MIRA, MAHAMMABAD, OPP PROFESSOR COLONY, NH 2, BYE PASS ROAD, SHIKOHABAD, DISTT: FIROZABAD, UTTAR PRADESH - 283203 PH:9837097894,9690003001.

SHIVRAJPUR

2690. KTL PVT LTD. (STD1-01-), ARAZI NO. 67K, DUBIYANA, GT ROAD, SHIVRAJPUR, KANPUR, UTTAR PRADESH - 209205 PH: 9414113666.

SIDHAULI

2691. CONCEPT CARS PVT. LTD. (BFO1-01-), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHIDI, OPP. BLOCK, SIDHAULI, SITAPUR. -261303 PH.:7607596666.

SIKANDRA

2692. KTL PVT LTD (SJE1-01-), YADAV MARKET, NEAR SURYA DHABA, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. - 209715 PH 9414113666

SIKANDRABAD

2693. SK UNIVERSE (CWQ1-01-), NEAR R K SCHOOL, VILLAGE – SANWALI SIKANDRABAD, DIST-BULANDSHAHR UTTAR PRADESH, PIN 203202 -203202 PH :7310106565.

SIRAUI I GHAUSPUR

2694. BRIGHT FOUR WHEELS (SMR1-01-), KHASRA 77, GRAM GHUSEDIYA, POST & TEHSIL SIRAULI GAUSPUR, BARABANKI UTTAR PRADESH-225207 - 225207 PH -7011482/503

SITAPUR

2695. CONCEPT CARS PVT. LTD. (QE01-02-), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001 PH:760769666. 8756000000.

SIYAN

2696. SK UNIVERSE (SIN1-01-), BULANDSHAHR ROAD, SIYANA DIST- BULANDSHAHR, UTTAR PRADESH PIN CODE 203412 - 203412 PH 9219694600

SULTANPUR

2697. KIRTIKUNJ AUTOMOBILES PVT. LTD. (N101-01-), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001 PH : 227760 . 220107.

SWAR

2698. AKANKSHA AUTOMOBILES PVT. LTD. (CQX1-01-), IN FRONT OF EIDGAH, TEHSIL – SWAR, DISTRICT – RAMPUR, UTTAR PRADESH. - 244924 PH. 7900600041

TAMBOUR

2699. CONCEPT CARS (SOB1-01-), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR - 261208 PH - 7607696666

THAKURDWARA

2700. AKANKSHA AUTOMOBILES PVT. LTD.
(KO01-01-), Z KM. MORADABAD ROAD, NEAR
JEETA KA DHABA, SAHAB GANJ (MUNSHI
GANJ), THAKURDWARA, DISTT. MBD. UTTAR
PRADESH - 244601
PH: 724800040

TIKAITGAN.I

2701. KTL AUTOMOBILE (SNB1-01-), KANAUJIA CITY, PHASE 2, MADARPUR, MOHAN ROAD, LUCKNOW. - 226013 PH: 9918451222.

TII OI

2702. KTL AUTOMOBILE PVT. LTD. (CGY2-01-).
VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. - 229309
PH. 99184512222

UJHANI

2703. ETERNITY MOTORS LLP (GJK1-01-), BADAUN BYE PASS ROAD, UJHANI - 243639 PH: 94122 89074

UNCHAHAR

2704. KTL AUTOMOBILE PVT. LTD. (IH02-01-).
ALLAHABAD LUCKNOW ROAD, NEAR PURANA
PETROL PUMP, WARD NO. 5, UNCHAHAR,
DISTT: RAIBARELI - 229404
PH :99184512222.

UNNAO

2705. S B CARS (2806-04-), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.P. - 209801 PH 9839806451

VARANASI

- 2706. VARANASI MOTORS PVT. LTD. (8402-01-), THE MALL, CANTONMENT, VARANASI - 221001 PH :2509068, 2509069.
- AGR AUTOMOBILES PVT. LTD. (8403-01-),
 B-38/2A, MAHMOORGANJ, GOPAL VIHAR,
 VARANASI 221010
 PH -2360436
- 2708. VARANASI MOTORS PVT. LTD. (8402-03-), ARRAJI NO.2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) -221311 PH. 2632786, 9838360662.
- 2709. AGR AUTOMOBILES PVT. LTD. (8403-04-), ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI -221112

UTTARAKHAND

ALMORA

PH -98898 03355

2710. NAINITAL MOTORS PVT LTD (J603-04-), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601 PH:9997194132.

BAGESHWAR

2711. NAINITAL MOTORS PVT LTD (J603-05-), VILL. BILOMA,SERA, BAGESHWAR, UT, BAGESHWAR - 263642 PH -9557200522

BAZPUR

2712. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CGU2-01-), KHASRA NO. 96/2, VILLAGE – BHONA, ISLAM NAGAR, TEHSIL – BAZPUR, UTTARAKHAND. - 262401 PH :8929400544, 8191000204.

CHAMPAWAT

2713. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SF02-01-), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523 PH:8929400545, 8191000832.

CHANDRAPURI

2714. SHAKUMBARI AUTOMOBILES (--), KEDARNATH ROAD, BANASBARA, CHANDRAPURI, DISTRICT RUDRAPRAYAG, UTTARAKHAND - 246425 PH :9927877715.

CHAUKHUTIYA

2715. NAINITAL MOTORS PVT LTD (CVG1-01-), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST. -ALMORA, UTTARAKHAND - 263656 PH: 9997026565.

DEHRADUN

- 2716. ROHAN MOTORS LTD. (5702-01-), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001 PH:0135-2530050. 0135-2531097. 7217014647.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (5707-01-), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN - 248001, PH: 9368193007.
- ROHAN MOTORS LTD. (5702-02-), 257/2, GMS ROAD, VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001 PH: 0135-2725376, 0135-2720342, 7217014647.
- 2719. FUTURE AUTO WHEELS PVT LTD (5706-01-), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001 PH :0135-2640263, 7895956011.
- 2720. FUTURE AUTO WHEELS (5706-02-), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001 PH: 9760444430.

DIDIHAT

2721. NAINITAL MOTORS (SKN1-01-), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T, DIDIHAT, DISTT PITHORAGARH, PINCODE: 262551. -262551

PH:9634092692.

DOIWALA

2722. FUTURE AUTO WHEELS PVT LTD (BRI1-01-), 26, MISSARAWALA, DOIWALA, DISTRICT – DEHRADUN, UTTARAKHAND. - 248140 PH:7883473506.

GADARPUR

2723. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVS1-01-), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152 PH :8929400545, 9917467845.

GAIRSAIN

2724. ROHAN MOTORS LTD (CRH1-01-), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIG GROUND, GAIRSAIN, DISTRICT – CHAMOLI, UTTARA KHAND. - 246428 PH - 8179484676

GANGOLIHAT

2725. NAINITAL MOTORS (SQX1-01-), VILL-KHETIGARA, PITHORAGARH-GANGOLIHAT ROAD, GANGOLIHAT, DISTT: PITHORAGARH -262522 PH 9997093043

GOPESHWAR

2726. ROHAN MOTORS LTD. (5702-03-), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028 PH:9634852898.

HALDWANI

2727. NAINITAL MOTORS PVT LTD (J603-01-), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139 PH :7060201024.

2728. NAINITAL MOTORS PVT LTD (J603-02-), KALA DUNGI, NEAR ABDULLAH PETROL PUMP, HALDWANI - 263139 PH :8126359722

HARIDWAR

2729. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-01-), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407 PH:9927870025, 8869064400.

JASPUR

2730. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (BKL2-01-), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712 PH :8192000724.

KARANPRAYAG

2731. ROHAN MOTORS LTD (CRG1-01-), BADRINATH ROAD, KARANPRAYAG, DISTRICT – CHAMOLI, UTTARAKHAND. - 246444 PH: 8126129148.

KASHIPUR

2732. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (DG02-01-), BAZPUR ROAD, KASHIPUR -244713 PH :8929400544, 8859502626.

ΚΗΔΤΙΜΔ

2733. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (XL02-01-), VILLAGE: CHARUBETA,NEAR RTO CHECK POST,PILIBHIT ROAD KHATIMA, U.S NAGAR,UTTRAKHAND - 262308 PH :8929400545, 8191000565.

KOTDWAR

2734. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-02-), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001 PH #755998075 7310106565

LAKSAR

2735. SHAKUMBARI AUTOMOBILES (CTF1-01-), HARIDWAR ROAD, LAKSAR - 247664 PH :9927877715

NANAKMATA

2736. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVT1-01-), KHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATTA, U.S. NAGAR, UTTARAKHAND. - 262311 PH 9012172084.

PITHORAGARH

2737. NAINITAL MOTORS PVT LTD (J603-03-), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501 PH :9634092692

PRATAPNAGAR

2738. SHAKUMBARI AUTOMOBILES (STT1-01-), NEAR AISHWARYA FILLING STATION, LAMBGAON, PRATAPNAGAR, DISTRICT TEHRI., UTTARAKHAND - 249165 PH :9927877715.

RAMNAGAR

2739. NAINITAL MOTORS PVT LTD (XM01-01-), BASAI, KASIPUR ROAD, RAMNAGER - 244137 PH :9639016895 . 9634093404.

RANIKHET

2740. NAINITAL MOTORS PVT LTD (AXA1-01-), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTARAKHAND) -263645 PH :9557243222.

RISHIKESH

2741. FUTURE AUTO WHEELS PVT LTD (AAS1-01-), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201 PH: 0135-2492387. 7895614411.

ROORKEE

2742. SHAKUMBARI AUTOMOBILES (P) LTD (H201-01-), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARIDWAR - 247687 PH -7055104191

RUDRAPRAYAG

2743. ROHAN MOTORS (IK01-01-), GULABRAI-BADRINATH ROAD, RUDRAPRAYAG - 246171 PH: 8650876815.

RUDRAPUR

2744. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U404-01-), KICHHA BYE PASS ROAD, INDUSTRIAL AREA, RUDRAPUR - 263153 PH:8929400545, 8859502864.

SELAQUI

2745. ROHAN MOTORS LTD (CRF1-01-), KHASRA NO.783, BAHADURPUR ROAD, NH-72, SELAKUI, DISTT.-DEHRADUN, UTTARAKHAND. - 248011 PH: 8006000439

SITARGANJ

2746. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CD02-01-), PLOT NO. 228/6 AND 228/6 KHATIMA ROAD, SITARGANI, DISTT -RUDRAPUR, UTTARAKHAND. - 262405 PH :8929400545, 8859502846.

SRINAGAR

2747. SHAKUMBARI AUTOMOBILES (ANA1-01-), SRICOT GANAGANALI , NEAR MEDICAL COLLEGE, PO- SRICOT, SRINAGAR - 246174 PH :8755903005 9897476897

TEHRI

2748. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (QA02-01-), PLOT NO. 541, SECTOR-8E, DISTT. - NEW TEHRI - 249001 PH :8006000914

UTTARKASHI

2749. DD MOTORS (A DIVISION OF D.D. PREM PYT.LTD.) (6102-01-), HOTEL RAMOLA, BARETHI CHUNGI, GANGOTRI NATIONAL HIGHWAY, UTTARKASHI. - 249151 PH :800600922.

VIKAS NAGAR

2750. ROHAN MOTORS (RI02-01-), KHASRA NO. 433/79/2, JEEVANGARH, POST OFFICE-AMBARI, CHAKRATA-BARKOT ROAD, VIKAS NAGAR. - 248198 PH.9897507410.

UTTRAKHAND

DEHRADUN

2751. SHAKUMBARI AUTOMOBILES (5708-01-), KHASRA NO.15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN, PIN-248001, UTTARAKHAND - 248001 PH :9927870025. 8869064400.

PATI

2752. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SFX1-01-), LOHAGHAT- HALDWANI MAIN ROAD, NEAR PITHORAGARH CO-OPERATIVE BANK, PATI-262528 - 262528 PH :9917467820.

WEST BENGAL

ALIPURDUAR

2753. PODDAR CAR WORLD PVT. LTD. (BZO1-01-).
BIRPARA MORE, COOCH BEHAR ROAD, BESIDE
GOYENKA PETROL PUMP, ALIPURDUAR, WEST
BENGAL. - 736121
PH: 3945533002
9735008343
9749707070.

AMTALA

2754. BHANDARI AUTOMOBILES PVT LTD (BQH1-01-), VILLAGE - UDAYRAMPUR, P.O. - KANYANAGAR, P.S. - BISHNUPUR, AMTALA, DIST.-24 PARGANAS SOUTH, WEST BENGAL - 743 398 PH 9903850402.

ARAMBAGH

2755. SANEI MOTORS PVT. LTD. (7702-01-), RS. DAG. NO. 1887, RS. KHATIAN NO. 104, HAL KHATIAN NO. 1233, MOUZA-PARUL, JL.NO. 38, R.S.NO. 3111, P.S. ARAMBAGH, DISTT. HOOGHLY, WEST BENGAL - 712601 PH :8584050184.

ASANSOL

2756. BEEKAY AUTO PVT LTD (F601-01-), CHANDA MORE, N.H.-2, ASANSOL - 713301 PH :9932049425, 9932049435.

BADURIA

2757. PREMIER CARWORLD (SOE1-01-), VILL-KIRRTIPUR, P.O- MANDRA, P.S - BADURIA, DIST - NORTH 24 PARGANAS, WEST BENGAL. PIN -743438. - 743438 PH :9831414956.

BAGDAH

2758. SANEI MOTORS PVT. LTD. (BON1-01-), C/O, DINABANDHU TARAFDAR, S/O LATE NARENDRANATH TARAFDAR, VILLAGE – HALENCHA SOUTH, P.O. – HALENCHA COLONY, P.S. – BAGDAH, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL. - 743270 PH. 8584050184.

BAHRAMPUR

2759. BEEKAY AUTO PVT LTD (DJ02-01-), BOKULTALA (PASCHIM GAMINI), NH-34, BAHARAMPUR, DISTT. MURSHIDABAD. - 742101 PH :267340.

BAJKUL

2760. BHANDARI AUTOMOBILES PVT LTD (CAV1-01-), VILLAGE – KAPTYAPA BARI, P.O. – KAJLAGARH, P.S. – BHAGWANPUR, BAJKUL, DISTRICT – PURBA MIDNAPORE. - 721626 PH :9933055539

BALAGARH

 SANEI MOTORS PVT. LTD (BMI1-01-), DAG NO. 671, MOUZA - BARUIPARA, J L NO. 100, P.O. BALAGARH, DIST.-HOOGLY, WEST BENGAL-712 501
 PH :8584050184.

BAI URGHAT

2762. J K WHEELS PVT. LTD. (PT01-01-), BARO RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. -BALURGHAT, DIST.-DAKSHIN DINAJPUR. - 733 103

PH:9064301464. BANDEL

2763. SANEI (612-03-), C/O G.S. LAMINATOR, BANDEL STATION ROAD, HOOGLY 712123 - 712123 PH:8336969010

BANKURA

2764. BHANDARI AUTOMOBILES PVT LTD (G701-02-), PLOT NO.-156, KH NO.-173, MITHILA MOUZA, AT/PO-BANKURA (WB) - 722101 PH :256766.

BARASAT

2765. PREMIER CARWORLD PVT. LTD. (X203-01-), R.S. DAG NO. 512 AND PARTY IN DAG NO. 513. MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 14, J.L. NO. 4, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700125
PH:3820122407.

BARDHAMAN

2766. BEEKAY AUTO PVT LTD (T301-03-), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL -713101 PH:9932049454.

BARJORA

2767. BHANDARI AUTOMOBILES PYT LTD (BED1-01-), VILLAGE + P.O. + P.S. – BARJORA, MOUZA – BARJORA, JL NO. 46, KHATIAN NO. 3380, PLOT NO. 2795, BARJORA DISTRICT – BANKURA, WEST BENGAL - 722202 PH :8016087297.

BARRACKPORE

2768. STARBURST MOTORS PVT LTD (BXJ1-02-), NEAR RAIL GATE, WARD NO. 24, WEST BARASAT ROAD, P.S.—TITAGARH, BARRACKPORE, DISTRICT – NORTH 24 PARGANAS, KOLKATA. - 700120 PH: 8335061333.

BARSUNDRA

2769. BHANDARI AUTOMOBILES PVT LTD (G701-05-), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE. WEST BENGAL - 721654 PH :9933055539.

BASIRHAT

2770. BHANDARI AUTOMOBILES PVT LTD (X701-03-), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. -743428 PH.8017569789.

BELACOBA

 PODDAR CARWORLD (SCU1-01-), PRASANNA NAGAR, BELACOBA, BATTALA, JALPAIGURI -735133 - 735133 PH :8945533002.

BIRPARA

2772. SEVOKE MOTORS (CQL1-01-), BHAGAT PARA, NH - 31, MADARIHAT ROAD, BIRPARA, BESIDE TASHI HOTEL, OPP - HIMAL YAN HOTEL, P. S -MADARIHAT, DIST - ALIPURDUAR, PIN - 735204 -735204 PH :3900069144.

BISHNUPUR

2773. BHANDARI AUTOMOBILES PVT LTD (AAG1-01-), STATION ROAD, P. O+P.S- BISHNUPUR, DIST: BANKURA, WEST BENGAL - 722122 PH: 9933055539

BOLPUR

2774. SAINATH AUTOLINKS PVT. LTD. (4402-03-), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM - 731204 PH. :9647444888 8927895511.

BONGAON

2775. STARBURST MOTORS PVT LTD (TQ02-01-), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235 PH :9748298939.

BUDGE BUDGE

2776. ONE AUTO PVT. LTD. (BAV1-01-), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141 PH: 8584878802 7604084762

C K ROAD

2777. BHANDARI AUTOMOBILES PVT LTD (D001-01-), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252 PH :9933055539.

CANNING

2778. ONE AUTO (CEG2-01-), SUSUMAPALLY, CANNING, DIST – SOUTH 24 PARGANAS, WB -743329 PH :8442830001

CHAKDAHA

2779. BHANDARI AUTOMOBILES PVT LTD (OM01-01-), VILLAGE – PUMLIA, P.O. – CHAKDAHA, DISTRICT – NADIA, WEST BENGAL. - 741222 PH :9073940368. 9674735303. 9674169007.

CHANCHAL

2780. J K WHEELS (SSI1-01-), CHANCHAL AZAD PALLY, OPPOSITE OF PWD 2ND GATE, P.O -CHANDRAPARA, P.S - CHANCHAL, DIST -MALDA - 732123 - 732123 PH 9734963360

CHANDITALA

2781. BHANDARI AUTOMOBILES PVT LTD (BPC3-01-), RS DAG NO.2986, LR DAG NO. 3150, UNDER L R KHATIAN NO.3859, MOUZA- KRISHNARAMPUR, J.L. 59, POLICE STATION- CHANDITALA, HOOGHLY, WEST BENGAL - 712702 PH :6296900498.

CHANDRAKONA

2782. BHANDARI AUTOMOBILES PVT LTD (D001-02-), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, JL NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201 PH :8945568833

CONTAI

2783. BHANDARI AUTOMOBILES PVT LTD (G701-03-), SERPUR BAMUNBAR,P O-MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL -721401 PH :254572.

COOCH BEHAR

2784. PODDAR CAR WORLD PVT. LTD. (BWZ1-01-). CHAKCHAKA, NEELKUTHI BAZAR. NEAR ADA FACTORY, NH-31, COOCH BEHAR, WEST BENGAL. - 736101 PH: 8945533002 9735008343.

DARJEELING

2785. BEEKAY AUTO PVT LTD (4301-05-), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101 PH :9932049347 9932049382 7478004430

DHUPGURI

2786. BEEKAY AUTO PVT LTD (BWD1-01-), MOUZA-DHUPGURI, PLOT NO, 1814, WARD NO, 16, DHUPGURI, DISTRICT – JALPAIGURI, WEST BENGAL. - 735210 PH: 7477785203 9932049347 9932049342

7478004430. DIAMOND HARBOUR

2787. ONE AUTO PVT. LTD. (YE01-01-), VILLAGE – CHEWRA, OPPOSITE – KE. CARMEL SCHOOL, P.O. – SARISHA HAT, P.S. – DIAMOND HARBOUR, DISTRICT – 24 PARGANAS (S), WEST BENGAL – 743368
PH :8584862243.

DINHATA

2788. BEEKAY AUTO (BWE1-01-), ADDRESS: VILLAGE - KARISHAL, MAIN ROAD, P.O- DINHATA, DIST -COOCHBEHAR, - 736135 PH 9837049347

DURGAPUR

2789. SAINATH AUTOLINKS PVT. LTD. (4402-01-), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213 PH :9647444888 8927895511.

FALAKATA

2790. PODDAR CAR WORLD PVT. LTD. (CSR1-01-), DAKSHIN PARANCAPAR, KHATIAN NO. 167/1 JL NO. 60, DAG NO. 652/1159, P.S. – FALAKATA, DISTT ALIPURDWAR - 735211 PH:8945533002.

GAZOLE

2791. JK WHEELS (SKZ1-01-), MOUZA- BAJEGAIRAL, RANIGANJ, PURBAPARA, KAMALDANGA, P.S-GAZOLE, DIST-MALDA, PIN - 732138 - 732138 PH :9734963360.

GHATAL

2792. BHANDARI AUTOMOBILES PYT LTD (AAD1-01-), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL WEST MIDNAPORE.WEST BENGAL -721211 PH :9933055539.

GOPIBALLAVPUR

2793. BHANDARI AUTOMOBILES PVT LTD (BPQ1-01-), JL NO. 1103, KHATIAN NO. 1103, PLOT NO. 438, VILLAGE P. D. + P. S. – GOPIBALLYPUR , MOUZA – GOPIBALLYPUR, WEST MIDNAPUR, WEST BENGAL - 721506 PH 9933055539 8170018577

GUMA (ASHOKNAGAR)

2794. STARBURST MOTORS PVT LTD (BXJ1-03-), JESSORE ROAD, MANIKNAGAR, KHOSDELPUR MORE, P.S. – ASHOKNAGAR, NORTH 24 PARCANAS, WEST BENGAL. - 743222 PH:8697731763, 8336933447.

HALDIA

2795. BHANDARI AUTOMOBILES PVT LTD (G701-04-), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657 PH:8016082344, 9233502421.

HOWRAH

- 2796. BHANDARI AUTOMOBILES PVT LTD (X701-01-), BANKRA THANA,DOMJUR,HOWRAH. - 711403 PH:9674735304
- 2797. PREMIER CARWORLD PVT. LTD. (611-02-), MOUZA – PRASASTHA, P.S. – DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYAT, ANKURHATI, HOWRAH, WEST BENGAL. -711302 PH 8420122402

JALPAIGURI

2798. PODDAR CAR WORLD PVT. LTD. (XY01-01-), COLLEGE PARA, SIRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101 PH:8945533002.

JAYGAON

2799. SEVOKE MOTORS PVT. LTD. (CHS1-01-), HOUSE NO.43, WARD NO.11/22, N.S ROAD DARAGAON, P.S - JAYGAON, DISTT. ALIPURDUAR, WEST BENGAL - 736182 PH:9433825851.

JHARGRAM

2800. BHANDARI AUTOMOBILES PVT LTD (BUG1-01-), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507 PH :8016087297. 9933055539.

KADAMBAGACHI

2801. STARBURST MOTORS PVT LTD (BXJ1-04-), MOUZA - PURBA ICHAPUR, J L NO. 111, RESU NO. 131, DAG NO. 385, KHATIAN NO. L R 754, KADAMBAGACHI, P.S. - BARASAT, DIST.-NORTH 24 PARGANAS, WEST BENGAL. - 700125 PH: 3336933410.

KALIMPONG

2802. BEEKAY AUTO (BWF1-01-), 10TH MILE, GUMBA HATTA, PO&PS -KALIMPONG, DIST -KALIMPONG, WB. - 734301 PH: 3932049347.

KALNA

2803. BEEKAY AUTO PVT LTD (WZ01-01-), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409 PH -9932251483

KALYANI

2804. STARBURST MOTORS PVT LTD (I.01-01-). KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U1 C UDYOG, NEAR: J1 S COLLEGE). KALYANI. - 741234 PH :8584040215. 8336933447.

KHARAGPUR

- 2805. BHANDARI AUTOMOBILES PVT LTD (G701-01-), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301 PH : 755537
- 2806. PODDAR CARWORLD (G702-01-), RS DAG NO -147, RS KHATIAN NO 7, MOUZA -MOBARAKCHAK, JL NO-210, PS - KHARAGPUR -721301 PH -9831348626.

KHATRA

2807. BHANDARI AUTOMOBILES PVT LTD (BGZ1-01-), VILLAGE - SENAPATI, P.O & P.S. - KHATRA, MOUZA-SENAPATI, J. NO. 189, KHATRA, PLOT NO. 33/34, DISTT. BANKURA, WEST BENGAL. - 722/140 PH: 3933055539.

KOLKATA

- 2808. MACHINO TECHNO SALES LTD. (601-02-), 48 A, TARATALA ROAD, KOLKATA - 700066 PH :9073330177.
- 2809. DEWAR'S GARAGE (605-01-), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069 PH:8584015205.
- 2810. MACHINO TECHNO SALES LTD. (601-01-), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA -700017 PH :9073330178.
- 2811. PREMIER CARWORLD PVT. LTD. (611-01-), AGARPARA JUTE MILL, 28-B.T. ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058 PH: 8697730344.
- 2812. BHANDARI AUTOMOBILES PVT LTD (609-01-), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL -700143 PH :9674476000.

- 2813. BHANDARI AUTOMOBILES PVT LTD (609-02-), 37, GULAM JILANI KHAN ROAD, KOLKATA. -700039 PH :9903850402.
- 2814. SANEI MOTORS PVT. LTD. (612-01-), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION,KOLKATA - 700067 PH:8584050184.
- 2815. ONE AUTO PVT. LTD. (614-02-), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA, WEST BENGAL - 700105 PH: 8584878802
- 2816. ONE AUTO PYT. LTD. (614-01-), JL NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADAHA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099 PH:8884870725.
- 2817. DEWAR'S GARAGE (605-03-), P-27/2, TARATALA ROAD, KOLKATA - 700088 PH :8584015293
- 2818. SANEI MOTORS PVT LTD (612-02-), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059 PH: 8584050184
- 2819. OSL MOTOCORP PVT LTD (616-01-), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRING CLUB, E.M. BYE-PASS, KOLKATA - 700015 PH : 8336996355 88979827283
- 2820. JYOTE MOTORS (624-01-), NAZIRABAD MAIN ROAD, NAZIRABAD, ANANDAPUR, NEAR BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150, WEST BENGAL - 700150 PH: 8334930830.

KOLKATTA

2821. BHANDARI AUTOMOBILES (619-C1-), PLOT NO. IID/15, ACTION AREA 2D, NEW TOWN, P.S. RAJARHAT, KOLKATA, WEST BENGAL PIN-700156 - 700156 PH :6291042160.

KOTULPUR

2822. BHANDARI AUTOMOBILES PVT LTD (BIP1-01-), KHATIAN NO.844, PLOT NO.373, JL NO. 101, VILLAGE - MULDARA, P.S. + P.S. - KOTULPUR, DISTT-BANKURA, WEST BENGAL - 722141 PH :9930055599.

KRISHNANAGAR

2823. BHANDARI AUTOMOBILES PYT LTD (X701-02-), PLOT NO.-1874, MOUZA-GOBINDSARAK ,J.K. NO. 94, PS-KOTWAL, OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR -742011 PH :9051999742.

MADHYAMGRAM

2824. STARBURST MOTORS PVT LTD (BXJ1-01-), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129 PH :9836075998, 3336933447.

MALBAZAR

2825. BEEKAY AUTO PVT LTD (BWG1-01-), CALTEX MORE, VILLAGE + P. S. – MALBAZAR AND DISTRICT – JALPAIGURI . - 735221 PH :9932049347 9932049382 7478004430 7477785703

MALDA

2826. J K WHEELS PVT. LTD. (L801-01-), GABGACHHI, N.H. 34, MALDA, - 732103 PH:9851520855, 9735003949.

MATHABHANGA

2827. BEEKAY AUTO PVT LTD (BQF1-01-), SITAKULCHI ROAD, WARD NO.9. MATHABHANGA, DISTRICT – COOCHBEHAR. - 736146 PH: 7477785202 9932049347 9932049382 7478004430.

MOHANPUR

2828. BHANDARI AUTOMOBILES PYT LTD (CIVI-01-), VILLAGE-NAYAGAON, P.O.-PAROI, P.S. -MOHANPUR, MOUZA - NAYAGAON, JL NO.395, KHATIAN NO.175/1, PLOT NO.895, DISTT. -PASCHIM MIDNAPUR, W.BENGAL. - 721436 PH:9933055539.

NAIHATI

2829. PREMIER CARWORLD PVT. LTD. (YD01-01-), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. -JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) -743123 PH:801700824.

NAKASHIPARA

2830. BHANDARI AUTOMOBILES PVT LTD (BMJ-01-), LR DAG NO. 7271, UNDER LR KHATIAN NO. 6734, MOUZA - DEBAGRAM, J L NO. 60, POLICE STATION - KALIGANJ, BLOCK - KALIGANJ, NAKASHIPARA, DIST.-NADIA, WEST BENGAL -741138 PH. 9163314418.

NAXALBARI

2831. BEEKAY AUTO PVT LTD (CSJ1-01-), MOUZA – GENI, KHATIAN NO 275, PARGANA-HATIGHISHA, P.S. NAXALBARI, DISTT. DARJEELING, WEST BENGAL - 734429 PH. 3932049347 9932049362 7478004430 9863370099.

PANCHI A

2832. BHANDARI AUTOMOBILES PVT. LTD. (BPI1-01-), LR DAG NO 3274, UNDER LR KHATIAN NO 3044, MOUZA-MALLICKBAGAN, JL NO-7, POLICE STATION – PANCHLA, DIST-HOWRAH - 711310 PH-9073664926.

PANDUA

2833. BHANDARI AUTOMOBILES PVT LTD (BOS1-01-), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL. - 712149 PH-9073912566

PANSKURA

2834. BHANDARI AUTOMOBILES PVT LTD (BPS1-01-), MOUZA – PASCHIM NEKRA, JL NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL. - 721139 PH 9933055539.

PURULIA

2835. SAINATH AUTOLINKS PVT. LTD. (4402-02-), PO. LAKDA, VILLAGE-DADKA, ON RANCHI ROAD, PURULIA - 723149 PH :9647444888 8927895511.

RAGHUNATHPUR

2836. BEEKAY AUTO PVT LTD (CKZ1-01-), MOUZA – BUNDIA, J.L. NO. 197, PLOT NO. 2565, KHATIAN NO. LR 207, P.O. – RAGHUNATHPUR, P.S. – RAGHUNATHPUR, DISTRICT – PURULIA. -723133 PH: 9932049425, 9932049435.

RAIGANJ

2837. J. K. WHEELS. PVT. LTD. (BN02-01+), JI. NO. 150.
KHATIAN NO. 168/3 & 168/4, PLOT NO. 4158.,
P.S. - RAIGANJ, MUNICIPALITY - RAIGANJ,
WARD NO. 11, HOLDING NO. 577/N, MOUZA RAIGANJ, DISTRICT - UTTAR DINAJPUR, 733134
PH. 9735008842.

RAJARHAT - KOLKATA

2838. STARBURST MOTORS PVT LTD (BXJ1-05-), R.S. & L.R. DAG NO. 3434, MOUZA- GOPALPUR, JL NO. -02, RS NO. -140, LR KHATIAN NO. -5638, NEW TOWN, RAJARHAT - 700136 PH -9681808031

RANAGHAT

2839. STARBURST MOTORS PVT LTD (BBWI-01-), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741256 PH :8145821191. 8884040215.

RUPNARAYANPUR

2840. BEEKAY AUTO PVT LTD (BWS1-01-), P.S. – SALANOUR, UNDER MOUZA – JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHAITAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335 PH. 9932049425, 9932049435

SABANG

2841. BHANDARI AUTOMOBILES PVT LTD (CCL1-01-), VILLAGE - PAIKAN DAKSHINBARH, P.O. -DHANSWARPUR & P. S. - PINGLA, DIST. -PASCHIM MIDNAPORE, SABANG - 721 166, WEST BENGAL - 721166 PH 1933055539

SEORI

2842. BEEKAY AUTO PVT LTD (F601-02-), RAMBADANPUR, NEAR SP MORE, DIST-BIRBHUM, SEORI - 731101 PH :9932049425, 9932049406.

SHYAMPUR

2843. SANEI MOTORS PVT LTD (CAW1-01-), VILLAGE + P.O. – GOBINDAPUR, P.S. – SHYAMPUR, DISTRICT – HOWRAH, WEST BENGAL. - 711314 PH: 8584050184.

SILIGURI

2844. BEEKAY AUTO PVT LTD (4301-01-), NH-31, P.O. MATIGARA, SILIGURI. - 734428 PH :9932049347 9932049382 7478004430.

2845. BEEKAY AUTO PVT LTD (4301-04-), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI -734001 PH: 9932049347

9932049380. 2846. SEVOKE MOTORS PVT. LTD. (4302-01-), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001 PH : 9706010366

2847. PODDAR CAR WORLD PVT LTD (XY01-02-), VILL. EAST DHANTALLA, FULBARI II G.P. P.O SATELLITE TOWNSHIP, DIST- JALPAIGURI -734015 PH :8945533002

SONADA

2848. SEVOK (SDX1-01-), RATO MATEY DARA, NEAR PETROL PUMP, P.O- SONADA, WEST BENGAL PIN - 734209 - 7344209 PH:9800069144.

SONAMUKHI

2849. BHANDARI AUTOMOBILES PVT LTD (CAU1-01-), J L NO. 77, KHATIAN NO. 360, PLOT NO. 114/287, SONAMUKHI BISHNUPUR ROAD, VILLAGE -CHURAMANIPUR, P.O. & P.S. - SONAMUKHI, WEST BENGAL. - 722207 PH. 9933055539

SREERAMPORE (SREERAMPUR)

2850. BHANDARI AUTOMOBILES PVT LTD (BBT1-01-), BANGIHATI (MADPUR) DELHI ROAD, SREERAMPUR, DISTT: HOOGHLY, WB - 712203 PH: 66137505. 66137585. 9674741544.

TAMLUK

2851. BHANDARI AUTOMOBILES PVT LTD (OL01-01-), MOUZA PADUMBASAN, WARD NO 10, JL NO:144, DISTT: EAST MIDNAPUR, WEST BENGAL - 721636 PH 9933055539

TARAKESHWAR

2852. SANEI MOTORS PVT. LTD. (YHO1-01-), MOUZA BAIDYAPUR. UNDER BALIGORI(1), GRAM PANCHAYET, TARAKESHWAR, DISTT. HOOGLY, WEST BENGAL. - 712410 PH :8584050184.

TOOFANGAN.I

2853. PODDAR CAR (SDG1-01-), POWER HOUSE PARA, PO ANDARANFULBARI (WEST), TUFANGANJ, COOCHBEHAR, PIN-736159, WEST BENGAL - 736159 PH :8945533002.

UDAYNARAYANPUR

2854. BHANDARI AUTOMOBILES PVT LTD (BOO1-01-), VILLAGE-JANGALPARA BELGRAM, PS-UDAYNARAYANPUR, DIST-HOWRAH, WEST BENGAL. -711226 PH :9073664902.

ULUBERIA

2855. BHANDARI AUTOMOBILES PVT LTD (2401-01-), HOLDING 1242A, BANITABLA, P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH, WEST BENGAL - 711316 PH :8335052335.

ANDHRA PRADESH

ANANTHAPUR

 SRI DURGA (1BNA--01), NO.124, SOMALADODDI, ANANTHAPUR, ANDRA PRADESH - 515004 PH 9885183851

GUNTUR

 JAYLAXMI (G5NA--01), D-NO:199/2, OPP.AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001 PH :9959844644.

NELLORE

 BHARGAVI AUTO (ABNA-01), SURVEY NO 245B, CHEMUDUGUNTA VILLAGE, NH-16, ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002 PH :888689292

ONGOLE

 JAYALAXMI (8YNA-01), SURVEY NO:194/2, BESIDE NH 5, MUKTHINUTHALAPADU, ONGOLE, ANDHRA PRADESH – 523225 - 523225 PH 9492133433

RAJAHMUNDRY

 SB MOTORS (C5NA-01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDRY, ANDRAPRADESH-533106. - 533016 PH 9248727888

SRIKAKULAM

 VARUN MOTORS (W6NA-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIKAKULAM DISTRICT, ANDHRA PRADESH - 532401 PH 9885317344

VIJAYAWADA

 VARUN MOTORS (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. -521137

PH:6309955655.

 PARAMSHIVA MOTORS (26NB-26-01), NO. 20-1-34, C K REDDY ROAD, AYODHYA NAGAR, VIJAYAWADA, ANDRAPRADESH- 520003. -520003 PH :9866551078.

ASSAM

BONGAIGAON

 BHARATI MOTORS (7NNA--01), CHAPAGURI RD, NEAR POST OFFICE, NORTH BONGAIGAON, AMGURI, BONGAIGAON, ASSAM 783380 -783380 PH:7002350887.

DIBRUGARH

 VISHAL CAR WORLD (C1NA--01), MOHPUALIMORA GOHAIN GAON, A.T ROAD, DIBRUGARH, ASSAM - 786008 PH :8000990008.

GUWAHATI

11. PODDAR AUTO (09NA--01), AT ROAD ,KAMAKHYA GATE ,GUWHATI ,KAMRUP-781009 -781009 PH :R085957586

 BIMAL AUTO (09NB--01), DREAMLAND APPARTMENT, NAHRANI PATH, DISPUR LAST GATE, GUWAHATI - 781006 (ASSAM) PH 9864074575

JORHAT

 RD MOTOR (G9NB-01), M/S R D MOTORS PVT LTD., DHAPKATA, NEAR TINALI, JORHAT -785006 - 785006 PH:7002099547.

SILCHAR

 JAIN UDHYOG (J2NA--01), R.S. PATTA NO.149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH :9436121557.

TEZPUR

 RD MOTOR (T1NA-01), SOLAGAN VILLAGE, GOROIMARI, SONABEEL, BEFORE MAA KALYANI PETROL PUMP, TEZPUR -784105 PH :9836872710

TINSUKIA

 VISHAL CAR WORLD (JANA-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD),A.T. ROAD, LAIPULI, TINSUKIA ,ASSAM -786183 PH :9864211022

BIHAR

PATNA

 ALANKAR AUTO SALES AND SERVICE (15NA-15-01), 70 FEET, BYEPASS ROAD, SARISTABAD, PATNA - 800020 PH 9262899356

 REESHAV AUTOMOBILES (15NB-15-01), MUKDUMPUR,DIGHA,90 NO GATE, PATNA -800012

PH:7369944132

 SHREEGOPAL AUTO (15NC-15-01), BHIKACHAK, ANISABAD, NEW BYEPSS ROAD, OPP. SITA RAM PATH, PATNA - 800002 PH :9262853333.

PURNEA

 SEEMANCHAL MOTORS (6VNA--01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31,GUALBBAGH,PURNEA,BIHAR - 854326 PH: 9334710055.

CHANDIGARH

CHANDIGARH

 AUTOPACE (FEB) (07NA--01), PLOT NO. 37, INDUSTRIAL AREA – PHASE 1, CHANDIGARH -160002 PH: 7087119796.

 AUTOVOGUE PVT LTD (07NC--02), PLOT NO 29/4, INDUSTRIAL AREA PHASE 2, CHANDIGARH - 160002 PH :8725009835

 NAVDESH AUTO (07NE--01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH -160002 PH :8827057534.

CHATTISGARH

AMBIKAPUR

MAHAMAYA (AENA--01), AJAB
 NAGAR, MAHATHMA GANDHI ROAD, AMBIKAPUR
 - 497001
 PH 9516609632

BILASPUR

 SATYA AUTOMOBILES (C3NB--01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001 PH: 6372803057.

RAIPUR

 SPARSH (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDIH, TATIBANDH, RAIPUR, CHATTISGARH - 492029 PH :9926626662

 SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI, G. E. ROAD, RAIPUR

DELHI

DELHI

 RANA MOTORS (08NE--01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DEI HI

 TR SAWHNEY (08NN--01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DEI HI

PH:9953350008.

 PLATINUM MOTORS (08NQ--01), PLOT NO-H4,BLOCK-B1,MOHAN CO-OPERATIVE INDEX,MATHURA ROAD,PIN-110044 - 110044

 MAGIC AUTO (08NA--01), CISF GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH -9873052000

 AAA VEHICLEADES (08NW-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH:8750611111.

 COMPETENT AUTO (08NF-01), PLOT NO-34, RAJASTHAN UDYOG NAGAR, GT AKRNAL ROAD, DELHI - 110033 PH 9932/049425 JAGMOHAN MOTORS (08NX-01), C133-136(PART, PHASE I, INDUSTRIAL AREA, MANGOLPURI S BLOCK, NEW DELHI, DELHI 110083 - 110083 PH :9812259000.

GOA

MARGAON (GOA)

 CHOWGULE INDUSTRIES (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAIA, SALCETE - (GOA) - 403720. - 403720 PH :9850966950.

PORVORIM(PANJIM)

 SAI SERVICE (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521

GUJARAT

AHEMADABAD

 STAR LINE CARS (01NE--01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330 PH:7436003235.

 PEGASUS (01NG--01), PLOT NO 9, OPP RABARI COLONY BRTS STOP, CTM, NAROL - NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. -380026

PH:9909023000.

 POPULAR WHEELERS (01NC-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT -380009
 PH 3995703344

ANAND

 AMAR CARS (F7NA--01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT -388001 PH: 9925407666.

BHARUCH

 RAVIRATNA (F8NA--01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. - 392001 PH:9727700823.

BHUJ

 KD MOTORS (P5NA--01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPAR HIGHWAY, BHUJ - 370040 PH:9879898799.

GANDHIDHAM

 BM AUTO LINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH, GUJARAT - 370201 PH:7211120014.

GANDHINAGAR

 NANDA AUTOMOBILES (2BNA-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT - 382421 PH :9867641974.

GODHRA

 RB CARS (2CNA--01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001 PH :9925051444

JUNAGARH

 PERFECT AUTO SERVICES (K8NA--01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037 PH :9909022619

MEHASANA

 STAR LINE CARS (D1NA--01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GIJJARAT - 384002

PATAN

 STARINE CARS (Q9NA--01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT) - 382465 - 382465 PH :999043244.

RAJKOT

 PERFECT AUTO SERVICES (55NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT -360004
 PH :9512035501.

SURAT

- KIRAN MOTORS (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJRAT -395009 - 395009 PH :7020569426.
- AMAR CARS (40ND-40-01), SURVEY NO 139,BLOCK NO-"218"\(^A\),OPPOSITE TO AWADH ARENA MALL,V.I.P ROAD BHARTHAMA,SURAT,GUJRAT - 395007 PH :9871389795

SURENDARNAGAR

 DREAM VEHICLES (LCNA--01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDERNAGAR, GUJARAT. - 363035 PH :8511104644.

VADODARA

 KATARIA AUTO (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007 PH 9824701590.

VAPI

 KATARIA AUTO (97NA-97-01), NEAR CROMA OUTLET, RATHOD CHAMBERS, DAMAN ROAD, CHALA VAPI - 396191 PH :9714799985.

HARYANA

AMBALA

EAKANSH WHEELS (18NA-18-01), AMBALA-CHANDIGARH HIGHWAY ADJOINING AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA PH :8395903111.

RHIWANI

 PASCO AUTOMOBILES (X3NA--01), NEAR HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI-HARYANA-127021 - 127021 PH 9289192582

FARIDABAD

- PASCO AUTOMOBILES (58NB-58-01), 14/4, MATHURA ROAD, FARIDABAD, HARYANA -121003 PH 9999790229
- 8. BVA AUTO (58NC-58-01), 2J/53-54, NH-2, NIT FARIDABAD, HARYANA PH :99112599288
- VIPUL MOTORS (58NA-58-01), SUB DIVISION NO-3, INDUSTRIAL PLOT NO. -34, N.I.T, FARIDABAD HARYANA - 121001 PH :8562019252.

GURGAON

- PREM MOTORS (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001 PH : 1292565666
- TR SAWHNEY (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001 PH 1274254441

HISAR

62. SARAOGI AUTOMOBILES (76NB 1-76-01), PLOT NO. 180, SECTOR 27-28, INDUSTRIAL AREA HISAR. - 125001

KAITHAL

- 63. EAKANSH MOTORS (U8NA--01), NH-65, OPP
- RKM FARM, AMBALA ROAD, KAITHAL 136027 64. EAKANSH MOTORS (UBNA-02), KHEWAT NO -458, KHATONI - 563, KITTAS - 20/87K 01M ADJOINING NEXA SHOWROOM, AMBALA HISAR ROAD, KAITHAL - 136027 PH :8813038777.

KARNAL

 KARNAL MOTORS (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA -132001

PANIPAT

 AUTO GALLERY (D3NB--01), NANGAL KHERI, NEAR BBMB POWER HOUSE, OPP. SEC-29, PANIPAT, HARYANA - 132103 PH :9812615000.

REWARI

 DINCO MOTORS (U1NA--01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401

ROHTAK

 JAGMOHAN MOTORS (A6NA--01), NORTHERN BYEPASS, SUKHPURA CHOWK, JIND ROAD, ROHTAK, HARYANA PH: 8754045446.

SIRSA

 SHAKTI MOTORS (E4NA--01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSA -125055

SONIPAT

 JAGMOHAN AUTOMOBILES (J5NB--01), SONIPAT MURTHAL ROAD NEAR ASR CNG PUMP - 131001

HIMACHAL

KANGRA

 KANGRA VEHICLEADES (D9NA--01), VPO-HATWAS, NAGROTA BAGWAN, DISTRICT-KANGRA, HIMACHAL PRADESH - 176047 PH:7018145653.

JAMMU & KASHMIR

JAMMU

- JAMKASH VEHICLES (33NB-33-01), NH-1A BYE PASS OPPOSITE CHANNI HIMMAT, JAMMU (J&K)
- JAMMU MOTORS (33ND-33-01), KHASRA NO. 421, TOPE SHERKHANIA, AKHNOOR ROAD, OPPOSITE BEST PRICE, JAMMU, JAMMU & KASHMIR - 180016

SRINAGAR

 PEAKS AUTO (12NA-12-01), DR. ALI JAN ROAD, SOURA, SRINAGAR PIN – 190011. - 190011 PH:7006285604.

JHARKHAND

BOKARO

 HINDUSTAN AUTO AGENCY (B5NA-01), KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS, BOKARO. - 827013 PH:9304807318.

DEOGHAR

 PREMSONS (SGWN-01), PLOT NO 318/319 UNDER THANA NO 583, MAHESHMARA MOUJA DEOGHAR - 814112 PH :9835507004.

DHANBAD

 RELIABLE (52NA-52-01), RELIABLE INDUSTRIES NEXA WORKSHOP AMAGHATA, BY PASS ROAD SUGIADIH, PIN -828109 - 828109 PH: 7992470853.

HAZARIBAGH

 PREMSONS (Y9NA--01), PREMSON MOTOR UDYOG PYT LTD, NEXA SHOWROOM NEXT TO GST OFFICE, ARYA NAGAR, HURHURU, HAZARIBAGH, JHARKHAND 82501 - 825301 PJ - 983507004.

JAMSHEDPUR

- MOTOR WORLD (31NB-31-01), NS-6, 2ND PHASE, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013
- 80. PEBCO MOTORS (31NA-31-01), KANDRA ROAD, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR -831013

PH :9334183260. RANCHI

 SUDHA MOTORS (51NB-51-01), KATHALMORE, OPP. MANER DHABA, RANCHI - 834005

 PREMSONS (51NC-51-01), PLOT NO 2651/2652, KHATA NO 239, MAUJA, VILLAGE BARAGAI, BARIATU MAIN ROAD, RANCHI, JHARKHAND - 834009 PH -9334811248

KARNATAKA

BANGALORE

- MANDOVI MOTORS (02NJ-01), SURVEY NO.33/2,ALLALASANDRA, YELAHANKA NORTH, BANGALORE, KARNATAKA - 560064 PH :951372988.
- KALYANI MOTORS (02NI-01), SURVEY NO 17/2, KENCHENAHALLI VILLAGE, RAJARAJESHWARI NAGAR, MYSORE ROAD, BANGALORE, KARNATAKA - 560032 PH :9845049626.
- 85. SURAKSHAA CAR CARE (02NF-01), 2/6, BERTEN AGRAHARA, OPP TO METRO CASH & CARRY, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE, KARNATAKA - 560100 PH :8884471199.
- 86. PRATHAM MOTORS (02NK-01), 120,SARJAPUR MAIN ROAD,DODDAKANAHALLI, VARTHUR HOBLI, BANGALORE EAST, KARNATAKA-560035 560035 PH :8884000579
- VARUN MOTORS (02NG--01), NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE, TUMKUR ROAD, YESHWANTPUR, BANGALORE, KARNATAKA-560022. -560022 PH:897188885
- VARUN MOTORS (02NM--01), 37/56 NAGAVARA VILLAGE, HEBBAL RING ROAD, BANGALORE -560024 PH: 9513394753.

- KALYANI MOTORS (02NN-01), 152/7, OUTER RING ROAD, DODDA BANASWADI, HORAMAVU, KR PURAM HOBALI, BANGALORE -560043. -560043
 - PH:9900020454
- BIMAL AUTO AGENCY INDIA PVT LTD (02NL--01), NO 1, 3 RD BLOCK, 2ND STAGE, NAGARBHAVI, OUTER RING ROAD, BANGALORE -560072
- BIMAL AUTO AGECNY INDIA PVT LTD (02NC--01), SY NO.904, NEAR KATAMANALLUR GATE, KANNAMANGALA, KADUGODI MAIN ROAD, SANNATAMMANAHALLI, BENGALURU, KARNATAKA - 560067
 PH. 9742269137

BELGAUM

 SHANTESHA MOTORS (E8NA-01), PLOT NO. 6/B, R. S. NO. 34, BOUXIDE ROAD, KANGRALI B K, BELGAUM, KARNATAKA-590010. - 590010 PH 9538195381

BIJAPUR

 CHAVAN MOTORS (KTK) PRIVATE LIMITED (T7NA--01), #262, RANE MADRAS ROAD RING ROAD, NEAR SESHADRIPURAM COLLEGE HEBBAL MYSORE - 586109 PH :8799557100

DAVANGERE

 SHRUTI MOTORS (S1NA-01), #323/1A, OLD PB ROAD AVARAGERE. DAVANGEREE - 577003

HASSAN

 VENKAT MOTORS (C8NA--01), VENKAT MOTORS, #200/46/2, D.M HALLI, NEAR GUHEKALAMMA TEMPLE, B.M ROAD, HASSAN -573201

HUBLI

 LEKHYA MOTORS (73NA-73-01), OPP TO APMC 2ND GATE, ESHWAR NAGAR, HUBLI-DHARWAD ROAD, HUBLI-580025. - 580025 PH:9513777265.

MANGLORE

 MANDOVI MOTORS (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142 PH 9845133077.

MYSORE

- FRIENDLY MOTORS (25NB-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA-570016. - 570016 PH -9845011686
- 99. MANDOVI MOTORS PRIVATE LIMITED (2SNA--01), MANDOVI MOTORS PRIVATE LIMITED NEXA SERVICE #90/7, DATTAGALLI RING ROAD, R.T. NAGAR JUNCTION, MYSURU - 570023

KALYANI MOTORS PVT LTD (25NC--01),
 KALYANI MOTORS PVT LTD - 570016

SHIMOGA

 SHRUTI MOTORS (B7NA--01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA, KARNATAKA -577201
 PH :989596666.

KERELA

CALICUT

- 102. AM MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EVE HOSPITAL, SRAMBIKKAL PARAMBA, MINI BYPASS JALI ROAD JUNCTION, PUTHIYARA POST, CALICUT, KERELA-673004, 673004 PH: 7708333966.
- POPULAR VEHICLES (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017 PH:9946104660.

COCHIN

- 104. INDUS MOTOR (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106 PH - 9747508822
- 105. SAI SERVICE (27NA-27-01), 723/7, 6.18, OPP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. -682021.

KAYAMKULAM

PH:9645106193

 SAI SERVICE (8LNA--01), S.NO 111/48, KP ROAD, KAYAMKULAM, KERALA - 690502 PH 9288024222

KOLLAM

107. SARATHY AUTOCARS (C7NA--01), NH-47 BYE PASS ROAD, AYATHILP O KOLLAM DIST, KERALA STATE PIN 691021 - 691021 PH -9848659456

TRIVANDRUM

 INDUS MOTOR (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND, ALUMOOD JN, NH 47, KANNIYAPURAM, TRIVANDRUM - 695301. -695301 PH :9656685678.

MADHYA PRADESH

BHOPAL

109. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC--01), 42, 6_BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSHANGABAD ROAD, BHOPAL (M.P.)

INDORE

- PATEL MOTORS (63NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJRANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016
 PH: 7771002581
- 111. OCEAN MOTORS (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001
- RANA MOTORS (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 -452010
 PH :9933055539
- 113. RUKMANI (53NC-53-01), RUKMANI MOTORS NEXA SERVICE, FOOTHI OTHI SQUARE, OPP. DASTOOR GARDEN, INDORE -452002 PH. 9755512100.

JABALPUR

 STANDARD MOTORS (54NC-54-01), KHARSA NO-529/1/1 ,NEAR TRIPURI CHOWK GARHA JABALPUR M. P - 482003 PH :9773543358.

SAGAR

115. ADINATH CARS (G1NA-01), KHASRA NO 155, P H NO. -77, BAHERIA GADGAD, SAGAR JABALPUR ROAD, SAGAR - 470004, MADHYA PRADESH, INDIA - 470004 PH. 9752447690.

SATNA

116. CITY CARS (D7NA-01), BEHIND NEXA SHOWROOM, 666/2, AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001 PH :6262230999.

UJJAIN

 RUKMARANI (YUG) (3WNA--01), 59/1, DEWAS ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN -456664
 PH :9755512100

MAHARASHTRA

AHMEDNAGAR

 KANKARIYA AUTOMOBILES (A5NA--01), SH-60.NEWASA ROAD ,NAGARDEOLE,AHEMDANAGAR,MAHARASTRA -414601 PH :9403961522.

AMARAVATI

 ASPA BANDSONS (F2NA--01), F32/1 MIDC, AURANGABAD NAGPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444607 PH: 9130041513.

AURANGABAD

- 120. AUTOMOTIVE MANUFACTURER LTD
 (21NB-21-01), PLOT NO:-L-3/1, BETWEEN
 GARWARE & WOCKHARDT LTD, JALGAON
 ROAD, MIDC CHIKALTHANA, AURANGABAD PIN:
 431006, MAHARASHTRA 431006
 PH :9974999773
- PAGARIYA AUTO (21NA-21-01), OPP AIRPORT, NEXT TO INDIAN OIL PETROL PUMP, JALNA ROAD, AURANGABAD, MAHARASHTRA - 431006 PH : 888885072

BARAMATI

 MAHALAXMI AUTO (7RNA--01), BHIGWAN ROAD, SHIV NAGAR, BARAMATI (MAHARASHTRA) PH:9850994014.

CHANDRAPUR

123. BARBATE AUTO (H3NA-01), PLOT NO 15-18, OUT OF SURVEY NO 14/4, 15/5, MAUZA BADOLI, NAGPUR CHANDRAPUR HIGHWAY, CHANDRAPUR, MAHARASHTRA - 440025 PH :8380887666.

JALGAON

124. MANRAJ AUTO (C4NB--01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA – 425003 - 425003

KHARGHAR

125. SIMRAN MOTORS (AACN--01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA. - 410209

KOLHAPUR

 SAI SERVICE (38NA-38-01), 1243/66, E WARD, SHIVAJI UDHYAMNAGAR, KOLHAPUR - 416001 PH :9923208401.

MUMBAI

- 127. SAI SERVICE (05NB--01), JOSEPH CARDIJN TECHNICAL SCHOOL, KHASHABA JADHAV MARG, OFF DR. AMBEDKAR ROAD, DADAR (EAST) MUMBAI, MAHARASHTRA. - 400014
- SHIVAM MOTORS (05ND--01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA. -400069
- 129. KTS AUTOMOTORS (05NH--01), UNIT NO A1, PANNALAL COMPOUND, LBS KANTILAL MAGANIAL ESTATE, LB.S MARG, BHANDUP (W), MUMBAI - 400078
- SHÍVAM AUTOZONE (05NE-01), PLOT NO. 1 & 2, RAMCHANDRA LANE EXTN., KANCHPADA, OFF LINK ROAD, MALAD-WEST. - 400064 PH: 9870938888.

NAGPUR

 BARBATE AUTO (20NA-20-01), 37/2, MANISH NAGAR, BESA T POINT, BESA ROAD NAGPUR 440025 - 440025

NANDED

132. SEVA AUTOMOBILES (68NA-68-01), AIRPORT ROAD SANGVI - 431605 PH:7065026520

NASHIK

133. SEVA AUTOMOBILES (37NA-37-01), PLOT B-17. MIDC. AMBAD. NASIK. MAHARASHTRA - 422010 PH:8975762303

NAVI MUMBAI

134. AUTOMOTIVE MANUFACTURER LTD (39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY. NAVI MUMBAI - 400706 PH:9769206120.

PUNE

135. KOTHARI WHEELS (19NB-19-01), GATE NO 1605. OLD 1099, KESNAND ROAD, WAGHOLL TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA - 412207 PH:7721865000

136. EXCEL AUTOVISTA (19NG-19-01), SURVEY NO 98/2A/P. NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM BANER TALUKA PUNE -411045

SEHGAL AUTO RIDERS (19NE-19-01), SURVEY NO 63/2. SHEWAI EWADI, MANJARI BUDRUK. PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHTRA - 412307 PH:9158000049

WONDER CARS (19ND-19-01), PLOT NO 52/1 BLOCK F2. MIDC PIMPRI, PUNE - 411019 PH:9850094151

MAHAI AXMI AUTO (19NI-19-01), NEAR SADGURU PETROL PUMP, PUNE NASHIK HIGHWAY, AT KURALI, KHED TALUKA, CHAKAN - 410501 PH:9923589214.

SAI SERVICE (19NC-19-01), SINHAGAD ROAD, NEAR NANDED CITY, VADGAON KHURD, PUNE. (MAHARASHTRA) PH:9923308333

RATNAGIRI

141. JAGRUT MOTORS (G3NA--01), 410/6/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI. MAHARASHTRA - 415612 PH:9820039626

SHOLAPUR

142. CHAVAN MOTORS (B1NA--01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224 PH:8888881314.

THANE

143. EXCEL AUTOVISTA (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD, THANE MAHARASTHRA - 400607 PH:9967331726

144. EXCEL AUTOVISTA (39NA-39-02), NEAR ARIHANT COMPOLIND KALHER BHIWANDI THANF - 400607 PH:9967331726.

NAGALAND

DIMAPUR

145 PROGRESSIVE MOTORS (32NA-32-01) OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39. DIMAPUR KOHIMA ROAD. - 797115 PH:7669223736

ODISHA

BERHAMPUR

146. SKY AUTOMOBILES (E2NA--01), PLOT NO 373/2229 & 373/1204 AMARAPUA MOUZA BRAHMAPUR (ODISHA) - 760007

ROURKELA

147. ORBIT MOTORS (87NA-87-01), PLOT NO 5G/3. VED VYAS, SUNDARGARH, ROURKELA - 769041 PH:9165071234

SAMBHALPUR

148. ODYSSEY MOTORS (D4NA--01), SAMBALPUR. CHOWK, REMED, ODISHA 768006 - 768006

PUNJAB

AMRITSAR

JAYCEE MOTORS (17NA-17-01) JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES VILLAGE VALLAH AMRITSAR PUNJAB - 143501

BHATINDA

150. TARA (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB -PH:8437019666

JALLANDHAR

151. LOVELY AUTO (35NA-35-01), NH 1 GT ROAD. PRAGPUR JAI ANDHAR PUNJAB

MARWAHA AUTOS (35NC-35-01), KHASRA NO -16450, SITUATED AT RAJA GARDEN. KAPURTHALA RD, JALANDHAR - 144001 PH:9915944600

LUDHIANA

153. GULZAR (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003 PH:9814839777.

154. HOSHIARPUR AUTO (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003 PH:8872501234.

155. MARWAHA AUTOS (62NH-62-01), FEROZEPUR RD AMAN PARK NEW SLINDER NAGAR LUDHIANA PUNJAB - 141012 PH:8872000357.

LOVELY AUTOS (62NF-62-01), NEAR SAMRALA CHOWNK MOTI NAGAR I UDHIANA - 141010 PH:9875999161.

MOHALI

157. CM AUTO SALES (L1NA--01), B-64A, INDUSTRIAL AREA PHASE-7 MOHALL

NAWANSHAHR

158. LOVELY AUTOS (J7NA--01), VPO LANGROYA. CHANDIGARH ROAD, NAWANSHAHR - 144514 PH:9915028682

PATHANKOT

159. PATHANKOT VEHICLEADS (A7NA--01), PLOT NO.-C-30. INDUSTIAL GROWTH CENTRE. VILL. CHACELL PATHANKOT - 145023 PH:7527006800

RAJASTHAN

AJMER

160. NAVNEET MOTORS (B2NA--01), PLOT NO7 -8, RIICO INDUTRAIL ESTATE MAKHAPURA NASIRBAD ROAD, AJMER (RAJASTHAN)-PIN CODE-305002 - 305002 PH:9414149149.

ALWAR

161. FORTUNE CAR (F9NA--01), 6TH MILESTONE VILLAGE JATIYANA.OPP. PETROL BEHROR ROAD AI WAR - 301001 PH:9982341741.

BHILWARA

162. CHAMPION CARS (E3NA--01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001 PH:9001027933.

BIKANER

163. AUDI MOTORS (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD . BICHHWAL INDUSTRIAL AREA . BIKANER 334001 - 334001 PH:9887222786.

CHITTORGARH

TECHNOY (K9NA--01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001

JAIPUR

165. K P AUTOMOTIVES (11NB-11-01), PLOT NO.3-4, MANGLAM RIICO INDUSTRIAL ARFA NFAR KANAKPURA RAII WAY STATION.SIRSI ROAD - 302034 PH:7412059823.

166. SATNAM MOTORS (11ND-11-01), D-27, K/L/M, ROAD NO-3 SIKAR ROAD VISHWAKARMA INDUSTRIAL AREA JAIPUR RAJASTHAN-302023. - 302023 PH:9649373311.

JHUNJHUNU

167. AUDI MOTORS (FNNA--01), NEAR TVS TWO WHEERLER SHOWROOM ROAD NO 3 GUDHA MOD. RAJASTHAN 333001 - 333001 PH:7970006402

JODHPUR

168. AUDI MOTORS (65NA-65-01), 14 A. HEAVY INDUSTRIAL AREA. ITI CIRCLE, SARASH DAIRY ROAD JODHPUR - 334001 PH:7300077394

169. LMJ AUTO (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1

JODHPUR - 342009 PH:7412087320.

170. LMJ SERVICES (65NB-65-02), PLOT NO.-61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001 PH:8094011126

KOTA

171. BHATIA & CO. (61NA-61-01), G-11A, ALITOMORII E ZONE IPIA NEAR DAKANIYA RAII WAY STATION, KOTA - 324005 PH:8094011126

SIKAR

172. JAMU (K7NA--01), THAR PETROL PUMP. JAIPUR ROAD SIKAR - 332001 PH:9414037515 UDAIPUR

TECHNOY (49NB-49-01), OPP, NAND BHAWAN, GOVERDHAN VILLAS . UDAIPUR

TAMIL NADU

CHENNAI

174. PILLAI & SONS (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAL TAMIL NADU - 600117 PH :9994950505

POPULAR VEHICLES (14NB-14-01), 69/A & 69/B. SAMAYAPURAM MAIN ROAD, PORUR, CHENNAL TAMIL NADU- 600116 - 600116 PH:9842389111.

KHIVRAJ MOTORS (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058, - 600058 PH:9626099999

VISHNU CAR (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056 PH :7339359111

- ABT (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU -600032
- PH:9994444303.

 179. VISHNU CAR (14NG-14-02), POONAMALLE HIGH ROAD, ARUMBAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056

COIMBATORE

PH:7550333622.

- AADHI CARS (41NB-41-01), OLD KALIAPPA KALYANAMANDAM, PREMISES, KAVUNDAMPALAYAM, COIMBATORE, TAMIL NADU - 627007 PH -9003077577
- SREE SARADHAMBAL (41NA-41-01), 18/1472,
 S.N.R COLLEGE ROAD, NAVA INDIA,
 COIMBATORE, AND TAMILNADU-641004. 641004
 PH :9790004271

ERODE

 SREE SARADHAMBAL (H7NA--01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011 PH :9786022272.

HOSUR

183. SRI AMMAN CARS (7QNA-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44, OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILINADU - 635109 PH :9841033464

KARAIKUDI

184. MEENAKSHI AUTOZONE (HXNA-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIAPURAM, KARAIKUDI, TAMIL NADU - 630001 PH :9940094881.

MADURAI

185. ASIR (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001

NAGERCOIL

186. ATHEN CARS (55NA--01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU -629003 PH :9751196436.

PONDICHERRY

187. SHENBAKA CARS (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMAMBAKKAM, BAHOOR COMMUNE,PONDICHERY - 607402 PH 7338322220

SALEM

 THRIVENI CARS (A2NA--01), 2/6, KANDHAMPATTY.BYE PASS ROAD, SALEM, TAMILNADU - 636005 PH :9786022272.

189. SM CAR (A2NB--01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM-636010 PH 7094440010

THANJAVUR

 PILLAI & SONS (E7NA--01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403 PH :9443264165.

TRICHY

191. PLA MOTORS (23NA-23-01), TS NO.29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017. -620017 PH:8110099991

TRIPUR

 SHASHTI (Y7NA--01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604 PH :9942903310

VELLORE

193. SRI GANESH CARS (C6NA--01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI, VELLORE, TAMILNADU - 632009 PH :9884722126.

TELANGANA

HYDERABAD

- 194. KALYANI MOTORS (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHARMANGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079 PH 9347121212
- 195. VARUN MOTORS (10NB-10-01), B-54, CO.INDUTRIAL ESTATE, BALANAGAR, HYDERABAD, TELENGANA - 500037
- 96. GEM MOTORS (10NH-10-01), D.NO.8-96, SURVEY NO.128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA. - 500084 PH. 9912345899.
- JAYABHERI AUTO (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032. - 500032
- VARUN MOTORS (10NB-10-02), H.NO.
 8-2-120/117/A/2. PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD TELANGANA 500033 PH 9885610555.

- SAI SERVICE (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046. -500046 PH 9966377888.
- 200. RKS (10NI-10-01), SY NO:42, PET BASHEERABAD, QUTHBULLAPUR, MEDCHAL MANDAL, HYDERABAD - 500014
- ADARSHA AUTOMOTIVE (10NG-10-01), PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI NAGAR, BALANAGAR, KUKATPALLY, HYDERABAD -500072
- ADARSHA AUTOMOTIVE, SHAMSHABAD (10NG--02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA – 501218 - 501218 PH :8297116633.

KARIMNAGAR

 ADARSHA AUTOMOTIVE (N6NA-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001 PH :9847073265.

MAHBUBNAGAR

204. JAYARAMMA AUTO (WPNA--01), CHRISTIANPALLY, BHOOTPOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001 PH :8096990074

MANCHERIAL

205. ADARSHA AUTO (CMNA--01), SURVEY NO-417,BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL,TELANGANA - 504208 PH 9133339709

NIZAMABAD

 VARUN MOTORS (1HNA--01), 1-51/4/1/D4 MADAHAVA NAGAR, HYDERABAD ROAD, NIZAMABAD, TELANGANA, 503230 - 503230 PH -9542222486.

SECUNDERABAD

- MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDERABAD, ANDRAPRADESH-500020. - 500020
- 208. AUTO FIN (K6NB--01), PLOT NO.6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDERABAD, TELANGANA -500011
- PH:8886144551.

 209. VARUN MOTORS (K6NC--01), VARUN MOTORS, ZND CROSS ROAD, SAINIKPURI, SECUNDERABAD PH:779960094

WARANGAL

 ADARSHA AUTOMOTIVE (D5NA-01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007 PH: 8978944414.

UTTAR PRADESH

AGRA

MADHUSUDAN MOTORS (66NA-66-01),
 ADJOINING HEMA PETROL PUMP, EIT MANDI,
 BODI A AGRA

ALIGARH

- CLML (B6NA--01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOL, ALIGARH, UTTAR PRADESH. - 202002 PH: 9639775522.
- CLML (B6NA--02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 - 202140 PH: 9358373099.

BARIELY

 CORAL (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BARIELLY, UP - 243001 PH: 9359101010.

GHAZIABAD

- 215. ROHAN MOTORS (59NA-59-01), KHASRA NO 46, DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101 PH :8178839830.
- 216. J J IMPEX (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 -201003

GORAKHPUR

217. SMART WHEELS (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH - 273009 PH :8222002147.

GREATER NOIDA

 MSM (JJ IMPEX) (T283--N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009

HARDOI

119. CONCEPT (QENA-01), PLOT NO. 1609 & 1605, GUNGABUX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001 PH:7607696666.

JHANSI

 SURI (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003 PH : 7705000558.

KANPUR

221. KTL (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILYWAY COLONY, KANPUR, UTTAR PRADESH. - 208017 PH.7408409312.

LUCKNOW

- 222. ANAND MOTORS (13NC-13-01), GATA NO. 1062 PARGANA RAJA BIJLI PASI VILLAGE AURANGABAD, SHAHEED PATH (OPPOSITE TO RAMABAI AMBEDIKAR MAIDAN), LUCKNOW, UTTAR PRADESH - 226012
- 223. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT NO - 513, VILL HARIHARPUR BIJNAUR, OPP ANSAL API, AMAR SHAHEED PATH, LUCKNOW-227105 PH.7311190503.

MATHURA

224. UMA MOTORS (H8NA--01), PLOT NO 222, MAHOLI, NEAR KIRAN HOSPITAL, MATHURA -281004 PH:9997385999.

MEERUT

225. TR SAWHNEY (48NB-48-01), 1183/17 RITHANI, ZONE - A, SECTOR 4 NEAR PETROL PUMP, MEERUT, UTTAR PRADESH - 250103 PH:18002704142.

NOIDA

- 226. FAIR DEAL (A1ND--`01), A-107, SECTOR-5. NOIDA - 201301 PH :9810542222.
- MOTOR CRAFT (59NB-59-01), C 42 SECTOR 57, NOIDA, UTTAR PRADESH - 201301

RAIBARIELY

228. KTL AUTOMOBILE PVT LTD (HSNA--01), 1481, NEAR KATHWARA BUS STAND, LUCKNOW RAIBARELI - 229303 PH:7311190503.

SAHIBABAD

 MSM (M983--N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL AREA, - 201010 PH:9711474930.

SHAHJHANPUR

 SUMITRA DS (W2NA--01), SH25, RETI ROAD SHAHJAHANPUR

UTTARAKHAND

HALDWANI

 NAINITAL MOTORS (J6NA--01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR UJALA PRINTING PRESS, HALDWANI, UTTARAKHAND -263139

ROORKEE

232. SHAKUMBARI (H2NA--01), 5 KM MILESTONE ,NH-58,ROORKEE-DELHI ROAD ,NEAR HOTEL GODWARI ROORKEE LITTARAKHAND - 247667

RUDRAPUR

233. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (U4NB-01), KASHIPUR ROAD, OPPOSITE GREEN PARK COLONY, VILLAGE DIBDIBA, TEHSIL BILASPUR, RAMPUR, UTTRAKHAND -244901

WEST BENGAL

ASANSOL

 BEEKAY AUTO (F6NA--01), NH-2, CHANDA MORE, POST KALI PAHARDI, JAMMURIA DISTRICT WEST BARDHAMAN - 713339 PH: 9932049425.

HOWRAH

235. MACHINOTECHNO (X7NA--01), 109, 1, UPPER FORESHORE RD, CHOURA BUSTEE, SHIBPUR, HOWRAH, WEST BENGAL 711102 - 711102 PH :9830081632

JALPAIGURI

 PODDAR AUTO (XYNA--01), ASSAM MORE BUS STOP, SH12A, JALPAIGURI, WEST BENGAL 735102 - 735102 PH: 8945533002.

KHARAGPUR

 BHANDARI AUTOMOBILES (G7NA-01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301 PH:7603076061.

KOLKATA

238. JYOTE MOTORS (06ND--01), MIRANIA ROAD, ARUPOTA ON BASANTI HIGHWAY, - 700105 PH :9074158220.

ANDHRA PRADESH

ANANTAPUR

1.** GOWRI AUTO. & ENGG. WORKS (2621), PATEL ROAD, ANANTHAPUR-515 001 (A.P), , PH -9848079075

ARMOOR

2.## HYDERABAD MARUTI MOTORS (4932), PLOT NO. 6, BESIDE THAKUR BEEDI FACTORY, ARMOOR, DISTRICT-NIZAMABAD (ANDHRA PRADESH), PH :503274-9848705619

CUDDAPPAH

3.## SIVAJI MOTORS (3275), BESIDES
PADMASHALI KALYANA MANDAPAM,
MADRAS ROAD, KADAPA-516002, ANDHRA
PRADESH,
PH -516002-9849113189

4.## SREE VENKATESWARA AUTO. (1030), SANKARA PURAM, CUDDAPAH (A.P)., PH :516002-9704209620

GUNTAKAL

.## S. MAHABOOB AUTOMOBILES (4075), ALUR ROAD, GUNTAKAL-515802, , PH:515802-9440208312.

GUNTUR

6.## S. S. MOTORS (4946), OPP. JKC COLLEGE, JKC COLLEGE ROAD, GUNTUR-522006, ANDHRA PRADESH, PH :522006-9848936363

HYDERABAD

7.* BHARAT MOTORS (3574), 1-90/7, BEHIND SUPRABHAT HOTEL, HABSIGUDA "X" ROAD, HYDERABAD-500 007, PH :500007-9848193837

8.## NEW TECHNOCRATS AUTO SERVICES (4477), 1-2-607/23/1/C, AMBEDKAR NAGAR, INDIRA PARK ROAD, HYDERABAD-500029 (ANDHRA PRAESH), PH:500029-9347511963.

KAKINADA

9.## SATISH AUTO CARE (5038), BEHIND KALPANA THEATRE, BEACH ROAD KAKINADA, DISTRICT EAST GODAVARI, ANDHRA PRADESH, PH: 533005-9848313599.

10.## SRI SHIRDI SAI TECHNOCRAFTS (1459). FLAT NO 36/2, LD.A., RAMANAYYAPETA. BESIDE MAHINDRA SHOW ROOM, OPP: BHAVANI CASTING ROAD, KAKINADA-533005, PH :533005-9848633336.

KAVALI

11.## KAMAL MOTORS (3842), 10-15-43/J3A OPP LIC, TANK RAOD, KAVALI, PH :524201-9440928888

KURNOOL

2.# SRINIWAS AUTO GARAGE (5170), KALLUR ROAD, KURNOOL, DISTRICT - KURNOOL, ANDHRA PRADESH, PH :518002-9440244660.

MACHILIPATNAM

13.## SRI MARUTI MECHANICAL WORKS (4172), D.NO 4-121, PLOT NO 26,27, , POTEPALLI INDUSTRIAL PARK, MACHLIPATNAM-521002, PH :521002-9440538012.

MANDAPETA

4.# MODERN MARUTI CARE (4866), D.NO. 4-1-59/2, MAIN ROAD, MANDAPETA-533309, DISTRICT-EAST GODAVARI, ANDHRA PRADESH, PH:533309-9133198494.

MATHURAWADA

5.## ANY TIME SERVICE CENTRE (4860), BESIDE ELECTRICAL SUBSATION , MADHURAWADA - 530041, DISTRICT VISAKHAPATNAM, ANDHRA PRADESH, PH :530048-897739988

NAGARI

16.# PUJITHA SERVICE CENTER (5872), TIRUPATI ROAD, NAGARI-517583, DISTRICT-CHITTOOR, ANDHRA PRADESH, PH :517583-9966106128.

NANDYAL

MARUTI MOTORS (2635), PLOT NO 428, NH-18, NEAR RAILWAY GATE, NANDYAL-518501, PH:518501-9440554617.

NELLORE

18.## MARUTI AUTO SERVICE STN. (2620), 16/796 SANKARA AGRAHARAM, NELLORE-524 001 (A.P.),

PH:524001-9885881905

9.** MARUTI MOTORS (176), 16-3-995, MINI BYPASS ROAD., RAMALINGAPURAM, NELLORE-524 003,(A.P.), PH: 524003-9440278243.

PATTIKONDA

0.# ROYAL MOTORS (5776), ADONI ARTS & SCIENCE, COLLEGE ROAD ADONI,PATTIKONDA-518302, DISTRICT-KURNOOL, ANDHRA PRADESH, PH :518302-9866362847.

PRODDATTUR

21.## SRI RAM MOTORS (3642), 189 INDUSTRIAL AREA, NEAR SRI LAKSMI NAGAR, MYDUKUR ROAD, PRODDATUR (A.P.), PH : 516360-9666890525.

RAJAHMUNDRY

22.## MARUTHI MOTORS (1257), D.NO 88-30-04, OPP I.T.C. GADALAMMA NAGAR, NH-16, RAJAMAHENDRAVARAM -533107, PH -533107-9848253434

SIDDIPET

23.* POOJA MOTORS (4076), 19/180 KARIMNAGAR ROAD, G.P. PRASANTH ROAD, SIDDIPET, DISTRICT MEDAK (AP), PH: 502103-9848348344.

SRIKALAHASTI

24.## SUNDEEP CARS (5972), 16/769,SRI RAM NAGAR COLONY, SRIKALAHASTI-517640, DISTRICT-CHITTOOR, ANDHRA PRADESH, PH:517640-9848294869.

TENALI

25.## HIMAJA MARUTI SERVICE STATION (2828), LECTURER'S COLONY, GIRIJA HOSPITAL ROAD, GANGANAMMAPET, TENALI-522 201 GUNTUR DIST. (A.P.), PH 522201-9849715727

16.## RAHUL MOTORS (5157), D.NO.18-3-4BITRA SRI RAMULU STREET, BEHIND TELEPHONE EXCHANGE SALIPET, TENALI, ANDHRA PRADESH, PH: 522201-9490187453

VISAKHAPATNAM

27.## SIRI AUTOMOBILES (5232), PLOT O 94/A IDA E BLOCK, AUTO NAGAR.GAJUWAKA, VISHAKHAPATNAM, ANDHRA PRADESH, PH :530012-9963296667.

28.# SRINIVASA AUTO GARAGE (5440), OPP. KANTI ROAD,, NEAR RAYS PETROL PUMP -VISHAKHAPATNAM, DISTRICT -VISHAKHAPATNAM, ANDHRA PRADESH, PH :530031-9912688943.

YISAG AUTO SCANS (461), 49-52-1/4/2 OPP HNR VIHAR APPARTMENTS, SANTHIPURAM, SANKARMATAM ROAD, VISAKHAPATNAM-530016, PH:530016-9246625885.

VIZIANAGARAM

VIKRAMA AUTOMOBILES (4621), 17-13-4
 TEMPLE STREET, VIZAINAGARAM - 531 202 (A.P.), PH: 535003-9440192224.

ARUNACHAL PRADESH

ALONG

31.## BAANU MOTORS (1744), SIYOM MARKET, ALONG, WEST SIANG DISTT., (ARUNACHAL PRADESH), PH :791001-.

BOMDILA

32.## GURU MOTORS (3921), BIRPUR, RUPA, ARUNACHAL PRADESH 790003, PH :790003-7640898278.

NIRJULI

33.## SANGO SERVICE CENTRE (5742), LEKHI VILLAGE, NH-415, NEAR MAHINDRA AUTOMOBILE, NAHARLAGUN, ARUNACHAL PRADESH - 791110, PH : 791110-

TAWANG

34.## TAWANG MARUTI SERVICING STATION (4255), OLD BAZAR LINE, P.O. & P.S., TAWANG, ARUNACHAL PRADESH, PH:790104-9402493456.

ZIRO

35.## HILLS AUTO AGENCY (3922), POLICE RESERVE & PETROL PUMP ROAD, HAPOLI BAZAR P.O. ZIRO, DISTT. LOWER SUBANSIRI, ARUNACHAL PRADESH - 791 120, PH - 791120-9436047232

ASSAM

BADARPUR

MARUTI CAR PLAZA (3635), NEAR INDUSTRIAL AREA, S.T. ROAD, BADARPUR, DISTT. KARIMGANJ (ASSAM) PIN-788 806, PH : 788806-9854970591

BISHAWANATH CHARIALI

7.* BINA AUTOMATION (3677), , P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176, PH:784176-9957309744.

38.## DISHANG DONE (1058), 52 N.H., BISHWANATH CHARIALI-784176, DISTT. SONITPUR, ASSAM, PH :784176-9854004161

39.# BINA AUTOMATION (), P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176, PH :784176-9957309744.

BOKAJAN

D.## SHREE GANESH MOTORS (6040), SUKHANJAN SUPER MARKET,P.O:BOKAJAN(C.F.), DISTRICT KARBI ANGLONG , ASSAM , PH:782480-9435167138.

BOKAKHAT

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

41.## GOENKA AUTOMOBILES (2878), P.O. BOKAKHAT, DISTT. GOLAGHAT, ASSAM-785 612.

PH:785612-9854048910.

DHALIGAON

2.## ADHIKARI MOTOR WORKS (4049), P.O. DHALIGAON, DIST-BONGAIGAON, ASSAM-783385, PH 783385-9435020938

DHEMA.II

43.## NARAH AUTOMOBILES (3852), C/O BLUE HILL COUNTER, P.O. DHEMAJI, DISTT. DHEMAJI, PIN-787 057 (ASSAM), PH :787057-9954390916.

DHUBRI

14.## BRAHMAPUTRA MOTOR SERVICING STATION (3127), G.T.B ROAD, DHUBRI-783 301, (ASSAM), PH:783324-9101176148.

DIBRUGARH

45.* GEE DEE AUTO SERVICE (953), JHALUKPARA, DIBRUGARH-786 001, ASSAM, PH :786001-9435131119. 46.** MEHBOOB AUTOMOBILES & TYRE

46.** MEHBOOB AUTOMOBILES & TYRE SERVICES (1760), CHOWKIDINGHEE, NEAR STATE TRANSPORT, DIBRUGARH-3, PH '786005-9854432207

DIGBOI

47.** GAURI AUTOMOBILES (3760), MULIABARI, DIGBOI 786 171, , PH :786171-9435137556.

DIPHU

48.## WOJARU MOTORS (4377), DPHU MANJA ROAD, DILAJI, NEAR BIRLA FACTORY, DIPHU, PH :782460-8473875926.

DOOM DOOMA

49.* S K AUTO CARE (3962), UCHAMATI, NATIONAL HIGHWAY, DOOM DUMA, ASSAM 786151, PH: 786151-9435135876.

GOALPARA

50.## BHARAT ENGINEERING WORKS (969), PO-BALDMARI, AGIA ROAD, GOALPARA (ASSAM)-783 102, PH :783 102-9864 767777.

GOLAGHAT

51.## KAKOTI MOTOR WORKS (1074), NEW AMOLAPATTY, RANGPUR, P.O. GOLAGHAT-785 621, DISTT. GOLAGHAT (ASSAM),

PH:785621-9435053663.

35053663.

GOSSAIGAON

52.## A.R. AUTOMOBILES (4544), NH-31C, HABRUBIL, GOSSAIGAON, DIST KOKRAJHAR, ASSAM-783360, PH :783360-9435109765.

GUWAHATI

53.** MONO MOTOR WORKS (966), BAMUNI MAIDAN, GUWAHATI-781 021, , PH :781021-9864186600.

HAILAKANDI

RONOK AUTOMOBILES (5978), LALA ROAD,NEAR CIVIL HOSPITAL, HAILAKANDI-788151, DISTRICT-HAILAKANDI, ASSAM, PH :788151-

HO.IAI

55.## PRAMAN MOTORS (5730), WARD NO. 12, HOLDING NO. 14, COLLEGE ROAD, HOJAI, ASSAM-782435, PH -782435-9954369700

JONAI

56.## BOROOAH MOTORS (4545), NH-515, MURKONG SLEEK, DIST. DHEMAJI, JONAI-787060, ASSAM, PH :787060-9864590237.

KARIMGANJ

57.## S D AUTOMOBILE (4931), SILCHAR ROAD, KARIMGANJ - 788710, , PH :788710-

LUMDING

58.## BEDI MOTORS (5827), MAIN ROAD, NORTH LUMDING, LUMDING-782447, DISTRICT - NAGAON, (ASSAM), PH :782447-9957333991.

MANGALDAI

9.## PRIYAM AUTOMOBILES (2424), NH 52 COLLEGE ROAD, MANGALDOI, ASSAM, PIN-784 125, PH :784125-.

MARGHERITA

VIRDI MOTOR WORKS (955), MISSION ROAD, P.O. MARGHERITA-786 181, DIST. TINSUKIA, (ASSAM), PH:786181-8011164932.

MARIANI

61.## VASKAR AUTOMOBILES (5237), NEAR NST TINALI. P.O. :MARIANI, DISTRICT - JORHAT, ASSAM, PH :785634-9508486813.

MORANHAT

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

62.* CHINAKI SERVICE STATION (2973), (MARUTI AUTHORISED SERVICE STATION), NATUN NAGAR A.T. ROAD, MORANHAT-785 670, (ASSAM),

PH:785670-9401512821.

MORIGAON

63.## PRAGATI MOTORS (5273), MORIGAON TOWN, WARD NO.1, BHATBOR-, DOLON PATH, P.O.: MORIGAON, DISTRICT -MORIGAON, ASSAM, PH. 782105-9435064356.

NAGAON

64.## DAS MARUTI MOTOR WORKS (3734), NAGAON -782001, , , (ASSAM), PH :782002-9435360246

NALBARI

65.## B.R.K. AUTOMOBILES ENGINEERING WORKS (2838), HAJO ROAD, NALBARI-781 335, (ASSAM), PH :781335-9954895264.

NAMRUP

66.## RAJ ENTERPRISES (3849), NAMRUP INDUSTRIAL ENTERPRISES, SONARI TINIALI, PARBATPUR, NAMRUP-786 623 (ASSAM), PH: 786622-9854135646

NORTH LAKHIMPUR

17.** GREEN LAND MARUTI WORKS (2974), NEAR GURUDWARA, NH 52, NORTH LAKHIMPUR-787 001, (ASSAM), PH :787031-9435086197.

PATHSALA

USHA AUTOMOBILES (4240), N.H 31,PATHSALA-781325, DISTRICT-BARPETA, ASSAM, PH:781325-9401310431.

SII APATHAR

9.## BORLUIT MOTOR (5743), KHANAMUKH, P.O/P.S. SILAPATHAR, DIST-DHEMAJI, ASSAM PIN-787059

PH:787059-8638981308.

SILCHAR

0.** CARDROME (1559), 2ND LINK ROAD JUNCTION, SONAI ROAD (M H C ROAD), SILCHAR-788 006, (ASSAM), PH :788006-9435071212.

TEZPUR

I.## POOJA MOTOR WORKS (4373), N.T. ROAD, MURATETLI, TEZPUR-784001, ASSAM, PH:784001-9957907256.

TINSUKIA

72.* AUTO MAKERS (934), MAKUM ROAD, UDYOG NAGAR, TINSUKIA -786 146 (ASSAM), PH :786146-9435035341.

TITABAR

73.## SHANKAR AUTO WORKS (5174), C/O:SHIV SHAKTI AUTO WORKS.BALAJI, MARKET TITABAR CHARIALI TITABAR, DISTRICT -JORHAT, ASSAM, PH:785630-

UDALGURI

RENU MOTORS (4543), WARD NO. 2, U.T. ROAD, UDALGURI TOWN, UDALGURI-784509, ASSAM, PH :784509-9854348875.

BIHAR

ARRAH

.## ANJALI ENTERPRISES (5533), ARRAH -PATNA MAIN BYPASS ROAD, NH-30, AHIRPURWA, OPPOSITE SURYA MANDIR, ARRAH, BIHAR -802232, PH :802232-9304910843

AURANGABAD (BIHAR)

76.## K R N AUTOMOBILE (2242), NEW G.T. ROAD, (NH-2), AURANGABAD-824 101, (BIHAR), PH :824101-9304930657.

BEGUSARAI

77.## K.B. MOTORS (4768), NH-31, SINGHAUL, POKHAR, BEGUSARAI-851134, BIHAR, PH :851134-.

78.* NATIONAL AUTO WORKS (1536), INDUSTRIAL AREA, BARAUNI, BEGUSARAI-851 122, PH:851122-9973381733.

BHAGALPUR

RUPRA AUTOMOBILE (1577), EAST OF AIRPORT, BHAGALPUR-813 210, P.O. BAHADURPUR, (BIHAR), PH 813210-9334385521

BIHAR SHARIF

.## SARVODAY ENGG. & AUTO SERVICE (1549), INDUSTRIAL ESTATE, RAMCHANDRAPUR, BIHARSHARIF,NALANDA, BIHAR, PH:803101-9334672919.

CHAPRA

81.## PRASAD AUTOMOBILES (1974), BHAGWAN BAZAR, CHAPRA-841 301, (BIHAR), PH :841301-.

DARBHANGA

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

Mass Network (AS ON 31.10.2023)

82.* SINGH MARUTI CARE (2277). RAJKUMARGANJ, P.O. LALBAGH, DARBHANGA-846 004 (BIHAR) PH:846004-9431293796.

GAYA

AUTO CARE (3027), DURGA BARI, HARIDAS CHATTERJEE LANE, NEAR SAINT PAUL SCHOOL, GAYA-823 001 (BIHAR). PH:823001-9102060955

HA.IIPUR

ALEA ALITO (5454) PASWAN CHOWK NH-13 HAJIPUR DISTRICT - VAISHALL BIHAR - 844101. PH :844101-

HI-TECH AUTOMOBILES (3123), GANDHI SETU PATH, N.H.-19, HAJIPUR, VAISHALI (BIHAR). PH:844101-9835044502.

KAHALGAON

MAHA GAURI ENTERPRISES (5822), NTPC ROAD GANGANAGAR .CHOWRATHIYASTHAN. KAHAI GAON-813203. DISTRICT-BHAGAI PUR. BIHAR. PH:813203-9431463558

KHAGARIA

HIGHWAY SERVICE STATION (2374), NH-31. P.O. KOSHI COLLEGE, KHAGARIA-851 204 (BIHAR). PH:851204-9430067775

MADHEPURA

KRISHNA AUTOMOBILES (2639). SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR), PH:852213-9430583338

MADHUBANI

VIDYAPATI AUTOMOBILE (4234), BHAUARA, GANGASAGAR, MADHUBANI, BIHAR -847212 PH:847212-

MOTIHARI

PUJA AUTOMOBILES (3174), NEAR LAL PD. PETROL PUMP, NH-28 CHHATAUNI, MOTIHARI, EAST CHAMPARAN (BIHAR). PH :-.

MUNGER

SUNBEAM ENGINEERING WORKS (1533), 150 BETWAN BAZAR, NEAR KHANKAH, P.O.& DISTT, MUNGER, BIHAR - 811201. PH:811201-9931962944

MUZAFFARPUR

92 ** DYNAMIC MARUTI SERVICE CENTRE (1163). HARI SHARAN MARG, AMGOLA, POST OFF RAMNA MUZAFFARPUR-842 002 PH:842002-

02 ## PERFECT MOTORS (3465), NEAR CHANDNI CHAUK JHITKAIYA POST: MIT PS: BRAHAMPURA MUZAFFARPUR-842 003 (RIHAR) PH:842003-9835007407

ΡΔΤΝΔ

CAR SCANNER (1552), OPP, BATA, KANKAR BAGH COLONY, PATNA-800 020. PH:800020-9431016342.

GOOD WRENCH SERVICES (3364), NH 30. BETWEEN BHARAT PETROI FUM & HP PETROL PUMPS. . 1 KM WEST OF "0" MILE. ASHOCHAK, NANDLAL CHAPRA, PATNA -

PH:800007-7277772777.

MARUTI MAINTAINER (4842), PLOT NO 73. MAIN ROAD, KANKARBAGH, NEAR RAJENDRA NAGAR OVERBRIDGE, PATNA. BIHAR-800020. PH:800020-7903741541.

MOHINI AUTOMOBILES (1049), BEHIND RESERVE BANK OF INDIA, EXHIBITION ROAD PATNA-800 001. PH:800001-.

TIRUPATI AUTO (1956), ASHIANA MORE, BAILEY ROAD, OPPOSITE UNION BANK. RAJABAZAR, PATNA-14. PH -800014-

RANJAN MOTORS (3665), SUDARSHAN PATH, NEAR PATNA SAHIB STATION. PATNA CITY -800 009. PH:800009-9334084343.

100.** CITY AUTO SERVICE (1250), NEAR ALPANA MARKET, PATLIPUTRA COLONY. PATNA-800013 PH:800013-9334117070.

PURNEA

101 ## AUTO INDIA (3026), SRI DHAM MANDIR. PURNEA CITY, PURNEA 854302. PH:854301-9470204501.

SAMASTIPUR

102.## MARUTI CARE (1526), TAJPUR ROAD. SAMASTIPUR -848 101, (BIHAR). PH:848101-.

SASARAM

103.## TRIPTY CAR SERVICE CENTRE (5535). NEAR RELIANCE PETROL PUMP, G.T. ROAD.NH-2.SASARAM-821115. DISTRICT-SASARAM, BIHAR, PH:821115-9934792421

SITAMARHI

SITAMARHI AUTO CARE (6050), INDUSTRIAL AREA RAJOPATTI, PO SITAMARHI-843302. DISTRICT-SITAMARHI . BIHAR. PH:843302-9430012437.

CHANDIGARH

CHANDIGARH

105.** CAR CLINIC (179), PLOT NO-81, INDUSTRIAL AREA, PHASE-2, CHANDIGARH. PH:160002-9417216782.

106.## HI-TEK MOTORZ (4743), PLOT NO. 658, INDUSTRIAL AREA, PHASE-1, CHANDIGARH, PH:160002-9872567868.

107 ## RATTAN MOTORS (1155). SECTOR 23-C. CHANDIGARH-160 023. . PH -160023-9814008335

CHHATTISGARH

AMBIKAPUR

MARUTI AUTO CARE (4839), KHARSIA NAKA AMBIKAPUR -497001, DISTRICT-SURGUJA. CHATTISGARH. PH:497001-9425256087

BILASPUR (CHHATTISGARH)

109 ## RAINEY'S AUTO CARE (4770), NEAR GREEN PARK COLONY, JARHABHATA, BILASPUR. CHATTISGARH- 495001. PH:495001-9229884951.

JAGDALPUR

110.## VISHWAKARMA AUTOMOBILES (4467). RAJMAHAL PARISHAR, CHAMBER OF COMMERCE ROAD, JAGDAI PUR. CHATTISGARH- 494001. PH:494001-9753300033.

JAMNIPALI

111.## AUTO CARE (3823), 203, J P COMPLEX SADA COLONY, JAMNIPALI-495 450, TEH. KATHGHORA DIST. KORBA (CHATTISGARH), PH:495450-7587399102.

KORBA

112 ## AUTO SELF SERVICE (8940), RAII WAY STATION CANAL ROAD, NEAR SUNALIYA RAILWAY CROSSING, , MURARKA GALI, KORBA, CHATTISGARH -495678, PH:495678-9229495000.

MANENDRAGARH

113.## SHARMA AUTO CENTRE (5354), MAIN ROAD - MANENDRAGARH, DISTRICT - KOREA , PIN - 497442, CHHATISGARH, PH:497442-7771011802.

RAIPUR

114.## SHIVAM CAR SERVICES (4774), BILASPUR ROAD, KHAMTARAI, RAIPUR-492006. CHATTISGARH PH:492006-9039090522.

RAJINANDGAON

115 ## SAI MOTORS (3672), OPP DENTAL COLLEGE, SUNDARA, DURG NAGPUR HIGHWAY (NH-8), RAJNANDGAON - 491 441. PH:491441-9893404117

A AND NAGAR HAVELI AND DAMAN AN DAMAN

116.## CAR ZONE (4358), SURVEY NO. 70/3. VARKUND, OPP VEERA DA DHABA, VAPI DAMAN ROAD, DAMAN-396210. PH:396210-9824184449.

117.## TOP GEAR (5469), DAMAN-KUNTA ROAD KUNTA DAMAN-396210 DISTRICT -UNION TERRITORY, GUJARAT. PH:396210-9825631264.

DELHI

DEI HI

AAPKA KARKHANA (MOTORS) PVT. I TD. (869), 62/I POSANGIPUR MAIN MARKET, A-3 BLOCK JANAKPURI, NEW DELHI-58. PH:110058-9811034869

119.## ANAND MOTORS (4471), B-27, G.T. KARNAL ROAD, INDUSTRIAL AREA, NEW DEI HI-110033 PH:110033-9582379699.

A-ONE AUTOMOBILES (3362), 487/35 NATIONAL MARKET PEFRAGARHI DELHI-110 087.

PH:110087-9810257472. 121.## ASHA AUTOMOBILES (850), A-2 CHOTTEY LAL PARK, NAJAFGARH ROAD, OPP.KIRTI NGR.P.O. NEW DELHI-15. PH:110015-9818467898

122.## AUTO ENGRS.SERVICE STN. (8023). OPP.MODEL TOWN, DERAWAL NAGAR. DELHI-9

PH:110009-9811137929 AUTO POINT SERVICE (1267), 70B RATTAN PARK OPP RAMESH NAGAR NEW DELHI-110 015, PH:110015-9958062220.

124.## AUTOTECH ENGINEERS (4551), PLOT NO. 20-24 MATIYALA VILLAGE, SECTOR-3. NEAR DPS DWARKA, NEW DELHI-110075. PH:110075-9811608008.

BASANT MOTORS (8003), 78 TOLSTOY LANE, BEHIND SCINDIA HOUSE, NEW DELHI-110 001. PH:110001-9811522266

** A-Category Mass: Free & paid Service, Major repairs & Accidental repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

126.##	BHAGIRATHI MOTORS (4737), PLOT NO.	139.##	NORTHERN SERVICE STATION (337), SARAI	152.## YASHWANT PLACE SER.STN. (8022),		MAPUSA	
	153/543, POOTH KHURD, DELHI-110039,		BASTI, ROAD NO.40, OPP. SHASTRI NAGAR,		AFRICA AVENUE, (OPP.CHANAKYA	165 ##	SARDESAI AUTOMOBILES (2176), 194,
	PH:110039-9810804556.		DELHI-35,		CINEMA), NEW DELHI-21,	100.##	GAUNSAWADA, , NEAR MILAGRES
127.##	BHASIN SERVICE STATION (830),		PH:110035-9213710643.		PH:110021-9868255788.		CHURCH, MAPUSA, GOA-403 507.
	DR.K.S.KRISHNAN ROAD, NEAR PUSA	140.**	P R G MOTORS (365), A-99.103CH.TEKCHAND MARKET, GANESH	153.*	CMP AUTOMOBILES (8073), C-18 SHASHI GARDEN, OPP, MAYUR VIHAR, DELHI-110		PH :403507-9764448741.
	GATE, NEW DELHI-110 012., PH:110012-9971977992.		NAGAR - TILAK NAGAR, DELHI-110 018.		092.	POND	
128.**	BRIGHT MOTORS (P) LTD. (885), C-263		DELHI		PH :110092-9818278323.		
120.	PEERAGARHI, OUTER RING ROAD, DELHI -		PH :110018-9711196811.	154.##	KITCHNER ROAD SERVICE STATION (864),	166.*	DHAVLIKAR AUTOMOBILES (2041), NO.5 TIP
	110 087.	141.##	QUTAB SERVICE STATION (8078),	104.111	ROAD NO.41, SAHEED LALA JAGAT		TOP MANSION IV, INDIRA NAGAR, DHAVALI,
	PH :110087-9810203018.		MEHRAULI ROAD, NEW DELHI-110 017,		NARAYAN MARG, NEAR T.V. TOWER		PONDA, GOA-403 401, PH :403401-9890669879.
129.*	DRIVE WELL SERVICE STN. (866),		PH :110017-9811021862.		PITAMPURA, DELHI-110 034,		
	1/486,G.C.S. COMPLEX,MAIN G.T. ROAD ,	142.**	RAJINDRA SERVICES P.LTD. (826), B-55		PH:110034-9211728002.	VERNA	A
	DILSHAD GARDEN, NEW DELHI-110095 ,		G.T.KARNAL ROAD, INDUSTRIAL AREA,	155.**	SUBHYATRA AUTOMOBILES (5045), PLOT	167.*	LUBRICARE SERVICES (261), 7-D
	DELHI ,		DELHI-110 033.,		NO 31, N BLOCK SECTOR - 3, BAWANA		GOULLOY, NH.17 NUVEM, SALCETE,
	PH:110095-9811020603.		PH:110033-9899580820.		INDUSTRIAL AREA BAWANA,		GOA-403 601,
130.##	ENGINEERS SERVICE STATION (834), SHRI	143.##	ROHAN SERVICES (5444), PLOT		PH:110039-9810668715.		PH :403601-9822124376.
	AUROBINDO MARG, (SAFDARJANG		NO:125.VILLAGE POCHANPUR, SECTOR - 23	156.##	GUPTA SERVICE STATION (872), MOTI		GUJARAT
	AIRPORT), NEW DELHI-110 003,		DWARKA, DISTRICT - DELHI (WEST), DELHI,		BAGH SOUGH, NEW DELHI-110021, ,	AUME	DABAD
	PH:110003-9654262692.		PH:110075-9911180827.		PH :110021-9810118027.		
131.##	EXCEL AUTOMOBILES (3342), PLOT NO. 78,	144.*	SATYA SERVICE STATION PVT. LTD. (3625),	157.##	SHARMA AUTOMOBILES (1939), 11/78	168.*	AUTOWAY (125), MANGALYA COMPLEX,
	BAGDOLA VILLAGE, SECTOR 8, DWARKA, NEW DELHI-110 077,		L-BLOCK HARI NAGAR, JAIL ROAD, NEW DELHI-64.		VILLAGE MOTI BAGH, NEAR NANAKPURA GURDWARA, RING ROAD, NEW DELHI-110		NEAR ANJALI CINEMA CROSS ROAD,
	PH:110077-7011765194.		PH :110064-9873461414.		021,		BATTHA, AHMEDABAD,
132.*	EXCLUSIVE AUTOMOBILES PVT. LTD.	145.**	SEVEN HILLS AUTOMOBILES PVT LTD.		PH :110021-9911699999.	169.##	PH :380007-9825016888. DAHISON MOTORS (143), NEAR MANAV
102.	(3546), 98 MANGOLPUR KALAN, SECTOR-2	140.	(848), D-20/1 OKHLA INDUSTRIAL AREA,	158.*	STAR AUTOMOBILES (2574), MAIN	109.##	MANDIR, DRIVE IN ROAD, AHMEDABAD-380
	NEAR JAIPUR GOLDEN HOSPITAL, ROHINI,		PHASE II. NEW DELHI-110 020	100.	SAFIABAD ROAD, NARELA, DELHI-110 040,		052.
	DELHI-110 085.		PH:110020-9811037954.		PH:110040-9266661213.		PH :380052-9898096242.
	PH:110085-9910782127.	146.**	SHALIMAR AUTOMOBILES PVT. LTD (871),	159.**	MULTAN AUTOMOBILE ENGINEERS (853),	170.##	MEGHDOOT MOTORS (3437), MASONIC
133.##	GLOBE SERVICE STATION (8961), A-17, B1,		C-91/9 WAZIRPUR INDUSTRIAL AREA,		B-7/1 OKHLA INDUSTRIAL AREA, PHASE II,		LODGE COMPOUND, SHAHIBAUG ROAD,
	EXTENSION MCIE, MATHURA ROAD,		ASHOK VIHAR CROSSING, DELHI-110052,		NEW DELHI-110 020.,		AHMEDABAD-4,
	BADARPUR, DELHI-110 044,		DELHI,		PH:110020-9810186699.		PH:380004-9825972345.
	PH:110044-9540944009.		PH :110052-9811171489.	160.##	BAJAJ MOTORS (4940), T-5/242,	171.*	POKAR AUTO REPAIRERS (2479), NEAR
134.##	HUNDRED PERCENT (8967), LSC,	147.##	SHIKHAR AUTOMOBILES (5546),		MANGOLPURI INDUSTRIAL AREA, PHASE-1,		UNION CO. BANK, SAIJPUR BOGHA,
	SECTOR-9, OPP. NHAI, DWARKA, NEW		A-2/1CHOTTEY LAL PARK, SHIVAJI MARG,		NEW DELHI-110083,		NARODA ROAD, AHMEDABAD-382 345,
	DELHI-110075, PH:110075-9910586999.		OPP KIRTI NAGAR,METRO PILLAR NO.341, DISTRICT -WEST DELHI. NEW	161 44	PH:110083-9811418505. SHRI BALAJI CAR SCAN (2677), 43/12 OPP,		PH :382345-9428608515.
135.##	IMAGE (2561), IOC PUMP, NEAR SAMACHAR		DELHI-110015.	101.##	NEW ANAJ MANDI, NAJAFGARH, NEW	172.*	RAJAN MOTORS (8968), 60, MADHUVAN
133.##	APT. OPP. KIRTI APT., MAYUR VIHAR		PH :110015-9810047047.		DELHI-110 043.		PARK SOCIETY, B/H. TRAFFIC CHOWKDI, GHODASAR CHAR RASTA, GHODASAR,
	PHASE-I EXT., DELHI-110 091,	148.##	SINTEX SERVICE STATION (777),		PH :110043-9811891740.		AHMEDABAD - 380050.
	PH:110091-9312082213.		883.RITHALA INDUSTRIAL AREA., FIRNI		GOA		PH :380008-9825972345.
136.**	R S AUTOMOBILES (273), 111/9		NALA ROAD,, DELHI - 85, DELHI,			173.**	SPEED AUTO CARE PVT. LTD (5524), GIDC
	KISHANGARH, OPP. CNG PUMP NEAR SPYM		PH:110085-9868030802.	BICHO	LIM		PLOT NO 12, ODHAV INDUSTRIAL ESTATE,
	INSTITUTE, ARUNA ASAF ALI ROAD,	149.##	SRI BALAJI AUTOMOBILE (8038), KHASRA	162.##	SHREE GURUKRUPA AUTOWORLD (1249),		NEAR BRTS GRID STATION, NEXT
	VASANT KUNJ, NEW DELHI – 110070,		NO.33, 13/2-12 MAIN BAWANA ROAD,		PLOT NO.76, , BICHOLIM, GOA-403 529,		TORRENT POWER SUB STATION, ODHAV,
	PH:110070-9540944009.		SAMEYPUR (NEAR DELHI COLLEGE OF		PH:403529-9422057272.		AHMEDABAD,
137.**	KUMAR AUTOMOBILES (855), B-281 OKHLA		ENGG.), DELHI,	CURC	HOREM		PH :380023-9979992779.
	INDUSTRIAL AREA, PHASE-I, NEW		PH:110085-9811039601.	163.##	VIPUL AUTOMOBILES (5376), PLOT	AMRE	LI
	DELHI-110 020,	150.##	SRI SAI AUTO ENGINEERS (8074), 487/59	163.##	NO.7.8.9.KAKODA INSUSTRIAL ESTATE.	174.*	CAR CARE CENTRE (2734), PATEL GARAGE,
138.**	PH:110020-9810001625. NAVEEN AUTOMOBILES (4934), 37,		PEERA GARHI, INDUSTRIAL AREA, DELHI, PH:110087-9650531612.		KAKODA CURCHOREM, DISTRICT - SOUTH	117.	CHAKRAGADH ROAD, AMRELI-365 601,
130.	PATPARGANJ INDUSTRIAL AREA, NEW	151.##	WIG AUTOMOBILES (8012), D-3, S.M.A		GOA. GOA.		(GUJARAT),
	DELHI-110092.	101.##	CO-OP. INDL. ESTATE, (OPP. JAHANGIR		PH :403706-9422018746.		PH :365601-9825422922.
	PH:110092-9911278537.		PURI CHOWK), G.T. KARNAL ROAD,	KUND		175.*	KHODIAR MOTORS (3029), GAVADKA ROAD,
			DELHI-110 033,				AMRELI-365 601, (GUJARAT),
			PH :110033-9811297607.	164.*	VIKAS ENGINEERING WORKS (4953),		PH :365601-9825672657.
					BHOMA, KUNDAIM, GOA-403107,	ANANI	D

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

ANAND

PH:403107-9823780335.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

176.* PATEL TRACTOR COMPANY (2221), (SERVICE DIVISION), BEHIND SUNIL CHAMBERS, STATION ROAD, ANAND-388 001,

PH :388001-9925534494.

77.## SHAKTI MOTORS (2226), OPP. J.K. PARK, NATIONAL HIGHWAY NO.8, P.O. VAGHASHI-388 320, TA: ANAND DISTT.

PH:388320-9825792999.

ANJAR

178.# CAR AGE (5542), PLOT NO.11, MAHATMA NAGAR-1,ANJAR- , GADHPADAR ROAD,NR.MAHAKALESHWAR, MAHADEV MANDIR,ANJAR , GUJARAT, PH :370110-9427216886.

BARDOLI

179.** POOJA MOTORS (361), NEAR GIDC, SURAT ROAD, BARDOLI-394 601, (GUJARAT), PH :394601-9825762621.

BHARUCH

80.* NEW MARUTI MOTORS (5156), 9/16 AKASH GANGA.B/H CNG PUMP, OLD NH -8.BHOLAV , DISTRICT - BHARUCH, GUJARAT, PH :392001-9898611424.

BHAVNAGAR

181.## VIKRAM MOTOR GARAGE (127), TAKHTESHWAR PLOT, NEAR CHANDRA BHUVAN, BHAVNAGAR - 364 002., PH :364002-9427145452

BHUJ

182.* ASHA MOTORS (3629), NEAR JAY NAGAR BUS STOP, MIRZAPUR HIGHWAY, BHUJ KUTCH, GUJARAT - 370001., PH :370001-9825225088.

BILIMORA

183.## PATEL AUTOMOBILES (4030), DANDEKAR COMPOUND, GANDEVI ROAD, BILIMORA, PH :396321-9824123875.

BORSAD

184.## SPEED AUTO (8953), I B PETROL PUMP, VASAD-TARAPUR HIGHWAY ROAD, VILLAGE BORSAD, TALUKA BORSAD, DISTRICT ANAND, GUJARAT- 388540, PH :388540-9979992779.

CHAND KHEDA

185.* BALVINDER AUTOMOBILES (8948), ZUNDAL CIRCLE, BEHINDDWARIKESH PARTY PLOT.NEAR SHAGUN 108, CHANDKHERA, VILLAGEZUNDAL, DISTRICTGANDHINAGAR, GUJARAT -382421,

PH:382424-9924016000.

CHIKHLI (GUJ.)

186.## INAL MOTORS (3929), POST MAJIGAM, CHIKLI BILIMORA ROAD, DISTT NAVSARI, PH :396521-9099033773.

187.## SHREE AMBICA MOTORS (2663), KUNDI FATAK, NEAR ADARSH NURSERY, N.H.8, CHIKHLI DISTT. VALSAD (GUJARAT)-396 001, PH: 396001-9825131520.

DAHOD

188.* CAR SEVA (2438), SAINT STEPHEN SCHOOL ROAD, GODHRA ROAD., DAHOD. PIN-389151, PH :389151-9426469122.

DEESA

189.## VAKHARIA MOTORS (3970), G L PADIAR COMPLEX, PALANPUR PATHAN HIGHWAY, OPP. RAJMANDIR TALKIES, DEESA, PH. :385535-9377728841

DHARI

190.## GURUKRUPA MOTORS (5876), NR.
NARMADESHWAR MAHADEV TEMPLE,
DHARI,AMRELI ROAD,DHARI-365640,
DISTRICT-AMRELI, GUJARAT,
PH :365640-9825374658

DHORAJI

191.## UNIVERSE AUTO (5837), SARDAR CHOWK,DHORAJI-360410, DISTRICT-RAJKOT, GUJARAT, PH :360410-9727714643.

GANDHI NAGAR

92.* LABH MOTORS (4527), PLOT NO - B - 206+207 ,, GIDC, SECTOR -25,, GANDHINAGAR GUJARAT, PH :382024-9825020030.

193.* RIDDHI MARUTI(A DIVISION OF SHREE ARBODA PVT. LTD (2151), E-19/10 G.I.D.C. SECTOR 26, NEAR K-7, GANDHINAGAR-382 044,

PH :382044-9825041331.

194.## SHITAL MOTORS P.LTD. (134), 304 G.I.D.C.,
SECTOR-28, GANDHINAGAR - 382 028
(GUJARAT).,
PH :382028-9924127065.

HALOL

195.## MAA MOTORS (4767), GODHRA ROAD, NEAR TELEPHONE EXCHANGE, HALOL GUJARAT, PH :389350-9898610212.

HIMMATNAGAR

196.## MEHTA SERVICE STATION (135), NEAR SHANTI GARDEN, RESTAURANT, DIWALI BAUG MOTIPURA, N.H.B. HIMMATNAGAR GUJARAT-383 001, PH :383001-9426556664.

IDAR

197.## SUN MOTORS (5175), IDAR-HIMMATNAGAR HIGHWAY ROAD, AT.KRUSHNAGAR.PO NETRAMLI., TA.IDER DISTRICT SABARKANTA, GUJARAT, PH :383430-9228266788

198.## ADINATH AUTOMOBILE & WORKSHOP (3136), NEAR HOTEL GREEN PARK, AMBAJI HIGHWAY ROAD, IDAR-383 430, (GUJARAT), PH :383430-9875052940

JAMKHAMBHALIA

199.## SHRI HARI OM MOTORS (4539), JADESWAR ROAD CHAR RASTA, OPP. KRISHNA WAY BRIDGE, JAM KHAMBHALIA-361305, GUJARAT, PH :361305-9426955344

JAMNAGAR

200.* LANDMARK AUTOMOBILES (1973), PLOT NO-4/2, JAMNAGAR- KALVAD ROAD, MAHAPRABHUJI BETHAK ROAD, OPP SUBHASH BRIDGE, JAMNAGAR-361 006, (GUJARAT), PH: 361006-7600000733.

JETPUR

201.## GIRIRAJ MOTORS (3971), JUNAGADH HIGHWAY, NEAR JALARAM TEMPLE, JETPUR, PH :360370-9727154392.

JUNAGADH

202.## MARUTI MOTORS (266), G.I.D.C. - I, RAJKOT HIGHWAY, DOLATPARA, JUNAGADH(GUJARAT), PH :362001-9099849888.

KALOL

203.## SUNRISE AUTO CENTRE (146), BLOCK SURVEY NO. 1141, OPP JANPATH PETROLEUM, NEAR SINDBAD HOTEL, AHMEDABAD-MEHSANA HIGHWAY, KALOL, DISTRICT – GANDHINAGAR, GUJARAT, PH:382721-9879542207.

KAMREJ

204.* PATEL MOTOR GARAGE (2764), PLOT NO 1,2,3, NAVAGAM,, NR. MANISHA HOTEL, OPP. DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ,, DIST: SURAT-394185, PH:394185-9825127413.

KAPADVANJ

205.## DISHA MOTORS (5960),
MAHAMADPURA,KAPADVANJ-NADIAD
ROAD, KAPADVANJ-387620,
DISTRICT-KHEDA, GUJARAT.

PH:387620-9825641244.

KESHOD

206.## PRASAD MOTORS (3969), VERAVAL HIGHWAY, KESHOD, , PH :362220-9825024488

KHEDBRAHMA

207.## MARUTI AUTO CARE (5342), OPP POLICE STATION, AHMEDABAD-AMBAJI STATE HIGHWAY, KHEDBRAHMA, GUJARAT, PH :383255-9427369512.

LIMDI

208.## PARTH AUTOMOBILES (4171),
OPP.SWAMINARAYAN TEMPLE, NH NO-8A,
LIMBDI DIST, SURENDERNAGAR,
PIN-363421,
PH: 363421-9426714510.

LUNAWADA

209.## N.J. MOTORS (4370), MODASSA ROAD, NR. SAIFEE HOSPITAL, LUNAWADA, DIST: PANCHMAHAL (GUJARAT), PH :389230-9924252700.

MEHSANA

210.* SANSKAR MOTORS (5468), PALAVASANA -BECHARAJI ROAD, , NR ONGC FIRE STATION ,MEHSANA-384002 , DISTRICT-MEHSANA, GUJARAT, PH :384002-9825106359.

211.** SHUBH AUTO SERVICES (3367), NEAR AGRO PETROL PUMP, OLD RTO, RAMOSNA JAKAT NAKA, MEHSANA (GUJARAT), PH :384001-9825322460.

MORBI

212.## ARUN MOTORS SERVICE (2071), SANALA BYE PASS, NEAR G.P. GINING MILLS, MORBI -363641, GUJARAT, PH :363641-9825222825.

NADIAD

213.## SHIVAM MOTORS (4430), PLOT NO 35/1, QUALITY SEEDS COMPOUND, NEAR BHUTIA BUNGLOW, DABHAM, NADIAD, DISTRICT KHEDA, GUJARAT- 387320, PH:387320-9825021960.

NAKHATRANA

I.# ASHA MOTORS (4340), NANA ANGLADESH, NAKHATRANA HIGHWAY ROAD, NAKHATRANA, KUTCH, PH :370615-9727499383.

NAVSARI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs
C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

215.## JIGAR MOTORS (133), N.H-8.KABILAPORE, NAVSARI, VALSAD DIST.-396 424 (GUJARAT).,

PH:396424-9879549533.

PAI ANPLIR

216.## PANCHAL AUTO REPAIRING WO (138), HIGHWAY ROAD, NEAR RAILWAY CORSSING, PALANPUR-385001, PH :385001-8758048385

PETLAD

217.## SIDDHI MOTORS (4166), OPP. GEB, NEAR RAILWAY CROSSING, NADIAD-KHAMBHAT HIGHWAY, PETLAD, ANAND, PIN-388450, PH :388450-7359465067.

PULSANA

218.## ZEBA MOTORS (4535), PLOT NO. 5, ZAIBUNISHA MANZIL, ANUKOOL NAGAR, BEHIND SAFED CHAL, UNN SURAT (GUJARAT), PH:394305-9913278658.

RAJKOT

219.** KHODIYAR MOTORS (356), DHEBAR ROAD (SOUTH), ATIKA INDUSTRIAL ESTATE, RAJKOT-360 001, PH :360001-9426202885.

220.* UNIVERSE AUTO (5544), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM, OCTROI POINT,AHMEDABAD HIGHWAY, RAJKOT-380002, DISTIRCT - RAJKOT , GUJARAT,

PH:380002-9879616643. RAJPIPLA

221.## R. N. MOTORS (5255), 22-GIDC NEAR PETROL PUMP , RAJPIPLA, DISTRICT -NARMADA , GUJARAT, PH :393145-9925325300.

SAVARKUNDLA

222.## SHYAM MOTORS (8925), OPP. ESSAR PETROL PUMP, AMRELI ROAD, SAVARKUNDLA-364515, DISTRICT-AMRELI, GUJARAT, PH:364515-9427742134.

SIDDHPUR

223.## GOOD LUCK MOTORS (5341), 2.UMIYA COMPLEX .NEAR GURUKUL , HIGH SCHOOL SIDDHPUR , DISTRICT - PATAN, GUJARAT, PH :384151-9898428989.

SIHOR

224.# MOMAI MOTORS (6032), NR. RAJ MOMAI PETROLIUM, BHAVNAGAR-RAJKOT HIGHWAY,SIHOR-364240, DISTRICT-BHAVNAGAR, GUJARAT, PH:364240-9510201800.

SILVASSA

225.## SHREE KRISHNA MOTORS (5374), PLON NO.43.66 KVA ROAD AMLI, SILVASSA-396230, DISTRICT -(UT), GUJARAT, PH:396230-8155000345.

SURAT

226.## EMPEROR CAR TECH (1748), F.PLOT NO.124
NEAR RELIANCE COMPLEX, BESIDE
SHEETAL MARBLE, SURAT-DUMAS ROAD
PIPLOD, SURAT-395 007,
PH. 395007-9825033396.

J.K.MOTORS (5158), LUHAR MOHALLA POSTT PALGAM, DISTRICT - SURAT, SURAT -394510, GUJARAT, PH :394510-990920902

228.* NILESH MOTORS (5347), AMBER SHOPPING CENTRE.OPP.SADHNA CHAMBERS, VARACHHA ROAD , DISTRICT - SURAT , GUJARAT,

PH :395004-9377762660.
229.** PATEL MOTORS (3060), 64 BAJRANG
NAGAR, NEAR OCTROI CHECK POST, NANA
VARCHA, SURAT-395 006,
PH :395006-990149498

230.* TARUN MOTORS (5254), PLOT NO.A-10/14.ROAD NO.4, MAHATMA GANDHI ROAD.UDYOG NAGAR, UDHNA - SURAT, GUJARAT.

PH .395210-9712976141.

SEIKON MOTORS (3161), PLOT NO.49,50,51
SAI ASHISH INDL. ESTATE, NEAR BAMROLI
BRIDGE, 120 FT. BAMROLI ROAD, SURAT
(GUJARAT),
PH .394210-9426149996.

SURFNDERANAGAR

232.## ADIT MOTORS (1247), PLOT NO 101,4/B,
OPP ANAND BHAWAN, NEAR SHITAL
MOTORS (MAHINDRA DEALERSHIP),
WADHWAN CITY, GUJARAT -363035,
PH -383035,08791142722

TALALA

 RUBY MOTORS (5942), TALALA ROAD, RAMRECHI(GIR), DIST - GIR, SOMNATH -362150, PH :362150-9824061044.

UMBERGAON

234.## KARAN AUTOMOBILES (2571), OPP. DAMRU WADI, UMBERGAON SANJAN ROAD, UMBERGAON DIST. VALSAD, GUJARAT-396 170,

UNJHA

235.## AMBIKA MOTORS (3932), SADGURU COMPLEX, AHMEDABAD PALAM PUR HIGHWAY ROAD, UNJHA, MEHSANA-384170, PH :384170-9824517382.

VADALI

VRAJ MOTORS (4560), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT), PH :383235-9427364109

PH:396170-9824336583.

VADGAM

237.# CHAUDHARY & CHAUDHARY MOTORS (5651), OPP.RELIANCE PETROL PUMP, PALAMPUR ROAD - VADGAM, DISTRICT -BANASKANTHA, GUJARAT, PH: 385410-9664590698

VADODARA

238.** CAR CARE (2229), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016, PH :390016-9825044610

39.* CAR CLINIC (4640), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT), PH :390004-9925003558.

240.## DREAM MACHINES (2933), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA-390 002, PH :390005-7575809940.

241.* GENERAL MOTOR REPAIRING WORKS (2529), NEAR LOK SATTA PRESS, NACARWADA, VADODARA-390 001, PH :390001-9825026106

.42.** HONEST AUTO STRUCTURE WORKS (279), 9, VINODBAUG BEHIND HOTEL SANMAN, JETPUR ROAD, VADODARA, PIN: 390005, PH:390002-9824014048

243.## MAYUR SERVICE STATION (2224), NEAR POLICE STATION, PRATAPNAGAR ROAD, BARODA-390 004, PH :390001-9879453031.

VALIA

244.## HARI OM AUTO CARE (5750), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJRAT, PH :393135-9427336094

VALSAD

245.* HONEST AUTO GARAGE (2220), SUGHAR FALIA, BEHIND MOTA GHANCHIWAD, VALSAD-396 001 (GUJARAT), PH :396001-9426110767.

VANTHLI

.* INFINITY MOTORS (5963), RAVI RATAN' VADLA FATAK , OPP.HP PETROL PUMP POST VADLA, TAL VANTHLI-362205, DISTRICT-JUNAGADH, GUJARAT, PH 362001-9898990120.

VIRAMGAM

247.## KRISHNA MOTOR GARAGE (4038), OUTSIDE BHARWADI GATE, NEAR BHARAT PETROL PUMP, VIRAMGAM, PH :382150-9426415274.

VYARA

48.# PARTH MOTORS (8928), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VYARA, DISTRICT-SURAT, GUJARAT, PH :394650-9898292020.

HARYANA

AMBALA

249.## BASSAN MOTORS (4964), 99 TH MALL, AMBALA CATT - 133001, HARYANA, PH :133001-9466000000.

250.** GURU NANAK MOTORS (2036), POLICE LINES CHOWK, AMBALA CITY, , PH :134003-8708357725.

251.## HIRA MOTORS (2740), 207 MILE STONE, VASANT VIHAR GT ROAD, N.H.-1, AMBALA CITY, PH :134002-9255285212

52.** RAVI MOTORS (1957), 125 STAFF ROAD, HOTEL SAVOY, AMBALA CANTT-126 102, PH :133001-9315110209

BADHARA

253.* S.S MOTORS (5735), NEAR REST HOUSE, BADHARA-123308, DISTRICT-BHIWANI, HARYANA, PH:127308-9255141288.

BAHADURGARH

254.## GL AUTOMOBILES (5263), MAIN ROHTAK ROAD, SANKHOL OPP CH. DEVI LAL PARK, DISTRICT - BAHADURGARH, HARYANA, PH.:124507-9416303473.

BARARA

255.## LUXMI AUTOZONE (5334), VPO BARARA , DISTRICT - AMBALA, HARYANA, PH :133201-8222024046.

BARWALA (HARYANA)

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

[#] D-Category Mass : Free Service & Minor repairs

256.** FAQIR CHAND QUALITY FUELS (5435), KILLA NO 20L H.S. NH-65., CHANDIGARH ROAD -BARWALA, DISTRICT - HISAR, HARYANA, PH :125121-9991000764.

RHIWANI

257.## VEER MOTOR WORKSHOP (8958), 22,23,24 AUTO MARKET, LOHARU ROAD, BHIWANI, HARYANA-127021, PH :127021-9416057857

RHUNA

258.* MITTAL AUTOMOBILES (5748), NEAR BUS STAND, JAKHAL ROAD - BHUNA, PIN-125111, DISTRICT-FATEHABAD, HARYANA, PH :125111-9813207221.

FARIDABAD

259.## BALAJI SERVICE STATION (4956), SECTOR 23-24, MAIN ROAD, NEAR BALAJI DHARM KATA, FARIDABAD-121004, HARYANA, PH:121001-.

260.** INSUH AUTO (377), 13/3 MAIN MATHURA ROAD, NEAR NHPC CHOWK, FARIDABAD, HARYANA - 121003, PH :121003-

261.## KHURANA AUTOMOBILES (2863), 3C/60 B.P. (OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD,

PH :121001262.** PERFECT AUTOZONE (P). LTD. (5667), PLOT
NO 9, ADJACENT TO UNION BANK OF INDIA,
ANKHIR, OPP SEC 21-D, MAIN BADHKAL
ROAD, DISTT FARIDABAD, HARYANA 121001.
PH :121001-

263.## SARASWATI AUTOMOBILES (4465), 44 B.P., NEELAM BATA ROAD, N.I.T, FARIDABAD, PH:121001-.

264.## AUTO ENGINEERS (5350), 131, DLF INDUSTRIAL AREA, PHASE-1, DISTRICT -FARIDABAD , HARYANA., PH :121003.

FARRUKHNAGAR

265.** M R MOTORS (5946), GURGAON-JHAJJAR ROAD,OPP. ANAAZ MANDI, FARRUKHNAGAR-123506, DISTRICT-GURGAON, HARYANA, PH :122506-9810831200.

FATEHABAD (HARYANA)

266.## DHINGRA AUTOMOBILES (1856), G.T. ROAD, FATEHABAD, (HARYANA), PH :125050-9896012906

267.## INDORA MARUTI SERVICE STATION (3064),
OPPOSITE M M COLLEGE, SIRSA ROAD,
FATEHABAD, 125050,
PH :125050-9254080200.

GANAUR

268.## SITA AUTOMOBILES (4260), 347, WARD NO.
10, BST ROAD, GANAUR, DISTT- SONEPAT,
PH:131101-9992022047.

GANGWA

269.** PANCHMUKHI AUTOMOBILES (5968), HISSAR RAJGARH ROAD,, GANGWA-125001, DISTRICT-HISSAR, HARYANA, PH 125001-9728100029

GOHANA

270.## KRISHNA MOTORS (4132), ROHTAK ROAD, GOHANA, , PH :131301-9017062999.

GURGAON

271.## A & A ENTERPRISES (4639), 396, PHASE-IV, UDYOG VIHAR, GURGAON (HARYANA), PH :122015-8851819511.

272.## GANGA MOTORS (363), SHIVPURI, GURGAON-122 001, ,

PH:122001-

273.* KUMAR AUTOMOBILES (4848), KILLA NO 12/2, NEAR BMW TRAINING CENTER, SPR ROAD, GURUGRAM, HARYANA, PH :122002-

274.## MANISH AUTOMOBILES (4777), GHATA ROAD, WAZIRABAD, NEAR SECTOR-56, GURGAON-122001, HARYANA, PH :122001-.

275.** QUTAB AUTOMOBILES (3688), KHEWAT/
KHATA NO 714/909, VILLAGE JHARSA,
UNITECH CYBER PARK ROAD, SECTOR 39,
GURGAON, HARYANA 122001,
PH 1:22001-8811687333

276.## RAJASTHAN AUTO WORKS (4760), LT. ATUL KARATIA MARG, NEAR PETROL PUMP, AKASHI FILLING STATION, AMAN PURA, SECTOR-5 ROAD, GURGAON-122001 (HARYANA),

PH :122001-9910070220.

S G MOTORS (5756), PLOT NO. 494, SECTOR
37., PACE CITY II, VUDYOG VIHAR VIGURGAON, DISTRICT-GURGAON,
HARYANA,

PH:122001-9711770092.

MR MOTORS (8946), VIJAY VIHAR MAIN SILOKHRA ROAD,SEC-30, GURGAON-122002. HARYANA.

PH :122001-9992111244.

SOMESH AUTOMOBILES (455), PLOT NO
249/2/8, BLOCK A, RODA NO A-56, DLF
PHASE 1, GURGAON 122002,
PH :122002-9717070830.

280.## SRI PARKASH AUTOMOBILES (5862), BAJGHERA ROAD,NEAR PARKASH PURI ASHRAM, NEW PALAM VIHAR,GURGAON-122001, DISTRICT-GURGAON. HARYANA.

PH : 122001-281.## TOP GEAR AUTOMOTIVE ENGINEERS (4464), G-34, REZANG LA ROAD, ASHOK VIHAR PHASE 2, GURGAON 122006, PH : 122001-

HANSI

282.** VIKAS AUTOMOBILES (4744), SHANTI NIKETAN, OPP, JIND BYE PASS, G.T. ROAD, HANSI, DISTRICT-HISSAR (HARYANA), PH :125033-9466248037

HISSAR

283.* PALCO MOTOR GARAGE (4739), 96 AUTO MARKET, HISSAR-125001, HARYANA, PH:125001-9729601111.

284.* SAI AUTOMOBILES (5267), TOSHAM ROAD, NEAR AAKASH INSTITUTE, SECTOR-13, HISSAR, HARYANA, PH :125001-7988238034.

285.** SALASAR AUTO (4735), OPP. VIDYUT NAGAR GATE NO. 2, DELHI ROAD, HISSAR-125001, HARYANA, PH. 125001-9355486716

HODAL

286.## VED MOTORS (2247), HIGHWAY ROAD, NEAR RAILWAY STATION CHOWK, HODAL-121 106, (FARIDABAD), PH :121106-7988978936.

INDRI

287.## ASHOKA MOTORS (6041), OPP. PARTAP FILLING STATION,LADWA ROAD,, TEHSIL-INDRI,DISTRICT-KARNAL, HARYANA, PH : 132041-8813000316.

ISMAILABAD

88.* VINAYAK MOTORS (6052), OPP. MAHARAJA PALACE , AMBALA HISSAR ROAD ISMAILABAD-136129 , HARYANA, PH :136129-9034820190.

ISRANA

289.## SHIV DARSHAN AUTOMOBILES (6051), ISRANA PANIPAT ROAD, NR. NC COLLEGE,ISRANA-132103, DISTRICT-PANIPAT, HARYANA, PH: 132107-9911366230.

JHAJJAR

290.## VASUNDHRA MOTORS (1467), REWARI ROAD, JHAJJAR-124 103, (HARYANA), PH :124103-9812012180.

JIND

291.## MOHIT MOTORS (1574), SAFIDON GATE, JIND-126 102, , PH :126102-9355129844.

KAITHAL

292.# HIND AUTOMOBILES (1858), AMBALA ROAD, KAITHAL, ,
PH :136027-7015806781.

KANINA

293.## SHREE KRISHNA MOTORS (5953), BHOOP SINGH MARKET, NEAR PETROL PUMP, MAHINDERGARH ROAD, KANINA-123027, DISTRICT-MAHINDERGARRI, HARYANA, PH :123027-9467641678.

KARNAL

294.** RUBY MOTORS (4734), 28/3 HSIDC, NEAR NAMASTEY CHOWK INDUSTRIAL AREA, KARNAL-132001, HARYANA, PH :132001-9896345633.

KHARKHODA

PRANAV MOTORS (5771), SAMPLA ROAD,KHARKAUDA-131402, DISTRICT-SONEPAT, HARYANA, PH:131402-9896145161.

KUNDLI

296.## SHIV SHAKTI AUTOMOBILES (4628), SECTOR 53, HSIIDC, JANTI ROAD, NEAR K.H.I COLD STORAGE, KUNDLI, SONEPAT, HARYANA - 131028, PH : 131001-9811047480.

KURUKSHETRA

297.## KARTAR MOTORS (1645), RED ROAD, KURUKSHETRA-132 118, , PH :136118-9896245900.

298.** KARTAR MOTORS (5349), PLOT O 65-66, SECTOR -2, HUDA INDUSTRIAL, AREA KURUKSHETRA, PH :136118-9896245900

299.## SAINI MOTORS (2131), G.T. ROAD, UMRI CHOWK, KURUKSHETRA, (HARYANA), PH :136118-9896183931

LOHARU

300.## BHAWNA MOTORS (6028), BHIWANI ROAD, LOHARU-127201, DISTRICT-BHIWANI HARYANA, PH :127201-8901276555.

MAHENDERGARH

301.## SHREE SHYAM MOTORS (8960), NEAR I.O.C PETROL PUMP, MAHENDERGARH-123029, DISTRICT-MAHENDERGARH, (HARYANA), PH :123028-

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

MANDI ADAMPUR

302.## MITTAL AUTO AGENCIES (2966), 113-15 AUTO MARKET, MANDI ADAMPUR, (HARYANA),

PH:125052-9729173300.

303.## MAITRI SERVICE STATION (2378), N.H.8, DELHI-JAIPUR ROAD, MANESAR (GURGAON), PH :122001-9818001128.

NARNAIII

MANESAR

304.## SHYAM AUTO TRADE (1571), SINGHANA ROAD, NARNAUL-123 001, (HARYANA), PH :123001-

NILOKHERI

305.## SAHIL MOTORS (5049), NEW NEHSIL ROAD.NILOKHERI, DISTRICT KARNAL, NILOKHERI-132117, HARYANA, PH :132117-9812510190.

PAI WAI

306.** D.K. & R.K. MOTORS (1159), NEAR BUS STAND, , NH-2 PALWAL, PALWAL, PH :121102-

307.* SHEELA MOTORS (5141), OPP MUNICIPAL COUNCIL OFFICE, OLD G T ROAD, PALWAL, DISTRICT - FARIDABAD, HARYANA, PH 121102-

PANCHKULA

308.** PANCHKULA AUTO SERVICES (1949), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA-134 109, (HARYANA), PH: 134109-9872441546.

PANIPAT

309.** PREM MOTORS (2266), PLOT NO.134, SECTOR 25 INDUSTRIAL AREA, PANIPAT, PH:132103-9896306380.

PATAUDI

310.** SHUBHAM AUTOMOBILES (4641), REWARI ROAD, PATAUDI, DISTT. GURGAON, PH:122413-.

PEHOWA

311.* AMAR AUTOMOBILES (2270), OPP. DAV COLLEGE, AMBALA ROAD, PEHOWA DISTT. KURUKSHETRA, (HARYANA), PH.:136128-9896002974.

RADAUR

312.## SHRI SHIVAM AUTOMOBILES (5852), S.K.
ROAD,OPP. ESSAR PETROL PUMP,
RADAUR-135133, DISTRICT-YAMUNANAGAR,
HARYANA,
PH-135133-9034384003.

RANIA

313.## SINGLA MOTORS (3779), NEAR BUS STAND, RANIA-125 076, DISTT. SIRSA (HARYANA), PH :125076-9416011238.

RFWARI

314.## GAUTAM MOTORS (1837), NARNAUL ROAD, REWARI -123401 (HARYANA).. ,
PH :123401-9416064894.

315.## PULYANI MOTORS (4663), BEHIND KAMLA PALACE, CIRCULAR ROAD, REWARI-123401, HARYANA,

PH :123401-. 316.* SHIVAM SERVICES (1466), OPPOSITE B.D.O. BLOCK OFFICE, GARHI BOLNI ROAD, REWARI, HARYANA - 123401, PH :123401-.

SADHAURA

317.## SHREE GANESH MOTORS (5959), NEAR INDIAN OIL PETROL PUMP, KALA AMB ROAD, SADHAURA-133204, DISTRICT-YAMUNANAGAR, HARYANA, PH. 133204-9813376260.

SHAHABAD

318.** MAHALAXMI MOTORS (354), LADWA ROAD, SHAHABAD MARKANDA-136 135, (HARYANA), PH :136135-9812036433

SIWANI

319.## GANESH AUTOMOBILES (5931), NEAR RELIANCE PETROL PUMP, HISAR ROAD, SIWANI, DISTRICT-BHIWANI, HARYANA - 127046, PH: 127046-8607113000.

SOHNA

20.** SHRI SHYAM MOTORS (8930), OPP.RAGHUNANDAN PETROL PUMP, NEAR GD GOENKA INTERNATIONAL SCHOOL, SOHNA-122103, HARYANA, PH.:122103-9582350079.

SONIPAT

321.## NEW HIGHWAY MOTORS (8923), MAIN DELHI ROAD, SONEPAT, HARYANA, PH :131001-9416672009.

TAURU

322.## R M MOTORS (5842), WADE NO:4BEHIND WINE SHOP MAIN REWARI SOHNA ROAD, TAURU-122105, DISTRICT-MEWAT, HARYANA, PH:122105-9812378663.

TOHANA

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

323.## DHANDA MOTORS (2271), PLOT NO.4, RATIA ROAD, TOHANA, DISTT. FATEHABAD, PH: 125120-9466615006

TOSHAM

324.## MOHINI AUTOMOBILES (6026), OPP.NEW ANAJ MANDI , NEAR MINI BANK,TOSHAM-127040 , DISTRICT-BHIWANI, HARYANA, PH :127040-

UKLANA

325.* SHREE GANESH MOTORS (5747), PLOT NO#29,UKLANA MANDI, DISTRICT-HISSAR, PIN-125113, HARYANA, PH :125713-8168399836.

YAMUNANAGAR

326.** GOPAL AUTOMOBILE SERVICE STATION (1874), NEAR LAL DAWARA, JAGADHRI ROAD, YAMUNANAGAR-135 001, PH :135001-9996308515.

HIMACHAL PRADESH

ALAMPUR

327.## SUBH AUTOMOBILES (5964), SH-39,ALAMPUR-176110, DISTRICT-KANGRA, HIMACHAL PRADESH, PH :176082-9816675551.

AMB

328.## SHUBHAM MOTORS (5933), NEAR PINDI ASHRAM,HAMIRPUR ROAD, AMB-177203, DISTRICT-UNA, HIMACHAL PRADESH, PH:177203-9418114176.

ANNI

329.## SARAJ AUTO WORLD (6044), VERMA BUILDING,NR. NAGAN HARIPUR , TEHSIL,ANNI-172026 , DISTRICT-KULLU , HIMACHAL PRADESH, PH:172026.

BADDI

D.** LAJ MOTORS (5541), 436.MAUJA SURAJ.MAJRA LABANA, BADDI, DISTRICT -SOLAN, HIMACHAL PRADESH, PH:173205-9816039189.

BANGANA

331.## TRISHLA AUTOMOBILES (5869), VILLAGE BPO & TEHSIL BANGANA, BANGANA-174307, DISTRICT-UNA, HIMACHAL PRADESH, PH :174307-9817645350.

BANOI

332.## BABA SERVICE STATION (4634), VILL BANOI, TEH SHAHPUR P.O., BANOI, DIST KANGRA (HIMACHAL PRADESH), PH :176209-9418051290.

BARMANA

333.## AVER AUTO (5955), VILLAGE LAGHAT,TEHSIL SADAR, PO BARMANA-174013, HIMACHAL PRADESH, PH :174013-9418064130.

BHAMBLA

334.* DHIMAN MOTORS (3837), PLOT NO. 42,, INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT MANDI, PH :175004-9816227437.

BHUNTAR

335.## HANDA MOTORS (4262), HANDA COMPLEX, NEAR AIRPORT, BHUNTAR, KULLU (H.P), PH :175125-9816007003.

BILASPUR (H.P)

336.## BHASKAR AUTO SPARE & SERVICE (1730), 8-B ROURA SECTOR II, (NEAR DURGA MANDIR), BILASPUR-174 001 (H.P.), PH :174001-9816436001.

CHAMBA

337.* AUTOZONE (5247), PATHANKOT RAOD PAREL, SULTANPUR - CHAMBA, DISTRICT - CHAMBA, HIMACHAL PRADESH, PH 176310-9418714848

338.## KAILASH SERVICE STATION (3527), AMRIT NIWAS MOHALLA, BONGUTA, CHAMBA TOWN, DISTT. CHAMBA, PH:176310-9896679445.

DARLAGHAT

339.## CHANDEL SERVICE STATION (5233), DARLAGHAT, DISTRICT-SOLAN, HIMACHAL PRADESH, PH :171102-9816039865.

DEHRA

 WALIA ENTERPRISES (4252), HANUMAN CHOWK, NEAR DEHRA BRIDGE, DEHRA, DISTT. KANGRA, PH :177101-9418152855

DHARAMSHALA

341.## EAGLE MOTOR SERVICE STN. (6426), SHAM NAGAR, DHARAMSALA-176215 (HIMACHAL PRD.), ,

PH :176215-8219915841. 342.## HIM AUTO STATION (8964), VPO DARI, DHARAMSHALA, (H.P.),

PH :176057-9418029655.

3.## SHIV SHAKTI CAR CARE (1277), NEAR RAINBOW SCHOOL, DARI ROAD, DHARAMSHALA-176 057, PH :176057-9318752074

GHUMARWIN

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

344.## BHASKAR AUTO SPARES & SERVICES (5147), VILLAGE KULARU, GHUMARWIN. DISTRICT - BILASPUR, HIMACHAL PRADESH.

PH:174021-9816090504.

GUMMA

345.## CHAUHAN ENTERPRISES (5660), VILLAGE GUMMA.TEHSIL KOTKHAI. GUMMA. DISTRICT - SHIMI A. HIMACHAI, PRADESH. PH:171202-9218690917.

JAWALA JI

346 ## SRI PARBHAT MOTORS (5036), VPO & TEHSIL, JAWALI-(BHANEI), DISTRICT -KANGRA. (HIMACHAL PRADESH). PH:176023-9805511205

JAWALAMUKHI

347 ## LAKSHMI AUTO SPARES & SERVICE CENTRE (4630), NEAR GANJU BAGH, DEHRA ROAD, JWALAMUKHI, TEH, DEHRA, DIST, KANGRA (HIMACHAL PRADESH), PH:176031-9418091048

KARSOG

348.## DEEPAK AUTOMOBILES (4057), MR. DEEPAK SHARMA, C/O SHARMA GENERAL STORE KARSOG MAIN BAZAR DIST MANDI HIMACHAI PRADESH. PH:175011-

ΚΔ7Δ

SPITI MOTORS (6033), VILL. & 3/10 ## PO,KAZA-172114, DISTRICT-LAHAUL & SPITI, HIMACHAL PRADESH. PH:172114-9418758974

KEYLONG

350.## YOLAX MOTORS (3830), KEYLONG, DISTT. LAHAUL & SPITI, PH:175133-7651031580.

KULLU

351 ## PURI BROTHER'S (4242), LO.C. DEALER. DHALPUR, KULU, H.P. PH:175101-9418395358 352.## SURYA MOTORS & SERVICE CENTRE (2943), NH-21, MANALI ROAD, BABELI, DISTT, KULLU-175 138 (H.P.).

PH:175138-9418059956.

KUMARHATTI

SOLAN AUTOMOBILES PVT, LTD, (6420). DAGHOTA(SOLAN), P.O.KUMAR HATTI-173 229 (H.P)... PH:173229-9816030330.

KUMARSAIN

354.## RED LINE (5965), VILL, KEPU, PO KIRTI SAINZ, TEHSIL, KUMARSAIN-172030. DISTRICT-SHIMI A HIMACHAI PRADESH. PH:172030-9816027007.

MANDI

BHAGWATI AUTOMOBILES (269), PLOT NO. 13 INDUSTRIAL AREA PHASE 3 SAULI KHAD MANDI (H.P.). PH:175001-9418461897

MARANDA

356 ## MODERN SERVICE CENTRE (1175) PUSHP COMPLEX MARANDA-176 102 (H.P.) PH:176102-7018243011.

MEHATPUR

357.## BUDHA AUTO HOUSE (6422), MAIN BAZAR, UNA. MEHATPUR-174315 (H.P). PH:174315-9815971708

MUBARAKPUR

358.## SHIV SHAKTI AUTOMOBILES (1732). HOSHIARPUR ROAD, MUBARKPUR, DISTT. UNA (H.P.) PH:177202-9418328361.

NADAUN

CAR CARE ENGINEERS (4423). HOSHIARPUR ROAD, MANPUL, NADAUN DISTT, HAMIRPUR, HP, PH:177033-9857799080.

NAHAN

360 ## AGGARWAI MOTORS (3334). GUNNU GHAT. NEAR TELECOM COLONY, NAHAN-173 001. PH:173001-9418023558.

NALAGARH

361.## KRISHNA MOTOR (5275), PEERTHAN,PO NALAGARH, DISTRICT - SOLAN, HIMACHAL PRADESH PH:174101-9418094064.

PALAMPUR

SANGRAI AUTO SERVICE (6430), OPP. SITLA MATA MANDIR, PALAMPUR-176 061, DISTT. KANGRA (H.P.).

PH:176061-9418085915

363.## SANTOSHI AUTOMOBILES (4776), VILLAGE & P.O. BHAWARNA, TEHSIL, PALAMPUR. DISTRICT- KANGRA (HIMACHAL PRADESH). PH:176083-9418184367.

PAONTA SAHIB

364.## SUMEET MOTORS (1441), SHAMSHERPUR, PAONTA SAHIB-173 025. (H.P.). PH:173025-9418018329.

PAPROLA

365.## ABROL AUTOMOBILES (3470), VPO PAPROLA, TEHSIL BAIJNATH, DISTT KANGRA. HIMACHAL PRADESH -176115, PH:176115-9418066917.

PARWANOO

366 ## DIVYA SALES (6428). DIVYA BHAWAN VILL KAMLI, SECTOR-1, PARWANOO. PH:173220-9816032002.

PATLI KUHAL

JAMDAGNI MOTORS (760), VILLAGE PATLI KUHAL, P.O.KATRAIN, DISTT.KULLU (H.P.). PH:175129-9816040247

RAJGARH (H.P)

368 ## RAJGARH AUTOMOBIJ FS (5458), PO RAJGARH TEH RAJGARH DISTRICT -SIRMOUR HIMACHAL PRADESH PH:173101-9418021344

RAMPUR BUSHAHR

369.** HIGHWAY SERVICE STATION (2649), CHUHA BAG, RAMPUR BUSHAHR, (H.P.) - 172001, PH:172001-9805831627

370.## KRISHNA AUTOMOBILE (4438), VILL CHUHA BAG, RAMPUR BUSHAHR-172001 PH:172001-9418036091

RECONG PEO

371.## KRISH AUTO (4134), RECONG PEO, TEHSIL KAI PA DISTT KINNAUR HIMACHAI PRADESH - 172707. PH:172107-9816579999.

ROHRU

372.## KAMTA SERVICE STATION (2338), ROHRU. DISTT. SHIMLA, (H,P.), PH:171207-9418040106.

SALASHI

373 ## THAKUR AUTOMOBILES (3838), JAI ANDHAR MANALI NATIONAL HIGHWAY (NH70), NEAR DAV SCHOOL, VILLAGE SALASHI, DISTT HAMIRPUR. PH:177001-9418490904.

SARKAGHAT

374.## SHAKUNTLA MOTORS (5755), MANDI ROAD-SARKAGHAT, DISTRICT-MANDI, PIN-175024, HIMACHAL PRADESH. PH:175024-9817818822

SHIMI A

375.** GURRAJ AUTO SERVICE (757), NEAR CPRI ROAD, BEMLOL SHIMLA-171 001. PH:171001-9816233030.

376.** MOTO WORLD (6433), NAVBAHAR, SHIMI A-171 002 PH:171002-9459050769.

SOLAN

377.## SOLAN SERVICE CENTRE (764), BYE PASS. NEAR PWD OFFICE, SQLAN-173 212. PH:173212-9816022640.

SUBATHU

378 ## SHYAM AUTOMOBILES (4558), NEAR SHANTI FILLING STATION, V.P.O RADYANA. SUBATHU. DIST SOLAN (HIMACHAL PRADESH) PH:173206-9418061757.

SUNDERNAGAR

379.** V.M. SERVICE STATION (3777), CHAMUKHA, P O HARABAGH, NH-21, SUNDER NAGAR-174 402 (H.P.) PH:175019-9418064130

THEOG

380 ## JOSHI MOTORS (2778), SHALLI BAZAR. THEOG. DIST. SHIMI A. (H.P.). PH:171201-9459100051.

UNA (H.P)

381.## RUDRA MOTORS (3925), NEAR OLD HOSPITAL CHOWK, NH-22, UNA - 174303 (H.P.) PH:174303-8628803717.

382.## TRINITY AUTO FAST ENGINEERS (1755). JALGRAN TABBA, NANGAL ROAD, UNA, HIMACHAL PRADESH - 174303 PH:174303-9816628020.

JAMMU AND KASHMIR

AWANTIPORA

383 ## KESAR AUTOMOBILES (5938), KHAR MORH NATIONAL HIGHWAY 1A. AWANTIPORA-192122, DISTRICT-PULWAMA. JAMMU & KASHMIR PH:192122-7780873161.

BARAMULA

MARUTI MASTERS (4369), KANISPORA, BARAMUI A KASHMIR PH:193101-9906864748.

CHADOORA

VEHICLE MASTERS (4661), MAIN ROAD. CHADOORA-190001, DIST, BUDGAM, JAMMU & KASHMIR PH:190001-9419441217.

JAMMU

CARE POINT AUTOMOBILES (4652), OPP. BSF CAMPUS ROAD, AKHNOOR ROAD, JAMMU-180002. PH:180002-9419283151

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

387.** CHECK N CARE AUTOMOBILE CENTRE (1773), OPP, GURUDWARA SRI SINGH SABHA, NARWAL BYE PASS ROAD, JAMMU, PH:180001-9419190796.

388.** KWIK FIT (2343), AMBPHALLA, B.C. ROAD, JAMMU-180 001.

PH:180001-9419104400.

389.** MAGNA GARAGES (441), NARWAL CHOWK, TRANSPORT NAGAR, JAMMU-180 006, PH:180006-9796800000.

390.## NATIONAL MOTORS (5074), OPP APNA VIHAR.B.P. PETROL PUMP, NH-1A.KUNJWANI JAMMU, DISTRICT - JAMMU, JAMMU & KASHMIR, PH :180010-9419322222

KATHUA

391.* KATHUA MOTORS (3323), HATLI MORE, KATHUA-184 102, (J&K), PH:184102-9419150694.

KATRA

392.## VIDYA AUTOMOBILES (1165), JAMMU ROAD, KATRA, (J&K), PH:182320-9596676576.

KISHTWAR

393.## MINTOO MOTORS (4133), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K), PH :182204-9622055250.

MATTAN

394.## DANISH AUTOMOBILES (5478), PAHAL GAM ROAD, STATE HIGHWAY - MATTAN, DISTRICT - ANANTNAG, JAMMU & KASHMIR, PH :192125-9419041724.

PHINTER

395.## BADYAL AUTOMOBILES (4149), C/O BADYAL AUTOMOBILE, PHINTER, TEH BILLAWAR, DISTT KATHUA PHINTER (J & K), PH. :184203-9419691916.

PULWAMA

896.** KASHMIR AUTOMOBILES (8969), NEAR FRUIT MANDI, PRICHOO PULWAMA, KASHMIR, PH :192301-9622742291

RAJOURI

397.## MILLENNIUM MOTORADES (2937), ALPHA GATE, T.C.P., RAJOURI-185 132, (J&K), PH:185132-7006122022.

REASI

398.## U LIKE CAR CLINIC (4771), GITA NAGAR, REASI JYOTIPURAM ROAD, REASI, DISTRICT-UDHAMPUR (JAMMU & KASHMIR), PH :182311-7006083550.

SAMBHA

MPUR (JAMMU & KASHMIR), 409.## UUEA 5083550. STEEL

399.## DHANSAR CAR CLINIC (5146), NATIONAL HIGHWAY , SUPWAL SAMBHA , DISTRICT -JAMMU, J&K, PH :184120-9419393949.

SOPORE

400.## HASSAN MOTORS (2434), BPC DEALER, SOPORE, KASHMIR, PH :193201-9906506786.

SRINAGAR

401.* A.B. MOTORS (5072), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH :190009-9419007966.

402.** ADAM'S AUTOAIDES (5766), SIDCO INDUSTRIAL EXTATE, SHALTENG, SRINAGAR-, DISTRICT-SRINAGAR, JAMMU & KASHMIR,

PH :191202-9906580089.

HASEEN MOTORS (5249), BY-PASS BRIDGE
.BAGH MEHTAB, SRINAGAR , JAMMU &
KASHMIR

PH:190019-9419006847.

104.## NEW NATIONAL AUTOMOBILES (5073), RAM BAGH. AIRPORT ROAD. SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH :190009-0419013778

405.* SRINAGAR AUTOMOBILES (4925), M.A. LINK ROAD, NEAR TRANSPORT YARD BRIDGE, CHINARBAGH, SRINAGAR-190001 (JAMMU & KASHMIR), PH :190001-9419001793.

SURNKOTE

406.## A.S. AUTOMOBILES (5976), IQBAL NAGAR, SURANKOTE, DISTRICT-POONCH, JAMMU & KASHMIR PH :185121-9469014765

THANA MANDI

407.## DANISH AUTOMOBILES (6047), R/O W NO.3, HUSPLATE , THANAMANDI-185212 , DISTRICT-RAJOURI , JAMMU & KASHMIR, PH :185212-7006485949.

VIJAYPUR

408.## BANSI LAL MARUTI SERVICE STATION (4748), SWANKHA MORH, NATIONAL HIGHWAY, VIJAYPUR-180001, DISTRICT-SAMBA (JAMMU & KASHMIR), PH: 180001-9419106798.

JHARKHAND

BOKARO

409.## UUEA (4845), S-21 CITY CENTRE, BOKARO STEEL CITY, BOKARO-827004, JHARKHAND, PH :827004-9431127441.

DEOGHAR

10.* GARGEE AUTOMOBILES (2276), OPP. D.C. RESIDENCE, CIRCULAR ROAD, BARMASIA, DEOGHAR-814 112 (JHARKHAND), PH: 814112-9940580983.

DHANBAD

411.## MAZUMDAR CAR SCAN (5135), BHUIFORE, K G ASHRAM ROAD , SARAIDELA , DISTRICT -DHANBAD , JHARKHAND - 828301, PH :828301-9835361472.

412.## PRIYA AUTO (4868), OPPOSITE MINNING SCHOOL, SINDRI ROAD, BHAGA, DHANBAD-828301, JHARKHAND, PH :828301-9431124817.

DUMKA

413.* NATIONAL ENGG. WORKS (5220), AUTOMOBILE ENGINEERS, DUMKA (BIHAR),

PH:814110-9431945507.

GARHWA

414.## VIKAS AUTOMOBILE SERVICES (2647), RAILWAY STATION ROAD, GARHWA-822114, ZARKHAND, PH:822114-9204527287.

HAZARIBAGH

415.## ALOK MOTORS (379), NEAR INDRAPURI CHAWK, HAZARIBAG-825 301, (JHARKHAND), PH :825301-9431140740.

416.## SRI RAM MARUTI SERVICE STATION (3663), DEVI DAYAL LANE, HAZARIBAG-825 301, (JHARKHAND), PH :825301-9431384877.

JAMSHEDPUR

17.** CAR CURE (1261), C/O MODERN AUTO STORES, KALIMATI ROAD, SAKCHI, JAMSHEDPUR-1, PH:831001-9234608016.

418.## MAHESHWARI BROS. (5124), NATIONAL HIGHWAY 33, BALIGUMA MANGO, P.O. -M.G.M. MEDICAL COLLEGE, JAMSHEDPUR-831 018, PH: 831018-9031144444.

KHUNTI

419.## MOD MOBILES (5579), MAIN ROAD,RANCHI ROAD - KHUNTI, DISTRICT - KHUNTI, PIN -835210, JHARKHAND, PH :835210-9304468855.

MAITHON

420.# MAITHON SERVICING CENTRE (5838), MAITHON ROAD, NEAR VMC COLONY, SANJAY CHOWK, PO CHIRKUNDA-MAITHON, DISTRICT-DHANBAD, (JHARKHAND), PH :828203-720942/3707

PAKUR

421.## SPEED WHEEL SERVICE CENTRE-PAKUR (4976), MAIN ROAD, PAKUR - 816107, , PH :816107-9434101917.

RAMGARH

422.## RAHIL MOTORS (5054), C/O NIYAMAT MISTRI, DUSHAD MOHLA, DISTRICT RAMGARH CANTT., PH :829122-9771577422

423.## SAINI MOTORS (5126), NEAR VISWAKARMA MANDIR, MAIN ROAD, RAMGARH CANTT 829 122, DISTT. HAZARIBAG, PH: 829122-9835141302.

RANCHI

424.## BHARAT MOTORS (5970), SHIV JEE CHOWK, HARMU ROAD, RANCHI-834001, DISTRICT-RANCHI, JHARKHAND - 834001, PH: 834001-9608502258.

25.** MARUTI AUTOMOBILES (5127), HOTEL AKASHWANI MANSION, RATU ROAD, RANCHI-834 001.

PH:834001-9835156186

426.## MARUTI CLINIC (2548), LAL KOTHI, OLD HAZARIBAGH ROAD, KANTA TOLI, RANCHI-1, JHARKHAND, PH: 834001-9431109214.

427.## MOTOR KRAFT (4769), H.B. ROAD, DIPA TOLI, RANCHI-834009, JHARKHAND, PH:834009-9431152162.

SIDRAUL

428.## KRITIVASA AUTOMOBILES (8944), RANCHI TATA HIGHWAY, SIDRAUL, P.S NAMKOM, PH :834010-9661144866. KARNATAKA

ATHANI

429.## CHOUGULE MOTORS (3874), MIRAJ ROAD, ATHANI, , , PH :587314-9448436776

BAGALKOT

430.## NARA AUTOMOBILES (4357), TP NO. 158 A/2, WARD NO. 10, SHABADI COMPOUND EXTN, BAGALKOT-587101, PH:587101-9880875595.

BAGEPALLI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

431.## N.N. GARAGE (4263), T.B. CROSS, NH-7, BAGEPALLI, NEAR RTO OFFICE, KOLAR DISTRICT, KARNATAKA, PH :571603-9845125260.

BAII HONGAI

432.# MAHANTH MOTORS (5763), RTO ROAD BAILHONGAL, TALUK-591102, DISTRICT-BELGAUM, KARNATAKA, PH: 591102-9535653166.

BALEHONNUR

433.## SRI ANNAPOORNA MOTORS (5253), MALLE GOWDA COMPLEX.JAYAPURA, ROAD BALEHONNUR ROAD, DISTRICT -CHIKAMAGALUR, KARNATAKA, PH:577204-9448000131.

BANGALORE

434.## ADARSHA AUTOMOBILES (4553), # 974
VARATHUR MAIN ROAD, NEAR
PURVANKARA APARTMENTS, AFTER
MARATHAHALLI, RAILWAY BRIDGE,
BANGALORE-560037,
PH :560037-9880195465.

435.** ANEKAR MOTORS (227), 230 MAGADI ROAD, BANGALORE-560 023, (KARNATAKA)., PH:-9845889911.

436.* ASHWA CARS (2827), #14, 1ST MAIN, 6TH CROSS, SANJEEVNI NAGAR, MOODAPALYA, BANGALORE 560072, PH:560072-9341228231.

437.## BENAKA MOTORS (3237), NO.158/2
VIBHUTIPURA, VIGNAN NAGAR BEHIND
B.E.M.L., NEAR RENUKA SWIMMING POOL,
BANGALORE-560 017,
PH :-9845212416.

438.## CHANDANA MOTORS (4872), NO. 9
UNIVERSITY ROAD, GNANABHARTHI
(POST), MARIYAAPPANA PALYA,
BANGALORE-560056 (KARNATAKA),
PH :560056-9880659864

439.* GIRIMAJI ENTERPRISES (258), NO.2 27TH CROSS, K R ROAD, B S K II STAGE, BANGALORE-560 070, PH:-9844004403.

440.** GREEN CARS PVT. LTD. (2154), NO.12/6 80 FEET ROAD, 6TH BLOCK KORAMANGALA, BANGALORE-560 095, PH :-9845020796.

441.* KESHKAMAL MOTORS (2075), NO. 943 21ST MAIN, BANASHANKARI 2ND STAGE, (NEAR KIMS MEDICAL COLLEGE), BANGALORE-560 070, PH:-9448071067. 442.** LE MANS MOTORS (3460), NEAR AYYAPPA TEMPLE, S.M. ROAD, T. DASARAHALLY, BANGALORE-560 057, PH:-9845145001.

443.* MAYUR ENTERPRISES (249), NEXT TO PIA BHAVAN KIADB MAIN ROAD, PEENYA 1ST STAGE, BANGALORE-58, PH :560058-9845122156.

444.* NEXUS (1153), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE-560 064.

PH:-9844013436.

445.** NEXUS (2768), #275/301, 80 FEET ROAD,
OPP. M.S. RAMAIAH HOSPITAL (BEL ROAD),
RMV 2ND STAGE, BANGALORE-560 094,
PH:-9844013436.

146.** PACE AUTOMOBILES (1057), 6TH MAIN HMT LAYOUT, R.T. NAGAR, BANGALORE-560 032, PH:-9845004710.

447.## PUSHPAK MOTORS (4642), 105/1 2ND MAIN NANJAPPA LAYOUT, VIDYARANYAPURA MAIN ROAD, (OPP KRUTHIKA HOSPITAL), BANGLAORE-560097, PH. 560097-98450877842

148.## RAJ MOTORS (2829), NO.10 MAGADI MAIN ROAD, OPP. UNANI MEDICINE INSTITUTE, KOTIGEPALYA, BANGALORE-560 091, PH :9663556677

149.** SMART CARS (3571), 3RD CROSS NEAR J.B.
TILES, KAGGADASA PURA MAIN ROAD, C.V.
RAMAN NAGAR, BANGALORE-560 093,
PH: -9663324361.

450.## SOLOTECH MOTORS (2760), SURVEY NO.82/2,D'SOUZA NAGAR, HOSAKEREHALLI-BANGALURU, DISTRICT-BANGALURU 560085, KARNATAKA,

PH :560085SOLOTECH SERVICE CENTRE (5245), 50
FEET MAIN ROAD .AVALAHALLI,
MUNESHWARA BLOCK , DISTRICT BANGALORE, KARNATAKA,
PH :5600110-984577634

452.* SPEED MOTORS (1750), 17/1 SUBRAMANYAPURA MAIN ROAD, KADIRENAHALLI, PADMANABHA NAGAR, BANGALORE-560 070, PH: -9845153102.

453.## TEAM TECH AUTOMOBILES (5662), 78/1,SULEKUNDE, NEAR MUTHANALLUR CROSS,, SARJAPURA MAIN ROAD, BANGALORE -562125, PH :562125-9538516111. 454.** TRINITY CAR CARE PVT. LTD (5851), SURVEY NO 52/1,SRI GANDHADAKAVAL VILLAGE, NAGARBHAVI,BANGALORE-560091, DISTRICT-BANGALORE . KARNATAKA.

PH:560091-9880793980.

455.** TRINITY MOTORS (4638), NO. 36, 4TH STAGE, W.C. ROAD,
BASAVESHWARANAGAR.

BASAVESHWARANAGAR, BANGALORE-560079, PH:560079-9845539474.

* U.M. CARS PVT. LTD. (2847), KARNATAKA GOLF ASSOCIATION ROAD, KODIHALLI, OFF. AIR PORT ROAD, BANGALORE-560 008,

PH:-9845165365.

457.* VISWAS CAR SERVICES PVT. LTD. (3238), NO 2, (OUT NO OF SY.NO 100/2) OFF SERVICE ROAD, KALYAN NAGAR ROAD, CHELEKERE, BANASWADI POST BANGALORE - 560043, PH :560043-9591313379.

458.** MARS ENTERPRISES PVT. LTD. (238), NO.41 SANJAY NAGAR MAIN ROAD, ASWATH NAGAR, BANGALORE-560 094, PH:-8861218160.

459.## VAHAN UDYOG (4626), # 45/28 GUBBANNA INDUSTRIAL ESTATE, DR. RAJ KUMAR ROAD, 6TH BLOCK, RAJAJI NAGAR, BANGALORE-560010, PH:560010-8277398624.

BELGAUM

460.* BHARAT AUTO SCAN (350), 892/1 PB ROAD, BELGAUM-590 016, , PH :-9448120495.

BIJAPUR

461.## BAGALI MOTORS (5159), SHIKARKHANA ROAD, BIJAPUR - 586104, DISTRICT -BIJAPUR, KARNATAKA, PH :586104-9448100444.

CHIKBALI APUR

462.## SUKOVE ENTERPRISES (3426), B.B. ROAD N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA), PH:-9880607034.

CHIKMAGALUR

CHIKODI

463.## AAMANTHRANA MOTORS (4346), K.M. ROAD, CHIKMAGALUR, , PH :577101-9945462658.

464.## FORMULA MOTORS (338), K.M. ROAD, CHIKMAGALUR-577 101, , PH :-9448743284. 465.# OM MOTORS (4445), 1751, ANKALI ROAD, NEAR B K COLLEGE, CHIKODI-591201, KARNATAKA, PH :591201-8861555999.

CHINTAMANI

TIPPU AUTO GARAGE (5770), MG ROAD,NEAR BAGEPALLI CROSS, CHINTAMANI-563125, DISTRICT-KALOR, KARNATAKA, PH :563125-9036698340.

CHITRADURGA

467.## PRINCIPAL (255), J.M.I.T, N.H.4, P.B. NO.73, CHITRADURGA-577 502, PH:-9731330300.
468.## SAI AUTOMOBILES (2473), OPP. R.T.O. NH-4, IIND CROSS, JCR EXTN.,

CHITRADURGA-577 501, PH:-9448154945.

COORG

69.* AUTO SERVICE & AGENCIES (2520), GEN.THIMMAIAH ROAD, MADIKERI, KODAGU. (KARNATAKA), PH: 577101-9448504378.

DAVANGERE

470.## HEGDE AUTO CENTRE (172), NO 2007/37, NEAR BIET, SHAMANUR ROAD, DAVANGERE, KARNATAKA-577004, PH :577004-8494853646.

471.## SREE MALLIKARJUNA MOTOR (229), NO 68, RMC ROAD, NEAR KSRTC BUS STAND, DAVANGERE, KARNATAKA - 577003, PH :-9880701015.

DEVANAHALLI

472.# SAHARA AUTOMOBILES (4731), OPP. A . RTO OFFICE, NH-7, B.B. ROAD, DEVANAHALLI-562110, KARNATAKA, PH :562110-9448662364.

DHARWAD

73.** MYSORE GARAGE (2468), BELGAUM ROAD, DHARWAD-580 001, (KARNATAKA), PH :-9844133273.

DODDABALLAPUR

474.# PRESTIGE MOTORS (4875), NEAR RAILWAY STATION KHASBHAG, DODDABALLAPUR, , PH:560026-9900274594.

GADAG

475.## MODERN MOTORS (8939), HUBLI ROAD, GADAG-582 103, (KARNATAKA), PH :-9448746579.

GULBARGA

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

476.## DELUX AUTO SERVICE (5840), SURVEY NO 77/8.VILLAGE KUSNOOR, NEAR -, UNIVERSITY, SEDAM ROAD, GULBARGA-585104, DISTRICT-GULBARGA, (KARNATAKA), PH :585104.492991392

HOSPET

477.## SUPREME AUTO SERVICE (2569), NEAR RTO OFFICE, HARIHAR ROAD, HOSPET-583 203, (KARNATAKA), PH :-9845307361.

HUBLI

478.## SHRI BASAVA MOTORS (4968), OPP SANA COLLEGE,APMC PB ROAD, BHIRIDEVARKOPPA,HUBLI-580025, , PH :580025-9980025644.

KADUR

79.# SRI SAI MARUTHI SERVICE STATION (5725), ULUKINAKALLU, NH 206, KADUR, , PH:583201-9916947196.

KARKALA

480.## KARKALA MOTORS (3549), TELLAR ROAD, KARKALA-574 104, (KARNATAKA), PH :-9845356244

KOLAR

481.## SHIVA SERVICE POINT (2472), M.B. ROAD, KOLAR-563 101, (KARNATAKA), PH:-9448228604.

KOLLEGAL

482.# FIX PLUS AUTO CARE CENTRE (4249), C-8, IND. ESTATE, MAHADESHWARA COLLEGE ROAD, KOLLEGAL-571440, PH:571440-9448807237.

KOPPA

483.## AUTO TECH (3448), MAIN ROAD, UPPERPET, KOPPA-577 126, (CHIKMAGALUR DIST.), PH :-9448156950.

KRISHNA RAJA NAGAR

484.## MOHIT MOTORS (5752), 21/2, CHIRNAHALLI ROAD, VINAYAKA EXTENSION, KRISHNA RAJA NAGAR-571602, DISTRICT-MYSORE, KARNATAKA, PH -571602-0880320051

KUMTA

485.# SOLOTECH (4547), NEAR MARUTI TEMPLE, HANDIGON, KUMTA- 581343, PH :581362-9448149607.

KUNDAPUR

486.* PRAKASH AUTO SERVICE (4522), NH-66, NEAR K.E.B., VODERHOBLI, KUNDAPURA, KARNATAKA - 576201, PH :9341035642.

ΜΔΝΙΡΔΙ

487.# MANIPAL MARUTI AUTO WORKS (4578), MANIPAL ALEVOOR ROAD, NEAR R.C. CHURCH, OPP. SIGMA BAZAR, MANIPAL (UDUPI DIST), PH: 591102-9448108318.

MUDHOL

188.## OM MOTORS (5857), OPP TALUKA OFFICE, LOKAPUR ROAD, MUDHOL-587313, DISTRICT-BAGALKOT, KARNATAKA, PH :587313-9863830660

MUDIGERE

489.## BADRIYA CAR SERVICE POINT (5364), K.M.
ROAD,MUDIGERE, DISTRICTCHIKAMANGALORE, PIN - 577132,
(KARNATAKA),
PH :577132-9448007094

MYSORE

490.** CAR CLINIC (346), 1959/A, BOGADI RING ROAD, NEAR GLN CONVENTION HALL, BOGADI, MYSORE, PH :585106-9342184831

NELAMANGALA

491.## GOUTHAM MOTORS (4332), PATEL CHANNAPPA EXTN, NELAMANGALA-562123, KARNATAKA, PH: 562123-9880251546.

RABAKAVI BANAHATTI

99.# SANGAMA MOTORS (5726), BESIDE CMC,RAMPUR MAIN ROAD, RABAKAVI-587314, DISTRICT-BAGALKOT, KARNATAKA, PH : 587314-9480035617.

RAICHUR

493.## HEERA MOTORS (3730), OPP. MOTI MASJID, SHIVJI OIL MILL COMPOUND, TIPU SULTAN ROAD, RAICHUR-584 101 (KARNATAKA), PH:-9845156322

RAMNAGARAM

194.# MENEZES MOTORS (4969), NO.315/298A.NEAR KANAKAPURACIRCLE., B.M. ROAD ARCHAKRAHALL. BAGALORE., DISTRICT-BANGALORE RURAL, KARNATAKA, PH.584101-9986301054.

RANEBENNUR

495.# KIZEN MOTORS (4568), P.B.ROAD, RANEBENNUR, KARNATAKA - 581115, PH :581115-9900922022

SAGAR (KARNATAKA)

496.## ADITYA AUTOMOBILES (2077), JOG ROAD, SAGAR-577 401, (KARNATAKA), PH:-9448024395.

497.## MALLIKA AUTO CENTRE (2133), MALLIK COMPLEX, B.H. ROAD, SAGAR-577 401, PH:-9448139605.

SHIMOGA

498.## NEPTUNE AUTO WORKS (5271), PLOT -5 AUTO COMPLEX , SAGAR ROAD - SHIMOGA , DISTRICT - SHIMOGA , KARNATAKA, PH :577204-9448319758.

99.* SHIMOGA AUTO ENGINEERING WORKS (8955), GARDEN AREA, 2ND CROSS, SHIMOGA KARNATAKA-577 201, PH:-7899114872.

SIDDAPUR

500.## MARUTI AUTO WORKS (5335), SORAB ROAD.SIDDAPUR (U.K)-581355, DISTRICT -UTTAR KANAND, PIN-581355, KARNATAKA, PH: 581355-9448525801.

SIRSI

501.* ARUNDHATI MOTORS (1258), HUBLI ROAD, SIRSI-581 402, (UTTAR KARNATAKA), PH:-9845098822.

SRINGERI

02.# SHUBHASHREE MOTORS (5434), AGUMBLE ROAD ,SRINGERI , DISTRICT -CHIKAMAGALUR , SRINGERI - 577139, KARNATAKA, PH : 577139-9448170400.

TIRTHALLI

503.## SUMUKA AUTOMOBILES (5133), AP ROAD.CEEBENE KERI, DISTRICT-SIMGA, SHIMGA-577414, KARNATAKA, PH: 577414-9686944949

TUMKUR

504.## APOORVA CAR CARE CENTRE (6327), B.N.P.
COMPOUND BEHIND KRISHNA THEATRE,
M.G. ROAD - TUMKUR, DISTRICT - TUMKUR,
KARNATAKA,
PH :571440-9901515516.

UDUPI

605.* ST. JUDE AUTOMOBILE ENGG. WORKS (4521), B.D.MARG, AMBALAPADI, UDIPI-576 103, PH -9844991241

UPPINANGADI

506.## RATNA ENTERPRISES (5447), BUILDING NO 5/514 KUKKAJE, SUBRAMNYA ROAD, UPPINANGADI, . PH :587313-9972995341.

KERALA

ADIMALY

507.## PLATHOTTAM AUTOMOBILES (3864), NH-49, OPPOSITE TO MINI INDUSTRIAL ESTATE, ADIMALI-685561, PH :685561-9447023073.

ADOOR

508.## AUTO CLUB (2132), NEAR H.P. PUMP, VADAKKADATHUKAVU P.O, ADOOR, PATHNAMTHITTA DISTT, PH :691523-9447440184.

ALAPPUZA

509 ## ESSAR MOTORS (4959), KALARKODE, NEAR CHINMAYA SCHOOL, NH-47, ALAPPUZHA-688003, KERALA, PH -688003-994938474

ALUVA

510.## AUTO TEAM (2630), A/189 A, PARUR JUNCTION, ALUVA, (KERALA), PH :683108-9947333760.

AMBALLUR

511.## LAKSHMI DEVI AUTO GARAGE (4137), AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA, PH :680301-9847903949

ANCHAL

512.## NAMI-TAJ (2534), NEAR ST. GEORGE CENTRAL SCHOOL, R.O. JUNCTION, ANCHAL, KERALA -691 306., PH :691306-9447453745.

ANJUMOORTHY

513.## SAFA AUTO CARE (3847), N H ROAD, MANGALAM PALAM, ANJUMOORTHY POST, VADAKKENCHERY, PALAKKAD DISTT, KERALA, PH :678682-9447303347.

ATTINGAL

514.## OM SHAKTI AUTOMOBILES (4466), KIZHUVILAM P.O., MAMOM, ATTINGAL, KERALA-695104, PH :695104-9744658681.

AYOOR

515.* MAKKATTU AUTO CLINIC (5051), AYOOR-ANCHAL ROAD PANACHAILA, AYOOR -691306, DISTRICT - KOLLAM, KERALA, PH:691306-9947288624.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

CALICUT

516.## MALABAR MOTORS (4655), EAST NADAKKAYU, P.O. ERANIPALAM, CALICUT-673006, KERALA, PH:673006-9846089190.

517.## MARUTI SCAN (1675), BYE PASS JUNCTION, MEENCHANDA, CALICUT-673 018, PH:673018-9847130508.

CHALAKUDY

518.## STAR MARUTI GARAGE (5367), NH47 BYE PASS, NEAR CRESCENT PUBLIC SCHOOL, .CHALAKKUDY, DISTRICT - THRISSUR, PH :680307-9946009375.

519.* VIJAY AUTO SERVICE (1626), POTTA, CHALAKUDY-680 307, , PH:680307-9995074628.

CHANGANACHERRY

520.* PALATHRA MOTORS & SERVICE CENTRE (1072), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY-686 104, PH :686104-9447195154.

521.## SAAFAA AUTOMOBILES (1148), PALATHARA CHIRA, BY PASS ROAD, CHANGANACHERRY, KOTTAYAM-686104, , PH: 686104-9447042517.

CHAVARA

522.## CHITHIRA AUTOMOBILES (4755), KANKATHU MUKKU, CHAVARA, KOLLAM, PH:691583-9447711007.

CHENGANNUR

523.* NEW TECH AUTOMOBILES (1978), INDUSTRIAL ESTATE, MUNDANCAVU, CHENGANNUR-689 121, KERALA, PH:689121-9388915757.

CHERTHALA

24.* POZHICKAL CAR WORLD (3037), NEAR BOYS HIGH SCHOOL, CHERTHALA, ALAPPUZHA DIST., KERALA-688 524, PH:688524-9947474752.

ERATTUPETA

525.## AUTO COMFORT (3948), PKMS BUILDING, ERATTUPETTA-2, , PH:686121-9447186876.

ETTUMANOOR

526.## ROHIT MOTORS (4636), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA, PH :686630-9447079010.

KALANJOOR

527.## AGT MOTORS (5937), KIP JUNCTION, KALANJOOR-689694, DISTRICT-PATHANAMTHITTA, KERALA, PH -689608-9744400444

KALLAMBALAM

528.# PRAKASH AUTO ENGINEERS (5548), VADASSERIKONAM P.O. KALLAMBALAM, VARKALLAKALLAMBALAM-695143, DISTRICT-TRIVANDRUM, KERALA, PH:695143-9847159618.

KALLUMUTTY

529.## MARUTI CARE (4179), KALLUMUTTY, IRITTY P.O., KANNUR, KERALA - 670703, PH:670703-9946703070.

KAI PETTA

530.## VARCO MOTORS (4724), 18/226-1, NEAR VELLARAMKUNNU, NH 212, KALPETTA -673121, PH :673121-9961569898.

ΚΔΝ.ΙΙΚΑΡΡΔΙ Ι Υ

531.## MACK ENTERPRISES (2729), T.B.ROAD, KANJRAPALLY, PH:686507-9447093739.

KANNUR

532.## AREN MOTORS (5139), CHAKKARAKAL.P.O. MUZHAPPALA, DISTRICT - KANNUR, KERALA, PH :670613-9446771237

533.** PIONEER AUTO & ENGG.WORKS (4722), KANNOTHUMCHAL ROAD, KANNUR - 2, (KERALA), PH :670005-9447798255.

KARIMANOOR

534.## MACS AUTOMOBILES (5745), SILVER SQUARE ,KARIMANNOOR,THODUPUZHA, DISTRICT-IDUKKI, KERALA, PH :885581-9633275410.

KASARGOD

535.## CARS CARE (4579), ANANDPUR, VIDYANAGAR P.O., KASARAGOD, KERALA-671123, PH -671123-9847251115

KATTAKADA

536.## CITY ENGINEERS (4947), MARUTI SERVICE CENTRE, NEYYATTINKARA ROAD, KATTAKADA-695572, DISTRICT-TRIVANDRUM (KERALA), PH:695572-9447206257.

537.## MADATHIL MOTORS (5456), MADATHIL HOUSE, CHOONDUPALAKA , KATTAKADA P.O. - TRIVANDRUM , DISTRICT - TRIVANDRUM , (KERALA), PH : 695543-9495192389.

KATTAPPANA

538.## UNITED SERVICE CENTER (4433), EDASSERT JUNCTION, KATTAPPANA-685508, KERALA, PH :685508-9961432941.

KAYAMKULAM

539.## PERFECT MOTORS (4948), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA), PH: 690507-9447048338.

KOLLAM

540.## QUILON MARUTI SERVICE (2737), CHANDANATHOPE P.O., KOLLAM-691 014, (KERALA), PH :691014-9387307562

KONNI

541.## GLOBAL MOTORS (2836), VAKAYAR P.O., KONNI-689 698, (KERALA), PH :689698-9446222944.

542.## MUTTATH AUTOMOBILES (5525), AROORPALAM,KONNI-689691, DISTRICT -PATHANANTHITTA, KERALA, PH -689691-9447431751

KOOTHATTUKULAM

543.## EXTRA CARE SERVICES (3232), DEVA MATHA JUNCTION, M.C. ROAD, KOOTHATTUKULAM-686 662, ERNAKULAM DIST. (KERALA), PH: 689121-9544552080.

KOTHAMANGALAM

544.## EXCEL MARUTI SERVICE (4342), BYE-PASS ROAD, KOTHAMANGALAM, ERNAKULAM-686691, PH :686691-8848605865.

545.## MAJESTIC MOTORS (1253), NEAR THANKALAM BYE-PASS ROAD, KOTHAMANGALAM-686 691, KERALA, PH :686691-9946427528.

KUNDARA

546.# SPARK SERVICE (5772), ELAMPALLOOR,P.O. KUNDARA-691501, DISTRICT-KOLLAM, (KERALA), PH :691501-980960820.

KUTHUPARAMBA

547.## KRISHNA MOTORS (3435), KUTTIKKUNNU, NEAR 66 KV SUB STATION, KUTHUPARAMBA-670 643, KANNUR DIST. (KERALA), PH :670643-9497296380.

MANANTHAVADY

548.## AUTO CARE (2541), (SHEEJA AUTO ENGG. WORKS), THALASSERY ROAD, MANANTHAVADY-670 645, WAYANAD (DIST.), PH :670645-9447040068.

MANJERI

549.## MARUTI AUTO HOUSE (4726), CHERANI, KARUVAMBARAM PO, MANJERI, KERALA. PIN 676123, PH :676123-9447129289.

MANNAR

550.## MOHANS AUTOMOBILES (5457), MOHANS AUTOMOBILES & ENGINEERS , KUTTEMPEROOR P.O. MANNAR, DISTRICT -ALAPPUZHA , (KERALA), PH :689622-9447877377.

MANNUTHY

551.** TOP CLEAN SERVICES (2834), 13/450 MANNUTHI BYE PASS, P.O. OLLUKKARA, THRISSUR, (KERALA), PH: 680651-859/2947776

MEENANGADI

552.## MOTOR TECH (2440), EAST MEENANGADI, KRISHNAGIRI P.O., WAYANAD-673 591, (KERALA), PH :673591:9539195850

MOOCHIKKAL

553.## CHELADANS MARUTI ENGINEERS (4659), THANUR ROAD, MOOCHIKKAL-676307, MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA), PH :676307-9895443563.

MUNNAR

554.## PLATHOTTAM AUTOMOBILES (4447), COLONY ROAD, IKKA NAGAR, MUNNAR, IDUKKI, KERALA - 685612, PH :685612-9447023073.

MUVATTUPUZHA

555.** JAWAN AUTOMOBILES (2730), MADAVOOR POST, MUVATTUPUZHA-686 669, , PH :686669-8943345500.

NEYYATTINKARA

556.## XANON ENGINEERS (8951), RAVELI TOLL JUNCTION, NEYYATTINKARA, TRIVANDRUM-695121, PH :695121-9946357813.

NILAMBUR

557.## CONFIDENCE MOTORS (5140), PALUNDA.CHUNGATHARA, NILAMBUR-679334, DISTRICT -MALLAPURAM, KERALA, PH:679334-8075272281.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

NII AMFI

558.## LIBRA (3431), M.C. ROAD, NILAMEL-691 535. KOLLAM DIST. (KERALA). PH:691535-9895629768.

OCHIRA

MANGALATH AUTOMOBILES (3836), NH 47 550 * VALIYAKULANGARA, OCHIRA P.O. KOLLAM DIST. KERALA-690526. PH:690526-9847258696

OLLUR

560.## TOPCLEAN SERVICES (4468), 10/153, CHRISTOPHER NAGAR, P.O.OLI UR. TRICHUR (KERALA). PH:680306-9846037818

ΡΔΙ ΔΚΚΔΠ

561.## CAR CRAFT (2139), 5/682 (1), MANALI, PALAKAD-678 001. (KERALA). PH:678001-9349607619

PANDALAM

AISHWARYA AUTOMOBII FS (2067), NEAR K.S.R.T.C. BUS STOP, PANDALAM-689 501. PH:689501-9847049140.

PARIPALLY

563.## ALLIANCE MARUTI SERVICES (3243), NH-47. PARIPPALLY-691 574, KOLLAM DIST. (KFRALA). PH:691574-9349926440

PATHANAPURAM

564.## MANNIL AUTOMOBILES (4150), NEAR PANCHAYAT OFFICE, PATHANAPURAM. KERALA-689695 PH:689695-9447258496

ΡΔΤΗΝΔΜΤΗΙΤΤΔ

C.J. MARUTI CARE CENTRE (1255). VARIYAPURAM FLANTHOOR FAST P.O. PATHANAMTHITTA-689 643, (KERALA), PH:689643-9446913874.

PERAVOOR

566.## CAR CARE AUTOMOBILES (4422). KODENCHAL, PERAVOOR, NIDUMPOYIL P.O. KANNUR- 670650. PH:670650-9946444691.

PERUMBAVOOR

567.## MILLENNIUM MOTORS (4873), OLD VALLAM ROAD, KADUVAL, PERUMBAVOOR-683542. DISTRICT-ERNAKULAM (KERALA), PH:683542-9446661111.

ACC MARUTI (2835), XIV/III-B, M.C. ROAD. PERUMBAVOOR-683 542, (KERALA), PH:683542-9846022593

QUILANDY

569.## HITECH MARUTI (3025), MAIN ROAD. KOYII ANDY, PIN-673 305, CALICUT DISTT. PH:673305-9447457996.

RANNY

570 ## DEEPA AUTOMOBILES (5177), DEEPA AUTOMOBILES.PAZHAVANGADI, P.O. RANNY 689673 DISTRICT-PATHANAMTHITTA KERALA PH:689673-9447216725.

SASTHA MANGALAM

571.## MARSHAL AUTOMOBILES (4035), SWATI NAGAR, TC 10/147, PIPPIN MOODU, SASTHA MANGALAM PEROORKADA TRIVANDRUM 695005 PH:695005-9447461101.

SULTAN BATHERY

572 ## AUTOMEK (4725), BEENCHI P.O., SUI TAN BATTERY-673 592. . PH:673592-9249999515

NEW INDIAN (), MYSORE ROAD, SULTAN 573 ## BATHERY, WAYANAD DISTRICT. KERALA-673592

PH:673592-8281682822 574 ## TEE PEE MOTORS (4773), 9/668-B OOTY ROAD, NEAR BLOCK OFFICE, SULTAN

BATHERY, WAYANAD (KERALA). PH:673592-8547201421.

TALIPARAMBA

575.## YESKAY (3368), KAKATHODE, TALIPAPARAMBA - 670141, KANNUR DISTT (KFRALA). PH:670141-9744076850

THAI ASSERY

576.## SAFE HANDS (3038), ERANHOLI, CHUNGAM, THALASSERY -670 107. (KERALA). PH:670107-9744322317.

THALAYOLAPARAMBU

577.* MYALIPARAMPIL MOTORS (3233), SILON JUNCTION, NEAR THALAYOLARAMBU. POOZHIKOL P O 686604. PH:686604-9447562050.

THAMARASSERY

578 ## MAI ABAR MOTORS (4645), WARD NO. 12. BLDG NO. 121, WAYANAD ROAD, KARADY. THAMARASSERY, CALICUT. PH:673573-9349114119.

THIRUVALLA

MARUTI AUTO SPOT (1628), MUTHOOR, M C ROAD, THIRUVALLA 689 107. PH:689107-9447860777.

THODUPUZHA

580.## UNIVERSAL MARUTI (2563), VENGALLOOR P.O. THODUPUZHA (KERALA). PH -685585-9447023024

TRIVANDRUM

581 ## FMINENT MARUTI SERVICE (2360), T.C. 610 M.C. ROAD, MANNANTHALA, TRIVANDRUM-695 015. PH:695015-9447713639

582.## HITECH INDUSTRIES (1951), NEAR ULLOOR BRIDGE PATTOM P.O. THIRUVANANTHAPURAM-695 004 (KERALA).

PH:695004-9447732057. 583 * KICHU MOTORS (5453), TC.49/962 ,SREEMOOLAM NAGAR CHIRAMUKKU MANACAUR (PO) TRIVANDRUM, DISTRICT -TRIVANDRUM, KERALA, PH:695572-9847023025.

584.## MUKUNDANS (3434), POONTHY ROAD. PADMAVILASAM, KUMARAPURAM, THIRUVANANTHAPURAM-695 011 PH -695011-9349882788

PROFESSIONAL MOTORS (1256), NEAR FLECTRICITY BOARD, PEROORKADA TRIVANDRUM-695 005. PH :695005-9947175650

586 ## SREEKARIYAM AUTOMOBILES (353). SREEKARIYAM P.O., THIRUVANANTHAPURAM-695 017. . PH:695017-9447050313

VADAKKANCHERY

587.## TOPCLEAN SERVICES (4354), 275-A, NEAR UTHRALIKKAVU TEMPLE, KUMARANELLUR P.O., VADAKKANCHERY, TRICHUR. PH:680590-9846037818.

VADANAPPALLY

588.## MONARCH MARUTI SERVICE CENTRE (4079). NEAR NORTH JUMA MASJID. GANESHA MANGALAM, P.O. VADANAPALLY. TRICHUR DIST (KERALA). PH:680614-9847792698

VADAVATHOOR

589.## C CARS (5754), VADAVATHOOR PO-KOTTAYAM, DISTRICT-KOTTAYAM. PIN-686503 KFRALA PH:685503-9447208558.

VARKALA

S.S. MOTORS (2979), NEAR POLICE STATION, VARKALA-695 141, TRIVANDRUM DISTT., PH:695141-9446104991.

VATAKARA

591.## RANI AUTOMOBILES & ENGINEERING WORKS (8957), BUILDING NO. 10/496A. NADAPURAM ROAD MADAPPALLI COLLEGE POST, VATAKARA, DISTRICT KOZHIKODE. KERALA- 673102 PH:673102-9400513139

LADAKH

KARGIL

ZOZILA ENGG. WORKS (374), KARGIL. LADAKH-194 105. PH:194015-9419176212

LAKSHADWEEP

LAKSHADWEEP

593.## POPULAR REPAIR & SERVICE CENTRE (2944), SECRETARIAT ROAD, KAVARATTI, I AKSHADWEEP-682 555 PH:682555-9448463737.

MADHYA PRADESH

BALAGHAT

594.## GULAB AUTOMOBILES (1553), VARDHMAN NAGAR, NEAR SHUBHARAMB LAWN. GONDIYA ROAD, KOSMI, BAI AGHAT, MP -481001. PH:481001-9425402926

595 ## SAURAV MOTORS (4069), DEENHI ROAD. GARRA INDUSTRIAL AREA, BALAGHAT, MADHYA PRADESH PH:481001-9300963731.

BARWANI

596 ## SPEED AUTOMOBILES (5260), KHANDWA BARODA ROAD, NR. BALAJI TOLL KANTA.BARWANI-451552. DISTRICT-BARWANI, MADHYA PRADESH. PH:451552-9926146073.

BETUL 597.##

ADITYA MOTORS (1263), NAGPUR BHOPAL ROAD, SADAR, BETUL-461 001, MADHYA PRADESH PH:460001-9425381581

RHIND

598.## MAA PITAMBARA MOTORS (5241). OPP.RAJENDERA CONVENT SCHOOL, LAKSHAR ROAD - BHIND . MADHYA PRADESH. PH:477001-9826240582.

BHOPAL

SHRI KRISHAN CAR CARE (1679). POLYTECHNIC ROAD, NEAR PETROL PUMP, BHOPAL. (M.P.). PH:462002-9424454030.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

SHUBHAM AUTOMOBILES (5052), PLOT NO. 600 ## 1 & 2. TIRANGA ROAD, SHAHPURA, BHOPAL MADHYA PRADESH -462039. PH:462039-9425009869.

TAURUS AUTOMOBILES (3372), ALAKNANDA 601 * COMPLEX. OPP VIJAY STAMBH PRESS COMPLEX M.P. NAGAR, ZONE-I BHOPAL PH:462011-9303131403

602 ** VIDHYA AUTOMOBILES (320), PLOT NO. 235.

PH:462011-9826053198.

603.** RANJIT AUTOMOBILES (5452), 117, ZONE II . M.P. NAGAR BHOPAL DISTRICT - BHOPAL PIN-462011, MADHYA PRADESH. PH:462011-.

BIAORA

604.## GURUKRUPA MOTORS (5670), OPP PRABHAT BREAD INDUSTRY, AB ROAD -BIOARA, DISTRICT - BIOARA, MADHYA PRADESH. PH:465674-9425038727.

BURHANPUR

SWADESHI MOTORS (4229), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR, MADHYA PRADESH PH:450331-.

DARRA

606.## MODI MOTORS (3857), BALLA KA DERA, JHANSI ROAD DARRA GWALIOR PH:475110-8770360194

DAMOH

607.## MARUTI PRIME (1156), BUS STAND, STATION ROAD, DAMOH-470 661. PH:-8319706998.

DATIA

608.## HIND MOTORS (4470), NH-75, JHANSI BYPASS ROAD, NEAR S.R.I COLLEGE, KALAMPURAM TIRHA, DATIA, MADHYA PRADESH - 475661, PH:475661-9406969206

DEWAS

609 ## AZAD MOTORS (4534), 10, JAWAHAR NAGAR COMPLEX AB ROAD DEWAS(MP)404051. PH:455001-9827533591

DHAMNOD

610.## REWANCHAL MOTORS (6027), NEW PRAKASH NAGAR, , AB ROAD.DHAMNOD-454552 . DISTRICT-DHAR . MADHYA PRADESH. PH:454552-7974408538

DHAR

611 ## JIYO MOTORS (5031), OPP DAK BANGLA INDORE ROAD DHAR. DISTRICT -DHAR, DHAR - 454001, MADHYA PRADESH. PH:454001-9893633559.

GWALIOR

612.## CLASSIC MOTORS & SERVICE STATION (5242), CHAUHAN PIAO, M.G. ROAD, THATIPUR MORAR GWALIOR MADHYA PRADESH. PH -474011-9329603001

MARUTI ENTERPRISES (3021), KHERAPATI ROAD, GWALIOR-474 002, (M.P), PH:474002-9425116466.

HARDA

614 ## MANOJ UDYOG & SERVICE CENTER (4145). 87-88 INDUSTRIAL AREA CHHIPANER ROAD HARDA M.P. PH:461331-9826227245.

INDORE

BADSHAH MOTORS (5027), 150/2, NOORANI 615 ## NAGAR.NEAR JAIMAL SINGH PETROL PUMP, DHAR ROAD INDORE-452008. DISTRICT-INDORE, MADHYA PRADESH. PH -452008-9826098427

BOMBAY MOTORS (1655), 10 Y.N. ROAD, INDORF-452 003 (M.P.). PH:452003-7314222786.

JYOTI RAGHUNATH MOTORS (5149), 3/3 RAMBAGH, BEHIND PETROL PUMP INDORE -452001, MADHYA PRADESH. PH:452001-9425353568.

KHALSA AUTO SERVICE (5325), 36 KIBE COMPOUND, INDORE-452 001. . PH:452001-.

ITARSI

PITAMBARA MOTORS (5041), NH-69, BETUL ROAD.NEAR PLYBOARD, FACTORY ITARSI, DISTRICT - ITARSI, MADHYA PRADESH, PH:461111-9406525060.

UNITY ENTERPRISES (3270), PLOT NO.97, INDUSTRIAL AREA, KHEDA, ITARSI-461 111 (M.P.). PH:-8120025666.

JABALPUR

621.## SUPER MARUTI SERVICE (4952), 375-A PREM NAGAR, OPP. GURUDWARA JABALPUR-482001, MADHYA PRADESH, PH:482001-7999993375.

622 ## YASH VEHICLES CARE (2169), 1664, WRIGHT TOWN ,OPP. TELEGRAPH GATE NO. 2 JABALPUR (M.P). PH:482002-9893237505.

623.## SHARMA MOTORS (5764). IN FRONT OF PAWAN MILL STATION ROAD.JAWAD-458330. DISTRICT-NEEMUCH. MADHYA PRADESH PH:458330-9425441270

KATNI

624.## KATNI MOTORS (4949), C/O MAHURANIPUR UNION TRANSPORT CORPORATION NH-7. PANNA MORH, KATNI-483501 (MADHYA PRADESH) PH:483501-9425162660

KHANDWA

625 ## M K AUTOMOBII FS (5326), SANTOSH NAGAR OPP JHEEL ODHYAN INDORE ROAD, KHANDWA - 450 001. PH:450001-9425085666

KUKSHI

626.## DILIP MARUTI SERVICE CENTER (4649). OPP. GAYATRI SAROVAR, KUKSHI, DISTT DHAR PH:454331-9179649974.

MANDSAUR

627.## DEV MOTORS (4562). SITAMAU FATAK. MANDSAUR-458001, MADHYA PRADESH. PH:458001-9826751534.

JANGID MOTORS (2735), NAYAPURA ROAD, NEAR R.K. HOSPITAL, MANDSAUR-458 001. (M.P.), PH:458001-9827266583.

MHOW

629.* HIGHWAY MOTORS (4144), A.B. ROAD. DONGRAGAON, MHOW-453441, INDORE M.P. PH:453441-9826035653.

MORFNA

630.## SHYAM MARUTI SERVICE STATION (8935). SHYAM BIHAR COLONY, A.B. ROAD. MORENA-476 001, MADHYA PRADESH, PH:-7999624671.

NAGDA

631.## MARUTI NANDAN (3939), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA DISTT UJJAIN PH:456335-9910074658.

SAGAR (M.P)

632.## SHREE SAGAR MOTORS (4955), NEAR GURUDWARA, JHANSI BHOPAL ROAD. BHAGWANGANJ, SAGAR-470002, MADHYA PRADESH. PH:470002-9826070549.

SARNI

633 ## JHANVI SERVICE STATION (3738), MAIN ROAD BAGDONA SARNI-460 449 DISTT. BETUL (M.P.). PH:460449-9589650034.

SATNA

KAPOOR SERVICING CENTRE (1162), 90 PREM NAGAR, SATNA-485 001, (M.P.). PH:470661-9827095182 635.# KAPOOR SERVICING CENTRE (), 90 PREM

NAGAR, SATNA-485 001, (M.P.). PH:470661-9827095182

SEONI

636 ## HIGHWAY MOTORS (2262), NEAR MOTEL CENTER POINT, SEONI-JABAI PUR HIGHWAY, SEONI, (M.P.). PH:480882-9424928978

SHAHDOL

637.## PACE CRAFTERS (2145), NEAR VIRAT TEMPLE, BANGANGA TIRAHA, REWA ROAD, SHAHDOL, (M.P.), PH:484001-9424701495.

SHAJAPUR

SHRIYA MOTORS (2568), 174 A.B. ROAD. SHAHJAPUR-456 001, (M.P.), MADHYA PRADESH, PH:-9826783993

SHEOPUR

GOYAL AUTO (5446), NEAR NABBAN MARKET, BARODA ROAD, SHEOPUR, DISTRICT - SHEOPUR, MADHYA PRADESH. PH:476337-9826240944

SHIVPURI

640 * KARUN MOTORS (4273), NEAR ARUN DHARAMKANTA, GUNA NAKA, A.B. ROAD, SHIVPLIRE PH:473551-9425728285.

SIDHI

641.## KHARE MOTORS (4068), NH-75, SINGRAULI ROAD. SIDHI, MADHYA PRADESH, PH:486661-9425177518

TIKAMGARH

ASHENDRA AUTOMOBILES (2636), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA, KUNDESHWAR, TIKAMGARH-472 001. MADHYA PRADESH, PH:472001-9009129909.

UJJAIN

643.## SUGANDHI BROTHERS (324), DEWAS ROAD, UJJAIN (M.P), , MADHYA PRADESH, PH:456010-9406822255.

JAWAD.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

644.## ZALANI AUTO SERVICE (1554), A 15/9, MAHAKAL VANIJYA KENDRA,, NANAKHEDA, UJJAIN 456010, ,

PH:456010-9713884177.

VIDISHA

645.## SAMAY MOTORS (5179), NEAR SC/ST SHED , PITALMIL CHOURAHA, SAGAR ROAD NH-86, VIDISHA, MP-464002, PH -464002-9425392521

WAIDHAN

646.## ANANT MOTORS (5732), NEAR ESSAR TOWNSHIP, BILAUNJI ,WAIDHAN, DISTRICT-SINGRAULI, PIN-486886, MADHYA PRADESH,

PH:486886-8319050124

MAHARASHTRA

AHMEDNAGAR

7.* AMIT SERVICE STATION (4158), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMADNAGAR, MAHARASHTRA, PH :414111-

AKLUJ

648.## SONAJ AUTOMOTIVES PVT. LTD. (2665), SHANKARRAO MOHITE PATIL, CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.O. BOX NO.-11, AKLUJ -413 101 (MAHARASHTRA), PH 413101-9657713360

AKOLA

649.## AUTOLAND (5936), RAM
NAGAR,TOSHNIWAL LAYOUT,
AKOLA-444005, DISTRICT-AKOLA,
MAHARASHTRA,
PH: 444005-9422164050.

AKOLE

650.## SAMARTH CAR CARE (5555), MAHALAXMI COLONY,K.G. ROAD-AKOLE, DISTRICT -AHMEDNAGAR, PIN-422601, MAHARASHTRA, PH:422601-9881759099.

AMALNER

651.## LUCKY AUTO CARES (5853), R.K.
COMPLEX.R.K. NAGAR,DHULE ROAD,
AMALNER-425401, DISTRICT-JALGAON,
MAHARASHTRA,
PH: 425401-9422789764.

AMBERNATH

652.* J.S. AUTOMOBILES (4567), B-31/3, MIDC, KALYAN AMBERNATH ROAD, AMBERNATH-421501, MAHARASHTRA, PH :421501-9370116436.

AURANGABAD

553.* CAR CARE (5173), #85.SERVICE INDUSTRIAL SECTOR, TOWN CENTRE CIDCO, DISTRICT-AURANGABAD, MAHARASHTRA, PH :431006-9158000029.

54.* MARUTI AUTOMOBILES (3441), CHETAN TRADE CENTRE, JALNA ROAD, OPP. SFS SCHOOL, AURANGABAD - 431001, PH -431101-9767301999

BADLAPUR

655.## OMKAR AUTO SERVICES (3376), PLOT NO-A/54/1, KARJAT - BADLAPUR ROAD, MIDC BADLAPUR, MAHARASHTRA 421503, PH :421503-9326080457.

BARSHI

656.## OM SERVICING CENTRE (5359), KURWEDI ROAD - BARSI, DISTRICT - SOLAPUR , PIN -413401, (MAHARASHTRA), PH :413401-9850437003.

BEED

657.## NEW AGWAN SERVICES (2235), 850 SHYOG NAGAR, JALNA ROAD, BEED-431 122, PH -431122-9822217321

BHUSAWAL

58.* SAIKRIPA AUTOMOBILES (2129), NATIONAL HIGHWAY NO.6, S. NO.54/5X6 NEAR KHADKA ROAD CROSSING, BHUSAWAL-425 201, DISTT. JALGAON (MAHARASHTRA), PH.425201-9823271027.

BOISAR

659.## SIFAR CAR CARE (4055), PLOT NO. 15 AT-KURGAON, P O KUNDAN, BOISAR TARAPUR ROAD, TAL PALGHAR, DISTT THANE, PH :401506-9765509990.

CHANDRAPUR (MAHARASHTRA)

660.## SHEIKH AUTOMOBILES (5379), APPOSITE GOVT. ITI.CIVIL LINES, CHANDRAPUR, DISTRICT - CHANDRAPUR, MAHARASHTRA, PH :442401-9422171896.

CHIPLUN

661.## MANORKAR AUTOMOBILES (270), NEAR RAILWAY STATION, BOMBAY-GOA HIGHWAY, WALOPE CHIPLUN-415 605, DISTT. RATNAGIRI, PH: 415605-9421239999.

662.## MAYUR MOTORS (168), SITA APARTMENTS, NEAR BAHADUR SHEIKH NAKA, CHIPLUN DISTT. RATNAGIRI, MAHARASHTRA, PH. :415605-9422431112.

DAPOLI

** A-Category Mass: Free & paid Service, Major repairs & Accidental repairs

663.* ROYAL AUTO SERVICE STATION (3444), DAPOLI-MANDANGAD ROAD, MAUJE-DAPOLI, TAL- DAPOLI, DIST. RATNAGIRI-415 712 (MAHARASHTRA), PH:415712-8888101776.

DEOPUR

664.** AGRO ENGINEERING SERVICES (2244), DIVERSION ROAD, DEOPUR, DHULE-424 005, PH :424005-9823059471.

DOMBIVLI

665.## MEGA SERVICES (2573), A-173,PHASE-1,, NEW KALYAN BYPASS ROAD, OPPOSITE ADARSH PARK,MIDC, DOMBIVLI (E)-421203, PH -421203-8424070777

GADACHIROLI

666.## VENUS AUTOMOTIVE (4170), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY, GADACHIROLI, MAHARASHTRA-442605, PH .442605-9689228222.

HINGANGHAT

667.## S.K MOTORS (5530), SANT KABIR WARD, NEAR SIVAJI MARKET, NH 07, HINGANGHAT, DISTRICT - WARDHA, PIN-442301, MAHARASHTRA, PH: 442301-9421726700.

ICHALKARANJI

668.## SAI AUTO LEADS (3821), 7/597 SANGLI VES, ICHALKARANJI-416 115, DIST. KOLHAPUR, PH :416115-.

ISLAMPUR

669.## VIJAY MOTORS (5134), PETH ISLAMPUR ROAD, NEAR PETH NAKA -ISLAMPUR, DISTRICT - SANGLI, MAHARASHTRA, PH :415409-9860446084.

JALGAON

70.* SHREE MOTORS (3040), 362 SHIVAJI NAGAR, JALGAON-425 001, , PH :425001-9823150704.

KALWA

671.** SHREE SIDDHI MOTORS (5668), NEXT TO LILAVATI CO-OP SOCIETY, DATTAWADA, KALWA KHAREGAON ROAD-KALWA(W) -400605, DISTRICT - THANE, (MAHARASHTRA), PH :400605-9769775444.

KALWAN

672.## KRISHNA AUTOMOTIVE (4037), GANESH NAGAR, AT POST & TALUKA, KALWAN, DIST NASHIK-423501, PH -423501.8087088735

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

KALYAN

673.## SHIVAM AUTO CARE (571), C/O GRIHALAXMI VATSU NIRMAN, MURBAD ROAD, KALYAN, MUMBAI-421 304, PH :421304-.

KANKAVLI

74.** SAPALE AUTO SERVICE PRIVATE LIMITED (1975), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHUDURG-416 602, PH : 416602-9427434701

KATOL

675.## BALAJI SERVICE STATION (5962), PLOT NO. XI.MIDC.SAWARGAON ROAD DONGARGAON-KATOL.NAGPUR.441302. DISTRICT-NAGPUR.MAHARASHTRA, PH:441302-9763867144.

KHAMGAON

676.## JAIDEEP MOTORS (4779), NEAR RELIANCE PETROL PUMP, NANDURA ROAD, KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA), PH :444303-985035/82/6

KHED

677.## BHARAT AGENCIES (4548), NEAR KAMAKSHI PETROL PUMP, AT POST KALBANI, TALUKA KHED, DISTRICT RATNAGIRI, 415621, PH: 415621-9049024781.

KOLHAPUR

678.## VAKRATUNDA MOTORS (3142), OPP MAHAVIR COLLEGE, NAGALA PARK, KOLHAPUR, PH :416003-9822611559.

KOPARGAON

.* SAI MOTORS (4449), NAGAR MANMAD HIGHWAY, NEAR HOTEL ASHOKA, KOPARGAON, DIST. AHMEDNAGAR (MAHARASHTRA), PH :423601-9850684384.

LONAVALA

680.## APPOLO MOTOR REPAIRING WORKS (2543), MUMBAI-PUNE ROAD, LONAVALA, MAHARASHTRA-410 401, PH :415409-9370721905.

MAHAD

681.## SHREE AUTO (2572), NAGALWADI PHATA BOMBAY-GOA HIGHWAY, AT & TALUKA -MAHAD, DISTT, RAIGAD, MAHARASHTRA-402 301, PH :402301-9422495799.

MALEGAON

682.## MALEGAON AUTO CENTRE (3721), NEAR MOTI BAUG NAKA, MALEGAON-423 203, , PH :423203-9371376911.

MANGAON

683.# KRUPA SERVICES (574), KRUPA SERVICES, AT : NANORE, POST : MANGAON, DISTT-RAIGAD-402 104, PH :402104-9422375444

MIRAJ

684.## ASHOK AUTOMOBILES (5672), C.S.
NO:70-C,CHH - SHIVAJI ROAD, MIRAJ,
DISTRICT - SANGLI, MAHARASHTRA,
PH -416410-

MUMBAI

685.* ALLIED AUTO AGENCIES (2666), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052, PH :400052-9768257450

686.* ASHA AUTO SERVICE (570), I.O.C. DEALER, L.B.SHASTRI MARG, KURLA, MUMBAI-400

PH:400070-9833728833.

687.** AUTO CRAFT (4759), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG, VIKHROLI (W), MUMBAI-400083, PH:400083-9820022227.

688.## AMAR AUTOMOBILES (526), KING'S CIRCLE, MATUNGA, MUMBAI-400 019 (MHRS)., PH:400019-9869473310.

689.## BANAI AUTO CARE (6053), OPP. MAROL POLICE CAMP, NEXT TO AAREY CHECK POST, MAROL MAROSHI ROAD, MUMBAI-400 059, PH:400059-9819844333.

690.** CARKRAFT AUTOMOBILES AND INFRASTRUCTURE PVT. LTD. (4654), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR SAI DHAM MANDHIR, MULUND (W), MUMBAI,

PH:400080-9820296924.
CHAMUNDA MOTORS (P) LTD. (520),
RAMBAUG NEAR SUNDAR DHAM, OFF
S.V.ROAD, BORIVILI (W), MUMBAI-400 092,
PH:400092-9820063626.

692.## CHEMBUR MOTORS (2526), 31/A ANAND NAGAR, OFF SION TROMBAY ROAD, SINDHI SOCIETY CHEMBUR, MUMBAI-400 071, PH -400071-9820475704

693.## CHHAGAN MITHA (8945), CORNER OF WARDEN ROAD & PEDDAR ROAD, POST BOX NO. 6521, MUMBAI -400026, MAHARASHTRA, PH: 400026-9820861441. 694.## HIND AUTOMOBILES (550), 29 SEWREE WADALA ROAD, KING'S CIRCLE, MUMBAI - 400 019 (MHRS)., PH :400019-9833876440.

S95.## LAXMI AUTO WORKS (2542), PLOT NO.1041, SAYANI ROAD, PRABHADEVI, MUMBAI-400 025,

PH:400025-9820303646.
ORIX AUTO INFRASTRUCTURE SERVICES
LTD (1971), 94 MAROL INDUSTRIAL ESTATE,
ANDHERI KURLA ROAD, ANDHERI (EAST),
MUMBAI-400 059,

PH :400059-9820409079.

POWAI AUTO WORKS (1660), OPP. PANCH
KUTIR BUS STOP, 19 ADI SANKARACHARYA
MARG, POWAI, MUMBAI-400 076,

PH :400076-9820635317.

POWAI AUTO WORKS (4966), GALA NO
14/15/16, BUILDING NO1, C WING, KAILAS
INDUSTRIAL COMPLEX, PARKSITE
VIDHROLI (W).

PH :400079-9820635317.

99.## PRINCE SERVICE CENTRE LLP (8931), 34
GAMDEVI ROAD, SANGHANI ESTATE,
GHATKOPAR (WEST), MUMBAI-400 086,
PH :400086-9869034445.

00.** RAVI AUTOMOBILE SERVICES (553), GHATKOPAR-MAHUL ROAD, TILAK NAGAR, CHAMBUR, MUMBAI-400 089, PH :400089-8657442190.

701.** SHAH CAR CARE (5436). SADANWADI LAKE ROAD OFF LBS MARG, NEAR KRISHNA TALKIES, DISTRICT - MUMBAI (MAHARASHTRA), PH 400078-9820068380.

702.** SHAMAL MOTORS (1154), VAITY WADI, BHANDUP-SONAPUR ROAD, BHANDUP (WEST), MUMBAI-400 078, PH -400078-9773911111

703.* ST.FRANCIS AUTOMOBILES (5154), MOUNT POINSUR BORIVALI (WEST), MUMBAI - 400103, DISTRICT - MUMBAI, MAHARASHTRA

PH -400103-9892876396.
SUPER AUTO SERVICE PVT. LTD. (2430),
DESAI WADI JAYWANT SAWANT ROAD,
NEAR HAPPY HOME SOCIETY, DAHISAR
(W), MUMBAI-400 068,
PH -400068-9867253000.

705.## SURAJ SANGHI SERVICE STATION (438), DR. ANNIE BESANT ROAD, WORLI, MUMBAI-400 018, PH :400018-9821115492. 706.** ZENITA AUTO WORKS (525), BEHIND H.P.PETROL PUMP, NAV PADA MAROL NAKA, ANDHERI E, MUMBAI-400 059 (MHRS.), PH:400059-9833553598.

707.## JAGMAN MOTORS (1556), NEXT TO HOTEL ROYAL SALUTE, ANDHERI KURLA ROAD, SAGBAUG, MUMBAI-400 059, PH -400059-989/75/2672

MURBAD

708.## JAYDEEP AUTOMOBILES (6876), MURBAD KALYAN HIGHWAY(NH-222), NEAR NAVDURGA HOTEL, AT-PO-TAL:MURBAD-421401, DISTRICT-THANE MAHARASHTRA

NAGPUR

'09.* BALAJI MOTORS (3078), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20,

PH:415621-9423370219.

PH: 440020-9960634068.

HASAN GARAGE (2021), MOHAN NAGAR, NAGPUR - 440 001 (MHRS)...,
PH: 4400014.

711.## M S SERVICES (5339), 14 HILL ROAD , GANDHI NAGAR - NAGPUR , DISTRICT -NAGPUR , MAHARASHTRA, PH :440010-9373422822.

712.## R. K. MOTORS (3023), 69 A V A LAYOUT, LAKADGANJ, NAGPUR-440 008, PH :440008-9422113088.

I3.* SAGAR AUTOMOBILES (2667), MARUTI AUTHORISED SERVICE STATION, PLOT NO.3 NEAR PETROL PUMP, WARDHA ROAD UJJWAL NAGAR, NAGPUR-440 025, PH:440025-9960695823.

714.** SAGAR AUTOMOBILES (4971), WARDHA ROAD,, CHINCHBHAWAN, NAGPUR – 441108,

PH :441108-9422145365.
715.## SHREEJEE SERVICES (2027), CHANDAK
KOTHI SUBASH ROAD NAGPUR-440 018

NANDED

716.## MARUTI CARES AND COLOURS (5778), LABH NAGAR,BACK SIDE OF SURABH HOTEL, NANDED-431605, DISTRICT-NANDED, MAHARASHTRA, PH: 431605-9225751444.

PH:440018-9766699321.

NANDURBAR

717.* MAULEE MOTORS (4736), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD, NANDURBAR-425412, MAHARASHTRA, PH :425412-9822377931.

NASHIK

718.## HITECH AUTO SERVICES (4451), SURVEY NO 89/2, PLOT 1 & 2, OPP MOTIWALA MEDICAL COLLEGE, GANGAPUR SHIWAR,, NASHIK,

PH: 422007-9225142471.
RACCA SERVICES (3720), RACCA ESTATE,
OLD GANGAPUR NAKA, HANUMAN WADI
LINK ROAD, PANCHVATI, NASHIK - 422003,
PH: 422003-9068646468.

720.## SAI AUTOMOBILES (3722), SAPAT COMPLEX, OPP. PRESS HOSPITAL, NASIK ROAD-422 101, PH :422101-9822027931.

NAVI MUMBAI

21.* BOSS (265), AT/P.O. - TURBHE, SECTOR-22, VASHI, NAVI MUMBAI-400 705, PH:400705-9167766474.

722.## C G MOTORS (4138), PLOT NO R-966, NEAR MK ENGINEERING, RABALE MIDC, RABALE, NAVI MUMBAI, PINCODE 400701, PH :400701-9920205756.

Y23.** CHETAN MOTORS (3143), PLOT NO.-45, SECTOR-19A, OPP. DANA BAZAR EXIT GATE NO.3, BEHIND SHAMRAO VITHAL CO-OP BANK, VASHI, NAVI MUMBAI - 400705, PH -400705-899267288

NIGDI

724.## SHALU AGENCY (2872), 516/27 PRADHIKARAN, NIGADI, PUNE-411 044, PH :411014-.

NIPHAD

725.## SHRI SAI SERVICE STATION (4452), NIPHAD AURANGABAD ROAD, NIPHAD, NASIK, MAHARASHTRA, PH :422303-9823679999.

OMERGA

Y26.## SHRI SWAMI SAMARTH SERVICES (5874), 311/1,OPP, H.P. PETROL PUMP,NH-9, OMERGA-413606, DISTRICT-OSMANABAD, MAHARASHTRA, PH :413608-7666018372.

PACHORA

727.## POOJA MARUTI SERVICE CENTRE (5564), PLOT NO 75,PREM NAGAR ,KRISHNA PURI SHEVAR, PACHORA, DISTRICT - JALGAON , MAHARASHTRA, PH :424201-8890320803.

PALGHAR

728.## SIDDHI MOTORS (5553), THEMBHEDE ROAD, GANESH KUND, PALGHAR, DISTRICT - THANE, MAHARASHTRA, PH :401404-9890609107.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

PANVEL

729.** GANGAL MOTORS (2934), PLOT NO:-132, 133 8117, SECTOR 1-S, ROAD NO-5, BEHIND CIDCO GODOWN, NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA), PH:410206-932026072.

730.** IDEAL AUTOMOBILES (2279), IDEAL HOUSE, PLOT NO-83, PANVEL INDUSTRIAL CO OP ESTATE LTD., PANVEL, DISTRICT -RAIGAD, (MAHARASHTRA), PH. 410206-999902650.

PARBHANI

731.## SAI SERVICING CENTRE (5252), P7/5 MIDC, PARBHANI-431 401, MAHARASHTRA, PH :431401-9404504111

PASHAN

732.* MARUTI CAR SANJIVANI (5278), SURVEY NO 5/2.SUTARWADI .SUSROAD.PASHAN, DISTRICT - PUNE, PUNE - 411021, MAHARASHTRA, PH :411021-9960733360

PATHARDI

733.## SAGAR MOTORS (5979), MALIBABHULGAON, NAGAR ROAD PATHARDI, MAHARASHTRA 414102, PH :414102-9822197969

PEN

MA.## NAVNATH AUTO (5677), OPPOSITE RAMWADI,S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA, PH-402107-9834279228

PHALTAN

735.## VORA AUTOMOTIVE (2436), SHINGNAPUR ROAD, KOLKI, PHALTAN-415523, PH :415523-7709436262.

PIMPALGAON

736.## ASHWAMEDHA AUTO (2435), "ASHWAMEDH", MUMBAI-AGRA HIGHWAY, PIMPLEGAON (B), DISTT. NASHIK, PH:422209-9766600064.

PUNE

737.## APPU AUTOMOBILES (5029), MARUTI AUTHORISED REPAIR STATION, #81.SR NO 164.TALAWAD ROAD, KANBAY ROAD.TRIVEN NACAR, AHARASHTRA, PH:411062-9371017595.

738.* APPU SERVICE STATION (8966), T BLOCK, S-32, NEAR PAWANA COMPLEX, MIDC, PUNE-411026 (MAHARASHTRA), PH :411026739.* ATHARVA CAR SERVICES (5161), 5, BHUSARI COLONY, PAUD ROAD, KOTHRUD,PUNE-411038, MAHARASHTRA, PH:411038-9665024803.

740.* MANAS AUTOMOTIVE (5443), SURVEY NO 2/4 PARRANKUTILANE NO.1., KARVE NAGAR - PUNE, DISTRICT - PUNE, MAHARASHTRA,

PH:411052-9822043007.

MARUTI CARE POINT (3337), S. NO
273/5,BANER ROAD,OPP. VARSHA PARK,
BANER,PUNE-411045, MAHARASHTRA,
PH:411045-9689901475.

742.** SAINATH AUTOMOBILES INDUSTRIES (1569), SURVEY NO.36 PLOT NO.1, VADGAON KHURD SINHAGAD ROAD, NEAR GREEN FIELD HOTEL, PUNE-411 041, PH 411014-1982014282

743.* SANTOOR CAR CARE (2053), ASHOK PLAZA, 32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE-411 014, PH -411014-

RAHURI

44.* ANAND MOTORS (4152), IN FRONT OF ASHWINI HOTEL, NAGAR MANMA ROAD, A/P RAHURI DIST- AHMADNAGAR, MAHARASHTRA, PH. 413705-7350008501.

RAVER

745.## RUCHI MOTORS (2631), MARUTI AUTHORISED SERVICE STATION, RAVER-425 508, DISTT. JALGAON, (MAHARASHTRA), PH :425508-8805373406.

ROHA

746.* AMIT MOTORS (4972), NANA SHANKAR SHETH ROAD , NEAR GOVT REST HOUSE, DISTRICT - RAIGAD , ROHA - 402109, MAHARASHTRA, PH :402109-9028376141.

SAKURI

747.## SHREE SAI SERVICE CENTRE (5344),
NAGAR-MANIMAD ROAD .GODAVARI, HOTEL
JEWEL .PO.SAKURI .TAL.RAHATA, DISTRICT
- AHMEDNAGAR , MAHARASHTRA,
PH :423107-997041777.

SANGAMNER

748.* SAI MOTORS (2840), NEAR GULEWADI PHATA, PUNE NASIK ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS.), PH. 422608-9860027513.

SANGLI

749.** ASHOK AUTOMOBILES (3723), 595/B, M.G.ROAD, SANGLI-416 416, PH :416416-

250.* AWATI MOTORS (4772), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHAPASTRA

PH:416415-9422407284.
751.## BALAJI AUTO SERVICE (1564), PLOT
NO.43,GOLDEN PARK , BYPASS
ROAD,SANGLI-416416 , DISTRICT-SANGLI
MAHARASHTRA

PH:416416-9822106126.

SATANA

752.## PATHAK MOTORS (5037), YASHWANT NAGAR,TAHARABAD ROAD., SATANA -423301, DISTRICT - NASIK, (MAHARASTRA), PH -423301-9890216257

SATARA

753.## SIDDHI AUTOMOBILES (5464), 294/A DEGAON PATA - SATARA, RAHAMTPUR ROAD.MIDC SATARA, DISTRICT - SATARA , (MAHARASTRA), PH :415002-94/2403178

SAWANTWADI

VENKATESHA AUTO CARE (8954), PLOT NO.21 MUMBAI GOA HIGHWAY, KOLGAON-BHOM, SAWANTWADI-416 510, DIST. SINDHUGARH, MAHARASHTRA, PH :416510-9423304639.

SHAHADA

755.## MATOSHREE AUTOMOBILES (2870), NO.558 SHAHADA DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA),

SHIRDI

756.## SHREE GANESH AUTO CARE (4268), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107, PH :423107-.

PH:425409-9421726230.

SHRIRAMPUR

'57.* G.K. MOTORS (2871), K.V. ROAD, SHRIRAMPUR, DISTT. AHMEDNAGAR, PIN-413 709., PH :413709-9822094098.

SOLAPUR

758.** BALAJI MOTORS (1930), 8536 B/1 MURARJI PETH, OPP. OLD PUNE NAKA OFFICE, SOLAPUR-413 002, PH: 413008-9765111110.

THANE

759.* PATRICIA AUTOMOBILES (529), ALIGHT CHAMBER, ADJACENT GOLDEN DYES, OLD AGRA ROAD, HARDAS NAGAR, GOKUL NAGAR, THANE, WEST - 400601, PH :400601-9897175866.

760.* SEAN MOTORS (5377), SATPALA NAKA, ARNALA-VASAI ROAD, NEXT TO ZEAL RESTAURANT, VIRAR (W) PIN 401301, PH :401301-9324003123

STERLING MOTOR GARAGE (555), B1/B2, KOTHARI COMPOUND NO.3, 27 ACRES, NEXT TO D'MART, OFF GHODBUNDER ROAD, MANPADA, THANE (WEST), MAHARASHTRA - 400610, PH 4006611-98/2052926

762.** THANAWALA MOTOR AGENCY (3724), DHIRAJ BAUG, L.B.S. MARG, NAUPAD, NEAR HARINIWAS CIRCLE, THANE-400 602, PH:400602-9820106904.

763.* TOP GEAR AUTOMOBILES (4840), SAI NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W), PH :400615-9833795855.

ULHASNAGAR

4.* CHIMAN AUTOMOBILES (3845), NEAR KAJAL PETROL PUMP, BALANI COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR 421003,

PH: 421003-9850223422.
MODERN CAR CARE (3260), 171/2.RRV INDUSTRIAL AREA, BEHIND SAI BABA MANDIR, SHANTINAGAR, ULHASNAGAR-421 003, MAHARASHTRA, PH: 421003-9819774558.

URAN

66.## SAI AUTOMOBILES (5665), STATE HIGHWAY NO.56,NEAR JASAI NAKA, JASAI VILLAGE,URAN-410206, DISTRICT - RAIGAD, MAHARASHTRA, PH.410206-9821806806.

VADA

767.## SAI MOTORS & SERVICE CENTRE (5675), VARALA, OPP. LAKE CITY, MANOR ROAD, WADA, PH:421303-9226338578.

VITA

768.## SONA AUTOMOTIVE (5671), MAYANI ROAD, NEAR PRUTHVIRAJ HOTEL, OPP. LAKADE PETROL PUMP, DISTT VITA- 415311, PH :415311-9890223938.

WAI

ADITYA AUTO SERVICE (4271), WAI SATARA ROAD, WAI-412803, SATARA DIST., PH :412803-9423862119.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

WANI

770.# SHEIKH AUTOMOBILES (8950), PLOT NO 101, WANI GHUGUS ROAD, OM NAGRI, LAL GUDA TALAO, WANI, DIST. YAVATMAL, MAHARASHTRA 445304, PH: 445304-9422171896.

WARDHA

771.## BHARAT MOTOR (1631), NAGPUR ROAD, NALWADI, WARDHA, MAHARASHTRA, PH:442001-9881588388.

WARORA

772.## ROHIT AUTOMOTIVE (5873),
NAGPUR,CHANDRAPUR ROAD,VINAYAK-,
LAYOUT,TIILAK WARD,WARORA-442907,
DISTRICT-CHANDRAPUR, MAHARASHTRA,
PH:442907-9172060099.

YAVATMAL

773.## M.S. MOTORS (460), AMRAVATI ROAD HIGHWAY, LOHARA, YAVATMAL-445 001, PH :445001-9822222579. 774.## RAMESH MOTORS (2024), GARDEN ROAD,

'4.## RAMESH MOTORS (2024), GARDEN ROAD, YAVATMAL, MAHARASHTRA-445 001, PH :445001-9422865222.

YEOLA

775.## BIJASANI AUTOMOTIVE (3041), PLOT NO 46, SURVEY NO 35/3, VINCHUR ROAD, YEOLA. DIST. NASIK, MAHARASHTRA, PH :423401-9423185025.

MANIPUR

IMPHAL

776.## BORDIN MARUTI GARAGE (4879), SANGAIPROU AIRPORT ROAD,, IMPHAL WEST, MANIPUR - 795001, , PH :795001-.

SENAPATI

777.## KOMUO MARUTI WORKS (4644), NH-2, MAO TAPHOU, SENAPATI HQ, SENAPATI DISTRICT, MANIPUR - 795106, PH :795106.8794109474.

MEGHALAYA

TURA

778.## MULTI MOBILE PRECISION (3222), AGLANGGRE, PO ARAIMILE, NEW TURA, MEGHALAYA, 794101, PH :794101-8974057627.

MIZORAM

CHAMPAI

779.# IRDIV- TC AUTO WORKS (5744), SVENTH DAY TLANG,ZOTLANG ROAD, NEW CHAMPHAI-CHAMPHAI, DISTRICT-CHAMPHAI, MIZORAM, PH: 796321-9862405715.

LUNGLEI

780.## LAWMA ENGINEERING WORKS (3125), , A O C SQUARE, LUNGLEI, MIZORAM-796 701, PH :796701-9436147141.

NAGALAND

DIMAPUR

781.** ERJO MOTORS (4871), EAST BLOCK, BURMA CAMP, NEAR BIBLE HOUSE, DIMAPUR, NAGALAND - 797112., PH :797112-9436004350

ODISHA

ANGUL

782.## ZEET AUTOMOBILES (1573), NALCO NAGAR, KANDASAR, ANGUL - 759 145, ORISSA, PH :759145-9437021285.

BALANGIR

783.## ASHIRWAD AUTOMOBILE WORKS (3177), DAMJI GARAGE, THIKADARPARA, , , BALANGIR-767 001, PH :767001-9437723452

BALASORE

784.## AUTO CARE (432), AT-BAMPADA, PO-CHHANPUR, CITY - BALESHWAR (BALASORE), ODISHA - 756056, PH :756056-9437051944.

35.* TEKNO INDIA (3666), D-2/9 INDUSTRIAL AREA, O.T. ROAD, BALASORE-756 003, (ORISSA), PH -756001-9861034990

BARBIL

786.## INDU MOTORS (3241), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA), PH:758035-9437718008.

BARGARH

787.## CARSCAN (1164), PLOT - 1/1 INDUSTRIAL ESTATE, RAILWAY STATION ROAD, BARGARH-768 028, PH :768028-9658010355.

BHUBANESWAR

788.## INDO JAPAN SERVICE (4936), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PO: PATRAPADA, BHUBANESHWAR-752019, ORISSA, PH:752019-9861095444. CUTTACK

89.* AUTO MATES (426), BIJU PATNAIK CHHAK, TULASIPUR, CUTTACK, ODISHA-753008, PH :753008-9437020646.

 DURGA SERVICE CENTRE (427), NEAR PALAMANDAP, BADAMBADI, PO -ARUNODAY MARKET, DISTT - CUTTACK, PIN-753012, PH : 753012-9437025762

DHENKANAL

791.## ANAND AUTOMOBILES (5449), ANAND NAGAR,IN FRONT OF TARINI MANDIR, DISTRICT - DHENKANAL, PIN - 759001, (ORISSA), PH:759001-9437414972.

JHARSUGUDA

792.## AUTO MECHANIKA (2638), S.H.-10 BEHERAMAL, JHARSUGUDA-768 203, ORISSA, PH:768203-9040380001.

PARALAKHEMUNDI

793.## GANAPATI AUTOMOBILES (3178), B. SITAPUR, PARALAKHEMUNDI, DIST. GAJAPATI-761 200, (ORISSA), PH:761200-9827176849.

PURI

794.## URMILA MOTORS (5040), HERA GOHIRI SAHI CHOWK, PURI -1, DISTRICT - PURI, (ORISSA), PH :752001-7008651960.

SAMBALPUR

795.# ANITA AUTO CARE (4834), SALIA BAGICHA, LIONS CLUB ROAD, KUMBHARPARA, SAMBALPUR-768001 (ORISSA), PH. 768001-9861248403.

SEMILIGUDA

796.## ASHUTOSH MOTORS (5035), MAIN ROAD.
NH-43, SEMILIGUDA, DISTRICT-KORAPUT,
(ORISSA),
PH :764036-9437405417.

PONDICHERRY

KARAIKAL

797.## MARUTI TECH (2669), NO.1,AKKARAIVATTAM,NAGAORE MAIN ROAD, OPP TO ONGC,KARAIKAL-609604, DISTRICT-KARAIKAL, PONDICHERRY, PH 609604.273788706

PUDUCHERRY

798.* A.P.P. MARUTI MOTORS (2670), PLOT NO.6 GUNDU SALAI ROAD, NATESAN NAGAR, NEAR 100 FEET ROAD, PONDICHERRY-605 005,

PH: 605009-7094449900.
799:## MARUTI MISSION (5067), 60 RAGAVENDIRA
NAGAR.KAMARAJ SALAI,
THATTANCHAVADY PONDICHERRY,
TINDIVANAM ROAD PONDICHERRY-9

PONDICHERRY

PH:605009-9786589000.
2.** S D K MOTORS (471), PLOT NO.12, 100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004, PH:605004-9843045689

PUNJAB

AHMEDGARH

801.## GAHIR AUTOMOBILES (2877), LUDHIANA MALER KOTLA ROAD, VILL. GOPALPUR CITY, AHMEDGARH, (PUNJAB), PH:148021-9417553627.

AJNALI

92.# VISHWAKARMA MOTORS (5666), NEAR VIMAL DHARAMKANTA - AJNALI, DISTRICT -FATEHGARH SAHIB, PUNJAB, PH :147301-9814528084

AMLOH

83.## BINDRA MOTORS (5844), NEAR DESH BHAGAT COLLEGE SONTI, AMLOH, DISTRICT-FATEH GARH SAHIB, PUNJAB, PH:147203-.

AMRITSAR

804.** HANSON AUTOMOBILES (1722), MAQBOOL PURA, G.T. ROAD, AMRITSAR, PH:143001-9815167669. 805.** JACKSON LUBRICANTS (364), 16 COURT

ROAD, NEAR RAVI GAS AGENCY, AMRITSAR-143 001, PH :143001-9814299944.

806.** KAPOOR'S KAR KARE (737), I/S MAHA LAKSHMI, CALICO PRINTING MILLS, OLD JAIL ROAD, AMRITSAR(PUNJAB)., PH: 143001-9814213113.

807.* SAGGU SERVICE STATION (733), HIDE MARKET, AMRITSAR-143 001 (PUNJAB)., , PH :143001-8968497779.

BANUR

808.## AMRIK SERVICE STATION (2433), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), PH :140601-9815591325.

BARNALA

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

809.## GAURAV MOTORS (4962), DHANAULA ROAD, BARNALA - 148101, DISTRICT SANGRUR, PUNJAB, PH :148101-9317512916.

810.* PUNJAB MOTOR GARAGE (6222), DHANAULA ROAD, BARNALA (PUNJAB), , PH :148101-9317512360

BHADSON

811.## FRIENDS MOTORS (2233), NABHA ROAD, BHADSON-147 202, DISTT. PATIALA, (PUNJAB), PH :147202-9815700778

BHATINDA

812.## KRISHNA AUTOS (4571), 40FT ROAD NAMDEV MARG NEAR INDRANI HOSPITAL ,BATHINDA (PUNJAB) 151001, PH :151001-9888671810.

813.** MODERN MOTORS (6234), OPP. T.V. TOWER, MANSA ROAD, BHATINDA, PH:151001-9814177075.

814.## SUPER AUTOMOBILES (6232), TINKONI, GONIANA ROAD, BHATINDA, PH:151001-9814036163.

BUDHLADHA

815.## JINDAL AUTOMOBILES (2147), NEAR P.S.E.B., BHIKHI ROAD, BUDHLADA-151 502, DISTT. MANSA, PH :151502-9815516964.

DERABASSI

BIOBAL AUTOMOBILES (1248), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, PH :140507-9914449711

DHURI

817.## SHIV MOTORS (1962), NEAR SDM OFFICE, SANGRUR ROAD, DHURI-148 024, PH :148024-9872851068.

DINANAGAR

818.## D.S. MARUTI SERVICE STATION (3333), G.T. ROAD, DINA NAGAR, DIST. GURDASPUR-143 531, (PUNJAB), PH :143531-9814873101

DIRBA

819.## PENTAGON MECHANICAL WORKS (2564), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB), PH:148035-9876543400.

DORAHA

FAZILKA

820.* FATEH MOTORS (2048), G.T. ROAD, DORAHA, (LUDHIANA), PH:141421-9814031784.

821.## BAHL MOTORS (6229), ABOHAR ROAD, FAZILKA-152 123, , PH :152123-9815700550.

FIROZPUR

822.## SUTLEJ AUTOMOBILES (3568), G.T. ROAD, FEROZEPUR CANTT., PIN-152 001 (PUNJAB), PH:152001-9417009985.

823.## BOBB MOTORS (4378), NEAR BSF COLONY, MOGA ROAD, FEROZEPUR CANTT, PH :152001-9781187142.

GIDDARBAHA

324.* JIWAN CAR CENTRE (3442), BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA-152 101, DIST. MUKETSAR (PUNJAB), PH. 152101-9779600086.

GOINDWAL SAHIB

825.## DASS MOTORS (8941), KAPURTHALA CHOWK, GOINDWAL SAHIB, DISTT. AMRITSAR-143 429, (PUNJAB), PH :143429-914699121.

GURDASPUR

826.* VIJAY SERVICE STATION (749), NEAR RAILWAY CROSSING, PATHANKOT ROAD, GURDASPUR, (PUNJAB), PH:143521-9814437637.

HOSHIARPUR

827.## JOGINDER MOTORS (2268), BYE PASS TANDA ROAD, HOSHIARPUR-146 001, , PH :146001-9803227000.

JAGRAON

828.## DHALIWAL AUTOMOBILES (2035), NEAR AJANTA PETROL PUMP, G.T. ROAD, JAGRAON DISTT. LUDHIANA, (PUNJAB), PH :142026-9814318600.

JAI ANDHAR

829.## CITY POINT SERVICE STATION (4528), AVTAR NAGAR ROAD, BEHIND T.V. CENTRE, OPP HOTEL REGENT PARK, JALANDAHR, PH :144003-9779613576

830.** KAAR KARES (725), G.T.ROAD, JALANDHAR, 144 001 (PUNJAB)., PH :144001-9569295585.

831.* KAPOOR MOTOR GARAGE (1649), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY, PH: :144623-9815040411.

832.* PUNJAB MOTOR GARAGE (8959), HMV CHOWK, NEW GRAIN MARKET ROAD, JALANDHAR CITY-144 008, PH :144008-9814675433.

KAPURTHALA

833.## T.S. WALIA MOTORS (267), MANSOORWAL, JALLANDHAR ROAD, KAPURTHALA, PH :144601-9357211525. 834.## AVTAR AUTO TECH (5329), KANJLI

ROAD,NEAR OCTROI, KAPURTHALA, PUNJAB, PH:144601-9888262026.

KURALI

835.## V K MOTORS (8943), CHANDIGARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNIJAB -140103, PH :140103-9814273873.

IAIRU

836.## VIKAS MOTORS (2777), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB, PH :140501-9888191444

LUDHIANA

37.** PUNJAB AUTO CENTRE (6221), OPP
TELEPHONE EXCHANGE, BHARAT NAGAR
CHOWK, LUDHIANA-141 001,
PH: 141001-9855117003

838.* REEHAL AUTOMOBILE SERVICES (1176), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA-141 010, PH :141015-9357110000

339.## SATNAM MOTOR WORKSHOP (4533), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA, PH:141003-9855228591.

840.## STAR AUTOS (4650), JALANDHAR BY PASS, G.T. ROAD, LUDHIANA, PH :141012-9216844220.

41.## VISHAL AUTOMOBILES (1262), G.T. ROAD, DHOLEWAL, LUDHIANA-141 003, PH :141003-9815206060.

MALOUT

842.## DELHI MOTORS (6225), TINKONI CHOWK, BHATINDA ROAD, MALOUT-152107, PH:152107-9876074061.

MANDI GOBINDGARH

843.## NATIONAL MOTORS (1070), G.T. ROAD, NEAR P & S BANK, MANDI GOBINDGARH-147 301, PH :147301-9317862000.

MANSA (PUNJAB)

844.## LOVEKESH ENTERPRISES (2162), NEAR N.M. COLLEGE, MANSA-151 505, (PUNJAB), PH :151505-9216524143.

MOGA

845.* GURU NANAK MOTOR REPAIRING WORKS (732), G.T.ROAD, MOGA-142 001 (PUNJAB)., , PH :142001-9914121387

MOHALI

846.** BENZ AUTO SCAN (5734), E-153,PHASE 7, INDUSTRIAL AREA -MOHALI, DISTRICT-MOHALI, PUNJAB, PH :160055-9876101806.

847.** MOHALI MOTORS (756), C-55 INDUSTRIAL AREA, PHASE-VI, S.A.S. NAGAR, MOHALI-160 055.

PH :160055-9781815959.

848.** SETHI MOTORS (4742), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PUNJAB, PH :160055-9814307002.

849.## UNIPOINT (5043), PLOT NO,593., INDUSTRIAL AREA PHASE-IX.MOHALI., DISTRICT - MOHALI, (PUNJAB), PH :160062-7814402838.

MORINDA

850.## SONY MOTOR PALACE (1077), SIRHIND ROAD, MORINDA-140 101, , PH :140101-9815612477

MUKERIAN

351.* MARSHAL SALES CORPORATION (5251), NEAR RADHA SOAMI SATSANG, PATHANKOT ROAD, MUKERIAN - 144211, DISTRICT HOSHIARPUR, PUNJAB, PH :144211-8283835926.

852.## NEW MODERN AUTOMOBILES (4437), G.T. ROAD, MUKERIAN, PUNJAB, PH : 144211-9463292013.

MUKTSAR

853.## MALWA MARUTI CENTRE (4764), OPP GOVT COLLEGE KOTKAPURA ROAD, MUKTSAR, PUNJAB, PH :152026-9814622081.

NAKODAR

854.## MEHTA MOTORS (3531), KHADDAR BHANDAR ROAD, NAKODAR-144040, PH :144040-9815600082.

PATIALA

5.** PARAS MOTORS (4778), PLOT NO. 25-A, NEAR HOTEL FLYOVER FACTORY AREA, PATIALA-147001, PUNJAB, PH :147001-9814089861.

RAJINDRA MOTORS (8924), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB, PH:147003-9316200335.

DATTI

PATTI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{*} B-Category Mass : Free & paid Service & Major repairs # D-Category Mass : Free Service & Minor repairs

857.## ANU AUTOMOBILE (2747), AMRITSAR ROAD, NEAR RADHA SWAMI SATSANG, PATTI DISTT. AMRITSAR, (PUNJAB), PH:143416-8575210003.

PHAGWARA

858.## SWAMI MOTORS (3774), (PAMMI W/SHOP), OPP. B.N. DUGGAL PETROL PUMP, G.T. ROAD, PHAGWARA DIST. KAPURTHALA, PH :144401-9815-107989

859.## VIVA MOTORS (4740), G.T. ROAD, PHAGWARA-144463, DISTRICT-KAPURTHALA, PUNJAB, PH :144463-9814310021.

QADIAN

860.# HI-TECH AUTOMOBILES (4945), NEAR VILLAGE NATHPURA, BATALA ROAD, QADIAN, DISTT. - GURDASPUR, PIN -143516, PUNJAB, PH: 143516-9877510294.

RAIKOT

861.## RANA SUPREME MOTOR GARAGE (3732), NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB), PH : 141109-9814265791.

RAJPURA

862.## NOOR MOTORS (3045), PATIALA ROAD, RAJPURA-140 401, (PUNJAB), PH :140401-9814507867.

RAMPURAPHUL

863.## BALAJI AUTOMOBILES (4443), BARNALA ROAD, RAMPURA PHUL-151103, DISTT BHATINDA, PUNJAB, PH :151103-9417172671.

864.## VIRDI MOTOR GARAGE (3046), BARNALA ROAD, RAMPURAPHUL-151 103, DISTT. BATHINDA, (PUNJAB), PH:151103-9872874175.

SAMANA

865.* CITY MOTORS (1867), P.B.NO.11, MAIN ROAD, SAMANA-147 101, DISTT. PATIALA (PUNJAB), PH:147101-9814221981.

SANGRUR

866.** RAKESH MARUTI SERVICE (6325), JIND -DELHI ROAD, NEAR E.S.I. DISPENSARY, SANGRUR-148 001, PH :148001-9815103944.

867.## SANGRUR MARUTI CENTRE (1632), PATIALA ROAD, OPP. MILITARY CAMPUS, SANGRUR-148.001, (PUNJAB), PH.148001-9417510111.

SIRHIND

868.## BADRI DHAM CAR SERVICE (1062), G.T. ROAD, SIRHIND-140 406, ,

869.## MALHOTRA MOTORS (4657), OPP. INCOME TAX OFFICE, SIRHIND, DISTT FATEHGARH SAHIB, PUNJAB, PH :140406-9815844008.

SULTANPUR LODHI

870.## HANDA MOTORS (2776), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB), PH :144626-9815623392.

SUNAM

871.## SUNAM AUTOMOBILES (3924), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SANGRUR, PH -148028-9417076315

TANDA

872.## MALWA AUTO CARE CENTRE (2073), G.T. ROAD BY-PASS, TANDA, DISTT. HOSHIARPUR, (PUNJAB), PH :144204-9814392103

TARN TARAN

873.## GURMEET MOTORS (4757), CHABHAL KHURD, TARN TARAN, DISTRICT-AMRITSAR, PUNJAB, PH :143301-8360197519.

ZIRA

874.## NEW AUTOMOBILES (5477), NEAR BYE PASS, FEROZPUR ROAD, ZIRA, TEHSIL ZIRA, DIST. FEROZPUR, PUNJAB - 142047., PH :142047-9463240231.

RAJASTHAN

ABU ROAD

875.## UNIQUE MOTORS (4923), MOUNT ROAD, AKRABHATTA, ABU ROAD-307 510, (RAJASTHAN), PH :307510-9929177781.

AJMER

876.## ASHOK AUTOMOBILES (1121), BYEPASS ROAD, PARVATPURA, IND.AREA, AJMER (RAJASTHAN), PH :305002-

ALWAR

877.## POOJA MOTORS (5439), POOJA MOTORS, NEAR AMARNATH PETROL , PUMP, DELHI ROAD , MUNGSKA - ALWAR , DISTRICT - ALWAR , RAJASTHAN , PH :301001878.## VERTEX AUTOMOBILES PVT. LTD. (1944), CHANDUKA BHAWAN, SWARG ROAD, ALWAR-301 001, PH :301001-.

BARMER

79.* VEW SERVICE (1238), S-181 & 182, RIICO, BARMER-344 001, (RAJASTHAN), PH:344001-.

BASSI

880.## VARDHANI MOTORS (5358), NEAR NALAYA
BASSI, DISTRICT - JAIPUR, RAJASTHAN,
PH: 303301-9950107203.

BEHROR

881.## K.L. INTERNATIONAL AUTOMOBILES (1763), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARDOPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN), PH :301701-

BHARATPUR

882.** CLASSIC MOTORS (2348), DEEG ROAD, KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN), PH :321001-9414026545.

BHILWARA

883.## NATIONAL SERVICE CENTER (4761), SANGANER COLONY, KOTA ROAD, BHILWARA-311001, RAJASTHAN, PH:311001-9829120285.

34.* QUICK SERVICES (3473), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311 001, PH :311001-

BHINIMAL

885.## GURJAR MOTORS (5567), RAMSIN ROAD,OPP PRADEEP PETROL PUMP, BHINMAL, DISTRICT - JALOR, RAJASTHAN, PH :343029-9414374962.

BHIWADI

886.** WHEEL-O-CITY (4246), E-7D (A) PHASE-1, NEAR RIICO CHOWK, BHIWADI, RAJASTHAN, PH :301019-

BIKANER

887.## GENERAL AUTOMOBILES (1123), RANI BAZAR, RAIWAY CROSSING, BIKANER (RAJASTHAN), PH : 334001-. 888.## VISHI MOTORS (5559), PLOT NO 55(A), I.A.

WISHI MOTORS (5559), PLOT NO 55(A), I.A RANI BAZAR-BIKANER, DISTRICT -BIKANER, RAJASTHAN, PH: 334001-.

889.## SHRI JI MOTORS (2174), OPP. KUMBHA STADIUM, KHOJA GATE, BUNDI, (RAJASTHAN), PH :323001-9990270676.

CHITTORGARH

890.## SISODIA MOTORS (5673), 31.0LD INDUSTRIAL AREA,BYE PASS ROAD, CHITTORGARH, DISTRICT - CHITTORGARH, RAJASTHAN, PH. 312001-9414110657.

СНОМИ

891.## SHREE LAXMI MOTORS (3072), MORIJA ROAD, CHOMU, JAIPUR-303702, (RAJASTHAN), PH:303702-9828160281.

CHURU

* ABS MOTORS (2978), JAIPUR ROAD, CHURU-331 001, (RAJASTHAN), PH :331001-.

DAUSA

893.## BALAJI MOTORS (4564), NEW MANDI ROAD, NEAR TRANSFORMER, DAUSA-303303, PH :303303-

DHAULPUR

94.** NARAYAN MOTORS (3345), G.T. ROAD, DHOLPUR, (RAJASTHAN), PH :328001-9116013413.

895.## NARSING SERVICE CENTRE (3074), NEAR JAGDISH TALKIES, BARI ROAD, DHOLPUR-328 001, (RAJASTHAN), PH :328001-9414026820.

DIDWANA

896.## SANTOSH AUTOMOBILES (5450), SANTOSH ATUOMOBILES, KUCHAMAN ROAD DIDWANA DISTRICT - NAGAUR (RAJASTHAN), PH :341303-9828833363.

DUDU

97.## NEETA AUTOMOBILES (4855), C/O NEW JAIN GUEST HOUSE, NH-8, JAIPUR AJMER ROAD, DUDU, RAJASTHAN, PH :303008-9667031098.

JAIPUR

898.## A-1 MOTORS (4856), D-28 MALVIYA NAGAR., INDUSTRIAL AREA JAIPUR., DISTRICT -JAIPUR, RAJASTHAN, PH:302017-9414047628.

899.* AMGI AUTOMOBILES (1938), AIRPORT CIRCLE, KOTA ROAD, JAIPUR-302 011, PH :302011-9828012009.

BUNDI

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

900.## AUTONITY JAIPUR (4852), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, RAJASTHAN.

PH:302019-9784377503.
01.** AUTONITY VKIA (8927), PLOT NO.6, GIRDHAR COLONY, SIKAR ROAD, JAIPUR-302 013.

PH:302039-902.## J.K. AUTOMOBILES (2058), 38 SUSHILPURA, AJMER ROAD, JAIPUR-302 007, PH:302007-

903.** JAI SHRI RAM AUTO SERVICE CENTRE (1140), OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR, RAJASTHAN,

PH: 302019-904.## KATARIA MOTORS (2577), 9-A NEMINAGAR VISTAR , AMRAPALI MARG, VAISHALI NAGAR, JAIPUR -302021, PH: 302021-

905.## KRISHNA AUTOMOBILES (5363), B-27 SUNDAR NAGAR. MANSAROVAR, JAIPUR, DISTRICT - JAIPUR, RAJASTHAN, PH :302020-9829968075

906.## LAXMI MOTORS (2576), OPP METRO PILLAR NO 34, GANGA JAMUNA CROSSING, NIRMAN NAGAR, JAIPUR, RAJASTHAN -302019.

PH :302019-9351551181.

907.* M. R. MOTORS (8933), PLOT NO. 120-121 & 125-126, VANE VIHAR, 200FT BYE PASS, JHOTWARA, JAIPUR (RAJASTHAN),

PH:302012-.
908.* RIGHTWAYS CO. (1131), KISHANPOLE
BAZAR, JAIPUR,

PH: 302002-.
909.** SAISHA MOTORS (1764), MAIN SHIPRA
PATH, OPP. SECTOR 93, AGARWAL FARM,
MANSAROVAR, JAIPUR-302 020,
PH: 302020-.

910.* SERVICE CENTRE (1139), OPP. TOURIST HOTEL, M.I. ROAD, JAIPUR-1, PH:302001-9351551181.

911.* SHARP MOTORS (2032), J-3 HIMMAT NAGAR, MAIN TONK ROAD, GOPAL PURA CIRCLE, JAIPUR-302 004,

PH:302004-9694420002. 912.## SUPREME MOTORS (8952), A-25 ASSAM MANSION, TRANSPORT NAGAR, JAIPUR-302 003,

PH: 302003-7737279332.

913.## TOSHNIWAL AUTOMOBILES (3475), 131
SHRI GOPAL NGAR, GOPALPURA BYEPASS,
JAIPUR, (RAJASTHAN),
PH: 302015-9887553836.

JAISALMER

914.## R.R. AUTOMOBILES (1473), OPP. GEETA ASHRAM, JAISALMER-345 001, (RAJASTHAN), PH :345001-8619638276.

JHUNJHUNU

915.## VISHWAKARMA AUTOMOBILES (3071), HPC DEALER, RANI SATHI ROAD, JHUNJHUNU-333 001, (RAJASTHAN), PH :333001-9461058839

JHUNJHUNUN

916.## DADHIMATI MOTORS (1648), OPPOSITE RSEB OFFICE, BAGAR ROAD, JHUNJHUNU, (RAJASTHAN), PH :333001-9587007122.

JODHPUR

917.## DEORA MOTORS (5353), UPPER UNDER BRIDGE PAOTA 'C' ROAD, JODHPUR, DISTRICT - JODHPUR, RAJASTHAN, PH :342006-9829028069.

918.* P.D. MOTORS (3340), NATIONAL HIGHWAY NO. 62, NEW PALI ROAD, NEAR JHALAMAND CIRLCE, JODHPUR, RAJASTHAN - 342005., PH :342005-

KALWAR

919.## ROLANIYA MOTORS (5554), KALWAR MAIN TIRHIA ,NEAR KHARBAS, NEAR PETROL PUMP-JHOTWARA ROAD, DISTRICT -KALWAR, RAJASTHAN, PH:303706-9983111634.

KISHANGARH

920.## RADHA SWAMI AUTOMOBILES (440), NEAR AJMER ROAD - BUS STAND

> , KISHANGARH., DISTRICT AJMER, RAJASTHAN , PH :305801-9252059798.

кота

921.## FRIENDS AUTOMOBILES (), KOTA BUNDI ROAD, NH 12, OPP, HOTEL MENAL RESIDENCY, KOTA, PH :323021-9829529479.

KOTPUTLI

922.## VIKAS MARUTI SERVICE CENTRE (4970), NH-8, NEAR MEENA GAS AGENCY GODOWN, KOTPUTLI - 303108, RAJASTHAN, PH :303108-9929383045.

KUCHAMAN

923.## DALUKA AUTO SALES (4565), NEARBY SHARDA PALACE HOTEL,, KUCHAMAN BYE PASS,, KUCHAMAN CITY, 341508, PH :341508-9414433240.

MAKRANA

924.## GEHLOT MOTORS (454), OPPOSITE TO G.S.S, MANGLANA ROAD, MAKRANA, RAJASTHAN,

PH:341505-9829024687.

MERTA

925.## DELUX CAR SERVICE CENTRE (3856), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUR

PH:341510-9414004543.

NAGAUR

26.* CLASSIC AUTOMOBILES (1179), DIDWANA ROAD, (DELHI GATE), NAGAUR-341 001, (RAJASTHAN), PH :341001-9672501234

NFWAI

927.## HEENA MOTORS (5568), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT -TONK, RAJASTHAN, PH :304021-94142/8066.

PILANI

928.## MARUTI CARE CENTRE (3073), RAJGARH ROAD, SHANTI NAGAR, PILANI DISTT. JHUNJHUNU, RAJASTHAN-333 031, PH :333031-.

929.# MARUTI CARE CENTRE (), RAJGARH ROAD, SHANTI NAGAR, PILANI DISTT. JHUNJHUNU, RAJASTHAN-333 031, PH :333031-

PINDWARA

930.## RUNEJA MOTORS (5758), NH-14,OPP PATHIK MIDWAY , PINDWARA-307022, DISTRICT-SIROHI, RAJASTHAN, PH :307022-9610451492.

RAINWAL

931.## MAHALAXMI AUTO CARS (5566), OPP ROHINI NAGAR IST, PHAGU ROAD -RAINWAL, DISTRICT - JAIPUR , RAJASTHAN, PH :303904-

RAJSAMAND

932.## VIPUL AUTOMOBILES (2170), NH -8, BHAGWANDA, , BEHIND GOVT. PRIMARY SCHOOL, , RAJSAMAND, RAJASTHAN, PH :313333-

RAWATBHATA

933.## APNA MARUTI GARAGE (5940), OPP. RAM TEKRI MANDIR,PRATAP MARKET, MAIN ROAD,RAWATBHATA-323305, DISTRICT-CHITTORGARH, RAJASTHAN, PH:323305-

SIKAR

934.** RAJ AUTOMOBILES (8949), NEAR RTO ROAD, JAIPUR JHUNJHUNU BYEPASS, SIKAR, DISTRICT - SIKAR, RAJASTHAN, PH :332001-.

SRI MADHOPUR

935.## BHARAT MOTORS (5757), WARD NO 4,BYE PASS ROAD, SRI MADHOPUR-332715, DISTRICT- TONK, (RAJASTHAN), PH :332715-9251377020

SRIGANGANAGAR

936.## ROHIT UDYOG (1132), 75 K-BLOCK, SRIGANGANAGAR, , PH :335001-.

937.* NAGPAL MOTORS (3341), NAGPAL COMPLEX, SUKHARIA CIRCLE, SRIGANGANAGAR-335 001.

PH:335001-9214094222. SUJANGARH

938.## SHRI CHARBHUJA MARUTI (4924), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN, PH :331507-9828118827.

SURATGARH

939.## ROHIN SERVICE STATION (2646), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN), PH: 335804-.

TIJARA

940.## M D MOTORS (5875), ALWAR ROAD,NEAR BOLLYWOOD FARM, TIJARA-, DISTRICT-ALWAR, RAJASTHAN, PH :301411-9351607080.

TONK

941.## SUMIT MARUTI (4566), G 1 – 103, RIICO INDUSTRIAL AREA, JAIPUR ROAD, TONK-304001, RAJASTHAN, PH :304001-9214494900.

UDAIPUR (RAJASTHAN)

942.** ALOK AUTOMOBILES PVT. LTD. (1977), B.N. COLLEGE PREMISES, OPP. DALAL PETROL PUMP, SEVASHRAM ROAD, UDAIPUR, PH. 313001-9414166305.

3.** SHREE SAI CAR CARE (2376), PUNJAWATI, PULLA, UDAIPUR-313 001, PH:313001-9414167605.

TAMIL NADU

AMBUR

944.## MARUTHI MOTORS (2864), 10-C M.C. ROAD, AMBUR-635 802, (TAMIL NADU), PH:635802-.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

ARAVAKURICHI

GOWRI MARUTI (5570), OPPOSITE IOCL PETROL PUMP NH-7, ARAVAKURICHI DISTRICT - KARUR, TAMILNADU. PH:639201-9994818043.

ARCOT

946.## HARI AGENCIES (468), #27, ANNA SALAI, ARCOT . TAMIL NADU -632503. PH:632503-

ATTUR

947.## GANESAA MOTORS (4538), 1/1-D ARANGA BALA NAGAR, SALEM CUDDLORE MAIN ROAD, NARASINGARAM, ATTUR-636108 (TAMIL NADU). PH:636108-9443273866

AVINASHI

948 ## K P K AUTOMOTIVE (5547). SF NO 460/2 TIRUPPUR MAIN ROAD AVINASHILINGAMALAYAM.AVINASHI-641654. DISTRICT-COIMBATORE, TAMILNADU, PH:641654-9443301732

RHAVANI

949.## CAR ZONE AUTO SERVICE (5332), METTUR MAIN ROAD. NATARAJAPURAM BHAVANI. DISTRICT - ERODE . TAMILNADU. PH:638301-9842085670.

CHENGLEPUT

950.## AMMA AUTOMOBILES (2941), 57-A/1 THIRUKAZHUKUNDRAM ROAD. CHENGALPATTU-603 002. (T.N.). PH:603002-

CHENNAI

951 ## ABIRAMI MOTORS (5131), 6,ANNA NEDUMATHAI, CHOOLABEDU. CHENNAL-600094 TAMII NADU. PH:600094-9840017558.

952.## AUTO TECH (3445), NO.6 G.S.T. ROAD. KAMATCHI COLONY, SANATORIM. CHENNAI-600 040.

PH:600047-9941019455. EASVARI MOTORS PRIVATE LIMITED (1431), W-110 ANNA NAGAR, CHENNAI-600 040. .

PH:600010-9840855655 KARS KARE SERVICE CENTRE (2579), 648 T.H. ROAD, TONDIARPET, CHENNAI-600 081, PH:600081-9841097259.

MARUTI NEEDS (2531), NO.2 PARK ROAD, PADI. CHENNAI-600 050. PH :600050-9940099500.

NSK MARUTI (4975), 2/547, EAST COAST ROAD, NEELANKARAI, CHENNAI, TAMIL

PH:600115-9841047232

957.* P.A. SERVICE STATION (2346), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR. NEAR 100 FEET ROAD, AGRAHARAM KORATTUR, CHENNAI-600 076. PH:600076-9840378025.

SWAMY AUTOMOBILES (456), 23 CASA MAJOR ROAD EGMORE CHENNAL-600 008 PH -600008-9840891916

VAISHALLMOTORS (4529), 4/577 RAJIV STREET, OLD MAHABALIPURAM ROAD. KOTTIVAKAM, CHENNAI-600041. PH:600041-9840138888

WHEELS AUTO (469), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI-600 020 PH:600020-9840138888.

961.## EASVARI MOTORS PRIVATE LIMITED (2236). AC-123.4TH AVENUE SHANTHY COLONY, ANNA NAGAR-CHENNAI, CHENNAI-600040. MAHARASHTRA. PH:-9840820212

PERFECT MARUTI CARE (4632), NO. 51/26, 4TH MAIN ROAD, RAJA ANNAMALLI PURAM. CHENNAI-600028

PH:600028-9789974300 O.M.S. MOTORS (P) LTD. (2140), NO.27 VELACHERRY MAIN ROAD, RAM NAGAR NORTH MADIPAKKAM CHENNAI-600 091 (TAMIL NADU). PH:600091-9444081390

CHIDAMBARAM

HI-TECH MARUTI (3231), NO.45.SITHIVEL NAGAR SALIYANTHOPPUL BYF PASS ROAD.CHIDAMBARAM-608001 . DISTRICT-CUDDALORE . TAMILNADU. PH:608001-9585538671.

COIMBATORE

965.## GURU AUTO GARAGE (4965), 2/98, IRUGUR ROAD, NEAR BSNI, OFFICE. CHINNAMPALAYAM, COIMBATORE, TAMIL NADU.

PH:641062-9843256247 LOTUS AUTOMOBILES (4758), 1647-A AVINASHI ROAD, HOPE COLLEGE. PEELAMEDU, COIMBATORE-641004 (TAMILNADU).

PH:641004-9842265133. 967.* SOUTH INDIA MOTORS (MARUTI) (4752), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE-641014 (TAMIL NADU), PH:641014-9843027601.

TDK AUTOMOBILES PVT. LTD. (160), 9A 968.## NEHRU STREET, B.R. PURAM, AVINASI ROAD, PEELAMEDU, COIMBATORE-641 004. PH:641004-9952300666.

COONOOR

CUDDALORE

969.## SHANTHI AUTO CARE (6054), FIGURE OF 8 ROAD COONOOR-643101 NII GRIS (TAMII NADU).

PH:643101-9443273888.

970.## SUNTAR AUTOS (2134), KTR BUILDINGS. CHIDAMBARAM ROAD, CUDDALORE-607 PH:607002-9842345690.

CUMBUM

971.## SRI BALAJI MOTOR WORKS (3139). 221-A 1/3 THENI ROAD, NEAR REGULATED MARKET, UTHAMAPURAM, CUMBUM-625 516

PH:625516-9994169309.

DINDIGUL

MAGNUM MOTORS (1241). MEENACHINAICKEN PATTY, NH-7 BYE-PASS ROAD, DINDIGUI -624 002, (TAMIL NADU). PH:624002-9842231340.

ERODE

973.** SRI KRISHNA AUTOMOBII E ENTERPRISES (2320), 184, CAUVERY ROAD, ERODE -638003, TAMIL NADU

PH:638003-9842721805 974.** SRI SAKTHI CARE (8937), 13, NGGO COLONY MAIN STREET, ERODE, TAMILNADU, 638009, PH:638009-9597726311.

GADALUR

975.## GREENWAY MARUTI SERVICE CENTER (5471), KALAMPUZHA, D.O. NO 12/59-3. GUDALUR, DISTRICT - NILGIRLS, TAMILNADU. PH:643212-9443603815.

GOBICHETTIPALAYAM

976.## HI-TEC AUTO GARAGE (2426), 426.ASIRIYAR NAGAR, KULLAMPALAYAM POST, ERODE MAIN ROAD, GOBICHETTYPALAYAM-638 476. PH:638476-9842447725.

HOSUR

977.## AUTO SCAN (2070), DOOR NO. OLD NO.-77. NEW NO. 58 -D2. BANGALORE ROAD, NEW VIVEK GARDEN, HOSUR TALUK, KRISHNAGIRI DISTRICT, TAMILNADU -PH:635109-8122904091.

978.** BALAJI MOTORS (5136), PLOT NO. 11 & 18. MARUTHI NAGAR, KRISHNAGIRI MAIN ROAD HOSUR TAMII NADU - 635109 PH:635109-9842755402.

979 ## SRI VINAYAKA MOTORS (3848), 5/2C/1 (OPP TAMIL NADIJ HOTEL) BYE PASS ROAD HOSUR

PH:635109-9443245096.

MARUTI MOTORS (4253), SURVEY 309/5-A. PUDUPATTINAM VILLAGE PANCHAYAT. THIRUKAI UKUNDRAM TAI UKA KANCHEEPURAM, KALPAKKAM-603102. PH:603102-9443366535.

KANCHEEPURAM

KALPAKKAM

SVS MARUTI SERVICE CENTRE (5466), NO1 MILITARY ROAD, SEVILIMEDU, OPP BRINDAVANAM NAGAR, KANCHIPURAM, TAMILNADU 631501. PH:631501-.

KANGAYAM

982.## SRI ARUN CAR CARE (3949), COIMBATORE ROAD, NEAR IBP PETROL BUNK. KANGAYAM - 638701. PH:638701-9443329526

KARAIKUDI

983.## SURABI MOTORS (2340), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630 PH:630106-9443351484

KARUMATHAMPATTY

984.## SIVAN MOTORS (3832), OPP IBP NH47, NEAR KONGU VELLALAR SCHOOL. KARUMATHAMATTY. PH:641659-9842231819

KARUR

SRI SAKTHI AUTO CARE (2532), 3/291 COVAI ROAD, VADIVEL NAGAR L.N.S. POST, KARUR-639 002. (TAMIL NADU). PH:638009-9842426585.

KOVILPATTI

986 ## CLASSIC AUTOMOBILES (6037), 3/531 - B. TIRUNELVELI TO MADURAI BYPASS ROAD, NH-7, INAM MANIYACHI, KOVILPATTI, TAMIL NADU- 628502... PH:628502-9442552000.

KRISHNAGIRI

987.## THIRUTHANIGAI MOTORS (2427). SALEM-CHENNAL BYE PASS ROAD. KRISHNAGIRI-635 001, (TAMILNADU). PH:635001-9842129890.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass: Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

KUMBAKONAM

988.## SRI SAKTHI MOTORS (4330), #7/228, PULIYAMPETTTAI, MAYILADUTHURAI MAIN ROAD, KUMBAKONAM, TAMILNADU -612103, PH :612103-9443131513.

MADURAI

989.## FRIENDLY MOTORS (3141), 32 PALAM STATION ROAD, NEAR LIC BUS STOP, SELLUR, MADURAI-625 002, PH: 625002-9842714047. 990.## SHALOM MOTORS (4629), THENI MAIN

990.## SHALOM MOTORS (4629), THENI MAIN ROAD, ACHAMPATHU, NEAR BHARAT PETROLEUM, MADURAI-625019, PH: 625019-8754033244.

MADURANTHAKAM

991.## MARUTHI MOTORS (6036), NO.33,G.S.T. ROAD,KARUNGUZHI, MADURANTHAKAM-603303, DISTRICT-KANCHIPURAM, TAMILNADU, PH: 603303-9443354073.

MAYILADUTHURAI

992.## R.M.S. MARUTI AUTO (2237), 53/54 MAHADHANA STREET, MAYILADUTHURAI-609 001, (TAMIL NADU), PH :609001-9842922685.

NAGAPATTINAM

993.* MARUTI-TECH (1671), PUTHUR ROUNDANA E C R ROAD, NAGAPATTINAM, , PH :611001-9842653718.

NAGERCOIL

994.* SREE GANAPATHY MOTORS (1629), NO.12 JAWAHAR STREET, R.V. PURAM, NAGERCOIL-629 001, PH: 629001-9345322333.

NAMAKKAL

995.## ARUNA MOTORS (1461), MARUTI SERVICE CENTRE, OPP. N.S.R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001, PH :637001-9842775761.

NEYVELI

996.## SRI MARUTHI MOTOR SERVICE (1458), 8-A
DAILY BAZAR, BLOCK-19, NEYVELI-607 803,
PH:607803-9443203191.

PALLADAM

997.## CHENDU MOTORS (4333), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST, PH::641662-9842225058.

PALLAVARAM

998.* VBK MOTORS (4463), OLD NO. 99, NEW NO. 91, G.S.T ROAD, ALVITONE ESTATE, (BEHIND LAKSHMI THEATRE), PALLAVARAM, CHENNAI-600043, PH.600043-9841425030.

PARAMAKUDI

9.# SIVA AUTOMOBILES (4542), NEAR SRIKUMARA SUBRAMANIYA SWAMY TEMPLE, OPP FIRE STATION, MADURAI RAMESWARAM ROAD, PARAMAKUDI-623707 RAMNAD DIST, PH 462707.9388405305

PARAMATHIVELUR

1000.## RADHA CAR CARE (5828), NO 96/1,BYE PASS ROAD,VETTUKATTU PUDAR, PIRIVUR ROAD,PARAMATHIVELUR-638182, DISTRICT-NAMAKKAL, TAMILNADU, PH :638182-8608090140.

PERUNDURAL

1001.## PRIYAM AUTOMOBILES (3036), 139 KOVAI MAIN ROAD, PERUNDURAI-638 052, (TAMIL NADU), PH :638052-

POLACHI

1002.* J D & COMPANY (6055), COIMBATORE ROAD, POLLACHI-642 002, , PH :642002-9443565785

RAJAPALYAM

1003.## RAJA MOTORS (4128), 52/ A, SRI
JANAKIRAM MILLS ROAD, SRIVILLIPUTTUR
MAIN ROAD, RAJAPALAYAM,
VIRUDHUNAGAR- 620117,
PH 626117.7094597178

RASIPURAM

1004.## ROYAL AUTO CARS (4052), 5/120 NH-7.
SALEM MAIN ROAD, NEAR TSTC DEPOT,
MUTHUKALIPATTI POST, RASIPURAM
TALUK, NAMAKKAL DISTRICT-637408,
PH: 637401-9442320339.

RED HILLS

1005.## UNIQUE CAR CARE (5868), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLAIVOYAL, CHENNAI, TAMILNADU - 600062, PH :600062-

SALEM

1006.## MEENATCHI AUTO (2940), 57
KALARAMPATTY MAIN ROAD, (NEAR DEVI
THEATRE), SALEM-636 015, (T.N.),
PH :636015-

1007.** NATSUN MOTORS (6029), NO.220,BANGALORE BYE PASS ROAD (NH-7), KODALAMPATTY,SALEM-636010, DISTRICT-SALEM, TAMILNADU, PH:636005-9842704499.

SANKAGIRI

1008.## TECH ZONE AUTO SERVICE (2640), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303, PH :637303-.

SANKARANKOIL

1009.## RAJA MOTORS (4555), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL-627756, PH :627756-9994409363.

TENKASI

1010.## CARE ZONE (3766), 5/165, MADURAI ROAD, KUTHUKKAL VALASAI, TENKASI, TAMILNADU - 627803, PH -627811-9842/133134

THANJAVUR

1011.## R K P MOTORS (5238), 121/7.THANJAVUR KUMBAKONAM, HIGHWAY PALLIAGRAHARAM, THANJAVUR, TAMILNADU, PH :613003-

THENI

1012.## SATHURAGIRI MOTOR WORKS (1650),
 3-1-31 TO 36, CUMBUM ROAD, THENI-625
 531, (TAMIL NADU),
 PH :625531-9047033678.

TIRUCHENDUR

1013.* CLASSIC AUTOMOBILES (4355), 269/2, V.K.N NAGAR, PALAYAMKOTTAI ROAD, TIRUCHENDUR-628215, PH :628215-8807755140.

TIRUNELVELI

1014.## FRIENDS INDIA AUTO CLINIC (5030), NO.16 D.BYE PASS ROAD, VANNARAPETAI, TIRUNELVELI 627003, TAMILNADU, PH :627003-9786606111.

TIRUPUR

1015.** LAKSHMI MOTORZ (2461), 4/146 PALLADAM ROAD, OPP. LAKSHMI KALYANA MANDAPAM, TIRUPUR-641 604, (T.N.), PH: 641605-9842377959.

TRICHY

1016.* VYTHES MOBILE PARK (443), 8/6 TANJORE ROAD, THIRUCHIRAPALLI-620 008, , PH :620008-6383353727.

UDAMALAPET

1017.* S.R.K. MOTORS (1456), C-109 GANDHI NAGAR, UDAMALAPET-642 154, COIMBATORE (DT.), (TAMIL NADU), PH :642126-9843011520.

VELLORE

1018.* MARUTI AUTO SERVICE (2844), 106 (OLD NO.: 78), KATPADI ROAD, GANDHI NAGAR, VELLORE-632 006 (T.N.), PH: 632006-9843093422.

VILLUPURAM

1019.## RAGAVENDRA MOTORS (2361), 2/3 MADRAS TRUNK ROAD, VILLUPURAM-605 602, (TAMIL NADU), PH -605602-9244555860

VRIDDHACHALAM

1020.# VISHWA MARUTI CARE CENTER (8934), NO412,PERIYAR NAGAR (NEAR FIRE SERVICE S, STATION)VRIDDHACHALAM -606001 , DISTRICT - CUDDALORE , (TAMILNADU), PH :606001-9842246092.

TELANGANA

ADILABAD

1021.## MAHA LAXMI AUTOMOTIVES (2240), NH# 7 OPP. H.P. PETROL BUNK, TIRUPALLY, ADILABAD-504 001, (A.P.), PH :-9000345313.

BHADRACHALAM

1022.## SRI VENKATARAMANA AUTO CARE (2831), MARUTI SERVICE STATION, OPP. COLLEGE GROUNDS, GOLLAGATTA ROAD, BHADRACHALAM-507 111 (A.P.), PH:507111-9290792269.

GAJWEL

1023.# VIJAY MOTORS (4864), HYDERAAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIMNAGAR, PREGHAPUR - GAJWL, TELANGANA, PH:502278-9849883665.

HYDERABAD

1024.## ARYAN MOTORS (3264), D.NO.17-1-382/K/5 & 6, CHAMPAPET SAIDABAD, SAGAR ROAD, HYDERABAD, PH :500059-9246155464.

1025.## COSMO AUTO CLINIC PVT. LTD. (1045), PLOT NO 1, RD NO 5., CHANDRAPURI COLONY, LB NAGAR, HYDERABAD - 500074, PH :500074.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1026.## PISTONS & SPANNERS (2766), 2-3-37 MAHARANA PRATAP FUNCTION HALL, AMBERPET, HYDERABAD-500 013, PH:9990649504.

1027.## SERWELL AUTOMOBILES (5234), PLOT NO 202.203.ADITYA NAGAR. OPP, JNTU .KUKA TPALLY.HYDERABAD, TELANGANA, PH :500085-9490105147.

JAGTIAL

1028.## PARAMESHWARA MOTORS (3851), OPP P R
OFFICE, DHAROOR CAMP, JAGTIAL 505327,
DT. KARIMNAGAR (A.P.),
PH :505455-9912664659.

KARIMNAGAR

1029.## MYTRI MOTORS (5152), 8-6 188.KOTHI RAMPUR, KARIMNAGAR, DISTRICT -KARIMNAGAR , TELANGANA, PH :505001-9441475357.

1030.** PUSHPAK MOTORS (1032), KOTHI RAMPUR, HYDERABAD ROAD, KARIMNAGAR - 505 001 (A.P), PH :505001-9849489431.

KHAMMAM

1031.## EXCEL AUTO CARE (1043), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM -507001, , PH :507001-9848156363.

KODAD

1032.# SAI KAKATIYA SERVICE STATION (4664), SURYAPETA ROAD, OPPOSITE LORRY ASSOCIATION BUILDING, KODAD-508206, DISTRICT-NALGONDA (TELANGANA), PH :508206.9848057813.

MAHABUB NAGAR

1033.## SRI AYYAPPA MARUTI CLINIC (3941), OPP HOSPITAL, HYDERABAD ROAD, YEMUGONDA, MAHABUB NAGAR (TELANGANA), PH:509002-9440569259.

MANCHERIAL

1034.## PARVATHI MOTORS (4129), 4-53 BPL ROAD, MANCHERIAL, DISTRICT ADILABAD, TELANGANA., PH: 504208-9885554888.

MIRYALGUDA

1035.## GANESH MOTORS (4536), D.NO. 6-366, P.V. COMPLEX, NALGONDA ROAD, MIRYALGUDA, NALGONDA DISTT (TELANGANA), PH:508207-9393900666.

NALGONDA

1036.# SRIRAM AUTHORISED SERVICE STATION (4627), HYDERABAD ROAD, OPP. SUB STATION, NALGONDA, TELANGANA, PH :508001-9848378133.

NIZAMARAD

1037.## PRIYA SERVICING (1771), C/O TIRUMALA CHITRA MANDIR, HOUSE NO 1-9-833, PHULANG ROAD, NIZAMABAD-503 003 (A.P.), PH :-9948034523.

RAMAGUNDAM

1038.## ALI AUTOMOBILES (2849), NEAR TV RELAY STATION, NTPC JYOTHINAGAR, RAMAGUNDAM-505 215, DISTT. KARIMNAGAR (TELANGANA), PH :505208-9848219102

SECUNDERABAD

1039.## ANNAPURNA MOTORS (2947), # 6-3-23/5 JAYANAGAR COLONY, NEAR MEKALMANDI, NEW BHOIGUDA, SECUNDERABAD-500 080, PH :-9849061136.

SIRSILLA

1040.# SATHVIKA MOTORS (5649), KARIMNAGAR ROAD, OPP HP PETROL PUMP, SIRSILLA-505301, DISTRICT - KARIMNAGAR, TELANGANA, PH :505301-9490284726

SURYAPET

1041.## SAI GLOBAL AUTO SERVICES (4550), OPP.
AYYAPPA SWAMY TEMPLE, BY PASS ROAD,
NH-9, SURYAPET-508213, TELANGANA,
PH :508213-9848076108.

WANAPARTHY

1042.# SMC MOTORS (5658), K.K.T. ROAD, BASAVANNA GADDA, WANAPARTHY, DISTRICT -MAHABUBNAGAR, TELANGANA, PH :509103-9440142927.

WARANGAL

1043.## VAISHNAVI AUTOMOBILES (470), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL-506 001, PH -9849002528

TRIPURA

AMBASSA

1044.## CHAKRABORTY MECHANICAL WORKSHOP (5351), NH-44.NEAR ZILLA PARISWAD OFFICE , AMBASSA, DISTRICT - DHALAI, TRIPURA, PH.799289-9436136054.

BELONIA

1045.## JOY UDYOG (3977), KALINAGAR, BELONIA, SOUTH TRIPURA 799155, PH ·799155-9446799415.

DHARMANAGAR

1046.## RAJ AUTOMOBILES (2868), STATION ROAD, RAJABARI, DIHARMANAGAR, TRIPURA (NORTH)-799 253, PH :799253-9436477578.

UDAIPUR

1047.## SUR UDYOG (3963), TOWN FULKUMARI NO. 1, BRAMHABARI, P O UDAIPUR COURT, UDAYPUR, TRIPURA SOUTH, PH :799120-9862276650.

1048.## RAMKRISHNA MARUTI ENGINEERING (4865), RAJARBAGH MOTOR STAND, UDAIPUR WEST-799120, DISTRICT-TRIPURA SOUTH, PH:799120-9436135422.

UTTAR PRADESH

AGRA

1049.## GAYATRI MOTORS (4730), 101-102,SHASHI NAGAR,CHANDRAKALA-, COMPLEX.SIKANDRA BODLA ROAD, AGRA-282008, (UTTAR PRADESH), PH :982007-8077788331

ALIGARH

1050.## KAPIL AUTOMOBILES (1344), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), PH :202002-9837007636.

1051.## KAR SCAN CENTRE (449), RAMGHAT ROAD, KWARSI, ALIGARH-202 002, PH :202002-8937000111

ALLAHABAD

1052.## ANSHUMAN AUTOMOBILES (4933), 6D, DAUD NAGAR, OPPOSITE BAIDYANATH COMPANY, MIRZAPUR ROAD, NAINI, ALLAHABAD, UTTAR PRADESH - 211008, PH :211008-9335138119.

1053.** KAY CEE AUTOMOBILES (2155), 72/60 L.B. SHASTRI MARG, ALLAHABAD, , PH :211001-9415317225.

1054.## TRIBENI MOTORS (2539), 23 KANPUR ROAD, ALLAHABAD-211 001, (U.P.), PH :211001-9415324244

ALMORA

1055.## AROMA AUTOMOBILES (3149), THE MALL, ALMORA, (UTTRAKHAND), PH :263601-9412093410.

AMROHA

1056.## SUNNY MOTORS (2165), BIJNORE ROAD, J.P. NAGAR, AMROHA-244 221, (U.P.), PH :244221-9412248884.

AURAIYA

1057.** SINGH AUTOMOBILES (5248), KANPUR ROAD.AURAIYA , DISTRICT - AURAIYA , PIN - 206122, UTTAR PRADSH, PH :206122-9808403258.

1058.## VINAYAK AUTOMOBILES (2842), OPP. NTPC COLONY IIND GATE, PHAPHUND ROAD, DIBIYAPUR, AURAIYA (U.P.), PH -9412182060

BABUGARH

1059.* GURUNANAK AUTOMOBILES (5977), NH- 9, VILL SIMROLI, BABUGARH CANTT., DISTRICT- HAPUR, UTTAR PRADESH, PH: 245102-.

BAGHPAT

1060.# KAUSHIK MOTORS (4473), PLOT NO 525, DELHI SAHARANPUR ROAD,PALI, BAGHPAT, UTTAR PRADESH 250609, PH :250609-9837800582.

BALRAMPUR

1061.## D M AUTOMOBILES (3933), NEAR S.P.AWAS, GONDA ROAD, BAHADURAPUR, DISTT: BALRAMPUR, UTTAR PRADESH - 271201, PH :271201-9415071840.

BANDA

1062.## CHAUDHARY TRACTORS (2249), STATION ROAD, BANDA-210 001, (U.P.), PH :210001-9415143033.

BARAUT

1063.## HIGH TECH ENGINEERS (4821), 216/5 SAHARANPUR ROAD, BARAUT, , PH :250611-7302352660.

1064.## SIGNET AUTOMOBILES (4441), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P), PH :250611-8218779429.

BAREILLY

1065.## S P MOTORS (5746), 383,SURKHA CHAWNI,NAINITAL ROAD, BAREILLY-243001, DISTRICT-BAREILY, UTTAR PRADESH, PH: 243001-9568033111.

1066.** SAVVY MOTORS (4559), BALWANT MOTORS BUILDING, 131 CIVIL LINES, NEAR DAINIK JAGRAN, BAREILLY (UTTAR PRADESH), PH:243001-9837044991.

BIJNOR

1067.## SARDAR MOTORS (4671), DELHI HIGHWAY ROAD , 4TH KM MILE STONE , BIJNOR -246701, UTTAR PRADESH, PH :246701-9837265076.

BULANDSHAHR

D-Category Mass : Free Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

1068.## DELHI AUTO ENGRS (1351), PLOT NO-106, NEAR TAFE TRACTOR AGENCY, NEAR CHANDPUR VILLAGE, DELHI ALIGARH BYPASS ROAD, BULANDSHAHR (UP) 203001., PH :203001-

CHANDPUR

1069.## BHARTI AUTOMOBILES (1777), DHANORA ROAD, CHANDPUR, DISTT. BIJNOR, (U.P.), PH :246725-9837380551.

CHITRAKOOT

1070.* SHYAM MOTORS (4367), BUS STAND, KARWI, CHITRAKOOT-210205, PH:210205-9415143900.

DADRI

1071.## NATIONAL MOTOR AGENCY (5143), NOIDA ROAD, DADRI -203207, DISTRICT -GAUTAMBUDH NAGAR, UTTAR PRADESH, PH :203207-.

DANKAUR

1072.## MARUTI CARS CARE (5934), SIKANDRABAD ROAD,NEAR KISAN INTER COLLEGE, DANKAUR-203201, DISTRICT- GAUTAM BUDH NAGAR, UTTAR PRADESH, PH :203201-7599195174.

DEOBAND

1073.## PRACHI MOTORS (3361), ADJACENT TO CIVIL COURTS, G.T. ROAD, DEOBAND, DISTT. SAHARANPUR (U.P.), PH:247554-7017803402.

DEORIA

1074.** CLASSIC MOTORS (2971), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.), PH-274001-9415313939.

DHAMPUR

1075.## AUTAR AUTOMOBILES (4846), NOORPUR ROAD, DHAMPUR-246761, DISTRICT-BIJNOR, UTTAR PRADESH, PH :246761-7017211986

FAIZABAD

1076.* S K MOTORS (4672), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96, FAIZABAD-224001, UTTAR PRADESH, PH :224001-9307088750.

FARUKHABAD

1077.## APOORVA MOTORS (4675), SATANPUR MANDI ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH, PH :209625-9044498958. 1078.## SANDEEP MOTORS (4161), THANDI SADAK, OPP. JITENDRA GAS GODOWN, FARUKHABAD, UTTAR PRADESH, PH :209625-9838840322.

FATEHPUR SIKRI

1079.## LAXMI MOTORS (5943), FATEHPUR SIKRI ROAD,KHEDA KORAI , FATEHPUR SIKRI-283110, DISTRICT-AGRA, UTTAR PRADESH

FIROZABAD

1080.** AMAN MOTORS (4366), OPP CAR CARE (INDIA), BYE PASS ROAD, FIROZABAD, UTTAR PRADESH.

PH:283110-9837749949.

PH :283209-9837500220.

1081.## GOVIND AUTOMOBILES (1739), NH-2,
INFRONT OF SUB POWER STATION,
MODHA, ASFABAD CHAURAHA, FIROZABAD,
UTTAR PRADESH; 283203,
PH :283203-9837169332.

GANGOH

1082.# SHRI KRISHNA MOTORS (5939), BYE PASS ROAD RAM GARH,GANGOH-247341, DISTRICT-SAHARANPUR, UTTAR PRADESH, PH :247341-9997102785.

GHAZIABAD

1083.* CHAWLA AUTOMOBILES (2643), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA, GHAZIABAD, PH. :201001-9811720929

1084.* D.N. AUTOLAND (272), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD.,

PH :201003-. 1085.** KRISHNA AUTOMOBILES (5356), 101.LAL KUAN .SHIY MANDIR , BULANDSHAHAR ROAD , DISTRICT - GHAZIABAD, UTTAR PRADESH

PH :201009-.

1086.## S P MOTORS (4973), HAPUR BYPASS ROAD,
MEHRAULL GHAZIABAD

PH:201001-.
087.* SHIVA MOTORS (3343), 17TH KM STONE,
118-119 SHIVPURI, SECTOR-9 VIJAY NAGAR
BYEPASS NH-24, GHAZIABAD-201 009
(U.P.),
PH:201009-.

GONDA

1088.** AMAN MOTORS (3858), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH, PH :271001-9415120101. 1089.* PANKAJ AUTOMOBILES (1370), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, GONDA, PH :271801-9415664930.

GREATER NOIDA

1090.## JAISWAL MOTORS (5078), PLOT NO. 31, SECTOR MUP-II.GREATER NOIDA, DISTRICT - GAUTAM BUDH NAGAR, UTTARPRADESH, PH:201308-

1091 ## KUMAR MOTORS (8926), M-8, SITE-5, UPSIDC, KASNA INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDH NAGAR, UTTAR PRADESH, PH :201312-

HAPUR

1092.* SRASTHI MOTORS (3076), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101, PH :245101-.

HARDOI

1093.## M. MOTORS & SERVICE CENTRE (3371), CHAND BEHTA, LUCKNOW ROAD, HARDOI-241 001, (U.P.), PH :241001-9415175610.

1094.** TAYAL AUTOMOTIVES (4265), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, PH :241001-9415149951.

HATHRAS

1095.## RADHEY RADHEY AUTOMOBILES (4344), NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, PH :204101-3987069159.

JAGDISHPUR

1096.## SUPER AUTOMOBILES (3564), JAFARGANJ P.O., INDUSTRIAL AREA, JAGDISHPUR, DISTT. SULTANPUR-227 817 (U.P.), PH :227817-9415177882.

JAUNPUR

1097.## SADGURU MOTORS (5071), FAIZBAGH (NEAR TOM OFFICE), UMARPUR.JAUNPUR, JAUNPUR-222142, UTTAR PRADESH, PH: 222142-8318984440.

JHANSI

1098.* A.B. MOTORS (8938), 4 KHATTERYANA, JHANSI, , PH :284001-9415059820.

1099.## JALIM PAINTER (5661), 1051,NEAR ADINATH HOTEL,STATION ROAD, JHANSI - 284001, DISTRICT - JHANSI, UTTAR PRADESH, PH :284001-9415113566.

KANNAUJ

1100.## SARALA AUTO CARE (5854), G.T. ROAD.KANNAUJ, DISTRICT-KANNAUJ, UTTAR PRADESH, PH :209725-9918692324.

KANPUR

1101.* AJAY SALES (3134), 117/N/81 KAKADEVO, KANPUR, , PH :208025-9919828000.

1102.** AUTO GARAGE (4266), P-22-A, PRATAP GANJ, FACTORY AREA, OPP GANDA NALA, KANPUR-208012, PH :208012-9415126189

1103.** CHANDRA MOTORS (4458), 621/3 W-2 JUHI, BEHIND SACHAN GUEST HOUSE, KANPUR, PH :208027-9839928280.

1104.** EXCELLENT MOTORS (2968), 123/793 FAZALGANJ, KANPUR-208 012, , PH :208012-9336119874

1105.## KANPUR AUTO CENTRE (2823), 14/142, CHUNNIGANJ, KANPUR, PH :208001-9415045438

1106.** SUJIPA MOTORS (4337), 127/465, U-BLOCK, NIRALA NAGAR, KANPUR, PH : 208014-9415050146

KHALILABAD

1107.## RATAN MOTORS (5645), RAILWAY STATION ROAD - KHALILABAD, DISTRICT- SANT KABIR NAGAR, PIN-272175, UTTAR PRADESH, PH:272175-9621294899.

KHATAULI

1108.## EAGLE MOTORS (5142), OPPOSITE EW ROADWAYS, G.T. ROAD. NH -58.KHATAULI, DISTRICT - MUZAFFARNAGAR, UTTAR PRADESH, PH :251201-9997(39786

KHEKRA

9.** KAILASAH MOTORS (5767), OPP TEHSIL ,DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH, PH :250101-9760027001.

KOSIKALAN

1110.** ADITYA MOTORS (1940), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.), PH :281403-9837050778.

LAKHIMPUR KHERI

1111.** AJMANI TRACTORS (4143), NIGHASAN ROAD, LAKHIMPUR KHERI, UTTER PRADESH, PH :262701-9918802167.

LALITPUR

C-Category Mass : Free & paid Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1112.## VARDHMAN MOTORS (1073), SAGAR ROAD, LALITPUR-284 403, (U.P.), PH :284403-9453909196

I AMBHUA BAZAR

1113.## VIKRAM MOTORS (3729), LAMBHUA BAZAR, SULTANPUR (DIST.), UTTAR PRADESH-222 302,

PH:222302-9450215996

1114.## SAMBHAV AUTOMOBILES (5168), 31.RURAL INDUSTRIAL ESTATE , ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH, PH :201102-.

LUCKNOW

LONI

1115.** B.K. MOTORS (2537), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015, PH :226015-9335908130.

1116.## BALAJI MOTORS (1336), 1 NEWAL KISHORE ROAD, LUCKNOW-226 001.(U.P.), , PH :226001-9336253838.

1117.## GALAXY MOTORS (5274), KASHANA SITAPUR ROAD,NEAR SHIA, P G COLLGEG -LUCKNOW, DISTRICT - LUCKNOW, UTTAR PRADESH,

PH :226021-9305567878. 1118.** GUD'S CAR CARE (2538), MAIN ROAD, NISHATGANJ, LUCKNOW-226 006, PH :226006-9415024495.

1119.** KALYAN MOTORS (1161), GOVT.
POLYTECHNIC CROSSING, FAIZABAD
ROAD, GOMTI NAGAR, LUCKNOW,
PH :226010-9936942527.

1120.** KAPOOR MOTORS (1751), PLOT NO.380, NEAR GUNGA BAHARA SCHOOL, TILAK NAGAR , UTTAR PRADESH, PH :206122-9795457050.

1121.** KAPOOR MOTORS (5044), 555/GA/50,BARA BIRWA, KANPUR ROAD-, ALAMBAGH LUCKNOW, DISTRICT - LUCKNOW, (UTTAR PRADESH), PH:226005-9795457050.

1122.* KRISHNA MOTORS (5026), BALAGANJ HARDOI ROAD, CHOWK LUCKNOW, DISTRICT LUCKNOW, UTTAR PRADESH, PH :226020-9839177777.

1123.** MVV MOTORS (5531), A1/14,VIJAY KHAND, GOMTI NAGAR, LUCKNOW-226010, DISTRICT - LUCKNOW, UTTAR PRADESH, PH :226010-9792877779.

1124.** RELIANCE MOTORS CARE (1236), 7-B/1
PRIME PALACE, FAIZABAD ROAD, INDIRA
NAGAR, LUCKNOW-226 016,
PH :226016-9918100051.

1125.* S.K. MOTORS (2449), 8/881 VIKAS NAGAR, PICNIC SPOT ROAD, KHURAM NAGAR, LUCKNOW-226 013, PH :226013-9415005564.

1126.* THE GARAGE (5479), BEHIND NEW HANUMAN MANDIR, MADIR PARK , MAHANAGAR - LUCKNOW , DISTRICT -LUCKNOW, UTTAR PRADESH, PH : 226006-9236711634

 V.S. MOTORS (4745), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH, PH :226007-9984749000.

МАНОВА

1128.## ROYAL SERVICE STATION (2238), HAMIRPUR CHUNGHI, KANPUR ROAD, MAHOBA, (U.P.), PH :210427-9450269053

MAINPLIRI

1129.# JATIN MOTORS (5540), GANESH MILL COLONY, RADHA RAMAN ROAD, MAINPURI-205001, DISTRICT-MAINPURI, UTTAR PRADESH,

PH:205001-8193825000

MARIAHU

1130.## BABU MOTORS (5740), MACHALISHAHAR ROAD, NEAR POST OFFICE, MARIAHU-222161, DISTRICT - JAUNPUR, UTTAR PRADESH, PH:222161-9919263663.

MATHURA

1131.## GIRIRAJ CAR CARE (5624), BIMAL ENGG COMPLEX, BAD, MATHURA-281 006, PH :281006-9837071321.

1132.** NAND SERVICE STATION (3578), GOPAL PURA VILLAGE, REFINDERY TOWNSHIP, NH-2, MATHURA, PH 281001-399378828

1133.## SHREE GOPAL AUTOMOBILES (5664), DELHI BYE PASS ROAD, NEAR GOKUL RESTAURANT, MATHURA - 281001, DISTRICT - MATHURA, UTTAR PRADESH, PH :281001-9412726780.

1134.* SIYA RAM MOTORS (1666), JAYSINGHPURA, NEAR BIRLA MANDIR, MATHURA-281 003, (U.P.), PH :281003-9897053962.

MEERUT

1135.** EXPERT CAR SCANNER (1174), 83 HILL STREET (KATH-KA-PUL), BEHIND ABU LANE, MERRUT CANITT., (U.P.), PH :250001-9412201195. 1136.## KRISHNA AUTOMOBILES (5573), PLOT NO D-10, SHRADHA PURI, KANKARKHERA -MEERUT, DISTRICT - MEERUT, UTTAR PRADESH.

PH:250001-9927241738.

1137.## SARAN AUTOMOBILES LTD. (1078), DELHI ROAD, RITHANI, MEERUT,
PH:250001-93504506555

MIRZAPUR

1138.## PRABHAT MOTORS (4131), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, U P, PH : 231309-9838940382.

MOHANLAL GANJ

1139.** GURU TEG BAHADUR AUTO ENTERPRISES (4072), 4 SENANI VIIHAR, RAI BAREILLY ROAD, MOHANLAL GANJ, LUCKNOW U P, PH :226027-9415229172.

MORADABAD

1140.## ASHISH AUTOMOBILES (1477), KANTH ROAD, MORADABAD-244 001, , PH :244001-9837055258.

NAJIBABAD

1141.## SETHI MOTORS (4557), C/O SETHI BOARD INDUSTRISE LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT. BIJNOR (UTTAR PRADESH), PH: 246732-9837590800.

NOIDA

1142.## AUTOPOINT (2263), G-6,SECTOR 11,NOIDA, PH :201301-9870555981

1143.** RAHUL MOTORS (4662), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH, PH :201305-.

1144.** RAJESH & ANIL MOTOR CO (5330), B-110. SECTOR 2. NOIDA, DISTRICT - GAUTAM BUDH NAGAR , UTTAR PRADESH, BH -201201

1145.* SKUNIVERSE AUTOMOBILE PRIVATE LIMITED (8922), C-2 SECTOR 63, NOIDA -201301,

PH:201301-.

1146.## NANDA MOTORS (5733), B-180,PHASE-2,NOIDA, DISTRICT-NOIDA, PIN-201305, UTTAR PRADESH, PH : 201305-9566003839

OBRA

1147.## APPRECIATE SERVICES (4678), BILLI RAILWAY STATION ROAD, OBRA, SONEBHADRA, UTTAR PRADESH - 231219, PH :231219-8765833557.

PILIBHIT

1148.* UNIVERSAL MARUTI SERVICE STATION (4365), BYE PASS ROAD, PILIBHIT, UTTAR PRADESH, PH :243006-9412313499.

PILKHUWA

1149.* SHREE BANKEY BIHARI MOTORS (6025), NH-24,DELHI-GARH ROAD,PILKHUWA-245307, DISTRICT-GHAZIABAD, UTTAR PRADESH, PH :245304-9045548101.

PRATAPGARH (U.P)

1150.** SHREE MOTORS (4146), 10, CHIBILA RANJEETPUR, PRAYAGRAJ AYODHYA HIGHWAY, NH-330, PRATAPGARH, UTTAR PRADESH, PIN-230001, PH :230001-9415229257.

RAI-BARELI

1151.** STANDARD GARAGE (4429), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE, RAE BAREILLY, PH :229206-9415190703

RAMPUR

1152.## FIZZA MOTORS (2241), NEAR AMBEDKAR PARK, CIVIL LINES, RAMPUR (U.P.), PIN-244 901, PH :244901-9897879711

RATH

1153.## MARUTI POINT (4228), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P), PH :210431-9415331735.

RENUKUT

1154.## AMBIKA MOTORS (1050), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.), PH :231217-9415251724.

RIHAND NAGAR

1155.## OUDH MOTORS (4421), RIHAND NAGAR, SONEBHADHRA, U.P, PH :231207-9415230855.

ROBERTSGANJ

156.* KAMAKHYA AUTOMOBILES (4163), PIPRI ROAD, ROBERTSGANJ, SONEBHADRA (U.P), PH:231216-9918301052.

SADABAD

1157.## ASHU SERVICE CENTRE (5849), AGRA BYE PASS ROAD, SADABAD-281306, DISTRICT-HATHRAS, UTTAR PRADESH, PH:281306-9058832658.

SAHARANPUR

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1158.## GANESH CAR SERVICES (1871), OPP.
REMOUNT DEPOT GATE, DEHRADUN
ROAD, SAHARANPUR-247 001,
PH:247001-9358306804.

SAHIRARAD

- HINDON MOTORS (3576), S-69, SITE 2, INDUSTRIAL AREA, MOHAN NAGAR, NEAR HINDON AIRFORCE ROUND ABOUT, SAHIBABAD, UTTAR PRADESH, PH :201007-
- 1160.** MOTOR MAGIC AUTO ZONE (4462), 4/29-A SITE-IV, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD, PH :201005-
- 1161.** PANDIT AUTOMOBILES (4647), 3/1/1, SITE-IV, INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH, PH 201010.
- 1162.## POOJA MOTORS (3562), TEELA MORE, SHAHBAJPUR, LONI, DISTT. GHAZIABAD (U.P.), PH :201102-.
- 1163.** SANSAR MOTORS PVT. LTD. (2061), 11/27 SECTOR-3, RAJINDER NAGAR, SAHIBABAD, DISTT. GHAZIABAD, PH :201005-9811004475.

SANDII A

1164.## SUBHAM SERVICE CENTRE (4042), NEAR NEHA KOTHI ROAD, SANDILA, HARDOI, PH:241204-9506181818.

SHAHJAHANPUR

1165.## SUPER AUTO (3135), OLD DIST. HOSPITAL ROAD, SHAHJAHANPUR (U.P.), PIN-242 001, PH :242001-9415035644.

SHAMLI

1166.## ROYAL MOTORS (5277), PANIPAT KARANA ROAD, SHAMLI, SHAMLI-247776, UTTAR PRADESH, PH :247776.9927272766

SHIKOHABAD

1167.## KUMAR MOTORS (5575), SUBHASH TIRAHA ,AGRA GATE - SIKOHABAD, DISTRICT -FEROZABAD, UTTAR PRADESH, PH :283203-9411937033.

SIDDHARTH NAGAR

1168.## MARUTI CARE CENTRE (2736), OPP. SIDDHARTH SCHOOL, AZAD NAGAR, SIDDHARTH NAGAR-272 207, (U.P.), PH :272207-9935642651.

SIKANDRABAD

1169.## NALIN AUTO (8921), G.T. ROAD, SIKANDRABAD, DISTT. BULANDSHAHAR, (U.P.), PH :203205-.

SIRSAGAN.I

1170.## SATGURU MOTORS (3739), BYE PASS KAURARA ROAD, SIRSAGANJ DISTT. FIROZABAD, ETAWAH-AGRA ROAD, SIRSAGANJ (U.P.), PH : 281431-9412316660.

SONEBHADRA

1171.## OUDH SERVICE STATION (8956), SHAKTI NAGAR, SONEBHADRA-231 222, , PH :231222-7408434860.

SULTANPUR

1172.## HINDUSTAN AUTO GARAGE (1360), BARHAIYA BEER RD. (ADJ.BUS STAND), SULTANPUR-228 001 (U.P), PH :228001-9984154002.

VARANASI

1173.** MISHRA ENGINEERS (4957), S-4/68, NAI BASTI, PAHARIA, VARANASI-221002, UTTAR PRADESH, PH :221002-9415301483

UTTARAKHAND

BAZPUR

1174.## TARAI AUTOMOBILE ENGG WORKS (4459), GURUTEG BAHADUR ROAD, U.S. NAGAR, BAZPUR-262401, UTTRAKHAND, PH :263401-9837506765.

BHAGESWAR

1175.## SHREE ISHT DEV AUTOMOBILES (4570), GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTRAKHAND, PH: :262642-9997895347.

DEHRADUN

- 1176.## ASHIRWAD MOTORS (5144), CANAL ROAD, NEAR BALLUPUR CHOWK, DEHRADUN-248001, UTTRAKHAND, PH '248101-9219594748
- 1177.## HANS LAKHERA MOTORS (5032), JOGI WALA RING ROAD, NATHAPUR APPARTIMIT, NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN, PH :248001-9897456677.
- 1178.## KRIPALAISHWARI MOTORS (8947), HARIDWAR ROAD, NEAR LIC BUILDING, DEHRADUN-248001, UTTRAKHAND, PH: 248001-9412963384.

HALDWANI

1179.## EXCEL MOTORS & ENGG. WORKS (3827), RAMPUR ROAD, NEAR STM FOREST HOSPITAL, HALDWANI, NAINITAL, PH :263139-9837191688.

1180.* HARYAL SERVICE CENTRE (5340), BAREILY ROAD, GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND, PH :263139-9997200227.

HARIDWAR

1181.## PREET MOTORS (5561), SHRI NATH NAGAR, RAILWAY ROAD, JAWAL PUR - HARDWAR, DISTRICT - HARDWAR, UTTRAKHAND, PH :249408-9012010497.

KANKHAL

1182.## HIGHWAY MOTORS (4261), NEAR SINGH DWAR CHOWK, ROORKEE-HARDWAR BY PASS ROAD, POST OFFICE, GURUKUL KANGRI, KANKHAL, DISTT HARDWAR, PH :249408-9412072889.

KASHIPUR

1183.## OM MOTORS (4329), OPPOSITE SWAGAT MANDAP, BAZPUR ROAD, KASHIPUR DIST., U.S. NAGAR (UTTRAKHAND), PH :244713-9927500007

1184.## KRISHNA AUTOMOBILES (4824), MORADABAD ROAD, KASHIPUR, , PH :244713-9870998368.

KICHHA

1185.## SHRI SHYAMJI AUTO SERVICE CENTER (5648), BAREILY ROAD, KICHHA, PIN-263148, DISTRICT-UDHAM SINGH NAGAR, UTTRAKHAND, PH:263148-9837033377.

KOTDWAR

1186.## BHATT MOTORS (1775), NAJIBABAD ROAD, KOTDWARA, (GARHWAL), UTTRAKHAND, PH :246149-9917005404.

LAKSAR

1187.# SHIV AUTOMOBILES (5560), 110/1/3
BALAWALI ROAD - LAKSAR, DISTRICT HARIDWAR, PIN - 247663, UTTRAKHAND,
PH - 247663, 99901111444

LOHRIASAL MALLA

1188.## ANJINI SERVICE CENTRE (5552), NEAR BLOCK OFFICE,KALADHUNGI ROAD, LOHRIASAL MALLA, CITY - HALDWANI, UTTARAKHAND - 263139., PH :263139-9837098699.

NEW TEHRI

1189.## BHAGWATI SERVICE CENTER (4472), SECTOR-8E/537, NEAR STADIUM, BARURI, NEW TEHRI, GARWAL (UTTARAKHAND), PH :249001-7895219517.

PAURI

1190.## KRISHNA MOTORS (5957), SHRINAGAR ROAD,NEAR KARGIL SHAHEED PETROL, PUMP,PAURI-246001, DISTRICT-PAURI GARHWAL, UTTARAKHAND, PH :246001-9719723484.

PITHORAGARH

1191.## CAR CARE CENTER (4371), CANTT ROAD, PITHORAGARH, UTTRAKHAND, PH :262501-9756284676.

1192.## MAA MAHAKALI MOTORS (4142), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTRAKHAND, PH :262501-.

RANIKHET

1193.## LATIF MOTOR WORKS (3269), SADAR BAZAR, GANDHI CHOWK, RANIKHET, (UTTRAKHAND), PH :263845-9761250801

RISHIKESH

1194.## GARHWAL GASOLINE STATION (3639), , H.P. PETROL PUMP, LAXMAN JHULA ROAD, RISHIKESH-249 201, PH :249137-9837377767.

1195.* RAKESH AUTOMOBILE ENGINEERS (1464), OPP. BHARAT MANDIR INTER COLLEGE, HARDWAR ROAD, RISHIKESH-249 201, PH :249137-9412051655.

ROORKEE

1196.## DUM DUM ENGG. WORKS (1343), GROUND FLOOR, A TO Z TOWER, NEAR SOLANI BRIDGE, HARIDWAR ROAD, ROORKEE, PH :247664-8449155002.

1197.## ROORKEE AUTO SCANNERS (2675), 786 WEST AMBER TALAB, RAM NAGAR CHOWK, ROORKEE-247 667, PH :247664-9837032367.

RUDRAPRAYAG

1198.# RAJESHWARI AUTOMOBILES (5669), BADRINATH ROAD, GHOLTIR, RUDRAPRAYAG, DISTRICT -RUDRAPRAYAG, UTTRAKHAND, PH :246171-9997217788.

RUDRAPUR

1199.** BALAJI SERVICE CENTRE (1335), HALDWANI ROAD, RUDRAPUR(NAINITAL), (UTTARAKHAND)., PH :263153-9897057385.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1200.** CORUS MOTORS (5059), D1
D2.20/1.NAINITAL ROAD, DISTRICT - U.S.
NAGAR , UTTARAKHAND,
PH :263153-9927500007.

SIMI I

1201.## PINDER AUTOMOBILES (5527), PLOT # C6-C9, INDUSTRIAL AREA, NEAR KARNAPRAYAG - SIMLI, UTTRAKHAND, PH : 246449-9677687196

SITARGANJ

1202.## SHRI RAM MOTORS (5833), AGARWAL BHAWAN,BYE PASS ROAD, SITARGANJ-242605, DISTRICT-UDHAM SINGH NAGAR, UTTRAKHAND, PH : 262405-8859485786.

VIKASNAGAR

1203.* SHREE RAM AUTOMOBILES (5066), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN, UTTRAKHAND, PH: 248198-9897731200.

1204.## SOUMYA MOTORS (4272), CHAKRATA ROAD, BEHIND STATE BANK OF INDIA, VIKASNAGAR, DISTT. DEHRADUN (U.A), PH: :248198-9412382490.

UTTRAKHAND

RAMNAGAR

1205.## MAHI AUTOMOBILES (5532), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTRAKHAND, PH :244715-9837920845.

WEST BENGAL

ALIPURDUAR

1206.## PRADDYOUT AUTOMOBILE WORK (653), PURAN BAZAR, P.O.ALIPURDUAR, JALPAIGURI, WEST BENGAL, PH:736121-9832487473.

ARAMBAGH

1207.## MARUTI ZONE (3748), VILLAGE GARBARI, PO DIHIBAIRA, P.S. ARAMBAGH, DISTRICT HOOGHLY, WEST BENGAL, PH :712413-9434345047.

ASANSOL

1208.## AGARWALLA AUTO SERVICE (3122), 181 BURNPUR ROAD, P.O. BURNPUR, DT. BURDWAN-713 325, (WEST BENGAL), PH:713325-9832179346.

1209.** WEST END MOTORS (1665), KALYANPUR SATELITE TOWNSHIP PROJECT, KANYAPUR LINK ROAD, PALASHDIAH MORE, PO-KANYAPUR, PIN-713341, ASANSOL, WESTBENGAL, PH 713341-8798107541

BAHRAMPUR

210.* MARUTI CARE (3674), NH-34 UTTARPARA MORE, P.O. RADHARGHAT, BERHAMPORE, MURSHIDABAD -742 187 (WEST BENGAL), PH :742187-9434394040.

1211.## NARAYAN BUS SERVICE (656), 17 RABINDRA THAKUR ROAD, P.O.BAHARAMPUR (WEST BENGAL), , PH :742101-9732628065

BAI URGHAT

1212.## GHOSH AUTOMOBILES (2644), NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, PH :733101-9434963493.

BANDEL

1213.## CAR HOSPITAL (3675), 2 NO. NETAJI PARK, G.T. ROAD, (OPP. MILITARY COLONY), BANDEL (WEST BENGAL), PH :712102-9038021085.

BARRACKPORE

1214.## SAMANTA AUTOMOBILES PVT LTD (268), CHIRIMORE, BARRACKPORE-743 101, NORTH -24 PARGANAS, WEST BENGAL, PH -743101-9831054432

BIRPARA

1215.## PARTAP ENGINEERING WORKS (8942), VILLAGE DEMDIMA, PO-BIRPARA, DISTRICT ALIPURDUAR, WEST BENGAL, PIN -735204, PH :735204-9832429319.

BOLPUR

1216.## BASUNDHARA AUTOMOBILES (4241), GOAL PARA, BOLPUR SURI ROAD, BOLPUR, PH:731235-9832132851.

CHINSURAH

1217.## UNIVERSAL AUTO REMEDY (648), C/O MR.BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE, PO CHINSURAH, HOOGHLY-712102, PH :712102-9830056592.

COOCH BEHAR

1218.## PROVA AUTOMOBILES (8936), NH-17 (FORMERLY NH-31), CHAKCHAKA CHECK POST, P.O. - NIKUTHI BABURHAT, DIST. - COOCH BEHAR, PIN-736156, WEST BENGAL, PH :736101-9434174309.

DINHATA

1219.## DINHATA AUTOMOBILES (5739), NEAR J K DHABA, NEAR CHECK POST, DINHATA COOCH BEHAR MAIN ROAD, PO: PUTIMARI, DINHATA, WEST BENGAL-736135, PH :736135-942256518.

DURGAPUR

1220.## THE QUICKEST (2879), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR-713 212, PH :713212-9832165126.

FARAKKA

1221.** SPEED WHEEL SERVICE CENTRE (1056), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.), PH :742236-9434101917.

HALDIA

1222.** S.D. REPAIRING CENTRE (2168), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY, HALDIA-721 606, DISTT. MIDNAPORE (W.B.), PH :721606-9434071405

HOWRAH

1223.## GREWAL AUTO SERVICE (1570), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH-711 102, PH :711102-9831017806.

1224.## WHEEL WORKS (5063), GIP COLONY.JAGACHA, KONA EXPRESS WAY.HOWRAH, DISTRICT - HOWRAH, WEST BENGAL, PH :700006-903441038.

JAIGAON

1225.** SHAKTI TRADING CO. (770), M.G. ROAD, JAIGAON-736 182, , PH :736182-7760808990.

JALPAIGURI

1226.## AUTOSTEL (646), SAKOAJHORA, P.O. GAIRKATA-735 212, DIST.JALPAIGURI, (W.B.),

PH :735212-9934111868. 1227.** S.S. AUTOMOBILES (3664), ASSAM MORE, JALPAIGURI, WEST BENGAL-735 101, PH :735101-9434340252.

KALYANI

1228.## GOPAL AUTO SERVICE CENTRE (3373), B.K. EXPRESSWAY, BUDHHA PARK, KALYANI-741 235, NADIA (WEST BENGAL), PH :741235-9831319161.

1229.## KRISHNA ENGINEERING WORKS (5270), PLOT NO.199,KANTABELE.O.N.G.C ROAD, KALYANI EXPRESS ROAD,PO:GHORAGACHHA, PS - KALYANI, WEST BENGAL, PH. 741245-7439007218.

KOLKATA

1230.** ADAMS MOTOR WORKS (465), 61 A
SHAKESPEARE SARANI, CALCUTTA-700
017,
PH :700017-9830703287.

1231.## AUTO SCAN (2272), 100/1, B.T.ROAD, BARANAGAR, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700090, PH -700090,0231622309

1232.** AUTOKRAFT (620), F 1/G-3, RIC IND.ESTATE UPEN BANERJEE ROAD, PARNASREE, CALCUTTA - 700060 (W.B), PH -700060-9830053331

233.* BHAWANIPUR AUTO CENTRE (628), 49 S.P. MUKHERJEE ROAD, CALCUTTA - 700 026 (W.B), PH: 700026-9831783130.

1234.## CAMAC (621), 2/E CAMAC STREET, CALCUTTA-700016(W.B), , PH :700016-9831493716.

1235.## CLASSIC ENGINEERING WORKS (3171), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO.G-1, KOLKATA-700 034, PH :700034-9903390559.

1236.* DELUXE SERVICE STATION (672), P-256 257 CIT ROAD, CALCUTTA-700 010, , PH :700010-9836490083.

1237.** DIAL AUTOMOBILES PVT.LTD. (643), 162 A PARY MOHAN RAY ROAD, CALCUTTA-700027(W.B), PH :700027-9830552191

1238.## FORTUNE AUTO CARE (3167), 16 G/6 KHANPUR ROAD, KOLKATA-700 047, (W.B.), PH :700047-9831754527.

1239.## INTERNATIONAL AUTO WORKS (2648), 48-C SOUTH TANGRA ROAD, KOLKATA-700 046, , PH :700046-9163703015. 1240.* MARUTI LINK (1633). CK-12 SECTOR 2. SALT

LAKE, CALCUTTA-700 091, PH :700091-9831180421.

241.** MOTORKRAFT (635), P-149 REMOUNT ROAD, CALCUTTA-700 027.(W.B), , PH :700027-

1242.** NORTH POINT MOTORS PVT. LTD. (344), DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA-700 037, PH:700037-9830220069.

43.* PRINCE MOTOR WORKSHOP (2845), TM -2/8 TEGHARIA, P.O. HATIARA, CALCUTTA-700 059.

PH :700059-9875625595.

1244.** R.S. SERVICE CENTRE (1948), 1/2
MAHENDRE ROY LANE, CALCUTTA-700 046,

PH:700046-9831170273.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1245.* RAJ AUTO SERVICE (5338), 35.CANAL EAST ROAD, KOLKATA , PIN - 700011, WEST BENGAL,

PH:700011-9831103901.
1246.## ROYAL CALCUTTA AUTOMOBILES (4651), 68
BROAD STREET, KOLKATA-700019, ,
PH:700019-8777762005

1247.## RUSSA ROAD SERVICE STATION (622), 30 SP MUKERJEE RROAD, CALCUTTA - 700025 (W.B), ,

PH:700025-9748757842.
1248.## SONA AUTO UDYOG (3144), 1404
PURBACHAL MAIN ROAD, OPP. KALIKAPUR
MARKET. KOLKATA-700 099.

PH:700099-9804608684.
1249.## TECHNO AUTO WORKS (4669), 619, RAJA
RAM MOHAN ROY ROAD, BIREN ROY ROAD
EAST, BEHALA, KOLKATA-700008,
PH:700008-980111258.

1250.## ULTRA CRAFT (4643), 103/1B, RAJA DINENDRA STREET, KOLKATA-700006, WEST BENGAL, PH :700006-9831313321.

1251.## YOUNG AUTOMOBILES (637), 50/2 HAZARA ROAD, CALCUTTA-700 019.(W.B), , PH :700019-9830778611.

1252.## ZENITH AUTO (5529), BOHLA NATH SARANI, CHINAR PARK, RAJARHAT, KOLKATA-700157, DISTRICT - KOLKATA, WEST BENGAL, PH: 700157-9830643781.

1253.## ZOVAN AUTOMOBILES PVT. LTD (5578), 42/A1B,RAJA SANTOSH ROAD, KOLKATA, DISTRICT - KOLKATA, WEST BENGAL, PH :700027-9831082193.

1254.## SUNNY AUTOMOBILE (3166), 105/H/18 BIDHAN NAGAR ROAD, KOLKATA-700 067, , PH :700067-.

KRISHNANAGAR

1255.## HIGHWAY SERVICE CENTRE (4455), ASHA DEEP, N,H-34, KRISHNANAGAR, NADIA-741101, WEST BENGAL, PH: 741101-9434165494.

1256.## TARA MA AUTOMOBILES (1947), AUROBINDRA SARANI (NEAR KRISHNANAGAR WOMEN'S COLLEGE), KRISHNANAGAR,NADIA, WEST BENGAL 7411011, PH:741101-8001100930.

MADHYAMGRAM

1257.# J G BEHAL AUTO (4653), DOLTALA, GANGANAGAR, MADHYAMGRAM, KOLKATA-700129 (WEST BENGAL), PH :700129-9831094430. 1258.* PAUL AUTOMOBILE (671), JESSORE ROAD, MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH, PH :700132-9830239001.

MALDA

1259.## ABHISEK AUTO CENTRE (1976), N.H.34, NEAR ST. XAVIER SCHOOL, P.O. MOKDUMPUR, DISTT. MALDA-732 101 (W.B.), PH :732101-9434065360.

MIDNAPORE

1260.# CHATTERJEE AUTOMOBILE (4960), INDUSTRIAL GROWTH AREA, KHASJANGAL (NEAR KERANICHOTI), MIDNAPORE-721101, DISTRICT-PACHIM MIDNAPORE, PH :721101-9434043558.

NARENDRAPUR

1261.## A.M. AUTOMOBILES (3175), KAMALGAZI,
NARENDURPUR, KOLKATA-700 103, (WEST
BENGAL),
PH :700103-8335860051

PURULIA

1262.## BANERJEE AUTO SERVICE (640), ANABILA VILLA, RANCHI ROAD, PURULIA.(W.B), PH :723101-9434656942.

RAGHUNATHGANJ

1263.## AUTO WHEEL (4427), NH 34, UMARPUR, PO GHORSALA, DO MURSHIDABAD, WEST BENGAL, PIN 742235, PH :742235-9434101917.

RUPNARAYANPUR

1264.## L K MOTORS (3477), NH 2 BYPASS, POINT (CHOWRANGI), RUPNARAYANPUR (CHALBALPUR), BURDWAN-713 343, PH :713343-9091392314.

SILIGURI

1265.# BHAWANI MOTOR GARAGE (4844), BIDYASAGAR PALLY, NEAR RISHI BHAWAN, BURDWAN ROAD, SILIGURI-734405, WEST BENGAL, PH: 734405-9641162127

1266.# MUM AUTO WORKS (4835), NEAR DELHI PUBLIC SCHOOL, PANCHANAI (DAGAPUR), SILIGURI, WEST BENGAL-734003, PH :734003-9832068537.

SODEPUR

1267.** CAR CARE (8929), B.T. ROAD, SODEPUR, P.O.: SUKCHAR, 24 PARGANAS (NORTH), PH:700115-9674907411.

SRIRAMPUR

1268.* MARUTI AUTO CENTRE (2167), 85/18 G.T.
ROAD (WEST), PO: MULLIKPARA,
SRIRAMPUR, HOOGLY-712 203 (W.B.),
PH:712203-8777417901.

SURI

1269 ## PANCHANATH AUTOMOBILES (4456), BROJARGRAM BARABAGAN, BAKRESWAR PATHARCHAPURI HIGHWAY MORE, SURI, WEST BENGAL-731101, PH.731101-9732026250.

ULUBERIA

1270.## APSARA SERVICE STATION (3374), NEAR BANITABLA CHECKPOST, ON NH-6, ULUBERIA-711 316, (W.B.), PH :711316-7797484735.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs ## C-Category Mass : Free & paid Service & Minor repairs

ARUNACHAL PRADESH

ITANAGAR

 HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111 PH:7005337938.

ASSAM

BARPETA

 ROY AUTO ENGINEERING WORKS (7281-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD, WARD NO.-4, ASSAM - 781315 PH -9954069396

DULIAJAN

 B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602 PH 9435719753

BIHAR

PATNA

 CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013 PH 9334117070/8210810240

DELHI

DELHI

 GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, -110018

PH:43276666.

 A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, ,LAWRANCE ROAD,,DELHI - 110035 PH :48280000.

HARYANA

BALLABGARH

 ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004 PH :4271800; 9899232536;9212142536.

MURTHAL

MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44
HSIIDC, MURTHAL - 131027
PH :9215182230

PANCHKULA

 CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA -134113
 PH :9914115427.

PANIPAT

 VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103 PH:9896118618.

SAHA

 PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-AMBALA - 133104 PH :9896666402.

YAMUNANAGAR

 HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001 PH : 8950000069

HIMACHAL PRADESH

JASSUR

 CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201 PH 9882217575 9459500613

JAMMU AND KASHMIR

SRINAGAR

 RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR -2441384 PH :9906631702

JHARKHAND

RANCHI

 PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA, RANCHI. - 834001 PH:2544661, 2542650.

KERALA

COCHIN

 AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 682024 PH :9025730007.

PATHANAMTHITTA

 AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA -689640 PH 9288117477

MADHYA PRADESH

NEEMUCH

 AUTO SCAN (3781-3T-01), MHOW ROAD, NEEMUCH, MADHYAPRADESH, - 458441 PH: 9425106588

MAHARASHTRA

PUNE

 MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017 PJ - 989901459

THANE

 THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE -400007

PH:9833947772, 9833947778.

KEONJHAR

 KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001 PH '9437075366

PUNJAB

BATALA

 CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505 PH 9876024243 9876024254

MOGA

 SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001 PH :06136-226807

RAJASTHAN

JAIPUR

 KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A ; NARAYANPURI,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034 PH :7427059388.

TELANGANA

HYDERABAD

RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D.NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068 PH:9848062263.

UTTAR PRADESH

ALIGARH

 VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001 PH:9917473052, 9582123586.

GHAZIABAD

 KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR, HAPUR ROAD, GHAZIABAD - 201002
 PH 0120-4538200 9717629599 9810523345.

 CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD -201102
 PH :9582945510. 9999107841.

LUCKNOW

 K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW -226003 PH:2473369.

MEERUT

 UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, -250001 PH:9837072642.

NOIDA

MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
 9,SECTOR-8,NOIDA - 201301
 PH:08826172222 & 09971689689.

 MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA, - 201301 PH:09958732222 & 09910282222.

JKM MOTORS (A184-A1-01), A-25,SECTOR
 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301
 PH:0120-4052400, 9899424000.

 FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301
 PH. 4581111: 4581131/9650631111.

SAHIBABAD

FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010 PH :9560868111.

UNNAO

 VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801 PH :2830610,2831248.

VARANASI

 PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002 PH :25100469, 9415203641.

WEST BENGAL

KOLKATA

 MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027 PH :24568326, 24486568, 24568325.

DELHI

DELHI


 J J IMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (0883-08-01), F-39, OKHLA INDUSTRIAL AREA, PHASE-II, NEW DELHI -110020 PH :41612194, 40685500.

TAMIL NADU

CHENNAI

 J J IMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (1485-14-01), #9, (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI -600032
PH .044-43563366, 43563367, 9176615000.

BATTERY LABEL SYMBOL MEANINGS

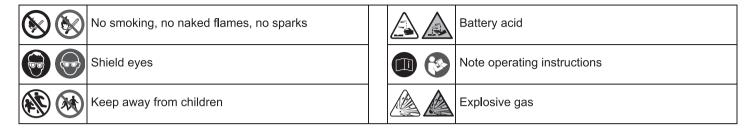

Prepared by

MARUTI SUZUKI INDIA LIMITED

Service Division July, 2025

Part No. 99011M75UE0-74W
Printed in India

For round-the-clock on-road assistance, call Maruti On-road Service at 1800 102 1800* / 1800 1800 180*

No STD code to be prefixed.



MARUTI SUZUKI
HELPLINE

MARUTI SUZUKI
GENUINE PARTS

MARUTI SUZUKI
ROAD SERVICE

MARUTI SUZUKICOST PROTECT

SERVICE DIVISION MARUTI SUZUKI INDIA LIMITED

Palam-Gurgaon Road, Gurgaon – 122 015 (Haryana), India Visit us at: www.marutisuzuki.com