

[illegible]

MAINTENANCE SERVICE RECORDS

DATE OF SERVICE	KIND OF SERVICE	MILEAGE (KM)	DESCRIPTION OF JOB	NAME OF SERVICING DEALER/ MASS	JOB CARD NO.	MECHANICS SIGNATURE

F: FREE SERVICE, P:.... PAID SERVICE, W:.... WARRANTY JOB, A:.... ACCIDENTAL JOB

WHICHEVER COMES FIRST

JOB MARK: ✓ : Checked OK, A: Adjust, C: Clean, T: Tighten, R: Replace or Change, L: Lubricate, I: Inspect

JOB MARK: ✓ : Checked OK, A: Adjust, C: Clean, T: Tighten, R: Replace or Change, L: Lubricate, I: Inspect

JOB

1. Water pump/Alternator belt tension (Adjust)
(Alto 800 only)
2. Engine Coolant (Level, Leakage)
3. Engine Oil & Oil Filter (Replace) (Alto 800 only)
4. Engine Oil (Level, Leakage) (Alto K10 only)
5. Cooling System hoses & connections
(Leakage, Damage)

1. Fuel filter, Fuel tank cap, Fuel lines and connections (Leakage)
2. All CNG Joints (Inspect) (Leakage)

2

1. Clutch pedal (Play) (M/T only)
2. Clutch slipping (Dragging, Damage)
3. Transmission / Differential Oil (Level, Leakage)

1. Brake fluid (Level, Leakage)
2. Brake pedal (Pedal to wall clearance)
3. Parking brake lever (Play)
4. Brake hoses & pipes (Leakage, Damage)

1. Tyres (Air pressure, Abnormal wear, damage)
2. Wheels (Inspect)

JO

1. Struts/shock absorbers (Oil leakage)

1. Steering wheel (Play)
2. All Rods & Arms (Loose, Damage, Wear)
3. Power Steering System (Operation)
4. Steering gear box (Operation)

1. Battery electrolyte (Level, Leakage)
2. Lighting system/horn (Operation)
3. Wiper (Operation)

1. All Latches, Hinges & Locks/Central Locking (Operation) (if equipped)

1. Drive belt (Tension, Damage)
2. Check functioning of Recirc flap
3. Check all Hose Joints

1. Operation of Brakes, clutch, Gear shifting and Speedometer
2. Body & Chassis noise

11

*MODEL CODES:ALTO-MRF308/310/410/308C, BALENO-MY416, MARUTI 800-MB308, ESTEEM-MF413/MF415D, GYPSY KING-MG413W, OMNI-MT308, VERSA-MGA413, WAGONR-MRD410, ZEN-MH410/MH415D, SWIFT-RS412/RS413/RS413D, SX4-RW416/416C, GRAND VITARA XL7-JA627, ZEN ESTILO-RK410/310/310C, SWIFT DZIRE-RN412/RN413/RN413D, A-STAR-AMF310, RITZ-A5E412/A5E413D, EECO-MGA412/412C, NEW WAGONR-A1J310/310C, ERTIGA-AV1414/413D C-LEVER- AVH310/310C, ALTO-AOD308/308C/310/310C

*MODEL CODES:ALTO-MRF308/310/410/308C, BALENO-MY416, MARUTI 800-MB308, ESTEEM-MF413/MF415D, GYPSY KING-MG413W, OMNI-MT308, VERSA-MGA413, WAGONR-MRD410, ZEN-MH410/MH415D, SWIFT-RS412/RS413/RS413D, SX4-RW416/416C, GRAND VITARA XL7-JA627, ZEN ESTILO-RK410/310/310C, SWIFT DZIRE-RN412/RN413/RN413D, A-STAR-AMF310, RITZ-A5E412/A5E413D, EECO-MGA412/412C, NEW WAGONR-A1J310/310C, ERTIGA-AV1414/413D C-LESTER-AVH310/310C, ALTO-AOD308/308C/310/310C

(DEALER'S COPY) (1,000 KM or 1 MONTH)
Please see overleaf for special instructions

Please see overleaf for special instructions

Model Code*									
Chassis No. :									
Engine No. :									
Mileage									
Date of Delivery									
Date of Inspection									
Registration No.									
Service Dealer/Mass Code									
Customer Name									
Address (Please write complete address)									
Telephone No									

Mechanic's Signature

Service Manager's Signature

Customer's Signature

Stamp of Selling dealer (Code & Full Address)

For Servicing Dealer/Mass

- 1.0 : Please fill up Model codes correctly.
- 2.0 : Please fill up Complete chassis No.
- 3.0 : Please fill up customer details i.e. Address and Telephone No. legibly and correctly of the latest owner.

For Selling Dealer

- 1.0 : Please send all Free Service Coupon to us once in a month after settlement of free service charges.

Service Division
Maruti Suzuki India Limited

Model Code *																				
Chassis No. :																				
Engine No. :																				
Mileage																				
Date of Delivery																				
Date of Inspection																				
Registration No.																				
Service Dealer/Mass Code																				
Customer Name																				
Address (Please write complete address)																				
Telephone No																				
<i>Mechanic's Signature</i>																				
<i>Service Manager's Signature</i>																				
<i>Customer's Signature</i>																				

2ND. FREE INSPECTION COUPON (CUSTOMER'S COPY) (5,000 KM or 6 MONTHS)

WHICHEVER COMES FIRST

JOB MARK: ✓ : Checked OK, A: Adjust, C: Clean, T: Tighten, R: Replace or Change, L: Lubricate

1. ENGINE

- Water pump/Alternator belt tension (Inspect) (Alto 800 only)
- Engine Coolant (Level, Leakage)
- Engine Oil (Level, Leakage)
- Cooling System hoses & connections (Leakage, Damage)
- Valve Clearance (Adjust) (Alto 800 only)
- Exhaust System (Noise, Leakage)
- PCV System (Hoses, Connections, Valve)

JOB

2. FUEL

- Air cleaner (Clean)
- Accelerator cable & Shaft (Inspect & Lubricate)
- Fuel filter, Fuel tank cap, Fuel lines and connections (Leakage)
- All CNG Joints (Inspect) (Leakage)

3. CLUTCH AND TRANSMISSION

- Clutch pedal (Play) (M/T only)
- Clutch slipping (Dragging, Damage)
- Transmission / Differential Oil (Level, Leakage)
- Gear shifter cables (Operation) (M/T only)
- Drive shaft boots (Damage, Noise)

4. BRAKE

- Brake fluid (Level, Leakage)
- Brake pedal (Pedal to wall clearance)
- Parking brake lever (Play)
- Brake Disc & Pads (Inspect)
- Brake hoses & pipes (Leakage, Damage)
- Brake shoe to drum clearance (Inspect)

5. WHEEL

- Tyres (Air pressure, Abnormal wear, Rotation)
- Wheels (Inspect)
- Front/Rear Wheel Bearings (Loose, Damage)

6. FRONT AND REAR SUSPENSION

- Suspension strut/shock absorber (Oil Leakage)
- Suspension arms, Knuckle, Rear spring (Damage, Loose)
- All Nuts & Bolts (Tighten)

JOB

7. STEERING

- Steering wheel (Play)
- All Rods & Arms (Loose, Damage, Wear)
- Power Steering System (Operation)
- Steering gear box (Operation)

8. ELECTRICAL

- Battery electrolyte (Level, Leakage)
- Lighting system/Horn (Operation)
- Wiring Harness Connections (Looseness)
- Accessory Socket (Operation) (if equipped)
- Wiper (Operation)

9. BODY

- All Latches, Hinges & Locks/Central Locking (Operation/Lubrication) (if equipped)
- All Chassis nuts & bolts (Inspect)
- Seat belt (Operation)
- Seat latch, lever & knob (Operation)

10. FOR AIR-CONDITIONED VEHICLES

- Drive belt (Tension, Damage)
- Check functioning of Recirc flap
- Check all Hose Joints
- (Tighten) Compressor Mounting Bolts
- Clean Condenser with low pressure water

11. ROAD TEST

- Operation of Brakes, clutch Gear shifting and Speedometer
- Body & Chassis noise

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

2ND. FREE INSPECTION COUPON (DEALER'S COPY) (5,000 KM or 6 MONTHS)

WHICHEVER COMES FIRST

Please see overleaf for special instructions

Model Code *									
Chassis No. :									
Engine No. :									
Mileage									
Date of Delivery									
Date of Inspection									
Registration No.									
Service Dealer/Mass Code									

Mechanic's Signature
Service Manager's Signature
Customer's Signature

* MODEL CODES: ALTO-MRF308/310/410/308C, BALENO-MY416, MARUTI 800-MB308, ESTEEM-MF413/MF415D, GYPSY KING-MG413W, OMNI-MT308, VERSA-MGA413, WAGONR-MRD410, ZEN-MH410/MH415D, SWIFT-RS412/RS413/RS413D, SX4-RW416/416C, GRAND VITARA-XL7-JA627, ZEN ESTILO-RK410/310/310C, SWIFT DZIRE-RN412/RN413/RN413D, A-STAR-AMF310, RITZ-A5E412/A5E413D, EECO-MGA412/412C, NEW WAGONR-A1J310/310C, ERTIGA-AV414/413D, CELERIO - AVH310/310C, ALTO-AOD308/308C/310/310C

Stamp of Selling dealer
(Code & Full Address)

For Servicing Dealer/Mass

- 1.0 : Please fill up Model codes correctly.
2.0 : Please fill up Complete chassis No.
3.0 : Please fill up customer details i.e. Address and Telephone No. legibly and correctly for the latest owner.

For Selling Dealer

- 1.0 : Please send all Free Service Coupon to us once in a month after settlement of free service charges.

Service Division
Maruti Suzuki India Limited

Model Code *									
Chassis No. :									
Engine No. :									
Mileage									
Date of Delivery									
Date of Inspection									
Registration No.									
Service Dealer/Mass Code									

Mechanic's Signature
Service Manager's Signature
Customer's Signature

3RD. FREE INSPECTION COUPON (CUSTOMER'S COPY) (10,000 KM or 12 MONTHS)

WHICHEVER COMES FIRST

JOB MARK: ✓ : Checked OK, A: Adjust, C: Clean, T: Tighten, R: Replace or Change, L: Lubricate

1. ENGINE

- Water pump/Alternator belt tension (Inspect) (Alto 800 only)
- Engine Coolant (Level, Leakage)
- Cooling System hoses & connections (Leakage, Damage)
- Engine oil & Oil Filter (Replace)
- Engine mounting and manifold fixing (Loose, Damage)
- Spark plugs (Clean & adjust gap) (Alto 800 only)

JOB

2. FUEL

- Air cleaner (Clean)
- Accelerator cable & Shaft (Inspect & Lubricate)
- Fuel filter, Fuel tank cap, Fuel lines and connections (Leakage)
- All CNG Joints (Inspect) (Leakage)

3. CLUTCH AND TRANSMISSION

- Clutch pedal (Play) (M/T only)
- Clutch slipping (Dragging, Damage)
- Transmission / Differential Oil (Level, Leakage)
- Gear Shifter Cables (Operation) (M/T only)
- Drive shaft boots (Damage, Noise)

4. BRAKE

- Brake fluid (Level, Leakage)
- Brake pedal (Pedal to wall clearance)
- Parking brake lever (Play)
- Brake Disc & Pads (Inspect)
- Brake hoses & pipes (Leakage, Damage)
- Brake Drums & Shoes (Inspect)
- Brake shoe to drum clearance (Adjust)

5. WHEEL

- Tyres (Air pressure, Abnormal wear, Rotation)
- Wheels (Inspect)
- Front/Rear Wheel Bearings (Loose, Damage)

6. FRONT AND REAR SUSPENSION

- Suspension strut/shock absorber (Oil Leakage)
- Suspension arms, Knuckle, Rear spring (Damage, Loose)
- All Nuts & Bolts (Tighten)

JOB

7. STEERING

- Steering wheel (Play)
- All Rods & Arms (Loose, Damage, Wear)
- Power Steering System (Operation)
- Steering gear box (Operation)

8. ELECTRICAL

- Battery electrolyte (Level, Leakage)
- Lighting system/Horn (Operation)
- Wiring Harness Connections (Looseness)
- Accessory Socket (Operation) (if equipped)
- Wiper (Operation)

9. BODY

- All Latches, Hinges & Locks/Central Locking (Operation/Lubrication) (if equipped)
- All Chassis nuts & bolts (Tighten)
- Seat belt (operation)
- Seat latch, lever & knob (operation)

10. FOR AIR-CONDITIONED VEHICLES

- Drive belt (Tension, Damage)
- Check functioning of Recirc flap
- Check all Hose Joints
- (Tighten) Compressor Mounting Bolts
- Clean Condenser with low pressure water

11. ROAD TEST

- Operation of Brakes, clutch Gear shifting and Speedometer
- Body & Chassis noise

COST OF MATERIALS AND CONSUMABLES TO BE BORNE BY CUSTOMER

3RD. FREE INSPECTION COUPON

(DEALER'S COPY) (10,000 KM or 12 MONTHS)

Please see overleaf for special instructions

Model Code *									
Chassis No. :									
Engine No. :									
Mileage									
Date of Delivery									
Date of Inspection									
Registration No.									
Service Dealer/Mass Code									

Mechanic's Signature

Service Manager's Signature

Customer's Signature

* MODEL CODES: ALTO-MRF308/310/410/308C, BALENO-MY416, MARUTI 800-MB308, ESTEEM-MF413/MF415D, GYPSY KING-MG413W, OMNI-MT308, VERSA-MGA413, WAGONR-MRD410, ZEN-MH410/MH415D, SWIFT-RS412/RS413/RS413D, SX4-RW416/416C, GRAND VITARA-XL7-JA627, ZEN ESTILO-RK410/310/310C, SWIFT DZIRE-RN412/RN413/RN413D, A-STAR-AMF310, RITZ-A5E412/A5E413D, EECO-MGA412/412C, NEW WAGONR-A1J310/310C, ERTIGA-AVI414/413D, CELERIO - AVH310/310C, ALTO-AOD308/308C/310/310C

Stamp of Selling dealer
(Code & Full Address)

For Servicing Dealer/Mass

- 1.0 : Please fill up Model codes correctly.
- 2.0 : Please fill up Complete chassis No.
- 3.0 : Please fill up customer details i.e. Address and Telephone No. legibly and correctly for the latest owner.

For Selling Dealer

- 1.0 : Please send all Free Service Coupon to us once in a month after settlement of free service charges.

Service Division
Maruti Suzuki India Limited

Model Code *									
Chassis No. :									
Engine No. :									
Mileage									
Date of Delivery									
Date of Inspection									
Registration No.									
Service Dealer/Mass Code									

Mechanic's Signature
Service Manager's Signature
Customer's Signature

FOREWORD

This manual is an essential part of your vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new MARUTI SUZUKI and review the manual from time to time. It contains important information on safety, operation and maintenance. You are invited to avail the three Free Inspection Services as described in the manual. Three free inspection coupons are attached to this manual. Please show this manual to your dealer while you take your MARUTI SUZUKI for any Service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "INSPECTION AND MAINTENANCE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

WARNING/ **CAUTION/NOTICE/** *NOTE*

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

WARNING

Indicates a potential hazard that could result in death or serious injury.

CAUTION


Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

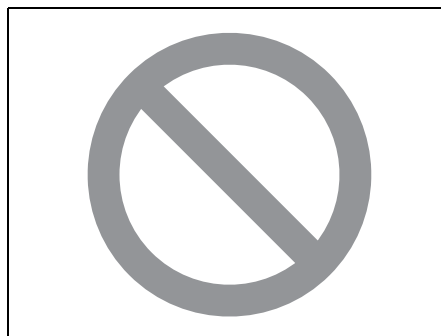

75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

MODIFICATION WARNING

WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your authorised Maruti Suzuki workshop or qualified service technician for advice.

NOTICE

Severe damage may be caused by the use of either poor quality fuel and/or lubricants not recommended by MARUTI SUZUKI.

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by an authorised Maruti Suzuki dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised dealer / service station.

(2) Term:

The term of the warranty shall be twenty-four (24) months or 40,000 kilometers (whichever occurs first) from the date of invoice to the first owner.

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. The owner is responsible for any repair or replacements which are not covered by this warranty.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The replacement of normal wear parts including without limitation, bulbs, tyres and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition or racing.
- (d) Any repairs or replacement required as a result of accidents or collision.
- (e) Any defects caused by misuse, negligence, abnormal use or insufficient care.
- (f) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories.
- (g) Any vehicle on which parts or accessories not approved by Maruti Suzuki have been used.
- (h) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
- (i) Any vehicle which has not received, during the warranty term, the service inspections prescribed in this Owner's Manual and Service Booklet.
- (j) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than an Maruti Suzuki authorised dealer/service station.
- (k) Any vehicle which has been used for purposes other than what it was designed for.
- (l) Any damage or deterioration caused by industrial pollution and bird droppings.

- (m) Insignificant defects which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
- (n) Any natural wear and tear including without limitation, aging etc.
- (o) Installation and usage of domestic LPG gas/LPG Cylinder.
- (p) V-belts, hoses and gas leaks.
- (q) Any vehicle retrofitted with LPG/CNG kits.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty on Maruti Suzuki's behalf.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to any authorised Maruti Suzuki workshop.

(7) Owner's Warranty Responsibilities:

It is responsibility of each owner to:

- Make certain that the PDI card was completed at the time of delivery of the vehicle;
- Have performed, at his own expenses, by an Maruti Suzuki authorised dealer/service station all the service inspections specified in the Maruti Suzuki "Owner's Manual and Service Booklet and maintain adequate proof that such service inspections have been performed.

- Make certain that the Maruti Suzuki authorised dealer/service station performing the service inspection has certified the work on the "Maintenance Service Record" page in the "Owner's Manual and Service Booklet and
- Present the Maruti Suzuki "Owner's Manual and Service Booklet to the authorised Maruti Suzuki dealer whenever requesting service inspections or warranty service.

If the "Owner's Manual and Service Booklet should be lost or destroyed the owner should consult the authorised Maruti Suzuki dealer from whom the vehicle was purchased for instructions concerning replacement of the "Owner's Manual and Service Booklet".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities (**New Delhi, Kolkata, Mumbai and Chennai**) with effect from July 1st, 2001.

Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of invoice to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

Conditions:

1. Under Emission Warranty, Warranty claims will be admitted for a prima facie examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
2. The warranty claims will only be accepted after examination carried out by Maruti Suzuki or it's dealer which leads to firm conclusions that the
 - a) Original settings have not been tampered in any case.
 - b) Part (as given in Annexure - A) has a manufacturing defect.
 - c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.
3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and it's dealer and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and it's dealer has the right to charge all, or part of the cost of such examination.
4. Under Emission Warranty, the parts (as given in Annexure - A) will be changed free of cost, but the consumables will be charged as per actual.
5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and it's dealer will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
6. Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
7. Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest Maruti Suzuki dealer workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki dealer.
8. Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
9. Emission Warranty will not be affected on the change of owner, provided all the documents are available.

10. All maintenance actions (as specified in the Owner's Manual and Service Booklet) need to be followed and recorded in the manual for emission warranty.

11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The receipts (for the maintenance of the vehicle as per specification in Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

Conditions under which the Emission Warranty is not APPLICABLE

1. In the absence of valid PUC certificate.
2. Vehicle not serviced from Maruti Suzuki authorised workshop as per the schedule specified in this Owner's Manual and Service Booklet.
3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
4. Use of non MGP (Maruti Genuine Part).
5. Vehicle that has been tampered with.
6. Tampering with odometer so that the actual kilometer reading can not be determined.
7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).

Annexure - A

List of parts covered under Emission Warranty

1. Fuel Injection Assembly, Pressure Regulator, Throttle Body Assembly
2. Electronic Control Module (ECM).
3. Intake Manifold.
4. EGR valve.
5. Ignition Coil.
6. Canister Assembly.
7. Vapour Liquid Separator.
8. Fuel Tank and Filler Cap.
9. PCV (Positive Crankcase Ventilation) Valve.
10. Oil Filler Cap.
11. Catalytic Converter.
12. Exhaust Manifold.
13. All Fuel Injection System related SENSORS.
14. High Pressure Fuel Pump.
15. Glow Plug.
16. Glow Plug Controller.

TABLE OF CONTENTS

FUEL RECOMMENDATION	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
VEHICLE LOADING AND TOWING	6
INSPECTION AND MAINTENANCE	7
EMERGENCY SERVICE	8
APPEARANCE CARE	9
GENERAL INFORMATION	10
SPECIFICATIONS	11
SERVICE NETWORK	12

FUEL RECOMMENDATION

FUEL RECOMMENDATION

1

Fuel Recommendation 1-1

FUEL RECOMMENDATION

Fuel Recommendation

You must use unleaded gasoline with an octane number (RON) of 91 or higher.

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in some areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol. Make sure this gasoline-ethanol blend has octane ratings no lower than those recommended for gasoline.

Gasoline/Methanol blends

Blends of unleaded gasoline and methanol (wood alcohol) are also commercially available in some areas. DO NOT USE fuels containing more than 5% methanol under any circumstances. Fuel system damage or vehicle performance problems resulting from the use of such fuels are not the responsibility of MARUTI SUZUKI and may not be covered under the New Vehicle Warranty. Fuels containing 5% or less methanol may be suitable for use in your vehicle if they contain cosolvents and corrosion inhibitors.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you are using a gasoline/alcohol blend, you should switch back to unleaded gasoline containing no alcohol.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non-automatic system, initial vent blowback occurs.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Warranty.

BEFORE DRIVING

Keys 2-1

Ignition Key Reminder (if equipped) 2-2

Door Locks 2-2

Keyless Entry System (if equipped) 2-5

Windows 2-10

Mirrors 2-11

Front Seats 2-12

Rear Seats 2-13

Seat Belts and Child Restraint Systems 2-14

Supplemental Restraint System
(air bags) (if equipped) 2-22

Instrument Cluster 2-28

Warning and Indicator Lights 2-30

Speedometer 2-34

Fuel Gauge 2-35

Information Display 2-36

Lighting Control Lever 2-38

Headlight Leveling Switch 2-40

Turn Signal Control Lever 2-40


Hazard Warning Switch 2-41

Windshield Wiper and Washer Lever 2-41

Horn 2-43

BEFORE DRIVING

Keys

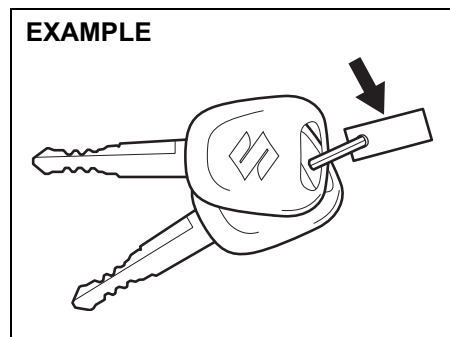

51KM024

Your vehicle comes with a pair of keys. The key(s) may or may not be equipped with a transmitter depending on model variant. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.


The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key which has an electronic identification code programmed into it. The key communicates the identification code to the vehicle when the key is turned to the "ON" position. If you need to make spare keys, see your MARUTI SUZUKI dealer. The vehicle must be programmed with the correct identification code for the spare keys. A key made by an ordinary locksmith will not work.

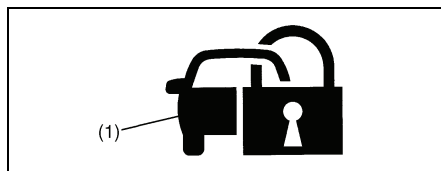

54G003

If the immobilizer system light (1) blinks when the ignition switch is in the "ON" position, there may be something wrong with your key or with the immobilizer system. Ask your MARUTI SUZUKI dealer to inspect the system.

NOTE:

- If you lose your immobilizer ignition key, see your MARUTI SUZUKI dealer as soon as possible to have the lost one deactivated, then have the new key made by them.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch when using your MARUTI SUZUKI, or the engine may not be started because they may interfere with your MARUTI SUZUKI's immobilizer system.
- If you attach any metal objects to the immobilizer key, it may not start the engine.

NOTICE

The immobilizer key is a sensitive electronic instrument. To avoid damaging the immobilizer key:


- Do not expose it to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep the immobilizer key away from magnetic objects.

BEFORE DRIVING

Ignition Key Reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

Door Locks

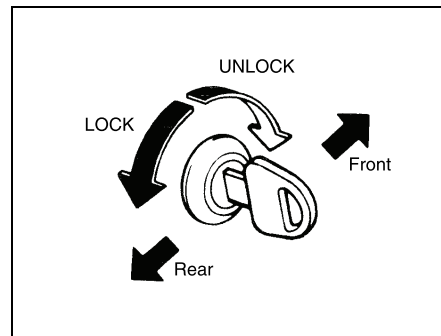

60B008


To lock a driver's door from outside the vehicle:

- Insert the key and turn the top of the key toward the rear of the vehicle, or
- Push the lock knob downward, then pull and hold the door handle as you close the door.

To unlock a driver's door from outside the vehicle, insert the key and turn the top of the key toward the front of the vehicle.

To lock a front passenger's door from outside the vehicle, push the lock knob down, then pull and hold the door handle as you close the door.

Side Door Locks (if equipped)

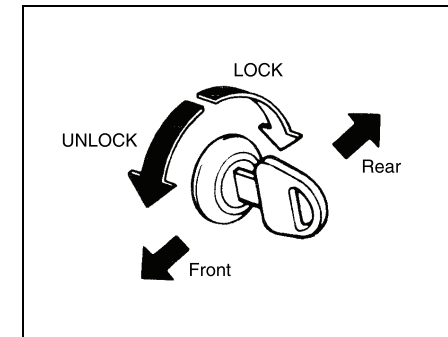

60B008


To lock a driver's door from outside the vehicle:

- Insert the key and turn the top of the key toward the rear of the vehicle, or
- Push the lock knob downward, then pull and hold the door handle as you close the door.

To unlock a driver's door from outside the vehicle, insert the key and turn the top of the key toward the front of the vehicle.

BEFORE DRIVING


To lock a rear door from outside the vehicle, push the lock knob down and close the door. You do not need to pull and hold the door handle as you close the door.

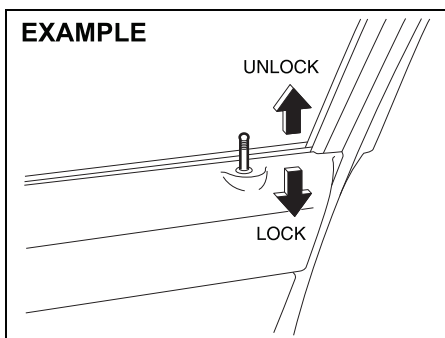

To lock a door from inside the vehicle, push the lock knob down. Pull the lock knob up to unlock the door.

Central Door Locking System (if equipped)


Driver's door

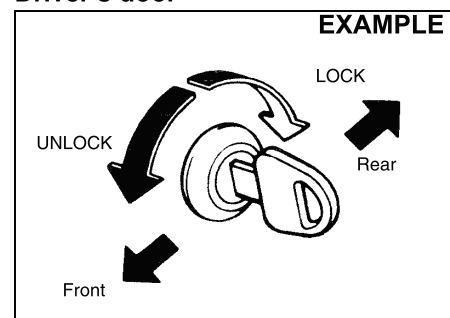

You can lock and unlock all doors simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle.


To unlock all doors simultaneously, insert the key in a driver's door lock and turn the top of the key toward the front of the vehicle.

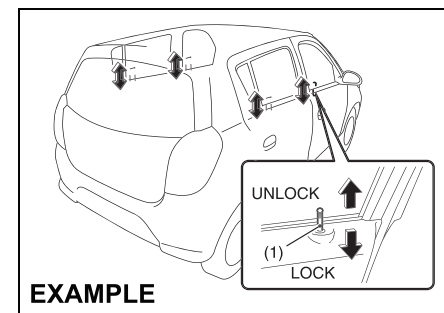

You can also lock or unlock doors by pushing down or pulling up the driver's door lock knob (1).

BEFORE DRIVING

Child-Proof Locks (rear door)

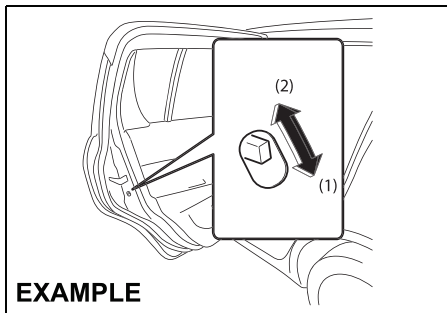

53M-04-007


- (1) LOCK
- (2) UNLOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in the "LOCK" position (1), the rear door can only be opened from outside. When the lock lever is in the "UNLOCK" position (2), the rear door can be opened from inside or outside.

WARNING

Be sure to place the child-proof lock in the "LOCK" position whenever children are seated in the rear.

Tailgate

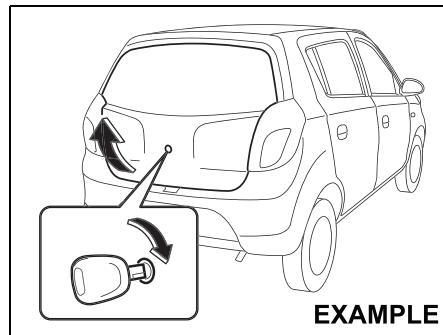


53M-04-008

To open the tailgate, insert the key and turn it clockwise to unlatch and lift the tailgate.

NOTICE

Do not use the key to lift up the tailgate, or the key may break off in the lock.

EXAMPLE

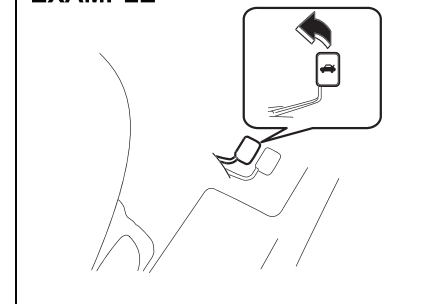

53M-04-009


You can also unlatch the tailgate by pulling the release lever (if equipped) located on the outboard side of the driver's seat.

WARNING

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

BEFORE DRIVING

Keyless Entry System (if equipped)

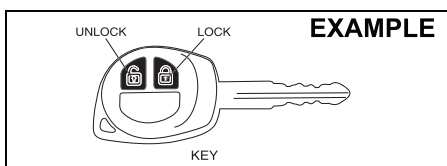

53M-04-010

Keyless Entry

You can lock / unlock all doors simultaneously by operating the transmitter near the vehicle.

- To lock all doors, press “LOCK” button once. All indicator lights will flash once when doors are locked.
- To unlock all doors, press “UNLOCK” button once. All indicator lights will flash twice when doors are unlocked.

NOTE:

- The operating distance of the keyless entry system transmitter is about 20 meters, but this may vary depending on the condition of transmitter's battery and surroundings especially near other transmitting devices such as radio towers.
- The door locks cannot be operated with the transmitter if the ignition key is inserted in the key cylinder or if any door is open.
- Be sure to close the doors and windows before locking.

- If you lose any of the transmitters (keys), contact your MARUTI SUZUKI authorised dealer as soon as possible for erasing the transmitter ID from vehicle controller memory. In case you need a new transmitter, place an order with your dealer.
- Key cylinder mentioned in this section is the key hole mounted on steering column, where key is inserted to start the vehicle.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture, dust or high temperature such as leaving it on the dashboard under direct sunlight.
- Do not tamper with internal parts.
- Keep the transmitter away from magnetic objects such as a television.

GENERAL FEATURES

Illuminated Entry

When vehicle is unlocked, the room lamp will turn ON to facilitate illuminated entry into the vehicle. The room lamp will turn OFF when the door is closed.

Illuminated Exit

When door is opened to exit the vehicle, the room lamp will turn ON and will turn OFF when the door is closed.

Auto Relock

In case of accidental Unlock/Disarm of vehicle by Key, vehicle will automatically Lock within 30 sec. without any indication. Auto relock cycle gets canceled if user does any of the following operation within 30 sec:

1. Open any door.
2. Insert key in cylinder.
3. Any door is locked/unlocked by door knob.

Radio Frequency Lock Out

Key Lock/Unlock/Panic will cease to function when Key is inside Key cylinder.

BEFORE DRIVING

EXAMPLE

Press both buttons together for 3 sec.



Light flashes
for 30 sec.

53M-04-011

Car Locator

Car Locator feature can be used to locate the vehicle in congested parking area.

- Press and hold the Key LOCK & UNLOCK button simultaneously for 3 seconds or more.
- Car Locator will be activated and indicator lights will flash for 27 seconds.
- Press and release the Key LOCK & UNLOCK button simultaneously to cancel the Car Locator.

PROGRAMMABLE FEATURES

System has some features which can be programmed by user according to their choice.

Auto Lock Mode

Drive lock mode can be set to Auto Lock mode or can be turned OFF. If drive lock mode is set to auto lock, all the vehicle doors will lock when vehicle attains the speed of 15 Km/hr. If drive is set to OFF, no door will lock by speed.

NOTE:

Auto Lock Mode will get cancelled if any door is open while driving.


Auto Unlock Mode



Drive unlock can be set to Auto Unlock mode or can be turned OFF. When set to Auto Unlock mode, turning Ignition ON to OFF and then removing the key from the key cylinder will unlock all the doors. If Drive Unlock mode is set to OFF then no door will unlock by removing key from key cylinder.

BEFORE DRIVING

Programming Auto Lock/Unlock Mode

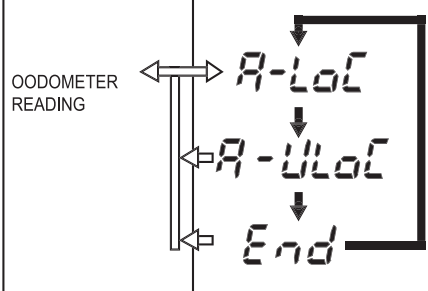- a) When the ignition switch is in the “ON” position and the vehicle is stationary, push the odometer/trip meter/meter illumination selector knob, to switch the information display indication to the odometer reading.
- b) Push and hold the odometer/trip meter/meter illumination selector knob until the display shows “A-LOC”.
- c) Push the odometer/trip meter/meter illumination selector knob to select a function that you want to set up according to the below mentioned table.
- d) To program a Auto Lock/Auto Unlock mode function first select the desired function and the press and hold the odometer/trip meter/meter illumination selector knob.
 - One flash of the indicator light will confirms that Auto Lock/Auto Unlock mode is activated.
 - Two flash of the indicator light confirm that Auto Lock /Auto Unlock mode is deactivated.


		Indication	Feature	One flash	Two flash
ODOMETER READING		A-LoC	Auto Lock	Activate	Deactivate
		A-ULoC	Auto unlock	Activate	Deactivate
		End	Back	Exit to odometer reading	

	Short press
	Long press

53M-04-012

Transmitter battery

Replacement of the Battery

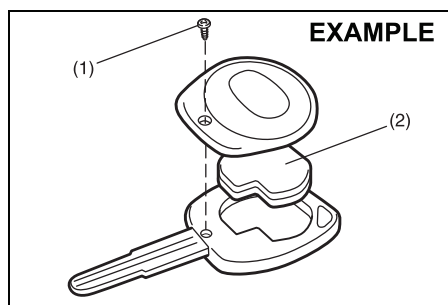


53M-04-013

If the transmitter battery gets discharged, replace the battery with a new one.

To replace the battery of the transmitter:

- 1) Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).
- 3) Put the edge of a flat blade screw driver in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) (Lithium disc type CR1620) so that its +ve terminal faces the bottom cover of the transmitter (5).

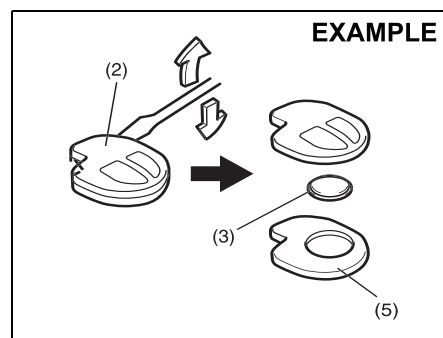

53M-04-014


- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- 7) Make sure the door locks can be operated with the transmitter.

NOTE:

Normal battery life is approximately 2 years, but varies depending on usage. It is advisable to get battery replaced from MARUTI SUZUKI Authorized workshop.

CAUTION

Do not remove the screw from the key unnecessarily as it damages the screw head. Kindly replace the screw once the transmitter battery is changed.

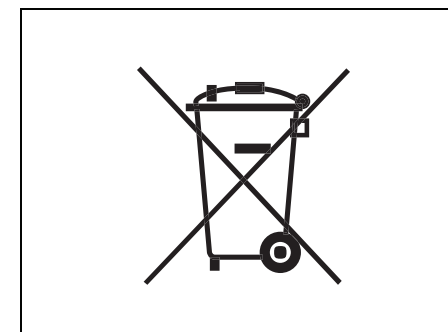

53M-04-015

CAUTION

Dispose off the used battery properly according to applicable rules or regulations. Do not dispose off lithium batteries with ordinary household trash.

WARNING

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.


BEFORE DRIVING

TROUBLESHOOTING

SYMPTOMS	PROBABLE CAUSES	REMEDIES
Transmitter function (Unlock/Lock/Car Locator) not working	<ol style="list-style-type: none">1) Battery of the transmitter is weak.2) Transmitter is exposed to water or it is wet.3) D/L or Dome fuse for controller is blown in the vehicle.4) In case if any door is open or door sensor is shorted with the body ground, remote will not activate the central locking.	<ol style="list-style-type: none">1) Check the battery.2) Dry the transmitter and check it.3) Check and replace the D/L or Dome fuse.4) Check if all doors are properly closed and door switch functioning is O.K.
Operation distance of the transmitter is less than 20m but still transmitter (Unlock/Lock/Car Locator) is not working	<ol style="list-style-type: none">1) Battery of the transmitter is weak.2) Strong RF interference. (e.g. Radio Towers, High Voltage Transmission line near by)	<ol style="list-style-type: none">1) Check the battery.2) Drive the vehicle away from the particular spot and re-test the control distance.
It is difficult to activate or deactivate the system in certain area using the transmitter.	<ol style="list-style-type: none">1) The strong interference caused by excessive RF activity in a particular area	<ol style="list-style-type: none">1) The interference is temporary and only while the vehicle is in that area.

Windows

Manual Window Control (if equipped)

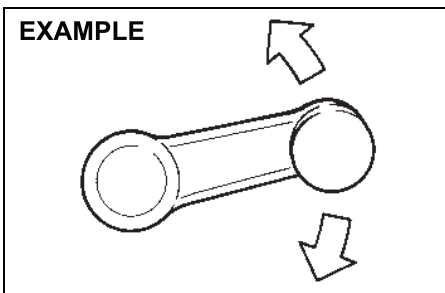


53M-04-016

Raise or lower the door windows by turning the handle located on the door panel.


Electric Window Controls (if equipped)

The electric windows can only be operated when the ignition switch is in the "ON" position.

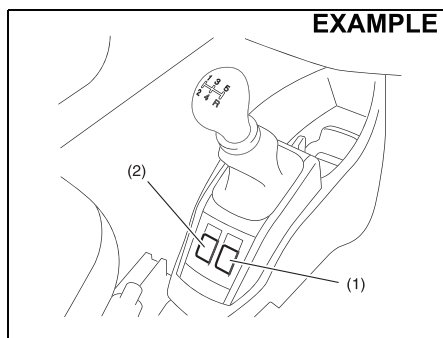

53M-04-017

The center console has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window.

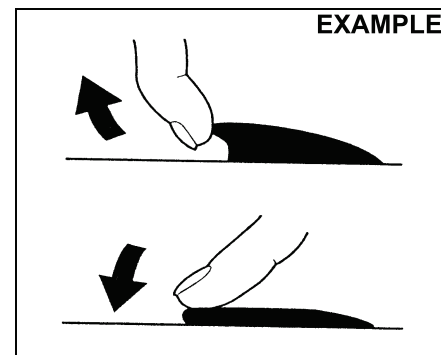

81A009

To open a window, push the top part of the switch and to close the window, lift up the top part of the switch.

BEFORE DRIVING

⚠ WARNING

- To avoid injuring an occupant by window entrapment, be sure no part of the occupant's body such as hands or head is in the path of the electric windows when closing them.
- Always remove the ignition key when leaving the vehicle even if only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the electric window switches and get trapped by the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Mirrors

Inside Rearview Mirror

EXAMPLE



53M-04-019

You can adjust the inside rearview mirror by hand so as to see the rear of your vehicle in the mirror.

Outside Rearview Mirrors

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

⚠ WARNING

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

Type 1


EXAMPLE



53M-04-020

Type 2

EXAMPLE

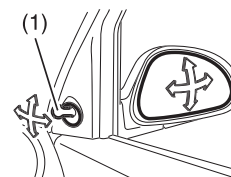

53M-04-021

You can adjust the outside rearview mirrors by hand with the knob (1) located on the driver's or front passenger's door panel (if equipped).

BEFORE DRIVING

Front Seats

Seat Adjustment

⚠ WARNING


Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.

⚠ WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.


Adjusting Seat Position

Type 1

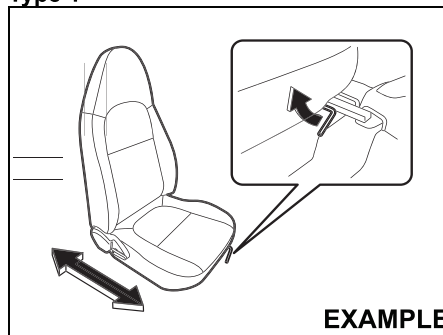

53M-04-022

Type 2

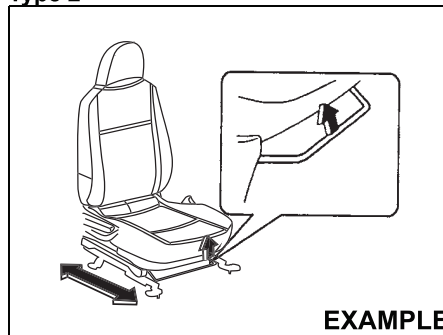

53M-04-023

The adjustment lever for each front seat is located under the front of the seat. To adjust the seat position, pull up on the


adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

Adjusting Seatbacks

⚠ WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

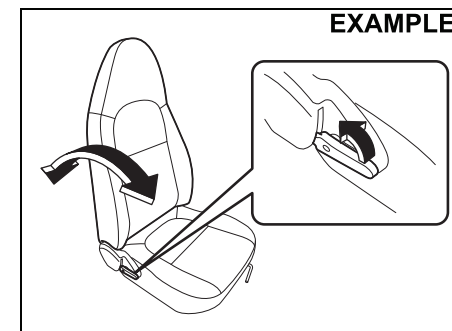

53MH0209


To adjust the seatback angle of front seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

BEFORE DRIVING

Rear Seats

Folding Rear Seat

The rear seat of your vehicle can be folded forward to provide additional cargo space. To fold the rear seat forward:

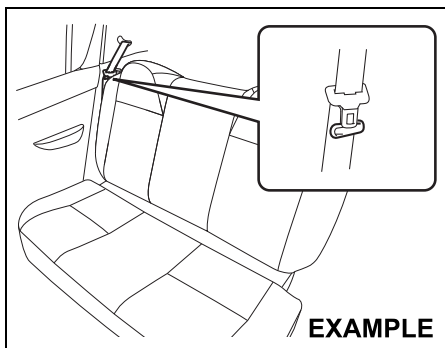


53MH0211

- 1) Hook the webbing of the outboard lap-shoulder belts in the belt hangers.

NOTICE

- When you move a seatback, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.

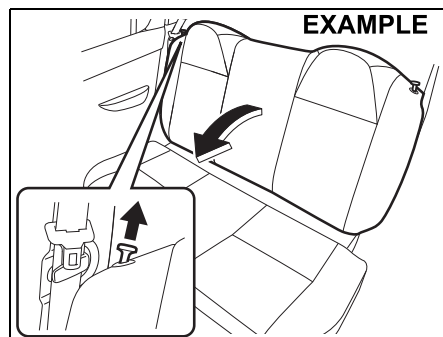

53MH0212

- 2) Pull up the release lock knobs on the top of the seat, and fold the seatback forward.

NOTICE

After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

⚠ WARNING

If you need to carry cargo in the passenger compartment with the rear seat back folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.


⚠ WARNING

When returning the rear seatback to the normal position, make sure that there is nothing around the striker. Any foreign materials prevent the seatback from being locked securely.

⚠ CAUTION

When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.

BEFORE DRIVING

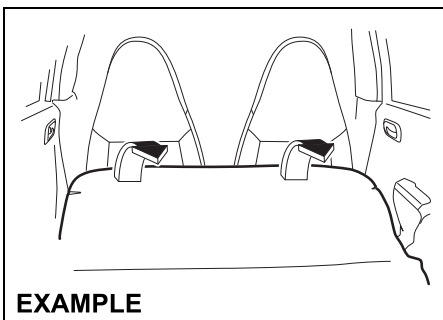

53MH0213

Raise the seatback until it locks into place. After returning the seat, try moving the seatback to make sure they are securely latched.


⚠ CAUTION

Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.

NOTICE

- When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.
- When returning the rear seatback to the normal position, be sure to handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.
- As the lock is designed exclusively for securing the rear seatback, do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback from being locked securely.

Seat Belts and Child Restraint Systems

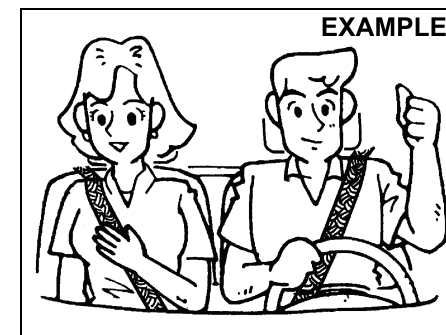

65D231S


⚠ WARNING

Wear Your Seat Belts at All Times.

⚠ WARNING

An air bag supplements, or adds to, the frontal crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.

BEFORE DRIVING

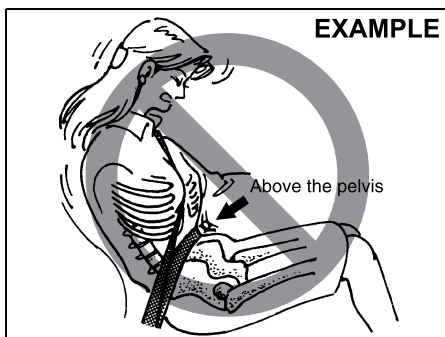


65D606

⚠ WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.

(Continued)

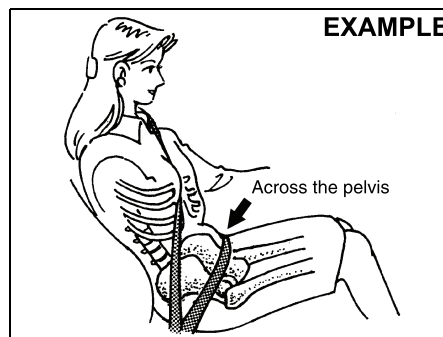


65D201

⚠ WARNING

(Continued)

- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than one which is snug.
- Make sure that each seat belt buckle is inserted into the proper buckle catch. It is possible to cross the buckles in the rear seat.

(Continued)

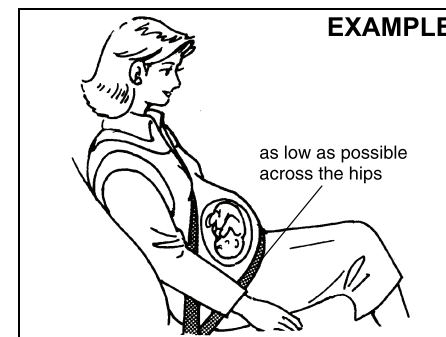

65D199

⚠ WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the diagram.
- Do not wear your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.

(Continued)

BEFORE DRIVING

⚠ WARNING

(Continued)

- Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children age 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.

(Continued)

⚠ WARNING

(Continued)


- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

Lap-Shoulder Belt

Emergency Locking Retractor (ELR) (if equipped)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, then pull the belt across your body more slowly.


Safety reminder

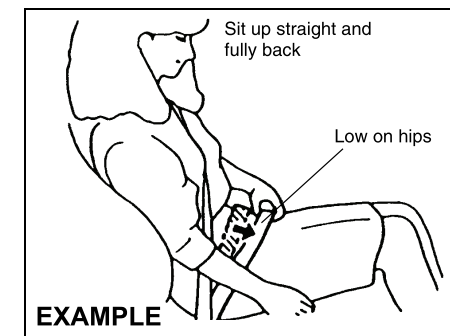

60A038

BEFORE DRIVING

EXAMPLE

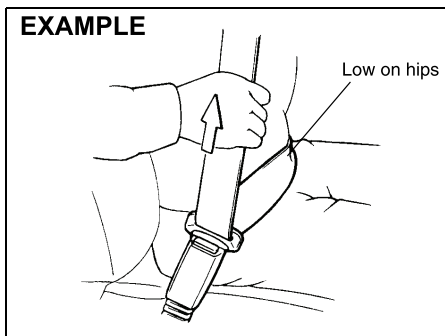


60A040

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

All Seat Belts Except Rear Center

All seat belts except rear center are the lap-shoulder belt.


EXAMPLE

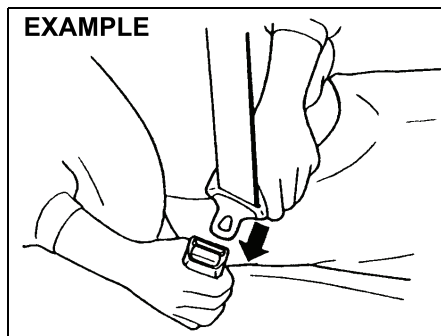

60A036

To fasten the seat belt, sit up straight and well back in the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a “click”.

EXAMPLE

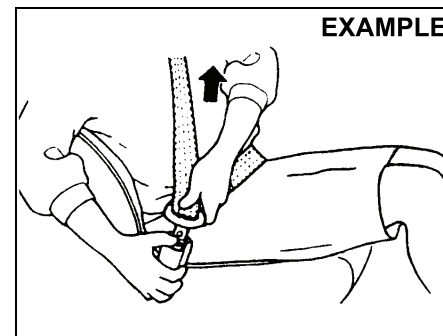

60A039


To unfasten the seat belt, push the button on the buckle and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

Rear Center Seat Belt

Rear center seat belt is the lap belt.


To fasten the belt, pull the latch plate attached to the seat belt across your hips and press it straight into the buckle until you hear a “click”. To reduce the risk of sliding under the belt during a collision, position the belt across your lap as low on your hips as possible and adjust it to a snug fit.

BEFORE DRIVING

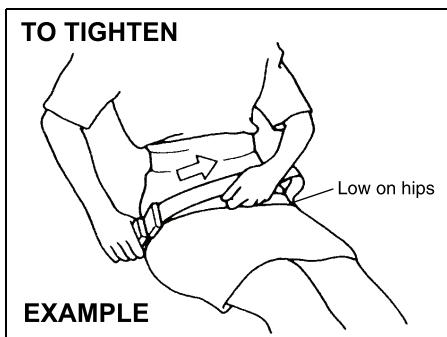

80JS028


To tighten the belt, pull the free end of the belt across alongside the lap strap.

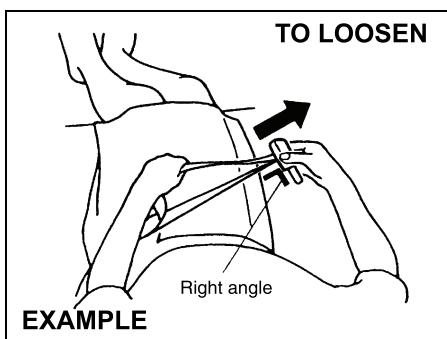

80JS029

To lengthen, release the latch plate from the buckle, pull the latch plate (adjuster) in the direction of the arrow, at right angles to

the belt. The latch plate should then be refitted into the buckle and the belt tightened as previously described. To unfasten the belt, press the release button on the buckle catch.

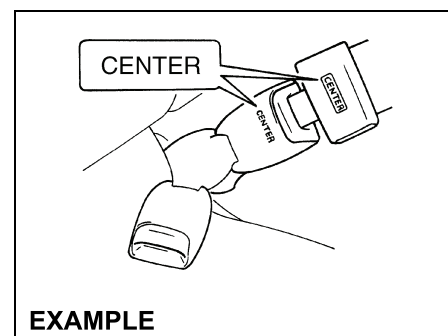


80JS031

NOTE:

To identify the center seat belt buckle and latch plate in the rear seat, "CENTER" is marked on the buckle and latch plate of the center lap belt. The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

Seat Belt Hanger

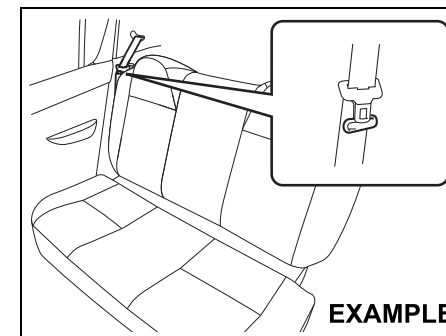


53MH0214

NOTICE

- When you move a seatback, make sure the webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.

BEFORE DRIVING

Seat Belt Inspection

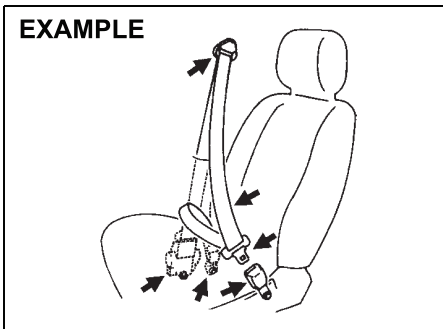


53M-04-040

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages, and guide loops. Replace any seat belts which do not work properly or are damaged.

WARNING


Be sure to inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly which was not in use during a collision should be replaced if it does not function properly, it is damaged in any way.

Child Restraint Systems

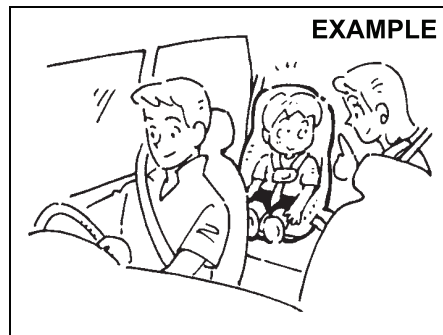


53M-04-041

Infant restraint

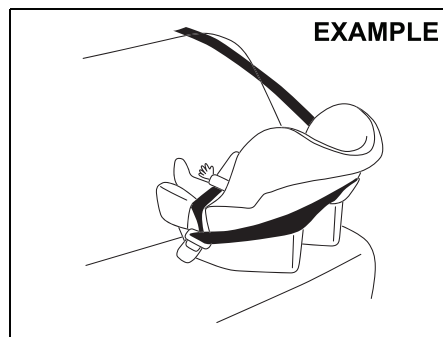


53M-04-042

Child restraint

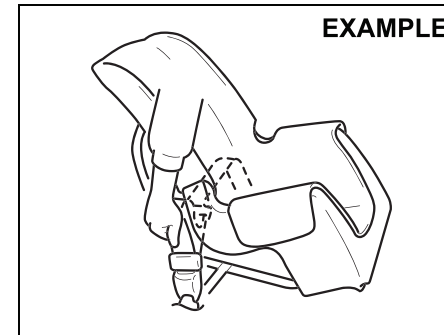

53M-04-043

Booster seat

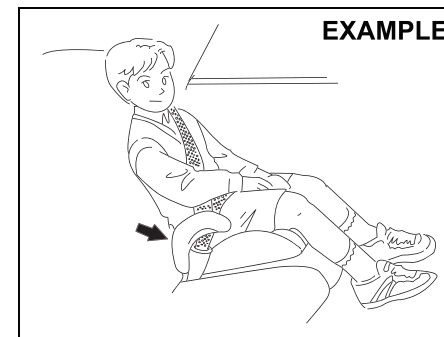

53M-04-044

BEFORE DRIVING

MARUTI SUZUKI highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; make sure that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured on vehicle seats by either seat belts (lap belts or the lap portion of lap-shoulder belts). Whenever possible, MARUTI SUZUKI recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

If you must use a front-facing child restraint in the front passenger's seat, adjust the passenger's seat as far back as possible.

NOTE:
Observe any statutory regulation about child restraints.




53M-04-045

⚠ WARNING

If your vehicle is equipped with a front passenger air bag, do not install a rear-facing child restraint in the front passenger's seat. If the passenger's air bag inflates, a child in a rear-facing child restraint could be killed or seriously injured. The back of a rear-facing child restraint would be too close to the inflating air bag.


⚠ WARNING

If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not touch the front seatback. This will help avoid injury to the child in the event of an accident.

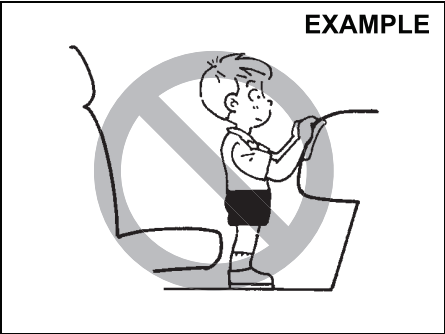

53M-04-046

EXAMPLE

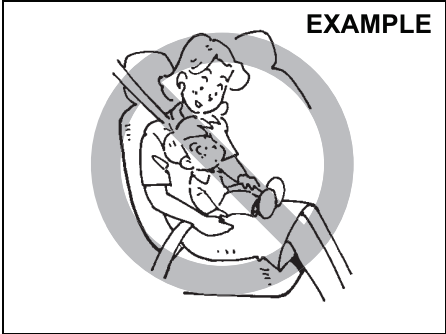

53M-04-047

⚠ WARNING

Children could be endangered in a crash if their child restraints are not properly secured in the vehicle. When installing a child restraint system, be sure to follow the instructions below. Be sure to secure the child in the restraint system according to the manufacturer's instructions.

BEFORE DRIVING

Child Restraint System for India

Child Restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP	Seating position (or other site)				
	Front Passenger	Rear Outboard	Rear Centre	Intermediate Outboard	Intermediate Centre
Group 0 Up to 10 kg	X	U	X	N.A.	N.A.
Group 0+ Up to 13 kg	X	U	X	N.A.	N.A.
Group I 9 to 18 kg	X	U	X	N.A.	N.A.
Group II 15 to 25 kg	X	U	X	N.A.	N.A.
Group III 22 to 36 kg	X	U	X	N.A.	N.A.

Key of letters to be inserted in the above table:

U =Suitable for 'universal' category restraints approved for use in this mass group

X =Seat position not suitable for children in this mass group


N.A = Seat position not available for children in this mass group.

NOTE: 'universal' is the category in the AIS 072.

: 'Outboard' indicates window side seat.

Installation with Lap-Shoulder Seat Belts

ELR type belt (if equipped)

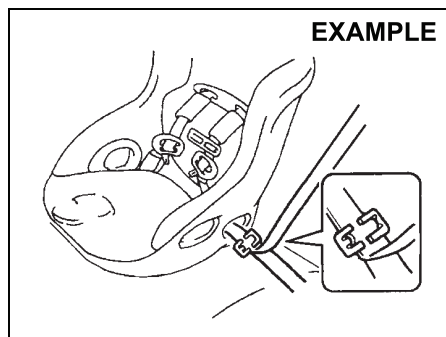

53M-04-048

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Make sure that the seat belt is securely latched.

Try to move the child restraint system in all directions to make sure it is securely installed.


Supplemental Restraint System (air bag) (if equipped)

⚠ WARNING

This section of the owner's manual describes the protection provided by your MARUTI SUZUKI SUPPLEMENTAL RESTRAINT SYSTEM (air bag). Please read and follow ALL these instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a Supplemental Restraint System consisting of the following components in addition to a lap-shoulder belt at each front seating position.

- 1) Driver's front air bag module (if equipped)
- 2) Front passenger's front air bag module (if equipped)
- 3) Seat belt pretensioners (if equipped)
- 4) Air bag controller (if equipped)
- 5) Forward crash sensor (if equipped)

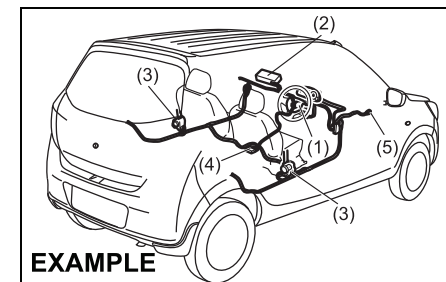

53MM02013





53M-04-050

If the "AIR BAG" light on the instrument cluster does not blink or come on when the ignition switch is first turned to the "ON" position, or the "AIR BAG" light stays on, or comes on while driving, the air bag system may not work properly. Have the air bag system inspected by an authorized MARUTI SUZUKI dealer as soon as possible.


BEFORE DRIVING

Front Air Bag (Driver side)

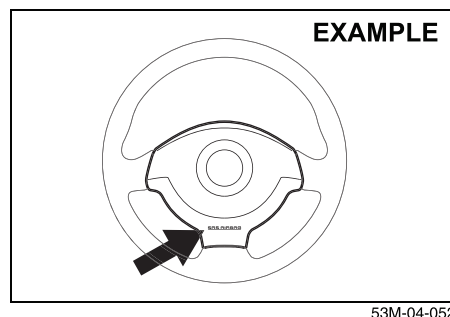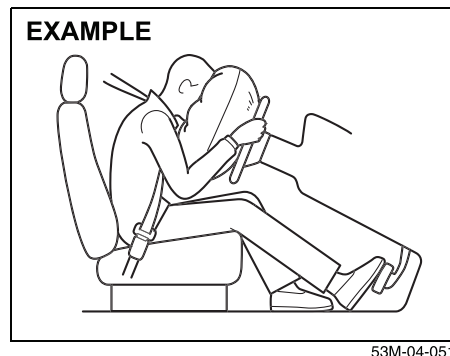


The driver's front air bag is located behind the center pad of the steering wheel. The word "SRS AIRBAG" is molded into the air bag cover to identify the location of the air bag.

Frontal collision range

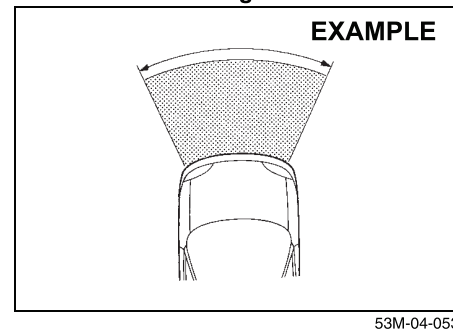


Front air bag is designed to inflate in severe frontal collisions.

Conditions of front air bags deployment (inflation)

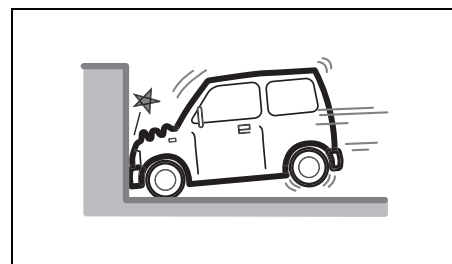


- In frontal collisions with a fixed wall that does not move or deform in more than about 25 km/h (15 mph).

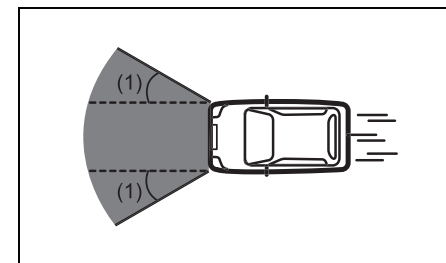

- In collisions such as above at an angle of about 30 degrees (1) or less from the front.


Conditions of front air bags may inflate

Receiving a strong impact to the lower body of your vehicle, the front air bags will inflate in many cases.

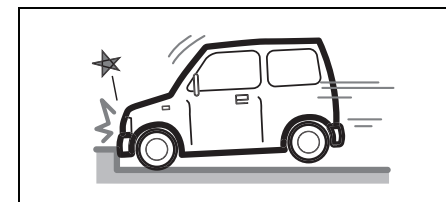


- Hitting a curb or medial strip

BEFORE DRIVING

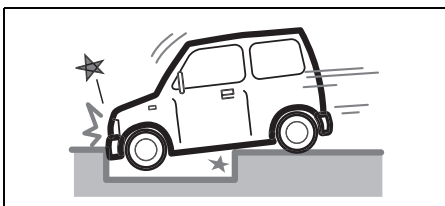

53M-04-057


- Falling into a deep hole or ditch

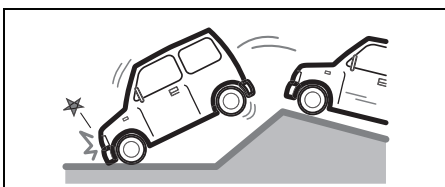

53M-04-058


- Landing hard or falling

Front air bags may inflate in a strong impact

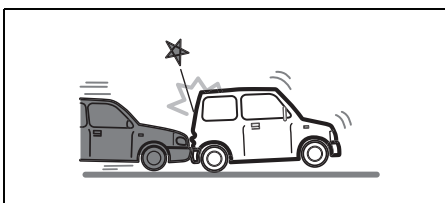


53M-04-059

- Collision from the rear

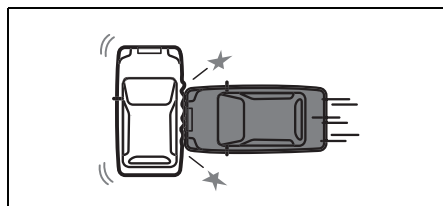

53M-04-060

- Collision from the side

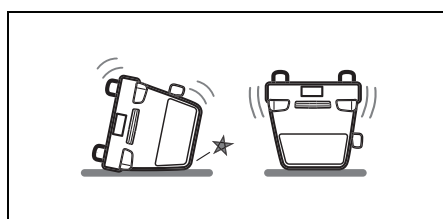


53M-04-061

- Vehicle rollover


Front air bags may not inflate

The front air bags may not inflate when the impact is absorbed since the collision object moved, vehicle body deformed, or collision angle was greater than about 30 degrees from the front.

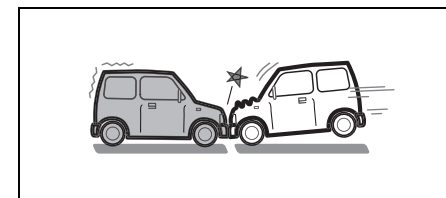

53M-04-062


- Approximately 50 km/h (30 mph) or lower speed frontal collision to a stopped vehicle

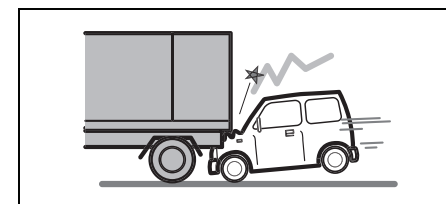

53M-04-063


- Collision that the front of your vehicle goes under the bed of a truck etc.

BEFORE DRIVING

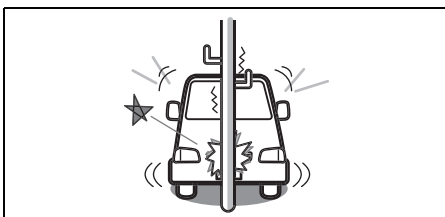


53M-04-064

- Collision with a utility pole or stumpage

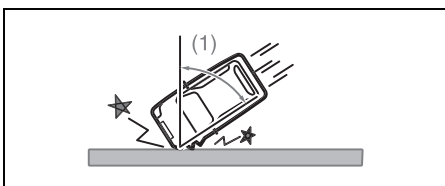


53M-04-065

- Collision with a fixed wall or guardrail at an angle of greater than about 30 degrees (1) from the front

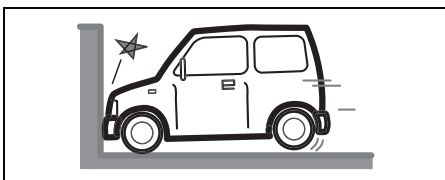

53M-04-066

- In frontal collisions with a fixed wall that does not move or deform in less than about 25 km/h (15 mph)

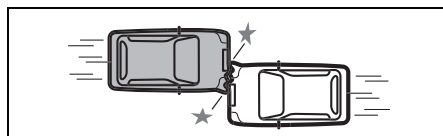

53M-04-067

- Collision angle is offset from the vehicle angle (offset collision)

Front air bags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Remember, since an air bag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an air bag is NOT a substitute for seat belts. To maximize your protection, ALWAYS WEAR YOUR SEAT BELTS. Be aware that no system can prevent all possible injuries that may occur in an accident.

⚠ WARNING

An air bag supplements, or adds to, the crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.



58MS030

⚠ WARNING

Do not install a child restraint in the front passenger's seat. If the passenger's front air bag inflates, a child in a child restraint could be killed or severely injured. Child restraint would be too close to the inflating air bag.

Please refer to "Seat Belts and Child Restraint Systems" in this section for details on securing your child.

BEFORE DRIVING

Air bag symbol (if equipped) meaning



You may find this label on the sun visor.

⚠ WARNING

Do not use a restraint on a seat protected by an airbag in front of it.

⚠ WARNING

If the AIR BAG light in the instrument cluster ever comes on and stays on, it means that something may be wrong with the air bag system. If this ever happens, have the vehicle serviced immediately, because the air bags may not offer the protection for which they were designed.

Please refer to the “Seat Belts and Child Restraint Systems” section in this section for details on securing your child.

Door Lock Cancellor System (if equipped)

If SRS Airbag system is activated all doors are unlocked automatically.

NOTE:
In case door lock wiring and/or motor are damaged, doors may not unlock automatically.


How the system works
In a frontal collision, the crash sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal crash, the controller will trigger the inflators. The inflators inflate the air bags with nitrogen or argon gas. The inflated air bags provide a cushion for your head and upper body. The air bag inflates and deflates so quickly that you may not even realize that it has acti-

vated. The air bag will neither hinder your view nor make it harder to exit the vehicle.

Air bags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the air bag may irritate bare skin, such as the facial area. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some air bag components may be hot for a while after inflation.

A seat belt helps keep you in the proper position for maximum protection when an air bag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel. Please refer to the “Front Seat” section and the “Seat Belts and Child Restraint Systems” section in this section for details on proper seat and seat belt adjustments.

BEFORE DRIVING

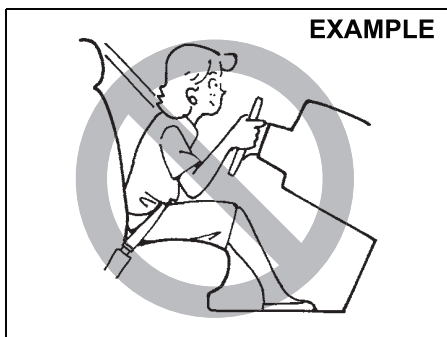

53M-04-068

⚠ WARNING

- **The driver should not lean over the steering wheel. In these situations, the out-of-position occupant would be too close to an inflating air bag, and may suffer severe injury.**
- **Do not attach any objects to, or place any objects over, the steering wheel. Do not place any objects between the air bag and the driver. These objects may interfere with air bag operation or may be propelled by the air bag in the event of a crash. Either of these conditions may cause severe injury.**

Note that even though your vehicle may be moderately damaged in a frontal collision, the collision may not have been severe

enough to trigger the air bags to inflate. If your vehicle sustains ANY front-end damage, have the air bag system inspected by an MARUTI SUZUKI authorized dealer to ensure it is in proper working order. Your vehicle is equipped with a diagnostic module which records information about the air bag system if the air bags deploy in a crash. The module records information about overall system status, which sensors activated the deployment, and for a certain vehicle only, whether the driver's seat belt was in use.

Servicing the air bag system

If the air bags inflate, have the air bags and related components replaced by an authorized MARUTI SUZUKI dealer as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the air bag controller could be damaged. If it does, have the air bag system inspected by the MARUTI SUZUKI dealer as soon as possible.

Special procedures are required for servicing or replacing an air bag. For that reason, only an authorized MARUTI SUZUKI dealer should be allowed to service or replace your air bags. Please remind anyone who services your MARUTI SUZUKI that it has air bag.

Service on or around air bag components or wiring must be performed only by an MARUTI SUZUKI authorized dealer. Improper service could result in unin-

tended air bag deployment or could render the air bag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the air bag system, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI. Do not touch air bag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.


Scrapping a vehicle that has an uninflated air bag can be hazardous. Ask your dealer, body repair shop or scrap yard for help with disposal.

BEFORE DRIVING

Instrument Cluster ALTO 800


- (1) Speedometer
- (2) Odometer/Trip meter
- (3) Odometer/Trip meter/Meter illumination selector knob
- (4) Fuel gauge
- (5) Warning and indicator lights

Type 1

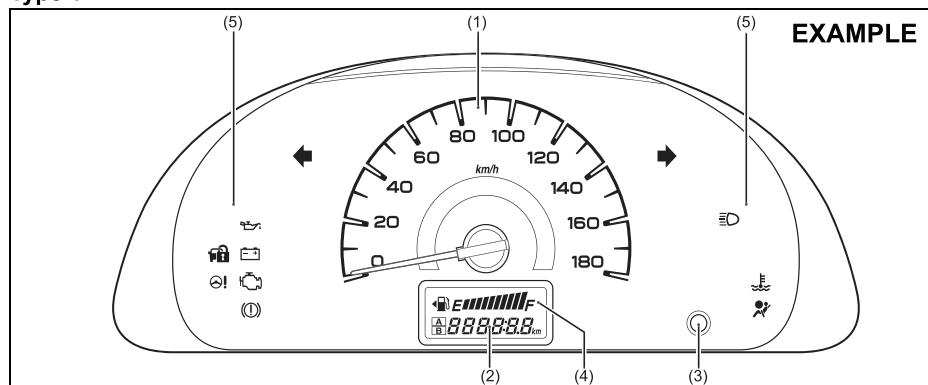

53M-04-069

Type 2

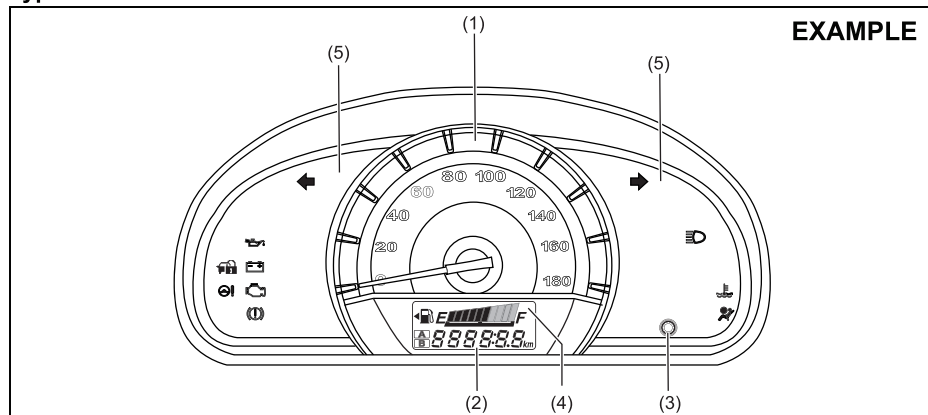

53MH0237


BEFORE DRIVING

Instrument Cluster ALTO K10

- (1) Speedometer
- (2) information display
- (3) Odometer/Trip meter/Meter illumination selector knob
- (4) Fuel gauge
- (5) Warning and indicator lights
- (6) Tachometer (if equipped)

without tachometer


EXAMPLE

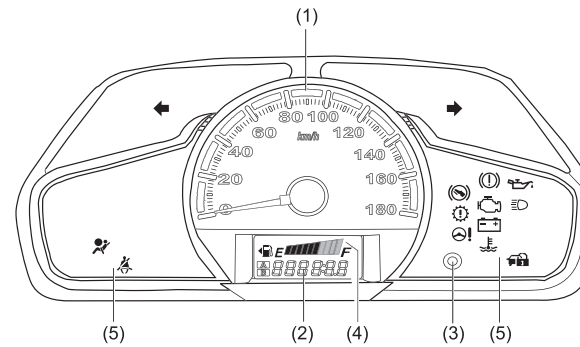

53M-04-070

with tachometer

EXAMPLE

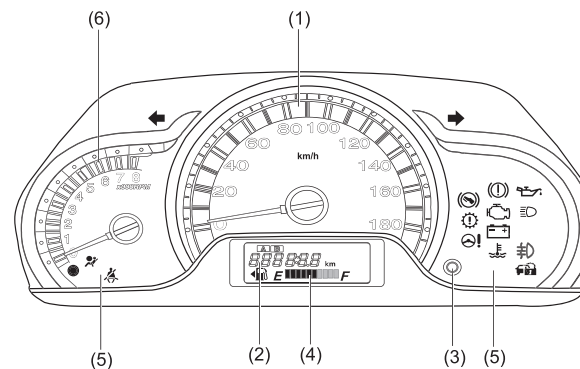

53M-04-071

Warning and Indicator Lights

Brake System Warning Light



53M-04-072

Three different types of operations exist depending on the vehicle's specification.

- 1) The light comes on briefly when the ignition switch is turned to the "ON" position.
- 2) The light comes on when the parking brake is engaged with the ignition switch in the "ON" position.
- 3) The light comes on when under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may

mean that there is something wrong with the vehicle's brake system. If this happens, you should:

- 1) Pull off the road and stop carefully.

WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- 2) Test the brakes by carefully starting and stopping at the side of the road.
 - If you determine that it is safe, drive carefully at low speed to the nearest dealer for repairs, or
 - Have the vehicle towed to the nearest dealer for repairs.

WARNING

If any of the following conditions occur, you should immediately ask your MARUTI SUZUKI dealer to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned to the "ON" position.
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the disc brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

Seat Belt Warning Light (if equipped)



53M-04-073

BEFORE DRIVING

If the driver's seat belt is unbuckled when the ignition switch is turned to the "ON" position, this light will blink until the driver's seat belt is buckled.

For details about the seat belt reminder, refer to "Seat Belts and Child Restraint Systems" in this section.

"AIR BAG" Light (if equipped)



53M-04-074


This light blinks or comes on for several seconds when the ignition switch is turned to the "ON" position so you can check if the light is working.

The light will come on and stay on if there is a problem in the air bag system.

WARNING

If the "AIR BAG" light does not blink or come on briefly when the ignition switch is turned to the "ON" position, stays on for more than 10 seconds, or comes on while driving, the air bag system may not work properly. Have both systems inspected by an MARUTI SUZUKI authorized dealer.

Malfunction Indicator Light

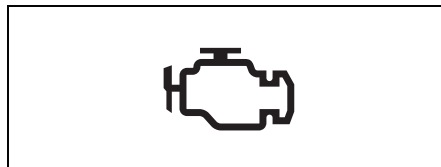

53M-04-075

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument panel to indicate when it is necessary to have the emission control system serviced. The malfunction indicator light comes on when the ignition switch is turned to "ON" position to let you know the light is working and goes out when the engine is started.

If the malfunction indicator light comes on when the engine is running, there is a damage with the emission control system. Bring the vehicle to your MARUTI SUZUKI dealer to have the damage fixed.

Also, if the light comes on, there may be something wrong with the transaxle system. Have the system inspected by MARUTI SUZUKI authorized dealer.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transaxle Warning Light (if equipped)



53M-04-076

This light comes on briefly when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON" so you can check the light is working.

If this light comes on when the engine is running, there is the problem with the automatic transaxle system. Ask your MARUTI SUZUKI dealer to have the system inspected.

NOTE:

If the automated manual transaxle system temperature becomes too high, this light will blink. Stop the vehicle in a safe place and let the system cool down.

BEFORE DRIVING

Electric Power Steering Light (if equipped)




53M-04-077

This light comes on when the ignition switch is turned to the "ON" position, and goes out when the engine is started. If this light comes on while driving, the power steering system may not work properly. Have the system inspected by your MARUTI SUZUKI dealer.

NOTE:

If the power steering system does not work properly, you will feel heavier to steer but you still will be able to steer.

Oil Pressure Light

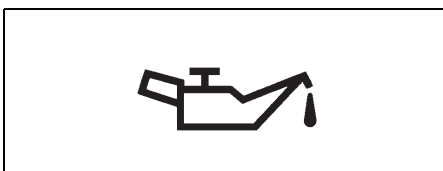

53M-04-078


This light comes on when the ignition switch is turned to the "ON" position, and goes out when the engine is started. The

light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine. Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by your MARUTI SUZUKI dealer before you drive the vehicle again.

NOTICE

- **If you operate the engine with this light on, severe engine damage can result.**
- **Do not rely on the Oil Pressure Light to indicate the need to add oil. Be sure to periodically check the engine oil level.**


Charging Light

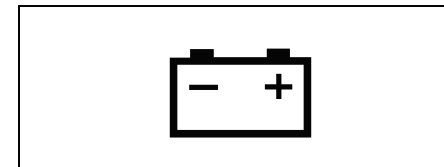

53M-04-079

This light comes on when the ignition switch is turned to the "ON" position, and goes out when the engine is started. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by your MARUTI SUZUKI dealer.

High Engine Coolant Temperature Warning Light

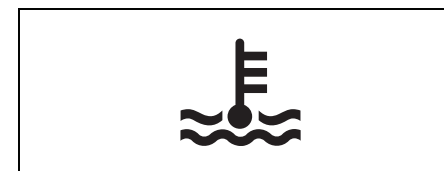

53M-04-080

When the ignition switch is turned to the "ON" position, this light comes on briefly so you can check that the light is working. If this light blinks while driving, it means the engine is running hot. Avoid driving conditions that may lead to actual overheating. If


BEFORE DRIVING

the light stays on without blinking, then the engine is overheating. Follow the instructions in the "If the Engine Overheats" of "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.


Immobilizer System Light

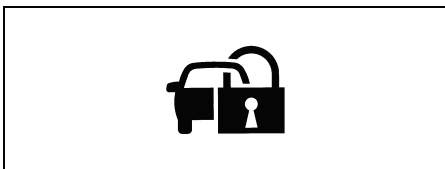

53M-04-081

This light comes on when the ignition switch is turned to the "ON" position, and goes out when the engine is started. If this light blinks with the ignition switch turned to "ON", there may be something wrong with the immobilizer system. Ask your MARUTI SUZUKI dealer to have the system inspected.

Door Lock Cancellor Indicator Light (if equipped)

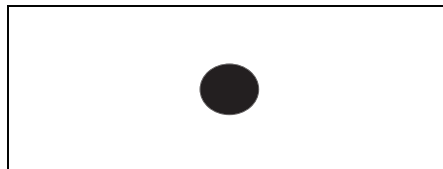


53M-04-082

This indicator light will come on and keep blinking continuously if there is some problem with door lock canceller system. Have the vehicle inspected by MARUTI SUZUKI authorized dealer.

NOTE:

In case door lock wiring and/or motor are damaged, Door Lock Cancellor Indicator Light will not blink.

Gear Shift Indicator (if equipped) Manual Transaxle

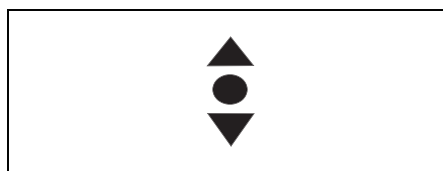

53M-04-083

This indicator informs about upshifting or downshifting the gear while the vehicle is running.

There are three indications:



Upshift Indicator

This symbol indicates that lower gear position is selected for vehicle's current speed and / or engine revolution. Changing to higher gear position is recommended.



Stay Indicator

This symbol indicates that current gear position is optimal for vehicle's current speed and / or engine revolution. No gear shifting is required.

NOTE:

While driving in optimal gear position, the upshift/downshift indicator does not appear.




Downshift Indicator

This symbol indicates that higher gear position is selected for the vehicle's current speed and / or engine revolution. Changing to lower gear position is recommended.

BEFORE DRIVING


Turn Signal Indicators

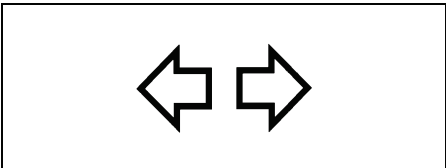

53M-04-084

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will flash along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will flash along with all of the turn signal lights.

Main Beam (high beam) Indicator Light

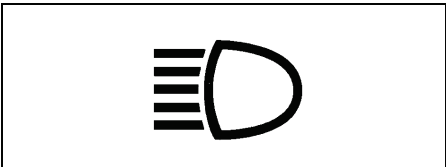

53M-04-085

This indicator comes on when headlight main beams (high beams) are turned on.

Front Fog Light Switch (if equipped)




53M-04-086

The front fog light comes on when front fog light operates.

Speedometer


ALTO 800

Type 1

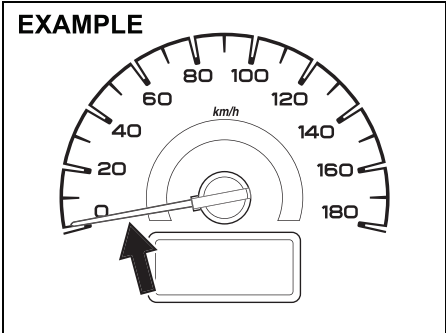

53M-04-087

Type 2

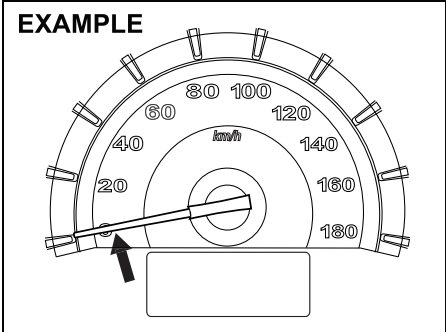


53MH0238


BEFORE DRIVING

ALTO K10

Type 1

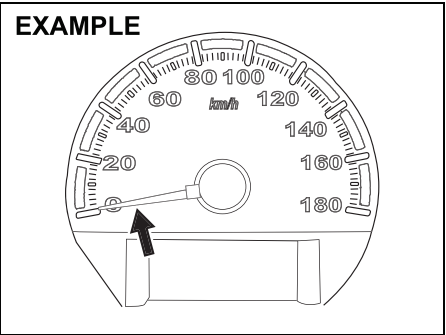

Type 2

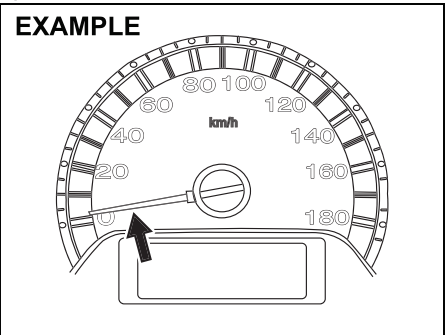

The speedometer indicates vehicle speed in km/h.

2-35


Fuel Gauge

ALTO 800

Type 1




Type 2

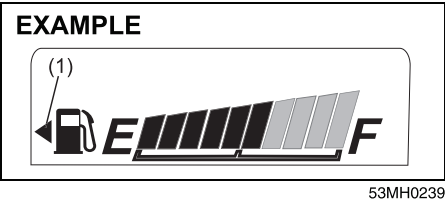

ALTO K10


Without tachometer

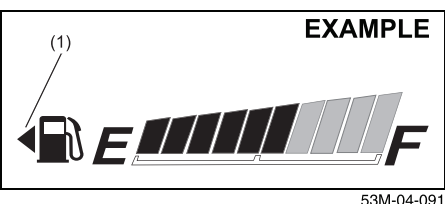

With tachometer



Automated Manual Transaxle

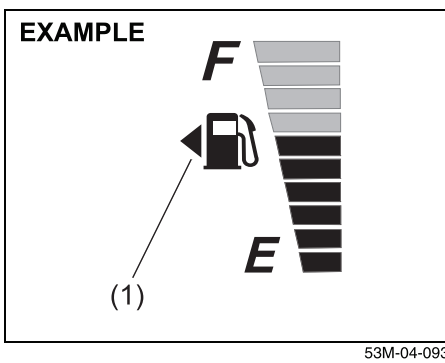

When the ignition switch is in the "ON" position, this gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty. The mark (1) indicates that the fuel filler door is located on the left side of the vehicle.

BEFORE DRIVING

When the fuel meter indicator shows only one segment to “E”, refill the tank as soon as possible.

NOTE:

- If the last segment blinks, it means that the fuel is almost empty.
- The fuel meter indicator varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

Depress Brake Pedal Indicator (if equipped)




53M-04-094

Information Display


ALTO 800

EXAMPLE

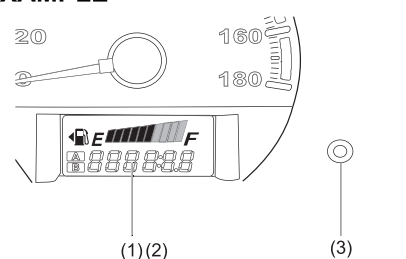

53MM02003

EXAMPLE

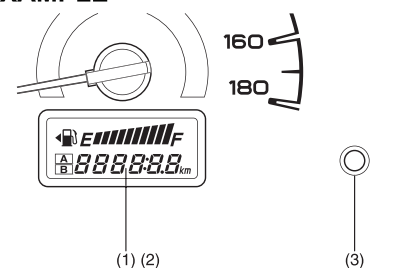

53M-04-095


- (1) Clock (if equipped)
- (2) Odometer/Trip meter
- (3) Odometer/Trip meter/Meter illumination control knob

ALTO K10

Manual transaxle

Without tachometer

EXAMPLE

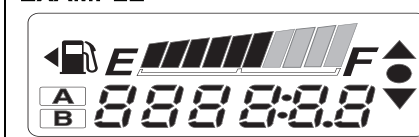

53M-04-096

With tachometer

EXAMPLE




53M-04-097

Automated Manual transaxle

Without tachometer


EXAMPLE

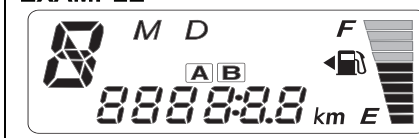

53M-04-098

BEFORE DRIVING

With tachometer

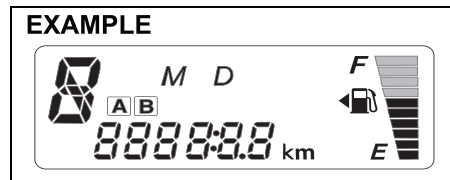

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

Clock (1) (if equipped)

The clock is shown when the ignition switch is in the "ON" position. To set the clock, follow the instructions below.

- Hold in the indication selector and meter illumination control knob (3) for more than 2 seconds. Push the indication selector and meter illumination control knob (3) to advance the minute display while the minute display is flashing. Release the indication selector and meter illumination control knob (3) for 5 seconds to set the minute display.
- The hour display flash after the minute display is set. Push the indication selec-


tor and meter illumination control knob (3) to advance the hour display. Release the indication selector and meter illumination control knob (3) for 5 seconds to set the hour display.

Odometer/Trip meter (2)


The odometer/trip meter is shown when the ignition switch is in the "ON" position. The odometer records the total distance the vehicle has been driven. The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

NOTICE


Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

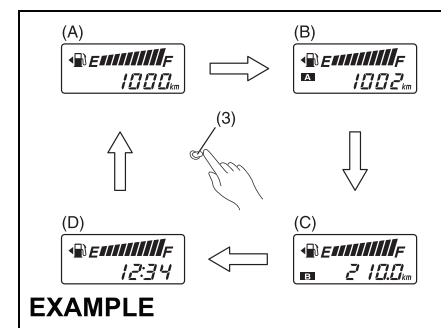

When the ignition switch is turned to "ON" with the lighting switch is in the "OFF" position, the display shows three types of indication; odometer (A), trip meter A (B), trip meter B (C) and clock (D). Push the "MODE" knob (3) quickly to switch the indication among the four.

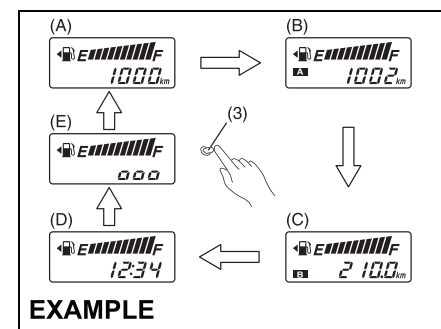


When the ignition switch is turned to “ON” and the position lights, tail lights and/or the headlights are on, the display shows four types of indication; odometer (A), trip meter A (B), trip meter B (C), clock (D) and indication of illumination intensity (E). Push the “MODE” knob (3) quickly to switch the indication among the five. When the indication shows (E), you can control the meter illumination intensity. Refer to “Meter illumination control” section below for details on how to dim or brighten the meter illumination.

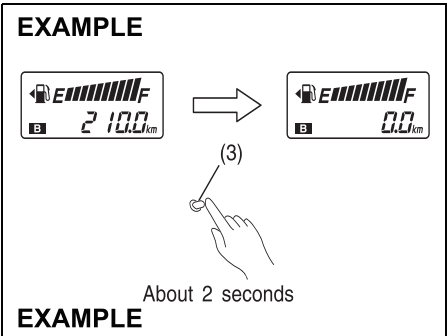

To reset the trip meter to zero, hold in the “MODE” knob (3) for about 2 seconds.

Meter illumination control

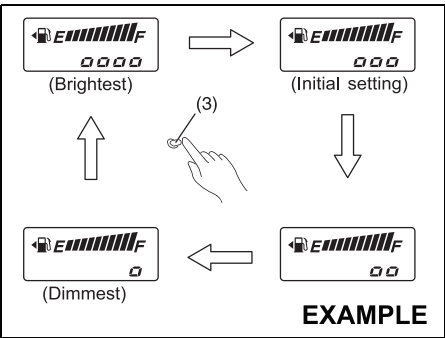


When the display shows the indication of illumination intensity (E), you can dim or brighten the meter illumination.

To change the meter illumination brightness, continue to hold in the “MODE” knob (3). The indication will change as shown in the illustration. The illumination gets dimmer then returns to the brightest condition after it reaches the dimmest.

NOTE:
When you reconnect the negative (–) terminal to the battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.

Lighting Control Lever

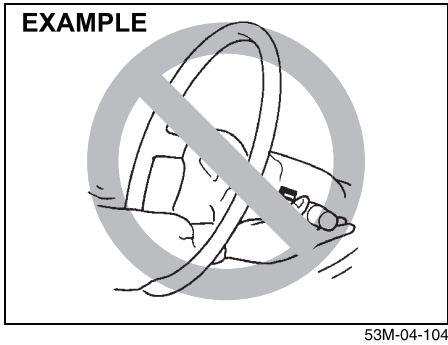


⚠ WARNING
To avoid possible injury, do not operate controls by reaching through the steering wheel.

BEFORE DRIVING


Lighting Operation

Type 1

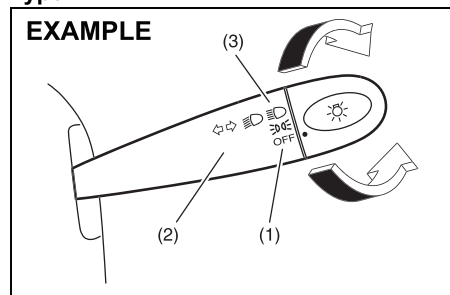

53M-04-105

Type 2

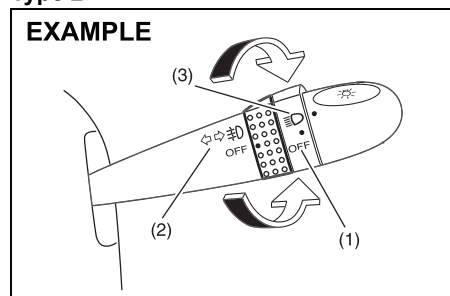

53M-04-106

To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF (1)

All lights are off.


☞ (2)

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

☞☞ (3)


Front position lights, tail lights, license plate light, instrument lights and head lights are on.

Type 1

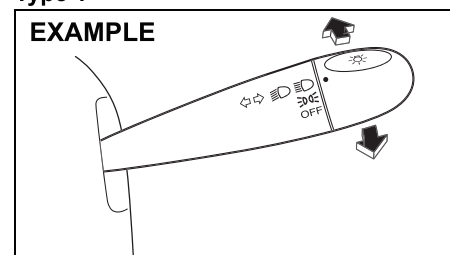

53M-04-107


Type 2

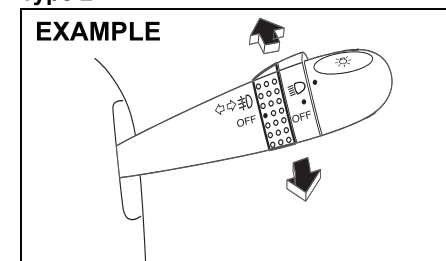

53M-04-108

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument panel will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

Headlight Leveling Switch

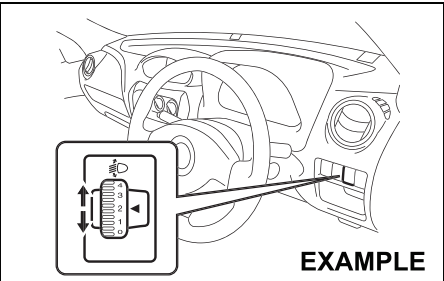


53M-04-109

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart below shows the appropriate switch position for different vehicle-load conditions.

Vehicle Load Condition	Switch Position			
	Alto 800		Alto K10	
	Petrol	CNG	Petrol	CNG
Driver only	0	0	0	0
Driver + 1 passenger (in front seat)	0	0	0	0
Driver + 4 passengers, No cargo	1	1	1	1

Driver + 4 passengers, Cargo added	2	NA	3	NA
Driver + Full cargo	3	NA	4	NA

Turn Signal Control Lever

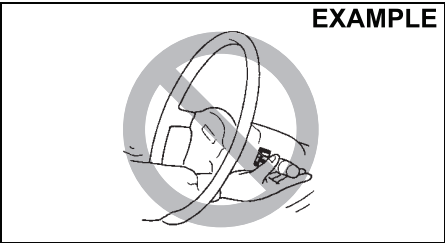

53M-04-110

⚠ WARNING


To avoid possible injury, do not operate controls by reaching through the steering wheel.

Turn Signal Operation

With the ignition switch in the “ON” position, move the lever up or down to activate the right or left turn signals.

Normal turn signal


Type 1

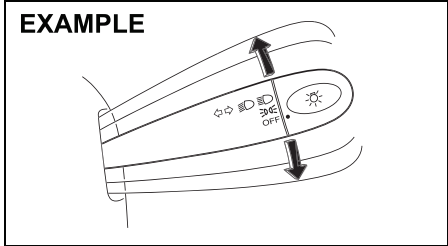

53M-04-111

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

Type 2

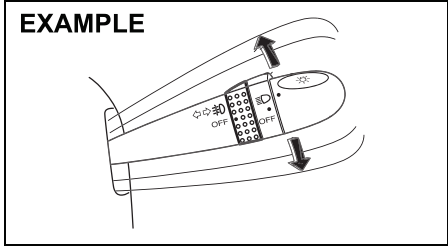


53M-04-112


BEFORE DRIVING

Lane change signal

Type 1

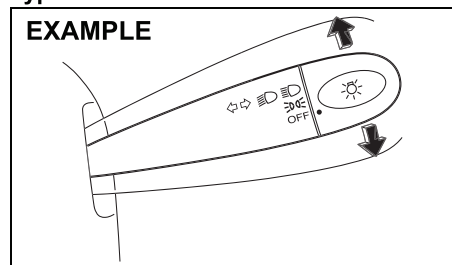


Type 2

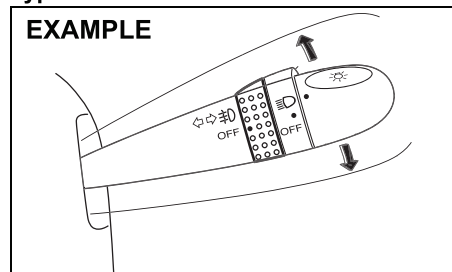


Sometimes, such as when changing lanes, the steering wheel is not turned far enough to cancel the turn signal. For convenience, you can flash the turn signal by moving the lever part way and holding it there. The lever will return to its normal position when you release it.

Hazard Warning Switch

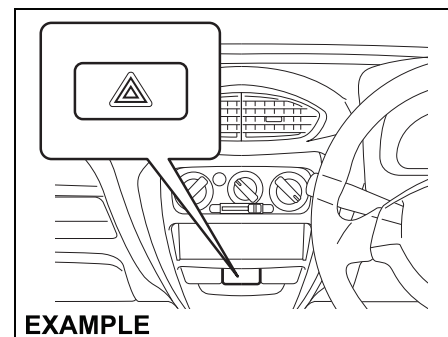

Push in the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again. Use the hazard warning lights to warn other traffic during emergency parking or when your vehicle could otherwise become a traffic hazard.

Windshield Wiper and Washer Lever

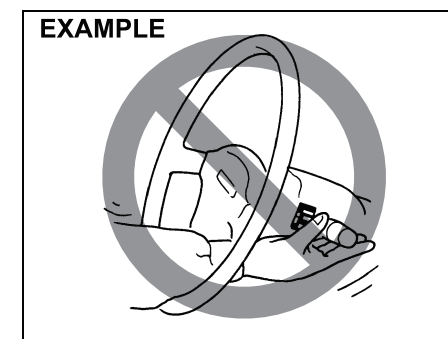


⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and Washer Operation

When the ignition switch is in the "ON" position, you can use the wiper/washer lever or switch (if equipped).


Windshield Wipers

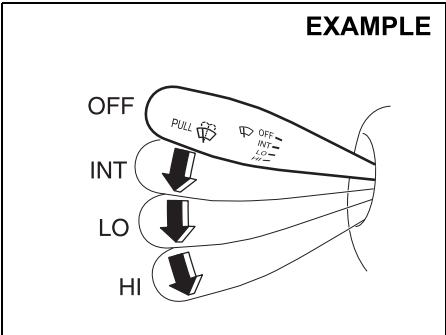

53MH0228

To turn the windshield wipers on, move the lever down to one of the three operating positions. In the “INT” position, the wipers operate intermittently. The “INT” position is very convenient for driving in mist or light rain. In the “LO” position, the wipers operate at a steady low speed. In the “HI” position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to the “OFF” position.

Windshield Washer

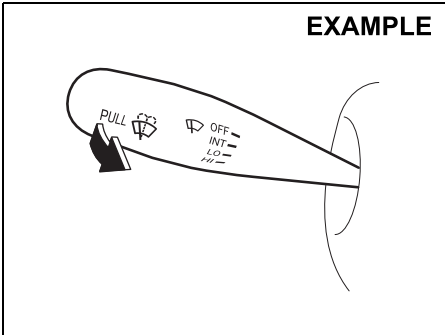

53MH0229

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and the “INT” position is equipped.

WARNING

- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle’s paint.


NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.

BEFORE DRIVING

Horn

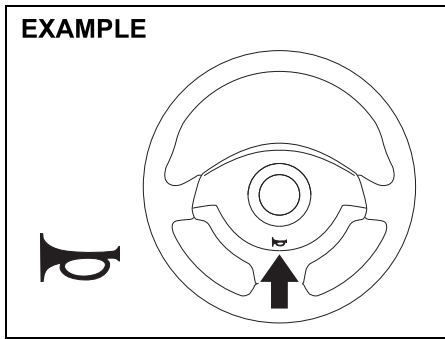

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.

OPERATING YOUR VEHICLE

Exhaust Gas Warning 3-1

Daily Inspection Checklist 3-1

Engine Oil Consumption 3-2

Ignition Switch 3-3

Parking Brake Lever 3-5

Pedal 3-6

Starting the Engine 3-7


Using the Transaxle 3-7

Braking 3-16

OPERATING YOUR VEHICLE

Exhaust Gas Warning

EXAMPLE

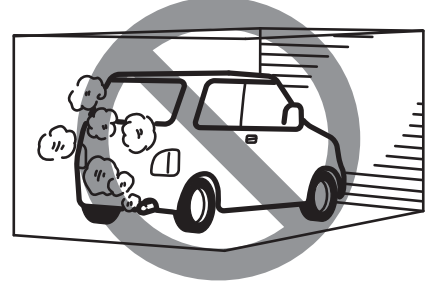

52D334

⚠ WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, be sure to take the following precautions to help prevent carbon monoxide from entering your vehicle.

- Do not leave the engine running in garages or other confined areas.

(Continued)

⚠ WARNING


(Continued)

- Do not park with the engine running for a long period of time, even in an open area. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to "FRESH AIR" and the fan is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to operate the vehicle with the tailgate or trunk open, make sure all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grille in front of the windshield clear of snow, leaves, or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leaks. Any damage or leaks should be repaired immediately.

Daily Inspection Checklist

Before Driving

EXAMPLE

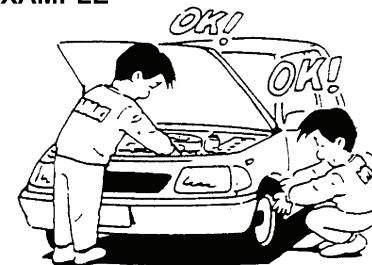

60A187S

- 1) Make sure that windows, mirrors, lights, and reflectors are clean and unobstructed.
- 2) Visually check the tires for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.

Refer to "Tires" in "INSPECTION AND MAINTENANCE" section for details.

- 3) Look for fluid and oil leaks.

NOTE:

It is normal for water to drip from the air conditioning system during use.

OPERATING YOUR VEHICLE

- 4) Make sure the hood is fully closed and latched.
- 5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint (if equipped).
- 7) Check the brake pedal and the parking brake lever.
- 8) Adjust the mirrors.
- 9) Make sure that you and all passengers have properly fastened your seat belts.
- 10) Make sure that all warning lights come on as the key is turned to the "ON" position.
- 11) Check all gauges.
- 12) Make sure that the BRAKE SYSTEM WARNING light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Windshield washer fluid level
- 5) Battery solution level
- 6) Hood latch operation

Pull the hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Be sure to close the hood securely after checking for proper latch operation. See "All

latches, hinges & locks" of "CHASSIS AND BODY" in the "Periodic Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section for lubrication schedule.

WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tire pressure using a tire pressure gauge. Also check the tire pressure of the spare tire.

Engine Oil Consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumed depends on the viscosity of the oil, the quality of the oil and the conditions the vehicle is driven under.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km (3000 miles) driving.

Oil consumption:

Max. 1.0 L per 1000 km

When judging the amount of oil consumption, note that the oil may become diluted and make it difficult to accurately judge the true oil level.


As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

OPERATING YOUR VEHICLE

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

Ignition Switch

EXAMPLE

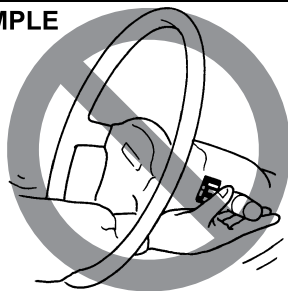


65D611

⚠ WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

EXAMPLE

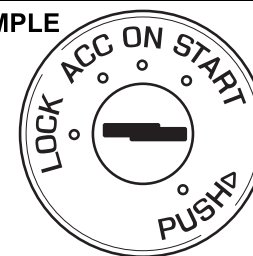


52KM052

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

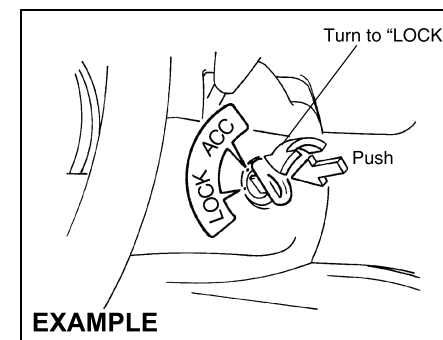

60G033

OPERATING YOUR VEHICLE

It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON

This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

EXAMPLE



81A297S

⚠ WARNING

- Never remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.
- Always remove the ignition key when leaving the vehicle even if only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle or could tamper with power windows. They also could suffer from heat stroke in warm or hot weather. These could result in severe injury or even death.


NOTICE

- Do not use the starter motor for more than 15 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult your MARUTI SUZUKI dealer.
- Do not leave the ignition switch in the "ON" position if the engine is not running as the battery will discharge.

OPERATING YOUR VEHICLE

Parking Brake Lever

EXAMPLE

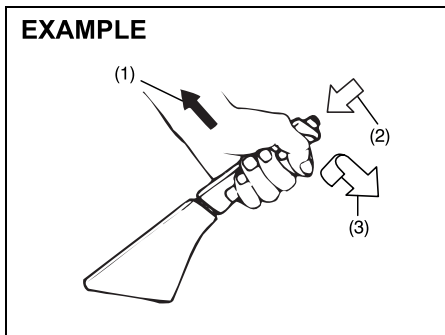

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, hold the brake pedal down and pull the parking brake lever all the way up. To release the parking brake, hold the brake pedal down, pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

⚠ WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by an authorized MARUTI SUZUKI dealer.

⚠ WARNING

Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, make sure the gear-shift lever is in 1st gear. Remember, even though the transaxle is in gear, you must set the parking brake fully.

⚠ WARNING


When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake.
- 2) Manual transmission - turn off the engine, then shift into reverse or first gear, with ignition key "ON" position.
Automated manual transaxle - shift into reverse or first gear and check the gear position indicator in the instrument cluster to make sure that the transaxle is engaged in 1st or reverse, then turn the ignition switch "LOCK" position.
- 3) Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake.
When you return to your vehicle, you must remember to first set the parking brake, then remove the wheel chocks.

Pedal

Manual Transaxle


EXAMPLE

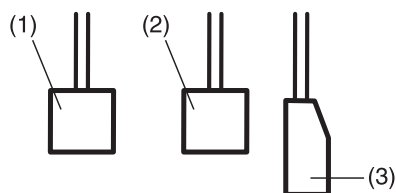

80J2121

Auto Gear Shift

EXAMPLE

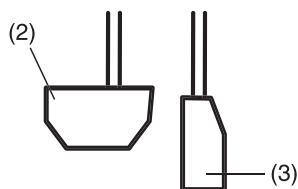

53M05009

Clutch Pedal (1) (For manual transaxle)

The clutch pedal is used to disengage the drive to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

⚠ WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal (2)

Your MARUTI SUZUKI vehicle is equipped with front disc brakes and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as cold, wet, snow, etc.

⚠ WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by your MARUTI SUZUKI dealer.

⚠ WARNING

Do not “ride” the brakes by applying them continuously or resting your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.


Accelerator Pedal (3)

This pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

OPERATING YOUR VEHICLE

Starting the Engine

Before Starting the Engine

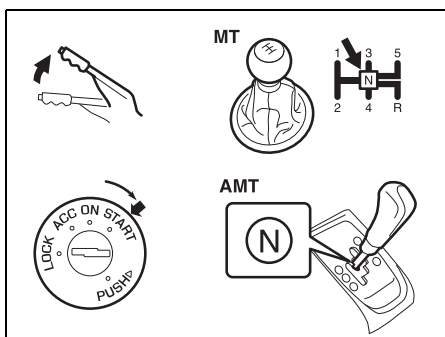

- 1) Make sure the parking brake is set fully.
- 2) Shift into "N" (Neutral) and depress the clutch pedal all the way to the floor. Hold the clutch pedal while starting the engine.
Automated manual transaxle – Shift into "N" (Neutral) and depress the brake pedal. Hold the brake pedal while starting the engine.

WARNING

Make sure that the parking brake is set fully and the transaxle is in Neutral before attempting to start the engine.

Starting a Cold and Warm Engine

With your foot off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key when the engine starts.

NOTICE


- Stop turning the starter immediately after the engine has started or the starter system may be damaged.
- Do not crank the engine for more than 15 seconds at a time. If the engine doesn't start on the first try, wait about 15 seconds before trying again.

If the engine does not start after 15 seconds of cranking, wait about 15 seconds, then press down the accelerator pedal to 1/3 of its travel and try cranking the engine again. Release the key and accelerator pedal when the engine starts.

If the engine still does not start, try holding the accelerator pedal all the way to the floor while cranking. This should clear the engine if it is flooded.

Using the Transaxle

Manual Transaxle

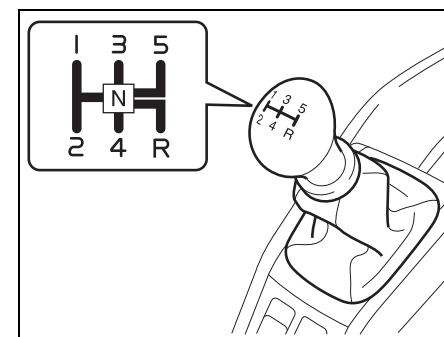

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized, which provides for quiet and easy shifting. Always push in the clutch pedal fully before shifting gears.

OPERATING YOUR VEHICLE

Downshifting maximum allowable speeds

For F8D engine

Downshifting	km/h (mph)
2nd to 1st	35 (22)
3rd to 2nd	65 (40)
4th to 3rd	100 (62)
5th to 4th	OK at all

For K10B engine

Downshifting	km/h (mph)
2nd to 1st	35 (22)
3rd to 2nd	80 (50)
4th to 3rd	120 (75)
5th to 4th	OK at all

NOTICE

When downshifting to a lower gear, make sure not to downshift at a speed faster than the maximum allowable speeds, or severe engine damage may result.

Keep the engine speed so it does not get into the red zone of tachometer.

⚠ WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, be sure to slow down before downshifting. Excessive and or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

NOTICE


Make sure that the vehicle is completely stationary before you shift into reverse.

NOTICE

- To help avoid clutch damage, do not use the clutch pedal as a foot-rest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and affect smooth shifting.

Automated Manual Transaxle


Automated manual transaxle is a 5-speed forward/reverse transaxle. Automated manual transaxle has the basic features of conventional manual transaxle, but clutch operation and transaxle gear shifting are controlled electronically. The features are as follows:

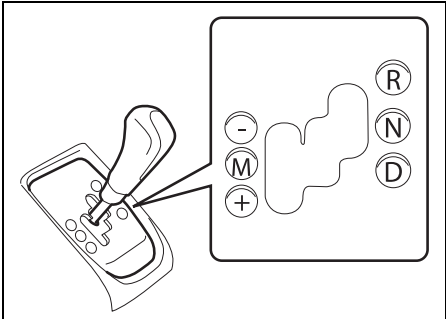

76MH0A054

OPERATING YOUR VEHICLE

EXAMPLE

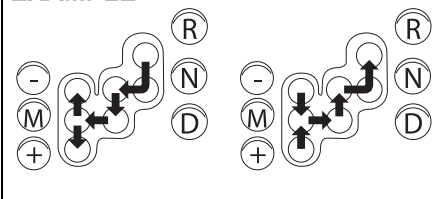

76MH0A055

Depress brake pedal indicator (if equipped)



76MH0A047

This light will come on if you do not depress the brake pedal in the following situations.

- When starting the engine.
- When the engine is on and the gearshift lever is shifted from “N” position to “D”, “M” or “R” position.
- When the ignition switch is in the “ON” position and the engine is off, the gearshift lever is shifted into any position.

Starting the engine

When starting the engine, always place the gearshift lever in the “N” position and depress the brake pedal firmly. The engine cannot be started unless the gearshift lever is in the “N” position and the brake pedal is depressed.



76MH0A056

Clutch operation

You can select either the Drive (D) mode or the Manual (M) mode. Since this vehicle controls clutch operation electronically in either mode, you do not need to operate the clutch.

Creeping function

This vehicle has a creeping function that helps the vehicle to start smoothly by engaging the clutch. When the gearshift lever is in any of the positions “D”, “M” or “R”, and you release your foot from the brake pedal, the vehicle starts slowly without depressing the accelerator pedal. The creeping function is disabled if you depress the brake pedal or pull up the parking brake lever.

NOTE:

If the driver's door is opened and/or the parking brake lever is engaged with the gear in the “M”, “D” or “R” position, the creeping function will not operate.

Parking and Stopping the vehicle

Automated manual transaxle does not have a parking position. The vehicle can be parked with the gearshift lever in any position. When stopping the vehicle, the gear will be shifted to 1st.

NOTICE

A buzzer will sound continuously if the vehicle is operated with the gearshift lever in-between of each shift positions. The vehicle will become inoperative if you continue to operate the vehicle with the gearshift lever in between shift positions.

Drive (D) mode

When the Drive (D) mode is activated, the most appropriate gear position is automatically selected upon operation of the accelerator pedal and variation of vehicle speed.

Normal driving:

- 1) Start the engine as instructed in “Starting the engine” in this section.
- 2) With your foot on the brake pedal, shift the gearshift lever to the “D” position. When the gearshift lever is shifted to the “D” position, the gear will be shifted to 1st.

OPERATING YOUR VEHICLE

1D

76MH0A057

NOTE:

- If 1st gear cannot be engaged even though the gearshift lever has been shifted from the “N” to the “D” position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate a malfunction.
 - The “N” indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;
 - If you shift the gearshift lever from the “N” to the “D” position without depressing the brake pedal
 - If the system is unable to re-try shiftingYou should depress the brake pedal and shift the gearshift lever to “N” position, then shift to “D” again.
- 3) Release the parking brake and brake pedal.
 - 4) Depress the accelerator pedal slowly.

⚠ WARNING

- While driving the vehicle, do not shift the gearshift lever to the “N” position. The engine brake may not work and you may get involved in an unexpected accident. If you return the gearshift lever from “N” to “D” because of unintended shifting, the gear position will be shifted according to the current vehicle speed.
- Always keep your foot on the brake pedal while stopped with the engine running. This operation prevents the vehicle from moving due to unintended activation of the creeping function.

NOTICE

If the gearshift lever cannot shift into any position, or the gear is changed to “N” position automatically when the vehicle speed becomes less than 10 km/h, there may be a system malfunction. In this case, ask your MAR-UTI SUZUKI dealer to inspect the Auto Gear Shift system as soon as possible.

NOTICE

Do not operate the system as described below. The life cycle of the clutch may be reduced.

- Using the accelerator pedal to hold the vehicle on an uphill slope with the gearshift lever in the “D” or “M” position. If you perform this operation for a certain period of time, a warning buzzer will sound.
- Shifting the gearshift lever to the “D”, “M” or “R” position while racing the engine.
- Driving at low speed using a high gear.
- Holding the vehicle on an uphill slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.

NOTICE

Operate your Automated Manual Transaxle vehicle with one foot only. driving your automated manual transaxle vehicle with accelerator and brake pedals depressed together will cause overheating of the clutch.

OPERATING YOUR VEHICLE

Starting off on an uphill/downhill:

Uphill

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- 2) Shift the gearshift lever to the “D” position while depressing the brake pedal. Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
- 3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Downhill

- 1) Depress the brake pedal and shift the gearshift lever to the “D” position. Make sure that the gear is in 1st by checking the gear position indicator.
- 2) Release the brake pedal and depress the accelerator pedal slowly. Even if the accelerator pedal is not depressed, the

clutch will be engaged when the vehicle speed increases.

Using engine braking:

When driving on a downhill slope, downshifting is recommended. So you can use engine braking.


By placing the gearshift lever in the “M” position, the Manual (M) mode is selected, and you can shift to a lower gear manually. For details of downshift operation, refer to “Upshift and downshift” in the “Manual (M) mode”.

Manual (M) mode

The gears are not shifted automatically. To shift the transaxle, the driver must operate the gearshift lever to the “+” or “-” direction. As for conventional manual transaxle vehicles, releasing the accelerator pedal a little may help the transaxle to shift smoothly.


Upshift and downshift:

Upshifting

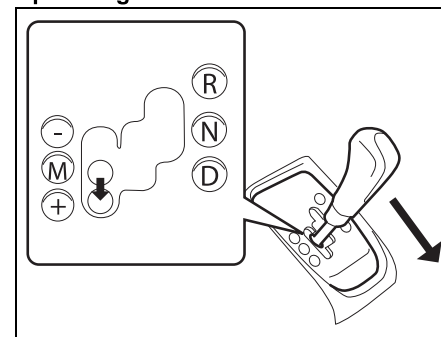


76MH0A058

Pull the gearshift lever to the “+” direction and release it. Every time the lever is operated, the transaxle is upshifting 1 step in the order of 1st → 2nd → 3rd → 4th → 5th gear.

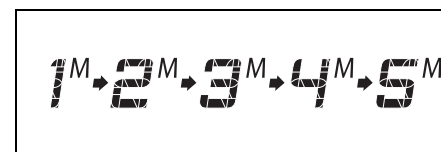


76MH0A059

Downshifting

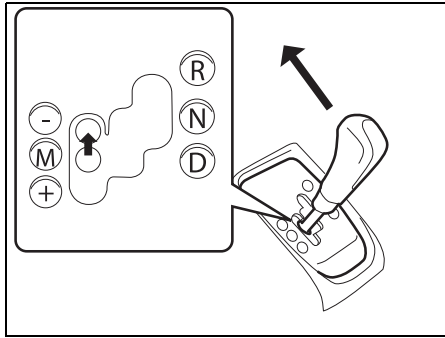

76MH0A060

Push the gearshift lever to the “–” direction and release it. Every time the lever is operated, the transaxle is downshifted in the order 5th → 4th → 3rd → 2nd → 1st gear.

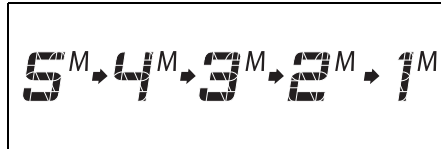

76MH0A061

The gear position is displayed on the gear position indicator. The gear position indicator shows the transaxle gear position. Before starting off, always check the gear position indicator to make sure that the transaxle is engaged in 1st or reverse, then depress the accelerator pedal.

NOTE:

- *To downshift smoothly, the engine runs fast in some cases. This is done intentionally by the system and is not a malfunction.*
- *When driving down a hill, downshift and use the engine braking appropriately. If necessary, continuous downshifting is possible. However, if downshifting more than 3 steps, gear shifting will take more time.*
- *When the gear is shifting, a noise can be heard in some case. This is not a malfunction.*

⚠ WARNING

- Be careful when accelerating, upshifting, downshifting or braking on a slippery surface. Sudden acceleration or engine braking could cause the vehicle to spin or skid.
- To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and fail.
- While driving the vehicle, do not shift the gearshift lever to “N” position. The engine brake may not work and you may get involved in an unexpected accident. If you return the gearshift lever from “N” to “M” because of unintended shifting, the gear position will be shifted according to the current vehicle speed.
- Do not apply the parking brake while driving. Otherwise, it could cause a skid and you may get involved in an unexpected accident.

OPERATING YOUR VEHICLE

NOTICE

- If the gearshift lever cannot shift into any position, or the gear is changed to "N" position automatically when the vehicle speed becomes less than 10 km/, there may be a system malfunction. In this case, ask your MARUTI SUZUKI dealer to inspect the Auto Gear Shift system as soon as possible.
- The manual (M) mode does not upshift even if the engine speed reaches the rev-limit.
- The system will not allow shifting up or down to a gear that would cause engine over-revving or under-revving.
- If frequently driving at low speed using a high gear position, the life cycle of the clutch may be reduced.
- Frequent downshifting (more than 3 positions consecutively) causes the reduction of transaxle life.

Starting off:

- 1) Start the engine as instructed in "Starting the engine" in this section.
- 2) With your foot on the brake pedal, shift the gearshift lever to the "M" position. When the gearshift lever is shifted to the "M" position, the gear will be shifted to 1st. Before starting off, always make sure that the intended gear is engaged by checking the gear position indicator, then depress the accelerator pedal.

NOTE:

- If 1st gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "M" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate a malfunction.
- The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;
 - If you shift the gearshift lever from the "N" to the "M" position without depressing the brake pedal
 - If the system is unable to re-try shiftingYou should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "M" position again a few seconds later.

- 3) Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.

⚠ WARNING

Always keep your foot on the brake pedal or pull up the parking lever while stopped with the engine running. These operations prevent the vehicle from starting due to unintended activation of the creeping function.

NOTICE

Do not operate the system as described below. The life cycle of the clutch may be reduced.

- Using the accelerator pedal to hold the vehicle on an uphill slope operation with the gearshift lever in the "M" or "D" position. If you perform this operation for a certain period of time, a warning buzzer will sound.
- Shifting the gearshift lever to the "M", "D" or "R" position while racing the engine.
- Driving at low speed using a high gear.
- Stopping on a slope using the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound.

NOTICE

Operate your Automated Manual Transaxle vehicle with one foot only. driving your automated manual transaxle vehicle with accelerator and brake pedals depressed together will cause overheating of the clutch.

OPERATING YOUR VEHICLE

Starting off on an uphill/downhill slope:

Uphill

- 1) Apply the parking brake firmly so that the vehicle does not roll backwards.
- 2) Shift the gearshift lever to the "M" position while depressing the brake pedal. Make sure that the gear position indicator in the instrumental cluster displays 1st gear.
- 3) Release the brake pedal and depress the accelerator pedal gradually, and when the vehicle starts to move, release the parking brake and depress the accelerator pedal to start off.

NOTICE

On an uphill slope, never hold the vehicle at a stop using only the accelerator pedal or creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Downhill

- 1) Depress the brake pedal and shift the gearshift lever to the "M" position. Check the gear position indicator to make sure that the gear is in 1st.
- 2) Release the brake pedal and depress the accelerator pedal slowly. Even though the accelerator pedal is not

depressed, the clutch will be engaged when the vehicle speed increases.

Backing up

After the vehicle has stopped completely, depress the brake pedal and shift the gearshift lever to the "R" position. Depress the accelerator pedal slowly as when starting off in 1st gear. Before backing up, make sure that reverse gear is selected by checking the gear position indicator.



76MH0A062

NOTE:

- If reverse gear cannot be engaged even though the gearshift lever has been shifted from the "N" to the "R" position, the system will re-try shifting automatically. This will take some time, noise may be heard from the gears, and shifting gear shock may occur. However, they do not indicate a malfunction.
- The "N" indicator will flash, the depress brake pedal indicator will come on and a warning buzzer (long pulse sound) will sound if any of the following cases occur;
 - If you shift the gearshift lever from the "N" to the "R" position without depressing the brake pedal
 - If the system is unable to re-try shifting

You should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "R" position again a few seconds later.

- The system will not allow shifting to the "R" position if the vehicle speed is over about 3 km/h. If the gearshift lever is operated under this condition, the "N" indicator in the instrument cluster will blink. However, when the vehicle speed drops below about 3 km/h, the gear will be shifted to reverse. Make sure that the vehicle has stopped completely before shifting to the "R" position.

NOTICE

On a downhill slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.

Stopping

The vehicle can be stopped by depressing the brake pedal regardless of the gear position. This is because the clutch is automatically disengaged to prevent the engine from stopping.

- If the gearshift lever is in the "D" position, the gear will be downshifted to 1st when the vehicle stops.

OPERATING YOUR VEHICLE

- If the gearshift lever is in the “M” position, the gear will be downshifted to 1st when the vehicle stops.

WARNING

- When stopping, for example, at a traffic light, be sure to depress the brake pedal firmly. For your safety, apply the parking brake, too, when stopping on a hill.
- When racing the engine, make sure that the gear is in the “N” position by checking the gear position indicator. If the accelerator is operated with the gear in any other position, the vehicle may move resulting in an unexpected accident.
- Do not leave your vehicle unattended while the engine is running.
- When leaving the vehicle, stop the engine and park the vehicle with a gear engaged. If you need to leave the vehicle with the engine running, apply the parking brakes firmly, and shift the gearshift lever to the “N” position. Otherwise, the vehicle may move unexpectedly and may cause an accident.

NOTICE

- On a slope, never hold the vehicle at a stop using only the accelerator pedal or the creeping function. If you perform this operation for a certain period of time, a warning buzzer will sound, and in some cases the engine will stall. This can also cause excessive damage to the clutch.
- If the gearshift lever is operated more than necessary, the system may not allow operation of the gearshift lever for a certain period of time, and the gear may not be shifted appropriately. Therefore, do not operate the gearshift lever if not necessary.

Parking

Unlike an automatic transaxle, Automated manual transaxle does not have a parking position. The vehicle can be parked with the gearshift lever in any position.

- 1) Apply the parking brake firmly and turn the ignition “ON” position.
- 2) While depressing the brake pedal, shift the gearshift lever to the “R” position on a downhill slope, and to the 1st position in the drive (D) mode or the “M(1)” position in the manual (M) mode on an uphill slope and confirm the gear position by checking the gear position indicator.

- 3) turn the ignition switch to “LOCK” position.

NOTE:

- After the ignition switch is turned to “ACC” or “LOCK” position is stopped, the gear in the transaxle does not change even if you shift the gearshift lever in any position. Always shift the gearshift lever before stop the engine.
- Check the transaxle gear position by looking at the gear position indicator, then turn the ignition switch off to stop the engine. Release the brake pedal after a few seconds.

WARNING

- If the gear is not engaged properly and completely before the ignition switch is turned off, the vehicle may not be parked with the gear engaged. Always confirm the gear position by checking the gear position indicator when parking.
- On a downhill slope, the gear should be put in reverse, and in 1st gear on an uphill slope. Otherwise, the vehicle may move, and cause an unexpected accident. If the gear is left in the “N” position, the vehicle cannot be parked with a gear engaged.

Parking cancel

Depress the brake pedal, turn the ignition switch to the "ON" position, and shift the gearshift lever to the "N" position. The gear will be disengaged.

Warning functions

A warning buzzer will sound or the indicator will blink under the following conditions.

- The clutch is heated due to excessive load.
- The creeping function is being activated for a long period of time.

NOTICE

In the above cases, pull over to the side of the road and stop the engine, and then ask your MARUTI SUZUKI dealer to inspect your vehicle. Otherwise, the clutch disc may get damaged.

- The ignition switch is turned to the "OFF" position with the gear in 2nd, 3rd, 4th or 5th. In this case, turn the ignition switch to the "ON" position and shift the gearshift lever in the "N" position, shift it to the "D" or "M" or "R" position, then turn the ignition switch to "OFF".
- During a stop, the driver's door is opened with the gearshift lever in the "R", "D" or "M" position while the engine is running.

"N" indicator blinking

When the gear indicator lamp blinks "N", you should depress the brake pedal and shift the gearshift lever to "N" position.

"1st" indicator blinking


When the gear indicator lamp blinks "1st", you should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "D" or "M" position again a few seconds later.

"R" indicator blinking

When the gear indicator lamp blinks "R", you should depress the brake pedal and shift the gearshift lever to "N" position, then shift to "R" position again a few seconds later.

Braking

EXAMPLE

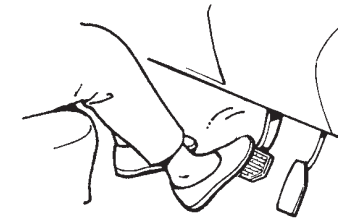

53M05022

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h (37 mph) will be approximately 4 times greater than the braking distance needed at 30 km/h (19 mph). Start to brake the vehicle when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

OPERATING YOUR VEHICLE

WARNING

If water gets into the brake drums, brake performance may become poor and unpredictable.

After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-Assisted Brakes (if equipped)

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake Assist System (if equipped)

When you slam the brakes on, the brake assist system judges as an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

Anti-Lock Brake System (ABS) (if equipped)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it

senses that the wheels are locking up. You may feel the brake pedal moves a little while the ABS is operating.

NOTE:

The ABS will not work if vehicle speed is under about 10 km/h (6mph).

WARNING

- On some types of loose surfaces (such as gravel, snow-covered roads, etc.) the stopping distance required for an ABS-equipped vehicle may be slightly greater than for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tires are able to “plow” the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.
- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.

(Continued)

OPERATING YOUR VEHICLE

⚠ WARNING

(Continued)

- In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive faster than conditions will safely allow.



63J081

- (1) ABS warning light
(2) Brake system warning light

⚠ WARNING


- If the ABS warning light (1) on the instrument panel comes on and stays on while driving, there may be a problem with the ABS system. Ask your SUZUKI dealer to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the Brake system warning light (2) on the instrument panel simultaneously stays on or comes on when driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask your SUZUKI dealer to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

How the ABS Works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself.

⚠ WARNING

The ABS may not work properly if tires or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tires or wheels, use only the size and type specified in this owner's manual.

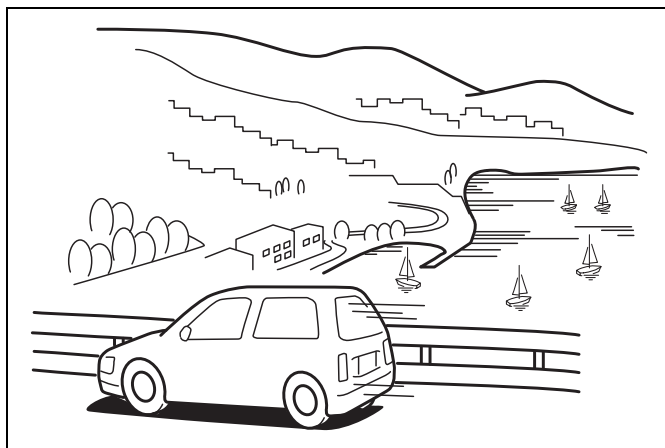


60G409

DRIVING TIPS

Running-in	4-1
Catalytic Converter	4-1
Improving Fuel Economy	4-2
Highway Driving	4-3
Driving on Hills	4-3
Driving on Slippery Roads	4-4
Driving on Wet Roads	4-5
Do's and Dont's for Safe Driving	4-6
Margin for Safety	4-8

DRIVING TIPS

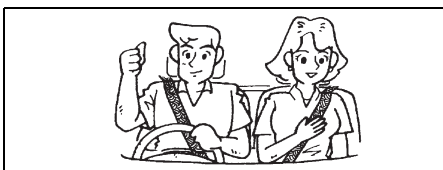

68PHM4001

⚠ WARNING

- **WEAR YOUR SEAT BELTS AT ALL TIMES.** Even though air bags may be equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to the “Seat Belts and Child Restraint Systems” section for instructions on proper use of the seat belts.
- **Never drive while under the influence of alcohol or other drugs.** Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated, or under stress.

Running-in


NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the initial 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km of driving.
- Do not drive slowly with the transaxle in a high gear.
- Drive the vehicle at moderate engine speeds.
- Do not tow a trailer.

Catalytic Converter

EXAMPLE

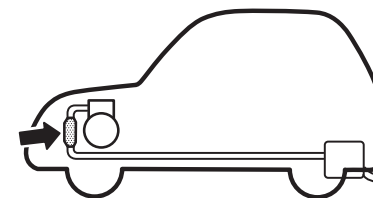

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalyst. This may result in permanent heat damage to the catalyst and other vehicle components.

NOTICE

To avoid damaging catalyst or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfiring or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transaxle is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.
- Avoid driving your vehicle at excessively high engine speed.

EXAMPLE



54G584S

⚠ WARNING

Be careful about where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving Fuel Economy

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you are to wait for more than a minute while you are parked, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up while driving.

Avoid sudden acceleration

Sudden acceleration starting from rest or while driving will consume fuel unnecessarily and shorten engine life. Start off slowly.

Avoid unnecessary stops


Avoid unnecessary deceleration and stopping. Try to maintain a slow, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Keep as constant a speed as road and traffic conditions will permit.

DRIVING TIPS

Keep the air cleaner clean

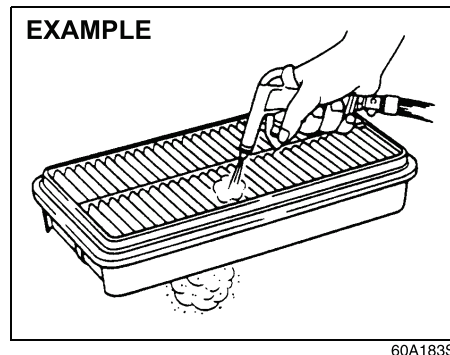

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum

Heavier the load, more fuel the vehicle consumes. Take out any luggage or cargo when it is not necessary.

Keep tire pressures correct


Underinflation of the tires can waste fuel due to increased running resistance of the tires. Keep your tires inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.

Highway Driving

When driving at high speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tires due to a water film forming between them. Steering or braking the vehicle while hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

Driving on Hills

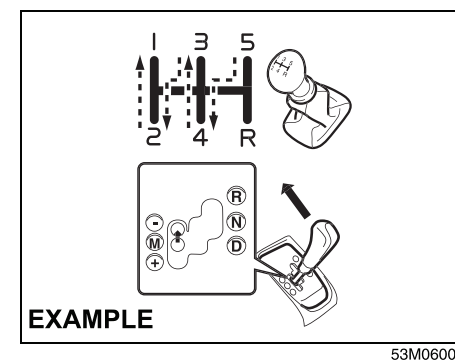

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting into a lower gear.

⚠ WARNING

Try not to hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.


While moving uphill/gradient from a stand still condition

- Apply the parking brake firmly so that the vehicle does not roll backwards.
- Depress the Clutch pedal and Shift the gearshift lever to 1st Select position.
- Do not slip the clutch.
- When ready to start, press accelerator pedal and slowly release the clutch pedal simultaneously. When the vehicle starts to move, gradually release the parking brake.

NOTICE

When descending down a hill, **NEVER** turn the ignition key to the "OFF" position. Emission control system damage may result.

Driving on Slippery Roads

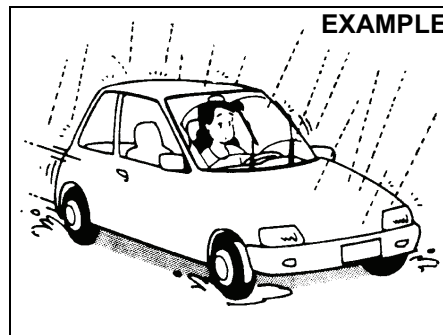

60G089S

Under wet road conditions you should drive at a lower speed than on dry roads due to possible slippage of tires during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

Tire Chains

Tire chains should only be used if they are needed to increase traction or are required by law. Make sure that the chains you use are the correct size for your vehicle's tires. Also make sure that there is enough clearance between the fenders and the chains as installed on the tires.

Install the chains on the front tires tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km (1/2 mile) if necessary. With the chains installed, drive slowly.

NOTICE

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

DRIVING TIPS

If Your Vehicle Gets Stuck

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

- 1) Shift the transaxle back and forth between a forward range (or first gear for manual transaxle) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting. Do not race the engine. Excessive wheel spin will cause the tires to dig deeper, making it more difficult to free the vehicle.
- 2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult your authorised Maruti Suzuki workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by a towing cable or chain secured to the towing hook either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame Hooks" in the "OTHER CONTROLS AND EQUIPMENT" section.

WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

NOTICE

Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transaxle damage.


Driving On Wet Roads

CAUTION

- When driving on wet roads, avoid driving through large amount of standing water on the road. Large amount of water entering the engine compartment may cause damage to the engine and/or electrical components.
- If stuck in deep water, do not start till water level drops.
- Water is incompressible substance, water inside engine is harmful to the engine.

WARNING

- In addition to following the driving tips in this section, it is important to observe the following precautions.
- Make sure your tires are in good condition and always maintain the specified tire pressure. Refer to "Tires" in the "INSPECTION AND MAINTENANCE"
- Do not use tires other than those specified by MARUTI SUZUKI. Never use different sizes or types of tires on the front and rear wheels. For information regarding the specified tires, refer to the Tire Information Label located on the driver's door lock pillar.
- Never use oversized tires or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tires may also rub against the vehicle body over bumps, causing vehicle damage or tire failure.
- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

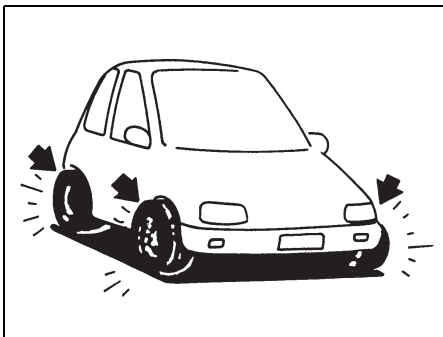


Do's and Dont's for Safe Driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

Starting


- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.

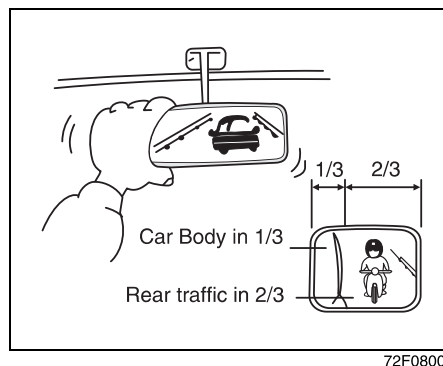

- 3) Before moving, look around your vehicle to confirm safety.
- 4) Don't accelerate suddenly, since it is dangerous and wastes fuel.


General Driving

- 1) Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
- 2) Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.

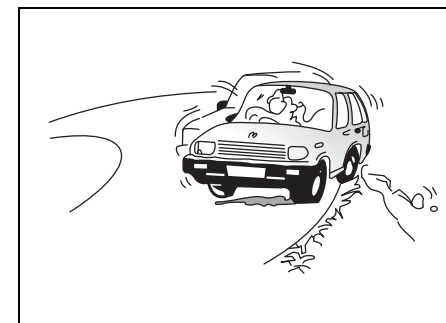

- 3) Turn ON the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit.
- 4) Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.
- 5) When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.
- 6) Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
- 7) Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
- 8) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatigued.


DRIVING TIPS

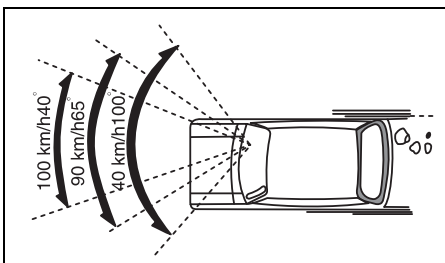

72F08015

- 9) Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
- 10) When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

Braking

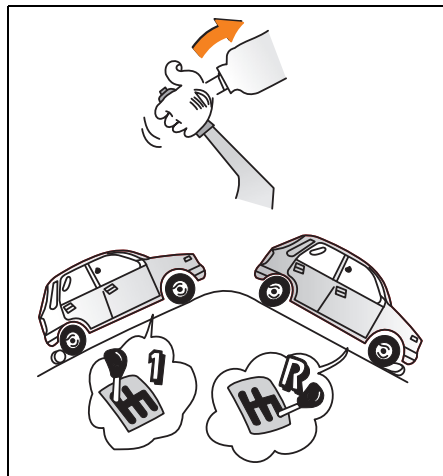

72F08011

- 1) Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
- 2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tyres are worn out as they skid more.



72F08012

Use foot brake in three stages

1. Warn the vehicle behind you
 2. Gradually apply the brake.
 3. Bring the vehicle to a halt.
- 3) When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.

Long distance driving


- 1) Be sure to perform safety checks before starting a trip.
- 2) Take rest at certain intervals to prevent an accident which may occur due to feeling sleepy or tired.

Night time driving




72F08020

- 1) Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
- 2) Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicle-to-vehicle distance.

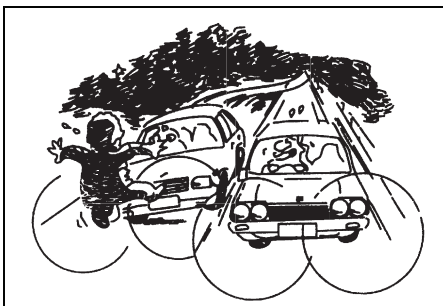

72F08021

- 3) Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.

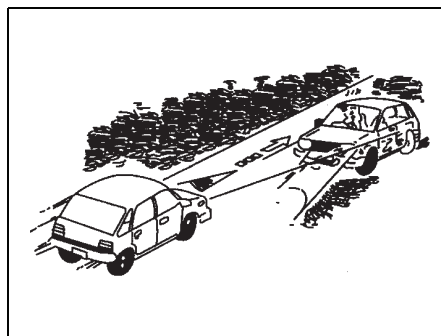

53M06015

- 4) Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.

Margin for Safety

It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.

- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- Observe traffic rules and regulations.

Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience.

Follow the do's and don'ts listed, and driving will never be the same again.

OTHER CONTROLS AND EQUIPMENT


OTHER CONTROLS AND EQUIPMENT

Manual Heating and Air Conditioning System	
(if equipped)	5-1
Fuel Filler Cap	5-6
Engine Hood	5-7
Sun Visor	5-8
Interior Light Switch	5-8
Accessory Socket (if equipped)	5-9
Assist Grips (if equipped)	5-9
Glove Box	5-10
Cup Holder and Storage Area	5-10
Floor Mats	5-10
Shopping Hook (if equipped)	5-11
Luggage Compartment Cover (if equipped)	5-11
Frame Hooks	5-12
Front Speaker Provision	5-12
Audio System (if equipped)	5-13

OTHER CONTROLS AND EQUIPMENT

Manual Heating and Air Conditioning System (if equipped)

EXAMPLE

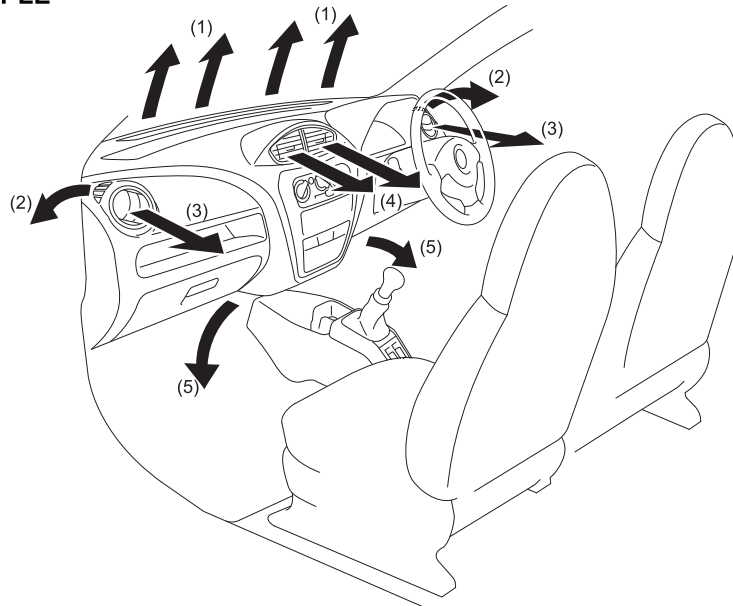

53MM05002


- (1) Windshield defroster outlet
- (2) Side defroster outlet
- (3) Side outlet
- (4) Center outlet
- (5) Front floor outlet

5-1

Side outlet

ALTO 800


EXAMPLE

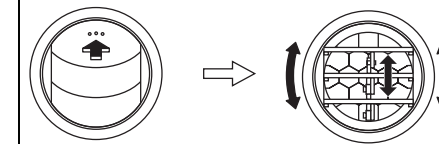

53MM05001

ALTO K10

EXAMPLE

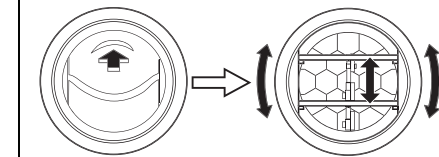


53M-07-003

When "Open", air comes out regardless of the air flow selector position.

OTHER CONTROLS AND EQUIPMENT


Description of Controls

ALTO 800

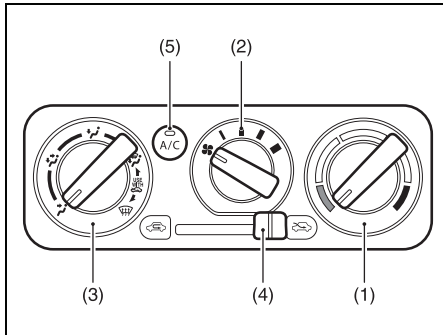

53MH0503

ALTO K10

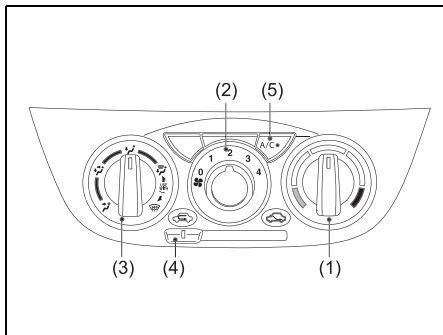

53M-07-005

Temperature selector (1)


This is used to select the temperature by turning the selector.

Blower speed selector (2)

This is used to turn on the blower and to select blower speed by turning the selector.

Air flow selector (3)

EXAMPLE

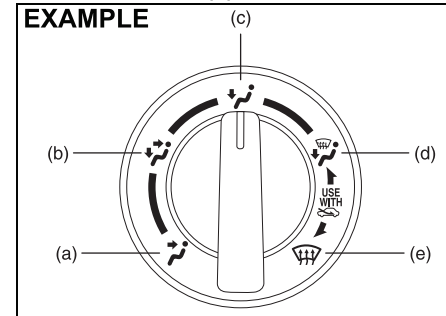


53MH0504

This is used to select one of the functions described below.


VENTILATION (a)

ALTO 800

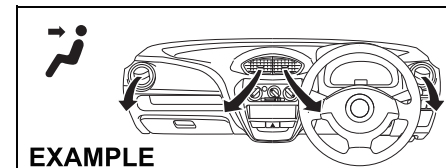

53MH0505

ALTO K10

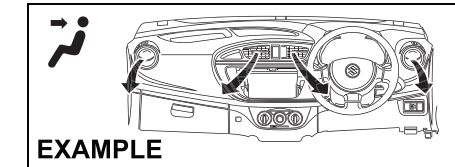


53M-07-008

Temperature-controlled air comes out of the center and side air outlets.


BI-LEVEL (b)

ALTO 800

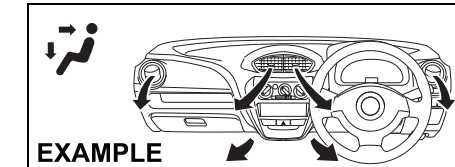

53MH0506

ALTO K10

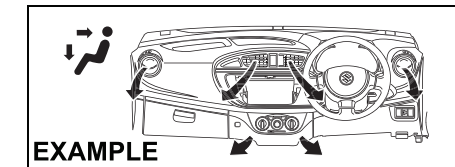

53M-07-010


Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the

OTHER CONTROLS AND EQUIPMENT

air from the floor outlets and the air from the center and side outlets will be the same temperature.

HEAT (c)


ALTO 800

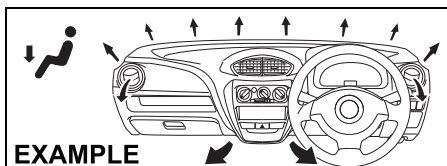

EXAMPLE

53MH0507

ALTO K10

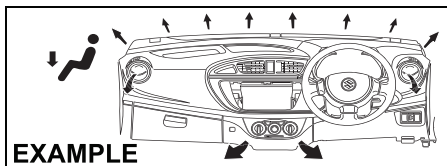


EXAMPLE

53M-07-0012

Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

HEAT & DEFROST (d)


ALTO 800

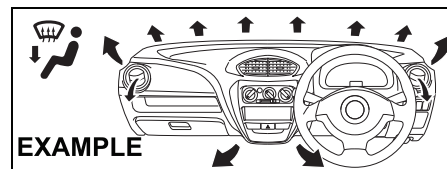

EXAMPLE

53MH0508

ALTO K10

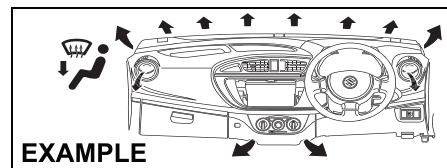


EXAMPLE

53M-07-014

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

DEFROST (e)


ALTO 800

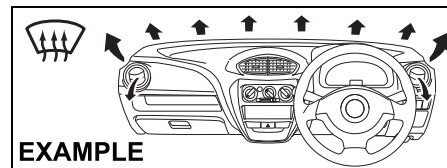

EXAMPLE

53MH0509

ALTO K10

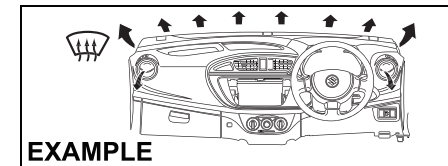


EXAMPLE

53M-07-016

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

Air intake selector (4)


ALTO 800

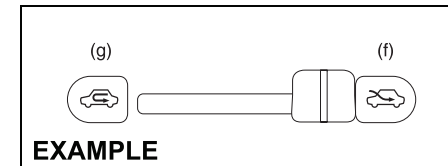

EXAMPLE

53MH0510

ALTO K10

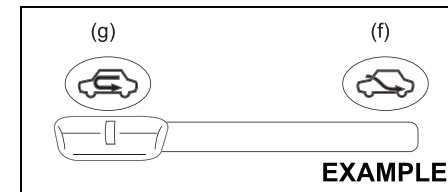

EXAMPLE

53m-07-018

This selector is used to select the following modes.

OTHER CONTROLS AND EQUIPMENT

Fresh Air (f)

When this mode is selected by moving the lever to right, outside air is used.

Recirculated Air (g)

When this mode is selected by moving the lever to left, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down the interior.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select FRESH AIR.

Air conditioning switch (5) (if equipped)

To turn on the air conditioning system, set the blower speed selector to a position other than "OFF" and push in the "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is on. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System Operating Instructions

Natural ventilation

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The control settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)

The control settings are the same as for normal heating except you select RECIRCULATED AIR. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on the "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The control settings are the same as for normal cooling except you select RECIRCULATED AIR and the highest blower speed.

NOTE:

- To turn on the air conditioning system, push in the "A/C" switch and set the blower speed selector to a position other than OFF. With this "A/C" switch opera-

OTHER CONTROLS AND EQUIPMENT

tion, an indicator light will come on when the air conditioning system is on. To turn off the air conditioning system, push the "A/C" switch again.

- During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature. Less operation of the compressor results in better fuel economy.

NOTE:


- If you select **RECIRCULATED AIR** for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select **FRESH AIR**.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at **FRESH AIR** and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select **FRESH AIR** and turn on the "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using the **DEFROST** or **HEAT & DEFROST** functions.

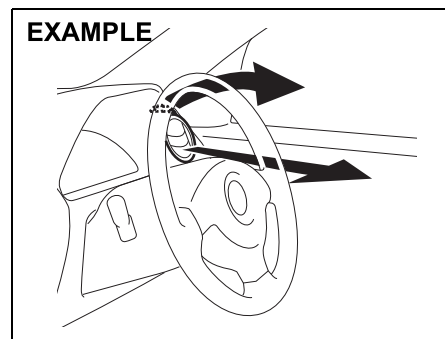

53MH0511

NOTE:

If you need maximum defrosting:

- set the air flow selector to **DEFROST**,
- set the blower speed selector to high,
- adjust the temperature selector to the hot end, and
- adjust the side outlets so the air blows on the side windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

NOTE:

Your vehicle uses the air conditioning refrigerant **HFC-134a**, commonly called "**R-134a**". **R-134a** replaced **R-12** around 1993 for automotive applications. Other refrigerants are available, including recycled **R-12**, but only **R-134a** should be used in your vehicle.


NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

OTHER CONTROLS AND EQUIPMENT


Fuel Filler Cap

ALTO 800

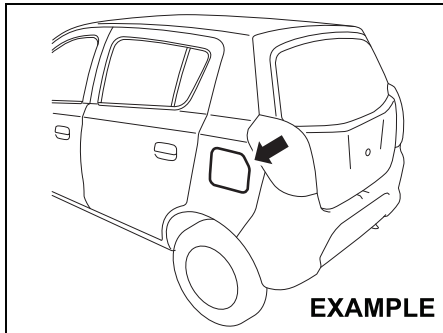


53MH0512

ALTO K10

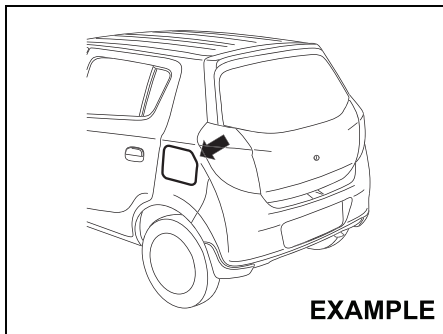


53M-07-021

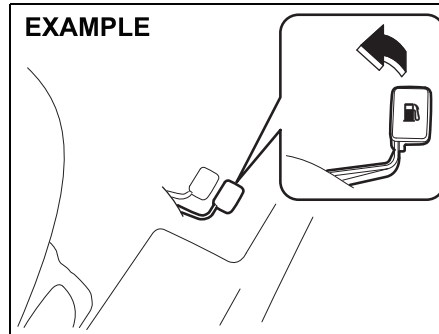

53MH0513

The fuel filler cap is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard side of the driver's seat and locked by simply closing the door.

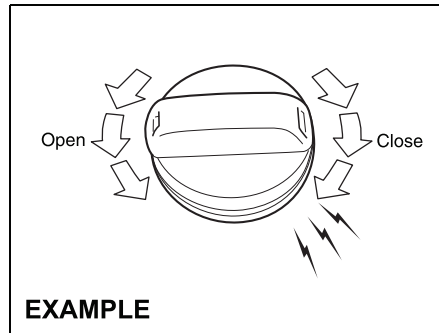


68KN048

To remove the fuel filler cap:

- 1) Open the fuel filler door.
- 2) Remove the cap by turning it counter-clockwise.

CAUTION

Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

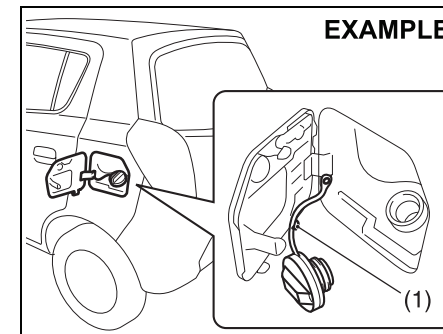

53MH0514

NOTE:

If the fuel filler door is equipped with the cap holder (1), then use the cap holder to hold fuel filler cap while refueling.

To reinstall the fuel filler cap:

- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.

OTHER CONTROLS AND EQUIPMENT


⚠ WARNING

Fuel is extremely flammable. Do not smoke when refueling, and make sure there are no open flames or sparks in the area.

⚠ WARNING

If you need to replace the fuel cap, use a Maruti genuine cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage in the event of an accident.


Engine Hood

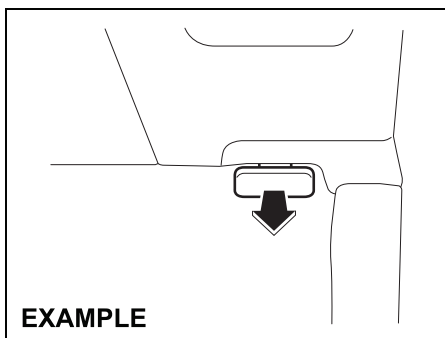

53MH0515


To open the engine hood:

- 1) Pull the hood release handle located on the outboard side of the driver's side. This will disengage the engine hood lock halfway.

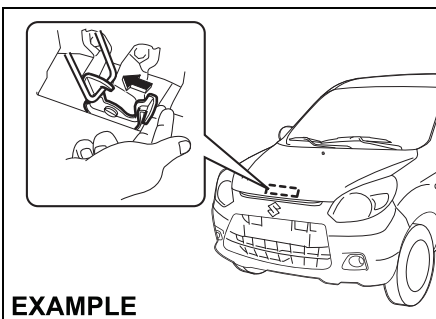

53MM05009

- 2) Push the under-hood release lever sideways with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

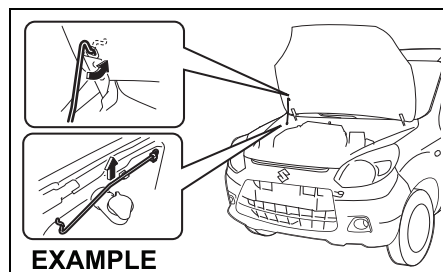

53MM05010

- 3) Continue to lift up the hood until it is high enough to support with the prop rod.

To close the engine hood:


- 1) Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back to the holding clip.
- 2) Lower the hood close to the bumper, then let it drop down. Make sure the hood is securely latched after closing.

⚠ WARNING

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

OTHER CONTROLS AND EQUIPMENT

Sun Visor

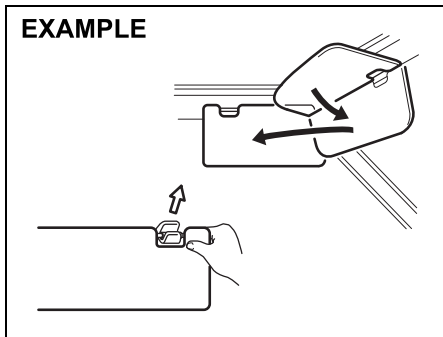


79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, be sure to handle it by side of the sun visor as shown in the figure else sun visor may get damaged.


Interior Light Switch

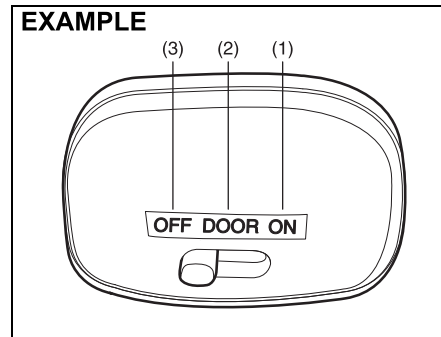

82JN065

This light switch has three positions which function as described below:

- (1) The light comes on and stays on regardless of whether the door is open or closed.
- (2) The light comes on when the door is opened.
- (3) The light remains off even when the door is opened.

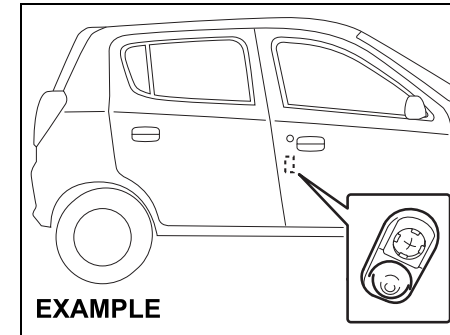

53MH0519

NOTE:


The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber projection) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber projection.

OTHER CONTROLS AND EQUIPMENT

Accessory Socket (if equipped)

ALTO 800

EXAMPLE

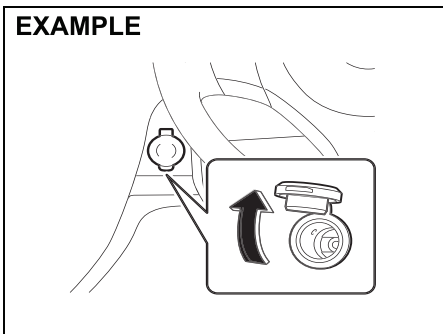


53M-07-032

ALTO K10

Manual Transaxle


EXAMPLE

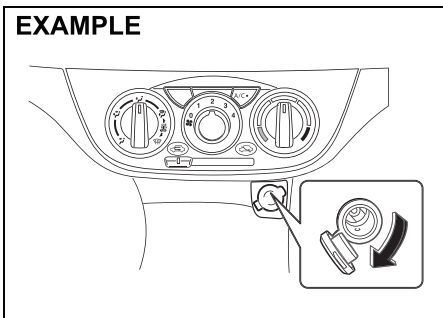

53M-07-033

Automated Manual Transaxle

EXAMPLE

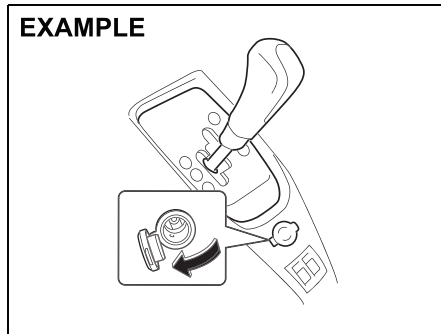


53M-07-034

The accessory socket will work when the ignition switch is in the "ACC" or "ON" position. This socket can be used to provide 12volt/120 watt power for electrical accessories. Check that the cap remains on the socket when socket is not in use.

NOTICE

Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Make sure that any electrical accessories you use are designed to plug into this type of socket.

Assist Grips (if equipped)

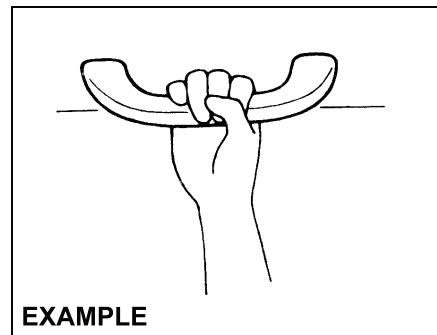

EXAMPLE

53MH0518


Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

OTHER CONTROLS AND EQUIPMENT

Glove Box

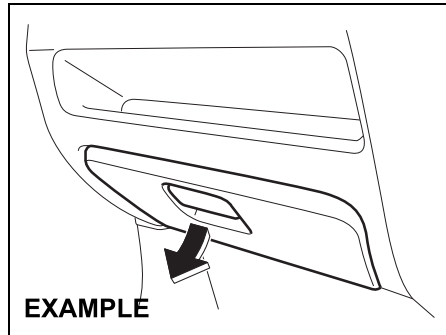


53MH0520

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

⚠ WARNING

Never drive with the glove box lid open. It could cause injury if an accident occurs.

Cup Holder and Storage Area

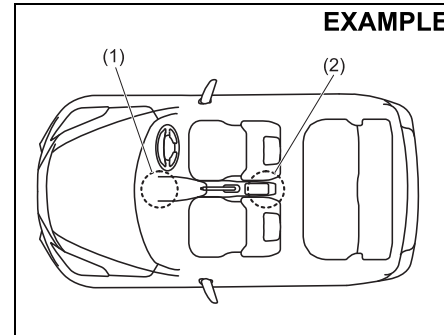

53MM05008

- 1) Front cup holder and bottle holder (if equipped)
- 2) Rear bottle holder (if equipped)

Front Cup Holder & Bottle Holder (1) (if equipped) / Rear Bottle Holder (2) (if equipped)

⚠ WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful when you are using the cup holders to hold a cup containing hot liquid. Spilling out hot liquid can cause burn injury.


(Continued)

⚠ WARNING

(Continued)

- Do not use the cup holders to hold sharp-edged, hard, or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.

Floor Mats

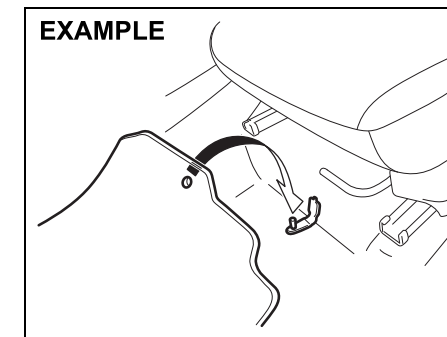

53MH0522

To prevent the driver's side floor mat from sliding forward and possibly interfering with

OTHER CONTROLS AND EQUIPMENT

the operation of the pedals, MARUTI GENUINE floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, be sure to hook (if equipped) the floor mat grommet(s) to the fastener(s) and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend using MARUTI GENUINE floor mats for proper fitting.

⚠ WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.


- Make sure that the floor mat grommet(s) is(are) hooked to the fastener(s).
- Never place additional floor mats on top of the existing floor mats.

Shopping hook (if equipped)

You can hang the shopping bag or other suitable objects on the hook located on the dashboard. This hook is not designed for large or heavy items.


⚠ CAUTION

To avoid breaking the hook, do not hang items heavier than 2 kg (4.4 lbs).

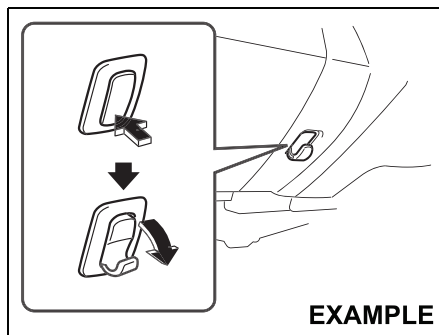

53M-07-039

Luggage Compartment Cover (if equipped)

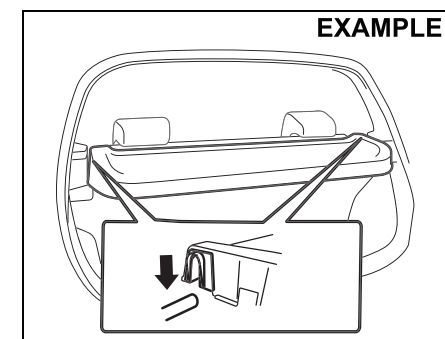

53M-07-040

Luggage or other cargo placed in the luggage compartment is hidden from view by a luggage compartment cover.


⚠ WARNING

Do not carry items on top of the luggage compartment cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.

OTHER CONTROLS AND EQUIPMENT


Frame Hooks

Front

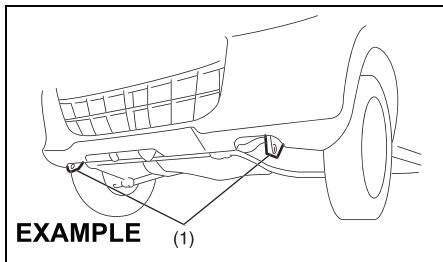

53M-07-043

Rear

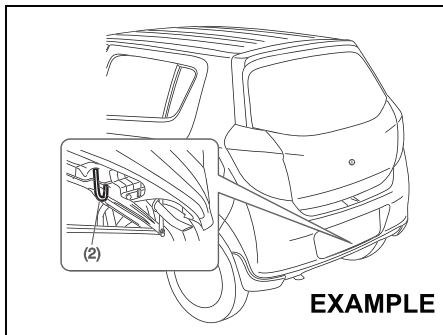

53M-07-044

The frame hooks are provided on the front (1), rear (2) of the vehicle. The hooks (1) is used for emergency situations. The hooks (1) and (2) are used for trailer/train shipping purpose.

To tow your vehicle on the road or highway, follow the instruction of "Towing" in "EMERGENCY SERVICE" or "VEHICLE LOADING AND TOWING" section.

WARNING

Do not use the frame hooks to tow another vehicle or to have your vehicle towed on the road or highway. The hooks (1) is designed for use in emergency situations only, such as if your vehicle or another vehicle gets stuck in deep mud or snow. The hook (2) is provided for trailer/train shipping purposes.


NOTICE

When you use the towing hook (1), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, or the vehicle body.

Do not sudden accelerate.


Front Speakers Provision (if equipped)

ALTO 800

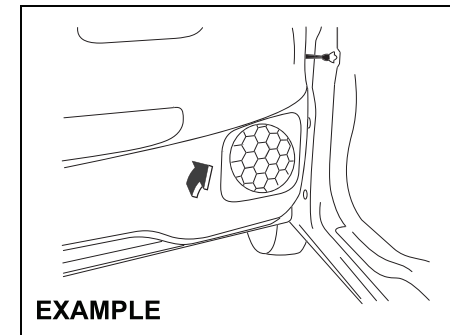

53M-07-045

ALTO K10

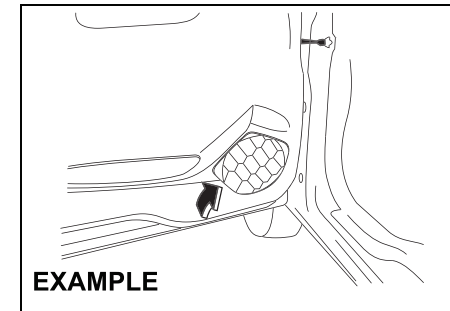

53M-07-046

Space for fitment of front speaker is provided on the front doors.


OTHER CONTROLS AND EQUIPMENT

Audio System (if equipped)

ALTO 800

Refer supplementary manual for audio system (if equipped), provided along with the vehicle.

ALTO K10

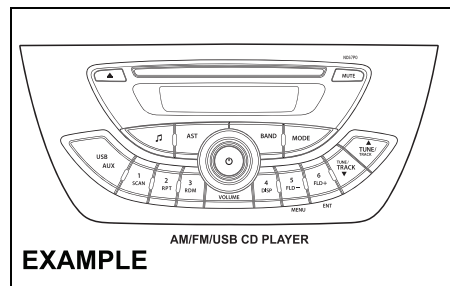

53M-07-047

If you pay extended attention to operating the audio system or viewing the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying extended attention to operating the audio system or viewing the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.
- Set the sound volume to a level that will allow you to continue to be aware of road and traffic conditions while driving.

Notes on Discs

Precautions

- When the inside of the vehicle is very cold and the player is used soon after switching on the heater, condensation may form on the disc or the optical parts of the player and proper playback may not be possible. If condensation forms on the disc, wipe it off with a soft cloth. If condensation forms on the optical parts of the player, do not use the player for

about one hour. This will allow the condensation to disappear normally.

- Driving on extremely bumpy roads which cause severe vibrations may cause sound to skip.
- This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Please bring the unit to an authorized MARUTI SUZUKI dealer.


Cautions on Handling



53M-07-048

This unit has been designed specifically for playback of compact discs bearing mark (A) shown above.

Removing the disc Proper way to hold the compact disc

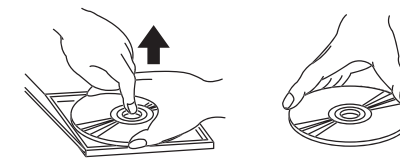


To remove the compact disc from its storage case, press down on the center of the

OTHER CONTROLS AND EQUIPMENT


case and lift the disc out, holding it carefully by the edges.

Always handle the compact disc by the edges.
Never touch the surface.

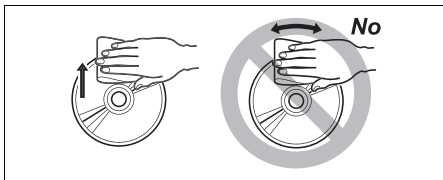


53M-07-050

To remove fingermarks and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

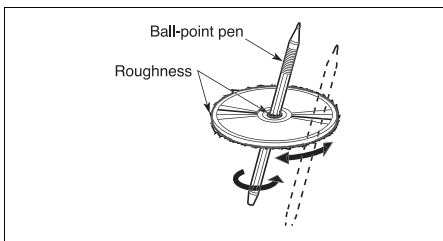


53M-07-051

New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen etc. to remove the roughness from the edges of the disc.

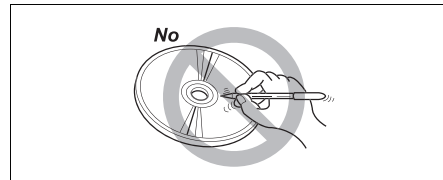


53M-07-052

Never stick labels on the surface of the compact disc or write on the surface with a pencil or pen.

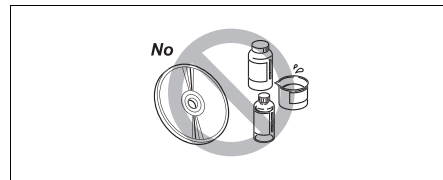

53M-07-053


Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.

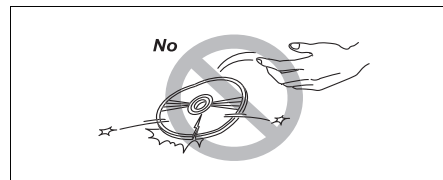

53M-07-054

Do not use compact discs that have large scratches, are misshaped, or cracked, etc.

Use of such discs will cause damage or prevent the system from operating properly.

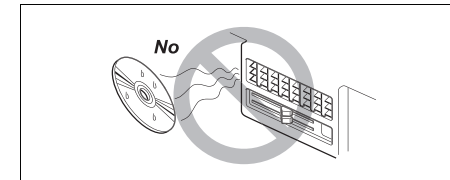

53M-07-055

Do not expose compact discs to direct sunlight or any heat source.

NOTE:

- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc. These may get caught in the internal mechanism and damage the disc.
- It may be impossible to play CD-R discs with this unit due to the recording conditions.
- CD-RW discs cannot be played with this unit.


⚠ WARNING

This is a class I laser product. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not open covers and do not attempt to repair this unit by yourself. Refer servicing to qualified personnel.

OTHER CONTROLS AND EQUIPMENT

Basic Operations

EXAMPLE

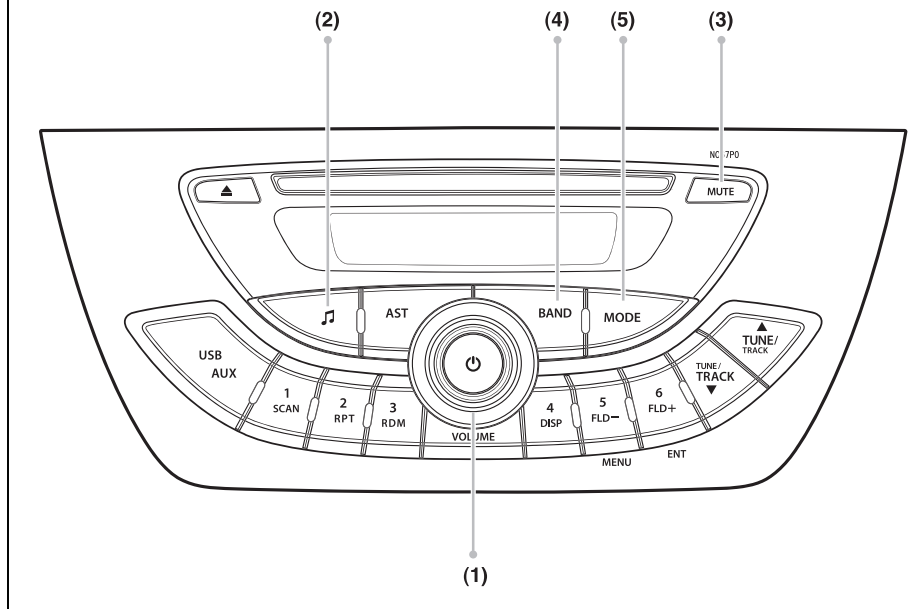

- (1) VOL PUSH POWER knob
- (2) SOUND button
- (3) MUTE button
- (4) BAND button
- (5) MODE button

53M-07-056

OTHER CONTROLS AND EQUIPMENT

Turning power on/off

Press the VOL PUSH POWER knob (1).
The unit starts in the function mode it was in when the power was turned off last.

You can also turn the power on by pressing the desired source button

RADIO mode : Press the BAND button (4)

Last accessed media mode : Press the MODE button (5)

Adjusting the volume

Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.

Mute

Press the MUTE button (3) to mute the sound. To cancel the mute, press the MUTE button (3) again.

Adjusting bass/treble/balance / fader

- 1) Press the SOUND button (2).
Each time the knob is pressed, sound adjustment will change as follows:

Preset-EQ (FLAT)

↓
Bass adjustment (BAS 0)

↓
Treble adjustment (TRE 0)

↓
Balance adjustment (BAL 0)

↓
Fader adjustment (FAD 0)

- 2) Turn the VOL PUSH POWER knob (1) to adjust the sound.

Beep tone

Each time SOUND button (2) is pressed (more than 1 second) beep tone mode switches as follows.

Preset-EQ

Preset-EQ calls up various sound types in accordance with the listening music type.

- 1) Press the SOUND button (2) several times until "FLAT" appears.
- 2) Turn the VOL PUSH POWER knob (2).
Each time the knob is turned, preset EQ mode will change as follows:

NOTE:


Once the set is switched off and switched on, the setting on EQ will be remained the previous setting.

FLAT
↕
ROCK
↕
CLASSIC
↕
POP
↕
JAZZ
↕
HIP HOP


53M-07-058

Listening to Radio

EXAMPLE

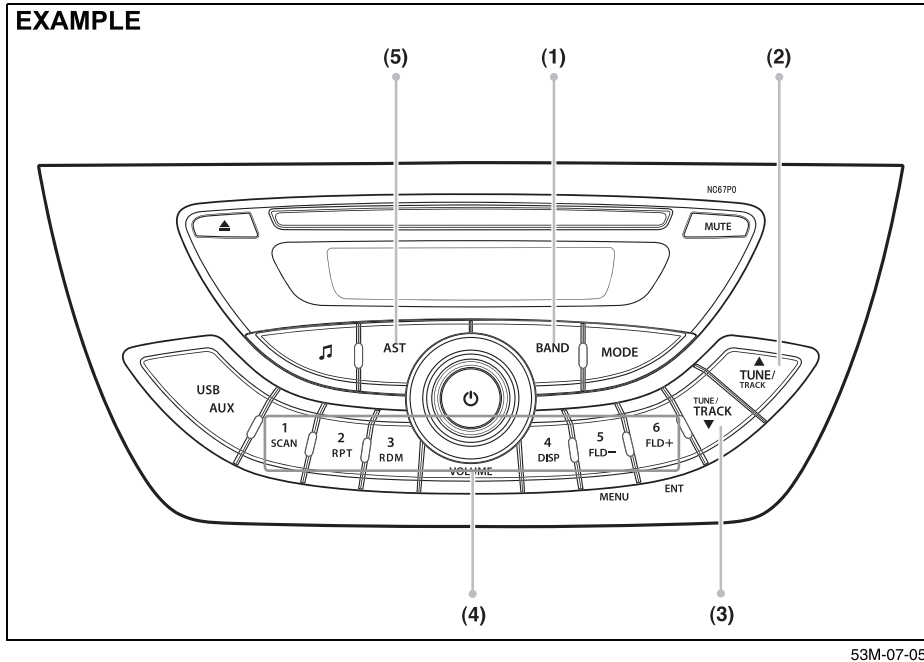

Display

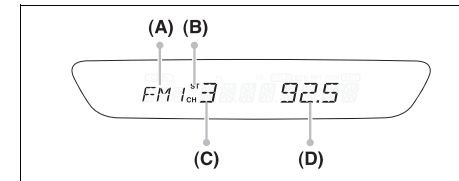

53M-07-060


- (1) BAND button
- (2) Up button
- (3) Down button
- (4) Preset buttons ([1] to [6])
- (5) AST button

- (A) Band
(B) Stereo
(C) preset Channel Number
(D) Frequency

OTHER CONTROLS AND EQUIPMENT

Selecting the reception BAND

Press the BAND button (1). Each time the button is pressed, the reception band will change as follows:

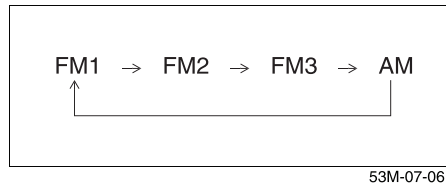

53M-07-061

Seek tuning

Hold down the seek Up button (2) or the seek Down button (3) for 1 second or longer.

The unit stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

Press seek Up button (2) or the seek Down button (3).

The frequency being received is displayed. Which receiving FM stereo broadcasting. ST lights up.

Preset memory

- 1) Select the desired station.
- 2) Hold down a desired button ([1] to [6]) of the Preset buttons (4) to which you want to store the station for 2 seconds or longer.

Auto store

Hold down the AST button (5) for 1 second or longer. Six stations in good reception will automatically be stored to the Preset buttons (4) in order, starting from a station whose frequency is the lowest.

NOTE:

- Auto store can be released by pressing AS button (5) while auto store is under way.
- When the auto store is performed, the station previously stored in the memory at the position is over written.
- When there are fewer than 6 stations that can be stored even if 2 rounds of auto store operation is performed, no station will be stored at the remaining Preset buttons (4).
- 6 stations can be preset for FM1, FM2 and FM3 in common, and 6 stations for AM in auto store mode.


Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

OTHER CONTROLS AND EQUIPMENT


Listening to a CD

EXAMPLE

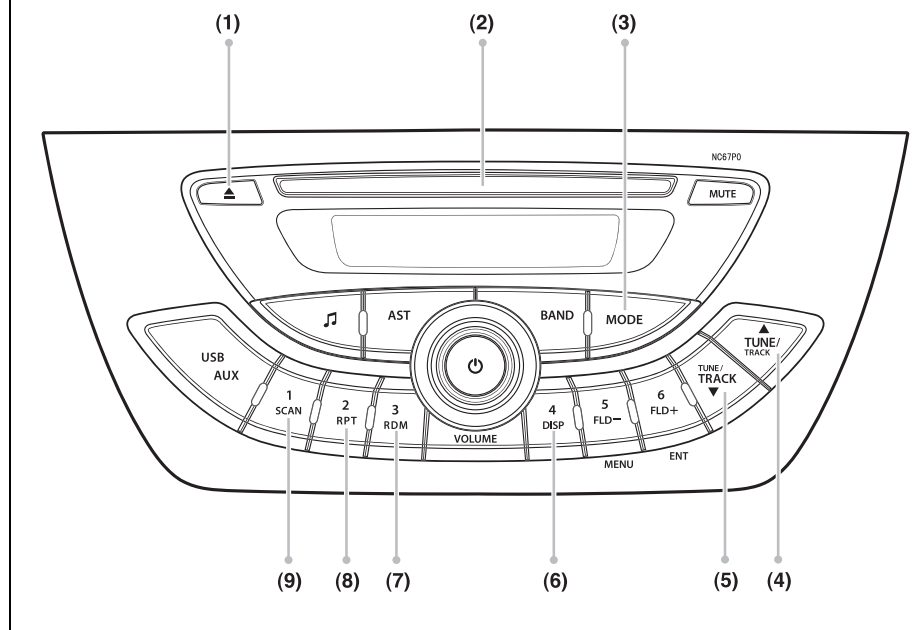

53M-07-062

Display

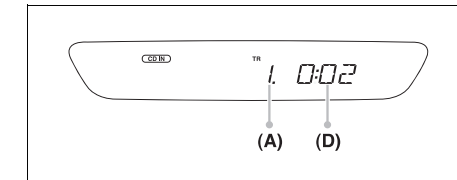

53MM05011

- (1) Eject button
- (2) Insertion slot
- (3) Media Source Mode button
- (4) Up button
- (5) Down button
- (6) DISP button
- (7) RDM button
- (8) RPT button
- (9) SCAN button
- (A) Track number
- (B) Play time

NOTE:


This product does not support 8 cm CD (sometimes called as "mini single CD", "3-inch CD", "CD3" etc.).

OTHER CONTROLS AND EQUIPMENT



53M-07-064

- CDs or CD-ROM carrying no mark (A) cannot be used.
- Some discs recorded in CD-R/CD-RW format may sometimes be impossible to use.

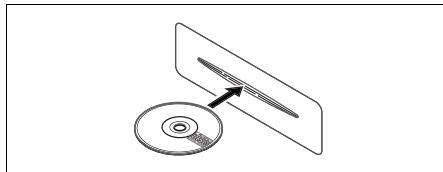

53M-07-065

- A CD is to be inserted with its label side up.
- When there is a CD already in the unit, it is impossible to insert another CD without ejecting the CD in the unit. Do not use force to insert a CD into the CD insertion slot.

⚠ CAUTION

- Never insert your finger or hand into the CD insertion slot. Never insert foreign objects.
- Never insert a CD with glue coming out from adhesive tape or a rental CD label or with a trace indicating that adhesive tape or a rental CD label has been removed. This may cause the CD not to eject or result in a malfunction.

Loading a CD

Insert a CD in the Insertion slot (2). With the printed side up.
When a CD is loaded, play starts.

Ejecting a CD

Press the Eject button (1). (After ejecting, the unit returns to the Radio mode.)

⚠ CAUTION


- If you forcefully try to push an ejected CD inside the unit before auto reloading, the disc surface might be scratched.
- When reloading a CD, remove it from the unit completely before reloading.

NOTE:

- If a disc is inserted after the previous disc is removed from the unit, the unit starts playback from the beginning of the first track.
- If you turn OFF the ACC and within few second so of turning ON the ACC, the unit starts playback from the position from where it has accepted.
- If you press the EJECT button, and leave the disc for roughly 15 seconds, the disc is automatically reinserted into the unit to protect the disc. In this case, the unit doesn't start playback automatically.

Selecting a CD mode

Press the Media Source Mode button (3). Each time the button is pressed, the mode will change as follows.

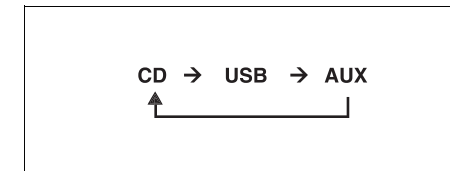

53M-07066

OTHER CONTROLS AND EQUIPMENT

Listening to a CD

When a CD is inserted, playback will automatically start.

When a CD is already inside the unit, press the Media Source Mode button (3) to select CD mode and to start playback.

Selecting a track

Press the Up button (4) to listen to the next track.

Press the Down button (5) twice to listen to the previous track. When the Down button (5) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (4) to fast forward the track.
- Hold down the Down button (5) to fast rewind the track.

Track scan play

Press the SCAN button (9). The first 10 seconds of each track in the disc is played in sequence.

NOTE:

To cancel the scan play, press the SCAN button (9) again or switch to another mode or turn the power off, or eject the disc.

Random playback

Track Random

Press the RDM button (7). Each time the button is pressed, the mode will change as follows:



53M-07-067

The random indicator “RDM” will light.

The tracks in the loaded disc will be played in random order.

NOTE:

- *To cancel random playback, press the RDM button (7) again or eject the disc.*

Repeat playback

Track Repeat

Press the RPT button (8).

Each time the button is pressed, the mode will change as follows:



53M07068

The repeat indicator “RPT” will light.

The track currently being played will be played repeatedly.


NOTE:

- *To cancel repeat playback, press the RPT button (8) again or eject the disc.*

Display change

Press the DISP button (8).

Each time the button is pressed, display will change as follows:

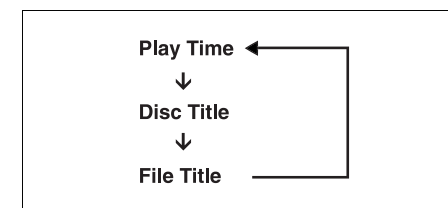

53M-07-069

Press the DISP (6) for 1 second or longer.

Each time this button is pressed, the display switches as follows.

First 8 character next 8 characters.


A total of 16 characters can be displayed.

- it the number of character is 8 or less, display doesn't switch.
- If the disc/track name is not recorded on the disc, “NO TITLE” will be displayed.

OTHER CONTROLS AND EQUIPMENT


Listening to an MP3/WMA/AAC Disc

EXAMPLE

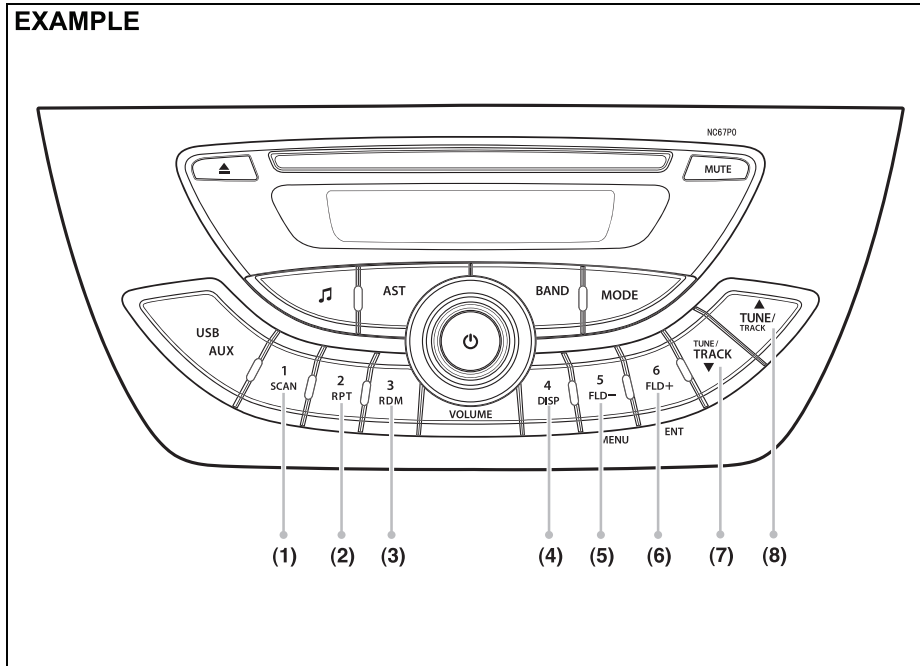

53M-07-070

Display

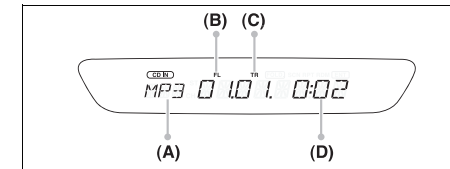

53-07-071

- (1) SCAN button
- (2) RPT button
- (3) RDM button
- (4) DISP button (1 to 6)
- (5) FLD - button
- (6) FLD + button
- (7) TRACK DOWN button
- (8) TRACK UP button
- (A) Disc type
- (B) Folder number
- (C) Track time
- (D) Play type

OTHER CONTROLS AND EQUIPMENT

Selecting a folder

- Press the Folder Up button (6) to select next folder.
- Press the Folder Down button (5) select previous folder.

Selecting a track

- Press the Up button (8) to listen to the next track.
- Press the Down button (7) twice to listen to the previous track. When the Down button (7) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (2) to fast forward the track.
- Hold down the Down button (3) to fast rewind the track.
- If you keep pressing the UP (8)/DOWN button(7) until the beginning or ending of the disc, the unit release the fast-forward/rewind operation and plays the first track.

Scan play

File scan

Press the SCAN button (1). The first 10 seconds of each file is sequence.

Folder scan

press the SCAN button (1) for 1 second or longer. The first 10 seconds of the first file in each folder stored in the disc is played in sequence.

NOTE:

To cancel the scan play, press the SCAN button (1) again or switch to another mode or turn the power off, or eject the disc.

Random playback

Track random

Press the RDM button (5). the random indicator "RDM" will light. The tracks in the loaded disc will be played in random order.

Folder random

Press the RDM button (3) for 1 second or longer. The random indicator "RDM and FOLD." will light. The tracks in the current folder will be played in random order.

NOTE:

To cancel random playback, press the RDM button (3) again or eject the disc.

Repeat playback

Track repeat

Press the RPT button (4). The repeat indicator "RPT" will light. The track currently being played will be played repeatedly.

Folder repeat

press the RPT button (2) for 1 second or longer.

The repeat indicator "RPT and FOLD." will light. All tracks in the currently selected folder will be played repeatedly.


NOTE:

To cancel the repeat playback, press the RPT button (2) again or eject the disc.

Display change

Press the DISP button (6). Each time the button is pressed, display will change as follows:

OTHER CONTROLS AND EQUIPMENT

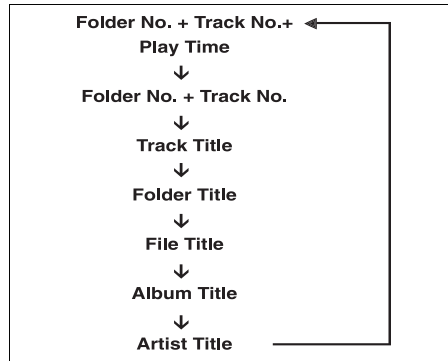

53M-07-072

Press the DISP (4) for 1 second or longer.

Each time this button is pressed, title display switches as follows.

First 8 characters Next 8 characters.

A total of 16 characters can be displayed.

- If the number of character is 8 or less, display doesn't switch.
- If the ID3 tag/tag info is not available on the track, "NO TITLE" will be displayed.

WMA

- Supports only v7/8/9, DRM/Professional/Loseless/Voice are not supported
- Bit rate:48, 64, 80, 96, 128, 160, 192 kbps
- Sampling frequency:8, 16, 22.05, 32, 44.1 kHz

AAC

- MPEG4 AAC (Compliant with ISO/IEC 14496-12:2003 + iTunes Meta-data Specification)
- Bit rate:up to 320kbps
- Sampling frequency:8/11.025/ 12/16/ 22.05/24/32/44.1/48 kHz
- Apple loseless is not supported.

Supported file systems

ISO 9660 Level 1/Level 2, Joliet, Romeo

Maximum number of files/folders

- Maximum number of files: 512 (files + folders)
- Maximum number of files in a folder: 256
- Maximum depth of tree structure: 8
- Maximum number of folders: 255 (Root folder is included.)

Playing limitations

- The number of tracks and folders that can be played on one disc is as follows:
- The total number of folders + total tracks=512.
- However, maximum number of folder is 255.
- Also, maximum number of the folder level is 8.
- The compression bit rate of MP3 files that can be played with the unit is from 32 kbps to 320 kbps. However, for file capacity and sound quality, 128 kbps and above is recommended. When a file compressed at 128 kbps or less is played, sound quality may be inconsistent Compatible sampling rates are as follows:
- MPEG 1 48k 44.1k 32k
- MPEG2 24k 22.05k 16k
- MPEG2.5 12k 8k
- When both music CD data (CD-DA) and MP3/WMA/AAC file data exist on one disc, only the music data (CD-DA) is played. Do not write a file other than MP3/WMA/AAC or needless folder in the disc.
- The unit is compatible with files compressed with VBR (Variable Bit Rate), however, the playback time may not be displayed correctly during fast-forward/rewind.
- The unit may not play MP3/WMA/AAC files in the order of recording.

OTHER CONTROLS AND EQUIPMENT

- As the number of folders recorded on the disc increases, the time to read the disc information also increases.

Limitations of displayed information

- The unit only displays the folder and file name.
- Only one-byte alphanumeric characters and symbols can be displayed. If 2-byte characters can be displayed, they will display as 1 character. If 2-byte character display is not possible, a “*” will be displayed.
- When playing MP3/WMA/AAC file, the playback time may not be displayed properly.


CAUTION

- The playback order may differ depending on the writing software.
- Make sure to finalize the disc before using on the unit.
- When naming an MP3/WMA/AAC file, make sure to attach the extension “.mp3/.wma/.m4a” to the file name.
- Do not attach the extension “.mp3/.wma/.m4a” to files other than MP3/WMA/AAC files. If a disc with such a file is played, it will be mistakenly recognized and it may cause excessive noise to be emitted, damaging the speaker.
- The unit may not be able to play certain discs depending on disc conditions, recording software or the recorder used for writing the data. In such cases, refer to the instruction manual of the equipment used.
- The unit is compatible with multi-session recorded discs. However, be sure to properly close the session. Disc with a session that has not been closed cannot be played properly. When a disc is initially inserted, some time will be required for reading the data before play can begin.

OTHER CONTROLS AND EQUIPMENT


Listening to files stored in a USB device

EXAMPLE

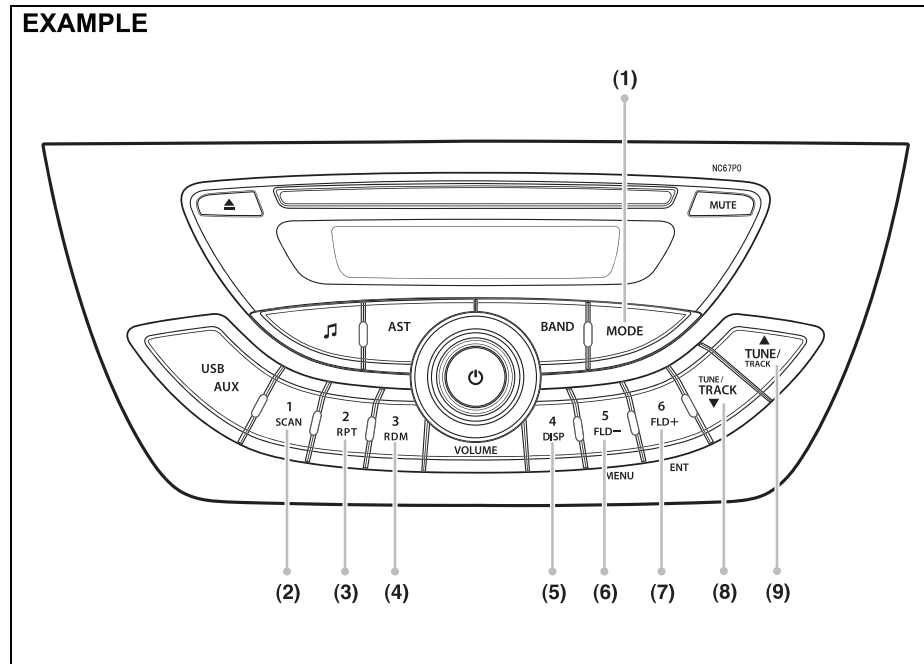

53M-07-073

Display

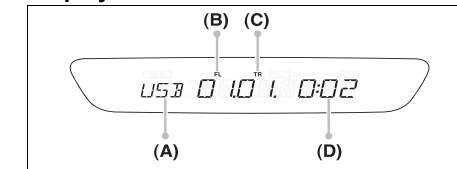

53M-07-074

- (1) Media Source Mode button
- (2) SCAN button
- (3) RPT button
- (4) RDM button
- (5) DISP button
- (6) FLD - button
- (7) FLD + button
- (8) TRACK DOWN button
- (A) USB indicator
- (B) Folder number
- (C) Track number
- (D) Play time

OTHER CONTROLS AND EQUIPMENT

NOTICE

Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.

Selecting a USB device mode

Press the Media Source Mode button to select USB mode (1).

CD → USB → AUX
↑

53M-07-075

Selecting a folder

Press the Folder Up button (7) to select next folder. Press the Folder Down button (6) select previous folder.

Selecting a track

- Press the Up button (9) to listen to the next track.
- Press the Down button (8) twice to listen to the previous track. When the Down button (8) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (9) to fast forward the track.
- Hold down the Down button (8) to fast rewind the track.
- If you keep pressing the UP (9)/DOWN button(8) until the beginning or ending of the disc, the unit release the fast-forward/rewind operation and plays the first track.

Scan play

File Scan

Press the SCAN button (2). The first 10 seconds of each file is played in sequence.

Folder Scan

press the SCAN button (2) for 1 second or longer. The first 10 seconds of the first file in each folder stored in the USB is played in sequence.

NOTE:

To cancel the scan play, press the SCAN button (2) again or eject the USB.

Random playback

Track random

Press the RDM button (4). the random indicator “RDM” will light. The tracks in the loaded USB device will be played in random order.

Folder random

Press the RDM button (4) for 1 second or longer. The random indicator “RDM and FOLD.” will light. The tracks in the current folder will be played in random order.

NOTE:

To cancel random playback, press the RDM button (4) again or eject the USB.

OTHER CONTROLS AND EQUIPMENT

Repeat playback

File repeat

Press the RPT button (3). The repeat indicator "RPT" will light. The track currently being played will be played repeatedly.

Folder Repeat


press the RPT button (3) for 1 second or longer. The repeat indicator "RPT and FOLD." will light. All tracks in the currently selected folder will be played repeatedly.

NOTE:

To cancel the repeat playback, press the RPT button (3) again or eject the USB.

Display change

Press the DISP button (7). Each time the button is pressed, display will change as follows:

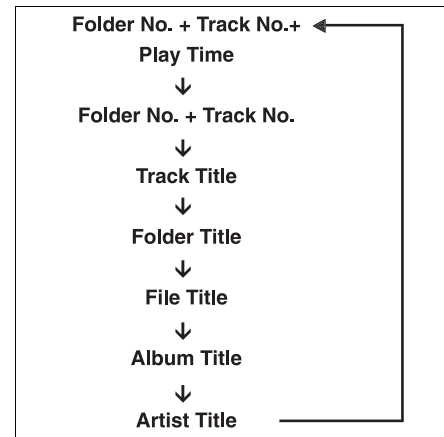

53M-07-076

Press the DISP (6) for 1 second or longer.

Each time this button is pressed, the display switches as follows. First 8 character next 8 characters.

A total of 16 characters can be displayed.

If the number of character is 8 or less, display doesn't switch. If the ID3 tag/tag info is not available on the track, "NO TITLE" will be displayed.

Notes on USB device

Compatible USB devices

- USB Mass Storage Class
- For details as to whether your USB memory/USB Audio is compatible with USB Mass Storage Class, please contact the USB memory/USB Audio manufacturer.
- USB Standard Compatibility 1.1/2.0 Full Speed
- File System FAT16/32
- Maximum current less than 1 A
- Capacity less than 32 GB (1 partition)

OTHER CONTROLS AND EQUIPMENT

USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand. We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA/AAC format.
- We recommend against use of USB devices that are non-standard shape such as key chains, mobile phone accessories, etc. which may damage or stress the connection between USB device and Socket terminal.
- Always close the USB socket terminal when not in use, since entry of foreign material, dust, water, conductive liquids may damage the audio system or USB device.
- Device such as MP3 player/Mobile phone/digital camera may not be recognized by the audio system for playing music.

Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.
- During initialization, the reading time of USB device may vary depending upon factors such as file structure, size and contents other than music files.
- When files recorded contains VBR (variable bit rate), during playback, fast-forward or reverse operation are done.
- The sound quality of MP3/WMA/AAC files generally improves with higher bit rate in order to achieve good sound quality recording with CBR 9continuous bit rate) of at least 128kbps is recommended.

Compression formats

MP3

- MPEG 1,2 and 2.5 layer III
- Bit rate:
 - MPEG-1: 32, 44.1, 48 kHz
 - MPEG-2: 16, 22.05, 24 kHz
 - MPEG-2.5: 8, 12 kHz
- VBR
- Sampling frequency:
 - MPEG-1: 32, 44.1, 48 kHz
 - MPEG-2: 16, 22.05, 24 kHz
 - MPEG-2.5: 8, 12 kHz

WMA

- Supports only v7/8/9, DRM/Professional/Loseless/Voice are not supported
- Bit rate:48, 64, 80, 96, 128, 160, 192 kbps
- Sampling frequency:8, 16, 22.05, 32, 44.1 kHz

AAC

- MPEG AAC (Compliant with ISO/IEC14496-12:2003 + iTunes Meta-data Specification)
- Bit rate: up to 320kbps
- Sampling frequency:8/11.025/12/16/22.05/24/32/44.1/48 kHz
- Sampling frequency:8/11.025/12/16/22.05/24/32/44.1/48 kHz


Maximum number of files/folders

- Maximum number of files: 65280 (files + folders)
- Maximum number of files in a folder: 256
- Maximum depth of tree structure: 8
- Maximum number of folders: 255 (Root folder is included.)

OTHER CONTROLS AND EQUIPMENT


Listening to an iPod®

EXAMPLE

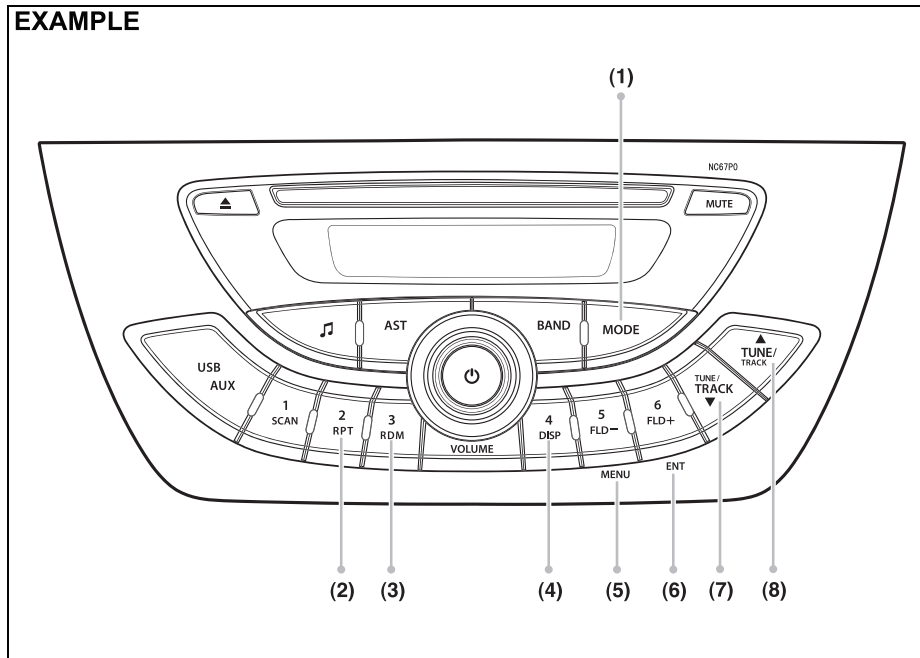

53M-07-077

Display

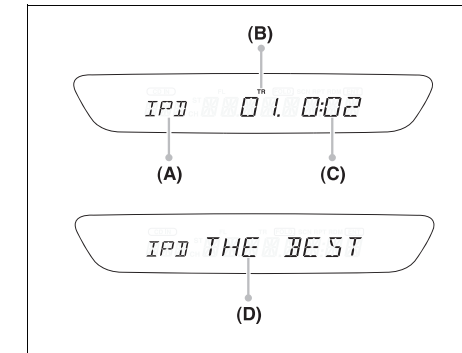


53M-07-078

- (1) Media Source Mode button
- (2) RPT button
- (3) RDM button
- (4) DISP button
- (5) iPod MENU button
- (6) ENTER button
- (7) Up button
- (8) Down button
- (A) iPod indicator
- (B) Track number
- (C) Play time number
- (D) Title information

OTHER CONTROLS AND EQUIPMENT

Selecting an iPod® mode

Press the Media Source Mode button (1) to select USB (iPod) mode.



53M-07-079

Selecting a track

- Press the Up button (8) to listen to the next track.
- Press the Down button (7) twice to listen to the previous track. When the Down button (7) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/Rewinding a track

- Hold down the Up button (8) to fast forward the track.
- Hold down the Down button (7) to fast rewind the track.

Random playback

Track random

- Press the RDM button (3).
- The random indicator “RDM” will light. Track random is the same behavior as album shuffle of iPod.

Folder random

- Press the RDM button (3) for 1 second or longer.

- The random indicator “FOLD.” and “RDM” will light. The folder random is the same as song shuffle or iPod.

NOTE:

To cancel random playback, press the RDM button (3) again or eject the iPod.

Repeat playback

Track repeat

- Press the RPT button (2).
- The repeat indicator “RPT” will light. The track. Repeat is the same behavior as one track repeat of the iPod.


NOTE:

- *To cancel repeat playback, press the RPT button (2) again or eject the iPod.*
- *The unit will always trigger Repeat mode (No indication will be displayed on unit) in iPod automatically when iPod is connected.*
- *when repeat mode is triggered, the unit will play all the songs in the category repeatedly. Repeat mode will not be turned off unless 1-track repeat is triggered.*
- *Turning off 1-track repeat will re-enable Repeat mode again.*

Display change

Press the DISP button (4).

Each time the button is pressed, display will change as follow:

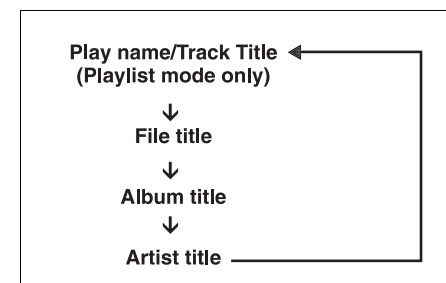

53M-07-080

Press the DISP (4) for 1 second or longer.

Each time this button is pressed, title display switches as follow. First 8 characters Next 8 characters.


A total of 16 characters can be displayed.

- If the number of character is 8 or less, display doesn't switch.
- Text display in iPod menu mode is allowed to switch but it is invalid for first category of iPod menu mode.
- If no data is stored in the particular category, “NO DATA” will be displayed.
- If the file/artist/album title is not recorded on the iPod, “NO TITLE” will be displayed.

OTHER CONTROLS AND EQUIPMENT

iPod® menu mode

- 1) Press the MENU button (5).
- 2) Press the Up button (8) or Down button (7) to select the category as follow:
- 3) Press the ENTER button (6) to select the category.
- 4) repeat the step 2 and 3 again to select the desired.

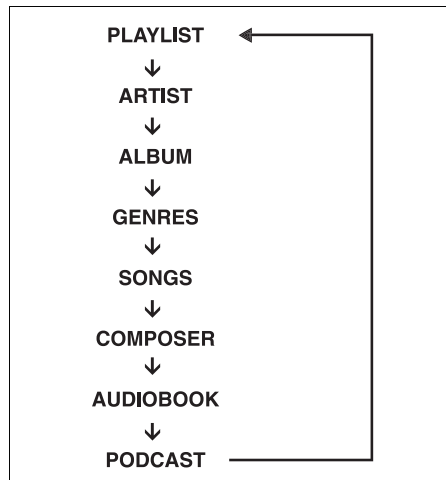

53M-07-081

About resume play

When connecting iPod to car stereo, iPod will start playing the song which played before connecting (resume play). When browse items or lists are changed from resume play, selected song of playlist starts to play and list title also can be displayed.

NOTE:

After entering iPod menu mode, the mode has 30 seconds timeout.

About iPod

Before using iPod

- iPod is only private usage and may not be used without authorities. Copyright privacy is against the law.
- Operating may be different for each iPod software version.

How to connect iPod

- Connect the iPod cable into USB insertion slot.

Caution for connecting iPod

- When iPod EQ setting is ON, sound may be distorted.
- Before or after connecting, setting (such as shuffle, repeat and etc.) may be changed.
- Remove all equipments, (headphone etc.) when connecting.
- *iPod may have difficulty of operation.
- Do not leave iPod inside vehicle. Direct sunlight and high temperature may cause damage to iPod.
- Fix iPod at specified way when using the adapter. Removing iPod may interfere with your driving, so accident may occur.
- Read iPod manual for iPod operation.
- When connecting iPod (video), play music once, turn the power off and connect. If video is playing before connection, it may take some time.

OTHER CONTROLS AND EQUIPMENT

Supported iPod

iPod/ iPhone models	Software Version
iPhone® 5S	7.1.1
iPhone® 5C	7.1.1
iPhone® 5	7.1.1
iPhone® 4S	7.1.1
iPhone® 4	7.1.1
iPod® touch (5th generation)	7.1.1
iPod® touch (4th generation)	6.1.6
iPod® nano (7th generation)	1.0.3
iPod® nano (6th generation)	1.2
iPod® classic	2.0.5


“Made for iPod,” and “Made for iPhone,” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance.

iPhone®, iPod®, iPod® classic, iPod® nano, and iPod® touch are trademarks of Apple Inc., registered in the U.S. and other countries.

OTHER CONTROLS AND EQUIPMENT

AUX Function

EXAMPLE

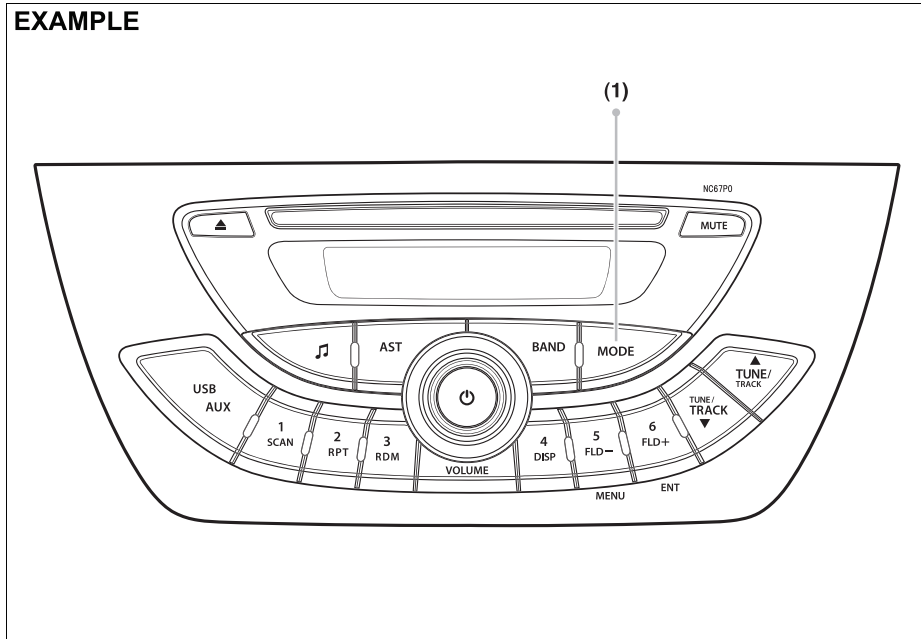

53M-07-082

AUX connection

To listen to auxiliary audio sources (sold separately) through the unit, follow the instruction below. 1) Press the Media Source Mode button (1). 2) Connect the auxiliary audio source to the AUX socket with an AUX cable.

CAUTION

- Before connection, set the volume for the unit to 0 (When AUX mode is selected) and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source

NOTE

- Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.
- The volume and tone controls of the auxiliary audio source can be adjusted on the unit.

OTHER CONTROLS AND EQUIPMENT

Troubleshooting

FM/AM

SYMPTOM	CAUSE	REMEDY
The station cannot be received.	The connection of the car antenna has not been made correctly.	Check the connection of the car antenna.
Automatic tuning is not possible.	The broadcast signal is too weak.	Perform manual setting.
The radio sensitivity is poor.	Car antenna is not extended fully or inclining.	Check the car antenna.
No sound is coming out from front speaker or rear speaker.	Adjustment of the front and rear speakers tilts towards either of the side.	According to "Adjusting the audio", adjust the FAD level. For the 2 speakers, adjust the FAD level to "0".

OTHER CONTROLS AND EQUIPMENT

Troubleshooting

USB

SYMPTOM	CAUSE	REMEDY
NO Device	USB device is not connected	Connect USB memory device properly. Also check if USB connector area is clean.
No File	There is no playable music files	Check data stored in USB memory device is in supported format
Unsupported (Check 04)	The USB device is not supported	Check if data stored in USB memory device is in supported format
Read Error (Check 04)	Cannot read the file which is trying to play by some reason. (File system, Compressed setting, data format, file name expanding, data damaged, file recorded by others may not be supported.)	Check USB memory device if connected properly. If it's not connected properly, reconnect, and select the file which player is able to read and check the data stored in USB memory. You must format the USB memory if necessary.
Operation Error	Cannot be controlled by some reason.	Switch POWER or ACC ON/OFF. If still not recovered, remove the USB memory device and reconnect.
Over Current (Check 05)	The USB device is over the current.	Use other USB memory device whose current consumption is 1A or below. Also check if USB connector area is clean.
Audio will be muted and skip to next track.	The file is protected with copyright (DRM).	The file protected with copyright cannot be played. Select the playable file.

OTHER CONTROLS AND EQUIPMENT

IPod/Phone

SYMPTOM	CAUSE	REMEDY
NO Device	iPod is not connected	It may take some time to recognize iPod. Check iPod or cable to be connected properly. Or check if iPod connector area is clean.
No File	There is no playable music files	Check if data stored in iPod is in supported format

Error Display Messages

The following messages appear during operation to give you hints about how to use the unit properly.

CD

SYMPTOM	CAUSE	REMEDY
CHECK 01	A disc is loaded upside-down inside the CD deck and does not play. An unsupported disc/format is being used.	Eject the disc then reinsert correctly with the printed side upwards. Use supported disc/format only.
CHECK 02	A disc is caught inside the CD deck and is not ejected.	Make sure there is no blockage at the CD slot. If problem persists, turn off the unit and contact your Nippon Service Centre.
CHECK 03	A disc cannot be played due to scratches.	Clean the disc surface. If problem persists, replace with a non-scratched, non-warped disc.
NO DISC	The disc is not inserted.	Insert CD disc into the unit.

OTHER CONTROLS AND EQUIPMENT

Error Display Messages

USB/iPod

SYMPTOM	CAUSE	REMEDY
CHECK 04	The connected USB device is not supported. The USB device cannot be read.	Use supported USB device with properly encoded audio files. Check USB memory device if connected properly. If it's not connected properly, reconnect, and select the file which player is able to read and check the data stored in USB memory. You must format the USB memory if necessary.
CHECK 05	Over-current is detected.	Use other USB memory device whose current consumption is 1A or below. Also check if USB connector area is clean.
NO DEV	The USB device/iPod is not connected.	Connect USB memory device/iPod properly. Also check if USB connector area is clean.
NO MUSIC	There is no playable music file.	Check data stored in USB memory device/iPod is in supported format.

VEHICLE LOADING AND TOWING

Vehicle Loading 6-1
Trailer Towing 6-1
Towing Your Vehicle 6-2

VEHICLE LOADING AND TOWING

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle.

Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

WARNING

Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).

WARNING

Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer Towing

Your MARUTI SUZUKI was originally designed to carry people and a normal amount of cargo, not to tow a trailer. MARUTI SUZUKI does not recommend you use your vehicle to tow a trailer. Towing a trailer can adversely affect handling, durability, and fuel economy.

VEHICLE LOADING AND TOWING

Towing Your Vehicle

Your vehicle may be towed behind another vehicle (such as a motorhome), provided your vehicle is 2 wheel drive (2WD) and you use the proper towing method specified for your vehicle. The towing method you must use depends on the specifications of your vehicle: whether it is a manual transaxle vehicle or an automated manual transaxle vehicle.

Use the towing instruction table to select the proper towing method for your vehicle, and carefully follow the corresponding instructions. Be sure to use proper towing equipment designed for recreational towing and make sure that towing speed does not exceed 90 km/h (55 mph).

⚠ WARNING


When you tow your vehicle, follow the instructions below to avoid accidents and damage to your vehicle. In addition, be sure to observe government and local requirements regarding vehicle lighting and trailer hitches or tow bars.

⚠ WARNING

A safety chain should always be used when you tow your vehicle.

TOWING INSTRUCTION TABLE


DRIVE TRAIN	TRANSMISSION	TOWING METHOD
2WD	M/T	A,B
2WD	Automated Manual Transaxle	A,B

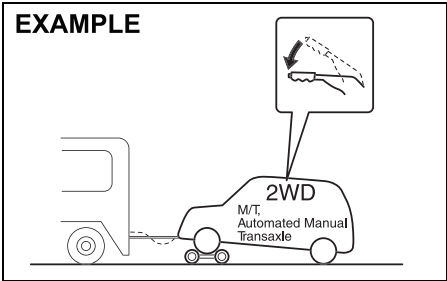

53M-08-001

A: 2WD VEHICLES WITH MANUAL TRANSAXLE OR AUTOMATED MANUAL TRANSAXLE

- 1) Secure the front wheels on a towing dolly according to the instructions provided by the dolly manufacturer.
- 2) Release the parking brake.

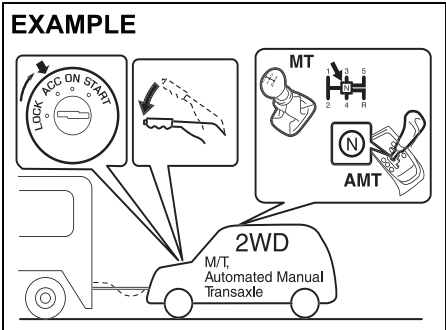

53M-08-002

VEHICLE LOADING AND TOWING

B: 2WD VEHICLES WITH MANUAL TRANSAXLE OR AUTO GEAR SHIFT

- 1) Shift the gearshift lever into neutral.
- 2) Turn the ignition key to the “ACC” position to unlock the steering wheel.
- 3) Release the parking brake.

<i>NOTICE</i>
<p>After shifting the auto gear shift gearshift lever to the “N” position, always check the gear position indicator in the instrument cluster shows the “N” position to make sure that the transaxle is disengaged.</p> <p>If the transaxle cannot be put in neutral, turn the key from the “OFF” to the “ON” position, and move the auto gear shift lever from “N” to “D”, “M” or “R”, then back to “N” again. Then turn the key from the “ON” to the “OFF” position.</p> <p>These procedures may help put the transaxle in neutral. If the transaxle still cannot be put in neutral, you cannot tow the vehicle without using a towing dolly.</p>

<i>NOTICE</i>
<p>The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.</p>

INSPECTION AND MAINTENANCE

Maintenance Schedule 7-2

Periodic Maintenance Schedule 7-2

Drive Belt 7-10

Engine Oil and Filter 7-10

Engine Coolant 7-13

Air Cleaner 7-15

Spark Plugs 7-15

Gear Oil 7-16

Clutch Pedal 7-17

Fuel Filter 7-17

Brakes 7-18

Steering 7-20

Tires 7-20

Battery 7-22

Fuses 7-23


Bulb Replacement 7-27

Wiper Blades 7-29

Windshield Washer Fluid 7-31

Air Conditioning System 7-31

INSPECTION AND MAINTENANCE

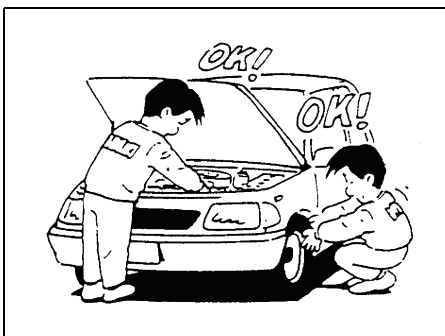

60A187S

⚠ WARNING

You should take extreme care when working on your vehicle to prevent accidental injury. Here are a few precautions that you should be especially careful to observe:

(Continued)

⚠ WARNING

(Continued)

- To prevent damage or unintended activation of the air bag system or seat belt pretensioner system, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position for at least 90 seconds before performing any electrical service work on your vehicle. Do not touch air bag system components, seat belt pretensioner system components or wires.

The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

- Do not leave the engine running in garages or other confined areas.
- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.

(Continued)

⚠ WARNING

(Continued)

- When it is necessary to do service work with the engine running, make sure that the parking brake is set fully and the transaxle is in Neutral.
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.
- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

INSPECTION AND MAINTENANCE

Maintenance Schedule

The following table shows when regular maintenance on your vehicle is required, this table shows in kilometers and months when inspections, adjustments, lubrication and other services should be performed.

WARNING

MARUTI SUZUKI recommends that maintenance on your MARUTI SUZUKI vehicle be performed by MARUTI SUZUKI Authorised Dealer/Service Station.

CAUTION

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI GENUINE PARTS (MGP).

Periodic Maintenance Schedule

ALTO 800

“A”: Adjust

“C”: Clean

“R”: Replace or Change

“I” : Inspect, clean, adjust, lubricate or replace as necessary

“L” : Lubricate

“T” : Tighten to Specified Torque

“O”: Rotate

NOTE:

This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

INSPECTION AND MAINTENANCE

*Interval: This interval should be judged by odometer reading or months, whichever comes first.			km (x 1,000) months		FREE INSPECTIONS			PERIODIC MAINTENANCE SERVICE AT COST						
					1	5	10	20	30	40	50	60	70	80
					1	6	12	24	36	48	60	72	84	96
ENGINE														
1.	Water pump drive belt (Tension, Wear)				A	I	I	I	I	I	R	A	I	
2.	Engine Coolant (Level, Leakage)				I	I	I	R	I	R	I	R	I	
3.	Engine oil and Oil filter				R	I	R	R	R	R	R	R	R	
4.	Cooling system hoses and connections (Leakage, Damage)				I	I	I	I	I	I	I	I	I	
5.	Engine mounting and manifold fixings (Loose, Damage)				–	–	I	–	I	–	I	–	–	
6.	Valve Clearance				–	A	–	A	–	A	–	A	–	
7.	Camshaft timing belt (Damage, Wear)				–	–	–	I	–	I	–	I	–	
					Replace Every 1,00,000 km									
8.	Exhaust system (Noise, Leakage etc.)				–	I	–	I	–	I	–	I	–	
9.	Positive crankcase ventilation System (Hoses, Connections and Valve)				–	I	–	I	–	I	–	I	–	
IGNITION														
1.	Ignition wiring (Damage, Deterioration)				–	–	–	I	–	I	–	I	–	
2.	Spark plugs (Clean and Adjust the gap)				–	–	I	R	I	R	I	R	I	
FUEL														
1.	Air cleaner		Paved-road		Clean every 5,000 km. Replace after every 40,000 km.									
			Dusty condition		Clean every 2,500 km or as required. Replace after every 40,000 km. More frequent replacement if dust condition is severe.									
2.	Fuel tank cap, fuel lines and connections (Leakage, Damage)				–	I	–	–	–	I	–	–	–	I
3.	Fuel filter (Leakage)				I	I	I	I	I	R	I	I	I	R
CLUTCH AND TRANSMISSION														
1.	Clutch pedal (Play)				I	I	I	I	I	I	I	I	I	I
2.	Clutch slipping (Dragging or Excessive damage)				I	I	I	I	I	I	I	I	I	I
3.	Manual Transmission Oil (Level, Leakage)				I	I	I	I	I	I	I	I	I	I
					Replace every 1,60,000 kms or 10 years, which ever comes earlier									
DRIVE SHAFTS														
1.	Drive shafts boot (Boot cut / Damage)				–	I	I	I	I	I	I	I	I	I
2.	Drive Shaft Noise				I	I	I	I	I	I	I	I	I	I

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.	km (x 1,000) months	FREE INSPECTIONS			PERIODIC MAINTENANCE SERVICE AT COST							
		1	5	10	20	30	40	50	60	70	80	
		1	6	12	24	36	48	60	72	84	96	
BRAKE												
1.	Brake fluid (Level, Leakage)	I	I	I	R	I	R	I	R	I	R	
2.	Brake pedal (Pedal-to-wall clearance)	I	I	I	I	I	I	I	I	I	I	
3.	Parking brake lever and cable (Play, Damage)	I	I	I	I	I	I	I	I	I	I	
4.	a. Brake discs and pads (Wear)	–	I	I	I	I	I	I	I	I	I	
	b. Brake drums & shoes (Wear)	–	–	I	I	I	I	I	I	I	I	
5.	Master cylinder, wheel cylinder, caliper piston (Fluid leakage, Boot/Seal Damage)	I	I	I	I	I	I	I	I	I	I	
6.	Brake hoses and pipes (Fluid leakage, Damage)	I	I	I	I	I	I	I	I	I	I	
WHEEL												
1.	Tyres (Air pressure, Abnormal wear, Crack, Rotation)	I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	
2.	Wheels (Damage)	I	I	I	I	I	I	I	I	I	I	
3.	Front/Rear wheel bearings (Loose, Damage)	–	I	I	I	I	I	I	I	I	I	
FRONT AND REAR SUSPENSION												
1.	Suspension strut (Oil leakage, Damage)	I	I	I	I	I	I	I	I	I	I	
2.	Suspension arms/knuckle support (Loose, Damage)	–	I	I	I	I	I	I	I	I	I	
3.	Rear spring (Damage)	–	I	I	I	I	I	I	I	I	I	
4.	Shock absorbers (Oil leakage, Damage)	I	I	I	I	I	I	I	I	I	I	
5.	All bolts and nuts (Loose)	–	T	T	T	T	T	T	T	T	T	
6.	Suspension arms and Tension rods	–	I	I	I	I	I	I	I	I	I	
STEERING												
1.	Steering wheel (Play, Loose)	I	I	I	I	I	I	I	I	I	I	
2.	All rods and arms (Loose, Damage, Wear)	I	I	I	I	I	I	I	I	I	I	
ELECTRICAL												
1.	Battery electrolyte (Level, leakage)	I	I	I	I	I	I	I	I	I	I	
2.	Wiring harness connection (Loose, Damage)	–	I	I	I	I	I	I	I	I	I	
3.	Lighting system (Operation, Stains, Damage)	I	I	I	I	I	I	I	I	I	I	
4.	Horn (Operation)	I	I	I	I	I	I	I	I	I	I	
5.	System voltage	I	I	I	I	I	I	I	I	I	I	
BODY												
1.	All chassis bolts and nuts (Tighten)	–	I	I	T	T	T	T	T	T	T	
2.	All latches, hinges and locks (Function)	I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	

INSPECTION AND MAINTENANCE

*Interval: This interval should be judged by odometer reading or months, whichever comes first.		km (x 1,000) months	FREE INSPECTIONS			PERIODIC MAINTENANCE SERVICE AT COST						
			1	5	10	20	30	40	50	60	70	80
			1	6	12	24	36	48	60	72	84	96
ROAD TEST												
1.	Operation of Brakes, Gear shifting and speedometer		I	I	I	I	I	I	I	I	I	I
2.	Body and Chassis noise		I	I	I	I	I	I	I	I	I	I
AIR CONDITIONER (if equipped)												
1.	Check belt tension		I	I	I	I	I	I	I	I	I	I
2.	Tighten compressor mounting bolts		–	T	T	T	T	T	T	T	T	T
3.	All hose joints (Check, Tighten)		I	I	I	I	I	I	I	I	I	I
4.	Check functioning of Recirculating flap		I	I	I	I	I	I	I	I	I	I
5.	Clean condenser with low pressure water		–	C	C	C	C	C	C	C	C	C
6.	Check belt for frayed edges, change if necessary		–	I	I	I	I	I	I	I	I	I
7.	Check all mounting bolts		–	I	I	I	I	I	I	I	I	I

INSPECTION AND MAINTENANCE

Periodic Maintenance Schedule

ALTO K10

“A”: Adjust

“C”: Clean

“R”: Replace or Change

“I” : Inspect, clean, adjust, lubricate or
replace as necessary

“L” : Lubricate

“T” : Tighten to Specified Torque

“O”: Rotate

NOTE:

*This table includes services as scheduled
up to 80,000 km mileage. Beyond 80,000
km, carry out the same services at the
same intervals respectively.*

INSPECTION AND MAINTENANCE

*Interval: This interval should be judged by odometer reading or months, whichever comes first.		km (x 1,000) months	FREE INSPECTIONS			PERIODIC MAINTENANCE SERVICE AT COST						
			1	5	10	20	30	40	50	60	70	80
			1	6	12	24	36	48	60	72	84	96
ENGINE												
1.	Water pump drive belt (Tension, Wear)	–	–	–	–	–	I	–	–	–	I	
2.	Engine Coolant (Level, Leakage)	I	I	I	R	I	R	I	R	I	R	
3.	Engine oil and Oil filter	–	–	R	R	R	R	R	R	R	R	
4.	Cooling system hoses and connections (Leakage, Damage)	I	I	I	I	I	I	I	I	I	I	
5.	Engine Mounting and manifold fixings (Loose, Damage)	–	–	I	–	I	–	I	–	I	–	
6.	Valve Clearance	–	–	–	–	I	–	–	I	–	–	
7.	Exhaust System (Noise, Leakage etc.)	–	I	–	I	–	I	–	I	–	I	
8.	Positive crankcase ventilation System (Hoses, Connections and Valve)	–	I	–	I	–	I	–	I	–	I	
IGNITION												
1.	Ignition wiring (Damage, Deterioration)	–	–	–	I	–	I	–	I	–	I	
2.	Spark plugs	–	–	–	–	–	R	–	–	–	R	
FUEL												
1.	Air cleaner	Paved-road	Clean every 5,000 km. Replace after every 40,000 km.									
		Dusty condition	Clean every 2,500 km or as required. Replace after every 40,000 km. More frequent replacement if dust condition is severe.									
2.	Fuel tank cap, fuel lines and connections (Leakage, Damage)	–	I	–	–	–	I	–	–	–	I	
3.	Fuel filter (Leakage)	–	I	I	I	I	R	I	I	I	R	
CLUTCH AND TRANSMISSION												
1.	Clutch pedal (Play)	I	I	I	I	I	I	I	I	I	I	
2.	Clutch slipping (Dragging or Excessive damage)	I	I	I	I	I	I	I	I	I	I	
3.	Manual Transmission Oil (Level, Leakage)	I	I	I	I	I	I	I	I	I	I	
		Replace every 1,60,000 kms or 10 years whichever comes first										
DRIVE SHAFTS												
1.	Drive shaft boots (Boot cut / Damage)	I	I	I	I	I	I	I	I	I	I	
2.	Drive Shaft Noise	I	I	I	I	I	I	I	I	I	I	
BRAKE												
1.	Brake fluid (Level, Leakage)	I	I	I	R	I	R	I	R	I	R	
2.	Brake pedal (Pedal-to-wall clearance)	I	I	I	I	I	I	I	I	I	I	

INSPECTION AND MAINTENANCE

	*Interval: This interval should be judged by odometer reading or months, whichever comes first.	km (x 1,000) months	FREE INSPECTIONS			PERIODIC MAINTENANCE SERVICE AT COST						
			1	5	10	20	30	40	50	60	70	80
			1	6	12	24	36	48	60	72	84	96
3.	Parking brake level and cable (Play, Damage)											
4.	a. Brake discs and pads (Wear)		—									
	b. Brake drums & shoes (Wear)		—	—								
5.	Master cylinder, wheel cylinder, caliper piston (Fluid leakage, Boot/Seal Damage)											
6.	Brake hoses and pipes (Fluid leakage, Damage)											
WHEEL												
1.	Tyres (Air pressure, Abnormal wear, Crack and Rotation)			I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O
2.	Wheels (Damage)											
3.	Front/Rear wheel bearing (Loose, Damage)		—									
FRONT AND REAR SUSPENSION												
1.	Suspension strut (Oil leakage, Damage)											
2.	Suspension arms/knuckle support (Loose, Damage)		—									
3.	Rear spring (Damage)		—									
4.	Shock absorbers (Oil leakage, Damage)											
5.	All bolts and nuts (Loose)		—	T	T	T	T	T	T	T	T	T
6.	Suspension arms and Tension rods		—									
STEERING												
1.	Steering wheel (Play, Loose)											
2.	All rods and arms (Loose, Damage, Wear)											
ELECTRICAL												
1.	Battery electrolyte (Level, Leakage)											
2.	Wiring harness connection (Loose, Damage)		—									
3.	Lighting system (Operation, Stains, Damage)											
4.	Horn (Operation)											
5.	System voltage											
BODY												
1.	All chassis bolts and nuts (Tighten)		—		T	T	T	T	T	T	T	T
2.	All latches, hinges and locks (Function)			I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAD TEST												
1.	Operation of Brakes, Gear shifting and speedometer											
2.	Body and Chassis noise											

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.	km (x 1,000) months	FREE INSPECTIONS			PERIODIC MAINTENANCE SERVICE AT COST						
		1	5	10	20	30	40	50	60	70	80
		1	6	12	24	36	48	60	72	84	96
AIR CONDITIONER (if equipped)											
1.	Check belt tension	I	I	I	I	I	I	I	I	I	I
2.	Tighten compressor mounting bolts	–	T	T	T	T	T	T	T	T	T
3.	Check all hose joints (Check, Tighten)	I	I	I	I	I	I	I	I	I	I
4.	Check functioning of Recirculating flap	I	I	I	I	I	I	I	I	I	I
5.	Clean condenser with low pressure water	–	C	C	C	C	C	C	C	C	C
6.	Check belt for frayed edges, change if necessary	–	I	I	I	I	I	I	I	I	I
7.	Check all mounting bolts	–	I	I	I	I	I	I	I	I	I

Drive Belt

⚠ WARNING


When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

Make sure the drive belt tension is correct. If the belt is too loose, insufficient battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. When you press the belt with your thumb midway between the pulleys, there should be a deflection according to the following chart.


The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by your MARUTI SUZUKI dealer.

F8D

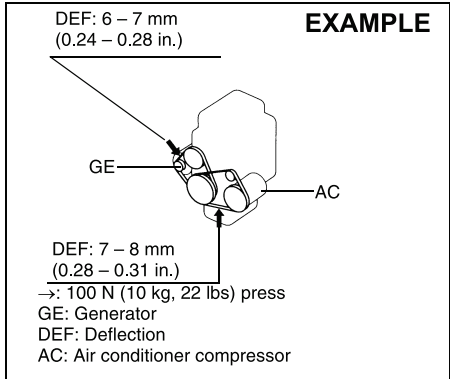


K10B

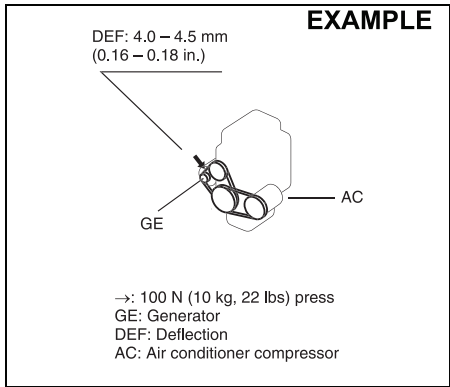

Engine Oil and Filter

Specified Oil (ALTO 800)

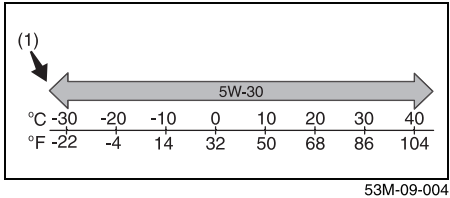


(1) Preferred

Be sure that the engine oil you use comes under the quality classification of SG+, SL, SM and SN. Select the appropriate oil viscosity according to the above chart.

SAE 5W-30 (1) is the best choice for good fuel economy, and good starting in cold weather.

Specified Oil (ALTO K10)

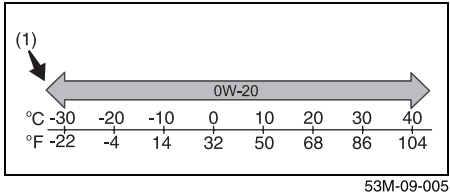


(1) Preferred

Be sure that the engine oil you use comes under the quality classification of SL, SM and SN. Select the appropriate oil viscosity according to the above chart.

INSPECTION AND MAINTENANCE

SAE 0W-20 (1) is the best choice for good fuel economy, and good starting in cold weather.

Oil Level Check

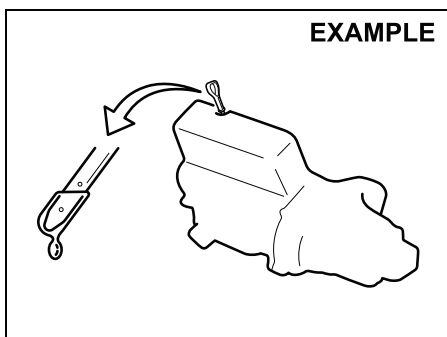

68KH066

It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.


Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower

limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

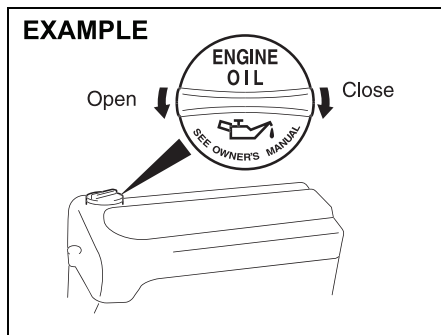

53M-09-007

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

Changing Engine Oil and Filter


Drain the engine oil while the engine is still warm.

- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain out the engine oil.

CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

ALTO 800

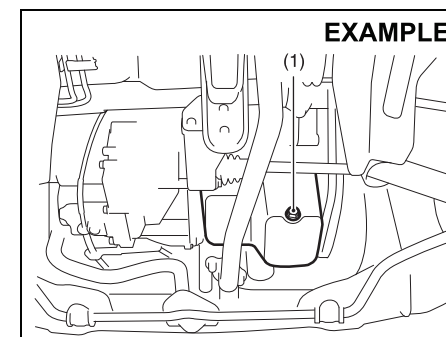


53MH0701

**Tightening torque for drain plug (1):
49 Nm (4.9 kg-m, 36.0 lb-ft)**

INSPECTION AND MAINTENANCE

ALTO K10

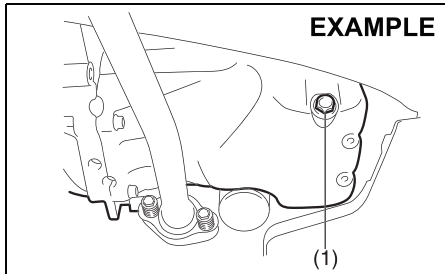

53M-09-009

Tightening torque for drain plug (1):
35 Nm (3.6 kg-m, 25.8 lb-ft)


⚠ WARNING

New and used oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets. Continuous contact with used engine oil may cause skin cancer laboratory animals. Brief contact with used oil may irritate skin. To minimize your exposure to used oil, wear a long-sleeve shirt and moistureproof gloves (such as dish-washing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water. Launder any clothing or rags if wet with oil. Recycle or properly dispose of used oil and filters.

- 4) Reinstall the drain plug and new gasket. Tighten the plug with a wrench to the specified torque.

Replace the Oil Filter


- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- 2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- 3) Smear a little engine oil around the rubber gasket of the new oil filter.
- 4) Screw on the new filter by hand until the filter gasket contacts the mounting surface.

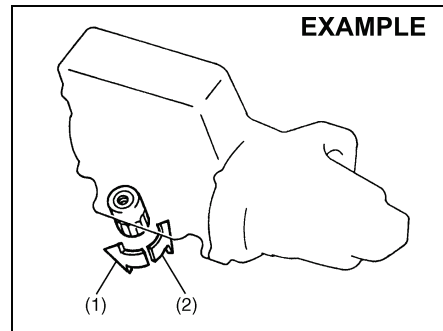

54G092

- (1) Loosen
- (2) Tighten

Tightening (viewed from filter top)

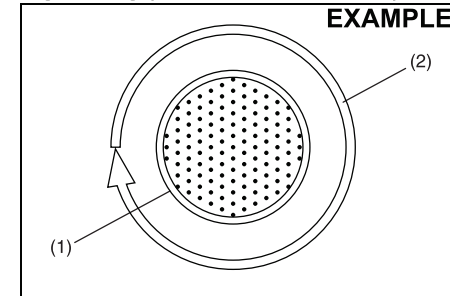

82JN146

- (1) Oil filter
- (2) 1 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

- 5) Tighten the filter specified turn from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter
1 turn or 14 Nm (1.4 kg-m, 10.1 lb-ft)

NOTICE

To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

INSPECTION AND MAINTENANCE

Refill with Oil and Check for Leaks

- 1) Pour oil through the filler hole and install the filler cap.
For the approximate capacity of the oil, refer to the "Capacities" item in the "SPECIFICATIONS" section.
- 2) Start the engine and look carefully for leaks at the oil filter and drain plug. Run the engine at various speeds for at least 5 minutes.
- 3) Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leaks again.

NOTICE

- When replacing the oil filter, it is recommended that you use a genuine MARUTI SUZUKI replacement filter. If you use an aftermarket filter, make sure it is of equivalent quality and follow the manufacturer's instructions.
- Oil leaks from around the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leaks or are not sure that the filter has been properly tightened, have the vehicle inspected by your MARUTI SUZUKI dealer.

Engine Coolant

Selection of Coolant

To maintain optimum performance and durability of your engine, use MARUTI Genuine Coolant or equivalent.

This type of coolant is best for your cooling system as it:

- Helps maintain proper engine temperature.
- Gives proper protection against freezing and boiling.
- Gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your authorized MARUTI SUZUKI dealer can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:


- Always use a high quality ethyleneglycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Make sure that the proper mix is 30/70 coolant to distilled water and in no case higher than 70/30. Concentrations greater than 70/30 coolant to distilled water will cause overheating conditions.
- Do not use straight coolant nor plain water.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine damage.

Coolant Level Check


Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between the "FULL" and "LOW" marks.

Adding Coolant


ALTO 800

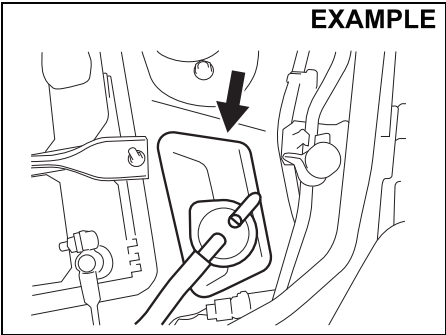


ALTO 800

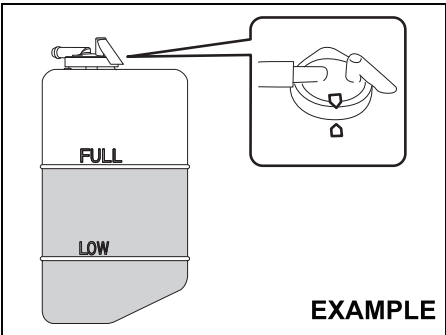

ALTO K10

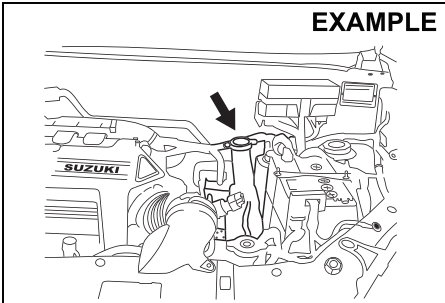

ALTO K10

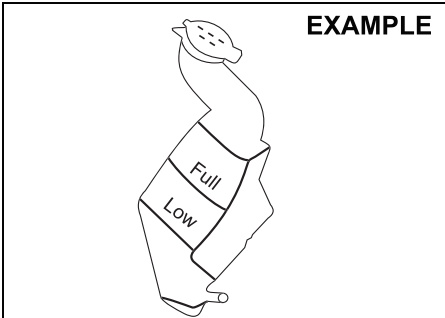

If the coolant level is below the "LOW" mark, more coolant should be added. Remove the reservoir tank cap and add coolant until the reservoir tank level reaches the "FULL" mark. Never fill the reservoir tank above the "FULL" mark.

⚠ WARNING

Engine coolant is harmful or fatal if swallowed or inhaled. Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. Avoid inhaling mist or hot vapors; if inhaled, remove to fresh air. If coolant gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.

NOTICE

- The mixture you use should contain 50% concentration of antifreeze.
- If the lowest ambient temperature in your area is expected to be -35°C (-31°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.


INSPECTION AND MAINTENANCE

Coolant Replacement

Since special procedures are required, we recommend you take your vehicle to your MARUTI SUZUKI dealer for coolant replacement.


Air Cleaner

ALTO 800

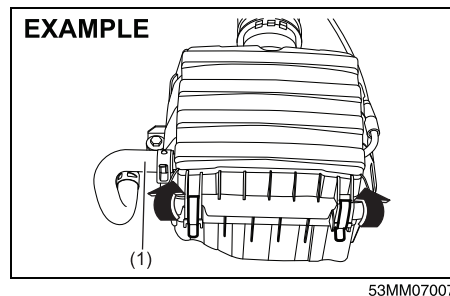

NOTE:
Remove hose (1) from air cleaner case before unclamping.

ALTO K10

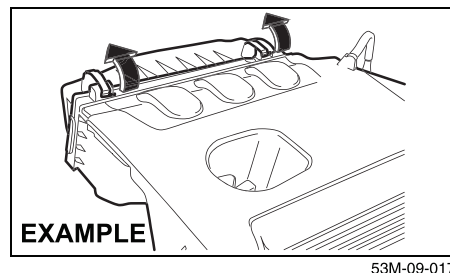


Unclamp/Unscrew the side clamps/screws, and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.

Spark Plugs

You should inspect spark plugs periodically for carbon deposits. When carbon accumulates on a spark plug, a strong spark may not be produced. Remove carbon deposits with a wire or pin and adjust the spark plug gap.

NOTE:
For ALTO K10: Unclamp the air filter bolt and then remove the air cleaner case.

ALTO K10

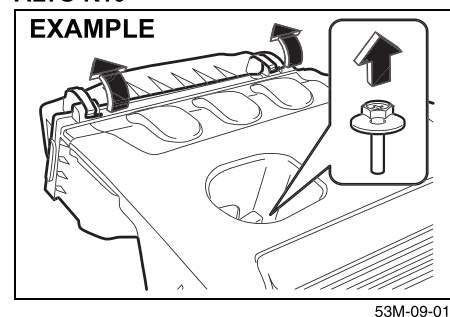


To access the spark plugs:

- 1) If necessary, disconnect the coupler (1) while pushing the release lever.
- 2) Remove the ignition coil bolts (2).


- 3) Pullout the ignition coil (3) and remove the spark plug.

NOTE:
When installation, make sure the wires, couplers, sealing rubber of top cover and washers, are correctly returned in place.

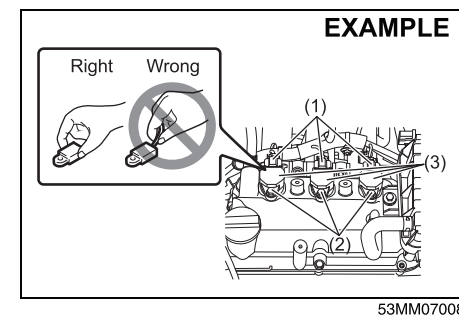


NOTICE

- When pulling the ignition coils out, do not pull on the cable. Pulling on the cable can damage it.
- When servicing the iridium/platinum spark plugs (slender center electrode type plugs), do not touch the center electrode, as it is easy to damage.

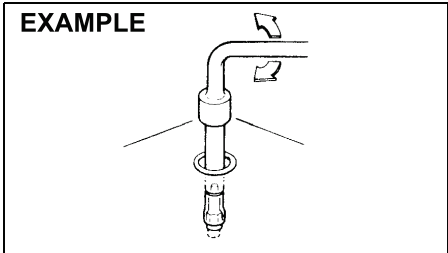

NOTICE

- When installing the spark plugs, screw them in with your fingers to avoid stripping the threads. Tighten with a torque wrench to 25 Nm (2.5 kg-m, 18.0 lb-ft). Do not allow contaminants to enter the engine through the spark plug holes when the plugs are removed.
- Never use spark plugs with the wrong thread size.

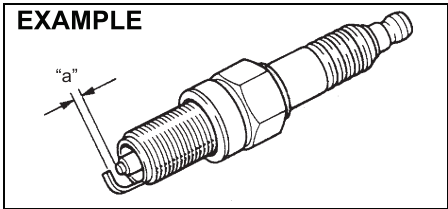

Spark plug gap "a"

ALTO 800
NGK DCPR7E, BOSCH YR7DC
0.8 - 0.9 mm (0.031 - 0.035 in.)

ALTO K10
NGK KR6A-10:
0.95 - 1.05 mm (0.037 - 0.041 in.)

NOTICE

When replacing spark plugs, you should use the brand and type specified for your vehicle. For the specified spark plugs, refer to the "SPECIFICATIONS" section at the end of this book.

Gear Oil

Manual Transaxle Oil

When adding gear oil, use gear oil with the appropriate viscosity and grade.


We highly recommend you use: "MARUTI Genuine GEAR OIL 75W-80" for manual transaxle gear oil or automated manual transaxle oil.

Manual transaxle oil (API GL-4)

75W-80										
°C -30	-20	-10	0	10	20	30	40			
°F -22	-4	14	32	50	68	86	104			

53M-09-023

Gear Oil Level Check

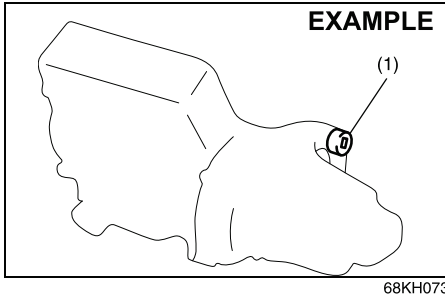

(1) Oil filler and level plug

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler plug (1) or (2).
- 3) Check the inside of the hole with your finger. If the oil level comes up to the bottom of the plug hole, the oil level is correct. If so, reinstall the plug.
- 4) If the oil level is low, add gear oil through the oil filler plug hole (1) or (2) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

Tightening torque (1):
21 Nm (2.1 kg-m, 15.5 lb-ft)

INSPECTION AND MAINTENANCE

⚠ CAUTION

After driving the vehicle, the transaxle oil temperature may be high enough to burn your skin. Wait until the oil filler plug is cool enough to touch with your bare hands before inspecting transaxle oil.

NOTICE

When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.


Manual transaxle sealant:
MARUTI SUZUKI Bond No. "1216E"
or "1217G"

Gear Oil Change

Since special procedures, materials and tools are required, it is recommended that you trust this job to your authorized MARUTI SUZUKI dealer.

Clutch Pedal

Cable control clutch (For Manual Transaxle Model)

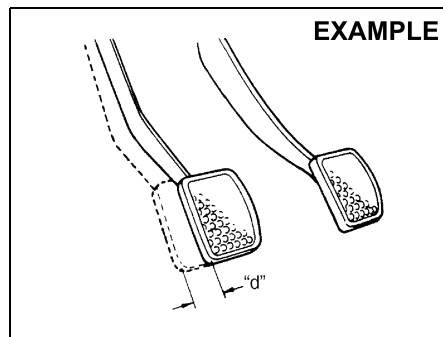


54G274

Clutch pedal play "d":
10 - 15 mm (0.4 - 0.6 in.)

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be between the specified values. If the play is more or less than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your MARUTI SUZUKI dealer.

Fuel Filter

The fuel filter is located on the way of the fuel hose line under the vehicle body.

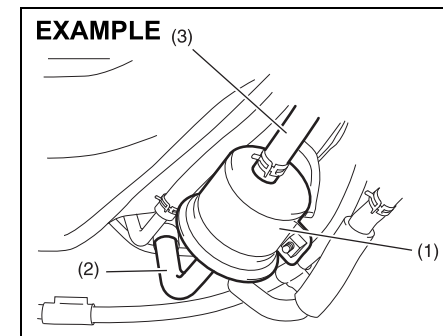

53MM07011


- (1) Fuel filter
- (2) Fuel inlet hose
- (3) Fuel outlet hose

Replace the Fuel Filter

Since special procedures are required, we recommend you take your vehicle to your MARUTI SUZUKI dealer for fuel filter replacement.

Brakes

Brake Fluid

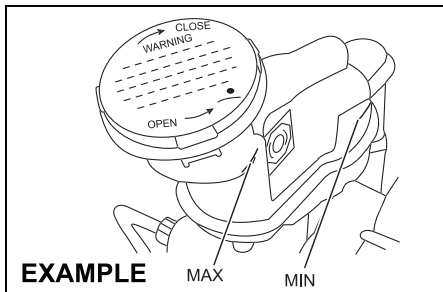

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between the “MAX” and “MIN” lines. If the brake fluid level is near the “MIN” line, fill it up to the “MAX” line with MARUTI GENUINE BRAKE FLUID (MGBF).

⚠ WARNING

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

- If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument panel will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask your MARUTI SUZUKI dealer to inspect the brake system.
- A rapid fluid loss indicates a leak in the brake system which should be inspected by your MARUTI SUZUKI dealer immediately.
- Do not use any fluid other than MARUTI GENUINE BRAKE FLUID (MGBF) brake fluid. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

⚠ CAUTION

Brake fluid can harm your eyes and damage painted surfaces. Use caution when refilling the reservoir.

⚠ WARNING

Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.


NOTE:

With disc brakes, the fluid level can be expected to gradually fall as the brake pads wear.

Brake Pedal

Check if the brake pedal stops at the regular height without “spongy” feeling when you depress it. If not, have the brake system inspected by your MARUTI SUZUKI dealer. If you doubt the brake pedal for the regular height, check it as follows:

INSPECTION AND MAINTENANCE

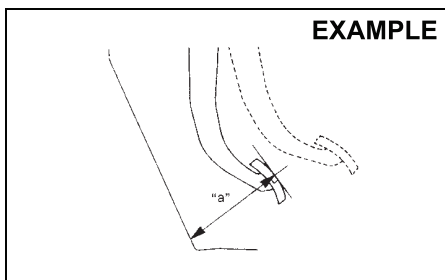

53M-09-029

Pedal to floor carpet minimum distance "a":

ALTO 800: 72 mm (2.8 in.)


ALTO K10: 79 mm (3.1 in.)

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by your MARUTI SUZUKI dealer.

NOTE:

When measuring the distance between the brake pedal and floor wall, be sure not to include any accessory floor mat or rubber mat on the floor carpet in your measurement.

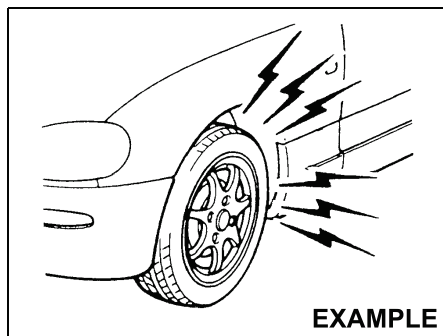


60G104S

⚠ WARNING

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by your MARUTI SUZUKI dealer.

- **Poor braking performance**
- **Uneven braking (brakes not working uniformly on all wheels).**
- **Excessive pedal travel**
- **Brake dragging**
- **Excessive noise**
- **Pedal pulsation (pedal pulsates when depressed).**

Parking Brake

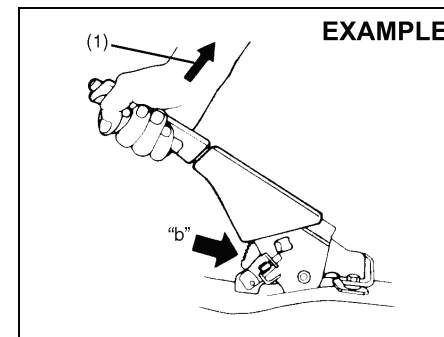

54G109

Ratchet tooth specification "b":


4th – 9th

Lever pull force (1):

200 N (20 kg, 44 lbs)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag after the lever has been fully released, have the parking brake inspected and/or adjusted by your MARUTI SUZUKI dealer.

Steering

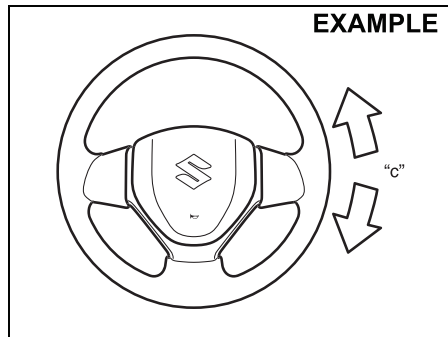


53M-09-032

Steering wheel play "c":
0 – 30 mm (0.0 – 1.2 in.)

Check the play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is outside the specification or you find anything else to be wrong, an inspection must be performed by your MARUTI SUZUKI dealer.

Tires

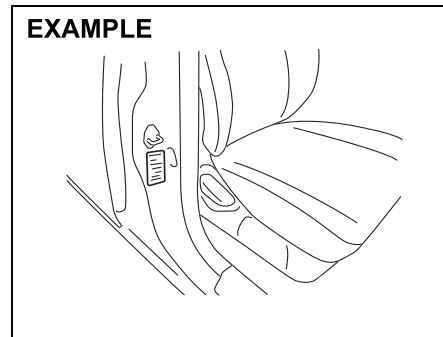

53M-09-033

The front and rear tire pressure specifications for your vehicle are listed on the Tire Information Label. Both the front and rear tires should have the specified tire pressure.

Tire Inspection


Inspect your vehicle's tires at least once a month by performing the following checks:

- 1) Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

⚠ WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- Never underinflate or overinflate the tires.

Underinflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim. Overinflation can cause the tire to burst, resulting in personal injury. Overinflation can also cause unusual handling characteristics which may result in an accident.

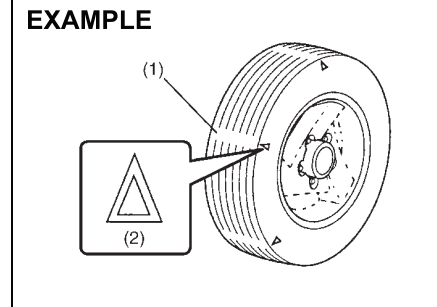

53M-09-034

INSPECTION AND MAINTENANCE

- (1) Tread wear indicator
 - (2) Indicator location mark
- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
 - 3) Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by your MARUTI SUZUKI dealer.

⚠ CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Be sure to have tires and wheel alignment checked periodically by your MARUTI SUZUKI dealer.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.


⚠ WARNING

- **Your MARUTI SUZUKI is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.**
- **Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.**
- **Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.**

NOTICE

Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with your SUZUKI dealer before purchasing replacement tires that differ in size from the original tires.

Tire Rotation

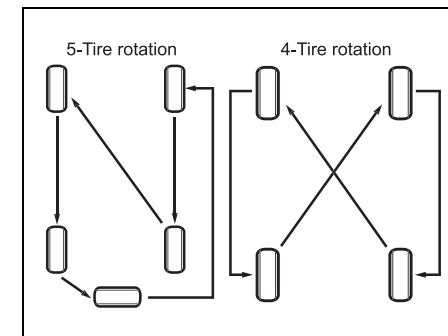

53M-09-035

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated as mentioned in periodic maintenance schedule. After rotation, adjust front and rear tire pressures to the specification listed on your vehicle's Tire Information Label.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at Maruti Suzuki Authorized Workshop.

Wheel Alignment

In case of abnormal tire wear or pulling towards one side, have the wheel aligned at Maruti Suzuki Authorized Workshop.

INSPECTION AND MAINTENANCE

Tubeless Tires (If equipped)

The vehicle is equipped with Tubeless Tires. In tubeless tire, a thin layer of butyl rubber is used for lining the inside of the tubeless tire. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tire bead and wheel rim. Tubeless tires are having advantage of slow air loss and preventing sudden deflation while driving.

Care and maintenance tips for tubeless tires

- 1) Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tire damage.
- 2) In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tire has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tire is fitted, replace the valve.
- 5) If continuous high speed driving is required, increase tires pressure by 5 psi over recommended inflation pressure.
- 6) Never run the tire beyond TWI (Tread Wear Indicator). The tire is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the

tread around the tire marked by a triangular symbol (TWI).

- 7) Always prefer tubeless tire mounting machine. In case of manual mounting-tire/wheel rim damage may occur.
- 8) In case of any problem, please get in touch with Maruti Suzuki Authorized Workshop.


Battery

WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working in the vicinity of the battery.
- When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump starting instructions in the "EMERGENCY SERVICE" section of this manual if it is necessary to jump start your vehicle.
- Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered.
- Keep batteries out of the reach of children.

INSPECTION AND MAINTENANCE

EXAMPLE

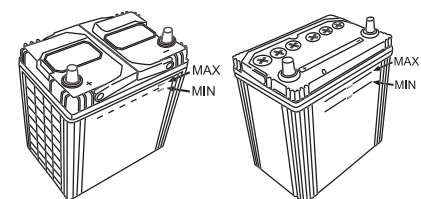

53m-09-036

The level of the battery solution must be kept between the “MAX” and the “MIN” level lines at all times. If the level is found to be below the “MIN” level line, add distilled water to bring level between “MAX” and “MIN”. You should, however, periodically check the battery, battery terminals, and battery holddown bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.




CAUTION

Do not overfill the battery with distilled water in order to avoid spillage.

Replacement of the battery

EXAMPLE

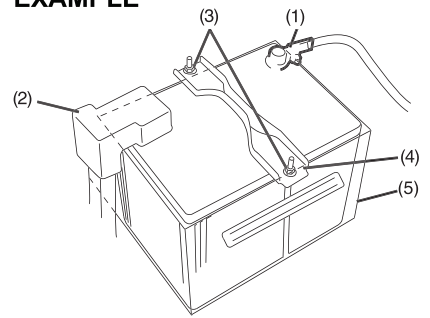

53M-09-037

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer bolts (3) and remove the retainer (4).
- 4) Remove the battery along with cover assembly (5) (if equipped).

NOTICE

- Ensure that battery should not be removed without cover assembly.
- When the battery is reassembled into the vehicle, kindly ensure that battery cover is also installed along with battery.

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the retainer nuts and battery cables securely.

NOTE:

When the battery is disconnected, some of the vehicle's function will be initialized and/or deactivated.

These function are required to reset after the battery is reconnected.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the battery.


Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses


These fuses are for individual electrical circuits. To remove a fuse, use the fuse puller provided in the fuse box.

INSPECTION AND MAINTENANCE

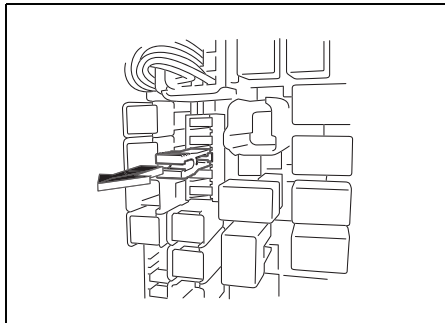

53M-09-038

Fuses in the Engine Compartment ALTO 800

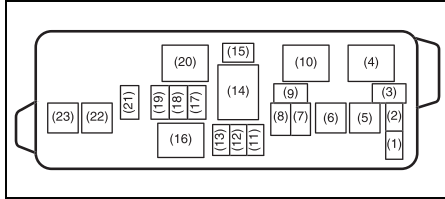


53M-09-039

MAIN FUSE / PRIMARY FUSE

(1)	—	Blank
(2)	—	Blank
(3)	—	Blank
(4)	—	Blank
(5)	50A	Ignition switch fuse

(6)	50A	Battery1
(7)	15A	Headlight (left) fuse
(8)	15A	Headlight (right) fuse
(9)	—	Blank
(10)	—	Radiator fan relay
(11)	—	Blank
(12)	—	Blank
(13)	—	Blank
(14)	80A	All electric load
(15)	—	Blank
(16)	—	Main relay
(17)	30A	Radiator fan fuse
(18)	15A	Fuel injection fuse
(19)	10A	A/c compressor fuse
(20)	—	Fuel pump relay
(21)	—	Blank
(22)	—	Blank
(23)	30A	Battery 2 fuse

Fuses in the Engine Compartment ALTO K10

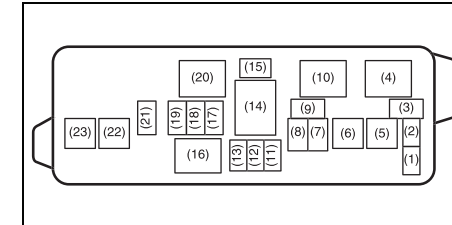

53M-09-040

MAIN FUSE / PRIMARY FUSE


(1)	—	Blank
(2)	—	Blank
(3)	10A	Font fog light
(4)	—	A/c compressor relay
(5)	50A	Ignition switch fuse
(6)	50A	Battery1
(7)	15A	Headlight (left) fuse
(8)	15A	Headlight (right) fuse
(9)	—	Blank
(10)	—	Radiator fan relay
(11)	—	Blank
(12)	—	Blank
(13)	—	Blank

INSPECTION AND MAINTENANCE

(14)	80A	All electric load
(15)	—	Blank
(16)	—	Main relay
(17)	30A	Radiator fan fuse
(18)	15A	Fuel injection fuse
(19)	10A	Air compressor fuse
(20)	—	Fuel pump relay
(21)	7.5A	Automated Manual Transaxle (if equipped)
(22)	40A	Automated Manual Transaxle pump (if equipped)
(23)	30A	Battery 2

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a Maruti Genuine replacement. To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in side the fuse box cover.

EXAMPLE

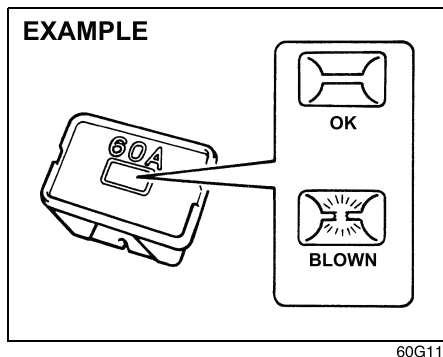

60G111

⚠ WARNING


If the main fuse or a primary fuse blows, be sure to have your vehicle inspected by an authorized MARUTI SUZUKI dealer. Always use a genuine MARUTI replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.

NOTE:

Make sure that the fuse box always carries spare fuses and fuse puller.


Fuses under the Dash Board

EXAMPLE

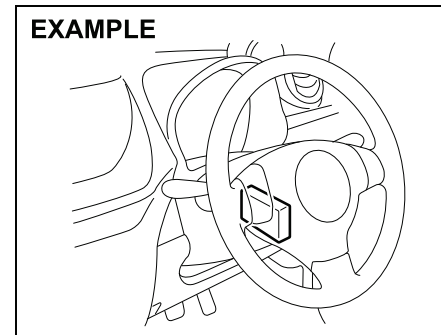

68KH078

ALTO 800

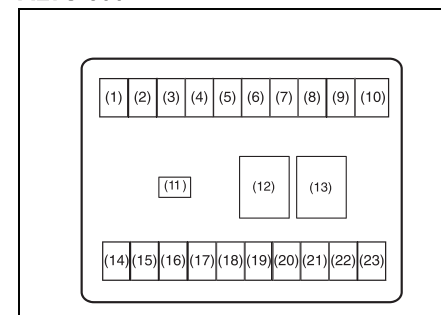


53M-09-043

INSPECTION AND MAINTENANCE

SECONDARY FUSE		
(1)	10A	IG2 SIG
(2)	15A	Wiper
(3)	–	Blank
(4)	–	Blank
(5)	30A	Blower motor
(6)	10A	Stop light
(7)	10A	Tail light
(8)	15A	Audio
(9)	20A	Door lock
(10)	–	Blank
(11)	15A	Accessory
(12)	–	Blank
(13)	30A	Power window
(14)	15A	Ignition switch
(15)	10A	Turn signal light
(16)	10A	Meter
(17)	7.5A	Air bag
(18)	–	Blank
(19)	–	Blank
(20)	–	Blank
(21)	30A	Power steering
(22)	30A	ST SIG
(23)	15A	Horn/Hazard


ALTO K10

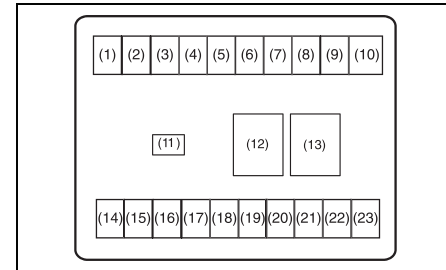

53M-09-044

SECONDARY FUSE		
(1)	10A	IG2 SIG
(2)	15A	Wiper
(3)	–	Blank
(4)	7.5A	Automated Manual Transaxle 2 (if equipped)
(5)	30A	Blower motor
(6)	10A	Stop light
(7)	10A	Tail light
(8)	15A	Audio
(9)	20A	Door lock
(10)	–	Blank
(11)	15A	Accessory
(12)	–	Blank
(13)	30A	Power window
(14)	15A	Ignition switch

(15)	10A	Turn signal light
(16)	10A	Meter
(17)	7.5A	Air bag
(18)	7.5A	IG1 SIG
(19)	–	Blank
(20)	–	Blank
(21)	30A	Power steering
(22)	30A	ST SIG
(23)	15A	Horn/Hazard

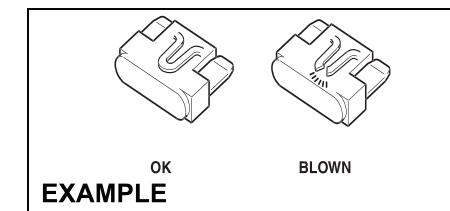

53M-09-045

⚠ WARNING

Always be sure to replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by your MARUTI SUZUKI dealer.

INSPECTION AND MAINTENANCE

Bulb Replacement

⚠ CAUTION

- Light bulbs can be hot enough to burn your finger right after being turned off. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.

NOTICE


The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

NOTICE

Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your MARUTI SUZUKI dealer.

Interior Light

EXAMPLE

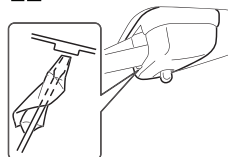


53M-09-046

Pull down the lens by using a flat blade screwdriver covered with a soft cloth as shown. To install it, simply push it back in. The bulb can be removed by simply pulling it out. When replacing the bulb, make sure that the contact springs are holding the bulb securely.

Headlight

EXAMPLE

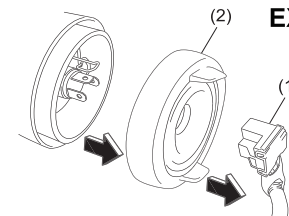


53M-09-049

Disconnect the coupler (1). Remove the sealing rubber (2). Push the retaining spring (3) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order.

INSPECTION AND MAINTENANCE

Side Turn Signal Light

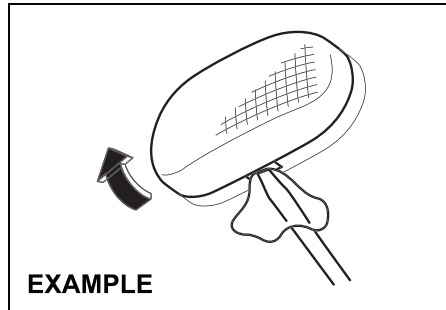


53M-09-050

Pull down the lens by using a flat blade screwdriver covered with a soft cloth as shown. The bulb can be removed by simply pulling it out. Then remove the bulb. Install a new bulb in the reverse order.

Other General Lights

Bulb holder

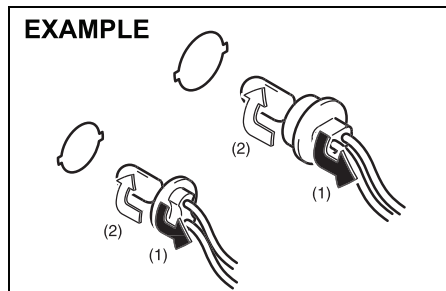


53M-09-051

- (1) Removal
- (2) Installation

To remove a bulb holder from a light housing, turn the holder counterclockwise and pull it out. To install the holder, push the holder in and turn it clockwise.

Bulb

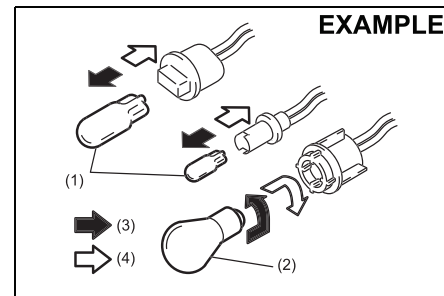

53M-09-052

- (3) Removal
- (4) Installation

There are two types of bulb, "Full glass type" (1) and "Glass/metal type" (2).


To remove and install a full glass type bulb (1), simply pull out or push in the bulb.

To remove a glass metal type bulb (2) from a bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.

You can access the individual bulb or bulb holders as follows.


Front turn signal light (1) Front position light (2)

ALTO 800

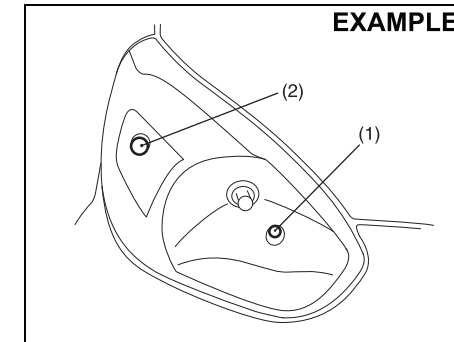

53MM07001

ALTO K10

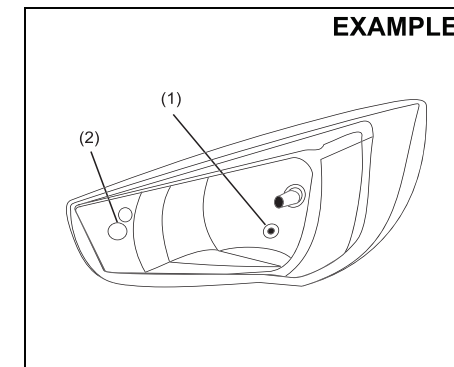


53M-09-054

INSPECTION AND MAINTENANCE


Rear combination light

ALTO 800

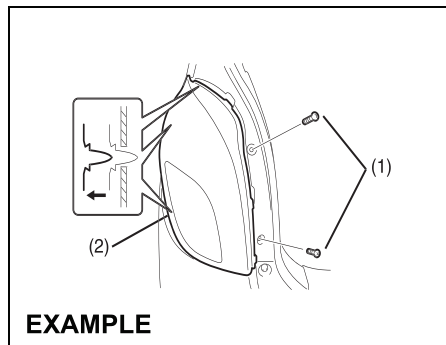

53M-09-055

ALTO K10

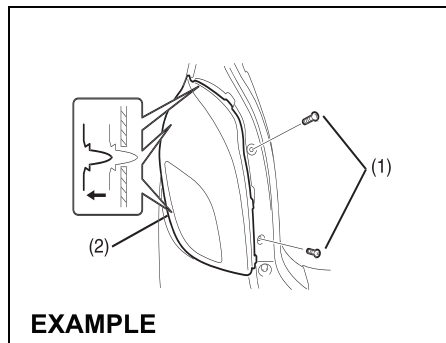


53M-09-056

Remove the screw (1). Remove the combination light (2) by pulling it outside.


7-29

License plate light

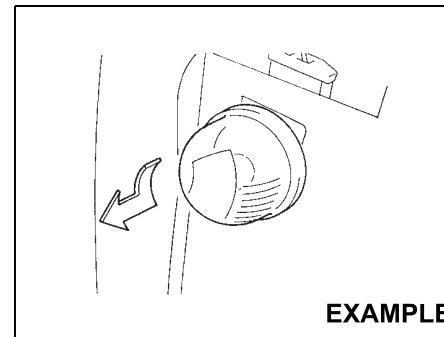

53M-09-057


High-mount stop light

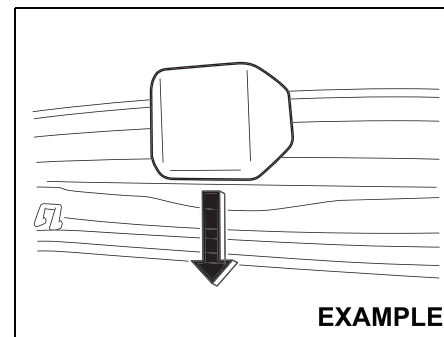

53M-09-058

Wiper Blades

EXAMPLE

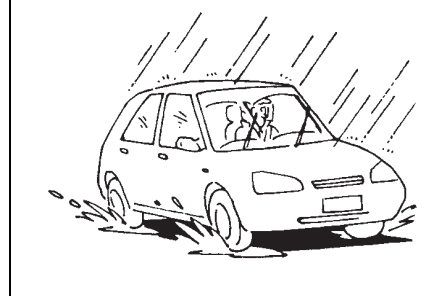

53M-09-059

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.


NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult your MARUTI SUZUKI dealer for proper replacement method.

INSPECTION AND MAINTENANCE

For windshield wipers:

EXAMPLE

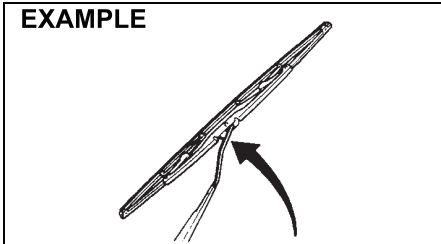


53M-09-060

- 1) Hold the wiper arm away from the window

NOTE:

When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first. Otherwise, the wiper arms may interfere with each other.


EXAMPLE

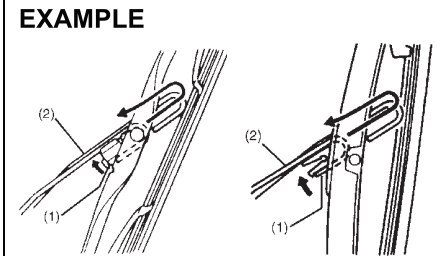

53M-09-061


- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

Removal

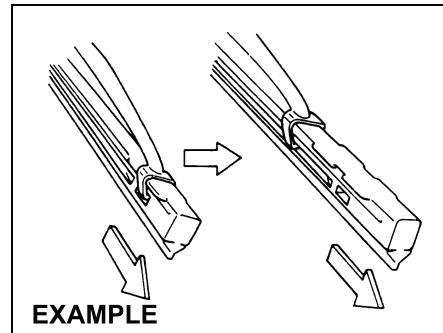

60A260

Installation

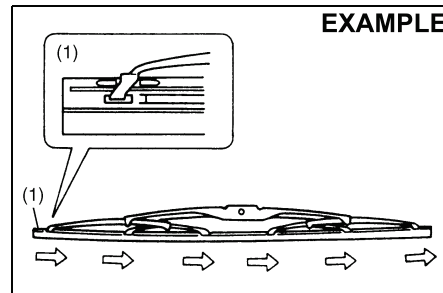


54G132


- (1) Locked end

- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.

EXAMPLE

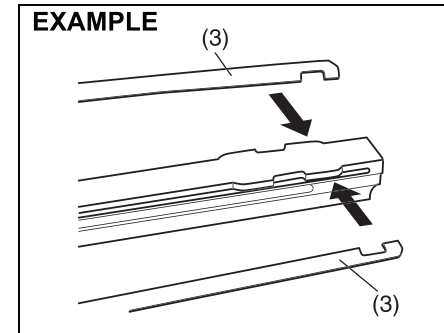

53M-09-064

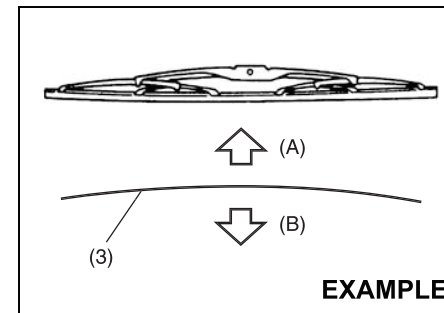

53M-09-065

- (A) Up
- (B) Down

INSPECTION AND MAINTENANCE

NOTE:


When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustrations.

- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

Windshield Washer Fluid

Front

EXAMPLE

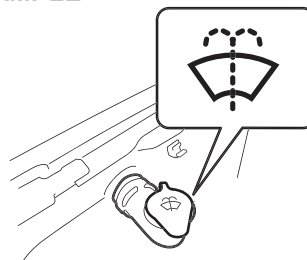

53M-09-066

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

⚠ WARNING

Do not use “anti-freeze” solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also damage your vehicle’s paint.

NOTICE

Damage may result if the washer motor is operated with no fluid in the washer tank.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


EMERGENCY SERVICE

EMERGENCY SERVICE



Tire Changing Tool	8-1
Jacking Instructions	8-1
Changing Wheels	8-4
Jump Starting Instructions	8-5
Towing	8-6
If the Starter Does Not Operate	8-6
If the Engine is Flooded	8-6
If the Engine Overheats	8-7
Warning Triangle	8-8

EMERGENCY SERVICE

Tire Changing Tool

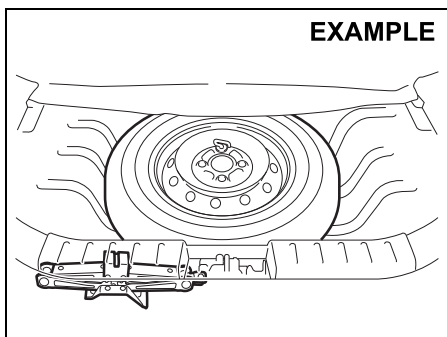

The jack handle and wheel brace are stowed in the storage bag.

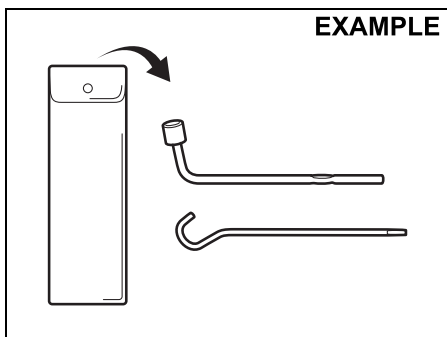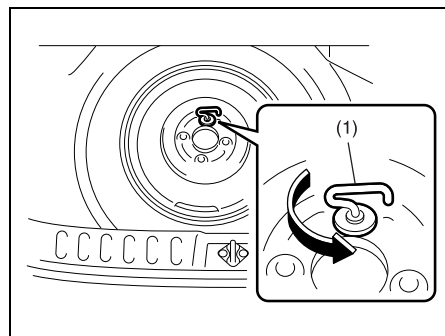

The jack (1) is stowed below the luggage compartment board as shown in the above illustration.

To remove the spare tire, turn its bolt (1) counterclockwise and remove it.

To remove the jack, remove the spare tire and turn the jacks shaft counterclockwise and pull the jack out of the storage bracket. To stow the jack, place it in the storage bracket and turn the shaft clockwise until the jack is securely held in place.


⚠ WARNING

After using the tire changing tools, be sure to stow them securely or they can cause injury if an accident occurs.

⚠ CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

Jacking Instructions

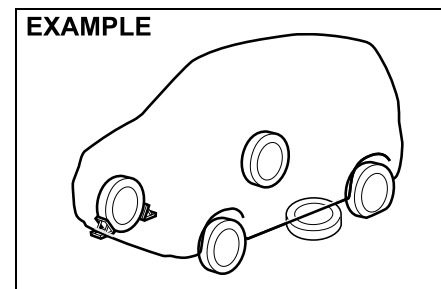



- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "R" (Reverse) if your vehicle has a manual transaxle.

⚠ WARNING


- Be sure to shift into "R" (Reverse) when you jack up the vehicle.
- Never jack up the vehicle with the transaxle in "N" (Neutral). Otherwise, unstable jack may cause an accident.

EMERGENCY SERVICE

- 3) Turn on the hazard warning flasher if your vehicle is near traffic.
- 4) Block the front and rear of the wheel diagonally opposite of the wheel being lifted.
- 5) Place the spare wheel near the wheel being lifted as shown in the illustration in case that the jack slips.

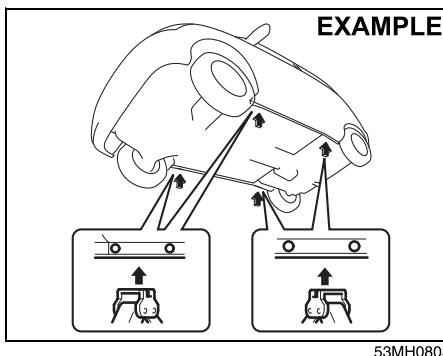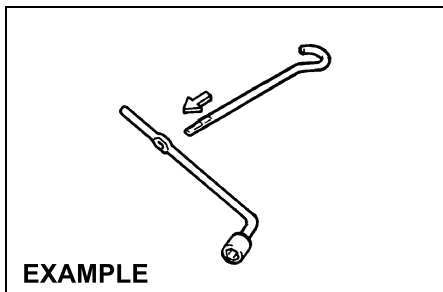

EXAMPLE

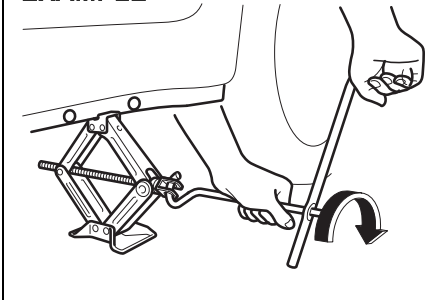

- 6) Position the jack vertically and raise the jack by turning the jack handle clockwise until the jack head groove fits around the jacking bar beneath the vehicle body. See illustrations.
- 7) Continue to raise the jack slowly and smoothly until the tire clears the ground. Do not raise the vehicle more than necessary.


⚠ WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed.
- Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the suspension arm boss. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- Never get under the vehicle when it is supported by the jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

To Raise the Vehicle with a Garage Jack

- Apply the garage jack to one of the points indicated below.

EMERGENCY SERVICE

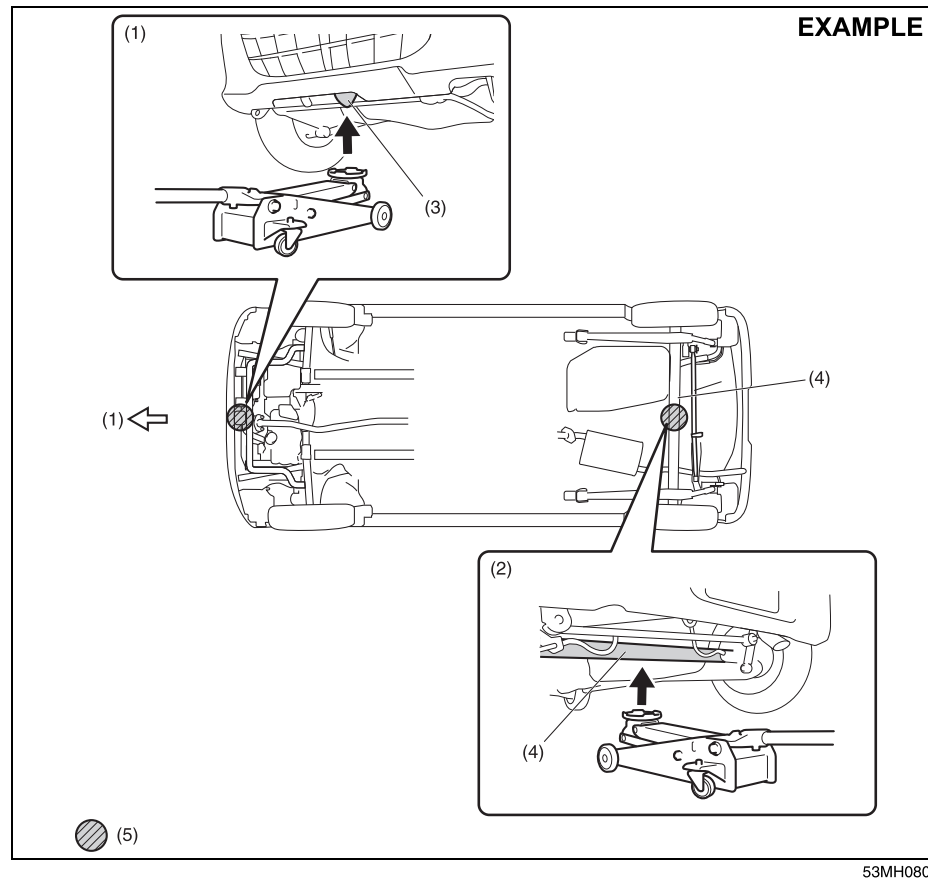

NOTICE

Never apply a garage jack to the exhaust pipe or engine undercover and rear torsion beam.

NOTE:

For more details, please contact an authorized MARUTI SUZUKI dealer.

EMERGENCY SERVICE

Changing Wheels


To change a wheel, use the following procedure:

- 1) Clear all passengers and luggage from the vehicle.

NOTE:

Jack and the tools are located below the luggage compartment board.

- 2) Remove the jack, tools and spare wheel from the vehicle.
- 3) Loosen, but do not remove the wheel nuts.
- 4) Jack up the vehicle.
- 5) Remove the wheel nuts and wheel.
- 6) Before installing the new wheel, clean any mud or dirt off from the surface of the wheel and hub with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 7) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

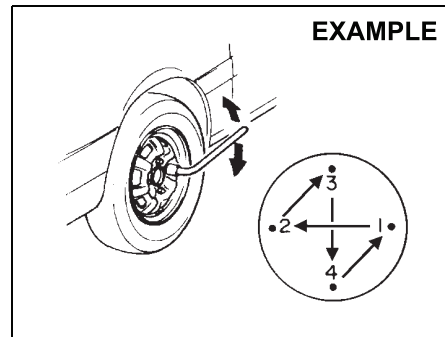

53M-10-009


Tightening torque for wheel nut
85 Nm (8.5 kg-m, 61.5 lb-ft)

- 8) Lower the jack and fully tighten the nuts in a crisscross fashion with a wrench as shown in the illustration.

WARNING


Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by an authorized SUZUKI dealer.

Full Wheel Cover (if equipped)

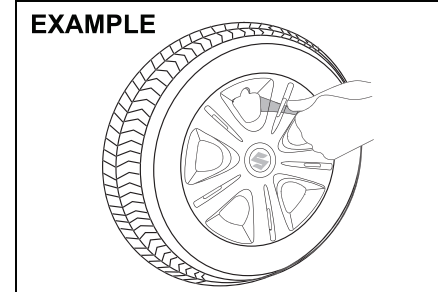

53M-10-010

Insert a piece of cloth between the spokes of the wheel cover and try to pull the cover outward (as shown in figure). Take out the detached wheel cover from the wheel rim. For installation first match the slot at the wheel cover with the air filling nozzle of the wheel. Apply equal pressure at the circumference of the wheel cover to fix it in the wheel rim.

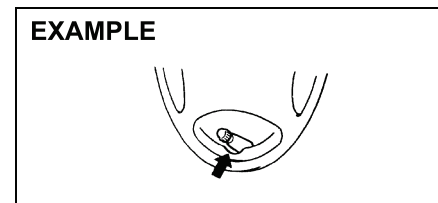

54G117

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

EMERGENCY SERVICE

Jump Starting Instructions

⚠ WARNING


- Never attempt to jump start your vehicle if the battery appears to be frozen. Batteries in this condition may explode or rupture if jump starting is attempted.
- When making jump lead connections, be certain that your hands and the jump leads remain clear from pulleys, belts, or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working in the vicinity of the battery.
- If the booster battery you use for jump starting is installed in another vehicle, make sure the two vehicles are not touching each other.
- If your battery discharges repeatedly, for no apparent reason, have your vehicle inspected by an authorized MARUTI SUZUKI dealer.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump starting instructions below precisely and in order. If you are in doubt, call for qualified road service.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

When Jump Starting Your Vehicle, Use the Following Procedure:

- 1) Use only a 12-volt battery to jump start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, DO NOT LET THE VEHICLES TOUCH. Set the parking brakes fully on both vehicles.
- 2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

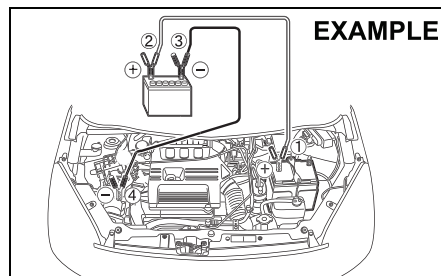

53M-10-012

- 3) Make jump lead connections as follows:

1. Connect one end of the first jump lead to the positive (+) terminal of the flat battery (1).
2. Connect the other end to the positive (+) terminal of the booster battery (2).
3. Connect one end of the second jump lead to the negative (-) terminal of the booster battery (2).
4. Make the final connection to an unpainted, heavy metal part (i.e. engine hook (3)) of the engine of the vehicle with the flat battery (1).

⚠ WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged battery, or an explosion may occur.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the flat battery.
- 6) Remove the jump leads in the exact reverse order in which you connected them.

Towing

If you need to have your vehicle towed, contact a professional service. Your dealer can provide you with detailed towing instructions.

NOTICE

To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.

2-Wheel Drive (2WD) Manual Transaxle or Automated Manual Transaxle

Manual transaxle vehicles or Automated Manual Transaxle may be towed using either of the following methods.

- 1) From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, make sure that transaxle is in neutral, the steering wheel is unlocked (the ignition key should be in the "ACC" position), and the steering wheel is secured with a clamping device designed for towing service.

NOTICE

After shifting the auto gear shift gearshift lever to the "N" position, always check the gear position indicator in the instrument cluster shows the "N" position to make sure that the transaxle is disengaged.

If the transaxle cannot be put in neutral, turn the key from the "OFF" to the "ON" position, and move the auto gear shift gearshift lever from "N" to "D", "M" or "R", then back to "N" again. Then turn the key from the "ON" to the "OFF" position.

These procedures may help put the transaxle in neutral. If the transaxle still cannot be put in neutral, you cannot tow the vehicle without using a towing dolly.

NOTICE

The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

If the Starter Does Not Operate

- 1) Try turning the ignition switch to the "START" position with the headlights turned on to determine the battery condition. If the headlights go excessively dim or go off, it usually means that either the battery is flat or the battery terminal contact is poor. Recharge the battery or correct battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by your authorized MAR-UTI SUZUKI dealer.

If the Engine is Flooded

If the engine is flooded with gasoline, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine. (Do not operate the starter motor for more than 15 seconds).

EMERGENCY SERVICE

If the Engine Overheats

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating during driving:

- 1) Turn off the air conditioner, if equipped.
- 2) Take the vehicle to a safe place and park.
- 3) Let the engine run at the normal idle speed for a few minutes until the high engine coolant temperature warning light goes off.

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to let it cool. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.


If the high engine coolant temperature warning light does not go off:

- 1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.

- 2) Check the coolant level in the reservoir. If it is found to be lower than the “LOW” line, look for leaks at the radiator, water pump, and radiator and heater hoses. If you locate any leaks that may have caused the overheating, do not run the engine until these problems have been corrected.
- 3) If you do not find a leak, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to “Engine Coolant” in the “INSPECTION AND MAINTENANCE” section.)

NOTE:

If your engine overheats and you are unsure what to do, contact your MARUTI SUZUKI dealer.

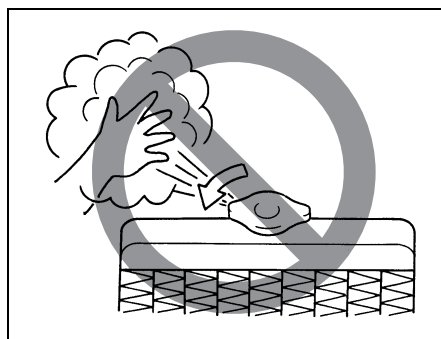


65D614

WARNING

- It is hazardous to remove the radiator cap (or degassing tank cap for a diesel engine) when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.

Warning Triangle


EXAMPLE

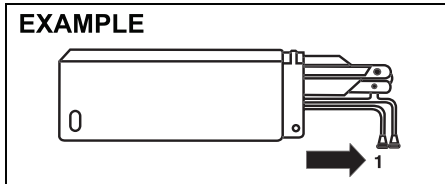

53M-10-014

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.


EXAMPLE

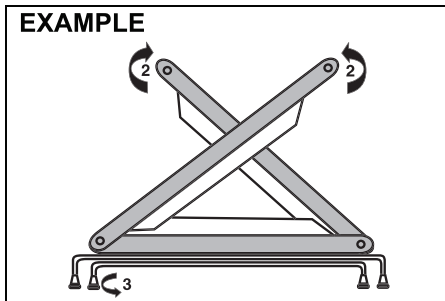

53M-10-015

- Remove the warning triangle carefully from the cover as shown by arrow 1.
- Open both the reflector arms as shown by arrow and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

EXAMPLE

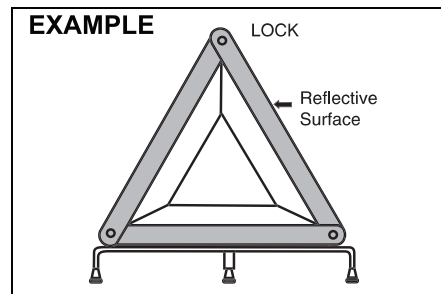

53M-10-016

APPEARANCE CARE

Corrosion Prevention	9-1
Vehicle Cleaning	9-2

APPEARANCE CARE

Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information About Corrosion

Common causes of corrosion

- 1) Accumulation of road salt, dirt, moisture, or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- 2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.

Environmental conditions which accelerate corrosion

- 1) Road salt, dust control chemicals, sea air or industrial pollution will all accelerate the corrosion of metal.
- 2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- 3) Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the

vehicle which are not well ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underbody, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to the "Vehicle Cleaning" section.

Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be

required. Be sure that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used off road or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If a spill or leak does occur, clean and dry the area immediately.

APPEARANCE CARE


Store your vehicle in a dry, well-ventilated area

Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage or if you frequently drive it in when wet, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

⚠ WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter, exhaust pipes, etc. A fire could be started if the undercoating substance becomes overheated.

Vehicle Cleaning

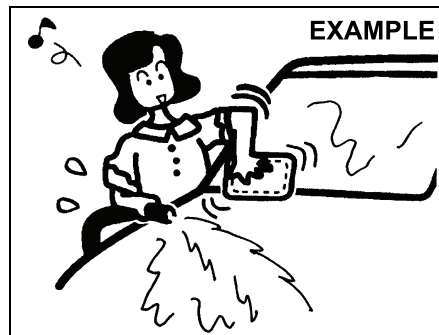

76G044S

⚠ WARNING

When cleaning the interior or exterior of the vehicle, NEVER USE flammable solvents such as lacquer thinners, gasoline, benzene or cleaning materials such as bleaches or strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning the Interior

Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

APPEARANCE CARE

Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Cleaning the Exterior

NOTICE

It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.


Caring for Aluminum Wheels

NOTE:

- Do not use an acidic or alkaline detergent to wash aluminum wheels. These types of detergent will cause permanent spots, discoloration and cracks on finished surfaces.
- Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.

Washing

EXAMPLE

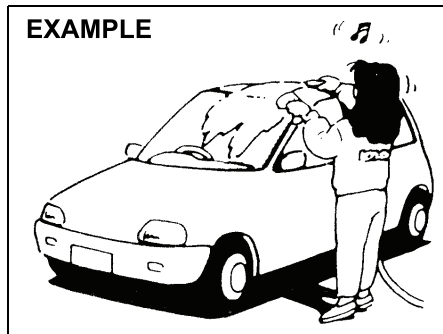

60B212S

⚠ WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, you should wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to make sure they have maintained their normal effectiveness.

When washing the vehicle, park it where direct sunlight does not fall on it and follow the instructions below:

- 1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.

- 2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Be sure to follow above procedure.

APPEARANCE CARE

- 3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE


When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) After rinsing, wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, "touch-up" the damage following the procedure below:
1. Clean all damaged spots and allow them to dry.
 2. Stir the paint and "touch-up" the damaged spots lightly using a small brush.
 3. Allow the paint to dry completely.

NOTICE

If you use an automatic car wash, make sure that your vehicle's body parts, such as spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.

Waxing

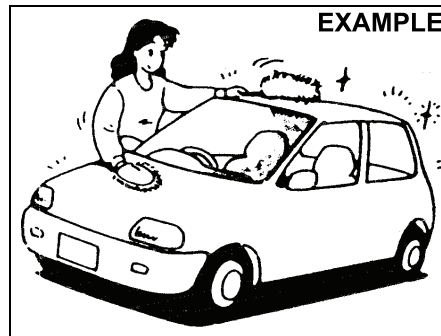

60B211S

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

GENERAL INFORMATION


Vehicle Identification 10-1

FASTag (if equipped) 10-1

GENERAL INFORMATION

Vehicle Identification

Chassis Serial Number

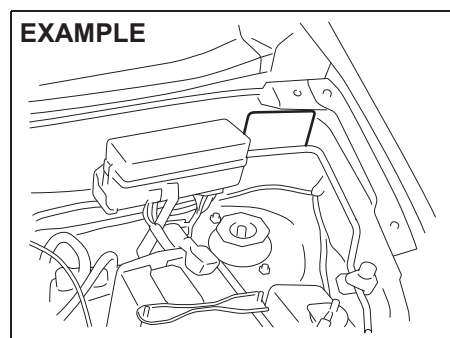


53M-12-001

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist your dealer when ordering or referring to special service information. Whenever you have occasion to consult your MARUTI SUZUKI dealer, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.


Engine Serial Number

ALTO 800

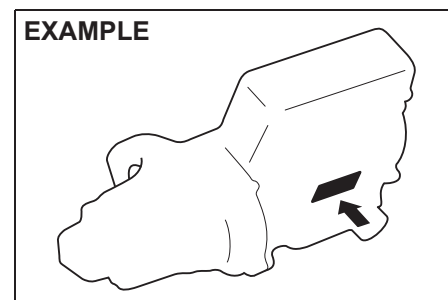

53M-12-002

ALTO K10

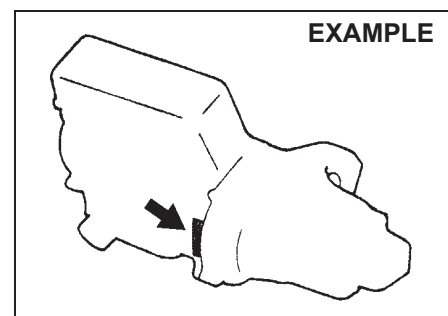


53M-12-003

The engine serial number is stamped on the cylinder block as shown in the illustration.

FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.


In case of any damage to FASTag or replacement of front windscreen, please contact your nearest authorised Maruti Suzuki workshop.

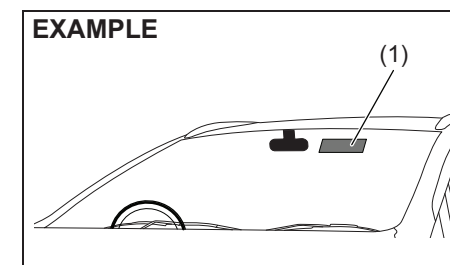

64MM01001


GENERAL INFORMATION

As seen from inside of the vehicle

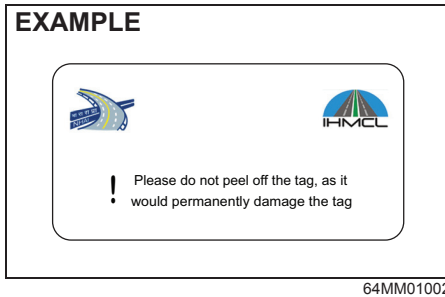

NOTE:
The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle

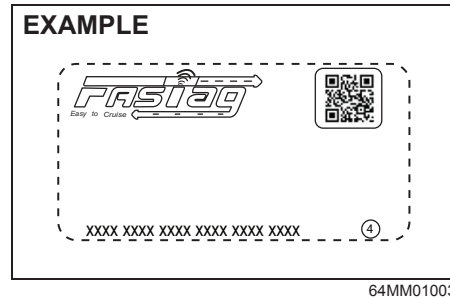

NOTE:
The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

- NOTE:**
- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
 - Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
 - Use of any sharp objects on the tag can damage the tag.

SPECIFICATIONS

SPECIFICATIONS

NOTE:

Specifications are subject to change without notice.

ITEM: Dimensions		UNIT: mm	
		ALTO 800	ALTO K10
Overall length		3430	3545
Overall width	With Body Side Molding	1515	1515
	Without Body Side Molding	1490	1490
Overall height		1475	1475
Wheelbase		2360	2360
Track Front		1295	1295
Rear		1290	1290
Ground clearance		160	160

ITEM: Mass (weight)		UNIT: kg	
		ALTO 800	ALTO K10
Curb mass (weight)		695-727	740-755
Gross vehicle mass (weight) rating		1185	1210
Permissible maximum Axle Weight	Front	630	630
	Rear	630	630

11

11-1

53MH0-74E

SPECIFICATIONS

ITEM: Engine		
	ALTO 800	ALTO K10
Type	F8D	K10B
Number of cylinders	3	3
Bore	68.5 mm	73 mm
Stroke	72.0 mm	79.5 mm
Piston displacement	796 cm ³ (796 cc)	998 cm ³ (998 cc)
Compression ratio	10.95 ± 0.4 : 1	11 ± 0.4 : 1

ITEM: Electrical			
		ALTO 800	ALTO K10
Standard spark plug	Nickel plug	NGK DCPR7E, BOSCH YR7DC	NGK, KR6A-10
Battery		12V 34B19	12V 34B19
Fuses		See "INSPECTION AND MAINTENANCE" section.	

SPECIFICATIONS

ITEM: Lights					
		ALTO 800		ALTO K10	
		WATTAGE	BULB No.	WATTAGE	BULB No.
Headlight		12V 60/55W	H4	12V 60/55W	H4
Turn signal light	Front	12V 21W	P21W	12V 21W	PY21W
	Rear	12V 21W	PY21W	12V 21W	PY21W
Side turn signal light		12V 5W	W5W	12V 5W	W5W
Position light		12V 5W	W5W	12V 5W	W5W
Brake/tail light		12V 21/5W	P21/5W	12V 21/5W	P21/5W
License plate light		12V 5W	W5W	12V 5W	W5W
Reversing light		12V 21W	P21W	12V 21W	P21W
Interior light		12V 8W	—	12V 8W	—
High mount stop light		12V 16W	W16W	12V 16W	W16W

SPECIFICATIONS

ITEM: Wheels and Tires		
	ALTO 800	ALTO K10
Tire size, front and rear	145/80R12 74S*1	155/65 R13 73S*1
	145/80R12 74H*1	155/65 R13 73T*1
	145/80R12 74T*1	—
Rim size	145/80R12 74S*1: 12 × 3.50B	155/65 R13 73S*1 : 13X4 1/2J
	145/80R12 74H*1: 12 × 3.50B	155/65 R13 73T*1 : 13X4 1/2J
	145/80R12 74T*1: 12 × 3.50B	—
Tire pressures	For the specified tire pressure, see the Tire Information Label located the driver's door lock pillar.	

*1: When tire replacement is necessary and if the specified load index and speed rated tire is not available, then use a tire of higher load index and speed rating.

ITEM: Capacities (approx.)		
	ALTO 800	ALTO K10
Coolant (including reservoir tank)	3.5 L	4.5 L
Fuel tank	35 L	35 L
Engine oil	3.0 L (replacement with oil filter)	2.8 L (replacement with oil filter)
Transaxle oil	1.5 L	1.45 L

SERVICE NETWORK (AS ON 01.04.2017)

■ MARUTI SUZUKI AUTHORISED DEALERS (DEALER CODE) :	SALES, SERVICE, WARRANTY & SPARE PARTS
■ MARUTI SERVICE MASTER (MSM) :	SERVICE, WARRANTY & SPARE PARTS
■ MARUTI SERVICE ZONE (MSZ) :	SERVICE, WARRANTY & SPARE PARTS
■ MARUTI AUTHORISED SERVICE STATIONS (MASSs) :	'A' CATEGORY MASSs (**MARKED) Free & paid Service, Major repairs & Accidental repairs 'B' CATEGORY MASSs (* MARKED) Free & paid Service & Major repairs 'C' CATEGORY MASSs (##MARKED) Free & paid Service & Minor repairs 'D' CATEGORY MASSs (#MARKED) Free Service & Minor repairs

NOTE : MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealers/Maruti Service Master/Maruti Service Zone for Warranty jobs.

REGIONAL OFFICES	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED PLOT NO. 1, NELSON MANDELA ROAD, VASANT KUNJ, NEW DELHI-110070 PH : (011) 46781000, 46150291	WEST UP, UTTARAKHAND, DELHI, GURGAON, FARIDABAD, NOIDA, GHAZIABAD, REWARI, MAHENDRAGARH, NORTH-UP
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED S.C.O. 39-40, SECTOR 8-C, MADHYA MARG, CHANDIGARH-160008 PH : (0172) 2780057, 2781352, 2540787	PUNJAB, CHANDIGARH, JAMMU & KASHMIR
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED G.F., B-1 BLOCK, PICUP BHAWAN, VIBHUTI KHAND, GOMTI NAGAR, LUCKNOW - 226010 PH : (0522) 2720931-34	PART OF U.P. AND UTTARAKHAND
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA-134109 PH : (0172) 2590056, 2580056	HARYANA, HIMACHAL PRADESH
REGIONAL OFFICE (NORTH-V) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, POOJA TOWER, 3 GOPALPURA BY-PASS, TONK ROAD, JAIPUR -302018 PH : 0141-5157000, 5118006 / 7	RAJASTHAN

SERVICE NETWORK (AS ON 01.04.2017)

REGIONAL OFFICES	AREA COVERED
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED L & T CHAMBERS, 4TH FLOOR, 16 CAMAC STREET, KOLKATA - 700 017 PH : (033) 22835252-54	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 401, 4TH FLOOR, ROHINI APARTMENT, OPPOSITE HOTEL APSARA, 56 CIRCULAR ROAD, NEAR LALPUR CHOWK, RANCHI, JHARKHAND-834001, PH : (0651) 2563931	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, ABOVE CITY MART SHOPPING MALL, 724, PEACE ENCLAVE, ULUBARI, GUWAHATI – 781 007, ASSAM PH.: (0361) 2734308/ 10/ 11/ 12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA
REGIONAL OFFICE (EAST-IV) MARUTI SUZUKI INDIA LIMITED Office No. 605, 606, 6th Floor, Utkal Signature, Pahal, NH-5, Bhubaneshwar - 752101 (Odisha), Ph: 0674-6751581	ODISHA, CHHATISGARH
REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED 602, MADHAVA BLDG., BANDRA KURLA COMPLEX, BANDRA (E), MUMBAI - 400 051 PH : (022) 2659 0165/0286/0290/0291 FAX : 26590285	MUMBAI, NAVI MUMBAI, THANE, RAIGAD, RATNAGIRI, SINDHUDURG & GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, NORTH BLOCK, SACRED WORLD WANOWARIE, PUNE-411040 PH : (020) 64002641 / 2 / 3 / 0 4	REST OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211, ISKON MALL, ABOVE STAR INDIA BAZAAR, SATELLITE ROAD, AHMEDABAD-380015 PH : (079) 40036660/40036671	GUJARAT , DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (WEST-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD, INDORE-452001 PH : (0731) 4069481, 4069382 FAX : 4069382	MADHYA PRADESH
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, CAPITAL TOWERS, 180, KODAMBAKKAM HIGH ROAD, NUNGAMBAKKAM, CHENNAI - 600 034 PH: (044) 28233050-53 FAX: (044) 28242059	TAMILNADU, PONDICHERRY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED 204, 2ND FLOOR, "EMBASSY CLASSIC", VITTAL MALLYA ROAD, BENGALURU-560001 PH. : (080) 22127384-85, 5112017-18 FAX : (080) 22484841	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWER, NH-47 BYPASS, PADIVATTOM, COCHIN-682024 PH. : (0484) 4088400	KERALA, LAKSHADWEEP
REGIONAL OFFICE (SOUTH-IV) MARUTI SUZUKI INDIA LIMITED MAHAVIR CHAMBERS, DOOR NO. 3-6-363 & 3-6-1/1, CHAMBER NO. 101 & 102, 1ST FLOOR, LIBERY SQUARE, HIMYATNAGAR, HYDERABAD PH : (040) 66729999	ANDHRA PRADESH, TELANGANA

DETAILS OF AREA OFFICES	
Area Office Location	A.O Address
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower Sanjay Palace, Agra-282001, Ph. : 0562-4052646, 47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor, Corporate Zone, Ashima Mall, Hoshangabod Road, Bhopal-462026, Madhya Pradesh, 0755 - 6051555
Calicut	Maruti Suzuki India Limited, 1st Floor, Central Arcade, Bye pass Road, Puthyara Calicut - 673 004, Kerala, +91 495 2723151
Coimbatore	Maruti Suzuki India Limited, A-203, 2nd Floor, Raheja Center, Avinashi Road, Coimbatore – 641018, (0422)-2242109
Dehradun	Maruti Suzuki India Limited, 70 Rajpur Road, Opp Madhuban Hotel, Dehradun - 248001, Uttarakhand, 0135-2740549
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, PH : 0836-4259447
Jammu	Maruti Suzuki India Limited, Area Office - N2, Holl No. 116, Fast Flour, A-2, South Block, Bahu Plaza, Jammu (J & K)
Ludhiana	Maruti Suzuki India Limited, Sco No.16/17, 4th Floor , Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Punjab, 0161-4649763, 4649765

SERVICE NETWORK (AS ON 01.04.2017)

DETAILS OF AREA OFFICES	
Area Office Location	A.O Address
Madurai	Maruti Suzuki India Limited, 3rd Floor, ADR Towers Kalavasal, Theni By-pass Road, Madurai - 625016, Ph.: 0452-4200203
Nagpur	Maruti Suzuki India Limited, Plot No. 244, 1st Floor, Narayani House, Hill Road, Dhasampeth Ext., Nagpur-440010, Ph.: 0712-2225808
Nashik	Maruti Suzuki India Limited, 2nd Floor, Rushiraj Towers, Gargapur Road, Nashik, PH : 0253-6698551,52
Patna	Maruti Suzuki India Limited, 538, AG Plaza, East Boring Canal Road Adj. St Johns School, Patna-800001 (Bihar), PH : 0612-2521145
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto Mall, Labhandi, Raipur - 492001 (Chhatisgarh), Ph: 0771-4039643
Surat	Maruti Suzuki India Limited, 304, 3rd Floor, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan, Surat, Gujarat - 395009
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazuthacaud, Trivandrum - 695010, PH: 0471-2322336
Visakhapatnam	Maruti Suzuki India Limited, #209, 2nd Floor, Dutt Island, Siripuram Junction, Visakhapatnam - 500003, PH: 0891-3078620

DEALER WORKSHOP (AS ON 01.04.2017)

ANDAMAN & NICOBAR

DIQLIPUR

1. AGENCY HOUSE (A & N ISLANDS) PVT. LTD.
(PU01-PU-01), MADHUPUR VILLAGE,TEHSIL
DIQLIPUR,NORTH ANDAMAN - 744202
PH :03192-271056.

PORTBLAIR

2. AGENCY HOUSE (A & N ISLANDS) PVT. LTD.
(E102-E1-02), NAYAGEN, PORTBLAIR - 744101
PH :3192-227104, 211682.
3. AGENCY HOUSE (A & N ISLANDS) PVT. LTD.
(E102-E1-01), GARACHRAMA, PORT BLAIR -
744105
PH :3192-251980, 253586, 211590.

RANGAT

4. AGENCY HOUSE (A & N ISLANDS) PVT. LTD.
(E102-FJ-03), NIMBUTULLA, PO RANGAT, DIST.
MIDDLE ANDMAN, - 744201
PH :3192-211546.

ANDHRA PRADESH

AMALAPURAM

5. S.B. MOTOR CORPORATION (BTS1-BTS-01),
#241/2B, BESIDE: BAPUJI PRIMARY SCHOOL
MAIN ROAD, OPP. RR NAGAR, BANDARULANKA,
AMALAPURAM, EAST GODAVARI (DIST) - 533201
PH :08856-98853173333.

ANAKAPALLE

6. JAYABHERI AUTOMOTIVES PVT LTD
(0N01-0N-01), SURVEY NO.822/1 & 2, NH-5
ROAD, ANAKAPALLE, DISTT.
VISHAKHAPATNAM. - 531001
PH :08294-7093575555.

ANANTAPUR

7. SRI DURGA AUTOMOBILES (1B01-1B-01),
17/377-A,GOOTY ROAD,ANANTAPUR - 515001
PH :08554-277958.

BHIMAVARAM

8. NOVELTY REDDY AND REDDY AUTOMOTIVES
(7M01-7M-01), NEAR BYEPASS ROAD,UNDI
ROAD,BHIMAVARAM - 534202
PH :0881-2765645.

BOBBILI

9. VARUN MOTORS PVT. LTD. (CAM1-CAM-01), D.
NO. 4-64, SURVEY NO. 219/8, VILLAGE –
MALLAMMAPETA, BESIDE GROWTH CENTRE,
BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA
PRADESH. - 535558
PH :08944-9885280772, 9885317344.

CHIRALA

10. JAYALAKSHMI AUTOMOTIVES PVT. LTD.
(G502-NT-04), 9-1-92, CHURCH ROAD,CHIRALA, -
523157
PH :8594-9703703353.

CHITTOOR

11. BHARGAVI AUTOMOBILES PVT LTD
(A801-1C-03), 22-241/A,KATTAMANCHI TIRUPATI
ROAD,CHITTOOR, - 517001
PH :8572-9848144772.

CUDDAPPAH

12. MSA MOTORS (C201-1D-03), K.T. BYE PASS
ROAD,CUDDPPAH,ANDHRA PRADESH, - 516001
PH :08562-645427.

ELURU

13. REDDY & REDDY MOTORS (1E01-1E-01), OLD
NH-5 ROAD,BESIDES C R REDDY WOMEN'S
COLLEFE OLD NH-5,ELURU, - 534001
PH :8812-221826.

GUDIVADA

14. VARUN MOTORS PVT. LTD. (2603-CL-02), D.NO.
1-621,AUTONAGER 1ST LANE,GUDIVADA -
521301
PH :08674-246244, +919885651383.

GUDUR

15. BHARGAVI AUTOMOTIBLES PVT. LTD.
(IS01-IS-01), SURVEY NO.1619/3A,GUDUR
BYPASS, GUDUR RURAL, GUDUR DISTT.
NELLORE, A.P. - 524101
PH :8624-252509.

GUNTUR

16. JAYALAKSHMI AUTOMOTIVES PVT. LTD.
(G502-G5-01), D-N-8-24-31,MANGALAGIRI
ROAD,GUNTUR - 522001
PH :0863-2241000.

HINDUPUR

17. SRI DURGA AUTOMOTIVES (1B01-36-02), PLOT
NO.83, NEAR RELIANCE PETROL BUNK, BYE
PASS ROAD, HINDUPUR - 515201
PH :8554-277958.

HYDERABAD

18. ADARSHA AUTOMOTIVES PVT. LTD.
(1014-10-02), H. NO. 8-64/1, RUDRA COLONY,
SHAMSHABAD, HYDERABAD. - 501218
PH :040-8142346633, 9985326633.

JAGGAIAHPETA

19. VARUN MOTORS PVT. LTD. (2603-PC-05), DOOR
NO. 2-20, MUTHYALAMMA GUDI STREET
JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA
DISTT. - 521175
PH :8652-281555.

JANGAREDDYGUDEM

20. REDDY & REDDY MOTORS (1E01-HQ-02), NEAR
R&B GUEST HOUSE,ELURU
ROAD,JANGAREDDYGUDEM, - 534447
PH :8821-9948829555.

KAKINADA

21. S B MOTORS (W701-W7-01), D. NO.
52-10-36/3,NEAR AMAR GHATI CENTER,KARAPA
ROAD, KAKINADA - 533001
PH :884-2352785.

KAVALI

22. BHARGAVI AUTOMOBILES PVT LTD
(A801-PF-05), KAVALI NELLORE,ANDHRA
PRADESH - 524201
PH :8626-9248702567.

KOTHEGUDAM

23. VARUN MOTORS PVT. LTD. (2603-HF-04), DOOR
NO. 5-35/4/B,LAKSHMIDAVI
PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM
- 507101
PH :0253-2351277779.

KURNOOL

24. MSA MOTORS (C201-C2-01), AUTO
NAGAR,INDUSTRIAL ESTATE, NH-7, KURNOOL
- 518004
PH :08518-254040, 251616.

MACHILIPATNAM

25. MITHRA AUTO AGENCIES PVT LTD
(2604-0K-04), NARASIMHA NAGAR,
MACHLIPATNAM, ANDHRA PRADESH - 521001
PH :8672-9848988312.

MADANAPALLI

26. BHARGAVI AUTOMOBILES PVT LIMITED
(AAT1-AAT-01), SURVEY NO.782, BASIKONDA
VILLAGE, MADANPALLI, CHITTOOR DISTT.
ANDHRA PRADESH - 524101
PH :8624-252509.

MADHURAWADA

27. JAYABHERI AUTOMOTIVES PVT LTD
(BQQ1-BQQ-01), PLOT NO. 5, SURVEY NO. 4/P,
KOMMADI ROAD, MADHURAWADA,
VISHAKAPATNAM, ANDHRA PRADESH - 530048
PH :0891-9849445639.

MARKAPURAM

28. JAYALAKSHMI AUTOMOTIVES PVT. LTD.
(CFF1-CFF-01), D. NO. 4-515/12, SURVEY NO.
1167, OPP. INDUSTRIAL ESTATE, ONGOLE
ROAD, MARKAPURAM, DISRT.-PRAKASAM,
ANDHRA PRADESH. - 523316
PH :8596-9848131133.

NARASARAOPET

29. JAYALAKSHMI AUTOMOTIVES PVT. LTD.
(G502-JT-03), NEAR RELIANCE PETROL PUMP
BUNK,VINUKONDA ROAD, NARASARAOPET,
GUNTUR, - 522603
PH :8647-9866844344.

NARSIPATNAM

30. JAYABHERI AUTOMOTIVES PVT. LTD.
(WT01-WT-01), OPP. RDO BUNGLOW, BANK
COLONY, VISAKHAPATNAM ROAD,
NARSIPATNAM - 531116
PH :958932-225111/226111.

NELLORE

31. BHARGAVI AUTOMOBILES PVT LTD
(A801-A8-01), D.NO.25/II/97 INDUSTRIAL
ESTATE, A.K. NAGAR, P.B.NO.18,
NELLORE(A.P.) - 524004
PH :0861-326226, 329927.
32. BHARGAVI AUTOMOBILES PVT LTD
(A801-A8-04), A2, INDUSTRIAL ESTATE,A.K.
NAGAR,NELLORE, - 524004
PH :861-6457369.

NUZVID

33. VARUN MOTORS PVT. LTD. (2603-CN-03),
BESIDE R T C BUS DEPOT.,OLD D M
OFFICE,VIJAYAWADA ROAD, NIZVID - 521201
PH :0866-2544444, 9885706800.

ONGOLE

34. JAYALAKSHMI AUTOMOTIVES (8Y01-8Y-02),
THROVAGUNTA COMPANY
CENTRE,NH-5,GUNTUR
ROAD,ONGOLE,PRAKASAM DISTRICT. - 523003
PH :8592-247167.

PALASA

35. JAYABHERI AUTOMOTIVES PVT. LTD.
(BWH1-BWH-01), SURVEY NO. 63 OF VILLAGE –
PURUSHOTTAPURAM, PALASA MANDAL,
KASIBUGGA MUNICIPALITY, DISTRICT –
SRIKAKULAM, ANDHRA PRADESH. - 532221
PH :08945-9849054442.

PENDURTHI

36. VARUN MOTORS PVT. LTD. (BAP1-BAP-01),
SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI
TO PENDURTHI HIGHWAY, NEAR BRIDGE,
PENDURTHI DISTT: VISAKAPATNAM - 530047
PH :0891-9885006651.

RAJAHMUNDRY

37. S.B. MOTOR CORPORATION (C501-C5-01),
OPP FCI
GOWDOWN,JAILROAD,LALACHERUVU,RAJAMU
NDRY - 533101
PH :0883-72410, 60249.

RAJAM

DEALER WORKSHOP (AS ON 01.04.2017)

38. VARUN MOTORS PVT. LTD. (BLJ1-BLJ-01), PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127
PH :08941-9703101166.

SRIKAKULAM

39. VARUN MOTORS PVT. LTD. (4603-W6-09), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001
PH :08942-220830.

SURYAPET

40. PAVAN MOTORS PVT. LTD (BLC1-BLC-01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213
PH :0864-800899995, 27502750.

TANUKU

41. NOVELTY REDDY & REDDY PVT LTD (BAR2-BAR-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211
PH :08819-9951440444.

TENALI

42. JAYALAKSHMI AUTOMOTIVES (PE01-PE-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002
PH :8644-226100,227100.

TIRUPATI

43. KOUNDINYA ENTERPRISES (N981-N9-01), 18-3-60,KT BY PASS ROAD,,TIRUPATI
PH :0877- 2233051, 2231047.

44. BHARGAVI AUTOMOBILES PVT LTD (A801-N9-02), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, - 517507
PH :877-64591111.

TUNI

45. SATTIBABU MOTORS (PVT) LTD. (KY01-KY-01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401
PH :08854-7661893888.

VIJAYAWADA

46. MITHRA AUTO AGENCIES PVT LTD (2604-26-01), 40-17-3,,PICHAlAH STREET,GANDHI COLONY,VIJAYAWADA - 520001
PH :0866-632283, 633068.

47. VARUN MOTORS PVT. LTD. (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008
PH :0866-2545053.

48. VARUN MOTORS PVT. LTD. (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY,VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102
PH :866-9885382444.

49. SANTOSH AUTOMOTORS PVT. LTD. (2607-26-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALLURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010
PH :0866-7799787969, 2552262.

VISAKHAPATNAM

50. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046
PH :0891-2514919, 9849445639.

51. VARUN MOTORS PVT. LTD. (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003
PH :0891-2525885.

52. VARUN MOTORS PVT. LTD. (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026
PH :0891-2513157.

53. VARUN MOTORS PVT. LTD. (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM, - 530007
PH :0891-2705375.

54. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH - 530018
PH :0891-2506837.

55. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-02), D.NO.51-17-2 , NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH) - 530013
PH :0891- 7799772272.

56. VARUN MOTORS PVT. LTD. (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007
PH :0891-9885313744.

57. VARUN MOTORS PVT. LTD. (4603-46-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE – DUPPITURU, MANDAL – ACHUTAPURAM, DISTRICT – VISHAKAPATNAM, ANDHRA PRADESH. - 531011
PH :3055550.

VIZAINAGARAM

58. VARUN MOTORS PVT. LTD. (4603-N8-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001
PH :8922-7799666998.

VIZIANAGARAM

59. JAYABHERI AUTOMOTIVES (N801-N8-01), PLOT NO.B-1,DOOR NO.8-32-1,SURVEY NO.108/12A & 109/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH - 535001
PH :08922 -255366,255377,8008333232.

ARUNACHAL PRADESH

ITANAGAR

60. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR
PH :0360-2212843.

61. BUISHI YADA MOTORS (7501-75-01), A' SECTOR, NAHARLAGUN, ARUNACHAL PRADESH. - 791110
PH :0360-245113, 245114.

62. BUISHI YADA MOTORS (7501-75-02), NH-52A, BANDERDEWA PAPUMPARA (DISTT), ARUNACHAL PRADESH, ITANAGAR - 791123
PH :0360-266382.

63. BUISHI YADA MOTORS (7501-75-04), MODEL VILLAGE, BEFORE GOVERNMENT HIGHER SECONDARY SCHOOL, NAHARLAGUN, ITANAGAR - 791110
PH :9436041437.

PASSIGHAT

64. BUISHI YADA MOTORS (7501-8A-03), PASSI GHAT BAZAR, PASSIGHAT, ARUNACHAL PRADESH - 791102
PH :368-9435082651/2224748.

ASSAM

BAIHATA CHARIALI

65. PALLAVI MOTORS (P) LTD (BNL1-BNL-01), DAG NO. 1042, PATTa NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381
PH :361-9864052488.

BARPETA

66. ROY AUTO ENGINEERING WORKS (7Z81-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD , WARD NO.-4, ASSAM
PH :03666-260343,262743.

67. BHARTI MOTORS (P) LTD (7N01-7Z-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313
PH :366-6260416.

BIJOYNAGAR

68. PODDAR CAR WORLD (IA01-IA-01), AT/PO - BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125
PH :3623-9854120396.

BOKAKHAT

69. ANAMIKA MOTORS (BTP1-BTP-01), OPP. JDSG COLLEGE, NH-37, A.T. ROAD, WARD NO.-1, BOKAKHAT DISTT. GOLAGHAT (ASSAM) - 786512
PH :03774-9435050938.

BONGAIGAON

70. BHARTI MOTORS (P) LTD (7N01-7N-01), CHAPAGURI ROAD, BONGAIGAON - 7833830
PH :3664-099541-56179/231580/9859978958.

DHEKIAJULI

71. RAMLAL DURGADUTT MOTORS PVT LTD (BRX1-BRX-01), DAG NO.242, K.P. PATTa NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110
PH :0361-9854258025.

DHEMAJI

72. SAIKIA AUTO PVT. LTD. (7P01-UD-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057
PH :3752-9957837538.

DIBRUGARH

73. JAY BEE AUTO AGENCIES PVT. LTD. (C101-C1-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001
PH :0373-2321018, 2329314.

DIGBOI

74. VISHAL CAR WORLD PVT. LTD. (BYD1-BYD-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA , ASSAM. - 786171
PH :3751-9435860000..

DULIAJAN

75. B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINIALI, DULIAJAN, PH :0374-2801255.

76. JAY BEE AUTO AGENCIES PVT. LTD. (ADA1-ADA-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602
PH :0374-8811098576.

GOALPARA

77. BHARATI MOTORS PVT. LTD. (YN01-YN-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301
PH :8761985554.

GOLAGHAT

DEALER WORKSHOP (AS ON 01.04.2017)

78. ANAMIKA MOTORS (J302-J3-01), N.H.-39, RANGAJAN, PO. MORANGI, DIST- GOLAGHAT - 785621
PH :03772-360901, 360947.

GUWAHATI

79. BIMAL AUTO AGENCY (0901-09-01), JHALUKBARI, GUWAHATI. - 781014
PH :0361-670335, 570137.
80. BIMAL AUTO AGENCY (0903-09-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021
PH :0361-98645025045/46.
81. PALLAVI MOTORS (P) LTD (0902-09-01), DAG NO. 1&2,NEXT TO DEPTT. OF FAMILY WELFARE,SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022
PH :361-2363191/92/93, 2360149, 2368980, 2360233.
82. PODDAR CAR WORLD PVT LTD (0904-09-01), HENGRABARI ,VIP ROAD,GUWAHATI - 781036
PH :0361-2334969, 71, 2334975.
83. BIMAL AUTO AGENCY (0901-09-02), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37,GUWAHATI - 781028
PH :0361-8486002903/902.
84. BIMAL AUTO AGENCY (0903-09-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005
PH :0361-2207322/9854057190.
85. MITTAL AUTOZONE (0906-09-01), NH-37, LALMATI, NEAR BHARAT PETROLIUM, GUWAHATI, ASSAM. - 781029
PH :0361-2309951.
86. MITTAL AUTOZONE (0906-09-02), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028
PH :0361-9864296666.
87. PALLAVI MOTORS (P) LTD (0902-09-02), DAG NO. 2201, PATTa NO. 237, VILLAGE – JYOTIKUCHI, MOUZA – BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. - 781034
PH :9864052488.
88. PODDAR CAR WORLD (0905-09-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029
PH :0361-7101714, 9435555853.
89. BIMAL AUTO AGENCY (0901-09-03), AECB ROAD, MAJHAR GALI, ROOP NAGAR, ULUBARI, GUWAHATI, ASSAM - 781007
PH :0361-9864074525.

HOJAI

90. RAMLAL DURGADUTT MOTORS PVT LTD (ARA1-ARA-01), KHATIYAN NO.: 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT – NAGAON, ASSAM - 782435
PH :03674-9707556868.

JAGI ROAD

91. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-RB-02), JAGIROAD,MORIGAON,NALAOW,ASSAM - 782410
PH :03678-9435569526.

JORHAT

92. ANAMIKA MOTORS (G901-G9-01), GARALI ROAD, RAJABARIE, JORHAT, ASSAM. - 785001
PH :0376-360901, 360947.

KARIMGANJ

93. JAIN UDYOG (6901-1S-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710
PH :3843-262084.

KHATKHATI

94. PODDAR CAR WORLD PVT. LTD. (CAZ1-CAZ-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG . - 782460
PH :9706010366.

MANGALDOI

95. PODDAR CAR WORLD (YW01-YW-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115
PH :0361- 9707152711.

MARGHERITA

96. VISHAL CAR WORLD PVT. LTD. (YR01-YR-01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181
PH :03751-220011.

NAGAON

97. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002
PH :0372-236111.

NALBARI

98. BIMAL AUTO AGENCY (9201-92-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335
PH :0364-220031.

NORTH LAKHIMPUR

99. SAIKIA AUTO PVT. LTD. (7P01-7P-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031
PH :3752-232272,232450.

100. SAIKIA AUTO PVT. LTD. (7P01-7P-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001
PH :03752-232272.

RANGIA

101. PODDAR CAR WORLD PVT. LTD. (6X01-6X-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354
PH :0361-9707015958.

SIBSAGAR

102. ANAMIKA MOTORS (G901-L9-02), CHEREKAPAR, B.G. ROAD, NEAR HOLY NAME SCHOOL, SIBSAGAR. - 785640
PH :03772-272231, 272251.

SILCHAR

103. JAIN UDYOG (6901-J2-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006
PH :03842-26061, 62.

SONAPUR

104. BIMAL AUTO AGENCY (AAQ1-AAQ-01), TEPESIA TINIALI, NH-37, SONAPUR, DIST- KAMRUP, ASSAM.
PH :9435101175.

TEZPUR

105. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154
PH :0361- 8724087940.

TINSUKIA

106. VISHAL CAR WORLD (J401-J4-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - 786183
PH :0374-2312572.

BIHAR

ARARIA

107. SEEMANCHAL MOTORS PVT. LTD. (O701-O7-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318
PH :06455-8797096012/7545830002.

ARRAH

108. PEARL CARS (VU01-VU-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301
PH :6182-9304685888.

BEGUSARAI

109. G S MOTORS (1U01-1U-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - 851101
PH :9204756206.

BETTIAH

110. SHREE GOPAL AUTO PVT. LTD. (O401-O4-01), BEETIAH - MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438
PH :6254-223050/9771486183.

BHAGALPUR

111. SEEMANCHAL MOTORS PVT. LTD. (G802-G8-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005
PH :0641-8797096012/8797096019.

BIHARSHARIF

112. REESHAV AUTOMOBILES (MG01-TG-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR - 803101
PH :7061295297.

BUXAR

113. PEARL CARS (VV01-VV-01), C/O DEVDHTRHA UPPOHYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101
PH :6183-8294634605/8294634602.

CHAPRA

114. REESHAV AUTOMOBILES (MG01-TH-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301
PH :9263637646.

DANAPUR

115. ALANKAR AUTO SALES & SERVICE (1504-NN-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, - 800018
PH :9386898458.

DARBHANGA

116. KRISHNA MOTORS (1V01-1V-01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - 846009
PH :9204552405.

117. KRISHNA MOTORS (1V01-1V-03), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - 846003
PH :9204552405.

GAYA

118. KARLO AUTOMOBILES PVT LTD (Y601-Y6-01), BODH GAYA, GAYA. - 824231
PH :631-016312200277, 09708231604.

GOPALGANJ

DEALER WORKSHOP (AS ON 01.04.2017)

119. SHREE GOPAL AUTO PVT. LTD. (O301-O3-01), NH-28, DANAPUR, TEHSIL-MANJAGARH,GOPALGANJ (BIHAR) - 800023
PH :06156-292290/9771486139.

HAJIPUR

120. REESHAV AUTOMOBILES (MG01-MG-01), KHATA 617 & KHASHRA 354/1605, NEAR RELJANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI). - 844101
PH :9263632163.

KATIHAR

121. SEEMANCHAL MOTORS PVT. LTD. (O601-O6-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSIA, KATIHAR PURNEA ROAD, KATIHAR - 854105
PH :6452-8797096021/8797096019.

KISHANGANJ

122. SEEMANCHAL MOTORS PVT. LTD. (PX01-PX-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA:KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101
PH :06456-233074/8797096043.

MOHANIA

123. PEARL CARS (VW01-VW-01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109
PH :6187-8294634632/8294634649.

MOTIHARI

124. RAJIV AUTOMOBILES PVT LTD (T401-FH-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401
PH :6252-241405, 9234609669.

MUZAFFARPUR

125. RAJIV AUTOMOBILES PVT LTD (T401-T4-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002
PH :0621-2272660/9910347908/9234609671.
126. RAJIV AUTOMOBILES PVT LTD (T401-T4-02), RAMDAYALU NAGAR, NEAR BMALANG STHAN, PATANA-MUZAFFERPUR HIGHWAY, - 842002
PH :7677773918/9234456810.

NAUGACHIA

127. SEEMANCHAL MOTORS PVT. LTD. (CFS1-CFS-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204
PH :8797096014, 8797096020.

NAWADA

128. REESHAV AUTOMOBILES (MG01-TJ-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110
PH :9263632156.

PATNA

129. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA
PH :0612-2265916,9334115999.
130. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. - 800013
PH :612-09304212119/9304217120.
131. VAU'S AUTOMOBILE (1503-15-01), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA, - 800014
PH :9771446012.
132. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001
PH :612-2528415/ 9934020200.

PURNEA

133. SEEMANCHAL MOTORS PVT. LTD. (6V01-6V-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326
PH :06454-232229/87979096014.

SAHARSA

134. G S MOTORS (AAP1-AAP-02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201
PH :9263638456.

SAMASTIPUR

135. KRISHNA MOTORS (1W01-1W-01), KHEsRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101
PH :9204061641.

SASARAM

136. PEARL CARS (1X01-1X-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115
PH :6184-8294634602/8294634605.

SITAMARHI

137. RAJIV AUTOMOBILES PVT. LTD. (EO01-EO-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. - 843301
PH :9234609671.

SIWAN

138. SHREE GOPAL AUTO PVT LTD (O501-O5-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236
PH :6154-9771486144/9771486132.

CHANDIGARH

CHANDIGARH

139. AUTOPACE NETWORK (P) LTD (0705-07-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002
PH :9878422201.

140. MODERN AUTOMOBILES (0702-07-01), 4 M.W. INDL AREA, CHANDIGARH - 160002
PH :01072-650555, 656333.
141. C M AUTOSALES PVT. LTD (0706-07-01), PLOT NO.130, PHASE-1, INDUSTRIAL AREA, CHANDIGARH - 160029
PH :0172-5200250.
142. STAN AUTOS PVT LTD (L104-07-03), B-42, INDUSTRIAL AREA, PHASE-II, CHANDIGARH - 160002
PH :0172-5003700.

CHANDIGARH (U.T)

CHANDIGARH

143. TRICITY AUTOS (9M01-07-02), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH - 160002
PH :0172-4222222.

CHHATTISGARH

AMBIKAPUR

144. MAHAMAYA AUTOCARS PVT. LTD. (AE01-AE-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001
PH :7774-231852, 53.

BALODA BAZAAR

145. SKY AUTOMOBILES (5001-GJ-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332
PH :7727-222606.

BEMETARA

146. GANAPATI MOTORS (CBC1-CBC-01), BHILAI ROAD, OPP. OF GOVT COLLEGE BEMETERA (CHHATTISGARH) - 491335
PH :9644264450.

BHATAPARA

147. SPARSH AUTOMOBILES (BBJ1-BBJ-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118
PH :9926626662.

BHILAI

148. GANAPATI MOTORS (8303-83-03), R 17, INDUSTRIAL AREA, NANDINI ROAD, CHAVANI ROAD, BHILAI. - 490026
PH :788-4030011, 4075000.

BILASPUR

149. SATYA AUTOMOBILES (C301-C3-03), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001
PH :7752-645048, 252024.

DHAMTARI

150. SKY AUTOMOBILES (7V01-7V-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009
PH :8889998612.

DURG

151. GANAPATI MOTORS (7W02-7W-01), OPP JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, C. GARH - 491001
PH :788-9826643000.

QARIABAND

152. SPARSH AUTOMOBILES (CCH1-CCH-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032
PH :9669638883.

JAGDALPUR

153. SKY AUTOMOBILES (EC01-EC-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001
PH :07782-231500/231498.

JANJIR

154. SATYA AUTOMOBILES (C301-9N-02), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJIR - 495668
PH :07817-9981260403.

KANKER

155. SKY AUTOMOBILES (5001-KG-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER , DISTRICT – KANKER, CHHATTISGARH - 494334
PH :07722-233111.

KAWARDHA

156. GANAPATI MOTORS (DI01-DI-01), NEAR KRISHI UPAJ MANDI, BILASPUR - KAWARDHA ROAD, KAWARDHA (DISTT - KABEERDHAM), CHHATTISGARH - 491995
PH :07741-275591.

KORBA

157. SATYA AUTOMOBILES (U701-U7-03), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681
PH :07759-228167, 228168, 228169.

MAHASAMUND

158. SPARSH AUTOMOBILES (5002-9P-02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND.
PH :7723-224880.

MANENDRAGARH

159. MAHAMAYA AUTOCARS PVT. LTD. (AE01-BCE-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442
PH :8817282064.

MUNGELI

160. SATYA AUTOMOBILES PVT LTD. (BLE1-BLE-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468
PH :9981266667, 08.09.

PATHALGAON

DEALER WORKSHOP (AS ON 01.04.2017)

161. MAHAMAYA AUTOCARS PVT. LTD.
(BXO1-BXO-01), KHASRA NO. 567/2,
PHATALGAON, DISTRICT – JASPUR,
CHHATTISGARH. - 496118
PH :8889955558.

PITHORA

162. SPARSH AUTOMOBILES (CCG1-CCG-01), PLOT
NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD,
PITHORA, CHHATTISGARH. - 761008
PH :9009645552.

RAIGARH

163. SHAKTI AUTOMOBILES (7Y81-7Y-01), ORRISSA
ROAD, KABIR CHOWK, BANJHIPALI, RAIGARH,
C.GARH
PH :930006496.

164. SATYA AUTOMOBILES (7Y02-7Y-01), JINDAL
ROAD, RAIGARH - 496001
PH :07762-228177,215810.

RAIPUR

165. SKY AUTOMOBILES (5001-50-01), G.E.ROAD,
MOHABA BAZAR, RAIPUR. - 492010
PH :0771-4214000.

166. SKY AUTOMOBILES (5001-50-02), K.K. ROAD,
MOUDHAPARA, RAIPUR. - 492001
PH :0771-4019000.

167. SPARSH AUTOMOBILES (5002-50-01),
PACHPAD NAKA, OPP. DUTTA DRY CLEANER,
DHAMKARI, JAGDALPUR ROAD, RAIPUR. -
492001
PH :0771-4222222.

168. SKY AUTOMOBILES (5001-50-07), ADJOINING
WALLFORT CITY, BHATGAON, RING ROAD NO.
2, RAIPUR, CHHATTISGARH. - 492013
PH :9425204051.

169. SKY AUTOMOBILES (5001-50-05), NEAR R.K.
MALL, KOTA ROAD, RAIPUR - 492001
PH :0771-4032505.

170. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR
ROAD, TELEBANDHA, RAIPUR (C.G.) - 492006
PH :0771-4207000.

171. SPARSH AUTOMOBILES (5002-50-04), OPP.
UNION BANK, MAIN ROAD, PANDRI, RAIPUR -
492004
PH :0771-4222213.

172. SPARSH AUTOMOBILES (5002-50-05), PLOT - 31,
INDUSTRIAL ESTATE, OPP MAHESH COLD
STORAGE, BHANPURI, RAIPUR
PH :9926626662.

RAJIM

173. SPARSH AUTOMOBILES (5002-MO-03), RAIPUR
ROAD, NEAR AMMANI PETROL PUMP,
NAYAPARA, RAJIM. - 493881
PH :7701-234556.

RAJNANDGAON

174. GANAPATI MOTORS (8303-LQ-04), NEAR
HANUMAN TEMPLE, GRAM MANKI, NH-6,
RAJNANDGAON. - 491441
PH :7744-291721.

SARAIPALI

175. SKY AUTOMOBILES PVT. LTD. (BUF1-BUF-01),
KHASRA NO.482/5 AND 482/6, RAIPUR ROAD,
SARAIPALI, DIST-MASAMUND, SARAIPALI -
493558
PH :7725-4030011, 4075000.

SARANGARH

176. SATYA AUTOMOBILES PVT LTD.
(BUC1-BUC-01), KASRA NO. 71/4, 73/2, 74/2, 75/1
AND 76/2, SARANGARH BIKAS KHAND,
SARANGARH, DISTT. RAIGARH. - 733751
PH :9981266667,08.09.

DADRA & NAGAR HAVELI

SILVASSA

177. KATARIA AUTOMOBILES PVT. LTD
(ED01-ED-01), NEAR ATHAL CHAR
RASTA,DADAR & NAGAR HAVELI, SILVASSA -
396230
PH :0260
-2650057/56.

DAMAN & DIU

DAMAN

178. KATARIA AUTOMOBILES PVT. LTD (0104-98-08),
NEAR AKASWANI CENTER, RINGANWADA, NANI
DAMAN , DAMAN UNION TERRITORY - 396210
PH :0260-8866002/499/2244002.

DELHI

DELHI

179. J.J IMPEX (MARUTI SERVICE MASTERS)
(0883-08-03), PLOT NO. 9, SSI INDUSTRIAL
ESTATE,G.T. KARNAL ROAD, OPP JAHANGIR
PURI,NEAR KDR WOOL FACTORY,DELHI -
110033
PH :011-40715500, 40715501.

180. J.J IMPEX (MARUTI SERVICE MASTERS)
(0883-08-01), F-39,OKHLA INDUSTRIAL
AREA,PHASE-II,NEW DELHI - 110020
PH :011-41612194, 40685500.

181. MARUTI SALES & SERVICE(DELHI) (0810-08-01),
C-119, INDUSTRIAL AREA PHASE-I, NARAINA,
NEW DELHI - 110028
PH :011-45541113.

182. A M AUTOMOBILES (A UNIT OF BLUE BIRD
ENTERPRISES) (0891-08-01), 189-91,
,LAWRANCE ROAD,,DELHI
PH :011-48280000.

183. GALAXY AUTOMOBILES (0881-08-01), 8
INDUSTRIAL AREA,TILAK NAGAR,NEW DELHI,
PH :011-43276666.

184. AAA VEHICLEADES PVT. LTD. (08B4-08-01),
B-244,OKHLA,PHASE-1,NEW DELHI, - 110020
PH :011-46664888-46664999.

185. BAGGA LINK MOTORS PVT LTD. (0811-08-01),
395 PATPAR GANJ INDL.
AREA,PATPARGANJ,NEW DELHI - 110092
PH :011-46488830, 46488831.

186. BAGGA LINK MOTORS PVT LTD. (0811-08-02),
LINK ROAD,(NEAR BAGGA PETROL
PUMP),KAROL BAGH,NEW DELHI - 110005
PH :011-23524646, 23522626.

187. COMPETENT AUTOMOBILES CO LTD
(0806-08-01), 895/C-8,NEAR JAIN MANDIR DADA
BARI,MEHRAULI,NEW DELHI - 110030
PH :011-47724700, 47724707.

188. COMPETENT AUTOMOBILES CO LTD
(0806-08-03), PLOT NO.3,GAZIPUR,DELHI, -
110096
PH :011-45300000.

189. D.D. MOTORS (08B2-08-01), A-1 UDYOG
VIHAR,NEW ROHTAK
ROAD,PEERAGARHI,DELHI - 110041
PH :011-25963535, 48616500.

190. D.D. MOTORS (0813-08-01), A-100
MAYAPURI,PHASE-II,NEW DELHI - 110064
PH :011-41845000, 49305232.

191. D.D. MOTORS (08A3-08-01), 5,
WAZIRPUR,INDUSTRIAL AREA,ADJACENT TO
WAZIRPUR DEPOT,RING ROAD, NEW DELHI -
110034
PH :011-27153996-99, 27151466-67.

192. KRISH AUTOMOTORS PVT. LTD. (08C1-08-01),
PLOT NO.9, SSI INDUSTRIAL ESTATE, GT
KARNAL ROAD, NEW DELHI. - 110063
PH :011-43288888.

193. MAGIC AUTO PVT. LTD. (0888-08-01),
A-93,PHASE-2,MAYAPURI INDL AREA,DELHI -
110064
PH :011-41847777.

194. MAGIC AUTO PVT. LTD. (08B7-08-01), PLOT NO.
68/3,MOTINAGAR,NEW DELHI, - 110015
PH :011-43777777, 43777721.

195. MAGIC AUTO PVT. LTD. (08B7-08-02), PLOT NO.
: B-7, G.T. KARNAL ROAD, DELHI, - 110033
PH :011-45977777.

196. MARKETING TIMES AUTOMOBILES PVT LTD
(08B7-08-01), 18, OKHLA INDUSTRIAL ESTATE,
PHASE-3, NEW DELHI - 110020
PH :011-40999999, 40999904.

197. RANA MOTORS PVT LTD (08A1-08-02),
C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW
DELHI - 110020
PH :011-41707777.

198. ROHAN MOTORS LTD. (0886-08-01), F-9/B-1,
MOHAN COOPERATIVE INDUSTRIAL ESTATE,
MATHURA ROAD, DELHI - 110044
PH :011-40567900, 41679252-259.

199. SAYA AUTOMOBILES PVT.LTD. (0808-08-03), A
21-22, G.T.KARNAL ROAD, NEW DELHI - 110033
PH :011-47088888.

200. T.R. SAWHNEY MOTORS PVT LTD (0819-08-01),
33 & 34, HARICHAND MELARAM COMPLEX,
EAST GOKULPUR, WAZIRABAD ROAD, DELHI -
110094
PH :011-71115333.

201. T.R. SAWHNEY MOTORS PVT LTD (0819-08-02),
B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR
18, BADLI, NEW DELHI - 110042
PH :011-71118333.

202. T.R. SAWHNEY MOTORS PVT LTD (0819-08-04),
PLOT NO.-508, FUNCTIONAL INDUSTRIAL
ESTATE, PATPARGANJ - 110092
PH :011-9873851333.

203. T.R. SAWHNEY MOTORS PVT LTD (08C3-08-01),
PLOT NO. -A/191, OKHLA PHASE-1, DELHI -
110020
PH :011-71119333.

204. SAYA AUTOMOBILES (0808-08-2B), KHASRA
NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA
HARGOVIND SINGH,SIRAS PUR BADLI,DELHI -
110033
PH :011-27731325, 27731856.

205. COMPETENT AUTOMOBILES CO. LTD.
(0806-08-05), B-83 MAYAPURI PHASE I, NEW
DELHI - 110015
PH :011-47268980.

206. BAGGA LINK MOTORS PVT LTD. (0811-08-03),
PLOT NO.4,6,8,10 NEAR FORTIS HOSPITAL,
OPPOSITE NIRULAS, BABA POTERY
COMPOUND, ARUNA ASAF ALI ROAD, VASANT
KUNJ, NEW DELHI - 110070
PH :011-45688888, 45688811.

207. RANA MOTORS PVT LTD (08A1-08-04), B-6/6,
OKHLA INDUSTRIAL AREA PHASE-II, NEW
DELHI - 110020
PH :011-40877777, 26389930.

208. COMPETENT AUTOMOBILES (0806-08-06), 14,
SHIVAJI MARG, NAGAFGARH ROAD, NEW
DELHI
PH :011-8377007980/81/02.

209. RANA MOTORS PVT LTD (08A1-08-05), A-8,
RAJASTHANI UDYOG NAGAR, NEAR AZADPUR
FRUIT MARKET, G.T. KARNAL ROAD, OPP.
METRO PILLAR NO.119, DELHI. - 110033
PH :011-41609999, 42474444.

210. MAGIC AUTO PVT. LTD. (08B8-08-01), KHASRA
NO. 220 & 248, VILLAGE-DHUL SIRAS,
SECTOR-24, DWARKA NEW DELHI. - 110077
PH :9910445501, 9818555669.

211. KRISH AUTOMOTORS PVT. LTD. (08A9-08-03),
A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. -
110052
PH :011-42020000, 9910114255.

DEALER WORKSHOP (AS ON 01.04.2017)

212. T.R. SAWHNEY MOTORS PVT LTD (08D2-08-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064
PH :011-71119333, 9999049337.
213. D.D. MOTORS (0813-08-05), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015
PH -999903888.
214. MAGIC AUTO PVT. LTD. (08D5-08-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092
PH :011-9818741741.
215. DD MOTORS (0813-08-06), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. - 110043
PH :011-9999127840/9999127947.
216. PREM MOTORS PVT. LTD. (08D4-08-01), KH. NO.804/2, MAHIPALPUR MATA CHOWK, DELHI - 110037
PH :011-42380000.
217. AAA VEHICLEADES PVT. LTD. (08B9-08-03), VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041
PH :011-66118888.

GOA

BICHOLIM

218. SAI SERVICE PVT. LTD. (BHN1-BHN-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529
PH :0832-2385500.

CANACONA

219. CHOWGULE INDUSTRIES PVT. LTD. (IT01-IT-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREEESTAL, CANCONA, SOUTH GOA - 403702
PH :0832-2633010.

CUNCOLIM

220. SAI SERVICE PVT. LTD. (3402-AAO-06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCONAMODDI, CUNCOLIM, SOUTH GOA - 403703
PH :0832-2763062, 2763063.

DHARBANDORA

221. CHOWGULE INDUSTRIES PVT. LTD. (3408-GO-07), AT- KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401
PH :0832-2345221.

MAPUSA

222. CHOWGULE INDUSTRIES PVT. LTD. (3408-8Z-03), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE,KARASWADA, MAPUSA,GOA - 403507
PH :0832-2258000/5/6.

223. SAI SERVICE PVT. LTD. (3402-8Z-05), D-2/8,MAPUSA INDUSTRIAL ESTATE,MAPUSA, GOA. - 403507
PH :0832-2267000.

MARGAO

224. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602
PH :0832-2749100,2749135,169,180,741237, 39.
225. SAI POINT CARS PVT LTD (3409-1Y-01), H.NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN,SALCETE ,GOA - 403722
PH :0832-2746700/2858899.
226. SAI SERVICE PVT. LTD. (3402-1Y-02), SURVEY NO. 212/4,VILLAGE - VERNA,TAL : SALCETE ,NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718
PH :0832-2883000, 2791195,791192-96.
227. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-08), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALCETE SOUTH GOA, GOA - 403722
PH :0832-2782400.

PANAJI

228. CHOWGULE INDUSTRIES PVT. LTD. (3408-P1-02), D.B BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001
PH :0832-2433000/2.
229. SAI SERVICE PVT. LTD. (3402-P1-01), SURVEY NO: 36/1,PENHA DE FRANCE,TAL : BARDEZ, ALTO PCRVORIM,GOA - 403501
PH :0832 -2419200, 2414324,412084.
230. SAI SERVICE PVT. LTD. (3402-P1-07), SHOP NO. 14, DUKLE HEAVEN, ST. INEZ, PANAJI, NORTH GOA - 403001
PH :0832-22229222/2225222.

PONDA

231. SAI SERVICE PVT. LTD. (3402-34-03), OFF PANJIM HIGHWAY,PONDA,GOA, - 403401
PH :0832-2324106, 2311499, 2324120.

SANVORDEM

232. CHOWGULE INDUSTRIES PVT. LTD. (BTK1-BTK-01), SURVEY NO. 4, SUBDIVISION-3, VILLAGE – CACORA, TALUKA – CURCHOREM, SANVORDEM, DIST. – SOUTH GOA, GOA. - 403706
PH :8322652300.

SATTARI

233. CHOWGULE INDUSTRIES PVT. LTD. (3408-BOP-10), SURVEY NO. 60, SUB DIV NO. 05, VILLAGE ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA - 403505
PH :0832-6410187.

TALEIGAON

234. CHOWGULE INDUSTRIES PVT. LTD. (3408-NP-06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON, - 403001
PH :0832-2431799,2231217.

VASCO

235. SAI SERVICE PVT. LTD. (3402-CP-04), NEXT TO SHIKALIM CHURCH,SHIKALIM,VASCO,GOA - 403802
PH :0832-2542581/2526008/2526000/9850559425,2414 327.
236. CHOWGULE INDUSTRIES PVT. LTD. (3408-CP-09), OPP BHARAMASTAL TEMPLE, PATRONG BAINA, VASCO,GOA - 403802
PH :0832-2540121/833540131.

GUJARAT

AHMEDABAD

237. KIRAN MOTORS LIMITED (0102-01-04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060
PH :079-65457555.
238. KATARIA AUTOMOBILES PVT. LTD (0104-01-01), D/8 BEHIND ESI HOSPITAL,OUTSIDE DARIAPUR DARWAJA,AHMEDABAD - 380016
PH :079-22174053/54.
239. KATARIA AUTOMOBILES PVT. LTD (0104-01-05), NEAR KOKHRA BRIDGE,MANINAGAR - 380008
PH :079-22160571/72.
240. KATARIA AUTOMOBILES PVT. LTD (0110-01-01), BEHIND ADANAL PUMP, NEAR MAKARBA CROSSING, MAKARBA,SG HIGHWAY - 380051
PH :079-30112333 / 30112312.
241. KIRAN MOTORS LIMITED (0102-01-01), SARKHEJ - GANDHINAGAR HIGHWAY,OPP. RAJPATH CLUB,AHMEDBAD - 380054
PH :0272-6740955, 67.
242. KIRAN MOTORS LIMITED (0102-01-02), BEHIND L&T GODOWN,SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210
PH :079-26891863, 26891009, 65459555, 65228555, 65229555..
243. KIRAN MOTORS LIMITED (0102-01-03), BASEMENT, RIVERA ARCADE,NR. AUDA GARDEN, PRAHLADNAGAR, 100FT RING ROAD,SATELLITE, AHMEDABAD - 390015
PH :079-26924777,26927333.

244. POPULAR WHEELERS (INDIA) PVT. LTD. (0105-01-01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443
PH :079-61903232.
245. POPULAR WHEELERS (INDIA) PVT. LTD. (0111-01-01), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA,AHMEDABAD - 380054
PH :079-65058111.
246. UDAY AUTOLINK (0113-01-01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT - 382430
PH :079-31927070.
247. NANDA AUTOMOBILES (0114-01-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLAI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405
PH :079-8866558787 / 8460088883.
248. STARLINE CARS (P) LTD (0115-01-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330
PH :079-29701051/53.
249. KIRAN MOTORS (0112-01-02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330
PH :079-60020555/60021555.
250. POPULAR WHEELERS (INDIA) PVT. LTD. (0109-01-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. - 380007
PH :079-30491101, 02.
251. ATUL MOTORS PVT. LTD. (0116-01-01), PLOT NO. 116, BOPAL – AMBIL ROAD, BOPAL , AHMEDABAD, DISTRICT – AHMEDABAD, GUJARAT. - 380058
PH :079-61993300.
252. KIRAN MOTORS LIMITED (0112-01-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005
PH :079-65054555 / 575.

AMOD

253. RAVIRATNA MOTORS (F801-ZE-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110
PH :9687691106.

AMRELI

254. ATUL MOTORS (9E01-9E-01), LATHI BY PASS ROAD, AMRELI, GUJARAT. - 365601
PH :02792-8140909098.

ANAND

DEALER WORKSHOP (AS ON 01.04.2017)

255. AMAR CARS PVT LTD (F702-F7-01), JANTHA CROSSING,SOJITRA ROAD,ANAND - 388121
PH :02692-229980, 229981.

ANKALESHWAR

256. RAVIRATNA MOTORS (P901-P9-01), PLOT NO. 624/2/BA, GIDC, VALIA ROAD, ANKLESHWAR - 393002
PH :02646-225132/28.

BARDOLI

257. KATARIA AUTOMOBILES PVT. LTD. (Q106-Q1-02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310
PH :922803307/9228004697/02622-302222.
258. DHRU MOTORS (4002-Q1-02), G.I.D.C.SURAT BARDOLI ROAD,BARDOLI, - 394601
PH :02622-9825413113/9879104454.

BARAJA

259. KATARIA AUTOMOBILES PVT. LTD. (BAN1-BAN-01), 5/6/7, ADITYA COMPLEX NATIONAL HIGHWAY-8, BAREJA , TALUKA – DASKROI, DISTRICT – AHMEDABAD, GUJARAT - 382425
PH :079-7046079997.

BARWALA

260. UDAY AUTOLINK PVT. LTD. (I401-I4-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450
PH :7567449999.

BAVLA

261. KATARIA AUTOMOBILES PVT. LTD (0104-RX-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220
PH :02714-231250.

BHACHAU

262. K.D. MOTORS (P501-JP-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140
PH :02837-223402.

BHARUCH

263. RAVIRATNA MOTORS (F801-F8-01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011
PH :02642-233506, 507, 504.

BHAVNAGAR

264. ETERNAL MOTORS PVT LTD (C901-C9-01), 14/1 & 2 GIDC,BEHIND S.T.WORKSHOP,CHITRA,BHAVNAGAR - 364004
PH :9227893042, 44.

265. ETERNAL MOTORS PVT LTD (C901-C9-02), PLOT NO. 1858/A-2,OPP GOLIBAR HANUMAN MANDIR, BEHIND GAUSHALA, RUPANI CIRCLE, BHAVNAGAR - 364002
PH :0278-2562462, 9228007221.

266. ETERNAL MOTORS PVT. LTD. (C901-C9-04), 6/8 & 11 GIDC, BHAVNAGAR - RAJKOT HIGHWAY, CHITRA, BHAVNAGAR (GUJARAT) - 364004
PH :0278-9228007215, 9227893040.

267. ETERNAL MOTORS PVT LTD (C901-C9-05), PLOT NO.29, SURVEY NO.37/1 & 37/2 NEAR TALAJA OCTROI CIRCLE, BESIDE INDIAN OIL PUMP, TALAJA ROAD, ADHEWADA, BHAVNAGAR, DISTT: BHAVNAGAR, GUJARAT - 364002
PH :0278-9099091926, 9227893036.

BHUJ

268. K.D. MOTORS (P501-P5-01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , BHUJ,GUJARAT - 370001
PH :2832-02832-232534/5.

BODELI

269. KIRAN MOTORS LIMITED (0R01-0R-01), OPP.NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA: SANKHEDA,VADODARA - 391135
PH :02665-222223 / 222224.

BORSAD

270. AMAR CARS PVT LTD (BJM1-BJM-01), BORSAD – TARAPUR HIGHWAY, BORSAD , DISTRICT – ANAND, GUJARAT - 388540
PH :0265-9586477744.

BOTAD

271. ETERNAL MOTORS PVT LTD (C901-AP-03), OPP.MULTIPLEX CINEMA,YOGI NAGAR,PALIYAD ROAD,BOTAD - 400092
PH :02849-8511118832, 9099095344.

CHOTILA

272. DREAM VEHICLES PVT. LTD. (CF11-CFI-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO – CHOTILA, DISTRICT – SURENDRANAGAR, GUJARAT. - 363520
PH :82380000979.

DABHOI

273. KATARIA AUTOMOBILES (UU01-UU-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110
PH :02663-255311.

DAHOD

274. R B CARS PVT. LTD. (2C01-PL-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151
PH :02673 -244307.

DEESA

275. TANU MOTORS PVT. LTD. (Q801-UQ-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535
PH :02744-270499.

DEHGAM

276. NANDA AUTOMOBILES (2B01-NR-03), NEAR UMIYA MATAJI TEMPLE,COLLEGE ROAD,AHMEDABAD ROAD, DEHGAM - 382305
PH :02716-234567.

DEVGADH BARIA

277. R B CARS PVT. LTD. (2C01-AOA-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380
PH :0265-2771122.

DHARAMPUR

278. KATARIA AUTOMOBILES PVT. LTD. (BSK1-BSK-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050
PH :02633-240600.

DHARI

279. ATUL MOTORS PVT. LTD. (GG01-GG-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640
PH :0281-2462779, 6699000, 9824200001, 7046233352.

DHRANGADHRA

280. DREAM VEHICLES PVT. LTD. (IM01-IM-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310
PH :2754-281234.

GANDHI NAGAR

281. NANDA AUTOMOBILES (2B01-2B-01), 1003,SECTOR-28,GANDHI NAGAR - 382028
PH :079-23212692 / 93 / 94.

GANDHIDHAM

282. B M AUTOLINK (7702-77-01), EAST OF PLOT NO. 30-35,NATIONAL HIGHWAY, GANDHIDHAM - 370201
PH :02836-223330.
283. B M AUTOLINK (7702-77-03), SURVEY NO.129/26 P. GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110
PH :97272725004.

GODHRA

284. R B CARS PVT. LTD. (2C01-2C-01), PLOT NO. 112/11.,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001
PH :02672-265306, 265307, 365308.
285. R B CARS PVT. LTD. (2C01-2C-04), GODHRA -LUNAWADA ROAD, GODHRA, DISTRICT: PANCHMAHAL - 389001
PH :02672-262749.

GONDAL

286. ATUL MOTORS (PVT) LTD (5503-AD-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY,GONDAL - 360311
PH :02825-294495.

HALOL

287. R B CARS PVT. LTD. (BKC1-BKC-01), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350
PH :02678-220201.

HALVAD

288. DREAM VEHICLES PVT. LTD. (GX01-GX-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330
PH :02758-291409.

HIMMATNAGAR

289. KIRAN MOTORS LIMITED (P601-P6-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001
PH :02772- 9824576711.

IDER

290. KIRAN MOTORS LIMITED (UX01-UX-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430
PH :8155994111.

JAMNAGAR

291. ATUL MOTORS (PVT) LTD (F401-F4-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001
PH :0288-3041001.
292. ATUL MOTORS (PVT) LTD (F401-F4-04), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002
PH :0288-2550251.

JASDAN

293. ATUL MOTORS PVT. LTD. (5503-OB-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050
PH :02821-291222 7046299952.

DEALER WORKSHOP (AS ON 01.04.2017)

JETPUR

294. PERFECT AUTO SERVICES (PK01-PK-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370
PH : (02823)-9978998806.

JUNAGADH

295. PERFECT AUTO SERVICES (5502-K8-06), SURVEY NO.45/1, PLOT NO.214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001
PH :9879518052.

KADI

296. STARLINE CARS (P) LTD (D101-UR-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715
PH :02764-241200.

KALOL

297. NANDA AUTOMOBILES (2B01-FW-02), PLOT NO. - 162-168, GIDC,KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028
PH :02764-220781 / 82 / 83.

KARJAN

298. AMAR CARS PVT LTD (UZ01-UZ-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) - 391210
PH :0265-2458282/2458585.

KHAMBHAT

299. AMAR CARS PVT LTD (BNF1-BNF-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620
PH :0265-9909960706.

KIM

300. KATARIA AUTOMOBILES (UW01-UW-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110
PH :02621 -3081240/251,235555.

LIMDDI

301. DREAM VEHICLES PVT. LTD. (BSG1-BSG-01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421
PH :02758-261262.

LUNAWADA

302. R B CARS PVT. LTD. (BYN1-BYN-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA, TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230
PH :9879126981, 9825967139 9586746703.

MAHESANA

303. STARLINE CARS (P) LTD (D101-D1-01), NAGALPUR HIGHWAY,MAHESANA , GUJRAT - 384002
PH :02762-255454 & 231707.

MAHUVA

304. ETERNAL MOTORS PVT. LTD. (IV01-IV-01), VIJAY - PARTH COMPLEX, BANDAR ROAD, MAHUVA(GUJARAT) - 364290
PH :02844-226226 / 9227893041.

MANDAL

305. KIRAN MOTORS (IW01-IW-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , Di: AHMEDABAD, GUJARAT. - 382130
PH :02715-9408803925.

MANDVI

306. K.D.MOTORS (UY01-UY-01), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465
PH :02834-295100 / 01.

MANSA

307. NANDA AUTOMOBILES (2B01-0L-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845
PH :9727921000.

MEHSANA

308. TANU MOTORS PVT. LTD. (Q801-D1-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002
PH :02762-291102, 291103, 291104.

METODA

309. ATUL MOTORS PVT. LTD. (5503-BLW-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021
PH :9924688774.

MODASA

310. KIRAN MOTORS LIMITED (P601-CR-02), SHAMLAL JI ROAD, SABARKANTHA DIST., MODASA - 383315
PH :2774- 8155995111.

MORBI

311. PERFECT AUTO SERVICES (5502-X5-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI , TEHSIL-MORBI, DISTT-.MORBI, GUJARAT. - 363641
PH :9879518052, 9099058044 9925199569.

MOTI KHAVADI

312. ATUL MOTORS (PVT) LTD (AAU1-AAU-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST - JAMNAGAR, GUJARAT. - 361140
PH :0288-2846015.

MUNDRA

313. B M AUTOLINK (7702-AJ-02), PRAGPAR ROAD,MUNDRA,DISTRICT-KUTCH, GUJARAT. - 370421
PH :02838-296020.

NADIAD

314. AMAR CARS PVT LTD (F702-P7-02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370
PH :0268-2587981, 2587980.

NAVSARI

315. KATARIA AUTOMOBILES PVT. LTD (Q701-Q7-01), PLOT NO.-891, OPP PAUVA MILL, NH-8,NEAR GANESH SISODRA CHOKDI,GANESH SISODIA NAVSARI, GUJRAT - 396463
PH :02637-304444/304439.

OLPAD

316. COMET CAR SALES & SERVICE PVT. LTD. (4006-ZZ-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540
PH :0261 -220066 / 220088.

PADRA

317. AMAR CARS (2205-OC-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. – VADODARA, GUJARAT - 391440
PH :02662-223355/223366.

PALANPUR

318. TANU MOTORS (Q801-Q8-01), OPP.DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001
PH :02742-254477/254499/254000.
319. STARLINE CARS PVT. LTD. (D101-Q8-08), SURVEY NO.4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001
PH :2742-265665.

PALSANA

320. KATARIA AUTOMOBILES PVT. LTD (4004-ZF-07), BESIDE SAINATH COMPLEX, KADODARA AHMEDABAD ROAD , NH-8, UMBHEL GAM,TALUKA: PALSANA KADODARA, SURAT. - 382721
PH :02622-9228004677, 8866001593.

PATAN

321. STARLINE CARS (P) LTD (D101-Q8-02), CHANASMA HIGHWAY, PATAN - 384265
PH :02766-7046046184 & 7046046186.

PORBANDAR

322. ATUL MOTORS (F401-T6-05), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY, PORBANDAR, DIST. PORBANDAR GUJARAT - 360577
PH :0286-290002.

PRANTIJ

323. KIRAN MOTORS LIMITED (AA1-AA1-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205
PH :9624401888.

RAJKOT

324. ATUL MOTORS (PVT) LTD (5503-55-01), NEAR BHAKTI NAGAR STATION CIRCLE,TAGORE ROAD, RAJKOT - 360002
PH :0281-2462781/82.
325. ATUL MOTORS (PVT) LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005
PH :0281-2575613/14.
326. PERFECT AUTO SERVICES (5502-55-01), PERFECT HOUSE,GONDAL ROAD,VANDI,RAJKOT - 360004
PH :0281-360588, 366759.
327. PERFECT AUTO SERVICES (5502-55-04), 150 RING ROAD,OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005
PH :0281-2576233, 2576234.
328. ATUL MOTORS (PVT) LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003
PH :0281-2704573.
329. PERFECT AUTO SERVICES (5502-55-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006
PH :9979861995.

RAJPIPLA

330. RAVIRATNA MOTORS PVT. LTD. (9X01-9X-01),
OPP. JALARAM SAW MILL, NEAR HARSIDDHI
MATAJI TEMPLE, RAJIPLA, DIST: NARMADA,
GUJARAT - 393145
PH :02640-223508.

RAJULA

331. ATUL MOTORS PVT LTD (BAK1-BAK-01),
HINDORNA CHOWKDI, JAFRABAD ROAD,
RAJULA DISTT. (GUJARAT) - 365560
PH :02794-221501.

SANTRAMPUR

332. R B CARS PVT. LTD. (2C01-RY-03), NEAR PTC
COLLEGE, SANT ROAD, SANTRAMPUR, DISTT. -
PANCHMAHAL - 389260
PH :02675
221752.

SAVLI

333. KIRAN MOTORS LTD. (CFD1-CFD-01), SURVEY
NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL
PUMP, BHADRVA CHOWKDI, SAVLI – TIMBA
ROAD, SAVLI, TALUK – SAVLI, DISTRICT –
VADODARA, GUJARAT. - 391770
PH :9624099195.

SAYAN

334. KIRAN MOTORS LTD. (OO01-OO-01), PLOT NO.6
TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE
PARIA, TALUKA: OLPAD, SAYAN - 394130
PH :9228007037/9712010100.

SURAT

335. DHRU MOTORS (4002-40-01), JEEVAN GANGA
NAGAR, NEAR JEEVAN JYOT THEATRE, UDHNA
MAIN ROAD, SURAT - 394210
PH :0261-406071/72.

336. DHRU MOTORS (4002-40-1B), 207, NEW
INDUSTRIAL ESTATE, ROAD NO. -6, UDHNA
UDYOG NAGAR, SURAT - 394210
PH :0261-0261-2272118/ 9978900862.

337. KATARIA AUTOMOBILES PVT. LTD (4004-40-04),
OPP. VATSALYA BUNGLOWS, NEAR GUJARAT
GAS CNG STATION, UDHNA MADGULLA ROAD,
VESU, SURAT - 395007
PH :0261-2211005/9228004674.

338. KATARIA AUTOMOBILES PVT. LTD (4004-40-05),
KATARIA ARCADE, OPP. RAJHANS
CINEMA, DUMAS ROAD, PIPLOD, SURAT -
395007
PH :0261-3081238, 3081240, 3081251.

339. KIRAN MOTORS LIMITED (4001-40-01),
SURAT-BARDOLI ROAD, DUMBHAL, NEAR PUNA
JAKAT NAKA SURAT - 395010
PH :0261-9824701590/9712010100.

340. KIRAN MOTORS LIMITED (4001-40-02),
PANDESARA, BAMROLI ROAD, SURAT - 395002
PH :0261-2630361-4.

341. COMET CAR SALES & SERVICE PVT. LTD.
(4006-40-01), CHIKUWADI COMPLEX, GHB
ROAD, PANDESARA, SURAT. - 394221
PH :0261 -3091234.

342. KATARIA AUTOMOBILES LTD. (4004-40-08),
BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA
RESIDENCY, PALANPORE, ADAJAN, SURAT -
394310
PH :0261-2778810 / 20 / 30 / 40.

343. COMET CAR SALES & SERVICE PVT. LTD.
(4006-40-03), R. S. NO. 311, T. P. SCHEME-3,
FINAL PLOT NO. 102/A, KATARGAM, SURAT,
DISTRICT – SURAT, GUJARAT. - 395004
PH :0261-2480877, 2604877.

344. KIRAN MOTORS (P) LTD. (4005-40-01), PLOT NO.
443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT
- 395009
PH :9712010100.

345. AMAR CARS PVT LTD (4009-40-01), BLOCK
NO.116, SURVEY NO.128/1, SURAT-KAMREJ
ROAD, VALAK PATIYA, NEAR VALAK NAGAR,
TALUKA-KAMREJ, DISTT: SURAT - 395006
PH :0261-8980042799/89800471999.

346. AMAR CARS PVT LTD (4009-40-02), PLOT
NO.108/11, SURVEY NO.7 & 9, SONARAS
COMPOUND, NEAR DGVCL OFFICE, KARMINATH
MAHADEV TEMPLE LANE, KAPODARA,
VARACHHA ROAD, SURAT - 395006
PH :0261-7069026555/7069026666.

SURENDERNAGAR

347. DREAM VEHICLES PVT. LTD. (LC01-LC-01),
261/P, OPP MARKETING YARD, GIDC
AREA, WADHWAN CITY, SURENDERNAGAR -
363030
PH :02752-241314 / 651516.

UMRETH

348. AMAR CARS PVT. LTD. (CFE1-CFE-01), R. S. NO.
30/2, NADIAD-DAKOR ROAD, UMRETH ,
DIST. ANAND, GUJARAT. - 388220
PH :7567898716.

UNA

349. PERFECT AUTO SERVICES (BFD1-BFD-01),
SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI
VIVEKANAND VIDYALAYA, NEAR BANSIDHAR
PETROL PUMP, BHAVNAGAR HIGHWAY,
VAYAJPUR, UNA, DISTRICT – GIR SOMNATH,
GUJARAT. - 362560
PH :8511147523.

UNJHA

350. TANU MOTORS (Q801-GR-02), OPP. DHANA DAL
FACTORY, MEHSANA PALANPUR HIGHWAY,
UNJHA - 384170
PH :02742-224499.

VADODARA

351. KATARIA AUTOMOBILES PVT. LTD (2204-22-02),
OPPOSITE SHARDA MANDIR HIGH SCHOOL,
VINOBA BHAVE ROAD, SALATWADA,
VADODARA - 390001
PH :08866002482 / 1584.

352. AMAR CARS PVT LTD (2203-22-01), GORWA
ROAD, VARODARA, GUJARAT, - 390016
PH :0265-2291500, 01, 02.

353. KIRAN MOTORS LIMITED (2201-22-01),
909/4, G.I.D.C. MAKARPURA, VADODARA - 390010
PH :0265-2642212.

354. KIRAN MOTORS LIMITED (2201-22-02), PLOT
NO.160, SUB-I NUTAN GUJ.INDL ESTATE, OLD
CHHANI ROAD, VADODARA - 390002
PH :0265-2771744, 45.

355. AMAR CARS PVT LTD (2203-22-02), KALA
GHODA, OPP. KIRTI MANDIR, VADODARA, DIS:
VADODARA, GUJARAT - 390001
PH :0265-2428282.

356. KATARIA AUTOMOBILES PVT. LTD (2204-22-01),
984/4, GIDC, OLD NH-8, MAKARPURA ROAD,
VADODARA, GUJARAT - 390010
PH :0265-3091257 / 34.

357. AMAR CARS PVT LTD (2205-22-01), VARASIYA
AIRPORT ROAD, OPP POONAM CINEMA,
KARELIBAUG, VADODARA, GUJARAT - 390016
PH :0265-2488787.

358. KIRAN MOTORS LIMITED (2201-22-03), C/O
ARBUDA COLD STORAGE, 823 POWER CABLE
ROAD, DHARMSINH ROAD, OPP. UMA AMAR
PARTY PLOT, NEAR CHHANI JAKAT NAKA,
VADODARA - 390002
PH :0265-2771122.

VALSAD

359. KATARIA AUTOMOBILES PVT. LTD (0104-2E-06),
SURVEY NO. 211, ATUL-ALSAD
ROAD, PARNERA, AVALSAD, GUJARAT - 396020
PH :02632 -233244 / 233245.

VALVADA

360. VITESSE TRADING LIMITED (0503-V1-05),
SURVEY NO.137/1 Q 148/1 VILLAGE
VALVADA, NATIONAL HIGHWAY-8, NEAR
KARAMBELI STATION, DISTT. VALSAD (GUJ) -
396105
PH :0260-787301.

VANSDA

361. KATARIA AUTOMOBILES PVT. LTD.
(Q701-SB-02), JAMNABA PARK, VANSDA
HANUMAN BARI CHAR RASTA,
VANSDA-DHARAMPUR ROAD, RANI FALIYA,
VANSDA, DISTRICT – NAVSARI, GUJARAT -
396580
PH :02630-223490.

VAPI

DEALER WORKSHOP (AS ON 01.04.2017)

362. KATARIA AUTOMOBILES PVT. LTD (0104-97-03),
PLOT NO. C-29, NATIONAL HIGHWAY-8, G. I. D.
C., VAPI, TAL. PARDI - 396195
PH :0260-3081240/3081260.

363. KATARIA AUTOMOBILES PVT. LTD (0104-97-09),
PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP
BABA SITARAM TEMPLE, NEAR
SWAMINARAYAN SCHOOL, SALAV, VAPI ,
DISTRICT - VALSAD, GUJARAT - 369191
PH :0260-2408202/8866001591/9327740903.

VERAVAL

364. PERFECT AUTO SERVICES (5502-AH-05), NR.
BALIYA HANUMAM, VERAVAL - JUNAGADH
HIGHWAY, JUNAGADH, GUJARAT - 362265
PH :02876-221122.

VIJAPUR

365. STARLINE CARS (P) LTD (D101-V2-04),
HIMMATNAGAR HIGHWAY, ANANDPURA CHAR
RASTA, VIJAPUR - 382870
PH :02763-220059.

VIRAMGAM

366. KIRAN MOTORS LIMITED (AAB1-AAB-01),
SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM,
DISTT: AHMEDABAD, GUJARAT. - 382150
PH :8156016222.

VISNAGAR

367. STARLINE CARS (P) LTD (D101-RW-05),
VISNAGAR - AMBAJI ROAD, OPP. DHAROI
COLONY, VISNAGAR, DISTT. - MEHSANA -
384315
PH :02765-222977.

VYARA

368. COMET CAR SALES & SERVICE PVT. LTD.
(BIY1-BIY-01), SHOP NO. 11 & 12, BLOCK NO.
175/1/A, RS NO. 113, VYARA-SURAT ROAD,
VYARA, DISTRICT – TAPI, GUJARAT - 394650
PH :02626-221410/11.

WANKANER

369. ATUL MOTORS PVT LIMITED (BAL1-BAL-01),
RAJKOT-WANKANER HIGHWAY, NEAR
JADESHWAR CHAMBERS, NEAR
INTERNATIONAL CERAMIC, WANKANER
(GUJARAT) - 363621
PH :02828-221556.

HARYANA

AMBALA

370. EAKANSH WHEELS (1802-18-01), STONE NO.
126, JAGADARI ROAD, VILLAGE TEPLA,
AMBALA - 133001
PH :0171-2822500, 600, 900.

DEALER WORKSHOP (AS ON 01.04.2017)

371. EAKANSH WHEELS (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001
PH :01712542549, 9991802000.
372. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003
PH :0171-2521444, 2520155.
373. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003
PH :0171-2520448.

ASSANDH

374. KARNAL MOTORS (8906-CS-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032
PH :1749-272032.

BAHADURGARH

375. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (2G01-2G-01), 1202, M.I.E, PART-B, MAIN ROHTAK ROAD, BAHADURGARH, DIST. JHAJJAR (HARYANA), - 124507
PH :01276268102 / 01276661111 / 9812580555.
376. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (2G01-2G-02), KHASRA NO. 1681-82, MODERN INDUSTRIAL AREA, PART – B, BAHADURGARH. - 124507
PH :9992200429.

BALLABGARH

377. ROYAL MOTORS (9R81-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD
PH :0129-4271800, 9899242536, 2242536.

BARARA

378. EAKANSH WHEELS (NX01-NX-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201
PH :01731-286400.

BARWALA

379. MODERN AUTOMOBILES (BSA1-BSA-01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118
PH :9416021648.

BERI

380. SIDHI VINAYAK VEHICLES PVT. LTD. (BEV1-BEV-01), PLOT NO. 53/2, NEAR MATA MANDIR, BERI DUJANA ROAD, BERI , DIST. JHAJJAR - 124201
PH :9992200415.

BHIWANI

381. JAGMOHAN MOTORS (X301-X3-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021
PH :01664-9812000364.

BILASPUR

382. PANDIT AUTOMOBILES PVT. LTD. (BGH1-BGH-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT – YAMUNANAGAR, HARYANA. - 135102
PH :01732-247777, 9812455350, 9812455879.

CHARKHI DADRI

383. JAGMOHAN MOTORS (X301-CT-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306
PH :9992200363, 9992200362.

CHEEKA

384. EAKANSH MOTORS PVT. LTD. (U802-HU-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034
PH :01743222277 / 01743222288.

DADRI-TOE

385. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (BVH1-BVH-01), KHEWAT NO.270, 273 KILA NO.11/2/2 & 14 (B-0), 15/2 (7-16) VILL - DADRI TOE, MAIN BUS STAND JHAJJAR-GURGAON ROAD, TEHSIL - JHAJJAR, DISTT.-JHAJJAR, HARYANA. - 124103
PH :9992200433.

ELLENABAD

386. SHAKTI MOTORS PVT.LTD. (E401-IN-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055
PH :1666-230168, 221953, 9729871902.

FARIDABAD

387. BATRA AUTO COMPANY (5803-58-01), 14/1 MILESTONE, MATHURA ROAD, FARIDABAD, - 121003
PH :0124-91-5274591-94.
388. BATRA AUTO COMPANY (5803-58-02), PLOT NO. 7, 18/2, MAIN MATHURA ROAD, FARIDABAD - 121003
PH :0129-2380907.
389. TCS AUTOMOBILES (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD. - 121001
PH :0129 -4292929.
390. VIPUL MOTORS LTD. (5801-58-03), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006
PH :0129-4003052, 4286000,24.30.
391. VIPUL MOTORS LTD. (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002
PH :0129-4285000,33.66, 286640, 41, 290685.

392. FAIR DEAL CARS PVT. LTD. (5805-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003
PH :9953340624.

FARRUKHNAGAR

393. PLATINUM MOTOCORP LLP (KE01-KE-01), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO. -19/3 AND 22/2, VILLAGE – SEHADPUR MOHAMADPUR, TEHSIL – FARRUKHNAGAR, DISTRICT – GURGAON. - 123506
PH :9810181273, 9205192661.

FATEHABAD

394. SHAKTI MOTORS PVT.LTD. (2H02-2H-01), NH-10, SIRSA ROAD, FATEHABAD - 125050
PH :01667221799 / 01667221699 / 9896032100.

GANAUR

395. JAGMOHAN MOTORS PVT. LTD. (NA03-NA-01), RAILWAY ROAD, GANAUR - 131101
PH :0130-2461500.

GHARAUNDA

396. KARNAL MOTORS (8906-MR-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114
PH :01748-252030,252040.

GOHANA

397. JAGMOHAN MOTORS (CU02-CU-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT - 131301
PH :9992200357.

GURGAON

398. COMPETENT AUTOMOBILES CO LTD (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004
PH :0124-425200.
399. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006
PH :0124-8912555, 8912000, 8912869, 8912870.
400. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, - 122015
PH :0124-4012555.
401. VIPUL MOTORS LTD. (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001
PH :0124-4395700/1, 4004019-23, 9811723030.
402. ROHAN MOTORS LTD. (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001
PH :7065574220.
403. VIPUL MOTORS LTD. (5801-95-04), PLOT NO.5/22/1, SARHAUL VILLAGE,SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102
PH :0124-4285000.

404. PREM MOTORS PVT. LTD. (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON - 122017
PH :70650003410, 7065000000.

405. PREM MOTORS PVT. LTD. (9512-95-01), PLOT NO. 3,IDC, OPPOSITE SECTOR-14, GURGAON - 122001
PH :70650003377, 70650003388.

406. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001
PH :0124-9810047332, 9810052514.

407. RANA MOTORS PVT LTD (9509-95-02), PLOT NO 60, IDC, GURGAON - 122001
PH :0124-4867777.

408. RANA MOTORS PVT LTD (9509-95-03), QILA NO. 8/2, MUSTAKIL NO. 25, SECTOR 17-18, DIVIDING ROAD, GURGAON. - 122001
PH :0124-2340140.

HANSI

409. JAGMOHAN MOTORS (GT02-GT-01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI - 124001
PH :9992200383.

HISSAR

410. HISSAR AUTOMOBILES (7601-76-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA - 125001
PH :01662-76310, 76021.
411. MODERN AUTOMOBILES (7602-76-01), OPP. VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005
PH :01662-20000, 21000.
412. MODERN AUTOMOBILES (7602-76-02), OPP. BBMB, HISSAR DELHI ROAD, HISSAR - 125001
PH :9354511110.
413. UNIQUE MOTORS PVT LTD (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD,HISSAR (HARYANA) - 125006
PH :8818055538.

JHAJJAR

414. SIDHI VINAYAK VEHICLES PRIVATE LIMITED (0B01-0B-01), NEAR GOVT. POLYTECHNIC, BAHADURGARH ROAD, JHAJJAR - 124507
PH :01251-2711115 /271119.

JIND

415. EAKANSH MOTORS PVT. LTD. (U802-2K-06), PLOT NO. 1890/29, NEAR TRUCK UNION OFFICE, JIND-ROHTAK ROAD, JIND, HARYANA - 126102
PH :01681-247666.

JULANA

416. EAKANSH MOTORS PVT. LTD. (MA01-MA-01),
JIND ROHTAK MAIN ROAD, OPP. NEW BUS
STAND, JULANA, DIST. JIND, HARYANA - 126101
PH :8395906111.

KAITHAL

417. EAKANSH MOTORS PVT. LTD. (U802-U8-01),
AMBALA ROAD, NH-65, KAITHAL - 136027
PH :01746-225959, 229100, 309330.

KALKA

418. MODERN AUTOMOBILES (EG02-EG-01),
ADJOINING INDIAN OIL PETROL PUMP, RAM
NAGAR, NH-22, KALKA, DISTRICT –
PANCHKULA, HARYANA - 133302
PH :0173-224999/220555.

KARNAL

419. KARNAL MOTORS (8906-89-01), 71/3
MILESTONE ,G.T.ROAD, KARNAL - 132001
PH :0184-255555, 274387.
420. KARNAL MOTORS (8906-89-02), OPP. BUS
STAND, AMBALA CHANDIGARH HIGHWAY,
KARNAL - 132001
PH :0184-2274287.
421. MODERN AUTOMOBILES (8907-89-01), NEAR
NAMASTE CHOWK, OLD G.T.ROAD, KARNAL -
132001
PH :0184-2272503.

KHARKHODA

422. JAGMOHAN MOTORS LTD. (BU01-BU-01), NEAR
KANYA GURUKUL MAHAVIDYALYA, DELHI
ROAD, NEAR UNION BANK, KHARKHODA
(HARYANA) - 131402
PH :0130-2584111.

KOSLI

423. DINCO 4 WHEELS LLP (CAN1-CAN-01),
OPPOSITE RAJIV GANDHI STADIUM, TEHSIL
ROAD KOSLI, DISTRICT – REWARI, HARYANA
- 123302
PH :7082100202.

KUNDLI

424. JAGMOHAN MOTORS (GU02-GU-01), OPP. TDI
OFFICE, DELHI KUNDALI BORDER, GT KARNAL
ROAD SONEPAT - 131001
PH :0130-8059900535.

KURUKSHETRA

425. KARNAL MOTORS (8906-U6-03), PLOT NO. 156,
INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA
PH :01744-232827.

MADLAUDA

426. HARISONS AUTOMOBILES (CFK1-CFK-01),
ASANDH ROAD, VILLAGE - MADLAUDA, TEHSIL -
MADLAUDA, DISTRICT – PANIPAT. - 132113
PH :0180-2667788.

MANDI DABWALI

427. SHAKTI MOTORS PVT.LTD. (E401-KU-02),
SANGARIA ROAD, DABWALI, DISTT.-SIRSA -
125104
PH :01668-229988,229966
9896023577.

MANESAR

428. PLATINUM MOTOCORP LLP (2L04-2L-01), PLOT
NO.282, SEC 6, IIMT MANESAR DISTT.
GURGAON. - 122052
PH :0124-2656500.

MEHAM

429. JAGMOHAN MOTORS (A601-NZ-08), MAIN
MARKET, NATIONAL HIGHWAY-10,
ROHTAK-HISSAR ROAD, MEHAM,
DISTRICT-ROHTAK - 124101
PH :9992100310.

MURTHAL

430. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44
HSIIDC, MURTHAL
PH :0130-2482230.

NARAINGARH

431. EAKANSH WHEELS (1802-CV-02), NH-72,
AMBALA-KALA AMB ROAD, NEAR ADARSH
FILLING STATION, NARAINGARH - 134203
PH :1734-285500.

NARWANA

432. EAKANSH MOTORS PVT. LTD. (U802-CW-03),
OPP. HAFED GODOWN-2, NH-65 AKHERAM
NAGAR, NARWANA - 126116
PH :01884-9813583100.

PALWAL

433. ROHAN MOTORS LTD. (EE01-EE-01), SANWAL
COLONY, MAIN MATHURA ROAD, NEAR SDM
COURT, PALWAL - 121101
PH :1275-304100.

PANCHKULA

434. CARE TAKER (K381-K3-01), PLOT NO. 36,
INDUSTRIAL AREA, PHASE-2, PANCHKULA
PH :0172-2592310, 2594310, 5064336.

435. MODERN AUTOMOBILES (0702-K3-03), PLOT
NO. 318, INDUSTRIAL AREA, PHASE-2,
PANCHKULA - 134113
PH :0172-2594200.

436. AUTOPACE NETWORK PVT. LTD (0705-K3-03),
PLOT NO. 5, INDUSTRIAL AREA, PHASE-1,
PANCHKULA, HARYANA. - 134113
PH :9878427062.

PANIPAT

437. VIJAY MOTORS (D381-D3-01), PLOT# 136,
INDUSTRIAL AREA, PHASE-1
PH :180-4001490.

438. HARISONS AUTOMOBILES (D301-D3-01),
G.T.ROAD , PANIPATHARYANA - 132103
PH :01742-67292, 67225, 67782.

439. HARISONS AUTOMOBILES (D301-D3-03), NEAR
JATAL ROAD, OLD CANAL, PANIPAT - 132103
PH :01802688088, 01804091801.

440. HARISONS AUTOMOBILES (D301-D3-04), PLOT
NO.23, SECTOR-25, PHASE-1, PART-1, PANIPAT
(HARYANA) , - 132103
PH :0180-2667799,2667788.

PATAUDI

441. PLATINUM MOTOCORP LLP (BY03-BY-01), HALI
MANDI ROAD, OPPOSITE SHIV MURTI,
PATAUDI, DIST. - GURGAON - 122503
PH :0124-2672100.

PEHOWA

442. KARNAL MOTORS (8906-2M-06), NEAR SHARMA
SERVICE STATION, KURUKSHETRA ROAD,
PEHOWA - 136128
PH :01741220911
9996038881.

PUNDRI

443. EAKANSH MOTORS PVT. LTD. (BFF1-BFF-01),
KILA NO- 3/10, KHEWAT 2147 OPP. HARCHARAN
FILLING STATION, KAITHAL ROAD, PUNDRI
DIST. KAITHAL, HARYANA - 136026
PH :8395906111.

RADAUR

444. PANDIT AUTOMOBILES PVT.LTD. (D201-EN-02),
OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND,
RADAUR, DISTRICT-RADAUR, HARYANA -
135001
PH :01732-283165, 9812455884.

REWARI

445. DINCO 4 WHEELS LLP (U102-U1-01), BAWAL
ROAD, NEAR BYE PASS ROAD, REWARI
(HARYANA)) - 123401
PH :1274-261347.

ROHTAK

446. JAGMOHAN MOTORS (A601-A6-01), SONEPAT
ROAD, ROHTAK - 124001
PH :01262-55002-5.

447. JAGMOHAN MOTORS (A601-A6-03), NEAR
SUKHPURA CHOWK, DELHI BYEPASS ROAD,
ROHTAK , - 124001
PH :9992200385.

SAFFIDON

448. EAKANSH MOTORS PVT. LTD. (U802-JU-05),
NEAR BRSK SCHOOL, OPPOSITE RELIANCE
PETROL PUMP, PANIPAT ROAD, SAFFIDON,
DISTRICT- JIND - 126112
PH :9896155345.

SAHA

DEALER WORKSHOP (AS ON 01.04.2017)

449. PUNJAB MOTOR & ENGG WORKS (1881-18-01),
NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-
AMBALA
PH :0171-2822669, 9896402469.

SALAHAWAS

450. SIDHI VINAYAK VEHICLES PRIVATE LIMITED
(BEQ1-BEQ-01), KHATA NO. 550, KHASRA NO.
62/17/2(4-4) 18/2(4-9) 19/1/1(3-1), JHAJJAR-KOSLI
ROAD (VIA MATANELJ), NEAR BDPO OFFICE
VPO & TEHSIL – SALAHAWAS, DISTRICT –
JHAJJAR, HARYANA, - 124146
PH :9467165111.

SAMALKHA

451. HARISONS AUTOMOBILES (D301-LY-02),
INDUSTRIAL AREA, GT ROAD, SAMALKHA,
DISTT. PANIPAT, HARYANA - 132101
PH :8607000122.

SAMPLA

452. JAGMOHAN MOTORS PVT. LTD. (NY01-NY-01),
NEAR VASUNDRA CAFE, DELHI ROHTAK ROAD,
SAMPLA, DISTT. ROHTAK - 124501
PH :9812000351.

SHAHABAD

453. KARNAL MOTORS PVT. LTD. (CCR1-CCR-01),
KHEWAT NO. 460, KATONI NO. 486, KHASRA
NO. 170, TEHSIL- SHAHABAD, DIST.-
KURUKSHETRA. - 136135
PH :9996206000.

SIRSA

454. SHAKTI MOTORS PVT.LTD. (E401-E4-01),
DABBALI RD., SIRSA, HARYANA - 125055
PH :01666-30168.

SOHNA

455. PASCO AUTOMOBILES (9506-KZ-03), DAMDAMA
MORE, GURGAON -SOHNA ROAD, SOHNA,
HARYANA, - 122103
PH :0124-4952001.

SONEPAT

456. JAGMOHAN MOTORS (J501-J5-02), GAYATRI
GARDEN, MURTHAL ROAD, SONEPAT
(HARYANA) - 131001
PH :9812615000.

SONIPAT

457. JAGMOHAN MOTORS (J501-J5-01),
BAHALGARH-DELHI ROAD, OPP. POWER
HOUSE, SONIPAT - 131001
PH :01264-230114, 236106-07.

TAURU

458. PASCO AUTOMOBILES (BIV1-BIV-01), KILA NO.
34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT,
HARYANA - 122015
PH :8683000902, 9873001497.

DEALER WORKSHOP (AS ON 01.04.2017)

TOHANA

459. SHAKTI MOTORS PVT.LTD. (XP01-XP-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120
PH :01692-220099,220199.

TOSHAM

460. JAGMOHAN MOTORS (0Y01-0Y-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040
PH :01253-8059900566.

YAMUNANAGAR

461. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA
PH :1732-261937.
462. PANDIT AUTOMOBILES PVT.LTD. (D201-D2-01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001
PH :01732-30099.
463. PANDIT AUTOMOBILES PVT.LTD. (D201-D2-03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001
PH :9996426004.

HIMACHAL PRADESH

BAIJNATH

464. KANGRA VEHICLEADES (BBC1-BBC-01), TASHI JONG, PAPROLA-BAIJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAIJNATH, DISTT. KANGRA - 176115
PH :01892-251379.

BANIKHET

465. KANGRA VEHICLEADES PVT. LTD. (BWN1-BWN-01), KHASRA NO.709, KHATA KHATOONI NO.23, BANIKHET, THE-DALHOUSEIE, DISTT. CHAMBA - 176303
PH :01899-254186, 232036, 9418048803.

BILASPUR

466. COMPETENT AUTOMOBILES CO. LTD. (6Y01-6Y-01), KHEWAT NO. 8/8 KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. - CHANDPUR, TEHSIL - SADAR, DIST. - BILASPUR, HIMACHAL PRADESH. - 174001
PH :01978-7807800330 / 7807800440.

CHAMBA

467. KANGRA VEHICLEADES (D902-JF-03), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310
PH :01899222086 , 9418059252.
468. KANGRA VEHICLEADES PVT. LTD. (D902-JF-05), KHASRA NO. 88/96,1 & KHASRA NO.628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310
PH :9988717437.

DEHRA

469. KANGRA VEHICLEADES (D902-HT-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101
PH :01692-234477.

GAGGAL

470. KANGRA VEHICLEADES (BBV1-BBV-01), NATIONAL HIGHWAY -20 , ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA , HIMACHAL PRADESH - 176209
PH :9857645440.

HAMIRPUR

471. COMPETENT AUTOMOBILES CO LTD (W901-W9-01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401
PH :01972-256281-84.

JASSUR

472. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH
PH :01893-226555.

JOGINDER NAGAR

473. COMPETENT AUTOMOBILES CO. LTD. (BBO1-BBO-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015
PH :1692-9418263465.

KULLU

474. COMPETENT AUTOMOBILES (2Q01-2Q-01), OPPOSITE S.S.B. TRAINING CENTRE, SHAMSHI, KULLU - 175126
PH :1902-260665, 9625797817.

KUNIHAR

475. GOYAL MOTORS PVT. LTD. (BBX1-BBX-01), KHATA NO. - 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSHIL - ARKI, DISTRICT - SOLAN, HIMACHAL PRADESH - 173207
PH :9818138772.

MANALI

476. COMPETENT AUTOMOBILES CO. LTD. (BKU1-BKU-01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESEL- MANALI, DIST. KULLU, (H.P.) - 175131
PH :1902-9418387465.

MANDI

477. COMPETENT AUTOMOBILES CO. LTD. (B301-B3-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI - 124501
PH :01905-23865.

NADAUN

478. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041
PH :01972-232865.

NAGROTA

479. KANGRA VEHICLEADES (D902-D9-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047
PH :01892-251379, 251387.

NAGROTA BAGWAN

480. KANGRA VEHICLEADES PVT. LTD. (D902-D9-06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047
PH :01892-251379, 251387.

NALAGARH

481. GOYAL MOTORS (IB02-IB-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101
PH :9418069672.

NURPUR

482. KANGRA VEHICLEADES (D902-JG-04), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201
PH :01893-226789, 226333.

PALAMPUR

483. KANGRA VEHICLEADES (2T01-2T-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061
PH :1894-236227.

PAONTA SAHIB

484. GOYAL MOTORS PVT. LTD. (A901-8G-02), OPP BIBUJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR , NH-72, PAONTA SAHIB - 173025
PH :9418061728.

RAJGARH

485. GOYAL MOTORS PVT. LTD. (BJX1-BJX-01), KHATA NO. 517/505, 478/3, KHASRA NO. - 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL - RAJGARH, DISTRICT - SIRMAUR , HIMACHAL PRADESH - 173101
PH :9818138772.

RAMPUR BUSHAHR

486. GOYAL MOTORS PVT. LTD. (BYF1-BYF-01), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL - RAMPUR, DISTRICT - SHIMLA. - 172001
PH :94183245752.

ROHRU

487. GOYAL MOTORS (JZ01-JZ-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207
PH :9418018472.

SHIMLA

488. GOYAL MOTORS PVT. LTD. (A901-A9-01), TARADEVI, SHIMLA,(H.P.) - 171010
PH :0177-231872.

SOLAN

489. GOYAL MOTORS PVT. LTD. (7D01-7D-01), DEON GHAT, SOLAN - 173211
PH :01792-220472.

UNA

490. COMPETENT AUTOMOBILES (QD01-QD-01), VILLAGE RAINSARY,P.O JHALERA,TEHSIL & DISTRICT:UNA - 174303
PH :1972-256281-84.

JAMMU & KASHMIR

ANANTNAG

491. PEAKS AUTO PVT. LTD. (2Y01-2Y-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165
PH :1932-228165.

BANDIPORA

492. JAMKASH VEHICLEADES (KASHMIR) PVT. LTD. (1205-OA-04), AJAR BANDIPORA , J&K - 193502
PH :01957-225185.

BARAMULA

493. JAMKASH VEHICLEADS(KASHMIR)PVT. LTD. (8C01-8C-01), VILLAGE SANGRAMA,WAGAROO, BARAMULA - 193101
PH :0194-2138951.

DODA

494. J&K VEHICLEADES (2Z01-2Z-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202
PH :1996233146.

GANDERBAL

495. JAMKASH VEHICLEADES (KASHMIR) PVT. LTD (ZA01-ZA-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201
PH :0194-2416156.

JAMMU

496. JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015
PH :0191-466681, 464304, 308.
497. JAMKASH VEHICLEADES PVT LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001
PH :0191-2576235, 2543935, 2520323.

DEALER WORKSHOP (AS ON 01.04.2017)

498. JAMKASH VEHICLEADES PVT LTD (3306-33-04),
SUNJWAN, DISTT. JAMMU - 180011
PH :0191-2468504.
499. PEAKS AUTO JAMMU PVT. LTD (3310-33-01),
GANGVAL INDUSTRIAL AREA, BEHIND COCA
COLA FACTORY, JAMMU - 180010
PH :0191-2484813.
500. JAMMU MOTORS PVT. LTD (3308-33-01), 6,
AKHNOOR ROAD, JAMMU - 180001
PH :0191-2504746, 2552977, 2505183.
501. JAMMU MOTORS PVT. LTD (3308-33-02), PLOT
NO.2, RAJPURA CHUNGI OPP AG OFFICE,
AKHNOOR ROAD, JAMMU - 180002
PH :0191-2504746, 2552977, 2505183.

KATHUA

502. JAMMU MOTORS PVT. LTD. (3B02-3B-01), WARD
NO.13, CHAK PARTAP SINGH HATLI MORH,
NH-1-A, KATHUA TEHSIL KATHUA - 184101
PH :7837613036.

KULGAM

503. PEAKS AUTO PVT. LTD. (OY01-OY-01), NEAR
GRID STATION,MAIN ROAD, KULGAM - 191202
PH :1931-260030.

KUPWARA

504. JAMKASH VEHICLEADS(KASHMIR)PVT. LTD.
(1205-AX-03), JAMKASH VEHICLEADES, NEAR
GM FILLING STATION, DC OFFICE ROAD
KUPWARA - 193223
PH :01955-253322.

LEH

505. DRUK AUTOZONE (9S01-9S-01), AIRPORT
ROAD, LEH (LADAKH), DISTT. LADAKH, LEH -
194101
PH :01982-250005.

POONCH

506. JAMKASH VEHICLEADES PVT LTD
(AAW1-AAW-01), VILLAGE KUNUYIAN, TEHSIL
HAVELI POONCH, JAMMU & KASHMIR. - 185121
PH :1965-222972.

PULWAMA

507. PEAKS AUTO PVT. LTD. (1204-MU-03), MUGHAL
ROAD, GUNGOO, PULWAMA - 192301
PH :01933-240226.

RAJOURI

508. JAMKASH VEHICLEADES PVT LTD (3306-KS-06),
KALAKOTE ROAD, VILLAGE BADOL, RAJOURI -
185131
PH :01962-264973.

RS PURA

509. JAMKASH VEHICLEADES PVT LTD (3306-JN-03),
GAGAIN MORTH, R S PURA, JAMMU, - 181102
PH :01923-251951.

SHOPIAN

510. PEAKS AUTO PVT. LTD. (AAA1-AAA-01), AGLAR
SOFANAMAN, SHOPIAN - 192303
PH :0194-24666067.

SIDHRA

511. JAMKASH VEHICLEADES PVT LTD
(CDL1-CDL-01), KHASRA NO.80 & KHATA
NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT
PETROLEUM PETROL PUMP, TEH. & DISTT.
JAMMU - 180019
PH :0191-2662024, 2662025, 2576235.

SRINAGAR

512. RAHIM MOTORS (1281-12-01), SIDGO
INDUSTRIAL AREA, RANGRETH, SRINAGAR
PH :0194-2435909.
513. HIGHLAND AUTOMOBILES PVT.LTD
(1202-12-01), SONWAR, SRINAGAR - 190001
PH :0194-452579, 479928.
514. JAMKASH VEHICLEADS(KASHMIR)PVT. LTD.
(1205-12-01), HYDERPURA BY PASS CROSSING,
SRINAGAR - 190015
PH :0194-2435576.
515. PEAKS AUTO PVT. LTD. (1204-12-01), BYE PASS
ROAD, NH - 1A, NEAR HOTAL SILVER STAR,
SRINAGAR - 191101
PH :0194-2130261.
516. JAMKASH VEHICLEADS(KASHMIR)PVT. LTD.
(1205-12-05), NARBAL CROSSING, NH-1A,
SRINAGAR, JAMMU & KASHMIR - 190017
PH :9419003372.

SUNDERBANI

517. PEAKS AUTO JAMMU PVT. LTD (AAM2-AAAM-01),
MOUZA THANDA PANI, TEH. SUNDERBANI -
185153
PH :1960-233119.

SURANKOTE

518. PEAKS AUTO JAMMU PVT. LTD (TY02-TY-01),
NEAR KNIET KING FILLING STATION, BHARAT
PETROLEUM, POONCH MUGHAL ROAD,
SURANKOTE, DISTT: POONCH - 185101
PH :9018331442.

UDHAMPUR

519. J&K VEHICLEADES PVT. LTD. (D801-D8-01),
NATIONAL HIGHWAY 1A, NEAR DAK
BANGLOW, UDHAMPUR - 182101
PH :01992-76266.

JAMMU AND KASHMIR

AKHNOOR

520. JAMMU MOTORS (2X02-2X-01), MAIN ROAD
DASKAL, TEHSIL – AKHNOOR, DISTRICT -
JAMMU - 181201
PH :1924-252021, 9419109162.

HANDWARA

521. JAMKASH VEHICLEADES (BYA1-BYA-01),
KHEWAT NO-31, KHATTA NO-298, SURVEY NO-
3764/1816, MOZA BRARIPORA, TEH-
HANDWARA, DIST- KUPWARA, J&K - 193221
PH :9419074012.

JAMMU

522. PEAKS AUTO JAMMU PVT. LTD. (3310-33-02),
KHASRA NO.425 & 426, KHATA NO.425 & 426,
TOPE SHRKHANIAN (BACKSIDE OF BEST
PRICE), AKHNOOR ROAD, JAMMU. - 180001
PH :0191-2484813, 9596620057.

JHARKHAND

BOKARO

523. HINDUSTAN AUTO AGENCY (B501-B5-02), R1,
CITY CENTRE, SECTOR-4, BOKARO STEEL
CITY, BOKARO - 827004
PH :06542-233690/ 9263631315.
524. HINDUSTAN AUTO AGENCY (B501-B5-03), M2,
SECTOR-4, CITRY CENTRE, BOKARO STEEL
CITY (JHARKHAND) - 827004
PH :9204796107.

DALTONGANJ

525. PREMSONS MOTORS UDYOG PVT LTD
(5103-MP-02), KACEHRI ROAD, DALTONGANJ,
PALAMU - 822101
PH :06562-9386768344.

DEOGHAR

526. RELIABLE INDUSTRIES (5202-KR-03), SHAHEED
ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, -
814112
PH :06432-9431125332.

DHANBAD

527. RELIABLE INDUSTRIES (5202-52-01), KATRAS
ROAD, DHANBAD, JHARKHAND. - 826001
PH :0326-301507, 301508,9431125332.
528. RELIABLE INDUSTRIES (5202-52-02), BEHIND
PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G.
ASHRAM, SARAIDEHLA , DHANBAD - 828127
PH :326-8986749072.
529. RELIABLE INDUSTRIES (5202-52-06), SUGIADIH,
HIRAK ROAD, SARAIDEHLA, DHANBAD,
JHARKHAND. - 828127
PH :9835830202.

DUMKA

530. RELIABLE INDUSTRIES (L701-L7-01), OPP
DUDHANI PETROL PUMP, DEOGHAR-PAKUR
ROAD,DUMKA (JHARKHAND) - 814101
PH :9708555924.

GHATSHILA

531. PEBCO MOTORS LTD. (AIA1-AIA-01), PLOT NO.
68, KHASRA NO.128, MAUZA PAORA, NH-33,
NEAR FULL-DUNGRI CHOWK,GHATSHILA, EAST
SINGHBHUM (JHARKHAND) - 832303
PH :06585-9308433388.

GIRIDIH

532. RELIABLE INDUSTRIES (5202-3D-04),
MOHANPUR, PACHAMBA ROAD, GIRIDIH. -
815301
PH :06532-222969/ 9934205123.

GODDA

533. RELIABLE INDUSTRIES (5202-EJ-05), ASANBANI
CHOWK, MAIN ROAD, GODDA. - 814133
PH :9431121479.

GUMLA

534. PREMSONS MOTOR UDYOG PVT. LTD.
(5103-2O-04), VANASTHALI COMPLEX
PUGUCHAMPA NAGAR,NH-23,SISAI
ROAD,GUMLA - 835207
PH :06524-221117.

HAZARIBAGH

535. HINDUSTAN AUTO AGENCY (Y901-Y9-01), NEAR
SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. -
825301
PH :9263631324.
536. HINDUSTAN AUTO AGENCY (Y901-Y9-02), PLOT
NO. 233 AND 234, MORANGI, THANANA -
MUFFASSIL NO. 257, HAZARIBAGH,
JHARKHAND. - 825301
PH :9263631327, 9031098015.

JAMSHEDPUR

537. MOTOR WORLD (3102-31-01), N.H-33, NEAR
PARDIH CHOWK, MANGO, JAMSHEDPUR -
831012
PH :0657-2360346, 2360347.
538. PEBCO MOTORS LTD. (3101-31-01), MEDIUM
SECTOR, INDUSTRIAL AREA, ADITYAPUR,
JAMSHEDPUR - 831001
PH :0657-409106, 107.
539. PEBCO MOTORS LTD. (3101-31-02), 16
BALICALA, CONTRACTORS & GODOWN AREA,
SONARI, JAMSHEDPUR - 831011
PH :9308433388.

JAMTARA

540. RELIABLE INDUSTRIES (BOX1-BOX-01), PLOT
NO. 483, PARWAT BIHAR, DUMKA ROAD,
JAMTARA, JHARKHAND. - 815351
PH :9835814404.

KHILARI

DEALER WORKSHOP (AS ON 01.04.2017)

541. SUDHA BUSINESSS ENTERPRISES PVT. LTD.
(CFO1-CFO-01), PLOT 113, MOUZA- BUKBUKA,
BESIDE PAHADI MANDIR, KHELARI, RANCHI -
829205
PH :0651-6458222, 9534199997.

RAMGARH

542. HINDUSTAN AUTO AGENCY (AV01-AV-01),
MARAR, RANCHI ROAD (NH-33), RAMGARH -
829122
PH :9263631320.

RANCHI

543. PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48 ,
KOKAR INDUSTRIAL AREA, RANCHI.
PH :0651-2544661, 2542650.
544. PREMSONS MOTORS UDYOG PVT LTD
(5103-51-01), 502, KANKE ROAD, RANCHI. -
834008
PH :0651-2231686, 9304807349.
545. PREMSONS MOTOR UDYOG PVT. LTD.
(5103-51-03), 10/P, NAMKUM INDUSTRIAL
ESTATE,BEHIND HIGH TENSION INSULATOR
FACTORY, LOWER CHUTIA, RANCHI - 834010
PH :0651-3210400, 3190400/9304807354.
546. PREMSONS MOTOR UDYOG PVT. LTD.
(5103-51-05), PLOT NO.31 & 134, JOHNSON
MORH, TUPUDANA INDUSTRIAL AREA,
TUPUDANA, RANCHI - 834003
PH :0651-6560180.
547. SUDHA BUSINESS ENTERPRISES PVT. LTD.
(5107-51-02), PLOT NO. 74, OPPOSITE OTC
GROUND, HEHAL, RATU ROAD, RANCHI,
JHARKHAND - 834005
PH :9534199997.
548. SUDHA BUSINESS ENTERPRISES PVT. LTD.
(5107-51-03), PLOT NO. 39, NEAR BOOTY MORE,
RANCHI-RAMGARH ROAD, RANCHI. - 835217
PH :9534199997.

KARAIKAL

549. SHENBAKA CARS PVT. LTD. (CCF1-CCF-01), R.
S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK,
NO. 3, KARAIKAL NAGORE MAIN ROAD,
VILLAGE - ODUTHURAI REVENUE, NERAVY
COMMUNE, KARAIKAL MUNICIPALITY,
KARAIKAL. - 609602
PH :4368-227800/1/2.

KARNATAKA

ANEKAL

550. PRATHAM MOTORS (0205-FA-04), SY#45/3,
KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL
TALUK - 562106
PH :080-9343222764.

ANKOLA

551. BHARATH AUTO CARS PVT LTD (FC02-FC-01),
NEAR NARAYANA TEMPLE KAKKAR MUTTA,
BELEGUJ CROSS, ANKOLA, UK DISTRICT -
581314
PH :08388-231330.

ATHANI

552. SHANTESHA MOTORS (BWA1-BWA-01), RS NO.
605, SHIVAYOGI NAGAR, BIJAPUR ROAD,
ATHANI, DIST. - BELGAUM. - 591304
PH :8289-8884472587, 9538715071.

ATHRADI

553. ABHARAN MOTORS (G601-UK-04), HERABETTU
ROAD ATHARDI UDUPI - 576107
PH :0820-6452061/2/3/4.

ATTIBELE

554. SURAKSHAA CAR CARE PVT. LTD.
(BMM1-BMM-01), SURVEY NO.227/8, SARJAPUR
MAIN ROAD, INDIABELE VILLAGE, OPP. TO
GOLDEN LIBERTY, ATTIBELE P.O.,
BANGALORE - 562107
PH :9449865665.

BAGALKOT

555. VIJAY MOTOWINGS (ZL01-ZL-01),
180/4-2,BELGUM RAICHUR ROAD,NEAR APMC
MARKET YARD, BAGALKOT - 587103
PH :08354-2001193/94.

BANGALORE

556. BIMAL AUTO AGENCY INDIA PVT. LTD.
(0216-02-01), 60/2, MAHADEVUPURA, WHITE
FIELD ROAD, BANGALORE - 560048
PH :080-30583361/2/3.
557. BIMAL AUTO AGENCY INDIA PVT. LTD.
(0216-02-02), NO. 69/2, SARAKKI, KANAKAPURA
ROAD, BANGALORE - 560078
PH :080-30482295/6/3/1.
558. BIMAL AUTO AGENCY INDIA PVT. LTD.
(0216-02-03), NO.7/1, KALANAAGRAHARA
VILLAGE, MOUNT ST. JOSEPH TRAINING
COLLEGE FOR JESUITS COMPOUND, IIMB
POST, BANNERGHATTA RD. , BANGALORE -
560076
PH :080-30280511/12.
559. BIMAL AUTO AGENCY INDIA PVT. LTD.
(0216-02-04), 6TH CROSS, OFF OLD AIRPORT
ROAD, HAL 2ND STAGE POST, BANGALORE -
560038
PH :080-305584638/41/42, 9845026252.
560. BIMAL AUTO AGENCY INDIA PVT. LTD.
(0218-02-01), NO. - 60/3, VENKATALA VILLAGE,
YELAHANKA HOBLI, BANGALORE NORTH
TALUK - 560064
PH :080-30088001-09.

561. GARUDA AUTOCRAFT PVT LTD (0212-02-01),
SURVEY NO. 13, 11TH KM., KANAKPURA ROAD,
BANGALORE - 560062
PH :080-26322500/2/3.

562. GARUDA AUTOCRAFT PVT LTD (0212-02-02),
119/1, 11TH
CROSS,MALLESHWARAM,BANGALORE, -
560003
PH :080-23460136/140/142.

563. KALYANI MOTORS (P) LTD (0211-02-01),
MYSORE ROAD,PANTHARAPALYA,KENGRI
HOBLI,BANGALORE - 583201
PH :080-28606004/05/06/07.

564. MANDОВI MOTORS PVT LTD (0201-02-01),
24/4,7TH MAIN,WILSON GARDENS,BANGALORE
- 560027
PH :080-22233763.

565. MANDОВI MOTORS PVT LTD (0201-02-05),
NO.2/106 (NEXT TO KASSIA BLDG.),17TH
CROSS,MAGADI CHORD ROAD EXTN.
VIJAYANAGAR,BANGALORE - 560079
PH :080-23400685.

566. MANDОВI MOTORS PVT LTD (0201-02-07),
17/A-2&3 IND. SUBURB.IIND STAGE,
GORAGUNTEPALAYA, TUMKUR ROAD.
YESWANTHPUR, BANGALORE - 560022
PH :080-23374130.

567. MANDОВI MOTORS PVT LTD (0201-02-08), NO.
70 SARAKKI INDUSTRIAL LAYOUT,J.P
NAGAR,3RD PHASE, BANGALORE - 560078
PH :080-26589945 /26584363.

568. MANDОВI MOTORS PVT LTD (0201-02-0C), NO 1
TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN,
RAJAJINAGAR INDUSTRIAL TOWN,
BASAWESHWAR NAGAR - 560044
PH :080-23158777/23159777.

569. MANDОВI MOTORS PVT LTD (0201-02-0D), 6/8,
SHREE GANGA GARDEN, GANGA NILAYA,
HENNUR CROSS, KALYANAGAR POST - 560043
PH :080-25445560/61.

570. PRATHAM MOTORS (0205-02-01), 16,
BALLANDUR, SARJAPUR RING ROAD,
BANGALORE - 560037
PH :080-41262929.

571. PRATHAM MOTORS (0205-02-02), STHANIKAM'S
ARCADE, OPP. ST THERESA HOSPITAL, DR.
RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2
STAGE, BANGALORE - 560010
PH :080-30141800.

572. PRATHAM MOTORS (0205-02-03), NO. 319 -324
.QUEENS ROAD CROSS, BANGALORE. - 560001
PH :080-30741700.

573. RNS MOTORS (7301-02-03), 2275 TUMKUR
ROAD, GURGUNTEPALYA, YESHWANTPUR,
BANGALORE - 560022
PH :080-23474354-58.

574. RNS MOTORS (7301-02-04), HOSUR
ROAD,BOMMANAHALLI,MADIVALA
POST,BANGALORE - 560068
PH :080-24115901.

575. RNS MOTORS (7301-02-06), TUMKUR ROAD,
NH-4, YESHWANTPUR, BANGALORE - 560022
PH :0836-43479803-15 /14.

576. SAGAR AUTOMOBILES (0203-02-01), 39/2
BANNERGHATTA
ROAD,BYRASANDRA,BANGALORE - 560029
PH :080-30426063/2.

577. SAGAR AUTOMOBILES (0203-02-02), 28/1
KANAKPURA
ROAD,BASANAVAGUDI,BANGALORE - 560004
PH :080-41204666.

578. SURAKSHAA CAR CARE PVT LTD (0280-02-01),
30/3 K AGRAHARA, HOSUR MAIN ROAD,
ELECTRONIC CITY, BANGALORE
PH :080-28522222/3/4.

579. MANDОВI MOTORS PVT LTD (0201-02-9B), PLOT
NO -257/1-13, BANNERGHATTA ROAD, N.S.
PALYA, BANGALORE - 560076
PH :080-26681323,26589945.

580. KALYANI MOTORS (KR PURAM) (0213-02-02),
SY. NO.-58/1A & 61/22, AVALAHALLI, NH-4, K.R.
PURAM, BANGALORE. - 560049
PH :080-33235000.

581. KALYANI MOTORS PVT. LTD. (0213-02-03),
NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO
BROOKE FIELD HOSPITAL, BROOKFIELD,
BENGALURU. - 574239
PH :080-40419000.

582. SURAKSHAA CAR CARE PVT. LTD. (0280-02-02),
#54/1, BOMMANAHALLI, HOSUR MAIN ROAD,
BANGALORE - 560068
PH :080-25732018.

583. KALYANI MOTORS PVT LTD (0213-02-04),
250/1,BILEKAHALLI, BANNERGHATTA ROAD,
BENGALURUE - 560076
PH :080-803041911.

584. SURAKSHAA CAR CARE PVT. LTD. (0280-02-03),
NO.64, POTHALAPPA GARDEN, LASHKAR
BUILDING, HOSUR ROAD, ADUGODI,
BANGALORE. - 560030
PH :08153-290299.

585. BIMAL AUTO AGENCY (0218-02-04), PLOT
NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL
AREA, BANGALORE - 560058
PH :9945237213.

586. PRATHAM MOTORS (0205-02-05), #58/5 KUDLU
VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR
HOBLI, ANEKAL TALUK, BANGALORE - 560034
PH :080-30712020.

DEALER WORKSHOP (AS ON 01.04.2017)

587. RNS MOTORS LIMITED (7301-02-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158
PH :080-43110200.

588. GARUDA AUTOCRAFT PVT LTD (0212-02-03), 10/1, HEBBAL , AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024
PH :080-23621332.

589. BIMAL AUTO AGENCY INDIA PVT. LTD. (0296-02-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066
PH :080-30693069.

590. SURAKSHAA CAR CARE PVT. LTD. (0280-02-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034
PH :080-25529099/10/01.

591. KALYANI MOTORS PVT LTD. (0287-02-01), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056
PH :080-30036333.

592. MANDОВI MOTORS PVT LTD (0201-02-0G), NO. 42/2, CENTRAL STREET, NEXT TO SANGEETH THEATRE, SHIVAJI NAGAR, BANGALORE, KARNATAKA - 560003
PH :9731407344.

593. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033
PH :080-41143188.

594. MANDОВI MOTORS PVT LTD (0201-02-0H), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093
PH :080-25341144/77.

595. KALYANI MOTORS PVT. LTD. (0213-02-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. - 560043
PH :080-9900599946.

596. KATARIA AUTOMOBILES PVT. LTD. (0294-02-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST - AADUGODI, BANGALORE. - 560030
PH :080-9998086020.

597. MANDОВI MOTORS PVT. LTD. (0201-02-01), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASAPURA, KENGERI HOBLI, UTTARAHALLI, BANGALORE - 560060
PH :9945235516.

598. MANDОВI MOTORS PVT LTD (0201-02-0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE.EAST TALUKA. - 560102
PH :080-25747784/76/82/63/64.

599. RNS MOTORS (7301-02-0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092
PH :080-23534286.

600. VARUN MOTORS PVT. LTD. (0292-02-01), HNO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE - 560022
PH :080-23085555, 9985344244.

601. VARUN MOTORS PVT. LTD. (0292-02-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073
PH :7338286729.

BANGARPET

602. SURAKSHA CAR CARE PVT. LTD. (0R04-OR-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114
PH :082153-290299.

BANTWAL

603. MANDОВI MOTORS PVT LTD (TR01-TR-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARNATAKA - 574231
PH :080-2410123.

BELGAUM

604. SHANTESHA MOTOR (P) LTD (E801-E8-01), MUJAWAR COMPOUND,NEHRU NAGAR,BELGAUM, - 590010
PH :0831-2473308/4204523/2476162.

605. SHANTESHA MOTOR (P) LTD (E801-E8-03), PLOT NO. 5,AZAMNAGAR,BELGAUM, - 590006
PH :0831-2470871.

606. SHANTESHA MOTOR (P) LTD (E801-E8-04), PLOT NO. 8, SURVEY NO. 251/51, HAVLOCK ROAD CAMP, BELGAUM - 290010
PH :0831-2425001/2.

BELLARY

607. K P F PVT. LTD (G201-G2-01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101
PH :08392-237666/685.

608. K P F PVT. LTD (G201-G2-03), 1ST CROSS, OPP. WOMAN'S COLLEGE, BESIDE CS MULTI SPECIALITY HOSPITAL, BELLARY. - 583103
PH :08392-258900.

BELTHANGADY

609. BHARATH AUTO CARS PVT LTD (4503-HM-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214
PH :08256-234130.

BHATKAL

610. BHARATH AUTO CARS PVT LTD (CEF1-CEF-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320
PH :8382-9448979530.

BIDAR

611. LAHOTI MOTORS PVT. LTD. (EX01-EX-01), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402
PH :08482-232975.

BIJAPUR

612. RNS MOTORS (7301-T7-01), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109
PH :08352-242821.

BYNDOOR

613. ASHARAN MOTORS PVT. LTD. (BUH1-BUH-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 68, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214
PH :08254-7899751777.

CHAMRAJ NAGAR

614. MANDОВI MOTORS PVT. LTD. (0E01-0E-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313
PH :08226-222857/858.

CHANNAGIRI

615. SHRUTI MOTORS (BUQ1-BUQ-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213
PH :08189-7899934143.

CHANNAPATNA

616. KALYANI MOTORS PVT LTD (BSX1-BSX-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160
PH :080-28078999.

CHANNARAYAPATNA

617. VENKAT MOTORS (HC01-HC-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116
PH :08172- 256622, 09844377477.

CHICKBALLAPUR

618. BIMAL AUTO AGENCY INDIA PVT. LTD. (KJ02-KJ-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101
PH :08156-300500/02/1.

CHIKMANGALORE

619. SHRUTI MOTORS (B701-3F-02), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102
PH :08262-221183,221184.

CHIKODI

620. SHANTESHA MOTORS (E801-ZB-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201
PH :08338-273120,272744.

CHINTAMANI

621. PRATHAM MOTORS PVT. LTD (0205-BQ-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASAPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125
PH :7899761301.

CHITRADURGA

622. SAKETH AUTOMOBILES (AL01-AL-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130
PH :08132-221414.

DAVANGERE

623. SHRUTI MOTORS (S101-S1-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004
PH :08192-9663377655.

DEVANAHALLI

624. BIMAL AUTO AGENCY (WH01-WH-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110
PH :080-27681778.

DHARWAD

625. REVANKAR MOTORS PVT. LTD. (BIX1-BIX-01), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001
PH :0836-2444666.

GADAG

626. RNS MOTORS (7301-RK-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG - 582103
PH :08372-230072,230076.

GANGAWATHI

DEALER WORKSHOP (AS ON 01.04.2017)

627. MUNEER CARS (N701-KA-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, - 583227
PH :08533-270055.

GAURIBIDANUR

628. MANDОВI MOTORS PVT LTD (BUY1-BUY-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210
PH :9945235531.

GOKAK

629. SHANTESHA MOTORS PVT LTD (IR01-IR-01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307
PH :08332-226006.

GONIKOPPAL

630. MANDОВI MOTORS PVT LTD (2501-U3-07), KAIKERY VILLAGE,GONIKOPPAL,, - 571213
PH :08274-279801.

GULBARGA

631. LAHOTI MOTORS (E902-E9-01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104
PH :08472-258142.

HAGARIBOMMANAHALLI

632. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT. LTD.) (BUX1-BUX-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212
PH :08394-266227.

HASSAN

633. VENKAT MOTORS (C802-C8-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201
PH :08172-243405/404.

HAVERI

634. REVANKAR MOTORS PVT LTD (BBM1-BBM-01), NEAR TMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110
PH :08375-235900.

HOSKOTE

635. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-SM-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT - BANGALORE - 562114
PH :080-8111398104.

HOSPET

636. MUNEER CARS (N701-N7-01), BELLARY ROAD,SANKLAPUR,HOSPET , - 583203
PH :08394-266226.

HUBLI

20

637. RNS MOTORS (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025
PH :0836-2271825/2271239.

638. RNS MOTORS (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030
PH :0836-2236051/52

639. REVANKAR MOTORS PVT LTD (7303-73-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029
PH :0836-6613332.

KADABA

640. MANDОВI MOTORS PVT LTD (BYE1-BYE-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA - 574221
PH :08251-260351.

KADUR

641. SHRUTI MOTORS (BQS1-BQS-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548
PH :7022007621.

KANAKAPURA

642. KALYANI MOTORS PVT. LTD. (BXY1-BXY-01), SURVEY NO. 447/1B, KASABA HOBI, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. - 562117
PH :9900050130.

KARKALA

643. ABHARAN MOTORS (G601-HY-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104
PH :08258-233055,233085.

KARWAR

644. BHARATH AUTO CARS PVT LTD (BJ01-BJ-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. - 581301
PH :08382-265530.

KENGERI

645. KALYANI MOTORS (P) LTD (0211-HP-03), RV COLLEGE,KENGERI,BANGALORE,,,, - 560059
PH :080-28607057.

KOLAR

646. MANDОВI MOTORS PVT LTD (0201-QU-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101
PH :8152-210077.

KOPPAL

647. KPF PVT LTD (ER01-ER-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238
PH :08539-225500.

KUMTA

648. BHARATH AUTO CARS PVT LTD (AFA2-AFA-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334
PH :08386-223330.

KUNDAPUR

649. ABHARAN MOTORS (G601-CY-02), NH-17, THAKKATTE, KUNDAPURA - 272877
PH :08254-272877.

KUNIGAL

650. SAKETH AUTOMOBILES (VQ01-VQ-01), NEAR KRS AGRAHARA,BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130
PH :08132-221414.

KUSHAL NAGAR

651. MANDОВI MOTORS (VN01-VN-01), SY NO.88,MADAPATANA,KUSHAL NAGAR,SOMYARPUR,NORTH KODAGU, KARNATAKA - 571234
PH :08276-272365,273365.

LINGASUGUR

652. MUNEER CARS (A UNIT OF MUNEER ENTERPRISES PVT. LTD.) (BOQ1-BOQ-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122
PH :8532-251555.

MADIKERI

653. FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-QX-02), BASAPPA THEATURE BUILDING, DASAWAL ROAD,MADIKERI KODAGU DISTRICT. - 571201
PH :08272-222900, 9741785533,9741785588.

MANDYA

654. MANDОВI MOTORS PVT LTD (2501-BD-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, - 571401
PH :08232-230260.

MANGALORE

655. BHARATH AUTO CARS PVT LTD (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAI, NEAR A.J. HOSPITAL, MANGALORE - 575004
PH :0824-2223030.

656. MANDОВI MOTORS PVT LTD (4502-45-01), ARVIND BUILDING, BALMATTIA ROAD, HAMPANKATTA, MANGALORE - 575001
PH :0824-2410123, 2410128.

657. MANDОВI MOTORS PVT LTD (4502-45-03), NO., HASSAN GROWTH CENTRE ADYAR,N.H. -48, MANGALORE - 575007
PH :0824-2275123.

658. MANDОВI MOTORS PVT LTD (4502-45-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008
PH :0824-3194123.

659. BHARATH AUTO CARS PVT LTD (4503-45-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002
PH :0824-222330.

660. MANDОВI MOTORS PVT LTD (4502-45-08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575002
PH :0824-2985123.

MUDBIDRI

661. BHARATH AUTO CARS PVT LTD (4503-HN-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227
PH :08258-238630.

MULKI

662. BHARATH AUTO CARS PVT LTD (4503-QV-05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154
PH :0824-2293030.

MURUDESHWAR

663. RNS MOTORS (7301-T8-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350
PH :08385-260295/96/97.

MYSORE

664. FRIENDLY MOTORS (2502-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008
PH :0821-4005200.

665. MANDОВI MOTORS PVT LTD (2501-25-05), NO.182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011
PH :0821-4244417 /4000001.

666. MANDОВI MOTORS PVT LTD (2501-25-08), 217/2., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017
PH :0821-4009900.

667. MANDОВI MOTORS PVT LTD (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005
PH :0821-4240000.

NANJANGUD

DEALER WORKSHOP (AS ON 01.04.2017)

668. FRIENDLY MOTORS (BYK1-BYK-01),
4340/4159/4, HULLAHALLI ROAD, NANJANGUD,
DISTRICT – MYSORE, KARNATAKA - 571301
PH :8221-297444, 7259255558.

NELAMANGALA

669. RNS MOTORS LIMITED (BBH1-BBH-01),
NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4,
NELAMANGALA, BANGALORE RURAL DT.,
BENGALURU, KARNATAKA - 562123
PH :080-27700245.

PUTTUR

670. BHARATH AUTO CARS PVT LTD (4503-CZ-02),
NEAR RAILWAY STATION, HARADY, PUTTUR -
517583
PH :08251-230230.

RAICHUR

671. MUNEEER CARS (N701-3K-02),
#12-10-64,GOUSHAL ROAD,SIYA TALAB
AREA,RAICHUR - 584101
PH :08532-9449870774.

RAMANAGARAM

672. KALYANI MOTORS (P) LTD (0211-JB-02),
#K1318/2034C,OPP TO ROTARY HOSPITAL,BM
ROAD, RAMNAGARAM - 571511
PH :080-27275991/2/3/4.

SAGAR

673. SHRUTI MOTORS (WF01-WF-01), BESIDE H
GANAPATHIYAPPA PETROL BUNK (BP), B H
ROAD, NH-206, SAGAR, SHIMOGA DISTT. -
577401
PH :08183-222123.

SHIMOGA

674. SHRUTI MOTORS (B701-B7-01), K.NO 599,
SHANKARMUTT ROAD, SHIMOGA - 577201
PH :08182-277976.
675. SHRUTI MOTORS (B701-B7-03), BLOCK L-1,
INDUSTRIAL ESTATE, BEHIND HP PETROL
BUNK, SAGAR ROAD, SHIMOGA - 577204
PH :08182-250177,277976.
676. SHRUTI MOTORS (B701-B7-05), SURVEY NO.
41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR,
SHIMOGA.
PH :08182-9845399367.

SIDDAPUR

677. BHARATH AUTO CARS PVT. LTD.
(BPY1-BPY-01), SURVEY NO. 211, NEAR IOCL
PETROL BUNK, JOG ROAD, VILLAGE – HOSUR,
TALUK – SIDDAPUR, DISTRICT – UTTARA
KANNADA - 581355
PH :581355, 9448979530.

SINDHANUR

678. KPF MOTORS PVT LTD (FX01-FX-01), SURVEY
NO. 755/1, DOOR NO. 6-1-216/3 WARD NO. 19,
GANGAVATHI ROAD, SINDHANUR, RAICHUR,
KARNATAKA - 584128
PH :08535-221299.

SIRSI

679. RNS MOTORS (7301-MQ-0D), K H B COLONY,
SIRSI - 581402
PH :08384-234854.

SULLIYA

680. MANDОВI MOTORS PVT LTD (4502-EW-04),
ODABAI SULLIA,MANGALORE MYSORE
ROAD KARNATAKA - 574239
PH :08257-232325,232317.

SURATHKAL

681. MANDОВI MOTORS PVT LTD (4502-7G-02),
KANA ROAD, SURATHKAL - 574158
PH :0824-4256987/4258989.

THOKOTU

682. BHARATH AUTO CARS PVT LTD (QW01-QW-01),
NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA
KANNADA DISTT. - 575017
PH :0824-2464630.

TIPTUR

683. SAKETH AUTOMOBILES (H101-HV-03),
BANDIHALLI INDUSTRIAL ESTATE, N.H.:206,
TIPTUR, KARNATAKA - 572201
PH :08134-253663.

TUMKUR

684. SAKETH AUTOMOBILES (H101-H1-01), SIRA
ROAD, TUMKUR - 572106
PH :0816-2256433/66.

UDUPI

685. ABHARAN MOTORS (G601-G6-01), N.H. 17,
NITTUR, UDUPI - 576103
PH :0820-6454111/222/333/777.
686. ABHARAN MOTORS PVT. LTD. (G601-G6-05), NO.
305/1C, DOOR NO. 5-51A, RAILWAY STATION
ROAD, INDRALI, UDUPI, DISTT. - UDUPI. -
576101
PH :9845242777.

UJIRE

687. BHARATH AUTO CARS PVT LTD
(BWT1-BWT-01), SURVEY NO.237-2B1,
MANGALORE-CHARMADY ROAD, NEAR INDIAN
OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE,
BELTHANGADY TALUKA, DISTT. DAKSHINA
KANNADA, KARNATAKA. - 574240
PH :8256-234230, 9986503030.

UPPINANGADI

688. MANDОВI MOTORS PVT LTD (4502-NL-05),
NR.PADMA VIDYA IOC PETROL STATION-34,
NEKKILADY, UPPINANGADY - 574241
PH :08251-252123/128/129.

VITTALA

689. MANDОВI MOTORS PVT. LTD. (CCE1-CCE-01),
DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL
TOWN, TALUKA – BANTWAL, DISTRICT –
DAKSHIN KANNADA - 574243
PH :8255239123.

KERALA

ADOOR

690. INDUS MOTOR CO. PVT. LTD. (2702-CJ-0A), M.
C. ROAD, MITHRAPURAM, ADOOR,
PATHANMTHITTA - 689518
PH :04734-9745998303.

691. AVG MOTORS LTD. (Y501-CJ-02), KOTTAMUKAL,
K.P. ROAD, ADOOR PO, PATHANAMTHITTA,
KERALA - 691523
PH :04734-9446355900.

ALAPPUZA

692. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (E501-E5-01), CCSB ROAD, CHUNGAM,
ALLEPPY, - 689011
PH :477-9847580000.

693. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (E501-E5-03), PATHIRAPALLY, NH-47,
ALAPPUZA - 688521
PH :0477-9747022412.

ALATHUR

694. BRD CAR WORLD PVT LTD (BRW1-BRW-01),
SURVEY NO. 456/8, 455/8, 455/9,
ERATTUKKULAM, KATTUSSERY VILLAGE,
ALATHUR TALUKA, PALAKKAD DISTRICT,
KERALA - 678682
PH :9745634999.

ALUVA

695. BRD CAR WORLD LTD. (A404-CBQ-09), RE
SURVEY NO.330/7, NH-47, KUNNAMPURAM,
PO-DESHAM PANCHAYATH, CHENGAMANAD,
ALUVA. - 683102
PH :0484-8589094913.

ANGAMALY

696. INDUS MOTOR CO. PVT. LTD. (2702-JW-0F),
ANGAMALY KALADY ROAD, MC ROAD,
ANGAMALY - 683572
PH :9745998434.
697. POPULAR VEHICLES & SERVICES LTD.
(2701-JW-0D), 182-AIRPORT JUNCTION
NAGAR,M. C. ROAD,ANGAMALY - 683572
PH :8086898002.

ATTINGAL

698. POPULAR VEHICLES & SERVICES LTD.
(1601-SX-07), PALAMKONAM,
PERUNKULAM,VIA-ALAMCODE, ATTINGAL -
695102
PH :8086078788.

BALARAMAPURAM

699. POPULAR VEHICLES & SERVICES LTD.
(1601-AQA-11), POOVAR ROAD, VAZHIMUKKU,
BALARAMAPURAM P.O., TRIVANDRUM
DISTRICT - 695501
PH :0471-8943345922.

CALICUT

700. INDUS MOTOR CO. PVT. LTD. (4701-47-01),
MARUTI WORKSHOP, PANIKKER ROAD,
CALICUT, NADAKKAVE - 673011
PH :0495-9745998019.

701. INDUS MOTOR CO. PVT. LTD. (4701-47-06),
KOYA ROAD JUNCTION, PUTHIYANCADI, POST
WEST HILL, CALICUT - 673005
PH :0495-9745998020.

702. INDUS MOTOR CO. PVT. LTD. (4701-47-08),
NEAR STEEL COMPLEX, NALLALAM, CALICUT -
673655
PH :0495-9745998018.

703. POPULAR VEHICLES & SERVICES LTD.
(4702-47-02), BEHIND MIMS,
EASWARAMANGALAM ROAD, GOVINDAPURAM
P.O., CALICUT - 673016
PH :0495-8086078650.

704. POPULAR VEHICLES & SERVICES LTD.
(4702-47-07), NH-17 BYE PASS,PACHAKKIL,
MALAPARAMBU P.O., KOZHICODE, CALICUT -
673009
PH :8086078651.

CHALAKUDI

705. BRD CAR WORLD (ZJ02-ZJ-01), MURINGOOR
P.O., CHALAKUDY - 680316
PH :0480 -9567869239.

CHALLAKUDDY

706. POPULAR VEHICLES & SERVICES LTD.
(2701-8U-0C), OPPSITE CCMK HOSPITAL,
VELLIKULAM ROAD, CHALAKUDY, KERALA -
680307
PH :9946104653.

CHANGARAMKULAM

707. A M MOTORS (VH01-VH-01), MELE
MANTHADAM, ALANKODE, P.O.,
CHANGARAMKULAM, MALAPPURAM DISTT,
KERALA - 679585
PH :9895756008.

CHAVAKAD

DEALER WORKSHOP (AS ON 01.04.2017)

708. BRD CAR WORLD LTD. (A404-0J-06),
ORUMANAYOOR P.O.CHAVAKKAD,
DISTRICT-THRISSUR - 680512
PH -9645963999.

CHENQANNUR

709. SARATHY AUTO CARS (C701-UL-06),
PRAVUMKOD, THIRUVANVANDOOOR P.O.
CHENGANNUR TALUK, ALAPPUZHA (DIST) -
689124
PH :9947270665.

CHERPULASSERY

710. KVR AUTO CARS PVT LTD (NB01-NB-01),
SURVEY NO. 154/4, RS NO. 154/4, VILLAGE –
CHERUPPALASSERY, TALUK – OTTAPPALAM,
DISTRICT – PALAKKAD - 679503
PH :04662-9747020582, 280100.

CHERTHALA

711. INDUS MOTOR CO. PVT. LTD. (VL03-VL-01),
OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O.,
KANJIKKUZHI,CHERTHALA, ALAPPUZHA-DIST. -
688552
PH :9745997633.

CHINGAVANAM

712. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (I601-16-01), SURVEY NO.290/9, 290/9/2,
MAVILANGU KARA, CHINGAVANAM P.O., DISTT.
KOTTAYAM (KERALA) - 686531
PH :9847315969.

CHULLIMANOOR

713. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (BA11-BA1-01), RE-SURVEY NO. 43/7,
VILLAGE – ANAND, TALUKA – NEDUMANGAD,
DISTRICT – TRIVANDRUM, KERALA. - 695541

COCHIN

714. INDUS MOTOR CO. PVT. LTD. (2702-27-02),
BEHIND COMMERCIAL SALES TAX, M.G. ROAD,
COCHIN. - 682015
PH :484-9745998040.
715. INDUS MOTOR CO. PVT. LTD. (2702-27-09),
PALARIVATTOM KAKANAD ROAD, KAKANAD,
COCHIN. - 682030
PH :0484-9745998013.
716. POPULAR VEHICLES & SERVICES LTD.
(2701-27-01), PERANDOOR ROAD, PUNNAKAL,
ELAMAKKARA, COCHIN - 682025
PH :0484-9846017725.
717. POPULAR VEHICLES & SERVICES LTD.
(2701-27-04), NEAR LISI HOSPITAL, OPP. IMA
BLOOD BANK, COCHIN. - 682018
PH :9846498616.
718. SAI SERVICE PVT. LTD. (2705-27-01), 50/1 15L,
,CHERANALLOOR ROAD,EDAPPALLY,COCHIN -
682024
PH :484-9645106195.

719. SAI SERVICE PVT. LTD. (2705-27-02),
NH-47, PATHADIPALAM,EDAPPALLY,COCHIN -
682024
PH :9645105057.

720. INDUS MOTOR CO. PVT. LTD. (2702-27-0H),
LAKSHMI DIARY CAMPUS, OPP-HOTEL SILVER
SAND ISLAND, VYTILA, COCHIN - 682019
PH :9745992070.

721. SAI SERVICE PVT. LTD. (2705-27-08),
KETTEZHUTHUM KADAVU, INTUC JUNCTION,
NETTOOR, ERNAKULAM, COCHIN (KERALA) -
682040
PH :9645106339.

722. GEORGE MAJO AUTOMOBILES PVT. LTD.
(2709-27-01), DOOR NO.5/452, 5/452A, 5/453,
OLD ELOOR ROAD, ELOOR JUNCTION, NORTH
KALAMASSERY, DISTRICT - ERNAKULAM,
COCHIN. - 683104
PH :0484-7559997864, 4237700.

EDAPPAL

723. POPULAR VEHICLES & SERVICES LTD.
(4702-AM-05), KOZHIKODA ROAD, KAVILPADY,
EDAPPAL, MALAPPURAM - 679582
PH :9946104680.

ERNAKULAM

724. AUTOTEAM SALES & SERVICES PVT.LTD
(2781-27-01), PIPELINE ROAD, PADIVATTOM,
COCHIN, ERNAKULAM, COCHIN
PH :9847521112.

FORT KOCHI

725. SAI SERVICE PVT. LTD. (BRS1-BRS-01), PLOT
NO.83/1,2 OPPOSITE TO KUMAR PETROL
PUMP, STATUE ROAD, CHULLIKKAL POST,
FORT KOCHI - 682005
PH :9645106138.

IRINJALAKUDA

726. BRD CAR WORLD LTD. (A404-KQ-05),
KARUPADANNA P.O., IRINJALAKUDA,
THRISSUR - 680670
PH :9539006999.

IRITTY

727. INDUS MOTORS CO. PVT. LTD. (R002-VJ-02),
SURVEY NO. 48, BUILDING NO. 214,
PERUPARAMBA, IRIITTY, KANNUR, KERALA -
670703
PH :9747554929.

KAIPAMANGALAM

728. SAI SERVICE PVT. LTD. (2705-RP-07),
VAZHIYAMBALAM PO,
KAIPAMANGALAM,THRISSURE - 680681
PH :9645105053.

KALAMASSERY

729. INDUS MOTOR CO. PVT. LTD. (2702-Q3-07),
KALAMASSERY, ALUVA WEST, ERNAKULAM
DIST, KERALA - 683106
PH :0484-9745998012.

KALLAMBALAM

730. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (1603-QZ-04), DOOR # MP/2/500,
KAVALAYOOR PANCHAYAT, KALLAMBALAM,
CHIRAYINKEEZHU TALUKA, TRIVANDRUM -
695605
PH :8086079100.

KALPETTA

731. INDUS MOTOR CO. PVT. LTD. (4701-JE-0C),
MEENANGADI, KAKKAVAYAL P.O., NORTH
KALPETTA,WAYAND - 673591
PH :9745998592.

KANHANGAD

732. KVR CARS (3L01-K2-02), ARANGADI, P.O.
KANHANGAD, DIST. KASARGOD, - 671315
PH :9605040999.

733. POPULAR VEHICLES & SERVICES LTD.
(4702-K2-06), HIGHWAY JUNCTION,KANHANGAD
SOUTH P.O.,KANHANGAD - 689641
PH :468-9846400300.

734. INDUS MOTOR CO. PVT. LTD. (4701-K2-0F),
SURVEY NO.491/3A1 AND 491/3A2, AJANUR
VILLAGE, KANHANGAD, HOSADURGA TALUK,
KASARAGOD DISTT, KERALA. - 671541
PH :9745998024.

KANJIRAPALLY

735. INDUS MOTOR CO. PVT. LTD. (7E01-9Y-02),
VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM
P.O., KANJIRAPALLY - 686506
PH :9745998009.

KANNUR

736. HAR CARS (K101-K1-01), HAR AVENUE,
KANNOOTHUMCHAL, CHOVVA POST, KANNUR -
670006
PH :0497-9539009392.

737. HAR CARS (K101-K1-03), POTTIAN SHEKHARAN
ROAD, MAKKANY , SOUTH BAZAR, KANNUR -
670002
PH :9539009405.

738. INDUS MOTORS CO (P) LTD (4701-K1-0E),
BALANKINAR JN., KATTAMPALLY.P.O, KANNUR
- 690011
PH :0497 -9745998023.

739. KVR CARS (3L01-K1-04), CP-3-651-B, OPP.
DHANRAJ TALKIES, PUTHIYATHERU,
CHIRAKKAL POST, KANNUR, KERALA - 670011
PH :0497-7558028889.

740. POPULAR VEHICLES & SERVICES LTD.
(4702-K1-0F), PLOT NO.82/6A, NEAR
CHARAPPURAM SREEMUTHAPPAN KAVU,
KAPPAD ROAD, THAZHE CHOVVA (PO),
KANNUR - 670018
PH :0497-9846400300.

KARIKKAD

741. BRD CAR WORLD LTD. (A404-GE-02), BRD
INDUSTRIAL ESTATE,KARIKKAD,
KUNNAMKULAM - 680519
PH :9995804599.

KARUNAGAPALLY

742. SARATHY AUTO CARS (C701-AQ-05), K.S.
PURAM,NEELIKULAM,
KARUNAGAPPALLY,KOLLAM, - 690544
PH :9947277765.

KASARGOD

743. KVR CARS (3L01-3L-01), ANANGUR,
VIDYANAGAR (PO), NH17, KASARGOD - 671123
PH :04994-9747011100.

744. POPULAR VEHICLES & SERVICES LTD.
(4702-3L-0D), MUNDAKULAM, CHEMMANAD
(PO), KASARGOD - 671371
PH :4994-8086078864.

745. INDUS MOTORS CO. PVT. LTD. (R002-3L-03),
SURVEY NO.384/3C 10, MUTTATHODY VILLAGE,
INDIRA NAGAR, KASARAGOD - 671541
PH :9747550747.

KATTAPANA

746. INDUS MOTOR (ZN01-ZN-01),
KATTAPPANA-IDUKKI KAVALA, BYE PASS
ROAD, KATTAPPANA, IDUKKI (DIST.). - 685508
PH :04868-9746743460.

KAYAMKULAM

747. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (E501-8L-04), NH-47, KOTTUKULANGARA
JUNCTION, KAYAMKULAM, ALLAPPUZHA
DIST,KERALA - 690502
PH :0479-9947040824.

748. INDUS MOTOR CO. PVT. LTD. (2702-8L-05),
KARIYILAKULANGARA, KAYANKULAM P.O.,
ALAPPUZHA DISTT. - 690572
PH :0479-9745998005.

749. POPULAR VEHICLES & SERVICES LTD.
(B802-8L-03), NH 47, KOTTUKULANGARA,
KAYAMKULAM P.O., ALAPPUZHA DISTT. -
690502
PH :0479-9946105601.

KILLIPPALAM

750. POPULAR VEHICLES & SERVICES LTD.
(1601-16-05), OPP. ST. JUDE CHURCH,CIT
ROAD, KILLIPPALAM,TRIVANDRUM - 695002
PH :8589992434.

DEALER WORKSHOP (AS ON 01.04.2017)

KODANGALLUR

751. SAI SERVICE PVT. LTD. (2705-8K-03),
NH-17,T.K.S.PURAM,,KODUNGALLOOR - 680667
PH :0480-8606980006.

KODUVALLY

752. A M MOTORS (BGX1-BGX-01), SURVEY NO:91/9,
91/10 NALLANKADY, VAVAD POST, KODUVALLY,
KOZHIIKODE DISTRICT, KERALA - 673572
PH :9895979023.

KOLLAM

753. INDUS MOTOR CO. PVT. LTD. (1602-Q4-03), OLD
SARATHY THEATRE, PUNALLOOR ROAD,
KOLLAM - 691005
PH :0474-9745998004.
754. POPULAR VEHICLES & SERVICES LTD.
(1601-Q4-04), H & C COMPOUND,
MUNDACKAL, KOLLAM - 680006
PH :0474-98464 98656.

KOLLAM (QUILON)

755. SARATHY AUTO CARS (C701-C7-01), NH-47 BYE
PASS,AYATHIL(P.O.),QUILON - 691017
PH :0474-9847072065.
756. SARATHY AUTO CARS (C701-C7-08), SURVEY
NO. (SIDCO) 318/1, SHED NO. B12,
UMAYANALLUR SIDCO INDUSTRIAL ESTATE,
KOLLAM. - 691589
PH :0474-9847072065, 2537280.

KONDOTTY

757. INDUS MOTORS CO. PVT. LTD. (ID02-ID-01),
SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY
NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY
PO, ERNAD TALUKA, MALAPURAM DISTRICT,
KERALA - 683573
PH :9745997875.

KOOTHATTUKULAM

758. SAI SERVICE PVT. LTD. (VM01-VM-01),
EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP.
MARYGIRI PUBLIC SCHOOL,
KOOTHATHUKULAM P.O., ERNAKULAM DT. -
686662
PH :0485-9645106258.

KOTHAMANGALAM

759. INDUS MOTOR CO. PVT. LTD. (7E01-9V-03),
PALAKKADAN
BUILDING,CHANKLAM,KOTHAMANGALAM -
686691
PH :9745998479.
760. POPULAR VEHICLES & SERVICES LTD.
(2701-9V-0B), NEAR BSNL OFFICE,
THANGALAM, KOTOHAMANGALAM, KERALA -
686691
PH :9946104661.

KOTTAKKAL

761. INDUS MOTOR CO. PVT. LTD. (4701-8M-09),
NEAR MATHRUBHUMI PRESS, P.O.
KOTTAKKAL, MALAPPURAM DIST, - 676503
PH :0493-9745998017.
762. POPULAR VEHICLES & SERVICES LTD.
(4702-8M-03), NH-17, , CHANDAPARAMBU,
,RANBATHANI P.O, MALAPPURAM, KOTTAKAL -
676510
PH :0483-9946104631.

KOTTARAKARA

763. CHITHIRA AUTOMOBILES (C781-S8-01),
RAILWAY STATION JUNCTION ,KOTTARAKARA
PH :0474-9447711001.

KOTTARAKKARA

764. POPULAR VEHICLES & SERVICES LTD.
(S801-S8-01), MYLOM, MC ROAD,
KOTTARAKKARA, DISTT-KOLLAM, KERALA -
691531
PH :8086073466.
765. SARATHY AUTO CARS (S802-S8-01), WARD
NO.40, MELILLIA PANCHAYATH, IPPALLOOR
LOWER KARIKAM, KOTTARKARA DISTT.
KOLLAM (KERALA) - 691531
PH :9947073065.

KOTTAYAM

766. AVG MOTORS LTD. (B801-B8-01),
ERAYILKADAVU, KOTTAYAM - 686001
PH :0481-9446323999.
767. INDUS MOTOR CO. PVT. LTD. (2702-B8-04),
MULANKUZHA JN., NATTAKOM P.O.,
KOTTAYAM , KERALA - 686013
PH :0481-9745998007.
768. INDUS MOTOR CO. PVT. LTD. (2702-B8-0C),
MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM -
686013
PH :9745998007.
769. POPULAR VEHICLES & SERVICES LTD.
(B802-B8-01), NEAR ST. THOMAS CHURCH, S.H.
MOUNT, P.O, KOTTAYAM - 686006
PH :0481-9539007400.

KOZHENCHERRY

770. AVG MOTORS LTD. (W801-AS-03),
KOZHENCHERRY, COLLEGE JUNCTION,
DISTRICT- PATHANAMTHITTA . - 689641
PH :9446492988.

KUNNAMKULAM

771. POPULAR VEHICLES & SERVICES LTD.
(2701-8N-07), CHOONDAL,TRISSUR ROAD,
KUNNAMKULAM, TRISSUR DIST - 680502
PH :0488-9846397066.

LAKKIDI PERUR

772. A M MOTORS LTD. (CER1-CER-01), 217/7, 217/2,
278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM,
LEKKIDI PERUR DISTT. PALAKKAD, - 679302
PH :8086305555.

MALAPURAM

773. A.M. MOTORS (E601-E6-01), VARANGODE,
DOWNHILL, MALAPURAM, - 676519
PH :493-9895705325.

MALLAPPALLY

774. INDUS MOTORS (I201-I2-01), THOPPIL
COMPLEX, MALLAPPALLY KOTTAYAM RD,
MALLAPPALLY WEST, MALLAPPALLY (KERALA)
- 689585
PH :9747541400.

MANJERI

775. A.M. MOTORS (E601-8V-05), THURAKKAL
BYPASS, MANJERI, MALAPURAM, KERALA -
676121
PH :9895756035.
776. K V R AUTO CARS PVT. LTD. (8V02-8V-01), CH
BYE PASS ROAD, MANJERI, MALAPPURAM,
KERALA - 676123
PH :9947020741.
777. POPULAR VEHICLES & SERVICES LTD.
(4702-8V-0E), NARUKARA VILLAGE, RAJIV
GANDHI BYEPASS JN., THURKAL, MANJERI
(KERALA) - 676121
PH :0483-8589992405.

MANNARKAD

778. A.M. MOTORS (E601-RA-07), NH-213,
MANNARKAD, DIST.-PALAKKAD - 678582
PH :9895979048.
779. INDUS MOTORS (2702-RA-0K), ANAKATTY
ROAD, AANDIPPADAM, NELLIPPUZHA-PO.
MANNARKAD,KERALA - 678583
PH :9745995946.

MAVELIKARA

780. POPULAR VEHICLES & SERVICES LTD.
(B802-S9-02), KONNAYIL SUVAKO INDUSTRIAL
COMPLEX,SHED A-1,, KOLLAKADAVU
INDUSTRIAL ESTATE, KOCHAL MOODU,
KALLIMEL P.O.,, MAVELIKKARA, KERALA -
690570
PH :9846298622.
781. INDUS MOTORS (1602-S9-07), NEAR PRATHIBA
THEATRE, PUTTHIYAKAVU, MAVELIKKARA -
690101
PH :9745998137.
782. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (S901-S9-01), SURVEY NO. 227/3,
SHANTHIVANAM JUNCTION, CHERUKOLE P.O.,
MAVELIKKARA, KERALA - 690104
PH :9747022424.

MUVATTUPUZHA

783. INDUS MOTOR CO. PVT. LTD. (7E01-7E-01),
NH-49, MUVATUPUZHA KODAMANGALAM
ROAD, NEAR R.K. HOSPITAL, MUVATUPUZHA,
ERNAKULAM DIST - 686661
PH :0485-9745998011.
784. POPULAR VEHICLES & SERVICES LTD.
(2708-7E-02), MUTHUKALLU
JUNCTION,PERUMPALLUR P.O.,
MUVATTUPUZHA, KERALA - 686673
PH :9846374786.
785. INDUS MOTOR CO. PVT. LTD. (7E01-7E-08),
BUILDING NO. 11/146(A), KADATHY MARKET,
NH-49, MUVATTUPUZHA, DISTRICT -
ERNAKULAM. - 686673

NEYYANTINKARA

786. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (1603-AT-02), NH 47, KOTTAMAN , KOLLAYIL
PANCHAYAT, NEYYATTINKARA, TRIVANDRUM,
- 695503
PH :9995867628.

NEYYATINKARA

787. INDUS MOTORS (AT01-AT-01), INDUS MOTOR
CO. PVT. LTD., OLD M.V THEATRE, NEAR
KSRTC BUS STATION, NEYYATINKARA, DIST.
TRIVANDRUM - 695121
PH :0471-9747544500.

NILAMBUR

788. INDUS MOTOR CO. PVT. LTD. (4701-AF-0A),
MINERVA JUNCTION, NILAMBUR , KERALA -
679329
PH :04931-9745998396.
789. INDUS MOTOR CO. PVT. LTD. (4701-AF-0D),
MANAVEDHAM HIGH SCHOOL ROAD,
CHANDAKUNNU - NILAMBUR PO, NILAMBUR,
MALAPURAM DIST. - 679329
PH :9745998414.

NILAMEL

790. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (1603-DA-03), M. C. ROAD, KANNANCODU,
NILAMEL, KOLLAM (DIST.) - 691535
PH :8086079107.

OTTAPALAM

791. INDUS MOTOR CO. PVT. LTD. (PA01-PA-01),
BUILDING NO 23/667, 23/669,
PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM
VILLAGE, OTTAPPALAM TALUKA, PALAKKAD
DISTT., KERALA - 679101
PH :0466-9745998014.

PALA

792. POPULAR VEHICLES & SERVICES LTD.
(B802-GN-04), 12TH MILE,PALA-PONKUNNAM
ROAD,PALA - 686575
PH :0482-8086073454.

DEALER WORKSHOP (AS ON 01.04.2017)

793. INDUS MOTOR CO. PVT. LTD. (7E01-GN-05),
OPP. ALPHONSA COLLAGE ARUNAPURAM(PO),
PALA, KOTTAYAM - 686574
PH :9745898878.
794. AVG MOTORS LTD. (GN03-GN-01), SURVEY
NO.670/1, BLOCK-21, LALAM VILLAGE,
ANTHINADU MEENANCHIL, PALA, KOTTAYAM
DIST. - 686651
PH :4822-9447137246.
795. INDUS MOTORS CO. PVT. LTD. (7E01-GN-07),
SURVEY NO. 176, BLOCK NO. 16, HIGHWAY
JUNCTION, ETTUMANOOR-POOJAR HIGHWAY,
CHERPUNKAL, PALA, KOTTAYAM DISTRICT -
686584
PH :9747516934.

PALAKKAD

796. INDUS MOTOR CO. PVT. LTD. (2702-Y2-0G),
VADAKKUMURI-NH-47, KANNADI,
KUZHALLAMMAM (P.O.), PALAKKAD. - 678701
PH :9745998590.
797. POPULAR VEHICLES & SERVICES LTD.
(2701-Y2-09), OPP. PALANA
HOSPITAL,KODUVAYOOR ROAD,KINASSERY
P.O.,PALAKKAD - 678707
PH :0491-9846300650.
798. INDUS MOTOR CO. PVT. LTD. (Y202-Y2-01),
DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA,
CHANDRANAGAR POST, PALAKKAD - 678007
PH :9747519500.

PARAVOOR

799. BRD CAR WORLD LTD. (A404-ZS-08),
MAVINCHUVADU, MANNAM P.O., NORTH
PARAVUR, PARAVOOR (KERALA) - 683520
PH :9567869239.

PATHANAMTHITTA

800. AVG MOTORS LTD. (W801-W8-02),
JUNNUGAPADY, MYLAPRA ROAD,
PATHANAMTHITTA. - 689671
PH :0468-9744077183.
801. AVG MOTORS LTD. (W801-W8-04), SURVEY NO.
53/7A/3, WARD NO. 13, KUMBABAZHA,
PATHANAMTHITTA.

PATHANAMTHITTA

802. AGT MOTORS (W881-W8-01), AGT TOWERS,
PUTHENPEEDI, OMALLUR, PATHANAMTHITTA
PH :0468-9288117477.
803. INDUS MOTOR CO. PVT. LTD. (1602-16-04),
KUMBABAZHA, PATHANAMTHITTA - 689653
PH :0468-9745998008.
804. POPULAR VEHICLES & SERVICES LTD.
(B802-W8-05), T.K. ROAD, NEAR
COLLECTORATE,PATHANAMTHITTA - 689645
PH :9946105687.

PATTAMBI

805. A.M. MOTORS (E601-8P-04), SHORANUR ROAD,
PATTAMBI, DISTRICT-PALAKKAD. - 679306
PH :0466-9567866059.
806. INDUS MOTOR CO. PVT. LTD. (2702-8P-0B),
PERINTHALMANNA ROAD, THEKKUMURI,
PATTAMBI - 679303
PH :9745898295.
807. A.M. MOTORS (E601-8P-09), CHERPULASSERY
ROAD, KOOMBAN KALLU, KARIMPULLI, MELE
PATTAMBI POST, PALAKKAD DISTT., KERALA. -
679306
PH :0466-9567866059.

PAYANNUR

808. POPULAR VEHICLES & SERVICES LTD.
(4702-9Z-04), N H 17,,EZHILODE P O,
.,PAYANUR - 670309
PH :0497-9846036510.

PERINTHALMANNA

809. A.M. MOTORS (E601-7H-03), NEAR FIRE
STATION, HOSPITAL ROAD, PERINTHALMANNA
- 679322
PH :04933-8129818235.
810. KVR AUTOCARS PVT. LTD. (7H01-7H-01),
SURVEY NO. 87/B-15, CALICUT ROAD, NEAR
ITC, THIRURKAD, PERINTHALMANNA - 679351
PH :04933-9747020573.
811. KVR AUTOCARS PVT. LTD. (7H01-7H-06), OOTY
ROAD, PERINTHALMANNA, MALAPPURAM(DT.),
KERALA - 679322
PH :04933-9747020837.

PERUMBAYOOR

812. SAI SERVICE PVT. LTD. (2705-8W-04),
M.C.ROAD,PERUMBAYOOR,ERNAKULAM
DIST,KERALA - 683542
PH :9645106543.

POINACHI

813. KVR CARS (3L01-GF-03), CHOWKI,
MAILLATTY(P.O.), (VIA) UDUMA, POINACHI,
KERALA - 671319
PH :9526021822.

PUNALUR

814. SARATHY AUTO CARS (C701-8Q-03), NH-208,
Q.S. ROAD,ELAMPAL POST,PUNALUR, KOLLAM
DIST - 691322
PH :0475-9847073065.

QUILANDY

815. INDUS MOTOR CO. PVT. LTD. (3001-30-01),
BUILDING NO.13/53 A, CHENGOTTUKKAVE
VILLAGE, QUILANDY, KOZHIKODE DISTT. -
673306
PH :9745997875.

RAMANATTUKARA

816. A.M. MOTORS (E601-KB-06), NEAR RED
CRESCENT HOSPITAL, FEROKE, CHUNGAM,
CALCUT DISTRICT, RAMANATTUKARA. - 673632
PH :9567866144.

RANNI

817. INDUS MOTOR CO. PVT. LTD. (7E01-JX-06),
CHELLAKKAD-PO, PATHANAMTHITTA(
DISTRICT), RANNI - 689677
PH :9745998737.

SASTHAMKOTTAH

818. INDUS MOTORS CO. PVT. LTD. (1602-RT-09),
NO. SP IX/661, 662, 663, KADAPUZHA ROAD,
PORUVAZHY P.O., BHARANIKUVU,
SASTHAMKOTTAH, KOLLAM - , KERALA -
680520
PH :9745998849.

SHORNUR

819. POPULAR VEHICLES & SERVICES LTD.
(2701-11-0E), PALAKKAD PATTAMBI ROAD,
KULAPPULLY JUNCTION, VADANAMKURUSSI,
SHORNUR - 679124
PH :8589992425.

TALIPARAMBA

820. HAR CARS (K101-9W-02), SREEKANDAPURAM
MAIN ROAD, KANNUR (DIST), KERALA,
THALIPARAMBA - 670141
PH :0460-9539009480.

TELLICHERRY

821. INDUS MOTOR CO. PVT. LTD. (4701-Y3-04),
TEMPLE GATE, MAKKOOTAM, THALAYI,
TELLICHERRY , KERALA - 670102
PH :9747520100.

THALASSERY

822. INDUS MOTOR CO. PVT. LTD. (R002-RO-01),
NETTUR POST, KODUVALLY, THALASSERY,
KANNUR DISTRICT - 670105
PH :490-9745998022.

THIRUVALLA

823. AVG MOTORS LTD. (Y501-Y5-01), M.C ROAD,
PERUMTHURUTHI, THIRUVALLA ,
PATHANAMTHITTA DISTT - 689107
PH :0469-8606071155.
824. POPULAR VEHICLES & SERVICE (B802-Y5-06),
KAVUMBHAGOM P.O, THIRUVALLA,
PATHANAMTHITTA (DIST.), KERALA - 689103
PH :8086073489.

THIRUVANANTHAPURAM

825. SOUTH PARK MOTORS PVT. LTD. (1604-16-01),
SURVEY NO. 985/3-4-5-6, VILLAGE -
KADAKAMPALLY, CHACKAI BYPASS, TALUKA -
TRIVANDRUM, TRIVANDRUM, KERALA - 695029
PH :9526100008.

826. SOUTH PARK MOTORS PVT. LTD. (1605-16-01),
RE SURVEY NO. 9/3, TO 9/5, 9/8. TO 9/10, 9/15,
9/18, 9/19, 6/12, 9/23, KAZHKOOTAM,
VAZHAYILA, VILLAGE - PEROORKADA,
TRIVANDRUM. - 695005
PH :471-3050000, 9544040005.
827. SARATHY AUTO CARS LTD. (C701-16-09),
77/2-11, NEMOM VILLAGE, PAPPANAMCODU
INDUSTRIAL AREA, TALUKA AND DISTRICT-
THIRUVANANTHPURAM, KERALA.

THODUPUZHA

828. INDUS MOTOR CO. PVT. LTD. (7E01-HZ-04),
PALA ROAD, THODUPUZHA - 685584
PH :9745998631.

THRISSUR

829. BRD CAR WORLD LTD. (A404-A4-01), NH 47,BYE
PASS,KONIKARRA POST,THALORE, THRISSUR -
680031
PH :0487-9995807141.
830. INDUS MOTOR CO. PVT. LTD. (2702-A4-08),
KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE
CHOOLOPURAM MOSQUE, GURUYOOR,
THRISSUR - 680505
PH :0487-9745998015.
831. INDUS MOTOR CO. PVT. LTD. (2702-A4-0D),
JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST
FORT, THRISSUR - 680004
PH :0487-9745998014.
832. POPULAR VEHICLES & SERVICES LTD.
(2701-A4-05), KUNNATHUMKARA,
PARAVATTANI, THRISSUR, KERALA - 680655
PH :0487-8589992404.
833. SAI SERVICE PVT. LTD. (2705-A4-06),
17/30,POOTHOLE,THRISSUR,KERALA - 680004
PH :9645106089.
834. BRD CAR WORLD LTD. (A404-A4-07),
GURUVAYOOR ROAD, PUNKUNNAM P.O.,
PUZHAKKAL, THRISSUR - 680002
PH :0487-9746476529.

THRITHALLUR

835. BRD CAR WORLD LTD. (A404-SS-04), PO-
THRITHALLUR, NH-17, THRITHALLUR THRISSUR
- 680619
PH :9539197888.

TIRUR

836. A.M. MOTORS (E601-Y4-02), SATELLITE AUTO
WORKS, PAYYANAGADI POST, TIRUR - 676101
PH :0494-9895940000.
837. KVR AUTOCARS PVT. LTD. (7H01-Y4-05), T.P
7/204-B, TANUR ROAD,MOOCHIKKAL,
MEENADATHUR P.O., TIRUR,
DISTRICT-MALAPPURAM, KERALA - 676307
PH :9747020673.

DEALER WORKSHOP (AS ON 01.04.2017)

838. A.M. MOTORS (E601-Y4-08),
THALAKKADATHOOR PO,
MALAPPURAM,MALAPPURAM DISTT. - 676103
PH :0494 -9895705323.

TRIPRAYAR

839. POPULAR VEHICLES & SERVICES LTD.
(2701-8R-08), NEAR CENTURY PLAZA, NATTIKA
P.O, TRIPRAYAR, TRISSUR DIST - 680566
PH :0487-9846699245.

TRIPUNTARA

840. SAI SERVICE PVT. LTD. (2705-AK-05), HILL
PALACE ROAD,KARINGACHIRA,COCHIN -
682301
PH :9645105067.

TRIVANDRUM

841. HERCULES AUTOMOBILES INTERNATIONAL (P)
LTD (1603-16-01), VAZHAYILA P.O.,
TRIVANDRUM - 695564
PH :9995867654.

842. INDUS MOTOR CO. PVT. LTD. (1602-16-02), NH
BYPASS,SN NAGAR, VEMPALAVATTOM,
TRIVANDRUM - 695029
PH :0471-9745998003.

843. INDUS MOTOR CO. PVT. LTD. (1602-16-01), T.C.
24/885 THYCAUD P.O., THYCAUD P.O.,
METTUKUDA, TRIVANDRUM - 695014
PH :0471-9745998001.

844. POPULAR VEHICLES & SERVICES LTD.
(1601-16-01), C.I.T. ROAD, KILLIPALAM,
KARAMANA P.O, TRIVANDRUM - 695002
PH :0471-9846498633.

845. SARATHY AUTO CARS (C701-16-04), KOVALAM
BYPASS,SN NAGAR, MANACAUD (PO),
TRIVANDRUM - 695009
PH :0491-9847401465.

846. INDUS MOTOR CO. PVT. LTD. (1602-16-08),
NEAR MUSLIM JUMA MASJID, MUKKAM
PLAMOODE, VATTAPPARA-MANNANTHALA M C
ROAD, VATTAPPARA PO,
MANNANTHALA,TRIVANDRUM - 695028
PH :9747540100.

847. INDUS MOTORS CO. PVT. LTD. (1602-16-11),
SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI,
SASTHAMANGALAM VILLAGE, PTP NAGAR
ROAD, KANJIRAMPARA P.O., TRIVANDRUM -
695030
PH :9746743357.

848. INDUS MOTOR CO. PVT. LTD. (1602-16-05), G.G.
MEDICAL COLLAGE P.O., MURINJAPALAM,
TRIVANDRUM, MURINJAPALAM, , - 695011
PH :9745998002.

UPPALA

849. POPULAR VEHICLES & SERVICES LTD.
(4702-4I-0A), N.H.17, KAIKAMPA, UPPALA P.O.,
KASARGOD (KERALA) - 671322
PH :8589051616.

850. KVR CARS (4102-4I-01), NH 17, BANDIYODE,
MANGALAPADI (PO), UPPALA, KASARGOD
DISTT.,KERALA - 671324
PH :4994-9747021211.

URAKAM

851. INDUS MOTORS (AAH1-AAH-01),
IRINJALAKKUDA ROAD, POOCHUNNIPPADAM,
URAKAM PO, TRICHUR DISTT., KERALA -
680562
PH :9745998044.

VADAKARA

852. INDUS MOTOR CO. PVT. LTD. (4701-8S-07), BYE
PASS ,IN VATAKARA-673104,CALICUT, - 673104
PH :0496-9745998021.

853. POPULAR VEHICLES & SERVICES (8S02-8S-01),
NEAR MADAPPALLY GOVT. COLLEGE,
MADAPPALLY, P.O. VADAKARA, KOZHIKODE
(KERALA) - 673102
PH :0496-8943345935.

VAIKOM

854. INDUS MOTOR CO. PVT. LTD. (2702-WN-0J),
THODUPUZHA ROAD, THALAYOLAPARAMBU,
VAIKOM(TALUK), DISTRICT-KOTTAYAM,
KERALA - 686605
PH :9746743003.

VETTICHIRA

855. KVR AUTOCARS PVT. LTD. (7H01-MZ-03), AP IV,
75A TO G, NH-17, CHUNKAM, DIST.
MALAPPURAM, VETTICHIRA, - 676552
PH :9747020023.

WADAKKANCHERY

856. BRD CAR WORLD LTD. (A404-MX-03),
VAZHAKODE, CHELAKARA ROAD,
MULLURKARA P.O., WADAKKANCHERY,
THRISSUR DIST - 680583
PH :9567869403.

MADHYA PRADESH

ASHOK NAGAR

857. PREM MOTORS PVT. LTD. (DS01-DS-02),
SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA
BYPASS NEAR RAJ MATA CIRCLE,
ASHOKNAGAR, MADHYA PRADESH. - 473331
PH :9926809110.

ASHTA

858. JEEWAN MOTORS PVT. LTD. (BSF1-BSF-01),
KHASRA NO.111/1 NEAR RELIANCE PETROL
PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE
(M.P.) - 466001
PH :0756-9826429604.

BADNAWAR

859. PATEL MOTORS PVT. LTD. (BPT1-BPT-01),
KHASRA NO. 2194/1, BADNAGAR ROAD, BADI
CHOUPATI, OPPOSITE BSNL TOWER,
BADNAWAR, DISTT. - DHAR, MADHYA
PRADESH. - 454660
PH :07295-232228, 9977703512.

BADWAH

860. NIMAR MOTORS (AU01-UJ-05), NIRMAL
COMPLEX , INDORE ROAD, BARWAH - 451001
PH :07280-224567, 7770878726.

BALAGHAT

861. KUNAL MOTORS (U501-TP-04), KH NO.-1/56,
JHULELAL DHARMSHALA ROAD, BALAGHAT,
MADHYA PRADESH - 4811001
PH :07632-240088.

BARALI

862. MY CAR (BHOPAL) PVT LTD. (I302-I3-01),
KHASRA NO.423/2, NH-12, J.J. ROAD, NEAR
SHRIVASTAV MARRIAGE GARDEN, BARALI
DISTRICT RAISEN (M.P.) - 464688
PH :07486-230103.

BARNAGAR

863. RUKMANI MOTORS (P) LTD (BBK1-BBK-01),
RUNJA ROAD ,BARNAGAR CITY, DISTRICT
UJJAIN - 456771
PH :9755512100.

BARWANI

864. NIMAR MOTORS (AU01-SA-02), NEAR ICE
FACTORY,RAJGHAT ROAD, BARWANI - 451551
PH :07290-224366.

BETMA

865. OCEAN MOTORS (BVR1-BVR-01), OPPOSITE
MPBE OFFICE, INDORE-AHEMDABAD ROAD,
BETMA, DISTRICT – INDORE, MADHYA
PRADESH. - 453001
PH :7389936444.

BETUL

866. KUNAL MOTORS (U501-U5-02), BHOPAL -
NAGPUR NATIONAL HIGHWAY, NEAR BADORA
CHOWK., BETUL - 460001
PH :07141-239991 / 239992.

BHOPAL

867. JEEWAN MOTORS (I302-03-01), 9E SECTOR
A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL -
462024
PH :0755-4058888.

868. MY CAR (BHOPAL) LTD (I303-03-01),
189,JINSI,NH-12,BHOPAL (MP) - 462008
PH :0755-4022800 / 4222999.

869. MY CAR (BHOPAL) LTD (I303-03-03), 196,
MANDAKINI HOUSING SOCIETY.,KOLAR
ROAD, BHOPAL MADHYA PRADESH - 462042
PH :0755-4082854.

870. SATYAM MOTORS (I307-03-01),
NH-12 SUVEESHA NAGAR,HOSHANGABAD
ROAD,MISROAD - 462040
PH :0755-4422000 / 4422056.

871. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ
MOTORS PVT. LTD.) (I308-03-01), 8A,
SECTOR-C, J.K. ROAD, GOVINDPURA
INDUSTRIAL AREA, BHOPAL, MADHYA
PRADESH - 462023
PH :755-4063529,30,31,32,33,34,35.

872. JEEWAN MOTORS (I302-03-03), PLOT NO. 157,
NEAR PUNJAB & SINDH BANK M.P. NAGAR
ZONE-II, BHOPAL - 462023
PH :0755-9826429605, 2558831.

873. JEEWAN MOTORS PVT. LTD. (I302-03-04),
KHASRA NO. 54-55/1/1, NEAR RELIANCE
FRESH,CHUNA BHATTI MAIN ROAD, INDIAN OIL
PETROL PUMP, BHOPAL (M.P.) - 462036
PH :0755-4057988.

BIAORA

874. PRIME CARS (3001-0F-03), NR.
INDORE-BHOPAL SQUARE, A B ROAD, BIAORA -
465674
PH :7374-230063.

BINA

875. ADINATH MOTORS (BHQ1-BHQ-01), PLOT NO.
2/3/4/5 AMANTIGEL LAND SEMI URBAN
INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26)
BINA, DISTRICT – SAGAR, MADHYA PRADESH -
470113
PH :9009780030.

BURHANPUR

876. NIMAR MOTORS PVT. LTD. (BRR1-BRR-01),
KHASRA NO. 654/15-16, BASEMENT OF HOTEL
AMBKA RESIDENCY, OPP. PAKIZA
SHOWROOM, SANJAY NAGAR, AMRAVATI
ROAD, BURHANPUR, MADHYA PRADESH -
450331
PH :07325-242211.

CHATTARPUR

877. ADINATH MOTORS (G101-8B-02), MAHOBA
ROAD, NEAR BUS STAND, CHHATARPUR, DISTT
SAGAR - 471001
PH :07682-241446.

CHHINDWARA

878. KUNAL MOTORS (U501-U5-03), OPP. KUNAL
MOTORS SHOWROOM, LAL BAGH
TIRAHA,BEHIND TRUE VALUE OUTLET,
NASIRABAD ROAD, CHHINDWARA(MP), - 480001
PH :07162-236436.

DEALER WORKSHOP (AS ON 01.04.2017)

879. KUNAL MOTORS (U501-U5-06), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002
PH :8349999112.

DAMOH

880. ADINATH MOTORS (G101-RD-03), KILLARI NAKA, SAGAR ROAD, DAMOH - 470661
PH :07812-221740.

DATIA

881. PREM MOTORS PVT. LTD. (3003-WE-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661
PH :07522-233236.

DEPALPUR

882. OCEAN MOTORS (WB01-WB-03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,DIST.INDORE-MP - 453115
PH :07322-220505, 222501.

DEWAS

883. PRIME CARS PVT. LTD. (3Q01-3Q-01), RASULPUR BYPASS TIRAHA, AB ROAD, DEWAS - 455001
PH :07272-259301.

DHAR

884. RUKMANI MOTORS (P) LTD (5304-LM-02), 41/2 MAGAJPURA,DHAR., - 454001
PH :7292-223500.

DINDORI

885. STANDARD AUTO AGENCIES (AVA1-AVA-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP,DINDORI - 481661
PH :07644-280030,7771014728.

GANJBASODA

886. MY CAR (BHOPAL) LTD. (AEA1-AEA-01), NEAR GHUNGRU GARDEN , TYONDA ROAD , GANJBASODA, VIDISHA DISTT., M.P. - 464221
PH :7389928892.

GUNA

887. PREM MOTORS PVT. LTD. (S301-S3-01), OPP R.T.O.,A.B. ROAD,GUNA, - 473001
PH :07542-268015 / 268081.

GWALIOR

888. PREM MOTORS PVT. LTD. (3003-30-01), M. L. B. ROAD,GWALIOR., - 474002
PH :0751-4010757.
889. PREM MOTORS (3005-30-01), SHIVPURI LINK ROAD, GWALIOR - 474002
PH :0751-4055137.

HARDA

890. INFINITY CARS (KM01-VY-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331
PH :889284444.

HOSHANGABAD

891. INFINITY CARS (KM01-KM-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001
PH :07574-256677.

INDORE

892. MY CAR PVT. LTD. (5305-53-01), 78/1/3, HUKMAKHEDI RAU, ADJESCENT IPS ACADEMY, A6 ROAD,INDORE - 452031
PH :0731-4272727.

893. PATEL MOTORS (INDORE) PVT LTD. (5303-53-02), 176/1, PIPLYA RAU,A.B. ROAD ,INDORE - 452017
PH :0731-4245222.

894. PATEL MOTORS (INDORE) PVT LTD. (5303-53-01), 428/3/3,NIRANJANPUR,A,B ROAD,INDORE - 452010
PH :0731-4033333.

895. RUKMANI MOTORS (P) LTD (5304-S3-01), 2-3,,A.B. ROAD,INDORE - 452001
PH :0731-4075401.

896. RUKMANI MOTORS (P) LTD (5304-S3-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001
PH :0731-4075408.

897. OCEAN MOTORS PVT. LTD. (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001
PH :0731-6627500, 6627505.

898. OCEAN MOTORS (5306-53-02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017
PH :0731-6617505,2877505.

899. MY CAR (INDORE) PVT. LTD. (5305-53-02), KHASARA NO.15/1/8 GRAM PIPLIYA KUMAR GODOWN NO.1112, DEWAS NAKA, INDORE. - 452010
PH :0731-4737373.

900. PATEL MOTORS (5303-53-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006
PH :0731-2383099,2382099.

901. OCEAN MOTORS PVT. LTD. (5306-53-03), SCHEME NO.94, SECTOR A, PLOT NO. 28FA, RING ROAD, NEAR PIPLIYAHANA CIRCLE, INDORE (M.P.) - 452001
PH :968533331, 7389936451.

902. KATHED MOTOCORP (5307-53-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002
PH :7471111132.

JABALPUR

903. SHUBH MOTORS (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 486001
PH :0761-4099999.

904. STANDARD AUTO AGENCY (5402-54-01), OPPOSITE ALLAHABAD BANK,DELITE TALKIES ROAD,CIVIL LINES, JABALPUR - 482001
PH :0761-4040405 / 4040406.

905. STANDARD AUTO AGENCY (5402-54-03), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002
PH :0761-4038001.

906. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002
PH :0761-6999952, 9755502292.

JAORA

907. PATEL MOTORS (INDORE) PVT. LTD. (P801-BFR-04), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226
PH :243399, 9826634449, 9926932221.

JHABUA

908. PATEL MOTORS (AAR1-AAR-01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661
PH :07392-243399, 9826634449.

KATNI

909. SHUBH MOTORS PVT LTD (FK01-FK-01), WARD NO. 41 HEMU COLONY SHANTI NAGAR, BESIDE RELIANCE PETROL PUMP, KATNI, MADHYA PRADESH - 483501
PH :9755595596.

KHANDWA

910. NIMAR MOTORS (AU01-3R-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001
PH :0733-2244088.

KHARGONE

911. NIMAR MOTORS (AU01-AU-01), JETAPUR,SANAWAD ROAD,KHARGAONE, - 462026
PH :07282-243285.

912. NIMAR MOTORS PVT. LTD. (AU01-AU-06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001
PH :9669569504.

KHATEGAON

913. PRIME CARS PVT. LTD. (BXB1-BXB-01), SURVEY NO. 85/3, NEMAWAR ROAD, KHATEGAON, DISTRICT – DEWAS, MADHYA PRADESH - 455336
PH :7274-8889913306.

KOTMA

914. SHUBH MOTORS (DO01-DO-01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336
PH :07658-233777.

KUKSHI

915. OCEAN MOTORS PVT. LTD. (BIO1-BIO-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331
PH :9009780030, 7389945443, 8085999990.

MAIHAR

916. CITY CARS (D702-GI-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771
PH :07674-234575.

MANDLA

917. STANDARD AUTO AGENCIES (5402-WD-04), KATARA ROAD, MANDLA, DIST. MANDLA MP - 481661
PH :7642-260600,260622.

MANDSAUR

918. PATEL MOTORS (WC01-WC-01), NEAR SHIVANA BRIDGE,RATLAM MANDSAUR ROAD,MANDSAUR - 458001
PH :07422-400450, 220372.

MHOW

919. OCEAN MOTORS PVT. LTD. (WA01-WA-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441
PH :07324-7389936478, 266211.

MORENA

920. PREM MOTORS PVT. LTD. (RG01-RG-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001
PH :07532-233101.

NARSINGHPUR

921. STANDARD AUTO AGENCIES (BB01-BB-01), KH. NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT – NARSINGHPUR, MADHYA PRADESH. - 487001
PH :7792-232757.

NEEMUCH

922. AUTO SCAN (3TB1-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH, PH :07423-221912.

DEALER WORKSHOP (AS ON 01.04.2017)

923. PATEL MOTORS (RATLAM) PVT LTD.
(P801-3T-02), MHOW-NEEMUCH
ROAD,NEEMUCH(MP),, - 458441
PH :07423-263883-4.

PANNA

924. CITY CARS (EQ01-EQ-01), KHASRA NO. 378,
MOHAN RAJ VILAS CHOURAHA, BESIDE
MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA,
MADHYA PRADESH. - 488001
PH :7672-223026, 222593.

PITHAMPUR

925. PATEL MOTORS (INDORE) PVT. LTD.
(5303-BVD-04), 254-A, SECTOR-1, INDUSTRIAL
AREA, PITHAMPUR, DISTT. DHAR - 454775
PH :722-4990999.

RAISEN

926. MY CAR (BHOPAL) PVT. LTD. (RF01-RF-01),
NEAR BAGHEL TRACTORS BEFORE SALE TAX
TOLL SAGAR ROAD - 464221
PH :9755550061.

RATLAM

927. PATEL MOTORS (INDORE) PVT LTD.
(P801-P8-01), 76 C,D&E,INDUSTRIAL
AREA,RATLAM - 452001
PH :07412-402529-31-32-33-41.

928. PATEL MOTORS (INDORE) PVT LTD.
(P801-P8-03), 181/17/18,DOSHI
GOAN,INDUSTRIAL AREA ,JAORA
ROAD,RATLAM - 457001
PH :07412-261463, 261464 , '9926932221.

REWA

929. CITY CARS (D702-M2-03), NYPASS
CHURHATA,DIST. REWA - 482001
PH :07662-222021.

SAGAR

930. ADINATH MOTORS (G101-G1-01), STATION
ROAD, TILAK GANJ, SAGAR (M.P.). - 470001
PH :07582-403932 / 226560.

SAJAPUR

931. PRIME CARS (3Q01-ZC-02), LALGHATI , A B
ROAD, SHAJAPUR - 465441
PH :7364-226333.

SANWER

932. MY CAR (INDORE) PVT. LTD. (AAJ1-AAJ-01),
S.NO.356/3/1, OLD UJJAIN BYPASS
ROAD,TALUKA SANWER, DISTT. INDORE. -
453551
PH :07321-220043,7389920507.

SATNA

933. CITY CARS (D702-D7-01), WARD NO. -
27,AMONGHA KALA,PANNA ROAD,SATNA -
485001
PH :07672-223026.

934. CITY CARS (D702-D7-05), (A UNIT OF AGRAWAL
WHEELS PVT. LTD.), BESIDE BHASKAR PRESS,
BEHIND MARUTI SHOWROOM, WARD NO.27,
AMOUDHA KALA, PANNA ROAD, SATNA -
485001
PH :9754301199.

SEHORE

935. JEEWAN MOTORS (0302-EH-02),
869/1/2,OFFICERS COLONY,IN FRONT OF
CHURCH GROUND,BHOPAL, INDORE ROAD -
466001
PH :0756 -2226400.

SEONI

936. KUNAL MOTORS (U501-8X-05), JYARAT NAKA,
JABALPUR NAGPUR ROAD, SEONI (M.P.) -
480661
PH :07692-228158,8349999269.

SHADOL

937. SHUBH MOTORS (MF01-MF-01), JAMUA, NEAR
GYAN GUPTA,BUDHAR ROAD,SHAHDOOL, -
484771
PH :07652-231358 / 230110.

SHIVPURI

938. PREM MOTORS PVT. LTD. (3003-3U-04), A B
ROAD,SIVPURI,, - 473551
PH :07492-221215.

SIDHI

939. CITY CARS (BKM1-BKM-01), ADHIYAR KHOH,
NEAR GYAN DHARAMKATA, SIDHI, MADHYA
PRADESH. - 486661
PH :7672-223026, 222593, 9754301199.

SIMROL

940. PATEL MOTORS PVT. LTD. (BZV1-BZV-01),
PLOT NO. 13-14, SANJAY GANDHI NAGAR,
INDORE KHANDWA RD, GRAM - SIMROL,
TEHSIL – MHOW, DISTRICT – INDORE, MADHYA
PRADESH. - 452020
PH :07295-9977703512, 232228.

SUJALPUR

941. PRIME CARS PVT. LTD. (3Q01-BJO-04), 363/1
DEHANI JOD, ASHTA ROAD, NEAR SOYA PLANT
SHUJALPUR, MADHYA PRADESH - 465333
PH :8889913304 & 08889913341.

TIKAMGARH

942. ADINATH MOTORS (RE01-RE-01), NEAR MAU
CHUNGI NAKA, TIKAMGARH (M.P.) - 472001
PH :07683-247469.

UJJAIN

943. RUKMANI MOTORS (P) LTD (3W02-3W-01),
SURVEY NO. 59/3, DEWAS ROAD,UJJAIN -
456010
PH :0734-4052000.

UMARIA

944. SHUBH MOTORS (5403-BVY-04), 8/2 GRAM
BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT
UMARIA (MADHYA PRADESH) - 484661
PH :0761-6009333.

VIDISHA

945. MY CAR PVT. LTD. (AY01-AY-01), SURVEY NO.
102, VILLAGE – RANGI, TEHSIL – VIDISHA,
VIDISHA, (M.P.) - 464001
PH :7592-9755550071, 297067.

WAIDHEN

946. CITY CARS (D702-JJ-02), NEAR VIJAY BANDHU
PETROL PUMP, KACHANI, THE. WAIDHEN,
DISTRICT, SINGRAULI ,MADHYA PRADESH -
486886
PH :07662-222021, 8889917774.

MAHARASHTRA

AHMEDNAGAR

947. VIJAY AUTOMOBILES (A581-A5-01), OPP. MSEB
SUB STATION, NAGAR-PUNE ROAD, KEDGAON,
AHMEDNAGAR
PH :0241-2550049.

948. KANKARIYA AUTOMOBILES PVT LTD
(A501-A5-01), SARDA MILLS,SAVEDI
ROAD,AHMEDNAGAR, MAHARASTRA - 414001
PH :0241-9403961540.

949. KANKARIYA AUTOMOBILES PVT LTD
(A501-A5-05), MIDC, AHMEDNAGAR - 414003
PH :0241-2777131.

AKLUJ

950. CHAVAN AUTOMOBILES(CHAVAN MOTORS
DIVISION INDIA P) (B102-RU-04), PLOT NO.
15/3-A, PANCHVATI STOP,MALINAGAR
ROAD,AKLUJ - 413101
PH :02185-223033.

AKOLA

951. KHANDELWAL AUTOWHEELS PVT.LTD
(F101-F1-01), TIRUPATI CHAMBERS,CONVENT
ROAD,AKOLA - 444005
PH :0724-2429404,2440409,2420061.

ALIBAUG

952. SIMRAN MOTORS (7S01-3X-05), SURVEY NO.
30/1, OPP. RCF COLONY, VILLAGE – VESHVI,
ALIBAUG, DISTRICT – RAIGAD, MAHARASHTRA
- 402201
PH :02141-226344.

AMBEGAON

953. THE KOTHARI WHEELS (1906-AGA-04), SOHAM
NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK
HIGHWAY, A/P MANCHAR, TALUKA:
AMBEGAON, DISTT: PUNE, MAHRASHTRA -
410503
PH :02132-223083/93.

AMRAVATI

954. ASPA BANDSONS AUTO (P) LTD (F201-F2-01),
SATURNA BADNERA
ROAD,AMRAVATI,MAHARASTRA, - 444607
PH :0721-2510475/76/77.

955. ASPA BANDSONS AUTO (P) LTD (F201-F2-05),
A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI,
DIST: AMRAVATI, MAHARASTRA. - 444607
PH :0721-2520085.

AURANGABAD

956. AUTOMOTIVE MANUFACTURERS LTD.
(2102-21-01), PLOT NO. 1, P.B.NO.
716,CHIKALTHANA,AURANGABAD - 431210
PH :0240-6640500/6640555.

957. AUTOMOTIVE MANUFACTURERS LTD.
(2102-21-03), C-27,MIDC, CHIKALTHANA , N/R
LUPIN LABORATORIES, AURANGABAD,
MAHARASHTRA - 431006
PH :240-2484911.

958. PAGARIYA AUTO PVT LTD (2103-21-01), OPP.
OLD HIGH COURT, NEAR HOTEL ASHOKA
EXECUTIVE, JALANA ROAD, AURANGABAD -
431005
PH :0240-240665902.

959. PAGARIYA AUTO PVT LTD (2103-21-05), GAT
NO. 46, PLOT NO. 50, NEAR MASTER COOK
RESTAURANT (KAILASH HOTEL) BEED BYPASS
ROAD, AURANGABAD, MAHARASHTRA - 431005
PH :9860999468.

960. PAGARIYA AUTO PVT LTD (2103-21-06), PLOT
NO.A-35 MIDC, NEAR MAIN RAILWAY STATION,
AURANGABAD - 431001
PH :0240-6504141.

BADLAPUR

961. PRAKASH AUTO PVT. LTD. (9Q01-9Q-01), SHOP
NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA
WATER SUPPLY, OPP. INDIAN OIL PETROL
PUMP, MIDC ROAD, KATRAP, BADLAPUR
(EAST) - 421503
PH :0251-9321352333.

BALLARPUR

962. TRISTAR CARS (H302-ZH-04), PLOT NO.11,
BEHIND ZAWERI PETROL PUMP, NEAR GURU
NANAK COLLEGE, ALLAPALLI ROAD, BAMNI,
TAH. BALLARPUR - DIST. - 442701
PH :9272222412/13.

BARAMATI

DEALER WORKSHOP (AS ON 01.04.2017)

963. MAHALAXMI AUTOMOTIVES PVT. LTD.
(7R01-7R-01), BARAMATI- PHALTAN RD., KASBA,
BARAMATI, DIST. PUNE - 413102
PH :02112-229005.

BARSHI

964. CHAVAN MOTORS (BBA1-BBA-01), GAT
NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL
PUMP, BARSHI. - 413401
PH :2184-229666.

BHANDARA

965. AUTOMOTIVE MANUFACTURERS LTD.
(2001-FG-03), JINDAL'S BLDG, NEAR NAVKAR
PETROL PUMP, SAINATH NAGAR, NH-6,
BHANDARA - 441904
PH :07184-250542/251542.

BHIVANDI

966. S K WHEELS PVT. LTD. (IX01-IX-02), SURVEY
NO. 43/1'E, VILLAGE SONALE, NH-8,
MUMBAI-NASHIK HIGHWAY, BHIVANDI, THANE -
421302
PH :0252-2657484/9930545454/61768000.

BHOR

967. SEHGAL AUTORIDERS PVT. LTD.
(BSV1-BSV-01), GUT NO. 929/1, UTTROLI, BHOR,
TALUKA – BHOR, DISTRICT – PUNE,
MAHARASHTRA. - 412206
PH :8888881348, 8888881399.

BOISAR

968. SPECTRA MOTORS (ES01-ES-01), PLOT
NO.J-240, TARAPUR INDUSTRIAL AREA,
VILLAGE-SARAVALI, BOISAR, PALGHAR, THANE
(MAHARASHTRA) - 401501
PH :02525-645180/661088.

BRAMHAPURI

969. TRISTAR CARS PVT LTD (H302-TW-02), 165,
NAVEGAON, NEAR VIDYANIKETAN SCHOLL,
WADSA ROAD, BRAHMPURI, DIST:
CHANDARPUR, MAHARASHTRA - 441206
PH :9272222406/7/8.

CHALISGAON

970. MANRAJ MOTORS PVT LTD (AAE1-AAE-01), SL.
NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK,
DHULE ROAD, CHALISGAON, DIST: JALGAON,
MAHARASHTRA - 424101
PH :02589229320.

CHANDGAD

971. SAI SERVICE PVT. LTD. (BTF1-BTF-01), GAT
NO.360, G.P.M NO.157, A/P HALKARNI TALUKA
CHANDGAD, DISTT. KOLHAPUR,
MAHARASHTRA. - 416507
PH :02320-239339.

CHANDRAPUR

972. TRISTAR CARS PVT LTD (H302-H3-01), NR.
HOTEL KUNDAN PLAZA,NAGPUR
ROAD,CHANDRAPUR - 442401
PH :07172-927222401/2

973. TRISTAR CARS PVT LTD (H302-H3-03), NAGPUR
ROAD, CHANDRAPUR - 442401
PH :07172-927222403/4.

CHIPLUN

974. JAGRUT MOTORS P. LTD. (9A01-9A-01),
SURVEY NO-543, NH-17, MUMBAI-GOA
HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN,
DIST-RATNAGIRI,MAHARASHTRA - 415605
PH :02355-252238.

DAHANU

975. SAI SERVICE PVT. LTD. (V901-TD-03),
DAHANU-JAWAHAR ROAD, DAHANU(E),
TAL-DAHANU, DIST. TAHNE - 401602
PH :8975003138 /02528-225060/70/80/8975003140.

DAPOLI

976. JAGRUT MOTORS P. LTD. (G301-VG-06),
AT/POST-DAPOLI, DAPOLI-KHED
ROAD,DAPOLI.DIST.RATANAGIRI. - 415712
PH :02358-267272,252238.

DHULE

977. SEVA AUTOMOTIVE LTD. (F301-F3-01), GATE
NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE
- 424001
PH :02562-281128/29.

DINDORI

978. AUTOMOTIVE MANUFACTURERS LTD.
(AAF1-AAF-01), S.NO.753, NEAR PANDAV
PETROL PUMP,NASIK DINDORI ROAD, TAL.
DINDORI, DISTT. NASIK - 422202
PH :02557-222021.

DOMBIVALI

979. FORT POINT AUTOMOTIVE (CARS) PVT. LTD.
(3906-JS-02), C/O NIRUP TEXTILES, C-3 & 4,
MIDC PHASE-1, DHARMA KANTA, NEAR TATA
POWER, DOMBIVALI (EAST), - 421201
PH :251-2449789,2445557/8.

DOMBIVILI

980. AUTOMOTIVE MANUFACTURERS LTD.
(3901-JS-02), PLOT NO. B-43,
PHASE-1,DOMBIVALI INDUSTRIAL AREA,
DOMBIVALI,DISTT-THANE, MAHARASHTRA, -
421201
PH :0251-2800492/4/5.

GADCHIROLI

981. BARBATE AUTOMOTIVE (INDIA) PVT. LTD.
(ARYA CARS) (ZK02-ZK-01), PLOT NO. 10,
GANESH NAGAR, MUL ROAD, GADCHIROLI ,
MAHARAstra - 442702
PH :07132-232220.

GADINGLAJ

982. SAI SERVICE PVT. LTD. (3802-DB-04), 581/7B,
PLOW NO-12, SANKESHWAR ROAD, OPP.
HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502
PH :02327-222239.

GANGAPUR

983. PAGARIYA AUTO PVT LTD (2103-MC-03),
E-16,WALLUJ,AURANGABAD - 431001
PH :0240-2406617790.

GONDIA

984. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE
INDIA PVT. LTD.) (2004-4C-02), ITI ROAD,NR.
FULCHUR NAKA,OPP LAXMI FLOUR
MILL,GONDIA - 441601
PH :07182-234567.

GUHAGAR

985. JAGRUT MOTORS PVT. LTD. (BJV1-BJV-01),
SURVEY NO. 23A, SHRUNGALTALI,
GUHAGHAR-CHIPLUN ROAD, GUHAGAR,
RATNAGIRI, MAHARASHTRA - 415703
PH :9404923961.

HINGANGHAT

986. SEVA AUTOMOTIVE PVT. LTD. (CDZ1-CDZ-01),
PLOT NO. P-1, HINGANGHAT INDUSTRIAL
AREA, NH-7, AJANTI, HINGANGHAT, TALUK –
HINGANGHAT, DISTRICT – WARDHA,
MAHARASHTRA. - 442301
PH :9689871099.

ICHALKARANJI

987. SAI SERVICE PVT. LTD. (4D01-4D-01), GATE NO.
107,KOLHAPUR
ROAD,KABNOOR,ICHALKARANJI - 416122
PH :0230-2425282.

INDAPUR

988. MAHALAXMI AUTOMOTIVES PVT. LTD.
(7R01-NQ-02), STATE HIGHWAY NO. 151,
INDAPUR - 412219
PH :02112-2117222500.

ISLAMPUR

989. CHOWGULE INDUSTRIES PVT. LTD.
(PJ02-PJ-01), GATE NO.905/A/3, NEAR BOMBAY
RAYAN, PUNE-BANGALOE HIGHWAY (NH-4),
ISLAMPUR TALUKA : WALVA, DIST:SANGLI -
415409
PH :225757.

JALGAON

990. MANRAJ MOTORS PVT LTD (C401-C4-01),
AJINTA ROAD, MIDC INDL AREA, JALGAON -
425003
PH :0257-221212223/24.

JALNA

991. AUTOMOTIVE MANUFACTURERS LTD.
(2102-BC-02), PLOT NO. 4 & 5 , CTS NO.
11427/4-A, BALAJI COMPLEX,
JALNA-AURANGABAD ROAD, JALNA, - 431203
PH :02482-221143.

JATH

992. CHOWGULE INDUSTRIES PVT. LTD.
(J102-BLX-05), PLOT NO. 12, SAWANT ESTATE,
MORE COLONY, OPP. CATTLE BAZAR, SATARA
ROAD, JATH, DISTRICT SANGLI,
MAHARASHTRA - 416404
PH :02341 -246598.

JAYSINGPUR

993. SAI SERVICE PVT. LTD. (ASA1-ASA-01), GATE
NO. 1239, NEAR ACHRYA TULSI BLOOD BANK,
A/P UDGAON(JAYSINGHPUR), TALUKA-SHIROL,
DIST: KOLHAPUR - 416134
PH :02322-225959.

KANKAVALI

994. JAGRUT MOTORS P. LTD. (G301-V7-05), PLOT
NO.32-33,SURVEY NO.-1886/1,,MUMBAI-GOA
HIGHWAY
(NH-17),JANAVLI,KANKAVLI,MAHARASHTRA -
416002
PH :02367-232872/203977 , (91)9881467572.

KAPHOLI

995. S K WHEELS PVT LTD (0515-9C-02), PLOT NO.
42,N-47 , KAPHOLI INDUSTRIAL AREA,MUMBAI
-PUNE HIGHWAY,MUMBAI - 410203
PH :02192-266243/266470,02192-266243.

KARAD

996. CHOWGULE INDUSTRIES PVT. LTD.
(F303-4E-02), 112/3, PUNE-BANGALORE ROAD,
NEAR RELIANCE GAS PUMP, A/P MALKAPUR,
TAL. KARAD, DISTT. SATARA - 415110
PH :02164-660000.

KARJAT

997. SIMRAN MOTORS (7S01-TA-03),
PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD
- 410201
PH :8108194564.

KAVATE MAHANKAL

998. CHOWGULE INDUSTRIES PVT. LTD.
(SC02-SC-01), MAHANKALI BAAZAR, KAVATE
MAHANKAL-JAT ROAD, KAVATE MAHANKAL,
SANGLI, MAHARASHTRA - 416405
PH :02341-222102.

KHAMGAON

999. MANRAJ MOTORS PVT LTD. (BXU1-BXU-01),
GAT NO 41, OLD SURVEY NO. 12/1A, NEAR
AMRUT PETROL PUMP, AKOLA ROAD,
KHAMGAON , MAHARASHTRA - 444303
PH :07263-250002/3.

DEALER WORKSHOP (AS ON 01.04.2017)

KHARGHAR

1000. EXCELL AUTOVISTA PVT LTD (AAC1-AAC-01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210
PH :022-65999111.

KOLHAPUR

1001. SAI SERVICE PVT. LTD. (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR - 416008
PH :0231-2661676.

1002. SAI SERVICE PVT. LTD. (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS NH-4, KOLHAPUR - 416122
PH :0230-2468376.

1003. SAI SERVICE PVT. LTD. (3802-38-06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. - 416012
PH :0231-2329495.

KONGAON

1004. PRAKASH AUTO PVT. LTD. (3903-AZ-02), SURVEY NO.126/127,98/38,AT & POST KONGAON, - 421302
PH :0252-2280264.

KUDAL

1005. JAGRUT MOTORS PVT. LTD. (9B01-9B-01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA - KUDAL, DISTRICT - SINDUDURG, MAHARASHTRA - 416520
PH :02362-202423.

LATUR

1006. AUTOMOTIVE MANUFACTURERS LTD. (V801-V8-02), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512
PH :02382-609111/609222.

1007. AUTOMOTIVE MANUFACTURERS LTD. (V801-V8-01), CITY SURVEY NO. 2960, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR - 413512
PH :02382-661909.

MAHAD

1008. SIMRAN MOTORS (7S01-TX-04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301
PH :02145-223123.

MALEGAON

1009. SHAAN CARS PRIVATE LIMITED (3703-FF-02), PLOT NO. 572/81, CHANDANPURI SHIVAR,OLD MUMBAI, AGRA ROAD, DIST- NASIK,MALEGAON - 423203
PH :02554-237200/237201.

MANGAON

1010. SIMRAN MOTORS PVT. LTD. (BAM1-BAM-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASTHRA. - 402104
PH :02140-261118.

MIRAJ

1011. CHOWGULE INDUSTRIES PVT. LTD. (J102-SD-03), 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410
PH :0233-2643221, 22.

MUMBAI

1012. EXCELL AUTOVISTA PVT LTD (0510-05-01), RESHAM SINGH COMPOUND,CST ROAD,KALINA, SANTACRUZ EAST,MUMBAI - 400098
PH :022-67743888,26653242, 43, 46.

1013. SAH & SANGHI AUTO AGENCIES PVT.LTD (0505-05-01), PRAKASH MILLS COMPOUND,OFF. GLOBE MILLS PASSAGE,WORLI,MUMBAI - 400013
PH :022-24925452/53/54, 24965379/80,4925452, 53.

1014. SAI SERVICE PVT. LTD. (0504-05-01), 462 SENAPATI BAPAT MARG,WORLI NAKA,LOWER PAREL,MUMBAI - 400013
PH :022-43030404/43030400.

1015. SAI SERVICE PVT. LTD. (0504-05-02), ARVIND CHAMBERS,194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069
PH :022-43030606 /600,8356242..

1016. SAI SERVICE PVT. LTD. (0504-05-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND,DATTA PADA ROAD,BORIVILI (EAST),MUMBAI - 400066
PH :022-4303 0111/103/104/118/120,28707000.

1017. SPECTRA MOTORS LIMITED (0508-05-01), PLOT NO.4 & 5,GANESH PLOT OWNER'S ASSN., RAMACHANDRA LANE EXTN. KANCH PADA, MALAD(WEST) MUMBAI - 400064
PH :022-67696063/62/65/80/85/58/68/94,8898999.

1018. SPECTRA MOTORS LIMITED (0508-05-02), PLOT NO. 165, CABLE CORPORATION OF INDIA, OFF WESTERN EXPRESS HIGHWAY, BORIVLI (EAST) - 400066
PH :022-66908823/66908826,28542185.

1019. SPECTRA MOTORS LIMITED (0508-05-03), GANDHI PAREKH INVESTMENT CORP. LTD, CTF NO. 170, MUMBAI AGRA ROAD, NEXT TO ASHOK SILK MILL COMPOUND, LBS MARG,GHATKOPAR WEST, MUMBAI - 400086
PH :022-66440000 /66440111/ 9967017486,66440000.

1020. SPECTRA MOTORS LIMITED (0523-05-01), GHATLA VILLAGE, CHEMBUR, MUMBAI - 400071
PH :022 -25200600/25200990/ 25200300 /25208666.

1021. VITESSE TRADING LIMITED (0503-05-01), SHAH INDLSTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058
PH :022-26730787/26730290/26730296,6367018.

1022. VITESSE TRADING LIMITED (0503-05-02), 77 AF PALKY GULLY,OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025
PH :022-24229747,4223933.

1023. AUTOMOTIVE MANUFACTURERS LTD. (3901-05-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAI - 400070
PH :022-61563734 / 61563744 / 61563715.

1024. FORT POINT (0521-05-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096
PH :022-41157777, 42432121/2131.

1025. SHIVAM AUTOZONE (0531-05-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA - 400067
PH :022-41099999.

1026. VITESSE PVT. LTD. (0503-05-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067
PH :022-28674753/28674754,24229747.

1027. SPECTRA MOTORS PVT. LTD. (0508-05-07), C/O DON BOSCO INSTITUTE, VAZIRA NAKA, OFF CHANDARKAR ROAD, BORIVALI WEST, MUMBAI. - 400092
PH :022-28988800.

1028. FORTPOINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-03), C/O VARUN STEEL INDUSTRIES,AAM TOOL COMPOUND,BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI - 400010
PH :022-64550650.

1029. K.T.S. AUTOMOTORS PVT. LTD. (0582-05-02), C/O-COZY INDIA, 5, HANSRAJ LANE, BYCULLA, MUMBAI - 400027
PH :022-23751234,23752301/2/3/5/6.

1030. PARAMOUNT WHEELS PVT. LTD. (3911-05-02), CITY SURVEY NO. 639/246, SANTOSH NAGAR, FILM CITY ROAD, GOREGAON (E), MUMBAI - MAHARASHTRA - 400065
PH :022-28403742.

1031. S K WHEELS PVT. LTD. (0554-05-01), CTS NO. 151, RAM MANDIR ROAD, SOMANI GRAM, NEXT TO CENTRAL WAREHOUSE CORP., OSHIWARA, GOREGAON (WEST), MUMBAI - 400 104, MAHARASHTRA. - 400104
PH :022-9930545454.

1032. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-02), PLOT NO. 82-ABCD, KANDIVALI INDUSTRIAL ESTATE, OPP. CHARKOP POST OFFICE, CHARKOP, KANDIVALI (WEST), MUMBAI, MAHARASHTRA. - 400067
PH :022-9870934444, 41099999.

1033. KIRAN MOTORS MAHARASHTRA (05A1-05-01), PLOT NO. B-62/41A, SHREYAS INDUSTRIAL, OFF. NEW LINK ROAD, ANDHERI (WEST), MUMBAI. - 400053
PH :7700934505.

MURBAD

1034. PRAKASH AUTO PVT. LTD. (BY01-BYO-01), SURVEY NO. 61/2, KALYAN - MURBAD ROAD, VILLAGE - DAHAGAON, TALUKA - MURBAD, DISTRICT - THANE, MAHARASHTRA. - 421605
PH :9028342725.

MURGUD

1035. SAI SERVICE PVT. LTD. (AWA1-AWA-01), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219
PH :02325- 265553.

NAGPUR

1036. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD,NAGPUR - 440035
PH :0712-6688333.

1037. AUTOMOTIVE MANUFACTURERS LTD. (2001-20-02), 575 KAMPTEE ROAD,NAGPUR-26., - 440026
PH :0712-2630550/6662000/6662001/2652551/2648341 .

1038. SEVA AUTOMOTIVE LTD. (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR - 440023
PH :0712-2500231/6652800.

1039. SEVA AUTOMOTIVE LTD. (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, - 440016
PH :07104-666444.

1040. AUTOMOTIVE MANUFACURERS PVT. LTD (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001
PH :0712-6555013/14.

1041. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2007-20-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASTRA - 440018
PH :0712-6664777.

DEALER WORKSHOP (AS ON 01.04.2017)

1042. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE INDIA PVT. LTD.) (2007-20-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASTRA - 441202
PH :8888819524.

NANDED

1043. SEVA AUTOMOTIVE LTD. (6801-68-01), NANDED HYDERABAD ROAD, NANDED - 431604
PH :02462-241599.

NANDURBAR

1044. SEVA AUTOMOTIVE LTD. (P301-KW-02), PLOT NO. - 3& 4, BANSITAL NAGAR, NEAR HOTEL KARAN GARDEN HOWFULLY BYE PASS ROAD, NANDURBAR.DIST.- SATARA - 425412
PH :02564-233000.

NARAYANGAON

1045. THE KOTHARI WHEELS (1906-FV-02), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504
PH :02132-244002.

NASHIK

1046. AUTOMOTIVE MANUFACTURERS LTD. (3702-37-01), P-1-12, ADDITIONAL NASIK INDL. AREA, AMBAD, NASIK - 422010
PH :0253-6636300/6636329/312/314/317.

1047. SEVA AUTOMOTIVE LTD. (3701-37-01), PLOT NO. X - 46, MIDC, AMBAD, NASIK - 422010
PH :0253-2386537.

1048. SHAAN CARS PRIVATE LIMITED (3703-37-01), E-3 MIDC AREA, SATPUR , NASIK, MAHARASHTRA - 422007
PH :0253-2351372.

1049. SEVA AUTOMOTIVE PVT LTD (3701-37-07), PLOT NO A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006
PH :0253-6604444.

1050. SEVA AUTOMOTIVES PVT LTD (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004
PH :0253-6654444.

NASIK

1051. SHAAN CARS PRIVATE LIMITED (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011
PH :0253-2236080.

1052. SEVA AUTOMOTIVE LTD. (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010
PH :0253-6642444.

NAVI MUMBAI

1053. AUTOMOTIVE MANUFACTURERS LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA, SHIRVANE NERUL, NEW BOMBAY, - 400706
PH :022-40183900/40183923/24/28, 7614603.

1054. S K WHEELS PVT LTD (0515-9K-01), D-267, TTC INDUSTRIAL AREA, TURBHE, NEW BOMBAY - 400075
PH :022-27625122, 022 - 27625102, 27689910, 20, 30, 40.

1055. EXCELL AUTOVISTA PVT LTD (AAC1-9K-02), PLOT NO-9, MIDC, NAVADE, TALOJA, TAL-PANVEL, DIST-RAIGAD - 410208
PH :022-27405555.

OSMANABAD

1056. CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-LW-03), PLOT NO. 1, TAWADE COMPLEX, PRERANA NAGAR, OSMANABAD, - 413501
PH :02472-228666.

PALGHAR

1057. SAI SERVICE PVT. LTD. (TE01-TE-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404
PH :2525-8308806722.

PALUS

1058. CHOWGULE INDUSTRIES PVT. LTD. (J102-0Z-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308
PH :02346-229021.

PANDHARPUR

1059. CHAVAN AUTOMOBILES(CHAVAN MOTORS DIVISION INDIA P) (B102-0H-05), GAT NO.56, ESABAVI, PUNE ROAD, TAL-PANDERPUR, SOLAPUR - 413001
PH :02186-228666.

PANVEL

1060. SIMRAN MOTORS (7S01-7S-01), PLOT2-8, SECTOR-15, OPP. HOTEL GARDEN, OLD MUMBAI PUNE HIGHWAY, PANVEL - 410206
PH :022-27488000, 27462605, 27490365.

1061. AUTOMOTIVE MANUFACTURERS LTD. (3901-7S-03), PLOT NO-92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206
PH :09272237071 TO 94.,

1062. K.T.S. AUTOMOTORS PVT. LTD. (0582-7S-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207
PH :9420611356/94206611326.

PATAS

1063. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-PR-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106
PH :02111-225009.

PEN

1064. SIMRAN MOTORS (9I01-9I-01), AT POST - VADKHAL NAKA, NH-17, MUMBAI GOA HIGHWAY, TAL - PEN, DISTT. RAIGAD - 402107
PH :02143-269073.

PHALTAN

1065. CHOWGULE INDUSTRIES PVT. LTD. (KH02-KH-01), PLOT NO.83/18/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA-PHALTAN, DISTRICT: SATARA, MAHARASTRA - 415523
PH :02161-200455.

PIMPLEGAON

1066. AUTOMOTIVE MANUFACURERS PVT LTD (BAY1-BAY-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202
PH :02550-252808.

PUNE

1067. MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD, OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA
PH :020-65001981.

1068. ACE KUDALE CAR PVT. LTD. (1910-19-01), 36/2C/1, MANRAJ BUDRUK, PUNE-SOLHAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE - 412201
PH :020-30456441/447/413.

1069. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-02), S.NO. 53, PUNE SATARA HIGHWAY, KATRAJ, PUNE - 411046
PH :020-26959460, 66786200.

1070. CHOWGULE INDUSTRIES PVT. LTD. (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046
PH :020-66803555.

1071. MY CAR (PUNE) PVT LTD (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057
PH :020-3988333/39810920.

1072. SAI SERVICE PVT. LTD. (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012
PH :020-46404440/48.

1073. SAI SERVICE PVT. LTD. (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004
PH :020-41401141/40.

1074. SAI SERVICE PVT. LTD. (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046
PH :020-41402222/240/241/242/243.

1075. SAI SERVICE PVT. LTD. (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019
PH :020-46605999/95.

1076. THE KOTHARI WHEELS (1906-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039
PH :020-66874100.

1077. WONDER CARS (P) LTD (1903-19-02), 12, NPS LINES, SOLAPUR ROAD, OLD POOL GATE CAMP, PUNE - 411001
PH :020-26332934/35.

1078. SEHGAL AUTORIDERS (1913-19-01), SURVEY NO. 51, BAYDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021
PH :020-8308304444/41463625/41463627.

1079. SAI SERVICE PVT. LTD. (1901-19-06), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE, MAHARASHTRA - 411057
PH :020-204200700.

1080. ACE KUDALE CAR PVT. LTD. (1910-19-02), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMAL, BHOSARI, PUNE. - 411039
PH :020-2030662009.

1081. THE KOTHARI WHEELS (1906-19-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019
PH :020-66352600.

1082. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036
PH :020-30217000, 67270000.

1083. SUMANKIRTI CARS PVT. LTD. (1915-19-01), SR. NO.131 OPP. SAI PETROL PUMP, PUNE MUMBAI EXPRESSWAY, TAHWADE, PUNE - 411033
PH :020-66333209.

1084. WONDER CARS PVT. LTD. (1903-19-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. - 411018
PH :020-27130171/2/3/8.

1085. SAI SERVICE PVT. LTD. (1901-19-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA - 411048
PH :020-71727001/2/3/4/5/6/7.

1086. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016
PH :020-67290018/17.

DEALER WORKSHOP (AS ON 01.04.2017)

1087. CHOWGULE INDUSTRIES PVT. LTD.
(1908-19-05), 129/2/B/1, NEW PUNE MUMBAI
HIGHWAY, KATRAJ DEHU ROAD BYPASS,
TATHWADE, TAL-MULASHI, DISTT. PUNE
(MAHARASHTRA) - 411033
PH :020-67915700.
1088. SAI SERVICE PVT. LTD. (1901-19-08), SURVEY
NO.37, HISSA NO. 2, SITUATED AT WADGAON
KHURD, NEAR NANDED CITY, SINHAGAD ROAD,
TALUKA - HAVELI, DISTRICT - PUNE,
MAHARASHTRA
PH :020-24391399.
1089. THE KOTHARI WHEELS (1906-19-05), PLOT NO.
24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. -
411028
PH :020-26871020, 8411002011.
1090. CHOWGULE INDUSTRIES PVT. LTD.
(1908-19-06), SR. NO.- 43/44/S, 7 PARVATI
INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY,
PUNE- SATARA ROAD, PUNE. - 411009
PH :020-67273200.
1091. MOTO DRIVE PVT. LTD. (1916-19-01), 1337/1,
REALITY BUILDING, WAGHOLI, PUNE NAGAR
ROAD, PUNE. - 412207
PH :9130049309.
1092. MOTO DRIVE PVT. LTD. (1916-19-02), GAT
NO.1346/1, UBBALENAGAR, WAGHOLI, PUNE
NAGAR ROAD, PUNE. - 412207
PH :9130049309.
1093. EXCELL AUTOVISTA PVT. LTD. (1917-19-01),
GATE NO.1232, 10TH MALL, PUNE SASWAD
ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST
PUNE. - 412308
PH :9320357300.
1094. THE KOTHARI WHEELS (1906-19-06), SURVEY
NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180),
WADGAON SHERI, CHANDAN NAGAR, PUNE
NAGAR ROAD, TAL-HAVELI, PUNE. - 411014
PH :020-27030400/444.
1095. ACE KUDALE CAR PVT. LTD. (1910-19-03),
SURVEY NO. 272, 1/4, NEAR MOSHI TOLL
PLAZA, MOSHI GAON, TALUKA – HAVELI,
DISTRICT – PUNE. - 412105
PH :020-9423123665.

RAHATA (SHIRDI)

1096. KANKARIYA AUTOMOBILES PVT LTD
(ZV03-ZV-01), SHIRDI ROAD, SAKORI, RAHATA, -
423107
PH :2423-243541.

RAJAPUR

1097. JAGRUT MOTORS P. LTD. (AHA1-AHA-01),
SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST:
RATNAGIRI - 416702
PH :02355-252238.

RATNAGIRI

1098. JAGRUT MOTORS P. LTD. (G301-G3-01),
D-25, MIDC MIRJOLE,MAHARASTRA,RATNAGIRI
- 415639
PH :02352-228380, 28380.

SANGAMNER

1099. SHAAN CARS PRIVATE LIMITED (HE03-HE-01),
GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE
HIGHWAY, SANGAMNER - DIST AHMEDNAGAR,
MAHARASHTRA - 422605
PH :8888846450.

SANGLI

1100. CHOWGULE INDUSTRIES PVT. LTD.
(J102-J1-01), GAT NO.243 SANGLI KOLHAPUR
ROAD, OPP. TO GAJANAN MAHARAJ MANDIR,
ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416
PH :0233-6631300.

SASWAD

1101. CHOWGULE INDUSTRIES PVT. LTD.
(1908-PH-03), SOLAPUR HIGHWAY, SASWAD,
DIST. PUNE - 412301
PH :02115-224450; 225210.

SATARA

1102. CHOWGULE INDUSTRIES PVT. LTD.
(F303-F3-01), PLOT NO. B-2,OLD MIDC,SATARA -
415002
PH :02162-245941/2/3.

SAWANTWADI

1103. JAGRUT MOTORS PVT. LTD. (BBL1-BBL-01),
SHIVSHAMBHO APARTMENT, 1190, A/P
KOLGAON, SURVEY NO.187, HISSA NO.33B,
TAL-SAWANTWADI, DISTT. SINDHUDURG. -
416510
PH :9765000872, 9823564372.

SHAHAPUR

1104. SHIVAM AUTO ZONE (I) PVT. LTD.
(BZU1-BZU-01), DR. DESHPANDE COMPOUND,
NEAR BHATSA COLONY, VILLAGE –
GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT –
THANE, MAHARASHTRA - 421601
PH :8082111222.

SHIRUR

1105. MAHALAXMI AUTOMOTIVES PVT. LTD.
(1912-ZD-02), 1023/1, NEXT INDIAN OIL PETROL
PUMP, SARADWADI, PUNE-AHMEDNAGAR
HIGHWAY, TAL: SJIRUR, DIST: PUNE,
MAHARASHTRA - 412210
PH :02138-615000.

SHIRWAL

1106. CHOWGULE INDUSTRIES PVT. LTD.
(BSD1-BSO-01), GAT NO.175, A/P SHINDEWADI,
SHIRWAL-BHOR ROAD, SHIRWAL, TAL
KHANDALA, DISTT. SATARA - 412801
PH :02169-244044.

SHRIRAMPUR

1107. KANKARIYA AUTOMOBILES PVT LTD
(LV03-LV-01), S.NO.139/1/3, NEAR NAKA NO.4,
SANGAMNER ROAD, SHRIRAMPUR DISTT.
AHMEDNAGAR - 413709
PH :02422-210264.

SILLOD

1108. PAGARIYA AUTO PVT. LTD. (2103-ZG-04), PLOT
NO. 19/20, SURVEY NO. 386, AURANGABAD
NAKA, SILLOD, AURANGABAD - 431112
PH :9660999468.

SINNAR

1109. SHAAN CARS PRIVATE LIMITED (3703-FU-03),
A-24, MIDC AREA MALEGAON,SINNAR TAL-
SINNAR, - 422103
PH :02551-230300.

SOLAPUR

1110. CHAVAN AUTOMOBILES(CHAVAN MOTORS
DIVISION INDIA P) (B102-B1-02), 150, AKALKOT
ROAD,OPP. SVCS HIGH SCHOOL,SOLAPUR, -
413006
PH :217-2606666.
1111. CHAVAN AUTOMOBILES(CHAVAN MOTORS
DIVISION INDIA P) (B102-B1-01), 18.39,
INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR,
- 413224
PH :0217-2378888, 2373999.

TALASARI

1112. SHIVAM AUTOZONE (BIN1-BIN-01), SURVEY NO.
191/1 PLOT NO. 5, AT-POST – VADAVALI, NH-8,
TALASARI, THANE, MAHARASHTRA - 401606
PH :02521-220777.

THANE

1113. THANAWALA MOTOR AGENCY (P) LTD
(3981-39-01), B-31, OPPOSITE ITI,WAGLE
ESTATE MAIN ROAD,WAGLE ESTATE,THANE
PH :022-25872222.
1114. FORT POINT (3906-39-01), KOTHARI
WAREHOUSE NO. 111,POKHARAN ROAD NO.
11,MANPADA, CHATALSAR,THANE - 400607
PH :022-41157777, 41515300,25897170.
1115. NAVNIT MOTORS LTD (3908-39-02), B R T PLOT
,THANE (W) ,MAHARASHTRA - 400607
PH :022-66066666.
1116. SPECTRA MOTORS LIMITED (0508-39-04),
B-74,ROAD NO. 33,NEAR ESI HOSPITAL,WAGLE
ESTATE, THANE - 400604
PH :8.8796660053E+017.
1117. SPECTRA MOTORS LIMITED (0508-39-06), C/O
MONARCH PLASTICS, GALA NO.4, MIRA CO-OP.
INDUSTRIAL ESTATE, KASHIMIRA, THANE -
401104
PH :022-28542185.

1118. PARAMOUNT WHEELS PVT. LTD. (3911-39-01),
OPP. PREMA LAXMAN SCHOLL. PANKERPADA,
MIRAROAD(E), DIST: THANE - 401107
PH :022- 42933944/45/51/52/53.

TITWALA

1119. PRAKASH AUTO PVT. LTD. (BYP1-BYP-01),
SHOP NO. 1, SURVEY NO. 23/2, GOVELI –
TITWALA ROAD, VILLAGE – GHOTSAI, TITWALA,
TALUKA – KALYAN, DISTRICT – THANE,
MAHARASHTRA - 421605
PH :0251-3240040 ,9960023999.

ULHASNAGAR

1120. PRAKASH AUTO PVT. LTD. (3903-39-01), U
NO-3,SHEET NO. 30,VITHALWADI STATION
ROAD, ULHASNAGAR - 421003
PH :0251-3228525/3257934,2561582.

VADUJ

1121. CHOWGULE INDUSTRIES PVT. LTD.
(F303-GQ-03), KALEVASTI, VADUJ DAHIWADI
ROAD , VADUJ - 415506
PH :02161-232323/232030.

VASAI

1122. SAI SERVICE PVT. LTD. (0504-V9-03), C/O
PRASHANTI INVESTMENT LTD.,NEAR GAODEVI
TEMPLE, VILLAGE SATIVILI,DISTT. THANE -
401208
PH :0250-9552590086 /87 /
0250-2480583/2481474,912455685, 453583.
1123. SAI SERVICE PVT. LTD. (V901-V9-01),
ANDRADESH BHAVAN, SURVEY #27 A,NEAR
UMELA PHATAK, VASAI (WEST), DIST. THANE,
MAHARASTRA - 401202
PH :88050229862 / 9552527214,.

VIRAR

1124. SAI SERVICE PVT. LTD. (V901-PG-02),
VILLAGE-VATAR, VIRAR(W)-TAL- VASAI,
DISTRICT-THANE, MAHARASHTRA - 401301
PH :8605000906 / 0250-2584105 / 2584015.

VITA

1125. CHOWGULE INDUSTRIES PVT. LTD.
(BSE1-BSE-01), S NO. 900, HISSA NO. 1.2,3/1/2,
SANGLI VITA ROAD, VITA, TALUKA –
KHANAPUR, DISTRICT – SANGLI,
MAHARASHTRA - 415311

WADA

1126. PARAMOUNT WHEELS PVT. LTD.
(BXD1-BXD-01), SURVEY NO.1337/1, WADA
BHIWANDI ROAD, VILLAGE GANDARE, POST
KONE, TALUKA WADA, DISTT. PALGHAR
(MAHARASHTRA) - 421303
PH :02526- 8411933992.

WAGHOLI

DEALER WORKSHOP (AS ON 01.04.2017)

1127. SAI SERVICE PVT. LTD. (1901-AB-04), GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL- HAVELI, DIST- PUNE - 412207
PH :020-4640333/31/32.

WAI

1128. CHOWGULE INDUSTRIES PVT. LTD. (BYC1-BYC-01), GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL – WAI, DISTT. SATARA - 412803
PH :8805095200, 880519820, 9922992887 .

WANI

1129. HIMALAYA CARS (4M01-0I-02), YASH LAWNS, COLLEGE/NAGPUR ROAD, TALLUKA,WANI, DISTRICT-YAVATMAL, MAHARASHTRA - 445304
PH :07239-228888.

WARDHA

1130. SEVA AUTOMOTIVE LTD. (2002-AC-02), GOPURI CHOWK ,OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001
PH :07152-253545/253525.

WARUD

1131. ASPA BANDSONS AUTO (P) LTD (F201-UG-04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906
PH :07229-232888.

WASHIM

1132. ASPA BANDSONS AUTO (P) LTD (F201-9D-02), NEAR RAILWAY CROSSING,HIGOLI ROAD,WASHIM, - 444505
PH :07252-233999.

YAVATMAL

1133. HIMALAYA CARS (4M01-4M-01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001
PH :07232-249992.

YEOLA

1134. SEVA AUTOMOTIVES PVT LTD (BST1-BST-01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA – YEOLA, DISTRICT – NASHIK, MAHARASHTRA - 423401
PH :0259-266166.

YEWAT

1135. MAHALAXMI AUTOMOTIVES PVT. LTD. (AZA1-AZA-01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). - 412202
PH :9881254892.

THANE

1136. PARAMOUNT WHEELS PVT. LTD. (3911-39-03), B-2, MIDC, MIRA ROAD, OFF NH-8, THANE. - 401107
PH :022-9004999360.

MANIPUR

CHURACHANDPUR

1137. EASTERN MOTORS (BBE1-BBE-01), HMUIA VENG.TEDDIM ROAD, CHURACHANDPUR, MANIPUR - 795128
PH :03874235969, 9862555472.

IMPHAL

1138. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR PH :0385-330856, 226816/2056962.
1139. EASTERN MOTORS (7401-74-02), NH,39, CHINGMEIRONG, WEST, IMPHAL - 795010
PH :0385-2422152.

THOUBAL

1140. EASTERN MOTORS (BJL1-BJL-01), THOUBAL ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138
PH :3848-9862662225.

MEGHALAYA

JOWAI

1141. RANI MOTORS (3I01-3I-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150
PH :03652-204025.

KHLEHRIAT

1142. BANALARI WORLD CARS (8502-PZ-03), JOWAI-SICAR ROAD, MEGHALAYA, KHLEHRIAT - 793150
PH :3655-9856299493.

MAWNGAP

1143. BANALARI WORLD CARS (CBK1-CBK-01), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST.-EAST KHASI HILLS, MEGHALAYA - 793121
PH :9774537902, 9615101743.

NONGPON

1144. RANI MOTORS (8501-TN-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT. - 793102
PH :03662-977401910/9774012380.

NONGSTOIN

1145. RANI MOTORS (8501-OP-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119
PH :9863022955.

SHILLONG

1146. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017
PH :364-09436111128/2575045.

1147. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014
PH :0364-241581.

1148. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA - 793021
PH :364-2535189, 2231287.

NAGALAND

DIMAPUR

1149. PROGRESSIVE MOTORS (3201-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112
PH :03862-30987, 30992.

KOHIMA

1150. PROGRESSIVE MOTORS (3201-4N-02), NH-39, NEAR INDIAN OIL PETROL PUMP, KOHIMA, - 797001
PH :03862-230987.

ORISSA

BERHAMPUR

1151. SKY AUTOMOBILES (E203-E2-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE – KONISI, BERHAMPORE, GANJAM, ODISHA - 761008
PH :7381266000.

BHUBANESHWAR

1152. JYOTE MOTORS (0402-04-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010
PH :7064499362.

CHANDIKHOLE

1153. SKY AUTOMOBILES (BXL1-BXL-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA - 755044
PH :9583000001.

JALESWAR

1154. JYOTE MOTORS PVT. LTD. (BXP1-BXP-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.- BALASORE, ODISHA - 756032
PH :8599019867.

NIMAPARA

1155. NARAYANI MOTORS PVT. LTD. (CFL1-CFL-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA - 752106
PH :9583001877.

SUBARNAPUR

1156. ODYSSEY MOTORS PVT. LTD. (BUK1-BUK-01), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNAPUR, ODISHA - 767017
PH :9439314464.

ANGUL

1157. ODYSSEY MOTORS PVT. LTD. (W101-W1-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145
PH :06764-221079, 221669.

BALASORE

1158. JYOTE MOTORS PVT LTD (L501-L5-01), PLOT NO. 278, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST. -BALASORE - 756019
PH :6782-2302200.

BARGARH

1159. ODYSSEY MOTORS (P) LTD (D401-SJ-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028
PH :06646 -246533.

BARIPADA

1160. JYOTE MOTORS PVT LTD (L501-RQ-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001
PH :6792-211200.

BERHAMPUR

1161. SKY AUTOMOBILES (E203-E2-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002
PH :7381266000.

BHADRAK

1162. JYOTE MOTORS PVT LTD. (I201-IZ-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK , ODISHA - 756101
PH :9776615001.

BHAVANIPATNA

1163. LEGEND CARS PVT. LTD. (SW01-TB-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001
PH :06670 -233345.

BHUBANESWAR

1164. JYOTE MOTORS PVT LTD (0402-04-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003
PH :0674-2436829.
1165. NARAYANI MOTORS PVT LTD (0403-04-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006
PH :0674-572872, 873.

DEALER WORKSHOP (AS ON 01.04.2017)

1166. SKY AUTOMOBILES (0404-04-01), PLOT NO. -435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR. - 751022
PH :674-2725912/2725992.

1167. NARAYANI MOTORS PVT LTD (0403-04-02), PLOT NO 56 AND 57,RASULGARH, BHUBANESHWAR, ODISHA - 751010
PH :0674-2588476.

BOLANGIR

1168. ODYSSEY MOTORS (P) LTD (D401-MW-03), NH-201, MADHIAPALI, SAMBALPUR ROAD, BOLANGIR, ORISSA - 767001
PH :6652-230031.

CUTTACK

1169. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011
PH :0671-2686527.

DHENKANAL

1170. SKY AUTOMOBILES (6701-4P-04), PLOT NO-136/1103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKANAL - 759001
PH :06726-243048-49.

JAJPUR

1171. SKY AUTOMOBILES (6701-RZ-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019
PH :06726-9583104012.

JEYPURE

1172. LEGEND CARS PVT. LTD. (SW01-SW-03), SOURAGUDA,JEYPURE,DISTT-KORAPUT,ORISSA,INDIA - 764001
PH :06854 -230624.

JHARSUGUDA

1173. ODYSSEY MOTORS PVT LTD (BUJ1-BJU-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201
PH :0663-4030011, 4075000.

KEONJHAR

1174. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA
PH :06766-256466.

1175. JYOTE MOTORS PVT. LTD. (7U01-7U-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001
PH :9776615001.

NAYAGARH

1176. JYOTE MOTORS PVT LTD (0402-DC-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069
PH :06753-225394.

PARADEEP

1177. NARAYANI MOTORS PVT LTD (OE01-OE-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. - 754141
PH :9583022020.

PURI

1178. NARAYANI MOTORS (4Q01-4Q-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002
PH :06752-231323.

ROURKELA

1179. ORBIT MOTORS (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041
PH :0661-2660777.

SAMBALPUR

1180. ODYSSEY MOTORS (P) LTD (D401-D4-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004
PH :0663-522102 - 03 -04-05.

PONDICHERRY

PONDICHERRY

1181. SHENBAKA CARS PRIVATE LIMITED (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010
PH :0413-2293391/92/93.

PUNJAB

ABOHAR

1182. TARA AUTOMOBILES (H501-H5-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB - 152116
PH :01634-28313-14.

AJNALA

1183. SWANI MOTORS PVT. LTD. (CBP1-CBP-01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102
PH :1858-220401.

AMRITSAR

1184. JAYCEE MOTORS (1702-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006
PH :0183-581334, 581335.

1185. RISHABH FOURWHEELS PVT. LTD. (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004
PH :0183-2263369.

1186. SWANI MOTORS LTD. (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001
PH :0183-400404.,

ANANADPUR SAHIB

1187. C M AUTOSALES (OF01-OF-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB,TEHSIL ANANDPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123
PH :01887-9592916811.

BALACHAUR

1188. LOVELY AUTOS (XV01-XV-01), NEAR MCDONALD – GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521
PH :9878427910.

BANGA

1189. LOVELY AUTOS (3503-MS-03), NAWASEHAR-JALANDHAR ROAD, BANGA - 144505
PH :01823-7355560557.

BANUR

1190. TRICITY AUTOS PVT. LTD. (BRT1-BRT-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601
PH :01762-660880.

BARNALA

1191. MAX AUTOS (4S01-4S-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001
PH :01679-285022, 9216529220.

BATALA

1192. CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, PH :01871-98724024253.

1193. PATHANKOT VEHICLEADES PVT. LTD. (A701-V5-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505
PH :01871-246246, 246245.

BHADSON

1194. HIRA AUTOMOBILES (BAG1-BAG-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202
PH :8872034034, 9217048236.

BHATINDA

1195. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001
PH :0164-2235349, 50.

BHOGPUR

1196. LOVELY AUTOS PVT. LTD. (BRU1-BRU-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201
PH :9872030006.

CHUNNI KALAN

1197. HOSHARPUR AUTOMOBILES (CFG1-CFG-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307
PH :1763-248005, 9815131766.

DASUYA

1198. HOSHARPUR AUTOMOBILES (H402-8D-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205
PH :01883-238892.

DERABASSI

1199. AUTOPACE NETWORK (P) LTD (0705-AW-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507
PH :01762-9815011669.

DEVIGARH

1200. HIRA AUTOMOBILES (OG01-OG-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111
PH :0175-2631152.

FARIDKOT

1201. MAPSKO AUTO INDIA PVT. LTD. (4U02-4U-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204
PH :01639- 253001.

FAZILKA

1202. TARA AUTOMOBILES (H501-4V-03), NH-10, NEAR SARVHITKARI BAL VIDYA MANDIR, FAZILKA - 152116
PH :01638-260213.

FEROZEPUR

1203. BABA AUTOS (7C01-7C-01), MOGA ROAD, FEROZEPUR CANTT - 152002
PH :01632-8872013211.

GARHSHANKAR

1204. HOSHARPUR AUTOMOBILES (H402-V4-02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHARPUR - 144527
PH :01884-283151.

GIDDARBAHA

1205. HIRA AUTOMOBILES (AJUA1-AJA-01), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBAHA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101
PH :01637-231510.

GORAYA

1206. LOVELY AUTOS (BJR1-BJR-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA - 144409
PH :01826-261001.

GURDASPUR

DEALER WORKSHOP (AS ON 01.04.2017)

1207. PATHANKOT VEHICLEADES PVT. LTD.
(A701-4X-03), V.P.O. BABRI NH-15, DIST.
GURDASPUR - 143521
PH :01874-247245, 247246.
1208. PATHANKOT VEHICLEADES (A701-4X-06), VPO -
JEEWANWAL BABRI, NH-15, GURDASPUR
(PUNJAB) - 143521
PH :01874-247244.

HOSHIARPUR

1209. HOSHIARPUR AUTOMOBILES (H402-H4-01),
SINGRIWALA, JALLANDHAR ROAD,
HOSHIARPUR, - 146001
PH :01882-251674, 250656, 309212.

JAGRAON

1210. SANDHU AUTOMOBILES (6206-LT-05),
NATIONAL HIGHWAY-64, JAGRAON - 142026
PH :01624-258558, 9876727296.

JAITU

1211. MAPSKO AUTO INDIA PVT. LTD. (YX02-YX-01),
NEAR CANAL, BATHINDA ROAD, JAITO,
DISTRICT - FARIDKOT. - 151202
PH :7347000520.

JALALABAD

1212. TARA AUTOMOBILES (H501-8E-02), F.F. ROAD,
NEAR THANA SADAR, JALALABAD - 152024
PH :01638-252913.

JALANDHAR

1213. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR
CHOWK, JALANDHAR CITY - 144001
PH :0181-237001, 02.
1214. STAN AUTOS PVT LTD (3504-35-01), OPP DPS
SCHOOL, G.T. ROAD, JALANDHAR - 144010
PH :0181-3952521.

JANDIALA MANJKI

1215. LOVELY AUTO (BJS1-BJS-01), SANT MARKET,
JANDIALA-BUNDALA ROAD, VILLAGE -
JANDIALA MANJKI, TEHSIL - NOORMAHAL,
DISTRICT - JALANDHAR, PUNJAB. - 144033
PH :7087439797.

JANDIALAGURU

1216. BABA AUTOS (7C01-GL-03), GT ROAD, NEAR
TARN TARAN BYE PASS, JANDIALA GURU -
143115
PH :0183-8872013029.

KAPURTHALA

1217. STAN AUTOS PVT LTD (3504-4Z-03), SIDHU
COMPLEX, CIRCLE ROAD - KAPURTHALA,
PUNJAB - 144602
PH :01822-
8872000288
8872006618, 9779623949.

KHANNA

1218. SANDHU AUTOMOBILES PVT. LTD.
(N301-N3-01), VILLAGE-KAUNI, NEAR GILL
PETROL PUMP, GT ROAD, KHANNA, DIST.
-LUDHIANA, PUNJAB. - 141401
PH :1858-220401.

KHARAR

1219. CM AUTOSALES PVT. LTD. (7K01-JH-03), NH-95,
MORINDA ROAD,KHANPUR, KHARAR. DIST.
MOHALI - 140301
PH :0160-9915022878.

LUDHIANA

1220. GULZAR MOTORS LTD. (6204-62-01), G.T.ROAD,
DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA
- 141003
PH :0161-534953, 534952, 543704, 5.
LIBRA AUTO CAR CO. LTD (6207-62-01), G.T.
ROAD, NEAR AIRPORT, LUDHIANA - 141020
PH :0161-2512701, 03.
1221. LIBRA AUTO CAR CO. LTD (6207-62-02), G.T
ROAD, NEAR AIRPORT, LUDHIANA. - 141020
PH :0161-2512701, 03.
1222. SANDHU AUTOMOBILES (6206-62-01),
DHOLEWAL CHOWK, LINK ROAD, LUDHIANA -
141203
PH :0161-2534514, 2535107.
1224. STAN AUTOS PVT LTD (6203-62-01), G.T.ROAD,
NEAR SHERPUR CHOWK, LUDHIANA - 141003
PH :0161-542300, 545800.
1225. STAN AUTOS PVT LTD (6203-62-04), HAMBRAN
ROAD, LUDHIANA - 141001
PH :0161-2304487.
1226. SWANI MOTORS SERVICES PVT. LTD.
(6208-62-01), 523, G.T.ROAD, NEAR DHANDHARI
RLY STATION, LUDHIANA - 141010
PH :0161-2510583, 2510883.
1227. STAN AUTOS (6203-62-06), OPP. BHAI BALA
GURUDWARA SAHIB OPP. PAKHOWAL ROAD,
LUDHIANA - 141008
PH :0161-9257243406.
1228. SWANI MOTORS SERVICES PVT. LTD.
(6208-62-02), GILL ROAD, NEAR CANAL BRIDGE,
LUDHIANA - 141003
PH :0161-5092244.
1229. SWANI MOTORS SERVICES PVT. LTD.
(6208-62-03), KHASRA NO. 114, 118, 119, 121/1/1,
121/2/1 OF VILLAGE-THREEKE, HADBAST NO.
156, AYALI CHOWK, FEROZEPUR ROAD,
LUDHIANA, PUNJAB. - 141003
PH :0161-2802074, 7355825175.
1230. STAN AUTOS PVT. LTD. (6203-62-07), B-32/751
JALANDHAR BYE PASS CHOWK NEAR SABJI
MANDI, LUDHIANA. - 141005
PH :8872640004.

1231. STAN AUTOS PVT LTD (6203-62-08), PLOT NO.
3, HB NO. 261, GIASPURA, GT ROAD (NEAR
DHANDARI RAILWAY STATION), LUDHIANA,
PUNJAB - 141014
PH :161-5043044,8872640004,.

MACHIWARA

1232. SANDHU AUTOMOBILES (6206-9T-03), SAMRALA
ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE
PALACE - 141115
PH :01628-250577.

MAHILPUR

1233. HOSHIARPUR AUTOMOBILES (H402-DD-05),
NEAR NEW BUS STAND, CHANDIGARH ROAD,
MAHILPUR, DIST. HOSHIARPUR - 146105
PH :01884-246997, 9915157997.

MALERKOTLA

1234. MAX AUTOS (CCI1-CCI-01),
MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE
- BHOGIWAL, MALERKOTLA, DIST.-SANGRUR,
PUNJAB. - 148023
PH :9814403131, 9056903131.

MALOUT

1235. HIRA AUTOMOBILES LTD. (6302-LE-05), TINKONI
CHOWK, NEAR LIC BUILDING, MALOUT - 152107
PH :01637-299524, 264724.

MANDI GOBINDGARH

1236. HOSHIARPUR AUTOMOBILES (U903-U9-01),
PLOT GOYAL MOTORS, NEAR YES BANK,
MANDI SIRHIND ROAD, NH-1,
MANDIGOBINDGARH, PUNJAB. - 147301
PH :0176- 5523628, 9878432739.

MANSA

1237. TARA AUTOMOBILES (7002-TL-02), BALATA
ROAD, NEAR ARVIND NAGAR, MANSA , PUNJAB
- 151505
PH :01652-216042.

MOGA

1238. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI
, G.T. ROAD, MOGA
PH :1636-226807.
1239. REMIRA MOTORS PVT. LTD. (H602-H6-01),
INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD,
MOGA. - 142001
PH :7087025402.

MOHALI

1240. STAN AUTOS PVT LTD (L104-L1-01), PLOT
NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI
- 160059
PH :0172-5020786, 5044849, 5020739.
1241. STAN AUTOS PVT LTD (L104-L1-02), PLOT
NO.C-147, INDUSTRIAL AREA, PHASE-7,
MOHALI - 160059
PH :0172-5020739.

1242. C M AUTOSALES PVT. LTD. (0706-L1-03), PLOT
NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI
- PUNJAB - 140110
PH :8284800597.

MUKERIAN

1243. HOSHIARPUR AUTOMOBILES (IP01-IP-01), VILL.
TALWANDI KALAN, GT ROAD, MUKERIAN -
144211
PH :01883-217346.

MUKTSAR

1244. HIRA AUTOMOBILES LTD. (6302-J8-03), BHAI
COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB
- 152026
PH :64642.

MULLANPUR

1245. SANDHU AUTOMOBILES (YY01-YY-01),
OPPOSITE DHAKA ROAD, FEROZEPUR ROAD,
MULLANPUR - 141101
PH :8437025969.

NABHA

1246. HIRA AUTOMOBILES LTD. (6302-UF-06), RADHA
SWAMI ROAD, NABHA - 147201
PH :01765-8437602800 ,9217048403.

NAKODAR

1247. LOVELY AUTOS (3503-5B-04), JALANDHAR
ROAD, NEAR MALARI GATE, NAKODAR - 144040
PH :01821-
7355554666, 9915028603.

NANGAL

1248. CM AUTOSALES PVT. LTD. (7K01-8F-02),
PLOT#36,AJOLI MOR, FOCAL POINT
INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB -
140126
PH :1884-9915022897.

NAWANSHAHR

1249. LOVELY AUTOS (3503-J7-02), NAWANSHAHR
CHANDIGARH ROAD, VILL.- LANGROHA, DISTT:-
NAWANSHAHR, PUNJAB - 144514
PH :01823-73555560006.

PATHANKOT

1250. PATHANKOT VEHICLEADES PVT. LTD.
(A701-A7-01), NEAR MAMMOON CHOWK,
DALHOUSIE ROAD, PATHANKOT, - 145001
PH :0186-47273.
1251. PATHANKOT VEHICLEADES PVT. LTD.
(A701-A7-04), NEAR A. B. COLLEGE,
PATAHANKOT - 145001
PH :0186-2233701, 9417900828.

PATIALA

1252. HIRA AUTOMOBILES LTD. (6302-63-04), C-20 &
C-45, FOCAL POINT, PATIALA, PUNJAB - 147001
PH :0175-2232377.

DEALER WORKSHOP (AS ON 01.04.2017)			
1253.	HIRA AUTOMOBILES LTD. (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001 PH :0175-2360131, 2360132, 2360562.	1264.	STAN AUTO (3504-ZY-04), NEAR TALWADI BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA - 144626 PH :01828-224222.
1254.	HIRA AUTOMOBILES (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001 PH :0175-2232295, 2232296.	TALWANDI SABOO	
1255.	ATELIER AUTOMOBILES PVT. LTD. (6303-63-01), VILLAGE MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR CASABA RESORT, PATIALA - 147001 PH :7527000106.	1265.	TARA AUTOMOBILES (ON01-ON-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWANDI SABO, BHATINDA - 1551302 PH :9646691047, 8437008666.
PATRAN		TALWARA	
1256.	HIRA AUTOMOBILES LTD. (6302-V3-02), NARWANA ROAD, PATRAN, PUNJAB, - 147105 PH :01764-244445, 245788.	1266.	HOSHIARPUR AUTOMOBILES (H402-LR-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216 PH :01883-238899, 295899, 9501084500.
PHAQWARA		TANDA	
1257.	STAN AUTOS PVT LTD (3504-5C-02), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH :01824-508067.	1267.	HOSHIARPUR AUTOMOBILES (H402-DE-06), VILL.PULPUKHATA, MIANI ROAD, TANDA - 144203 PH :01886-294320.
POHIR		TARN TARAN	
1258.	STAN AUTO (6203-XS-05), NEAR AHMEDGARH BYE PASS, POHIR, DISTRICT-LUDHIANA - 148101 PH :0161-2885500, 2885100.	1268.	JAYCEE MOTORS (BLP1-BLP-01), VILLAGE – KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401 PH :9780188456.
RAIKOT		ZIRA	
1259.	SANDHU AUTOMOBILES PVT. LTD. (XT01-XT-01), BARNALA BY PASS ROAD, RAIKOT - 141109 PH :01624-8437700026.	1269.	BABA AUTOS (7C01-GK-02), FEROZEPUR ROAD, ZIRA - 142047 PH :1682-8437700230.
RAJPURA		ZIRAKPUR	
1260.	HIRA AUTOMOBILES LTD. (HK01-HK-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA - 140401 PH :01762-244881-84.	1270.	TRIGITY AUTOS (9M01-9M-01), PATIALA HIGHWAY,VILLAGE - NABHA, ZIRAKPIR, PUNJAB - 140603 PH :9878359054.
RAMPURA PHUL		RAJASTHAN	
1261.	TARA AUTOMOBILES (XR01-XR-01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103 PH :01651-266643.	ABU ROAD	
ROPAR		1271.	NAVNEET MOTORS (OO01-OO-01), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026 PH :7665000995.
1262.	CM AUTOSALES PVT. LTD. (7K01-7K-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH :01881-9915022802.	AJMER	
SANGRUR		1272.	AJMER AUTO AGENCIES PVT. LTD. (B201-B2-01), SRINAGAR ROAD,AJMER (RAJASTHAN) - 305001 PH :0145-2426468.
1263.	MAX AUTOS (G401-G4-01), DHURI ROAD, SANGRUR, - 148024 PH :1672-39627.	1273.	RELAN MOTORS (B203-B2-01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001 PH :9251057111.
SULTANPUR LODHI		1274.	RELAN MOTORS (B203-B2-02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001 PH :9251019000.
		ALWAR	
		1275.	M.G. MOTORS (F901-F9-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001 PH :0144-732236.
		BAGRU	
		1276.	PREM MOTORS PVT. LTD. (US02-US-01), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPUR - 303007 PH :141-2865921.
		BALOTRA	
		1277.	L.M.J.SERVICES LTD (6502-9G-05), JODHPUR BALOTRA ROAD,BALOTRA, RAJASTHAN - 344022 PH :02988-220958.
		BANSWARA	
		1278.	NAVNEET MOTORS (X903-X9-01), NEAR J.C. MILL,OPPOSITE AKASHWANI,DAHOD ROAD,BANSWARA - 327001 PH :02962-201123.
		BARAN	
		1279.	BHATIA & COMPANY (6101-PM-03), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205 PH :07453-230312.
		BARMER	
		1280.	L.M.J.SERVICES LTD (6502-SH-06), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001 PH :2982-224641.
		BASSI	
		1281.	PREM MOTORS PVT. LTD. (VF02-VF-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301 PH :8058794085.
		BEHROR	
		1282.	M G MOTORS (FQ01-FQ-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701 PH :8003165999.
		BHARATPUR	
		1283.	TM MOTORS PVT. LTD. (5J01-5J-01), BRIJ VIHAR COLONY,MADARPUR ROAD,BHARATPUR,RAJASTHAN - 321001 PH :5644-226156.
		BHILWARA	
		1284.	CHAMPION CARS (E302-E3-01), CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001 PH :1482-513147.
		1285.	LOHIA AUTOMOBILES (E301-DELHI-01), AJMER ROAD,NEAR OCTROI POST,BHILWARA - 311001 PH :1482-28061, 36934, 51419.
		BHIWADI	
		1286.	FORTUNE CARS (9H01-9H-01), OPP. INDAG RUBBER,MAIN ROAD ,BHIWADI - 301019 PH :1493-645678.
		1287.	FORTUNE CARS (9H01-9H-02), F-458-C,RIICO,INDUSTRIAL AREA,BHIWADI - 301019 PH :1493-645682.
		BIJOLIA	
		1288.	LOHIA AUTOMOBILES (E301-UA-02), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTOR-BIJOLIA HIGHWAY, BIJOLIA, DIST. -BHILWARA - 311602 PH :9602515000.
		BIKANER	
		1289.	AUDI MOTORS LTD (7101-71-01), OPP. URMUL DAIRY PLANT,GANGANAGAR ROAD,BIKANER - 334004 PH :0151-522831, 61846.
		1290.	AUDI MOTORS LTD (7101-71-04), JAIPUR BYE PASS,BIKANER , - 334004 PH :141-2793924-7.
		1291.	AUDI MOTORS LTD (7101-71-05), OPP. AVYYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003 PH :151-2230384.
		BUNDI	
		1292.	BHATIA & COMPANY (6101-EF-02), 13-16B,INDUSTRIAL ESTATE,KOTA - 323301 PH :0747-2445457.
		CHAKSU	
		1293.	K.P. AUTOMOTIVES (P) LTD. (1104-JM-03), TONK ROAD, CHAKSU - 303901 PH :1429-243517.
		CHIRAWA	
		1294.	AUDI MOTORS LTD. (SY02-SY-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026 PH :8696543583.
		CHITTORGARH	
		1295.	BHATIA & COMPANY (K901-K9-01), PLOT NO. 1001/1-1002/1,NIMBAHERA ROAD,CHITTORGARH - 312001 PH :1472-235299.
		CHOMU	
		1296.	SANGA AUTOMOBILES PVT. LTD. (HW01-HW-01), OPPOSITE POWER HOUSE, MORIJA ROAD, CHOMU - 303702 PH :01423-223102.

DEALER WORKSHOP (AS ON 01.04.2017)

CHURU

1297. AUDI MOTORS PVT LTD (MD03-MD-01), NEAR
DTO OFFICE, JAIPUR ROAD, CHURU - 331001
PH :8875009044.

DAUSA

1298. VIPUL MOTORS LTD. (1102-FM-03), AGRA
JAIPUR ROAD, DAUSA - 303303
PH :1427-222158.

DEOLI

1299. K.P. AUTOMOTIVE (2001-Z0-01), KOTA- JAIPUR
HIGHWAY, NH-12, DEOLI - 304804
PH :9549651778.

DIDWANA

1300. SHRI MANGALAM AUTO PVT. LTD. (FT03-FT-01),
KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL,
LADNU ROAD, DIDWANA , DISTRICT – NAGAUR.
- 341303
PH :7231912912.

DUDU

1301. PREM MOTORS PVT. LTD. (BRY1-BRY-01),
KHASRA NO.1107 & 1108, OPPOSITE POWER
HOUSE SERVICE LANE, NH-8, DUDU. - 303008
PH :8058411181.

DUNGURPUR

1302. NAVNEET MOTORS (4902-GP-02), G-71,
INDUSTRIAL AREA, DUNGARPUR - 314001
PH :2964-233788.

FATEHNAGAR

1303. TECHNOY MOTORS INDIA PVT. LTD.
(4903-SV-03), UDAIPUR ROAD, OPP. HERO
HONDA SHOWROOM, FATEHNAGAR, UDAIPUR
- 313205
PH :2955-220304.

HANUMANGARH

1304. AUDI MOTORS LTD (7101-S7-03), JUNCTION
TOWN ROAD,HANUMANGARH - 335512
PH :01592-231295.

HINDAUN

1305. FORTUNE CARS (A UNIT OF JYOTI
AUTOMOBILES PVT LTD) (S002-S0-01), KHASRA
NO. 737, VILLAGE – PATTI NARAINPUR, NEAR
HANUMAN MANDIR, HINDAUN-MAHWA ROAD,
HINDAUN. - 322230
PH :8875005912.

JAIPUR

1306. KATARIA AUTOMOBILES (1181-11-01), 1-A ;
NARAYANPURI,KATARIA KRISHI FARM,SIRSI
ROAD,JAIPUR - 302034
PH :141-2471740/2471014 /2471406.

1307. VIPUL MOTORS LTD. (1102-11-05), 29,
INDUSTRIAL AREA, JHOTWARA, JAIPUR -
302012
PH :141-5194200.

1308. K.P. AUTOMOTIVES (P) LTD. (1104-11-01), E-198,
SANGANER INDUSTRIAL
AREA,MANSAROVAR,JAIPUR - 302020
PH :0141-445534, 35, 36, 442605.

1309. PREM MOTORS PVT. LTD. (1112-11-02), 12
13,SUDARSHANPURA INDUSTRIAL AREA,
JAIPUR - 302006
PH :141-0141-2213065/2216229.

1310. SANGA AUTOMOBILES (1110-11-01), SECTOR
35, PRATAP NAGAR,SANGANER, JAIPUR -
302033
PH :141-4110200.

1311. SANGA AUTOMOBILES (1110-11-03), CHOKDI
HAWALI SHAHAR, SHIRKI SHAHAR, NEAR
IDGAH, BILOCHOYAN MOHALLA, DELHI ROAD,
JAIPUR - 302002
PH :141-3050400.

1312. VIPUL MOTORS LTD. (1102-11-01),
F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA
NAGAR,JAIPUR - 302017
PH :0141-523339, 520405.

1313. K.P. AUTOMOTIVES (P) LTD. (1104-11-06),
GROUND FLOOR, ORBIT MALL, AJMER ROAD,
JAIPUR, RAJASTHAN - 302006
PH :141-4079999.

1314. PREM MOTORS PVT. LTD. (1112-11-01), PLOT
NO. E101/A, VKI , JAIPUR - 302039
PH :141-3055563.

1315. SATNAM MOTOCORP PVT. LTD. (1113-11-01),
PLOT NO. E-524, SITAPURA INDUSTRIAL AREA,
JAIPUR – 302 022, RAJASTHAN. - 302022
PH :0141-2771623.

1316. KTL PVT. LTD. (1114-11-01), PLOT NO. 13B,
JHOTWARA INDUSTRIAL AREA, JAIPUR. -
302012
PH :0141-2345222.

JAISALMER

1317. LMJ SERVICES (5L01-5L-01), PLOT NO.36, 37,
MAHESH REFUGEE COLONY,HDC SOCIETY,
DABLA ROAD, JAISALMER (RAJASTHAN) -
345001
PH :9314223963.

JALORE

1318. SHRI KRISHNA AUTOSALES PVT. LTD.
(VD01-VD-01), KHASRA NO.6809/2616, 2623,
INDUSTRIAL AREA, JALORE-BHINMAL ROAD,
JALORE - 343001
PH :9001893669.

JHALAWAR

1319. BHATIA & COMPANY (6102-RV-02), OPP. BALAJI
KI CHHATRI , KHEL CIRCULAR STADIUM, BUS
STAND ROAD, JHALAWAR - 326001
PH :07432-234009.

JHUNJHUNU

1320. AUDI MOTORS (FN03-FN-02), E1-2,
AUTOMOBILES SERVICE SECTOR, RIICO
INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR
ROAD, JHUNJHUNU. - 333001
PH :01592-2250024.

JOBNER

1321. PREM MOTORS PVT. LTD. (BRD1-BRD-01),
KHASRA NO. 758 & 754, BABER WALON KI
DHANI, JOBNER, TEHSIL – PHULERA, DISTRICT
– JAIPUR, RAJASTHAN - 303328
PH :8058794094.

JODHPUR

1322. L.M.J.SERVICES LTD (6502-65-01), PRATAP
NAGAR,JODHPUR - 340002
PH :0291-28158, 33205.

1323. L.M.J.SERVICES LTD (6502-65-04), OPP TO RFC
OFFICE,NEW POWER HOUSE ROAD,JODHPUR -
342003
PH :0291-2617772.

1324. SRI KRISHNA AUTOSALES PVT LTD
(6503-65-01), 32-A,HEAVY INDUSTRIAL AREA,NR
FCI GODOWNS, JODHPUR - 342005
PH :0291-2748405.

1325. L.M.J.SERVICES LTD (6502-65-09), B-8,9,10,
MARUDHAR INDUSTRIAL AREA, PHASE 1,
BASNI, JODHPUR - 342008
PH :8094011147.

1326. L.M.J.SERVICES LTD (6502-65-0C), 21/1, PAL
MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE,
JODHPUR - 342002
PH :293-2256177.

KEKRI

1327. AJMER AUTO AGENCIES PVT. LTD.
(B201-GZ-03), KOTA SAWAR ROAD,KEKRI -
305404
PH :01467-222398.

KISHANGARH

1328. FORTUNE CARS (9H01-TU-03), KISHANGARH
BIWADI HIGHWAY, NEAR KISHANGARH,
DISTRICT ALWAR - 301405
PH :1460-243323.

KOTA

1329. BHATIA & COMPANY (6101-61-01), 13-16
B,INDUSTRIAL ESTATE, KOTA - 324007
PH :0744-451367, 22373, 26469.

1330. BHATIA & COMPANY (6102-61-01), AUTO
MOBILE ZONE,G-11/12 INDUSTRIAL AREA,
KOTA - 324005
PH :0744-2439006.

1331. BHATIA & COMPANY (6101-61-04),
3(K),CHAMBAL INDUSTRIAL
AREA,KOTA,RAJASTHAN - 324007
PH :9413350336.

1332. BHATIA & COMPANY (6101-61-05), E-46,
CHAMBAL INDUSTRIAL AREA, KOTA - 324007
PH :0744-6450918.

1333. BHATIA & COMPANY (6101-61-06), PLOT NO.
E-222, ROAD NUMBER 5, INDRAPRASTHA
INDUSTRIAL AREA, KOTA, RAJASTHAN. -
324005
PH :7446451110.

KOTPUTLI

1334. PREM MOTORS PVT. LTD. (MH09-MH-01), NH-8,
BUCHARA COLONY, OPP. SHAKTI VIHAR,
KOTPUTLI, JAIPUR - 303108
PH :8058794312.

KUCHAMAN

1335. SHRI MANGALAM AUTO PVT. LTD.
(VA02-VA-01), SUDARSHAN NAGAR, BURSU
ROAD, KHASRA NO.148, KUCHAMAN. - 341508
PH :9649518518.

MAHWA

1336. VIPUL MOTORS PVT. LTD. (BKZ1-BKZ-01),
KHASRA NO.37/384, BHARATPUR ROAD
BYE-PASS, N.H.-11, MAHWA, DISTT. DAUSA
(RAJASTHAN) - 321608
PH :988747928.

MAKRANA

1337. SHRI MANGALAM AUTO PVT. LTD.
(CFX1-CFX1-01), KHASRA NO. 609/4, NEAR
BAJAJ SHOWROOM, MANGLANA ROAD,
MAKRANA, DISTRICT – NAGAUR. - 341505
PH :7231913913.

MALPURA

1338. K.P. AUTOMOTIVES PVT. LTD. (BLB1-BLB-01),
PLOT NO.07, SHRI KALYAN NAGAR COLONY,
JAIPUR-KEKRI ROAD, MALPURA - 304502
PH :9549656456.

NAGAUR

1339. SHRI MANGLAM AUTO PVT. LTD. (HL03-HL-01),
KHASRA NO. 1479/982 & 1478/83, BIKANER
ROAD, NAGAUR.
PH :01582-2242828, 242400,9116007210.

NASIRABAD

1340. AJMER AUTO AGENCIES PVT. LTD.
(B201-VB-04), CHAVANI BOARD NO:1613, HAWA
CHAKKI, NASIRABAD ROAD, NASIRABAD,
DISTT. AJMER - 305601
PH :9314391011.

NATHDWARA

DEALER WORKSHOP (AS ON 01.04.2017)

1341. LOHIA AUTOMOBILES (X201-TZ-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND - 313301
PH :2953-234761.

NEEM KA THANA

1342. JAMU AUTOMOBILES (P) LTD (K701-TV-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713
PH :1574-231575.

NEEMRANA

1343. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-OP-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705
PH :8875004356.

NOHAR

1344. AUDI MOTORS LTD (VE02-VE-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523
PH :1555-220485.

NOKHA

1345. AUDI MOTORS LTD. (I501-I5-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803
PH :8875010555.

PALI

1346. LMJ SERVICES (6502-J9-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401
PH :2932-256277.

PAOTA

1347. K P AUTOMOTIVES PVT. LTD. (BRH1-BRH-01), PATTI SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106
PH :9462686008.

PRATAPGARH

1348. BHATIA AND CO (PN01-PN-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605
PH :9414397142.

RAISINGHNAGAR

1349. AUDI MOTORS (BHK1-BHK-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT – SRIGANGANAGAR - 335051
PH :9982638516.

RAJGARH

1350. MG MOTORS (IY01-IY-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408
PH :9001781777.

RAJSAMAND

1351. LOHIA AUTOMOBILES (X201-X2-01), BHILWARA ROAD,KHANKROLI,RAJSAMAND DISTT, RAJSAMAND - 313301
PH :2952-320460.

RAMGANJMANDI

1352. BHATIA & COMPANY (BAZ1-BAZ-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519
PH :9414085790.

RAWATBHATA

1353. BHATIA AND COMPANY (JQ01-JQ-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA, DIST. CHITTORGARH, RAJASTHAN. - 323307
PH :1475-214999,9462719294.

SAGWARA

1354. TECHNOY MOTORS INDIA PVT. LTD. (CK01-CK-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025
PH :9530306910.

SAWAI MADHOPUR

1355. PREM MOTORS PVT. LTD. (FY03-FY-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001
PH :8058791638.

SHAHUPURA

1356. K.P. AUTOMOTIVES (P) LTD. (1104-NH-05), VILLAGE RAJPURA,GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103
PH :8696934964.

SIKAR

1357. JAMU AUTOMOBILES (P) LTD (K701-K7-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001
PH :1572-245515.

SIROHI

1358. NAVNEET MOTORS (4902-LK-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001
PH :2972-222917.

SOJAT

1359. LMJ SERVICES LTD. (BW11-BW1-01), KHASRA NO. – 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104
PH :306104.

SRIGANGANAGAR

1360. AUDI MOTORS LTD (U201-U2-01), NEW AUTOMOBILE MARKET,SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001
PH :0154-2466225.

1361. AUDI MOTORS LTD (U201-U2-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001
PH :9982638516.

SUJANGARH

1362. AUDI MOTORS PVT. LTD. (BRB1-BRB-01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507
PH :7665722860.

SUMERPUR

1363. L.M.J. SERVICES LTD. (6502-VC-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHEREA GROUND, SUMERPUR - 306902
PH :02933 -274977,274978,9414411609.

SURATGARH

1364. AUDI MOTORS LTD (U201-LG-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804
PH :1509-224227, 224228.

TONK

1365. K P AUTOMOTIVES PVT LTD (GM01-GM-01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001
PH :1432-8696925252.

UDAIPUR

1366. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD,UDAIPUR - 313001
PH :0294-415143.
1367. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002
PH :0294-2494451-55.
1368. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002
PH :2955-220304.

SIKKIM

GANGTOK

1369. ENTEL MOTORS (B901-B9-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102
PH :3592-649125, 232341, 232059.

JORTHANG

1370. ENTEL MOTORS (B901-ND-02), PIPEALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121
PH :3595-257030, 257020, 257069.

ANNUR

TAMIL NADU

1371. JAI KRISHNA AUTO SALES PVT. LTD (DN01-DN-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653
PH :0422-04254-262744/ 978850733.

ARIYALUR

1372. PILLAI & SONS (EB01-EB-01), NO.1/1 , NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704
PH :9442281302/ 9442418751.

BHAVANI

1373. AMBAL AUTO (H701-IG-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316
PH :0424-2230408.

CHENGALPATTU

1374. AIE CARS PVT. LTD. (BBS1-BBS-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEUPURAM, TAMIL NADU. - 603002
PH :7299057387.

CHENNAI

1375. J.J IMPEX (MARUTI SERVICE MASTERS) (1485-14-01), # 9, (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032
PH :044-43563366, 43563367.
1376. A.B.T LTD (1401-14-01), 102, MOUNT ROAD, GUINDY, CHENNAI - 600032
PH :044-42254544, 42254554.
1377. A.B.T LTD (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093
PH :044-23650488, 23650490.
1378. A.B.T LTD (1401-14-06), NO. 1 & 2, VASANTHA PRESS,ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020
PH :044-24465814 , 24465815.
1379. A.B.T LTD (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106
PH :044-42267603, 42267621.
1380. A.B.T LTD (1411-14-01), 29, WALLS ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058
PH :044-42281720/708.
1381. C.A.R.S. INDIA PVT LTD. (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058
PH :044-26359600, 42947900.
1382. C.A.R.S. INDIA PVT LTD. (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020
PH :044-24461584, 24461584..

DEALER WORKSHOP (AS ON 01.04.2017)

1383. C.A.R.S. INDIA PVT LTD. (1403-14-03), 4/321, OLD MAHABALIKPURAM RD. , KOTTIVAKKAM, CHENNAI - 600040
PH :44-43590914, 4294830.

1384. C.A.R.S. INDIA PVT LTD. (1403-FP-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066
PH :044-26323434/3737.

1385. C.A.R.S. INDIA PVT LTD. (1403-14-05), PLOT NO.- 80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112
PH :044-23821862/ 23821852.

1386. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-03), PLOT NO. SP-35, 1ST MAIN ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI - 600058
PH :044-43445000/45968000.

1387. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-02), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107
PH :044-64598982, 64598986..

1388. KHIVRAJ MOTORS LTD (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006
PH :044-42269575.

1389. POPULAR VEHICLES & SERVICES LTD. (1410-14-01), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093
PH :044-65877973, 974, 975, 65610801, 802, 803, 804, 805, 806, 42136611.

1390. POPULAR VEHICLES & SERVICES LTD. (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117
PH :044-64525444/64526444.

1391. POPULAR VEHICLES & SERVICES LTD. (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI , CHENNAI - 600099
PH :044-246626410/ 64626411.

1392. VISHNU CARS (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004
PH :044-24661973/74/75.

1393. VISHNU CARS (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043
PH :044-40175555.

1394. KHIVRAJ MOTORS LTD (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032
PH :044-43542303/05/06.

1395. ABT LTD (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU . - 600041
PH :044-24490585/86, 42281700, 42281749.

1396. AIE CARS (A UNIT OF A.I. ENTERPRISES (P) LTD.) (1484-14-01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115
PH :044-30193020/30193019.

1397. RAJALAKSHMI CARS (1486-14-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI . - 600060
PH :044-33015454/ 8939995454.

1398. KHIVRAJ MOTORS PVT. LTD. (1480-14-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI - 600096
PH :44-9043019626/ 7092033013.

1399. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-04), NO.225,JAWAHARALAL NEHRU ROAD, KOYAMBEDU, CHENNAI - 600107
PH :044-42006000-23.

1400. ABT LTD (1401-14-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119
PH :044-24502185-87.

1401. VISHNU CARS PVT. LTD. (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089
PH :044-8754440002/ 9677244332.

1402. VISHNU CARS PVT. LTD. (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056
PH :26792961/ 26792962.

1403. VISHNU CARS PVT. LTD. (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100
PH :044-9840929994/ 9840944478.

1404. VISHNU CARS PVT. LTD. (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM – THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. - 600117
PH :044-9940057775.

1405. VISHNU CARS PVT. LTD. (1427-14-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI . - 600016
PH :044-32531117.

1406. RAJALAKSHMI CARS PVT. LTD. (1486-14-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095
PH :044-43870090, 893999541.

1407. KAPICO MOTORS (INDIA) PVT. LTD (1420-14-06), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058
PH :7401930335.

COIMBATORE

1408. A.B.T.LTD (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001
PH :0422-4232660, 4232666.

1409. A.B.T.LTD (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037
PH :0422-4232588, 4232550.

1410. A.B.T.LTD (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043
PH :0422-228155.

1411. A.B.T.LTD (4101-41-0A), NO 49, PANKAJA MILL ROAD, OPP INDIAN EXPRESS OFFICE, RAMANATHAPURAM, COIMBATORE - 641045
PH :0422-4516000, 4390434.

1412. AMBAL AUTO (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005
PH :0422-3075000, 3075001.

1413. AMBAL AUTO (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011
PH :0422-3075211, 3075203..

1414. AMBAL AUTO (4103-41-08), SF-84, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE. - 641013
PH :0422-3075800.

1415. AMBAL AUTO (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027
PH :0422-2331646.

1416. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-01), 8/60-C&8/62-D, METTUPALAYAM ROAD, G.N.MILLS POST , NEARJOHNBOSCO CHURCH,COIMBATORE - 641029
PH :0422-4519140.

1417. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004
PH :0422-4383220.

1418. AMBAL AUTOMOBILES (4103-41-0C), SENGUPTA STREET, RAM NAGAR, COIMBATORE. - 641009
PH :0422-3009600/ 3009602.

1419. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE - 641004
PH :0422-2511773.

1420. AADHI CARS PVT. LTD. (4108-41-01), NO.176/2, SATHYAMANGALAM ROAD, SARAVANAPATTI, COIMBATORE - 641035
PH :8754009117/ 8754045977.

1421. ABT LTD (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024
PH :0422-9994408618/ 9500911243.

1422. AADHI CARS PVT. LTD. (4108-41-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004
PH :0422-8754045421/ 8754045443.

1423. AADHI CARS PVT. LTD. (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041
PH :0422-3000211/ 3000204.

1424. AADHI CARS PVT. LTD. (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE.- - 641005
PH :4000777.

1425. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. - 641008
PH :9047077775.

1426. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-OH-04), NO.12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020
PH :0422-698899.

COONOOR

1427. AMBAL AUTOMOBILES (3G01-3G-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102
PH :0423-2202254.

CUDDALORE

1428. A.B.T.LTD (5Q01-5Q-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003
PH :04142-227699, 227599..

DHARAPURAM

1429. AMBAL AUTO (H701-QN-04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656
PH :04258-301107/ 301103.

DHARMAPURI

1430. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-SR-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTITHALLI (PO), DHARMAPURI , TAMILNADU - 636807
PH :04342-233933.

DINDIGUL

1431. PLA MOTORS (S401-S4-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL - 624001
PH :0451-3098300.

ERODE

1432. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (H701-H7-01), 23/1, PERUND, URAI ROAD, ERODE. - 638011
PH :0424-3056600/ 3056602.

GOBICHETTPALAYAM

DEALER WORKSHOP (AS ON 01.04.2017)			
1433. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (H701-QM-03), NO. 318, CUTCHERY, GOBICHETTI PALAYAM - 638476 PH :04285-302001/ 302005.	1442. GANESH CARS (C601-APA-04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH :0416-9842313139/ 9842333061.	1453. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008 PH :2489074.	1462. AMBAL AUTO (4103-Y1-05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001 PH :0423-3075303, 3075311.
GUDUVANCHERY	KINATHUKADAVU	MALLUR	PENNA GARAM
1434. VISHNU CARS (BAD1-BAD-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203 PH :9500121553/ 9677112225.	1443. AADHI CARS PVT. LTD. (BB11-BBI-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109 PH :0422-3000506/ 3000505.	1454. THRIVENI CAR COMPANY PVT LTD. (CDH1-CDH-01), SURVEY NO.50/4A, AMANI AMMAPALAYAM VILLAGE, DISTT.: DADHAGAPATTY SUB REGISTRATION , MALLUR DISTT. SALEM - 636309 PH :427-2422399, 2440000.	1463. SRI AMMAN CARS INDIA PVT. LTD. (BX21-BXZ-01), SURVEY NO. 419/1, VILLAGE – PARUVADHANAALLI, PENNA GARAM, DHARMAPURI. - 636810 PH :9790036371.
GUMMIDIPOONDI	KOTAGIRI	MAYILADUTHURAI	PERAMBALUR
1435. RAJALAKSHMI CARS PVT. LTD. (BIZ1-BIZ-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE PAPPANAKUPPAM, GUMMIDIPOONDI, THIRUVALLUR - 601201 PH :8939995454 / 8939853972.	1444. AADHI CARS PVT. LTD. (BAS1-BAS-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217 PH :04266-8754045891/ 8754045442.	1455. PILLAI & SONS MOTORS CO. (E701-AG-04), 46 VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007 PH :04364-43542303/ 43542306.	1464. PLA MOTORS (2305-DQ-04), SURVEY NO.88/1, A3 NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212 PH :0431-403361/3461.
HARUR	KOVILPATTI	METTUPALAYAM	POLACHI
1436. SRI AMMAN CARS INDIA PVT. LTD. (AAV1-AAV-01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903 PH :04346-9790004273/ 9790004279.	1445. ASIR AUTOMOBILES PVT. LTD. (NO01-NO1-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501 PH :04632-232220.	1456. A.B.T LTD (4101-EU-0C), PLOT NO. 6 TO 9.PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043 PH :04254-228155.	1465. A.B.T LTD (L301-L3-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003 PH :04259-37010,37020.
HOSUR	KRISHNAGIRI	NAGERCOIL	PUDUKOTTAI
1437. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-7Q-01), P.O.- PERANDAPALLI,NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 PH :4344-260277.	1446. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-QL-03), NH-7,NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001 PH :9750699555/ 6220009348.	1457. SRIVATSA INTERNATIONAL PVT. LTD. (S502-S5-01), PLOT NO. 31B1-1, BEACH ROAD JUNCTION, KOTTAR, NAGERCOIL, DISTRICT-KANYAKUMARI, TAMIL NADU. - 629002 PH :04652-232344, 236344/ 8973423332.	1466. PLA MOTORS (2305-SU-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003 PH :04322-265566/67.
IDAPPADI	KUMBakonam	NAMAKKAL	RAJAPALYAM
1438. THRIVENI CAR COMPANY PVT LTD. (HI01-HI-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101 PH :04283-222300.	1447. PILLAI & SONS MOTORS CO. (E701-N4-02), 369/2 B, KUMBakonam CHENNAI MAIN ROAD, KUMBakonam , TANJAVUR - 612501 PH :0435-2442566,65.	1458. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (X401-X4-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL - 637001 PH :04286-307507, 307512.	1467. A.B.T LTD (4202-SV-03), NO. 10/32, DHARMAPURAM, SRIVILLIPUTHUR MAIN ROAD, RAJAPALYAM - 626125 PH :04563-260298.
KANCHEEPURAM	MADURAI		RASIPURAM
1439. GANESH CARS PVT.LTD (C601-JA-02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH :044-67275222/27277771.	1448. A.B.T LTD (4202-42-02), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018 PH :0452-2547108, 2547125.	1459. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (X401-X4-03), 1/412/1 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001 PH :04286-307500-502.	1468. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (BSJ1-BSJ-01), SURVEY NO-41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401 PH :04287-231177.
KARAIKUDI		OMALUR	SALEM
1440. A.B.T LTD (4202-HX-05), 42-43 KOVILLOOR ROAD, OPP. TNSTC DEPOT - 630302 PH :04565-232484, 232488..	1449. A.B.T LTD (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH :0452-4387050/51/52.	1460. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-UM-04), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012 PH :04277-9790004273/ 9750799555.	1469. A.B.T LTD (4101-A2-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009 PH :0427-4066988, 406999.
KARUR			1470. THRIVENI CAR COMPANY PVT LTD. (A203-A2-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005 PH :0427-2440000/ 2336599.
1441. A.B.T LTD (K401-K4-01), SF NO. 529/1, SALEM BY PASS,ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002 PH :04324-222261/62/63.	1450. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH :0452-2688888.	1461. THRIVENI CAR COMPANY PVT LTD. (UM01-UM-01), PLOT NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT, NH-7, KAMALAPURAM VILLAGE, OMALUR, DISTRICT – SALEM, TAMIL NADU - 636309 PH :04290-222611, 711.	1471. S.M.CARS PVT. LTD. (A204-A2-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202 PH :7094448000, 7034449000.
KATPADI		OOTY	SANKAGIRI

DEALER WORKSHOP (AS ON 01.04.2017)

1472. THRIVENI CAR COMPANY PVT LTD.
(BTN1-BTN-01), SURVEY NO.171/5B, KCK
PLAZA, KACHERIDADU, DEPUTY COLLECTOR
ROAD, SALEM, SANKAGIRI (TAMIL NADU) -
637301
PH :4283-242600.

SANKARANKOVIL

1473. AADHI CARS PVT. LTD. (BXS1-BXS-01), PLOT
NO. 132/H, OPPOSITE TO NEW TALUK OFFICE,
TIRUVENGADAM ROAD, SANKARANKOVIL. -
627756
PH :04636-223331
8754043378.

SATHYAMANGALAM

1474. SREE SARADHAMBAL AUTOMOBILES PVT. LTD.
(BGU1-BGU-01), SURVEY NO. 51, 54 & RS NO.
37, KOTTUVEERAMPALAYAM VILLAGE,
SATHYAMANGALAM – 638 401, DISTRICT –
ERODE, TAMIL NADU - 638401
PH :222026/ 222036.

SIVAKASI

1475. MEENAKSHI AUTO ZONE PVT. LTD.
(X602-X6-01), 372 D & E, ARUNACHALAM
COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. -
626123
PH :04562-231281.

SRIPERUMBUDUR

1476. RAJALAKSHMI CARS PVT. LTD. (7B01-7B-01),
SURVEY NO. 150/1A, DOOR NO 1C, THERADI
STREET, NEW VILLAGE NO 42,
SRIPERUMBADUR, KANCHEEPURAM DISTRICT,
TAMIL NADU. - 602105
PH :044-65683041.

SULUR

1477. JAI KRISHNA AUTO SALES PVT. LTD
(4107-TK-05), DOOR NO. 37 F,
RANGANATHAPURAM, TRICHY ROAD, SULUR
PH :0422-3199901.

TANJAVUR

1478. PILLAI & SONS MOTORS CO. (E701-E7-01), 12A,
SELVAM NAGAR, TANJAVUR, TAMILNADU -
613007
PH :04362-71723, 71724.

TENKASI

1479. AADHI CARS PVT. LTD. (BXR1-BXR-01), DOOR
NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI
MAIN ROAD, VILLAGE – KUNARAMANALLUR,
TENKASI. - 627814
PH :04636-252050.

THIRUMULLAIVOYAL

1480. KAPICO MOTORS (INDIA) PVT. LTD
(CDW1-CDW-01), NO. 48, BALAJI NAGAR, NEW
SIR IRVANSTADE FORD HOSPITAL,
THIRUMULLAIVOYAL DISTT. CHENNAI - 600062
PH :9551070545.

THIRUVALLUR

1481. KHIVRAJ MOTORS LTD (1404-HH-04), 2151,
KAKKULUR ROAD, THIRUVALLUR - 602001
PH :044-27662888.
1482. KHIVRAJ MOTORS LTD (1404-HH-05), PLOT
NOS.218,219,220,225,226,227.228 AND
S.NOS.18/5,18/6, EMPIRE CITY PART-3,
KAKKALLUR VILLAGE, THIRUVALLUR THALUK,
THIRUVALLUR - 602001
PH :9791070359.

THIRUVARUR

1483. PILLAI & SONS MOTORS CO. (E701-LJ-03),
THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE
- 610001
PH :04366-250250.

THUCKALAY

1484. SRIVATSA INTERNATIONAL PVT. LTD.
(BWQ1-BWQ-01), D NO. 5/76B,
THIRUVITHANCODE ROAD, KERALAPURAM,
MUTHALAKURUCHI, VILLAGE –
MUTHALAKURUCHI, THUCKALAY, DISCTRICT –
KANYAKUMARI - 629174
PH :4651-252592, 8973218881.

TIRUCHENDUR

1485. ASIR AUTOMOBILES PVT. LTD. (CGJ1-CGJ-01),
SURVEY NO. 220/1D1A, 221/3, 221/4, 221/5,
221/5A, 221/5B, PODHIGAI NAGAR,
VILLAGE-VEERAPANDIYAPATINAM,
THIRUCHENDUR, TUTUCORIN. - 628215
PH :04639-246220.

TIRUCHENGODE

1486. AMBAL AUTO (X401-QP-02), PLOT NO-10, OPP
TO PONNUSWAMY KALYANA MANDAPAM,
KOOTAPALLI COLONY, TIRUCHENGODE -
637001
PH :04288-282292/ 306726.

TIRUNAMALAI

1487. GANESH CARS PVT.LTD (C601-LX-03), NO.-5,
NH-78, KRISHANAGIRI PONDY ROAD, CHINA
KANKEYANUR, OPP SKP ENGG. COLLEGE,
THIRUVANNAMALAI - 606601
PH :04175-249319.

TIRUNELVELLI

1488. AADHI CARS PVT. LTD. (A303-A3-01), PLOT NO.
261, MADURAI MAIN ROAD, KARAIERUPPU,
TIRUNELVELI , TAMIL NADU - 627357
PH :0462-2300040/ 9500991487.

TIRUPUR

1489. A.B.T LTD (4101-Y7-09), NO. 4, SABHAPATHI
PURAM, NEAR TMF HOSPITAL, TIRUPUR -
641601
PH :0421-4305686 , 4305640.

1490. SHASHTI CAR PVT LTD (Y701-Y7-01), SRI
PADMINI GARDENS, KANGEYAM ROAD, OPP.
ST.JOSEPH SCHOOL, TIRUPUR - 641604
PH :0421-2430275/ 2430276.

TRICHY

1491. A.B.T LTD (2302-23-02), 4/40, COLLECTOR
OFFICE ROAD, CANTONMENT, TRICHY - 620001
PH :0431-4221602 , 4221603..

1492. A.B.T LTD (2302-23-03), MADRAS TRUNK ROAD,
MAMBALASALAI, TRICHY - 620005
PH :0431-4221555, 4221564.

1493. PLA MOTORS (2305-23-01), NO. 18/2, NA-45,
DHEERAN NAGAR, TRICHY-DINDUGAL MAIN
ROAD, TRICHY - 620009
PH :0431-2403361, 9843055561.

1494. PLA MOTORS (2305-23-03), 10A & B, ALXANDRIA
ROAD, CANTONMENT, TRICHY - 620001
PH :0431-2411540/530.

TUTICORIN

1495. ASIR AUTOMOBILES PVT. LTD. (S603-S6-01),
SURVEY NO. 25/1B, MAPPELLAIURINI VILLAGE,
ETTAYAPURAM ROAD, TUTICORIN, TAMIL
NADU - 628002
PH :2337220/ 7373120220.

UDUMALPET

1496. ABT LTD (QR01-QR-01), 2/3, PERIYAKOTTAI
PIRIVU, S.V. MILL POST, UDUMALPET - 642126
PH :04252-222572/ 222573.

UTHANGARAI

1497. SRI AMMAN CARS INDIA PVT. LTD.
(CFY1-CFY-01), SURVEY NO. 104/1, 104/1B,
VILLAGE – THANDIYAPANNUR, UTHANGARAI,
KRISHNAGIRI. - 635304
PH :9790004273.

VALLIYUR

1498. AADHI CARS PVT. LTD. (BXQ1-BXQ-01), DOOR
NO. 314A/11-14, WITHIN VADAKU VALLIOOR,
REVENUE VILLAGE, VADAKKU VALLIOOR
PANCHAYAT, RADHAPURAM TALUK, VALLIOOR.
- 627002
PH :04857-223000.

VANIYAMBADI

1499. GANESH CARS PVT. LTD. (BJY1-BJY-01), NO.
197/1B1, NH-46 (AH-7), PETHAKALLUPALLI
VILLAGE, NEAR TOLL GATE, VANIYAMBADI ,
VELLORE (DIST), TAMIL NADU. - 635801
PH :291520.

VELLORE

1500. GANESH CARS PVT.LTD (C601-C6-01), 91 NEW
BY-PASS ROAD, VELLORE - 632004
PH :0416-6454221, 2233709.

VILLUPURAM

1501. A.B.T LTD (5Q01-QQ-02), 264/1, GINGEE MAIN
ROAD, AYINAMPALAYAM, VILLUPURAM - 605602
PH :04146-225509.

VIRUDHACHALAM

1502. ABT LTD (BMA1-BMA-01), PLOT NO. 56,
JUNCTION ROAD, NEAR SHANMUGA LODGE,
VIRUDHACHALAM. DISTRICT – CUDDALORE,
TAMIL NADU. - 606101
PH :04143-262631,32,33.

TELANGANA

ADILABAD

1503. ADARSHA AUTOMOTIVES PVT LTD
(BTM1-BTM-01), SURVEY NO:131/6 & 131/7,
NH-44, ADILABAD TOWN ROAD, MAVALA,
ADILABAD, TELANGANA. - 504001
PH :08732-7799784538.

ARMUR

1504. VARUN MOTORS PVT. LTD. (BBN1-BBN-01),
SURVEY NO.277, ARGUL VILLAGE,
JAKARANPALLY (MANDAL), ARMUR,
NIZAMABAD DISTT. (A.P.) - 503224
PH :08643-8142281424: 26/26/27.

BHUPALPALLY

1505. ADARSHA AUTOMOTIVES PVT. LTD.
(D502-BCF-04), 6-113, JAWAHAR NAGAR, MAIN
ROAD, SBH MAIN BRANCH ROAD,
BHUPPALPALLY, DISTRICT - WARANGAL,
ANDHRA PRADESH - 506169
PH :08715-7799790526.

CHEVELLA

1506. GEM MOTORS INDIA PVT. LTD. (CBL1-CBL-01),
SURVEY NO. 17/A, MANDAL – CHEVELLA,
DISTRICT – RANGA REDDY, TELANGANA. -
510101
PH :9912899128.

QADWAL

1507. SRI JAYARAMA MOTORS PVT LTD
(WP01-BHR-02), PLOT NO. 5 & 6, BESIDE RURAL
POLICE STATION, KURNOOL ROAD, MAHABUB
NAGAR DISTRICT, ANDHRA PRADESH - 500125
PH :08546-8096990074.

GHATKESAR

1508. ACER MOTORS PVT. LTD. (BYL1-BYL-01), 3-21,
JODIMETLA, CHOUDA RIGID VILLAGE
GHATKESAR MANDAL, DISTRICT – RANGA
REDDY. - 501301
PH :040-9849017827.

HYDERABAD

DEALER WORKSHOP (AS ON 01.04.2017)

1509. RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD PH :040-9848062263.

1510. SAI SERVICE PVT. LTD. (1011-10-02), #2-3-505,ML GARDENS, AMBERPET, HYDERABAD (A.P.) - 500013 PH :040-65646565.

1511. GEM MOTORS (INDIA) PVT. LTD. (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR,,HYDERABAD , ANDHRA PRADESH - 500084 PH :040-40506070.

1512. GEM MOTORS (INDIA) PVT. LTD. (1009-10-02), 2-11, SURVEY NO. 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH :40-40302525.

1513. RKS MOTORS PVT. LTD. (1003-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482 PH :040-3371115, 33.

1514. RKS MOTORS PVT. LTD. (1003-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039 PH :040-7200193, 7204444.

1515. RKS MOTORS PVT. LTD. (1003-10-04), 16-11-19/5/2,C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036 PH :040-23434576, 77.

1516. RKS MOTORS PVT. LTD. (1003-10-05), 11-6-191/192,OPP. HOTEL HARSHA,PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD - 500001 PH :040-23432390, 391.

1517. SAI SERVICE PVT. LTD. (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, ,BALANAGAR, HYDERABAD - 500037 PH :040-44604000.

1518. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD,AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020 PH :040-7662481, 7618488, 7641786,7630422.

1519. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10,NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081 PH :040-23114567, 3444.

1520. THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8,NEAR MARGADARSI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074 PH :040-24122222.

1521. THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD - 500076 PH :040-27176999.

1522. VARUN MOTORS PVT. LTD. (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, ,BALANAGAR, HYDERABAD - 500037 PH :040-3778035,3778036, 3777979.

1523. VARUN MOTORS PVT. LTD. (4603-10-0A), 1-11-200,SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016 PH :040-27766533.

1524. VARUN MOTORS PVT. LTD. (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036 PH :040-4553395, 4547676.

1525. VARUN MOTORS PVT. LTD. (4603-10-0B), ADITYA NAGAR COLONY, ,ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008 PH :40-64551700.

1526. VARUN MOTORS PVT. LTD. (1010-10-01), PLOT NO. VI- VI/ A & B,UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070 PH :40-24027677.

1527. VARUN MOTORS (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008 PH :040-9965104860, 69997979.

1528. RKS MOTORS PVT. LTD. (1003-10-08), D.NO.1-10-1/285/1, OPP. VEGETABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062 PH :040-49054905,9010822210.

1529. SAI SERVICE PVT. LTD. (1011-10-04), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD - 500059 PH :040 -8886512309,23808080.

1530. VARUN MOTORS PVT. LTD. (4603-10-0G), 1-10-28/1 SY. NO.285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH :040-7799600098.

1531. VARUN MOTORS PVT. LTD. (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH :040-64551700.

1532. VARUN MOTORS PVT. LTD. (4603-10-0J), PLOT NO. 1-45, SY.NO:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE - 500019 PH :040-9885206555.

1533. KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT NO. A-23 & A31/1, I.D.A. NACHARAM, HYDERABAD - 500076 PH :040-66985555, 9100114877.

1534. GEM MOTORS (INDIA) PVT. LTD. (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA - 500089 PH :040-9912899128.

1535. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SQUARE, VILLAGE - GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE - 500032 PH :040-7680046666, 9704835556.

1536. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081 PH :9704835556.

1537. KALYANI MOTORS PVT. LTD. (1018-10-02), M/S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE - KARMANGHAT, MANDAL - SAROORNAGAR, DISTRICT - RANGA REDDY, HYDERABAD. - 500079 PH :040-9014600700.

1538. ADARSHA AUTOMOTIVES PVT. LTD. (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA RAO EXPRESSWAY), RAJENDRANAGAR, UPPERPALLY, ATTAPUR, RANGA REDDY, HYDERABAD, TELENGANA - 500048 PH :9703152222.

1539. SAI SERVICE PVT. LTD. (1011-10-07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH :040-766181100.

1540. ADARSHA AUTOMOTIVES PVT. LTD. (1014-10-01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005 PH :040-8142326633.

1541. RKS MOTORS PVT. LTD. (1003-10-09), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072 PH :040-23432311.

1542. SAI SERVICE PVT. LTD. (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018 PH :040-9133346300.

JAGTIAL

1543. ADARSHA AUTOMOTIVES PVT LTD (N601-NU-04), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL. - 505327 PH :8724-8886152222.

JANGAON

1544. ADARSHA AUTOMOTIVES PVT. LTD. (K101-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167 PH :8716-9959223393.

KAMAREDDY

1545. VARUN MOTORS PVT. LTD. (KX01-KX-01), H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111 PH :08142-551166/77/88/99.

KARIMNAGAR

1546. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-01), H.NO. 8-6-313/1 ,HYDERABAD ROAD,BY-PASS JUNCTION,KARIMNAGAR - 505001 PH :0878-2277200, 300.

1547. ADARSHA AUTOMOTIVES PVT LTD (N601-N6-05), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. - 505001 PH :0878-8886152222.

KHAMMAM

1548. MITHRA AUTO AGENCIES PVT LTD (2604-1G-02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003 PH :08742-222444.

KODAD

1549. PAVAN MOTORS PVT. LTD (BRP2-BRP-01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD , DISTRICT - NALGONDA, TELANGANA - 508206 PH :8683-8008899995.

MANCHERIAL

1550. ADARSHA AUTOMOTIVES PVT LTD (N601-CM-03), BEHIND MAHINDRA TRACTORS SHOWROOM,BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208 PH :08736-255757.

MEHABOOS NAGAR

1551. SRI JAYARAMA MOTORS PVT. LTD. (WP01-WP-01), PLOT NO.C1 & C2, INDUSTRIAL ESTATE, METTUGADA, MEHBOOBNAGAR - 504001 PH :08542-256111, 9866545424.

MIRYALGUDA

DEALER WORKSHOP (AS ON 01.04.2017)

1552. PAVAN MOTORS PVT. LTD (WR01-WR-01),
SURVEY NO-940 &943, (OPPOSITE TO MINA
ENGINEERING COLLEGE) NARKETPALLY
ADDANKI BY-PASS ROAD,MIRYALAGUDA
,NALGONDA DISTRICT,ANDHRA PRADESH -
508207
PH :08689-8790900399.

MOINABAD

1553. GEM MOTORS (INDIA) PVT. LTD.
(CFN1-CFN-01), SURVEY NO. 70, PLOT NO. 4,
VILLAGE AND GRAM PANCHAYAT – HIMAYATH
NAGAR, MANDAL – MOINABAD, DISTRICT –
RANGA REDDY. - 500075
PH :9912899128.

NALGONDA

1554. PAVAN MOTORS PVT. LTD (AN01-AN-01),
CHERLAPALLY VILLAGE, NALGONDA ROAD,
NALGONDA - 508001
PH :08682 -247399,8790344499.

NIRMAL

1555. ADARSHA AUTOMOTIVES PVT LTD
(N601-AA-02), H. NO. 1-1-131, ,SHASTRINAGAR,
,MANCHIRIAL ROAD, DISTT. ADILABAD,
NIRMAL - 504106
PH :8734-9912752344.

NIZAMABAD

1556. VARUN MOTORS PVT. LTD. (1H02-1H-01), PLOT
NO. GP 1-57/4/1,PANGARA
BORGOAN,NIZAMABAD - 503230
PH :08642-234428.

PARGI

1557. VARUN MOTORS (CBO1-CBO-01), HOUSE NO.
2-356 JANGAIAH COMPLEX, SURVEY NO.
217/EE4, JAYANTHI NAGAR COLONY, MANDAL –
PARGI, DISTRICT – RANGA REDDY. - 510501
PH :08556-988521055, 9885200000.

RAMAGUNDAM

1558. ADRASHA AUTOMOTIVES PVT. LTD.
(BGA1-BGA-01), 5-6-172 SURVEY NO. – 259/B,
MEDIPALLY SHIVAR, RAMAGUNDAM
MUNICIPALITY, DISTRICT – KARIM NAGAR,
ANDHRA PRADESH - 505209
PH :08728-8886144550.

RAMAYAMPET

1559. VARUN MOTORS PVT. LTD. (CDO1-CDO-01),
SURVEY NO. 1626 & 1628/2 SITUATED AT
BLOCK NO. 16, RAMAYAMPET, DISTRICT –
MEDAK - 502101
PH :9885208555.

SANGAREDDY

1560. SAI SERVICE PVT. LTD. (1011-OI-05),
H.NO.4-8-92/1/4/5, AHMED NAGAR,
OPP.GOV'T.ITI, SANGAREDDY, MEDAK (DIST),
ANDHRA PRADESH - 502001
PH :08455 -278090,7799360003.

SECUNDERABAD

1561. ACER MOTORS (K601-K6-01), A1, MOTI
VALLEY,TRIMULGHERRY,SECUNDERABAD, -
500015
PH :040-7740774, 7747559.

1562. AUTOFIN LIMITED (K606-K6-01), SURVEY NO.
33, MEDCHAL ROAD, BOWENPALLY,
SECUNDERABAD - 500011
PH :040-67295858.

1563. SAI SERVICE PVT. LTD. (1011-K6-06), PLOT NO.
1-8-308/3/1, PATIGADDA, BEGUMPET,
SECUNDERABAD, TELANGANA - 500016
PH :040-27904644.

1564. VARUN MOTORS PVT. LTD. (4603-K6-01),
1-10-176/1, BEHIND VARUN TOWERS-I, OPP.
HYDERABAD PUBLIC SCHOOL, BEGUMPET,
SECUNDERABAD, HYDERABAD, TELANGANA
STATE. - 500016
PH :040-9985552452.

1565. RKS MOTORS PVT. LTD (K605-K6-01), PLOT NO.
207, TADBUND, SECUNDERABAD. - 500009
PH :040-23434520, 9010834567.

1566. PAVAN MOTORS PVT. LTD (K608-K6-01),
PREMISES NO.6-1-17/A AND 6-1-18, WALKER
TOWN, PADMARAO NAGAR, SECUNDERABAD. -
500025
PH :040-27502750.

1567. AUTOFIN LIMITED (K606-K6-02), SURVEY NO.
177/B & 178/C SITUATED AT VILLAGE –
KOMPALLY, MANDAL – QUTHBULLAPUR,
HYDERABAD.

SHAD NAGAR

1568. SRI JAYARAMA MOTORS (P) LTD (WS01-WS-01),
SERVEY NO.445, FAROOQ NAGAR,
SHADNAGAR, MAHABUB NAGAR DISTT.
ANDHRA PRADESH. - 500216
PH :08548-8096991424.

SHANKARPALLY

1569. SAI SERVICES PVT. LTD. (CEX1-CEX-01),
SURVEY NO. 203, HYDERABAD ROAD OPP. SM
FUNCTION HALL ROAD, SHANKARPALLY,
RANGA REDDY DISTT. - 501203
PH :8416-9966377888, 9912899128.

SIDDIPET

1570. ADARSHA AUTOMOTIVES PVT. LTD.
(CAL1-CAL-01), SURVEY 197/A, VILLAGE –
PONNALA, SIDDIPET, DISTRICT – MEDAK,
TELANGANA - 502103
PH :0457-888662222, 7799784525.

TANDUR

1571. VARUN MOTORS PVT. LTD. (CFR1-CFR-01), H.
NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45,
46, 47, SURVEY NO. 57 OF MALREDDYPALLY
VILLAGE, TANDUR MUNICIPALITY, VIKARABAD
DISTRICT, TELANGANA. - 501141

THORRUR

1572. ADARSHA AUTOMOTIVES PVT. LTD.
(BYV1-BYV-01), SURVEY NO.1 TO 5, BEARING
M. NO.4-153/1, VILLAGE & MANDAL THORRUR
DISTT. WARANGAL - 506163
PH :9059438007.

VIKARABAD

1573. GEM MOTORS (INDIA) PVT. LTD.
(BYM1-BYM-01), SHOP NO. 3-2-93/2, VILLAGE –
YENNAPALLY, VIKARABAD MUNICIPALITY,
VIKARABAD, DISTRICT – RANGA REDDY,
TELANGANA - 501101
PH :8416-9912349840.

WANAPARTHY

1574. SRI JAYARAMA MOTORS (P) LTD
(WQ01-WQ-01), SURVEY NO.1149, KURNOOL
ROAD, WANAPARTHY (A.P.) - 509103
PH :08543-954248662.

WARANGAL

1575. ADARSHA AUTOMOTIVES PVT LTD
(D502-D5-02), PLOT NO.10, INDUSTRIAL AREA,
MULUGU ROAD, WARRANGAL - 506007
PH :0870-2623359.

1576. ADARSHA AUTOMOTIVES PVT LTD
(D502-D5-03), OPPOSITE TO ORUGALLU
FILLING STATION, HUNTER ROAD,
SHAYAMPET, HUNAMKONDA, WARANGAL -
506001
PH :0870-2523349, 9959223393.

ZAHIRABAD

1577. SAI SERVICE PVT. LTD. (BAT1-BAT-01), PLOT
NO-5,NEAR IBP PETROL BUNK,
NH-9,ALIPUR,ZAHIRABAD,MEDAK
(DIST),ANDHRA PRADESH - 502220
PH :8451-9966377888.

AGARTALA

1578. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR,
OPP. INDUSTRIAL ESTATE, AGARTALA - 799003
PH :0381-230542.

1579. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL
AREA ARUNDHATI NAGAR, AGARTALA. - 799003
PH :0381-2371402, 9436123592.

1580. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843,
MOUJA & TEHSIL – KHAYERPUR, JIRANIA
SUBDIVISION, AGARTALA - 799008
PH :0381-9436121559.

TRIPURA

AMBASSA

1581. JAIN UDYOG (CDT1-CDT-01), A.A. ROAD,
OPPOSITE OF CHANDRAI PARA HS SCHOOL,
AMBASSA, DHALAI, TRIPURA. - 799289
PH :9436123592.

DHARMANAGAR

1582. JAIN UDYOG (6901-RN-03), DHARMANAGAR
COLLEGE ROAD, DHARMANAGAR,
TRIPURA(NORTH). – 799250
PH :3822-23047, 9774040553.

UDAIPUR

1583. JAIN UDYOG (YU01-YU-01), DHWAJANAGAR
INDUSTRIAL ESTATE,UDAIPUR,TRIPURA
(SOUTH) - 799116
PH :3821-222640/9774020152.

UNION TERRITORY

PANCHKULA

1584. AUTO VOGUE PVT. LTD. (K303-K3-01), PLOT
NO- 388, INDUSTRIAL AREA PHASE-1,
PANCHKULA, HARYANA. - 134113
PH :8725099358.

UTTAR PRADESH

AGRA

1585. PRIME MOTORS (6681-66-01), 8B/7D, BYE PASS
ROAD, DEV NAGAR, AGRA
PH :0562-2531881,2531882.

1586. MADHUSUDAN MOTORS PVT LTD (6603-66-01),
B-5 LAWYERS COLONY, BYE PASS ROAD,
AGRA - 282005
PH :0562-531102-05.

1587. MADHUSUDAN MOTORS PVT LTD (6603-66-02),
GANESH GANJ, PRATAPPURA, AGRA - 282001
PH :0562-3297501.

1588. MADHUSUDAN MOTORS PVT LTD (6603-66-03),
6-A , VIBHAV INDUSTRIAL STATE, AGRA -
282007
PH :0562-3299221.

1589. MADHUSUDAN MOTORS PVT LTD (6603-66-04),
26/253, SULTAN GANJ KI PULJA, MAUZA
LASKARPUR, AGRA - 283203
PH :9837097894.

1590. PREM MOTORS PVT. LTD. (6605-66-01),
KHASRA NO.382,386,387,388, VILLAGE
ARTHONI, DELHI-AGRA HIGHWAY, NH-2, AGRA,
UTTAR PRADESH - 282007
PH :9690010795, 3215315/16.

1591. KTL PVT. LTD (6606-66-01), MUGHAL ROAD,
KAMLA NAGAR, AGRA - 282004
PH :8449715033, 8449700000.

1592. PREM MOTORS PVT. LTD. (6607-66-01), 45,
OPPOSITE AGRA COLLEGE, GOKULPURA,
AGRA, UTTAR PRADESH - 282002
PH :0562-2523022, 9690010795.

DEALER WORKSHOP (AS ON 01.04.2017)

1593. KTL PVT. LTD (6606-66-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001
PH :05622-410004.
1594. KTL PVT. LTD. (6606-66-03), 44/320 B, MAUJA BODLA, BODLA CHOWK, AGRA - 282007
PH :0562-8449715091,7060404416.

AKBARPUR

1595. KTL PVT. LTD. (2801-LH-03), KANPUR ROAD, AKBARPUR - 209206
PH :7408409304.
1596. SMARTWHEELS PVT. LTD. (7201-LH-08), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOPUR, AKBARPUR , DIST-AMBEDKAR NAGAR (U.P.) - 224122
PH :244570.

ALIGARH

1597. VINEET MOTORS (MSZ) (B681-B6-02), PLOT NO D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH
PH :9917473052, 9562123586.
1598. DEV MOTORS (P) LTD (B601-B6-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001
PH :0571-521771.

ALLAHABAD

1599. AMITDEEP MOTORS (2901-29-01), 26 SULEM SARAI, G.T ROAD, ALLAHABAD - 211001
PH :0532-2636301, 2436360.
1600. GREENLAND MOTORS (2903-29-01), 40, INDUSTRIAL ESTATE, TELEARGANJ, ALLAHABAD - 211004
PH :0532-9838107735.
1601. GREENLAND MOTORS (2903-29-03), 52/36, LUKERGANJ, ALLAHABAD - 211001

AMETHI

1602. KTL PVT LTD (1302-AA-Y-07), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR - 227409
PH :05368-244445.

AURAIYA

1603. KULDEEP MOTORS (QJ01-QJ-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA - 206241
PH :9235358444.

AZAMGARH

1604. DEEP MOTORS (K501-K5-01), HARBANSHPUR NARAULI, AZAMGARH - 276001
PH :05462-325387.
1605. DEEP MOTORS (K501-K5-03), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. - 276138
PH :9838072923.

BAHERI

1606. KAVISHA MOTORS PVT. LTD. (BSB1-BSB-01), KASRA NO. 530, 531, 532, 533, NAINITAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201
PH :7895980110.

BAHRAICH

1607. ANAND MOTORS (1301-5Z-05), LUCKNOW ROAD,BEHRACH,UTTAR PRADESH - 271801
PH :7860786161.

BAKSHI KA TALAB

1608. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-II-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020
PH :9838075960, 9628300000.

BALLIA

1609. DEEP MOTORS (K501-BA-02), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001
PH :9838072917.

BALRAMPUR

1610. ANAND MOTOR AGENCIES LTD. (XB01-XB-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201
PH :05263-232144.

BANDA

1611. MY CAR PVT. LTD. (2803-KV-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001
PH :9839029868.

BARABANKI

1612. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-6A-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001
PH :9838075960.

BARAUT

1613. RAJ SNEH AUTO INDIA PVT LTD (4803-LL-04), DELHI SAHARANPUR ROAD, OPP.POLICE CHECK POST, NEAR VERDHMAN -DHARAM KANTA, BARAUT - 250611
PH :9837581179.

BAREILLY

1614. CORAL MOTORS (P) LTD. (5602-56-01), STATION ROAD, BAREILLY - 243001
PH :0581-559191.
1615. CORAL MOTORS (P) LTD. (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002
PH :0581-0581-2554922.
1616. KAVISHA MOTORS PVT. LTD. (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502
PH :0581-480404,5,6,7,8.

BASTI

1617. SMARTWHEELS PVT. LTD. (7201-6B-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002
PH :05542-286294.

BHADOHI

1618. VARANASI MOTORS PVT. LTD. (8402-TT-02), VARNASI ROAD, BHADOHI - 221401
PH :9838360662.

BIJNOR

1619. RAJ SNEH AUTO INDIA PVT LTD (4803-6D-03), PLOT NO. CFC INDUSTRIAL AREA, OPPOSITE SUGAR MILL, NAGINA ROAD, BUNORE - 246701
PH :01342-246701.

BILASPUR

1620. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-BCN-01), NH-87, OPPOSITE SHAGUN, BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR. - 244921
PH :7895600005, 7247800009.

BUDAUN

1621. CORAL MOTORS (P) LTD. (5602-NF-04), PLOT NO. - 72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103
PH :9837891846.

BULANDSEHAR

1622. SK & COMPANY (M561-M5-02), KHASRA NO. 2261, NEAR T POINT , BY PASS SHIKARPUR ROAD , BULANDSHAHR.
PH :05732-235400.

BULANDSHAHR

1623. ROHAN MOTORS LTD. (T201-M5-02), PLOT NO-561, M.T. VILLAGE AKBARPUR, OPP. PANDIT PETROL PUMP, BULANDSAHAR, UTTAR PRADESH - 203001
PH :9758418546.

CHANDAUSI

1624. AKANKSHA AUTOMOBILES PVT. LTD. (XA01-XA-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412
PH :254111.

DEOBAND

1625. ATELIER AUTOMOBILES (XK01-XK-01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001
PH :7500250042.

DEORIA

1626. SMARTWHEELS PVT. LTD. (M601-M6-01), PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST. -DEORIA, UTTAR PRADESH. - 274001
PH :05568- 7705800602.

ETAH

1627. MADHUSUDAN VEHICLES PRIVATED LTD. (XG01-XG-01), 472 ASROLI, GT ROAD, ETAH - 207125
PH :9837097894.

ETAWAH

1628. KULDEEP MOTORS (6E01-6E-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001
PH :05688-257029.

FAIZABAD

1629. SMARTWHEELS PVT. LTD. (7201-F5-02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001
PH :05278-309333.

FARRUKHABAD

1630. MY CAR PVT. LTD. (2803-TS-04), NEKPUR KALAN, FARRUKHABAD - 209625
PH :9839029868.

FATEHABAD

1631. KTL PVT LTD (BLQ1-BLQ-01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT – AGRA, UTTAR PRADESH - 283111
PH :8449715063.

FATEHPUR

1632. KTL PVT. LTD. (2801-TM-04), NH-2, OPP. RTO OFFICE, KANPUR ROAD, FATEHPUR - 212601
PH :7408409304.

FEROZABAD

1633. MADHUSUDAN VEHICLES PRIVATE LTD (DF01-DF-01), 746, ALI NAGAR KEJRA , NEAR RAJA KA TAL CROSSING, NH 2, FEROZABAD - 283203
PH :05612-9690003035.

GAJRAULA

1634. AKANKSHA AUTOMOBILES PVT. LTD. (XD01-XD-01), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA - 244235
PH :9897069329.

GHAZIABAD

1635. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD
PH :9999107841, 9997093422.

DEALER WORKSHOP (AS ON 01.04.2017)

1636. KAP AUTOMOBILES PVT. LTD. (5981-59-01),
D-BLOCK SHASHTRI NAGAR,HAPUR
ROAD,GHAZIABAD
PH :2714143, 9210026200.
1637. REGENT AUTOLINKS (P) LTD (5902-59-01),
A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT
ROAD, GHAZIABAD - 201001
PH :0120-2706034-37, 0120-4641900,911.904.
1638. ROHAN MOTORS LTD. (5904-59-01), 432
MUKAND NAGAR, G.T.ROAD, GHAZIABAD -
201001
PH :0120-4375182,4730717, 4730176, 4734218.
1639. ROHAN MOTORS (5904-59-02), PLOT NO.46,
MEERUT-DELHI ROAD, MORTA, GHAZIABAD -
201102
PH :0120-9717388333,9971466644.
1640. T.R. SAWHNEY MOTORS PVT LTD (5905-59-01),
PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL
AREA, MOHAN NAGAR, GHAZIABAD, DISTT. -
GHAZIABAD, U.P. - 201007
PH :7503326561.

GHAZIPUR

1641. AGR AUTOMOBILES PVT. LTD. (8403-KT-03),
RKBK PETROL PUMP, NEAR BANSI BAZAR,
GAZIPUR - 2333001
PH :0542-2361136.

GONDA

1642. SMARTWHEELS PVT. LTD. (7201-FZ-07), JANKI
NAGAR, OPP INDIAN OIL DEPOT, BAHRACH
ROAD, GONDA, UTTAR PRADESH, - 271001
PH :233598.

GORAKHPUR

1643. SMARTWHEELS PVT. LTD. (7201-72-01),
MOHADDIPUR, (NEAR RAMGARH TAL),
GORAKHPUR (U.P.) - 273012
PH :2200267, 3090906.
1644. SMARTWHEELS PVT. LTD. (7201-72-06), NEAR T
B HOSPITAL, LACHCHIPUR, NEPAL ROAD,
GORAKHPUR - 273012
PH :0551-3090906.
1645. SMARTWHEELS PVT. LTD. (7202-72-01), PLOT
NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. -
273209
PH :9235401004.

GREATER NOIDA

1646. ROHAN MOTORS LTD. (T201-T2-01), 63-A,
UDYOG VIHAR, GREATER NOIDA, UTTAR
PRADESH - 201306
PH :0120-4513739,40,09,01, 2560564, 2569984-85,
3092597.

HAMIRPUR

1647. KTL LTD. (QH01-QH-01), VILLAGE
RAMEDI,KANPUR ROAD, HAMIRPUR - 210301
PH :7408409304, 9235443403.

HAPUR

1648. ROHAN MOTORS (6G01-6G-01), DELHI-HAPUR
ROAD, OPPOSITE SSV INTERCOLLEGE,HAPUR,
DISTRICT- GHAZIABAD - 245101
PH :+11222313203.

HARDOI

1649. CONCEPT CARS PVT. LTD. (QE01-QE-01),
NANAK GANJ, LUCKNOW ROAD, HARDOI -
241001
PH :9792971496.
1650. CONCEPT CARS PVT. LTD. (QE01-QE-04), PLOT
NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM
ROAD, HARDOI KANPUR HIGHWAY, HARDOI,
UTTAR PRADESH. - 241001
PH :7607005857.

HATHRAS

1651. DEV MOTORS (P) LTD (B601-LP-03), NEAR
NAGLA UMMED, ALIGARH ROAD, HATHRAS -
204101
PH :9917435500.

JAGDISHPUR

1652. BRIGHT 4 WHEELS SALES PVT. LTD.
(XC01-XC-01),
KATHORA,MUSAFIRKHANA,LUCKNOW
SULTANPUR ROAD,JAGDISPUR-UTTAR
PRADESH - 227817
PH :06438-9721526961 , 9628374814.

JAUNPUR

1653. KIRTIKUNJ AUTOMOBILES PVT. LTD.
(6H01-6H-01), KHANPUR AKBAR, KUTTUPUR
TIRAHA - 222001
PH :9554951026.

JHANSI

1654. SURI AUTOMOBILES (6001-60-01), 362/1 NEHRU
MARG, CIVIL LINES, JHANSI - 284001
PH :330844.

KANNAUJ

1655. KTL PVT. LTD. (2801-EM-05), PLOT NO. - 377,
AKBARPUR, KANNAUJ - 209725
PH :7408409304.

KANPUR

1656. KTL PVT. LTD. (2801-28-01), 9/46, BENAJHABAR
ROAD, HARSH NAGAR, KANPUR - 208002
PH :0512-290459.
1657. KTL PVT. LTD. (2801-28-02), SHVAATRA
KRISHNA NAGAR, G T ROAD, KANPUR - 208007
PH :0512-401390.
1658. MY CAR PVT. LTD. (2803-28-01), 84/54 C, JARIB
CHOWKI ,G.T. ROAD, KANPUR - 208003
PH :0512-3988833.
1659. MY CAR PVT. LTD. (2803-28-02), C-16, SITE-1,
PANKI INDUSTRIAL AREA, KANPUR - 208022
PH :0512-2691756.

1660. S B CARS PVT.LTD (2806-28-01), 77B ,
FAZALGANZ, KANPUR - 208012
PH :0512-2241660.
1661. MY CAR PVT. LTD. (2803-28-05), 88, BLOCK-T,
FACTORY AREA, FAZALGANJ, KANPUR - 208004
PH :0512-3067601.
1662. S B CARS PVT.LTD (2806-28-05), 1/6-7
AMBEDKAR PURAM, AWAS VIKASH,
KALYANPUR, KANPUR - 208017
PH :7408430365.

KAUSHAMBI

1663. GREENLAND MOTORS (AYA1-AYA-01), OPP.
NAVEEN SAMITI MANDI STHAL, MANJHANPUR,
KAUSAMBIH - 211001
PH :9919202043 , 9838107762.

KIRAOLI

1664. PREM MOTORS PVT. LTD. (BUJ1-BJ-01),
GOVIND PALACE, NEAR KIRAWALI TEHSIL,
AGRA – JAIPUR HIGHWAY, KIRAWALI, DISTRICT
– AGRA, UTTAR PRADESH. - 283122
PH :7055007646.

LAKHIMPUR

1665. SUMITRA DS MOTORS PVT LTD (W201-M3-02),
GATA NO. 66, LRP ROAD, TOWARDS GOLA,
LAKHIMPUR KHERI - 242001
PH :262583/4/5.

LALITPUR

1666. SURI AUTOMOBILES (6001-6J-03), JAHANSI
SAGAR ROAD, LALITPUR - 284001
PH :9451496015.

LUCKNOW

1667. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA,
HUSSAIN BARI, HARDOI ROAD, LUCKNOW
PH :0522-2473369.
1668. ANAND MOTOR AGENCIES LTD. (1301-13-01),
11TH KMS, FAIZABAD ROAD, CHINHAT,
LUCKNOW - 227105
PH :0522-315791, 315792, 315000, 7080000469.
1669. ANAND MOTOR AGENCIES LTD. (1301-13-02),
47, NEHRU ROAD, SADAR BAZAR, LUCKNOW -
226016
PH :0522-3098257, 7080000463.
1670. ANAND MOTOR AGENCIES LTD. (1301-13-04),
G-3, LDA MARKET, ALIGANJ, LUCKNOW -
226024
PH :0522 - 4103406/407/408, 7080000464.
1671. BRIGHT 4 WHEEL SALES PVT. LTD.
(1305-13-01), 11/CP- 6, VIKAS NAGAR, RING
ROAD, LUCKNOW - 226022
PH :0522-2739501.
1672. KTL LIMITED (1302-13-02), MATIYARI
CHAURAHA, CHINNCHAT, FAIZABAD ROAD,
LUCKNOW - 227105
PH :0522-3153001 .

1673. KTL LIMITED (1302-13-03), INDRA NAGAR, OPP.
HALFAIZABAD ROAD, LUCKNOW, UTTAR
PRADESH - 228016
PH :0522-2340183,86.

1674. KTL LIMITED (1302-13-04), BEHIND N S KOHLI
PETROL PUMP, SARDARI KHEDA, KANPUR
ROAD, ALAMBAGH, LUCKNOW - 226005
PH :9918451222.

1675. ONE UP MOTORS INDIA PVT. LTD. (1306-13-01),
C-16A,TRANSPORT NAGAR,KANPUR ROAD,
LUCKNOW, KANPUR ROAD, LUCKNOW - 226012
PH :9918108081.

1676. ONE UP MOTORS INDIA PVT. LTD. (1306-13-03),
CHHANNILAL CROSSING, MANDIR MARG,
LUCKNOW - 226005
PH :9839015046.

1677. BRIGHT 4 WHEEL SALES PVT. LTD.
(1305-13-02), PARGANNA MOHANNA, STP
ROAD, CHATMEEL, LUCKNOW - 226021
PH :9838075960.

1678. ONEUP MOTORS INDIA PVT. LTD. (1306-13-04),
PLOT NO. 1/5, PATRAKARPURAM ROAD,
VINEET KHAND, GOMTI NAGAR , LUCKNOW,
UTTAR PRADESH - 226010
PH :0522-0522-4943666 , 9918100291.

1679. BRIGHT 4 WHEEL SALES PVT. LTD.
(1305-13-05), PLOT NO. 68, BUTLER GANJ,
BAALU ADDA, LUCKNOW. - 226001
PH :7705911825, 9838075929.

MADHOGANJ

1680. CONCEPT CARS PVT. LTD. (BHI1-BHI-01),
KANPUR ROAD, NEAR RAILWAY CROSSING,
MADHOGANJ DIST. HARDOI. - 241001
PH :7607696666.

MAHARAJGANJ

1681. SMARTWHEELS PVT. LTD. (EI01-EI-01), NEAR
PHARENDA TAXI STAND, NAHAR ROAD, PIPAR
DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ,
UTTAR PRADESH. - 273303
PH :05523-7705803113.

MAHMUDABAD

1682. CONCEPT CARS PVT. LTD. (AAN1-AAN-01), IN
FRONT OF POWER HOUSE, SIDAULI ROAD,
MAHMOODABAD (U.P.) - 261203
PH :05864-253893.

MAHOBA

1683. SURI AUTOMOBILES (6001-RM-02), NEAR
PARMANAND CHOWK, GANDHINAGAR,
MAHOBA, UTTAR PRADESH, - 284001
PH :5281-244344, 9451496015.

MAINPURI

1684. KULDEEP MOTORS (6E01-SG-02), SKP-4A,
MAINPURI - 205001
PH :9235258444.

MALIHABAD

1685. ONE UP MOTORS INDIA PVT. LTD.
(BOD1-BOD-01), KHASRA NO. 326/1 AND 327,
VILLAGE PARGANA, TEHSIL – MALIHABAD,
DISTRICT – LUCKNOW, UTTAR PRADESH. -
227111
PH :9918100781.

MATHURA

1686. UMA MOTORS PVT. LTD. (H801-H8-01), 68,
MAHOLI NEAR JAI GURUDEV TEMPLE, NH-2, KM
STONE 146, MATHURA - 281004
PH :0565-2463043/ 6290700.

MEERUT

1687. UNIQUE CAR SCANNERS (4881-48-01), PLOT
NO-514/4, SURAJ KUND ROAD, MEERUT,
PH :9568001008.
1688. RAJ SNEH AUTO INDIA PVT LTD (4803-48-01),
210, DELHI ROAD, NEAR AMAR UJALA, MEERUT
- 250001
PH :0121-2408038.
1689. RAJ SNEH AUTO INDIA PVT LTD (4803-48-02),
GARH ROAD, OPP. PURI PETROL PUMP,
MEERUT, UTTAR PRADESH - 250003
PH :121-2408031-35.
1690. TANYA MOTORS (4802-48-01), 35 CHIPPI TANK,
BEGUM BRIDGE ROAD, MEERUT - 250001
PH :0121-4020006, 648829.
1691. TANYA MOTORS (4802-48-03), 40, NAUCHANDI
GROUND, MEERUT - 250001
PH :0121-4026208, 2658008, 09, 10.
1692. RAJSNEH AUTO INDIS PVT. LTD. (4803-48-05),
NEAR TAKSHILA COLONY, OPP. MEDICAL
COLLEGE, GARH ROAD, MEERUT - 250002
PH :9568007373, 9837581179.
1693. RAJ SNEH AUTO INDIA (P) LTD. (4803-48-06),
OPP. KONARK COLONY, NEAR RAJMANDIR
MANDAP, ROORKEE ROAD, MEERUT (U.P.) -
250002
PH :0121-2575787, 2575797.
1694. RADHA GOVIND AUTOMOBILES PVT. LTD.
(4807-48-01), VILLAGE – BARAL, KUNDA GATE
NEAR YOGI FARM HOUSE, PARTAPUR, DELHI
ROAD, MEERUT. - 250002
PH :7456001001.

MIRZAPUR

1695. STAR CARS (6K02-6K-01), PILI KOTHI, STATION
ROAD, MIRZAPUR, UTTAR PRADESH - 231001
PH :9450544961.

MODINAGAR

1696. MOTORCRAFT SALES PVT. LTD. (5903-M7-02),
OPPOSITE SONIA ENCLAVE, ADJACENT
SUMAN CINEMA, NH-58, MODINAGAR - 201204
PH :01232-244001, 9219444550.

MOHANLAL GANJ

1697. BRIGHT 4 WHEEL SALES PVT. LTD.
(BWU1-BWU-01), KHASARA PLOT NO.581,
VILLAGE PURSANI, PARGANA AND TEHSIL
MOHANLALGANJ, LUCKNOW DISTT., UTTAR
PRADESH - 227305
PH :7571905966.

MORADABAD

1698. AKANKSHA AUTOMOBILES PVT. LTD.
(B401-B4-01), DELHI ROAD, 5TH KM,
MORADABAD (U.P.) - 244001
PH :0591-2485111, 2480888, 2487722.
1699. AKANKSHA AUTOMOBILES PVT. LTD.
(B401-B4-03), 5TH KM DELHI ROAD,
MORADABAD - 244001
PH :9219404041.
1700. AKANKSHA AUTOMOBILES PVT. LTD.
(B401-B4-04), KHASRA NO. 569-570, VILLAGE –
KAJIPURA, KANT ROAD, MORADABAD, UTTAR
PRADESH. - 244001
PH :7895600005.

MUZAFFARNAGAR

1701. RADHA GOVIND (H903-H9-01), NH -58, 121 KM
STONE, BY-PASS ROAD, NEAR TRANSPORT
NAGAR, MUZAFFARNAGAR - 251001
PH :9412210301.

NAUGARH

1702. SMARTWHEELS PVT. LTD. (QG01-QG-01), NEAR
PAKARI CHAURAHA, NAUGARH ROAD,
SIDDHARTH NAGAR - 272205
PH :05544-211078.

NOIDA

1703. FAST TRACK AUTO CARE INDIA PVT. LTD.
(A185-A1-01), A-13, SECTOR 63, NOIDA, G.B.
NAGAR
PH :120-4581111/31.
1704. JKM MOTORS (A184-A1-01), A-25, SECTOR
9, DISTT. GAUTAM BUDH NAGAR, NOIDA
PH :0120-4052400.
1705. MOTORCRAFT INDIA PVT LTD (A181-A1-02),
C-125, SECTOR-63, NOIDA,
PH :0120-2402671-72.
1706. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
& 9, SECTOR-8, NOIDA
PH :0120-5332222.
1707. FAIR DEAL CARS PVT. LTD. (A103-A1-01), D-39,
SEC-10, NOIDA - 201301
PH :0120-4747300, 301.
1708. ROHAN MOTORS LTD. (A102-A1-01), C-8/9,
SECTOR - I, NOIDA - 201301
PH :0120-4071900, 209, 31, 32, 2529407, 2530535,
2539297, 2556663.
1709. ROHAN MOTORS LTD. (A102-A1-02), C-11,
SECTOR-1, NOIDA, UTTAR PRADESH - 201301
PH :0120- 4071900, 209, 31, 32, .

1710. MOTORCRAFT SALES PVT. LTD. (5903-A1-03),
D-39, SECTOR-10, NOIDA - 201301
PH :9818660777, 9810500000.

1711. VIPUL MOTORS LTD. (A101-A1-02), B-124 &
B-125, SECTOR – 5, NOIDA, UTTAR PRADESH -
201301
PH :8800785532, 9818600000.
1712. VIPUL MOTORS PVT. LTD. (A106-A1-01), J-14,
SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH
NAGAR (U.P.) - 201301
PH :0120-4758605.

ORAI

1713. S B CARS PVT.LTD (2806-LU-02), KANPUR
ROAD, ORAI - 285001
PH :9307219303.

PILIBHIT

1714. CORAL MOTORS (P) LTD. (IL01-IL-01), BISALPUR
ROAD, PILIBHIT, U.P. - 262001
PH :9637891846.

PRATAPGARH

1715. GREENLAND MOTORS (2903-NK-02), PITAI KA
PURVA, JOGAPUR, ALLAHABAD ROAD,
PRATAPGARH - 230001
PH :9838075757.

PURANPUR

1716. CORAL MOTORS (P) LTD. (CAD1-CAD-01),
KHASRA NO. 768 & 770, VILLAGE – KHAMI RIYA
PATTI, PURANPUR – PILIBHIT ROAD, TEHSIL
AND PARGANA – PURANPUR, DIST. PILIBHIT. -
262124
PH :05880-9837891846, 9927001120.

RAIBAREILLY

1717. KTL LIMITED (1302-HS-05), PLOT NO. 1550,
GULLUPUR, P O KATWARA,
HIJARCHANDRAPUR, RAIBAREILLY - 229303
PH :0532-937177411, 415.

RAMNAGAR

1718. NAINITAL MOTORS PVT. LTD. (XM01-XM-01),
BASAI, KASIPUR ROAD, RAMNAGER - 244137
PH :05947-282013.

RAMPUR

1719. AKANKSHA AUTOMOBILES PVT. LTD.
(B401-6L-02), JUDGES ROAD, RAMPUR, UTTAR
PRADESH - 244901
PH :0595-9219415225.

RAYA

1720. UMA MOTORS PVT. LTD. (BXX1-BXX-01),
CHAUDHARY PADAM SINGH MARKET, NEAR
INDIA INTER COLLEGE, RAYA - MAANT ROAD,
RAYA, DISTT. MATHURA (U.P.) - 281204
PH :9837204254.

SAHARANPUR

DEALER WORKSHOP (AS ON 01.04.2017)

1721. ATELIER AUTOMOBILES PVT. LTD.
(S202-S2-01), NEAR BARI NAHAR, AMBALA
ROAD, SAHARANPUR - 247001
PH :0173-2395001.

SAHIBABAD

1722. FAST TRACK SERVICES, (M981-M9-01), PLOT
NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA,
SAHIBABAD, DISTT. GHAZIABAD (U.P.).
PH :9560868111.
1723. FAIR DEAL CARS PVT. LTD. (08A5-M9-01), 12/67
SITE 4, INDUSTRIAL AREA, SAHIBABAD,
GHAZIABAD - 110095
PH :0120-4740409/102/436.
1724. MOTORCRAFT SALES PVT. LTD. (5903-M9-01),
S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA,
NEAR DABUR CHOWK, SAHIBABAD - 201010
PH :0120-4172222 / 4102222.
1725. T.R. SAWHNEY MOTORS PVT LTD (0819-M9-03),
28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL
AREA, DISTT. GHAZIABAD, UTTAR PRADESH -
201010
PH :204753300, 9811020333.
1726. MARKETING TIMES AUTOMOBILES PVT LTD
(0887-M9-02), PLOT NO. 509 & 511, WAZIRABAD
LONI ROAD , OPP. SHALIMAR GARDEN,
SAHIBABAD DISTT GHAZIABAD, U.P. - 201005
PH :9873298702, 9818799910.

SAMBHAL

1727. AKANKSHA AUTOMOBILES PVT. LTD.
(BBP1-BBP-01), PLOT NO. 303, NEAR TAJ MILK
FACTORY, MORADABAD SAMBHAL ROAD,
SAMBHAL, UTTAR PRADESH - 244302
PH :0592-3232400.

SANDILA

1728. CONCEPT CARS PVT. LTD. (WY01-WY-01),
NEAR PUNJAB NATIONAL BANK, LUCKNOW
ROAD, SUMBABAGH, SANDILA - 241204
PH :05854-270001.

SHAHABAD

1729. CONCEPT CARS PVT. LTD. (AAX1-AAX-01),
VILLAGE MUJAGADH, SHAHABAD - 241124
PH :9151783146.

SHAHJAHANPUR

1730. SUMITRA DS MOTORS PVT LTD (W201-W2-01),
SITAPUR ROAD, NH-24, SHAHJAHANPUR -
242001
PH :05842-220333, 233909.

SHAMLI

1731. RADHA GOVIND AUTOMOBILES PVT. LTD.
(XJ01-XJ-01), KHERI KARMU, OPPOSITE
POWER HOUSE, PANIPAT-KAIRANA ROAD,
SHAMLI UTTAR PRADESH - 247776
PH :1398-244571, 244572-73.

DEALER WORKSHOP (AS ON 01.04.2017)

SHIKOHABAD

1732. MADHUSUDAN VEHICLES PRIVATE LTD.
(XH01-XH-01), 2508, KATRA MIRA,
MAHAMMABAD, OPP PROFESSOR COLONY, NH
2, BYE PASS ROAD, SHIKOHABAD, DISTT:
FIROZABAD,UTTAR PRADESH - 283203
PH :9.837097895E+019.

SITAPUR

1733. CONCEPT CARS PVT. LTD. (QE01-6M-02),
LUCKNOW-DELHI ROAD, NH-24, VILLAGE
JAMMAYAPUR, SITAPUR - 261001
PH :9161284000.

SULTANPUR

1734. KIRTIKUNJ AUTOMOBILES PVT. LTD.
(N101-N1-01), SHAURYAMAU, MIRANPUR,
VARANSI-LUCKNOW HIGHWAY, NH-56
(FAIZABAD BYPASS) SULTANPUR - 228001
PH :05362-227760 , 220107.

THAKURDWARA

1735. AKANKSHA AUTOMOBILES PVT. LTD.
(KO01-KO-01), 2 KM. MORADABAD ROAD, NEAR
JEETA KA DHABA, SAHAB GANJ (MUNSHI
GANJ), THAKURDWARA, DISTT. MBD. UTTAR
PRADESH - 244601
PH :7895980519.

UNCHAHAR

1736. KTL PVT. LTD. (1302-IH-06), ALLAHABAD
LUCKNOW ROAD, NEAR PURANA PETROL
PUMP, WARD NO. 5, SALON, UNCHAHAR,
DISTT: RAIBARELI - 229404
PH :9451133838.

UNNAO

1737. VISHAL WHEELERS PVT. LTD. (1382-KL-01),
PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS,
UNNAO, UTTAR PRADESH,
PH :0515-2830610,2831248.
1738. S B CARS (2806-KL-04), HUSSAIN NAGAR
BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD,
UNNAO,U.P. - 209801
PH :5153-9839811711,202445.

VARANASI

1739. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2,
CLUB ROAD, VARANASI
PH :0542-25100469, 9415203641.
1740. AGR AUTOMOBILES PVT. LTD. (8403-84-01),
B-38/2A, MAHMOORGANJ, GOPAL VIHAR,
VARANASI - 221010
PH :0542-2360436.
1741. VARANASI MOTORS PVT. LTD. (8402-84-01),
THE MALL, CANTONMENT, VARANASI - 221001
PH :0542-2509068, 2509069.

1742. VARANASI MOTORS PVT. LTD. (8402-84-03),
AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR,
MOHANSARAI, RAJATALAB, VARANASI (U.P.) -
221002
PH :9838360662.

UTTARAKHAND

ALMORA

1743. NAINITAL MOTORS PVT. LTD. (J603-SQ-04),
PAWAR BHAWAN, JOSHI KHOLA RAJIPURA,
PITHRAGARH ROAD, ALMORA - 263601
PH :9639016895.

BAGESHWAR

1744. NAINITAL MOTORS PVT. LTD. (J603-BI-05),
KAPKOT ROAD, BAGESHWAR. - 263642
PH :9927708822.

BAZPUR

1745. AKANKSHA AUTOMOBILE (RUDRAPUR) PVT.
LTD. (CGU1-CGU-01), KHASRA NO. 962,
VILLAGE - BHONA, ISLAM NAGAR, TEHSIL –
BAZPUR, UTTARAKHAND. - 262401
PH :9837278256.

CHAMPAWAT

1746. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (U403-SF-03), TANAKPUR LOHAGHAT
ROAD, CHAMPAWAT, UTTARAKHAND - 262523
PH :05965 - 230033.

DEHRADUN

1747. D.D. MOTORS (5704-57-01), 918/221, PATEL
NAGAR, INDUSTRIAL AREA, DEHRADUN
PH :0135-2745330, 31, 32.
1748. FUTURE AUTO WHEELS PVT.LTD (5706-57-01),
KHASRA NO. 8KHA, MOHABEWALA
INDUSTRIAL AREA, DEHRADUN, - 248001
PH :0129 -4271800.
1749. ROHAN MOTORS LTD. (5702-57-01), 130/1
CHAKRATA ROAD, YAMUNA COLONY,
DEHRADUN - 248001
PH :0135-2530955, 624519, 626097.
1750. ROHAN MOTORS LTD. (5702-57-02), 257/2, GMS
ROAD,,VILL. NIRANJANPUR, ADJ TO KAMLA
PALACE, DEHRADUN - 248001
PH :0135-2720342/43/44.

GOPESHWAR

1751. ROHAN MOTORS LTD. (5702-MV-03), CHOTA,
MANDAL ROAD, NEAR FOREST GATE,
GOPESHWAR - 131028
PH :01372-251572.

HALDWANI

1752. NAINITAL MOTORS PVT. LTD. (J603-J6-01),
VILLAGE JEETPUR NEGY, 5TH KM RAMPUR
ROAD, HALDWANI - 263139
PH :9639016895.

1753. NAINITAL MOTORS PVT. LTD. (J603-J6-02),
KALA DUNGI, NEAR ABDULLAH PETROL PUMP,
HALDWANI - 263139
PH :9639016895.

HARIDWAR

1754. SHAKUMBARI AUTOMOBILES (P) LTD
(6N02-6N-01), E-5/6, INDUSTRIAL AREA,
HARDWAR - 249407
PH :01334-310676, 321432.

KASHIPUR

1755. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (U403-DG-02), BAZPUR ROAD, KASHIPUR -
244713
PH :9219408725.

KHATIMA

1756. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (XL01-XL-01), VILLAGE: KHETAL SANDA
KHAM (SAL BHOJI NO.3, OPP. FOREST
CORPORATION) PILIBHIT ROAD,
KHATIMA,UDHAM SINGH NAGAR,
UTTARAKHAND - 262308
PH :8191000813.

KOTDWAR

1757. SHAKUMBARI AUTOMOBILES (P) LTD
(6N02-2I-02), PLOT NO.23 & 30 INDUSTRIAL
ESTATE, SITABPUR, KOTDWAR, DIS. PAURI
(GARHWAL), UTTARAKHAND - 249001
PH :8755998075,9927708822.

PITHORAGARH

1758. NAINITAL MOTORS PVT. LTD. (J603-NM-03),
VILLAGE PANDA, ODSAINI, DHARCHULA ROAD,
PITHORAGARH - 262501
PH :9639016895.

RANIKHET

1759. NAINITAL MOTORS PVT. LTD. (AXA1-AXA-01),
GANYADYOLI, NEAR DRUG FACTORY,
RANIKHET DISTT. ALMORA (UTTARAKHAND) -
263645
PH :05962-230254.

RISHIKESH

1760. FUTURE AUTO WHEELS (AAS1-AAS-01), 640,
LAXMAN JHULA ROAD, RISHIKESH. DISTT.
DEHRADUN, UTTARAKHAND - 249201
PH :0135-2432387.

ROORKEE

1761. SHAKUMBARI AUTOMOBILES (P) LTD
(H201-H2-01), 3RD KM STONE, DELHI-ROORKEE
HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE
DISTT HARIDWAR - 247667
PH :01332-326160, 72267, 76216.

RUDRAPRAYAG

1762. ROHAN MOTORS (IK01-IK-01),
GULABRAI-BADRINATH ROAD, RUDRAPRAYAG
- 246171
PH :1364-233118.

RUDRAPUR

1763. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (U403-U4-01), KICHHA BYE PASS ROAD,
INDUSTRIAL AREA, RUDRAPUR - 263153
PH :05944-247203.

SITARGANJ

1764. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (CD01-CD-01), PLOT NO.228/5 AND 228/6
KHATIMA ROAD, SITARGANJ, DISTT -
RUDRAPUR, UTTARAKHAND. - 262405
PH :8192000375.

SRINAGAR

1765. SHAKUMBARI AUTOMOBILES (ANA1-ANA-01),
SRICOT GANAGANALI , NEAR MEDICAL
COLLEGE, PO- SRICOT, SRINAGAR - 246174
PH :1346-244571,244572-73.

TEHRI

1766. D.D. MOTORS (5704-SP-02), PLOT NO. 541,
SECTOR-8E, DISTT. - NEW TEHRI - 249001
PH :01376-233144.

WEST BENGAL

ALIPURDUAR

1767. PODDAR CAR WORLD PVT. LTD.
(BZ01-BZ0-01), BIRPARA MORE, COOCH
BEHAR ROAD, BESIDE GOYENKA PETROL
PUMP, ALIPURDUAR, WEST BENGAL. - 736121
PH :03564-9800633338.

ASANSOL

1768. BEEKAY AUTO PVT LTD (F601-F6-01), CHANDA
MORE, N.H.-2, ASANSOL - 713301
PH :341-2344030/31/2343978, 9932049425.

BAHRAMPUR

1769. BEEKAY AUTO PVT LTD (T301-DJ-02),
BOKULTALA (PASCHIM GAMINI), NH-34,
BAHARAMPUR, DISTT. MURSHIDABAD. - 742101
PH :3482-267340.

BANKURA

1770. BHANDARI AUTOMOBILES LTD. (G701-6Q-02),
PLOT NO.-156, KH NO.-173, MITHILA MOUZA,
AT/PO-BANKURA (WB) - 722101
PH :34242-256766.

BARASAT

DEALER WORKSHOP (AS ON 01.04.2017)

1771. PREMIER CAR WORLD PVT. LTD. (X203-XZ-01), R.S DAG NO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, J.L NO. 4, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL - 700125
PH :8420122407.

BARSUNDRA

1772. BHANDARI AUTOMOBILES PVT LTD (G701-BJW-05), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE. WEST BENGAL - 721654
PH :9933055539.

BARUIPUR

1773. ONE AUTO PVT LTD (ACA1-ACA-01), MAHENDRA NIKETAN, KHASH MALLICK, P.O. SOUTH GOBINDAPUR, P.S.- BARUIPUR, DISTT. SOUTH 24 PARGANAS, WEST KOLKATA (WEST BENGAL) - 700145
PH :8584018013.

BASIRHAT

1774. BHANDARI AUTOMOBILES LTD. (X701-0D-03), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. - 743428
PH :3217-249192, 249194.

BISHNUPUR

1775. BHANDARI AUTOMOBILES PVT. LTD. (AAG1-AAG-01), STATION ROAD, P.O+P.S- BISHNUPUR, DIST: BANKURA, WEST BENGAL - 722122
PH :9933055539.

BOLPUR

1776. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-TC-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM
PH :3463-252577, 252777.

BONGAON

1777. STARBURST MOTORS PVT LTD (TQ02-TQ-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235
PH :9874195451.

BUDGE BUDGE

1778. ONE AUTO PVT. LTD. (BAV1-BAV-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141
PH :8335050357/8442830001.

BURDWAN

1779. BEEKAY AUTO PVT LTD (T301-T3-03), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL - 713101
PH :033-9932049454.

C K ROAD

1780. BHANDARI AUTOMOBILES PVT. LTD. (D001-D0-01), P.O.SAT BANKURA, PS-GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252
PH :3222-9933055539.

CHAKDAHAI

1781. BHANDARI AUTOMOBILES (OM01-OM-01), VILLAGE – PUMLIA, P.O. – CHAKDAHAI, DISTRICT – NADIA, WEST BENGAL - 741222
PH :9073940368, 9674735303, 9674169007.

CONTAI

1782. BHANDARI AUTOMOBILES LTD. (G701-GV-03), SERPUR BAMUNBAR,P.O- MARISHDA, NEAR MECHEDE BYPASS, CONTAL, WEST BENGAL - 721401
PH :3220-254572.

COOCH BEHAR

1783. PODDAR CAR WORLD PVT. LTD. (BWZ1-BWZ-01), CHAKCHAKA, NEELKUTHI BAZAR, NEAR ADA FACTORY, NH-31, COOCH BEHAR, WEST BENGAL - 736101
PH :03582-258567, 7031045594.

DARJEELING

1784. BEEKAY AUTO PVT LTD (4301-6U-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101
PH :354-9233539579.

DURGAPUR

1785. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213
PH :343-2547777, 9233500277.

GHATAL

1786. BHANDARI AUTOMOBILES (AAD1-AAD-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL, WEST MIDNAPORE, WEST BENGAL - 721211
PH :9933055539.

GOPIBALLAVPUR

1787. BHANDARI AUTOMOBILES PVT. LTD. (BPQ1-BPQ-01), JL NO. 1103, KHATAN NO. 1103, PLOT NO. 438, VILLAGE + P.O. + P.S. – GOPIBALLVPUR, MOUZA – GOPIBALLVPUR, WEST MIDNAPUR, WEST BENGAL - 721506
PH :9933055539, 8170018577.

HALDIA

1788. BHANDARI AUTOMOBILES LTD. (G701-SE-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657
PH :3224-8016082344, 9233502421.

HOWRAH

1789. BHANDARI AUTOMOBILES LTD. (X701-X7-01), BANKRA THANA,DOMJUR,HOWRAH - 711403
PH :33-66137528/18/06.

JALPAIGURI

1790. PODDAR CAR WORLD PVT. LTD. (XY01-XY-01), COLLEGE PARA, SIRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL - 735101
PH :03561-257155, 257066, 8945534921.

JHARGRAM

1791. BHANDARI AUTOMOBILES PVT. LTD. (BUG1-BUG-01), DAG NO.383, KHATAN NO. JL386, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507
PH :8016087297, 9933055539.

KALNA

1792. BEEKAY AUTO PVT LTD (WZ01-WZ-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409
PH :9932251483.

KALYANI

1793. STARBURST MOTORS PVT LTD (IJ01-IJ-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S COLLEGE), KALYANI. - 741234
PH :033-25824139/25824140.

KESHPUR

1794. BHANDARI AUTOMOBILES (CCM1-CCM-01), JL NO. 338, KHATIAN NO. 788/2, PLOT NO. 1749, MOUZA – KESHPUR, VILLAGE + P.O. + P.S. – KESHPUR, WEST MIDNAPUR, WEST BENGAL. - 721150
PH :721150, 8170014289.

KHARAGPUR

1795. BHANDARI AUTOMOBILES LTD. (G701-G7-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301
PH :3222-755537.

KOLKATA

1796. MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA
PH :33-24568326, 24486568, 24568325.
1797. AUTO HITECH PRIVATE LIMITED (0604-06-01), 34-A, C.N. ROY ROAD, KOLKATA - 700039
PH :33-40218200.8231/8222/8262.

1798. DEWAR'S GARAGE (0605-06-01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069
PH :33-2483397 (NA).

1799. MACHINO TECHNO SALES LTD. (0601-06-01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA - 700017
PH :33-30285317/18/16/12/15.08272981466.

1800. MACHINO TECHNO SALES LTD. (0601-06-02), 48 A, TARATALA ROAD, KOLKATA - 700066
PH :33-24913755, 24913993.

1801. PREMIER CARWORLD PVT. LTD. (0611-06-01), AGARPARA JUTE MILL- 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058
PH :33-66065555/25235810.

1802. BHANDARI AUTOMOBILES PVT. LTD. (0609-06-02), 37, GULAM JILANI KHAN ROAD, KOLKATA - 700039
PH :033-99038550402/9830044089.

1803. SANEI MOTORS PVT LTD (0612-06-01), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION,KOLKATA - 700067
PH :033-30103043.

1804. ONE AUTO PVT LTD (0614-06-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA , WEST BENGAL - 700105
PH :033-8442830001.

1805. ONE AUTO PVT LTD (0614-06-01), JL NO.3, MOUZA-JAGADIPOTA, P.S.SONARPUR, KHEYADAH NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099
PH :8442830001.

1806. DEWAR'S GARAGE (0605-06-03), P-27/2, TARATALA ROAD, KOLKATA - 700088
PH :033-24010011, 8584015273.

1807. SANEI MOTORS PVT LTD (0612-06-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059
PH :8584050184, 958405071.

1808. OSL MOTOCORP PVT. LTD. (0616-06-01), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRING CLUB, E.M. BYE-PASS, KOLKATA - 700015
PH :3369466946, 08697982283.

KRISHNANAGAR

1809. BHANDARI AUTOMOBILES LTD. (X701-GS-02), PLOT NO.-1874, MOUZA-GOBINDSARAK,J.K. NO. 94, PS-KOTWAL,OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011
PH :3472-223587.

MADHYAMGRAM

1810. STARBURST MOTORS PVT LTD (BXJ1-BXJ-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129
PH :9830130265.

DEALER WORKSHOP (AS ON 01.04.2017)

MAHESHTALA

1811. BHANDARI AUTOMOBILES (0609-06-01), BUDGE
BUDGE TRUNK ROAD, NEW GOPALPUR,
SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24
PARGANAS, WEST BENGAL - 700143
PH :033-64995331/2.

MALDA

1812. J.K. WHEELS PVT LTD (L801-L8-01),
GABGACHHI, N.H. 34, MALDA, - 732103
PH :3512-258884, 266379.

NAIHATI

1813. PREMIER CAR WORLD PVT. LTD. (YD01-YD-01),
P.O. BHATPARA, GRAM-MUKTARPUR, P.S. -
JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) -
743123
PH :8420122451.

PURULIA

1814. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT.
LTD) (4402-6W-02), PO. LAKDA, VILLAGE-DADKA
, ON RANCHI ROAD, PURULIA - 723149
PH :3252-242100.

RANAGHAT

1815. STARBURST MOTORS PVT LTD
(BBW1-BBW-01), THANA: GANGNAPUR, ADSR
OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309,
RANAGHAT, DISTT: NADIA - 741238
PH :8584040215, 8336933447.

SEORI

1816. BEEKAY AUTO PVT LTD (F601-KC-02),
RAMBADANPUR, NEAR SP MORE,
DIST-BIRBHUM, SEORI - 731101
PH :3462-259055 / 9233503153.

SILIGURI

1817. BEEKAY AUTO PVT LTD (4301-43-01), NH-31,
P.O. MATIGARA,SILIGURI - 734428
PH :353-2002254, 6533554.

1818. BEEKAY AUTO PVT LTD (4301-43-04), AMAI
DIGHI, PHOOL BARI,STATE HIGHWAY -12,
SILIGURI - 734001
PH :353-2568592, 9932049347.

1819. SEVOKE MOTORS PVT. LTD. (4302-43-01), 233,
SEVOKE ROAD,2ND MILE, SILIGURI - 734001
PH :353-2545309/12/13.

SREERAMPURE (SREERAMPUR)

1820. BHANDARI AUTOMOBILES (BBT1-BBT-01),
BANGIHATI (MADPUR) DELHI ROAD,
SREERAMPUR, DISTT: HOOGHLY, WB - 712203
PH :33-66137505, 66137585, 9674741544.

TAMLUK

1821. BHANDARI AUTOMOBILES PVT. LTD.
(OL01-OL-01), MOUZA PADUMBASAN, WARD NO
10, JL NO:144, DISTT: EAST MIDNAPUR, WEST
BENGAL - 721636
PH :9933055539.

TARAKESHWAR

1822. SANEI MOTORS (YH01-YH-01), MOUZA
BAIDYAPUR, UNDER BALIGORI(1), GRAM
PANCHAYET, TARAKESHWAR, DISTT. HOOGLY,
WEST BENGAL.
PH :9836872710.

ULUBERIA

1823. BHANDARI AUTOMOBILES (2401-24-01),
HOLDING 1242A, BANITABLA, P.O+P.S:
ULUBERIA, NH-6, DISTT: HOWRAH, WEST
BENGAL - 711316
PH :8336070344.

DELHI**DELHI**

1. J.J IMPEX (MARUTI SERVICE MASTERS)
(0883-08-03), PLOT NO. 9, SSI INDUSTRIAL
ESTATE,G.T. KARNAL ROAD, OPP JAHANGIR
PURI,NEAR KDR WOOL FACTORY,DELHI -
110033
PH :011-40715500, 40715501.
2. J.J IMPEX (MARUTI SERVICE MASTERS)
(0883-08-01), F-39,OKHLA INDUSTRIAL
AREA,PHASE-II,NEW DELHI - 110020
PH :011-41612194, 40685500.
3. MARUTI SALES & SERVICE(DELHI) (0810-08-01),
C-119, INDUSTRIAL AREA PHASE-I, NARAINA,
NEW DELHI - 110028
PH :011-45541113.

TAMIL NADU**CHENNAI**

4. J.J IMPEX (MARUTI SERVICE MASTERS)
(1485-14-01), # 9, (SF),THIRU-VI-KA INDUSTRIAL
ESTATE, GUINDY, CHENNAI - 600032
PH :044-43563366, 43563367.

LIST OF MSZ's (AS ON 01.04.2017)

ANDHRA PRADESH
TIRUPATI

1. KOUNDINYA ENTERPRISES (N981-N9-01),
18-3-60,KT BY PASS ROAD, TIRUPATI - 517501
PH :0877- 2233051, 2231047.

ARUNACHAL PRADESH
ITANAGAR

2. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR,
DISTT: PAPUMPARE, ITANAGAR - 791111
PH :0360-2212843.

ASSAM
BARPETA

3. ROY AUTO ENGINEERING WORKS (7281-72-01),
POST OFFICE, BARPETA ROAD, MAIN ROAD ,
WARD NO.-4, ASSAM - 781315
PH :03666-260343, 262743.

DULAJAN
DULAJAN

4. B.S. MOTORS (X881-X8-01), NO. 01,
BORPOTHAR TINALI, DULAJAN. - 786602
PH :0374-2801255.

BIHAR
PATNA

5. CITY AUTO SERVICES (1582-15-01), 9/1,
PATLIPUTRA INDUSTRIAL ESTATE,
PATLIPUTRA , PATNA - 800013
PH :0612-2265916, 9334115900.

CHHATTISGARH
RAIGARH

6. SHAKTI AUTOMOBILES (7Y81-7Y-01), ORRISSA
ROAD, KABIR CHOWK, BANJHIPALI, RAIGARH,
C.GARH - 496001
PH :9300006496.

DELHI
DELHI

7. A M AUTOMOBILES (A UNIT OF BLUE BIRD
ENTERPRISES) (0891-08-01), 189-91,
LAWRANCE ROAD,,DELHI - 110035
PH :011-48280000.
8. GALAXY AUTOMOBILES (0881-08-01), 8
INDUSTRIAL AREA,TILAK NAGAR,NEW DELHI, -
110018
PH :011-43276666.

HARYANA
BALLABGARH

9. ROYAL MOTORS (9R81-9R-01), 21/5, G.T. ROAD,
BALLABHAGARD, DISTT-FARIDABAD - 121004
PH :0129-4271800, 9899242536, 2242536.

MURTHAL

10. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44
HSIDC, MURTHAL - 131027
PH :0130-2482230.

PANCHKULA
PANCHKULA

11. CARE TAKER (K381-K3-01), PLOT NO. 36,
INDUSTRIAL AREA, PHASE-2, PANCHKULA -
134113
PH :0172-2592310, 2594310, 5064336.

PANIPAT
PANIPAT

12. VIJAY MOTORS (D381-D3-01), PLOT# 136,
INDUSTRIAL AREA, PHASE-1 - 132103
PH :180-4001490.

SAHA
SAHA

13. PUNJAB MOTOR & ENGG WORKS (1881-18-01),
NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-
AMBALA - 133104
PH :0171-2822669, 9896402469.

YAMUNANAGAR
YAMUNANAGAR

14. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO
46, SHIVAJI PARK, OPPOSITE MADHU PALACE,
YAMUNANAGAR, HARYANA - 135001
PH :1732-261937.

HIMACHAL PRADESH
JASSUR

15. CLASSIC MOTOR GARAGE (8H81-8H-01),
TEHSEEL NOOPUR, KANGRA, JASSUR,
HIMACHAL PRADESH - 176201
PH :01893-226555.

JAMMU & KASHMIR
SRINAGAR

16. RAHIM MOTORS (1281-12-01), SIDGO
INDUSTRIAL AREA, RANGRETH, SRINAGAR -
2441384
PH :0194-2435909.

JHARKHAND
RANCHI

17. PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48 ,
KOKAR INDUSTRIAL AREA, RANCHI. - 834001
PH :0651-2544661, 2542650.

KERALA
ERNAKULAM

18. AUTOTEAM SALES & SERVICES PVT.LTD
(2781-27-01), PIPELINE ROAD, PADIVATTOM,
COCHIN, ERNAKULAM, COCHIN - 682024
PH :9847521112.

KOTTARAKARA
KOTTARAKARA

19. CHITHIRA AUTOMOBILES (C781-S8-01),
RAILWAY STATION JUNCTION, KOTTARAKARA -
691506
PH :0474-9447711001.

PATNHAMTHITTA
PATNHAMTHITTA

20. AGT MOTORS (W881-W8-01), AGT TOWERS,
PUTHENPEEDI, OMALLUR, PATHANAMTHITTA -
689640
PH :0468-9288117477.

MADHYA PRADESH
NEEMUCH

21. AUTO SCAN (3T81-3T-01), MHOW
ROAD,NEEMUCH,MADHYAPRADESH, - 454775
PH :07423-221912.

MAHARASHTRA
AHMEDNAGAR

22. VIJAY AUTOMOBILES (A581-A5-01), OPP. MSEB
SUB STATION, NAGAR-PUNE ROAD, KEDGAON,
AHMEDNAGAR - 414005
PH :0241-2550049.

PUNE
PUNE

23. MARUTI CARE POINT (1981-19-02), 17/1,
RAHATANI, AUNDH-CHINCHWAD ROAD, OPP
PMC MC 'D' PRABHAG KARYALAY, NEXT TO HP
SUBHIKA PETROL PUMP, RAHATNI, PUNE,
MAHARASHTRA - 411017
PH :020-65001981.

THANE
THANE

24. THANAWALA MOTOR AGENCY (P) LTD
(3981-39-01), B-31, OPPOSITE ITI,WAGLE
ESTATE MAIN ROAD,WAGLE ESTATE,THANE -
400007
PH :022-25872222.

ORISSA
KEONJHAR

25. KUMAR AUTOMOBILES (7U81-7U-01),
DHRUPADA, KEONJHAR, ORISSA - 758001
PH :06766-256466.

PUNJAB
BATALA

26. CITI AUTOMOBILES (V581-V5-01), NEAR
GURUDWARA ACHAL SAHIB, PATHANKOT
JALANDHAR ROAD, BATALA, - 143505
PH :01871-98724024253.

MOGA
MOGA

27. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI
, G.T. ROAD, MOGA - 142001
PH :1636-226807.

RAJASTHAN
JAIPUR

28. KATARIA AUTOMOBILES (1181-11-01), 1-A ;
NARAYANPURI,KATARIA KRISHI FARM,SIRSI
ROAD,JAIPUR - 302034
PH :141-2471740/2471014 /2471406.

TELANGANA
HYDERABAD
HYDERABAD

29. RETOUCH (1082-10-01), H.NO. 3-67/A, B. C.
D,NEW NAGOLE COLONY,NAGOLE VILLAGE,
HYDERABAD,NAGOLE, HYDERABAD - 500068
PH :040-9848062263.

UTTAR PRADESH
AGRA

30. PRIME MOTORS (6681-66-01), 8B/7D, BYE PASS
ROAD, DEV NAGAR, AGRA - 282007
PH :0562-2531881, 2531882.

ALIGARH
ALIGARH

31. VINEET MOTORS (MSZ) (B681-B6-02), PLOT
NO.D-138 &139, SECTOR-1, TALA NAGARI,
RAMGHAT ROAD, ALIGARH - 202001
PH :9917473052, 9582123586.

BULANDSEHAR
BULANDSEHAR

32. SK & COMPANY (M581-M5-02), KHASRA NO.
2261, NEAR T POINT , BY PASS SHIKARPUR
ROAD , BULANDSHAHR. - 203395
PH :05732-235400.

GHAZIABAD
GHAZIABAD

33. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO.
B1, SECTOR-B3, TRONICA CITY, GHAZIABAD -
201102
PH :9999107841, 9997093422.

LUCKNOW
LUCKNOW

34. KAP AUTOMOBILES PVT. LTD. (5981-59-01),
D-BLOCK SHASHTRI NAGAR,HAPUR
ROAD,GHAZIABAD - 201002
PH :2714143, 9210026200.

MEERUT
MEERUT

35. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA,
HUSSAIN BARI, HARDOI ROAD, LUCKNOW -
226003
PH :0522-2473369.

NOIDA
NOIDA

36. UNIQUE CAR SCANNERS (4881-48-01), PLOT
NO:514/4, SURAJ KUND ROAD, MEERUT, -
250001
PH :9568001008.

37. FAST TRACK AUTO CARE INDIA PVT. LTD.
(A185-A1-01), A-13, SECTOR 63, NOIDA, G.B.
NAGAR - 201301
PH :120-4581111/31.
38. JKM MOTORS (A184-A1-01), A-25,SECTOR
9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301
PH :0120-4052400.
39. MOTORCRAFT INDIA PVT LTD (A181-A1-02),
C-125,SECTOR-63,NOIDA, - 201301
PH :0120-2402671-72.

LIST OF MSZ's (AS ON 01.04.2017)

40. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
& 9, SECTOR-8, NOIDA - 201301
PH :0120-5332222.

SAHIBABAD

41. FAST TRACK SERVICES, (M981-M9-01), PLOT
NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA,
SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010
PH :9560868111.

UNNAO

42. VISHAL WHEELERS PVT. LTD. (1382-KL-01),
PLOT NO. 1164, KANPUR-LUCKNOW BYPASS,
UNNAO, UTTAR PRADESH. - 209801
PH :0515-2830610, 2831248.

VARANASI

43. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2,
CLUB ROAD, VARANASI - 221002
PH :0542-25100469, 9415203641.

WEST BENGAL

KOLKATA

44. MANOCO SALES (P) LTD. (0681-06-01), 25/1,
CHETLA CENTRAL ROAD, OPPOSITE CHETLA
PARK, KOLKATA - 700027
PH :33-24568326, 24486568, 24568325.

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

ANDHRA PRADESH

ADILABAD

1.## MAHA LAXMI AUTOMOTIVES (2240), NH# 7
OPP. H.P. PETROL
BUNK,TIRUPALLY,ADILABAD,(A.P.)
PIN-504001
PH :08732-9000345313.

AMALAPURAM

2.## MARUTI MOTORS (3825), ONGC BY PASS
ROAD,AMALAPURAM,E G DISTRICT (A.P.)
PIN-533201
PH :08856-236156/235789.

ANANTAPUR

3.** GOWRI AUTO. & ENGG. WORKS (2621),
PATEL ROAD,ANANTHAPUR (A.P.)
PIN-530001
PH :8554274675.

ARMOOR

4.## HYDERABAD MARUTI MOTORS (4932), PLOT
NO. 6,BESIDE THAKUR BEEDI
FACTORY,ARMOOR,DISTRICT-NIZAMABAD
(ANDHRA PRADESH) PIN-503224
PH :9848205619.

BHADRACHALAM

5.## SRI VENKATARAMANA AUTO CARE (2831),
MARUTI SERVICE STATION,OPP. COLLEGE
GROUNDS,GOLLAGATTA
ROAD,BHADRACHALAM (A.P.) PIN-507111
PH :9290792269.

CUDDAPPAH

6.## SREE VENKATESWARA AUTO. (1030),
SANKARA PURAM,CUDDAPAH (A.P.)
PIN-516001

PH :9440708234/9440223461.

7.## SIVAJI MOTORS (3275), BESIDES
PADMASHALI KALYANA
MANDAPAM,MADRAS
ROAD,KADAPA,ANDHRA PRADESH
PIN-516002
PH :08562-9849113189.

GAJWEL

8.## VUJAY MOTORS (4864), HYDERAAD
ROAD,STATE HIGH WAY FROM
HYDERABAD TO KARIMNAGAR,
PREGHAPUR - GAJWL,ANDHRA PRADESH
PIN-502278
PH :9849883665, 08454233028.

GUNTAKAL

9.## S. MAHABOOB AUTOMOBILES (4075), ALUR
ROAD,GUNTAKAL PIN-515802
PH :94402-08312/9963344109/924748109.

GUNTUR

10.## S. S. MOTORS (4946), OPP. JKC
COLLEGE,JKC COLLEGE
ROAD,GUNTUR,ANDHRA PRADESH
PIN-522006
PH :9848273503/9395553636.

HYDERABAD

11.## COSMO AUTO CLINIC PVT. LTD. (1045),
1-2-605/A/3 & 6,LOWER TANK BUND
ROAD,NEAR INDIA PARK NORTH
GATE,HYDERABAD PIN-500380
PH :9849015667, 92462 75661.

12.## PISTONS & SPANNERS (2766), 2-3-37
MAHARANA PRATAP FUNCTION
HALL,AMBERPET,HYDERABAD PIN-500013
PH :040-6585480/9990649504.

13.## ARYAN MOTORS (3264), D.NO.17-1-382/K/5 &
6,CHAMPAPET SAIDABAD,SAGAR
ROAD,HYDERABAD PIN-500011
PH :040-24077459/9246155464.

14.* BHARAT MOTORS (3574), 1-90/7,BEHIND
SUPRABHAT HOTEL,HABSIGUDA "X"
ROAD,HYDERABAD PIN-500007
PH :040-9849447759.

15.## NEW TECHNOCRATS AUTO SERVICES
(4477), 1-2-607/23/1/C,AMBEKKAR
NAGAR,INDIRA PARK ROAD,HYDERABAD
(ANDHRA PRAESH) PIN-500029
PH :040-9948039515.

16.## SERWELL AUTOMOBILES (5234), PLOT NO
202.203,ADITYA NAGAR .OPP.JNTU, KUKA
TPALLY HYDERABAD,ANDHRA PRADESH
PIN-500072
PH :9490105147.

JAGTIAL

17.## PARAMESHWARA MOTORS (3851), OPP P R
OFFICE DHAROOR CAMP,JAGTIAL,DT.
KARIMNAGAR (A.P.) PIN-505327
PH :08722-9912664659.

KAKINADA

18.## SATISH AUTO CARE (5038), BEHIND
KALPANA THEATRE,BEACH ROAD
KAKINADA,DISTRICT EAST
GODAVARI,ANDHRA PRADESH PIN-533001
PH :0884-2378198, 9848313599.

19.## SRI SHIRDI SAI TECHNOCRAFTS (1459),
COMPUTERISED CAR CARE
CENTRE,NAGAMALLI THATA
COLONY,KAKINADA PIN-533003
PH :9440727211.

KARIMNAGAR

20.** PUSHPAK MOTORS (1032), KOTHI
RAMPUR,HYDERABAD ROAD,KARIMNAGAR
(A.P) PIN-505001
PH :0878-9849163796, 9480035617.

21.## MYTRI MOTORS (5152), 8-6 188.KOTHI
RAMPUR,KARIMNAGAR,DISTRICT -
KARIMNAGAR,ANDHRA PRADESH
PIN-505001
PH :9441475357.

KAVALI

22.## KAMAL MOTORS (3842), 10-15-43/J3A OPP
LIC,TANK RAOD,KAVALI PIN-524201
PH :08626-8801444888.

KHAMMAM

23.## EXCEL AUTO CARE (1043),
10-2-57/1,MAYURI CENTRE,KHAMMAM
PIN-507001
PH :08742-9848156363.

KODAD

24.## SAI KAKATIYA SERVICE STATION (4664),
SURYAPETA ROAD,OPPOSITE LORRY
ASSOCIATION
BUILDING,KODAD,DISTRICT-NALGONDA
(ANDHRA PRADESH) PIN-508206
PH :9848057813 ,9912616759.

KURNOOL

25.## SRINIWAS AUTO GARAGE (5170), KALLUR
ROAD,KURNOOL,DISTRICT -
KURNOOL,ANDHRA PRADESH PIN-518003
PH :9440244660, 8186816828.

MACHILIPATNAM

26.## SRI MARUTI MECHANICAL WORKS (4172),
OPP BEL COMPANY,DOOR NO.
17/541,MACHILIPATNAM,ANDARA PRADESH
PIN-521001
PH :0867-9440538012.

MAHABUB NAGAR

27.## SRI AYYAPPA MARUTI CLINIC (3941), OPP
HOSPITAL,HYDERABAD
ROAD,YEMUGONDA,MAHABUB NAGAR
(ANDHRA PRADESH) PIN-509001
PH :08542-271827/9440569259.

MANCHERIAL

28.## PARVATI MOTORS (4129), 4-53 BPL
ROAD,MANCHERIAL,DISTRICT
ADILABAD,ANDHRA PRADESH PIN-504208
PH :08736-9885554888.

MANDAPETA

29.## MODERN MARUTI CARE (4866), D.NO.
4-1-59/2. MAIN
ROAD,MANDAPETA,DISTRICT-EAST
GODAVARI,ANDHRA PRADESH PIN-533309
PH :08655-231839, 233664, 9849198494.

MATHURAWADA

30.## ANY TIME SERVICE CENTRE (4860), BESIDE
ELECTRICAL
SUBSATION,MADHURAWADA,DISTRICT
VISAKHAPATNAM,ANDHRA PRADESH
PIN-530041
PH :9440160426.

MIRYALGUDA

31.## GANESH MOTORS (4536), D.NO. 6-366, P.V.
COMPLEX,NALGONDA
ROAD,MIRYALGUDA,NALGONDA DISTT
(ANDHRA PRADESH) PIN-508207
PH :9441090870.

NAGARI

32.## PUJITHA SERVICE CENTER (5872),
TIRUPATI
ROAD,NAGARI,DISTRICT-CHITTOOR,ANDHR
A PRADESH PIN-517583
PH :9849441079.

NANDYAL

33.## MARUTI MOTORS (2635), 26-130 OPP. GOVT.
DEGREE COLLEGE,KURNOOL
ROAD,NANDYAL PIN-518501
PH :08514-48765/9249299822/9440554167.

NELLORE

34.## MARUTI AUTO SERVICE STN. (2620), 16/796
SANKARA AGRAHARAM,NELLORE (A.P)
PIN-524001
PH :0861-9246599268.

35.** MARUTI MOTORS (176), 16/1051
POGATHOTA,(NEAR RAGHAV A CINE
COMPLEX),NELLORE,(A.P.) PIN-524001
PH :9440278243.

NIZAMABAD

36.## PRIYA SERVICING (1771), C/O TIRUMALA
CHITRA MANDIR,HOUSE
NO.1-9-833,PHULANG ROAD,NIZAMABAD
(A.P.)PIN-503003
PH :08462-9848071208.

PATTIKONDA

37.## ROYAL MOTORS (5776), ADONI ARTS &
SCIENCE,COLLEGE ROAD ADONI,
PATTIKONDA-518302,DISTRICT-KURNOOLA
NDHRA PRADESH PIN-518302
PH :9866362847.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

PRODDATTUR

38.## SRI RAM MOTORS (3642), 189 INDUSTRIAL AREA,NEAR SRI LAKSMI NAGAR,MYDUKUR ROAD,PRODDATUR (A.P.) PIN-516360 PH :08564-9666890525.

RAJAHMUNDRY

39.## MARUTHI MOTORS (1257), D.NO.6-3-10 CHALLAPALLIVARI STREET,T. NAGAR,RAJAHMUNDRY PIN-533101 PH :9848253434.

RAMAGUNDAM

40.## ALI AUTOMOBILES (2849), NEAR TV RELAY STATION,NTPC JYOTHINAGAR,RAMAGUNDAM,DISTT. KARIMNAGAR (AP) PIN-505215 PH :9848219102.

SECUNDERABAD

41.## ANNAPURNA MOTORS (2947), # 6-3-23/5 JAYANAGAR COLONY,NEAR MEKALMANDI,NEW BHOIGUDA,SECUNDERABAD PIN-500080 PH :040-9849061136.

SIDDIPET

42.* POOJA MOTORS (4076), 19/180 KARIMNAGAR ROAD,G.P. PRASANTH ROAD,SIDDIPET,DISTRICT MEDAK (AP) PIN-502103 PH :08457-9885551518.

SIRSILLA

43.# SATHVIKA MOTORS (5649), KARIMNAGAR ROAD,OPP HP PETROL PUMP,SIRSILLA,DISTRICT - KARIMNAGAR,ANDHRA PRADESH PIN-505301 PH :9440966649/9490284726.

SRIKALAHASTI

44.## SUNDEEP CARS (5972), 16/769,SRI RAM NAGAR COLONY,SRIKALAHASTI,DISTRICT-CHITTOO R,ANDHRA PRADESH PIN-517640 PH :08572-230714/9848294869.

SURYAPET

45.## SAI GLOBAL AUTO SERVICES (4550), OPP. AYYAPPA SWAMY TEMPLE,BY PASS ROAD, NH-9,SURYAPET,ANDHRA PRADESH PIN-508213 PH :08684-225552, 9848076108.

TENALI

46.## HIMAJA MARUTI SERVICE STATION (2828), LECTURER'S COLONY,GIRIJA HOSPITAL ROAD,GANGANAMMAPET,TENALI , GUNTUR DIST. (A.P.) PIN-522201 PH :08644-9849715727.

47.## RAHUL MOTORS (5157), D.NO.18-3-4BITRA SRI RAMULU STREET,BEHIND TELEPHONE EXCHANGE SALIPET,TENALI,ANDHRA PRADESH PIN-500035 PH :9490187453/9440229595.

VAIZAO

48.# SRINIVASA AUTO GARAGE (5440), OPP. KANTI ROAD,NEAR RAYS PETROL PUMP - VISHAKHAPATNAM,DISTRICT - VISHAKHAPATNAM,ANDHRA PRADESH PIN-500001 PH :9396839853.

VIJAYAWADA

49.## ADITYA CAR CARE (5231), 76-12-1.OPP PETROL PUMP,BHAVANIPURAM,DISTRICT - VIJAYAWADA,ANDHRA PRADESH PIN-520010 PH :9703124070.

VISHAKAPATNAM

50.** VISAG AUTO SCANS (461), NO.54-10-18 ISUKATHOTA,BEHIND DECENT FLOORINGS,ISUKATHOTA JN.,VISHAKHAPATNAM PIN-530022 PH :0891-2556302/9246625885.

51.## SIRI AUTOMOBILES (5232), PLOT O 94/A IDA E BLOCK,AUTO NAGAR, GAJUWAKA,VISHAKHAPATNAM,ANDHRA PRADESH PIN-530026 PH :9963296667.

VIZAINAGARAM

52.* VIKRAMA AUTOMOBILES (4621), 17-13-4 TEMPLE STREET,VIZAINAGARAM (A.P.),VIZAINAGARAM (A.P.) PIN-531202 PH :08922-2253951/9440192224.

WANAPARTHY

53.# SMC MOTORS (5658), K.K.T. ROAD,BASAVANNA GADDA,WANAPARTHY,DISTRICT -MAHABUBNAGAR,ANDHRA PRADESH PIN-509103 PH :8545-9440142927.

WARANGAL

54.## VAISHNAVI AUTOMOBILES (470), OPP. NEW SCIENCE DEGREE COLLEGE,HUNTER ROAD,HANAMKONDA,WARANGAL PIN-506001 PH :9866561075.

ARUNACHAL PRADESH

ALONG

55.## BANNU MOTORS (1744), SIYOM MARKET,ALONG,WEST SIANG DISTT.,(ARUNACHAL PRADESH) PIN-791001 PH :03783-233407.

BOMDILA

56.## GURU MOTORS (3921), BIRPUR,RUPA,ARUNACHAL PRADESH PIN-790003 PH :03712-232727.

NIRJULI

57.## SANGO SERVICE STATION (5742), NH-52, NIRJULI,DISTRICT-PAPUMPARE,ARUNACHA L PRADESH PIN-791110 PH :9436052480.

ROIING

58.## PERTIN MARUTI WORKS (5545), DISTRICT- LOWER DIBANG VALLEY,ROIING,ARUNACHAL PRADESH PIN-792110 PH :03803-262843.

TAWANG

59.## TAWANG MARUTI SERVICING STATION (4255), OLD BAZAR LINE,P.O. & P.S.,TAWANG,ARUNACHAL PRADESH PIN-790104 PH :03782-222143.

YINGKIONG

60.# VIJAY MOTORS (5971), UPPER MARKET, P.O:YINGKIONG,DISTRICT-UPPER SIANG,ARUNACHAL PRADESH PIN-791002 PH :9436228808.

ZIRO

61.## HILLS AUTO AGENCY (3922), POLICE RESERVE & PETROL PUMP ROAD,HAPOLI BAZAR P.O. ZIRO,DISTT. LOWER SUBANSIRI,ARUNACHAL PRADESH PIN-791120 PH :03788-224736.

ASSAM

BADARPUR

62.## MARUTI CAR PLAZA (3635), NEAR INDUSTRIAL AREA,S.T. ROAD,BADARPUR,DISTT. KARIMGANJ (ASSAM) PIN-788806 PH :03845-268257.

BISHAWANATH CHARIALI

63.## DISHANG DONE (1058), 52 N.H. BISHWANATH CHARIALI,DISTT. SONITPUR,ASSAM PIN-784176 PH :222309.

64.* BINA AUTOMATION (3677), P.O. BISHAWANATH CHARIALI,DISTT. SONITPUR,ASSAM PIN-784176 PH :03715-230356.

BOKAJAN

65.## SREE GANESH MOTORS (6040), SUKHANJAN SUPER MARKET, P.O:BOKAJAN(C.F.),DISTRICT KARBI ANGLONG,ASSAM PIN-782480 PH :03675-246977/9435167138.

BOKAKHAT

66.## GOENKA AUTOMOBILES (2878), P.O. BOKAKHAT,DISTT. GOLAGHAT,ASSAM PIN-785612 PH :03776-268366.

DHALIGAON

67.## ADHIKARI MOTOR WORKS (4049), P.O. DHALIGAON,DIST-BONGAIGAON,ASSAM PIN-783385 PH :03664-241721/9435214176.

DHEMAJI

68.## NARAH AUTOMOBILES (3852), C/O BLUE HILL COUNTER,P.O. DHEMAJI,DISTT. DHEMAJI,(ASSAM) PIN-787057 PH :03753-225146.

DHUBRI

69.## BRAHMAPUTRA MOTOR SERVICING STATION (3127), G.T.B ROAD,DHUBRI,(ASSAM) PIN-783301 PH :03662-234021.

DIBRUGARH

70.* GEE DEE AUTO SERVICE (953), JHALUKPARA,DIBRUGARH,ASSAM PIN-786001 PH :0373-2329796.

71.** MEHBOOB AUTOMOBILES & TYRE SERVICES (1760), CHOWKIDINGHEE,NEAR STATE TRANSPORT,DIBRUGARH PIN-786003 PH :0373-2318072.

DIGBOI

72.** GAURI AUTOMOBILES (3760), MULIABARI,DIGBOI PIN-786171 PH :03751-269029.

DIPHU

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

73.## WOJARU MOTORS (4377), DPHU MANJA ROAD,DILAJI,NEAR BIRLA FACTORY,DIPHU PIN-782460
PH :036711-271466.

DOOM DOOMA

74.* S K AUTO CARE (3962), UCHAMATI,NATIONAL HIGHWAY,DOOM DUMA,ASSAM PIN-786151
PH :03759-240243/9435135876.

GOALPARA

75.## BHARAT ENGINEERING WORKS (969), PO - BALDMARI,AGIA ROAD,GOALPARA,(ASSAM) PIN-783102
PH :-240321.

GOLAGHAT

76.## KAKOTI MOTOR WORKS (1074), NEW AMOLAPATTY,RANGPUR,P.O. GOLAGHAT,DIISTT. GOLAGHAT (ASSAM) PIN-785621
PH :283177.

GOSSAIGAON

77.## NARZARY AUTOMOBILES (4544), NH-31C, HABRUBIL,GOSSAIGAON,DIIST KOKRAJHAR,ASSAM PIN-783360
PH :-9435127166.

GUWAHATI

78.** MONO MOTOR WORKS (966), BAMUNI MAIDAN,GUWAHATI PIN-781021
PH :-2550115/2656982/9864060665.

HAILAKANDI

79.## RONOK AUTOMOBILES (5978), LALA ROAD, NEAR CIVIL HOSPITAL,HAILAKANDI,DISTRICT-HAILAKAN DI,ASSAM PIN-788151
PH :-223328/9707428563.

HOZAI

80.## PRAMAN MOTORS (5730), NAGANDRA NAGAR, WARD NO.1-HOJAI,DISTRICT-NAGAON,ASSAM PIN-782435
PH :-9954369700.

JONAI

81.## BOROOAH MOTORS (4545), NH-52 MURKONG SLEEK,DIST. DHEMAJI,JONAI,ASSAM PIN-787060
PH :03758-222219 (R).

KARIMGANJ

82.## S D AUTOMOBILE (4931), SILCHAR ROAD,KARIMGANJ,KARIMGANJ PIN-788710
PH :-9435074975.

KOKRAJHAR

83.## NAGA AUTOMOBILES WORKS (3879), JUHWLAO DWIMALOO ROAD,BHOBANIPUR,DISTT KOKRAJHAR,ASSAM PIN-783370
PH :03661-275545.

LUMDING

84.## BEDI MOTORS (5827), MAIN ROAD,NORTH LUMDING,LUMDING,DISTRICT - NAGAON,(ASSAM) PIN-782447
PH :-9435163185.

MANGALDAI

85.## PRIYAM AUTOMOBILES (2424), NH 52 COLLEGE ROAD,MANGALDAI,ASSAM PIN-784125
PH :03713-230528.

MARGHERITA

86.* VIRDI MOTOR WORKS (955), MISSION ROAD,P.O. MARGHERITA,DIST. TINSUKIA,(ASSAM) PIN-786181
PH :-220406.

MARIANI

87.## VASKAR AUTOMOBILES (5237), NEAR NST TINALI. P.O. :MARIANI,DISTRICT - JORHAT,ASSAM PIN-785634
PH :03771-293810.

MIRZA

88.## KALITA AUTOMOBILES (4259), N.H. 37,NEAR PETROL PUMP,MIRZA,ASSAM PIN-781125
PH :-9864410013.

MORANHAT

89.* CHINAKI SERVICE STATION (2973), (MARUTI AUTHORISED SERVICE STATION),NATUN NAGAR A.T. ROAD,MORANHAT,(ASSAM) PIN-785670
PH :03754-229522/9401512821.

MORIGAON

90.## PRAGATI MOTORS (5273), MORIGAON TOWN. WARD NO.1 BHATBOR,DOLON PATH,P.O.:MORIGAON,DISTRICT - MORIGAON,ASSAM PIN-782105
PH :-9864189158.

NAGAON

91.## DAS MARUTI MOTOR WORKS (3734), NAGAON,(ASSAM) PIN-782001
PH :03672-225031.

NALBARI

92.## B.R.K. AUTOMOBILES ENGINEERING WORKS (2838), HAJO ROAD,NALBARI,(ASSAM) PIN-781335
PH :03624-9954050050.

NAMRUP

93.## RAJ ENTERPRISES (3849), NAMRUP INDUSTRIAL ENTERPRISES,SONARI TINIALI,PARBATPUR,NAMRUP (ASSAM) PIN-786623
PH :0374-2502856.

NORTH LAKHIMPUR

94.** GREEN LAND MARUTI WORKS (2974), NEAR GURUDWARA,NH 52,NORTH LAKHIMPUR,(ASSAM) PIN-787001
PH :03752-9435086197/9577646296.

PATHSALA

95.## USHA AUTOMOBILES (4240), N.H.31, PATHSALA,DISTRICT-BARPETA,ASSAM PIN-781325
PH :-266012/9401310431.

RANGIA

96.## SWEET MOTOR WORKS (4375), NH-31,N.T. ROAD,WARD NO. 5,RANGIA PIN-781354
PH :03621-240525, 9435141291.

SILAPATHAR

97.## J. B. MOTORS (5743), NH-52, JONAI ROAD-SILAPATHAR,DISTRICT - DHEMA JI,ASSAM PIN-787059
PH :-9954635182.

SILCHAR

98.** CARDROME (1559), 2ND LINK ROAD JUNCTION,SONAI ROAD (M H C ROAD),SILCHAR,(ASSAM) PIN-788006
PH :-225128.

TEZPUR

99.## POOJA MOTOR WORKS (4373), N.T. ROAD,MURATETLI,TEZPUR,ASSAM PIN-784001
PH :03712-200127.

TINSUKIA

100.* AUTO MAKERS (834), NEAR SHIVDHAM MANDIR,MAKUM ROAD,TINSUKIA,(ASSAM) PIN-786125
PH :0374-2352841.

TITABAR

101.## SHANKAR AUTO WORKS (5174), C/O:SHIV SHAKTI AUTO WORKS,BALAJI,MARKET TITABAR CHARIALI TITABAR,DISTRICT - JORHAT,ASSAM PIN-785634
PH :-249096.

UDALGURI

102.## RENU MOTORS (4543), WARD NO. 2. U.T. ROAD,UDALGURI TOWN,UDALGURI,ASSAM PIN-784509
PH :03711-225096, 9435222344.

BIHAR

ARRAH

103.## ANJALI ENTERPRISES (5533), ARRAH SASARAM MAIN ROAD,ZERO MILE,NEAR POWER GRID, ARRAH,DISTRICT-BHOJPUR,(BIHAR) PIN-802301
PH :06182-9386734804.

AURANGABAD (BIHAR)

104.## K R N AUTOMOBILE (2242), NEW G.T. ROAD,(NH-2),AURANGABAD,(BIHAR) PIN-824101
PH :06186-9304930657.

BEGUSARAI

105.## K.B. MOTORS (4788), NH-31,SINGHAUL, POKHAR,BEGUSARAI,BIHAR PIN-851134
PH :06243-9835214115.
106.* NATIONAL AUTO WORKS (1536), INDUSTRIAL AREA,BARAUNI,BEGUSARAI PIN-851122
PH :06243-9973381733.

BHAGALPUR

107.** RUPRA AUTOMOBILES (1577), EAST OF AIRPORT,BHAGALPUR,P.O. BAHADURPUR,(BIHAR) PIN-813210
PH :0641-9334385531.

BIHAR SHARIFF

108.## SARVADAY ENGG. & AUTO SER (1549), INDUSTRIAL ESTATE,RAMCHANDRAPUR,BIHARSHARIFF (NALANDA) PIN-803101
PH :06112-9334672919.

CHAPRA

109.## PRASAD AUTOMOBILES (1974), BHAGWAN BAZAR,CHAPRA,(BIHAR) PIN-841301
PH :06152-9431216362.

DARBHANGA

110.* SINGH MARUTI CARE (2277), P.O. LALBAGH,DARBHANGA,(BIHAR) PIN-846004
PH :06272-9431293796.

QAYA

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

111.* AUTO CARE (3027), DURGA BARI,HARIDAS CHATTERJEE LANE,NEAR SAINT PAUL SCHOOL,GAYA (BIHAR) PIN-823001
PH :0631-9939407978.

HAJIPUR

112.## ALFA AUTO (5454), PASWAN CHOWK, NH13, HAJIPUR,DISTRICT - VAISHALI,BIHAR
PIN-844101
PH :06244-9431327965.

HAZIPUR

113.** HI-TECH AUTOMOBILE (3123), GANDHI SETU PATH,N.H.-19,HAJIPUR,VAISHALI (BIHAR) PIN-844101
PH :06224-9835044502.

KAHALGAON

114.## MAHA GAURI ENTERPRISES (5822), NTPC ROAD, GANGANAGAR, CHOWRATHIYASTHAN,KAHALGAON,DISTRI CT-BHAGALPUR,BIHAR PIN-813203
PH :9431463558.

KHAGARIA

115.## HIGHWAY SERVICE STATION (2374), NH-31 ,P.O. KOSHI COLLEGE,KHAGARIA (BIHAR) PIN-851204
PH :06244-9430067775.

MADHEPURA

116.## KRISHNA AUTOMOBILES (2639), PATHRAHA,SINGHSWAR ROAD,MADHEPURA,(BIHAR) PIN-852213
PH :06476-223315.

MADHUBANI

117.## VIDYAPATI AUTOMOBILE (4234), BHAIJARA,GANGASAGAR,MADHUBANI,BIHA R PIN-847211
PH :06276-9534298143.

MOTIHARI

118.* PUJA AUTOMOBILES (3174), NEAR LAL PD. PETROL PUMP,NH-28 CHHATAUNI,MOTIHARI,EAST CHAMPARAN (BIHAR) PIN-845401
PH :06252-9709752799.

MUNGER

119.## SUN BEAM ENGG WORKS (1533), 150 BETWAN BAZAR,P.O.& DISTT. MUNGER (BIHAR) PIN-811201
PH :6344-9431418941.

MUZAFFARPUR

120.** DYNAMIC MARUTI SERVICE CENTRE (1163), HARI SHARAN MARG,AMGOLA,MUZAFFARPUR PIN-842002
PH :0621-9386834595.

121.## PERFECT MOTORS (3465), NEAR CHANDNI CHAUK,JHITKAIIYA,POST: MIT PS: BRAHAMPURA,MUZAFFARPUR (BIHAR) PIN-842003
PH :0621-9470450260.

PATNA

122.** CAR SCANNER (1552), OPP. BATA,KANKAR BAGH COLONY,PATNA PIN-800020
PH :0612-9431016342.

123.** CITY AUTO SERVICE (1250), NEAR ALPANA MARKET,PATLIPUTRA COLONY,PATNA PIN-800013
PH :0612-9334117070.

124.** GOOD WRENCH SERVICES (3364), DAUDBIGHA,NR. NALANDA MEDICAL COLLEGE,KANKAR BAGH, MAIN ROAD,PATNA (BIHAR) PIN-800020
PH :0612-7277772777.

125.## MARUTI MAINTAINER (4842), PLOT NO. 73,NEAR RAJENDAR NAGAR,OVER BRIDGE, KANKARBAGH,PATNA PIN-800020
PH :0612-9304564382.

126.* MOHINI AUTOMOBILES (1049), BEHIND RESERVE BANK OF INDIA,EXHIBITION ROAD,PATNA PIN-800001
PH :0612-9431094340.

127.** RANJAN MOTORS (3665), SUDARSHAN PATH,NEAR PATNA SAHIB STATION,PATNA CITY PIN-800009
PH :0612-9334084343.

128.## RELIABLE MOTORS (2972), NEAR WEST OF COMMUNITY HALL,NEAR NISHA DEVI ASHRAN,EAST LOHANIPUR KADAMKUAN,PATNA (BIHAR) PIN-800003
PH :0612-2686247/2671215.

129.** TIRUPATI AUTO (1956), ASHIANA MORE,BAILEY ROAD OPPOSITE UNION BANK,RAJABAZAR,PATNA PIN-800014
PH :0612-9835050292.

PURNEA

130.## AUTO INDIA (3026), BIHAR TALKIES ROAD,LINE BAZAR,PURNEA (BIHAR) PIN-854301
PH :0641-9334461651/9470204501.

SAMASTIPUR

131.## MARUTI CARE (1526), TAJPUR ROAD,SAMASTIPUR,(BIHAR) PIN-848101
PH :06274-9835034061.

SASARAM

132.## TRIPTY CAR SERVICE CENTRE (5535), NEAR RELIANCE PETROL PUMP,G.T. ROAD,NH-2,SASARAM,DISTRICT-SASARAM, BIHAR PIN-821115
PH :9431485592.

SITAMARHI

133.* SITAMARHI AUTO CARE (6050), INDUSTRIAL AREA, RAJOPATTI,P.O.SITAMARHI,DISTRICT-SITAM ARHI,BIHAR PIN-843302
PH :94300012437.

CHANDIGARH

CHANDIGARH

134.## HAPPY SERVICE STATION (769), SECTOR 17B,MADHYA MARG,CHANDIGARH PIN-160017
PH :9216721561.

135.** CAR CLINIC (179), 128 INDUSTRIAL AREA,PHASE-II,CHANDIGARH PIN-160002
PH :9417216782.

136.## RATTAN MOTORS (1155), SECTOR 23-C,CHANDIGARH PIN-160023
PH :9814008335.

137.## HI-TEK MOTORZ (4743), PLOT NO. 658,INDUSTRIAL AREA,PHASE-1 CHANDIGARH PIN-160002
PH :0172-9872567868.

CHHATTISGARH

AMBIKAPUR

138.# MARUTI AUTO CARE (4839), KHARSIA NAKA,AMBIKAPUR,DISTRICT-SURGUAJA,CHA TTISGARH PIN-497001
PH :0774-9425256087/280294.

BILASPUR (CHAT)

139.## RAINEY'S AUTO CARE (4770), RAIPUR ROAD MAHARANA PRATAP CHOWK,NEAR LABOUR COMMISSIONER OFFICE,JARBHATA,BILASPUR (CHATTISGARH) PIN-495001
PH :07752-224224.

JAGDALPUR

140.## VISHWAKARMA AUTOMOBILES (4467), RAJMAHAL PARISAR,BAHAMBERS OF COMMERCE ROAD,JAGDALPUR,CHHATTISGARH PIN-494001
PH :07782-223196, 228207.

JAMNIPALI

141.## AUTO CARE (3823), 203 J P COMPLEX SADA COLONY,JAMNIPALI,TEH. KATHGHORA,DIST. KORBA (CHATTISGARH) PIN-495450
PH :07759-233797/233353.

KORBA

142.## AUTO SELF SERVICE (5020), MURARKA MARKET ROAD,(INDUSTRIAL ROAD),KORBA PIN-495677
PH :07759-247250/251.

MANENDRAGARH

143.## SHARMA AUTO CENTRE (5354), MAIN ROAD - MANENDRAGARH,DISTRICT - KOREA,CHHATTISGARH PIN-497442
PH :07771-241872/215305.

RAIPUR

144.## SHIVAM CAR SERVICES (4774), BILASPUR ROAD,KHAMTARAJ,RAIPUR,CHATTISGARH PIN-492006
PH :0771-3090522/2563093/3290522.

RAJ NANDGAON (CHH)

145.## SAI MOTORS (3672), OPP DENTAL COLLEGE,SUNDARA,DURG NAGPUR HIGHWAY (NH-8),RAJNANDGAON PIN-491441
PH :07744-228433/9179791051.

DELHI

DELHI

146.** SUBHYATRA AUTOMOBILES (5045), PLOT NO 31,N BLOCK SECTOR - 3,BAWANA INDUSTRIAL AREA BAWANA PIN-110039
PH :011-9810668715/9717421118.

147.** NAVEEN AUTOMOBILES (4934), 37, PATPARGANJ INDUSTRIAL AREA,NEW DELHI PIN-110092
PH :011-22163719/65092326.

148.## AUTO ENGRS.SERVICE STN. (8023), OPP.MODEL TOWN,DERAWAL NAGAR,DELHI PIN-110009
PH :011-27231421/27231839.

149.* DRIVE WELL SERVICE STN. (866), 1/486, G.C.S. COMPLEX, MAIN G.T. ROAD,DILSHAD GARDEN,NEW DELHI,PIN-110095
PH :011-22575411/2219859.

150.** RAJINDRA SERVICES PVT. LTD. (826), B-55 G.T.KARNAL ROAD,INDUSTRIAL AREA,DELHI PIN-110033
PH :011-27114915/42384512.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

151.**	SHALIMAR AUTOMOBILES PVT. LTD (871), C-91/9 WAZIRPUR INDUSTRIAL AREA,ASHOK VIHAR CROSSING,DELHI PH :011-27377718/27373096.	164.##	YASHWANT PLACE SER. STN. (8022), AFRICA AVENUE,(OPP.CHANAKYA CINEMA),NEW DELHI PIN-110021 PH :011-24122424/26876388.	177.##	SHARMA AUTOMOBILES (1939), 11/78 VILLAGE MOTI BAGH,NEAR NANAKPURA GURDWARA,RING ROAD,NEW DELHI PIN-110021 PH :011-26875050, 26118764.	191.##	SHIKHAR AUTOMOBILES (5546), A-2/1CHOTTEY LAL PARK, SHIVAJI MARG,OPP KIRTI NAGAR,METRO PILLAR NO.341,NEW DELHI,DISTRICT - DELHI,DELHI PIN-110015 PH :011-25432956.
152.##	WIG AUTOMOBILES (8012), D-3 S.M.A CO-OP. INDL. ESTATE,(OPP. JAHANGIR PURI CHOWK),G.T. KARNAL ROAD,DELHI PIN-110033	165.**	BRIGHT MOTORS (P) LTD. (885), C-263 PEERAGARHI,OUTER RING ROAD,DELHI PIN-110087	178.##	BATRA CAR CARE CENTRE (1936), HUMAYUN ROAD,NEW DELHI PIN-110003	NEW DELHI	
153.*	PH :011-27692649/27696855.	166.##	PH :011-25267885/5252226.	179.##	PH :011-23389332.	192.##	ROHAN SERVICES (5444), PLOT NO:125, VILLAGE POCHANPUR,SECTOR - 23 DWARKA,DISTRICT - DELHI (WEST),DELHI PIN-110075
	AAPKA KARKHANA (MOTORS)PL (869), 62/I POSANGIPUR MAIN MARKET,A-3 BLOCK JANAKPURI,NEW DELHI,NEW DELHI PIN-110058		SRI BALAJI AUTOMOBILE (8038), KHASRA NO.33,13/2-12 MAIN BAWANA ROAD,SAMEYYPUR (NEAR DELHI COLLEGE OF ENGG.),DELHI PIN-110042		SHRI BALAJI CAR SCAN (2677), 43/12 OPP, NEW ANAJ MANDI,NAJAFGARH,NEW DELHI PIN-110043		PH :011-28012074/65478300.
	PH :011-25520157/25620947.	167.##	PH :011-65151149.	180.*	STAR AUTOMOBILES (2574), MAIN SAFIABAD ROAD,NARELA,DELHI PIN-110040	GOA	
154.##	ASHA AUTOMOBILES (850), A-2 CHOTTEY LAL PARK,NAJAFGARH ROAD,OPP.KIRTI NGR,P.O,NEW DELHI PIN-110015		PH :011-25267885/5252226.	181.##	PH :011-27284784.	BICHOLIM	
	PH :011-25418492/25102655.	168.*	PH :011-25260904/24356581.		IMAGE (2561), IOC PUMP,NEAR SAMACHAR APT. OPP. KIRTI APT.,MAYUR VIHAR PHASE-I EXT.,DELHI PIN-110091	193.##	SHREE GURUKRUPA AUTOWORLD (1249), PLOT NO.76,BICHOLIM INDUSTRIAL ESTATE,BICHOLIM,GOA PIN-403529
155.*	AUTOWISE SERVICE STATION (8001), PP-38A GALI NO.10,ANAND PARBAT,KAROL BAGH,NEW DELHI PIN-110005		PH :011-41472572.	182.##	PH :011-22716910/22717590.	CURCHOREM	
	PH :011-28761021.	169.**	PH :011-22750083, 22750084.		GLOBE SERVICE STATION (3631), 18TH KM MATHURA ROAD,BADARPUR,NEW DELHI PIN-110044	194.##	VIPUL AUTOMOBILES (5376), PLOT NO.7,8,9,KAKODA INSUTRIAL-,STATE, KAKODA CURCHOREM,DISTRICT - SOUTH GOA,GOA PIN-403706
156.##	BASANT MOTORS (8003), 78 TOLSTOY LANE,BEHIND SCINDIA HOUSE,NEW DELHI PIN-110001		PH :011-26522726/26561242.	183.##	PH :011-25366202/65469750.	GOA	
	PH :011-23529566/23326860.	170.##	PH :011-25432926.		A-ONE AUTOMOBILES (3362), 487/35 NATIONAL MARKET,PEERAGARHI,DELHI PIN-110087	195.*	VIKAS ENGINEERING WORKS (4953), BHOMA,KUNDAIM,GOA PIN-403107
157.##	BHASIN SERVICE STATION (830), DR. K.S. KRISHNAN ROAD,NEAR PUSA GATE,NEW DELHI PIN-110012	171.*	PH :011-25432926.	184.**	PH :011-25278935/25287066.	MAPUSA	
	PH :011-25841794/25842852.	172.**	PH :011-25432926.	185.*	EXCLUSIVE AUTOMOBILES PVT. LTD. (3546), 98 MANGOLPUR KALAN,SECTOR-2 NEAR JAIPUR GOLDEN	196.##	SARDESAI AUTOMOBILES (2176), NEAR MILAGRES CHURCH,194 GAUNSAWADA,MAPUSA,GOA PIN-403507
158.##	ENGINEERS SERVICE STATION (834), SHRI AUROBINDO MARG,(SAFDARJANG AIRPORT),NEW DELHI PIN-110003		PH :011-41761026, 41761810.	186.##	HOSPITAL,ROHINI,DELHI PIN-110085	PONDA	
	PH :011-27512696.	173.##	PH :011-23653122/65796229.		PH :011-7162696/32483339.	197.*	PH :0832-2256350, 2262361.
159.##	GUPTA SERVICE STATION (872), MOTI BAGH SOUGH,NEW DELHI PIN-110021		PH :011-42137852/25996299.	187.##	AUTOTECH ENGINEERS (4551), PLOT NO. 20-24,MATIYALA VILLAGE,SECTOR-3, NEAR DPS DWARKA,NEW DELHI PIN-110075	VERNA	
	PH :011-26170989/26192162.	174.**	PH :011-42137852/25996299.		PH :011-25083711.	198.*	DHAVLIKAR AUTOMOBILES (2041), NO.5 TIP TOP MANSION IV,INDIRA NAGAR,PONDA,GOA PIN-403401
160.##	KITCHNER ROAD SERVICE STATION (864), ROAD NO.41,SAHEED LALA JAGAT NARAYAN MARG,NEAR T.V. TOWER PITAMPURA,DELHI PIN-110034		PH :011-42137852/25996299.	188.##	PH :011-25083711.	GUJARAT	
	PH :011-65375676/27315321.	175.##	PH :011-25434040/25101270.		PH :011-25082966/25082967.	199.*	LUBRICARE SERVICES (261), 7-D GOULLOY,NH.17 NUVEM,SALCETE,GOA PIN-403601
161.**	KUMAR AUTOMOBILES (855), B-281 OKHLA INDUSTRIAL AREA,PHASE-I,NEW DELHI PIN-110020	176.*	PH :011-25434040/25101270.	189.##	PH :011-25082966/25082967.	AHMEDABAD	
	PH :011-26812566/26813132.		PH :011-25434040/25101270.		PH :011-65164147.		AUTOWAY (125), MANGALYA COMPLEX,NEAR ANJALI CINEMA CROSS ROAD,BATTHA,AHMEDABAD PIN-380007
162.**	MULTAN AUTOMOBILE ENGRS. (853), B-7/I OKHLA INDUSTRIAL AREA,PHASE II,NEW DELHI PIN-110020			190.##			PH :079-9898016888.
	PH :011-41610495/41610496.						
163.**	SEVEN HILLS AUTO.(P) LTD. (848), D-20/I OKHLA INDUSTRIAL AREA,PHASE II,NEW DELHI PIN-110020						
	PH :011-26388766/26388768.						

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

200.## DAHISON MOTORS (143), NEAR MANAV
MANDIR, DRIVE IN ROAD, AHMEDABAD
PIN-380052
PH :079-9698064929 / 9698096242.
201.* RAJAN MOTORS (2873), C/O M/S. SUPER
SERVICE STATION, 79/80 JAGABHAI
PARK, RAM BAUG
MANINAGAR, AHMEDABAD PIN-380008
PH :079-9625972345 / 9879273953.
202.## MEGHDOOT MOTORS (3437), MASONIC
LODGE COMPOUND, SHAHIBAUG
ROAD, AHMEDABAD PIN-380004
PH :079-9625488228.
203.** SPEED AUTO CARE PVT. LTD (5524),
NH-8, VIRAT NAGAR AHMEDABAD, DISTRICT
- AHMEDABAD, GUJARAT PIN-382350
PH :079-9625210344 / 9925204239.
204.* POKAR AUTO REPAIRERS (2479), NEAR
UNION CO. BANK, SAJIPUR BOGHA, NARODA
ROAD, AHMEDABAD PIN-382345
PH :079-9998336510.

AMRELI

205.* CAR CARE CENTRE (2734), PATEL
GARAGE, CHAKRAGADH
ROAD, AMRELI, (GUJARAT) PIN-365601
PH :02792-220099/233519/9825422922.
206.* KHODIAR MOTORS (3029), GAVADKA
ROAD, AMRELI, (GUJARAT) PIN-365601
PH :02792-224696/9825672857.

ANAND

207.* PATEL TRACTOR COMPANY (2221),
(SERVICE DIVISION), BEHIND SUNIL
CHAMBERS, STATION ROAD, ANAND
PIN-388001
PH :02692-9925534494.
208.## SHAKTI MOTORS (2226), OPP. J.K.
PARK, NATIONAL HIGHWAY NO.8, P.O.
VAGHASHI, TA: ANAND DISTT. KHEDA
PIN-388320
PH :02692-9825792999.

ANJAR

209.## CAR AGE (5542), PLOT NO.11, MAHATMA
NAGAR-1, ANJAR, GADHPADAR ROAD, NR.
MAHAKALESHWAR, MAHADEV
MANDIR, ANJAR, GUJARAT PIN-370201
PH :02636-9427216886/9427211167/241796.

BARDOLI

210.** POOJA MOTORS (361), NEAR GIDC, SURAT
ROAD, BARDOLI, (GUJARAT) PIN-394601
PH :02622-9825762621.

BHARUCH

211.* NEW MARUTI MOTORS (5156), 9/16 AKASH
GANGA B/H CNG PUMP, OLD NH
-8, BHOLAV, DISTRICT - BHARUCH, GUJARAT
PIN-392002
PH :02642-9879532460.

BHAVNAGAR

212.## VIKRAM MOTOR GARAGE (127),
TAKHTESHWAR PLOT, NEAR CHANDRA
BHUVAN, BHAVNAGAR PIN-364002
PH :0278-9426463280.

BHUJ

213.* ASHA MOTORS (3629), LAL TEKRI, HOSPITAL
ROAD, BHUJ, (GUJARAT) PIN-370001
PH :02832-9825235088.

BILIMORA

214.## PATEL AUTOMOBILES (4030), DANDEKAR
COMPOUND, GANDEVI ROAD, BILIMORA
PIN-396380
PH :02634-9824123875 / 9825471557.

BORSAD

215.## SUMAN MOTORS (3863), NEAR NISHRAYA
CROSSING, BHARAN ROAD, BORSAD, DISTT.
ANAND PIN-388540
PH :02696-221524/9428434436.

CHAND KHEDA

216.* BALVINDER AUTOMOBILES (2528), PLOT
NO.202/2, NATIONAL HIGHWAY NO.8, CHAND
KHEDA, DISTT. GANDHI NAGAR (GUJARAT)
PIN-382424
PH :079-9924016000 / 9924061000.

CHIKHLI (GUJ.)

217.## SHREE AMBICA MOTORS (2663), KUNDI
FATAK, NEAR ADARSH
NURSERY, N.H.8, CHIKHLI DISTT. VALSAD
(GUJARAT) PIN-396001
PH :02632-285477/285029/9825131520.
218.## INAL MOTORS (3929), POST
MAJIGAM, CHIKLI BILIMORA ROAD, DISTT
NAVSARI PIN-396321
PH :02634-9099033773.

DAHOD

219.* CAR SEVA (2438), APNA PLASTIC
COMPOUND, OPP. ST. STEPHEN
SCHOOL, GODHRA ROAD, DAHOD
PIN-389151
PH :02673-9426469122.

DAMAN

220.## CAR ZONE (4358), SURVEY NO.
70/3, VARKUND, OPP. VEERA DA DHABA, VAPI
DAMAN ROAD, DAMAN PIN-396210
PH :0260-9824184449.

221.## TOP GEAR (5469), DAMAN-KUNTA
ROAD, KUNTA DAMAN, DISTRICT - UNION
TERRITORY, GUJARAT PIN-396210
PH :9825631264.

DEESA

222.## VAKHARIA MOTORS (3970), G L PADIAR
COMPLEX, PALANPUR PATHAN
HIGHWAY, OPP. RAJMANDIR
TALKIES, DEESA PIN-385001
PH :9377728841.

DHARI

223.## GURUKRUPA MOTORS (5876), NR.
NARMADESHWAR MAHADEV
TEMPLE, DHARI, AMRELI ROAD,
DHARI, DISTRICT-AMRELI, GUJARAT
PIN-365640
PH :9924728405/9825374658.

DHORAJI

224.## UNIVERSE AUTO (5837), SARDAR
CHOWK, DHORAJI, DISTRICT-
RAJKOT, GUJARAT PIN-360410
PH :9727714643.

DWARKA

225.# BHADRA SERVICES (5975), OPP.SATHWARA
BHUVAN, NR.KANDAS BAPU ASHRAM,
DWARKA, DISTRICT-JAMNAGAR, GUJARAT
PIN-361315
PH :02892-222207/9879615919.

GANDHI NAGAR

226.## SHITAL MOTORS P.LTD. (134), 304
G.I.D.C., SECTOR-28, GANDHINAGAR
(GUJARAT) PIN-382028
PH :079-9824310888 / 9924127065.
227.* RIDDHI MARUTI(A DIVISION OF SHREE
ARBODA PVT. LTD (2151), E-19/10 G.I.D.C.
SECTOR 26, NEAR K-7, GANDHINAGAR
PIN-382044
PH :02712-9825041331.

228.* LABH MOTORS (4527), 803/2 KASHI
DIAMOND, NR. PARTH GAS AGENCY, GIDC,
SECTOR-28, GANDHINAGAR PIN-382028
PH :079-9825020030 / 9712920030.

HALOL

229.## MAA MOTORS (4767), GODHRA ROAD, NEAR
TELEPHONE EXCHANGE, HALOL, GUJARAT
PIN-389350
PH :02676-222375/9898610212.

HIMMATNAGAR

230.## MEHTA SERVICE STATION (135), NEAR
SHANTI GARDEN, RESTAURANT, DIWALI
BAUG MOTIPURA, N.H.B. HIMMATNAGAR
GUJARAT PIN-383001
PH :9825052891 / 9879682582.

IDAR

231.## ADINATH AUTOMOBILE & WORKSHOP
(3136), NEAR HOTEL GREEN PARK, AMBAJI
HIGHWAY ROAD, IDAR, (GUJARAT)
PIN-383430
PH :02778-255787/255411.
232.## SUN MOTORS (5175), IDAR-HIMMATNAGAR
HIGHWAY ROAD, AT KRUSHNAGAR. PO
NETRAMLI, TA.IDER DISTRICT
SABARKANTA, GUJARAT PIN-383430
PH :02778-9879589145 / 9228286768.

JAM KHAMBHALLIA

233.## SHRI HARI OM MOTORS (4539), JADESWAR
ROAD CHAR RASTA, OPP. KRISHNA WAY
BRIDGE, JAM KHAMBHALLIA, GUJARAT
PIN-361305
PH :02833-9426955344.

JAMNAGAR

234.* LANDMARK AUTOMOBILES (1973), AIRPORT
ROAD, KHAMBHALLIA
HIGHWAY, JAMNAGAR, (GUJARAT)
PIN-361006
PH :0288-9227620700.

JETPUR

235.## GIRIRAJ MOTORS (3971), SARDAR
CHOWK, JETPUR HIGHWAY, JETPUR
PIN-360370
PH :02823-225780/9727154392.

JUNAGADH

236.## MARUTI MOTORS (266), G.I.D.C. - I, RAJKOT
HIGHWAY, DOLATPARA, JUNAGADH (GUJARAT)
PIN-362037
PH :0285-9904717770.

KALOL

237.## SUNRISE AUTO CENTRE (146), OPP.
IFFCO, AHMEDABAD-MEHSANA ROAD, SAJ
KALOL, (NORTH GUJARAT) PIN-382721
PH :02764-309646/9824407885.

KAMREJ

238.* PATEL MOTOR GARAGE (2764), SURAT
ROAD, JYOTI PARK, KAMREJ CHAR
RASTA, KAMREJ DIST. SURAT PIN-394285
PH :02621-9825127413.

KAPADVANJ

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

239.##	DISHA MOTORS (5960), MAHAMADPURA,KAPADVANJ,NADIAD ROAD,KAPADVANJ,DISTRICT-KHEDA,GUJAR AT PIN-387620 PH :02691-9825641244 / 9426361548.	248.#	ASHA MOTORS (4340), NANA ANGLADESH,NAKHATRANA HIGHWAY ROAD,NAKHATRANA,KUTCH PIN-370001 PH :02835-9427272315.	257.##	GOOD LUCK MOTORS (5341), 2 UMIYA COMPLEX .NEAR GURUKUL,HIGH SCHOOL SIDHPUR,DISTRICT - PATAN,GUJARAT PIN-384151 PH :02767-9428665131.	267.*	RUBY MOTORS (5942), SASAN ROAD,OM NAGAR,TALALA,DISTRICT-JUNAGADH,GUJA RAT PIN-362150 PH :02877-9426975022.
KESHOD		NAVSARI		SIHOR		UMBERGAON	
240.##	PRASAD MOTORS (3969), VERAVAL HIGHWAY,KESHOD,KESHOD PIN-362220 PH :02871-9426424488 / 93280 01734.	249.**	JIGAR MOTORS (133), N.H-8.KABILAPORE,NAVSARI,VALSAD DIST. (GUJARAT) PIN-396424 PH :02637-9879549533.	258.#	MOMAI MOTORS (6032), NR. RAJ MOMAI PETROLIUM,BHAVNAGAR-RAJKOT HIGHWAY,SIHOR,DISTRICT-BHAVNAGAR,G UJARAT PIN-364240 PH :9909521980.	268.##	KARAN AUTOMOBILES (2571), OPP. DAMRU WADI,UMBERGAON SANJAN ROAD,UMBERGAON DIST. VALSAD,GUJARAT PIN-396170 PH :0260-9826336583.
KHEDBRAHMA		PALANPUR		SILVASSA		UNJHA	
241.##	MARUTI AUTO CARE (5342), OPP POLICE STATION,AHMEDABAD-AMBAJI STATE HIGHWAY,KHEDBRAHMA,GUJARAT PIN-382255 PH :02775-9427369512.	250.##	PANCHAL AUTO REPAIRING WO (138), HIGHWAY ROAD,NEAR RAILWAY CORSSING,PALANPUR PIN-385001 PH :02742-9426323294.	259.##	SHREE KRISHNA MOTORS (5374), PLON NO.43.66 KVA ROAD AMLI,SILVASSA,DISTRICT -(UT),GUJARAT PIN-396230 PH :9904707111 / 9904707123.	269.##	AMBIKA MOTORS (3932), SADGURU COMPLEX,AHMEDABAD PALAM PUR HIGHWAY ROAD,UNJHA,MEHSANA PIN-384170 PH :9824517382.
LIMDI		PETLAD		SURAT		VADALI	
242.##	PARTH AUTOMOBILES (4171), NEAR LIMDI CHOWK,AHMEDABAD RAJKOT HIGHWAY,LIMDI PIN-363641 PH :02763-9426714510.	251.##	SIDDHI MOTORS (4166), NADIAD-CAMBAY ROAD,NEAR KAILASH DHAM,PETLAD PIN-387001 PH :02697-9429031303.	260.##	EMPEROR CAR TECH (1748), F.PLOT NO.124 NEAR RELIANCE COMPLEX,BESIDE SHEETAL,MARBLE,SURAT-DUMAS ROAD PIPLD,SURAT PIN-395007 PH :0261-9825033396.	270.#	VRAJ MOTORS (4560), UMIYA PARK, HIGHWAY ROAD,VADALI TA,VADALI,SABARKANTA (GUJARAT) PIN-383235 PH :02778-220109 / 9427364109.
LUNAWADA		PULSANA		261.##	SEIKON MOTORS (3161), PLOT NO.49,50,51 SAI ASHISH INDL. ESTATE,NEAR BAMROLI BRIDGE,120 FT. BAMROLI ROAD,SURAT (GUJARAT) PIN-359002 PH :0261-9426149906.	VADGAM	
243.##	N.J. MOTORS (4370), MODASSA ROAD,NR. SAIFEE HOSPITAL,LUNAWADA,DIST: PANCHMAHAL (GUJARAT) PIN-389230 PH :026474-250700/99254252700.	252.##	ZEBE MOTORS (4535), PLOT NO. 5,ZAIBUNISHA MANZIL, ANUKOOL NAGAR,BEHIND SAFED CHAL,UNN SURAT (GUJARAT) PIN-395006 PH :0261-9727719082.	262.**	PATEL MOTORS (3060), 64 BAJRANG NAGAR,NEAR OCTROI CHECK POST,NANA VARCHA,SURAT PIN-395006 PH :0261-9909149498.	271.#	CHAUDHARY & CHAUDHARY MOTORS (5651), OPP.RELIANCE PETROL PUMP,PALAMPUR ROAD - VADGAM,DISTRICT - BANASKANTHA,GUJARAT PIN-385001 PH :02793-9925457783.
MEHSANA		RAJKOT		263.*	J.K.MOTORS (5158), LUHAR MOHALLA POSTT PALGAM,DISTRICT - SURAT,SURAT,GUJARAT PIN-394510 PH :0261-9979865551.	VADODARA	
244.**	SHUBH AUTO SERVICES (3367), NEAR AGRO PETROL PUMP,OLD RTO,RAMOSNA JAKAT NAKA,MEHSANA (GUJARAT) PIN-384002 PH :02762-9825120859 / 9825322460.	253.**	KHODIYAR MOTORS (356), DHEBAR ROAD (SOUTH),ATIKA INDUSTRIAL ESTATE,RAJKOT,RAJKOT PIN-360001 PH :0281-9925311011.	264.*	TARUN MOTORS (5254), PLOT NO.A-10/14,ROAD NO.4,MAHATMA GANDHI ROAD,UDYOG NAGAR,UDHNA - SURAT,GUJARAT PIN-394210 PH :0261-9712976141.	272.##	MAYUR SERVICE STATION (2224), NEAR POLICE STATION,PRATAPNAGAR ROAD,BARODA PIN-390004 PH :0265-9879453031.
245.*	SANSKAR MOTORS (5468), PALAVASANA -BECHARAJI ROAD,NR.ONGC FIRE STATION ,MEHSANA,DISTRICT-MEHSANA,GUJARAT PIN-384002 PH :02762-9825206359 / 9825604959.	254.*	UNIVERSE AUTO (5544), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM,OCTROI POINT, AHMEDABAD HIGHWAY,RAJKOT, DISTIRCT - RAJKOT,GUJARAT PIN-380002 PH :0281-2705643/9879616643.	265.*	NILESH MOTORS (5347), PLOT NO.21/23 PARAS INDUSTRIAL ESTATE,NEAR GAJERA CIRCLE, KATARGAM, SURAT,DISTRICT - SURAT,GUJARAT PIN-395004 PH :0261-2481836, 9377162654.	273.**	CAR CARE (2229), NEAR GANDHI OIL MILL,,GORWA INDUSTRIAL ESTATE,BARODA PIN-390016 PH :0265-9227106915.
MORVI		RAJPIPLA		SURENDERANAGAR		274.**	HONEST AUTO STRUCTURE WORKS (279), NEAR SURAZ PLAZA,EAST OF JETALPUR RAILWAY UNDERBRIDGE,SAYAJI GUNJ,BARODA PIN-390005 PH :0265-9824014046.
246.##	ARUN MOTORS (2071), SANALA BYE PASS,NEAR G.P. GINING MILLS,MORBI,GUJARAT PIN-363641 PH :02822-9825100253 / 9825222825.	255.##	R. N. MOTORS (5255), 22-GIOC NEAR PETROL PUMP,RAJPIPLA,DISTRICT - NARMADA,GUJARAT PIN-393145 PH :02640-220549/9925325300.	266.##	ADIT MOTORS (1247), 504/B PHASE-III,G.I.D.C. WADHWAN CITY,SURENDRANAGAR PIN-363035 PH :02752-9825228205.	275.*	GENERAL MOTOR REPAIRING WORKS (2529), NEAR LOK SATTI PRESS,NAGARWADA,VADODARA PIN-390001 PH :0265-9825026106.
NADIAD		SAVARKUNDLA		TALALA		276.##	DREAM MACHINES (2933), 19 MULJINAGAR COLONY,OPP. GHELANI PETROL PUMP,NIZAMPURA,VADODARA PIN-390002 PH :0265-9913420202 / 7575809939.
247.##	SHIVAM MOTORS (4430), OPP RASHAM RESTAURANT,DABHAM CROSSING, N.H 8,NADIAD,GUJARAT PIN-387001 PH :0268-9824343515/258156.	256.##	SHYAM MOTORS (5961), OPP. ESSAR PETROL PUMP,AMRELI ROAD, SAVARKUNDLA,DISTRICT-AMRELI,GUJARAT PIN-364515 PH :02845-9722222923.				
NAKHATRANA		SIDHPUR					

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

277.* CAR CLINIC (4640), PLOT NO. B-7
(PART), ANUR ESTATE, NEAR DABHOI ROAD,
JAKATNAKA, VADODARA (GUJARAT)
PIN-390004
PH :0265-9925003558.

VALIA

278.## HARI OM AUTO CARE (5750), NEAR MAZDA
HOTEL - VALIA, ANKALESHWAR
ROAD-VALIA, DISTRICT-BHARUCH, GUJARAT
PIN-393135
PH :9427336094.

VALSAD

279.* HONEST AUTO GARAGE (2220), SUGHAR
FALIA, BEHIND MOTA
GHANCHIWAD, VALSAD (GUJARAT)
PIN-396001
PH :02632-9925055600 / 9426110767.

VANTHLI

280.* INFINITY MOTORS (5963), RAVI
RATANVADLA FATAK, OPP. HP PETROL
PUMP , POST VADLA, TAL.
VANTHLI, DISTRICT-JUNAGADH, GUJARAT
PIN-362205
PH :9737521899.

VAPI

281.* H.V. MOTORS (5047), NEAR BILL
KHADI, NH-8, BALITHA, API, DISTRICT -
VALSAD PIN-396191
PH :0260-9824145599 / 9824405599.

VIRAMGAM

282.## KRISHNA MOTOR GARAGE (4038), OUTSIDE
BHARWADI GATE, NEAR BHARAT PETROL
PUMP, VIRAMGAM PIN-382150
PH :02715-9426415274 / 9016726604.

VYARA

283.# PARTH MOTORS (5240), D-1, CITY LIGHT
TOWER KAKRAPAR, BYPASS
ROAD-VYARA, DISTRICT-SURAT, GUJARAT
PIN-394650
PH :02626-221284/9898292020.

HARYANA

AMBALA

284.** RAVI MOTORS (1957), 125 STAFF
ROAD, HOTEL SAVOY, AMBALA CANTT
PIN-126102

PH :9315110209/9416640012.
285.** GURU NANAK MOTORS (2036), POLICE
LINES CHOWK, AMBALA CITY PIN-134003
PH :0171-2551645/2517061/9416155906.

286.## HIRA MOTORS (2740), 207 MILE
STONE, VASANT VIHAR GT ROAD, N.H.
-1, AMBALA CITY PIN-134003
PH :9255285212.

287.## BASSAN MOTORS (4964), 99 TH
MALL, AMBALA CATT, HARYANA PIN-133001
PH :9468600000.

BADHARA

288.* S.S MOTORS (5735), NEAR REST
HOUSE, BADHARA, DISTRICT-BHIWANI, HARY
ANA PIN-123308
PH :9255141288/9812451052.

BAHADURGARH

289.## GL AUTOMOBILES (5263), MAIN ROHTAK
ROAD, SANKHOL OPP CH. DEVI LAL
PARK, DISTRICT - BAHADURGARH, HARYANA
PIN-124507
PH :01276-9416303473.

BARARA

290.## LUXMI AUTOZONE (5334), VPO
BARARA, DISTRICT - AMBALA, HARYANA
PIN-133203
PH :09467116785.

BARWALA

291.** FAQIR CHAND QUALITY FUELS (5435), KILLA
NO.20 L.H.S. NH-65, CHANDIGARH ROAD -
BARWALA, DISTRICT - HISAR, HARYANA
PIN-125001
PH :9215027000.

BHIWANI

292.## VEER MOTOR WORKSHOP (1850), 24 NEW
MOTOR
MARKET, BHIWANI, (HARYANA) PIN-127021
PH :9416057857.

BHUNA

293.* MITTAL AUTOMOBILES (5748), NEAR BUS
STAND , JAKHAL ROAD -
BHUNA, DISTRICT-FATEHABAD, HARYANA
PIN-125111
PH :9813210721.

FARIDABAD

294.** INSUHI AUTO ENGINEERS P. LTD. (377), 13/3
MAIN MATHURA ROAD, (ADJOINING FRICK
INDIA), FARIDABAD PIN-121003
PH :0129-2272587, 2272484, 9810135516.

295.## KHURANA AUTOMOBILES (2863), 3C/60 B.P.
(OPPOSITE ESI
HOSPITAL), N.I.T., FARIDABAD PIN-121001
PH :0129-4056020, 4056021.

296.## SARASWATI AUTOMOBILES (4465), 44
B.P. NEELAM BATA ROAD, N.I.T, FARIDABAD
PIN-121001
PH :0129-4029665, 2429665/9811446686.

297.## BALAJI SERVICE STATION (4956), SECTOR
23-24, MAIN ROAD, NEAR BALAJI DHARM
KATA, FARIDABAD, HARYANA PIN-121004
PH :0129-9816700422/4100265.

298.** PERFECT AUTOZONE (P). LTD. (5667),
VILLAGE ANKHIR, OPP. SEC 21D, MAIN
BADHKAL ROAD, DISTRICT -
FARIDABAD, HARYANA PIN-121001
PH :0129-2460020/2460030.

299.## AUTO ENGINEERS (5350), 131, DLF
INDUSTRIA AREA PHASE-1, DISTRICT -
FARIDABAD, HARYANA PIN-121001
PH :0129-9810004318/9312524511/4124511.

FARRUKHNAGAR

300.** M R MOTORS (5946), GURGAON-JHAJJAR
ROAD, OPP. ANAAZ
MANDI, FARRUKHNAGAR, DISTRICT-GURGA
ON, HARYANA PIN-123506
PH :9810831200.

FATEHABAD

301.## DHINGRA AUTOMOBILES (1856), G.T.
ROAD, FATEHABAD, (HARYANA) PIN-125050
PH :9416049167.

302.## INDORA MARUTI SERVICE STATION (3064),
BHATTU ROAD, FATEHABAD, (HARYANA)
PIN-125050
PH :01667-9812325457.

GANAUR

303.## SITA AUTOMOBILES (4260), 347, WARD NO.
10, BST ROAD, GANAUR, DISTT - SONEPAT
PIN-131101
PH :0130-9416062747.

GANGWA

304.** PANCHMUKHI AUTOMOBILES (5968),
HISSAR RAJGARH
ROAD, GANGWA, DISTRICT-HISSAR, HARYAN
A PIN-125001
PH :9728100029/9255562564.

GOHANA

305.## KRISHNA MOTORS (4132), ROHTAK
ROAD, GOHANA PIN-131301
PH :01263-9416013596.

GURGAON

306.## GANGA MOTORS (363),
SHIVPURI, GURGAON PIN-122001
PH :0124-2314940/2322084/98104306028.

307.** SOMESH AUTOMOBILES (455),
SHIVALAYA A-56 ROAD PHASE-I, DLF
OUTAB ENCLAVE, GURGAON PIN-122002
PH :0124-4055275/2352162/9213094462-83.

308.** OUTAB AUTOMOBILES (3668), BEHIND
SUSHANT LOK-1, POLICE POST NEAR
RIDGEWOOD, DLF PHASE-IV, GURGAON
PIN-122002
PH
:0124-2385333/92267334/4046658-59/9811687
333.

309.## TOP GEAR AUTOMOTIVE ENGINEERS
(4464), MAIN JHARSA
ROAD, GURGAON, (HARYANA) PIN-122003
PH :0124-4039011, 9810304011, 9891439407.

310.## A & A ENTERPRISES (4639),
396, PHASE-IV, UDYOG VIHAR, GURGAON
(HARYANA) PIN-122001
PH :0124-2399862, 63,
9312063450/9868599812.

311.## RAJASTHAN AUTO WORKS (4760), LT. ATUL
KARATIA MARG, NEAR PETROL
PUMP, AKASHI FILLING STATION, AMAN
PURA, SECTOR-5 ROAD, GURGAON
(HARYANA) PIN-122001
PH :0124-2300238/9211819420/9810058722.

312.## MANISH AUTOMOBILES (4777), GHATA
ROAD, WAZIRABAD, NEAR
SECTOR-56, GURGAON, HARYANA
PIN-122001
PH
:0124-9873243858/9899561595/9899475288.

313.* KUMAR AUTOMOBILES (4848),
BEHRAAMPUR ROAD, NEAR
NH-8, GURGAON, HARYANA PIN-122001
PH :0124-9873431696/2215696/9873448804.

314.## S G MOTORS (5756), PLOT NO.494, SECTOR
37, PACE CITY II, UDYOG VIHAR VI -
GURGAON, DISTRICT-GURGAON, HARYANA
PIN-122001
PH :0124-9910955113.

315.## SRI PARKASH AUTOMOBILES (5862),
BAJGHERA ROAD, NEAR PARKASH PURI
ASHRAM, NEW PALAM
VIHAR, DISTRICT-GURGAON, HARYANA
PIN-122001
PH :9899157729.

316.** SEVEN HILL SERVICE STATION (6038),
VIJAY VIHAR, MAIN SILOKHRA ROAD,
SEC-30, GURGAON, HARYANA PIN-122002
PH :9810602354.

HANSI

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

317.** VIKAS AUTOMOBILES (4744), SHANTI
NIKETAN,OPP. JIND BYE PASS, G.T.
ROAD,HANSI,DISTRICT-HISSAR (HARYANA)
PIN-125001
PH :01663-9466248037.

HISSAR

318.* PALCO MOTOR GARAGE (4739), 96 AUTO
MARKET,HISSAR,HARYANA PIN-125001
PH :01662-9896303233.

319.** SALASAR AUTO (4735), OPP. VIDYUT
NAGAR GATE NO. 2,DELHI
ROAD,HISSAR,HARYANA PIN-125001
PH :01662-9355486716.

320.* SAI AUTOMOBILES (5267), MAIN DELHI
ROAD,HISSAR,HARYANA PIN-125001
PH :01662-9812900046.

HODAL

321.## VED MOTORS (2247), HIGHWAY
ROAD,NEAR RAILWAY STATION
CHOWK,HODAL,(FARIDABAD) PIN-121106
PH :01275-236238/9255456907.

INDRI

322.## ASHOKA MOTOR (6041), OPP. PARTAP
FILLING STATION,LADWA
ROAD,TEHSIL-INDRI,DISTRICT-KARNAL,HAR
YANA PIN-132041
PH :9896234001.

ISMAILABAD

323.* VINAYAK MOTORS (6052), OPP. MAHARAJA
PALACE,AMBALA HISSAR
ROAD,ISMAILABAD,HARYANA PIN-136129
PH :9416250081/9996045636.

ISRANA

324.## SHIV DARSHAN AUTOMOBILES (6051),
ISRANA PANIPAT ROAD,NR. NC COLLEGE,
ISRANA,DISTRICT-PANIPAT,HARYANA
PIN-132103
PH :9911366230.

JHAJJAR

325.## VASUNDHRA MOTORS (1467), REWARI
ROAD,JHAJJAR,(HARYANA) PIN-124103
PH :9812012180.

JIND

326.## MOHIT MOTORS (1574), SAFIDON
GATE,JIND PIN-126102
PH :9355129844.

KAITHAL

327.## HIND AUTOMOBILES (1858), AMBALA
ROAD,KAITHAL PIN-136027
PH :3496,2416 (RES.).

KANINA

328.## SHREE KRISHNA MOTORS (5953), BHOOP
SINGH MARKET, NEAR PETROL
PUMP,MAHINDERGARH ROAD,
KANINA,DISTRICT-MAHINDERGARH,HARYA
NA PIN-123027
PH :9467641678.

KARNAL

329.** RUBY MOTORS (4734), 28/3 HSIDC,NEAR
NAMASTEY CHOWK INDUSTRIAL
AREA,KARNAL,HARYANA PIN-132001
PH :0184-9896345633.

KHARKHODA

330.* PRANAV MOTORS (5771), SAMPLA ROAD,
KHARKAUDA,DISTRICT-SONEPAT,HARYANA
PIN-131402
PH :09896145161.

KUNDLI

331.## SHIV SHAKTI AUTOMOBILES (4628), JANTI
ROAD,NEAR S.P. COLD
STORAGE,KUNDLI,HARYANA PIN-131028
PH :9811047480.

KURUKSHETRA

332.## KARTAR MOTORS (1645), RED
ROAD,KURUKSHETRA PIN-132118
PH :01744-9896245900.

333.## SAINI MOTORS (2131), G.T. ROAD,UMRI
CHOWK,KURUKSHETRA,(HARYANA)
PIN-136118
PH :01744-9896183931.

334.** KARTAR MOTORS (5349), PLOT O
65-66,SECTOR -2,HUDA INDUSTRIAL,AREA
KURUKSHETRA PIN-132118
PH :01744-221343.

LOHARU

335.## BHAWNA MOTORS (6028), BHIWANI
ROAD,LOHARU,DISTRICT-BHIWANI,HARYAN
A PIN-127201
PH :01251-9466117900/217239.

MAHENDERGARH

336.## SHREE SHYAM MOTORS (5843), NEAR I.O.C
PETROL
PUMP,MAHENDERGARH,DISTRICT-MAHEND
ERGARH,(HARYANA) PIN-123029
PH :01285-222020/9416065855.

MANDI ADAMPUR

337.## MITTAL AUTO AGENCIES (2966), 113-15
AUTO MARKET,MANDI
ADAMPUR,(HARYANA) PIN-125052
PH :01669-43300.

MANESAR

338.## MAITRI SERVICE STATION (2378),
N.H.8,DELHI-JAIPUR ROAD,MANESAR
(GURGAON) PIN-122001
PH :0124-2290349/9212017293/9911104120.

NARNAUL

339.## SHYAM AUTO TRADE (1571), SINGHANA
ROAD,NARNAUL,(HARYANA) PIN-123001
PH :01282-251605/251620/9466432785.

NILOKHERI

340.## SURENDERA MOTORS (5049), NEW NEHSIL
ROAD, NILOKHERI,DISTRICT
KARNAL,NILOKHERI,HARYANA PIN-132117
PH :9996308730.

PALWAL

341.** D.K. & R.K. MOTORS (1159), NEAR BUS
STAND,BYE-PASS
ROAD,PALWAL,(HARYANA) PIN-121102
PH :01275-252647/251816.

342.* SHEELA MOTORS (5141), OPP MUNICIPAL
COUNCIL OFFICE,G T ROAD,DISTRICT -
FARIDABAD,HARYANA PIN-121102
PH :01275-9416066251/401501.

PANCHKULA

343.** PANCHKULA AUTO SERVICES (1949), PLOT
NO.300,PHASE-II INDUSTRIAL
AREA,PANCHKULA,(HARYANA) PIN-134109
PH :9915230196.

PANIPAT

344.** PREM MOTORS (2266), PLOT
NO.134,SECTOR 25 INDUSTRIAL
AREA,PANIPAT PIN-132103
PH :01742-9416438046.

PATAUDI

345.## SHUBHAM AUTOMOBILES (4641), REWARI
ROAD,PATAUDI,DISTT. GURGAON
PIN-122503
PH :0124-2672942, 9812665240.

PEHOWA

346.* AMAR AUTOMOBILES (2270), OPP. DAV
COLLEGE,AMBALA ROAD,PEHOWA DISTT.
KURUKSHETRA,(HARYANA) PIN-136128
PH :9896002974.

RADAUR

347.* SHRI SHIVAM AUTOMOBILES (5852), S.K.
ROAD, OPP. ESSAR PETROL
PUMP,RADAUR,DISTRICT-YAMUNANAGAR,H
ARYANA PIN-135133
PH :135133-9255952717.

RANIA

348.## SINGLA MOTORS (3779), NEAR BUS
STAND,RANIA,DISTT. SIRSA (HARYANA)
PIN-125076
PH :01698-9416011238.

REWARI

349.## GAUTAM MOTORS (1837), NARNAUL
ROAD,REWARI (HARYANA) PIN-123401
PH :01274-22895/222395/325095.

350.* SHIVAM SERVICES (1466), OPP. CENTRAL
SCHOOL,GARHI BOLNI ROAD,REWARI
PIN-123401
PH :01274-254825/9416288341.

351.## PULYANI MOTORS (4663), BEHIND KAMLA
PALACE,CIRCULAR
ROAD,REWARI,HARYANA PIN-123401
PH :01274-9416064738/ 252238/
257938/9955963168.

SADHAURA

352.## SHREE GANESH MOTORS (5959), NEAR
INDIAN OIL PETROL PUMP,KALA AMB
ROAD,SADHAURA,DISTRICT-YAMUNANAGA
R,HARYANA PIN-133204
PH :9813376260.

SHAHABAD

353.** MAHALAXMI MOTORS (354), LADWA
ROAD,SHAHABAD MARKANDA,(HARYANA)
PIN-136135
PH :42433,41933.

SIWANI

354.## GANESH AUTOMOBILES (5931), LOHARU
MORH,SIWANI,DISTRICT-BHIWANI,HARYAN
A PIN-127046
PH :9812022020.

SOHNA

355.** SHRI SHYAM MOTORS (5951),
OPP.RAGHUNANDAN PETROL PUMP,NEAR
GD GOENKA INTERNATIONAL
SCHOOL,SOHNA,HARYANA PIN-122103
PH :9582350079.

SONIPAT

356.## NEW HIGHWAY MOTORS (5055), MAIN
DELHI ROAD,SONEPAT,HARYANA
PIN-131001
PH :09812530120, 2234999.

TAURU

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

357.## R M MOTORS (5842), WADE NO-4 BEHIND
WINE SHOP MAIN REWARI SOHNA
ROAD,TAURU,DISTRICT-MEWAT,HARYANA
PIN-122105
PH :9612378663.

TOHANA

358.## DHANDA MOTORS (2271), PLOT NO.4,RATIA
ROAD,TOHANA,DISTT. FATEHABAD
PIN-125120
PH :20368.

TOSHAM

359.## MOHINI AUTOMOBILES (6026), OPP.NEW
ANAJ MANDI,NEAR MINI
BANK,TOSHAM,DISTRICT-BHIWANI,HARYAN
A PIN-127040
PH :9215959995/9992251000.

UKLANA

360.* SHREE GANESH MOTORS (5747), PLOT
NO#29,UKLANA
MANDI,DISTRICT-HISSAR,HARYANA
PIN-125113
PH :98123091531.

YAMUNANAGAR

361.** GOPAL AUTOMOBILE SERVICE STATION
(1874), NEAR LAL DAWARA,JAGADHRI
ROAD,YAMUNANAGAR PIN-135001
PH :01732-21067.

HIMACHAL PRADESH

ALAMPUR

362.## SUBH AUTOMOBILES (5964),
SH-39,ALAMPUR,DISTRICT-KANGRA,HIMAC
HAL PRADESH PIN-176110
PH :9805751228/9418006656.

AMB

363.## SHUBHAM MOTORS (5933), NEAR PINDI
ASHRAM,HAMIRPUR
ROAD,AMB,DISTRICT-UNA,HIMACHAL
PRADESH PIN-177203
PH :9418114176.

ANNI

364.## SARAJ AUTO WORLD (6044), VERMA
BUILDING,NR. NAGAN
HARIPUR,TEHSIL,ANNI,DISTRICT-KULLU,HI
MACHAL PRADESH PIN-172026
PH :9129065065/9817120002.

BADDI

365.** LAJ MOTORS (5541), 436.MAUJA
SURAJ.MAJRA LABANA,BADDI,DISTRICT -
SOLAN,HIMACHAL PRADESH PIN-174101
PH :9218644189.

BANQANA

366.## TRISHLA AUTOMOBILES (5869), VILLAGE
BPO & TEHSIL
BANGANA,BANGANA,DISTRICT-UNA,HIMAC
HAL PRADESH PIN-174307
PH :9817332462.

BANOI

367.## BAWA SERVICE STATION (4634), VILL.
BANOI,TEH SHAHPUR P.O.,BANOI,DIST
KANGRA (HIMACHAL PRADESH) PIN-176206
PH :9418051290, 9418105642.

BARMANA

368.## AVER AUTO (5955), VILLAGE LAGAT,TEHSIL
SADAR,PO BARMANA,HIMACHAL PRADESH
PIN-174013
PH :9418064130.

BHAMBLA

369.* DHIMAN MOTORS (3837), PLOT NO.
42,INDUSTRIAL AREA,
BHAMBLA,JAHU,DISTT MANDI PIN-175004
PH :01972-263676,256436.

BHUNTAR

370.## HANDA MOTORS (4262), HANDA
COMPLEX,NEAR AIRPORT,BHUNTAR,KULLU
(H.P) PIN-175125
PH :01902-265729, 265124.

BILASPUR (H.P)

371.## BHASKAR AUTO SPARE & SERVICE (1730),
8-B ROURA SECTOR II,(NEAR DURGA
MANDIR),BILASPUR (H.P.) PIN-174001
PH :23335.

CHAMBA

372.## KAILASH SERVICE STATION (3527), AMRIT
NIWAS MOHALLA,BONGUTA,CHAMBA
TOWN,DISTT.CHAMBA PIN-176209
PH :01899-24485.

373.* AUTOZONE (5247), PATHANKOT RAOD,
PARELSULTANPUR - CHAMBA,DISTRICT -
CHAMBA,HIMACHAL PRADESH PIN-176314
PH :9418214848.

DARLAQHAT

374.## CHANDEL SERVICE STATION (5233),
DARLAQHAT,DISTRICT-SOLAN,HIMACHAL
PRADESH PIN-171102
PH :9816039865.

DEHRA

375.* WALIA ENTERPRISES (4252), HANUMAN
CHOWK,NEAR DEHRA
BRIDGE,DEHRA,DISTT. KANGRA PIN-177101
PH :01970-233184, 233751.

DHARAMSALA

376.## EAGLE MOTOR SERVICE STN. (6426), SHAM
NAGAR,DHARAMSALA (HIMACHAL PRD.)
PIN-176215
PH :22032.

377.## SHIV SHAKTI CAR CARE (1277), NEAR
RAINBOW SCHOOL,DARI
ROAD,DHARAMSHALA PIN-176057
PH :24056.

378.## HIM AUTO STATION (3773), VPO
DARI,DHARAMSHALA,(H.P.) PIN-176061
PH :01892-23055.

GAQQAL

379.* CHAUDHARY SERVICE STATION (1966),
GAGGAL (ICHHI),DISTT. KANGRA (H.P.)
PIN-176209
PH :1892-265184.

GHUMARWIN

380.## BHASKAR AUTO SPARES & SERVICES
(5147), VILLAGE
KULARU,GHUMARWIN,DISTRICT -
BILASPUR,HIMACHAL PRADESH PIN-174101
PH :9817011700.

GUMMA

381.## CHAUHAN ENTERPRISES (5660), VILLAGE
GUMMA,TEHSIL KOTKHAJ,GUMMA,DISTRICT
- SHIMLA,HIMACHAL PRADESH PIN-17202
PH :9816125191.

JAWALA JI

382.## SRI PARBHAT MOTORS (5036), VPO &
TEHSIL, JAWALI-(BHANEI),DISTRICT -
KANGRA,(HIMACHAL PRADESH) PIN-176029
PH :09816302881,09418004143.

JAWALAMUKHI

383.## LAKSHMI AUTO SPARES & SERVICE
CENTRE (4630), NEAR GANJU BAGH, DEHRA
ROAD,JWALAMUKHI,TEH. DEHRA,DIST.
KANGRA (HIMACHAL PRADESH) PIN-171001
PH :01970-223018, 9418091048.

KARSOQ

384.## DEEPAK AUTOMOBILES (4057), MR.
DEEPAK SHARMA,C/O SHARMA GENERAL
STORE,KARSOQ, MAIN BAZAR,DIST MANDI,
HIMACHAL PRADESH PIN-171304
PH :01907-222242, 9816260061.

KAZA

385.## SPITI MOTORS (6033), VILL. & PO
KAZA,DISTRICT-LAHAUL & SPITI,HIMACHAL
PRADESH PIN-172114
PH :9416758974.

KEYLONG

386.## YOLAX MOTORS (3830), KEYLONG,DISTT.
LAHAUL & SPITI PIN-175132
PH :01900-22448, 22517.

KULU

387.## SURYA MOTORS & SERVICE CENTRE
(2943), NH-21,MANALI ROAD,BABELI,DISTT.
KULLU (H.P.) PIN-175138
PH :01902-30456.

388.## PURI BROTHER'S (4242), I.O.C
DEALER,DHALPUR,KULU,H.P PIN-175101
PH :01902-222415/16.

KUMARHATTI

389.* SOLAN AUTOMOBILES PVT. LTD. (6420),
DAGHOTA (SOLAN),P.O.KUMAR HATTI (H.P.)
PIN-173229
PH :66173.

KUMARSAIN

390.## RED LINE (5965), VILL. KEPU,PO KIRTI
SAINZ,TEHSIL,KUMARSAIN,DISTRICT-SHIML
A,HIMACHAL PRADESH PIN-172030
PH :9805996506.

MANDI

391.** BHAGWATI AUTOMOBILES (269), 13
INDUSTRIAL AREA,PHASE-III,SAULI
KHAD,MANDI PIN-175 001
PH :35289,35189.

MARANDA

392.## MODERN SERVICE CENTRE (1175), PUSH
COMPLEX,MARANDA,(H.P.) PIN-176102
PH :630983.

MEHATPUR

393.## BUDHA AUTO HOUSE (6422), MAIN
BAZAR,UNA,MEHATPUR (H.P) PIN-174315
PH :64061,61766.

MUBARAKPUR

394.## SHIV SHAKTI AUTOMOBILES (1732),
HOSHARPUR ROAD,MUBARKPUR,DISTT.
UNA,(H.P.) PIN-177202
PH :1976-64661.

NADAUN

395.** CAR CARE ENGINEERS (4423),
HOSHARPUR
ROAD,MANPUL,NADAUN,DISTT HAMIRPUR
(H.P) PIN-177033
PH :01972-232765, 9418096457.

NAHAN

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

396.## AGARWAL MOTORS (3334), GUNNU GHAT,NEAR TELECOM COLONY,NAHAN PIN-173001
PH :01702-25679(O),23558(R).

NALAGARH

397.## KRISHNA MOTOR (5275), PEERTHAN,PO NALAGARH,DISTRICT - SOLAN,HIMACHAL PRADESH PIN-174101
PH :01795-223561.

PALAMPUR

398.** SANGRAI AUTO SERVICE (6430), OPP. SITLA MATA MANDIR,PALAMPUR,DISTT. KANGRA (H.P.) PIN-176061
PH :01894-32685.

399.## SANTOSHI AUTOMOBILES (4776), VILLAGE & P.O, BHAWARNA,TEHSIL,PALAMPUR,DISTRICT- KANGRA (HIMACHAL PRADESH) PIN-176061
PH :01894-9418184367.

PAONTA SAHIB

400.## SUMEET MOTORS (1441), SHAMSHERPUR,PAONTA SAHIB,(H.P.) PIN-173025
PH :-22264.

PAPROLA

401.## ABROL AUTOMOBILES (3470), RAJ KUMAR ABROL,V&PO BIR,TEH. BAUNATH,DISTT. KANGRA (H.P.) PIN-176077
PH :01894-68517.

PARWANOO

402.## DIVYA SALES (6428), DIVYA BHAWAN VILL. KAMLI,SECTOR-1,PARWANOO PIN-173220
PH :-32685.

PATLI KUHAL

403.* JAMDAGNI MOTORS (760), VILLAGE PATLI KAUHAL,P.O.KATRAIN,DISTT. KULLU (H.P.) PIN-175129
PH :-9816040247,01902-40847.

RAJGARH

404.## RAJGARD AUTOMOBILES (5458), PO RAJGARH,TEH RAJGARH,DISTRICT - SIRMOUR,HIMACHAL PRADESH PIN-173101
PH :01799-221055.

RAMPUR BUSHAHR

405.** HIGHWAY SERVICE STATION (2649), CHUHA BAG,RAMPUR BUSHAHR,DISTT. SHIMLA,(H.P.) PIN-172001
PH :01782-34043.

406.## KRISHNA AUTOMOBILE (4438), VILL. CHUHA BAG,RAMPUR BUSHAHR PIN-172001
PH :0177-233046, 233091.

RECONG PEO

407.## KRISH AUTO (4134), V.P.O. DUNI,RECONG PEO,TEHSIL KALPA,DISTT KINNOUR (HP) PIN-172107
PH :01786-226053, 226017.

ROHRU

408.## KAMTA SERVICE STATION (2338), ROHRU,DISTT. SHIMLA,(H.P.) PIN-171207
PH :01781-34430.

SALASHI

409.## THAKUR AUTOMOBILES (3838), JALANDHAR MANALI NATIONAL HIGHWAY (NH70),NEAR DAY SCHOOL,VILLAGE SALASHI,DISTT HAMIRPUR PIN-172108
PH :01972-223412,9818090904.

SARKAGHAT

410.## SHAKUNTLA MOTORS (5755), MANDI ROAD-SARKAGHAT,DISTRICT-MANDI,HIMAC HAL PRADESH PIN-175024
PH :-9817818822.

SHIMLA

411.** GURRAJ AUTO SERVICE (757), BAMLOE CHOWK,SIMLA PIN-171001
PH :-6558.
412.** MOTO WORLD (6433), NAVBAHAR,SIMLA PIN-171002
PH :-72917.

SOLAN

413.## SOLAN SERVICE CENTRE (764), BYE PASS,NEAR PWD OFFICE,SOLAN PIN-173212
PH :-3149.

SUBATHU

414.## SHYAM AUTOMOBILES (4558), NEAR SHANTI FILLING STATION,V.P.O RADYANA,SUBATHU,DIST SOLAN (HIMACHAL PRADESH) PIN-173206
PH :0179-2275606.

SUNDERNAGAR

415.** V.M. SERVICE STATION (3777), CHAMUKHA,P.O HARABAGH,NH-21,SUNDER NAGAR (H.P.) PIN-174402
PH :01907-262130.

THEOG

416.## JOSHI MOTORS (2778), SHALLI BAZAR,THEOG,DIST. SHIMLA,(H.P.) PIN-171201
PH :1783-9816140451, 8679440451.

UNA (HP)

417.## TRINITY AUTO FAST ENGINEERS (1755), RAKKAR COLONY,NANGAL ROAD,UNA (H.P.) PIN-174303
PH :01975-26520.

418.## RUDRA MOTORS (3925), NEAR OLD HOSPITAL CHOWK,NH-22,UNA (H.P.) PIN-174303
PH :01935-25137(SHOP), 25011 (RES.).

JAMMU & KASHMIR

AWANTIPORA

419.## KESAR AUTOMOBILES (5938), KHAR, MORH, NATIONAL HIGHWAY 1A,AWANTIPORA,DISTRICT-PULWAMA,JAM MU & KASHMIR PIN-192122
PH :-9419507495.

BARAMULA

420.* MARUTI MASTERS (4369), KANISPORABARAMULA,KASHMIR PIN-193101
PH :-990659944.

CHADOORA

421.* VEHICLE MASTERS (4661), MAIN ROAD,CHADOORA,DIST. BUDGAM,JAMMU & KASHMIR PIN-190001
PH :-9419475708.

JAMMU

422.** KWIK FIT (2343), AMBPHALLA,B.C. ROAD,JAMMU PIN-180001
PH :9419182675.

423.** MOBEL GARAGES (441), NARWAL CHOWK,TRANSPORT NAGAR,JAMMU PIN-180007
PH :9796800000.

424.** CHECK N CARE AUTOMOBILE CENTRE (1773), OPP. GURUDWARA SRI SINGH SABHA,NARWAL BYE PASS ROAD,JAMMU PIN-180006

425.* CARE POINT AUTOMOBILES (4652), OPP. BSF CAMPUS ROAD,AKHNOOR ROAD,JAMMU PIN-180002
PH :0191-9419283151.

426.## NATIONAL MOTORS (5074), OPP APNA VIHAR,B.P. PETROL PUMP,NH-1A KUNJWANI JAMMU,DISTRICT - JAMMU,JAMMU & KASHMIR PIN-180010
PH :-9419194368.

KARGIL

427.* ZOZILA ENGG. WORKS (374), KARGIL,LADAKH PIN-194103
PH :-9419176212.

KATHUA

428.* KATHUA MOTORS (3323), HATLI MORE,KATHUA,(J&K) PIN-184102
PH :-9419150136.

KATRA

429.## VIDYA AUTOMOBILES (1165), JAMMUR ROAD,KATRA JAMMU ROAD,KATRA,(J&K) PIN-182301
PH :01991-9419162339.

KISHTWAR

430.## MINTOO MOTORS (4133), NEAR H.H.P.C SCHOOL,KISHTWAR,DISTT DODA (J & K) PIN-180001
PH :01995-9419154100.

MATTAN

431.## DANISH AUTOMOBILES (5478), PAHAL GAM ROAD,STATE HIGHWAY - MATTAN,DISTRICT - ANANTNAG,JAMMU & KASHMIR PIN-192101
PH :01932-9419045672.

PHINTER

432.## BADYAL AUTOMOBILES (4149), C/O BADYAL AUTOMOBILE,PHINTER,TEH BILLAWAR,DISTT KATHUA PHINTER (J & K) PIN-184203
PH :01921-9419691916.

PULWAMA

433.** KASHMIR AUTOMOBILES (5352), SRINAGAR, SHOPIAN ROAD FRUIT MANDI,PULWAMA,DISTRICT - PULWAMA,JAMMU & KASHMIR PIN-192301
PH :01933-9906799324.

RAJOURI

434.## MILLENNIUM MOTORADES (2937), ALPHA GATE.T.C.P.,RAJOURI,(J&K) PIN-185132
PH :01962-9419329486.

REASI

435.## U LIKE CAR CLINIC (4771), GITA NAGAR,REASI JYOTIPURAM ROAD,REASI,DISTRICT-UDHAMPUR (JAMMU & KASHMIR) PIN-182101
PH :01991-9906015150.

SAMBHA

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

436.## DHANSAR CAR CLINIC (5146), NATIONAL HIGHWAY,SUPWAL SAMBHA,DISTRICT - JAMMU,J&K PIN-184121
PH :9419934151.

SOPORE

437.## HASSAN MOTORS (2434), BPC DEALER,SOPORE,KASHMIR PIN-193201
PH :9419597727.

SRINAGAR

438.* SRINAGAR AUTOMOBILES (4925), M.A. LINK ROAD,NEAR TRANSPORT YARD BRIDGE,CHINARBAGH,SRINAGAR (JAMMU & KASHMIR) PIN-190001
PH :0194-9419001793.

439.## NEW NATIONAL AUTOMOBILES (5073), RAM BAGH, AIRPORT ROAD, SRINAGAR,DISTRICT - SRINAGAR,JAMMU & KASHMIR PIN-190009
PH :0194-9419909528.

440.* A.B. MOTORS (5072), BEHIND NEW SECRETARIAT ROAD,SRINAGAR,DISTRICT - SRINAGAR,JAMMU & KASHMIR PIN-190009
PH :0194-9419007966.

441.* HASEEN MOTORS (5249), BY-PASS BRIDGE, BAGH MEHTAB,SRINAGAR,JAMMU & KASHMIR PIN-190019
PH :0194-9419518416.

442.** ADAM'S AUTOAIDES (5766), SIDCO INDUSTRIAL EXTATE, SHALTENG,SRINAGAR,DISTRICT-SRINAGAR ,JAMMU & KASHMIR PIN-190001
PH :0194-99065800893.

SURNKOTE

443.## A.S. AUTOMOBILES (5976), IQBAL NAGAR, SURANKOTE,DISTRICT-POONCH,JAMMU & KASHMIR PIN-185121
PH :9469014765.

THANA MANDI

444.## DANISH AUTOMOBILES (6047), R/O W NO.3, HUSPLATE,THANAMANDI,DISTRICT-RAJOU RI,JAMMU & KASHMIR PIN-185212
PH :9858938248.

VIJAYPUR

445.## BANSI LAL MARUTI SERVICE STATION (4748), SWANKHA MORH,NATIONAL HIGHWAY,VJAYPUR,DISTRICT-SAMBA (JAMMU & KASHMIR) PIN-180001
PH :01923-9419106798.

JHARKHAND

BOKARO

446.## UUEA AUTOMOBILES (4845), S-21 CITY CENTRE,BOKARO STEEL CITY,BOKARO,JHARKHAND PIN-827004
PH :06542-9431127441.

DEOGHAR

447.* GARGEES AUTOMOBILE (2276), OPP. D.C. RESIDENCE,CIRCULAR ROAD,BARMASIA,DEOGHAR(BIHAR) PIN-814112
PH :06432-9431132526.

DHANBAD

448.## MAJUMDAR CAR SCAN (5135), BHUFORCE, K G ASHRAM ROAD,SARAIDELA,DISTRICT - DHANBAD,JHARKHAND PIN-828301
PH :0326-9835361472.

449.## PRIYA AUTO (4868), OPPOSITE MINNING SCHOOL,SINDRI ROAD, BHAGA,DHANBAD,JHARKHAND PIN-828301
PH :0326-9431124817.

DUMKA

450.* NATIONAL ENGG. WORKS (5220), AUTOMOBILE ENGINEERS,DUMKA (BIHAR),DUMKA (BIHAR) PIN-814101
PH :06434-222325.

QARHWA

451.## VIKAS AUTOMOBILE SERVICES (2647), RAILWAY STATION ROAD,GARHWA,ZARKHAND PIN-822114
PH :06561-9204527287.

HAZARIBAGH

452.## ALOK MOTORS (379), NEAR INDRAPURI CHAWK,HAZARIBAG,(BIHAR) PIN-825301
PH :06546-9431140740.

453.## SRI RAM MARUTI SERVICE STATION (3663), DEVI DAYAL LANE,HAZARIBAG,(JHARKHAND) PIN-825301
PH :06546-9431384877.

JAMSHEDPUR

454.** CAR CURE (1261), C/O MODERN AUTO STORES,KALIMATI ROAD,SAKCHI,JAMSHEDPUR PIN-831001
PH :0657-6452965.

455.## MAHESHWARI BROS. (5124), NATIONAL HIGHWAY 33,BALIGUMA MANGO,P.O. -M.G.M. MEDICAL COLLEGE,JAMSHEDPUR PIN-831018
PH :0657-9031144444.

KHUNTI

456.## MOD MOBILES (5579), MAIN ROAD, RANCHI ROAD - KHUNTI,DISTRICT - KHUNTI,JHARKHAND PIN-835210
PH :9006055883.

MAITHON

457.# MAITHON SERVICING CENTRE (5838), MAITHON ROAD, NEAR VMC COLONY,SANJAY CHOWK ,PO CHIRKUNDA-MAITHON,DISTRICT-DHANBAD, (JHARKHAND) PIN-828207
PH :7209423707.

PAKUR

458.## SPEED WHEEL SERVICE CENTRE (4976), MAIN ROAD,PAKUR PIN-816107
PH :9434101917.

RAMGARH

459.## RAHIL MOTORS (5054), C/O NIYAMAT MISTRI,DUSHAD MOHLA,DISTRICT RAMGARH CANTT PIN-829122
PH :9835324514.

460.## SAINI MOTORS (5126), NEAR VISWAKARMA MANDIR,MAIN ROAD,RAMGARH CANTT,DISTT. HAZARIBAG PIN-829122
PH :06553-223699.

RANCHI

461.## BHARAT MOTORS (5970), SHIV JEE CHOWK, HARU ROAD,RANCHI,DISTRICT-RANCHI,JHARKHA ND PIN-834001
PH :9608502258.

462.** MARUTI AUTOMOBILES (5127), HOTEL AKASHWANI MANSION,RATU ROAD,RANCHI PIN-834001
PH :0651-9835156186.

463.## MARUTI CLINIC (2548), LAL KOTHI,OLD HAZARIBAGH ROAD,KANTA TOLI,RANCHI (BIHAR) PIN-834001
PH :0651-9431109214.

464.## MOTOR KRAFT (4769), H.B. ROAD,DIPA TOLI,RANCHI,JHARKHAND PIN-834009
PH :0651-3254965/3203666.

SIDRAUL

465.## KIRTIVASA AUTOMOBILES PVT. LTD. (4424), RANCHI TATA HIGHWAY,SIDRAUL,P.S NAMKOM PIN-834001
PH :0651-9334657490.

KARNATAKA

ATHANI

466.## CHOUGULE MOTORS (3874), HALYAL ROAD,ATHANI,DISTT BELGAUM PIN-591304
PH :08289-52992.

BAGALKOT

467.## NARA AUTOMOBILES (4357), TP NO. 158 A/2,WARD NO. 10,SHABADI COMPOUND EXTN,BAGALKOT PIN-587101
PH :08354-424092/ 423178/
9448124093/9880875595.

BAGEPALLI

468.# N.N. GARAGE (4263), T.B. CROSS,NH-7, BAGEPALLI,NEAR RTO OFFICE,KOLAR DISTRICT, KARNATAKA PIN-561207
PH :9845125260.

BAILHONGAL

469.# MAHANTH MOTORS (5763), RTO ROAD BAILHONGAL ,TALUK,DISTRICT-BELGAUM,KARNATAKA PIN-591102
PH :9900255566.

BALEHONNUR

470.## SRI ANNAPOORNA MOTORS (5253), MALLE GOWDA COMPLEX,JAYAPURA,ROAD BALEHONNUR ROAD,DISTRICT - CHIKAMAGALUR,KARNATAKA PIN-577112
PH :577112-9449620366.

BANGALORE

471.** ANEKAR MOTORS (227), 230 MAGADI ROAD,BANGALORE,(KARNATAKA) PIN-560023
PH :080-3353766,3354339 FAX:3402104.

472.** MARS ENTERPRISES PVT. LTD. (238), NO.41 SANJAY NAGAR MAIN ROAD,ASWATH NAGAR,BANGALORE PIN-560094
PH :080-3418158/9408023513/9448358884.

473.* MAYUR ENTERPRISES (249), NEXT TO PIA BHAVAN KIADB MAIN ROAD,PEENYA 1ST STAGE,BANGALORE PIN-560058
PH :080-8395263.

474.* GIRIMAJI ENTERPRISES (258), NO.2 27TH CROSS,K R ROAD,B S K II STAGE,BANGALORE PIN-560070
PH :080-6549042,6540502.

475.* SATHNUR SERVICE STATION (1153), 2ND MAIN KHB COLONY,GANDHI NAGAR,YELAHANKA,BANGALORE PIN-560064
PH :080-8562995/9845038372.

476.** PACE AUTOMOBILES (1057), 6TH MAIN HMT LAYOUT,R.T. NAGAR,BANGALORE PIN-560032
PH :080-23432173/23332338.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

477.* SPEED MOTORS (1750), 17/1 SUBRAMANYAPURA MAIN ROAD,KADIRENAHALLI,PADMANABHA NAGAR,BANGALORE PIN-560070 PH :080-6698716/6698408.

478.* KESHKAMAL MOTORS (2075), NO.943 21ST MAIN,BANASHANKARI 2ND STAGE,(NEAR KIMS MEDICAL COLLEGE),BANGALORE PIN-560070 PH :080-6710423/9448071067.

479.** GREEN CARS PVT. LTD. (2154), NO.12/6 80 FEET ROAD,6TH BLOCK KORAMANGALA,BANGALORE PIN-560095 PH :080-5535178,5539635.

480.## SOLOTECH MOTORS (2760), SY NO.82/2, D'SOUZA NAGAR,HOSAKEREHALLI-BANGALURU,DIST RICT-BANGALURU,KARNATAKA PIN-566085 PH :080-9845072603,6692613.

481.* ASHWA CARS PVT. LTD. (2827), NO.196 5TH MAIN ROAD,CHAMARAJAPET,BANGALORE PIN-560018 PH :080-6679019/9341228231.

482.## RAJ MOTORS (2829), NO.10 MAGADI MAIN ROAD,OPP. UNANI MEDICINE INSTITUTE,KOTIGEPALYA,BANGALORE PIN-560091 PH :080-9845293413/3286153.

483.** NEXUS (2768), PLOT NO. 275/301,80 FEET ROAD,R.M.V. 2ND STAGE 2ND BLOCK,BANGALORE PIN-560094 PH :080-9844013436/3412200/34123300.

484.** U.M. CARS PVT. LTD. (2847), KARNATAKA GOLF ASSOCIATION ROAD,KODIHALLI,OFF. AIR PORT ROAD,BANGALORE PIN-560008 PH :080-5211212/5217979.

485.## BENAKA MOTORS (3237), NO.158/2 VIBHUTIPURA,VIGNAN NAGAR BEHIND B.E.M.L.,NEAR RENUKA SWIMMING POOL,BANGALORE PIN-560017 PH :080-98452 12416/5236201.

486.** VISWAS CAR SERVICES PVT. LTD. (3238), NO.121/1 C. SHANKER REDDY LAYOUT,(ADJACENT TO VINAYAK TEMPLE),KALYAN NAGAR RING ROAD,CHELEKERE BANSWADI POST BANGALORE PIN-560043 PH :080-25445649.

487.** LE MANS MOTORS (3460), NEAR AYYAPPA TEMPLE,S.M. ROAD,T. DASARAHALLY,BANGALORE PIN-560057 PH :080-8371183/8376058.

488.** SMART CARS (3571), 3RD CROSS NEAR J.B. TILES,KAGGADASA PURA MAIN ROAD,C.V. RAMAN NAGAR,BANGALORE PIN-560093 PH :080-5246481/9336624362.

489.## ADARSHA AUTOMOBILES (4553), # 974 VARATHUR MAIN ROAD,NEAR PURVANKARA APARTMENTS,AFTER MARATHAHALLI,RAILWAY BRIDGE, BANGALORE PIN-560037 PH :080-28524550, 9880195465.

490.## VAHAN UDYOG (4628), # 45/28 GUBBANNA INDUSTRIAL ESTATE,DR. RAJ KUMAR ROAD,6TH BLOCK, RAJAJI NAGAR,BANGALORE PIN-560010 PH :080-23351143.

491.## PUSHPAK MOTORS (4642), 105/1 2ND MAIN NANJAPPA LAYOUT,VIDYARANYAPURA MAIN ROAD,(OPP KRUTHIKA HOSPITAL),BANGLAORE PIN-560097 PH :080-560097.

492.** TRINITY MOTORS (4638), NO. 36,4TH STAGE, W.C. ROAD,BASAVESHWARANAGAR,BANGALOR E PIN-560079 PH :080-9845539474.

493.## CHANDANA MOTORS (4872), NO. 9 UNIVERSITY ROAD,GNANABHARTHI (POST),MARIYAAPPANA PALYA,BANGALORE (KARNATAKA) PIN-560056 PH :080-9880659864.

494.## SOLOTECH SERVICE CENTRE (5245), 50 FEET MAIN ROAD AVALAHALLI,MUNESHWARA BLOCK,DISTRICT - BANGALORE,KARNATAKA PIN-560085 PH :080-32419203/9448046289.

495.## TEAM TECH AUTOMOBILES (5662), PLOT NO.27/2, DODDAKANAHALLI,SARJAPUR MAIN ROAD-BANGALORE,DISTRICT - BANGALORE,KARNATAKA PIN-560034 PH :080-9986176513.

496.** TRINITY CAR CARE PVT. LTD (5851), SURVEY NO 52/1, SRI GANDHADAKAVAL VILLAGE,NAGARBHAVI, BANGALORE,DISTRICT-BANGALORE,KARNA TAKA PIN-560091 PH :080-23306401.

BELGAUM

497.* BHARAT AUTO SCAN (350), 892/1 PB ROAD,BELGAUM,BELGAUM PIN-590016 PH :433895.

BIJAPUR

498.## BAGALI MOTORS (5159), SHIKARKHANA ROAD,DISTRICT - BIJAPUR,KARNATAKA PIN-586104 PH :08352-9448100444/24323.

CHIKBALLAPUR

499.## SUKOVE ENTERPRISES (3426), B.B. ROAD N.H.7,CHIKBALLAPUR,(KARNATAKA),(KARN ATAKA)PIN-562101 PH :08155-85218/9448435735.

CHIKMAGALUR

500.## FORMULA MOTORS (338), K.M. ROAD,CHIKMAGALUR PIN-577101 PH :08262-30370,20369.

501.## AAMANTHRANA MOTORS (4346), K.M. ROAD,CHIKMAGALUR PIN-505215 PH :08262-230704.

CHIKODI

502.# OM MOTORS (4445), 1751, ANKALI ROAD,NEAR B K COLLEGE,CHIKODI,KARNATAKA PIN-591201 PH :9448484503.

CHINTAMANI

503.# TIPPU AUTO GARAGE (5770), MG ROAD,NEAR BAGEPALLI CROSS,CHINTAMANI,DISTRICT-KALOR,KAR NATAKA PIN-563125 PH :9731178590.

CHITRADURGA

504.## PRINCIPAL (255), J.M.I.T.N.H.4,P.B. NO.73,CHITRADURGA PIN-577502 PH :9844088858.

505.## SAI AUTOMOBILES (2473), OPP. R.T.O. NH-4,,IIND CROSS,JCR EXTN.,CHITRADURGA PIN-577501 PH :08194-9448154945.

COORG

506.* AUTO SERVICE & AGENCIES (2520), GEN.THIMMAIAH ROAD,MADIKERI,KODAGU. (KARNATAKA) PIN-571201 PH :6358/6516(R).

DAVANGERE

507.## SREE MALLIKARJUNA MOTOR (229), 269 JAYADEVA CIRCLE ROAD,DAVANGERE (KARNATAKA) PIN-577002 PH :3779/5115(R).

508.## HEGDE AUTO CENTRE (172), P.B. ROAD,DAVANGERE PIN-577006 PH :28864/52208.

DEVANAHALLI

509.# SAHARA AUTOMOBILES (4731), OPP. A . RTO OFFICE,NH-7, B.B. ROAD,DEVANAHALLI,KARNATAKA PIN-562110 PH :9448662364.

DHARWAD

510.** MYSORE GARAGE (2468), BELGAUM ROAD,DHARWAD,(KARNATAKA) PIN-580001 PH :080-447377/9844133273.

DODDABALLAPUR

511.# PRESTIGE MOTORS (4875), SITE NO. 51/48/2717,OPPOSITE BPCL PETROL PUMP,5TH WARD, SHENIGARPET,DODDABALLAPUR (KARNATAKA) PIN-561203 PH :9900274594.

GADAG

512.## MODERN MOTORS (2337), HUBLI ROAD,GADAG,(KARNATAKA) PIN-582103 PH :08372-273344/9448874203.

GULBARGA

513.## DELUX AUTO SERVICE (5840), SURVEY NO 77/8,VILLAGE KUSNOOR,NEAR -.UNIVERSITY, SEDAM ROAD, GULBARGA,DISTRICT-GULBARGA,(KARNAT AKA) PIN-585104 PH :9242991292.

HOSPET

514.## SUPREME AUTO SERVICE (2569), NEAR RTO OFFICE,HARIHAR ROAD,HOSPET,(KARNATAKA) PIN-583203 PH :08394-30513.

HUBLI

515.## SHRI BASAVA MOTORS (4968), OPP DR. TEGGINMANI CLINIC,2ND CROSS HOSUR,HUBLI,KARNATAKA PIN-580021 PH :0836-9980025644/ 4260694.

KADUR

516.# SRI SAI MARUTHI SERVICE STATION (5725), OPP.KSRTC BUS STAND,UB ROAD,KADUR,DISTRICT-CHIKMAGALUR,KARNATAKA PIN-577548 PH :9632221320.

KARKALA

517.## KARKALA MOTORS (3549), TELLAR ROAD,KARKALA,(KARNATAKA) PIN-574104 PH :08258-20364.

KOLAR

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

518.## SHIVA SERVICE POINT (2472), M.B.
ROAD,KOLAR,(KARNATAKA) PIN-563101
PH :08152-23890.

KOLLEGAL

519.## FIXPLUS WHEEL ALIGNMENT & AUTO CARE
CENTRE (4249), C-8, IND.
ESTATE,MAHADESHWARA COLLEGE
ROAD,KOLLEGAL PIN-571440
PH :-09886252833/ 9448595590.

KOPPA

520.## AUTO TECH (3448), MAIN
ROAD,UPPERPET,KOPPA,(CHIKMAGALUR
DIST.) PIN-577126
PH :08265-21838.

KRISHNA RAJA NAQAR

521.## MOHIT MOTORS (5752), 21/2,CHIRNAHALLI
ROAD,VINAYAKA EXTENSION,KRISHNA
RAJA
NAGAR,DISTRICT-MYSORE,KARNATAKA
PIN-571602
PH :-9880320051.

KUMTA

522.## SOLOTECH (4547), NEAR HAVYAK SABHA
MANTAP,MUROOR
ROAD,KUMTA,KARNATAKA PIN-581343
PH :-9448149607.

KUNDAPUR

523.* PRAKASH AUTO SERVICE (4522), NEAR:
K.E.B.,VODERHOBLI,KUNDAPURA
PIN-576201
PH :08254-231327.

MANIPAL

524.## MANIPAL MARUTI AUTO WORKS (4578),
MANIPAL ALEVOOR ROAD,NEAR R.C.
CHURCH,OPP. SIGMA BAZAR,MANIPAL
(UDUPI DIST) PIN-576104
PH :-9448108318.

MUDHOL

525.## OM MOTORS (5857), OPP TALUKA
OFFICE,LOKAPUR ROAD,
MUDHOL,DISTRICT-BAGALKOT,KARNATAKA
PIN-587313
PH :-9448776744.

MUDIGERE

526.## BADRIYA CAR SERVICE POINT (5364), K.M.
ROAD,MUDIGERE,DISTRICT-
CHIKAMANGALORE,(KARNATAKA)
PIN-577132
PH :08263-9448007094.

MYSORE

527.** CAR CLINIC (346), NO.8 GOKULAM 4TH
STAGE,INDUSTRIAL LAYOUT NEAR GOKUL
THEATRE,KRS ROAD,MYSORE PIN-570020
PH :0821-516055/517644.

NELAMANGALA

528.## GOUTHAM MOTORS (4332), PATEL
CHANNAPPA
EXTN,NELAMANGALA,KARNATAKA
PIN-562123
PH :080-7722077, 9880251546, 9448668946.

RABAKAVI BANAHATTI

529.## SANGAMA MOTORS (5726), BESIDE
CMC,RAMPUR MAIN
ROAD,RABAKAVI,DISTRICT-BAGALKOT,KAR
NATAKA PIN-587314
PH :-9480534916.

RAICHUR

530.## HEERA MOTORS (3730), OPP. MOTI
MASJID,SHIVJI OIL MILL COMPOUND,TIPU
SULTAN ROAD,RAICHUR (KARNATAKA)
PIN-584101
PH :-0853230651(R), 9845156322,50598.

RAMNAGARAM

531.## MENEZES MOTORS (4969),
NO:315/298A,NEAR
KANAKAPURACIRCLE,B.M. ROAD
ARCHAKARAHALL
BANGALORE,DISTRICT-BANGALORE
RURAL,KARNATAKA PIN-571511
PH :-9986301054.

RANEBENNUR

532.# KIZEN MOTORS (4568), P.B. ROAD,OPP.
A.P.M.C MARKET,RANEBENNUR PIN-581115
PH :08373-266364, 9844401484.

SAGAR (KARNATAKA)

533.## MALLIKA AUTO CENTRE (2133), MALLIK
COMPLEX,B.H. ROAD,SAGAR PIN-577401
PH :08183-29405.

534.## ADITYA AUTOMOBILES (2077), JOG
ROAD,SAGAR,(KARNATAKA) PIN-577401
PH :08183-28236,28636.

SHIMOGA

535.* SHIMOGA AUTO ENGG WORKS (246),
GARDEN AREA,SHIMOGA,KARNATAKA
PIN-577201
PH :-9819321132.

536.## NEPTUNE AUTO WORKS (5271), PLOT -5
AUTO COMPLEX,SAGAR ROAD -
SHIMOGA,DISTRICT -
SHIMOGA,KARNATAKA PIN-577204
PH :-9448319758.

SIDDAPUR

537.## MARUTI AUTO WORKS (5335), SORAB
ROAD,,SIDDAPUR (U.K),DISTRICT - UTTAR
KANAND,KARNATAKA PIN-581355
PH :-9448525801.

SIRSI

538.* ARUNDHATI MOTORS (1258), HUBLI
ROAD,SIRSI,(UTTAR KARNATAKA)
PIN-581402
PH :-9445098822.

SRINGERI

539.# SHUBHASHREE MOTORS (5434), AGUMBLE
ROAD ,SRINGERI,DISTRICT -
CHIKAMAGALUR,SRINGERI,KARNATAKA
PIN-57139
PH :08265-9448170400.

TIRTHALLI

540.## SUMUKA AUTOMOBILES (5133), AP
ROAD,CEEENE
KERI,DISTRICT-SIMGA,SHIMGA,KARNATAKA
PIN-577414
PH :08181-9448159463.

TUMKUR

541.## APOORVA CAR CARE CENTRE (5327), B.N.P.
COMPOUND ,BEHIND KRISHNA
THEATRE,M.G. ROAD - TUMKUR,DISTRICT -
TUMKUR,KARNATAKA PIN-560001
PH :-9448166275.

UDUPI

542.* ST. JUDE AUTOMOBILE ENGG. WORKS
(4521), B.D.MARG,AMBALAPADI,UDUPI
PIN-576103
PH :0820-23319.

UPPINANGADY

543.## RATNA ENTERPRISES (5447), N.H. 48. OLD
GATE.,UPPINANGADY,DISTRICT - DASSHI
KANNADA,KARNATAKA PIN-574241
PH :-9972995341.

KERALA

ADIMALY

544.## PLATHOTTAM AUTOMOBILES (3864),
NH-49,OPPOSITE TO MINI INDUSTRIAL
ESTATE,ADIMALI PIN-685561
PH :04864-9447023073.

ADOOR

545.## AUTO CLUB (2132), NEAR H.P.
PUMP,VADAKKADATHUKAVU
P.O.ADOOR,PATHNAMTHITTA DISTT
PIN-691523
PH :0473-9447440184.

ALAPPUZA

546.## ESSAR MOTORS (4959), KALARKODE,NEAR
CHINMAYA SCHOOL,
NH-47,ALAPPUZA,KERALA PIN-688003
PH :0477-9249938474.

ALUVA

547.## AUTO TEAM (2630), A/189 A,PARUR
JUNCTION,ALUVA,(KERALA) PIN-683101
PH :0484-9349252698.

AMBALLUR

548.## LAKSHMI DEVI AUTO GARAGE (4137),
AMBALLUR,P.O.
PUDUKAD,TRICHUR,KERALA PIN-680301
PH :0480-9847004949.

ANCHAL

549.## NAMI-TAJ (2534), NAMITAJ MARUTI SERVICE
CENTRE,(OPP.) PETROL PUMP,R.O.
JUNCTION,ANCHAL (KERALA) PIN-691306
PH :0475-9447453745.

ANJUMOORTHY

550.## SAFA AUTO CARE (3847), N H
ROAD,MANGALAM PALAM,ANJUMOORTHY
POST, VADAKKENCHERY,PALAKKAD DISTT,
KERALA PIN-678683
PH :0492-9447303347.

ATTINGAL

551.## OM SHAKTI AUTOMOBILES (4466),
KIZHUVILAM
P.O.,MAMOM,ATTINGAL,KERALA PIN-695104
PH :0470-9744658681.

AYOOR

552.* MAKKATTU AUTO CLINIC (5051), AYOOR-
ANCHAL
ROAD,PANACHAILA,AYOOR,DISTRICT -
KOLLAM,KERALA PIN-691306
PH :0475-9847288624.

CALICUT

553.## MARUTI VEHICLES CENTRE (4727),
SUBHADRA BUILDINGS,POTTAMMAL
P.O.,NELLIKODE,CALICUT PIN-673016
PH :0495-9447275499.

554.## MARUTI SCAN (1675), BYE PASS
JUNCTION,MEENCHANDA,CALICUT
PIN-673018
PH :0495-9447345008.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

555.## MALABAR MOTORS (4655), EAST
NADAKKAVU P.O.
ERANIPALAM,CALICUT,KERALA PIN-673006
PH :0495-9846089190.

CHALLAKUDDY

556.* VIJAY AUTO SERVICE (1626),
POTTA,CHALAKUDY PIN-680307
PH :0480-9995074628.
557.## STAR MARUTI GARAGE (5367), NH47 BYE
PASS,NEAR CRESCENT PUBLIC
SCHOOL,CHALAKKUDY,DISTRICT -
THRISSUR PIN-680307
PH :0480-9946009375.

CHANGANACHERRY

558.## SAAFAA AUTOMOBILES (1148), OPP.
APSARA THEATRE,CHANGANACHERRY
PIN-686101
PH :0481-9447042517.
559.* PALATHRA MOTORS & SERVICE CENTRE
(1072), VADAKKAKARA,VEROOR
P.O.,CHANGANACHERRY PIN-686104
PH :0481-9447195154.

CHAVARA

560.## CHITHIRA AUTOMOBILES (4755), KANKATHU
MUKKU,CHAVARA,KOLLAM PIN-691583
PH :0474-9447711009.

CHENGANNUR

561.* NEW TECH AUTOMOBILES (1978),
INDUSTRIAL
ESTATE,MUNDANCAVU,CHENGANNUR,KER
ALA PIN-689121
PH :0479-93888915757.

CHERTHALA

562.* POZHICKAL CAR WORLD (3037), NEAR
BOYS HIGH
SCHOOL,CHERTHALA,ALAPPUZHA
DIST.,KERALA PIN-688524
PH :0478-9947474752.

ERATTUPETA

563.## AUTO COMFORT (3948), PKMS
BUILDING,ERATTUPETTA PIN-686121
PH :04822-9447186876.

ETTUMANOOR

564.## ROHIT MOTORS (4636), THELLAKOM
P.O.,M.C. ROAD,ETTUMANOOR,KERALA
PIN-686016
PH :0481-9447079010.

KALANJOOR

565.## AGT MOTORS (5937), KIP
JUNCTION,KALANJOOR,DISTRICT-PATHANA
MTHITTA,KERALA PIN-689694
PH :04734-9447261424.

KALLAMBALAM

566.# PRAKASH AUTO ENGINEERS (5548),
VADASSERIKONAM P.O.
KALLAMBALAM,VARKALA,KALLAMBALAM,DI
STRICT-TRIVANDRUM,KERALA PIN-695143
PH :0470-9847159618.

KALLUMUTTY

567.## MARUTI CARE (4179), KALLUMUTTY,IRITTY
P.O.,KANNUR,KERALA PIN-670703
PH :0490-9946703070.

KALPETTA

568.## VARCO MOTORS (4724), CALICUT MYSORE
ROAD,KALPETTA,NORTH KERALA
PIN-673592
PH :04936-9961569898.

KANJIRAPALLI

569.## MACK ENTERPRISES (2729),
T.B.ROAD,KANJIRAPALLY PIN-686507
PH :04828-9447093739.

KANNUR

570.** PIONEER AUTO & ENGG.WORKS (4722),
KANNOOTHUMCHAL
ROAD,KANNUR,(KERALA)PIN-670006
PH :0497-9447798255.
571.## AREN MOTORS (5139), CHAKKARAKAL P.O.
MUZHAPPALA,DISTRICT - KANNUR,KERALA
PIN-670611
PH :0479-9446771237.

KARIMANOOR

572.## MACS AUTOMOBILES (5745), SILVER
SQUARE
,KARIMANNOOR,THODUPUZHA,DISTRICT-ID
UKKI,KERALA PIN-681585
PH :0486-9633275410.

KARUVANCHAL

573.## SAFEGUARD MARUTI SERVICE STATION
(4351), MARIPURATHU
HOUSE,KOKKAMULLU, KAYAMKUMPARA
P.O.,CHEMPERY - VIA,CANNANORE
PIN-670571
PH :0460-9447235468.

KASARGOD

574.## CARS CARE (4579),
ANANDPUR,VIDYANAGAR
P.O.,KASARAGOD,KERALA PIN-671123
PH :04994-9847251115.

KATTAKADA

575.## CITY ENGINEERS (4947), MARUTI SERVICE
CENTRE,NEYYATTINKARA
ROAD,KATTAKADA,DISTRICT-TRIVANDRUM
(KERALA) PIN-695572
PH :0471-9447206257.
576.## MADATHIL MOTORS (5456), MADATHIL
HOUSE,CHOONDUPALAKA,KATTAKADA P.O.
- TRIVANDRUM,DISTRICT -
TRIVANDRUM,(KERALA) PIN-695572
PH :0471-9495192389.

KATTAPPANA

577.## UNITED SERVICE CENTER (4433),
EDASSERT
JUNCTION,KATTAPPANA,KERALA
PIN-685508
PH :04868-9961432941.

KAYAMKULAM

578.## PERFECT MOTORS (4948), MARUTI
SERVICE CENTRE,
NH-47,CHEPPAD,KAYAMKULAM,DISTRICT-A
LAPPUZHA (KERALA) PIN-690507
PH :0479-9447048338.

KOLLAM

579.## QUILON MARUTI SERVICE (2737),
CHANDANATHOPE P.O.,KOLLAM,(KERALA)
PIN-691014
PH :0474-9387307562.

KONNI

580.## GLOBAL MOTORS (2836), VAKAYAR
P.O.,KONNI,(KERALA) PIN-689698
PH :0463-9446222944.
581.## MUTTATH AUTOMOBILES (5525),
AROORPALAM,KONNI,DISTRICT -
PATHANANTHITTA,KERALA PIN-689691
PH :0468-9447431751/9447161605.

KOOTHATUKULAM

582.## EXTRA CARE SERVICES (3232), DEVA
MATHA JUNCTION,M.C.
ROAD,KOOTHATTUKULAM,ERNAKULAM
DIST. (KERALA) PIN-686662
PH :0485-9846723351.

KOTHAMANGALAM

583.## MAJESTIC MOTORS (1253), NEAR
THANKALAM BYE-PASS
ROAD,KOTHAMANGALAM,KERALA
PIN-686691
PH :0485-9388883221.

584.## EXCEL MARUTI SERVICE (4342), BYE-PASS
ROAD,KOTHAMANGALAM,ERNAKULAM
PIN-686691
PH :0485-9847177202.

KUNDARA

585.# SPARK SERVICE (5772),
ELAMPALLOOR,P.O.
KUNDARA,DISTRICT-KOLLAM,(KERALA)
PIN-691501
PH :9387227500.

KUTHUPARAMBA

586.## KRISHNA MOTORS (3435),
KUTTIKKUNNU,NEAR 66 KV SUB
STATION,KUTHUPARAMBA,KANNUR DIST.
(KERALA) PIN-670643
PH :0490-9497296380.

MANANTHAVADY

587.## AUTO CARE (2541), (SHEEJA AUTO ENGG.
WORKS),THALASSERY
ROAD,MANANTHAVADY,WAYANAD (DIST.)
PIN-670645
PH :0483-9447040068.

MANJERI

588.## MARUTI AUTO HOUSE (4726), MARUTI
SERVICE CENTRE,MELAKKAM,MANJERY
PIN-676123
PH :0483-9447129289.

MANNAR

589.## MOHANS AUTOMOBILES (5457), MOHANS
AUTOMOBILES &
ENGINEERS,KUTTEMPOOR P.O.
MANNAR,DISTRICT - ALAPPUZHA,(KERALA)
PIN-689622
PH :9447877377.

MANNUTHY

590.** TOP CLEAN SERVICES (2834), 13/450
MANNUTHI BYE PASS,P.O.
OLLUKKARA,THRISSUR,(KERALA)
PIN-680685
PH :0487-9846037818.

MEENANGADI

591.## MOTOR TECH (2440), EAST
MEENANGADI,KRISHNAGIRI
P.O.,WAYANAD,(KERALA) PIN-673591
PH :0487-9447263360.

MOOCHIKKAL

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

592.## CHELADAN'S MARUTI ENGINEERS (4659),
THANUR
ROAD,MOOCHIKKAL,MEENADATHUR,
TIRUR,MALAPURAM DIST (KERALA)
PIN-676307
PH :0494-9895443563.

MUNNAR

593.## PLATHOTTAM AUTOMOBILES (4447),
NH-49,ADIMALY,IDUKKI DIST,KERALA
PIN-685612
PH :04865-9447023073.

MUVATTUPUZHA

594.** JAWAN AUTOMOBILES (2730), MADAVOOR
POST,MUVATTUPUZHA PIN-686669
PH :0485-9447163809.

NEYYANTTINKARA

595.## XANON ENGINEERS (4635), RAVELI TOLL
JUNCTION,NEYYATTINKARA,TRIVANDRUM
PIN-695121
PH :0471-9447014813.

NILAMBUR

596.## CONFIDENCE MOTORS (5140),
PALUNDA,CHUNGATHARA,NILAMBUR,DISTR
ICT - MALLAPURAM,KERALA PIN-679334
PH :9447681623.

NILAMEL

597.## LIBRA (3431), M.C. ROAD,NILAMEL,KOLLAM
DIST.,(KERALA) PIN-691535
PH :0474-9447335089.

OCHIRA

598.* MANGALATH AUTOMOBILES (3836), NH 47
VALIYAKULANGARA,OCHIRA P O,KOLLAM
DIST,KERALA PIN-690526
PH :0476-9847258696.

OLLUR

599.## TOPCLEAN SERVICES (4468),
10/153,CHRISTOPHER NAGAR,P O
OLLUR,TRICHUR (KERALA) PIN-680306
PH :0487-9846037818.

PALAKKAD

600.## CAR CRAFT (2139), 5/682
(1),MANALI,PALAKAD,(KERALA) PIN-678001
PH :0491-9447137870.

PANDALAM

601.* AISHWARYA AUTOMOBILES (2067), NEAR
K.S.R.T.C. BUS STOP,PANDALAM
PIN-689501
PH :0473-9847049140.

PARIPALLY

602.## ALLIANCE MARUTI SERVICES (3243),
NH-47,PARIPPALLY,KOLLAM DIST. (KERALA)
PIN-691574
PH :0474-9349926440.

PATHANAPURAM

603.## MANNIL AUTOMOBILES (4150), NEAR
PANCHAYAT
OFFICE,PATHANAPURAM,KERALA
PIN-689695
PH :0475-9447258496.

PATHNAMTHITTA

604.** C.J. MARUTI CARE CENTRE (1255),
VARIYAPURAM,ELANTHOOR EAST
P.O.,PATHANAMTHITTA,(KERALA)
PIN-689643
PH :0468-9446913874.

PERAVOOR

605.## CAR CARE AUTOMOBILES (4422), P.K.
NIVAS,KUNITALA P.O.,PERAVOOR,KANNUR
DIST. PIN-670673
PH :04902-9946444691.

PERUMBHAVOOR

606.## ACC MARUTI (2835), XIV/III-B,M.C.
ROAD,PERUMBHAVOOR,(KERALA)
PIN-683542
PH :0484-9846022593.

607.## MILLENNIUM MOTORS (4873), OLD VALLAM
ROAD,KADUVAL,PERUMBHAVOOR,DISTRICT-
ERNAKULAM (KERALA) PIN-683542
PH :0484-9447052488.

QUILANDY

608.## HITECH MARUTI (3025), MAIN
ROAD,KOYILANDY,CALICUT DISTT.
PIN-673305
PH :0496-9497304619.

RANNY

609.## DEEPA AUTOMOBILES (5177), DEEPA
AUTOMOBILES,PAZHAVANGADI,P.O.
RANNY,DISTRICT-PATHANAMTHITTA,KERALA
A PIN-689673
PH :04735-9447365602.

SASTHA MANGALAM

610.## MARSHAL AUTOMOBILES (4035), SWATI
NAGAR, TC 10/147,PIPPIN MOODU, SASTHA
MANGALAM,PEROORKADA,TRIVANDRUM
PIN-695005
PH :0471-9447461101.

SULTAN BATHERY

611.## AUTOMECK (4725), BEENCHI P.O.,SULTAN
BATTERY PIN-673592
PH :0493-924989515.

612.## NEW INDIAN MARUTI SERVICE CENTRE
(4577), MYSORE ROAD,SULTAN
BATHERY,WAYANAD DISTRICT,KERALA
PIN-673592
PH :0493-9446810701.

613.## TEE PEE MOTORS (4773), 9/668-B OOTY
ROAD,NEAR BLOCK OFFICE,SULTAN
BATHERY,WAYANAD (KERALA) PIN-673592
PH :04936-9447934726.

TALIPARAMBA

614.## YESKAY (3368),
KAKATHODE,TALIPARAMBA,KANNUR
DISTT (KERALA) PIN-670141
PH :0460-9744076850.

THALASSERY

615.## SAFE HANDS (3038),
ERANHOLI,CHUNGAM,THALASSERY,(KERAL
A) PIN-670107
PH :0490-9744322317.

THALAYOLAPARAMBU

616.* MYALIPARAMPIL MOTORS (3233), SILON
JUNCTION,NEAR
THALAYOLARAMBU,POOZHNIKOL P O
PIN-686604
PH :04829-9447562050.

THAMARASSERY

617.## MALABAR MOTORS (4645), WARD NO. 12,
BLDG NO. 121,WAYANAD ROAD,
KARADY,THAMARASSERY,CALICUT
PIN-673573
PH :0495-9387531000.

THIRUVALLA

618.## MARUTI AUTO SPOT (1628), MUTHOOR,M C
ROAD,THIRUVALLA PIN-689107
PH :0469-9447034608.

THIRUVANANTHAPURAM

619.## SREEKARIYAM AUTOMOBILES (353),
SREEKARIYAM
P.O.,THIRUVANANTHAPURAM PIN-695017
PH :0471-9447050313.

620.* PROFESSIONAL MOTORS (1256), NEAR
ELECTRICITY
BOARD,PEROORKADA,TRIVANDRUM
PIN-695005
PH :0471-9447697945.

621.## HITECH INDUSTRIES (1951), NEAR ULLOOR
BRIDGE,PATTOM
P.O.,THIRUVANANTHAPURAM,(KERALA)PIN-
695004
PH :0471-9447732057.

622.## EMINENT MARUTI SERVICE (2360), T.C. 610
M.C. ROAD,MANNANTHALA,TRIVANDRUM
PIN-695015
PH :0471-9447713639.

623.## MUKUNDANS (3434), PADMAVILASAM,T.C.
2/1370,PATTOM PALACE
P.O.,THIRUVANANTHAPURAM PIN-695004
PH :0471-9887834555.

TRIVANDRUM

624.* KICHU MOTORS (5453), TC.49/962
,SREEMOOLAM NAGAR
CHIRAMUKKU,MANACAUUR (PO)
TRIVANDRUM,DISTRICT -
TRIVANDRUM,KERALA PIN-695009
PH :0471-9847023025.

VADAKKANCHERY

625.## TOPCLEAN SERVICES (4354), 275-A,NEAR
UTHRALIKKAVU TEMPLE,KUMARANELLUR
P.O.,VADAKKANCHERY, TRICHUR
PIN-680307
PH :04884-9846037818.

VADANAPPALLY

626.## MONARCH MARUTI CARE CENTRE (4079),
NEAR NORTH JUMA MAS,JID,GANESHA
MANGALAM,P O VADANAPPALLY,TRICHUR
DIST (KERALA) PIN-680614
PH :0487-9847792698.

VADAVATHOOR

627.## CCARS (5754),
VADAVATHOOR,PO-KOTTAYAM,DISTRICT-K
OTTAYAM,KERALA PIN-686503
PH :0481-9447208558.

VARKALA

628.* S.S. MOTORS (2979), NEAR POLICE
STATION,VARKALA,TRIVANDRUM
DISTT.,TRIVANDRUM DISTT. PIN-695141
PH :0472-9446104991.

VATAKARA

629.## RANI AUTOMOBILES & ENGINEERING
WORKS (1674), NADAPURAM
ROAD,MADAPALLY COLLEGE
(P.O.),VATAKARA PIN-673102
PH :0496-9447517004.

LAKSHADWEEP

LAKSHADWEEP

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

630.## POPULAR REPAIR & SERVICE CENTRE
(2944), SECRETARIAT
ROAD,KAVARATTI,LAKSHADWEEP
PIN-682555
PH :0469-989543876.

MADHYA PRADESH

BALAGHAT

631.## GULAB AUTOMOBILES (1553), GUJARI
CHOWK,BALAGHAT,MADHYA PRADESH
PIN-481001
PH :07632-9425402926.

632.## SAURAV MOTORS (4069), DEENHI
ROAD,GARRA INDUSTRIAL
AREA,BALAGHAT,MADHYA PRADESH
PIN-481001
PH :07632-9826310979.

BARWANI

633.## SPEED AUTOMOBILES (5260), KHANDWA
BARODA ROAD,NR. BALAJI TOLL
KANTA,BARWANI,DISTRICT-BARWANI,MADH
YA PRADESH PIN-451552
PH :451551-9926146073.

BETUL

634.## ADITYA MOTORS (1263), NAGPUR BHOPAL
ROAD,SADAR,BETUL,MADHYA PRADESH
PIN-461001
PH :07140-9425381581.

BHIND

635.## MAA PITAMBRA MOTORS (5241), OPP.
RAJENDERA CONVENT SCHOOLLAKSHAR
ROAD - BHIND,MADHYA PRADESH
PIN-477001
PH :9826240582.

BHOPAL

636.** VIDHYA AUTOMOBILES PVT. LTD. (), PLOT
NO. 235,ZONE II,M.P. NAGAR,BHOPAL (M.P.)
PIN-462011
PH :0755-9826053198.

637.## SHRI KRISHNAN CAR CARE (1679),
POLYTECHNIC ROAD,NEAR PETROL
PUMP,BHOPAL,(M.P.) PIN-462023
PH :0755-9424454030.

638.* TAURUS AUTOMOBILES (3372), ALAKNANDA
COMPLEX,OPP.VIJAY STAMBH PRESS
COMPLEX,M.P. NAGAR ZONE-I,BHOPAL
(M.P.) PIN-462011
PH :0755-9303131403.

639.## SHUBHAM AUTOMOBILE (5052), PLOT NO 1
& 2 CHAWANI SHAHPURA,GULMOHAR
ROAD, SHAHPURA,DISTRICT BHOPAL
PIN-462011
PH :0755-9425009869.

640.** RANJIT AUTOMOBILES (5452), 117.ZONE II .
M.P. NAGAR,BHOPAL,DISTRICT -
BHOPAL,MADHYA PRADESH PIN-462011
PH :0755-9826250439.

BIAORA

641.## GURUKRUPA MOTORS (5670), OPP
PRABHAT BREAD INDUSTRY,AB ROAD -
BIOARA,DISTRICT - BIOARA,MADHYA
PRADESH PIN-452001
PH :07374-9425037506.

642.# NEW INDIA AUTO GARAGE (5337), NEAR
VARMA SALES,AB ROAD -BIORA,DISTRICT -
RAJGARH,MADHYA PRADESH PIN-465674
PH :9826555002.

BURHANPUR

643.** SWADESHI MOTORS (4229), NEAR GANPATI
MANDIR,GANPATI NAKA,BURHANPUR
PIN-450331
PH :07325-9425086920, 07325245150.

CHINDWARA

644.## BINDRA AUTOMOTIVE (5420), SHANICHRA
BAZAR,CHHINDWARA,M.P. PIN-480001
PH :9827292392.

DABRA

645.## MODI MOTORS (3857), BHALLA KA
DERA,JHANSI ROAD,DABRA,GWALIOR
PIN-474001
PH :07524-9425119888.

DAMOH

646.## MARUTI PRIME (1156), BUS STAND,STATION
ROAD,DAMOH PIN-470661
PH :9425096209.

DATIA

647.## HIND MOTORS (4470), JHANSI
ROAD,KALAMPURAM TIRHA,DATIA,MADHYA
PRADESH PIN-475661
PH :07522-9406969206.

DEWAS

648.## AZAD MOTORS (4534), 26 NEW
MARKET,MOTI BANGLA,DEWAS,MADHYA
PRADESH PIN-455001
PH :07272-9827533591.

DHAMNOD

649.## REWANANCHAL MOTORS (6027), NEW
PRAKASH NAGAR,AB ROAD ,
DHAMNOD.DISTRICT-DHAR,MADHYA
PRADESH PIN-454552
PH :9425334147.

DHAR

650.## JIYO MOTORS (5031), OPP DAK BANGLA,
INDORE ROAD DHAR,DISTRICT -
DHAR,DHAR,MADHYA PRADESH PIN-454001
PH :07292-9893633559.

GWALIOR

651.** MARUTI ENTERPRISES (3021), KHERAPATI
ROAD,GWALIOR,(M.P) PIN-474002
PH :0751-9425116466.

652.## CLASSIC MOTOR & SERVICE STATION
(5242), CHAUHAN PIAO, M.G.
ROAD,THATIPUR
MORAR,GWALIOR,MADHYA PRADESH
PIN-474011
PH :9329603001.

HARDA

653.## MANOJ UDYOG & SERVICE CENTER (4145),
87-88, INDUSTRIAL AREA,CHHIPANER
ROAD,HARDA,M.P PIN-461331
PH :9826227245.

INDORE

654.** KHALSA AUTO SERVICE (5325), 36 KIBE
COMPOUND,INDORE PIN-452001
PH :9425055788.

655.** BOMBAY MOTORS (1655), 10 Y.N.
ROAD,INDORE,(M.P.) PIN-452003
PH :0731-9893887867.

656.## BADSHAH MOTORS (5027), 150/2, NOORANI
NAGAR, NEAR JAIMAL SINGH PETROL
PUMP,DHAR ROAD,
INDORE.DISTRICT-INDORE,MADHYA
PRADESH PIN-452008
PH :9826098427.

657.## JYOTI RAGHUNATH MOTORS (5149), 3/3
RAMBAGH,BEHIND PETROL
PUMP,INDORE,MADHYA PRADESH
PIN-452001
PH :0731-9425965001.

ITARSI

658.** UNITY ENTERPRISES (3270), PLOT
NO.97,INDUSTRIAL AREA,KHEDA,ITARSI
(M.P.) PIN-461111
PH :07572-9893528689.

659.## PITAMBARA MOTORS (5041), NH-69, BETUL
ROAD, NEAR PLYBOARD,FACTORY
ITARSI,DISTRICT - ITARSI,MADHYA
PRADESH PIN-461111
PH :9826528912.

JABALPUR

660.## YASH VEHICLES CARE (2169), 1663 WRIGHT
TOWN,OPP. TELEGRAPH GATE
NO.2,JABALPUR,(M.P.) PIN-482002
PH :0761-9826259859.

661.## SUPER MARUTI SERVICE (4952), 375-A
PREM NAGAR,OPP.
GURUDWARA,JABALPUR,MADHYA
PRADESHPIN-482001
PH :0761-9827094994.

JAORA

662.* RATNARAJ MOTORS (4245), MHOW
NEEMUCH ROAD,BHIMAKHERI
FATAK,JAORA (M.P) PIN-457226
PH :9827238700.

JAWAD

663.## SHARMA MOTORS (5764), IN FRONT OF
PAWAN MILL,STATION ROAD,
JAWAD,DISTRICT-NEEMUCH,MADHYA
PRADESH PIN-458330
PH :9425441270.

KATNI

664.## KATNI MOTORS (4949), C/O MAHURANIPUR
UNION,TRANSPORT CORPORATION,NH-7,
PANNA MORH,KATNI (MADHYA PRADESH)
PIN-483501
PH :07622-9425162660.

KHANDWA

665.## M.K. AUTOMOBILES (5326), SANTOSH
NAGAR,OPP. JHEELODHYAN,INDORE
ROAD,KHANDWA PIN-450001
PH :0733-9425085666.

KUKSHI

666.## DILIP MARUTI SERVICE CENTER (4649),
OPP. GAYATRI SAROVAR,KUKSHI.DISTT
DHAR PIN-454331
PH :07297-9893227070.

MANDSAUR

667.* JANGID MOTORS (2735), NAYAPURA
ROAD,NEAR R.K.
HOSPITAL,MANDSAUR,(M.P.) PIN-458001
PH :07422-9827266583, 07422241146.

668.## DEV MOTORS (4562), SITAMAU
FATAK,MANDSAUR,MADHYA PRADESH
PIN-458001
PH :9826751534.

MHOW

669.* HIGHWAY MOTORS (4144), A.B.
ROAD,DONGRAGAON,MHOW,INDORE.M.P
PIN-453441
PH :07324-7324277181, 9826035653.

MORENA

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

670.## SHYAM MARUTI SERVICE STATION (2964), SHYAM BIHAR COLONY,A.B. ROAD,MORENA,(M.P.) PIN-476001 PH :07532-9425366274.

NAGDA

671.## MARUTI NANDAN (3939), 15 VERDHAMAN NAGAR,MEHATWASA,BIRLAGRAM,NAGDA, DISTT UJJAIN PIN-456331 PH :0736-9406918392.

SAGAR

672.## SAGAR MOTORS (4955), NEAR GURUDWARA,JHANSI BHOPAL ROAD, BHAGWANGANJ,SAGAR,MADHYA PRADESH PIN-470002 PH :07582-9826070549.

SARNI

673.## JHANVI SERVICE STATION (3738), MAIN ROAD,BAGDONA,SARNI,DISTT. BETUL (M.P.) PIN-460449 PH :07146-9425382313.

SATNA

674.* KAPOOR SERVICING CENTRE (1162), 90 PREM NAGAR,SATNA,(M.P.) PIN-485001 PH :9827095182.

SEONI

675.## HIGHWAY MOTORS (2262), NEAR MOTEL CENTER POINT,SEONI-JABALPUR HIGHWAY,SEONI,(M.P.) PIN-480661 PH :9424364655.

SHAHNOL

676.## PACE CRAFTERS AND AUTO SERVICES (2145), NEAR VIRAT TEMPLE,BANGANGA,SHAHNOL,(M.P.) PIN-484001 PH :07652-9424701495.

SHAJAPUR

677.## SHRIYA MOTORS (2568), 174 A.B. ROAD,SHAJAPUR,(M.P.) PIN-456001 PH :07364-9826783993.

SHEOPUR

678.## GOYAL AUTO (5446), NEAR BABBAN MARKET,BARODA ROAD,SHEOPUR,DISTRICT - SHEOPUR,MADHYA PRADESH PIN-476332 PH :9826240944.

SHIVPURI

679.* KARUN MOTORS (4273), NEAR ARUN DHARAMKANTA,GUNA NAKA,A.B. ROAD,SHIVPURI PIN-473551 PH :07492-9425137808.

SIDHI

680.## MAMTA MOTORS (2447), BHUSA MORE,POST - SINGRAULI,DISTT. SIDHI (M.P.) PIN-486889 PH :07805-9919804489.

681.## KHARE MOTORS (4068), NH-75,SINGRAULI ROAD,SIDHI,MADHYA PRADESH PIN-486889 PH :07805-8120090404.

TIKAMGARH

682.* ASHENDRA AUTOMOBILES (2636), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA,KUNDESHWAR,TIKAMGARH,(M. P.) PIN-472001 PH :07683-245387 ,9425141840,9425141940,9425145687.

UJJAIN

683.## SUGANDHI BROTHERS (324), DEWAS ROAD,UJJAIN (M.P) PIN-456010 PH :07341-9425379301.

684.## ZALANI AUTO SERVICE (1554), 4/2 NAZARALI MARG,FAZALPURA,UJJAIN PIN-456006 PH :0734-9893446739.

VIDISHA

685.## SAMAY MOTORS (5179), NEAR SC/S SHED,PITALMIR CHOURAHA,SAGAR ROAD NH-86,VIDISHA PIN-464002 PH :07592-9425392521.

WAIDHAN

686.## ANANT MOTORS (5732), BILAUJAI ,WAIDHAN,DISTRICT-SINGRAULI,MADHYA PRADESH PIN-486886 PH :9753167070.

MAHARASHTRA

AKLUJ

687.## SONAJ AUTOMOTIVES PVT. LTD. (2665), SHANKARRAO MOHITE PATIL,CO-OP INDUSTRIAL ESTATE,PLOT NO.36 P.O. BOX NO.-11,AKLUJ (MAHARASHTRA) PIN-413101 PH :02185-224376 /9422644194.

AKOLA

688.## AUTOLAND (5936), RAM NAGAR,TOSHNIWAL LAYOUT,AKOLA,DISTRICT-AKOLA,MAHARAS HTA PIN-444005 PH :0724-2453560/09422164050.

AKOLE

689.## SAMARTH CAR CARE (5555), MAHALAXMI COLONY,K.G. ROAD-AKOLE,DISTRICT - AHMEDNAGAR,MAHARASHTRA PIN-422601 PH :9763896321.

AMALNER

690.## LUCKY AUTO CARES (5853), R.K. COMPLEX,R.K. NAGAR,DHULE ROAD,AMALNER,DISTRICT-JALGAON,MAHA RASHTRA PIN-425401 PH :9422789764/9404056044.

AMBERNATH

691.* J.S. AUTOMOBILES (4567), B-31/3,MIDC, KALYAN AMBERNATH ROAD,AMBERNATH,MAHARASHTRA PIN-421501 PH :0251-2602061/62/9370116436.

AURANGABAD

692.* MARUTI AUTOMOBILES (3441), MAHAVIR COMPLEX,AKASHWANI CHOWK,JALNA ROAD,AURANGABAD (MAHARASHTRA) PIN-431008 PH :0240-9822015949/2330992.

693.* CAR CARE (5173), #85.SERVICE INDUSTRIAL SECTOR,TOWN CENTRE. CIDCO,DISTRICT-AURANGABAD,MAHARASH TRA PIN-431003 PH :0240-240-2488929/2488939.

BADLAPUR

694.## OMKAR AUTO SERVICES (3376), OMKAR BUNGLOW,GOLE WADI,KULGAON STN.,BADLAPUR DIST. THANE PIN-421503 PH :0251-2690371.

BARAMATI

695.## AUTO WINGS (2142), PLOT NO. C-22/23,BARAMATI CO-OP INDUSTRIAL ESTATE,JALOCHI DISTRICT PUNE,MAHARASHTRA PIN-413102 PH :02112-243252/ 243077/24379.

BARSI

696.## OM SERVICE CENTRE (5359), KURWEDI ROAD,BARSI,DISTRICT - SOLAPUR,(MAHARASHTRA) PIN-413401 PH :9850437003.

BEDD

697.## NEW AGWAN SERVICES (2235), 850 SHYOG NAGAR,JALNA ROAD,BEED,BEED PIN-431122 PH :02442-227007.

BHIWANDI

698.## VAQUAR AUTO WORKS (544), AGRA ROAD JUNCTION,VANJARPATI NAKA,BHIWANDI,THANE DISTT.(MHRS) PIN-421302 PH :02522-243975/243966/9822655991.

BHUSAWAL

699.* SAIKRIPA AUTOMOBILES (2129), NATIONAL HIGHWAY NO.6,S.NO.54/5X6 NEAR KHADKA ROAD CROSSING,BHUSAWAL,DISTT. JALGAON (MAHARASHTRA) PIN-425201 PH :024819-9422789764.

BOISAR

700.## SIFAR CAR CARE (4055), PLOT NO. 15 AT- KURGAON,P O KUNDAN,BOISAR TARAPUR ROAD,TAL PALGHAR, DISTT THANE PIN-401501 PH :02525-282384.

BULDHANA

701.## JADHAV & SONS (2122), MR.SUSHIL JADHAV,MAIN ROAD,NEAR POLICE STATION,WARD NO.25 BULDHANA PIN-443301 PH :07262-242647/9421464285.

CHANDRAPUR

702.## SHEIKH AUTOMOBILES (5379), APPOSITE GOVT. ITI,CIVIL LINES,CHANDRAPUR,DISTRICT - CHANDRAPUR,MAHARASHTRA PIN-442401 PH :07172-253218.

CHIPLUN

703.## MANORKAR AUTOMOBILES (270), NEAR RAILWAY STATION,BOMBAY-GOA HIGHWAY,WALOPE CHIPLUN,DISTT. RATNAGIRI PIN-415605 PH :02355-256299/255299.

704.## MAYUR MOTORS (168), SITA APARTMENTS,NEAR BAHADUR SHEIKH NAKA,CHIPLUN DISTT. RATNAGIRI,MAHARASHTRA PIN-415605 PH :02355-320048/255885.

DAPOLI

705.* ROYAL AUTO SERVICE STATION (3444), DAPOLI-MANDANGAD ROAD,MAJJE-DAPOLI,TAL- DAPOLI,DIST. RATNAGIRI (MAHARASHTRA) PIN-415712 PH :02358-282274/9422661033/9226701776.

DEOPUR

706.** AGRO ENGINEERING SERVICES (2244), DIVERSION ROAD,DEOPUR,DHULE,DHULE PIN-424005 PH :02562-26171/270964/9423193884.

DOMBIVILI

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

707.##	MEGA SERVICES (2573), A-173,PHASE-1,NEW KALYAN BYPASS ROAD,OPPOSITE ADARSH PARK,MIDC,DOMBIVLI PIN-421203 PH :0251-2448877/2448977/9821012736/99874971 97.
GADACHIROLI	
708.##	VENUS AUTOMOTIVE (4170), PLOT # 2, NR GOVERNMENT ITI COLLEGE,ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY,GADACHIROLI,MAHARASHTRA PIN-442605 PH :07132-233222/9422151222/9689228222.
HINGANGHAT	
709.##	S.K MOTORS (5530), JAGANNATH WARD,NH-7,HINGANGHAT,DISTRICT - WARDHA,MAHARASHTRA PIN-442301 PH :9421726700.
ICHALKARANJJI	
710.##	SAI AUTO LEADS (3821), 7/597 SANGLI VES,ICHALKARANJJI,DIST. KOLHAPUR PIN-416115 PH :0230-435827/439227.
INDAPUR	
711.##	AJINKYA MOTORS (3868), S NO. 233(448),PUNE SOLAPUR HIGHWAY,NEAR HOTEL SAI PALACE,A/P INDAPUR DISTT. PUNE PIN-413106 PH :0211-225471.
ISLAMPUR	
712.##	VIJAY MOTORS (5134), PETH ISLAMPUR ROAD,NEAR PETH NAKA -ISLAMPUR,DISTRICT - SANGLI,MAHARASHTRA PIN-416112 PH :9860446084.
JALGAON	
713.*	SHREE MOTORS (3040), 362 SHIVAJI NAGAR,JALGAON PIN-425 001 PH :0257-2221927,9823150704/9404050704.
KALWA	
714.**	SHREE SIDDHI MOTORS (5668), NEXT TO LILAVATI CO-OP SOCIETY,DATTAWADA,KALWA KHAREGAON ROAD-KALWA(W),DISTRICT - THANE,(MAHARASHTRA) PIN-400605 PH :-64537777/25407778/79.
KALWAN	

715.##	KRISHNA AUTOMOTIVE (4037), GANESH NAGAR,AT POST & TALUKA,KALWAN,DIST NASHIK PIN-423501 PH :02592-9420233134/8087988735.
KALYAN	
716.##	SHIVAM AUTO CARE (571), C/O GRIHALAXMI VATSU NIRMAN,MURBAD ROAD,KALYAN,BOMBAY PIN-421304 PH :0251-2321518/6518007/9867001771.
KANKAVLI	
717.**	SAPALE AUTO SERVICE PRIVATE LIMITED (1975), MUMBAI GOA ROAD,N.H.17,KALMATH,KANKAVLI DISTT. SINDHUDURG PIN-416602 PH :02367-233434/231934/9422434701.
KATOL	
718.##	BALAJI SERVICE STATION (5962), PLOT NO. XI,MIDC,SAWARGAON ROAD,DONGARGAON-KATOL,NAGPUR, DISTRICT-NAGPUR,MAHARASHTRA PIN-441302 PH :07112-9763867144.
KHAMGAON	
719.##	JAIDEEP MOTORS (4779), NEAR RELIANCE PETROL PUMP,NANDURA ROAD,KHAMGAON,DISTRICT-BULDHANA (MAHARASHTRA) PIN-444303 PH :07263-9850352826/9922917419.
KHED	
720.##	BHARAT AGENCIES (4548), AT POST BHARNA NAKA,NH-17,KHED,RATNAGIRI DIST PIN-415621 PH :02356-263309/260309/ 9049024781/9420910709.
KOLHAPUR	
721.*	VAKRATUNDA MOTORS (3142), OPP MAHAVIR COLLEGE,NAGALA PARK,KOLHAPUR PIN-416003 PH :0231-2680742.
KOPARGAON	
722.*	SAI MOTORS (4449), NAGAR MANMAD HIGHWAY,NEAR HOTEL ASHOKA,KOPARGAON,DIST. AHMEDNAGAR (MAHARASHTRA) PIN-423601 PH :02423-9326439000/9850684384.
LONAVALA	

723.##	APPOLO MOTOR REPAIRING WORKS (2543), MUMBAI-PUNE ROAD,LONAVALA,MAHARASHTRA PIN-410401 PH :02114-280330/9370721905.
MAHAD	
724.##	SHREE AUTO (2572), NAGALWADI PHATA BOMBAY-GOA HIGHWAY,AT & TALUKA - MAHAD,DISTT. RAIGAD,MAHARASHTRA PIN-402301 PH :02145-233111/ 223256/9422495797/9422495799.
MALEGAON	
725.##	MALEGAON AUTO CENTRE (3721), NEAR MOTI BAUG NAKA,MALEGAON PIN-423203 PH :0255-9371376911/02554-255011.
MANGAON	
726.##	KRUPA SERVICES (574), KRUPA SERVICES,AT : NANORE,POST : MANGAON,DISTT-RAIGAD PIN-402104 PH :263363.
MIRAJ	
727.##	ASHOK AUTOMOBILES (5672), C.S. NO:70-C,CHH - SHIVAJI ROAD,MIRAJ,DISTRICT - SANGLI,MAHARASHTRA PIN-416410 PH :0233-2375961.
MUMBAI	
728.##	AUTO SERVICES (526), KING'S CIRCLE,MATUNGA,MUMBAI (MHRSPIN-400019 PH :022-24141031/24141877/65804809. 729.## HIND AUTOMOBILES (550), 29 SEWREE WADALA ROAD,KING'S CIRCLE,MUMBAI (MHRSPIN-400019 PH :022-24096680/24096544/24037922. 730.** RAVI AUTOMOBILE SERVICES (553), GHATKOPAR-MAHUL ROAD,TILAK NAGAR,MUMBAI PIN-400089 PH :022-25227282/32929767/25221656/65752531/ 25293582. 731.** ZENITA AUTO WORKS (525), BEHIND H.P.PETROL PUMP,NAV PADA MAROL NAKA,ANDHERI (E),MUMBAI (MHRSPIN-400059 PH :022-28322659/28200653/28390850/28218906. 732.* ASHA AUTO SERVICE (570), I.O.C. DEALER,L.B.SHASTRI MARG,KURLA,MUMBAI PIN-400070 PH :26505338, 26506088, 9820727091.

733.##	SURAJ SANGHI SERVICE STATION (438), DR. ANNIE BESANT ROAD,WORLI,MUMBAI PIN-400016 PH :24931704, 24924754. 734.** SHAMAL MOTORS (1154), VAITY WADI,BHANDUP-SONAPUR ROAD,BHANDUP (WEST),MUMBAI PIN-400078 PH :022-25665266/64500500/25666465. 735.** CHAMUNDA MOTORS (P) LTD. (520), RAM BAUG NEAR SUNDAR DHAM,OFF S.V.ROAD,BORIVILI (W),MUMBAI PIN-400092 PH :022-28635677/ 28090888/28616701. 736.## BANAI AUTO CARE (6053), OPP. MAROL POLICE CAMP,NEXT TO AAREY CHECK POST,MAROL MAROSHI ROAD,MUMBAI PIN-400059 PH :022-28349816/28349817. 737.## JAGMAN MOTORS PVT. LTD. (1556), NEXT TO HOTEL ROYAL SALUTE,ANDHERI KURLA ROAD,SAGBAUG,MUMBAI PIN-400059 PH :022-28502590/28504983. 738.** POWAI AUTO WORKS (1660), OPP. PANCH KUTIR BUS STOP,19 ADI SANKARACHARYA MARG,POWAI,MUMBAI PIN-400076 PH :022-25700358/25700176/25708842/25703826. 739.** ORIX AUTO INFRASTRUCTURE SERVICES LTD (1971), 94 MAROL INDUSTRIAL ESTATE,ANDHERI KURLA ROAD,ANDHERI (EAST),MUMBAI PIN-400059 PH :022-67070100/67070221/67070216/67070222. 740.## LAXMI AUTO WORKS (2542), PLOT NO.1041,SAYANI ROAD,PRAHDEVI,MUMBAI PIN-400025 PH :022-24308566/24378788/24321722/982030364 6. 741.* SUPER AUTO SERVICE PVT. LTD. (2430), DESAI WADI JAYWANT SAWANT ROAD,NEAR HAPPY HOME SOCIETY,DAHISAR (W),MUMBAI PIN-400068 PH :022-28930239/28927124. 742.## CHEMBUR MOTORS (2526), 31/A ANAND NAGAR,OFF SION TROMBAY ROAD,SINDHI SOCIETY CHEMBUR,MUMBAI PIN-400071 PH :022-25243639. 743.* ALLIED AUTO AGENCIES (2666), 86/20 DR. AMBEDKAR ROAD,KHAR,MUMBAI PIN-400052 PH :022-26007066, 26498850, 26042540.
--------	---

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

744.## PRINCE SERVICE CENTER (3440), 34
GAMDEVI ROAD,SANGHANI
ESTATE,GHATKOPAR (WEST),MUMBAI
PIN-400086
PH :022-25001383/25001333.
745.** CARCRAFT AUTOMOBILE SERVICES PVT.
LTD. (4654), ABC GODOWN, MINERVA
INDUSTRIAL ESTATE,OFF P.K. ROAD,NEAR
SAI DHAM MANDHIR, MULLUND (W),MUMBAI
PIN-400080
PH :25628005/6/7, 9820296924.
746.** DEV MOTOR CARE PVT LTD (4878),
24ABCD,GOVT. INDUSTRIAL
ESTATE,HINDUSTAN NAKA, CHARKOP,
KANDIVLI(W),MUMBAI,(MAHARASHTRA)
PIN-400067
PH :022-986744334/28625366/28082661.
747.** AUTO CRAFT (4759), PLOT NO. 1-B,NEXT TO
DAMJI SHAMJI IND ESTATE,LBS MARG,
VIKHROLI (W),MUMBAI PIN-400083
PH :022-25783586/ 55974075/9323151010.
748.** POWAJ AUTO WORKS (4966), GALI NO
14/15/16, BUILDING NO1,C WING, KAILASH
INDUSTRIAL COMPLX,PARKSITE VIDHROLI
(W) PIN-400079
PH
:022-25173986/25173961/25173126/25173127.
749.* ST. FRANCIS AUTOMOBILES (5154), MOUNT
POINSUR BORIVALI
(WEST),MUMBAI,DISTRICT -
MUMBAI,MAHARASHTRA PIN-400103
PH :022-28951206/28934325.
750.## CHHAGAN MITHA (5230), CORNER OF
WARDEN ROAD & PEDDAR ROAD,POST
BOX NO. 6521,MUMBAI,MAHARASHTRA
PIN-400026
PH :022-66578384/5/6/7.
751.** SHAH CAR CARE (5436), SADANWADI,LAKE
ROAD.OFF LBS MARG,NEAR KRISHNA
TALKIES,DISTRICT -
MUMBAI,(MAHARASHTRA) PIN-400078
PH :022-25961831/32/33/9819159447.

MURBAD

752.## JAYDEEP AUTOMOBILES (5676), MURBAD
KALYAN HIGHWAY(NH-222),NEAR
NAVURGA HOTEL,AT-PO-
TAL-MURBAD,DISTRICT-THANE,MAHARASH
TRA PIN-421401
PH :02524-682260/9423370219/9226840777.

NAGAPUR

753.* AMIT SERVICE STATION (4158), NEAR
NAGAPUR HIGHWAY
BRIDGE NAGAR-MANMAD
HIGHWAY,NAGAPUR
DIST-AHMADNAGAR,MAHARASHTRA
PIN-414111
PH :0241-5601141/ 9822216286/2778336.

NAGPUR

754.** HASAN GARAGE (2021), MOHAN
NAGAR,NAGPUR (MHRS) PIN-440001
PH :0712-2580972/533805.
755.## SHREEJEE SERVICES (2027), CHANDAK
KOTHI,SUBASH ROAD,NAGPUR PIN-440018
PH :0712-2726200/72721690.
756.* SAGAR AUTOMOBILES (2667), MARUTI
AUTHORISED SERVICE STATION,PLOT NO.3
NEAR PETROL PUMP,WARDHA ROAD
UJJWAL NAGAR,NAGPUR PIN-440025
PH :0712-2293413/ 3095521/
9422145365/9960695823.
757.* BALAJI MOTORS (3078), PLOT
NO.18/27,NEAR NAKA NO.-1,KORADI
ROAD,NAGPUR PIN-441111
PH :07120-9960634068.
758.## R. K. MOTORS (3023), 69 A V A
LAYOUT,LAKADGANJ,NAGPUR PIN-440008
PH :0712-2730300/9422113088.
759.** SAGAR AUTOMOBILES (4971),
A-15/28,MIDC,BUTTIBORI,NAGPUR
PIN-440025
PH :9422145365/8552082080.
760.## M S SERVICES (5339), 14 HILL
ROAD,GANDHI NAGAR - NAGPUR,DISTRICT
- NAGPUR,MAHARASHTRA PIN-440010
PH :9373422822.

NANDED

761.## MARUTI CARES AND COLOURS (5778),
LABH NAGAR,BACK SIDE OF SURABH
HOTEL,NANDED,DISTRICT-NANDED,MAHAR
ASHTRA PIN-431605
PH :9225751444.

NANDURBAR

762.* MAULEE MOTORS (4736), SURVEY NO.
130/2, PLOT NO. 43,ADARSHA NAGAR,
NIZAR ROAD,NANDURBAR,MAHARASHTRA
PIN-425412
PH :02362-9822377931/261300.

NASHIK

763.## RACCA SERVICE (3720), (MR. RS
RACCA),RACCA COLONY,SHARANPUR
ROAD,NASIK PIN-422002
PH :0253-2570837/8796939960/8087924594.

764.## SAI AUTOMOBILES (3722), SAPAT
COMPLEX,OPP. PRESS HOSPITAL,NASIK
ROAD,NASIK ROAD PIN-422101
PH :9822027931/2462300.
765.## HITECH AUTO SERVICES (4451),
RAMESHWAR NAGAR,OPP NAVSHYA
GANPATI,GANGAPUR ROAD,NASIK
PIN-422005
PH :0253-9225142471.

NAVI MUMBAI

766.* BOSS (265), AT/P.O. -
TURBHE,SECTOR-22,VASHI,NAVI MUMBAI
PIN-400705
PH :022-27831354/27831358.
767.** CHETAN MOTORS (3143), PLOT NO.45/B
SECTOR 19/A,OPP. GATE NO.2 DANA
BAZAR,BEHIND SHAMIR VITHAL CO-OP
BANK VASHI,NAVI MUMBAI PIN-400705
PH :022-27840564/27840565/27841566.
768.## C G MOTORS (4138), PAPR-73, TTC
INDUSTRIAL AREA,RABALE, OPP RABALE
RAILWAY STATION,THANE- BELAPUR
ROAD,MAHARASHTRA PIN-400701
PH :9821695355, 9820933338.

NIIGDI

769.## SHALU AGENCY (2872), 516/27
PRADHIKARAN,NIGADI,PUNE PIN-411044
PH :020-7652631/7652966.

NIPHAD

770.## SHRI SAI SERVICE STATION (4452), NIPHAD
AURANGABAD
ROAD,NIPHAD,NASIK,MAHARASHTRA
PIN-422101
PH :02550-240320/240321.

OMERGA

771.## SHREE SWAMI SAMARTH SERVICES (5874),
311/1,OPP. H.P. PETROL
PUMP,NH-9,OMERGA,DISTRICT-OSMANABA
D,MAHARASHTRA PIN-413606
PH :02475-252199/9422935656.

PACHORA

772.** POOJA MARUTI SERVICE CENTRE (5564),
PLOT NO 75,PREM NAGAR ,KRISHNA PURI
SHEVAR,PACHORA,DISTRICT -
JALGAON,MAHARASHTRA PIN-424201
PH :02596-9890320803/2596247104.

PALGHAR

773.## SIDDHI MOTORS (5553), THEMBHEDE
ROAD,GANESH KUND,PALGHAR, DISTRICT -
THANE,MAHARASHTRA PIN-401404
PH :02525-256406/ 09890609107.

PANVEL

774.** IDEAL AUTOMOBILES (2279), IDEAL
HOUSE,PLOT NO-83,PANVEL INDUSTRIAL
CO OP ESTATE LTD. PANVE,DISTRICT -
RAIGAD,(MAHARASHTRA) PIN-410206
PH :022-27451607/2250/31508709.
775.** GANGAL MOTORS (2934), PLOT
NO.:125-127,SECTOR-1S,ROAD
NO-5,BEHIND CIDCO GODOWN-NEW
PANVEL,DISTRICT -
RAIGAD,(MAHARASHTRA) PIN-410206
PH :022-27460525.

PARBHANI

776.## SAI SERVICING CENTRE (5252), P7/5
MIDC,PARBHANI,MAHARASHTRA PIN-431401
PH :02452-249099/9326147460.

PASHAN

777.* MARUTI CAR SANJIVINI (5278), SURVEY NO
5/2,SUTARWADI
.SUSROAD,PASHAN,DISTRICT -
PUNE,PUNE,MAHARASHTRA PIN-411021
PH :9996073360.

PATHARDI

778.## SAGAR MOTORS (5979), OPP. TEHSIL
KACHERI,NAGAR ROAD,TALLUKA,
PATHARDI,DISTRICT-AHMEDNAGAR,MAHAR
ASHTRA PIN-414102
PH :0241-2429349/9822197969.

PEN

779.## NAVNATH AUTO (5677), OPPOSITE
RAMWADI,S.T. STAND,NATIONAL
HIGHWAY-17, TAL
PEN,DISTRICT-RAIGAD,MAHARASHTRA
PIN-402107
PH :02143-255948.

PHALTAN

780.## VORA AUTOMOTIVE (2436), SHINGNAPUR
ROAD,KOLKI,PHALTAN PIN-415523
PH :02166-23562/9422606296.

PIMPALGAON

781.## ASHWAMEDHA AUTO (2435),
"ASHWAMEDH",MUMBAI-AGRA
HIGHWAY,PIMPLEGAON (B),DISTT. NASHIK
PIN-422209
PH :02550-9766600064/8275015640.

PUNE

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs
C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs
D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

782.** SAINATH AUTOMOBILES INDUSTRIES
(1569), SURVEY NO.36 PLOT
NO.1,VADGAON KHURD SINHAGAD
ROAD,NEAR GREEN FIELD HOTEL,PUNE
PIN-411041
PH :9890166886.

783.* SANTOOR CAR CARE (2053), ASHOK
PLAZA,32/2 WADGAON SHERI NEAR
WEIKFIELD,PUNE NAGAR ROAD,PUNE
PIN-411014
PH :020-6687799.

784.* APPU SERVICE STATION (4927), BG/SEI
11/10,NEAR TELEPHONE EXCHANGE,MIDC,
BHOSARI,PUNE (MAHARASHTRA)
PIN-411026
PH :020-9422005332/27123838.

785.## APPU AUTOMOBILE (5029), MARUTI
AUTHORISED REPAIR STATION,#81.SR NO
164, TALAWAD ROAD,KANBAY
ROAD,TRIVENI NAGAR,AHARASHTRA
PIN-412114
PH :9371017595.

786.* ATHARVA CAR SERVICES (5161), GUJRATH
COLONY,SARAF LANE,NEAR VANAZ
COLONY,KOTHRUD,PUNE,MAHARASHTRA
PIN-411038
PH :9960690751/9960690761.

787.* MANAS AUTOMOTIVE (5443), SURVEY NO
2/4 PARRANKUTI.LANE NO.1.,KARVE NAGAR
- PUNE,DISTRICT - PUNE,MAHARASHTRA
PIN-411052
PH :020-65002239/9822043007.

788.* MARUTI CARE POINT (3337), S. NO
273/5,BANER ROAD,OPP. VARSHA
PARK,BANER,PUNE,MAHARASHTRA
PIN-411045
PH :020-5663231.

RAHURI

789.* ANAND MOTORS (4152), IN FRONT OF
ASHWINI HOTEL,NAGAR MANMA ROAD,A/P
RAHURI DIST-
AHMADNAGAR,MAHARASHTRA PIN-413722
PH :02426-235662/9822759180/9822159180.

RAVER

790.## RUCHI MOTORS (2631), MARUTI
AUTHORISED SERVICE
STATION,RAVER,DISTT.
JALGAON,(MAHARASHTRA) PIN-425508
PH :02584-9423188307/9423974064/250300.

ROHA

791.* AMIT MOTORS (4972), NANA SHANKAR
SHETH ROAD,ROHA,DISTRICT -
RAIGAD,MAHARASHTRA PIN-402109
PH :02194-9422096149/233290.

SAKURI

792.## SHREE SAI SERVICE CENTRE (5344),
NAGAR-MANMAD ROAD .GODAVARI,HOTEL
JEWEL .PO:SAKURI ,TAL-RAHATA,DISTRICT
- AHMEDNAGAR,MAHARASHTRA PIN-422608
PH :9970741777.

SANGAMNER

793.* SAI MOTORS (2840), NEAR GULEWADI
PHATA,PUNE NASIK ROAD, SANGAMNER
DIST. AHMEDNAGAR,(MHRS.) PIN-422608
PH :02424-227513.

SANGLI

794.** ASHOK AUTOMOBILES (3723),
595/B,M.G.ROAD,SANGLI PIN-416416
PH :0233-375961/9823053596.

795.## BALAJI AUTO SERVICE (1564), PLOT
NO.43.GOLDEN PARK,BYPASS
ROAD,SANGLI,
DISTRICT-SANGLI,MAHARASHTRA
PIN-416416
PH :9822106126.

796.* AWATI MOTORS (4772), PADMAVATI
COLONY,NEMINATH NAGAR
VISHRAMBHAG,SANGLI,MAHARASTRA
PIN-416415
PH :9422407284.

SATANA

797.## PATHAK MOTORS (5037), YASHWANT
NAGAR,TAHARABAD
ROAD,SATANA,DISTRICT -
NASIK,(MAHARASTRA) PIN-411014
PH :9890216257.

SATARA

798.## SIDDHI AUTOMOBILES (5464),
294/A,DEGAON PATA -
SATARA,RAHAMTPUR ROAD,MIDC
SATARA,DISTRICT -
SATARA,(MAHARASTRA) PIN-415004
PH :9860639368.

SAWANTWADI

799.* VENKATESHA AUTO CARE (1659), PLOT
NO.21 MUMBAI GOA
HIGHWAY,KOLGAON-BHOM,SAWANTWADI,
MAHARASHTRA PIN-416510
PH :02363-274164/271533/9423304639.

SHAHADA

800.## MATOSHREE AUTOMOBILES (2870), NO.558
SHAHADA DHONDAICHA ROAD,TAL.
SHAHADA,NANDURBAR
DISTT.,(MAHARASHTRA) PIN-425409
PH
:02565-226030/227340/9890530937/942172623
0/9403801484.

SHIRDI

801.## SHREE GANESH AUTO CARE (4268), POST
SAKURI,TALUKA RAHATA,AHMEDNAGAR
PIN-423107
PH :02423-243192/ 243450/9422726052.

SHOLAPUR

802.** BALAJI MOTORS (1930), 8536 B/1 MURARJI
PETH,OPP. OLD PUNE NAKA
OFFICE,SOLAPUR PIN-413002
PH :629696/ 629595/9823111110.

SHRIRAMPUR

803.* G.K. MOTORS (2871), K.V.
ROAD,SHRIRAMPUR,DISTT. AHMEDNAGAR
PIN-413709
PH :952422-8446222297.

THANE

804.* PATRICIA AUTOMOBILES (529), 34 AMAR
GION SER.& OFFICE COMPLEX,AGRA
RD.,THANE (MHRS) PIN-400601
PH :022-25471105/9987175866.

805.** THANAWALA MOTOR AGENCY (3724),
DHIRAJ BAUG,L.B.S. MARG,NEAR
HARINIWAS CIRCLE,THANE PIN-400602
PH :022-67302222.

806.** STERLING MOTOR GARAGE (555), OPP.
RAVI STEEL INDUSTRIES,2ND POKHRAN
ROAD,THANE PIN-400601
PH :022-25890325/
25890892/25891981/9224019485.

807.* TOP GEAR AUTOMOBILES (4840), SAI
NAGAR,GHODBUNDER
ROAD,KASARVADAVALI,THANE (W)
PIN-400601
PH :022-64509201/64526472.

808.* SEAN MOTORS (5377), DONTALAV -
VATAR,(W),VIRAR SATPALA
ROAD,TAL-VASAI,
DISTT-THANE,MAHARASHTRA PIN-401301
PH :9324003123.

ULHASNAGAR

809.* MODERN CAR CARE (3260), 171/2.RRV
INDUSTRIAL AREA,BEHIND SAI BABA
MANDIR,
SHANTINAGAR,ULHASNAGAR,MAHARASHT
RA PIN-421003
PH :0251-2732027/9322542027/9619692027.

810.* CHIMAN AUTOMOBILES (3845), NEAR KAJAL
PETROL PUMP,BALANI
COMPOUND,VITHALWADI STATION
ROAD,ULHASNAGAR PIN-421003
PH :0251-2557790/2561627.

URAN

811.## SAI AUTOMOBILES (5665), STATE HIGHWAY
NO.56,NEAR JASAI NAKA,JASAI VILLAGE,
URAN,DISTRICT - RAIGAD,MAHARASHTRA
PIN-410206
PH :64213533.

VADA

812.## SAI MOTORS & SERVICE CENTRE (5675),
AT-GANDRE,PO-TUSE,TAL-VADA-421303,DIS
TRICT - THANE,MAHARASHTRA PIN-421303
PH :9270005533.

VITA

813.## SONA AUTOMOTIVE (5671), YASHWANT
NAGAR,NEAR WATER TANK,ROAD NO.10 -
VITA,DISTRICT - SANGLI,MAHARASHTRA
PIN-415311
PH :9960708270.

WAI

814.## ADITYA AUTO SERVICE (4271), WAI SATARA
ROAD,WAI,SATARA DIST. PIN-412803
PH :02167-9423971005.

WARDHA

815.## BHARAT MOTOR (1631), NAGPUR
ROAD,NALWADI,WARDHA,MAHARASHTRA
PIN-442001
PH :07152-9881588388.

WARORA

816.## ROHIT AUTOMOTIVE (5873),
NAGPUR,CHANDRAPUR
ROAD,VINAYAK-LAYOUT, TILAK WARD,
WARORA,DISTRICT-CHANDRAPUR,MAHARA
SHTRA PIN-442907
PH :07176-281099/9226118165.

YAVATMAL

817.## RAMESH MOTORS (2024), GARDEN
ROAD,YAVATMAL,MAHARASHTRA
PIN-445001
PH :07232-243330/246660.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

818.## M.S. MOTORS (460), AMRAVATI ROAD
HIGHWAY, LOHARA, YAVATMAL PIN-445001
PH : 249207/651565.

YEOLA

819.## BIJASANI AUTOMOTIVE (3041),
NAGAR-MANMAD ROAD, YEOLA, DIST. NASIK
(MAHARASHTRA) PIN-452005
PH : 02559-09923204225/9423185025.

MANIPUR

IMPHAL

820.## BORDIN MARUTI GARAGE (4879),
MOIRANGKHOM, LOKLAOBUNG, IMPHAL, MA
NIPUR PIN-795001
PH : 0385-9436023659/2455460/2536551.

SENAPATI

821.## KOMUO MARUTI WORKS (4644),
NH-39, TAPHOU
RIKHUMAI, SENAPATI, MANIPUR PIN-795106
PH : 9436072671/9436422938.

MEGHALAYA

TURA

822.## MULTI MOBILE PRECISION (3222),
OPP. MECOFED, CENTRAL GODOWN, NEW
JAIL ROAD ARAI MILE, TURA PIN-794001
PH : 03651-8974037020.

MIZORAM

CHAMPAI

823.## IRDIV- TC AUTO WORKS (5744), SVENTH
DAY TLANG, ZOTLANG ROAD, NEW
CHAMPHAI-CHAMPHAL, DISTRICT-CHAMPHAI
MIZORAM PIN-796001
PH : 9862405715.

LUNGLEI

824.## LAWMA ENGINEERING WORKS (3125), A O
C SQUARE, LUNGLEI, MIZORAM PIN-796701
PH : 0372-2325035.

NAGALAND

DIMAPUR

825.** ERJO MOTORS (4871), 123 BANK
COLONY, DIMAPUR, NAGALAND PIN-797112
PH : 03862-231888.

ORISSA

ANGUL

826.## ZEET AUTOMOBILES (1573), NALCO
NAGAR, KANDASAR, ANGUL, ORISSA
PIN-759145
PH : 06764-221885/9437065053.

BALANGIR

827.## ASHIRWAD AUTOMOBILE WORKS (3177),
DAMJI GARAGE, THIKADARPARA, BALANGIR
PIN-767001
PH : 06652-233345/231896.

BALESHWAR

828.## AUTO CARE (432), AT -
AZIMABAD, BALASORE, BALASORE
PIN-757001
PH : 06782-645321, 9437051944/9437285606.

829.* TEKNO INDIA (3666), D-2/9 INDUSTRIAL
AREA, O.T. ROAD, BALASORE, (ORISSA)
PIN-756003
PH : 06782-266879/9437953595/9861034990.

BARBIL

830.## INDU MOTORS (3241), IN FRONT OF UTKAL
AUTOMOBILES, JODA-BARBIL
HIGHWAY, BARBIL, (ORISSA) PIN-758035
PH : 06767-276158/ 276727/9337383947.

BARGARH

831.## CARSCAN (1164), PLOT - 1/1 INDUSTRIAL
ESTATE, RAILWAY STATION
ROAD, BARGARH PIN-768028
PH : 06646-232820.

BHUBANESWAR

832.## INDO JAPAN SERVICE (4936), PLOT NO. 18,
19, 30 & 31, BHAGABANPUR INDUSTRIAL
ESTATE, PO.
PATRAPADA, BHUBANESHWAR, ORISSA
PIN-752019
PH : 0674-2470033, 6545624, 9861124660,
9861095444.

CUTTACK

833.* DURGA SERVICE CENTRE (427), NEAR
PALAMANDAP, BADAMBADI, PO -
ARUNODAY MARKET, DISTT - CUTTACK
PIN-753012
PH : 0671-2311261/2315762.

834.* AUTO MATES (426),
MADHUPATNA, CUTTACK PIN-753010
PH : 0671-2311646/2322646 /2322646.

DHENKANAL

835.## ANAND AUTOMOBILES (5449), ANAND
NAGAR, IN FRONT OF TARINI
MANDIR, DISTRICT - DHENKANAL, (ORISSA)
PIN-759001
PH : 06762-9437414972/243272.

JHARSUGUDA

836.## AUTO MECHANIKA (2638), S.H.-10
BEHERAMAL, JHARSUGUDA, ORISSA
PIN-766203
PH : 06645-273510/9040280001.

PARALAKHEMUNDI

837.## GANAPATI AUTOMOBILES (3178), B.
SITAPUR, PARALAKHEMUNDI, DIST.
GAJAPATI, (ORISSA) PIN-761200
PH : 06815-322765/9437140023.

PURI

838.## URMILA MOTORS (5040), HERA GOHRI SAHI
CHOWK, PURI -1, DISTRICT - PURI, (ORISSA)
PIN-752001
PH : 06752-223820/9776008748/9861110745.

SAMBALPUR

839.# ANITA AUTO CARE (4834), SALIA
BAGICHA, LIONS CLUB
ROAD, KUMBHARPURA, SAMBALPUR
(ORISSA) PIN-768001
PH : 0663-9437068044/2403044/ 9861248403.

SEMILIGUDA

840.## ASHUTOSH MOTORS (5035), MAIN ROAD.
NH-43, SEMILIGUDA, DISTRICT-KORAPUT, (O
RISSA) PIN-764036
PH : 919437405417/9939639257.

PONDICHERRY

KARAIKAL

841.## MARUTI TECH (2669), NO.1,
AKKARAIVATTAM, NAGAOORE MAIN
ROAD, OPP TO
ONGC, KARAIKAL, DISTRICT-KARAIKAL, PON
DICHERRY PIN-609604
PH : 04368-227101/9842383125.

PONDICHERRY

842.** S D K MOTORS (471), PLOT NO.12, 100 FEET
ROAD, OZHANDAI KEERAPALAYAM
MUDALIARPET, PONDICHERRY PIN-605004
PH : 0413-2358540/9843045689.

843.* A.P.P. MARUTI MOTORS (2670), PLOT NO.6
GUNDU SALAI ROAD, NATESAN
NAGAR, NEAR 100 FEET
ROAD, PONDICHERRY PIN-605005
PH : 0413-2240844/9894059004.

844.## MARUTI MISSION (5067), 60 RAGAVENDIRA
NAGAR, KAMARAJ
SALAI, THATTANCHAVADY
PONDICHERRY, TINDIVANAM
ROAD, PONDICHERRY PIN-605009
PH : 0413-22411100/9786589000.

PUNJAB

AHMEDGARH

845.## GAHIR AUTOMOBILES (2877), LUDHIANA
MALER KOTLA ROAD, VILL. GOPALPUR
CITY, AHMEDGARH, (PUNJAB) PIN-141001
PH : 01628-9878854118.

AJNALI

846.# VISHWAKARMA MOTORS (5666), NEAR
VIMAL DHARAMKANTA - AJNALI, DISTRICT -
FATEHGARH SAHIB, PUNJAB PIN-140406
PH : 9814528084.

AMLOH

847.## BINDRA MOTORS (5844), NEAR DESH
BHAGAT COLLEGE
SONTI, AMLOH, DISTRICT-FATEH GARH
SAHIB, PUNJAB PIN-147301
PH : 9814882000.

AMRITSAR

848.** KAPOOR'S KAR KARE (737), I/S MAHA
LAKSHMI, CALICO PRINTING MILLS, OLD JAIL
ROAD, AMRITSAR (PUNJAB) PIN-143001
PH : 9814213113.

849.* SAGGU SERVICE STATION (733), HIDE
MARKET, AMRITSAR (PUNJAB), AMRITSAR
(PUNJAB) PIN-143001
PH : 9888005610.

850.** HANSON AUTOMOBILES (1722), MAQBOOL
PURA, G.T. ROAD, AMRITSAR PIN-143001
PH : 9815167669/6427010988.

851.** JACKSON LUBRICANTS (364), 16 COURT
ROAD, NEAR RAVI GAS AGENCY, AMRITSAR
PIN-143001
PH : 9814299944.

BANUR

852.## AMRIK SERVICE STATION (2433), PATIALA
ROAD, BANUR, DISTT. PATIALA (PUNJAB)
PIN-140601
PH : 9815591325.

BARNALA

853.* PUNJAB MOTOR GARAGE (6222),
DHANAULA ROAD, BARNALA
(PUNJAB), BARNALA (PUNJAB) PIN-148101
PH : 9876130360.

854.## GAURAV MOTORS (4962), DHANAULA
ROAD, BARNALA, DISTRICT
SANGRUR, PUNJAB PIN-148101
PH : 01679-9317512916.

BHADSON

855.## FRIENDS MOTORS (2233), NABHA
ROAD, BHADSON, DISTT. PATIALA, (PUNJAB)
PIN-147202
PH : 9815700778.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

BHATINDA

- 856.## SUPER AUTOMOBILES (6232),
TINKONI,GONIANA ROAD,BHATINDA
PIN-151001
PH :0164-9814036163.
- 857.** MODERN MOTORS (6234), OPP. T.V.
TOWER,MANSA ROAD,BHATINDA
PIN-151001
PH :98141777075.
- 858.## KRISHNA AUTOS (4571), 40 FEET NAMDEV
ROAD,NEAR DELHI ESCORTS HEART
HOSPITAL,BATHINDA,PUNJAB PIN-151001
PH :0164-9888671810.

BUDHLADHA

- 859.## JINDAL AUTOMOBILES (2147), NEAR
P.S.E.B.,BHIKHI ROAD,BUDHLADA,DISTT.
MANSA PIN-151502
PH :9815516964.

DERABASSI

- 860.## BINDAL AUTOMOBILES (1248),
CHANDIGARH AMBALA ROAD,PARAS RAM
MARKET,DERA BASSI PIN-140507
PH :01762-9914449711.

DHURI

- 861.## SHIV MOTORS (1982), NEAR OCTROI
POST,SANGRUR ROAD,DHURI PIN-148024
PH :9872851068.

DINANAGAR

- 862.## D.S. MARUTI SERVICE STATION (3333), G.T.
ROAD,DINA NAGAR,DIST.
GURDASPUR,(PUNJAB) PIN-143531
PH :9814695433.

DIRBA

- 863.## PENTAGON MECHANICAL WORKS (2564),
JIND-SANGRUR ROAD,DIRBA,DISTT.
SANGRUR,(PUNJAB) PIN-148035
PH :01672-242525.

DORAHA

- 864.* FATEH MOTORS (2048), G.T.
ROAD,DORAHA,(LUDHIANA) PIN-141421
PH :01628-9814031784.

FAZILKA

- 865.## BAHL MOTORS (6229), ABOHAR
ROAD,FAZILKA PIN-152123
PH :01638-9888620550.

FEROZEPUR

- 866.## SUTLEJ AUTOMOBILES (3568), G.T.
ROAD,FEROZEPUR CANTT,(PUNJAB)
PIN-152001
PH :01632-9815144790.

- 867.## BOBB MOTORS (4378), NEAR BSF
COLONY,MOGA ROAD,FEROZEPUR CANTT
PIN-152001
PH :01632-9814090331.

GIDDERBAHA

- 868.* JIWAN CAR CENTRE (3442), BHATINDA
ABOHAR,NATIONAL
HIGHWAY,GIDDERBAHA,DIST. MUKETSAR
(PUNJAB) PIN-152101
PH :01637-9814730286.

GOINDWAL SAHIB

- 869.## DAS MOTORS (3537), KAPURTHALA
CHOWK,GOINDWAL SAHIB,DISTT.
AMRITSAR,(PUNJAB) PIN-143429
PH :01859-9914699121.

GORAYA

- 870.## GORAYA AUTOMOBILES (4434), G.T.
ROAD,GORAYA,DISTT PHAGWARA,PUNJAB
PIN-144409
PH :01827-9814002617.

GURDASPUR

- 871.* VIJAY SERVICE STATION (749), NEAR
RAILWAY CROSSING,PATHANKOT
ROAD,GURDASPUR,(PUNJAB) PIN-144001
PH :9814437637.

HOSHIARPUR

- 872.## JOGINDER MOTORS (2268), BYE PASS
TANDA ROAD,HOSHIARPUR PIN-146001
PH :9218519763.

JAGRAON

- 873.## DHALIWAL AUTOMOBILES (2035), NEAR
AJANTA PETROL PUMP,G.T.
ROAD,JAGRAON DISTT.
LUDHIANA,(PUNJAB) PIN-141003
PH :01624-9814318600.

JALANDHAR

- 874.** KAAR KARES (725),
G.T.ROAD,JALANDHAR,(PUNJAB)
PIN-144001
PH :0181-231938.
- 875.* PUNJAB MOTOR GARAGE (1575), HNV
CHOWK,G.T. ROAD,JALANDHAR PIN-144008
PH :9317512360.
- 876.* KAPOOR MOTOR GARAGE (1649), OPP.
SPORTS COLLEGE,KAPURTHALA
ROAD,JALANDHAR CITY PIN-144008
PH :9815543853.

- 877.## CITY POINT SERVICE STATION (4528),
AVTAR NAGAR ROAD,BEHIND T.V.
CENTRE,OPP HOTEL REGENT
PARK,JALANDHAR PIN-144008
PH :0181-9888362255.

KAPURTHALA

- 878.## T.S. WALIA MOTORS (267),
MANSOORWAL,JALLANDHAR
ROAD,KAPURTHALA PIN-144601
PH :9357211525.
- 879.## AVTAR AUTO TECH (5329), KANJLI ROAD,
NEAR OCTROI,KAPURTHALA,PUNJAB
PIN-144601
PH :9888262026.

KURALI

- 880.## VISHWAKARMA MOTORS (3335), PRAKASH
ICE FACTORY,CHANDIGARH
ROAD,KURALI,(PUNJAB) PIN-140103
PH :01888-9814273873.

LALRU

- 881.## VIKAS MOTORS (2777), IOC PETROL
PUMP,AMBALA CHANDIGARH ROAD,LALRU
DISTT. PATIALA,PUNJAB PIN-147001
PH :9216069888.

LUDHIANA

- 882.** PUNJAB AUTO CENTRE (6221), OPP
TELEPHONE EXCHANGE,BHARAT NAGAR
CHOWK,LUDHIANA PIN-141001
PH :9855117003.

- 883.* REEHAL AUTOMOBILE SERVICES (1176),
OPP. JAMALPUR POWER
HOUSE,CHANDIGARH ROAD,LUDHIANA
PIN-141010
PH :0161-2680309.

- 884.## VISHAL AUTOMOBILES (1262), G.T.
ROAD,DHOLEWAL,LUDHIANA PIN-141003
PH :9815206060.

- 885.## SATNAM MOTOR WORKSHOP (4533), OPP
MILK PLANT,FIROZPUR ROAD,LUDHIANA
PIN-141001
PH :0161-9855228591.

- 886.## STAR AUTOS (4650), JALANDHAR BY
PASS,G.T. ROAD,LUDHIANA PIN-141003
PH :0161-9216844220.

MALOUT

- 887.## DELHI MOTORS (6225), TINKONI
CHOWK,BHATINDA ROAD,MALOUT
PIN-152107
PH :9814874061.

MANDI GOBINDGARH

- 888.## NATIONAL MOTORS (1070), G.T.
ROAD,NEAR P & S BANK,MANDI
GOBINDGARH PIN-147301
PH :9876181801.

MANSA

- 889.## RAJ AUTOMOBILES (2162), NEAR N.M.
COLLEGE,MANSA,(PUNJAB) PIN-151505
PH :01652-9872679591.

MOGA

- 890.* GURU NANAK MOTOR REP. WORK (732),
G.T.ROAD,MOGA,(PUNJAB) PIN-142001
PH :9914121387.

MOHALI

- 891.** MOHALI MOTORS (756), C-55 INDUSTRIAL
AREA,PHASE-VI,S.A.S. NAGAR,MOHALI
PIN-160055
PH :9501506065.
- 892.** SETHI MOTORS (4742), PLOT NO.
E-159 INDUSTRIAL AREA,
PHASE-7,MOHALI,PUNJAB PIN-160055
PH :9814307002.
- 893.## UNIPOINT (5043), PLOT NO. 593,INDUSTRIAL
AREA PHASE-IX. MOHALI,DISTRICT -
MOHALI,(PUNJAB) PIN-160055
PH :9316108300.
- 894.** BENZ AUTO SCAN (5734), E-153, PHASE
7,INDUSTRIAL AREA
-MOHALI,DISTRICT-MOHALI,PUNJAB
PIN-160059
PH :0172-9815654303.

MOONAK MANDI

- 895.## GOYAL SERVICE STATION (6034),
TOHANA-SURJAN, BHAINI ROAD,MOONAK
MANDI,DISTRICT-SANGRUR,PUNJAB
PIN-148033
PH :08427346677.

MORINDA

- 896.## SONY MOTOR PALACE (1077), SIRHIND
ROAD,MORINDA PIN-140101
PH :9818612477.

MUKERIAN

- 897.## NEW MODERN AUTOMOBILES (4437), G.T.
ROAD,MUKERIAN,PUNJAB PIN-144211
PH :01883-9463292013.
- 898.* MARSHAL SALES CORPORATION (5251),
PATHANKOT ROAD, NEAR RADHA
SOAMI,SATSANG GHAR -
MUKERIAN,DISTRICT -
HOSHIARPUR,PUNJAB PIN-144211
PH :9872335923.

MUKTSAR

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

899.## MALWA MARUTI CENTRE (4764),
KOTKAPURA ROAD,MUKTSAR,PUNJAB
PIN-152026
PH :01633-9914133987.

NAKODAR

900.## MEHTA MOTORS (3531), KHADDAR
BHANDAR ROAD,NAKODAR PIN-141310
PH :9815600082.

PATIALA

901.## RAJINDRA MOTORS (4935),
C-177,INDUSTRIAL FOCAL
POINT,PATIALA,PUNJAB PIN-140401
PH :0175-9316200335.

902.** PARAS MOTORS (4778), PLOT NO.
25-A,NEAR HOTEL FLYOVER FACTORY
AREA,PATIALA,PUNJAB PIN-147001
PH :9814089861.

PATTI

903.## ANU AUTOMOBILE (2747), AMRITSAR
ROAD,NEAR RADHA SWAMI
SATSANG,PATTI DISTT.
AMRITSAR,(PUNJAB) PIN-143001
PH :01851-9876342843.

PHAGWARA

904.## SWAMI MOTORS (3774), (PAMMI
W/SHOP),OPP. B.N. DUGGAL PETROL
PUMP,G.T. ROAD,PHAGWARA DIST.
KAPURTHALA PIN-144401
PH :9815107989.

905.## VIVA MOTORS (4740), G.T.
ROAD,PHAGWARA,DISTRICT-KAPURTHALA,
PUNJAB PIN-144463
PH :01824-9814310021.

PHILLAUR

906.## DHANJU MOTORS (1647), NURMEHAL
ROAD,PHILLAUR,DISTT. JALANDHAR
PIN-144410
PH :9814454963.

QADIAN

907.# HI-TECH AUTOMOBILES (4945), VILL
NATHPUR BATALA
ROAD,QADIAN,DISTRICT-GURDASPUR,PUN
JAB PIN-143516
PH :9464066479.

RAIKOT

908.## RANA SUPREME MOTOR GARAGE (3732),
NEAR GURUDWARA TAHLIANA
SAHIB,BARNALA BYE PASS
ROAD,RAIKOT,DISTT. LUDHIANA (PUNJAB)
PIN-141109
PH :01624-9814265791.

RAJPURA

909.## NOOR MOTORS (3045), PATIALA
ROAD,RAJPURA,(PUNJAB) PIN-140401
PH :01762-9855421786.

RAMPURAPHUL

910.## VIRDI MOTOR GARAGE (3046), BARNALA
ROAD,RAMPURAPHUL,DISTT.
BATHINDA,(PUNJAB) PIN-151103
PH :01651-9815472217.

911.## BALAJI AUTOMOBILES (4443), BARNALA
ROAD,RAMPURA PHUL,DISTT
BHATINDA,PUNJAB PIN-151103
PH :01651-9815443444.

SAMANA

912.* CITY MOTORS (1867), P.B.NO.11,MAIN
ROAD,SAMANA,DISTT. PATIALA (PUNJAB)
PIN-147101
PH :01764-9814864180.

SANGRUR

913.** RAKESH MARUTI SERVICE (6325), JIND -
DELHI ROAD,NEAR E.S.I.
DISPENSARY,SANGRUR PIN-148001
PH :01672-9814064202.

914.## SANGRUR MARUTI CENTRE (1632), PATIALA
ROAD,OPP. MILITARY
CAMPUS,SANGRUR,(PUNJAB) PIN-148001
PH :01672-232340.

SIRHIND

915.## BADRI DHAM CAR SERVICE (1062), G.T.
ROAD,SIRHIND PIN-140406
PH :9417045975.

916.## MALHOTRA MOTORS (4657), OPP. INCOME
TAX OFFICE,SIRHIND,DISTT FATEHGARH
SAHIB,PUNJAB PIN-140406
PH :9815844008/500600.

SULTANPUR LODHI

917.## HANDA MOTORS (2776), TALWANDI
ROAD,SULTANPUR LODHI,DISTT.
KAPURTHALA,(PUNJAB) PIN-144626
PH :01828-9814213113.

SUNAM

918.## SUNAM AUTOMOBILES (3924), PATIALA
ROAD,NEAR OCTROI POST,SUNAM,DISTT.
SANGRUR PIN-148028
PH :01676-3026118.

TANDA

919.## MALWA AUTO CARE CENTRE (2073), G.T.
ROAD BY-PASS,TANDA,DISTT.
HOSHARPUR,(PUNJAB) PIN-146001
PH :9814392103.

TARN TARAN

920.## GURMEET MOTORS (4757), CHABHAL
KHURD,TARN TARAN,DISTRICT-
AMRITSAR,PUNJAB PIN-143001
PH :9356115101.

ZIRA

921.## NEW AUTOMOBILES (5477), NEW TALWANDI
ROAD, ZIRA,DISTRICT - MOGA,PUNJAB
PIN-142047
PH :01682-9463240231.

RAJASTHAN

ABU ROAD

922.## UNIQUE MOTORS (4923), MOUNT
ROAD,AKRABHATTA,ABU
ROAD,(RAJASTHAN) PIN-307026
PH :02974-228414/9929177781.

AJMER

923.## ASHOK AUTOMOBILES (1121), BYEPASS
ROAD,PARVATPURA,IND AREA,AJMER
(RAJASTHAN) PIN-305001
PH :0145-2695233/2695076.

ALWAR

924.## VERTEX AUTOMOBILES PVT. LTD. (1944),
CHANDUKA BHAWAN,SWARG ROAD,ALWAR
PIN-301001
PH :0144-2335733/2342117/9828233299.

925.## POOJA MOTORS (5439), POOJA
MOTORS,NEAR AMARNATH PETROL,PUMP,
DELHI ROAD ,MUNGSKA - ALWAR,DISTRICT
- ALWAR,RAJASTHAN PIN-301001
PH :0144-9414640279/2700921/2371382.

BAGRU

926.## NARAYAN MOTORS (5272), N.H.8. AJMER
ROAD- BAGRU,DISTRICT -
JAIPUR,RAJASTHAN PIN-302001
PH :0141-2864504/5123711.

BARMER

927.* VEW SERVICE (1238), S-181 &
182,RIICO,BARMER,(RAJASTHAN)
PIN-344001
PH :02982-223329/227339/9410158584.

BASSI

928.## YARDHANI MOTORS (5358), NEAR NALAYA
BASSI,DISTRICT - JAIPUR,RAJASTHAN
PIN-304505
PH :01429-9414312552/222317.

BEHROR

929.## K.L. INTERNATIONAL AUTOMOBILES (1763),
DELHI JAIPUR HIGHWAY,VILLAGE
DHAMI,P.O. KANKARDOPA,TEHSIL BEHROR
DIST. ALWAR (RAJASTHAN) PIN-301701
PH :01492-221396/9414014603.

BHARATPUR

930.** CLASSIC MOTORS (2348), DEEG
ROAD,KUMHER
GATE,BHARATPUR,(RAJASTHAN)
PIN-321001
PH :05644-229301/9414026545.

BHILWARA

931.* QUICK SERVICES (3473), SABUN
MARG,PURAN DAS JI KI
BAGICHEE,BHILWARA PIN-311001
PH :01482-226536/223456.

932.## NATIONAL SERVICE CENTER (4761),
SANGANER COLONY,KOTA
ROAD,BHILWARA,RAJASTHAN PIN-311001
PH :01482-329586/256146.

BHINIMAL

933.## GURJAR MOTORS (5567), RAMSIN
ROAD,OPP PRADEEP PETROL
PUMP,BHINMAL,DISTRICT -
JALOR,RAJASTHAN PIN-343029
PH :02969-290962.

BHIWADI

934.** WHEEL-O-CITY (4246), E-7D (A)
PHASE-1,NEAR RIICO
CHOWK,BHIWADI,RAJASTHAN PIN-301019
PH :01493-225555/290962.

BIKANER

935.## GENERAL AUTOMOBILES (1123), RANI
BAZAR,RAIWAY CROSSING,BIKANER
(RAJASTHAN) PIN-334001
PH :0151-2200338/2549072.

936.## VISHI MOTORS (5559), PLOT NO 55(A) ,J.A.
RANI BAZAR-BIKANER,DISTRICT -
BIKANER,RAJASTHAN PIN-334001
PH :9829027128.

BUNDI

937.## SHREE JI MOTORS (2174), OPP. KUMBHA
STADIUM,KHOJA
GATE,BUNDI,(RAJASTHAN)PIN-323001
PH :0747-2443181/5120455.

CHITTORGARH

938.## SISODIA MOTORS (5673), 31.OLD
INDUSTRIAL AREA,BYE PASS
ROAD,CHITTORGARH,DISTRICT -
CHITTORGARH,RAJASTHAN PIN-312001
PH :01472-241476.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

CHOMU	939.##	SHREE LAXMI MOTORS (3072), MORIJA ROAD,CHOMU,JAIPUR,(RAJASTHAN) PIN-303702 PH :01423-207248/9828160281.
CHURU	940.*	ABS MOTORS (2978), JAIPUR ROAD,CHURU,(RAJASTHAN) PIN-331001 PH :01562-252333/257333.
DAUSA	941.##	BALAJI MOTORS (4564), NEW MANDI ROAD,NEAR TRANSFORMER,DAUSA PIN-303303 PH :01427-9414273443/9828169601.
DHAULPUR	942.##	NARSING SERVICE CENTRE (3074), NEAR JAGDISH TALKIES,BARI ROAD,DHOLPUR,(RAJASTHAN) PIN-328001 PH :05642-223888/231888.
	943.**	NARAYAN MOTORS (3345), G.T. ROAD,DHOLPUR,(RAJASTHAN) PIN-328001 PH :05642-240697/9414027335.
DIDWANA	944.##	SANTOSH AUTOMOBILES (5450), SANTOSH ATUOMOBILES ,KUCHAMAN ROAD,DIDWANA,DISTRICT - NAGAU,(RAJASTHAN) PIN-341303 PH :01580-9414118142/220909.
DUDU	945.##	NEETA AUTOMOBILE (4855), C/O NEW JAIN GUEST HOUSE,NH-8, JAIPUR AJMER ROAD,DUDU, RAJASTHAN PIN-302006 PH :01428-513229/9828307560.
JAIPUR	946.##	SUPREME MOTORS (1130), A-25 ASSAM MANSION,TRANSPORT NAGAR,JAIPUR PIN-302003 PH :0141-2617030/4033993.
	947.*	RIGHTWAYS CO. (1131), KISHANPOLE BAZAR,JAIPUR,JAIPUR PIN-302001 PH :0141-2372436/4022436.
	948.*	SERVICE CENTRE (1139), OPP. TOURIST HOTEL,M.I. ROAD,JAIPUR PIN-302001 PH :0141-2374009/4009469.
	949.**	CAR CLINIC (1141), PLOT NO.6,GIRDHAR COLONY,SIKAR ROAD,JAIPUR PIN-302013 PH :0141-2232790/3293308.
	950.**	JAI SHRI RAM AUTO SERVICE CENTRE (1140), OPP. SHYAM NAGAR,AJMER ROAD,JAIPUR PIN-302026 PH :0141-2221241/9829055605.
	951.**	SAISHA MOTORS (1764), MAIN SHIPRA PATH,OPP. SECTOR 93,AGARWAL FARM,JAIPUR PIN-302020 PH :0141-2399196/9414454820.
	952.*	AMGI AUTOMOBILES (1938), AIRPORT CIRCLE,KOTA ROAD,JAIPUR PIN-302011 PH :550869.
	953.##	J.K. AUTOMOBILES (2058), 38 SUSHILPURA,AJMER ROAD,JAIPUR PIN-302007 PH :0141-992899044/2810500.
	954.*	SHARP MOTORS (2032), J-3 HIMMAT NAGAR,MAIN TONK ROAD,GOPAL PURA CIRCLE,JAIPUR PIN-302004 PH :0141-2705493/2211386.
	955.##	LAXMI MOTORS (2576), 24 GANGA JAMUNA CROSSING,OPP. JK PETROL PUMP,NEAR SANGANER ROAD MANSAROVAR,JAIPUR PIN-302019 PH :014-5051892/5145892.
	956.##	ALFA MOTORS (3347), MAHALAXMI NAGAR,OPP. HEERAPURA POWER HOUSE,AJMER ROAD,JAIPUR PIN-302006 PH :0141-6457989/2297229/9829014959.
	957.##	TOSHNIWAL AUTOMOBILES (3475), 131 SHRI GOPAL NGAR,GOPALPURA BYEPASS,JAIPUR,(RAJASTHAN) PIN-302015 PH :0141-2504296/5063836.
	958.*	M. R. MOTORS (4857), PLOT NO. 120-121 & 125-126,VANE VIHAR, 200FT BYE PASS,JHOTWARA,JAIPUR (RAJASTHAN) PIN-302016 PH :0141-9314881528/2340196.
	959.##	A 1 MOTORS (4856), D-28 MALVIYA NAGAR,INDUSTRIAL AREA JAIPUR,DISTRICT - JAIPUR,RAJASTHAN PIN-302017 PH :9414047628.
	960.##	SRINATH ENTERPRISES (4852), GOPALPURA BYEPASS.NEAR -DELHI KISHANGARH,HIGHWAY, JAIPUR,DISTRICT - JAIPUR,RAJASTHAN PIN-302018 PH :0141-9414044655/3234798.
	961.##	KRISHNA AUTOMOBILES (5363), B-27 SUNDAR NAGAR ,MANSAROVAR,JAIPUR,DISTRICT - JAIPUR,RAJASTHAN PIN-302020 PH :0141-3107748.
	962.##	EDEN AUTO PARTS & SERVICE CENTER (5473), CC-134 ,135, GOLE MARKET, NEAR,MAA KA HOTEL, JAWAHAR NAGAR,JAIPUR,(RAJASTHAN) PIN-302004 PH :0141-2650242/9799296.
	963.##	KATARIA MOTORS (2577), 9-A NEMINAGAR VISTAR,AMRAPALI MARG,VAISHALI NAGAR,JAIPUR PIN-302021 PH :0141-2350904/9414468024/2352136.
JAISALMER	964.##	R.R. AUTOMOBILES (1473), OPP. GEETA ASHRAM,JAISALMER,(RAJASTHAN) PIN-345001 PH :02992-9414150203.
JHUNJHUNU	965.##	DADHIMATI MOTORS (1648), OPPOSITE RSEB OFFICE,BAGAR ROAD,JHUNJHUNU,(RAJASTHAN) PIN-333023 PH :01592-233853/9414346562.
	966.##	VISHWAKARMA AUTOMOBILES (3071), HPC DEALER,RANI SATHI ROAD,JHUNJHUNU,(RAJASTHAN) PIN-333001 PH :015972-32441.
JODHPUR	967.*	P.D. MOTORS (3340), NATIONAL HIGHWAY NO. 65,PALI ROAD,NEAR JHALAMAND CHORAYA,JODHPUR PIN-342005 PH :0291-2724485/2722495.
	968.##	DEORA MOTORS (5353), UPPER UNDER BRIDGE. PAOTA 'C' ROAD,JODHPUR,DISTRICT - JODHPUR,RAJASTHAN PIN-342006 PH :0291-9829026069/2550707.
KALWAR	969.##	ROHLANIYA MOTORS (5554), KALWAR MAIN TIRHIA ,NEAR KHARBAS,NEAR PETROL PUMP, JHOTWARA ROAD,DISTRICT - KALWAR,RAJASTHAN PIN-302017 PH :0141-9829055634.
KISHANGARH	970.##	RADHA SWAMI AUTOMOBILES (440), MADANGANJ,KISHANGARH,(RAJASTHAN) PIN-305801 PH :01463-244423/9252059798.
KOTA	971.##	FRIENDS AUTOMOBILES (3679), KOTA BUNDI ROAD,NH 12,OPP. HOTEL MENAL RESIDENCY,KOTA PIN-324008 PH :0744-2372360/9828529479.
KOTPUTLI	972.##	VIKAS MARUTI (4970), NH-8,NEAR MNA GAS AGENCY GODOWN,KOTPUTLI,RAJASTHAN PIN-303108 PH :1421-9352307313.
KUCHAMAN	973.##	DALUKA AUTO SALES (4565), NEAR MEENU AUTO TYRE,DIDWANA ROAD,KUCHAMAN,RAJASTHAN PIN-341508 PH :01586-220215/ 9414433240.
MAKRANA	974.##	GEHLOT MOTORS (454), OPPOSITE TO G.S.S,MANGLANA ROAD,MAKRANA,RAJASTHAN PIN-341505 PH :01588-243076/243376.
MERTA	975.##	DELUX CAR SERVICE CENTRE (3856), KUCHERY ROAD,MERTA CITY,DISTT. NAGAU PIN-341510 PH :01590-230559/9460066196.
NAGAU	976.*	CLASSIC AUTOMOBILES (1179), DIDWANA ROAD,(DELHI GATE),NAGAU,(RAJASTHAN) PIN-341001 PH :01582-242646/243019/9414235552.
NEWAI	977.##	HEENA MOTORS (5568), NEWAI BYEPASS ,NEAR JHILAY MOAD,NEWAI,DISTRICT - TONK,RAJASTHAN PIN-304021 PH :9413063376,7877663246.
PILANI	978.##	MARUTI CARE CENTRE (3073), RAJGARH ROAD,SHANTI NAGAR,PILANI DISTT. JHUNJHUNU,RAJASTHAN PIN-333031 PH :01596-242232/244459.
PINDWARA	979.##	RUNEJA MOTORS (5758), NH 14,OPP PATNAIK MIDWAYA,PINDWARA,DISTRICT-SIROHI,RAJASTHAN PIN-307022 PH :9461221104.
RAILMAGRA	980.##	SAI MOTORS (5779), DARIBA FATEHNAGAR ROAD,BORIWAL,FILLING STATION, RAILMAGRA,DISTRICT - RAJASAMAND,RAJASTHAN PIN-313329 PH :9460725455.
RAINWAL	981.##	MAHALAXMI AUTO CARS (5566), OPP ROHINI NAGAR IST,PHAGU ROAD - RAINWAL,DISTRICT - JAIPUR,RAJASTHAN PIN-302025 PH :0141-9928089224.
RAJSAMAND		

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

982.## VIPUL SHARMA (2170), C/O N.L. SHRIMALI, BEHIND PAWAN HOTEL, EXCISE OFFICE KI GALLI, RAJNAGAR DIST. RAJSAMAND (RAJ.) PIN-313 326 PH :02952-224108/223506.

RAWATBHATA

983.## APNA MARUTI GARAGE (5940), OPP. RAM TEKRI MANDIR, PRATAP MARKET, MAIN ROAD, RAWATBHATA, DISTRICT-CHITTORGARH, RAJASTHAN PIN-323305 PH :9461221104.

SALUMBAR

984.## SWASTIK MOTORS (5974), GANESH GHANTI, BANSWARA ROAD, SALUMBAR, DISTRICT-UDAIPUR, RAJASTHAN PIN-313027 PH :02906-231269/9414759341.

SANCHOR

985.## S.M. RAO AUTOMOBILES PVT. LTD. (5878), 197, KHASARA NO 643/455, NH-15, GARDHALI, SANCHOR, DISTRICT-JALOR, RAJASTHAN PIN-343041 PH :2979-223740/9982214381.

SAWAI MADHOPUR

986.## MAHALAXMI AUTOMOBILES (5757), WARD NO 4, BYE PASS ROAD, SHRI MADHOPUR, DISTRICT- TONK, (RAJASTHAN) PIN-332715 PH :9887498033.

SIKAR

987.** RAJ AUTOMOBILES (5534), SUSHIL TRADING CO. STATION ROAD, SIKAR, DISTRICT - SIKAR, RAJASTHAN PIN-332001 PH :01572-240721/240722.

SRIGANGANAGAR

988.## ROHIT UDYOG (1132), 75 K-BLOCK, SRIGANGANAGAR PIN-335001 PH :0154-9414093565/2474823.

989.* NAGPAL MOTORS (3341), NAGPAL COMPLEX, SUKHARIA CIRCLE, SRIGANGANAGAR PIN-335001 PH :0154-9414090666.

SUJANGARH

990.## SHRI CHARBHUJA MARUTI (4924), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN PIN-331506 PH :01568-222291/ 9828118827/9783455755.

SURATGARH

991.## ROHIN SERVICE STATION (2646), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH, (RAJASTHAN) PIN-335804 PH :01509-222514/9413377914.

TIJARA

992.## SANJAY MOTORS (5875), ALWAR ROAD, NEAR BOLLYWOOD FARM, TIJARA, DISTRICT-ALWAR, RAJASTHAN PIN-301001 PH :9414215875/9251415875.

TONK

993.## SUMIT MARUTI (4566), KOTA ROAD, TONK, RAJASTHAN PIN-304001 PH :0143-9214659749/2253228.

UDAIPUR

994.** ALOK AUTOMOBILES PVT. LTD. (1977), B.N. COLLEGE PREMISES, OPP. DALAI PETROL PUMP, SEVASHRAM ROAD, UDAIPUR PIN-313001 PH :0294-411463.
995.** SHREE SAI CAR CARE (2376), PUNJAWATI, PULLA, UDAIPUR PIN-313001 PH :0294-3299901/9414166770.

TAMIL NADU

AMBUR

996.## MARUTHI MOTORS (2864), 10-C M.C. ROAD, AMBUR, (TAMIL NADU) PIN-635802 PH :04174-244880/9443637645.

ARAVAKURICHI

997.# GOWRI MARUTI (5570), OPPOSITE IOCL PETROL PUMP, NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU PIN-639201 PH :9994818043.

ARCOT

998.## HARI AGENCIES (468), 12-A ANNA SALAI, ARCOT N.A.A.DT. PIN-632503 PH :04172-234050/9442225070.

ATTUR

999.## GANESAA MOTORS (4538), 1/1-D ARANGA BALA NAGAR, SALEM CUDDLORE MAIN ROAD, NARASINGARAM, ATTUR (TAMIL NADU) PIN-636108 PH :04282-9443273866/281966.

AVINASHI

1000.## K.P.K AUTOMOTIVE (5547), SF NO.460/2, TIRUPPUR MAIN ROAD, AVINASHILINGAMALAYAM, AVINASHI, DISTRICT-COIMBATORE, TAMILNADU PIN-641654 PH :04296-275784/9994937784.

BHAVANI

1001.## CAR ZONE AUTO SERVICE (5332), METTUR MAIN ROAD, NATARAJAPURAM BHAVANI, DISTRICT - ERODE, TAMILNADU PIN-638301 PH :04256-9842485670.

CHENGLPUT

1002.## AMMA AUTOMOBILES (2941), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU, (T.N.) PIN-603002 PH :044-27421059/9842375112.

CHENNAI

1003.* EASVARI MOTORS PRIVATE LIMITED (1431), W-110 ANNA NAGAR, CHENNAI PIN-600040 PH :044-9840820212.
1004.** SWAMY AUTOMOBILES (456), 23 CASA MAJOR ROAD, EGMORE, CHENNAI PIN-600008 PH :044-28194815/ 28194135/ 9840891916.
1005.* WHEELS AUTO (469), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI PIN-600020 PH :044-24422971/9840138888.

1006.** O.M.S. MOTORS (P) LTD. (2140), NO.27 VELACHERY MAIN ROAD, RAM NAGAR NORTH, MADIPAKKAM, CHENNAI (TAMIL NADU) PIN-600091 PH :044-2258181581/9444081390.
1007.## EASVARI MOTORS PRIVATE LIMITED (2236), AC-123 4TH AVENUE SHANTHY COLONY, ANNA NAGAR-CHENNAI, CHENNAI, MAHARASHTRA PIN-600040 PH :044-26612837/9840820212.

1008.* P.A. SERVICE STATION (2346), NO. 1 GOVINDARAJ ALLUMEL AMMAL NAGAR, NEAR 100 FEET ROAD, AGRAHARAM, KORATTUR, CHENNAI PIN-600076 PH :044-25012075/9840378025.

1009.## KARS KARE SERVICE CENTRE (2579), 648 T.H. ROAD, TONDIARPET, CHENNAI PIN-600081 PH :044-25917671/9841070589.

1010.** MARUTI NEEDS (2531), NO.2 PARK ROAD, PADI, CHENNAI PIN-600050 PH :044-26547104/9940099500.

1011.## AUTO TECH (3445), NO.6 G.S.T. ROAD, KAMATCHI COLONY, SANATORIM, CHENNAI PIN-600040 PH :044-22418315/2238888/22383972/9840375524.

1012.* VAISHALI MOTORS (4529), 4/577 RAJIV STREET, OLD MAHABALI PURAM ROAD, KOTTIVAKAM, CHENNAI PIN-600041 PH :044-24542233/9840138888.

1013.* PERFECT MARUTI CARE (4632), NO. 51/26, 4TH MAIN ROAD, RAJA ANNAMALLI PURAM, CHENNAI PIN-600028 PH :044-9789974300/24323328.

1014.** NSK MARUTI (4975), 2/247, AST COAST ROAD, NLANKARAI, CHENNAI, TAMIL NADU PIN-600041 PH :044-24493839/9841047232/9884323652.

1015.## ABIRAMI MOTORS (5131), 6 ANNA NEDUMATHAI, CHOOLABEDU, CHENNAI, TAMIL NADU PIN-600094 PH :044-9840017558/23610806.

CHIDAMBARAM

1016.## HI-TECH MARUTI (3231), NO.45, SITHIVEL NAGAR, SALIYANTHOPPU, BYE PASS ROAD, CHIDAMBARAM, DISTRICT-CUDDALORE, TAMILNADU PIN-608001 PH :0444-228589/9585539671/9585539672.

COIMBATORE

1017.## TDK AUTOMOBILES PVT. LTD. (160), 9A NEHRU STREET, B.R. PURAM AVINASI ROAD, PEELAMEDU, COIMBATORE PIN-641004 PH :0422-2577898/2572571/9952300666.

1018.## LOTUS AUTOMOBILES (4758), 1647-A AVINASHI ROAD, HOPE COLLEGE, PEELAMEDU, COIMBATORE (TAMILNADU) PIN-641004 PH :0422-7667710009/9842265133.

1019.* SOUTH INDIA MOTORS (MARUTI) (4752), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE (TAMIL NADU) PIN-641014 PH :0422-9843315065, 6560552/2592579.

1020.## GURU AUTO GARAGE (4965), 2/98, IRUGUR ROAD, NEAR BSNL OFFICE, CHINNAMPALAYAM, COMBATORA, TAMIL NADU PIN-600014 PH :0422-9843256247/2625295.

COONOR

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1021.## SHANTHI AUTO CARE (6054), FIGURE OF 8
ROAD,COONLOOR,NILGRIS,(TAMIL NADU)
PIN-643101
PH :0423-2330652/9443089750.

CUDDALORE

1022.## SUNTAR AUTOS (2134), KTR
BUILDINGS,CHIDAMBARAM
ROAD,CUDDALORE PIN-607002
PH :04142-223825/9842345690.

CUMBUM

1023.## SRI BALAJI MOTOR WORKS (3139), 221-A
1/3 THENI ROAD,NEAR REGULATED
MARKET,UTHAMAPURAM,CUMBUM
PIN-625516
PH :04554-2742452/9994169309.

DINDIGUL

1024.* MAGNUM MOTORS (1241),
MEENACHINACKEN PATTY,NH-7 BYE- PASS
ROAD,DINDIGUL,(TAMIL NADU) PIN-624002
PH :0451-2432751/2424578/9842120340/984222313
40.

ERODE

1025.** SRI KRISHNA AUTOMOBILE ENTERPRISES
(2320), 560 CAUVERY ROAD,ERODE
PIN-638003
PH :0424-2218010/2218011.

1026.** SRI SAKTHI CARE (1055), NO.21 & 22
(TS-10),POOSARI CHENNIMALAI
STREET,(NATIONAL HOSPITAL
BACKSIDE),ERODE PIN-638009
PH :0424-2273438/2273110/9842855157.

QADALUR

1027.## GREENWAY MARUTI SERVICE CENTER
(5471), KALAMPUZHA,D.O. NO
12/59-3,GUDALUR,DISTRICT -
NILGIRLS,TAMILNADU PIN-643001
PH :04262-261699/9443603815.

GOBICHETTYPALAYAM

1028.## HI-TEC AUTO GARAGE (2426), 4/388-A
BHARATHI DASAN NAGAR,ERODE MAIN
ROAD,KULLAMPALAYAM P.O./1ST
VAIKKAL,GOBICHETTYPALAYAM PIN-638476
PH :04285-246636/9842447725.

HOSUR

1029.## AUTO SCAN (2070), 58-B BANGALORE
ROAD,HOSUR,(TAMIL NADU) PIN-635109
PH :04344-244371/9363344371.

1030.## SRI VINAYAKA MOTORS (3848), 5/2C/1 (OPP
TAMIL NADU HOTEL),BYE PASS
ROAD,HOSUR PIN-635109
PH :04344-245036/9443245096.

1031.** BALAJI MOTORS (5136), PLOT NO.11
MARUTHI NAGAR,NEAR T.V.S. AGENCIES (T
V S SHOWROOM),KRISHNAGARI MAIN
ROAD- HOSUR,TAMILNADU PIN-635109
PH :04344-9842755402/260664.

KALPAKKAM

1032.# MARUTI MOTORS (4253), SURVEY
309/5-A,PUDUPATTINAM VILLAGE
PANCHAYAT,THIRUKALUKUNDRAM
TALUKA, KANCHEEPURAM,KALPAKKAM
PIN-603102
PH :9443366535, 9842323702.

KANCHEEPURAM

1033.* SVS MARUTI SERVICE CENTRE (5466), NO
46.C KARUKINIL AMARANTHAVAL KOIL
STREET.,METTU STREET,OPP. GANESH
SAWMILL - KANCHEEPURAM,TAMILNADU
PIN-631501
PH :044-9994332290/67277888.

KANGAYAM

1034.## SRI ARUN CAR CARE (3949), COIMBATORE
ROAD,NEAR IBP PETROL BUNK,KANGAYAM
PIN-638701
PH :04257-9360008642/9443329526.

KARAIKUDI

1035.## SURABI MOTORS (2340), NO.11 TRICHY
MAIN ROAD,(NEAR RAILWAY
CROSS),SRIRAM NAGAR,
KOTAIYUR,KARAIKUDI PIN-630001
PH :04565-286853/9443351484.

KARUMATHAMPATTY

1036.## SIVAN MOTORS (3832), OPP IBP NH47,NEAR
KONGU VELLALAR
SCHOOL,KARUMATHAMATTY PIN-641659
PH :0421-2336290/ 9842231819.

KARUR

1037.** SRI SAKTHI AUTO CARE (2532), 3/291 COVAI
ROAD,VADIVEL NAGAR L.N.S.
POST,KARUR,(TAMIL NADU) PIN-639002
PH :04324-227289/9842426585.

KOVILPATTI

1038.## CLASSIC AUTOMOBILES (6037),
NO.3/71,NELLAI MAIN
ROAD(NH-7),MADURAI,BYE PASS ROAD,
INAMANIYACHI,KOVILPATTI,TAMILNADU
PIN-628502
PH :04639-9442501479/9442552000.

KRISHNAGIRI

1039.## THIRUTHANI(GAI MOTORS (2427),
SALEM-CHENNAI BYE PASS
ROAD,KRISHNAGIRI,(TAMILNADU)
PIN-635001
PH :04343-231532/9842757017.

KUMBAKONAM

1040.## SRI SAKTHI MOTORS (4330), T.S.N 581,
584,DOOR NO. 30, ULLKAM STREET,NEAR
OLD BUS STAND,KUMBAKONAM PIN-612001
PH :0435-2403786/ 2431513, 9443131513.

MADURAI

1041.## FRIENDLY MOTORS (3141), 32 PALAM
STATION ROAD,NEAR LIC BUS
STOP,SELLUR,MADURAI PIN-625002
PH :0452-9842414041/265255.

1042.## SHALOM MOTORS (4629), THENI MAIN
ROAD,ACHAMPATHU,NEAR BHARAT
PETROLEUM,MADURAI PIN-625019
PH :0452-9442058150/ 9865357772.

MADURANTHAKAM

1043.## MARUTHI MOTORS (6036), NO.33,G.S.T.
ROAD,KARUNGUZH,MADURANTHAKAM,DIS
TRICT-KANCHIPURAM,TAMILNADU
PIN-603303
PH :0427-9443354073.

MAYILADUTHURAI

1044.## R.M.S. MARUTI AUTO (2237), 53/54
MAHADHANA
STREET,MAYILADUTHURAI,(TAMIL NADU)
PIN-609001
PH :0364-222685/9842922665.

NAGAPATTINAM

1045.* MARUTI-TECH (1671), RAJATHI
COMPLEX,OPP. TNEB BIKARA,TIRUVARUR
ROAD,NAGAPATTINAM PIN-617001
PH :04365-9842653718/9942409032.

NAGARCOIL

1046.* SRI GANAPATHI MOTORS (1629), NO.12
JAWAHAR STREET,R.V.
PURAM,NAGERCOIL,NAGERCOIL
PIN-629001
PH :04652-233970/233980/9344695657.

NAMAKKAL

1047.## ARUNA MOTORS (1461), MARUTI SERVICE
CENTRE,OPP. N.S.R. BUILDING,SALEM
MAIN ROAD,NAMAKKAL PIN-637001
PH :04281-275761/9842775761.

NEYVELI

1048.## SRI MARUTHI MOTOR SERVICE (1458), 8-A
DAILY BAZAR,BLOCK-19,NEYVELI
PIN-607803
PH :04142-324253/9443203191.

PALLADAM

1049.# CHENDU MOTORS (4333), KALIVELAMPATTI
PIRIVU,TRICHY
ROAD,PALLADAM,COIMBATORE DIST
PIN-641662
PH :04255-255805, 9842225058.

PALLAVARAM

1050.* VBK MOTORS (4463), OLD NO. 99, NEW NO.
91,G.S.T ROAD, ALVITONE ESTATE,(BEHIND
LAKSHMI THEATRE),PALLAVARAM,
CHENNAI PIN-600043
PH :044-42326210/20/30, 9841425030.

PARAMAKUDI

1051.# SIVA AUTOMOBILES (4542), NEAR
SRIKUMARA SUBRAMANIYA SWAMY
TEMPLE,OPP FIRE STATION,MADURAI
RAMESWARAM ROAD,PARAMAKUDI,
RAMNAD DIST PIN-623707
PH :04564-9944258794/231253.

PARAMATHIVELUR

1052.## RADHA CAR CARE (5828), NO 96/1,BYE
PASS ROAD,VETTUKATTU PUDAR,PIRIVUR
ROAD,PARAMATHIVELUR-638182,DISTRICT-
NAMAKKAL,TAMILNADU PIN-638182
PH :04266-220009/9600499600.

PERUNDURAI

1053.## PRIYAM AUTOMOBILES (3036), 139 KOVAI
MAIN ROAD,PERUNDURAI,(TAMIL NADU)
PIN-638052
PH :04294-9842744944/9842756006.

POLACHI

1054.* J D & COMPANY (6055), COIMBATORE
ROAD,POLLACHI PIN-642002
PH :04259-220262/223828/9443172635.

RAJAPALYAM

1055.## RAJA MOTORS (4128), 3 MADURAI,BY-PASS
ROAD,NEAR JANAKI RAM
TEXTILES,RAJAPALAYAM PIN-626117
PH :04563-9976606021.

RASIPURAM

1056.## ROYAL AUTO CARS (4052), 5/120 NH-7,
SALEM MAIN ROAD,NEAR TSTC DEPOT,
MUTHUKUPATTI POST,RASIPURAM
TALUK,NAMAKKAL DISTRICT PIN-637408
PH :04287-9443230339.

RED HILLS

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1057.## UNIQUE CAR CARE (5868), NO.54,FIRST STREET,MANIKANDAPURAM,RED HILLS,THIRUVALLUR HIGHWAY,RED HILLS,TAMILNADU PIN-600062 PH :044-26373939/9841059295.

SALEM

1058.## MEENATCHI AUTO (2940), 57 KALARAMPATTY MAIN ROAD,(NEAR DEVI THEATRE),SALEM,(T.N.) PIN-636015 PH :0427-9443201001/2254426.

1059.** NATSUN MOTORS (6029), NO.220,BANGALORE BYE PASS ROAD (NH-7),KODALAMPATTY, SALEM,DISTRICT-SALEM,TAMILNADU PIN-636010 PH :0427-9842704499/9942104477.

SANKAGIRI

1060.## TECH ZONE AUTO SERVICE (2640), 10/78 BHAVANI MAIN ROAD,(NEAR ERODE PIRIVU),SANKAGIRI SALEM DISTT. PIN-637303 PH :04283-244523/9842709103.

SANKARANKOIL

1061.## RAJA MOTORS (4555), RALAPALAYAM ROAD,OPPOSITE TO LIC BUILDING,SANKARANKOIL PIN-627756 PH :04633-9994409363.

SATHYAMANGALAM

1062.## CAR ZONE AUTO SERVICE (5762), NEAR RTO OFFICE-COIMBATORE MAIN ROAD - SATHYAMANGALAM,DISTRICT-ERODE,TAMILNADU PIN-638402 PH :04295-98422286801.

THANJAVUR

1063.## R K P MOTORS (5238), 121/7,THANJAVUR KUMBAKONAM,HIGHWAY PALLIAGRAHARAM,THANJAVUR,TAMILNADU PIN-613003 PH :04362-9976725555.

THENI

1064.## SATHURAGIRI MOTOR WORKS (1650), 3-1-31 TO 36,CUMBUM ROAD,THENI,(TAMIL NADU) PIN-625531 PH :04546-264663/9047011678/9047033678.

TENKASI

1065.## CARE ZONE (3766), 5/164(1) KUTHUKKAL VALASAI,MADURAI ROAD,TENKASI,(TAMIL NADU) PIN-627811 PH :04633-9842133134/280803.

TIRUCHENDUR

1066.* CLASSIS AUTOMOBILES (4355), 269/2,V.K.N NAGAR,PALAYAMKOTTAI ROAD,TIRUCHENDUR PIN-628215 PH :04639-246043/246043/9442246043.

TIRUNELVELI

1067.## FRIENDS INDIA AUTO CLINIC (5030), NO.16 D.BYE PASS ROAD,VANNARAPETA,TIRUNELVELI,TAMIL NADU PIN-627003 PH :0462-2501238/9843006111.

TIRUPUR

1068.** LAKSHMI MOTORZ (2461), 4/146 PALLADAM ROAD,OPP. LAKSHMI KALYANA MANDAPAM,TIRUPUR,(T.N.) PIN-641604 PH :0421-2215959/2214799/9842233959.

TRICHY

1069.* VYTHES MOBILE PARK (443), 8/6 TANJORE ROAD,THIRUCHIRAPALLI PIN-620008 PH :0431-2200716/2200718/9443152529.

UDAMALAPET

1070.* S.R.K. MOTORS (1456), C-109 GANDHI NAGAR,UDAMALAPET,COIMBATORE (DT.),TAMIL NADU) PIN-642154 PH :04252-232805/229019/9843011520.

VELLORE

1071.* MARUTI AUTO SERVICE (2844), 106 (OLD NO.: 78),KATPADI ROAD,GANDHI NAGAR,VELLORE (T.N.) PIN-632006 PH :0416-2243422/2245222/9994832099/9843093422.

VILLUPURAM

1072.## RAGAVENDRA MOTORS (2361), 2/3 MADRAS TRUNK ROAD,VILLUPURAM,(TAMIL NADU) PIN-605602 PH :9244555860/864/862.

VRIDDHACHALAM

1073.# VISHWA MARUTI CARE CENTER (5463), NO412,PERIYAR NAGAR (NEAR FIRE SERVICE STATION),VRIDDHACHALAM,DISTRICT - CUDDALORE,(TAMILNADU) PIN-606001 PH :04143-9842246092/238095.

TRIPURA

AMBASSA

1074.## CHAKRABORTY MECHANICAL WORKSHOP (5351), NH-44, NEAR ZILLA PARISWAD OFFICE,AMBASSA,DISTRICT - DHALAI,TRIPURA PIN-799289 PH :9436136054.

BELONIA

1075.## JOY UDYOG (3977), KALINAGAR,BELONIA,SOUTH TRIPURA PIN-799155 PH :03823-9436799415/9774805210.

DHARMANAGAR

1076.## RAJ AUTOMOBILES (2868), STATION ROAD,RAJABARI,DHARMANAGAR,TRIPURA (NORTH) PIN-799253 PH :03822-234670/9436477578.

UDAIPUR (WEST)

1077.## RAMKRISHNA MARUTI ENGINEERING (4865), RAJARBAGH MOTOR STAND,UDAIPUR WEST,DISTRICT-TRIPURA SOUTH PIN-799120 PH :9436135422.

UDAYPUR

1078.## SUR UDYOG (3963), TOWN FULKUMARI NO. 1,BRAMHABARI, P O UDAIPUR COURT,UDAYPUR,TRIPURA SOUTH PIN-799001 PH :03821-9862276650.

UTTAR PRADESH

AGRA

1079.## GAYATRI MOTORS (4730), 101-102, SHASHI NAGAR, CHANDRAKALA,-COMPLEX SIKANDRA BODLA ROAD,AGRA,(UTTAR PRADESH) PIN-282008 PH :9319129910.

1080.** RAJPUT MOTORS (5166), 44/320 B.MAUZA BODLA, AGRA,DISTRICT - AGRA,UTTAR PRADESH PIN-282007 PH :9319185751/9319108310.

ALIGARH

1081.## KAPIL AUTOMOBILES (1344), OLD KHURJA BUS STAND,G.T. ROAD,ALIGARH(U.P.) PIN-202001 PH :9837007636.

1082.## KAR SCAN CENTRE (449), RAMGHAT ROAD,KWARS,ALIGARH PIN-202002 PH :0571-9927001133/3292217.

ALLAHABAD

1083.## ANSHUMAN AUTOMOBILES (4833), 353, NAINI BAZAR NAINI,DISTRICT ALLAHABAD,ALLAHABAD,UTTAR PRADESH PIN-211008 PH :0532-9335138119/2696474.

1084.** KAY CEE AUTOMOBILES (2155), 72/60 L.B. SHASTRI MARG,ALLAHABAD PIN-211006 PH :0532-2420225/2420434.

1085.## TRIBENI MOTORS (2539), 23 KANPUR ROAD,ALLAHABAD,(U.P.) PIN-211001 PH :0532-2624699.

ALMORA

1086.## AROMA AUTOMOBILES (3149), THE MALL,ALMORA,(UTTARANCHAL) PIN-263001 PH :05962-33081/33432.

AMROHA

1087.## SUNNY MOTORS (2165), BINORE ROAD,J.P. NAGAR,AMROHA,(U.P.) PIN-244221 PH :511111.

AURAIYA

1088.## VINAYAK AUTOMOBILES (2842), OPP. NTPC COLONY IIND GATE,PHAPHUND ROAD,DIBIYAPUR,AURAIYA (U.P.) PIN-206244 PH :05683-283639.

1089.** SINGH AUTOMOBILES (5248), KANPUR ROAD, AURAIYA,DISTRICT - AURAIYA,UTTAR PRADSH PIN-206122 PH :05683-9412284024/245428.

AZAMGARH

1090.## BHAGIRATHI MOTORS (4674), SARFUDDINPUR,P.O. SADAR,AZAMGARH,UTTAR PRADESH PIN-276001 PH :05462-9450029647/243702.

BABUGARH

1091.* GURUNANAK AUTOMOBILES (5977), NH-24, NR. TOLL PLAZA, BABUGARH,VILL SIMROLI, GHAZIABAD,DISTRICT-GHAZIABAD,UTTAR PRADESH PIN-245101 PH :9971792397.

BAGHPAT

1092.# KAUSHIK MOTORS (4473), DELHI ROAD,BAGHPAT,UTTAR PRADESH PIN-250609 PH :0121-9412410412, 9837800582, 9411263023.

BALRAMPUR

1093.## D M AUTOMOBILES (3933), NEAR BCM, POST SIRSIYA,GONDA ROAD,BALRAMPUR PIN-271201 PH :05263-9415071840/235782.

BANDA

1094.## CHAUDHARY TRACTORS (2249), STATION ROAD,BANDA,(U.P.) PIN-210001 PH :05192-224882/224202.

BARAUT

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1095.## HIGH TECH ENGINEERS (4821), 216/5
SAHARANPUR ROAD,BARAUT PIN-250611
PH :01234-263327/941220547/983716887.
1096.## SIGNET AUTOMOBILES (4441), NEAR
INDUSTRIAL POLICE CHOWKI,DELHI
ROAD,BARAUT,DISTT BAGHPAT (U.P)
PIN-250611
PH :01234-267164/9412831171/98411833140.

BAREILLY

1097.** SAVVY MOTORS (4559), BALWANT MOTORS
BUILDING,131 CIVIL LINES,NEAR DAINIK
JAGRAN,BAREILLY (UTTAR PRADESH)
PIN-243001
PH :0581-2420907/ 2420143.
1098.## S P MOTORS (5746), 383, SURKHA CHAWNI,
NAINITAL
ROAD,BAREILLY,DISTRICT-BAREILLY,UTTAR
PRADESH PIN-243001
PH :0581-09412479140/2412829.

BIJNOR

1099.## SARDAR MOTORS (4671), DELHI HIGHWAY
ROAD,4TH KM MILE STONE,BIJNOR,UTTAR
PRADESH PIN-246701
PH :01342-9837265076/262410.

BULANDSHAHR (U.P.)

1100.## DELHI AUTO ENGRS (1351), NEAR PANDIT
PETROL
PUMP,BHOOR,G.T.ROAD,BULANDSHAHR
PIN-203001
PH :05732-234888/9359155333.

CHANDPUR (U.P.)

1101.## BHARTI AUTOMOBILES (1777), DHANORA
ROAD,CHANDPUR,DISTT. BIJNOR,(U.P.)
PIN-246725
PH :01345-221441/9837380551.

CHITRAKOOT

1102.* SHYAM MOTORS (4367), BUS
STAND,KARWI,CHITRAKOOT PIN-210205
PH :05198-236996, 235150, 9415143900.

DADRI

1103.## NATIONAL MOTOR AGENCY (5143), NOIDA
ROAD,DADRI,DISTRICT - GAUTAMBUDH
NAGAR,UTTAR PRADESH PIN-203207
PH :0120-9818486888/2667033.

DANKAUR

1104.## YASH MOTORS (5934), SIKANDRABAD
ROAD, NEAR KISAN INTER
COLLEGE,DANKAUR,DISTRICT- GAUTAM
BUDH NAGAR,UTTAR PRADESH PIN-203201
PH :9410491590.

DEOBAND

1105.## PRACHI MOTORS (3361), ADJACENT TO
CIVIL COURTS,G.T. ROAD,DEOBAND,DISTT.
SAHARANPUR (U.P.) PIN-247554
PH :01336-22900/9359246585.

DEORIA

1106.** CLASSIC MOTORS (2971), D-13/14
INDUSTRIAL ESTATE,OPPOSITE RTO
OFFICE,GORAKHPUR ROAD,DEORIA (U.P.)
PIN-274001
PH :9415080981.

DHAMPUR

1107.## AUTAR AUTOMOBILES (4846), NOORPUR
ROAD,DHAMPUR,DISTRICT-BIJNOR,UTTAR
PRADESH PIN-246761
PH :01344-220440, 230074,
9411833140,9897073113.

FAIZABAD

1108.* S K MOTORS (4672), CHANDPUR HARBANS
ALLAHABAD ROAD,NH-96,FAIZABAD,UTTAR
PRADESH PIN-224001
PH :9335981364/9335305129.

FARUKHABAD

1109.## SANDEEP MOTORS (4161), THANDI
SADAK,OPP. JITENDRA GAS
GODOWN,FARUKHABAD,UTTAR PRADESH
PIN-209625
PH :05692-228321/228205/9838840322-321.
1110.## APOORVA MOTORS (4675), SATAPUR
MAINDIR ROAD,FARRUKHABAD,DISTRICT
FARRUKHABAD,UTTAR PRADESH
PIN-209625
PH :9451880650/9336051151.

FATEHPUR SIKRI

1111.## LAXMI MOTORS (5943), FATEHPUR SIKRI
ROAD, KHEDA KORAI,FATEHPUR
SIKRI,DISTRICT-AGRA,UTTAR PRADESH
PIN-283110
PH :9837749949.

FIROZABAD

1112.## GOVIND AUTOMOBILES (1739), OPP.
IMPERIAL GLASS SHOWROOM,S.N.
ROAD,FIROZABAD,(U.P.) PIN-283 203
PH :05612-244650.

1113.** AMAN MOTORS (4366), OPP CAR CARE
(INDIA),BYE PASS ROAD,FIROZABAD,UTTAR
PRADESH PIN-283203
PH :05612-281546/9219400877.

GANGOH

1114.# SHRI KRISHNA MOORS (5939), BYE PASS
ROAD RAM GARH,
GANGOH,DISTRICT-SAHARANPUR,UTTAR
PRADESH PIN-247341
PH :9719471747.

GHAZIABAD

1115.* D.N. AUTOLAND (272), E-4 MEERUT
ROAD,INDUSTRIAL AREA,(NEAR OLD
MEERUT CHUNGI),GHAZIABAD PIN-201001
PH :0120-6521037/2724316/9810140000.

1116.* CHAWLA AUTOMOBILES (2643), 67
AMBEDKAR ROAD,OPP. NEHRU YUVA
KENDRA,GHAZIABAD PIN-201003
PH :0120-2797021/9811720929/9810663366.

1117.* SHIVA MOTORS (3343), 17TH KM
STONE,118-119 SHIVPURI,SECTOR-9 VIJAY
NAGAR BYEPASS NH-24,GHAZIABAD (U.P.)
PIN-201009
PH :2744400/3232590/9891464349.

1118.** KRISHNA AUTOMOBILES (5356), 101 LAL
KUAN SHIV MANDIR,BULANDSHAHAR
ROAD,DISTRICT - GHAZIABAD,UTTAR
PRADESH PIN-201001
PH :9810311475/9999506820.

1119.## S P MOTORS (4973), HAPUR BYPASS
ROAD,MEHRAULI,GHAZIABAD PIN-201001
PH :0120-9350936262/2824443.

GONDA

1120.* PANKAJ AUTOMOBILES (1370), C/O NEW
DELHI MOTOR WORKS,BARAICH
ROAD, GONDA PIN-271001
PH :05262-232812.

1121.** AMAN MOTORS (3858), PORTER
GANJ,LUCKNOW ROAD,GONDA PIN-271001
PH :05262-231506.

GREATER NOIDA

1122.## JAISWAL MOTORS (5078), PLOT NO.
31, SECTOR MUP-II GREATER
NOIDA,DISTRICT - GAUTAM BUDH
NAGAR,UTTARPRADESH PIN-201308
PH :9810062269/6485444/9212142269.
1123.## KUMAR MOTORS (5343), M-8 SITE 5 UP
SIDE, SURAJPUR, INDUSTRIAL
AREA, GREATER NOIDA,DISTRICT-GOUTAM
BUDH NAGAR,UTTAR PRADESH PIN-201306
PH :0120-9911498777/2341088/9811498333.

HAPUR

1124.* SRASTHI MOTORS (3076), NEAR UNITED
BANK OF INDIA,DELHI ROAD,HAPUR,(U.P.)
PIN-245101
PH :950122-2305842/ 9412221608.

HARDOI

1125.## M. MOTORS & SERVICE CENTRE (3371),
CHAND BEHTA,LUCKNOW
ROAD,HARDOI,(U.P.) PIN-241001
PH :05852-21734.

1126.** TAYAL AUTOMOTIVES (4265), SOHRA
KOTHI,BAWAN CHUNGI,HARDOI PIN-241001
PH :05852-234314, 9415149951.

HATHRAS

1127.## RADHEY RADHEY AUTOMOBILES (4344),
NEAR BUS STAND,AGRA ROAD,HATHRAS
PIN-204101
PH :9897069159.

JAGDISHPUR (U.P.)

1128.## SUPER AUTOMOBILES (3564), JAFARGANJ
P.O.,INDUSTRIAL AREA,JAGDISHPUR,DISTT.
SULTANPUR (U.P.) PIN-227817
PH :05361-291168/9415177882.

JAUNPUR

1129.## SADGURU MOTORS (5071), FAIZBAGH
(NEAR TOM OFFICE),UMARPUR
JAUNPUR,JAUNPUR,UTTAR PRADESH
PIN-222142
PH :9839318653.

JHANSI

1130.* A.B. MOTORS (6022), 4
KHATTERYANA,JHANSI PIN-273162
PH :0510-2471865.

1131.## JALIM PAINTER (5661), 1051, NEAR ADINATH
HOTEL, STATION ROAD,JHANSI,DISTRICT -
JHANSI,UTTAR PRADESH PIN-284001
PH :9415113566.

KANNAUJ

1132.## SARALA AUTO CARE (5854), G.T. ROAD,
KANNAUJ,DISTRICT-KANNAUJ,UTTAR
PRADESH PIN-209720
PH :9415167503.

KANPUR

1133.## KANPUR AUTO CENTRE (2823),
14/142,CHUNNIGANJ,KANPUR PIN-208012
PH :0512-2533160.

1134.* AJAY MOTOR WORKS PVT. LTD. (3134),
117/N/81 KAKADEVO,KANPUR PIN-208001
PH :0512-2501044.

1135.** EXCELLENT MOTORS (2968), 123/793
FAZALGANJ,KANPUR PIN-208012
PH :0512-2235566.

1136.** AUTO GARAGE (4266), P-22-A,PRATAP
GANJ, FACTORY AREA,OPP GANDA
NALA,KANPUR PIN-208012
PH :0512-2236763.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1137.** SUJIPA MOTORS (4337),
127/465, U-BLOCK, NIRALA NAGAR, KANPUR
PIN-208014
PH :0512-2643146/ 2618156.
1138.** CHANDRA MOTORS (4458), 621/3 W-2
JUH1, BEHIND SACHAN GUEST
HOUSE, KANPUR PIN-208014
PH :0512-3258159.

KHAIRABAD

1139.* BAIG MOTORS PVT LTD (4165),
KHAIRABAD, LUCKNOW
ROAD, SITAPUR, UTTAR PRADESH
PIN-261001
PH :9307237710.

KHALILABAD

1140.## RATAN MOTORS (5645), RAILWAY STATION
ROAD - KHALILABAD, DISTRICT- SANT KABIR
NAGAR, UTTAR PRADESH PIN-272175
PH :9415257705.

KHATAULI

1141.## EAGLE MOTORS (5142), OPPOSITE EW
ROADWAYS, G.T. ROAD, NH -58
KHATAULI, DISTRICT -
MUZAFFARNAGAR, UTTAR PRADESH
PIN-251201
PH :01396-9997039786/9897223327/273501.

KHEKRA

1142.** KAILASAH MOTORS (5767), OPP TEHSIL
, DELHI BAGHPAT
ROAD, KHEKRA, DISTRICT-BAGHPAT, UTTAR
PRADESH PIN-201101
PH :0121-2232903.

KOSIKALAN

1143.** ADITYA MOTORS (1940), IOC
PUMP, NATIONAL
HIGHWAY, KOSIKALAN, (U.P.) PIN-281001
PH :05662-232657/9837050778.

LAKHIMPUR KHERI

1144.** AJMANI TRACTORS (4143), NIGHASAN
ROAD, LAKHIMPUR KHERI, UTTAR PRADESH
PIN-242001
PH :05872-266340.

LALITPUR

1145.## VARDHMAN MOTORS (1073), SAGAR
ROAD, LALITPUR, (U.P.) PIN-284403
PH :05176-277996.

LAMBHUA BAZAR

1146.## VIKRAM MOTORS (3729), LAMBHUA
BAZAR, SULTANPUR (DIST.), UTTAR
PRADESH PIN-222302
PH :05364-257380.

LONI

1147.## SAMBHAV AUTOMOBILES (5168), 31, RURAL
INDUSTRIAL ESTATE, ARYA NAGAR
INDUSTRIAL AREA, MAIN DELHI
SHAHNAPUR HIGHWAY, UTTAR PRADESH
PIN-201102
PH :9311690878.

LUCKNOW

1148.## BALAJI MOTORS (1336), 1 NEWAL KISHORE
ROAD, LUCKNOW (U.P) PIN-226001
PH :0522-3956801.

1149.** KALYAN MOTORS (1161), GOVT.
POLYTECHNIC CROSSING, FAIZABAD
ROAD, GOMTI NAGAR, LUCKNOW PIN-226001
PH :0522-4049545-47.

1150.** RELIANCE MOTORS CARE (1236), 7-B/1
PRIME PALACE, FAIZABAD ROAD, INDIRA
NAGAR, LUCKNOW PIN-226016
PH :0522-2340366.

1151.** GUD'S CAR CARE (2538), MAIN
ROAD, NISHATGANJ, LUCKNOW PIN-226 006
PH :0522-2330786/87.

1152.** B.K. MOTORS (2537), KALYANPUR, RING
ROAD, OPP. CARRIER CONVENT
BOARD, LUCKNOW PIN-226015
PH :0522-2760111.

1153.* S.K. MOTORS (2449), 8/881 VIKAS
NAGAR, PICNIC SPOT ROAD, KHURAM
NAGAR, LUCKNOW PIN-226013
PH :0522-2324809.

1154.* V.S. MOTORS (4745), RAMADHIN SINGH
INTER COLLEGE CAMPUS, BABU
GANJ, LUCKNOW, UTTAR PRADESH
PIN-226007
PH :0522-9839522310/2788564.

1155.* KRISHNA MOTORS (5026), BALAGANJ
HARDOI ROAD, CHOWK
LUCKNOW, DISTRICT LUCKNOW, UTTAR
PRADESH PIN-226003
PH :9839177777.

1156.** KAPOOR MOTORS (5044), 555/GA/50, BARA
BIRWA, KANPUR ROAD -ALAMBAGH
LUCKNOW, DISTRICT - LUCKNOW, (UTTAR
PRADESH) PIN-226005
PH :9415080432.

1157.## GALAXY MOTORS (5274), KASHANA
SITAPUR ROAD, NEAR SHIA, P G COLLGEG -
LUCKNOW, DISTRICT - LUCKNOW, UTTAR
PRADESH PIN-226001
PH :9305567878.

1158.** MVV MOTORS (5531), A1/14, VIJAY KHAND,
GOMTI NAGAR, LUCKNOW, DISTRICT -
LUCKNOW, UTTAR PRADESH PIN-226010
PH :0522-3247776.

1159.* THE GARAGE (5479), BEHIND NEW
HANUMAN MANDIR, MADIR
PARK, MAHANAGAR - LUCKNOW, DISTRICT -
LUCKNOW, UTTAR PRADESH PIN-226017
PH :9236711634.

1160.** KAPOOR MOTORS (1751), PLOT
NO.380, NEAR GUNGA BAHARA
SCHOOL, TILAK NAGAR, UTTAR PRADESH
PIN-226004
PH :9252704.

MAHOBA

1161.## ROYAL SERVICE STATION (2238),
HAMIRPUR CHUNGH1, KANPUR
ROAD, MAHOBA, (U.P.) PIN-210427
PH :05281-256194/252194.

MAINPURI

1162.# JATIN MOTORS (5540), GANESH MILL
COLONY. RADHA RAMAN
ROAD, MAINPURI, DISTRICT-MAINPURI, UTTA
R PRADESH PIN-205001
PH :9359843400.

MARIAHU

1163.## BABU MOTORS (5740), MACHALISHAHAR
ROAD, NEAR POST
OFFICE, MARIAHU, DISTRICT -
JAUNPUR, UTTAR PRADESH PIN-222161
PH :9919263663.

MATHURA

1164.## GIRIRAJ CAR CARE (5624), BIMAL ENGG
COMPLEX, BAD, MATHURA PIN-281006
PH :0565-2430821.

1165.* SIYA RAM MOTORS (1666),
JAYSINGHPURA, NEAR BIRLA
MANDIR, MATHURA, (U.P.) PIN-281003
PH :0565-2530210.

1166.** NAND SERVICE STATION (3578), GOPAL
PURA VILLAGE, REFINERY
TOWNSHIP, NH-2, MATHURA PIN-281006
PH :0565-5416912.

1167.## SHREE GOPAL AUTOMOBILES (5664), DELHI
BYE PASS ROAD, NEAR GOKUL
RESTAURANT, MATHURA, DISTRICT -
MATHURA, UTTAR PRADESH PIN-281001
PH :0562-9760026760.

MEERUT

1168.## SARAN AUTOMOBILES LTD. (1078), DELHI
ROAD, RITHANI, MEERUT PIN-250103
PH :0121-2441986/3253074/93594506555.

1169.** EXPERT CAR SCANNER (1174), 83 HILL
STREET (KATH-KA-PUL), BEHIND ABU
LANE, MEERUT CANTT., (U.P.) PIN-245206
PH :0121-2644860/9412201195.

1170.## KRISHNA AUTOMOBILES (5573), PLOT NO
D-10, SHRADHA PURI, KANKARKHERA -
MEERUT, DISTRICT - MEERUT, UTTAR
PRADESH PIN-250001
PH :9927241738.

MIRZAPUR

1171.## PRABHAT MOTORS (4131), NH-7 REWA
ROAD, CHANDAIPUR
LAKHAMPUR, MIRZAPUR, (U.P.) PIN-231001
PH :05442-245859.

MOHANLAL GANJ

1172.** GURU TEG BAHADUR AUTO ENTERPRISES
(4072), 4 SENANI VIHAR, RAI BAREILLY
ROAD, MOHANLAL GANJ, LUCKNOW (U.P.)
PIN-226001
PH :0522-2442061.

MORADABAD

1173.## ASHISH AUTOMOBILES (1477), KANTH
ROAD, MORADABAD, MORADABAD
PIN-244001
PH :0591-6533559.

MUZAFFARNAGAR

1174.## SIDDIQUI MOTOR WORKS (1339), ANSARI
ROAD, MUZAFFARNAGAR (U.P) PIN-251001
PH :031-2442626/9412476786.

NAJIBABAD

1175.## SETHI MOTORS (4557), C/O SETHI BOARD
INDUSTRIES LIMITED, OPP. HINDUSTAN
COCO-COLA BOTTLING PLANT, NAGINA
ROAD, NAJIBABAD, DISTT. BIJNOR (UTTAR
PRADESH) PIN-246763
PH :01341-220087, 9837349688, 9837590800.

NOIDA

1176.## AUTO POINT (2263), C-107
SECTOR-2, NOIDA, (U.P.) PIN-201301
PH :0120-9810061814/9910397875.
1177.* CITY MOTORS (3876), C-2 SECTOR
63, NOIDA PIN-201307
PH :2401772/9810427752.

1178.** RAHUL MOTORS (4662), A-59
SECTOR-80, PHASE-II, NOIDA, UTTAR
PRADESH PIN-201303
PH :0120-9810572900/9312271259/3963138.

1179.** RAJESH & ANIL MOTOR CO (5330), B-110,
SECTOR 2, NOIDA, DISTRICT - GAUTAM
BUDDH NAGAR, UTTAR PRADESH PIN-201304
PH :0120-9818578786/4211266/2539555.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1180.## NANDA MOTORS (5733),
B-180,PHASE-2,NOIDA,DISTRICT-NOIDA,UTT
AR PRADESH PIN-201305
PH :9566003839.

OBRA

1181.## APPRECIATE SERVICES (4678), BY PASS
ROAD,ROBERTS GANJ,DISTRICT -
SONEBHADRA,UTTAR PRADESH PIN-231216
PH :05445-267266/9415323710.

PHULPUR

1182.## BHARAT MOTORS (6039), C/O
KAUSHLENDRA PANDEY,
PUREMABHARATG,PRATAPPUR
ROAD,PHULPUR,DISTRICT-ALLAHABAD,UTT
AR PRADESH PIN-244601
PH :0554495877.

PILIBHIT

1183.* UNIVERSAL MARUTI SERVICE STATION
(4365), BYE PASS ROAD,PILIBHIT,UTTAR
PRADESH PIN-262001
PH :05882-255499/ 9412313499.

PILKHUWA

1184.* SHREE BANKEY BIHARI MOTORS PVT. LTD.
(6025), NH-24, DELHI-GARH
ROAD,PILKHUWA,DISTRICT-GHAZIABAD,UT
TAR PRADESH PIN-245307
PH :9045548101.

PRATAPGARH

1185.** SHREE MOTORS (4146), ALLAHABAD
FAIZABAD ROAD,NH-96,CHILBILA
RANJEETPUR,PRATAPGARH (UTTAR
PRADESH) PIN-2300001
PH :05342-236057/ 9415229257.

RAI-BAREILLY

1186.** STANDARD GARAGE (4429), MANIKA
CENEMA ROAD,NEAR INSPECTION
HOUSE,RAE BAREILLY PIN-229001
PH :0535-2701320.

RAMNAGAR

1187.## MAHI AUTOMOBILES (5532), SHANKARPUR
RAMNAGAR,DISTRICT -
NAINITAL,UTTARAKHAND PIN-244715
PH :05947-254740.

RAMPUR (U.P.)

1188.## FIZZA MOTORS (2241), NEAR AMBEDKAR
PARK,CIVIL LINES,RAMPUR (U.P.)
PIN-244901
PH :0595-2355009.

RATH

1189.## MARUTI POINT (4228), ROOP NAGAR,
BUDHOLIYANA,NEAR BUS STAND, ORAI
ROAD,RATH,DIST. HAMIRPUR (U.P.)
PIN-210431
PH :05280-202427/9415331721.

RENUKUT

1190.## AMBIKA MOTORS (1050), PATEL
NAGAR,MURDHAWA,RENUKUT,SONBHADR
A (U.P.) PIN-231217
PH :05446-252238.

RIHAND NAGAR

1191.## OUDH MOTORS (4421), RIHAND
NAGAR,SONEBHADHRA,(U.P.) PIN-231223
PH :05446-232321/ 9415230855.

ROBERTSGANJ

1192.* KAMAKHYA AUTOMOBILES (4163), PIPRI
ROAD,ROBERTSGANJ,SONEBHADRA (U.P.)
PIN-231216
PH :05444-223022/9415342706.

SADABAD

1193.## ASHU SERVICE CENTRE (5849), AGRA BYE
PASS
ROAD,SADABAD,DISTRICT-HATHRAS,UTTAR
PRADESH PIN-281306
PH :09759594110.

SAHARANPUR

1194.## GANESH CAR SERVICES (1871), OPP.
REMOUNT DEPOT GATE,DEHRADUN
ROAD,SAHARANPUR PIN-247001
PH :0132-26626711/2613997/9358306804.

SAHIBABAD

1195.** SANSAR MOTORS PVT. LTD. (2061), 11/27
SECTOR-3,RAJINDER
NAGAR,SAHIBABAD,DISTT. GHAZIABAD
PIN-201005
PH :0120-4109879/4109880.

1196.## POOJA MOTORS (3562), TEELA
MORE,SHAHBAJPUR,LONI,DISTT.
GHAZIABAD (U.P.) PIN-201010
PH :0120-9810986463.

1197.## MEHAR AUTOMOBILES (3576), 116/1 NEAR
GDA MARKET,G.T. ROAD,KATORI MILL
MOHAN NAGAR,GHAZIABAD PIN-201007
PH :9711201557/9871832662.

1198.** MOTOR MAGIC AUTO ZONE (4462), 4/29-A
SITE-IV,INDUSTRIAL
AREA,SAHIBABAD,DISTT. GHAZIABAD
PIN-201007
PH :0120-4163108/4163109.

1199.** PANDIT AUTOMOBILES (4647), 3/1/1 SITE-IV,
INDUSTRIAL AREA,SAHIBABAD,OPP.
KAUSHAMBI, GHAZIABAD,(UTTAR
PRADESH) PIN-201005
PH :0120-2776808/ 4114808.

SANDILA

1200.## SUBHAM SERVICE CENTRE (4042), NEAR
NEHA KOTHI ROAD,SANDILA,HARDOI
PIN-241204
PH :05854-270443.

SHAHJAHANPUR

1201.## SUPER AUTO (3135), OLD DIST. HOSPITAL
ROAD,SHAHJAHANPUR (U.P.) PIN-242001
PH :05842-223545.

SHAMLI

1202.## ROYAL MOTORS (5277), PANIPAT KARANA
ROAD,SHAMLI,SHAMLI,UTTAR PRADESH
PIN-247776
PH :9837138064/61.

SHIKOHABAD

1203.## KUMAR MOTORS (5575), SUBHASH TIRAHA,
AGRA GATE - SIKOHABAD,DISTRICT -
FEROZABAD,UTTAR PRADESH PIN-205135
PH :9411937033.

SIDDHARTH NAGAR

1204.## MARUTI CARE CENTRE (2736), OPP.
SIDDHARTH SCHOOL,AZAD
NAGAR,SIDDHARTH NAGAR,(U.P.)
PIN-272207
PH :05544-22090.

SIKANDRABAD

1205.## NALIN AUTOS (1725), G.T.
ROAD,SIKANDRABAD,DISTT.
BULANDSHAHR,(U.P.) PIN-203205
PH :05735-222802/9412227155.

SIRSAGANJ

1206.## SATGURU MOTORS (3739), BYE PASS
KAURARA ROAD,SIRSAGANJ DISTT.
FIROZABAD,ETAWAH-AGRA
ROAD,SIRSAGANJ (U.P.) PIN-205130
PH :05676-22563.

SONEBHADRA

1207.## OUDH SERVICE STATION (2925), SHAKTI
NAGAR,SONEBHADRA PIN-231222
PH :05446-232321.

SULTANPUR

1208.## HINDUSTAN AUTO GARAGE (1360),
BARHAIYA BEER RD.,(ADJ.BUS
STAND),SULTANPUR (U.P.) PIN-228001
PH :05362-222838.

VARANASI

1209.** MISHRA ENGINEERS (4957), S-4/68,NAI
BASTI, PAHARIA,VARANASI,UTTAR
PRADESH PIN-221002
PH :0542-9415301483.

UTTARAKHAND

BAZPUR

1210.## TARAI AUTOMOBILE ENGG WORKS (4459),
GURUTEG BAHADUR ROAD,U.S.
NAGAR,BAZPUR,UTTARANCHAL PIN-262401
PH :05949-281342/ 9412945672.

BHAGESWAR

1211.## SHREE ISHT DEV AUTOMOBILES (4570),
GARUR ROAD,MOTA SIMAL,DIST.
BAGESHWAR,UTTARANCHAL PIN-263642
PH :05963-220699/ 220149/ 9412094543.

DEHRADUN

1212.## ASHIRWAD MOTORS (5144), CANAL
ROAD,NEAR BALLUPUR
CHOWK,DEHRADUN,UTTARANCHAL
PIN-248001
PH :0133-6454745/ 9997232599.

1213.## KRIPALSHWARI MOTORS (4475),
HARIDWAR ROAD,NEAR LIC
BUILDING,DEHRADUN,UTTARANCHAL
PIN-248001
PH :0135-2671712/ 9412963384.

1214.* SHREE RAM AUTOMOBILES (5068), NEAR
TEHSIL,CHAKROTA ROAD,VIKAS NAGAR-
DEHRADUN,UTTARANCHAL PIN-248001
PH :01360-9897731200/253601.

1215.## UNIVERSAL AUTOMOBILES (5574),
F-107,UPSIDC INDUSTRIAL AREA,SELA
QUI,DEHRADUN,DISTRICT -
DEHRADUN,UTTRAKHAND PIN-248011
PH :0315-9927334346.

1216.## HANS LAKHERA MOTORS (5032), JOGI
WALA RING ROAD,NATHAPUR
APPARTMINT,NEAR NEHRU GRAM POST
OFFC,MASSOORI BYEPASS, DEHRADUN
PIN-248001
PH :0133-9897456677/2678844/9412933332.

HALDWANI

1217.* HARYAL SERVICE STATION (5340), BAREILY
ROAD, GUAJALI -
TALLI,HALDWANI,DISTRICT -
NAINITAL,UTTARAKHAND PIN-263139
PH :9997200227.

1218.## EXCEL MOTORS & ENGG. WORKS (3827),
RAMPUR ROAD,NEAR STM FOREST
HOSPITAL,HALDWANI,NAINITAL PIN-263136
PH :05946-235384.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

HARIDWAR

1219.## PREET MOTORS (5561), SHRI NATH NAGAR,RAILWAY ROAD, JAWALPUR - HARIDWAR,DISTRICT - HARIDWAR,UTTARANCHAL PIN-249407 PH :01334-250094/9412022430.

KANKHAL

1220.## HIGHWAY MOTORS (4261), NEAR SINGH DWAR CHOWK,ROORKEE-HARIDWAR BY PASS ROAD,POST OFFICE, GURUKUL KANGRI,KANKHAL, DISTT HARIDWAR PIN-380052 PH :01334-246999, 243125, 9837039946,9412074578,9412072889.

KASHIPUR

1221.## KRISHNA AUTOMOBILES (4824), MORADABAD ROAD,KASHIPUR PIN-244713 PH :05947-276079.
1222.## OM MOTORS (4329), NH-74 KASHIPUR MORADABAD HIGHWAY,(KHASRA NO.1343),KASHIPUR,DIST. UDAM SINGH NAGAR (UTTARAKHAND) PIN-244713 PH :05947-273944/ 9837719072.

KICHHA

1223.## SHREE SHYAM JI AUTO SERVICE CENTRE (5648), BAREILY ROAD, KICHHA,DISTRICT-UDHAM SINGH NAGAR,UTTRAKHAND PIN-263148 PH :05944-265033/9837033377.

KOTDWARA

1224.## BHATT MOTORS (1775), NAJIBABAD ROAD,KOTDWARA,(GARHWAL),UTTARANCHAL PIN-246149 PH :01382-225553/9412081333.

LAKSAR

1225.# SHIV AUTOMOBILES (5560), 110/1/3 BALAWALI ROAD,LAKSAR,DISTRICT - HARIDWAR,UTTARANCHAL PIN-247663 PH :9719054422.

LOHRIASAL MALLA

1226.## ANJANI SERVICE CENTRE (5552), NEAR BLOCK OFFICE, KALADHUNGI ROAD,LOHRIASALMALLA,DISTRICT - NAINITAL,UTTARAKHAND PIN-263139 PH :9837098699.

NEW TEHRI

1227.## BHAGWATI SERVICE CENTER (4472), SECTOR-8E/537,NEAR STADIUM, BARURI,NEW TEHRI,GARWAL (UTTRANCHAL) PIN-2249001 PH :01376-232341/ 9412394776/9759282913.

PAURI

1228.## KRISHNA MOTORS (5957), SHRINAGAR ROAD, NEAR KARGIL SHAHEED PETROL,PUMP, PAURI,DISTRICT-PAURI GARHWAL,UTTRANCHAL PIN-246001 PH :01368-222677.

PITHORAGARH

1229.## MAHAKALI MOTORS (4142), DHARCHULA ROAD,RAI BRIDGE,PITHORAGARH,UTTARANCHAL PIN-262501 PH :05964-9412168976/9897922203.
1230.## CAR CARE CENTER (4371), CANT ROAD,PITHORAGARH,UTTARANCHAL PIN-262501 PH :05964-228388/9412428288.

RANIKHET

1231.## LATIF MOTOR WORKS (3269), SADAR BAZAR,GANDHI CHOWK,RANIKHET,(UTTARANCHAL) PIN-263645 PH :05966-220225.

RISHIKESH

1232.* RAKESH AUTOMOBILE ENGINEERS (1464), OPP. BHARAT MANDIR INTER COLLEGE,HARDWAR ROAD,RISHIKESH PIN-249201 PH :0135-2430918/2431918/9412051655.
1233.## GARHWAL GASOLINE STATION (3639), H.P. PETROL PUMP,LAXMAN JHULA ROAD,RISHIKESH PIN-249 201 PH :0135-430351,438626,432617.

ROORKEE

1234.## DUM DUM ENGG. WORKS (1343), 72 CIVIL LINES,NEW HARDWAR ROAD,ROORKEE (U.P) PIN-247667 PH :01332-272903/9412070962.
1235.## ROORKEE AUTO SCANNERS (2675), 786 WEST AMBER TALAB,RAM NAGAR CHOWK,ROORKEE PIN-247667 PH :01332-262467/9837032367.

RUDRAPRAYAG

1236.## RAJESHWARI AUTOMOBILES (5669), BADRINATH ROAD, GHOLTIR,RUDRAPRAYAG,DISTRICT - RUDRAPRAYAG,UTTARANCHAL PIN-246141 PH :-9997771107.

RUDRAPUR

1237.** CORUS MOTORS (5059), D1 D2.20/1, NANITAL ROAD,DISTRICT - U.S. NAGAR,UTTARAKHAND PIN-263153 PH :05944-9927500007/241310.
1238.** BALAJI SERVICE CENTRE (1335), HALDWANI ROAD,RUDRAPUR (NAINITAL),(U.P) PIN-248197 PH :05944-243385.

SIMLI

1239.## PINDER AUTOMOBILES (5527), PLOT # C6-C9,INDUSTRIAL AREA,NEAR KARNAPRAYAG - SIMLI,UTTARANCHAL PIN-251001 PH :01363-9412977249/9837424700/247412/24755 4.

SITARGANJ

1240.## SHRI RAM MOTORS (5833), AGARWAL BHAWAN, BYE PASS ROAD,SITARGANJ,DISTRICT-UDHAM SINGH NAGAR,UTTARANCHAL PIN-242605 PH :05948-254083/9927131111.

VIKASNAGAR

1241.## SOUMYA MOTORS (4272), CHAKRATA ROAD,BEHIND STATE BANK OF INDIA,VIKASNAGAR,DISTT. DEHRADUN (U.A) PIN-248198 PH :01360-252951/ 9412382490/9319799470.

WEST BENGAL

ALIPUR DUAR

1242.## PRADDYOUT AUTOMOBILE WORK (653), PURAN BAZAR,P.O. ALIPURDUAR,JALPAIGURI,WEST BENGAL PIN-736121 PH :03564-255410/9434192320/9832487473.

ARAMBAGH

1243.## MARUTI ZONE (3748), VILLAGE - GARBARI, P.O. DIHIBAIRA,P.S. ARAMBAGH,DISTT. HOOGHLY,WEST BENGAL PIN-712601 PH :03211-258899, 9749139776.

ASANSOL

1244.** WEST END MOTORS (1665), KALYANPUR SATELITE TOWNSHIP PROJECT,KANYAPUR LINK ROAD, PALASHDIAH MORE,PO-KANYAPUR,ASANSOL, WESTBENGAL PIN-713341 PH :0341-9233317323.

1245.## AGARWALLA AUTO SERVICE (3122), 181 BURNPUR ROAD,P.O. BURNPUR,DT. BURDWAN,(WEST BENGAL) PIN- 713 325 PH :0341-2255300/9832123211.

BAHRAMPUR

1246.## NARAYAN BUS SERVICE (656), 17 RABINDRA THAKUR ROAD,P.O. BAHARAMPUR (WEST BENGAL) PIN-742101 PH :03482-224516/9732628065.

1247.* MARUTI CARE (3674), NH-34 UTTARPARA MORE,P.O. RADHARGHAT,BERHAMPORE,MURSHIDABA D (WEST BENGAL) PIN-742187 PH :03482-226428/9732444000/9434394040.

BALURGHAT

1248.## GHOSH AUTOMOBILES (2644), NARAYANPUR,BALURGHAT,DAKSHIN DINAJPUR PIN-733 101 PH :03522-255411, 9434963493/9474141384.

BANDEL

1249.## CAR HOSPITAL (3675), 2 NO. NETAJI PARK,G.T. ROAD,(OPP. MILITARY COLONY),BANDEL (WEST BENGAL) PIN-712123 PH :033-26318639/9831264416/ 9883178879.

BARRACKPORE

1250.## SAMANTA AUTOMOBILES PVT. LTD. (268), CHIRIMORE,BARRACKPORE,NORTH -24 PARGANAS,WEST BENGAL PIN-743101 PH :033-25120820/25420067/5600067/5600820/ 9831823079.

1251.## SPEED AUTOMOBILE (5445), BARRACKPORE-BARASAT ROAD,SEWLI, BARRACKPORE,DISTRCT - 24-PARGANAS (NORTH),(WEST BENGAL) PIN-700121 PH :033-9836561219.

BIRPARA

1252.## PRATAP ENGINEERING WORKS (5246), NH-31, DEMDIMA,PO-BIRPARA,DISTRICT JALPAIGURI,WEST BENGAL PIN-735204 PH :03563-9434216975/9468023768/266486.

BOLPUR

1253.## BASUNDHARA AUTOMOBILES (4241), GOAL PARA,BOLPUR SURI ROAD,BOLPUR PIN-731204 PH :03463-254644, 9832132851.

CHINSURAH

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1254.## UNIVERSAL AUTO REMEDY (648), C/O MR. BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE, PO CHINSURAH, HOOGHLY PIN-712102
PH :033-9748457883/26860303/26860090.

COOCH BEHAR

1255.## PROVA AUTOMOBILES (2846), CHAKCHAKA CHECK POST, NH-31, COOCH BEHAR, (WEST BENGAL) PIN-736101
PH :03582-258082/236204/9434174309/9434174309.
9.

DHALKOLA

1256.## ZAINAB MOTORS (5738), NEAR NEW BUS STAND, NH-34, DALKHOLA, NORTH DINAJPUR, WEST BENGAL PIN-733201
PH :9002524077.

DINHATA

1257.## DINHATA AUTOMOBILES (5739), BALRAMPUR ROAD PO/PS, DINHATA, DISTRICT-COOCHBEHAR, WEST BENGAL PIN-736135
PH :03581-259087/9333937795 / 9434256518.

DURGAPUR

1258.## THE QUICKEST (2879), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR PIN-713212
PH :0343-2520805/9832165126/9749865126.

FARAKKA

1259.** SPEED WHEEL SERVICE CENTRE (1056), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.) PIN-742236
PH :03485-252691/252269/9434101917/9434752269.
9.

HABRA

1260.## EVERGREEN AUTOMOBILES & ENGINEERING WORKS (4666), BIRA JOYPUL, HABRA, NH-35, WEST BENGAL PIN-743234
PH :03216-269852/9333737566/269852/9830485232/9332906057.

HALDIA

1261.** S.D. REPAIRING CENTRE (2168), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY, HALDIA, DISTT. MIDNAPORE (W.B.) PIN-721606
PH :03224-252152/645146/9434021405.

HOWRAH

1262.## GREWAL AUTO SERVICE (1570), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH PIN-711102
PH :9831017806/26787250/26787024.
1263.## WHEEL WORKS (5063), GIP COLONY JAGACHA, KONA EXPRESS WAY, HOWRAH, DISTRICT - HOWRAH, WEST BENGAL PIN-711112
PH :033-9830044007/26575467.

JAIGAON

1264.** SHAKTI TRADING CO. (770), M.G. ROAD, JAIGAON PIN-736182
PH :0356-263241, 9547540605, 9233780027.

JALPAIGURI

1265.## AUTOSTEL (646), SAKOAJHORRA, P.O. GAIRKATA, DIST. JALPAIGURI, (W.B.) PIN-735212
PH :03567-233116/9934111868.
1266.** S.S. AUTOMOBILES (3664), ASSAM MORE, JALPAIGURI, WEST BENGAL PIN-735101
PH :03561-9434340252/2565665.

KALYANI

1267.## GOPAL AUTO SERVICE CENTRE (3373), B.K. EXPRESSWAY, BUDHHA PARK, KALYANI, NADIA (WEST BENGAL) PIN-741235
PH :033-25822481/9831010481.
1268.## KRISHNA ENGINEERING WORKS (5270), PLOT NO. 199, KANTABELE, O.N.G.C ROAD, KALYANI EXPRESS ROAD, PO: GHORAGACHHA, PS - KALYANI, WEST BENGAL PIN-741235
PH :9339964302/9378283965.

KOLKATA

1269.** AUTOKRAFT (620), F 1/G-3, RIC IND. ESTATE UPEN BANERJEE ROAD, PARNASREE, CALCUTTA (W.B.) PIN-700060
PH :033-24925747/24925299/24078938/9830330090.
1270.* BHAWANIPUR AUTO CENTRE (628), 49 S.P. MUKHERJEE ROAD, CALCUTTA, (W.B.) PIN-700 026
PH :033-24753130/24766011/9831783130.
1271.## CAMAC (621), 2/E CAMAC STREET, CALCUTTA, (W.B.) PIN-700016
PH :033-9831093716/22296781.

1272.** DIAL AUTOMOBILES PVT. LTD. (643), 162 A PARY MOHAN RAY ROAD, CALCUTTA, (W.B.) PIN-700027
PH :033-24484393/9830552491.

1273.** MOTORCRAFT (635), P-149 REMOUNT ROAD, CALCUTTA, (W.B.) PIN-700027
PH :033-9830330090/24490737.

1274.## RUSSA ROAD SERVICE STATION (622), 30 SP MUKERJEE ROAD, CALCUTTA, (W.B.) PIN-700025
PH :033-9748757842/24533384/24551146.
1275.## YOUNG AUTOMOBILES (637), 50/2 HAZARA ROAD, CALCUTTA, (W.B.) PIN-700019
PH :033-24753944/9433552047/ 9830250904.

1276.* DELUXE SERVICE STATION (672), P-256 257 CIT ROAD, CALCUTTA PIN-700010
PH :033-23710012/23630151/9830062952/9830062979.

1277.** NORTH POINT MOTORS PVT. LTD. (344), DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA PIN-700037
PH :033-9830220069/25560501/25573826.

1278.** ADAMS MOTOR WORKS (465), 61 A SHAKESPEARE SARANI, CALCUTTA, CALCUTTA PIN-700017
PH :033-9831020888/22876402/22807414.

1279.* MARUTI LINK (1633), CK-12 SECTOR 2, SALT LAKE, CALCUTTA PIN-700091
PH :033-23586921/23590675/9433004520/9831180421.

1280.** R.S. SERVICE CENTRE (1948), 1/2 MAHENDRE ROY LANE, CALCUTTA, CALCUTTA PIN-700046
PH :033-9831036017/9903992685/65293726.

1281.## AUTO SCAN (2272), 100/1 B.T. ROAD, CALCUTTA, CALCUTTA PIN-700090
PH :033-9231622309/25315066.

1282.* PRINCE MOTOR WORKSHOP (2845), TM - 2/8 TEGHARIA, P.O. HATJARA, CALCUTTA PIN-700059
PH :033-9836392945/ 9831555451/25703948.

1283.## INTERNATIONAL AUTO WORKS (2648), 48-C SOUTH TANGRA ROAD, KOLKATA PIN-700046
PH :033-9331265805/23282119.

1284.## SONA AUTO UDYOG (3144), 1404 PURBACHAL MAIN ROAD, OPP. KALIKAPUR MARKET, KOLKATA PIN-700099
PH :033-9331054525/2484373/24840682.

1285.## CLASSIC ENGINEERING WORKS (3171), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO. G-1, KOLKATA PIN-700034
PH :033-9831773168/24477502.

1286.## FORTUNE AUTO CARE (3167), 16 G/6 KHANPUR ROAD, KOLKATA, (W.B.) PIN-700047
PH :033-24214439, 9831754527, 9831737980.

1287.## SUNNY AUTOMOBILE (3166), 105/H/18 BIDHAN NAGAR ROAD, KOLKATA PIN-700067
PH :033-9830392097/23562693.

1288.## ULTRA CRAFT (4643), 103/1B, RAJA DINENDRA STREET, KOLKATA, WEST BENGAL PIN-700006
PH :033-9830741255/23525006/5161.

1289.## ROYAL CALCUTTA AUTOMOBILES (4651), 68 BROAD STREET, KOLKATA PIN-700019
PH :033-9831299851/ 9883250911/22892829.

1290.## TECHNO AUTO WORKS (4669), 619, RAJA RAM MOHAN ROY ROAD, BIREN ROY ROAD EAST, BEHALA, KOLKATA PIN-700008
PH :033-9830111258/24068823/9939.

1291.## ZENITH AUTO (5529), BOHLA NATH SARANI, CHINAR PARK, RAJARHAT, KOLKATA-700157, DISTRICT - KOLKATA, WEST BENGAL PIN-700059
PH :033-9830643781/9830474175/9433904110/9433951707/65689931.

1292.## ZOVAR AUTOMOBILES PVT. LTD (5578), 42/A1B, RAJA SANTOSH ROAD, KOLKATA, DISTRICT - KOLKATA, WEST BENGAL PIN-700027
PH :033-24792490/24498004/9874795704.

1293.* RAJ AUTO SERVICE (5338), 35. CANAL EAST ROAD, KOLKATA, WEST BENGAL PIN-700011
PH :033-9831103901/23542996.

KRISHNANAGAR

1294.## TARA MA AUTOMOBILES (1947), BATHJANGLA, KRISHNA NAGAR, DISTT. NADIA (W.B.) PIN-741101
PH :03472-2722371/652357/9431054765.

1295.## HIGHWAY SERVICE CENTRE (4455), ASHA DEEP, NH-34, KRISHNANAGAR, NADIA, WEST BENGAL PIN-741101
PH :03472-9434165494/9831186730.

MADHYAMGRAM

1296.* PAUL AUTOMOBILES (671), JESSORE ROAD, MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH PIN-700129
PH :033-9830239001/69904062/28261051.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MARUTI AUTHORISED SERVICE STATIONS (MASS) (AS ON 01.04.2017)

1297. # J. G BEHAL AUTO (4653),
DOLTALA,GANGANAGAR,MADHYAMGRAM,K
OLKATA (WEST BENGAL) PIN-700129
PH :033-9831094430/25268294/64511516.

MALDA

1298. ## ABHISEK AUTO CENTRE (1976),
N.H.34,NEAR ST. XAVIER SCHOOL,P.O.
MOKDUMPUR,DISTT. MALDA (W.B.)
PIN-732101
PH :03512-9434065360/253987.

MIDNAPORE

1299. # CHATTERJEE AUTOMOBILE (4960),
INDUSTRIAL GROWTH AREA,KHASJANGAL
(NEAR
KERANICHOTI),MIDNAPORE,DISTRICT-PAC
HIM MIDNAPORE PIN-721101
PH :9434043558.

NARENDRAPUR

1300. ## A.M. AUTOMOBILES (3175),
KAMALGAZI,NARENDURPUR,KOLKATA,(WE
ST BENGAL) PIN-700103
PH :033-9836038971/2477 3402.

PURULIA

1301. ## BANERJEE AUTO SERVICE (640),
S.P.BANERJEE ANALBILA VILLA,RANCHI
ROAD,PURULIA,(W.B) PIN-723101
PH :03252-9434656942/223228.

RAGHUNATHGANJ

1302. ## AUTO WHEEL (4427), UMARPUR,
NH-34,GHORSHALA,RAGHUNATH
GANJ,MURSHIDABAD (WEST BENGAL)
PIN-742225
PH :03488-9434083866/267281.

RUPNARAYANPUR

1303. ## L. K. MOTORS (3477), NH 2 BYPASS,POINT
(CHOWRANGI),RUPNARAYANPUR
(CHALBALPUR),BURDWAN PIN-713343
PH :0341-2513800/9434107787.

SILIGURI

1304. # BHAWANI MOTOR GARAGE (4844),
BIDYASAGAR PALLY,NEAR RISHI BHAWAN,
BURDWAN ROAD,SILIGURI,WEST BENGAL
PIN-734405
PH :0358-9434152177/ 9434376860/2500418.
1305. # MUM AUTO WORKS (4835), NEAR DELHI
PUBLIC SCHOOL,PANCHANAI
(DAGAPUR),SILIGURI,WEST BENGAL
PIN-734003
PH :9832068537.

SODEPUR

1306. ** CAR CARE (1950), B.T.
ROAD,SODEPUR,P.O.: SUKCHAR,24
PARGANAS (NORTH) PIN-700115
PH
:033-25830783/25832786/25635800/983004917
7.

SRIRAMPUR

1307. * MARUTI AUTO CENTRE (2167), 85/18 G.T.
ROAD (WEST),PO :
MULLIKPARA,SRIRAMPUR,HOOGLY (W.B.)
PIN-712203
PH :033-9831299543/ 9331884559/26225634.

SURI

1308. ## PANCHANATH AUTOMOBILES (4456),
BROJARGRAM BARABAGAN,BAKRESWAR
PATHARCHAPURI HIGHWAY
MORE,SURI,WEST BENGAL PIN-731101
PH :03462-9831823079/25920182.

ULUBERIA

1309. ## APSARA SERVICE STATION (3374), NEAR
BANITABLA CHECKPOST,ON
NH-6,ULUBERIA,(W.B.) PIN-711316
PH :033-9836084524/26610656.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

MEMO

MEMO

MEMO
