



## OWNER'S MANUAL & SERVICE BOOKLET


For vehicle fitted with CNG fuel system, use Tour M CNG Supplementary Owner's Manual, available with the vehicle.

Keep the booklet with the vehicle at all times.

Contains Warranty policy and important information on Safety, Operation & Maintenance.

Part No. 99011M72R82-74E  
October, 2023 (ENG.)

This Owner's Manual & Service Booklet applies to TOUR M models.  
produced by MARUTI SUZUKI INDIA LIMITED.

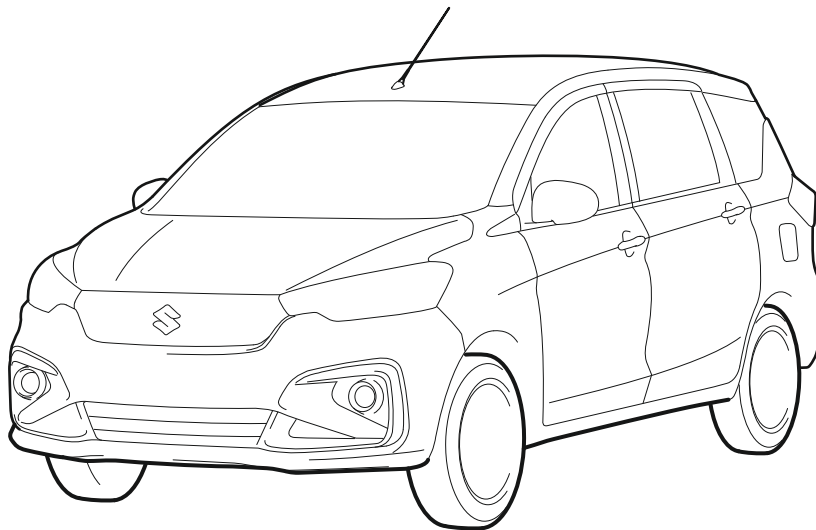

Note : The illustrated Model is one of the TOUR M series  
Accessories shown in the picture are not part of standard equipment

© Copyright 2023 **Maruti Suzuki India Limited**. All rights reserved.

No part of this manual can be reproduced in any manner whatsoever or transmitted  
in any form or by any means without prior written consent of Maruti Suzuki India Limited.

## FOREWORD

This manual is an essential part of your vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new MARUTI SUZUKI and review the manual from time to time. It contains important information on safety, operation and maintenance. You are invited to avail the three Free Inspection Services as described in the manual. Three free inspection coupons are attached to this manual. Please show this manual to your dealer workshop while you take your MARUTI SUZUKI for any Service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

### MARUTI SUZUKI INDIA LIMITED

**All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.**

**This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.**

## IMPORTANT

### **WARNING/** **CAUTION/NOTICE/** **NOTE**

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

#### **WARNING**

Indicates a potential hazard that could result in death or serious injury.


#### **CAUTION**

Indicates a potential hazard that could result in minor or moderate injury.

#### **NOTICE**

Indicates a potential hazard that could result in vehicle damage.

**NOTE:**  
*Indicates special information to make maintenance easier or instructions clearer.*

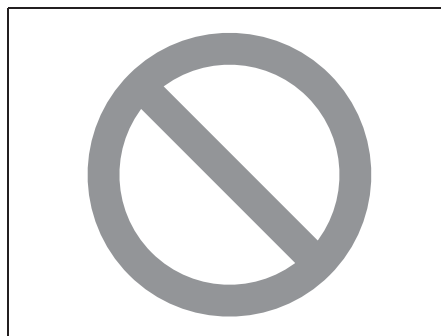

75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

#### **NOTE:**

- Words like car, model/variant are invariably used in this manual to denote the "Vehicle".
- Pictorial representations used in this manual are for reference purposes only.

## MODIFICATION WARNING

### **WARNING**

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

#### **NOTICE**

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorised workshop or qualified service technician for advice on installing such mobile communication equipment.

#### **NOTICE**

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.



## “WARNING”



Vehicle may **break-down**, meet with an **accident** or **catch fire** due to

1. Installation of
  - High wattage bulbs
  - Non genuine lamps / horns
  - Modified suspension / wheels
  - Non genuine parts / accessories etc.
2. Retrofitment of LPG / CNG fuel systems/kits.
3. Usage of domestic LPG.
4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may **break-down** or **engine may fail** due to

1. Water entry into the engine (which may lead to hydrostatic lock).
2. Short circuiting of the electrical systems.

**If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.**

NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

## “CAUTION”

1. Retro-fitment of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
3. Usage of domestic LPG for running vehicles is prohibited as per law.
4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning.(reduced contact area between tire and road due to presence of water)
6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
9. Always wear seat belt at all the times.
10. Do not use mobile phone while driving.
11. Avoid Smoking in the car, live bud thrown in car may cause fire.
12. Do not put any body part under the vehicle when it is supported on a Jack.
13. Do not use non-genuine accessories in your vehicle.
14. Do not fit accessories from unauthorized workshops/sources.
15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
19. Do not check the engine room / open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
20. Avoid driving when vehicle has met with an accident . Before driving, Please contact with authorized MSIL dealership.

<b>VIN:</b>																		
<b>MODEL:</b>							<b>OWNER NAME &amp; ADDRESS</b>											
<b>VARIANT:</b>																		
<b>COLOUR:</b>																		
<b>ENGINE NO.:</b>							<b>CONTACT NO.</b>											
<b>KEY NO.:</b>							<b>E-mail ID:</b>											
<b>INVOICE DATE:</b>							<b>SELLING DEALER NAME &amp; CODE</b>											
<b>ODOMETER READING</b>									<b>KM</b>									
<b>REGISTRATION NO.:</b>																		
<b>BATTERY MAKE:</b>							<b>DEALER SHOWROOM ADDRESS &amp; CONTACT NO. (STAMP)</b>											
<b>BATTERY NO.:</b>																		
<b>BATTERY BATCH</b>																		
<b>TYRE</b>	<b>MAKE</b>	<b>BATCH CODE</b>																
Front Right							<b>CONTACT NO. FOR SERVICE APPOINTMENT &amp; SUPPORT</b>											
Front Left																		
Rear Right																		
Rear Left																		
Spare																		
For any assistance with regard to our product, please contact General Manager/Works Manager at any of our Dealer or Authorised workshop. For additional enquiry, you may contact our Regional Office or Service Department. The addresses and phone numbers are given in Service Network section of this Manual.																		

**CUSTOMER SERVICE MAINTENANCE RECORD (to be filled by customer)**

INSPECTION SCHEDULE	DATE OF SERVICE	MILEAGE (KM)	NAME OF SERVICING WORKSHOP
1 <sup>st</sup> Free inspection service - 1 Month / 1000 KM*			
2 <sup>nd</sup> Free inspection service - 6 Months / 5000 KM *			
3 <sup>rd</sup> Free inspection service - 12 Months / 10000 KM*			
1 <sup>st</sup> Paid inspection service - 24 Months / 20000 KM*			
2 <sup>nd</sup> Paid inspection service - 36 Months / 30000 KM*			
3 <sup>rd</sup> Paid inspection service - 48 Months / 40000 KM*			
4 <sup>th</sup> Paid inspection service - 60 Months / 50000 KM*			
5 <sup>th</sup> Paid inspection service - 72 Months / 60000 KM*			
6 <sup>th</sup> Paid inspection service - 84 Months / 70000 KM*			
7 <sup>th</sup> Paid inspection service - 96 Months / 80000 KM*			
8 <sup>th</sup> Paid inspection service - 108 Months / 90000 KM*			
9 <sup>th</sup> Paid inspection service - 120 Months / 100000 KM*			
10 <sup>th</sup> Paid inspection service - 132 Months / 110000 KM*			
11 <sup>th</sup> Paid inspection service - 144 Months / 120000 KM*			
12 <sup>th</sup> Paid inspection service - 156 Months / 130000 KM*			

\* Interval: This interval should be judged by month(s) or odometer reading, whichever comes first.

**Maruti Suzuki Network can be viewed by installing below Mobile Apps:**

**Maruti Suzuki Rewards** app ensures a hassle free car ownership experience. Get easy access to all the services and information you need by downloading the app



**1ST. FREE INSPECTION COUPON**

(Customer's copy)

(1 MONTH or 1,000 KM  
whichever comes first)

Model Name											
Model Code*											
VIN											
Engine No.											
Mileage											
Invoice Date		D	D	M	M	Y	Y				
Date of Inspection		D	D	M	M	Y	Y				
Registration No.											
Customer Name											
Ph. No.											
Service workshop / MASS Code (fill below)											

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**Workshop In charge  
Signature**For periodic maintenance schedule,  
refer to "Inspection and Maintenance"  
section of this manual****1ST. FREE INSPECTION COUPON**

(Selling dealer copy)

(1 MONTH or 1,000 KM  
whichever comes first)

Model Name											
Model Code*											
VIN											
Engine No.											
Mileage											
Invoice Date		D	D	M	M	Y	Y				
Date of Inspection		D	D	M	M	Y	Y				
Registration No.											
Customer Name											
Ph. No.											
Service workshop / MASS Code (fill below)											

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**Workshop In charge  
Signature**1ST. FREE INSPECTION COUPON**

(Servicing W/S copy)

(1 MONTH or 1,000 KM  
whichever comes first)

Model Name											
Model Code*											
VIN											
Engine No.											
Mileage											
Invoice Date		D	D	M	M	Y	Y				
Date of Inspection		D	D	M	M	Y	Y				
Registration No.											
Customer Name											
Ph. No.											
Service workshop / MASS Code (fill below)											

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**Workshop In charge  
Signature

### 1ST. FREE INSPECTION COUPON

(Servicing W/S copy)

(1 MONTH or 1,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

#### For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited

### 1ST. FREE INSPECTION COUPON

(Selling dealer copy)

(1 MONTH or 1,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

#### For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited

### 1ST. FREE INSPECTION COUPON

(Customer's copy)

(1 MONTH or 1,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

#### For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited

**2ND. FREE INSPECTION COUPON**

(Customer's copy)

(6 MONTHS or 5,000 KM  
whichever comes first)

Model Name															
Model Code*															
VIN															
Engine No.															
Mileage															
Invoice Date			D	D	M	M	Y	Y							
Date of Inspection			D	D	M	M	Y	Y							
Registration No.															
Customer Name															
Ph. No.															
Service workshop / MASS Code (fill below)															

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**

Workshop In charge Signature
---------------------------------

**For periodic maintenance schedule,  
refer to "Inspection and Maintenance"  
section of this manual****2ND. FREE INSPECTION COUPON**

(Selling dealer copy)

(6 MONTHS or 5,000 KM  
whichever comes first)

Model Name															
Model Code*															
VIN															
Engine No.															
Mileage															
Invoice Date			D	D	M	M	Y	Y							
Date of Inspection			D	D	M	M	Y	Y							
Registration No.															
Customer Name															
Ph. No.															
Service workshop / MASS Code (fill below)															

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**

Workshop In charge Signature
---------------------------------

**2ND. FREE INSPECTION COUPON**

(Servicing W/S copy)

(6 MONTHS or 5,000 KM  
whichever comes first)

Model Name															
Model Code*															
VIN															
Engine No.															
Mileage															
Invoice Date			D	D	M	M	Y	Y							
Date of Inspection			D	D	M	M	Y	Y							
Registration No.															
Customer Name															
Ph. No.															
Service workshop / MASS Code (fill below)															

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**

Workshop In charge Signature
---------------------------------

## 2ND. FREE INSPECTION COUPON

(Servicing W/S copy)

(6 MONTHS or 5,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

### For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited

## 2ND. FREE INSPECTION COUPON

(Selling dealer copy)

(6 MONTHS or 5,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

### For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited

## 2ND. FREE INSPECTION COUPON

(Customer's copy)

(6 MONTHS or 5,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

### For Servicing Workshop

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited



**3RD. FREE INSPECTION COUPON**

(Customer's copy)

(12 MONTHS or 10,000 KM  
whichever comes first)

Model Name															
Model Code*															
VIN															
Engine No.															
Mileage															
Invoice Date			D	D	M	M	Y	Y							
Date of Inspection			D	D	M	M	Y	Y							
Registration No.															
Customer Name															
Ph. No.															
Service workshop / MASS Code (fill below)															

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**Workshop In charge  
Signature**For periodic maintenance schedule,  
refer to "Inspection and Maintenance"  
section of this manual****3RD. FREE INSPECTION COUPON**

(Selling dealer copy)

(12 MONTHS or 10,000 KM  
whichever comes first)

Model Name															
Model Code*															
VIN															
Engine No.															
Mileage															
Invoice Date			D	D	M	M	Y	Y							
Date of Inspection			D	D	M	M	Y	Y							
Registration No.															
Customer Name															
Ph. No.															
Service workshop / MASS Code (fill below)															

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**Workshop In charge  
Signature**3RD. FREE INSPECTION COUPON**

(Servicing W/S copy)

(12 MONTHS or 10,000 KM  
whichever comes first)

Model Name															
Model Code*															
VIN															
Engine No.															
Mileage															
Invoice Date			D	D	M	M	Y	Y							
Date of Inspection			D	D	M	M	Y	Y							
Registration No.															
Customer Name															
Ph. No.															
Service workshop / MASS Code (fill below)															

**COST OF MATERIALS AND CONSUMABLES TO BE  
BORNE BY CUSTOMER**Workshop In charge  
Signature

**3RD. FREE INSPECTION COUPON**

(Servicing W/S copy) (12 MONTHS or 10,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

**For Servicing Workshop**

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited

**3RD. FREE INSPECTION COUPON**

(Selling dealer copy) (12 MONTHS or 10,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

**For Servicing Workshop**

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited

**3RD. FREE INSPECTION COUPON**

(Customer's copy) (12 MONTHS or 10,000 KM  
whichever comes first)

Stamp of Selling dealer  
(Code & Full Address)

**For Servicing Workshop**

1. Please Fill up Model codes correctly.
2. Please fill up Complete VIN.
3. Please fill up customer name and Phone No.  
details legibly and correctly for the latest owner.
4. Free service coupon of selling dealer not  
operational at present, should be sent to MSIL on  
monthly basis.



Service Division  
Maruti Suzuki India Limited

## WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorised dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

### (1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised workshop.

### (2) Term:

**The term of the warranty shall be twenty-four (24) months or 40,000 kilometers (whichever occurs first) from the date of invoice to the first owner.**

### NOTICE

**Maruti Suzuki offers warranty of sixty (60) months or 1,00,000 kilometers (whichever occurs first) for Lithium-ion battery & Integrated Starter Generator (ISG) in petrol model from the date of invoice to the first owner.**

### (3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

### (4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, Consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres\* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.
- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding - not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
- (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
- (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
- (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.

(\* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer.)

- 
- (i) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
  - (j) Any vehicle which has not received the service inspections prescribed in this Owner's Manual and Service Booklet.
  - (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorised workshop.
  - (l) Any vehicle which has been used for purposes other than what it was designed for.
  - (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
  - (n) Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
  - (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
  - (p) Installation and usage of domestic LPG gas/LPG Cylinder.
  - (q) V-belts, hoses and gas leaks.
  - (r) Any vehicle retrofitted with LPG/CNG kits.
  - (s) Repainting including patchwork, bodywork and mouldings and interior trims.
  - (t) Corrosion, rusting of body parts and/ or components.
  - (u) Any vehicle on which odometer has been changed unauthorisedly or odometer reading has been modified/ tampered with/ or not matching the service records.
  - (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
  - (w) Any damage(s) caused to vehicle including battery/ tyre due to parking of the vehicle in idle condition for long duration of time periods.

- (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
- (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

**(5) Extent of Warranty:**

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

**(6) Warranty Service:**

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorised workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

## (7) Owner's Warranty Obligations:

### **NOTICE**

**The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.**

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorised workshop all the service inspections specified in the Maruti Suzuki "Owner's Manual and Service Booklet" and maintain adequate proof that such service inspections have been performed.
- Update and maintain the 'Customer service maintenance records' page in the "Owner's Manual and Service Booklet", whenever service inspection or warranty service is carried out on the vehicle in a Maruti Suzuki authorised workshop.
- Present the Maruti Suzuki "Owner's Manual and Service Booklet" to the Maruti Suzuki authorised workshop whenever requesting service inspections or warranty service.

If the "Owner's Manual and Service Booklet" should be lost or destroyed the owner should consult the Maruti Suzuki authorised dealer from whom the vehicle was purchased for instructions concerning replacement of the "Owner's Manual and Service Booklet".

## (8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

## (9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.

### **NOTE:**

*Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.*

---

## EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities (**New Delhi, Kolkata, Mumbai and Chennai**) with effect from July 1st, 2001.

### Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of invoice to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

### Conditions:

1. Under Emission Warranty, Warranty claims will be admitted for a prima-facie examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
2. The warranty claims will only be accepted after examination carried out by Maruti Suzuki or Maruti Suzuki authorised workshop which leads to firm conclusions that the
  - a) Original settings have not been tampered in any case.
  - b) Part (as given in Annexure - A) has a manufacturing defect.
  - c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.
3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and Maruti Suzuki authorised workshop and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and Maruti Suzuki authorised workshop has the right to charge all, or part of the cost of such examination.
4. Under Emission Warranty, the parts (as given in Annexure - A) will be changed free of cost, but the consumables will be charged as per actual.
5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and Maruti Suzuki authorised workshop will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
6. Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
7. Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest Maruti Suzuki authorised workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki authorised workshop.
8. Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
9. Emission Warranty will not be affected by the change of owner, provided all the documents are available.

- 
10. All maintenance actions (as specified in the Owner's Manual and Service Booklet) need to be followed and recorded in the manual for emission warranty.
  11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The receipts (for the maintenance of the vehicle as per specification in Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

**Conditions under which the Emission Warranty is not APPLICABLE**

1. In the absence of valid PUC certificate.
2. Vehicle not serviced from Maruti Suzuki authorised workshop as per the schedule specified in the Owner's Manual.
3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
4. Use of non MSGP (Maruti Suzuki Genuine Part).
5. Vehicle that has been tampered with.
6. Tampering with odometer so that the actual kilometer reading cannot be determined.
7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).

**Annexure - A**

List of parts (if applicable) covered under Emission Warranty

1. Fuel Injection Assembly, Pressure Regulator, Throttle Body Assembly.
2. Electronic Control Module (ECM).
3. Intake Manifold.
4. EGR valve.
5. Ignition Coil.
6. Canister Assembly.
7. Vapour Liquid Separator.
8. Fuel Tank and Filler Cap.
9. PCV (Positive Crankcase Ventilation) Valve.
10. Oil Filler Cap.
11. Catalytic Converter.
12. Exhaust Manifold.
13. All Fuel Injection System related Sensors.
14. High Pressure Fuel Pump.
15. Glow Plug.
16. Glow Plug Controller.









---


## TABLE OF CONTENTS

FOR SAFE DRIVING	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
INSPECTION AND MAINTENANCE	6
EMERGENCY SERVICE	7
APPEARANCE CARE	8
SPECIFICATIONS	9
SERVICE NETWORK	10



FOR SAFE DRIVING

1

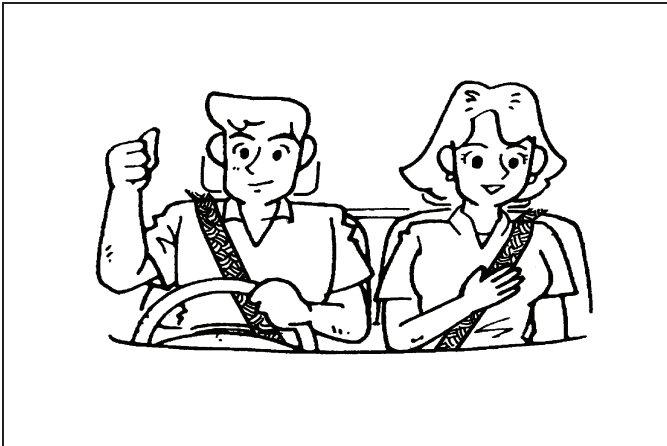

65D231S

Floor Mats ..... 1-1

Front Seats ..... 1-1

Rear Seats ..... 1-3

Seat Belts and Child Restraint Systems ..... 1-8


Child restraint system ..... 1-20

Supplemental Restraint System (airbags) ..... 1-26

Exhaust Gas Warning ..... 1-34

## FOR SAFE DRIVING

### Floor Mats

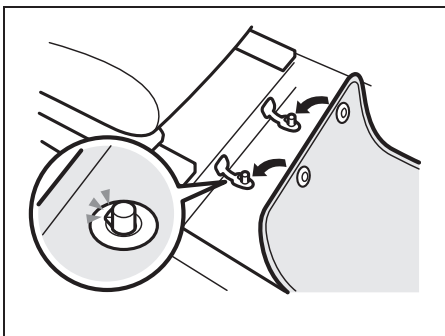

60MK020

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, MARUTI SUZUKI genuine floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, be sure to hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend using MARUTI SUZUKI genuine floor mats for proper fitting.

#### WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Make sure that the floor mat grommets are hooked to the fasteners.
- Never stack floor mats.
- Never use a floor mat which does not fit the floor as the same may cause hindrance/damage in vehicle and its functioning.
- Never use damaged floor mats.

### Front Seats

#### Seat Adjustment

#### WARNING

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.

#### WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

#### WARNING

Do not place any object under the front seat. If an object becomes caught under the front seat, the following may occur.

- The seat will not be latched.
- Also the lithium-ion battery located under the front left side seat, in a model equipped with ENG A-STOP system, will be damaged.

## FOR SAFE DRIVING

### **⚠ WARNING**

Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.

### Adjusting Seat Position



73R0032

The adjustment lever for each front seat is located under the front of the seat. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward. After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

### Adjusting Seatbacks

### **⚠ WARNING**

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

#### NOTE:


To operate the seat back smoothly, pull the seat back adjustment lever in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.



72R0133

To adjust the seatback angle of front seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

### Head Restraints

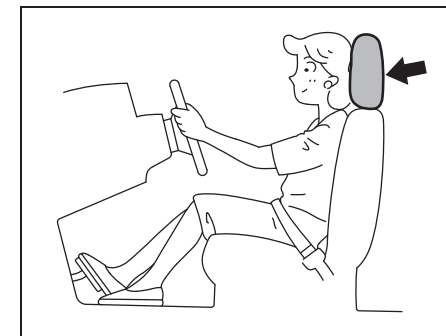

63J246

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.


## FOR SAFE DRIVING

### ⚠ WARNING

- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

#### NOTE:

*It may be necessary to recline the seat back to provide enough overhead clearance to remove the head restraint.*

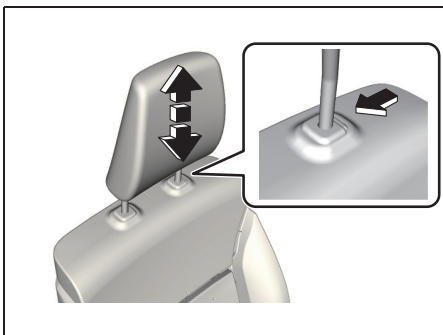

73R0035


To raise the front head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

### Rear Seats Seat Adjustment

### ⚠ WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

### Adjusting Seat Position (for 2nd row seats)

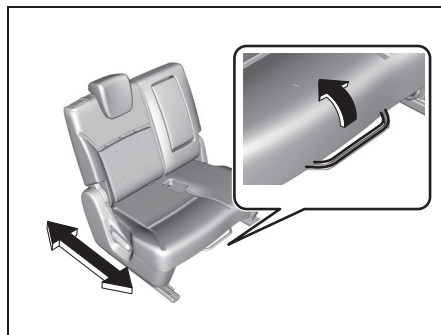

72R0024

The adjustment levers for 2nd row seats are located under the front of the seats. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

### NOTICE

When the 3rd row seat is folded forward, adjust the 2nd row seat not to reach the 3rd row seat.

### Adjusting Seatbacks

### ⚠ WARNING


All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

#### NOTE:

*To operate the seat back smoothly, pull the seat back adjustment lever in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.*

## FOR SAFE DRIVING


### For 2nd row seats

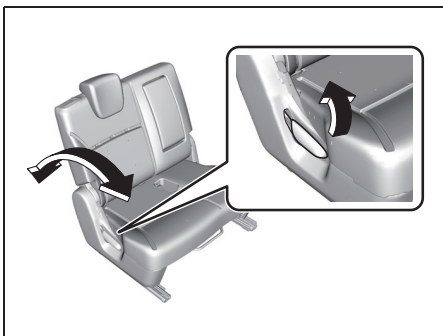

72R0025

To adjust the seatback angle of 2nd row seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

### For 3rd row seats

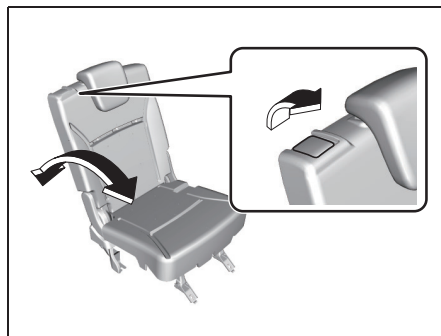

73RS017

To adjust the seatback angle of 3rd row seats, lift up the release lever, move the seatback to the desired position, and return the lever to lock the seatback in place.

### ⚠ WARNING


Do not pull down the backrest more than required, the seat belt cannot show full effect.

### NOTICE

Adjust the 3rd row seat after getting down from the seat. If the release lever is pulled while being seated, the backrest will suddenly collapse to max angle.

Pull the release lever fully. If the seat is made to collapse without the lock being released, movement of lock will become heavy.

### Walk-in Type Seats (for 2nd row seats)

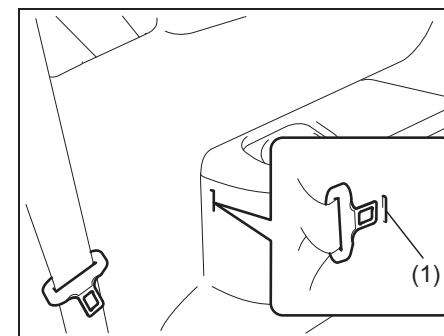


73R0038

### NOTE:

To enter to or exit from the 3rd row seat, insert the tongue plate of the buckle into the part (1) before moving the 2nd row seat.

## FOR SAFE DRIVING

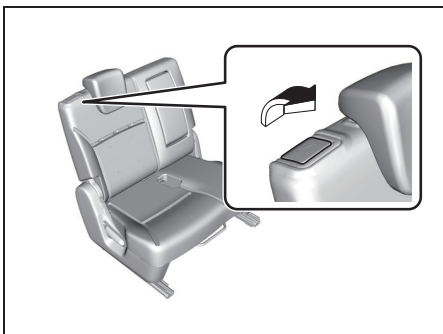

72R0026

The walk-in type seat can be moved to provide easy entry to and exit from the 3rd row seats. You can move a walk-in seat by lifting up the release lever and pushing the seatback forward.

### WARNING

- After using the walk-in function, be sure to return the folded seat back to an upright position.
- Before returning a walk-in seat to its normal seating position, make sure that the feet of the passenger in the 3rd row seat are out of the way.
- After returning the seat to its normal seating position, make sure it is securely latched.

### NOTICE

Release lever is meant for easy entry purpose only. Not to be used for adjusting seatback.

### Head Restraints

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

### WARNING


- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

#### NOTE:

*It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.*


Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

### 2nd row seats

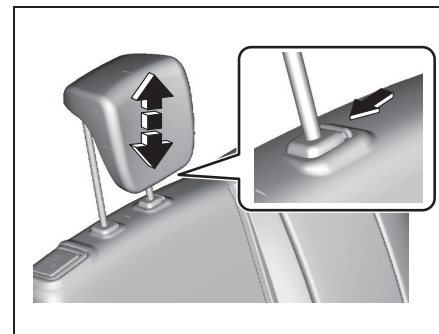

72R0134

### 3rd row seats

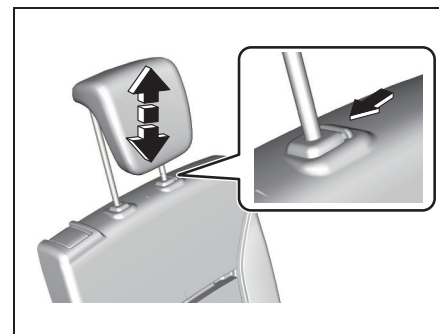

73R0040

To raise the rear head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the



## FOR SAFE DRIVING

restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.


When installing a child restraint system, raise the head restraint to the most upper position.

### Folding Rear Seats

The rear seat of your vehicle can be folded forward to provide additional cargo space.

#### 2nd row seats

To fold the 2nd row seat forward:

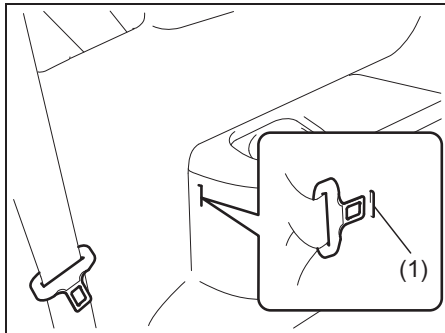


- 1) Insert the tongue plate of the buckle unto the part (1)

#### NOTICE

- When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.

- 2) Lower the head restraint fully.  
3) Store the seat belt buckles in the seat cushion slit.

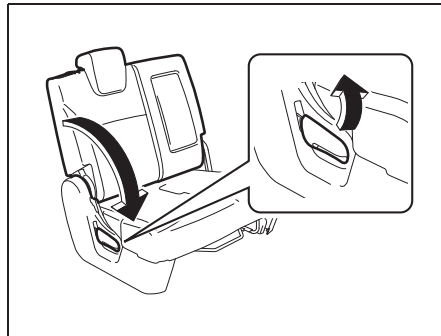

- 4) Pull up the lever on the outboard side of the seat, and fold the seatback forward.

#### NOTICE

When the 2nd row seat head restraint reaches the front seatback, slide the front seat forward.

#### ⚠ WARNING


If you need to carry cargo in the passenger compartment with the 2nd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.

To return the seat to the normal position, follow the procedure below.

#### NOTICE

When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

## FOR SAFE DRIVING

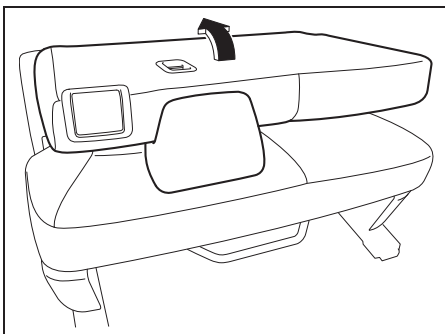

73R0006

Raise the seatback until it locks into place.

### NOTE:


*When the seatback is locked in the folded position, pull up the lever on the outboard side of the seat to unlatch the seatback.*

After returning the seat, try moving the seatback to make sure they are securely latched.

### 3rd row seats


To fold the 3rd row seat forward:

- 1) Lower the head restraint fully.

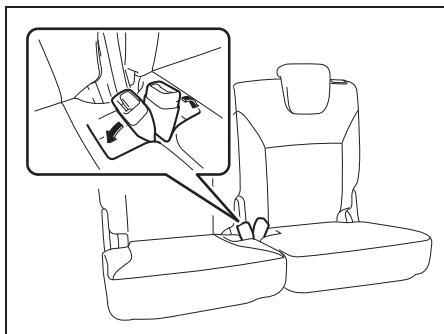

73R0207

- 2) Stow the seat belt buckles of the right and left seating position into the pocket of the seat cushion as shown in the illustration.

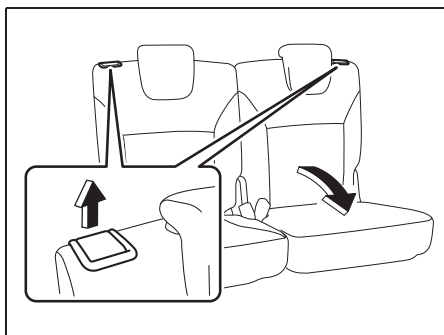

73R0007

- 3) Lift up the release lever on the top of seat, and fold the seatback forward.

### NOTICE

**When the 3rd row seat head restraint reaches the 2nd row seatback, slide the 2nd row seat forward.**

### NOTICE


**When you are not using a seat belt, stow the seat belt buckles of the right and left seating position into the pocket first. This helps prevent being caught by the seat and being damaged.**

### ⚠ WARNING

**If you need to carry cargo in the passenger compartment with the 3rd row seatback folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatback.**

## FOR SAFE DRIVING

To return the seat to the normal position, follow the procedure below.

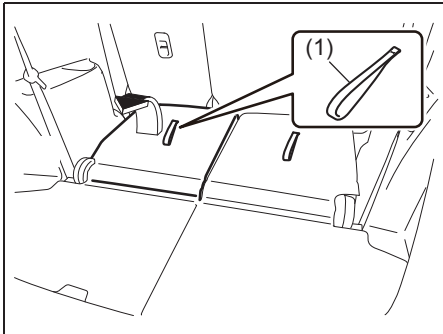

73R0008

Raise the seatback until it locks into place.


When you raise the seat from back of it, pull the strap (1).

### NOTICE

**Do not allow items in the luggage box to extend above the top of the luggage box. Otherwise, the luggage box or cover may be damaged.**

After returning the seat, try moving the seatback to make sure they are securely latched.

## Seat Belts and Child Restraint Systems

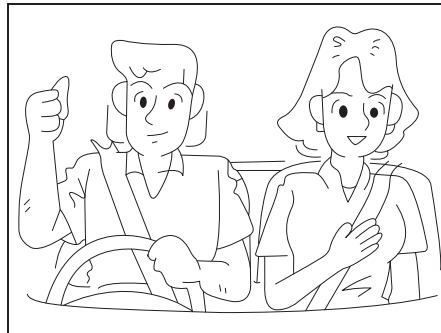


65D231S

### ⚠ WARNING

**Wear Your Seat Belts at All Times.**

### ⚠ WARNING

An airbag supplements, or adds to, the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

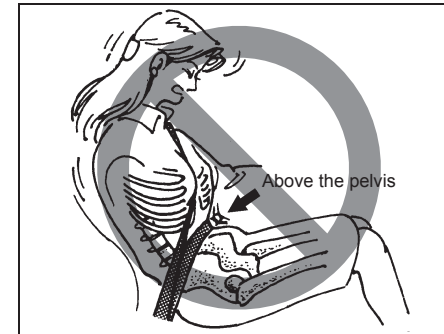

65D606

### ⚠ WARNING


**Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision**

## FOR SAFE DRIVING

### ⚠ WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted as follows:
  - the lap portion of the belt should be worn low across the pelvis, not across the waist.
  - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
  - the shoulder straps should be away from your face and neck, but not falling off your shoulder.

(Continued)

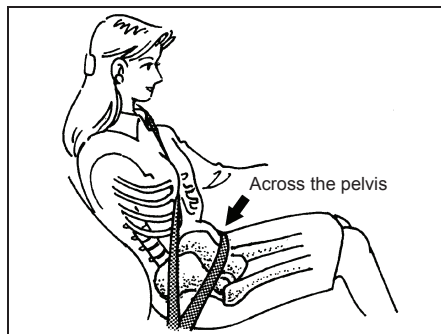


65D201

### ⚠ WARNING

(Continued)

- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than one which is snug.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs.
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats. It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

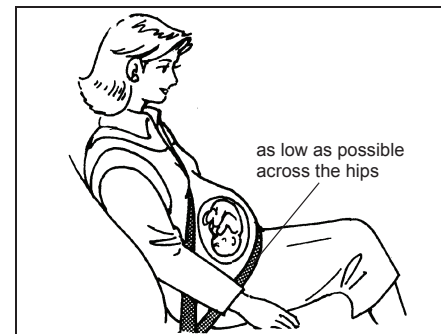

65D199

### ⚠ WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the diagram.
- Do not wear seat belts over hard, fragile, or sharp items such as pens, keys, eyeglasses, etc in pockets or on clothing. The pressure from seat belt on such items can cause injury in case of an accident.

(Continued)



65D609

**⚠ WARNING**

(Continued)

- Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.
- Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.

(Continued)

**⚠ WARNING**

(Continued)

- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children age 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.
- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.

(Continued)

**⚠ WARNING**

(Continued)

- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.



## FOR SAFE DRIVING

### Lap-Shoulder Belt

#### Emergency Locking Retractor (ELR)


The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

#### Safety reminder

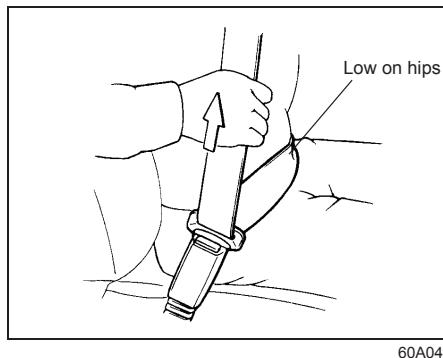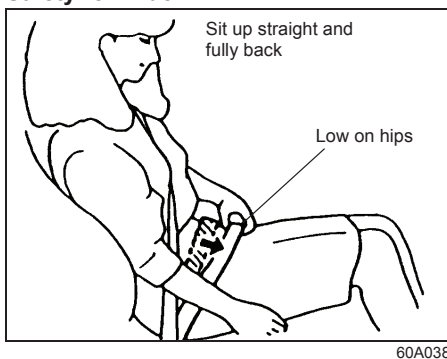


To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

### All Seat Belts Except Center of 2nd Row Seat

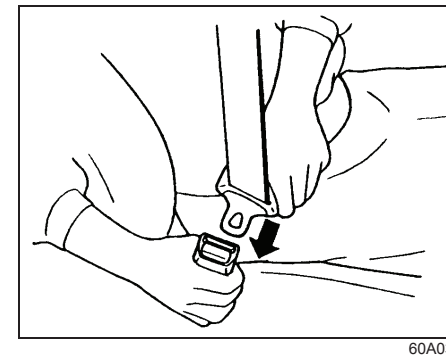

To fasten the seat belt, sit up straight and well back in the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a "click". After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

## FOR SAFE DRIVING

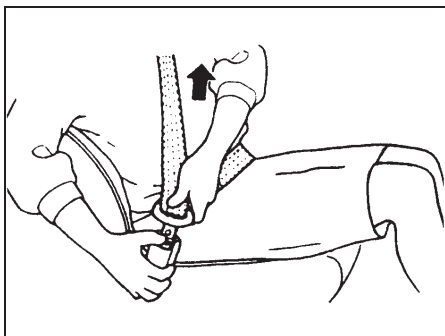


60A039

To unfasten the seat belt, push the button on the buckle and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

### NOTE:

*If the seat belt cannot be pulled from its fully retracted position, firmly pull the belt and release it. Then smoothly pull the belt out of the retractor.*


### Center Seat Belt of 2nd Row Seat Lap belt (If equipped)

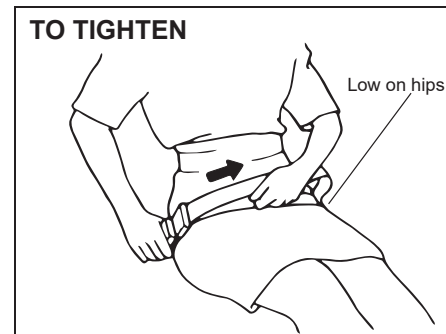

60MH021

Sit up straight and well back in the seat. To fasten the belt, pull the latch plate attached to the seat belt across your hips and press it straight into the buckle until you hear a "click". To reduce the risk of sliding under the belt during a collision, position the belt across your lap as low on your hips as possible and adjust it to a snug fit.


To tighten the belt, pull the free end of the belt across alongside the lap strap.

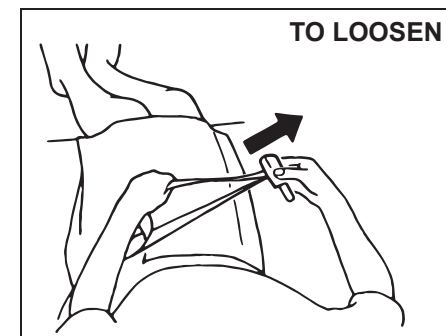

60MH022

To lengthen, release the latch plate from the buckle, pull the latch plate (adjuster) in the direction of the arrow. The latch plate should then be refitted into the buckle and the belt tightened as previously described. To unfasten the belt, press the release button on the buckle latch.

## FOR SAFE DRIVING

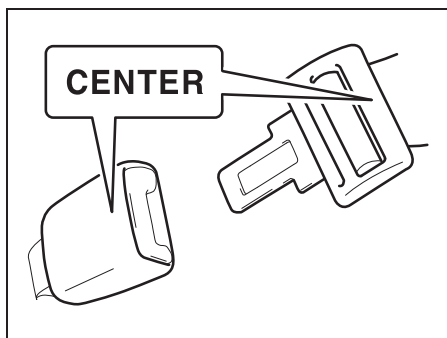


72R0153

### NOTE:

The word "CENTER" is marked into the buckle and tongue for the rear center belt (if equipped). The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

## Seat belt reminder

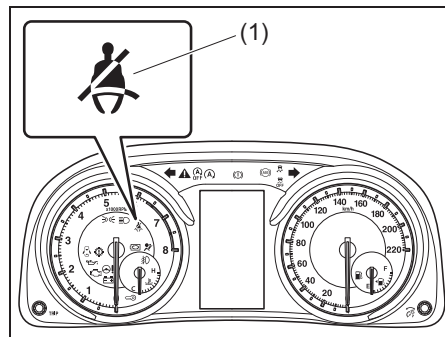

72RH4004

(1) Driver's seat belt reminder light / front passengers' seat belt reminder light / 2nd row passengers' seat belt reminder light\* / 3rd row passengers' seat belt reminder light\*

When the driver and/or passenger (front passenger and/or 2nd row passenger\* and/or 3rd row passenger\*) do/does not fasten their seat belts, the seat belt reminder light will come on or blink and a buzzer will sound to remind the driver and/or passenger (front passenger and/or 2nd row passenger\* and/or 3rd row passenger\*) to fasten their seat belts. For more details, refer to the explanation below.

## ⚠ WARNING

It is absolutely essential that the driver, front passenger, 2nd row passenger\* and 3rd row passenger\* wear their seat belts at all times. Persons who are not wearing seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

### NOTE:

The driver's seat belt reminder light / front passengers' seat belt reminder light / 2nd row passengers' seat belt reminder light\* / 3rd row passengers' seat belt reminder light\* is for all the driver, front passenger, 2nd row passenger and 3rd row passenger.

\*: If equipped

### NOTE:

Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.



### Driver's seat belt reminder

If the driver's or front passenger's seat belt remains unbuckled when the ignition switch is turned "ON". The reminder works as follows:


- 1) The driver's seat or front passenger's belt reminder light will come on.
- 2) After the vehicle's speed has reached about 15 km/h, the driver's or front passenger's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) After step 2) has finished, the reminder light will remain on until the driver's or front passenger's seat belt is buckled.

If the driver or front passenger has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from step 1) or step 2) according to the vehicle's speed. When the vehicle's speed is below about 15 km/h, the reminder will start from step 1). When the vehicle's speed is above about 15 km/h, the reminder will start from step 2).

The reminder will be automatically canceled when the driver's or front passenger's seat belt is buckled or the ignition switch is turned off.

### Front passenger's seat belt reminder

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned to "ON" position, the front passenger's seat belt reminder will activate.

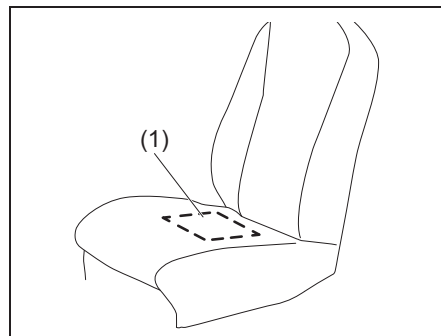

72RS2008

(1) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (1) detects whether a person is sitting in the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

### ⚠ CAUTION

- Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.
- Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.

### NOTICE

- The sensor of the front passenger's seat belt reminder is located in the seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.

(Continued)

## FOR SAFE DRIVING

### NOTICE

- Depending on the variety of seat cover, operation of the sensor may be adversely affected. Maruti Suzuki highly recommends that you use Maruti Suzuki genuine seat cover exclusively for this vehicle. If a seat cover is installed, consult with a Maruti Suzuki authorised workshop.
- If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.
- When sitting on the front passenger's seat, it is very important that the passenger sits upright, leaning against the seat backrest and centered on the seat cushion in order for the seatbelt reminder system to function effectively. An occupant sitting improperly (slouches, turns sideways, sits forward or sideways) may hamper the functioning of this system as it may not detect the occupant.

(Continued)

### NOTE:

- If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.
- If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.

### 2nd row passengers' seat belt reminder (If equipped)

If the engine switch is pressed to change the ignition mode to "ON", the seat belt reminder light comes on unless all 2nd row passengers' seat belts are fastened, irrespective of the presence or absence of passenger. The 2nd row passengers' seat belt reminder works in the same manner as the driver's seat belt reminder.


### 3rd row passengers' seat belt reminder (If equipped)

If the engine switch is pressed to change the ignition mode to "ON", the seat belt reminder light comes on unless all 3rd row passengers' seat belts are fastened, irrespective of the presence or absence of passenger. The 3rd row passengers' seat belt reminder works in the same manner as the driver's seat belt reminder.

### NOTE:

- Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory of "Seat cover".

### Seat Belt Catch Hole (for 2nd row seats)

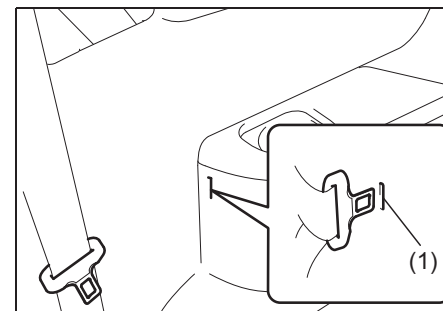

73R0038


### NOTE:

To enter to or exit from the 3rd row seat, insert the tongue plate of the buckle into the part (1) before moving the 2nd row seat.

### NOTICE

When you move a seatback, make sure the tongue plate of the buckle is inserted in the seat belt catch hole so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

## Seat Belt Inspection

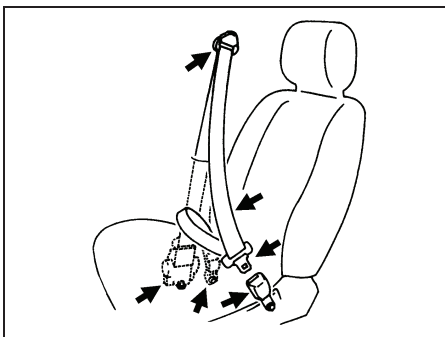


65D209S

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages, and guide loops. Replace any seat belts which do not work properly or are damaged.

## ⚠ WARNING

Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners were activated. The airbags, the pretensioners and the load limiter only function once. In case they did not activate, consult with Maruti Suzuki authorised workshop.

## Seat belt pretensioner system

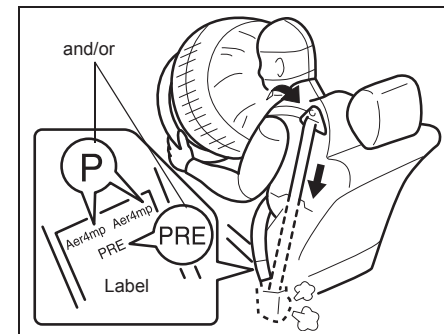

63J269

## ⚠ WARNING

This section describes your Maruti Suzuki vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

## FOR SAFE DRIVING

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, check the label on the seat belt at the bottom part. If the letters “p” and/or “PRE” appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

Read this section and “Supplemental restraint system (airbags)” section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (airbags). The collision sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to “Supplemental restraint system (airbags)” section in addition to this “Seat belt pretensioner system” section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released.

These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to “Seat adjustment” section and the instructions and precautions about the seat belts in this “Seat belts and child restraint systems” section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by a Maruti Suzuki authorised workshop as soon as possible.

The pretensioner system of the airbag system may not work properly if any of the following conditions occur:

- 1) If the airbag warning light on the instrument cluster does not come on briefly, when the ignition switch is turned to the “ON” position.
- 2) If the airbag light comes on and stays on for more than 10 seconds, when the ignition switch is turned to the “ON” position.
- 3) If the airbag light comes on while driving.

Have both systems inspected by a Maruti Suzuki authorised workshop as soon as possible.


Service on or around the pretensioner system components or wiring must be performed only by a Maruti Suzuki authorised workshop who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition switch has been in LOCK position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped


with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Maruti Suzuki vehicle, ask a Maruti Suzuki authorised workshop, body repair shop, or scrap yard for assistance.

### Seat Belt Force Limiter System (Only for Front Seat)

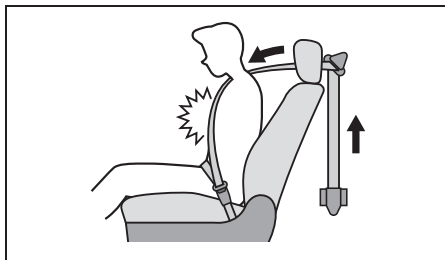

69RHS167

In the event of a strong impact coming from the front, the seat belt force limiter operates in two stages to reduce a force to the shoulder strap, thus lessening the impact being sustained by the front passengers.

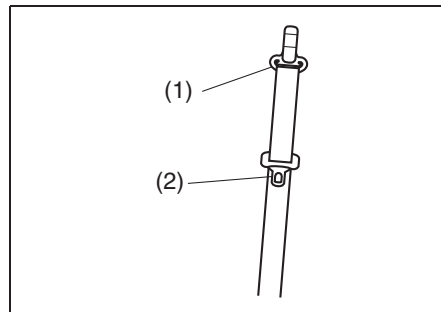


82K179

### ⚠ WARNING

If the seat belt sustains strong impact, the resin of the shoulder anchor part (1) and the tongue plate part (2) could soften due to heavy friction, thus sticking to the seat belt, making the belt slide less easily. In such a case, the seat belt may not provide the best performance, resulting in severe injury in case of emergency. Have the seat belt replaced by a Maruti Suzuki authorised workshop.


### Child Restraint Systems

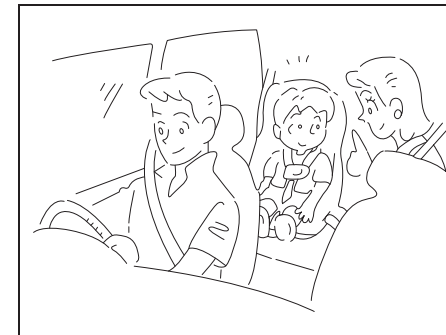

60G332S

The following types of child restraint system are available generally.


### Infant restraint - rear seat only

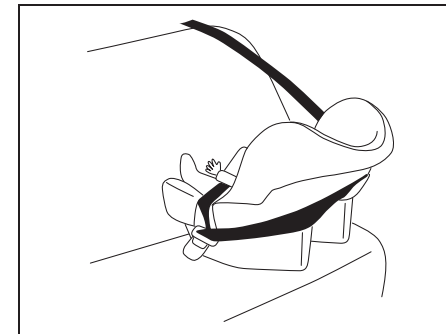

80JC007


## FOR SAFE DRIVING

### Child restraint

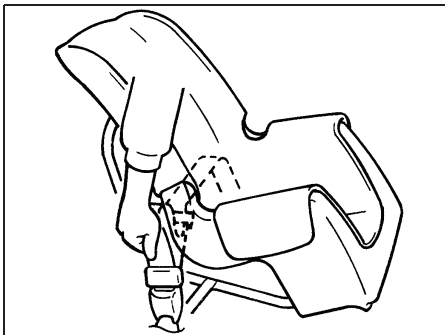

80JC016

### Booster seat

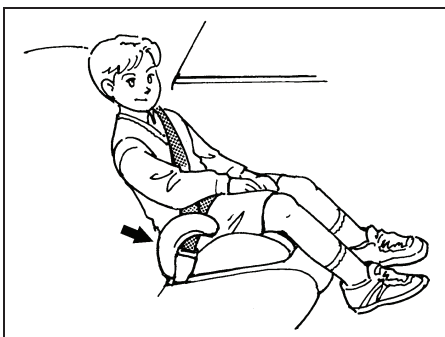


80JC008

Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different

types of child restraint systems are available; check that the restraint system you select meets applicable safety standards. All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap belts or the lap portion of lap shoulder belts) or by special rigid lower anchor bars built into the seat.

#### NOTE:

Observe any statutory regulation about child restraints.

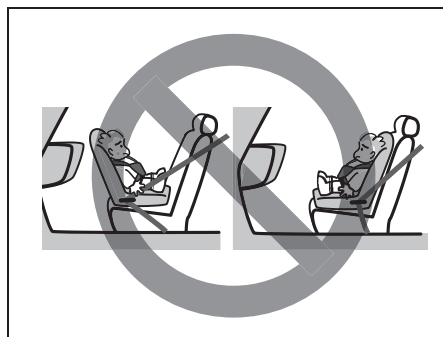

61M0241

#### ⚠ WARNING

- Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a


(Continued)

#### ⚠ WARNING

(Continued)

**rear-facing child restraint would be too close to the inflating airbag.**

- If you install a child restraint system in the 2nd row seat, slide the seat installed the child restraint system as far back as possible. So that, the child's feet do not contact the front seatback. These will help avoid injury to the child in the event of an accident.
- Children could be endangered in a collision if their child restraint systems are not properly secured in the vehicle. When installing a child restraint system, follow the instructions below. secure the child in the restraint system according to the manufacturer's instructions.

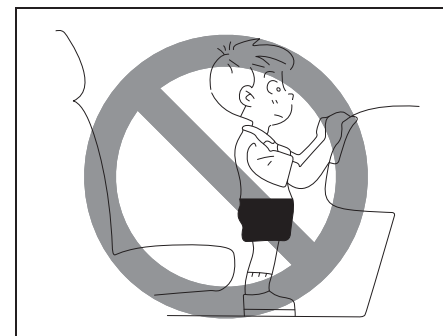

65D608D

## Child restraint system for India

### Child restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP	Seating position (or other site)				
	Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center
Group 0 Up to 10 kg	X	X	N.A.	U	X
Group 0+ Up to 13 kg	X	X	N.A.	U	X
Group I 9 to 18 kg	X	X	N.A.	U	X
Group II 15 to 25 kg	X	X	N.A.	U	X
Group III 22 to 36 kg	X	X	N.A.	U	X

Key of letters to be inserted in the above table:

U =Suitable for 'universal' category restraints approved for use in this mass group

X =Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

#### NOTE:

- 'universal' is the category in the AIS 072.
- 'Outboard' indicates window side seat.

## FOR SAFE DRIVING

### Installation with lap-shoulder seat belts


#### ⚠ CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the seat head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

#### NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

### ELR type belt

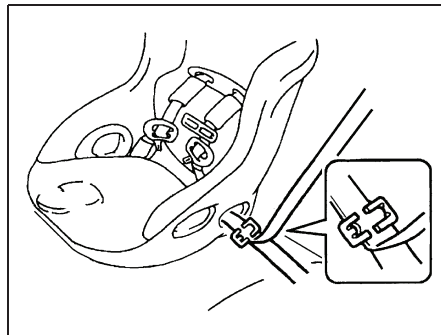


80JC021

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Check that the seat belt is securely latched.

Move the child restraint system in all directions to check that it is securely installed. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

### Installation with ISOFIX type anchorages

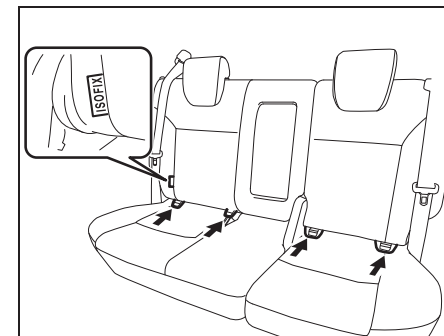

72R0029

Your vehicle is equipped with the lower anchorages in the 2nd row seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.


#### ⚠ WARNING

Install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for the 2nd row seat.



## FOR SAFE DRIVING

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

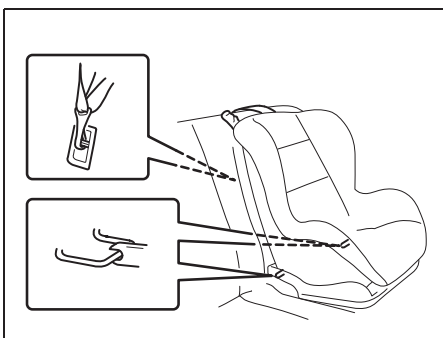

84MM00252

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.

Here is a general instruction:


### ⚠ CAUTION

**If your vehicle is equipped with the rear head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the 2nd row seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.**

**If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.**

#### NOTE:


*Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.*

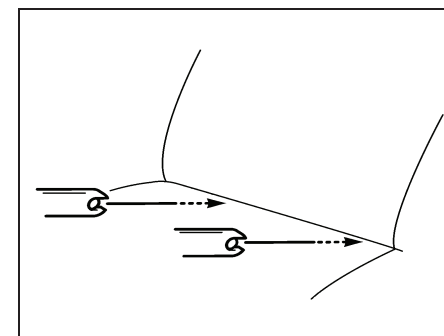

78F114


- 1) Place the child restraint in the 2nd row seat, inserting the connecting bars to the anchorages between the seat cushion and the seatback.

## FOR SAFE DRIVING

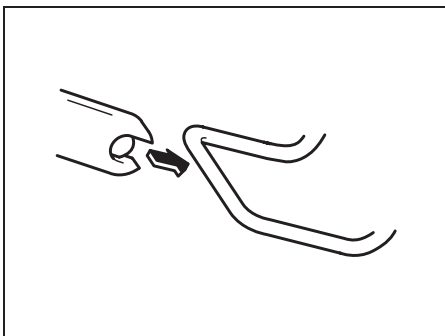


68LM268

- 2) Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.

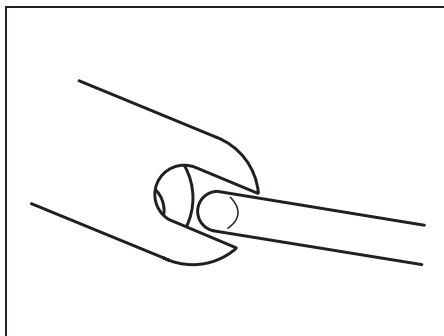

54G184

- 3) Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

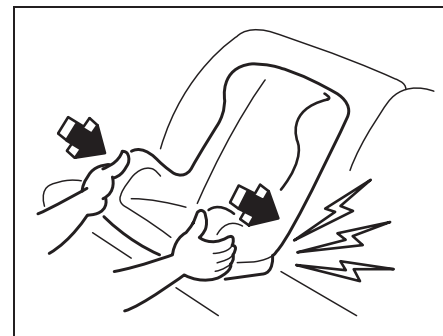

54G185

- 4) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Check that they are securely latched by trying to move the child restraint system in all directions, especially forward.
- 5) Attach the top tether strap referring to “Installation of child restraint with top tether” section.
- When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child’s body.

### NOTICE

When installing a child restraint system to the 2nd row seat, slide the seat installed the child restraint system as far back as possible.

## FOR SAFE DRIVING

### Installation of child restraint with top tether


#### CAUTION

If your vehicle is equipped with the rear head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the seatback is fitted, the 2nd row seat head restraint should not be removed. If the rear head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.

If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

#### NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

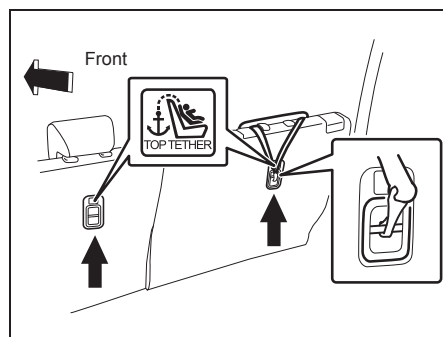


73R0175

Some child restraint systems require the use of a top tether strap. Top tether anchorage brackets are provided in your vehicle at the locations shown in the illustrations.

The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

- 1) Secure the child restraint on the 2nd row seat using the procedure described above for securing a restraint system that does not require a top tether strap.
- 2) Hook the top tether strap to the top tether anchorage bracket and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage bracket located directly behind the child restraint.

## FOR SAFE DRIVING

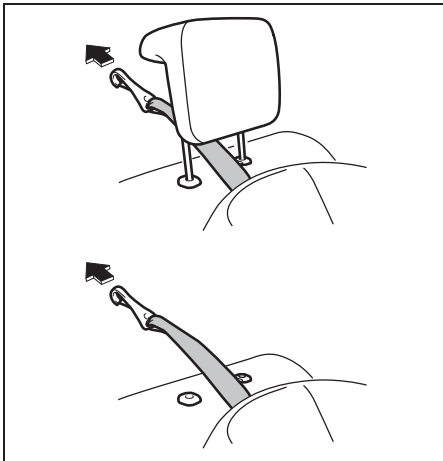

73R0176

**NOTE:**  
Maruti Suzuki recommends use of Maruti Suzuki Genuine accessory of "Child seat, ISOFIX"

- 3) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head restraints" section for details on how to adjust the height of head restraint or remove it.)
- 4) Check that cargo does not interfere with routing of the top tether strap.

### **NOTICE**

When installing a child restraint system to the 2nd row seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.


## Supplemental Restraint System (airbags)

### WARNING

This section of the owner's manual describes the protection provided by your Maruti Suzuki's supplemental restraint system (airbags). Please read and follow all these instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a Supplemental Restraint System consisting of the following components in addition to a lap-shoulder belt at each front seating position.

1. Driver's front airbag module
2. Front passenger's front airbag module
3. Seat belt pretensioners
4. Airbag controller
5. Forward collision sensor

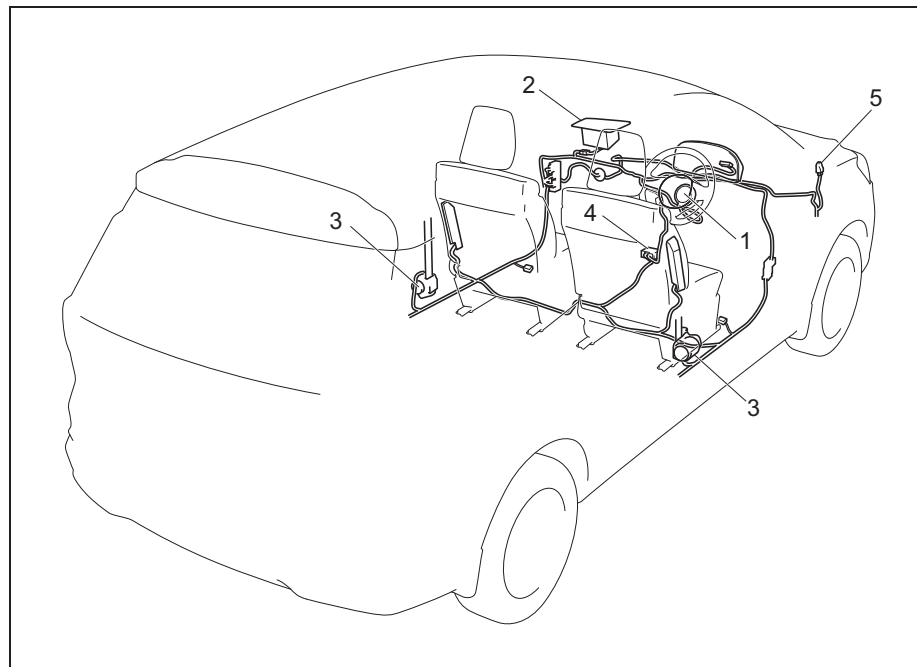

72RM01001

## FOR SAFE DRIVING

### WARNING

An airbag supplements or adds to the collision protection offered by seat belts. The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.


### AIRBAG warning light



63J030

If the "AIRBAG" warning light on the instrument cluster does not blink or come on when the ignition switch is first turned to the ON position, or the "AIRBAG" warning light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by a Maruti Suzuki authorised workshop as soon as possible.

### Front Airbags

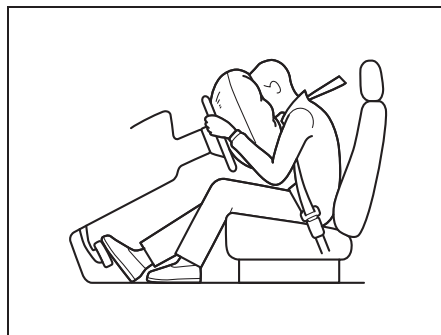


63J113

Front airbag is designed to inflate in severe frontal collisions when the ignition switch is in "ON" position.

Front airbag is not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Remember, since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.


Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

### Driver's front airbag

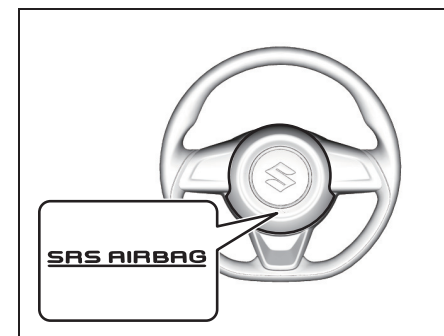

73R0009

### Front passenger's front airbag

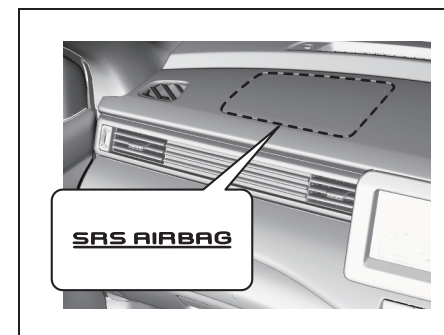


72R0143

The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the

## FOR SAFE DRIVING

dashboard. The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

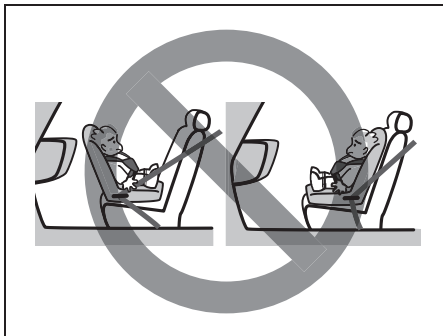


61M0241

### ⚠ WARNING

- Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating airbag.
- If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a Maruti Suzuki authorised workshop.


Refer to "Seat belts and child restraint systems" section for details on securing your child.

### Conditions of front airbags deployment (inflation)

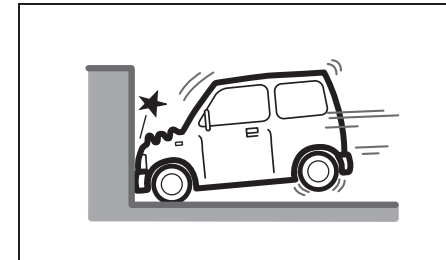

80J097

- Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

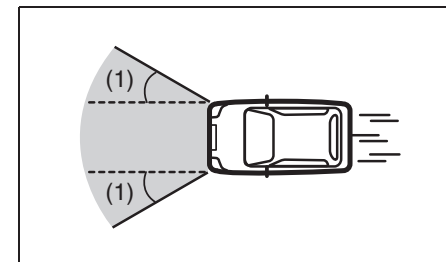


80J098E

- Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle

## FOR SAFE DRIVING


### Conditions of front airbags may inflate

Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.

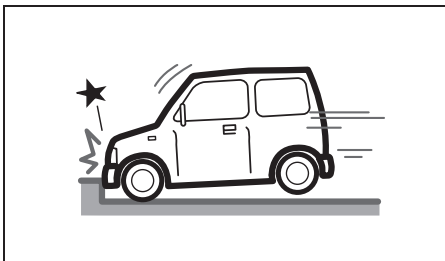


80J099

- Hitting a curb or medial strip

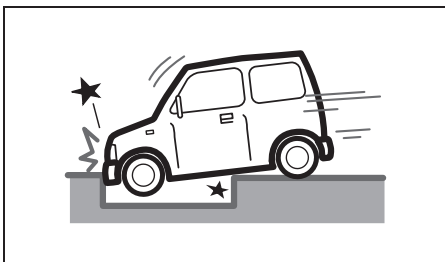

80J100E

- Falling into a deep hole or ditch

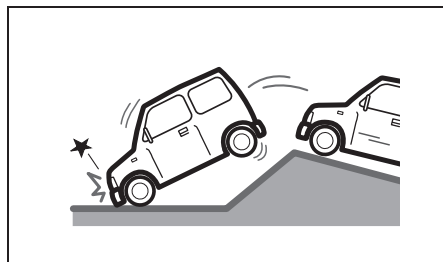


80J101

- Landing hard or falling

### Front airbags may not inflate

The front airbags may not inflate when a strong impact has not occurred since the collision object (including living beings like animals) was easy to be deformed or moved, or the collided portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle. Also, in certain collisions at low speed, the airbags may not inflate.

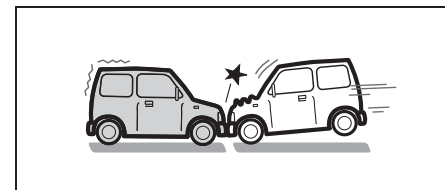


80J102

- Frontal collision to a stopped vehicle at less than about 50 km/h




## FOR SAFE DRIVING

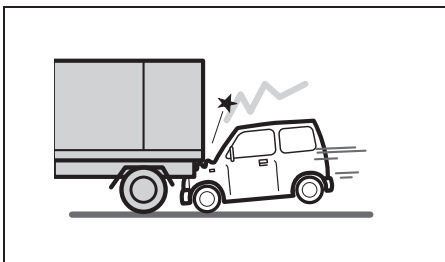


80J103

- Collision that the front of your vehicle goes under the bed of a truck etc.

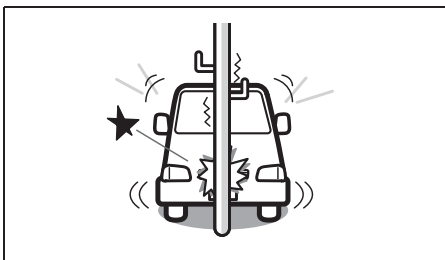


80J104

- Collision with a utility pole or stumpage

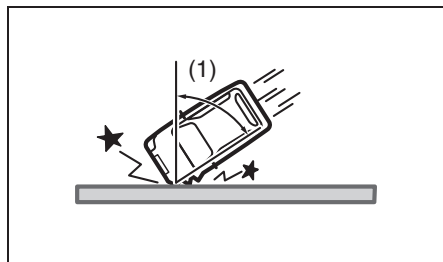

80J105E

- Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

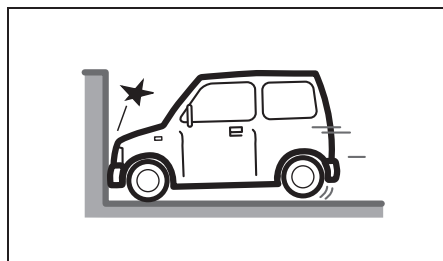


80J106

- Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h


### Front airbags do not inflate

Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.

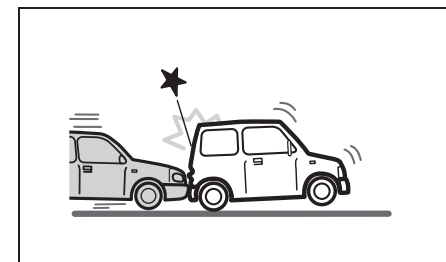

80J120


- Impact from the rear

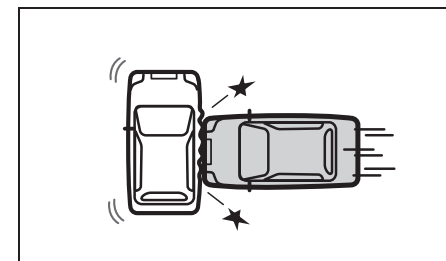

80J119

- Impact from the side

## FOR SAFE DRIVING

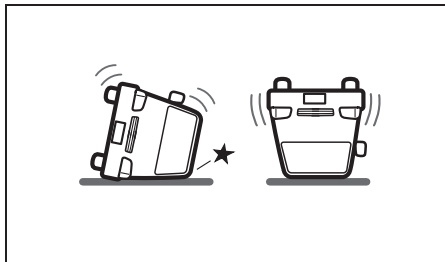

80J110

- Vehicle rollover

### Airbag symbol meaning



72M00150

You may find this label on the sun visor.

### ⚠ WARNING




**NEVER** use a rearward facing child restraint on a seat protected by an **ACTIVE AIRBAG** in front of it, **DEATH** or **SERIOUS INJURY** to the **CHILD** can occur.

### ⚠ WARNING

If the **AIRBAG** warning light in the instrument cluster ever comes on and stays on, it means that something may be wrong with the airbag system. If this ever happens, have the vehicle serviced immediately, because the airbags may not offer the protection for which they were designed.

## FOR SAFE DRIVING

### Description of warning label

Symbol	Symbol meaning
	Do not install a rear-facing child restraint system to the front passenger's seat equipped with an airbag.
	If the front passenger's seat airbag were to be deployed, a major impact could be applied to a rear-facing child restraint system and the child.
	For more details, read this owner's manual.

### How the System Works

In a frontal collision, the collision sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation.

A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Please refer

to the "Seat Adjustment" section and the Seat Belts and Child Restraint Systems" in this section for details on proper seat and seat belt adjustments.



65D610

### WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard, or otherwise get too close to the dashboard. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.

(Continued)

## FOR SAFE DRIVING

### ⚠ WARNING

(Continued)

- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each conditions may cause severe injury.
- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the airbags to malfunction.

### ⚠ WARNING

- Do not modify the system in any way including replacing the steering wheel, placing stickers on the steering wheel pad, painting the steering wheel, or covering the steering wheel with a cover.
- Do not place stickers on or paint the instrument panel. Do not install and set up accessories, air fresheners, ETC readers, or portable navigation systems. Do not stand umbrellas or similar in front of airbags.
- Excluding genuine Maruti Suzuki parts, do not attach accessories to the front windshield or the rearview mirror.

Note that even though your vehicle may be moderately damaged in a collision, the collision may not have been severe enough to trigger the airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by a Maruti Suzuki authorised workshop to ensure it is in proper working order.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, which sensors activated the deployment, and for a certain vehicle only, whether the driver's seat belt was in use.

### Service the airbag system

If the airbags inflate, have the airbags and related components replaced by a Maruti Suzuki authorised workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If it does, have the airbag system inspected by the Maruti Suzuki authorised workshop as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only a Maruti Suzuki authorised workshop should be allowed to service or replace your airbags. Please remind anyone who services your Maruti Suzuki vehicle that it has airbags.


Service on or around airbag components or wiring must be performed only by a Maruti Suzuki authorised workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the airbag system, be sure the lead-acid battery is disconnected and the ignition switch has been in the LOCK position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing,

and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated airbag can be hazardous. Ask your dealer, body repair shop or scrap yard for help with disposal.

## Exhaust Gas Warning

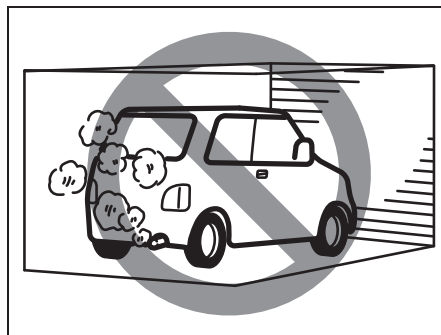

52D334

### ⚠ WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, be sure to take the following precautions to help prevent carbon monoxide from entering your vehicle.

- Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problems and lead to death.

(Continued)

### ⚠ WARNING

(Continued)

- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to "FRESH AIR" and the blower is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to operate the vehicle with the tailgate or trunk open, make sure all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grille in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.

(Continued)


## FOR SAFE DRIVING

---

### WARNING

(Continued)

- Have the exhaust system inspected periodically for damage and leaks. Any damage or leaks should be repaired immediately.

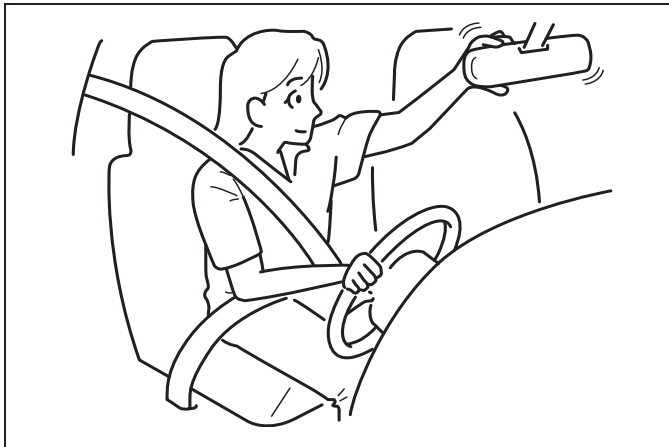


60G404

BEFORE DRIVING

Keys .....	2-1
Door Locks .....	2-2
Keyless entry system transmitter .....	2-5
Security System (if equipped) .....	2-8
Theft deterrent light .....	2-10
Windows .....	2-11
Mirrors .....	2-13
Instrument Cluster .....	2-16
Speedometer .....	2-17
Tachometer .....	2-17
Fuel gauge .....	2-17
Temperature Gauge .....	2-18
Brightness Control .....	2-18
Information Display .....	2-19
Warning and Indicator Lights .....	2-35
Lighting Control Lever .....	2-42
Headlight Leveling Switch .....	2-44
Turn Signal Control Lever .....	2-45
Hazard Warning Switch .....	2-46
Windshield Wiper and Washer Lever .....	2-46
Tilt Steering Lock Lever .....	2-48
Horn .....	2-48
Vehicle Loading .....	2-49
Trailer Towing your vehicle .....	2-49

## BEFORE DRIVING

### Keys

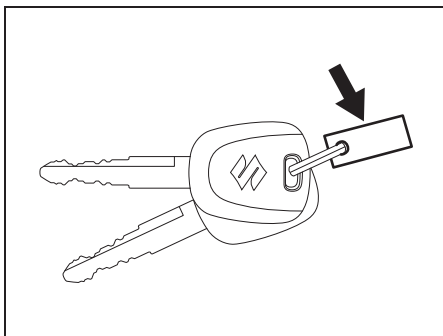

73R0130

Your vehicle comes with a pair of identical keys. Keep the spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (if equipped) in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.


KEY NUMBER:

2-1

### Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key, which has an electronic identification code programmed in it. The key communicates the identification code to the vehicle when the ignition switch is turned "ON". If you need to make spare keys, see a Maruti Suzuki authorised workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.

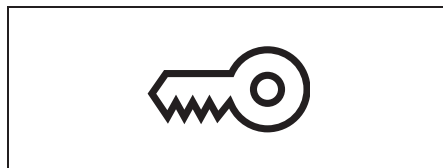

80JM122

If the immobilizer warning light blinks when the ignition switch is in "ON" position, the engine will not start.

If this light blinks, turn the ignition switch to LOCK position, and then turn it back to ON position.

If the light still blinks after the ignition switch is turned back to ON position, there may be something wrong with your key or with the immobilizer system. Ask a Maruti Suzuki authorised workshop to have the system inspected.

#### NOTE:

- If you lose your immobilizer ignition key, ask a Maruti Suzuki authorised workshop as soon as possible to deactivate the lost one, and to make a new key.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch or the engine switch when using your MARUTI SUZUKI vehicle. Otherwise, or the engine may not be started because they may interfere with your MARUTI SUZUKI vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key, it may not start the engine.

#### NOTICE

The immobilizer key are sensitive electronic instruments.

To avoid damaging them:

- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.




**NOTICE**

**Do not modify or remove the immobilizer system. If modified or removed, the system cannot be properly operated.**

This immobilizer system is maintenance-free.

**Ignition Key Reminder**

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

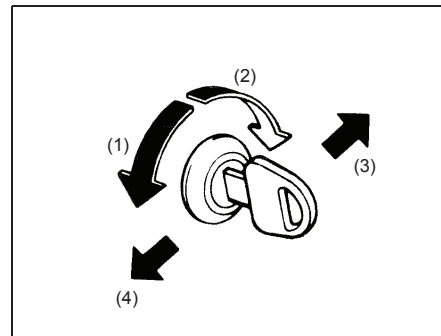
**Door Locks****Side Door Locks**

- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

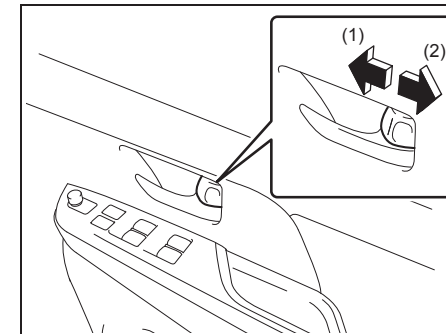

- (1) LOCK
- (2) UNLOCK

To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.


To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

**NOTE:**

*Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.*

## BEFORE DRIVING

### Central Door Locking System

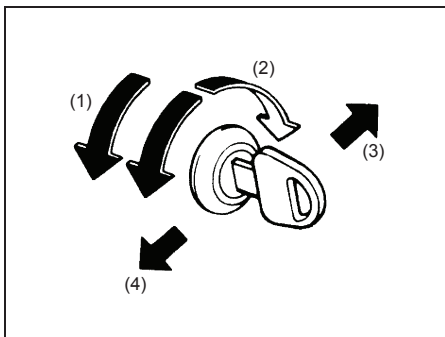

54G294


- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

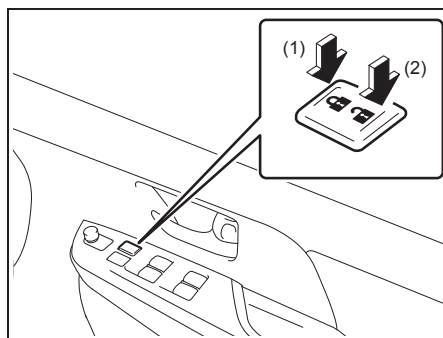

73R0002

- (1) LOCK
- (2) UNLOCK

You can also lock or unlock all doors by depressing the front or rear of the switch, respectively.

#### NOTE:

- You can also lock or unlock all doors by operating the transmitter. Refer to Keyless entry system transmitter in this section.

#### NOTE:


- All doors are automatically unlocked when you turn the ignition switch to the "LOCK" position and pull out the key.
- All doors are automatically locked for safety when the vehicle speed reaches 15 km/h.
- You can change the automatic locking or unlocking function mentioned above via

the setting mode of the information display. For details on how to use the information display, refer to "Information display" in this section.

## Tailgate

**⚠ WARNING**

Always make sure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

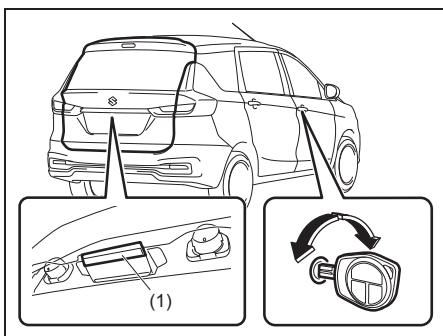

73R0019

(1) Tailgate handle


You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, pull up the tailgate handle (1) and lift the tailgate.

If you cannot unlock the tailgate by using

the key in the driver's door lock due to a discharged lead-acid battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

- 1) Fold the rear seat forward for easier access. Refer to "Folding rear seats" section for details on how to fold the rear seat forward.

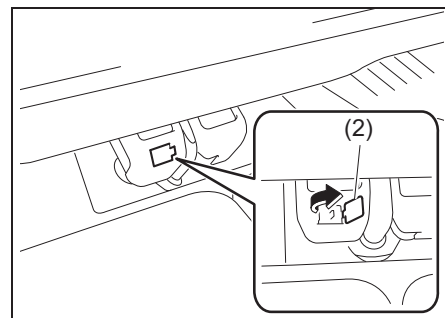


73R0020

- 2) Open the cover (2) in the lock mechanism of the tailgate.

**NOTE:**

Be careful not to lose the cover (2) because it is small and detachable.

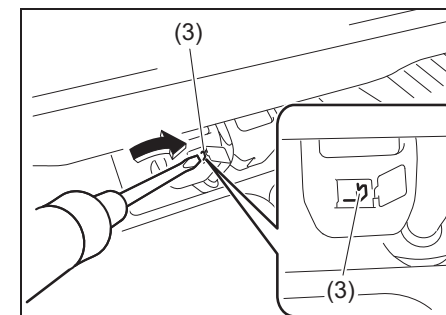

73R0021

- 3) Move the lever (3) in arrow direction by using a flat-bladed screwdriver to unlock the tailgate.
- 4) Push open the tailgate from inside. The tailgate will be latched again by simply closing the tailgate.


If the tailgate cannot be unlatched by pulling up the tailgate handle, have the vehicle inspected by a Maruti Suzuki authorised workshop.

**⚠ CAUTION**

Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

## BEFORE DRIVING


### Keyless entry system transmitter

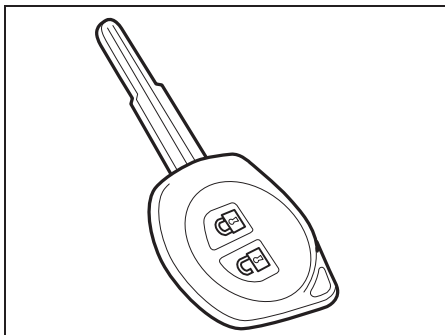

73RM02001

Your vehicle is equipped with a keyless entry system transmitter. The transmitter has only a keyless entry function. For details, refer to the following explanations.

### Keyless Entry System Transmitter

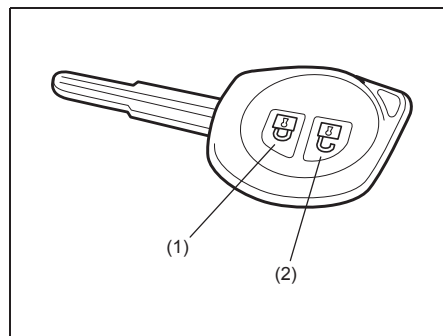

72R0148

- (1) LOCK button
- (2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

### Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

#### NOTE:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice when unlocked.
- If the interior light switch is in the "DOOR" position, the interior light will turn on for 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the LOCK button (1).

#### NOTE:

If no door is opened within about 30 seconds after the UNLOCK button (2) is oper-

## BEFORE DRIVING

ated, the doors will automatically lock again.

**NOTE:**

- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound.

**NOTE:**

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can be operated only unlock with the transmitter.
- If you lose one of the transmitters, ask a Maruti Suzuki workshop as soon as possible for a replacement. Be sure to have your dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

### NOTICE

**The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:**

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

### Car locator alarm function

This function is to get the attention of others. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds. The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time. To cancel the car locator alarm, press any button (LOCK or UNLOCK). You can also cancel the car locator alarm by turning the ignition switch to "ON" position.


**NOTE:**

The car locator alarm function will not activate when the key is in the ignition switch.

### Battery replacement

If the transmitter becomes unreliable, replace the battery.


To replace the battery of the transmitter:

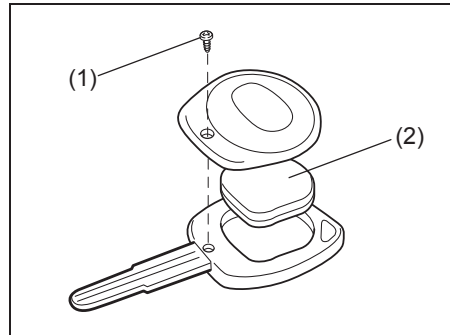

68LM248

- 1) Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).

## BEFORE DRIVING

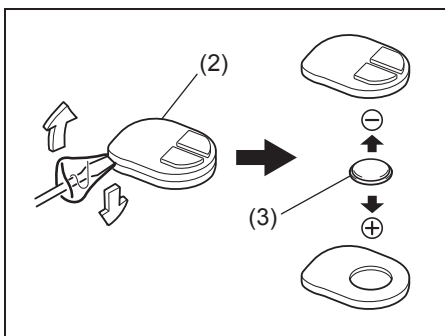

73R0197

- (3) Button type lithium battery: CR1616 or equivalent
- 3) Put the edge of a flat blade screwdriver covered with a soft cloth in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) so its + terminal faces the "+" mark of the transmitter.
- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- 7) Make sure the door locks can be operated with the transmitter.
- 8) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries as ordinary household trash.

### ⚠ WARNING


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

### NOTICE

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- **When replacing the battery by yourself, the transmitter controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.**

#### NOTE:

*Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.*

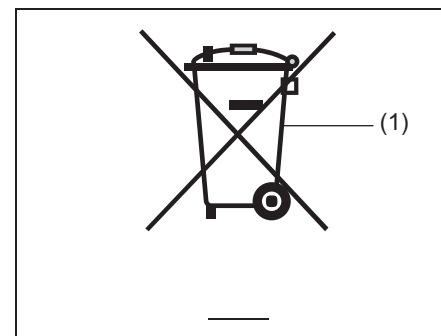

80JM133

- (1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a Maruti Suzuki authorised workshop.

Security System (If equipped)

The security system sets after you close the all doors, engine hood. For the system to armed, you must lock the all doors with the keyless entry system transmitter.

Once the system is armed, any attempt to open a door by using any other means (\*) than the keyless entry system transmitter, or open the engine hood will cause the alarm to be triggered.

- \* These means include the following:
- The key
  - The lock knob on a door
  - The power door locking switch

Also, in case that you have set the shock sensor to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the alarm will be triggered if any attempt to tamper with the vehicle. The shock sensor can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor, ask your Maruti Suzuki authorised workshop or use the setting mode of the information display.

NOTE:

- The default setting of the shock sensor is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Information display" in this section.
- Your dealer may have already set the shock sensor of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.

NOTE:

- The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into your vehicle.
- Always use the keyless entry system transmitter to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.
- If a person who does not know the security system is going to drive your vehicle, we recommend you explain the system and its operation to the person, or disable the system beforehand. Mistakenly triggering the alarm may cause a nuisance to others.
- Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or things of value in your vehicle.

NOTICE

Do not modify or remove the security system. If modified or removed, the system cannot be properly operated.


The security system is maintenance-free.

## BEFORE DRIVING

### How to arm the security system

With the all door (including engine hood and tailgate) closed, use the keyless entry system transmitter, to lock all the doors. The security system will be armed.

While the system is being armed, the indicator (1) continues to blink at intervals of approximately 2 seconds.

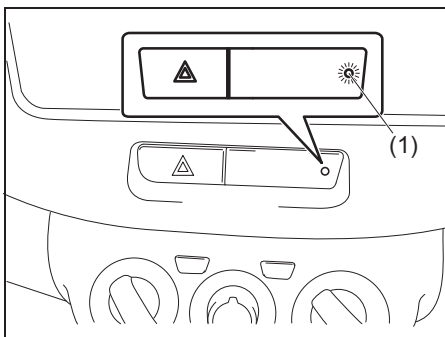

73R0025

### NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or swings the vehicle (if the shock sensor is in the enabled state).
- The security system is not armed when all doors are locked using the key from outside, or using the door lock levers or the power door locking switch from inside.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, the doors are automatically locked again. When the doors are locked, the security system will be armed if the system is in the enabled state.

### How to disarm the security system

Simply unlock the doors using the keyless entry system transmitter. The security light will go out, indicating that the security system is disarmed.

### How to stop the alarm

Should the alarm be triggered accidentally, unlock the doors using the keyless entry system transmitter, or turn the ignition switch to "ON" position. The alarm will then stop.

### NOTE:

- Even after the alarm has stopped, if you lock the doors using keyless entry system transmitter, the security system will be rearmed.
- If you disconnect the lead-acid battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be triggered or re-triggered when the lead-acid battery is then reconnected, although, in the latter case, the alarm remains stopped for the period between disconnection and reconnection of the lead-acid battery.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, or the vehicle feels a shock (if the shock sensor is in the enabled state), without disarming the security system.



**Checking whether the alarm has been triggered during parking**


If the alarm was triggered due to an unauthorized entry into the vehicle and you turn the ignition switch to ON position, the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether your vehicle has been broken into while you were away from it.

**Security system indication**

- If any of the doors or tailgate are opened without unlocking by the keyless entry system transmitter, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.  
(If the shock sensor is in the enabled state.)
- If the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, the siren sounds for about 5 seconds (full blast warning). The security system indicator continues to blink during this time.

**NOTE:**

*If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.*

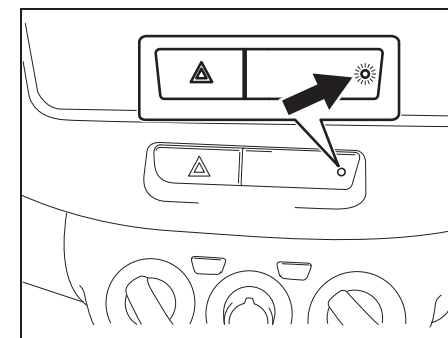**Theft deterrent light**

73R0178

This light will blink with the ignition switch in LOCK or ACC position. The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

**NOTE:**

*For the security system, refer to “security system (if equipped)” in this section.*


## BEFORE DRIVING

### Windows

#### Power Window Controls

The power windows can only be operated when the ignition switch is in the ON position.


#### Driver's side

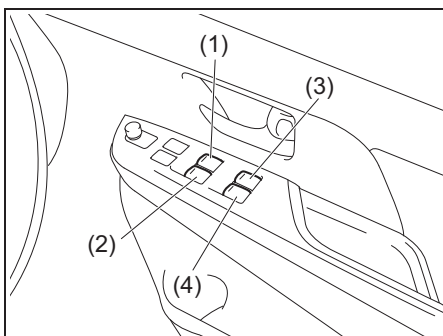

73R0004


The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

#### Passenger's door / rear door

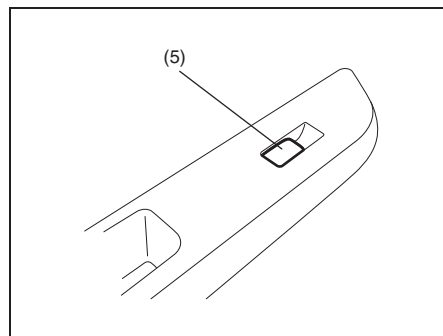

74LHT0205

The passenger's door has a switch (5) to operate the passenger's window.

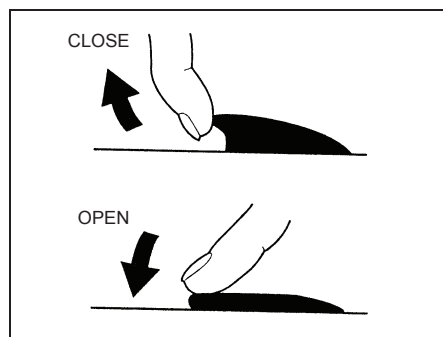


81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

The driver's window has AUTO-DOWN and AUTO-UP features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

#### Lock switch

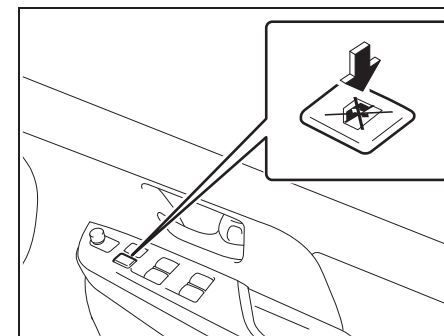

73R0005

The driver's door also has a lock switch for the passenger's windows. When you push in the lock switch, the passenger's windows cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing again.

## BEFORE DRIVING

### WARNING

- You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the power windows when closing them.
- Always remove the ignition key and take with you when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the power window switches and get trapped by the window.

#### NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

### Pinching Prevention Function

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

### WARNING

To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the electric window when closing it. This function may not detect an object due to the size, hardness, or position of the object being caught in the closing window.

### CAUTION

- The pinching prevention function does not operate while you are holding the window switch in UP position.
- The pinching prevention function may not detect an object caught in the window just before the window is fully closed.

#### NOTE:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position. If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

### Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:

- 1) Turn the ignition switch to "ON" position.
- 2) Open the driver's window fully by holding the window switch in DOWN position.
- 3) Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- 4) Check the driver's window to see if the AUTO-DOWN/UP feature works.

## BEFORE DRIVING

### ⚠ WARNING

Whenever you disconnect and reconnect the lead-acid battery or replace the fuse, the pinching prevention function needs to be initialized. The pinching prevention function will not be activated until the initialization is completed.

If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

## Mirrors


### ⚠ WARNING

Failure to observe following points may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.


- Do not adjust the mirrors while driving.
- Always unfold all the outside rear-view mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

### Inside Rearview Mirror

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror.

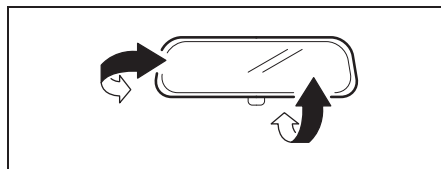

68LMT0205

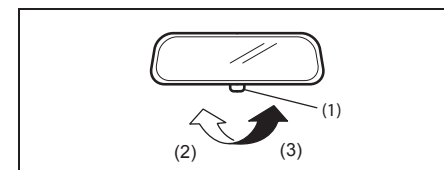

68LMT0206

- (2) Day driving  
(3) Night driving

To adjust the mirror, set the selector tab (1) to the day position, and then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

### ⚠ WARNING

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

**⚠ CAUTION**


Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.

**Outside Rearview Mirrors**

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

**⚠ WARNING**

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

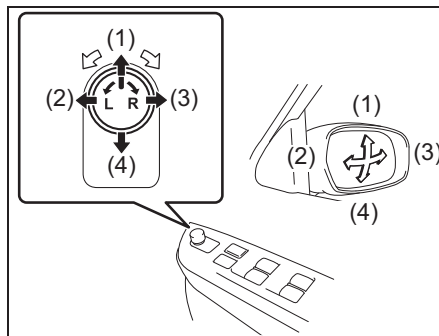

73R0030

The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position. To adjust the mirrors:


- 1) Rotate the selector switch to the left or right to select the mirror you wish to adjust.
- 2) Push the side of the switch to the direction in which you wish to move the mirror.
- 3) Return the selector switch to the center position to prevent unintended mirror movement.

**NOTICE**

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.
- Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.

## BEFORE DRIVING

### Outside Rearview Mirrors Folding Switch

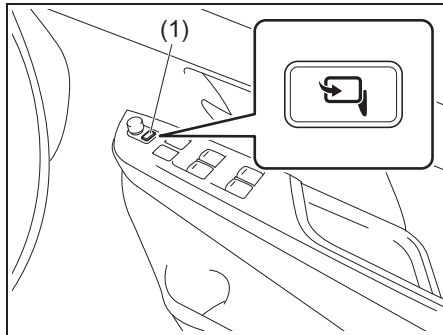

73R0031

You can fold the mirrors when you park the vehicle in a narrow space. When the ignition switch is in the ACC or ON position, push the folding switch (1) to fold and unfold the mirrors.

Make sure the mirrors are completely unfolded before you start driving.

#### CAUTION

**Moving mirrors can pinch and injure a hand. Do not allow any one's hand to get near the mirrors when folding and unfolding the mirrors.**

#### NOTE:

- If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the out-


side rearview mirrors may get stuck during that moment. To open the outside rearview mirrors completely, again press the folding switch after starting the engine.

- Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.

## BEFORE DRIVING

### Instrument Cluster


- |                |                             |                                 |
|----------------|-----------------------------|---------------------------------|
| 1. Speedometer | 4. Temperature gauge        | 7. Indicator selector knob      |
| 2. Tachometer  | 5. Information display      | 8. Warning and indicator lights |
| 3. Fuel gauge  | 6. Trip meter selector knob |                                 |

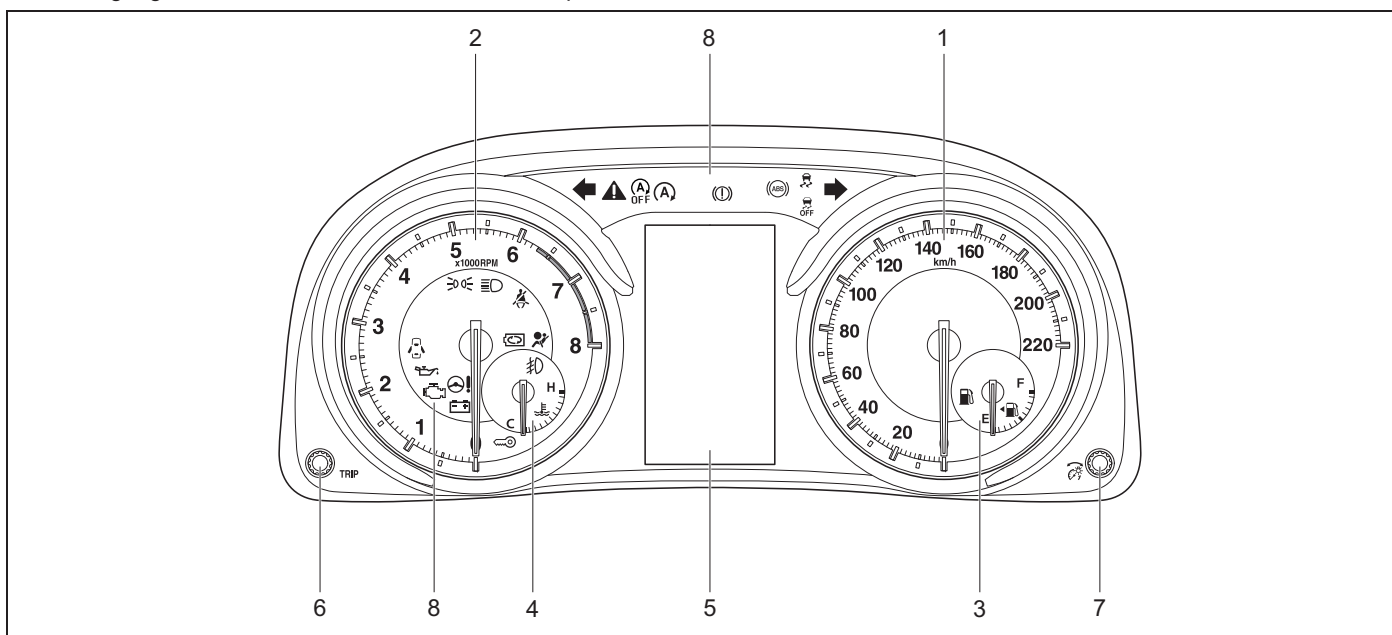

72RM02022

## BEFORE DRIVING

### Speedometer

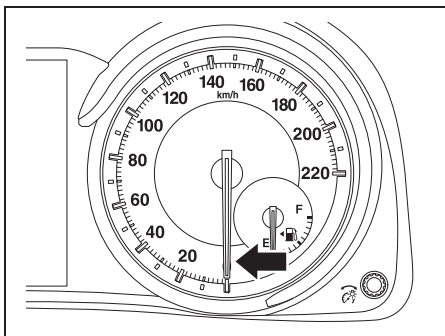


72R0056

The speedometer indicates vehicle speed in km/h.

**NOTE:**

Maximum speed of the vehicle is 80 km/hr as per government regulation.

### Tachometer

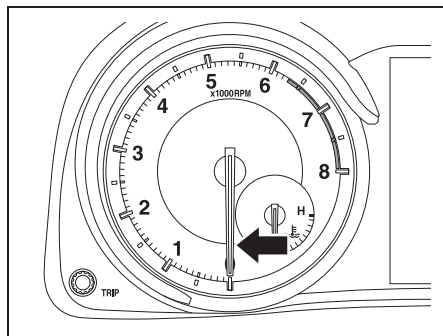


72R0057

The tachometer indicates engine speed in revolutions per minute.

#### NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to "Downshifting maximum allowable speeds" in the "OPERATING YOUR VEHICLE" section.

### Fuel gauge

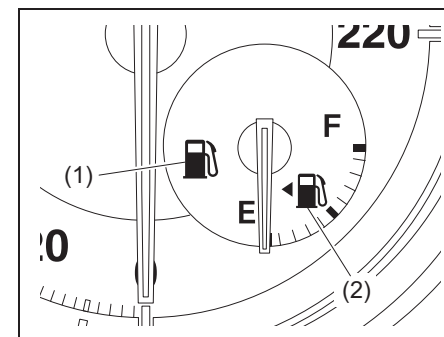

72R0058

When the ignition switch is in "ON" position, this gauge gives a rough indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

If the indicator approaches a low level (near "E") on fuel gauge, refill the tank as soon as possible.

**NOTE:**

The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.



If the low fuel warning light (1) comes on, refill the fuel tank as soon as possible.

**NOTE:**  
The activation point of the low fuel warning light (1) varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.


Refer to “Low fuel warning light” in “Warning and indicator lights” in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

**NOTICE**

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

**Temperature Gauge**

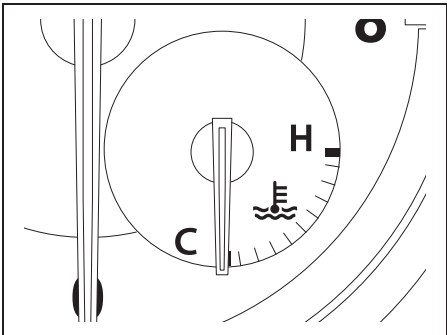


72R0059

When the ignition switch is in “ON” position, this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between “H” and “C”. If the indicator approaches “H”, overheating is indicated. Follow the instructions for engine overheating in “EMERGENCY SERVICE” section.


**NOTICE**

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

**Brightness Control**

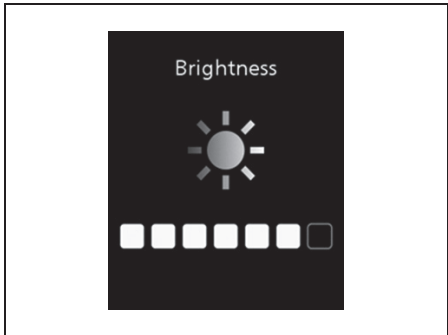

72R0063

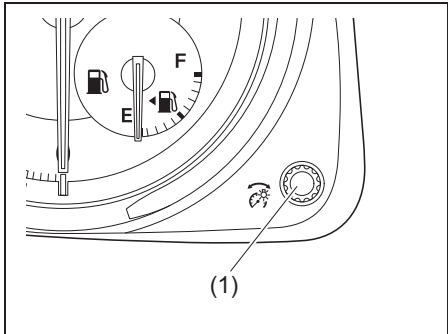

72R0060

## BEFORE DRIVING

When the ignition switch is turned "ON", the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

You can adjust the meter illumination brightness regardless of whether the position lights or headlights are off or on.

To increase the brightness of the instrument panel lights, turn the brightness control knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the brightness control knob (1) counterclockwise.

### WARNING

**Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.**

#### NOTE:

- If you do not turn the brightness control knob within several seconds of activating, the brightness control display will be canceled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.


#### NOTE:

*If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be canceled.*

- The function which automatically dims the brightness of instrument panel lights.
- The function which operates with the brightness control, except maximum brightness level.


## Information Display

The information display is shown when the ignition switch is in "ON" position.

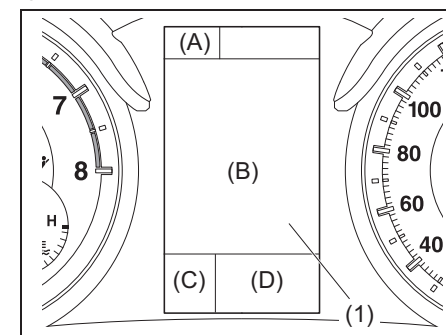

72RM02023

(1) Information display

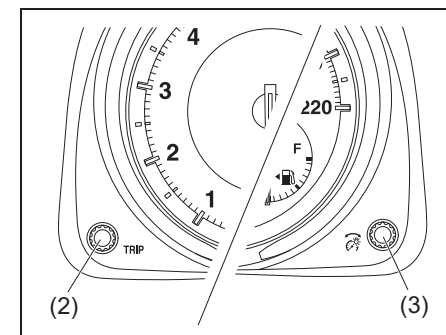

72R0062

(2) Trip meter selector knob

BEFORE DRIVING

(3) Indicator selector knob


The information display shows the following information.

**Display (A)**  
Clock

**Display (B)**  
Fuel consumption / Driving range / Average speed / Driving time / Clock and date / Motion / Torque and power / Accelerator and brake / Energy flow / Total idling stop time and Total idling fuel saved

**Display (C)**  
Gearshift indicator

**Display (D)**  
Odometer and Trip meter

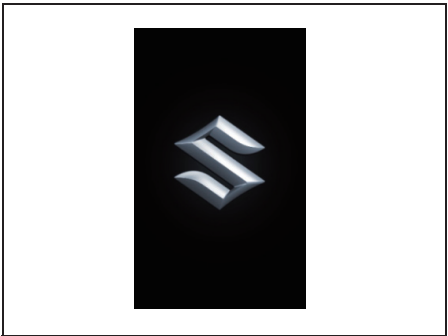

72R0135

When the ignition switch is turned “ON”, the message shown in the above illustra-

tion will appear on the display for several seconds.

Some warning and indicator messages may appear on the display when the ignition switch is in “ACC” or “LOCK” position.

**Clock**

When the ignition switch is in “ON” position, the display (A) shows the time.

To set the clock, follow “Setting mode” instructions in this section.


**⚠ WARNING**

**If you attempt to adjust the display while driving, you could lose control of the vehicle.  
Do not attempt to adjust the display while driving.**

**Fuel Consumption / Driving Range / Average Speed / Driving Time / Total Idling Stop Time and Total Idling Fuel Saved / Clock and Date / Motion / Torque and Power / Accelerator and Brake / Energy flow (if equipped)**

When there are no warning or indicator messages on the display (B), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time, total idling stop time and total idling fuel saved, clock and date, motion, torque and power, accelerator and brake, energy flow or no indication.

## BEFORE DRIVING

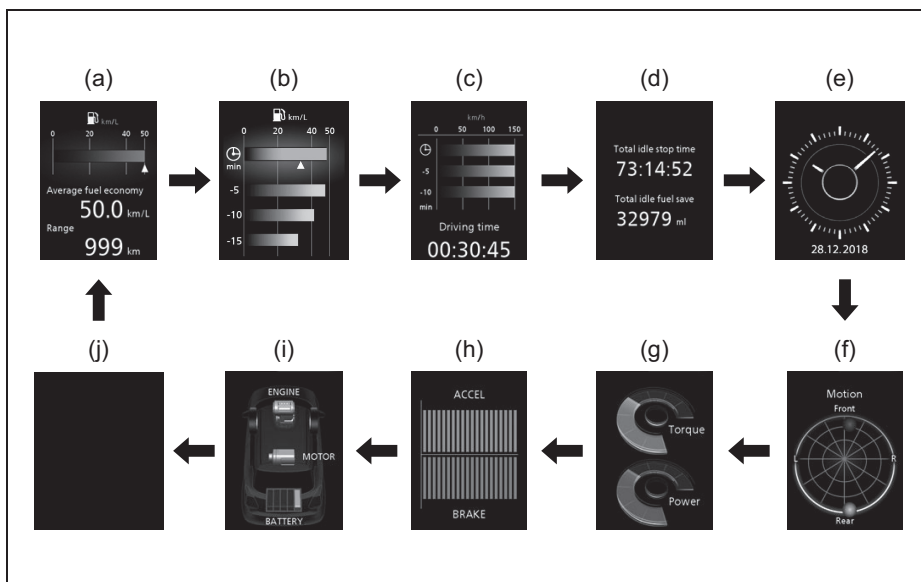

72R0064

- (a) Instantaneous fuel consumption / Average fuel consumption / Driving range  
 (b) Instantaneous fuel consumption / Average fuel consumption / 5-minute average fuel consumption  
 (c) Average speed / 5-minute average speed / Driving time  
 (d) Total idling stop time / Total idling fuel saved  
 (e) Clock and date  
 (f) Motion  
 (g) Torque and power  
 (h) Accelerator and brake  
 (i) Energy flow  
 (j) No indication

To switch the display indication, push the indicator selector knob (3) quickly.

### NOTE:


*The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed, total idling fuel saved, motion, torque and power, accelerator and brake and energy flow shown on the display are affected by the following conditions;*

- road condition
- surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blink

## BEFORE DRIVING

### Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

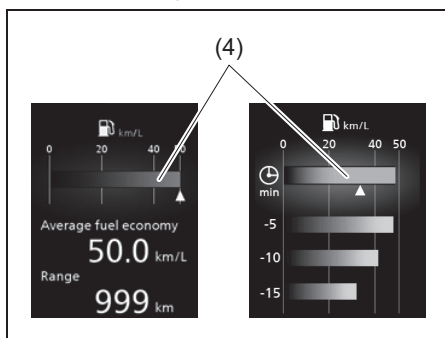

52RM21070

(4) Instantaneous fuel consumption

#### NOTE:

- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L, MPG (UK).
- The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
  - For L/100km setting: 30
  - For km/L setting: 50


– For MPG (UK) setting: 80

- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

### Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption

Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

#### (Average fuel consumption)

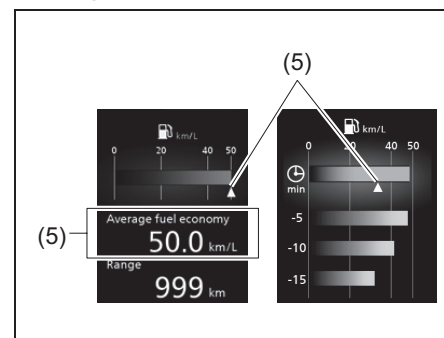

52RM21080

(5) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned "ON". Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

#### NOTE:

When you reconnect the negative (–) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;


- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

BEFORE DRIVING

**NOTE:**  
If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset.


(5-minute average fuel consumption)

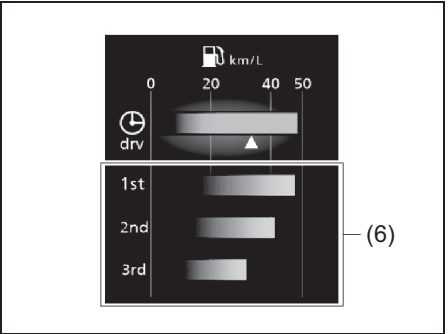

(6) 5-minute average fuel consumption

72R0136

(1-driving cycle average fuel consumption)

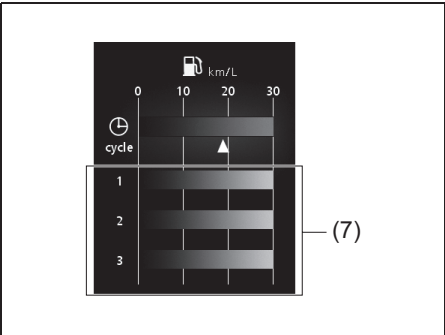


52R30840

(7) 1-driving cycle average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to "Setting mode" in this section.

Driving range

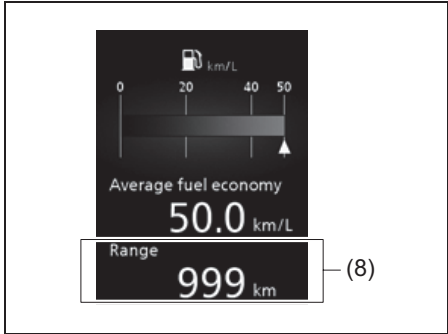

52RM21090

(8) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned "ON".

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display "---" will appear. If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

BEFORE DRIVING

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.


NOTE:

- If you refuel when the ignition switch is in "ON" position, the driving range may not indicate the correct value.
- When you reconnect the negative (–) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.
- If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly

Average speed / 5-minute average speed

Average speed from previous reset and 5-minute average speed are shown.

(Average speed)

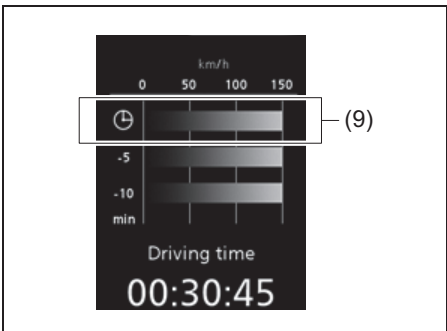

52RM21100

(9) Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is turned "ON". Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.


To reset the value of average speed, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates an average speed. The display

shows "---" and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the negative (–) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

(5-minute average speed)

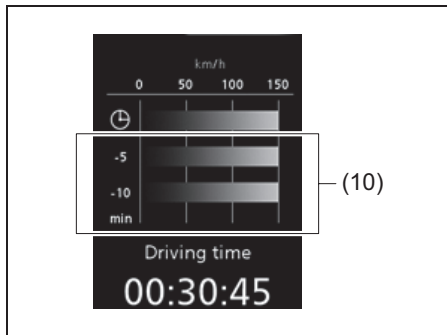


52RM21110

(10) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

## BEFORE DRIVING

### Driving time

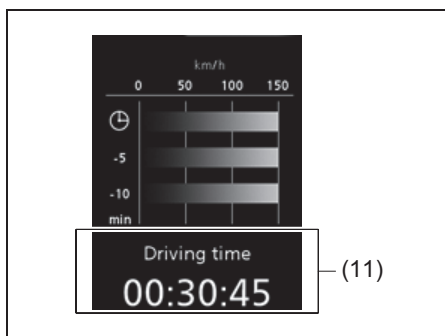

52RM21120


(11) Driving time

Driving time from previous reset is shown. To reset the driving time, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates a driving time. The display shows “---” and then indicates a new driving time after driving for a short time.

#### NOTE:

- Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.
- The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.

### Total idling stop time and total idling fuel saved

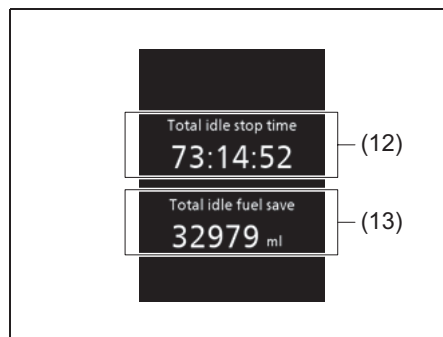

52RM217

(12) Total idling stop time  
(13) Total idling fuel saved

The display shows the total length (in hours, minutes and seconds) of engine stopping time and the total amount (in milliliters) of fuel conservation by ENG ASTOP system since the indication was reset.

- To reset the total idling stop time and the total idling fuel saved, push and hold the indicator selector knob (3) for a while when the display shows the total idling stop time and the total idling fuel saved.

#### NOTE:


- The indicated maximum value of the total idling stop time is 99:59:59 and this value is fixed until it is reset.
- When you reconnect the negative (-) terminal to the lead-acid battery, the

value of the total idling stop time and the total idling fuel saved will be reset.

### Clock and date

Date and time are shown. For the setting procedure, refer to “Setting mode” in this section.

### Motion

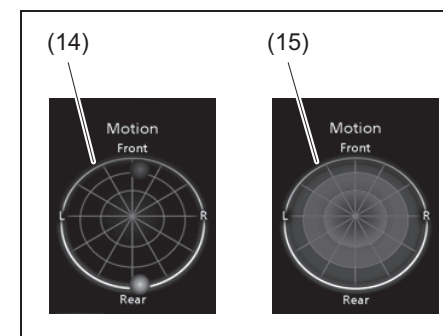

52RM218

The meter indication is different depending on whether the vehicle is stopped or running.

When driving, real time movement of imaginal G position (center of gravity) is displayed on the globe (14), which is resultant with inertia force.

When stopped, historical data of imaginal G positions applied to the vehicle body during the driving is shown as a graph (15).



BEFORE DRIVING

G position history graph when the vehicle stopped can be changed to indicate or hide. For details, refer to “Setting mode” in this section.

⚠ WARNING

Do not look in the display intensively while driving. Doing so may result in an accident.

NOTE:

- If G position history graph at the vehicle stopped has been set in indication mode, the graph (15) is shown for several seconds when you turn the ignition switch to “LOCK” position after driving.
- The graph is shown approximately and the actual movement may differ.

Torque and power





Present engine torque and power are shown.

Accelerator and brake

Present accelerator pedal depressing degree and brake line pressure are shown. The display is selectable to indicate or not to indicate. For details, refer to “Setting mode” in this section.

Energy flow (if equipped)

The state of SHVS operation can be checked on the information display. For details, refer to “SHVS (Smart Hybrid Vehicle by Suzuki)” in “OPERATING YOUR VEHICLE” section.


Information display	Description
 72R0138	When the vehicle is running, ISG (Integrated Starter Generator) assists engine power as an electric motor.
 72R0139	When the vehicle is powered by the engine.
 72R0140	When decelerating your vehicle, the ISG generates electricity without engine power.
 72R0141	When the engine automatically stops by the ENG A-STOP system.

BEFORE DRIVING

**Information shown after driving**  
When you turn the ignition switch to LOCK position, the following information appears for several seconds on the information display.



**Gearshift Indicator**

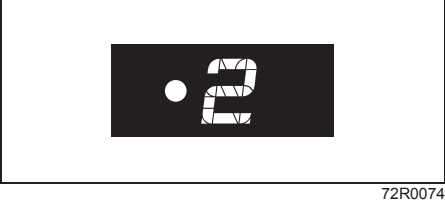

**Gearshift Indicator**  
Refer to "Gearshift indicator" in "OPERATING YOUR VEHICLE" section.

**Odometer / Trip meter**

The display (D) shows the odometer and trip meter.

The odometer records the total distance the vehicle has been driven.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To switch the display indication (D), push the trip meter selector knob (2) quickly.

To reset the trip meter, push and hold the trip meter selector knob (2) for about 2 seconds when the display shows the trip meter.


**NOTICE**

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Setting Mode

When the ignition switch is in “ON” position and the vehicle is stationary, you can enter into the setting mode of the information display by pushing and holding the indicator selector knob (3) for more than 3 seconds.

- To select the setting item that you want to change, turn the indicator selector knob (3) left or right.
- To change the setting, push the indicator selector knob (3).
- To exit the setting mode, select “Back” and push the indicator selector knob (3).

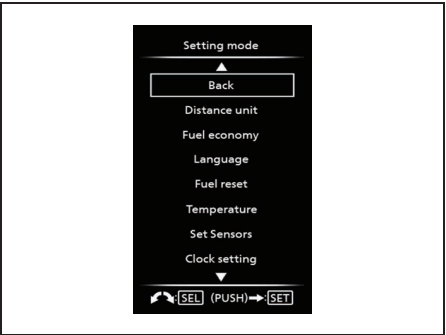

72R0142

**NOTE:**  
The currently selected setting item is surrounded by a frame.

NOTE:

- If you push and hold the indicator selector knob (3) to enter into the setting mode when the display (B) shows average fuel consumption, average speed, driving time, total idling stop time and total idling fuel saved (if equipped), the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.
- If you turn the ignition switch, press the engine switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.

Distance unit  
(Odometer / trip meter / driving range / average speed distance unit setting)

You can change the units in which odometer / trip meter / driving range / average speed distance is displayed.

Fuel economy  
(Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language (If equipped)

You can change the language of the information display.

Fuel reset  
(Average fuel consumption reset setting)

You can change when the value of average fuel consumption is reset.

Temperature  
(Temperature unit setting) (if equipped)

You can change the units that temperature is displayed in.

- To change the temperature unit, select “Temperature” in “Setting mode”. Then, select “°C” or “°F”.

## BEFORE DRIVING

### **Clock setting (if equipped) (Adjusting the clock)**

- Adjust the clock by selecting “Clock setting” in “Setting mode”. Then, select “Adjust clock”.
- To change the hour indication, turn the indicator selector knob (3) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (3). To set the hour indication, push the indicator selector knob (3) and the minute indication blinks.
- To change the minute indication, turn the indicator selector knob (3) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (3). To set the minute indication, push the indicator selector knob (3).

### **(Selecting 12H/24H format)**

- Switch the time indication between 12-hour and 24-hour format by selecting “Clock setting” in “Setting mode”. Then, select “12H” or “24H”.

### **(Adjusting the date)**

- Adjust the date by selecting “Clock setting” in “Setting mode”. Then select “Adjust date”.
- To adjust year, month and day, operate the indicator selector knob (3) in the same way as adjusting the clock.

### **Set sensors**

#### **(Parking sensor setting)**

The parking sensor can be switched between the normal mode and trailer mode.

#### **Door lock (Door lock setting)**

##### **(Door unlock)**

- All Doors:  
Unlock all doors by turning the key, or operating the keyless entry system transmitter once
- Driver Door:  
Unlock all doors by turning the key, or operating the keyless entry system transmitter, twice (default setting)

##### **(Auto lock)**

- Manual Lock:  
Disable the automatic door locking function
- Speed Syncro:  
Lock all doors when the vehicle speed reaches 15 km/h (default setting)

##### **(Auto unlock)**

- Syncro Off:  
Disable the automatic door unlocking function.
- IG-OFF Sync:  
Unlock all doors when the key is pulled out from the ignition switch.

##### **(Alarm)**

- You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

### **Lights**

#### **(Lane change setting)**

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever immediately after moving it.

### **Antitheft**

#### **(Shock sensor system setting)**

You can change the on/off of the shock sensor.

#### **(Shock sensor P setting)**

You can adjust the pre-warning sensitivity of shock sensor.

#### **(Shock sensor F setting)**

You can adjust the full blast warning sensitivity of shock sensor.

### **Display item (if equipped)**

#### **(“Car color” setting)**

You can change the car color of the information display.

#### **(“Calendar dis” setting)**

You can select whether you show the calendar on the information display or not.

#### **(“Calendar form” setting)**

You can change the calendar form of the information display.

To change the calendar form, select “Calendar form” in “Display item”. Then, select the display order of date, month and year.

**(“Fuel eco hist” setting)**

Transitional indication of average fuel consumption can be switched to time indication and driving cycle indication.

**(“Motion hist” setting)**

Indication of G position history graph at the vehicle stopped can be selected to enable or disable.

**(“Idling disp” setting)**

Display of ENG A-STOP operation with the ignition switch in LOCK position is selectable to indicate or not to indicate.

**(“Idling warn” setting)**

You can switch whether the information display shows the warning and indicator messages related on the ENG A-STOP system.

**(“Pedal op disp” setting)**

Display of “Accelerator and brake” is selectable to indicate or not to indicate.

**(“Regen disp” setting)**

You can choose that deceleration energy regenerating indicator light comes on or does not come on.

**Default****(initialization setting)**

If you select “YES” and push the indicator selector knob (3), all settings will be reinitialized.

**Warning and Indicator Messages**

The display shows warning and indicator messages to let you know about certain vehicle problems.

A tone may also sound to alert you.

If warning and indicator messages appear on the display, follow the messages.

**Master warning indicator light**

80P0382

When the display shows warning and indicator messages, the master warning indicator light may also blink.





**NOTE:**

- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.
- When you push and hold the indicator selector knob (2) for about 2 seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after 5 seconds.

## BEFORE DRIVING




### Warning and indicator messages

All model

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 72R0069	Blinks (only while vehicle is in motion) 	Beep (one time from interior buzzer; only while vehicle is in motion)	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly. (#1)
 52RS005	Blinks 	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.





(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

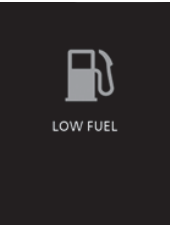BEFORE DRIVING

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
<div> 52RM21170</div>	Blinks 	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.
<div> 52RM21180</div>	Off	Beep (one time from interior buzzer)	Fuel is low. Refill it immediately. (#1)

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

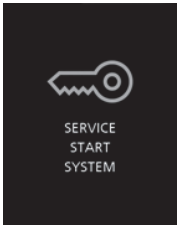



## BEFORE DRIVING

 <p>52RM21240</p>	<p>Blinks</p> 	<p>Beep (one time from interior buzzer)</p>	<p>There is a problem with the immobilizer. Also, the vehicle lead-acid battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle lead-acid battery, have your vehicle inspected by a Maruti Suzuki authorised workshop.</p>
 <p>52RM21230</p>	<p>Blinks</p> 	<p>Beep (one time from interior buzzer)</p>	<p>There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.</p>



**BEFORE DRIVING**

**Vehicle with ESP® system**

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 52RM21340	Blinks 	Beep (one time from interior buzzer)	There may be a problem with ESP® system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.
Hill hold control system  52RM21350	Blinks 	Beep (one time from interior buzzer)	There may be a problem with hill hold control system (if equipped). Have your vehicle inspected by a Maruti Suzuki authorised workshop.

## BEFORE DRIVING

### Warning and Indicator Lights

#### Brake System Warning Light



82K170

Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned "ON".
- The light comes on when the parking brake is engaged with the ignition switch in "ON" position.
- The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system.

If this happens:

- 1) Pull off the road and stop carefully.

#### WARNING

**Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.**

- 2) Test the brakes by carefully starting and stopping the vehicle on the shoulder of the road.
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorised workshop for repairs or tow the vehicle to the nearest a Maruti Suzuki authorised workshop for repairs.

#### WARNING

**If any of the following conditions occur, you should immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.**

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned "ON".
- If the brake system warning light comes on at any time during vehicle operation.


#### NOTE:

*Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.*

#### NOTE:

*A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.*

### Anti-Lock Brake System (ABS) Warning Light

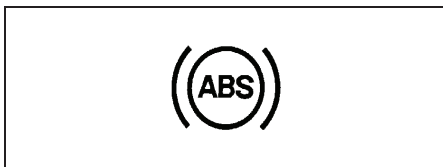

65D529

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to LOCK position and then start the engine again.

If the warning light comes on briefly and then turns off, the system is normal. If the warning light still stays on, something is wrong with the system.


If the light and the brake system warning light stay on or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and then anti-lock function of the ABS system.

If one of the above occurs, have the system inspected by a Maruti Suzuki authorised workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Anti-Lock Brake System (ABS)" in "OPERATING YOUR VEHICLE" section.

### Engine Oil Pressure Warning Light

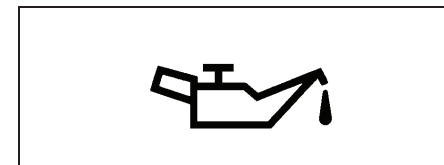

50G051

When the ignition switch is turned "ON" or, this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorised workshop before you drive the vehicle again.

#### NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the engine oil pressure warning light to indicate the need to add oil. Periodically check the engine oil level.

## BEFORE DRIVING

### ESP® Warning Light (if equipped)



52KM133

ESP® is a registered trademark of Daimler AG.

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system

If this light blinks, drive carefully.

When the ignition switch is turned "ON", the light comes on briefly so you can check that the light is working. If the light stays on or comes on when driving, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by a Maruti Suzuki authorised workshop.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®) (if equipped)" in "OPERATING YOUR VEHICLE" section.

#### **WARNING**

**The ESP® systems cannot prevent accidents. Always drive carefully.**

### ESP® OFF Indicator Light (if equipped)



73R0196


When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®) (if equipped)" in "OPERATING YOUR VEHICLE" section.

## BEFORE DRIVING

### Charge Warning Light

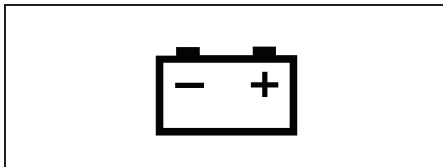

50G052

When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is something wrong with the lead-acid battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a Maruti Suzuki authorised workshop.

### Seat belt reminder light



60G049

When the driver and/or passenger (front passenger and/or 2nd row passenger\* and/or 3rd row passenger\*) do(does) not buckle his or her seat belt, this light will come on and/or blink. The reminder would be on unless all rear passengers' seat belts are fastened, irrespective of presence or absence of passenger. For details of the seat belt reminder, refer to "Seat belts and child restraint systems" section.

\*: If equipped

#### NOTE:

*Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.*

### AIRBAG Warning Light



63J030

When the ignition switch is turned "ON", this light comes on for several seconds so you can check that the light is working.


The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

#### WARNING

**If the Airbag warning light does not blink or come on briefly when the ignition switch is turned "ON", stays on for more than 10 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a collision. Have both systems inspected by a Maruti Suzuki authorised workshop.**

## BEFORE DRIVING

### Malfunction Indicator Light

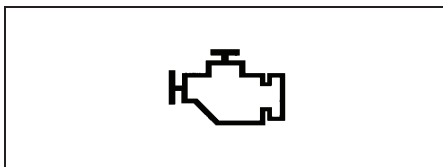

65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a Maruti Suzuki authorised workshop to have the damage fixed.

#### CAUTION

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- Do not drive or stop over such as withered grasses.
- Drive slowly if required to move the vehicle.

#### NOTICE

**Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.**

### Immobilizer Warning Light



80JM122


When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If this light blinks or stays on, there is a problem with the system.

If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask a Maruti Suzuki authorised workshop to have the system inspected.

## BEFORE DRIVING

### Open Door Warning Light

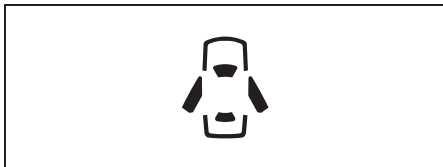

54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

### Low Fuel Warning Light



54G343

If this light comes on, refuel the fuel tank as soon as possible.

When this light comes on, a ding sounds once to remind you to refuel. If you do not refuel, a ding sounds every time when the ignition switch is turned "ON".

#### NOTE:

*The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.*

### Electric Power Steering Light



79J039

When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by a Maruti Suzuki authorised workshop.

#### NOTE:

*The following steering wheel operations may gradually take more effort while parking or driving at a very low speed. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent it from overheating.*

- *The steering wheel is operated very often.*
- *The steering wheel is kept in a fully turned position for a long while.*

*When the power steering control system cool down, the power steering system will return to its original condition.*

*However, repeating these operations could cause damage to the power steering system.*

## BEFORE DRIVING

- This light comes on when continuing period of time of limiting the power assist in order to prevent from overheating.


### NOTE:

If the power steering system does not work properly, it will require greater effort to steer, but you still will be able to steer.

### NOTE:

If the steering is operated, you may hear noise caused by electric power steering operation. This is normal and indicates that the power steering system works properly.

### Turn Signal Indicators

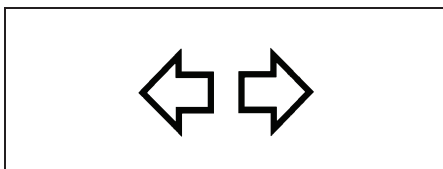

50G055

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.


### NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be malfunction in the turn signal system.

2-41

Ask your Maruti Suzuki authorized workshop to inspect the system.


### Main Beam (high beam) Indicator Light

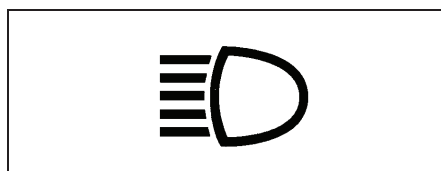

50G056

This indicator comes on when headlight main beams (high beams) are turned on.

### Illumination Indicator Light

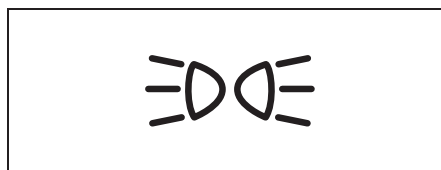

64J045

This indicator light comes on while the position lights, tail light and/or the headlights are on.

### ENG A-STOP Indicator Light (if equipped)




72M00032

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the engine stops automatically, this light comes on.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" in "OPERATING YOUR VEHICLE" section.

### ENG A-STOP OFF Light (if equipped)

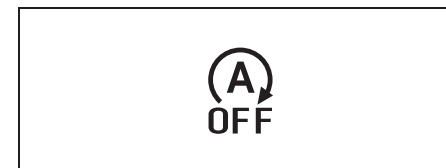

72M00159

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.



## BEFORE DRIVING

When you push the ENG A-STOP OFF switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by a Maruti Suzuki authorised workshop.

For details, refer to “ENG A-STOP System (Engine Auto Stop Start System)” and “SHVS (Smart Hybrid Vehicle by Suzuki)” in “OPERATING YOUR VEHICLE” section.

### Deceleration Energy Regenerating Indicator Light (if equipped)



72M00168

When the ignition switch is turned to “ON” position, this light comes on briefly so you can check that the light is working.

When the deceleration energy regenerating function is working, this light comes on.

For details, refer to “SHVS (Smart Hybrid Vehicle by Suzuki)” in “OPERATING YOUR VEHICLE” section.

### Master Warning Indicator Light (if equipped)




80P0382

When the ignition switch is turned “ON”, this light comes on briefly so you can check that the light is working.

When the information display shows warning and indicator messages, this indicator light may also blink.

For details, refer to “Information display” in this section.

### Lighting Control Lever

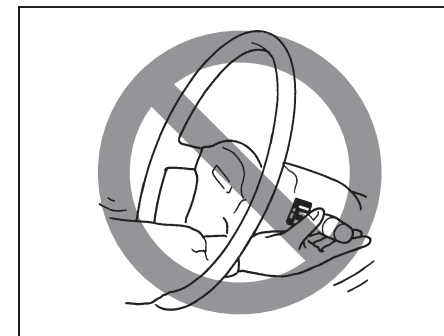


65D611

#### **WARNING**

To avoid possible injury, do not operate controls by reaching through the steering wheel.

## BEFORE DRIVING

### Lighting Operation

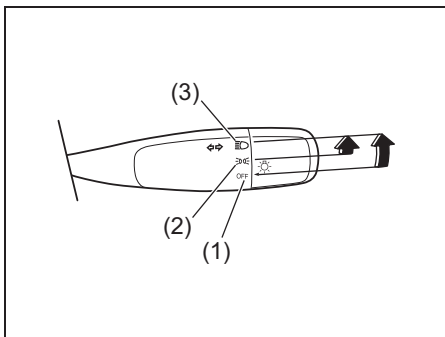

60MK011

To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

#### **OFF (1)**


All lights are off.

#### **LOW (2)**

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

#### **HIGH (3)**

Front position lights, tail lights, license plate light, instrument lights and headlights are on.

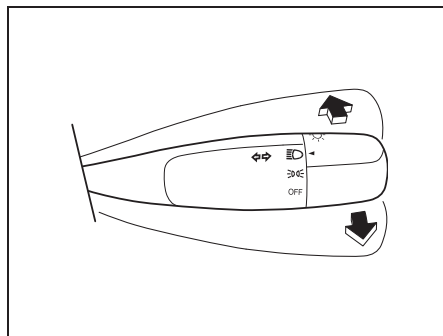

60MK012

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

### Light Reminder Buzzer


The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:

The headlights and/or position lights are on even after the ignition switch is turned off.

The buzzer stops sounding when you turn off the headlights and position lights.

**BEFORE DRIVING**

**Headlight Leveling Switch**

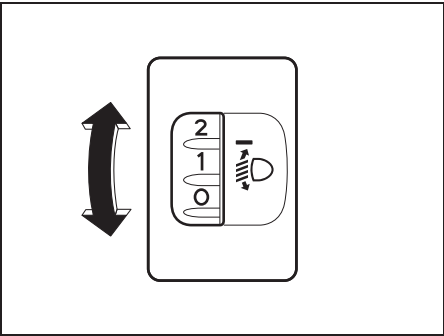

75RM008

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle-load conditions.

**(For petrol engine (without CNG) model)**


Loading Conditions	Switch Position
Driver (1 Seat)	0
Driver + Co-Driver (2 Seats)	0.5
Driver + Co-Driver + 2nd row 3 Seats (Total-5 Seats)	1.5
All Passengers (7 Seats)	2.5
All Passengers + Cargo (Evenly distributed load in luggage boot)	3
Driver + Cargo (Evenly distributed load in luggage boot)	4.5

**(For CNG model)**

Loading Conditions	Switch Position
Driver (1 Seat)	0
Driver + Co-Driver (2 Seats)	0.5
Driver + Co-Driver + 2nd row 3 Seats (Total-5 Seats)	1
All Passengers (7 Seats)	2
All Passengers + Cargo (Evenly distributed load in luggage boot)	2.5
Driver + Cargo (Evenly distributed load in luggage boot)	4

## BEFORE DRIVING

### Turn Signal Control Lever

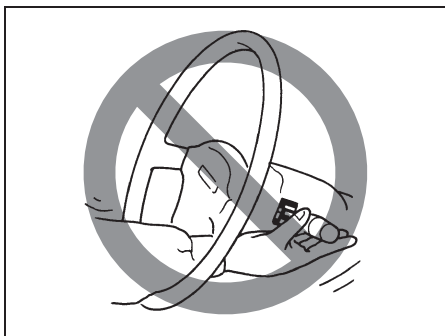

65D611




#### WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

### Turn Signal Operation

With the ignition switch in “ON” position, move the lever upward or downward to activate the right or left turn signals.


#### Normal turn signal

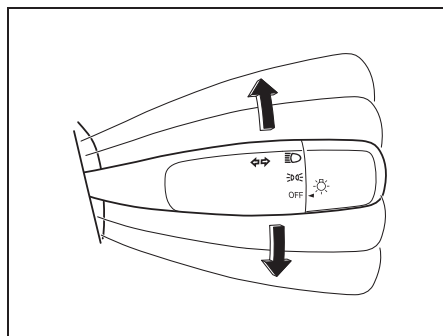

60MK013

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

### Lane change signal

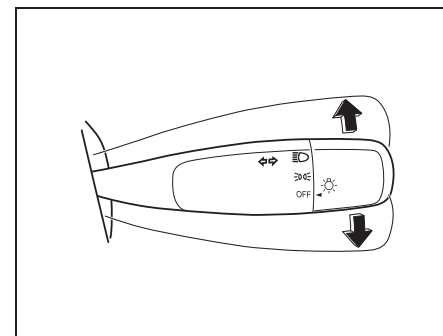

60MK014

Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.


- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.

#### NOTE:

The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to “Information display” in this section.

## BEFORE DRIVING

### Hazard Warning Switch

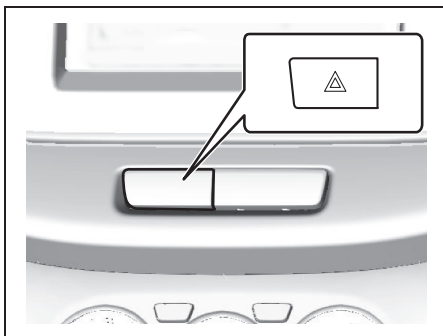


73R0011

Push the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

### Windshield Wiper and Washer Lever

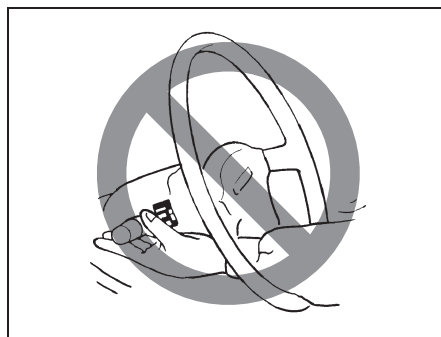

57L21128

#### **WARNING**

**To avoid possible injury, do not operate controls by reaching through the steering wheel.**

### Wiper and Washer Operation

When the ignition switch is in "ON" position, you can use the wiper/washer lever or switch.

When the wipers are under heavy load such as covered by snow, the breaker will be activated and the wipers will stop operating to protect the wiper motor from overheating.


If the wiper stops during operation, do the following methods.

- 1) Stop the vehicle in a safe place, and turn the engine off.
- 2) Move the wiper lever and switch to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and the wipers will be able to use.

If you cannot use the wipers after a while, there may be another problem. Ask a Maruti Suzuki authorised workshop to have the wipers inspected.

## BEFORE DRIVING

### Windshield Wipers

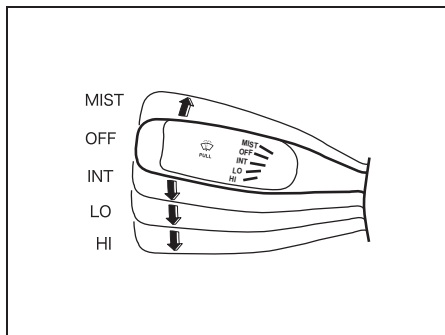


74LM02008

To turn the windshield wipers on, move the lever down to one of the three operating positions. In "INT" position, the wipers operate intermittently. "INT" position is very convenient for driving in mist or light rain. In "LO" position, the wipers operate at a steady low speed. In "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to "OFF" position.

Move the lever up and hold it to "MIST" position, the windshield wipers will turn on continuously at low speed.

### Windshield Washer

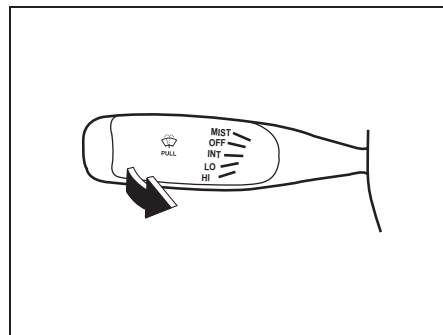

74LM02009

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and "INT" position is equipped.

#### ⚠ WARNING

- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also damage your vehicle's paint.


#### NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.

## BEFORE DRIVING

### Tilt Steering Lock Lever

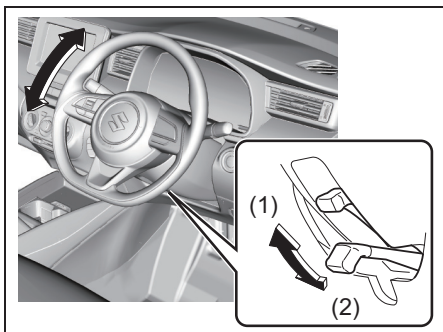

73R0012

- (1) LOCK
- (2) UNLOCK


The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- 2) Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- 3) Try moving the steering wheel up and down to make sure it is securely locked in position.

### ⚠ WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.

### Horn

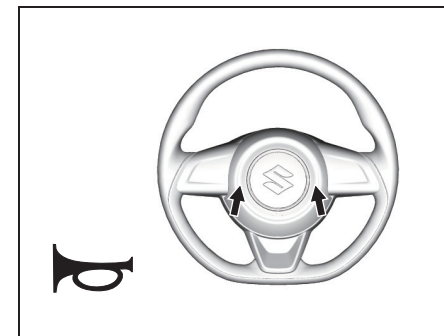

73R0062

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.

## BEFORE DRIVING

### Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

#### WARNING

**Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).**

#### WARNING


**Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.**

### Trailer Towing your vehicle

Your MARUTI SUZUKI was originally designed to carry people and a normal amount of cargo, not to tow a trailer.



OPERATING YOUR VEHICLE

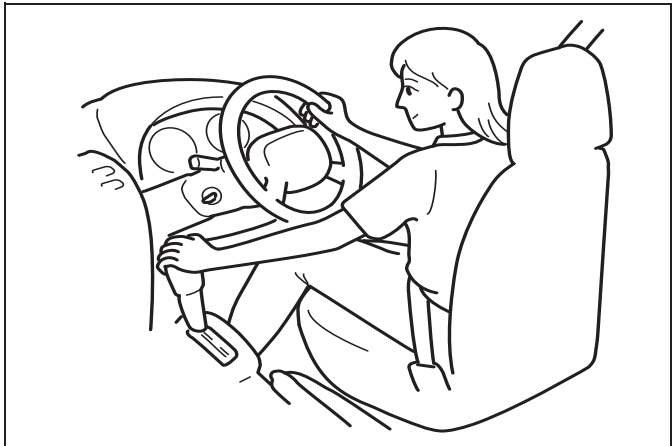


60G408

Daily Inspection Checklist .....	3-1
Engine Oil Consumption .....	3-2
Ignition Switch .....	3-2
Parking Brake Lever .....	3-4
Pedal .....	3-5
Starting / Stopping Engine .....	3-6
Using the Transmission .....	3-7
Gearshift Indicator .....	3-8
SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped) ....	3-9
ENG A-STOP System (Engine Auto Stop Start System)	
(if equipped) .....	3-12
Parking Sensors .....	3-21
Braking .....	3-26
Electronic stability program (ESP®) (if equipped) .....	3-28

## OPERATING YOUR VEHICLE

### Daily Inspection Checklist

#### Before Driving

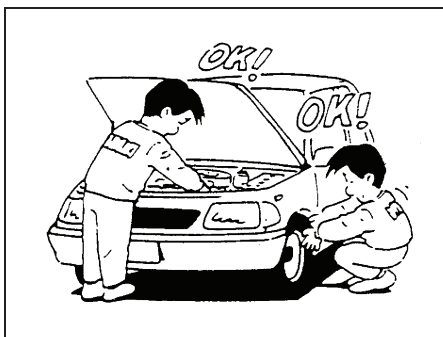

60A187S

- 1) Make sure that windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tyres for the following points:
  - the depth of the tread groove
  - abnormal wear, cracks and damage
  - loose wheel nuts
  - existence of foreign material such as nails, stones, etc.

Refer to “Tyres” in “INSPECTION AND MAINTENANCE” section for details.

- 3) Look for fluid and oil leakage.

#### NOTE:

*It is normal for water to drip from the air conditioning system while and after use.*

- 4) Make sure the hood is fully closed and latched.
- 5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint (if equipped).
- 7) Check the brake pedal feeling and the adjustment condition for the parking brake lever or pedal.  
Refer to “Brakes” in “INSPECTION AND MAINTENANCE” section for details.
- 8) Adjust the mirrors.
- 9) Make sure that you and all passengers have properly fastened the seat belts.
- 10) Make sure that all warning lights come on as the ignition switch is turned to ON position or the ignition switch is turned “ON”.
- 11) Check all gauges.
- 12) Make sure that the BRAKE SYSTEM WARNING light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery fluid (acid) level
- 5) Windshield washer fluid level
- 6) Hood latch operation

Pull the hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Be sure to close the hood securely after checking for proper latch operation. See the item “All latches, hinges and locks” of “CHASSIS AND BODY” in “Periodic Maintenance Schedule” in “INSPECTION AND MAINTENANCE” section for lubrication schedule.

#### WARNING

**Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.**

Once a month, or each time you fill your fuel tank, or before a long distance driving (like highway driving) check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre.

## OPERATING YOUR VEHICLE

### Engine Oil Consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumption depends on viscosity and quality of the oil and your driving conditions.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km driving.

#### Oil consumption:


**Max. 1.0 L per 1000 km**

When judging the amount of oil consumption, note that the oil may become diluted and it is difficult to judge the accurate oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km or more of driving. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

### Ignition Switch

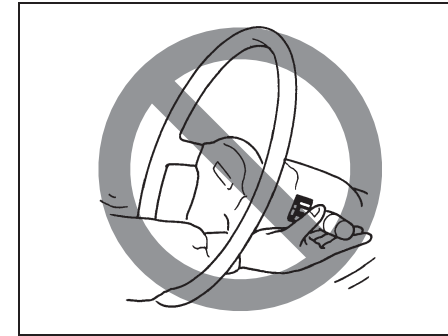


65D611

#### **WARNING**

**To avoid possible injury, do not operate controls by reaching through the steering wheel.**

## OPERATING YOUR VEHICLE

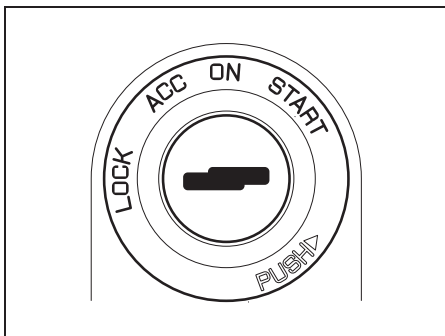


68PH00310

The ignition switch has the following four positions:

### LOCK

This is the normal parking position. It is the only position in which the key can be removed.

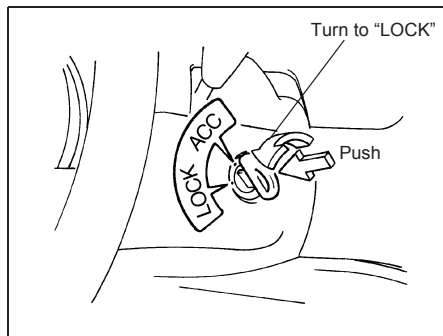

60G033

- You must push in the key to turn it to LOCK position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering wheel, try turning the steering wheel slightly to the right or left while turning the key.

### ACC

Accessories such as the radio can operate, but the engine is off.

### ON


This is the normal operating position. All electrical systems are on.

### START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

### Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

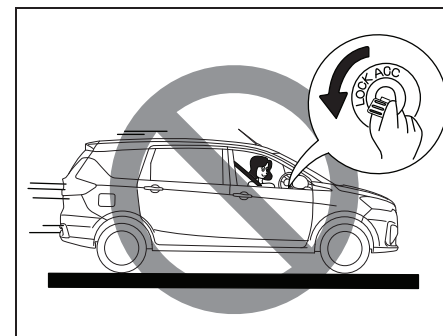

72RM03004

### ⚠ WARNING

- **Never return the ignition switch to the LOCK position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.**

(Continued)


**⚠ WARNING**

- Always return the ignition switch to LOCK position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children may be able to start the vehicle or shift the transmission into neutral, which could result in an accident. There is also a danger that children may injure themselves by playing with the power windows or other moving features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

**NOTICE**

- Do not leave the ignition switch in ON position if the engine is not running as the lead-acid battery will discharge.
- Do not crank the engine for more than 12 seconds at a time. If the engine does not start on the first try, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult a Maruti Suzuki authorised workshop.

**Parking Brake Lever**

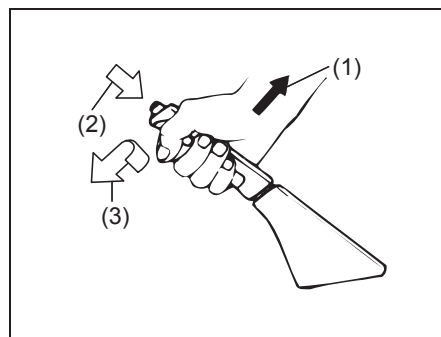

54G039

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

**⚠ WARNING**

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.
- When parking on an uphill, turn the steering wheel so that the front wheels point to the center of the road.
- When parking on a downhill, turn the steering wheel so that the front wheels point to the curb.

## OPERATING YOUR VEHICLE

### WARNING

Whenever parking, make sure the gearshift lever is in 1st gear or “R” (Reverse). Remember, even though the transmission is in gear, you must set the parking brake fully.

### WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake.
  - 2) Turn off the engine, then shift into reverse or first gear.
  - 3) Get out of the vehicle and put chocks under the wheels.
  - 4) Release the parking brake.
- When you return to your vehicle, you must remember to first set the parking brake, then remove the wheel chocks.

### WARNING


Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:

- Gas may leak from a cigarette lighter or spray can and may lead to a fire.
- The glasses, plastic cards or CD cases, etc. may deform or crack.
- Soft drink cans may fracture.

### Parking Brake Reminder Buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

### Pedal

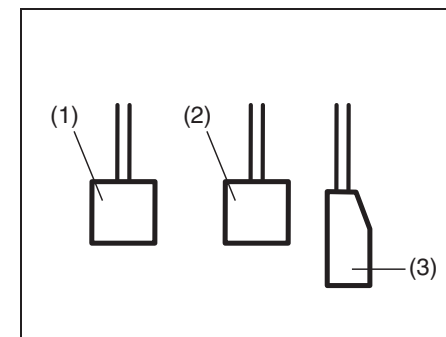

80J2121

### Clutch Pedal (1)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

### WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

### Brake Pedal (2)

Your vehicle is equipped with front disc brakes and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc.

#### WARNING

**If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a Maruti Suzuki authorised workshop.**

#### WARNING


**Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.**

### Accelerator Pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

## Starting / Stopping Engine

### Starting Engine

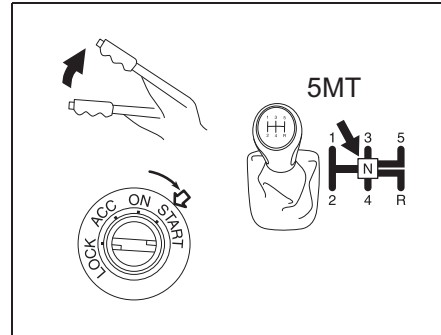

- 1) Check that the parking brake is set fully.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.
- 3) Shift into "N" (Neutral). Hold the clutch pedal and brake pedal fully depressed.
- 4) With your foot taken off accelerator pedal, crank the engine by turning the ignition key to "START". Release the key immediately after the engine has started.

#### WARNING

**Make sure that the parking brake is set fully and the transmission is in Neutral before attempting to start the engine.**

#### NOTICE

**For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine does not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult a Maruti Suzuki authorised workshop.**

### Starting a Cold and Warm Engine

With your foot taken off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key when the engine starts.

#### NOTICE


- **Stop turning the starter immediately after the engine has started or the starter system can be damaged.**
- **Do not use the starter motor for more than 12 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult a Maruti Suzuki authorised workshop.**

## OPERATING YOUR VEHICLE

### Using the Transmission

#### ⚠ WARNING

Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

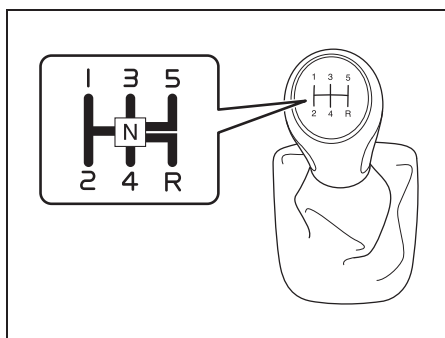

73R0014

#### Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

#### Shifting

All forward gears are synchronized, which provides for quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed does not rise into the red zone of the tachometer.

#### Downshifting maximum allowable speeds

Downshifting	km/h
2nd to 1st	20
3rd to 2nd	75
4th to 3rd	110
5th to 4th	150*

#### \*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

#### NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

#### ⚠ WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

#### NOTICE

Before engaging reverse gear [R], check that the vehicle is completely stationary and gear lever is in neutral [N] position. After depressing clutch pedal fully, shift to [R].



**NOTE:**

*If it is difficult to engage reverse gear [R], follow below procedure.*

1. Put gear lever in neutral [N].
2. Release clutch pedal once.
3. Again depress the clutch pedal and shift from [N] to [R].

**NOTICE**

- To help avoid clutch damage, do not use the clutch pedal as a foot-rest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

**Gearshift Indicator**



72RH4027

In the following cases, the gearshift indicator is indicated on the information display when the ignition switch is in "ON" position.

- When the gearshift lever is in a position other than "N" (Neutral).

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated on the display while driving, we recommend you to shift up or down the gear until the arrow disappears. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to "Using the Transmission" in this section.

**⚠ WARNING**

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.




To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

**NOTE:**

- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.
- If any of the electrical systems such as the ESP<sup>®</sup> is working, the gearshift indicator will disappear temporarily.

## OPERATING YOUR VEHICLE

### Example of the gearshift indicator

Indication	Description
	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended. <ul style="list-style-type: none"><li>• In this case, shifting up to 4th gear position is recommended.</li></ul>
	Current gear position is optimal for the vehicle speed and/or engine revolution. <ul style="list-style-type: none"><li>• In this case, 3rd gear position is the best.</li></ul>
	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended. <ul style="list-style-type: none"><li>• In this case, shifting down to 2nd gear position is recommended.</li></ul>

### SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)

SHVS has an Integrated Starter Generator (ISG) instead of conventional generator to get a better fuel consumption.

Integrated Starter Generator (ISG) is a generator which incorporated a motor function.

The ISG has the following 3 functions.


- Deceleration energy regenerating function
- Engine power assist function
- Starter motor function

#### **WARNING**

**Dripping engine oil, brake fluid and coolant, etc. to the ISG may cause a fire or malfunction. Do not spill them when pouring.**

## OPERATING YOUR VEHICLE

### Deceleration Energy Regenerating Function

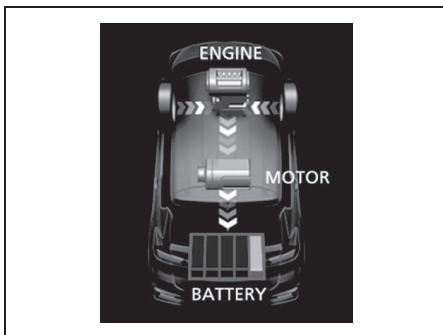

72R0096

While decelerating your vehicle, the ISG generates electricity without engine power. This reduces engine loads and improves fuel consumption.


While decelerating your vehicle, deceleration energy regenerating function will be activated when the following conditions are satisfied.

- Gearshift lever is not in “N” (Neutral).
  - Clutch pedal is not depressed.
  - Engine speed is more than 950 rpm.
  - Inside temperature of lead-acid battery is in normal condition.
  - Lithium-ion battery is not fully charged and inside temperature is in normal condition.
- etc.

#### NOTE:

*The deceleration energy regenerating function may not work depending on vehicle conditions.*

### Engine Power Assist Function

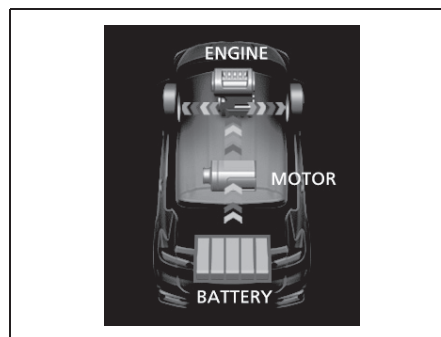

72R0097

While the vehicle is running, ISG assists engine power as a motor in the following limited condition. This reduces engine loads and improves fuel consumption.

While the vehicle is running with the engine speed at approximately 4000 rpm or less, engine power assist function will be activated when all of the following conditions are satisfied.


- SHVS system and ENG A-STOP system are working properly. (“ENG A-STOP OFF” indicator light is not blinking.)
- Clutch pedal is not depressed.
- ESP® (if equipped) is not activated.
- Accelerator pedal is excessively depressed.
- Lead-acid battery and lithium-ion battery are fully charged and each inside temperature is in normal condition.
- Engine coolant temperature is in normal condition.
- ISG inside temperature is in normal condition.

#### NOTE:

- *The engine power assist function may not work depending on vehicle conditions.*
- *The engine power assist function may not work while the battery capacity is being checked right after the engine start, and so on.*
- *The subjective feeling of the horn sound, head lamp illumination and A/C blower speed is likely to be different when the deceleration energy regeneration function and engine power assist function are active.*

## OPERATING YOUR VEHICLE


### Starter Motor Function

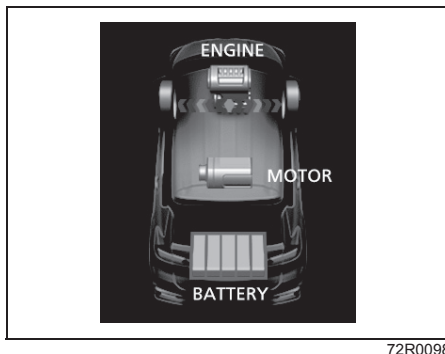

After the engine auto stop by the ENG A-STOP system, the engine will be restarted using a cranking power of the ISG.

The starting with the ISG is quiet compared with starting by the conventional starter motor.

### Lithium-ion Battery Indication

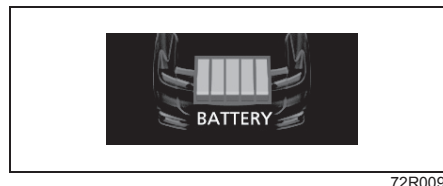


The segments in the lithium-ion battery indicator (1) give an approximate indication of the charge of the lithium-ion battery. The number of segments that appear in the indication increases or decreases with the charge of the lithium-ion battery.

#### NOTE:

*The indicator gives an approximate indication. The indication may be delayed or differ from the actual charge of the lithium-ion battery under certain conditions, for example, when the outside temperature is low. Also, the minimum segment is 1 bar and the bar will never be 0. Even when 1 bar is shown, the battery level may be close to be flat.*

### Deceleration Energy Regenerating Indicator Light

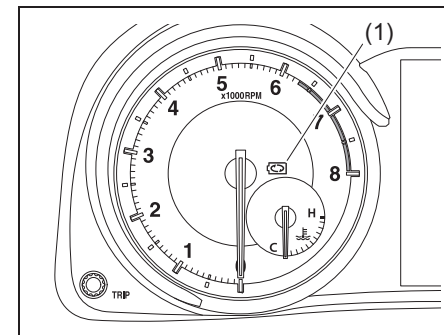


When the deceleration energy regenerating function is working, the deceleration energy regenerating indicator light (1) comes on.

#### NOTE:

*If the gearshift lever is in the "N" (Neutral) position, this light does not come on.*

**ENG A-STOP OFF Light (if equipped)**

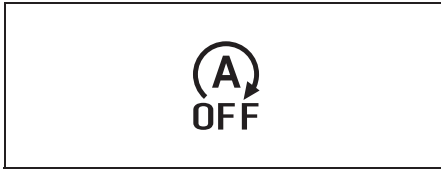

56RM03012

If this indicator blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by a Maruti Suzuki authorised workshop.

**ENG A-STOP System (Engine Auto Stop Start System) (if equipped)**

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the ignition switch or the engine switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

**⚠ CAUTION**

- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
  - If the driver's seat belt is unfastened or the driver's door is opened, the engine will restart.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, turn the ignition switch to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.


## OPERATING YOUR VEHICLE

### NOTICE

The vehicle equipped with this system uses a dedicated high-performance lead-acid battery that supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the lead-acid battery may die prematurely.

- When replacing the lead-acid battery, use a Maruti Suzuki genuine battery specified in the Specification.
- Do not draw power from the lead-acid battery terminals for electrical products.
- If the vehicle key is in “ACC” position for extended duration, the vehicle may enter a state where the Audio / Navigation equipment may shut off. In any such event, turn the key to OFF position, and after that start the engine and let both the batteries charge for at least 30 Minutes. It is to enable better functioning of both the batteries.

### Lithium-ion Battery

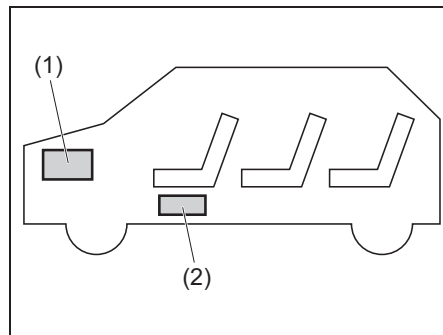

72R0100

- (1) Battery (lead-acid battery)  
(2) Lithium-ion battery

This lithium-ion battery is used exclusively for the vehicle equipped with ENG A-STOP system or SHVS, and located below the front left side seat.

- Just like a battery (lead-acid battery), the lithium-ion battery also discharges gradually. To prevent the lithium-ion battery from dying, you must charge the lithium-ion battery by driving continuously for at least 30 minutes once a month.
- Vehicle should not be left with ignition in ON or ACC position, for extended periods of time.
- Do not add any external load to lithium-ion battery.
- The lithium-ion battery is maintenance-free.

- To replace or dispose of the lithium-ion battery, consult a Maruti Suzuki authorised workshop.

### ⚠ WARNING

Wrong handling of the lithium-ion battery may result in fire, electric shock or system malfunction. Accordingly, observe the instructions listed below:

- Do not dismount or disassemble the lithium-ion battery.
- Do not let the lithium-ion battery come in contact with water or other liquids.
- Do not apply strong impact on the lithium-ion battery.
- Do not step on the lithium-ion battery or put articles on the lithium-ion battery.
- Do not disconnect the lithium-ion battery terminals or draw power from the terminals for electrical products.
- If lithium-ion battery gets submerged under water, it can lead to fire.


### NOTE:

Lithium-ion battery, if not disposed in an eco-friendly manner and in accordance with the applicable laws, may pose safety and environmental hazard. Maruti Suzuki ensures proper disposal of this battery through established channels in an eco-

friendly manner. Owner shall return this lithium-ion battery to Maruti Suzuki authorized dealerships as soon as it is not fit for use in vehicle. Once the owner returns the lithium-ion battery, Maruti Suzuki will ensure proper disposal in compliance with the laws to avoid legal implications to owners. If batteries are not returned to Maruti Suzuki, it will become owners' responsibility and accountability to ensure proper disposal in accordance with the applicable laws. Maruti Suzuki will not take any responsibility for consequences such as accidents or damages arising due to the abandonment, resale, inappropriate use, modification, dismantling and improper disposal of Lithium-ion battery. Contact your nearby Maruti Suzuki authorized workshop to dispose the used lithium-on battery. 'Battery Recycling Information' and necessary handling instructions are also affixed on the battery pack. For more information, connect Maruti Suzuki customer care.

### Automatic Stopping/Restarting of the Engine

- 1) With the brake pedal depressed, decelerate the vehicle.

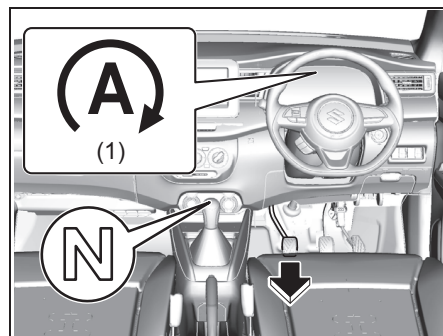

72R0101

- 2) After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to "N", and then release the clutch pedal, the engine will stop automatically.  
The ENG A-STOP indicator light (green) (1) will come on.

## OPERATING YOUR VEHICLE

- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to the section, "Conditions to stop the engine automatically".
- During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.  
For details, refer to the section, "Precautions of when the engine is stopped automatically".

### NOTICE


**During the automatic engine stop, do not shift the gearshift lever to a position other than "N" without depressing the clutch pedal. If the gear shift lever is in a position other than "N", the engine will not restart automatically even if the clutch pedal is depressed.**

## OPERATING YOUR VEHICLE

**NOTE:**

The ENG A-STOP system will not operate and engine does not stop automatically under the following conditions:

- Engine auto stop function will be ready once the vehicle runs at a speed exceeding 6km/h after restart of the engine.
- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.

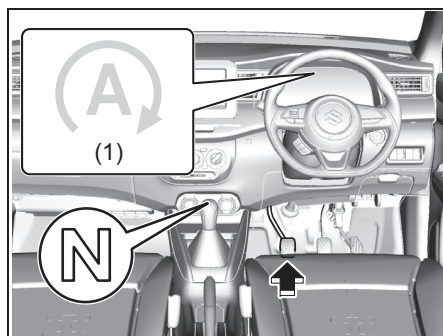

72R0102

- 3) Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) (1) will go off.

While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

- Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.

For details, refer to the section, "Conditions to restart the engine automatically".



## OPERATING YOUR VEHICLE

### Precautions of when the engine is stopped automatically

#### WARNING

**Do not perform any of the following operations while the engine has been stopped automatically. This may result in an accident.**

Operation/Vehicle Condition	Solution
Engine hood opened <ul style="list-style-type: none"><li>• The interior buzzer sounds intermittently.</li><li>• After the engine is stopped automatically, it stalls.</li><li>• The ENG A-STOP indicator light (green) goes off.</li></ul>	To restart the engine, follow the procedure below. <ol style="list-style-type: none"><li>1) Set the parking brake firmly, and then place the gearshift lever in the "N" position.</li><li>2) Securely close the engine hood.</li><li>3) Turn the ignition switch to restart the engine.</li></ol>
Driver's seat belt unfastened or driver's door opened <ul style="list-style-type: none"><li>• The engine is restarted automatically.</li><li>• The ENG A-STOP indicator light (green) blinks 5 times, then goes off.</li></ul>	Fasten the driver's seat belt and/or close the driver's door.
Gearshift lever shifted to a position other than "N" without depressing the clutch pedal, driver's seat belt unfastened and driver's door opened <ul style="list-style-type: none"><li>• The interior buzzer sounds intermittently.</li><li>• After the engine is stopped automatically, it stalls.</li><li>• The ENG A-STOP indicator light (green) goes off.</li></ul>	To restart the engine, follow the procedure below. <ol style="list-style-type: none"><li>1) Set the parking brake firmly, and then place the gearshift lever in the "N" position.</li><li>2) Close the door and buckle the seat belt.</li><li>3) Turn the ignition switch to restart the engine.</li></ol>

#### NOTE:

*The following indicator lights in the instrument cluster do not come on when the engine is stopped automatically.*

- *Malfunction indicator light, electric power steering light, engine oil pressure warning light, charge warning light*

## OPERATING YOUR VEHICLE

### Operating conditions of ENG A-STOP system

#### Standby conditions

If all of the following conditions are met while driving, the automatic engine stop will be permitted.

When the engine is started	<ul style="list-style-type: none"><li>• The engine is started with the engine hood securely closed.</li></ul>
When driving	<ul style="list-style-type: none"><li>• The ENG A-STOP system is not deactivated (OFF).</li><li>• The battery is charged more than a certain amount, and the temperature inside the battery is within the specified range. (#1)</li><li>• The engine coolant temperature is within the specified range.</li><li>• The driver's seat belt is fastened.</li><li>• The driver's door is securely closed.</li><li>• The engine hood is securely closed.</li><li>• There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system. (#2)</li></ul>

#1: If the battery is discharged, for example, if the vehicle has not been used for a long time or electrical components, such as the navigation system or audio system, have not been used for a long time while the engine was stopped, it may take some time until the system can be in standby.

#2: If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

OPERATING YOUR VEHICLE

Conditions to stop the engine automatically

If all of the following conditions are met while the standby conditions are met, the engine is stopped automatically when the vehicle is decelerating before stopping or when the vehicle is stopped.

When the vehicle is stopped	<ul style="list-style-type: none"><li>• The ABS or ESP<sup>®</sup> system has not been activated.</li><li>• Brake booster vacuum pressure is normal.</li><li>• The gearshift lever is in “N” position.</li><li>• The clutch pedal is released.</li></ul>
-----------------------------	--

## OPERATING YOUR VEHICLE

### Conditions to restart the engine automatically

If any of the following vehicle conditions occur or operations are performed while the engine is stopped automatically, the engine is restarted automatically and the ENG A-STOP indicator light (green) goes off.

Common	<ul style="list-style-type: none"><li>• The ENG A-STOP system is deactivated (OFF).</li><li>• The battery continues to be discharged. (#1)</li><li>• Brake booster vacuum pressure is low. (#1)</li><li>• A malfunction was detected in this system. (#2)</li><li>• The temperature of the air from the outlets changes greatly, or the cooling and heating performance is insufficient. (#1)</li><li>• The temperature selector was greatly set toward COOL while cooling or greatly set toward HOT while heating. (#1)</li><li>• The defroster is turned on. (#1)</li><li>• The ABS or ESP<sup>®</sup> system is activated.</li><li>• The clutch pedal is depressed.</li></ul>
When the vehicle is stopped	<ul style="list-style-type: none"><li>• The driver's seat belt is unfastened. (#1)</li><li>• The driver's door is opened. (#1)</li><li>• The vehicle is moving along a slope. (#1)</li><li>• Some time (about 3 minutes) has passed since the engine was stopped automatically. (#1)</li></ul>


#1: After the ENG A-STOP indicator light (green) blinks, it goes off. Also, the interior buzzer may sound at the same time.

#2: Depending on the situations of malfunction, it is a normal restart or the restart as #1.

### ENG A-STOP OFF Switch (if equipped)

The ENG A-STOP system can be deactivated.

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.
- Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

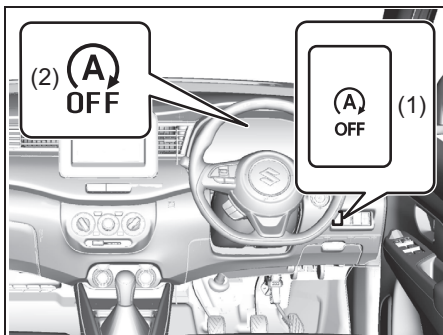


72R0104

#### NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.

### ENG A-STOP OFF Light (if equipped)

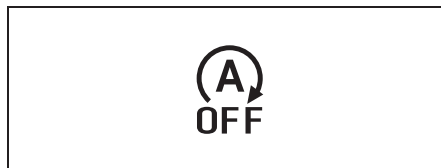

56RM03012

This indicator comes on in the information display.

- This indicator comes on when the ENG A-STOP system is deactivated.
- The indicator blinks if one of the conditions listed below is met.
  - The ENG A-STOP system or the SHVS system does not actuate correctly while the indicator is blinking. Have the system inspected by a Maruti Suzuki authorised workshop.
  - There may be something wrong with the ENG A-STOP system or the SHVS system.
  - An engine component (ISG) or the lead-acid battery is due for replacement.


#### NOTE:

If the indicator blinks during the automatic engine stop, the engine may shut down.

## OPERATING YOUR VEHICLE

### Parking Sensors

#### Information Display Symbol

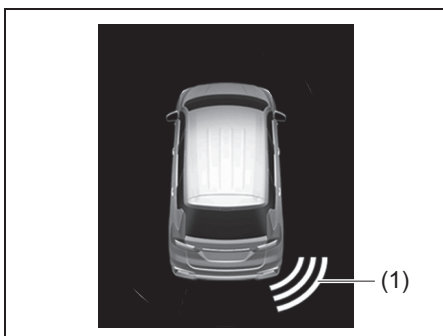

72R0035

(1) Symbol representing an obstacle detected by parking sensor\*

\* This symbol shows that an obstacle is located on the right rear of vehicle.

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumper. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer and displaying symbols representing the obstacles on the information display in the instrument cluster.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obsta-


cle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.

- The parking sensor function can be used when the ignition switch is turned "ON", the gearshift lever is in R position. This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

#### ⚠ WARNING

- The parking sensor warns you of obstacles with buzzers and by showing you the location of the obstacles on the information display (if equipped). However, you must still pay full attention yourself while driving.
- The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.

#### Sensor Locations

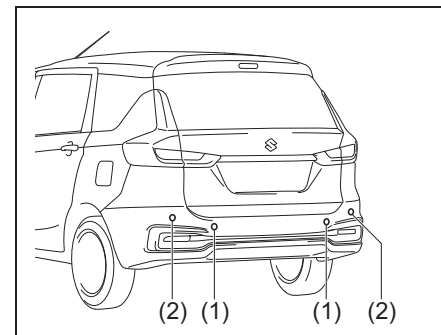

72R0036

- (1) Rear center sensors (2 places)  
(2) Rear corner sensors (2 places)

#### NOTICE

- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorised workshop.


**OPERATING YOUR VEHICLE**

**Working sensors**

The sensors that work depends on the position of the gearshift lever as follows:

Gearshift lever position		R	N, 1st - 5th
Rear sensors	Center	On	Off
	Corner	On	Off

**Approximate areas where obstacles can be detected**

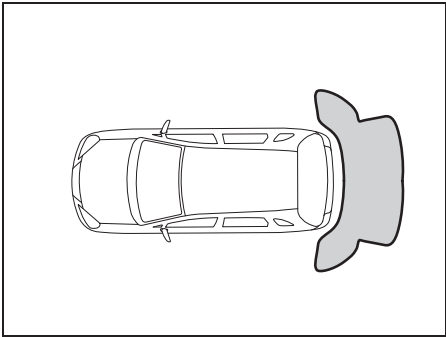

60MH126

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect an obstacle up to about 1.5 m (5 ft) from the rear of vehicle.

## OPERATING YOUR VEHICLE

### WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
  - Sensors are covered with mud, ice or other materials. (Such materials must be removed for normal operation.)
  - Sensors are wet from water splashes or heavy rain.
  - Sensors are covered by a hand, sticker, accessory, etc.
  - There is an accessory or other object attached within the sensor's sensing area.
  - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
  - The height of the bumper is changed due to alteration to the suspension or other causes.
  - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
  - The vehicle is on a rough surface, slope, gravel road or grass field.
  - The vehicle is at a steep angle.

(Continued)

### WARNING

(Continued)

- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass. (Ultrasonic waves are not reflected back from the obstacle.)
- Sensors may not be able to correctly detect the following types of obstacles:
  - Objects made of a thin material like wire netting and ropes
  - Square-shaped curbstones or other objects with sharp edges
  - Tall objects with a large upper part like a road sign
  - Low-profile objects such as curbstones
  - Sound-absorbing objects such as cotton and snow

### NOTE:


- Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.
- The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.



## OPERATING YOUR VEHICLE

### Obstacle Indication by Parking Sensor

Information display symbol  
(if equipped)

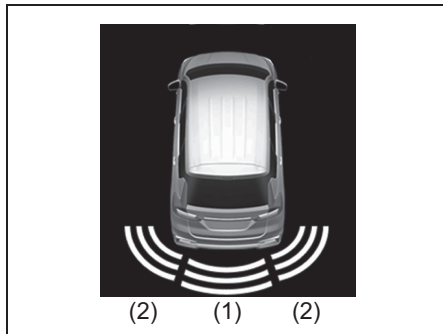

72R0037

- (1) Obstacle detected by rear center sensors
- (2) Obstacle detected by rear corner sensors

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound and a symbol representing the obstacle appears on the information display in the instrument cluster (if equipped).

- A different symbol is displayed depending on the direction and distance of the obstacle. (if equipped)
- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.

- Warnings when obstacles are detected by corner sensors

Distance (approx.)	Buzzer	Symbol (if equipped)
45 – 60 cm	Short beeps at short intervals	Three lines
35 – 45 cm	Short beeps at very short intervals	Two lines
Less than 35 cm	Continuous beep	One line

- Warnings when obstacles are detected by center sensors

Distance (approx.)	Buzzer	Symbol (if equipped)
60 – 150 cm	Short beeps at long intervals	Three lines
45 – 60 cm	Short beeps at short intervals	
35 – 45 cm	Short beeps at very short intervals	Two lines
Less than 35 cm	Continuous beep	One line

#### NOTE:

- Symbols are displayed with a short delay after the detection of obstacles.
- If the system detects multiple obstacles simultaneously, the display shows all of their positions using the corresponding symbols. However, the buzzers will sound only for the nearest obstacles.

## OPERATING YOUR VEHICLE

### Set sensors

You can select either the normal or trailer mode of the parking sensor via the information display. Refer to "Information display" in "BEFORE DRIVING" section.

### Normal mode

All sensors operate. Use this mode under normal conditions.

### Trailer mode

The rear corner and rear center sensors are inhibited from operating. Use this mode when towing a trailer.

### NOTICE

**Check that the normal mode is selected with the parking sensor when steering the vehicle into a garage. If the parking sensor is left in the trailer mode, the rear corner and rear center sensors are not functioning.**

## Warning and Indicator Messages


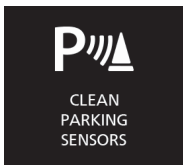
### Vehicle without the information display symbol

If there is a problem or warning regarding the parking sensor system, a buzzer informs it. Follow its instruction.

- The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.


### Vehicle with the information display symbol

If there is a problem or warning regarding the parking sensor system, a message is displayed on the information display in the instrument cluster, and a symbol blinks and the buzzer sounds. If a message is displayed, follow its instruction.

Message	Symbol	Buzzer	Probable cause and remedy
 68PH02303	Two blinking lines in a sensor location.	Series of double beeps	There may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorised workshop.
 68PH02304	One blinking line in a sensor location.	Series of single beeps	The indicated sensor is contaminated. Wipe it clean with a soft cloth.

## OPERATING YOUR VEHICLE

### Braking

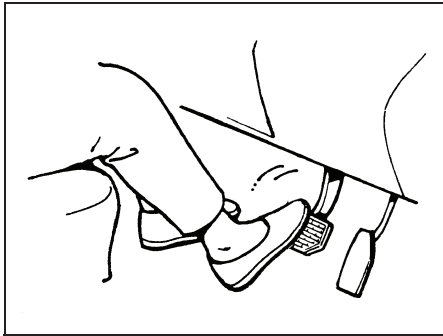

60G165S

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

#### WARNING

**If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.**

### Power-Assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

#### WARNING

**Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.**

### Brake assist system

When you step on the brake pedal, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

#### NOTE:

*If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.*

## OPERATING YOUR VEHICLE

### Anti-Lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal moves a little while the ABS is operating.

#### NOTE:

- The ABS will not work if vehicle speed is under about 9 km/h.
- If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

#### ⚠ WARNING

- On some types of loose surfaces (such as gravel, snow-covered roads, etc.), the stopping distance required for a vehicle with ABS may be slightly greater than the one required for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tyres are able to plow the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.
- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.
- In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive too fast.



(1)



(2)

54MN069

- (1) ABS warning light  
(2) Brake system warning light

**⚠ WARNING**

- If the ABS warning light (1) on the instrument panel comes on and stays on while driving, there may be a problem with the ABS system. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the Brake system warning light (2) on the instrument panel simultaneously stays on or comes on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask a Maruti Suzuki authorised workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

**How the ABS Works**

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself. This is absolutely normal and indicate that ABS is functioning properly.

**⚠ WARNING**

The ABS may not work properly if tyres or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tyres or wheels, use only the size and type specified in this owner's manual.

**Electronic stability program (ESP®) (if equipped)**

ESP® is a registered trademark of Daimler AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

**⚠ WARNING**

The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents. The capabilities of an ESP®-equipped vehicle must never be used as a substitute for careful driving.

## OPERATING YOUR VEHICLE

The ESP® totally manages following four systems, (stability control, traction control, ABS and Brake assist) to help enhance vehicle stability in response to various driving conditions;

### Stability control system

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

### Traction control system

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

#### NOTE:

*You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.*

### Anti-Lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard. The ABS works automatically, so you do not have to use any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that wheels are locking up. You may feel the brake pedal pulsate while the ABS is operating. (For more information on ABS, see "Braking" in this section.)

#### NOTE:

- The ABS will not work if vehicle speed is under about 9 km/h.

*If the ABS system is activated, you may hear a clunking noise or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly*

### Brake assist system

When you step on the brake pedal, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

#### NOTE:

*If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.*

### WARNING

- The ESP® may not work properly if tyres or wheels other than those specified in the owner's manual are used. When replacing tyres or wheels, use only the size and type specified in this owner's manual.
- The ESP® may not work properly if tyres are not inflated to the recommended tyre pressure.
- The ESP® may not work properly if tyres are fitted with snow chains.
- The ESP® may not work properly if the tyres are excessively worn. Replace tyres when the tread wear indicators in the grooves appear on the tread surface.
- The ESP® is not a substitute for winter tyres or snow chains on a snow-covered road.

## OPERATING YOUR VEHICLE

### WARNING

- The ESP® may not work properly if engine related parts such as the muffler are not equivalent to standard equipment or are extremely deteriorated.
- Do not modify the vehicle's suspension since the ESP® may not work properly.

#### NOTE:

- If the ESP® system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

The ESP® indicator lights are described below:

### ESP® warning light



52KM133

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system

If this light blinks, drive carefully.

When the ignition switch is turned "ON" or pushed to "ON" mode, this light comes on briefly so you can check that the light is working.

### NOTICE

**If the ESP® warning light comes on and stays on while driving, there may be a malfunction of the ESP® systems (other than ABS). You should have the systems inspected by a Maruti Suzuki authorised workshop.**

#### NOTE:

When the ESP® warning light comes on and stays on while driving, indicating a malfunction of the ESP® systems (other than ABS), the brake system will function as an ordinary ABS with no additional ESP® functions.

### ESP® OFF indicator light




73R0196

You should turn the ESP® on during your ordinary driving, so that you have the benefits of all of the ESP® systems.

It may be required to turn the ESP® systems (other than ABS) off if your vehicle is stuck in sand, mud, or snow, where wheel spin is necessary.

## OPERATING YOUR VEHICLE

### ESP® OFF switch

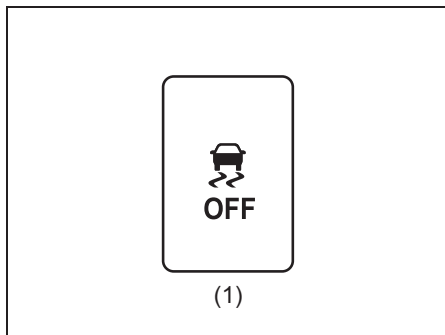

(1) ESP® OFF switch

When the ESP® OFF switch located at the instrument panel is pushed and held to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light in the instrument cluster comes on.

When you have turned the ESP® systems (other than ABS) off, turn them back on before resuming ordinary driving.

When you push the ESP® OFF switch again, the ESP® OFF indicator light will go out and all of the ESP® systems will be activated.

### ABS warning light / brake system warning light

See "Braking" in this section.

### Hill hold control system (if equipped)

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps to prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

### ⚠ WARNING

- Do not rely excessively on the hill hold control system. The hill hold control system may not prevent the vehicle from rolling downward on a hill under all load or road conditions. Always be prepared to depress the brake pedal to prevent the vehicle from rolling downward. Failure to pay attention and depress the brake pedal to hold the vehicle on a hill when necessary, may result in loss of control or an accident.
- The hill hold control system is not designed to stop the vehicle on a hill.
- After you release your foot from the brake pedal, accelerate the vehicle to move up immediately. If you release your foot from the brake pedal over 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of slope. And, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage.



## OPERATING YOUR VEHICLE

---

The hill hold control system activates for a maximum of about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.

- 1) The gearshift lever is in a forward gear or reverse gear.
- 2) The parking brake is released.
- 3) The vehicle is on an upward incline.

On models equipped with the ENG ASTOP system, the hill hold control system is activated when the engine is restarted after being stopped automatically, even if the previous conditions are not met.

**NOTE:**

*When the hill hold control system is activated, the following conditions may be found, but this is not a malfunction.*

- *You may hear a sound from the engine room.*
- *As brake pedal becomes heavy, it may be difficult for you to depress it.*

**OPERATING YOUR VEHICLE**

---

**MEMO**

-----

-----

-----

-----

-----

-----

-----

-----


-----

-----

-----

-----

**3-33**

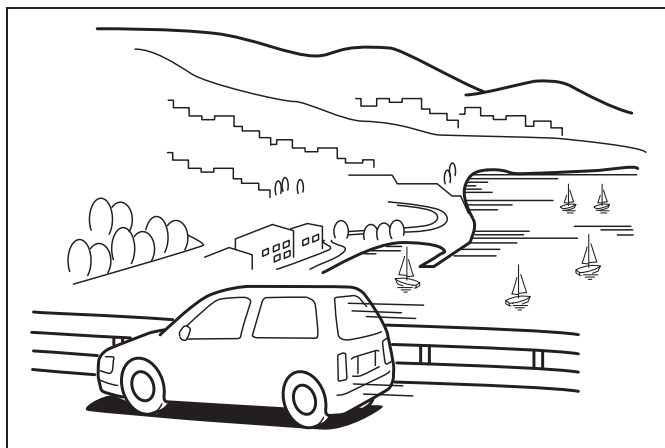


60G409

## DRIVING TIPS

Running-in .....	4-1
Catalytic Converter .....	4-1
Improving Fuel Economy .....	4-2
Highway Driving .....	4-3
Driving on Hills .....	4-3
Driving on Slippery Roads .....	4-4
Off-road Driving .....	4-6
When Encountering a Flooded Area .....	4-6
Do's and Dont's for safe driving .....	4-7
Margin for safety .....	4-9

## DRIVING TIPS

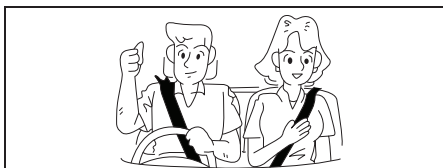

55RM04002

### WARNING

- **Fasten Your Seat Belts at All Times.** Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to “Seat Belts and Child Restraint Systems” section for instructions on proper use of the seat belts.
- **Never drive while under the influence of alcohol or other drugs.** Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated, or under stress.


## Running-in

### NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km (200 miles) of driving.
- Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.

## Catalytic Converter

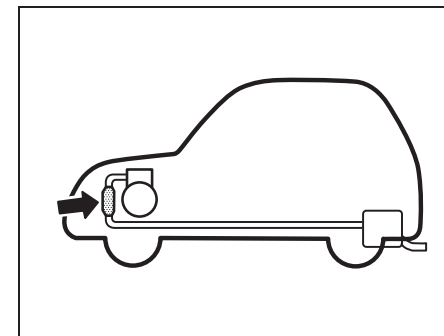

80G106


The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

### NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfiring or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.
- Avoid driving your vehicle at excessively high engine speed in or around the red zone of the tachometer.

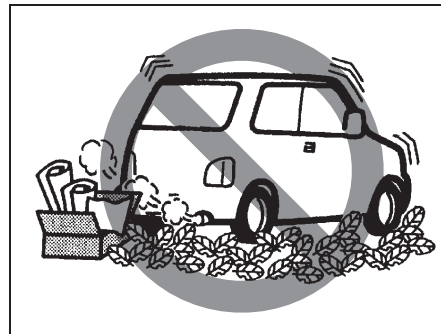

54G584S

### ⚠ WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

## Improving Fuel Economy

### NOTE:

Fuel economy (mileage) of the vehicle may vary due to several factors i.e., driving habits - gear change pattern, usage of A.C, Air pressure in the tyres, wind speed, traffic conditions, fuel quality- non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

### Avoid excessive idling

If you park your vehicle for more than one minute, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

### Avoid "fast" starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.

### Avoid unnecessary stops


Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

### Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

## DRIVING TIPS

### Keep the air cleaner clean

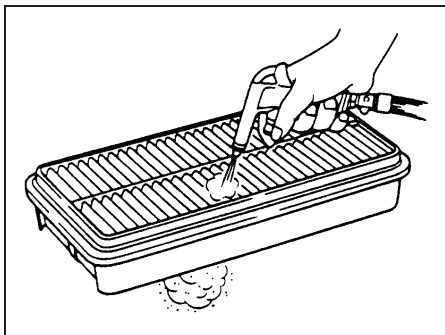

60A183S

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

### Keep weight to a minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

### Keep tyre pressures correct


Under-inflation of the tyres can waste fuel due to increased rolling resistance of the tyres. Keep your tyres inflated to the correct pressure shown in the label on driver's door lock pillar.

### Highway Driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

### Driving on Hills

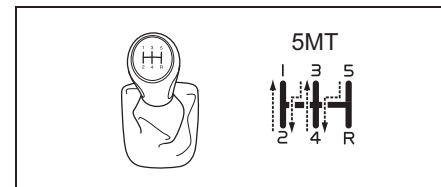

72RH4014

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

## DRIVING TIPS

### While moving uphill/ gradient from a standstill condition

- Apply the parking brake firmly so that the vehicle does not roll backwards.
- Depress the clutch pedal and shift the gearshift lever to 1st select position.
- Do not slip the clutch.
- When ready to start, press accelerator pedal and slowly release the clutch pedal simultaneously. When the vehicle starts to move, gradually release the parking brake.


#### **WARNING**

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

#### **NOTICE**

When descending a downhill, Never turn the ignition key to “LOCK” position. Emission control system damage may result.

### Driving on Slippery Roads

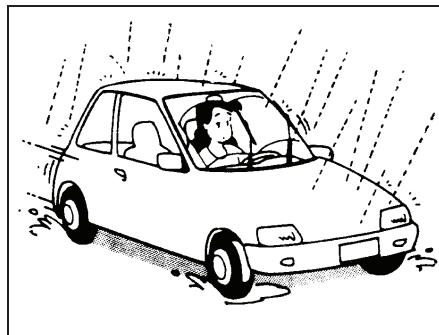

60G089S

On wet roads, you should drive at a lower speed than you do on dry roads due to possible slippage of tyres during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

### Snow Chains

Snow chains should only be used if they are needed to increase traction or are required by law. Make sure that the chains you use are the correct size for your vehicle's tyres. Also make sure that there is enough clearance between the fenders and the chains as installed on the tyres.

Install the chains on the front tyres tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

#### **NOTICE**

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

## DRIVING TIPS

### Stuck Vehicle

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

- 1) Shift the transmission back and forth between first gear and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting.  
Do not race the engine. Excessive wheel spin will cause the tyres to dig deeper, making it more difficult to free the vehicle.

#### NOTE:

*If your vehicle is equipped with the ESP®, you may have to turn the ESP® system off in order to allow spinning the wheels.*


- 2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult a Maruti Suzuki authorised workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by other vehicle with a towing cable or chain secured to the towing eye either on the front of the vehicle or on the rear of the vehicle. Refer to "Frame Hooks" in "OTHER CONTROLS AND EQUIPMENT" section.

#### ⚠ WARNING

**Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.**

#### NOTICE

**Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transmission damage.**

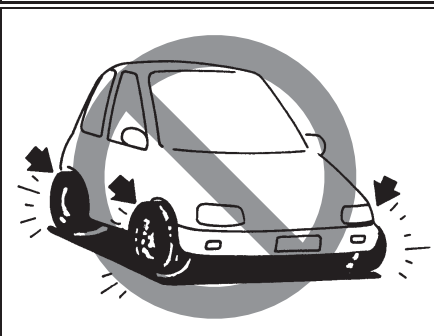

54G638S

#### ⚠ WARNING

**In addition to following the driving tips in this section, it is important to observe the following precautions.**

- Make sure your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tyres other than those specified by MARUTI SUZUKI. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.
- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps, causing vehicle damage or tyre failure.

(Continued)



**⚠ WARNING**

(Continued)

- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

**When Encountering a Flooded Area**



80J042

**NOTICE**

Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine and transmission damages, etc.  
If the vehicle get stuck in deep water do not start the engine.

**Off-road Driving**

**Do not drive in the field covered with grown grass**

If you drive in the field covered with grass, it may cause accident or vehicle damage by getting caught in grown grass.

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe and non flooded place while checking the brake effectiveness. Then, ask a Maruti Suzuki authorised workshop to check the following inspection items.

- Function of brake
- Function of electrical components
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.

## DRIVING TIPS


### Do's and Dont's for safe driving

Exercise care in handling your vehicle. Be conscious of not only your own safety but also the safety of others on the road, and thus enjoy the best and most comfortable driving experience.

Following are basic rules for safe driving. Read them carefully for good understanding of the content so that you can enjoy safe and pleasant driving in your vehicle.

#### Starting

- 1) Adjust the driver's seat for the proper driving posture.
- 2) Adjust the rear view mirror so as to obtain the best possible rear view.

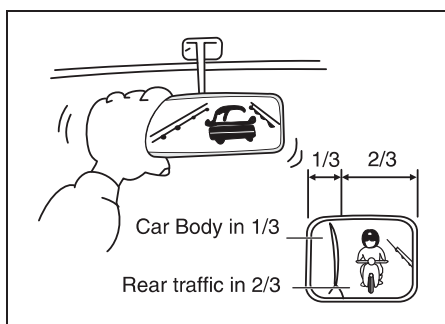


72RM04001

- 3) Before moving, look around your vehicle to confirm safety.
- 4) Don't accelerate suddenly, since it is dangerous and wastes fuel.

#### General Driving


- 1) Be sure to stop before a stop light or stop sign. When moving into an intersection without any traffic lights or signs, drive slowly to confirm safety.
- 2) Always follow other vehicles at a safe distance in order to prevent a rear-end collision, in case the vehicle ahead makes a sudden stop.

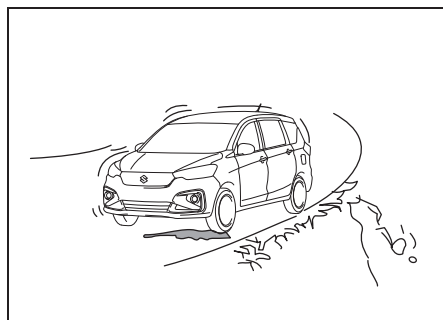

72RM04002

- 3) Turn on the turn signal at least 30 meters before making a turn or changing the lane so as not to be hit.
- 4) Before entering a corner, decelerate to a safe speed. Don't apply brakes during cornering, or skidding may occur.


- 5) When overtaking other vehicles, watch out for oncoming vehicles and carefully ensure safety.
- 6) Don't attempt zigzag driving as it will hinder your control over the vehicle and may cause an accident.
- 7) Avoid reckless high speed driving and try to drive at a safe speed suitable for the road conditions while maintaining a constant speed.
- 8) The higher the speed, the narrower the driver's visual range becomes. In such a state, it is difficult to anticipate any hazard and the driver feels fatigued.

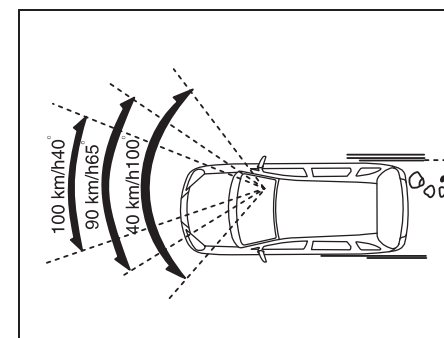

72RM04003


- 9) Do not attempt sharp handling during high speed driving. You may lose your control over your vehicle.
- 10) When overtaking or changing lanes while driving at a high speed, keep ample vehicle-to-vehicle distance.

### Braking

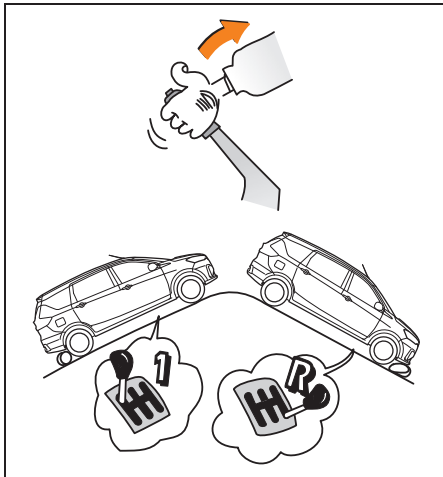

72RM04004

- 1) Use the parking brake when parking your vehicle and shift the gear shift lever into the first gear or reverse gear position for the sake of safety.
- 2) Don't use hand-braking unless unavoidable. It causes the vehicle to skid and a collision may occur. It is especially dangerous when the tires are worn out as they skid more.

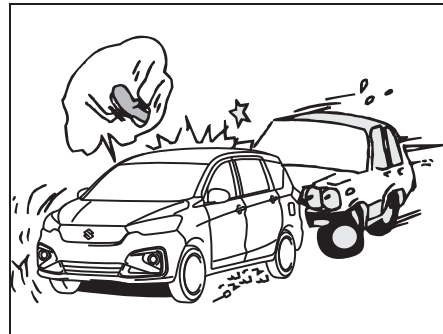

72RM04005


Use foot brake in three stages

1. Warn the vehicle behind you.
  2. Gradually apply the brake.
  3. Bring the vehicle to a halt.
- 3) When driving downhill, try not to apply the brake but use the engine brake effectively. Overuse of the foot-brake may result in reduction of brake effectiveness.

### Long Distance Driving

- 1) Be sure to perform safety checks before starting a trip.
- 2) Take rest at regular intervals to prevent accidents which may occur due to feeling sleepy or tired.

### Night Time Driving

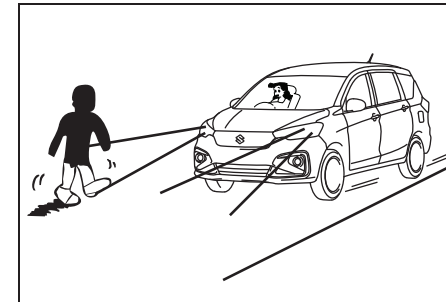


72RM04006

- 1) Drive at lower speeds during the night than in the daytime, as the visual range is restricted at night.
- 2) Avoid overtaking other vehicles at night. Darkness bothers your sense of speed and hinders your judgment of vehicle-to-vehicle distance.

## DRIVING TIPS

---

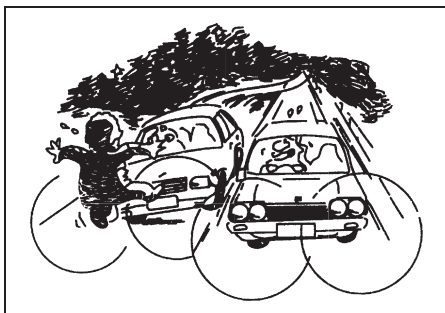

72F-08-021

- 3) Don't use headlights on high beam unless its use is inevitable. It may cause visual impairment to the driver of the oncoming vehicle or the vehicle ahead of you, which may cause an accident.
- 4) Always keep the window glasses clean. Don't operate the windshield wiper when the windshield glass is dry else the wiper blade and glass may get damaged.

### Margin for safety

It is important to allow yourself a margin for safety during driving so that you can cope with erroneous or unexpected driving of other drivers. For that, observe the following.


- Drive at a safe speed.
- Maintain a sufficient distance between your vehicle and the vehicle ahead.
- Don't force yourself to overtake other vehicles.
- Don't accelerate suddenly, steer sharply or stop suddenly.
- Keep ample gaps between driving schedules.
- Observe traffic rules and regulations.

### Conclusion

A perfect driver does not exist. The endeavour of every motorist should be to strive for perfection. Safety consciousness not only ensures your safety and the safety of other road users, it also helps reduce the wear and tear on your vehicle, lengthens its life, gives better fuel efficiency and ensures a comfortable driving experience.

**Follow the do's and don'ts listed, and driving will never be the same again.**

OTHER CONTROLS AND EQUIPMENT

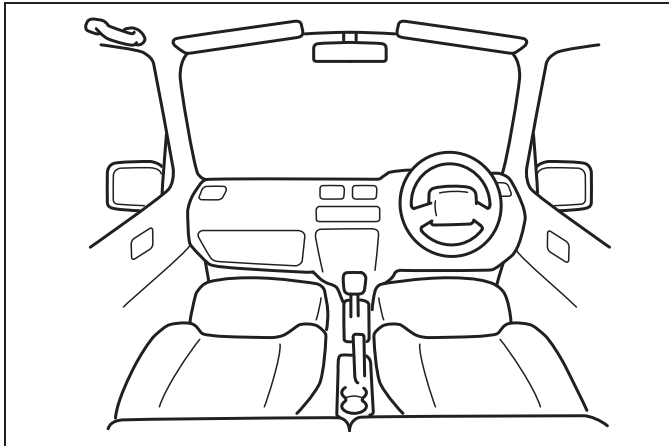

60G407

Heating and Air Conditioning System ..... 5-1

Manual Heating and Air Conditioning System ..... 5-3

Radio Antenna ..... 5-8

Installation of Radio Frequency Transmitters ..... 5-9

Audio System ..... 5-9

Fuel Filler Cap ..... 5-44

Engine Hood ..... 5-45

Sun Visor ..... 5-47

Interior Light ..... 5-48

Accessory Socket ..... 5-49

Assist Grips ..... 5-50

Glove Box ..... 5-51

AUX/USB Socket ..... 5-52

Cup Holder and Storage Area ..... 5-52

Footrest ..... 5-55

Front Seat Back Pocket (if equipped) ..... 5-55


Luggage Box (if equipped) ..... 5-55

Frame Hooks ..... 5-56

## OTHER CONTROLS AND EQUIPMENT

### Heating and Air Conditioning System


#### Air Outlet

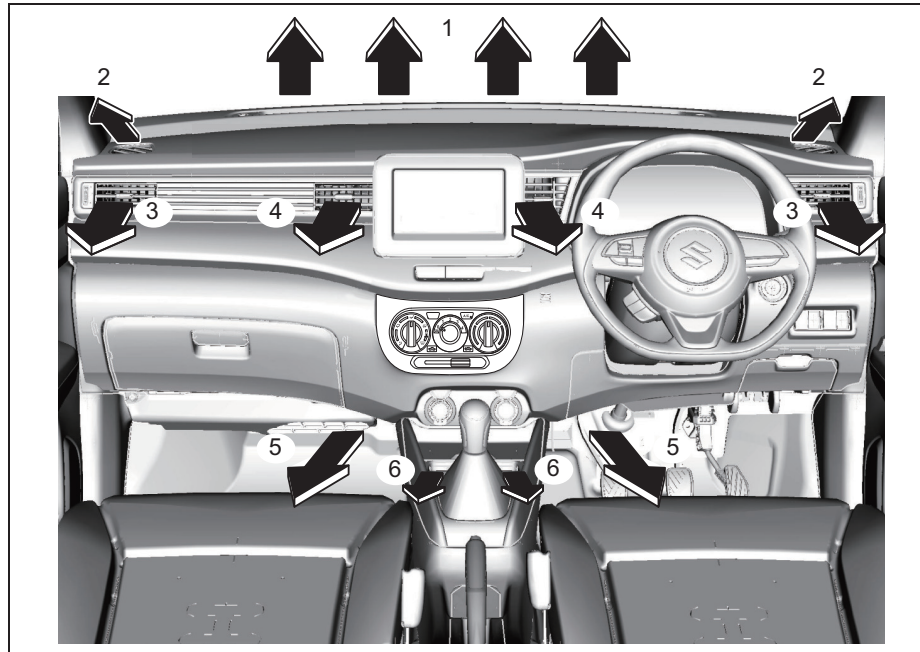

72RM05007

1. Windshield defroster outlet
2. Side defroster outlet
3. Side outlet
4. Center outlet
5. Floor outlet
6. Cup holder outlet

#### Side outlet

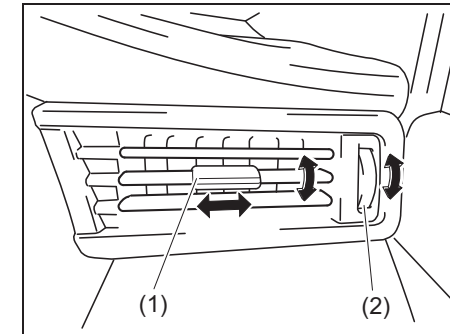

73R0076


When open, air comes out regardless of the air flow selector position.

Move the knob (1) vertically or horizontally, to adjust the direction of air flow as desired.

The side outlet opens when you turn the dial (2) upward and closes when you turn it downward.

## OTHER CONTROLS AND EQUIPMENT

Center outlet

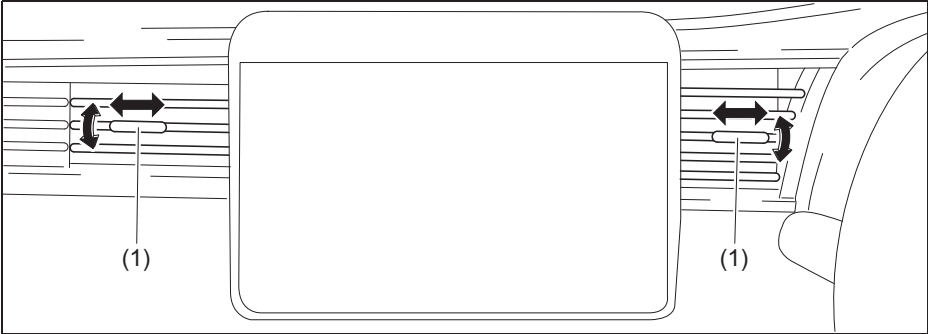


73R0075

Move the knob (1) vertically or horizontally to adjust the direction of air flow as desired.

### CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Overhead rear air conditioning system

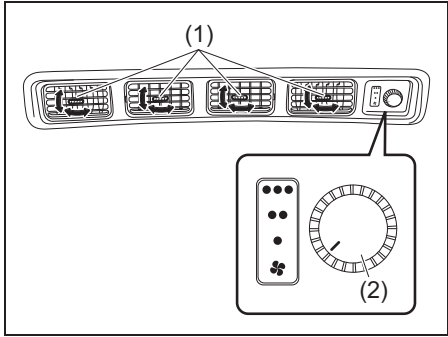

73R0077

To turn on the overhead rear air conditioning system, set the blower speed selector of the manual heating and air conditioning system to a position other than off and push in "A/C" switch. Refer to "Air conditioning switch" in this section. And set the rear blower speed selector (2) to a position other than off.


Move the knob (1) vertically or horizontally to adjust the direction of air flow as desired.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature. Less operation of the compressor results in better fuel economy.

## OTHER CONTROLS AND EQUIPMENT

### Manual Heating and Air Conditioning System

#### Description of Controls

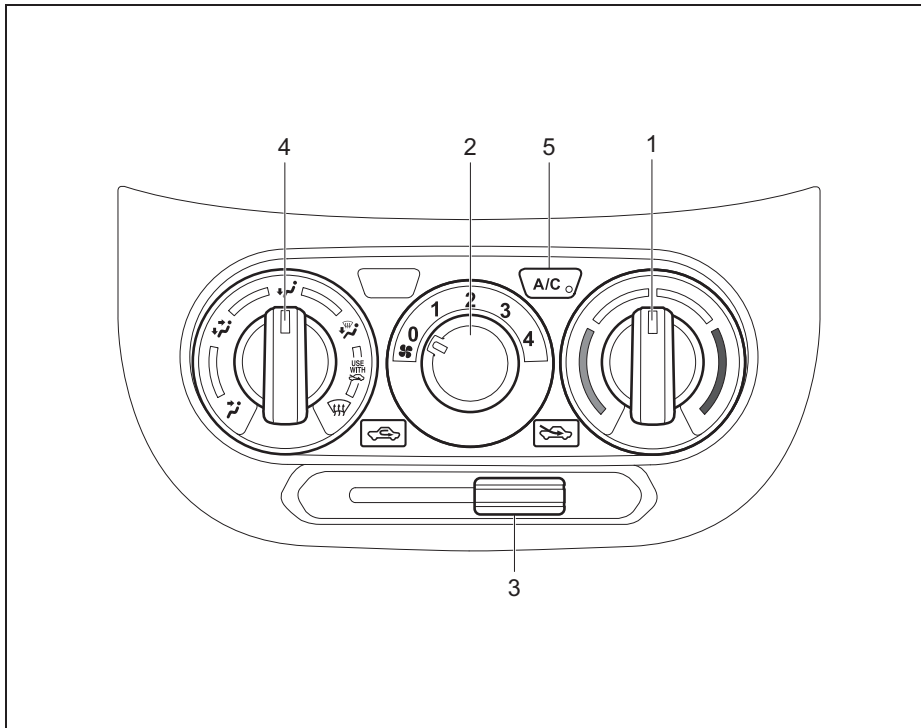

1. Temperature selector
2. Blower speed selector
3. Air intake selector
4. Air flow selector
5. Air conditioning switch

72R0015



## OTHER CONTROLS AND EQUIPMENT


### Temperature selector (1)

This is used to adjust the temperature.

### Blower speed selector (2)

This is used to turn on the blower and to select blower speed.

### Air intake selector (3)

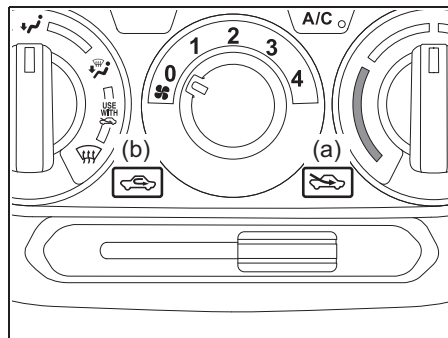

72R0016

This selector is used to select the following modes.

### FRESH AIR (a)


When this mode is selected by moving the lever to right, outside air comes in.

### RECIRCULATED AIR (b)

When this mode is selected by moving the lever to left, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down / warm up the interior or to reduce unwanted odor from entering the vehicle.

#### NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.

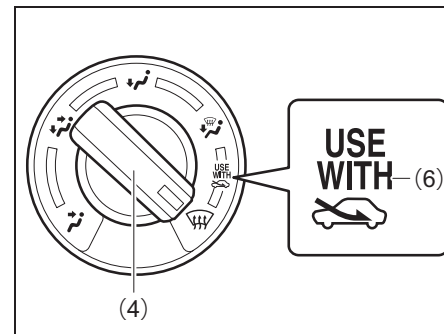


52RS50181

#### NOTE:

The mark of "USE WITH" (6)

To clear fog on the windshield and/or the side windows quickly, set the air flow selector (4) to "HEAT & DEFROST" or "DEFROST" and air intake selector (3) to "FRESH AIR". These positioning will clear the fogged windshield and/or the side windows faster than the "RECIRCULATED AIR".

### Air flow selector (4)

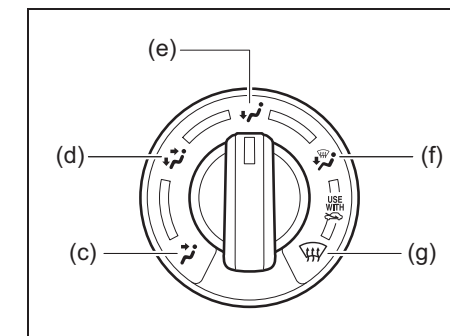


52RM50250

This is used to select one of the following functions.

## OTHER CONTROLS AND EQUIPMENT


### VENTILATION (c)

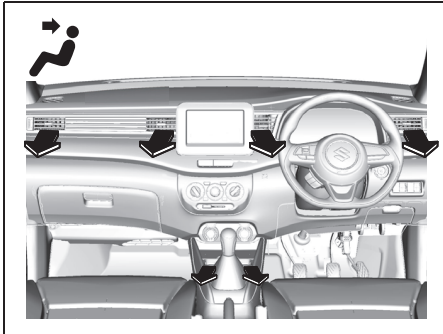

72R0144

Temperature-controlled air comes out of the center, side and cup holder outlets.


### BI-LEVEL (d)

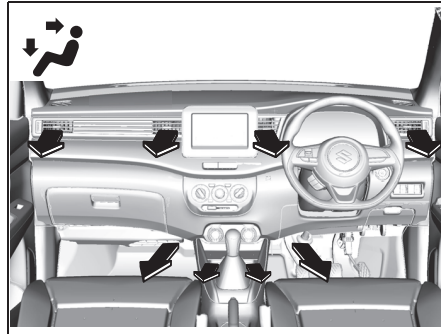

72R0129

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center, side and cup holder outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center, side and cup holder outlets will be the same temperature.

### HEAT (e)

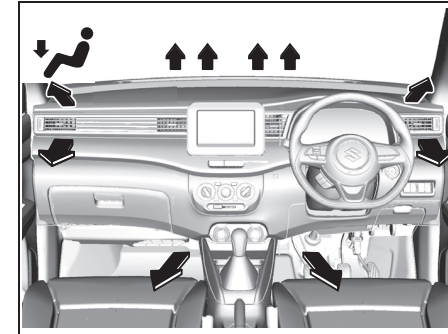


72R0017

Temperature-controlled air comes out of the floor, side and cup holder outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

## OTHER CONTROLS AND EQUIPMENT


### HEAT & DEFROST (f)

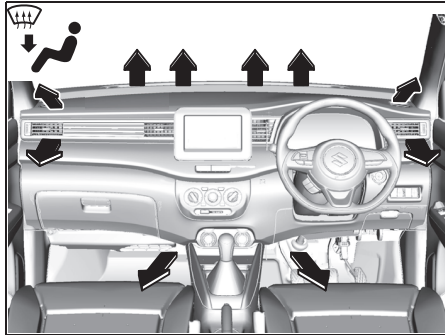

72R0018

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

### DEFROST (g)

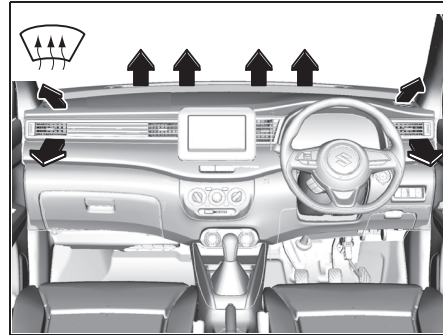

72R0019

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

### Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is working. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

## OTHER CONTROLS AND EQUIPMENT

### System Operating Instructions

#### Natural ventilation

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

#### Forced ventilation

The base settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

#### Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

#### Quick heating (using recirculated air)

The base settings are the same as for normal heating except you select RECIRCULATED AIR. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

#### Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

#### Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.

#### Quick cooling (using recirculated air)

The base settings are the same as for normal cooling except you select RECIRCULATED AIR and the highest blower speed.

#### NOTE:

- If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.


- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.

#### Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

#### NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

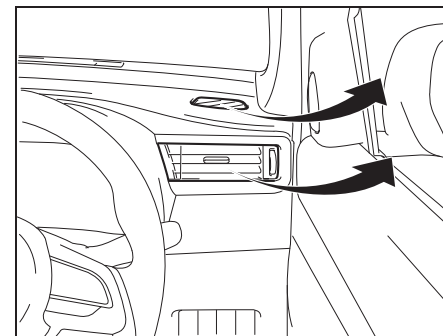

72R0012

## OTHER CONTROLS AND EQUIPMENT

### NOTE:

If you need maximum defrosting:

- select DEFROST and FRESH AIR,
- set the blower speed selector to high,
- adjust the temperature selector to the hot end,
- turn on "A/C" switch, and
- adjust the side outlets so the air blows on the side windows.

### Models with ENG A-STOP System (if equipped)

- If the air conditioning performance can no longer perform at a sufficient level due to automatically stopping the engine, press the "ENG A-STOP OFF" switch to deactivate the ENG A-STOP system. (The engine will automatically restart and the air conditioning performance will be restored.)
- If the windshield and/or the driver's side/passenger side door windows are fogged during automatically stopping the engine, stop the ENG A-STOP system and restart the engine. Then, turn the air flow selector (4) to change the air flow to the "Heat & defrost" or "Defrost" position to defog the windows.

### Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section.


### NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called "R-134a". R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

### NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

### Radio Antenna

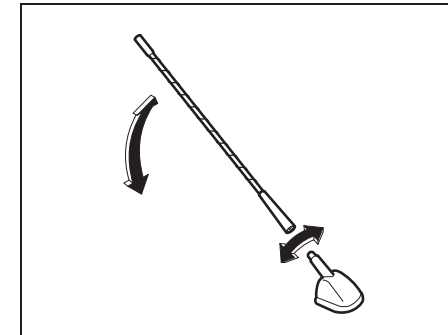

68KH052

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

### NOTE:

Adjust the antenna angle to maximum for optimum radio reception.

### NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.

## OTHER CONTROLS AND EQUIPMENT

### Installation of Radio Frequency Transmitters

We recommend that you always ask a Maruti Suzuki authorised workshop about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

#### NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system or any other electrical systems resulting in vehicle performance problems. Consult a Maruti Suzuki authorised workshop for advice.

### Audio System Safety Information

#### ⚠ WARNING

**If you pay too much attention to operating the audio system or watching the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.**

- **Keep your eyes on the road and your mind on the drive. Avoid paying too much attention to operating the audio system or watching the audio system display.**
- **Familiarize yourself with the audio system controls and operation of the audio system before driving.**
- **Preset your favorite radio stations before driving so that you can quickly tune to them using the pre-sets.**
- **Set the sound volume to a level that will allow you to continue to be aware of surrounding road and traffic conditions while driving.**



The Bluetooth® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.


**Stop using this unit and a Bluetooth® ready device whenever requested.**

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

## OTHER CONTROLS AND EQUIPMENT

### Basic Operations

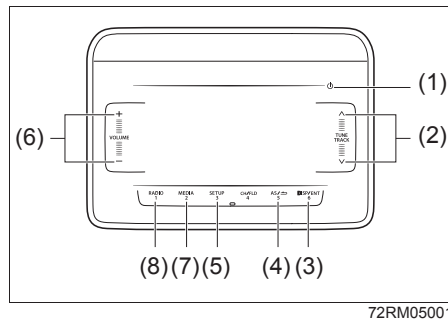

- (1) POWER button
- (2) "TUNE/TRACK" Up/Down button
- (3) "ENTER" button
- (4) BACK button
- (5) "SETUP" button
- (6) "VOLUME" button
- (7) "MEDIA" button
- (8) "RADIO" button

#### Turning power on/off

Touch the POWER button (1).  
The audio system starts in the function mode it was in when the power was turned off last.

- Touching the POWER button (1) for 1 second or longer can turn off the audio system.

#### Slide touch operation

Operate several functions with the slide touch operation. Touch the panel and slide up or down with your finger for increase/decrease or up/down operation.

#### NOTE:

*Pay caution to the following content regarding slide touch operation:*

- The touch button may not operate properly when the touch panel or your fingers are wet. Remove any liquid before operating.
- Depending on the operation method it may react without touching.
- It may not react properly when operated with gloves on.
- When metal objects are placed near the touch panel it may cause a malfunction.
- Do not attach protective film. Otherwise, the touch panel may not operate properly.



#### Functions available with the slide touch operation

Mode	Function		
Common	Volume up/down	O	—
	Item selection	—	O
Radio	TUNE up/down	—	O
USB	File up/down	—	O
	Folder up/down (folder operation mode)	—	O
iPod	TRACK up/down	—	O
	Category selection (iPod menu)	—	O
Bluetooth® audio	TRACK up/down	—	O
	Group up/down (Group operation mode)	—	O
Hands-free	Reception/ringtone/incoming call volume up/down	O	—
	Switching pages of the speed dial selection screen	—	O

## OTHER CONTROLS AND EQUIPMENT

### Adjusting the volume

Touch or slide the "VOLUME" button (6).

- To increase the volume, touch  or slide upwards.
- To decrease the volume, touch  or slide downwards.

#### NOTE:

*While driving, adjust the volume to an extent that sound and/or noise coming from outside can be heard.*

### Sound settings

- 1) Touch the SETUP button (5).

- Touch for 1 second or longer when using radio mode.

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select "Sound", and touch the "ENTER" button (3).

- The sound setting screen will be displayed.

- 3) Touch or slide the "TUNE/TRACK" Up/Down button (2), select the desired item, and touch the "ENTER" button (3).

- The sound settings will change as follows:

- EQ ↔ Bass ↔ Treble ↔ Balance ↔ Fader ↔ AVC

### Preset EQ

The preset EQ can set various types of sounds depending on the type of music.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "Sound" screen, select "EQ", and touch the "ENTER" button (3).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select the desired item, and touch the "ENTER" button (3).

- The preset EQ settings will change as follows:

Off (Flat) ↔ Jazz ↔ Rock ↔ Pop ↔

Classic ↔ Hip-hop



## OTHER CONTROLS AND EQUIPMENT

### Adjusting bass/treble/balance /fader

The preset EQ can set various types of sounds depending on the type of music.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "Sound" screen, select "Bass", "Treble", "Balance", or "Fader" and touch the "ENTER" button (3).
  - 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), adjust to the desired settings and touch the "ENTER" button (3).
- "Bass"/"Treble":
    - Can be adjusted in stages from -6 to 0 to +6.
    - Touch ▲ to emphasize the low or high sounds, and touch ▼ to quiet.
  - "Balance":
    - Can be adjusted in 9 stages left to right.
    - Touch ▲ to emphasize the right speaker, and touch ▼ to emphasize the left speaker.
  - "Fader":
    - Can be adjusted in 9 stages back to front.
    - Touch ▲ to emphasize the front speaker, and touch ▼ to emphasize the rear speaker.

### Adjusting the AVC (Auto volume control)

The Auto Volume Control (AVC) function automatically adjusts (increases/decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with three selectable levels (LEVEL OFF, 1, 2, 3). The range of volume adjustment increases together with the LEVEL number.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "Sound" screen, select "AVC", and touch the "ENTER" button (3).
  - 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select the desired level, and touch the "ENTER" button (3).
- The AVC will change as follows:  
Off ↔ Level 1 ↔ Level 2 ↔ Level 3

### Switching the mode

Press the "MEDIA" button (7) for 1 second or more in radio mode. You can switch the radio mode to media mode.

Touch the "RADIO" button (8) in media mode. You can switch the media mode to radio mode

### System settings

Change the "Beep", "Slide", and "SW Sensitivity" settings.

- 1) Touch the SETUP button (5).
- Touch for 1 second or longer when using radio mode.
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select "System", and touch the "ENTER" button (3).
- The system setting screen will be displayed.
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (2), select the desired item, and touch the "ENTER" button (3).
- The system settings will change as follows:  
Beep ↔ Slide ↔ SW Sensitivity

## OTHER CONTROLS AND EQUIPMENT

### BEEP on/off

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "System" screen, select "Beep", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select on or off, and touch the "ENTER" button (3).

### Slide touch operation settings

Turn the slide operation on/off.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "System" screen, select "Slide", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select on or off, and touch the "ENTER" button (3).

### Touch panel sensitivity settings


Change the touch panel sensitivity.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (2) from the "System" screen, select "SW Sensitivity", and touch the "ENTER" button (3).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (2), select Low or High, and touch the "ENTER" button (3).

#### NOTE:

*If the touch button sensitivity is too high, set to "Low".*

### Radio

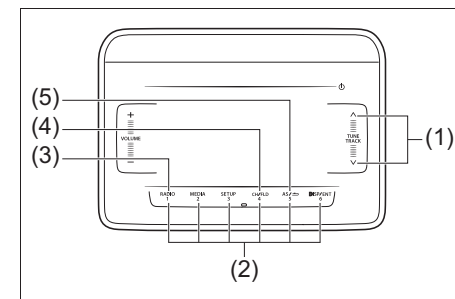


- (1) "TUNE/TRACK" Up/Down button
- (2) Preset button
- (3) "RADIO" button\*1
- (4) "CH" (channel) button
- (5) "AS" (auto store) button

\*1 Use this button to switch between manual preset and auto preset.

## OTHER CONTROLS AND EQUIPMENT


### Display

#### Manual preset

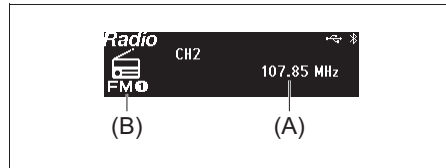

73R0139

#### Auto preset

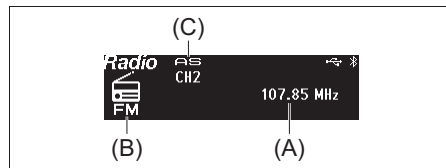

73R0140

(A) Frequency

(B) Band

(C) Auto Store mode display

#### NOTE:

##### Radio Reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

### Selecting the band

- 1) Touch the "RADIO" button (3) for 1 second or longer.
- Each time the button is touched, the mode will change as follows:
  - AM → FM1 → FM2 → AM (AS) → FM (AS)

### Seek tuning

- 1) Touch the "TUNE/TRACK" Up/Down button (1) for 1 second or longer.
- The audio system stops searching for a station at a frequency where a broadcast station is available.

### Manual tuning

- 1) Touch the "TUNE/TRACK" Up/Down button (1) to select the desired station.

### Storing the station

#### Manual store

- 1) Select the station and frequency.
- 2) Touch and hold the "CH" button (4) for at least 1 second.
- 3) Hold down a desired button ([1] to [6]) of the Preset buttons (2) to which you want to store the station for 2 seconds or longer.

#### NOTE:

6 stations can be stored for AM, and 6 stations for each of FM1 and FM2, thus 18 stations can be stored in total.

### Auto store

- 1) Touch the "AS" button (5) for 1 second or longer.
- Start searching from a station whose frequency is the lowest. When a broadcast station that can be received with a sufficient strength is discovered, it will be assigned to the AM (AS)/FM (AS) band's preset button (2). Once this process is completed the tuner will return to the first stored broadcast station.

#### NOTE:

- Auto store can be released by touching the "AS" button (5) while auto store is under way.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- 6 stations can be preset for FM, and 6 stations for AM in auto store mode.

## OTHER CONTROLS AND EQUIPMENT

### Select from the preset channels

#### Manual preset channel

- 1) Select the radio station and frequency.
- 2) Touch the “CH” button (4) for 1 second or longer.
- 3) Touch a desired button ([1] to [6]) of the Preset buttons (2).


#### NOTE:

*Touch and hold the “CH” button (4) for at least one second to select from the preset channel list.*

#### Auto preset channel

- 1) Touch the “RADIO” button (3) for 1 second or longer and select AM (AS) or FM (AS).
- 2) Touch the “CH” button (4) for 1 second or longer.
  - The preset channel list is displayed.
- 3) Touch a desired button ([1] to [6]) of the Preset buttons (2).


### USB

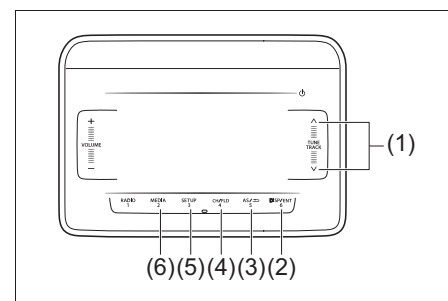

73R0141

- (1) “TUNE/TRACK” Up/Down button
- (2) “DISP/ENTER” button
- (3) BACK button
- (4) “FLD” (folder operation) button
- (5) SETUP (random/repeat) button
- (6) “MEDIA” button

### Display

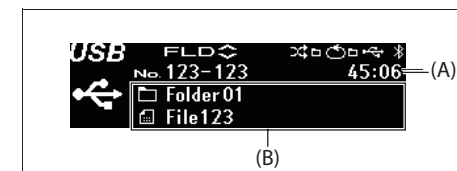

73R0142

- (A) Play time  
(B) Text information display

### ⚠ WARNING



**Do not connect any USB device other than a USB memory or a USB audio player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.**

## OTHER CONTROLS AND EQUIPMENT



### Selecting a USB device mode

- 1) Touch the "MEDIA" button (6).
- Each time the button is touched, the mode will change as follows:  
USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)...



### Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/Down button (1).
- : Hold down the Up button for 1 second or longer to fast forward the track.
  - : Hold down the Down button for 1 second or longer to fast rewind the track.
  - Releasing the button can stop the fast forwarding/rewinding.

### Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- : Touch the Up button to listen to the next track.
  - : When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

### Selecting a folder

- 1) Touch the "FLD" (folder operation) button (4).
  - 2) Touch the "TUNE/TRACK" Up/Down button (1).
- : Touch the Up button to move to the next folder.
  - : Touch the Down button to move to the previous folder.

### Repeat playback

- 1) Touch the SETUP (random/repeat) button (5).
  - 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Each time the "DISP/ENTER" button (2) is touched, the mode will change as follows:  
Off → One song repeat → Folder repeat ...

### Random playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Random", and touch the "DISP/ENTER" button (2). Each time the "DISP/ENTER" button (2) is touched, the mode will change as follows:  
Off → Folder random → All random ...

### Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows:  
MP3/AAC:  
Artist name/Track title → Album name/Track title → Folder name/File name...  
WMA:  
Artist name/Track title → Folder name/File name ...

#### NOTE:

- "NO TITLE" will be displayed when there is no text information in the USB device currently being played.
- "..." is displayed if all text data cannot be displayed. Touch and hold the "DISP/ENTER" button (2) for at least 1 second to automatically display the rest of the text data.

## OTHER CONTROLS AND EQUIPMENT

### Notes on USB device

#### Compatible USB devices

- USB Mass Storage Class  
For details as to whether your USB memory/USB Audio is compatible with USB Mass Storage Class, please contact the USB memory/USB Audio manufacturer.
- Audio file  
MP3 (.mp3)/WMA (.wma)/AAC (.m4a)/AAC (.aac)
- File System  
FAT 12/16/32, VFAT (supporting long file name)
- USB Standard Compatibility  
1.1/2.0 Full Speed
- If a USB hub or extension cable is connected to the audio system, it may not be recognized. In this case, directly connect the USB device to the audio system.
- Devices such as MP3 players/mobile phones/digital cameras may not be recognized as audio systems for playing music.

### USB device connection

- When connecting a USB device, make sure that the connector is pushed all the way into the port.
- Depending on the USB flash drive that you are using, (non-brand product, USB flash drive that has been externally damaged) it may disable connection or cause unstable operation.
- Do not leave the USB device for long periods of time in places inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand. We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA format.

### Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the order that the files were stored.
- The DRM (Digital Rights Management) file cannot be played.

### Compression formats

#### MP3

- Bit rate  
MPEG1 Audio Layer III: 32 up to 320 kbps  
MPEG2 Audio Layer III: 8 up to 160 kbps  
MPEG2.5 Audio Layer III: 8 up to 160 kbps  
VBR: up to 384 kbps (MAX.)
- Sampling frequency  
MPEG1 Audio Layer III: 32/44.1/48 kHz  
MPEG2 Audio Layer III: 16/22.05/24 kHz  
MPEG2.5 Audio Layer III: 8/11.025/12 kHz
- Channel  
Stereo/Joint stereo/Dual channel/Monaural
- ID3 tag  
ID3v1.x/ID3v2.x

#### WMA

- Windows Media Audio Ver.7/Ver.8/Ver.9 Standard compliant
- Bit rate: 32 up to 320 kbps
- VBR: up to 384 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- WMA tag: Ver.8.0
- Channel: 2 Channels

#### AAC

- Bit rate: 16 up to 320 kbps
- VBR: up to 320 kbps (MAX.)
- Sampling frequency: 32/44.1/48 kHz
- AAC tag: iTunes m4a metadata

## OTHER CONTROLS AND EQUIPMENT


### Maximum number of files/folders

- Maximum number of files: 2500
- Maximum number of files in a folder: 255
- Maximum number of folders: 255
  - Root folder and empty folder are included.
- Maximum depth of tree structure: 8

### NOTICE

Never use “.mp3”, “.wma” or “.m4a” as a file name extension if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.


### iPod

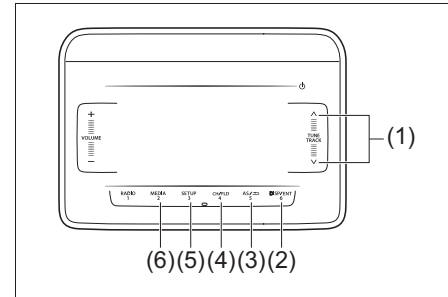

73R0141

- (1) “TUNE/TRACK” Up/Down button
- (2) “DISP/ENTER” button
- (3) BACK button
- (4) “FLD” (iPod menu) button
- (5) SETUP (shuffle/repeat) button
- (6) “MEDIA” button

### Display

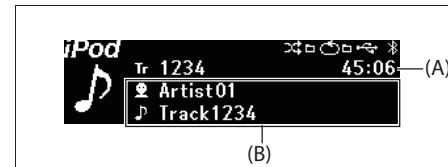

73R0143

- Play time
- Text information display

### Selecting an iPod mode

- 1) Touch the “MEDIA” button (6).
- Each time the button is touched, the mode will change as follows:  
USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

### Fast forwarding/Rewinding a track

- 1) Hold down the “TUNE/TRACK” Up/Down button (1).
- ▲ : Hold down the Up button for 1 second or longer to fast forward the track.
  - ▼ : Hold down the Down button for 1 second or longer to fast rewind the track.
  - Releasing the button can stop the fast forwarding/rewinding.

### Selecting a track

- 1) Touch the “TUNE/TRACK” Up/Down button (1).
- ▲ : Touch the Up button to listen to the next track.
  - ▼ : When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

## OTHER CONTROLS AND EQUIPMENT

### Select a category

- 1) Touch the “FLD” (iPod menu) button (4).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select the desired category, and touch the “DISP/ENTER” button (2).
- The Song selection mode for each category will be displayed as follows.
  - Playlists: Playlists → Songs
  - Artists: Artists → Albums → Songs
  - Songs: Songs
  - Genres: Genres → Artists → Albums → Songs
  - Radio: Station
  - Audiobooks: Audiobooks
  - Podcasts: Podcasts → Episodes
  - iTunes U: iTunes U → Episodes

#### NOTE:

*Categories is not displayed if the no files in the category.*

### Repeat playback

- 1) Touch the SETUP (shuffle/repeat) button (5).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Repeat”, and touch the “DISP/ENTER” button (2).
- Touch the “DISP/ENTER” button (2). Each time the button is touched, display will change as follows:  
The repeat mode will vary depending on your device.  
Off → 1 song repeat → All repeat ...

### Random playback

- 1) Touch the SETUP (shuffle/repeat) button (5).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Shuffle”, and touch the “DISP/ENTER” button (2).
- Touch the “DISP/ENTER” button (2). Each time the button is touched, display will change as follows:  
Off → Shuffle → Album shuffle ...

### Display change

- 1) Touch the “DISP/ENTER” button (2).
- Each time the button is touched, display will change as follows:  
Artist name/Track title → Album name/Track title → Playlist name/Track title ...

#### NOTE:

- “NO TITLE” is displayed if the file currently being played has no text data.
- “...” is displayed if all text data cannot be displayed. Touch and hold the “DISP/ENTER” button (2) for at least one second to automatically display the rest of the text data.
- “Playlist name/song name” is only displayed by the “FLD” (Menu) button (4) when music is selected from Playlists.

### Notes on iPod Made for iPod

- iPod nano:
  - iPod nano (7th generation)
- iPod touch:
  - iPod touch (6th generation)
- iPod touch (5th generation)
- iPhone:
  - iPhone 5
  - iPhone 5s
  - iPhone 5c
  - iPhone 6
  - iPhone 6 Plus
  - iPhone 6s
  - iPhone 6s Plus
  - iPhone SE
  - iPhone 7
  - iPhone 7 Plus

#### NOTE:

*Some functions may not be available depending on the model of iPod.*



## OTHER CONTROLS AND EQUIPMENT


### iPod



73R0217

- “Made for iPod” and “Made for iPhone” means that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this unit or its compliance with safety and regulatory standards.
- Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- Lightning is a trademark of Apple Inc.

### AUX

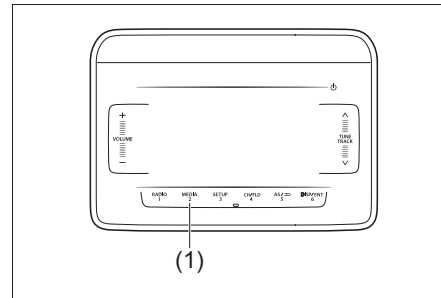

73R0145

(1) “MEDIA” button

### Display



73R0146

### NOTICE

- Before connection, mute the unit, and also keep the volume of the auxiliary audio source within a range that will not cause distortion.
- When the audio source is turned off, noise may be emitted. Be sure to turn off the unit or switch to another mode before turning off the audio source.

### AUX selection


- 1) Touch the “MEDIA” button (1).
- Each time the button is touched, the mode will change as follows:  
USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

### NOTE:

- Please consult your place of purchase for details about whether a given auxiliary audio source can be connected and the proper auxiliary cord to use.


## OTHER CONTROLS AND EQUIPMENT

### Setting of Bluetooth® devices

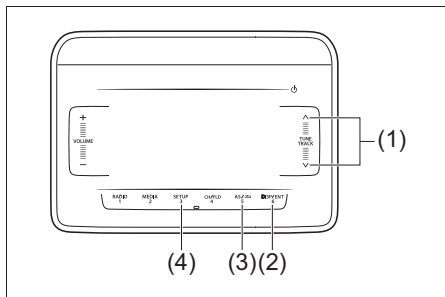

73R0147

### Steering switch (if equipped)

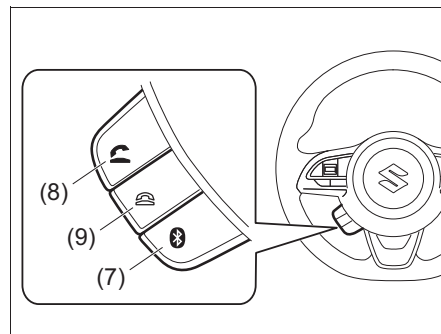

73R0152

- (1) "TUNE/TRACK" Up/Down button
- (2) "ENTER" button
- (3) BACK button
- (4) SETUP button
- (5) Bluetooth® button
- (6) Off-hook button

#### ⚠ CAUTION

**Do not register or set the Bluetooth® device while driving. Stop your vehicle in a safe area before registering the device.**

#### Registration of Bluetooth® devices

To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system. Up to 5 Bluetooth® devices can be registered.

#### NOTE:

- Certain functions cannot be used depending on the Bluetooth® device.
- Refer to the user manual included with your device regarding the operation method of Bluetooth® devices.
- Some Bluetooth® enabled phones may not be compatible fully and or partially with the audio unit.
- Bluetooth® / Telephone setup mode can be entered only when the vehicle is stationary.
- If the pairing cannot be established, the connection operation is canceled. For the Bluetooth® device pairing method, refer to the user manual included with your device or try pairing again.

- 1) The Bluetooth® setting screen will be displayed.
  - From the panel button:  
Touch the SETUP button (4).  
Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
  - From the steering switch  
Press the Bluetooth® button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Pairing", and touch the "ENTER" button (2).
  - The passkey will be displayed.

## OTHER CONTROLS AND EQUIPMENT

- 4) Operate and register the Bluetooth® device.

**Secure Simple Pairing (SSP) incompatible Bluetooth® device:**

Enter the passkey into the Bluetooth® device.

**Secure Simple Pairing (SSP) compatible Bluetooth® device:**

Select “Yes” to register the Bluetooth® device.

- It is possible to automatically register devices depending on the type of Bluetooth® device.

**NOTE:**

- *If the Bluetooth® device contains music player and mobile phone function, both functions will be registered simultaneously. When deleting a Bluetooth® device, both functions will be deleted simultaneously.*
- *If a mobile phone is not registered and the off-hook button (6) is pressed and the telephone mode is selected, it will automatically switch to “Pairing”.*
- *When pairing with a mobile phone is established, it is possible to automatically transfer the phonebook and call history. If you wish to conduct an automatic transfer press “YES” and if not, press “NO”.*

**Set from the list of mobile phones**

The list of paired mobile phones is displayed and the various settings can be changed.

- 1) The Bluetooth® setting screen will be displayed.

- From the panel button:

Touch the SETUP button (4).

Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (2).

- From the steering switch:

Press the Bluetooth® button (5).

- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Bluetooth”, and touch the “ENTER” button (2).

- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “List Phone”, and touch the “ENTER” button (2).

**Connect a registered mobile phone**

- 1) Touch or slide the “TUNE/TRACK” Up/Down button (1) from the “List Phone” screen, select the name of the desired mobile phone, and touch the “ENTER” button (2).

- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Select”, and touch the “ENTER” button (2).

**Disconnect a connected mobile phone**

- 1) Touch or slide the “TUNE/TRACK” Up/Down button (1) from the “List Phone” screen, select the name of the desired mobile phone, and touch the “ENTER” button (2).

- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Disconnect”, and touch the “ENTER” button (2).

- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “YES”, and touch the “ENTER” button (2).

**Delete a registered mobile phone**

- 1) Touch or slide the “TUNE/TRACK” Up/Down button (1) from the “List Phone” screen, select the name of the desired mobile phone, and touch the “ENTER” button (2).

- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Delete”, and touch the “ENTER” button (2).

- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “YES”, and touch the “ENTER” button (2).

**Set from the Bluetooth® audio list**

The list of paired Bluetooth® audio is displayed and the various settings can be changed.

- 1) The Bluetooth® setting screen will be displayed.

- From the panel button:

Touch the SETUP button (4).

Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (2).

- From the steering switch:

Press the Bluetooth® button (5).

- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Bluetooth”, and touch the “ENTER” button (2).

## OTHER CONTROLS AND EQUIPMENT

- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "List Audio", and touch the "ENTER" button (2).

### **Connect a registered Bluetooth® audio**

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Select", and touch the "ENTER" button (2).

### **Disconnect a registered Bluetooth® audio**

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Disconnect", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (2).

### **Delete a registered Bluetooth® audio**

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Delete", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (2).

#### **NOTE:**

- *In case audio device does not re-connect after following above steps, delete your audio device from registered list of audio by following steps 1) to 3) of "Delete a registered Bluetooth® audio" mentioned above. Register the audio device again by referring to "Registration of Bluetooth® devices" and follow steps 1) to 4).*
- *Some audio device may not re-connect automatically. For such cases, follow steps 1) to 2) of "Connect a registered Bluetooth® audio" mentioned in further pages of this section.*

### **Select a connection method**

It is possible to switch connection methods when the Bluetooth® audio is registered to the audio system and the audio system and Bluetooth® audio are not connected.

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "List Audio" screen, select the name of the desired Bluetooth® audio, and touch the "ENTER" button (2).
  - 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Connect Method", and touch the "ENTER" button (2).
  - 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the connection method, and touch the "ENTER" button (2).
- **From Vehicle:**  
Operate from the audio system to connect to the Bluetooth® device.
  - **From Audio:**  
Operate from the Bluetooth® device to connect to the audio system.

## OTHER CONTROLS AND EQUIPMENT

### Change of Passkey

- 1) The Bluetooth® setting screen will be displayed.
  - From the panel button:  
Touch the SETUP button (4).  
Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (2).
  - From the steering switch:  
Press the Bluetooth® button (5).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Bluetooth”, and touch the “ENTER” button (2).
- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Passkey”, and touch the “ENTER” button (2).
- 4) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “YES”, and touch the “ENTER” button (2).
- 5) Touch or slide the “TUNE/TRACK” Up/Down button (1), select a number between 0 and 9, and touch the “ENTER” button (2).  
Repeat this operation several times.
  - Enter the passkey one digit by one digit.
  - The passkey must be between 4 to 8 digits.
  - In order to cancel the number that you entered and return to the previous digit, touch the BACK button (3).
  - If you do not enter a number that is 4 or more digits and re-touch the “ENTER” button (2), the passkey will be registered.

### Automatic connection with the Bluetooth® device

If the “Bluetooth Power” is set to ON, turning the ignition switch to ACC will automatically connect the registered Bluetooth® device.

- With the automatic connection, the Bluetooth® device that was connected last will be prioritized.
- 1) The Bluetooth® setting screen will be displayed.
    - From the panel button:  
Touch the SETUP button (4).  
Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (2).
    - From the steering switch:  
Press the Bluetooth button (5).
  - 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Bluetooth”, and touch the “ENTER” button (2).
  - 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth Power”, and touch the “ENTER” button (2).
  - Touch or slide the “TUNE/TRACK” Up/Down button (1), select “On” or “Off”, and touch the “ENTER” button (2).

#### NOTE:

- When “Bluetooth Power” is set to “OFF”, the audio system disconnects from the registered Bluetooth® device.
- If “Bluetooth Power” is set to “Off”, the audio system will not automatically

reconnect the next time the ignition is switched on.

### The device status will be displayed

- 1) The Bluetooth® setting screen will be displayed.
  - From the panel button:  
Touch the SETUP button (4).  
Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (2).
  - From the steering switch:  
Press the Bluetooth button (5).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Bluetooth”, and touch the “ENTER” button (2).
- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth Info”, and touch the “ENTER” button (2).
- 4) Touch or slide the “TUNE/TRACK” Up/Down button (1), select the desired status, and touch the “ENTER” button (2).
  - To display the device name, select “Device Name”.
  - To display the device address, select “Device Address”.

## OTHER CONTROLS AND EQUIPMENT

### Initialize

It is possible to initialize the audio system's Bluetooth® settings or device information.

#### ⚠ CAUTION

- **Do not initialize the settings while driving. Stop your vehicle in a safe area before initializing the device.**
- **Initialize with caution. Initialized settings and history cannot be restored.**

- 1) The Bluetooth® setting screen will be displayed.
  - From the panel button:  
Touch the SETUP button (4).  
Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (2).
  - From the steering switch:  
Press the Bluetooth button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Bluetooth", and touch the "ENTER" button (2).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Initialize", and touch the "ENTER" button (2).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the item that you want to initialize item, and touch the "ENTER" button (2).
  - HF Sound Setting:
    - Reception/ringtone volume
    - Incoming call volume
  - Vehicle Device Info:
    - Passkey
  - All Initialize:
    - Reception/ringtone volume
    - Incoming call volume
    - Bluetooth audio volume
    - Pairing registration
    - Phonebook/history
    - Speed dial
    - Connect Method
    - Bluetooth Power
    - Auto Transfer
- 5) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (2).

### Notes on Bluetooth®



73R0209

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Denso Ten Limited is under license. Other trademarks and trade names are those of their respective owners.  
This telecommunication equipment conforms to the requirements of the National Telecommunications Commission.
- Stop using this unit and a Bluetooth® ready device whenever requested.  
This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.  
You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

## OTHER CONTROLS AND EQUIPMENT

### Profile


- SSP (Secure Simple Pairing)
- PBAP (Phone Book Access Profile)
- OPP (Object Push Profile)
- HFP (Hand-Free Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)

### Disclaimer for Bluetooth® function

- Depending on the mobile phone models, some phones may not be compatible fully or partially (some function may be restricted).
- Media playback through third-party applications may have limited support.
- Playback, display contents, connectivity or voice quality etc. may get affected depending on circumstances.
- After the ignition switch is turned to the “ON” position, the audio system takes few seconds to detect and connect to the Bluetooth® device (if already paired).
- Make sure that you are aware of all applicable local laws and accordingly use Bluetooth® device.


### Bluetooth® hands-free (if equipped)

To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system by “Bluetooth Settings”.

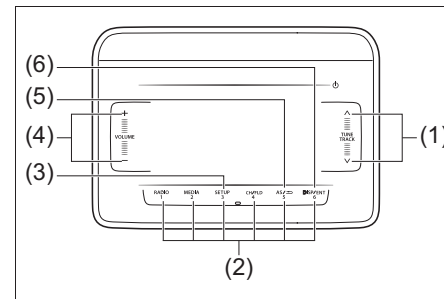


73R0150

### Display

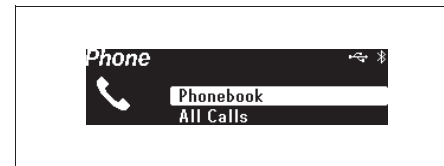


73R0151

### Steering switch

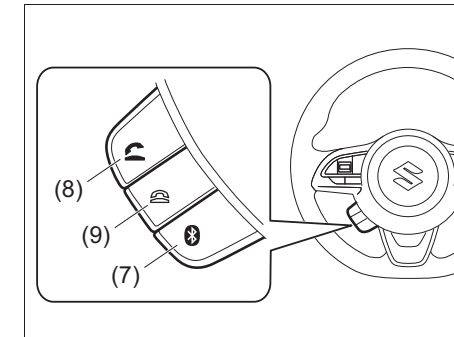

73R0152

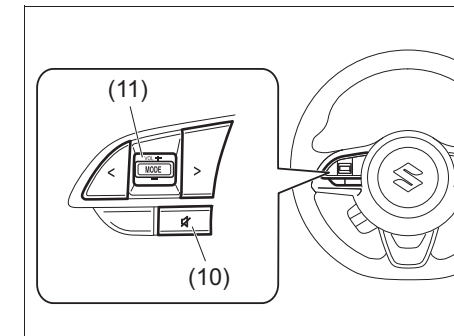

73R0153

- (1) “TUNE/TRACK” Up/Down button
- (2) Speed dial button (1-6)
- (3) SETUP button
- (4) “VOLUME” button



## OTHER CONTROLS AND EQUIPMENT

- (5) BACK button
- (6) "ENTER" button
- (7) Bluetooth® setting button
- (8) Off-hook button
- (9) On-hook button
- (10) Mute button
- (11) "VOL" (volume) button

### NOTICE

- **Do not leave your mobile phone inside your vehicle. If the temperature inside the vehicle increases, it may damage your mobile phone.**
- **When disposing your vehicle, make sure to delete all personal information saved to the audio system.**
- **The following hands-free data must be deleted from the audio system.**
  - Speed dial
  - Reception history/Incoming call history
  - Bluetooth® phonebook data

#### NOTE:

- Please keep your phone volume low. The person's voice who you are talking to may be heard outside of the vehicle and increase the voice echo. When talking on the phone, speak clearly towards the microphone.
- In the following cases, your voice may not be heard clearly by the person on the other line:
  - When driving on unpaved roads. (If there is loud traffic noise.)

- When driving at high speeds.
- When driving with the window open.
- If the air conditioner is blowing directly towards the microphone.
- When the sound of the air conditioner fan is loud.
- When there is an adverse effect to the sound quality of the phone or network that you are using.

- *The audio system may not function under the following conditions.*
  - When the phone power is not turned on.
  - When the mobile phone is out of service.
  - When the mobile phone is not connected.
  - When the mobile phone battery is low
- *The Bluetooth's hands-free operation is dependent upon the mobile phone's compatibility.*
- *The Bluetooth's hands-free performance is affected by the driving conditions of mobile phone networks, handsets and vehicles.*
- *The audio system's performance may be restricted due to the model of your mobile phone.*

It is possible to register a mobile phone and register the phone number to the audio system as follows:

- Up to 1,000 phone numbers can be saved for every registered mobile phone.
- Up to 30 phone numbers can be saved to the call history menu (missed calls/incoming/outgoing calls.)
  - When the call history exceeds 30 calls, they are deleted from the oldest one first, and the latest call history information is displayed in descending order.
- Up to 6 phone numbers can be saved to the speed dial list.

#### Answer the phone

- 1) Press the off-hook button (8).
- When you press the on-hook button (9) during an incoming call, you can block the call. (Only for compatible phone units)

#### NOTE:

- *If you receive a call from a registered phone, the caller's name will appear on the screen.*
- *If you receive a call from an unregistered phone, only the caller's phone number will appear on the screen.*

#### Hang up the phone

- 1) When the call is finished, press the on-hook button (9).



## OTHER CONTROLS AND EQUIPMENT

### Make a call on call waiting

When the screen is displayed during a call, it is possible to hold the call and answer the other incoming call.

- 1) When an incoming call is received during a call, press the off-hook button (8).
- When the call is on hold, it will connect to the other incoming call.
- To end the call waiting, press the off-hook button (8).
- When the call waiting is completed, the call on hold will connect.
- When switching the caller, press the off-hook button (8) again while using the call waiting.

#### NOTE:

*This function can only be used with phone units that are compatible with call waiting.*

### Mute the ringtone volume

- 1) Press the mute button (10).
- To deactivate the mute volume, press the mute button (10).

### Adjust the volume

#### Adjust the reception volume

- 1) Touch or slide the "VOLUME" button (4) or press the "VOL" button (11) during a call.
- To increase the volume, touch **+** or slide upwards.
- To decrease the volume, touch **-** or slide downwards.

#### NOTE:

*The volume and microphone sensitivity settings vary depending on the specifications of each mobile phone.*

#### Adjust the ringtone volume

- 1) Touch or slide the "VOLUME" button (4) or press the "VOL" button (11) during an incoming call.
- To increase the volume, touch **+** or slide upwards.
- To decrease the volume, touch **-** or slide downwards.

#### Adjust the volume with the Bluetooth® settings

- 1) Display the Bluetooth® setup menu.
- From the panel button:  
Touch the SETUP button (3).  
Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
- From the steering switch:  
Press the Bluetooth® button (7).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "HF Sound Setting", and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the item that you want to adjust, and touch the "ENTER" button (6).
- Call Volume: Reception/ringtone volume
- Ringtone Volume: Incoming call volume
- 5) Touch or slide the "VOLUME" button (4).
- To increase the volume, touch **+** or slide upwards.
- To decrease the volume, touch **-** or slide downwards.

### Make a call

Press the off-hook button (8) to enter the telephone mode.

## OTHER CONTROLS AND EQUIPMENT

### Use the phonebook

- 1) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Phonebook”, and touch the “ENTER” button (6).
  - 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select the desired initials, and touch the “ENTER” button (6).
  - 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select the contact number, and touch the “ENTER” button (6).
- If there are multiple phone numbers for a single contact, touch or slide the “TUNE/TRACK” Up/Down button (1), select the phone number, and touch the “ENTER” button (6).
- 4) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Yes”, and touch the “ENTER” button (6) or press the off-hook button (8).

### Use the call history

- 1) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “All Calls,” “Missed Calls,” “Incoming Calls” or “Outgoing Calls” and touch the “ENTER” button (6).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select the contact number, and touch the “ENTER” button (6).
- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Yes”, and touch the “ENTER” button (6) or press the off-hook button (8).

### Use the speed dial

- 1) Press the Off-hook button (8) for 1 second or longer.
- 2) Touch the desired speed dial button (2) (1-6).
- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “YES”, and then touch the “ENTER” button (6) or press the Off-hook button (8).

#### NOTE:

*Speed dial numbers must be registered before this function can be used.*

### Transfer/delete the phonebook

- 1) Display the Bluetooth® setup menu.
- From the panel button:  
Touch the SETUP button (3).  
Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Bluetooth”, and touch the “ENTER” button (6).
  - From the steering switch:  
Press the Bluetooth® button (7).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Telephone”, and touch the “ENTER” button (6).
  - 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Setup Phonebook”, and touch the “ENTER” button (6).

### Transfer all contacts from your mobile phone

- 1) Touch or slide the “TUNE/TRACK” Up/Down button (1) from the “Setup Phonebook” screen, select “Add Contacts”, and touch the “ENTER” button (6).
- 2) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “Overwrite All”, and touch the “ENTER” button (6).
- 3) Touch or slide the “TUNE/TRACK” Up/Down button (1), select “YES”, and touch the “ENTER” button (6).

## OTHER CONTROLS AND EQUIPMENT

### Transfer 1 contact from your mobile phone

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Phonebook" screen, select "Add Contacts", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Add One Contact", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

### Delete the registered phonebook

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Phonebook" screen, select "Delete Contacts", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the desired initials from the list or "All", and touch the "ENTER" button (6).
  - When you select "All", it will transition to step 4.
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the desired name from the list, and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

### Transfer/delete the call history

- 1) Display the Bluetooth® setup menu.
  - From the panel button:  
Touch the SETUP button (3).  
Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
  - From the steering switch:  
Press the Bluetooth® button (7).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Call History", and touch the "ENTER" button (6).

### Transfer the call history

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Call History" screen, select "Overwrite History", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

### Delete the call history

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Call History" screen, select "Delete History", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "All Calls", "Missed Calls", "Incoming Calls" or "Outgoing Calls" and touch the "ENTER" button (6).
- 3) Touch or slide the TUNE/TRACK Up/Down button (1), select the desired data from the history or select "All", and then touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).

### Registration / deletion of speed dial

- 1) Display the Bluetooth® setup menu.
  - From the panel button:  
Touch the SETUP button (3).  
Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
  - From the steering switch:  
Press the Bluetooth® button (7).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Speed Dials", and touch the "ENTER" button (6).

## OTHER CONTROLS AND EQUIPMENT

### Registration in speed dial

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Speed Dials" screen, select "Add Speed Dial", and touch the "ENTER" button (6).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the phonebook or call history, and touch the "ENTER" button (6).
  - When you select the call history, it will transition to step 4.
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the desired initials from the list and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the contact number, and touch the "ENTER" button (6).
  - If there are multiple phone numbers for a single contact, touch or slide the "TUNE/TRACK" Up/Down button (1), select the phone number, and touch the "ENTER" button (6).
- 5) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the speed dial number that you want to register, and touch the "ENTER" button (6).

### Deletion of speed dial

- 1) Touch or slide the "TUNE/TRACK" Up/Down button (1) from the "Setup Speed Dials" screen, select "Delete Speed Dials", and touch the "ENTER" button (6).

- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select the speed dial number that you want to delete, and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "YES", and touch the "ENTER" button (6).


### Automatic transfer of the phonebook/call history

When registering the mobile phone, you can select to automatically transfer the phonebook and call history from your device. Select according to the following steps.

- 1) Display the Bluetooth® setup menu.
  - From the panel button:  
Touch the SETUP button (3).  
Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Bluetooth", and touch the "ENTER" button (6).
  - From the steering switch:  
Press the Bluetooth® button (7).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Setup Telephone", and touch the "ENTER" button (6).
- 3) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Auto Transfer", and touch the "ENTER" button (6).
- 4) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "On" or "Off", and touch the "ENTER" button (6).

### Bluetooth® audio

To use Bluetooth® devices (Bluetooth® audio or mobile phone) on the audio system, it is required to register the Bluetooth® devices to the audio system by "Bluetooth® Settings".

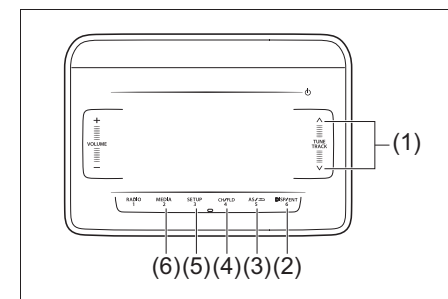


73R0141

- (1) "TUNE/TRACK" Up/Down button
- (2) "DISP/ENTER" button
- (3) BACK button
- (4) "FLD" (group operation) button
- (5) SETUP (random/repeat) button
- (6) "MEDIA" button

## OTHER CONTROLS AND EQUIPMENT

### Display

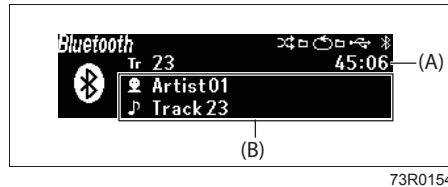

73R0154

(A) Playback time

(B) Text information display

#### NOTE:

*Some functions may not be usable on some Bluetooth® devices.*

### Selecting the Bluetooth® audio

- 1) Touch the "MEDIA" button (6).
- Touch the "MEDIA" button (6). Each time the button is touched, the mode will change as follows:  
USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

### Fast forwarding/Rewinding a track

- 1) Hold down the "TUNE/TRACK" Up/Down button (1).
- : Hold down the Up button for 1 second or longer to fast forward the track.
- : Hold down the Down button for 1 second or longer to fast rewind the track.
- Releasing the button can stop the fast forwarding/rewinding.

### Selecting a track

- 1) Touch the "TUNE/TRACK" Up/Down button (1).
- : Touch the Up button to listen to the next track.
- : When the Down button is touched once, the track currently being played will start from the beginning again. Touch the Down button twice to listen to the previous track.

### Selecting a group (only for supported models)

- 1) Touch the "FLD" (group operation) button (4).
- 2) Touch the "TUNE/TRACK" Up/Down button (1).
- : Touch the Up button to go to the next group.
- : Touch the Down button to go to the previous group.

### Repeat playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Repeat", and touch the "DISP/ENTER" button (2).
- Each time the "DISP/ENTER" button (2) is touched, display will change as follows:  
Off → One song repeat → Group repeat ...

### Random playback

- 1) Touch the SETUP (random/repeat) button (5).
- 2) Touch or slide the "TUNE/TRACK" Up/Down button (1), select "Random", and touch the "DISP/ENTER" button (2)
- Each time the "DISP/ENTER" button (2) is touched, display will change as follows:  
Off → Group random → All random

### Display change

- 1) Touch the "DISP/ENTER" button (2).
- Each time the button is touched, display will change as follows:  
Artist name/Track title → Album name/Track title ...

#### NOTE:

- "NO TITLE" will be displayed when there is no text information in the USB device currently being played.
- "... " is displayed if all text data cannot be displayed. Touch and hold the "DISP/ENTER" button (2) for at least one second to automatically display the rest of the text data.


## OTHER CONTROLS AND EQUIPMENT

### Anti-Theft Feature

The anti-theft function is intended to discourage thefts, such as that the audio system becomes inoperable when it is installed on other vehicles.

This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the lead-acid battery is disconnected, the unit will become inoperable until the PIN is reentered.

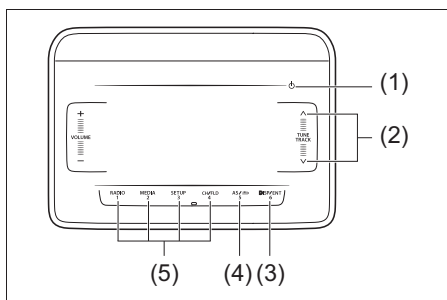

73R0155

- (1) POWER button
- (2) List selection button
- (3) "ENTER" button
- (4) BACK button
- (5) PIN entry button (1-4)

### Display



73R0156

### Setting the Anti-Theft Function

- 1) Touch the POWER button (1) for 1 second or longer to power off the audio system.
- 2) Hold down the button numbered [1] of the PIN entry button (5) and the "ENTER" button (3) and touch the POWER button (1).
  - "SECURITY" will be displayed.
- 3) Hold down the Up button of the List selection button (2) and the button numbered [1] of the PIN entry button (5).
  - "----" will be displayed.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of the PIN entry button (5).
- 5) Touch the "ENTER" button (3) for 1 second or longer.
  - "COMPLETE" will be displayed, and the power will turn off after 3 seconds.

#### NOTE:

Take a note of the registered PIN and keep it for the future use.

### Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- 1) Touch the POWER button (1) for 1 second or longer to power off the audio system.
- 2) Hold down the buttons numbered [1] of the PIN entry button (5) and the "ENTER" button (3) and touch the POWER button (1).
  - "PIN ENTRY" will be displayed.
- 3) Hold down the Up button of the List selection button (2) and the button numbered [1] of the PIN entry button (5).
  - "----" will be displayed.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1] - [4] of the PIN entry button (5).
- 5) Touch the "ENTER" button (3) for 1 second or longer.
  - If an incorrect PIN is entered, "ERROR\* (ERR Number)" will be displayed for 3 seconds, then the audio system will go back to step 2.
  - "----" is displayed on the screen, and the power will turn off after 3 seconds.


#### NOTE:

- To change your PIN, first delete your current PIN, then set a new one.
- If an incorrect PIN is entered 10 times or more, "HELP" will be displayed and the audio system will become inoperable. In this case, contact a Maruti Suzuki authorised workshop.

## OTHER CONTROLS AND EQUIPMENT


### Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the lead-acid battery is replaced, etc, it is required to enter the PIN to make the unit operable again.

- 1) Set the ignition switch to the ACC position.
  - “SECURITY” will be displayed.
- 2) Hold down the Up button of the List selection button (2)  and the button numbered [1] of the PIN entry button (5).
- “----” will be displayed.
- 3) Enter the registered 4-digit PIN number using the buttons numbered [1] - [4] of the PIN entry button (5).
- 4) Touch the “ENTER” button (3) for 1 second or longer.
  - If an incorrect PIN is entered, “ERROR\* (ERR Number)” will be displayed for 3 seconds, then the audio system will go back to step 2.
  - After 3 seconds, the power of the audio system will be turned off automatically and it will become operable again.

### Steering Switch (if equipped)

Use the steering wheel button to operate the basic functions of the audio system.

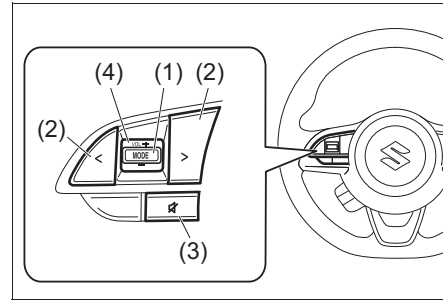

73R0157

- (1) MODE button
- (2) Selection button
  - Selecting the radio station
  - Selecting the track (USB (iPod), Bluetooth® audio mode)
- (3) Mute button
- (4) “VOL” (volume) button

#### MODE button (1)

- Each time the button is pressed, the mode will change as follows:  
 AM → FM1 → FM2 → USB (iPod) (if equipped) → Bluetooth® audio (if equipped) → AUX (if equipped)

#### Selection button (2)

- FM1, FM2, AM mode:
  - Press > to transfer to the next preset channel.
  - Press < to transfer to the previous preset channel.
  - Press > for 1 second or longer, it will search for receivable stations at a high frequency.
  - Press < for 1 second or longer, it will search for receivable stations at a low frequency.
- USB (iPod), Bluetooth® audio mode:
  - Press > to transfer to the next song. With the folder operation mode, it will transfer to the next folder.
  - Press < to return to the beginning of the currently playing song. Pressing it twice consecutively will return to the previous song. With the folder operation mode, it will return to the previous folder.
  - Press > for 1 second or longer to fast-forward the song. When the button is released, it will stop fast-forwarding.
  - Press < for 1 second or longer to rewind the song. Releasing the button can stop rewinding.









## OTHER CONTROLS AND EQUIPMENT

### Mute button (3)

- Hands-free mode  
Each time you press the button the mute will switch from ON/OFF.
- USB (iPod), Bluetooth® audio mode:  
Press the button during playback to temporarily stop the playback.

### “VOL” button (4)

- Hands-free mode:
  - Press  during an outgoing or incoming call, the reception/ringtone sound will increase.
  - Press  during an outgoing or incoming call, the reception/ringtone sound will decrease.
  - Press  during an outgoing call, the ringtone sound will increase.
  - Press  during an outgoing call, the ringtone sound will decrease.
- Radio, USB (iPod), Bluetooth® audio, AUX mode:  
Press , the volume will increase.  
Press , the volume will decrease.

### NOTE:

*Due to poor quality of FM/AM signal, some disturbance/noise may be heard from speakers. It is recommended to switch off the tuner system to prevent the said disturbance/noise in the speaker.*

### Remote Controller

#### CAUTION

#### Operational precautions regarding remote controller use:

- Because of its small size and light weight, use the remote controller with care. Dropping the remote controller or hitting it against hard surfaces may degrade the battery and cause malfunction.
- Do not expose the remote controller to humidity, dust, or moisture. Do not subject the remote controller to shock.
- Do not place the remote controller on the dashboard or other places that can be exposed to high temperatures, such as near heater vents. Exposing the remote controller to conditions in which it may overheat may cause the case to deform or other issues.
- Do not operate the remote controller while driving. Doing so may result in an accident.
- Direct the remote controller towards the remote controller receiver when using the remote controller.

(Continued)

#### CAUTION

(Continued)

- The receiver may not operate correctly when exposed to direct sunlight or other sources of bright light.
- Remove the battery from the remote controller if the remote controller will not be used for extended periods of time.

#### CAUTION


#### Cleaning the remote controller:

- Use a dry cloth to clean the remote controller. If the remote controller becomes excessively soiled, use a cloth dampened lightly with a diluted liquid detergent.
- Never use organic solvents, such as benzene cleanser or thinner. Use of these substances will damage the case and finish.



## OTHER CONTROLS AND EQUIPMENT


### Before using the remote controller

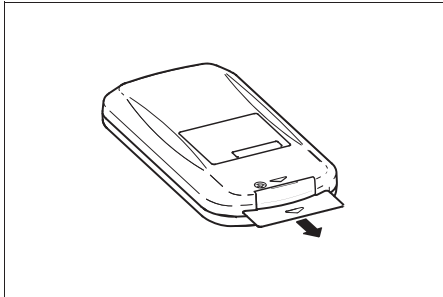

72R0091





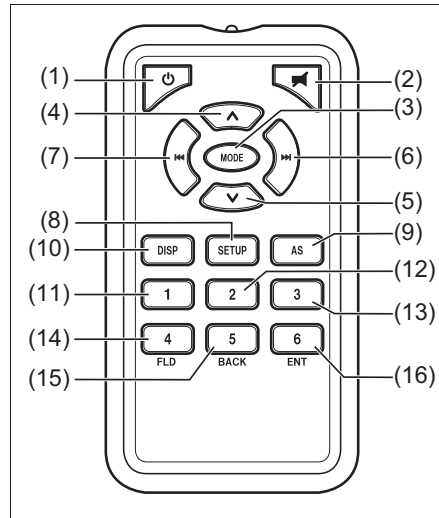

- 1) Pull out the battery insulated sheet tab from the remote controller in the direction indicated by the arrow.

### Remote controller operation










72R0092




## OTHER CONTROLS AND EQUIPMENT

No.	Button	Function
(1)		<b>POWER button:</b> <ul style="list-style-type: none"> <li>Turns the power to the audio system on / off (press and hold)</li> </ul>
(2)		<b>Mute button:</b> <ul style="list-style-type: none"> <li>Sound mute on / off</li> </ul>
(3)		<b>MODE button:</b> <ul style="list-style-type: none"> <li>Switches between audio sources <ul style="list-style-type: none"> <li>The mode changes in the following order each time the button is pressed: AM → FM1 → FM2 → USB (iPod) (if equipped) → Bluetooth® audio → AUX (if equipped) ...</li> </ul> </li> </ul> <p><i>NOTE:</i> "No Audio" will be displayed when there is no Bluetooth device connected.</p>
(4)		<b>Volume buttons:</b> <ul style="list-style-type: none"> <li>Volume up / Continuous volume up (press and hold)</li> </ul>
(5)		<b>Volume buttons:</b> <ul style="list-style-type: none"> <li>Volume down / Continuous volume down (press and hold)</li> </ul>
(6)		<b>TUNE/TRACK up button:</b> <ul style="list-style-type: none"> <li><b>RADIO:</b> <ul style="list-style-type: none"> <li>Tune up / Seek up (press and hold)</li> </ul> </li> <li><b>USB, iPod, and Bluetooth® audio:</b> <ul style="list-style-type: none"> <li>Normal mode: Track (file) up / Fast up (press and hold)</li> <li>FLD mode (USB and Bluetooth® audio): Folder (Group) up / Fast up (press and hold)</li> <li>FLD mode (iPod): List up / Continuous list up (press and hold)</li> </ul> </li> <li><b>FUNCTION mode (various settings):</b> <ul style="list-style-type: none"> <li>Configures functions / Change values</li> </ul> </li> </ul>

## OTHER CONTROLS AND EQUIPMENT

No.	Button	Function
(7)		<b>TUNE/TRACK down button:</b> <ul style="list-style-type: none"> <li>• RADIO: Tune down / Seek down (press and hold)</li> <li>• USB, iPod, and Bluetooth® audio: <ul style="list-style-type: none"> <li>– Normal mode: Track (file) down / Fast down (press and hold)</li> <li>– FLD mode (USB and Bluetooth® audio): Folder (Group) down / Fast down (press and hold)</li> <li>– FLD mode (iPod): List down / Continuous list down (press and hold)</li> </ul> </li> <li>• FUNCTION mode (various settings): Configures functions / Change values</li> </ul>
(8)		<b>SETUP button:</b> <ul style="list-style-type: none"> <li>• Switch to the System setting mode</li> </ul>
(9)		<b>Auto Store button:</b> <ul style="list-style-type: none"> <li>• RADIO: Switches between manual preset and AS mode / Auto Store (press and hold)</li> </ul>
(10)		<b>DISP button:</b> <ul style="list-style-type: none"> <li>• Changes text displays / Changes automatic text display pages (press and hold)</li> </ul>
(11)		<b>Preset [1] button:</b> <ul style="list-style-type: none"> <li>• RADIO: Calls preset channels / Stores channel as preset (press and hold)</li> </ul>
(12)		<b>Preset [2] button:</b> <ul style="list-style-type: none"> <li>• RADIO: Calls preset channels / Stores channel as preset (press and hold)</li> </ul>
(13)		<b>Preset [3] button:</b> <ul style="list-style-type: none"> <li>• RADIO: Calls preset channels / Stores channel as preset (press and hold)</li> </ul>

## OTHER CONTROLS AND EQUIPMENT


No.	Button	Function
(14)		<b>Preset [4] / FLD button:</b> <ul style="list-style-type: none"><li>• RADIO: Calls preset channels / Stores channel as preset (press and hold)</li><li>• USB, iPod, and Bluetooth audio: Switches between Folder operation / iPod menus / Group operation mode</li></ul>
(15)		<b>Preset [5] / BACK button:</b> <ul style="list-style-type: none"><li>• RADIO: Calls preset channels / Stores channel as preset (press and hold)</li><li>• USB, iPod, Bluetooth® audio, and settings: Switches back to the previous screen</li></ul>
(16)		<b>Preset [6] / ENTER button:</b> <ul style="list-style-type: none"><li>• RADIO: Calls preset channels / Stores channel as preset (press and hold)</li><li>• USB, iPod, Bluetooth® audio, and settings: Sets the selected item</li></ul>

## OTHER CONTROLS AND EQUIPMENT

### Battery replacement


#### CAUTION

- Store batteries in their original packaging out of reach of children until ready for use. Discard used batteries immediately. Seek medical attention immediately if swallowed.
- Do not place batteries in locations near fire or exposed to direct sunlight. Doing so may result in fire, explosion, or excessive heat.
- Do not place the remote controller on the dashboard or other places that can be exposed to high temperatures.
- Accidentally replacing batteries with lithium-ion batteries may result in explosion. Always replace batteries with the same type.

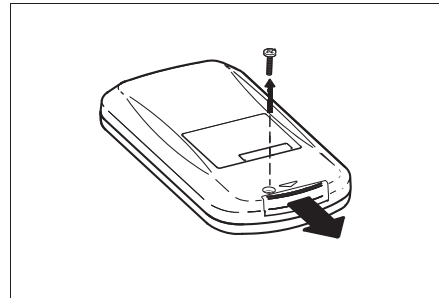


72R0088

- 1) Use a Phillips screwdriver (sold separately) of the proper size to remove the screw and pull out the battery slot cover in the direction indicated by the arrow.

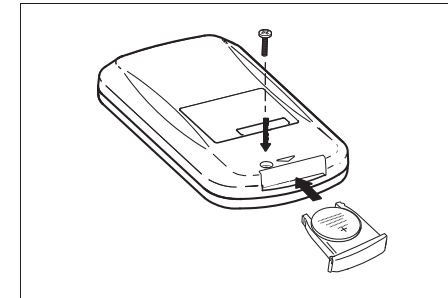

72R0090

- 3) Press the battery slot cover to the direction indicated by the arrow completely and then fully tighten the screw.

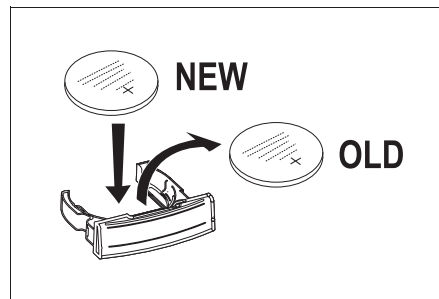

72R0089

- 2) Remove the old battery and place the new battery (CR2025) into the battery slot cover with the + mark facing upwards.

## OTHER CONTROLS AND EQUIPMENT

### Troubleshooting

When encountered a problem, check and follow the instructions as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to a Maruti Suzuki authorised workshop.

Problem	Possible cause	Possible solution
---------	----------------	-------------------

#### Common

Unable to operate	The security function is on.	When "SECURITY" is displayed, enter the ID. When "HELP" is displayed, contact a Maruti Suzuki authorised workshop.
Unable to turn on the power (no sound). (No sound is produced)	Fuse is blown.	Contact a Maruti Suzuki authorised workshop.

#### Radio

Much noise	It may not be exactly tuned in to the station.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.

#### USB

Playback does not start when the USB device is connected.	There is no supported format file to play on this unit.	Check the file format.
	The current consumption of the USB device exceeds 1.0 A.	Use an USB device with a current consumption lower than 1.0 A.
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.

## OTHER CONTROLS AND EQUIPMENT

Problem	Possible cause	Possible solution
---------	----------------	-------------------

### Bluetooth®

Pairing failed	The distance between this unit and the Bluetooth® ready device is too far, or a metallic object may be located between the Bluetooth® ready device and this unit.	Change the location of the Bluetooth® ready device.
	The Bluetooth® function of the Bluetooth® ready device is off.	Refer to the manual of the Bluetooth® ready device. (Some devices have the power saving function that automatically activates after a certain time.)
Unable to receive a call	Your current location may be out of service area.	Drive your vehicle to the service area of the phone.
The voice quality of hands-free is low (Distortion, noise etc.)	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit.

### Error Display Messages

The following messages (flashing) will be displayed onto the screen depending on the condition of the audio system.

Message	Description
Reading	When the USB device or iPod's file format is being read, this message will be displayed.
ERROR 1	When the USB device or iPod's reading error occurs, this message will be displayed. Reconnect the USB device or iPod's connection cable. When the Bluetooth® audio playback malfunction occurs, this message will be displayed. Check the Bluetooth® audio body.


## OTHER CONTROLS AND EQUIPMENT

Message	Description
ERROR 2	When the USB device or iPod's communication error occurs, this message will be displayed. Reconnect the USB device or iPod's connection cable.
ERROR 3	When the USB device or iPod's issues are detected, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 4	If the USB device or iPod does not operate due to an over current, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 5	When the data playback fails with the USB device or iPod connected, or there are data unable to be transferred, this message will be displayed. Remove the USB device or iPod, and check the USB device or the iPod body.
ERROR 6	When the USB HUB is connected, this message will be displayed. Disconnect the USB HUB.
UNSUPPORTED	When an unsupported USB device or iPod is connected, this message will be displayed. Connect the supported USB device or iPod.
No Music	When an empty USB device or a USB device containing files with the extension unable to be played is connected, this message will be displayed. Connect the USB device containing files with the playable extension.
No Songs	When an iPod is connected, this message will be displayed.




## OTHER CONTROLS AND EQUIPMENT

### Fuel Filler Cap

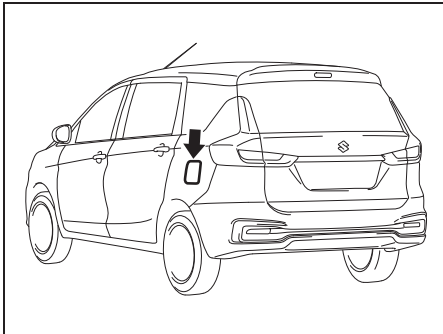


73R0083

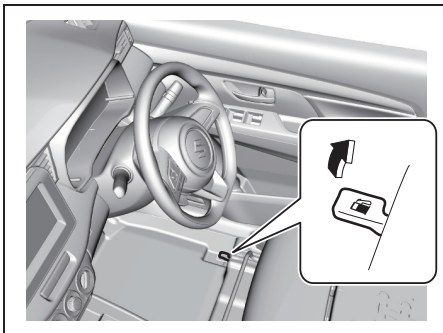

73R0084

The fuel filler cap is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard lower side of the driver's seat and locked by simply closing the door.

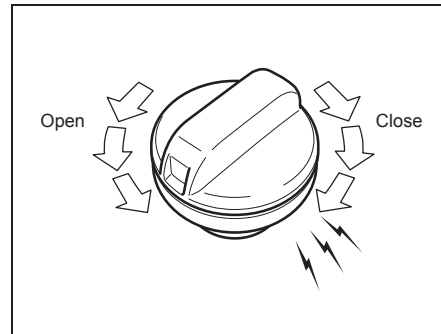


57L51093

To remove the fuel filler cap:

- 1) Stop the engine and close all the doors and windows while refueling.
- 2) Open the fuel filler door.
- 3) Remove the cap by turning it counter-clockwise.

#### ⚠ CAUTION

Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

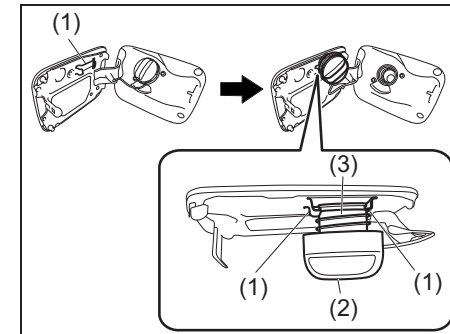

73R0085

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

To reinstall the fuel filler cap:

- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.

#### ⚠ WARNING

Fuel is extremely flammable. Do not smoke when refueling, and make sure there are no open flames or sparks in the area.

## OTHER CONTROLS AND EQUIPMENT


### WARNING

If you need to replace the fuel cap, use a genuine Maruti Suzuki cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage while driving and in the event of an accident.

## Engine Hood

### WARNING

- Never allow children to open or close the hood. Children may injure themselves because the hood is heavy. Contact with the engine compartment and related parts may cause burns when this area/these parts are hot.
- Do not allow children to be near the vehicle when opening the hood.
- Do not leave tools, cloths, and other objects, which were used to clean or perform maintenance and inspections, in the engine compartment. Doing so may cause operational failures or even the vehicle to catch fire when the engine compartment becomes hot.

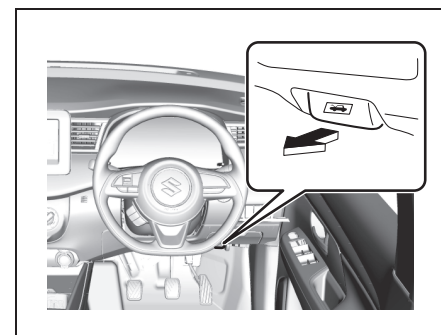


73R0086

To open the engine hood:

- 1) Pull the hood release handle located under the driver's side instrument panel in the outboard position. This will disengage the engine hood lock halfway.

## OTHER CONTROLS AND EQUIPMENT

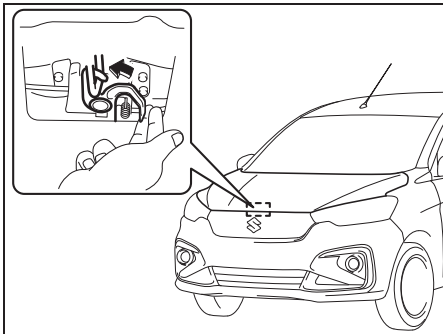

73R0087


- 2) Push the under-hood release lever leftward with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

### ⚠ CAUTION

The release lever and its peripheral, or engine hood can be hot enough to burn your finger right after driving. Touch after those becomes cool enough.

### NOTICE

Check that the wiper arms are not raised before you lift up the engine hood to avoid damaging the wiper arms and the engine hood.

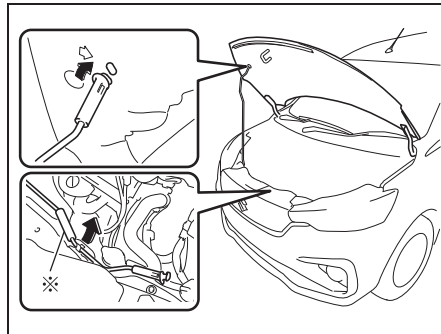

73R0088

- 3) While holding the hood, pull the prop rod out from the holding clip, and then insert the end of the rod into the designated hole.

### ⚠ CAUTION


- The prop rod can be hot enough to burn your finger right after driving. Touch the rod after it becomes cool enough.
- Insert the end of the rod into the hole securely. If the rod slips out, you may get caught in the closing hood.
- The rod may slip out when the hood is blown by wind. Be careful on windy days.

### NOTICE

Hold the part maked in \* when removing the bracket from the holder.

To close the engine hood:

- 1) Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back to the holding clip.

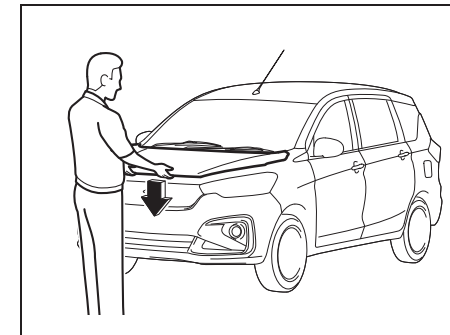

73R0158

- 2) Lower the hood to about 20 cm above the hood latch, and then let it drop down. Make sure the hood is securely latched after closing.

## OTHER CONTROLS AND EQUIPMENT

### **WARNING**

Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.


### **CAUTION**

To avoid injury, check that no part of the occupant's body such as hands or head is in the path of the hood when closing it.

### **NOTICE**

Pushing on the hood from the top may damage it.

## Sun Visor

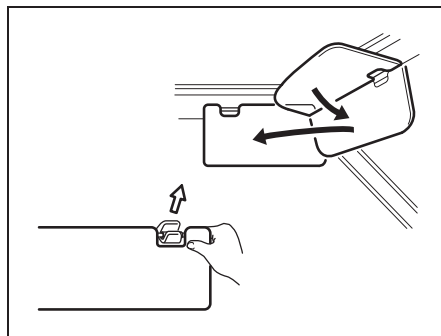


79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

### **NOTICE**

When unhooking and hooking a sun visor, handle it by the hard plastic parts or the sun visor can be damaged.

## Card holder

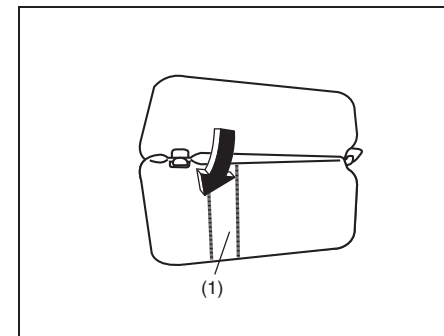

74LHT0516

(1) Card holder


You can put a card in the card holder (1) on the back of the sun visor.

### **NOTICE**

When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

## OTHER CONTROLS AND EQUIPMENT

### Vanity mirror (if equipped)

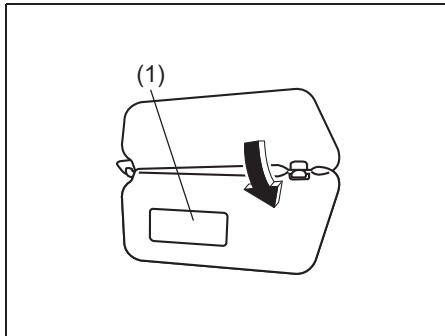

73R0167


(1) Vanity mirror

#### WARNING

- Do not use the vanity mirror while driving. Doing so may result in an accident due to failure to pay attention to the road in front of you.
- Do not place any weight on or come too close to the locations where an airbag is stored when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of the airbag.


### Interior Light

#### Front

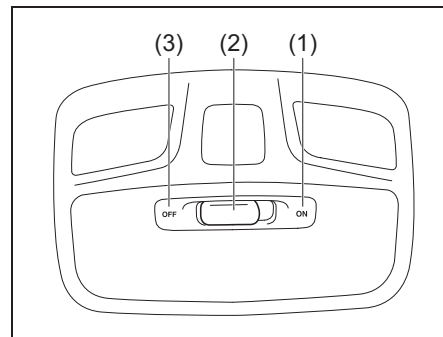

73R0090

#### Rear

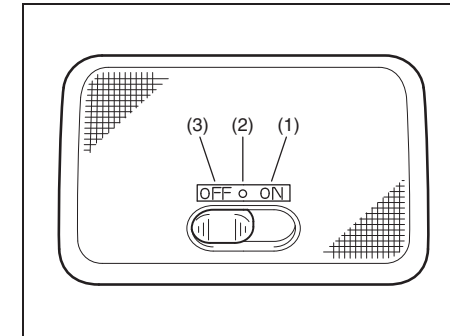

64J211

Interior light switch has three positions which function as described below:

#### ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

#### NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position.
- The hazard warning lights, the position lights and the headlights are off.
- After 15 minutes from the light on.


## OTHER CONTROLS AND EQUIPMENT

### DOOR (2)

- The light comes on when the door is opened. After closing all doors, the light will remain on for 15 seconds and then fade out. If you insert the key, the light will start to fade out immediately. After removing the key from the ignition switch, the light will turn on for 15 seconds and then fade out.
- When the ignition switch is in LOCK position, to prevent the lead-acid battery from discharging, the light will automatically be turned off when a period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

### OFF (3)

The light remains off even when the door is opened.

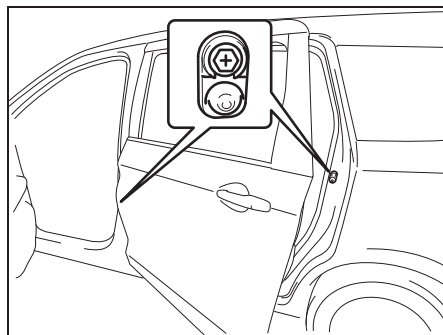


73R0091

### NOTE:

*The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber projection) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber projection depending on the vehicle specification.*

## Accessory Socket


### Center console

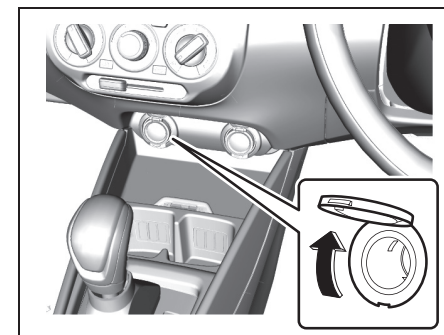

72RH4015

## OTHER CONTROLS AND EQUIPMENT

### Floor Console

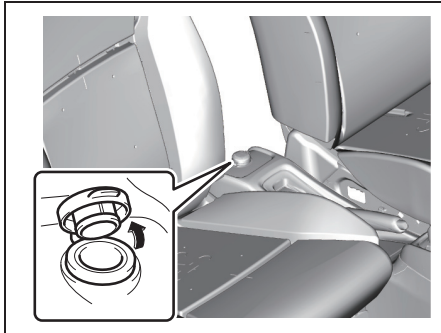

73R0093

The accessory socket will work when the ignition switch is in ACC or ON position. Each socket can be used to provide 12 volt/120 watt/10 ampere power for electrical accessories when used alone.

#### NOTICE


- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Check that any electrical accessories you use are designed to plug into this type of socket.
- Check that the cap remains on the socket when the socket is not in use.
- When the ignition switch is in "LOCK" position during using the accessory socket, the following accidents may occur;
  - the audio or navigation system does not turn off.
  - the keyless entry system does not work, etc.If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly. If the problem persists, ask a Maruti Suzuki authorised workshop to have the system inspected.

#### ⚠ WARNING

If you pay too much attention to operating the Accessory socket while driving, an accident can occur.

### Assist Grips


Front Passenger's Seat / 2nd Row Seat

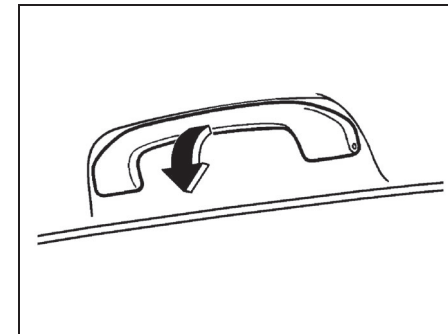

54G249

## OTHER CONTROLS AND EQUIPMENT

### 3rd Row Seat

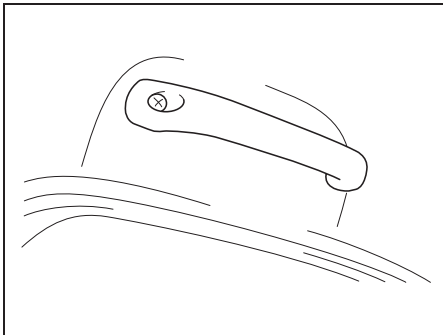

Assist grips are provided for convenience.

#### **NOTICE**

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

### Glove Box



To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.

#### **WARNING**

Never drive with the glove box lid open. It could cause injury if an accident occurs.

#### **WARNING**

Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.


#### **WARNING**

Do not drive the vehicle with the lid of glove box open.



## OTHER CONTROLS AND EQUIPMENT

### AUX/USB Socket

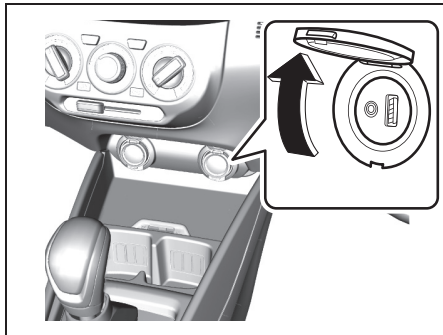

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to "Audio system" in this section.

#### NOTICE

**Always close the cap when not in use, since entry of foreign material, dust, water, conductive liquids may damage the audio system or USB device.**

#### ⚠ WARNING


**If you pay too much attention to operating the AUX/USB socket while driving, an accident may occur.**

#### ⚠ WARNING

**Do not put items in the vehicle that may fall or roll around in the vehicle while driving. Objects getting caught in the brake pedal or accelerator pedal may prevent proper operation of the pedals, which may result in an accident.**

### Cup Holder and Storage Area

#### Front

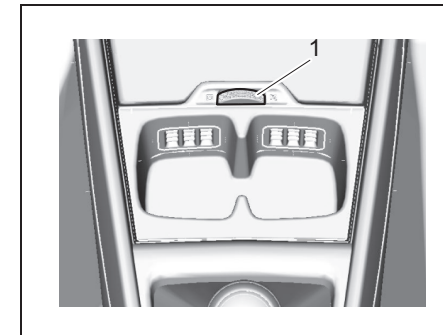

#### Ventilated cup holder (if equipped)

If you turn on the air conditioning system, air flow comes out of the cup holder outlet. Air flow prevent the temperature of the drink from increasing.

Turn the dial wheel (1) clockwise, the cup holder outlet will open.


Turn the dial wheel(1) counterclockwise, the cup holder outlet will close.

#### NOTE:

- The temperature of air flow in cup holder is about the same with the center outlet.
- There is no effect to cool the drink in the cup holder.

## OTHER CONTROLS AND EQUIPMENT

### 3rd Row Seats

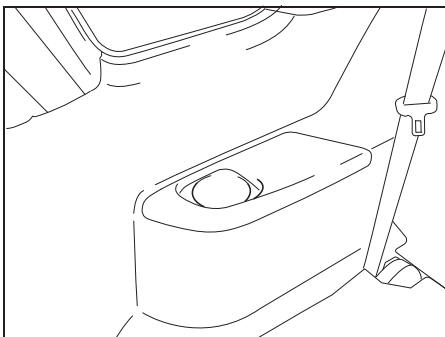

73R0098


### WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful when you are using the cup holders to hold a cup containing liquid. Spilling out hot liquid can cause burn injury. The lithium-ion battery is located under the front left side seat. Spilling liquids on the lithium-ion battery in models equipped with ENG A-STOP system or Smart Hybrid may cause a fire or electric shock or damage to the battery.
- Do not use the cup holders to hold sharp-edged, hard, or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.
- If you spill, or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorised workshop.

### Bottle Holder

#### Front seats

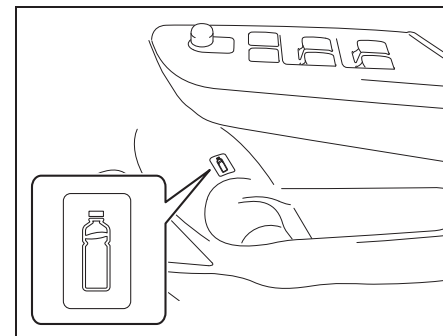


73R0099

#### NOTE:

Maruti Suzuki recommends to use maximum 1 liter capacity of bottle.

## OTHER CONTROLS AND EQUIPMENT


### 2nd row seats

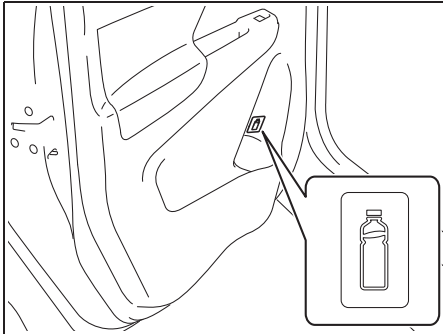

73R0100

You should hold a bottle with a cap in the holder.

### Rear Armrest

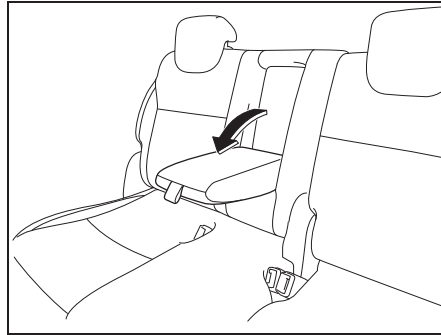


72R0046

The rear armrest is stowed in the center of the seatback. Tilt it down forward to use.

#### **WARNING**

**If the seat belt is obstructed by any part of the armrest when fastened, it cannot provide the intended protection. After fastening the seat belt, always check that the armrest is not interfering with the belt.**

### Bill/coin Holder

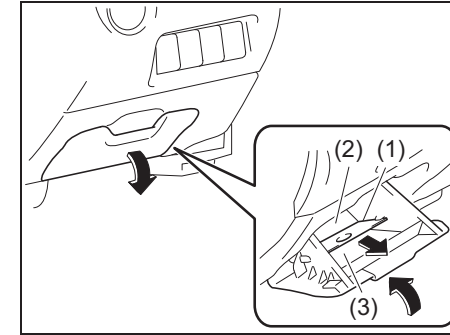

73R0216

Pull the upper of the holder downward to open the cover.

It is recommended to separate coins (2) and bills (3) with partition.

The holder can also be used after sliding out and removing the partition plate (1).


Push the upper of the holder to close the cover.

#### **WARNING**

**Never drive with the bill/coin holder lid open. It could cause injury if an accident occurs.**

## OTHER CONTROLS AND EQUIPMENT


### Footrest

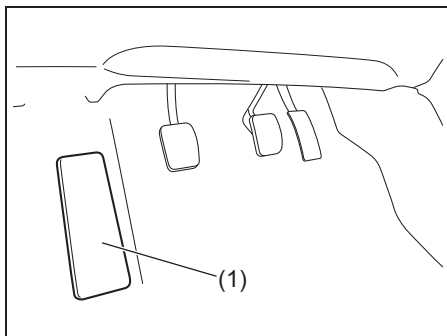

58MST0509

Use the footrest (1) as a support for your left foot only.

### Front Seat Back Pocket (if equipped)

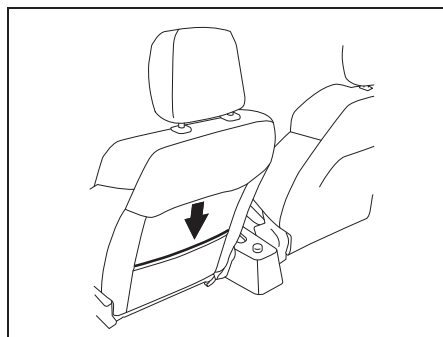


72RM05006

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

#### **CAUTION**

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.

### Luggage Box (if equipped)

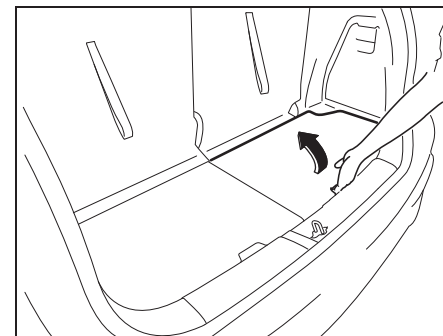

73R0102

Insert your hands into the notches and lift up the luggage box cover to use the box.

#### **NOTICE**

Do not allow items in the box to extend above the top of the box. Otherwise, the box or cover may be damaged.

#### **NOTICE**

Observe the following instructions, not to break the luggage box cover.

- Do not hold open the cover while driving.
- Do not apply any load to the cover while holding it open.

## OTHER CONTROLS AND EQUIPMENT

### Frame Hooks

It is not recommended that you use the frame hooks for towing another vehicle. They were originally designed to tow your vehicle in emergency situation. If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in "EMERGENCY SERVICE" section.


#### WARNING

Observe the following instructions when using frame hooks. The towing eye or vehicle body may break and cause serious injury or damage:

- Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the towing eye.

In such case, we recommend that you contact a professional service.

#### Front

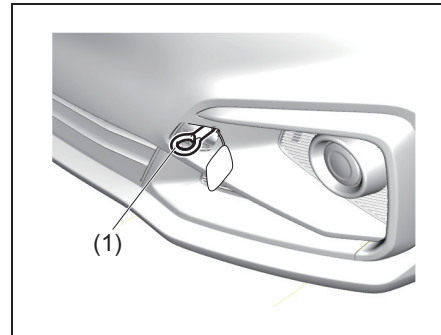


73R0183

The towing eye (1) is provided on the front of the vehicle for use in emergency situations and sea shipping purpose only.

#### NOTICE

To prevent damage to the vehicle, never use the towing eye (1) for trailer / train shipping.


To install the hook (1), follow the procedure below.

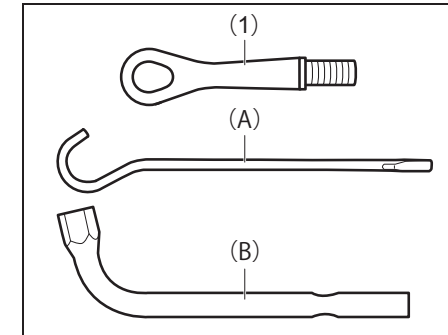

52RM50170

- 1) Pick up the towing eye (1), jack handle (A) and wheel wrench (B) in the luggage compartment.

## OTHER CONTROLS AND EQUIPMENT

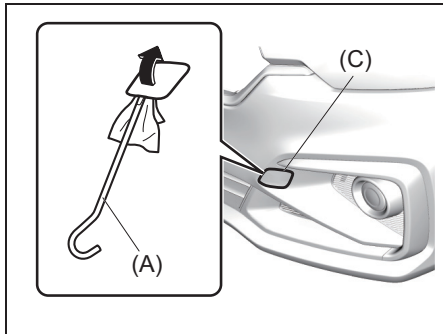


72RS2010

- 2) Remove the cover (C) by using a jack handle (A) covered with a soft cloth as shown in the illustration.

**NOTE:**

*Do not use excessive force as it may damage the cover strap.*

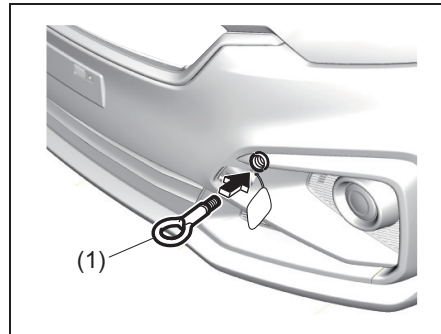


72RS2011

- 3) Install the towing eye (1) by hand.

**NOTE:**

*It is recommended to secure the cover with tape to prevent damage during towing.*

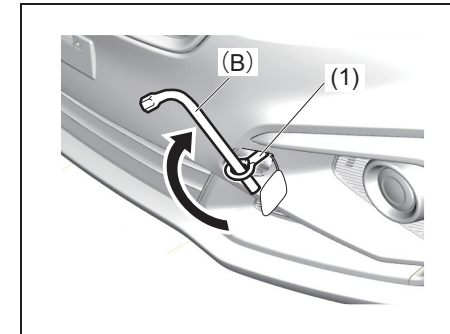


73R0185

- 4) To tighten the towing eye (1), turn it clockwise by using a wheel wrench (B) until the towing eye (1) is securely installed.

To remove the towing eye (1), reverse the installation procedure.

## OTHER CONTROLS AND EQUIPMENT

### Rear

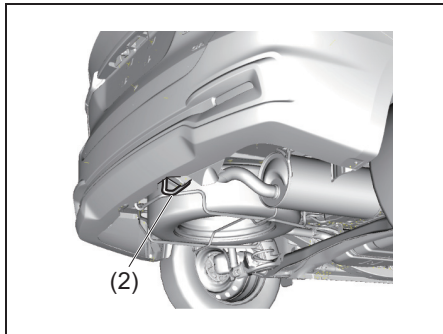


73R0104

The frame hook (2) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only.

#### **NOTICE**

To prevent damage to the vehicle, never use the frame hook (2) for trailer / train shipping.

### Other Holes

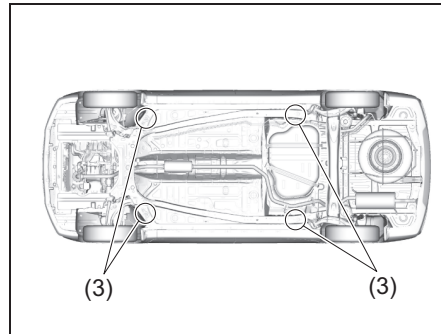

73R0105

The frame holes (3) are provided only for transporting by a car carrier trailer.

#### **NOTICE**

Do not use the frame holes (3) for towing purpose. These holes may break and cause serious injury or damage.

||  
==

|

||  
==

—


—

==  
||

==  
|



INSPECTION AND MAINTENANCE

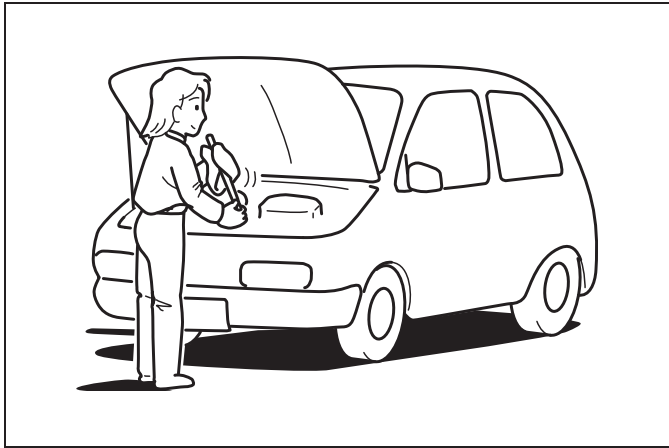

60G410

Maintenance Schedule .....	6-2
Periodic Maintenance Schedule .....	6-2
Drive Belt .....	6-6
Engine Oil and Filter .....	6-6
Engine Coolant .....	6-10
Air Cleaner .....	6-11
Spark Plugs .....	6-12
Gear Oil .....	6-12
Clutch Pedal .....	6-13
Brakes .....	6-14
Steering Wheel .....	6-16
Tires .....	6-17
Lead-acid Battery .....	6-19
Fuses .....	6-22
Headlight Aiming .....	6-26
Bulb Replacement .....	6-26
Wiper Blades .....	6-31
Windshield Washer Fluid .....	6-33
Air Conditioning System .....	6-34

## INSPECTION AND MAINTENANCE

### EXAMPLE



72SM06020

### ⚠ WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

- To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, be sure that the lead-acid battery is disconnected and the ignition switch has been in LOCK position for at least 90 seconds before performing any electrical service work on your MARUTI SUZUKI vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

(Continued)

### ⚠ WARNING

(Continued)

- Do not leave the engine running in garages or other confined areas.
- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, make sure that the parking brake is set fully and the transmission is in Neutral.
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the lead-acid battery. Flammable fumes are present.

(Continued)

### ⚠ WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative lead-acid battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

## INSPECTION AND MAINTENANCE

### Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

#### WARNING

**MARUTI SUZUKI** recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorised workshop.

#### NOTICE

**Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use MARUTI SUZUKI genuine replacement parts or their equivalent.**

### Periodic Maintenance Schedule

“C”: Clean

“R”: Replace or Change

“I”: Inspect, clean, adjust, lubricate or replace as necessary

“L”: Lubricate

“T”: Tighten to Specified Torque

“O”: Rotate

#### NOTE:

*This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.*

## INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.			FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
ENGINE												
1-1	Generator drive Belt (Wear)	Non-ISG model	–	–	I	I	I	I	I	I	I	R
		ISG model	–	–	I	I	R	I	I	R	I	I
1-2	Water pump drive belt (Wear)		–	–	I	I	I	I	I	I	I	R
1-3	Engine Coolant (Level, Leakage)		I	I	I	R	I	R	I	R	I	R
1-4	Engine oil, engine oil filter and drain plug gasket (Level, Leakage)		I	I	R	R	R	R	R	R	R	R
1-5	Cooling system hoses and connections (Leakage and Damage)		I	I	I	I	I	I	I	I	I	I
1-6	Engine Mounting & manifold fixing (Loose, Damage)		–	–	I	–	I	–	I	–	I	–
1-7	Exhaust System (Noise, Leakage etc.)		–	I	–	I	–	I	–	I	–	I
1-8	Positive Crank Case Ventilation System (Hoses, Connections and Valve)		–	I	–	I	–	I	–	I	–	I
IGNITION												
2-1	Ignition wire (Damage, Deterioration)		–	–	–	I	–	I	–	I	–	I
2-2	Spark Plug	Petrol	Replace after every 1,00,000 KM or 84 months whichever comes first.									
		CNG	Replace after every 50,000 KM or 48 months whichever comes first.									
FUEL												
3-1	Air cleaner filter element	Paved-road	Clean after every 5,000 KM. Replace after every 40,000 KM.									
		Dusty Condition	Clean after every 2,500 KM or as required. Replace after every 40,000 KM.									
3-2	Fuel tank cap, fuel lines and connections (Leakage and Damage)		–	I	–	–	–	I	–	–	–	I
3-3	Fuel Filter		Replace after every 1,00,000 KM or 120 months whichever comes first.									
3-4	Fuel Tank		–	–	–	–	–	I	–	–	–	I
CLUTCH AND TRANSMISSION												
4-1	Clutch fluid (Level, Leakage)		I	I	I	I	I	I	I	I	I	I
			Replace after every 40,000 KM or 24 months whichever comes first.									
4-2	Clutch slipping (Dragging or Excess Damage)		I	I	I	I	I	I	I	I	I	I
4-3	Manual Transaxle Oil (Level, Leakage)		I	I	I	I	I	I	I	I	I	I
4-4	Gear shifter (Operation)		I	I	I	I	I	I	I	I	I	I

## INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.			FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
DRIVE SHAFT												
5-1	Drive shaft noise											
5-2	Drive shaft boot (boot damage)		—									
BRAKE												
6-1	Brake Fluid (Level, Leakage)											
		Replace after every 40,000 KM or 24 months whichever comes first.										
6-2	Brake pedal (Pedal - wall clearance)											
6-3	Parking brake lever and cable (Play, Damage)											
6-4	Brake disc and pad (Wear)		—									
6-5	Brake drum and shoes (Wear)		—	—								
6-6	Brake hoses and pipes (Fluid leakage, Damage)											
6-7	Master cylinder, wheel cylinder and caliper piston (Fluid leakage, Boot/Seal damage)											
WHEEL												
7-1	Tires (Air pressure, Abnormal wear, Crack and Rotation)			I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	
7-2	Wheels (Damage)											
7-3	Front/Rear wheel bearing (Loose, Damage)											
FRONT / REAR SUSPENSION												
8-1	Suspension strut (Oil leakage, Damage)											
8-2	Suspension arms / Knuckle support and Torsion rods (Loose, Damage)		—									
8-3	Rear spring (Damage)											
8-4	Shock absorbers (Oil leakage, Damage)											
8-5	All bolts and nuts (Loose)		—	T	T	T	T	T	T	T	T	
STEERING												
9-1	Steering wheel (Play, Loose)											
9-2	All rods and arms (Loose, Damage, Wear)											
9-3	Tilt Steering (Operation)											

## INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST							
		km (x1000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
ELECTRICAL												
10-1	Battery - electrolyte (Level, leakage) and voltage	I	I	I	I	I	I	I	I	I	I	I
10-2	Wiring harness connection (Loose, Damage)	–	I	I	I	I	I	I	I	I	I	I
10-3	Lighting system (Operation, Stains, Damage)	I	I	I	I	I	I	I	I	I	I	I
10-4	Wiper (Operation, Stains, Damage)	I	I	I	I	I	I	I	I	I	I	I
10-5	Horn (Operation)	I	I	I	I	I	I	I	I	I	I	I
10-6	AUX, USB and accessory socket (Operation)	–	I	I	I	I	I	I	I	I	I	I
BODY												
11-1.	All chassis bolts and nuts (Tighten)	–	T	T	T	T	T	T	T	T	T	T
11-2	All latches, hinges and locks (Function)	I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAD TEST												
12-1	Operation of Brakes, gear shifting and speedometer	I	I	I	I	I	I	I	I	I	I	I
12-2	Body and chassis noise	I	I	I	I	I	I	I	I	I	I	I
AIR CONDITIONER												
13-1	Tighten compressor mounting bolt	–	T	T	T	T	T	T	T	T	T	T
13-2	All hose joint (Check, Tighten)	I	I	I	I	I	I	I	I	I	I	I
13-3	Check functioning of Recirculating flap	I	I	I	I	I	I	I	I	I	I	I
13-4.	Clean condenser with low pressure water	–	C	C	C	C	C	C	C	C	C	C
13-5.	Check all mounting bolts	I	I	I	I	I	I	I	I	I	I	I
13-6	Air conditioner filter element	I	I	I	I	R	I	I	R	I	I	I

## Drive Belt

### ⚠ WARNING


**When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.**

The drive belts tension is adjusted automatically. If the belt is too loose, insufficient lead-acid battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a Maruti Suzuki authorised workshop.

## Engine Oil and Filter

### Specified Oil

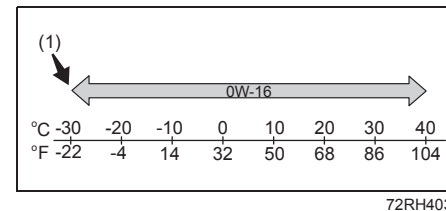

72RH4037

#### (1) Recommended

Be sure that the engine oil you use comes under the quality classification as listed below.

- API SN, SP
- ILSAC GF-6


Select the appropriate oil viscosity according to the above chart.

SAE 0W-16 (1) is the best choice for good fuel economy and good startability in cold weather.


#### NOTE:

- The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.
- We recommend that you use MARUTI SUZUKI genuine oil. To purchase it, see a Maruti Suzuki authorised workshop.

## Oil Level Check

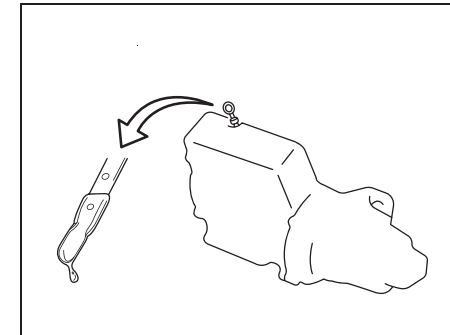

72R0117

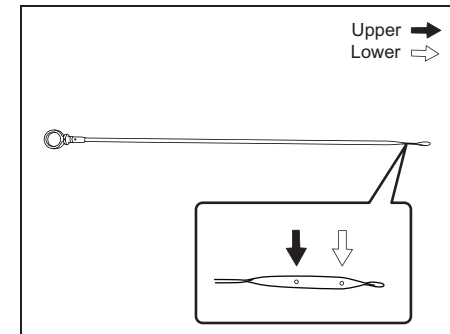

72R0118

## INSPECTION AND MAINTENANCE


It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

### NOTICE

**Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.**

### Refilling

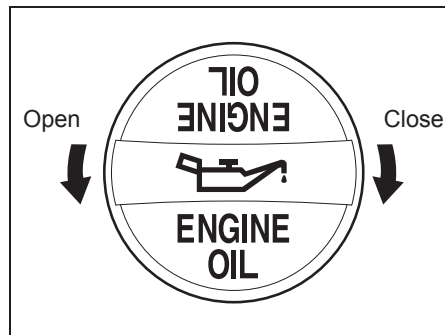


68PH00762

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

### Changing Engine Oil and Filter

Drain the engine oil while the engine is still warm.

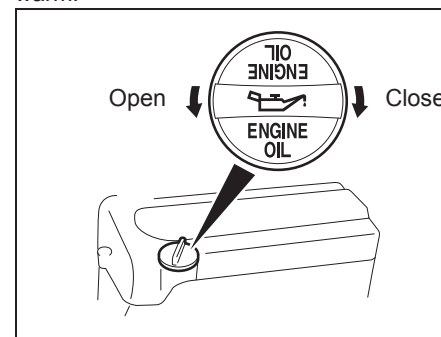

66RH001


- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain the engine oil.

### CAUTION

**The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.**



## INSPECTION AND MAINTENANCE

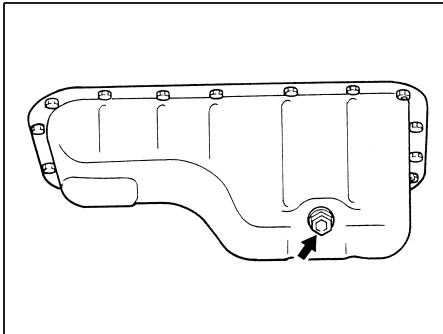

60G306

**Tightening torque for drain plug**  
**35 Nm (3.6 kg-m, 25.8 lb-ft)**

### **⚠ WARNING**

- Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.
- Repeated, prolonged contact with used engine oil may cause skin cancer.
- Brief contact with used oil may irritate skin.

(Continued)

### **⚠ WARNING**


(Continued)

- To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.
- Launder any clothing or rags if it is with oil.
- Recycle or properly dispose of used oil and filters.

- 4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

### **Oil Filter Replacement**

- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- 2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- 3) Smear a small amount of engine oil around the rubber gasket of the new oil filter.
- 4) Screw the new filter by hand until the filter gasket contacts the mounting surface.

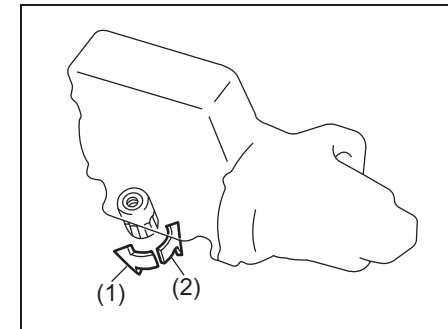


54G092

- (1) Loosen
- (2) Tighten

## INSPECTION AND MAINTENANCE

### Tightening (viewed from filter top)

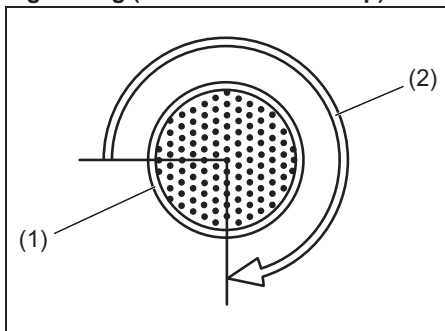

- (1) Oil filter  
(2) 3/4 turn

#### NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

- 5) Tighten the filter as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

#### Tightening torque for oil filter

3/4 turn or  
14 Nm (1.4 kg-m, 10.3 lb-ft)

#### NOTICE

To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

### Refill with Oil and Oil Leakage Check

- 1) Pour oil through the filler hole and install the filler cap.  
For the approximate capacity of the oil, refer to "Capacities" in "SPECIFICATIONS" section.
- 2) Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- 3) Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

#### NOTICE

- When replacing the oil filter, it is recommended that you use a MARUTI SUZUKI genuine replacement filter. If you use an aftermarket filter, make sure it is of equivalent quality and follow the manufacturer's instructions.
- Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have the vehicle inspected by a Maruti Suzuki authorised workshop.

## Engine Coolant

### Selection of Coolant

To maintain optimum performance and durability of your engine, use MARUTI SUZUKI genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system, Maruti Suzuki authorised workshop can help you select the proper coolant.

### NOTICE

**To avoid damaging your cooling system:**

- **Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.**
- **Check that the proper mix is 30/70 and in no case higher than 70/30. Concentrations greater than 70/30 coolant to distilled water will cause overheating conditions.**
- **Do not use straight coolant nor plain water.**
- **Do not add extra inhibitors or additives. They may not be compatible with your cooling system.**
- **Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine damage.**

### Coolant Level Check

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks.

### Adding Coolant

### ⚠ WARNING


**Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.**

- **Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.**
- **Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.**
- **If coolant gets in the eyes, flush with water and seek medical attention.**
- **Wash thoroughly after handling coolant.**
- **Keep engine coolant out of the reach of children and pets.**

## INSPECTION AND MAINTENANCE

### NOTICE

- The mixture you use should contain 30% concentration of anti-freeze.
- If the lowest ambient temperature in your area is expected to be  $-35^{\circ}\text{C}$  ( $-31^{\circ}\text{F}$ ) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.

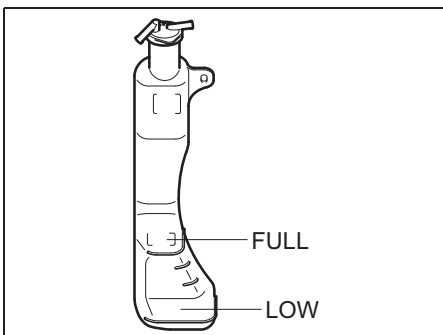

73R0110

If the coolant level is below "LOW" mark, coolant should be added. While the engine is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark. Never fill the reservoir tank above "FULL" mark.

### NOTICE


When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

### Coolant Replacement

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

### Air Cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

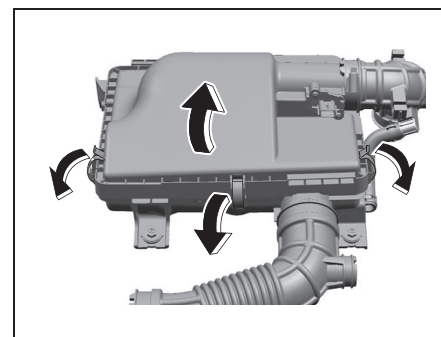

72RH4031

- 1) Unclamp the side and center clamps and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.
- 2) Clamp the side and center clamps securely.

## INSPECTION AND MAINTENANCE

### Spark Plugs

#### Spark plug replacement and inspection


Since special procedures, materials and tools are required, it is recommended that you trust this job to a Maruti Suzuki authorised workshop.

### Gear Oil

#### Specified Gear Oil


When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use:  
"MARUTI GENUINE GEAR OIL 75W" gear oil.

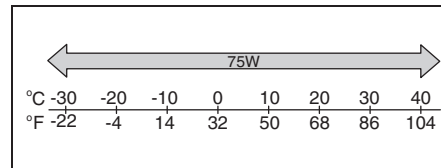

54PI20706

### Gear Oil Level Check

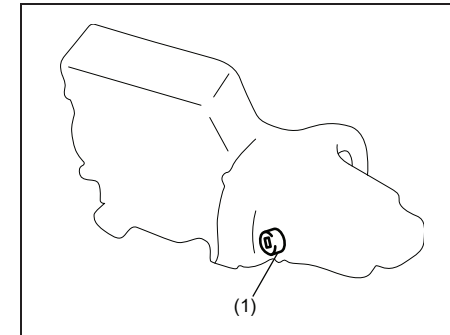

60MH047

(1) Oil filler and level plug

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug (1).
- 3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.
- 4) If the oil level is low, add gear oil through the oil filler and level plug hole (1) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

## INSPECTION AND MAINTENANCE

Tightening torque for oil filler and level plug (1)

21 Nm (2.1 kg-m, 15.5 lb-ft)

### ⚠ CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug is cool enough to touch with your bare hands before inspecting gear oil level.

### NOTICE


When tightening the plug, apply the following sealing compound or equivalent to the plug threads to prevent oil leakage.

MARUTI SUZUKI Bond No. "1216E" or "1217G"

### Gear Oil Change

Since special procedures, materials and tools are required, ask a Maruti Suzuki authorized workshop for this job.

## Clutch Pedal

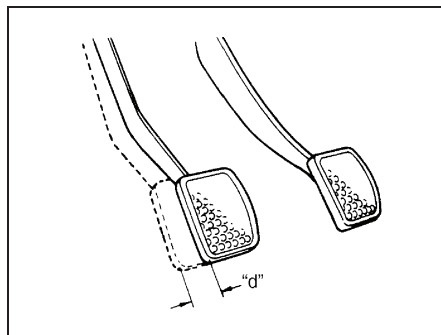


54G274

### Clutch pedal play "d": MAX 10 mm

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be less than the specified values. If the play is more than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorised workshop.

## Clutch Fluid

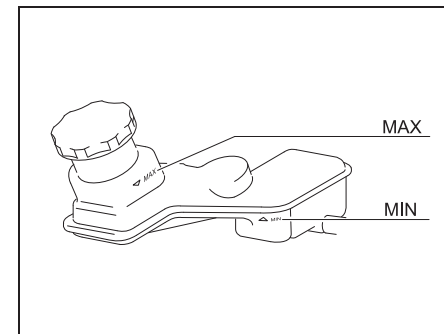


73R0115

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your Maruti Suzuki authorised workshop. If the clutch fluid level is near the "MIN" line, fill it up to the "MAX" line with Maruti Suzuki Genuine Brake Fluid (MGBF) or DOT 3.

We highly recommend to use "Maruti Suzuki Genuine Brake Fluid" (MGBF).

**NOTICE**

Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch. Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

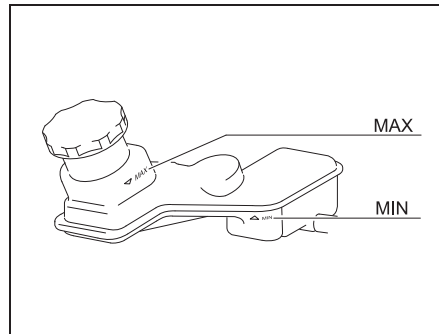**Brakes**  
**Brake fluid**

73R0116

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines.

**NOTICE**

- If your brake fluid level is near "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case, ask a Maruti Suzuki authorised workshop to inspect the brake system.
- Brake fluid can damage painted surfaces. Use caution when refilling the reservoir.

**⚠ WARNING**

Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.

- If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument panel will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask a Maruti Suzuki authorised workshop to inspect the brake system.
- A rapid fluid loss indicates a leakage in the brake system which should be inspected by a Maruti Suzuki authorised workshop immediately.
- Do not use any fluid other than Maruti Genuine Brake Fluid (MGBF) or DOT3 brake fluid. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

(Continued)

## INSPECTION AND MAINTENANCE

### ⚠ WARNING

(Continued)


- **Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.**

**NOTE:**

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.
- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.
- Replace your brake fluid according to the maintenance schedule in your Owner's Manual.

### Brake Pedal

Check if the brake pedal stops at the regular height without “spongy” feeling when you depress it. If not, have the brake system inspected by a Maruti Suzuki authorised workshop. If you doubt the brake pedal for the regular height, check it as follows:

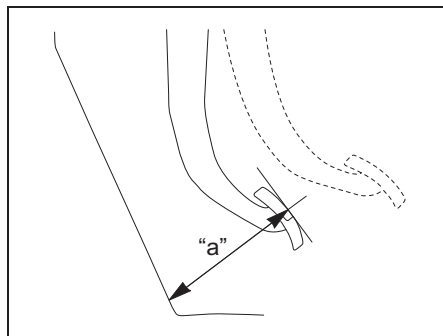

54G108


**Pedal to floor carpet minimum distance “a”:  
51 mm**

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorised workshop.

**NOTE:**

*When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.*

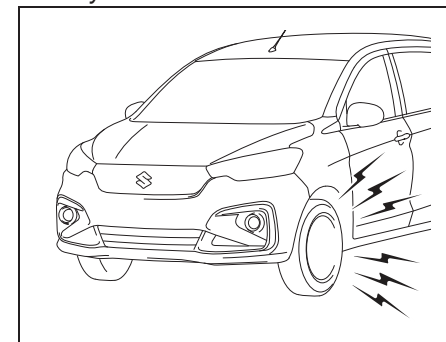

60G104S



**⚠ WARNING**


If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.

If you hear this noise, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop. Continued driving with this condition can cause an accident.

**⚠ CAUTION**

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by a Maruti Suzuki authorised workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels.)
- Excessive pedal travel
- Brake dragging
- Excessive noise

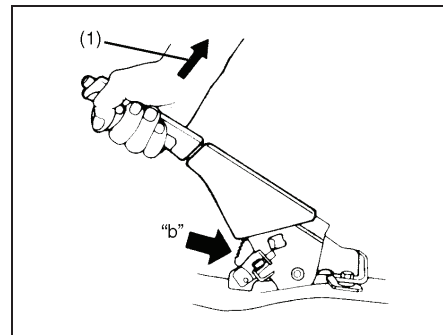**Parking Brake**

54G109


**Ratchet tooth specification "b":**

**4th – 9th**

**Lever pull force (I):**

**200 N (20 kg, 45 lbs)**

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorised workshop.

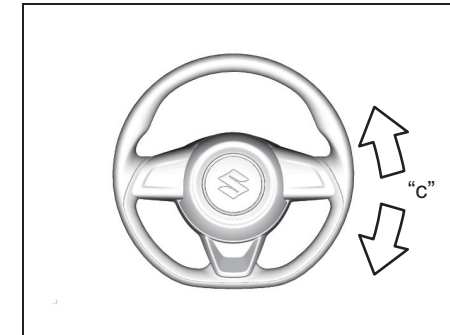**Steering Wheel**

73R0117

**Steering wheel play "c":**


**0 – 30 mm (0.0 – 1.2 in.)**

Check the play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is outside the specification or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorised workshop.

## INSPECTION AND MAINTENANCE

### Tires

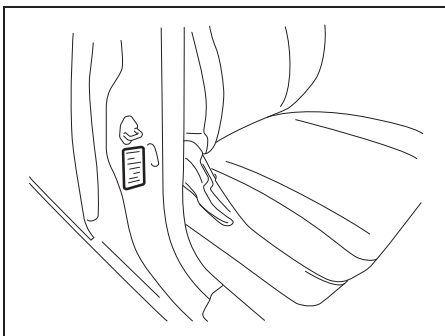

73R0118

The front and rear tire pressure specifications for your vehicle are listed in the tire information label. Both front and rear tires should have the specified tire pressure.


#### Tire Inspection

Inspect your vehicle's tires at least once a month or before long trip by performing the following checks:

- 1) Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.

#### ⚠ WARNING

- Air pressures should be checked when the tires are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.
- Never underinflate or over-inflate the tires.  
Underinflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim.  
Overinflation can cause the tire to burst, resulting in personal injury. Overinflation can also cause unusual handling characteristics which may result in an accident.

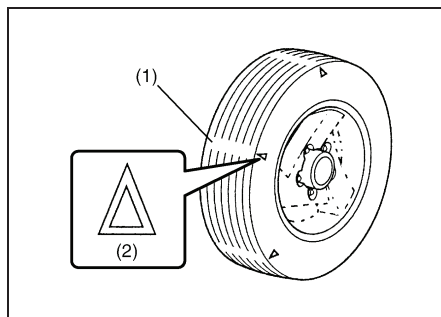

54G136

- (1) Tread wear indicator
- (2) Indicator location mark

- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
- 3) Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by a Maruti Suzuki authorised workshop.

#### ⚠ CAUTION

Hitting curbs and running over rocks can damage tires and affect wheel alignment. Have tires and wheel alignment checked periodically by a Maruti Suzuki authorised workshop.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tires.

## INSPECTION AND MAINTENANCE

### ⚠ WARNING


- Your MARUTI SUZUKI vehicle is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.
- Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tire combinations approved by MARUTI SUZUKI as standard or optional equipment for your vehicle.

### NOTICE

Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorised workshop before purchasing replacement tires that differ in size from the original tires.


### Tire Rotation

#### 5-tire rotation

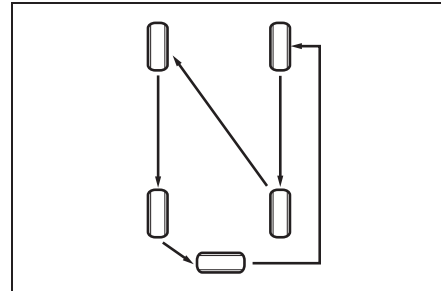

80JK040

#### 4-tire rotation

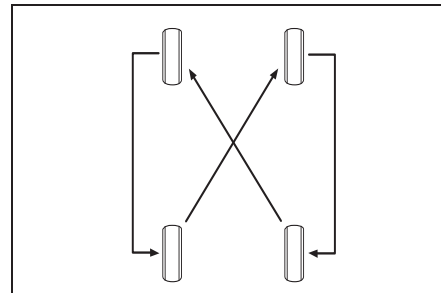

54G114

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated every 10000 km. After rotation, adjust front and rear tire pressures to the specification listed in your vehicle's Tire Information Label.

## INSPECTION AND MAINTENANCE

### Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at Maruti Suzuki authorised workshop.

### Wheel Alignment

In case of abnormal tire wear or pulling towards one side, have the wheel aligned at Maruti Suzuki authorised workshop.

### Tubeless Tires (If equipped)

The vehicle is equipped with Tubeless Tires. In tubeless tire, a thin layer of butyl rubber is used for lining the inside of the tubeless tire. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tire bead and wheel rim. Tubeless tires are having advantage of slow air loss and preventing sudden deflation while driving.

### Care and maintenance tips for tubeless tires

- 1) Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tire damage.
- 2) In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tire has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tire is fitted, replace the valve.

- 5) If continuous high speed driving is required, increase pressure of tires by 5 psi over recommended inflation pressure.
- 6) Never run the tire beyond TWI (Tread wear indicator). The tire is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tire marked by a triangular symbol (TWI).
- 7) Always prefer tubeless tire mounting machine. In case of manual mounting tire/ wheel rim damage may occur.
- 8) In case of any problem, please get in touch with a Maruti Suzuki authorised workshop.

## Lead-acid Battery


### ⚠ WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the lead-acid battery or an explosion may occur. Never smoke when working in the vicinity of the lead-acid battery.
- When checking or servicing the lead-acid battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the lead-acid battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or lead-acid battery, follow the jump starting instructions in "EMERGENCY SERVICE" section of this manual if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from lead-acid battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

## INSPECTION AND MAINTENANCE

### NOTICE

If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "SPECIFICATIONS" section for details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult a Maruti Suzuki authorized workshop.

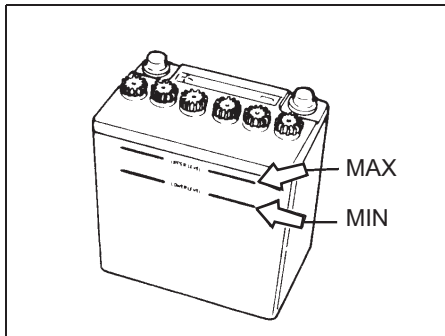

54G118

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery fluid must be kept between the "MAX" and the "MIN" level lines at all times. You should periodi-

cally check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge

### ⚠ WARNING

If the battery is used with battery level being less than the lower level line "MIN", it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN".


### NOTICE

If the battery liquid is added more than the upper level line "MAX", liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid over-spills, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX".

### NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" and lower level "MIN", add distilled water till it reaches the upper level line "MAX".

### Replacement of the battery

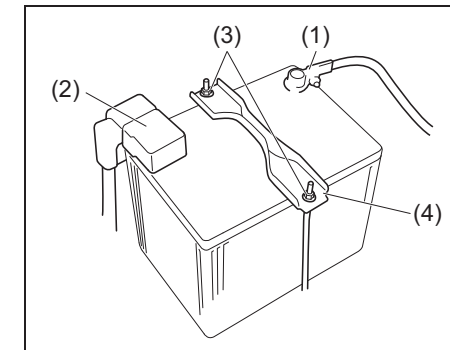

68PM00711

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).
- 4) Remove the battery.

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

## INSPECTION AND MAINTENANCE

### NOTE:


- When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated. These functions are required to be reset after the battery is reconnected.
- Do not disconnect the battery terminals for at least one minute after the ignition switch is turned off.

### ⚠ WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injured.

### NOTICE

Do not use regular battery in ISG Vehicle. Use only Exide Conservo N55 battery, else it may deteriorate Smart Hybrid performance.

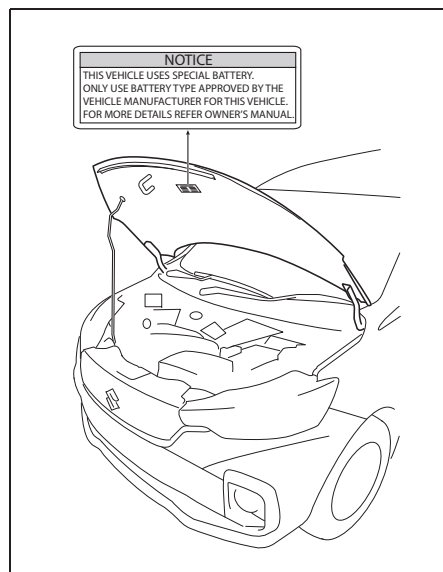


You may find this label on the inside of hood.

### NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "OFF".

(Battery label)

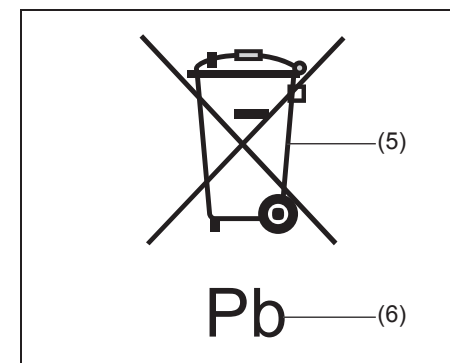

(5) Crossed-out wheeled bin symbol

(6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead.

## INSPECTION AND MAINTENANCE

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult an Maruti Suzuki authorised workshop.

### Fuses

Your vehicle has three types of fuses, as described below:

#### Main fuse

The main fuse takes current directly from the lead-acid battery.

#### Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

#### Individual fuses


These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller (I) provided in the relay box cover.


#### NOTE:

- "Blank" indicates that fuse is not applicable in the variant, even though name of fuse might be available on cover of fuse box of your vehicle.
- Some fuse may not be applicable to your vehicle according to the variant of vehicle, even though it is not mentioned as blank.

### Relay box cover

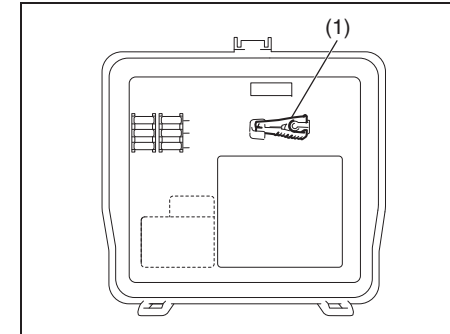


73R0204

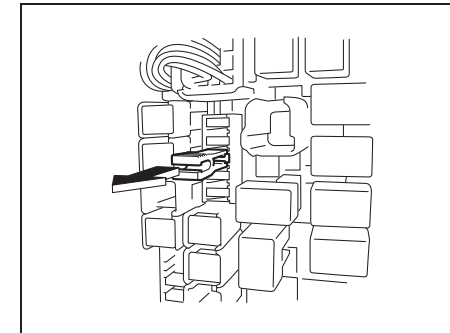

63J095


INSPECTION AND MAINTENANCE

Fuses in Engine Compartment

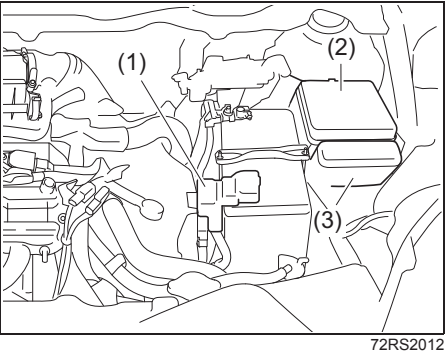


- (1) Main fuse box  
(2) Relay box  
(3) Sub relay box (if equipped)


Main fuse box

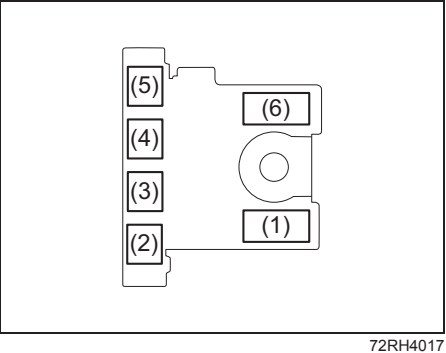

Relay box

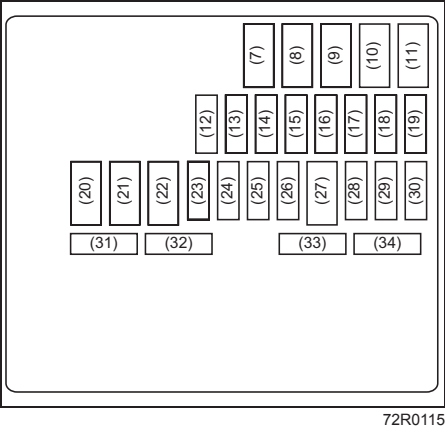

Sub relay box (if equipped)

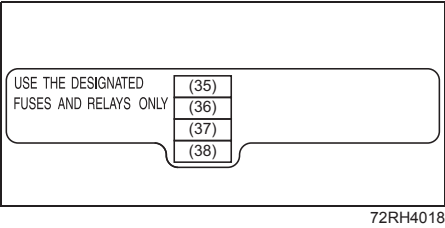

MAIN FUSE / PRIMARY FUSE		
(1)	120 A	FL1 (If equipped)
(2)	100 A	FL2
(3)	80 A	FL3

(4)	100 A	FL4
(5)	50 A	FL5
(6)	200 A	FL6
(7)	30 A	Starting motor
(8)	40 A	Blower fan
(9)	–	Blank
(10)	40 A	ABS motor
(11)	40 A	Ignition switch
(12)	30 A	Back up
(13)	–	Blank
(14)	–	Blank
(15)	–	Blank
(16)	25 A	ABS SOL
(17)	–	Blank
(18)	–	Blank
(19)	25A	Headlight HI
(20)	30 A	Radiator fan
(21)	–	Blank
(22)	–	Blank
(23)	7.5 A	CNG valve (if equipped)
(24)	15 A	Headlight (Left)
(25)	15 A	Headlight (Right)
(26)	–	Blank




## INSPECTION AND MAINTENANCE

(27)	50 A	Ignition switch -2
(28)	–	Blank
(29)	15 A	FI (GAS)
(30)	10 A	Air compressor
(31)	15 A	Headlight HI (Left)
(32)	15 A	Headlight HI (Right)
(33)	5 A	Starting Signal
(34)	7.5 A	CNG (if equipped)
(35)	–	Blank
(36)	–	Blank
(37)	15 A	Headlight HI (Right)
(38)	15 A	Headlight HI (Left)

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a MARUTI SUZUKI genuine replacement parts or equivalent for individual fuses.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover and in the relay box.

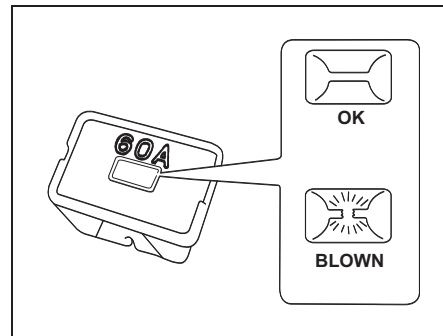

60G111

### ⚠ WARNING

**If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorised workshop. Always use a MARUTI SUZUKI genuine replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.**

### NOTE:


*Make sure that the fuse box always carries spare fuses.*

### Fuses under Dashboard



73R0121


## INSPECTION AND MAINTENANCE

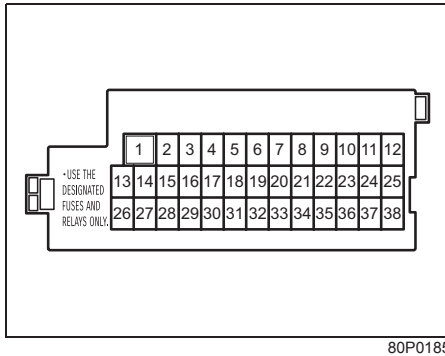

PRIMARY FUSE		
(1)	30 A	Power window
(2)	10 A	Meter
(3)	15 A	Ignition coil
(4)	5 A	Ignition-1 signal 2
(5)	20 A	Shift
(6)	20 A	S/R
(7)	–	Blank
(8)	20 A	Door lock
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	5 A	A-STOP

(12)	–	Blank
(13)	5 A	ABS control module
(14)	15 A	Rear air conditioner
(15)	5 A	Ignition-1 signal 3
(16)	10 A	Dome light-2
(17)	5 A	Dome light
(18)	15 A	Radio
(19)	5 A	CONT
(20)	5 A	Key2
(21)	20 A	Power window timer
(22)	5 A	Key
(23)	15 A	Horn
(24)	5 A	Tail light (Left)
(25)	10 A	Tail light
(26)	10 A	Airbag
(27)	10 A	Ignition-1 signal
(28)	10 A	Back up light
(29)	–	Blank
(30)	20 A	Rear Defogger
(31)	10 A	Heated Mirror
(32)	15 A	ACC2
(33)	5 A	ACC

(34)	10 A	Wiper
(35)	5 A	Ignition-2 signal
(36)	15 A	Washer
(37)	25 A	Front wiper
(38)	10 A	Stop light

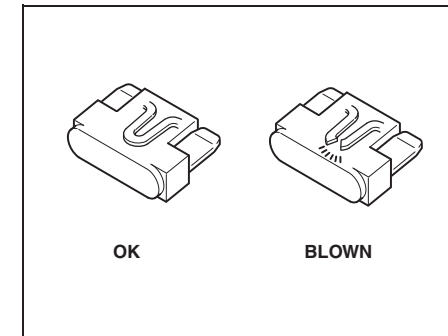

81A283

**⚠ WARNING**

Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.

**NOTE:**

According to the vehicle specifications, fuse setting may be different from the specifications which are shown in the above tables.

**Headlight Aiming**

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

**Bulb Replacement****⚠ CAUTION**

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

**NOTICE**

The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

**NOTICE**

- Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your Maruti Suzuki authorised workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in SPECIFICATIONS.

## INSPECTION AND MAINTENANCE

### NOTE:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights. The above-mentioned phenomena are not vehicle malfunction. However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have your vehicle inspected by a Maruti Suzuki authorised workshop.

### Non-disassembled type lights

Since the lights shown below are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.


If you need to replace the assembly, ask your Maruti Suzuki authorised workshop.

- Tail/brake light
- Side turn signal light/hazard warning light on outside rearview mirrors
- High mount stop light

6-27

### Headlight


#### Low beam

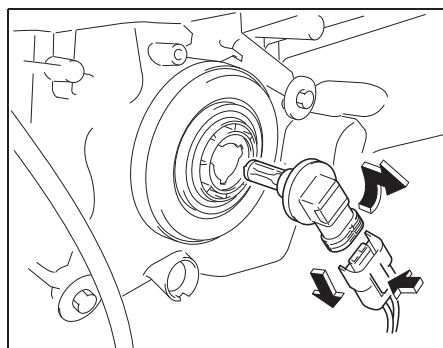

Open the engine hood while the engine is stopped.

Disconnect the coupler with pushing the lock release. Turn the bulb holder counterclockwise and remove it.

### High beam

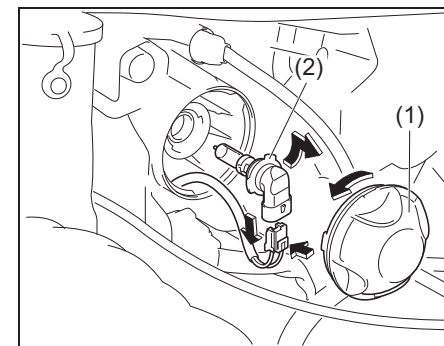


Open the engine hood while the engine is stopped.

Turn the cover (1) counterclockwise and remove it.

Turn the bulb (2) holder counterclockwise and remove it. Disconnect the coupler with pushing the lock release.


## INSPECTION AND MAINTENANCE

### Front turn signal light Front position light

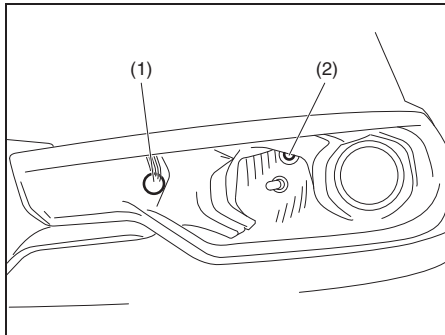


73R0124

- (1) Front turn signal light  
(2) Front position light

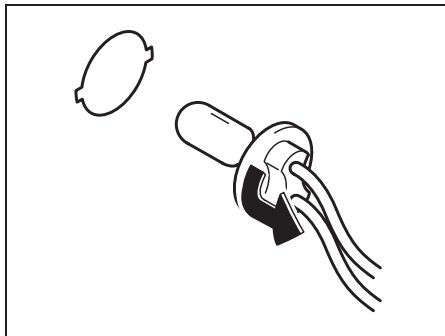

68PH0073

- 1) Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light or the front position light from the light housing, turn the holder counterclockwise and pull it out.

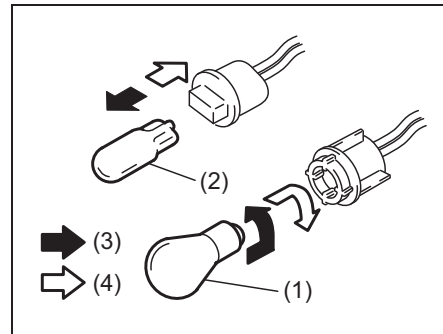

68PM00721

- (3) Removal  
(4) Installation

- 2) To remove the bulb of the front turn signal light (1) from the bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.  
To remove and install the bulb of the front position light (2), simply pull out or push in the bulb.

#### NOTE:

For turn signal / position light, it is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for

bulb replacement since special procedures are required.


### Side Turn Signal Light

#### Outside rearview mirror type

LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

### Rear combination light (tail, stop, turn signal, etc.)

For LED tail / brake light, it is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

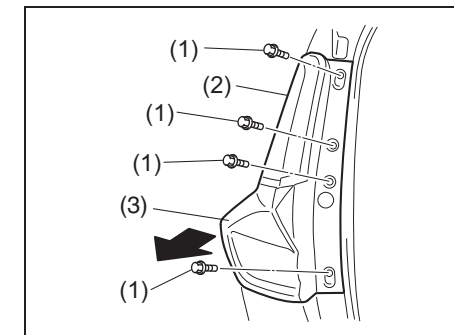


73R0186

## INSPECTION AND MAINTENANCE

With the tailgate opened, remove the bolts (1) and tail light (2), and then pull the rear combination light (3) firmly to the rearward.


### NOTE:

When it is difficult to remove the rear combination lamp from the body at a low temperature (10 deg. C or less), pour water between the body and the rear combination lamp to make the removal smooth.

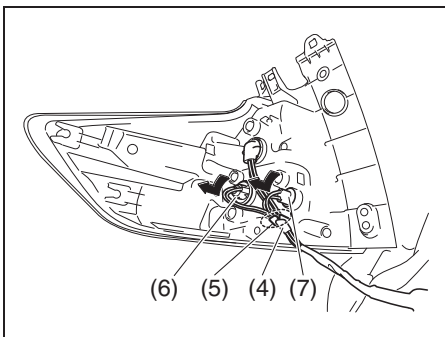

73R0187


- 1) Remove the wire (4) from a clamp (5).
- 2) To remove the bulb holder of the rear turn signal light (6) or the reversing light (7) from the light housing, turn the holder counterclockwise and pull it out.

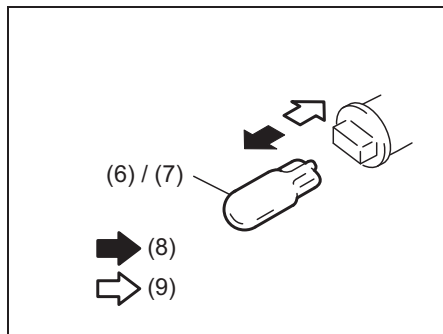


52RS70050

- (8) Removal
- (9) Installation

- 3) To remove and install the bulb of the rear turn signal light (6) or the reversing light (7), simply pull out or push in the bulb.

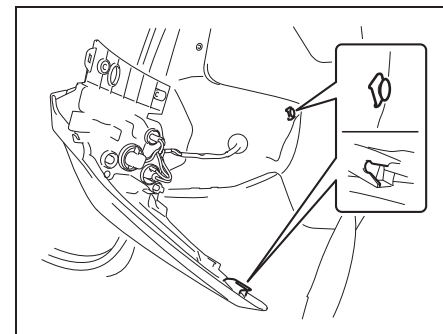

73R0188

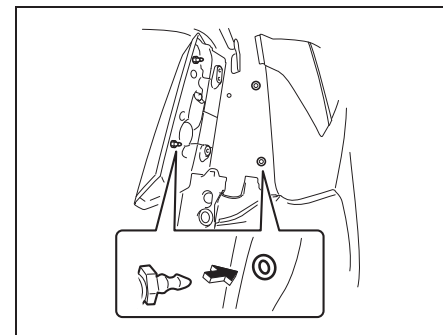


73R0189

### NOTE:

When reinstalling the light housing, check that the clips are properly attached.


## INSPECTION AND MAINTENANCE

### License plate light

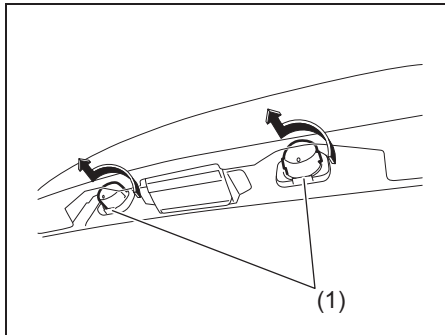

73R0211

- 1) Remove the cover (1) by turning it counterclockwise.

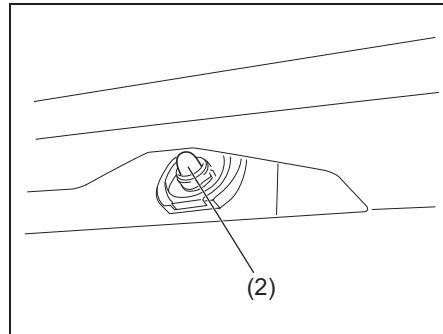


73R0192

- 2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.

### Interior Light

#### Front

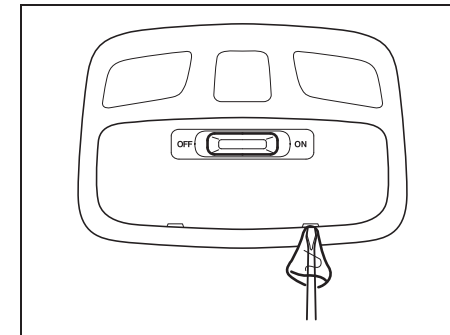


73R0212

### High-mount stop light

LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorised workshop for bulb replacement since special procedures are required.

## INSPECTION AND MAINTENANCE


### Rear

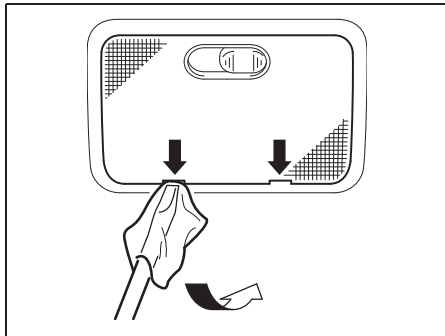

67LH084

Remove the lens by using a flat-bladed screwdriver covered with a soft cloth as shown. To install it, simply push it back in. The bulb can be removed by simply pulling it out. When replacing the bulb, make sure that the contact springs are holding the bulb securely.

### Wiper Blades

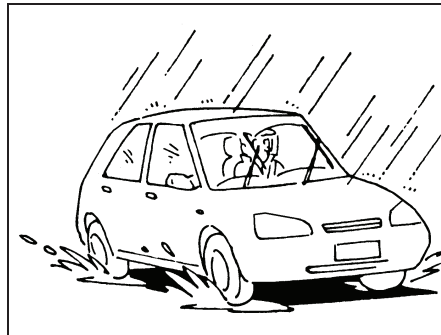

54G129

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

### NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.


#### NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a Maruti Suzuki authorised workshop for proper replacement method.



## INSPECTION AND MAINTENANCE

### For windshield wipers:

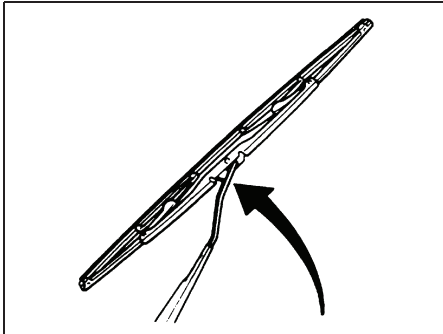


70G119

- 1) Hold the wiper arm away from the window.


#### NOTE:

When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first. Otherwise, the wiper arms may interfere with each other.

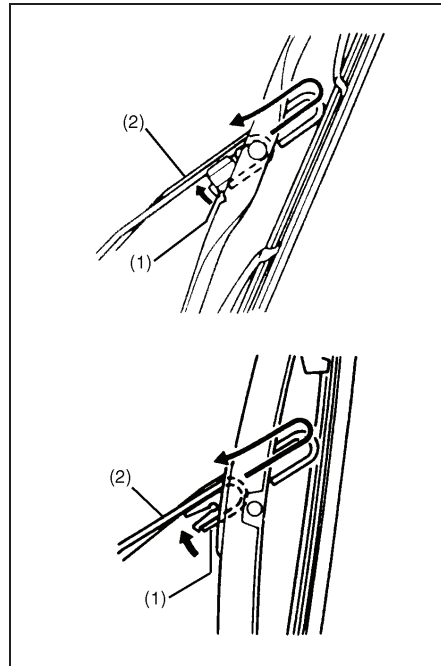


54G130

- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

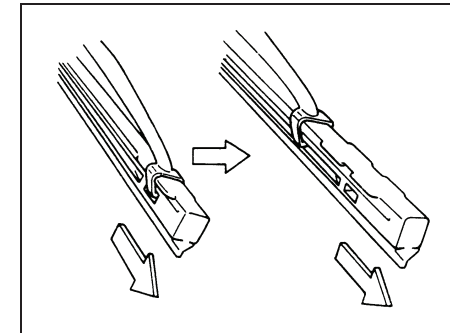

60A260

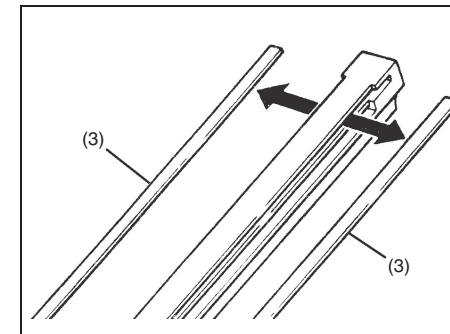


71LMT0708


- (3) Retainer

- 4) If the new blade is provided without the two metal retainers (3), move them from the old blade to the new one.

## INSPECTION AND MAINTENANCE

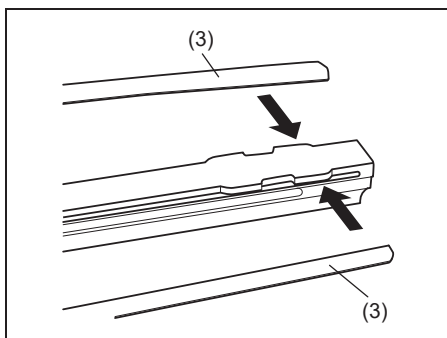

73R0194

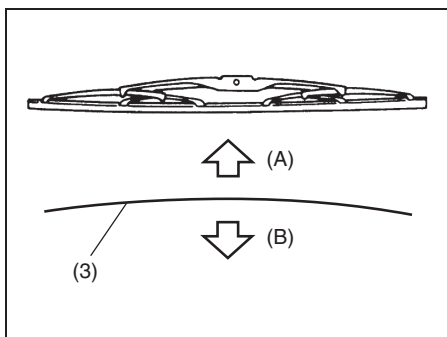


60MH072

(A) Up  
(B) Down

### NOTE:

When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustrations.

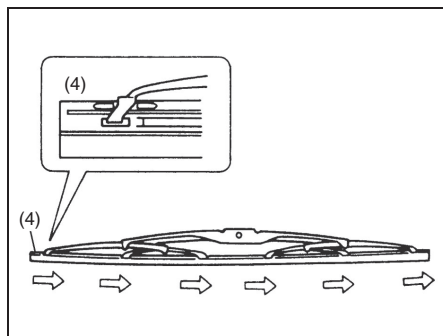


71LMT0707

(4) Locked end

- 5) Install the new blade in the reverse order of removal, with the locked end (4) positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

## Windshield Washer Fluid

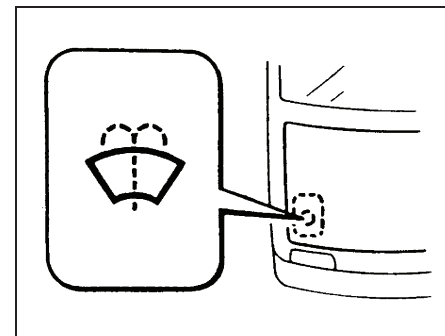

80JM078

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

**⚠ WARNING**

Do not use radiator antifreeze solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.

**NOTICE**


- Damage may result if the washer motor is operated with no fluid in the washer tank.
- Avoid use of hard water to prevent building of lime scale on the vehicle.

**Air Conditioning System**

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


**Air conditioner filter replacement**

Since special procedures are required, ask a Maruti Suzuki authorised workshop for this job.

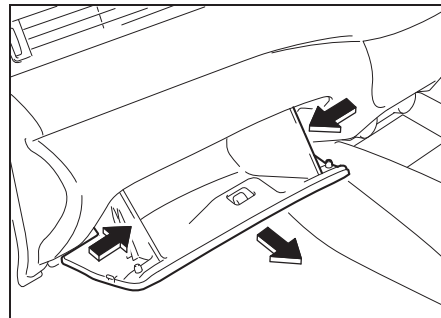

73R0201

- 1) To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.




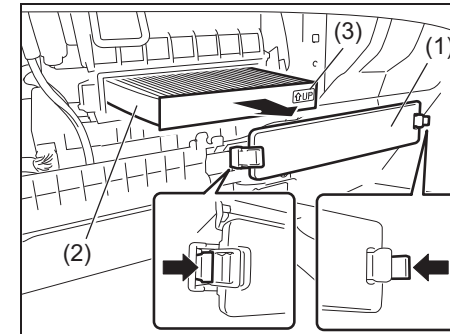


73R0202

- 2) Remove the cover (1) and pull out the air conditioner filter (2).


**NOTE:**

When you install a new filter, check that the UP mark (3) faces upward.



EMERGENCY SERVICE


Tyre Changing Tool ..... 7-1  
Jacking Instructions ..... 7-3  
Jump-Starting Instructions ..... 7-7  
Towing your vehicle ..... 7-9  
Engine trouble: Starter does not operate ..... 7-9  
Engine trouble: Does not start ..... 7-10  
Engine trouble: Overheating ..... 7-10  
Warning Triangle ..... 7-11

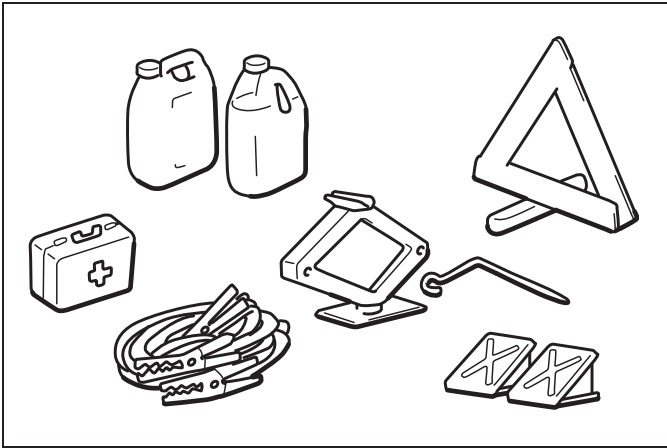

60G411

## EMERGENCY SERVICE


### Tyre Changing Tool

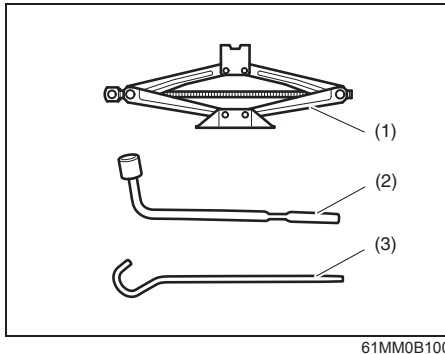

61MM0B100


- (1) Jack
- (2) Wheel wrench
- (3) Jack handle

The tyre changing tools are stowed in the side of the luggage compartment. Remove the cover to access the tools.

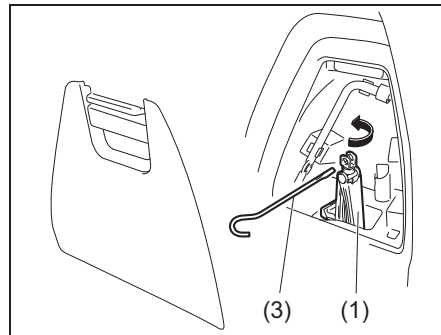

73R0126

To remove the jack (1), turn its shaft counterclockwise by using jack handle (3) and pull the jack out of the storage bracket.

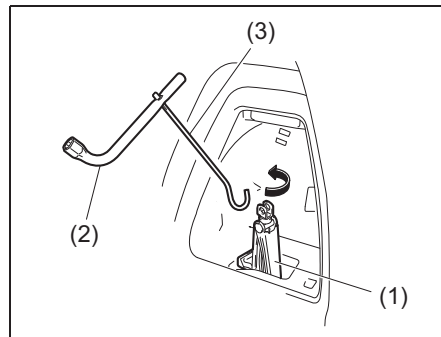

73R0203

#### NOTE:


If you are difficult to use the jack handle (3), use jack handle and wheel wrench (2) as shown in the illustration.



73R0205

To stow the jack, place it in the storage bracket and turn the shaft clockwise with hand.

## EMERGENCY SERVICE

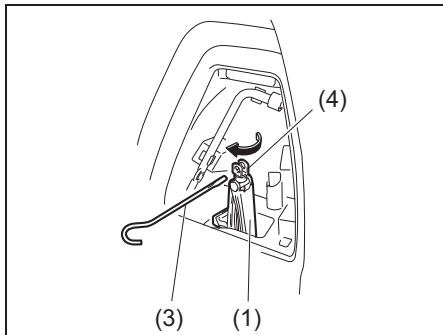

73R0206

After temporarily holding the jack (1) until it contacts the storage bracket, turn the shaft (4) approximately 90° to 180° by using jack handle (3) to securely hold the jack in place.

### ⚠ WARNING


After using the tyre changing tools, stow them securely or they can cause injury if an accident occurs.

### ⚠ CAUTION

The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.

The spare tyre is stowed under the rear floor.

To remove the spare tyre:

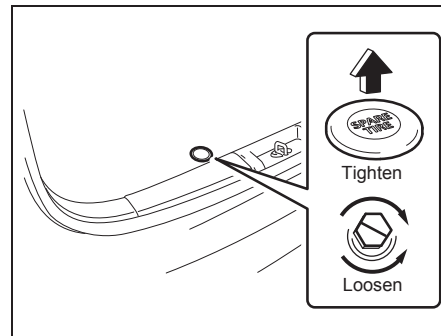


73R0127

- 1) Remove the cap and use a wheel wrench to loosen the hook bolt of the spare tyre holder. Then, rotate using the end of the jack handle.

### NOTICE

Loose the spare tyre holder hook bolt until you can remove the hook by yourself. If the bolt is loosen too much, the hook might off and the spare tyre might drop off to the ground.

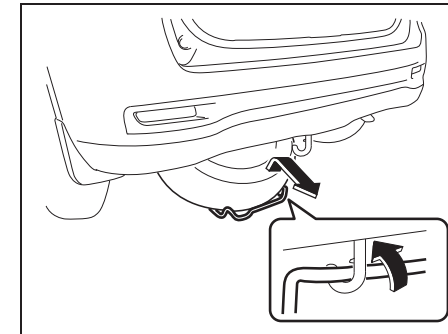

73R0128

- 2) Unhook the spare tyre holder and lower it slowly.
- 3) Remove the tyre.

To install the spare tyre:

- 1) Install the spare tyre facing up the outside of the wheel in the reverse order of removal.
- 2) Tighten the spare tyre holder hook bolt securely.

### ⚠ WARNING

Do not drive your vehicle with the loose spare tyre holder hook bolt, otherwise it may come loose or the spare tyre may drop off, which can result in an accident.

## EMERGENCY SERVICE

### NOTICE


Tighten the spare tyre holder hook bolt securely. However, do not overtighten the bolt, it may be warped or broken.

Tightening torque for the spare tyre holder hook bolt  
30 Nm (3.0 kg-m, 22.1 lb-ft)

### NOTICE

Make sure that the spare tire is fixed securely. Loosely fixed tire may cause noise during driving. However, do not overtighten the bolt, it may be warped or broken.

## Jacking Instructions

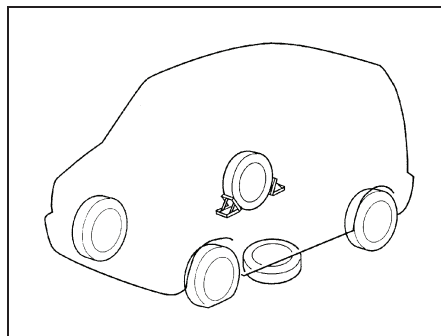

75F062


- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "R" (Reverse).

### ⚠ WARNING

- Shift into "R" (Reverse) when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

- 3) Turn on the hazard warning switch if your vehicle is near traffic.
- 4) Block the front and rear of the wheel diagonally opposite of the wheel being lifted.


- 5) Place the spare tyre near the wheel being lifted as shown in the illustration in case the jack slips.

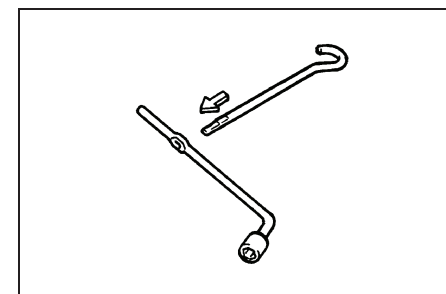


54G253



## EMERGENCY SERVICE

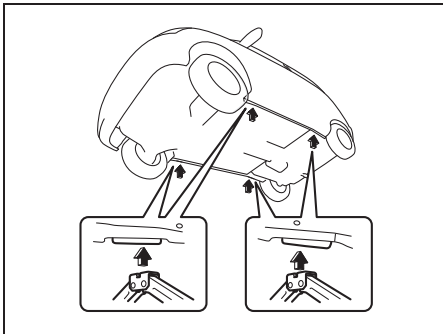

73R0190

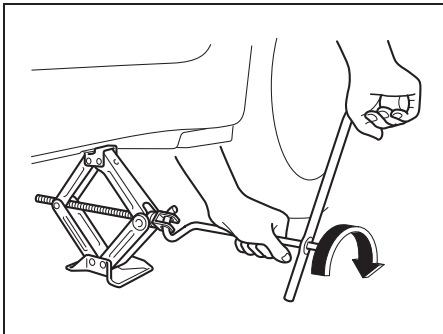

73R0191

- 6) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.

- 7) Continue to raise the jack slowly and smoothly until the tyre clears the ground. Do not raise the vehicle more than necessary.

### ⚠ WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than the specified jacking point (shown in the illustration) near the wheel to be changed.  
Especially, do not raise the vehicle with a jack at a part of the torsion beam which is located under the vehicle body, between rear wheels.
- Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the flange. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- Do not use wooden blocks or similar objects as a jack underlay.
- Never get under the vehicle when it is supported by the jack. Never place your hands and feet under the raised vehicle when it is supported by a jack.

(Continued)

### ⚠ WARNING


(Continued)

- **Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.**

### Raising vehicle with garage jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

## EMERGENCY SERVICE

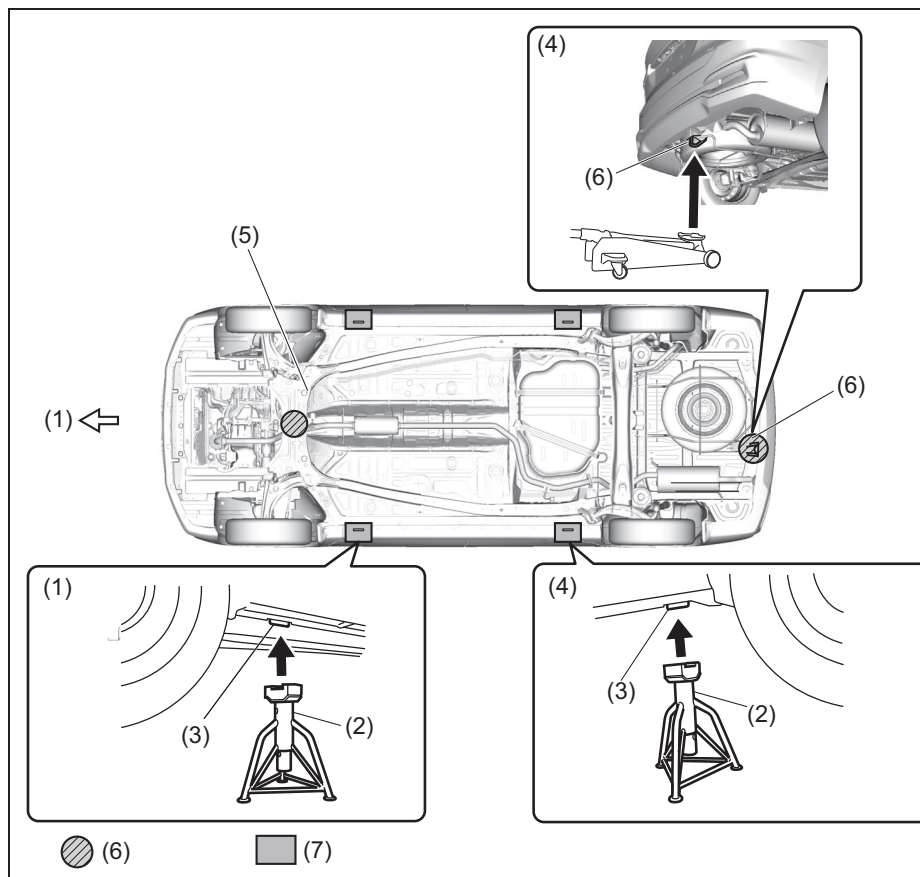

72R0130

- (1) Front
- (2) Jack stand
- (3) Jacking point for onboard jack
- (4) Rear
- (5) Front suspension frame
- (6) Jacking point for garage jack
- (7) Application point for two-column lift and jack stand

### NOTICE

- Never apply a garage jack to the exhaust pipe or engine undercover and rear torsion beam.
- When you apply a garage jack to the rear jacking point, it may interfere with the rear bumper depending on the shape of the garage jack.

### NOTE:

For more details, please contact a Maruti Suzuki authorised workshop.

## EMERGENCY SERVICE

### Changing Wheels

#### ⚠ WARNING

- Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorised workshop.

To change a wheel, use the following procedure:

- 1) Remove the jack, tools and spare wheel from the vehicle.
- 2) Loosen, but do not remove the wheel nuts.
- 3) Jack up the vehicle (follow the jacking instructions in this section).


#### ⚠ WARNING

- Shift into “R” (Reverse) when you jack up the vehicle.
- Never jack up the vehicle with the transmission in “N” (Neutral). Otherwise, unstable jack may cause an accident.


#### ⚠ CAUTION

Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven.

- 4) Remove the wheel nuts and wheel.

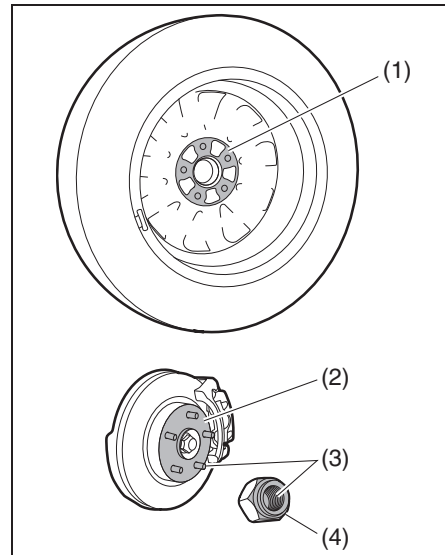

- 5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

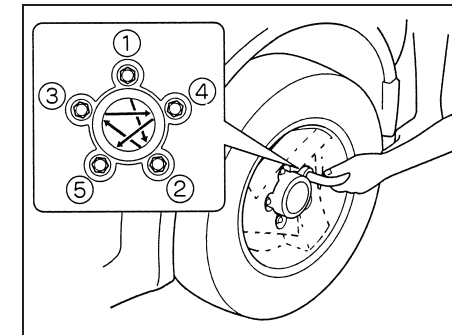

**Tightening torque for wheel nuts**  
**100 Nm (10.2 kg-m, 74.0 lb-ft)**


- 7) Lower the jack and fully tighten the nuts with a wheel wrench in numerical order as shown in the illustration.

## EMERGENCY SERVICE

### ⚠ WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorised workshop.


### Full Wheel Cover

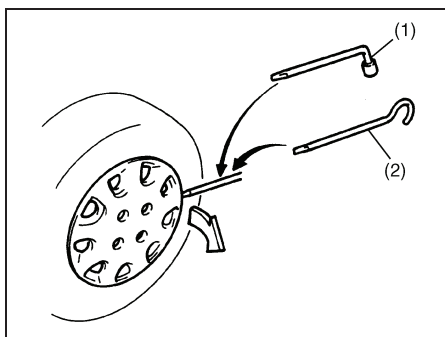

(1) or (2) Flat end tool

Your vehicle includes two tools, a lug wrench and a jack crank, one of which has a flat end.

Use the tool with the flat end to remove the full wheel cover, as shown in the illustration.

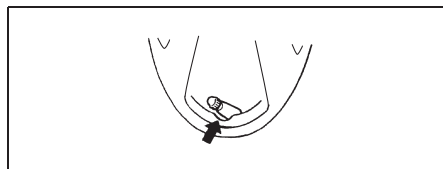

60MH074

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

### After Changing Wheels

Stow the tyre changing tools (jack, jack handle and lug wrench) in place. Also, stow the flat tyre in the spare tyre stowed position. Refer to "Tyre Changing Tool" in this section.

### NOTICE

Repair or replace the flat tyre immediately. If the flat tyre is placed in the spare tyre stowed position for long time, it can cause vehicle shakiness, noise, or scratches.

## Jump-Starting Instructions

### ⚠ WARNING

- Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Lead-acid batteries in this condition may explode.
- When making jump lead connections, be certain that your hands and the jump leads remain clear from pulleys, belts or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the lead-acid battery or an explosion may occur. Never smoke when working near the lead-acid battery.
- If the booster lead-acid battery you use for jump-starting is installed in another vehicle, make sure the two vehicles are not touching each other.
- If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorised workshop.

(Continued)

## EMERGENCY SERVICE

### ⚠ WARNING

(Continued)


- To avoid harm to yourself or damage to your vehicle or lead-acid battery, follow the jump-starting instructions below. If you are in doubt, call for qualified road service.

### NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

### Jump-Starting

- 1) Use only a 12-volt battery to jump-start your vehicle. Position the good 12-volt battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- 2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

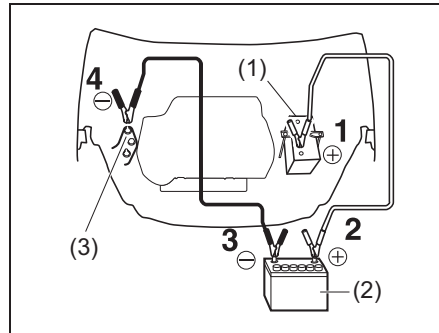

3) Connect jump leads as follows:

1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
2. Connect the other end to the positive (+) terminal of the booster battery (2).
3. Connect one end of the second jump lead to the negative (-) terminal of the booster battery (2).
4. Make the final connection to an unpainted, heavy metal part (i.e. engine mount bolt (3)) of the engine of the vehicle with the discharged battery (1).

### ⚠ WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged lead-acid battery, or an explosion may occur.

### ⚠ CAUTION

Connect the jump lead to the engine mount bolt securely. If the jump lead disconnects from the engine mount bolt because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged lead-acid battery.
- 6) Remove the jump leads in the exact reverse order in which you connected them.

## EMERGENCY SERVICE

### Towing your vehicle

If you need to have your vehicle towed, contact a professional service. Maruti Suzuki authorised workshop can provide you with detailed towing instructions.

#### **NOTICE**

**Observe the following instructions when towing your vehicle.**

- **To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.**
- **Using the frame hook, tow your vehicle on paved roads for short distances at low speed.**

### 2-Wheel Drive (2WD)

The vehicle may be towed using either of the following methods.

- 1) From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- 2) From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, make sure that transmission is in neutral, the steering wheel is unlocked the ignition key should be in "ACC" position, and the steering wheel is secured with a clamping device designed for towing service.

#### **NOTICE**

**The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.**

### Engine trouble: Starter does not operate

- 1) Try turning the ignition switch to "START" position with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the lead-acid battery terminal contact is poor. Recharge the lead-acid battery or correct lead-acid battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorised workshop.

## EMERGENCY SERVICE

### Engine trouble: Does not start

Make sure that your vehicle has enough fuel and lead-acid battery.

If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.

Refer to "Starting / Stopping Engine in operating your vehicle section.

If the engine still does not start have your vehicle inspected at a Maruti Suzuki authorised workshop.

- Do not operate the starter motor for more than 12 seconds.

### Engine trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the engine coolant temperature gauge indicates overheating during driving:

- 1) Turn off the air conditioner, if equipped.
- 2) Take the vehicle to a safe place and park.
- 3) Run the engine at a normal idle speed for a few minutes until the indicator is within the normal, acceptable temperature range between "H" and "C".


#### WARNING

**If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.**

If the temperature indication does not come down to within the normal, acceptable range:

- 1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump and radiator hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
- 3) If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in "INSPECTION AND MAINTENANCE" section.)

## EMERGENCY SERVICE

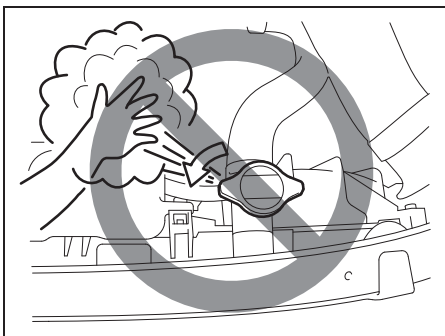


79J007

### ⚠ WARNING


- It is hazardous to remove the radiator cap (or degassing tank cap) when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (if equipped). These electric fans can automatically turn on without warning.

## Warning Triangle

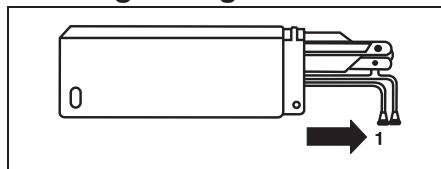


MH007001

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the on coming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

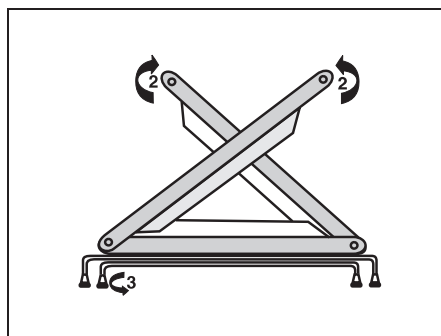

MHO-07-014

- Remove the warning triangle carefully from the cover as shown by arrow 1.
- Open both the reflector arms as shown by arrow and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow 3. Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.
- Place the warning triangle below 3rd row seat.

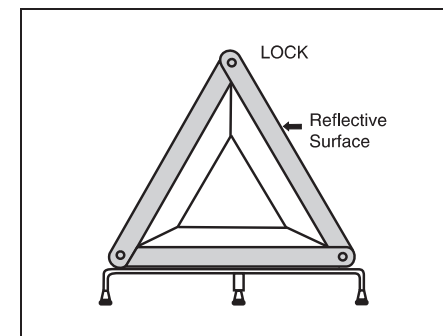


MHO-07-015



## APPEARANCE CARE

Corrosion Prevention .....	8-1
Vehicle Cleaning .....	8-2

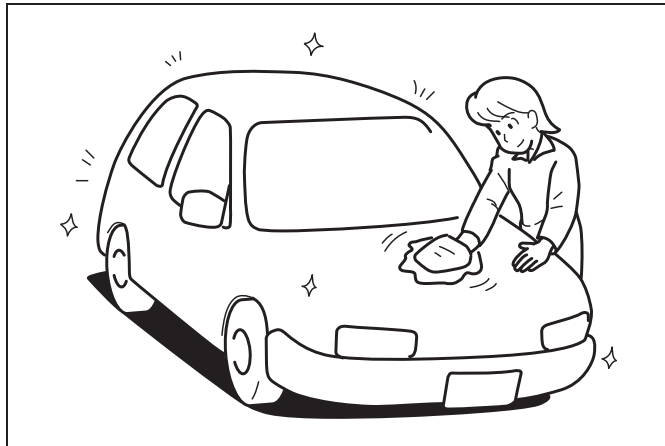

60G412

## APPEARANCE CARE

### Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

#### Important Information about Corrosion

##### Common causes of corrosion

- 1) Accumulation of road salt, dirt, moisture, or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- 2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.
- 3) Any or all of the below mentioned points:
  - Continuous exposure to sunlight.
  - Hard water & Sea water coming in contact with vehicle.
  - Foot rubbing (skirting).

#### Environmental conditions which accelerate corrosion

- 1) Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
- 2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- 3) Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

### How to Help Prevent Corrosion

#### Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Vehicle Cleaning" section.

#### Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Be sure that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

### Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

### Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

### Park your vehicle in a dry, well-ventilated area

Park your vehicle to save it from continuous exposure to direct sunlight. Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

### ⚠ WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter, exhaust pipes, etc. A fire could be started if the undercoating substance becomes overheated.

## Vehicle Cleaning



76G044S

### ⚠ WARNING

When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, gasoline and benzene. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.

## APPEARANCE CARE

### Cleaning Interior

#### Leather upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

#### NOTE:

- *In order to keep leather upholstery looking good, it should be cleaned at least twice a year.*
- *If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.*
- *When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink.*
- *As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.*

#### Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

#### Fabric upholstery (Except front passenger seat)

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

#### ⚠ CAUTION

- **Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.**
- **Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.**

#### Fabric upholstery (For front passenger seat)

Do not use liquid for cleaning as it may penetrate the fabric and damage the seat sensor.

#### Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

#### Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

#### Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.


## APPEARANCE CARE

### Instrument panel and console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

#### WARNING

Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components. Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/or lead to non-functioning of the part or may cause fire.

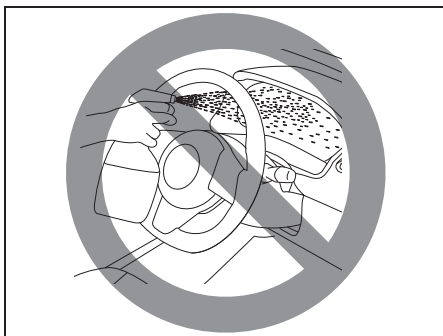

81RM08005

#### NOTICE

- Liquid such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth.
- Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.

### Cleaning Exterior

#### NOTICE

It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.


### Washing

#### WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to make sure they have maintained their normal effectiveness.

## APPEARANCE CARE

### Washing by hand

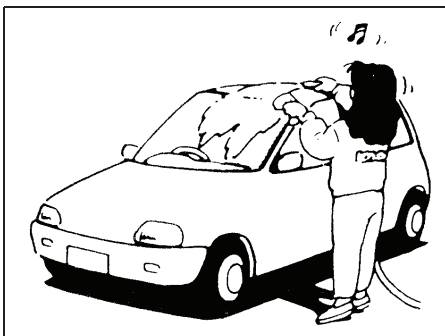

60B212S

When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:

- 1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

#### NOTICE

**When washing the vehicle:**

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.



81RM08006

- 2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

#### NOTICE

**To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.**

- 3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

#### NOTICE

**When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.**

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
  1. Clean all damaged spots and allow them to dry.
  2. Stir the paint and touch up the damaged spots lightly using a small brush.
  3. Allow the paint to dry completely.

Washing by an automatic car wash

**NOTICE**

If you use an automatic car wash, make sure that your vehicle's body parts, such as spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.


Washing by a high-pressure cleaner

**NOTICE**

If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.

- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
- Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.





Waxing

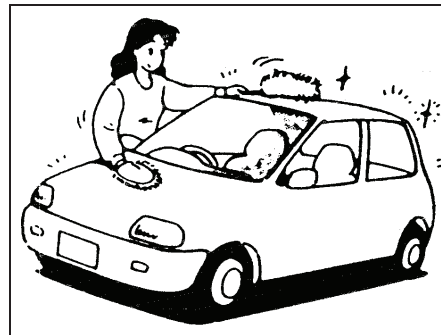

60B211S

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.





SPECIFICATIONS


Vehicle Identification ..... 9-1

FASTag (if equipped) ..... 9-1

High security Registration Plate (HSRP) ..... 9-2

Fuel Recommendation ..... 9-3

SPECIFICATIONS ..... 9-5

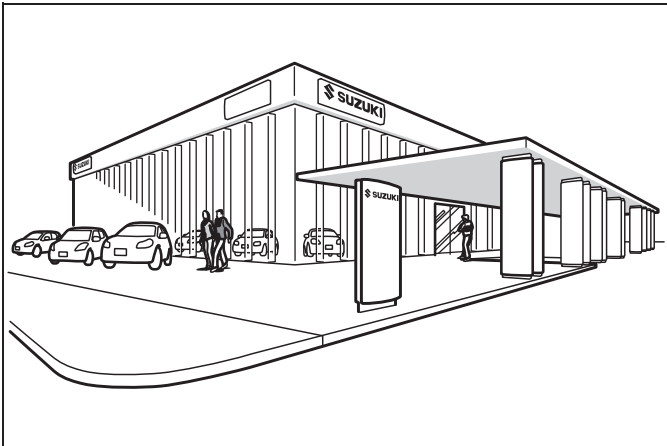


81MM01001


## SPECIFICATIONS

### Vehicle Identification

#### Chassis Serial Number

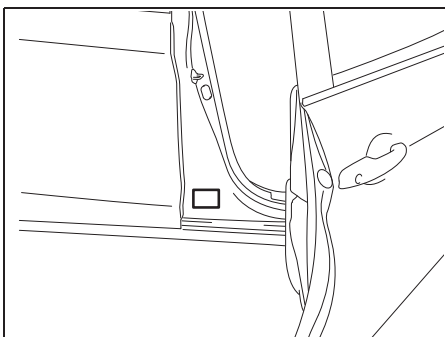

73R0135

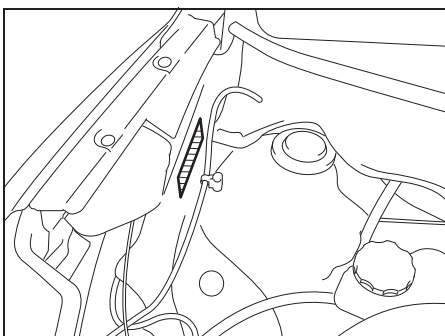


73R0136

The chassis and/or engine serial numbers are used to register the vehicle. They are

also used to assist a Maruti Suzuki authorised workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorised workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

#### Engine Serial Number

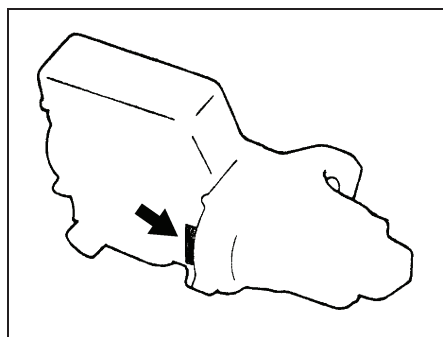


60G128

The engine serial number is stamped on the cylinder block as shown in the illustration.

#### FASTag (if equipped)


As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India. In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorised workshop.

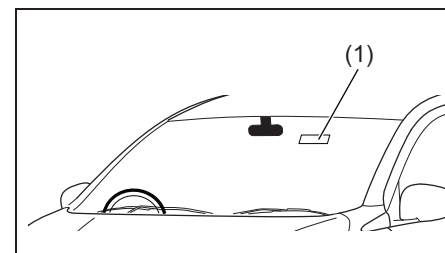

72RM09001


## SPECIFICATIONS

### As seen from inside of the vehicle

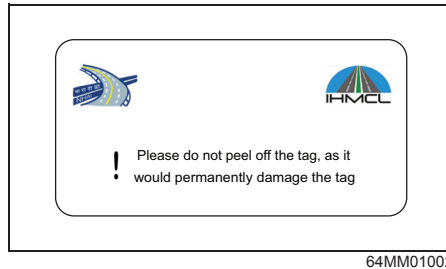

**NOTE:**  
The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

### As seen from outside of the vehicle

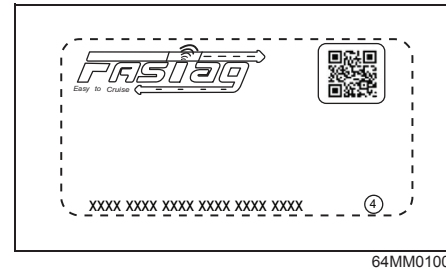

**NOTE:**  
The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.  
**NOTE:**

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.


### High Security Registration Plate (HSRP)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.

HSRP contains:

- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- Third license plate on front windshield.


### Third License Plate

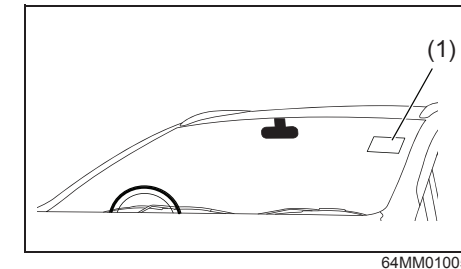

(1) Third license plate

SPECIFICATIONS

Third license plate - As seen from outside of the vehicle

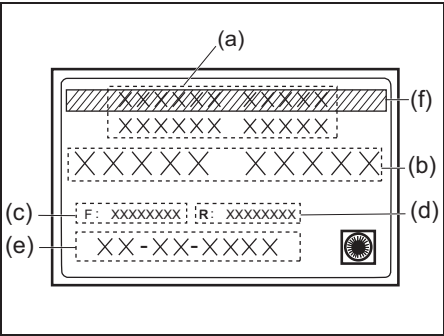

- (a) HSRP issuing authority name
- (a) Vehicle registration number
- (a) Unique laser number - Front plate
- (a) Unique laser number - Rear plate
- (a) Date of 1st registration (in DD-MM-YYYY format)
- (a) Green strip (BS6 vehicle)

NOTE:  
The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:  
• Any attempt to remove the third license plate from the windscreen will result in permanent damage to the label.

- Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.
- Use of any sharp objects on the label can damage the label.
- In the event of any replacement of the third license plate may please contact the approved authority.

Third license plate - As seen from inside of the vehicle




NOTE:  
The picture shown is for indicative purpose only.

NOTE:  
Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.

Provision for AIS140: Intelligent Transportation System (ITS)

This vehicle has provision of Power Connector for fitment of AIS140 ITS device.  
Power connector is located under the dashboard as shown in below illustration.

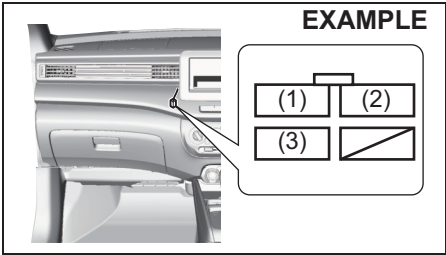

Power connector description	
(1)	Battery
(2)	Ground
(3)	Ignition signal

## Fuel Recommendation

### Petrol Engine

To avoid damaging catalytic converter, you must use unleaded petrol with an octane number (RON) of 91 or higher.

#### Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol, also known as gasohol, are commercially available in the country and can vary with location. Gasoline Ethanol blend up to E20 can be used as fuel for this vehicle.

#### Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

#### CAUTION

Use of Spurious, low quality, adulterated fuel can cause damage to the engine & engine auxiliaries, affect functioning of engine and degrade engine performance including but not limited to seizure.

#### NOTICE

- The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.
- Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

## SPECIFICATIONS

### SPECIFICATIONS

*NOTE:*

*Specifications are subject to change without notice.*

ITEM: Dimensions <sup>#</sup>		UNIT: mm
Overall length		4395
Overall width		1735
Overall height		1690
Wheelbase		2740
Track	Front	1510
	Rear	1520
Ground clearance		180

ITEM: Mass (weight)*		UNIT: Kg	K15C ISG 5MT
Curb mass (weight)			1170
Gross vehicle mass (weight) rating			1760
Permissible maximum Axle Weight	Front		850
	Rear		965

<sup>#</sup> - Details mentioned are related to all vehicle variants of Petrol and CNG.

\* - Details mentioned are related to Petrol engine variants only. For CNG , may please refer to the CNG supplementary manual.

## SPECIFICATIONS

ITEM: Engine		
Type		K15C
Number of cylinders		4
Bore		74.0 mm
Stroke		85.0 mm
Piston displacement		1462 cm <sup>3</sup> (1462 cc)
Compression ratio		12.0 : 1

ITEM: Electrical		
Standard spark plug		NGK ILZKR6Q11
Lead-acid battery	Petrol	12V ISS N-55 <sup>*1</sup>
	CNG	12V 34B19L
Lithium-ion battery		Maintenance free <sup>*2</sup>
Fuses		See "INSPECTION AND MAINTENANCE" section.

\*1 When battery replacement is necessary, use only N55 (Exide Conservo) battery. Else it may deteriorate performance of Smart Hybrid system.

\*2 If the lithium-ion battery is completely discharged, the battery cannot be recharged. When replacing or disposing the lithium-ion battery, consult your Maruti Suzuki authorised workshop.

## SPECIFICATIONS

ITEM: Lights		WATTAGE	BULB No.
Headlight	High beam	12V 60W/65W	HB3
	Low beam	12V 55W	H11
Turn signal light	Front	12V 21W	WY21W
	Rear	12V 21W	PY21W
Side turn signal light (on outside rearview mirror)* <sup>1</sup>		LED	
Position light		12V 5W	W5W
Tail/brake light* <sup>1</sup>		LED	
License plate light		12V 5W	W5W
Reversing light		12V 16W	W16W
Interior light		12V 10W	—
High mount stop light* <sup>1</sup>		LED	
ITEM: Wheels and Tyres			
Tyre size, front, rear and spare		185/65R15 88H* <sup>2</sup>	
Rim size		15X5 1/2J	
Tyre pressures		For the specified tyre pressure, see the Tyre Information Label located on the driver's door lock pillar.	

- If you need to replace the following bulbs indicated in the above table, consult your Maruti Suzuki authorised workshop.

<sup>\*1</sup> Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.




<sup>\*2</sup> If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed symbol.



## SPECIFICATIONS

ITEM: Capacities (approx.)		
Coolant (including reservoir tank)	See "INSPECTION AND MAINTENANCE" section.	4.5 L
Fuel tank	See "Fuel" in this section.	45 L <sup>#</sup>
Engine oil	Classification: API SN or SP ILSAC GF-6 Viscosity: SAE 0W-16	3.3 L (replacement with oil filter)
Transmission oil	"MARUTI GENUINE GEAR OIL 75W"	2.6 L
Brake fluid / Clutch fluid	MARUTI GENUINE BRAKE FLUID (MGBF) or DOT 3.	Refill to the proper oil level according to the instructions in "INSPECTION AND MAINTENANCE" section.

<sup>#</sup> The fuel tank capacity is slightly more than the recommended quantity of fuel that you can fill. The additional voluminous space is provided for safety and scientific reasons.



## SERVICE NETWORK (AS ON 31.05.2023)

- MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI AUTHORISED SERVICE STATIONS (MASSs) :
  - 'A' CATEGORY MASSs (\*\*MARKED)  
Free & paid Service, Major repairs & Accidental repairs
  - 'B' CATEGORY MASSs (\* MARKED)  
Free & paid Service & Major repairs
  - 'C' CATEGORY MASSs (##MARKED)  
Free & paid Service & Minor repairs
  - 'D' CATEGORY MASSs (#MARKED)  
Free Service & Minor repairs

### NOTE:

Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit [www.marutisuzuki.com](http://www.marutisuzuki.com) or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH:- 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO.- 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NO. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOT NO. 15, ACTION AREA 1D, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA

## SERVICE NETWORK (AS ON 31.05.2023)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED Plot No-GEN 25 + 25 B/2, TTC INDUSTRIAL AREA, PAWANE VILLAGE, THANE BELAPUR ROAD, NAVI MUMBAI- 400705 PH NO-022 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 – 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 10th Floor, Block A, Global Infocity Park, No.40, Anna Nedunchalai, Kandanchavadi, Perungudi, Chennai, Tamil Nadu – 600096 PH. - 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING, VITTAL MALLA ROAD, BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITED 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg, Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH

**SERVICE NETWORK (AS ON 31.05.2023)**

<b>DETAILS OF AREA OFFICES</b>	
<b>Area Office Location</b>	<b>Area Office Address</b>
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact : 0755 6051555
Calicut	Maruti Suzuki India Limited, Ground Floor, Aarpees Arcade, YMCA Cross Road, Opp. Indusind Bank, Kozhikode, Kerala -PIN 673001 Phone:- 0495-2723151
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph.- 0422-2221091
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph. - 0452-4200203
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111

**SERVICE NETWORK (AS ON 31.05.2023)**

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo,Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph.- 0771-4039643
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001
Vijayawada	Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2,Opposite Executive Club, Vijayawada, -530002,
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299

Dealer Workshop (AS ON 30.05.2023 )

ANDAMAN AND NICOBAR ISLANDS

DIGLIPUR

1. AGENCY HOUSE (A & N ISLANDS) PVT. LTD.  
(PU01-PU-01), MADHUPUR VILLAGE, TEHSIL  
DIGLIPUR, NORTH ANDAMAN - 744202  
PH :271056.

PORTBLAIR

2. AGENCY HOUSE (A & N ISLANDS) PVT. LTD.  
(E102-E1-01), GARACHRAMA, PORT BLAIR -  
744105  
PH :251980, 253586, 211590.  
3. AGENCY HOUSE (A & N ISLANDS) PVT. LTD.  
(E102-E1-02), NAYAGEN, PORTBLAIR - 744101  
PH :227104, 211682.

RANGAT

4. AGENCY HOUSE (A & N ISLANDS) PVT. LTD.  
(E102-FJ-03), NIMBUTULLA, PO RANGAT, DIST.  
MIDDLE ANDMAN, - 744201  
PH :211546.

ANDHRA PRADESH

AMALAPURAM

5. S.B. MOTOR CORPORATION (BTS1-BTS-01),  
#241/2B, BESIDE: BAPUJI PRIMARY SCHOOL  
MAIN ROAD, OPP. RR NAGAR, BANDARULANKA,  
AMALAPURAM, EAST GODAVARI (DIST) - 533201  
PH :8374303303.

AMARAVATI

6. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(CVB1-CVB-01), SURVEY NO. 29, TOWNSHIP-16,  
SECTOR-137, COLONY-539, BLOCK-2029, PLOT  
NO. 1, SUB-DIVISION-L40, MALKAPURAM  
LIMITS, MANDAL - THULLURU,  
AMARAVATI-CITY, DIST.-GUNTUR, ANDHRA  
PRADESH. - 522237  
PH :8374847777.

ANAKAPALLE

7. JAYABHERI AUTOMOTIVES PVT. LTD.  
(ON01-ON-01), SURVEY NO.822/1 & 2, NH-5  
ROAD, ANAKAPALLE, DISTT.  
VISHAKHAPATNAM. - 531001  
PH :7093575555.

ANANTAPUR

8. SRI DURGA AUTOMOBILES PVT. LTD.  
(1B01-1B-01), 17/377-A, GOOTY  
ROAD, ANANTAPUR - 515001  
PH :9100984249.

ANNAPURAM

9. VARUN MOTORS (SIJH1-SJH-01), DO-NO : 5/116,  
SURVEY NO – 59, CHALAMAYYA NAGAR,  
RAILWAY STATION ROAD, NEAR SMP BAJAJ  
SHOWROOM,  
ANNAVARAM, EAST GODAVARI DISTRICT,  
ANDHRA PRADESH. - 533406  
PH :9885511911.

ARAKU

10. VARUN MOTORS (SJG1-SJG-01), SURVEY NO  
33-9/A, RAVULAGADDA VILLAGE, BESIDE GOVT  
DEGGRE  
COLLEGE, ARAKU, VISHAKHAPATNAM, ANDHRAPR  
ADESH - 531151  
PH :7799499931.

BHIMAVARAM

11. NOVELTY REDDY & REDDY MOTORS PVT LTD  
(7M01-7M-01), NEAR BYEPASS ROAD, UNDI  
ROAD, BHIMAVARAM - 534202  
PH :7799771177.

BOBBILI

12. VARUN MOTORS PVT. LTD. (CAM1-CAM-01), D.  
NO. 4-64, SURVEY NO. 219/8, VILLAGE –  
MALLAMMAPETA, BESIDE GROWTH CENTRE,  
BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA  
PRADESH. - 535558  
PH :9885280772.

CHALLAPALLI

13. MITHRA AUTO AGENCIES PVT LTD  
(CSX1-CSX-01), D.NO.9-30, 9TH BLOCK,  
LAKSHMIPURAM LIMITS, RAMANAGARAM,  
CHALLAPALLI MANDALAM, DISTT. KRISHNA -  
521126  
PH :8886063526.

CHILKALURIPET

14. JAYALAKSHI (SFT1-SFT-01), M/S JAYALAKSHMI  
AUTO, SURVEY NO 457/C3, CHILKALURIPET,  
NADENLA MANDAL, GUNTUR, ANDHRA  
PRADESH - 522616  
PH :9889144344.

CHINTALAPUDI

15. REDDY AND REDDY MOTORS (BYQ1-BYQ-01),  
RS NO.688/2 MARUTI NAGAR COURT CENTRE,  
ELURU-CHINTALAPUDI HIGHWAY,  
CHINTALAPUDI MANDAL, ANDHRA PRADESH -  
534460  
PH :9912341624, 9948827555.

CHIRALA

16. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(G502-NT-04), 9-1-92, CHURCH ROAD, CHIRALA, -  
523157  
PH :7331151661.

CHITTOOR

17. BHARGAVI AUTO PVT. LTD. (A801-1C-03),  
22-241/A, KATTAMANCHI TIRUPATI  
ROAD, CHITTOOR, - 517001  
PH :8463955558.

CHODAVARAM

18. VARUN MOTORS (SHT1-SH-01), SURVEY NO:  
108-2-A, 108-3-A & 108-4, GOVCHODAVARAM,  
DIST. - VISAKHAPATNAM, - 531036  
PH :#REF!.

CUDDAPAH

19. MSA MOTORS (C201-1D-03), K.T. BYE PASS  
ROAD, CUDDPPAH, ANDHRA PRADESH, - 516001  
PH :7396685628.

ELURU

20. REDDY & REDDY MOTORS (1E01-1E-01), OLD  
NH-5 ROAD, BESIDES C R REDDY WOMEN'S  
COLLEGE OLD NH-5, ELURU, - 534001  
PH :9705311566.

GAJAPATINAGARAM

21. JAYABHERI AUTOMOTIVES (SNN1-SNN-01),  
SURVEY NO 50-14, D.NO 3-1/C, BONDAPALLI  
MANADALAM, GAJAPATHINAGARAM, ANDHRA  
PRADESH. - 535270  
PH :9100818111.

GAMBHEERAM

22. JAYABHERI AUTOMOTIVES PVT. LTD.  
(BQQ1-GJF-02), PLOT NO. 40-45 & 48, GREEN  
INDUSTRIAL PARK, GAMBHERAM,  
ANANDPURAM, VISHAKAPATNAM. - 530052  
PH :9642496789.

GUDIVADA

23. VARUN MOTORS PVT. LTD. (2603-CL-02), D.NO.  
1-621, AUTONAGER 1ST LANE, GUDIVADA -  
521301  
PH :9885651383.

GUDUR

24. BHARGAVI AUTO PVT. LTD. (IS01-IS-01),  
SURVEY NO.1619/3A, GUDUR BYPASS, GUDUR  
RURAL, GUDUR DISTT. NELLORE, A.P. - 524101  
PH :9652984999.

GUNTAKAL

25. SRI DURGA AUTOMOBILES PVT. LTD.  
(BJA1-BJA-01), SURVEY NO. 407, D. NO.  
20/342-19, BELLARY ROAD, GUNTAKAL, DIST.  
-ANANTPUR, ANDHRA PRADESH. - 515801  
PH :8142847353.

GUNTUR

26. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(G502-G5-01), D-N-8-24-31, MANGALAGIRI  
ROAD, GUNTUR - 522001  
PH :7893117111/0863-2241000.  
27. JAYALAKSHMI (G502-G5-05), AT 1-14-114, OPP.  
HINDU COLLEGE, BANDLAMUDI GARDENS,  
AMARAVATI ROAD, GUNTUR-522003, AP -  
522203  
PH :9848131133/9625255555.  
28. JAYALAKSHMI AUTO (G502-G5-06), SURVEY NO  
509, D.NO 25-11-50 TOWN, WARD NO 22,  
OPPOSITE ITC BUILDING, R AGRAHARAM,  
NAGARAPALAM ROAD, GUNTUR, - 522004  
PH :8374847777.

HANUMAN JUNCTION

29. SANTOSH MOTORS (SHB1-SHB-1), SY NO. 569/1  
BESIDES NH5, VELURU VILLAGE, BAPULAPADU  
MANDAL, HANUMAN JUNCTION  
KRISHNA DISTRICT PIN 521105 - 521115  
PH :9703633755.

HINDUPUR

30. SRI DURGA AUTOMOBILES PVT. LTD.  
(1B01-36-02), PLOT NO.83, NEAR RELIANCE  
PETROL BUNK, BYE PASS ROAD, HINDUPUR -  
515201  
PH :9849773030.

ICHAPURAM

31. JAYABHERI AUTOMOTIVES PVT. LTD.  
(GLL1-GLL-01), SURVEY NO. 105/3 , 105/4 AND  
229/7, ICHAPURAM, BALAKRISHNAPURAM  
PANCHAYAT, MUNIBHADRA VILLAGE, ANDHRA  
PRADESH. - 532312  
PH :9394006666, 8142933666.

JAGGAIAHPETA

32. VARUN MOTORS PVT. LTD. (2603-PC-05), DOOR  
NO. 2-20, MUTHYALAMMA GUDI STREET  
JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA  
DISTT. - 521175  
PH :9642437099.

JANGAREDDYGUDEM

33. REDDY & REDDY MOTORS (1E01-HQ-02), NEAR  
R&B GUEST HOUSE, ELURU  
ROAD, JANGAREDDYGUDEM, - 534447  
PH :9912563666.

KAIKALURU

34. SANTOSH AUTOMOTORS PVT. LTD.  
(CLW1-CLW-01), SY. NO. 127/7 &9, OPP. NAIDU  
COMPLEX, AATAPAKA, KAIKALURU MANDAL,  
DIST. KRISHNA - 521333  
PH :7799787969.

KAKINADA

35. S B MOTORS (W701-W7-01), D. NO.  
52-10-36/3, NEAR AMAR GHATI CENTER, KARAPA  
ROAD, KAKINADA - 533001  
PH :9885119888.

KANCHIKACHERLA

36. VARUN MOTORS PVT. LTD. (GJD1-GJD-01),  
SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH  
WARD, KANCHIKACHERLA VILLAGE AND  
MANDAL, KRISHNA DIST., ANDHRA PRADESH. -  
521180  
PH :9703906444.

KANDUKURU

37. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(BEY1-BEY-01), SURVEY NO. 414,  
MAHADEVAPURAM VILLAGE, O. V. ROAD,  
KANDUKURU MANDAL, DISTRICT –  
PRAKASHAM, ANDHRA PRADESH. - 523105  
PH :9848131133.

## Dealer Workshop (AS ON 30.05.2023 )

### KANIGIRI

38. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(SCC1-SCC-01), SURVEY NO 793, PLOT NO  
11,12 , KANIGIRI, PRAKASHAM DISTRICT,  
ANDHRA PRADESH - 523230  
PH :9848131133, 9052457512.

### KAVALI

39. BHARGAVI AUTO PVT. LTD. (A801-PF-05),  
KAVALI NELLORE,ANDHRA PRADESH - 524201  
PH :9248702567.

### KURNOOL

40. MSA MOTORS (C201-C2-01), AUTO  
NAGAR,INDUSTRIAL ESTATE, NH-7, KURNOOL  
- 518004  
PH :9859513945.

### MACHERLA

41. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(CEY1-CEY-01), D.NO. 343/7, 343/5-3, 15-2-3,  
MACHERLA, MACHERLA MUNICIPALITY. -  
522426  
PH :9848131133, 9705261801.

### MACHILIPATNAM

42. MITHRA AUTO AGENCIES PVT LTD (2604-0K-04),  
NARASIMHA NAGAR, MACHLIPATNAM, ANDHRA  
PRADESH - 521001  
PH :8886063526.

### MADANAPALLI

43. BHARGAVI AUTO PVT. LTD. (AAT1-AAT-01),  
SURVEY NO.762, BASIKONDA VILLAGE,  
MADANPALLI, CHITTOOR DISTT. ANDHRA  
PRADESH - 524101  
PH :9959893434.

### MADHURAWADA

44. JAYABHERI AUTOMOTIVES PVT. LTD.  
(BQQ1-BQQ-01), PLOT NO. 5, SURVEY NO. 4/P,  
KOMMADI ROAD, MADHURAWADA,  
VISHAKAPATNAM, ANDHRA PRADESH - 530048  
PH :8886669985.

### MALKIPIURAM

45. VARUN MOTORS (SEH1-SEH1-01), SURVEY NO  
49/6A, MALKIPURAM VILLAGE AND MANDAL.,  
EAST GODAVARI DISTRICT, ANDHRA PRADESH  
- 533260  
PH :9154255226.

### MANDAPETA

46. S B MOTOR CORPORATION (BJC1-BJC-01),  
BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA,  
DISTRICT – EAST GOADAVARI, ANDHRA  
PRADESH . - 533308  
PH :8886664090.

### MARKHAPURAM

47. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(CFF1-CFF-01), D. NO. 4-515/12, SURVEY NO.  
1167, OPP. INDUSTRIAL ESTATE, ONGOLE  
ROAD, MARKAPURAM, DISRT.-PRAKASAM,  
ANDHRA PRADESH. - 523316  
PH :9848131133, 7331151674.

### MYLAVARAM

48. VARUN MOTORS PVT. LTD. (GKL1-GKL-01), D  
NO. 2-176/2, MAIN ROAD, MYLAVARAM,  
KRISHNA DISTRICT, PIN-521230, ANDHRA  
PRADESH - 521230  
PH :9581337222.

### NAKKAPALLI

49. VARUN MOTORS (SFR1-SFR-01), SURVEY NO  
202/3, 203/4,PEDGUMMULURU GRAM  
PANCHAYAT,  
RAYAVARAM  
MANDAL,NAKKAPALLI,VISHAKAPATNAM,  
ANDHRA PRADESH - 531081  
PH :9885317344.

### NANDIGAMA

50. VARUN MOTORS PVT. LTD. (CUB1-CUB1-01), RE  
SURVEY NO. 601/1B, NH-9 ROAD, NANDIGAMA,  
DIST.-KRISHNA, ANDHRA PRADESH. - 521185  
PH :9642225287.

### NANDYAL

51. MSA MOTORS (CKB1-CKB-01), SURVEY NO. 333,  
VUDUMALPURAM, MANDAL – NANDYAL, OPP.  
AUTO NAGAR, NANDYAL, DISTRICT –  
KURNOOL. - 518501  
PH :7337292622.

### NARASAROAPET

52. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(G502-JT-03), NEAR RELIANCE PETROL PUMP  
BUNK,VINUKONDA ROAD, NARASAROAPET,  
GUNTUR, - 522603  
PH :7680000502/9100791343.

### NARSAPURAM

53. NOVELTY REDDY & REDDY (SIU1-SIU-01), SY  
NO. 98/7, NARSAPURAM– CHINCHINDA BYPASS  
ROAD,NARSAPURAM, PALAKOLLU MANDAL,  
WEST GODAVARI DISTRIC  
T,ANDHRA PRADESH - 534206  
PH :9703900011.

### NARSIPATNAM

54. JAYABHERI AUTOMOTIVES PVT. LTD.  
(WT01-WT-01), OPP. RDO BUNGLAW, BANK  
COLONY, VISAKHAPATNAM ROAD,  
NARSIPATNAM - 531116  
PH :7702333513.

### NELLORE

55. BHARGAVI AUTO PVT. LTD. (A801-A8-01),  
D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR,  
P.B.NO.18, NELLORE(A.P.) - 524004  
PH :9248742225.

56. BHARGAVI AUTO PVT. LTD. (A801-A8-04), A2,  
INDUSTRIAL ESTATE,A.K. NAGAR,NELLORE, -  
524004  
PH :9248727888.

57. VISHNU CARS PVT. LTD. (A802-A8-01), FIELD  
NO. 628 /SURVEY NO. 877, 878/A/4 AND  
883/A/1A, NELLORE BIT-II, BESIDES GSR  
GARDENS, BALAJI NAGAR, NH-16, NELLORE  
CITY. - 542002  
PH :7337340778.

### NUZIVIDU

58. VARUN MOTORS PVT. LTD. (2603-CN-03), RS  
NO:880/2,MUNCIPAL D NO:25-12,WRD  
NO:25,BLOCK NO:25,BESIDE  
S SQUIRE CONVENTION HANUMAN JUNCTION  
ROAD, NIZVID , ANDHRA PRADESH. - 521201  
PH :9581337222.

### ONGOLE

59. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(8Y01-8Y-02), THROVAGUNTA COMPANY  
CENTRE,NH-5,GUNTUR  
ROAD,ONGOLE,PRAKASAM DISTRICT. - 523003  
PH :9701055955.

### PALAKONDA

60. VARUN MOTORS PVT. LTD. (CKO1-CKO-01),  
SURVEY NO. 8, ANAVARAM GRAMAM,  
PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA  
PRADESH. - 532440  
PH :9966877033, 9885317344.

### PALASA

61. JAYABHERI AUTOMOTIVES PVT. LTD.  
(BWH1-BWH-01), SURVEY NO. 63 OF VILLAGE –  
PURUSHOTTAPURAM, PALASA MANDAL,  
KASIBUGGA MUNICIPALITY, DISTRICT –  
SRIKAKULAM, ANDHRA PRADESH. - 532221  
PH :9849054442, 8790946464.

### PATHAPATNAM

62. VARUN MOTORS (CODE UNDER  
CREATIONS-CODE UNDER CREATIONS-CODE  
UNDER CREATIONS), D.NO 4-245,SURVEY NO  
264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA  
PRADESH - 532213  
PH :9885317344.

### PENDURTHI

63. VARUN MOTORS PVT. LTD. (BAP1-BAP-01),  
SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI  
TO PENDURTHI HIGHWAY, NEAR BRIDGE,  
PENDURTHI DISTT: VISAKAPATNAM - 530047  
PH :9160445699.
64. VARUN MOTORS PVT LTD (BAP1-BAP-02),  
SURVEY NO 240/1,2 & 241, PENDURTHI, VIZAG -  
531173  
PH :9642403366.

### PIDUGURALLA

65. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(BFN1-BFN-01), SURVEY NO. 897/16,  
PIDUGURALLA, DISTRICT – GUNTUR, ANDHRA  
PRADESH. - 522413  
PH :9848131133, 9100787058.

### PITHAPURAM

66. S B MOTORS (CTS1-CTS-01), NO. 11-2-114, 11TH  
WARD, KAKINADA-KATHIPUDI ROAD,  
PITHAPURAM, EAST GODAVRI DIST., ANDHRA  
PRADESH. - 533 450  
PH :8886677759, 8886677754.

### PONNUR

67. JAYALAKSHMI AUTOMOTIVES PVT. LTD  
(CFC1-CFC-01), PLOT NO. 4, D.NO. 213-1,  
VAISHNAVI NAGAR, PONNUR, GUNTUR,  
ANDHRA PRADESH. - 522124  
PH :9849445639, 9121141913.

### RAJAHMUNDRY

68. S.B. MOTOR CORPORATION (C501-C5-01),  
OPP.FCI  
GOWDOWN,JAILROAD,LALACHERUVLI,RAJAMU  
NDRY - 533101  
PH :08885585667.
69. S B MOTORS (C501-C5-03), D. NO. 3-243, NH-5,  
ROAD, HUKUMPETA, RAJAHMUNDRY. - 533 107  
PH :08885886262.
70. VARUN MOTORS PVT. LTD. (C502-C5-01),  
SURVEY NO. 660, PALACHERLA VILLAGE OF  
RANJANAGRAM MANDAL, RAJAHMUNDRY,  
EAST GODAVARI DSIT. - 533102  
PH :8886616717.

### RAJAM

71. VARUN MOTORS PVT. LTD. (BLJ1-BLJ-01), PLOT  
NO. 44, SARATHI NAGAR, RAJAMNAGAR  
PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM,  
ANDHRA PRADESH - 532127  
PH :7799666998.

### RAMPACHODAVARAM

72. VARUN MOTORS (SOK1-SOK-01), SURVEY NO  
14/1,IRLAPALLY VILLAGE,  
RAMPACHODAVARAM,ANDHRA PRADESH -  
533288  
PH :9885511911.

### REPALLE

73. JAYALAKSHMI (SKA1-SKA-01), D.NO 430,  
BESIDE ESAR PETROL BUNK, REPALLE,  
DISTRICT: GUNTUR, ANDHRA PRADESH -  
522265  
PH :8374847777.

### S KOTA



## Dealer Workshop (AS ON 30.05.2023 )

74. JAYABHERI (SIV1-SIV-01), SURVEY NO 113/3,MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH :9100818111.

### SOMPETA

75. VARUN MOTORS PVT LTD (GLX1-GLX-01), KHATA NO 406,407,408 DENOTED IN SURVEY NO 241/1,MOGILIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284 PH :8142331166.

### SRIKAKULAM

76. VARUN MOTORS PVT. LTD. (4603-W6-09), NH-16, BESIDE EENADU UNIT OFFICE, PEDDA PADDU-VILL,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH :9703119797.  
77. JAYABHERI AUTOMOTIVE (4606-W6-04), SURVEY NO 22/7P,22/8 AND SURVEY NO 29/12,16,17, BALAGA RURAL,SRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH :9100818111.

### SULLURUPETA

78. BHARGAVI AUTO PVT. LTD. (BZA1-BZA-01), KEERTI ENCLAVE,NEAR RTO OFFICE,NH-5,SULLURPETA - 524121 PH :9848602345, 7997998516.

### TADA

79. VISHNU CARS PVT.LTD. (SFW1-SFW-01), SURVEY NO 58/3,TADA, NELLORE DISTRICT - 524401 PH :7995088868.

### TANUKU

80. NOVELTY REDDY & REDDY MOTORS PVT LTD (BAR2-BAR-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH :9912341624.

### TENALI

81. JAYALAKSHMI AUTOMOTIVES PVT. LTD (PE01-PE-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH :226100/ 9866111788.

### THAGARAPUVALASA

82. VARUN MOTORS PVT. LTD. (CQV1-CQV-01), SURVEY NO:11/2B,11/3,NAGARAMPALEM VILLAGE, NH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM, - 531162 PH :9885317344, 9885280772.

### TIRUPATI

83. BHARGAVI AUTO PVT. LTD. (A801-N9-02), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, - 517507 PH :7997969946.

84. BHARGAVI AUTO PVT. LTD. (A801-N9-06), SURVEY NO. 2/B3, ADJACENT TO PARK HOTEL, RENIGUNTA ROAD, TIRUPATI. - 517501 PH :7997969919.

85. VISHNU CARS (N902-N9-01), SURVEY NO. 192/3A2A, 200' CHENNAI – TIRUPATI HIGHWAY, KOTRAMANGALAM,RENIGUNTA MANDAL, TIRUPATI - 517520 PH :9154971551.

### TIRUVURU

86. SANTOSH AUTOMOTORS PVT. LTD. (CIM1-CIM-01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. - 521235 PH :7799787969.

### TUNI

87. SATTIBABU MOTORS (PVT) LTD. (KY01-KY-01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH :861893888.

### VENKATAGIRIKOTA

88. BHARGAVI AUTO PVT. LTD. (CDI1-CDI-01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK,GMR FUNTION HALL,DARASALLA,PALLIKUPPAM,KUPPAM ROAD,V KOTA - 517242 PH :9848602345, 7799997720.

### VENKATAPGIRI

89. BHARGAVI AUTOMOBILES (SOL1-SOL-01), SURVEY NO 166,169/1,169/2,RTC COLONY,VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH :9248747777.

### VIJAYAWADA

90. MITHRA AUTO AGENCIES PVT LTD (2604-26-01), 40-17-3,,PICHIAIAH STREET,GANDHI COLONY,VIJAYAWADA - 520001 PH :8886063507.

91. VARUN MOTORS PVT. LTD. (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH :9885576802.

92. VARUN MOTORS PVT. LTD. (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY,VJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH :9581480099.

93. SANTOSH AUTOMOTORS PVT. LTD. (2607-26-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010 PH :7799787459/7799787918.

94. VARUN MOTORS PVT. LTD. (2603-26-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH :8297241177.

95. SANTOSH AUTOMOTORS PVT. LTD (2607-26-02), D NO. 77-42-16A, OPP. NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520 015 PH :7799787932.

### VISHAKAPATNAM

96. VARUN MOTORS PVT. LTD. (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026 PH :9703843737.

97. VARUN MOTORS PVT. LTD. (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH :7799124243.

98. VARUN MOTORS PVT. LTD. (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., - 530007 PH :9581444477.

99. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH - 530018 PH :8886332209.

100. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-02), D.NO:51-17-2 , NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH). - 530013 PH :7799772272.

101. VARUN MOTORS PVT. LTD. (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007 PH :7799124243.

102. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046 PH :8897541234.

103. VARUN MOTORS PVT. LTD. (4603-46-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE – DUPPITURU, MANDAL – ACHUTAPURAM, DISTRICT – VISHAKAPATNAM, ANDHRA PRADESH. - 531011 PH :996877133.

104. VARUN MOTORS PVT. LTD. (4603-46-0L), SURVEY NO. 408/1 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ, VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. - 530045 PH :9885315344.

105. VARUN MOTORS PVT. LTD. (4603-46-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530 017 PH :07901644535.

### VISSANNAPETA

106. VARUN MOTORS (SNO1-SNO-01), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH - 521215 PH :9581337222.

### VIZAG

107. VARUN MOTORS (4603-46-10), SURVEY NO 228/224, WARD NO 19, AGNAMPUDI,VIZAG - 533053 PH :9885438455.

### VIZIANAGARAM

108. VARUN MOTORS PVT. LTD. (4603-N8-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001 PH :8886721213.

109. JAYABHERI AUTOMOTIVES PVT. LTD. (N801-N8-01), PLOT NO.8-1,DOOR NO.8-32-1,SURVEY NO.108/12A & 109/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH - 535001 PH :7702333514.

### YANAM

110. SB MOTORS (CTR1-CTR-01), SURVEY NO 82-2 TALLAREVU MANDAL,YANAM, EAST GODAVARI DISTRICT - 533463 PH :8886677759.

### YELAMANCHILI

111. JAYABHERI AUTOMOTIVES PVT. LTD. (GJR1-GJR-01), SURVEY NO. 19-1, 2, 3, 45/1, 45/2&3, KOKIRAPALLI, YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH. - 531055 PH :9849445639, 9642502345.

### YELESWARAM

112. VARUN MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), VARUN MOTORS P.LTD,DO.NO – 2-4-41,BESIDE GOLLAJI GARU BUNK,YERRAVARAM ROAD,YELESWARAM – 533429 - 533429 PH :9885511911.

### ARUNACHAL PRADESH BHALUKPONG

113. DY MOTORS (YT01-YT-01), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG , ARUNACHAL PRADESH - 790114 PH :8415075164.

**Dealer Workshop (AS ON 30.05.2023 )**

**ITANAGAR**

114. BUISHI YADA MOTORS (7501-75-01), A' SECTOR, NAHARLAGUN, ARUNACHAL PRADESH. - 791110  
PH :9436268870.
115. BUISHI YADA MOTORS (7501-75-04), MODEL VILLAGE, BEFORE GOVERNMENT HIGHER SECONDARY SCHOOL, NAHARLAGUN, ITANAGAR - 791110  
PH :8257075033.
116. D Y MOTORS (7502-75-01), LPC NO - DCJCC/LPC, BORUM VILLAGE, PO/PS- NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100  
PH :8415075164.

**PASSIGHAT**

117. BUISHI YADA MOTORS (7501-8A-03), PASSIGHAT BAZAR, PASSIGHAT, ARUNACHAL PRADESH - 791102  
PH :9402878414.

**RUKSIN**

118. DY MOTORS (SHZ1-SHZ-01), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH - 787060  
PH :8415075164.

**ZIRO**

119. BUISHI YADA MOTORS (CHM1-CHM-01), HAPOLI, NEAR TELECOMMUNICATION CENTRE, ZIRO, ARUNACHAL PRADESH. - 791120  
PH :9732010858.

**ASSAM**

**BAIHATA CHARIALI**

120. PALLAVI MOTORS PVT LTD (BNL1-BNL-01), DAG NO :1042, PATTa NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381  
PH :9864052488.

**BARAMA**

121. MITTAL AUTOZONE (SOX1-SOX-01), VILLAGE - BARJIAR, PO & PS - BARAMA, ASSAM -781346 - 781346  
PH :8638487401.

**BARPETA**

122. BHARATI MOTORS PVT. LTD. (7N01-7Z-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313  
PH :7002819523.

**BIJOYNAGAR**

123. PODDAR CAR WORLD (IA01-IA-01), AT/PO - BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST. BIJOYNAGAR - 781125  
PH :9864209733.

**BISWANATH CHAIRALI**

124. RAMLAL DURGADUTT MOTORS PVT LTD (BX11-BX1-01), DAG NO- 7.8.9 PERIODIC PATTa NO - 24 , REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176  
PH :8724087940.

**BONGAIGAON**

125. BHARATI MOTORS PVT. LTD. (7N01-7N-01), CHAPAGURI ROAD, BONGAIGAON - 7833830  
PH :7002350887/9864427537.

**CHAMATA**

126. PALLAVI MOTORS PVT LTD (CE11-CE1-01), DAG NO.1137, PATTa NO.376, MOUZA – DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306  
PH :9864052488.

**DHEKIAJULI**

127. RAMLAL DURGADUTT MOTORS PVT LTD (BRX1-BRX-01), DAG NO.242, K.P. PATTa NO.88, VILLAGE-BHAKUJAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110  
PH :9706568722.

**DHEMAJI**

128. SAIKIA AUTO PVT. LTD. (7P01-UD-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057  
PH :8638725209.

**DIBRUGARH**

129. JAYBEE AUTO AGENCIES PVT. LTD. (C101-C1-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001  
PH :9954799273.
130. BIMAL AUTO AGENCY (C102-C1-01), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA - MANKHATTA KANIKAH, DIST.-DIBRUGARH, ASSAM. - 786004  
PH :9864074525, 7003901301.

**DIGBOI**

131. VISHAL CAR WORLD PVT LTD (BYD1-BYD-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA , ASSAM. - 786171  
PH :9435860000..

**DIPHU**

132. RAMLAL DURGADUTT MOTORS PVT LTD (1P01-1P-01), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - 782460  
PH :9707556868.

**DULIAJAN**

133. JAYBEE AUTO AGENCIES PVT. LTD. (ADA1-ADA-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602  
PH :7002722358.

**GOALPARA**

134. BHARATI MOTORS PVT. LTD. (YN01-YN-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301  
PH :9101940372.

**GOLAGHAT**

135. RAMLAL DURGADUTT MOTORS PVT LTD (J303-J3-01), DAG NO. - 718, 684 & 706, PATTa NO 213, 168 & 192, KURUKA GAON, P.O - MORANGI, P.S -GOLAGHAT, DIST: GOLAGHAT, ASSAM PIN-785702 - 785702  
PH :7002099547.

**GORAIMARI**

136. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (GMB1-GMB-01), DAG NO- 3, KP PATTa NO - 11, VILLAGE- CHALABASTI, MOUZA- GORAIMARI - 783390  
PH :7002279100.

**GUWAHATI**

137. BIMAL AUTO AGENCY (0901-09-01), JHALUKBARI, GUWAHATI. - 781014  
PH :9864074525.
138. PALLAVI MOTORS PVT LTD (0902-09-01), DAG NO. 1&2,NEXT TO DEPTT. OF FAMILY WELFARE,SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022  
PH :9864210937.
139. BIMAL AUTO AGENCY (0903-09-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021  
PH :9864489722.
140. PODDAR CAR WORLD PVT LTD (0904-09-01), HENGRABARI, VIP ROAD,GUWAHATI - 781036  
PH :9508746340.
141. BIMAL AUTO AGENCY (0901-09-02), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37,GUWAHATI - 781028  
PH :9864040406.
142. PODDAR CAR WORLD (0905-09-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029  
PH :7002929414.
143. BIMAL AUTO AGENCY (0903-09-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005  
PH :7578005159.
144. MITTAL AUTOZONE (0908-09-01), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028  
PH :9864296666.
145. PALLAVI MOTORS PVT LTD (0902-09-02), DAG NO. 2201, PATTa NO. 237, VILLAGE – JYOTIKUCHI, MOUZA – BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. - 781034  
PH :9864052488.

**HOJAI**

146. RAMLAL DURGADUTT MOTORS PVT LTD (ARA1-ARA-01), KHATIYAN NO.: 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT – NAGAON , ASSAM - 782435  
PH :7002680534.

**HOWLY**

147. PODDAR CARWORLD (GKW1-GKW-01), PATTa NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316  
PH :8085957586.

**HOWRAGHAT**

148. BAJRANG CARWORLD (SGR1-SCR-01), HOWRAGHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481  
PH :9864191169.

**JAGI ROAD**

149. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-RB-02), JAGIROAD,MORIGAON,NALAOW,ASSAM - 782410  
PH :9365884355.

**JORHAT**

150. RAMLAL DURGADUTT MOTORS PVT LTD (G902-G9-01), DAG NO. 7 & 8 OF P.P NO. 33, DAG O. 9 OF P.P NO. 61, DAG NO. 382 OF P.P NO. 206, VILLAGE - PAKIMURI HABIGAON, MOUZA - SARAIBAHAL, JORHAT. - 785006  
PH :7002099547.

**KALGACHIA**

151. MITTAL AUTO (SLB1-SLB-01), VILL - KALGACHIA, PO - KALGACHIA , DIST BARPETA - 781319  
PH :8638487401.

**KARIMGANJ**

152. JAIN UDYOG (6901-1S-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710  
PH :9435179025.

**KHATKHATI**

153. PODDAR CAR WORLD PVT. LTD. (CAZ1-CAZ-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG. - 782460  
PH :6000900381.

**LANKA**

154. RAMLAL DURGADUTT MOTORS PVT LTD (SDD1-SDD-01), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR , MOUZA - LANKA, DIST - HOJAI , ASSAM. - 782442  
PH :9707556868.

**MANGALDOI**

## Dealer Workshop (AS ON 30.05.2023 )

155. PODDAR CAR WORLD (YW01-YW-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115  
PH :9706970132.

### MARGHERITA

156. VISHAL CAR WORLD PVT LTD (YR01-YR-01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181  
PH :9435860000.

### MORIGAON

157. RAMLAL DURGADUTT MOTORS PVT LTD (RB01-RB-01), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM. - 782105  
PH :7002239592.

### NAGAON

158. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002  
PH :9706007918.  
159. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (7J03-7J-01), DAG NO. 255, 1508(NJ)254(O), 1509(NJ)257(O) AND 291, PATTA NO. 506(NJ)15(O), 507(NJ)15(O), 507(NJ)97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST.-NAGAON. - 782002  
PH :9435060474/9864191169.  
160. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-03), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM - 782003  
PH :9706007918.

### NAHARKATIYA

161. JAYBEE AUTO AGENCIES PVT. LTD. (C101-CJ-03), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM . - 786610  
PH :7002722358.

### NALBARI

162. BIMAL AUTO AGENCY (9201-92-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335  
PH :7576842484.

### NORTH LAKHIMPUR

163. SAIKIA AUTO PVT. LTD. (7P01-7P-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031  
PH :8473946336.  
164. SAIKIA AUTO PVT. LTD. (7P01-7P-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001  
PH :7002571073.

### PATHSALA

165. PODDAR CAR WORLD PVT. LTD (CLD1-CLD-01), DAG NO. 451, PATTA NO. 151 KMP, PATHSALA, DIST.-BARPETA, ASSAM. - 781325  
PH :6000900256.

### RAJGARH

166. JAYBEE AUTO AGENCIES PVT. LTD. (CIJ1-CIJ-01), DAG NO.182, PP NO.140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611  
PH :9954799273.

### RANGIA

167. PODDAR CAR WORLD PVT. LTD. (6X01-6X-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354  
PH :8724877892.

### SHIBSAGAR

168. RAMLAL DURGADUTT MOTORS PVT LTD (G902-L9-02), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR - 785640  
PH :7002099547.

### SILCHAR

169. JAIN UDYOG (6901-J2-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006  
PH :9706002524.

### SORBHOG

170. MITTAL AUTOZONE (SGS1-SGS-01), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM. - 781317  
PH :8011042222.

### TANGLA

171. BIMAL AUTO AGENCY (CHO1-CHO-01), DAG NO.:121, PATTA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521  
PH :9954387619.

### TEZPUR

172. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154  
PH :8724087940.  
173. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-02), GORAIMARI, VILLAGE - SOLGAON, TEZPUR, ASSAM. - 784001  
PH :9836036157.

### TINSUKIA

174. VISHAL CAR WORLD PVT LTD (J401-J4-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - 786183  
PH :9435860000.

## BIHAR

### ARARIA

175. SEEMANCHAL MOTORS PVT. LTD. (O701-O7-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318  
PH :8797096013.

### ARRAH

176. PEARL CARS (VU01-VU-01), (A UNIT OF VINDDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301  
PH :8294634604.

### AURANGABAD

177. KARLO AUTOMOBILES (SNG1-SNG-01), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANDI, AURANGABAD - 824101  
PH :7019085212.

### BANKA

178. SEEMANCHAL MOTORS PVT. LTD. (CEQ1-CEQ-01), KHATA NO. 134, KHESTRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR - 813101  
PH :8797096020.

### BEGUSARAI

179. GS MOTORS PVT. LTD. (1U01-1U-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - 851101  
PH :9204756206.

### BETTIAH

180. SHREE GOPAL AUTO PVT. LTD. (O401-O4-01), BEETIAH - MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438  
PH :9771486183.

### BHAGALPUR

181. SEEMANCHAL MOTORS PVT. LTD. (G802-G8-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005  
PH :8797096020.

### BIHARSHARIF

182. REESHAV AUTOMOBILES (MG01-TG-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR - 803101  
PH :8263632175.

### BUXAR

183. PEARL CARS (VV01-VV-01), C/O DEVDHTRHA UPDPHYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101  
PH :8294634605/8294634602.

### CHAKIA

184. RAM KRISHNA MOTORS PVT. LTD. (CWA1-CWA-01), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412  
PH :9801773716.

### CHAPRA

185. REESHAV AUTOMOBILES (MG01-TH-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301  
PH :7061295296.

### DANAPUR

186. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-NN-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, - 800018  
PH :9386898458.

### DANAPUR, PATNA

187. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-NN-05), TOUZI NO. 5057, THANA NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA. - 801503  
PH :9334415434.

### DARBHANGA

188. RAJKRISHNA MOTORS LLP (1V02-1V-01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P.-13, ROAD, DARBHANGA, BIHAR - 846009  
PH :7004529271.  
189. RAJKRISHNA MOTORS LLP (1V02-1V-02), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - 846003  
PH :9693127351.

### DEHRI ON SONE

190. PEARL CARS (1X01-MK-02), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST.-ROHTAS, BIHAR. - 821307  
PH :8294634602.

### GAYA

191. KARLO AUTOMOBILES PVT LTD (Y601-Y6-01), BODH GAYA, GAYA. - 824231  
PH :7004574631/8539063615.  
192. DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD (Y602-Y6-01), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD,GAYA, PIN 823004 - 823004  
PH :9031011806/9900024001.

### GOPALGANJ

193. SHREE GOPAL AUTO PVT. LTD. (O301-O3-01), NH-28, DANAPUR, TEHSIL-MANJAGARH,GOPALGANJ (BIHAR) - 800023  
PH :9771486170/9771486139.

**Dealer Workshop (AS ON 30.05.2023 )**

**HAJIPUR**

194. REESHAV AUTOMOBILES (MG01-MG-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR ( VAISHALI). - 844101  
PH :9060945038.

**KATIHAR**

195. SEEMANCHAL MOTORS PVT. LTD. (O601-O6-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAR PURNEA ROAD, KATIHAR - 854105  
PH :7762893700.

**KISHANGANJ**

196. SEEMANCHAL MOTORS PVT. LTD. (PX01-PX-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA-KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101  
PH :8797096019.

**LAKHISARAI**

197. GS MOTORS PVT. LTD. (CHU1-CHU-01), TAUZI NO. 39, KHATA NO. 3, KHESRA NO. 496, MOUZA - JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR. - 811311  
PH :9204756206.

**MADHUBANI**

198. RAJKRISHNA MOTORS LLP (CAJ2-CAJ-01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211  
PH :9304481978  
9693127351.

**MOHANIA**

199. PEARL CARS (VW01-VW-01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109  
PH :8294634632/8294634649.

**MOTIHARI**

200. RAJIV AUTOMOBILES PVT LTD (T401-FH-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401  
PH :9234609669.

**MUZAFFARPUR**

201. RAJIV AUTOMOBILES PVT LTD (T401-T4-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002  
PH :9910347908.
202. RAM KRISHNA MOTORS PRIVATE LTD. (T402-T4-01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. - 842001  
PH :9102173333.
203. RAJIV AUTOMOBILES PVT LTD (T401-T4-04), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146  
PH :9234609671.

**NAUGACHIA**

204. SEEMANCHAL MOTORS PVT. LTD. (CFS1-CFS-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204  
PH :8797096014, 8797096020.

**NAWADA**

205. REESHAV AUTOMOBILES (MG01-TJ-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110  
PH :6206162228.

**PATNA**

206. VAU'S AUTOMOBILE (1503-15-01), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA. - 800014  
PH :9771446012.
207. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. - 800013  
PH :09304212119/7004573547.
208. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001  
PH :9934020200.
209. REESHAV AUTOMOBILES PVT.LTD. (1506-15-01), PLOT NO 25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004  
PH :7632995356.
210. KARLO AUTOMOBILES PVT LTD (1502-15-05), JAGDEOPATH , NEAR SAI CORPORATE PARK, PATNA - 801506  
PH :9264190675.
211. ALANKAR (1504-15-06), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA – 800006 - 800006  
PH :9304403916.

**PURNEA**

212. SEEMANCHAL MOTORS PVT. LTD. (6V01-6V-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326  
PH :8797096014.

**SAHARSA**

213. GS MOTORS PVT. LTD. (AAP1-AAP-02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201  
PH :9263638456.

**SAMASTIPUR**

214. RAJKRISHNA MOTORS LLP (1W02-1W-01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101  
PH :9204552405.

**SASARAM**

215. PEARL CARS (1X01-1X-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115  
PH :8294634602/8294634649.

**SITAMARHI**

216. RAJIV AUTOMOBILES PVT. LTD. (EO01-EO-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. - 843301  
PH :9234609671  
7280074124.

**SIWAN**

217. SHREE GOPAL AUTO PVT. LTD. (O501-O5-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236  
PH :9771486132.

**CHANDIGARH**

**CHANDIGARH**

218. MODERN AUTOMOBILES (0702-07-01), 4 M.W. INDL AREA, CHANDIGARH - 160002  
PH :9646000190.
219. AUTOPACE NETWORK PVT LTD (0705-07-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002  
PH :9878422201.
220. TRICITY AUTOS (9M01-07-02), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH - 160002  
PH :9988882335.
221. NAVDESH AUTO LLP (0708-07-01), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. - 160002  
PH :7087035482.

**CHHATTIGARH**

**PENDRA**

222. M SQAURE (SCZ1-SCZ-01), – M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA,GOURELA PENDRA MARWAHI-495119 - 495119  
PH :7987590484.

**CHHATTISGARH**

**AMBIKAPUR**

223. MAHAMAYA AUTOCARS PVT LTD (AE01-AE-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001  
PH :7987741432.

**BAGBAHARA**

224. HDN MOTORS (SEB1-SEB-01), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449  
PH :7909800004.

**BAIKUNTHPUR**

225. MAHAMAYA AUTOCARS PVT LTD (CQU1-CQU-01), WARD NO.01, KHATA NO.91/6, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335  
PH :9179350707.

**BALOD**

226. CHOUHAN (SFE1-SF-01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228  
PH :9837325267 .

**BALODA BAZAR**

227. SKY AUTOMOBILES (5001-GJ-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332  
PH :9893307429.

**BEMETRA**

228. CHOUHAN AUTOMOBILES LLP (CBC2-CBC-01), KHASRA NO. 88/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVGHAD CHOWK, BEMTARA CHATTISGARH - 491335  
PH :6262000222.

**BHATAPARA**

229. SPARSH AUTOMOBILES (BBJ1-BBJ-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118  
PH :8921326361/ 9285505780.

**BHILAI**

230. CHOUHAN AUTOMOBILES LLP (8305-83-01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. - 490023  
PH :9111100140.
231. SPARSH AUTOMOBILES PVT LTD (8304-83-01), R-17, INDUSTRIAL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH - 490026  
PH :8779064848.
232. CHOUHAN AUTOMOBILES LLP (8305-83-02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001  
PH :6262000222.

**BHILLAI**

233. SPARSH AUTOMOBILES (8304-83-02), M/S. SPARSH AUTO,VEERSAVARKAR MARKET, G.E ROAD, SUPELA,BHILLAI-490023 - 490023  
PH :9926626662.

**BILASPUR**

234. SATYA AUTO PVT LTD (C303-C3-01), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001  
PH :9109194833.
235. SATYA AUTO PVT LTD (C303-C3-02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. - 495006  
PH :9977879698.

## Dealer Workshop (AS ON 30.05.2023 )

236. M SQUARE MOTORS ( A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (C302-C3-01), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. - 495223  
PH :6262622560.

### DALLIRAJHARA

237. CHOJHAN (SMZ1-SMZ-01), H.NO 185, WARD NO 25, NAYA MARKET,DALLIRAJHARA,BALOD DISTRICT-491228 - 491228  
PH :6262000222.

### DEOBHOG

238. SPARSH AUTO (SIQ1-SIQ-01), M/S SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR,NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG - 493890 - 493890  
PH :926626662.

### DHAMDARI

239. SKY AUTOMOBILES (7V01-7V-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMDARI-493773 CHATTISGARH - 492009  
PH :8889998612.

### DURG

240. SPARSH AUTOMOBILES PVT LTD (7W03-7W-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001  
PH :9840437544.

### GARIYABANDH

241. SPARSH AUTOMOBILES (CCH1-CCH-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032  
PH :9669638883.

### JAGDALPUR

242. SKY AUTOMOBILES (EC01-EC-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001  
PH :9109996511.

### JANJIR

243. SATYA AUTO PVT LTD (9N02-9N-01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJIR - 495668  
PH :7747000446.

### KANKER

244. SKY AUTOMOBILES (5001-KG-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER, DISTRICT - KANKER, CHHATTISGARH - 494334  
PH :8889998625.

### KAWARDHA

245. CHOJHAN AUTOMOBILES LLP (DI02-DI-01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491 995  
PH :6262000222.

### KHAIRAGARH

246. SPARSH AUTOMOBILES PVT LTD (GMG1-GMG-01), KHAIRAGARH -JHALBANDHA ROAD,AMLIPARA, OPP - BIJALI OFFICE, KHAIRAGARH -491881 - 491881  
PH :9926626662.

### KHARSIA

247. SATYA AUTO (SET1-SET-01), M/S SATYA AUTO , BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 496661  
PH :9993092051.

### KONDAGAON

248. SKY AUTO (SDF1-SDF-01), - M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGOAN, CHHATTISGARH - 494226  
PH :9425204051.

### KORBA

249. SATYA AUTO PVT LTD (U702-U7-01), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681  
PH :8462000861.

### MAHASAMUND

250. SPARSH AUTOMOBILES (5002-9P-02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND. - ??  
PH :9926280700.

### MANENDRAGARH

251. MAHAMAYA AUTOCARS PVT LTD (AE01-BCE-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442  
PH :9584136234.

### MUNGELI

252. SATYA AUTO PVT LTD (BLE2-BLE-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468  
PH :8462000844.

### PATHALGAON

253. MAHAMAYA AUTOCARS PVT LTD (BXO1-BXO-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT - JASPUR, CHHATTISGARH. - 496118  
PH :9752195523.

### PITHORA

254. SPARSH AUTOMOBILES (CCG1-CCG-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008  
PH :9926280700.

### RAIGARH

255. SATYA AUTO PVT LTD (7Y03-7Y-01), JINDAL ROAD, RAIGARH - 496001  
PH :7024398350.

### RAIPUR

256. SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010  
PH :9584433102.  
257. SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001  
PH :9584460290.  
258. SPARSH AUTOMOBILES (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001  
PH :9669792000.  
259. SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001  
PH :9893000161.  
260. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006  
PH :9522314155.  
261. SPARSH AUTOMOBILES (5002-50-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004  
PH :9009666400.  
262. SPARSH AUTOMOBILES (5002-50-05), PLOT - 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR - ??  
PH :9977220395.  
263. SKY AUTOMOBILES (5001-50-07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. - 492013  
PH :9584460289.  
264. HDN MOTORS PVT. LTD. (5005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. - 492001  
PH :7909800093.  
265. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-50-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH - 492005  
PH :6262620057.

### RAJIM

266. SPARSH AUTOMOBILES (5002-MO-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881  
PH :966963883.

### RAJNANDGAON

267. SPARSH AUTOMOBILES PVT LTD (LQ02-LQ-01), NEAR HANUMAN TEMPLE, VILL-MANKI , NH-6, RAJNANDGAON, CHHATTISGARH - 491441  
PH :7887518100.

### SARAIPALLI

268. SKY AUTOMOBILES PVT. LTD. (BUF1-BUF-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI - 493558  
PH :7000723259.

### SARANGARH

269. SATYA AUTO PVT LTD (BUC2-BUC-01), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. - 733751  
PH :8462000841.

### TILDA

270. SKY AUTOMOBILES (CWR1-CWR-01), KASRA NO. 29/31, TILDA, DIST.-RAIPUR, CHHATTISGARH. - 493 114  
PH :9439314464.

### TITLAGARH

271. ODYSSEY MOTORS (SQE1-SQE-01), M/S PLOT NO 687/1216, MOUZA PIPALPADAR, TITLAGARH,BALANGIR, ODISHA - 767033  
PH :9439314464.

### DADRA AND NAGAR HAVELI SILVASSA

272. KATARIA AUTOMOBILES PVT. LTD. (ED01-ED-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230  
PH :9723816223.

### DAMAN AND DIU

### DAMAN

273. KATARIA AUTOMOBILES PVT. LTD. (0104-98-08), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY - 396210  
PH :9924130655.

### DELHI

### DELHI

274. SAYA AUTOMOBILES PVT. LTD. (0808-08-03), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033  
PH :47088888.  
275. BAGGA LINK MOTORS PVT LTD. (0811-08-01), 395 PATPAR GANJ INDL AREA,PATPARGANJ NEW DELHI - 110092  
PH :46488830, 46488831.  
276. BAGGA LINK MOTORS PVT LTD. (0811-08-02), LINK ROAD,(NEAR BAGGA PETROL PUMP),KAROL BAGH,NEW DELHI - 110005  
PH :23524646, 23522626.  
277. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-01), A-100 MAYAPURI,PHASE-II,NEW DELHI - 110064  
PH :41845000, 49305232.  
278. COMPETENT AUTOMOBILES CO. LTD. (0806-08-03), PLOT NO.3,GAZIPUR,DELHI, - 110096  
PH :45300000.  
279. T.R. SAWHNEY MOTORS PVT LTD (0819-08-02), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042  
PH :71118333.

## Dealer Workshop (AS ON 30.05.2023 )

280. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F2-08-01), 5, WAZIRPUR INDUSTRIAL AREA, ADJACENT TO WAZIRPUR DEPOT, RING ROAD, NEW DELHI - 110034  
PH :27153996-99, 27151466-67.
281. ROHAN MOTORS LTD. (0886-08-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044  
PH :40567900, 41679252-259.
282. T.R. SAWHNEY MOTORS PVT LTD (0819-08-01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094  
PH :71115333.
283. RANA MOTORS PVT LTD (08A1-08-02), C-47, OKHLA INDUSTRIAL AREA, PHASE-II, NEW DELHI - 110020  
PH :41707777.
284. MAGIC AUTO PVT. LTD. (0888-08-01), A-93, PHASE-2, MAYAPURI INDL AREA, DELHI - 110064  
PH :41847777.
285. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F3-08-01), A-1 UDYOG VIHAR, NEW ROHTAK ROAD, PEERAGARHI, DELHI - 110041  
PH :25963535, 48616500.
286. T.R. SAWHNEY MOTORS PVT LTD (0819-08-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092  
PH :9873851333.
287. MAGIC AUTO PVT. LTD. (08B7-08-01), PLOT NO. 68/3, MOTINAGAR, NEW DELHI, - 110015  
PH :43777777, 43777721.
288. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F8-08-01), PLOT NO.9, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. - 110063  
PH :43288888.
289. SAYA AUTOMOBILES (0808-08-2B), KHASRA NO.2,G.T. KARNAL ROAD, OPP. GURUDUARA HARGOVIND SINGH, SIRAS PUR BADLI, DELHI - 110033  
PH :27731325, 27731856.
290. COMPETENT AUTOMOBILES CO. LTD. (0806-08-05), B-83 MAYAPURI PHASE I, NEW DELHI - 110015  
PH :47268980.
291. BAGGA LINK MOTORS PVT LTD. (0811-08-03), PLOT NO.4,6,8,10 NEAR FORTIS HOSPITAL, OPPOSITE NIRULAS, BASA POTERY COMPOUND, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI - 110070  
PH :45688888, 45688811.
292. RANA MOTORS PVT LTD (08A1-08-04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020  
PH :40877777, 26389930.

293. COMPETENT AUTOMOBILES CO. LTD. (0806-08-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI - 110 015  
PH :8377007980/81/02.
294. PREM MOTORS PVT. LTD. (08D4-08-01), KH. NO.804/2, MAHIPALPUR MATA CHOWK, DELHI - 110037  
PH :42390000.
295. AAA VEHICLEADES PVT. LTD. (08B9-08-03), VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041  
PH :66118888.
296. RANA MOTORS PVT LTD (08A1-08-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033  
PH :41609999, 42474444.
297. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F9-08-01), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. - 110052  
PH :42020000, 9910114255.
298. T.R. SAWHNEY MOTORS PVT LTD (08D2-08-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064  
PH :71119333, 9999049337.
299. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-02), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015  
PH :999903888.
300. MAGIC AUTO PVT. LTD. (08D5-08-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092  
PH :9818741741.
301. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-03), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. - 110043  
PH :9999127840/9999127947.
302. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F5-08-01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI. - 110040  
PH :8860637358.
303. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-04), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI. - 110059  
PH :9873173005.
304. FAIR DEAL WHEELS PVT. LTD (08E3-08-01), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMASHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJAWALA ROAD, DELHI - 110086  
PH :971193801.
305. COMPETENT AUTOMOBILES CO. LTD. (0806-08-07), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059  
PH :9582797774.

306. JAGMOHAN AUTOMOTIVES (08F6-08-01), PLOT NO. 69/2, WAZIRPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052  
PH :9650790351.
307. RANA MOTORS (08A1-08-08), B-83, GTK ROAD INDUSTRIAL AREA, DELHI. - 110033  
PH :9873400386.
308. AAA VEHICLEADES (08B9-08-G1), KHASRA NO. 204, MAIN CHHATARPUR ROAD, CHHATARPUR, NEAR SAI BABA MANDIR, DELHI, PIN-110030 - 110030  
PH :9829342761.
309. VIPUL MOTORS (08F7-08-01), B-26, JHILMIL INDUSTRIAL AREA, DELHI - 110095 - 110095  
PH :9811233385.

### OKHLA, DELHI

310. AAA VEHICLEADES PVT LTD (08B4-08-01), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020  
PH :8448582912.

### WAZIRPUR - DELHI

311. DD MOTORS (08F1-08-05), A-90, WAZIRPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052  
PH :9310367233.

## GOA

### BICHOLIM

312. SAI SERVICE PRIVATE LIMITED (BHN1-BHN-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529  
PH :2385500, 9881746566.

### CANACONA

313. CHOWGULE INDUSTRIES PVT. LTD. (IT01-IT-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702  
PH :0832-2633010/8805024916.

### CUNCOLIM

314. SAI SERVICE PRIVATE LIMITED (3402-AAO-06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNAMEODDI, CUNCOLIM, SOUTH GOA - 403703  
PH :2763062, 2763063, 9850398057.

### DHARBANDORA

315. CHOWGULE INDUSTRIES PVT. LTD. (3408-GO-07), AT- KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401  
PH :0832-6623477/7888004357.

### MAPUSA

316. SAI SERVICE PRIVATE LIMITED (3402-8Z-05), D-2/9, MAPUSA INDUSTRIAL ESTATE, MAPUSA, GOA - 403507  
PH :2267000, 8660432266.
317. CHOWGULE INDUSTRIES PVT. LTD. (3408-8Z-03), PLOT NO. 19/20, THIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA, GOA - 403507  
PH :0832-6631666/6631608/8888817955.

### MARGAO

318. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602  
PH :0832-6623444/420/7796630235.
319. SAI POINT CARS PVT LTD (3409-1Y-01), H.NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN SALTCETE ,GOA - 403722  
PH :9545454826/8380013499.
320. SAI SERVICE PRIVATE LIMITED (3402-1Y-02), SURVEY NO. 212/4,VILLAGE - VERNA,TAL : SALTCETE ,NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718  
PH :2883000, 2791195,9834398096.
321. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-08), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALTCETE SOUTH GOA, GOA - 403722  
PH :0832-6621800/9922950800.

### PANAJI

322. CHOWGULE INDUSTRIES PVT. LTD. (3408-P1-02), D.B BANDOOKAR MARG,CAMPAL,PANAJI,GOA - 403001  
PH :9922950798/9922925701.
323. SAI SERVICE PRIVATE LIMITED (3402-P1-07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002. - 403001  
PH :22229222/2225222,9923865179.

### PERNEM

324. CHOWGULE INDUSTRIES PVT. LTD. (CUA1-CUA-01), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUSTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA. - 403512  
PH :8380082893.

### POLEM

325. CHOWGULE INDUSTRIES (SHO1-SHO-01), DULGAL-SHELIM,VILLAGE POLEM-LOLIEM ,SOUTH GOA,403728 - 403728  
PH :#REF1.

### PONDA

326. SAI SERVICE PRIVATE LIMITED (3402-34-03), OFF PANJIM HIGHWAY,PONDA,GOA, - 403401  
PH :2324106, 2311499, 2324120, 9518349559.

### PORVORIM

327. SAI SERVICE PRIVATE LIMITED (3402-P1-01), SURVEY NO: 36/1,PENHA DE FRANCE,TAL : BARDEZ, ALTO PCRVORIM,GOA - 403501  
PH :2419200, 2414324, 9881746567.

### SANVORDEM

328. CHOWGULE INDUSTRIES PVT. LTD.  
(BTk1-BTK-01), SURVEY NO. 4, SUBDIVISION-3,  
VILLAGE – CACORA, TALUKA – CURCHOREM,  
SANVORDEM, DIST. – SOUTH GOA, GOA, -  
403706  
PH :9850477607.

#### SATTARI

329. CHOWGULE INDUSTRIES PVT. LTD.  
(3408-BOP-10), SURVEY NO. 60, SUB DIV NO. 05,  
VILLAGE ARVALEM, VILLAGE PANCHAYAT  
ARVALEM, TALUKA SATTARI, NORTH GOA, -  
GOA - 403505  
PH :9923464422.

#### TALEIGAON

330. CHOWGULE INDUSTRIES PVT. LTD.  
(3408-NP-06), SURVEY NO. 122, MAHBOS, NEAR  
SHANKARWADI TEMPLE, SHANKARWADI,  
TALEIGAON, - 403001  
PH :9922950798/9922925701.

#### VASCO

331. SAI SERVICE PRIVATE LIMITED (3402-CP-04),  
NEXT TO SHIKALIM  
CHURCH,SHIKALIM,VASCO,GOA - 403802  
PH :2542581/2526008/2526000/9850398058.  
332. CHOWGULE INDUSTRIES PVT. LTD.  
(3408-CP-09), OPP BHARAMASTAL TEMPLE,  
PATRONG BAINA, VASCO,GOA - 403802  
PH :0832-2500407/427/9921943608/9850986904.

### GUJARAT

#### AHMEDABAD

333. KIRAN MOTORS LTD (0102-01-01), SARKHEJ -  
GANDHINAGAR HIGHWAY,OPP. RAJPATH  
CLUB,AHMEDBAD - 380054  
PH :9624055445.  
334. KATARIA AUTOMOBILES PVT. LTD. (0104-01-01),  
D/8 BEHIND ESI HOSPITAL,OUTSIDE DARIAPUR  
DARWAJA,AHMEDABAD - 380016  
PH :9824543500.  
335. POPULAR WHEELERS (INDIA) PVT. LTD.  
(0105-01-01), PATEL TRUST BUILDING, AVTAR  
HALL,NAROL, NARODA HIGHWAY,ISANPURA  
ROAD,AHMEDABAD - 382443  
PH :61903232.  
336. KIRAN MOTORS LTD (0102-01-02), BEHIND L&T  
GODOWN,SARKHEJ SANAND HIGHWAY,  
AHMEDABAD - 382210  
PH :26891863, 26891009, 26891294.  
337. KATARIA AUTOMOBILES PVT. LTD. (0104-01-05),  
NEAR KOKHRA BRIDGE,MANINAGAR - 380008  
PH :7567568182.  
338. KATARIA AUTOMOBILES PVT. LTD. (0110-01-01),  
BEHIND ADANAL PUMP, NEAR MAKARBA  
CROSSING, MAKARBA,SG HIGHWAY - 380051  
PH :7069054900.

339. POPULAR WHEELERS (INDIA) PVT. LTD.  
(0111-01-01), BESIDE SOLA ROAD BRIDGE,S. G.  
HIGHWAY SOLA,AHMEDABAD - 380054  
PH :65058111.  
340. KIRAN MOTORS LTD (0112-01-01), SURVEY NO.  
82/1/1, NEAR H.P. PETROL PUMP, MOTERA  
ROAD, CHANDKHEDA, AHMEDABAD - 380005  
PH :8347491800/9824023122.  
341. UDAY AUTOLINK PVT. LTD. (0113-01-01), NEAR  
GALAXY SPACIA, OPP. DASTAN FARM, S. P.  
RING ROAD, KATHWADA, AHMEDABAD,  
GUJARAT - 382430  
PH :7567229999.  
342. NANDA AUTOMOBILES PVT. LTD. (0114-01-01),  
SURVEY NO. 229/3, OPP. GOKULESH PETROL  
PUMP, NAROL - ASLALI ROAD, NAROL,  
AHMEDABAD, GUJARAT. - 382405  
PH :8866558787 / 8460088883.  
343. STARLINE CARS (AHMEDABAD) PVT LTD  
(0115-01-01), PLOT NO. 103/2, NANDA CHILODA,  
NEAR RAILWAY CROSSING, KRISHNANAGAR  
ROAD, NARODA, AHMEDABAD - 382330  
PH :9824601729.  
344. KIRAN MOTORS LTD (0112-01-02), FINAL PLOT  
NO 33/1/1, NEAR SHRUSHTI LAVISH, OPP.  
SHYAM VILLA II, NARODA-NIKOL ROAD, NIKOL  
DISTT. AHMEDABAD - 382330  
PH  
:7069868374/9173840458/7383651643/9173044104  
-  
345. KIRAN MOTORS LTD (0102-01-04), SURVEY NO.  
245/3, TP SCHEME NO. 43, NEAR KARGIL  
PETROL PUMP, SCIENCE CITY ROAD,  
AHMEDABAD - 380060  
PH :9327617447, 9327214890.  
346. POPULAR WHEELERS (INDIA) PVT. LTD.  
(0109-01-01), BEHIND G. B. SHAH COLLEGE,  
NEAR SWAMINARAYAN PARK, VAISHALI  
TOWNSHIP ROAD, VASNA, AHMEDABAD,  
GUJARAT. - 380007  
PH :9099993830.  
347. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT.  
LTD.) (0129-01-01), PLOT NO. 116, BOPAL –  
AMBIL ROAD, BOPAL , AHMEDABAD, DISTRICT  
– AHMEDABAD, GUJARAT. - 380058  
PH :7211140026, 7211130053.  
348. TANU MOTORS PVT. LTD. (0118-01-01), SURVEY  
NO. 1155/1-2, 1154 & 1156, PLOT NO. 39,  
SARKHEJ-SANAND ROAD, SANAND,  
AHMEDABAD (GUJARAT) - 382110  
PH :9512009110.  
349. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT.  
LTD.) (0117-01-01), PLOT NO.116 & 118/2,  
SARDAR PATEL RING ROAD, VASTRAL,  
AHMEDABAD - 382418  
PH :7623089000.

350. STARLINE CARS PVT. LTD. (D101-01-09), SR NO  
– TP - 57, PLOT NO. 67, NEAR GOTA FLYOVER  
BRIDGE, OPP. SHANKU FARM HOUSE, S.G.  
HIGHWAY, GOTA, AHMEDABAD. - 382481  
PH :9824601729.  
351. KATARIA AUTOMOBILES PVT. LTD. (0110-01-02),  
PLOT NO. 112, 116 & 119, SURVEY NO.  
283/3.7.10, B/H SILVER STAR, BESIDE HARI  
VILLA BUNGLOWS, GOTA ROAD,  
CHANDLODIYA, AHMEDABAD. - 382481  
PH :9824000378.  
352. DB MOTORS PRIVATE LIMITED (0119-01-01),  
SURVEY NO. 131A, NH-8, ASLALI, OPP.-OCTROI  
NAKA, AHMEDABAD. - 382427  
PH :9726031111.  
353. POPULAR WHEELS (0111-01-02), SAVAN  
SQUARE, SHOP NO. 1, 2, 3, 4, 5, SERVE NO.  
39/1, F.P. NO. 92, T.P. NO. 66/A, CHENPUR, NEW  
RANIP, AHMEDABAD. - 382 427  
PH :9925203344.  
354. DB MOTORS PRIVATE LIMITED (0119-01-02),  
PLOT NO. 718, ASHRAM ROAD, OPPOSITE  
GANDHI ASHRAM, OLD VADAJ, HRIDAYA KINJ,  
AHMEDABAD. - 380013  
PH :9909048260.

#### AMBAJI

355. TANU MOTORS (SKQ1-SKQ-01), OPP  
KUMBHARIYA JAIN DERASAR, GIDC ROAD,  
AMBAJI, DIST-BANASKANTHA, GUJARAT 385110  
- 385110  
PH :#REF1.

#### AMOD

356. RAVIRATNA MOTORS (F801-ZE-03), ROYAL  
PARK, JAMBUSAR-BHARUCH ROAD, AMOD,  
DISTRICT: BHARUCH, GUJARAT. - 392110  
PH :9687691106/9687699383.

#### AMRELI

357. ALPHA AUTOLINK LLP (9E02-9E-01), LATHI BY  
PASS ROAD, AMRELI, GUJARAT. - 365601  
PH :9978938858/9978938833.

#### ANAND

358. AMAR CARS PVT. LTD. (F702-F7-01), JANTHA  
CROSSING,SOJITRA ROAD,ANAND - 388121  
PH :9909960772.  
359. KATARIA AUTOMOBILES PVT. LTD.  
(F703-F7-01), SURVEY NO. 189/1+2/A+3/A/K  
190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY  
OVERBRIDGE, ANAND-CHIKHODRA ROAD,  
ANAND, GUJARAT. - 388 120  
PH :7698954466.

#### ANKLAV

360. KATARIA AUTOMOBILES (SEO1-SEO-01),  
AMBICA COMPLEX, GROUND FLOOR SHOP NO.  
B, C AND D, ASODAR CHOKDI, TAL. ASODAR,  
CITY ANKLAV, DIST. ANAND, PIN-388510,  
GUJARAT - 388510  
PH :7227917151.

### Dealer Workshop (AS ON 30.05.2023 )

#### ANKLESHWAR

361. RAVIRATNA MOTORS PVT LTD (P901-P9-01),  
PLOT NO. 624/2/BA, GIDC, VALIA ROAD,  
ANKLESHWAR - 393002  
PH :9687691063.

#### BAGODRA

362. NANDA AUTOMOBILES PVT. LTD.  
(CVQ1-CVQ-01), SHOP NO. 9, 10, 11, 12,  
KAMDHENU COMPLEX, BAGODRA HIGHWAY,  
NR. SBI BANK, BAGODRA - 382240  
PH :9727822000, 9726269111.

#### BALASINOR

363. AMAR CARS PVT. LTD. (CJE1-CJE-01), SR. NO.  
1451, OPP. OIC PETROL PUMP, AHMEDABAD  
HIGHWAY (NH-47), KANTHARJIINA MUVADA,  
VILLAGE – VADALA, TALUKA – BALASINOR,  
DISTRICT – MAHISAGAR, GUJARAT. - 388255  
PH :7211109960.

#### BARDOLI

364. DHRU MOTORS (4002-Q1-02), G.I.D.C,SURAT  
BARDOLI ROAD,BARDOLI, - 394601  
PH :9825413113/9879104454.  
365. KATARIA AUTOMOBILES PVT. LTD.  
(Q106-Q1-02), BLOCK NO.13, NANDIDA CROSS  
ROAD, BARASADI VILLAGE, SURAT-BARDOLI  
ROAD, BARDOLI, GUJARAT - 394310  
PH :7698022665/9924138860.

#### BAREJA

366. KATARIA AUTOMOBILES PVT. LTD.  
(BAN1-BAN-01), 5/6/7, ADITYA COMPLEX  
NATIONAL HIGHWAY-8, BAREJA , TALUKA –  
DASKROI, DISTRICT – AHMEDABAD, GUJARAT -  
382425  
PH :7046079997.

#### BARWALA (AHMEDABAD)

367. UDAY AUTOLINK PVT. LTD. (I401-I4-01), OPP.  
HILTON HOTEL, BHAVNAGAR HIGHWAY, TA  
BARWALA, DIST. AHMEDABAD - 382450  
PH :7567449999/9687677611.

#### BAVLA

368. KATARIA AUTOMOBILES PVT. LTD.  
(0104-RX-07), NEAR ESSAR PETROL PUMP,  
BAVLA -AHMEDABAD HIGHWAY, BAVLA -  
382220  
PH :9824344889.

#### BECHRAJI

369. STARLINE CARS PVT. LTD. (GJM1-GJM-01), R.S.  
NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI),  
TALUKA - BECHARAJI, DIST.-MEHSANA, -  
384210  
PH :9909043244.

#### BHABHAR

## Dealer Workshop (AS ON 30.05.2023 )

370. STARLINE CARS (CWD1-CWD-01), SHOP NO. 7, 8, 9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320  
PH :9909043244, 9824601729.

### BHACHAU

371. K.D. MOTORS (P501-JP-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140  
PH :9909953036, 9879390919.

### BHANVAD

372. ATUL MOTORS JAM LLP (BND2-BND-01), R.S. NO.439, PLOT NO.19, BHANVAD (GUJARAT) - 360510  
PH :9574005964 / 9574004714.

### BHARUCH

373. RAVIRATNA MOTORS (F801-F8-01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011  
PH :9687691044; 9687632647.

### BHAVNAGAR

374. KATARIA AUTOMOBILES (C902-C9-01), SURVEY NO 137/2, PLOT NO 301/2&3 AND 301/4&5, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004  
PH :9426168286.  
375. KATARIA AUTOMOBILES (C902-C9-02), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATNAKA, AT-ADHEWADA, DIST-BHAVNAGAR, GUJARAT – 364002. - 364002  
PH :9638884422.

### BHUJ

376. K.D. MOTORS (P501-P5-01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , BHUJ, GUJARAT - 370001  
PH :02832-232534/5, 9879898799, 8780351870.  
377. K.D. MOTORS (P501-P5-03), R.S NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001  
PH :9909953124.

### BODELI

378. KIRAN MOTORS LTD (0R01-0R-01), OPP NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA: SANKHEDA,VADODARA - 391135  
PH :9714592999.

### BORSAD

379. AMAR CARS PVT. LTD. (BJM1-BJM-01), BORSAD –TARAPUR HIGHWAY, BORSAD , DISTRICT – ANAND, GUJARAT - 388540  
PH :9586477744.

### BOTAD

380. KATARIA AUTOMOBILES (AP03-AP-19), PLOT NO.13, SURVEY NO 33.34, AND 35 PAKKI VILLAGE, HADADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIYAD BOTAD ROAD - 364710  
PH :9558060658.

### CHANASMA

381. STARLINE CARS (CVF1-CVF-01), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220  
PH :9909043244, 9824601729.

### CHANDKHEDA - AHMEDABAD

382. KATARIA AUTOMOBILES PVT. LTD. (0104-01-10), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD. - 382470  
PH :9723302111.

### CHANDRALA

383. NANDA AUTOMOBILES PVT. LTD. (GLT1-GLT-01), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST- GANDHINAGAR, GUJARAT - 382320  
PH :9725062187, 9727726003.

### CHANGODAR

384. PEGASUS (A UNIT OF VISUAL MOTORS PVT. LTD.) (CTD2-CTD-01), SURVEY NO.393, VILLAGE – MORAIYA, CHANGODAR, TALUKA – SANAND, SUN DISTT - AHMEDABAD. - 382210  
PH :72111120014.

### CHIKHLI

385. KATARIA AUTOMOBILES PVT. LTD. (BCB1-BCB-01), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521  
PH :7698953899.

### CHILODA

386. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (GJO1-GJO-01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. - 382355  
PH :7211168938, 7623039000.

### CHOTILA

387. DREAM VEHICLES PVT LTD (CFI1-CFI-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO – CHOTILA, DISTRICT – SURENDRANAGAR, GUJARAT. - 363520  
PH :9227775709.

### CHUDA

388. DREAM AUTOMOBILES (SOC1-SOC-01), NR. GOVT HOSPITAL,CHATARLIYA ROAD,CHUDA,SURENDRANAGAR. - 363410  
PH :9313802500.

### DABHOI

389. KATARIA AUTOMOBILES PVT. LTD. (UU01-UU-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110  
PH :8156000463.

### DAHOD

390. R B CARS PVT. LTD. (2C01-PL-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151  
PH :9099043715, 9727700823.

### DEESA

391. TANU MOTORS PVT. LTD. (Q801-UQ-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535  
PH :9909006099.

### DEHGAM

392. NANDA AUTOMOBILES PVT. LTD. (2801-NR-03), NEAR UMIYA MATAJI TEMPLE, COLLEGE ROAD,AHMEDABAD ROAD, DEHGAM - 382305  
PH :234567.

### DETROJ

393. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (GLC1-GLC-01), PLOT NO-61,MILKAT NO-2534, AT-DETROJ,TALUKA-DETROJ-RAMPURA-382120 - 382120  
PH :#REF!.

### DEVGADH BARIA

394. R B CARS PVT. LTD. (2C01-AOA-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380  
PH :9099049344, 6352384846, 9099043715.

### DHANERA

395. TANU MOTORS PVT. LTD. (BZW1-BZW-01), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA - 385310  
PH :9909006099, 8401784018.

### DHARAMPUR

396. KATARIA AUTOMOBILES PVT. LTD. (BSK1-BSK-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050  
PH :9723455291.

### DHARI

397. ALPHA AUTOLINK LLP (GG02-GG-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640  
PH :9904549999/9978938858.

### DHOLKA

398. TANU MOTORS PVT. LTD. (CQ02-CQ-01), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALIKUND HIGHWAY, DHOLKA, GUJARAT - 382 225  
PH :9512009104.

### DHORAJI

399. PERFECT AUTO SERVICE (5502-DL-09), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - - 360410  
PH :9099027402, 8200969617.

### DHRANGADHRA

400. DREAM VEHICLES PVT LTD (IM01-IM-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310  
PH :9227775725.

### DIYODAR

401. TANU MOTORS (SFU1-SFU-01), NR.HP PETROL PUMP, BHESANA CROSS ROAD, BHABHAR HIGWAY,DIYODAR-385330 - 385330  
PH :#REF!.

### DWARKA

402. ATUL MOTORS JAM LLP (CJG2-CJG-01), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT – DWARKA – . - 381335  
PH :9712212900 / 9574004714.

### GANDHIDHAM

403. B M AUTOLINK (7702-77-01), EAST OF PLOT NO. 30-35,NATIONAL HIGHWAY, GANDHIDHAM - 370201  
PH :9727725723.  
404. B M AUTOLINK (7702-77-03), SURVEY NO.129/26 P, GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110  
PH :9727725723, 9727739550.

### GANDHINAGAR

405. NANDA AUTOMOBILES PVT. LTD. (2B01-2B-01), 1003,SECTOR-28,GANDHI NAGAR - 382028  
PH : (079)23212692 / 93 / 94.  
406. NANDA AUTOMOBILES PVT. LTD. (2B01-2B-05), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028  
PH :079-23212692/93/94  
9727726003.

### GODHRA

407. R B CARS PVT. LTD. (2C01-2C-01), PLOT NO. 112/11, 12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001  
PH :9099043715, 9727700823.  
408. R B CARS PVT. LTD. (2C01-2C-04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001  
PH :9099043715, 9727700823.



## Dealer Workshop (AS ON 30.05.2023 )

### GONDAL

409. ATUL MOTORS PVT LTD (5503-AD-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY,GONDAL - 360311  
PH :9904922333.

### GOZARIA

410. VIMCO MOTORS PVT. LTD. (GJN1-GJN-01), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825  
PH :7016623842.

### HALOL

411. R B CARS PVT. LTD. (BKC1-BKC-01), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350  
PH :9099043715, 9727700823.

### HALVAD

412. DREAM VEHICLES PVT LTD (GX01-GX-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330  
PH :8238000965.

### HANSOT

413. RAVIRATNA MOTORS (BGQ1-BGQ-01), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. - 393030  
PH :9687691063.

### HIMMATNAGAR

414. KIRAN MOTORS LTD (P601-P6-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001  
PH :9824576711.

### IDER

415. KIRAN MOTORS LTD (UX01-UX-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430  
PH :8155994111.

### JAMNAGAR

416. ATUL MOTORS JAM LLP (F402-F4-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001  
PH :9574004710 / 9574004716.
417. STARLINE CARS PVT. LTD. (D101-Q9-02), CHANASMA HIGHWAY, PATAN - 384265  
PH :7046046187.
418. ATUL MOTORS JAM LLP (F402-F4-02), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002  
PH :9574004704 / 9574004717.

### JASDAN

419. ATUL MOTORS PVT LTD (5503-OB-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050  
PH :9265404142.

### JHALOD

420. R B CARS PVT. LTD. (CJF1-CJF-01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA-JHALOD, DISTRICT - DAHOD. - 389170  
PH :9099684363, 9099043715.

### JUNAGADH

421. PERFECT AUTO SERVICES (5502-K8-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001  
PH :9879518052, 7043999073, 9909022618.

### JUNAGARH

422. PERFECT AUTO SERVICES (5502-K8-02), PLOT NO. 81-82,G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001  
PH :9909006980, 7043999073, 9909022618.

### KADI

423. STARLINE CARS PVT. LTD. (D101-UR-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715  
PH :8160707156.

### KAKANPUR

424. RB CARS (SDN1-SDN-01), SURVEY NO.618/2, PAKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. - 388713  
PH :9099049347.

### KALOL

425. NANDA AUTOMOBILES PVT. LTD. (2B01-FW-02), PLOT NO.- 162-168, GIDC,KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028  
PH :220781 / 82 / 83.

### KAPADVANJ

426. AMAR CARS PVT. LTD. (NC01-NC-01), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADVANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620  
PH :9909960761.

### KARJAN

427. AMAR CARS PVT. LTD. (UZ01-UZ-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) - 391210  
PH :7567299666/99252462929.

### KATHLAL

428. AMAR CARS PVT. LTD. (CXA1-CXA-01), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387 630  
PH :9909960761.

### KESHOD

429. PERFECT AUTO SERVICES (BZY1-BZY-01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA – KESHOD, DISTRICT – JUNAGADH, GUJARAT. - 362220  
PH :7043999073.

### KHAMBHAT

430. AMAR CARS PVT. LTD. (BNF1-BNF-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620  
PH :9909960772.

### KHEDA

431. AMAR CARS PVT. LTD. (BNA1-BNA-01), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570  
PH :9909960761.

### KHERALU

432. STARLINE CARS (SN02-SN-01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA. - 384325  
PH :9909043244, 9824601729.

### KIM

433. KATARIA AUTOMOBILES PVT. LTD. (UW01-UW-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110  
PH :9723555185.

### KODINAR

434. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (CSO1-CSO-01), R.S.NO.222, PLOT NO.2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720  
PH :7043992893, 7043340792.

### KUKARWADA

435. STARLINE CARS PVT. LTD (CSC1-CSC-01), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830  
PH :9909043244, 9824601729.

### LAVANA

436. RB MOTORS (SLW1-SLW-01), AT PO -LAVANA, NEAR BABILIYA CROSSING, MODASA ROAD, LAVANA-389230 - 389230  
PH :9860999470.

### LIMBDI

437. DREAM VEHICLES PVT LTD (BSG1-BSG-01), SURVEY NO.278/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421  
PH :02753-261262/ 9227775728.

### LUNAWADA

438. R B CARS PVT. LTD. (BYN1-BYN-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA , TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230  
PH :9099043715, 9727700823.

### MAHUVA (BHAVNAGAR)

439. KATARIA AUTOMOBILES (IV03-IV-01), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290  
PH :6357327534.

### MANAVADAR

440. PERFECT AUTO SERVICE (CUI1-CUI-01), RS NO. 13/1, 14, PLOT NO.48, BHAKTINAGAR, TALUKA - MANAVADAR, DIST.-JUNAGADH. - 362 630  
PH :7043999073.

### MANDAL

441. KIRAN MOTORS LTD (IW01-IW-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130  
PH :9408803925.

### MANDVI

442. K.D. MOTORS (UY01-UY-01), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465  
PH :9909953088, 9825353679.

### MANGROL

443. KATARIA AUTOMOBILES PVT. LTD. (CAH1-CAH-01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410  
PH :6357071775.

### MANSA

444. NANDA AUTOMOBILES PVT. LTD. (2B01-0L-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845  
PH :9727921000.

### MEHMDABAD

445. AMAR CARS PVT. LTD. (BRA1-BRA-01), PATEL FALIYA, KHATRAJ, MEHMDABAD, DIST. -KHEDA, GUJARAT. - 387130  
PH :9909960761.

### MEHSANA

446. STARLINE CARS PVT. LTD. (D101-D1-01), NAGALPUR HIGHWAY,MAHESANA , GUJARAT - 384002  
PH :9909043635.
447. TANU MOTORS PVT. LTD. (Q801-D1-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMV DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002  
PH :9909006076.

**Dealer Workshop (AS ON 30.05.2023 )**

448. VIMCO MOTORS PVT. LTD. (D103-D1-01),  
SURVEY NO. 104 & 104 PAIKI 1, AT P.O. -  
PALAVASANA, MEHSANNA, GUJARAT. - 384 002  
PH :9099953333.

**METODA**

449. ATUL MOTORS PVT LTD (5503-BLW-08), PLOT  
NO. 2328, GATE NO. 2, METODA GIDC,  
METODA, TALUKA LODHIKA, DISTRICT -  
RAJKOT, GUJARAT - 360021  
PH :8140909095, 9924688774.

**MODASA**

450. KIRAN MOTORS LTD (P601-CR-02), SHAMLAL JI  
ROAD,SABARKANTHA DIST., MODASA - 383315  
PH :8155995111.

**MORBI**

451. PERFECT AUTO SERVICES (5502-X5-07),  
SURVEY NO. 351/2, PLOT NO. 10, DHARTI  
INDUSTRIAL AREA, RAJPURA ROAD, SANALA,  
MORBI, TEHSIL-MORBI, DISTT.-MORBI,  
GUJARAT. - 363641  
PH :9099058044, 9925199569, 9879499088.  
452. DREAM VEHICLES (LC01-X5-03), NR. PRIME  
FILLINGS, PLOT-6 ,DHARMASIDDHI  
VILLAGE,MAHENDRANAGAR, TALUKA: MORBI,  
DIST: MORBI. - 363642  
PH :7069089532.

**MOTI KHAVADI**

453. ATUL MOTORS JAM LLP (AAU2-AAU-01), PLOT  
NO.22 & 29, NEAR PADANA POLICE STATION,  
JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI  
KHAVDI, ZANKHAR, TA: LALPUR, DIST -  
JAMNAGAR, GUJARAT. - 361140  
PH :9574004709 / 9574004743.

**MUNDRA**

454. B M AUTOLINK (7702-AJ-02), PRAGPAR  
ROAD,MUNDRA,DISTRICT-KUTCH, GUJARAT, -  
370421  
PH :9687632631, 9978940978.

**NADIAD**

455. AMAR CARS PVT. LTD. (F702-P7-02), NEAR  
RAJHANS MULTIPLEX,NADIAD-UTTARSANDA  
ROAD - 387370  
PH :9909960761.

**NAKHATARANA**

456. KD MOTORS (CMV1-CMV-01), PLOT NO-1, RS  
NO-19, AT-NANA ANGIYA,  
TALUKA-NAKHATRANA, KUTCH - 370615  
PH :#REF!.

**NALIYA**

457. KD MOTORS (SLX1-SLX-01), AT PO - SHAKTI  
SOCIETY, MAHAVIR NAGAR, PLOT(1), OPP.  
BANK OF BARODA, NALIYA, TAL-ABDASA,  
KUTCH. - 370655  
PH :9909953119.

**NANA PONDHA**

458. AMAR CAR (SEL1-SEL-01), SHOP NO 7-11,  
JALASHAI SHOPPING CENTER, AT-NANA  
PONDHA, TALUKA- KAPRADA, DIST-VALSAD -  
396126  
PH :7227971155.

**NASWADI**

459. RAVIRATNA MOTORS (SCV1-SCV-01), HOUSE  
NO-301,302,303, IN VALPURA-RAMLALNAGAR,  
VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR  
- 391150  
PH :9687691047.

**NAVSARI**

460. KATARIA AUTOMOBILES PVT. LTD.  
(Q701-Q7-01), PLOT NO -891, OPP PAUVA MILL,  
NH-8 NEAR GANESH SISODRA  
CHOKDI,GANESH SISODIA NAVSARI, GUJRAT -  
396463  
PH :9723430012.

**NETRANG**

461. RAVIRATNA MOTORS (CUZ1-CUZ-01), SURVEY  
NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG,  
TALUKA - VALIA, DIST.-BHARUCH - 393130  
PH :9687691063.

**OLPAD**

462. COMET CAR SALES & SERVICE PVT LTD  
(4006-ZZ-02), 1906/1907, OPP. KUMBHARVAD,  
JUNA PURA, OLPAD - 394540  
PH :9099916099.

**PADRA**

463. AMAR CARS PVT. LTD. (2205-OC-02), NEAR  
WESTERN BYPASS, AT SAMIYALA, PADRA,  
DIST - VADODARA, GUJARAT - 391440  
PH :8980036200, 8980006795.

**PALANPUR**

464. TANU MOTORS (Q801-Q8-01), OPP.DHARTI  
RESORT, ABU- AHMEDABAD HIGHWAY,  
PALANPUR - 385001  
PH :9099017756.  
465. STARLINE CARS PVT. LTD. (D101-Q8-08),  
SURVEY NO.4 & 5/2, OPPOSITE L K PETROL  
PUMP, PALANPUR-DEESA HIGHWAY,  
PALANPUR-385001, DISTT BANASKANTHA,  
GUJARAT - 385001  
PH :9824601793.

**PALEJ**

466. RAVIRATNA MOTORS (BGR1-BGR-01), PLOT  
NO. 626/6, GIDC AREA, PALEJ, DISTRICT -  
BHARUCH - 392220  
PH :9687691044; 9687632647.

**PALITANA**

467. KATARIA AUTOMOBILES (CSD2-CSD-01), PLOT  
NO 15, YASOVJAYNAGAR, NEAR RAILWAY  
CROSSING, PALITANA HIGHWAY,  
PALITANA-364270 DIST BHAVNAGAR. - 364270  
PH :#REF!.

**PALSANA**

468. KATARIA AUTOMOBILES PVT. LTD.  
(4004-ZF-07), BESIDE SAINATH COMPLEX,  
KADODARA AHMEDABAD ROAD , NH-8,  
UMBHEL SAM,TALUKA: PALSANA KADODARA,  
SURAT. - 362721  
PH :9924446895.

**PATDI**

469. DREAM VEHICLES PVT LTD (BFS1-BFS-01), R.S.  
NO.1614/2, PLOT NO.16, PATDI TALUKA  
DASADA, DISTT. SURENDRANAGAR, GUJARAT -  
382765  
PH :9227775709.

**PAVI JETPUR**

470. PERFECT AUTO SERVICES (PK01-PK-01), NEAR  
ANKUR HOTEL, OPP. DHARESHWAR GEB  
STATION, PITHADIA, RAJKOT HIGHWAY,  
JETPUR (GUJARAT). - 360370  
PH :9099027402, 8200969617.

**PETLAD**

471. AMAR CARS PVT. LTD. (CMW1-CMW-01),  
SURVEY NO. 396/2, RANGAIPUR VILLAGE,  
PETLAD, DIST.-ANAND. - 388450  
PH :9099017068.

**PORBANDAR**

472. ATUL MOTORS JAM LLP (T601-T6-01), PLOT NO.  
208, GIDC VANANA, NATIONAL HIGHWAY ,  
PORBANDAR, DIST. PORBANDAR GUJARAT -  
360577  
PH :9574004746 / 7228819123.

**PRANTIJ**

473. KIRAN MOTORS LTD (AAI1-AAI-01), NO.6/P,  
OPP. VEGETABLE MARKET, PRANTIJ  
HIGHWAY, VILLAGE-KHAMALPUR,  
TALUKA-PRANTIJ, DISTT. SABARKANTHA,  
GUJARAT - 383205  
PH :9624401888.

**RADHANPUR**

474. STARLINE CARS PVT. LTD. (BNI1-BNI-01),  
SURVEY NO. 208/A, MOUJA – RADHANPUR,  
RADHANPUR MAIN ROAD, DISTRICT – PATAN,  
GUJARAT. - 385340  
PH :9909043244, 9824601729.

**RAJKOT**

475. PERFECT AUTO SERVICES (5502-55-01),  
PERFECT HOUSE,GONDAL  
ROAD,VANDI,RAJKOT - 360004  
PH :9879499077, 9909006982, 9825304940.

476. ATUL MOTORS PVT LTD (5503-55-01), PLOT  
NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL  
ESTATE, RAJKOT. - 360002  
PH :8140909093.

477. PERFECT AUTO SERVICES (5502-55-04), 150  
RING ROAD,OPP. GANDHIGRAM POLICE  
CHOWKI,RAJKOT - 360005  
PH :9925238691, 9925117104.

478. ATUL MOTORS PVT LTD (5503-55-02), BEHIND  
HP PUMP,UNIVERSITY ROAD ,NEAR SNK  
SCHOOL, RAJKOT - 360005  
PH :8347005382.

479. ATUL MOTORS PVT LTD (5503-55-06), RAJKOT  
AHMEDABAD HIGHWAY, NR. CHANDARANA  
PETROL PUMP, OPP. GUJARAT SAMACHAR  
PRESS, AT. NAVAGAM RAJKOT - 360003  
PH :9924688774.

480. PERFECT AUTO SERVICES (5502-55-08), R.S.  
NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR,  
RONKI, RAJKOT, GUJARAT. - 360006  
PH :9979861995, 9925117104.

481. KATARIA AUTOMOBILES PVT. LTD. (5504-55-01),  
S. NO. 10/1, TPS NO. – 10, KALAVAD ROAD,  
MOTAMAVA, RAJKOT, GUJARAT. - 360001  
PH :7573870001.

**RAJPARDI**

482. RAVIRATNA MOTORS PVT. LTD. (CAI1-CAI-01),  
R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29  
& 30, MOJE RAJPARDI, TALUKA-JHAGADIA,  
DISTT. BHARUCH - 393115  
PH :9687691044; 9687632647.

**RAJPIPLA**

483. RAVIRATNA MOTORS PVT. LTD. (9X01-9X-01),  
OPP. JALARAM SAW MILL, NEAR HARSIDDHI  
MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA,  
GUJARAT - 393145  
PH :9687691062/9687645880.

**RAPAR**

484. B.M. AUTOLINK (SCO1-SCO-01), PARAGPAR  
CHAAR RASTA RAPAR GHANDHIDHAM KUTCH -  
370165  
PH :9727725723.

**SAMI**

485. STARLINE CARS (BNH1-BNH-01), SHOP NO.  
55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD.  
- 384240  
PH :9909043244, 9824601729.

**SANTEJ**

486. NANDA AUTOMOBILES PVT. LTD.  
(CXC1-CXC-01), SUB PLOT NO. 05, SHOP NO. 3  
& 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060  
PH :9727822000.

**SANTRAMPUR**

Dealer Workshop (AS ON 30.05.2023 )			
487.	R B CARS PVT. LTD. (2C01-RY-03), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR, DISTT.- PANCHMAHAL - 389260 PH :8980585851, 9099043715.	496.	COMET CAR SALES & SERVICE PVT LTD (CWE1-CWE-01), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA - SONGADH, DIST.-TAPLI - 384220 PH :9099916099.
<b>SAVLI</b>		<b>SUPEDI</b>	
488.	KIRAN MOTORS LTD (CFD1-CFD-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRAV CHOWKDI, SAVLI – TIMBA ROAD, SAVIL, TALUK – SAVLI, DISTRICT – VADODARA, GUJARAT. - 391770 PH :7984799054.	497.	KATARIA AUTOMOBILES (SEM1-SEM-01), SURVEY NO-482/7, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST - RAJKOT - 360440 PH :9409497902.
<b>SAYAN</b>		<b>SURAT</b>	
489.	KIRAN MOTORS LTD (OO01-OO-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIYA, TALUKA: OLPAD, SAYAN - 394130 PH :8155888862/9662330480.	498.	KIRAN MOTORS LTD (4001-40-01), SURAT-BARDOLI ROAD, DUMBHAL, NEAR PUNA JAKAT NAKA, SURAT - 395010 PH :9924448715/9924637898.
<b>SAYLA</b>		499.	DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR, NEAR JEEVAN JYOT THEATRE, UDHNA MAIN ROAD, SURAT - 394210 PH :9925155911/9925155907.
490.	DREAM VEHICLES (SJM1-SJM-01), LALGURU COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT SURENDRANAGAR, GUJARAT PIN 363430 - 363430 PH :9227775709.	500.	KIRAN MOTORS LTD (4001-40-02), PANDESARA, BAMROLI ROAD, SURAT - 395002 PH :9824603880.
<b>SHANKESHWAR</b>		501.	KATARIA AUTOMOBILES PVT. LTD. (4004-40-04), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESU, SURAT - 395007 - 395007 PH :9714612700, 9824401000.
491.	STARLINE CARS (SLY1-SLY-01), MANIBHADRA SHOPPING CENTRE, SHANKHESHWAR HIGHWAY, SHANKHESHWAR (GUJARAT)- DIST: PATAN - 384246 PH :9824601729.	502.	DHRU MOTORS (4002-40-1B), 207, NEW INDUSTRIAL ESTATE, ROAD NO.-6, UDHNA UDYOG NAGAR, SURAT - 394210 PH :0261-2272118/ 9978900862.
<b>SHAPAR</b>		503.	KATARIA AUTOMOBILES PVT. LTD. (4004-40-05), KATARIA ARCADE, OPP. RAJHANS CINEMA, DUMAS ROAD, PIPLOD, SURAT - 395007 PH :7698022449/9624477252.
492.	ATUL MOTORS PVT LTD (BQZ1-BQZ-01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT – RAJKOT, GUJARAT - 360024 PH :9714008492, 9624711397.	504.	COMET CAR SALES & SERVICE PVT LTD (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH :9099915995.
<b>SIDDHPUR</b>		505.	KATARIA AUTOMOBILES PVT. LTD. (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT - 394310 PH :9924119020.
493.	STARLINE CARS PVT. LTD. (CMY1-CMY-01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA – VADGAM, DISTRICT – PATAN. - 384151 PH :9909043244, 9824601729.	506.	KIRAN MOTORS LTD (4005-40-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009 PH :9824611153/9824701590.
<b>SINOR</b>		507.	AMAR CARS PVT. LTD. (4009-40-02), PLOT NO.10&11, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR DGVCL OFFICE, KARMINATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH :7069026512.
<b>SITAPUR</b>			
495.	STARLINE CARS PVT LTD (SFV1-SFV-01), SHOP NO. 2, RUDRA ARCADE, REVENUE SURVEY NO. 129, VITHLAPUR (SITAPUR) BECHARAJI – VIRAMGAM HIGHWAY, DIST. AHMEDABAD, PIN CODE: 382120 - 382120 PH :9909043244.		
<b>SONGADH</b>			
508.	COMET CAR SALES & SERVICE PVT LTD (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT – SURAT, GUJARAT. - 395004 PH :9099916099.	509.	DHRU MOTORS (4002-40-03), PLOT NO 54/A, LAXMINARAYAN LNDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210 PH :#REF!.
<b>SURENDRANAGAR</b>		510.	DREAM VEHICLES PVT LTD (LC01-LC-01), 261/P, OPP MARKETING YARD, GIDC AREA, WADHWAN CITY, SURENDRANAGAR - 363030 PH :02752-241314 / 02752-651516/ 9227775721.
		511.	DREAM VEHICLES (LC01-LC-02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANAGAR, GUJARAT-363030 - 363030 PH :9227775724.
<b>TALAJA</b>		512.	KATARIA (BCI2-BCI-01), SURVEY NO-168, DHANJIBHAI BALADHIYA NI VADI, NEAR MAHUVA PALITANA CROSS ROAD, MAHUVA BHAVNAGAR HIGHWAY, TALAJA-364140. - 364140 PH :9316626475.
<b>TANKARA</b>		513.	ATUL MOTORS PVT LTD (BQY1-BQY-01), PLOT NO. 8/1, S. NO. 107, VILLAGE – JABALPUR, TALUKA – TANKARA, SUB DISTRICT – MORBI, DISTRICT – RAJKOT. - 363650 PH :9714008492, 9624711397.
<b>TARAPUR</b>		514.	AMAR CARS PVT. LTD. (GH01-GH-01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST. -ANAND. - 388180 PH :9909960772.
<b>THARA</b>		515.	TANU MOTORS PVT. LTD. (0V01-0V-01), SHOP NO.17 & 18, SIHORI HIGHWAY, R.B. THAKKAR COMPLEX, THARA, KAKREJ TALUKA, BANASKANTHA DISTT. - 385555 PH :9909006099, 9913830329.
<b>THARAD</b>		516.	TANU MOTORS PVT. LTD. (CDM1-CDM-01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA - 384220 PH :9909006099, 9724219565.
<b>THASARA</b>		517.	KATARIA AUTOMOBILES (SIM1-SIM-01), PLOT NO 1 & 2, GIDC THASRA, BESIDES NARMADA VASAHAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250 PH :7984092780.
<b>UMERGAON</b>		518.	KATARIA AUTOMOBILES PVT. LTD. (BNB1-BNB-01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT – VALSAD, GUJARAT. - 396170 PH :9624001794.
<b>UMRETH</b>		519.	AMAR CARS PVT. LTD. (CFE1-CFE-01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH , DIST:ANAND, GUJARAT. - 388220 PH :9909960772.
<b>UNA</b>		520.	PERFECT AUTO SERVICES (BFD1-BFD-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. - 362560 PH :7043992893, 7043340792.
<b>UNJHA</b>		521.	TANU MOTORS (Q801-GR-02), OPP. DHANA DAL FACTORY, MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH :9727762079.
<b>UPLETA</b>		522.	PERFECT AUTO SERVICE (CH01-CH-01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360490 PH :9099027402, 8200969617.
<b>VADNAGAR</b>		523.	VIMCO MOTORS PVT LTD (GKU1-GKU-01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355 PH :7016623842.
<b>VADODARA</b>		524.	KIRAN MOTORS LTD (2201-22-01), 909/4, G.I.D.C.MAKARPURA, VADODARA - 390010 PH :9624472699.
		525.	KIRAN MOTORS LTD (2201-22-02), PLOT NO.160, SUB-I NUTAN GUJ.INDLESTATE, OLD CHHANI ROAD, VADODARA - 390002 PH :9824207889.
		526.	AMAR CARS PVT. LTD. (2203-22-01), GORWA ROAD, VARODARA, GUJARAT, - 390016 PH :9081311990, 9723742425, 8980036184.
		527.	AMAR CARS PVT. LTD. (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH :7211109952.
		528.	KATARIA AUTOMOBILES PVT. LTD. (2204-22-01), 984/4, GIDC, OLD NH-8, MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH :9904033422.

**Dealer Workshop (AS ON 30.05.2023 )**

529. AMAR CARS PVT. LTD. (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH :8980006756.

530. KIRAN MOTORS LTD (2201-22-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH :2771122.

531. KATARIA AUTOMOBILES PVT. LTD. (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001 PH :8156017770.

532. RAVIRATNA MOTORS PVT LTD (2206-22-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA. - 390012 PH :7227055065, 7227055064.

**VALOD**

533. DHRU MOTORS (CSW1-CSW-01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. - 394640 PH :9712984522.

**VALSAD**

534. KATARIA AUTOMOBILES PVT. LTD. (0104-2E-06), SURVEY NO. 211 ATUL-ALSAD ROAD, PARNERA, AVALSAD, GUJARAT - 396020 PH :9904133306.

**VANSDA**

535. KATARIA AUTOMOBILES PVT. LTD. (Q701-SB-02), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT - NAVSARI, GUJARAT - 396580 PH :7624088188.

**VAPI**

536. KATARIA AUTOMOBILES PVT. LTD. (0104-97-03), PLOT NO. C-29, NATIONAL HIGHWAY-8, G. I. D. C., VAPI, TAL. PARDI - 396195 PH :9924204423.

537. KATARIA AUTOMOBILES PVT. LTD. (0104-97-09), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI , DISTRICT -VALSAD, GUJARAT - 369191 PH :9723462612.

538. AMAR CARS PVT. LTD. (9701-97-01), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145 PH :9327909504.

**VERAVAL**

539. PERFECT AUTO SERVICES (5502-AH-05), NR. BALIYA HANUMAM, VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265 PH :9998994550, 9898121122.

**VIJAPUR**

540. STARLINE CARS PVT. LTD. (D101-V2-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH :9909043635.

**VIRAMGAM**

541. KIRAN MOTORS LTD (AAB1-AAB-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH :8156016222.

**VISNAGAR**

542. STARLINE CARS PVT. LTD. (D101-RW-05), VISNAGAR - AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT.- MEHSANA - 384315 PH :7046046174.

**VYARA**

543. COMET CAR SALES & SERVICE PVT LTD (BIY1-BIY-01), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT – TAPI, GUJARAT - 394650 PH :9099916099.

**WAGHODIA**

544. KATARIA AUTOMOBILES PVT. LTD. (BZZ1-BZZ-01), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA – WAGHODIA, DISTRICT – VADODARA, GUJARAT. - 391760 PH :7203013712.

**WANKANER**

545. ATUL MOTORS PVT LTD (BAL1-BAL-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621 PH :9904922333.

**HARYANA**

**ADAMPUR (HARYANA)**

546. SARAOGI AUTOMOBILES (P) LTD. (CWW2-CWW-01), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 44/21/1/2(1-0), MANDI ADAMPUR, TEHSIL - ADAMPUR, DIST.-HISSAR, STATE - HARYANA. - 125052 PH :8607777153.

**AMBALA**

547. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003 PH :9215016044.

548. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003 PH :9215016044.

549. EAKANSH WHEELS (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001 PH :9991703000.

550. EAKANSH WHEELS (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001 PH :88813874888.

551. TR SAWHNEY (1803-18-01), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003 PH :9990110068.

**ASSANDH**

552. KARNAL MOTORS PVT. LTD. (8906-CS-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032 PH :7082111325.

**BABARPUR**

553. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CKX1-CKX-01), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103 PH :7009396727.

**BAHADURGARH**

554. COMPETENT AUTOMOBILES CO. LTD. (2G02-2G-01), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124 507 PH :8929648144.

**BAPOLI**

555. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CWI1-CWI-01), KHEWAT NO. 136, VILLAGE – JHAMBA, TEHSIL – BAPOLI, DISTRICT – PANIPAT. - 132103 PH :9053400583.

**BARARA**

556. EAKANSH WHEELS (NX01-NX-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201 PH :9991478100.

**BARWALA**

557. MODERN AUTOMOBILES (BSA2-BSA-01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118 PH :8986217059.

**BAWAL**

558. DINCO 4 WHEELS LLP (AUTO VIBES) (BBD2-BBD-01), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, BAWAL, DISTRICT – REWARI, HARYANA. - 123501 PH :7082100250.

**BHIWANI**

559. JAGMOHAN MOTORS PVT LTD (X301-X3-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021 PH :8685005592.

**BILASPUR**

560. PANDIT AUTOMOBILES PVT. LTD. (BGH1-BGH-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT – YAMUNANAGAR, HARYANA. - 135102 PH :9992113854.

**BILASPUR (HARYANA)**

561. PLATINUM MOTOCORP LLP (2L04-CIA-02), KHASRA NO.54/67, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT – GURUGRAM. - 122413 PH :9953345329/9953345403.

**CHARKHI DADRI**

562. JAGMOHAN MOTORS PVT LTD (X301-CT-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306 PH :8059900538.

**CHEEKA**

563. EAKANSH MOTORS PVT. LTD. (U802-HU-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA. - 136034 PH :8053086000.

**CHHACHHARAULI**

564. PANDIT AUTOMOBILES PVT. LTD. (COZ1-COZ-01), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL – CHHACHHARAULI, DISTRICT – YAMUNA NAGAR. - 135103 PH :9812455895.

**DADRI TOE**

565. COMPETENT AUTOMOBILES CO. LTD. (BVH2-BVH-01), KHEWAT NO. – 270 MIN, KHATONI NO. – 319, DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN 124103 - 124103 PH :9821308849.

**DAHINA**

566. DINCO 4 WHEELS LLP (AUTO VIBES) (GLH1-GLH-01), REWARI MAHENDERGARH ROAD, NEAR RAILWAY STATION, DAHINA, REWARI - 123411 PH :7082100201.

**DHAND**

## Dealer Workshop (AS ON 30.05.2023 )

567. EAKANSH MOTORS (BEU1-BEU-01),  
PANCHMUKHI CHOWK, KARNAL ROAD, DHAND,  
DISTT. KAITHAL, HARYANA. - 136020  
PH :8395906111.

### DHARUHERA

568. DINCO 4 WHEELS LLP (AUTO VIBES)  
(CRP1-CRP-01), KHASRA NO. 57, KILLA NO. 7,  
SOHNA-DHARUHERA ROAD, OFF SECTOR-4A,  
DHARUHERA, DIST.-REWARI.  
PH :7052100270.

### ELLENABAD

569. SHAKTI MOTORS PVT.LTD. (E401-IN-03),  
SURERA CHOWNK, NEAR CHAUDHARI MANI  
RAM COLLEGE, SIRSA ROAD, ELLENABAD -  
125055  
PH :8222900250.

### FARIDABAD

570. VIPUL MOTORS PVT. LTD. (5801-58-01), 27/5 KM,  
MAIN MATHURA ROAD, FARIDABAD - 121002  
PH :2555011  
2555013

97114 14556.  
571. VIPUL MOTORS PVT. LTD. (5801-58-03), UNIT-II,  
PLOT NO. 1A 19/6, MATHURA ROAD,  
FARIDABAD - 121006  
PH :4286000  
4286024  
4286024  
9311321419.

572. TCS AUTOMOBILES (5804-58-01), PLOT NO-1A,  
SECTOR-6, FARIDABAD, - 121001  
PH :4292929; 7503036200.

573. FAIR DEAL PREMIUM WHEELS PVT.LTD.  
(5807-58-01), PLOT NO.-17A, NIT INDUSTRIAL  
AREA, NIT FARIDABAD - 121003  
PH :8448296686.

574. TCS AUTOWORLD PVT. LTD. (TCS &  
ASSOCIATES PVT. LTD. ) (5804-58-02), 20.4 KMS  
MILESTONE, BHASKAR COMPOUND, AMAR  
NAGAR, MAIN MATHURA ROAD, FARIDABAD,  
HARYANA. - 121003  
PH :2277225; 7290082911.

575. AUTO NATION (A UNIT OF TAYAL INDIA  
MOTORS PVT. LTD) (5806-58-01), 15/3,  
MATHURA ROAD, NEAR SECTOR-28, METRO  
STATION, FARIDABAD - 121003  
PH :4180500  
7290032501.

576. AUTO NATION (A UNIT OF TAYAL INDIA  
MOTORS PVT. LTD) (5806-58-02), BYE PASS  
ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. -  
121006  
PH :74287 48467.

### FARRUKHNAGAR

577. PLATINUM MOTOCORP LLP (KE01-KE-01),  
KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO.  
-19/3 AND 22/2, VILLAGE – SEHADPUR  
MOHAMADPUR, TEHSIL – FARRUKHNAGAR,  
DISTRICT – GURGAON. - 122506  
PH :9599007357/9953345380.

### FATEHABAD

578. SHAKTI MOTORS PVT.LTD. (2H02-2H-01), NH-10,  
SIRSA ROAD, FATEHABAD - 125050  
PH :8222900217.

### GANAU

579. JAGMOHAN AUTOMOTIVES PVT. LTD.  
(NA04-NA-01), RAILWAY ROAD, GANAUR -  
131101  
PH :8199911106.

### GHARAUNDA

580. KARNAL MOTORS PVT. LTD. (8906-MR-05),  
WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL  
COLONY, GHARAUNDA, - 132114  
PH :8222022321.

### GOHANA

581. JAGMOHAN AUTOMOTIVES PVT. LTD.  
(CU03-CU-01), NEAR KHANPUR CHOWNK,  
ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. -  
SONEPAT - 131301  
PH :8685005521.

### GURGAON

582. PASCO AUTOMOBILES (9506-95-01), PASCO  
HOUSE, 6 PALAM GURGAON ROAD,  
INDUSTRIAL ESTATE, GURGAON - 122006  
PH

:09650790323/7290069623/9999239959/4952100.  
583. VIPUL MOTORS PVT. LTD. (5801-95-02), 504,  
UDYOG VIHAR, PHASE-III, GURGAON - 122001  
PH :4395701  
4395704

8448487921.  
584. COMPETENT AUTOMOBILES CO. LTD.  
(9505-95-01), A-25, INFOCITY, SECTOR-33,  
GURGAON - 122004  
PH :42500002,  
9582797735.

585. PASCO AUTOMOBILES (9506-95-02), SECTOR  
17-18, DIVIDER ROAD, GURGAON, HARYANA, -  
122015  
PH :07015804442/7982087767/9650701958/

586. ROHAN MOTORS LTD. (9508-95-01), 2482/84,  
SECTOR-52A, WAZIRABAD VILLAGE, OPP.  
AARDI CITY MALL, GURGAON - 122001  
PH  
:08860076163/8130593202/8130593201/813059320  
3.

587. VIPUL MOTORS PVT. LTD. (5801-95-04), PLOT  
NO.5/22/1, SARHAUL VILLAGE,SECTOR-18,  
MAIN ROAD, GURGAON. (HARYANA) - 201102  
PH :4395800  
4395806  
844848936.

588. PREM MOTORS PVT. LTD. (9511-95-01), PLOT  
NO.101, SAINI PLAZA MARKET, OPP. H BLOCK,  
NEAR RAM MANDIR, PALAM VIHAR, GURGAON -  
122017  
PH :4337900, 7065003445.

589. PREM MOTORS PVT. LTD. (9512-95-01), PLOT  
NO. 3, IDC, OPPOSITE SECTOR-14, GURGAON -  
122001  
PH :7065003373, 7065003377, 0124-4319000.

590. RANA MOTORS PVT LTD (9509-95-02), PLOT  
NO.60, IDC, GURGAON - 122001  
PH :4867777,  
9873400882.

591. PASCO AUTOMOBILES (9510-95-01), PLOT NO.  
34/3, DINESH JAIN COMPLEX, DELHI-AJMER  
EXPRESSWAY (NH-8), RAJIV CHOWK,  
GURGAON, HARYANA. - 122001  
PH :995369444/9953695222.

592. PREM MOTORS PVT. LTD. (9512-95-02), PLOT  
NO. 122, PALAM VIHAR EXTENSION, NEAR  
KRISHNA CHOWK, GURUGRAM - 122017  
PH :4337933, 7065003442.

593. PLATINUM MOTO CORP (2L04-95-03), 5/13  
SOHNA ROAD VILL-TIKRI ADJACENT TO  
POLARIS HOSPITAL GURGAON HARYANA -  
122018  
PH :9953345370/9899118867.

594. PREM MOTORS (9512-95-G1), QILA NUMBER  
8/2, MUSTAKIL NO - 25, SECTOR 17-18,  
DIVIDING ROAD, GURGAON, - 122015  
PH :8800000817.

### HANSI

595. JAGMOHAN MOTORS PVT LTD (GT02-GT-01), G.  
T. HIGHWAY ROAD, MAIN ROHTAK HANSI  
ROAD, NEAR HOLLAND TRACTORS AGENCY &  
HP PETROL, HANSI - 124001  
PH :8059900546.

### HISAR

596. MODERN AUTOMOBILES (7602-76-01), OPP.  
VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005  
PH :9355473000.

597. SARAOGI AUTOMOBILES (P) LTD. (7604-76-01),  
5TH KM STONE, SIRSA ROAD, HISSAR,  
HARYANA - 125001  
PH :8607777043.

598. MODERN AUTOMOBILES (7602-76-02), OPP.  
BBMB, HISSAR DELHI ROAD, HISSAR - 125001  
PH :9355473000.

599. UNIQUE MOTORS PVT. LTD. (7603-76-01), OPP.  
BHANU INDUSTRIES, DELHI ROAD, VILLAGE:  
SATROD, HISSAR (HARYANA) - 125006  
PH :818055535.

### HODAL

600. ROHAN MOTORS (EE01-UE-02), KILA NO.  
8/2(7-11), 9(5-06), 12(5-0), 13(8-0), HIGHWAY  
ROAD, NEAR RAILWAY BYEPASS CHOWK,  
TEHSIL - HODAL, DIST.-PALWAL.  
PH :8930202088 ; 9413080376.

### ISMILABAD

601. KARNAL MOTORS PVT. LTD. (I901-I9-01),  
KHEWAT NO. 928, KHASRA NO. 2760(5-14),  
2761(800), VILLAGE - ISMAILABAD, TEHSIL -  
PEHOW, DIST.-KURUKSHETRA, HARYANA. - 136  
129  
PH :7082007138.

### ISRANA

602. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES  
PRIVATE LIMITED) (I802-I8-01), MUSHTIL NO.  
-119, NEAR MANDI MOD, MAIN GOHANA ROAD,  
ISRANA - 132107  
PH :9053400417.

### JHAJJAR

603. COMPETENT (0802-08-01), PLOT NO 5, NEAR  
GOVT POLYTECHNIC COLLEGE,  
JHAJJAR-BAHADURGARH ROAD, JHAJJAR,  
HARYANA - 124101  
PH :9999493040.

### JIND

604. EAKANSH MOTORS PVT. LTD. (2K01-2K-01),  
ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP.  
GRAIN MARKET, JIND, HARYANA - 126102  
PH :7876008184.

### JULANA

605. EAKANSH MOTORS PVT. LTD. (MA01-MA-01),  
JIND ROHTAK MAIN ROAD, OPP. NEW BUS  
STAND, JULANA, DIST. JIND, HARYANA - 126101  
PH :8816802111.

### KAITHAL

606. EAKANSH MOTORS PVT. LTD. (U802-U8-01),  
AMBALA ROAD, NH-65, KAITHAL - 136027  
PH :9671788801.

### KALANAUR

607. JAGMOHAN MOTORS (SPQ1-SPQ-01), BHIWANI  
ROAD, KALANAUR, DISTRICT ROHTAK. - 124113  
PH :9812000425.

### KALAYAT

608. EAKANSH MOTORS PVT. LTD. (BJP1-BJP-01),  
NEAR BUS STAND, KAITHAL-KALAYAT ROAD,  
VILLAGE-KALAYAT, DISTT. KAITHAL  
(HARYANA) - 136117  
PH :9671788801.

### KALKA

**Dealer Workshop (AS ON 30.05.2023 )**

609. MODERN AUTOMOBILES (EG02-EG-01),  
ADJOINING INDIAN OIL PETROL PUMP, RAM  
NAGAR, NH-22, KALKA, DISTRICT –  
PANCHKULA, HARYANA - 133302  
PH :9896217059.

**KARNAL**

610. KARNAL MOTORS PVT. LTD. (8906-89-01), 71/3  
MILESTONE ,G.T.ROAD, KARNAL - 132001  
PH :8222022399.

611. KARNAL MOTORS PVT. LTD. (8906-89-02),  
KHEWAT NO. 59, JHANJHARI GT ROAD,  
KARNAL - 132001  
PH :8222022430.

612. MODERN AUTOMOBILES (8907-89-01), NEAR  
NAMASTE CHOWK, OLD G.T.ROAD, KARNAL -  
132001  
PH :7419900042.

**KATHURA**

613. JAGMOHAN AUTOMOTIVES (SFJ1-SFJ-01),  
GOHANA MAHAM ROAD, KATHURA, GOHANA. -  
131301  
PH :8685005400.

**KHARKHODA**

614. JAGMOHAN AUTOMOTIVES PVT. LTD.  
(BU02-BU-01), NEAR KANYA GURUKUL  
MAHAVIDYALYA, DELHI ROAD, NEAR UNION  
BANK, KHARKHODA (HARYANA) - 131402  
PH :8685005593.

**KOSLI**

615. DINCO 4 WHEELS LLP (AUTO VIBES)  
(CAN1-CAN-01), OPPOSITE RAJIV GANDHI  
STADIUM, TEHSIL ROAD KOSLI, DISTRICT –  
REWARI, HARYANA - - 123302  
PH :7082100202.

**KUND**

616. DINCO 4 WHEELS LLP (AUTO VIBES)  
(CJL1-CJL-01), NEAR KUND BARRIER, OPP. SBI  
BANK, NARNAUL ROAD, VILLAGE - MANETHI,  
KUND, DISTRICT - REWARI, HARYANA. - 123102  
PH :856998928, 97082100000.

**KUNDLI**

617. JAGMOHAN AUTOMOTIVES PVT. LTD.  
(GU03-GU-01), 34 E, SECTOR 57, PHASE 4 ,  
KUNDLI INDUSTRIAL AREA, KUNDLI - 131001  
PH :8059900518.

**KURUKSHETRA**

618. KARNAL MOTORS PVT. LTD. (8906-U6-03), PLOT  
NO. 156, INDUSTRIAL AREA, SECTOR-2,  
KURUKSHETRA - 136 118  
PH :8222022371.

**LADWA**

619. KARNAL MOTORS PVT. LTD. (CRA1-CRA-01),  
KHEWAT NO.197, KHATONI NO.233, KHASRA  
NO.27/17/1.27/14, LADWA-KURUKSHETRA  
ROAD, VILLAGE - LADWA, TEHSIL THANESAR,  
DISTT. KURUKSHETRA - 136132  
PH :7082007182.

**LOHARU**

620. JAGMOHAN MOTORS (HB02-HB-01), BHIWANI  
ROAD , OPP. ITI, CITY: LOHARU - 127201  
PH :9812000425.

**MADLAUDA**

621. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES  
PRIVATE LIMITED) (CFK2-CFK-01),  
VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD,  
MADLAUDA, PIN-132113, HARYANA - 132113  
PH :9053400524.

**MAHENDARGARH**

622. PLATINUM MOTO CORP (DP01-DP-01), KHEWAT  
NO. 187, KILLA NO. 51/8, REVENUE ESTATE OF  
VILLAGE REWASA, DADRI ROAD, TEHSIL &  
DISTRICT, MAHINDERGARH, PIN-123029,  
HARYANA - 123029  
PH :9566136120, 9053088490.

**MANDI DABWALI**

623. SHAKTI MOTORS PVT.LTD. (E401-KU-02),  
SANGARIA ROAD, DABWALI, DISTT.-SIRSA -  
125104  
PH :8222900209.

**MANESAR**

624. PLATINUM MOTOCORP LLP (2L04-2L-01), PLOT  
NO.282, SEC 6, IMT MANESAR DISTT.  
GURGAON. - 122052  
PH :09953345326/9953345324/9910100341.

**MEHAM**

625. JAGMOHAN MOTORS PVT LTD (A601-NZ-08),  
MAIN MARKET, NATIONAL HIGHWAY-10,  
ROHTAK-HISSAR ROAD, MEHAM,  
DISTRICT-ROHTAK - 124101  
PH :8059900592.

**MOHNA**

626. TCS & ASSOCIATES PVT LTD (CRT1-CRT-01),  
YAMUNA PUL ROAD , NEAR GYATRI PETROL  
PUMP - VPO-MOHANA,TEHSIL BALLABGARH ,  
DISTT FARIDABAD - 121004  
PH :9911573130, 8929579400.

**MUSTAFABAD**

627. PANDIT AUTOMOBILES PVT. LTD.  
(CDX1-CDX-01), KHATUNI NO. 205/287, KHASRA  
NO. 39:17/2, VILLAGE - MANSURPUR, THANA -  
CHAPPER, MUSTAFABAD, DIST.-YAMUNA  
NAGAR, STATE - HARYANA - 133 103  
PH :9992113854.

**NARAINGARH**

628. EAKANSH WHEELS (1802-CV-02), NH-72,  
AMBALA-KALA AMB ROAD, NEAR ADARSH  
FILLING STATION, NARAINGARH - 134203  
PH :9991143700.

**NARNAUL**

629. PLATINUM MOTOCORP LLP (9Q02-9Q-01),  
KAILASH NAGAR, REWARI ROAD, NARNAUL,  
HARYANA, - 123001  
PH  
:09053088460/9582226838/9053088501/905308845  
1/9053088500.

**NARNAUND**

630. JAGMOHAN MOTORS (SDK1-SDK-01), KHASRA  
NO. 234, HANSI ROAD, NARNAUND, DISTT.  
HISAR, HARYANA. - 125039  
PH :9812000471.

**NARWANA**

631. EAKANSH MOTORS PVT. LTD. (U802-CW-03),  
OPP. HAFED GODDOWN-2, NH-65 AKHERAM  
NAGAR, NARWANA - 126116  
PH :9813583100.

**NUH**

632. PASCO AUTOMOBILES (7L02-7L-01), MAIN  
DELHI - ALWAR ROAD, NEAR SHAHEED PARK,  
NH -248A, NUH, DISTRICT - MEWAT, HARYANA.  
- 122107  
PH :9810014947.

**PALWAL**

633. ROHAN MOTORS LTD. (EE01-EE-01), SANWAL  
COLONY, MAIN MATHURA ROAD, NEAR SDM  
COURT, PALWAL - 121101  
PH :304100 ; 304107/8930202060.

**PANCHKULA**

634. MODERN AUTOMOBILES (0702-K3-03), PLOT  
NO. 318, INDUSTRIAL AREA, PHASE-2,  
PANCHKULA - 134113  
PH :9646000165.

635. AUTOPACE NETWORK PVT LTD (0705-K3-03),  
PLOT NO. 5, INDUSTRIAL AREA, PHASE-1,  
PANCHKULA, HARYANA. - 134113  
PH :7087119847.

636. AUTO VOGUE PVT. LTD. (K303-K3-01), PLOT  
NO- 388, INDUSTRIAL AREA PHASE-1,  
PANCHKULA, HARYANA. - 134113  
PH :8558813181.

**PANIPAT**

637. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES  
P LTD) (D302-D3-01), KHASRA NO. 43/6, 44/9 &  
10, VILLAGE - JATTIPUR, NEAR HOTEL  
SWARNA MAHAL, NH-1, PANIPAT, HARYANA. -  
132103  
PH :9053400515.

**PATAUDI**

638. PLATINUM MOTOCORP LLP (BY03-BY-01), HALI  
MANDI ROAD, OPPOSITE SHIV MURTI,  
PATAUDI, DIST. - GURGAON - 122503  
PH :9953345381/9953345488/9953345330.

**PEHOWA**

639. KARNAL MOTORS PVT. LTD. (2M02-2M-01),  
NEAR SHARMA SERVICE STATION,  
KURUKSHETRA ROAD, PEHOWA - 136128  
PH :8053906011.

**PUNDRI**

640. EAKANSH MOTORS PVT. LTD. (BFF1-BFF-01),  
KILA NO- 3/10, KHEWAT 2147 OPP. HARCHARAN  
FILLING STATION, KAITHAL ROAD, PUNDRI  
DIST. KAITHAL, HARYANA - 136026  
PH :9671788801.

**PUNHANA**

641. PASCO AUTOMOBILES (BIU1-01-BIU-01), KILA  
NO. 4/2, PUNHANA, DIST.-MEWAT, HARYANA -  
122508  
PH :9991300950, 8059730879.

**RADAUR**

642. PANDIT AUTOMOBILES PVT. LTD. (D201-EN-02),  
OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND,  
RADAUR, DISTRICT-RADAUR, HARYANA -  
135001  
PH :9992113854.

**RAJOUND**

643. EAKANSH MOTORS (SHV1-SHV-01), MITTAL  
KHAL BHANDAR, RAJOUND, DISTT KAITHAL -  
136044  
PH :9671788801.

**REWARI**

644. DINCO 4 WHEELS LLP (AUTO VIBES)  
(U102-U1-01), BAWAL ROAD, NEAR BYE PASS  
ROAD, REWARI (HARYANA)) - 123401  
PH :7082100200/7082100204/7082100201.

**ROHTAK**

645. JAGMOHAN MOTORS PVT LTD (A601-A6-01),  
SONEPAT ROAD, ROHTAK - 124001  
PH :9467465035.

646. JAGMOHAN MOTORS PVT LTD (A601-A6-09),  
SWAN GARDEN, DELHI ROAD, ROHTAK -  
124001  
PH :9812000357.

647. UNIQUE AUTO LEAD LLP (A602-A6-01), KHASRA  
NO- 3597 JIND ROAD, JIND CHOWK, ROHTAK,  
HARYANA - 124001  
PH :#REF!.

**SAFIDON**

648. EAKANSH MOTORS PVT. LTD. (U802-JU-05),  
NEAR BRSK SCHOOL , OPPOSITE RELIANCE  
PETROL PUMP, PANIPAT ROAD, SAFFIDON,  
DISTRICT- JIND - 126112  
PH :9416616603.

## Dealer Workshop (AS ON 30.05.2023 )

### SAMPLA

649. JAGMOHAN MOTORS PVT LTD (NY01-NY-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501  
PH :9812000351.

### SATNALI

650. PLATINUM (SLH1-SLH-01), KHEVAT NO.605, KHATONI NO-1134 KILLA NO.167, VILL: SATNALI, NEAR BHARAT PETROL PUMP MAHENDRAGARH ROAD, HARYANA -123024 (LOCATION: MAHENDRAGARH) - 123024  
PH :9910100341.

### SHAHABAD

651. KARNAL MOTORS PVT. LTD. (CCR2-CCR-01), KHEWAT NO. 460, KATONI NO. 488, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST.- KURUKSHETRA - 136135  
PH :8222022338.

### SIRSA

652. SHAKTI MOTORS PVT.LTD. (E401-E4-01), DABBALI RD., SIRSA, HARYANA - 125055  
PH :8222900201.

### SIWANI

653. SARAOGI AUTOMOBILES (P) LTD. (HA03-HA-01), OPP.GOV'T HOSPITAL ,SIWANI BYPASS CHOWK,HISSAR ROAD ,SIWANI,DIST.BHIWANI -127046 HARYANA - 127046  
PH :8607777149.

### SOHNA

654. PASCO AUTOMOBILES (9506-KZ-03), 56, KILLA NO. 13 (4-10), 18(4-6), 19 (8-0), 22 (8-0), 23 (4-2), VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA , DISTRICT-GURUGRAM. - 122103  
PH :08683000902/9873711127/8683000919.

### SONIPAT

655. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001  
PH :9992200372.
656. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001  
PH :8685005686.
657. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-03), O-11 INDUSTRIAL AREA, SONIPAT, HARYANA - 131001  
PH :9812615000.

### TAURU

658. PASCO AUTOMOBILES (BIV1-BIV-01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA - 122015  
PH :8683000902, 9873001497, 8683000954, 9671150250, 9034926253.

### TIGAON

659. TCS (5804-SJY-01), TCS AUTOWORLD, ARYAN PLAZA, NEEMKA BHUPGARH, TIGAON-BALLABGARH ROAD, FARIDABAD, PIN-121004, HARYANA - 121004  
PH :9971422444.

### TOHANA

660. SHAKTI MOTORS PVT.LTD. (XP01-XP-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120  
PH :8572800991.

### TOSHAM

661. JAGMOHAN MOTORS PVT LTD (0Y01-0Y-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040  
PH :8059900566.

### YAMUNANAGAR

662. PANDIT AUTOMOBILES PVT. LTD. (D201-D2-01), GOVINDPUR ROAD, JAGADRI, YAMUNANAGAR - 135001  
PH :9812455896.
663. PANDIT AUTOMOBILES PVT. LTD. (D201-D2-03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001  
PH :9812455896.

## HIMACHAL PRADESH

### ALAMPUR

664. KANGRA VEHICLEADES (RL01-RL-01), KHASRA NO. 1606/1582, STATE HIGHWAY PALAMPUR-SUJANPUR AT JANGAL, VILLAGE - ALAMPUR, DIST.-KANGRA. - 176082  
PH :8968002269.

### BADDI

665. GOYAL MOTORS PVT LTD (7D01-CIF-04), KHATA/KHATAUNI NO. 26/26, KHASRA NO. 93/56/32 AND 94/56/32, KITAS 2, REVENUE MAUZA – CHAK JANGI, HADBAST NO. 203, TEHSIL – BADDI, DISTRICT – SOLAN, HIMACHAL PRADESH. - 173205  
PH :9418076972.

### BAIJNATH

666. KANGRA VEHICLEADES (BBC1-BBC-01), TASHI JONG, PAPROLA-BAIJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAIJNATH, DISTT. KANGRA - 176115  
PH :8628820603.

### BANIKHET

667. PATHANKOT VEHICLEADES PVT. LTD. (BWN1-BWN-01), KHASRA NO.709, KHATA KHATOONI NO.23, BANIKHET, THE-DALHOUSIE, DISTT. CHAMBA - 176303  
PH :254186, 232036, 9418048803.

### BILASPUR

668. COMPETENT AUTOMOBILES CO. LTD. (6Y01-6Y-01), KHEWAT NO. 8/8 KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. – CHANDPUR, TEHSIL – SADAR, DIST.- BILASPUR, HIMACHAL PRADESH. - 174001  
PH :7807166832, 7807800330 / 7807800440.

### CHAMBA

669. KANGRA VEHICLEADES (D902-JF-03), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310  
PH :9418059252, 9418045778.
670. KANGRA VEHICLEADES (D902-JF-05), KHASRA NO. 88/96.1 & KHASRA NO.628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310  
PH :9418059252, 9418013810.

### CHOWARI

671. PATHANKOT VEHICLEADES PVT. LTD. (CWV1-CWV-01), KHATA KHATNI NO. 24/32 MIN, KHASRA NO. 90, VILLAGE - LAHRU, P.O. - PARCHHORE, TEHSIL - BHATTIYAT, DIST. -CHAMBA, HAMACHAL PRADESH. - 144416  
PH :8894569632.

### DEHRA

672. KANGRA VEHICLEADES (D902-HT-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101  
PH :9817013058.

### GAGGAL

673. KANGRA VEHICLEADES (BBV1-BBV-01), NATIONAL HIGHWAY -20, ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA , HIMACHAL PRADESH - 176209  
PH :9418988832.

### HAMIRPUR

674. COMPETENT AUTOMOBILES CO. LTD. (W901-W9-01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401  
PH :9805510276.

### INDORA

675. PATHANKOT VEHICLEADES PVT. LTD. (BHE1-BHE-01), VILLAGE CHANDOR, PO & TEHSIL INDORA, DISTT. KANGRA, PIN-176401, HIMACHAL PRADESH - 176401  
PH :9418008627.

### JAISINGHPUR

676. KANGRA VEHICLEADES (BVA1-BVA-01), HARSII PATTAN ROAD, OPP. SABJI MANDI, TEHSIL – JAISINGHPUR, DIST. – KANGRA, HIMACHAL PRADESH. - 176095  
PH :9418477756.

### JAWALI

677. PATHANKOT VEHICLEADES PVT. LTD. (BXE1-BXE-01), VILLAGE - TIUKARI, NEAR MAHAVIR HOSPITAL LUBH ROAD, TEHSIL - JAWALI, DIST.-KANGRA, HAMACHAL PRADESH. - 176023  
PH :9418195333.

### JOGINDER NAGAR

678. COMPETENT AUTOMOBILES CO. LTD. (BBO1-BBO-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015  
PH :9805005754.

### JWALAMUKHI

679. KANGRA VEHICLEADES (CND1-CND-01), KHASRA 880/613, MAUJA BOHAN, TEHSIL JWALAMUKHI, DISTRICT KANGRA - 176031  
PH :9418488999.

### KULLU

680. COMPETENT AUTOMOBILES CO. LTD. (2Q01-2Q-01), PLOT 3&4, INDUSTRIAL AREA, SHAMSHI, KULLU (HP) - 175126  
PH :7018035136.

### KUNIHAR

681. GOYAL MOTORS PVT LTD (BBX1-BBX-01), KHATA NO. – 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSIL – ARKI, DISTRICT – SOLAN, HIMACHAL PRADESH - 173207  
PH :9418312472.

### MANALI

682. COMPETENT AUTOMOBILES CO. LTD. (BKU1-BKU-01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131  
PH :9418387465.

### MANDI

683. COMPETENT AUTOMOBILES CO. LTD. (B301-B3-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI - 124501  
PH :9805513208/9816664891.

### NADAUN

684. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041  
PH :9805737436.

### NAGROTA

685. KANGRA VEHICLEADES (D902-D9-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047  
PH :7018268819.

### NAGROTA BAGWAN

**Dealer Workshop (AS ON 30.05.2023 )**

686. KANGRA VEHICLEADES (D902-D9-06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047  
PH :7018268819.

**NAGROTA SURIAN**

687. KANGRA VEHICLEADES (BG11-BGI-01), KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037, MAHAL BASSA, SUB TEHSIL – NAGROTA SURIAN, DISTRICT – KANGRA. - 176027  
PH :9418488999.

**NALAGARH**

688. GOYAL MOTORS PVT LTD (IB02-IB-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101  
PH :9418704572.

**NERWA**

689. GOYAL MOTORS PVT LTD (CRS1-CRS-01), KHASRA NO. 482, VILLAGE – KEDI, TEHSIL – NERWA, DISTRICT – SHIMLA, HIMACHAL PRADESH. - 171210  
PH :9418663572.

**NURPUR**

690. KANGRA VEHICLEADES (D902-JG-04), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201  
PH :9418195333 , 9418041778.

**PALAMPUR**

691. KANGRA VEHICLEADES (2T01-2T-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061  
PH :9418222622/ 9463265072.

**PAONTA SAHIB**

692. GOYAL MOTORS PVT LTD (A901-8G-02), OPP BIBIJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR , NH-72, PAONTA SAHIB - 173025  
PH :9459210872.

**RAJGARH**

693. GOYAL MOTORS PVT LTD (BJX1-BJX-01), KHATA NO. 517/505, 478/3, KHASRA NO. – 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL – RAJGARH, DISTRICT – SIRMAUR , HIMACHAL PRADESH - 173101  
PH :9418312472.

**RAMPUR**

694. GOYAL MOTORS PVT LTD (CEZ1-CEZ-01), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL – RAMPUR, DISTRICT – SHIMLA. - 172001  
PH :9459296572.

**ROHRU**

695. GOYAL MOTORS PVT LTD (JZ01-JZ-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207  
PH :9418016072.

**SALOONI**

696. PATHANKOT VEHICLEADES (SES1-SES-01), KHASRA NO. 299/174, VILLAGE. MANJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320  
PH :9418059252.

**SHAHPUR**

697. KANGRA VEHICLEADES (SCR1-SCR-01), VILLAGE MANJHGRAN, P.O. DRAMMAN, TEHSIL SHAHPUR, DISTT. KANGRA, HIMACHAL PRADESH - 176206  
PH :9459900241.

**SHIMLA**

698. GOYAL MOTORS PVT LTD (A901-A9-01), TARADEVI, SHIMLA,(H.P.) - 171010  
PH :9418663572.

**SOLAN**

699. GOYAL MOTORS PVT LTD (7D01-7D-01), DEON GHAT, SOLAN - 173211  
PH :9418138772.

**UNA**

700. COMPETENT AUTOMOBILES CO. LTD. (QD01-QD-01), VILLAGE RAINSARY,P.O JHALERA,TEHSIL & DISTRICT:UNA - 174303  
PH :9805737436.

**JAMMU**

**MARH**

701. JAMKASH VEHICLEADES PVT. LTD (BPM1-BPM-01), KHASRA NO. 269, LOWER MUTHI DHARMAL, DIST.-JAMMU, STATE - JAMMU & KASHMIR. - 181205  
PH :7006898474.

**JAMMU & KASHMIR**

**CHOWKI CHOURA**

702. JAMU MOTORS (SDY1-SDY-01), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154  
PH :9596975060.

**MAHANPUR**

703. JAMMU MOTORS (SPK1-SPK-01), MAHANPUR, DISTRICT KATHUA, TEHSIL MAHANPUR - JAMMU & KASHMIR - 184202  
PH :9596975060.

**MANJAKOTE**

704. JAMKASH VEHICLEADES (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NEAR PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE, DISTRICT RAJOURI. J&K - 185131  
PH :7006014395.

**VIJAYPUR**

705. JAMMU MOTORS (OZ02-01-OZ-01), JAMMU PATHANKOT HIGHWAY, VIJAYPUR (SAMBHA), J&K - 184120  
PH :9596975060.

**JAMMU AND KASHMIR**

**AKHNOOR**

706. JAMMU MOTORS PVT. LTD. (2X02-2X-01), MAIN ROAD DASKAL, TEHSIL – AKHNOOR, DISTRICT - JAMMU - 181201  
PH :9419118393.

**ANANTNAG**

707. PEAKS AUTO PVT. LTD. (2Y01-2Y-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165  
PH :9519275151.

**BANDIPORA**

708. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-OA-04), AJAR BANDIPORA , J&K - 193502  
PH :9149726427.

**BARAMULLA**

709. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (8C01-8C-01), VILLAGE SANGRAMA,WAGAROO, BARAMULA - 193101  
PH :7889612218.

**BHADRAWAH**

710. J&K VEHICLEADES PVT. LTD (AKA1-AKA-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K - 182222  
PH :9419796821.

**BHASOLI**

711. JAMKASH VEHICLEADES PVT. LTD. (GLK1-GLK-01), ZERO MORTH, BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201  
PH :9018847230.

**BUDGAM**

712. HIGHLAND AUTOMOBILES PVT.LTD (1202-CUG-04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM. - 191111  
PH :9419019898.

**DAYALACHAK**

713. JAMKASH VEHICLEADES PVT. LTD (BFH1-BFH-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK,TEHSIL & DISTT. KATHUA , JAMMU & KASHMIR - 184121  
PH :88492849170.

**DODA**

714. J&K VEHICLEADES PVT. LTD (2Z02-2Z-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202  
PH :9419796821.

**GANDERBAL**

715. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (ZA01-ZA-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201  
PH :9419000828.

**HANDWARA**

716. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (BYA1-BYA-01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO- 3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST- KUPWARA, J&K - 193221  
PH :262322, 9419074012.

**JAMMU**

717. JAMKASH VEHICLEADES PVT. LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015  
PH :6006801639.

718. JAMKASH VEHICLEADES PVT. LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001  
PH :9419224014.

719. JAMKASH VEHICLEADES PVT. LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011  
PH :7006018600.

720. PEAKS AUTO JAMMU PVT. LTD. (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010  
PH :9697001125.

721. JAMMU MOTORS PVT. LTD. (3308-33-01), 6, AKHNOOR ROAD, JAMMU. - 180001  
PH :9419118393.

722. JAMMU MOTORS PVT. LTD. (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002  
PH :9419118393.

723. PEAKS AUTO JAMMU PVT. LTD. (3312-33-02), KHASRA NO.425 & 426, KHATA NO.425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001  
PH :9697001125.

724. JAMKASH VEHICLEADES PVT. LTD (3306-33-07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. - 180007  
PH :9419191502.

**KATHUA**



**Dealer Workshop (AS ON 30.05.2023 )**

725. JAMMU MOTORS PVT. LTD. (3B02-3B-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101  
PH :9419118393.

**KULGAM**

726. PEAKS AUTO PVT. LTD. (OY01-OY-01), NEAR GRID STATION,MAIN ROAD, KULGAM - 191202  
PH :9519275151.

**KUPWARA**

727. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-AX-03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223  
PH :9622499902.

**MAGAM**

728. JAMKASH VEHICLEADES PVT. LTD (GLS1-GLS-01), KHASRA NO. 34, MOUZA - CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST. BARAMULLA, JAMMU & KASHMIR. - 193 401  
PH :8825016048.

**PHINTER**

729. JAMKASH VEHICLEADES PVT. LTD (BHV1-BHV-01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203  
PH :9419187583.

**POONCH**

730. JAMKASH VEHICLEADES PVT. LTD (AAW1-AAW-01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121  
PH :7006014395.

**PULWAMA**

731. PEAKS AUTO PVT. LTD. (1204-MU-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301  
PH :9519275151.

**RAJOURI**

732. JAMKASH VEHICLEADES PVT. LTD (3306-KS-06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI - 185131  
PH :7006014395.

**RS PURA**

733. JAMKASH VEHICLEADES PVT. LTD (3306-JN-03), GAGAIN MORTH, R S PURA, JAMMU, - 181102  
PH :9419190370.

**SHOPIAN**

734. PEAKS AUTO PVT. LTD. (AAA1-AAA-01), AGLAR SOFANAMAN, SHOPIAN - 192303  
PH :9519275151.

**SIDHRA**

735. JAMKASH VEHICLEADES PVT. LTD (CDL1-CDL-01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019  
PH :9419134144.

**SRINAGAR**

736. HIGHLAND AUTOMOBILES PVT.LTD (1202-12-01), SONWAR, SRINAGAR - 190001  
PH :9419057564.

737. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-12-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015  
PH :7006037255.

738. PEAKS AUTO PVT. LTD. (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101  
PH :9519275151.

739. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-12-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017  
PH :9796700750.

**SUNDERBANI**

740. PEAKS AUTO JAMMU PVT. LTD. (AAM3-AAAM-01), MOUZA THANDA PANI, TEH. SUNDERBANI - 185153  
PH :9697001125.

**SURANKOTE**

741. PEAKS AUTO JAMMU PVT. LTD. (TY03-TY-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101  
PH :9697001125.

**THANA MANDI**

742. JAMKASH VEHICLEADES PVT. LTD. (SQ01-SO-01), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI -185212 - 185212  
PH :9419267607.

**UDHAMPUR**

743. J&K VEHICLEADES PVT. LTD (D801-D8-01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101  
PH :7006881028.

**URI (CHAAL BONIYAAR)**

744. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (CCK1-CCK-01), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123  
PH :9419074012.

**JHARKHAND**

**BAGODAR**

745. RELIABLE INDUSTRIES PVT. LTD. (BHA1-BHA-01), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRIDIH, JHARKHAND. - 825322  
PH :9507102036  
9835814404.

**BALIAPUR**

746. CARONE (SNI1-SNI-01), WARD NO 53, HOLDING NO - SAF3797, KANDRA SINDRI, BALIAPUR. - 828123  
PH :7980074787.

**BOKARO**

747. HINDUSTAN AUTO AGENCY (B501-B5-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004  
PH :9831550033/7070403002/9431128683.

748. HINDUSTAN AUTO AGENCY (B501-B5-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) - 827004  
PH :9431127983/9431128683.

**CHAIBASA**

749. PEBCO MOTORS (BOY1-BOY-01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT – WEST SINGHDHUM, JHARKHAND. - 833201  
PH :7070449718.

**CHANDWA**

750. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (SCS1-SCS-01), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA – 829203, DIST – LATEHAR, JHARKHAND - 829203  
PH :7061157502.

**CHIRKUNDA**

751. RELIABLE INDUSTRIES (CQT1-CQT-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. – CHIRKUNDA, DISTRICT – DHANBAD, JHARKHAND. - 828202  
PH :9905937751  
9835814404.

**DALTONGANJ**

752. PREMSONS MOTORS UDYOG PVT LTD (5103-MP-02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101  
PH :9835507004.

**DEOGHAR**

753. RELIABLE INDUSTRIES (5202-KR-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, - 814112  
PH :6207129088  
7001563251.

754. RELIABLE INDUSTRIES (KR02-KR-01), MOUZA - CHAKRIPAHARI, NO. 587, WARD NO. 36, DEOGHAR, JHARKHAND. - 814114  
PH :9835811220, 9835814404.

**DHANBAD**

755. RELIABLE INDUSTRIES (5202-52-01), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001  
PH :9835830202  
7369945040.

756. RELIABLE INDUSTRIES (5202-52-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P O K.G. ASHRAM, SARAIHDELA , DHANBAD - 828127  
PH :8102333474  
7369945043.

757. RELIABLE INDUSTRIES (5202-52-06), SUGADIH, HIRAK ROAD, SARAIHDELA, DHANBAD, JHARKHAND. - 828127  
PH :9334094940.

758. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (5205-52-01), NH-2, GT ROAD, SAHARJORI, BARWADA, DHANBAD. - 828 109  
PH :9006828000, 9835740433.

759. RELIABLE INDUSTRIES (5202-52-09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 828109  
PH :9031096662.

**DUMKA**

760. RELIABLE INDUSTRIES (L701-L7-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA ( JHARKHAND) - 814101  
PH :6205161170.

**GARHWA**

761. PREMSONS MOTOR UDYOG PVT. LTD. (VX01-VX-01), KHATA NO. 4, KHESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114  
PH :8662828802  
9835507004.

**GHATSHILA**

762. PEBCO MOTORS LTD. (AIA1-AIA-01), PLOT NO. 68, KHASRA NO.128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK, GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303  
PH :9308433388.

**GIRIDIH**

763. RELIABLE INDUSTRIES (5202-3D-04), MOHANPUR, PACHAMBA ROAD, GIRIDIH. - 815301  
PH :8102924860  
8102924858.

764. RELIABLE INDUSTRIES PVT. LTD (5202-3D-08), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND. - 815301  
PH :9835835101.

**GODDA**

765. RELIABLE INDUSTRIES (5202-EJ-05), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133  
PH :6207129088.

**GUMLA**

**Dealer Workshop (AS ON 30.05.2023 )**

766. PREMSONS MOTOR UDYOG PVT. LTD.  
(5103-20-04), VANASTHALI COMPLEX  
PUGUCHAMPA NAGAR,NH-23,SISAI  
ROAD,GUMLA - 835207  
PH :9835507004.

**HAZARIBAGH**

767. HINDUSTAN AUTO AGENCY (Y901-Y9-01), NEAR  
SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. -  
825301  
PH- 9304051949,  
9263631327.

768. HINDUSTAN AUTO AGENCY (Y901-Y9-02),  
MASIPIRHI, BABHANBAY, HAZARIBAGH ,  
JHARKHAND. - 825301  
PH -9216888118  
9263631327, .

**JAMSHEDPUR**

769. PEBCO MOTORS LTD. (3101-31-01), MEDIUM  
SECTOR, INDUSTRIAL AREA, ADITYAPUR,  
JAMSHEDPUR - 831001  
PH :9308433388.

770. PEBCO MOTORS LTD. (3101-31-02), 16  
BALICHALA, CONTRACTORS & GODOWN AREA,  
SONARI, JAMSHEDPUR - 831011  
PH :9308433388.

771. MOTOR WORLD (3102-31-01), N.H-33, NEAR  
PARDIH CHOWK, MANGO, JAMSHEDPUR -  
831012  
PH :9431347164, 9570168342.

**JAMTARA**

772. RELIABLE INDUSTRIES (BOX1-BOX-01), PLOT  
NO. 483, PARWAT BIHAR, DUMKA ROAD,  
JAMTARA, JHARKHAND. - 815351  
PH :9835814404.

**KATRAS**

773. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES  
PRIVATE LIMITED) (GLP1-GLP-01), RAJHANS  
REFRATORIES, OPP. LIC OFFICE, RAJGANJ  
ROAD, KATRAS, DISTT. DHANBAD,  
JHARKHAND-828114 - 828114  
PH :8910900556.

**KHELARI**

774. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS  
ENTERPRISES PVT LTD) (CFO1-CFO-01), PLOT  
113, MOUZA-BUKBUKA, BESIDE PAHADI  
MANDIR, KHELARI, RANCHI - 829205  
PH :6458222, 9534199997.

**KHUNTI**

775. PREMSONS MOTOR UDYOG PVT. LTD  
(BOL1-BOL-01), PLOT NO. 747, KHATA NO. 2,  
DAHUGUTU, CHAIBASA ROAD, KHUNTI,  
JHARKHAND. - 835 210  
PH :9835507004.

**KODARMA**

776. HINDUSTAN AUTO AGENCY (VR01-VR-01), AT  
LALMAN DIGTHU, BESIDE KRISHNA SURYA  
COLD STORAGE, JHUMRI TILAIYA, P.S. -  
TILAIYA, DISTRICT – KODERMA, JHARKHAND. -  
825409  
PH :6201998936.

**LOHARDAGA**

777. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS  
ENTERPRISES PVT LTD) (CX01-CX-01), PLOT  
NO. 14P. 15, 23, RIADA, LOHARDAGA,  
JHARKHAND. - 835302  
PH :9534199997.

**MURI**

778. HILLTOP MOTORS (CODE UNDER  
CREATIONS-CODE UNDER CREATIONS-CODE  
UNDER CREATIONS), NEAR BANK OF INDIA,  
SILLI MAIN ROAD, MURI, PIN - 835102 - 835102  
PH :7061157502.

**RAMGARH**

779. HINDUSTAN AUTO AGENCY (AV01-AV-01),  
MARAR, RANCHI ROAD (NH-33), RAMGARH -  
829122  
PH :9263631345.

**RANCHI**

780. PREMSONS MOTORS UDYOG PVT LTD  
(5103-51-01), 502, KANKE ROAD, RANCHI. -  
834008  
PH :9304807355.

781. PREMSONS MOTOR UDYOG PVT. LTD.  
(5103-51-03), 10P, NAMKUM INDUSTRIAL  
ESTATE,BEHIND HIGH TENSION INSULATOR  
FACTORY, LOWER CHUTIA, RANCHI - 834010  
PH :9262899003.

782. PREMSONS MOTOR UDYOG PVT. LTD.  
(5103-51-05), PLOT NO.31 & 134, JOHNSON  
MORH, TUPUDANA INDUSTRIAL AREA,  
TUPUDANA, RANCHI - 834003  
PH :9835507004.

783. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS  
ENTERPRISES PVT LTD) (5107-51-02), PLOT NO.  
74, OPPOSITE OTC GROUND, HEHAL, RATU  
ROAD, RANCHI, JHARKHAND - 834005  
PH :9534199997, 8227996660.

784. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS  
ENTERPRISES PVT LTD) (5107-51-03), PLOT NO.  
39, NEAR BOOTY MORE, RANCHI-RAMGARH  
ROAD, RANCHI. - 835217  
PH :9534199997.

785. PREMSONS MOTOR UDYOG PVT. LTD.  
(5103-51-06), PLOT NO.14 (P) KOKAR  
INDUSTRIAL AREA KOKAR, RANCHI. - 834001  
PH :9835507004.

786. HILLTOP MOTORS (A UNIT OF HIRALAL  
MOTORS PVT LTD) (5109-51-01), KHATA NO.  
247, MOUZA - PUNDAG,P.S. - PUNDAG, RANCHI,  
JHARKHAND. - 834004  
PH :7061157502.

787. HILLTOP MOTORS (A UNIT OF HIRALAL  
MOTORS PVT LTD) (5109-51-02), NEAR KATHAL  
MORE, ARGORA RANCHI RD, NEAR EKLABBA  
TOWER, DHIPATOLI, ARGORA, RANCHI - 834004  
PH :7061157502.

**KARNATAKA**

**ANEKAL**

788. PRATHAM MOTORS PVT. LTD (0205-FA-04),  
SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI,  
ANEKAL TALUK - 562106  
PH :9945540131.

**ANKOLA**

789. BHARATH AUTO CARS PVT. LTD. (FC02-FC-01),  
NEAR NARAYANA TEMPLE KAKKAR MUTTA,  
BELEGULI CROSS, ANKOLA, UK DISTRICT -  
581314  
PH :7829567400.

**ATHANI**

790. SHANTESHA MOTORS (BWA1-BWA-01), RS NO.  
605, SHIVAYOGI NAGAR, BIJAPUR ROAD,  
ATHANI, DIST. - BELGAUM. - 591304  
PH :8884472587.

**ATHRADI**

791. ABHARAN MOTORS PVT LTD (G601-UK-04),  
HERABETTU ROAD ATHARDI UDUPI - 576107  
PH :9845472500.

**ATTIBELE**

792. SURAKSHAA CAR CARE PVT. LTD.  
(BMM1-BMM-01), SURVEY NO.22/7/8, SARJAPUR  
MAIN ROAD, INDIABELE VILLAGE, OPP. TO  
GOLDEN LIBERTY, ATTIBELE P.O.,  
BANGALORE. - 562107  
PH :9449865665.

**BAGALKOT**

793. VIJAY MOTOWINGS (ZL01-ZL-01),  
180/4-2,BELGUM RAICHUR ROAD,NEAR APMC  
MARKET YARD, BAGALKOT - 587103  
PH :9481289167.

**BAGEPALLI**

794. BIMAL AUTO AGENCY INDIA PVT. LTD.  
(BTY1-BTY-01), H.L. NO. 423 AND 436 SRI  
SATHYA SAI NAGAR, ON NH-7,  
THIMAKALAPALLI BLOCK-II, PARAGODU GRAM  
PANCHAYATH, KASABA HOBLI, BAGEPALLI  
TALUK, CHIKKABALLAPUR DIST. - 561 207  
PH :9742458888.

**BANGALORE**

795. MANDОВI MOTORS PVT LTD. (0201-02-01),  
24/4, 7TH MAIN,WILSON GARDENS,BANGALORE -  
560027  
PH :9945235511.

796. MANDОВI MOTORS PVT LTD. (0201-02-07),  
17/A-2&3 IND.SUBURB.IIND STAGE,  
GORAGUNTEPALAYA, TUMKUR ROAD.  
YESWANTHPUR, BANGALORE - 560022  
PH :9945235537.

797. MANDОВI MOTORS PVT LTD. (0201-02-05),  
NO.2/106 (NEXT TO KASSIA BLDG.),17TH  
CROSS,MAGADI CHORD ROAD EXTN.  
VIJAYANAGAR,BANGALORE - 560079  
PH :9945235529.

798. RNS MOTORS (7301-02-03), 2275 TUMKUR  
ROAD, GURGUNTEPALYA, YESHWANTPUR,  
BANGALORE - 560022  
PH :9606933236.

799. RNS MOTORS (7301-02-04), HOSUR  
ROAD,BOMMANAHALLI,MADIVALA  
POST,BANGALORE - 560068  
PH :9148001412.

800. MANDОВI MOTORS PVT LTD. (0201-02-08), NO.  
70 SARAKKI INDUSTRIAL LAYOUT,J.P  
NAGAR,3RD PHASE, BANGALORE - 560078  
PH :9954235522.

801. PRATHAM MOTORS PVT. LTD (0205-02-01), 16,  
BALLANDUR, SARJAPUR RING ROAD,  
BANGALORE - 560037  
PH :9945540126

802. BIMAL AUTO AGENCY INDIA PVT. LTD.  
(0216-02-02), NO. 69/2, SARAKKI, KANAKAPURA  
ROAD, BANGALORE - 560078  
PH :9972398139.

803. BIMAL AUTO AGENCY INDIA PVT. LTD.  
(0218-02-01), NO - 60/3, VENKATALA VILLAGE,  
YELAHANKA HOBLI, BANGALORE NORTH  
TALUK - 560064  
PH :9945541034.

804. BIMAL AUTO AGENCY INDIA PVT. LTD.  
(0216-02-01), 60/2, MAHADEVPURA, WHITE  
FIELD ROAD, BANGALORE - 560048  
PH :99723 98105.

805. PRATHAM MOTORS PVT. LTD (0205-02-02),  
STHANIKAM'S ARCADE, OPP. ST THERESA  
HOSPITAL, DR. RAJ KUMAR ROAD, A  
BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE -  
560010  
PH :9900061378.

806. KALYANI MOTORS PVT. LTD. (0211-02-01),  
MYSORE ROAD,PANTHARAPALYA,KENGRI  
HOBLI,BANGALORE - 583201  
PH :9538887078.

807. BIMAL AUTO AGENCY INDIA PVT. LTD.  
(0216-02-03), NO.7/1, KALANAAGRAHARA  
VILLAGE, MOUNT ST. JOSEPH TRAINING  
COLLEGE FOR JESUITS COMPOUND, IIMB  
POST, BANNERGHATTA RD. , BANGALORE -  
560076  
PH :9845166612.

## Dealer Workshop (AS ON 30.05.2023 )

808. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE - 560038  
PH :9972398106.

809. MANDОВI MOTORS PVT LTD. (0201-02-0C), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044  
PH :9945235537.

810. KALYANI MOTORS PVT. LTD. (0211-02-04), 119/1, 11TH CROSS,MALLESHWARAM,BANGALORE, - 560003  
PH :9886026519.

811. MANDОВI MOTORS PVT LTD. (0201-02-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043  
PH :9845132048.

812. MANDОВI MOTORS PVT LTD. (0201-02-0E), SY NO.26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA. - 560102  
PH :9945235518.

813. MANDОВI MOTORS PVT LTD. (0201-02-9B), PLOT NO.-257/1-13, BANNERGHATTA ROAD, N.S. PALYA, BANGALORE - 560076  
PH :9945238559.

814. KALYANI MOTORS PVT. LTD. (0213-02-02), SY. NO.-58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE. - 560049  
PH :9900037122.

815. SURAKSHAA CAR CARE PVT LTD (0280-02-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100  
PH :9449865605.

816. KALYANI MOTORS PVT. LTD. (0213-02-03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU. - 574239  
PH :9900038119.

817. SURAKSHAA CAR CARE PVT. LTD. (0280-02-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068  
PH :9449865655.

818. KALYANI MOTORS PVT. LTD. (0213-02-04), 250/1,BILEKAHALLI, BANNERGHATTA ROAD, BENGALURUE - 560076  
PH :9686445406.

819. BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058  
PH :9945237213.

820. RNS MOTORS (7301-02-0C), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092  
PH :6364884787.

821. PRATHAM MOTORS PVT. LTD (0205-02-05), #58/5 KUDLU VILLAGE. NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034  
PH :9900058466.

822. RNS MOTORS LIMITED (7301-02-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158  
PH :9538965771.

823. KALYANI MOTORS PVT. LTD. (0291-02-02), 10/1, HEBBAL , AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024  
PH :9740985324 , 7760983887.

824. BIMAL AUTO AGENCY INDIA PVT. LTD. (0286-02-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066  
PH :9900245979.

825. SURAKSHAA CAR CARE PVT. LTD. (0280-02-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034  
PH :8884419010.

826. KALYANI MOTORS PVT. LTD. (0287-02-01), # 10/5, NAGADEVANHALLI, KENGERRI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056  
PH :9900019961.

827. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033  
PH :9738501996.

828. MANDОВI MOTORS PVT LTD. (0201-02-0H), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093  
PH :9945235533.

829. VARUN MOTORS PVT. LTD. (0292-02-01), HNO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE. - 560022  
PH :7337834582.

830. KALYANI MOTORS PVT. LTD. (0213-02-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. - 560043  
PH :9900037114.

831. KATARIA AUTOMOBILES PVT. LTD. (0294-02-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST - AADUGODI, BANGALORE. - 560030  
PH :7349291802.

832. MANDОВI MOTORS PVT LTD. (0201-02-0I), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASPURA, KENGERRI HOBLI, UTTARAHALLI, BANGALORE - 560060  
PH :9945235516.

833. VARUN MOTORS PVT. LTD. (0292-02-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073  
PH :7338286729.

834. MANDОВI MOTORS PVT LTD. (0201-02-0J), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHNAN ROAD, VIDYARANYAPURA, BANGALORE. - 560097  
PH :9945235514.

835. KATARIA AUTOMOBILES PVT. LTD. (0293-02-01), SURVEY NO. 8/3, 10/4, 10/2, VILLAGE - THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA - 560109  
PH :8884434340.

836. RNS MOTORS LIMITED (7301-02-0J), SY. NO. 11/2 & 12/1, VILLAGE - ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE - 560 076. - 560076  
PH :7760982836.

837. SURAKSHAA CAR CARE PVT. LTD. (0280-02-05), SURVEY NO 2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE. - 560100  
PH :8884471200.

838. KALYANI MOTORS PVT. LTD. (0211-02-05), SY.NO.8/4, G HOSAHALLI MAIN ROAD, GOLLARAHATTI, V N POST, YESHWANTPURA HOBLI, MAGADI MAIN ROAD, BANGALORE - 560091  
PH :9900080229.

839. SURAKSHA CAR CARE (0280-02-06), BEARING NO. 54/4-320/2, BEGUR HOBLI, BOMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE, KARNATAKA. - 560 068  
PH :9449865665.

840. PRATHAM MOTORS PVT. LTD (0205-02-07), SUVEY NO. 43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST - DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA. - 562125  
PH :9611834659.

841. SURAKSHAA CAR CARE PVT. LTD. (0280-02-07), SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN,MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA - 560099  
PH :94498 65666.

842. KALYANI MOTORS (0291-02-03), SURVEY NO. 194/5, HUNSEMARAHALLI, JALA HOBLI, DEVANAHALLI TALUK, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH PH :9740985324.

843. MANDОВI MOTORS (0201-02-09), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018. - 560018  
PH :9945235516.

### BANGALORE (HEBBAGODI )

844. RNS MOTORS (0210-02-01), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD,ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560 099  
PH :6366938829.

### BANGALORE- KP ROAD

845. KALYANI MOTORS (0213-02-06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDAKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERRI ROAD, BANGALORE, KARNATAKA - 560062  
PH :9900039844/9900073254.

### BANGARPET

846. SURAKSHA CAR CARE PVT. LTD. (OR04-OR-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114  
PH :9449865601.

### BANGLORE - BOMMANAHALLI

847. VARUN MOTORS PVT LTD (0292-02-03), SY NO: 136 ( OLD NO 54/8) SANGEGURUVANAHALLI(VP) KAMAKSHIPALAYA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE,KARNATAKA - 560079  
PH :9513683052.

### BANTWAL

848. MANDОВI MOTORS PVT LTD. (TR01-TR-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARNATAKA - 574231  
PH :9908810123.

### BELGAUM

849. SHANTESHA MOTOR (P) LTD (E801-E8-01), MUJJAWAR COMPOUND,NEHRU NAGAR,BELGAUM, - 590010  
PH :9902043711.

850. SHANTESHA MOTOR (P) LTD (E801-E8-04), PLOT NO. 8, SURVEY NO. 251/51, HAVLOCK ROAD CAMP, BELGAUM - 290010  
PH :9588645387.

851. SHANTESHA MOTOR (P) LTD (E801-E8-03), CTS NO. 519, 520, BESIDE PARATA CORNER,CONGRESS ROAD, TILAKWADI, BELGAUM - 590006  
PH :8884433911.

852. SHANTESHA MOTORS (P) LTD (E801-E8-06), PLOT NO. 2II, RS NO. 29, KIADB INDUSTRIAL AREA, KIADB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010  
PH :9731396805.

## Dealer Workshop (AS ON 30.05.2023 )

### BELLARY

853. K.P.F. PVT. LTD. (G201-G2-01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101  
PH :9449876025.

### BELTHANGADY

854. BHARATH AUTO CARS PVT. LTD. (4503-HM-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214  
PH :9886543230.

### BHADRAWATI

855. SHRUTI MOTORS (FB01-FB-01), SURVEY NO. 18/4, BH ROAD,KADADAKATTE HOBLI, KADADAKATTE, BHADRAVATI, SHIMOGA DIST., KARNATAKA - 577229  
PH :7899885404.

### BHATKAL

856. BHARATH AUTO CARS PVT. LTD. (CEF1-CEF-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA - 581320  
PH :9008693940.

### BIDAR

857. LAHOTI MOTORS PVT. LTD (EX01-EX-01), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402  
PH :8884412049.
858. LAHOTI MOTORS PVT. LTD (EX01-EX-02), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR - 585 401  
PH :9108707709.

### BIJAPUR

859. RNS MOTORS (7301-T7-01), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109  
PH :8861208998.

### BUDHIGERE

860. BIMAL (SGM1-SGM-SGM1-01), KHATTA NO:115,SY. NO. 128/33, MANDUR MAIN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOCL PETROL BUNK, BANGALORE EAST TALUK, BANGALORE, - 560049  
PH :9742259528.

### BYNDOOR

861. ABHARAN MOTORS PVT LTD (BUH1-BUH-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214  
PH :7899751777.

### CHALLAKERE

862. SAKETH AUTOMOBILES (CKN1-CKN-01), SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE - 577522  
PH :9686550126.

### CHAMARAJANAGAR

863. MANDОВI MOTORS PVT LTD. (0E01-0E-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPUR EXTENSION, CHAMRAJANAGAR (KARNATAKA) - 571313  
PH :9845445586.

### CHANNAGIRI

864. SHRUTI MOTORS (BUQ1-BUQ-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213  
PH :7899934143.

### CHANNAPATNA

865. KALYANI MOTORS PVT. LTD. (BSX1-BSX-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160  
PH :9845066682.

### CHANNARAYAPATNA

866. VENKAT MOTORS (HC01-HC-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA - 573116  
PH :8147077144.

### CHICKBALLAPUR

867. BIMAL AUTO AGENCY INDIA PVT. LTD. (KJ02-KJ-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101  
PH :9742262499.

### CHICKMAGALUR

868. SHRUTI MOTORS (B701-3F-02), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102  
PH :9980157446.

### CHIKODI

869. SHANTESHA MOTORS (E801-ZB-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201  
PH :7829925790.

### CHINTAMANI

870. PRATHAM MOTORS PVT. LTD (0205-BQ-06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125  
PH :7899761301.

### CHITRADURGA

871. SAKETH AUTOMOBILES (AL01-AL-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130  
PH :9686550313.

### DAVANGERE

872. SHRUTI MOTORS (S101-S1-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004  
PH :9880401284.

### DAVENGERE

873. SHRUTI MOTORS (S101-S1-02), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001  
PH :9880401284.

### DEVANAHALLI

874. BIMAL AUTO AGENCY INDIA PVT. LTD. (WH01-WH-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110  
PH :9742262514.

### DHARWAD

875. REVANKAR MOTORS PVT. LTD. (BIX1-BIX-01), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001  
PH :8861006707.

### DODDABALLAPUR

876. PRATHAM MOTORS PVT. LTD. (BUA1-BUA-01), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDADAHALLI, KASABA HOBLI TALUK – DODDABALLAPUR, DISTRICT – BENGALURU RURAL. - 561203  
PH :9886671687.

### GADAG

877. RNS MOTORS (7301-RK-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG - 582103  
PH :9538925602.

### GANGAVATI

878. MUNEER ENTERPRISES PVT. LTD. (N701-KA-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, - 583227  
PH :9449870754.

### GAURIBIDANUR

879. MANDОВI MOTORS PVT LTD. (BUY1-BUY-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210  
PH :8217453513.

### GOKAK

880. SHANTESHA MOTORS PVT. LTD. (IR01-IR-01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307  
PH :7829925760.

### GONIKOPPAL

881. MANDОВI MOTORS PVT LTD. (2501-U3-07), KAIKERY VILLAGE,GONIKOPPAL,, - 571213  
PH :9900064873.

### GUDIBANDHA

882. BIMAL AUTO AGENCY INDIA PVT. LTD. (SGT1-SGT-01), DOOR NO:160, 1ST WARD, OPP TO GOVERNMENT BUS STAND, BAGEPALLI ROAD, GUDIBANDA, CHICKABALLAPURA DISTRICT KARNATAKA - 561209  
PH :9742261903.

### GULBARGA

883. LAHOTI MOTORS PVT. LTD (E902-E9-01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104  
PH :9480825014.
884. LAHOTI MOTORS PVT. LTD (E902-E9-02), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA - 585104  
PH :7619342035.

### GUNDLUPET

885. FRIENDLY MOTORS (INDIA) PVT. LTD. (BPU1-BPU-01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/1 N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET - 571111  
PH :9686855799.

### HAGARIBOMMANAHALLI

886. MUNEER ENTERPRISES PVT. LTD. (BUX1-BUX-01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212  
PH :9481343007.

### HALIYAL

887. RNS MOTORS (SFM1-SFM-01), SURVEY NO: 347P/27, DOOR NO:B1180/15 & B1180/16, HANUMAN COMPLEX, HALIYAL CIRCLE, MAIN ROAD, HALIYAL TOWN & TALUK, UTTARA KANNADA DISTRICT,KARNATAKA - 581329  
PH :8284200200.

### HARAHOLLI

888. SURAKSHA (SIH1-SIH-SIH1-01), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA, - 562112  
PH :9449865608.

### HASSAN

**Dealer Workshop (AS ON 30.05.2023 )**

889. VENKAT MOTORS (C802-C8-01), NO. 326,  
HASSAN GROWTH CENTRE, H.N. PURA ROAD,  
HASSAN - 573201  
PH :9844044038.

**HAVERI**

890. REVANKAR MOTORS PVT LTD (BBM1-BBM-01),  
NEAR TMAE SOCIETY CAMPUS,  
IJARILAKAMAPUR, PB ROAD, HAVERI - 581110  
PH :7022016903.

**H-CROSS**

891. BIMAL AUTO AGENCY INDIA PVT. LTD.  
(CRQ1-CRQ-01), PART NO.1, SITE NO.36, SBT  
COMPLEX, HOSKOTE-BANGALORE ROAD,  
KARIYANAPURA, H CROSS, SHIDLAGHATTA  
TALUK, BANGALORE RURAL DISTT.  
CHIKKABALLAPURA - 562122  
PH :9738948126.

**HEBRI**

892. ABHARAN MOTORS PVT LTD (BGD1-BGD-01),  
SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE &  
TALUK - HEBRI, KARKALA, DIST.-UDUPI,  
KARNATAKA - 576112  
PH :9900077605.

**HEGGADADEVANA KOTE (H D KOTE)**

893. FRIENDLY MOTORS (INDIA) PVT. LTD.  
(CJC1-CJC-01), SURVEY NO. 5/4, VILLAGE –  
YARAHALLI, KASABA HOBLI, TALUK –  
H.D.KOTE, DISTRICT – MYSORE. - 571125  
PH :9686855799.

**HESSARGHATA**

894. BIMAL (SGN1-SGN-01), SY NO 294/3,  
HESARAGHATTA VILLAGE YELAHANKA TALUK,  
BENGALURU,KARNATAKA - 560088  
PH :9743658662.

**HOSDURGA**

895. SAKETH AUTOMOBILES (BWO1-BWO-01),  
ASSESSMENT NO. 9310/6, PLOT NO. 6,  
HOSADURGA TOWN, SARASWATI BADAVANE,  
HOSADURGA, DIST -CHITRADURGA,  
KARNATAKA - 577 527  
PH :7625088946.

**HOSKOTE**

896. BIMAL AUTO AGENCY INDIA PVT. LTD.  
(0216-SM-05), NO. 205/108, SITUATED AT  
HOSKOTE TALUK, KASABA HOSKOTE TOWN,  
DISTT - BANGALORE - 562114  
PH :9742281726.

**HOSPET**

897. MUNEEER ENTERPRISES PVT. LTD.  
(N701-N7-01), BELLARY  
ROAD,SANKLAPUR,HOSPET , - 583203  
PH :7619505001.

**HUBLI**

898. RNS MOTORS (7301-73-01), PUNE - BANGALOR  
ROAD, UNKAL, HUBLI - 580025  
PH :9538965902.

899. RNS MOTORS (7301-73-0F), GOKUL ROAD  
MUREDESHWAR BHAVAN , HUBLI - 580030  
PH :8661208532.

900. REVANKAR MOTORS PVT. LTD. (7303-73-01),  
CTS NO.165/A, WARD NO.III, DESHPANDE  
NAGAR, HUBLI (KARNATAKA) - 580029  
PH :8792008301.

**HUNSUR**

901. FRIENDLY MOTORS(INDIA) PVT. LTD.  
(GLI1-GLI-01), M-18 & M-19, KSSIDC INDUSTRIAL  
ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE  
DISTRICT, KARNATAKA - 571105  
PH :7022669699.

**JEWARGI**

902. LAHOTI (SLI1-SLI-01), S NO: 125, PLOT NO:7,  
FILTER BED ROAD, OPP. BUS DEPOT,  
JEWARGI, KALABURGI DISTRICT (FORMERLY  
GULABARGA) , KARNATAK-585310. - 585310  
PH :9480825004.

**KADABA**

903. MANDОВI MOTORS PVT LTD. (BYE1-BYE-01),  
SURVEY NO.-11/20, KALARA, KADABA POST,  
DAKSHIN KANNADA DISTT., KARNATAKA -  
574221  
PH :9740912365.

**KADUR**

904. SHRUTI MOTORS (BQS1-BQS-01), SHOP NO. 1 &  
2, DAGA COMPLEX, ULUKINAKALLU, NEAR  
PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT –  
CHIKMAGALUR. - 577548  
PH :8904823736.

**KANAKAPURA**

905. KALYANI MOTORS PVT. LTD. (BXY1-BXY-01),  
SURVEY NO. 447/1B, KASABA HOBLI,  
BUDIGUPPE GRAMA, TALUKA- KANAKAPURA,  
DISTRICT- RAMANAGARA. KARNATAKA. -  
562117  
PH :9900599933.

**KARKALA**

906. ABHARAN MOTORS PVT LTD (G601-HY-03),  
NH-13, MANGALORE KUDREMUKH ROAD,  
PULKERI, KARKALA - 574104  
PH :9880232666.

**KARWAR**

907. BHARATH AUTO CARS PVT. LTD. (8J01-8J-01),  
SURVEY NO. 459/2B, 456/2B AND 456/3,  
CHITTAKULA VILLAGE, KARWAR TALUKA,  
UTTARKANNADA DISTRICT, KARNATAKA. -  
581301  
PH :7829567400.

**KITTUR, BELGAUM**

908. SHANTESHA (SFO1-SFO-01), PLOT NO. 219,  
KITTUR INDUSTRIAL AREA (KIADB), POONA  
BANGALORE HIGHWAY (NH-4),KITTUR TOWN  
AND TALUK, BELGAUM DISTRICT, - 591115  
PH :9731396808.

**KOLAR**

909. MANDОВI MOTORS PVT LTD. (0201-QU-0F), 67/3  
BANGALORE-CHENNAI HIGHWAY,  
KONDARAJANA HALLI, OPP HOTEL SHANTHI  
SAGAR, KOLAR. - 563101  
PH :9740020734.

**KOPPAL**

910. K.P.F. PVT. LTD. (ER01-ER-01), SL. 283/10, NEAR  
MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD  
NH63, KOPPAL - 583238  
PH :9449876027.

**KRISHNARAJANAGARA (KRNAGARA)**

911. FRIENDLY MOTORS(INDIA) PVT. LTD.  
(SCQ1-SCQ-01), NO.D,  
DORNAHALLI,DODDEKOPPALU GRAMA  
PANCHAYAT,KASABA HOBLI,  
KRISHNARAJANAGARA, MYSORE  
DISTRICT,KARNATAKA - 571602  
PH :8971159430.

**KRISHNARAJAPET**

912. MANDОВI MOTORS PVT LTD. (BMP1-BMP-01),  
KHATA NO.3094, SY. NO.278, MYSORE  
CHENNERAYAPATNA ROAD (OPP. TO K.B.C.  
FUEL STATION), KRISHARAJAPET TOWN,  
TALUK MANDYA DISTT. KARNATAKA - 571423  
PH :9845132038.

**KUMTA**

913. BHARATH AUTO CARS PVT. LTD.  
(AFA2-AFA-01), MALLYA'S COMPOUND, NH-66,  
ALVEKODI KALBAGH VILLAGE, KUMTA  
(KARNATAKA) - 581334  
PH :9448979530.

**KUNDAPUR**

914. ABHARAN MOTORS PVT LTD (G601-CY-02),  
NH-17, THAKKATTE, KUNDAPURA - 272877  
PH :9880197524.

**KUNIGAL**

915. SAKETH AUTOMOBILES (VQ01-VQ-01), NEAR  
KRS AGRAHARA,BM ROAD, KUNIGAL, TUMKUR  
DISTRICT, KARNATAKA - 572130  
PH :9686550127.

**KUSHAL NAGAR**

916. MANDОВI MOTORS PVT LTD. (VN01-VN-01), SY  
NO:88,MADAPATANAKUSHAL  
NAGAR,SOMVARPUR,NORTH KODAGU,  
KARNATAKA - 571234  
PH :9900080893.

**LINGASUGUR**

917. MUNEEER ENTERPRISES PVT. LTD.  
(BOQ1-BOQ-01), PLOT NO. 11, BASAMMA  
COMPLEX, RAICHUR ROAD, LINGSUGUR,  
RAICHUR, KARNATAKA - 584122  
PH :9480830255.

**MADDUR**

918. MANDОВI MOTORS PVT LTD. (BMK1-BMK-01),  
SURVEY NO 802/2A4B, NEAR SANJAY  
THEATRE, BM ROAD, MADDUR TOWN,MANDYA  
DISTRICT, KARNATAKA - 571428  
PH :90080 31608.

**MADIKERI**

919. FRIENDLY MOTORS (INDIA) PVT. LTD.  
(2502-QX-02), BASAPPA THEATURE BUILDING,  
DASAWAL ROAD,MADIKERI KODAGU DISTRICT.  
- 571201  
PH :9606073867.

**MAGADI**

920. PRATHAM MOTORS PVT. LTD. (BHX1-BHX-01),  
SY NO:92/2, THIRUMALAI VILLAGE, KASABA  
HOBLI, MAGADI TOWN & TALUK, RAMANAGARA  
DISTRICT, KARNATAKA - 562120  
PH :9900058483.

**MANDYA**

921. MANDОВI MOTORS PVT LTD. (2501-BD-06),  
1660/A, KALLAHALLI EXTENSION, M.C. ROAD, -  
571401  
PH :9611165873.

**MANGALORE**

922. MANDОВI MOTORS PVT LTD. (4502-45-01),  
ARVIND BUILDING, BALMATTIA ROAD,  
HAMPANKATTA, MANGALORE - 575001  
PH :9845107701.

923. MANDОВI MOTORS PVT LTD. (4502-45-03), NO.,  
HASSAN GROWTH CENTRE,ADYAR.N.H.  
-48,,MANGALORE - 575007  
PH :9845514146.

924. BHARATH AUTO CARS PVT. LTD. (4503-45-01),  
NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR  
A.J. HOSPITAL, MANGALORE - 575004  
PH :9886785730.

925. MANDОВI MOTORS PVT LTD. (4502-45-07),  
BALLAL INDUSTRIAL ESTATE, YAYYADI,  
MANGALORE,KARNATAKA - 575008  
PH :9680079235.

926. BHARATH AUTO CARS PVT. LTD. (4503-45-06),  
PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE,  
NEXT TO BHARATH BEEDI WORKS PVT. LTD.,  
BUNTS HOSTEL, KADRI ROAD, MANGALORE,  
KARNATAKA - 575002  
PH :9886333030.

927. MANDОВI MOTORS PVT LTD. (4502-45-08),  
DOOR NO. 2-63/4, SUJITH BAGH LANE,  
YEYYADE, MANGALORE, DISTRICT – DAKSHINA  
KANNADA, KARNATAKA - 575008  
PH :9880278077.

**Dealer Workshop (AS ON 30.05.2023 )**

928. BHARATH AUTO CARS PVT. LTD. (4503-45-08), S. NO. 1376/1-41, 1375/41-2-A1P1, 2A1P3, 1373/1-40, 1369/1-40-A2, KASABA BAZAR, KANDADAPALLI, KUDROLI, TALUK - MANGALORE, MANGALORE, KARNATAKA. - 575003  
PH :9886785730.

**MUDBIDRI**

929. BHARATH AUTO CARS PVT. LTD. (4503-HN-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227  
PH :9886785430.

**MUDHOL**

930. VIJAY MOTOWINGS (ET01-ET-01), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587 313  
PH :9860046173.

**MULKI**

931. BHARATH AUTO CARS PVT. LTD. (4503-QV-05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154  
PH :9986020730.

**MURUDESHWAR**

932. RNS MOTORS (7301-T8-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350  
PH :9538965969.

**MYSORE**

933. MANDОВI MOTORS PVT LTD. (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005  
PH :9945248860.  
934. MANDОВI MOTORS PVT LTD. (2501-25-05), NO.182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011  
PH :9845939936.  
935. FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008  
PH :7259255558.  
936. MANDОВI MOTORS PVT LTD. (2501-25-08), 217/2., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017  
PH :9845939937.

**NAGAMANGALA**

937. MANDОВI MOTORS PVT LTD (SFK1-SFK-01), SURVEY NO:3316/2327,VISHALAXAMMA COMPLEX, T B BADAVANE B M ROAD, NAGAMANGALA TOWN, MANDYA DISTRICT, KARNATAKA - 571432  
PH :9845132038.

**NANJANGUD**

938. FRIENDLY MOTORS (INDIA) PVT. LTD. (BYK1-BYK-01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT – MYSORE, KARNATAKA. - 571301  
PH :9686855799.

**NARASIMHARAJAPURA**

939. SHRUTI MOTORS (SPP1-SPP-01), SURVEY NO # SURVEY NO.173,/P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALU R DIST.,KARNATAKA - 577134  
PH :8310187660.

**NELAMANGALA**

940. RNS MOTORS LIMITED (BBH1-BBH-01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123  
PH :7259875385.

**NELYADI**

941. BHARATH AUTO CARS PVT. LTD. (BPF1-BPF-01), SURVEY NO. 97/11P AND SURVEY NO. 97/9, VILLAGE - HOSAMAJALU KAUKRADY, POST - NELYADI, TALUK - PUTTUR, DIST.-DAKSHIN KANNADA . - 574229  
PH :9886072730.

**OORGAUMPET**

942. BIMAL AUTO AGENCY (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), SITE NO.10, NEW KATHA NO: 251, ROBERTSONPET, KGF, OORGAUMPET, KOLAR DIST, KARNATAKA- 563122 - 563122  
PH :9513748707.

**PADUBIDRI**

943. ABHARAN MOTORS PVT LTD (CSI1-CSI-01), PLOT NO. 51/20, VILLAGE – PADUBETTU, PADUBIDRI TOWN, TALUKA & DISTRICT – UDUPI, KARNATAKA. - 574111  
PH :9880232999.

**PUTTUR**

944. BHARATH AUTO CARS PVT. LTD. (4503-CZ-02), NEAR RAIWAY STATION, HARADY, PUTTUR - 517583  
PH :9886072730.

**RAICHUR**

945. MUNEEER ENTERPRISES PVT. LTD. (N701-3K-02), #12-10-64, GOUSHAL ROAD,SIYA TALAB AREA,RAICHUR - 584101  
PH :9480830264.

**RAMANAGARAM**

946. KALYANI MOTORS PVT. LTD. (0211-JB-02), #K1318/2034C,OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511  
PH :9686689007.

**RANEBENNUR**

947. REVANKAR MOTORS (BXV1-BXV-01), SCHEDULE A-2. OPP. STJIT ENGINEERING COLLEGE, P B ROAD, RANEBENUR, KARNATAKA. - 581115  
PH :8830947883.

**SAGAR**

948. SHRUTI MOTORS (WF01-WF-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. - 577401  
PH :9740014703.

**SAKLESHPUR**

949. VENKAT MOTORS (BPW1-BPW-01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT – HASSAN. - 573134  
PH :7892809634.

**SARJAPURA**

950. PRATHAM MOTORS PVT. LTD. (BSY1-BSY-01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA – ANEKAL, SARJAPUR HOBLI, DISTRICT – BANGALORE URBAN, KARNATAKA. - 562125  
PH :7760962890.

**SHIMOGA**

951. SHRUTI MOTORS (B701-B7-01), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201  
PH :9880401283.  
952. SHRUTI MOTORS (B701-B7-03), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA. - 577204  
PH :9886829239.  
953. SHRUTI MOTORS (B701-B7-05), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOGA. - 577201  
PH :9986825115.

**SIDDAPUR**

954. BHARATH AUTO CARS PVT. LTD. (BPY1-BPY-01), SURVEY NO. 211, NEAR IOCL PETROL BUNK, JOG ROAD, VILLAGE – HOSUR, TALUK – SIDDAPUR, DISTRICT – UTTARA KANNADA. - 581355  
PH :9449402730.

**SIRISI**

955. RNS MOTORS LTD (MQ01-MQ-01), SURVEY NO 43/B, LANDAKANALLI VILLAGE, DODNALLI GRAMA,SIRSI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402  
PH :9895979023.

**SIRSI**

956. RNS MOTORS (7301-MQ-0D), K H B COLONY, SIRSI - 581402  
PH :9538925606.

**SIRUGUPPA**

957. MUNEEER ENTERPRISES PVT. LTD. (CTN1-CTN-01), SITE NO:31C/1B & PLOT NO.1, BELLARY - SIRUGUPPA MAIN ROAD, SIRUGUPPA TALUK, BELLARY DISTRICT. - 583121  
PH :7619505001.

**SOMWARPET**

958. MANDОВI MOTORS PVT LTD. (CSG1-CSG-01), SURVEY NO.130 SITUATED AT MADIKERI ROAD, NAGROOR VILLAGE, BALAGUNDA POST, SOWMARPET TALUK, NORTH KODAGU DISTT. - 571236  
PH :9845115665.

**SRINIVASAPURA**

959. SURAKSHAA CAR CARE PVT. LTD. (BUR1-BUR-01), SY NO. 40, VPRD NO. 86, PROPERTY NO. 84 & 87, CHALDIGANA HALLI GRAMA PANCHAYATH, PANNASAMAKANA HALLI VILLAGE, SRINIVASAPURA POST & TALUK, DIST.-KOLAR, KARNATAKA - 563 135  
PH :9449865601.

**SULLIYA**

960. MANDОВI MOTORS PVT LTD. (4502-EW-04), ODABI SULLIA,MANGALORE MYSORE ROAD,KARNATAKA - 574239  
PH :9900002325.

**SURATHKAL**

961. MANDОВI MOTORS PVT LTD. (4502-7G-02), KANA ROAD, SURATHKAL - 574158  
PH :9845514143.

**T. NARASIPURA**

962. MANDОВI MOTORS (SFL1-SFL-01), KHATA NO:472/473/474, OPP TO SRI RAGHAVENDRA SWAMY MUTT, CHAMARAJANAGAR ROAD, T. NARASIPURA TOWN, MYSORE DISTRICT, KARNATAKA - 571124  
PH :9845132038.

**THIRTHAHALLI**

963. SHRUTI MOTORS (BQR1-BQR-01), PLOT NO. 1507/2187. OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI . - 577432  
PH :7795851011.

**THOKOTU**

964. BHARATH AUTO CARS PVT. LTD. (QW01-QW-01), NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA KANNADA DISTT. - 575017  
PH :9538796330.

**TIPTUR**

965. SAKETH AUTOMOBILES (H101-HV-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA - 572201  
PH :9945301023.

**TUMKUR**

## Dealer Workshop (AS ON 30.05.2023 )

966. SAKETH AUTOMOBILES (H101-H1-01), SIRA ROAD, TUMKUR - 572106  
PH :9686550323.

### UDUPI

967. ABHARAN MOTORS PVT LTD (G601-G6-01), N.H. 17, NITTUR, UDUPI - 576103  
PH :9880232999.

968. ABHARAN MOTORS PVT LTD (G601-G6-05), NO. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI. - 576101  
PH :9686694341.

### UJIRE

969. BHARATH AUTO CARS PVT. LTD. (BWT1-BWT-01), SURVEY NO.237-2B1, MANGALORE-CHARMADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKA, DISTT. DAKSHINA KANNADA, KARNATAKA. - 574240  
PH :9886176130.

### UPPINANGADI

970. MANDOVI MOTORS PVT LTD. (4502-NL-05), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241  
PH :9740912365.

### VIJAYPURA

971. BIMAL AUTO AGENCY (BTZ1-BTZ-01), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA. - 562135  
PH :8884433996.

### VITTAL

972. MANDOVI MOTORS PVT LTD. (CCE1-CCE-01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA – BANTWAL, DISTRICT – DAKSHIN KANNADA - 574243  
PH :9008610123.

### YADGIR

973. LAHOTI MOTORS (SFP1-SFP-01), SURVEY NO. 101/1, GULSARAM VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA  
PH :9480825031.

### YELLAPUR

974. REVANKAR MOTORS PVT. LTD (CUR1-CUR-01), PLOT NO. 4 A1A1A1 GR 5, UDYAM NAGAR, YELLAPUR POST, BALGIMANI, HUBLI-ANKOLA, YELLAPUR TOWN, UTTARA KANNADA DIST., KARNATAKA. - 581359  
PH :7090772121.

## KERALA

### ADOOR

975. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-CJ-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518  
PH :9745998303.

976. AVG MOTORS LTD. (Y501-CJ-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523  
PH :9446355900.

### ALANALLUR

977. KVR AUTOCARS PVT LTD (CIW1-CIW-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST – ALANALLUR, TALUKA – MANNARKAD, DISTRICT - PALAKKAD, KERALA. - 678601  
PH :9747020582.

### ALATHIYOOR

978. A M MOTORS (E601-CVJ-11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE - ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA - TIRUR, DIST.-MALAPPURAM, KERALA. - 676102  
PH :9895940000 , 9072998833.

### ALATHUR

979. BRD CAR WORLD LIMITED (BRW1-BRW-01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682  
PH :9745634999.

### ALLEPPY

980. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-E5-12), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002. - 699002  
PH :9745977744.

### ALLEPY

981. POPULAR VEHICLES (E502-E5-01), BUILDING NO. XVIII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZHA, KERALA-688011. - 688011  
PH :9778698161.

### ALUVA

982. BRD CAR WORLD LIMITED (A404-CBQ-09), RE SURVEY NO.330/7, NH-47, KUNNAMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102  
PH :9745907100.

### ANCHAL

983. SARATHY AUTO CARS (BOT1-BQT-01), SURVEY NO. 371/9, VILLAGE – IDAMULAKKAL, P.O. – ANCHAL, TALUK – PUNALUR, DISTRICT – KOLLAM. - 691306  
PH :9526906665.

984. POPULAR VEHICLE (1601-BQT-14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KAITHADY JUNCTION, ANCHAL, KERALA - 691306  
PH :9778698200.

### ANGAMALY

985. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-JW-0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572  
PH :9745998434.

986. POPULAR VEHICLES & SERVICES LTD. (2701-JW-0D), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD,ANGAMALY - 683572  
PH :8096078886.

### ATTINGAL

987. POPULAR VEHICLES & SERVICES LTD. (1601-SX-07), PALAMKONAM, PERUNKULAM,VIA- ALAMCODE, ATTINGAL - 695102  
PH :8086078788.

988. SARATHY AUTODRIVES PVT LTD (SX05-SX-01), SURVEY NO. 2952/17 & 2952/4, KIZHUVILLAM VILLAGE, ATTINGAL, CHARAYINKEEZHU TALUK, TRIVANDRUM DIST., KERALA. - 695 104  
PH :9526052765.

989. INDUS MOTOR COMPANY PRIVATE LIMITED (SX01-SX-01), SY. NO. 54/13, 14, 15, 16, (OLD SY. NO. 22, 22/13, 16), IN BLOCK NO.3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. - 695104  
PH :9747550888.

### BALARAMAPURAM

990. POPULAR VEHICLES & SERVICES LTD. (1601-AQA-11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501  
PH :8943345922.

### CALICUT

991. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011  
PH :9745998019.

992. POPULAR VEHICLES & SERVICES LTD. (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016  
PH :9846298613.

993. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT - 673005  
PH :9745998020.

994. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655  
PH :9745998018.

995. POPULAR VEHICLES & SERVICES LTD. (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT - 673009  
PH :9288012082.

996. CARINO MOTORS (CARINO AUTO INFRA PVT. LTD.) (4704-47-01), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH – CHERUVANNUR, P.O. – NALLALAM, CALICUT (KOZHIKODE) , KERALA. - 673027  
PH :7592898888, 7594997888.

### CHALAKUDY

997. BRD CAR WORLD LIMITED (ZJ02-ZJ-01), MURINGOOR P.O., CHALAKUDY - 680316  
PH :9645176999.

998. INDUS MOTOR COMPANY PRIVATE LIMITED (ZJ03-ZJ-01), SURVEY NO. 53/1, 53/2 & 55/1, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALUKA CHALAKKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307  
PH :9747557355.

### CHALAKUDY/ CHILLAKUDDY/ THRISSUR

999. POPULAR VEHICLES & SERVICES LTD. (Z701-8U-0C), OPPOSITE COMK HOSPITAL, VELLUKULAM ROAD, CHALAKUDY, KERALA - 680307  
PH :9072609600.

### CHANGARAMKULAM

1000. A M MOTORS (VH01-VH-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585  
PH :9895756008.

### CHAVAKKAD

1001. BRD CAR WORLD LIMITED (A404-QJ-06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512  
PH :9645963999.

1002. SAI SERVICE PRIVATE LIMITED (0J02-QJ-01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK – GURUVAYUR, CHAVAKKAD.) - 680506  
PH :9495883852.

### CHENGANNUR

1003. SARATHY AUTO CARS (C701-UL-06), PRAYUMKOD, THIRUVANVANDOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) - 689124  
PH :9447002647.

**Dealer Workshop (AS ON 30.05.2023 )**

1004. SAI SERVICE (UL03-UL-01), SURVEY NO. 276/2,11,13,13-2-2, NEAR BPCL PUMP AND SURVEY NO. 276/12, M C ROAD, NEAR LABHAM MAVELI STORE,CHENGANNUR PO & MUNICIPAL, CHENGANUUR VILL & TALUK, ALAPPUZHA DIST., KERALA-689121 - 689121 PH :9288024220.

**CHERPULASSERY**

1005. KVR AUTOCARS PVT LTD (NB01-NB-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE – CHERUPPALASSERY, TALUK – OTTAPPALAM, DISTRICT – PALAKKAD - 679503 PH :9747020582, 280100.

**CHERTHALA**

1006. INDUS MOTOR COMPANY PRIVATE LIMITED (VL03-VL-01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKUZH,CHERTHALA, ALAPPUZHA-DIST. - 688552 PH :9745997633.

1007. POPULAR VEHICLES & SERVICES PVT. LTD. (VL02-VL-01), RE-SURVEY NO.150/2-1,147/3, BUILDING NO.KP-18/80, N.H. KANJIKUZH VILLAGE, CHERTHALA, ALAPPUZHA DISTT., - 688582 PH :9072530127.

**CHINGAVANAM**

1008. POPULAR (I602-I6-I602-01), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531 PH :9778690817.

**CHITTUR**

1009. INDUS MOTOR COMPANY PRIVATE LIMITED (BOX1-BOX-01), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLIYAVALLAMPPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555 PH :9745991560.

**CHULLIMANOOR**

1010. POPULAR VEHICLES (1601-BAI-16), RE-SURVEY NO. 43/7, VILLAGE-ANAND, CHULLIMANOOR TOWN, TALUKA-NEDUMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541 PH :9778690745.

**COCHIN**

1011. POPULAR VEHICLES & SERVICES LTD. (2701-27-01), PERANDOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025 PH :9846017725.

1012. SAI SERVICE PRIVATE LIMITED (2705-27-02), NH-47, PATHADIPALAM,EDAPPALLY,COCHIN - 682024 PH :9645105057.

1013. POPULAR VEHICLES & SERVICES LTD. (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018 PH :9846298618.

1014. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015 PH :9745998040.

1015. SAI SERVICE PRIVATE LIMITED (2705-27-01), 50/1 15L, ,CHERANALLOOR ROAD,EDAPPALLY,COCHIN - 682024 PH :9645106339.

1016. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-09), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN. - 682030 PH :9745998013.

1017. SAI SERVICE PRIVATE LIMITED (2705-27-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) - 682040 PH :8129496818.

1018. GEORGE MAJO AUTOMOBILES PVT. LTD. (2709-27-01), DOOR NO.5452, 5452A, 5453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN - 683104 PH :7559997864, 4237700.

1019. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301 PH :9745992070.

1020. GEORGE MAJO AUTOMOBILES PVT. LTD. (2709-27-02), PLOT NO.2/316, NH-47, MARADU VILLAGE, KANNDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001 PH :7994763336.

**EDAPPAL**

1021. POPULAR VEHICLES & SERVICES LTD. (4702-AM-05), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH :9946104680.

**EDAVANNAPPARA**

1022. POPULAR VEHICLES (GKP1-GKP-01), SURVEY NO. 77/16-1 & 77/2-4, BUILDING NO.18/152-B, CHEEKODE VILLAGE,EDAVANNAPARA KONDOTTY ROAD, CHERUVAYOOR PO, MALLAPPURAM DISTRICT, KERALA-673645 - 673645 PH :#REFI.

**FORT KOCHI**

1023. SAI SERVICE PRIVATE LIMITED (BRS1-BRS-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005 PH :9645106330.

**GURUVAYUR**

1024. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-A4-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH :9745998015.

**IRINJALAKUDA**

1025. BRD CAR WORLD LIMITED (A404-KQ-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH :9539006999.

**IRITTY**

1026. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-VJ-02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRIITTY, KANNUR, KERALA - 670703 PH :9747554929.

**IRITY**

1027. POPULAR VEHICLE (VJ02-VJ-01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRIITY MUNICIPAL, KANNUR DIST. KERALA - 670703 PH :7902473741.

**KAIPAMANGALAM**

1028. SAI SERVICE PRIVATE LIMITED (2705-RP-07), VAZHIYAMBALAM PO, KAIPAMANGALAM,THRISSURE - 680681 PH :8129496846.

**KALAMASSERY/ ERNAKULAM**

1029. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-Q3-07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106 PH :9745998012.

**KALLAMBALAM**

1030. POPULAR (QZ02-QZ-01), BUILDING NO. 5/472, NH-47, KADUVAPALLY, THOTTAKAD P.O, KALLAMBALAM, TRIVANDRUM DIST., KERALA - 695605 PH :8096078788.

**KALPETA**

1031. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-JE-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA,WAYAND - 673591 PH :9745998592.

1032. KVR (JE02-JE-C1), BUILDING NOS. 363, 364, 365, 366,367,368 AND 369 CONSTRUCTED ON THE PLOT COMPRISED IN RESURVEY NOS. 719/6, 722/3, 722/22, 722/6, 722/8, 722/10, 722/21, SITUATED AT MUTTIL NORTH VILLAGE, VYTHIRI TALUK, KALPETTA SUB-DISTRICT, WAYANAD DISTRICT, KERALA - 673 122 PH :9747021902.

**KANHAGAD**

1033. KVR CARS (3L01-K2-02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315 PH :9605040999.

1034. POPULAR VEHICLES & SERVICES LTD. (4702-K2-06), HIGHWAY JUNCTION,KANHANGAD SOUTH P.O.,KANHANGAD - 689641 PH :9946104685.

**KANHANGAD**

1035. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-K2-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541 PH :9745998024.

**KANJIRAPALLY**

1036. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-9Y-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O., KANJIRAPALLY - 686506 PH :9745998009.

1037. AVG MOTORS LTD. (9Y03-9Y-01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT.,KERALA - 686512 PH :8606071155.

**KANNUR**

1038. HAR CARS (K101-K1-01), HAR AVENUE, KANNOTHUMCHAL, CHOYVA POST, KANNUR - 670006 PH :9539009480.

1039. HAR CARS (K101-K1-03), POTTIAN SHEKHARAN ROAD, MAKKANY , SOUTH BAZAR, KANNUR - 670002 PH :9539009443.

1040. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-K1-0E), BALANKINAR JN., KATTAMPALLY.P.O, KANNUR - 690011 PH :9745998023.

1041. KVR CARS (3L01-K1-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011 PH :9656034333.

1042. POPULAR VEHICLES & SERVICES LTD. (4702-K1-0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOYVA (PO), KANNUR - 670018 PH :9846062796.

**KARIKKAD**

1043. BRD CAR WORLD LIMITED (A404-GE-02), BRD INDUSTRIAL ESTATE,KARIKKAD, KUNNAMKULAM - 680519 PH :9955804599.

**KARUNAGAPALLY**

1044. SARATHY AUTO CARS (C701-AQ-05), K.S. PURAM,NEELIKULAM, KARUNAGAPPALLY,KOLLAM, - 690544 PH :9526691565.



Dealer Workshop (AS ON 30.05.2023 )			
1045. INDUS MOTOR COMPANY PRIVATE LIMITED (AQ03-AQ-01), SY.NO.243/1, 243/10, 243/16, 243/14, 243/15, 243/16, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583 PH :9745998006.	1055. INDUS MOTOR COMPANY PRIVATE LIMITED (8K02-8K-01), RE-SURVEY NO. 116/1-6, 116/2-5, BUILDING NO. 560/A, WARD NO. VII, AALA VILLAGE, (OLD VILLAGE-SREENARAYANAPURAM), KODUNGALLUR TALUK, MADHILAKOM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA - 680 008 PH :9747513444.	1064. INDUS MOTOR COMPANY PRIVATE LIMITED (ID02-ID-01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573 PH :9746743178.	1072. POPULAR (S801-S8-S801-02), BUILDING NO. MP/20749.20/426, 20/748, INCHAKADU, KALAYAPURAM VILLAGE, MYLOM PANCHAYATH, KOTTARAKKARA TALUKA, KOLLAM DISTRICT, KERALA- 691560 - 691560 PH :8086073466.
1046. SARATHY (C701-AQ-11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA. - 690 562 PH :9526691565.	<b>KODUVALLY</b>	<b>KOOTHATTUKULAM</b>	<b>KOTTARKKARA</b>
<b>KASARGOD</b>	1056. A M MOTORS (BGX1-BGX-01), SURVEY NO.91/9, 91/10,NALLANKADY, VAVAD POST, KODUVALLY, KOZHICODE DISTRICT, KERALA - 673572 PH :9895979023.	1065. SAI SERVICE PRIVATE LIMITED (VM01-VM-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. - 686662 PH :9645106258.	1073. POPULAR VEHICLES & SERVICES LTD. (S801-S8-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA - 691531 PH :8086073466.
1047. KVR CARS (3L01-3L-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123 PH :9747021206.	<b>KOLANCHERRY</b>	<b>KOPPAM</b>	1074. SARATHY AUTO CARS (S802-S8-01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARKARA DISTT. KOLLAM (KERALA) - 691531 PH :9847423365
1048. POPULAR VEHICLES & SERVICES LTD. (4702-3L-0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH :9946104621.	1057. SAI SERVICE (SJO1-SJO-01), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERY TOWN, NH-85, AIKARANADU NORTH VILL., KUNNATHUNADU TALUK, ERNAKULAM DIST., KERALA-682311 - 682311 PH :7356605955.	1066. AM MOTORS (CUU1-CUU-01), SURVEY NOS: 331/3-6, 331/3-10, NEAR SALAFIYYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309 PH :9048666635.	1075. INDUS MOTOR COMPANY PRIVATE LIMITED (S804-S8-01), RE SURVEY NO.207/3-2, KIZHAKKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., - 691531 PH :9747562299.
1049. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-3L-03), 18/304A & 18/304B, SY. NO. 39/3B, RE SY. NO. 57/6,MOGRAL, MANJESHWAR TALUK, KASARGOD, KERALA - 671541 PH :9747550747.	<b>KOLLAM</b>	<b>KOTHAMANGALAM</b>	<b>KOTTAYAM</b>
<b>KATTAPANNA</b>	1058. SARATHY AUTO CARS (C701-C7-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017 PH :9744552265.	1067. POPULAR VEHICLES & SERVICES LTD. (2701-9V-0B), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA - 686691 PH :9846027990.	1076. AVG MOTORS LTD. (B801-B8-01), ERAYILKADAVU, KOTTAYAM - 686001 PH :7510982222.
1050. INDUS MOTOR COMPANY PRIVATE LIMITED (ZN01-ZN-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.). - 685508 PH :9746743460.	1059. POPULAR VEHICLES & SERVICES LTD. (1601-Q4-04), H & C COMPOUND, MUNDACKAL, KOLLAM - 680006 PH :7594977550.	1068. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-9V-03), PALAKKADAN BUILDING,CHANKLAM,KOTHAMANGALAM - 686691 PH :9745998479.	1077. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-B8-04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM , KERALA - 686013 PH :9745998148.
1051. POPULAR VEHICLES (ZN02-ZN-01), RE-SURVEY NO. 81/3, VILLAGE & TOWN - KATTAPPANA, TALUK & DIST.-IDUKKI, KERALA. - 685 515 PH :9746818407.	1060. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-Q4-03), OLD SARATHY THEATRE, PUNALLOOR ROAD, KOLLAM - 691005 PH :9745998004.	<b>KOTTAKARKARA</b>	1078. POPULAR VEHICLES & SERVICES LTD. (B802-B8-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O. KOTTAYAM - 686006 PH :8086073454.
<b>KAYAMKULAM</b>	1061. SARATHY AUTO CARS (C701-C7-13), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AYATHIL, KILLIKLOOR PO, PUNTHALATHAZHAM-PALATHARA ROAD, KOLLAM, KERALA - 691004 PH :8606430765.	1069. INDUS MOTOR COMPANY PRIVATE LIMITED (S804-S8-02), RE-SURVEY NO.141/3-4,142/1-2,15-16,143/1-2,143/2,143/15-2,143/15-2-2, BEARING NOS. 25/36 & 38, KOTTARAKKARA VILLAGE, KOTTARAKKARA TALUK, KOLLAM DISTRICT, KERALA- 691506 - 691506 PH :9747562299.	1079. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-B8-0C), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM - 686013 PH :9745998007.
1052. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-8L-05), KARIYILAKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. - 690572 PH :9745998005.	<b>KOLLAM/ QUILON</b>	<b>KOTTAKKAL</b>	<b>KOZHENCHERRY</b>
1053. POPULAR VEHICLES & SERVICES LTD. (B802-8L-03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. - 690502 PH :9946105601.	1062. SARATHY AUTO CARS (C701-C7-08), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, Umayanallur SIDCO INDUSTRIAL ESTATE, KOLLAM. - 691589 PH :9947127565.	1070. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-8M-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST., - 676503 PH :9745998017.	1080. AVG MOTORS LTD. (W801-AS-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT- PATHANAMTHITTA, - 689641 PH :9446092995.
<b>KODUNGALLUR</b>	1063. SARATHY AUTO CARS (C701-C7-12), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIYAM PO, KOLLAM DIST., KERALA. - 691571 PH :9847936165.	1071. POPULAR VEHICLES & SERVICES LTD. (4702-8M-03), NH-17, CHANDAPARAMBU, RANBATHANI P.O, MALAPPURAM, KOTTAKAL - 676510 PH :9946104631.	<b>KUNNAMKULAM</b>
1054. SAI SERVICE PRIVATE LIMITED (2705-8K-03), NH-17,T.K.S.PURAM,KODUNGALLOOR - 680667 PH :9645106571.	<b>KONDOTTY</b>	<b>KOTTARAKARA</b>	1081. POPULAR VEHICLES & SERVICES LTD. (2701-8N-07), CHOONDAL,TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH :9946105695.
			<b>LAKKIDI PERUR</b>
			1082. A M MOTORS (CER1-CER-01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302 PH :8086305555.
			<b>MALAPURAM</b>

**Dealer Workshop (AS ON 30.05.2023 )**

1083. A M MOTORS (E601-E6-01), VARANGODE,  
DOWNHILL, MALAPURAM, - 676519  
PH :9895705325.

**MALLAPPALLY**

1084. INDUS MOTOR COMPANY PRIVATE LIMITED  
(I201-I2-01), THOPPI COMPLEX, MALLAPPALLY  
KOTTAYAM RD, MALLAPPALLY WEST,  
MALLAPPALLY (KERALA) - 689585  
PH :9747541400.

**MANATHAVADY**

1085. INDUS MOTOR COMPANY PRIVATE LIMITED  
(IE02-IE-01), SURVEY NO. 1/2A1, A1, B1, RY  
1/210, 1/99, MYSORE ROAD, CHETTAPALAM,  
MANATHAVADY CITY & TALUK, WYANAD DIST.,  
KERALA. - 670645  
PH :9745997002.

**MANJERI**

1086. A M MOTORS (E601-8V-05), THURAKKAL  
BYEPASS, MANJERI, MALAPURAM, KERALA -  
676121  
PH :9895756035.  
1087. KVR AUTOCARS PVT LTD (8V02-8V-01), CH BYE  
PASS ROAD, MANJERI, MALAPPURAM, KERALA  
- 676123  
PH :9747020801.  
1088. POPULAR VEHICLES & SERVICES LTD.  
(4702-8V-0E), NARUKARA VILLAGE, RAJIV  
GANDHI BYEPASS JN., THRUKKAL, MANJERI  
(KERALA) - 676121  
PH :8589992406.

**MANNARKAD**

1089. A M MOTORS (E601-RA-07), NH-213,  
MANNARKAD, DIST.-PALAKKAD - 678582  
PH :9895979048.  
1090. INDUS MOTOR COMPANY PRIVATE LIMITED  
(2702-RA-0K), ANAKATTY ROAD,  
AANDIPPADAM, NELLIPPUZHA-PO,  
MANNARKAD, KERALA - 678583  
PH :9745995946.

**MAVELIKARA**

1091. POPULAR VEHICLES & SERVICES LTD.  
(B802-S9-02), KONNAYIL SUVAKO INDUSTRIAL  
COMPLEX, SHED A-1., KOLLAkadavu  
INDUSTRIAL ESTATE, KOCHAL MOODU,  
KALLIMEL P.O., MAVELIKKARA, KERALA -  
690570  
PH :9400052338.  
1092. INDUS MOTOR COMPANY PRIVATE LIMITED  
(E502-S9-07), NEAR PRATHIBA THEATRE,  
PUTTHIYAKAVU, MAVELIKKARA - 690101  
PH :9745998137.

**MAVELIKARRA**

1093. POPULAR VEHICLES (B802-B8-10), BUILDING  
NO. 10/115-A, WARD NO. 10, CHENNNITHALA  
VILL. AND TOWN, SHANTHIVANAM JUNCTION,  
CHERUKOLE P.O., MAVELIKKARA TALUK,  
ALAPPUZHA DIST., KERALA- 690104. - 690104  
PH :9778690833.

**MORAYUR**

1094. A M MOTORS (CUJ1-CUJ-01), SURVEY NO.  
328/1, VILLAGE - MORAYUR, VALENCHERY,  
DISTRICT - MALAPPURAM, KERALA. - 673642  
PH :8086526666.

**MUVATTUPUZZHA**

1095. INDUS MOTOR COMPANY PRIVATE LIMITED  
(7E01-7E-01), NH-49, MUVATUPUZZHA  
KODAMANGALAM ROAD, NEAR R.K. HOSPITAL,  
MUVATUPUZZHA, ERNAKULAM DIST - 686661  
PH :97459998011.  
1096. POPULAR VEHICLES & SERVICES LTD.  
(2708-7E-02), MUTHUKALLU  
JUNCTION, PERUMPALLUR P.O.,  
MUVATTUPUZZHA, KERALA - 686673  
PH :7356988840.

**NEDUMANGAD**

1097. POPULAR VEHICLES & SERVICES LTD.  
(Z001-ZO-01), RE-SURVEY NO. - 855/29, 855/14/1  
(OLD SURVEY NO. 1583/1), KARIPPU VILLAGE,  
NEDUMANGAD TALUK, TRIVANDRUM  
DIST., KERALA-695541. - 695541  
PH :9846036696.

**NEYYANTINKARA**

1098. INDUS MOTOR COMPANY PRIVATE LIMITED  
(AT01-AT-01), INDUS MOTOR CO. PVT. LTD.,  
OLD M.V THEATRE, NEAR KSRTC BUS  
STATION, NEYYATINKARA, DIST. TRIVANDRUM  
- 695121  
PH :9747544500.

**NEYYATTINKARA**

1099. POPULAR VEHICLES (1601-16-1601-15),  
BUILDING NO. 11/562, KP-IX-843, NH 47,  
KOTTAMOM , KOLLAYIL PANCHAYAT, PANVEL -  
KOCHI - KANYAKUMARI HIGHWAY, KOTTAMOM,  
NEYYATTINKARA, TRIVANDRUM, KERALA-  
695122 - 695122  
PH :9946104602.

**NILAMBUR**

1100. INDUS MOTOR COMPANY PRIVATE LIMITED  
(4701-AF-0A), MINERVA JUNCTION, NILAMBUR ,  
KERALA - 679329  
PH :9745998396.  
1101. INDUS MOTOR COMPANY PRIVATE LIMITED  
(4701-AF-0D), MANAVEDHAM HIGH SCHOOL  
ROAD, CHANDAKUNNU - NILAMBUR PO,  
NILAMBUR, MALAPPURAM DIST. - 679329  
PH :9745998396.

1102. POPULAR VEHICLES & SERVICES (AF02-AF-01),  
RE-SURVEY NO: 6/1 BLOCK NO. 76,  
CHEMMARAN, NADUVATH PO, WANDOOOR  
ROAD, NILAMBUR, MALAPPURAM DIST.,  
KERALA - 679328  
PH :7736094999.

**NILAMEL**

1103. INDUS MOTOR COMPANY PRIVATE LIMITED  
(DA02-DA-01), SURVEY. NO. 195/10, 195/3-1-2,  
195/3-2-1, 195/8, 195/14, 195/9-1, 195/11-1,  
BLOCK NO. 32, ATTINGAL MUNICIPALITY,  
PAZHAYAKUNNAMEL VILLAGE, CHIRAYINKIL  
TALUK, (BORDER OF NILAMEL TOWN),  
TRIVANDRUM DIST., KERALA - 695601  
PH :9745993331.  
1104. POPULAR (DA03-DA-01), BUILDING NO. 10/279  
TO 288, M. C. ROAD, KANNANCODU, NILAMEL  
PO, KOLLAM (DIST.), KERALA- 691535 - 691535  
PH :8714606483.

**OTTAPALAM**

1105. INDUS MOTOR COMPANY PRIVATE LIMITED  
(PA01-PA-01), BUILDING NO.23/667, 23/669,  
PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM  
VILLAGE, OTTAPPALAM TALUKA, PALAKKAD  
DIST., KERALA - 679101  
PH :9747544454.

**PALA**

1106. POPULAR VEHICLES & SERVICES LTD.  
(B802-GN-04), 12TH MILE, PALA-PONKUNNAM  
ROAD, PALA - 686575  
PH :9072609475.  
1107. INDUS MOTOR COMPANY PRIVATE LIMITED  
(7E01-GN-05), OPP. ALPHONSA COLLAGE  
ARUNAPURAM(PO), PALA, KOTTAYAM - 686574  
PH :9745998878.  
1108. AVG MOTORS LTD. (GN03-GN-01), SURVEY  
NO.670/1, BLOCK-21, LALAM VILLAGE,  
ANTHINADU MEENANCHIL, PALA, KOTTAYAM  
DIST. - 686651  
PH :9447137246.  
1109. INDUS MOTOR COMPANY PRIVATE LIMITED  
(7E01-GN-07), SURVEY NO. 176, BLOCK NO. 16,  
HIGHWAY JUNCTION, ETTUMANOOR-POOJAR  
HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM  
DISTRICT - 686584  
PH :9747516934.

**PALAKKAD**

1110. POPULAR VEHICLES & SERVICES LTD.  
(2701-Y2-09), OPP. PALANA  
HOSPITAL, KODUVAYOOR ROAD, KINASSERY  
P.O., PALAKKAD - 678707  
PH :9946105613.  
1111. INDUS MOTOR COMPANY PRIVATE LIMITED  
(2702-Y2-0G), VADAKKUMURI-NH-47, KANNADI,  
KUZHALLAMAMAM (P.O.), PALAKKAD. - 678701  
PH :9745998590.

1112. INDUS MOTOR COMPANY PRIVATE LIMITED  
(Y202-Y2-01), DOOR NO: 5/366 & 367, NH 47,  
KOOTUPATHA, CHANDRANAGAR POST,  
PALAKKAD - 678007  
PH :9747519500.

**PANDIKKAD**

1113. AM MOTORS (CUV1-CUV-01), SURVEY NOS:  
333/2-2, 333/3-2, CHOORAKKAVU,  
PERINTHALMANNA ROAD, NEAR INDIAN OIL  
PETROL PUMP, PANDIKKAD TOWN & POST,  
MALAPPURAM DISTRICT, KERALA - 676 521  
PH :9539999570.

**PARAPPANANGADI**

1114. A M MOTORS (CTK1-CTK-01), SURVEY NO.66/6,  
66/7, KODAPPADI, POST-CHETTIPPADY,  
PARPANGADI, MALAPPURAM. - 676319  
PH :9895900466.

**PARAVUR**

1115. POPULAR VEHICLES & SERVICES LTD.  
(ZS01-ZS-01), SURVEY NO. 340/1-76.77.78, NEAR  
HP PETROL PUMP, PARAVUR-MANJALI MAIN  
ROAD, MANNAM PO, NORTH PARAVUR  
MUNICIPAL, ERNAKULAM DIST. 683520,  
KERALA. - 683520  
PH :9072609638.

**PATHANAMTHITTA**

1116. AVG MOTORS LTD. (W801-W8-02),  
JUNNUGAPADY, MYLAPRA ROAD,  
PATHANAMTHITTA, - 689671  
PH :9446002967.  
1117. INDUS MOTOR COMPANY PRIVATE LIMITED  
(1602-W8-13), KUMBAZHA, PATHANAMTHITTA -  
689653  
PH :9745998008.  
1118. POPULAR VEHICLES & SERVICES LTD.  
(B802-W8-05), T.K. ROAD, NEAR  
COLLECTORATE, PATHANAMTHITTA - 689645  
PH :9539009734.  
1119. INDUS MOTOR COMPANY PRIVATE LIMITED  
(1602-W8-12), SURVEY NO. 11-13/12(1),  
KARIMPANKUZHAY ROAD, NEAR SAROJ GAS  
AGENCY, MAKKANKUNNU, PATHANAMTHITTA,  
KERALA. - 689645  
PH :9745998588.

**PATHIRAPALLY**

1120. POPULAR VEHICLES & SERVICES LTD  
(E502-E5-02), BUILDING NO. X/832 TO 834, X/837  
TO 838, OPP. UDAYA STUDIO, PATHIRAPALLY  
TOWN, AMBALAPUZZHA TALUK, NH-47,  
ALAPPUZHA DIST., KERALA-688521. - 688521  
PH :9778698169.

**PATTAMBI**

1121. A M MOTORS (E601-8P-04), SHORANUR ROAD,  
PATTAMBI, DISTRICT-PALAKKAD, - 679306  
PH :9567866059.

## Dealer Workshop (AS ON 30.05.2023 )

1122. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-8P-08), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303  
PH :9745998295.
1123. A M MOTORS (E601-8P-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. - 679306  
PH :9567866059.

### PAYANNUR

1124. POPULAR VEHICLES & SERVICES LTD. (4702-9Z-04), N H 17, EZHILODE P O, . PAYYANUR - 670309  
PH :9946104701.
1125. POPULAR VEHICLES & SERVICES LTD. (9201-9Z-01), SY. NO. 218/1, CHERUTHAZHAM VILLAGE, EZHILODE (NEAR COLONY BUS STOP), PAYANNUR-KANNUR NH, PAYANNUR TALUK, KANNUR DISTRICT, KERALA - 670 309.  
PH :9946104701.

### PAYYANUR

1126. INDUS MOTOR COMPANY PVT. LTD. (9202-9Z-01), SURVEY NO.-289/117, 290/105, KARIVELLUR PERALAM GRAM PANCHAYAT (NEAR PALATHARA BRIDGE), PAYYANUR TALUK, KANNUR DISTRICT, KERALA- PIN-670521. - 670521  
PH :9745998204.

### PERINTHALMANNA

1127. KVR AUTOCARS PVT LTD (7H01-7H-01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351  
PH :9747020573.
1128. A M MOTORS (E601-7H-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322  
PH :8129818235.
1129. KVR AUTOCARS PVT LTD (7H01-7H-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322  
PH :9747020837.

### PERUMBAVOOR

1130. SAI SERVICE PRIVATE LIMITED (2705-8W-04), M.C.ROAD,PERUMBAVOOR,ERNAKULAM DIST,KERALA - 683542  
PH :7034258335.
1131. INDUS MOTOR COMPANY PRIVATE LIMITED (8W03-8W-01), SURVEY NO. 72/2-3, 72/3-3, TALUK - KUNNATHUNADU, VILLAGE - RAYAMANGALAM, SUB DIST.-PERUMBAVOOR, DIST.ERNAKULAM. - 683 541  
PH :9747591803.

### PIROVAM

1132. SAI SERVICE (BQW1-BQW-01), SURVEY NO. 788/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN & MUNICIPALITY, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA. - 686 664  
PH :9645106198.

### POINACHI

1133. KVR CARS (3L01-GF-03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319  
PH :9747021026.

### PUNALUR

1134. SARATHY AUTO CARS (C701-8Q-03), NH-208, Q.S. ROAD,ELAMPAL POST,PUNALUR, KOLLAM DIST - 691322  
PH :9744400265.
1135. INDUS MOTOR COMPANY PRIVATE LIMITED (8Q02-8Q-01), SY. NO. 48/1/42, OLD, SY. NO. 231A/3324, (OLD RAMRAJ TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD. - 691 305  
PH :9747638885.

### QUILANDY

1136. INDUS MOTOR COMPANY PRIVATE LIMITED (3O01-3O-01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306  
PH :9745997875.

### RAMANATTUKKARA

1137. A M MOTORS (E601-KB-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632  
PH :9567866144.

### RANNI

1138. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-JX-06), CHELLAKKAD-PO, PATHANAMTHITTA( DISTRICT), RANNI - 689677  
PH :9745998737.

### SASTHAMKOTTAH

1139. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-RT-09), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM - , KERALA - 690520  
PH :9745998849.

### SHORNUR

1140. POPULAR VEHICLES & SERVICES LTD. (2701-1I-0E), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124  
PH :8589992432.

### SULTHAN BATHERY

1141. POPULAR VEHICLES (VK01-VK-01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA. - 673 591  
PH :7594977551.

### TALIPARAMBA

1142. HAR CARS (K101-9W-02), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141  
PH :8539009473.

### THALASSERRY

1143. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-RO-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105  
PH :9745998022.

### THALASSERY/ TELLICHERRY

1144. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-Y3-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY , KERALA - 670102  
PH :9747520100.

### THALAYOLAPARAMBU

1145. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-WN-0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605  
PH :9746743003.

### THAMARASSERY

1146. INDUS MOTOR COMPANY PRIVATE LIMITED (PB06-PB-01), RE-SY. NO. 44/5A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMARASSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. - 673573  
PH :9747553362.
1147. POPULAR (PB07-PB-10), SURVEY NO.43/4 BLOCK NO.005, RAROTH VILLAGE , THAMARASSERY TALUK , KOZHIKODE DISTRICT, KERALA - 673573  
PH :9846397060.

### THIRUVALLA

1148. AVG MOTORS LTD. (Y501-Y5-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107  
PH :9446323999.
1149. POPULAR VEHICLES & SERVICE (B802-Y5-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103  
PH :8086073489.

### THODUPUZHA

1150. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-HZ-04), PALA ROAD, THODUPUZHA - 685584  
PH :9745998631.

1151. POPULAR VEHICLES & SERVICES LTD. (HZ02-HZ-01), SY.NO.124/7A-1, 124/7A-2, THODUPUZHA EHLOOR MAIN ROAD, VILLAGE & TOWN, THODUPUZHA, DISTT. IDUKI - 685585  
PH :9072530120.

### THRISSUR

1152. POPULAR VEHICLES & SERVICES LTD. (2701-A4-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655  
PH :6282306495.
1153. SAI SERVICE PRIVATE LIMITED (2705-A4-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004  
PH :9645105051.
1154. BRD CAR WORLD LIMITED (A404-A4-01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031  
PH :9995807141.
1155. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-A4-0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004  
PH :9745998014.
1156. BRD CAR WORLD LIMITED (A404-A4-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002  
PH :9746476529.

### THRITHALLUR

1157. BRD CAR WORLD LIMITED (A404-SS-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619  
PH :9539197888.

### TIRUR

1158. A M MOTORS (E601-Y4-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101  
PH :9995879706.
1159. KVR AUTOCARS PVT LTD (7H01-Y4-05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307  
PH :9747020673.
1160. A M MOTORS (E601-Y4-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103  
PH :9895705323.
1161. INDUS MOTOR COMPANY PRIVATE LIMITED (Y403-Y4-01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PVT. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA - 676105  
PH :9747518883.

### TRIPPUNITHURA

1162. SAI SERVICE PRIVATE LIMITED (2705-AK-05), HILL PALACE ROAD,KARINGACHIRA,COCHIN - 682301  
PH :9645105067.

### TRIPRAYAR

**Dealer Workshop (AS ON 30.05.2023 )**

1163. POPULAR VEHICLES & SERVICES LTD.  
(2701-8R-08). SURVEY NO. 296/5,8, 296/9,  
296/9-1, NATTIKA VILLAGE, NEAR CIVIL  
STATION, POLY JUNCTION, TRIPRAYAR TOWN,  
THRISSUR TALUK & DISTRICT, KERALA-680566  
- 680566  
PH :9846699245.
- TRIVANDRUM**
1164. INDUS MOTOR COMPANY PRIVATE LIMITED  
(1602-16-01), T.C. 24/885 THYCAUD P.O.,  
THYCAUD P.O., METTUKUDA, TRIVANDRUM -  
695014  
PH :9745998001.
1165. POPULAR VEHICLES & SERVICES LTD.  
(1601-16-01), C.I.T. ROAD, KILLIPALAM,  
KARAMANA P.O, TRIVANDRUM - 695002  
PH :9946104601.
1166. SARATHY AUTODRIVES PVT LTD (1607-16-02),  
KOVALAM BYEPASS, SN NAGAR, MANACAUD  
(PO), TRIVANDRUM - 695009  
PH :9947270665.
1167. INDUS MOTOR COMPANY PRIVATE LIMITED  
(1602-16-02), NH BYE PASS ROAD,  
VEMPALAVATTOM, TRIVANDRUM - 695029  
PH :9745998003.
1168. INDUS MOTOR COMPANY PRIVATE LIMITED  
(1602-16-05), G.G. MEDICAL COLLAGE P.O.,  
MURINJAPALAM, TRIVANDRUM,  
MURINJAPALAM, , - 695011  
PH :9745998002.
1169. POPULAR VEHICLES & SERVICES LTD.  
(1601-16-05), OPP. ST. JUDE CHURCH,CIT  
ROAD, KILLIPALAM,TRIVANDRUM - 695002  
PH :9846298610.
1170. INDUS MOTOR COMPANY PRIVATE LIMITED  
(1602-16-11), SURVEY NO.3, TC-7/1069(9),  
MARUTHAMKUZHI, SASTHAMANGALAM  
VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA  
P.O., TRIVANDRUM - 695030  
PH :9747508822.
1171. SOUTH PARK MOTORS PVT. LTD. (1604-16-01),  
SURVEY NO. 985/3-4-5-6, VILLAGE -  
KADAKAMPALLY, CHACKAI BYPASS, TALUKA -  
TRIVANDRUM, TRIVANDRUM, KERALA. - 695029  
PH :9526100008.
1172. SARATHY AUTODRIVES PVT LTD (1607-16-03),  
77/2-11, NEMOM VILLAGE, PAPPANAMCODU  
INDUSTRIAL AREA, TALUKA AND DISTRICT-  
THIRUVANANTHPURAM, KERALA. - 695019  
PH :9961665865.
1173. POPULAR VEHICLES (1601-16-12), RE-SURVEY  
NO. 26/4-1, MANANTHALA STADIUM ROAD,  
NEAR SURYAPRABHA AUDITORIUM, ULOOR  
VILLAGE, MANANTHALA, TRIVANDRUM DIST.,  
KERALA. - 695 015  
PH :9846498605.

1174. POPULAR VEHICLES (1601-16-17), BUILDING  
NO. 13/632,632-A, 633,633-A1,633-A2,634-636,  
6TH MILE STONE, VAZHAYILA PO,  
PEROORKADA, THIRUVANANTHAPURAM,  
KERALA - 695521 - 695521  
PH :9288023313.
1175. SARATHY AUTODRIVES PVT LTD (1607-16-01),  
SURVEY NO. 2448/4, VILL. MUTTATHARA, NH  
BYE PASS ROAD, KALLUMOOD JN.,  
VALLAKADAU PO, ENCHAKKAL,  
THIRUVANANTHAPURAM, KERALA-695008 -  
695008  
PH :9562416665.
- TRIVANDRUM-MANANTHALLA**
1176. INDUS MOTOR COMPANY PRIVATE LIMITED  
(1602-16-08), NEAR MUSLIM JUMA MASJID,  
MUKKAM PLAMOODE,  
VATTAPPARA-MANNANTHALA M C ROAD,  
VATTAPPARA PO,  
MANNANTHALA,TRIVANDRUM - 695028  
PH :9747540100.
- UPPALA**
1177. POPULAR VEHICLES & SERVICES LTD.  
(4702-4I-0A), N.H.17, KAIKAMPA, UPPALA P.O.,  
KASARGOD (KERALA) - 671322  
PH :8086078864.
1178. KVR CARS (4I02-4I-01), NH 17, BANDIYODE,  
MANGALAPADI (PO), UPPALA, KASARGOD  
DISTT.,KERALA - 671324  
PH :9526021876.
- VADAKARA**
1179. INDUS MOTOR COMPANY PRIVATE LIMITED  
(4701-8S-07), BYE PASS  
JN,VATAKARA-673104,CALICUT, - 673104  
PH :9745998021.
1180. POPULAR VEHICLES AND SERVICES  
(8S02-8S-01), NEAR MADAPPALLY GOVT.  
COLLEGE, MADAPPALLY, P.O. VADAKARA,  
KOZHICODE (KERALA) - 673102  
PH :8943345935.
- VALENCHERRY**
1181. A M MOTORS (CUK1-CUK-01), SURVEY NO.  
132/4, KOLAMANGALAM, PERINTHALMANNA  
ROAD, VALANCHERY, DIST.-MALAPPURAM. -  
676552  
PH :9745986666.
- VETTICHIRA**
1182. KVR AUTOCARS PVT LTD (7H01-MZ-03), AP IV,  
75A TO G, NH-17, CHUNKAM, DIST.  
MALAPPURAM, VETTICHIRA, - 676552  
PH :9747020023.
- WADAKKANCHERY**

1183. BRD CAR WORLD LIMITED (A404-MX-03),  
VAZHAKODE, CHELAKARA ROAD,  
MULLURKARA P.O., WADAKKANCHERY,  
THRISSUR DIST - 680583  
PH :9567869403.
- KERLA**
- EDAKKARA**
1184. KVR (GMN1-GMN-01), SURVEY NO. 1087/1C-91,  
VAZHIKADAVU VILLAGE, OOTY ROAD, MUNDA,  
EDAKKARA TOWN, NILAMBUR TALUK,  
MALAPPURAM DIST., KERALA - 679 331  
PH :9747020777.
- LADAKH**
- LEH**
1185. DRUK AUTOZONE (9S02-9S-01), AIRPORT  
ROAD, LEH (LADAKH), DISTT. LADAKH, LEH -  
194101  
PH :8082800205.
- MADHYA PRADESH**
- AGAR**
1186. UNITARA MOTORS (BJT2-BJT-01), 27, UJJAIN  
ROAD,  
NEAR MARKETING FUEL STATION,  
AGAR, MADHYA PRADESH (465669) - 465669  
PH :9770018283.
- ALIRAJPUR**
1187. RUKMANI MOTORS PVT. LTD. (GLY1-GLY-01),  
WARD NO 1, JHABUA ROAD, ALIRAJPUR,  
MADHYA PRADESH, MP - 457887  
PH :9755549200  
9109978301.
- ANUPPUR**
1188. SHUBH MOTORS PVT. LTD. (BIB1-BIB-01), NEAR  
HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224  
PH :9303884800.
- ASHOK NAGAR**
1189. PREM MOTORS PVT. LTD. (DS01-DS-02),  
SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA  
BYPASS NEAR RAJ MATA CIRCLE,  
ASHOKNAGAR, MADHYA PRADESH. - 473331  
PH :9926809856.
- ASHTA**
1190. JEEWAN MOTORS PVT. LTD. (BSF1-BSF-01),  
KHASRA NO.111/1 NEAR RELIANCE PETROL  
PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE  
(M.P.) - 466001  
PH :9826429604  
6264918307  
8718911222.
- BADNAWAR**

1191. PATEL MOTORS (INDORE) PVT. LTD.  
(BPT1-BPT-01), KHASRA NO. 2194/1, BADNAGAR  
ROAD, BADI CHOUPATI, OPPOSITE BSNL  
TOWER, BADNAWAR, DISTT. - DHAR, MADHYA  
PRADESH. - 454660  
PH :9926932221.
- BADWAH / BARWAHA (BOTH NAMES ARE OK)**
1192. NIMAR MOTORS PVT. LTD. (AU01-UJ-05),  
NIRMAL COMPLEX , INDORE ROAD , BARWAH -  
451001  
PH :7770878726, 9669569496.
- BALAGHAT**
1193. KUNAL MOTORS (U501-TP-04), KH NO.-1/56,  
JHULELAL DHARMSHALA ROAD, BALAGHAT,  
MADHYA PRADESH - 4811001  
PH :7770878726, 9669569496.
- BARELI**
1194. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ  
MOTORS PVT. LTD.) (I303-I3-01), SURVEY 423/2,  
VILLAGE KAMTON, NH 12, BARELI, RAISEN,  
MADHYA PRADESH. - 464668  
PH :9826333501.
- BARHI**
1195. SHUBH MOTORS PVT. LTD. (GMK1-GMK-01),  
1286/2, BARHI, DIST. - KATNI, MADHYA  
PRADESH - 483770  
PH :9755580253.
- BARNAGAR**
1196. YUG CARS (A UNIT OF RUKMARANI CARS  
INDORE PVT. LTD) (BBK2-BBK-01), RUNIJA  
ROAD ,BARNAGAR CITY, DISTRICT UJJAIN -  
456771  
PH :9755512100/7898900224.
- BARWANI**
1197. NIMAR MOTORS PVT. LTD. (AU01-SA-02),  
ANJAD ROAD, VILLAGE -KARAH, BARWANI,  
MADHYA PRADESH - 451551  
PH :7770804492, 9669569496.
- BEGAMGANJ**
1198. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ  
MOTORS PVT. LTD.) (CIL1-CIL-01), IN FRONT OF  
DUSHERRA MAIDAN, SAGAR BHOPAL ROAD,  
BEGAMGANJ, DIST – RAISEN , MADHYA  
PRADESH – 464881 - 464881  
PH :9826333501.
- BEOHARI**
1199. SHUBH MOTORS PVT. LTD. (BKA1-BKA-01),  
REEVA ROAD, NEAR AARRA MACHINE,  
BEOHARI, DIST.-SHAHDOL, MADHYA PRADESH.  
- 484774  
PH :9755580253.
- BERASIA**

---

**Dealer Workshop (AS ON 30.05.2023 )**

---

1200. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CKG1-CKG-01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT – BHOPAL, MADHYA PRADESH. - 463106  
PH :7389997570.

**BETMA**

1201. OCEAN MOTORS PVT. LTD. (BVR1-BVR-01), OPPOSITE IMPEB OFFICE, INDORE-AHEMDABAD ROAD, BETMA, DISTRICT – INDORE, MADHYA PRADESH. - 453001  
PH :7389936477.

**BETUL**

1202. KUNAL MOTORS (U501-U5-02), BHOPAL - NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK., BETUL - 460001  
PH :8349999177.

1203. KAMTHI MOTORS (GKF1-HHI-01), KAMTHI MOTORS LLP(SERVICE CENTER) NEAR SUNITA COLONY NEAR FOREST NAKA, SONAGHATI, ITARSI ROAD, BETUL - 460001  
PH :9329918424.

**BHAVRA**

1204. RUKMANI MOTORS (SPT1-SPT-01), GRAM PANCHAYAT, KALIYAVAHO, OPP SUNKER MANDIR, BHAVRA TEHSIL, ALIRAJPUR DISTRICT, MADHYA PRADESH - 457882. - 457882  
PH :9755549200  
9109978301.

**BHOPAL**

1205. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (0309-03-01), 4/1, DAGA HEIGHTS, NEAR BUDHNA MANDIR, MAIN ROAD KOLAR ROAD, CHUNABHATTI, BHOPAL, MADHYA PRADESH. - 462016  
PH :9109900400.

1206. JEEWAN MOTORS PVT. LTD. (0302-03-01), 9E SECTOR A, INDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024  
PH :9826017799  
9826429605.

1207. JEEWAN MOTORS PVT. LTD. (0302-03-04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH, CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036  
PH :8718802178.

1208. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (0308-03-01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023  
PH :9826333501  
9826032579.

1209. SATYAM MOTORS (0307-03-01), NH-12, SUVEESHA NAGAR, HOSHANGABAD ROAD, MISROAD - 462040  
PH :6261900423  
6261900696.

**BIAORA**

1210. UNITARA (0F02-0F-01), OLD AB ROAD, KACHNARIA, BIAORA (M.P) - 465674  
PH :9770018283.

**BINA**

1211. ADINATH CARS PRIVATE LIMITED (BHQ2-BHQ-01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT – SAGAR, MADHYA PRADESH - 470113  
PH :9009780047.

**BURHANPUR**

1212. NIMAR MOTORS PVT. LTD. (BRR1-BRR-01), KHASRA NO. 654/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP. PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH - 450331  
PH :7694011374, 9669569496.

**CHAKGHAT**

1213. CITY CARS (UNIT OF AGARWAL WHEELS) (GKQ1-GKQ-01), GRAM AND POST - CHANDAI, CHAKGHAT, TEHSIL - TEONTER, PRAGRAJ ROAD, NH 27, DIST- REWA, MP – 486226. - 486226  
PH :9754301199.

**CHATTARPUR**

1214. ADINATH CARS PRIVATE LIMITED (8B02-8B-01), MAHOBA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGAR - 471001  
PH :9009785577.

**CHHINDWARA**

1215. KAMTHI MOTORS LLP (U502-U5-01), KHASRA NO.1/53, BESIDE MVM SCHOOL, NAGPUR ROAD, VILL.-SARRA, DISTT. CHHINDWARA, MADHYA PRADESH - 480001  
PH :9111488444/ 9111535777.

1216. KUNAL MOTORS (U501-U5-03), OPP. KUNAL MOTORS SHOWROOM, LAL BAGH TIRAHA, BEHIND TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP), - 480001  
PH :9981852239.

1217. KUNAL MOTORS (U501-U5-06), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002  
PH :9981852239.

**CHITRAKOOT**

1218. CITY CARS (UNIT OF AGARWAL WHEELS) (GKS1-GKS-01), PILIKOTHI CHOURAHA, BESIDE SINGH AUTOMOBILE- A HERO AGENCY, CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA (MADHYA PRADESH)- 485334 - 485334  
PH :9754301199.

**DABRA**

1219. PREM MOTORS PVT. LTD. (BOR1-BOR-01), PICHHORE TIRAHA, GWALIOR JHANSI ROAD, DABRA, DIST.-GWALIOR. - 475110  
PH :9340059606.

**DAMOH**

1220. ADINATH CARS PRIVATE LIMITED (RD02-RD-01), SAGAR JABALPUR BYPASS ROAD, DAMOH (M.P.). - 470661  
PH :9009780035.

**DATIA**

1221. PREM MOTORS PVT. LTD. (3003-WE-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661  
PH :9926809803.

**DEORI**

1222. ADINATH CARS PRIVATE LIMITED (CUO1-CUO-01), C/O VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE, NEAR GOVT. HIGH SCHOOL, NARSINGHPUR ROAD, VILLAGE KHEER, DEORI DISTT. SAGAR (M.P.) - 470226  
PH :9009787562.

**DEPALPUR**

1223. OCEAN MOTORS PVT. LTD. (WB01-WB-03), NEAR LEELA RESIDENCY, INDORE ROAD, DEPALPUR, DIST. INDORE-MP - 453115  
PH :7389936488.

**DEWAS**

1224. UNITARA MOTORS PVT LTD (3Q02-3Q-01), SURVEY NO 255, A.B. ROAD, RASULPUR SQUARE, DEWAS, MADHYA PRADESH PIN 455001 - 455001  
PH :9770018283.

**DHAMNOD**

1225. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (UT01-UT-01), KHASRA NO. 484/1/2, OLD A B ROAD, OPPOSITE HP PETROL PUMP, DHAMNOD, DIST.-DHAR, MADHYA PRADESH. - 454552  
PH :9109199032  
7471111132.

**DHAR**

1226. RUKMANI MOTORS (P) LTD (5304-LM-02), 41/2 MAGAJPURA, DHAR., - 454001  
PH :9755549200  
9109978301.

**DINDORI**

1227. STANDARD AUTO AGENCIES (AVA1-AVA-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP, DINDORI - 481661  
PH :9131343928.

**FALI**

1228. OCEAN MOTORS (SGH1-SGH-01), NH 47, NEAR GRAM - FALI, TEHSIL KHUDEL, INDORE, MADHYA PRADESH. - 452016  
PH :7389936477.

**GADARWARA**

1229. STANDARD AUTO AGENCIES (BOI2-BOI-01), KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119, GADARWARA, DISTRICT – NARSINGHPUR. - 487551  
PH :7771003374.

**GANJ BASODA**

1230. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AEA2-AEA-01), LAL BAGH, BARETH ROAD, GANJ BASODA, VIDISHA, 464221. - 464221  
PH :9425148584.

**GARRA**

1231. KAMTHI MOTORS LLP (GJC1-GJC-01), LALBARRA ROAD, GARRA INDUSTRIAL AREA, GARRA, BALAGHAT, MADHYA PRADESH. - 481331  
PH :7723020884.

**GAUTAMPURA**

1232. OCEAN MOTORS PVT. LTD. (CFW1-CFW-01), RUNJI CHOURAHA, GAUTAMPURA, TEHSIL - DEPALPUR, DISTT.-INDORE, MADHYA PRADESH. - 453220  
PH :7389936477.

**GOTEGAON**

1233. STANDARD AUTO AGENCIES (BLY1-BLY-01), JABALPUR ROAD, OPP. NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR. - 443 001  
PH :7771003374.

**GUNA**

1234. PREM MOTORS PVT. LTD. (S301-S3-01), OPP R.T.O., A.B. ROAD, GUNA, - 473001  
PH :268015.

**GWALIOR**

1235. NIKUNJ MOTORS (3006-30-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 - 474005  
PH :9109105999.

1236. PREM MOTORS PVT. LTD. (3003-30-01), M. L. B. ROAD, GWALIOR., - 474002  
PH :9926809803.

1237. PREM MOTORS PVT. LTD. (3005-30-01), SHIVPURI LINK ROAD, GWALIOR - 474002  
PH :9926809803.

**HALALPURA - BHOPAL**

**Dealer Workshop (AS ON 30.05.2023 )**

1238. DAGA MOTORS (0309-03-02), KHASRA NO. 80/1/K, VILLAGE - HALALPURA, TEHSIL - HUZUR, DISTRICT - BHOPAL, MADHYA PRADESH. - 462030  
PH :9109900365.

**HANSA KHEDI**

1239. KATHED MOTORCORP (SGI1-SGI-01), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GANJ), TEHSIL –SANWER, DISTRICT –INDORE, MADHYA PRADESH. - 453551  
PH :7471111132.

**HARDA**

1240. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (KM01-VY-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331  
PH :8889281113.

**HATOD**

1241. OCEAN MOTORS PVT. LTD. (BVT1-BVT-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111  
PH :7389936477.

**HATTA**

1242. ADHINATH MOTORS (SKK1-SKK-01), NEAR NAVODAYA SCHOOL, DAMOH ROAD, HATTA, DISTT. DAMOH (M.P.) - 470775. - 470775  
PH :9009787562.

**HOSHANGABAD**

1243. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (KM01-KM-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001  
PH :8889281113.

**ICHHAWAR**

1244. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CIK1-CIK-01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT – SEHORE, MADHYA PRADESH. - 466115  
PH :9826333501.

**INDERGARH**

1245. PREM MOTORS (SPU1-SPU-01), NEAR KHERAPATI GARDEN, IDERGARH, MP - 475675  
PH :9926809818.

**INDORE**

1246. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (5307-53-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002  
PH :7471111132.

1247. KTL AUTOMOBILES (5309-53-C1), PLOT NO.5/R.C. SCHEME NO 134.MR 10,VILLAGE KHAJRANA, DIST INDORE-452010,MADHYA PRADESH - 452010  
PH :8889433301.

1248. OCEAN MOTORS PVT. LTD. (5306-53-01), SCHEME NO 97, PLOT NO 49, PART - 4, COMMERCIAL MANDI, RING ROAD, NEAR CAT SQUARE, RAJENDRA NAGAR, INDORE, MADHYA PRADESH 452012 - 452001  
PH :7389936513.

1249. OCEAN MOTORS PVT. LTD. (5306-53-02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017  
PH :8085916505.

1250. OCEAN MOTORS PVT. LTD. (5306-53-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAJESHWARI EXTENSION, PIPLIYAHANA, INDORE - 452001  
PH :7389936451.

1251. OCEAN MOTORS PVT. LTD. (5306-53-04), SCHEME NO 97, PLOT NO 142 & 151, PART - 4, COMMERCIAL MANDI, RING ROAD, NEAR CAT SQUARE, RAJENDRA NAGAR, INDORE, MADHYA PRADESH 452012 - 452012  
PH :9285100697.

1252. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010  
PH :9826360699.

1253. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017  
PH :9826360699.

1254. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006  
PH :9826360699.

1255. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-05), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH. - 452012  
PH :9826360699.

1256. RANA MOTORS (5308-53-01), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009  
PH :9109975566.

1257. RUKMANI MOTORS (P) LTD (5304-53-01), 2-3, A.B. ROAD,INDORE - 452001  
PH :9039088702  
9109978301.

1258. RUKMANI MOTORS (P) LTD (5304-53-03), NO. 4/5, MANORAMA GANJ, INDORE - 452001  
PH :9109107171  
9109978301.

1259. RUKMANI MOTORS (P) LTD (5304-53-04), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 15/1, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. - 452010  
PH :9981078226  
9109978301.

**JABALPUR**

1260. MAA GAYTRI (AGGARWAL) (5404-54-01), MOUZA KARMETA N.B. 497, P.H. NO 23/26, KHASRA NO. 487 & DIV. KHASRA NO. 484/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. - 482002  
PH :7489901021.

1261. SHUBH MOTORS (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001  
PH :9755581438.

1262. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002  
PH :9755594512.

1263. STANDARD AUTO AGENCIES (5405-54-07), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. - 482003  
PH :6387098013.

1264. STANDARD AUTO AGENCIES (5405-54-01), OPPOSITE ALLAHABAD BANK,DELITE TALKIES ROAD,CIVIL LINES, JABALPUR - 482001  
PH :7771014822  
9074360320.

1265. STANDARD AUTO AGENCIES (5405-54-03), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002  
PH :7771006920.

1266. STANDARD AUTO AGENCIES (5405-54-06), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001  
PH :9302525012.

**JAORA**

1267. PATEL MOTORS (INDORE) PVT. LTD. (P801-BFR-04), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRICO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226  
PH :243399, 7089901505, 9926932221.

**JHABUA**

1268. PATEL MOTORS (INDORE) PVT. LTD. (AAR1-AAR-01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661  
PH :9826634449.

**JOBAT**

1269. RUKMANI MOTORS (SOA1-SOA-01), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP – 457990. - 457990  
PH :9755549200  
9109978301.

**KARERA**

1270. PREM MOTORS (SMO1-SMO-01), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660. - 473660  
PH :9928823596.

**KATNI**

1271. SHUBH MOTORS PVT LTD (FK01-FK-01), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501  
PH :9755515839.

**KHANDWA**

1272. NIMAR MOTORS PVT. LTD. (AU01-3R-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001  
PH :9575105697, 9669569496.

**KHARGONE**

1273. NIMAR MOTORS PVT. LTD. (AU01-AU-01), JETAPUR,SANAWAD ROAD,KHARGAONE. - 451001  
PH :9669569504, 9669569496.  
1274. NIMAR MOTORS PVT. LTD. (AU01-AU-06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001  
PH :7694011436, 9669569496.

**KHATEGAON**

1275. UNITARA (BXB2-BXB-01), NEMAWAR-INDORE ROAD, KHATEGAON, M.P - 455336 - 455336  
PH :9770018283.

**KOTMA**

1276. SHUBH MOTORS (DO01-DO-01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336  
PH :9303884800.

**KUKSHI**

1277. OCEAN MOTORS PVT. LTD. (BIO1-BIO-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331  
PH :7389936477, 8065999990.

**LAKHNADON**

1278. KAMTHI MOTORS LLP (SCL1-SCL-01), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480886  
PH :9285506128.

**MAHESHWAR**

---

**Dealer Workshop (AS ON 30.05.2023 )**

---

1279. NIMAR MOTORS (SHH1-SHH-01), OPPOSITE DEVRAJ HOTEL, MAIN MANDLESHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224  
PH :969569504, 9754979019.

**MAHIDPUR**

1280. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CWN1-CWN-01), 264/3, BHIMAKHEDA, MAHIDPUR, UJJAIN - 456443  
PH :9755044300 9755512100.

**MAIHAR**

1281. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-GI-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771  
PH :9754301199.

**MAJHAULI**

1282. CITY CARS (SPN1-SPN-01), WARD NUMBER 14, NAGAR PARISAD MAJHAULI, DIST. SIDHI (M.P.) - 486666 - 486666  
PH :9754301199.

**MANASA**

1283. PATEL MOTORS (INDORE) PVT. LTD. (BZX1-BZX-01), 982/1, RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. - 458110  
PH :9977703139.

**MANAWAR**

1284. OCEAN MOTORS PVT. LTD. (BVS1-BVS-01), NEAR SHANTIKUNJ COLONY, INDORE-MANAWAR MAIN ROAD, TEHSIL – MANAWAR, DISTRICT – DHAR. - 454335  
PH :7389936477.

**MANDLA**

1285. STANDARD AUTO AGENCIES (5405-WD-04), KATARA ROAD, MANDLA, DIST. MANDLA MP - 481661  
PH :8959280989.

**MANDSAUR**

1286. PATEL MOTORS (INDORE) PVT. LTD. (WC01-WC-01), NEAR SHIVANA BRIDGE,RATLAM MANDSAUR ROAD,MANDSAUR - 458001  
PH :9977703139.

1287. PATEL MOTORS (INDORE) PVT. LTD. (WC01-WC-02), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001  
PH :9977704817.

**MANPUR**

1288. PATEL MOTORS (INDORE) PVT. LTD. (BRL1-BRL-01), KHASRA NO. 302/1/3, AB ROAD, MANPUR, DIST- INDORE - 453661  
PH :9826360699.

**MAUGANJ**

1289. CITY CARS (SEY1-SEY-01), NEAR SENGAR PETROL PUMP ,CHACK MODE WARD NUMBER 03,NH 7 ,MAUGANJ, DISTT – REWA, MADHYA PRADESH – 486331. - 486331  
PH :975301199.

**MHOW**

1290. OCEAN MOTORS PVT. LTD. (WA01-WA-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441  
PH :7389936514.

**MORENA**

1291. PREM MOTORS PVT. LTD. (RG01-RG-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001  
PH :9926809803.

**NAGDA**

1292. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHR2-CHR-01), PLOT NO. 17, STATE HIGHWAY NO.17, INDOIYA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456335  
PH :9755044300/9755512100.

**NARAYANGARH**

1293. PATEL MOTORS (SFN1-SFN-01), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. - 458553  
PH :9977703139.

**NARSINGHPUR**

1294. STANDARD AUTO AGENCIES (BB01-BB-01), KH. NO. 82/44 & 83/44, NB NO.519, PC NO. 19/42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT – NARSINGHPUR, MADHYA PRADESH. - 487001  
PH :9179779400.

**NASRULLAGANJ**

1295. JEEWAN MOTORS PVT. LTD. (CIN1-CIN-01), KHASRA NO. 458, VILLAGE – RALA, TEHSIL – NASRULLAGANJ, DISTRICT – SEHORE, MADHYA PRADESH. - 466331  
PH :9303884800.

**NEEMUCH**

1296. PATEL MOTORS (INDORE) PVT. LTD. (P801-3T-02), MHOW-NEEMUCH ROAD,NEEMUCH(MP),, - 458441  
PH :9977703907.

**NIWARI**

1297. ADINATH MOTORS (SFC1-SFC-01), ATKHASRA NO 2017/1, NEAR HDFC BANK MAIN ROAD, NIWARI, MADHYA PRADESH –472442 - 472442  
PH :9009787562.

**PANDHURNA**

1298. KAMTHI MOTORS (SFG1-SFG-01), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334. - 480334  
PH :9111535777.

**PANNA**

1299. CITY CARS (UNIT OF AGARWAL WHEELS) (EQ01-EQ-01), KHASRA NO. 378, MOHAN RAJ VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH . - 488001  
PH :9754301199.

**PARASIA**

1300. KAMTHI MOTORS LLP (GKF1-GKF-01), KHIRSADOHMAL, PARASIA, CHHINDWARA. MP - 480441  
PH :9285506109.

**PATAN**

1301. MAA GAYATRI (SHP1-SHP-01), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119  
PH :7489901021.

**PAWAI**

1302. CITY CARS (UNIT OF AGARWAL WHEELS) (SIX1-SIX-01), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. – PANNA, MP- 488446 - 488446  
PH :9754301199.

**PETLAWAD**

1303. PATEL MOTORS (INDORE) PVT. LTD. (CJD1-CJD-01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773  
PH :9926932221.

**PIPARIYA**

1304. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (CGB1-CGB-01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775  
PH :8889281113.

**PITHAMPUR**

1305. PATEL MOTORS (INDORE) PVT. LTD. (5303-BVD-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775  
PH :9826360699.

**RAISEN**

1306. JEEWAN MOTORS (RF02-RF-01), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551  
PH :9644712135.

1307. RAJRUP MOTORS (RF03-RF-01), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551  
PH :9826333501.

**RAJGARH**

1308. RUKMANI MOTORS (P) LTD (GKE1-GKE-01), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116  
PH :9755549200 9109978301.

**RATLAM**

1309. PATEL MOTORS (INDORE) PVT. LTD. (P801-P8-01), 76 C.D&E,INDUSTRIAL AREA,RATLAM - 457001  
PH :99269-32221/93404-31858.

1310. PATEL MOTORS (INDORE) PVT. LTD. (P801-P8-03), 181/17/18,DOSHI GOAN,INDUSTRIAL AREA ,JAORA ROAD,RATLAM - 457001  
PH :99269-32221/93404-31858.

**REWA**

1311. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-M2-03), NYPASS CHURHATA,DIST. REWA - 482001  
PH :9754301199.

1312. SHUBH MOTORS (5403-M2-05), VILLAGE – RATHARA, TEHSIL – HUZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003  
PH :9755582351.

**SADALPUR**

1313. OCEAN MOTORS (SPS1-SPS-01), JAIN SHRI SUPER MARKET, SERVICE ROAD, MHOW- NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P) - 454001. - 454001  
PH :7389936477.

**SAGAR**

1314. ADINATH CARS PRIVATE LIMITED (G102-G1-01), STATION ROAD, TILAK GANJ, SAGAR (M.P). - 470001  
PH :9009780030.

**SANWER**

1315. RANA MOTORS PVT LTD (CWX1-CWX-01), S.NO. 356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. - 453551  
PH :9109975566.

**SATNA**

1316. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-D7-05), (A UNIT OF AGRAWAL WHEELS PVT. LTD.), BESIDE BHASKAR PRESS, BEHIND MARUTI SHOWROOM, WARD NO.27, AMOUDHA KALA, PANNA ROAD, SATNA - 485001  
PH :9754301199.

**SAUSAR**

**Dealer Workshop (AS ON 30.05.2023 )**

1317. KAMTHI MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P – 480106. - 480106 PH :9111535777.

**SEHORE**

1318. JEEWAN MOTORS PVT. LTD. (0302-EH-02), 869/1/2, OFFICERS COLONY, IN FRONT OF CHURCH GROUND, BHOPAL, INDORE ROAD - 466001 PH :9617990992.

**SENDHWA**

1319. NIMAR MOTORS PVT. LTD. (CIH1-CIH-01), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL – SENDHWA, DISTRICT – BARWANI, MADHYA PRADESH. - 451666 PH :7694011408, 9669569496.

**SEONI**

1320. KUNAL MOTORS (U501-8X-05), JYARAT NAKA, JABALPUR NAGPUR ROAD, SEONI (M.P.) - 480661 PH :8349999269.

**SHADOL**

1321. SHUBH MOTORS (MF01-MF-01), JAMUA, NEAR GYAN GUPTA, BUDHAR ROAD, SHAHDOL, - 484771 PH :9755595423.

**SHAHPURA**

1322. STANDARD AUTO AGENCIES (CRD1-CRD-01), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH :7771003374.

**SHAJAPUR**

1323. UNITARA (RH03-RH-01), LAL GHATI, A B ROAD, SHAJAPUR, MP - 465001 PH :9770018283.

**SHAMGARH**

1324. PATEL MOTORS (INDORE) PVT. LTD. (BFZ1-BFZ-01), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL – SHAMGARH, DISTRICT – MANDSAUR, MADHYA PRADESH. - 458883 PH :9977703139.

**SHIVPURI**

1325. PREM MOTORS PVT. LTD. (3003-3U-04), A B ROAD, SIVPURI., - 473551 PH :9926809976.

**SHUJALPUR**

1326. UNITARA (BGP2-BGP-01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P - 465333 - 465333 PH :9770018283.

**SHYAMPUR**

1327. DAGA MOTORS (SJK1-SJK-01), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT – SEHORE, MADHYA PRADESH - 466651. - 466651 PH :9752880210.

**SIDHI**

1328. CITY CARS (UNIT OF AGARWAL WHEELS) (BKM1-BKM-01), ADHIYAR KHOSH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. - 486661 PH :9754301199.

**SIHORA**

1329. SHUBH MOTORS PVT. LTD. (CIG1-CIG-01), KHASRA NO. 31/1, P.H. – 11, MOUZA – GHAT SIMARIYA, TEHSIL – SIHORA, DISTRICT – JABALPUR, MADHYA PRADESH. - 483440 PH :9755580253.

**SIMROL**

1330. RUKMANI MOTORS (BZV2-BZV-01), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020 PH :9109978301.

**SINGHOLI**

1331. PATEL MOTORS (SEQ1-SEQ-01), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP – 458228 - 458228 PH :9977703907.

**SIRONJ**

1332. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CVM1-CVM-01), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228 PH :9826333501.

**SITAMAU**

1333. PATEL MOTORS (SLL1-SLL-01), MAUKHEDA, TEHSIL - SITAMAU, DISTRICT - MANDAU, MADHYA PRADESH - 458990 - 458990 PH :9977703139.

**TARANA**

1334. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHQ2-CHQ-01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH. - 456665 PH :9893563031/9755512100.

**TENDUKHEDA**

1335. STANDARD AUTO AGENCIES (CRC1-CRC-01), KHASARA NO. 49/6, MOUZA – TENDUKHEDA, DISTRICT – NARSINGHPUR. - 470880 PH :7771003374.

**THIKRI**

1336. NIMAR CAR (SED1-SED-01), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH –451660. - 451660 PH :9109202186.

**TIKAMGARH**

1337. ADINATH CARS PRIVATE LIMITED (RE02-RE-01), NEAR MAU CHUNGI NAKA, TIKAMGARH (M.P.) - 472001 PH :9009987440.

**UDAIPURA**

1338. JEEWAN (SCI1-SCI-01), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770 PH :8718911777.

**UJJAIN**

1339. YUG CARS (3W03-3W-02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURAH, INDIRA NAGAR, UJJAIN, MADHYA PRADESH. - 456001 PH :9755512100, 7024235298.

1340. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (3W03-3W-01), SURVEY NO. 59/3, DEWAS ROAD, UJJAIN - 456010 PH :9755512100, 7869911945.

**UMARIA**

1341. SHUBH MOTORS (5403-BVY-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH :9755505888.

**VIDISHA**

1342. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AY02-AY-01), PLOT NO 59/1, VILLAGE RANGAI, VIDISHA, MADHYA PRADESH - 464001 PH :9109900374.

**VIDISHA**

1343. RAJRUP (AY03-AY-01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001 PH :7869755501.

**WAIDHEN**

1344. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-JJ-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI, MADHYA PRADESH - 486886 PH :9754301199.

**MAHARASHTRA**

**AHMEDNAGAR**

1345. KANKARIYA AUTOMOBILES PVT. LTD. (A501-A5-01), SARDA MILLS, SAVEDI ROAD, AHMEDNAGAR, MAHARASTRA - 414001 PH :7410024227.

1346. KANKARIYA AUTOMOBILES PVT. LTD. (A501-A5-05), MIDC, AHMEDNAGAR - 414003 PH :7447700029.

**AJARA**

1347. SAI SERVICE PRIVATE LIMITED (CIR1-CIR-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT – KOLHAPUR. - 416505 PH :7776837717, 9673331977.

**AKLUJ**

1348. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-RU-04), PLOT NO. 15/3-A, PANCHVATI STOP, MALINAGAR ROAD, AKLUJ - 413101 PH :0217-223033/8805986848.

**AKOLA**

1349. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-F1-01), TIRUPATI CHAMBERS, CONVENT ROAD, AKOLA - 444005 PH :9767892552/9112220551.

1350. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-F1-02), PLOT NO E/12-13-MIDC PHASE-2, AKOLA. - 444001 PH :9767892552/9112220551.

**ALEPHATA**

1351. THE KOTHARI WHEELS (CSZ1-CSZ-01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, A/P – ALEPHATA, TALUKA – JUNNAR, DISTT. PUNE, PIN-412411 - 412411 PH :8421753278.

**ALIBAUG**

1352. SIMRAN MOTORS PVT. LTD. (7S01-3X-05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE – VESHVI, ALIBAUG, DISTRICT – RAIGAD, MAHARASHTRA - 402201 PH :9223161512, 9270888786.

**AMALNER**

1353. MANRAJ MOTORS (EL01-EL-01), PRASAD MOTORS, RAVI NAGAR, NEAR NAYARA PETROL PUMP, DHULE ROAD, AMALNER, DIST. JALGAON-425401. - 425401 PH :#REF1.

**AMBERNATH**

1354. AHER AUTOPRIME LLP (COP1-COP1-01), PLOT NO-24.26.27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE – KOHOJ, KHUNTAVLI, AMBERNATH - 421501 PH :8422871720.

**AMRAVATI**



## Dealer Workshop (AS ON 30.05.2023 )

1355. ASPA BANDSONS AUTO PVT. LTD. (F201-F2-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA , - 444607 PH :9423123665.
1356. ASPA BANDSONS AUTO PVT. LTD. (F201-F2-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA - 444607 PH :9423339601.

### APTA

1357. K.T.S. AUTOMOTORS PVT. LTD. (0582-7S-01), VILLAGE-APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207 PH :9420611356/94206611326.

### AURANGABAD

1358. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH :9158000046.
1359. PAGARIYA AUTO PVT. LTD. (2103-21-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD - 431005 PH :02406659902.
1360. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-21-03), C-27,MIDC, CHIKALTHANA , N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006 PH :9158000059.
1361. PAGARIYA AUTO PVT. LTD. (2103-21-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005 PH :9860999484/9860999468.
1362. PAGARIYA AUTO PVT. LTD. (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001 PH :8408886768/7387279311.

### BADLAPUR

1363. PRAKASH AUTO PVT. LTD. (9001-90-01), SHOP NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA WATER SUPPLY, OPP. INDIAN OIL PETROL PUMP, MIDC ROAD, KATRAP, BADLAPUR (EAST) - 421503 PH :8655791288/9870453155.

### BALLARPUR

1364. TRISTAR CARS (H302-ZH-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701 PH :7447473304.

### BARAMATI

1365. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-7R-01), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102 PH :9881370310.

### BARSHI

1366. CHAVAN MOTORS DIVISION INDIA PVT LTD (BBA1-BBA-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401 PH :8378983726.

### BEED

1367. PAGARIYA AUTO PVT. LTD. (V602-V6-01), GUT NO. 61, VILLAGE – GHOSAPURI, TALUKA AND DISTRICT – BEED, MAHARASHTRA . - 431122 PH :9834161614/02442256058/02442256056/02442256057/.

### BHANDARA

1368. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-FG-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904 PH :7030932330/9673004280.

### BHOR

1369. SEHGAL AUTORIDERS PVT. LTD. (BSV1-BSV-01), GUT NO. 929/1, TUTTROLI, BHOR, TALUKA – BHOR, DISTRICT – PUNE, MAHARASHTRA - 412206 PH :9527771016.

### BOISAR

1370. SHIVAM AUTO ZONE (ES02-ES-01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARASHTRA - 401501 PH :8082551155.

### BRAMHAPURI

1371. TRISTAR CARS PVT LTD (H302-TW-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDRAPUR, MAHARASHTRA - 441206 PH :7745883000.

### BULDHANA

1372. MANRAJ MOTORS PVT LTD (COU1-COU-01), GAT NO. 94, PLOT NO. 11, SUNDERKHED, BULDHANA, MAHARASHTRA. - 443 001 PH :7875051521.

### CHALISGAON

1373. MANRAJ MOTORS PVT LTD (AAE1-AAE-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA. - 424101 PH :8408889861.

### CHANDGAD

1374. SAI SERVICE PRIVATE LIMITED (BTF1-BTF-01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA. - 416507 PH :9673339103.

### CHANDRAPUR

1375. TRISTAR CARS PVT LTD (H302-H3-01), NR. HOTEL KUNDAN PLAZA NAGPUR ROAD,CHANDRAPUR - 442401 PH :7722068612.

1376. TRISTAR CARS PVT LTD (H302-H3-03), NAGPUR ROAD, CHANDRAPUR - 442401 PH :7722068603.

### CHIPLUN

1377. JAGRUT MOTORS PVT LTD (9A01-9A-01), SURVEY NO-543, NH-17, MUMBAI-GOIA HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605 PH :7083687172/8308917693.

### DAHANU

1378. SAI SERVICE PRIVATE LIMITED (V901-TD-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602 PH :9730302821/9167980005/9594952211.

### DAPOLI

1379. JAGRUT MOTORS PVT LTD (G301-VG-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI.DIST RATANAGIRI. - 415712 PH :8308816572/7447752372.

### DHAMANGAON

1380. ASPA (SFZ1-SFZ-01), RAMDEVBABA NAGAR, ANJANISINGH ROAD, DHAMANGAON RAILWAY, DIST- AMRAVATI - 444709 PH :9850333558.

### DHULE

1381. SEVA AUTOMOTIVE LTD. (P301-P3-01), GATE NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE - 424001 PH :02562-281128/29.

### DINDORI

1382. AUTOMOTIVE MANUFACTURERS PVT. LTD. (AAF1-AAF-01), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK- 422202 PH :9673003132 / 9673006390.

### DOMBIVALI

1383. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-JS-02), PLOT NO. B-43, PHASE-1,DOMBIVALI INDUSTRIAL AREA, DOMBIVALI,DISTT-THANE, MAHARASHTRA, - 421201 PH :8879050913/9769206095/9769206101.
1384. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-JS-02), SURVEY NO.13, NEAR PIMPLESHWAR TEMPLE, OPP. MAHANAGAR CNG PUMP, KALYAN-SHILPHATA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. - 421203 PH :8422800740, 8422978490.

### GADCHIROLI

1385. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (ZK02-ZK-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARASTRA - 442702 PH :8669929188.

### GADINGALAJ

1386. SAI SERVICE PRIVATE LIMITED (3802-DB-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502 PH :02327-222239.

### GONDIA

1387. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-4C-02), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601 PH :8888837023/8888859487.
1388. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-4C-03), ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441 601 PH :8888837023/8888859487.

### GUHAGAR

1389. JAGRUT MOTORS PVT LTD (BJV1-BJV-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGHAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703 PH :7218548798/7447752072.

### HINGANGHAT

1390. SEVA AUTOMOTIVE PVT. LTD. (CDZ1-CDZ-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK – HINGANGHAT, DISTRICT – WARDHA, MAHARASHTRA. - 442301 PH :7722067843.

### HINGOLI

1391. PAGARIYA AUTO PVT. LTD. (IF03-IF-01), PLOT NO.5,7 & 8, SURVEY NO.29/2, AKOLA BY PASS ROAD, HINGOLI. - 431513 PH :8411961177.

### HUPARI

1392. SAI SERVICE PRIVATE LIMITED (CIQ1-CIQ-01), GAT NO.925/8K/2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT – KOLHAPUR. - 416203 PH :9923208454.

### ICHALKARANJI

1393. SAI SERVICE PRIVATE LIMITED (4D01-4D-01), GATE NO. 107,KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122 PH :0230-2425282.

### INDAPUR

**Dealer Workshop (AS ON 30.05.2023 )**

1394. MAHALAXMI AUTOMOTIVES PVT. LTD.  
(7R01-NQ-02), STATE HIGHWAY NO. 151,  
INDAPUR - 412219  
PH :8308807314.

**ISLAMPUR**

1395. CHOWGULE INDUSTRIES PVT. LTD.  
(PJ02-PJ-01), GATE NO.905/A/3, NEAR BOMBAY  
RAYAN, PUNE-BANGALOE HIGHWAY (NH-4),  
ISLAMPUR TALUKA : WALVA, DIST:SANGLI -  
415409  
PH :02342-225757.

**JALGAON**

1396. MANRAJ MOTORS PVT LTD (C401-C4-01),  
AJINTA ROAD, MIDC INDL AREA, JALGAON -  
425003  
PH :9423969538.

**JALNA**

1397. AUTOMOTIVE MANUFACTURERS PVT. LTD.  
(2102-BC-02), PLOT NO. 4 & 5, CTS NO.  
11427/4-A, BALAJI COMPLEX,  
JALNA-AURANGABAD ROAD, JALNA, - 431203  
PH :9158000063.

**JATH**

1398. CHOWGULE INDUSTRIES PVT. LTD.  
(J102-BLX-05), PLOT NO. 12, SAWANT ESTATE,  
MORE COLONY, OPP. CATTLE BAZAR, SATARA  
ROAD, JATH, DISTRICT SANGLI,  
MAHARASHTRA - 416404  
PH :02344-246598.  
1399. SIDHI WHEELS (BLX1-BLX-01), GAT NO- 27/1B,  
POST-RAMPUR, JATH-SANGLI ROAD, TALUKA-  
JATH, DISTRICT-SANGLI - 416404  
PH :8956454526.

**JAYSINGPUR**

1400. SAI SERVICE PRIVATE LIMITED (ASA1-ASA-01),  
GATE NO. 1239, NEAR ACHRYA TULSI BLOOD  
BANK, A/P UDGAON(JAYSINGHPUR),  
TALUKA:SHIROL, DIST: KOLHAPUR - 416134  
PH :9673339762.

**JEJURI**

1401. EXCELL AUTO VISTA (SKY1-SKY-01), GAT NO -  
224, AT POST-SAKURDE, JEJURI,  
TALUKA-PURANDHAR, DISTRICT-PUNE,  
PIN-412303. - 412303  
PH :9146052651.

**KALWAN**

1402. SHAAN CARS PRIVATE LIMITED  
(BNW1-BNW-01), GAT NO. 189, PLOT NO. 7,  
MALEGAON ROAD, A/P KALWAN, NASHIK. -  
423501  
PH :9075028780, 9689003988.

**KALYAN**

1403. AHER AUTOPRIME LLP (CFV1-CFV-01), SURVEY  
NO.53 & 54, HIND MILL, OPPOSITE STATE BANK  
OF INDIA, ANDHARWADI ROAD, KALYAN,  
MUMBAI - 421301  
PH :9819705444/8657402204/9769927505.

1404. AHER AUTOPRIME LLP (CFV1-CFV-02), SURVEY  
NO.31B,MOHANE ROAD ,NEAR SHAHAD  
RAILWAY STATION,SHAHAD,KALYAN. - 421103  
PH :8422871720/8657402204/9833993076.

**KANKAVALI**

1405. JAGRUT MOTORS PVT LTD (G301-V7-05), PLOT  
NO.32-33,SURVEY NO.-1886/1,,MUMBAI-GOA  
HIGHWAY  
(NH-17),JANAVLI,KANKAVLI,MAHARASHTRA -  
416002  
PH :7499051071/9021095805.

**KARAD**

1406. CHOWGULE INDUSTRIES PVT. LTD.  
(F303-4E-02), 112/3, PUNE-BANGALORE ROAD,  
NEAR RELIANCE GAS PUMP, A/P MALKAPUR,  
TAL. KARAD, DISTT. SATARA - 415110  
PH :9922569835.

**KARJAT**

1407. SIMRAN MOTORS PVT. LTD. (7S01-TA-03),  
PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD  
- 410201  
PH :8691988895, 8108181978.  
1408. KANKARIYA AUTOMOBILES PVT. LTD.  
(GJV1-GJV-01), KARJAT-NAGAR ROAD, KARJAT,  
MAHARASHTRA - 414402  
PH :9890843771.

**KARMAD**

1409. PAGARIYA (CEB1-CEB-01), GAT NO-245, BHAKTI  
COMPLEX, BEHIND BHARAT PETROL PUMP,  
AURANGABAD ROAD, KARMAD - 431007. -  
431007  
PH :7575077181 / 9687668929.

**KARMALA**

1410. CHAVAN MOTORS DIVISION INDIA PVT LTD  
(GJQ1-GJQ-01), GAT NO. 105, SURVEY NO.  
3961, KARMALA-NAGAR ROAD, A/P- KARMALA,  
TALUKA - KARMALA, DIST.-SOLAPUR. - 413202  
PH :8806665691.

**KAVATE MAHANKAL**

1411. CHOWGULE INDUSTRIES PVT. LTD.  
(SC02-SC-01), MAHANKALI BAAZAR, KAVATE  
MAHANKAL-JAT ROAD, KAVATE MAHANKAL,  
SANGLI, MAHARASHTRA - 416405  
PH :02341-222102.

**KHAMGAON**

1412. MANRAJ MOTORS PVT LTD (BXU1-BXU-01), GAT  
NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT  
PETROL PUMP, AKOLA ROAD, KHAMGAON ,  
MAHARASHTRA - 444303  
PH :07623-250002/3.

**KHANAPUR (SANGLI)**

1413. CHOWGULE INDUSTRIES LTD (SNM1-SNM-01),  
KHANAPUR VITA ROAD, KHANAPUR,  
TAL-KHANAPUR, DIST-SANGLI - 415307  
PH :75079 66715.

**KHARGHAR**

1414. EXCELL AUTOVISTA PVT LTD (AAC1-AAC-01),  
SURVEY NO.742/439, KOPRA VILLAGE,  
SECTOR-10, SION-PANVEL HIGHWAY,  
KHARGHAR, DIST. RAIGAD - 410210  
PH :7666703636 / 9594153308 / 8422991300 /  
9320357300.

**KHED**

1415. JAGRUT MOTORS (COR1-COR-01), GAT NO -  
43/B, MAUZA-BHARNE NAKA, TALUKA-KHED,  
DIST-RATNAGIRI. - 415709  
PH :9689533472.

**KHOPOLI**

1416. KIRAN MOTORS (9C02-9C-01), PLOT NO-68,  
VILLAGE-MULGAON, KHOPOLI INDUSTRIAL  
ESTATE, KHOPOLI, TALUKA-KHALAPUR  
DIST-RAIGARH - 410204  
PH :8976791922, 8976791920.

**KOLHAPUR**

1417. SAI SERVICE PRIVATE LIMITED (3802-38-01),  
PLOT NO. 1, E WARD, BEHIND PARVATI  
TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR -  
416008  
PH :0231-2661676.  
1418. SAI SERVICE PRIVATE LIMITED (3803-38-01),  
C-6, SHIROLI MIDC, MENON OPP MENON  
PISTONS,NH-4, KOLHAPUR - 416122  
PH :0230-2468376.  
1419. SAI SERVICE PRIVATE LIMITED (3802-38-06), R  
S NO. 1018/1, PLOT NO. 28, APATE NAGAR,  
KALAMBA RING ROAD, KOLHAPUR,  
MAHARASHTRA. - 416012  
PH :0231-2329494.  
1420. KR MOTORS KOLKOHUR PVT LTD (3804-38-01),  
PLOT NO. 216/2, 216/3, 216/5, MUMBAI  
BANGALORE HIGHWAY., GOKUL SHIRGAON,  
KOLHAPUR. - 416234  
PH :7447755586, 7447755504.

**KONGAON**

1421. PRAKASH AUTO PVT. LTD. (3903-AZ-02),  
SURVEY NO.126/127.98/38,AT & POST  
KONGAON, - 421302  
PH :9702809668/9870453155.

**KOPARGAON**

1422. SHAAN CARS PRIVATE LIMITED (COV1-COV-01),  
SURVEY NO. 15/36 GAWARE PATIL ESTATE,  
NAGAR MANMAD HIGHWAY, NEAR ASHOKA  
HOTEL, KOPARGAON. - 423 601  
PH :9075028780.

**KOREGAON BHIMA**

1423. SAI SERVICE (BUO1-BUO-01), GAT NO-373,  
VILLAGE-KOREGAON BHIMA, TALUKA-SHIRUR,  
DIST-PUNE. - 415501  
PH :7774997005.

**KUDAL**

1424. JAGRUT MOTORS PVT LTD (9B01-9B-01),  
SURVEY NO. 50/5, 51/5, A/P PINGULI,  
TEMBDHURI, TALUKA – KUDAL, DISTRICT –  
SINDUDURG, MAHARASHTRA. - 416520  
PH :8806664572/8208965235.

**KURUDWADI**

1425. CHAVAN MOTORS DIVISION INDIA PVT LTD  
(CUF1-CUF-01), GAT NO.:256, BYPASS ROAD,  
A/P KURDA, TALUKA-MADHA, DISTT. SOLAPUR.  
- 413208  
PH :8806665691.

**KURUNDWAD**

1426. SAI SERVICE PVT. LTD. (BHO1-BHO-01), GAT  
NO. 250, AT POST - KURUNDWAD, TALUKA -  
SHUROO, DIST.-KOLHAPUR. - 416106  
PH :9673339695.

**LANJA**

1427. JAGRUT MOTORS (SER1-SER-01), GAT NO-663,  
TALUKA-LANJA, DIST - RATNAGIRI,  
MAHARASHTRA -416701 - 416701  
PH :8108718346.

**LASALGAON**

1428. SHAAN CARS PRIVATE LIMITED (BZM1-BZM-01),  
PLOT NO. 337, LASALGAON MAIN ROAD,  
LASALGAON, TALUKA – NANDGAON, DISTRICT  
– NASHIK. - 422306  
PH :9075028780, 7720094874.

**LATUR**

1429. AUTOMOTIVE MANUFACTURERS PVT. LTD.  
(V801-V8-01), CITY SURVEY NO. 2960, NANDED  
ROAD, OPP. TIRUPATHI LODGE, LATUR -  
413512  
PH :9607999095.  
1430. AUTOMOTIVE MANUFACTURERS PVT. LTD.  
(V801-V8-02), PLOT NO. 28, 29, 30, SURVEY NO.  
36, VARVATTI VILLAGE, LATUR - BARSHI ROAD,  
LATUR - 413512  
PH  
:9607999091/9607999092/9607999093/9607999094  
/9607999007.

**LONAVALA**

1431. SEHGAL AUTORIDERS PVT. LTD.  
(CGA1-CGA-01), GATE NO. 120/1, VILLAGE –  
WAKSAI, TALUKA – MAVAL, LUNAVALA,  
DISTRICT – PUNE, MAHARASHTRA. - 410405  
PH :89753 73431.

**MAHAD**

## Dealer Workshop (AS ON 30.05.2023 )

1432. SIMRAN MOTORS PVT. LTD. (7S01-TX-04), NEAR RELIANCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301  
PH :9870404323.

### MALEGAON

1433. SHAAN CARS PRIVATE LIMITED (3703-FF-02), PLOT NO. 572/81, CHANDANPURI SHIVAR, OLD MUMBAI, AGRA ROAD, DIST- NASIK, MALEGAON - 423203  
PH :9922969620/9922969656.

### MANCHAR

1434. THE KOTHARI WHEELS (1906-AGA-04), SOHAM NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, A/P MANCHAR, TALUKA: AMBEGAON, DISTT: PUNE, MAHARASHTRA - 410503  
PH :8411003608.

### MANGALVEDHA

1435. CHAVAN MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NEAR SWARAJYA HOTEL, PANDHARPUR ROAD, CHOKAMELANAGAR, MANGALVEDHA, MAHARASHTRA, PIN-413305 - 413305  
PH :8805778881.

### MANGAON

1436. SIMRAN MOTORS PVT. LTD. (BAM1-BAM-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHARASHTRA - 402104  
PH :9223181120.

### MANMAD

1437. SHAAN CARS PRIVATE LIMITED (BNX1-BNX-01), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104  
PH :9075028780, 8888832369.

### MANOR

1438. SAI SERVICE PRIVATE LIMITED (CRE1-CRE-01), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST – TAKVAHAL, DISTRICT – PALGHAR, MANOR. - 401403  
PH :9167980005.

### MIRA ROAD, THANE

1439. SUPREME AUTOMOBILES (3915-39-01), BRILLIANT COMPLEX, WESTERN EXPRESS HIGHWAY, MIRA ROAD, THANE- 401107. - 401107  
PH :8591942704.

### MIRAJ

1440. CHOWGULE INDUSTRIES PVT. LTD. (J102-SD-03), 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410  
PH :0233-2643221, 0233-264322.

### MORGAON

1441. MAHALAXMI AUTO (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), GAT NO-179, MORGAON, - TALUKA- BARAMATI, DIST-PUNE - 412304  
PH :9850994014.

### MUMBAI

1442. SAI SERVICE PRIVATE LIMITED (0504-05-01), 462 SENAPATI BAPAT MARG, WORLI NAKA, LOWER PAREL, MUMBAI - 400013  
PH :9594952122/9594952088/9167980082.

1443. SAI SERVICE PRIVATE LIMITED (0504-05-02), ARVIND CHAMBERS, 194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069  
PH :43030606 /600, 95949552341 / 9594952084 / 9594952250.

1444. VITESSE PRIVATE LIMITED (0503-05-01), SHAH INDL. ESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058  
PH :02226730787/02226730280/02226730296/02261642500/02261642500.

1445. VITESSE PRIVATE LIMITED (0503-05-02), 77 AF PALKY GULLY, OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025  
PH :24229747/24223933/9821894915.

1446. SAH & SANGHI AUTO AGENCIES PVT. LTD (0505-05-01), PRAKASH MILLS COMPOUND, OFF. GLOBE MILLS PASSAGE, WORLI, MUMBAI - 400013  
PH :02224925452/02224925453/02224925454.

1447. SAI SERVICE PRIVATE LIMITED (0504-05-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND, DATTI PADA ROAD, BORIVILI (EAST), MUMBAI - 400066  
PH :28707000 / 9594057006 / 9594952344 / 9594952417.

1448. EXCELL AUTOVISTA PVT LTD (0510-05-01), RESHAM SINGH COMPOUND, CST ROAD, KALINA, SANTACRUZ EAST, MUMBAI - 400098  
PH :67743888, 26653242, 43, 46 / 7666703636 / 9594972889 / 7715804477.

1449. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-05-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMBAI - 400070  
PH :61563734 / 61563744 / 61563713 / 9167773925.

1450. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEPEZ, MIDC, ANDHERI, MUMBAI - 400096  
PH :9694973889, 8422800747.

1451. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA - 400067  
PH :7718893072/9152001329/8082551017/9870938888.

1452. VITESSE PRIVATE LIMITED (0503-05-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067  
PH :02228674753.

1453. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-03), C/O VARUN STEEL INDUSTRIES, AAM TOOL COMPOUND, BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI - 400010  
PH :9594974678, 8691045341.

1454. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-02), PLOT NO. 485, RAMCHANDRA LANE EXTN., OFF LINK ROAD, KANCHHPADA, MALAD-WEST, MUMBAI. 400064. - 400064  
PH :8082551115/9362721124/9870938888.

1455. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-05-01), PLOT NO.115/116/117 MIVERVA INDUSTRIAL ESTATE, MULUND-WEST, MUMBAI - 400080  
PH :8104989839/8104989847.

1456. KIRAN MOTORS (05A7-05-01), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, GHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086. - 400086  
PH :9152004223/7700988886.

1457. MY CAR (PUNE) PVT LTD (05A8-05-01), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072  
PH :8104907081.

### MURBAD

1458. PRAKASH AUTO PVT. LTD. (BYO1-BYO-01), SURVEY NO. 61/2, KALYAN - MURBAD ROAD, VILLAGE – DAHAGAON, TALUKA – MURBAD, DISTRICT – THANE, MAHARASHTRA. - 421605  
PH :7798725726.

### MURGUD

1459. SAI SERVICE PRIVATE LIMITED (AWA1-AWA-01), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219  
PH :02325-265553.

### MURTIZAPUR

1460. KHANDELWAL AUTOWHEELS (SHE1-SHE-01), SURVEY NO 38, MAUJA SONORI, NH 06, NEAR HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA - 444107  
PH :#REF!.

### NAGPUR

1461. SEVA AUTOMOTIVE LTD. (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR - 440023  
PH :0712-6652863.

1462. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-20-02), 575 KAMPTEE ROAD, NAGPUR -26., - 440026  
PH :9673004226/9673004223.

1463. SEVA AUTOMOTIVE LTD. (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, - 440016  
PH :0712-666444.

1464. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD, NAGPUR - 440035  
PH :8888859506/8888859534.

1465. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001  
PH :9168699701/9673004277.

1466. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2007-20-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASHTRA - 440018  
PH :8888859542.

1467. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2007-20-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASHTRA. - 441202  
PH :8888820312.

1468. SEVA AUTOMOTIVE PVT. LTD. (2002-20-04), PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED, KH NO.45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027  
PH :8390446644.

1469. ARUN MOTORS (2008-20-01), PLOT NO-9&10, PATNI PLAZA, KHAMLA RING ROAD, SAWARKAR NAGAR, NAGPUR, MAHARASHTRA - 440025  
PH :7757988800/7028688800.

1470. ARUN MOTORS (2008-20-02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028  
PH :7757988800.

### NALASOPARA

1471. SHIVAM AUTO (CUH1-CUH-01), SURVEY NO. 91, 92, PLOT NO. 7, VILLAGE- DHANIV, NALASOPARA, DIST. PALGHAR, MAHARASHTRA. - 401209  
PH :9152001458/7777002930.

### NANDED

1472. SEVA AUTOMOTIVE LTD. (6801-68-01), NANDED HYDERABAD ROAD, NANDED - 431604  
PH :7447415607.

**Dealer Workshop (AS ON 30.05.2023 )**

**NANDURBAR**

1473. SEVA AUTOMOTIVE LTD. (P301-KW-02), P NO. -324, BASILAL NAGAR SHAHADA BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFULLY NANDURBAR-425412 - 425412 PH :7720017528.

**NARAYANGAON**

1474. THE KOTHARI WHEELS (1906-FV-02), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :8411003608.

**NASHIK**

1475. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3702-37-01), P-1-12 ADDITIONAL NASIK INDL. AREA, AMBAD NASIK - 422010 PH :9673000262 / 9673000822 / 9673000842.  
1476. SEVA AUTOMOTIVE LTD. (3701-37-01), PLOT NO. X - 46, MIDC. AMBAD, NASIK - 422010 PH :0253-6644444.  
1477. SHAAN CARS PRIVATE LIMITED (3703-37-01), E-3 MIDC AREA, SATPUR, NASIK, MAHARASHTRA - 422007 PH :9075028780, 9922969646.  
1478. SHAAN CARS PRIVATE LIMITED (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011 PH :0253-2236080.  
1479. SEVA AUTOMOTIVE LTD. (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH :9146000709.  
1480. SEVA AUTOMOTIVE PVT LTD (3701-37-07), PLOT NO. A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006 PH :0253-6634444.  
1481. SEVA AUTOMOTIVES PVT LTD (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH :0253-6654444.

**NAVI MUMBAI**

1482. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA, SHIRVANE NERUL, NEW BOMBAY, - 400706 PH :66143900/66133923/66143924.  
1483. SIMRAN MOTORS PVT. LTD. (3913-9K-01), CAMEO FABRIC COMPANY, GEN 16, NEAR SULZER COMPANY, DIGHA, TTC AREA, AIROLI - 400701 PH :8788582329, 8369658212.

**NEVASA**

1484. KANKARIYA AUTOMOBILES PVT. LTD. (BSU1-BSU-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA - NEVASA, DISTRICT - AHMEDNAGAR. - 414603 PH :9420494601.

**NIPHAD**

1485. SHAAN CARS PVT. LTD. (COX1-COX-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT - NASHIK, MAHARASHTRA. - 422303 PH :9075028780.

**OSMANABAD**

1486. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-LW-03), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501 PH :8888867861.

**PABAL**

1487. MAHALAXMI (SKB1-SKB-01), 3733, SHINALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403 PH :8956288087.

**PAITHAN**

1488. PAGARIYA AUTO PVT. LTD. (BNQ1-BNQ-01), GAT NO-277, MAUZA- PAITHAN, TALUKA- PAITHAN, DIST - AURANGABAD 431107. - 431107 PH :9922994237.

**PALGHAR**

1489. SAI SERVICE PRIVATE LIMITED (TE01-TE-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404 PH :9167980042/9167980005/9594952211.

**PALUS**

1490. CHOWGULE INDUSTRIES PVT. LTD. (J102-OZ-04), PLOT NO B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308 PH :8888870122.

**PANDHARPUR**

1491. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-0H-05), GAT NO.56, ESABAVI, PUNE ROAD, TAL.PANDERPUR, SOLAPUR - 413001 PH :7774997005.

**PANVEL**

1492. SIMRAN MOTORS PVT. LTD. (7S01-7S-01), PLOT2-8, SECTOR-15, OPP. HOTEL GARDEN, OLD MUMBAI PUNE HIGHWAY, PANVEL - 410206 PH :8291957798, 8657443202.

1493. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-7S-03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206 PH :9769202055/9769206045/9769206018/8291467042 .

**PARATWADA**

1494. ASPA BANDSONS AUTO PVT. LTD. (CFZ1-CFZ-01), SURVEY NO. 264A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA - ACHALPUR, DISTRICT - AMRAVATI . - 444 805 PH :7720097106.

**PARBHANI**

1495. PAGARIYA AUTO PVT. LTD. (LN02-LN-01), SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI - 431401 PH :9511868433.

**PATAS**

1496. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-PR-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH :8888890957.

**PEN**

1497. SIMRAN MOTORS (9I01-9I-01), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107 PH :9503381198.

**PHALTAN**

1498. CHOWGULE INDUSTRIES PVT. LTD. (KH02-KH-01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA-PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523 PH :8888886301.

**PIMPLEGAON**

1499. AUTOMOTIVE MANUFACTURERS PVT. LTD. (BAY1-BAY-01), GAT NO 517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202 PH :9673000844 / 9673001204.

**PIRANGUT**

1500. MY CAR (SEC1-SEC-01), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108. - 412108 PH :9325424613.

**PUNE**

1501. SAI SERVICE PRIVATE LIMITED (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012 PH :020-46404440/020-46404448.

1502. SAI SERVICE PRIVATE LIMITED (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004 PH :9923208347.

1503. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-02), S.NO. 53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046 PH :020-66786200.

1504. SAI SERVICE PRIVATE LIMITED (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH :9923208345.

1505. WONDER CARS PVT LTD (1903-19-02), 12, NPS LINES,SOLAPUR ROAD,OLD POOL GATE,CAMP, PUNE - 411001 PH :020-26332934/35.

1506. THE KOTHARI WHEELS (1906-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH :7498272309.

1507. MY CAR (PUNE) PVT. LTD. (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057 PH :020-67922900.

1508. ACE KUDALE CAR PVT. LTD. (1910-19-01), 36/2C/1, MANJRI BUDRUK, PUNE-SOLHAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE - 412201 PH :9552582454.

1509. CHOWGULE INDUSTRIES PVT. LTD. (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046 PH :02066803555/02066803500.

1510. SAI SERVICE PRIVATE LIMITED (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019 PH :020-46605999/020-46605995.

1511. SEHGAL AUTORIDERS PVT. LTD. (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021 PH :8308304444, 020-41463625, 020-41463627.

1512. SAI SERVICE PRIVATE LIMITED (1901-19-06), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057 PH :9923208302.

1513. ACE KUDALE CAR PVT. LTD. (1910-19-02), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMAL, BHOSARI, PUNE. - 411039 PH :9552193904.

1514. THE KOTHARI WHEELS (1906-19-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019 PH :9168662302.

Dealer Workshop (AS ON 30.05.2023 )			
1515.	MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH :8888874980.	1526.	SUMANKIRTI CARS PVT. LTD. (1915-19-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH :8551990106.
1516.	WONDER CARS PVT LTD (1903-19-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. - 411018 PH :020-46608888.	1527.	MY CAR (PUNE) PVT. LTD. (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE – KURULI, TALUKA – KHED, CHAKAN, DISTRICT – PUNE. - 410501 PH :7755900000.
1517.	SAI SERVICE PRIVATE LIMITED (1901-19-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. - 411048 PH :9923208358.	1528.	WONDER CARS PVT LTD (1903-19-04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA – MULSHI, DANGE CHOWK, PUNE – 411 033. - 411033 PH :7887883311.
1518.	MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-04), NO.485/1, CTS NO. 1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016 PH :8888842887.	<b>RAHATA</b>	
1519.	CHOWGULE INDUSTRIES PVT. LTD. (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL.MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033 PH :020-67915700/7385265700.	1529.	KANKARIYA AUTOMOBILES PVT. LTD. (ZV03-ZV-01), SHIRDI ROAD, SAKORI, RAHATA, - 423107 PH :8275033313.
1520.	SAI SERVICE PRIVATE LIMITED (1901-19-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT - PUNE, MAHARASHTRA. - 411 041 PH :9923208312.	<b>RAHURI</b>	
1521.	THE KOTHARI WHEELS (1906-19-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028 PH :8411002005, 8087060432.	1530.	KANKARIYA AUTOMOBILES PVT. LTD. (COZ1-COZ-01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH :9130026767.
1522.	CHOWGULE INDUSTRIES PVT. LTD. (1908-19-06), SR. NO. - 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE- SATARA ROAD, PUNE. - 411009 PH :020-67273200.	<b>RAJAPUR</b>	
1523.	EXCELL AUTOVISTA PVT LTD (1917-19-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST PUNE. - 412308 PH :9594632888/9146052651.	1531.	JAGRUT MOTORS PVT LTD (AHA1-AHA-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702 PH :9527623663/8806665572.
1524.	THE KOTHARI WHEELS (1906-19-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH :8411003631.	<b>RAJGURUNAGAR</b>	
1525.	ACE KUDALE CAR PVT. LTD. (1910-19-03), SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA – HAVELI, DISTRICT – PUNE. - 412105 PH :7767814381.	1532.	MY CAR (PUNE) PVT. LTD. (CBZ1-CBZ-01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH :9112231553.
		<b>RATNAGIRI</b>	
		1533.	JAGRUT MOTORS PVT LTD (G301-G3-01), D-25 ,MIDC MIRJOLE,MAHARASTRA,RATNAGIRI - 415639 PH :2352228380/9130013172.
		<b>ROHA</b>	
		1534.	EXCELL AUTOVISTA (COS1-COS-01), SHOP NO. 1 & 2, PANCHARATNA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109 PH :9209200073.
		<b>SANGAMNER</b>	
		1535.	SHAAAN CARS PRIVATE LIMITED (HE03-HE-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605 PH :02425-259197.
		<b>SANGLI</b>	
		1536.	CHOWGULE INDUSTRIES PVT. LTD. (J102-J1-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH :9850966805.
		1537.	SIDDIH WHEELS (J104-J1-01), SR NO. 917//2/B, SANGLI MIRAJ ROAD, MIRAJ, DISTRICT - SAGLI. - 416410 PH :9371727001, 0233-2211610/1620/1630.
		<b>SANGOLA</b>	
		1538.	CHAVAN MOTORS DIVISION INDIA PVT LTD (CUE1-CUE-01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA - SANGOLA, DIST.-SOLAPUR. - 413307 PH :8806665691.
		<b>SASWAD</b>	
		1539.	CHOWGULE INDUSTRIES PVT. LTD. (1908-PH-03), PLOT NO 74/2/A/P, BEHIND PURANDAR HIGH SCHOOL, BESIDE MAHADA COLONY, SASWAD, TALUKA PURANDAR, PUNE - 412301 PH :02115224450/02115225210.
		<b>SATANA</b>	
		1540.	SHAAAN CARS (BSW1-BSW-01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 - 423301 PH :9922969656.
		<b>SATARA</b>	
		1541.	CHOWGULE INDUSTRIES PVT. LTD. (F303-F3-01), PLOT NO. B-2,OLD MIDC,SATARA - 415002 PH :9011015066/9850966823.
		<b>SAVNER</b>	
		1542.	ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (BTJ1-BTJ-01), PLOT NO -2 MADANE LAYOUT MOUZA GUJARKHEDI NEAR INDIN PETROL PUMP NAGPUR ROAD SAONER - 441107 PH :8888859546.
		<b>SAWANTWADI</b>	
		1543.	JAGRUT MOTORS PVT LTD (BBL1-BBL-01), SHIVSHAMBHO APARTMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. - 416510 PH :9970654699, 9689533472.
		<b>SHAHAPUR</b>	
		1544.	SHIVAM AUTO ZONE (I) PVT. LTD. (BZU1-BZU-01), DR. DESHPANDE COMPOUND, NEAR BHATSA COLONY, VILLAGE – GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT – THANE, MAHARASHTRA - 421601 PH :7718893483.
		<b>SHAHUWADI</b>	
		1545.	SAI SERVICE (BFT1-BFT-01), GATE NO. 1213, R/AT DONOLI, TALUKA - SHAHUWADI, DIST. -KOLHAPUR - - 416 213 PH :9923208448.
		<b>SHILTPATA</b>	
		1546.	VELOX MOTORS (SGJ1-SGJ-01), SURVEY NO- 99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTI MANDIR, POST-PADALE, DIST-THANE, PIN-421204. - 421204 PH :8419984188.
		<b>SHIRUR</b>	
		1547.	MAHALAXMI AUTOMOTIVES PVT. LTD. (ZD01-ZD-01), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA - 412210 PH :8888837082 /9011038682.
		<b>SHIRWAL</b>	
		1548.	CHOWGULE INDUSTRIES PVT. LTD. (BSD1-BSD-01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH :9637399003.
		<b>SHRIRAMPUR</b>	
		1549.	KANKARIYA AUTOMOBILES PVT. LTD. (LV03-LV-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709 PH :9420494543.
		<b>SIKRAPUR</b>	
		1550.	EXCELL AUTOVISTA PVT LTD (GKJ1-GKJ-01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAUHASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PIN-412208, PUNE - 412208 PH :9146194973.
		<b>SILLOD</b>	
		1551.	PAGARIYA AUTO PVT. LTD. (2103-ZG-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213.
		<b>SINNAR</b>	
		1552.	SHAAAN CARS PRIVATE LIMITED (3703-FU-03), A-24, MIDC AREA MALEGAON,SINNAR TAL- SINNAR., - 422103 PH :02551-230305.
		<b>SOLAPUR</b>	
		1553.	CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-02), 150, AKALKOT ROAD,OPP. SVCS HIGH SCHOOL,SOLAPUR, - 413006 PH :0217-2606666/8805986818.
		1554.	CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-01), 18,39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224 PH :8805778881.

**Dealer Workshop (AS ON 30.05.2023 )**

1555. CHAVAN MOTORS DIVISION INDIA PVT LTD  
(B102-B1-06), PLOT NO.95, IND. ESTATE,  
HOTAGI ROAD, SOLAPUR. - 413003  
PH :8805986826.

**TALASARI**

1556. SHIVAM AUTO ZONE (I) PVT. LTD. (BIN1-BIN-01),  
SURVEY NO. 191/1 PLOT NO. 5, AT-POST –  
VADAVALI, NH-8, TALASARI, THANE,  
MAHARASHTRA - 401606  
PH :6355248143/7777002930.

**TALEGAON**

1557. MY CAR (PUNE) PVT. LTD. (4K01-4K-01),  
SR.NO.113, HISSA NO.1/3/2/A, MUMBAI PUNE  
OLD HIGHWAY, MAVAL, TALEGAON - 410506  
PH :9730855855.

**TALOJA**

1558. EXCELL AUTOVISTA PVT LTD (AAC1-9K-02),  
PLOT NO-9,MIDC,NAVADE.TALOJA,  
TAL-PANVEL ,DIST-RAIGAD - 410208  
PH :9136948195/9320357300.

**TASGAON**

1559. SIDDHI WHEELS (A UNIT OF TARALEKAR  
MOTORS PVT. LTD.) (GKB1-GKB-01), SHETKARI  
MARKET, NEAR ISHA HOTEL,  
TASGAON-SANGLI ROAD, TALUKA - TASGAON,  
DIST.-SANGLI. - 416312  
PH :8275030748.

**THANE**

1560. FORT POINT AUTOMOTIVE (CARS) PVT. LTD.  
(3906-39-01), KOTHARI WAREHOUSE NO.  
111,POKHRAN ROAD NO. 11,MANPADA,  
CHATALSAR,THANE - 400607  
PH :9594974656, 8691039873..

1561. NAVNEET MOTORS (3908-39-02), B R T PLOT  
,THANE (W), MAHARASHTRA - 400607  
PH :9664496732, 9167215178.

1562. VELOX MOTORS (A UNIT OF CARCRAFT  
AUTOMOBILES PVT LTD) (05A3-39-02), NEW  
SURVEY NO. 171/B, NEAR BLUE ROOF CLUB,  
VILLAGE - OWALE, GHODBUNDER ROAD,  
THANE (W). - 400615  
PH :8104989847,96536 88455.

**TITWALA**

1563. AHER AUTOPRIME (BYP2-BYP-01), SURVEY NO.  
23/2, SHOP NO. 3, NEAR GOVELI, TITWALA  
ROAD, GHOTSAI, TITWALA, PIN-421301,  
MAHARASHTRA - 421301  
PH :18008334369.

**TURBHE**

1564. SAI SERVICE (0504-9K-06), D 42, TTC  
INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 -  
400705  
PH :022-26861111/ 8976999060.

**ULHASNAGAR**

1565. PRAKASH AUTO PVT. LTD. (3903-39-01), U  
NO-3,SHEET NO. 30,VITHALWADI STATION  
ROAD, ULHASNAGAR - 421003  
PH :9987992127/9870453155.

**URALI KANCHAN**

1566. EXCELL AUTOVISTA PVT LTD (GK11-GKI-01),  
GAT NO-244, VILLAGE-SORTAPWADI, TALUKA  
-HAVELI, URULI KANCHAN, DIST-PUNE,  
PIN-412201 - 412201  
PH :9226089614.

**VADUJ**

1567. CHOWGULE INDUSTRIES PVT. LTD.  
(F303-GQ-03), KALEVASTI, VADUJ DAHIWADI  
ROAD , VADUJ - 415506  
PH :8888866659.

**VAIJAPUR**

1568. PAGARIYA AUTO PVT. LTD. (BNR1-BNR-01),  
NEAR SUBHASH BUNGLOW, STATION ROAD,  
VAIJAPUR, AURANGABAD. - 423701  
PH :9922994237.

**VASAI**

1569. SAI SERVICE PRIVATE LIMITED (V901-V9-01),  
ANDRADESH BHAVAN, SURVEY #27 A,NEAR  
UMELA PHATAK, VASAI (WEST), DIST. THANE,  
MAHARASTRA - 401202  
PH :9167980080/9167980036/9594952211.  
1570. SAI SERVICE PRIVATE LIMITED (0504-V9-03),  
C/O MR. KENNETH NICHOLAS D'SOUZA,  
SURVEY NO-89, SATIVALI ROAD,  
VILLAGE-WALIV, VASAI (EAST), DIST-PALGHAR,  
MAHARASHTRA, PIN-410208 - 401208  
PH :9167980004/9167980084/9594950000.

**VASHI**

1571. MY CAR (PUNE) PVT. LTD. (05A4-05-01), A-751/2,  
MIDC TTC, TURBHE MAHAPE ROAD, PAWANE,  
NAVI MUMBAI - - 400 071  
PH :8104906953, 9372802861, 9326713481.

**VELHE**

1572. SUMANKIRTI CARS (SLO1-SLO-01), MAUZA  
NO-492/2, A/P-VELHA, TAL- VELHA,  
DIST-PUNE-412212 - 412212  
PH :8554981603/8550995444.

**VIKRAMGADH**

1573. SHIVAM AUTOZONE (SKV1-SKV-01), NEAR  
GOVERNMMNET DISPENSARY HOSPITAL,  
DAHANU ROAD, TEHSIL-VIKRAMGADH,  
DIST-PALGHAR-401605 - 401605  
PH :#REF!.

**VIRAR**

1574. SAI SERVICE PRIVATE LIMITED (V901-PG-02),  
SURVEY NO.16, AGASHI ROAD, PADMAN  
NAGAR, VIRAR-WEST, DISTT. PALGHAR. -  
401301  
PH :9594952343/9167980036/9594952211.

**VITA**

1575. CHOWGULE INDUSTRIES PVT. LTD.  
(BSE1-BSE-01), S NO. 900, HISSA NO. 1,2,3/1/2,  
SANGLI VITA ROAD, VITA, TALUKA –  
KHANAPUR, DISTRICT – SANGLI,  
MAHARASHTRA - 415311  
PH :8888870120.

**WAGHOLI**

1576. SAI SERVICE PRIVATE LIMITED (1901-AB-04),  
GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL-  
HAVELI, DIST- PUNE - 412207  
PH :9923208313/9923208221/9923208133.

**WAI**

1577. CHOWGULE INDUSTRIES PVT. LTD.  
(BYC1-BYC-01), GAT NO. 407, A/P  
SHENDURJANE, MIDC ROAD, NEAR HOTEL  
GANDHARVA, OPP. DHOM LEFT CANAL, TAL –  
WAI, DISTT. SATARA - 412803  
PH :8380080501.

**WALUJ**

1578. PAGARIYA AUTO PVT. LTD. (2103-MC-03),  
E-16,WALUJ,AURANGABAD - 431001  
PH :9860999466.

**WARANANAGAR**

1579. SAI SERVICE PRIVATE LIMITED (CRB1-CRB-01),  
GAT NO.:1122/A, KODOLI, TALUKA: PANHALA,  
DIST. KOLHAPUR - 416114  
PH :9923204173.

**WARDHA**

1580. SEVA AUTOMOTIVE LTD. (2002-AC-02), GOPURI  
CHOWK , OPP. BANK OF INDIA COLONY,  
NAGPUR ROAD, WARDHA - 442001  
PH :07152-253545/253525.

1581. SEVA AUTOMOTIVE PVT. LTD. (2002-AC-05),  
PLOT NO. 177, WARDHA-NAGPUR HIGHWAY,  
AT. PAVNAR, TEHSIL – WARDHA, DIST.  
-WARDH, PIN-442111, MAHARASHTRA - 442111  
PH :7720009444.

**WARUD**

1582. ASPA BANDSONS AUTO PVT. LTD.  
(F201-JG-04), SURVEY NO. 50/3,  
SETURJANAGHAT ROAD, TALUKA: WARUD,  
DIST. AMRAWATI - 444906  
PH :7248925687.

**WASHIM**

1583. ASPA BANDSONS AUTO PVT. LTD. (F201-9D-02),  
NEAR RAILWAY CROSSING,HIGOLI  
ROAD,WASHIM, - 444505  
PH :9922500981/ 9146191534.

**YAVATMAL**

1584. HIMALAYA CARS (4M01-4M-01), OPPOSITE  
RAUT PETROL PUMP, DARWHA ROAD,  
YAVATMAL, MAHARASHTRA - 445001  
PH :9011014729.

**YEOLA**

1585. SEVA AUTOMOTIVES PVT LTD (BST1-BST-01),  
GAT NO. 65-A, PLOT NO. 41, AHMED  
NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE,  
YEOLA, TALUKA – YEOLA, DISTRICT – NASHIK,  
MAHARASHTRA. - 423401  
PH :9130033944.

**YEWAT**

1586. MAHALAXMI AUTOMOTIVES PVT. LTD.  
(AZA1-AZA-01), SOLAPUR PUNE NATIONAL  
HIGHWAY, SAHAJAPUR, YEWAT, TALUKA:  
DAUND, DISTT: PUNE (MAHARASHTRA). -  
412202  
PH :8308818946.

**MANIPUR**

**BISHNUPUR**

1587. EASTERN MOTORS (CSA1-CSA-01),  
BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR  
DISTT. MANIPUR. - 795126  
PH :8415945626.

**CHANDEL**

1588. EASTERN MOTORS (CSB1-CSB-01), KAKCHING  
LAMKHAJ, AH1 (INDO BURMA ROAD), CHANDEL  
(MANIPUR) - 795103  
PH :8415945626.

**CHURACHANDPUR**

1589. EASTERN MOTORS (BBE1-BBE-01), HMIUA  
VENG,TEDDIM ROAD, CHURACHANDPUR,  
MANIPUR - 795128  
PH :03874235969, 9862555472.

**IMPHAL**

1590. EASTERN MOTORS (7401-74-01),  
CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795  
001  
PH :8415945626.

1591. EASTERN MOTORS (7401-74-02), NH,39,  
CHINGMEIRONG, WEST, IMPHAL. - 795010  
PH :8415945626.

1592. SAMADON ENTERPRISE (7402-74-01), 82 GHARI  
MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795  
140  
PH :7005987123.

**JIRIBAM**

1593. EASTERN MOTORS (SMG1-SMG-01), AT  
HILGHAT, IMPHAL SILCHAR ROAD, JIRIBAM -  
788104  
PH :8415945626.

**SENAPATI**

1594. EASTERN MOTORS (CNN1-CNN-01), DIST.  
-COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI,  
SENAPATI, MANIPUR. - 795 106  
PH :8415945626.

**THOUBAL**

Dealer Workshop (AS ON 30.05.2023 )			
1595.	EASTERN MOTORS (BJL1-BJL-01), THOUBAL ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138 PH :9862662225.	1605.	BANALARI CAR WORLD (CBJ1-CBJ-01), PHLANGSHLAIN MAIN ROAD, SHILONG DAWKI, PYNURSLA, DISTRICT - EAST KHASI HILLS, MEGHALAYA - 793110 - 793110 PH :8415942700.
<b>UKHRUL</b>		<b>SHILLONG</b>	
1596.	SAMADON ENTERPRISE (SCK1-SCK-01), KAMPHASOM, UKHRUL, MANIPUR - 795142 PH :9774216305.	1606.	RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014 PH :9862099400.
<b>MEGHALAYA</b>		1607.	RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021 PH :8014734780.
<b>BHOIRYMBONG</b>		1608.	BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017 PH :7005757760/7005569550.
1597.	RANI MOTORS (CHP1-CHP-01), VILLAGE – UMROI MADAN, DISTRICT – RI BHOI, MEGHALAYA. - 793103 PH :9774478281.	<b>TURA</b>	
<b>JOWAI</b>		1609.	RANI MOTORS (CLF1-CLF-01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101 PH :7005563791.
1598.	RANI MOTORS (3I01-3I-01), LADTHADLABHO, OPP .PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150 PH :7085849525.	<b>UMSAW</b>	
<b>KHLEHRIAT</b>		1610.	BANALARI WORLD CARS (CHZ1-CHZ-01), UMSAWKHWAN RAID MAWBUH, MYLLIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. - 793123 PH :7005757760/7005569550.
1599.	BANALARI WORLD CARS (8502-PZ-03), JOWAI-SICHAR ROAD, MEGHALAYA, KHLEHRIAT - 793150 PH :7005757760/7005569550.	<b>MIZORAM</b>	
<b>MAWKYRWAT</b>		<b>AIZAWL</b>	
1600.	RANI MOTORS (CGR1-CGR-01), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGALAYA - 793114 PH :98560005544.	1611.	G.I.G. MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001 PH :8974559065.
<b>MAWNGAP</b>		<b>MP</b>	
1601.	BANALARI WORLD CARS (CBK1-CBK-01), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST.-EAST KHASI HILLS, MEGHALAYA. - 793121 PH :7005757760/7005569550.	<b>NAINPUR</b>	
<b>MYLLIEM</b>		1612.	STANDARD AUTO (SEZ1-SEZ-01), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJAJ SHOW ROOM, NAINPUR, DISST MANDLA, MADHYA PRADESH -481776. - 481776 PH :7771003374.
1602.	BANALARI WORLD CARS (CSK1-CSK-01), MADANING SYIEM, MYLLIEM, SHILLONG CHERRAPUNJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009 PH :7005757760/7005569550.	<b>NAGALAND</b>	
<b>NONGPOH</b>		<b>DIMAPUR</b>	
1603.	RANI MOTORS (8501-TN-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT. - 793102 PH :9774478281.	1613.	PROGRESSIVE MOTORS (3201-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112 PH :7005254089.
<b>NONGSTOIN</b>		<b>KOHIMA</b>	
1604.	RANI MOTORS (8501-OP-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119 PH :98560005544.	1614.	SEYIE AUTO (4N02-4N-01), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001 PH :7005867051.
<b>PYNURSLA</b>		<b>MOKOKCHUNG</b>	
		1615.	PROGRESSIVE MOTORS (CGL1-CGL-01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601 PH :87877325534.
<b>WOKHA</b>		<b>ODISHA</b>	
1616.	PROGRESSIVE MOTORS (SFH1-SFH-01), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111 PH :9774070707.	<b>ANANDAPUR</b>	
		1617.	JYOTE MOTORS PVT LTD (CIU2-CIU-01), KHATA NO. 246/407, PLOT NO. 76, P.S. – GHASIPURA, MOUZA – SUDUSUDIA, DISTRICT – KEONJHAR, ANANDPUR, ODISHA . - 758021 PH :7381028525.
<b>ANGUL</b>		<b>BALASORE</b>	
1618.	ODYSSEY MOTORS PVT LTD (W101-W1-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145 PH :9439817308.	1619.	JYOTE MOTORS (BALASORE) PVT. LTD (L501-L5-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019 PH :7381072800.
<b>BALUGOAN</b>		<b>BAMRA</b>	
1620.	JYOTE MOTORS (CWG1-1-CWG-01), M/S PLOT NO 758/31,KHATA NO 350/30, MOUZA-GOBARDHANPUR,BALUGAON, DISTRICT-KHORDA,ODISHA-752030 - 752030 PH :9776615001.	1621.	ODYSSEY MOTORS (SIA1-SIA-01), M/S ODYSSEY MOTORS,NEAR SATSANG KENDRA, DUMERMUNDA COLLEGE ROAD, BAMRA,GOVINDPUR-768221. - 768221 PH :9439314464.
<b>BARGARH</b>		<b>BARIPADA</b>	
1622.	ODYSSEY MOTORS PVT LTD (D401-SJ-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028 PH :8908944206.	1623.	JYOTE MOTORS (BALASORE) PVT. LTD (L501-RQ-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001 PH :7381072824.
<b>BERHAMPUR</b>		<b>BOLANGIR</b>	
1624.	SKY AUTOMOBILES (E203-E2-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002 PH :7381266000.	1625.	SKY AUTOMOBILES (E203-E2-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE – KONISI, BERHAMPURE, GANJAM, ODISHA. - 761008 PH :7381266000.
<b>BHADRAK</b>		<b>BHAWANIPATNA</b>	
1626.	JYOTE MOTORS (BALASORE) PVT. LTD (I201-I2-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK , ODISHA - 756101 PH :9776345311.	1627.	LEGEND CARS PVT. LTD. (SW01-TB-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001 PH :9937198684.
<b>BHUBANESHWAR (NAYAPALLI)</b>		<b>BHUBANESWAR</b>	
1628.	JYOTE MOTORS PVT LTD (0405-04-01), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-751 003 - 751003 PH :7381028525.	1629.	NARAYANI MOTORS PVT. LTD. (0403-04-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006 PH :9583022031.
<b>BHUBANESWAR</b>		1630.	JYOTE MOTORS PVT LTD (0402-04-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003 PH :7064493302.
1631.	SKY AUTOMOBILES (0404-04-01), PLOT NO. -435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022 PH :8117829611.	1632.	NARAYANI MOTORS PVT. LTD. (0403-04-02), PLOT NO 56 AND 57,RASULGARH, BHUBANESHWAR, ODISHA - 751010 PH :9583022046.
1633.	JYOTE MOTORS PVT LTD (0402-04-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010 PH :7978910223.	1634.	SKY AUTOMOBILES (0404-04-02), KHATA NO. 457/675, PLOT NO. 543, 756, 789 AND 546, SRIVIHAR, INFRONT OF IOCL OFFICE, P.S. -CHADRASHEKARPUR, BHUBANESHWAR, ODISHA. - 751 024 PH :7440011604.
<b>CHANDIKHOLE</b>		<b>BOLANGIR</b>	
1635.	ODYSSEY MOTORS PVT LTD (D401-MW-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001 PH :8895418122.		

**Dealer Workshop (AS ON 30.05.2023 )**

1636. SKY AUTOMOBILES (BXL1-BXL-01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA - 755044  
PH :9776645798.

**CUTTACK**

1637. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011  
PH :9776645798.  
1638. TUSHI MOTORS PVT. LTD. (6702-67-01), PLOT NO. C-14, PLOT NO.C-13 ,INDUSTRIAL ESTATE ,KHAPURIA,TAHASIL - CUTTACK SADAR ,CUTTACK DISTRICT,BHUBANESWAR - 753001  
PH :9692912345.

**DEOGARH**

1639. ORBIT MOTORS PVT. LTD. (CBB1-CBB-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108  
PH :9437607865.

**DHENKENAL**

1640. SKY AUTOMOBILES (6701-4P-04), PLOT NO-136/1103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKANAL. - 759001  
PH :7440025919.

**GANDAI**

1641. SPARSH AUTOMOBILES (SHU1-SHU-01), M/S SPARSH AUTOMOBILES ,WARD NO – 7, NEAR KRISHI UPAJ MANDI, GANDAI RAJNANDGAON ROAD,GANDAI – 491888 - 491888  
PH :9926626662.

**JAGATSINGHPUR**

1642. NARAYANI MOTORS PVT. LTD. (CFM1-CFM-01), KHATTA NO. 827/221 & 827/222, PLOT NO. 1197 & 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSINGHPUR, ODISHA - 754103  
PH :9556511213.

**JAJPUR**

1643. SKY AUTOMOBILES (6701-RZ-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019  
PH :9583011010.

**JALESWAR**

1644. JYOTE MOTORS (BALASORE) PVT. LTD (BXP1-BXP-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.- BALASORE, ODISHA - 756032  
PH :7381072600.

**JEYPORE**

1645. LEGEND CARS PVT. LTD. (SW01-SW-03), SOURAGUDA,JEYPORE,DISTT-KORAPUT,ORISSA,INDIA - 764001  
PH :9437575188.

**JHARSUGUDA**

1646. ODYSSEY MOTORS PVT LTD (BJU1-BJU-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201  
PH :9439548823.

**KEONJHAR**

1647. JYOTE MOTORS PVT LTD (7U01-7U-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001  
PH :7064499047.

**NAYAGARH**

1648. JYOTE MOTORS PVT LTD (0402-DC-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069  
PH :7064499048.

**NIMPARA**

1649. NARAYANI MOTORS PVT. LTD. (CFL1-CFL-01), PLOT NO. 345/1344, GANESH BAZAR, NIMPARA, DISTRICT – PURI, ODISHA. - 752106  
PH :7381093622.

**PALLAHARA**

1650. ODYSSEY MOTORS PVT LTD (CHV1-CHV-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119  
PH :9439817308.

**PARADEEP**

1651. NARAYANI MOTORS PVT. LTD. (OE01-OE-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. - 754141  
PH :9583022020.

**PARLAKHEMUNDI**

1652. SKY AUTOMOBILES (CLG1-CLG-01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211  
PH :9776999977.

**PURI**

1653. NARAYANI MOTORS PVT. LTD. (4Q01-4Q-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002  
PH :9583022220.

**RAIRANGPUR**

1654. JYOTE MOTORS (BALASORE) PVT. LTD (CES1-CES-01), PLOT NO.1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046  
PH :7064499936.

**RAYAGADA**

1655. LEGEND CARS (YB01-YB-01), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001  
PH :7008771180.

**ROURKELA**

1656. ORBIT MOTORS PVT. LTD. (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041  
PH :9437061040.

**SAMBALPUR**

1657. ODYSSEY MOTORS PVT LTD (D401-D4-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004  
PH :7381083571.

**SORO**

1658. JYOTE MOTORS (SQF1-SQF-01), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE. - 756045  
PH :9776615001.

**SUBARNAPUR**

1659. ODYSSEY MOTORS PVT LTD (BUK1-BUK-01), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNPUR, ODISHA - 767017  
PH :8895418122.

**SUNDERGARH**

1660. ORBIT MOTORS PVT. LTD. (BWJ1-BWJ-01), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001  
PH :8249354447.

**UDALA**

1661. JYOTE MOTORS (BALASORE) PVT. LTD (CHW1-CHW-01), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA. - 757041  
PH :8249877935.

**ODISHAN**

**NIRGUNDI**

1662. NARAYANI (0403-SIP-4), KHATA NO 251/255, PLOT NO 233,MALGOWDINI-MOUZA BLITERUA, NIRGUNDI,DISTRICT-CUTTACK, ORISSA. - 754025  
PH :9583001877.

**ORISSA**

**BHUBANESWAR**

1663. NARAYANI (0403-04-03), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUABNESHWWAR - 751025  
PH :9583001877.

**KENDRAPARA**

1664. JYOTE MOTORS (SFI1-SFI-01), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. - 754208  
PH :9776615001.

**KUCHINDA**

1665. ODYSSEY MOTORS (SLN1-SLN-01), /S ODYSSEY MOTORS ,PLOT NO 146,KHATA NO 76/9,MOUZA-KUNDAPOSHI,NEAR KUNDESHWAR MANDIR,KUCHINDA,SAMBULPUR. - 768222  
PH :9439314464.

**PADAMPUR**

1666. ODYSSEY MOTORS (SFB1-SFB-01), M/S ODYSSEY MOTORS, CHARPALLI,PADAMPUR, NEAR REGENCY HOTEL,DISTRICT:BARGARH, ORISSA - 770039  
PH :9439314464.

**PUDUCHERRY**

**KARAIKAL**

1667. SHENBAKA CARS PVT. LTD. (CCF1-CCF-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL. - 609602  
PH :04368-2278001/2.

**MADAGADIPET**

1668. SHENBAKA CARS PVT. LTD (CUD1-CUD-01), SURVEY NO. 129/4/A/2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605 107  
PH :8220046178.

**PONDICHERRY**

1669. SHENBAKA CARS PRIVATE LIMITED (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010  
PH :0413-2293391/92/93.

**PUNJAB**

**ABOHAR**

1670. TARA AUTOMOBILES (ABOHAR) (H501-H5-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB - 152116  
PH :9876047847.

**ADAMPUR**

1671. LOVELY AUTOS (CHA1-CHA-01), KHASRA NO.107/1, JALANDHAR-HOSHIARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102  
PH :8288050777.

**AJNALA**



Dealer Workshop (AS ON 30.05.2023 )			
1672.	SWANI MOTORS PVT. LTD. (CBP1-CBP-01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102 PH :8872001731.	1682.	LOVELY AUTOS (3503-MS-03), NAWASEHAR-JALANDHAR ROAD, BANGA - 144505 PH :9915028625.
<b>AMRITSAR</b>		<b>BANUR</b>	
1673.	SWANI MOTORS LTD. (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001 PH :9877482175, 8872000000.	1683.	TRICITY AUTOS PVT. LTD. (BRT1-BRT-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601 PH :9988882330.
1674.	JAYCEE MOTORS (1704-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH :9780038335.	<b>BARNALA</b>	
1675.	RISHABH FOURWHEELS PVT. LTD. (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH :9914841577.	1684.	MAX AUTOMOBILES (4S02-4S-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001 PH :285022, 9216529220.
<b>ANANADPUR SAHIB</b>		<b>BATALA</b>	
1676.	CM AUTOSALES PVT. LTD. (OF01-OF-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB,TEHSIL ANANDPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123 PH :9915022897.	1685.	PATHANKOT VEHICLEADES PVT. LTD. (A701-V5-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505 PH :9417900850 , 9417900918.
<b>APRA</b>		<b>BEGOWAL</b>	
1677.	LOVELY AUTOS (CVW1-CVV-01), SAMRAI CHOWK PHILLAUR ROAD, VILLAGE - APRA, TEHSIL - PHILLAUR, DIST.-JALANDHAR, STATE - PUNJAB. - 144416 PH :9915020515.	1686.	MARWAHA AUTOS (BHF2-BHF-01), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH :9779166004.
<b>AUR</b>		<b>BHADSON</b>	
1678.	LOVELY AUTOS (CVY1-CVY-01), KHATUNI NO. 479/588, KHASRA NO. 27/20/04(2-18), 21/2(2-10), VILLAGE - AUR, TEHSIL - NAWASHAR, DIST. -SBS NAGAR, STATE - PUNJAB. - 144417 PH :9915020510.	1687.	HIRA AUTOMOBILES LTD (BAG1-BAG-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202 PH :9217048236, 9217048250.
<b>BAGHA PURANA</b>		<b>BHAGTA BHAI KA</b>	
1679.	REMIRA MOTORS PVT. LTD. (BAH2-BAH-01), BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH :7087025009.	1688.	TARA AUTOMOBILES (BHG1-BHG-01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT – BHATINDA. - 151206 PH :8437030666.
<b>BALACHAUR</b>		<b>BHATINDA</b>	
1680.	LOVELY AUTOS (XV01-XV-01), NEAR MCDONALD – GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521 PH :9878427910.	1689.	TARA AUTOMOBILES (BHATINDA) (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001 PH :0164-2235349, 50.
<b>BALBEHRA</b>		<b>BHIKHIWIND</b>	
1681.	HIRA AUTOWORLD (SOG1-SOG-01), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA - 147101 PH :9888341118.	1690.	RISHABH FOURWHEELS PVT. LTD. (BPK1-BPK-01), KHASRA NO. 67/3/2, 4/1, 7/2, 8/1, 8/2, PIND BHIKHIWIND, TEHSIL – PATTI, DISTRICT – TARN TARAN, PUNJAB. - 143303 PH :9914708577.
<b>BANGA</b>		<b>BHOGPUR</b>	
		1691.	LOVELY AUTOS (BRU2-BRU-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201 PH :9872030006.
		<b>BHULATH</b>	
		1692.	LOVELY AUTOS (CHB1-CHB-01), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT – KAPURTHALA, PUNJAB. - 144622 PH :9876541065, 8288050777.
		<b>BILGA</b>	
		1693.	LOVELY AUTOMOBILES (SPM1-SPM-01), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLAUR, JALANDHAR. - 144036 PH :9815069814.
		<b>CHUNNI KALAN</b>	
		1694.	HOSHIARPUR AUTOMOBILES (CFG1-CFG-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307 PH :248005, 9815131766.
		<b>DASUYA</b>	
		1695.	HOSHIARPUR AUTOMOBILES (H402-8D-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205 PH :9815131766, 9872312371.
		<b>DERABASSI</b>	
		1696.	AUTOPACE NETWORK PVT LTD (0705-AW-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507 PH :9815011669.
		<b>DEVIGARH</b>	
		1697.	HIRA AUTOMOBILES LTD (OG01-OG-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111 PH :8872034118, 9217048250.
		<b>DHILWAN</b>	
		1698.	MARWAHA AUTOS (SGU1-SGU-01), MIANI BAKARPUR,AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA - 144804 PH :9779166004.
		<b>DORAHA</b>	
		1699.	GULZAR MOTORS (QC02-QC-01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHA, DISTT. LUDHIANA, PUNJAB. - 141421 PH :9814191122.
		<b>FARIDKOT</b>	
		1700.	MAPSKO AUTO INDIA PVT. LTD. (4U02-4U-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204 PH :01639- 264001,7347000520.
		<b>FATEHGARH CHURIAN</b>	
		1701.	PATHANKOT VEHICLEADES PVT. LTD. (BA01-BAO-01), KHASRA NO. 17 R, DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSIL - BATALA, DIST.-GURDASPUR, STATE - PUNJAB. - 143 602 PH :9417900850 , 9875930180.
		<b>FAZILKA</b>	
1702.	TARA AUTOMOBILES (H501-4V-03), NH-10, NEAR SARV-HITKARI BAL VIDYA MANDIR, FAZILKA - 152116 PH :9876047847.	<b>FEROZEPUR</b>	
		1703.	BABA AUTOS (7C01-7C-01), MOGA ROAD, FEROZEPUR CANTT - 152002 PH :8872013211.
		<b>GARHSHANKAR</b>	
		1704.	HOSHIARPUR AUTOMOBILES (H402-V4-02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527 PH :9815131766, 9781543131.
		<b>GHANAUR</b>	
		1705.	HIRA AUTOWORLD LLP (CVX2-CVX-01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401 PH :9217048437.
		<b>GHAROTA</b>	
		1706.	PATHANKOT VEHICLEADES (SFF1-SFF-01), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT – 143533. - 143533 PH :8264105000.
		<b>GHOMAN</b>	
		1707.	PATHANKOT VEHICLEADES PVT. LTD. (CUL1-CUL-01), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11/25 (7-18), VILLAGE - BALRAMPUR ADDA, KHASBA - GHOMAN. - 143514 PH :8054500130.
		<b>GIDDERBAHA</b>	
		1708.	HIRA AUTOMOBILES LTD (AUA1-AUA-01), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBAHA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101 PH :231510, 9217048250.
		<b>GORAYA</b>	
		1709.	LOVELY AUTOS (BJR1-BJR-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH :9417804049.
		<b>GURDASPUR</b>	
		1710.	PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521 PH :9417900870 , 9878050710.
		1711.	PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH :9417900870.
		<b>HOSHIARPUR</b>	

## Dealer Workshop (AS ON 30.05.2023 )

1712. HOSHIARPUR AUTOMOBILES (H402-H4-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001  
PH :9815131766, 9878632537.

### JAGRAON

1713. SANDHU AUTOMOBILES (6206-LT-05), NATIONAL HIGHWAY-64, JAGRAON - 142026  
PH :8437025969.

### JAITU

1714. MAPSKO AUTO INDIA PVT. LTD. (YX02-YX-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT – FARIDKOT. - 151202  
PH :7347000520.

### JALALABAD

1715. TARA AUTOMOBILES (H501-8E-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024  
PH :9876047847.

### JALANDHAR

1716. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001  
PH :9915020515.  
1717. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (3506-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010  
PH :9779166004.

1718. LOVELY AUTOS (3505-35-01), KHASRA NO. 24/20/4, B D ENCLAVE, VILLAGE - JALANDHAR, DIST.-JALANDHAR, PUNJAB. - 144001  
PH :9876044001, 9915020515.

### JANDIALA GURU

1719. BABA AUTOS (7C01-GL-03), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115  
PH :8872013029.

### JANDIALA MANJKI

1720. LOVELY AUTOS (BJS1-BJS-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE – JANDIALA MANJKI, TEHSIL – NOORMAHAL, DISTRICT – JALANDHAR, PUNJAB. - 144033  
PH :7087439797.

### KAHNUWAN

1721. PATHANKOT VEHICLEADES PVT. LTD. (CGM1-CGM-01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. - 143528  
PH :8288993301.

### KALA SANGHIAN

1722. MARWAHA AUTOS (SPL1-SPL-01), MAIN CHOWK, KALA SANGHIAN, DISTRICT KAPURTHALA, PUNJAB - 144623  
PH :9779166004.

### KAPURTHALA

1723. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (4202-42-01), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602  
PH :9779166004.

### KATHU NANGAL

1724. JAYCEE MOTORS (CSP2-CSP-01), KHASRA NO.12/20/2, 21/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502  
PH :9780038335.

### KHANNA

1725. HOSHIARPUR AUTOMOBILES (N302-N3-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. - 141401  
PH :9888716261.

### KHARAR

1726. CM AUTOSALES PVT. LTD. (7K01-JH-03), NH-95, MORINDA ROAD,KHANPUR, KHARAR. DIST. MOHALI - 140301  
PH :9915022878.

### KILANWALI

1727. HIRA AUTOMOBILES LTD (BFV1-BFV-01), GT ROAD (NH NO. 09), NEAR GURU NANAK COLLEGE, KILANWALI, TEHSIL – MALOUT, DISTRICT – MUKTSAR SAHIB. - 152107  
PH :8872034131.

### KOTKAPURA

1728. MAPSKO AUTO INDIA PVT. LTD. (BIS2-BIS-01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT – FARIDKOT - 151204  
PH :7347000518.

### LALRU

1729. AUTOPACE NETWORK PVT LTD (BRJ1-BRJ-01), VILLAGE – LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501  
PH :9815011669.

### LUDHIANA

1730. GULZAR MOTORS LTD. (6204-62-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMF, LUDHIANA - 141003  
PH :9814160099.

1731. SANDHU AUTOMOBILES (6206-62-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141203  
PH :9815600095.

1732. LIBRA AUTO CAR CO. LTD (6207-62-01), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020  
PH :0160-2512701, 03.

1733. LIBRA AUTO CAR CO. LTD (6207-62-02), G.T ROAD, NEAR AIRPORT, LUDHIANA. - 141020  
PH :0160-25035130.

1734. LOVELY AUTO (6209-62-01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA – 141001 - 141001  
PH :9875928451, 9875928450.

1735. LOVELY AUTOS (6209-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB - 141003  
PH :9815069814.

1736. LOVELY AUTOS (6209-62-03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001  
PH :9815069814.

1737. LOVELY AUTOS (6209-62-04), EURO MART COMPLEX, HAMBRAN ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008  
PH :9815069814.

### MACHIWARA

1738. HOSHIARPUR AUTOMOBILES (9T03-9T-01), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115  
PH :9875900147.

### MAHILPUR

1739. HOSHIARPUR AUTOMOBILES (H402-DD-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105  
PH :9914720424.

### MAJITHA

1740. RISHABH FOURWHEELS PVT. LTD. (CDR1-CDR-01), PLOT NO.130, OPP. DANA MANDI, AMRITSAR ROAD, MAJITHA. - 143601  
PH :9914841577.

### MALERKOTLA

1741. MAX AUTOMOBILES (CCI2-CCI-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB - 148023  
PH :9814403131 , 9056903131.

### MALOUT

1742. HIRA AUTOMOBILES LTD (6302-LE-05), TINKONI CHOWK, NEAR LIC BUILDING, MALOUT - 152107  
PH :299524, 264724,9988417000.

### MANDI GOBINDGARH

1743. HOSHIARPUR AUTOMOBILES (U903-U9-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301  
PH :9815131766 , 9914112929.

### MANSA

1744. TARA AUTOMOBILES (7002-TL-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA , PUNJAB - 151505  
PH :01652-216042.

### MEHTA

1745. RISHAB (CDS1-CDS-01), KHASRA NO. 343, BABA BAKALA ROAD, VILLAGE MEHTA CHOW, TEHSIL: BABA BAKALA, DIST AMRITSAR, PUNJAB - 143114  
PH :7760315710.

### MOGA

1746. REMIRA MOTORS PVT. LTD. (H602-H6-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001  
PH :7087025402.

### MOHALI

1747. NAVDESH AUTOS LLP (L105-L1-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059  
PH :8872016453.

1748. CM AUTOSALES PVT. LTD. (0706-L1-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI – PUNJAB - 140110  
PH :8284800597.

### MORINDA

1749. CM AUTOSALES PVT. LTD. (BHH1-BHH-01), KHASRA NO. 1092, CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140101  
PH :9915022811.

### MUKERIAN

1750. HOSHIARPUR AUTOMOBILES (IP01-IP-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN - 144211  
PH :9815131766, 8437919900.

### MUKTSAR

1751. HIRA AUTOMOBILES LTD (6302-J8-03), BHAI COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB - 152026  
PH :9217048250, 9056900042.

### MULLANPUR

1752. SANDHU AUTOMOBILES (YY01-YY-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101  
PH :8437025969.

### MULLANPUR GARIBDASS

1753. NAVDESH AUTOS LLP (CVZ2-CVZ-01), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE - PUNJAB. - 140901  
PH :8872004676.

### NABHA

1754. HIRA AUTOMOBILES LTD (6302-UF-06), RADHA SWAMI ROAD, NABHA - 147201  
PH :9317000004, 9217048250.

### NAKODAR

1755. LOVELY AUTOS (3503-5B-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040  
PH :9915028603.

## NANGAL

1756. CM AUTOSALES PVT. LTD. (7K01-8F-02),  
PLOT#36,AJOLI MOR, FOCAL POINT  
INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB -  
140126  
PH :9592916811.

## NAWANSHAHR

1757. LOVELY AUTOS (3503-J7-02), NAWANSHAHR  
CHANDIGARH ROAD, VILL:- LANGROHA, DISTT:-  
NAWANSHAHR, PUNJAB - 144514  
PH :9915028682.

## NIHAL SINGH WALA

1758. REMIRA MOTORS PVT LTD (0B02-QB-01),  
BARNALA ROAD, NEAR DEAR BABA SEWA  
DASS, TEHSIL-NIHALSINGHWALA, DIST:-MOGA.  
- 142 055  
PH :7067025009.

## PATHANKOT

1759. PATHANKOT VEHICLEADES PVT. LTD.  
(A701-A7-01), NEAR MAMOON CHOWK,  
DALHOUSIE ROAD, PATHANKOT, - 145001  
PH :8264105000 , 9417900883.  
1760. PATHANKOT VEHICLEADES PVT. LTD.  
(A701-A7-04), NEAR A. B. COLLEGE,  
PATAHANKOT - 145001  
PH :9417900828 , 9417900842.

## PATIALA

1761. HIRA AUTOMOBILES LTD (6302-63-01), 13-B,  
FACTORY AREA, PATIALA - 147001  
PH :2360131, 2360562,9217048250.  
1762. HIRA AUTOMOBILES LTD (6302-63-04), C-20 &  
C-45, FOCAL POINT, PATIALA, PUNJAB - 147001  
PH :2232377, 9217048234, 9217048250.  
1763. HIRA AUTOMOBILES LTD (6302-63-07), D-1A,  
INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB).  
- 147001  
PH :2232295, 2232296, 9217048250.  
1764. ATELIER AUTOMOBILES (6304-63-01), VILLAGE  
MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR  
CASABA RESORT, PATIALA - 147001  
PH :7527000106, 7527000111.

## PATRAN

1765. HIRA AUTOMOBILES LTD (6302-V3-02),  
NARWANA ROAD, PATRAN, PUNJAB, - 147105  
PH :244445, 245788, 9217048250.

## PATTI

1766. JAYCEE MOTORS (BQA2-BQA-01), KHASRA NO.  
64/19/2/1 KA 16/49 & KHASRA NO. 64/20 KA  
29/54, NEAR RADHA SWAMI, TARN TARAN  
ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN,  
PUNJAB, - 143416  
PH :9780038335.

## PHAGWARA

1767. MARWAHA AUTOS (A UNIT OF INDERJIT  
MARWAHA AUTOS PVT. LTD.) (5C02-5C-01),  
PLOT NO-62, INDUSTRIAL AREA, NEAR JCT  
BRIDGE LUDHIANA - 141001  
PH :9779166004.

## PHILLAUR

1768. LOVELY AUTO (XU01-XU-01), OLD  
NAWANSHAHR ROAD CIVIL LINE, PHILLAUR,  
DISTRICT JALANDHAR - 144410  
PH :9815069814.

## RAIKOT

1769. GULZAR MOTORS PVT LTD (XT02-XT-01),  
BARNALA BY PASS ROAD, RAIKOT - 141109  
PH :9814160099.

## RAJPURA

1770. HIRA AUTOWORLD LLP (HK02-HK-01), VILLAGE  
BADHAK, RAJPUR PATIALA ROAD, RAJPURA -  
140401  
PH :244881-84, 9217048437,9217048250.

## RAMPURA PHUL

1771. TARA AUTOMOBILES (XR01-XR-01), RAMPURA  
-BARNALA ROAD, RAMPURA PHUL - 151103  
PH :01651-266643.

## RAYYA

1772. RISHABH FOURWHEELS PVT. LTD.  
(CAK1-CAK-01), NH-1, GT ROAD RAYYA, TEHSIL  
– BABA BAKALA, DISTRICT – AMRITSAR. -  
143112  
PH :9914708577.

## ROPAR

1773. CM AUTOSALES PVT. LTD. (7K01-7K-01),  
CHANDIGARH ROPAR ROAD, ROPAR - 140001  
PH :9915022802.

## SAMANA

1774. HIRA AUTOMOBILES LTD (BFU1-BFU-01),  
KEWAT NO. 948/950, KHATUNI NO. 1427,  
KHASRA NO. 101/27(4-7), PATIALA SAMANA  
ROAD, SAMANA, DIST.-PATIALA, STATE  
PUNJAB. - 147101  
PH :9217048236.

## SANGRUR

1775. MAX AUTOMOBILES (G402-G4-01), DHURI  
ROAD, SANGRUR, - 148024  
PH :01672-239627.

## SHAHKOT

1776. LOVELY AUTOS (BHT1-BHT-01), PUBLIC  
SCHOOL ROAD, SHAHKOT, DISTRICT –  
JALANDHAR, PUNJAB. - 144702  
PH :8437936811.

## SIRHIND

1777. HOSHIARPUR AUTOMOBILES (TF03-TF-01),  
KHEWAT KHATONI NO. 802/1049 & 821/1070  
KHEWAT KHAS NO. 43/1/2/1 (1-0), BESIDE SBI  
BANK, BASSI ROAD, SIRHIND, TEHSIL AND  
DISTRICT – FATEHGARH SAHIB - 140406  
PH :9815131766, 7527082471.

## SULTANPUR LODHI

1778. MARWAHA AUTOS (A UNIT OF INDERJIT  
MARWAHA AUTOS PVT. LTD.) (ZY02-ZY-01),  
NEAR TALWADI BRIDGE, TALWANDI ROAD,  
SULTANPUR LODHI, DISTRICT -KAPURTHALA -  
144626  
PH :9779166004.

## TALWANDI BHAI

1779. BABA AUTOS (GMF1-GMF-01), FEROZEPUR  
ROAD, NEAR FUNISLAND, TALWANDI BHAI,  
DISTT. FEROZEPUR - 142050  
PH :8872013002.

## TALWANDI SABO

1780. TARA AUTOMOBILES (ON01-ON-01), TALWANDI  
RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL,  
RAMAMANDI,TALWANDI SABO, BHATINDA -  
1551302  
PH :9646691047, 8437008666.

## TALWARA

1781. HOSHIARPUR AUTOMOBILES (H402-LR-07),  
DAM ROAD, NEAR KALI MATA MANDIR,  
VILLAGE-NAGAR, TALWARA, PUNJAB - 144216  
PH :9815131766, 9781842244.

## TANDA

1782. HOSHIARPUR AUTOMOBILES (H402-DE-06),  
VILL.PULPUKHATA, MIANI ROAD, TANDA -  
144203  
PH :9815131766, 8437430400.

## TARAGARH

1783. PATHANKOT VEHICLEADES PVT. LTD.  
(BVC1-BVC-01), VILLAGE - RAHIMPUR,  
VPO-TARAGARH, TEHSIL & DISTT.  
PATHANKOT, HIMACHAL PRADESH - 143534  
PH :9988639963.

## TARN TARAN

1784. JAYCEE MOTORS (BLP2-BLP-01), VILLAGE –  
KAKKA, KANDIALA, NEAR SANDHU PETROL  
PUMP, AMRITSAR ROAD, TARAN TARAN,  
PUNJAB - 143401  
PH :9780038039.

## ZIRA

1785. BABA AUTOS (7C01-GK-02), FEROZEPUR ROAD,  
ZIRA - 142047  
PH :8872013230.

## ZIRAKPUR

## Dealer Workshop (AS ON 30.05.2023 )

1786. TRICITY AUTOS (9M01-9M-01), PATIALA  
HIGHWAY,VILLAGE - NABHA, ZIRAKPIR,  
PUNJAB - 140603  
PH :9988882330.

## RAJASHTHAN

## JAIPUR

1787. AURIC MOTORS (1116-11-C1), COMMERCIAL  
PLOT NO. J4, COMMERCIAL BELT B, VT ROAD,  
NEW SANGANER ROAD, MANSAROVAR  
SCHEME, JAIPUR, RAJASTHAN 302020 - 302020  
PH :9571105651.

## RAJASTHAN

## ABU ROAD

1788. NAVNEET MOTORS (OQ01-OQ-01), PLOT NO.  
E-26, RIICO AMBAJI INDUSTRIAL AREA,  
PALANPUR HIGHWAY, ABU ROAD DISTT.  
SIROHI - 307026  
PH :99501 56579.

## ACHROL

1789. KTL AUTOMOBILE PVT. LTD. (GKD1-GKD-01),  
#REF1 - 303002  
PH :7412077022.

## AHORE

1790. AJMER MOTORS (SHN1-SHN-01), MADHOPURA,  
NEAR KARNAWATI HOSPITAL, AHORE,  
DISTRICT – JALORE, RAJASTHAN PIN CODE:  
307029 - 307029  
PH :#REF1.

## AJMER

1791. AJMER AUTO AGENCIES PVT. LTD.  
(B201-B2-01), SRINAGAR ROAD,AJMER  
(RAJASTHAN) - 305001  
PH :9314955201.  
1792. RELAN MOTORS (B203-B2-01), NEAR BIRLA  
WATER TANK, PARABATPURA BYEPASS,  
AJMER - 305001  
PH :95876 87000, 84400 41027.  
1793. RELAN MOTORS (B203-B2-02), F-243 RIICO  
INDUSTRIAL AREA, PALRA, AJMER - 305001  
PH :95876 87000, 87400 16329.  
1794. AJMER AUTO AGENCIES PVT. LTD.  
(B201-B2-05), KHASRA NO.343/2, 344, 345, 347  
GHUGHRA GHATI, JAIPUR ROAD, AJMER. -  
305001  
PH :9314955201.

## AKLERA

1795. BHATIA AND COMPANY (SGK1-SGK-01), NH-52,  
RAM NAGAR COLONY, AKLERA, JHALAWAR,  
PIN-326033, RAJASTHAN - 326033  
PH :9057047891.

## ALWAR

**Dealer Workshop (AS ON 30.05.2023 )**

1796. MG MOTORS (F901-F9-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001  
PH :9001795520.

1797. MG MOTORS (F901-F9-02), KHASRA NO.803/198, BHUGORE TIRAHA, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001  
PH :9001795520.

**ANOOPGARH**

1798. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BFE1-BFE-01), PLOT NO. AMEDKAR CHARAHARA,RAILWAY STATION ROAD ,ANUPGARH (ANOOPGARH ),DISTT SRI GANGANAGAR . - 335701  
PH :9982638516.

**ANTA**

1799. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTG2-CTG-01), KOTA-BARAN ROAD, ANTAH, DIST.-BARAN. - 325502  
PH :9414032859.

**ASIND**

1800. CHAMPION CARS (SID1-SID-01), DEV TOWERS, BEAWAR ROAD, ASIND, DISTRICT – BHILWARA, RAJASTHAN - 311301 - 311301  
PH :7073461987.

**BAGRU**

1801. PREM MOTORS PVT. LTD. (US02-US-01), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPUR - 303007  
PH :01414711118,8058411181.

**BALESAR**

1802. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CWO1-CWO-01), KHASRA NO. 2167 JODHPUR JAISALMER ROAD, VILL:- BALESAR SATTA, TEH:- BALESAR , DIST:- JODHPUR ( RAJ.) - 342203  
PH :7412087344.

**BALOTRA**

1803. LMJ SERVICES LTD. (6502-9G-05), JODHPUR BALOTRA ROAD,BALOTRA, RAJASTHAN - 344022  
PH :8005898360.

**BANSUR**

1804. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (BQP1-BQP-01), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402  
PH :8875005116.

**BANSWARA**

1805. NAVNEET MOTORS (X903-X9-01), NEAR J.C. MILL,OPPOSITE AKASHWANI,DAHOD ROAD,BANSWARA - 327001  
PH :86023 83260.

**BARAN**

1806. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-PM-03), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205  
PH :9413379013.

**BARMER**

1807. LMJ SERVICES LTD. (6502-SH-06), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001  
PH :8005898360.  
1808. LMJ SERVICES LTD. (SH01-SH-01), NH# 68, OPP. SADAR THANA - 344001  
PH :8005898360.

**BASSI**

1809. PREM MOTORS PVT. LTD. (VF02-VF-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301  
PH :01414711118,8058794151.

**BAYTU**

1810. LMJ SERVICES (SIT1-SIT-01), NH-8 ,NEAR JAGDAMBA PETROL PUMP , BAYTU - 344034  
PH :8094011126.

**BEAWAR**

1811. RELAN MOTORS (FL03-FL-01), PLOT NO 1, INDIRA GANDHI UDYOGPURI , AJMER ROAD ,BEAWAR, RAJASTHAN . - 305202  
PH :9587687000.

**BEGUN**

1812. BHATIA & CO (BTD1-BTD-01), BHATIA & CO. (A UNIT OF BHATIA CORPORATION PVT LTD),IN FRONT OF GURUKUL, CHITTOR ROAD,BEGUN, TEHSIL – BEGUN, DISTRICT CHITTORGARH, 312023 - 312023  
PH :95097 06827.

**BEHROR**

1813. MG MOTORS (FQ01-FQ-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701  
PH :9001795520.

**BHADRA**

1814. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIF1-BIF-01), CHAK NUMBER-8,BARANI, NEAR HISAR BYEPASS BHADRA -BALSAMAND ROAD ,BHADRA . - 335501  
PH :9166712222, 9413311745.

**BHARATPUR**

1815. TM MOTORS PVT. LTD. (5J01-5J-01), BRIJ VIHAR COLONY,,MADARPUR ROAD,BHARATPUR,RAJASTHAN - 321001  
PH :9251423392.

**BHAWANI MANDI**

1816. SUWALKA MOTORS PVT LTD (SDB1-SDB-01), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI,JHALAWAR- 326502 - 326502  
PH :9116178571.

**BHILWARA**

1817. LOHIA AUTOMOBILES (E301-E3-01), AJMER ROAD,NEAR OCTROI POST,BHILWARA - 311001  
PH :82094 11856.  
1818. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (E302-E3-01), NEAR GRAM BHARTI, CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001  
PH :7073461987.  
1819. LOHIA AUTOMOBILES (E301-E3-03), PLOT NO. H-11, EVERGREEN TEXTILE PARK, RIICO INDUSTRIAL AREA, PUR ROAD, BHILWARA. - 311001  
PH :82094 11856.

**BHINDER**

1820. TECHNOY MOTORS INDIA PVT. LTD. (CBS1-CBS-01), NEAR RAILWAY STATION,SALUMBAR CHOURAHA, BHINDER - 313603  
PH :9001234056.

**BHINMAL**

1821. SHRI KRISHNA AUTOSALES PVT LTD (CQN1-CQN-01), KHASRA NO. 2281, KARADA CROSSING, BHINMAL, DISTRICT - JALORE, RAJASTHAN.  
PH :9610242790.

**BHIWADI**

1822. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-01), OPP. INDAG RUBBER,MAIN ROAD ,BHIWADI - 301019  
PH :9214794326,8875005116.  
1823. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-02), F-458-C,RIICO,INDUSTRIAL AREA,BHIWADI - 301019  
PH :9214794326,8875005116.  
1824. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-04), KHASRA NO. 656/431, ALWAR ROAD, BHIWADI. - 301019  
PH :9214794326,8875005116.

**BIJAYNAGAR**

1825. AJMER AUTO AGENCIES PVT LTD (GLF1-GLF-01), KHASRA NO 39 , AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT – AJMER ,RAJASTHAN - 305624  
PH :8890902472.

**BIJOLIA**

1826. LOHIA AUTOMOBILES (E301-UA-02), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTOR-BIJOLIA HIGHWAY, BIJOLIA, DIST. -BHILWARA - 311602  
PH :82094 11856.

**BIKANER**

1827. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-01), OPP. URMUL DAIRY PLANT,GANGANAGAR ROAD,BIKANER - 334004  
PH :1512253864,9414138511.  
1828. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-04), JAIPUR BYE PASS,BIKANER . - 334004  
PH :1512230384,8875010507.  
1829. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-05), OPP. AVYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003  
PH :7014063193,9413311949.  
1830. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES) (7102-71-01), KHASRA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. - 334001  
PH :8929834417.

**BILARA**

1831. LMJ SERVICES LTD. (BZB1-BZB-01), BANGANGA MOD, JODHPUR ROAD, BILARA , RAJASTHAN - 342602  
PH :8104698935.

**BUNDI**

1832. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-EF-02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSAITE ICICI ATM, BUNDI - 323001  
PH :9413353099.

**CHAKSU**

1833. K P AUTOMOTIVES PVT LTD (1104-JM-03), TONK ROAD, CHAKSU - 303901  
PH :0141-4071111, 4071101,8696934973.

**CHANDAN**

1834. LMJ SERVICES LTD. (SHR1-SHR-01), JAISALMER ROAD ,CHANDAN , DISTT JAISALMER, RAJASTHAN - 345031  
PH :8094011126.

**CHIRAWA**

1835. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SY02-SY-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026  
PH :01596-217163,7230081668.

**CHITTORGARH**

1836. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (K901-K9-01), PLOT NO. 1001/1-1002/1,NIMBAHERA ROAD,CHITTORGARH - 312001  
PH :97854 61267.



**Dealer Workshop (AS ON 30.05.2023 )**

1880. LMJ SERVICES LTD. (6502-65-09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008  
PH :8094011147.
1881. LMJ SERVICES LTD. (6502-65-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002  
PH :7230057721.
1882. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-65-01), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005  
PH :7412059839.
1883. LMJ SERVICES LTD. (6502-65-0D), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342 001  
PH :8696916455.
1884. LMJ SERVICES LTD. (6502-65-10), KHASRA NO. 357/5, BANAR ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342 003  
PH :7222002424.

**KAPRAIN**

1885. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BGG1-BGG-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301  
PH :9587894896.

**KEKRI**

1886. AJMER AUTO AGENCIES PVT. LTD. (B201-GZ-03), KOTA SAWAR ROAD,KEKRI - 305404  
PH :9314955201.

**KHAJUWALA**

1887. AURIC MOTORS (SJC1-SJC-01), DANTOR ROAD, KHAJUWALA, DIST. - BIKANER, RAJASTHAN. - 3340323  
PH :9982299866.

**KHANDAR**

1888. PREM MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), SAWAI MADHOPUR-KHANDAR RD., KHANDAR, RAJASTHAN - 322025. - 322025  
PH :8058899960.

**KHERLI**

1889. MG MOTORS (BZE1-BZE-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606  
PH :9001795520.

**KHERWARA**

1890. TECHNOY MOTORS (SEE1-SEE-01), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8,KHERWARA, TEHSIL – KHERWARA, DISTRICT – UDAIPUR, RAJASTHAN PIN CODE: 313803 - 313803  
PH :7726809510.

**KISHANGARH**

1891. AJMER AUTO AGENCIES PVT LTD (TU01-TU-01), R K LINK ROAD, - 305802  
PH :9314391011.

**KISHANGARH BAS**

1892. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-TU-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405  
PH :8875007753,8875007753.

**KOTA**

1893. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-01), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007  
PH :9414085574.
1894. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-61-01), AUTO MOBILE ZONE, G-11/12 INDUSTRIAL AREA, KOTA - 324005  
PH :9001027933.
1895. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007  
PH :9414077682.
1896. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007  
PH :9414085574.
1897. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324005  
PH :9116108613.
1898. SUWALKA MOTORS PVT. LTD. (6104-61-01), RIDDHI SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN. - 324008  
PH :9116178516.

**KOTPUTLI**

1899. PREM MOTORS PVT. LTD. (MH09-MH-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108  
PH :01414711118,8058411181.
1900. PREM MOTORS PVT. LTD. (MH09-MH-02), KHASRA NO- 636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108  
PH :01414711118,8058411181.

**KUCHAMAN**

1901. SHRI MANGLAM AUTO PVT. LTD. (VA02-VA-01), SUDHRSHAN NAGAR, BUDSU ROAD KHASRA NO 148 KUCHAMAN - 341508  
PH :7230055928.

**LADNU**

1902. SHRI MANGLAM AUTO PVT. LTD. (CUP1-CUP-01), KHASRA NO. 1011 SUJANGARH ROAD, LADNUN - 341206  
PH :7412044506.

**LALSOT**

1903. VIPUL MOTORS PVT. LTD. (BZF1-BZF-01), PLOT NO.22,23, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502  
PH :9672211333.

**LOSAL**

1904. JAMU MOTORS (SMD1-SMD-01), LOSAL-SALASAR-DIDWANA ROAD, OPPOSITE SHIV MANDIR, WARD NO. 1, LOSAL, RAJASTHAN - 332025. - 332025  
PH :9571959931.

**LUNI**

1905. LMJ SERVICES (SFD1-SFD-01), NEAR SBI BANK, SALAWAS ROAD,LUNI, TEHSIL – LUNI,DISTRICT – JODHPUR,RAJASTHAN PIN CODE: 342802 - 342802  
PH :8094011126.

**MAHWA**

1906. VIPUL MOTORS PVT. LTD. (BKZ1-BKZ-01), KHASRA NO. 37/384, BHARATPUR ROAD BYE-PASS, N.H.-11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608  
PH :9672211333.

**MAKRANA**

1907. SHRI MANGLAM AUTO PVT. LTD. (CFX1-CFX-01), MANGLANA ROAD, MAKRANA - 341512  
PH :7230055934.

**MALPURA**

1908. K P AUTOMOTIVES PVT LTD (BLB1-BLB-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502  
PH :8696925262.

**MANDALGARH**

1909. CHAMPION (SHA1-SHA-01), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT – BHILWARA, PIN-311604, RAJASTHAN - 311604  
PH :7073461987.

**MERTA**

1910. SHRI MANGLAM MOTORS (NG03-NG-01), KHASRA NO.1679, NH89, MERTA - 341015  
PH :9116007201.

**NAGAU**

1911. SHRI MANGLAM AUTO PVT. LTD. (HL03-HL-01), KHASRA NO.1479/982 & 1478/83 BIKANER ROAD, NAGAU - 341001  
PH :9116008624.

**NAINWA**

1912. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTJ1-CTJ-01), UNIARA ROAD, OPP: PETROL PUMP, NAINWA, DIST. KOTA - 323801  
PH :9413379001.

**NASIRABAD**

1913. AJMER AUTO AGENCIES PVT. LTD. (B201-VB-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601  
PH :9314955201.

**NATHDWARA**

1914. LOHIA AUTOMOBILES (X201-TZ-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND - 313301  
PH :8306009399.

**NAWALGARH**

1915. AURIC MOTORS (SIE1-SIE-01), KHATA NO. 76, PUNIA KI DHANI, SIKAR ROAD, NAWALGARH, DISTRICT – JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042  
PH :9992720360.

**NEEM KA THANA**

1916. JAMU AUTOMOBILES PVT LTD (K701-TV-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713  
PH :9529178046.

**NEEMRANA**

1917. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-OP-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705  
PH :9610715222,9636139386.

**NIMBAHERA**

1918. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTH1-CTH-01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601  
PH :97854 61267.

**NIWAI**

1919. K P AUTOMOTIVES PVT LTD (BLA1-BLA-01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT – TONK. - 304021  
PH :8696925262.

**NOHAR**

1920. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (VE02-VE-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523  
PH :0155-5221485,7412059821, 8875010541.

**NOKHA**

Dealer Workshop (AS ON 30.05.2023 )			
1921. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (I501-I5-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803 PH :7412059805.	1931. AJMER AUTO AGENCIES PVT. LTD. (CTL1-CTL-01), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT – AJMER, RAJASTHAN. - 305204 PH :9314955201.	1940. SHRI KRISHNA AUTOMOBILES (SGX1-SGX-01), NEAR RAILWAY GATE, BHINMAL ROAD ,RANIWARA, TEHSIL – RANIWARA, DISTRICT – JALORE, RAJASTHAN,PIN CODE: 343040 - 343040 PH :9928377669.	1949. KTL AUTOMOBILE PVT. LTD. (CVD1-CVD-01), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE , PHULERA ROAD , SAMBHAR 303604 - 303604 PH :7412077022.
<b>PADAMPUR</b>	<b>POKHRAN</b>	<b>RATANGARH</b>	<b>SANCHORE</b>
1922. DUDI MOTORS (SGC1-SGC-01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 - 335041 PH :8619215475.	1932. LMJ SERVICES (BOA1-BOA-01), SUNDER NAGAR, TEHSIL POKHRAN, DISTRICT – JAISALMER, RAJASTHAN. - 345021 PH :9610115660.	1941. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHJ1-BHJ-01), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331 022 PH :7412087301.	1950. SHRI KRISHNA AUTOSALES PVT LTD (GY01-GY-01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. - 343041 PH :9636224546.
<b>PALI</b>	<b>PRATAPGARH (RAJASTHAN)</b>	<b>RAWATBHATA</b>	<b>SANGARIA</b>
1923. LMJ SERVICES LTD. (6502-J9-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH :9269971266.	1933. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (PN01-PN-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605 PH :97723 78682.	1942. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (JQ01-JQ-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA , DIST. CHITTORGARH, RAJASTHAN. - 323307 PH :9001027933.	1951. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (GKK1-GKK-01), HANUMANGARH ROAD NEAR KARMA PETROL PUMP - 335035 PH :7412059827.
<b>PAOTA</b>	<b>RAIPUR</b>	<b>RAWATSAR</b>	<b>SANGOD</b>
1924. K P AUTOMOTIVES PVT LTD (BRH1-BRH-01), PATTI SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106 PH :6377203709, 6377203731.	1934. LMJ SERVICES LTD. (CRZ1-CRZ-01), NATIONAL HIGHWAY, PALI ROAD, VILLAGE – RAIPUR, DISTRICT – PALLI - 306304 PH :9269971266.	1943. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SDA1-SDA-01), CHAK 21-22,DWD,PLOT NUMBER -10 & 11, RAWATSAR (RAJASTHAN). - 335524 PH :9166712222, 9413311745.	1952. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (GLG1-GLG-01), KHASRA NO 1637 , SANGOD BAPAPAR MAIN ROAD ,SANGOD - 325601 PH :9251641358.
<b>PARBATSAR</b>	<b>RAISINGHNAGAR</b>	<b>REENGUS</b>	<b>SARDARSHAHR</b>
1925. SRI MANGLAM (SKT1-SKT-01), NEAR IFL HOUSING FINANCE CO, KISHAN - 341512 PH :8740909096.	1935. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHK1-BHK-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT – SRIGANGANAGAR. - 335051 PH :9982638516.	1944. JAMMU MOTORS (SGL1-SGL-01), REENGUS HIGHWAY , REENGUS DISTT. SIKAR -332404 - 332404 PH :9785030973.	1953. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BID1-BID-01), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDARSHAHR ROAD, SARDARSHAHR DISTT. CHURU, RAJASTHAN - 331403 PH :9799833995.
<b>PARTAPUR</b>	<b>RAJGARH</b>	<b>RENWAL MANJHI</b>	<b>SAWAI MADHOPUR</b>
1926. NAVNEET MOTORS (BKY1-BKY-01), AAASHAPURA CHAURAHA, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024 PH :94140 10306.	1936. MG MOTORS (IY01-IY-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH :9001795520.	1945. PREM MOTORS PVT. LTD. (GKZ1-GKZ-01), KHASRA NUMBER 2286/110,OPP ROHINI NAGAR 1 ,JAIPUR BHILWARA HIGHWAY ,RENWAL,TEHSIL PHAGI JAIPUR ,RAJASTHAN (303904). - 303904 PH :01414711118,9928494441.	1954. PREM MOTORS PVT. LTD. (FY03-FY-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001 PH :01414711118,9358725409.
<b>PHALODI</b>		<b>REVDAR</b>	<b>SAYALA</b>
1927. SHRI KRISHNA AUTOSALES PVT LTD (BOI1-BOI-01), OPP. RCP GUEST HOUSE, NAGAUR KHICHAN ROAD, PHALODI, RAJASTHAN - 342301 PH :9116011958.	1937. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGD1-CGD-01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, - 331023 PH :9602261977.	1946. TECHNOY MOTORS INDIA PVT. LTD. (CRY1-CRY-01), OPP. TIRUPATI PETROL PUMP, KAROTI ROAD, REVDAR, DISTT. SIROHI, RAJASTHAN. - 307514 PH :9530396882.	1955. AURIC MOTORS (SHM1-SHM-01), NEAR PETROL PUMP, HANUMAN MANDIR SOUTH STYLE, MAIN ROAD SAYALA, SAYALA TEHSIL – SAYALA, DISTRICT – JALORE, RAJASTHAN PIN CODE: 343022 - 343022 PH :9460739993.
<b>PHULERA</b>	<b>RAJSAMAND</b>	<b>SAGWARA</b>	<b>SHAHUPURA</b>
1928. KTL AUTOMOBILE PVT. LTD. (CUS1-CUS-01), KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338 PH :7412077022.	1938. LOHIA AUTOMOBILES (X201-X2-01), BHILWARA ROAD,KHANKROLI,RAJSAMAND DISTT, RAJSAMAND - 313301 PH :8306009399.	1947. TECHNOY MOTORS INDIA PVT. LTD. (CK01-CK-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025 PH :9694970143.	1956. K P AUTOMOTIVES PVT LTD (1104-NH-05), VILLAGE RAJ,PURA,GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103 PH :0141-4071111, 4071101,8696934964, 9358220012.
<b>PINDWARA</b>	<b>RAMGANJMANDI</b>	<b>SALUMBAR</b>	
1929. NAVNEET MOTORS (CQP1-CQP-01), OPPOSITE WOLKEM FACTORY, SIROHI ROAD, PINDWARA, DIST. - SIROHI. - 307022 PH :86197 44672.	1939. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BAZ1-BAZ-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH :9414085790.	1948. NAVNEET MOTORS (BZH1-BZH-01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT – UDAIPUR. - 313027 PH :76652 01980.	1957. LOHIA AUTOMOBILES (CCP1-CCP-01), OPPOSITE LIC OFFICE, BHILWARA ROAD, SHAHPURA DISTT. BHILWARA - 311404 PH :7568378555,9462979238.
<b>PIPAR</b>	<b>RANIWARA</b>	<b>SAMBHAR</b>	<b>SHEO</b>
1930. LMJ SERVICES LTD. (BTI1-BTI-01), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601 PH :9462616286.			
<b>PISANGAN</b>			

**Dealer Workshop (AS ON 30.05.2023 )**

1958. LMJ SERVICES LTD. (SDO1-SDO-01), NEAR RIDDI SIDDHI HOTEL , OPPOSITE HP PETROL PUMP ,TEH SHEO, DISTT – BARMER - 335521  
PH :8094011144.

**SIKAR**

1959. JAMU AUTOMOBILES PVT LTD (K701-K7-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001  
PH :9057400761.

**SIROHI**

1960. NAVNEET MOTORS (4902-LK-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001  
PH :9166261788.

**SIVANA**

1961. LMJ SERVICES LTD. (CCO1-CCO-01), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASTHAN - 344044  
PH :8005898360.

**SOJAT**

1962. LMJ SERVICES LTD. (BWI1-BWI-01), KHASRA NO. – 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104  
PH :9269971266.

**SRI DUNGARGARH**

1963. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIG1-BIG-01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT - BIKANER, RAJASTHAN. - 331803  
PH :9414138511.

**SRI KARANPUR**

1964. AURIC MOTORS (SDL1-SDL-01), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR, TEHSIL – SRI KARANPUR, DISTRICT – SRI GANGANAGAR, RAJASTHAN, PIN CODE: 335073 - 322243  
PH :8875088998.

**SRI MADHOPUR**

1965. JAMU AUTOMOBILES PVT LTD (BZD1-BZD-01), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR. - 332715  
PH :9672822166.

**SRIGANGANAGAR**

1966. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-U2-01), NEW AUTOMOBILE MARKET,SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001  
PH :0154-2465226,7412059837.

1967. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-U2-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001  
PH :8875911503.

**SUJANGARH**

1968. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BRB1-BRB-01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507  
PH :8875011561.

**SULTANPUR**

1969. SUWALKA MOTORS PRIVATE LIMITED (GKY1-GKY-01), KHASRA NUMBER 485, NEAR PETROL PUMP , SULTANPUR ROAD , SULTANPUR , DISTT KOTA - 325204  
PH :9116178594.

**SUMERPUR**

1970. LMJ SERVICES LTD. (6502-VC-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHAREA GROUND, SUMERPUR - 306902  
PH :8094002633.

**SURATGARH**

1971. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-LG-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804  
PH :8875012667.

**TONK**

1972. K P AUTOMOTIVES PVT LTD (GM01-GM-01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001  
PH :9549651972.

**TUNGA**

1973. PREM MOTORS (SMB1-SMB-01), VILLAGE GWALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL- BASSI, JAIPUR - 303302 - 303302  
PH :8058998123.

**UDAIPUR**

1974. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD, UDAIPUR - 313001  
PH :90017 58531.

1975. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002  
PH :95888 86349.

1976. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002  
PH :9414165429.

1977. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL – BADGAON, UDAIPUR, RAJASTHAN. - 313001  
PH :9530396896.

**VIRATNAGAR**

1978. K.P. AUTOMOTIVES PVT. LTD. (SCB1-SCB-01), KHASRA NUMBER 1156, OPP HOTEL GULMOHAR „JAIPUR ROAD ,VIRATNAGAR,DISTT JAIPUR - 303102  
PH :0141-4071111, 4071101,9358220012.

**SIKKIM**

**GANGTOK**

1979. ENTEL MOTORS (B901-B9-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102  
PH :9933031828  
9933032059.

**JORTHANG**

1980. ENTEL MOTORS (B901-B9-02), PIPEALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG – 737121  
PH :9733164882  
9933009934.

**TAMIL NADU**

**ALANDURAI**

1981. AADHI CARS PVT. LTD. (CTO1-CTO-01), NO.69/1 A, SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) - 641101  
PH :8754045816.

**ALANGULAM**

1982. AADHI CARS PVT. LTD. (SJF1-SJF-01), SURVEY NO. 495/7, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT, TN - 627851  
PH :8754044143.

**AMBASAMUNDRAM (AMBAI)**

1983. AADHI CARS PVT. LTD. (BXT1-BXT-01), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAIKULAM, AMBASAMUNDRAM. - 627 401  
PH :7397188858.

**ANAMALAI**

1984. ABT (CHE1-CHE-01), SITE NO. 6/12, NEAR ABT SAMUGA KODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642 104  
PH :9788174244.

**ANNUR**

1985. JAIKRISHNAA AUTOSALES PVT. LTD. (DN01-DN-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653  
PH :9788850733.

**ANTHIYUR**

1986. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUX1-CUX-01), SURVEY NO.495/4, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD,ANTHIYUR. - 638501  
PH :8754086777.

**ARAKKONAM**

1987. GANESH CARS PVT. LTD. (BKQ1-BKQ-01), SURVEY NO. 556A/3, VILLAGE – ICHIPUDHUR, TALUKA – ARAKKONAM, VELLORE. - 631003  
PH :9842345399.

**ARIYALUR**

1988. PILLAI & SONS MOTOR CO. (EB01-EB-01), NO.1/1 , NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704  
PH :04329-228300, 9442281302.

**ARNI**

1989. GANESH CARS PVT. LTD. (BKP1-BKP-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI , THIRUVANMALAI, TAMIL NADU. - 632301  
PH :958553266.

**ARUPPUKKOTTAI**

1990. ASIR AUTOMOBILES PVT LTD (CWF1-CWF-01), SURVEY NO. 205/1, 5/5C, NEHRU NAGAR, ARUPPUKKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKKOTTAI, DIST.-VIRUDHUNAGAR. - 626 101  
PH :9944059911.

**ATTUR**

1991. S.M.CAR PVT. LTD. (QT02-QT-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108  
PH :7094440057.

**AVADI**

1992. VISHNU CARS PVT. LTD. (5P01-5P-01), SURVEY NO. 146, 147/1F & 147/G, NO. 17 VILLAGE – KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT – THIRUVALLUR, CHENNAI, TAMIL NADU - 600054  
PH :7338888021, 7358024470.

**AVINASHI**

1993. SHASHTI CAR PVT LTD (CLK1-CLK-01), SURVEY NO. 373/1E, THEEKU THOTTAM, NALLIGOUNDANPALAYAM, PALANGARAI, KUPPODAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654  
PH :9942903319.

**BHAVANI**



1994. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-IG-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316  
PH :9597385777.

#### CHENGALPETTU

1995. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-BBS-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. - 603002  
PH :7299057387.

1996. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-BBS-02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU - 603202  
PH :7299057387.

#### CHENGAM

1997. GANESH CARS PVT. LTD. (BUP1-BUP-01), SURVEY NO. 293/3A, 3A1,VILLAGE - THUKAPETTAI, CHENGAM, DIST. -TIRUVANNAMALAI. - 606 701  
PH :7397395289.

#### CHENNAI

1998. ABT LIMITED (1401-14-01), 102, MOUNT ROAD, GUINDY, CHENNAI - 600032  
PH :044-42254544, 42254554.

1999. KHIVRAJ MOTORS PVT LTD. (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006  
PH :9043014530.

2000. CARS INDIA PVT. LTD. (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058  
PH :9952000089.

2001. CARS INDIA PVT. LTD. (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020  
PH :044-24462020.

2002. POPULAR VEHICLES & SERVICES LTD. (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117  
PH :9176906334, 9176906335, 9176906336.

2003. CARS INDIA PVT. LTD. (1403-14-03), 4/321, OLD MAHABALIKUPURAM RD. , KOTTIVAKKAM, CHENNAI - 600040  
PH :044-24540182 /43590913.

2004. POPULAR VEHICLES & SERVICES LTD. (1410-14-01), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093  
PH :9282405819, 9282348331, 8939915206.

2005. ABT LIMITED (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106  
PH :044-42267628/604.

2006. ABT LIMITED (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093  
PH :044-23650488, 23650490.

2007. ABT LIMITED (1401-14-06), NO. 1 & 2, VASANTHA PRESS,ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020  
PH :044-24465814 , 24465815.

2008. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD), (1493-14-01), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107  
PH :7305087055.

2009. ABT LIMITED (1411-14-01), 29, WALLES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058  
PH :044-42281707 / 714 / 719 / 720 / 721 / 737/.

2010. CARS INDIA PVT. LTD. (1403-FP-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066  
PH :9952000078.

2011. VISHNU CARS PVT. LTD. (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004  
PH :0427-24661973/7475.

2012. VISHNU CARS PVT. LTD. (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043  
PH :044-66813729/7338888000.

2013. POPULAR VEHICLES & SERVICES LTD. (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099  
PH :7448814726/23/33.

2014. CARS INDIA PVT. LTD. (1403-14-05), PLOT NO.- 80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112  
PH :9952000079.

2015. KHIVRAJ MOTORS PVT LTD. (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032  
PH :7299971978.

2016. ABT LIMITED (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. - 600041  
PH :044-24490584 / 585 /586.

2017. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-14-01), PLOT NO.1.2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115  
PH :7401211553.

2018. RAJALAKSHMI CARS PVT. LTD. (1486-14-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI. - 600060  
PH :8939995454/8939995404.

2019. KHIVRAJ MOTORS PVT LTD. (1480-14-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI - 600096  
PH :98414 23569.

2020. ABT LIMITED (1401-14-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119  
PH :044-24502185 / 87 / 88 / 89.

2021. VISHNU CARS PVT. LTD. (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089  
PH :8754440002/ 9677244332.

2022. VISHNU CARS PVT. LTD. (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056  
PH :9677127432.

2023. VISHNU CARS PVT. LTD. (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100  
PH :9840929994/ 9840944478.

2024. VISHNU CARS PVT. LTD. (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM – THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. - 600117  
PH :9940057775.

2025. VISHNU CARS PVT. LTD. (1427-14-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. - 600016  
PH :044-45590293.

2026. RAJALAKSHMI CARS PVT. LTD. (1486-14-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095  
PH :9841427572/9500125083.

2027. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD), (1493-14-03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058  
PH :7305087033.

2028. POPULAR VEHICLES AND SERVICES LTD (1410-14-06), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1C, 88/1B & 88/2B, NOOMBAL MAIN ROAD, VANAKARAM, CHENNAI. - 600 077  
PH :044-61343434, 46490006/9.

2029. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-14-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. - 600 049.  
PH :9841742926.

2030. VISHNU CARS PVT. LTD. (1427-14-07), SURVEY NO. 19/1A2, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. - 600069  
PH :95000 82346.

### Dealer Workshop (AS ON 30.05.2023 )

2031. VISHNU CARS PVT. LTD. (1427-14-08), SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI , TAMIL NADU. - 600 073  
PH :8056260022.

2032. ABT LIMITED (1401-14-10), S. NO: 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI - 600089, TN., - 600089  
PH :044-22320161, 8220011558.

#### CHEYEAR

2033. GANESH CARS PVT. LTD. (BUD1-BUD-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407  
PH :9787669339.

#### CHIDAMBARAM

2034. VISHNU CARS PVT. LTD. (CPK1-CPK-01), SURVEY NO. 102/2 & 102/5, BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU. - 608 602  
PH :041-44241334/7358004555.

#### COIMBATORE

2035. ABT LIMITED (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037  
PH :9944400987.

2036. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005  
PH :8220862666.

2037. ABT LIMITED (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043  
PH :96009 66056.

2038. ABT LIMITED (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATY COLONY, SOUTH UKKADAM, COIMBATORE - 641001  
PH :044-4232660, 4232666.

2039. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011  
PH :9047055967.

2040. JAKRISHNAA AUTOSALES PVT. LTD. (4107-41-01), 8/80-C&8/82-D, METTUPALAYAM ROAD, G.N.MILLS POST , NEARJOHNBOSCO CHURCH,COIMBATORE - 641029  
PH :044-4519140.

2041. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-07), NO.44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027  
PH :9655219900.

2042. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-08), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE. - 641013  
PH :9585877775.

**Dealer Workshop (AS ON 30.05.2023 )**

2043. JAIKRISHNAA AUTOSALES PVT. LTD.  
(4107-41-02), DOOR NO. 48, KAMARAJAR ROAD,  
LAKSHMIPURAM, PEELAMEDU, COIMBATORE,  
TAMIL NADU - 641004  
PH :0422-383220.
2044. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(4103-41-0D), 98/1 VILANKURICHI MAIN ROAD,  
THANEER PANDAL ROAD, COIMBATORE -  
641004  
PH :9655345775.
2045. AADHI CARS PVT. LTD. (4108-41-01), SURVEY  
NO.469/2,DOOR NO: 46-2,SATHY MAIN ROAD,  
RAMAKRISHNAPURAM, GANAPATHY,  
COIMBATORE - 641035  
PH :0422-4000600.
2046. ABT LIMITED (4101-41-0D), 36-A GANDHI  
NAGAR, SUNDARAPURAM, COIMBATORE (DIST)  
COIMBATORE - 641024  
PH :78457 74069.
2047. AADHI CARS PVT. LTD. (4108-41-02), NEAR  
KOVAL MEDICAL CENTRE & HOSPITAL,  
AVINASHI ROAD, CIVIL AERODROME POST,  
CHINNIYAMPALAYAM, COIMBATORE - 641004  
PH :0422-3007701.
2048. AADHI CARS PVT. LTD. (4108-41-03), NO.71. OLD  
SRIRAM THEATRE COMPLEX, MARUDHA MALAI  
MAIN ROAD, VADAVALLI, COIMBATORE - 641041  
PH :0422-3000201.
2049. AADHI CARS PVT. LTD. (4108-41-04), PLOT  
NO.295, RADHA RANI THEATER COMPLEX,  
NEAR JAYASHANTHI THEATER, TRICHY ROAD,  
ONDIPUDUR, COIMBATORE-. - 641005  
PH :0422-4000777.
2050. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(4103-41-0E), PLOT NO. 210, PALAKAD ROAD,  
BK PUDUR, COIMBATORE, TAMIL NADU. -  
641008  
PH :0422-2251225.
2051. AADHI CARS PVT. LTD. (4108-41-06), SF NO.  
14/78-A, RENUKA SHELTERS, VILANKURICHI  
MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL  
NADU-641048. - 641 006  
PH :8754045840.
2052. SREE SARADHAMBAL AUTOMOBILES PVT. LTD.  
(4103-41-11), PLOT NO. 1, RAJA STREET,  
KALLIMADAI, NANJAPPA NAGAR, COIMBATORE,  
TAMIL NADU - 641005  
PH :9344870035.
- COONOOR**
2053. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(3G01-3G-01), 78 E, BRINDAVAN SCHOOL ROAD,  
COONOOR, NILGRIS DIST- TN - 643102  
PH :95852 77775.
- CUDDALORE**
2054. ABT LIMITED (5Q01-SQ-01), K. V. SUBRAMANIAM  
NAGAR, CHIDAMBARAM MAIN ROAD,  
CUDDALORE O. T - 607003  
PH :04142-224567.

2055. VISHNU CARS PVT. LTD. (5Q02-SQ-01), SURVEY  
NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20,  
VILLAGE - PERIYA KANANGAKUPPAM,  
CUDDALORE - 607 001  
PH :7338884131.
- CUMBUM**
2056. MEENAKSHI AUTO ZONE PVT. LTD.  
(CJS1-CJS-01), PATTI NO. 4388, SURVEY NO.  
1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB  
DIST.-CUMBUM, TAMIL NADU. - 625516  
PH :9940094881.
- DEVAKOTTAI**
2057. SIVA AUTOMOTIVE TRADING PVT LTD  
(GKV1-GKV-01), SURVEY NO. 5/1A, MULL  
IGUNDU (SOMANENTHAL VILLAGE),  
DEVAKOTTAI TALUK, SIVAGANGAI  
DISTRICT,TAMILNADU - 630 303  
PH :7094688870.
- DHARAPURAM**
2058. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(H701-QN-04), OPP. TO ANJANEYAR TEMPLE,  
NEAR FIVE CORNER, MADURAI ROAD,  
DHARAPURAM - 638656  
PH :9597550777.
- DHARMAPURI**
2059. SRI AMMAN CARS INDIA PVT. LTD.  
(7Q01-SR-02), NEAR COLLECTOR BUNGALOW,  
OLD HOSUR ROAD, JETTIHALLI (PO),  
DHARMAPURI , TAMILNADU - 638807  
PH :9750938892/ 9159086222.
- DINDIGUL**
2060. PLA MOTORS (S401-S4-01), NO. 5, TRICHY  
MADURAI BY PASS ROAD, NH-45, DINDIGUL -  
624001  
PH :7010075200.
- EDAYARPALAYAM, COIMBATORE**
2061. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(CJK1-CJK-01), SITE NO. 2, SY. NO. 404/1A1,  
THADAGAM ROAD, TVS NAGAR,  
EDAYARPALAYAM, COIMBATORE. - 641025  
PH :9047081914.
- ERODE**
2062. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(H701-H7-01), 23/1, PERUND, URAI ROAD,  
ERODE, - 638011  
PH :9677987777.
2063. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(H701-H7-06), SURVEY NO. 1363/3, 1363/5,  
1363/6, BEHIND MANIKAVASAKAR COLONY BUS  
STOP, OPPOSITE TO CANARA BANK, KARUR  
BYPASS ROAD, SOLAR, ERODE. - 638 002  
PH :6385805777.

2064. SRI CITY AUTO (A UNIT OF CITY AUTO PVT  
LTD) (H702-H7-01), OLD G.S. NO. 337 (1 TO 4),  
RS NO. 259/11A,10,9.8., SATHY ROAD, PERIYA  
SEMUR VILLAGE, ERODE,TAMILNADU - 638003  
PH :9171791991.
2065. SRICITY AUTO (H702-H7-02), R.S. NO:1098/3,  
VINAYAGAR KOVIL STREET, TELEPHONE  
NAGAR, POONDURAI MAIN ROAD, ,ERODE,  
TAMILNADU - 638002  
PH :9626671444.
- GOBICHETTIPALAYAM**
2066. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(H701-QM-03), NO. 318, CUTCHERY,  
GOBICHETTIPALAYAM - 638476  
PH :9597560777.
- GUDIYATHAM**
2067. GANESH CARS PVT. LTD. (CQW1-CQW-01),  
SURVEY NO.250/1, NEAR NH-75, GANDHI  
NAGAR, SETHUVADAI, GUDIYATTAM. - 653803  
PH :04171-290172.
- GUDUVANCHERY**
2068. VISHNU CARS PVT. LTD. (BAD1-BAD-01), 52,  
THAILAVARAM VILLAGE, BEHIND HOTEL  
PATTIKADU, GUDUVANCHERRY,  
KANCHEEPURAM DISTT. - 603203  
PH :9500121553/ 9677122225.
- GUMMIDIPOONDI**
2069. RAJALAKSHMI CARS PVT. LTD. (BIZ1-BIZ-01),  
PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT  
INDUSTRIAL COMPLEX, VILLAGE -  
PAPPANAKUPPAM, GUMMIDIPOUNDI,  
THIRUVALLUR - 601201  
PH :044-27922060.
- HARUR**
2070. SRI AMMAN CARS INDIA PVT. LTD.  
(AAV1-AAV-01), 429/9, HARUR SALEM MAIN  
ROAD, HARUR POST, DHARMAPURI, TAMIL  
NADU - 636903  
PH :8220014360/7339071500.
- HOSUR**
2071. SRI AMMAN CARS INDIA PVT. LTD.  
(7Q01-7Q-01), P.O.- PERANDAPALLI,NH-7,  
KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU  
- 635109  
PH :9790036377/8883259555.
- IDAPPADI**
2072. THRIVENI CAR COMPANY PVT LTD. (HI01-HI-01),  
SURVEY NO.330/3B1B, AVANI PERUR  
KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM -  
637101  
PH :9003311488.
- KALLAKURICHI**

2073. ABT LIMITED (CHG1-CHG-01), SURVEY NO.  
215/4,NEAR AKT SCHOOL, DURUGAM ROAD,  
NEAR DOORDARSHAN BLDG,  
NEELAMANGALAM VILLAGE., KALLAKURICHI  
TALUK & DIST., TAMILNADU - 606 202  
PH :9047514890.
2074. S M CARS (CHG2-CHG-01), SF: 31/3B, NO. 19  
EMAPPER VILLAGE, KALLAKURICHI,  
TAMILNADU - 606213  
PH :7094440010.
- KANCHEEPURAM**
2075. GANESH CARS PVT. LTD. (C601-JA-02), ANBU  
NAGAR, DHIMMA SAMUDRAM POST, NEAR  
VELLA GATE, CHENNAI BANGALORE NH-4,  
KANCHEEPURAM - 631502  
PH :9842306061.
- KANGAYAM**
2076. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(GJI1-GJI-01), NO. 407/263, TIRUPPUR ROAD,  
KANGAYAM TALUK & TOWN, TIRUPPUR DIST.  
,TAMIL NADU. - 638701  
PH :7708531777.
- KARAIKUDI**
2077. ABT LIMITED (4202-HX-05), 42-43 KOVILLOOR  
ROAD, OPP. TNSTC DEPTO - 630302  
PH :4565-232484, 232486..
- KARUMATHAMPATTI**
2078. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(CJQ1-CJQ-01), SF: NO.281/B, NEAR BHARAT  
PETROL BUNK, VILLAGE - VAGUTHANKADU,  
SOMANUR ROAD, KARUMATHAMPATTI TOWN,  
TALUK-PALLADAM, DISTT. COIMBATORE. -  
641659  
PH :9159210008.
- KARUNGAL**
2079. ATHEN (SGE1-SGE-01), SURVEY NO. 639/5,  
KARUNGAL TOWN, VILAVANCODE TALUK,  
KANYAKUMARI DISTRICT, TAMILNADU - 629157  
PH :7094434179.
- KARUNGALPALAYAM, ERODE**
2080. SREE SARADAMBAL AUTOMOBILES PVT. LTD.  
(H701-H7-08), RF. NO. 17/1, 2, CAVERI ROAD,  
KARUNGALPALAYAM, ERODE ,TAMILNADU -  
638003  
PH :8098825000.
- KARUR**
2081. ABT LIMITED (K401-K4-01), SF NO. 529/1, SALEM  
BY PASS,ROAD, VENGAMEDU CIRCLE,  
SEMMADAI - 639002  
PH :04324-222261/62/63.
- KATPADI**
2082. GANESH CARS PVT. LTD. (C601-APA-04), 170/2B  
THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE,  
KATPADI, VELLORE DISTT. - 632004  
PH :9842313139.

## Dealer Workshop (AS ON 30.05.2023 )

### KATTUMANNARKOIL

2083. VISHNU CARS (SKG1-SKG-01), SURVEY NO. 6& 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOIL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301  
PH :7358004555.

### KELAMBAKKAM

2084. CRESCO (A UNIT OF NEXGEN VENTURE PVT LTD) (SJV1-SJV-01), AGP MAHAAL, SURVEY NO.43, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU - 603 103  
PH :7305087002.

### KINATHUKADAVU

2085. AADHI CARS PVT. LTD. (BBI1-BBI-01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109  
PH :0422-3000506/ 3000505.

### KODUMUDI

2086. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUY1-CUY-01), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI. - 638151  
PH :8754756777.

### KOTAGIRI

2087. AADHI CARS PVT. LTD. (BAS1-BAS-01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217  
PH :8754045891/ 8754045442.

### KOVILPATTI

2088. ASIR AUTOMOBILES PVT LTD (NO01-NO-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501  
PH :4632-232220.

### KRISHNAGIRI

2089. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-QL-03), NH-7.NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001  
PH :9500202416/ 8220004270.

### KUMBAKONAM

2090. PILLAI & SONS MOTOR CO. (E701-N4-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501  
PH :0435-2442566, 2442565, 9443264696.

### MADURAI

2091. ABT LIMITED (4202-42-02), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018  
PH :9994400615.

2092. ABT LIMITED (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005  
PH :9600966164.

2093. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016  
PH :7402780000.

2094. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. - 625003  
PH :7402788840.

2095. ASIR AUTOMOBILES PVT LTD (4206-42-01), D. NO. 28/5B, MELUR MAIN ROAD, UTHANKUDI, MADURAI. - 625107  
PH :9944059911.

2096. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008  
PH :9442799581.

2097. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-02), SURVEY NO. 239/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652 014  
PH :9940224881.

### MADURANTHAKAM

2098. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (CEW1-CEW-01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. - 603306  
PH :7401212797.

### MALLASAMUDRAM

2099. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CWY1-CWY-01), SF NO. 194/3C, MALLASAMUDRAM MAIN ROAD, MALLASAMUDRAM TOWN, TIRUCHENGODE TALUK, NAMAKKAL DIST., TAMIL NADU. - 637503  
PH :9894932019.

### MALLUR

2100. THRIVENI CAR COMPANY PVT LTD. (CDH1-CDH-01), SURVEY NO 50/4A, AMANI AMMAPALAYAM VILLAGE, DISTT.: DADHAGAPATTY SUB REGISTRATION , MALLUR DISTT. SALEM - 636309  
PH :0427-2422399.

### MANAMADURAI

2101. ABT LIMITED (CHF1-CHF-01), NO. 35, OLD RAMNAD ROAD, MANAMADURAI TOWN, DISTRICT – SIVGANGAI. - 630606  
PH :9994450331.

### MANAPPARAI

2102. PILLAI AND SONS MOTOR COMPANY (SKW1-SKW-01), PLOT NO.262, TRICHY DINDIGUL BYPASS ROAD, VENGAIKURUCHI VILLAGE,MANAPPARAI, TRICHY,TN - 621307  
PH :8489900908.

### MANGALAPURAM

2103. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CLX1-CLX-01), DOOR NO. 1/518, SURVEY NO. 75/1, ATTUR MAIN ROAD, MANGALAPURAM (POST), TALUK – RASIPURAM, DISTRICT – NAMAKKAL. - 636202  
PH :7094447871.

### MANNARGUDI

2104. PILLAI & SONS MOTOR CO. (BKR1-BKR-01), NO. 37, THIRUTHURAIPONDRI ROAD, MANNARGUDI, THIRUVARUR DISTRICT, TAMIL NADU. - 614001  
PH :7094411675.

### MAYILADUTHURAI

2105. PILLAI & SONS MOTOR CO. (E701-AG-04), 46,VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007  
PH :04364-251767, 251765, 9442141703.

### MECHERI

2106. SM CARS (CVK1-CVK-01), SURVEY NO. 139A/5, PATTI NO. 653, AMANI M.KALIPATTY VILLAGE, MECHERI TOWN, METTUR TALUK, SALEMN DIST., TAMIL NADU. - 636 453  
PH :7094440010.

### MELUR

2107. SIVA AUTOMOTIVE TRADING PVT. LTD. (CHC1-CHC-01), OLD SN. 138/1, SURVEY WARD C, BLOCK NO. 1, T.S. NO. 21/7, VILLAGE AND TOWN – MELUR, MELUR , DIST.-MADURAI. - 625109  
PH :8098120000.

### METTUPALAYAM

2108. ABT LIMITED (4101-EU-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043  
PH :95009 45094.

### MINJUR

2109. RAJALAKSHMI CARS PVT. LTD. (BPE1-BPE-01), PLOT NO. 27, SRI JANAKI RATHINA NAGAR, VILLAGE AND TOWN – MINJUR, PONNERI – 601 203, DISTRICT – THIRUVALUR. - 601203  
PH :044-27933331.

### NAGAPATTINAM

2110. PILLAI & SONS MOTOR CO. (CQQ1-CQQ-01), NO.181, KEELA ANTHANAPETTAI, ANTHANAPETTAI, P.O. - MANJAKOLLAI, PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU - 611106  
PH :4365220250.

### NAGARCOIL

2111. ATHEN (S503-S5-01), RESURVEY NO. G.3/9-7, BUILDING NO. 254-A/3 & 4 K.P ROAD ,PARAVATHIPURAM, NAGERCOIL ,KANYAKUMARI DISTRICT TAMILNADU - 629003  
PH :8012029777.

### NAMAKKAL

2112. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-X4-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL - 637001  
PH :937164888.

2113. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-X4-03), 1/412/1 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001  
PH :737192888.

### NATRAMPALLI

2114. GANESH CARS PVT. LTD. (SPR1-SPR-01), NO:8/12-1, NEAR ARJUNA SULOCHANA MAHAL, BENGALURU- CHENNAI MAIN ROAD,VELAKALNATHAM, NATRAMPALLI, TIRUPATTUR DIST. TAMIL NADU - 635854. - 635854  
PH :73977 53146.

### NEGAMAM

2115. ABT LIMITED (CHD1-CHD-01), 68, 69, ABT BUS STAND, PALLADAM ROAD, PERIA NEGAMAM, POLLACHI, TAMIL NADU - 642120  
PH :99948 76794.

### OMALUR

2116. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-UM-04), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012  
PH :8220010070/8883529888.

2117. THRIVENI CAR COMPANY PVT LTD. (UM01-UM-01), PLOT NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT, NH-7, KAMALAPURAM VILLAGE, OMALUR, DISTRICT – SALEM, TAMIL NADU - 636309  
PH :4290-222711.

### OOTY

2118. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-Y1-05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001  
PH :97511 09229.

### P.N. PALAYAM, COIMBATORE

2119. JAIKRISHNA AUTOSALES PVT. LTD. (4107-OH-04), NO.12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020  
PH :0422-698899.

### PADAPPAI

**Dealer Workshop (AS ON 30.05.2023 )**

2120. VISHNU CARS PVT. LTD. (CRO1-CRO-01),  
SURVEY NO.368/2A/1, 368/2A/2,  
VANDALLUR-WALAJABAD MAIN ROAD,  
PADAPPAL EAST, CHENNAI. - 601301  
PH :8754417168.

**PALANI**

2121. PLA MOTORS (S401-GLR-02), NO:13-1-11C-1,  
WEST AYAKUDI, DINDIGUL ROAD, PALANI,  
DINDIGUL DISTRICT, TAMIL NADU - 624613  
PH :04545-290900.

**PARAMATHIVELUR**

2122. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(CC01-CC-01), SURVEY NO. 171, NEAR KONGU  
SCHOOL, NAMAKKAL BYPASS ROAD,  
PADAMUDI PALAYAM, TALUKA –  
PARAMATHIVELUR, NAMAKKAL , TAMIL NADU. -  
638182  
PH :8870666599.

**PATTUKKOTTAI**

2123. PILLAI & SONS MOTOR CO. (CJA1-CJA-01),  
SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11,  
SRI JANAGALAKSHMI NAGAR, THANJAVUR  
ROAD, ALADIKUMULAI VILLAGE, TALUK  
PATTUKOTTAI, THANJAVUR. - 614615  
PH :7094433074.

**PAVITHRAM**

2124. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(TWT1-TWT-01), SURVEY NO. 102/1B,  
NAMAKKAL MAIN ROAD, PAVITHRAM - 637 021  
PH :9600320888.

**PENNAGARAM**

2125. SRI AMMAN CARS INDIA PVT. LTD.  
(BXZ1-BXZ-01), SURVEY NO. 419/1, VILLAGE –  
PARUVADHANAALLI, PENNAGARAM,  
DHARMAPURI. - 636810  
PH :9715044700.

**PERAMBALUR**

2126. PLA MOTORS (2305-DQ-04), SURVEY NO.88/1,  
A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR,  
TAMILNADU - 621212  
PH :8870004960.

**PERNAMBUT**

2127. SRI AMMAN CARS INDIA PVT LTD (CODE  
UNDER CREATIONS-CODE UNDER CREATIONS),  
SURVEY NO:706,PLOT NO: 87,88 & 89,  
PERNAMBUT TO GUDIYATTAM ROAD,  
PERNAMBUT,VELLORE DISTRICT, TAMIL NADU  
- 635810 - 635810  
PH :7094403100.

**PERUNDURAI**

2128. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(BTX1-BTX-01), SF NO.542/1, KOVAI MAIN ROAD,  
PERUNDURAI VILLAGE, PERUNDURAI DISTT.  
ERODE, TAMIL NADU - 638052  
PH :9597490777.

**POCHAMPALLI**

2129. SRI AMMAN CARS PVT. LTD. (CUW1-CUW-01),  
NEW SURVEY NO. 561/5, VILLAGE –  
JUMBUKUTTANPATTI, POCHAMPALLI,  
KRISHNAGIRI. - 635206  
PH :9600466988.

**POLLACHI**

2130. ABT LIMITED (L301-L3-01), NACHIMUTHU  
POLYTECHNIC CAMPUS, UDUMALPET ROAD,  
POLACHI - 642003  
PH :99944 53265.

**POLUR**

2131. GANESH CARS PVT. LTD. (GLV1-GLV-01),  
AZHAGO COMPLEX, SURVEY NO:77/1,  
CUDADALOR TO CHITTOOR ROAD, POLUR,  
THIRUVANNAMALAI DISTRICT,TAMILNADU -  
606803  
PH :9842345200.

**PUDUKOTTAI**

2132. PLA MOTORS (2305-SU-02), NO. 10,  
MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM  
ROAD, PUDUKOTTAI, - 622003  
PH :04322-265566/67.

**PUNJAI PULIAMPATTI**

2133. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(BKO1-BKO-01), SURVEY NO. 250/1, PANKAU  
PULIYAMPATTU MUNICIPALITY, PUNJAI  
PULIYAMPATTI - 638459, SATHY THALUK,  
ERODE. - 638459  
PH :6385810777.

**RAJAPALAYAM**

2134. MEENAKSHI (5V02–01), DOOR NO. 96, COTTON  
MARKET, TENKASI-MADURAI ROAD,  
RAJAPALAYAM, VIRUDHUNAGAR DIST.,  
TAMILNADU - 626117  
PH :9443785681.

**RAMANATHAPURAM**

2135. SIVA AUTOMOTIVE TRADING PVT. LTD.  
(0U02-0U-01), SURVEY NO. 172/1B2C, 172/2C,  
VILLAGE - ACHUNTHANVAYAL,  
ACHUNTHANGAL GROUP, TALUK -  
RAMANATHAPURAM, RAMANATHAPURAM. -  
623502  
PH :8098110000.

**RAMESHWARAM**

2136. SIVA AUTOMOTIVE (SKI1-SKI-01), NO:2307,  
SURVEY NO:279/3A, RAMNAD ROAD,  
ARIYANKADU, RAMESHWARAM,  
RAMANATHAPURAM DISTRICT, TAMILNADU -  
623529  
PH :7402788898.

**RANIPET**

2137. GANESH CARS PVT. LTD. (CJJ1-CJJ-01),  
SURVEY NO. 44/1, PLOT NO. 484, OPPOSITE TO  
THIRUNMALAI CHEMICALS, SIPCOT LAYOUT OF  
HOUSE SITES, SIPCOTS INDUSTRIAL  
COMPLEX, RANIPET , TAMIL NADU. - 632403  
PH :9842330388.

**RASIPURAM**

2138. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(BSJ1-BSJ-01), SURVEY NO:41/1 B1A,  
MOOLAKADU VILLAGE, MASAKALIPATTI,  
SALEM MAIN ROAD, RASIPURAM DISTT.  
NAMAKKAL - 637401  
PH :4286-231402/7539972888.

**SALEM**

2139. ABT LIMITED (4101-A2-03), 32 THAMANA  
CHETTY ROAD, ARISIPALAYAM, SALEM -  
636009  
PH :0427-4066988, 406999.  
2140. THRIVENI CAR COMPANY PVT. LTD.  
(A203-A2-01), 12/2E1, SUBRAMANIA NAGAR,  
2ND GATE, JUNCTION ROAD, SALEM. - 636005  
PH :0427-2440000.  
2141. S.M.CARS PVT. LTD. (A204-A2-01), SF NO.  
64/2C3, ATTUR SALEM BYPASS ROAD,  
PINANGUKARAR THOTTAM,  
SEELANIKANPATTY, SALEM. - 636202  
PH :7094448000, 7034449000.  
2142. THRIVENI CAR COMPANY PVT. LTD.  
(A203-A2-03), SURVEY NO. 57, VILLAGE -  
MASINAICKENPATTY, AYOTHIAPATTINAM,  
AMMAPET, SALEM. - 636103  
PH :0427-2291000.  
2143. S M CAR PRIVATE LIMITED (A204-A2-02), DOOR  
NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE  
MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE,  
HASTHAMPATTY, SALEM, TAMILNADU - 636007  
PH :7094440053.

**SANKAGIRI**

2144. THRIVENI CAR COMPANY PVT LTD.  
(BTN1-BTN-01), SURVEY NO.171/5B, KCK  
PLAZA, KACHERIDADU, DEPUTY COLLETCTOR  
ROAD, SALEM, SANKAGIRI (TAMIL NADU) -  
637301  
PH :+914283242600  
+914283242601.

**SANKARANKOVIL**

2145. AADHI CARS PVT. LTD. (BXS1-BXS-01), PLOT  
NO. 132/H, OPPOSITE TO NEW TALUK OFFICE,  
TIRUVENGADAM ROAD, SANKARANKOVIL. -  
627756  
PH :7397728025.

**SATHY ROAD, ERODE**

2146. SREE SARADAMBAL AUTOMOBILES PVT. LTD.  
(H701-H7-09), SF:NO:245, KANDHAIYAN  
THOTTAM, SOOLAI, SATHY ROAD,  
VEERAPPANCHATTIRAM, ERODE, TAMILNADU -  
638004  
PH :9655240486.

**SATHYAMANGALAM**

2147. SREE SARADHAMBAL AUTOMOBILES PVT LTD  
(BGU1-BGU-01), SURVEY NO. 51, 54 & RS NO.  
37, KOTTUVEERAMPALAYAM VILLAGE,  
SATHYAMANGALAM – 638 401, DISTRICT –  
ERODE, TAMIL NADU - 638401  
PH :9597592777.

**SATTUR**

2148. MEENAKSHI AUTO ZONE PVT. LTD.  
(SDR1-SDR-01), SURVEY NO.  
18/10,CHATRAPATTI VILLAGE, MADURAI  
KANYAKUMARI NATIONAL HIGHWAYS,  
SATTUR, VIRUDHUNAGAR  
DISTRICT,TAMILNADU - 626203  
PH :9940094881.

**SEYDUNGANALLUR**

2149. ASIR AUTOMOBILES PVT LTD (S603-GJG-02),  
SURVEY NO. 59/3E, TIRUCHENDUR ROAD,  
SEYDUNGANALLUR TOWN, TALUK -  
SRIVAIKUNTAM, TUTICORIN DIST., TAMIL  
NADU. - 628809  
PH :8344992220.

**SHOLINGUR**

2150. GANESH CARS PVT. LTD. (GLU1-GLU-01),  
NO:401, ARAKKONAM MAIN ROAD,OPPOSITE  
TVS FOUNDARY,  
PANDIYANELLORE,SHOLINGHUR,WALAJA  
TALUK, RANIPET DISTRICT, TMLANADU -  
631102  
PH :7397395259.

**SIVAKASI**

2151. MEENAKSHI AUTO ZONE PVT. LTD.  
(X602-X6-01), 372 D & E, ARUNACHALAM  
COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. -  
626123  
PH :4562-231281.

**SRIPERUMBUDUR**

2152. RAJALAKSHMI CARS PVT. LTD. (7B01-7B-01),  
SURVEY NO. :50/1A, DOOR NO 1C, THERADI  
STREET, NEW VILLAGE NO 42,  
SRIPERUMBADUR, KANCHEEPURAM DISTRICT,  
TAMIL NADU. - 602105  
PH :8939995469.

**Dealer Workshop (AS ON 30.05.2023 )**

**SRIVILLIPUTHUR (RAJAPALYAM)**

2153. ABT LIMITED (4202-5V-03), NO. 10/32, PADIKKASUVAITHANPATTI , NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125  
PH :95009 05020.

**SULUR**

2154. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-TK-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR - 641 402  
PH :0422-3199901.

**TENKASI**

2155. AADHI CARS PVT. LTD. (BXR1-BXR-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE – KUNARAMANALLUR, TENKASI. - 627814  
PH :9500991475.  
2156. AADHI CARS PVT. LTD. (BXR1-BXR-02), DOOR NO. 47, MADHALAMPARAI, TENKASHI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU. - 627 814  
PH :9500991475.

**THAMMAPATI**

2157. SM CARS (SNH1-SNH-01), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI,SALEM DISTRICT, TAMILNADU - 636113. - 636113  
PH :7094440010.

**THANJAVUR**

2158. PILLAI & SONS MOTOR CO. (E701-E7-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU - 613007  
PH :04362-271723, 271724, 9443264164.

**THARAMANGALAM**

2159. THRIVENI (CSQ1-CSQ-01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST. ,TAMIL NADU. - 636501  
PH :9159355999/9003504760.

**THENI**

2160. MEENAKSHI AUTO ZONE PVT. LTD. (9U02-9U-01), DOOR NO. 871/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT – THENI - 625531  
PH :9789703881.

**THIRUMULLAIVOYAL**

2161. CRESKO (A UNIT OF NEXGEN VENTURES PVT LTD). (CDW2-CDW-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULAIVOYAL DISTT. CHENNAI - 600062  
PH :7305087044.

**THIRUVALLUR**

2162. KHIVRAJ MOTORS PVT LTD. (1404-HH-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001  
PH :99520 78443.

2163. KHIVRAJ MOTORS PVT LTD. (1404-HH-05), PLOT NOS.218,219,220,225,226,227,228 AND S.NOS.18/5,18/6, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001  
PH :97103 94818.

**THIRUVANNAMALAI**

2164. GANESH CARS PVT. LTD. (C601-LX-03), NO.-5, NH-78, KRISHANAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601  
PH :9842305072.

**THIRUVARUR**

2165. PILLAI & SONS MOTOR CO. (E701-LJ-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001  
PH :04366-250250, 9442163707.  
2166. PILLAI & SONS MOTOR COMPANY (LJ01-LJ-01), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 601/6B1, SUNDARAVILAGAM, NARSINGHAMPET, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001  
PH :9442163509.

**THISAYANVILLAI**

2167. AADHI CARS PVT. LTD. (CVL1-CVL-01), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI. - 627 657  
PH :7339511187.

**THUCKALAY**

2168. ATHENS (BWQ2-BWQ-01), DOOR NO. 5/76B, (RE SURVEY NO-530/7) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE – MUTHALAKURUCHI, KALKULAM-TALUK, THUCKALAY, DISCTRICT – KANYAKUMARI, TAMILNADU - 629174  
PH :8012029888.

**THURAIYUR**

2169. PLA MOTORS (CSE1-CSE-01), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010  
PH :9486763725.

**TIRUCHENDUR**

2170. ASIR AUTOMOBILES PVT LTD (CCJ1-CCJ-01), SURVEY NO. 220/1D1A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215  
PH :7373900220.

**TIRUCHENGODE**

2171. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-OP-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE - 637001  
PH :4288-282292.

**TIRUNELVELI**

2172. AADHI CARS PVT. LTD. (A303-A3-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI , TAMIL NADU - 627357  
PH :9500991610.  
2173. AADHI CARS PVT. LTD. (A303-A3-03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU. - 627 011.  
PH :9500991610.

**TIRUNVELI**

2174. AADHI CARS PVT. LTD. (A303-A3-04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU - 627001  
PH :95009 91479.

**TIRUPATHUR**

2175. GANESH CARS PVT. LTD. (BPD1-BPD-01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601  
PH :9842308909.

**TIRUPATTUR( SIVAGANGAI)**

2176. ABT LIMITED (CHH1-CHH-01), DOOR NO. 8/2/29A, KARAIKUDI ROAD, TIRUPATHUR, DISTRICT – SIVAGANGAI. - 630211  
PH :9994450331.

**TIRUPUR**

2177. ABT LIMITED (4101-Y7-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR - 641601  
PH :95009 98368.  
2178. SHASHTI CAR PVT LTD (Y701-Y7-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604  
PH :044-2430275/ 2430276.

**TIRUTHANI**

2179. CARS INDIA PVT. LTD. (CIC1-CIC-01),NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI,TAMILNADU - 631209  
PH :7358773860.

**TIRUVANNAMALAI**

2180. SRI AMMAN CARS INDIA PVT LTD. (LX02-LX-01), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601  
PH :7094471293.

**TONDI**

2181. SIVA AUTOMOTIVES (SHW1-SHW-01), SURVEY NO: 85/16, WARD 10/78, SOUTH THOPU STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU - 623409  
PH :7402788820.

**TRICHY**

2182. ABT LIMITED (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY - 620001  
PH :0431-4221620.  
2183. PLA MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009  
PH :9994599777/9600950960.  
2184. ABT LIMITED (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005  
PH :0431-4221555.  
2185. PLA MOTORS (2305-23-03), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001  
PH :0431-2411540/530.  
2186. PILLAI & SONS MOTOR CO. (2306-23-01), SURVEY NO. 10B, 1A/D, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY. - 620002  
PH :8489900902, 9384826814.

**TUTICORIN**

2187. ASIR AUTOMOBILES PVT LTD (S603-S6-01), SURVEY NO. 25/1B, MAPPELLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002  
PH :7373501220.

**UDUMALPET**

2188. ABT LIMITED (QR01-QR-01), 2/3, PERIYAKOTTAI PRIVU, S.V. MILL POST, UDUMALPET - 642126  
PH :99944 41645.

**UTHANGARAI**

2189. SRI AMMAN CARS INDIA PVT. LTD. (CFY1-CFY-01), SURVEY NO. 104/1, 104/1B, VILLAGE – THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304  
PH :9715044600.

**UTHUKOTTAI**

2190. KHIVRAJ MOTORS PVT LTD. (CUC1-CUC-01), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602 026  
PH :7299635536.

**VALLIYUR**

2191. AADHI CARS PVT. LTD. (BXQ1-BXQ-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE. VADAKKU VALLIOOR, PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002  
PH :7373091462.

**VANDAVASI**

**Dealer Workshop (AS ON 30.05.2023 )**

2192. GANESH CARS PVT. LTD. (CRN1-CRN-01), SURVEY NO.272, KEELSATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408  
PH :7395802484.

**VANIYAMBADI**

2193. GANESH CARS PVT. LTD. (BJY1-BJY-01), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801  
PH :9842327709.

**VELLORE**

2194. GANESH CARS PVT. LTD. (C601-C6-01), 91 NEW BY-PASS ROAD, VELLORE - 632004  
PH :9842377110.

2195. SRI AMMAN CARS INDIA PVT. LTD. (C602-C6-01), DOOR NO. 68, SURVEY NO. 66/7, NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUKA, GANDHINAGAR, VELLORE DIST., TAMIL NADU. - 632006  
PH :7094471320, 7094471321.

2196. SRI AMMAN CARS INDIA PVT. LTD. (C602-C6-02), SURVEY NO. 316/3B2, 316/8A, 316/8B, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE,VELLORE TALUK & DIST. ON NH48 (CHENNAI – BENGALURU HIGHWAY), VELLORE, TAMILNADUR - 632010  
PH :7094471320.

**VILLUPURAM**

2197. ABT LIMITED (5Q01-QQ-02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602  
PH :04146-225509 / 225590.

**VIRUDHACHALAM**

2198. ABT LIMITED (BMA1-BMA-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101  
PH :04143-262631/262632/262633.

**VIRUDHUNAGAR**

2199. MEENAKSHI AUTO ZONE PVT LTD (SCF1-SCF-0A), DOOR NO:6/504, SURVEY NO. 11/6, PELAMPATTI VILLAGE,VIRUDHUNAGAR MADURAI HIGH WAY,OPPOSITE TO VVV COLLEGE ., TALUK & DIST. VIRUDHUNAGAR, TAMILNADU - 626001  
PH :9940094881.

**TAMILNADU**

**CHENNAI**

2200. VISHNU CARS (1488-14-01), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTHANGAL, CHENNAI,TN - 600032  
PH :7550360444.

**CHENNAI- MAMBAKKAM**

2201. KHIVRAJ MOTORS (1404-14-G1), SURVEY NO:76/A, NO-27, PLOT NO. D-2, KEELAKOTTAYUR, VANDALUR TO KELAMBAKKAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI,TN - 600127  
PH :9841591558.

**CHETPET**

2202. GANESH CARS (SGY1-SGY-01), DOOR NO: 35/C, CHETPET TOWN, CHETPET TALUKA, TIRUVANNAMALAI DIST.,TAMILNADU, - 606 801  
PH :98423 06337.

**CHINNAMANUR**

2203. ABT LIMITED (SKX1-SKX-01), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO.8/15, PERIYAKULAM TO CHINNAMANUR MAIN ROAD,KEELAPOOLANANDHAPURAM, CHINNAMANUR MUNICIPAL TOWN & TALUK, THENI DIST.,TN - 625515 - 625515  
PH :9715863213.

**DENKANIKOTTAI**

2204. AMMAN CARS (SDT1-SDT-01), SURVEY NO:766/ 1B11, THABILAGOUNDAN THOTTI, DENKANIKOTTAI , KRISHNAGIRI DISTRICT, TAMILNADU - 635107  
PH :9585599935.

**GANGAVALI**

2205. THRIVENI CARS (SOS1-SOS-01), SURVEY NO # SF NO. 22/3A1A,106 ATTUR MAIN ROAD,GANGAVALLI,SALEM, TN - 636105  
PH :9159722999.

**KAWALKINARU**

2206. AADHI CARS PVT. LTD. (CSU1-CSU-01), SURVEY NO:1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAVALKINARU JUNCTION, KAVALKINARU (VADAKANKULAM), TIRUNELVELI, - 627105  
PH :7339111259.

**KUMBAKONAM**

2207. PILLAI AND SONS MOTOR CO. (E701-E7-06), D. NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO, THIRUBHUVANAM TOWN & POST, KUMBAKONAM, THANJAVUR DISTRICT, TAMILNADU - 612103  
PH :8489900136.

**NEYVELI**

2208. VISHNU CARS (CPN1-CPN-01), SURVEY NO:5452A1A, NH-45C, OPP. NATIONAL COLLEGE,KUMBAKONAM - CHENNAI HIGH WAY, NEAR NEYVELI ARCH GATE, NEYVELI T.S. KEELAKOLLA, MARUNGUR POST,PANRUTI,CUDDALORE DISTRICT, TAMILNADU - 607103  
PH :9384059575.

**SIVAGANGAI**

2209. ASIR AUTOMOBILES (SDC1-SDC-01), S. NO: 144/1, SIVAGANGAI-THONDI ROAD, PAIYAURPILLAIVAYAL, SIVAGANGAI,TAMILNADU - 630561  
PH :9750372220.

**THANJAVUR**

2210. PLA MOTORS FIRM (E702-E7-01), SURVEY NO. 173/6B4, TRICHY-THANJAVUR ROAD, NANJIKOTTAI BYPASS, THANJAVUR, TAMILNADU - 613005  
PH :9344006433/9344003877.

**THOPPUR**

2211. SRI AMMAN CARS (SLU1-SLU-01), SITE NO. 422 /2A, BANGALORE TO SALEM HIGH WAY, AMMANI, THOPPUR VILLAGE & TOWN,NALLAMPALLI TK, DHARMAPURI DISTRICT, - 636352  
PH :9790004273.

**TINDIVARAM**

2212. VISHNU CARS (SDI1-SDI-01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM,TAMILNADU - 604102  
PH :9500039023.

**TIRUPPUVANAM**

2213. MEENAKSHI AUTO ZONE PVT LTD (CODE UNDER CREATIONS-CODE UNDER CREATIONS), NO.21,BAKHYA NAGAR, WARD NO-1, MANDAPAM MAIN ROAD, TIRUPPUVANAM, SIVAGANGA DISTRICT, TAMIL NADU - 630611  
PH :9442799581.

**UTHIRAMERUR**

2214. AIE CARS (SHG1-SHG-01), SURVEY NO:383/3B-B2, UTHIRAMERUR MAIN ROAD, UTHIRAMERUR, KANCHEEPURAM DISTRICT, TAMILNADU - 603406  
PH :7299057387.

**VELLAKOVIL**

2215. SRI CITI AUTO (SGO1-SGO-01), SURVEY NO:502/C &371/D, NO. 196,197,KOVAI KARUR MAIN ROAD, VELLAKOVIL, TIRUPUR DIST. , TAMILNADU - 638111  
PH :9994606000.

**TELANGANA**

**ADILABAD**

2216. ADARSHA AUTOMOTIVES PVT LTD (BTM1-BTM-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001  
PH :9133307724.

**ARMUR**

2217. VARUN MOTORS PVT. LTD. (BBN1-BBN-01), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224  
PH :8142281424  
9052901888.

**BATCHUPALLY , HYDERABAD**

2218. SAI SERVICE PRIVATE LIMITED (1011-10-09), SURVEY NO 499/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090  
PH :7330771111.

**BHUPALAPALLY**

2219. ADARSHA AUTOMOTIVES PVT LTD (D502-BCF-04), 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169  
PH :7799790526.

**BODHAN**

2220. VARUN MOTORS PVT. LTD. (O801-O8-01), PLOT NO. 5/2, ACHANAPALLY CROSS ROAD, OPP : APNA FUNCTION HALL, BODHAN, DIST. -NIZAMABAD, TELANGANA. - 503 185  
PH :9581966691  
8142077222.

**CHEVELLA**

2221. GEM MOTORS (INDIA) PVT. LTD. (CBL1-CBL-01), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. - 510101  
PH :9912899128, 9912834567.

**ETUNAGARAM**

2222. WIN MOTORS (SQJ1-SQJ-01), H.NO 12-412 & 12-413,AKULAVARI GHANPUR, ETURNAGARAM, MULUGU DISTRICT,TELANGANA - 506165  
PH :6888828005.

**GADWAL**

2223. SRI JAYARAMA MOTORS PVT. LTD. (WP01-BHR-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125  
PH :8096990074, 8096996671.

**GAJWEL**

2224. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYU1-BYU-01), SURVEY NO. 220, VILLAGE – PRAGNAYPUR, GAJWEL, DISTRICT – MEDAK, TELANGANA. - 502311  
PH :8885088071.

**GHATKESAR**

2225. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYL1-BYL-01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY. - 501301  
PH :8885088075.

## Dealer Workshop (AS ON 30.05.2023 )

### HUSNABAD

2226. ADARSHA AUTOMOTIVES PVT LTD  
(GJE1-GJE-01), SURVEY NO. 202/E, H. NO.  
12-1/4 & 12-1/A, VILLAGE & MANDAL -  
HUSNABAD, DIST.-SIDDIPET, TELANGANA. -  
505467  
PH :8886092222, 7995835552.

### HYDERABAD

2227. THE MITHRA AGENCIES (1002-10-01), 1-8-670,  
NEAR RTC CROSS ROAD,AZAMABAD  
INDUSTRIAL AREA, HYDERABAD, - 500020  
PH :9966838294.  
2228. RKS MOTORS PVT. LTD. (1003-10-01), SABOO  
TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA,  
HYDERABAD - 500482  
PH :040 44454443, 9010811166.  
2229. RKS MOTORS PVT. LTD. (1003-10-02), B-4/A,IDA  
BLOCK, INDUSTRIAL ESTATE,UPPAL,  
HYDERABAD - 500039  
PH :040 23434504, 9010822210.  
2230. VARUN MOTORS PVT. LTD. (4603-10-04), B-11  
CO-OPERATIVE INDUSTRIAL ESTATE,  
BALANAGAR, HYDERABAD, - 500037  
PH :9885208555, 9985745222.  
2231. VARUN MOTORS PVT. LTD. (4603-10-08),  
ADITYA NAGAR COLONY, ,ADITYA NAGAR  
COLONY, TOLICHOWKI, SHAIKPET (VILLAGE,  
HYDERABAD, HYDERABAD - 500008  
PH :64551700, 8886114856.  
2232. VARUN MOTORS PVT. LTD. (1010-10-01), PLOT  
NO. VI- VII A & B,UNDER WARD NO. 10,  
AUTONAGAR, VANASTALIPURAM, HYDERABAD,  
R. R. DISTT - 500070  
PH :9885208555.  
2233. RKS MOTORS PVT. LTD. (1003-10-04), H. NO  
16-9-409/P,PLOT NO.4/1,4/2,SY.NO. 97,98,OLD  
MALAKPET OPP  
GOLNAKA BRIDGE,  
MOOSARAMBAGH,HYDERABAD - 500036  
PH :9010811192.  
2234. THE MITHRA AGENCIES (1002-10-03), PLOT NO.  
3-4-10,NEAR MADHAPUR POLICE STATION,  
MADHAPUR, HYDERABAD - 500081  
PH :04023113399  
04023113388  
9959912702.  
2235. RKS MOTORS PVT. LTD. (1003-10-05),  
11-6-191/192,OPP. HOTEL HARSHA,PUBLIC  
GARDEN ROAD, NAMPALLY, HYDERABAD -  
500001  
PH :9848811158.  
2236. VARUN MOTORS PVT. LTD. (4603-10-06), SHOP  
NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31,  
MALAKAPET, HYDERABAD - 500036  
PH :4553395, 4547676, 9885093360.

2237. VARUN MOTORS PVT. LTD. (4603-10-0A),  
1-11-200,SHAMALALA BUILDING BEGUMPET,  
HYDERABAD - 500016  
PH :9885206555.  
2238. THE MITHRA AGENCIES (1002-10-04), 8-18-138,  
PLOT NO. 8,NEAR MARGADARSI CHIT  
FUND,L.B. NAGAR RING ROAD, RR  
DIST,HYDERABAD - 500074  
PH :9963551265.  
2239. GEM MOTORS (INDIA) PVT. LTD. (1009-10-01),  
RAGHUVENDRA  
SOCIETY,KONDAPUR,,HYDERABAD , ANDHRA  
PRADESH - 500084  
PH :9912899128.  
2240. GEM MOTORS (INDIA) PVT. LTD. (1009-10-02),  
2-11, SURVEY NO: 165,172,HYDERNAGAR,  
KUKATPALLY, HYDERABAD, ANDHRA PRADESH  
- 500072  
PH :9912344538.  
2241. SAI SERVICE PRIVATE LIMITED (1011-10-01),  
6-6-29/5/1/NR, VIMANA PURI, QUTHBULLAPUR,  
HYDERABAD, TELANGANA 500055 - 500055  
PH :9010827755.  
2242. THE MITHRA AGENCIES (1002-10-05), PLOT NO.  
19,20 & 21,ROAD NO. 10,IDA NACHARAM,  
HYDERABAD - 500076  
PH :04027176999  
04027177999  
9963551267.  
2243. VARUN MOTORS PVT. LTD. (1012-10-01),  
MARUTI AUTHORISED DEALER, SURVEY  
NO.115, IT PARK, NANAKRAMGUDA,  
GACHIBOWLI, HYDERABAD - 500008  
PH :9985104860, 69997979.  
2244. RKS MOTORS PVT. LTD. (1003-10-08),  
D.NO.1-10-1/285/1, OPP. VEGITABLE MARKET,  
ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD  
- 500062  
PH :7799779810.  
2245. SAI SERVICE PRIVATE LIMITED (1011-10-04),  
H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR,  
HYDERABAD. - 500059  
PH :7799352000.  
2246. VARUN MOTORS PVT. LTD. (4603-10-0G),  
1-10-28/1 SY. NO.285, KUSHAIGUDA, NEAR ECIL  
X ROADS, HYDERABAD - 500062  
PH :7799600093.  
2247. VARUN MOTORS PVT. LTD. (4603-10-0H), PLOT  
NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL  
PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA  
PRADESH - 500033  
PH :8886322776.  
2248. VARUN MOTORS PVT. LTD. (4603-10-0J), PLOT  
NO. 1-45, SY.NO.1 TO 7, GOPINATH COMPLEX,  
TARANAGAR, LINGAMPALLY, HYDERABAD,  
RANGAREDDY DISTRICT, TELANGANA STATE -  
500019  
PH :8886067847.

2249. SAI SERVICE PRIVATE LIMITED (1011-10-07),  
PLOT NO.B-21 & B-34, BHEL ANCILLARY  
INDUSTRIAL ESTATE, RAMACHANDRAPURM,  
HYDERABAD - 502032  
PH :9703811411.  
2250. ADARSHA AUTOMOTIVES PVT LTD (1014-10-01),  
18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA  
"X" ROAD, HYDERBAD - 500005  
PH :8142326633.  
2251. RKS MOTORS PVT. LTD. (1003-10-09), SURVEY  
NO.434, 5-5-33/19, BEHIND HUDA TRUCK  
PARKING, KUKATPALLY, DISTT: RANGAREDDY,  
HYDERABAD - 500072  
PH :9010811131.  
2252. SAI SERVICE PRIVATE LIMITED (1011-10-08),  
DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE,  
SANATH NAGAR, HYDERABAD. - 500018  
PH :7799360003.  
2253. KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT  
NO. A-23 & A31/1, I.D.A, NACHARAM,  
HYDERABAD. - 500076  
PH :91000 56490.  
2254. GEM MOTORS (INDIA) PVT. LTD. (1009-10-03),  
SURVEY NO. 135/A & 135/AA, MANIKONDA,  
RAJENDRA NAGAR MANDAL, RANGAREDDY  
DISTRICT, HYDERABAD, TELANGANA. - 500089  
PH :9912341524.  
2255. ADARSHA AUTOMOTIVES PVT LTD (1014-10-02),  
H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD,  
HYDERABAD. - 501218  
PH :9603296633.  
2256. JAYABHERI AUTOMOTIVES PVT. LTD.  
(1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI  
ENCLAVE CB SQUARE, VILLAGE –  
GACHIBOWLI, SHERLINGAMPALLY MNADAL,  
HYDERABAD, TELANGANA STATE. - 500032  
PH :9100909401.  
2257. JAYABHERI AUTOMOTIVES PVT. LTD.  
(1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39  
& 40, NEAR N CONVENTION CENTRE,  
KHANAMET, HYDERABAD, SHERLINGAMPALLY  
MANDAL, HYDERABAD. - 500081  
PH :7799916666.  
2258. KALYANI MOTORS PVT. LTD. (1018-10-02), M/S  
VIDHATA BINNY MODERN RICE MILL, BEARING  
NO. 8-4-15 IN SURVEY NO. 239 & 240 OF  
VILLAGE – KARMANGHAT, MANDAL –  
SAROORNAGAR, DISTRICT – RANGA REDDY,  
HYDERABAD. - 500079  
PH :9100222377.  
2259. ADARSHA AUTOMOTIVES PVT LTD (1019-10-01),  
H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI  
(PILLER NO. 185 OF P.V. NARSIMHA RAO  
EXPRESSWAY), RAJENDRANAGAR,  
UPPERPALLY, ATTAPUR, RANGA REDDY,  
HYDERABAD, TELENGANA - 500048  
PH :9705436633, 8297426633.

2260. THE MITHRA AGENCIES (1002-10-06), SURVEY  
NO.57, D.NO.8-2-108, BIRAMALGUDA,  
KARMANGHAT NAGARJUN SAGAR ROAD,  
HYDERABAD, TELANGANA. - 500079  
PH :8886621232.  
2261. VARUN MOTORS PVT. LTD. (4603-10-0M), KSN  
GARDENS, 5-162/6, BORABANDA MAIN ROAD,  
HYDERABAD. - 500018  
PH :9885579623.  
2262. JAYABHERI AUTOMOTIVES PVT. LTD.  
(1017-10-03), SURVEY NO.283, PLOT NO.D-46 &  
47, PHASE-V, IDA, JEEDIMETLA,  
QUTUBULLAPUR MANDAL, RANGA REDDY  
DISTT., HYDERABAD (TELANGANA). - 500055  
PH :7799784567.  
2263. ADARSHA AUTOMOTIVES PVT LTD (1014-10-03),  
SURVEY NO. 220/A, AMBEDKAR ROAD, OPP  
HERITAGE FRESH, NEAR AMBAEDKAR  
STATUE, NEAR ALWAL, SECUNDERABAD. - 500  
010  
PH :9291859954.  
2264. KALYANI MOTORS PVT. LTD. (1018-10-03),  
SURVEY NO. 305, NIZAMPET, MANDAL -  
QUTUBULLAPUR, DIST.-RANGA REDDY,  
HYDERABAD. - 500 072  
PH :72079 33677.  
2265. THE MITHRA AGENCIES (1002-10-07), SURVEY  
NO.12,13,14& 15, MEDIPALLY, GHATKESAR  
MANDAL, RANGA REDDY DISTRICT,  
HYDERABAD, TELANGANA - 500098  
PH :8886697954.

### IBRAHIMPATNAM

2266. PAVAN MOTORS PVT. LTD (CSF1-CSF-01),  
S.NO.123/E, MPP PATELGUDA,  
IBRAHIMPATNAM, RANGA REDDY - 501506  
PH :8790144499.

### JAGTIAL

2267. ADARSHA AUTOMOTIVES PVT LTD  
(N601-NU-04), HOUSE NO.-1-5-216/A,OPPOSITE  
TO KVA SUBSTATION, KARIMNAGAR ROAD,  
JAGTIAL. - 505327  
PH :8886152222.

### JANGAON

2268. ADARSHA AUTOMOTIVES PVT LTD (K101-KI-01),  
H.NO.339, HYDERABAD ROAD, JANGAON. -  
506167  
PH :7799626633.

### KAMAREDDY

2269. VARUN MOTORS PVT. LTD. (KX01-KX-01),  
H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA  
COLONY, CHINNA MALLAREDDY VILLAGE,  
KAMAREDDY. - 503111  
PH :9985557570  
8142551166.

### KARIMNAGAR

**Dealer Workshop (AS ON 30.05.2023 )**

2270. ADARSHA AUTOMOTIVES PVT LTD  
(N601-N6-01), H.NO. 8-6-313/1, HYDERABAD  
ROAD, BY-PASS JUNCTION, KARIMNAGAR -  
505001  
PH :8886600315.
2271. ADARSHA AUTOMOTIVES PVT LTD  
(N601-N6-05), H.NO.8-6-301/18, BY-PASS ROAD,  
AUTONAGAR, KARIM NAGAR, TELANGANA. -  
505001  
PH :8886152222.
2272. VARUN MOTORS PVT. LTD. (N603-N6-01),  
BEARING NO. 1-81/3/10/2, SURVEY NO. 221 &  
222, REKURTHY VILLAGE,  
KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR  
MANDAL & DIST. , TELANGANA. - 505 001  
PH :8886619373.
2273. VARUN MOTORS (N603-N6-2), SURVEY NO.  
277,278/B, AREPALLY VILLAGE,  
TEEGALAGUTTAPALLI GRAM PANCHAYAT,  
KARIMNAGAR - 505001  
PH :91549 03258.

**KEESARA**

2274. JAYABHERI AUTO (SEI1-SEI-01), H-NO 3-56/9/6A,  
SURVEY NO 5, KEESARA,  
MEDCHAL-MALKAJIGIRI, TELANGANA - 501301  
PH :9676076666.

**KHAMMAM**

2275. MITHRA AUTO AGENCIES PVT LTD  
(2604-1G-02), SURVY NO. 182, WARANGAL  
ROAD, OPP. FCI GODOWNS, PEDA  
THANDA, KHAMMAM - 507003  
PH :8886063527.

**KODAD**

2276. PAVAN MOTORS PVT. LTD (BRP2-BRP-01),  
SURVEY NO. 42, KOMARBANDA REVENUE  
LIMITED, KODAD , DISTRICT – NALGONDA,  
TELANGANA - 508206  
PH :8790902114.

**KOLLAPUR**

2277. SRI JAYARAMA (SHC1-SHC-01), SURVEY NO  
259/AA2, 259/E2, KOLLAPUR, NAGAR KURNOOL  
DISTRICT, TELANGANA - 509102  
PH :9985880015.

**KOTHAGUDEM**

2278. VARUN MOTORS PVT. LTD. (2603-HF-04), DOOR  
NO. 5-35/4/B, LAKSHMIDAVI  
PALLI, BHADRACHALAM ROAD, KOTTHAGUDEM  
- 507101  
PH :9581494499.

**MAHABUBABAD**

2279. ADARSHA AUTOMOTIVES PVT LTD  
(CQS1-CQS-01), SY. NO.38/A, MAHBUBABAD  
REVENUE VILLAGE AND MANDAL,  
MAHBUBABAD. - 506101  
PH :9177746333, 7799700525.

**MAHABUBNAGAR**

2280. SRI JAYARAMA MOTORS PVT. LTD.  
(WP01-WP-01), PLOT NO.C1 & C2, INDUSTRIAL  
ESTATE, METTUGADA, MEHBOOBNAGAR -  
504001  
PH :8096998846.

**MAHESHWARAM**

2281. ADARSHA AUTOMOTIVES PVT LTD  
(CQR1-CQR-01), (BEARING #5-187, SURVEY  
NO.:336/A1, VILLAGE & MANDAL:  
MAHESHWARAM DISTT. RANGA REDDY -  
501359  
PH :8142326633, 9703152222.

**MANCHERIAL**

2282. ADARSHA AUTOMOTIVES PVT LTD  
(N801-CM-03), BEHIND MAHINDRA TRACTORS  
SHOWROOM, BELLAMPALLY ROAD,  
MANCHIRIAL , DISTT. ADILABAD - 504208  
PH :8886302222.

**MEDAK**

2283. VARUN MOTORS PVT. LTD. (KF01-KF-01),  
SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK  
(MDL & TOWN) - 502110  
PH :9154953337.

**MEDCHAL**

2284. AUTOFIN LIMITED (CID1-CID-01), H. NO. 11-27/1,  
SURVEY NO.401, MEDCHAL VILLAGE AND  
MANDAL, DIST. - MEDCHAL. - 501401  
PH :8885040020.

**METAPALLY**

2285. ADARSHA (BJF1-BJF-01), SURVEY NO. 40/U/2  
CHOULAMADHI, METPALLY PIN CODE 505325 -  
505325  
PH :8886092222.

**MIRYALGUDA**

2286. PAVAN MOTORS PVT. LTD (WR01-WR-01),  
SURVEY NO-940 &943, (OPPOSITE TO MINA  
ENGINEERING COLLEGE) NARKETPALLY  
ADDANKI BY-PASS ROAD, MIRYALAGUDA  
,NALGONDA DISTRICT, ANDHRA PRADESH -  
508207  
PH :8790900399.

**MOINABAD**

2287. GEM MOTORS (INDIA) PVT. LTD.  
(CFN1-CFN-01), SURVEY NO. 70, PLOT NO. 4,  
VILLAGE AND GRAM PANCHAYAT – HIMAYATH  
NAGAR, MANDAL – MOINABAD, DISTRICT –  
RANGA REDDY. - 500075  
PH :9912899128, 7997994845.

**NAGARKURNOOL**

2288. SRI JAYARAMA MOTORS PVT. LTD.  
(EV01-EV-01), SURVEY NO.44/A AND 45/A,  
UYYALWADA VILLAGE, NAGARKURNOOL,  
TELANGANA - 509209  
PH :8096990074.

**NALGONDA**

2289. PAVAN MOTORS PVT. LTD (AN01-AN-01),  
CHERLAPALLY VILLAGE, NALGONDA ROAD,  
NALGONDA - 508001  
PH :8790902146.

**NARAYANKHED**

2290. VARUN MOTORS PVT. LTD. (CGI1-CGI-01), D.  
NO. 1-6-111/25/B/5/A/1, SY NO. 57/2, BHUMAN  
COLONY, GRAM PANCHAYAT & MANDAL -  
NARAYANKHED, DISTRICT – MEDAK,  
TELANGANA. - 502286  
PH :9885210555.

**NARAYANPET**

2291. SRI JAYARAMA MOTORS PVT. LTD.  
(BPG1-BPG-01), SURVEY NO. 468/4,  
MAHABUBNAGAR ROAD, NARAYANPET TOWN,  
DIST.-MAHABUBNAGAR, STATE - TELANGANA. -  
509210  
PH :8096997701, 7893177448.

**NARSAPUR**

2292. KALYANI MOTORS PVT. LTD. (SCX1-SCX-01),  
SURVEY NO 66, BLOCK  
NO-19, NARSAPUR, DISTRICT: MEDAK,  
TELANGANA. - 534275  
PH :9573179790.

**NIRMAL**

2293. ADARSHA AUTOMOTIVES PVT LTD  
(N601-AA-02), H. NO. 1-1-131, ,SHASTRINAGAR,  
,MANCHIRIAL ROAD, DISTT. ADILABAD,  
NIRMAL - 504106  
PH :8886342222.

**NIZAMABAD**

2294. VARUN MOTORS PVT. LTD. (1H02-1H-01), PLOT  
NO. GP 1-51/4/1, PANGARA  
BORGONAN, NIZAMABAD,  
TELANGANA - 503230  
PH :8297848999, 9052080444.

**PALWANCHA**

2295. VARUN MOTORS PVT. LTD. (HF01-CSS-01),  
SURVEY NO.758 & 757, NEHRU NAGAR,  
PALWANCHA (NEW POLANCHA) MANDAL &  
TOWN, BHADRADRI KOTHAGUDEM DISTT.,  
TELANGANA. - 507115  
PH :9642225288.

**PARGI**

2296. VARUN MOTORS PVT. LTD. (CBO1-CBO-01),  
HOUSE NO. 2-356 JANGAIAH COMPLEX,  
SURVEY NO. 217/EE4, JAYANTHI NAGAR  
COLONY, MANDAL – PARGI, DISTRICT – RANGA  
REDDY. - 510501  
PH :988521055, 9885200000.

**PARKAL**

2297. ADARSHA (SEK1-SEK-01), SY.NO 946, H.NO  
5-27, VIKAS NAGAR, PARKAL, WARANGAL. -  
506164  
PH :8886742222.

**PEDAPALLY**

2298. ADARSHA AUTOMOTIVES PVT LTD  
(GKN1-GKN-01), SURVEY NO 142, H NO 185,  
RANGAMPALLI VILLAGE, PEDDAPALLI ,  
TELANGANA - 505172  
PH :8886618155, 8886672222.

**RAMAGUNDAM**

2299. ADARSHA AUTOMOTIVES PVT LTD  
(BGA1-BGA-01), 5-6-172 SURVEY NO. – 259/B,  
MEDIPALLY SHIVAR, RAMAGUNDAM  
MUNICIPALITY, DISTRICT – KARIM NAGAR,  
ANDHRA PRADESH - 505209  
PH :8886144550.

**RAMAYAMPET**

2300. VARUN MOTORS PVT. LTD. (CDO1-CDO-01),  
SURVEY NO. 1626 & 1626/2 SITUATED AT  
BLOCK NO. 16, RAMAYAMPET, DISTRICT –  
MEDAK. - 502101  
PH :9885208555, 9703803399.

**SADHASHIVPET**

2301. SAI SERVICE (SFQ1-SFQ-01), PLOT NO. 2, SY  
NO. 974, GURUNAGAR COLONY, OLD BOMBAY  
HIGHWAY ROAD, SADASHIVPET, SANGAREDDY  
DIST. 502291. - 502291  
PH :9966377888.

**SANGAREDDY**

2302. SAI SERVICE PRIVATE LIMITED (1011-OI-05),  
H.NO.4-8-92/1/4/5, AHMED NAGAR,  
OPP GOVT.ITI, SANGAREDDY, MEDAK (DIST),  
ANDHRA PRADESH - 502001  
PH :7661811000.

**SATUPALLI**

2303. MITHRA AUTO AGENCIES PVT LTD  
(SHD1-SHD-01), SURVEY NO. 75 NEAR  
VIVEKANANDA STATUE, SATHUPALLI,  
KHAMMAM. - 507303  
PH :8886063508.

**SECUNDERABAD**

2304. ACER MOTORS (A DIVISION OF KRISHNAIAH  
MOTORS PVT. LTD.) (K601-K6-01), A1, MOTI  
VALLEY, TRIMULGHERRY, SECUNDERABAD, -  
500015  
PH :8885088080.



## Dealer Workshop (AS ON 30.05.2023 )

2305. AUTOFIN LIMITED (K606-K6-01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011  
PH :8885040130.
2306. VARUN MOTORS PVT. LTD. (4603-K6-01), 1-10-176/1, BEHIND VARUN TOWERS-1, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE. - 500016  
PH :9885552452.
2307. RKS MOTORS PVT. LTD (K605-K6-01), PLOT NO. 207, TADBUND, SECUNDERABAD. - 500003  
PH :9010801004.
2308. AUTOFIN LIMITED (K606-K6-02), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD. - 500090  
PH :8885040126.
2309. PAVAN MOTORS PVT. LTD (K608-K6-02), PLOT NO. 1-12, 749, 750, SURVEY NO. 751/2, VENKATADRI NAGAR, NEW MIRJALGUDA, MALKAJGIRI, SECUNDERABAD, TELANGANA - 500047  
PH :9121293690.
- SHAD NAGAR**
2310. SRI JAYARAMA MOTORS (P) LTD. (WS01-WS-01), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH. - 500216  
PH :8096996671.
- SHAMIRPET**
2311. RKS MOTOR PVT. LTD. (SDE1-SDE-01), SHED NO 2-242, MAJEEDPUR CROSS ROADS,SHAMIRPET, MEDCHAL-MALKAJGIRI,TELANGANA - 500078  
PH :9848866618.
- SHANKARPALLY**
2312. SAI SERVICE PRIVATE LIMITED (CEX1-CEX-01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203  
PH :9966377888, 9912899128, 9703811011.
- SIDDIPET**
2313. ADARSHA AUTOMOTIVES PVT LTD (CAL1-CAL-01), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA. - 502103  
PH :09703716633, 9160746633.
- SIRCILLA**
2314. ADARSHA AUTOMOTIVES PVT LTD (BYW1-BYW-01), H. NO. 10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR ROAD, SIRCILLA, DISTRICT – KARIMNAGAR, TELANGANA - 505301  
PH :8886618155, 8142244131.
- SURYAPET**

2315. PAVAN MOTORS PVT. LTD (BLC1-BLC-01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213  
PH :8790902545.
- TALLADA**
2316. MITHRA AUTO (SOU1-SOU-01), SURVEY NO 890/A, D.NO 7-8, NARAYANAPURAM, TALLADA, TELANGANA. - 507167  
PH :8886063527.
- TANDUR**
2317. VARUN MOTORS PVT. LTD. (CFR1-CFR-01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA. - 501141  
PH :8886619370.
- THORRUR**
2318. ADARSHA AUTOMOTIVES PVT LTD (BYV1-BYV-01), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163  
PH :9059438007, 7799790527.
- TOOPRAN**
2319. ADARSHA (SEJ1-SEJ-1), PLOT NO 7&8, SY NO 185,184,179U, NAGULAPALLY VILLAGE,TOOPRAN MANDAL,TELANGANA STATE: TELANGANA CITY: TOOPRAN PIN : 502334 CITY CATEGO - 502334  
PH :9291859954.
- VIKARABAD**
2320. GEM MOTORS (INDIA) PVT. LTD. (BYM1-BYM-01), SHOP NO. 3-2-93/2, VILLAGE – YENNAPALLY, VIKARABAD MUNICIPALITY, VIKARABAD, DISTRICT – RANGA REDDY, TELANGANA. - 501101  
PH :9912349840.
- WANAPARTHY**
2321. SRI JAYARAMA MOTORS (P) LTD. (WQ01-WQ-01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103  
PH :8096903879.
- WARANGAL**
2322. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007  
PH :8886132222.
2323. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-03), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, AMBASSA, DHALAI, TRIPURA. - 799289  
PH :70052 88437.
- PH :8886492222.

2324. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D503-D5-01), SURVEY NO. 16, 16/A & 16/B, OPPOSITE KAKATIYA UNIVERSITY GATE-2, LASHKERSINGARAM REVENUE VILLAGE, HANAMKONDA MANDAL, WARANGAL. - 506 001  
PH :8688828010.
2325. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D503-D5-02), PLOT NUMBER 9,10,11 & 13/A ,SURVEY NUMBER 148/A&B OF BHEEMRAM VILLAGE, WARANGAL. - 506015  
PH :8688828015.
- ZAHIRABAD**
2326. SAI SERVICE PRIVATE LIMITED (BAT1-BAT-01), PLOT NO-5,NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD,MEDAK (DIST),ANDHRA PRADESH - 502220  
PH :7660005206.

## TELENGANA

- KAGHAZNAGAR**
2327. ADARSHA AUTOMOTIVES (SCN1-SCN-01), H.NO :1-61/3,BORIGAON,KAGHAZNAGAR,KOMARAMB HEEM - 504296  
PH :8886092222.
- PALAKURTHY**
2328. WIN MOTORS (SCY1-SCY-01), SURVEY NO 537/B,MAIN RAOD, PALAKURTHY,JANGAON DISTRICT,TELANGANA. - 506317  
PH :8688838005.

## TRIPURA

- AGARTALA**
2329. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003  
PH :8862149275.
2330. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA - 799003  
PH :70057 71216.
2331. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJJA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008  
PH :97746 16831.
- AMARPUR**
2332. JAIN UDYOG (CVR1-CVR-01), NEAR MOTOR STAND, AMARPUR,TRIPURA - 799101  
PH :97748 45751.
- AMBASSA**
2333. JAIN UDYOG (CDT1-CDT-01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289  
PH :70052 88437.
- DHARMANAGAR**

2334. JAIN UDYOG (6901-RN-03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - 799250  
PH :97747 93164.
- UDAIPUR**
2335. JAIN UDYOG (YU01-YU-01), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR,TRIPURA (SOUTH) - 799116  
PH :9774020152.

## UP

- BULANDSHAHR**
2336. SK UNIVERSE (M502-M5-02), KHASRA NO.2261, NEAR T POINT , BYPASS SIKARPUR ROAD ,BULANDSHAHR - 203001  
PH :7055118430.
- DIBYAPUR**
2337. KULDEEP MOTORS (SLA1-SLA-01), AURAIYYA ROAD, DIBIYAPUR - 206244  
PH :9235258425.
- MEERUT**
2338. TR SAWHNEY (4808-48-01), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002  
PH :9999163125.
- MOOSANAGAR**
2339. MY CAR (SLP1-SLP-01), VILL GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH. - 209208  
PH :97929 70005.

## UTTAR PRADESH

- AGRA**
2340. MADHUSUDAN MOTORS PVT LTD (6603-66-02), GANESH GANJ, PRATAPPURA, AGRA - 282001  
PH :9837097887.
2341. MADHUSUDAN MOTORS PVT LTD (6603-66-01), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - 282005  
PH :531102-05.
2342. MADHUSUDAN MOTORS PVT LTD (6603-66-03), 6-A, VIBHAV INDUSTRIAL STATE, AGRA - 282007  
PH :3299221.
2343. MADHUSUDAN MOTORS PVT LTD (6603-66-04), 26/253, SULTAN GANJ KI PULIA, MAUZA LASKARPUR, AGRA - 283203  
PH :9837097894.
2344. PREM MOTORS PVT. LTD. (6605-66-01), KHASRA NO.382,386,387,388, VILLAGE ARTHONI, DELHI-AGRA HIGHWAY, NH-2, AGRA, UTTAR PRADESH - 282007  
PH :9690010839.
2345. KTL PVT. LTD. (6606-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004  
PH :8449715033,8449715099.

**Dealer Workshop (AS ON 30.05.2023 )**

2346. PREM MOTORS PVT. LTD. (6607-66-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002  
PH :9690010799.
2347. KTL PVT. LTD. (6606-66-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001  
PH :8449715099.
2348. MERAK VEHICLES (6609-66-01), KHASRA NO 65 & 74, MAUZA MOHAMMADPUR, AGRA-DELHI ROAD (NH-2), SIKANDRA, AGRA UTTAR PRADESH-282007. - 282007  
PH :9690486139.

**AKBARPUR**

2349. KTL PVT. LTD. (2801-LH-03), KANPUR ROAD, AKBARPUR - 209206  
PH :7408409348.
2350. SMARTWHEELS PVT. LTD. (7201-LH-08), TANDA ROAD, VILL-BUDHAEERPUR, PO-KATRIYA YAKOOPPUR, AKBARPUR , DIST-AMBEDKAR NAGAR (U.P.) - 224122  
PH :7705803248.

**ALIGARH**

2351. DEV MOTORS (P) LTD (B601-B6-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001  
PH :521771.
2352. DEV MOTORS (B601-B6-04), PLOT NO 97, VILLAGE SIKANDERPUR, BHUKRAVALI, GT ROAD BYE PASS, ALIGARH - 202002  
PH :7351345577.

**ALLAHABAD**

2353. AMITDEEP MOTORS (2901-29-01), 26 SULEM SARAI, G.T.ROAD, ALLAHABAD - 211001  
PH :8948122749, 9026111339, 7738555692, 9839890333, 9936413399.

**AMETHI**

2354. KTL AUTOMOBILE PVT. LTD. (BBB2-BBB-01), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR - 227409  
PH :7379557377.

**AMROHA**

2355. AKANKSHA AUTOMOBILES PVT. LTD. (AO01-AO-01), AMROHA – JOYA ROAD, NEAR PUNJAB NATIONAL BANK, AMROHA, UTTAR PRADESH, PIN CODE: 244221 - 244221  
PH :7895400003.

**ANPARA**

2356. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (NJ02-NJ-01), KAHUWA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT – SONEBHADRA. - 232101  
PH :7052547903, 9721905002, 9151154306, 9450544961.

**AONLA**

2357. KAVISHA MOTORS PVT LTD (CVI1-CVI-01), COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR MUNICIPALITY OFFICE, TEHSIL - AONLA. DIST., BAREILLY, STATE- UTTAR PRADESH. - 243301  
PH :07895980222, 07895980300.

**AURAI**

2358. VARANASI MOTORS PVT LTD (CBM1-CBM-01), KHATA / KHATAUNI NO. 00045, GT ROAD (EHAK BHAURA), OPP. CHINI MILL,VILLAGE & TEHSIL AURAI, DISTT: BHADHOI, UTTARPRADESH, PIN 2221 301 - 2221301  
PH :9838360662, 7617002786.

**AURAIYA**

2359. KULDEEP MOTORS (QJ01-QJ-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241  
PH :9235358444.

**AZAMGARH**

2360. DEEP MOTORS (K501-K5-01), HARBANSHPUR NARAU LI, AZAMGARH - 276001  
PH :9838072905.

**BABRALA**

2361. AKANKSHA AUTOMOBILES PVT. LTD. (SJU1-SJU-01), CHANDAUSI ROAD, BABRALA, DISTRICT SAMBAL, UTTAR PRADESH. - 243751  
PH :9837649177.

**BACHRAWAN**

2362. KTL AUTOMOBILE PVT. LTD. (CGX2-CGX-01), VISHNUPUR, PHARWAN, RAEBARELI-LUCKNOW ROAD, DIST. -RAEBARELI. - 229301  
PH :9918451222.

**BAH**

2363. KTL PVT. LTD. (CHI1-CHI-01), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH. - 283104  
PH :7055707169, 8449715033.

**BAHERI**

2364. KAVISHA MOTORS PVT LTD (BSB1-BSB-01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201  
PH :8756000000, 7607696666.

**BAHRAICH**

2365. ANAND MOTORS AGENCIES LTD (1301-SZ-05), LUCKNOW ROAD,BEHRAICH,UTTAR PRADESH - 271801  
PH :9519596080.

**BALLIA**

2366. DEEP MOTORS (K501-BA-03), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001  
PH :9838072917.

**BALRAMPUR**

2367. ANAND MOTORS AGENCIES LTD (XB01-XB-01), NEAR BALRAMPUR CHINI MILLS. GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201  
PH :6307995976.

**BANDA**

2368. MY CAR PVT. LTD. (2803-KV-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001  
PH :9792971223.
2369. SUMITRA DS MOTORS (SPB1-01-SPB-01), PURANPUR ROAD, BANDA, TEHSIL BANDA, THANA BANDA, DISTT. SHAHJAHANPUR – U.P. - 242042  
PH :9336408074.

**BANSI**

2370. ARBIT AUTOMOBILES PVT LTD (GMD1-GMD-01), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA: KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT : SIDARTHANAGAR - 272153  
PH :89534 12821.

**BANTHRA**

2371. MEGA MOTORS (SGQ1-SGQ-01), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401  
PH :9919101456.

**BARABANKI**

2372. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-6A-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001  
PH :9638075960.

**BARAUT**

2373. TANYA AUTOMOBILES (LL02-LL-01), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611  
PH :7055300019.

**BAREILLY**

2374. CORAL MOTORS (P) LTD. (5602-56-01), STATION ROAD, BAREILLY - 243001  
PH :559191.
2375. CORAL MOTORS (P) LTD. (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002  
PH :0581-2554922.
2376. KAVISHA MOTORS PVT LTD (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502  
PH :8756000000, 7607696666.
2377. ETERNITY MOTORS LLP (5603-56-01), KHASRA NO. 803/2, PILIBHIT BYPASS ROAD, PEER BAHORA, OPP. FUN CITY, BAREILLY, UTTAR PRADESH. - 243001  
PH :9105555746.

**BASTI**

2378. SMARTWHEELS PVT. LTD. (7201-6B-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002  
PH :286294.

**BEHTA**

2379. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (GMI1-GMI-01), KHASRA NO. 254, OPPOSITE SANGAM MOTORS, KURSI ROAD, BEHTA - 226026  
PH :6388901514.

**BHADOHI**

2380. VARANASI MOTORS PVT. LTD. (8402-TT-02), VARNASI ROAD, BHADOHI - 221401  
PH :9838360662.

**BHINGA**

2381. ANAND MOTORS (BVG1-BVG-01), PATNAKHARGAURA, BHINGA, SHRAVASTI - 271831  
PH :9415013059.

**BHOJPUR**

2382. MOTORCRAFT SALES INDIA PVT LTD (SDQ1-SDQ-01), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL – MODINAGAR, DISTRICT – GHAZIABAD. - 201204  
PH :9410038456.

**BIJNOR**

2383. SHAKUMBARI AUTOMOBILES (P) LTD (6D01-6D-01), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELHI-BIJNOR HIGHWAY, BIJNOR, DIST. – BIJNOR, UTTAR PRADESH. - 246701  
PH :8630881409.

**BILARI**

2384. AKANKSHA AUTOMOBILES PVT. LTD. (SDM1-SDM-01), 2KM-BILARI NH 509, NEAR SBS SCHOOL, BILARI, MORADABAD 244001 - 244001  
PH :9927459707.

**BILASPUR**

2385. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-BCN-01), NH-87 ,OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR. - 244921  
PH :9917745000.

**BISALPUR**

2386. CORAL MOTORS PVT LTD (CXB1-CXB-01), KHASRA NO. 668, VILLAGE : BISALPUR, DISTT: PILIBHIT, UTTAR PRADESH - 262201  
PH :9105555746.

**BISWAN**

## Dealer Workshop (AS ON 30.05.2023 )

2387. CONCEPT CARS LIMITED (SEW1-SEW-01),  
BILJHARIYA, OPPOSITE-555, BRICK FIELD,  
BISWAN - 261201 - 261201  
PH :7607696666.

### BUDAUN

2388. CORAL MOTORS (P) LTD. (5602-NF-04), PLOT  
NO.- 72, BAREILY-MATHURA HIGHWAY,  
BUDAUN, UTTAR PRADESH - 132103  
PH :9837891846.

### BULANDSHAHR

2389. SK UNIVERSE (M502-M5-01), KHASRA NO 561 ,  
BHOOR, OPP PANDIT PETROL PUMP ,  
BULANSHAHR - 203001  
PH :9219694600.

### CHAKIA

2390. STAR CARS (A UNIT OF SARASWATI VEHICLES  
LLP) (CJH1-CJH-01), KATHSILA NAHER, NEAR  
SAINT JOHN'S SCHOOL CHAKIA, DISTRICT –  
CHANDAULI - 232101  
PH :9450544961.

### CHANDAUSI

2391. AKANKSHA AUTOMOBILES PVT. LTD.  
(XA01-XA-01), AZAD ROAD, NEAR ROADWAYS,  
CHANDAUSI (BHEEM NAGAR) - 202412  
PH :7247800008.

### CHAURI CHAURA

2392. ARBIT AUTOMOBILES (SIR1-SIR-01), ARAZI NO  
561 DOMARI KHURD, CHAURI CHAURA,  
GORAKHPUR - 273201  
PH :8953412821.

### CHIBRAMAU

2393. KTL PVT. LTD. (BMY1-BMY-01), PLOT GHATA  
NO. 70, MAUJA - LALAKPUR, VILLAGE -  
CHIBRAMAU, DIST.-KANNAUJ, UTTAR  
PRADES. - 209721  
PH :7408409200, 9414113666.

### CHITRASENPUR

2394. AGR (SMM-SMM-01), KHASRA  
NO-194,CHITRASENPUR, KACHHUWA ROAD,  
VARANASI, PIN -221313 - 221313  
PH :9889803355.

### DALMAU

2395. KTL AUTOMOBIELS (SGZ1-SGZ-01), DALMAU  
ROAD, OPPOSITE BHAGIRATHI GUEST HOUSE  
- 229203  
PH :9918451222.

### DANKAUR

2396. MOTORCRAFT SALES (HG01-HG-01), OPP. SHRI  
DRONACHARYA DEGREE COLLEGE, DANKAUR,  
DIST. - GAUTAM BUDH NAGAR, HARYANA. -  
203201  
PH :9810289355.

### DEOBAND

2397. ATELIER AUTOMOBILES (XK02-XK-01),  
OPPOSITE CIVIL COURT, MUZZAFARNAGAR  
HIGHWAY, DEOBAND - 247001  
PH :7500220011.

### DEORIA

2398. SMARTWHEELS PVT. LTD. (M601-M6-01), PLOT  
NO. C-7, AND SHED NO. D-3, GOVERNMENT  
INDUSTRIAL ESTATE MEHRA, DEORIA, DIST.  
-DEORIA, UTTAR PRADESH. - 274001  
PH :7705800602.

### DHAMPUR

2399. SHAKUMBARI AUTOMOBILES (P) LTD  
(CPQ1-CPQ-01), KHASRA NO. 205, OPPOSITE,  
UHSA SMARAK SCHOOL, MORADABAD ROAD,  
TEHSIL - DHAMPUR, MOJA - ALEHPUR, DIST.  
-BIJNOR, UTTAR PRADESH. - 246761  
PH :8630881458.

### DOMARIAGANJ

2400. SMARTWHEELS (SMW1-SMW-01), VILL & POST  
– CHAUKHARA, DOMARIAGANJ, DISTT –  
SIDDHARTH NAGAR - 272193  
PH :7705800602.

### ETAH

2401. MADHUSUDAN VEHICLES PRIVATE LTD.  
(XG01-XG-01), 472 ASROLI, GT ROAD, ETAH -  
207125  
PH :9837097894.

### ETAWAH

2402. KULDEEP MOTORS (6E01-6E-01), PAKKA BAGH,  
KANPUR ROAD, ETAWAH - 206001  
PH :257029.

### FAIZABAD

2403. SMARTWHEELS PVT. LTD. (7201-F5-02),  
SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD,  
UTTAR PRADESH. - 224001  
PH :7705803245.

### FARIDPUR

2404. KAVISHA MOTORS PVT LTD (CEM1-CEM-01),  
GATE NO. 216, KASBA SARAI, TEHSIL –  
FARIDPUR, DISTRICT – BAREILLY, UTTAR  
PRADESH. - 243503  
PH :07895980222, 07895980300.

### FARRUKHABAD

2405. MY CAR PVT. LTD. (2803-TS-04), NEKPUR  
KALAN, FARRUKHABAD - 209625  
PH :9792970093.

### FATEHABAD

2406. KTL PVT. LTD. (BLQ1-BLQ-01), KHASRA NO.  
730/731, GRAM MAUJA, MADAYNA SIKRARA  
MODE, FATEHABAD, DISTRICT – AGRA, UTTAR  
PRADESH - 283111  
PH :9754979019.

### FATEHPUR

2407. KTL PVT. LTD. (2801-TM-04), NH-2, OPP. RTO  
OFFICE, KANPUR ROAD, FATEHPUR - 212601  
PH :7408409383, 7408400000.

### FEROZABAD

2408. MADHUSUDAN VEHICLES PRIVATE LTD.  
(DF01-DF-01), 746, ALI NAGAR KEJRA , NEAR  
RAJA KA TAL CROSSING, NH 2, FEROZABAD -  
283203  
PH :9690003077.

### GAJRAULA

2409. AKANKSHA AUTOMOBILES PVT. LTD.  
(XD01-XD-01), JHANAKPURI OPPOSITE  
RELANCE PETROL PUMP, DELHI ROAD,  
GAJRAULA - 244235  
PH :9690518865.

### GHAZIABAD

2410. ROHAN MOTORS LTD. (5904-59-01), 432  
MUKAND NAGAR, G.T.ROAD, GHAZIABAD -  
201001  
PH :9971466644  
011-204170810, +911204170816, +911204170826,  
+911204170819.

2411. REGENT AUTOLINKS (P) LTD (5902-59-01),  
A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT  
ROAD, GHAZIABAD - 201001  
PH  
:0120-4641900,904,911,8744042111,9999740464,9  
711127008.

2412. ROHAN MOTORS (5904-59-02), PLOT NO.46,  
MEERUT-DELHI ROAD, MORTA, GHAZIABAD -  
201102  
PH :09310404354 , 9971466644.

2413. T.R. SAWHNEY MOTORS PVT LTD (5905-59-01),  
PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL  
AREA, MOHAN NAGAR, GHAZIABAD, DISTT. -  
GHAZIABAD, U.P. - 201007  
PH :9999052148; 9999130612.

2414. SNV AUTO (5906-59-01), PLOT NO. 15, SOUTH  
SIDE GT ROAD INDUSTRIAL AREA, GHAZIABAD,  
UTTAR PRADESH - 201001 - 201001  
PH :9650324325.

### GHAZIPUR

2415. AGR AUTOMOBILES PVT. LTD. (8403-KT-03),  
RKBK PETROL PUMP, NEAR BANSI BAZAR,  
GAZIPUR - 2333001  
PH :2361136.

### GHIROR

2416. KULDEEP MOTORS (CVA1-CVA-01), KARHAL  
ROAD, TEHSIL – GHIROR, DISTRICT –  
MAINPURI, UTTAR PRADESH. - 205121  
PH :9536755555.

### GONDA

2417. SMARTWHEELS PVT. LTD. (7201-FZ-07), JANKI  
NAGAR, OPP INDIAN OIL DEPOT, BAHRACH  
ROAD, GONDA, UTTAR PRADESH. - 271001  
PH :7705803261.

### GORAKHPUR

2418. SMARTWHEELS PVT. LTD. (7201-72-01),  
MOHADDIPUR, (NEAR RAMGARH TAL),  
GORAKHPUR (U.P.) - 273012  
PH :7705803152.

2419. SMARTWHEELS PVT. LTD. (7201-72-06), NEAR T  
B HOSPITAL, LACHCHIPUR, NEPAL ROAD,  
GORAKHPUR - 273012  
PH :7705803109.

2420. SMARTWHEELS PVT. LTD. (7202-72-01), PLOT  
NO AL-4, SECTOR-9, GIDA, GORAKHPUR. -  
273209  
PH :9235401004.

2421. ARBIT AUTOMOBILES PVT LTD (7203-72-01),  
ARAZI NO. 66/1/1 MI & 66/2/1MI, 66 MI, MAUZA -  
MAHEWA MUSTAKIL, NEAR FALMANDI CHOWK,  
TRANSPORT NAGAR, GORAKHPUR, UTTAR  
PRADESH. - 273016  
PH :8953412821.

### GOSAIGANJ

2422. BRIGHT 4 WHEEL SALES PVT. LTD.  
(CWK1-CWK-01), KHASRA NO. 24, VILLAGE -  
SHEKHANPUR, PARGANA MOHANLALGANJ,  
TEHSIL - MOHANLALGANJ, DIST.-LUCKNOW,  
UTTAR PRADESH. - 226501  
PH :9838075929.

### GREATER NOIDA

2423. ROHAN MOTORS LTD. (T201-T2-01), 63-A,  
UDYOG VIHAR, GREATER NOIDA, UTTER  
PRADESH - 201306  
PH :4513739, 4513736, 4513734,  
4513700/9958506111.

### HAIDERGARH

2424. BRIGHT 4 WHEEL SALES PVT. LTD.  
(CVU1-CVU-01), PROPERTY SHOP NO. 5, 6 AND  
7, VILLAGE - GOTAUINA, PARGANA -  
HAIDERGARH, TEHSIL - HAIDERGARH,  
DISTRICT - BARABANKI. - 225124  
PH :9935275786, 9838075929.

### HAMIRPUR

2425. KTL PVT. LTD. (QH01-QH-01), VILLAGE  
RAMEDI,KANPUR ROAD, HAMIRPUR - 210301  
PH :7704907587.

### HAPUR

2426. ROHAN MOTORS (6G01-6G-01), DELHI-HAPUR  
ROAD, OPPOSITE SSV INTERCOLLEGE,HAPUR,  
DISTRICT- GHAZIABAD - 245101  
PH :8476853930, 9536129292.

### HARDOI

2427. CONCEPT CARS PVT. LTD. (QE01-QE-01),  
NANAK GANJ, LUCKNOW ROAD, HARDOI -  
241001  
PH :8756000000, 7607696666.

## Dealer Workshop (AS ON 30.05.2023 )

2428. CONCEPT CARS PVT. LTD. (QE01-QE-04), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001  
PH :7607696666, 8756000000.

### HATHRAS

2429. DEV MOTORS (P) LTD (B601-LP-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS - 204101  
PH :9917435500.

### IGLAS

2430. DEV MOTORS (SOD1-01-SOD-01), MATHURA ROAD, IGLAS, DISTRICT ALIGARH. - 202124  
PH :987549000.

### ITUNJA

2431. BRIGHT 4 WHEEL (SJD1-01-SJD-01), 90M GATA GRAM MANDOLI, ITTAUNJA, LUCKNOW, UTTAR PRADESH-226203. - 226203  
PH :7011482503.

### JAGDISHPUR

2432. BRIGHT 4 WHEEL SALES PVT. LTD. (XC01-XC-01), KATHORA,MUSAFIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH - 227817  
PH :9721526961 , 9628374814.

### JAGNER

2433. MERAK VEHICLES (SPJ1-SPJ-01), SHRI RAM GARDEN, AGRA ROAD, NEAR RADHA KRISHNA MANDHIR, JAGNER, UTTAR PRADESH, 283115 - 283115  
PH :7896500400.

### JALALABAD

2434. SUMITRA DS MOTORS PVT. LTD. (GJX1-GJX-01), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSILL: JALALBAD, DIST. SHAHJAHANPUR - 242221  
PH :9336408074, 9897019488.

### JAUNPUR

2435. KIRTIKUNJ AUTOMOBILES PVT. LTD. (6H01-6H-01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001  
PH :9554951026.

### JHANSI

2436. SURI AUTOMOBILES (6001-60-01), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN - 284002. - 284002  
PH :8881811383.  
2437. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (6002-60-01), PLOT NO 486, 487, 488, 489 AND 477 (PATTA NUMBERS), MAUZA - KOCCHABHANWAR, BLOCK - BADAGAON, TEHSIL AND DISTT - JHANSI. - 284128  
PH :9889440999.

### KANNAUJ

2438. KTL PVT. LTD. (2801-EM-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725  
PH :7408409305.

### KANPUR

2439. KTL PVT. LTD. (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002  
PH :7408409341.  
2440. MY CAR PVT. LTD. (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022  
PH :9792970086.  
2441. MY CAR PVT. LTD. (2803-28-01), 84/54 C, JARIB CHOWKI ,G.T. ROAD, KANPUR - 208003  
PH :9792970511.  
2442. KTL PVT. LTD. (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007  
PH :7408409253.  
2443. S B CARS PVT.LTD (2806-28-01), 77B , FAZALGANZ, KANPUR - 208012  
PH :2241660.  
2444. MY CAR PVT. LTD. (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004  
PH :9792970081.  
2445. S B CARS PVT.LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017  
PH :7408525252.  
2446. KULDEEP MOTORS KANPUR LLP. (2808-28-01), BUKHAND NO. 756, 756A, 757, BLOCK: W, YOJNA: 2, JUHI KALAN, BARRA BYE PASS, KANPUR. - 208017  
PH :9076608701.  
2447. KTL PVT. LTD. (2801-28-07), ARAZI NO. 1110, VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA NAGAR, KANPUR, UTTAR PRADESH - 208 026  
PH :7408409379.

### KARWI

2448. MY CAR PVT. LTD. (CBU1-CBU-01), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 210205  
PH :9839029868, 9792970391.

### KASGANJ

2449. MADHUSUDAN VEHICLES PRIVATE LTD. (BVX1-BVX-01), ARAJI NO. 646, SAURO ROAD, KASGANJ, DISTRICT - KASGANJ, UTTAR PRADESH. - 207123  
PH :9837097863, 9690003034.

### KASIA

2450. ARBIT AUTOMOBILES PVT LTD (GMJ1-GMJ-01), MAUJA BHAIASAHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206  
PH :8953412821.

### KATRA

2451. SUMITRA DS (SHY1-SHY-01), GRAM: SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL - TILHAR, SHAHJAHANPUR - 242301  
PH :9336408074.

### KAYAMGANJ

2452. MY CAR PVT. LTD. (CBV1-CBV-01), BYE PASS ROAD , NEAR KHAN PETROL PUMP, VILLAGE : KAYAMGANJ , DISTT: FARUKHABAD - 209502  
PH :9839029868, 9792970391.

### KHAIR

2453. DEV MOTORS (SHQ1-SHQ-01), PLOT 117, ALIGARH PALWAL ROAD, VILLAGE CHAMAN NAGARIYA, KHAIR - 202138  
PH :7351345577.

### KHANDAULI

2454. MADHUSUDAN MOTORS PVT LTD (BVV1-BVV-01), KHASRA NO. 97, AGRA-SADABAD, HATHRAS ROAD, OPP. HDFC BANK, VILL.-KHANDAULI, TEHSIL, ETHMADPUR, DIST. AGRA, UTTAR PRADESH. - 283126  
PH :9837097863, 9690003034.

### KHUTAR

2455. SUMITRA DS MOTORS PVT LTD (CIO1-CIO-01), VILLAGE - NARAINPUR, VIKRAMPUR GOLA ROAD, KHUTAR, DISTRICT - SHAHJAHANPUR, UTTAR PRADESH. - 242405  
PH :9336408074.

### KIRAOLI

2456. PREM MOTORS PVT. LTD. (BJZ1-BJZ-01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA - JAIPUR HIGHWAY, KIRAWALI, DISTRICT - AGRA, UTTAR PRADESH. - 283122  
PH :9690010799.

### KOSI

2457. UMA MOTORS PVT. LTD. (CPV1-CPV-01), KHASRA NO. 245, CITY - KOSI, DIST.-MATHURA. - 281004  
PH :9997683333, 9997511006.

### KUBERPUR

2458. KTL PVT. LTD. (6606-CRU-04), KHASRA NO.248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006  
PH :8449715099.

### KUNDA

2459. SARASWATI MOTORS (CBF2-CBF-01), ALLAHABAD-LUCKNOW HIGHWAY, KUNDA, DISTRICT PRATAPGARH. - 230204  
PH :8090854005.

### LAKHIMPUR

2460. SUMITRA DS MOTORS PVT LTD (W201-M3-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001  
PH :7522888333, 9415770000.

2461. SUMITRA DS (M301-M3-01), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE - BHARDSARIYA, KHERI, LAKHIMPUR - 262702  
PH :7522888333, 9415770000.

### LALGANJ

2462. KTL AUTOMOBILE PVT. LTD. (CSL2-CSL-01), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206  
PH :9918451222.

### LALITPUR

2463. SURI AUTOMOBILES (6001-6J-03), JAHANSI SAGAR ROAD, LALITPUR - 284001  
PH :9451496015.

### LUCKNOW

2464. ANAND MOTORS AGENCIES LTD (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105  
PH :7080000462.  
2465. KTL AUTOMOBILE PVT. LTD. (1311-13-01), MATIYARI CHAURAHA, CHINNCHAT, FAIZABAD ROAD, LUCKNOW - 227105  
PH :7408411453.  
2466. ANAND MOTORS AGENCIES LTD (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW - 226016  
PH :3098257, 7080000463.  
2467. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-01), 11/CP- 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022  
PH :2739501.  
2468. ONE UP MOTORS INDIA PVT. LTD. (1306-13-01), C-16A,TRANSPORT NAGAR,KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012  
PH :9918100801.  
2469. KTL AUTOMOBILE PVT. LTD. (1311-13-02), INDRANAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016  
PH :7408411478.  
2470. KTL AUTOMOBILE PVT. LTD. (1311-13-03), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005  
PH :9918451222.  
2471. ANAND MOTORS AGENCIES LTD (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW - 226024  
PH :4103406/407/408, 7080000464.  
2472. ONE UP MOTORS INDIA PVT. LTD. (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005  
PH :9918500451.  
2473. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021  
PH :9838075960.

## Dealer Workshop (AS ON 30.05.2023 )

2474. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-II-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020  
PH :7317049000.
2475. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW. - 226001  
PH :8756000000, 7607696666.
2476. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-13-01), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW. - 226 010  
PH :9935096417, 7054631666.
2477. KTL AUTOMOBILE PVT. LTD. (1311-13-07), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. - 226008  
PH :7800007376.
2478. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-06), KHASRA NO. 418, MISHRAPUR PARGANA MAHONA, KURSI ROAD, LUCKNOW. - 226022  
PH :9935275786.
2479. ONE UP MOTORS INDIA PVT. LTD. (1314-13-01), KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJJABGANJ, HARDOI ROAD, LUCKNOW. - 226003  
PH :9821026545, 7800005200.
2480. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-13-02), KHASRA NO. 614, VILLAGE: BHADRUKH, VIP CANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHSIL: SAROJINI NAGAR, LUCKNOW, UTTAR PRADESH 226002 - 226002  
PH :6388901514.
- MADHOGANJ**
2481. CONCEPT CARS PVT. LTD. (BHI1-BHI-01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241001  
PH :220016, 220064, 7607696666.
- MAHARAJGANJ**
2482. SMARTWHEELS PVT. LTD. (EI01-EI-01), NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303  
PH :7705800602, 7705803109.
2483. KTL AUTOMOBILE PVT. LTD. (CSM2-CSM-01), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL – MAHARAJGANG, DISTRICT – RAIBAREILLY, UTTAR PRADESH. - 229306  
PH :99184512222.
- MAHMUDABAD**
2484. CONCEPT CARS PVT. LTD. (AAN1-AAN-01), IN FRONT OF POWER HOUSE, SIDAULI ROAD, MAHMOODABAD (U.P.) - 261203  
PH :7607696666, 8756000000.

## MAHOBA

2485. SURI AUTOMOBILES (6001-RM-02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH. - 284001  
PH :244344, 9451496015.
2486. VELOCITY MOTORS (RM02-RM-01), BAJRANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA - 210427  
PH :9560998709.

## MAHOLI

2487. CONCEPT CARS PVT. LTD. (CWS1-CWS-01), MUSKAN TRACTORS, NEAR MELA MAIDAN, SHAHJAHANPUR ROAD, MAHSUNIYAGANJ, MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. - 261141  
PH :7607696666.

## MAHRONI

2488. SURI AUTOMOBILES (CGN1-CGN-01), LALITPUR ROAD, MEHRONI, DISTRICT – LALITPUR, UTTAR PRADESH. - 384405  
PH :7705000558, 8881811383.

## MAINPURI

2489. KULDEEP MOTORS (6E01-SG-02), SKP-4A, MAINPURI - 205001  
PH :9235258444.

## MALIHABAD

2490. ONE UP MOTORS INDIA PVT. LTD. (BOD1-BOD-01), KHASRA NO. 326/1 AND 327, VILLAGE PARGANA, TEHSIL – MALIHABAD, DISTRICT – LUCKNOW, UTTAR PRADESH. - 227111  
PH :9918100781.

## MANDURI

2491. DEEP MOTORS (K501-K5-04), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. - 276138  
PH :09838072902.

## MATHURA

2492. UMA MOTORS PVT. LTD. (H801-H8-01), 68, MAHOLI.NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004  
PH :2463043/ 6290700.

## MATI

2493. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (SCG1-SCG-01), GATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE- MATI, PARGANA- DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225 003  
PH :6388901514.

## MAURANIPUR

2494. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (GJJ1-GJJ-01), BASERA CITY, MAURANIPUR - GARUTHA ROAD, MAURANIPUR, DISTT: JHANSI, UTTAR PRADESH - 284204  
PH :8299202863.

## MAWANA

2495. RADHA GOVIND AUTOMOBILES PVT LTD (CWZ1-CWZ-01), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401  
PH :9012575727.

## MEERUT

2496. TANYA AUTOMOBILES PVT. LTD. (4802-48-01), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001  
PH :9837077003.
2497. TANYA AUTOMOBILES PVT. LTD. (4802-48-03), 90, NAUCHANDI GROUND, GARH ROAD, MEERUT - 250001  
PH :9837077004.
2498. RADHA GOVIND AUTOMOBILES PVT. LTD. (4807-48-01), VILLAGE – BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002  
PH :9821217610.
2499. TANYA AUTOMOBILES PVT. LTD. (4802-48-04), MUNICIPAL NO 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE - ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001  
PH :7900201515.

## MIRZAPUR

2500. STAR CARS (6K02-6K-01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001  
PH :7052547903, 9721905002, 9151154306, 9450544961.

## MISHRIKH

2501. CONCEPT CAR (SKJ1-SKJ-01), NEAR ARYAVART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P, PINCODE: 261401 - 261401  
PH :7607696666.

## MODINAGAR

2502. MOTORCRAFT SALES PVT. LTD. (5903-M7-02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204  
PH :09557338222 & 07042427140.

## MOHANLAL GANJ

2503. BRIGHT 4 WHEEL SALES PVT. LTD. (BWU1-BWU-01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305  
PH :7571905966.

## MORADABAD

2504. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001  
PH :7247800008.
2505. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-03), 5TH KM DELHI ROAD, MORADABAD - 244001  
PH :7895600007.
2506. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-04), KHASRA NO. 569-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001  
PH :7895500007.

## MUZAFFARNAGAR

2507. RADHA GOVIND (H903-H9-01), NH -58, 121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001  
PH :9760902009.

## NAJIBABAD

2508. SHAKUMBARI AUTOMOBILES (P) LTD (CPS1-CPS-01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246 701  
PH :9045815209.

## NAUGARH

2509. SMARTWHEELS PVT. LTD. (QG01-QG-01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHANAGAR - 272205  
PH :7705803129.

## NAUTANWA

2510. SMARTWHEELS PVT LTD (SDW1-SDW-01), OPP. RAJIV GANDHI DEGREE COLLEGE, BYPASS ROAD, NAUTANWA, DISTT – MAHARAJGANJ - 273164  
PH :77058 00602.

## NAWABGANJ

2511. KAVISHA MOTORS PVT LTD (CHT1-CHT-01), VILLAGE – EIDH JAGIR NEAR GURUDWARA AT NH-74, TEHSIL – NAWABGANJ, DISTRICT – BAREILLY. - 262406  
PH :07895980222, 07895980300.

## NIGOHA

2512. BRIGHT 4 WHEELS (SGV1-SGV-01), GATA NO 146, VILL NIGOHA, TEHSIL MOHANLALGANJ, LUCKNOW - 226302  
PH :7011482503.

## NOIDA

2513. ROHAN MOTORS LTD. (A102-A1-01), C-8/9, SECTOR - I, NOIDA - 201301  
PH :4071900, 4071909, 4071931, 4071932, 4071209, 4071949/9582210152.
2514. ROHAN MOTORS LTD. (A102-A1-02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301  
PH :4071900, 209,31,32/9582210152.

**Dealer Workshop (AS ON 30.05.2023 )**

2515. FAIR DEAL PREMIUM WHEELS PVT.LTD.  
(A108-A1-01), D-39, SEC-10, NOIDA - 201301  
PH :08448296694 & 09654326008.
2516. VIPUL MOTORS PVT. LTD. (A101-A1-02), B-124 & B-125, SECTOR – 5, NOIDA, UTTAR PRADESH - 201301  
PH :4603100/28/33/8527835888.
2517. VIPUL MOTORS PVT. LTD. (A106-A1-01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301  
PH :4758600/01/02/8448589759.
2518. MOTORCRAFT SALES PVT. LTD. (5903-A1-04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) - 201305  
PH :09818532222 & 09971733233.
2519. MOTORCRAFT SALES (5903-A1-05), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST ,GB NAGAR , UP - 201306  
PH :8826312222.

**ORAI**

2520. S B CARS PVT.LTD (2806-LU-02), KANPUR ROAD, ORAI - 285001  
PH :9307219303.

**PADRONA**

2521. SMARTWHEELS PVT. LTD. (BGJ1-BGJ-01), AARJI NO. 37 & 38, MAUJA - BELWA MISRA, TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL - PADRAUNA, DIST -KUSHINAGAR, UTTAR PRADESH. - 274304  
PH :7705903259.

**PANWARI**

2522. SURI AUTOMOBILES (SLC1-SLC-01), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBA. - 210429  
PH :9452287690.

**PAPHUNDA**

2523. TANYA AUTOMOBILES (4802-SIB-05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206  
PH :93193 24588.

**PEPPEGANJ**

2524. ARBIT AUTOMOBILES PVT LTD (GKG1-GKG-01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165  
PH :89534 12621.

**PILIBHIT**

2525. CORAL MOTORS (P) LTD. (IL01-IL-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001  
PH :9837891846.

**PRAYAGRAJ**

2526. SARASWATI MOTORS (2904-29-01), PLOT NO 24, INDUSTRIAL AREA MNIT COLLEGE, TELIYARGANJ, PRAYAGRAJ, UTTAR PRADESH. - 211004  
PH :8090854053.

2527. BRIGHT 4WHEELS (2905-29-01), ARAZI NO 390 AND 389 AT KATKA, ANDAWA SAHSON BYPASS, PRAYAGRAJ - 211002  
PH :9415324201.

**PURANPUR**

2528. CORAL MOTORS (P) LTD. (CAD1-CAD-01), KHASRA NO. 768 & 770, VILLAGE – KHAMIRIYA PATTI, PURANPUR – PILIBHIT ROAD, TEHSIL AND PARGANA – PURANPUR, DIST. PILIBHIT. - 262124  
PH :9837891846, 9927001120.

**RAIBAREILLY**

2529. KTL AUTOMOBILE PVT. LTD. (HS07-HS-01), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303  
PH :7800001601.

**RAM SANEHI GHAT**

2530. BRIGHT 4WHEELS (SDH1-SDH-01), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL - RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409  
PH :9935275786.

**RAMNAGAR**

2531. BRIGHT 4 WHEEL SALES PVT. LTD. (BRK1-BRK-01), KHASRA NO. 629, VILLAGE - BUDHAWAL, TEHSIL - RAMNAGAR, DIST. -BARABANKI, UTTAR PRADESH. - 225205  
PH :9935275786, 9838075929.

**RAMPUR**

2532. AKANKSHA AUTOMOBILES PVT. LTD. (B401-6L-02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901  
PH :7248000002.

**RAYA**

2533. UMA MOTORS PVT. LTD. (BXX1-BXX-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204  
PH :9997683333, 9997511006.

**ROBERTSGANJ**

2534. STAR CAR (CTY1-CTY-01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231216  
PH :7052547903, 9721905002, 9151154306, 9450544961.

**SAHARANPUR**

2535. ATELIER AUTOMOBILES (S203-S2-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001  
PH :7500250042.

**SAHIBABAD**

2536. FAIR DEAL WHEELS PVT. LTD (08E1-M9-01), 12/67 SITE 4, INDUSTRIAL AREA,SAHIBABAD, GHAZIABAD - 110095  
PH :4740409/102/436, 8860088659.

2537. MOTORCRAFT SALES PVT. LTD. (5903-M9-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010  
PH :4172222 / 4102222, 09958562222 & 09560605122.

2538. T.R. SAWHNEY MOTORS PVT LTD (0819-M9-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA,DISTT- GHAZIABAD, UTTAR PRADESH - 201010  
PH :9999399152; 9999399143.

**SALEMPUR**

2539. SMARTWHEELS PVT LTD (GKA1-GKA-01), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509  
PH :7705800602, 7705803321.

**SALON**

2540. KTL AUTOMOBILES (SCP1-SCP-01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH - 229127  
PH :9918451222.

**SAMBHAL**

2541. AKANKSHA AUTOMOBILES PVT. LTD. (BBP1-BBP-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302  
PH :9997776876.

**SANDILA**

2542. CONCEPT CARS PVT. LTD. (WY01-WY-01), PLOT NO.371, SARAY MARUPPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204  
PH :8756000000, 7607696666.

**SARDHANA**

2543. RADHAGOVIND AUTOMOBILES (MM01-MM-01), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342  
PH :7456003222.

**SHAHABAD**

2544. CONCEPT CARS PVT. LTD. (AAX1-AAX-01), VILLAGE MUJAGADH, SHAHABAD - 241124  
PH :8756000000, 7607696666.

**SHAHJAHANPUR**

2545. SUMITRA DS MOTORS PVT LTD (W201-W2-01), SITAPUR ROAD, NH-24, SHAHJAHANPUR - 242001  
PH :7522888333, 9415770000.

**SHAMLI**

2546. RADHA GOVIND AUTOMOBILES PVT. LTD. (XJ01-XJ-01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776  
PH :8979862084.

**SHIKOHABAD**

2547. MADHUSUDAN VEHICLES PRIVATE LTD. (XH01-XH-01), 2508, KATRA MIRA, MAHAMMABAD, OPP PROFESSOR COLONY, NH 2, BYE PASS ROAD, SHIKOHABAD, DISTT: FIROZABAD,UTTAR PRADESH - 283203  
PH :9837097894,9690003001.

**SIDHAULI**

2548. CONCEPT CARS PVT. LTD. (BFO1-BFO-01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHIDI, OPP. BLOCK, SIDHAULI, SITAPUR. - 261303  
PH :7607596666.

**SIKANDRA**

2549. KTL PVT LTD (SJE1-SJE-01), YADAV MARKET, NEAR SURYA DHABA, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. - 209715  
PH :9414113666.

**SIKANDRABAD**

2550. SK UNIVERSE (CWQ1-CWQ-01), NEAR R K SCHOOL, VILLAGE – SANWALI SIKANDRABAD , DIST - BULANDSHAHR UTTAR PRADESH , PIN 203202 - 203202  
PH :7310106565.

**SITAPUR**

2551. CONCEPT CARS PVT. LTD. (QE01-6M-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001  
PH :7607696666, 8756000000.

**SIYANA**

2552. SK UNIVERSE (SIN1-SIN-01), BULANDSHAHR ROAD, SIYANA DIST- BULANDSHAHR, UTTAR PRADESH PIN CODE 203412 - 203412  
PH :9219694600.

**SULTANPUR**

2553. KIRTIKUNJ AUTOMOBILES PVT. LTD. (N101-N1-01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001  
PH :227760 , 220107.

**SWAR**

2554. AKANKSHA AUTOMOBILES PVT. LTD. (CQX1-CQX-01), IN FRONT OF EIDGAH, TEHSIL – SWAR, DISTRICT – RAMPUR, UTTAR PRADESH. - 244924  
PH :9528004006.

**TAMBOUR**

Dealer Workshop (AS ON 30.05.2023 )			
2555.	CONCEPT CARS (SOB1-SOB-01), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR - 261208 PH :7607696666.	2565.	NAINITAL MOTORS PVT LTD (J603-SQ-04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601 PH :9997194132.
<b>THAKURDWARA</b>		<b>BAGESHWAR</b>	
2556.	AKANKSHA AUTOMOBILES PVT. LTD. (KO01-KO-01), 2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHAB GANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH - 244601 PH :9917224562.	2566.	NAINITAL MOTORS PVT LTD (J603-8I-05), VILL. BILOMA,SERA, BAGESHWAR, UT, BAGESHWAR - 263642 PH :9557200522.
<b>TILOI</b>		<b>BAZPUR</b>	
2557.	KTL AUTOMOBILE PVT. LTD. (CGY2-CGY-01), VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. - 229309 PH :99184512222.	2567.	AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CGU2-CGU-01), KHASRA NO. 96/2, VILLAGE – BHONA, ISLAM NAGAR, TEHSIL – BAZPUR, UTTARAKHAND. - 262401 PH :9634151501.
<b>UJHANI</b>		<b>CHAMPAWAT</b>	
2558.	ETERNITY MOTORS LLP (GJK1-GJK-01), BADAUN BYE PASS ROAD, UJHANI - 243639 PH :94122 89074.	2568.	AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SF02-SF-01), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523 PH :8929400545, 8191000832.
<b>UNCHAHR</b>		<b>CHAUKHUTIYA</b>	
2559.	KTL AUTOMOBILE PVT. LTD. (IH02-IH-01), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHR, DISTT: RAIBARELI - 229404 PH :99184512222.	2569.	NAINITAL MOTORS PVT LTD (CVG1-CVG-01), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST.-ALMORA, UTTARAKHAND - 263656 PH :9997026565.
<b>UNNAO</b>		<b>DEHRADUN</b>	
2560.	S B CARS (2806-KL-04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.P. - 209801 PH :9839806451.	2570.	ROHAN MOTORS LTD. (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001 PH :9997036800.
<b>VARANASI</b>		2571.	DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (5707-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN - 248001, PH :9368193007.
2561.	VARANASI MOTORS PVT. LTD. (8402-84-01), THE MALL, CANTONMENT, VARANASI - 221001 PH :2509068, 2509069.	2572.	ROHAN MOTORS LTD. (5702-57-02), 257/2, GMS ROAD,VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001 PH :8630956832, 9897227227.
2562.	AGR AUTOMOBILES PVT. LTD. (8403-84-01), B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010 PH :2360436.	2573.	FUTURE AUTO WHEELS PVT LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001 PH :0135-2640263, 7895956011.
2563.	VARANASI MOTORS PVT. LTD. (8402-84-03), AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) - 221311 PH :2632786, 9838360662.	2574.	FUTURE AUTO WHEELS (5706-57-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001 PH :9760444430.
2564.	AGR AUTOMOBILES PVT. LTD. (8403-84-04), ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112 PH :98898 03355.	<b>DIDIHAT</b>	
<b>UTTARAKHAND</b>		2575.	NAINITAL MOTORS (SKN1-SKN-01), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T, DIDIHAT, DISTT PITHORAGARH, PINCODE: 262551. - 262551 PH :9634092692.
<b>ALMORA</b>		<b>DOIWALA</b>	
		2576.	FUTURE AUTO WHEELS PVT LTD (BRI1-BRI-01), 26, MISSARAWALA, DOIWALA, DISTRICT – DEHRADUN, UTTARAKHAND. - 248140 PH :7983071196.
		<b>GADARPUR</b>	
		2577.	AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVS1-CVS-01), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152 PH :8258156028.
		<b>GAIRSAIN</b>	
		2578.	ROHAN MOTORS LTD (CRH1-CRH-01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT – CHAMOLI, UTTARA KHAND. - 246428 PH :8755839951.
		<b>GANGOLIHAT</b>	
		2579.	NAINITAL MOTORS (CODE UNDER CREATIONS.CODE UNDER CREATIONS.CODE UNDER CREATIONS). VILL.- KHETIGARA, PITHORAGARH-GANGOLIHAT ROAD, GANGOLIHAT, DISTT: PITHORAGARH - 262522 PH :9997093043.
		<b>GOPESHWAR</b>	
		2580.	ROHAN MOTORS LTD. (5702-MV-03), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028 PH :9634852898.
		<b>HALDWANI</b>	
		2581.	NAINITAL MOTORS PVT LTD (J603-J6-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139 PH :7060201024.
		2582.	NAINITAL MOTORS PVT LTD (J603-J6-02), KALA DUNGI ROAD, NEAR HARIPRIYA BANQUET HALL, KATHGHARIYA, HALDWANI - 263139 PH :8126359222.
		<b>HARIDWAR</b>	
		2583.	SHAKUMBARI AUTOMOBILES (P) LTD (6N02-6N-01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407 PH :9897476897.
		<b>JASPUR</b>	
		2584.	AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (BKL2-BKL-01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712 PH :8958023786.
		<b>KARANPRAYAG</b>	
		2585.	ROHAN MOTORS LTD (CRG1-CRG-01), BADRINATH ROAD, KARANPRAYAG, DISTRICT – CHAMOLI, UTTARAKHAND. - 246444 PH :8755011005.
		<b>KASHIPUR</b>	
		2586.	AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (DG02-DG-01), BAZPUR ROAD, KASHIPUR - 244713 PH :7307704864.
		<b>KHATIMA</b>	
		2587.	AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (XL02-XL-01), VILLAGE: CHARUBETA,NEAR RTO CHECK POST,PILIBHIT ROAD KHATIMA, U S NAGAR,UTTARAKHAND - 262308 PH :8191000132.
		<b>KOTDWAR</b>	
		2588.	SHAKUMBARi AUTOMOBILES (P) LTD (6N02-2I-02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTARAKHAND - 249001 PH :8755998075, 7310106565.
		<b>LAKSAR</b>	
		2589.	SHAKUMBARi AUTOMOBILES (CTF1-CTF-01), HARIDWAR ROAD, LAKSAR - 247664 PH :8630087926.
		<b>NANAKMATA</b>	
		2590.	AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVT1-CVT-01), KHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATTA, U.S. NAGAR, UTTARAKHAND. - 262311 PH :7830033763.
		<b>PITHORAGARH</b>	
		2591.	NAINITAL MOTORS PVT LTD (J603-NM-03), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501 PH :9634092692.
		<b>RAMNAGAR</b>	
		2592.	NAINITAL MOTORS PVT LTD (XM01-XM-01), OPP. GAYATRI VIHAR, VILL. BASAI, 7TH KM. KASHIPUR ROAD, RAMNAGAR - 244137 PH :9639016895.
		<b>RANIKHET</b>	
		2593.	NAINITAL MOTORS PVT LTD (AXA1-AXA-01), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTARAKHAND) - 263645 PH :9557243222.
		<b>RISHIKESH</b>	
		2594.	FUTURE AUTO WHEELS PVT LTD (AAS1-AAS-01), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201 PH :7409241219.
		<b>ROORKEE</b>	
		2595.	SHAKUMBARi AUTOMOBILES (P) LTD (H201-H2-01), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARIDWAR - 247667 PH :7055104191.

**Dealer Workshop (AS ON 30.05.2023 )**

**RUDRAPRAYAG**

2596. ROHAN MOTORS (IK01-IK-01),  
GULABRAI-BADRINATH ROAD, RUDRAPRAYAG  
- 246171  
PH :8650876815.

**RUDRAPUR**

2597. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT  
LTD (U404-U4-01), KICHHA BYE PASS ROAD,  
INDUSTRIAL AREA, RUDRAPUR - 263153  
PH :8859502864.

**SELAQUI**

2598. ROHAN MOTORS LTD (CRF1-CRF-01), KHASRA  
NO.783, BAHADURPUR ROAD, NH-72, SELAKUI,  
DISTT.-DEHRADUN, UTTARAKHAND. - 248011  
PH :8006000439.

**SITARGANJ**

2599. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT  
LTD (CD02-CD-01), PLOT NO.228/5 AND 228/6  
KHATIMA ROAD, SITARGANJ, DISTT -  
RUDRAPUR, UTTARAKHAND. - 262405  
PH :8192000375.

**SRINAGAR**

2600. SHAKUMBARI AUTOMOBILES (ANA1-ANA-01),  
SRICOT GANAGANALI , NEAR MEDICAL  
COLLEGE, PO- SRICOT, SRINAGAR - 246174  
PH :8077425944.

**TEHRI**

2601. DD MOTORS (A DIVISION OF D.D. PREM  
PVT.LTD.) (QA02-QA-01), PLOT NO. 541,  
SECTOR-8E, DISTT. - NEW TEHRI - 249001  
PH :9690994366.

**UTTARKASHI**

2602. DD MOTORS (A DIVISION OF D.D. PREM  
PVT.LTD.) (6I02-6I-01), HOTEL RAMOLA,  
BARETHI CHUNGI, GANGOTRI NATIONAL  
HIGHWAY, UTTARKASHI. - 249151  
PH :7248886807.

**UTTRAKHAND**

**DEHRADUN**

2603. SHAKUMBARI AUTOMOBILES (5708-57-01),  
KHASRA NO.15-ANA, MOHABBEWALA,  
SAHARANPUR ROAD, DEHRADUN, PIN-248001,  
UTTARAKHAND - 248001  
PH :9639698871.

**PATI**

2604. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT  
LTD (SFX1-SFX-01), LOHAGHAT- HALDWANI  
MAIN ROAD, NEAR PITHORAGARH  
CO-OPERATIVE BANK, PATI-262528 - 262528  
PH :8191000832.

**WEST BENGAL**

**ALIPURDUAR**

2605. PODDAR CAR WORLD PVT. LTD.  
(BZO1-BZO-01), BIRPARA MORE, COOCH  
BEHAR ROAD, BESIDE GOYENKA PETROL  
PUMP, ALIPURDUAR, WEST BENGAL. - 736121  
PH :8945533002  
9735008343  
9749707070.

**AMTALA**

2606. BHANDARI AUTOMOBILES PVT LTD  
(BOH1-BOH-01), VILLAGE - UDAYRAMPUR, P.O.  
- KANYANAGAR, P.S. - BISHNUPUR, AMTALA,  
DIST -24 PARGANAS SOUTH, WEST BENGAL -  
743 398  
PH :9903850402.

**ARAMBAGH**

2607. SANEI MOTORS PVT. LTD. (7T02-7T-01), R.S.  
DAG NO. 1887, R.S. KHATIAN NO. 104, HAL  
KHATIAN NO. 1233, MOUZA-PARUL, J.L.NO. 38,  
R.S.NO. 3111, P.S. ARAMBAGH, DISTT.  
HOOGHLY, WEST BENGAL - 712601  
PH :8584050184.

**ASANSOL**

2608. BEEKAY AUTO PVT LTD (F601-F6-01), CHANDA  
MORE, N.H.-2, ASANSOL - 713301  
PH :9932049425,  
9932049435.

**BADURIA**

2609. PREMIER CARWORLD (SOE1-SOE-01), VILL-  
KIRRTIPUR, P.O- MANDRA, P.S - BADURIA, DIST  
- NORTH 24 PARGANAS, WEST BENGAL. PIN -  
743438 - 743438  
PH :9831414956.

**BAGDAH**

2610. SANEI MOTORS PVT. LTD. (BON1-BON-01), C/O,  
DINABANDHU TARAFDAR, S/O LATE  
NARENDRANATH TARAFDAR, VILLAGE –  
HALENCHA SOUTH, P.O. – HALENCHA COLONY,  
P.S. – BAGDAH, DISTRICT – NORTH 24  
PARGANAS, WEST BENGAL. - 743270  
PH :8584050184.

**BAHRAMPUR**

2611. BEEKAY AUTO PVT LTD (DJ02-DJ-01),  
BOKULTALA (PASCHIM GAMINI), NH-34,  
BAHARAMPUR, DISTT. MURSHIDABAD. - 742101  
PH :267340.

2612. BEEKAY AUTO PVT LTD (DJ02-DJ-01), NH-34  
MANKARA NEAR NEKRATALA, BAHRAMPUR,  
MURSHIDABAD - 742165  
PH :267340.

**BAJKUL**

2613. BHANDARI AUTOMOBILES PVT LTD  
(CAV1-CAV-01), VILLAGE – KAPTYPAPA BARI,  
P.O. – KAJLAGARH, P.S. – BHAGWANPUR,  
BAJKUL, DISTRICT – PURBA MIDNAPORE. -  
721626  
PH :9933055539.

**BALAGARH**

2614. SANEI MOTORS PVT. LTD (BMI1-BMI-01), DAG  
NO. 671, MOUZA - BARUIPARA, J.L NO. 100, P.O.  
- BALAGARH, DIST.-HOOGLY, WEST BENGAL -  
712 501  
PH :8584050184.

**BALURGHAT**

2615. J K WHEELS PVT. LTD. (PT01-PT-01), BARO  
RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. -  
BALURGHAT, DIST -DAKSHIN DINAJPUR. - 733  
103  
PH :9064301464.

**BANKURA**

2616. BHANDARI AUTOMOBILES PVT LTD  
(G701-GQ-02), PLOT NO.-156, KH NO.-173,  
MITHILA MOUZA, AT/PO-BANKURA (WB) -  
722101  
PH :256766.

**BARASAT**

2617. PREMIER CARWORLD PVT. LTD. (XZ03-XZ-01),  
R.S DAG NO. 512 AND PARTY IN DAG NO. 513,  
MOUZA-KHILKAPUR, P.O BARASAT, POLICE  
STATION: DUTTA PUKUR, TOUZI NO. 146, J.L  
NO. 4, DISTRICT – NORTH 24 PARGANAS,  
WEST BENGAL - 700125  
PH :8420122407.

**BARDHAMAN**

2618. BEEKAY AUTO PVT LTD (T301-T3-03), NH-2,  
PAMRA VILLAGE ROAD, CHANDNI MORE,  
SATTAR MILE, BURDWAN, WEST BENGAL -  
713101  
PH :9932049454.

**BARJORA**

2619. BHANDARI AUTOMOBILES PVT LTD  
(BED1-BED-01), VILLAGE + P.O. + P.S. –  
BARJORA, MOUZA – BARJORA, JL NO. 46,  
KHATIAN NO. 3380, PLOT NO. 2795, BARJORA  
DISTRICT – BANKURA, WEST BENGAL. - 722202  
PH :8016087297.

**BARRACKPORE**

2620. STARBURST MOTORS PVT LTD (BXJ1-CIY-02),  
NEAR RAIL GATE, WARD NO. 24, WEST  
BARASAT ROAD, P.S. – TITAGARH,  
BARRACKPORE, DISTRICT – NORTH 24  
PARGANAS, KOLKATA - 700120  
PH :8335061333.

**BARSUNDRA**

2621. BHANDARI AUTOMOBILES PVT LTD  
(G701-BJW-05), PLOT NO. 610, BARSUNDARA,  
ISHWARDAHA, JALPAI, P.S. BHAWANIPUR,  
EAST MIDNAPORE. WEST BENGAL - 721654  
PH :9933055539.

**BASIRHAT**

2622. BHANDARI AUTOMOBILES PVT LTD  
(X701-0D-03), RAGHUNATHPUR, TALKI ROAD,  
BASIRHAT NR. INDIAN PERTOL PUMP,  
NORTH-24 PARGANAS. - 743428  
PH :8017569789.

**BELACOBA**

2623. PODDAR CARWORLD (SCU1-SCU-01),  
PRASANNA NAGAR, BELACOBA, BATTALA,  
JALPAIGURI - 735133 - 735133  
PH :8945533002.

**BIRPARA**

2624. SEVOKE MOTORS (CQL1-CQL-01), BHAGAT  
PARA, NH - 31, MADARIHAT ROAD, BIRPARA,  
BESIDE TASHI HOTEL, OPP - HIMALYAN HOTEL,  
P.S - MADARIHAT, DIST - ALIPURDUAR, PIN -  
735204 - 735204  
PH :9800069144.

**BISHNUPUR**

2625. BHANDARI AUTOMOBILES PVT LTD  
(AAG1-AAG-01), STATION ROAD, P.O+P.S.-  
BISHNUPUR, DIST: BANKURA, WEST BENGAL -  
722122  
PH :9933055539.

**BOLPUR**

2626. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT.  
LTD) (4402-TC-03), KABI JOYDEB ROAD, NEAR  
BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM -  
731204  
PH :9647444888  
8927895511.

**BONGAON**

2627. STARBURST MOTORS PVT LTD (TQ02-TQ-01),  
376/D, R D B ROAD, NEAR JESSORE ROAD,  
BAKSHIPALLY, BONGAON, NORTH 24  
PARGANAS, WEST BENGAL - 743235  
PH :9748298939.

**BUDGE BUDGE**

2628. ONE AUTO PVT. LTD. (BAV1-BAV-01), MAHESH  
TALA, NEAR DAKGHAR KALIMANDIR, BUDGE  
BUDGE TRUNK ROAD, DAKGHAR, WARD NO.  
22, POLICE STATION-MAHESHTALA, WEST  
BENGAL - 700141  
PH :8594878802  
7604084762.

**C K ROAD**



---

**Dealer Workshop (AS ON 30.05.2023 )**

---

2629. BHANDARI AUTOMOBILES PVT LTD  
(D001-D0-01), P.O:SAT BANKURA, PS:GARBETA,  
CHANDRAKONA ROAD, DIST. PASCHIM  
MIDNAPORE, WEST BENGAL - 721252  
PH :9933055539.

**CANNING**

2630. ONE AUTO (CEG2-CEG-01), SUSUMAPALLY,  
CANNING, DIST – SOUTH 24 PARGANAS, WB -  
743329  
PH :8442830001.

**CHAKDAHA**

2631. BHANDARI AUTOMOBILES PVT LTD  
(OM01-OM-01), VILLAGE – PUMLIA, P.O. –  
CHAKDAHA, DISTRICT – NADIA, WEST BENGAL.  
- 741222  
PH :9073940368, 9674735303, 9674169007.

**CHANDITALA**

2632. BHANDARI AUTOMOBILES PVT LTD  
(BPC3-BPC-01), RS DAG NO.2986, LR DAG NO.  
3150, UNDER L R KHATIAN NO.3859, MOUZA-  
KRISHNARAMPUR, J.L. 59, POLICE STATION-  
CHANDITALA, HOOGHLY, WEST BENGAL -  
712702  
PH :6296900498.

**CHANDRAKONA**

2633. BHANDARI AUTOMOBILES PVT LTD  
(D001-CIP-02), AT. VILL. GOSAI PO+PS  
CHANDRAKONA TOWN, MOUZA DHARABILA,  
J.L.NO. 095, KHATIAN NO. 315, PLOT NO. 203 &  
180, NEAR MUNIPAL GATE TOWARDS C.K.  
ROAD. - 721201  
PH :8945526833.

**CONTAI**

2634. BHANDARI AUTOMOBILES PVT LTD  
(G701-GV-03), SERPUR BAMUNBAR,P O-  
MARISHDA, NEAR MECHEDA BYPASS, CONTAI,  
WEST BENGAL - 721401  
PH :254572.

**COOCH BEHAR**

2635. PODDAR CAR WORLD PVT. LTD.  
(BWZ1-BWZ-01), CHAKCHAKA, NEELKUTHI  
BAZAR, NEAR ADA FACTORY, NH-31, COOCH  
BEHAR, WEST BENGAL. - 736101  
PH :8945533002  
9735008343.

**DARJEELING**

2636. BEEKAY AUTO PVT LTD (4301-6U-05), MERRY  
VILLA, DARJEELING, DISTRICT-DARJEELING. -  
734101  
PH :9932049347  
9932049382  
7478004430.

**DHUPGURI**

2637. BEEKAY AUTO PVT LTD (BWD1-BWD-01),  
MOUZA – DHUPGURI, PLOT NO. 1814, WARD  
NO. 16, DHUPGURI, DISTRICT – JALPAIGURI,  
WEST BENGAL. - 735210  
PH :7477785203  
9932049347  
9932049382  
7478004430.

**DIAMOND HARBOUR**

2638. ONE AUTO PVT. LTD. (YE01-YE-01), VILLAGE –  
CHEWRA, OPPOSITE – K.E. CARMEL SCHOOL,  
P.O. – SARISHA HAT, P.S. – DIAMOND  
HARBOUR, DISTRICT – 24 PARGANAS (S) ,  
WEST BENGAL. - 743368  
PH :8584862243.

**DURGAPUR**

2639. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT.  
LTD) (4402-44-01), PLOT NO-743, MAUZA  
FRIDPUR, BURDWAN, DURGAPUR - 713213  
PH :9647444888  
8927895511.

**FALAKATA**

2640. PODDAR CAR WORLD PVT. LTD.  
(CSR1-CSR-01), DAKSHIN PARANGAPAR,  
KHATIAN NO. 167/1 JL NO. 60, DAG NO.  
652/1159, P.S. – FALAKATA , DISTT  
ALIPURDWAR - 735211  
PH :8945533002.

**GAZOLE**

2641. JK WHEELS (SKZ1-SKZ-01), MOUZA-  
BAJEGAIRAL, RANIGANJ, PURBAPARA,  
KAMALDANGA, P.S- GAZOLE, DIST-MALDA, PIN  
- 732138 - 732138  
PH :9734963360.

**GHATAL**

2642. BHANDARI AUTOMOBILES PVT LTD  
(AAD1-AAD-01), VILL. NIMTOLA, P.O. & P.S.  
DASPUR, GHATAL, WEST MIDNAPORE, WEST  
BENGAL. - 721211  
PH :9933055539.

**GOPIBALLAVPUR**

2643. BHANDARI AUTOMOBILES PVT LTD  
(BPQ1-BPQ-01), JL NO. 1103, KHATIAN NO. 1103,  
PLOT NO. 438, VILLAGE + P.O. + P.S. –  
GOPIBALLVPUR , MOUZA – GOPIBALLVPUR,  
WEST MIDNAPUR, WEST BENGAL. - 721506  
PH :9933055539, 8170018577.

**GUMA (ASHOKNAGAR)**

2644. STARBURST MOTORS PVT LTD (BXJ1-CLB-03),  
JESSORE ROAD, MANIKNAGAR, KHOSDELPUR  
MORE, P.S. – ASHOKNAGAR, NORTH 24  
PARGANAS, WEST BENGAL. - 743222  
PH :8697731763, 8336933447.

**HALDIA**

2645. BHANDARI AUTOMOBILES PVT LTD  
(G701-SE-04), BALGHASIPUR, BHABANIPUR,  
PURBA MEDIANPUR, HALDIA - 721657  
PH :8016082344, 9233502421.

**HOWRAH**

2646. BHANDARI AUTOMOBILES PVT LTD  
(X701-X7-01), BANKRA  
THANA,DOMJUR,HOWRAH. - 711403  
PH :9674735304.  
2647. PREMIER CARWORLD PVT. LTD. (0611-X7-02),  
MOUZA – PRASASTHA, P.S. – DOMJUR, UNDER  
MOHIARY 2 NO. GRAM PANCHAYAT,  
ANKURHATI, HOWRAH, WEST BENGAL. -  
711302  
PH :8420122402.

**JALPAIGURI**

2648. PODDAR CAR WORLD PVT. LTD. (XY01-XY-01),  
COLLEGE PARA, SIRISHTALA, NEAR ASSAM  
MORE, JALPAIGURI, WEST BENGAL. - 735101  
PH :8945533002.

**JAYGAON**

2649. SEVOKE MOTORS PVT. LTD. (CHS1-CHS-01),  
HOUSE NO.43, WARD NO.11/22, N.S ROAD  
DARAGAON, P.S - JAYGAON, DISTT.  
ALIPURDUAR, WEST BENGAL - 736182  
PH :9433825851.

**JHARGRAM**

2650. BHANDARI AUTOMOBILES PVT LTD  
(BUG1-BUG-01), DAG NO.383, KHATAN NO.  
JL.386, WARD NO.11, RAJBATI CAMPUS,  
JHARGRAM, WEST BENGAL - 721507  
PH :8016087297, 9933055539.

**KADAMBAGACHI**

2651. STARBURST MOTORS PVT LTD (BXJ1-CTE-04),  
MOUZA - PURBA ICHAPUR, J L NO. 111, RESU  
NO. 131, DAG NO. 385, KHATIAN NO. L R 754,  
KADAMBAGACHI, P.S. - BARASAT, DIST.-NORTH  
24 PARGANAS, WEST BENGAL. - 700125  
PH :8336933410.

**KALIMPONG**

2652. BEEKAY AUTO (BWF1-BWF-01), 10TH MILE,  
GUMBA HATTA, PO&PS -KALIMPONG, DIST -  
KALIMPONG, WB. - 734301  
PH :9932049347.

**KALNA**

2653. BEEKAY AUTO PVT LTD (WZ01-WZ-01), KALNA  
ROAD, NEAR KALNA SUB DIVISIONAL  
HOSPITAL, KALNA, PO+PS: KALNA, DISTT.  
BURDWAN, (WB.) - 713409  
PH :9932251483.

**KALYANI**

2654. STARBURST MOTORS PVT LTD (U01-U-01),  
KALYANI INDUSTRIAL GROWTH CENTRE,  
PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S  
COLLEGE), KALYANI. - 741234  
PH :8584040215, 8336933447.

**KESHPUR**

2655. BHANDARI AUTOMOBILES PVT LTD  
(CCM1-CCM-01), JL NO. 338, KHATIAN NO. 786/2,  
PLOT NO. 1749, MOUZA – KESHPUR, VILLAGE +  
P.O. + P.S. – KESHPUR, WEST MIDNAPUR,  
WEST BENGAL. - 721150  
PH :721150, 8170014289.

**KHARAGPUR**

2656. BHANDARI AUTOMOBILES PVT LTD  
(G701-G7-01), BHANDARI BUILDING,  
JHAPATAPUR, KHARAGPUR, WEST BENGAL -  
721301  
PH :755537.

**KHATRA**

2657. BHANDARI AUTOMOBILES PVT LTD  
(BGZ1-BGZ-01), VILLAGE - SENAPATI, P.O & P.S  
- KHATRA, MOUZA-SENAPATI, JL NO.189,  
KHATIAN NO.659, PLOT NO.33/34, DISTT.  
BANKURA, WEST BENGAL. - 722140  
PH :9933055539.

**KOLKATA**

2658. MACHINO TECHNO SALES LTD. (0601-06-02), 48  
A, TARATALA ROAD, KOLKATA - 700066  
PH :9073330177.

2659. DEWARF'S GARAGE (0605-06-01), (PROP. DELTA  
INTERNATIONAL LTD.), 14 BRITISH INDIAN  
STREET, CALCUTTA - 700069  
PH :8584015205.

2660. MACHINO TECHNO SALES LTD. (0601-06-01),  
21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA  
- 700017  
PH :9073330178.

2661. PREMIER CARWORLD PVT. LTD. (0611-06-01),  
AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.:  
-KAMARHATI, DISTT.-KOLKATA - 700058  
PH :8697730344.

2662. BHANDARI AUTOMOBILES PVT LTD  
(0609-06-01), BUDGE BUDGE TRUNK ROAD,  
NEW GOPALPUR, SARKARPOOL,  
MAHESHTALA, DISTT. SOUTH 24 PARGANAS,  
WEST BENGAL - 700143  
PH :9674476000.

2663. BHANDARI AUTOMOBILES PVT LTD  
(0609-06-02), 37, GULAM JILANI KHAN ROAD,  
KOLKATA. - 700039  
PH :9903850402.

2664. SANEI MOTORS PVT. LTD. (0612-06-01), 16/2  
CANAL EAST ROAD, NEAR MANIKTALA POLICE  
STATION,KOLKATA - 700067  
PH :8584050184.

**Dealer Workshop (AS ON 30.05.2023 )**

2665. ONE AUTO PVT. LTD. (0614-06-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA , WEST BENGAL - 700105  
PH :8584878802.
2666. ONE AUTO PVT. LTD. (0614-06-01), JL NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADHA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099  
PH :8584870725.
2667. DEWAR'S GARAGE (0605-06-03), P-27/2, TARATALA ROAD, KOLKATA - 700088  
PH :8584015293.
2668. SANEI MOTORS PVT LTD (0612-06-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059  
PH :8584050184.
2669. OSL MOTOCORP PVT LTD (0616-06-01), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRING CLUB, E.M. BYE-PASS, KOLKATA - 700015  
PH :8336996355  
8697982283.
2670. JYOTE MOTORS (0624-06-01), NAZIRABAD MAIN ROAD, NAZIRABAD, ANANDAPUR, NEAR BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150, WEST BENGAL - 700150  
PH :8334930830.

**KOLKATTA**

2671. BHANDARI AUTOMOBILES (0619-6-C1), PLOT NO. IID/15, ACTION AREA 2D, NEW TOWN, P.S. RAJARHAT, KOLKATA, WEST BENGAL  
PIN-700156 - 700156  
PH :6291042160.

**KOTULPUR**

2672. BHANDARI AUTOMOBILES PVT LTD (BIP1-BIP-01), KHATIAN NO.644, PLOT NO.373, JL NO. 101, VILLAGE - MULDARA, P.S. + P.S. - KOTULPUR, DISTT.-BANKURA, WEST BENGAL. - 722141  
PH :9933055539.

**KRISHNANAGAR**

2673. BHANDARI AUTOMOBILES PVT LTD (X701-GS-02), PLOT NO.-1874, MOUZA-GOBINDSARAK ,J.K. NO. 94, PS-KOTWAL, OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011  
PH :9051999742.

**MADHYAMGRAM**

2674. STARBURST MOTORS PVT LTD (BXJ1-BXJ-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129  
PH :9836075989, 8336933447.

**MALBAZAR**

2675. BEEKAY AUTO PVT LTD (BWG1-BWG-01), CALTEX MORE, VILLAGE + P.S. – MALBAZAR AND DISTRICT – JALPAIGURI . - 735221  
PH :9932049347  
9932049382  
7478004430  
7477785203.

**MALDA**

2676. J K WHEELS PVT. LTD. (L801-L8-01), GABGACHHI, N.H. 34, MALDA, - 732103  
PH :9851520855 , 9735003949.

**MATHABHANGA**

2677. BEEKAY AUTO PVT LTD (BQF1-BQF-01), SITAKULCHI ROAD, WARD NO.9,MATHABHANGA, DISTRICT – COOCHBEHAR. - 736146  
PH :7477785202  
9932049347  
9932049382  
7478004430.

**MOHANPUR**

2678. BHANDARI AUTOMOBILES PVT LTD (CIV1-CIV-01), VILLAGE-NAYAGAON, P.O. -PAROI, P.S.-MOHANPUR, MOUZA - NAYAGAON, JL NO.395, KHATIAN NO.175/1, PLOT NO.895, DISTT.-PASCHIM MIDNAPUR,W.BENGAL. - 721436  
PH :9933055539.

**NAIHATI**

2679. PREMIER CARWORLD PVT. LTD. (YD01-YD-01), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. - JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) - 743123  
PH :801700824.

**NAKASHIPARA**

2680. BHANDARI AUTOMOBILES PVT LTD (BMJ1-BMJ-01), L R DAG NO. 7271, UNDER L R KHATIAN NO. 6734, MOUZA - DEBAGRAM, J L NO. 60, POLICE STATION - KALIGANJ, BLOCK - KALIGANJ, NAKASHIPARA, DIST.-NADIA, WEST BENGAL. - 741138  
PH :9163314418.

**NAXALBARI**

2681. BEEKAY AUTO PVT LTD (CSJ1-CSJ-01), MOUZA – GENI, KHATIAN NO.275, PARGANA-HATIGHISHA, P.S. NAXALBARI, DISTT. DARJEELING, WEST BENGAL - 734429  
PH :9932049347  
9932049382  
7478004430  
9563370099.

**PANCHLA**

2682. BHANDARI AUTOMOBILES PVT. LTD. (BPI1-BPI-01), L.R DAG NO 3274, UNDER L.R KHATIAN NO 3044, MOUZA-MALLICKBAGAN, JL NO-7, POLICE STATION – PANCHLA, DIST- HOWRAH - 711310  
PH :9073664926.

**PANDUA**

2683. BHANDARI AUTOMOBILES PVT LTD (BOS1-BOS-01), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL. - 712149  
PH :9073912566.

**PANSKURA**

2684. BHANDARI AUTOMOBILES PVT LTD (BPS1-BPS-01), MOUZA – PASCHIM NEKRA, JL NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL. - 721139  
PH :9933055539.

**PURULIA**

2685. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-6W-02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149  
PH :9647444888  
8927895511.

**RAGHUNATHPUR**

2686. BEEKAY AUTO PVT LTD (CKZ1-CKZ-01), MOUZA – BUNDLA, J.L. NO. 197, PLOT NO. 2656, KHATIAN NO. LR 207, P.O. – RAGHUNATHPUR, P.S. – RAGHUNATHPUR, DISTRICT – PURULIA. - 723133  
PH :9932049425,  
9932049435.

**RAIGANJ**

2687. J K WHEELS PVT. LTD. (BN02-BN-01), JL NO. 150, KHATIAN NO. 168/3 & 168/4, PLOT NO. 4158, , P.S. – RAIGANJ, MUNICIPALITY – RAIGANJ, WARD NO. 11, HOLDING NO. 577/N, MOUZA – RAIGANJ, DISTRICT – UTTAR DINAJPUR, - 733134  
PH :9735008842.

**RAJARHAT - KOLKATA**

2688. STARBURST MOTORS PVT LTD (BXJ1-06-05), R.S & L.R. DAG NO. 3434, MOUZA- GOPALPUR, JL NO. -02, RS NO. -140, LR KHATIAN NO. -5638, NEW TOWN, RAJARHAT - 700136  
PH :9681080301.

**RANAGHAT**

2689. STARBURST MOTORS PVT LTD (BBV1-BBW-01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741256  
PH :8145821191, 8584040215.

**RUPNARAYANPUR**

2690. BEEKAY AUTO PVT LTD (BWS1-BWS-01), P.S. – SALANOUR, UNDER MOUZA – JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHAITAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335  
PH :9932049425,  
9932049435.

**SABANG**

2691. BHANDARI AUTOMOBILES PVT LTD (CCL1-CCL-01), VILLAGE - PAKKAN DAKSHINBARH, P.O. – DHANSWARPUR & P.S. - PINGLA, DIST-PASCHIM MIDNAPORE, SABANG - 721 166, WEST BENGAL. - 721166  
PH :9933055539.

**SEORI**

2692. BEEKAY AUTO PVT LTD (F601-KC-02), RAMBADANPUR, NEAR SP MORE, DIST-BIRBHUM, SEORI - 731101  
PH :9932049425,  
9932049406.

**SHYAMPUR**

2693. SANEI MOTORS PVT LTD (CAW1-CAW-01), VILLAGE + P.O. – GOBINDAPUR, P.S. – SHYAMPUR, DISTRICT – HOWRAH, WEST BENGAL . - 711314  
PH :8584050184.

**SILIGURI**

2694. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA,SILIGURI. - 734428  
PH :9932049347  
9932049382  
7478004430.
2695. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001  
PH :9932049347  
9932049380.
2696. SEVOKE MOTORS PVT. LTD. (4302-43-01), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001  
PH :9706010366.
2697. PODDAR CAR WORLD PVT LTD (XY01-43-02), VILL. EAST DHANTALLA, FULBARI II G.P, P.O SATELLITE TOWNSHIP, DIST- JALPAIGURI - 734015  
PH :8945533002.

**SONADA**

2698. SEVOK (SDX1-SDX-01), RATO MATEY DARA, NEAR PETROL PUMP,P.O- SONADA, WEST BENGAL PIN - 734209 - 734209  
PH :9800069144.

**SONAMUKHI**

2699. BHANDARI AUTOMOBILES PVT LTD  
(CAU1-CAU-01), J.L NO. 77, KHATIAN NO. 360,  
PLOT NO. 114/287, SONAMUKHI BISHNUPUR  
ROAD, VILLAGE - CHURAMANIPUR, P.O. & P.S. -  
SONAMUKHI, WEST BENGAL. - 722207  
PH :9933055539.

**SREERAMPORE (SREERAMPUR)**

2700. BHANDARI AUTOMOBILES PVT LTD  
(BBT1-BBT-01), BANGIHATI (MADPUR) DELHI  
ROAD, SREERAMPUR, DISTT: HOOGHLY, WB -  
712203  
PH :66137505, 66137585, 9674741544.

**TAMLUK**

2701. BHANDARI AUTOMOBILES PVT LTD  
(OL01-OL-01), MOUZA PADUMBASAN, WARD NO  
10, J.L NO:144, DISTT: EAST MIDNAPUR, WEST  
BENGAL - 721636  
PH :9933055539.

**TARAKESHWAR**

2702. SANEI MOTORS PVT. LTD. (YH01-YH-01),  
MOUZA BAIDYAPUR, UNDER BALIGORI(1),  
GRAM PANCHAYET, TARAKESHWAR, DISTT.  
HOOGLY, WEST BENGAL. - 712410  
PH :8584050184.

**UDAYNARAYANPUR**

2703. BHANDARI AUTOMOBILES PVT LTD  
(BOO1-BOO-01), VILLAGE-JANGALPARA  
BELGRAM, PS- UDAYNARAYANPUR, DIST-  
HOWRAH, WEST BENGAL. - 711226  
PH :9073664902.

**ULUBERIA**

2704. BHANDARI AUTOMOBILES PVT LTD  
(2401-24-01), HOLDING 1242A, BANITABLA,  
P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH,  
WEST BENGAL - 711316  
PH :9052901888.

Nexa Workshop (AS ON 30.05.2023 )

ANDHRA PRADESH

ANANTHAPUR

1. SRI DURGA (1BNA-1B-01), NO.124, SOMALADODDI, ANANTHAPUR, ANDRA PRADESH - 515004  
PH :9885183851.

GUNTUR

2. JAYLAXMI (G5NA-G5-01), D-NO:199/2, OPP.AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001  
PH :9959844644.

KAKINADA

3. VARUN MOTORS (W7NA-W7-01), BHASKARA GARDENS JAGANDHAPURAM ,KAKINADA - 533016  
PH :9885313744.

KURNOOL

4. MSA MOTORS (C2NA-C2-01), PLOT NO. 1, 1A, 2, 2A, WARD NO. 96, NH 44, AUTO NAGAR, KURNOOL, ANDHRA PRADESH 518003 - 518003  
PH :9912826682.

NELLORE

5. BHARGAVI AUTO (A8NA-A8-01), SURVEY NO 245B, CHEMUDUGUNTA VILLAGE, NH-16, ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002  
PH :886682222.

ONGOLE

6. JAYALAXMI (8YNA-8Y-01), SURVEY NO:194/2, BESIDE NH 5, MUKTHINUTHALAPADU, ONGOLE, ANDHRA PRADESH – 523225 - 523225  
PH :9492133433.

RAJAHMUNDRY

7. SB MOTORS (C5NA-C5-01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDRY, ANDRAPRADESH-533106. - 533016  
PH :9248727888.

SRIKAKULAM

8. VARUN MOTORS (W6NA-W6-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIKAKULAM DISTRICT, ANDHRA PRADESH - 532401  
PH :9885317344.

VIJAYAWADA

9. VARUN MOTORS (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. - 521137  
PH :6309955655.
10. PARAMSHIVA MOTORS (26NB-26-01), NO. 20-1-34, C K REDDY ROAD, AYODHYA NAGAR, VIJAYAWADA, ANDRAPRADESH- 520003. - 520003  
PH :9866551078.

11. VARUN MOTORS (26NA-26-02), DOOR NO1-1-153,REVENUE WARD NO.1,BLOCK NO3,VIDHYADARARPURAM,VIJAYAWADA - 520012  
PH :9989477120.

VISAKHAPATNAM

12. VARUN MOTORS (46NA-46-01), DOOR NO 38-22-27, SURVEY NO 39, KAPARADA VILLAGE, INDUSTRIAL ESTATE, VISHAKHAPATNAM - 533016  
PH :9885317344.

VIZIANAGARAM

13. JAYABHERI AUTO (N8NA-N8-01), OPPOSITE RELIANCE MART, BALAJI JUNCTION, 100 FEET RING ROAD , VIZIANAGARAM - 535002  
PH :08340833999.

ASSAM

BONGAIGAON

14. BHARATI MOTORS (7NNA-7N-01), CHAPAGURI RD, NEAR POST OFFICE, NORTH BONGAIGAON, AMGURI, BONGAIGAON, ASSAM 783380 - 783380  
PH :7002350887.

DIBRUGARH

15. VISHAL CAR WORLD (C1NA-C1-01), MOHPUALIMORA GOHAIN GAON, A.T ROAD, DIBRUGARH, ASSAM - 786008  
PH :8009000008.

GUWAHATI

16. PODDAR AUTO (09NA-09-01), AT ROAD ,KAMAKHYA GATE ,GUWHATI ,KAMRUP-781009 - 781009  
PH :8085957586.
17. BIMAL AUTO (09NB-'09-01), DREAMLAND APPARTMENT,NAHRANI PATH, DISPUR LAST GATE, GUWAHATI - 781006 (ASSAM) - 781006  
PH :9864074525.

JORHAT

18. RD MOTOR (G9NB-G9-01), M/S R D MOTORS PVT LTD , DHAPKATA, NEAR TINALI, JORHAT -785006 - 785006  
PH :7002099547.

SILCHAR

19. JAIN UDHYOG (J2NA-J2-01), R.S. PATTA NO.149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009  
PH :9436121557.

TEZPUR

20. RD MOTOR (T1NA-T1-01), SOLAGAN VILLAGE , GOROIMARI , SONABEEL, BEFORE MAA KALYANI PETROL PUMP, TEZPUR -784105 - 784105  
PH:9836872710.

TINSUKIA

21. VISHAL CAR WORLD (J4NA-J4-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD),A.T. ROAD, LAIPULI,TINSUKIA ,ASSAM -786183 - 786183  
PH :9864211022.

BIHAR

GAYA

22. KARLO MOTORS (Y6NA-Y6-01), GAYA DOBHI MAIN ROAD, NEAR DOMUHAN, BODHGAYA, PIN -824231, BIHAR. - 824231  
PH :9934096400.

PATNA

23. ALANKAR AUTOMOBILES (15NA-15-01), OPP.RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002  
PH :9199427707.
24. REESHAV AUTOMOBILES (15NB-15-01), MUKDUMPUR,DIGHA,90 NO GATE, PATNA - 800012  
PH :7369944132.
25. SHRI GOPAL (15NC-'15-01), BIKHACHAK ANISHABAD NEW BYPASS ROAD, OPPOSITE SITA RAM COMMUNITY HALL, PATNA, BIHAR - 800002 - 800002  
PH :9113746967.

PURNEA

26. SIMANCHAL (6VNA-6V-01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31, GUALBBAGH,PURNEA,BIHAR - 854326  
PH :9334710055.

CHANDIGARH

CHANDIGARH

27. AUTOPACE (FEB) (07NA-07-01), PLOT NO. 37, INDUSTRIAL AREA – PHASE 1, CHANDIGARH - 160002  
PH :7087119861.
28. NAVDESH AUTO (07NE-07-01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH - 160002  
PH :8827057534.

CHHATTISGARH

AMBIKAPUR

29. MAHAMAYA (AENA-AE-01), AJAB NAGAR,MAHATHMA GANDHI ROAD,AMBIKAPUR - 497001  
PH :9516609632.

BILASPUR

30. SATYA AUTOMOBILES (C3NB-C3-01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001  
PH :6372803057.

KORBA

31. SATYA AUTOMOBILES (U7NB-U7-01), SHED NO 10, PART OF KHASRA NO 885, INDUSTRIAL AREA, RAJGAMAR ROAD, KORBA (C.G) - 495677  
PH :9993092051.

RAIPUR

32. SPARSH (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDIH, TATIBANDH, RAIPUR, CHATTISGARH - 492029  
PH :9926626662.
33. SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI ,G. E. ROAD, RAIPUR - 493001  
PH :9425204051.

DELHI

DELHI

34. RANA MOTORS (08NE-08-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI - 110020  
PH :7290030289, 9290030288.
35. TR SAWHNEY (08NN-08-01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI - 110020  
PH :9953350008.
36. PLATINUM MOTORS (08NQ-08-01), PLOT NO-H4,BLOCK-B1,MOHAN CO-OPERATIVE INDEX,MATHURA ROAD,PIN-110044 - 110044  
PH :9811386000, 8860200000.
37. MAGIC AUTO (08NA-08-01), CISF GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075  
PH :9873052000.
38. AAA VEHICLEADES (08NW-08-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015  
PH :8750611111.
39. COMPETENT AUTO (08NF-08-01), PLOT NO-34,RAJASTHAN UDYOG NAGAR, GT AKRNL ROAD ,DELHI - 110033  
PH :9932049425.
40. JAGMOHAN MOTORS (08NX-08-01), C133-136(PART. PHASE I, INDUSTRIAL AREA, MANGOLPURI S BLOCK, NEW DELHI, DELHI 110083 - 110083  
PH :9812259000.

GOA

MARGAON (GOA)

41. CHOWGULE INDUSTRIES (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAJA, SALCETE - (GOA) - 403720. - 403720  
PH :9850969950.

PORVORIM(PANJIM)

**Nexa Workshop (AS ON 30.05.2023 )**

42. SAI SERVICE (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521  
PH :022-61841111,  
8291941070.

**GUJARAT**

**AHMEDABAD**

43. STAR LINE CARS (01NE-01-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330  
PH :7436003235.
44. PEGASUS (01NG-01-01), PLOT NO 9, OPP RABARI COLONY BRIS STOP, CTM, NAROL - NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. - 380026  
PH :9909023000.
45. POPULAR WHEELERS (01NC-01-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT - 380009  
PH :9925203344.

**ANAND**

46. AMAR CARS (F7NA-F7-01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT - 388001  
PH :9925407666.

**BHARUCH**

47. RAVIRATNA (F8NA-F8-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. - 392001  
PH :9727700823.

**BHAVNAGAR**

48. KIRAN MOTORS (C9NB-C9-01), RAMDEV SOCIETY, CHITRA GIDC, BHAVNAGAR - GUJARAT - 364001  
PH :9924123973.

**BHUJ**

49. KD MOTORS (P5NA-P5-01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPUR HIGHWAY, BHUJ - 370040  
PH :9879898799.

**GANDHIDHAM**

50. BM AUTO LINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH, GUJARAT - 370201  
PH :7211120014.

**GANDHINAGAR**

51. NANDA AUTOMOBILES (2BNA-2B-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT. - 382421  
PH :9687641974.

**GODHRA**

52. RB CARS (2CNA-2C-01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001  
PH :9925051444.

**JUNAGARH**

53. PERFECT AUTO SERVICES (K8NA-K8-01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037  
PH :9909022619.

**MEHASANA**

54. STAR LINE CARS (D1NA-D1-01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002  
PH :7211138986,  
7211138987.

**MORBI**

55. PERFECT AUTO SERVICES (X5NA-X5-01), RAJKOT MORBI HIGHWAY, VILLAGE SANALA, MORBI - GUJARAT (363641) - 363641  
PH :9909022619.

**PATAN**

56. STARINE CARS (Q9NA-Q9-01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT) - 382465 - 382465  
PH :9909043244.

**RAJKOT**

57. PERFECT AUTO SERVICES (55NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT - 360004  
PH :9512035501.

**SURAT**

58. KIRAN MOTORS (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJARAT - 395009 - 395009  
PH :7020569426.
59. AMAR CARS (40ND-40-01), SURVEY NO 139, BLOCK NO-"218"IA, OPPOSITE TO AWADH ARENA MALL, V.I.P ROAD ,BHARTHAMA, SURAT, GUJARAT - 395007  
PH :9871389795.

**SURENDRANAGAR**

60. DREAM VEHICLES (LCNA-LC-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDRANAGAR, GUJARAT. - 363035  
PH :8511104644.

**VADODARA**

61. KATARIA AUTO (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007  
PH :9824701590.

**VAPI**

62. KATARIA AUTO (97NA-97-01), NEAR CROMA OUTLET, RATHOD CHAMBERS, DAMAN ROAD, CHALA VAPI - 396191  
PH :9714799985.

**HARYANA**

**AMBALA**

63. EAKANSH WHEELS (18NA-18-01), AMBALA-CHANDIGARH HIGHWAY ADJOINING AJAJ SAMAJ VILLAGE-SADDOPUR, AMBALA - 134003  
PH :8395903111.

**BHIWANI**

64. PASCO AUTOMOBILES (X3NA-X3-01), NEAR HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI- HARYANA-127021 - 127021  
PH :9289192582.

**FARIDABAD**

65. PASCO AUTOMOBILES (58NB-58-01), 14/4, MATHURA ROAD, FARIDABAD, HARYANA - 121003  
PH :9999790229.
66. BVA AUTO (58NC-58-01), 2J/53-54, NH-2, NIT FARIDABAD, HARYANA - 121001  
PH :9911259288.
67. VIPUL MOTORS (58NA-58-01), SUB DIVISION NO-3, INDUSTRIAL PLOT NO. -34, N.I.T, FARIDABAD HARYANA - 121001  
PH :8562019252.

**GURGAON**

68. PREM MOTORS (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001  
PH :1292565666.
69. TR SAWHNEY (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001  
PH :1274254441.
70. PASCO AUTOMOBILES (95NA-95-01), SEC 17-18 DIVIDING ROAD, GURGAON- HARYANA, 122015 - 122015  
PH :0124-4398400,  
9999239959,  
9873873807.

**JIND**

71. EAKANSH MOTORS (2KNA-2K-01), KHEWAT NO. - 155, KHASRA NO. - 142, MURRABA NO. - 210 OPP. HP LPG BOTTLING PLANT, ROHTAK-JIND ROAD, JIND. PIN - 126102. - 126102  
PH :8529860482.

**KAITHAL**

72. EAKANSH MOTORS (U8NA-U8-01), NH-65, OPP RKM FARM, AMBALA ROAD, KAITHAL - 136027  
PH :7419900804,  
7419900803.

73. EAKANSH MOTORS (U8NA-U8-02), KHEWAT NO -458, KHATONI - 563, KITTAS - 20/87K 01M ADJOINING NEXA SHOWROOM, AMBALA HISAR ROAD, KAITHAL - 136027  
PH :8813038777.

**KARNAL**

74. KARNAL MOTORS (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA - 132001  
PH :8572801011.

**PALWAL**

75. AUTONATION (EENA-EE-01), KILA NO.-15/2 & 16/1, 57 MILESTONE, NEAR ECHS HOSPITAL, MATHURA ROAD, PALWAL - 121102  
PH :9811321581.

**PANIPAT**

76. AUTO GALLERY (D3NB-D3-01), NANGAL KHERI, NEAR BBMB POWER HOUSE, OPP. SEC-29, PANIPAT, HARYANA - 132103  
PH :9812615000.

**REWARI**

77. DINCO MOTORS (U1NA-U1-01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401  
PH :0129-4353535,  
9953357777  
8448787882  
8448787883.

**ROHTAK**

78. JAGMOHAN MOTORS (A6NA-A6-01), NORTHERN BYEPASS, SUKHPURA CHOWK, JIND ROAD, ROHTAK, HARYANA - 124001  
PH :8754045446.

**SIRSA**

79. SHAKTI MOTORS (E4NA-E4-01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSA - 125055  
PH :88160-72888,  
88138-75888.

**HIMACHAL PRADESH**

**NAGROTA**

80. KANGRA VEHICLELEADS (D9NA-D9-01), VILL HATWAS, PATHANKOT - MANDI HIGHWAY, NAGROTA BAGWAN DISTT. KANGRA - 176047  
PH :7087916168.

**JAMMU AND KASHMIR**

**JAMMU**

81. JAMKASH VEHICLES (33NB-33-01), NH-1A BYE PASS OPPOSITE CHANNI HIMMAT, JAMMU (J&K) - 180015  
PH :7710400000.

**Nexa Workshop (AS ON 30.05.2023 )**

82. JAMMU MOTORS (33ND-33-01), KHASRA NO. 421, TOPE SHERKHANIA, AKHNOOR ROAD, OPPOSITE BEST PRICE, JAMMU, JAMMU & KASHMIR - 180016  
PH :9419581624.

**JHARKHAND**

**BOKARO**

83. HINDUSTAN AUTO AGENCY (B5NA-B5-01), KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS, BOKARO. - 827013  
PH :9304807318.

**DEOGHAR**

84. PREMSONS (SGWN-SGW-01), PLOT NO 318/319 UNDER THANA NO 583,MAHESHMARA MOUJA ,DEOGHAR - 814112  
PH :9835507004.

**DHANBAD**

85. RELIABLE (52NA-52-01), RELIABLE INDUSTRIES NEXA WORKSHOP AMAGHATA ,BY PASS ROAD SUGIADIH,PIN -828109 - 828109  
PH :7992470853.

**HAZARIBAGH**

86. PREMSONS (Y9NA-Y9-01), PREMSON MOTOR UDYOG PVT LTD. NEXA SHOWROOM NEXT TO GST OFFICE,ARYA NAGAR,HURHURU,HAZARIBAGH,JHARKHAND 825301 - 825301  
PH :9835507004.

**JAMSHEDPUR**

87. MOTOR WORLD (31NB-31-01), NS-6, 2ND PHASE, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013  
PH :9431128683.

88. PEBCO MOTORS (31NA-31-01), KANDRA ROAD, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013  
PH :9334183260.

**RANCHI**

89. SUDHA MOTORS (51NB-51-01), KATHALMORE, OPP. MANER DHABA, RANCHI - 834005  
PH :7001124836, 8837221096.

90. PREMSONS (51NC-51-01), PLOT NO 2651/2652, KHATA NO 239, MAUJA, VILLAGE BARAGAI , BARIATU MAIN ROAD, RANCHI, JHARKHAND - 834009  
PH :9334811248.

**KARNATAKA**

**BANGALORE**

91. MANDОВI MOTORS (02NJ-02-01), SURVEY NO 33/2,ALLALASANDRA, YELAHANKA NORTH, BANGALORE, KARNATAKA - 560064  
PH :9513729888.

92. KALYANI MOTORS (02NI-02-01), SURVEY NO 17/2, KENCHENAHALLI VILLAGE, RAJARAJESHWARI NAGAR, MYSORE ROAD,BANGALORE, KARNATAKA - 560032  
PH :9845049626.

93. SURAKSHAA CAR CARE (02NF-02-01), 2/6, BERTEN AGRAHARA, OPP TO METRO CASH & CARRY, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE, KARNATAKA - 560100  
PH :9845047393.

94. PRATHAM MOTORS (02NK-02-01), 120,SARJAPUR MAIN ROAD,DODDAKANAHALLI, VARTHUR HOBLI, BANGALORE EAST, KARNATAKA- 560035. - 560035  
PH :8884000579.

95. VARUN MOTORS (02NG-02-01), NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE, TUMKUR ROAD, YESHWANTPUR, BANGALORE, KARNATAKA- 560022. - 560022  
PH :8971888885.

96. VARUN MOTORS (02NM-02-01), 37/56 NAGAVARA VILLAGE,HEBBAL RING ROAD ,BANGALORE - 560024  
PH :9513394753.

97. KALYANI MOTORS (02NN-02-01), 152/7, OUTER RINGS ROAD, DODDA BANASWADI, HORAMAVU, KR PURAM HOBALI, BANGALORE -560043. - 560043  
PH :9900020454.

98. BIMAL AUTO (02NL-02-01), NO.1, 3RD BLOCK, 2ND STAGE, NAGARABHAVI, OUTER RING ROAD, BANGALORE – 560072 - 560072  
PH :9513843355.

**BELGAUM**

99. SHANTESHA MOTORS (E8NA-E8-01), PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD, KANGRALI B K, BELGAUM, KARNATAKA-590010. - 590010  
PH :9538195381.

**DAVANGREE**

100. SHRUTI MOTORS (S1NA-S1-01), AVARAGERE ROAD, OLD, PB RD, DAVANAGERE, KARNATAKA 577003 - 577003

**HASSAN**

101. VENKAT MOTOR (C8NA-C8-01), KHATA NO 200-201, DM HALLY, BANGALORE - MANGALORE ROAD, HASSAN, KARNATAKA - 0

**HUBLI**

102. LEKHYA MOTORS (73NA-73-01), OPP TO APMC 2ND GATE, ESHWAR NAGAR, HUBLI-DHARWAD ROAD, HUBLI-580025. - 580025  
PH :9513777265.

**MANGLORE**

103. MANDОВI MOTORS (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142  
PH :9845133077.

**MYSORE**

104. FRIENDLY MOTORS (25NB-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016  
PH :9845011686.

105. KALYANI MOTORS (25NC-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016

**SHIMOGA**

106. SHRUTI MOTORS (B7NA-B7-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA,KARNATAKA - 577201  
PH :989596666.

**KERALA**

**KOTTAYAM**

107. SAI SERVICE (B8NB-B8-01), SY. NO. 341/11, 341/12, PERUR VILLAGE, MC ROAD, THELLAKOM, KOTTAYAM - 686630  
PH :92880 24220.

**THRISUUR**

108. POPULAR VEHICLES (A4NB-A4-01), SURVEY NO 62/P, CHUNGAM,OLLARI, KANJANI ROAD, ARANATTUKARA VILLAGE, THRISSUR - 680618 - 680618

**KERELA**

**ALLEPEY**

109. POPULAR VEHICLES (E5NB-E5-01), 12/287A, PARAVOOR, ALLEPPEY - 0  
PH :9846161601.

**CALICUT**

110. AM MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EYE HOSPITAL,SRAMBIKKAL PARAMBAMINI BYPASS JAIL ROAD JUNCTION,PUTHIYARA POST,CALICUT, KERELA-673004. - 673004  
PH :7708833966.

111. POPULAR VEHICLES (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017  
PH :9946104660.

**COCHIN**

112. INDUS MOTOR (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106  
PH :9747508822.

113. SAI SERVICE (27NA-27-01), 723/7,6,18,OPP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. - 682021  
PH :8645106193.

**KASARGOD**

114. INDUS MOTOR (3LNA-3L-01), SURVEY NO.384/3C,10, MUTTATHODY VILLAGE, INDIRA NAGAR, CHENGALA POST, KASARGODE, KERALA- 671541 - 671541  
PH :9745998341.

**KAYAMKULAM**

115. SAI SERVICE (8LNA-8L-01), S.NO 111/48, KP ROAD, KAYAMKULAM, KERALA - 690502  
PH :9288024222.

**KOLLAM**

116. SARATHY AUTOCARS (C7NA-C7-01), NH-47 BYE PASS ROAD, AYATHIL.P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021  
PH :9848659456.

**TRIVANDRUM**

117. INDUS MOTOR (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND,ALUMOOD J,N,NH 47,KANNIYAPURAM, TRIVANDRUM - 695301. - 695301  
PH :9656685678.

**MADHYA PRADESH**

**BHOPAL**

118. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-'03-01), 42, 6\_BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSHANGABAD ROAD, BHOPAL (M.P.) - 462016  
PH :7909903921.

119. OCEAN MOTORS (03ND-03ND-01), PLOT NO-54 & 55, SECTOR-A, GOVINDPURA INDUSTRIAL AREA, JK ROAD, BHOPAL - 462023  
PH :7389936400.

**INDORE**

120. PATEL MOTORS (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJIRANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016  
PH :7771002581.

121. OCEAN MOTORS (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001  
PH :0731-4826666.

122. RANA MOTORS (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 - 452010  
PH :9933055539.

123. RUKMANI (53NC-53-01), RUKMANI MOTORS NEXA SERVICE,FOOTHI OTHI SQUARE,OPP.DASTOOR GARDEN,INDORE - 452002  
PH :9755512100.

**JABALPUR**

124. STANDARD MOTORS (54NC-54-01), KHARSA NO-529/1/1, NEAR TRIPURI CHOWK GARHA JABALPUR M. P. - 482003  
PH :9773543358.

157. JAGRUT MOTORS (G3NA-G3-01), 410/6/1B,  
SALVI STOP, SHIVAJI NAGAR MAIN ROAD  
RATNAGIRI, MAHARASHTRA - 415612  
PH :9820039626.

58. CHAVAN MOTORS (B1NA-B1-01), SURVEY NO.  
534/4, BALE PUNE ROAD, SOLAPUR,  
MAHARASHTRA - 413224 - 413224  
PH :8888881314.

59. EXCEL AUTOVISTA (39NA-39-01), MOHAN MILL  
COMPOUND, GHODBUNDER ROAD , THANE ,  
MAHARASTHRA - 400607  
PH :9967331726.

**YAVATMAL**

## DIMPUR

## BERHAMPUR

164. SKY AUTOMOBILES (E2NA-E2-01), PLOT NO  
373/2229 & 373/1204, AMABAPUA MOUZA,  
BRAHMAPUR (ODISHA) - 760007  
PH :7381266000.

**BHUBANESWAR**

165. NARAYANI MOTORS (04NC-04-01), PLOT NO  
140/2004, KHATA NO -1152/364, UNIT-20,  
JAGAMARA, KHANDGIRI, CHAWAK,  
BHUBANESHWAR - 751001  
PH :9583001877.

**MEYPORE**

166. LEGEND CARS (SWNA-SW-01), NH26,  
OPPOSITE HOTEL HELLO, INDUSTRIAL  
ESTATE, JEYPORE, ODISHA - 764001  
PH :09692883057.

## ROURKELA

- SAGAR**

127. ADINATH CARS (G1NA-G1-01), KHASRA NO 155,  
P H NO. -77, BAHERIA GADGAD,  
SAGAR JABALPUR ROAD, SAGAR - 470004,  
MADHYA PRADESH, INDIA - 470004  
PH :9752447690.

128. CITY CARS (D7NA-D7-01), BEHIND NEXA  
SHOWROOM, 666/2, AMOUDHA, PANNA ROAD,  
SATNA, MADHYA PRADESH - 485001  
PH :6262230999.

129. STANDARD MOTORS (SFAN-SAF-01), KHASRA NO-459, VILLAGE JAMUI NEAR BAGHEL DHABA, BUDHAR ROAD, SHAHDOL (M.P.) - 484001  
PH :9329927451, 9329927458.

130. RUKMARANI (YUG) (3WNA-3W-01), 59/1, DEWAS  
ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN -  
456664  
PH :9755512100.

**AHMEDNAGAR**

131. KANKARIYA AUTOMOBILES (A5NA-A5-01),  
SH-60,NEWASA ROAD  
,NAGARDEOLE,AHEMDANAGAR,MAHARASTRA  
414601  
PH :9403961522.

132. ASPA BANDSONS (F1NA-F1-01), SHIVANI  
AIRPORT AREA, AKOLA - MAHARASHTRA  
(444001) - 444001  
PH :942312366.

133. ASPA BANDSONS (F2NA-F2-01), F32/1 MIDC ,  
AURANGABAD NAGPUR EXPRESS HIGHWAY,  
AMRAVATI, MAHARASHTRA - 444607  
PH :9130041513.

134. AUTOMOTIVE MANUFACTURER LTD  
(21NB-21-01), PLOT NO :- L- 3 / 1 , BETWEEN  
GARWARE & WOCKHARDT LTD, JALGAON  
ROAD, MIDC CHIKALTHANA, AURANGABAD PIN :  
- 431006, MAHARASHTRA - 431006  
PH :9970499273.

135. PAGARIYA AUTO (21NA-21-01), OPP AIRPORT,  
NEXT TO INDIAN OIL PETROL PUMP, JALNA  
ROAD, AURANGABAD, MAHARASHTRA - 431006  
PH : 8888859502.

136. MAHALAXMI AUTO (7RNA-7R-01), BHIGWAN  
ROAD, SHIV NAGAR, BARAMATI  
(MAHARASHTRA) - 413102  
PH :9850994014.

137. BARBATE AUTO (H3NA-H3-01), PLOT NO 15-18,  
OUT OF SURVEY NO 14/4, 15/5, MAUZA BADOLI,  
NAGPUR CHANDRAPUR HIGHWAY,  
CHANDRAPUR, MAHARASHTRA - 440025  
PH :8380887666.

138. SEVA AUTOMOBILES (P3NA-P3-01), PLOT NO. F-1, ADDITIONAL DHULE INDUSTRIAL AREA, DHULE, MAHARASHTRA - 424006  
PH :9960090614.

139. MANRAJ AUTO (C4NB-C4-01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA - 425003 - 425003  
PH :0253-6686666,  
9130033951.

140. SIMRAN MOTORS (AACN-AAC-01), 60/72,  
JAWAHAR COOPERATIVE INDUSTRIAL ESTATE,  
KALAMBOLI, KHARGHAR, MUMBAI,  
MAHARASHTRA. - 410209  
PH : 022-71430900,  
9594952348.

**KOLHAPUR**

141. SAI SERVICE (38NA-38-01), 1243/66, E WARD,  
SHIVAJI UDHYAMNAGAR, KOLHAPUR - 416001  
PH :9923208401.

142. SAI SERVICE (05NB-05-01), JOSEPH CARDIJN  
TECHNICAL SCHOOL , KHASHABA JADHAV  
MARG , OFF DR. AMBEDKAR ROAD , DADAR  
(EAST) MUMBAI, MAHARASHTRA. - 400014  
PH :022-48767777.

143. SHIVAM MOTORS (05ND-05-01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA. - 400069  
PH :02352-220084,

144. KTS AUTOMOTORS (05NH-05-01), UNIT NO A1,  
PANNALAL COMPOUND, LBS KANTILAL  
MAGANLAL ESTATE, L.B.S MARG, BHANDUP  
(W), MUMBAI - 400078  
PH :020-30414000,  
9168656888.

145. SHIVAM AUTOZONE (05NE-05-01), PLOT NO. 1 &  
2, RAMCHANDRA LANE EXTN., KANCHPAD, A,  
OFF LINK ROAD, MALAD-WEST. - 400064  
PH :9870938888.

146. BARBATE AUTO (20NA-20-01), 37/2, MANISH  
NAGAR, BESA T POINT, BESA ROAD NAGPUR  
440025 - 440025  
PH :7923600147,  
9727726004.

147. SEVA AUTOMOBILES (68NA-68-01), AIRPORT ROAD, SANGVI - 431605  
PH : 7065026520.

148. SEVA AUTOMOBILES (37NA-37-01), PLOT B-17,  
MIDC, AMBAD, NASIK, MAHARASHTRA - 422010  
PH :8975762303.

149. AUTOMOTIVE MANUFACTURER LTD  
(39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY,  
NAVI MUMBAI - 400706  
PH : 9769206120.

150. MY CAR (05NK-05-01), PLOT NO- GEN-25 &  
GEN-25 B/1, TTC INDUSTRIAL AREA, PAWANE,  
NAVI MUMBAI, MAHARASHTRA (400709) -  
400709

151. KOTHARI WHEELS (19NB-19-01), GATE NO 1605,  
OLD 1099, KESNAND ROAD, WAGHOLI,  
TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA  
- 412207

- PH :7721865000.  
152. EXCEL AUTOVISTA (19NG-19-01), SURVEY NO  
98/2A/P, NEW PUNE - MUMBAI HIGHWAY, NEAR  
BALEWADI STADIUM, BANER TALUKA, PUNE -  
411045

153. SEHGAL AUTO RIDERS (19NE-19-01), SURVEY NO 63/2, SHEWALEWADI, MANJARI BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHTRA - 412307  
DL-8450000000

154. WONDER CARS (19ND-19-01), PLOT NO 52/1  
BLOCK F2, MIDC PIMPRI, PUNE - 411019  
PH :9850094151.
155. MAHALAXMI AUTO (19NI-19-01), NEAR  
SADGURI PETROL PUMP, PUNE NASHIK

156. HIGHWAY, AT KURALI, KHED TALUKA, CHAKAN  
- 410501  
PH :9923589214.  
SAI SERVICE (19NC-19-01), SINHAGAD ROAD,  
NEAR NANDED CITY, VADGAON KHURD, PUNE.

## (MAHA

**Nexa Workshop (AS ON 30.05.2023 )**

167. ORBIT MOTORS (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041 PH :9165071234.

**SAMBHALPUR**

168. ODYSSEY MOTORS (D4NA-D4-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006 PH :0832-2408800, +91-9881746562.

**PUNJAB**

**AMRITSAR**

169. JAYCEE MOTORS (17NC-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501 PH :01815045400, 7536966666.

**BHATINDA**

170. TARA (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB - 151001 PH :8437019666.

**JALANDHAR**

171. MARWAHA (35NC-35-01), KHASRA NO - 16450, SITUATED AT RAJA GARDEN, KAPURTHALA ROAD, JALANDHAR CITY. - 144003 PH :9814735707.

**JALLANDHAR**

172. LOVELY AUTO (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALANDHAR PUNJAB - 144024 PH :7617571039, 7617571040.

**LUDHIANA**

173. GULZAR (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003 PH :9814839777.

174. HOSHIARPUR AUTO (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003 PH :8872501234.

175. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (62NH-62-01), OPP. MEDIWAYS HOSPITAL, FEROPZPUR ROAD, LUDHIANA - 141015 PH :8872000357.

176. LOVELY AUTO (62NF-62-01), 287/1, MOTI NAGAR, SHERPUR BYPASS, GT ROAD, LUDHIANA - 141010 PH :9875999161.

**MOHALI**

177. CM AUTO SALES (L1NA-L1-01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI - 160055 PH :9888034555, 9780011459.

**PATHANKOT**

178. PATHANKOT VEHICLELEADS (A7NA-A7-01), PLOT NO.-C-30, INDUSTRIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023 PH :7527006800.

**RAJASTHAN**

**AJMER**

179. NAVNEET MOTORS (B2NA-B2-01), PLOT NO7 -8,RIICO INDUTRAIL ESTATE MAKHAPURA NASIRBAD ROAD,AJMER(RAJASTHAN)-PIN CODE -305002 - 305002 PH :9414149149.

**ALWAR**

180. FORTUNE CAR (F9NA-F9-01), 6TH MILESTONE VILLAGE JATIYANA,OPP. PETROL BEHROR ROAD ALWAR - 301001 PH :9982341741.

**BHILWARA**

181. CHAMPION CARS (E3NA-E3-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001 PH :9001027933.

**BIKANER**

182. AUDI MOTORS (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD , BICHHWAL INDUSTRIAL AREA , BIKANER 334001 - 334001 PH :9887222786.

**CHITTORGARH**

183. TECHNOY (K9NA-K9-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001 PH :8905992939.

**JAIPUR**

184. K P AUTOMOTIVES (11NB-11-01), PLOT NO 3-4 MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION,SIRSI ROAD - 302034 PH :7412059823.

185. SATNAM MOTORS (11ND-11-01), D-27, K/L/M, ROAD NO-3,SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA ,JAIPUR, RAJASTHAN-302023 - 302023 PH :9649373311.

186. PREM (11NC-11-01), PLOT NO- 12,13,14, SUDARSHANPURA INDUSTRIAL AREA, NEAR 22 GODAM, JAIPUR - 302016 PH :8058998123.

**JHUNJHUNU**

187. AUDI MOTORS (FNNA-FN-01), NEAR TVS TWO WHEELER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001 PH :7970006402.

**JODHPUR**

188. AUDI MOTORS (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001 PH :7300077394.

189. LMJ AUTO (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1 JODHPUR - 342009 PH :7412087320.

190. LMJ SERVICES (65NB-65-02), PLOT NO -61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001 PH :8094011126.

**KOTA**

191. BHATIA & CO. (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPIA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005 PH :8094011126.

**SIKAR**

192. JAMU (K7NA-K7-01), THAR PETROL PUMP,JAIPUR ROAD,SIKAR - 332001 PH :9841403715.

**UDAIPUR**

193. TECHNOY (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS , UDAIPUR - 313001 PH :0141 2984568.

**TAMIL NADU**

**CHENGALPET**

194. AIE CARS (BBSN-BBS-01), NO. 1/7-A, GST ROAD, CHENGALPET – 603001 - 603001 PH :74012 92949.

**CHENNAI**

195. PILLAI & SONS (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117 PH :9994950505.

196. POPULAR VEHICLES (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI,TAMILNADU- 600116 - 600116 PH :9842389111.

197. KHIVRAJ MOTORS (14NA-14-01), PLOT NO 21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058 - 600058 PH :9626099999.

198. VISHNU CAR (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056 PH :7339359111.

199. ABT (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU - 600032 PH :9994444303.

200. VISHNU CAR (14NG-14-02), POONAMALLE HIGH ROAD, ARUMBAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056 PH :7550333622.

201. KHIVRAJ MOTORS (14NA-14-02), OLD S.NO. 11/1 & 2, NEW S.NO.11/2 - B, NO.100, NERKUNDRAM VILLAGE, SAIDAPET TALUK, CHENNAI - 600107 PH :9962195957.

**COIMBATORE**

202. AADHI CARS (41NB-41-01), OLD KALIAPPA KALYANAMANDAM, PREMISES, KAVUNDAMPALAYAM, COIMBATORE, TAMIL NADU - 627007 PH :9003977577.

203. SREE SARADHAMBAL (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. - 641004 PH :9790004271.

204. JAIRISHNAA AUTOSALES PVT LTD (41ND-41-01), NO. 656, TRICHY ROAD, NEAR ORTHO ONE HOSPITAL, COIMBATORE, TAMIL NADU- 641012 - 641012 PH :9788550734.

**ERODE**

205. SREE SARADHAMBAL (H7NA-H7-01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011 PH :9786022272.

**HOSUR**

206. SRI AMMAN CARS (7QNA-7Q-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44,OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109 PH :9841033464.

**KARAIKUDI**

207. MEENAKSHI AUTOZONE (HXNA-HX-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIPURAM, KARAIKUDI, TAMIL NADU - 630001 PH :9940094881.

**MADURAI**

208. ASIR (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001 PH :99440 59911.

**NAGERCOIL**

209. ATHEN CARS (S5NA-S5-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU - 629003 PH :9751196436.

**PONDICHERRY**



**Nexa Workshop (AS ON 30.05.2023 )**

210. SHENBAKA CARS (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMAMBAKKAM, BAHOR COMMUNE,PONDICHERY - 607402 PH :7383222220.

**SALEM**

211. THRIVENI CARS (A2NA-A2-01), 2/6, KANDHAMPATTY,BYE PASS ROAD, SALEM, TAMILNADU - 636005 PH :9786022272.

212. SM CAR (A2NB-A2-01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM - 636010 PH :7094440010.

**THANJAVUR**

213. PILLAI & SONS (E7NA-E7-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403 PH :9443264165.

**TIRUNEVELI**

214. AADHI CARS (A3NA-A3-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKALPURAM, TRIVANDRUM ROAD, C1 KOKKARAKULAM - 627007 PH :7373091461.

**TRICHY**

215. PLA MOTORS (23NA-23-01), TS NO.29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017. - 620017 PH :8110099991.

**TRIPUR**

216. SHASHTI (Y7NA-Y7-01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604 PH :9942903310.

**VELLORE**

217. SRI GANESH CARS (C6NA-C6-01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI,VELLORE, TAMILNADU - 632009 PH :9884722126.

**TELANGANA**

**HYDERABAD**

218. KALYANI MOTORS (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHAMRANGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079 PH :9347121212.

219. VARUN MOTORS (10NB-10-01), B-54, CO.INDUTRIAL ESTATE, BALANAGAR, HYDERABAD, TELENGANA - 500037 PH :8886631496, 8886631499.

220. GEM MOTORS (10NH-10-01), D.NO.8-96, SURVEY NO.128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA. - 500084 PH :9912345899.

221. JAYABHERI AUTO (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032. - 500032 PH :9849103917, 9437061030.

222. VARUN MOTORS (10NB-10-02), H.NO. 8-2-120/117/A/2. PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD - TELANGANA - 500033 PH :9885610555.

223. SAI SERVICE (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046. - 500046 PH :9966377888.

224. RKS (10NI-10-01), SY NO:42, PET BASHERABAD, QUTHBULLAPUR, MEDCHAL MANDAL, HYDERABAD - 500014 PH :9542234567.

225. ADARSHA AUTOMOTIVE (10NG-10-01), PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI NAGAR, BALANAGAR, KUKATPALLY, HYDERABAD - 500072 PH :9154854949 8897972200.

226. ADARSHA AUTOMOTIVE, SHAMSHABAD (10NG-10-02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA – 501218 - 501218 PH :8297116633.

**KARIMNAGAR**

227. ADARSHA AUTOMOTIVE (N6NA-N6-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001 PH :9847073265.

**KHAMMAM**

228. PARAMSHIVA MOTORS (1GNA-1G-01), SY NO. 507,VELUGUMATLA, VILLAGE, KHAMMAM, TELANGAN - 507318 PH :9848988312.

**MAHBUBNAGAR**

229. JAYARAMMA AUTO (WPNA-WP-01), CHRISTIANPALLY, BHOOTPOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001 PH :8096990074.

**MANCHERIAL**

230. ADARSHA AUTO (CMNA-CM-01), SURVEY NO-417,BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL, TELANGANA - 504208 PH :9133329709.

**NIZAMABAD**

231. VARUN MOTORS (1HNA-1H-01), 1-51/4/1/D4 MADAHAVA NAGAR,HYDERABAD ROAD,NIZAMABAD,TELANGANA,503230 - 503230 PH :9542222486.

**SECUNDERABAD**

232. MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDERABAD, ANDRAPRADESH-500020. - 500020 PH :86850 01155.

233. AUTO PIN (K6NB-K6-01), PLOT NO 6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDERABAD, TELANGANA - 500011 PH :8886144551.

234. VARUN MOTORS (K6NC-K6-01), VARUN MOTORS,2ND CROSS ROAD,SAINIKPURI,SECUNDERABAD - 500094 PH :779960094.

**WARANGAL**

235. ADARSHA AUTOMOTIVE (D5NA-D5-01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007 PH :8978944414.

**UTTAR PRADESH**

**AGRA**

236. MADHUSUDAN MOTORS (66NA-66-01), ADJOINING HEMA PETROL PUMP, EIT MANDI, BODLA, AGRA - 282007 PH :6386901181, 6386901188.

237. PREM MOTORS (66NB-66-01), KHASRA NO -655, VILL. ARTONI, DELHI-AGRA HIGHWAY, AGRA - 282007 PH :9690010839.

238. KTL PVT LTD (66NC-66-01), KHASRA NO - 246/1, 249/1, 251 , KUBERPUR, AGRA - 282006 PH :8449710014.

**ALIGARH**

239. CLML (B6NA-B6-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOL, ALIGARH, UTTAR PRADESH. - 202002 PH :9639775522.

240. CLML (B6NA-B6-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 - 202140 PH :9358373099.

**BARIELY**

241. CORAL (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BARIELLY, UP - 243001 PH :9359101010.

**BIJNORE**

242. SHAKUMBARI (6DNA-6D-01), 4TH KM. MILESTONE, BIJNOR - NAJIBABAD RD, NEAR DPS SCHOOL, BIJNOR, UTTAR PRADESH 246701 - 246701

**FIROZABAD**

243. DEV MOTOR (DFNA-DF-01), DHOLPURA, NEAR ST. JOHNS CHAURAH, AGRA ROAD, FIROZABAD - 283203 PH :9045031800.

**GHAZIABAD**

244. ROHAN MOTORS (59NA-59-01), KHASRA NO 46 , DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101 PH :8178839830.

245. MSM (JJ IMPEX) (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 - 201003 PH :9990033015.

**GORAKHPUR**

246. SMART WHEELS (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH - 273009 PH :8222002147.

247. ARBIT AUTO (72NB-72-01), PLOT NO - A & B, BUDDH VIHAR YOJNA, PART-B, TARAMANDAL ROAD, GORAKHPUR - 273009 PH :8429526255.

**GREATER NOIDA**

248. MSM (JJ IMPEX) (T283-T2-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009 PH :9711474930.

**HARDOI**

249. CONCEPT (QENA-QE-01), PLOT NO. 1609 & 1605, GUNGABUX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001 PH :7607696666.

**JHANSI**

250. SURI (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003 PH :7705000558.

**KANPUR**

251. KTL PVT LTD (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILYWAY COLONY, KANPUR, UTTAR PRADESH. - 208017 PH :7408409312.

**LUCKNOW**

## Nexa Workshop (AS ON 30.05.2023 )

252. ANAND MOTORS (13NC-13-01), GATA NO. 1062  
PARGANA RAJA BIJLI PASI VILLAGE  
AURANGABAD, SHAHEED PATH (OPPOSITE TO  
RAMABAI AMBEDKAR MAIDAN), LUCKNOW,  
UTTAR PRADESH - 226012  
PH :7705807552,  
9838480480.
253. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT  
NO - 513, VILL. HARIHARPUR BIJNAUR, OPP  
ANSAL API, AMAR SHAHEED PATH, LUCKNOW -  
227105  
PH :7311190503.
254. BRIGHT4WHEELS (13NB-13-01), PLOT NO - D10,  
SAROJINI NAGAR INDUSTRIAL AREA,  
LUCKNOW. PIN - 226008 - 226008  
PH :9151004111.

### MATHURA

255. UMA MOTORS (H8NA-H8-01), PLOT NO 222,  
MAHOLI, NEAR KIRAN HOSPITAL, MATHURA -  
281004  
PH :9997385999.

### MEERUT

256. TR SAWHNEY (48NB-48-01), 1183/17 RITHANI,  
ZONE - A, SECTOR 4 NEAR PETROL PUMP,  
MEERUT, UTTAR PRADESH - 250103  
PH :18002704142.

### NOIDA

257. FAIR DEAL (A1ND-A1-'01), A-107, SECTOR-5.  
NOIDA - 201301  
PH :9810542222.
258. MOTOR CRAFT (59NB-59-01), C 42 SECTOR 57,  
NOIDA, UTTAR PRADESH - 201301  
PH :7230029429,  
7230000000.

### RAIBAREILY

259. KTL AUTOMOBILE PVT LTD (HSNA-HS-01), 1481,  
NEAR KATHWARA BUS STAND, LUCKNOW  
RAIBARELI HIGHWAY, HARCHANDPUR,  
RAIBARELI - 229303  
PH :7311190503.

### SAHIBABAD

260. MSM (JJ IMPEX) (M983-M9-N1), MARUTI  
SERVICE MASTERS, NEXA SERVICE, PLOT  
NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL  
AREA, - 201010  
PH :9711474930.

### SHAHJAHANPUR

261. SUMITRA DS (W2NA-W2-01), SH25 , RETI ROAD  
SHAHJAHANPUR - 242001  
PH :9936095228.

### VARANASI

262. AGR (84NA-84-01), ARAZI NO - 285.286  
LUCCHERPUR, PARGANA-ATHGAWA TEHSIL,  
HARHUA , VARANASI - 221105  
PH :9305646425.

## UTTARAKHAND

### DEHRADUN

263. SHAKUMBAR (57ND-57-01), KHASRA NO.  
-15-ANA, MOHABBEWALA, SAHARANPUR  
ROAD, DEHRADUN-248001 - 248001  
PH :7895058449.

### HALDWANI

264. NAINITAL MOTORS (J6NA-J6-01), 5TH KM  
RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR  
UJALA PRINTING PRESS, HALDWANI,  
UTTARAKHAND - 263139  
PH :7467800077,  
7467800050.

### ROORKEE

265. SHAKUMBAR (H2NA-H2-01), 5 KM MILESTONE  
,NH-58,ROORKEE-DELHI ROAD ,NEAR HOTEL  
GODWARI,ROORKEE, UTTARAKHAND - 247667  
PH :9634092690,  
7500860007.

### RUDRAPUR

266. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.  
LTD. (U4NB-U4-01), KASHIPUR ROAD,  
OPPOSITE GREEN PARK COLONY, VILLAGE  
DIBDIBA, TEHSIL BILASPUR, RAMPUR,  
UTTRAKHAND - 244901  
PH :01912465542,  
9797770257.

## WEST BENGAL

### ASANSOL

267. BEEKAY AUTO (F6NA-F6-01), NH-2 ,CHANDA  
MORE ,POST KALI PAHARDI, JAMMURIA  
DISTRICT WEST BARDHAMAN - 713339  
PH :9932049425.

### COCHBEHAR

268. SEVOKE MOTORS PVT. LTD. (BWZN-BWZ-01),  
NEXA COOCH BEHAR CENTRAL VILL & P.O. -  
MAHISHBATHAN P.S. - KOTWALI, NH - 31  
COOCHBEHAR,W.B. -734617 - 734617  
PH :8016095268.

### HOWRAH

269. MACHINOTECHNO (X7NA-X7-01), 109, 1, UPPER  
FORESHORE RD, CHOURA BUSTEE, SHIBPUR,  
HOWRAH, WEST BENGAL 711102 - 711102  
PH :9830081632.

### JALPAIGURI

270. PODDAR AUTO (XYNA-XY-01), ASSAM MORE  
BUS STOP, SH12A, JALPAIGURI, WEST BENGAL  
735102 - 735102  
PH :8945533002.

### KHARAGPUR

271. BHANDARI AUTOMOBILES (G7NA-G7-01),  
CHOWRANGEE, PLOT NO-138 & 139, O T ROAD,  
KHARAGPUR - 721301  
PH :7603076061.

### KOLKATA

272. JYOTE MOTORS (06ND-06-01), MIRANIA ROAD,  
ARUPOTA ON BASANTI HIGHWAY, - 700105  
PH :9074158220.
273. MACHINOTECHNO (06NG-06-01), 98/A/2 BT  
ROAD,P.S - BARANAGAR, P.O. - ISI BT ROAD,  
KOLKATA, WEST BENGAL – 700090. - 712250  
PH :62922283744.

### SREERAMPORE

274. STARBURST (B8TN-BBT-01), NEAR ALLAHABAD  
BANK, MOLLARBER, SERAMPORE. - 700090  
PH :9830081672.

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

**ANDHRA PRADESH**

**CUDDAPPAH**

- 1.## SIVAJI MOTORS (3275), BESIDES  
PADMASHALI KALYANA MANDAPAM,  
MADRAS ROAD, KADAPA-516002, ANDHRA  
PRADESH,  
PH :516002-9849113189,  
2.## SREE VENKATESWARA AUTO. (1030),  
SANKARA PURAM, CUDDAPAH (A.P.), ,  
PH :516002-9704209620.

**GUNTAKAL**

- 3.## S. MAHABOOB AUTOMOBILES (4075), ALUR  
ROAD, GUNTAKAL-515802, ,  
PH :515802-9440208312.

**GUNTUR**

- 4.## S. S. MOTORS (4946), OPP. JKC COLLEGE,  
JKC COLLEGE ROAD, GUNTUR-522006,  
ANDHRA PRADESH,  
PH :522006-9848936363.

**KAKINADA**

- 5.## SATISH AUTO CARE (5038), BEHIND  
KALPANA THEATRE, BEACH ROAD  
KAKINADA, DISTRICT EAST GODAVARI,  
ANDHRA PRADESH,  
PH :533005-9848313599,  
6.## SRI SHIRDI SAI TECHNOCRAFTS (1459),  
FLAT NO 36/2, I.D.A. , RAMANAYYAPETA,  
BESIDE MAHINDRA SHOW ROOM, OPP:  
BHAVANI CASTING ROAD,  
KAKINADA-533005,  
PH :533005-9848633336.

**KAVALI**

- 7.## KAMAL MOTORS (3842), 10-15-43/J3A OPP  
LIC, TANK RAOD, KAVALI,  
PH :524201-9440928888.

**KURNOOL**

- 8.## SRINIWAS AUTO GARAGE (5170), KALLUR  
ROAD, KURNOOL, DISTRICT - KURNOOL,  
ANDHRA PRADESH,  
PH :518002-9440244660.

**MACHILIPATNAM**

- 9.## SRI MARUTI MECHANICAL WORKS (4172),  
D.NO 4-121, PLOT NO 26.27, , POTEPELLI  
INDUSTRIAL PARK, MACHLIPATNAM-  
521002,  
PH :521002-9440538012.

**MANDAPETA**

- 10.## MODERN MARUTI CARE (4866), D.NO.  
4-1-59/2, MAIN ROAD, MANDAPETA-533309,  
DISTRICT-EAST GODAVARI, ANDHRA  
PRADESH,  
PH :533309-9133198494.

**MATHURAWADA**

- 11.## ANY TIME SERVICE CENTRE (4860), BESIDE  
ELECTRICAL SUBSATION , MADHURAWADA  
- 530041, DISTRICT VISAKHAPATNAM,  
ANDHRA PRADESH,  
PH :530041-8977799888.

**NAGARI**

- 12.## PUJITHA SERVICE CENTER (5872),  
TIRUPATI ROAD, NAGARI-517583,  
DISTRICT-CHITTOOR, ANDHRA PRADESH,  
PH :517583-9966106128.

**NANDYAL**

- 13.## MARUTI MOTORS (2635), PLOT NO 428,  
NH-18 , NEAR RAILWAY GATE , NANDYAL-  
518501,  
PH :518501-9440554617.

**NELLORE**

- 14.## MARUTI AUTO SERVICE STN. (2620), 16/796  
SANKARA AGRAHARAM, NELLORE-524 001  
(A.P.), ,  
PH :524001-98858 81905,  
15.\*\* MARUTI MOTORS (176), 16-3-995, MINI  
BYPASS ROAD,, RAMALINGAPURAM,  
NELLORE-524 003,(A.P.),  
PH :524003-9440278243.

**PATTIKONDA**

- 16.## ROYAL MOTORS (5776), ADONI ARTS &  
SCIENCE, COLLEGE ROAD  
ADONI,PATTIKONDA-518302,  
DISTRICT-KURNOOL, ANDHRA PRADESH,  
PH :518302-9866362847.

**PRODDATTUR**

- 17.## SRI RAM MOTORS (3642), 189 INDUSTRIAL  
AREA, NEAR SRI LAKSMI NAGAR, MYDUKUR  
ROAD, PRODDATUR (A.P.),  
PH :516360-9666890525.

**RAJAHMUNDRY**

- 18.## MARUTHI MOTORS (1257), D.NO 88-30-04,  
OPP I T.C. GADALAMMA NAGAR, NH-16,  
RAJAMAHENDRAVARAM -533107,  
PH :533107-9848253434.

**SRIKALAHASTI**

- 19.## SUNDEEP CARS (5972), 16/769,SRI RAM  
NAGAR COLONY, SRIKALAHASTI-517640,  
DISTRICT-CHITTOOR, ANDHRA PRADESH,  
PH :517640-9848294869.

**TENALI**

- 20.## HIMAJA MARUTI SERVICE STATION (2828),  
LECTURER'S COLONY, GIRIJA HOSPITAL  
ROAD, GANGANAMMAPET, TENALI-522 201  
GUNTUR DIST. (A.P.),  
PH :522201-9849715727.

- 21.## RAHUL MOTORS (5157), D.NO.18-3-4BITRA  
SRI RAMULU STREET, BEHIND TELEPHONE  
EXCHANGE SALIPET, TENALI, ANDHRA  
PRADESH,  
PH :522201-9490187453.

**VISAKHAPATNAM**

- 22.## SIRI AUTOMOBILES (5232), PLOT O 94/A IDA  
E BLOCK, AUTO NAGAR.GAJUWAKA,  
VISHAKHAPATNAM, ANDHRA PRADESH,  
PH :530012-9963296667.

- 23.## SRINIVASA AUTO GARAGE (5440), OPP.  
KANTI ROAD,, NEAR RAYS PETROL PUMP -  
VISHAKHAPATNAM, DISTRICT -  
VISHAKHAPATNAM, ANDHRA PRADESH,  
PH :530031-9912688943.

- 24.\*\* VISAG AUTO SCANS (461), 49-52-1/4/2,OPP  
HNR VIHAR APPARTMENTS, SANTHIPURAM,  
SANKARMATAM ROAD,  
VISAKHAPATNAM-530016,  
PH :530016-9246625885.

**VIZIANAGARAM**

- 25.\* VIKRAMA AUTOMOBILES (4621), 17-13-4  
TEMPLE STREET, VIZAINAGARAM - 531 202  
(A.P.), ,  
PH :535003-9440192224.

**ARUNACHAL PRADESH**

**ALONG**

- 26.## BANNU MOTORS (1744), SIYOM MARKET,  
ALONG, WEST SIANG DISTT., (ARUNACHAL  
PRADESH),  
PH :791001-9436056096/8258834061.

**BOMDILA**

- 27.## GURU MOTORS (3921), BIRPUR, RUPA,  
ARUNACHAL PRADESH 790003,  
PH :790003-7640898278.

**NIRJULI**

- 28.## SANGO SERVICE CENTRE (5742),  
NH-52,NIRJULI - 791110,  
DISTRICT-PAPUMPARE, ARUNACHAL  
PRADESH,  
PH :791110-9436052480/8974454448.

**TAWANG**

- 29.## TAWANG MARUTI SERVICING STATION  
(4255), OLD BAZAR LINE, P.O. & P.S.,  
TAWANG, ARUNACHAL PRADESH,  
PH :790104-9402493456.

**ZIRO**

- 30.## HILLS AUTO AGENCY (3922), POLICE  
RESERVE & PETROL PUMP ROAD, HAPOLI  
BAZAR , P.O. ZIRO, DISTT. LOWER  
SUBANSIRI, ARUNACHAL PRADESH - 791  
120,  
PH :791120-9436047232.

**ASSAM**

**BADARPUR**

- 31.## MARUTI CAR PLAZA (3635), NEAR  
INDUSTRIAL AREA, S.T. ROAD, BADARPUR,  
DISTT. KARIMGANJ (ASSAM) PIN-788 806,  
PH :788806-9854970591.

**BISHAWANATH CHARIALI**

- 32.\* BINA AUTOMATION (3677), , P.O.  
BISHAWANATH CHARIALI, DISTT.  
SONITPUR, ASSAM-784 176,  
PH :784176-9957309744.

- 33.## DISHANG DONE (1058), 52 N.H.,  
BISHWANATH CHARIALI-784176, DISTT.  
SONITPUR, ASSAM,  
PH :784176-9854004161.  
34.## BINA AUTOMATION (JPH :-.

**BOKAJAN**

- 35.## SREE GANESH MOTORS (6040),  
SUKHANJAN SUPER  
MARKET,P.O.BOKAJAN(C.F.), DISTRICT  
KARBI ANGLONG , ASSAM ,  
PH :782480-9435167138.

**BOKAKHAT**

- 36.## GOENKA AUTOMOBILES (2878), P.O.  
BOKAKHAT, DISTT. GOLAGHAT, ASSAM-785  
612,  
PH :785612-9854048910.

**DHALIGAON**

- 37.## ADHIKARI MOTOR WORKS (4049), P.O.  
DHALIGAON, DIST-BONGAIGAON,  
ASSAM-783385,  
PH :783385-9435020938.

**DHEMAJI**

- 38.## NARAH AUTOMOBILES (3852), C/O BLUE  
HILL COUNTER, P.O. DHEMAJI, DISTT.  
DHEMAJI, PIN-787 057 (ASSAM),  
PH :787057-9954390916.

**DHUBRI**

- 39.## BRAHMAPUTRA MOTOR SERVICING  
STATION (3127), G.T.B ROAD, DHUBRI-783  
301, (ASSAM),  
PH :783324-8876798739/9101176148.

**DIBRUGARH**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023 )

40.\* GEE DEE AUTO SERVICE (953),  
JHALUKPARA, DIBRUGARH-786 001, ASSAM,  
PH :786001-9435131119.

41.\*\* MEHBOOB AUTOMOBILES & TYRE  
SERVICES (1760), CHOWKIDINGHEE, NEAR  
STATE TRANSPORT, DIBRUGARH-3,  
PH :786005-9854432207.

**DIGBOI**

42.\*\* GAURI AUTOMOBILES (3760), MULIABARI,  
DIGBOI 786 171, ,  
PH :786171-9435137556.

**DOOM DOOMA**

43.\* S K AUTO CARE (3962), UCHAMATI,  
NATIONAL HIGHWAY, DOOM DUMA, ASSAM  
786151,  
PH :786151-9435135876.

**GOALPARA**

44.## BHARAT ENGINEERING WORKS (969), PO -  
BALDMARI, AGIA ROAD, GOALPARA  
(ASSAM)-783 102,  
PH :783102-9864767777.

**GOLAGHAT**

45.## KAKOTI MOTOR WORKS (1074), NEW  
AMOLAPATTY, RANGPUR, P.O.  
GOLAGHAT-785 621, DISTT. GOLAGHAT  
(ASSAM),  
PH :785621-9435053663.

**GOSSAIGAON**

46.## NARZARY AUTOMOBILES (4544), NH-31C,  
HABRUBIL, GOSSAIGAON, DIST  
KOKRAJHAR, ASSAM-783360,  
PH :783360-9435109765.

**GUWAHATI**

47.\*\* MONO MOTOR WORKS (966), BAMUNI  
MAIDAN, GUWAHATI-781 021, ,  
PH :781021-9864186600.

**HAILAKANDI**

48.## RONOK AUTOMOBILES (5978), LALA  
ROAD,NEAR CIVIL HOSPITAL,  
HAILAKANDI-788151, DISTRICT-HAILAKANDI,  
ASSAM,  
PH  
:788151-8723032380/9707428563/9401960215.

**HOJAI**

49.## PRAMAN MOTORS (5730), WARD NO. 12,  
HOLDING NO. 14, COLLEGE ROAD, HOJAI,  
ASSAM-782435,  
PH :782435-9954369700.

**JONAI**

50.## BOROOAH MOTORS (4545), NH-515,  
MURKONG SLEEK, DIST. DHEMAJI,  
JONAI-787060, ASSAM,  
PH :787060-9864590237.

**KARIMGANJ**

51.## S D AUTOMOBILE (4931), SILCHAR ROAD,  
KARIMGANJ - 788710, ,  
PH :788710-8135002919/9435074975.

**LUMDING**

52.## BEDI MOTORS (5827), MAIN ROAD,NORTH  
LUMDING,LUMDING-782447, DISTRICT -  
NAGAON, (ASSAM),  
PH :782447-9957333991.

**MANGALDAI**

53.## PRIYAM AUTOMOBILES (2424), NH 52  
COLLEGE ROAD, MANGALDOI, ASSAM,  
PIN-784 125,  
PH :784125-9401148730/9854209905.

**MARGHERITA**

54.\* VIRDI MOTOR WORKS (955), MISSION  
ROAD, P.O. MARGHERITA-786 181, DIST.  
TINSUKIA, (ASSAM),  
PH :786181-8011164932.

**MARIANI**

55.## VASKAR AUTOMOBILES (5237), NEAR NST  
TINALI, P.O. :MARIANI, DISTRICT - JORHAT,  
ASSAM,  
PH :785634-9508486813.

**MORANHAT**

56.\* CHINAKI SERVICE STATION (2973), (MARUTI  
AUTHORISED SERVICE STATION), NATUN  
NAGAR A.T. ROAD, MORANHAT-785 670,  
(ASSAM),  
PH :785670-9401512821.

**MORIGAON**

57.## PRAGATI MOTORS (5273), MORIGAON  
TOWN, WARD NO.1, BHATBOR-, DOLON  
PATH, P.O. :MORIGAON, DISTRICT -  
MORIGAON, ASSAM,  
PH :782105-9435064356.

**NAGAON**

58.## DAS MARUTI MOTOR WORKS (3734),  
NAGAON -782001, , , (ASSAM),  
PH :782002-9435360246.

**NALBARI**

59.## B.R.K. AUTOMOBILES ENGINEERING  
WORKS (2838), HAJO ROAD, NALBARI-781  
335, (ASSAM),  
PH :781335-9954895264.

**NAMRUP**

60.## RAJ ENTERPRISES (3849), NAMRUP  
INDUSTRIAL ENTERPRISES, SONARI  
TINALI, PARBATPUR, NAMRUP-786 623  
(ASSAM),  
PH :786623-9854135646.

**NORTH LAKHIMPUR**

61.\*\* GREEN LAND MARUTI WORKS (2974), NEAR  
GURUDWARA, NH 52, NORTH  
LAKHIMPUR-787 001, (ASSAM),  
PH :787031-9435085310.

**PATHSALA**

62.## USHA AUTOMOBILES (4240), N.H  
31,PATHSALA-781325, DISTRICT-BARPETA,  
ASSAM,  
PH :781325-9401310431.

**SILAPATHAR**

63.## BORLUIT MOTOR (5743), KHANAMUKH,  
P.O/P.S -SILAPATHAR, DIST-DHEMAJI,  
ASSAM  
PIN-787059,  
PH :787059-9954635182.

**SILCHAR**

64.\*\* CARDROME (1559), 2ND LINK ROAD  
JUNCTION, SONAI ROAD (M H C ROAD),  
SILCHAR-788 006, (ASSAM),  
PH :788006-9435071212.

**TEZPUR**

65.## POOJA MOTOR WORKS (4373), N.T. ROAD,  
MURATETLI, TEZPUR-784001, ASSAM,  
PH :784001-9954707812.

**TINSUKIA**

66.\* AUTO MAKERS (934), MAKUM ROAD,  
UDYOG NAGAR, TINSUKIA -786 146  
(ASSAM),  
PH :786146-9435035341.

**TITABAR**

67.## SHANKAR AUTO WORKS (5174), C/O:SHIV  
SHAKTI AUTO WORKS,BALAJI, MARKET  
TITABAR CHARIALI TITABAR, DISTRICT -  
JORHAT, ASSAM,  
PH :785630-9435772479/9435051539.

**UDALGURI**

68.## RENU MOTORS (4543), WARD NO. 2, U.T.  
ROAD, UDALGURI TOWN,  
UDALGURI-784509, ASSAM,  
PH :784509-9854348875.

**BIHAR**

**ARRAH**

69.## ANJALI ENTERPRISES (5533), ARRAH -  
PATNA MAIN BYPASS ROAD, NH-30,  
AHIRPURWA, OPPOSITE SURYA MANDIR,  
ARRAH, BIHAR -802232  
PH :802232-9304910843.

**AURANGABAD (BIHAR)**

70.## K R N AUTOMOBILE (2242), NEW G.T. ROAD,  
(NH-2), AURANGABAD-824 101, (BIHAR),  
PH :824101-9304930657.

**BEGUSARAI**

71.## K.B. MOTORS (4768), NH-31, SINGHAUL,  
POKHAR, BEGUSARAI-851134, BIHAR,  
PH  
:851134-7870041951/8271507870/9835214115.

72.\* NATIONAL AUTO WORKS (1536),  
INDUSTRIAL AREA, BARAUNI,  
BEGUSARAI-851 122,  
PH :851122-9973381733.

**BHAGALPUR**

73.\*\* RUPRA AUTOMOBILES (1577), EAST OF  
AIRPORT, BHAGALPUR-813 210, P.O.  
BAHADURPUR, (BIHAR),  
PH :813210-9334385521.

**BIHAR SHARIF**

74.## SARVADAY ENGG. & AUTO SER (1549),  
INDUSTRIAL ESTATE, RAMCHANDRAPUR,  
BIHARSHARIFF (NALANDA),  
PH :803101-9334672919.

**CHAPRA**

75.## PRASAD AUTOMOBILES (1974), BHAGWAN  
BAZAR, CHAPRA-841 301, (BIHAR),  
PH :841301-9431216362/8092627210.

**DARBHANGA**

76.\* SINGH MARUTI CARE (2277),  
RAJKUMARGANJ, P.O. LALBAGH,  
DARBHANGA-846 004, (BIHAR),  
PH :846004-9431293796.

**GAYA**

77.\* AUTO CARE (3027), DURGA BARI, HARIDAS  
CHATTERJEE LANE, NEAR SAINT PAUL  
SCHOOL, GAYA-823 001 (BIHAR),  
PH :823001-9102060955.

**HAJIPUR**

78.## ALFA AUTO (5454), PASWAN CHOWK,  
NH-13, HAJIPUR, DISTRICT - VAISHALI,  
BIHAR - 844101,  
PH :844101-9431327965/8092258357.

79.\*\* HI-TECH AUTOMOBILE (3123), GANDHI  
SETU PATH, N.H.-19, HAJIPUR, VAISHALI  
(BIHAR),  
PH :844101-9835044502.

**KAHALGAON**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs  
## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs  
# D-Category Mass : Free Service & Minor repairs

# Maruti Authorized Service Station (AS ON 30.05.2023 )

80.## MAHA GAURI ENTERPRISES (5822), NTPC ROAD,GANGANAGAR ,CHOWRATHIYASTHAN, KAHALGAON-813203, DISTRICT-BHAGALPUR, BIHAR, PH :813203-9431463558.

**MADHEPURA**

81.## KRISHNA AUTOMOBILES (2639), SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR), PH :852213-9430583338.

**MADHUBANI**

82.## VIDYAPATI AUTOMOBILE (4234), BHAUARA, GANGASAGAR, MADHUBANI, BIHAR - 847212, PH :847212-9471648158/9304399511.

**MUNGER**

83.## SUN BEAM ENGG WORKS (1533), 150 BETWAN BAZAR, NEAR KHANKAH, P.O.& DISTT. MUNGER, BIHAR - 811201, PH :811201-9931962944.

**MUZAFFARPUR**

84.\*\* DYNAMIC MARUTI SERVICE CENTRE (1163), HARI SHARAN MARG, AMGOLA, POST OFF RAMNA, MUZAFFARPUR-842 002, PH :842002-9431013057/9835003526/9386834595.

85.## PERFECT MOTORS (3465), NEAR CHANDNI CHAUK, JHITKAIYA, POST: MIT PS: BRAHAMPURA, MUZAFFARPUR-842 003 (BIHAR), PH :842003-9835007407.

**PATNA**

86.\*\* CAR SCANNER (1552), OPP. BATA, KANKAR BAGH COLONY, PATNA-800 020, PH :800020-9431016342.

87.\*\* GOOD WRENCH SERVICES (3364), NH 30, BETWEEN BHARAT PETROLEUM & HP PETROL PUMPS, , 1 KM WEST OF "0" MILE, ASHOCHAK, NANDLAL CHAPRA, PATNA - 800007, PH :800007-7277772777.

88.## MARUTI MAINTAINER (4842), PLOT NO 73, MAIN ROAD, KANKARBAGH, NEAR RAJENDRA NAGAR OVERBRIDGE, PATNA, BIHAR-800020, PH :800020-7903741541.

89.\* MOHINI AUTOMOBILES (1049), BEHIND RESERVE BANK OF INDIA, EXHIBITION ROAD, PATNA-800 001, PH :800001-9431094340/8987379073.

90.\*\* TIRUPATI AUTO (1956), ASHIANA MORE, BAILEY ROAD OPPOSITE UNION BANK, RAJABAZAR, PATNA-14, PH :800014-9835050292/8539077831.

**PURNEA**

91.## AUTO INDIA (3026), SRI DHAM MANDIR, PURNEA CITY, PURNEA 854302, PH :854301-9470204501.

**SASARAM**

92.## TRIPTY CAR SERVICE CENTRE (5535), NEAR RELIANCE PETROL PUMP, G.T. ROAD,NH-2,SASARAM-821115, DISTRICT-SASARAM, BIHAR, PH :821115-9934792421.

**SITAMARHI**

93.\* SITAMARHI AUTO CARE (6050), INDUSTRIAL AREA,RAJOPATTI, PO.SITAMARHI-843302, DISTRICT-SITAMARHI , BIHAR, PH :843302-9430012437.

**CHANDIGARH**

94.\*\* CAR CLINIC (179), PLOT NO-81, INDUSTRIAL AREA, PHASE-II, CHANDIGARH, PH :160002-9417216782.

95.## HI-TEK MOTORZ (4743), PLOT NO. 658, INDUSTRIAL AREA, PHASE-1, CHANDIGARH, PH :160002-9872567868.

96.## RATTAN MOTORS (1155), SECTOR 23-C, CHANDIGARH-160 023, , PH :160023-9814008335.

**CHHATTISGARH**

**AMBIKAPUR**

97.## MARUTI AUTO CARE (4839), KHARISA NAKA, AMBIKAPUR -497001, DISTRICT-SURGUJA, CHATTISGARH, PH :497001-9425256087.

**JAGDALPUR**

98.## VISHWAKARMA AUTOMOBILES (4467), RAJMAHAL PARISAR, BAHAMBERS OF COMMERCE ROAD, JAGDALPUR, CHHATTISGARH, PH :494001-9753300033.

**JAMNIPALI**

99.## AUTO CARE (3823), 203, J P COMPLEX SADA COLONY, JAMNIPALI-495 450, TEH. KATHGHORA DIST. KORBA (CHATTISGARH), PH :495450-7587399102.

**KORBA**

100.## AUTO SELF SERVICE (8940), RAILWAY STATION CANAL ROAD, NEAR SUNALIYA RAILWAY CROSSING , MURARKA GALI, KORBA, CHATTISGARH -495678, PH :495678-9229495000.

**MANENDRAGARH**

101.## SHARMA AUTO CENTRE (5354), MAIN ROAD - MANENDRAGARH, DISTRICT - KOREA , PIN - 497442, CHHATTISGARH, PH :497442-7771011802.

**RAIPUR**

102.## SHIVAM CAR SERVICES (4774), BILASPUR ROAD, KHAMTARAI, RAIPUR-492006, CHATTISGARH, PH :492006-9826192574.

**DELHI**

103.\* AAPKA KARKHANA (MOTORS) PVT. LTD. (869), 621 POSANGIPUR MAIN MARKET, A-3 BLOCK JANAKPURI, NEW DELHI-58, PH :110058-9811034869.

104.## ANAND MOTORS (4471), B-27, G.T. KARNAL ROAD, INDUSTRIAL AREA, NEW DELHI-110033, PH :110033-9582379699.

105.\*\* A-ONE AUTOMOBILES (3362), 487/35 NATIONAL MARKET, PEERAGARHI, DELHI-110 087, PH :110087-9810257472.

106.## ASHA AUTOMOBILES (850), A-2 CHOTTEY LAL PARK, NAJAFGARH ROAD, OPP.KIRTI NGR,P.O, NEW DELHI-15, PH :110015-9818467898.

107.## AUTO ENGRS.SERVICE STN. (8023), OPP.MODEL TOWN, DERAVAL NAGAR, DELHI-9, PH :110009-9811137929.

108.\* AUTO POINT SERVICE (1267), 70B RATTAN PARK, OPP. RAMESH NAGAR, NEW DELHI-110 015, PH :110015-9958062220.

109.## AUTOTECH ENGINEERS (4551), PLOT NO. 20-24, MATIYALA VILLAGE, SECTOR-3, NEAR DPS DWARKA, NEW DELHI-110075, PH :110075-9811608008.

110.## BASANT MOTORS (8003), 78 TOLSTOY LANE, BEHIND SCINDIA HOUSE, NEW DELHI-110 001, PH :110001-9811522266.

111.## BHAGIRATHI MOTORS (4737), PLOT NO. 153/543, POOTH KHURD, DELHI-110039, PH :110039-9810804556.

112.## BHASIN SERVICE STATION (830), DR.K.S.KRISHNAN ROAD, NEAR PUSA GATE, NEW DELHI-110 012., PH :110012-9971977992.

113.\*\* BRIGHT MOTORS (P) LTD. (885), C-263 PEERAGARHI, OUTER RING ROAD, DELHI - 110 087, PH :110087-9810203018.

114.\* DRIVE WELL SERVICE STN. (866), 1/486,G.C.S. COMPLEX,MAIN G.T. ROAD , DILSHAD GARDEN,NEW DELHI-110095 , DELHI , PH :110095-9811020603.

115.## ENGINEERS SERVICE STATION (834), SHRI AUROBINDO MARG, (SAFDARJANG AIRPORT), NEW DELHI-110 003, PH :110003-9654262692.

116.## EXCEL AUTOMOBILES (3342), PLOT NO. 78, BAGDOLA VILLAGE, SECTOR 8, DWARKA, NEW DELHI-110 077, PH :110077-7011765194.

117.\* EXCLUSIVE AUTOMOBILES PVT. LTD. (3546), 98 MANGOLPUR KALAN, SECTOR-2 NEAR JAIPUR GOLDEN HOSPITAL, ROHINI, DELHI-110 085, PH :110085-9910782127.

118.## GLOBE SERVICE STATION (3631), 18TH KM MATHURA ROAD, BADARPUR, NEW DELHI-110 044, PH :110044-9818630354.

119.## HUNDRED PERCENT FILLING & SERVICE STATION (4939), LSC, SECTOR-9, OPP. NHAI, DWARKA, NEW DELHI-110075, PH :110075-9910586999.

120.## IMAGE (2561), IOC PUMP, NEAR SAMACHAR APT. OPP. KIRTI APT., MAYUR VIHAR PHASE-I EXT., DELHI-110 091, PH :110091-9312082213.

121.\*\* R S AUTOMOBILES (273), 111/9 KISHANGARH, OPP. CNG PUMP NEAR SPYM INSTITUTE, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI – 110070, PH :110070-9540944009.

122.\*\* KUMAR AUTOMOBILES (855), B-281 OKHLA INDUSTRIAL AREA, PHASE-I, NEW DELHI-110 020, PH :110020-9810001625.

123.\*\* NAVEEN AUTOMOBILES (4934), 37, PATPARGANJ INDUSTRIAL AREA, NEW DELHI-110092, , PH :110092-9911278537.

124.## NORTHERN SERVICE STATION (337), SARAI BASTI, ROAD NO.40, OPP. SHASTRI NAGAR, DELHI-35, PH :110035-9213710643.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

125.\*\* P R G MOTORS (365),  
A-99,103CH.TEKCHAND MARKET, GANESH  
NAGAR - TILAK NAGAR, DELHI-110 018,  
DELHI,  
PH :110018-9711196811.  
126.### QUTAB SERVICE STATION (8078),  
MEHRAULI ROAD, NEW DELHI-110 017, ,  
PH :110017-9811021862.  
127.\*\* RAJINDRA SERVICES P.LTD. (826), B-55  
G.T.KARNAL ROAD, INDUSTRIAL AREA,  
DELHI-110 033.,  
PH :110033-9899580820.  
128.### ROHAN SERVICES (5444), PLOT  
NO:125.VILLAGE POCHANPUR, SECTOR - 23  
DWARKA, DISTRICT - DELHI (WEST), DELHI,  
PH :110075-9911180827.  
129.\* SATYA SERVICE STATION PVT. LTD. (3625),  
L-BLOCK HARI NAGAR, JAIL ROAD, NEW  
DELHI-64,  
PH :110064-9873461414.  
130.\*\* SEVEN HILLS AUTO.(P) LTD. (848), D-20/1  
OKHLA INDUSTRIAL AREA, PHASE II, NEW  
DELHI-110 020.,  
PH :110020-9811037954.  
131.\*\* SHALIMAR AUTOMOBILES PVT. LTD (871),  
C-91/9 WAZIRPUR INDUSTRIAL AREA,  
ASHOK VIHAR CROSSING, DELHI-110052,  
DELHI,  
PH :110052-9811171489.  
132.### SHIKHAR AUTOMOBILES (5546),  
A-2/1CHOTTEY LAL PARK,SHIVAJI MARG,  
OPP KIRTI NAGAR,METRO PILLAR  
NO.341,NEW DELHI-110015, DISTRICT -  
DELHI, DELHI,  
PH :110015-9810047047.  
133.### SINTEX SERVICE STATION (777),  
883,RITHALA INDUSTRIAL AREA., FIRNI  
NALA ROAD., DELHI - 85, DELHI,  
PH :110085-9868030802.  
134.### SRI BALAJI AUTOMOBILE (8038), KHASRA  
NO.33, 13/2-12 MAIN BAWANA ROAD,  
SAMEYPUR (NEAR DELHI COLLEGE OF  
ENGG.), DELHI,  
PH :110085-9811039601.  
135.### SRI SAI AUTO ENGINEERS (8074), 487/59  
PEERA GARHI, INDUSTRIAL AREA, DELHI,  
PH :110087-9650531612.  
136.### WIG AUTOMOBILES (8012), D-3 S.M.A  
CO-OP. INDL. ESTATE, (OPP. JAHANGIR  
PURI CHOWK), G.T. KARNAL ROAD,  
DELHI-110 033,  
PH :110033-9811297607.  
137.### YASHWANT PLACE SER.STN. (8022),  
AFRICA AVENUE, (OPP.CHANAKYA  
CINEMA), NEW DELHI-21,  
PH :110021-9868255788.

**GOA**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs  
## C-Category Mass : Free & paid Service & Minor repairs

**BICHOLIM**

138.### SHREE GURUKRUPA AUTOWORLD (1249),  
PLOT NO.76, , BICHOLIM, GOA-403 529,  
PH :403529-9422057272.

**CURCHOREM**

139.### VIPUL AUTOMOBILES (5376), PLOT  
NO.7.8.9 KAKODA INSUTRIAL ESTATE,  
KAKODA CURCHOREM, DISTRICT - SOUTH  
GOA, GOA,  
PH :403706-9422018746.

**KUNDAIM**

140.\* VIKAS ENGINEERING WORKS (4953),  
BHOMA, KUNDAIM, GOA-403107,  
PH :403107-9823780335.

**MAPUSA**

141.### SARDESAI AUTOMOBILES (2176), 194,  
GAUNSAWADA, , NEAR MILAGRES  
CHURCH, MAPUSA, GOA-403 507,  
PH :403507-9764448741.

**PONDA**

142.\* DHAVLIKAR AUTOMOBILES (2041), NO.5 TIP  
TOP MANSION IV, INDIRA NAGAR, DHAVALI,  
PONDA, GOA-403 401,  
PH :403401-9890669879.

**VERNA**

143.\* LUBRICARE SERVICES (261), 7-D  
GOULLOY, NH.17 NUVEM, SALTETE,  
GOA-403 601,  
PH :403601-9822124376.

**GUJARAT**

**AHMEDABAD**

144.\* AUTOWAY (125), MANGALYA COMPLEX,  
NEAR ANJALI CINEMA CROSS ROAD,  
BATTHA, AHMEDABAD,  
PH :380007-9825016888.

145.### DAHISON MOTORS (143), NEAR MANAV  
MANDIR, DRIVE IN ROAD, AHMEDABAD-380  
052,  
PH :380052-9898096242.

146.### MEGHDOOT MOTORS (3437), MASONIC  
LODGE COMPOUND, SHAHIBAUG ROAD,  
AHMEDABAD-4,  
PH :380004-9825972345.

147.\* POKAR AUTO REPAIRERS (2479), NEAR  
UNION CO. BANK, SAJPUR BOGHA,  
NARODA ROAD, AHMEDABAD-382 345,  
PH :382345-9428608515.

148.\* RAJAN MOTORS (2873), C/O M/S. SUPER  
SERVICE STATION, 79/80 JAGABHAI PARK,  
RAM BAUG MANINAGAR, AHMEDABAD-380  
008,  
PH :380008-9825972345.

149.\*\* SPEED AUTO CARE PVT. LTD (5524),  
NH-8,VIRAT NAGAR AHMEDABAD, DISTRICT  
- AHMEDABAD, GUJARAT,  
PH :380023-9979992779.

**AMRELI**

150.\* CAR CARE CENTRE (2734), PATEL GARAGE,  
CHAKRAGADH ROAD, AMRELI-365 601,  
(GUJARAT),  
PH :365601-9825422922.

151.\* KHODIAR MOTORS (3029), GAVADKA ROAD,  
AMRELI-365 601, (GUJARAT),  
PH :365601-9825672657.

**ANAND**

152.\* PATEL TRACTOR COMPANY (2221),  
(SERVICE DIVISION), BEHIND SUNIL  
CHAMBERS, STATION ROAD, ANAND-388  
001,  
PH :388001-9925534494.

153.### SHAKTI MOTORS (2226), OPP. J.K. PARK,  
NATIONAL HIGHWAY NO.8, P.O.  
VAGHASHI-388 320, TA: ANAND DISTT.  
KHEDA,  
PH :388320-9825792999.

**ANJAR**

154.### CAR AGE (5542), PLOT NO.11, MAHATMA  
NAGAR-1,ANJAR- , GADHPADAR  
ROAD,NR.MAHAKALESHWAR, MAHADEV  
MANDIR,ANJAR , GUJARAT,  
PH :370110-9427216886.

**BARDOLI**

155.\*\* POOJA MOTORS (361), NEAR GIDC, SURAT  
ROAD, BARDOLI-394 601, (GUJARAT),  
PH :394601-9825762621.

**BHARUCH**

156.\* NEW MARUTI MOTORS (5156), 9/16 AKASH  
GANGA B/H CNG PUMP, OLD NH -8,BHOLAV  
, DISTRICT - BHARUCH, GUJARAT,  
PH :392001-9898611424.

**BHAVNAGAR**

157.### VIKRAM MOTOR GARAGE (127),  
TAKHTESHWAR PLOT, NEAR CHANDRA  
BHUVAN, BHAVNAGAR - 364 002.,  
PH :364002-9427145452.

**BHUJ**

158.\* ASHA MOTORS (3629), LAL TEKRI,  
HOSPITAL ROAD, BHUJ-370 001, (GUJARAT),  
PH :370001-9727499383.

**BILIMORA**

159.### PATEL AUTOMOBILES (4030), DANDEKAR  
COMPOUND, GANDEVI ROAD, BILIMORA,  
PH :396321-9824123875.

**BORSAD**

\* B-Category Mass : Free & paid Service & Major repairs  
# D-Category Mass : Free Service & Minor repairs

160.### SUMAN MOTORS (3863), NEAR NISHRAYA  
CROSSING, BHARAN ROAD, BORSAD,  
DISTT. ANAND,  
PH :388540-9825021960.

**CHAND KHEDA**

161.\* BALVINDER AUTOMOBILES (2528), PLOT  
NO.202/2, NATIONAL HIGHWAY NO.8,  
CHAND KHEDA, DISTT. GANDHI NAGAR-382  
424 (GUJARAT),  
PH :382424-9924016000.

**CHIKHLI (GUJ.)**

162.### INAL MOTORS (3929), POST MAJIGAM,  
CHIKLI BILIMORA ROAD, DISTT NAVSARI,  
PH :396521-9099033773.

163.### SHREE AMBICA MOTORS (2663), KUNDI  
FATAK, NEAR ADARSH NURSERY, N.H.8,  
CHIKHLI DISTT. VALSAD (GUJARAT)-396 001,  
PH :396001-9825131520.

**DAHOD**

164.\* CAR SEVA (2438), SAINT STEPHEN SCHOOL  
ROAD, GODHRA ROAD., DAHOD.  
PIN-389151,  
PH :389151-9426469122.

**DAMAN**

165.### CAR ZONE (4358), SURVEY NO. 70/3,  
VARKUND, OPP VEERA DA DHABA, VAPI  
DAMAN ROAD, DAMAN-396210,  
PH :396210-9824184449.

166.### TOP GEAR (5469), DAMAN-KUNTA  
ROAD,KUNTA DAMAN-396210, DISTRICT -  
UNION TERRITORY - GUJARAT,  
PH :396210-9825631264.

**DEESA**

167.### VAKHARIA MOTORS (3970), G L PADIAR  
COMPLEX, PALANPUR PATHAN HIGHWAY,  
OPP. RAJMANDIR TALKIES, DEESA,  
PH :385535-9377728841.

**DHARI**

168.### GURUKRUPA MOTORS (5876), NR.  
NARMADESHWAR MAHADEV TEMPLE,  
DHARI,AMRELI ROAD,DHARI-365640,  
DISTRICT-AMRELI, GUJARAT,  
PH :365640-9825374658.

**DHORAJI**

169.### UNIVERSE AUTO (5837), SARDAR  
CHOWK,DHORAJI-360410, DISTRICT-  
RAJKOT, GUJARAT,  
PH :360410-9727714643.

**GANDHI NAGAR**

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

170.\* LABH MOTORS (4527), PLOT NO - B - 206+207 ., GIDC, SECTOR -25., GANDHINAGAR GUJARAT, PH :382024-9825020030.

171.\* RIDDHI MARUTI(A DIVISION OF SHREE ARBODA PVT. LTD (2151), E-19/10 G.I.D.C. SECTOR 26, NEAR K-7, GANDHINAGAR-382 044, PH :382044-9825041331.

172.## SHITAL MOTORS P.LTD. (134), 304 G.I.D.C., SECTOR-28, GANDHINAGAR - 382 028 (GUJARAT),, PH :382028-9924127065.

**HALOL**

173.## MAA MOTORS (4767), GODHRA ROAD, NEAR TELEPHONE EXCHANGE, HALOL, GUJARAT, PH :389350-9898610212.

**HIMMATNAGAR**

174.## MEHTA SERVICE STATION (135), NEAR SHANTI GARDEN, RESTAURANT, DIWALI BAUG MOTIPURA, N.H.B. HIMMATNAGAR GUJARAT-383 001, PH :383001-9426555664.

**IDAR**

175.## SUN MOTORS (5175), IDAR-HIMMATNAGAR HIGHWAY ROAD, AT KRUSHNAGAR.PO NETRAMLI., TA.IDER DISTRICT SABARKANTA, GUJARAT, PH :383430-9228286768.

**JAMKHAMBHALLIA**

176.## SHRI HARI OM MOTORS (4539), JADESWAR ROAD CHAR RASTA, OPP. KRISHNA WAY BRIDGE, JAM KHAMBHALLIA-361305, GUJARAT, PH :361305-9426955344.

**JAMNAGAR**

177.\* LANDMARK AUTOMOBILES (1973), PLOT NO-4/2, JAMNAGAR- KALVAD ROAD, MAHAPRABHUJI BETHAK ROAD, OPP SUBHASH BRIDGE, JAMNAGAR-361 006, (GUJARAT), PH :361006-7600000733.

**JETPUR**

178.## GIRIRAJ MOTORS (3971), JUNAGADH HIGHWAY, NEAR JALARAM TEMPLE, JETPUR, PH :360370-9727154392.

**JUNAGADH**

179.## MARUTI MOTORS (266), G.I.D.C. - I, RAJKOT HIGHWAY, DOLATPARA, JUNAGADH(GUJARAT), PH :362001-9099849888.

**KALOL**

180.## SUNRISE AUTO CENTRE (146), OPP. IFFCO, AHMEDABAD-MEHSANA ROAD, SAJJ KALOL, (NORTH GUJARAT)-382 721, PH :382721-9879542207.

**KAMREJ**

181.\* PATEL MOTOR GARAGE (2764), PLOT NO 1.2.3, NAVAGAM., NR. MANISHA HOTEL, OPP. DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ., DIST: SURAT-394185, PH :394185-9825127413.

**KAPADVANJ**

182.## DISHA MOTORS (5960), MAHAMADPURA,KAPADVANJ-NADIAD ROAD, KAPADVANJ-387620, DISTRICT-KHEDA, GUJARAT, PH :387620-9825641244.

**KESHOD**

183.## PRASAD MOTORS (3969), VERAVAL HIGHWAY, KESHOD. , PH :362220-9825024488.

**LIMDI**

184.## PARTH AUTOMOBILES (4171), OPP.SWAMINARAYAN TEMPLE, NH NO-8A, LIMBDI DIST, SURENDERNAGAR , PIN-363421, PH :363421-9426714510.

**LUNAWADA**

185.## N.J. MOTORS (4370), MODASSA ROAD, NR. SAIFEE HOSPITAL, LUNAWADA, DIST: PANCHMAHAL (GUJARAT), PH :389230-9924252700.

**MEHSANA**

186.\* SANSKAR MOTORS (5468), PALAVASANA -BECHARAJI ROAD, , NR.ONGC FIRE STATION ,MEHSANA-384002 , DISTRICT-MEHSANA, GUJARAT, PH :384002-9825106359.

187.\*\* SHUBH AUTO SERVICES (3367), NEAR AGRO PETROL PUMP, OLD RTO, RAMOSNA JAKAT NAKA, MEHSANA (GUJARAT), PH :384001-9825322460.

**MORBI**

188.## ARUN MOTORS (2071), SANALA BYE PASS, NEAR G.P. GINING MILLS, MORBI -363641, GUJARAT, PH :363641-9825222825.

**NADIAD**

189.## SHIVAM MOTORS (4430), OPP RASHAM RESTAURANT, DABHAM CROSSING, N.H 8, NADIAD, GUJARAT, PH :387320-9825021960.

**NAKHATRAMA**

190.## ASHA MOTORS (4340), NANA ANGLADESH, NAKHATRAMA HIGHWAY ROAD, NAKHATRAMA, KUTCH, PH :370615-9825225088.

**PETLAD**

191.## SIDDHI MOTORS (4166), OPP. GEB, NEAR RAILWAY CROSSING, NADIAD-KHAMBHAT HIGHWAY, PETLAD, ANAND, PIN-388450, PH :388450-7359465067.

**RAJKOT**

192.\*\* KHODIYAR MOTORS (356), DHEBAR ROAD (SOUTH), ATIKA INDUSTRIAL ESTATE, RAJKOT-360 001, PH :360001-9426202885.

193.\* UNIVERSE AUTO (5544), C/O DELHI GUJARAT TRANSPORT.NR. NAVAGAM, OCTROI POINT.AHMEDABAD HIGHWAY, RAJKOT-380002, DISTRICT - RAJKOT , GUJARAT, PH :380002-9879616643.

**RAJPIPLA**

194.## R. N. MOTORS (5255), 22-GIDC NEAR PETROL PUMP , RAJPIPLA, DISTRICT - NARMADA , GUJARAT, PH :393145-9925325300.

**SAVARKUNDLA**

195.## SHYAM MOTORS (8925), OPP. ESSAR PETROL PUMP, AMRELI ROAD,SAVARKUNDLA-364515, DISTRICT-AMRELI, GUJARAT, PH :364515-9427742134.

**SIDDHPUR**

196.## GOOD LUCK MOTORS (5341), 2.UMIYA COMPLEX .NEAR GURUKUL , HIGH SCHOOL SIDDHPUR , DISTRICT - PATAN, GUJARAT, PH :384151-9898428989.

**SIHOR**

197.## MOMAI MOTORS (6032), NR. RAJ MOMAI PETROLIUM , BHAVNAGAR-RAJKOT HIGHWAY.SIHOR-364240, DISTRICT-BHAVNAGAR, GUJARAT, PH :364240-9510201800.

**SURAT**

198.## EMPEROR CAR TECH (1748), F.PLOT NO.124 NEAR RELIANCE COMPLEX, BESIDE SHEETAL MARBLE, SURAT-DUMAS ROAD PILOD, SURAT-395 007, PH :395007-9825033396.

199.\* J.K.MOTORS (5158), LUHAR MOHALLA .POSTT PALGAM, DISTRICT - SURAT, SURAT -394510, GUJARAT, PH :394510-9909920902.

200.\* NILESH MOTORS (5347), AMBER SHOPPING CENTRE.OPP.SADHNA CHAMBERS, VARACHHA ROAD , DISTRICT - SURAT , GUJARAT, PH :395004-9377762660.

201.\*\* PATEL MOTORS (3060), 64 BAJRANG NAGAR, NEAR OCTROI CHECK POST, NANA VARCHA, SURAT-395 006, PH :395006-9909149498.

**SURENDERANAGAR**

202.## ADIT MOTORS (1247), 504/B PHASE-III, G.I.D.C. WADHWAN CITY, SURENDRANAGAR-363 035, PH :363035-9879114222.

**TALALA**

203.\* RUBY MOTORS (5942), TALALA ROAD , RAMRECHI(GIR), DIST - GIR, SOMNATH - 362150. , PH :362150-9824061044.

**UMBERGAON**

204.## KARAN AUTOMOBILES (2571), OPP. DAMRU WADI, UMBERGAON SANJAN ROAD, UMBERGAON DIST. VALSAD, GUJARAT-396 170, PH :396170-9824336583.

**UNJHA**

205.## AMBIKA MOTORS (3932), SADGURU COMPLEX, AHMEDABAD PALAM PUR HIGHWAY ROAD, UNJHA, MEHSANA-384170, PH :384170-9824517382.

**VADALI**

206.## VRAJ MOTORS (4560), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT), PH :383235-9427364109.

**VADGAM**

207.## CHAUDHARY & CHAUDHARY MOTORS (5651), OPP.RELIANCE PETROL PUMP, PALAMPUR ROAD - VADGAM, DISTRICT - BANASKANTHA, GUJARAT, PH :385410-9664590698.

**VADODARA**

208.\*\* CAR CARE (2229), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016, PH :390016-9825044610.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

## Maruti Authorized Service Station (AS ON 30.05.2023 )

209.*	CAR CLINIC (4640), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT), PH :390004-9925003558.	220.**	GURU NANAK MOTORS (2036), POLICE LINES CHOWK, AMBALA CITY, , PH :134003-8708357725.	232.**	PERFECT AUTOZONE (P). LTD. (5667), PLOT NO 9, ADJACENT TO UNION BANK OF INDIA, ANKHIR, OPP SEC 21-D, MAIN BADHKAL ROAD, DISTT FARIDABAD, HARYANA - 121001, PH :121001-9953417558/9871466789.	243.##	MANISH AUTOMOBILES (4777), GHATA ROAD, WAZIRABAD, NEAR SECTOR-56, GURGAON-122001, HARYANA, PH :122001-9873243858/9899561595/9899475288.
210.##	DREAM MACHINES (2933), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA-390 002, PH :390005-7575809940.	221.##	HIRA MOTORS (2740), 207 MILE STONE, VASANT VIHAR GT ROAD, N.H.-1, AMBALA CITY, PH :134002-9255285212.	233.##	SARASWATI AUTOMOBILES (4465), 44 B.P, NEELAM BATA ROAD, N.I.T, FARIDABAD, PH :121001-0129-4029665/0129-2429665/9811446 686.	244.**	QUTAB AUTOMOBILES (3668), KHEWATI/ KHATA NO 714/909, VILLAGE JHARSA, UNITECH CYBER PARK ROAD, SECTOR 39, GURGAON, HARYANA 122001, PH :122001-0124-2385333/0124-92267334//981168 7333.
211.*	GENERAL MOTOR REPAIRING WORKS (2529), NEAR LOK SATTA PRESS, NAGARWADA, VADODARA-390 001, PH :390001-9825026106.	222.**	RAVI MOTORS (1957), 125 STAFF ROAD, HOTEL SAVOY, AMBALA CANTT-126 102, PH :133001-9315110209.		<b>FARRUKHNAGAR</b>	245.##	RAJASTHAN AUTO WORKS (4760), LT. ATUL KARATIA MARG, NEAR PETROL PUMP, AKASHI FILLING STATION, AMAN PURA, SECTOR-5 ROAD, GURGAON-122001 (HARYANA), PH :122001-8368972946/9910070220.
212.**	HONEST AUTO STRUCTURE WORKS (279), 9, VINODBAUG BEHIND HOTEL SANMAN, JETPUR ROAD, VADODARA, PIN : 390005, PH :390002-9824014046.	223.*	S.S MOTORS (5735), NEAR REST HOUSE, BADHARA-123308, DISTRICT-BHIWANI, HARYANA, PH :127308-9255141288.	234.**	M R MOTORS (5946), GURGAON-JHAJJAR ROAD,OPP. ANAAZ MANDI, FARRUKHNAGAR-123508, DISTRICT-GURGAON, HARYANA, PH :122506-9810831200.	246.##	S G MOTORS (5756), PLOT NO.494, SECTOR 37., PACE CITY II,VUDYOG VIHAR VI - GURGAON, DISTRICT-GURGAON, HARYANA, PH :122001-9711770092.
213.##	MAYUR SERVICE STATION (2224), NEAR POLICE STATION, PRATAPNAGAR ROAD, BARODA-390 004, PH :390001-9879453031.	224.##	GL AUTOMOBILES (5263), MAIN ROHTAK ROAD, SANKHOL OPP CH. DEVI LAL PARK, DISTRICT - BAHADURGARH, HARYANA, PH :124507-9416303473.		<b>FATEHABAD (HARYANA)</b>	247.**	SEVEN HILLS AUTOMOBILES PVT LTD (6038), VIJAY VIHAR,MAIN SILOKHRA ROAD,SEC-30, GURGAON- 122002 , HARYANA, PH :122001-9810602354.
<b>VALIA</b>				235.##	DHINGRA AUTOMOBILES (1856), G.T. ROAD, FATEHABAD, (HARYANA), PH :125050-9896012906.		
214.##	HARI OM AUTO CARE (5750), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJRAT, PH :393135-9427336094.	<b>BARARA</b>		236.##	INDORA MARUTI SERVICE STATION (3064), OPPOSITE M M COLLEGE, SIRSA ROAD, FATEHABAD, 125050, PH :125050-9254080200.		
<b>VALSAD</b>		<b>BARWALA (HARYANA)</b>		<b>GANAUAR</b>			
215.*	HONEST AUTO GARAGE (2220), SUGHAR FALIA, BEHIND MOTA GHANCHIWAD, VALSAD-396 001 (GUJARAT), PH :396001-9426110767.	226.**	FAQIR CHAND QUALITY FUELS (5435), KILLA NO.20L.H.S. NH-65., CHANDIGARH ROAD - BARWALA, DISTRICT - HISAR, HARYANA, PH :125121-9215027000.	237.##	SITA AUTOMOBILES (4260), 347, WARD NO. 10, BST ROAD, GANAUAR, DISTT- SONEPAT, PH :131101-9992022047.	248.##	SOMESH AUTOMOBILES (455), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002, PH :122002-9717070830.
<b>VANTHLI</b>		<b>BHIWANI</b>		<b>GANGWA</b>		249.##	SRI PARKASH AUTOMOBILES (5862), BAJHERA ROAD,NEAR PARKASH PURI ASHRAM, NEW PALAM VIHAR,GURGAON-122001, DISTRICT-GURGAON, HARYANA, PH :122001-9899157729/9810070098.
216.*	INFINITY MOTORS (5963), RAVI RATAN' VADLA FATAK , OPP.HP PETROL PUMP ,POST VADLA,TAL VANTHLI-362205, DISTRICT-JUNAGADH, GUJARAT, PH :362001-9898990120.	227.##	VEER MOTOR WORKSHOP (1850), 24 NEW MOTOR MARKET, BHIWANI, (HARYANA),, PH :127021-9416057857.	238.**	PANCHMUKHI AUTOMOBILES (5968), HISSAR RAJGARH ROAD, GANGWA-125001, DISTRICT-HISSAR, HARYANA, PH :125001-9728100029.	250.##	TOP GEAR AUTOMOTIVE ENGINEERS (4464), MAIN JHARSA ROAD, GURGAON, (HARYANA), PH :122001-0124-4039011/9810304011/989143940 7.
<b>VIRAMGAM</b>		<b>BHUNA</b>		<b>GOHANA</b>		<b>HANSI</b>	
217.##	KRISHNA MOTOR GARAGE (4038), OUTSIDE BHARWADI GATE, NEAR BHARAT PETROL PUMP, VIRAMGAM, PH :382150-9426415274.	228.*	MITTAL AUTOMOBILES (5748), NEAR BUS STAND ,JAKHAL ROAD - BHUNA, PIN-125111, DISTRICT-FATEHABAD, HARYANA, PH :125111-9813207221.	239.##	KRISHNA MOTORS (4132), ROHTAK ROAD, GOHANA , PH :131301-9017062999.	251.**	VIKAS AUTOMOBILES (4744), SHANTI NIKETAN, OPP. JIND BYE PASS, G.T. ROAD, HANSI, DISTRICT-HISSAR (HARYANA), PH :125033-9466248037.
<b>VYARA</b>		<b>FARIDABAD</b>		<b>GURGAON</b>		<b>HISSAR</b>	
218.##	PARTH MOTORS (8928), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VYARA, DISTRICT-SURAT, GUJARAT, PH :394650-9898292020.	229.##	BALAJI SERVICE STATION (4956), SECTOR 23-24, MAIN ROAD, NEAR BALAJI DHARM KATA, FARIDABAD-121004, HARYANA, PH :121001-9818700422/0129-4100265.	240.##	A & A ENTERPRISES (4639), 396, PHASE-IV, UDYOG VIHAR, GURGAON (HARYANA), PH :122015-8851819511.		
	<b>HARYANA</b>	230.**	INSUH AUTO (377), 13/3 MAIN MATHURA ROAD, (ADJOINING FRICK INDIA), FARIDABAD-121 003, PH :121003-0129-2272587/0129-2272484/9810135 516.	241.##	GANGA MOTORS (363), SHIVPURI, GURGAON-122 001 , PH :122001-0124-2314940/0124-2322084/9810430 6028.		
<b>AMBALA</b>				242.*	KUMAR AUTOMOBILES (4848), BEHRAAMPUR ROAD , NEAR NH-8, GURGAON -122001 , HARYANA, PH :122002-9873431696/0124-2215696/987344880 4.		
219.##	BASSAN MOTORS (4964), 99 TH MALL, AMBALA CATT - 133001, HARYANA, PH :133001-9466000000.	231.##	KHURANA AUTOMOBILES (2863), 3C/60 B.P. (OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD, PH :121001-9891984841/9810474117.				

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs



**Maruti Authorized Service Station (AS ON 30.05.2023 )**

253.\* SAI AUTOMOBILES (5267), TOSHAM ROAD, NEAR AAKASH INSTITUTE, SECTOR-13, HISSAR, HARYANA, PH :125001-7988238034.

254.\*\* SALASAR AUTO (4735), OPP. VIDYUT NAGAR GATE NO. 2, DELHI ROAD, HISSAR-125001, HARYANA, PH :125001-9355486716.

**HODAL**

255.## VED MOTORS (2247), HIGHWAY ROAD, NEAR RAILWAY STATION CHOWK, HODAL-121 106, (FARIDABAD), PH :121106-7988978936.

**INDRI**

256.## ASHOKA MOTOR (6041), OPP. PARTAP FILLING STATION,LADWA ROAD., TEHSIL-INDRI,DISTRICT-KARNAL, HARYANA, PH :132041-8813000316.

**ISMAILABAD**

257.\* VINAYAK MOTORS (6052), OPP. MAHARAJA PALACE , AMBALA HISSAR ROAD , ISMAILABAD-136129 , HARYANA, PH :136129-9034820190.

**ISRANA**

258.## SHIV DARSHAN AUTOMOBILES (6051), ISRANA PANIPAT ROAD, NR. NC COLLEGE,ISRANA-132103, DISTRICT-PANIPAT , HARYANA, PH :132107-9911366230.

**JHAJJAR**

259.## VASUNDHRA MOTORS (1467), REWARI ROAD ,JHAJJAR-124 103, (HARYANA), PH :124103-9812012180.

**JIND**

260.## MOHIT MOTORS (1574), SAFIDON GATE, JIND-126 102, , PH :126102-9355129844.

**KAITHAL**

261.## HIND AUTOMOBILES (1858), AMBALA ROAD, KAITHAL, , PH :136027-7015806781.

**KANINA**

262.## SHREE KRISHNA MOTORS (5953), BHOOP SINGH MARKET,NEAR PETROL PUMP, MAHINDERGARH ROAD,KANINA-123027, DISTRICT-MAHINDERGARH, HARYANA, PH :123027-9467641678.

**KARNAL**

263.\*\* RUBY MOTORS (4734), 28/3 HSIDC, NEAR NAMASTEY CHOWK INDUSTRIAL AREA, KARNAL-132001, HARYANA, PH :132001-9896345633.

**KHARKHODA**

264.\* PRANAV MOTORS (5771), SAMPLA ROAD,KHARKAUDA-131402, DISTRICT-SONEPAT, HARYANA, PH :131402-9896145161.

**KUNDLI**

265.## SHIV SHAKTI AUTOMOBILES (4628), SECTOR 53, HSIIDC, JANTI ROAD, NEAR K.H.I COLD STORAGE, KUNDLI, SONEPAT, HARYANA - 131028, PH :131001-9811047480.

**KURUKSHETRA**

266.## KARTAR MOTORS (1645), RED ROAD, KURUKSHETRA-132 118, , PH :136118-9896245900.

267.\*\* KARTAR MOTORS (5349), PLOT O 65-66, SECTOR -2, HUDA INDUSTRIAL, AREA KURUKSHETRA, PH :136118-9896245900.

268.## SAINI MOTORS (2131), G.T. ROAD, UMRI CHOWK, KURUKSHETRA, (HARYANA), PH :136118-9896163931.

**LOHARU**

269.## BHAWNA MOTORS (6028), BHIWANI ROAD, LOHARU-127201, DISTRICT-BHIWANI , HARYANA, PH :127201-8901276555.

**MAHENDERGARH**

270.## SHREE SHYAM MOTORS (5843), NEAR I.O.C PETROL PUMP, MAHENDERGARH-123029, DISTRICT-MAHENDERGARH, (HARYANA), PH :123028-8199982018/9050994709.

**MANDI ADAMPUR**

271.## MITTAL AUTO AGENCIES (2966), 113-15 AUTO MARKET, MANDI ADAMPUR, (HARYANA), PH :125052-9729173300.

**MANESAR**

272.## MAITRI SERVICE STATION (2378), N.H.8, DELHI-JAIPUR ROAD, MANESAR (GURGAON), PH :122001-9818001128.

**NILOKHERI**

273.## SURENDERA MOTORS (5049), NEW NEHSIL ROAD,NILOKHERI, DISTRICT KARNAL , NILOKHERI-132117, HARYANA, PH :132117-9812510190.

**PALWAL**

274.\*\* D.K. & R.K. MOTORS (1159), NEAR BUS STAND , NH-2 PALWAL, PALWAL, PH :121102-9416066547/9050460231.

275.\* SHEELA MOTORS (5141), OPP MUNICIPAL COUNCIL OFFICE, OLD G T ROAD, DISTRICT - FARIDABAD, HARYANA, PH :121102-9416066251/01275-401501.

**PANCHKULA**

276.\*\* PANCHKULA AUTO SERVICES (1949), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA-134 109, (HARYANA), PH :134109-9316132257.

**PANIPAT**

277.\*\* PREM MOTORS (2266), PLOT NO.134, SECTOR 25 INDUSTRIAL AREA, PANIPAT, PH :132103-9896306380.

**PATAUDI**

278.\*\* SHUBHAM AUTOMOBILES (4641), REWARI ROAD, PATAUDI, DISTT. GURGAON, PH :122413-0124-2672942/9812665240.

**PEHOWA**

279.\* AMAR AUTOMOBILES (2270), OPP. DAV COLLEGE, AMBALA ROAD, PEHOWA DISTT. KURUKSHETRA, (HARYANA), PH :136128-98960002974.

**RADAUR**

280.## SHRI SHIVAM AUTOMOBILES (5852), S.K. ROAD,OPP. ESSAR PETROL PUMP, RADAUR-135133, DISTRICT-YAMUNANAGAR, HARYANA, PH :135133-9034384003.

**RANIA**

281.## SINGLA MOTORS (3779), NEAR BUS STAND, RANIA-125 076, DISTT. SIRSA (HARYANA), PH :125076-9416011238.

**REWARI**

282.## GAUTAM MOTORS (1837), NARNAUL ROAD, REWARI -123401 (HARYANA), , PH :123401-9416064894.

283.## PULYANI MOTORS (4663), BEHIND KAMLA PALACE, CIRCULAR ROAD, REWARI-123401, HARYANA, PH :123401-9416064738/01274-252238/01274-257 938/9955963168.

284.\* SHIVAM SERVICES (1466), OPP. CENTRAL SCHOOL, GARHI BOLNI ROAD, REWARI-123 401, PH :123401-01274-254825/9416288341.

**SADHAURA**

285.## SHREE GANESH MOTORS (5959), NEAR INDIAN OIL PETROL PUMP, KALA AMB ROAD,SADHAURA-133204, DISTRICT-YAMUNANAGAR, HARYANA, PH :133204-9813376260.

**SHAHABAD**

286.\*\* MAHALAXMI MOTORS (354), LADWA ROAD, SHAHABAD MARKANDA-136 135, (HARYANA), PH :136135-9812036433.

**SIWANI**

287.## GANESH AUTOMOBILES (5931), NEAR RELIANCE PETROL PUMP,HISAR ROAD,SIWANI, DISTRICT-BHIWANI, HARYANA - 127046, PH :127046-8607113000.

**SOHNA**

288.\*\* SHRI SHYAM MOTORS (8930), OPP.RAGHUNANDAN PETROL PUMP, NEAR GD GOENKA INTERNATIONAL SCHOOL, SOHNA-122103, HARYANA, PH :122103-9582350079.

**SONIPAT**

289.## NEW HIGHWAY MOTORS (8923), MAIN DELHI ROAD, SONEPAT, HARYANA, PH :131001-9416672009.

**TAURU**

290.## R M MOTORS (5842), WADE NO:4BEHIND WINE SHOP MAIN REWARI SOHNA ROAD, TAURU-122105, DISTRICT-MEWAT, HARYANA, PH :122105-9812378863.

**TOSHAM**

291.## MOHINI AUTOMOBILES (6026), OPP.NEW ANAJ MANDI , NEAR MINI BANK,TOSHAM-127040 , DISTRICT-BHIWANI, HARYANA, PH :127040-9215959995/9992251000.

**UKLANA**

292.\* SHREE GANESH MOTORS (5747), PLOT NO#29,UKLANA MANDI, DISTRICT-HISSAR, PIN-125113, HARYANA, PH :125713-98123091531.

**HIMACHAL PRADESH**

**ALAMPUR**

293.## SUBH AUTOMOBILES (5964), SH-39,ALAMPUR-176110, DISTRICT-KANGRA, HIMACHAL PRADESH, PH :176082-9816675551.

**AMB**

294.## SHUBHAM MOTORS (5933), NEAR PINDI ASHRAM,HAMIRPUR ROAD, AMB-177203, DISTRICT-UNA, HIMACHAL PRADESH, PH :177203-9418114176.

**ANNI**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

295.## SARAJ AUTO WORLD (6044), VERMA BUILDING NR. NAGAN HARIPUR , TEHSIL ANNI-172026 , DISTRICT-KULLU , HIMACHAL PRADESH, PH :172026-9129065065/9817120002.

**BADDI**

296.\*\* LAJ MOTORS (5541), 436.MAUJA SURAJ.MAJRA LABANA, BADDI, DISTRICT - SOLAN, HIMACHAL PRADESH, PH :173205-9816039189.

**BANGANA**

297.## TRISHLA AUTOMOBILES (5869), VILLAGE BPO & TEHSIL BANGANA, BANGANA-174307, DISTRICT-UNA, HIMACHAL PRADESH, PH :174307-9817645350.

**BANOI**

298.## BABA SERVICE STATION (4634), VILL BANOI, TEH SHAHPUR P.O., BANOI, DIST KANGRA (HIMACHAL PRADESH), PH :176209-9418051290.

**BARMANA**

299.## AVER AUTO (5955), VILLAGE LAGAT,TEHSIL SADAR, PO BARMANA-174013, HIMACHAL PRADESH, PH :174013-9418064130.

**BHAMBLA**

300.\* DHIMAN MOTORS (3837), PLOT NO. 42., INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT MANDI, PH :175004-9816227437.

**BHUNTAR**

301.## HANDA MOTORS (4262), HANDA COMPLEX, NEAR AIRPORT, BHUNTAR, KULLU (H.P.), PH :175125-9816007003.

**BILASPUR (H.P)**

302.## BHASKAR AUTO SPARE & SERVICE (1730), 8-B ROURA SECTOR II, (NEAR DURGA MANDIR), BILASPUR-174 001 (H.P.), PH :174001-9816436001.

**CHAMBA**

303.\* AUTOZONE (5247), PATHANKOT RAOD .PAREL , SULTANPUR - CHAMBA , DISTRICT - CHAMBA , HIMACHAL PRADESH, PH :176310-9418214848.

304.## KAILASH SERVICE STATION (3527), AMRIT NIWAS MOHALLA, BONGUTA, CHAMBA TOWN, DISTT.CHAMBA, PH :176310-9896679445.

**DARLAGHAT**

305.## CHANDEL SERVICE STATION (5233), DARLAGHAT , DISTRICT-SOLAN, HIMACHAL PRADESH, PH :171102-9816039865.

**DHARAMSHALA**

306.## EAGLE MOTOR SERVICE STN. (6426), SHAM NAGAR, DHARAMSALA-176215 (HIMACHAL PRD.), , PH :176215-8219915841.

307.## HIM AUTO STATION (8932), VPO DARI, DHARAMSHALA, (H.P.), PH :176057-9418029655.

308.## SHIV SHAKTI CAR CARE (1277), NEAR RAINBOW SCHOOL, DARI ROAD, DHARAMSHALA-176 057, PH :176057-9318752074.

**GHUMARWIN**

309.## BHASKAR AUTO SPARES & SERVICES (5147), VILLAGE KULARU, GHUMARWIN, DISTRICT - BILASPUR, HIMACHAL PRADESH, PH :174021-9816090504.

**GUMMA**

310.## CHAUHAN ENTERPRISES (5660), VILLAGE GUMMA,TEHSIL KOTKHAI, GUMMA, DISTRICT - SHIMLA, HIMACHAL PRADESH, PH :171202-9218690917.

**JAWALA JI**

311.## SRI PARBHAT MOTORS (5036), VPO & TEHSIL, JAWALI-(BHANEI), DISTRICT - KANGRA, (HIMACHAL PRADESH), PH :176023-9805511205.

**JAWALAMUKHI**

312.## LAKSHMI AUTO SPARES & SERVICE CENTRE (4630), NEAR GANJU BAGH, DEHRA ROAD, JWALAMUKHI, TEH. DEHRA, DIST. KANGRA (HIMACHAL PRADESH), PH :176031-9418091048.

**KARSOG**

313.## DEEPAK AUTOMOBILES (4057), MR. DEEPAK SHARMA, C/O SHARMA GENERAL STORE, KARSOG, MAIN BAZAR, DIST MANDI, HIMACHAL PRADESH, PH :175011-9817063007/9816260061.

**KAZA**

314.## SPITI MOTORS (6033), VILL. & PO,KAZA-172114, DISTRICT-LAHAUL & SPITI, HIMACHAL PRADESH, PH :172114-9418758974.

**KEYLONG**

315.## YOLAX MOTORS (3830), KEYLONG, DISTT. LAHAUL & SPITI, , PH :175133-7651031580.

**KULLU**

316.## PURI BROTHER'S (4242), I.O.C DEALER, DHALPUR, KULU, H.P, PH :175101-9418395358.

**KUMARHATTI**

317.\* SOLAN AUTOMOBILES PVT. LTD. (6420), DAGHOTA(SOLAN), P.O.KUMAR HATTI-173 229 (H.P.), , PH :173229-9816030330.

**KUMARSAIN**

318.## RED LINE (5965), VILL. KEPU,PO KIRTI SAINZ, TEHSIL,KUMARSAIN-172030, DISTRICT-SHIMLA, HIMACHAL PRADESH, PH :172030-9816027007.

**MANDI**

319.\*\* BHAGWATI AUTOMOBILES (269), PLOT NO. 13 INDUSTRIAL AREA PHASE 3 SAULI KHAD MANDI (H.P.), PH :175001-9418461897.

**MARANDA**

320.## MODERN SERVICE CENTRE (1175), PUSHP COMPLEX, MARANDA-176 102, (H.P.), PH :176102-7018243011.

**MEHATPUR**

321.## BUDHA AUTO HOUSE (6422), MAIN BAZAR, UNA, MEHATPUR-174315 (H.P), PH :174315-9815971708.

**MUBARAKPUR**

322.## SHIV SHAKTI AUTOMOBILES (1732), HOSHARPUR ROAD, MUBARKPUR, DISTT. UNA, (H.P.), PH :177202-9418328361.

**NADAUN**

323.\*\* CAR CARE ENGINEERS (4423), HOSHARPUR ROAD, MANPUL, NADAUN DISTT. HAMIRPUR, HP, PH :177033-9857799080.

**NAHAN**

324.## AGGARWAL MOTORS (3334), GUNNU GHAT, NEAR TELECOM COLONY, NAHAN-173 001, PH :173001-9418023558.

**NALAGARH**

325.## KRISHNA MOTOR (5275), PEERTHAN,PO NALAGARH, DISTRICT - SOLAN, HIMACHAL PRADESH, PH :174101-9418094064.

**PALAMPUR**

326.\*\* SANGRAI AUTO SERVICE (6430), OPP. SITLA MATA MANDIR, PALAMPUR-176 061, DISTT. KANGRA (H.P.), PH :176061-9418085915.

327.## SANTOSHI AUTOMOBILES (4776), VILLAGE & P.O, BHAWARNA, TEHSIL, PALAMPUR, DISTRICT- KANGRA (HIMACHAL PRADESH), PH :176083-9418184367.

**PAONTA SAHIB**

328.## SUMEET MOTORS (1441), SHAMSHERPUR, PAONTA SAHIB-173 025, (H.P.), PH :173025-9418018329.

**PAPROLA**

329.## ABROL AUTOMOBILES (3470), VPO PAPROLA, TEHSIL BALUNATH, DISTT KANGRA, HIMACHAL PRADESH -176115, PH :176115-9418066917.

**PARWANOO**

330.## DIVYA SALES (6428), DIVYA BHAWAN VILL. KAMLI, SECTOR-1, PARWANOO, PH :173220-9816032002.

**PATLI KUHAL**

331.\* JAMDAGNI MOTORS (760), VILLAGE PATLI KAUHAL, P.O.KATRIN, DISTT.KULLU (H.P.), PH :175129-9816040247.

**RAJGARH (H.P)**

332.## RAJGARD AUTOMOBILES (5458), PO RAJGARH.TEH RAJGARH, DISTRICT - SIRMOUR, HIMACHAL PRADESH, PH :173101-9418021344.

**RAMPUR BUSHAHR**

333.\*\* HIGHWAY SERVICE STATION (2649), CHUHA BAG, RAMPUR BUSHAHR, (H.P.) - 172001, PH :172001-9805831627.

334.## KRISHNA AUTOMOBILE (4438), VILL CHUHA BAG, RAMPUR BUSHAHR-172001 , , PH :172001-9418036091.

**RECONG PEO**

335.## KRISH AUTO (4134), RECONG PEO, TEHSIL KALPA, DISTT KINNAUR, HIMACHAL PRADESH - 172707, PH :172707-9816579999.

**ROHRU**

336.## KAMTA SERVICE STATION (2338), ROHRU, DISTT. SHIMLA, (H.P.), PH :171207-9418040106.

**SALASHI**

337.## THAKUR AUTOMOBILES (3838), JALANDHAR MANALI NATIONAL HIGHWAY (NH70), NEAR DAV SCHOOL, VILLAGE SALASHI, DISTT HAMIRPUR, PH :177001-9418490904.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs  
## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs  
# D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023 )

SARKAGHAT

338.## SHAKUNTALA MOTORS (5755), MANDI ROAD-SARKAGHAT, DISTRICT-MANDI, PIN-175024, HIMACHAL PRADESH, PH :175024-9817818822.

SHIMLA

339.\*\* GURRAJ AUTO SERVICE (757), NEAR CPRI ROAD, BEMLOI, SHIMLA-171 001, PH :171001-9816233030.  
340.\*\* MOTO WORLD (8433), NAVBAHAR, SHIMLA-171 002, , PH :171002-9459050769.

SOLAN

341.## SOLAN SERVICE CENTRE (764), BYE PASS, NEAR PWD OFFICE, SOLAN-173 212, PH :173212-9816222640.

SUBATHU

342.## SHYAM AUTOMOBILES (4558), NEAR SHANTI FILLING STATION, V.P.O RADYANA, SUBATHU, DIST SOLAN (HIMACHAL PRADESH), PH :173206-9418061757.

SUNDERNAGAR

343.\*\* V.M. SERVICE STATION (3777), CHAMUKHA, P O HARABAGH, NH-21, SUNDER NAGAR-174 402 (H.P.), PH :175019-9418064130.

THEOG

344.## JOSHI MOTORS (2778), SHALLI BAZAR, THEOG, DIST. SHIMLA, (H.P.), PH :171201-9459100051.

UNA (H.P)

345.## RUDRA MOTORS (3925), NEAR OLD HOSPITAL CHOWK, NH-22, UNA - 174303 (H.P.), PH :174303-9816590199.

346.## TRINITY AUTO FAST ENGINEERS (1755), JALGRAN TABBA, NANGAL ROAD, UNA, HIMACHAL PRADESH - 174303, PH :174303-9816628020.

JAMMU AND KASHMIR

AWANTIPORA

347.## KESAR AUTOMOBILES (5938), KHAR ,MORH,NATIONAL HIGHWAY 1A, AWANTIPORA-192122, DISTRICT-PULWAMA, JAMMU & KASHMIR, PH :192122-7780873161.

BARAMULA

348.\* MARUTI MASTERS (4369), KANISPORA, BARAMULA, KASHMIR, PH :193101-9906864748.

CHADOORA

349.\* VEHICLE MASTERS (4661), MAIN ROAD, CHADOORA-190001, DIST. BUDGAM, JAMMU & KASHMIR, PH :190001-9419441217.

JAMMU

350.\* CARE POINT AUTOMOBILES (4652), OPP. BSF CAMPUS ROAD, AKHNOOR ROAD, JAMMU-180002, PH :180002-9419283151.  
351.\*\* CHECK N CARE AUTOMOBILE CENTRE (1773), OPP. GURUDWARA SRI SINGH SABHA, NARWAL BYE PASS ROAD, JAMMU, PH :180001-9419190796.  
352.\*\* KWIK FIT (2343), AMBPBALLA, B.C. ROAD, JAMMU-180 001, PH :180001-9419104400.  
353.\*\* MOBEL GARAGES (441), NARWAL CHOWK, TRANSPORT NAGAR, JAMMU-180 006, PH :180006-9796800000.  
354.## NATIONAL MOTORS (5074), OPP APNA VIHAR.B.P. PETROL PUMP , NH-1A KUNJWANI JAMMU, DISTRICT - JAMMU, JAMMU & KASHMIR, PH :180010-9419322222.

KARGIL

355.\* ZOZILA ENGG. WORKS (374), KARGIL, LADAKH-194 105, PH :194015-9419176212.

KATHUA

356.\* KATHUA MOTORS (3323), HATLI MORE, KATHUA-184 102. (J&K), PH :184102-9419150694.

KATRA

357.## VIDYA AUTOMOBILES (1165), JAMMUR ROAD, KATRA JAMMU ROAD, KATRA, (J&K), PH :182320-9596676576.

KISHTWAR

358.## MINTOO MOTORS (4133), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K), PH :182204-9622055250.

MATTAN

359.## DANISH AUTOMOBILES (5478), PAHAL GAM ROAD, STATE HIGHWAY - MATTAN, DISTRICT - ANANTNAG, JAMMU & KASHMIR, PH :192125-9419041724.

PHINTER

360.## BADYAL AUTOMOBILES (4149), C/O BADYAL AUTOMOBILE, PHINTER, TEH BILLAWAR, DISTT KATHUA, PHINTER (J & K), PH :184203-9419691916.

PULWAMA

361.\*\* KASHMIR AUTOMOBILES (5352), NEAR FRUIT MANDI, PRICHOO PULWAMA, KASHMIR, PH :192301-9622742291.

RAJOURI

362.## MILLENNIUM MOTORADES (2937), ALPHA GATE, T.C.P., RAJOURI-185 132, (J&K), PH :185132-7006122022.

REASI

363.## U LIKE CAR CLINIC (4771), GITA NAGAR, REASI JYOTIPURAM ROAD, REASI, DISTRICT-UDHAMPUR (JAMMU & KASHMIR), PH :182311-7006083550.

SAMBHA

364.## DHANSAR CAR CLINIC (5146), NATIONAL HIGHWAY , SUPWAL SAMBHA , DISTRICT - JAMMU, J&K, PH :184120-9419393949.

SOPORE

365.## HASSAN MOTORS (2434), BPC DEALER, SOPORE, KASHMIR, PH :193201-9906506786.

SRINAGAR

366.\* A.B. MOTORS (5072), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH :190009-9419007966.

367.\*\* ADAM'S AUTOAIDES (5766), SIDCO INDUSTRIAL EXTATE,SHALTENG, SRINAGAR-, DISTRICT-SRINAGAR, JAMMU & KASHMIR, PH :191202-9906580089.

368.\* HASEEN MOTORS (5249), BY-PASS BRIDGE BAGH MEHTAB, SRINAGAR , JAMMU & KASHMIR ,

PH :190019-9419006847.  
369.## NEW NATIONAL AUTOMOBILES (5073), RAM BAGH,AIRPORT ROAD.SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH :190009-9419013778.

370.\* SRINAGAR AUTOMOBILES (4925), M.A. LINK ROAD, NEAR TRANSPORT YARD BRIDGE, CHINARBAGH, SRINAGAR-190001 (JAMMU & KASHMIR), PH :190001-9419001793.

SURNKOTE

371.## A.S. AUTOMOBILES (5976), IQBAL NAGAR,SURANKOTE, DISTRICT-POONCH, JAMMU & KASHMIR , PH :185121-9469014765.

VIJAYPUR

372.## BANSI LAL MARUTI SERVICE STATION (4748), SWANKHA,MORH, NATIONAL HIGHWAY, VIJAYPUR-180001, DISTRICT-SAMBA (JAMMU & KASHMIR), PH :180001-9419106798.

JHARKHAND

BOKARO

373.## UJEEA AUTOMOBILES (4845), S-21 CITY CENTRE, BOKARO STEEL CITY, BOKARO-827004, JHARKHAND, PH :827004-9431127441.

DEOGHAR

374.\* GARGEER AUTOMOBILE (2276), OPP. D.C. RESIDENCE, CIRCULAR ROAD, BARMASIA, DEOGHAR-814 112 (BIHAR), PH :814112-9940580983.

DHANBAD

375.## MAZUMDAR CAR SCAN (5135), BHUFORCE K G ASHRAM ROAD , SARAIDELA - 828301, DISTRICT - DHANBAD, JHARKHAND, PH :828301-9835361472.

376.## PRIYA AUTO (4868), OPPOSITE MINNING SCHOOL, SINDRI ROAD, BHAGA, DHANBAD-828301, JHARKHAND, PH :828301-9431124817.

HAZARIBAGH

377.## ALOK MOTORS (379), NEAR INDRAPURI CHAWK, HAZARIBAG-825 301, (BIHAR), PH :825301-9431140740.

378.## SRI RAM MARUTI SERVICE STATION (3663), DEVI DAYAL LANE, HAZARIBAG-825 301, (JHARKHAND), PH :825301-9431384877.

JAMSHEDPUR

379.\*\* CAR CURE (1261), C/O MODERN AUTO STORES, KALIMATI ROAD, SAKCHI, JAMSHEDPUR-1, PH :831001-9234608016.

380.## MAHESHWARI BROS. (5124), NATIONAL HIGHWAY 33, BALIGUMA MANGO, P.O. -M.G.M. MEDICAL COLLEGE, JAMSHEDPUR-831 018, PH :831018-9031144444.

KHUNTI

381.## MOD MOBILES (5579), MAIN ROAD,RANCHI ROAD - KHUNTI, DISTRICT - KHUNTI, PIN - 835210, JHARKHAND, PH :835210-9304468855.

MAITHON

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

## Maruti Authorized Service Station (AS ON 30.05.2023 )

382.##	MAITHON SERVICING CENTRE (5838), MAITHON ROAD,NEAR VMC COLONY, SANJAY CHOWK ,PO CHIRKUNDA-MAITHON, DISTRICT-DHANBAD, (JHARKHAND), PH :828203-7209423707.	393.##	MAHANTH MOTORS (5763), RTO ROAD BAILHONGAL ,TALUK-591102, DISTRICT-BELGAUM, KARNATAKA, PH :591102-9535653166.	405.*	NEXUS (1153), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE-560 064, PH :560 064-9844013436.	417.**	U.M. CARS PVT. LTD. (2847), KARNATAKA GOLF ASSOCIATION ROAD, KODIHALLI, OFF. AIR PORT ROAD, BANGALORE-560 008, PH :560 008-9845165365.
<b>PAKUR</b>		<b>BALEHONNUR</b>		406.**	NEXUS (2768) ,#275/301, 80 FEET ROAD, OPP. M.S. RAMAIAH HOSPITAL (BEL ROAD), RMV 2ND STAGE, BANGALORE-560 094, PH :560 094-9844013436.	418.*	VISWAS CAR SERVICES PVT. LTD. (3238), NO 2 , (OUT NO OF SY.NO 100/2) OFF SERVICE ROAD , KALYAN NAGAR ROAD, CHELEKERE , BANASWADI POST BANGALORE -560043, PH :560043-9591313379.
383.##	SPEED WHEEL SERVICE CENTRE (4976), MAIN ROAD, PAKUR - 816107, , PH :816107-9434101917.	394.##	SRI ANNAPOORNA MOTORS (5253), MALLE GOWDA COMPLEX,JAYAPURA, ROAD BALEHONNUR ROAD, DISTRICT - CHIKAMAGALUR, KARNATAKA, PH :577204-9448000131.	407.**	PACE AUTOMOBILES (1057), 6TH MAIN HMT LAYOUT, R.T. NAGAR, BANGALORE-560 032, PH :560 032-9845004710.		
<b>RAMGARH</b>		<b>BANGALORE</b>		408.##	PUSHPAK MOTORS (4642), 105/1 2ND MAIN NANJAPPA LAYOUT, VIDYARANYAPURA MAIN ROAD, (OPP KRUTHIKA HOSPITAL), BANGLAORE-560097, PH :560097-9845087842.	<b>BELGAUM</b>	
384.##	RAHIL MOTORS (5054), C/O NIYAMAT MISTRI, DUSHAD MOHLA, DISTRICT RAMGARH CANTT., PH :829122-9771577422.	395.##	ADARSHA AUTOMOBILES (4553), # 974 VARATHUR MAIN ROAD, NEAR PURVANKARA APARTMENTS, AFTER MARATHAHALLI, RAILWAY BRIDGE, BANGALORE-560037, PH :560037-9880195465.	409.##	RAJ (2829), NO.10 MAGADI MAIN ROAD, OPP. UNANI MEDICINE INSTITUTE, KOTIGEPALEYA, BANGALORE-560 091, PH :560 091-9663555677.	419.*	BHARAT AUTO SCAN (350), 892/1 PB ROAD, BELGAUM-590 016, , PH :590 016-9448120495.
385.##	SAINI MOTORS (5126), NEAR VISWAKARMA MANDIR, MAIN ROAD, RAMGARH CANTT 829 122, DISTT. HAZARIBAG, PH :829122-9835141302.	396.**	ANEKAR MOTORS (227), 230 MAGADI ROAD, BANGALORE-560 023, (KARNATAKA), PH :560 023-9845889911.	410.**	SMART CARS (3571), 3RD CROSS NEAR J.B. TILES, KAGGADASA PURA MAIN ROAD, C.V. RAMAN NAGAR, BANGALORE-560 093, PH :560 093-9663324361.	<b>BIJAPUR</b>	
<b>RANCHI</b>		397.*	ASHWA CARS (2827), #14, 1ST MAIN, 6TH CROSS, SANJEEVNI NAGAR, MOODAPALYA, BANGALORE 560072, PH :560072-9341228231.	411.##	SOLOTECH MOTORS (2760), SURVEY NO.82/2,D'SOUZA NAGAR, HOSAKEREHALLI-BANGALURU, DISTRICT-BANGALURU 560085, KARNATAKA, PH :560085-9845072603/7259589375.	420.##	BAGALI MOTORS (5159), SHIKARKHANA ROAD, BIJAPUR - 586104, DISTRICT - BIJAPUR, KARNATAKA, PH :586104-9448100444.
386.##	BHARAT MOTORS (5970), SHIV JEE CHOWK,HARMU ROAD,RANCHI-834001, DISTRICT-RANCHI, JHARKHAND - 834001, PH :834001-9608502258.	398.##	BENAKA MOTORS (3237), NO.158/2 VIBHUTIPURA, VIGNAN NAGAR BEHIND B.E.M.L., NEAR RENUKA SWIMMING POOL, BANGALORE-560 017, PH :560 017-9845212416.	412.##	SOLOTECH SERVICE CENTRE (5245), 50 FEET MAIN ROAD ,AVALAHALLI, MUNESHWARA BLOCK , DISTRICT - BANGALORE, KARNATAKA, PH :560010-9845772634.	<b>CHIKBALLAPUR</b>	
387.**	MARUTI AUTOMOBILES (5127), HOTEL AKASHWANI MANSION, RATU ROAD, RANCHI-834 001, PH :834001-9835156186.	399.##	CHANDANA MOTORS (4872), NO. 9 UNIVERSITY ROAD, GNANABHARTHI (POST), MARIYAAPPANA PALYA, BANGALORE-560056 (KARNATAKA), PH :560056-9880659864.	413.*	SPEED MOTORS (1750), 17/1 SUBRAMANYAPURA MAIN ROAD, KADIRENAHALLI, PADMANABHA NAGAR, BANGALORE-560 070, PH :560 070-9845153102.	421.##	SUKOVE ENTERPRISES (3426), B.B. ROAD N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA), PH :562 101-9880607034.
388.##	MARUTI CLINIC (2548), LAL KOTHI, OLD HAZARIBAGH ROAD, KANTA TOLI, RANCHI-1 (BIHAR), PH :834009-9431109214.	400.*	GIRIMAJI ENTERPRISES (258), NO.2 27TH CROSS, K R ROAD, B S K II STAGE, BANGALORE-560 070, PH :560 070-9844004403.	414.##	TEAM TECH AUTOMOBILES (5662), 78/1,SULEKUNDE, NEAR MUTHANALLUR CROSS,, SARJAPURA MAIN ROAD, BANGALORE -562125, PH :562125-9538516111.	<b>CHIKMAGALUR</b>	
389.##	MOTOR KRAFT (4769), H.B. ROAD, DIPA TOLI, RANCHI-834009, JHARKHAND, PH :834009-9431152162.	401.**	GREEN CARS PVT. LTD. (2154), NO.12/6 80 FEET ROAD, 6TH BLOCK KORAMANGALA, BANGALORE-560 095, PH :560 095-9845020796.	415.**	TRINITY CAR CARE PVT. LTD (5851), SURVEY NO 52/1,SRI GANDHADAKAVAL VILLAGE, NAGARBHAVI,BANGALORE-560091, DISTRICT-BANGALORE , KARNATAKA, PH :560091-9880793980.	422.##	AAMANTHRANA MOTORS (4346), K.M. ROAD, CHIKMAGALUR, , PH :577101-9945462658.
<b>SIDRAUL</b>		402.*	KESHKAMAL MOTORS (2075), NO.943 21ST MAIN, BANASHANKARI 2ND STAGE, (NEAR KIMS MEDICAL COLLEGE), BANGALORE-560 070, PH :560 070-9448071067.	416.**	TRINITY MOTORS (4638), NO. 36, 4TH STAGE, W.C. ROAD, BASAVESHWARANAGAR, BANGALORE-560079, PH :560079-9845539474.	423.##	FORMULA MOTORS (338), K.M. ROAD, CHIKMAGALUR-577 101, , PH :577 101-9448743284.
390.##	KRITIVASA AUTOMOBILES (4424), RANCHI TATA HIGHWAY, SIDRAUL, P.S NAMKOM, PH :834010-9661144866.	403.**	LE MANS MOTORS (3460), NEAR AYYAPPA TEMPLE, S.M. ROAD, T. DASARAHALLY, BANGALORE-560 057, PH :560 057-9845145001.			<b>CHIKODI</b>	
<b>KARNATAKA</b>		404.*	MAYUR ENTERPRISES (249), NEXT TO PIA BHAVAN KIADB MAIN ROAD, PEENYA 1ST STAGE, BANGALORE-58, PH :560058-9845122156.			424.##	OM MOTORS (4445), 1751, ANKALI ROAD, NEAR B K COLLEGE, CHIKODI-591201, KARNATAKA, PH :591201-8861555999.
<b>ATHANI</b>						<b>CHINTAMANI</b>	
391.##	CHOUGULE MOTORS (3874), MIRAJ ROAD, ATHANI, , , PH :587314-9448436776.					425.##	TIPPU AUTO GARAGE (5770), MG ROAD,NEAR BAGEPALLI CROSS, CHINTAMANI-563125, DISTRICT-KALOR, KARNATAKA, PH :563125-9036698340.
<b>BAGALKOT</b>						<b>CHITRADURGA</b>	
392.##	NARA AUTOMOBILES (4357), TP NO. 158 A/2, WARD NO. 10, SHABADI COMPOUND EXTN, BAGALKOT-587101, PH :587101-9880875595.					426.##	PRINCIPAL (255), J.M.I.T, N.H.4, P.B. NO.73, CHITRADURGA-577 502, PH :577 502-9731330300.
<b>BAILHONGAL</b>						<b>DAVANGERE</b>	
						427.##	HEGDGE AUTO CENTRE (172), NO 2007/37, NEAR BIET, SHAMANUR ROAD, DAVANGERE, KARNATAKA-577004, PH :577004-8494853646.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

\* B-Category Mass : Free & paid Service & Major repairs

## C-Category Mass : Free & paid Service & Minor repairs

# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

428.## SREE MALLIKARJUNA MOTOR (229), NO 68, RMC ROAD, NEAR KSRTC BUS STAND, DAVANGERE, KARNATAKA - 577003, PH :577 003-9880701015.

**DEVANAHALLI**

429.## SAHARA AUTOMOBILES (4731), OPP. A. RTO OFFICE, NH-7, B.B. ROAD, DEVANAHALLI-562110, KARNATAKA, PH :562110-9448662364.

**DHARWAD**

430.\*\* MYSORE GARAGE (2468), BELGAUM ROAD, DHARWAD-580 001, (KARNATAKA), PH :580 001-9844133273.

**DODDABALLAPUR**

431.## PRESTIGE MOTORS (4875), NEAR RAILWAY STATION KHASBHAG, DODDABALLAPUR, , PH :560026-9900274594.

**GADAG**

432.## MODERN MOTORS (8939), HUBLI ROAD, GADAG-582 103, (KARNATAKA), PH :582 103-9448746579.

**GULBARGA**

433.## DELUX AUTO SERVICE (5840), SURVEY NO 77/8,VILLAGE KUSNOOR,NEAR -, UNIVERSITY,SEDAM ROAD,GULBARGA-585104, DISTRICT-GULBARGA, (KARNATAKA), PH :585104-9242991292.

**HOSPET**

434.## SUPREME AUTO SERVICE (2569), NEAR RTO OFFICE, HARIHAR ROAD, HOSPET-583 203, (KARNATAKA), PH :583 203-9845307361.

**HUBLI**

435.## SHRI BASAVA MOTORS (4968), OPP SANA COLLEGE,APMC PB ROAD, BHIRIDEVARKOPPA,HUBLI-580025, , PH :580025-9980025644.

**KADUR**

436.## SRI SAI MARUTHI SERVICE STATION (5725), ULUKINAKALLU, NH 206, KADUR, , PH :583201-9916947196.

**KARKALA**

437.## KARKALA MOTORS (3549), TELLAR ROAD, KARKALA-574 104, (KARNATAKA), PH :574 104-9845356244.

**KOLAR**

438.## SHIVA SERVICE POINT (2472), M.B. ROAD, KOLAR-563 101, (KARNATAKA), PH :563 101-9448228604.

**KOLLEGAL**

439.## FIX PLUS AUTO CARE CENTRE (4249), C-8, IND. ESTATE, MAHADESHWARA COLLEGE ROAD, KOLLEGAL-571440, PH :571440-9448807237.

**KOPPA**

440.## AUTO TECH (3448), MAIN ROAD, UPPERPET, KOPPA-577 126, (CHIKMAGALUR DIST.), PH :577 126-9448156950.

**KUMTA**

441.## SOLOTECH (4547), NEAR MARUTI TEMPLE, HANDIGON, KUMTA- 581343, PH :581343-9448149607.

**KUNDAPUR**

442.\* PRAKASH AUTO SERVICE (4522), NEAR: K.E.B., VODERHOBLI, KUNDAPURA-576 201, PH :576 201-9341035642.

**MANIPAL**

443.## MANIPAL MARUTI AUTO WORKS (4578), MANIPAL ALEVOOR ROAD, NEAR R.C. CHURCH, OPP. SIGMA BAZAR, MANIPAL (UDUPI DIST), PH :591102-9448108318.

**MUDHOL**

444.## OM MOTORS (5857), OPP TALUKA OFFICE, LOKAPUR ROAD,MUDHOL-587313, DISTRICT-BAGALKOT, KARNATAKA, PH :587313-9663830660.

**MUDIGERE**

445.## BADRIYA CAR SERVICE POINT (5364), K.M. ROAD,MUDIGERE , DISTRICT-CHIKAMANGALORE , PIN - 577132 , (KARNATAKA), PH :577132-9448007094.

**MYSORE**

446.\*\* CAR CLINIC (346), 1959/A, BOGADI RING ROAD, NEAR GLN CONVENTION HALL, BOGADI, MYSORE, PH :585106-9342184831.

**NELAMANGALA**

447.## GOUTHAM MOTORS (4332), PATEL CHANNAPPA EXTN, NELAMANGALA-562123, KARNATAKA, PH :562123-9880251546.

**RABAKAVI BANAHATTI**

448.## SANGAMA MOTORS (5726), BESIDE CMC,RAMPUR MAIN ROAD, RABAKAVI-587314, DISTRICT-BAGALKOT, KARNATAKA, PH :587314-9480035617.

**RAICHUR**

449.## HEERA MOTORS (3730), OPP. MOTI MASJID, SHIVJI OIL MILL COMPOUND, TIPU SULTAN ROAD, RAICHUR-584 101 (KARNATAKA), PH :584 101-9845156322.

**RANEBENNUR**

450.## KIZEN MOTORS (4568), P.B. ROAD, OPP. A.P.M.C MARKET, RANEBENNUR-581115, PH :581115-9900922022.

**SAGAR (KARNATAKA)**

451.## ADITYA AUTOMOBILES (2077), JOG ROAD, SAGAR-577 401, (KARNATAKA), PH :577 401-9448024395.

452.## MALLIKA AUTO CENTRE (2133), MALLIK COMPLEX, B.H. ROAD, SAGAR-577 401, PH :577 401-9448139605.

**SHIMOGA**

453.## NEPTUNE AUTO WORKS (5271), PLOT -5 AUTO COMPLEX , SAGAR ROAD - SHIMOGA , DISTRICT - SHIMOGA, KARNATAKA, PH :577204-9448319758.

454.\* SHIMOGA AUTO ENGG WORKS (246), GARDEN AREA, SHIMOGA-577 201, KARNATAKA, PH :577 201-7899114872.

**SIDDAPUR**

455.## MARUTI AUTO WORKS (5335), SORAB ROAD,SIDDAPUR (U.K)-581355, DISTRICT - UTTAR KANAND, PIN- 581355, KARNATAKA, PH :581355-9448525801.

**SIRSI**

456.\* ARUNDHATI MOTORS (1258), HUBLI ROAD, SIRSI-581 402, (UTTAR KARNATAKA), PH :581 402-9845098822.

**SRINGERI**

457.## SHUBHASHREE MOTORS (5434), AGUMBLE ROAD ,SRINGERI , DISTRICT - CHIKAMAGALUR , SRINGERI - 577139, KARNATAKA, PH :577139-9448170400.

**TIRTHALLI**

458.## SUMUKA AUTOMOBILES (5133), AP ROAD,CEEbene KERI, DISTRICT-SIMGA, SHIMGA-577414, KARNATAKA, PH :577414-9686944949.

**TUMKUR**

459.## APOORVA CAR CARE CENTRE (5327), B.N.P. COMPOUND ,BEHIND KRISHNA THEATRE, M.G. ROAD - TUMKUR, DISTRICT - TUMKUR, KARNATAKA, PH :571440-9901515516.

**UDUPI**

460.\* ST. JUDE AUTOMOBILE ENGG. WORKS (4521), B.D.MARG, AMBALAPADI, UDIPI-576 103, PH :576 103-9844991241.

**UPPINANGADI**

461.## RATNA ENTERPRISES (5447), BUILDING NO 5/514 KUKKAJE, SUBRAMNYA ROAD, UPPINANGADI, , PH :587313-9972995341.

**KERALA**

**ADIMALY**

462.## PLATHOTTAM AUTOMOBILES (3884), NH-49, OPPOSITE TO MINI INDUSTRIAL ESTATE, ADIMALI-685561, PH :685561-9447023073.

**ADOOR**

463.## AUTO CLUB (2132), NEAR H.P. PUMP, VADAKKADATHUKAVU P.O, ADOOR, PATHNAMTHITTA DISTT, PH :691523-9447440184.

**ALAPPUZA**

464.## ESSAR MOTORS (4959), KALARKODE, NEAR CHINMAYA SCHOOL, NH-47, ALAPPUZA-688003, KERALA, PH :688003-9249938474.

**ALUVA**

465.## AUTO TEAM (2630), A/189 A, PARUR JUNCTION, ALUVA, (KERALA), PH :683108-9947333760.

**AMBALLUR**

466.## LAKSHMI DEVI AUTO GARAGE (4137), AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA, PH :680301-9847903949.

**ANCHAL**

467.## NAMI-TAJ (2534), NEAR ST. GEORGE CENTRAL SCHOOL, R.O. JUNCTION, ANCHAL, KERALA -691 306., PH :691306-9447453745.

**ANJUMOORTHY**

468.## SAFA AUTO CARE (3847), N H ROAD, MANGALAM PALAM, ANJUMOORTHY POST, VADAKKENCHERY, PALAKKAD DISTT, KERALA, PH :678682-9447303347.

**ATTINGAL**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023 )

469.##	OM SHAKTI AUTOMOBILES (4466), KIZHUVILAM P.O., MAMOM, ATTINGAL, KERALA-695104, PH :695104-9744658681.	480.##	AGT MOTORS (5937), KIP JUNCTION, KALANJOOR-689694, DISTRICT-PATHANAMTHITTA, KERALA, PH :689698-9744409444.	490.##	MADATHIL MOTORS (5456), MADATHIL HOUSE CHOONDUPALAKA , KATTAKADA P.O. - TRIVANDRUM , DISTRICT - TRIVANDRUM , (KERALA), PH :695543-9495192389.	500.##	AUTO CARE (2541), (SHEEJA AUTO ENGG. WORKS), THALASSERY ROAD, MANANTHAVADY-670 645, WAYANAD (DIST.), PH :670645-9447040068.
<b>AYOOR</b>		<b>KALLAMBALAM</b>		<b>KATTAPPANA</b>		<b>MANJERI</b>	
470.*	MAKKATTU AUTO CLINIC (5051), AYOOR- ANCHAL ROAD.PANACHAILA, AYOOR - 691306, DISTRICT - KOLLAM, KERALA, PH :691306-9847288624.	481.##	PRAKASH AUTO ENGINEERS (5548), VADASSERIKONAM P.O. KALLAMBALAM, VARKALA,KALLAMBALAM-695143, DISTRICT-TRIVANDRUM, KERALA, PH :695143-9847159618.	491.##	UNITED SERVICE CENTER (4433), EDASSERT JUNCTION, KATTAPPANA-685508, KERALA, PH :685508-9961432941.	501.##	MARUTI AUTO HOUSE (4726), CHERANI, KARUVAMBARAM PO, MANJERI, KERALA. PIN 676123, PH :676123-9447129289.
<b>CALICUT</b>		<b>KALLUMUTTY</b>		<b>KAYAMKULAM</b>		<b>MANNAR</b>	
471.##	MALABAR MOTORS (4655), EAST NADAKKAVU, P.O. ERANIPALAM, CALICUT-673006, KERALA, PH :673006-9846089190.	482.##	MARUTI CARE (4179), KALLUMUTTY, IRITTY P.O., KANNUR, KERALA - 670703, PH :670703-9946703070.	492.##	PERFECT MOTORS (4948), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA), PH :690507-9447048338.	502.##	MOHANS AUTOMOBILES (5457), MOHANS AUTOMOBILES & ENGINEERS , KUTTEMPEROOR P.O. MANNAR, DISTRICT - ALAPPUZHA , (KERALA), PH :689622-9447877377.
472.##	MARUTI SCAN (1675), BYE PASS JUNCTION, MEENCHANDA, CALICUT-673 018, PH :673018-9847130508.	<b>KALPETTA</b>		<b>KONNI</b>		<b>MANNUTHY</b>	
<b>CHALAKUDY</b>		483.##	VARCO MOTORS (4724), 18/226-1, NEAR VELLARAMKUNNU, NH 212, KALPETTA - 673121 , , PH :673121-9961569898.	493.##	GLOBAL MOTORS (2836), VAKAYAR P.O., KONNI-689 698, (KERALA), PH :689698-9446222944.	503.**	TOP CLEAN SERVICES (2834), 13/450 MANNUTHI BYE PASS, P.O. OLLUKKARA, THRISSUR, (KERALA), PH :680651-8592947776, 9846037818.
473.##	STAR MARUTI GARAGE (5387), NH47 BYE PASS, NEAR CRESCENT PUBLIC SCHOOL, CHALAKKUDY, DISTRICT - THRISSUR, PH :680307-9946009375.	<b>KANJIRAPPALLY</b>		494.##	MUTTATH AUTOMOBILES (5525), AROORPALAM,KONNI-689691, DISTRICT - PATHANANTHITTA, KERALA, PH :689691-9447431751.	<b>MEENANGADI</b>	
474.*	VJAY AUTO SERVICE (1626), POTTA, CHALAKUDY-680 307 , , PH :680307-9995074628.	484.##	MACK ENTERPRISES (2729), T.B.ROAD, KANJIRAPALLY , , PH :686507-9447093739.	<b>KOOTHATTUKULAM</b>		504.##	MOTOR TECH (2440), EAST MEENANGADI, KRISHNAGIRI P.O., WAYANAD-673 591, (KERALA), PH :673591-9539195850.
<b>CHANGANACHERRY</b>		<b>KANNUR</b>		495.##	EXTRA CARE SERVICES (3232), DEVA MATHA JUNCTION, M.C. ROAD, KOOTHATTUKULAM-686 662, ERNAKULAM DIST. (KERALA), PH :689121-9544552080.	<b>MOOCHIKKAL</b>	
475.*	PALATHRA MOTORS & SERVICE CENTRE (1072), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY-686 104, PH :686104-9447195154.	485.##	AREN MOTORS (5139), CHAKKARAKAL P.O. MUZHAPPALA, DISTRICT - KANNUR, KERALA, PH :670613-9446771237.	<b>KOTHAMANGALAM</b>		505.##	CHELADAN'S MARUTI ENGINEERS (4659), THANUR ROAD, MOOCHIKKAL-676307, MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA), PH :676307-9895443563.
476.##	SAAFAA AUTOMOBILES (1148), PALATHARA CHIRA, BY PASS ROAD, CHANGANACHERRY, KOTTAYAM-686104, , PH :686104-9447042517.	486.**	PIONEER AUTO & ENGG.WORKS (4722), KANNOTHUMCHAL ROAD, KANNUR - 2, (KERALA), PH :670005-9447798255.	<b>KOTHAMANGALAM</b>		<b>MUNNAR</b>	
<b>CHENGANNUR</b>		<b>KARIMANOOR</b>		496.##	EXCEL MARUTI SERVICE (4342), BYE-PASS ROAD, KOTHAMANGALAM, ERNAKULAM-686691, PH :686691-8848605865.	506.##	PLATHOTTAM AUTOMOBILES (4447), COLONY ROAD, IKKA NAGAR, MUNNAR, IDUKKI, KERALA - 685612, PH :685612-9447023073.
477.*	NEW TECH AUTOMOBILES (1978), INDUSTRIAL ESTATE, MUNDANCAVU, CHENGANNUR-689 121, KERALA, PH :689121-9388915757.	487.##	MACS AUTOMOBILES (5745), SILVER SQUARE ,KARIMANNOOR,THODUPUZHA, DISTRICT-IDUKKI, KERALA, PH :685581-9633275410.	497.##	MAJESTIC MOTORS (1253), NEAR THANKALAM BYE-PASS ROAD, KOTHAMANGALAM-686 691, KERALA, PH :686691-9946427528.	<b>MUVATTUPUZHA</b>	
<b>CHERTHALA</b>		<b>KASARGOD</b>		<b>KUNDARA</b>		507.**	JAWAN AUTOMOBILES (2730), MADAVOOR POST, MUVATTUPUZHA-686 669 , , PH :686689-8943345500.
478.*	POZHICKAL CAR WORLD (3037), NEAR BOYS HIGH SCHOOL, CHERTHALA, ALAPPUZHA DIST., KERALA-688 524, PH :688524-9947474752.	488.##	CARS CARE (4579), ANANDPUR, VIDYANAGAR P.O., KASARGOD, KERALA-671123, PH :671123-9847251115.	498.##	SPARK SERVICE (5772), ELAMPALLOOR.P.O. KUNDARA-691501, DISTRICT-KOLLAM, (KERALA), PH :691501-9809608020.	<b>NEYYANTINKARA</b>	
<b>ETTUMANOOR</b>		<b>KATTAKADA</b>		<b>KUTHUPARAMBA</b>		508.##	XANON ENGINEERS (4635), RAVELI TOLL JUNCTION, NEYYATTINKARA, TRIVANDRUM-695121, PH :695121-9447014813.
479.##	ROHIT MOTORS (4636), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA, PH :686630-9447079010.	489.##	CITY ENGINEERS (4947), MARUTI SERVICE CENTRE, NEYYATTINKARA ROAD, KATTAKADA-695572, DISTRICT-TRIVANDRUM (KERALA), PH :695572-9447206257.	499.##	KRISHNA MOTORS (3435), KUTTIKKUNNU, NEAR 66 KV SUB STATION, KUTHUPARAMBA-670 643, KANNUR DIST. (KERALA), PH :670643-9497296380.	<b>NILAMBUR</b>	
<b>KALANJOOR</b>				<b>MANANTHAVADY</b>		509.##	CONFIDENCE MOTORS (5140), PALUNDA.CHUNGATHARA, NILAMBUR-679334, DISTRICT - MALLAPURAM, KERALA, PH :679334-8075272281.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

## Maruti Authorized Service Station (AS ON 30.05.2023 )

NILAMEL		520.##	RANI AUTOMOBILES & ENGINEERING WORKS (1674), 10/496, NADAPURAM ROAD, MADAPPALLI COLLEGE POST, VATAKARA, KOZHICODE - 673102., PH :673102-9400513139.
510.##	LIBRA (3431), M.C. ROAD, NILAMEL-691 535, KOLLAM DIST., (KERALA), PH :691535-9895629768.		
OCHIRA		LAKSHADWEEP	
511.*	MANGALATH AUTOMOBILES (3836), NH 47 VALIYAKULANGARA, OCHIRA P O, KOLLAM DIST, KERALA-690526, PH :690526-9847258696.	LAKSHADWEEP	
OLLUR		542.##	POPULAR REPAIR & SERVICE CENTRE (2944), SECRETARIAT ROAD, KAVARATTI, LAKSHADWEEP-682 555, PH :682555-9448463737.
512.##	TOPCLEAN SERVICES (4468), 10/153, CHRISTOPHER NAGAR, P.O OLLUR, TRICHUR (KERALA), PH :680306-9846037818.	MADHYA PRADESH	
PALAKKAD		BALAGHAT	
513.##	CAR CRAFT (2139), 5/682 (1), MANALI, PALAKAD-678 001, (KERALA), PH :678001-9349607619.	543.##	GULAB AUTOMOBILES (1553), GUJARI CHOWK, BALAGHAT-481 001, MADHYA PRADESH, PH :481001-9425402926.
PANDALAM		544.##	SAURAV MOTORS (4069), DEENHI ROAD, GARRA INDUSTRIAL AREA, BALAGHAT, MADHYA PRADESH, PH :481001-9300963731.
514.*	AISHWARYA AUTOMOBILES (2067), NEAR K.S.R.T.C. BUS STOP, PANDALAM-689 501, , PH :689501-9847049140.	BARWANI	
PARIPALLY		545.##	SPEED AUTOMOBILES (5260), KHANDWA BARODA ROAD, NR. BALAJI TOLL KANTA,BARWANI-451552, DISTRICT-BARWANI, MADHYA PRADESH, PH :451552-9926146073.
515.##	ALLIANCE MARUTI SERVICES (3243), NH-47, PARIPPALLY-691 574, KOLLAM DIST. (KERALA), PH :691574-9349926440.	BETUL	
PATHANAPURAM		546.##	ADITYA MOTORS (1263), NAGPUR BHOPAL ROAD, SADAR, BETUL-461 001, MADHYA PRADESH, PH :460001-9425381581.
516.##	MANNIL AUTOMOBILES (4150), NEAR PANCHAYAT OFFICE, PATHANAPURAM, KERALA-689695, PH :689695-9447258496.	BHIND	
PATHNAMTHITTA		547.##	MAA PITAMBARA MOTORS (5241), OPP.RAJENDERA CONVENT SCHOOL , LAKSHAR ROAD - BHIND , MADHYA PRADESH, PH :477001-9826240582.
517.**	C.J. MARUTI CARE CENTRE (1255), VARIYAPURAM, ELANTHOOR EAST P.O., PATHANAMTHITTA-689 643, (KERALA), PH :689643-9446913874.	BHOPAL	
PERAVOOR		548.##	SHRI KRISHAN CAR CARE (1679), POLYTECHNIC ROAD, NEAR PETROL PUMP, BHOPAL, (M.P.), PH :462002-9424454030.
518.##	CAR CARE AUTOMOBILES (4422), KODENCHAL, PERAVOOR, NIDUMPOYIL P.O., KANNUR- 670650, PH :670650-9946444691.	549.##	SHUBHAM AUTOMOBILES (5052), PLOT NO. 1 & 2, TIRANGA ROAD, SHAHPURA, BHOPAL, MADHYA PRADESH -462039, PH :462039-9425009869.
PERUMBAVOOR		550.*	TAURUS AUTOMOBILES (3372), ALAKNANDA COMPLEX, OPP.VIJAY STAMBH PRESS COMPLEX, M.P. NAGAR ZONE-I, BHOPAL (M.P.), PH :462011-9303131403.
519.##	MILLENNIUM MOTORS (4873), OLD VALLAM ROAD, KADUVAL, PERUMBAVOOR-683542, DISTRICT-ERNAKULAM (KERALA), PH :683542-9446661111.		
QUILANDY			

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

551.\*\* VIDHYA AUTOMOBILES (320), PLOT NO. 235, ZONE II, B, PH :462011-9826053198.

**BIAORA**

552.## GURUKRUPA MOTORS (5670), OPP PRABHAT BREAD INDUSTRY, AB ROAD - BIOARA, DISTRICT - BIOARA, MADHYA PRADESH, PH :465674-9425038727.

**BURHANPUR**

553.\*\* SWADESHI MOTORS (4229), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR, MADHYA PRADESH, PH :450331-9826337438.

**DABRA**

554.## MODI MOTORS (3857), BALLA KA DERA, JHANSI ROAD, DABRA, GWALIOR, PH :475110-8770360194.

**DAMOH**

555.## MARUTI PRIME (1156), BUS STAND, STATION ROAD, DAMOH-470 661, PH :470 661-8319706998.

**DATIA**

556.## HIND MOTORS (4470), NH-75, JHANSI BYPASS ROAD, NEAR S.R.I COLLEGE, KALAMPURAM TIRHA, DATIA, MADHYA PRADESH - 475661, PH :475661-9406969206.

**DEWAS**

557.## AZAD MOTORS (4534), 10, JAWAHAR NAGAR COMPLEX AB ROAD DEWAS(MP)404051, PH :455001-9827533591.

**DHAR**

558.## JIYO MOTORS (5031), OPP DAK BANGLA,INDORE ROAD DHAR., DISTRICT - DHAR, DHAR - 454001, MADHYA PRADESH, PH :454001-9893633559.

**GWALIOR**

559.## CLASSIC MOTORS & SERVICE STATION (5242), CHAUHAN PIAO.M.G. ROAD, THATIPUR. MORAR, GWALIOR , MADHYA PRADESH, PH :474011-9329603001.

560.\*\* MARUTI ENTERPRISES (3021), KHERAPATI ROAD, GWALIOR-474 002, (M.P.), PH :474002-9425116466.

**HARDRA**

561.## MANOJ UDYOG & SERVICE CENTER (4145), 87-88, INDUSTRIAL AREA, CHHIPANER ROAD, HARDRA, M.P. PH :461331-9826227245.

**INDORE**

562.## BADSHAH MOTORS (5027), 150/2,NOORANI NAGAR,NEAR JAIMAL SINGH PETROL PUMP, DHAR ROAD,INDORE-452008, DISTRICT-INDORE, MADHYA PRADESH, PH :452008-9826098427.

563.\*\* BOMBAY MOTORS (1655), 10 Y.N. ROAD, INDORE-452 003, (M.P.), PH :452003-7314222786.

564.## JYOTI RAGHUNATH MOTORS (5149), 3/3 RAMBAGH, BEHIND PETROL PUMP , INDORE -452001, MADHYA PRADESH, PH :452001-9425353568.

**ITARSI**

565.\* PITAMBARA MOTORS (5041), NH-69,BETUL ROAD,NEAR PLYBOARD, FACTORY ITARSI , DISTRICT - ITARSI, MADHYA PRADESH, PH :461111-9406525060.

566.\*\* UNITY ENTERPRISES (3270), PLOT NO.97, INDUSTRIAL AREA, KHEDA, ITARSI-461 111 (M.P.), PH :461 111-8120025666.

**JABALPUR**

567.## SUPER MARUTI SERVICE (4952), 375-A PREM NAGAR, OPP. GURUDWARA, JABALPUR-482001, MADHYA PRADESH, PH :482001-7999993375.

568.## YASH VEHICLES CARE (2169), 1664, WRIGHT TOWN ,OPP. TELEGRAPH GATE NO. 2 JABALPUR (M.P), PH :482002-9893237505.

**JAWAD**

569.## SHARMA MOTORS (5764), IN FRONT OF PAWAN MILL, STATION ROAD,JAWAD-458330, DISTRICT-NEEMUCH, MADHYA PRADESH, PH :458330-9425441270.

**KATNI**

570.## KATNI MOTORS (4949), C/O MAHURANIPUR UNION, TRANSPORT CORPORATION, NH-7, PANNA MORH, KATNI-483501 (MADHYA PRADESH), PH :483501-9425162660.

**KHANDWA**

571.## M.K.AUTOMOBILES (5326), SANTOSH NAGAR, OPP. JHEELOCHYAN, INDORE ROAD, KHANDWA - 450 001, PH :450001-9425085666.

**KUKSHI**

572.## DILIP MARUTI SERVICE CENTER (4649), OPP. GAYATRI SAROVAR, KUKSHI, DISTT DHAR PH :454331-9340709923.

**MANDSAUR**

573.## DEV MOTORS (4562), SITAMAU FATAK, MANDSAUR-458001, MADHYA PRADESH, PH :458001-9826751534.

574.\* JANGID MOTORS (2735), NAYAPURA ROAD, NEAR R.K. HOSPITAL, MANDSAUR-458 001, (M.P.), PH :458001-9827266583.

**MHOW**

575.\* HIGHWAY MOTORS (4144), A.B. ROAD, DONGRAGAON, MHOW-453441, INDORE M.P., PH :453441-9826035653.

**MORENA**

576.## SHYAM MARUTI SERVICE STATION (8935), SHYAM BIHAR COLONY, A.B. ROAD, MORENA-476 001, MADHYA PRADESH, PH :476 001-7999624671.

**NAGDA**

577.## MARUTI NANDAN (3939), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA, DISTT UJJAIN, PH :456335-9910074658.

**SAGAR (M.P)**

578.## SHREE SAGAR MOTORS (4955), NEAR GURUDWARA, JHANSI BHOPAL ROAD, BHAGWANGANJ, SAGAR-470002, MADHYA PRADESH, PH :470002-9826070549.

**SARNI**

579.## JHANVI SERVICE STATION (3738), MAIN ROAD, BAGDONA, SARNI-460 449, DISTT. BETUL (M.P.), PH :460449-9425382313.

**SATNA**

580.\* KAPOOR SERVICING CENTRE (1162), 90 PREM NAGAR, SATNA-485 001, (M.P.), PH :470661-9827095182.

**SEONI**

581.## HIGHWAY MOTORS (2262), NEAR MOTEL CENTER POINT, SEONI-JABALPUR HIGHWAY, SEONI, (M.P.), PH :480882-9424928978.

**SHAHDOL**

582.## PACE CRAFTERS (2145), NEAR VIRAT TEMPLE, BANGANGA TIRAHA, REWA ROAD, SHAHDOL, (M.P.), PH :484001-9424701495.

**SHAJAPUR**

583.## SHRIYA MOTORS (2568), 174 A.B. ROAD, SHAHJAPUR-456 001, (M.P.), MADHYA PRADESH, PH :456 001-9826783993.

**SHEOPUR**

584.## GOYAL AUTO (5446), NEAR NABBAN MARKET, BARODA ROAD, SHEOPUR, DISTRICT - SHEOPUR, MADHYA PRADESH, PH :476337-9826240944.

**SHIVPURI**

585.\* KARUN MOTORS (4273), NEAR ARUN DHARAMKANTA, GUNA NAKA, A.B. ROAD, SHIVPURI, PH :473551-9425728285.

**SIDHI**

586.## KHARE MOTORS (4068), NH-75, SINGRAULI ROAD, SIDHI, MADHYA PRADESH, PH :486661-9425823952.

**TIKAMGARH**

587.\* ASHENDRA AUTOMOBILES (2636), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA, KUNDRESHWAR, TIKAMGARH-472 001, MADHYA PRADESH, PH :472001-9009129909.

**UJJAIN**

588.## SUGANDHI BROTHERS (324), DEWAS ROAD, UJJAIN (M.P.) , MADHYA PRADESH, PH :456010-9406822255.

589.## ZALANI AUTO SERVICE (1554), A 15/9, MAHAKAL VANIJYA KENDRA., NANAKHEDA, UJJAIN 456010, , PH :456010-9713884177.

**VIDISHA**

590.## SAMAY MOTORS (5179), NEAR SC/S SHED , PITALMIR CHOURAHA, SAGAR ROAD NH-86, VIDISHA-464002, PH :464002-9425392521.

**WADHAN**

591.## ANANT MOTORS (5732), NEAR ESSAR TOWNSHIP, BILAUNJI ,WADHAN, DISTRICT-SINGRAULI, PIN-486886, MADHYA PRADESH, PH :486886-9425823952.

**MAHARASHTRA**

**AKLUJ**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs  
## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs  
# D-Category Mass : Free Service & Minor repairs



**Maruti Authorized Service Station (AS ON 30.05.2023 )**

592.## SONAJ AUTOMOTIVES PVT. LTD. (2665), SHANKARRAO MOHITE PATIL, CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.O. BOX NO.-11, AKLUJ -413 101 (MAHARASHTRA), PH :413101-9657713360.

**AKOLA**

593.## AUTOLAND (5936), RAM NAGAR, TOSHNIWAL LAYOUT, AKOLA-444005, DISTRICT-AKOLA, MAHARASHTRA, PH :444005-9422164050.

**AKOLE**

594.## SAMARTH CAR CARE (5555), MAHALAXMI COLONY,K.G. ROAD-AKOLE, DISTRICT - AHMEDNAGAR, PIN-422601, MAHARASHTRA, PH :422601-9881759099.

**AMALNER**

595.## LUCKY AUTO CARES (5853), R.K. COMPLEX,R.K. NAGAR,DHULE ROAD, AMALNER-425401, DISTRICT-JALGAON, MAHARASHTRA, PH :425401-9422789764.

**AMBERNATH**

596.\* J.S. AUTOMOBILES (4567), B-31/3, MIDC, KALYAN AMBERNATH ROAD, AMBERNATH-421501, MAHARASHTRA, PH :421501-9370116436.

**AURANGABAD**

597.\* CAR CARE (5173), #85.SERVICE INDUSTRIAL SECTOR, TOWN CENTRE,CIDCO, DISTRICT-AURANGABAD, MAHARASHTRA, PH :431006-9158000029.

598.\* MARUTI AUTOMOBILES (3441), CHETAN TRADE CENTRE, JALNA ROAD,OPP. SFS SCHOOL, AURANGABAD - 431001, PH :431101-9767301999.

**BADLAPUR**

599.## OMKAR AUTO SERVICES (3376), OMKAR BUNGLOW, GOLE WADI, KULGAON STN., BADLAPUR DIST. THANE, PH :421503-9326080457.

**BARSHI**

600.## OM SERVICE CENTRE (5359), KURWEDI ROAD - BARSJ, DISTRICT - SOLAPUR , PIN - 413401, (MAHARASHTRA ), PH :413401-9850437003.

**BEED**

601.## NEW AGWAN SERVICES (2235), 850 SHYOG NAGAR, JALNA ROAD, BEED-431 122, PH :431122-9822217321.

**BOISAR**

602.## SIFAR CAR CARE (4055), PLOT NO. 15 AT-KURGAON, P O KUNDAN, BOISAR TARAPUR ROAD, TAL PALGHAR, DISTT THANE, PH :401506-9765509990.

**CHANDRAPUR (MAHARASHTRA)**

603.## SHEIKH AUTOMOBILES (5379), APPOSITE GOVT. ITI.CIVIL LINES , CHANDRAPUR, DISTRICT - CHANDRAPUR, MAHARASHTRA, PH :442401-9422171896.

**CHIPLUN**

604.## MANORKAR AUTOMOBILES (270), NEAR RAILWAY STATION, BOMBAY-GOA HIGHWAY, WALOPE CHIPLUN-415 605, DISTT. RATNAGIRI, PH :415605-9421239999.

605.## MAYUR MOTORS (168), SITA APARTMENTS, NEAR BAHADUR SHEIKH NAKA, CHIPLUN DISTT. RATNAGIRI, MAHARASHTRA, PH :415605-9422431112.

**DAPOLI**

606.\* ROYAL AUTO SERVICE STATION (3444), DAPOLI-MANDANGAD ROAD, MAUJE-DAPOLI, TAL- DAPOLI, DIST. RATNAGIRI-415 712 (MAHARASHTRA), PH :415712-8888101776.

**DEOPUR**

607.\*\* AGRO ENGINEERING SERVICES (2244), DIVERSION ROAD, DEOPUR, DHULE-424 005, PH :424005-9823059471.

**DOMBIVLI**

608.## MEGA SERVICES (2573), A-173,PHASE-1,, NEW KALYAN BYPASS ROAD , OPPOSITE ADARSH PARK,MIDC, DOMBIVLI (E)-421203, PH :421203-8424070777.

**GADACHIROLI**

609.## VENUS AUTOMOTIVE (4170), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY, GADACHIROLI, MAHARASHTRA-442605, PH :442605-9689228222.

**ICHALKARANJI**

610.## SAI AUTO LEADS (3821), 7/597 SANGLI VES, ICHALKARANJI-416 115, DIST. KOLHAPUR, PH :416115-0230-2426089.

**ISLAMPUR**

611.## VIJAY MOTORS (5134), PETH ISLAMPUR ROAD , NEAR PETH NAKA -ISLAMPUR, DISTRICT - SANGLI, MAHARASHTRA, PH :415409-986046084.

**JALGAON**

612.\* SHREE MOTORS (3040), 362 SHIVAJI NAGAR, JALGAON-425 001, , PH :425001-9823150704.

**KALWA**

613.\*\* SHREE SIDDHI MOTORS (5688), NEXT TO LILAVATI CO-OP SOCIETY.DATTAWADA, KALWA KHAREGAON ROAD-KALWA(W) -400605, DISTRICT - THANE, (MAHARASHTRA), PH :400605-9769775444.

**KALWAN**

614.## KRISHNA AUTOMOTIVE (4037), GANESH NAGAR, AT POST & TALUKA, KALWAN, DIST NASHIK-423501, PH :423501-808798735.

**KANKAVLI**

615.\*\* SAPALE AUTO SERVICE PRIVATE LIMITED (1975), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHUDURG-416 602, PH :416602-9422434701.

**KATOL**

616.## BALAJI SERVICE STATION (5962), PLOT NO. XI,MIDC,SAWARGAON ROAD,DONGARGAON-, KATOL,NAGPUR-441302, DISTRICT-NAGPUR, MAHARASHTRA, PH :441302-9763867144.

**KHAMGAON**

617.## JAIDEEP MOTORS (4779), NEAR RELIANCE PETROL PUMP, NANDURA ROAD, KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA), PH :444303-9850352826.

**KHED**

618.## BHARAT AGENCIES (4548), NEAR KAMAKSHI PETROL PUMP, AT POST KALBANI, TALUKA KHED, DISTRICT RATNAGIRI, 415621, PH :415621-9049024781.

**KOLHAPUR**

619.\* VAKRATUNDA MOTORS (3142), OPP MAHAVIR COLLEGE, NAGALA PARK, KOLHAPUR, PH :416003-9822611559.

**KOPARGAON**

620.\* SAI MOTORS (4449), NAGAR MANMAD HIGHWAY, NEAR HOTEL ASHOKA, KOPARGAON, DIST. AHMEDNAGAR (MAHARASHTRA), PH :423601-9850684384.

**LONAVALA**

621.## APPOLO MOTOR REPAIRING WORKS (2543), MUMBAI-PUNE ROAD, LONAVALA, MAHARASHTRA-410 401, PH :415409-9370721905.

**MAHAD**

622.## SHREE AUTO (2572), NAGALWADI PHATA BOMBAY-GOA HIGHWAY, AT & TALUKA - MAHAD, DISTT. RAIGAD, MAHARASHTRA-402 301, PH :402301-9422495799.

**MALEGAON**

623.## MALEGAON AUTO CENTRE (3721), NEAR MOTI BAUG NAKA, MALEGAON-423 203, , PH :423203-9371376911.

**MANGAON**

624.## KRUPA SERVICES (574), KRUPA SERVICES, AT : NANORE, POST : MANGAON, DISTT-RAIGAD-402 104, PH :402104-9422375444.

**MIRAJ**

625.## ASHOK AUTOMOBILES (5672), C.S. NO:70-C,CHH - SHIVAJI ROAD, MIRAJ, DISTRICT - SANGLI, MAHARASHTRA, PH :416410-0233-2375961.

**MUMBAI**

626.\* ALLIED AUTO AGENCIES (2666), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052, PH :400052-9768257450.

627.\* ASHA AUTO SERVICE (570), I.O.C. DEALER, L.B.SHASTRJI MARG, KURLA, MUMBAI-400 070, PH :400070-9833728833.

628.\*\* AUTO CRAFT (4759), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG, VIKHROLI (W), MUMBAI-400083, PH :400083-9820022227.

629.## AMAR AUTOMOBILES (526), KING'S CIRCLE, MATUNGA, MUMBAI-400 019 (MHRS), PH :400019-9869473310.

630.## BANAI AUTO CARE (6053), OPP. MAROL POLICE CAMP, NEXT TO AAREY CHECK POST, MAROL MAROSHI ROAD, MUMBAI-400 059, PH :400059-9819844333.

631.\*\* CARKRAFT AUTOMOBILE SERVICES PVT. LTD. (4654), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR SAI DHAM MANDHIR, MULUND (W), MUMBAI, PH :400080-9820286924.

632.\*\* CHAMUNDA MOTORS (P) LTD. (520), RAM BAUG NEAR SUNDAR DHAM, OFF S.V.ROAD, BORIVILI (W), MUMBAI-400 092, PH :400092-9820063626.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

633.## CHEMBUR MOTORS (2526), 31/A ANAND NAGAR, OFF SION TROMBAY ROAD, SINDHI SOCIETY CHEMBUR, MUMBAI-400 071, PH :400071-9820475704.

634.## CHHAGAN MITHA (5230), CORNER OF WARDEN ROAD & PEDDAR ROAD, POST BOX NO. 6521, MUMBAI -400026, MAHARASHTRA, PH :400026-9820861441.

635.## HIND AUTOMOBILES (550), 29 SEWREE WADALA ROAD, KING'S CIRCLE, MUMBAI - 400 019 (MHRS)., PH :400019-9833876440.

636.## LAXMI AUTO WORKS (2542), PLOT NO.1041, SAYANI ROAD, PRABHADEVI, MUMBAI-400 025, PH :400025-9820303646.

637.\*\* ORIX AUTO INFRASTRUCTURE SERVICES LTD (1971), 94 MAROL INDUSTRIAL ESTATE, ANDHERI KURLA ROAD, ANDHERI (EAST), MUMBAI-400 059, PH :400059-9820409079.

638.\*\* POWAI AUTO WORKS (1660), OPP. PANCH KUTIR BUS STOP, 19 ADI SANKARACHARYA MARG, POWAI, MUMBAI-400 076, PH :400076-9820635317.

639.\*\* POWAI AUTO WORKS (4966), GALI NO 14/15/16, BUILDING NO1, C WING, KAILASH INDUSTRIAL COMPLX, PARKSITE VIDHROLI (W), PH :400079-9820635317.

640.## PRINCE SERVICE CENTRE LLP (8931), 34 GAMDEVI ROAD, SANGHANI ESTATE, GHATKOPAR (WEST), MUMBAI-400 086, PH :400086-9869034445.

641.\*\* RAVI AUTOMOBILE SERVICES (553), GHATKOPAR-MAHUL ROAD, TILAK NAGAR, CHAMBUR, MUMBAI-400 089, PH :400089-8657442190.

642.\*\* SHAH CAR CARE (5436), SADANWADI LAKE ROAD OFF LBS MARG, NEAR KRISHNA TALKIES, DISTRICT - MUMBAI , (MAHARASHTRA), PH :400078-9820068380.

643.\*\* SHAMAL MOTORS (1154), VAITY WADI, BHANDUP-SONAPUR ROAD, BHANDUP (WEST), MUMBAI-400 078, PH :400078-9773911111.

644.\* ST.FRANCIS AUTOMOBILES (5154), MOUNT POINSUR BORIVALI (WEST), MUMBAI - 400103, DISTRICT - MUMBAI, MAHARASHTRA, PH :400103-9892876396.

645.\* SUPER AUTO SERVICE PVT. LTD. (2430), DESAI WADI JAYWANT SAWANT ROAD, NEAR HAPPY HOME SOCIETY, DAHISAR (W), MUMBAI-400 068, PH :400068-9867253000.

646.## SURAJ SANGHI SERVICE STATION (438), DR. ANNIE BESANT ROAD, WORLI, MUMBAI-400 018, PH :400018-9821115492.

**MURBAD**

647.## JAYDEEP AUTOMOBILES (5676), MURBAD KALYAN HIGHWAY(NH-222),NEAR NAVDURGA HOTEL, AT-PO-TAL-MURBAD-421401, DISTRICT-THANE, MAHARASHTRA, PH :415621-9423370219.

**NAGPUR**

648.\* AMIT SERVICE STATION (4158), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMADNAGAR, MAHARASHTRA, PH :414111-0241-2778336.

649.\* BALAJI MOTORS (3078), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20, PH :440020-9960634068.

650.\*\* HASAN GARAGE (2021), MOHAN NAGAR, NAGPUR - 440 001 (MHRS)., , PH :440001-0712-2533805.

651.## M S SERVICES (5339), 14 HILL ROAD , GANDHI NAGAR - NAGPUR , DISTRICT - NAGPUR , MAHARASHTRA, PH :440010-9373422622.

652.## R. K. MOTORS (3023), 69 A V A LAYOUT, LAKADGANJ, NAGPUR-440 008, PH :440008-9422113086.

653.\* SAGAR AUTOMOBILES (2667), MARUTI AUTHORISED SERVICE STATION, PLOT NO.3 NEAR PETROL PUMP, WARDHA ROAD UJJWAL NAGAR, NAGPUR-440 025, PH :440025-9960695823.

654.\*\* SAGAR AUTOMOBILES (4971), WARDHA ROAD., CHINCHBHAWAN, NAGPUR – 441108, PH :441108-9422145365.

655.## SHREEJEE SERVICES (2027), CHANDAK KOTHI, SUBASH ROAD, NAGPUR-440 018, PH :440018-9766899321.

**NANDED**

656.## MARUTI CARES AND COLOURS (5778), LABH NAGAR,BACK SIDE OF SURABH HOTEL, NANDED-431605, DISTRICT-NANDED, MAHARASHTRA, PH :431605-9225751444.

**NANDURBAR**

657.\* MAULEE MOTORS (4736), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD, NANDURBAR-425412, MAHARASHTRA, PH :425412-9822377931.

**NASHIK**

658.## HITECH AUTO SERVICES (4451), SURVEY NO 89/2, PLOT 1 & 2, OPP MOTIWALA MEDICAL COLLEGE, GANGAPUR SHIWAR., NASHIK, PH :422007-9225142471.

659.## RACCA SERVICE (3720), RACCA ESTATE, OLD GANGAPUR NAKA, HANUMAN WADI LINK ROAD, PANCHVATI, NASHIK - 422003, PH :422003-9096846468.

660.## SAI AUTOMOBILES (3722), SAPAT COMPLEX, OPP. PRESS HOSPITAL, NASIK ROAD-422 101, PH :422101-9822027931.

**NAVI MUMBAI**

661.\* BOSS (265), AT/P.O. - TURBHE, SECTOR-22, VASHI, NAVI MUMBAI-400 705, PH :400705-9167766474.

662.## C G MOTORS (4138), PAPR-73, TTC INDUSTRIAL AREA, RABALE, OPP RABALE RAILWAY STATION, THANE- BELAPUR ROAD, MAHARASHTRA, PH :400701-9920205756.

663.\*\* CHETAN MOTORS (3143), PLOT NO.45/B SECTOR 19/A, OPP. GATE NO.2 DANA BAZAR, BEHIND SHAMIR VITHAL CO-OP BANK VASHI, NAVI MUMBAI-400 705, PH :400705-9892067288.

**NIGDI**

664.## SHALU AGENCY (2872), 516/27 PRADHIKARAN, NIGADI, PUNE-411 044, PH :411014-020-27656354,27652631.

**NIPHAD**

665.## SHRI SAI SERVICE STATION (4452), NIPHAD AURANGABAD ROAD, NIPHAD, NASIK, MAHARASHTRA, PH :422303-9823679999.

**PACHORA**

666.## POOJA MARUTI SERVICE CENTRE (5564), PLOT NO 75,PREM NAGAR ,KRISHNA PURI SHEVAR, PACHORA, DISTRICT - JALGAON , MAHARASHTRA, PH :424201-9890320803.

**PALGHAR**

667.## SIDDHI MOTORS (5553), THEMBHEDE ROAD,GANESH KUND , PALGHAR,DISTRICT -THANE, MAHARASHTRA, PH :401404-9890609107.

**PANVEL**

668.## GANGAL MOTORS (2934), PLOT NO.:125-127,SECTOR-1S,ROAD NO-5, BEHIND CIDCO GODOWN-NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA), PH :410206-9320226072.

669.\*\* IDEAL AUTOMOBILES (2279), IDEAL HOUSE,PLOT NO-83., PANVEL INDUSTRIAL CO OP ESTATE LTD., PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA), PH :410206-9969602650.

**PARBHANI**

670.## SAI SERVICING CENTRE (5252), P7/5 MIDC, PARBHANI-431 401, MAHARASHTRA, PH :431401-9404504111.

**PASHAN**

671.\* MARUTI CAR SANJIVANI (5278), SURVEY NO 5/2 SUTARWADI .SUSROAD.PASHAN, DISTRICT - PUNE, PUNE - 411021, MAHARASHTRA, PH :411021-9960733360.

**PATHARDI**

672.## SAGAR MOTORS (5979), OPP. TEHSIL KACHERI,NAGAR ROAD, TALUKA,PATHARDI-414102, DISTRICT-AHMEDNAGAR, MAHARASHTRA, PH :414102-9822197969.

**PEN**

673.## NAVNATH AUTO (5677), OPPOSITE RAMWADI,S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA, PH :402107-9834279228.

**PHALTAN**

674.## VORA AUTOMOTIVE (2436), SHINGNAPUR ROAD, KOLKI, PHALTAN-415523, PH :415523-7709436262.

**PIMPALGAON**

675.## ASHWAMEDHA AUTO (2435), "ASHWAMEDH", MUMBAI-AGRA HIGHWAY, PIMPLEGAON (B), DISTT. NASHIK, PH :422209-9766600064.

**PUNE**

676.## APPU AUTOMOBILE (5029), MARUTI AUTHORISED REPAIR STATION , #81.SR NO 164.TALAWAD ROAD , KANBAY ROAD,TRIVENI NAGAR , AHARASHTRA, PH :411062-9371017595.

677.\* APPU SERVICE STATION (4927), BG/SEI 11/10, NEAR TELEPHONE EXCHANGE, MIDC, BHOSARI, PUNE-411026 (MAHARASHTRA), PH :411026-020-27123838.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

# Maruti Authorized Service Station (AS ON 30.05.2023 )

678.\* ATHARVA CAR SERVICES (5161), 5, BHUSARI COLONY, PAUD ROAD, KOTHRUD,PUNE-411038 , MAHARASHTRA, PH :411038-9665024803.

679.\* MANAS AUTOMOTIVE (5443), SURVEY NO 2/4 PARRANKUTI.LANE NO.1., KARVE NAGAR - PUNE, DISTRICT - PUNE, MAHARASHTRA, PH :411052-9822043007.

680.\* MARUTI CARE POINT (3337), S. NO 273/5,BANER ROAD,OPP. VARSHA PARK, BANER,PUNE-411045, MAHARASHTRA, PH :411045-7290016518.

681.\*\* SAINATH AUTOMOBILES INDUSTRIES (1569), SURVEY NO.36 PLOT NO.1, VADGAON KHURD SINHAGAD ROAD, NEAR GREEN FIELD HOTEL, PUNE-411 041, PH :411041-9822214282.

682.\* SANTOOR CAR CARE (2053), ASHOK PLAZA, 32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE-411 014, PH :411014-020-26632000 ,9579415112.

**RAHURI**

683.\* ANAND MOTORS (4152), IN FRONT OF ASHWINI HOTEL, NAGAR MANMA ROAD, A/P RAHURI DIST- AHMADNAGAR, MAHARASHTRA, PH :413705-7350008501.

**RAVER**

684.## RUCHI MOTORS (2631), MARUTI AUTHORISED SERVICE STATION, RAVER-425 508, DISTT. JALGAON, (MAHARASHTRA), PH :425508-8805373406.

**ROHA**

685.\* AMIT MOTORS (4972), NANA SHANKAR SHETH ROAD , NEAR GOVT REST HOUSE, DISTRICT - RAIGAD , ROHA - 402109, MAHARASHTRA, PH :402109-9028376141.

**SAKURI**

686.## SHREE SAI SERVICE CENTRE (5344), NAGAR-MANMAD ROAD GODAVARI, HOTEL JEWEL ,PO-SAKURI ,TAL-RAHATA, DISTRICT -AHMEDNAGAR , MAHARASHTRA, PH :423107-9970741777.

**SANGAMNER**

687.\* SAI MOTORS (2840), NEAR GULEWADI PHATA, PUNE NASIK ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS.), PH :422608-9800027513.

**SANGLI**

688.\*\* ASHOK AUTOMOBILES (3723), 595/B, M.G.ROAD, SANGLI-416 416, PH :416416-0233-2221001.

689.\* AWATI MOTORS (4772), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHARASTRA, PH :416415-9422407284.

690.## BALAJI AUTO SERVICE (1564), PLOT NO.43,GOLDEN PARK , BYPASS ROAD,SANGLI-416416 , DISTRICT-SANGLI , MAHARASHTRA, PH :416416-9822106126.

**SATANA**

691.## PATHAK MOTORS (5037), YASHWANT NAGAR,TAHARABAD ROAD., SATANA - 411014, DISTRICT - NASIK, (MAHARASTRA), PH :411014-9890216257.

**SATARA**

692.## SIDDHI AUTOMOBILES (5464), 294/A.DEGAON PATA - SATARA, RAHAMTPUR ROAD.MIDC SATARA, DISTRICT - SATARA , (MAHARASTRA), PH :415002-9422403178.

**SAWANTWADI**

693.\* VENKATESHA AUTO CARE (1659), PLOT NO.21 MUMBAI GOA HIGHWAY, KOLGAON-BHOM, SAWANTWADI-416 510, DIST. SINDHUGARH, MAHARASHTRA, PH :416510-9423304639.

**SHAHADA**

694.## MATOSHREE AUTOMOBILES (2870), NO.558 SHAHADA DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA), PH :425409-9421726230.

**SHIRDI**

695.## SHREE GANESH AUTO CARE (4268), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107, PH :423107-02423-242652.

**SHRIRAMPUR**

696.\* G.K. MOTORS (2871), K.V. ROAD, SHRIRAMPUR, DISTT. AHMEDNAGAR, PIN-413 709., PH :413709-9822094098.

**SOLAPUR**

697.\*\* BALAJI MOTORS (1930), 8536 B/1 MURARJI PETH, OPP. OLD PUNE NAKA OFFICE, SOLAPUR-413 002, PH :413008-9765111110.

**THANE**

698.\* PATRICIA AUTOMOBILES (529), ALIGHT CHAMBER, ADJACENT GOLDEN DYES, OLD AGRA ROAD, HARDAS NAGAR, GOKUL NAGAR, THANE, WEST - 400601, PH :400601-9987175866.

699.\* SEAN MOTORS (5377), SATPALA NAKA, ARNALA-VASAI ROAD, NEXT TO ZEAL RESTAURANT, VIRAR (W) PIN 401301, PH :401301-9324003123.

700.\*\* STERLING MOTOR GARAGE (555), OPP. RAVI STEEL INDUSTRIES, 2ND POKHRAN ROAD, THANE-400 601, PH :400601-9820252926.

701.\*\* THANAWALA MOTOR AGENCY (3724), DHIRAJ BAUG, L.B.S. MARG, NAUPAD, NEAR HARINIWAS CIRCLE, THANE-400 602, PH :400602-9820106904.

702.\* TOP GEAR AUTOMOBILES (4840), SAI NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W), PH :400615-9833795855.

**ULHASNAGAR**

703.\* CHIMAN AUTOMOBILES (3845), NEAR KAJAL PETROL PUMP, BALANI COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR 421003, PH :421003-9850223422.

704.\* MODERN CAR CARE (3260), 171/2.RRV INDUSTRIAL AREA, BEHIND SAI BABA MANDIR,SHANTINAGAR, ULHASNAGAR-421 003, MAHARASHTRA, PH :421003-9819774588.

**URAN**

705.## SAI AUTOMOBILES (5665), STATE HIGHWAY NO.56,NEAR JASAI NAKA, JASAI VILLAGE,URAN-410206, DISTRICT - RAIGAD, MAHARASHTRA, PH :410206-9821806806.

**VADA**

706.## SAI MOTORS & SERVICE CENTRE (5675), VARALA, OPP. LAKE CITY, MANOR ROAD, WADA, , PH :421303-9226338578.

**VITA**

707.## SONA AUTOMOTIVE (5671), MAYANI ROAD, NEAR PRUTHVIRAJ HOTEL, OPP. LAKADE PETROL PUMP, DISTT VITA- 415311, PH :415311-9890223938.

**WAI**

708.## ADITYA AUTO SERVICE (4271), WAI SATARA ROAD, WAI-412803, SATARA DIST., PH :412803-9423862119.

**WANI**

709.## SHEIKH AUTOMOBILES (JPH :-).

**WARDHA**

710.## BHARAT MOTOR (1631), NAGPUR ROAD, NALWADI, WARDHA, MAHARASHTRA, PH :442001-9881588388.

**WARORA**

711.## ROHIT AUTOMOTIVE (5873), NAGPUR,CHANDRAPUR ROAD,VINAYAK-, LAYOUT,TILAK WARD,WARORA-442907, DISTRICT-CHANDRAPUR, MAHARASHTRA, PH :442907-9172060099.

**YAVATMAL**

712.## M.S. MOTORS (460), AMRAVATI ROAD HIGHWAY, LOHARA, YAVATMAL-445 001, PH :445001-982222579.

713.## RAMESH MOTORS (2024), GARDEN ROAD, YAVATMAL, MAHARASHTRA-445 001, PH :445001-9422865222.

**YEOLA**

714.## BIJASANI AUTOMOTIVE (3041), NAGAR-MANMAD ROAD, YEOLA, DIST. NASIK (MAHARASHTRA), PH :423401-9423185025.

**MANIPUR**

**IMPHAL**

715.## BORDIN MARUTI GARAGE (4879), SANGAIPROU AIRPORT ROAD., IMPHAL WEST, MANIPUR - 795001, , PH :795001-9436023659/7005264886.

**SENAPATI**

716.## KOMUO MARUTI WORKS (4644), NH-2, MAO TAPHOU, SENAPATI HQ, SENAPATI DISTRICT, MANIPUR - 795106, PH :795106-8794109474.

**MEGHALAYA**

**TURA**

717.## MULTI MOBILE PRECISION (3222), AGLANGGRE, PO ARAIMILE, NEW TURA, MEGHALAYA, 794101, PH :794101-8974057627.

**MIZORAM**

**CHAMPAI**

718.## IRDIV- TC AUTO WORKS (5744), SVENTH DAY TLANG,ZOTLANG ROAD, NEW CHAMPHAI-CHAMPHAI, DISTRICT-CHAMPHAI, MIZORAM, PH :796321-9862405715.

**LUNGLEI**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

719.### LAWMA ENGINEERING WORKS (3125), , A O C SQUARE, LUNGLEI, MIZORAM-796 701, PH :796701-9436147141.

**NAGALAND**

**DIMAPUR**

720.\*\* ERJO MOTORS (4871), EAST BLOCK, BURMA CAMP, NEAR BIBLE HOUSE, DIMAPUR, NAGALAND - 797112., PH :797112-9436004350.

**ODISHA**

**ANGUL**

721.### ZEET AUTOMOBILES (1573), NALCO NAGAR, KANDASAR, ANGUL - 759 145, ORISSA, PH :759145-9437021285.

**BALANGIR**

722.### ASHIRWAD AUTOMOBILE WORKS (3177), DAMJI GARAGE, THIKADARPARA, . , BALANGIR-767 001, PH :767001-9437223452.

**BALASORE**

723.### AUTO CARE (432), AT-BAMPADA, PO-CHHANPUR, CITY - BALESHWAR (BALASORE), ODISHA - 756056, PH :756056-9437051944.

724.\* TEKNO INDIA (3666), D-2/9 INDUSTRIAL AREA, O.T. ROAD, BALASORE-756 003, (ORISSA), PH :756001-9861034990.

**BARBIL**

725.### INDU MOTORS (3241), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA), PH :758035-9437718008.

**BHUBANESWAR**

726.### INDO JAPAN SERVICE (4936), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PO: PATRAPADA, BHUBANESHWAR-752019, ORISSA, PH :752019-9861095444.

**CUTTACK**

727.\* AUTO MATES (426), 3B/1325, SECTOR-11, CDA, CUTTACK, PH :753014-9437020646.

728.\* DURGA SERVICE CENTRE (427), NEAR PALAMANDAP, BADAMBADI, PO - ARUNODAY MARKET, DISTT - CUTTACK, PIN-753012, PH :753012-9692935762.

**DHENKANAL**

729.### ANAND AUTOMOBILES (5449), ANAND NAGAR.IN FRONT OF TARINI MANDIR , DISTRICT - DHENKANAL , PIN - 759001` , (ORISSA), PH :759001-9437414972.

**JHARSUGUDA**

730.### AUTO MECHANIKA (2638), S.H.-10 BEHERAMAL, JHARSUGUDA-768 203, ORISSA, PH :768203-9040380001.

**PURI**

731.### URMILA MOTORS (5040), HERA GOHIRI SAHI CHOWK .PURI -1, DISTRICT - PURI, (ORISSA), PH :752001-7008651960.

**SAMBALPUR**

732.### ANITA AUTO CARE (4834), SALIA BAGICHA, LIONS CLUB ROAD, KUMBHARPARA, SAMBALPUR-768001 (ORISSA), PH :768001-9861248403.

**SEMILIGUDA**

733.### ASHUTOSH MOTORS (5035), MAIN ROAD. NH-43, NALCO CHOWK, SEMILIGUDA, DISTRICT-KORAPUT, (ORISSA), PH :764036-9437405417.

**PONDICHERRY**

**KARAIKAL**

734.### MARUTI TECH (2669), NO.1,AKKARAIVATTAM,NAGAORE MAIN ROAD , OPP TO ONGC,KARAIKAL-609604, DISTRICT-KARAIKAL, PONDICHERRY, PH :609604-7373788705.

**PUDUCHERRY**

735.\* A.P.P. MARUTI MOTORS (2670), PLOT NO.6 GUNDU SALAI ROAD, NATESAN NAGAR, NEAR 100 FEET ROAD, PONDICHERRY-605 005, PH :605009-7094449900.

736.### MARUTI MISSION (5067), 60 RAGAVENDIRA NAGAR,KAMARAJ SALAI, THATTANCHAVADY PONDICHERRY, TINDIVANAM ROAD PONDICHERRY-9, PONDICHERRY, PH :605009-9786589000.

737.\*\* S D K MOTORS (471), PLOT NO.12, 100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004, PH :605004-9843045689.

**PUNJAB**

**AHMEDGARH**

738.### GAHIR AUTOMOBILES (2877), LUDHIANA MALER KOTLA ROAD, VILL. GOPALPUR CITY, AHMEDGARH, (PUNJAB), PH :148021-9417553627.

**AJNALI**

739.### VISHWAKARMA MOTORS (5666), NEAR VIMAL DHARAMKANTA - AJNALI, DISTRICT - FATEHGARH SAHIB, PUNJAB, PH :147301-9814528084.

**AMLOH**

740.### BINDRA MOTORS (5844), NEAR DESH BHAGAT COLLEGE SONTI, AMLOH, DISTRICT-FATEH GARH SAHIB, PUNJAB, PH :147203-98148 82000.

**AMRITSAR**

741.\*\* HANSON AUTOMOBILES (1722), MAQBOOL PURA, G.T. ROAD, AMRITSAR, PH :143001-9815167669.

742.\*\* JACKSON LUBRICANTS (364), 16 COURT ROAD, NEAR RAVI GAS AGENCY, AMRITSAR-143 001, PH :143001-9814299944.

743.\*\* KAPOORS KAR KARE (737), I/S MAHA LAKSHMI, CALICO PRINTING MILLS, OLD JAIL ROAD, AMRITSAR(PUNJAB),, PH :143001-9814213113.

744.\* SAGGU SERVICE STATION (733), HIDE MARKET, AMRITSAR-143 001 (PUNJAB),, , PH :143001-8968497779.

**BANUR**

745.### AMRIK SERVICE STATION (2433), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), PH :140601-9815591325.

**BARNALA**

746.### GAURAV MOTORS (4962), DHANAULA ROAD, BARNALA - 148101, DISTRICT SANGRUR, PUNJAB, PH :148101-9317512916.

747.\* PUNJAB MOTOR GARAGE (6222), DHANAULA ROAD, BARNALA (PUNJAB), , PH :148101-9317512360.

**BHADSON**

748.### FRIENDS MOTORS (2233), NABHA ROAD, BHADSON-147 202, DISTT. PATIALA, (PUNJAB), PH :147202-9815700778.

**BHATINDA**

749.### KRISHNA AUTOS (4571), 40FT ROAD NAMDEV MARG NEAR INDRANI HOSPITAL .BATHINDA (PUNJAB) 151001, PH :151001-9888671810.

750.\*\* MODERN MOTORS (6234), OPP. T.V. TOWER, MANSA ROAD, BHATINDA, PH :151001-9814177075.

751.### SUPER AUTOMOBILES (6232), TINKONI, GONIANA ROAD, BHATINDA, PH :151001-9814036163.

**BUDHLADHA**

752.### JINDAL AUTOMOBILES (2147), NEAR P.S.E.B., BHIKHI ROAD, BUDHLADA-151 502, DISTT. MANSA, PH :151502-9815516964.

**DERABASSI**

753.### BINDAL AUTOMOBILES (1248), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, PH :140507-9914449711.

**DHURI**

754.### SHIV MOTORS (1962), NEAR SDM OFFICE, SANGRUR ROAD, DHURI-148 024, PH :148024-9872851068.

**DINANAGAR**

755.### D.S. MARUTI SERVICE STATION (3333), G.T. ROAD, DINA NAGAR, DIST. GURDASPUR-143 531, (PUNJAB), PH :143531-9814873101.

**DIRBA**

756.### PENTAGON MECHANICAL WORKS (2564), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB), PH :148035-9876543400.

**DORAHA**

757.\* FATEH MOTORS (2048), G.T. ROAD, DORAHA, (LUDHIANA), PH :141421-9814031784.

**FAZILKA**

758.### BAHL MOTORS (6229), ABOHAR ROAD, FAZILKA-152 123, , PH :152123-9815700550.

**FIROZPUR**

759.### SUTLEJ AUTOMOBILES (3568), G.T. ROAD, FEROZEPUR CANTT., PIN-152 001 (PUNJAB), PH :152001-9417009985.

**GIDDARBAHA**

760.\* JIWAN CAR CENTRE (3442), BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA-152 101, DIST. MUKETSAR (PUNJAB), PH :152101-9779600086.

**GOINDWAL SAHIB**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

# Maruti Authorized Service Station (AS ON 30.05.2023 )

761.## DASS MOTORS (8941), KAPURTHALA CHOWK, GOINDWAL SAHIB, DISTT. AMRITSAR-143 429, (PUNJAB), PH :143429-9914699121.

**GURDASPUR**

762.\* VIJAY SERVICE STATION (749), NEAR RAILWAY CROSSING, PATHANKOT ROAD, GURDASPUR, (PUNJAB), PH :143521-9814437637.

**HOSHIARPUR**

763.## JOGINDER MOTORS (2268), BYE PASS TANDA ROAD, HOSHIARPUR-146 001, , PH :146001-9803227000.

**JAGRAON**

764.## DHALIWAL AUTOMOBILES (2035), NEAR AJANTA PETROL PUMP, G.T. ROAD, JAGRAON DISTT. LUDHIANA, (PUNJAB), PH :142026-9814318600.

**JALANDHAR**

765.## CITY POINT SERVICE STATION (4528), AVTAR NAGAR ROAD, BEHIND T.V. CENTRE, OPP HOTEL REGENT PARK, JALANDHAR, PH :144003-9779613576.

766.\*\* KAAR KARES (725), G.T.ROAD, JALANDHAR, 144 001 (PUNJAB),, PH :144001-9569295585.

767.\* KAPOOR MOTOR GARAGE (1649), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY, PH :144623-9815040411.

768.\* PUNJAB MOTOR GARAGE (1575), HMV CHOWK, NEW GRAIN MARKET ROAD, JALANDHAR CITY-144 008, PH :144008-9814675433.

**KAPURTHALA**

769.## T.S. WALIA MOTORS (267), MANSOORWAL, JALLANDHAR ROAD, KAPURTHALA, PH :144601-9357211525.

**KURALI**

770.## VISHWAKARMA MOTORS (3335), CHANDIGARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNJAB -140103, PH :140103-9814273873.

**LALRU**

771.## VIKAS MOTORS (2777), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB, PH :140501-9888191444.

**LUDHIANA**

772.\*\* PUNJAB AUTO CENTRE (6221), OPP TELEPHONE EXCHANGE, BHARAT NAGAR CHOWK, LUDHIANA-141 001, PH :141001-9855117003.

773.\* REEHAL AUTOMOBILE SERVICES (1176), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA-141 010, PH :141015-9357110000.

774.## SATNAM MOTOR WORKSHOP (4533), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA, PH :141003-9855228591.

775.## STAR AUTOS (4650), JALANDHAR BY PASS, G.T. ROAD, LUDHIANA, PH :141012-9216844220.

776.## VISHAL AUTOMOBILES (1262), G.T. ROAD, DHOLEWAL, LUDHIANA-141 003, PH :141003-9815206060.

**MANDI GOBINDGARH**

777.## NATIONAL MOTORS (1070), G.T. ROAD, NEAR P & S BANK, MANDI GOBINDGARH-147 301, PH :147301-9317862000.

**MANSA (PUNJAB)**

778.## LOVEKESH ENTERPRISES (2162), NEAR N.M. COLLEGE, MANSA-151 505, (PUNJAB), PH :151505-9216524143.

**MOGA**

779.\* GURU NANAK MOTOR REP.WORK (732), G.T.ROAD, MOGA-142 001 (PUNJAB), , PH :142001-9914121387.

**MOHALI**

780.\*\* BENZ AUTO SCAN (5734), E-153,PHASE 7, INDUSTRIAL AREA -MOHALI, DISTRICT-MOHALI, PUNJAB, PH :160055-9876101806.

781.\*\* MOHALI MOTORS (756), C-55 INDUSTRIAL AREA, PHASE-VI, S.A.S. NAGAR, MOHALI-160 055, PH :160055-9781815959.

782.\*\* SETHI MOTORS (4742), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PUNJAB, PH :160055-9814307002.

783.## UNIPONT (5043), PLOT NO.593., INDUSTRIAL AREA PHASE-IX,MOHALI., DISTRICT - MOHALI, (PUNJAB), PH :160062-7814402838.

**MORINDA**

784.## SONY MOTOR PALACE (1077), SIRHIND ROAD, MORINDA-140 101, , PH :140101-9815612477.

**MUKERIAN**

785.\* MARSHAL SALES CORPORATION (5251), NEAR RADHA SOAMI SATSANG, PATHANKOT ROAD, MUKERIAN - 144211, DISTRICT HOSHIARPUR,PUNJAB, PH :144211-8283835926.

786.## NEW MODERN AUTOMOBILES (4437), G.T. ROAD, MUKERIAN, PUNJAB, PH :144211-9463292013.

**MUKTSAR**

787.## MALWA MARUTI CENTRE (4764), OPP GOVT COLLEGE KOTKAPURA ROAD, MUKTSAR, PUNJAB, PH :152026-9814622081.

**NAKODAR**

788.## MEHTA MOTORS (3531), KHADDAR BHANDAR ROAD, NAKODAR-144040, PH :144040-9815600082.

**PATIALA**

789.\*\* PARAS MOTORS (4778), PLOT NO. 25-A, NEAR HOTEL FLYOVER FACTORY AREA, PATIALA-147001, PUNJAB, PH :147001-9814089861.

790.## RAJINDRA MOTORS (8924), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB, PH :147003-9316200335.

**PATTI**

791.## ANU AUTOMOBILE (2747), AMRITSAR ROAD, NEAR RADHA SWAMI SATSANG, PATTI DISTT. AMRITSAR, (PUNJAB), PH :143416-8575210003.

**PHAGWARA**

792.## SWAMI MOTORS (3774), (PAMMI W/SHOP), OPP. B.N. DUGGAL PETROL PUMP, G.T. ROAD, PHAGWARA DIST. KAPURTHALA, PH :144401-9815107989.

**QADIAN**

793.## HI-TECH AUTOMOBILES (4945), VILL NATHPUR BATALA ROAD, QADIAN-143516, DISTRICT-GURDASPUR, PUNJAB, PH :143516-9877510294.

**RAIKOT**

794.## RANA SUPREME MOTOR GARAGE (3732), NEAR GURUDWARA TAHLJANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB), PH :141109-9814265791.

**RAJPURA**

795.## NOOR MOTORS (3045), PATIALA ROAD, RAJPURA-140 401, (PUNJAB), PH :140401-9814507867.

**RAMPURAPHUL**

796.## BALAJI AUTOMOBILES (4443), BARNALA ROAD, RAMPURA PHUL-151103, DISTT BHATINDA, PUNJAB, PH :151103-9417172671.

797.## VIRDI MOTOR GARAGE (3046), BARNALA ROAD, RAMPURAPHUL-151 103, DISTT. BATHINDA, (PUNJAB), PH :151103-9872874175.

**SAMANA**

798.\* CITY MOTORS (1867), P.B.NO.11, MAIN ROAD, SAMANA-147 101, DISTT. PATIALA (PUNJAB), PH :147101-9814221981.

**SANGRUR**

799.\*\* RAKESH MARUTI SERVICE (6325), JIND - DELHI ROAD, NEAR E.S.I. DISPENSARY, SANGRUR-148 001, PH :148001-9815103944.

800.## SANGRUR MARUTI CENTRE (1632), PATIALA ROAD, OPP. MILITARY CAMPUS, SANGRUR-148 001, (PUNJAB), PH :148001-9417510111.

**SIRHIND**

801.## BADRI DHAM CAR SERVICE (1062), G.T. ROAD, SIRHIND-140 406, , PH :140406-81467 11946.

802.## MALHOTRA MOTORS (4657), OPP. INCOME TAX OFFICE, SIRHIND, DISTT FATEHGARH SAHIB, PUNJAB, PH :140406-9815844008.

**SULTANPUR LODHI**

803.## HANDA MOTORS (2776), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB), PH :144626-9815623392.

**SUNAM**

804.## SUNAM AUTOMOBILES (3924), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SANGRUR, PH :148028-9417076315.

**TANDA**

805.## MALWA AUTO CARE CENTRE (2073), G.T. ROAD BY-PASS, TANDA, DISTT. HOSHIARPUR, (PUNJAB), PH :144204-9814392103.

**ZIRA**

806.## NEW AUTOMOBILES (5477), NEAR BYE PASS, FEROZPUR ROAD, ZIRA, TEHSIL ZIRA, DIST. FEROZPUR, PUNJAB - 142047., PH :142047-9463240231.

**RAJASTHAN**

**ABU ROAD**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

807.##	UNIQUE MOTORS (4923), MOUNT ROAD, AKRABHATTA, ABU ROAD-307 510, (RAJASTHAN), PH :307510-9929177781.	<b>BHINIMAL</b>	817.##	GURJAR MOTORS (5567), RAMSIN ROAD,OPP PRADEEP PETROL PUMP, BHINMAL, DISTRICT - JALOR, RAJASTHAN, PH :343029-9414374962.	827.##	SANTOSH AUTOMOBILES (5450), SANTOSH ATUOMOBILES, KUCHAMAN ROAD , DIDWANA , DISTRICT - NAGAUUR , (RAJASTHAN), PH :341303-9828833363.	838.*	M. R. MOTORS (8933), PLOT NO. 120-121 & 125-126, VANE VIHAR, 200FT BYE PASS, JHOTWARA, JAIPUR (RAJASTHAN), PH :302012-9314881528/0141-2340196.
<b>AJMER</b>					<b>DUDU</b>		839.*	RIGHTWAYS CO. (1131), KISHANPOLE BAZAR, JAIPUR, , PH :302002-0141-2372436/0141-4022436/9799220 011.
808.##	ASHOK AUTOMOBILES (1121), BYEPASS ROAD, PARVATPURA, IND.AREA, AJMER (RAJASTHAN), PH :305002-0145-2695233/0145-2695076/9829087 166.	<b>BHIWADI</b>	818.##	WHEEL-O-CITY (4246), E-7D (A) PHASE-1, NEAR RIICO CHOWK, BHIWADI, RAJASTHAN, PH :301019-01493-225555/01493-290962/9887099 874.	828.##	NEETA AUTOMOBILE (4855), C/O NEW JAIN GUEST HOUSE, NH-8, JAIPUR AJMER ROAD, DUDU, RAJASTHAN, PH :303008-9667031098.	840.**	SAISHA MOTORS (1764), MAIN SHIPRA PATH, OPP. SECTOR 93, AGARWAL FARM, MANSAROVAR, JAIPUR-302 020, PH :302020-0141-2399196/9414454820.
<b>ALWAR</b>					<b>JAIPUR</b>		841.*	SERVICE CENTRE (1139), OPP. TOURIST HOTEL, M.I. ROAD, JAIPUR-1, PH :302001-9351551181.
809.##	POOJA MOTORS (5439), POOJA MOTORS,NEAR AMARNATH PETROL PUMP,DELHI ROAD ,MUNGSKA - ALWAR , DISTRICT - ALWAR , RAJASTHAN, PH :301001-9414640279/0144-2700921/0144-2371 382.	<b>BIKANER</b>	819.##	GENERAL AUTOMOBILES (1123), RANI BAZAR, RAIWAY CROSSING, BIKANER (RAJASTHAN), PH :334001-0151-2200338/0151-2549072/9413389 352.	830.*	AMGI AUTOMOBILES (1938), AIRPORT CIRCLE, KOTA ROAD, JAIPUR-302 011, PH :302011-9828012009.	842.*	SHARP MOTORS (2032), J-3 HIMMAT NAGAR, MAIN TONK ROAD, GOPAL PURA CIRCLE, JAIPUR-302 004, PH :302004-0141-2705493/0141-2211386/9314877 457.
810.##	VERTEX AUTOMOBILES PVT. LTD. (1944), CHANDUKA BHAWAN, SWARG ROAD, ALWAR-301 001, PH :301001-0144-2335733/0144-2342117/9828233 299.		820.##	VISHI MOTORS (5559), PLOT NO 55(A) ,I.A. RANI BAZAR-BIKANER, DISTRICT - BIKANER, RAJASTHAN, PH :334001-98290-27128.	831.##	AUTONITY JAIPUR (4852), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, RAJASTHAN, PH :302019-9784377503.	843.##	SUPREME MOTORS (1130), A-25 ASSAM MANSION, TRANSPORT NAGAR, JAIPUR-302 003, PH :302003-7737279332.
<b>BARMER</b>		<b>BUNDI</b>	821.##	SHRI JI MOTORS (2174), OPP. KUMBHA STADIUM, KHOJA GATE, BUNDI, (RAJASTHAN), PH :323001-9990270676.	832.**	AUTONITY VKIA (8927), PLOT NO.6, GIRDHAR COLONY, SIKAR ROAD, JAIPUR-302 013, PH :302013-0141-2232790/0141-3293308/9314505 031.	844.##	TOSHNIWAL AUTOMOBILES (3475), 131 SHRI GOPAL NGAR, GOPALPURA BYEPASS, JAIPUR, (RAJASTHAN), PH :302015-9887553836.
811.*	VEW SERVICE (1238), S-181 & 182, RIICO, BARMER-344 001, (RAJASTHAN), PH :344001-9460158584/02982-223329.	<b>CHOMU</b>			833.##	J.K. AUTOMOBILES (2058), 38 SUSHILPURA, AJMER ROAD, JAIPUR-302 007, PH :302007-7976448538/0141-2810500.	<b>JAISALMER</b>	
<b>BASSI</b>			822.##	SHREE LAXMI MOTORS (3072), MORIJA ROAD, CHOMU, JAIPUR-303702, (RAJASTHAN), PH :303702-9828160281.	834.**	JAI SHRI RAM AUTO SERVICE CENTRE (1140), OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR, RAJASTHAN, PH :302019-0141-2221241/9829853330/958746444 1.	845.##	R.R. AUTOMOBILES (1473), OPP. GEETA ASHRAM, JAISALMER-345 001, (RAJASTHAN), PH :345001-8619638276.
812.##	VARDHANI MOTORS (5358), NEAR NALAYA BASSI, DISTRICT - JAIPUR , RAJASTHAN, PH :303301-9950107203.	<b>CHURU</b>	823.*	ABS MOTORS (2978), JAIPUR ROAD, CHURU-331 001, (RAJASTHAN), PH :331001-01562-252333/01562-257333/9667672 324.	835.##	KATARIA MOTORS (2577), 9-A NEMINAGAR VISTAR ,AMRAPALI MARG, VAISHALI NAGAR, JAIPUR -302021, PH :302021-9672444000/9414468024/0141-235213 6.	<b>JHUNJHUNU</b>	
<b>BEHROR</b>					836.##	KRISHNA AUTOMOBILES (5363), B-27 SUNDAR NAGAR ,MANSAROVAR , JAIPUR, DISTRICT - JAIPUR, RAJASTHAN, PH :302020-9829968075.	846.##	VISHWAKARMA AUTOMOBILES (3071), HPC DEALER, RANI SATHI ROAD, JHUNJHUNU-333 001, (RAJASTHAN), PH :333001-9461058839.
813.##	K.L. INTERNATIONAL AUTOMOBILES (1763), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARDOPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN), PH :301701-01492-221396/9414014603.	<b>DAUSA</b>	824.##	BALAJI MOTORS (4564), NEW MANDI ROAD, NEAR TRANSFORMER, DAUSA-303303, PH :303303-9414273443/9828169601.	837.##	LAXMI MOTORS (2576), OPP METRO PILLAR NO 34, GANGA JAMUNA CROSSING, NIRMAN NAGAR, JAIPUR, RAJASTHAN - 302019, PH :302019-9351551181.	<b>JHUNJHUNUN</b>	
<b>BHARATPUR</b>		<b>DHAULPUR</b>	825.**	NARAYAN MOTORS (3345), G.T. ROAD, DHOLPUR, (RAJASTHAN), PH :328001-05642240011/ 9414027335.			847.##	DADHIMATI MOTORS (1648), OPPOSITE RSEB OFFICE, BAGAR ROAD, JHUNJHUNU, (RAJASTHAN), PH :333001-9587007122.
814.**	CLASSIC MOTORS (2348), DEEG ROAD, KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN), PH :321001-9414026545.		826.##	NARSING SERVICE CENTRE (3074), NEAR JAGDISH TALKIES, BARI ROAD, DHOLPUR-328 001, (RAJASTHAN), PH :328001-9414026820.			<b>JODHPUR</b>	
<b>BHILWARA</b>		<b>DIDWANA</b>					848.##	DEORA MOTORS (5353), UPPER UNDER BRIDGE, PAOTA 'C' ROAD, JODHPUR, DISTRICT - JODHPUR, RAJASTHAN, PH :342006-9829026069.
815.##	NATIONAL SERVICE CENTER (4761), SANGANER COLONY, KOTA ROAD, BHILWARA-311001, RAJASTHAN, PH :311001-9829120285.							
816.*	QUICK SERVICES (3473), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311 001, PH :311001-01482-223456/9414144406.							

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs  
## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs  
# D-Category Mass : Free Service & Minor repairs

# Maruti Authorized Service Station (AS ON 30.05.2023 )

849.\* P.D. MOTORS (3340), NATIONAL HIGHWAY NO. 62, NEW PALI ROAD, NEAR JHALAMAND CIRLCE, JODHPUR, RAJASTHAN - 342005., PH :342005-0291-2724485/0291-2722495/9928974 601.

## KALWAR

850.## ROLANIYA MOTORS (5554), KALWAR MAIN TIRHIA, NEAR KHARBAS, NEAR PETROL PUMP,JHOTWARA ROAD, DISTRICT - KALWAR, RAJASTHAN, PH :303706-9983111634.

## KISHANGARH

851.## RADHA SWAMI AUTOMOBILES (440), NEAR AJMER ROAD - BUS STAND,

, KISHANGARH., DISTRICT AJMER, RAJASTHAN , PH :305801-9252059798.

## KOTA

852.## FRIENDS AUTOMOBILES (3679), KOTA BUNDI ROAD, NH 12, OPP. HOTEL MENAL RESIDENCY, KOTA, PH :323021-9829529479.

## KOTPUTLI

853.## VIKAS MARUTI SERVICE CENTRE (4970), NH-8, NEAR MEENA GAS AGENCY GODOWN, KOTPUTLI - 303108, RAJASTHAN, PH :303108-9929383045.

## KUCHAMAN

854.## DALUKA AUTO SALES (4565), NEARBY SHARDA PALACE HOTEL., KUCHAMAN BYE PASS., KUCHAMAN CITY, 341508, PH :341508-9414433240.

## MAKRANA

855.## GEHLOT MOTORS (454), OPPOSITE TO G.S.S. MANGLANA ROAD, MAKRANA, RAJASTHAN, PH :341505-9829024687.

## MERTA

856.## DELUX CAR SERVICE CENTRE (3856), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUUR, PH :341510-9414004543.

## NAGAUUR

857.\* CLASSIC AUTOMOBILES (1179), DIDWANA ROAD, (DELHI GATE), NAGAUUR-341 001, (RAJASTHAN), PH :341001-9672501234.

## NEWAI

858.## HEENA MOTORS (5568), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT - TONK, RAJASTHAN, PH :304021-9414228066.

## PILANI

859.## MARUTI CARE CENTRE (3073), RAJGARH ROAD, SHANTI NAGAR, PILANI DISTT. JHUNJHUNU, RAJASTHAN-333 031, PH :333031-01596-297021.

## PILANI (JHUNJHUNU DIST)

860.## MARUTI CARE CENTRE (3073)PH :-.

## PINDWARA

861.## RUNEJA MOTORS (5758), NH 14,OPP PATNAIK MIDWAYA , PINDWARA-307022, DISTRICT-SIROHI, RAJASTHAN, PH :307022-9610451492.

## RAJSAMAND

862.## VIPUL AUTOMOBILES (2170), NH -8, BHAGWANDA, ,BEHIND GOVT. PRIMARY SCHOOL, , RAJSAMAND, RAJASTHAN, PH :313333-02952-294420, 9929177781.

## RAWATBHATA

863.## APNA MARUTI GARAGE (5940), OPP. RAM TEKRI MANDIR,PRATAP MARKET, MAIN ROAD,RAWATBHATA-323305, DISTRICT-CHITTORGARH, RAJASTHAN, PH :323305-9413504447/9413356634.

## SIKAR

864.## RAJ AUTOMOBILES (5534), SUSHIL TRADING CO. STATION ROAD, SIKAR, DISTRICT - SIKAR, RAJASTHAN, PH :323001-01572-240721/01572-240722/9414039 783.

## SRI MADHOPUR

865.## BHARAT MOTORS (5757), WARD NO 4,BYE PASS ROAD , SRI MADHOPUR-332715, DISTRICT- TONK, (RAJASTHAN), PH :332715-9251377020.

## SRIGANGANAGAR

866.## ROHIT UDYOG (1132), 75 K-BLOCK, SRIGANGANAGAR, , PH :335001-9414093565/0154-2474823.

## SUJANGARH

867.## SHRI CHARBHUIJA MARUTI (4924), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN, PH :331507-9828118827.

## SURATGARH

868.## ROHIN SERVICE STATION (2646), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN), PH :335804-01509-222514/9413377914.

## TIJARA

869.## M D MOTORS (5875), ALWAR ROAD,NEAR BOLLYWOOD FARM, TIJARA-, DISTRICT-ALWAR, RAJASTHAN, PH :301411-9351607080.

## TONK

870.## SUMIT MARUTI (4566), G 1 – 103, RIICO INDUSTRIAL AREA, JAIPUR ROAD, TONK-304001, RAJASTHAN, PH :304001-9214494900.

## UDAIPUR (RAJASTHAN)

871.\*\* ALOK AUTOMOBILES PVT. LTD. (1977), B.N. COLLEGE PREMISES, OPP. DALAL PETROL PUMP, SEVASHRAM ROAD, UDAIPUR, PH :313001-9414166305.

872.\*\* SHREE SAI CAR CARE (2376), PUNJAWATI, PULLA, UDAIPUR-313 001, PH :313001-0294-3299901/9414166770.

## TAMIL NADU

## AMBUR

873.## MARUTHI MOTORS (2864), 10-C M.C. ROAD, AMBUR-635 802, (TAMIL NADU), PH :635802-04174-244880/9443637645.

## ARAVAKURICHI

874.## GOWRI MARUTI (5570), OPPOSITE IOCL PETROL PUMP,NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU, PH :639201-9994818043.

## ARCOT

875.## HARI AGENCIES (468), #27, ANNA SALAI, ARCOT , TAMIL NADU -632503, PH :632503-4172-234050/9442225070.

## ATTUR

876.## GANESAA MOTORS (4538), 1/1-D ARANGA BALA NAGAR, SALEM CUDDLORE MAIN ROAD, NARASINGARAM, ATTUR-636108 (TAMIL NADU), PH :636108-9443273866.

## AVINASHI

877.## K.P.K AUTOMOTIVE (5547), SF NO.460/2,TIRUPPUR MAIN ROAD, AVINASHILINGAMALAYAM,AVINASHI-641654, DISTRICT-COIMBATORE, TAMILNADU, PH :641654-9443301732.

## BHAVANI

878.## CAR ZONE AUTO SERVICE (5332), METTUR MAIN ROAD , NATARAJAPURAM BHAVANI, DISTRICT - ERODE, TAMILNADU, PH :638301-9842085670.

## CHENGLEPUT

879.## AMMA AUTOMOBILES (2941), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU-603 002, (T.N.), PH :603002-44-27421059/8012518012/7373038042 .

## CHENNAI

880.## ABIRAMI MOTORS (5131), 6.ANNA NEDUMATHAI , CHOOLABEDU, CHENNAI-600094, TAMILNADU, PH :600094-9840017558.

881.## AUTO TECH (3445), NO.6 G.S.T. ROAD, KAMATCHI COLONY, SANATORIM, CHENNAI-600 040, , PH :600047-9941019455.

882.\* EASVARI MOTORS PRIVATE LIMITED (1431), W-110 ANNA NAGAR, CHENNAI-600 040, , PH :600010-9840855655.

883.## KARS KARE SERVICE CENTRE (2579), 648 T.H. ROAD, TONDIARPET, CHENNAI-600 081, PH :600081-9841097259.

884.\*\* MARUTI NEEDS (2531), NO.2 PARK ROAD, PADI, CHENNAI-600 050, PH :600050-9940099500.

885.\*\* NSK MARUTI (4975), 2/247, AST COAST ROAD, NLANKARAI, CHNNAI-600041, TAMIL NADU, PH :600115-9841047232.

886.\* O.M.S. MOTORS (P) LTD. (2140), NO.27 VELACHERY MAIN ROAD, RAM NAGAR NORTH, MADIPAKKAM, CHENNAI-600 091 (TAMIL NADU), PH :600091-9444081390.

887.\* P.A. SERVICE STATION (2346), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR, NEAR 100 FEET ROAD, AGRAHARAM, KORATTUR, CHENNAI-600 076, PH :600076-9840378025.

888.\*\* SWAMY AUTOMOBILES (456), 23 CASA MAJOR ROAD, EGMORE, CHENNAI-600 008, PH :600008-9840891916.

889.\* VAISHALI MOTORS (4529), 4/577 RAJIV STREET, OLD MAHABALIPURAM ROAD, KOTTIVAKAM, CHENNAI-600041, PH :600041-9840138888.

890.\* WHEELS AUTO (469), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI-600 020, PH :600020-9840138888.

## CHIDAMBARAM

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023 )

891.## HI-TECH MARUTI (3231), NO.45,SITHIVEL NAGAR,SALIYANTHOPPU , BYE PASS ROAD,CHIDAMBARAM-608001 , DISTRICT-CUDDALORE , TAMILNADU, PH :608001-9585538671.

**COIMBATORE**

892.## GURU AUTO GARAGE (4965), 2/98, IRUGUR ROAD, NEAR BSNL OFFICE, CHINNAMPALAYAM, COMBATOR-600014, TAMIL NADU, PH :641062-9843256247.

893.## LOTUS AUTOMOBILES (4758), 1647-A AVINASHI ROAD, HOPE COLLEGE, PEELAMEDU, COIMBATORE-641004 (TAMILNADU), PH :641004-9842265133.

894.\* SOUTH INDIA MOTORS (MARUTI) (4752), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE-641014 (TAMIL NADU), PH :641014-9843027601.

**COONOOR**

895.## SHANTHI AUTO CARE (6054), FIGURE OF 8 ROAD, COONOOR-643101, NILGRIS, (TAMIL NADU), PH :643101-9443273888.

**CUDDALORE**

896.## SUNTAR AUTOS (2134), KTR BUILDINGS, CHIDAMBARAM ROAD, CUDDALORE-607 002, PH :607002-9842345690.

**CUMBUM**

897.## SRI BALAJI MOTOR WORKS (3139), 221-A 1/3 THENI ROAD, NEAR REGULATED MARKET, UTHAMAPURAM, CUMBUM-625 516, PH :625516-9994169309.

**DINDIGUL**

898.\* MAGNUM MOTORS (1241), MEENACHINAICKEN PATTY, NH-7 BYE- PASS ROAD, DINDIGUL-624 002, (TAMIL NADU), PH :624002-9842231340.

**ERODE**

899.\*\* SRI KRISHNA AUTOMOBILE ENTERPRISES (2320), 560 CAUVERY ROAD, ERODE - 638003, , PH :638003-9842721805.

900.\*\* SRI SAKTHI CARE (8937), 13, NGGO COLONY MAIN STREET, ERODE, TAMILNADU, 638009, PH :695011-9597726311.

**GADALUR**

901.## GREENWAY MARUTI SERVICE CENTER (5471), KALAMPUZZHA,D.O. NO 12/59-3, GUDALUR, DISTRICT - NILGIRLS, TAMILNADU, PH :643212-9443603815.

**GOBICHETTIPALAYAM**

902.## HI-TEC AUTO GARAGE (2426), 426,ASIRIYAR NAGAR, KULLAMPALAYAM POST , ERODE MAIN ROAD, GOBICHETTYPALAYAM-638 476, PH :638476-9842447725.

**HOSUR**

903.## AUTO SCAN (2070), 58-B BANGALORE ROAD, HOSUR-635 109, (TAMIL NADU), PH :635109-8122904091.

904.\*\* BALAJI MOTORS (5136), PLOT NO.11 MARUTHI NAGAR, NEAR T.V.S. AGENCIES(T V S SHOWROOM), KRISHNAGIRI MAIN ROAD- HOSUR, TAMILNADU, PH :635109-9842755402.

905.## SRI VINAYAKA MOTORS (3848), 5/2C/1 (OPP TAMIL NADU HOTEL), BYE PASS ROAD, HOSUR, PH :635109-9443245096.

**KALPAKKAM**

906.## MARUTI MOTORS (4253), SURVEY 309/5-A, PUDUPATTINAM VILLAGE PANCHAYAT, THIRUKALKUKUNDRAM TALUKA, KANCHEEPURAM, KALPAKKAM-603102, PH :603102-9443366535.

**KANCHEEPURAM**

907.\* SVS MARUTI SERVICE CENTRE (5466), NO1 MILITARY ROAD, SEVILIMEDU, OPP BRINDAVANAM NAGAR, KANCHIPURAM, TAMILNADU 631501, PH :631501-9994332290 / 9043032290.

**KANGAYAM**

908.## SRI ARUN CAR CARE (3949), COIMBATORE ROAD, NEAR IBP PETROL BUNK, KANGAYAM - 638701, PH :638701-9443329526.

**KARAIKUDI**

909.## SURABI MOTORS (2340), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630 001, PH :630106-9443351484.

**KARUMATHAMPATTY**

910.## SIVAN MOTORS (3832), OPP IBP NH47, NEAR KONGU VELLALAR SCHOOL, KARUMATHAMATTY, PH :641659-9842231819.

**KARUR**

911.\*\* SRI SAKTHI AUTO CARE (2532), 3/291 COVAI ROAD, VADIVEL NAGAR L.N.S. POST, KARUR-639 002, (TAMIL NADU), PH :638009-9842426585.

**KOVILPATTI**

912.## CLASSIC AUTOMOBILES (6037), 3/531 – B, TIRUNELVELI TO MADURAI BYPASS ROAD, NH-7, INAM MANIYACHI, KOVILPATTI, TAMIL NADU- 628502., PH :628502-9442552000.

**KRISHNAGIRI**

913.## THIRUTHANIGAI MOTORS (2427), SALEM-CHENNAI BYE PASS ROAD, KRISHNAGIRI-635 001, (TAMILNADU), PH :635001-9842129890.

**KUMBAKONAM**

914.## SRI SAKTHI MOTORS (4330), #7/228, PULIYAMPETTAI, MAYILADUTHURAI MAIN ROAD, KUMBAKONAM, TAMILNADU -612103, PH :612103-9443131513.

**MADURAI**

915.## FRIENDLY MOTORS (3141), 32 PALAM STATION ROAD, NEAR LIC BUS STOP, SELLUR, MADURAI-625 002, PH :625002-9842714047.

916.## SHALOM MOTORS (4629), THENI MAIN ROAD, ACHAMPATHU, NEAR BHARAT PETROLEUM, MADURAI-625019, PH :625019-8754033244.

**MADURANTHAKAM**

917.## MARUTHI MOTORS (6036), NO.33,G.S.T. ROAD,KARUNGUZH, MADURANTHAKAM-603303, DISTRICT-KANCHIPURAM, TAMILNADU, PH :603303-9443354073.

**MAYILADUTHURAI**

918.## R.M.S. MARUTI AUTO (2237), 53/54 MAHADHANA STREET, MAYILADUTHURAI-609 001, (TAMIL NADU), PH :609001-9842922685.

**NAGAPATTINAM**

919.\* MARUTI-TECH (1671), PUTHUR ROUNDANA E C R ROAD, NAGAPATTINAM, , PH :611001-9842653718.

**NAGERCOIL**

920.\* SRI GANAPATHI MOTORS (1629), NO.12 JAWAHAR STREET, R.V. PURAM, NAGERCOIL-629 001, PH :629001-9345322333.

**NAMAKKAL**

921.## ARUNA MOTORS (1461), MARUTI SERVICE CENTRE, OPP. N.S.R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001, PH :637001-9842775761.

**PALLADAM**

922.## CHENDU MOTORS (4333), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST, PH :641662-9842225058.

**PALLAVARAM**

923.\* VBK MOTORS (4463), OLD NO. 99, NEW NO. 91, G.S.T ROAD, ALVITONE ESTATE, (BEHIND LAKSHMI THEATRE), PALLAVARAM, CHENNAI-600043, PH :600043-9841425030.

**PARAMAKUDI**

924.## SIVA AUTOMOBILES (4542), NEAR SRIKUMARA SUBRAMANIYA SWAMY TEMPLE, OPP FIRE STATION, MADURAI RAMESWARAM ROAD, PARAMAKUDI-623707 RAMNAD DIST, PH :623707-9388405305.

**PARAMATHIVELUR**

925.## RADHA CAR CARE (5828), NO 96/1,BYE PASS ROAD,VETTUKATTU PUDAR, PIRIVUR ROAD,PARAMATHIVELUR-638182, DISTRICT-NAMAKKAL, TAMILNADU, PH :638182-8608090140.

**PERUNDURAI**

926.## PRIYAM AUTOMOBILES (3036), 139 KOVAI MAIN ROAD, PERUNDURAI-638 052, (TAMIL NADU), PH :638052-9095099999 - 9842701371.

**POLACHI**

927.\* J D & COMPANY (6055), COIMBATORE ROAD, POLLACHI-642 002, , PH :642002-9443565785.

**RAJAPALYAM**

928.## RAJA MOTORS (4128), 52/ A, SRI JANAKIRAM MILLS ROAD, SRIVILLIPUTTUR MAIN ROAD, RAJAPALAYAM, VIRUDHUNAGAR- 620117, PH :626117-7094597178.

**RASIPURAM**

929.## ROYAL AUTO CARS (4052), 5/120 NH-7, SALEM MAIN ROAD, NEAR TSTC DEPOT, MUTHUKALIPATTI POST, RASIPURAM TALUK, NAMAKKAL DISTRICT-637408, PH :637401-9443203339.

**RED HILLS**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs  
## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs  
# D-Category Mass : Free Service & Minor repairs



**Maruti Authorized Service Station (AS ON 30.05.2023 )**

930.## UNIQUE CAR CARE (5868), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLAIVOYAL, CHENNAI, TAMILNADU - 600062, PH :600062-9500056658/9841059295.

**SALEM**

931.## MEENATCHI AUTO (2940), 57 KALARAMPATTY MAIN ROAD, (NEAR DEVI THEATRE), SALEM-636 015, (T.N.), PH :636015-9443201001/ 9976601001.

932.\*\* NATSUN MOTORS (6029), NO.220,BANGALORE BYE PASS ROAD (NH-7), KODALAMPATTY,SALEM-636010, DISTRICT-SALEM, TAMILNADU, PH :636005-9842704499.

**SANKAGIRI**

933.## TECH ZONE AUTO SERVICE (2640), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303, PH :637303-9942444753/ 9842651158.

**SANKARANKOIL**

934.## RAJA MOTORS (4555), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL-627756, PH :627756-9994409363.

**TENKASI**

935.## CARE ZONE (3766), 5/164(1) KUTHUKKAL VALASAI, MADURAI ROAD, TENKASI-627 811, (TAMIL NADU), PH :627811-9842133134.

**THANJAVUR**

936.## R K P MOTORS (5238), 121/7.THANJAVUR KUMBakonam, HIGHWAY PALLIAGRAHARAM, THANJAVUR, TAMILNADU, PH :613003-9751125555 / 9563525555.

**THENI**

937.## SATHURAGIRI MOTOR WORKS (1650), 3-1-31 TO 36, CUMBUM ROAD, THENI-625 531, (TAMIL NADU), PH :625531-9047033678.

**TIRUNELVELI**

938.## FRIENDS INDIA AUTO CLINIC (5030), NO.16 D.BYE PASS ROAD, VANNARAPETA, TIRUNELVELI 627003, TAMILNADU, PH :627003-9786606111.

**TIRUPUR**

939.\*\* LAKSHMI MOTORZ (2461), 4/146 PALLADAM ROAD, OPP. LAKSHMI KALYANA MANDAPAM, TIRUPUR-641 604, (T.N.), PH :641605-9842377959.

**TRICHY**

940.\* VYTHES MOBILE PARK (443), 8/6 TANJORE ROAD, THIRUCHIRAPALLI-620 008, , PH :620008-6383353727.

**UDAMALAPET**

941.\* S.R.K. MOTORS (1456), C-109 GANDHI NAGAR, UDAMALAPET-642 154, COIMBATORE (DT.), (TAMIL NADU), PH :642126-9843011520.

**VELLORE**

942.\* MARUTI AUTO SERVICE (2844), 106 (OLD NO.: 78), KATPADI ROAD, GANDHI NAGAR, VELLORE-632 006 (T.N.), PH :632006-9843093422.

**VILLUPURAM**

943.## RAGAVENDRA MOTORS (2361), 2/3 MADRAS TRUNK ROAD, VILLUPURAM-605 602, (TAMIL NADU), PH :605602-9244555860.

**VRIDDHACHALAM**

944.## VISHWA MARUTI CARE CENTER (8934), NO412,PERIYAR NAGAR (NEAR FIRE SERVICE S, STATION)VRIDDHACHALAM - 606001 , DISTRICT - CUDDALORE , (TAMILNADU), PH :606001-9842246092.

**TELANGANA**

**ADILABAD**

945.## MAHA LAXMI AUTOMOTIVES (2240), NH# 7 OPP. H.P. PETROL BUNK, TIRUPALLY, ADILABAD-504 001, (A.P.), PH :504 001-9000345313.

**BHADRACHALAM**

946.## SRI VENKATARAMANA AUTO CARE (2831), MARUTI SERVICE STATION, OPP. COLLEGE GROUNDS, GOLLAGATTA ROAD, BHADRACHALAM-507 111 (A.P.), PH :507111-9290792269.

**GAJWEL**

947.## VIJAY MOTORS (4864), HYDERAAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIMNAGAR, PREGHAPUR - GAJWL, ANDHRA PRADESH, PH :502278-9849863665.

**HYDERABAD**

948.## ARYAN MOTORS (3264), D.NO.17-1-382/K/5 & 6, CHAMPAPET SAIDABAD, SAGAR ROAD, HYDERABAD, PH :500059-9246155464.

949.## COSMO AUTO CLINIC PVT. LTD. (1045), PLOT NO 1, RD NO 5., CHANDRAPURI COLONY , LB NAGAR, HYDERABAD - 500074, PH :500074-9246272733/9849015667.

950.## PISTONS & SPANNERS (2766), 2-3-37 MAHARANA PRATAP FUNCTION HALL, AMBERPET, HYDERABAD-500 013, PH :500 013-9990649504.

951.## SERWELL AUTOMOBILES (5234), PLOT NO 202.203.ADITYA NAGAR ,OPP. JNTU .KUKA TPALLY.HYDERABAD , ANDHRA PRADESH, PH :500085-9490105147.

**JAGTIAL**

952.## PARAMESHWARA MOTORS (3851), OPP P R OFFICE, DHAROOR CAMP, JAGTIAL 505327, DT. KARIMNAGAR (A.P.), PH :505455-9912664659.

**KARIMNAGAR**

953.## MYTRI MOTORS (5152), 8-6 188.KOTHI RAMPUR, KARIMNAGAR, DISTRICT - KARIMNAGAR , ANDHRA PRADESH, PH :505001-9441475357.

954.\*\* PUSHPAK MOTORS (1032), KOTHI RAMPUR, HYDERABAD ROAD, KARIMNAGAR - 505 001 (A.P), PH :505001-9849489431.

**KHAMMAM**

955.## EXCEL AUTO CARE (1043), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM - 507001, , PH :507001-9848156363.

**KODAD**

956.## SAI KAKATIYA SERVICE STATION (4664), SURYAPETA ROAD, OPPOSITE LORRY ASSOCIATION BUILDING, KODAD-508206, DISTRICT-NALGONDA (ANDHRA PRADESH), PH :508206-9848057813.

**MAHABUB NAGAR**

957.## SRI AYYAPPA MARUTI CLINIC (3941), OPP HOSPITAL, HYDERABAD ROAD, YEMUGONDA, MAHABUB NAGAR (ANDHRA PRADESH), PH :509002-9440569259.

**MANCHERIAL**

958.## PARVATI MOTORS (4129), 4-53 BPL ROAD, MANCHERIAL, DISTRICT ADILABAD, ANDHRA PRADESH, PH :504208-9885554888.

**MIRYALGUDA**

959.## GANESH MOTORS (4536), D.NO. 6-366, P.V. COMPLEX, NALGONDA ROAD, MIRYALGUDA, NALGONDA DISTT (ANDHRA PRADESH), PH :508207-9393900666.

**NALGONDA**

960.## SRIRAM AUTHORISED SERVICE STATION (4627), HYDERABAD ROAD, OPP. SUB STATION, NALGONDA, ANDHRA PRADESH, PH :508001-9848378133.

**NIZAMABAD**

961.## PRIYA SERVICING (1771), C/O TIRUMALA CHITRA MANDIR, HOUSE NO.1-9-833, PHULANG ROAD, NIZAMABAD-503 003 (A.P.), PH :503 003-9848034523.

**RAMAGUNDAM**

962.## ALI AUTOMOBILES (2849), NEAR TV RELAY STATION, NTPC JYOTHINAGAR, RAMAGUNDAM-505 215, DISTT. KARIMNAGAR (AP), PH :505208-9848219102.

**SECUNDERABAD**

963.## ANNAPURNA MOTORS (2947), # 6-3-23/5 JAYANAGAR COLONY, NEAR MEKALMANDI, NEW BHOIGUDA, SECUNDERABAD-500 080, PH :500 080-9849061136.

**SIRSILLA**

964.## SATHVIKA MOTORS (5649), KARIMNAGAR ROAD,OPP HP PETROL PUMP, SIRSILLA-505301, DISTRICT - KARIMNAGAR , ANDHRA PRADESH, PH :505301-9490284726.

**SURYAPET**

965.## SAI GLOBAL AUTO SERVICES (4550), OPP. AYYAPPA SWAMY TEMPLE, BY PASS ROAD, NH-9, SURYAPET-508213, ANDHRA PRADESH, PH :508213-9848076108.

**WANAPARTHY**

966.## SMC MOTORS (5658), K.K.T. ROAD,BASAVANNA GADDA, WANAPARTHY, DISTRICT -MAHABUBNAGAR, ANDHRA PRADESH, PH :509103-9440142927.

**WARANGAL**

967.## VAISHNAVI AUTOMOBILES (470), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL-506 001, PH :506 001-9849002528.

**TRIPURA**

**AMBASSA**

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs  
## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs  
# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

968.## CHAKRABORTY MECHANICAL WORKSHOP (5351), NH-44 NEAR ZILLA PARISWAD OFFICE , AMBASSA, DISTRICT - DHALAI, TRIPURA, PH :799289-9436136054.

**DHARMANAGAR**

969.## RAJ AUTOMOBILES (2868), STATION ROAD, RAJABARI, DHARMANAGAR, TRIPURA (NORTH)-799 253, PH :799253-9436477578.

**UDAIPUR**

970.## SUR UDYOG (3963), TOWN FULKUMARI NO. 1, BRAMHABARI, P O UDAIPUR COURT, UDAYPUR, TRIPURA SOUTH, PH :799120-9862276650.

**UTTAR PRADESH**

**AGRA**

971.## GAYATRI MOTORS (4730), 101-102,SHASHI NAGAR,CHANDRAKALA- COMPLEX.SIKANDRA BODLA ROAD, AGRA - 282008, (UTTAR PRADESH), PH :282007-8077786331.

**ALIGARH**

972.## KAPIL AUTOMOBILES (1344), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), PH :202002-9837007636.  
973.## KAR SCAN CENTRE (449), RAMGHAT ROAD, KWARSI, ALIGARH-202 002, PH :202002-8937000111.

**ALLAHABAD**

974.## ANSHUMAN AUTOMOBILES (4933), 353, NAINI BAZAR NAINI, DISTRICT ALLAHABAD, ALLAHABAD-211008, UTTAR PRADESH, PH :211008-9335138119.  
975.\*\* KAY CEE AUTOMOBILES (2155), 72/60 L.B. SHASTRI MARG, ALLAHABAD, , PH :211001-9415317225.  
976.## TRIBENI MOTORS (2539), 23 KANPUR ROAD, ALLAHABAD-211 001, (U.P.), PH :211001-9415324244.

**ALMORA**

977.## AROMA AUTOMOBILES (3149), THE MALL, ALMORA, (UTTARANCHAL), PH :263601-9412093410.

**AMROHA**

978.## SUNNY MOTORS (2165), BIJNORE ROAD, J.P. NAGAR, AMROHA-244 221, (U.P.), PH :244221-9412248884.

**AURAIYA**

979.\*\* SINGH AUTOMOBILES (5248), KANPUR ROAD.AURAIYA, DISTRICT - AURAIYA , PIN - 206122, UTTAR PRADSH, PH :206122-9808403258.

**BABUGARH**

980.\* GURUNANAK AUTOMOBILES (5977), NH- 9, VILL SIMROLI , BABUGARH CANTT. , DISTRICT- HAPUR, UTTAR PRADESH, PH :245102-8941838183/9411490827.

**BAGHPAT**

981.## KAUSHIK MOTORS (4473), PLOT NO 525, DELHI SAHARANPUR ROAD,PALI, BAGHPAT, UTTAR PRADESH 250609, PH :250609-9837800582.

**BALRAMPUR**

982.## D M AUTOMOBILES (3933), NEAR BCM, POST SIRSIYA, GONDA ROAD, BALRAMPUR 271201, PH :271201-9415071840.

**BANDA**

983.## CHAUDHARY TRACTORS (2249), STATION ROAD, BANDA-210 001, (U.P.), PH :210001-9415143033.

**BARAUT**

984.## HIGH TECH ENGINEERS (4821), 216/5 SAHARANPUR ROAD, BARAUT, , PH :250611-9837168887.  
985.## SIGNET AUTOMOBILES (4441), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P), PH :250611-8279527633 9917668255.

**BAREILLY**

986.## S P MOTORS (5746), 383.SURKHA CHAWNI,NAINITAL ROAD, BAREILLY-243001, DISTRICT-BAREILY, UTTAR PRADESH, PH :243001-9568033111.

**BIJNOR**

987.## SARDAR MOTORS (4671), DELHI HIGHWAY ROAD , 4TH KM MILE STONE , BIJNOR - 246701, UTTAR PRADESH, PH :246701-9837265076.

**BULANDSHAHR**

988.## DELHI AUTO ENGRS (1351), PLOT NO-106, NEAR TAFE TRACTOR AGENCY, NEAR CHANDPUR VILLAGE, DELHI ALIGARH BYPASS ROAD, BULANDSHAHR (UP) 203001., PH :203001-8700630277/8700982878.

**CHANDPUR**

989.## BHARTI AUTOMOBILES (1777), DHANORA ROAD, CHANDPUR, DISTT. BIJNOR, (U.P.), PH :246725-9837380551.

**CHITRAKOOT**

990.\* SHYAM MOTORS (4367), BUS STAND, KARWI, CHITRAKOOT-210205, PH :210205-9415143900.

**DADRI**

991.## NATIONAL MOTOR AGENCY (5143), NOIDA ROAD , DADRI -203207, DISTRICT -, GAUTAMBUDH NAGAR , UTTAR PRADESH, PH :203207-9818486888/0120-2667033/987394403 3.

**DANKAUR**

992.## YASH MOTORS (5934), SIKANDRABAD ROAD,NEAR KISAN INTER COLLEGE, DANKAUR-203201, DISTRICT- GAUTAM BUDH NAGAR, UTTAR PRADESH, PH :203201-9410491590.

**DEOBAND**

993.## PRACHI MOTORS (3361), ADJACENT TO CIVIL COURTS, G.T. ROAD, DEOBAND, DISTT. SAHARANPUR (U.P.), PH :247554-7017803402.

**DEORIA**

994.\*\* CLASSIC MOTORS (2971), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.), PH :274001-9415313939.

**DHAMPUR**

995.## AUTAR AUTOMOBILES (4846), NOORPUR ROAD, DHAMPUR-246761, DISTRICT-BIJNOR, UTTAR PRADESH, PH :246761-7017211986.

**FAIZABAD**

996.## S K MOTORS (4672), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96, FAIZABAD-224001, UTTAR PRADESH, PH :224001-9307088750.

**FARUKHABAD**

997.## APOORVA MOTORS (4675), SATAPUR MAINDIR ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH, PH :209625-9044498958.  
998.## SANDEEP MOTORS (4161), THANDI SADAK, OPP. JITENDRA GAS GODOWN, FARUKHABAD, UTTAR PRADESH, PH :209625-9838840322.

**FATEHPUR SIKRI**

999.## LAXMI MOTORS (5943), FATEHPUR SIKRI ROAD,KHEDA KORAI , FATEHPUR SIKRI-283110, DISTRICT-AGRA, UTTAR PRADESH, PH :283110-9837749949.

**FIROZABAD**

1000.\*\* AMAN MOTORS (4366), OPP CAR CARE (INDIA), BYE PASS ROAD, FIROZABAD, UTTAR PRADESH, PH :283203-9837500220.  
1001.## GOVIND AUTOMOBILES (1739), NH-2, INFRONT OF SUB POWER STATION, MODHA, ASFABAD CHAURAHA, FIROZABAD, UTTAR PRADESH, 283203, PH :283203-9837169332.

**GANGOH**

1002.## SHRI KRISHNA MOORS (5939), BYE PASS ROAD RAM GARH,GANGOH-247341, DISTRICT-SAHARANPUR, UTTAR PRADESH, PH :247341-9997102785.

**GHAZIABAD**

1003.\* CHAWLA AUTOMOBILES (2643), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA, GHAZIABAD, PH :201001-9811720929.  
1004.\* D.N. AUTOLAND (272), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD, PH :201003-9810001121/9811001121.  
1005.\*\* KRISHNA AUTOMOBILES (5356), 101.LAL KUAN ,SHIV MANDIR , BULANDSHAHR ROAD , DISTRICT - GHAZIABAD, UTTAR PRADESH, PH :201009-9810311475/9999506820.  
1006.## S P MOTORS (4973), HAPUR BYPASS ROAD, MEHRAULI, GHAZIABAD, PH :201001-9350936262/0120-2824443/921026490 5.  
1007.\* SHIVA MOTORS (3343), 17TH KM STONE, 118-119 SHIVPURI, SECTOR-9 VIJAY NAGAR BYEPASS NH-24, GHAZIABAD-201 009 (U.P.), PH :201009-2744400/3232590/9891464349/987300 0571.

**GONDA**

1008.\*\* AMAN MOTORS (3858), USAYANI CHAURAHA, RAJA KA TAAL, BYE PASS ROAD, FEROUZABAD, UTTAR PRADESH, PH :271001-9415120101.  
1009.\* PANKAJ AUTOMOBILES (1370), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, GONDA, PH :271801-9415664930.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

# Maruti Authorized Service Station (AS ON 30.05.2023 )

## GREATER NOIDA

1010.## JAISWAL MOTORS (5078), PLOT NO. 31, SECTOR MUP-II.GREATER NOIDA , DISTRICT - GAUTAM BUDH NAGAR, UTTARPRADESH, PH :201308-9810062269/6485444/9212142269.

1011.## KUMAR MOTORS (8926), M-8, SITE-5, UPSIDC, KASNA INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDH NAGAR, UTTAR PRADESH, PH :201312-9911498777/0120-2341088/981149833 3.

## HAPUR

1012.\* SRASHTHI MOTORS (3076), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101, PH :245101-9412221608/9557307976.

## HARDOI

1013.## M. MOTORS & SERVICE CENTRE (3371), CHAND BEHTA, LUCKNOW ROAD, HARDOI-241 001, (U.P.), PH :241001-9415175610.

1014.\*\* TAYAL AUTOMOTIVES (4265), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, PH :241001-9415149951.

## HATHRAS

1015.## RADHEY RADHEY AUTOMOBILES (4344), NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, PH :204101-9897069159.

## JAGDISHPUR

1016.## SUPER AUTOMOBILES (3564), JAFARGANJ P.O., INDUSTRIAL AREA, JAGDISHPUR, DISTT. SULTANPUR-227 817 (U.P.), PH :227817-9415177882.

## JAUNPUR

1017.## SADGURU MOTORS (5071), FAIZBAGH (NEAR TOM OFFICE), UMARPUR.JAUNPUR, JAUNPUR-222142, UTTAR PRADESH, PH :222142-8318984440.

## JHANSI

1018.## A.B. MOTORS (8938), 4 KHATTERYANA, JHANSI, , PH :284001-9415059820.

## KANNAUJ

1019.## SARALA AUTO CARE (5854), G.T. ROAD KANNAUJ, DISTRICT-KANNAUJ, UTTAR PRADESH, PH :209725-9918692324.

## KANPUR

1020.\* AJAY MOTOR WORKS PVT. LTD. (3134), 117N/81 KAKADEVO, KANPUR, , PH :208025-9919828000.

1021.\*\* AUTO GARAGE (4266), P-22-A, PRATAP GANJ, FACTORY AREA, OPP GANDA NALA, KANPUR-208012, PH :208012-9415126189.

1022.\*\* CHANDRA MOTORS (4458), 621/3 W-2 JUHI, BEHIND SACHAN GUEST HOUSE, KANPUR, PH :208027-9839928280.

1023.\*\* EXCELLENT MOTORS (2968), 123/793 FAZALGANJ, KANPUR-208 012, , PH :208012-9336119874.

1024.## KANPUR AUTO CENTRE (2823), 14/142, CHUNNIGANJ, KANPUR, PH :208001-9415045438.

1025.\*\* SUJIPA MOTORS (4337), 127/465, U-BLOCK, NIRALA NAGAR, KANPUR, PH :208014-9415050146.

## KHALILABAD

1026.## RATAN MOTORS (5645), RAILWAY STATION ROAD - KHALILABAD, DISTRICT- SANT KABIR NAGAR, PIN-272175, UTTAR PRADESH, PH :272175-9621294899.

## KHATAULI

1027.## EAGLE MOTORS (5142), OPPOSITE EW ROADWAYS , G.T. ROAD. NH -58.KHATAULI, DISTRICT - MUZAFFARNAGAR, UTTAR PRADESH, PH :251201-9997039786.

## KHEKRA

1028.\*\* KAILASAH MOTORS (5767), OPP TEHSIL DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH, PH :250101-9760027001.

## KOSIKALAN

1029.\*\* ADITYA MOTORS (1940), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.), PH :281403-9837050778.

## LAKHIMPUR KHERI

1030.\*\* AJMANI TRACTORS (4143), NIGHASAN ROAD, LAKHIMPUR KHERI, UTTER PRADESH, PH :262701-9918802167.

## LAMBHUA BAZAR

1031.## VIKRAM MOTORS (3729), LAMBHUA BAZAR, SULTANPUR (DIST.), UTTAR PRADESH-222 302, PH :222302-9450215996.

## LONI

1032.## SAMBHAV AUTOMOBILES (5168), 31.RURAL INDUSTRIAL ESTATE , ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH, PH :201102-9311690878/9212128889.

## LUCKNOW

1033.\*\* B.K. MOTORS (2537), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015, PH :226015-9335908130.

1034.## BALAJI MOTORS (1336), 1 NEWAL KISHORE ROAD, LUCKNOW-226 001.(U.P.), , PH :226001-9336253838.

1035.## GALAXY MOTORS (5274), KASHANA SITAPUR ROAD,NEAR SHIA, P G COLLEG - LUCKNOW , DISTRICT - LUCKNOW, UTTAR PRADESH, PH :226021-9305567878.

1036.\*\* GUD'S CAR CARE (2538), MAIN ROAD, NISHATGANJ, LUCKNOW-226 006, PH :226006-9415024495.

1037.\*\* KALYAN MOTORS (1161), GOVT. POLYTECHNIC CROSSING, FAIZABAD ROAD, GOMTI NAGAR, LUCKNOW, PH :226010-9936942527.

1038.\*\* KAPOOR MOTORS (1751), PLOT NO.380, NEAR GUNGA BAHARA SCHOOL, TILAK NAGAR , UTTAR PRADESH, PH :206122-9795457050.

1039.\*\* KAPOOR MOTORS (5044), 555/GA/50,BARA BIRWA, KANPUR ROAD-, ALAMBAGH LUCKNOW., DISTRICT - LUCKNOW, (UTTAR PRADESH), PH :226005-9795457050.

1040.\* KRISHNA MOTORS (5026), BALAGANJ HARDOI ROAD, CHOWK LUCKNOW, DISTRICT LUCKNOW, UTTAR PRADESH, PH :226020-9839177777.

1041.\*\* MVV MOTORS (5531), A1/14,VIJAY KHAND,GOMTI NAGAR, LUCKNOW-226010, DISTRICT - LUCKNOW, UTTAR PRADESH, PH :226010-9792877779.

1042.\*\* RELIANCE MOTORS CARE (1236), 7-B/1 PRIME PALACE, FAIZABAD ROAD, INDIRA NAGAR, LUCKNOW-226 016, PH :226016-9918100051.

1043.\* S.K. MOTORS (2449), 8/881 VIKAS NAGAR, PICNIC SPOT ROAD, KHURAM NAGAR, LUCKNOW-226 013, PH :226013-9415005564.

1044.\* THE GARAGE (5479), BEHIND NEW HANUMAN MANDIR,MADIR PARK , MAHANAGAR - LUCKNOW , DISTRICT - LUCKNOW, UTTAR PRADESH, PH :226006-9236711634.

1045.\* V.S. MOTORS (4745), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH, PH :226007-9984749000.

## MAHOBA

1046.## ROYAL SERVICE STATION (2238), HAMIRPUR CHUNGHI, KANPUR ROAD, MAHOBA, (U.P.), PH :210427-9450269053.

## MAINPURI

1047.## JATIN MOTORS (5540), GANESH MILL COLONY RADHA RAMAN ROAD, MAINPURI-205001, DISTRICT-MAINPURI, UTTAR PRADESH, PH :205001-8193825000.

## MARIAHU

1048.## BABU MOTORS (5740), MACHALISHAHAR ROAD,NEAR POST OFFICE, MARIAHU-222161, DISTRICT - JAUNPUR, UTTAR PRADESH, PH :222161-9919263663.

## MATHURA

1049.## GIRIRAJ CAR CARE (5624), BIMAL ENGG COMPLEX, BAD, MATHURA-281 006, PH :281006-9837071321.

1050.\*\* NAND SERVICE STATION (3578), GOPAL PURA VILLAGE, REFINDERY TOWNSHIP, NH-2, MATHURA, PH :281001-9997982828.

1051.## SHREE GOPAL AUTOMOBILES (5664), DELHI BYE PASS ROAD,NEAR GOKUL RESTAURANT, MATHURA - 281001, DISTRICT - MATHURA, UTTAR PRADESH, PH :281001-9412726760.

1052.\* SIYA RAM MOTORS (1666), JAYSINGHPURA, NEAR BIRLA MANDIR, MATHURA-281 003, (U.P.), PH :281003-9897053962.

## MEERUT

1053.\*\* EXPERT CAR SCANNER (1174), 83 HILL STREET (KATH-KA-PUL), BEHIND ABU LANE, MEERUT CANTT., (U.P.), PH :250001-8057301301.

1054.## KRISHNA AUTOMOBILES (5573), PLOT NO D-10,SHRADHA PURI., KANKARKHERA - MEERUT, DISTRICT - MEERUTI, UTTAR PRADESH, PH :250001-9927241738.

1055.## SARAN AUTOMOBILES LTD. (1078), DELHI ROAD, RITHANI, MEERUT, PH :250001-6395883392 8977524402.

## MIRZAPUR

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 30.05.2023 )

1056.##	PRABHAT MOTORS (4131), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, U.P. PH :231309-9838940382.
<b>MOHANLAL GANJ</b>	
1057.**	GURU TEG BAHADUR AUTO ENTERPRISES (4072), 4 SENANI VIHAR, RAI BAREILLY ROAD, MOHANLAL GANJ, LUCKNOW U.P. PH :226027-9415229172.
<b>MORADABAD</b>	
1058.##	ASHISH AUTOMOBILES (1477), KANTH ROAD, MORADABAD-244 001, , PH :244001-9837055258.
<b>NAJIBABAD</b>	
1059.##	SETHI MOTORS (4557), C/O SETHI BOARD INDUSTRIES LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT. BIJNOR (UTTAR PRADESH). PH :246732-9837590800.
<b>NOIDA</b>	
1060.##	AUTOPPOINT (2263), G-6,SECTOR 11,NOIDA, PH :201301-8800337770.
1061.##	RAHUL MOTORS (4662), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH, PH :201305-9810572900/9312271259/0120-396313 8.
1062.**	RAJESH & ANIL MOTOR CO (5330), B-110. SECTOR 2. NOIDA, DISTRICT - GAUTAM BUDH NAGAR , UTTAR PRADESH, PH :201301-9818578786/0120-4211266/0120-2539 555.
1063.*	SKUNIVERSE AUTOMOBILE PRIVATE LIMITED (8922), C-2 SECTOR 63, NOIDA - 201301, PH :201301-9219694600/9690581570.
<b>OBRA</b>	
1064.##	APPRECIATE SERVICES (4678), BY PASS ROAD , ROBERTS GANJ , DISTRICT - SONEBHADRA , UTTAR PRADESH, PH :231219-8765833557.
<b>PILIBHIT</b>	
1065.*	UNIVERSAL MARUTI SERVICE STATION (4365), BYE PASS ROAD, PILIBHIT, UTTAR PRADESH, PH :243006-9412313499.
<b>PILKHUWA</b>	

1066.*	SHREE BANKEY BIHARI MOTORS (6025), NH-24,DELHI-GARH ROAD,PILKHUWA-245307, DISTRICT-GHAZIABAD, UTTAR PRADESH, PH :245304-9045548101.
<b>PRATAPGARH (U.P)</b>	
1067.**	SHREE MOTORS (4146), ALLAHABAD FAIZABAD ROAD, NH-96, CHILBILA RANJEETPUR, PRATAPGARH (UTTAR PRADESH), PH :230001-9415229257.
<b>RAI-BARELI</b>	
1068.**	STANDARD GARAGE (4429), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE, RAE BAREILLY, PH :229206-9415190703.
<b>RAMNAGAR</b>	
1069.##	MAHI AUTOMOBILES (5532), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTRAKHAND, PH :244715-8192000724.
<b>RAMPUR</b>	
1070.##	FIZZA MOTORS (2241), NEAR AMBEDKAR PARK, CIVIL LINES, RAMPUR (U.P.), PIN-244 901, PH :244901-9897879711.
<b>RATH</b>	
1071.##	MARUTI POINT (4228), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P), PH :210431-9415331735.
<b>RENUKUT</b>	
1072.##	AMBIKA MOTORS (1050), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.), PH :231217-9415251724.
<b>ROBERTSGANJ</b>	
1073.*	KAMAKHYA AUTOMOBILES (4163), PIPRI ROAD, ROBERTSGANJ, SONEBHADRA (U.P), PH :231216-9918301052.
<b>SADABAD</b>	
1074.##	ASHU SERVICE CENTRE (5849), AGRA BYE PASS ROAD, SADABAD-281306, DISTRICT-HATHRAS, UTTAR PRADESH, PH :281306-9058832658.
<b>SAHARANPUR</b>	
1075.##	GANESH CAR SERVICES (1871), OPP. REMOUNT DEPOT GATE, DEHRADUN ROAD, SAHARANPUR-247 001, PH :247001-9358306804.
<b>SAHIBABAD</b>	

1076.##	MEHAR AUTOMOBILES (3576), 116/1 NEAR GDA MARKET, G.T. ROAD, KATORI MILL, MOHAN NAGAR, GHAZIABAD-201 007 , PH :201007-9711201557/9871832662.
1077.**	MOTOR MAGIC AUTO ZONE (4462), 4/29-A SITE-IV, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD, PH :201005-9810936357/9717194917/7838615331/ 9717800022.
1078.##	PANDIT AUTOMOBILES (4647), 3/1/1, SITE-IV, INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH, PH :201010-0120-2776808/0120-4114808/9810771 045/9810639100.
1079.##	POOJA MOTORS (3562), TEELA MORE, SHAHBAJPUR, LONI, DISTT. GHAZIABAD (U.P.), PH :201102-9810986463/9810986463/9891155954.

<b>SANDILA</b>	
1080.##	SUBHAM SERVICE CENTRE (4042), NEAR NEHA KOTHI ROAD, SANDILA, HARDOI, PH :241204-9506181818.
<b>SHAHJAHANPUR</b>	
1081.##	SUPER AUTO (3135), OLD DIST. HOSPITAL ROAD, SHAHJAHANPUR (U.P.), PIN-242 001, PH :242001-9415035644.
<b>SHAMLI</b>	
1082.##	ROYAL MOTORS (5277), PANIPAT KARANA ROAD, SHAMLI, SHAMLI-247776, UTTAR PRADESH, PH :247776-9927272766.
<b>SHIKOHABAD</b>	
1083.##	KUMAR MOTORS (5575), SUBHASH TIRAHA ,AGRA GATE - SIKOHABAD, DISTRICT - FEROZABAD, UTTAR PRADESH, PH :283203-9411937033.
<b>SIDDHARTH NAGAR</b>	
1084.##	MARUTI CARE CENTRE (2736), OPP. SIDDHARTH SCHOOL, AZAD NAGAR, SIDDHARTH NAGAR-272 207, (U.P.), PH :272207-9935642651.
<b>SIKANDRABAD</b>	
1085.##	NALIN AUTO (8921), G.T. ROAD, SIKANDRABAD, DISTT. BULANDSHAHAH, (U.P.), PH :203205-05735-222802/9412227155/976113393 6.
<b>SIRSAGANJ</b>	

1086.##	SATGURU MOTORS (3739), BYE PASS KAURARA ROAD, SIRSAGANJ DISTT. FIROZABAD, ETAWAH-AGRA ROAD, SIRSAGANJ (U.P.), PH :281431-9412316660.
<b>SONEBHADRA</b>	
1087.##	ODUH SERVICE STATION (2925), SHAKTI NAGAR, SONEBHADRA-231 222, , PH :231222-7408434860.
<b>SULTANPUR</b>	
1088.##	HINDUSTAN AUTO GARAGE (1360), BARHAIYA BEER RD., (ADJ.BUS STAND), SULTANPUR-228 001 (U.P), PH :228001-9984154002.
<b>VARANASI</b>	
1089.**	MISHRA ENGINEERS (4957), S-4/68, NAI BASTI, PAHARIA, VARANASI-221002, UTTAR PRADESH, PH :221002-9415301483.
<b>UTTARAKHAND</b>	
<b>BAZPUR</b>	
1090.##	TARAI AUTOMOBILE ENGG WORKS (4459), GURUTEG BAHADUR ROAD, U.S. NAGAR, BAZPUR-262401, UTTARANCHAL, PH :263401-9837506765.
<b>BHAGESWAR</b>	
1091.##	SHREE ISHT DEV AUTOMOBILES (4570), GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTARANCHAL, PH :262642-9997895347.
<b>DEHRADUN</b>	
1092.##	ASHIRWAD MOTORS (5144), CANAL ROAD, NEAR BALLUPUR CHOWK, DEHRADUN-248001, UTTARANCHAL, PH :248001-9219594748.
1093.##	HANS LAKHERA MOTORS (5032), JOGI WALA RING ROAD, NATHAPUR APPARTMNT., NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN, PH :248001-9897456677.
1094.##	KRIPALESHWARI MOTORS (4475), HARIDWAR ROAD, NEAR LIC BUILDING, DEHRADUN-248001, UTTARANCHAL, PH :248001-9412963384.
1095.*	SHREE RAM AUTOMOBILES (5066), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR- DEHRADUN, UTTARANCHAL, PH :248198-9897731200.
<b>HALDWANI</b>	

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs  
## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs  
# D-Category Mass : Free Service & Minor repairs

# Maruti Authorized Service Station (AS ON 30.05.2023 )

1096.## EXCEL MOTORS & ENGG. WORKS (3827), RAMPUR ROAD, NEAR STM FOREST HOSPITAL, HALDWANI, NAINITAL, PH :263139-9837191688.

1097.\* HARYAL SERVICE STATION (5340), BAREILY ROAD, GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND, PH :263139-9997200227.

## HARIDWAR

1098.## PREET MOTORS (5561), SHRI NATH NAGAR, RAILWAY ROAD, JAWALPUR - HARDWAR, DISTRICT - HARDWAR, UTTARANCHAL, PH :249408-9012010497.

## KANKHAL

1099.## HIGHWAY MOTORS (4261), NEAR SINGH DWAR CHOWK, ROORKEE-HARDWAR BY PASS ROAD, POST OFFICE, GURUKUL KANGRI, KANKHAL, DISTT HARDWAR, PH :249408-9412072889.

## KASHIPUR

1100.## OM MOTORS (4329), OPPOSITE SWAGAT MANDAP, BAZPUR ROAD, KASHIPUR DIST., U.S. NAGAR (UTTARANCHAL), PH :244713-9927500007.

1101.## KRISHNA AUTOMOBILES (4824), MORADABAD ROAD, KASHIPUR, , PH :244713-9870998368.

## KICHHA

1102.## SHREE SHYAM JI AUTO SERVICE CENTRE (5648), BAREILY ROAD, KICHHA, PIN-263148, DISTRICT-JDHAM SINGH NAGAR, UTTARAKHAND, PH :263148-9837033377.

## KOTDWAR

1103.## BHATT MOTORS (1775), NAJIBABAD ROAD, KOTDWARA, (GARHWAL), UTTARANCHAL, PH :246149-9917005404.

## LAKSAR

1104.## SHIV AUTOMOBILES (5560), 110/1/3 BALAWALI ROAD - LAKSAR, DISTRICT - HARIDWAR, PIN - 247663, UTTARANCHAL, PH :247663-9719054422.

## LOHRIASAL MALLA

1105.## ANJINI SERVICE CENTRE (5552), NEAR BLOCK OFFICE, KALADHUNGI ROAD, LOHRIASAL MALLA, CITY - HALDWANI, UTTARAKHAND - 263139, , PH :263139-9837098699.

## NEW TEHRI

1106.## BHAGWATI SERVICE CENTER (4472), SECTOR-8E/537, NEAR STADIUM, BARURI, NEW TEHRI, GARWAL (UTTRANCHAL), PH :249001-7895219517.

## PAURI

1107.## KRISHNA MOTORS (5957), SHRINAGAR ROAD, NEAR KARGIL SHAHEED PETROL, PUMP, PAURI-246001, DISTRICT-PAURI GARHWAL, UTTARANCHAL, PH :246001-9412030074.

## PITHORAGARH

1108.## CAR CARE CENTER (4371), CANT ROAD, PITHORAGARH, UTTARANCHAL, PH :262501-9756204288.

1109.## MAHAKALI MOTORS (4142), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTARANCHAL, PH :262501-9897922203 9634713124.

## RANIKHET

1110.## LATIF MOTOR WORKS (3269), SADAR BAZAR, GANDHI CHOWK, RANIKHET, (UTTARANCHAL), PH :263645-9761250801.

## RISHIKESH

1111.## GARHWAL GASOLINE STATION (3639), , H.P. PETROL PUMP, LAXMAN JHULA ROAD, RISHIKESH-249 201, PH :249137-9837377767.

1112.\* RAKESH AUTOMOBILE ENGINEERS (1464), OPP. BHARAT MANDIR INTER COLLEGE, HARDWAR ROAD, RISHIKESH-249 201, PH :249137-9412051655.

## ROORKEE

1113.## DUM DUM ENGG. WORKS (1343), GROUND FLOOR, A TO Z. TOWER, NEAR SOLANI BRIDGE, HARIDWAR ROAD, ROORKEE, PH :247664-8449155002.

1114.## ROORKEE AUTO SCANNERS (2675), 786 WEST AMBER TALAB, RAM NAGAR CHOWK, ROORKEE-247 667, PH :247664-7017003404.

## RUDRAPRAYAG

1115.## RAJESHWARI AUTOMOBILES (5669), BADRINATH ROAD, GHOLTIR, RUDRAPRAYAG, DISTRICT - RUDRAPRAYAG, UTTARANCHAL, PH :246171-9997217788.

## RUDRAPUR

1116.\*\* BALAJI SERVICE CENTRE (1335), HALDWANI ROAD, RUDRAPUR(NAINITAL), (U.P.), PH :263153-9837021941.

1117.\*\* CORUS MOTORS (5059), D1 D2,20/1.NANITAL ROAD, DISTRICT - U.S. NAGAR, UTTARAKHAND, PH :263153-9927500007.

## SIMLI

1118.## PINDER AUTOMOBILES (5527), PLOT # C6-C9, INDUSTRIAL AREA , NEAR KARNAPRAYAG - SIMLI, UTTARANCHAL, PH :246449-9412977249.

## SITARGANJ

1119.## SHRI RAM MOTORS (5833), AGARWAL BHAWAN, BYE PASS ROAD, SITARGANJ-242605, DISTRICT-UDHAM SINGH NAGAR, UTTARANCHAL, PH :262405-8859485786.

## VIKASNAGAR

1120.## SOUMYA MOTORS (4272), CHAKRATA ROAD, BEHIND STATE BANK OF INDIA, VIKASNAGAR, DISTT. DEHRADUN (U.A), PH :248198-9412382490.

## WEST BENGAL

### ALIPURDUAR

1121.## PRADDYOUT AUTOMOBILE WORK (653), PURAN BAZAR, P.O.ALIPURDUAR, JALPAIGURI, WEST BENGAL, PH :736121-9832487473.

### ARAMBAGH

1122.## MARUTI ZONE (3748), PARUL, ARAMBAGH, HOOGHLY, WEST BENGAL, PH :712413-9434345047.

### ASANSOL

1123.## AGARWALLA AUTO SERVICE (3122), 181 BURNPUR ROAD, P.O. BURNPUR, DT. BURDWAN-713 325, (WEST BENGAL), PH :713325-9832179346.

1124.\*\* WEST END MOTORS (1665), KALYANPUR SATELITE TOWNSHIP PROJECT, KANYAPUR LINK ROAD, PALASHDIAH MORE, PO-KANYAPUR, PIN-713341, ASANSOL, WESTBENGAL, PH :713341-8798107541.

### BAHRAMPUR

1125.\* MARUTI CARE (3674), NH-34 UTTARPARA MORE, P.O. RADHARGHAT, BERHAMPORE, MURSHIDABAD -742 187 (WEST BENGAL), PH :742187-9434394040.

1126.## NARAYAN BUS SERVICE (656), 17 RABINDRA THAKUR ROAD, P.O.BAHARAMPUR (WEST BENGAL), , PH :742101-9732628065.

### BALURGHAT

1127.## GHOSH AUTOMOBILES (2644), NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, PH :733101-9434963493.

### BANDEL

1128.## CAR HOSPITAL (3675), 2 NO. NETAJI PARK, G.T. ROAD, (OPP. MILITARY COLONY), BANDEL (WEST BENGAL), PH :712102-9038021085.

### BARRACKPORE

1129.## SAMANTA AUTOMOBILES (268), CHIRIMORE, BARRACKPORE-743 101, NORTH -24 PARGANAS, WEST BENGAL, PH :743101-9831054432.

### BIRPARA

1130.## PRATAP ENGINEERING WORKS (8942), NH-31, DEMDIMA, PO-BIRPARA, PIN -735204, DISTRICT JALPAIGURI, WEST BENGAL, PH :735204-9832429319.

### BOLPUR

1131.## BASUNDHARA AUTOMOBILES (4241), GOAL PARA, BOLPUR SURI ROAD, BOLPUR, PH :731235-9832132851.

### CHINSURAH

1132.## UNIVERSAL AUTO REMEDY (648), C/O MR.BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE, PO CHINSURAH, HOOGHLY-712102, PH :712102-9830056592.

### COOCH BEHAR

1133.## PROVA AUTOMOBILES (8936), CHAKCHAKA CHECK POST, NH-31, COOCH BEHAR-736 101, (WEST BENGAL), PH :736101-9434174309.

### DINHATA

1134.## DINHATA AUTOMOBILES (5739), BALRAMPUR ROAD POIPS.DINHATA, DISTRICT-COOCHBEHAR, PIN-736135, WEST BENGAL, PH :736135-9434256518.

### DURGAPUR

1135.## THE QUICKEST (2879), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR-713 212, PH :713212-9832165126.

### FARAKKA

1136.\*\* SPEED WHEEL SERVICE CENTRE (1056), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.), PH :742236-9434101917.

### HALDIA

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

**Maruti Authorized Service Station (AS ON 30.05.2023 )**

1137.\*\* S.D. REPAIRING CENTRE (2168), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY, HALDIA-721 606, DISTT. MIDNAPORE (W.B.), PH :721606-9434021405.

**HOWRAH**

1138.## GREWAL AUTO SERVICE (1570), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH-711 102, PH :711102-9831017806.

**JAIGAON**

1139.\*\* SHAKTI TRADING CO. (770), M.G. ROAD, JAIGAON-736 182, PH :736182-7760808990.

**JALPAIGURI**

1140.## AUTOSTEL (646), SAKOAJHORA, P.O. GAIRKATA-735 212, DIST.JALPAIGURI, (W.B.), PH :735212-9934111868.

1141.\*\* S.S. AUTOMOBILES (3664), ASSAM MORE, JALPAIGURI, WEST BENGAL-735 101, PH :735101-9434340252.

**KALYANI**

1142.## GOPAL AUTO SERVICE CENTRE (3373), B.K. EXPRESSWAY, BUDHA PARK, KALYANI-741 235, NADIA (WEST BENGAL), PH :741235-9831319161.

1143.## KRISHNA ENGINEERING WORKS (5270), PLOT NO.199,KANTEBELE.O.N.G.C ROAD, KALYANI EXPRESS ROAD,PO:GHORAGACHHA, PS - KALYANI, WEST BENGAL, PH :741245-7439007218.

**KOLKATA**

1144.\*\* ADAMS MOTOR WORKS (465), 61 A SHAKESPEARE SARANI, CALCUTTA-700 017, , PH :700017-9830703287.

1145.## AUTO SCAN (2272), 100/1 B.T. ROAD, CALCUTTA-700 090, , PH :700090-9231622309.

1146.\*\* AUTOKRAFT (620), F 1/G-3, RIC IND.ESTATE UPEN BANERJEE ROAD, PARNASREE, CALCUTTA - 700060 (W.B.), PH :700060-9830053331.

1147.\* BHAWANIPUR AUTO CENTRE (628), 49 S.P.MUKHERJEE ROAD, CALCUTTA - 700 026 (W.B.), , PH :700026-9831783130.

1148.## CAMAC (621), 2/E CAMAC STREET, CALCUTTA-700016(W.B.), , PH :700016-9831493716.

1149.## CLASSIC ENGINEERING WORKS (3171), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO G-1, KOLKATA-700 034, PH :700034-9903390559.

1150.\* DELUXE SERVICE STATION (672), P-256 257 CIT ROAD, CALCUTTA-700 010, , PH :700010-9836490083.

1151.\*\* DIAL AUTOMOBILES PVT.LTD. (643), 162 A PARY MOHAN RAY ROAD, CALCUTTA-700027(W.B.), , PH :700027-9830552191.

1152.## FORTUNE AUTO CARE (3167), 16 G/6 KHANPUR ROAD, KOLKATA-700 047, (W.B.), PH :700047-9831754527.

1153.## INTERNATIONAL AUTO WORKS (2648), 48-C SOUTH TANGRA ROAD, KOLKATA-700 046, , PH :700046-9163703015.

1154.\* MARUTI LINK (1633), CK-12 SECTOR 2, SALT LAKE, CALCUTTA-700 091, PH :700091-9831180421.

1155.\*\* MOTORKRAFT (635), P-149 REMOUNT ROAD, CALCUTTA-700 027.(W.B.), , PH :700027-033-24493849.

1156.\*\* NORTH POINT MOTORS PVT. LTD. (344), DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA-700 037, PH :700037-9830220069.

1157.\* PRINCE MOTOR WORKSHOP (2845), TM - 2/8 TEGHARIA, P.O. HATIARA, CALCUTTA-700 059, PH :700059-9875625595.

1158.\*\* R.S. SERVICE CENTRE (1948), 1/2 MAHENDRE ROY LANE, CALCUTTA-700 046, , PH :700046-9831170273.

1159.\* RAJ AUTO SERVICE (5338), 35.CANAL EAST ROAD, KOLKATA , PIN - 700011, WEST BENGAL, PH :700011-9831103901.

1160.## ROYAL CALCUTTA AUTOMOBILES (4651), 68 BROAD STREET, KOLKATA-700019, , PH :700019-8777762005.

1161.## RUSSA ROAD SERVICE STATION (622), 30 SP MUKERJEE RROAD, CALCUTTA - 700025 (W.B.), , PH :700025-9748757842.

1162.## SONA AUTO UDYOG (3144), 1404 PURBACHAL MAIN ROAD, OPP. KALIKAPUR MARKET, KOLKATA-700 099, PH :700099-9804808684.

1163.## TECHNO AUTO WORKS (4669), 619, RAJA RAM MOHAN ROY ROAD, BIREN ROY ROAD EAST, BEHALA, KOLKATA-700008, PH :700008-9830111258.

1164.## ULTRA CRAFT (4643), 103/1B, RAJA DINENDRA STREET, KOLKATA-700006, WEST BENGAL, PH :700006-9831313321.

1165.## YOUNG AUTOMOBILES (637), 50/2 HAZARA ROAD, CALCUTTA-700 019.(W.B.), , PH :700019-9830778611.

1166.## ZENITH AUTO (5529), BOHLA NATH SARANI,CHINAR PARK, RAJARHAT , KOLKATA-700157, DISTRICT - KOLKATA, WEST BENGAL, PH :700157-9830643781.

1167.## ZO VAN AUTOMOBILES PVT. LTD (5578), 42/A1B,RAJA SANTOSH ROAD, KOLKATA, DISTRICT - KOLKATA, WEST BENGAL, PH :700027-9831082193.

**KRISHNANAGAR**

1168.## HIGHWAY SERVICE CENTRE (4455), ASHA DEEP, N.H-34, KRISHNANAGAR, NADIA-741101, WEST BENGAL, PH :741101-9434165494.

1169.## TARA MA AUTOMOBILES (1947), AUROBINDA SARANI (NEAR KRISHNANAGAR WOMEN'S COLLEGE), KRISHNANAGAR,NADIA, , WEST BENGAL 741101, PH :741101-8001100930.

**MADHYAMGRAM**

1170.## BEHAL'S AUTOMOBILE (4653), DOLTALA, GANGANAGAR, MADHYAMGRAM, KOLKATA-700129 (WEST BENGAL), PH :700129-9831094430.

1171.\* PAUL AUTOMOBILES (671), JESSORE ROAD, MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH, PH :700132-9830239001.

**MALDA**

1172.## ABHISEK AUTO CENTRE (1976), N.H.34, NEAR ST. XAVIER SCHOOL, P.O. MOKDUMPUR, DISTT. MALDA-732 101 (W.B.), PH :732101-9434065360.

**MIDNAPORE**

1173.## CHATTERJEE AUTOMOBILE (4960), INDUSTRIAL GROWTH AREA, KHASJANGAL (NEAR KERANICHOTI), MIDNAPORE-721101, DISTRICT-PACHIM MIDNAPORE, PH :721101-9434043558.

**NARENDRAPUR**

1174.## A.M. AUTOMOBILES (3175), KAMALGAZI, NARENDURPUR, KOLKATA-700 103, (WEST BENGAL), PH :700103-8335860051.

**PURULIA**

1175.## BANERJEE AUTO SERVICE (640), S.P.BANERJEE ANALBILA VILLA, RANCHI ROAD, PURULIA,(W.B), PH :723101-9434656942.

**RAGHUNATHGANJ**

1176.## AUTO WHEEL (4427), NH 34, UMARPUR, PO GHORSALA, DO MURSHIDABAD, WEST BENGAL, PIN 742235, PH :742235-9434101917.

**RUPNARAYANPUR**

1177.## L K MOTORS PVT LTD. (3477), NH 2 BYPASS, POINT (CHOWRANGI), RUPNARAYANPUR (CHALBALPUR), BURDWAN-713 343, PH :713343-9091392314.

**SILIGURI**

1178.## BHAWANI MOTOR GARAGE (4844), BIDYASAGAR PALLY, NEAR RISHI BHAWAN, BURDWAN ROAD, SILIGURI-734405, WEST BENGAL, PH :734405-9641162127.

1179.## MUM AUTO WORKS (4835), NEAR DELHI PUBLIC SCHOOL, PANCHANAI (DAGAPUR), SILIGURI, WEST BENGAL-734003, PH :734003-9632068537.

**SODEPUR**

1180.\*\* CAR CARE (8929), B.T. ROAD, SODEPUR, P.O.: SUKCHAR, 24 PARGANAS (NORTH), PH :700115-9674907411.

**SRIRAMPUR**

1181.\* MARUTI AUTO CENTRE (2167), 85/18 G.T. ROAD (WEST), PO : MULLIKPARA, SRIRAMPUR, HOOGLY-712 203 (W.B.), PH :712203-9830191251.

**SURI**

1182.## PANCHANATH AUTOMOBILES (4456), BROJARGRAM BARABAGAN, BAKRESWAR PATHARCHAPURI HIGHWAY MORE, SURI, WEST BENGAL-731101, PH :731101-9732026250.

**ULUBERIA**

1183.## APSARA SERVICE STATION (3374), NEAR BANITABLA CHECKPOST, ON NH-6, ULUBERIA-711 316, (W.B.), PH :711316-7797484735.

\*\* A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

## C-Category Mass : Free & paid Service & Minor repairs

\* B-Category Mass : Free & paid Service & Major repairs

# D-Category Mass : Free Service & Minor repairs

**DELHI**

**DELHI**

1. MARUTI SALES & SERVICE(DELHI) (0810-08-01),  
C-119, INDUSTRIAL AREA PHASE-I, NARAINA,  
NEW DELHI - 110028  
PH :45541113.
2. J J IMPEX (DELHI) LTD(MARUTI SERVICE  
MASTERS) (0883-08-01), F-39,OKHLA  
INDUSTRIAL AREA,PHASE-II,NEW DELHI -  
110020  
PH :41612194, 40685500.

**TAMIL NADU**

**CHENNAI**

3. J J IMPEX (DELHI) LTD(MARUTI SERVICE  
MASTERS) (1485-14-01), # 9, (SP),THIRU-VI-KA  
INDUSTRIAL ESTATE, GUINDY, CHENNAI -  
600032  
PH :044-43563366, 43563367, 9176615000.

Maruti Service Zone (AS ON 30.05.2023 )

ARUNACHAL PRADESH

ITANAGAR

1. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111  
PH :7005337938.

ASSAM

BARPETA

2. ROY AUTO ENGINEERING WORKS (7Z81-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD , WARD NO.-4, ASSAM - 781315  
PH :9954069396.

DULIAJAN

3. B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602  
PH :9435719753.

BIHAR

PATNA

4. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA, PATNA - 800013  
PH :9334117070/8210810240.

DELHI

DELHI

5. GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, - 110018  
PH :43276666.
6. A M AUTOMOBILES ( A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, LAWRANCE ROAD,,DELHI - 110035  
PH :48280000.

HARYANA

BALLABGARH

7. ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004  
PH :4271800; 9899232536;9212142536.

MURTHAL

8. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIIDC, MURTHAL - 131027  
PH :9215182230.

PANCHKULA

9. CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2. PANCHKULA - 134113  
PH :9914115427.

PANIPAT

10. VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103  
PH :9896118618.

SAHA

11. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-AMBALA - 133104  
PH :9896666402.

YAMUNANAGAR

12. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001  
PH :8950000069.

HIMACHAL PRADESH

JASSUR

13. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPIUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201  
PH :9882217575 , 9459500613.

JAMMU AND KASHMIR

SRINAGAR

14. RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR - 2441384  
PH :9906631702.

JHARKHAND

RANCHI

15. PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA, RANCHI. - 834001  
PH :2544661, 2542650.

KERALA

COCHIN

16. AUTOTEAM SALES & SERVICES PVT LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 682024  
PH :9025730007.

PATHANAMTHITTA

17. AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA - 689640  
PH :9288117477.

MADHYA PRADESH

NEEMUCH

18. AUTO SCAN (3T81-3T-01), MHOW ROAD, NEEMUCH, MADHYAPRADESH, - 458441  
PH :9425106588.

MAHARASHTRA

PUNE

19. MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD, OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017  
PH :9689901459.

THANE

20. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE - 400007  
PH :9833947772, 9833947778.

ODISHA

KEONJHAR

21. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001  
PH :9437075366.

PUNJAB

BATALA

22. CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505  
PH :9876024243 , 9876024254.

MOGA

23. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI - G.T. ROAD, MOGA - 142001  
PH :06136-226807.

RAJASTHAN

JAIPUR

24. KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A : NARAYANPURI,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034  
PH :7427059388.

TELANGANA

HYDERABAD

25. RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068  
PH :9848062263.

UTTAR PRADESH

ALIGARH

26. VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001  
PH :9917473052, 9582123586.

GHAZIABAD

27. KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR,HAPUR ROAD,GHAZIABAD - 201002  
PH :0120-4538200, 9717629599, 9810523345.
28. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD - 201102  
PH :9582945510, 9999107841.

LUCKNOW

29. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW - 226003  
PH :2473369.

MEERUT

30. UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, - 250001  
PH :9837072642.

NOIDA

31. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8 & 9,SECTOR-8,NOIDA - 201301  
PH :08826172222 & 09971689689.
32. MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA, - 201301  
PH :09958732222 & 09910282222.
33. JKM MOTORS (A184-A1-01), A-25,SECTOR 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301  
PH :0120-4052400, 9899424000.
34. FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301  
PH :45811111; 4581131/9650631111.

SAHIBABAD

35. FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010  
PH :9560868111.

UNNAO

36. VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801  
PH :2830610,2831248.

VARANASI


37. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002  
PH :25100469, 9415203641.

WEST BENGAL


KOLKATA



38. MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027  
PH :24568326, 24486568, 24568325.







---






[illegible]




---




[illegible]





---







---






---






---











---





[illegible]




## This image shows a blank sheet of white paper with ten horizontal dashed lines, typical of primary-ruled notebook paper. The lines are evenly spaced and extend across the width of the page. There is no handwriting or other markings on the paper.









[illegible]



## This image shows a full page of white paper with horizontal dashed lines, typical of primary school handwriting practice paper. The lines are evenly spaced and run across the entire width of the page. There are no margins, text, or other markings present.



## BATTERY LABEL SYMBOL MEANINGS

	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

Prepared by  
**MARUTI SUZUKI INDIA LIMITED**

Service Division  
October, 2023

Part No. 99011M72R82-74E  
Printed in India

**For round-the-clock on-road assistance,  
call Maruti On-road Service at 1800 102 1800<sup>#</sup> / 1800 1800 180<sup>#</sup>**

***# No STD code to be prefixed.***

 **MARUTI SUZUKI**  
GENUINE ACCESSORIES

 **MARUTI SUZUKI**  
GENUINE PARTS

 **MARUTI SUZUKI**  
COST PROTECT

 **MARUTI SUZUKI**  
HELPLINE

 **MARUTI SUZUKI**  
ROAD SERVICE

SERVICE DIVISION

**MARUTI SUZUKI INDIA LIMITED**

Palam-Gurgaon Road, Gurgaon – 122 015 (Haryana), India

Visit us at: [www.marutisuzuki.com](http://www.marutisuzuki.com)



99011M72R82-74E

CODE 01/10/2023/1000